

**EQUIPMENT TEST LIST  
INTEROFFICE TRUNKS  
OFFICES WITH MASTER TEST FRAME  
NO. 5 CROSSBAR SYSTEMS**

CONTENTS	PAGE
1. GENERAL . . . . .	1
7.1 CAMA INCOMING . . . . .	2
7.2 NON-CAMA INC FROM 101 ESS SD1H077-01 . . . . .	2
7.3 NON-CENTREX INCOMING . . . . .	2
7.4 OUTGOING . . . . .	3
7.5 OG TO TSP, TSPS . . . . .	3
7.6 OUTGOING TO ONAL (SD-27712-01) . . . . .	3
7.7 COMB OUTGOING . . . . .	4
7.8 OG DIALXOIN ZN . . . . .	4

of contents. Test classification and frequency of periodic routine are also provided.

1.02 This Equipment Test List (ETL) is reissued to incorporate changes which are indicated by an arrow to the left of each line which has been changed.

1.03 Comments on this section should be made by following the instructions in Bell System Practices (BSP), Section 000-010-015.

1.04 Routine test information is arranged in the following order from left to right: Section number, issue/addendum, test letter or paragraph number, test title, test class, frequency, and the last space is for a locally assigned job number.

1.05 Section 010-300-011 provides Equipment Test List instructions.

**1. GENERAL**

1.01 This section provides an index and information access system to locate the standard tests applicable to equipment listed in the preceding table

**NOTICE**

Not for use or disclosure outside the  
Bell System except under written agreement

## 7.0 INTEROFFICE TRNK

## 7.1 INTEROFFICE TRNK; CAMA INCOMING

## TROUBLE TESTS

## MANUAL TESTS

218-184-501 (4/0)	A	TRUNK SEIZURE	TT	-----
	B	SUPERVISION-ORIG AND TERM. ENDS DISC.	TT	-----
	C	SUPERVISION--TERMINATING END DISCONNECT	TT	-----
	D	NONCHARGE SUPERVISION	TT	-----
	E	CANCEL DISCONNECT ENTRY	TT	-----
	F	OVERFLOW	TT	-----
	G	CALL TO BUSY LINE	TT	-----
	H	RINGING--LOCAL COMPLETION	TT	-----
	I	PRETRIP AND TRIP--LOCAL COMPLETION	TT	-----
	J	CALL TO FREE LINE-LOCAL COMPLETION	TT	-----
	K	MAKE-BUSY AND WINK-OFF	TT	-----

## AUTOMATIC TESTS WITH APPT

218-262-501 (11/0)	B	SUPERVISION--ORIG AND TERM ENDS DISC.	TT	-----
	C	NONCHARGE SUPERVISION	TT	-----
	E	CALL TO FREE LINE--LOCAL COMP	TT	-----
	H	CANCEL DISCONNECT ENTRY	TT	-----

## 7.2 INTEROFFICE TRNK; NON-CAMA INC FROM 101 ESS SD1H077-01

## TROUBLE TESTS

218-260-501 (2/0)		ALL NO. 101 ESS TRK CKT TESTS USING MTF	TT	-----
-------------------	--	-----------------------------------------	----	-------

## 7.3 INTEROFFICE TRNK; NON-CENTREX INCOMING

## TROUBLE TESTS

## INC TRK CKTS--NONCTX-TESTS USING MTF, AUTO START OF RINGING

218-251-501 (11/1)	A	TRUNK SEIZURE	TT	-----
	B	RINGING-LOCAL COMPLETION	TT	-----
	C	PRETRIP AND TRIP--LOCAL COMPLETION	TT	-----
	D	SUPERVISION-ORIG AND TERM. ENDS DISC.	TT	-----
	E	SUPERVISION--TERMINATING END DISCONNECT	TT	-----
	F	SUPERVISION--ORIG END DISC.--LOC COMP	TT	-----
	G	LINE BUSY--LOCAL COMPLETION	TT	-----
	H	OVERFLOW--LOCAL COMPLETION	TT	-----
	I	OVERFLOW--BYLINK PATH FAILURE	TT	-----
	J	FREE CALL-LOCAL COMPLETION	TT	-----

## INCOMING TRUNKS--CONTROLLED RINGING NON CTX TESTS USING MTF

218-251-501 (11/1)	K	CALL TO RINGING TEST LINE	TT	-----
	L	RINGING	TT	-----
	M	RERING	TT	-----
	N	COIN CONTROL	TT	-----

◆	218-251-501	(11/1)	O	OVERFLOW	TT	-----
◆			P	CALL TO BUSY LINE	TT	-----
◆			Q	CALL TO BUSY LINE--NO TEST	TT	-----
◆	7.4 INTEROFFICE TRNK; OUTGOING					
◆	TROUBLE TESTS					
◆	MANUAL TESTS					
◆	218-271-501	(11/0)	B	SUPERVISION-ORIG END DISC.-AMA, COIN, OR MR OPR	TT	-----
◆			D	NONCHARGE SUPERVISION	TT	-----
◆			H	CANCEL DISC. ENTRY-AMA OPERATION (ETS, CDT OR LAMA-C NOT PROVIDED)	TT	-----
◆			M	CALL TO TEST LINE	TT	-----
◆	AUTOMATIC TESTS WITH APTT					
◆	218-262-501	(11/0)	B	SUPERVISION--ORIG END DISC.	TT	-----
◆			H	CANCEL DISC ENTRY-AMA OPRN	TT	-----
	218-271-501	(11/0)	A	SEIZURE	TT	-----
			C	SUPERVISION--TERMINATING END DISCONNECT	TT	-----
			E	INIT AND OT CHGS--CN OR MR OPR WITH TIMING (LAMA-C NOT PROVIDED)	TT	-----
			F	TIMED RLS AFTER CC BUT BEFORE OT MON (LAMA-C OR CDT NOT PROVIDED)	TT	-----
			G	RET OF DEP--DISC. BEFORE OT MON (LAMA-C OR CDT NOT PROVIDED)	TT	-----
			I	OVERFLOW	TT	-----
			J	SEIZURE--TANDEM OPERATION	TT	-----
			K	OVERFLOW--TANDEM OPERATION	TT	-----
			L	CALL TO BUSY LINE AND OVERFLOW TEST NUMBER	TT	-----
			N	CIRCUIT BUSY	TT	-----
			O	FALSE-BUSY AND FALSE-IDLE CONDITIONS (NOT REQUIRED FOR ETS)	TT	-----
			Q	ETS VERIFICATION TEST	TT	-----
◆	7.5 INTEROFFICE TRNK; OG TO TSP, TSPS					
◆	TROUBLE TESTS					
◆	MANUAL TESTS					
◆	218-289-501	(8/0)	B	SUPERVISION-ORIGINATING END DISCONNECTS	TT	-----
◆	AUTOMATIC TESTS WITH APTT					
◆	218-262-501	(11/0)	O	SUPERVISION--ORIG END DISC.	TT	-----
◆	7.6 INTEROFFICE TRNK; OUTGOING TO ONAL (SD-27712-01)					
◆	TROUBLE TESTS					
◆	MANUAL TESTS					
◆	218-271-504	(4/0)	A	TRUNK SEIZURE AND RELEASE	TT	-----
◆			B	SUPERVISION-ORIGINATING END DISCONNECT	TT	-----
◆			C	SUPERVISION-TERMINATING END DISCONNECT	TT	-----
◆			D	CANCEL DISCONNECT ENTRY (ETS OR LAMA-C NOT PROVIDED)	TT	-----

◆	218-271-504 (4/0)	E	NONCHARGE SUPERVISION	TT	-----
◆		F	REORDER	TT	-----
◆		G	TRUNK SEIZURE AND RELEASE	TT	-----
◆		H	CROSS OFFICE LOCKOUT	TT	-----
◆		I	CALL TO DISTANT OFFICE TEST LINE	TT	-----
◆		J	REORDER	TT	-----
◆		K	TRUNK BUSY FROM MTF	TT	-----
◆		L	TRUNK BUSY FROM 17E TESTBOARD	TT	-----
◆		M	UNIVERSAL PAD CONTROL	TT	-----
◆		N	FALSE-BUSY & FALSE-IDLE CONDITIONS	TT	-----
◆	AUTOMATIC TESTS WITH APTT				
◆	218-262-501 (11/0)	A	NONCHARGE SUPERVISION	TT	-----
◆		B	SUPERVISION--TERMG END DISC.	TT	-----
◆		C	SUPERVISION--ORIG END DISC.	TT	-----
◆		H	CANCEL DISC. ENTRY	TT	-----
◆	7.7 INTEROFFICE TRNK; COMB OUTGOING				
◆	TROUBLE TESTS				
◆	MANUAL TESTS				
◆	218-270-501 (4/0)	A	TRUNK SEIZURE AND RELEASE	TT	-----
◆		B	SUPERVISION-ORIG END DISC.-TRK ARR FOR AMA	TT	-----
◆		C	SUPERVISION--TERMINATING END DISCONNECT	TT	-----
◆		D	NONCHARGE SUPERVISION	TT	-----
◆		E	CANCEL DISC. ENTRY-TRK ARR FOR AMA (ETS, CDT OR LAMA-C NOT PROVIDED)	TT	-----
◆		F	OVERFLOW	TT	-----
◆		G	CALL TO BUSY LINE	TT	-----
◆		H	CALL TO TEST LINE	TT	-----
◆		J	TRUNK SEIZURE AND RELEASE	TT	-----
◆		K	OVERFLOW	TT	-----
◆		L	TRUNK SEIZURE, TOLL SUPERVISION, AND RELEASE	TT	-----
◆		M	OVERFLOW	TT	-----
◆		N	CALL TO BUSY LINE	TT	-----
◆		O	CALL TO TEST LINE	TT	-----
◆		P	TRUNK BUSY	TT	-----
◆		Q	FALSE-BUSY AND FALSE-IDLE CONDITIONS (ETS NOT PROVIDED)	TT	-----
◆	AUTOMATIC TESTS WITH APTT				
◆	218-262-501 (11/0)	A	CALL TO TEST LINE	TT	-----
◆		B	SUPERVISION--ORIG END DISC.	TT	-----
◆		C	NONCHARGE SUPERVISION	TT	-----
◆		H	CANCEL DISC. ENTRY	TT	-----
◆	7.8 INTEROFFICE TRNK; OG DIALXOIN ZN				

◆ TROUBLE TESTS

218-291-501 (3/0)

◆	A	SEIZURE	TT	-----
◆	B	SUPERVISION-ORIGINATING END DISCONNECT	TT	-----
◆	C	SUPERVISION-TERMINATING END DISCONNECT	TT	-----
◆	D	NONCHARGE SUPERVISION	TT	-----
◆	E	INITIAL AND OVERTIME CHARGES	TT	-----
◆	F	RET OF OT DEPOSIT-DISC. BEFORE OT MONITORING	TT	-----
	G	OVERFLOW	TT	-----
	H	CALL TO A BUSY LINE	TT	-----
◆	I	CALL TO TEST LINE	TT	-----
	J	CIRCUIT BUSY	TT	-----
	K	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----

