

EQUIPMENT TEST LIST
1-WAY TOLL TRUNKS
OFFICES WITH MASTER TEST FRAME
NO. 5 CROSSBAR SYSTEMS

	CONTENTS	PAGE
1. GENERAL	1
8.1 INC INTERTOLL	2
8.2 INC INTERTOLL	2
8.3 OG INTERTAOLL	2
8.4 ONA OG INTERTOLL	3
8.5 OG INTERTOLL	4
8.6 AUX OUTGOING	4
8.7 TOLL SWITCHING	5
8.8 INTERTOLL COMPLN	5

of contents. Test classification and frequency of periodic routine are also provided.

1.02 This Equipment Test List (ETL) is reissued to incorporate changes which are indicated by an arrow to the left of each line which has been changed.

1.03 Comments on this section should be made by following the instructions in Bell System Practices (BSP), Section 000-010-015.

1.04 Routine test information is arranged in the following order from left to right: Section number, issue/addendum, test letter or paragraph number, test title, test class, frequency, and the last space is for a locally assigned job number.

1.05 Section 010-300-011 provides Equipment Test List instructions.

1. GENERAL

1.01 This section provides an index and information access system to locate the standard tests applicable to equipment listed in the preceding table

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

8.0 1-WAY TOLL TRNKS

8.1 1-WAY TOLL TRNKS; INC INTERTOLL

TROUBLE TESTS

218-262-501	(11/0)	A	PRETRIP AND TRIP	TT	-----
218-274-501	(2/0)	A	TRK SEIZURE AND RLS-TERMINATING CALL	TT	-----
		B	RINGING SELECTION SWITCH	TT	-----
		C	PRETRIP AND TRIP	TT	-----
		D	LINE BUSY-TERMINATING CALL	TT	-----
		E	OVERFLOW BUSY-TERMINATING CALL	TT	-----
		F	TRK SEIZURE AND RLS-THROUGH CALL	TT	-----
		G	OVERFLOW-THROUGH CALL	TT	-----
		H	TIMEOUT	TT	-----
		I	PRELIMINARY RING	TT	-----

8.2 1-WAY TOLL TRNKS; INC INTERTOLL

TROUBLE TESTS

218-252-501	(5/0)	A	TRK SEIZURE, RLS, & PAD CONT--E&M SIG	TT	-----
		A.1	TRK SEIZURE, RLS--REV BAT. SIG	TT	-----
		B	RNG SEL SW--E&M SIG	TT	-----
		B.1	RNG SEL SW--REV BAT. SIG	TT	-----
		C	PRETRIP & TRP -- E&M SIG	TT	-----
		C.1	PRETRIP & TRP -- REV BAT. SIG	TT	-----
		D	LINE BUSY -- E&M SIG	TT	-----
		D.1	LINE BUSY -- REV BAT. SIG	TT	-----
		E	OVERFLOW -- E&M SIG	TT	-----
		E.1	OVERFLOW -- REV BAT. SIG	TT	-----
		F	TRUNK SEIZURE, RLS, & PAD CONT-THRU CALL	TT	-----
		F.1	TRUNK SEIZURE, RLS&PAD CONTROL-TRK ARRGD FOR REV BAT. SIGNALING	TT	-----

THROUGH-SWITCH

218-252-501	(5/0)	G	OVERFLOW -- E&M SIG	TT	-----
		G.1	OVERFLOW -- REV BAT. SIG	TT	-----
		H	SLEEVE BSY IND TO TOLL SWBD--DISTANT	TT	-----
		I	SLEEVE BSY IND TO TOLL SWBD-LOCAL	TT	-----
		J	TIME-OUT -- E&M SIG	TT	-----
		J.1	TIME-OUT -- REV BAT. SIG	TT	-----
		K	BUSY LINE VERIFICATION-SD-26152-01	TT	-----
		L	BUSY LINE VERIFICATION-SD-26173-01	TT	-----

8.3 1-WAY TOLL TRNKS; OG INTERTAOLL

TROUBLE TESTS

MANUAL TESTS

218-272-501	(4/0)	B	SUPV-ORIG END DISC.-AMA OR MSG TMG OPR	TT	-----
-------------	-------	---	--	----	-------

▶	218-272-501 (4/0)	B	SUPV-ORIG END DISC.-AMA OR MSG TMG OPR	TT	-----
▶		D	CANCEL DISCONNECT ENTRY-AMA (ETS, CDT OR LAMA-C NOT PROVIDED)	TT	-----
▶		I	CALL TO TEST LINE	TT	-----
▶	AUTOMATIC TESTS WITH APTT				
▶	218-262-501 (11/0)	A	CALL TO TEST LINE	TT	-----
▶		B	SUPERVISION-ORIG END DISC.	TT	-----
▶		B	SUPERVISION-ORIG END DISC.	TT	-----
▶		H	CANCEL DISC. ENTRY	TT	-----
▶	218-272-501 (4/0)	A	SEIZURE	TT	-----
		C	SUPERVISION-TERMINATING END DISCONNECT	TT	-----
		E	OVERFLOW	TT	-----
		F	SEIZURE-TANDEM OPERATION	TT	-----
		G	OVERFLOW-TANDEM OPERATION	TT	-----
		J	CALL TO SWITCHBOARD	TT	-----
		K	CIRCUIT BUSY	TT	-----
		L	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----
▶	8.4 1-WAY TOLL TRNKS; ONA OG INTERTOLL				
▶	TROUBLE TESTS				
▶	MANUAL TESTS				
▶	218-277-506 (3/0)	A	TRUNK SEIZURE AND DISCONNECT	TT	-----
▶		B	AMA FEATURES (ETS, CDT OR LAMA-C NOT PROVIDED)	TT	-----
▶		C	TRUNK MESSAGE TIMING (ETS, CDT OR LAMA-C NOT PROVIDED)	TT	-----
▶		D	TRUNK REORDER	TT	-----
▶		E	CALL TO DISTANT OFFICE	TT	-----
▶		F	TRUNK SEIZURE AND DISCONNECT	TT	-----
▶		G	AMA FEATURES (ETS, CDT OR LAMA-C NOT PROVIDED)	TT	-----
▶		H	TRUNK MESSAGE TIMING (ETS, CDT OR LAMA-C NOT PROVIDED)	TT	-----
▶		I	TRUNK REORDER	TT	-----
▶		J	CALL TO DISTANT OFFICE	TT	-----
		K	TRUNK-BUSY	TT	-----
		L	TONE AND TRANSMISSION SUPPRESSION	TT	-----
		M	PAD CONTROL	TT	-----
		N	CROSS-OFFICE LOCKOUT	TT	-----
		O	OUT OF SERVICE	TT	-----
		P	FALSE-IDLE & FALSE BUSY CONDITIONS (ETS NOT PROVIDED)	TT	-----
▶	AUTOMATIC TESTS WITH APTT				
▶	218-262-501 (11/0)	A	CALL TO DISTANT OFFICE	TT	-----
▶		C,F	TRUNK SEIZURE AND DISC.	TT	-----

♦	218-262-501 (11/0)	BCH	AMA FEATURES	TT	-----
♦	8.5 1-WAY TOLL TRNKS; OG INTERTOLL				
♦	TROUBLE TESTS				
♦	MANUAL TESTS				
♦	218-268-501 (9/1)	A	TRUNK SEIZURE AND RELEASE	TT	-----
♦		B	TRUNK OVERFLOW	TT	-----
♦		C	TRUNK BUSY	TT	-----
♦		D	CALL TO DISTANT OFFICE	TT	-----
♦		E	PAD CONTROL	TT	-----
♦		F	TIMED RELEASE	TT	-----
♦		G	BUSY IND TO TOLL SWDB--TESTING AT RR FR	TT	-----
♦		H	BUSY IND TO TOLL SWDB--TESTING AT TOLL SWDB	TT	-----
♦		I	CHG & NONCHG SUPV-AUX TRK CKT-CUST ACC	TT	-----
♦		J	CANCEL DISC. ENTRY-AUX TRK ARR FOR AMA (ETS OR LAMA-C NOT PROVIDED)	TT	-----
♦		K	TRK MB & SPLT--REMOTE TEST FROM TLG TST BD	TT	-----
♦	AUTOMATIC TESTS WITH APTT				
♦	218-262-501 (11/0)	A	CALL TO DISTANT OFFICE	TT	-----
♦		B,C	CHARGE AND NONCHARGE SUPV	TT	-----
♦		H	CANCEL DISC. ENTRY	TT	-----
♦	8.6 1-WAY TOLL TRNKS; AUX OUTGOING				
♦	TROUBLE TESTS				
♦	MANUAL TESTS				
♦	218-266-501 (3/0)	A	TRUNK SEIZURE AND RELEASE	TT	-----
♦		B	CALL TO OPERATOR IN DISTANT OFFICE	TT	-----
♦		C	TRUNK BUSY	TT	-----
♦		D	BUSY INDICATION FROM TOLL SWITCHBOARD	TT	-----
♦		E	BUSY INDICATION TO TOLL SWITCHBOARD	TT	-----
♦		F	PAD ARRANGEMENT	TT	-----
♦		G	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----
♦	218-267-501 (8/0)	A	TRUNK SEIZURE AND RELEASE	TT	-----
♦		B	CALL TO TEST LINE IN DISTANT OFFICE	TT	-----
♦		C	CALL TO OPERATOR IN DISTANT OFFICE	TT	-----
♦		D	OVERFLOW	TT	-----
♦		E	TRUNK BUSY	TT	-----
♦		G	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----
♦		H	TIMED RELEASE FEATURE--AUX OGT	TT	-----
♦		I	BUSY INDICATION FROM TOLL SWITCHBOARD	TT	-----
♦		J	BUSY INDICATION TO TOLL SWITCHBOARD	TT	-----
♦	AUTOMATIC TESTS WITH APTT				
♦	218-262-501 (11/0)	A	CALL TO TEST LINE IN DISTANT OFFICE	TT	-----

▶ 8.7 1-WAY TOLL TRNKS; TOLL SWITCHING

▶ TROUBLE TESTS

▶ MANUAL TESTS

▶	218-254-501 (6/0)	A	CALL TO INCOMING TRUNK TEST LINE	TT	-----
▶		B	RINGING	TT	-----
		C	RERING--TRUNKS ARR FOR CONT START OF RING	TT	-----
		D	COIN CONTROL	TT	-----
		E	CALL TO BUSY LINE	TT	-----
▶		F	CALL TO DISTANT OFFICE	TT	-----
		G	OVERFLOW	TT	-----
		H	TRUNK IDLE OR TRUNK BUSY LAMP INDICATIONS	TT	-----
		I	TRUNK GROUP BUSY	TT	-----
		J	SLEEVE BUSY INDICATION AT SWITCHBOARD	TT	-----
		K	TRUNK BUSY INDICATION DURING TRUNK RELEASE	TT	-----
		L	REORDER	TT	-----
		M	RERING	TT	-----
▶	218-267-501 (8/0)	B	CALL TO TEST LINE IN DISTANT OFFICE	TT	-----

▶ AUTOMATIC TESTS WITH APTT

▶	218-262-501 (11/0)	A	CALL TO TEST LINE IN DISTANT OFFICE	TT	-----
	218-267-501 (8/0)	A	TRUNK SEIZURE AND RELEASE	TT	-----
		C	CALL TO OPERATOR IN DISTANT OFFICE	TT	-----
		D	OVERFLOW	TT	-----
		E	TRUNK BUSY	TT	-----
		G	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----
		H	TIMED RELEASE FEATURE--AUX OGT	TT	-----
		I	BUSY INDICATION FROM TOLL SWITCHBOARD	TT	-----
		J	BUSY INDICATION TO TOLL SWITCHBOARD	TT	-----

8.8 1-WAY TOLL TRNKS; INTERTOLL COMPLN

TROUBLE TESTS

	218-269-501 (4/0)	A	CALL TO TOLL TB OR TOLL SWBD	TT	-----
		B	TRUNK BUSY	TT	-----
		C	BSY IND--APP AT SWBD OR TB IN SAME BLDG	TT	-----
		D	PAD CONTROL	TT	-----
		E	FALSE-BUSY AND FALSE-IDLE CONDITIONS (ETS NOT PROVIDED)	TT	-----

