

**EQUIPMENT TEST LIST**  
**MISCELLANEOUS TRUNKS**  
**OFFICES WITH OFFICE TEST FRAME**  
**NO. 5 CROSSBAR SYSTEMS**

CONTENTS	PAGE	1. GENERAL
1. GENERAL . . . . .	1	1.01 This section provides an index and information access system to locate the standard tests applicable to equipment listed in the preceding table of contents. Test classification and frequency of periodic routine are also provided.
10.1 OG ANNOUNCEMENT . . . . .	2	
10.2 COMMON OVERFLOW . . . . .	2	1.02 This Equipment Test List (ETL) is reissued to incorporate changes which are indicated by an arrow to the left of each line which has been changed.
10.3 TONE . . . . .	2	
10.4 FREE . . . . .	3	1.03 Comments on this section should be made by following the instructions in Bell System Practices (BSP), Section 000-010-015.
10.5 PERM SIG HOLDING . . . . .	3	
10.6 INTERCEPTING FROM LLF . . . . .	3	1.04 Routine test information is arranged in the following order from left to right: Section number, issue/addendum, test letter or paragraph number, test title, test class, frequency, and the last space is for a locally assigned job number.
10.7 REPAIR SERVICE FROM TLF/LLF . . . . .	4	
10.8 INFORMATION SRV NOT SD-28080-01 . . . . .	5	1.05 Section 010-300-011 provides Equipment Test List instructions.
10.9 OFFICIAL PBX FROM TLF/LLF . . . . .	5	
10.10 VERIFICATION REQ . . . . .	6	
10.11 TRKS TO LTD . . . . .	6	
10.12 AUX OGT TRK SD-26084-01 . . . . .	7	
10.13 2-WAY OPR OFF. . . . .	7	
10.14 INC TRK MR TST . . . . .	7	
10.15 INFO SRV USING SD-28080-01 (J-FR) . . . . .	7	

**NOTICE**

Not for use or disclosure outside the  
Bell System except under written agreement

## 10.0 MISCELLANY TRNKS

## 10.1 MISCELLANY TRNKS; OG ANNOUNCEMENT

## TROUBLE TESTS

## J-FRAME

218-563-501 (2/0)	A	TRUNK SEIZURE AND RELEASE-FLAT RATE	TT	-----
	B	TRUNK SEIZURE AND RELEASE-COIN TRKS	TT	-----
	C	TRUNK SEIZURE AND RELEASE-AMA TRKS	TT	-----
	D	TRUNK SEIZURE AND RELEASE-MR TRKS	TT	-----
	E	CANCEL DISCONNECT ENTRY-AMA TRKS	TT	-----
	F	TRUNK BUSY	TT	-----
	G	TRUNK SEIZURE AND RELEASE--TANDEM OPERATION	TT	-----
	H	TRUNK GUARD TEST--NONTANDEM OPERATION	TT	-----
	I	TRUNK GUARD TEST--TANDEM OPERATION	TT	-----
	J	TIMED RELEASE	TT	-----

## H-FRAME

218-564-501 (1/0)	A	TRUNK SEIZURE AND RELEASE-FLAT RATE	TT	-----
	B	TRUNK SEIZURE AND RELEASE-COIN TRKS	TT	-----
	C	TRUNK SEIZURE AND RELEASE-AMA TRKS	TT	-----
	D	TRUNK SEIZURE AND RELEASE-MR TRKS	TT	-----
	E	CANCEL DISCONNECT ENTRY-AMA TRKS	TT	-----
	F	TRUNK BUSY	TT	-----
	G	TRUNK SEIZURE AND RELEASE--TANDEM OPERATION	TT	-----
	H	TRUNK GUARD TEST--NONTANDEM OPERATION	TT	-----
	I	TRUNK GUARD TEST--TANDEM OPERATION	TT	-----
	J	TIMED RELEASE	TT	-----

## 10.2 MISCELLANY TRNKS; COMMON OVERFLOW

## TROUBLE TESTS

## J-FRAME

218-568-501 (5/0)	A	SEIZURE-OVERFLOW TONE	TT	-----
	B	PERMANENT SIGNAL TONE	TT	-----
	C	TRUNK BUSY	TT	-----
	M	FALSE-BUSY FALSE-IDLE CONDITIONS	TT	-----

## H-FRAME

218-567-501 (2/1)	A	SEIZURE OVERTONE TONE	TT	-----
	B	PERMANENT SIGNAL TONE	TT	-----
	C	TRUNK BUSY	TT	-----
	M	FALSE-BUSY FALSE-IDLE CONDITIONS	TT	-----

## 10.3 MISCELLANY TRNKS; TONE

## TROUBLE TESTS

## J-FRAME

218-568-501 (5/0)	D	SEIZURE	TT	-----
-------------------	---	---------	----	-------

◆	218-568-501 (5/0)	E	ALL-PATHS-BUSY (OVERFLOW) TONE	TT	-----
◆		F	NO-SUCH-NUMBER TONE	TT	-----
		G	TRUNK BUSY	TT	-----
		M	FALSE-BUSY FALSE-IDLE CONDITIONS	TT	-----
◆	H-FRAME				
◆	218-567-501 (2/1)	D	SEIZURE	TT	-----
◆		E	ALL-PATHS-BUSY (OVERFLOW) TONE	TT	-----
◆		F	NO SUCH NUMBER TONE	TT	-----
		G	TRUNK BUSY	TT	-----
		M	FALSE-BUSY FALSE-IDLE CONDITIONS	TT	-----
◆	10.4 MISCELLANY TRNKS; FREE				
◆	TROUBLE TESTS				
◆	J-FRAME				
◆	218-588-501 (4/0)	A	TRUNK SEIZURE AND RELEASE	TT	-----
◆		B	OPERATOR HOLD TEST	TT	-----
◆		C	TRUNK BUSY TEST	TT	-----
◆		D	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----
◆		E	TRK SEIZURE RNG & SUPV-SOG	TT	-----
◆		F	FORCED RELEASE-TANDEM CALL	TT	-----
◆		G	ABANDONED TANDEM CALL	TT	-----
◆	H-FRAME				
◆	218-585-501 (1/0)	A	SEIZURE AND RELEASE TEST	TT	-----
		B	OPERATOR HOLD TEST	TT	-----
		C	TRUNK BUSY	TT	-----
◆	10.5 MISCELLANY TRNKS; PERM SIG HOLDING				
◆	TROUBLE TESTS				
◆	J-FRAME				
◆	218-589-501 (4/0)	A	SEIZE, MONITOR, AND MANUAL RLS FEAT.-PST KEY	TT	-----
◆		B	LINE SIGNAL AND COIN CONTROL	TT	-----
◆		C	TIMING AND ALARM INDICATIONS	TT	-----
◆		D	TRUNK BUSY	TT	-----
◆		E	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----
◆	H-FRAME				
◆	218-586-501 (2/0)	A	SEIZURE AND MANUAL RELEASE-PST KEY	TT	-----
		B	LINE SIGNAL AND COIN CONTROL	TT	-----
		C	TIMING AND ALARM INDICATIONS	TT	-----
		D	TRUNK BUSY	TT	-----
◆	10.6 MISCELLANY TRUNKS; INTERCEPTING FROM LLF				
◆	TROUBLE TESTS				
◆	J-FRAME				
◆	218-583-503 (2/0)	A	TRUNK SEIZURE AND RINGING	TT	-----

218-583-503	(2/0)	B	BUSY INDICATION-OPERATOR FAILS TO DISCONNECT	TT	-----
		C	BUSY INDICATION-TRUNK SEIZED AT LL FRAME	TT	-----
		C.1	INTERCEPT TRUNKS, SEIZURE, COMPLETION TO ACD OFFICE	TT	-----
		D	TRUNK SEIZURE AND RINGING	TT	-----
		E	BUSY INDICATION-OPERATOR FAILS TO DISCONNECT	TT	-----
		F	BUSY INDICATION-TRUNK SEIZED AT LL FRAME	TT	-----
		G	BUSY INDICATION-MAKE BUSY SWITCH OPERATED	TT	-----
H-FRAME					
218-583-501	(2/1)	A	TRUNK SEIZURE AND RINGING	TT	-----
		B	BUSY INDICATIONS--OPERATOR FAILS TO DISCONNECT	TT	-----
		C	BUSY INDICATIONS--TRK SEIZED AT LL FRAME	TT	-----
		D	TRUNK SEIZURE AND RINGING	TT	-----
		E	BUSY IND--OPR FAILS TO DISCONNECT	TT	-----
		F	BUSY IND--TRK SEIZED AT LL FRAME	TT	-----
		H	BUSY IND--OPR FAILS TO DISCONNECT	TT	-----
		I	BUSY INDICATIONS--JCTR SEIZED AT LL FRAME	TT	-----
		J	TRUNK OR JCTR BUSY IND--MB SW OPR	TT	-----
10.7 MISCELLANY TRNKS; REPAIR SERVICE FROM TLF/LLF					
TROUBLE TESTS					
J-FRAME					
218-568-501	(5/0)	H	OPERATION	TT	-----
		I	TRUNK BUSY	TT	-----
		L	TRUNK TRANSFER	TT	-----
		M	FALSE-BUSY FALSE-IDLE CONDITIONS	TT	-----
218-583-501	(2/1)	B	BUSY-INDICATION OPERATOR FAILS TO DISCONNECT	TT	-----
		C	BUSY INDICATON-TRUNK SEIZED AT LLF	TT	-----
		J	BUSY INDICATION-MB SWITCH OPERATED	TT	-----
218-583-503	(2/0)	A	TRUNK SEIZURE AND RINGING	TT	-----
		B	BUSY INDICATION--OPERATOR FAIL TO DISC.	TT	-----
		C	BUSY INDICATION--TRK SEIZED AT LLF	TT	-----
		D	TRUNK SEIZURE AND RINGING	TT	-----
		E	BUSY INDICATION--OPERATOR FAILS TO DISC.	TT	-----
		F	BUSY INDICATION--TRK SEIZED AT LLF	TT	-----
		G	BUSY INDICATION--MB SWITCH OPERATED	TT	-----
H-FRAME					
218-567-501	(2/1)	H	OPERATION	TT	-----
		I	TRUNK BUSY	TT	-----
		L	TRUNK TRANSFER	TT	-----
		M	FALSE-BUSY FALSE-IDLE CONDITIONS	TT	-----
218-583-501	(2/1)	A	TRUNK SEIZURE AND RINGING	TT	-----

218-583-501 (2/1) D TRUNK SEIZURE AND RINGING TT  
 E BUSY INDICATION-OPERATOR FAILS TO DISCONNECT TT  
 F BUSY INDICATION-TRUNK SEIZED AT LLF TT

10.8 MISCELLANY TRNKS; INFORMATION SRV NOT SD-28080-01

TROUBLE TESTS

J-FRAME

218-568-501 (5/0) H OPERATION TT  
 I TRUNK BUSY TT  
 L TRUNK TRANSFER TT  
 M FALSE-BUSY FALSE-IDLE CONDITIONS TT  
 218-583-503 (2/0) A TRUNK SEIZURE AND RINGING TT  
 B BUSY INDICATION-OPERATOR FAILS TO DISCONNECT TT  
 C BUSY INDICATION-TRUNK SEIZED AT LLF TT  
 D TRUNK SEIZURE AND RINGING TT  
 E BUSY INDICATION-OPERATOR FAILS TO DISCONNECT TT  
 F BUSY INDICATION-TRUNK SEIZED AT LLF TT  
 G BUSY INDICATION-MB SWITCH OPERATED TT

H-FRAME

218-567-501 (2/1) H OPERATION TT  
 I TRUNK BUSY TT  
 L TRUNK TRANSFER TT  
 M FALSE-BUSY FALSE-IDLE CONDITIONS TT  
 218-583-501 (2/1) A TRUNK SEIZURE AND RINGING TT  
 B BUSY-INDICATION OPERATOR FAILS TO DISCONNECT TT  
 D TRUNK SEIZURE & RINGING TT  
 E BUSY INDICATION-OPERATOR FAILS TO DISCONNECT TT  
 F BUSY INDICATION-TRUNK SEIZED AT LLF TT  
 J BUSY INDICATION-MB SWITCH OPERATED TT

10.9 MISCELLANY TRNKS; OFFICIAL PBX FROM TLF/LLF

TROUBLE TESTS

J-FRAME

218-568-501 (5/0) H OPERATION TT  
 I TRUNK BUSY TT  
 L TRUNK TRANSFER TT  
 M FALSE-BUSY FALSE-IDLE CONDITIONS TT  
 218-583-503 (2/0) A TRUNK SEIZURE AND RINGING TT  
 B BUSY INDICATION-OPERATION FAILS TO DISCONNECT TT  
 C BUSY INDICATION-TRUNK SEIZED AT LLF TT  
 D TRUNK SEIZURE AND RINGING TT  
 E BUSY INDICATION-OPERATOR FAILS TO DISCONNECT TT  
 F BUSY INDICATION-TRUNK SEIZED AT LLF TT

SECTION 218-002-020

218-583-503 (2/0)	G	BUSY INDICATION-M/B SWITCH OPERATED	TT	-----
H-FRAME				
218-567-501 (2/1)	H	OPERATION	TT	-----
	I	TRUNK BUSY	TT	-----
	L	TRUNK TRANSFER	TT	-----
	M	FALSE-BUSY FALSE-IDLE CONDITIONS	TT	-----
218-583-501 (2/1)	A	TRUNK SEIZURE AND RINGING	TT	-----
	B	BUSY-INDICATION OPERATOR FAILS TO DISCONNECT	TT	-----
	C	BUSY-INDICATION-TRUNK SEIZED AT LLF	TT	-----
	D	TRUNK SEIZURE AND RINGING	TT	-----
	E	BUSY INDICATION-OPERATOR FAILS TO DISCONNECT	TT	-----
	F	BUSY INDICATION-TRUNK SEIZED AT LLF	TT	-----
	J	BUSY-INDICATION-MB SWITCH OPERATED	TT	-----

10.10 MISCELLANY TRNKS; VERIFICATION REQ

TROUBLE TESTS

J-FRAME

218-583-503 (2/0)	A	TRUNK SEIZURE AND RINGING	TT	-----
	B	BUSY INDICATION-OPERATOR FAILS TO DISCONNECT	TT	-----
	C	BUSY INDICATION-TRUNK SEIZED AT LLF	TT	-----
	D	TRUNK SEIZURE AND RINGING	TT	-----
	E	BUSY INDICATION-OPERATOR FAILS TO DISCONNECT	TT	-----
	F	BUSY INDICATION-TRUNK SEIZED AT LLF	TT	-----
	G	BUSY INDICATION-M/B SWITCH OPERATED	TT	-----

H-FRAME

218-583-501 (2/1)	A	TRUNK SEIZURE & RINGING	TT	-----
	B	BUSY-INDICATION OPERATOR FAILS TO DISCONNECT	TT	-----
	C	BUSY INDICATION-TRUNK SEIZED AT LLF	TT	-----
	D	TRUNK SEIZURE & RINGING	TT	-----
	J	BUSY INDICATION-MB SWITCH OPERATED	TT	-----

10.11 MISCELLANY TRNKS; TRKS TO LTD

TROUBLE TESTS

USING OTF (J23260)

218-584-501 (2/0)	A	SEIZURE AND RELEASE	TT	-----
	B	COIN RETURN AFTER DISCONNECT	TT	-----
	C	TRUNK HELD BY LTD NO. 14 OR LTC NO. 3	TT	-----
	D	TRUNK BUSY	TT	-----

USING OTF (H-595-950)

218-587-501 (1/0)	A	TRUNK SEIZURE AND RELEASE	TT	-----
	B	COIN RETURN AFTER DISCONNECT	TT	-----
	C	TRK HELD BY LTD NO. 14 OR LTC NO. 3	TT	-----
	D	TRUNK BUSY TEST	TT	-----

## 10.12 MISCELLANY TRNKS; AUX OGT TRK SD-26084-01

## TROUBLE TESTS

## J-FRAME

218-565-502 (1/0)	A	TRUNK SEIZURE	TT	-----
	B	TRUNK BUSY	TT	-----
	C	BUSY INDICATION FROM ASSOCIATED CIRCUIT	TT	-----
	D	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----

## H-FRAME

218-565-501 (2/0)	A	TRUNK SEIZURE	TT	-----
	B	TRUNK BUSY	TT	-----
	C	BUSY INDICATION FROM ASSOCIATED CIRCUIT	TT	-----

## 10.13 MISCELLANY TRNKS; 2-WAY OPR OFF.

## TROUBLE TESTS

218-553-501 (1/0)	A	OPERATION	TT	-----
	B	RINGBACK	TT	-----
	C	RECALL AND CUSTOMER HOLD	TT	-----
	D	TRUNK BUSY	TT	-----
	E	COIN CONTROL--COIN TRUNKS ARRANGED FOR AUTOMATIC COIN RETURN WHEN OPERATOR ANSWERS	TT	-----
	F	COIN CONTROL--COIN TRUNKS NOT ARRANGED FOR AUTOMATIC COIN RETURN	TT	-----
	G	COIN RETURN ON ABANDONED CALL	TT	-----
	H	DISCONNECT FROM OUTGOING CALL	TT	-----
	I	ALARM FORWARDING	TT	-----
	J	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----
	K	CALL TO INCOMING TRUNK TEST LINE	TT	-----
	L	RINGING	TT	-----
	M	LINE BUSY REGULAR CALL	TT	-----
	N	LINE BUSY NO TEST CALL	TT	-----

## 10.14 MISCELLANY TRNKS; INC TRK MR TST

## TROUBLE TESTS

218-744-501 (2/0)	PT3	VOLTAGE ADJUSTMENT TEST	TT	-----
-------------------	-----	-------------------------	----	-------

## ◆ 10.15 MISCELLANY TRNKS; INFO SRV USING SD-28080-01(J-FR)

## ◆ TROUBLE TESTS

◆ 218-568-502 (2/0)	A	LOCAL CALL--FLAT RATE OPERATION	TT	-----
◆	B	LOCAL CALL--ANI OPERATION	TT	-----
◆	C	LOCAL CALL--AMA OPERATION	TT	-----
◆	D	LOCAL CALL--COIN OPERATION	TT	-----
◆	E	THROUGH SWITCHED OPERATION	TT	-----
◆	F	JUNCTOR OPERATION TEST	TT	-----
◆	G	DIRECTORY ASSISTANCE TRAFFIC TERMINATION TEST (AMA OR ANI PROVIDED)	TT	-----

218-568-502 (2/0)	H	DIRECTORY ASSISTANCE TRAFFIC TERMINATION TEST (AMA OR ANI NOT PROVIDED)	TT	-----
	I	TRUNK OR JUNCTOR CIRCUIT BUSY	TT	-----
	J	REMOTE MAKE-BUSY TEST	TT	-----
	K	OVERFLOW	TT	-----
	L	FALSE-BUSY FALSE-IDLE CONDITIONS	TT	-----