

EQUIPMENT TEST LIST

TRUNKS

NO. 5A CROSSBAR EQUIPMENT

	CONTENTS	PAGE
1.	GENERAL	1
4.1	PERM SIG HOLDING	2
4.2	IAO TRK	2
4.3	REV CALL	2
4.4	2W OP OFF	3
4.5	INTERCEPT	3
4.6	OGT & JCTR	3
4.7	REC COMP, SPL SRV	4
4.8	OG TO TSP TSPS	4
4.9	911 EMER REP SVC	4
4.10	INC TRK CKT	4

applicable to equipment listed in the preceding table of contents. Test classification and frequency of periodic routine are also provided.

1.02 This ETL is reissued to incorporate changes in paragraphs 4.3 and 4.5. An arrow has been placed to the left of each line which has been changed.

1.03 Comments on this section should be made by following the instructions in Bell System Practices (BSP), Section 000-010-015.

1.04 Routing test information is arranged in the following order from left to right: Section number, issue/addendum, test letter or paragraph number, test title, test class, frequency, and the last space is for a locally assigned job number.

1.05 Section 010-300-011 provides Equipment Test List instructions.

1. GENERAL

1.01 This section provides an index and information access system to locate the standard tests

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

4.0 TRUNKS

4.1 TRUNKS; PERM SIG HOLDING

FOR ALL UNITS

218-961-505	(1/0)	F	PERM SIGNAL HOLDING	MW 12M	-----
-------------	-------	---	---------------------	--------	-------

TROUBLE TESTS

218-961-505	(1/0)	A	SEIZURE	TT	-----
		B	LINE SIGNAL INDICATION--TEST FRAME LOCATION	TT	-----
		C	TEST DESK ACCESS	TT	-----
		D	TIMING AND ALARM INDICATIONS	TT	-----
		E	MANUAL RELEASE FEATURE	TT	-----
		G	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----
		H	TRUNK BUSY	TT	-----

4.2 TRUNKS; IAO TRK

FOR ALL UNITS

218-965-501	(1/0)	B	RINGING-PRETRIP AND TRIP	MR 24M	-----
		C	SUPV-ORIG AND TERM. ENDS DISCONNECT	MR 24M	-----
		E	NONCHARGE SUPERVISION	MR 24M	-----
		J	CALL TO FREE LINE-TRK ARR FOR COIN, MESSAGE REG OPER	MW 12M	-----

TROUBLE TESTS

218-965-501	(1/0)	A	TRK SEIZ, CHARGE SUPV AND ORIG END DISC	TT	-----
		D	SUPV--TERM. END DISC	TT	-----
		F	TMD RLS AFTER COIN COLL BUT BEFORE OVT MON TRKS ARR FOR COIN OPER WITH TMG	TT	-----
		G	COLL OF INIT AND OVT DEPOSITS--TRKS ARR FOR COIN OPER WITH TMG	TT	-----
		H	RTN OF OVT DEPOSIT--DISC AFTER COIN COLL BUT BEFORE OVT MON--TRKS ARR FOR COIN OPER WITH TMG	TT	-----
		I	SUPV--TRKS ARR FOR MR OPER WITH/WITHOUT TMG	TT	-----
		K	TRUNK BUSY	TT	-----

4.3 TRUNKS; REV CALL

SELECT ONLY ONE CATEGORY

DIAL PULSE

218-965-502	(1/0)	A	TRUNK SEIZURE AND RELEASE	MW 12M	-----
		B	RINGING PRETRIP AND TRIP	MW 12M	-----
		C	SUPERVISION HOLD AND RELEASE FEATURES	MW 12M	-----
		D	TRUNK BUSY FEATURES	MW 12M	-----
		E	STATION DIGIT MARGINAL TEST (DIAL PULSE)	MW 12M	-----

TOUCH-TONE

218-965-502	(1/0)	F	STATION DIGIT SINGLE FREQUENCY MARGINAL TEST (TOUCH-TONE)	MW 12M	-----
		G	STATION DIGIT SPECIAL 3-FREQUENCY MARGINAL TEST (TOUCH-TONE)	MW 12M	-----

218-965-502 (1/0)	H	STATION DIGIT MAXIMUM AND MINIMUM FREQUENCY MARGINAL TEST (TOUCH-TONE)	MW 12M	-----
TROUBLE TESTS				
218-965-502 (1/0)	I	FALSE BUSY AND FALSE IDLE CONDITIONS	TT	-----
4.4 TRUNKS; 2W OP OFF				
FOR ALL UNITS				
218-965-504 (1/0)	H	DISCONNECT FROM OUTGOING CALL	MW 12M	-----
	K	CALL TO INCOMING TRUNK TEST LINE	MR 12M	-----
TROUBLE TESTS				
218-965-504 (1/0)	A	OPERATION	TT	-----
	B	RINGBACK	TT	-----
	C	RECALL AND CUSTOMER HOLD	TT	-----
	D	TRUNK BUSY	TT	-----
	E	COIN CONTROL--COIN TRUNKS ARRANGED FOR AUTOMATIC COIN RETURN WHEN OPERATOR ANSWERS	TT	-----
	F	COIN CONTROL--COIN TRUNKS NOT ARRANGED FOR AUTOMATIC COIN RETURN	TT	-----
	G	COIN RETURN ON ABANDONED CALL	TT	-----
	I	ALARM FORWARDING	TT	-----
	J	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----
	L	RINGING	TT	-----
	M	LINE-BUSY--REGULAR CALL	TT	-----
	N	LINE-BUSY--NO TEST CALL	TT	-----
4.5 TRUNKS; INTERCEPT				
SELECT ONLY ONE CATEGORY				
LL FRAME				
218-965-505 (1/0)	A	SEIZ, RNG, SUPV AND AUTO. TRANSFER	MR 12M	-----
TL FRAME				
218-965-505 (1/0)	C	SEIZ, RNG, SUPV AND AUTO. DISCONNECT	MR 12M	-----
TROUBLE TESTS				
218-965-505 (1/0)	B	BUSY INDICATION	TT	-----
	D	BUSY INDICATION	TT	-----
	E	FALSE-BUSY, FALSE-IDLE TEST	TT	-----
4.6 TRUNKS; OGT & JCTR				
FOR ALL UNITS				
218-965-506 (1/0)	D	INITIAL AND OVT CHG CKTS ARR FOR COIN OR MSG. REG OPER WITH TIMING	MR 12M	-----
	E	TMD RELEASE AFTER COIN CALL BUT BEFORE OVT MON CKTS ARR FOR COIN OPER WITH TMG	MR 12M	-----
	F	RTN OF OVT DEPOSIT-DISC AFTER COIN CALL BUT BEFORE OVT MON CKTS ARR FOR COIN OPER WITH TMG	MR 12M	-----
TROUBLE TESTS				
218-965-506 (1/0)	A	SEIZURE AND RELEASE	TT	-----

SECTION 218-003-014

218-965-506	(1/0)	B	SUPV--ORIG END DISC CKTS ARR FOR COIN, ANI, FLAT RATE, OR MSG REG OPER	TT	-----
		C	SUPERVISION--TERMINATING END DISCONNECT	TT	-----
		G	OVERFLOW	TT	-----
		H	SEIZ--CKTS ARR FOR THROUGH-SWITCHED OPER	TT	-----
		I	OVERFLOW--CKTS ARR FOR THROUGH-SWITCHED OPER	TT	-----
		J	CALL TO BUSY LINE	TT	-----
		K	CALL TO TEST LINE	TT	-----
		L	CIRCUIT BUSY	TT	-----
4.7 TRUNKS; REC COMP,SPL SRV					
FOR ALL UNITS					
218-965-507	(1/0)	G	DISC-COIN TRKS ARR FOR AUTO COIN COLL ON DISC.	MR 24M	-----
TROUBLE TESTS					
218-965-507	(1/0)	A	OPERATION	TT	-----
		B	RINGBACK	TT	-----
		C	RECALL	TT	-----
		D	CUSTOMER HOLD	TT	-----
		E	TRUNK BUSY FEATURES	TT	-----
		F	COIN CONTROL--COIN TRUNKS ARRANGED FOR COIN RETURN WHEN OPERATOR ANSWERS	TT	-----
		H	COIN RETURN ON ABANDONED CALL	TT	-----
		I	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----
4.8 TRUNKS; OG TO TSP TSPS					
FOR ALL UNITS					
218-965-508	(1/0)	A	SEIZURE AND RELEASE	MW 12M	-----
TROUBLE TESTS					
218-965-508	(1/0)	B	SUPERVISION--TANDEM OFFICE DISCONNECTS	TT	-----
		C	ABANDONED CALL	TT	-----
		D	OVERFLOW	TT	-----
		E	CIRCUIT BUSY	TT	-----
		F	CUSTOMER RECALL--FROM TANDEM OFFICE	TT	-----
		G	COIN CONTROL--FROM TANDEM OFFICE	TT	-----
		H	DISABLE COIN FEATURES	TT	-----
		I	FALSE-BUSY AND FALSE-IDLE CONDITIONS	TT	-----
		J	CALL THROUGH TANDEM OFFICE	TT	-----
4.9 TRUNKS; 911 EMER REP SVC					
FOR ALL UNITS					
218-965-509	(2/0)	A	TRUNK SEIZ, RNG, AND SUPR SUB OUTGOING CALL	MW 12M	-----
		B	FORCED RELEASE-TANDEM CALL	MW 12M	-----
TROUBLE TESTS					
218-965-509	(2/0)	C	TRUNK BUSY	TT	-----

218-965-509 (2/0)	D	FALSE-BUSY AND FALSE IDLE CONDITIONS	TT	-----
> 4.10 TRUNKS; INC TRK CKT				
TROUBLE TESTS				
USING TC AUTOMATIC START OF RINGING				
218-965-503 (1/0)	A	TRUNK SEIZURE AND RELEASE	TT	-----
	B	RINGING	TT	-----
	C	SUPERVISION--TERMINATING END DISCONNECT	TT	-----
	D	SUPERVISION--ORIGINATING END DISCONNECT	TT	-----
	E	LINE BUSY	TT	-----
	F	OVERFLOW	TT	-----
	G	FREE CALL	TT	-----
CONTROLLED RINGING				
218-965-503 (1/0)	H	CALL TO INCOMING TRUNK TEST LINE	TT	-----
	I	RINGING	TT	-----
	J	RERING	TT	-----
	K	COIN CONTROL	TT	-----
	L	OVERFLOW	TT	-----
	M	CALL TO BUSY LINE	TT	-----
	N	CALL TO BUSY LINE--NO TEST	TT	-----
TANDEM CALLS				
218-965-503 (1/0)	O	INCOMING TANDEM TRK THROUGH-SWITCHED OPER	TT	-----

