

**AUTOMATIC TRANSFER TEST LINE
USING TRUNK TEST CIRCUIT SD-25918-01
NO. 5 CROSSBAR OFFICES**

1. GENERAL

1.01 This section describes a method of testing the Automatic Transfer Test Line (ST-521143) and cross-connects in the Transfer Register for Incoming Test Line.

1.02 This test should be done before office is in service or in conditions of very light traffic.

2. APPARATUS

1011 G Handset.

3. METHOD

A. Regular Transfer Call

| STEP | ACTION | VERIFICATION |
|------|---|---|
| 1. | Busy all transfer registers except one. | |
| 2. | Plug TelSet in any idle incoming trunk. | |
| 3. | Dial Telephone number of Automatic Transfer Test Line (Obtain from office records) | Tripped ringing may be heard. |
| 4. | Automatic Test Line dials digit one. | |
| 5. | Auto Test Line informs transfer register to transfer call to ITTL. (Cross-connected in transfer register) | |
| 6. | Trunk is transferred to ITTL. | 2 ringing cycles are heard then trip followed by 120 IPM flashes. |
| 7. | Remove TelSet. | |
| 8. | Repeat steps 2 through 6 until all transfer registers have been tested. | |