



Preside Multiservice Data Manager

# Service Provisioning for Frame Relay

User Guide

241-6001-603



---

Preside Multiservice Data Manager

# **Service Provisioning for Frame Relay**

## User Guide

---

Publication: 241-6001-603

Document status: Standard

Document version: 14.3RSUP

Document date: December 2003

---

Copyright © 2003 Nortel Networks.  
All Rights Reserved.

Printed in Canada

NORTEL, NORTEL NETWORKS, the globemark design, the NORTEL NETWORKS corporate logo, DPN, PASSPORT, , and PRESIDE are trademarks of Nortel Networks. SUN is a trademark of Sun Microsystems Inc. OPENVIEW is a trademark of Hewlett-Packard Company. UNIX is a trademark licensed exclusively through X/OPEN Company Ltd.

---



## Publication history

---

### December 2003

145.3RSUP Standard  
Commercial availability



---

# Contents

---

## **About this document** **13**

Who should read this document and why 13

What you need to know 13

How this document is organized 13

What's new in this document 14

Text conventions 15

Related documents 16

---

## **Chapter 1**

### **About Frame Relay service provisioning** **19**

Frame Relay service provisioning overview 19

Frame Relay service provisioning and the MDM Administration  
Database 20

---

## **Chapter 2**

### **Installing the Frame Relay service provisioning tool** **23**

System requirements 23

Installing the Frame Relay service provisioning tool software 24

Updating the license 24

---

## **Chapter 3**

### **Configuration and setup** **27**

Passport configuration 27

Configuring the end-to-end server 28

Changing the server port number 30

Configuring and accessing the server host 31

Configuring the Real Time Log Display 32

---

## **Chapter 4**

### **Frame Relay service provisioning tool user interface**

**35**

Main window overview 36

Menu bar 37

File 37

Edit 38

Options 39

Tools 39

View 39

Help 40

Provisioning interface for Frame Relay PVC circuits 40

Circuit Type panel 40

Circuit Properties panel 40

Node Properties panel 42

Provisioning interface for Frame Relay IP VPN access circuits 43

Circuit Type panel 44

Circuit Properties panel 44

IP Service Node Properties panel 45

Frame Relay Access Node Properties panel 50

End Points panel 52

Command panel 53

Dialog boxes for Frame Relay PVC and IP VPN Access provisioning 55

Set Default Authentication dialog box 55

Browse Service Interface dialog box 55

Browse Nodes dialog box 57

Traffic Management Parameters dialog box 57

Master node area 60

Slave node area 60

Command buttons 60

Circuit retrieval dialog boxes 61

Edit Circuit dialog box 61

Delete Circuit dialog box 63

Create Circuit dialog box 64

---

Edit Circuit dialog box	66
Delete Circuit dialog box	67
Dialog boxes for Frame Relay PVCs	69
Edit Backup Slave dialog box	69
Customer Search dialog box	70
Dialog boxes for Frame Relay IP VPN Access	71
Browse Customer dialog box	71
Site Search dialog box	72
Browse VRs/VRFs dialog box	73
Available DLCI dialog box	73
Browse FrDte/Remote Group dialog box	75
Browse IpDlciGroup dialog box	75
Using the keyboard commands	76
Mnemonics	76
Command accelerators	77

---

## Chapter 5

### General procedures

79

Frame Relay service provisioning tool launch points	81
Starting the Frame Relay service provisioning tool from the Preside MDM window	82
Starting the Frame Relay service provisioning tool from Nodal Provisioning	83
Starting the Frame Relay service provisioning tool from the Network Viewer Start Tool menu	84
Starting the Frame Relay service provisioning tool from the Circuit Viewer Tools menu	85
Starting the Frame Relay service provisioning tool from the MDM Database Administration tool	86
Connecting to a Passport device	87
Browsing customers	88
Browsing nodes	91
Browsing service interfaces	92
Editing a Frame Relay circuit	93
Deleting a Frame Relay circuit	97
Traffic Management procedures	100

Creating a new Traffic Management profile	101
Editing a Traffic Management profile	102
Deleting a Traffic Management profile	103
Applying provisioning changes	104
Applying the service creation	105
Applying the service deletion or modification	107
Managing Invalid circuit conditions	109
Manually deleting a circuit from the network and Administration Database	110
Correcting the circuit in the network	111
General procedures for Frame Relay IP VPN Access circuits	113
Browsing Sites	114
Browsing VRs and VRFs	115
Browsing DLCIs	116
Clearing a row in the End Points table	118
Selecting a Traffic Management profile	119
Browsing IpDlciGroup instances for 2764 IP Optimized circuits	120
Browsing FrDte and Remote Group instances for 2764 FrDte circuits	121
Launching Embedded Nodal Provisioning	122

---

## **Chapter 6**

### **Frame Relay PVC provisioning 123**

Prerequisites	123
Provisioning a Frame Relay PVC path	124
Backup slaves configuration	127
Adding a backup slave	128
Editing a backup slave	129
Deleting a backup slave	130

---

## **Chapter 7**

### **Frame Relay circuits with IP access for 2547 VPNs 131**

Prerequisites for provisioning Frame Relay circuits with IP access for 2547 VPNs	132
Configuring circuit properties	133

---

---

Configuring IP Access for a 2547 VPN 135  
Configuring Frame Relay Access node properties 137  
Configuring end points 138

---

## **Chapter 8**

### **Frame Relay circuits with IP access for 2764**

#### **VPNs**

**139**

Prerequisites for provisioning Frame Relay circuits with IP access for  
2764 VPNs 140  
Configuring circuit properties 141  
Configuring IP Access for 2764 VPN 143  
Configuring Frame Relay Access node properties 145  
Configuring end points 146

---

## **Chapter 9**

### **Frame Relay Real Time Log Display tool**

**147**

Procedures 148  
Starting the Real Time Log Display tool 149  
Filtering log reports 150  
Clearing the contents of a log report 151  
Stopping incoming log messages 152  
Deleting log files 153  
Saving Real Time Log Display content 154  
Printing Real Time Log Display content 155  
Searching a word in the Real Time Log Display 156  
Resizing a column 157  
Hiding a column 157  
Adding a column 157  
Moving a column 157  
Sorting a log report 157  
Real Time Log Display window 158  
    Menu bar 158  
    Log filtering 159  
    Log messages 160  
    Buttons 162  
Menu shortcuts 162

---



## About this document

---

This document explains how to use the Preside Multiservice Data Manager Frame Relay service provisioning tool.

For more information about this document, see the following sections:

- “Who should read this document and why” (page 13)
- “What you need to know” (page 13)
- “How this document is organized” (page 13)
- “What’s new in this document” (page 14)
- “Text conventions” (page 15)
- “Related documents” (page 16)

### Who should read this document and why

This guide is for personnel who create and manage Frame Relay PVC circuits on Passport nodes, and for personnel responsible for VPN provisioning who need to connect a Frame Relay circuit to an IP VPN.

### What you need to know

This document assumes that you have knowledge of Nortel Networks Preside Multiservice Data Manager and an understanding of the Passport product.

### How this document is organized

The information in this guide is organized as follows:

- “About Frame Relay service provisioning” (page 19) describes the tool and its advantages.

- “Installing the Frame Relay service provisioning tool” (page 23) describes the software installation.
- “Configuration and setup” (page 27) provides information on setup and system requirements.
- “Frame Relay service provisioning tool user interface” (page 35) describes the tool interface.
- “General procedures” (page 79) provides general procedures for using the Frame Relay service provisioning tool.
- “Frame Relay PVC provisioning” (page 123) describes how you can use the Frame Relay service provisioning tool to provision Frame Relay permanent virtual circuits between two or more Passports.
- “Frame Relay circuits with IP access for 2547 VPNs” (page 131) describes how you can use the tool to connect a frame relay circuit to an IP VPN for RFC 2547 VPNs
- “Frame Relay circuits with IP access for 2764 VPNs” (page 139) describes how you can use the tool to connect a frame relay circuit to an IP VPN for RFC 2764 VPNs
- “Frame Relay Real Time Log Display tool” (page 147) describes how to use the Real Time Log Display tool to display and filter real time log messages generated by the Frame Relay service provisioning tool.

## What’s new in this document

The following feature was added to this document:

- “MDM IP VPN Access” (page 14)

### MDM IP VPN Access

MDM IP VPN access feature adds the ability to create a Frame Relay circuit with IP access. The service provisioning tool creates access to a Virtual Router (VR) component. This capability enables you to connect a Frame Relay circuit to an IP VPN. The Frame Relay service provisioning tool lets you provision the following circuits:

- for 2764 IP VPNs, FrDte Backhaul, FrDte Direct, Optimized Local, and Optimized Backhaul
- for 2547 IP VPNs, Optimized Local and Optimized Backhaul

The tool provisions the Passport device and, if connected to the MDM Administration Database, populates it with the information and components for these circuits.

For additional information, see the following sections:

- “Frame Relay circuits with IP access for 2547 VPNs” (page 131)
- “Frame Relay circuits with IP access for 2764 VPNs” (page 139)

## Text conventions

This document uses the following text conventions:

- `nonproportional spaced plain type`

Nonproportional spaced plain type represents system generated text or text that appears on your screen.

- **`nonproportional spaced bold type`**

Nonproportional spaced bold type represents words that you should type or that you should select on the screen.

- *italics*

Statements that appear in italics in a procedure explain the results of a particular step and appear immediately following the step.

Words that appear in italics in text are for naming.

- `[optional_parameter]`

Words in square brackets represent optional parameters. The command can be entered with or without the words in the square brackets.

- `<general_term>`

Words in angle brackets represent variables which are to be replaced with specific values.

- UPPERCASE,lowercase

In MDM, uppercase and lowercase letters that appear in UNIX commands and parameters must be matched exactly. The system matches upper and lowercase characters differently.

- |

This symbol separates items from which you may select one; for example, ON|OFF indicates that you may specify ON or OFF. If you do not make a choice, a default ON is assumed.

- ...

Three dots in a command indicate that the parameter may be repeated more than once in succession.

The term absolute pathname refers to the full specification of a path starting from the root directory. Absolute pathnames always begin with the slash (/) symbol. A relative pathname takes the current directory as its starting point, and starts with any alphanumeric character (other than /).

## Related documents

See the following documents for related information:

- 241-6001-023 *Preside MDM Configuration Management for Passport User Guide*
- 241-6001-303 *Preside MDM Administrator Guide*
- 241-6001-310 *Preside MDM Server Reference Guide*
- 241-6001-400 *Preside MDM Administration Database User Guide*
- 241-6001-405 *Preside MDM Administration Database Schema*
- 241-6001-801 *Preside MDM Overview*
- 241-5701-060 *Passport 7400, 15000, 20000 Components*
- 241-5701-901 *Passport 7400, 15000, 20000 Frame Relay Fundamentals*
- 241-5701-902 *Passport 7400, 15000, 20000 Configuring Frame Relay*
- 241-7401-925 *Passport 7400 Frame Relay ISDN Switched Access Guide*

- *241-5701-805 Passport 7400, 15000, 20000 Understanding IP*
- *241-5701-905 Passport 7400, 15000, 20000 Frame Relay UNI Summary Card*



# Chapter 1

## About Frame Relay service provisioning

---

For an introduction to the Preside Multiservice Data Manager (MDM) Frame Relay service provisioning tool, see the following sections:

- “Frame Relay service provisioning overview” (page 19)

### Frame Relay service provisioning overview

The Frame Relay service provisioning tool lets you provision Frame Relay permanent virtual circuits (PVC) between Passport switches.

The Frame Relay service provisioning tool also lets you create Frame Relay circuits with IP Access for RFC 2764 and RFC 2547 VPNs. The types of access circuits are FrDte Backhaul and Direct (2764), and Optimized Local and Optimized Backhaul. These access circuits provide access from a customer site into an IP VPN. For all of these circuits, the access into the Passports on which the VPN Virtual Router resides, is through a Fruni or FrNni Dlci. All of these circuits support multiple IP CoS; provisioning of up to 4 circuits, one for each IP CoS level 0-3.

You can do your provisioning in one session and from a single user interface. Once you enter all the necessary provisioning data, you can activate the new view on the Passport device.

The Frame Relay service provisioning tool is integrated with the circuit management application. The circuit management application treats a circuit as a single entity rather than a collection of individual components and

attributes. Circuit information is stored in the Administration Database so that you can retrieve it to view, modify, or delete it. You can also apply the changes or deletions to the Passport node, or nodes, and the Administration Database.

The circuit is stored in the Administration Database after the view is successfully activated on the Passport device.

Specific Traffic Management parameters are provisioned on the device but are not stored in the Administration Database.

In addition, the following circuit specific fields are stored only in the Administration Database:

- Traffic Management Profile name
- Circuit ID
- Customer
- Access point
- Site

For more details on the Frame Relay service provisioning tool, see

- “Configuration and setup” (page 27)
- “Frame Relay service provisioning tool user interface” (page 35)
- “Frame Relay PVC provisioning” (page 123)
- “Frame Relay circuits with IP access for 2764 VPNs” (page 139)
- “Frame Relay circuits with IP access for 2547 VPNs” (page 131)

For information on the Administration Database, see 241-6001-400 *Preside MDM Administration Database User Guide*.

## **Frame Relay service provisioning and the MDM Administration Database**

If the MDM Administration Database is installed and you use the Frame Relay service provisioning tool to configure and activate on-switch data, the MDM Administration Database is updated to maintain the current view of the

network. If you do not activate the configuration, the MDM Administration Database is not updated because the current network view has not changed. The changes, however, will exist on the switch in either the edit or saved view.



## Chapter 2

# Installing the Frame Relay service provisioning tool

---

For system requirements and installation instructions for the Frame Relay service provisioning tool, see the following sections:

- “System requirements” (page 23)
- “Installing the Frame Relay service provisioning tool software” (page 24)
- “Updating the license” (page 24)

## System requirements

The current supported platform of the Frame Relay service provisioning tool is SPARC Solaris.

The Frame Relay service provisioning tool requires the following software:

- the Frame Relay service provisioning software, which is part of the Preside Multiservice Data Manager (MDM) package on the MDM CD-ROM
- third-party software supplied by Nortel Networks on the MDM CD-ROM, consisting of the following items:
  - associated JRE patches for Solaris
- a valid license key

## Installing the Frame Relay service provisioning tool software

The Frame Relay service provisioning tool is part of the Preside Multiservice Data Manager (MDM) software. When you load the Preside MDM software from CD-ROM with the InstallAnywhere program as described in 241-6001-100 *Preside MDM Installer Guide* you are instructed to:

- load the Solaris software patches for the Java Runtime Environment that is needed to run the Frame Relay service provisioning tool
- load the Preside MDM software with the InstallAnywhere program. When you run the InstallAnywhere program to load the Preside MDM, the program automatically loads the software packages required for the Frame Relay service provisioning tool. These packages are Preside MDM base and the Java Runtime Environment (JRE). You do not need to load any additional packages.

## Updating the license

You need a license before you can run the Frame Relay service provisioning tool for the first time. You only need to perform this procedure if the license you have for Preside MDM does not allow you to run the Frame Relay service provisioning tool.

Nortel Networks provides this information along with the Preside Multiservice Data Manager (MDM) software on the MDM CD-ROM. If you do not have this information, contact your Nortel Networks account representative.

To add the license key and customer identifier do the following:

- 1 Log in as root.
- 2 Using a UNIX editor open the following file for editing:  
`/etc/opt/Magellan/LIClicenses.cfg`
- 3 Add the license key to the file.
- 4 Check what you typed carefully.
- 5 Save the file and exit from it.
- 6 Open the following file for editing:

`/etc/opt/Magellan/LICcustName.cfg`

- 7 Check what you typed carefully.
- 8 Save the file and exit from it.



## Chapter 3

# Configuration and setup

---

Before using the Frame Relay service provisioning tool, you need to ensure that the Passport is configured for service provisioning, and you need to complete some or all of the following configuration tasks:

- “Passport configuration” (page 27)
- “Configuring the end-to-end server” (page 28)
- “Changing the server port number” (page 30)
- “Configuring and accessing the server host” (page 31)
- “Configuring the Real Time Log Display” (page 32)

### Passport configuration

Before using the application, ensure that all the Passports to be provisioned are configured for Frame Relay up to the logical connection layer. The following is required:

- physical installation of cards, cabling, and other elements required to interconnect the Passports for service provisioning
- provisioning of cards, logical processors, software, ports, and Frnni or Frnni components on the switches

For information on configuring Passports, refer to your Passport documentation.

## Configuring the end-to-end server

You use the Server Administration tool to edit the entry for the Frame Relay end-to-end server. See 241-6001-310 *Preside MDM Server Reference Guide*.

*Note:* This is the same server used by the ATM and IP VPN service provisioning tools.

### Procedure steps

- 1 While logged on as root, on the **Preside MDM** window, select **System -> Administration -> Server Administration**.  
The **Server Administration** window opens.
- 2 From the **Security** menu, select **Authorize**.  
The **SVM Enter Authorization Password** dialog box opens and prompts for a password.
- 3 If required, type a valid password and click **OK**.
- 4 From the **Edit** menu, select **Edit->New**.  
The **Server Administration** dialog box opens.
- 5 Add the server name in the **Descriptive name** field:  
`end-to-end server`
- 6 Add the server startup command in the Startup command field:  
`/opt/MagellanNMS/bin/eteserver [-p <portno>]`
- 7 If you do not want the server to restart automatically when the Preside MDM workstation is rebooted, click **Automatic startup at reboot time**.
- 8 Click **Save** and **Start**.  
The data you entered is stored and the server is started.
- 9 From the File menu, select **Refresh server list**.  
An updated server list is displayed, including the end-to-end server.
- 10 Click on the end-to-end server entry in the server list.  
The **Server Functions** pop-up menu opens.
- 11 From the pop-up menu, select **Start** to start the end-to-end server.

---

## Variable values

Variable	Value
<portno>	The TCP port number for monitoring incoming requests. The default value is 6600.  The port number must not be used by any other process.

## Changing the server port number

If your setup runs the end-to-end server on a port other than the default, you need to update the client resource file for the provisioning tool and reconfigure the server.

### Procedure steps

- 1 While logged on as root, edit the Frame Relay provisioning resource file:  
`/opt/MagellanNMS/cfg/eteFrameRelayRes.cfg`
- 2 To change the server port number from the default value of 6600, set the port parameter to the appropriate port number:  
`port = <portno>`
- 3 Go to the Server Administration tool and edit the server port number option. See “Configuring the end-to-end server” (page 28).
- 4 Restart the end-to-end server.

### Variable values

Variable	Value
<portno>	The TCP port number. The default value is 6600.

## Configuring and accessing the server host

By default, the local host is the server host. If you are running the client on a different host than the server, you need to update the resource and host files.

### Procedure steps

- 1 While logged on as root, edit the resource file:  

```
/opt/MagellanNMS/cfg/eteFrameRelayRes.cfg
```
- 2 Set the host parameter:  

```
host = <hostname>|<ipaddress>
```
- 3 While logged on as root, display the contents of the hosts file:  

```
more /etc/hosts
```
- 4 Check that the file contains an entry with the IP address and host name of the end-to-end server.
- 5 If the entry is not listed, open an edit view of the resource file and add the IP address and host name on a new line:  

```
<ipaddress> <hostname>
```

### Variable values

Variable	Value
<hostname>	The host name of the end-to-end server.
<ipaddress>	The ip address of the end-to-end server.

## Configuring the Real Time Log Display

Configure the Real Time Log Display if you wish to turn the log to file to “on” to write log messages to file, to set the maximum size of each log file, or to set the maximum number of log files created by the end-to-end Frame Relay tool for each session.

### Procedure steps

Setting the log to file parameter to “on” lets you write log messages to a file. The default is off.

- 1 While logged on as root, edit the resource file:  

```
/opt/MagellanNMS/cfg/eteFrameRelayRes.cfg
```
- 2 Set the parameter that specifies if log messages will be logged to a file.  

```
LogToFile=<on/off>
```
- 3 Set the maximum log file size:  

```
MaxKeptLogFileSize(MB)=<log_file_size>
```
- 4 Set the maximum number of log files to keep per user session:  

```
MaxKeptLogFile=<maximum_log_file>
```

### Variable values

Variable	Value
<log_file_size>	The maximum log file size before the log file is rolled. If this value is less than or equal to zero, the default value, 1 1 Mbyte, will be used. When the log file reaches its maximum size, a rollover occurs. The old version of <log file name>.log.<nnn> is closed. The nnn extension is a three-digit log file counter. A new log file with the original name (<log file name>.log.<nnn+1>) is then used to continue the logging.
<maximum_log_file>	The maximum number of log files that are generated in a session. If this value is less than or equal to zero, the default value will be used. The default value is 3. When the maximum number of log files is reached, the oldest file is deleted and a new one is created.
(Sheet 1 of 2)	

---

Variable (continued)	Value
<on>	Specifies that you want to log the log messages to file. When LogToFile in the tool's configuration file is set to "on", all log records are written to a file, regardless of the log filtering criteria.
<off>	Specifies that you do not want to log the log messages to file. Off is the default.
(Sheet 2 of 2)	



## Chapter 4

# Frame Relay service provisioning tool user interface

---

For a description of the Frame Relay service provisioning tool main window, see the following sections:

- “Main window overview” (page 36)
- “Menu bar” (page 37)
- “Provisioning interface for Frame Relay PVC circuits” (page 40)
- “Provisioning interface for Frame Relay IP VPN access circuits” (page 43)
- “Command panel” (page 53)
- “Dialog boxes for Frame Relay PVC and IP VPN Access provisioning” (page 55)
  - “Set Default Authentication dialog box” (page 55)
  - “Browse Service Interface dialog box” (page 55)
  - “Browse Nodes dialog box” (page 57)
  - “Traffic Management Parameters dialog box” (page 57)
  - “Circuit retrieval dialog boxes” (page 61)
  - “Create Circuit dialog box” (page 64)
  - “Edit Circuit dialog box” (page 66)
  - “Delete Circuit dialog box” (page 67)

- “Dialog boxes for Frame Relay PVCs” (page 69)
  - “Edit Backup Slave dialog box” (page 69)
  - “Customer Search dialog box” (page 70)
- “Dialog boxes for Frame Relay IP VPN Access” (page 71)
  - “Browse Customer dialog box” (page 71)
  - “Site Search dialog box” (page 72)
  - “Browse VRs/VRFs dialog box” (page 73)
  - “Available DLCI dialog box” (page 73)
  - “Browse FrDte/Remote Group dialog box” (page 75)
  - “Browse IpDlciGroup dialog box” (page 75)
  - “Using the keyboard commands” (page 76)

## Main window overview

The Frame Relay service provisioning tool consists of a main window from which you do all your provisioning for FR PVC, and FR circuits with IP Access for the 2764 and 2547 VPNs.

The user interface is dynamic and its contents change with the following circumstances:

- the type of circuit you select from the Circuit Type list; FR PVC or FR IP VPN access
- for FR IP VPN access circuits, the circuit configuration that you select:
  - 2547 IP Opt Backhaul
  - 2547 IP Opt Local
  - 2764 IP Opt Backhaul
  - 2764 Opt Local
  - 2764 FrDte Backhaul
  - 2764 FrDte Direct

The window consists of the following elements:

- “Menu bar” (page 37)
- “Provisioning interface for Frame Relay PVC circuits” (page 40) or “Provisioning interface for Frame Relay IP VPN access circuits” (page 43)
- “Command panel” (page 53)

See also

- “General procedures” (page 79)
- “Frame Relay PVC provisioning” (page 123)
- “Frame Relay circuits with IP access for 2547 VPNs” (page 131)
- “Frame Relay circuits with IP access for 2764 VPNs” (page 139)
- “About Frame Relay service provisioning” (page 19)
- “Frame Relay Real Time Log Display tool” (page 147)

## Menu bar

The menu bar consists of the following menus:

- “File” (page 37)
- “Edit” (page 38)
- “Options” (page 39)
- “Tools” (page 39)
- “View” (page 39)
- “Help” (page 40)

**Note:** You can use mnemonics or command accelerator to access menu options. For additional information, see “Using the keyboard commands” (page 76).

## File

**Note:** The Edit Circuit and Delete Circuit commands are only available if the MDM Administration Database is installed.

The File menu contains the following commands:

- **New Circuit** deletes all information in the areas on the main window so you can start over with new connection information.
- **Exit** closes the application window and exits Frame Relay service provisioning.
- **Edit Circuit...** opens the Edit Circuit retrieve dialog box. This dialog box lets you specify the retrieval criteria for the FR PVC or IP VPN access circuit to be edited. For FR PVC circuits, specify the circuit ID of the circuit to be retrieved from the Administration Database. If you know the circuit ID, you can either type it directly in the Circuit Id field, or you can use the Circuit Viewer to select the circuit. If you use Circuit Viewer to identify the circuit that you want to retrieve from the circuit list, the context is set. When the dialog box opens, the Circuit Id field contains the circuit ID which is currently in context. See “Circuit retrieval dialog boxes” (page 61) and “Editing a Frame Relay circuit” (page 93). For IP VPN access circuits, specify the Customer, Site, and Access point.
- **Delete Circuit...** opens the Delete Circuit circuit retrieval dialog box. This dialog box lets you specify the retrieval criteria for the FR PVC or IP VPN access circuit to be deleted. For FR PVC circuits, specify the circuit ID of the circuit to be retrieved from the Administration Database. You can either enter the Circuit ID directly in the Circuit Id field if you know it, or you can use the Circuit Viewer tool to select the circuit. If you use the Circuit Viewer tool to identify the circuit that you want to retrieve from the circuit list, the context is set so that when the dialog box opens, the Circuit Id field contains the circuit ID which is currently in context. See “Circuit retrieval dialog boxes” (page 61) and “Deleting a Frame Relay circuit” (page 97). For IP VPN access circuits, specify the Customer, Site, and Access point.

## Edit

The Edit menu contains the following commands:

- **Edit TM...** opens the **Traffic Management Parameters** editing dialog box. See “Traffic Management Parameters dialog box” (page 57).
- **Edit Backup Slave** opens the **Edit Backup Slave** dialog box for Frame Relay PVC circuits. See “Edit Backup Slave dialog box” (page 69). This command is disabled for the Frame Relay IP VPN access circuit type.

## Options

The Options menu contains the following command:

- **Set Default Authentication** opens the Set Default Authentication dialog box to set the user ID and password for authenticating to a Passport device.

## Tools

The **Tools** menu contains the following commands.

- **Nodal Provisioning** launches the Nodal Provisioning tool. When you select this command the Preside Multiservice Data Manager (MDM) splash screen appears, followed by the Nodal Provisioning Device Selection dialog. For a description of Nodal Provisioning and procedures to use it, see 241-6001-610 *Preside MDM Nodal Provisioning User Guide*.

**Note:** Once you launch Nodal Provisioning, you can perform nodal provisioning tasks. However, before you can apply the frame relay service, you need to activate the nodal provisioning session and then close Nodal Provisioning. If you try to apply the service before closing the Nodal Provisioning session, an error message appears indicating that a provisioning session cannot be started on the switch. The error message does not inform you that this error is generated because the Nodal Provisioning tool is holding the provisioning session.

- **Circuit Viewer** launches the Circuit Viewer tool. For a description of the Circuit Viewer tool and procedures to use it, see 241-6001-011 *Preside MDM Fault Management User Guide*.
- **Circuit Database Administration** launches the Circuit Database Administration tool. For a description of the Circuit Database Administration tool and the procedures to use it, see 241-6001-400 *Preside MDM Administration Database User Guide*.

## View

The **View** menu contains the following command:

- **Show Messages** launches the Real Time Log Display. See “Frame Relay Real Time Log Display tool” (page 147).

## Help

The **Help** menu contains the following command:

- **Help on Window** displays help information for the Service Provisioning - Frame Relay window.

## Provisioning interface for Frame Relay PVC circuits

The main section of the **Service Provisioning - Frame Relay** main window for PVC circuit types contains the following areas:

- “Circuit Type panel” (page 40)
- “Circuit Properties panel” (page 40)
- “Node Properties panel” (page 42)
- “Command panel” (page 53)

Information on valid data entries for the fields in the provisioning panels are provided through tool tips.

### Circuit Type panel

The **Circuit Type** list identifies the circuit types that you can provision with the Frame Relay service provisioning tool. This list contains the FR PVC and FR IP VPN Access circuit types. For provisioning a Frame Relay circuit to connect to an IP VPN, you need to select the FR IP VPN Access circuit type.

For provisioning a Frame Relay PVC, you would select the FR PVC circuit type. See “Frame Relay PVC provisioning” (page 123) for provisioning procedures.

### Circuit Properties panel

Use the **Circuit Properties** panel to make selections which affect the entire Frame Relay PVC connection. The contents of this panel depends on whether the MDM Administration Database is installed. It may have the following fields and buttons:

*Note:* The Circuit Id and Customer fields appear in the user interface only if you have installed the MDM Administration Database. These fields are mandatory and activation does not proceed if these fields are not filled in.

- If the MDM Administration Database is installed, the **Circuit Id** field lets you enter a meaningful name for the permanent virtual circuit. The Circuit ID lets circuit management applications more easily find and identify circuits based on meaningful customer names. The circuit ID provides a method for operators to link subscriber information with the circuit, providing a unique and meaningful name to assist in the management of the circuit. A suggested format is “Customer Name” plus a unique identifier (for example: BigCustomer00000023). This format provides visibility of the end subscriber, while still allowing the circuit to be uniquely identified.

The Circuit ID is a 128-byte text field with no restriction or uniqueness checking on the node. If the Use Circuit Id is checked, the circuit ID is stored in the CorrelationTag attribute.

*Note:* If you duplicate a circuit ID, both circuits are stored in the Administration Database with the same circuit ID.

- The **Correlation Tag** field is used to set the value of the correlationTag attribute to the entered value for each PVC component in the connection.
- If the MDM Administration database is installed, the **Customer** field is a mandatory field that lets you specify the customer of the circuit. Type an entry or click the browse button [...] to open the customer search dialog (see “Browsing customers” (page 88)). If you do not specify a customer, Frame Relay service provisioning assigns the default customer and the customer name is set to default in the MDM Administration Database.
- The **Use Circuit Id** check box optionally lets you set the correlationTag equal to the circuit ID. When you check Use Circuit Id, the Correlation Tag field is automatically filled with the same value as the circuit ID. The Correlation Tag field is in read-only mode. The maximum length of the correlationTag attribute is 32 characters. If you enter a circuit ID with more than 32 characters, and you have checked Use Circuit Id, only the first 32 characters are provisioned on the device as the correlationTag. However, the Administration Database stores the entire circuit ID that you entered.

- The **TM Profile** field lets you select a traffic management profile, also known as quality of service (QOS) profile, for the Frame Relay PVC connection. The file name of TM profiles that are not saved to disk have an asterisk (\*) at the end of its name to indicate that the TM Profile has been changed but not saved. Profiles that are modified but not saved are stored in the MDM Administration Database as “Custom”
- The **Edit TM...** button opens a dialog box from which you can create a new traffic management template or edit an existing one. For more information, see “Creating a new Traffic Management profile” (page 101). See also the figure “Traffic Management Parameters dialog box” (page 57).

## Node Properties panel

The Node Properties panel for Frame Relay PVC circuits contains the following subpanels:

- “Master panel” (page 42)
- “Slave panel” (page 43)

### Master panel

Use the **Master Node** area to configure the master endpoint of the Frame Relay PVC connection. It has the following fields and buttons:

- The **Node Name** field lets you specify the name of the Passport node for the Frame Relay Access Node. You can select a Passport node from the drop down list, or as you type the name of the node into the field, the first item in the drop down list that matches the text is automatically selected. Pressing enter sets the selection.
- The browse button (...) opens the **Browse Nodes** dialog box; see “Browse Nodes dialog box” (page 57) and “Browsing nodes” (page 91).
- The **Use Defaults** check box lets you specify whether to use the default user ID and password to provision the selected node. If this check box is deselected, the **User Id** and **Password** fields are enabled and you need to enter a user ID and password.
- The **Type** list lets you select a Frame Relay user-to-network interface (Fruni) or a Frame Relay network-to-network interface (Frnni) as the end point.

- The **Frnni Instance** | **Frnni Instance** list lets you indicate how you want to identify the endpoint: by Frnni|Frnni instance, data network address (DNA) value, or Port Interface.

*Note:* The type of instance depends on the type chosen in the **Type** field.

- The browse button [...] opens a **Browse** dialog box that lets you search for and select a Frame Relay user-to-network interface|network-to-network interface and/or a data link connection identifier (DLCI) from a list of available interfaces and identifiers on a selected Passport node. See “Browse Service Interface dialog box” (page 55) and “Browsing service interfaces” (page 92).
- The **New DLCI** field lets you specify an instance number for the data link connection identifier (DLCI).
- The **Get Next** button automatically fills in the next unassigned DLCI.

### **Slave panel**

Use the **Slave panel** to configure the endpoint of the Frame Relay permanent virtual circuit (PVC) connection. The fields are similar to those in the **Master Node** area. The only difference is that the **Slave Node** area contains the **Edit Backup...** button, which lets you configure backup slave endpoints for the PVC connection. For more information, see “Backup slaves configuration” (page 127).

## **Provisioning interface for Frame Relay IP VPN access circuits**

The provisioning interface for Frame Relay IP VPN access circuits contain the following panels:

- “Circuit Type panel” (page 44)
- “Circuit Properties panel” (page 40)
- “IP Service Node Properties panel” (page 45)
- “Frame Relay Access Node Properties panel” (page 50)
- “End Points panel” (page 52)

Information about valid data entries for the fields in the provisioning panels are provided through tool tips.

## Circuit Type panel

Use the **Circuit Type** panel to make selections which affect the entire Frame Relay IP VPN connection. The panel contains the following items:

- **Circuit Type** list identifies the circuit types that you can provision with the Frame Relay service provisioning tool. This list contains the FR PVC and FR IP VPN Access circuit types. For provisioning a Frame Relay circuit to connect to an IP VPN, you need to select the FR IP VPN Access circuit type.
- **Circuit Configuration** list appears in the Circuit Type panel only when you select the FR IP VPN circuit type. It contains the access scenarios:
  - 2547 IP Opt Backhaul
  - 2547 IP Opt Local
  - 2764 IP Opt Backhaul
  - 2764 IP Opt Local (only in PCR 5.1)
  - 2764 FrDte Backhaul
  - 2764 FrDte Direct

## Circuit Properties panel

The circuit properties panel specifies general circuit data. This panel appears only if the MDM Administration Database is installed. This panel contains the following items

- The **Customer** field is a mandatory field that lets you specify the customer of the circuit. If you do not specify a customer, the tool prompts you to use the default customer, and the customer name is set to default in the MDM Administration Database. You can search for and select customers from the MDM Administration Database by using the associated drop-down list or browse button [...] to the right of the Customer field. The drop-down list displays available customers from which you can make a selection. The browse dialogs display the customer list and associated VRs or VRFs, depending on the circuit type. For details about the Browse Customer dialog boxes, see “Browse Customer dialog box” (page 71).

- The **Site** field lets you specify a Customer Site. A Site is where IP access is implemented and represents a collection of IP Access Points. The Site must be unique among all Sites belonging to the Customer. You can create a new Site by typing a Site name in the Site field. Alternatively, you can search for and select from existing Sites in the MDM Administration Database by clicking the browse button [...] to the right of the Site field. For additional information, see “Site Search dialog box” (page 72) and “Browsing Sites” (page 114)
- **Access Point** field lets you specify the IP Access Point. The access point is the gateway from the Customer Site into an IP VPN. It must be unique within the Site.
- **Site Type** field indicates whether the site is an extranet or intranet. For existing circuits, this field is set automatically—2764 circuits are always intranet and 2547 circuits can be either intranet or extranet. When you create a new site, the service provisioning tool sets the field as intranet when all the route targets under the specified VRF are owned by the same customer. Otherwise, the site type is extranet.

## IP Service Node Properties panel

This panel lets you enter the IP access information. This information is needed to link the Frame Relay circuit to a VPN. The IP Service Node is where the VR, FrDte, Media, Interface or Logical Interface, and IP Service (master) FrUni/FrNni are located for Fr IP VPN Access circuits.

The following items in the IP Service Node Properties panel are common to all circuit configurations:

- **Node Name** field lets you specify the name of the Passport node for the Frame Relay Access Node. You can select a Passport node from the drop down list, or as you type the name of the node into the field, the first item in the drop down list that matches the text is automatically selected. Pressing enter sets the selection.
- **Browse nodes button [...]** opens the Browse Nodes dialog box which search for and select a Passport Node. See “Browse Nodes dialog box” (page 57) and “Browsing nodes” (page 91).

- **Use Defaults** check box is selected by default. You can override the default user ID and password by deselecting this button. When Use Defaults is deselected, the User Id and Password fields become enabled and need to be filled in to connect to the Passport node.
- **User Id** field is enabled only if the Use Defaults check box is deselected. You can enter a User ID for the Passport node.
- **Password** field is enabled only if the Use Defaults check box is deselected. You can enter a Password for the Passport node.

The remaining contents of the IP Service Node panel are dynamic. That is, the contents change with the circuit configuration that you select. For the description of the contents of the panel for each circuit configuration, see the table “IP Service Node Properties panel contents” (page 46).

**Table 1**  
**IP Service Node Properties panel contents**

IP VPN	Panel content	Description
<b>2764 FrDte circuits (Backhaul and Direct)</b>		
	VR field	The target Virtual Router instance.
	VR browse button [...]	Opens the Browse VR dialog box to let you search for available VRs on the IP Service Node.
(Sheet 1 of 5)		

**Table 1 (continued)**  
**IP Service Node Properties panel contents**

IP VPN	Panel content	Description
	Logical Interface field	<p>The logical interface instance in the form &lt;ip_address&gt;/&lt;mask&gt;, where ip_address is in the form n.n.n.n where n is in the range 0 to 255, and mask is an integer from 0..32. This integer denotes the number of leading consecutive 1's in the mask. The Logical Interface is the access point to the VPN circuit and is created when you apply the provisioning. It will be created under a new or existing ProtocolPort, depending if the Media is new or not. If the Media exists, the ProtocolPort will be associated to it. The VR entered in this panel must have the ProtocolPort associated with the existing media, or an error will occur.</p> <p>If the Media is new, a new ProtocolPort and IPPort is created under the VR.</p>
	FrDte field	The instance of the target FrDte in the 2764 circuit configuration. A StaticDlci is provisioned under the FrDte when you apply the provisioning. The media for these circuit configurations, the remoteGroup, is created under the FrDte.
	FrDte browse button [...]	Opens the Browse FrDte/Remote Group dialog box which lets you browse the IP Service Node for FrDte instances only, or for both FrDte and remoteGroup instances.
	Remote Group field	The instance of the media - remoteGroup.
<b>2764 IP Opt Local circuit</b>		
	VR field	The Virtual Router instance.
	VR browse button [...]	Opens the Browse VR dialog box to let you search for available VRs on the IP Service Node.
(Sheet 2 of 5)		

**Table 1 (continued)**  
**IP Service Node Properties panel contents**

IP VPN	Panel content	Description
	Logical Interface field	<p>The logical interface instance in the form &lt;ip_address&gt;/&lt;mask&gt;, where ip_address is in the form n.n.n.n where n is in the range 0 to 255, and mask is an integer from 0..32. This integer denotes the number of leading consecutive 1's in the mask. The Logical Interface is the access point to the VPN circuit and is created when you apply the provisioning. It will be created under a new or existing ProtocolPort, depending if the Media is new or not. If the Media exists, the ProtocolPort will be associated to it. The VR entered in this panel must have the ProtocolPort associated with the existing media, or an error will occur.</p> <p>If the Media is new, a new ProtocolPort and IPPort is created under the VR.</p>
	IpDlciGroup field	The instance of media - IpDlciGroup.
	IpDlciGroup browse button [...]	Opens a browse dialog box which lets you search for IpDlciGroup instances on the IP Service Node and select an instance.
<b>2764 IP Opt Backhaul circuit</b>		
	VR field	The target Virtual Router instance.
	VR browse button [...]	Opens the Browse VR dialog box to let you search for available VRs on the IP Service Node.
(Sheet 3 of 5)		

**Table 1 (continued)**  
**IP Service Node Properties panel contents**

IP VPN	Panel content	Description
<b>2764 IP Opt Backhaul circuit (continued)</b>	Logical Interface field	The logical interface instance in the form <ip_address>/<mask>, where ip_address is in the form n.n.n.n where n is in the range 0 to 255, and mask is an integer from 0..32. This integer denotes the number of leading consecutive 1's in the mask. The Logical Interface is the access point to the VPN circuit and is created when you apply the provisioning. It will be created under a new or existing ProtocolPort, depending if the Media is new or not. If the Media exists, the ProtocolPort will be associated to it. The VR entered in this panel must have the ProtocolPort associated with the existing media, or an error will occur.  If the Media is new, a new ProtocolPort and IPPort is created under the VR.
	IpDlciGroup field	The instance of media - IpDlciGroup.
	Service Type field	For optimized backhaul circuits, FrUni is the only service type.
	FrUni Instance	You can enter an instance value in this field, or use the associated browse button.
	FrUni Instance browse button [...]	Opens a <b>Browse Service Interface</b> dialog box that lists FrUni instances that have other interfaces associated with them (by the VFramer subcomponent). Select a FrUni instance from the list to populate the FrUni Instance field on the service provisioning window.
<b>2547 IP Opt Local</b>		
	Vrf	The target Virtual Routing Function instance.
	Vrf browse button [...]	Opens the VR browse dialog box which lets you browse for Vrf instances on the IP Service Node.
(Sheet 4 of 5)		

**Table 1 (continued)**  
**IP Service Node Properties panel contents**

IP VPN	Panel content	Description
	Interface	The interface instance in the form <ip_address>/<mask>, where ip_address is in the form n.n.n.n where n is in the range 0 to 255, and mask is an integer from 0..32. This integer denotes the number of leading consecutive 1's in the mask.  The Interface is a direct subcomponent of the VRF, and is created when you apply the provisioning.
<b>2547 IP Opt Backhaul</b>		
	Vrf	The target Virtual Routing Function instance.
	Vrf browse button [...]	Opens the VR browse dialog box which lets you search for Vrf instances on the IP Service Node.
	Interface	The interface instance in the form <ip_address>/<mask>, where ip_address is in the form n.n.n.n where n is in the range 0 to 255, and mask is an integer from 0...32. This integer denotes the number of leading consecutive 1's in the mask.
	Service Type field	For optimized backhaul circuits, FrUni is the only service type.
	FrUni Instance	You can enter an instance value in this field, or use the associated browse button.
	FrUni Instance browse button [...]	Opens a <b>Browse Service Interface</b> dialog box that lists FrUni instances that have other interfaces associated with them (by the VFrainer subcomponent). Select a FrUni instance from the list to populate the FrUni Instance field on the service provisioning window.
(Sheet 5 of 5)		

### Frame Relay Access Node Properties panel

The Frame Relay Access Node Properties panel is dynamic and differs with each configuration of the FR IP VPN Access circuit type.

For local and direct circuit configurations, only the Service Type list, FrUni|FrNni Instance list and browse button [...] are enabled. The following FR IP VPN Access node information is disabled:

- Node Name field
- Browse nodes button [...]
- Use Defaults check box
- User Id and Password fields

For backhaul circuit configurations all the fields and buttons are enabled:

- You specify the name of the Passport node for the Frame Relay Access Node in the **Node Name** field. You can select a Passport node from the drop down list, or as you type the name of the node into the field, the first item in the drop down list that matches the text is automatically selected. Pressing enter sets the selection. Alternatively, you can use the browse button.
- The browse button [...] opens the **Browse Service Interface** dialog box which displays the list of those FrUni/FrNnis that have no interfaces associated with them (no VFraser subcomponents). See “Browse Service Interface dialog box” (page 55) and “Browsing service interfaces” (page 92).
- The **Use Defaults** check box lets you specify whether to use the default user ID and password to provision the selected node. If this check box is deselected, the **User Id** and **Password** fields are enabled and you need to enter a user ID and password.
- The **Type** list lets you select a Frame Relay user-to-network interface (FrUni) or a Frame Relay network-to-network interface (FrNni) as the end point.
- The **FrUni Instance | FrNni Instance** list lets you indicate how you want to identify the endpoint: by FrUni|FrNni instance, data network address (DNA) value, or Port Interface.

*Note:* The type of instance depends on the type chosen in the **Type** field.

- The browse button [...] opens a **Browse** dialog box that lets you search for and select a Frame Relay user-to-network interface/network-to-network interface and/or a data link connection identifier (DLCI) from a list of available interfaces and identifiers on a selected Passport node. See “Browse Service Interface dialog box” (page 55) and “Browsing service interfaces” (page 92).

## End Points panel

To accommodate multi Class of Service (CoS) circuits, the data for each end of the Frame Relay IP VPN Access circuit are entered in tabular format in the End Points table. The contents of a cell can be updated by right-clicking on it to open a pop-up menu and selecting a menu item, or by editing the cell directly. When you enter data into a cell of a row, you are provisioning the circuit within that CoS. In addition to the end point information, you can select a different correlation tag and a Traffic Management (TM) profile for each CoS.

The End Points table contains the following headings for FrDte Backhaul and Direct circuits:

- CoS Index
- IP Service DLCI
- FR Access DLCI
- Correlation Tag
- TM Profile

Optimized Backhaul and Local Circuits, the End Points table also contains the Media DLCI column. However, Optimized Local circuits do not contain the IP Service DLCI column.

The following pop-up menu commands are available from the various columns:

- The **Clear Row** pop-up menu item is available only from the CoS Index column. Selecting Clear Row blanks out all the fields in the row.

- The **Edit TM...** pop-up menu item is available from the TM Profile column. Selecting this item opens the Frame Relay Traffic Management Profile Editor. For more information on the traffic management editor, “Traffic Management Parameters dialog box” (page 57), and “Traffic Management procedures” (page 100).
- A drop down list of available **TM Profiles** is available from each cell in the TM Profile column. To select a profile, left-click on the cell, then select the profile from the list.
- The **Browse DLCI** pop-up menu command is available from the FR Access DLCI, IP Service DLCI and Media DLCI columns. The Browse DLCI pop-up menu item opens a browse dialog box. For FR Access DLCIs, the values returned depend on the circuit configuration. For more information on the Available DLCI dialog box, see “Available DLCI dialog box” (page 73) and the table “Circuit configurations and values returned by the Browse DLCI pop-up menu item” (page 74) for a description of the Browse DLCI pop-up menu associated with various circuit configurations.

## Command panel

The buttons displayed in the command panel depend on whether you are performing an create, edit, or delete operation:

- Circuit creation

During a circuit creation, only the **Apply** button is displayed. When you click Apply, the Frame Relay service provisioning tool checks if you have entered all required configuration information. If mandatory configuration information is missing, a message dialog box opens and informs you what data is missing.

If you have entered all required data, the **Apply** button opens the **Create Circuit** dialog box so that you can apply the configuration that you have set up. You can specify the apply actions in the **Create Circuit** dialog

box and click **OK** to begin provisioning the configured nodes in the Frame Relay PVC connection. See “Create Circuit dialog box” (page 64).

The circuit information is stored in the Administration Database after the view is successfully activated on the Passport device. You can retrieve, view, modify, or delete this circuit.

- Circuit modifications

During an edit circuit action, the following buttons are displayed in the Command panel:

- **Validate** validates the circuit configuration data that you have retrieved from the Administration Database against the current Passport configuration data. If the data matches, the applicable fields are set to read-write and the Apply button is enabled.
- **Apply** is disabled until the circuit has been successfully validated. If mandatory data is missing, a message dialog box opens listing the missing configuration data. If any discrepancies exist in the circuit, they need to be resolved before the edit operation can proceed.

The Apply button opens the Edit Circuit dialog box, once you have entered all the required configuration data. The Edit Circuit dialog lets you specify how to apply the configuration. For additional information, see “Edit Circuit dialog box” (page 66) and “Editing a Frame Relay circuit” (page 93).

- **Reset** resets all configuration data fields to the values currently stored in the Administration Database, replacing any editing changes that you have made, but not yet applied. The Reset button is disabled until the circuit has been successfully validated.

- Circuit deletion

During an delete circuit action, the following button is displayed in the Command panel:

- **Delete...** opens the Delete Circuit dialog. This dialog lets you specify how to apply the circuit deletion. For additional information,

see “Delete Circuit dialog box” (page 67), and “Deleting a Frame Relay circuit” (page 97).

## **Dialog boxes for Frame Relay PVC and IP VPN Access provisioning**

For a description of the dialog boxes common to both Frame Relay PVC and Frame Relay IP VPN Access provisioning, see the following sections:

- “Set Default Authentication dialog box” (page 55)
- “Browse Service Interface dialog box” (page 55)
- “Browse Nodes dialog box” (page 57)
- “Traffic Management Parameters dialog box” (page 57)
- “Circuit retrieval dialog boxes” (page 61)
- “Create Circuit dialog box” (page 64)
- “Edit Circuit dialog box” (page 66)
- “Delete Circuit dialog box” (page 67)

### **Set Default Authentication dialog box**

The Set Default Authentication dialog box lets you set the default user ID and password to login to the Passport device. This dialog box opens when you select Options -> Set Default Login from the menu bar in the Service Provisioning - Frame Relay window. This dialog box also opens the first time you make provisioning changes that require a connection to the Passport device, and you have not yet set the default user ID and password.

### **Browse Service Interface dialog box**

This dialog box lets you select a Frame Relay user-to-network interface (Fruni), Frame Relay network-to-network interface (Frnni) and/or a data link connection identifier from a list. For the procedure, see “Browsing service interfaces” (page 92).

The Browse Service Interface dialog box that opens differs slightly depending on the circuit type and whether the circuit has a backhaul configuration or not. In a backhaul configuration, the FrUni instance requires a vFramer. In these circumstances, an additional entry for port interfaces displays in the dialog box.

The Browse Service Interface dialog box opens when you click the browse button [...] to the right of the Fruni|Frnni field in the following locations:

- in the Master Node panel or the Slave Node panel of a Frame Relay PVC circuit
- in the Frame Relay Access Node Properties panel of a Frame Relay IP VPN Access circuit
- in the IP Service Node Properties panel for the following Frame Relay IP VPN Access circuit configurations:
  - 2764 IP Opt Backhaul
  - 2547 IP Opt Backhaul

The dialog box contains the following elements:

- Browse dialog table contains the following columns:
  - The **Fruni | Frnni Instance** column displays all Frame Relay user-to-network interface (Fruni) or Frame Relay network-to-network interface (Frnni) instances according to your selection.
  - The **DNA Value** column displays the data network address (DNA) value for the corresponding Fruni/Frnni instance in the first column.
  - The **Port Interface** column displays the port interface for the corresponding Fruni/Frnni instance in the first column. This column displays only if the search is for a backhaul configuration where a FrUni requires a vFramer. Otherwise, this column does not display
- The **Show** button, available for FR PVC searches only, populates the **Available DLCIs** area with the existing data link connection identifiers (DLCI) for the selected Frame Relay user-to-network interface (Fruni) or Frame Relay network-to-network interface (Frnni).
- Action buttons

- **OK** copies the selected node into the **Fruni | Frnni Instance** field in the main window. The **Browse** dialog closes.
- **Cancel** dismisses the dialog. The **Fruni | Frnni Instance** field is unchanged.
- **Help** accesses the online help information for the dialog.

## Browse Nodes dialog box

The **Browse Nodes** dialog opens when you click **Browse** to the right of the **Node Name** field in the **Master Node** or **Slave Node** area. The **Browse Nodes** dialog lets you select from a list of nodes available from the Host Group Directory Service (HGDS) server.

The Browse Nodes dialog consists of the following elements:

- Search criteria panel. This panel has the following fields
  - **Device Name** specifies the node name for the search. By default, the Device Name field is populated with the wildcard character (\*).
  - **Max Num to Retrieve** restricts the number of instances retrieved. The default value is 100.
- A **Search** button. Clicking Search populates the **Search Results** panel with the node names matching the search criteria.
- The **Search Results** panel provides the results of your search. The **Device Name** section lists the available nodes to select from.
- Command buttons
  - **OK** copies the selected node into the node field in the main window. The **Browse Nodes** dialog closes.
  - **Cancel** dismisses the dialog. The node field is unchanged.
  - **Help** accesses the online help information for the dialog.

## Traffic Management Parameters dialog box

The Traffic Management Parameters dialog opens in the following circumstances:

- for both Frame Relay PVC circuits and Frame Relay IP VPN Access circuits, when you select Edit -> Edit TM... from the menu bar

- for Frame Relay PVC circuit types, when you click **Edit TM...** in the Circuit Properties panel
- for Frame Relay IP VPN Access circuit types, when you right click in a cell in the TM Profile column in the End Points table

The Traffic Management Parameters dialog lets you create a new traffic management template or edit or delete an existing one.

Traffic Management profiles are stored in the Administration Database. Unsaved profiles appear as “Custom” in the database.

See the following sections for related procedures:

- “Creating a new Traffic Management profile” (page 101)
- “Editing a Traffic Management profile” (page 102)
- “Deleting a Traffic Management profile” (page 103)

See the figure “Traffic Management Parameters dialog for a FR PVC circuit type” (page 59).

**Figure 1**  
**Traffic Management Parameters dialog for a FR PVC circuit type**

The screenshot shows a window titled "Traffic Management Parameters" with a "TM Profile List" dropdown set to "default". The window is divided into two main sections: "Master Node" and "Slave Node".

**Master Node Parameters:**

- Maximum Frame Size (octets): 2100
- Rate Enforcement: off
- CIR (bit/sec): 64000
- Committed Burst Size (bits): 64000
- Excess Burst Size (bits): 0
- Measurement Interval (msec): 0
- Rate Adaptation: off
- Accounting: on
- Rate Adaptation Sensitivity: 7
- Update BCI: off
- Transfer Priority: useDnaDefTP
- Discard Priority: useDnaDefPriority
- DeDiscard Priority: determinedByDi...
- Data Path: useDnaValue
- Cug Index: 0
- Cug Type: doNotSignal
- Map Ip to Fr Qos: no

**Slave Node Parameters:**

- Use same values as master
- Maximum Frame Size (octets): 2100
- Rate Enforcement: off
- CIR (bit/sec): 64000
- Committed Burst Size (bits): 64000
- Excess Burst Size (bits): 0
- Measurement Interval (msec): 0
- Rate Adaptation: off
- Accounting: on
- Rate Adaptation Sensitivity: 7
- Update BCI: off
- Transfer Priority: useDnaDefTP
- Discard Priority: useDnaDefPriority
- DeDiscard Priority: determinedByDi...
- Data Path: useDnaValue
- Cug Index: 0
- Cug Type: doNotSignal
- Map Ip to Fr Qos: no

At the bottom of the dialog, there are five buttons: "Apply", "Apply and Save", "Delete", "Close", and "Help".

The Traffic Management Parameters dialog for PVC circuits consists of the following elements:

- “Master node area” (page 60)
- “Slave node area” (page 60)

- “Command buttons” (page 60)

For Frame Relay IP VPN Access circuits, the dialog only displays the Master Node.

## Master node area

For information on the various fields in the **Master Node** area, see 241-5701-900 *Passport 7400, 15000, 20000 Frame Relay UNI Guide* for Frame Relay UNI connections and 241-5701-910 *Passport 7400, 15000, 20000 Frame Relay NNI Guide* for Frame Relay NNI connections.

## Slave node area

To use the same values for both the Master and Slave endpoint, you enable the **Use same values as master** check box in the **Slave Node** area. This sets all fields in the **Slave Node** area to read only and uses the values set in the **Master Node** area for both sides of the permanent virtual circuit connection.

To use different values from the Master endpoint, deselect the **Use same value as master** check box and enter the appropriate value in each field.

## Command buttons

The Traffic Management dialog has the following action buttons:

- **Apply** adds the traffic management profile specified in the **TM Profile** field to the list of profiles. Because this action does not save the file, the file name will have an asterisk (\*) to signify that you must click **Apply** and **Save** to save it to file. Profiles that are modified but not saved are stored in the Administration Database as “Custom”.
- **Apply and Save** adds the traffic management profile specified in the **TM Profile** field and save it in the `eteFrameRelayProfiles.cfg` file.
- **Delete** deletes the traffic management profile specified in the **TM Profile** field.
- **Close** closes the dialog. The **TM Profile** field in the Connection Properties area of the Frame Relay service provisioning window displays the traffic management profile selected in the dialog.
- **Help** accesses the online help information for the dialog.

## Circuit retrieval dialog boxes

The Frame Relay service provisioning circuit retrieval dialogs let you specify the circuit to retrieve from the MDM Administration Database. A retrieve dialog opens when you select one of the following commands from the File menu:

- Edit Circuit opens the Edit Circuit retrieve dialog
- Delete Circuit opens the Delete Circuit retrieve dialog

### Edit Circuit dialog box

Use the Edit Circuit dialog box to retrieve the Frame Relay PVC or IP VPN Access circuit that you want to modify. The Edit Circuit dialog box contains the following items:

- **FR PVC Circuit** option button to select a Frame Relay circuit and an associated **Circuit Id** field to identify the specific circuit.
- **IP VPN Access Circuit** option button to select an IP VPN circuit and associated fields to identify the specific circuit. You need specify at least one of the following fields:
  - **Customer**
  - **Site**
  - **Access Point**
- a selection of command buttons:
  - **Reset** clears the dialog and resets the values back to the wildcard (\*) character.
  - **Retrieve** retrieves the circuit from the MDM Administration Database. If the data is successfully retrieved, the dialog closes and the circuit data displays in the Frame Relay service provisioning tool window. If two or more circuits have the same ID, the first circuit found is used. If a circuit is not found, a warning message opens and the retrieve dialog remains open.
  - **Cancel** closes the dialog box and cancels the retrieval of the circuit data.

If you do not know what values to specify in any of the fields, you can use the wildcard (\*) to retrieve all occurrences. If more than one circuit meets the retrieval criteria, a dialog opens from which you can make a selection. You can also use the Circuit Viewer tool to search for the desired circuit data. See 241-6001-011 *Preside MDM Fault Management User Guide* for the procedure to search for a circuit using the Circuit Viewer tool. Selecting a circuit in the Circuit Viewer tool sets the context. You can then retrieve the current context in the Edit Circuit dialog by selecting the Get Context pop-up menu from any of the fields.

The retrieved data displays in the Frame Relay service provisioning window as read-only until you successfully validate the circuit.

The command panel displays the Validate... and Apply... buttons. The Validate... button is enabled. Clicking Validate... validates the circuit configuration against the current Passport configuration data. If the data matches, the applicable fields are set to read-write and the Apply... button is enabled.

If there are differences in the component data, the differences display in the status window and you can not edit the circuit.

If the stored data is incorrect, you can edit the data using the Circuit Database Administration tool.

You can also verify that the Passport device is running the correct view. If not, you may load and activate a different view.

When you click the Apply... button, a Confirm Frame Relay Changes dialog box opens and displays all the changes that you have made. The dialog box ask if you wish to continue. If you click Yes, the Edit Circuit dialog box opens. If you click No, you return to the Frame Relay main window. The Apply... button is disabled until the circuit is successfully validated. If any discrepancies exist in the circuit, you need to resolve them before the Frame Relay tool allows the edit action to continue.

## Delete Circuit dialog box

Use the Delete Circuit dialog box to retrieve the Frame Relay PVC or IP VPN Access circuit that you want to delete. The Delete Circuit dialog box contains the following items:

- **FR PVC Circuit** option button to select a Frame Relay circuit and an associated **Circuit Id** field to identify the specific circuit.
- **IP VPN Access Circuit** option button to select an IP VPN circuit and associated fields to identify the specific circuit. You need specify at least one of the following fields:
  - **Customer**
  - **Site**
  - **Access Point**
- a selection of command buttons:
  - **Reset** clears the dialog and resets the values back to the wildcard (\*) character.
  - **Retrieve** retrieves the circuit from the MDM Administration Database. If the data is successfully retrieved, the dialog closes and the circuit data displays in the Frame Relay service provisioning tool window. If two or more circuits have the same ID, the first circuit found is used. If a circuit is not found, a warning message opens and the retrieve dialog remains open.
  - **Cancel** closes the dialog box and cancels the retrieval of the circuit data.

If you do not know what values to specify in any of the fields, you can use the wildcard (\*) to retrieve all occurrences. If more than one circuit meets the retrieval criteria, a dialog opens from which you can make a selection. You can also use the Circuit Viewer tool to search for the desired circuit data. See 241-6001-011 *Preside MDM Fault Management User Guide* for the procedure to search for a circuit using the Circuit Viewer tool. Selecting a circuit in the Circuit Viewer tool sets the context. You can then retrieve the current context in the Edit Circuit dialog by selecting the Get Context pop-up menu from any of the fields.

The retrieved data displays in the Frame Relay service provisioning window as read-only.

The command area displays the Delete... button which is enabled. Clicking Delete... validates the circuit configuration data that was retrieved from the Administration Database against the current Passport configuration data. If the data matches, the circuit is deleted. If there are differences in the component data, the differences are displayed in the status window and you can not delete the circuit.

If the stored data is incorrect, you can edit the data using the Frame Relay service provisioning tool, or you can repopulate the database.

You can also verify that the Passport device is running the correct view. If not, you may load and activate a different view. Once the provisioning data is successfully activated, the circuit is deleted from the Administration Database.

## Create Circuit dialog box

You use the Create Circuit dialog box to specify how to apply the connection configuration that you have set up in the Frame Relay service provisioning tool.

The Create Circuit dialog box contains the following panels:

- “Open View panel” (page 64)
- “Apply Options panel” (page 65)
- “Command buttons” (page 66)

### Open View panel

The Open View panel lets you specify the view to which to apply your configuration changes. The Open View panel contains the following options:

- **Current**  
Current copies the current view to the edit view.
- **Committed**  
Committed copies the committed view to the edit view.

- **Edit**  
Edit uses the edit view.
- **Saved**  
Save loads the specified view. If you select Saved, you need to select one of the following options from the drop down list:
  - **User Specified.** When you select User Specified, you need to enter a view file name.
  - **Dated.** When you select dated you need to enter a date in the format <yymmdd>, where yy is the year, mm is the month and dd is the day. When you enter a date, the service data view with the highest version number (nn) is found. When an exact match does not exist, the most recent service data view, relative to the date is used. That is, the dated service data view with the latest date earlier than the given date, and with the latest version number, is opened. For additional information on dated views, see the section Using dated MCFs in 241-6001-304 *Preside MDM Configuration Management for DPN Administrator Guide*. The file must exist on all the Passports being configured

### Apply Options panel

The Apply Options panel lets you specify how to apply the configuration changes. The panel contains the following check boxes.

- **Save**  
Save saves the configuration on the node. The Type dropdown list is enabled and you can select one of the following format options:
  - **portable** saves the view in portable format
  - **delta** saves the view in delta format
  - **ascii** saves the view in ASCII forma

When you select Save, you need to select one to the following options from the drop down list:

- **User Specified.** You need to enter a view file name in the adjacent text box.
- **Dated.** You need to enter a date in the format yymmdd. where yy is the year, mm is the month and dd is the day. When you enter a date, the view is saved with the date followed by the next version number

<nn> in the sequence, in the format <yymmdd><nn>. For example, 03012903. The file is created on all nodes that are being provisioned. For additional information on dated views, see the section “Using dated MCFs” in 241-6001-304 *Preside MDM Configuration Management for DPN Administrator Guide*.

- **Activate**  
Activate activates the configuration changes. The activation is automatically confirmed. If you have configured the system to use an Administration Database, the database is populated with the circuit data.
- **Commit**  
Commit commits the configuration as the default at startup. Commit is enabled only if you have selected Activate.

### Command buttons

The Create dialog box has the following command buttons

- **OK**  
OK begins the provisioning of the configured nodes in the Frame Relay connection and closes the Create Circuit dialog box.
- **Cancel**  
Cancel cancels the creation of the circuit and closes the Create Circuit dialog box.

## Edit Circuit dialog box

Use then Edit Circuit dialog box to indicate how to apply the modifications to a configuration. The Edit Circuit dialog opens when you click Apply in the Frame Relay service provisioning tool main window when you are modifying a configuration.

When you click Apply, the service provisioning tool proceeds to activate the changes on the Passport device, and if successful, stores the provisioning data in the Administration Database.

The Edit Circuit dialog has the following apply options:

- **Save** saves the configuration on the node. When you select the **Save** option, The Type dropdown list is enabled and you can select one of the following format options:

- **portable** saves the view in portable format
- **delta** saves the view in delta format
- **ascii** saves the view in ASCII format

You need to select one of the following options from the drop down list:

- **User Specified.** You need to enter a view file name in the adjacent text box.
- **Dated.** You need to enter a date in the format `yymmdd`, where `yy` is the year, `mm` is the month and `dd` is the day. When you enter a date, the view is saved with the date followed by the next version number `<nn>` in the sequence, in the format `<yymmdd><nn>`. For example, `03012903`. The file is created on all nodes that are being provisioned. For additional information on dated views, see the section “Using dated MCFs” in 241-6001-304 *Preside MDM Configuration Management for DPN Administrator Guide*.
- **Activate** activates the new configuration. The activation is automatically confirmed. If you have installed the Administration Database, the database is populated with the circuit data.
- **Commit** commits the configuration as the default at startup. Commit is disabled until you select Activate so you cannot commit the view without activating the view.

The Edit Circuit dialog has the following command buttons:

- **OK** begins the provisioning of the configured nodes in the Frame Relay connection, and closes the Edit Circuit dialog box.
- **Cancel** cancels the circuit modification action and closes the dialog box.

For the procedure to edit a circuit, see “Editing a Frame Relay circuit” (page 93).

## Delete Circuit dialog box

Use the Delete Circuit dialog box to specify how to apply the deletion of a circuit. The Delete Circuit dialog opens when you select Delete... in the command area of the Frame Relay service provisioning window in a delete circuit action.

The Delete Circuit dialog has the following apply options:

- **Save**  
Save saves the configuration on the node. The Type dropdown list is enabled and you can select one of the following format options:
  - **portable** saves the view in portable format
  - **delta** saves the view in delta format
  - **ascii** saves the view in ASCII format

You need to select one of the following options from the drop down list:

- **User Specified.** You need to enter a view file name in the adjacent text box.
- **Dated.** You need to enter a date in the format yymmdd. where yy is the year, mm is the month and dd is the day. When you enter a date, the view is saved with the date followed by the next version number <nn> in the sequence, in the format <yymmdd><nn>. For example, 03012903. The file is created on all nodes that are being provisioned. For additional information on dated views, see the section “Using dated MCFs” in 241-6001-304 *Preside MDM Configuration Management for DPN Administrator Guide*.
- **Activate** activates the new configuration. The activation is automatically confirmed. If you have installed the Administration Database, the database is populated with the circuit data.
- **Commit** commits the configuration as the default at startup. Commit is disabled until you select Activate so you cannot commit the view without activating the view.

The Delete Circuit dialog has the following command buttons:

- **OK** begins the circuit deletion. The data that is retrieved from the Administration Database is validated against the Passport configuration data. If the data matches, the deletion proceeds. If the component data differs, the differences are reported in the messages window and the circuit deletion does not proceed, and closes the **Create Circuit** dialog.
- **Cancel** cancels the circuit deletion action and closes the Delete Circuit dialog box.

For the procedure to delete a circuit, see “Deleting a Frame Relay circuit” (page 97).

## Dialog boxes for Frame Relay PVCs

The following dialog boxes apply to only Frame Relay PVC circuits:

- “Edit Backup Slave dialog box” (page 69)
- “Customer Search dialog box” (page 70)

## Edit Backup Slave dialog box

The **Edit Backup Slave** dialog lets you create backup slave nodes. **Edit Backup Slave** dialog box opens when you click **Edit Backup** in the **Slave Node** area of a Frame Relay PVC circuit.

The Edit Backup Slave dialog consists of the following elements:

- Backup Slaves table which lists all available backup slaves. You select one to configure or delete. New backup slaves created in this dialog display here. The fields and buttons are described in the **Master Node** area. See “Master panel” (page 42).
- The Backup Slave panel which lets you configure backup slave information. The **New DLCI** field is read only because its value cannot be different from the corresponding data link connection identifier (DLCI) in the **Slave Node** area in the main window. The fields and buttons are described in the **Master Node** area; see “Master panel” (page 42).
- Command buttons:
  - **Add** adds the backup slave configured in this dialog. The backup slave appears in the **Backup Slaves** table.
  - **Modify** allows you to specify a user ID and password during a validate action. During an edit action, the Modify button lets you modify the user ID, password, Node Name, and FrUni/Nni instance.
  - **Delete** deletes the backup slave selected in the **Backup Slaves** table.
  - **OK** saves changes and close the dialog.
  - **Cancel** dismisses the dialog without saving changes.

- **Help** accesses the online help information for the dialog.

For relevant procedures, see “Backup slaves configuration” (page 127).

## Customer Search dialog box

Use the Customer Search dialog box to search for and select a customer for a Frame Relay PVC circuit. You open the Customer Search dialog box by clicking the browse button [...] to the right of the Customer field in the Circuit Properties panel. The dialog box contains the following items:

- The **Filter Customers** panel contains the fields which define the search criteria. By default these fields are populated with the wildcard character (\*). You can search on the following items:
  - **Customer Name**
  - **Business Category**
  - **Country**

Further filtering capabilities are provided by the **default customer** and **ISP customer** check boxes.

This panel contains two command buttons:

- **Retrieve** starts the search and retrieves the Customers that meet the search criteria and displays the results in the List Customers panel.
- **Reset** lets you reset your search criteria.
- The **List Customers** panel displays a list of all the Customers that meet the search criteria. You can select a Customer from the list.
- Command buttons  
The dialog box contains the following command buttons:
  - **OK** closes the dialog box. The Customer field in the Frame Relay service provisioning tool window is populated with the Customer which you selected in the List Customers panel.
  - **Cancel** cancels the search action.

For the procedure to browse for FR PVC customers see “Browsing customers” (page 88).

## Dialog boxes for Frame Relay IP VPN Access

The following dialog boxes support FR IP VPN access circuit types:

- “Browse Customer dialog box” (page 71)
- “Site Search dialog box” (page 72)
- “Browse VRs/VRFs dialog box” (page 73)
- “Available DLCI dialog box” (page 73)
- “Browse FrDte/Remote Group dialog box” (page 75)
- “Browse IpDlciGroup dialog box” (page 75)

### Browse Customer dialog box

Use the Browse Customer dialog boxes to search for and select a customer for a Frame Relay 2547 IP VPN Access circuit. You open the Browse Customer dialog box by clicking the browse button [...] to the right of the Customer field in the Circuit Properties panel.

The Browse Customers dialog box that opens depends on the circuit type. For 2764 circuits, the Browse Customers/VRs dialog box opens and displays those customers that own VPNs. From this dialog box, you can display the VRs of each customer.

VPN for 2547 circuits the Browse Customers/VRFs dialog box opens and displays those customers that own route targets. From this dialog box, you can display the VRFs that have customer route targets.

This panel contains two command buttons:

- **OK** closes the dialog box and populates the service provisioning window with the selected customer, and if selected any VR or VRF.
- **Cancel** cancels the search action.

For the procedure to browse FR IP VPN Access customers, see “Browsing customers” (page 88).

## Site Search dialog box

The Site Search dialog box is used to search for and select a Site for a Frame Relay IP VPN Access circuit. The Site entity is a collection of access points and is stored in the Site table of the MDM Administration Database. You open the Site Search dialog box by clicking the browse button [...] to the right of the Site field in the Circuit Properties panel. The dialog box contains the following items:

- The **Filter Site** panel contains the fields which define the search criteria. By default these fields are populated with the wildcard character (\*). If you have entered a Customer in the Frame Relay service provisioning window, it is used as a search criteria. You can search on the following items:
  - **Customer Name**
  - **Site Name**
  - **Extranet enabled**

This panel contains two command buttons:

- **Retrieve** starts the search and retrieves the Customers that meet the search criteria and displays the results in the List Customers panel.
- **Reset** lets you reset your search criteria.
- The **List Site** panel displays a list of all the Sites that meet the search criteria. You can select a Site from this list.
- Command buttons

The dialog box contains the following command buttons:

- **OK** closes the dialog box. The Site field in the Frame Relay service provisioning tool window is populated with the name of the Site which you selected in the List Sites panel.

If the Site that you have selected is not the same as the one which is entered in the Customer field of the Circuit Properties panel, you are prompted to synchronize them by changing the Customer to that of the Site's Customer.

- **Cancel** cancels the search action.

For the procedure to browse Sites, see “Browsing Sites” (page 114).

## Browse VRs/VRFs dialog box

The Browse VRs dialog box is used to list available VRs for a RFC 2764 Frame Relay IP VPN Access circuits and VRFs for a RFC 2547 IP VPN Access circuits. The dialog box opens when you click the browse button [...] to the right of either the VR or Vrf field in the Frame Relay service provisioning window.

The dialog box contains the following items:

- An **Available VR** list to provide a list of available VRs or Vrfs on the IP VPN Access node
- A status message to indicate to status of the search operation
- Command buttons

The dialog box contains the following command buttons:

- **OK** closes the dialog box and populates the VR/Vrf field in the Frame Relay - Service Provisioning window with the VR/VRF which you selected.
- **Cancel** cancels the browse action.
- **Help** accesses the on-line help for the dialog box

For the procedure to browse for available VRs or VRFs, see “Browsing VRs and VRFs” (page 115).

## Available DLCI dialog box

The Available DLCI dialog box is used to list available DLCIs. The dialog box opens when you right click in a cell in the Media DLCI, IP Service DLCI, or FR Access DLCI columns and select Browse DLCI... from the pop-up menu.

For the FR Access DLCI, the values returned depends on the circuit configuration selected. Refer to the table “Circuit configurations and values returned by the Browse DLCI pop-up menu item” (page 74) for a description of the values returned when you browse each column.

**Table 2**  
**Circuit configurations and values returned by the Browse DLCI pop-up menu item**

Circuit configuration	Column type	Values returned by the Browse DLCI pop-up menu command
FrDte BAckhaul and Direct circuits	IP Service Access DLCI	Unused StaticDlci's of the FrDte.
	FR Access DLCI	Unused Dlci's from the interface selected in the Frame Relay Access Node Properties panel.
Optimized Backhaul	Media DLCI	Unused FrConns of the ipDlciGroup (i.e. Media)
	IP Service DLCI	Unused Dlci's of the interface selected in the IP Service Node Properties.
	Frame Relay Access DLCI	Unused Dlci's of the interface selected in the Frame Relay Access Node Properties panel
Optimized Local*	Media DLCI	Unused FrConn's of the IpDlciGroup (i.e. Media).
	Frame Relay Access DLCI	Unused Dlci's of the interface selected in the Frame Relay Access Node Properties panel
* For 2547 circuits, the Browse FrConn popup is not available in the Media DLCI column. Because the parent component (IpoDlci) is unique for each access point, no FrConn instances are used. All valid DLCI instances are available for use.		

The dialog box contains the following items:

- **Fr Interface** identifies the Frame Relay instance being searched
- The **Available DLCI** list provides a list of available DLCIs for the specified instance
- Command buttons

The dialog box contains the following command buttons:

- **OK** closes the dialog box and populates the VR/Vrf field in the Frame Relay - Service Provisioning window with the VR/VRF which you selected.
- **Cancel** cancels the action.

- **Help** accesses the on-line help for the dialog box

For the procedure to browse available Dlcis see “Browsing DLCIs” (page 116).

## Browse FrDte/Remote Group dialog box

The Browse FrDte/Remote Group dialog box opens when you click the browse button [...] to the right of the FrDte field in the IP Service Node Properties panel for 2764 FrDte Backhaul and FrDte Direct circuit configurations.

The dialog box contains the following elements:

- The **FrDte Instance** panel displays all FrDte instances on the IP Service Node.
- Clicking the **Show** button populates the **RG List** panel with the existing RemoteGroup instances for the selected FrDte instance.
- Command buttons
  - **OK** populates the FrDte field in the IP Service Node Properties panel with the selected FrDte. If you selected the remote group in the RG panel, the RemoteGroup field is also populated. The **Browse** dialog closes.
  - **Cancel** dismisses the dialog. The **FrDte** and **RemoteGroup** fields are unchanged in the main window.
  - **Help** accesses the online help information for the dialog.

For the procedure to browse FrDte and Remote Group instances, see “Browsing FrDte and Remote Group instances for 2764 FrDte circuits” (page 121).

## Browse IpDlcigroup dialog box

The Browse IpDlcigroup dialog box displays a list of the instances of IpDlcigroups on the IP service node. This dialog box opens when you click the browse button [...] to the right of the IpDlcigroup field in the IP Service Node Properties panel for 2764 optimized circuit configurations.

The Browse dialog box has the following elements:

- **Existing IpDlciGroups** list which displays all instances of IpDlciGroups on the IP service node
- Command buttons
  - **OK** copies the selected node into the **Frni | Frnni Instance** field in the main window. The **Browse** dialog closes.
  - **Cancel** dismisses the dialog. The **Frni | Frnni Instance** field is unchanged.
  - **Help** accesses the online help information for the dialog.

For the procedure to browse for IpDlciGroup instances, see “Browsing IpDlciGroup instances for 2764 IP Optimized circuits” (page 120)

## Using the keyboard commands

For Frame Relay service provisioning, you can use the keyboard instead of the mouse to select a menu option. You can also execute a command by using a command accelerator. See the following sections:

- “Mnemonics” (page 76)
- “Command accelerators” (page 77)

### Mnemonics

Every menu option in the menu bar has a mnemonic associated with it. Each mnemonics usually consists of the Alt key followed by the first letter of the menu and the first letter of the menu option.

#### Example

To edit the backup slave using mnemonics, press the Alt key plus the letter E and then the letter Q.

The single character that selects a given menu option is shown by the underscore in the name of the menu’s active name. If there are duplicate options in the same menu, the second capital letter is used. If there are duplicates and no other capital letters in the menu option, the second letter is used.

## **Command accelerators**

The Frame Relay service provisioning tool provides command accelerators to execute menu commands. Each accelerator usually consists of the control key followed by the first letter of the menu option. The command accelerator is shown beside each menu option.

### **Example**

To edit the backup slave using a command accelerator, press the Control key plus the letter B.



---

## Chapter 5

# General procedures

---

This section provides general procedures for using the Frame Relay service provisioning tool.

For procedures that apply to both the FR PVC and FR IP VPN access circuit types, see the following sections:

- “Frame Relay service provisioning tool launch points” (page 81)
  - Starting the Frame Relay service provisioning tool from the Preside MDM window
  - Starting the Frame Relay service provisioning tool from Nodal Provisioning
  - Starting the Frame Relay service provisioning tool from the Network Viewer Start Tool menu
  - Starting the Frame Relay service provisioning tool from the Circuit Viewer Tools menu
  - Starting the Frame Relay service provisioning tool from the MDM Database Administration tool
- “Connecting to a Passport device” (page 87)
- “Browsing customers” (page 88)
- “Browsing nodes” (page 91)
- “Browsing service interfaces” (page 92)
- “Editing a Frame Relay circuit” (page 93)

- “Deleting a Frame Relay circuit” (page 97)
- “Traffic Management procedures” (page 100)
  - “Creating a new Traffic Management profile” (page 101)
  - “Editing a Traffic Management profile” (page 102)
  - “Deleting a Traffic Management profile” (page 103)
- “Applying provisioning changes” (page 104)
  - “Applying the service creation” (page 105)
  - “Applying the service deletion or modification” (page 107)
- “Managing Invalid circuit conditions” (page 109)
  - “Correcting the circuit in the network” (page 111)
  - “Manually deleting a circuit from the network and Administration Database” (page 110)
- “General procedures for Frame Relay IP VPN Access circuits” (page 113)
  - “Browsing Sites” (page 114)
  - “Browsing VRs and VRFs” (page 115)
  - “Browsing DLCIs” (page 116)
  - “Browsing IpDlciGroup instances for 2764 IP Optimized circuits” (page 120)
  - “Browsing FrDte and Remote Group instances for 2764 FrDte circuits” (page 121)
  - “Clearing a row in the End Points table” (page 118)
  - “Selecting a Traffic Management profile” (page 119)
  - “Launching Embedded Nodal Provisioning” (page 122)

## Frame Relay service provisioning tool launch points

You can start the Frame Relay service provisioning tool from various locations in Preside Multiservice Data Manager (MDM). For additional information, see the following sections:

- “Starting the Frame Relay service provisioning tool from the Preside MDM window” (page 82)
- “Starting the Frame Relay service provisioning tool from Nodal Provisioning” (page 83)
- “Starting the Frame Relay service provisioning tool from the Network Viewer Start Tool menu” (page 84)
- “Starting the Frame Relay service provisioning tool from the Circuit Viewer Tools menu” (page 85)

## Starting the Frame Relay service provisioning tool from the Preside MDM window

You can launch the Frame Relay service provisioning tool from the Configuration entry in the Preside Multiservice Data Manager (MDM) toolset window.

### Prerequisites

- you have started Preside MDM and the Preside MDM toolset window is displayed

### Procedure steps

- 1 In the **Preside MDM** window, select **Configuration-> Passport Devices -> Service Provisioning -> Frame Relay**.
- 2 If the **MDM Administration Database** is installed, the database authentication dialog box opens.
- 3 In the **User name** and **Password** fields, enter your database user name and password and click **OK**.

The **Service Provisioning - Frame Relay** window opens.

## Starting the Frame Relay service provisioning tool from Nodal Provisioning

You can access the Frame Relay service provisioning tool from the Nodal Provisioning tool menu bar.

### Prerequisites

- you have opened the Nodal Provisioning tool. See 241-6001-610 *Preside MDM Nodal Provisioning User Guide* for start-up procedures.

### Procedure steps

- 4 In the menu bar of the **Nodal Provisioning** tool main window, select **External Tools -> Service Provisioning -> Frame Relay**.  
  
If the **MDM Administration Database** is installed, the database authentication dialog box opens.
- 5 In the **User name** and **Password** fields, enter your database user name and password.
- 6 Click **OK**.  
  
The **Service Provisioning - Frame Relay** window opens.

## Starting the Frame Relay service provisioning tool from the Network Viewer Start Tool menu

You can launch the Frame Relay service provisioning tool from Network Viewer. When you do, the Network Viewer remains open and you can continue to use it.

### Prerequisites

- you have started Preside MDM and the Preside MDM toolset window is displayed

### Procedure steps

- 1 In the **Preside MDM** window, select **Fault -> Network Viewer**.  
The **Network Viewer** window opens.
- 2 In the **Network Viewer** window, select the nodes required to provision the Frame Relay service by doing one of the following:
  - click on the background of the **Network Viewer** window, drag the mouse and release it when the desired nodes are included in the area where you dragged the mouse
  - press the shift key and click on the nodes that you want to use to create the Frame Relay service
- 3 Click the mouse while holding the shift key and select **Start Tool -> Configuration -> Service Provisioning -> Frame Relay**.
- 4 If the MDM Administration Database is installed, the **MDM Administration Database** authentication dialog box opens.
- 5 In the **User name** and **Password** fields, enter your database user name and password and click OK.

The **Service Provisioning - Frame Relay** main window opens.

If you have selected only one node when you launch the Frame Relay service provisioning tool, that node is the master node.

If you select two nodes, the first selected node is the master. The second selected node is the slave. All the other nodes are unused.

## Starting the Frame Relay service provisioning tool from the Circuit Viewer Tools menu

You can launch the Frame Relay service provisioning tool from the menu bar in Circuit Viewer or from a selected circuit in Circuit Viewer.

### Prerequisites

- you have started Preside MDM and the Preside MDM toolset window is displayed

### Procedure steps

- 1 Open **Circuit Viewer** from the Preside MDM window:

**Fault -> Circuit Viewer**

- 2 From the Circuit Viewer menu bar, select **Tools -> Frame Relay Service Provisioning**, or

Select a circuit, right click on the selected circuit and from the pop-up menu, select **Launch Frame Relay SP**.

- 3 If the MDM Administration Database is installed, the MDM Administration database authentication dialog box opens.

- 4 In the **User name** and **Password** fields, enter your database user name and password and click **OK**.

The **Service Provisioning - Frame Relay** main window opens.

## Starting the Frame Relay service provisioning tool from the MDM Database Administration tool

You can launch the Frame Relay service provisioning tool from the MDM Database Administration tool.

### Prerequisites

- you have started Preside MDM and the Preside MDM toolset window is displayed
- the MDM Administration Database tool must be installed

### Procedure steps

- 1 Open the **MDM Database Administration** tool from the **Preside MDM** window:

**System -> Administration -> MDM Database Administration**

If the **MDM Administration Database** is installed, the **MDM Administration Database** authentication dialog box opens.

- 2 From the **MDM Database Administration** menu bar, select **Tools -> Frame Relay Service Provisioning**.
- 3 In the **User name** and **Password** fields, enter your database user name and password and click **OK**.

The **Service Provisioning - Frame Relay** main window opens.

## Connecting to a Passport device

To specify a user ID and password to login to the Passport device, use the Set Default Authentication dialog box.

### Prerequisites

- You have launched the Frame Relay service provisioning tool.
- You have opened the Set Default Authentication dialog box. This dialog box opens when you select Options -> Set Default Authentication... from the Service Provisioning-Frame Relay menu bar, or as a prompt the first time you perform an action that requires a connection to the Passport node.

### Procedure steps

- 1 In the **Set Default Authentication** dialog box, type a user ID and password.
- 2 Click **OK**.

## Browsing customers

You can browse the customer table in the MDM Administration Database to search for and select a customer of a Frame Relay PVC or 2547 IP VPN Access circuit. Use one of the following procedures:

- “Procedure steps for FR PVC” (page 88)
- “Procedure steps for FR IP VPN Access” (page 90)


### Prerequisites

- the MDM Database is installed
- selected circuit type is FR PVC or FR IP VPN Access
- you have clicked the browse button [...] to the right of the Customer field in the Frame Relay service provisioning tool to open the browse dialog box

### Procedure steps for FR PVC

- 1 By default, the fields in the **Filter Customers** panel, are populated with the wild card character [\*]. You can limit the scope of the search criteria by entering a value in one or more of the following fields:
  - **Customer Name**
  - **Business Category**


- **Country**

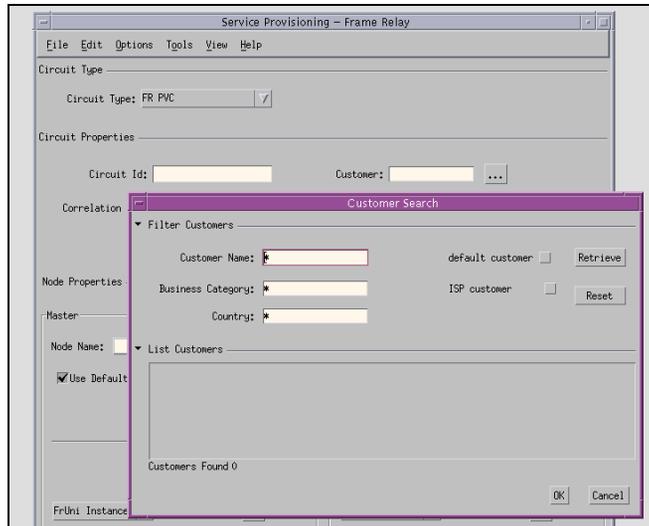

- 2 If required, retrieve the single default customer by selecting the **default customer** check box.
- 3 If required, retrieve the single ISP customer by selecting the **ISP customer** check box.
- 4 Click **Retrieve**.  
The customers that meet the criteria that you specified display in the **List Customers** panel.
- 5 From the list, select the customer and click **OK**.  
The selected customer appears in the **Customer** field in the **Frame Relay- Service Provisioning** window.

## Procedure steps for FR IP VPN Access

- 1 In the **Browse Customer dialog box**, select the customer.

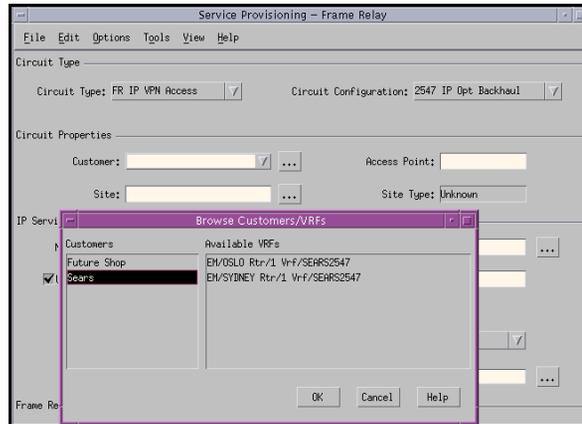

- 2 If required, select an available VR or VRF.
- 3 Click **OK**.

The selected information displays in the **Frame Relay-Service Provisioning** window.

## Browsing nodes

You can search for available Passport nodes and select the desired Passport node from a list of available nodes, using Browse Nodes dialog box.

### Prerequisites

- you have clicked the browse nodes [...] button to the right of the Node Name field.

### Procedure steps

- 1 In the **Browse Nodes** dialog box, enter the search criteria, or use the wild card character (\*) to search for all nodes.
- 2 Optionally, change the number of instances to retrieve. The default is 100.
- 3 Click **Search**.  
The Passport devices that match the search criteria are listed in the **Search Results** panel.
- 4 Select a device from the list.
- 5 Click **OK** to populate the **Node Name** field in the **Service Provisioning - Frame Relay** window.

## Browsing service interfaces

You can search for and select a Frame Relay user-to-network interface|network-to-network interface and/or a data link connection identifier (DLCI) from a list of available interfaces and identifiers on a selected Passport node.

### Prerequisites

- you have specified a Passport node in the Node Name field
- you have logged into the Passport. See “Connecting to a Passport device” (page 87)

### Procedure steps

- 1 Click the browse [...] button to the right of the Fruni|Frnni Instance field.  
The **Browse Service Interfaces** dialog box opens and displays a list that contains the following information:
  - all Frame Relay user-to-network interface (Fruni) or Frame Relay network-to-network interface (Frnni) instances
  - the Data Network Address (DNA) value for the corresponding Fruni|Frnni instance
  - the port interface for the corresponding Fruni|Frnni instance (for backhaul configurations only)
- 2 Select a Fruni|Frnni instance.
- 3 For FR PVC circuit searches, click **Show** to populate the **Unassigned DLCI** area with the existing Data Link Connection Identifiers for the selected Frame Relay Fruni|Frnni.
- 4 Click **OK** to populate the Fruni|Frnni Instance field in the Frame Relay - Service Provisioning window.

## Editing a Frame Relay circuit

Use this procedure to modify a Frame Relay PVC or IP VPN Access circuit that is stored in the MDM Administration Database.

You can use the Circuit Viewer tool to select the circuit that you want to retrieve. Selecting a circuit in Circuit Viewer puts the circuit in context. The Frame Relay tool gets the circuit from context and populates the relevant fields with circuit data. For IP VPN Access circuits, an access point can have four CoS indexes with each index having one circuit. When you select a CoS circuit in the Circuit Viewer tool, the Frame Relay tool searches for the parent access point and retrieves all circuits belonging to that access point.

### Procedure steps

- 1 You can use the Circuit Viewer tool or the Frame Relay service provisioning tool to specify the circuit that you want to edit. Use one of the following methods:
  - From Circuit Viewer, retrieve a circuit from the MDM Administration Database and then start the Frame Relay service provisioning tool in context. For details, see 241-6001-011 *Preside MDM Fault Management User Guide*.
  - If you want to use the Frame Relay service provisioning tool, start the procedure at step 2.
- 2 From the Frame Relay service provisioning **File** menu, select **Edit Circuit...**  
The **Edit Circuit** retrieval dialog box opens.
- 3 If you used the Circuit Viewer method to specify a circuit, the **Edit Circuit** retrieval dialog box identifies the circuit that you want to edit. Go to step 5.  
**Note:** You can change your selection by selecting another circuit in Circuit Viewer and then right-clicking in any of the fields in the **Edit Circuit** dialog box to open a pop-up menu. From the pop-up menu, select **Get Context**.
- 4 Specify the Frame Relay circuit that you want to retrieve.  
For Frame Relay PVC circuits
  - Click **FR PVC Circuit**.
  - In the **Circuit Id** box, type the circuit identifier. If you do not know the circuit identifier, you can type an asterisk (\*) to retrieve a list of circuits from which you can make a selection.

For Frame Relay IP VPN Access circuits

- Click **FR IP Access Circuit**.
- In the **Customer**, **Site**, and **Access Point** boxes, type the appropriate values. If you do not know the customer, site, or access values, you can type an asterisk (\*) in any of these boxes to display a list of circuits from which you can make a selection.

**5** Click **Retrieve**.

If the retrieval is successful, the circuit data displays in the Frame Relay service provisioning window. All fields are in read-only mode. The **Validate** button is enabled and the **Apply** button is disabled. The **Edit Circuit** circuit retrieval dialog box closes.

If more than one circuit meets the criteria, a dialog box opens and lists all the circuits that meet the criteria. Select a circuit from the list, and click **OK**.

If the circuit is not found, a message dialog box opens and the **Edit Circuit** retrieve dialog box remains open.

**6** If you have not yet authenticated to the Passport device, select **Options** -> **Set Default Authentication** to open the **Set Default Authentication** dialog box.


**7** In the **Set Default Authentication** dialog, type a user ID and password to connect to the Passport devices in the PVC or IP VPN path and click **OK**.

**8** To validate the data retrieved from the **Administration Database** against the current Passport configuration data, click **Validate**.

The **Apply** button, and all fields except the **User Id** and **Password** fields are disabled during the validate. If the data matches, the applicable fields and the **Apply** button become enabled (read-write) after which you can proceed to edit the circuit configuration. Proceed to step 9.

If the validation fails because the circuit in the Administration Database is invalid, this information is logged in the **Service Provisioning Frame**

**Relay Real Time Log Display** window. This indicates that one or more of the provisioned components no longer exist in the network.

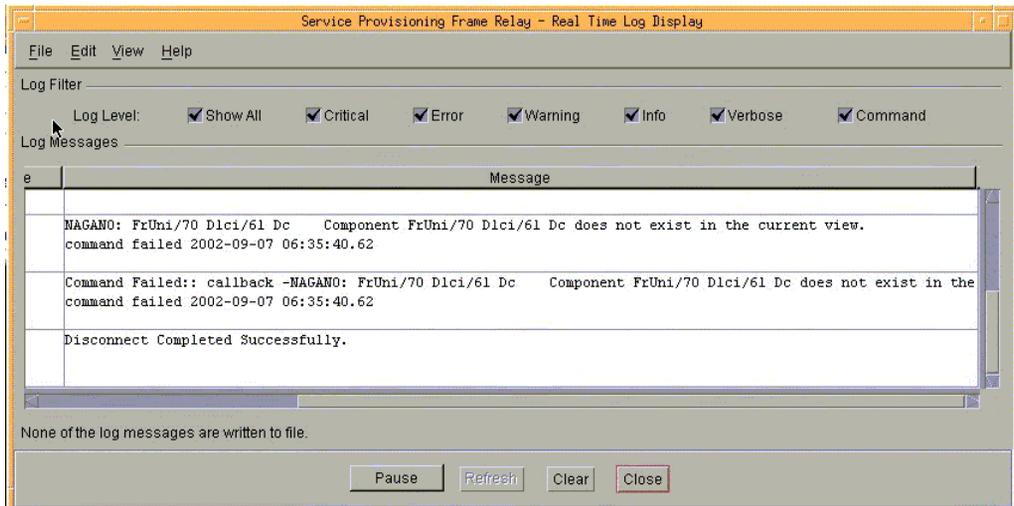

The delete action does not proceed.

Refer to “Managing Invalid circuit conditions” (page 109) for the procedure to correct an invalid circuit condition.


- 9 After a successful validation, you can make the necessary changes to the configuration data from the Frame Relay service provisioning window.
- 10 When you complete your modifications, click **Apply**.

The Frame Relay service provisioning tool checks if any mandatory configuration data is missing or if discrepancies exist. If so, a dialog opens identifying the missing information or discrepancy. Enter the missing information or correct any discrepancies and click **Apply** again.

If all required data has been entered, a confirmation dialog box opens summarizing the changes made to the circuit.

- 11 Click **OK** to confirm the circuit changes before they are applied.

- 12 The **Edit Circuit** dialog box opens.

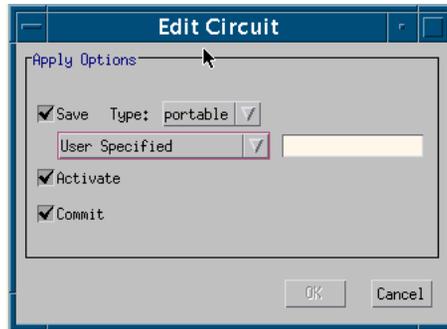

- 13 Proceed to apply the configuration, see “Applying the service deletion or modification” (page 107).

## Deleting a Frame Relay circuit

Use this procedure to delete an existing Frame Relay PVC or IP VPN Access circuit that is stored in the Administration Database.

You can use the Circuit Viewer tool to select the circuit that you want to delete. Selecting a circuit in Circuit Viewer puts the circuit in context. The Frame Relay tool gets the circuit from context. For IP VPN Access circuits, an access point can have four CoS indexes with each index having one circuit. When you select a CoS circuit in the Circuit Viewer tool, the Frame Relay tool searches for the parent access point and retrieves all circuits belonging to that access point.

### Procedure

- 1 You can use the Circuit Viewer tool or the Frame Relay service provisioning tool to specify the circuit that you want to delete. Use one of the following methods:
  - From Circuit Viewer, retrieve a circuit from the MDM Administration Database and then start the Frame Relay service provisioning tool in context. For details, see 241-6001-011 *Preside MDM Fault Management User Guide*.
  - If you want to use the Frame Relay service provisioning tool, start the procedure at step 2.
- 2 From the Frame Relay service provisioning **File** menu, select **Delete Circuit...**

The **Delete Circuit** retrieval dialog box opens.
- 3 If you used the Circuit Viewer method to specify a circuit, the **Delete Circuit** retrieval dialog box identifies the circuit that you want to delete. Go to step 5.

**Note:** You can change your selection by selecting another circuit in Circuit Viewer and then right-clicking in any of the fields in the **Delete Circuit** dialog box to open a pop-up menu. From the pop-up menu, select **Get Context**.
- 4 Specify the Frame Relay circuit that you want to retrieve.

For Frame Relay PVC circuits

  - Click **FR PVC Circuit**.

- In the **Circuit Id** box, type the circuit identifier. If you do not know the circuit identifier, you can type an asterisk (\*) to retrieve a list of circuits from which you can make a selection.

For Frame Relay IP VPN Access circuits

- Click **FR IP Access Circuit**.
- In the **Customer**, **Site**, and **Access Point** boxes, type the appropriate values. If you do not know the customer, site, or access values, you can type an asterisk (\*) in any of these boxes to display a list of circuits from which you can make a selection.

**5** Click **Retrieve**.

If the retrieval is successful, the circuit data displays in the Frame Relay service provisioning window. All fields are in read-only mode. The **Delete** button is enabled. The **Delete Circuit** circuit retrieval dialog box closes.

If more than one circuit meets the criteria, a dialog box opens and lists all the circuits that meet the criteria. Select a circuit from the list, and click **OK**.

If the circuit is not found, a message dialog box opens and the **Delete Circuit** retrieve dialog box remains open.

**6** If you have not yet authenticated to the Passport device, select **Options** - > **Set Default Login** to open the **Set Default Authentication** dialog box.

**7** Type a user ID and password to connect to the Passport devices in the PVC path and click **OK**.


**8** Click **Delete**.

The **Delete Circuit** dialog box opens.

Before performing the deletion, the data that was retrieved from the **Administration Database** is validated against the current view on the Passport device. If successful, proceed to step 6.

If the validation fails because the circuit in the Administration Database is invalid, this information is logged in the **Service Provisioning Frame**

**Relay Real Time Log Display** window. This indicates that one or more of the provisioned components no longer exist in the network.

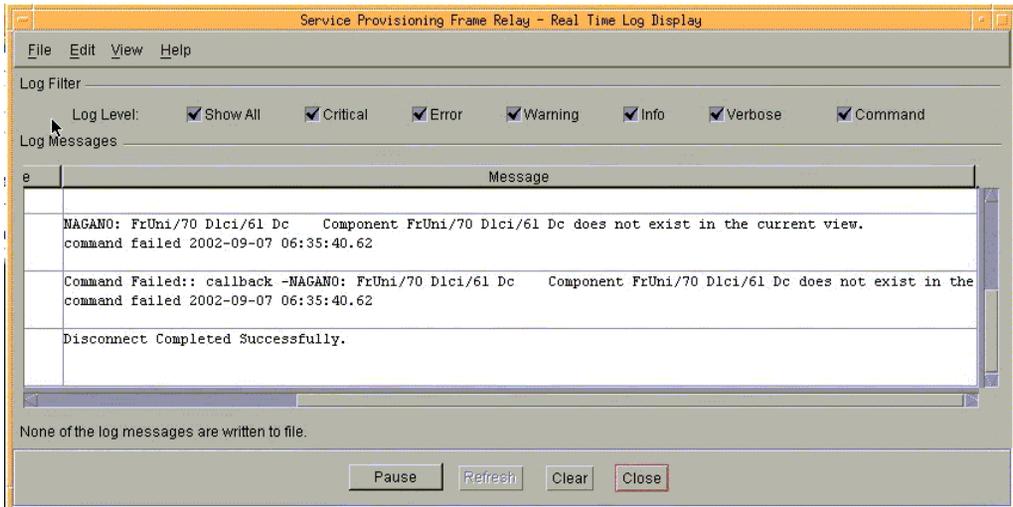

The delete action does not proceed.

Refer to “Managing Invalid circuit conditions” (page 109) for the procedure to correct an invalid circuit condition.

- 9 In the **Delete Circuit** dialog box, specify how to apply the deletion of the circuit. For the procedure to apply a deletion, see “Applying the service deletion or modification” (page 107).

## Traffic Management procedures

See the following sections for traffic management (TM) procedures:

- “Creating a new Traffic Management profile” (page 101)
- “Editing a Traffic Management profile” (page 102)
- “Deleting a Traffic Management profile” (page 103)

## Creating a new Traffic Management profile

You can create and save a new Traffic Management profile. The default profile, named default, is available as a starting point. It cannot be deleted but it can be modified.

### Prerequisites

- the Frame Relay service provisioning tool main window is open

### Procedure steps

- 1 Click **Edit TM...** in the main window of the Frame Relay service provisioning tool for Frame Relay PVC circuits, or select **Edit TM...** from the pop-up menu in the **TM Profile** column of the **End Points** table for Frame Relay IP VPN Access circuits

The **Traffic Management Parameters** dialog box opens.

- 2 Type a new Traffic Management Profile name in the **TM Profile** field.
- 3 Complete all the fields in the Master Node area.

**Note:** The default values shown were defined on the Passport switch.

- 4 Click the **Use same values** check box to use the same values in the **Slave Node** area as the **Master Node** area. All fields in the **Slave Node** area become read only and the system uses the values set in the **Master Node** area for both sides of the PVC connection.  
To use different values, edit the fields as needed.
- 5 Click **Apply and Save** to save the profile.
- 6 Click **Close** to close the dialog.

The **TMPProfile** field on the main window is populated with the new profile name.

## Editing a Traffic Management profile

You can edit the Traffic Management profile and apply the changes with or without saving the profile.

### Prerequisites

- the Frame Relay service provisioning tool main window is open

### Procedure steps

- 1 Click **Edit TM...** in the main window of the Frame Relay service provisioning tool for Frame Relay PVC circuits, or select **Edit TM...** from the pop-up menu in the **TM Profile** column of the **End Points** table for Frame Relay IP VPN Access circuits

The **Traffic Management Parameters** dialog box opens.

- 2 Select a traffic management profile in the **TM Profile** field.
- 3 Edit the fields as needed. Deselect the **Use same values as** master check box to edit the values in the **Slave Node** area.
- 4 If you want to apply the changes without saving the profile, click **Apply**.

Because this action does not save the file, the file name will have an asterisk (\*) to signify that you must click Apply and Save to save it to file. The TM profile is stored in the Administration Database as "custom". These changes will be lost when you exit the application.

If you want to apply the changes and save the profile, click **Apply** and **Save**.

- 5 Click **Close** to close the dialog.

The **TM Profile** field in the main window is populated with the profile name from the dialog. The modified and saved TM profile is stored in the Administration Database.

If you use the same file name when you save the TM profile, the profile is stored in the Administration Database with the same name as before but the parameters have the new values.

If you changed the name of the TM profile by typing a new name in the TM Profile List field, the TM profile is stored in the Administration Database with the new name.

## Deleting a Traffic Management profile

You can delete any Traffic Management (TM) profile, except the default profile named default.

### Prerequisites

- the Frame Relay service provisioning tool main window is open

### Procedure steps

- 1 Click **Edit TM...** in the main window of the Frame Relay service provisioning tool for Frame Relay PVC circuits, or select **Edit TM...** from the pop-up menu in the **TM Profile** column of the **End Points** table for Frame Relay IP VPN Access circuits

The **Traffic Management Parameters** dialog box opens.

- 2 Select the TM profile in the **TM Profile** field.
- 3 Click **Delete** to delete the profile.

## Applying provisioning changes

See the following sections to apply provisioning changes:

- “Applying the service creation” (page 105)
- “Applying the service deletion or modification” (page 107)

## Applying the service creation

After you create a circuit, you need to apply the configuration changes. The Frame Relay service provisioning tool begins the apply process by provisioning any Passport devices that have been affected. Following the provisioning, the new provisioning data is stored in the MDM Administration Database. The modified circuit can be monitored from the Circuit Viewer tool.

### Prerequisites

- you have entered all mandatory data required to create a circuit
- you have set the default Passport login. See “Connecting to a Passport device” (page 87)
- you have clicked **Apply...** in the Frame Relay service provisioning tool main window to open the **Create Circuit** dialog box.

### Procedure steps

- 1 In the **Open View** panel of the **Create Circuit** dialog box, select the view to which you want to apply the configuration changes:
  - Click **Current** to copy the current view into the edit view.
  - Click **Committed** to copy the saved version of the current view into the edit view.
  - Click **Edit** to use the existing edit view.
  - Click **Saved** and then select either **User Specified** or **Dated** from the drop down list.

If you select **User Specified**, enter a file name in the adjacent text box.

If you select **Dated**, enter a date in the format *yyymmdd*. where *yy* is the year, *mm* is the month and *dd* is the day. When you enter a date, the service data view with the highest version number *<nn>* is found. When an exact match does not exist, the most recent service data view, relative to the date is used. That is, the dated service data view with the latest date earlier than the given date, and with the latest version number, is opened. For additional information on dated views, see the section Using dated MCFs in 241-6001-304 *Preside MDM Configuration Management for DPN Administrator Guide*.

- 2 To save the configuration, in the **Apply Options** panel, select **Save**.
- 3 From the **Type** dropdown list, select one of the following format options:
  - **portable** saves the view in portable format
  - **delta** saves the view in delta format
  - **ascii** saves the view in ASCII format
- 4 From the drop down list, select one of the following options:
  - **User Specified**. Enter a view file name in the adjacent text box.
  - **Dated**. Enter a date in the format `yymmdd`. where `yy` is the year, `mm` is the month and `dd` is the day. When you enter a date, the view is saved with the date followed by the next version number `<nn>` in the sequence, in the format `<yymmdd><nn>`. For example, `03012903`. The file is created on all nodes that are being provisioned. For additional information on dated views, see the section "Using dated MCFs" in 241-6001-304 *Preside MDM Configuration Management for DPN Administrator Guide*.
- 5 To activate the new configuration, select **Activate**.  
The activation is automatically confirmed. If you have configured the system to use an Administration Database, the database is populated with the circuit data.
- 6 To commit the configuration as the default on startup, select **Commit**. You must have selected **Activate** before you can select the **Commit** option.
- 7 Click **OK to** initiate the provisioning of the configured nodes in the Frame Relay connection, and close the **Create Circuit** dialog.

Provisioning information and error messages, if any, appear in the **Real Time Log Display** window while the connection is being set up.

## Applying the service deletion or modification

After you modify or delete a circuit, you need to apply the configuration changes. The Frame Relay service provisioning tool begins the apply process by re-provisioning any Passport devices that have been affected by the changes. Following the re-provisioning, the new provisioning data is stored in the Administration Database. The modified circuit can be monitored from the Circuit Viewer tool.

### Prerequisites

- you have modified the configuration of the circuit or modified node attributes. See “Editing a Frame Relay circuit” (page 93) or “Deleting a Frame Relay circuit” (page 97)
- you have set the default Passport login. See “Connecting to a Passport device” (page 87)
- you have clicked Apply... to open the Edit Circuit dialog box, or Delete... to open the Delete Circuit dialog box

### Procedure steps

- 1 For an edit circuit action, an **Edit Circuit** dialog box opens after you click Apply.

For a circuit deletion, the **Delete Circuit** dialog box opens.

If mandatory data is missing, a message dialog opens specifying the missing data. Return to step 1 and enter the missing data.

- 2 In the **Edit Circuit** or **Delete Circuit** dialog box, click **Save**.
- 3 From the **Type** drop down list, select one of the following format options:
  - **portable** saves the view in portable format.
  - **delta** saves the view in delta format
  - **ascii** saves the view in ASCII format
- 4 From the drop down list, select one of the following options:
  - **User Specified**. Enter a view file name in the adjacent text box.
  - **Dated**. Enter a date in the adjacent text field. Use the format `yymmdd`, where `yy` is the year, `mm` is the month and `dd` is the day. When you enter a date, the view is saved with the date followed by the next version number `<nn>` in the sequence, in the format

<yymmdd><nn>. For example, 03012903. The file is created on all nodes that are being provisioned. For additional information on dated views, see the section “Using dated MCFs” in 241-6001-304 *Preside MDM Configuration Management for DPN Administrator Guide*.

- 5 Select **Activate** to activate the new configuration.

The activation is automatically confirmed. If you have configured the system to use an **Administration Database**, the database is populated with the circuit data.

The new configuration view is activated on the Passport device and once it is successfully activated, it is saved to the **Administration Database**.

- 6 To commit the configuration as the default at startup, select **Commit**. You need to select the **Activate** option before you can select the **Commit** option.
- 7 Click **OK**.

## Managing Invalid circuit conditions

Use the following procedures to resolve an invalid circuit condition. An invalid circuit condition may occur in the following circumstances:

- the Administration Database is not synchronized with the network
- erroneous provisioning changes have occurred in the network

To resolve an invalid circuit condition, you can take the following actions:

- remove the circuit from both the database and the network by using one of the following procedures:
  - reload the affected nodes into the Administration Database. For the relevant procedure, refer to 241-6001-400 *Preside MDM Administration Database User Guide*.
  - manually remove the circuit from both the Administration Database and the network. See “Manually deleting a circuit from the network and Administration Database” (page 110).
- resolve the circuit in the network so that it aligns with the Administration Database. This is achieved by provisioning the missing pieces in the network. See “Correcting the circuit in the network” (page 111).

## Manually deleting a circuit from the network and Administration Database

You can manually remove an invalid circuit from both the Administration Database and the network.

### Procedure steps

- 1 Before deleting the circuit from the Administration Database, determine if there are any components of the circuit still provisioned in the network.

To identify data still provisioned in the network, you need to locate the invalid circuit using the **Circuit Viewer** tool. Refer to the Circuit Viewer section in 241-6001-011 *Preside MDM Fault Management User Guide* for procedures to use the **Circuit Viewer** tool.

- a. Open **Circuit Viewer** and locate the invalid circuit using the **Circuit Retrieval Criteria** panel.
- b. From the **Circuit(s) found** list, select the circuit.
- c. Right-click on the circuit and from the pop-up menu, select **Start State Polling**.
- d. In the **Circuit details** panel, select the **Circuit components** tab.

The state of all components is displayed in the **State** column. Components that are marked “purple” no longer exist in the network. All other components, independent of the state reported, exist in the network.

- 2 Manually delete all DLCI components using one of the following methods:

**Note:** You need to log into each node on which components for the circuit exist, check for the presence of the components, and delete each component found. Once all necessary components on a given node are deleted, you need to activate the view

- the delete component capability of the Nodal Provisioning tool. Refer to 241-6001-610 *Preside MDM Nodal Provisioning User Guide* for the relevant procedure.
- the Passport command line interface via telnet

- 3 Once the circuit is completely removed from the network, use the Database Administration tool to delete the circuit from the Administration Database. For the relevant procedure, refer to 241-6001-400 *Preside MDM Administration Database User Guide*.

## Correcting the circuit in the network

You can resolve an invalid circuit condition by aligning the circuit in the network with the MDM Administration Database. This is achieved by provisioning the missing pieces in the network.

### Procedure steps

- 1 Before correcting the circuit in the network to align with the Administration Database, determine which components are missing and if there are any components of the circuit still provisioned in the network.

To identify data still provisioned in the network, you need to do the following tasks:

- Open the Frame Relay service provisioning tool to view the components of the circuit (for instance, its interfaces and circuit pieces). These components can span several nodes.
  - log into each participating node and check for the presence of the components. This can be done using either the Nodal Provisioning tool (see 241-6001-610 *Preside MDM Nodal Provisioning User Guide*) or Passport command line interface via telenet.
- 2 Once you have determine which components are missing, use one of the following methods to correct the circuit in the network:
    - reload views onto the nodes that are improperly configured. You can only use this approach if the provisioning error was a result of an incorrect view being loaded onto a node. Although MDM does not provide a system that provides history of views loaded onto the nodes in the network, there are several MDM tools that can assist in this process. including the Configuration Repository and the Network Reporting System. For information on these tools, see 241-6001-400 *Preside MDM Administration Database User Guide* and 241-6001-022 *Preside MDM Network Reporting System User Guide*. Once you have made the network corrections, you can use the service provisioning tool to validate the circuit. It will mark the circuit as “Normal” in the Administration Database so it becomes manageable.
    - delete the circuit from both the Administration Database and the network and reprovision the entire circuit. You need to use this approach when the provisioning cannot be corrected by reloading the views onto the nodes. First record the nodes, interfaces, connection components (VPC/VCC, DLCI), customer, and traffic management profiles using the procedures described in step 1. Then follow the

procedure "Manually deleting a circuit from the network and Administration Database" (page 110) to delete the circuit. Once the circuit is deleted, you can use the service provisioning tool to provision the circuit, using the information that you recorded.

## General procedures for Frame Relay IP VPN Access circuits

The following procedures apply to all circuit configurations for Frame Relay IP VPN access.

- “Browsing Sites” (page 114)
- “Browsing VRs and VRFs” (page 115)
- “Browsing DLCIs” (page 116)
- “Browsing IpDlciGroup instances for 2764 IP Optimized circuits” (page 120)
- “Browsing FrDte and Remote Group instances for 2764 FrDte circuits” (page 121)
- “Clearing a row in the End Points table” (page 118)
- “Selecting a Traffic Management profile” (page 119)
- “Launching Embedded Nodal Provisioning” (page 122)

See also “Frame Relay circuits with IP access for 2547 VPNs” (page 131) for procedures specific to provisioning RFC 2547 Frame Relay with IP access, and “Frame Relay circuits with IP access for 2764 VPNs” (page 139) for procedures specific to provisioning RFC 2764 Frame Relay with IP access.

## Browsing Sites

You can browse the site table in the MDM Administration Database to search for and select a Site for a Frame Relay IP VPN Access circuit.

### Prerequisites

- the MDM Administration Database is installed
- you have clicked the browse button [...] to the right of the Site field in the Frame Relay service provisioning tool to open the Site Search dialog box

### Procedure steps

- 1 In the **Filter Site** panel, enter the search criteria by completing one or more of the following fields:
  - **Customer Name**, if required. If you entered a customer on the service provisioning window, the Site Search dialog opens with the selected customer in the Customer Name field.
  - **Site Name**. The site name must be unique for the customer. To add a description for the site, use the MDM Database Administration tool.

By default these fields are populated with the wild card character [\*].

- 2 Click **Retrieve**.
- 3 The sites that meet the criteria that you specified are listed in the **List Sites** panel.
- 4 Select the Site and click **OK**.

The selected Site appears in the **Site** field in the **Service Provisioning - Frame Relay** window.

## Browsing VRs and VRFs

On the 2764 VPN circuit configurations, you can browse for Virtual Routers (VRs) available on the IP Service Node. Similarly, for 2547 VPNs you can search for available Virtual Routing Functions (VRFs) available on the IP Service Node.

### Prerequisites

- you have clicked the browse button [...] to the right of the VR/Vrf field in the IP Service Node Properties panel
- the VR or VRF must be present on the Passport device. If the VR or VRF is not present on the Passport device, an error will occur at apply time.

### Procedure steps

- 1 The **Browse VRs** dialog box opens with a list of available VRs or Vrfs.
- 2 Select a VR or Vrf from the list and click **OK**.

The VR/Vrf field in the Frame Relay - Service Provisioning window is populated with the selected VR/Vrf.

## Browsing DLCIs

You can browse for available DLCIs from the Frame Relay Access DLCI, the IP Service DLCI, or Media DLCI columns in the End Points table of Frame Relay IP VPN Access circuits.

When browsing for unassigned DLCIs, the DLCI's already entered are considered used and, therefore, do not appear in the unassigned list.

The following values are returned when browsing DLCIs from various columns:

- For FrDte circuit configurations:
  - browsing the IP Service DLCI column, unused StaticDlci's of the FrDte
  - browsing the FR Access DLCI column, unused Dlci's from the interface selected in the Frame Relay Access Node Properties panel
- Optimized Backhaul
  - browsing the Media DLCI column, unused FrConn's of the ipDlciGroup (i.e. the Media)
  - browsing the IP Service DLCI column, unused Dlci's of the interface selected in the IP Service Node Properties panel
  - browsing the FR Access DLCI column, unused Dlci's from the interface selected in the Frame Relay Access Node Properties panel
- Optimized Local
  - browsing the Media DLCI column, unused FrConn's of the ipDlciGroup (i.e. the Media)
  - browsing the FR Access DLCI column, unused Dlci's from the interface selected in the Frame Relay Access Node Properties panel

### Procedure steps

- 1 Right-click an entry in a DLCI column and select the **Browse DLCI...** pop-up menu item.  
The **Browse DLCI** dialog box opens with a list of available DLCIs.
- 2 Select a DLCI from the list, and click **OK**.

The column field in the End Points table, is populated with the selected DLCI.

## Clearing a row in the End Points table

Clearing a row in the End Points table of Frame Relay IP VPN Access circuits removes the content from the row.

### Procedure steps

- 1 Right-click in a cell in the **CoS Index** column of the **End Points** table.
- 2 Select **Clear Row** from the pop-up menu.

All the fields in the row are cleared.

## Selecting a Traffic Management profile

You can select a Traffic Management (TM) Profile from the TM Profile column in the End Points table of Frame Relay IP VPN Access circuits.

### Procedure steps

- 1 Left-click in a cell in the **TM Profile** column of the **End Points** table.  
A drop down list of available TM profiles opens.
- 2 Select a TM profile from the list.

## Browsing IpDlciGroup instances for 2764 IP Optimized circuits

You can browse for available media on the IP Service Node for the 2764 IP Optimized Local and IP Optimized Backhaul circuit configurations. The media for the 2764 IP Optimized circuits is the IpDlciGroup component.

### Prerequisites

- you have clicked the browse button [...] to the right of the IpDlciGroup field in the IP Service Node panel to open the browse dialog box

### Procedure steps

- 1 The browse dialog box, shows a list of the instances of the IpDlciGroup that are on the IP Service Node.
- 2 Select an instance, and click OK.

The IpDlciGroup field in the IP Service Node panel is populated with the selected IpDlciGroup instance.

## Browsing FrDte and Remote Group instances for 2764 FrDte circuits

You can browse for the FrDte instance and/or available media on the IP Service Node for the 2764 FrDte Direct and FrDte Backhaul circuit configurations using the Browse FrDte/Remote Group dialog box. The media for 2764 FrDte circuits is the remoteGroup component and it is created under the FrDte when you apply the provisioning.

### Prerequisites

- you have clicked the browse button [...] to the right of the FrDte field in the IP Service Node panel to open the Browse FrDte/Remote Group dialog box

### Procedure steps

- 1 The **Browse FrDte/Remote Group** dialog box, is populated with a list of FrDte instances that are on the IP Service Node.
- 2 If only a FrDte is desired, select an instance from the **FrDte Instance** list, and click **OK** to populate the **FrDte** field in the **IP Service Node** panel with the selected FrDte instance.

If both a FrDte instance and media are desired, proceed to step 3.

- 3 Select the FrDte instance from the **FrDte Instance** list and click **Show** to retrieve a list of remoteGroup instances. They are listed in the **RG List**.
- 4 Select an entry from the **RG List**.
- 5 Click **OK** to populate the **FrDte** and **Remote Group** fields in the **IP Service Node** panel with the selected FrDte instance and Remote Group.

## Launching Embedded Nodal Provisioning

After provisioning a circuit, you can launch Embedded Nodal Provisioning (ENP) from the Frame Relay service provisioning tool, in context of the Interface or Logical Interface which you have created. This enables you to edit the interface.

### Prerequisites

- you have successfully applied the provisioning and the Logical Interface or Interface component has been created. Clearing or changing the Logical Interface field after a successful apply will disable the launch point.

### Procedure steps

- 1 Use one of the following methods to start Embedded Nodal Provisioning from the Frame Relay service provisioning tool:
  - From the **Edit** menu, select **Edit Interface**.
  - In the **IP Service Node Properties** panel, right-click the **Interface** or **Logical Interface** field to open a pop-up menu. From the pop-up menu, select **Edit Interface**.

## Chapter 6

# Frame Relay PVC provisioning

---

This section provides procedures to provision a Frame Relay permanent virtual circuit (PVC) user-to-network interface or network-to-network interface between two or more Passports. See the following sections:

- “Prerequisites” (page 123)
- “Provisioning a Frame Relay PVC path” (page 124)
- “Backup slaves configuration” (page 127)
  - “Adding a backup slave” (page 128)
  - “Editing a backup slave” (page 129)
  - “Deleting a backup slave” (page 130)

### Prerequisites

- the Passports to be provisioned are configured for Frame Relay up to the logical connection layer. For more information, see “Passport configuration” (page 27).

## Provisioning a Frame Relay PVC path

Use this procedure to provision a Frame Relay permanent virtual circuit (PVC) path. If the MDM Administration Database is installed, completing this procedure stores the following information in the database:

- circuit ID
- customer name
- TM profile
- source and destination nodes
- frunis or frnnis, depending on settings for master and slave instance type
- port identifiers
- DNA values
- DLCIs
- multiple slave backups, if backups are added

### Prerequisites

- you are familiar with the Frame Relay service provisioning tool interface. See “Frame Relay service provisioning tool user interface” (page 35).
- you have read the section “General procedures” (page 79) describing general procedures for using the Frame Relay service provisioning tool
- you have started the Frame Relay service provisioning tool. See “Frame Relay service provisioning tool launch points” (page 81).
- if the MDM Administration Database is installed, you have logged into the database

### Procedure steps

- 1 From the **File** menu, select **New Circuit...** .
- 2 Ensure that Circuit Type is FR PVC.
- 3 Select **Options -> Set Default Authentication...** to set the default login to connect to the Passport nodes:
- 4 In the **Set Default Authentication** dialog box, specify a user ID and password and click **OK**.

- 5 From the **TM Profile** list, select a profile in the TM Profile to be used in the Frame Relay permanent virtual circuit (PVC).  
**Note:** To create or edit a TM, see “Creating a new Traffic Management profile” (page 101), or “Editing a Traffic Management profile” (page 102).
- 6 In the **Correlation Tag** field, type a correlationTag. If you have installed the MDM Administration Database you can select the **Use Circuit Id** option to set the value of the correlationTag to the value of the circuit ID. The correlation tag is only 32 bytes, so if you use the circuit ID, you need to limit the allowed 128 byte circuit ID to 32 bytes. If you have selected **Use Circuit Id** and more than 32 characters are entered in the **Circuit Id** field, the correlation tag on the Passport device is set to the first 32 characters.
- 7 If you have installed the MDM Administration Database, also complete the following fields:
  - In the **Circuit ID** field, type a circuit ID number. The maximum length of a circuit ID is 32 characters.
  - In the **Correlation Tag** field, type a correlationTag, or
  - In the **Customer** field, enter a customer name or click the browse [...] button to select a customer.
- 8 In the **Master Node** panel, provide a value in the **Node Name** field by one of the following methods:
  - type a node name
  - select a node name from the drop-down list
  - click the browse [...] button and use the Browse Nodes dialog box to search for and select a node. See “Browsing nodes” (page 91) for information.
- 9 Provide a value in the **User Id** and **Password** fields by one of the following ways:
  - Deselect Use Defaults and enter the user ID and password.
  - Select **Use Defaults** to use the default user ID and password. The User Id and Password fields are disabled.
- 10 In the **Type** field drop-down list, select the desired type of Frame Relay service: user-to-network (FR UNI) or network-to-network (FR NNI).

- 11 In the **Fruni | Frnni Instance** field, select either Fruni, data network address (DNA) or port interface and provide a value by one of the following ways:
  - Enter the value.
  - Click **Browse** to select from a list. For more information, see “Browsing service interfaces” (page 92).
- 12 Repeat steps 8-11 in the **Slave Node** panel.
- 13 To create a backup for the Frame Relay connection, click **Edit Backup** in the **Slave Node** area.  
See “Edit Backup Slave dialog box” (page 69) for more information.
- 14 When you have entered all of the required information, click **Apply...** to open the **Create Circuit** dialog box. See “Applying the service creation” (page 105).

If you have not filled in all the mandatory fields, or have entered incorrect information, a message dialog opens identifying the missing information, or errors. Enter or correct the information, and click **Apply...** again.

## Backup slaves configuration

This section provides procedures to create or edit a backup slave node. See the following:

- “Adding a backup slave” (page 128)
- “Editing a backup slave” (page 129)
- “Deleting a backup slave” (page 130)

## Adding a backup slave

You can add a maximum number of seven backup slaves to a permanent virtual circuit path.

### Prerequisites

- you have launched the Frame Relay service provisioning tool and the Service Provisioning - Frame Relay window is open

### Procedure steps

- 1 Click **Edit Backup** in the **Service Provisioning - Frame Relay** window.  
The **Edit Backup Slave** dialog box opens.
- 2 Complete all the fields in the **Backup Slave** area.
- 3 Click **Add** to save the backup slave.  
The backup slave appears in the **Backup Slaves** table.

## Editing a backup slave

You can edit the backup slave.

### Prerequisites

- you have launched the Frame Relay service provisioning tool and the Service Provisioning - Frame Relay window is open

### Procedure steps

- 1 Click **Edit Backup** in the main window.  
The **Edit Backup Slave** dialog box opens.
- 2 Select a backup slave in the **Backup Slaves** table.
- 3 Edit the fields as needed.
- 4 To save the changes without dismissing the dialog, click **Add**.
- 5 To save the changes and dismiss the dialog, click **OK**.

## Deleting a backup slave

You can delete a backup slave.

### Prerequisites

- you have launched the Frame Relay service provisioning tool and the Service Provisioning - Frame Relay window is open

### Procedure steps

- 1 Click **Edit Backup** in the **Service Provisioning - Frame Relay** window.  
The **Edit Backup Slave** dialog box opens.
- 2 Select the backup slave in the **Backup Slaves** table.
- 3 Click **Delete**.

---

## Chapter 7

# Frame Relay circuits with IP access for 2547 VPNs

---

This section describes how to create a Frame Relay (FR) circuit with Internet Protocol (IP) access for a 2547 IP Virtual Private Network (VPN). The Frame Relay service provisioning tool achieves this by creating Frame Relay access to a Virtual Router component. This enables a frame relay circuit to connect to an IP VPN. The tool supports the following types of access circuits for 2547 VPNs:

- IP Optimized Backhaul
- IP Optimized Local

Configuring the Frame Relay IP access circuits involves identifying the type of access circuit, connecting the IP access to the master side of the Frame Relay circuit, and then connecting the master side to the slave side of the circuit.

For more information, see the following sections

- “Prerequisites for provisioning Frame Relay circuits with IP access for 2547 VPNs” (page 132)
- “Configuring circuit properties” (page 133)
- “Configuring IP Access for a 2547 VPN” (page 135)
- “Configuring Frame Relay Access node properties” (page 137)
- “Configuring end points” (page 138)

## **Prerequisites for provisioning Frame Relay circuits with IP access for 2547 VPNs**

- all the Passports to be provisioned have a FrUni or FrNni on the slave and a FrUni or FrNni, and Virtual Routing Function (VRF) on the IP Service node
- physical installation of cards, cabling, and other elements needed to interconnect the Passports for End-to-End provisioning
- provisioning of cards, logical processors, software, ports, Fruni or Frnni components
- Preside MDM Administration Database is installed

Passports to be provisioned are configured for Frame Relay up to the logical connection layer.

## Configuring circuit properties

Use this procedure to provide circuit identifiers and to select the circuit configuration for Frame Relay IP VPN access.

### Prerequisites

- You are familiar with the Frame Relay service provisioning tool user interface. For information on the user interface, see “Frame Relay service provisioning tool user interface” (page 35).
- You have launched the Frame Relay service provisioning tool
- You have logged into the database

### Procedure steps

- 1 From the **Circuit Type** list in the Frame Relay service provisioning tool window, select **FR IP VPN Access**.

The **Circuit Configuration** list appears to the right of the **Circuit Type** list.

- 2 From the **Circuit Configuration** list, select the type of 2547 IP VPN circuit you wish to create:
  - **IP Optimized Backhaul**
  - **IP Optimized Local**

Based on the selected circuit configuration, the Site Type field displays a value of Intranet, Extranet, or Unknown.

- 3 Choose a Customer.
  - For a new customer, in the **Customer** field, type a unique name for the new customer.
  - To select an existing customer, click the browse button [...] to the right of the **Customer** field to open the **Browse Customer** dialog box. See the procedure “Browsing customers” (page 88). You can search for and select a customer from the available customers in the **MDM Administration Database**. If you do not specify a customer, the default customer is used when the circuit is created.
- 4 Choose a Site.
  - For a new site, in the **Site** field, type a unique name for the site.
  - To select an existing Site, click the browse button [...] to the right of the **Site** field, to open the **Site Search** dialog box. See the procedure

“Browsing Sites” (page 114). This dialog box lets you search for and select a site from the **MDM Administration Database**. The Site must be unique for the Customer. If you select a site that does not have the same customer in the customer field, you will be prompted to synchronize them by changing the customer to that of the Site’s customer. Click Yes to synchronize them.

- 5 Choose an access point
  - In the **Access Point** field, type an Access Point. This field must be unique within the Site.
- 6 Optionally, if you wish to provide descriptions of the Site and/or the Access Point, you can do this through the **MDM Database Administration** tool.

Preside **MDM-> Administration-> MDM Administration Database**
- 7 Enter descriptions for the site and Access Point. For procedures relating to managing customer and site data, see 241-6001-400 *Preside MDM Administration Database User Guide*.
- 8 Proceed to “Configuring IP Access for a 2547 VPN” (page 135).

## Configuring IP Access for a 2547 VPN

Use the IP Service Node Properties panel to configure the IP service node. You provide input which is required to link the FR PVC to a VPN circuit. The IP Service Node is where the 2547 VRF, Media, Interface, and IP Service (master) FrUni/FrNni is located for Frame Relay IP VPN Access circuits.

### Prerequisites

- the Virtual Routing Function (VRF) must already exist on the device
- You have completed the procedure “Configuring circuit properties” (page 133)

### Procedure steps

- 1 Select an IP Service Node from the **Node Name** list, or click the browse button (...) to open the **Browse Nodes** dialog box. This dialog box allows you to specify search criteria and select a node. For the procedure to browse nodes, see “Browsing nodes” (page 91).
- 2 Optionally, deselect the **Use Defaults** check box to override the default login, and in the **User Id** and **Password** fields, type a user ID and password.
- 3 Click the browse button [...] to the right of the VRF field to open the **Browse VR** dialog box.
- 4 If you have not already logged into the Passport node, the **Set Default Authentication** dialog box opens.
- 5 Type in a **User Id** and **Password**, and click **OK**.  
The **Browse VR** dialog box opens with a list of VRFs on the IP Service Node.
- 6 Select a VRF from the list of available VRFs and click **OK**. See the procedure “Browsing VRs and VRFs” (page 115).
- 7 Select an interface address. The address must be unique within the VRF for each circuit. In the **Interface** field, type an interface address in the form of <ip\_address>/<network\_mask> where ip\_address is an IP Address and mask number of consecutive 1's in the mask.
- 8 For optimized backhaul circuit only, choose a service interface. The only available service type is FrUni. See “Browsing service interfaces” (page 92).

- 9 Proceed to “Configuring Frame Relay Access node properties”  
(page 137)

## Configuring Frame Relay Access node properties

Configure the Frame Relay Access node properties panel. For the backhaul circuit configurations, the Node Name, browse nodes button [...], and default login fields are enabled. For the local circuit configuration they are disabled since the node is the same as the IP Service Node.

### Prerequisites

- You have completed the following procedures:
  - “Configuring circuit properties” (page 133)
  - “Configuring IP Access for a 2547 VPN” (page 135)

### Procedure steps

- 1 If configuring a backhaul circuit configuration, select a Node Name or click browse button to open the Browse Nodes dialog box. See the procedure “Browsing nodes” (page 91).
- 2 Select a service interface. From the **Service Type** list, select the type of Frame Relay service.

## Configuring end points

You can configure the end points for each end of the frame relay circuit through the End Points table.

### Prerequisites

- you have decided on the CoS index(s) to be provisioned

### Procedure steps

- 1 Fill in the relevant columns.
  - for the IP Optimized Backhaul circuit configuration, fill in the **Media DLCI** column with the FrConn, the **IP Service DLCI**, and the **FR Access DLCI** columns. You can retrieve the unused FrConn by right-clicking the cell and selecting **Browse Frconn**.
  - for the IP Optimized Local circuit configuration, fill in the **Media DLCI** column with the FrConn and the **FR Access DLCI** column. You can retrieve unused FrConn by right-clicking the cell and selecting **Browse DLCI**.

You can right click in each of these columns and select the **Browse DLCIs** command to retrieve a list of available DLCIs. See the procedure “Browsing DLCIs” (page 116).

- 2 Optionally enter the correlation tag in the **Correlation Tag** column.
- 3 Click the **TM Profile** cell, and select a profile from the drop down list of available profiles.
- 4 Repeat these steps for each index to be provisioned.
- 5 Click **Apply...** to apply the provisioning. See the procedure “Applying the service creation” (page 105).

If a row in a table has some or all of the columns filled in, Frame Relay service provisioning will try to add the information under the given index. An error will occur if some information is missing from a partially completed row.

---

## Chapter 8

# Frame Relay circuits with IP access for 2764 VPNs

---

This section describes how to create a Frame Relay (FR) circuit to an Internet Protocol (IP) access for a 2764 IP VPN. The Frame Relay service provisioning tool achieves this by creating Frame Relay access to a Virtual Router component. This enables a frame relay circuit to connect to an IP VPN. The tool supports the following types of access circuits for 2764 VPNs:

- IP Optimized Backhaul
- IP Optimized Local
- FrDte Backhaul
- FrDte Direct

The tool will provision the Passport device when you apply the provisioning. The circuits are available with, or without being connected to the database. However, if you are connected to the MDM Administration Database, the tool will populate the database with the information and components for these circuits when you apply the provisioning.

Configuring the Frame Relay IP access circuits involves identifying the type of access circuit, connecting the IP access to the master side of the Frame Relay circuit, and then connecting the master side to the slave side of the circuit.

For more information, see the following sections

- “Prerequisites for provisioning Frame Relay circuits with IP access for 2764 VPNs” (page 140)
- “Configuring circuit properties” (page 141)
- “Configuring IP Access for 2764 VPN” (page 143)
- “Configuring Frame Relay Access node properties” (page 145)

## **Prerequisites for provisioning Frame Relay circuits with IP access for 2764 VPNs**

- all the Passports to be provisioned have a FrUni or FrNni on the slave and a FrUni or FrNni, a FrDte, and VR on the IP Service node
- physical installation of cards, cabling, and other elements needed to interconnect the Passports for End-to-End provisioning
- provisioning of cards, logical processors, software, ports, Fruni or Frnni components
- Preside MDM Administration Database is installed

Passports to be provisioned are configured for Frame Relay up to the logical connection layer.

## Configuring circuit properties

Use this procedure to provide circuit identifiers and to select the circuit configuration for Frame Relay IP VPN access.

### Prerequisites

- You are familiar with the Frame Relay service provisioning tool user interface. For information on the user interface, see “Frame Relay service provisioning tool user interface” (page 35).
- You have launched the Frame Relay service provisioning tool
- You have logged into the MDM Administration Database

### Procedure steps

- 1 From the **Circuit Type** list in the Frame Relay service provisioning tool window, select **FR IP VPN Access**.

The **Circuit Configuration** list appears to the right of the **Circuit Type** list.

- 2 From the **Circuit Configuration** list, select one of the following types of access circuits:
  - 2764 IP Opt Backhaul
  - 2764 IP Opt Local
  - 2764 FrDte Backhaul
  - 2764 FrDte Direct

The Site Type field displays a value of Intranet.

- 3 Choose a customer
  - For a new customer, in the **Customer** field, type a unique name for the new customer.
  - To select an existing customer, select a customer from the drop-down menu or click the browse button [...] to the right of the **Customer** field to open the **Browse Customer** dialog box. See the procedure “Browsing customers” (page 88). You can search for and select a customer from the available customers in the **MDM Administration Database**. If you do not specify a customer, the default customer is used when the circuit is created.
- 4 Choose a Site.

- For a new site, in the **Site** field, type a unique name for the site.
  - To select an existing Site, click the browse button [...] to the right of the **Site** field, to open the **Site Search** dialog box. See the procedure “Browsing Sites” (page 114). This dialog box lets you search for and select a site from the **MDM Administration Database**. The Site must be unique for the Customer. If you select a site that does not have the same customer in the customer field, you will be prompted to synchronize them by changing the customer to that of the Site's customer. Click **Yes** to synchronize them.
  - In the **Access Point** field, type an Access Point. This field must be unique within the Site.
- 5 Optionally, if you wish to provide descriptions of the Site and/or the Access Point, you can do this through the **MDM Database Administration** tool.
- Preside **MDM-> Administration-> MDM Administration Database**
- 6 Enter descriptions for the site and Access Point. For the procedure to enter a site or access point description, see 241-6001-400 *Preside MDM Administration Database User Guide*.
- 7 Proceed to “Configuring IP Access for 2764 VPN” (page 143).

## Configuring IP Access for 2764 VPN

Use the IP Service Node Properties panel to configure the IP service node. This procedure links the FR PVC to a VPN circuit. The IP Service Node is where the 2764 VR, FrDte, Media, Logical Interface, and IP Service (master) FrUni/FrNni is located for FR IP VPN Access circuits.

*Note:* The data fields that appear in the Frame Relay service provisioning interface are determined by the circuit configuration.

### Prerequisites

- the VR must already exist on the device
- You have completed the procedure “Configuring circuit properties” (page 141)

### Procedure steps

- 1 Select an IP Service Node from the **Node Name** list, or click the browse button (...) to open the **Browse Nodes** dialog box. This dialog box allows you to specify search criteria and select a node. For the procedure to browse nodes, see “Browsing nodes” (page 91).
- 2 Optionally, deselect the **Use Defaults** check box to override the default login, and in the **User Id** and **Password** fields, type a user ID and password.
- 3 Click the browse button [...] to the right of the VR field to open the **Browse VR** dialog box.
- 4 If you have not already logged into the Passport node, the **Set Default Authentication** dialog box opens.
- 5 Type in a **User Id** and **Password**, and click **OK**.  
The **Browse VR** dialog box opens with a list of VRs on the IP Service Node.
- 6 Select a VR from the list of available VRs and click **OK**. See the procedure “Browsing VRs and VRFs” (page 115).
- 7 In the **Logical Interface (2764)** field, type an interface address. The interface address is in the form of <ip\_address>/<network\_mask> where ip\_address is an IP Address and mask number of consecutive 1's in the mask.

- 8 For 2764 FrDte Direct or 2764 FrDte Backhaul circuit configurations only, select the FrDte. In the FrDte field, type the instance number of the target FrDte, or click the browse button [...] to open the Browse FrDte/Remote Group dialog box. This dialog box lets you select either a FrDte or remoteGroup instance, or both. See the procedure “Browsing FrDte and Remote Group instances for 2764 FrDte circuits” (page 121).

When you apply the provisioning, a StaticDlci is provisioned and the media remoteGroup is created under the FrDte.

- 9 Choose the media. It can be an existing media or new:
  - For FrDte circuit configurations, the media is Remote Group. You can type a Remote Group in the RemoteGroup field, or select it as part of the browse FrDte procedure. See step 8.
  - For the IP Optimized circuit configurations, enter an instance in the IpDlciGroup field, or click the browse button [...] to browse available IpDlciGroups and select one from the list. See the procedure “Browsing IpDlciGroup instances for 2764 IP Optimized circuits” (page 120).
- 10 Choose an interface address. The address must be unique within the VR for each circuit.
  - In the **Logical Interface** field, type an interface address in the form of <ip\_address>/<network\_mask> where ip\_address is an IP Address and mask number of consecutive 1's in the mask.
- 11 For optimized backhaul circuit only, choose a service interface. The only available service type is FrUni. See “Browsing service interfaces” (page 92).
- 12 Proceed to “Configuring Frame Relay Access node properties” (page 145)

## Configuring Frame Relay Access node properties

Configure the Frame Relay Access node properties panel. For the backhaul circuit configurations, the Node Name, browse nodes button [...], and default login fields are enabled. For the local circuit configuration they are disabled since the node is the same as the IP Service Node.

### Prerequisites

- You have completed the following procedures:
  - “Configuring circuit properties” (page 141)
  - “Configuring IP Access for 2764 VPN” (page 143)

### Procedure steps

- 1 If configuring a backhaul circuit configuration, select a Node Name or click browse button to open the Browse Nodes dialog box. See the procedure “Browsing nodes” (page 91).
- 2 Select a service interface. From the **Service Type** list, select the type of Frame Relay service.

## Configuring end points

You can configure the end points for each end of the frame relay circuit through the End Points table.

### Prerequisites

- you have decided on the CoS index(s) to be provisioned

### Procedure steps

- 1 Fill in the relevant columns.
  - for FrDte circuit configurations, fill in the **IP Service DLCI** and **FR Access DLCI** columns. You can retrieve unused DLCIs by right-clicking the cell and selecting **Browse DLCI**.
  - for the IP Optimized Backhaul circuit configuration, fill in the **Media DLCI** column with the FrConn, the **IP Service DLCI**, and the **FR Access DLCI** columns. You can retrieve the unused FrConn by right-clicking the cell and selecting **Browse Frconn**.
  - for the IP Optimized Local circuit configuration, fill in the **Media DLCI** column with the FrConn and the **FR Access DLCI** column. You can retrieve unused FrConn by right-clicking the cell and selecting **Browse DLCI**.
- 2 Optionally enter the correlation tag in the **Correlation Tag** column.
- 3 Click the **TM Profile** cell, and select a profile from the drop down list of available profiles.
- 4 Repeat steps 1 to 3 for each index to be provisioned.
- 5 Click **Apply...** to apply the provisioning. See the procedure “Applying the service creation” (page 105).

If a row in a table has some or all of the columns filled in, Frame Relay service provisioning will try to add the information under the given index. An error will occur if some information is missing from a partially completed row.

## Chapter 9

# Frame Relay Real Time Log Display tool

---

This section explains the purpose of the Real Time Log File Display tool and describes how to use this tool. The RealTime Log Display tool lets you display and filter real time log messages generated by the Frame Relay service provisioning tool. Log messages may also be logged to a file.

See the following sections for more information:

- “Procedures” (page 148)
- “Real Time Log Display window” (page 158)
- “Menu shortcuts” (page 162)

**Note:** To view log files already logged to a file, use the Historic Log File Display tool, as described in 241-6001-303 *Preside MDM Administrator Guide*.

## Procedures

See the following sections for procedures you can perform with the Real Time Log Display tool:

- “Starting the Real Time Log Display tool” (page 149)
- “Filtering log reports” (page 150)
- “Clearing the contents of a log report” (page 151)
- “Stopping incoming log messages” (page 152)
- “Deleting log files” (page 153)
- “Saving Real Time Log Display content” (page 154)
- “Printing Real Time Log Display content” (page 155)
- “Searching a word in the Real Time Log Display” (page 156)
- “Resizing a column” (page 157)
- “Hiding a column” (page 157)
- “Adding a column” (page 157)
- “Sorting a log report” (page 157)

## Starting the Real Time Log Display tool

You can start the Real Time Log Display tool from the View menu in the Frame Relay service provisioning main window.

### Procedure steps

- 1 From the **Service Provisioning - Frame Relay** window, select **View -> Show Messages...**

The **Real Time Log Display** window opens.

## Filtering log reports

You can specify filtering criteria to display only a subset of the available log records.

### Procedure steps

- 1 If required, start the **Real Time Log Display** tool.
- 2 From the **Log Filter** section, select the log level you wish to display by checking one or more of the following check boxes:
  - **Show All**
  - **Critical**
  - **Error**
  - **Warning**
  - **Info**
  - **Verbose**
  - **Command**
- 3 Provision a frame relay permanent virtual circuit path between two Passport switches. See “Frame Relay PVC provisioning” (page 123).
- 4 If desired, click **Refresh** to display the **Refresh** dialog. If you do not click on the **Refresh** button, only new log records coming in will be filtered according to the new filtering criteria.
- 5 Specify the number of last log records, between 1 and all, that you want to filter with the new filtering criteria.
- 6 Click **OK**.

The log report is cleared and previous and new log records are displayed according to the new filtering criteria.

## Clearing the contents of a log report

### Procedure steps

- 1 From the **Real Time Log Display** window, click **Clear**.

The contents of the log report are erased.

## Stopping incoming log messages

You can temporarily stop the display of log records and then resume the display.

### Procedure steps

- 1 From the **Real Time Log Display** window, click **Pause**.  
New log records are no longer displayed.
- 2 To restart the display of new log records, click **Resume**.  
Log records that were generated while the pause was on are not displayed.

## Deleting log files

Run the MDM CleanLog script to delete log files after the specified retention period has expired. This script uses the log file's last modification date to determine if the retention period has been reached or exceeded. In both cases, the log file is deleted. You can also schedule this script to run as a cron job.

### Procedure steps

- 1 From the UNIX command line, type

```
/opt/MagellanMDM/bin/mdmcleanlog  
[-keep | -k <day[s]>]  
[-tool | -t <tool_name>]
```

where:

<tool\_name> is the name of the tool that generates the log files. For Service Provisioning Frame Relay, specify sp\_fr. The tool name is mandatory.

<day[s]> is the number of days from today for the log files that you do not want to be deleted. The default value is 30.

## Saving Real Time Log Display content

### Procedure steps

- 1 From the **File** menu, select **Save**.

The **Save** dialog opens.

- 2 Enter a file name in the text field.

**Note:** You can also change the file path. The default is `/${HOME}/`.

- 3 Click **Save**.

## Printing Real Time Log Display content

You can print a log report to a printer or a file.

### Procedure steps

- 1 From the File menu, select **Print**.

The **Print** dialog box opens.

- 2 Complete the applicable information in the **Print** dialog box.

**Note:** If you do not specify a printer, the printer known by the Preside MDM workstation is used.

- 3 Click **Print**.

## Searching a word in the Real Time Log Display

### Procedure steps

- 1 From the **Edit** menu, select **Find**.  
The **Find** dialog box opens.
- 2 In the text field, enter the word you are looking for.
- 3 Click **Find**, as required.

## Resizing a column

- 1 Place the mouse at the right end of a column.  
The mouse changes to a double-sided arrow.
- 2 Left-click the mouse and drag the column to the desired width.

## Hiding a column

- 1 From the **View** menu, uncheck the column you wish to hide.

## Adding a column

- 1 From the **View** menu, check the column you wish to add.

**Note:** Any column added to the log report is added to the right side of the table.

## Moving a column

- 1 Click on a column header.
- 2 Drag it and release it to the desired location.

## Sorting a log report

- 1 To sort the log report in ascending order, click on a column header.
- 2 To sort the log report in descending order, click on a column header twice.

## Real Time Log Display window

The Real Time Log Display window consists of menu bar, and two sections: Log Filter and Log Messages.

The window consists of the following elements:

- “Menu bar” (page 158)
- “Log filtering” (page 159)
- “Log messages” (page 160)
- “Buttons” (page 162)
- “Procedures” (page 148)

### Menu bar

The menu bar consists of the following menu items:

- “File” (page 158)
- “Edit” (page 158)
- “View” (page 159)
- “Help” (page 159)

### File

The **File** menu contains the following commands:

- **Save** displays a dialog that lets you save the content of the log report. The default path that the log report is saved in is `${HOME}/`.
- **Print** displays a dialog that lets you print a log report or print it to a file. Clicking the print button displays the content of the log report.
- **Close** closes the Real Time Log Display window.

### Edit

The Edit menu contains the following commands:

- **Clear** empties the log report.
- **Copy** copies the selected log records into a buffer.
- **Find** displays a dialog that lets you do a key word search in the log report.

- **Select All** selects all the contents of the log report.

### **View**

The **View** menu contains check boxes that represent a column in the log report. These check boxes let you customize the log report by hiding or adding a column. The following columns are selected by default:

- **Date**
- **Log Level**
- **Node Name**
- **Message**

*Note:* Any column added to the log report is added to the right side of the table.

### **Help**

The **Help** menu contains the following command:

- **Help on Window** displays on-line help information on the Real Time Log Display window.

## **Log filtering**

You can filter logs from the Real Time Log Display window. This window contains check boxes consisting of the following levels:

- **Show All** filters logs on all levels.
- **Critical** indicates that an operation cannot be performed. This failure compromises the integrity of the process results. Processing may stop.
- **Error** indicates that an operation cannot be performed. This failure does not compromise the integrity of the process results. Processing continues.
- **Warning** indicates that an operation has completed without errors. The integrity of the process results are questionable.
- **Info** indicates there is an information message about the current process operation.
- **Verbose** indicates a verbose form of an information message.
- **Command** indicates a Passport command.

Click **Refresh** when you change the filtering criteria. If you do not click **Refresh**, only new log messages coming in will be filtered according to the new criteria.

*Note:* No matter what filtering criteria you choose, all log records are written to a file when the entry **LogToFile=on** in the Service Provisioning Frame Relay configuration file.

## Log messages

The log messages section of the Real Time Log Display window contain columns for the date, log level, node name, and message. These columns are displayed by default.

You can customize the log report by resizing the columns or by hiding columns. You can also sort log reports by column heading, and scroll through the log list. When log records are logged to file, the field text box displays the log file name in which all log messages are written regardless of the log filter. The path of the file is displayed in a tool tip that displays when you put the mouse over that field.

The log messages are logged in the directory `/opt/MagellanNMS/data/log/sp_fr/<user>/<display>`, where:

`<user>` is your UNIX userid

`<display>` is the IP address or the hostname of the machine displaying the Real Time Log Display tool

### Log files name

The name of a log file is the tool's name and a timestamp of when the file was created. The format of a log file name is

```
<tool_name><YYMMDD>T<HHMMSS>.log[nnn][<nnn>]
```

where:

`<tool_name>` is the name of the tool that generates the log files. For Service Provisioning Frame Relay, the entry is `sp_fr`.

`<nnn>` is the value of the file counter. A three-digit counter is added to the rolled log file name when a log reaches its limit defined in the tool's configuration file.

An example of a log file is: sp\_fr20011120T143244.log.001.

### Log files header

To trace what was provisioned and by whom, a log file header is provided at the beginning of each log. The format of the log file header is

```
<FH><user>^\<host>^\<display>^\<file_name></FH>
```

where:

<FH> is the XML tag for file header

<user> is your UNIX userid

<host> is the host name that created the log file

<display> is the IP address or host name of the machine displaying the Real Time Log Display tool

An example of a log file header is:

```
<FH>black^\wcars0nr^\47.123.45.678:0.0^\sp_fr20011120T143244.log.001</FH>
```

### Log records format

Log records have the following format:

```
<LOG><timestamp>^\<log_level>^\<node_name>^\<message></LOG>
```

where:

<LOG> is the XML tag for a log record

<timestamp> is the date and time in the format:

```
<YYYYMMDD>T<HHMMSS>
```

<log\_level> is the message's priority level: critical, error, warning, info, verbose, command. See "Log filtering" (page 159) for definitions of the log levels.

An example of a log records format is:

```
<LOG>20011101T152232^\COMMAND^\EM/ROME^\set fruni/6000  
Dlci/26 Dc ci 0.</LOG>.
```

## Buttons

The Real Time Log Display window consists of the following buttons:

- **Pause/Resume** is a toggle button that lets you stop and resume the display of new messages. When you click **Pause**, the label changes to **Resume** and vice versa. **Pause** stops new log messages from appearing in the viewer to help you analyze log messages without new messages coming in. Clicking **Resume** restarts the display of new log messages. The logged messages that were generated while **Pause** was on are not displayed when you click **Resume**.
- **Refresh** lets you apply new log filtering criteria against previous and new log records. When the **Refresh** dialog opens, it prompts you to specify how many previous log records you want to filter with the new criteria. The log report is cleared and the previous and new log records are displayed according to the new filtering criteria.

When the refresh is finished, a dialog displays the amount of parsed log records. If the available amount of saved log records is less than what you requested, the dialog specifies that all log records have been parsed. The default value for the number of last records to be filtered is All. The allowable range is 1 to All.

**Refresh** is greyed out if the LogToFile entry is set to off in the Service Provisioning Frame Relay configuration file.

- **Clear** erases all the log records in the log report.
- **Close** closes the Real Time Log Display window.

## Menu shortcuts

You can use the keyboard instead of the mouse to select a menu option. You can also execute a command by using a command accelerator.



# Preside Multiservice Data Manager Service Provisioning for Frame Relay User Guide

Release R14.3

Copyright © 2003 Nortel Networks.  
All Rights Reserved.

NORTEL, NORTEL NETWORKS, the globemark design, the NORTEL NETWORKS corporate logo, DPN, PASSPORT, and PRESIDE are trademarks of Nortel Networks. SUN is a trademark of Sun Microsystems Inc. OPENVIEW is a trademark of Hewlett-Packard Company. UNIX is a trademark licensed exclusively through X/OPEN Company Ltd.

Publication: 241-6001-603  
Document status: Standard  
Document version: 14.3RSUP  
Document date: December 2003  
Printed in Canada

