

DIMENSION<sup>®</sup> PBX  
FEATURE TEST  
INTERPOSITION CALLING AND TRANSFER

CONTENTS

- 1. GENERAL
- 2. RECORDS

- 3. TEST EQUIPMENT
- 4. PROCEDURES

---

1. GENERAL

1.1 Description

1.11 This section provides test procedures for Interposition Calling and Transfer - Attendant to Attendant and the Interposition Calling and Transfer Station to Attendant Features.

1.12 The Interposition Calling and Transfer - Attendant to Attendant Feature allows an attendant to dial another attendant by an access code.

1.13 The Interposition Calling and Transfer - Station to Attendant Feature allows a station to dial a particular attendant by an access code.

2. RECORDS

2.1 Form SD-97-1313 is required for recording the results of this test.

3. TEST EQUIPMENT

3.1 Handset

<u>Amount</u>	<u>ITE</u>	<u>DESCRIPTION</u>
1	4208A	Telephone Handset

3.2 Cords

<u>Amount</u>	<u>Code</u>	<u>Description</u>
1	9153 L	Cord Assembly

4. PROCEDURES

4.1 Preliminary

4.11 In order to perform these tests, at least two consoles must be connected.

4.12 The Interposition Calling and Transfer Feature is divided into two parts - Station to Attendant and Attendant to Attendant.

4.2 Interposition Calling and Transfer - Station to Attendant

4.21 If the Interposition Calling and Transfer - Station to Attendant Feature is not provided, go to PAR. 4.3, otherwise, go to the next paragraph.

4.22 Connect the handset, via the 249A Adapter, to a circuit pack tip and ring of a station that is allowed access to the attendant.

4.23 Go off-hook with the handset, verify dial tone, and then dial the Interposition Calling and Transfer - Station to Attendant Access Code. Verify second dial tone.

4.24 Dial the position number. After dial completion, verify:

- A) That ringback is received at the handset.
- B) At the console position dialed, that an ATTENDANT lamp flashes and that the console ringer sounds.

4.25 At the console dialed, momentarily operate the ANSWER key. Verify:

- A) That ringback is extinguished at the handset.
- B) At the console, that the ATTENDANT lamp lights steadily and that the ringer is silenced.

PRIVATE

THE INFORMATION CONTAINED HEREIN SHOULD NOT BE DISCLOSED TO UNAUTHORIZED PERSONS. IT IS MEANT SOLELY FOR USE BY AUTHORIZED BELL SYSTEM EMPLOYEES. Printed in U.S.A.

- C) That a transmission path exists between the console and handset.
- 4.26 If the Interposition Calling and Transfer - Attendant to Attendant Feature is not provided, go on-hook with the handset and momentarily operate the console RELEASE key, and then go to PAR. 4.4, otherwise go to PAR. 4.32.
- 4.3 Interposition Calling and Transfer - Attendant to Attendant
- 4.31 If the Interposition Calling and Transfer - Station to Attendant Feature is not provided, make a Station to Attendant call using the handset and a station that is allowed access to the attendant, otherwise, go to the next paragraph.
- 4.32 At this point, a transmission path should be established between the handset and the console accessed. (This console will hereafter be referred to as Console A).
- 4.33 At Console A, momentarily operate the START key. Verify:
- A) That Console A receives dial tone.
- 4.34 At Console A, dial the Interposition Calling and Transfer - Attendant to Attendant Access Code. After dial completion, verify that second dial tone is heard.
- 4.35 At Console A, dial the position number of another console. After dial completion, verify:
- A) At the console dialed (hereafter referred to as Console B) that an ATTENDANT lamp flashes and that the ringer sounds.
- B) At Console A, that ringback is heard and that the loop key RING lamp lights steadily.
- 4.36 At Console B, momentarily operate the ANSWER key. Verify:
- A) At both consoles, that the ATTENDANT lamp lights steadily.
- B) A Console B, ringer is silenced.
- C) AT Console A, ringback is silenced and that the LOOP key ANS lamp lights steadily.
- D) That a transmission path exists between both consoles.
- 4.37 At Console A, momentarily operate the RELEASE key. Verify:
- A) That the loop key ATTENDANT and ANS lamps are extinguished.
- B) That a transmission path exists between the handset and Console B.
- 4.38 At Console B, momentarily operate the RELEASE key and go on-hook with the handset. Verify:
- A) At Console B, that all LOOP key lamps are extinguished.
- 4.4 Test Completion
- 4.41 This completes the testing of Interposition Calling and Transfer - Attendant to Attendant and Station to Attendant.

Manager, Denver PBX PECC