

DIMENSION[®] PBX

120A FREQUENCY GENERATOR
(J58879 PC-2, L4)

CONTENTS

1. GENERAL
 2. MOUNTING
 3. WIRING
-

1. GENERAL

- 1.1 This section provides information to mount the 120A Frequency Generator in the Auxiliary Cabinet.

2. MOUNTING

- 2.1 If not mounted, mount the frequency generator on the right hand side (when looking from the front) of the panel mounting assembly located at the rear of the cabinet.

3. WIRING

- 3.1 Connect the 18-gauge, R-Y lead, from the RNG OUT connector to term 6 of the PFTS1 terminal strip located on the fuse panel.
- 3.2 Connect the 18-gauge R lead from the RNG-OUT connector to Term 5 of the PGTS1 terminal strip on the fuse panel.

Manager, Denver PBX PECC

PRIVATE

THE INFORMATION CONTAINED HEREIN SHOULD NOT BE DISCLOSED
TO UNAUTHORIZED PERSONS. IT IS MEANT SOLELY FOR USE BY
AUTHORIZED BELL SYSTEM EMPLOYEES.

Printed in U.S.A.