

DIMENSION® PBX
FREQUENCY INTERRUPTER
(J58879PC-1 L3)

CONTENTS

1. GENERAL
2. MOUNTING
3. WIRING

1. GENERAL

- 1.1 This section provides information to mount and wire the frequency interrupter unit.

2. MOUNTING

- 2.1 Mount the frequency interrupter to the left of the frequency generator.

3. WIRING

- 3.1 Connect two pairs of 18 gauge wires as follows:

<u>FROM</u> <u>FREQUENCY INTERRUPTER</u>		<u>TO</u> <u>FUSE PANEL</u>	
<u>TERMINAL</u> <u>STRIP</u>	<u>TERMINAL</u> <u>NO.</u>	<u>TERMINAL</u> <u>STRIP</u>	<u>TERMINAL</u> <u>NO.</u>
PGTS1	1	PFTS1	7
PGTS1	2	PFTS1	2
PGTS1	3	PFTS2	1
PGTS1	4	PFTS2	4

- 3.2 Connect an 18 gauge wire between terminals 2 and 3 of PGTS1 terminal strip on the frequency interrupter.

- 3.3 Connect an 18 gauge wire between the terminal 5 of the frequency interrupter PGTS1 terminal strip and -48FG terminal on the FG fuse on the fuse panel.

PRIVATE

THE INFORMATION CONTAINED HEREIN SHOULD NOT BE DISCLOSED TO UNAUTHORIZED PERSONS. IT IS MEANT SOLELY FOR USE BY AUTHORIZED BELL SYSTEM EMPLOYEES.

Manager, Denver PBX PECC