

DIMENSION[®] PBX
DCTS FEATURE TEST
PRIME LINE PREFERENCE

CONTENTS

1. GENERAL	3. PRIME LINE PREFERENCE TEST
2. TEST SET UP	4. RESTORATION

<u>1. GENERAL</u>	3.4	At Set P depress another line button other than Prime Line.
1.1 This test section provides testing information for Prime Line Preference.	3.41	I-USE lamp for selected line lighted and Prime Line I-USE lamp goes off.
1.2 <u>Prime Line Preference</u> automatically connects the station user to the line designated as the Prime Line upon going off-hook.	3.5	At Set P go off-hook.
	3.51	Status lamp of selected line lighted steadily. Dial Tone heard.
<u>2. TEST SET UP</u>	3.6	At Set P go on-hook.
2.1 Connect Electronic Telephone Set to circuit selected with Prime Line Preference. During testing this set will be referred to Set P.	3.61	Status lamp and I-USE lamp go out Prime Line I-USE lamp lighted.
<u>3. PRIME LINE PREFERENCE TEST</u>	<u>4. RESTORATION</u>	
3.1 At Set P verify that Prime Line I-USE lamp is lighted.	4.1	Determine requirements of next test and disconnect telephone sets not required.
3.2 At Set P go off-hook.		
3.21 Status lamp associated with Prime Line I-USE lamp is lighted.		
3.3 At Set P go on-hook.		
3.31 Status lamp goes out. Prime Line I-USE lamp lighted.		

Manager, Denver PBX PECC

PRIVATE

THE INFORMATION CONTAINED HEREIN SHOULD NOT BE DISCLOSED TO UNAUTHORIZED PERSONS. IT IS MEANT SOLELY FOR USE BY AUTHORIZED BELL SYSTEM EMPLOYEES. Printed in U.S.A.