

297-8001-547

DMS-100 Family

North American DMS-100

Card Replacement Procedures

Volume 6 of 7

LEC0015 and up Standard 14.02 May 2001

DMS-100 Family

North American DMS-100

Card Replacement Procedures

Volume 6 of 7

Publication number: 297-8001-547

Product release: LEC0015 and up

Document release: Standard 14.02

Date: May 2001

Copyright © 1996-2001 Nortel Networks,
All Rights Reserved

Printed in the United States of America

NORTEL NETWORKS CONFIDENTIAL: The information contained herein is the property of Nortel Networks and is strictly confidential. Except as expressly authorized in writing by Nortel Networks, the holder shall keep all information contained herein confidential, shall disclose the information only to its employees with a need to know, and shall protect the information, in whole or in part, from disclosure and dissemination to third parties with the same degree of care it uses to protect its own confidential information, but with no less than reasonable care. Except as expressly authorized in writing by Nortel Networks, the holder is granted no rights to use the information contained herein.

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. Changes or modification to the DMS-100 without the express consent of Nortel Networks may void its warranty and void the user's authority to operate the equipment.

Nortel Networks, the Nortel Networks logo, the Globemark, How the World Shares Ideas, Unified Networks, DMS, DMS-100, Helmsman, MAP, Meridian, Nortel, Northern Telecom, NT, and SuperNode are trademarks of Nortel Networks.

Contents

Card Replacement Procedures Volume 6 of 7

NTP Summary Contents

vii

1	XPM card replacement procedures (continued)	1-1
	NT6X85 in an SMS 1-2	
	NT6X85 in an SMS-R 1-13	
	NT6X85 in an SMU 1-24	
	NT6X86 in an SMS 1-30	
	NT6X86 in an SMS-R 1-39	
	NT6X87 in an RSC LCME 1-48	
	NT6X87 in an RSC-S (DS-1) Model B LCME 1-56	
	NT6X92 in an RSC-M 1-64	
	NT6X92 in an RSC RCC/RCC2 1-71	
	NT6X92 in an RSC-S (DS-1) Model A RCC2 1-79	
	NT6X92 in an RSC-S (DS-1) Model B RCC2 1-87	
	NT6X92 in an RSC-S (PCM-30) Model A RCO2 1-95	
	NT6X92 in an RSC-S (PCM-30) Model B RCO2 1-104	
	NT6X92 in an SMA 1-112	
	NT6X92 in an SMA-MVI-20 1-118	
	NT6X92 in an SMA2 1-125	
	NT6X92 in an SMS 1-132	
	NT6X92 in an SMU 1-140	
	NT6X99 in an IOPAC ILCM 1-146	
	NT6X99 in an OPAC LCM 1-150	
	NT6X99 in an OPM 1-154	
	NT6X99 in an RLCM 1-158	
	NT6X99 in an RSC LCM 1-162	
	NT6X99 in an RSC-S (DS-1) Model A LCME 1-170	
	NT6X99 in an RSC-S (DS-1) Model B LCME 1-178	
	NT6X99 in a STAR or RLD 1-186	
	NT7X05 in an RSC RCC/RCC2 1-190	
	NT7X05 in an RSC-S (DS-1) Model A RCC2 1-198	
	NT7X05 in an RSC-S (DS-1) Model B RCC2 1-207	
	NT7X05 in an RSC-S (PCM-30) Model A RCO2 1-216	
	NT7X05 in an RSC-S (PCM-30) Model B RCO2 1-225	
	NT7X05 in an SMS 1-234	

NT7X05 in an SMS-R	1-243
NT7X05 in an SMU	1-252
NT8X02 in an OPAC BCU	1-261
NT8X02 in an OPM BCU	1-265
NT8X18 in an SMS-R	1-270
NTAX74 in an RSC-S (DS-1) Model A RCC2	1-281
NTAX74 in an RSC-S (DS-1) Model B RCC2	1-292
NTAX74 in an RSC-S (PCM-30) Model A RCO2	1-303
NTAX74 in an RSC-S (PCM-30) Model B RCO2	1-315
NTAX74 in an SMA	1-327
NTAX74 in an SMA-MVI-20	1-337
NTAX74 in an SMA2	1-347
NTAX78 in an SMA	1-355
NTAX78 in an SMA-MVI-20	1-362
NTAX78 in an SMU	1-369
NTBX01 in an RSC RCC2	1-374
NTBX01 in an RSC-S (DS-1) Model A RCC2	1-381
NTBX01 in an RSC-S (DS-1) Model B RCC2	1-390
NTBX01 in an RSC-S (PCM-30) Model A RCO2	1-399
NTBX01 in an RSC-S (PCM-30) Model B RCO2	1-408
NTBX01 in an SMA	1-417
NTBX01 in an SMA-MVI-20	1-423
NTBX01 in an SMA2	1-430
NTBX01 in an SMU	1-437
NTBX02 in an RSC RCC2	1-443
NTBX02 in an RSC-S (DS-1) Model A RCC2	1-456
NTBX02 in an RSC-S (DS-1) Model B RCC2	1-469
NTBX02 in an RSC-S (PCM-30) Model A RCO2	1-482
NTBX02 in an RSC-S (PCM-30) Model B RCO2	1-495
NTBX02 in an SMA	1-508
NTBX02 in an SMA-MVI-20	1-515
NTBX02 in an SMA2	1-523
NTBX02 in an SMU	1-529
NTBX26 in an RSC LCME	1-538
NTBX26 in an RSC-S (DS-1) Model A LCME	1-546
NTBX26 in an RSC-S (DS-1) Model B LCME	1-554
NTBX27 in an RSC LCME	1-562
NTBX27 in an RSC-S (DS-1) Model A LCME	1-570
NTBX27 in an RSC-S (DS-1) Model B LCME	1-578
NTBX27 in a STAR or RLD	1-586
NTBX34 in an RSC LCME	1-593
NTBX34 in an RSC-S (DS-1) Model A LCME	1-601
NTBX34 in an RSC-S (DS-1) Model B LCME	1-611
NTBX34 in an RSC-S (PCM-30) Model A LCME	1-621
NTBX35 in an RSC LCME	1-630
NTBX35 in an RSC-S (DS-1) Model A LCME	1-638
NTBX35 in an RSC-S (DS-1) Model B LCME	1-648
NTBX35 in an RSC-S (PCM-30) Model A LCME	1-658
NTBX36 in an RSC LCME	1-667
NTBX36 in an RSC-S (DS-1) Model A LCME	1-677
NTBX36 in an RSC-S (DS-1) Model B LCME	1-687

NTBX72 in an RSC LCME	1-697
NTBX72 in an RSC-S (DS-1) Model A LCME	1-706
NTBX72 in an RSC-S (DS-1) Model B LCME	1-715
NTBX72 in an RSC-S (PCM-30) Model A LCME	1-724
NTEX17 in an RLCM	1-733
NTEX17 in an RSC LCM	1-743
NTEX17 in an RSC-S (DS-1) Model A LCME	1-753
NTEX17 in an RSC-S (DS-1) Model B LCM	1-763
NTEX17 in a STAR	1-773
NTEX54 in an RLCM	1-783
NTEX54 in an RSC LCM	1-800
NTEX54 in an RSC-S (DS-1) Model A LCME	1-817
NTEX54 in an RSC-S (DS-1) Model B LCM	1-834
NTEX54 in a STAR	1-851
NTMX45 in an IOPAC HIE	1-868
NTMX45 in an OPAC HIE	1-878
NTMX45 in an OPM HIE	1-888
NTMX45 in an RLCM HIE	1-898
NTMX71 in an RSC	1-908
NTMX71 in an SMA	1-916
NTMX71 in an SMA-MVI-20	1-924
NTMX71 in an SMS	1-932
NTMX71 in an SMU	1-940
NTMX72 in an RSC-M	1-949
NTMX72 in an RSC RCC2	1-957
NTMX72 in an RSC-S (DS-1) Model A RCC2	1-966
NTMX72 in an RSC-S (DS-1) Model B RCC2	1-975
NTMX72 in an RSC-S (PCM-30) Model A RCO2	1-984
NTMX72 in an RSC-S (PCM-30) Model B RCO2	1-993
NTMX72 in an SMA2	1-1002

NTP Summary Contents

Card Replacement Procedures Volume 1 of 7

About this document Vol. 1, xxvii

- How to check the version and issue of this document Vol. 1, xxvii
- References in this document Vol. 1, xxvii
- What precautionary messages mean Vol. 1, xxviii
- How commands, parameters, and responses are represented Vol. 1, xxix
 - Input prompt (>) Vol. 1, xxix
 - Commands and fixed parameters Vol. 1, xxix
 - Variables Vol. 1, xxix
 - Responses Vol. 1, xxix

1 Breaker interface panel card replacement procedures Vol. 1, 1-1

- Introduction Vol. 1, 1-1
 - Application Vol. 1, 1-1
 - Common procedures Vol. 1, 1-1
 - Action Vol. 1, 1-1
- Recording card replacement activities Vol. 1, 1-2
- Circuit breaker in a BIP Vol. 1, 1-3
- NTNY24 in a BIP Vol. 1, 1-7
- NTNY25 in a BIP Vol. 1, 1-11

2 SuperNode computing module card replacement procedures Vol. 1, 2-1

- Introduction Vol. 1, 2-1
 - Application Vol. 1, 2-1
 - Common procedures Vol. 1, 2-1
 - Action Vol. 1, 2-2
- Recording card replacement activities Vol. 1, 2-2
- SuperNode CM shelf layouts Vol. 1, 2-3
- NT9X20 in a SuperNode CM Vol. 1, 2-5
- System cards in a SuperNode CM Vol. 1, 2-22

3 SuperNode SE computing module and system load module card replacement procedures Vol. 1, 3-1

Introduction Vol. 1, 3-1
Application Vol. 1, 3-1
Common procedures Vol. 1, 3-1
Action Vol. 1, 3-2
Recording card replacement activities Vol. 1, 3-2
SuperNode SE CM/SLM shelf layouts Vol. 1, 3-3
NT9X44 in a SuperNode SE CM/SLM Vol. 1, 3-5
NT9X46 in a SuperNode SE CM/SLM Vol. 1, 3-27
NT9X62 in a SuperNode SE CM/SLM Vol. 1, 3-45
Power converter cards in a SuperNode SE CM/SLM Vol. 1, 3-67
Replace system cards in a SuperNode SE CM/SLM Vol. 1, 3-85

4 Digital carrier module card replacement procedures Vol. 1, 4-1

Introduction Vol. 1, 4-1
Application Vol. 1, 4-1
Common procedures Vol. 1, 4-1
Action Vol. 1, 4-1
Recording card replacement activities Vol. 1, 4-2
DCM shelf layouts Vol. 1, 4-3
Control complex cards in a digital carrier module Vol. 1, 4-8
NT2X35 in a digital carrier module Vol. 1, 4-13
NT2X36 in a digital carrier module Vol. 1, 4-27
NT3X65 in a digital echo suppressor Vol. 1, 4-37
Power converter cards in a digital carrier module Vol. 1, 4-47

5 Enhanced link peripheral processor card replacement procedures Vol. 1, 5-1

Introduction Vol. 1, 5-1
Application Vol. 1, 5-1
Common procedures Vol. 1, 5-1
Action Vol. 1, 5-1
Recording card replacement activities Vol. 1, 5-2
ELPP shelf layouts Vol. 1, 5-3
Common fill paddle boards in an ELPP LIS Vol. 1, 5-9
HLIU cards in an ELPP LIS Vol. 1, 5-17
HSLR cards in an ELPP LIS Vol. 1, 5-27
NT9X13 in an ELPP LIM unit Vol. 1, 5-36
System and power cards in an ELPP LIM unit Vol. 1, 5-48

6 SuperNode SE enhanced network card replacement procedures Vol. 1, 6-1

Introduction Vol. 1, 6-1
Application Vol. 1, 6-1
Common procedures Vol. 1, 6-1
Action Vol. 1, 6-2
Recording card replacement activities Vol. 1, 6-2

SuperNode SE ENET shelf designs Vol. 1, 6-3
 Crosspoint and interface cards in a SuperNode SE 16k ENET Vol. 1, 6-7
 Crosspoint and interface cards in a SuperNode SE 32k ENET Vol. 1, 6-31
 Power converter cards in a SuperNode SE 16k ENET Vol. 1, 6-53
 System cards in a SuperNode SE 16k ENET Vol. 1, 6-77
 System cards in a SuperNode SE 32k ENET Vol. 1, 6-100

7 File processor card replacement procedures Vol. 1, 7-1

Introduction Vol. 1, 7-1
 Application Vol. 1, 7-1
 Common procedures Vol. 1, 7-1
 Action Vol. 1, 7-1
 Recording card replacement activities Vol. 1, 7-2
 SuperNode Multicomputing Base shelf layouts Vol. 1, 7-3
 NT9X89 in a storage device shelf in a file processor Vol. 1, 7-6
 NT9X90 in a storage device shelf in a file processor Vol. 1, 7-18
 NT9X91 in a storage device shelf in a file processor Vol. 1, 7-33
 System cards in a file processor Vol. 1, 7-43

8 Frame supervisory panel and modular supervisory panel card replacement procedures Vol. 1, 8-1

Introduction Vol. 1, 8-1
 Application Vol. 1, 8-1
 Common procedures Vol. 1, 8-1
 Action Vol. 1, 8-1
 Recording card replacement activities Vol. 1, 8-2
 FSP cards in a 42-in. (106.7-cm) SuperNode cabinet Vol. 1, 8-3
 NT0X36 in a cabinetized input/output equipment frame Vol. 1, 8-8
 NT0X36 in a cabinetized trunk module equipment frame Vol. 1, 8-29
 NT0X36 in an input/output equipment frame Vol. 1, 8-53
 NT0X36 in an international cabinet auxiliary module Vol. 1, 8-74
 NT0X91 in a CPCE frame Vol. 1, 8-98
 NT0X91 in a digital carrier equipment frame Vol. 1, 8-112
 NT0X91 in a line module equipment frame Vol. 1, 8-123
 NT0X91 in an MS6E Vol. 1, 8-133
 NT0X91 in an MS7E, ST7E, or ST6E Vol. 1, 8-147
 NT0X91 in a network equipment frame Vol. 1, 8-159
 NT0X91 in a trunk module equipment frame Vol. 1, 8-172
 NT6X36 in LCE-type frames and CLCE Vol. 1, 8-192
 NTRX41 in MSP in streamline B cabinets Vol. 1, 8-197

9 Input/output device card replacement procedures Vol. 1, 9-1

Introduction Vol. 1, 9-1
 Application Vol. 1, 9-1
 Common procedures Vol. 1, 9-1
 Action Vol. 1, 9-1
 Recording card replacement activities Vol. 1, 9-2
 IOD shelf layouts Vol. 1, 9-3

Disk drive and magnetic tape controller cards in an IOC Vol. 1, 9-10
NT1X67 in an IOC Vol. 1, 9-21
NT1X78 in an IOE DDU shelf Vol. 1, 9-28
NT1X89 in an IOC shelf Vol. 1, 9-37
NT2X70 in an IOC Vol. 1, 9-44
NTFX30 in an ISM Vol. 1, 9-61
NTFX31 in an ISM Vol. 1, 9-77
NTFX32AA in an ISM Vol. 1, 9-92
System cards in an IOC Vol. 1, 9-97

Card Replacement Procedures

Volume 2 of 7

1 Line concentrating module card replacement procedures **Vol. 2, 1-1**

Introduction Vol. 2, 1-1
Application Vol. 2, 1-1
Common procedures Vol. 2, 1-1
Action Vol. 2, 1-1
Recording card replacement activities Vol. 2, 1-2
LCM shelf layouts Vol. 2, 1-3
Bus interface cards in an LCD Vol. 2, 1-13
Control complex cards in LCM-type PMs Vol. 2, 1-31
Line cards in an LCE line drawer Vol. 2, 1-39
NT6X30 in LCE-type frames Vol. 2, 1-47
NTBX71 in an LCME Vol. 2, 1-62
Power cards in an LCE line drawer Vol. 2, 1-73
Power cards in LCM-type PMs Vol. 2, 1-79

2 Line module card replacement procedures **Vol. 2, 2-1**

Introduction Vol. 2, 2-1
Application Vol. 2, 2-1
Common procedures Vol. 2, 2-1
Action Vol. 2, 2-1
Recording card replacement activities Vol. 2, 2-2
LM shelf layouts Vol. 2, 2-3
Control complex cards in a line module controller Vol. 2, 2-9
Interface and power converter cards in an LM line drawer Vol. 2, 2-16
Line cards in an LM line drawer Vol. 2, 2-24
NT2X05 in a line module controller Vol. 2, 2-30
NT2X70 in a line module controller Vol. 2, 2-36

3 Link peripheral processor card replacement procedures **Vol. 2, 3-1**

Introduction Vol. 2, 3-1
Application Vol. 2, 3-1
Common procedures Vol. 2, 3-1

Action Vol. 2, 3-1
 Recording card replacement activities Vol. 2, 3-2
 LPP shelf layouts Vol. 2, 3-3
 APU cards in an LPP LIS Vol. 2, 3-9
 Common fill paddle boards in an LPP LIS Vol. 2, 3-36
 EIU cards in an LPP LIS Vol. 2, 3-47
 LIU7 cards in an LPP LIS Vol. 2, 3-57
 FRIU cards in an LPP LIS Vol. 2, 3-68
 NIU processor and controller cards in an LPP LIS Vol. 2, 3-82
 NT9X13 in an LPP LIM unit Vol. 2, 3-89
 NT9X30 in an LPP LIS Vol. 2, 3-100
 NT9X74 in an LPP LIS Vol. 2, 3-126
 NTDX16 in an LPP LIS Vol. 2, 3-140
 NTEX28 in an NIU in an LPP LIS Vol. 2, 3-145
 System and power cards in an LPP LIM unit Vol. 2, 3-155
 VPU cards in an LPP LIS Vol. 2, 3-168
 XLIU cards in an LPP LIS Vol. 2, 3-177

4 SuperNode SE LIS or ENI card replacement procedures

Vol. 2, 4-1

Introduction Vol. 2, 4-1
 Application Vol. 2, 4-1
 Common procedures Vol. 2, 4-1
 Action Vol. 2, 4-1
 Recording card replacement activities Vol. 2, 4-2
 SuperNode SE link interface shelf layouts Vol. 2, 4-3
 Common fill cards in a SuperNode SE LIS or ENI shelf Vol. 2, 4-6
 EIU cards in a SuperNode SE LIS Vol. 2, 4-13
 FRIU cards in a SuperNode SE LIS Vol. 2, 4-24
 LIU7 cards in a SuperNode SE LIS or ENI shelf Vol. 2, 4-38
 NIU cards in a SuperNode SE LIS Vol. 2, 4-49
 NT9X30 in a SuperNode SE LIS Vol. 2, 4-64
 XLIU cards in a SuperNode SE LIS Vol. 2, 4-91

5 SuperNode message switch card replacement procedures

Vol. 2, 5-1

Introduction Vol. 2, 5-1
 Application Vol. 2, 5-1
 Common procedures Vol. 2, 5-1
 Action Vol. 2, 5-2
 Recording card replacement activities Vol. 2, 5-2
 SuperNode MS shelf layouts Vol. 2, 5-3
 Interface cards in a SuperNode MS Vol. 2, 5-5
 Manually busying LIM-to-MS SR128 links Vol. 2, 5-26
 Returning LIM-to-MS SR128 links to service Vol. 2, 5-33
 System cards in a SuperNode MS Vol. 2, 5-39

6 SuperNode SE message switch card replacement procedures Vol. 2, 6-1

Introduction Vol. 2, 6-1
Application Vol. 2, 6-1
Common procedures Vol. 2, 6-1
Action Vol. 2, 6-2
Recording card replacement activities Vol. 2, 6-2
SuperNode SE message switch shelf layouts Vol. 2, 6-3
Interface paddle boards in a SuperNode SE MS Vol. 2, 6-5
System cards in a SuperNode SE MS Vol. 2, 6-25

7 Message switch and buffer card replacement procedures

Vol. 2, 7-1

Introduction Vol. 2, 7-1
Application Vol. 2, 7-1
Common procedures Vol. 2, 7-1
Action Vol. 2, 7-1
Recording card replacement activities Vol. 2, 7-2
MSB shelf layouts Vol. 2, 7-3
Control complex cards in an MSB Vol. 2, 7-12
NT2X70 in an MSB Vol. 2, 7-20
NT2X70 in an ST7G or STCM Vol. 2, 7-35
NT6X40 in an MSB Vol. 2, 7-48
NT6X68 in an MSB Vol. 2, 7-55
Processor and memory cards in an MSB Vol. 2, 7-62
Signaling terminal cards in an MSB Vol. 2, 7-70

8 SuperNode network card replacement procedures

Vol. 2, 8-1

Introduction Vol. 2, 8-1
Application Vol. 2, 8-1
Common procedures Vol. 2, 8-1
Action Vol. 2, 8-2
Recording card replacement activities Vol. 2, 8-2
Network shelf layouts Vol. 2, 8-3
Crosspoint and interface cards in a 64k or 128k ENET Vol. 2, 8-15
Power converter cards in JNET shelves Vol. 2, 8-40
System cards in a 64k or 128k ENET Vol. 2, 8-49
System, interface, and crosspoint cards in JNET shelves Vol. 2, 8-72

9 Office alarm unit card replacement procedures

Vol. 2, 9-1

Introduction Vol. 2, 9-1
Application Vol. 2, 9-1
Common procedures Vol. 2, 9-1
Action Vol. 2, 9-1
Recording card replacement activities Vol. 2, 9-2
OAU shelf layouts Vol. 2, 9-3
Control and circuit cards in the office alarm unit Vol. 2, 9-7
Power converter cards in the office alarm unit Vol. 2, 9-14

10 Remote line module card replacement procedures

Vol. 2, 10-1

- Introduction Vol. 2, 10-1
- Application Vol. 2, 10-1
- Common procedures Vol. 2, 10-1
- Action Vol. 2, 10-1
- Recording card replacement activities Vol. 2, 10-2
- RLM shelf layouts Vol. 2, 10-3
- Control complex cards in a remote line controller Vol. 2, 10-9
- Line cards in an RLM line drawer Vol. 2, 10-16
- NT2X05 in a remote line controller Vol. 2, 10-22
- NT2X70 in a remote line controller Vol. 2, 10-28

Card Replacement Procedures Volume 3 of 7

1 Remote oscillator shelf card replacement procedures

Vol. 3, 1-1

- Introduction Vol. 3, 1-1
- Application Vol. 3, 1-1
- Common procedures Vol. 3, 1-1
- Action Vol. 3, 1-1
- Recording card replacement activities Vol. 3, 1-2
- Remote oscillator shelf layouts Vol. 3, 1-3
- NT1X78 in a remote oscillator shelf Vol. 3, 1-5
- NT3X16 in a remote oscillator shelf Vol. 3, 1-14

2 Single shelf link peripheral processor card replacement procedures

Vol. 3, 2-1

- Introduction Vol. 3, 2-1
- Application Vol. 3, 2-1
- Common procedures Vol. 3, 2-1
- Action Vol. 3, 2-1
- Recording card replacement activities Vol. 3, 2-2
- SSLPP shelf layouts Vol. 3, 2-3
- Common fill cards in an SSLPP Vol. 3, 2-7
- EIU cards in an SSLPP Vol. 3, 2-17
- FRIU cards in an SSLPP Vol. 3, 2-29
- LIU7 cards in an SSLPP Vol. 3, 2-44
- NIU cards in an SSLPP Vol. 3, 2-57
- Power converter cards in an SSLPP Vol. 3, 2-74
- XLIU cards in an SSLPP Vol. 3, 2-105

3 SuperNode system load module card replacement procedures Vol. 3, 3-1

Introduction Vol. 3, 3-1
Application Vol. 3, 3-1
Common procedures Vol. 3, 3-1
Action Vol. 3, 3-2
Recording card replacement activities Vol. 3, 3-2
SuperNode SLM shelf layouts Vol. 3, 3-3
NT9X44 in a SuperNode SLM Vol. 3, 3-5
SPM NTLX60AA FIL with DSP RM DMS-Spectrum Peripheral Module Vol. 3, 3-26
SPM NTLX61AA SIM card DMS-Spectrum Peripheral Module Vol. 3, 3-37
SPM NTLX63AA CEM card DMS-Spectrum Peripheral Module Vol. 3, 3-45
SPM NTLX65BA DSP RM DMS-Spectrum Peripheral Module Vol. 3, 3-64
SPM NTLX71AA OC3 card DMS-Spectrum Peripheral Module Vol. 3, 3-78
SPM NTLX82AA CEM card DMS-Spectrum Peripheral Module Vol. 3, 3-99
SPM NTLX82BA CEM card DMS-Spectrum Peripheral Module Vol. 3, 3-118
System cards in a SuperNode SLM Vol. 3, 3-137

4 Trunk module card replacement procedures Vol. 3, 4-1

Introduction Vol. 3, 4-1
Application Vol. 3, 4-1
Common procedures Vol. 3, 4-1
Action Vol. 3, 4-1
Recording card replacement activities Vol. 3, 4-2
TM shelf layouts Vol. 3, 4-3
Control complex cards in trunk and service modules Vol. 3, 4-27
Enhanced digital test unit or digital test unit cards in trunk and service modules Vol. 3, 4-37
Metallic test unit cards in trunk and service modules Vol. 3, 4-44
Power converter cards in trunk and service modules Vol. 3, 4-64
Single-card PMs in trunk and service modules Vol. 3, 4-79
Trunk, maintenance, and service cards in trunk and service modules Vol. 3, 4-88

5 Universal Edge 9000 card replacement procedures Vol. 3, 5-1

Introduction Vol. 3, 5-1
Application Vol. 3, 5-1
Common procedures Vol. 3, 5-1
Action Vol. 3, 5-1
Recording card replacement activities Vol. 3, 5-2
UEN shelf layout Vol. 3, 5-3
Control cards in a UEN shelf Vol. 3, 5-5
Line cards in a UEN shelf Vol. 3, 5-14
NTNP20 in a UEN shelf Vol. 3, 5-19

6 XPM card replacement procedures Vol. 3, 6-1

Introduction Vol. 3, 6-1
Application Vol. 3, 6-1
Common procedures Vol. 3, 6-1
Action Vol. 3, 6-1
Recording card replacement activities Vol. 3, 6-2
XPM shelf layouts Vol. 3, 6-3
Back plane cards in an XPM Vol. 3, 6-19
Control complex cards in an XPM Vol. 3, 6-31
NT2X70 in an XPM Vol. 3, 6-42
NT6X40 in an XPM Vol. 3, 6-59
NT6X48 in LGC, PLGC, LTC, PLTC Vol. 3, 6-72
NT6X48 in MSB7 Vol. 3, 6-82
NT6X78 in an XPM Vol. 3, 6-90
NT7X03 in an XPM Vol. 3, 6-97
NT7X07AA in an LTCI Vol. 3, 6-106
NTBX02 in an XPM Vol. 3, 6-115
P-side interface cards in an XPM Vol. 3, 6-124
Processor and memory cards in an XPM Vol. 3, 6-147

7 Card replacement common procedures Vol. 3, 7-1

Introduction Vol. 3, 7-1
Application Vol. 3, 7-1
Action Vol. 3, 7-1
Activating CCS7 links Vol. 3, 7-2
Activity switch with memory match Vol. 3, 7-11
Cleaning fiber-optic components and assemblies Vol. 3, 7-19
Correcting a load mismatch Vol. 3, 7-27
Deactivating CCS7 links Vol. 3, 7-42
Failure to switch clock mastership Vol. 3, 7-50
Loading a PM Vol. 3, 7-59
Manually busying LIM-to-MS DS30 links Vol. 3, 7-71
Manually busying Series II PM and CPM C-side links Vol. 3, 7-77
Manually busying SMA C-side links Vol. 3, 7-84
Manually busying SMA2 C-side links Vol. 3, 7-90
Memory extension in the SuperNode CM Vol. 3, 7-96
Memory extension in the SuperNode SE CM Vol. 3, 7-114
Moving an XSG to a spare XLIU Vol. 3, 7-132
Removing and replacing a card Vol. 3, 7-140
Replacing a card Vol. 3, 7-144
Replacing a card STAR or RLD Vol. 3, 7-150
Replacing a line card Vol. 3, 7-156
Reseating cards in equipment shelves Vol. 3, 7-163
Returning a card for repair or replacement Vol. 3, 7-168
Returning LIM-to-MS DS30 links to service Vol. 3, 7-172
Switching the clock source Vol. 3, 7-177
Unseating cards in equipment shelves Vol. 3, 7-184
Verifying load compatibility of SuperNode cards Vol. 3, 7-188

Card Replacement Procedures

Volume 4 of 7

1	XPM card replacement procedures	Vol. 4, 1-1
	NT0X10 in an IOPAC RMM	Vol. 4, 1-2
	NT0X10 in an OPM RMM	Vol. 4, 1-6
	NT0X10 in an RLCM-EDC RMM	Vol. 4, 1-10
	NT0X10 in an RLCM RMM	Vol. 4, 1-14
	NT0X10 in an RSC RMM	Vol. 4, 1-18
	NT0X10 in an RSC-S (DS-1) Model A RMM	Vol. 4, 1-25
	NT0X10 in an RSC-S (DS-1) Model B RMM	Vol. 4, 1-31
	NT0X10 in an RSC-S (PCM-30) Model A RMM	Vol. 4, 1-37
	NT0X10 in an RSC-S (PCM-30) Model B RMM	Vol. 4, 1-43
	NT0X91 in an IOPAC FSP	Vol. 4, 1-49
	NT0X91 in an RLCM	Vol. 4, 1-61
	NT0X91 in an RSC	Vol. 4, 1-74
	NT0X91AA in an OPM	Vol. 4, 1-90
	NT0X91AE in an OPM	Vol. 4, 1-96
	NT0X91AE in an RLCE	Vol. 4, 1-105
	NT2X06 in an IOPAC RMM	Vol. 4, 1-114
	NT2X06 in an OPM RMM	Vol. 4, 1-121
	NT2X06 in an RLCM RMM	Vol. 4, 1-129
	NT2X06 in an RSC RMM	Vol. 4, 1-136
	NT2X06 in an RSC-S (DS-1) Model A RMM	Vol. 4, 1-144
	NT2X06 in an RSC-S (DS-1) Model B RMM	Vol. 4, 1-153
	NT2X06 in an RSC-S (PCM-30) Model A RMM	Vol. 4, 1-162
	NT2X09 in an IOPAC RMM	Vol. 4, 1-171
	NT2X09 in an OPM RMM	Vol. 4, 1-178
	NT2X09 in an RLCM RMM	Vol. 4, 1-186
	NT2X09 in an RSC RMM	Vol. 4, 1-194
	NT2X09 in an RSC-S (DS-1) Model A RMM	Vol. 4, 1-202
	NT2X09 in an RSC-S (DS-1) Model B RMM	Vol. 4, 1-211
	NT2X09 in an RSC-S (PCM-30) Model A RMM	Vol. 4, 1-220
	NT2X10 in an OPM RMM	Vol. 4, 1-229
	NT2X10 in an RLCM RMM	Vol. 4, 1-233
	NT2X10 in an RSC RMM	Vol. 4, 1-237
	NT2X10 in an RSC-S (DS-1) Model A RMM	Vol. 4, 1-244
	NT2X10 in an RSC-S (DS-1) Model B RMM	Vol. 4, 1-251
	NT2X10 in an RSC-S (PCM-30) Model A RMM	Vol. 4, 1-258
	NT2X11 in an OPAC RMM	Vol. 4, 1-265
	NT2X11 in an OPM RMM	Vol. 4, 1-270
	NT2X11 in an RLCM-EDC RMM	Vol. 4, 1-274
	NT2X11 in an RLCM RMM	Vol. 4, 1-278
	NT2X11 in an RSC RMM	Vol. 4, 1-282
	NT2X11 in an RSC-S (DS-1) Model A RMM	Vol. 4, 1-289
	NT2X11 in an RSC-S (DS-1) Model B RMM	Vol. 4, 1-298
	NT2X11 in an RSC-S (PCM-30) Model A RMM	Vol. 4, 1-307
	NT2X48 in an IOPAC RMM	Vol. 4, 1-316
	NT2X48 in an OPM RMM	Vol. 4, 1-321

NT2X48 in an RLCM RMM Vol. 4, 1-326
NT2X55 in an RSC RMM Vol. 4, 1-331
NT2X57 in an IOPAC RMM Vol. 4, 1-338
NT2X57 in an OPM RMM Vol. 4, 1-342
NT2X57 in an RLCM-EDC RMM Vol. 4, 1-346
NT2X57 in an RLCM RMM Vol. 4, 1-350
NT2X57 in an RSC RMM Vol. 4, 1-355
NT2X57 in an RSC-S (DS-1) Model A RMM Vol. 4, 1-362
NT2X57 in an RSC-S (DS-1) Model B RMM Vol. 4, 1-369
NT2X57 in an RSC-S (PCM-30) Model A RMM Vol. 4, 1-376
NT2X59 in an IOPAC RMM Vol. 4, 1-383
NT2X59 in an OPM RMM Vol. 4, 1-387
NT2X59 in an RLCM-EDC RMM Vol. 4, 1-394
NT2X59 in an RLCM RMM Vol. 4, 1-401
NT2X59 in an RSC RMM Vol. 4, 1-406
NT2X59 in an RSC-S (DS-1) Model A RMM Vol. 4, 1-413
NT2X59 in an RSC-S (DS-1) Model B RMM Vol. 4, 1-420
NT2X59 in an RSC-S (PCM-30) Model A RMM Vol. 4, 1-427
NT2X70 in an IOPAC HIE Vol. 4, 1-434
NT2X70 in an OPM HIE Vol. 4, 1-441
NT2X70 in an RLCM-EDC HIE Vol. 4, 1-455
NT2X70 in an RLCM HIE Vol. 4, 1-464
NT2X70 in an RSC Vol. 4, 1-478
NT2X70 in an SMA Vol. 4, 1-490
NT2X70 in an SMA-MVI-20 Vol. 4, 1-498
NT2X70 in an SMS Vol. 4, 1-506
NT2X70 in an SMS-R Vol. 4, 1-517
NT2X70 in an SMU Vol. 4, 1-526
NT2X90 in an IOPAC RMM Vol. 4, 1-533
NT2X90 in an OPAC RMM Vol. 4, 1-538
NT2X90 in an OPM RMM Vol. 4, 1-543
NT2X90 in an RLCM-EDC RMM Vol. 4, 1-551
NT2X90 in an RLCM RMM Vol. 4, 1-557
NT2X90 in an RSC RMM Vol. 4, 1-562
NT2X90 in an RSC-S (DS-1) Model A RMM Vol. 4, 1-569
NT2X90 in an RSC-S (DS-1) Model B RMM Vol. 4, 1-576
NT3X04 in an RSC RMM Vol. 4, 1-583
NT3X09 in an IOPAC RMM Vol. 4, 1-590
NT3X09 in an OPAC RMM Vol. 4, 1-596
NT3X09 in an OPM RMM Vol. 4, 1-601
NT3X09 in an RLCM-EDC RMM Vol. 4, 1-607
NT3X09 in an RLCM RMM Vol. 4, 1-612
NT3X09 in an RSC RMM Vol. 4, 1-617
NT3X09 in an RSC-S (DS-1) Model A RMM Vol. 4, 1-624
NT3X09 in an RSC-S (DS-1) Model B RMM Vol. 4, 1-634
NT3X09 in an RSC-S (PCM-30) Model B RMM Vol. 4, 1-644
NT3X82 in an RSC RMM Vol. 4, 1-653
NT3X83 in an RSC RMM Vol. 4, 1-660
NT4X97 in an IOPAC RMM Vol. 4, 1-668
NT4X97 in an RSC-S (PCM-30) Model A RMM Vol. 4, 1-673
NT4X97 in an RSC-S (PCM-30) Model B RMM Vol. 4, 1-680

NT4X98 in an IOPAC RMM	Vol. 4, 1-687
NT4X98 in an RSC-S (PCM-30) Model B RMM	Vol. 4, 1-694
NT6X17 in an IOPAC ILCM	Vol. 4, 1-703
NT6X17 in an OPM	Vol. 4, 1-707
NT6X17 in an RLCM	Vol. 4, 1-711
NT6X17 in an RSC LCM	Vol. 4, 1-715
NT6X17 in an RSC-S (DS-1) Model A LCME	Vol. 4, 1-723
NT6X17 in an RSC-S (DS-1) Model B LCME	Vol. 4, 1-731
NT6X17 in a STAR or RLD	Vol. 4, 1-739
NT6X18 in an IOPAC ILCM	Vol. 4, 1-743
NT6X18 in an OPAC LCM	Vol. 4, 1-747
NT6X18 in an OPM	Vol. 4, 1-751
NT6X18 in an RLCM	Vol. 4, 1-755
NT6X18 in an RSC LCM	Vol. 4, 1-759
NT6X18 in an RSC-S (DS-1) Model A LCME	Vol. 4, 1-767
NT6X18 in an RSC-S (DS-1) Model B LCME	Vol. 4, 1-775
NT6X18 in a STAR or RLD	Vol. 4, 1-783
NT6X19 in an IOPAC ILCM	Vol. 4, 1-787
NT6X19 in an OPM	Vol. 4, 1-791
NT6X19 in an RLCM	Vol. 4, 1-795
NT6X19 in an RSC LCM	Vol. 4, 1-799
NT6X19 in an RSC-S (DS-1) Model A LCME	Vol. 4, 1-807
NT6X19 in an RSC-S (DS-1) Model B LCME	Vol. 4, 1-815
NT6X19 in a STAR or RLD	Vol. 4, 1-823
NT6X20 in an IOPAC ILCM	Vol. 4, 1-827
NT6X20 in an OPM	Vol. 4, 1-831
NT6X20 in an RLCM	Vol. 4, 1-835
NT6X20 in an RSC LCM	Vol. 4, 1-839
NT6X20 in an RSC-S (DS-1) Model A LCME	Vol. 4, 1-847
NT6X20 in an RSC-S (DS-1) Model B LCME	Vol. 4, 1-855
NT6X20 in a STAR or RLD	Vol. 4, 1-863
NT6X21 in an IOPAC ILCM	Vol. 4, 1-867
NT6X21 in an OPM	Vol. 4, 1-871
NT6X21 in an RLCM	Vol. 4, 1-875
NT6X21 in an RLCM-EDC LCM	Vol. 4, 1-879
NT6X21 in an RSC-S (DS-1) Model A LCME	Vol. 4, 1-883
NT6X21 in an RSC-S (DS-1) Model B LCME	Vol. 4, 1-893
NT6X21 in an RSC-S (PCM-30) Model A LCME	Vol. 4, 1-902
NT6X21 in an RSC-S (PCM-30) Model B LCME	Vol. 4, 1-911
NT6X21 in a STAR or RLD	Vol. 4, 1-920
NT6X27 in an IOPAC HIE	Vol. 4, 1-924
NT6X27 in an OPM HIE	Vol. 4, 1-931
NT6X27 in an RLCM HIE	Vol. 4, 1-938
NT6X30 in an RSC LCM	Vol. 4, 1-945
NT6X30 in an RSC-S (DS-1) Model A LCME	Vol. 4, 1-960
NT6X30 in an RSC-S (DS-1) Model B LCME	Vol. 4, 1-974
NT6X30 in an RSC-S (PCM-30) Model A LCME	Vol. 4, 1-988
NT6X30 in an RSC-S (PCM-30) Model B LCME	Vol. 4, 1-1002
NT6X36 in an IOPAC FSP	Vol. 4, 1-1016

NT6X36 in an OPM Vol. 4, 1-1021
 NT6X36 in an RLCM-EDC FSP Vol. 4, 1-1026
 NT6X36 in an RLCM FSP Vol. 4, 1-1031
 NT6X36 in an RSC-S FSP for CRSC or CEXT Vol. 4, 1-1036

Card Replacement Procedures

Volume 5 of 7

1 XPM card replacement procedures (continued) Vol. 5, 1-1

NT6X40 in an SMA Vol. 5, 1-2
 NT6X40 in an SMA-MVI-20 Vol. 5, 1-14
 NT6X40 in an SMA2 Vol. 5, 1-26
 NT6X40 in an SMS Vol. 5, 1-38
 NT6X40 in an SMU Vol. 5, 1-51
 NT6X41 in an SMA Vol. 5, 1-64
 NT6X41 in an SMA-MVI-20 Vol. 5, 1-71
 NT6X41 in an SMS Vol. 5, 1-78
 NT6X41 in an SMS-R Vol. 5, 1-87
 NT6X41 in an SMU Vol. 5, 1-95
 NT6X42 in an SMA Vol. 5, 1-101
 NT6X42 in an SMA-MVI-20 Vol. 5, 1-107
 NT6X42 in an SMS Vol. 5, 1-114
 NT6X42 in an SMS-R Vol. 5, 1-122
 NT6X44 in an RSC Vol. 5, 1-130
 NT6X44 in an SMA Vol. 5, 1-138
 NT6X44 in an SMA-MVI-20 Vol. 5, 1-144
 NT6X44 in an SMS Vol. 5, 1-150
 NT6X44 in an SMS-R Vol. 5, 1-158
 NT6X45 in an IOPAC HIE Vol. 5, 1-166
 NT6X45 in an OPAC HIE Vol. 5, 1-172
 NT6X45 in an OPM HIE Vol. 5, 1-178
 NT6X45 in an RLCM HIE Vol. 5, 1-184
 NT6X47 in an IOPAC HIE Vol. 5, 1-190
 NT6X47 in an OPM HIE Vol. 5, 1-196
 NT6X47 in an RLCM HIE Vol. 5, 1-202
 NT6X48 in an RSC Vol. 5, 1-208
 NT6X50 in an OPAC HIE Vol. 5, 1-216
 NT6X50 in an OPM HIE Vol. 5, 1-223
 NT6X50 in an RLCM-EDC HIE Vol. 5, 1-230
 NT6X50 in an RLCM HIE Vol. 5, 1-237
 NT6X50 in an RSC Vol. 5, 1-244
 NT6X50 in an SMA Vol. 5, 1-259
 NT6X50 in an SMA-MVI-20 Vol. 5, 1-275
 NT6X51 in an IOPAC ILCM Vol. 5, 1-291
 NT6X51 in an OPAC LCM Vol. 5, 1-298
 NT6X51 in an OPM Vol. 5, 1-305
 NT6X51 in an RLCM Vol. 5, 1-312
 NT6X51 in an RLCM-EDC Vol. 5, 1-319

NT6X51 in an RSC-S (DS-1) Model A LCM	Vol. 5, 1-324
NT6X51 in an RSC-S (DS-1) Model B LCME	Vol. 5, 1-332
NT6X51 in an RSC-S (PCM-30) Model A LCM	Vol. 5, 1-339
NT6X51 in an RSC-S (PCM-30) Model B LCM	Vol. 5, 1-347
NT6X52 in an IOPAC ILCM	Vol. 5, 1-355
NT6X52 in an OPAC LCM	Vol. 5, 1-361
NT6X52 in an OPM	Vol. 5, 1-367
NT6X52 in an RLCM	Vol. 5, 1-373
NT6X52 in an RLCM-EDC	Vol. 5, 1-379
NT6X52 in an RSC LCM	Vol. 5, 1-384
NT6X52 in an RSC-S (DS-1) Model A LCME	Vol. 5, 1-392
NT6X52 in an RSC-S (DS-1) Model B LCME	Vol. 5, 1-401
NT6X52 in an RSC-S (PCM-30) Model A LCME	Vol. 5, 1-410
NT6X53 in an IOPAC ILCM	Vol. 5, 1-418
NT6X53 in an OPAC LCM	Vol. 5, 1-425
NT6X53 in an OPM	Vol. 5, 1-432
NT6X53 in an RLCM	Vol. 5, 1-444
NT6X53 in an RLCM-EDC	Vol. 5, 1-453
NT6X53 in an RSC LCM	Vol. 5, 1-460
NT6X53 in an RSC-S (DS-1) Model A LCM(E)	Vol. 5, 1-469
NT6X53 in an RSC-S (DS-1) Model B LCM(E)	Vol. 5, 1-478
NT6X53 in a STAR	Vol. 5, 1-487
NT6X54 in an IOPAC ILCM	Vol. 5, 1-493
NT6X54 in an OPAC LCM	Vol. 5, 1-500
NT6X54 in an OPM	Vol. 5, 1-509
NT6X54 in an RLCM	Vol. 5, 1-518
NT6X54 in an RLCM-EDC	Vol. 5, 1-527
NT6X54 in an RSC	Vol. 5, 1-533
NT6X54 in an RSC-S (DS-1) Model A LCM(E)	Vol. 5, 1-542
NT6X54 in an RSC-S (DS-1) Model B LCM(E)	Vol. 5, 1-549
NT6X54 in a STAR	Vol. 5, 1-556
NT6X60 in an IOPAC HIE	Vol. 5, 1-565
NT6X60 in an OPAC HIE	Vol. 5, 1-572
NT6X60 in an OPM HIE	Vol. 5, 1-579
NT6X60 in an RLCM HIE	Vol. 5, 1-587
NT6X69 in an RSC-M	Vol. 5, 1-595
NT6X69 in an RSC RCC/RCC2	Vol. 5, 1-605
NT6X69 in an RSC-S (DS-1) Model A RCC2	Vol. 5, 1-613
NT6X69 in an RSC-S (DS-1) Model B RCC2	Vol. 5, 1-622
NT6X69 in an RSC-S (PCM-30) Model A RCO2	Vol. 5, 1-630
NT6X69 in an RSC-S (PCM-30) Model B RCO2	Vol. 5, 1-639
NT6X69 in an SMA	Vol. 5, 1-648
NT6X69 in an SMA-MVI-20	Vol. 5, 1-654
NT6X69 in an SMS	Vol. 5, 1-661
NT6X69 in an SMS-R	Vol. 5, 1-670
NT6X69 in an SMU	Vol. 5, 1-678
NT6X71 in an IOPAC ILCM	Vol. 5, 1-684
NT6X71 in an OPM	Vol. 5, 1-688
NT6X71 in an RLCM	Vol. 5, 1-692
NT6X71 in an RSC LCM	Vol. 5, 1-696
NT6X71 in an RSC-S (DS-1) Model A LCME	Vol. 5, 1-705

NT6X71 in an RSC-S (DS-1) Model B LCME	Vol. 5, 1-713
NT6X71 in a STAR or RLD	Vol. 5, 1-721
NT6X72 in an RSC	Vol. 5, 1-725
NT6X73 in an IOPAC HIE	Vol. 5, 1-734
NT6X73 in an OPAC HIE	Vol. 5, 1-738
NT6X73 in an OPM HIE	Vol. 5, 1-742
NT6X73 in an RLCM-EDC HIE	Vol. 5, 1-746
NT6X73 in an RLCM HIE	Vol. 5, 1-751
NT6X74 in an IOPAC RMM	Vol. 5, 1-755
NT6X74 in an OPM RMM	Vol. 5, 1-761
NT6X74 in an RLCM-EDC RMM	Vol. 5, 1-768
NT6X74 in an RLCM RMM	Vol. 5, 1-775
NT6X74 in an RSC RMM	Vol. 5, 1-782
NT6X74 in an RSC-S (DS-1) Model A RMM	Vol. 5, 1-790
NT6X74 in an RSC-S (DS-1) Model B RMM	Vol. 5, 1-799
NT6X74 in an RSC-S (PCM-30) Model A RMM	Vol. 5, 1-808
NT6X75 in an IOPAC HIE	Vol. 5, 1-817
NT6X75 in an OPAC HIE	Vol. 5, 1-824
NT6X75 in an OPM HIE	Vol. 5, 1-831
NT6X75 in an RLCM HIE	Vol. 5, 1-838
NT6X76 in an RSC LCME	Vol. 5, 1-845
NT6X76 in an RSC-S (DS-1) Model A LCME	Vol. 5, 1-853
NT6X76 in an RSC-S (DS-1) Model B LCME	Vol. 5, 1-861
NT6X76 in a STAR or RLD	Vol. 5, 1-869
NT6X78 in an RSC-M	Vol. 5, 1-876
NT6X78 in an RSC RCC/RCC2	Vol. 5, 1-883
NT6X78 in an RSC-S (DS-1) Model A RCC2	Vol. 5, 1-891
NT6X78 in an RSC-S (DS-1) Model B RCC2	Vol. 5, 1-898
NT6X78 in an RSC-S (PCM-30) Model A RCO2	Vol. 5, 1-905
NT6X78 in an RSC-S (PCM-30) Model B RCO2	Vol. 5, 1-912
NT6X78 in an SMA	Vol. 5, 1-919
NT6X78 in an SMA-MVI-20	Vol. 5, 1-925
NT6X78 in an SMA2	Vol. 5, 1-932
NT6X78 in an SMS	Vol. 5, 1-939
NT6X78 in an SMU	Vol. 5, 1-946
NT6X80 in an SMA	Vol. 5, 1-951
NT6X80 in an SMA-MVI-20	Vol. 5, 1-957
NT6X80 in an SMS	Vol. 5, 1-964
NT6X80 in an SMS-R	Vol. 5, 1-972
NT6X80 in an SMU	Vol. 5, 1-981

Card Replacement Procedures

Volume 6 of 7

1	XPM card replacement procedures (continued)	Vol. 6, 1-1
	NT6X85 in an SMS	Vol. 6, 1-2
	NT6X85 in an SMS-R	Vol. 6, 1-13
	NT6X85 in an SMU	Vol. 6, 1-24

NT6X86 in an SMS	Vol. 6, 1-30
NT6X86 in an SMS-R	Vol. 6, 1-39
NT6X87 in an RSC LCME	Vol. 6, 1-48
NT6X87 in an RSC-S (DS-1) Model B LCME	Vol. 6, 1-56
NT6X92 in an RSC-M	Vol. 6, 1-64
NT6X92 in an RSC RCC/RCC2	Vol. 6, 1-71
NT6X92 in an RSC-S (DS-1) Model A RCC2	Vol. 6, 1-79
NT6X92 in an RSC-S (DS-1) Model B RCC2	Vol. 6, 1-87
NT6X92 in an RSC-S (PCM-30) Model A RCO2	Vol. 6, 1-95
NT6X92 in an RSC-S (PCM-30) Model B RCO2	Vol. 6, 1-104
NT6X92 in an SMA	Vol. 6, 1-112
NT6X92 in an SMA-MVI-20	Vol. 6, 1-118
NT6X92 in an SMA2	Vol. 6, 1-125
NT6X92 in an SMS	Vol. 6, 1-132
NT6X92 in an SMU	Vol. 6, 1-140
NT6X99 in an IOPAC ILCM	Vol. 6, 1-146
NT6X99 in an OPAC LCM	Vol. 6, 1-150
NT6X99 in an OPM	Vol. 6, 1-154
NT6X99 in an RLCM	Vol. 6, 1-158
NT6X99 in an RSC LCM	Vol. 6, 1-162
NT6X99 in an RSC-S (DS-1) Model A LCME	Vol. 6, 1-170
NT6X99 in an RSC-S (DS-1) Model B LCME	Vol. 6, 1-178
NT6X99 in a STAR or RLD	Vol. 6, 1-186
NT7X05 in an RSC RCC/RCC2	Vol. 6, 1-190
NT7X05 in an RSC-S (DS-1) Model A RCC2	Vol. 6, 1-198
NT7X05 in an RSC-S (DS-1) Model B RCC2	Vol. 6, 1-207
NT7X05 in an RSC-S (PCM-30) Model A RCO2	Vol. 6, 1-216
NT7X05 in an RSC-S (PCM-30) Model B RCO2	Vol. 6, 1-225
NT7X05 in an SMS	Vol. 6, 1-234
NT7X05 in an SMS-R	Vol. 6, 1-243
NT7X05 in an SMU	Vol. 6, 1-252
NT8X02 in an OPAC BCU	Vol. 6, 1-261
NT8X02 in an OPM BCU	Vol. 6, 1-265
NT8X18 in an SMS-R	Vol. 6, 1-270
NTAX74 in an RSC-S (DS-1) Model A RCC2	Vol. 6, 1-281
NTAX74 in an RSC-S (DS-1) Model B RCC2	Vol. 6, 1-292
NTAX74 in an RSC-S (PCM-30) Model A RCO2	Vol. 6, 1-303
NTAX74 in an RSC-S (PCM-30) Model B RCO2	Vol. 6, 1-315
NTAX74 in an SMA	Vol. 6, 1-327
NTAX74 in an SMA-MVI-20	Vol. 6, 1-337
NTAX74 in an SMA2	Vol. 6, 1-347
NTAX78 in an SMA	Vol. 6, 1-355
NTAX78 in an SMA-MVI-20	Vol. 6, 1-362
NTAX78 in an SMU	Vol. 6, 1-369
NTBX01 in an RSC RCC2	Vol. 6, 1-374
NTBX01 in an RSC-S (DS-1) Model A RCC2	Vol. 6, 1-381
NTBX01 in an RSC-S (DS-1) Model B RCC2	Vol. 6, 1-390
NTBX01 in an RSC-S (PCM-30) Model A RCO2	Vol. 6, 1-399
NTBX01 in an RSC-S (PCM-30) Model B RCO2	Vol. 6, 1-408
NTBX01 in an SMA	Vol. 6, 1-417
NTBX01 in an SMA-MVI-20	Vol. 6, 1-423

NTBX01 in an SMA2	Vol. 6, 1-430
NTBX01 in an SMU	Vol. 6, 1-437
NTBX02 in an RSC RCC2	Vol. 6, 1-443
NTBX02 in an RSC-S (DS-1) Model A RCC2	Vol. 6, 1-456
NTBX02 in an RSC-S (DS-1) Model B RCC2	Vol. 6, 1-469
NTBX02 in an RSC-S (PCM-30) Model A RCO2	Vol. 6, 1-482
NTBX02 in an RSC-S (PCM-30) Model B RCO2	Vol. 6, 1-495
NTBX02 in an SMA	Vol. 6, 1-508
NTBX02 in an SMA-MVI-20	Vol. 6, 1-515
NTBX02 in an SMA2	Vol. 6, 1-523
NTBX02 in an SMU	Vol. 6, 1-529
NTBX26 in an RSC LCME	Vol. 6, 1-538
NTBX26 in an RSC-S (DS-1) Model A LCME	Vol. 6, 1-546
NTBX26 in an RSC-S (DS-1) Model B LCME	Vol. 6, 1-554
NTBX27 in an RSC LCME	Vol. 6, 1-562
NTBX27 in an RSC-S (DS-1) Model A LCME	Vol. 6, 1-570
NTBX27 in an RSC-S (DS-1) Model B LCME	Vol. 6, 1-578
NTBX27 in a STAR or RLD	Vol. 6, 1-586
NTBX34 in an RSC LCME	Vol. 6, 1-593
NTBX34 in an RSC-S (DS-1) Model A LCME	Vol. 6, 1-601
NTBX34 in an RSC-S (DS-1) Model B LCME	Vol. 6, 1-611
NTBX34 in an RSC-S (PCM-30) Model A LCME	Vol. 6, 1-621
NTBX35 in an RSC LCME	Vol. 6, 1-630
NTBX35 in an RSC-S (DS-1) Model A LCME	Vol. 6, 1-638
NTBX35 in an RSC-S (DS-1) Model B LCME	Vol. 6, 1-648
NTBX35 in an RSC-S (PCM-30) Model A LCME	Vol. 6, 1-658
NTBX36 in an RSC LCME	Vol. 6, 1-667
NTBX36 in an RSC-S (DS-1) Model A LCME	Vol. 6, 1-677
NTBX36 in an RSC-S (DS-1) Model B LCME	Vol. 6, 1-687
NTBX72 in an RSC LCME	Vol. 6, 1-697
NTBX72 in an RSC-S (DS-1) Model A LCME	Vol. 6, 1-706
NTBX72 in an RSC-S (DS-1) Model B LCME	Vol. 6, 1-715
NTBX72 in an RSC-S (PCM-30) Model A LCME	Vol. 6, 1-724
NTEX17 in an RLCM	Vol. 6, 1-733
NTEX17 in an RSC LCM	Vol. 6, 1-743
NTEX17 in an RSC-S (DS-1) Model A LCME	Vol. 6, 1-753
NTEX17 in an RSC-S (DS-1) Model B LCM	Vol. 6, 1-763
NTEX17 in a STAR	Vol. 6, 1-773
NTEX54 in an RLCM	Vol. 6, 1-783
NTEX54 in an RSC LCM	Vol. 6, 1-800
NTEX54 in an RSC-S (DS-1) Model A LCME	Vol. 6, 1-817
NTEX54 in an RSC-S (DS-1) Model B LCM	Vol. 6, 1-834
NTEX54 in a STAR	Vol. 6, 1-851
NTMX45 in an IOPAC HIE	Vol. 6, 1-868
NTMX45 in an OPAC HIE	Vol. 6, 1-878
NTMX45 in an OPM HIE	Vol. 6, 1-888
NTMX45 in an RLCM HIE	Vol. 6, 1-898
NTMX71 in an RSC	Vol. 6, 1-908
NTMX71 in an SMA	Vol. 6, 1-916
NTMX71 in an SMA-MVI-20	Vol. 6, 1-924
NTMX71 in an SMS	Vol. 6, 1-932

NTMX71 in an SMU Vol. 6, 1-940
NTMX72 in an RSC-M Vol. 6, 1-949
NTMX72 in an RSC RCC2 Vol. 6, 1-957
NTMX72 in an RSC-S (DS-1) Model A RCC2 Vol. 6, 1-966
NTMX72 in an RSC-S (DS-1) Model B RCC2 Vol. 6, 1-975
NTMX72 in an RSC-S (PCM-30) Model A RCO2 Vol. 6, 1-984
NTMX72 in an RSC-S (PCM-30) Model B RCO2 Vol. 6, 1-993
NTMX72 in an SMA2 Vol. 6, 1-1002

Card Replacement Procedures

Volume 7 of 7

1 XPM card replacement procedures (continued) Vol. 7, 1-1

NTMX73 in an RSC-M Vol. 7, 1-2
NTMX73 in an RSC RCC2 Vol. 7, 1-9
NTMX73 in an RSC-S (DS-1) Model A RCC2 Vol. 7, 1-17
NTMX73 in an RSC-S (DS-1) Model B RCC2 Vol. 7, 1-26
NTMX73 in an RSC-S (PCM-30) Model A RCO2 Vol. 7, 1-36
NTMX73 in an RSC-S (PCM-30) Model B RCO2 Vol. 7, 1-45
NTMX73 in an SMA2 Vol. 7, 1-54
NTMX74 in an RSC-M Vol. 7, 1-60
NTMX74 in an RSC RCC2 Vol. 7, 1-69
NTMX74 in an RSC-S (DS-1) Model A RCC2 Vol. 7, 1-77
NTMX74 in an RSC-S (DS-1) Model B RCC2 Vol. 7, 1-86
NTMX74 in an RSC-S (PCM-30) Model A RCO2 Vol. 7, 1-95
NTMX74 in an RSC-S (PCM-30) Model B RCO2 Vol. 7, 1-104
NTMX75 in an RSC-M Vol. 7, 1-113
NTMX75 in an RSC RCC2 Vol. 7, 1-120
NTMX75 in an RSC-S (DS-1) Model A RCC2 Vol. 7, 1-128
NTMX75 in an RSC-S (DS-1) Model B RCC2 Vol. 7, 1-136
NTMX75 in an RSC-S (PCM-30) Model A RCO2 Vol. 7, 1-144
NTMX75 in an RSC-S (PCM-30) Model B RCO2 Vol. 7, 1-153
NTMX75 in an SMA2 Vol. 7, 1-162
NTMX76 in an RSC-M Vol. 7, 1-168
NTMX76 in an RSC RCC2 Vol. 7, 1-175
NTMX76 in an RSC-S (DS-1) Model A RCC2 Vol. 7, 1-182
NTMX76 in an RSC-S (DS-1) Model B RCC2 Vol. 7, 1-188
NTMX76 in an RSC-S (PCM-30) Model A RCO2 Vol. 7, 1-195
NTMX76 in an RSC-S (PCM-30) Model B RCO2 Vol. 7, 1-205
NTMX76 in an SMA2 Vol. 7, 1-214
NTMX77 in an RSC Vol. 7, 1-221
NTMX77 in an RSC-M Vol. 7, 1-234
NTMX77 in an RSC-S (DS-1) Model A RCC2 Vol. 7, 1-241
NTMX77 in an RSC-S (DS-1) Model B RCC2 Vol. 7, 1-254
NTMX77 in an RSC-S (PCM-30) Model A RCO2 Vol. 7, 1-267
NTMX77 in an RSC-S (PCM-30) Model B RCO2 Vol. 7, 1-280
NTMX77 in an SMS Vol. 7, 1-293
NTMX77 in an SMS-R Vol. 7, 1-306

NTMX77 in an SMU Vol. 7, 1-318
NTMX79 in an RSC EXT Vol. 7, 1-333
NTMX79 in an RSC-M Vol. 7, 1-343
NTMX79 in an RSC-S (DS-1) Model A EXT Vol. 7, 1-349
NTMX79 in an RSC-S (DS-1) Model B EXT Vol. 7, 1-359
NTMX79 in an RSC-S (PCM-30) Model A EXT Vol. 7, 1-370
NTMX79 in an RSC-S (PCM-30) Model B EXT Vol. 7, 1-380
NTMX79 in an SMA2 Vol. 7, 1-390
NTMX81 in an RSC RCC2 Vol. 7, 1-397
NTMX81 in an RSC-S (DS-1) Model A RCC2 Vol. 7, 1-409
NTMX81 in an RSC-S (DS-1) Model B RCC2 Vol. 7, 1-421
NTMX81 in an SMA2 Vol. 7, 1-435
NTMX81 in a STAR Vol. 7, 1-451
NTMX82 in an RSC-M Vol. 7, 1-465
NTMX82 in an RSC-S (PCM-30) Model A RCO2 Vol. 7, 1-476
NTMX82 in an RSC-S (PCM-30) Model B RCO2 Vol. 7, 1-486
NTMX87 in an RSC-M Vol. 7, 1-496
NTMX87 in an RSC RCC2 Vol. 7, 1-508
NTMX87 in an RSC-S (DS-1) Model A RCC2 Vol. 7, 1-528
NTMX87 in an RSC-S (DS-1) Model B RCC2 Vol. 7, 1-548
NTMX87 in an RSC-S (PCM-30) Model A RCO2 Vol. 7, 1-571
NTMX87 in an RSC-S (PCM-30) Model B RCO2 Vol. 7, 1-592
NTMX87 in an SMA2 Vol. 7, 1-613
NTRX41 in an IOPAC MSP Vol. 7, 1-630
NTRX41 in an OPAC MSP Vol. 7, 1-635
NTRX41 in an RSC-M/MSP Vol. 7, 1-640
NTRX41 in an RSC MSP Vol. 7, 1-645
NTRX41 in an RSC-S (DS-1) Model B MSP Vol. 7, 1-650
NTRX41 in an SMA2 MSP Vol. 7, 1-655
NTRX42 in an IOPAC MSP Vol. 7, 1-660
NTRX42 in an OPAC MSP Vol. 7, 1-677
NTRX42 in an RSC-M/MSP Vol. 7, 1-695
NTRX42 in an RSC MSP Vol. 7, 1-707
NTRX42 in an RSC-S (DS-1) Model B MSP Vol. 7, 1-726
NTRX42 in an RSC-S (PCM-30) Model B MSP Vol. 7, 1-746
NTRX42 in an SMA2 MSP Vol. 7, 1-766
NTRX43 in an IOPAC MSP Vol. 7, 1-778
NTRX43 in an OPAC MSP Vol. 7, 1-785
NTRX43 in an RSC-M/MSP Vol. 7, 1-792
NTRX43 in an RSC MSP Vol. 7, 1-800
NTRX43 in an RSC-S (DS-1) Model B MSP Vol. 7, 1-808
NTRX43 in an SMA2 MSP Vol. 7, 1-816
NTRX44 in an IOPAC MSP Vol. 7, 1-824
NTRX44 in an OPAC MSP Vol. 7, 1-836
NTRX44 in an RSC MSP Vol. 7, 1-848
NTRX44 in an RSC-S (DS-1) Model B MSP Vol. 7, 1-858
NTRX54 in an RSC-M/MSP Vol. 7, 1-868
NTRX54 in an RSC MSP Vol. 7, 1-875
NTRX54 in an RSC-S (DS-1) Model B MSP Vol. 7, 1-882
NTRX54 in an SMA2 MSP Vol. 7, 1-889
NTRX66 MSP Vol. 7, 1-896

NTTR46 in an RLD	Vol. 7, 1-902
NTTR47 in an RLD	Vol. 7, 1-908
NTTR60 in a STAR	Vol. 7, 1-914
NTTR66 in an RLD	Vol. 7, 1-921
NTTR67 in an RLD	Vol. 7, 1-927
NTTR70 in an RLD	Vol. 7, 1-934
NTTR71 in an RLD	Vol. 7, 1-941
NTTR72 in an RLD	Vol. 7, 1-946
NTTR73 in a STAR	Vol. 7, 1-952
NTTR74 in a STAR	Vol. 7, 1-956
NTTR75 in a STAR	Vol. 7, 1-962
NTTR76 in a STAR	Vol. 7, 1-970
NTTR77 in a STAR	Vol. 7, 1-979
NTTR87 in a STAR	Vol. 7, 1-986

1 XPM card replacement procedures (continued)

This chapter provides card replacement procedures for XMS-based peripheral modules (XPM).

NT6X85 in an SMS

Application

Use this procedure to replace an NT6X85 card in an SMS.


PEC	Suffixes	Name
NT6X85	AA, AB, AC	DS-1 interface for SLC-96

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

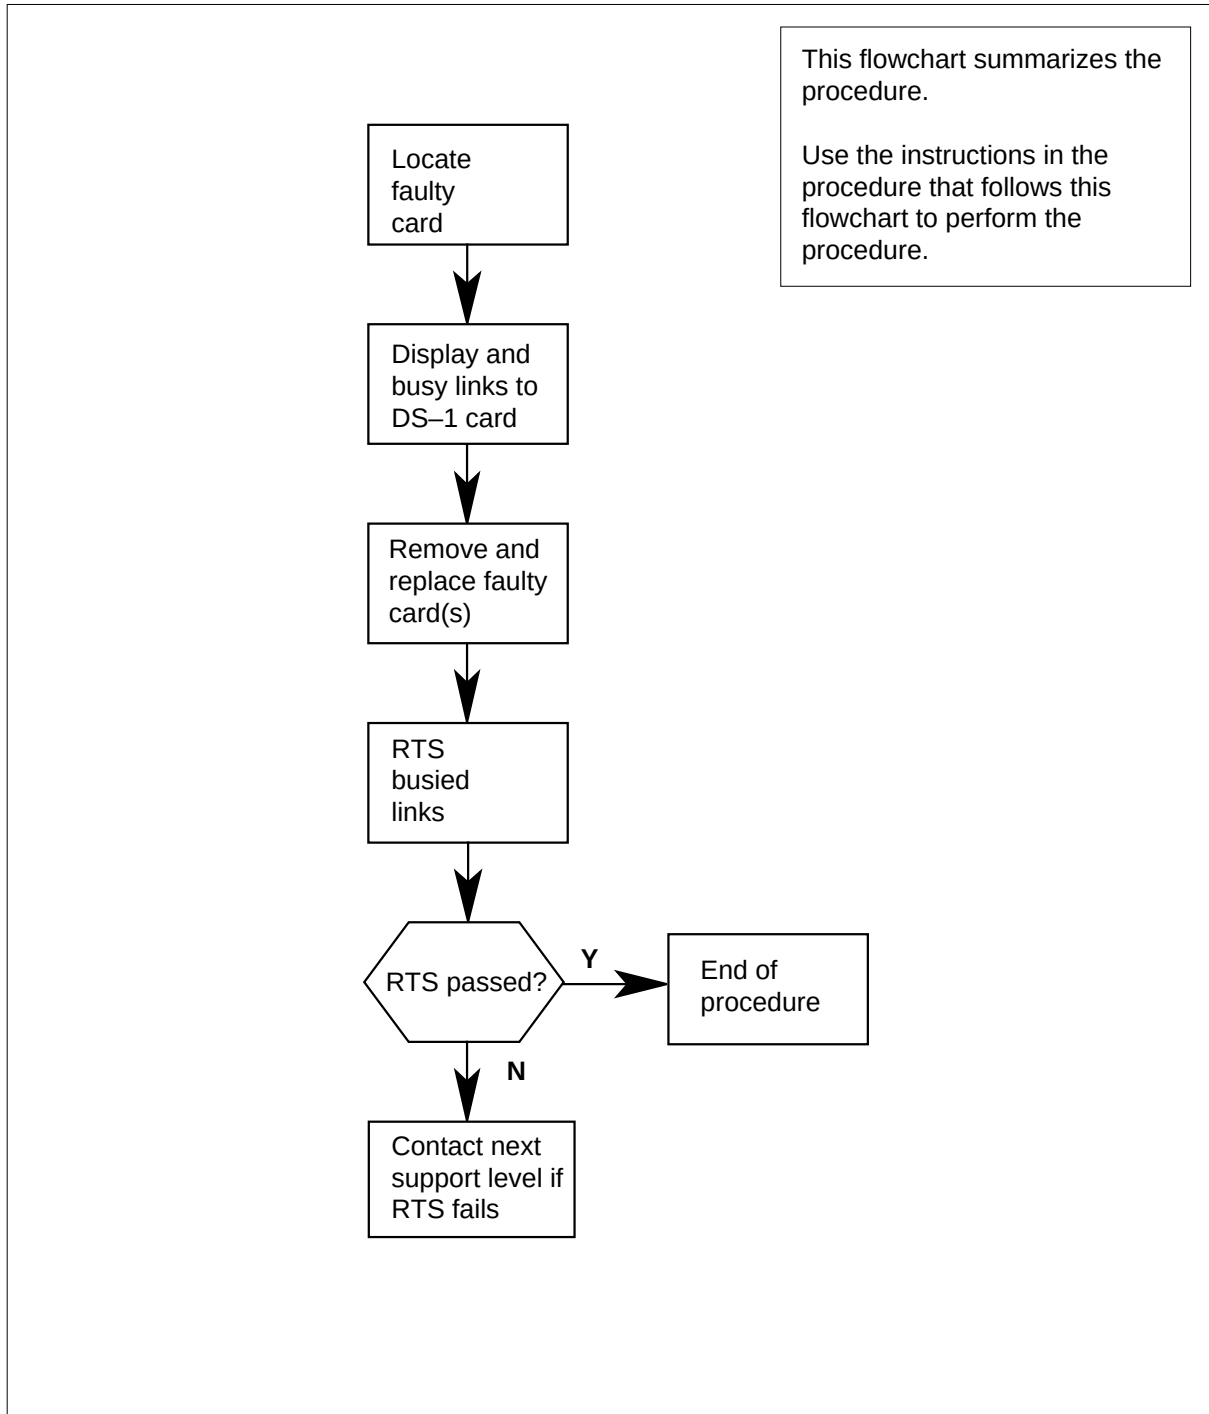NT6X85
in an SMS (continued)**Summary of card replacement procedure for an NT6X85 card in an SMS**

NT6X85 in an SMS (continued)

Replacing an NT6X85 card in an SMS

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Verify the replacement card has the same product engineering code (PEC), including suffix, as the card to be removed and the dual in-line package (DIP) switch settings are the same as the card being replaced.

At the MAP terminal

- 3 Access the PM level of the MAP display by typing
>MAPCI;MTC;PM;POST SMS sms_no
and pressing the Enter key
where
sms_no
 is 0-127 for NT40 and 0-255 for DMS SuperNode

Example of a MAP response

SMS	3	INSV	LINKS_00S	CSIDE 0	PSIDE 1
Unit0		Act	InSv		
Unit1		Inact	ISTb		

- 4 Display the DS-1 links associated with the faulty DS-1 interface card by typing
>TRNSL P
and pressing the Enter key.

Record all link numbers, information on faulty links, and any protection line information. Each 6X85 card has 2 ports; for instance, ports 0 and 1 are on one 6X85 card. Look at the link, RCS location, and port numbers in the MAP display. The first line indicates that link 0 is routed to RCS location BRCS 00 0. Link 0 is a protection line.

Example of a MAP response

NT6X85 in an SMS (continued)

```
LINK 0: RCS    BRCS 00 0    ;Protline;
LINK 1: RCS    BRCS 00 1    ;Protline;
LINK 2: RCS    BRCS 00 2    0;CAP MS;STATUS:OK    ;MSGCOND:OPN
LINK 3: RCS    BRCS 00 2    1;CAP MS;STATUS:SysB    ;MSGCOND:CLS
```

If	Do
0 protection lines recorded in step 4	step 9
1 protection line recorded in step 4	step 5
2 or more protection lines recorded in step 4	step 7

- 5 Access the carrier level of the MAP display by typing
>TRKS;CARRIER;POST SMS mod_no link_no
 and pressing the Enter key.

where

mod_no

is 0-127 with an NT40 and 0-255 with DMS SuperNode

link_no

is the number of a protection line connected to the faulty card

This command ensures a protection line will be displayed.

Example of a MAP response

CLASS	ML	OS	ALARM	SYSB	MANB	UNEQ	OFFL	CBSY	PBSY	INSV
TRUNKS	0	0	0	0	0	0	0	0	0	0
REMOTE	0	0	0	5	1	0	0	1	0	10

NO	CLASS	SITE	SMS	CKT	D	ALARM	SLIP	FRAME	BER	SES	STATE
0	REMOTE	BRSC	0	3	C		0	0	<-.7	0	SysB

- 6 Proceed to step 8.

- 7 Access the carrier level of the MAP display by typing
>TRKS;CARRIER;POST SMS mod_no link_no SMS mod_no link_no
 ...

and pressing the Enter key.

where

mod_no

is 0-127 with an NT40 and 0-255 with DMS SuperNode

link_no

is the number of a protection line connected to the faulty card

NT6X85 in an SMS (continued)

Note: As many as five SMS mod_no link_no commands can be executed in a string command, with spacing as shown in the command string here. This command ensures a protection line will be displayed.

Example of a MAP response

CLASS	ML	OS	ALARM	SYSB	MANB	UNEQ	OFFL	CBSY	PBSY	INSV
TRUNKS	0	0	0	0	0	0	0	0	0	0
REMOTE	0	0	0	5	1	0	0	1	0	10

NO	CLASS	SITE	SMS	CKT	D	ALARM	SLIP	FRAME	BER	SES	STATE
0	REMOTE	BRSC	0	2	C		0	0	<-.7	0	SysB
1	REMOTE	BRSC	0	3	C		0	0	<-.7	0	SysB

- 8 Busy the protection line or lines connected to the faulty NT6X85 card by typing

>BSY line_no

and pressing the Enter key.

where

line_no

is the number of the protection line connected to the faulty NT6X85 card

Note 1: Protection line numbers are listed in the NO column in the MAP display response in step 7.

Note 2: Repeat this busy command for each protection line connected to the faulty card.

If	Do
both protection lines busied on same NT6X85 card	step 11
one protection line on NT6X85 card busied and other line on same card is unprotected	step 9

- 9 Access the PM level of the MAP display by typing

>PM;POST SMS sms_no

and pressing the Enter key.

where

sms_no

is 0-127 for NT40 and 0-255 for DMS SuperNode

Example of a MAP response

SMS	3	INSV	LINKS_00S	CSIDE	0	PSIDE	2
Unit0		Act	InSv				
Unit1		Inact	ISTb				

- 10 Busy all links connected to the faulty NT6X85 card by typing

>BSY LINK link_no

NT6X85 in an SMS (continued)

and pressing the Enter key.

where

link no

is the number of the link connected to the faulty NT6X85 card

Repeat this command for each link to the faulty card.

At the frame

11



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the SMS. This protects the equipment against damage caused by static electricity. Do not replace more than one NT6X85 card at a time.

Put on a wrist strap.

12



DANGER


Equipment damage

When removing or inserting a card, do not apply direct pressure to the components and do not force the cards into the slots.


Remove the NT6X85 card as shown in the following figures.

- a** Locate the card to be removed on the appropriate shelf.


NT6X85 in an SMS (continued)

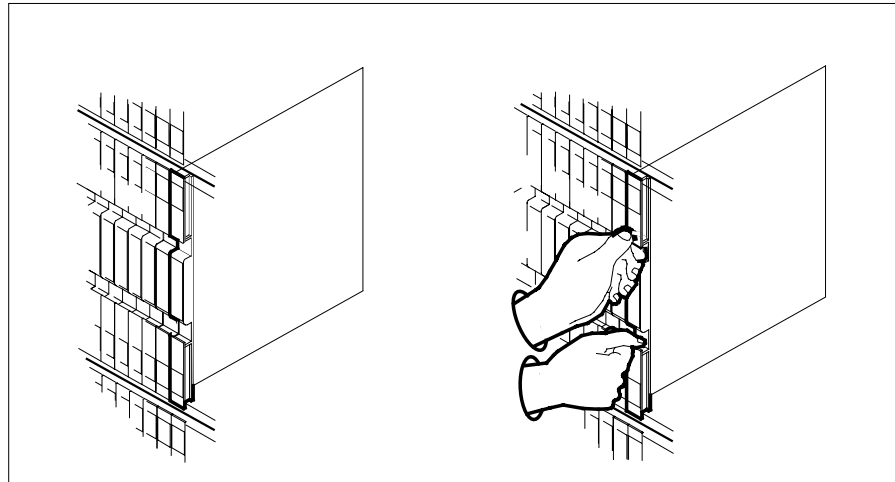


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

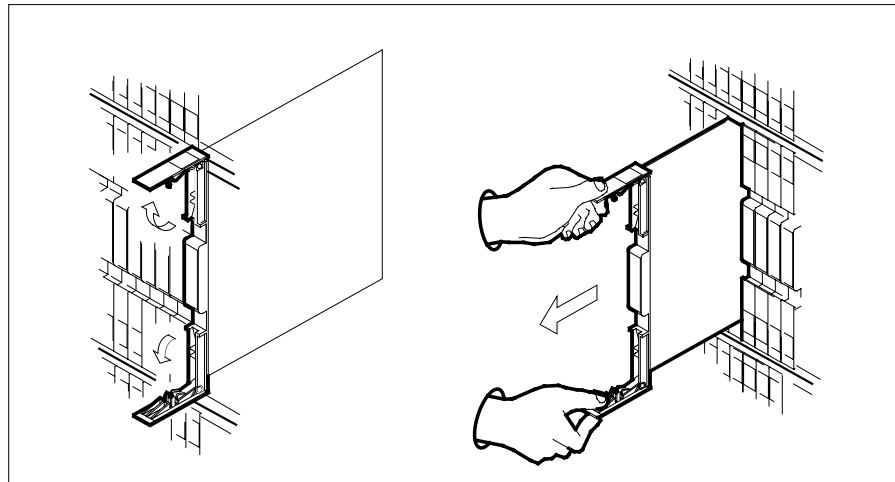

- c** Verify the replacement card has the same PEC, including suffix, as the card you just removed.
- 13** Open the locking levers on the replacement card. Align the card with the slots in the shelf and gently slide the card into the shelf.

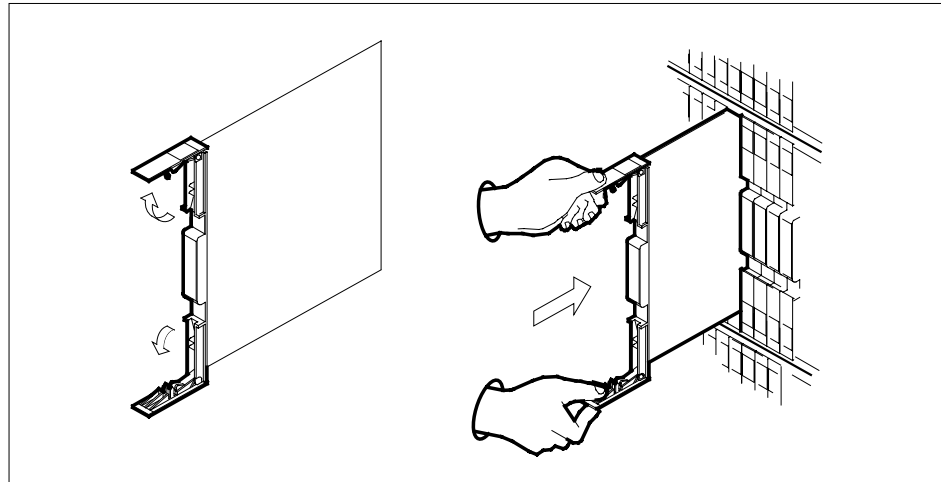NT6X85
in an SMS (continued)

- 14** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

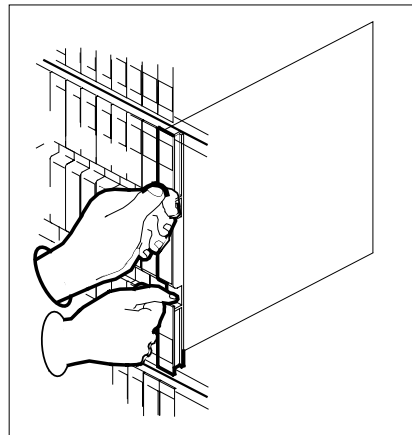

- 15** Use the following information to determine what step to go to next in this procedure.

If	Do
one protection line busied in step 8 and you are at the PM level	step 5, then step 16
two protection lines busied in step 8 and you are at carrier level	step 16

NT6X85 in an SMS (continued)

If	Do
no protection lines were busied	step 17

At the MAP terminal

- 16** Return all busied protection lines to service by typing
>RTS line_no
and pressing the Enter key.
where
line_no
is the number of the protection line connected to the new NT6X85 card
Repeat this command for each busied protection line.

If	Do
no protection line returned to service	step 21
one protection line returned to service and another link was busied at the PM level	step 9, then step 17
two protection lines returned to service	step 17

- 17** Return all busied links to service by typing
>RTS LINK link_no
and pressing the Enter key
where
link_no
is the number of the link connected to the faulty NT6X85 card
Repeat this command for each busied link.

If RTS	Do
passed	step 18
failed	step 21

- 18** Send any faulty cards for repair according to local procedure.

NT6X85 in an SMS (continued)

- 19** Note in office records according to local policy:
- date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
- 20** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.
- 21** Contact the appropriate support personnel if busied links do not return to service.

The following tables describe the dip switch settings for the NT6X85AB and NT6X85AC cards.

Switch settings for NT6X85AB and NT6X85AC with 8 dip switches

Distance	Leave the switch contacts ON and leave all others OFF
0 m to 91 m (0 ft to 300 ft)	SW2 SSW4
92 m to 137 m (301 ft to 452 ft)	SW3 SW6 SW8
138 m to 200 m (453 ft to 655 ft)	SW1 SW5 SW7

Switch settings for NT6X85AC with 3 dip switches for 24 AWG DS-1 cable

Card release and length of cables	Leave the switch contacts ON and leave all others OFF
NT6X85AC, release 4 version 1	
0 m to 27 m (0 ft to 86 ft)	SW1
27 m to 55 m (86 ft to 180 ft)	SW2 SW3
55 m to 82 m (180 ft to 269 ft)	SW2
82 m to 110 m (269 ft to 361 ft)	SW3
110 m to 116 m (361 ft to 380 ft)	None, all contacts are to be open

NT6X85

in an SMS (end)

Switch settings for NT6X85AC with 3 dip switches for 22 AWG DS-1 cable

Card release and length of cables	Leave the switch contacts ON and leave all others OFF
NT6X85AC, release 4 version 1	
0 m to 41 m (0 ft to 133 ft)	SW1
41 m to 81 m (133 ft to 266 ft)	SW2 SW3

**NT6X85
in an SMS-R**

Application

Use this procedure to replace the following card in an SMS-R.

PEC	Suffixes	Name
NT6X85	AA, AB, AC	DS-1 Interface for SLC-96

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NT6X85 in an SMS-R (continued)

Summary of card replacement procedure for an NT6X85 card in an SMS-R

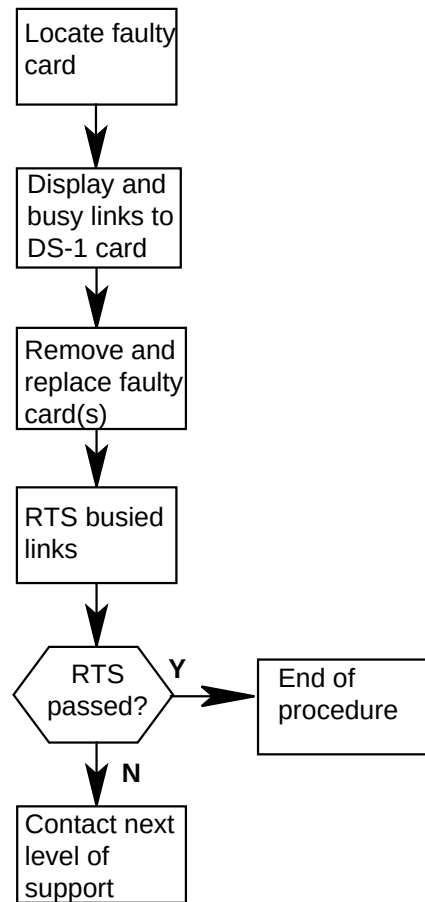

This flowchart summarizes the procedure.

Use the instructions in the procedure that follows this flowchart to perform the procedure.

NT6X85 in an SMS-R (continued)

Replacing an NT6X85 card in an SMS-R

At your Current Location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure to verify or accept cards, or were directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Ensure that the replacement card has the same product engineering code (PEC) including suffix, as the card to be removed and the dual in-line package (DIP) switch settings are set the same as the card being replaced.

At the MAP display

- 3 Access the PM level of the MAP display by typing
>MAPCI;MTC;PM;POST SMSR smsr_no
 and pressing the Enter key.

where

smsr_no

is the number of the SMS-R to be posted

Example of a MAP response:

SMSR 3	INSV	LINKS_OOS	CSIDE 0	PSIDE 1
Unit0	Act	InSv		
Unit1	InAct	ISTb		

- 4 Display the DS-1 links associated with the faulty DS-1 interface card by typing
>TRNSL P
 and pressing the Enter key.

Record all link numbers, information on faulty links, and any protection line information. Each 6X85 card has two ports; for instance, ports 0 and 1 are on one 6X85 card. Look at the link, RCS location, and port numbers in the following MAP display. The first line indicates that link 0 is routed to RCS location BRCS 00 0. Link 0 is a protection line.

Example of a MAP response:

NT6X85 in an SMS-R (continued)

```
LINK 0: RCS    BRCS 00 0    ;Protline;
LINK 1: RCS    BRCS 00 1    ;Protline;
LINK 2: RCS    BRCS 00 2    0;CAP MS;STATUS:OK    ;MSGCOND:OPN
LINK 3: RCS    BRCS 00 2    1;CAP MS;STATUS:SysB    ;MSGCOND:CLS
```

If	Do
no protection lines recorded in step 4	step 9
one protection line recorded in step 4	step 5
two or more protection lines recorded in step 4	step 7

- 5 Access the carrier level of the MAP display by typing
>TRKS;CARRIER;POST SMSR smsr_no link_no
 and pressing the Enter key.

where

smsr_no
 is 0-127 range for NT40 and 0-255 range for DMS SuperNode.

link_no
 is the number of a protection line connected to the faulty card.

Note: This command ensures that a protection line will be displayed.

Example of a MAP response:

CLASS	ML	OS	ALARM	SYSB	MANB	UNEQ	OFFL	CBSY	PBSY	INSV
TRUNKS	2	0	4	1	0	22	5	0	0	255
REMOTE	1	1	3	5	1	0	0	1	0	10

N	CLASS	SITE	SMS	CK	D	ALARM	SLIP	FRME	BER	ES	SES	STATE
0	REMOTE	BRSC	0	2	C		0	0	<-7	0	0	SysB

- 6 Proceed to step 8.

- 7 Access the carrier level of the MAP display by typing
>TRKS;CARRIER;POST SMSR smsr_no link_no SMSR smsr_no link_no ...

and pressing the Enter key.

where

smsr_no
 is 0-127 for NT40 and 0-255 for DMS SuperNode.

link_no
 is the number of a protection line connected to the faulty card.

NT6X85 in an SMS-R (continued)

Note 1: As many as five SMS-R smsr_no link_no commands can be executed in a string command, with spacing as shown in the command string above.

Note 2: This command ensures that a protection line will be displayed.

Example of a MAP response:

CLASS	ML	OS	ALARM	SYSB	MANB	UNEQ	OFFL	CBSY	PBSY	INSV
TRUNKS	2	0	4	1	0	22	5	0	0	255
REMOTE	1	1	3	5	1	0	0	1	0	10

N	CLASS	SITE	SMS	CK	D	ALARM	SLIP	FRME	BER	ES	SES	STATE
0	REMOTE	BRSC	0	2	C		0	0	<-7	0	0	SysB
1	REMOTE	BRSC	0	3	C		0	0	<-7	0	0	SysB

- 8** Busy the protection line or lines connected to the faulty NT6X85 card by typing

>BSY n

and pressing the Enter key.

where

n

is the number of the protection line connected to the faulty NT6X85 card

Protection line numbers are listed in the *NO* column in the MAP display in step 7 above. Repeat this busy command for each protection line connected to the faulty card.

If	Do
both protection lines busied on same NT6X85 card	step 11
one protection line on NT6X85 card busied and other line on same card is unprotected	step 9

- 9** Access the PM level of the MAP display by typing

>PM;POST SMSR smsr_no

and pressing the Enter key.

where

smsr_no

is the number of the SMS-R to be posted

Example of a MAP response:

SMSR	3	INSV	LINKS_00S	CSIDE	0	PSIDE	2
Unit0		Act	InSv				
Unit1		InAct	ISTb				

- 10** Busy all links connected to the faulty NT6X85 card by typing

>BSY LINK n

NT6X85 in an SMS-R (continued)

and pressing the Enter key.

where

n

is the number of the link connected to the faulty NT6X85 card.

Note: Repeat this command for each link to the faulty card.

At the frame

11



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the SMS-R. This protects the equipment against damage caused by static electricity. Do not replace more than one NT6X85 card at a time.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.


Put on a wrist strap.

12


Remove the NT6X85 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

NT6X85
in an SMS-R (continued)

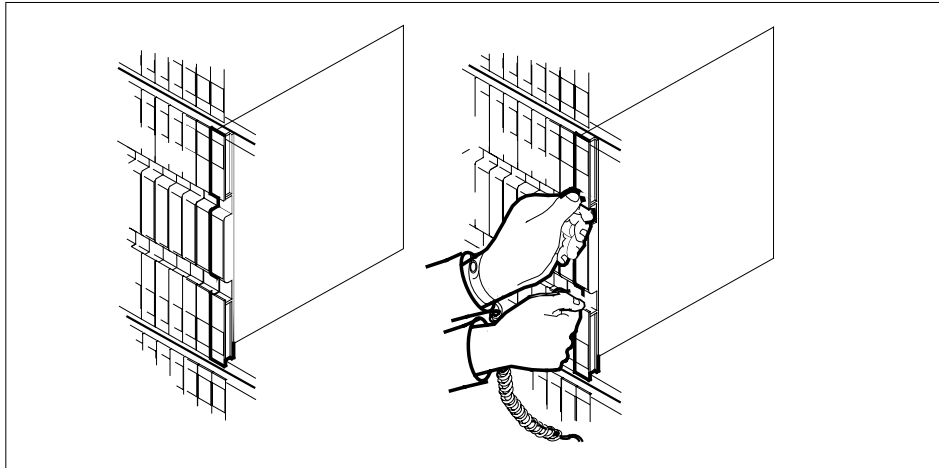


- b** Open the locking levers on the card to be replaced and gently pull the card towards you until it clears the shelf.

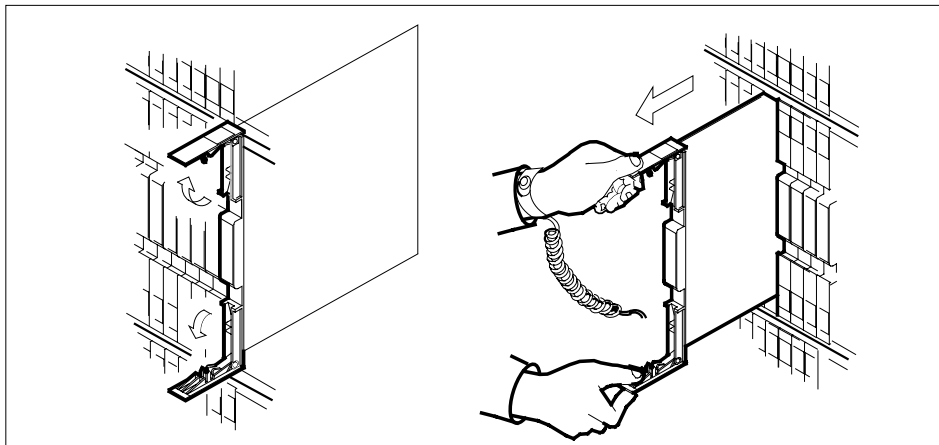


- c** Verify that the replacement card has the same PEC including suffix, as the card you just removed.
- 13** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf and gently slide the card into the shelf.

NT6X85 in an SMS-R (continued)

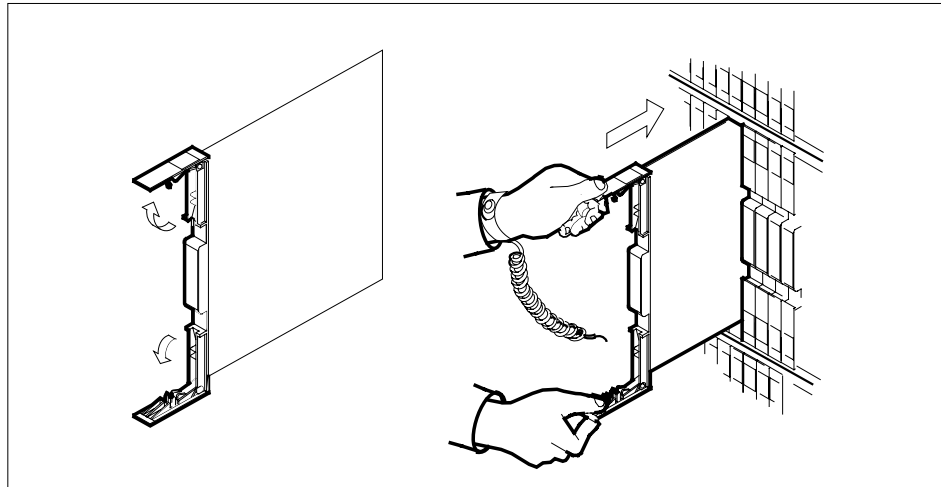

- 14** Seat and lock the card.
- a** Align the card with the slots in the shelf and gently slide the card into the shelf.
 - b** Close the locking levers.

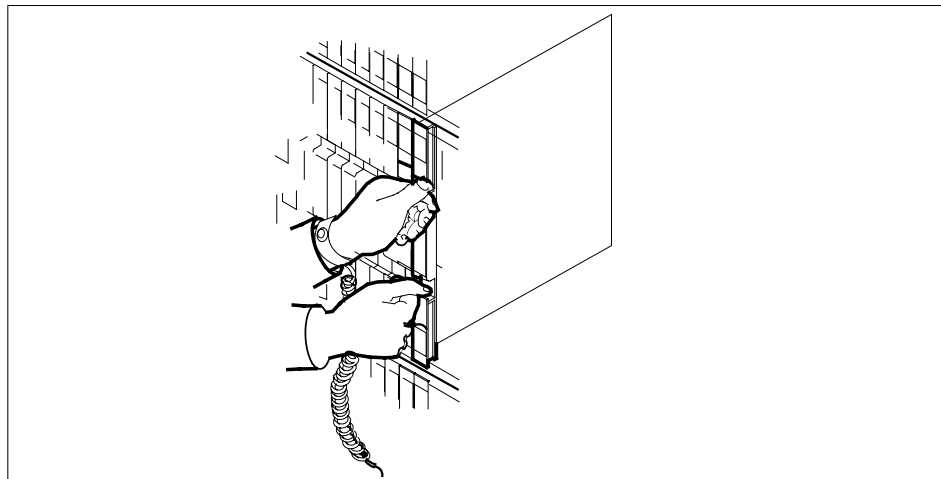

At the MAP display

- 15** Return all busied protection lines to service by typing
>RTS n
and pressing the key.
where

NT6X85 in an SMS-R (continued)

	n is the number of the link connected to the new NT6X85 card								
	<table> <tr> <th>If</th><th>Do</th></tr> <tr> <td>one protection line busied in step 8 and you're at PM level</td><td>step 5, then step 15</td></tr> <tr> <td>two protection lines busied in step 8 and you're at carrier level</td><td>step 15</td></tr> </table>	If	Do	one protection line busied in step 8 and you're at PM level	step 5, then step 15	two protection lines busied in step 8 and you're at carrier level	step 15		
If	Do								
one protection line busied in step 8 and you're at PM level	step 5, then step 15								
two protection lines busied in step 8 and you're at carrier level	step 15								
16	Repeat this command for each busied protection line.								
	<table> <tr> <th>If</th><th>Do</th></tr> <tr> <td>no protection line returned to service</td><td>step 18</td></tr> <tr> <td>one protection line returned to service and another link was busied at the PM level</td><td>step 9, then step 17</td></tr> <tr> <td>two protection lines returned to service</td><td>step 19</td></tr> </table>	If	Do	no protection line returned to service	step 18	one protection line returned to service and another link was busied at the PM level	step 9, then step 17	two protection lines returned to service	step 19
If	Do								
no protection line returned to service	step 18								
one protection line returned to service and another link was busied at the PM level	step 9, then step 17								
two protection lines returned to service	step 19								
17	Return all busied links to service by typing >RTS LINK n and pressing the Enter key. <i>where</i> n is the number of the link connected to the new NT6X85 card Note: Repeat this command for each busied protection line. <table> <tr> <th>If RTS</th><th>Do</th></tr> <tr> <td>passes</td><td>step 19</td></tr> <tr> <td>fails</td><td>step 18</td></tr> </table>	If RTS	Do	passes	step 19	fails	step 18		
If RTS	Do								
passes	step 19								
fails	step 18								
18	Contact the appropriate support personnel if busied links do not return to service.								
19	Send any faulty cards for repair according to local procedure.								
20	Note the following in office records according to local policy: - the date the card was replaced - the serial number of the card - the symptoms that prompted replacement of the card								

NT6X85 in an SMS-R (continued)

- 21** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

The following tables describe the dip switch settings for the NT6X85AB and NT6X85AC cards.

Switch settings for NT6X85AB and NT6X85AC with 8 dip switches

Distance	Leave the switch contacts ON and leave all others OFF
0 m to 91 m (0 ft to 300 ft)	SW2 SSW4
92 m to 137 m (301 ft to 452 ft)	SW3 SW6 SW8
138 m to 200 m (453 ft to 655 ft)	SW1 SW5 SW7

Switch settings for NT6X85AC with 3 dip switches for 24 AWG DS-1 cable

Card release and length of cables	Leave the switch contacts ON and leave all others OFF
NT6X85AC, release 4 version 1	
0 m to 27 m (0 ft to 86 ft)	SW1
27 m to 55 m (86 ft to 180 ft)	SW2 SW3
55 m to 82 m (180 ft to 269 ft)	SW2
82 m to 110 m (269 ft to 361 ft)	SW3
110 m to 116 m (361 ft to 380 ft)	None, all contacts are to be open

Switch settings for NT6X85AC with 3 dip switches for 22 AWG DS-1 cable (Sheet 1 of 2)

Card release and length of cables	Leave the switch contacts ON and leave all others OFF
NT6X85AC, release 4 version 1	
0 m to 41 m (0 ft to 133 ft)	SW1
41 m to 81 m (133 ft to 266 ft)	SW2 SW3
81 m to 122 m (266 ft to 399 ft)	SW2

NT6X85
in an SMS-R (end)

Switch settings for NT6X85AC with 3 dip switches for 22 AWG DS-1 cable
(Sheet 2 of 2)

Card release and length of cables	Leave the switch contacts ON and leave all others OFF
122 m to 163 m (339 ft to 533 ft)	SW3
163 m to 200 m (533 ft to 655 ft)	None, all contacts are to be open

NT6X85 in an SMU

Application

Use this procedure to replace the following card in an SMU.

PEC	Suffixes	Name
NT6X85	AA, AB, AC	DS-1 interface for SMU

Common procedures

The common replacing a card procedure is referenced in this procedure.


Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NT6X85
in an SMU (continued)

This flowchart summarizes the procedure.

Use the instructions in the procedure that follows this flowchart to perform the procedure.

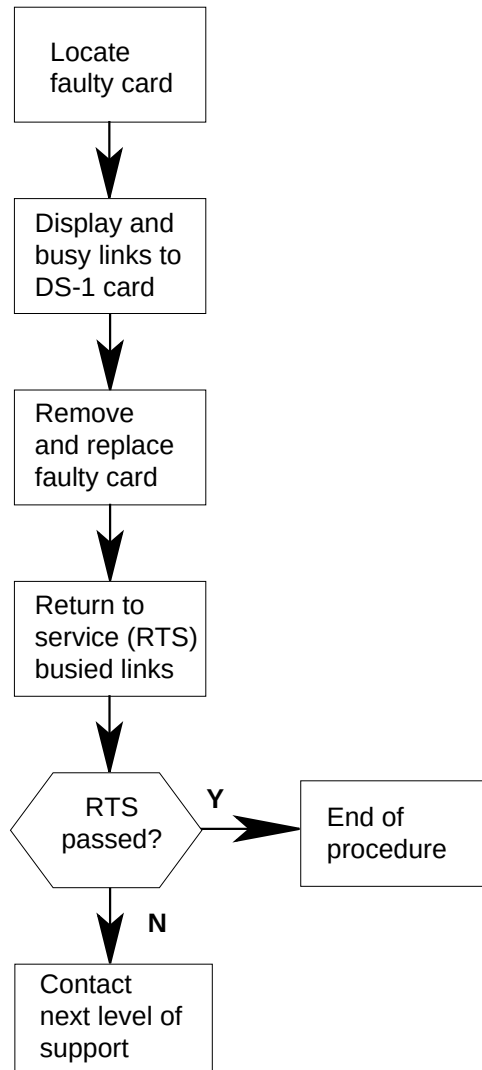

NT6X85 in an SMU (continued)

Replacing an NT6X85 card in an SMU

At your current location:

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Get a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card to be removed and dual in-line package (DIP) switch setting are set to match the card being replaced.

At the MAP terminal:

- 3 Access the PM level of the MAP terminal and post the SMU by typing
>MAPCI;MTC;PM;POST SMU smu_no
 and pressing the Enter key.

where

smu_no

is the number of the SMU to be posted

Example of a MAP response:

SMU	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMU	0	0	0	0	1	7

```
SMU 0 ISTb Links_00S: CSide 0, PSide 1
Unit0: Act ISTb
Unit1: Inact InSv
```

- 4 Display the DS-1 links associated with the faulty DS-1 interface card by typing
>TRNSL P
 and pressing the Enter key.


Example of a MAP response:

```
LINK 0 RCU RCU0 01 0 1;CAP S;STATUS: OK
LINK 1 RCU RCU0 01 0 2;CAP S;STATUS: OK
LINK 2 RCU RCU0 01 0 3;CAP MS;STATUS: OK MSGCOND: OPN
LINK 3 RCU RCU0 01 0 4;CAP MS;STATUS: OK MSGCOND: OPN
LINK 4 RCU RCU0 01 0 5;CAP S;STATUS: OK
LINK 5 RCU RCU0 01 0 6;CAP S;STATUS: OK
LINK 6 RCU RCU0 01 0 7;CAP S;STATUS: SBsy
```

Record the link number for each faulty link. For example, link 6 in this example is faulty.

NT6X85 in an SMU (continued)

- 5 Use the following diagram to determine which DS-1 interface card or cards correspond to the link or links identified as faulty in step 4. Note that each NT6X85 card is associated with two links (link numbers are shown in bold). For example, the faulty link displayed in step 4 is link 6. Link 6 corresponds to the NT6X85 card in slot 4 of unit 1.

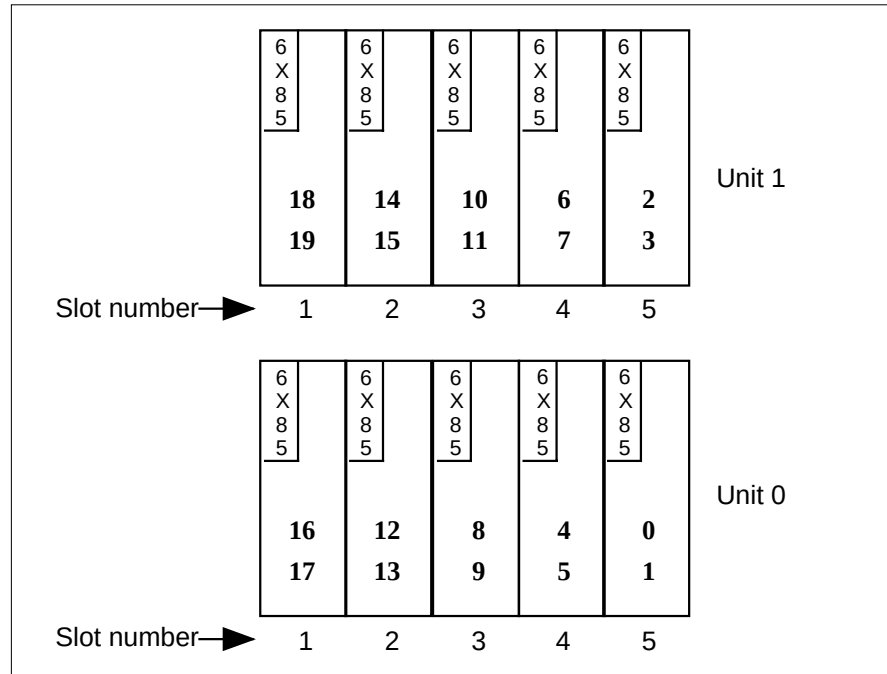

- 6 Busy both links connected to the faulty NT6X85 card by typing
>BSY LINK link_no
 and pressing the Enter key.
where
link_no
 is the number of one of the two links associated with the faulty NT6X85 card
Note: Repeat this command for the other link connected to the new card.
- 7 Go to the common replacing a card procedure in this document, then return to step 8 of this procedure.
- 8 Return all busied links to service by typing
>RTS LINK link_no
 and pressing the Enter key.
where
link_no
 is the number of one of the links associated with the new NT6X85 card

NT6X85 in an SMU (continued)

Note: Repeat this command for the other link connected to the new card.

	If RTS	Do
	passed	step 10
	failed	step 9
9	Contact personnel responsible for higher level support and get further help to replace this card.	
10	Send any faulty cards for repair according to local procedure.	
11	Note the following in the office records: • date the card was replaced • serial number of the card • symptoms that prompted replacement of the card	
12	You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.	
	The following tables describe the dip switch settings for the NT6X85AB and NT6X85AC cards.	

Switch settings for NT6X85AB and NT6X85AC with 8 dip switches

Distance	Leave the switch contacts ON and leave all others OFF
0 m to 91 m (0 ft to 300 ft)	SW2 SSW4
92 m to 137 m (301 ft to 452 ft)	SW3 SW6 SW8
138 m to 200 m (453 ft to 655 ft)	SW1 SW5 SW7

Switch settings for NT6X85AC with 3 dip switches for 24 AWG DS-1 cable (Sheet 1 of 2)

Card release and length of cables	Leave the switch contacts ON and leave all others OFF
NT6X85AC, release 4 version 1	
0 m to 27 m (0 ft to 86 ft)	SW1
27 m to 55 m (86 ft to 180 ft)	SW2 SW3
55 m to 82 m (180 ft to 269 ft)	SW2

NT6X85 in an SMU (end)

Switch settings for NT6X85AC with 3 dip switches for 24 AWG DS-1 cable (Sheet 2 of 2)

Card release and length of cables	Leave the switch contacts ON and leave all others OFF
82 m to 110 m (269 ft to 361 ft)	SW3
110 m to 116 m (361 ft to 380 ft)	None, all contacts are to be open

Switch settings for NT6X85AC with 3 dip switches for 22 AWG DS-1 cable

Card release and length of cables	Leave the switch contacts ON and leave all others OFF
NT6X85AC, release 4 version 1	
0 m to 41 m (0 ft to 133 ft)	SW1
41 m to 81 m (133 ft to 266 ft)	SW2 SW3
81 m to 122 m (266 ft to 399 ft)	SW2
122 m to 163 m (339 ft to 533 ft)	SW3
163 m to 200 m (533 ft to 655 ft)	None, all contacts are to be open

NT6X86 in an SMS

Application

Use this procedure to replace an NT6X86 card in an SMS.


PEC	Suffixes	Name
NT6X86	AB	A-bit message card

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

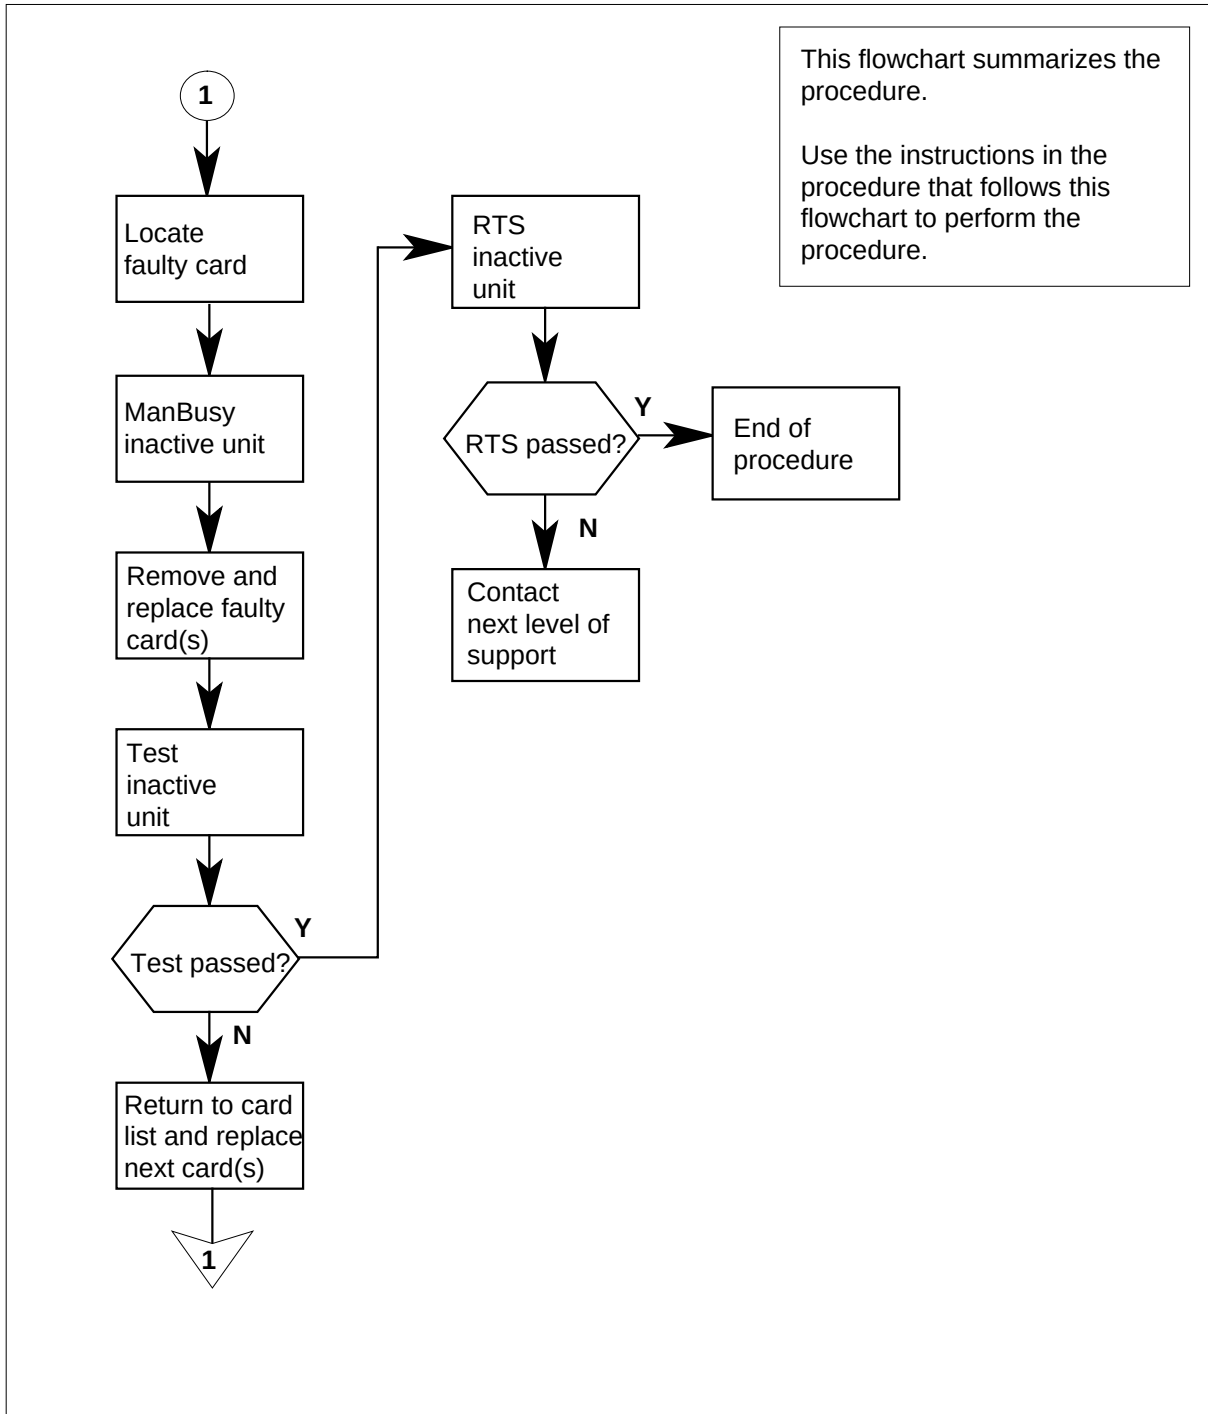NT6X86
in an SMS (continued)**Summary of card replacement procedure for an NT6X86 card in an SMS**

NT6X86 in an SMS (continued)

Replacing an NT6X86 card in an SMS

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the SMS, ensure the unit where you are replacing the card is inactive and the mate unit is active.

Obtain a replacement card. Verify the replacement card has the same product engineering code (PEC), including suffix, as the card to be removed.

Note: When the SMS peripheral is equipped with XPM PLUS (NTMX77AA Unified Processor), the NT6X86AB card is required. The 6X86AB is backward compatible and can be used with the Master Processor/Signal Processor (MP/SP) complex (NT6X45, 6X46, 6X47). The 6X86AA version can be used only in MP/SP SMSs and *cannot* be used in XPM PLUS equipped SMSs. When replacing the NT6X86 card, ensure the correct card is replaced with the appropriate AA or AB version.

At the MAP terminal

- 3 Access the PM level of the MAP display by typing

>MAPCI;MTC;PM;POST SMS sms_no

and pressing the Enter key.

where

sms_no

is 0-127 for NT40 and 0-255 for DMS SuperNode

Example of a MAP response

SMS 3	INSV	LINKS_00S	CSIDE 0	PSIDE 0
Unit0	Act	InSv		
Unit1	Inact	ISTb		

NT6X86 in an SMS (continued)

- 4 By observing the MAP display, be sure the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 8

- 5 Switch the activity of the units by typing

>SWACT

and pressing the Enter key.

The system determines the type of SWACT it can perform and displays a confirmation prompt for the selected SWACT.

If SWACT	Do
can continue at this time	step 6
cannot continue at this time	step 23

- 6 Switch the activity of the unit by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SwAct passed	step 8
SwAct failed	step 7
SwAct failedReason: XPM SwActback	step 7
SwAct refused by SwAct controller	step 7

- 7 Return to the "SMS alarm clearing procedures" section in this document to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 6 of this procedure.

NT6X86 in an SMS (continued)

At the frame

- 8 Put a sign on the active unit bearing the words: *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 9 Busy the inactive PM unit by typing
>bsy unit unit_no
and pressing the Enter key.
where
unit_no
is the number of the faulty SMS unit

At the frame

10



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the SMS. This protects the equipment against damage caused by static electricity.

Put on a wrist strap.

11



DANGER


Equipment damage

When removing or inserting a card, do not apply pressure to the components and do not force the cards into the slots.


Remove the NT6X86 card as shown in the following figures.

- a Locate the card to be removed on the appropriate shelf.

NT6X86
in an SMS (continued)

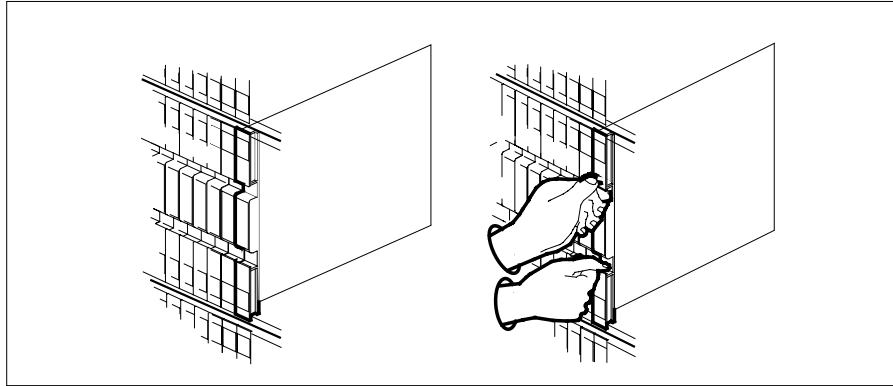


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

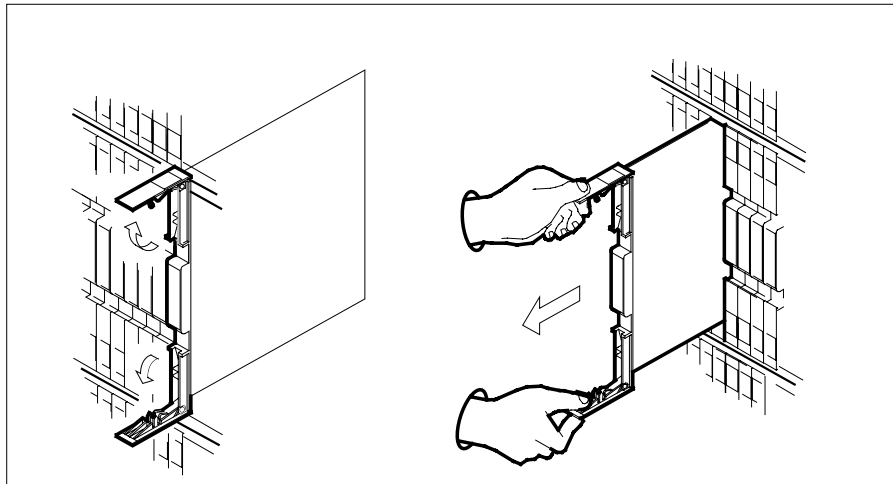


- c** Verify the replacement card has the same PEC, including suffix, as the card you just removed.
- 12** Open the locking levers on the replacement card. Align the card with the slots in the shelf and gently slide the card into the shelf.

NT6X86 in an SMS (continued)

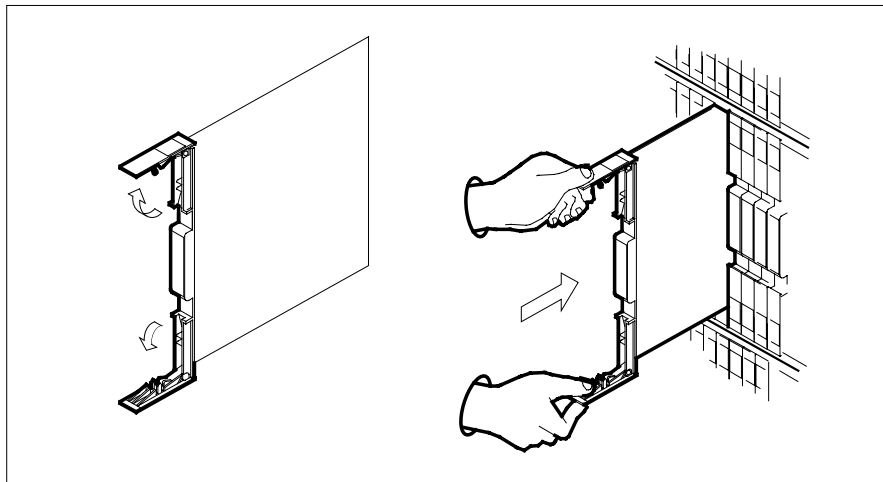

- 13** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

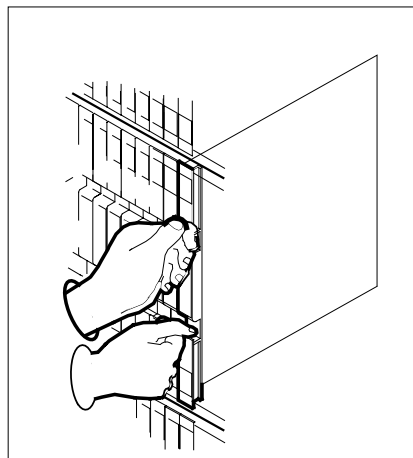

- 14** Use the following information to determine what step to go to next in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 17
other	step 15

NT6X86 in an SMS (continued)

- 15** Test the inactive unit by typing

>TST UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the faulty SMS unit

If TST	Do
passed	step 16
failed	step 17

- 16** Return the inactive SMS unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the faulty SMS unit

If RTS	Do
passed	step 19
failed	step 18

- 17** Return to the maintenance procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.

- 18** Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.

At the frame

- 19** Remove the sign from the active SMS unit.

- 20** Send any faulty cards for repair according to local procedure.

- 21** Record the following items in office records according to local policy:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

- 22** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT6X86 in an SMS (end)

- 23 For further assistance with switch of activity, contact the personnel responsible for the next level of support.
- Note:** If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

NT6X86
in an SMS-R

Application

Use this procedure to replace the following card in an SMS-R.

PEC	Suffixes	Name
NT6X86	AA, AB	A-Bit Message Card

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NT6X86 in an SMS-R (continued)

Summary of card replacement procedure for an NT6X86 card in an SMS-R

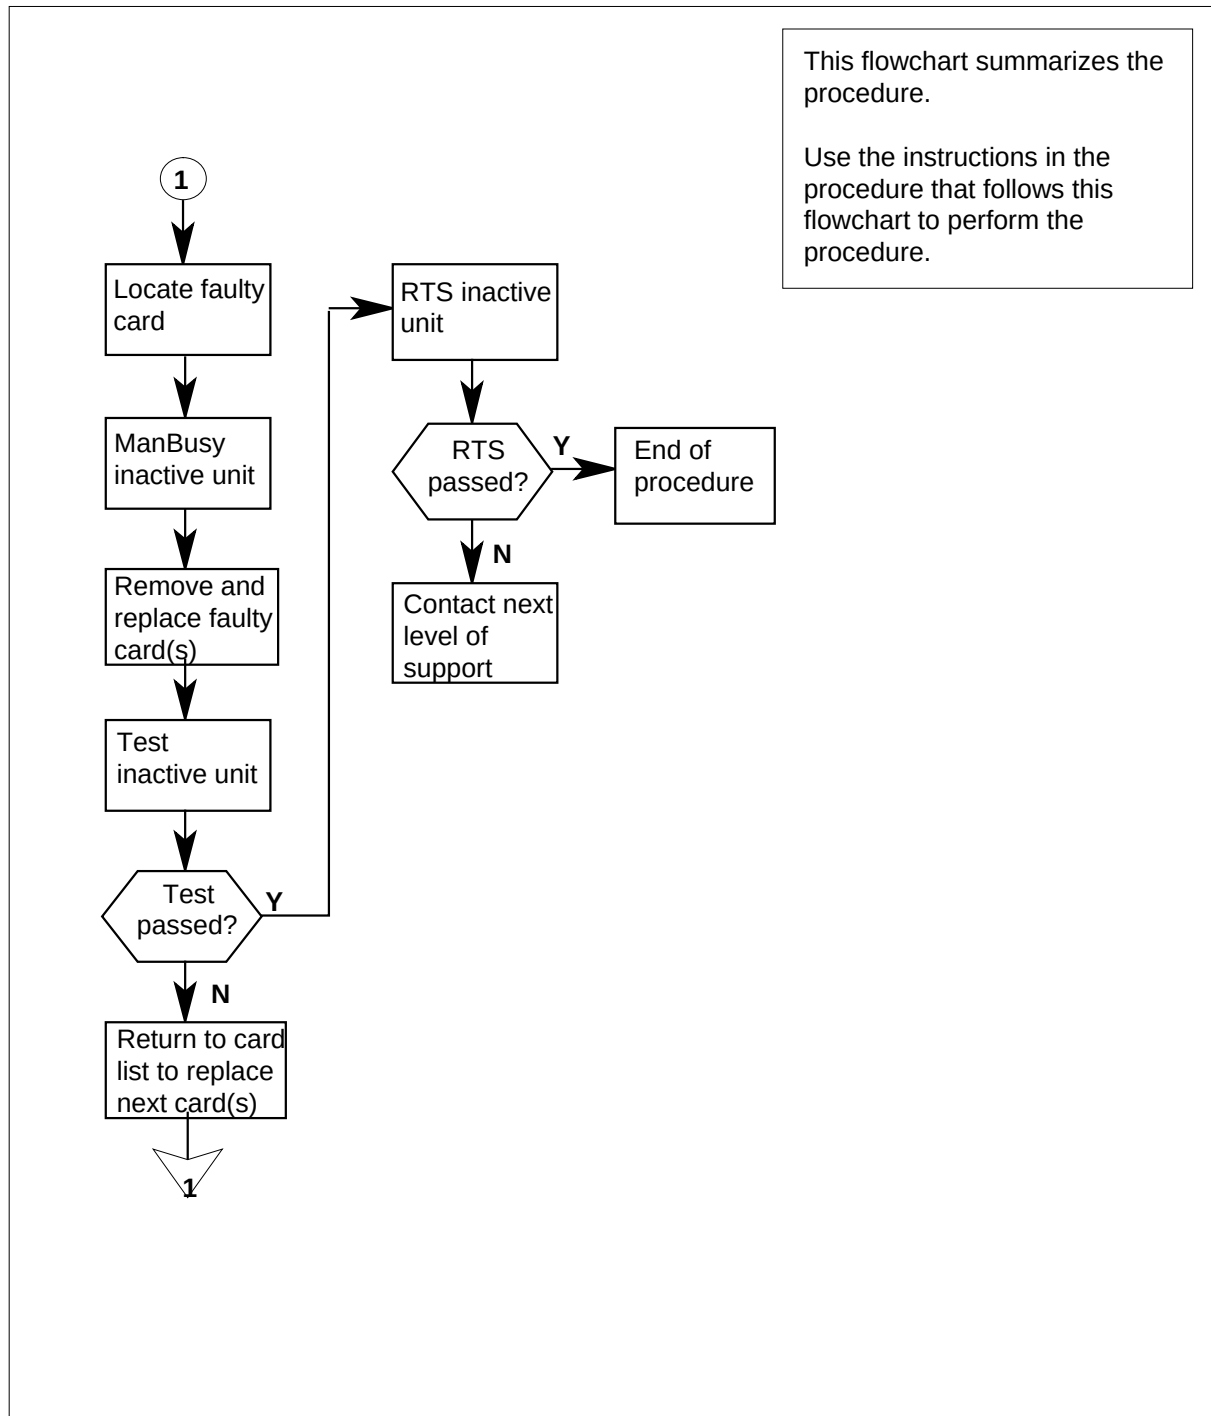

NT6X86 in an SMS-R (continued)

Replacing an NT6X86 card in an SMS-R

At your Current Location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure to verify or accept cards, or were directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the SMS-R, ensure that the unit in which you are replacing the card is inactive and that the mate unit is active.

Obtain a replacement card. Verify that the replacement card has the same product engineering code (PEC), including suffix, as the card to be removed.

Note: When the SMS peripheral is equipped with XPM PLUS (NTMX77AA Unified Processor), the NT6X86AB card is required. The 6X86AB is backward compatible and can be used with the Master Processor/Signal Processor (MP/SP) complex (NT6X45, 6X46, 6X47). The 6X86AA version can be used only in MP/SP SMSs and *cannot* be used in XPM PLUS equipped SMSs. When replacing the NT6X86 card, ensure the correct card is replaced with the appropriate AA or AB version.

At the MAP display

- 3 Access the PM level of the MAP display by typing

>MAPCI;MTC;PM;POST SMSR smsr_no

and pressing the Enter key.

where

smsr_no

is the number of the SMSR to be posted

Example of a MAP response

SMSR 3	INSV	LINKS_00S	CSIDE 0	PSIDE 0
Unit0		Act	InSv	
Unit1		InAct	ISTb	

NT6X86 in an SMS-R (continued)

- 4 By observing the MAP display, ensure that the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 8

- 5 Switch the activity of the units by typing

>SWACT

and pressing the Enter key.

The system determines the type of SWACT it can perform and displays a confirmation prompt for the selected SWACT.

If SWACT	Do
can continue at this time	step 6
cannot continue at this time	step 23

- 6 Switch the activity of the unit by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SwAct passed	step 8
SwAct failed	step 7
SwAct failed. Reason: XPM SwActback	step 7
SwAct refused by SwAct controller	step 7

- 7 Return to the alarm clearing procedure to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the frame

- 8 Put a sign on the active unit with the words: *"Active unit—Do not touch."*

NT6X86
in an SMS-R (continued)

At the MAP display

- 9 Busy the inactive PM unit by typing
>bsy unit unit_no
and pressing the Enter key.
where
 unit_no
 is the number of the faulty SMS-R unit

At the frame location

10

**WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the SMS-R. This protects the equipment against damage caused by static electricity.

**DANGER****Equipment damage**


Take the following precautions when removing or inserting a card:

- 1 Do not apply direct pressure to the components.
- 2 Do not force the cards into the slots.


Put on a wrist strap.

- 11 Remove the NT6X86 card as shown in the following figures.
- a Locate the card to be removed on the appropriate shelf.

NT6X86 in an SMS-R (continued)

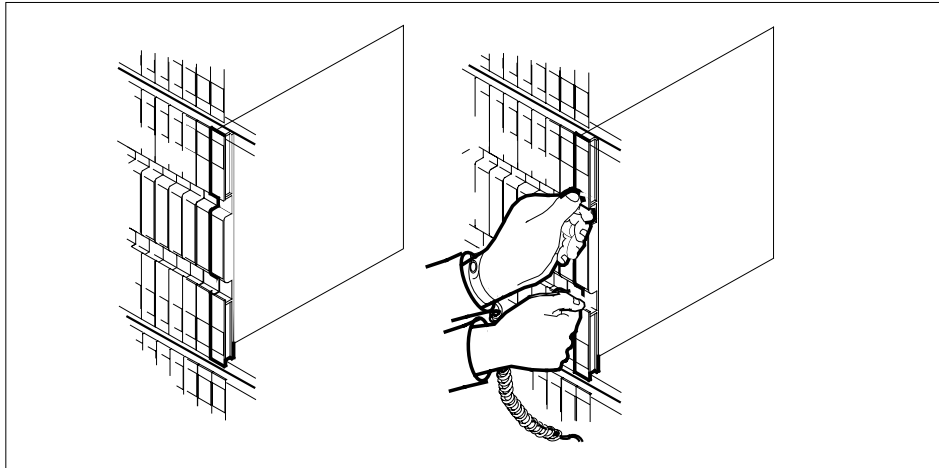


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

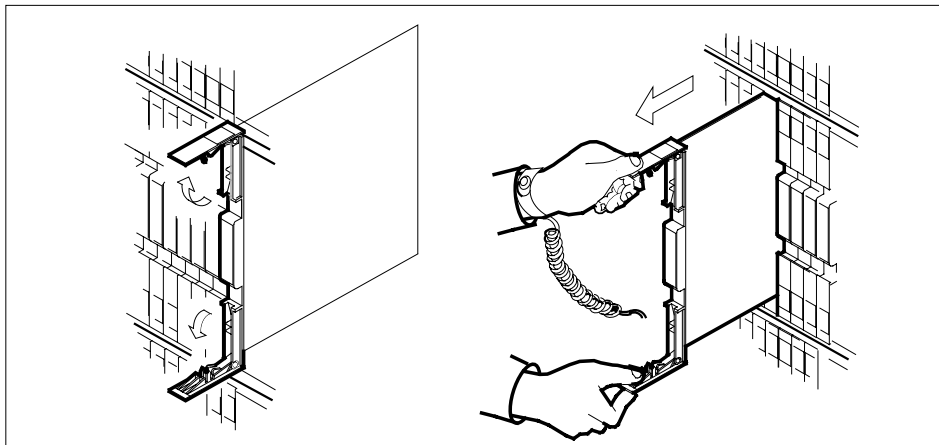


- c** Verify that the replacement card has the same PEC, including suffix, as the card you just removed.
- 12** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf and gently slide the card into the shelf.

NT6X86
in an SMS-R (continued)

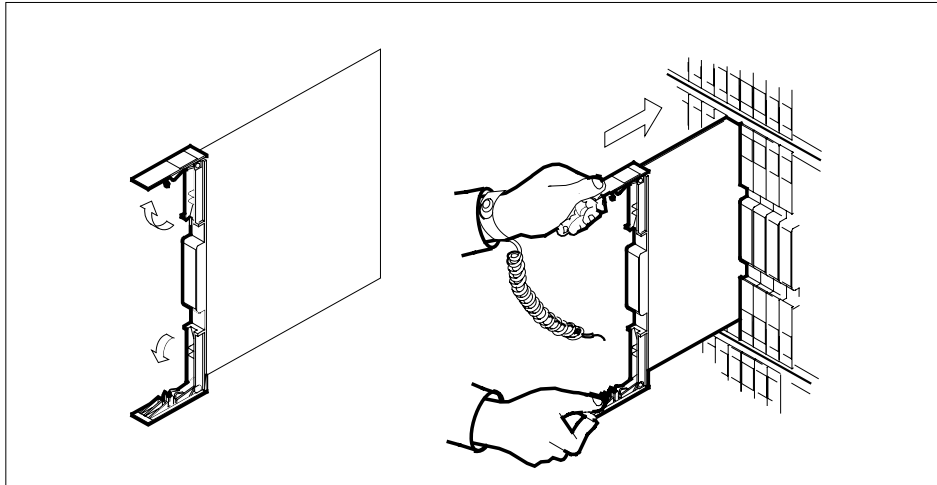

- 13** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure that the card is fully seated in the shelf.
 - b** Close the locking levers.

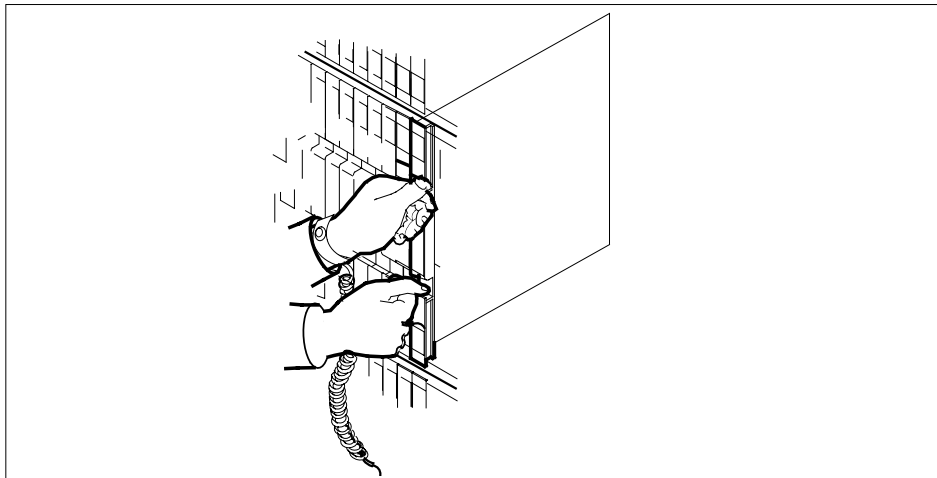

- 14** Use the following information to determine what step to go to next in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 17

NT6X86

in an SMS-R (continued)

	If you entered this procedure from	Do
	other	step 15
15	Test the inactive unit by typing >TST UNIT unit_no and pressing the Enter key. <i>where</i> unit_no is the number of the faulty SMS-R unit	
	If TST	Do
	passes	step 16
	fails	step 17
16	Return the inactive SMS-R unit to service by typing >RTS UNIT unit_no and pressing the Enter key. <i>where</i> unit_no is the number of the faulty SMS-R unit	
	If RTS	Do
	passes	step 19
	fails	step 18
17	Return to <i>Alarm Clearing Procedures</i> section of this manual or to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.	
18	Obtain further assistance in replacing this card by contacting personnel responsible for a higher level of support.	
At the frame		
19	Remove the sign from the active SMS-R unit.	
20	Send any faulty cards for repair according to local procedure.	
21	Note the following in office records according to local policy: • the date the card was replaced • the serial number of the card • the symptoms that prompted replacement of the card	

NT6X86
in an SMS-R (end)

- 22** You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.
- 23** For further assistance with switch of activity, contact the personnel responsible for the next level of support.
- Note:** If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

NT6X87 in an RSC LCME

Application

Use this procedure to replace an NT6X87 card in an RSCE LCME.


PEC	Suffixes	Name
NT6X87	AA	Data Voice Line card

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

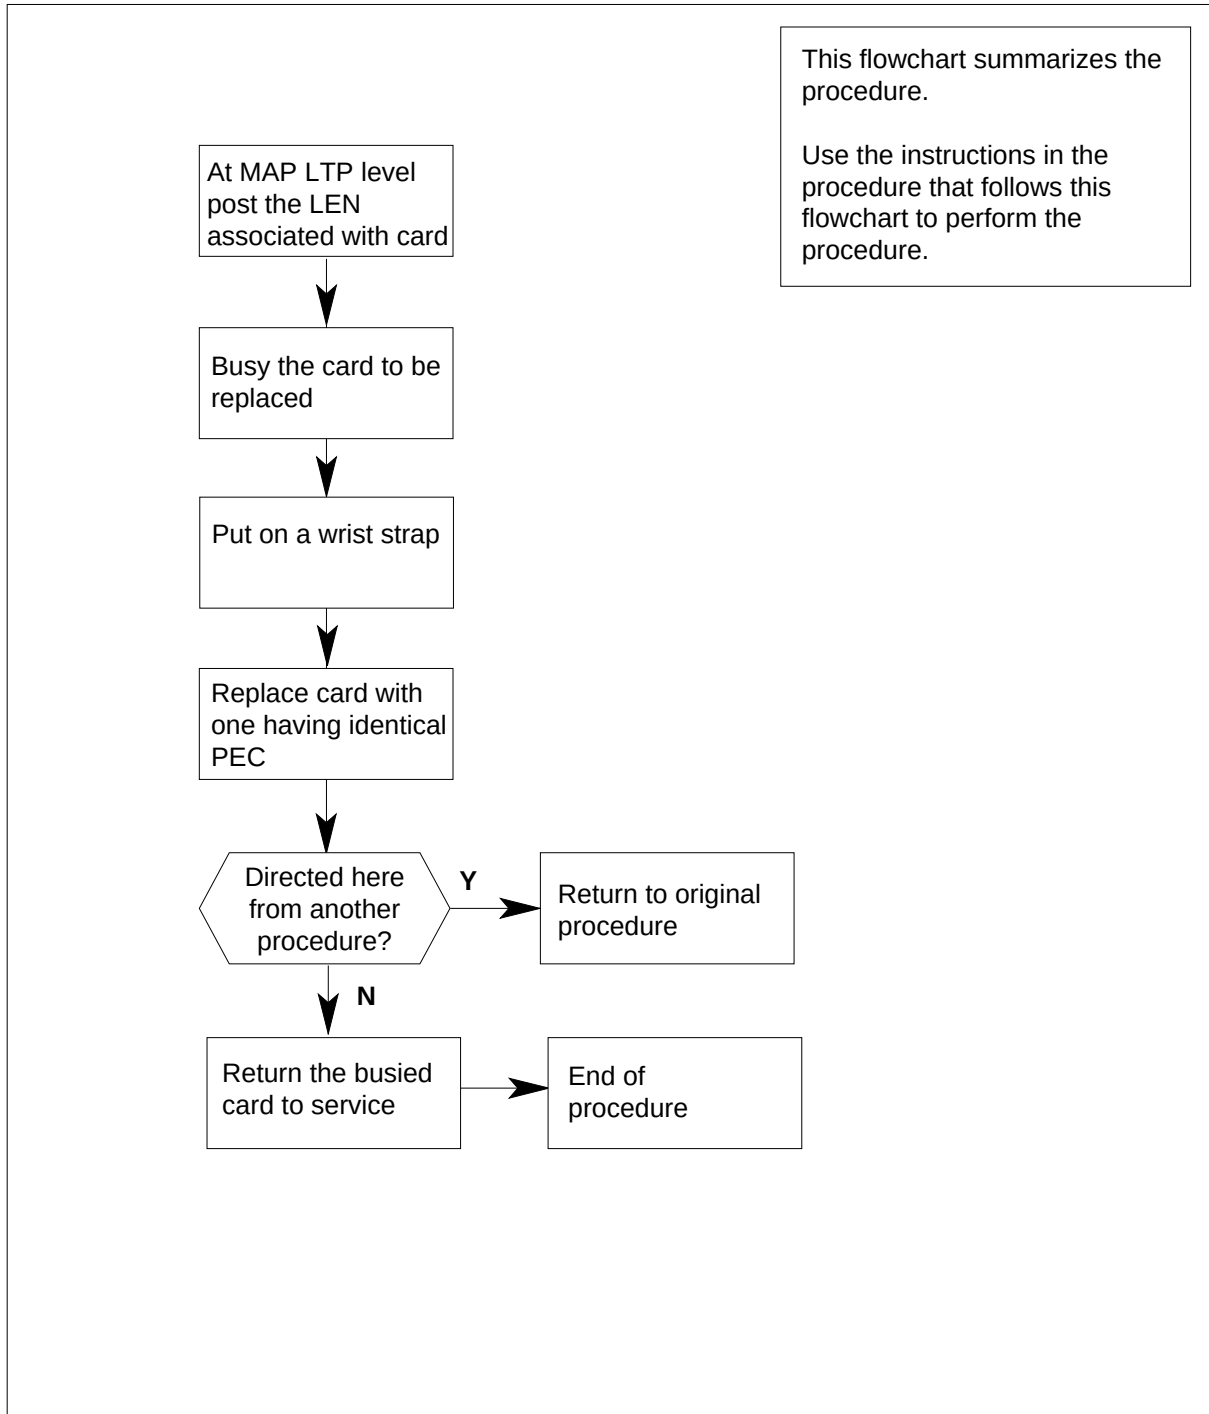NT6X87
in an RSC LCME (continued)**Summary of card replacement procedure for an NT6X87 card in in RSC LCME**

NT6X87

in an RSC LCME (continued)

Replacing an NT6X87 card in an in RSC LCME

At your Current location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Post the line equipment number (LEN) of the card to be replaced by typing
**>MAPCI;MTC;LNS;LTP;POST L site lcme_no unit_no lsg_no
ckt_no**

and pressing the Enter key.

where

site

is the location name of the LCME with the faulty card

lcme_no

is the number of the LCME with the faulty card

unit_no

is the number of the LCME unit with the faulty card

lsg_no

is the number of the LSG with the faulty card

ckt_no

is the number of the circuit associated with the faulty card

Example of a MAP response:

NT6X87 in an RSC LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ	BUSYQ	PREFIX				
2	Post_								
3		LCC	PTY	RNG....LEN.....	DN	STA	F	S	LTA TE RESULT
4		CKT	TYPE	FL	HOST	00	0	03	03 4931082 IDL
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

- 4 Busy the NT6X87 line card by typing

>BSY

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ	BUSYQ	PREFIX				
2	Post_								
3		LCC	PTY	RNG....LEN.....	DN	STA	F	S	LTA TE RESULT
4		CKT	TYPE	FL	HOST	00	0	03	03 4931082 IDL
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

NT6X87 in an RSC LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take these precautions to protect the circuit cards from electrical and mechanical damage while transporting cards.

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wrist strap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom Corporate Standard 5028).

Store and transport circuit cards in an ESD protective container.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



DANGER

Hot materials

Exercise care when handling the line card. The line feed resistor may be very hot.



CAUTION

Special tools required

Card shrouds and removal tools are required for removing cards from the line drawers. For descriptions of these tools, see the following notes.

NT6X87 in an RSC LCME (continued)

Put on a wrist strap.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note 1: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards. Descriptions of these shrouds follow.

Note 2: Card removal tools are required for removing cards from line drawers. Two sizes are available. Descriptions of these tools follow.

Card removal tool for	Apparatus code	Common product code
3-4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 6 Prepare to remove the faulty card by opening the line drawer and following these substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1 in).
 - d While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1 cm (.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
 - f Ensure a card shroud and line card extractor are available.
- 7 Remove the line card to be replaced by following these substeps:
 - a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.

NT6X87 in an RSC LCME (continued)

- c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 8 Replace the faulty card by following these substeps:
 - a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 9 Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 14
other	step 10

At the MAP terminal

- 10 Test the NT6X87 line card by typing
>DIAG
and pressing the Enter key.

If DIAG	Do
passed	step 11
failed	step 15

- 11 Return the NT6X87 card to service by typing
>RTS
and pressing the Enter key.

If RTS	Do
passed	step 12

NT6X87
in an RSC LCME (end)

	If RTS	Do
	failed	step 15
12	Send any faulty cards for repair according to local procedure.	
13	Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 16.	
14	Return to procedure that directed you to this procedure. If necessary, go to the point where a faulty card list was produced, identify the next faulty card on the list, and go to the appropriate card replacement procedure for that card in this manual.	
15	Obtain further assistance in replacing this card by contacting operating company maintenance personnel.	
16	You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.	

NT6X87 in an RSC-S (DS-1) Model B LCME

Application

Use this procedure to replace an NT6X87 card in an RSC-S LCME.

PEC	Suffixes	Name
NT6X87	AA	Data Voice Line card

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT6X87 in an RSC-S (DS-1) Model B LCME (continued)

Summary of card replacement procedure for an NT6X87 card in RSC-S LCME

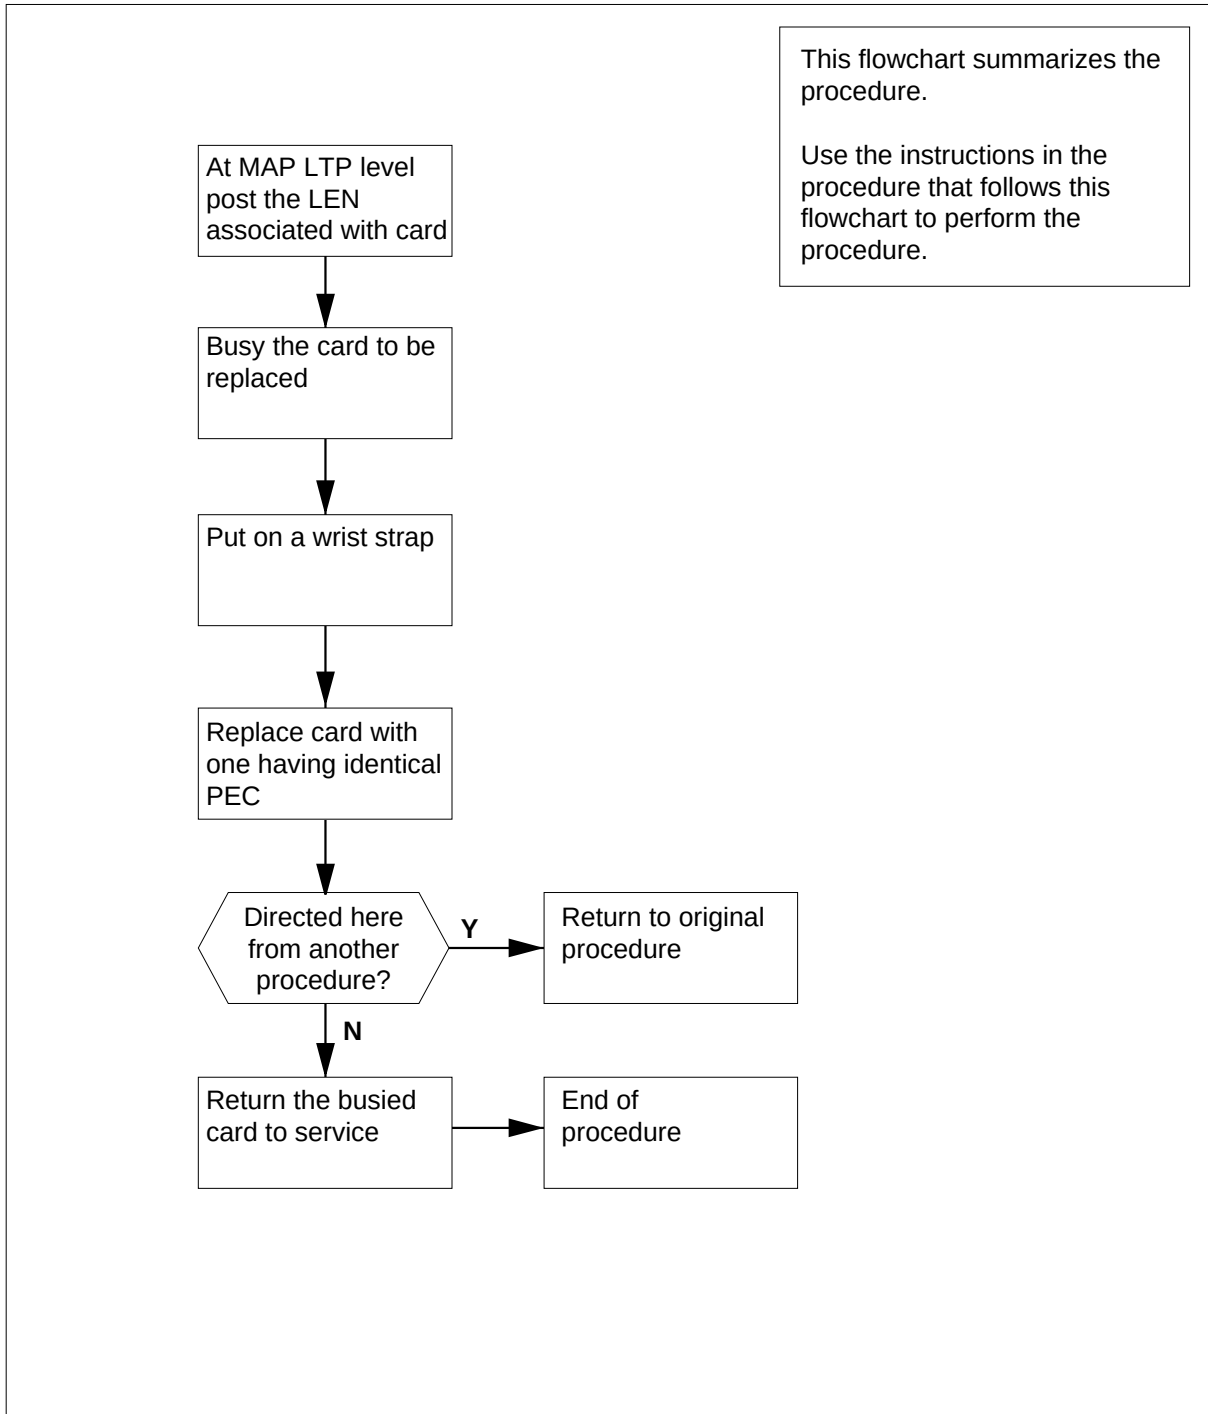

NT6X87

in an RSC-S (DS-1) Model B LCME (continued)

Replacing an NT6X87 card in an RSC-S LCME

At your Current location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Post the line equipment number (LEN) of the card to be replaced by typing
**>MAPCI;MTC;LNS;LTP;POST L site lcme_no unit_no lsg_no
ckt_no**

and pressing the Enter key.

where

site

is the location name of the LCME with the faulty card

lcme_no

is the number of the LCME with the faulty card

unit_no

is the number of the LCME unit with the faulty card

lsg_no

is the number of the LSG with the faulty card

ckt_no

is the number of the circuit associated with the faulty card

Example of a MAP response:

NT6X87

in an RSC-S (DS-1) Model B LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ	BUSYQ	PREFIX				
2	Post_								
3		LCC	PTY	RNG....LEN.....	DN	STA	F	S	LTA TE RESULT
4		CKT	TYPE	FL	HOST	00	0	03	03 4931082 IDL
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

- 4 Busy the NT6X87 line card by typing

>BSY

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ	BUSYQ	PREFIX				
2	Post_								
3		LCC	PTY	RNG....LEN.....	DN	STA	F	S	LTA TE RESULT
4		CKT	TYPE	FL	HOST	00	0	03	03 4931082 IDL
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

NT6X87 in an RSC-S (DS-1) Model B LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take the following precautions to protect circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.



WARNING

Static electricity damage

Before removing any cards, put on a wriststrap and connect it to the wriststrap grounding point on the left side of the modular supervisory panel (MSP) of the LCME. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



DANGER

Hot materials

Exercise care when handling the line card. The line feed resistor may be very hot.

NT6X87

in an RSC-S (DS-1) Model B LCME (continued)

**CAUTION****Special tools required**

Card shrouds and removal tools are required for removing cards from the line drawers. For descriptions of these tools, refer to the following notes.

Put on a wriststrap.

Note: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards, as shown in the following table.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note: Card removal tools are required for removing cards from line drawers. Two sizes are available, as shown in the following table.

Card removal tool for	Apparatus code	Common product code
3—4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 6 Prepare to remove the faulty card by opening the line drawer and following these substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in).
 - d While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1.0 cm (0.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.

NT6X87

in an RSC-S (DS-1) Model B LCME (continued)

- f Ensure a card shroud and line card extractor are available.
- 7 Remove the line card to be replaced by following these substeps:
- a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
 - c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 8 Replace the faulty card by following these substeps:
- a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 9 Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 14
other	step 10

At the MAP terminal

- 10 Test the NT6X87 line card by typing
>DIAG
and pressing the Enter key.

If DIAG	Do
passed	step 11
failed	step 15

NT6X87
in an RSC-S (DS-1) Model B LCME (end)

- 11** Return the NT6X87 card to service by typing
>RTS
and pressing the Enter key.
- | If RTS | Do |
|---------------|-----------|
| passed | step 12 |
| failed | step 15 |
- 12** Send any faulty cards for repair according to local procedure.
- 13** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 16.
- 14** Return to procedure that directed you to this procedure. If necessary, go to the point where a faulty card list was produced, identify the next faulty card on the list, and go to the appropriate card replacement procedure for that card in this manual.
- 15** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 16** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT6X92 in an RSC-M

Application

Use this procedure to replace an NT6X92 circuit card in a Remote Switching Center Multi-access (RSC-M) main shelf.

Note: In the examples of this section, RSC-M refers to RCO2. When software outputs messages to the MAP terminal, the software does not differentiate between the two types of RCO2.

ATTENTION

For maximum performance, do not install the UTR and GTR on the same RSC-M RCO2. Currently there is no way to determine which receiver is used to interpret tones. Some call processing tones can be degraded if the tones are designed for use with a GTR.

PEC	Suffixes	Name
NT6X92	CA	Universal tone receiver card (UTR)
NT6X92	EA	Global tone receiver card (GTR)

Common procedures

This section refers to the following procedures:


- replacing a card
- returning a card

Action

This procedure contains a summary flowchart and a list of steps. Use the flowchart to review the procedure. Follow the steps to perform the procedure.

NT6X92 in an RSC-M (continued)

Summary of Replacing an NT6X92 in an RSC-M

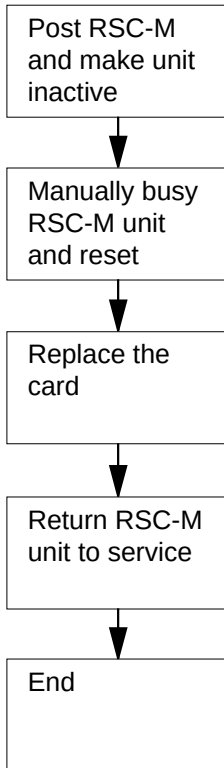

This flowchart is a summary of the procedure.

Use the flowchart to review the procedure. Follow the steps to perform the procedure.

NT6X92 in an RSC-M (continued)

To replace an NT6X92 in an RSC-M

At the MAP display

- 1 Proceed if one of the following conditions apply:
 - a step in a maintenance procedure directed you to this card replacement procedure
 - you use this procedure to verify or accept cards
 - the maintenance support group directed you to this procedure
- 2



WARNING

Loss of service

When you replace a card in the RSC-M, make sure the unit in which you replace the card is *inactive* and the mate unit is *active*.

Obtain an NT6X92 replacement circuit card. Make sure the replacement circuit card has the same product engineering code (PEC) and PEC suffix, as the circuit card to be removed.

At the MAP terminal

- 3 To access the peripheral module (PM) level of the MAP display and to post the RSC-M/RCO2 with the defective card, type:

>MAPCI;MTC;PM;POST RCO2 rco2_no

and press the Enter key.

where

rco2_no

is the PM number zero to 255

Example of a MAP response:

NT6X92 in an RSC-M (continued)

```

RCO2          SysB      ManB      OffL      CBsy      ISTb      InSv
0 Quit        PM        0          0          2          0          25
2 Post_       RCO2      0          0          0          0          1
3 ListSet
4             RCO2      0 ISTb  Links_00S: CSide 1, PSide 1
5 TRNSL       Unit0:    Inact ISTb
6 TST         Unit1:    Act InSv
7 BSY
8 RTS
9 OffL
10 LoadPM_
11 Disp_
12 Next_

```

- 4 To determine the location of the RCO2 that contains the NT6X92 circuit card you are to replace, type:

>QUERYPM

and press the Enter key.

Example of a MAP response:

```

PM Type: RCO2 PM No.: 0 PM Int. No.: 9 Node_No: 24
PMs Equipped: 53 Loadname: UK00ADU6 EEPROM Load:
BNK0N205
WARM SWACT is supported and available
RCO2 0 is included in the REX schedule.
REX on RCO2 0 has not been performed.
Node Status: {OK, FALSE}
Unit 0 Act, Status: {OK, FALSE}
Unit 1 Inact, Status: {OK, FALSE}
Site Flr RPos Bay_id Shf Description Slot EqPEC
HOST 00 C02 RSC-M 00 05 RCO2: 000 MX85AA
HOST 00 C02 RSC-M 00 47 EXT:LEFT 01:13 MX86AA

```

- 5 Determine the state of the RCO2 unit for the circuit card you are to replace.

If the state of the RCO2 unit	Do
is active	step 6
is inactive	step 8

- 6 To switch activity (SWACT) of the units, type:

>SWACT

and press the Enter key.

Example of a MAP response:

NT6X92

in an RSC-M (continued)

RC02 0 A Warm SwAct will be performed after
 data sync of active terminals.
Please confirm ("YES", "Y", "NO", or "N"):

If the system	Do
prompts you to confirm a warm SWACT	step 7
rejects the SWACT	step 20

7 To confirm the command, type:

>YES

and press the Enter key.

Example of a MAP response:

Unit0: Inact SysB Mtce
Unit1: Act ISTb

RC02 0 SwAct Passed

If the MAP response	Do
is SWACT passed	step 8
is other than listed here	step 19

8 A maintenance flag (Mtce) can appear. A maintenance flag indicates system-initiated maintenance tasks are in progress. Wait until the flag disappears from the status lines for both RCO2 units before you proceed to the next step.

At the cabinet

9 Place a sign with the words *Active unit-Do not touch* on the active unit. Do not attach this sign with magnets or tape.

10 To manually busy (ManB) the inactive unit, type:

>BSY INACTIVE

and press the Enter key.

Example of a MAP response:

NT6X92 in an RSC-M (continued)

```
RC02      0 ISTb  Links_00S: CSide  0 , PSide  1
Unit0:    Inact ManB
Unit1:    Act   ISTb
Bsy INACTIVE
RC02 0 Unit 0      Bsy Passed
```

If the BSY command	Do
passes	step 11
fails	step 19

At the shelf

11



WARNING

Static electricity damage

Wear a wrist strap that connects to the wrist-strap grounding point of the modular supervisory panel (MSP) to handle circuit cards. The wrist strap protects the cards against static electricity damage.

Locate the circuit card to replace.

Note: The NT6X92 circuit cards, are in slots 6 and 7 of unit 0, and slots 21 and 22 of unit 1.

- 12 To replace the card, use the common replacing a card procedure in this document. Complete the procedure and return to this point.

Note: If the card you replace has switches, make sure the switches on the replacement circuit card have the same settings.

- 13 The next action depends on the reason you performed this procedure.

If a maintenance procedure	Do
directs you to this procedure	step 14
does not direct you to this procedure	step 15

- 14 Remove the sign from the active unit. Return to the maintenance procedure that sent you to this procedure. Continue as directed.

NT6X92 in an RSC-M (end)

At the MAP terminal

- 15** To return the inactive unit to service, type:

>RTS INACTIVE

and press the Enter key.

If the RTS command	Do
passes	step 16
fails	step 19

- 16** Remove the sign from the active unit.
- 17** Go to the common returning a card procedure in this document.
- 18** This procedure is complete.
- 19** For additional help, contact the next level of support.
- 20** For additional help with a SWACT, contact the next level of support.

Note: The system can recommend the use of the SWACT command with the FORCE option. If this condition occurs, contact office personnel to determine if the use of the FORCE option is acceptable.

NT6X92 in an RSC RCC/RCC2

Application

Use this procedure to replace the following card in an RSC RCC.

Note: This procedure is used to replace a card in an RCC or an RCC2. In this procedure the term RCC refers to both the RCC in an RSC frame, NT6X10, and an RCC2 in an RSCE cabinet, NTMX89.

ATTENTION

To ensure peak performance, do not install the UTR and GTR on the same RCC/RCC2. Presently, there is no way of knowing which receiver is used to interpret tones. Some call processing tones may be degraded if designed for use with a GTR.

PEC	Suffixes	Name
NT6X92	BB, BC	Universal tone receiver (UTR)
NT6X92	EA	Global tone receiver (GTR)

Common procedures


None

Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT6X92 in an RSC RCC/RCC2 (continued)

Summary of card replacement procedure for an NT6X92 card in an RSC RCC

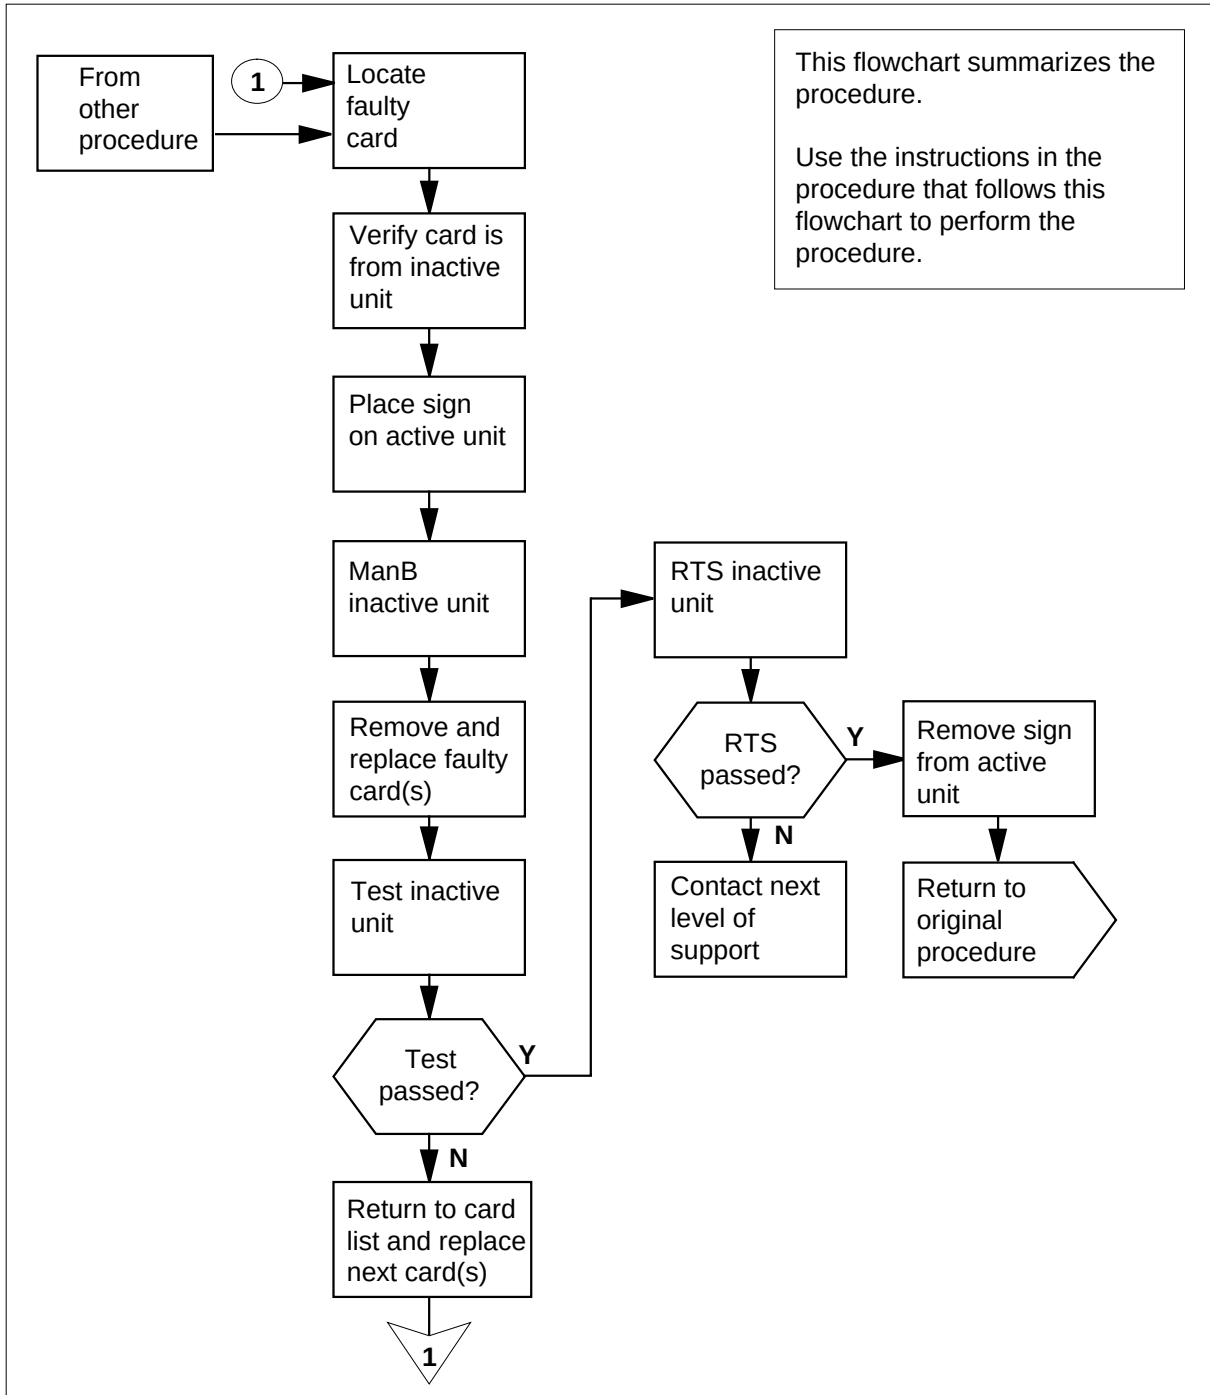

NT6X92 in an RSC RCC/RCC2 (continued)

Replacing an NT6X92 card in an RSC RCC

At your Current Location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure to verify or accept cards, or were directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCC ensure the unit where you are replacing the card is **INACTIVE** and the mate unit is **ACTIVE**.

Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC) including suffix, as the card to be removed.

At the MAP display

- 3 Access the PM level and post the RCC by typing
>MAPCI;MTC;PM;POST RCC rcc_unit_no
and pressing the Enter key.
where
rcc_unit_no
is the number of the RCC unit to be busied (0 or 1)
Example of a MAP display:

NT6X92

in an RSC RCC/RCC2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1RCC	.	.	.	.	.
RCC			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	2	0	2	25	
2 Post_	RCC		0	0	0	0	1	1	
3 ListSet									
4	RCC		0 ISTb	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:		Inact	SysB					
6 TST_	Unit1:		Act	InSv					
7 BSY_									
8 RTS_									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16 IRLINK									
17 Perform									
18									

- 4 By observing the MAP display, be sure the card to be removed is on the inactive unit.

At the RCE frame

- 5 Put a sign on the active unit bearing the words *Active unit—Do not touch*.

At the MAP display

- 6 Busy the inactive RCC unit by typing
>BSY UNIT rcc_unit_no
 and pressing the Enter key.
where
rcc_unit_no
 is the number of the inactive RCC unit (0 or 1)

NT6X92 in an RSC RCC/RCC2 (continued)

At the RCE frame

7

**WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the RCC. This protects the equipment against damage caused by static electricity.

**DANGER****Equipment damage**


Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


8 Remove the NT6X92 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

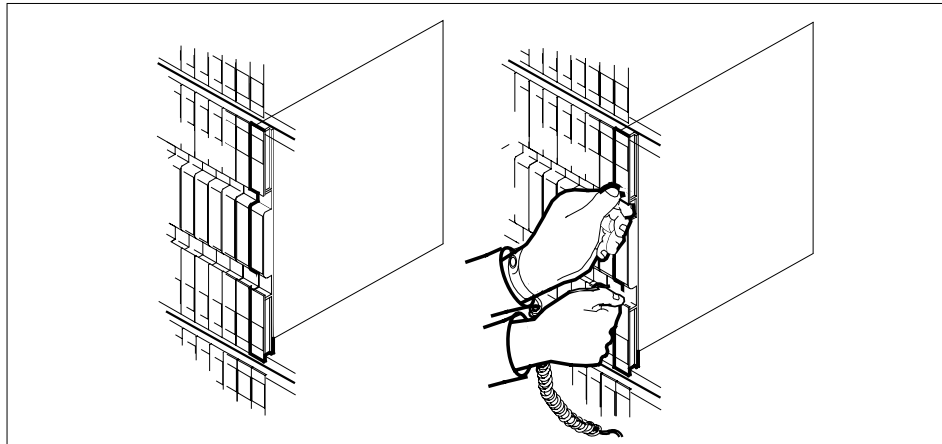


b Open the locking levers on the card to be replaced and gently pull the card towards you until it clears the shelf.

NT6X92 in an RSC RCC/RCC2 (continued)

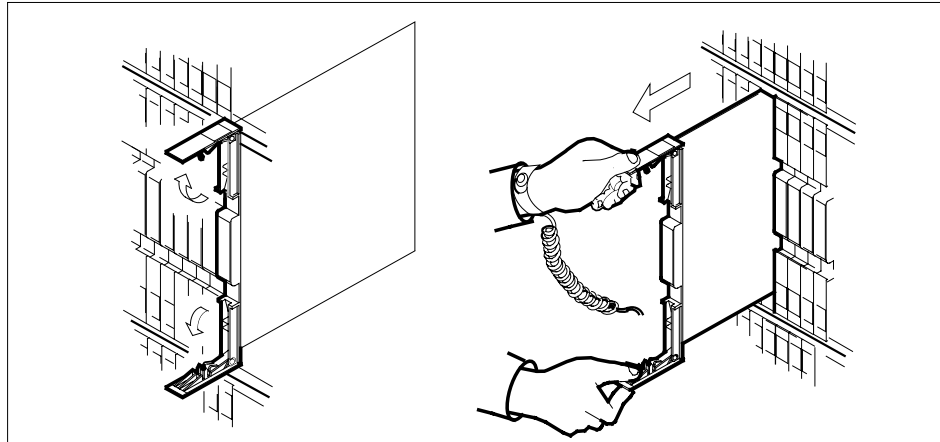


- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.
- 9 Open the locking levers on the replacement card.
- a Align the card with the slots in the shelf and gently slide the card into the shelf.

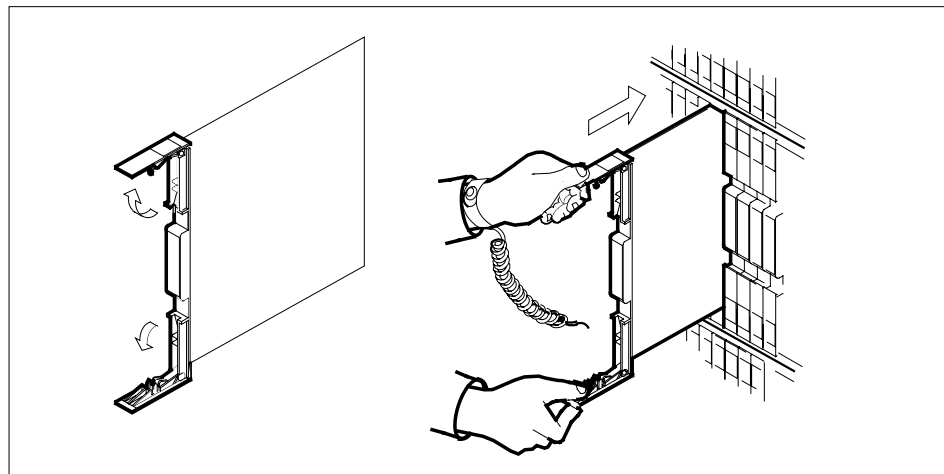

- 10 Seat and lock the card.
- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b Close the locking levers.

NT6X92

in an RSC RCC/RCC2 (continued)

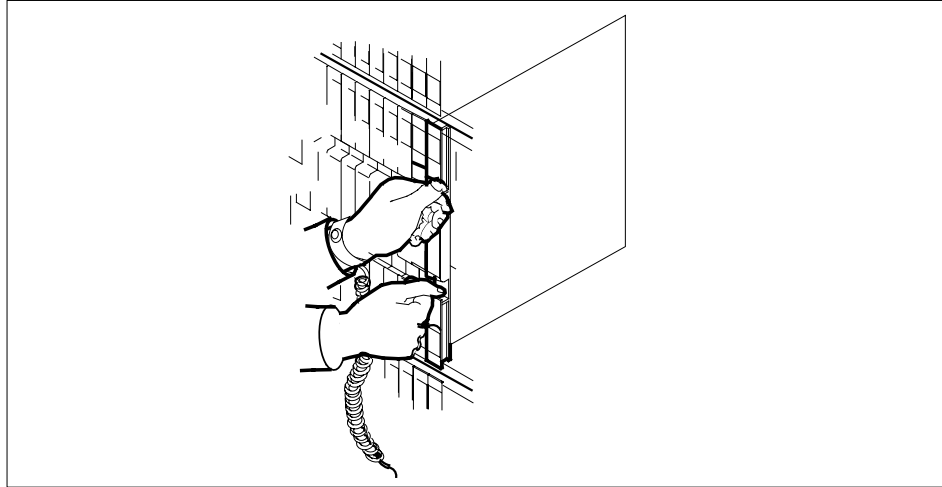

- 11** Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
an alarm clearing procedure	step 15
other	step 12

At the MAP display

- 12** Return the inactive RCC unit to service by typing
>RTS UNIT rcc_unit_no
 and pressing the Enter key.
where

rcc_unit_no
 is the number of the RCC unit in step 6

If the RTS	Do
passed	step 13
failed	step 16

- 13** Send any faulty cards for repair according to local procedure.
- 14** Record the following items in office records:
- date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card

NT6X92

in an RSC RCC/RCC2 (end)

Go to Step 17

- 15** Return to the *Alarm Clearing Procedure* that directed you to this procedure. If necessary, go to the point where the faulty card list was produced, identify the next faulty card on the list, and go to the appropriate card replacement procedure for that card in this manual.
- 16** Obtain further assistance in replacing this card by contacting personnel responsible for higher level of support.
- 17** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT6X92 in an RSC-S (DS-1) Model A RCC2

Application

Use this procedure to replace an NT6X92 card in an RSC-S RCC2.

ATTENTION

To ensure peak performance, do not install the UTR and GTR on the same RSC-S RCC2. Presently, there is no way of knowing which receiver is used to interpret tones. Some call processing tones may be degraded if designed for use with a GTR.

PEC	Suffixes	Name
NT6X92	BB, BC	Universal Tone Receiver (UTR)
NT6X92	EA	Global Tone Receiver (GTR)

Common procedures

None


Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT6X92

in an RSC-S (DS-1) Model A RCC2 (continued)

Summary of card replacement procedure for an NT6X92 card in RSC-S RCC2

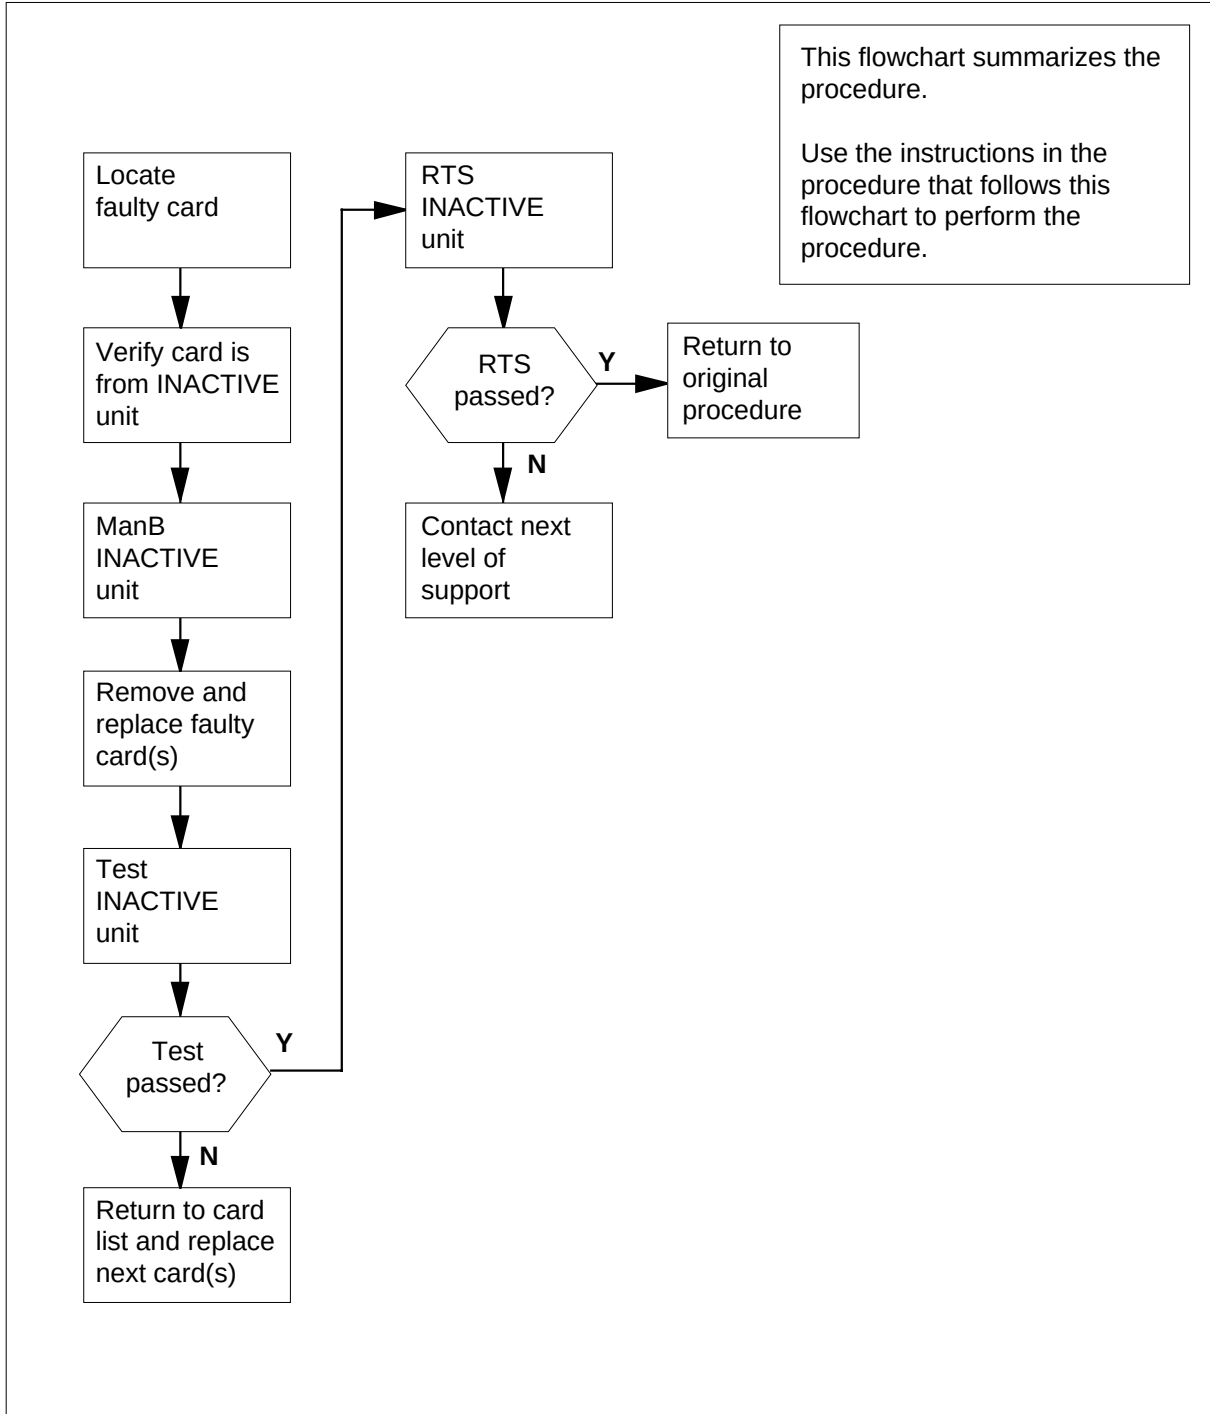

NT6X92 in an RSC-S (DS-1) Model A RCC2 (continued)

Replacing an NT6X92 card in an RSC-S RCC2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2

**CAUTION****Loss of service**

When replacing a card in the RCC2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NT6X92 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Ensure that the PM level of the MAP display is currently displayed and that the RCC2 is posted by typing

>MAPCI;MTC;PM;POST RCC2 rcc2_unit_no

and pressing the Enter key.

where

rcc2_unit_no

is the number of the RCC2 with the faulty card

Example of a MAP display:

NT6X92**in an RSC-S (DS-1) Model A RCC2** (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	1RCC2	.	.	.	.	.
RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	2	0	2	25	
2 Post_	RCC2		0	0	0	0	1	1	
3 ListSet									
4	RCC2		0	ISTb	Links_00S:	CSide	1, PSide	1	
5 TRNSL	Unit0:		Inact	InSv					
6 TST	Unit1:		Act	InSv					
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 By observing the MAP display, ensure that the card to be removed is on the inactive unit.

If faulty card is on**Do**

active unit

step 7

inactive unit

step 5

- 5 Switch the processing activity (SWACT) to the inactive unit by typing

>SWACT

and pressing the Enter key.

- 6 Answer the prompt by typing

>YES

and pressing the Enter key.

At the RCE frame

- 7 Place a sign on the active unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

NT6X92 in an RSC-S (DS-1) Model A RCC2 (continued)

At the MAP terminal

- 8 Busy the inactive PM unit by typing
>bsy unit rcc2_unit_no
and pressing the Enter key.
where
rcc2_unit_no
is the number of the inactive RCC2 unit (0 or 1)

At the RCE frame

9



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel (FSP) of the RCC2. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.

Put on a wrist strap.


- 10 Remove the NT6X92 card as shown in the following figures.
- a Locate the card to be removed on the appropriate shelf.

NT6X92

in an RSC-S (DS-1) Model A RCC2 (continued)

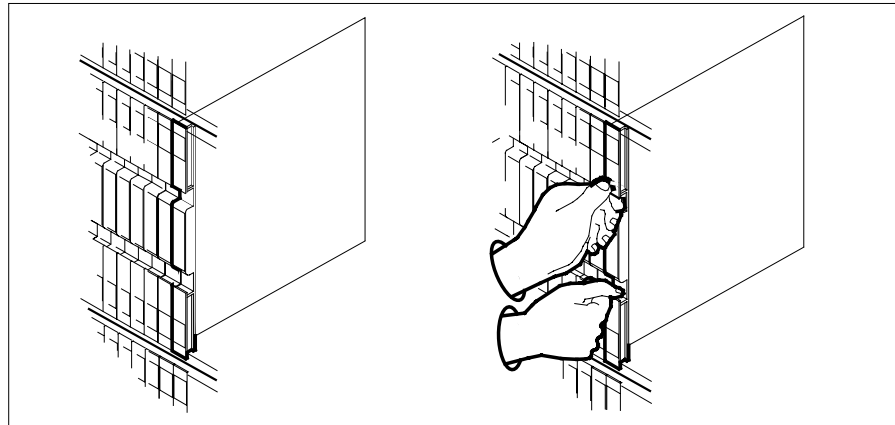


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

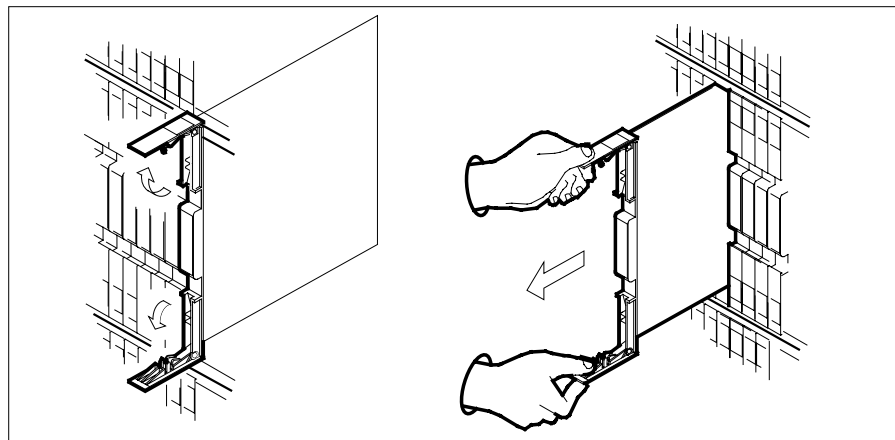


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.
- 11** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf.
- b** Gently slide the card into the shelf.

NT6X92
in an RSC-S (DS-1) Model A RCC2 (continued)

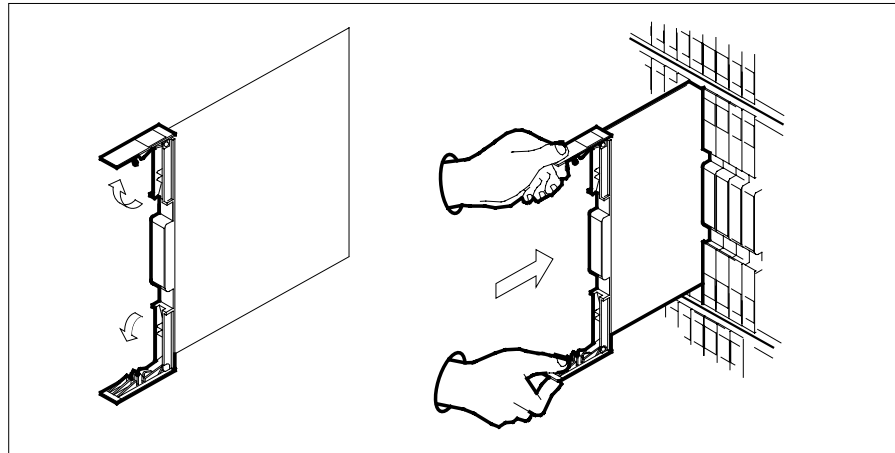

- 12** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

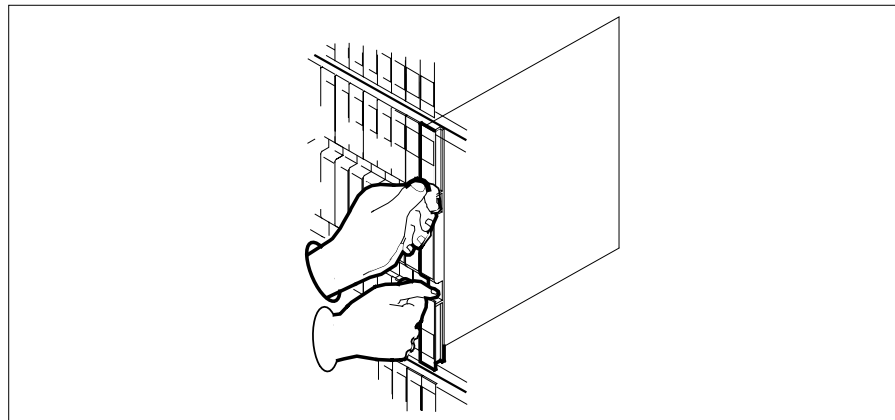

- 13** Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 17
other	step 14

NT6X92 in an RSC-S (DS-1) Model A RCC2 (end)

At the MAP terminal

- 14** Return the inactive RCC2 unit to service by typing

>RTS UNIT rcc2_unit_no

and pressing the Enter key.

where

rcc2_unit_no

is the number of the inactive RCC2 unit

If RTS	Do
passed	step 15
failed	step 18

- 15** Send any faulty cards for repair according to local procedure.

- 16** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 19.

- 17** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.

- 18** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.

- 19** You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT6X92 in an RSC-S (DS-1) Model B RCC2

Application

Use this procedure to replace an NT6X92 card in an RSC-S RCC2.

ATTENTION

To ensure peak performance, do not install the UTR and GTR on the same RSC-S RCC2. Presently, there is no way of knowing which receiver is used to interpret tones. Some call processing tones may be degraded if designed for use with a GTR.

PEC	Suffixes	Name
NT6X92	BB,BC	Universal Tone Receiver (UTR)
NT6X92	EA	Global Tone Receiver (GTR)

Common procedures

None


Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT6X92

in an RSC-S (DS-1) Model B RCC2 (continued)

Summary of card replacement procedure for an NT6X92 card in RSC-S RCC2

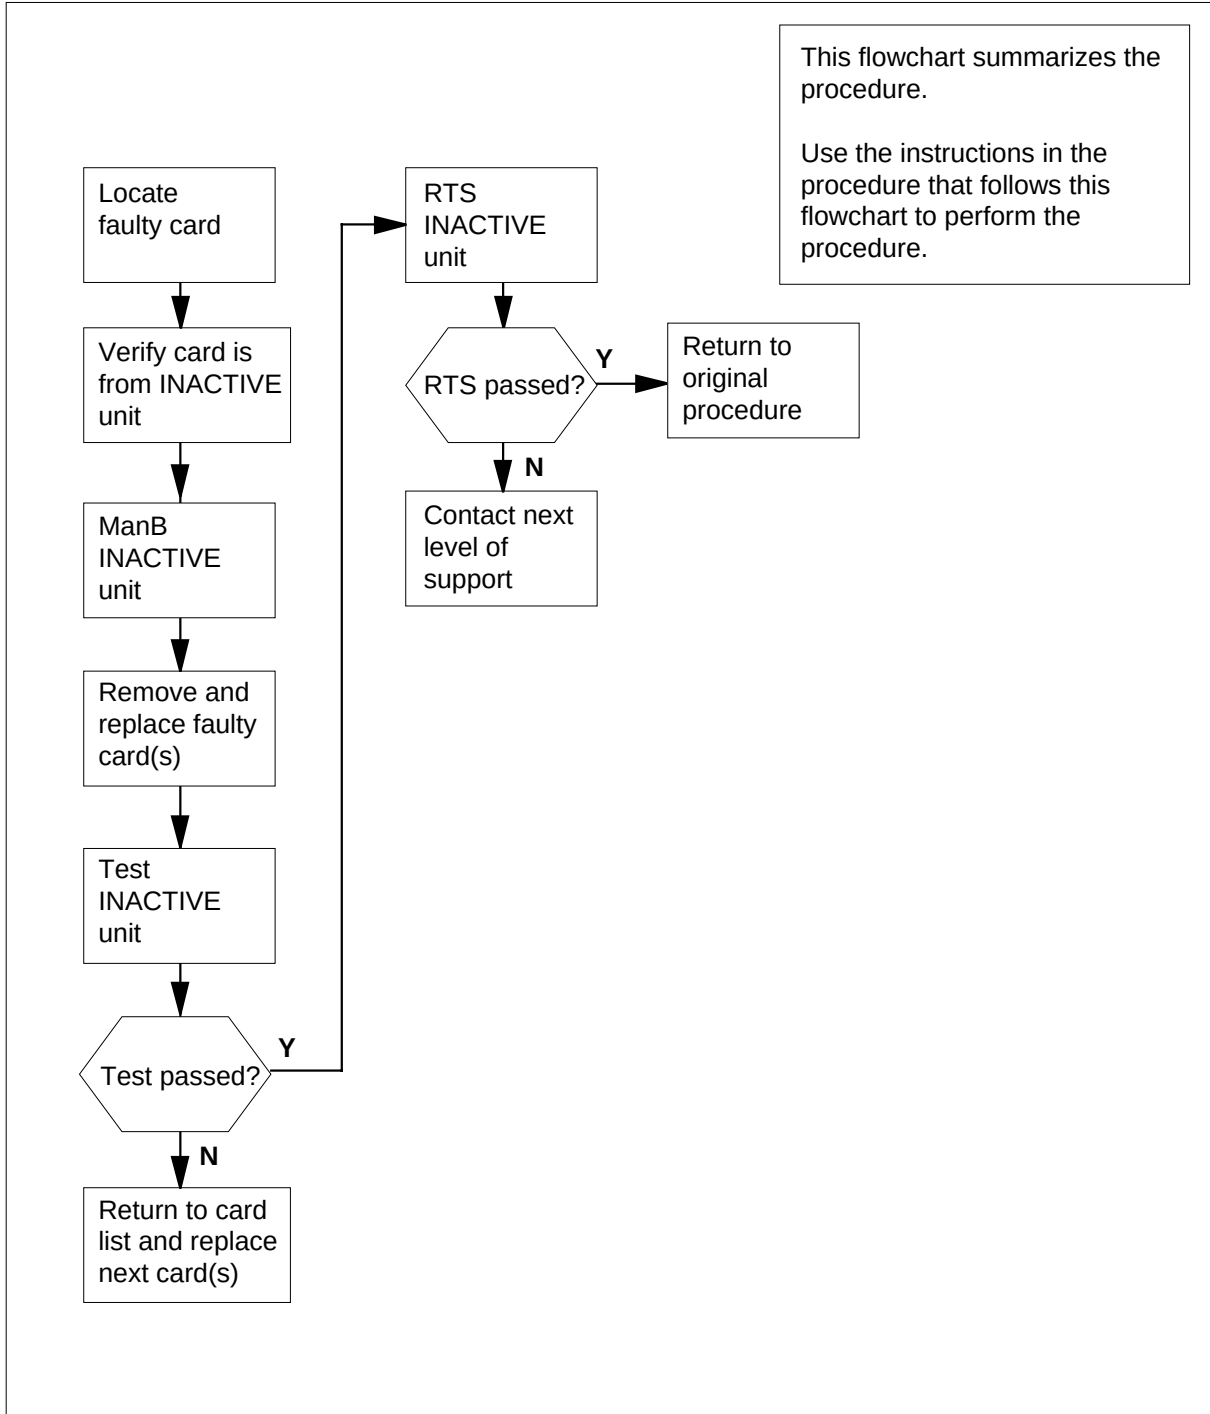

NT6X92 in an RSC-S (DS-1) Model B RCC2 (continued)

Replacing an NT6X92 card in an RSC-S RCC2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2

**CAUTION****Loss of service**

When replacing a card in the RCC2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NT6X92 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Ensure that the PM level of the MAP display is currently displayed and that the RCC2 is posted by typing

>MAPCI;MTC;PM;POST RCC2 rcc2_unit_no

and pressing the Enter key.

where

rcc2_unit_no

is the number of the RCC2 with the faulty card

Example of a MAP display:

NT6X92**in an RSC-S (DS-1) Model B RCC2** (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	1RCC2	.	.	.	.	.
RCC2			SysB	ManB	OffL		CBSy	ISTb	InSv
0 Quit	PM		0	0	2		0	2	25
2 Post_	RCC2		0	0	0		0	1	1
3 ListSet									
4	RCC2		0 ISTb	Links_00S:	CSide	1,	PSide	1	
5 TRNSL	Unit0:		Inact	InSv					
6 TST	Unit1:		Act	InSv					
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 By observing the MAP display, ensure that the card to be removed is on the inactive unit.

If faulty card is on**Do**

active unit

step 7

inactive unit

step 5

- 5 Switch the processing activity (SWACT) to the inactive unit by typing

>SWACT

and pressing the Enter key.

- 6 Answer the prompt by typing

>YES

and pressing the Enter key.

At the RCE frame

- 7 Place a sign on the active unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

NT6X92 in an RSC-S (DS-1) Model B RCC2 (continued)

At the MAP terminal

- 8 Busy the inactive PM unit by typing
>bsy unit rcc2_unit_no
and pressing the Enter key.
where
rcc2_unit_no
is the number of the inactive RCC2 unit (0 or 1)

At the RCE frame

9



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the modular supervisory panel (MSP) of the RCC2. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.

Put on a wrist strap.


- 10 Remove the NT6X92 card as shown in the following figures.
- a Locate the card to be removed on the appropriate shelf.

NT6X92

in an RSC-S (DS-1) Model B RCC2 (continued)

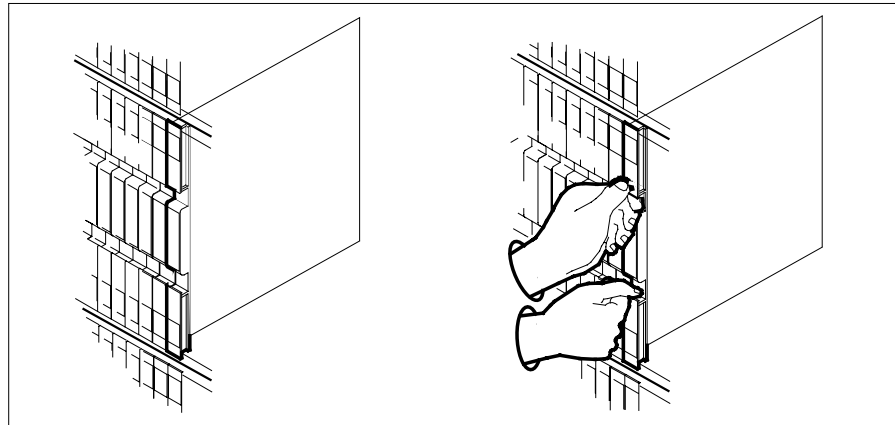


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

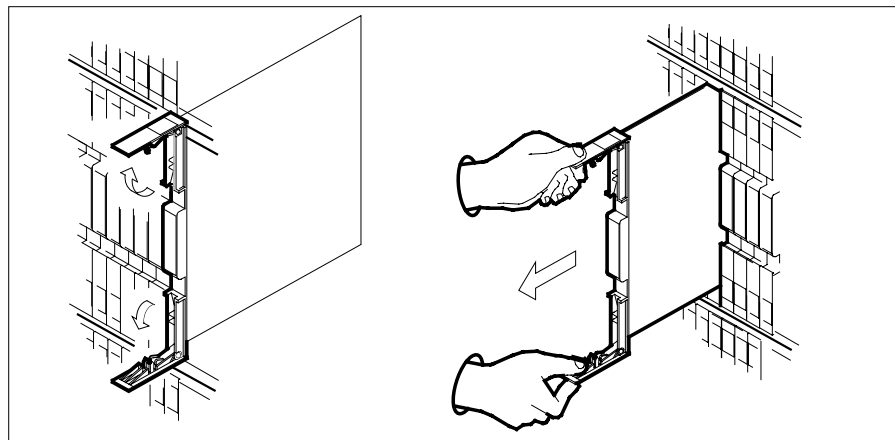


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.
- 11** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf.
- b** Gently slide the card into the shelf.

NT6X92
in an RSC-S (DS-1) Model B RCC2 (continued)

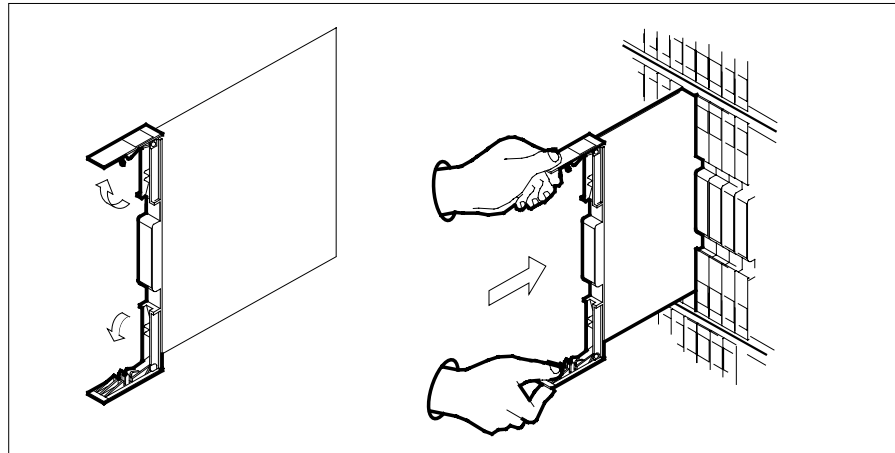

- 12** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

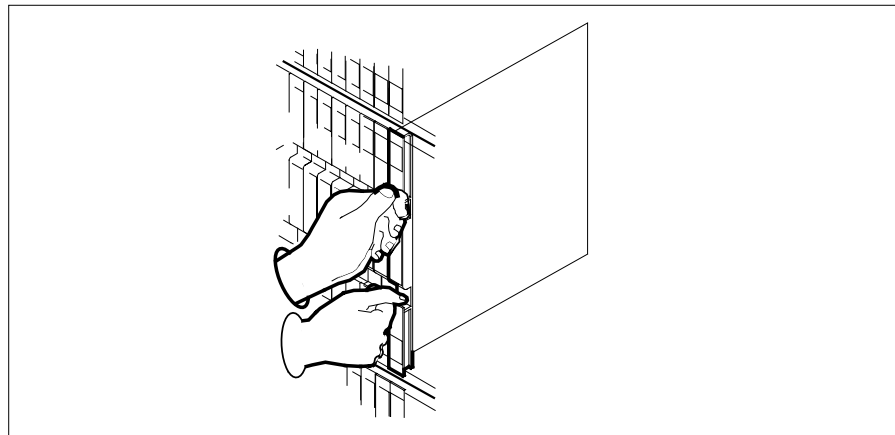

- 13** Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 17
other	step 14

NT6X92 in an RSC-S (DS-1) Model B RCC2 (end)

At the MAP terminal

- 14** Return the inactive RCC2 unit to service by typing

>RTS UNIT rcc2_unit_no

and pressing the Enter key.

where

rcc2_unit_no

is the number of the inactive RCC2 unit

If RTS	Do
passed	step 15
failed	step 18

- 15** Send any faulty cards for repair according to local procedure.

- 16** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 19.

- 17** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.

- 18** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.

- 19** You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT6X92 in an RSC-S (PCM-30) Model A RCO2

Application

Use this procedure to replace an NT6X92 card in an RSC-S RCO2.

ATTENTION

To ensure peak performance, do not install the UTR and GTR on the same RSC-S RCO2. Presently, there is no way of knowing which receiver is used to interpret tones. Some call processing tones may be degraded if designed for use with a GTR.

PEC	Suffixes	Name
NT6X92	CA	Universal Tone Receiver (UTR)
NT6X92	EA	Global Tone Receiver (GTR)

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT6X92 in an RSC-S (PCM-30) Model A RCO2 (continued)

Summary of card replacement procedure for an NT6X92 card in RSC-S RCO2

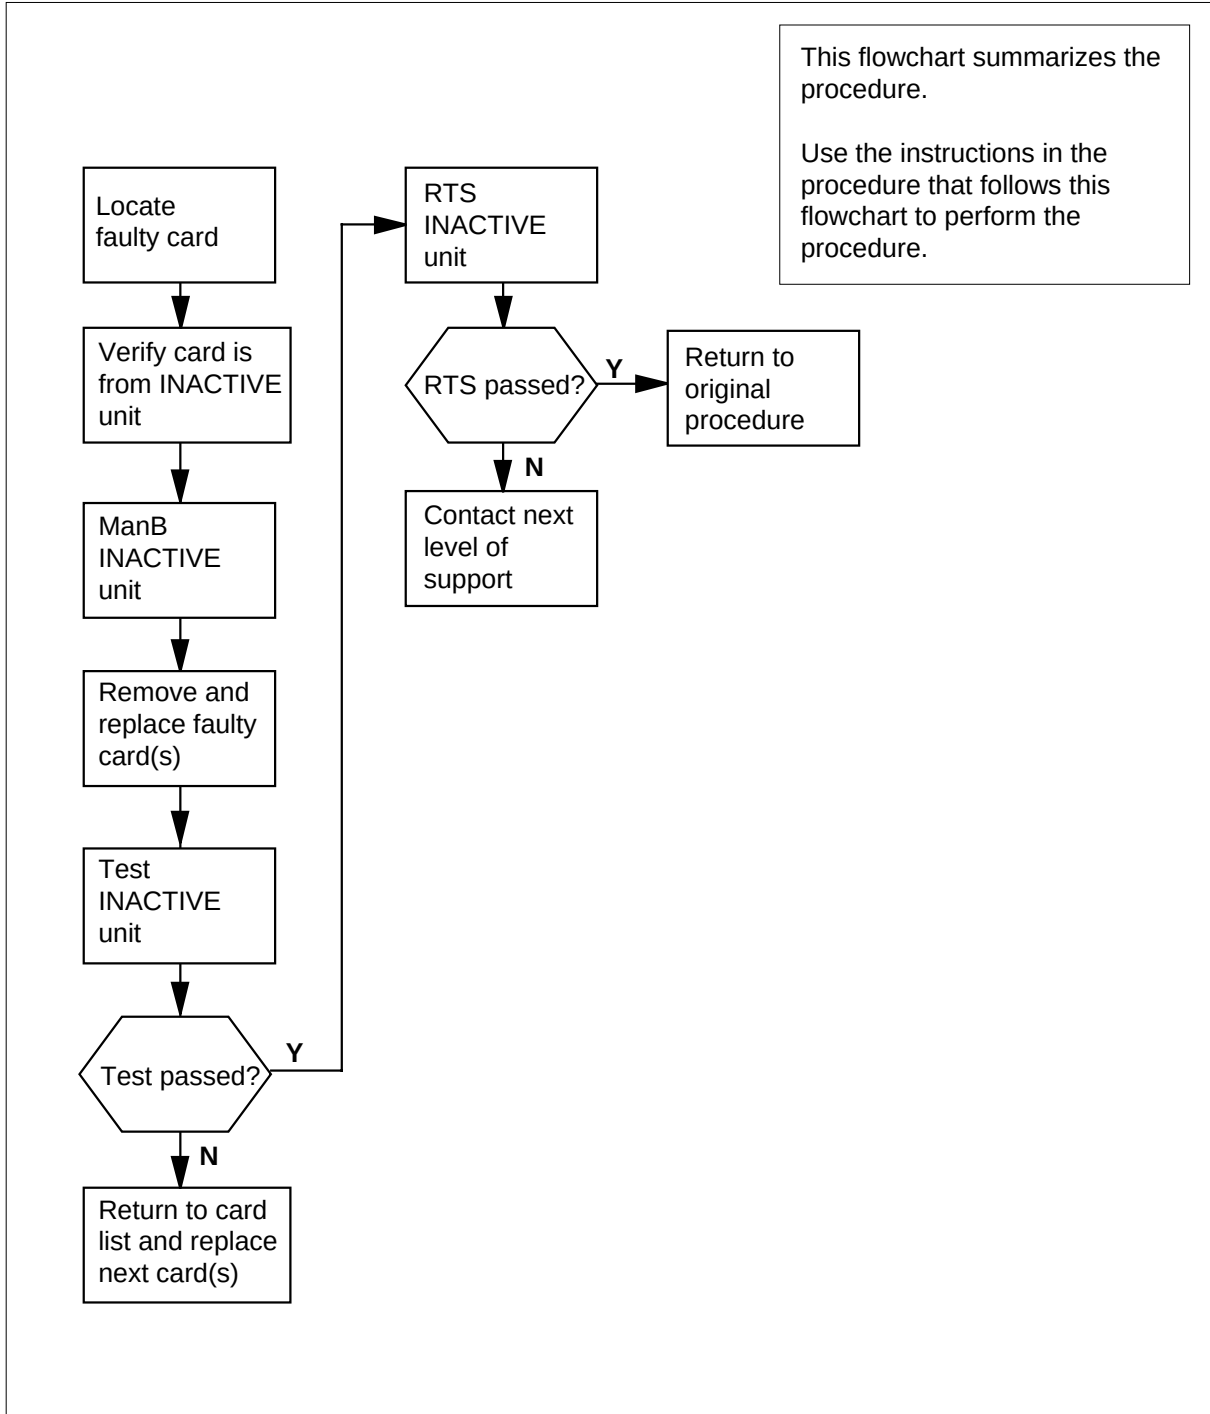

NT6X92 in an RSC-S (PCM-30) Model A RCO2 (continued)

Replacing an NT6X92 card in an RSC-S RCO2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2

**CAUTION****Loss of service**

When replacing a card in the RCO2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NT6X92 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

- 3 Ensure the PM level of the MAP display is currently displayed and the RCO2 is posted by typing

>MAPCI;MTC;PM;POST RCO2 rco2_unit_no

and pressing the Enter key.

where

rco2_unit_no

is the number of the RCO2 with the faulty card

Example of a MAP display:

NT6X92**in an RSC-S (PCM-30) Model A RCO2** (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	1RCO2	.	.	.	.	.
RCO2			SysB	ManB	OffL	CBsy	ISTb		InSv
0 Quit	PM		0	0	2	0	2		25
2 Post_	RCO2		0	0	0	0	1		1
3 ListSet									
4	RCO2	0	ISTb	Links_00S:	CSide	1,	PSide	1	
5 TRNSL	Unit0:		Inact	InSv					
6 TST	Unit1:		Act	InSv					
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 By observing the MAP display, be sure the card to be removed is on the inactive unit.

If faulty card is on**Do**

active unit

step 7

inactive unit

step 5

- 5 Switch the processing activity (SWACT) to the inactive unit by typing

>SWACT

and pressing the Enter key.

If prompt indicates a**Do**

warm SWACT will be performed

step 7

cold SWACT will be performed

step 6

NT6X92

in an RSC-S (PCM-30) Model A RCO2 (continued)

6



CAUTION

Loss of service

All calls being handled by this PM will be lost, including data calls. Perform this step during a period of low traffic only.

Answer the prompt by typing

>YES

and pressing the Enter key.

At the RCE frame

- 7 Put a sign on the *active* unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 8 Busy the inactive PM unit by typing

>bsy unit rco2_unit_no

and pressing the Enter key.

where

rco2_unit_no

is the number of the inactive RCO2 unit (0 or 1)

NT6X92 in an RSC-S (PCM-30) Model A RCO2 (continued)

At the RCE frame

9



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the modular supervisory panel of the RCO2. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage


Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.

Put on a wrist strap.


10 Remove the NT6X92 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

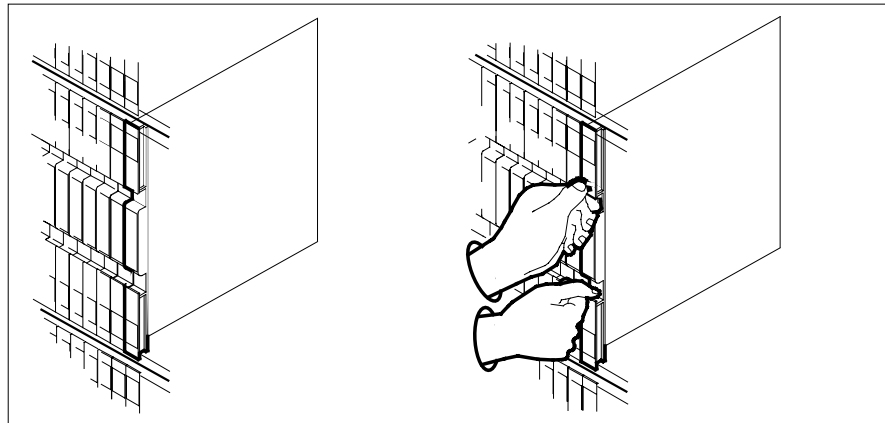

b Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.


NT6X92
in an RSC-S (PCM-30) Model A RCO2 (continued)

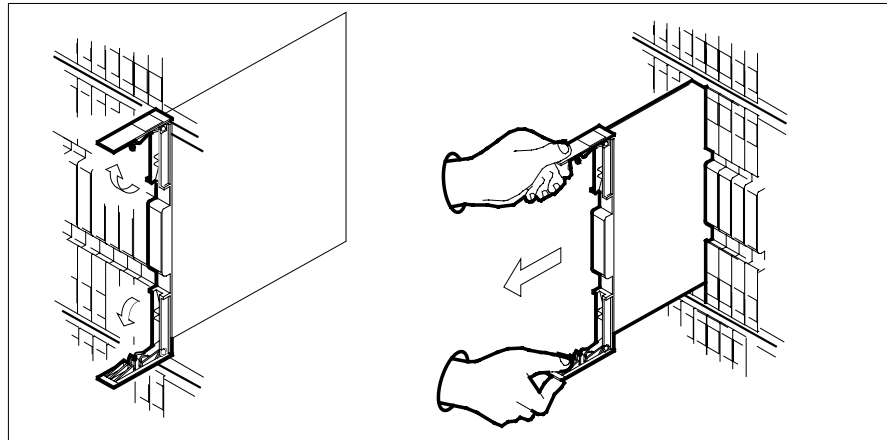

- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

11 Open the locking levers on the replacement card.

- a** Align the card with the slots in the shelf.
b Gently slide the card into the shelf.

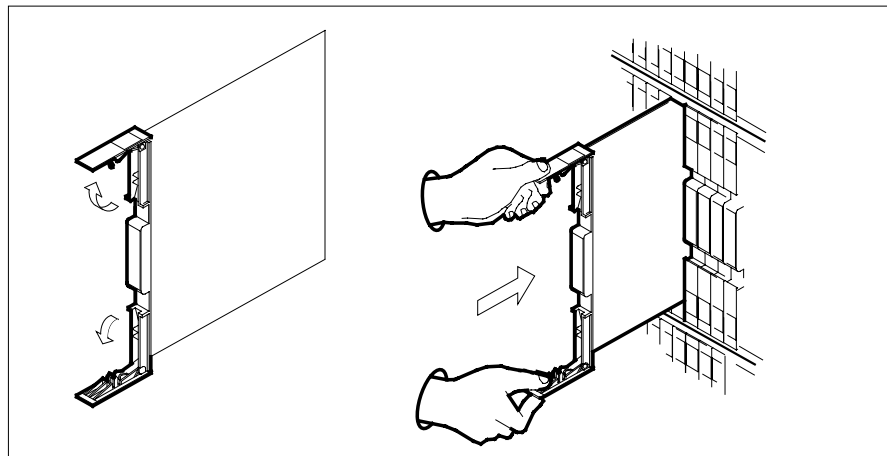


12 Seat and lock the card.

- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
b Close the locking levers.

NT6X92

in an RSC-S (PCM-30) Model A RCO2 (continued)

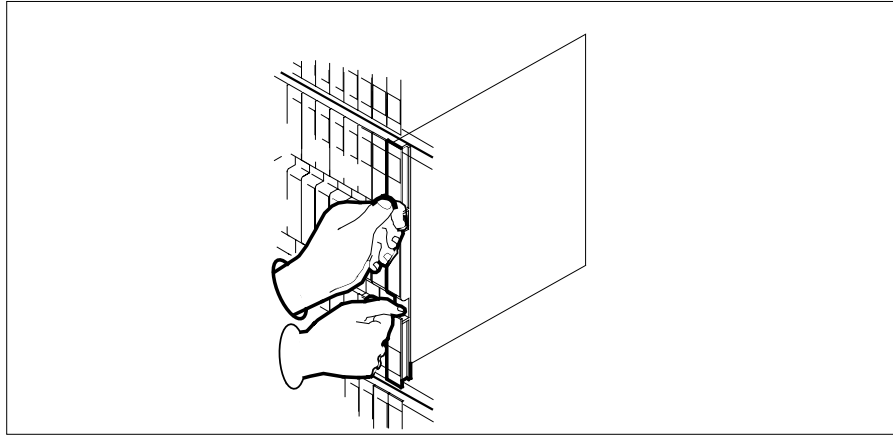

- 13** Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 17
other	step 14

At the MAP terminal

- 14** Return the inactive RCO2 unit to service by typing
>RTS UNIT rco2_unit_no
and pressing the Enter key.
where
rco2_unit_no
is the number of the inactive RCO2 unit

If RTS	Do
passed	step 15
failed	step 18

- 15** Send any faulty cards for repair according to local procedure.
- 16** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 19.
- 17** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.

NT6X92

in an RSC-S (PCM-30) Model A RCO2 (end)

- 18** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 19** You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT6X92 in an RSC-S (PCM-30) Model B RCO2

Application

Use this procedure to replace an NT6X92 card in an RSC-S RCO2.

ATTENTION

To ensure peak performance, do not install the UTR and GTR on the same RSC-S RCO2. Presently, there is no way of knowing which receiver is used to interpret tones. Some call processing tones may be degraded if designed for use with a GTR.

PEC	Suffixes	Name
NT6X92	CA	Universal Tone Receiver (UTR)
NT6X92	EA	Global Tone Receiver (GTR)

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT6X92 in an RSC-S (PCM-30) Model B RCO2 (continued)

Summary of card replacement procedure for an NT6X92 card in RSC-S RCO2

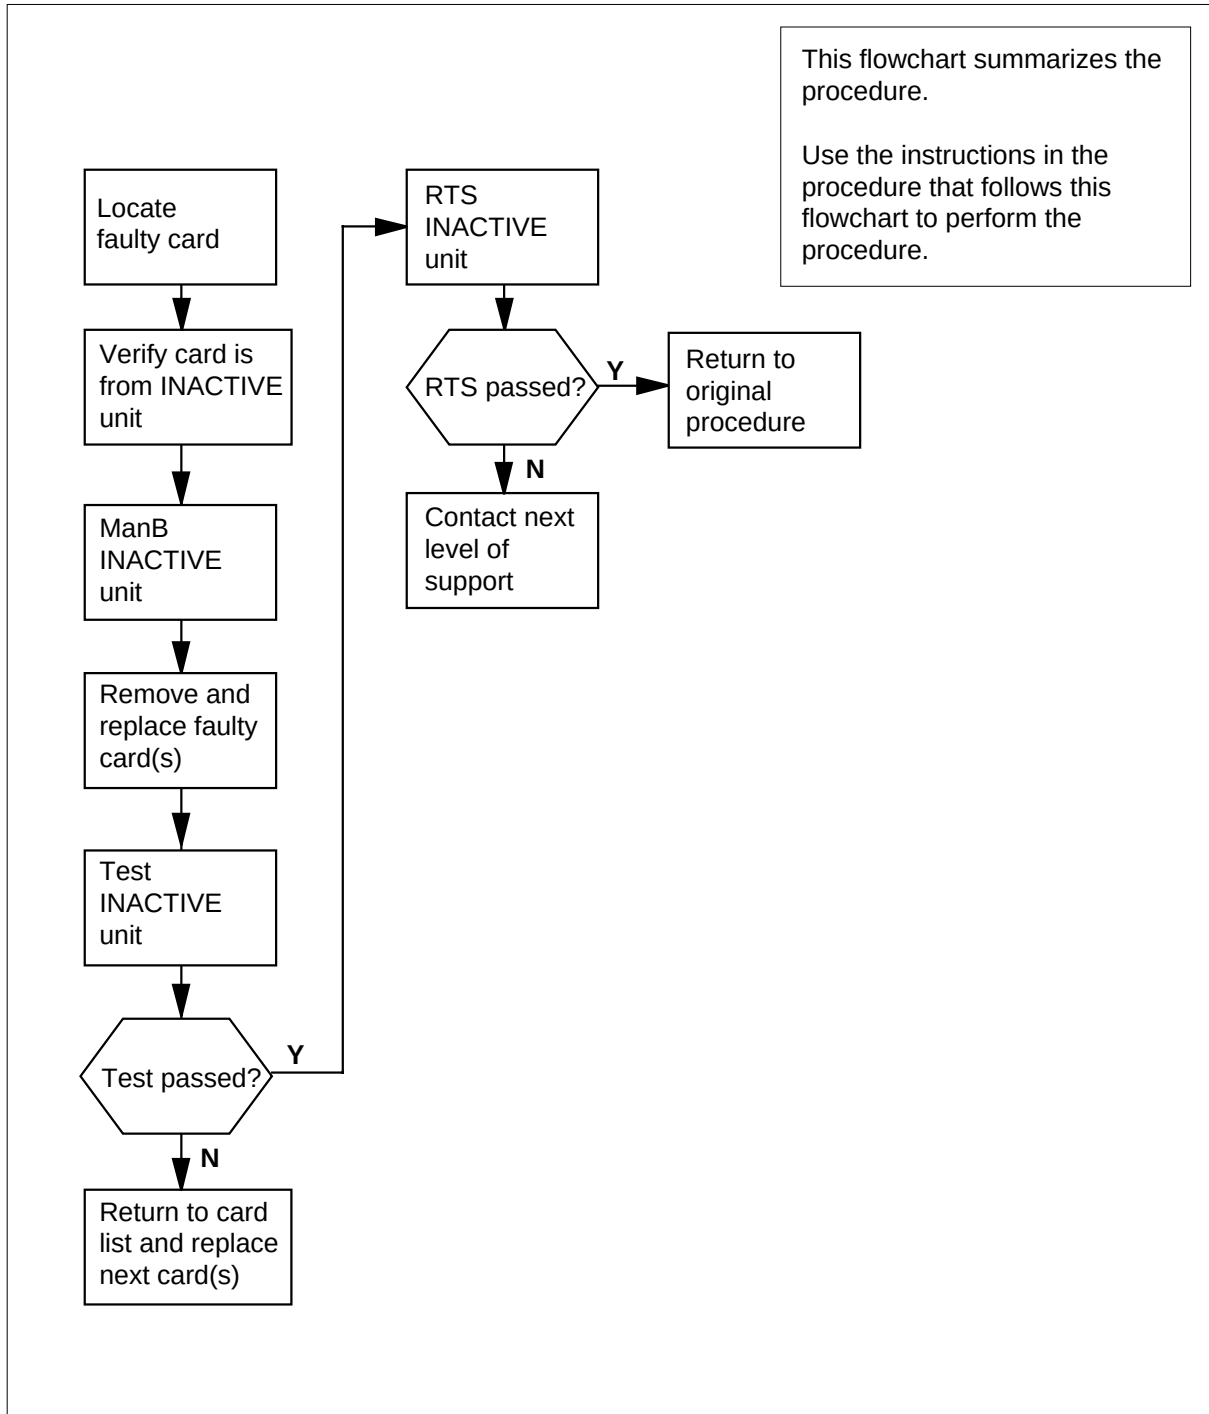

NT6X92 in an RSC-S (PCM-30) Model B RCO2 (continued)

Replacing an NT6X92 card in an RSC-S RCO2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCO2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NT6X92 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

- 3 Ensure the PM level of the MAP display is currently displayed and the RCO2 is posted by typing

>MAPCI;MTC;PM;POST RCO2 rco2_unit_no

and pressing the Enter key.

where

rco2_unit_no

is the number of the RCO2 with the faulty card

Example of a MAP display:

NT6X92

in an RSC-S (PCM-30) Model B RCO2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	1RCO2	.	.	.	.	.
RCO2			SysB	ManB	OffL	CBsy	ISTb		InSv
0 Quit	PM		0	0	2	0	2		25
2 Post_	RCO2		0	0	0	0	1		1
3 ListSet									
4	RCO2	0	ISTb	Links_00S:	CSide	1,	PSide	1	
5 TRNSL	Unit0:		Inact	InSv					
6 TST	Unit1:		Act	InSv					
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 By observing the MAP display, be sure the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 7
inactive unit	step 5

- 5 Switch the processing activity (SWACT) to the inactive unit by typing

>SWACT

and pressing the Enter key.

Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

- 6 Answer the prompt by typing

>YES

and pressing the Enter key.

At the RCE frame

- 7 Put a sign on the *active* unit bearing the words "Active unit—Do not touch." This sign should not be attached by magnets or tape.

NT6X92 in an RSC-S (PCM-30) Model B RCO2 (continued)

At the MAP terminal

- 8 Busy the inactive PM unit by typing
>bsy unit rco2_unit_no
and pressing the Enter key.
where
rco2_unit_no
is the number of the inactive RCO2 unit (0 or 1)

At the RCE frame

9



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the modular supervisory panel of the RCO2. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage


Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.


Put on a wrist strap.

- 10 Remove the NT6X92 card as shown in the following figures.
- a Locate the card to be removed on the appropriate shelf.

NT6X92 in an RSC-S (PCM-30) Model B RCO2 (continued)

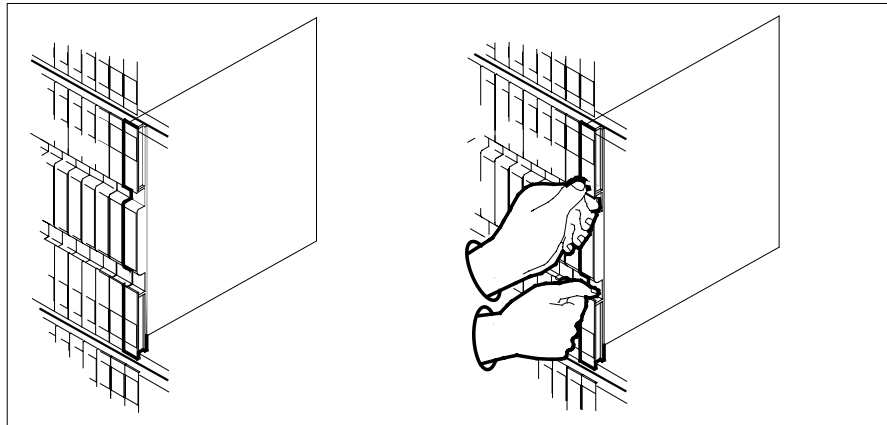


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

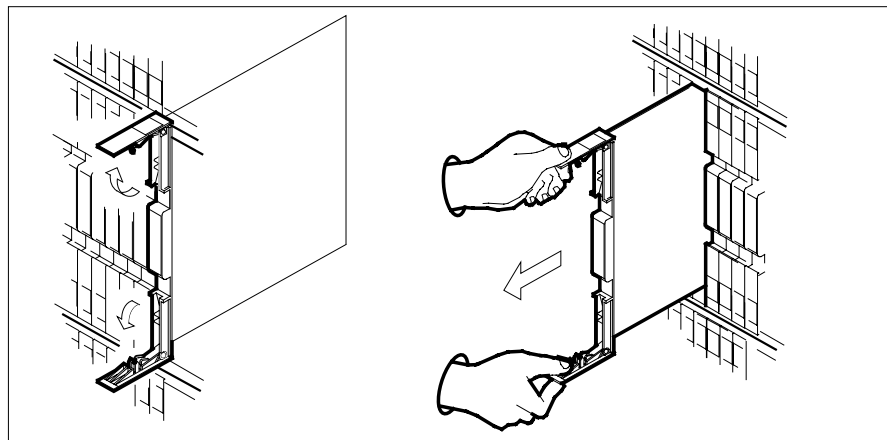


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.
- 11** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf.
- b** Gently slide the card into the shelf.

NT6X92

in an RSC-S (PCM-30) Model B RCO2 (continued)

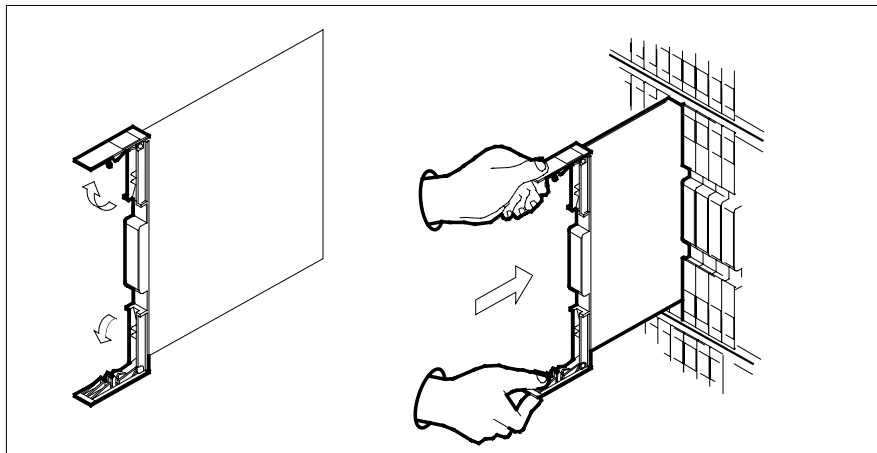

- 12** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

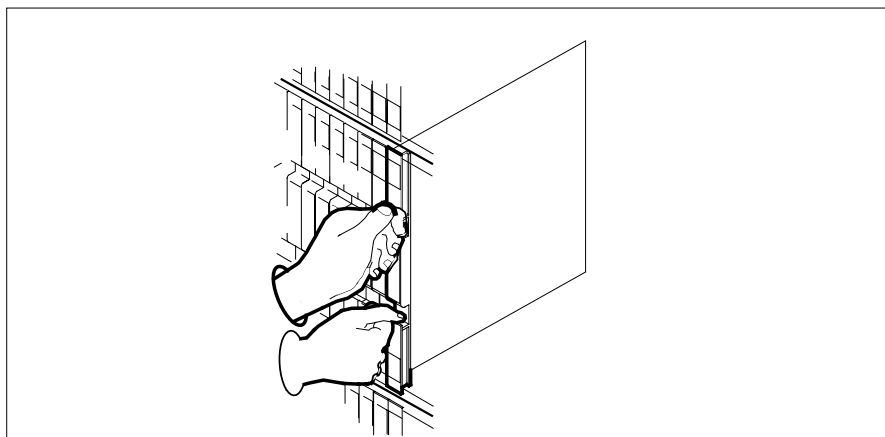

- 13** Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 17
other	step 14

NT6X92
in an RSC-S (PCM-30) Model B RCO2 (end)

At the MAP terminal

- 14** Return the inactive RCO2 unit to service by typing

>RTS UNIT rco2_unit_no

and pressing the Enter key.

where

rco2_unit_no

is the number of the inactive RCO2 unit

If RTS	Do
passed	step 15
failed	step 18

- 15** Send any faulty cards for repair according to local procedure.
- 16** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 19.
- 17** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 18** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 19** You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT6X92 in an SMA

Application

Use this procedure to replace an NT6X92 card in an SMA.

ATTENTION

To ensure peak performance, do not install the UTR and GTR on the same SMA. Presently, there is no way of knowing which receiver is used to interpret tones. Some call processing tones may be degraded if designed for use with a GTR.

PEC	Suffixes	Name
NT6X92	BB	Universal Tone Receiver (UTR)
NT6X92	EA	Global Tone Receiver (GTR)

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA”
- replacing a card
- returning a card


Do not go to the common procedures unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NT6X92 in an SMA (continued)

Summary of card replacement procedure for an NT6X92 card in an SMA

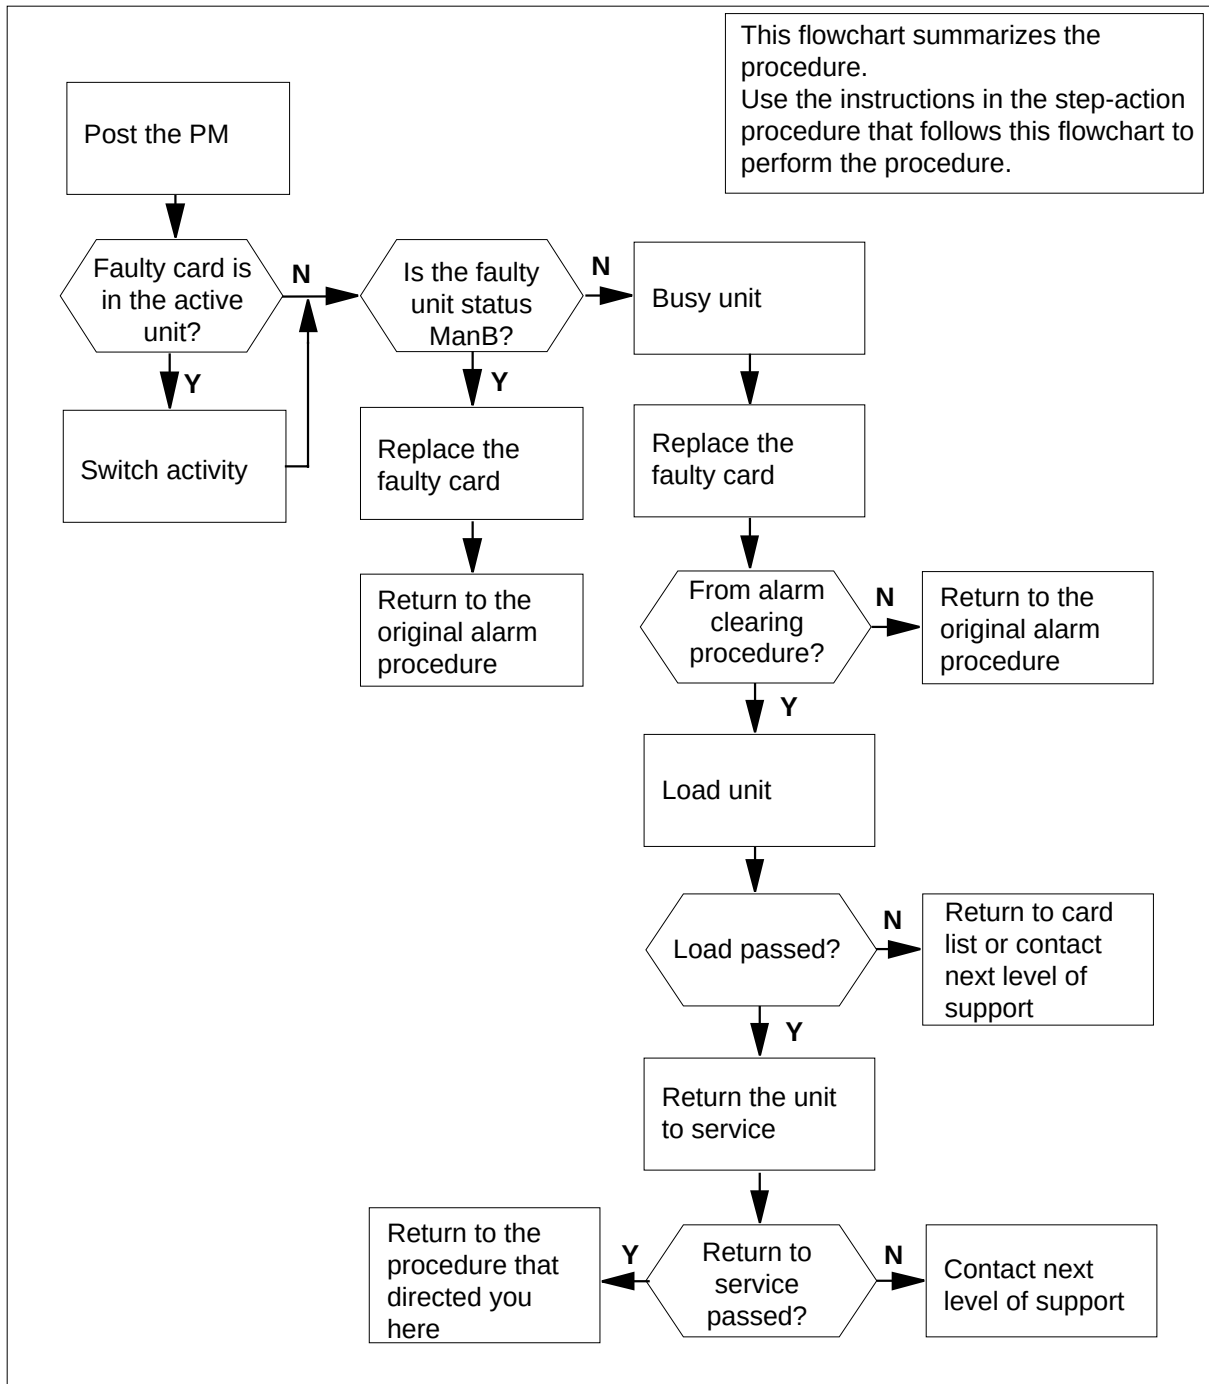

NT6X92 in an SMA (continued)

Replacing an NT6X92 in an SMA

At your current location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA."
- 4



CAUTION

Loss of service

Ensure that you replace the card in the inactive unit and verify the mate unit is active.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA by typing
>MAPCI;MTC;PM;POST SMA sma_no
and pressing the Enter key.

where

sma_no

is the number of the SMA being posted

Example of a MAP response

NT6X92 in an SMA (continued)

SMA	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA	0	0	0	0	1	7

SMA 0 ISTb Links_00S: CSide 0, PSide 0
 Unit0: Act InSv
 Unit1: Inact SysB

- 6 Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If the faulty card is in the	Do
active unit	step 7
inactive unit	step 10

- 7 Switch the activity of the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
can continue at this time	step 8
cannot continue at this time	step 21

- 8 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 10
SWACT failed Reason: XPM SWACTback	step 9
SWACT refused by SWACT Controller	step 9

NT6X92 in an SMA (continued)

- 9 The inactive unit could not establish two-way communication with the central control and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit.

Go to step 19.

At the equipment frame

- 10 Hang a sign on the active unit bearing the words: *Active unit-Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 11 Observe the MAP display and determine the state of the inactive unit.

If state is	Do
ManB	step 13
SysB, CBsy, ISTb, or InSv	step 12

- 12 Busy the inactive PM unit by typing

>BSY INACTIVE

and pressing the Enter key

where

unit_no

is the number of the inactive SMA unit (0 or 1)

At the equipment frame

13



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the frame supervisory panel (FSP). This protects the equipment against damage caused by static electricity.

Perform the common replacing a card procedure in this document.

- 14 Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 17
other	step 15

NT6X92 in an SMA (end)

At the MAP terminal

- 15** Load the inactive SMA unit by typing

>LOADPM INACTIVE

and pressing the Enter key.

where

unit_no

is the number of the busied SMA unit

If load	Do
passed	step 16
failed	step 19

- 16** Return the inactive SMA unit to service by typing

>RTS INACTIVE

and pressing the Enter key.

where

unit_no

is the number of the SMA unit loaded in step 15

If RTS	Do
passed	step 17
failed	step 19

At the equipment frame

- 17** Remove the sign from the active SMA unit.

- 18** Go to the common returning a card procedure in this document.

Go to step 20.

- 19** For further assistance, contact the personnel responsible for the next level of support.

- 20** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

- 21** For further assistance with switch of activity, contact the personnel responsible for the next level of support.

Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

NT6X92 in an SMA-MVI-20

Application

Use this procedure to replace an NT6X92 card in an SMA.

ATTENTION

To ensure peak performance, do not install the UTR and GTR on the same SMA. Presently, there is no way of knowing which receiver is used to interpret tones. Some call processing tones may be degraded if designed for use with a GTR.

PEC	Suffixes	Name
NT6X92	BB	Universal Tone Receiver (UTR)
NT6X92	EA	Global Tone Receiver (GTR)

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA”
- replacing a card


Do not go to the common procedures unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NT6X92 in an SMA-MVI-20 (continued)

Summary of card replacement procedure for an NT6X92 card in an SMA

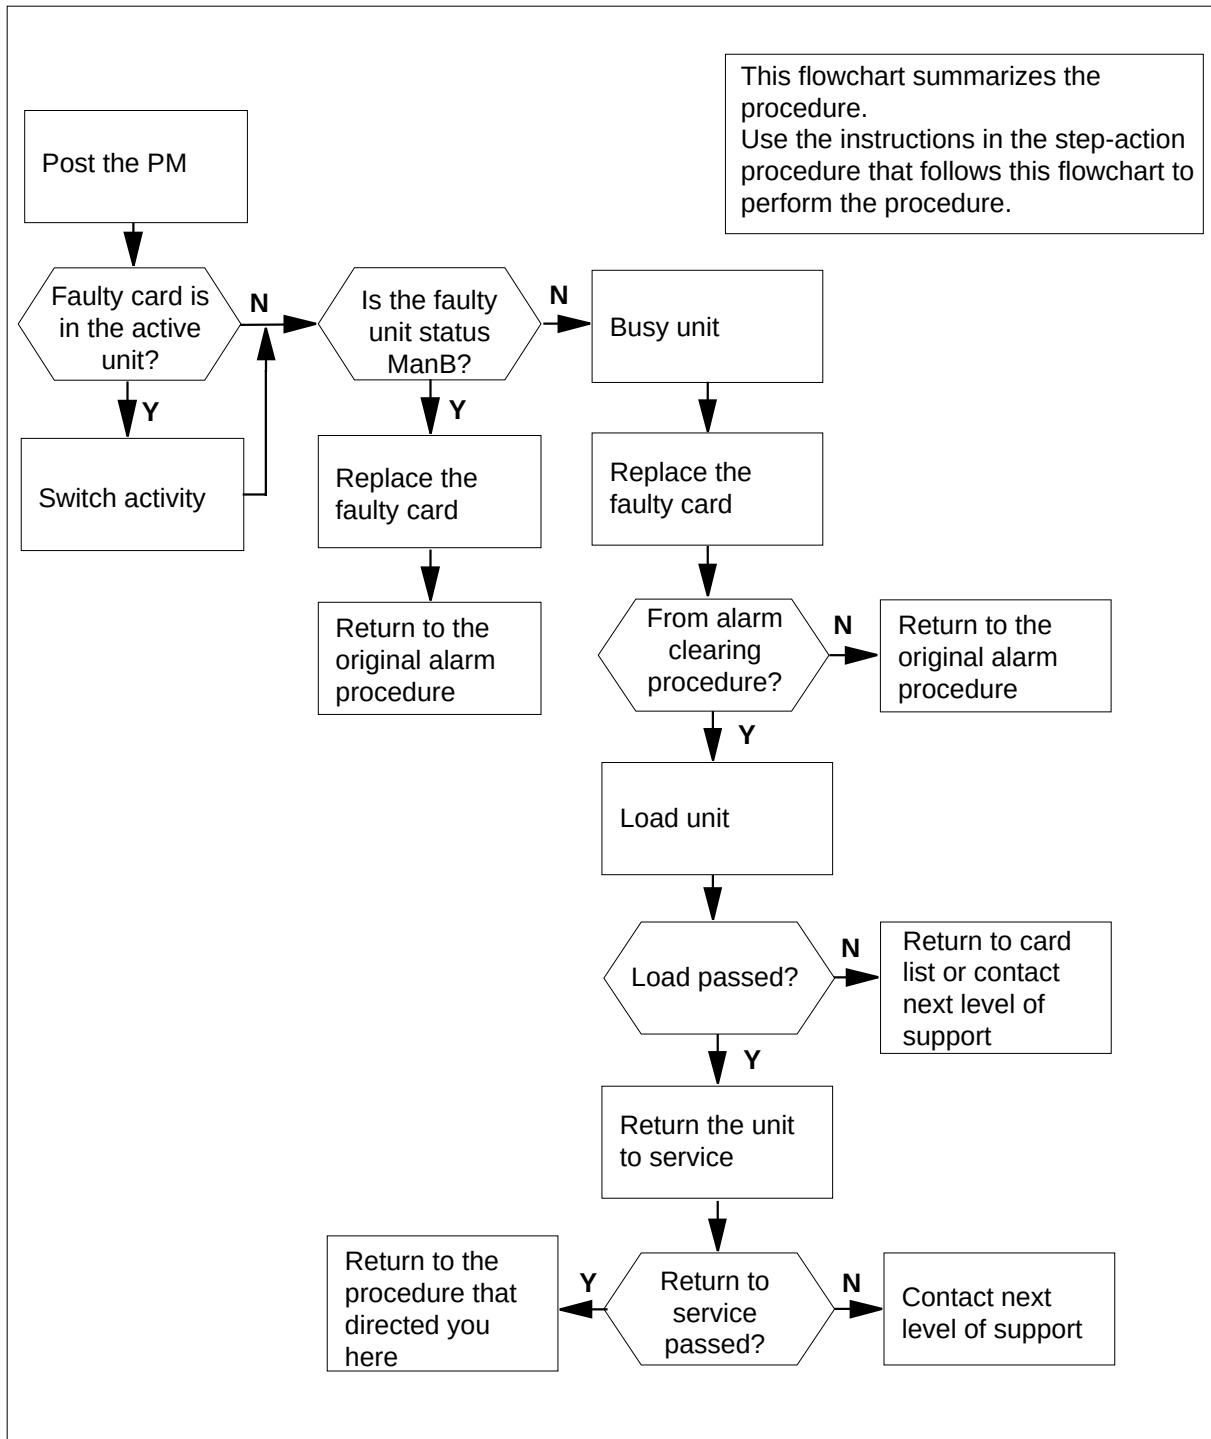

NT6X92 in an SMA-MVI-20 (continued)

Replacing an NT6X92 in an SMA

At the equipment frame

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA."
- 4



CAUTION

Loss of service

Ensure that you replace the card in the inactive unit and verify the mate unit is active.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA by typing
>MAPCI;MTC;PM;POST SMA sma_no
and pressing the Enter key.

where

sma_no

is the number of the SMA being posted

Example of a MAP response

NT6X92 in an SMA-MVI-20 (continued)

SMA	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA	0	0	0	0	1	7

SMA 0 ISTb Links_00S: CSide 0, PSide 0
Unit0: Act InSv
Unit1: Inact SysB

- 6 Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If the faulty card is in the	Do
active unit	step 7
inactive unit	step 11

- 7 SWACT the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
cannot continue at this time	step 8
can continue at this time	step 9

- 8 Reject the prompt to SWACT the units by typing

>NO

and pressing the Enter key.

The system discontinues the SWACT.

- 9 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 11

NT6X92

in an SMA-MVI-20 (continued)

	If the message is	Do
	SWACT failed Reason: XPM SWACTback	step 10
	SWACT refused by SWACT Controller	step 10
10	The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit. Go to step 22.	

At the equipment frame

- 11 Hang a sign on the active unit bearing the words: *Active unit-Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 12 Observe the MAP display and determine the state of the inactive unit.

	If state is	Do
	ManB	step 14
	SysB, CBsy, ISTb, or InSv	step 13
13	Busy the inactive PM unit by typing >BSY UNIT unit_no and pressing the Enter key <i>where</i> unit_no is the number of the inactive SMA unit (0 or 1)	

NT6X92 in an SMA-MVI-20 (continued)

At the equipment frame

14

**WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the frame supervisory panel (FSP). This protects the equipment against damage caused by static electricity.

Perform the common replacing a card procedure in this document.

15

Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 19
other	step 16

At the MAP terminal

16

Load the inactive SMA unit by typing

>LOADPM UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the busied SMA unit

If load	Do
passed	step 17
failed	step 22

17

Test the inactive SMA unit by typing

>TST UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the SMA unit loaded in step 16

If TST	Do
passed	step 18

NT6X92 in an SMA-MVI-20 (end)

	If TST	Do
	failed	step 22
18	Return the inactive SMA unit to service by typing >RTS UNIT unit_no and pressing the Enter key. where unit_no is the number of the SMA unit tested in step 17	
	If RTS	Do
	passed	step 19
	failed	step 22

At the equipment frame

- 19 Remove the sign from the active SMA unit.
- 20 Send any faulty cards for repair according to local procedure.
- 21 Note the following in the office records:
- date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
- Go to step 23.
- 22 For further assistance, contact the personnel responsible for the next level of support.
- 23 You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

**NT6X92
in an SMA2**

Application

Use this procedure to replace an NT6X92 card in an SMA2.

PEC	Suffixes	Name
6X92	BB	Universal Tone Receiver

Common procedures

The following procedures are referenced in this procedure:


- “Locating a faulty card in an SMA2”
- replacing a card
- returning a card

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NT6X92 in an SMA2 (continued)

Summary of card replacement procedure for an NT6X92 card in an SMA2

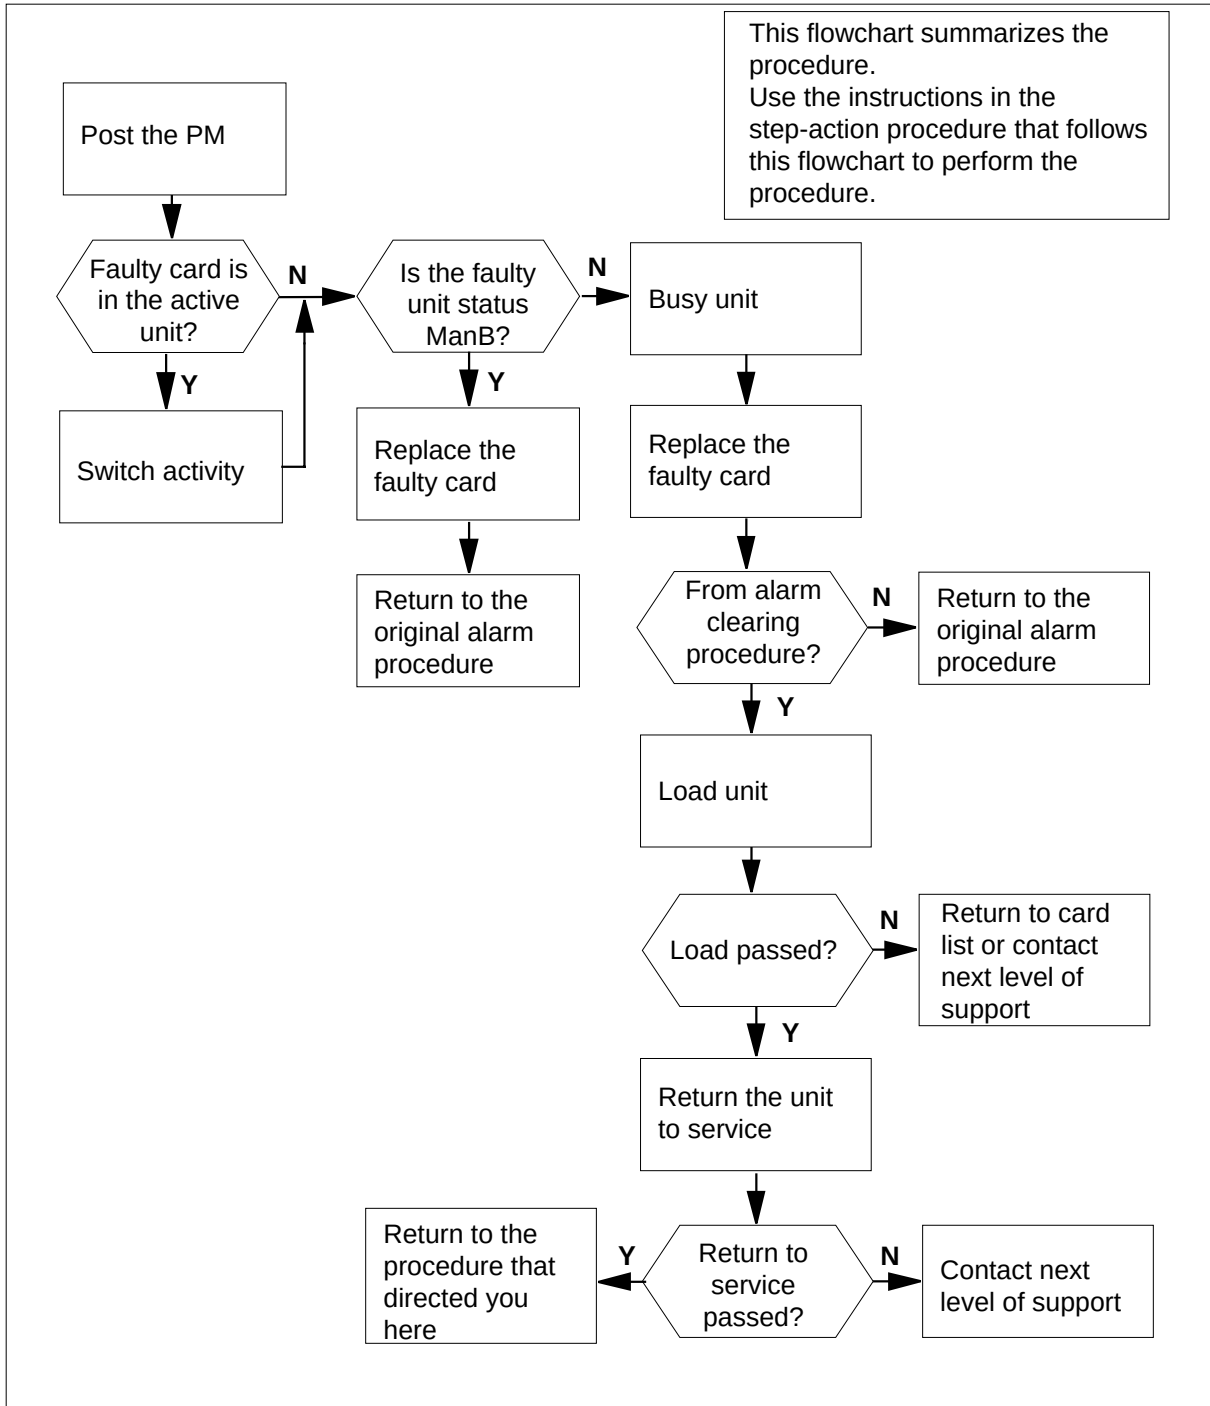

NT6X92 in an SMA2 (continued)

Replacing an NT6X92 card in an SMA2

At your current location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA2."
- 4



CAUTION

Loss of service

When replacing a card in the SMA2, ensure the unit in which you are replacing the card is *inactive* and the mate unit is *active*.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA2 by typing

>MAPCI;MTC;PM;POST SMA2 sma2_no

and pressing the Enter key.

where

sma2_no

is the number of the SMA2 being posted

Example of a MAP response

NT6X92**in an SMA2** (continued)

SMA2	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA2	0	0	0	0	1	7

SMA2 0 ISTb Links_00S: CSide 0, PSide 0
 Unit0: Act InSv
 Unit1: Inact SysB

- 6 Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If the faulty card is in the	Do
active unit	step 7
inactive unit	step 11

- 7 SWACT the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
cannot continue at this time	step 8
can continue at this time	step 9

- 8 Reject the prompt to SWACT of the units by typing

>NO

and pressing the Enter key.

The system discontinues the SWACT.

- 9 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 11

NT6X92 in an SMA2 (continued)

	If the message is	Do
	SWACT failed son: XPM SWACTback	Rea- step 10
	SWACT refused by SWACT Controller	step 10
10	The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit. Go to step 21.	

At the frame or cabinet

- 11** Hang a sign on the active unit bearing the words: *Active unit-Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 12** Observe the MAP display and determine the state of the inactive unit.

	If state is	Do
	ManB	step 14
	SysB, CBsy, ISTb, or InSv	step 13
13	Busy the inactive PM unit by typing >BSY UNIT unit_no and pressing the Enter key <i>where</i> unit_no is the number of the inactive SMA2 unit (0 or 1)	

NT6X92 in an SMA2 (continued)

At the frame or cabinet

14



WARNING

Static electricity damage

Wear a strap connected to the wrist strap grounding modular supervisory panel (MSP) while handling cards. This strap protects the cards against damage caused by static electricity.

Perform the common replacing a card procedure in this document.

15 Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 18
other	step 16

At the MAP terminal

16 Load the inactive SMA2 unit by typing

>LOADPM UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the busied SMA2 unit

If load	Do
passed	step 17
failed	step 21

17 Return the inactive SMA2 unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the SMA2 unit loaded in step 17

If RTS	Do
passed	step 18

NT6X92
in an SMA2 (end)

If RTS

failed

Dostep 21

At the frame or cabinet

- 18** Remove the sign from the active SMA2 unit.
- 19** Send any faulty cards for repair according to local procedure.
- 20** Go to the common returning a card procedure in this document.
Go to step 22.
- 21** For further assistance, contact the personnel responsible for the next level of support.
- 22** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT6X92 in an SMS

Application

Use this procedure to replace an NT6X92 card in an SMS.

ATTENTION

To ensure peak performance, do not install the UTR and GTR on the same SMS. Presently, there is no way of knowing which receiver is used to interpret tones. Some call processing tones may be degraded if designed for use with a GTR.


PEC	Suffixes	Name
NT6X92	BB, BC	Universal tone receiver (UTR)
NT6X92	EA	Global tone receiver (GTR)

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

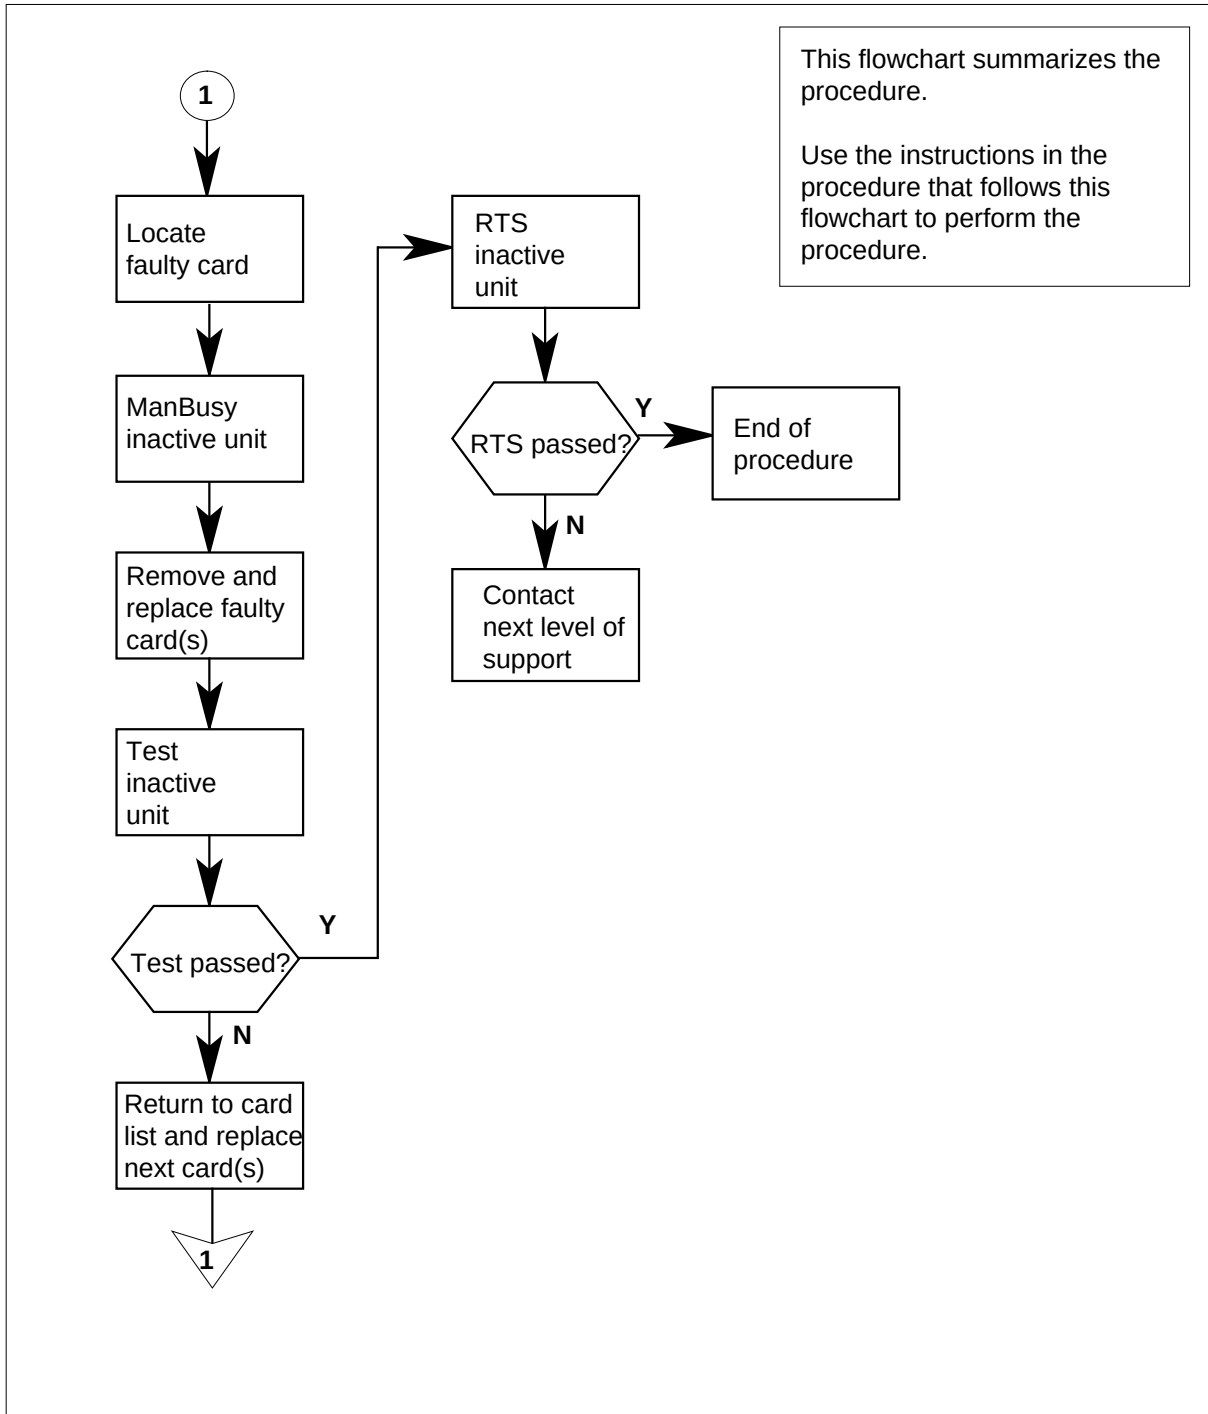NT6X92
in an SMS (continued)**Summary of card replacement procedure for an NT6X92 card in an SMS**

NT6X92 in an SMS (continued)

Replacing an NT6X92 card in an SMS

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the SMS, ensure the unit where you are replacing the card is inactive and the mate unit is active.

Obtain a replacement card. Verify the replacement card has the same product engineering code (PEC), including suffix, as the card to be removed.

At the MAP terminal

- 3 Access the PM level of the MAP display and post the faulty SMS by typing
>MAPCI;MTC;PM;POST SMS sms_no
 and pressing the Enter key.

where

sms_no

is 0-127 range for NT40 and 0-255 range for DMS SuperNode

Example of a MAP response

SMS 3	INSV	LINKS_00S	CSIDE 0	PSIDE 0
Unit0	Act	InSv		
Unit1	Inact	ISTb		

- 4 By observing the MAP display, be sure the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 8

- 5 Switch the activity of the units by typing
>SWACT

NT6X92 in an SMS (continued)

and pressing the Enter key.

The system determines the type of SWACT it can perform and displays a confirmation prompt for the selected SWACT.

If SWACT	Do
can continue at this time	step 6
cannot continue at this time	step 23

- 6 Switch the activity of the unit by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SwAct passed	step 8
SwAct failed	step 7
SwAct failedReason: XPM SwActback	step 7
SwAct refused by SwAct controller	step 7

- 7 Return to the *Alarm Clearing Procedures*. Clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the frame

- 8 Put a sign on the active unit bearing the words: *Active unit—Do not touch*. This sign should not be attached with magnets or tape.

At the MAP terminal

- 9 Busy the inactive PM unit by typing

>bsy unit unit_no

and pressing the Enter key.

where

unit_no

is the number of the faulty SMS unit

NT6X92 in an SMS (continued)

At the frame

10



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point at the left side of the frame supervisory panel of the SMS. This protects the equipment against damage caused by static electricity.

Put on a wrist strap.

11




DANGER

Equipment damage

When removing or inserting a card, do not apply direct pressure to the components and do not force the cards into the slots.

Remove the NT6X92 card from slot 17 as shown in the following figures.


- a** Locate the card to be removed on the appropriate shelf.

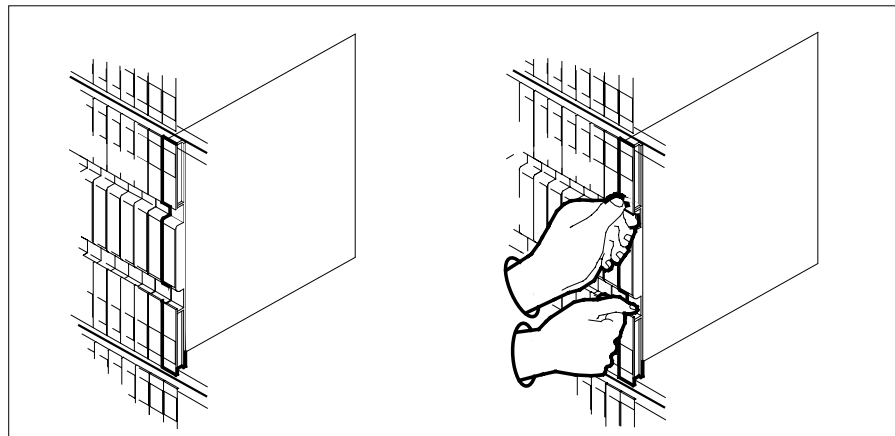


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.
- c** Verify the replacement card has the same PEC, including suffix, as the card you just removed.

- 12** Open the locking levers on the replacement card. Align the card with the slots in the shelf and gently slide the card into the shelf.

NT6X92
in an SMS (continued)

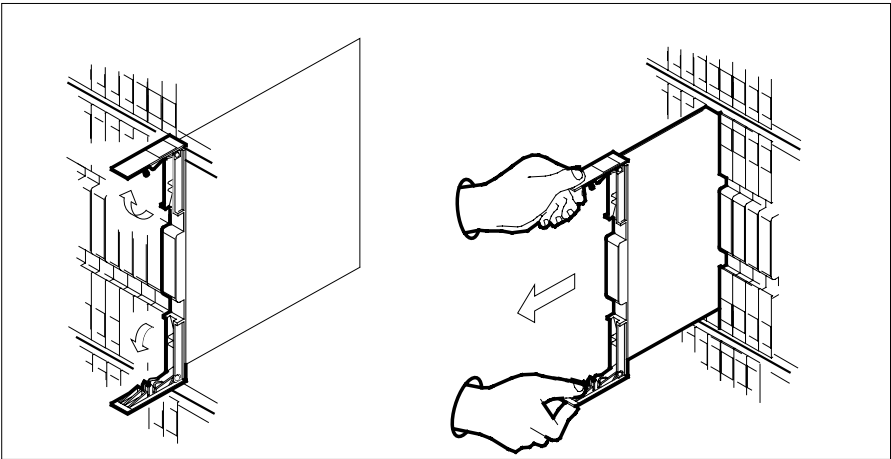

- 13** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

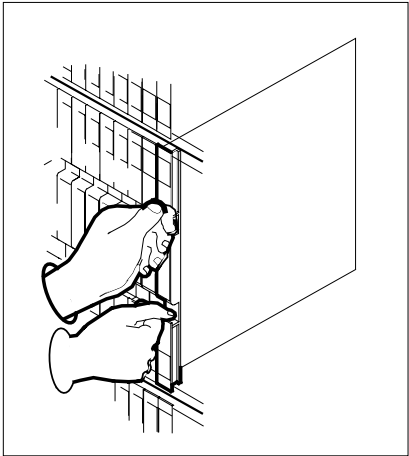

- 14** Use the following information to determine where to go next in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 17
other	step 15

- 15** Test the inactive unit by typing
>TST UNIT unit_no

NT6X92

in an SMS (continued)

and pressing the Enter key.

where

unit_no
is the number of the faulty SMS unit

If TST	Do
passed	step 16
failed	step 17

- 16** Return the inactive SMS unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

unit_no
is the number of the faulty SMS unit

If RTS	Do
passed	step 19
failed	step 18

- 17** Return to the *Alarm Clearing Procedures* that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.

- 18** Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.

At the frame

- 19** Remove the sign from the active SMS unit.

- 20** Send any faulty cards for repair according to local procedure.

- 21** Record the following items in office records according to local policy:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

- 22** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT6X92
in an SMS (end)

- 23** For further assistance with switch of activity, contact the personnel responsible for the next level of support.
- Note:** If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

NT6X92 in an SMU

Application

Use this procedure to replace the following card in an SMU shelf.

ATTENTION

To ensure peak performance, do not install the UTR and GTR on the same SMU. Presently, there is no way of knowing which receiver is used to interpret tones. Some call processing tones may be degraded if designed for use with a GTR.


PEC	Suffix	Name
NT6X92	BB, BC	Universal tone receiver (UTR)
NT6X92	EA	Global tone receiver (GTR)

Common procedures

The common replacing a card procedure is referenced in this procedure.

Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

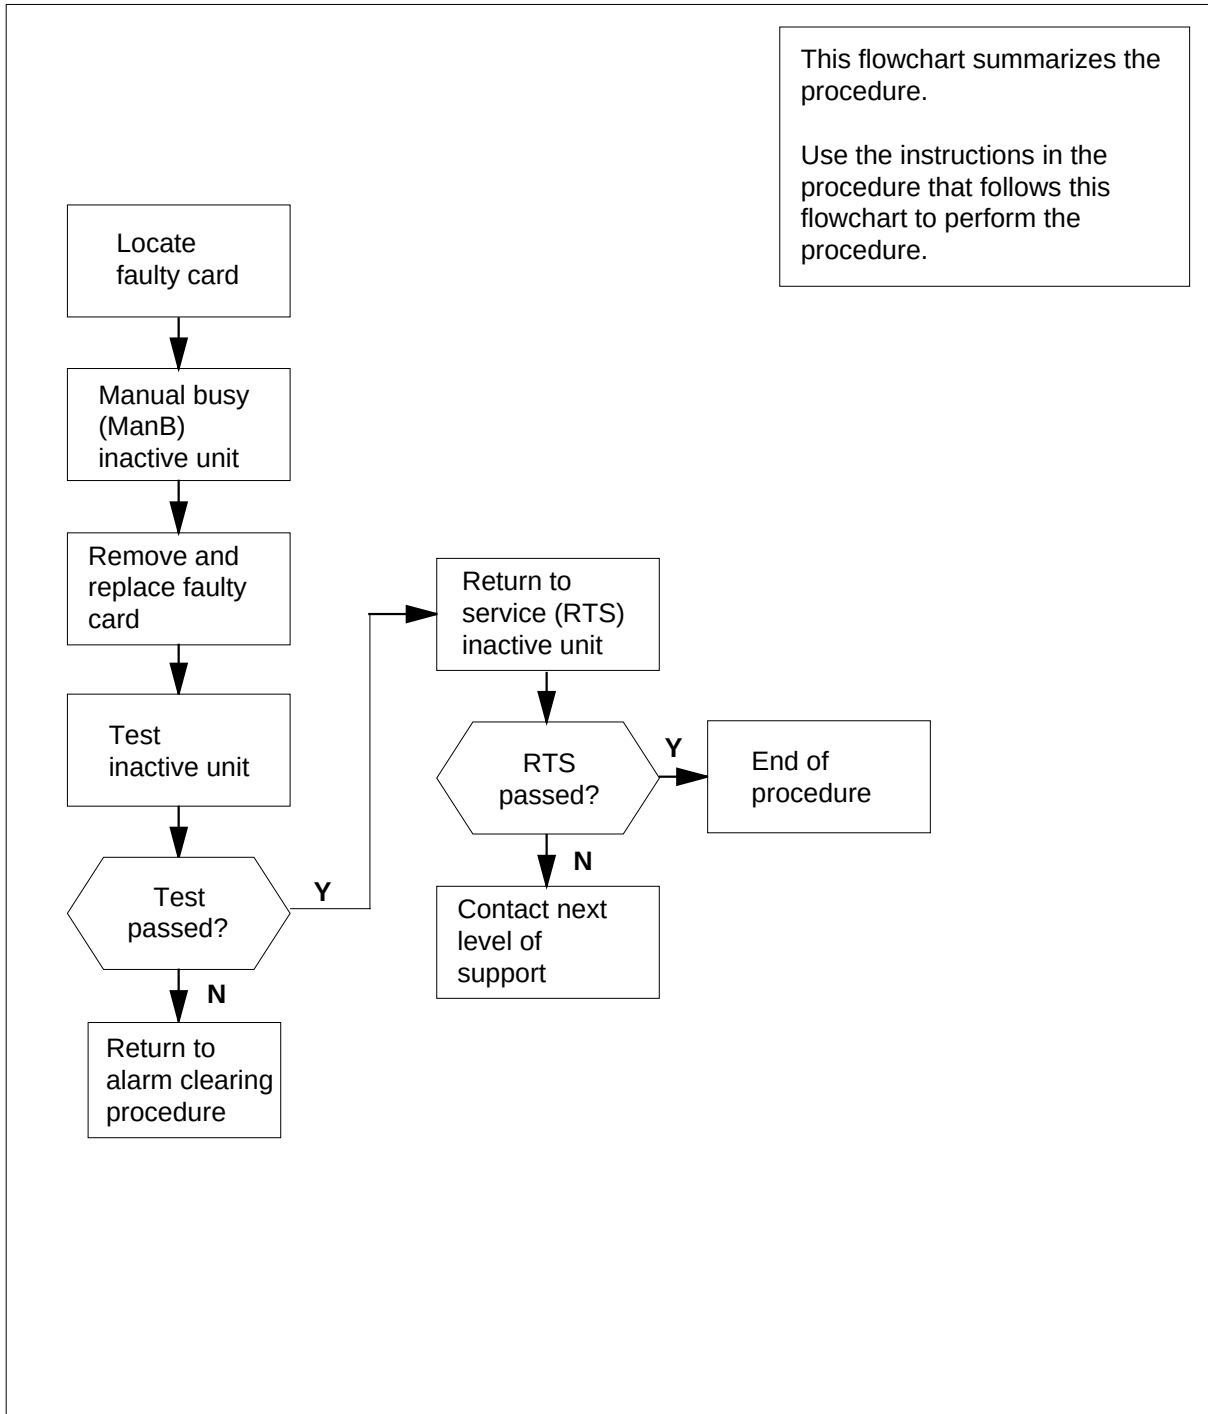NT6X92
in an SMU (continued)**Summary of card replacement procedure for an NT6X92 card in an SMU**

NT6X92 in an SMU (continued)

Replacing an NT6X92 card in an SMU

At your current location:

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service possible

When replacing a card in the SMU, ensure that the unit where you are replacing the card is inactive and that the mate unit is active.

Get a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card to be removed.

At the MAP terminal:

- 3 Access the PM level of the MAP terminal and post the faulty SMU by typing
>MAPCI;MTC;PM;POST SMU smu_no
 and pressing the Enter key.
where

smu_no
is the number of the SMU

Example of a MAP display response:

SMU 3	INSV	LINKS_00S	CSIDE	PSIDE 0
Unit0	Act	InSv		
Unit1	Inact	SysB		

- 4 By observing the MAP display, ensure the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 8

- 5 Switch the activity of the units by typing
>SWACT

NT6X92 in an SMU (continued)

and pressing the Enter key.

The system determines the type of SwAct it can perform. The system displays a confirmation prompt for the selected SwAct.

If SwAct	Do
can continue at this time	step 6
cannot continue at this time	step 20

- 6 Switch the activity of the unit by typing

>YES

and pressing the Enter key.

The system runs a pre-SwAct audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SwAct passed	step 8
SwAct failed	step 7
SwAct failed Reason: XPM SwActback	step 7
SwAct refused by SwAct controller	step 7

- 7 Return to the *Alarm Clearing Procedures* to clear the alarm condition on the inactive unit. After the alarm is cleared, return to step 1 of this procedure.

At the frame:

- 8 Put a sign on the active unit bearing the following words: "Active unit—Do not touch."

At the MAP terminal:

- 9 Busy the inactive PM unit by typing

>BSY UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the faulty SMU unit

NT6X92

in an SMU (continued)

- 10** Go to the common replacing a card procedure in this document, then return to step 11 of this procedure.
- 11** Use the following information to determine what step to go to next in this procedure.
- | If you entered this procedure from | Do |
|------------------------------------|---------|
| alarm clearing procedures | step 14 |
| other | step 12 |
- 12** Test the inactive unit by typing
>TST UNIT unit_no
 and pressing the Enter key.
where
unit_no
 is the number of the SMU unit busied in step 9
- | If TST | Do |
|--------|---------|
| passed | step 13 |
| failed | step 15 |
- 13** Return the inactive SMU unit to service by typing
>RTS UNIT unit_no
 and pressing the Enter key.
where
unit_no
 is the number of the SMU unit tested in step 12
- | If RTS | Do |
|--------|---------|
| passed | step 16 |
| failed | step 15 |
- 14** Return to the *Alarm Clearing Procedures*. At the point where a faulty card list is initiated, identify the next faulty card on the list. Go to the appropriate card replacement procedure for that card.
- 15** Contact personnel responsible for higher level support and get further help to replace this card.
- 16** Remove the sign from the active SMU unit.
- 17** Send any faulty cards for repair according to local procedure.

NT6X92
in an SMU (end)

- 18** Note in office records according to local policy:
- date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
- 19** You have successfully completed this procedure. Remove the sign from the active unit, return to the maintenance procedure that directed you to this card replacement procedure, and continue as directed.
- 20** For further assistance with switch of activity, contact the personnel responsible for the next level of support.
- Note:** If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

NT6X99 in an IOPAC ILCM

Application

Use this procedure to replace the following card in an International line concentrating module (ILCM).


PEC	Suffix	Name
NT6X99	AA	Datapath bit error rate tester line card (2 slot)

Common procedures

The common replacing a line card procedure is referenced in this procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

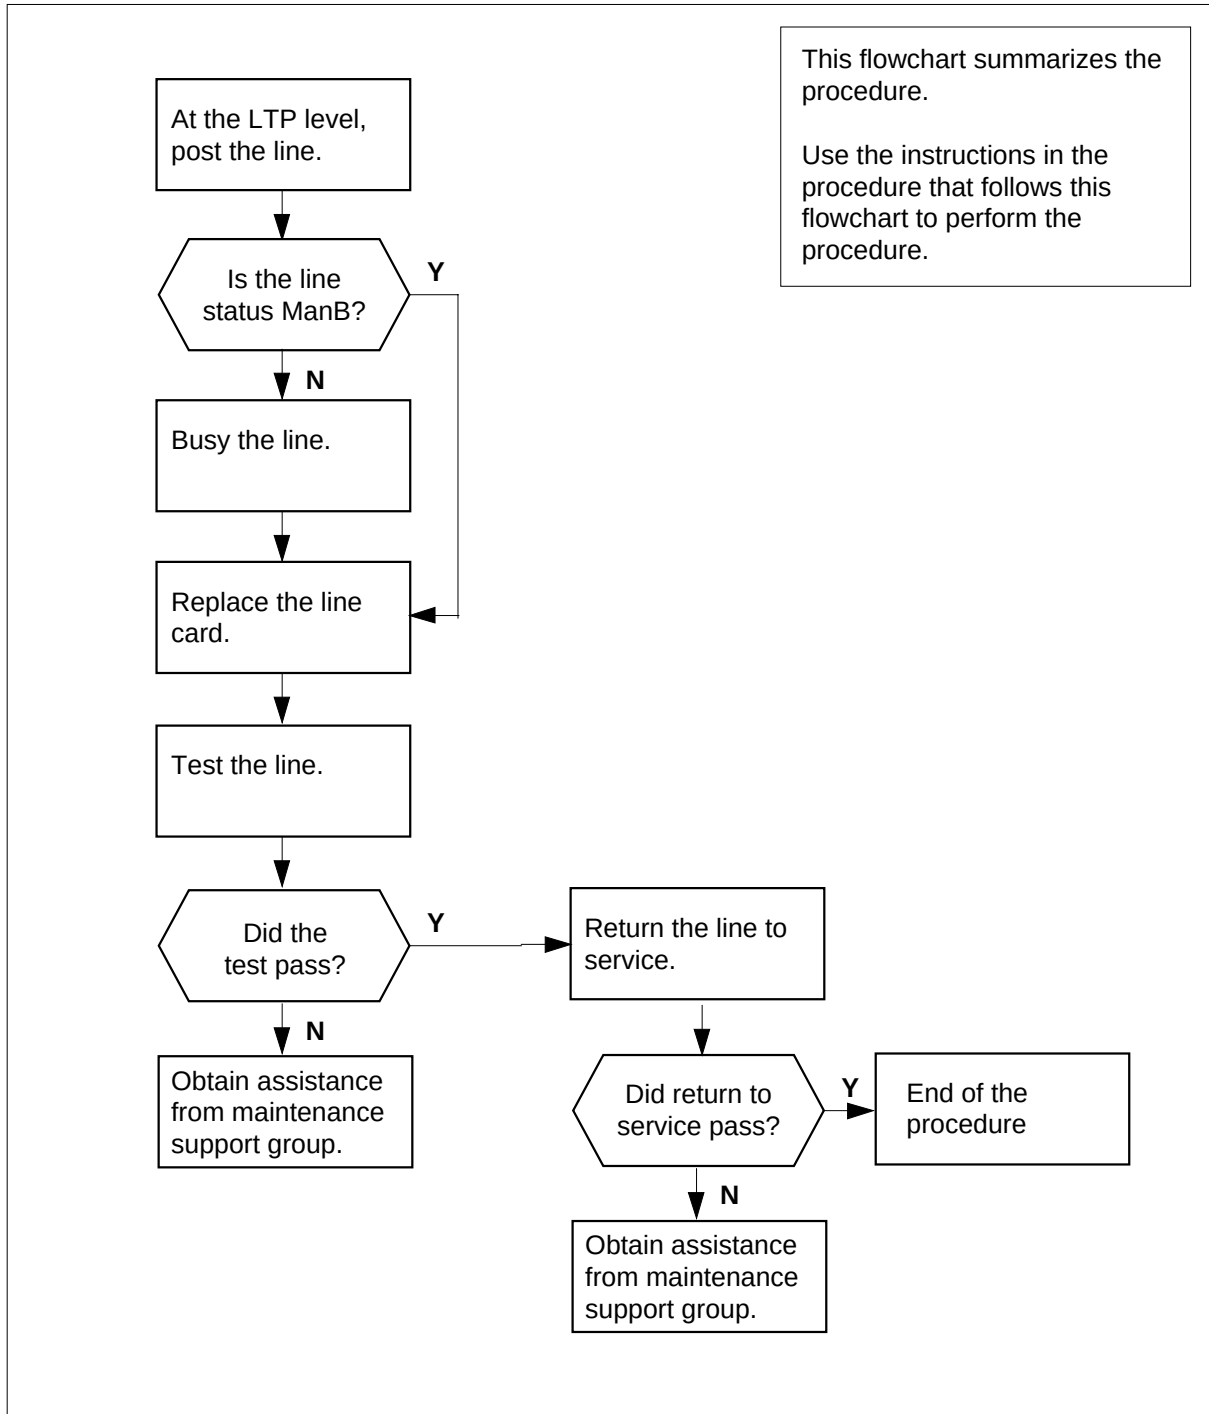NT6X99
in an IOPAC ILCM (continued)**Summary of card replacement procedure for NT6X99 card in an ILCM**

NT6X99 in an IOPAC ILCM (continued)

Replacing an NT6X99 in an ILCM

At your Current Location

- 1 Obtain a replacement card.
Ensure that the replacement card has the same product equipment code (PEC), including suffix, as the card to be removed.

At the MAP terminal

- 2 Access the line test position (LTP) level of the MAP display and post the line associated with the card to be replaced by typing

>MAPCI;MTC;LNS;LTP;POST L site lcm lsg ckt

and pressing the Enter key.

where

site

is the name of the site where the IOPAC is located

lcm

is the number of the ILCM with the faulty card

lsg

is the number of the line subgroup with the faulty card

ckt

is the number of the circuit associated with the faulty card

Example of a MAP response:

```
LCC PTY      RNG .....LEN..... DN  STA F S LTA TE RESULT
CKT TYPEFL   REM1 00 0 03 03      IBERT
```

- 3 Check the status of the posted line.

If the line status is

Do

manual busy (ManB)

step 5

not ManB

step 4

- 4 Busy the line by typing

>BSY

and pressing the Enter key.

- 5 Go to the common replacing a line card procedure in this document. When you have completed the procedure, return here.

- 6 Test the line card just replaced by typing

>DIAG

NT6X99
in an IOPAC ILCM (end)

and pressing the Enter key.

If the DIAG

Do

passed

step 7

failed

step 10

-
- 7** Return the line card to service by typing
>RTS
and pressing the Enter key.

If RTS

Do

passed

step 8

failed

step 10

-
- 8** Send any faulty cards for repair according to local procedure.

- 9** Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 11.

- 10** Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.

- 11** You have successfully completed this procedure.

NT6X99 in an OPAC LCM

Application

Use this procedure to replace the following card in a line concentrating module (LCM).


PEC	Suffix	Name
NT6X99	AA	Datapath bit error rate tester line card (2 slot)

Common procedures

The common replacing a line card procedure is referenced in this procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

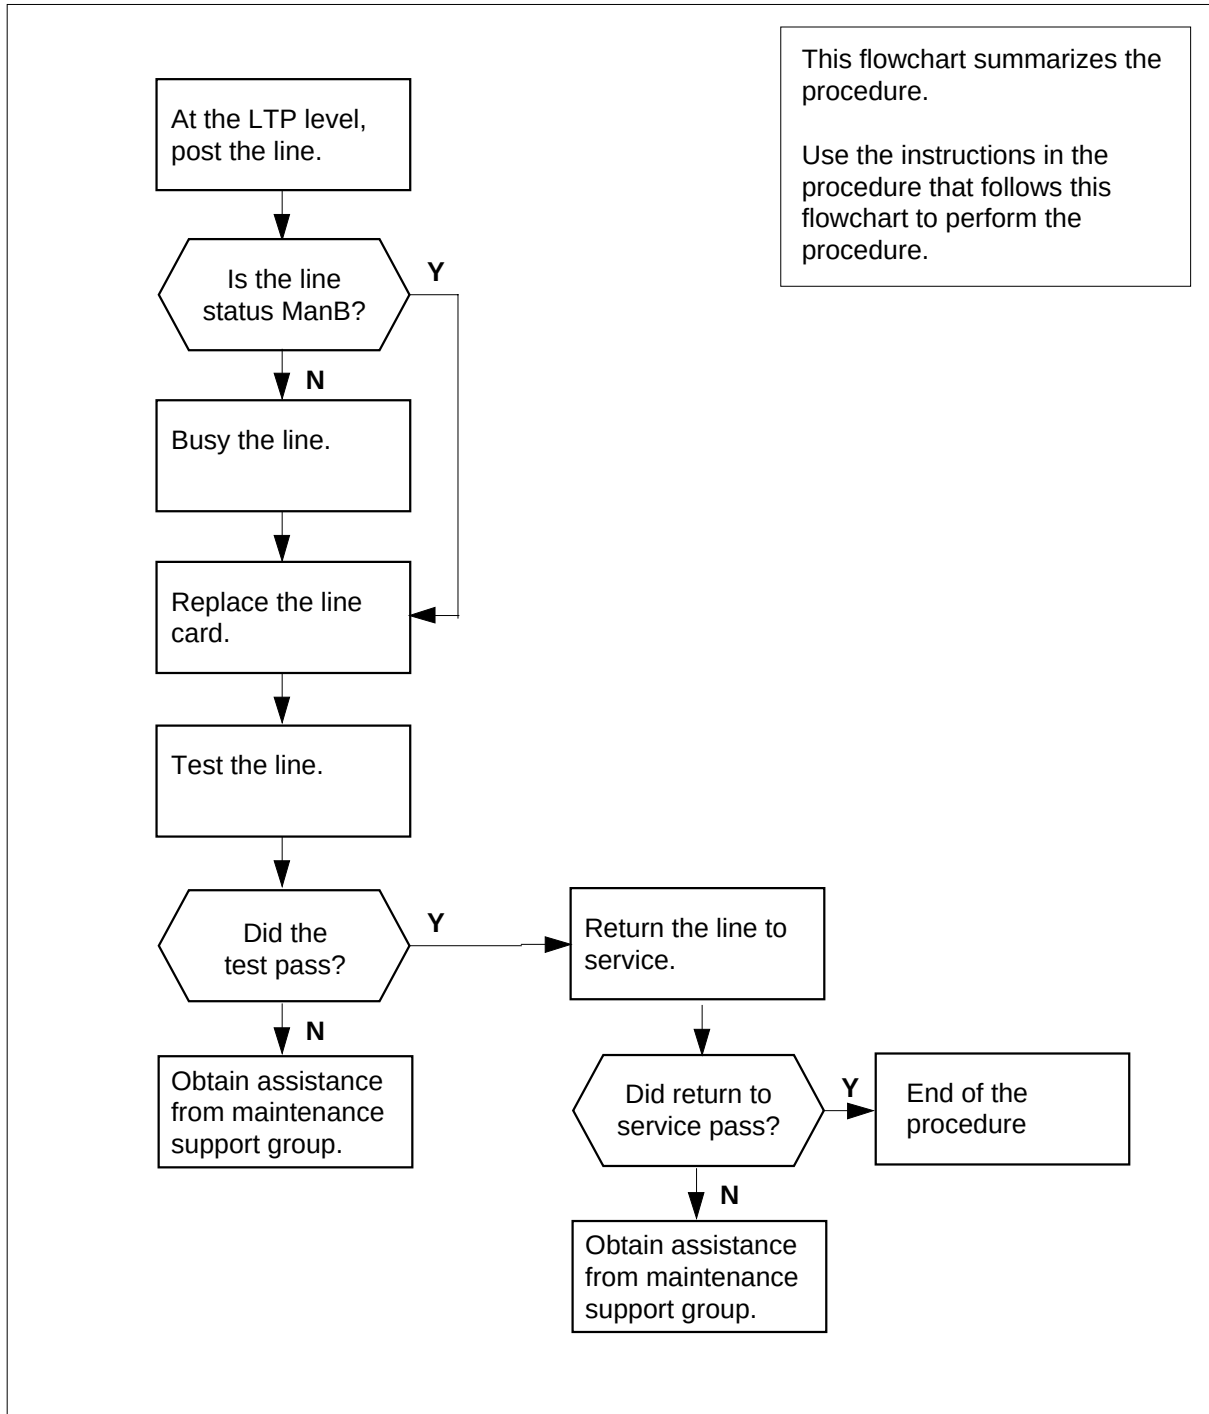NT6X99
in an OPAC LCM (continued)**Summary of card replacement procedure for NT6X99 card in an LCM**

NT6X99 in an OPAC LCM (continued)

Replacing an NT6X99 in an LCM

At your Current Location

- 1 Obtain a replacement card.
Ensure that the replacement card has the same product equipment code (PEC), including suffix, as the card to be removed.

At the MAP terminal

- 2 Access the line test position (LTP) level of the MAP display and post the line associated with the card to be replaced by typing

>MAPCI;MTC;LNS;LTP;POST L site rlcm lsg ckt

and pressing the Enter key.

where

site

is the name of the site where the OPAC is located

rlcm

is the number of the OPAC with the faulty card

lsg

is the number of the line subgroup with the faulty card

ckt

is the number of the circuit associated with the faulty card

Example of a MAP response:

```
LCC PTY      RNG .....LEN..... DN  STA F S LTA TE RESULT
CKT TYPEFL   REM1 00 0 03 03      IBERT
```

- 3 Check the status of the posted line.

If the line status is	Do
manual busy (ManB)	step 5
not ManB	step 4

- 4 Busy the line by typing
>BSY
and pressing the Enter key.
- 5 Go to the common replacing a line card procedure in this document. When you have completed the procedure, return here.
- 6 Test the line card just replaced by typing
>DIAG

NT6X99
in an OPAC LCM (end)

and pressing the Enter key.

If the DIAG

Do

passed

step 7

failed

step 10

-
- 7** Return the line card to service by typing
>RTS
and pressing the Enter key.

If RTS

Do

passed

step 8

failed

step 10

-
- 8** Send any faulty cards for repair according to local procedure.

- 9** Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 11.

- 10** Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.

- 11** You have successfully completed this procedure.

NT6X99 in an OPM

Application

Use this procedure to replace the following card in an OPM.


PEC	Suffixes	Name
NT6X99	AA	

Common procedures

The common replacing a line card procedure is referenced in this procedure.

Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

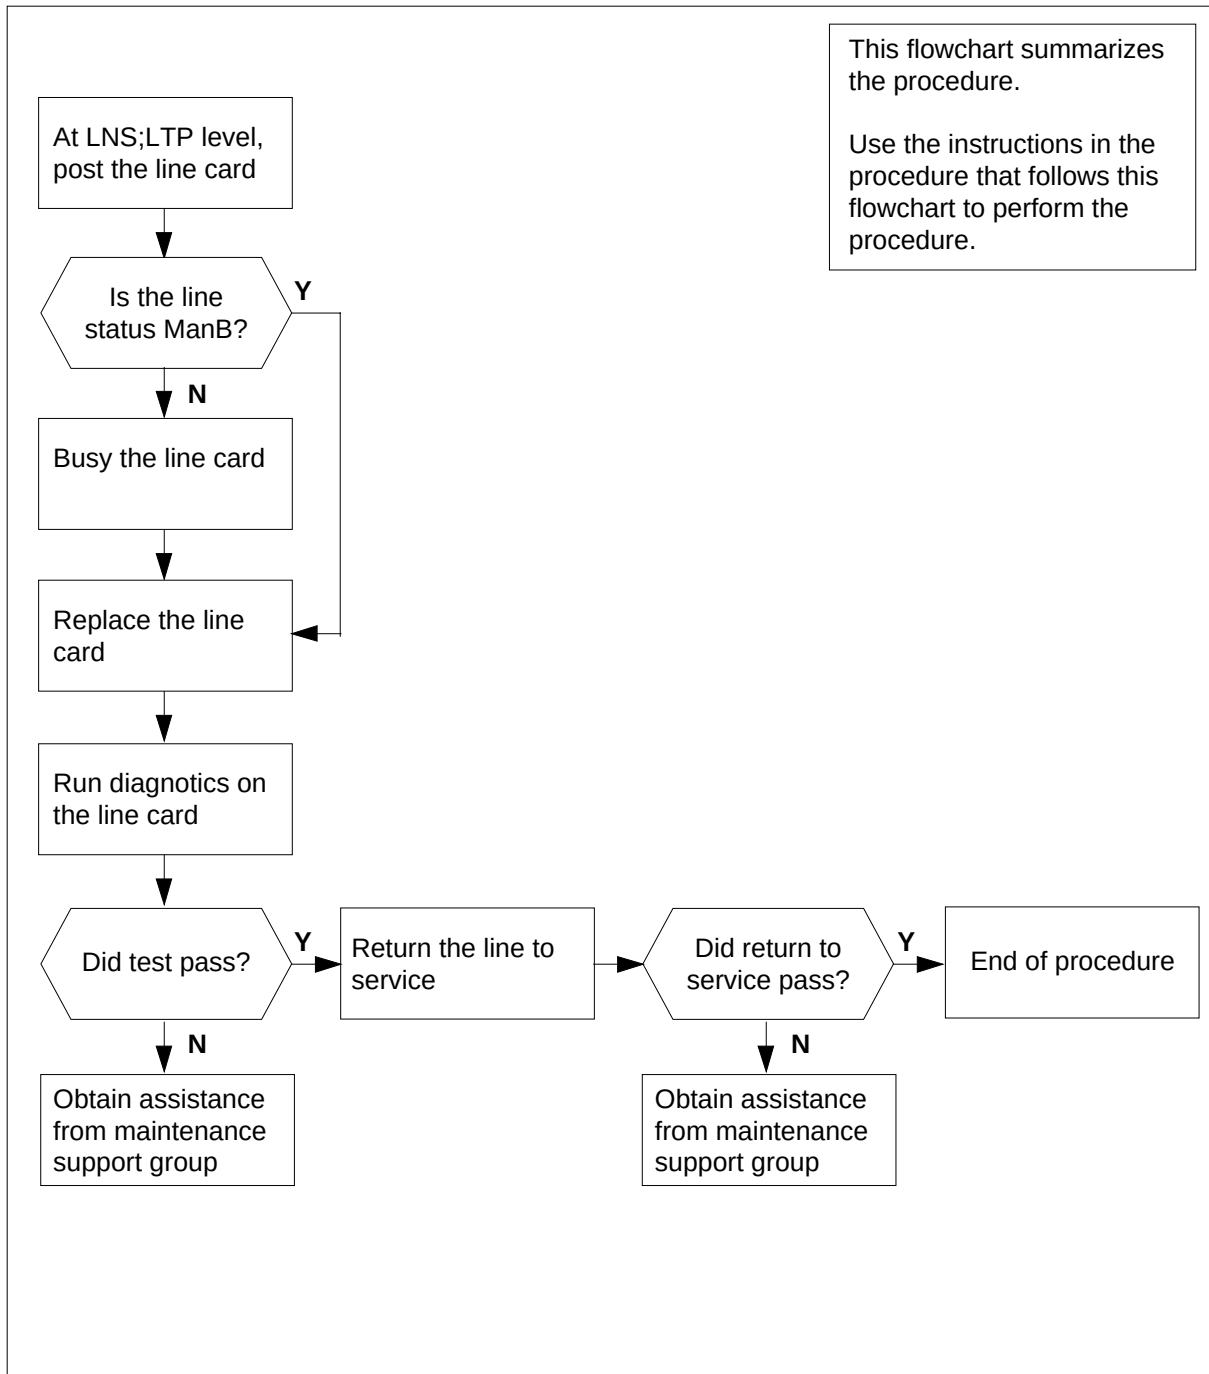NT6X99
in an OPM (continued)**Summary of card replacement procedure for an NT6X99 card in an OPM**

NT6X99 in an OPM (continued)

Replacing an NT6X99 card in an OPM

At your Current Location

- 1 Obtain a replacement card. Ensure that the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP display

- 2 Access the LTP level of the MAP and post the line associated with the card to be replaced by typing

>MAPCI;MTC;LNS;LTP;POST L site lcm lsg ckt

and pressing the Enter key.

where

site

is the name of the site where the OPM is located

lcm

is the number of the OPM with the faulty card

lsg

is the number of the line subgroup with the faulty card

ckt

is the number of the circuit associated with the faulty card

Example of a MAP Response:

```
LCC PTY RNG . . . . .LEN . . . . .DN STA F S LTA TE RESULT
1FR          REM1 00 0 03 03 IBERT
```

- 3 Check the status of the posted line.

If the line status is	Do
manual busy (MB)	step 5
not MB	step 4

- 4 Busy the line by typing

>BSY

and pressing the Enter key.

- 5 Go to the common replacing a line card procedure in this document. When you have completed the procedure, return to this step.

NT6X99
in an OPM (end)

At the MAP display

- 6** Test the line card just replaced by typing

>DIAG

and pressing the Enter key.

If the DIAG	Do
passed	step 7
failed	step 10

- 7** Return the line card to service by typing

>RTS

and pressing the Enter key.

If the RTS	Do
passed	step 8
failed	step 10

- 8** Send any faulty cards for repair according to local procedure.

- 9** Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 11.

- 10** Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.

- 11** You have successfully completed this procedure.

NT6X99 in an RLCM

Application

Use this procedure to replace the following card in an RLCM.

PEC	Suffixes	Name
NT6X99	AA	

Common procedures


The common replacing a line card procedure is referenced in this procedure.

Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT6X99 in an RLCM (continued)

Summary of card replacement procedure for an NT6X99 card in an RLCM

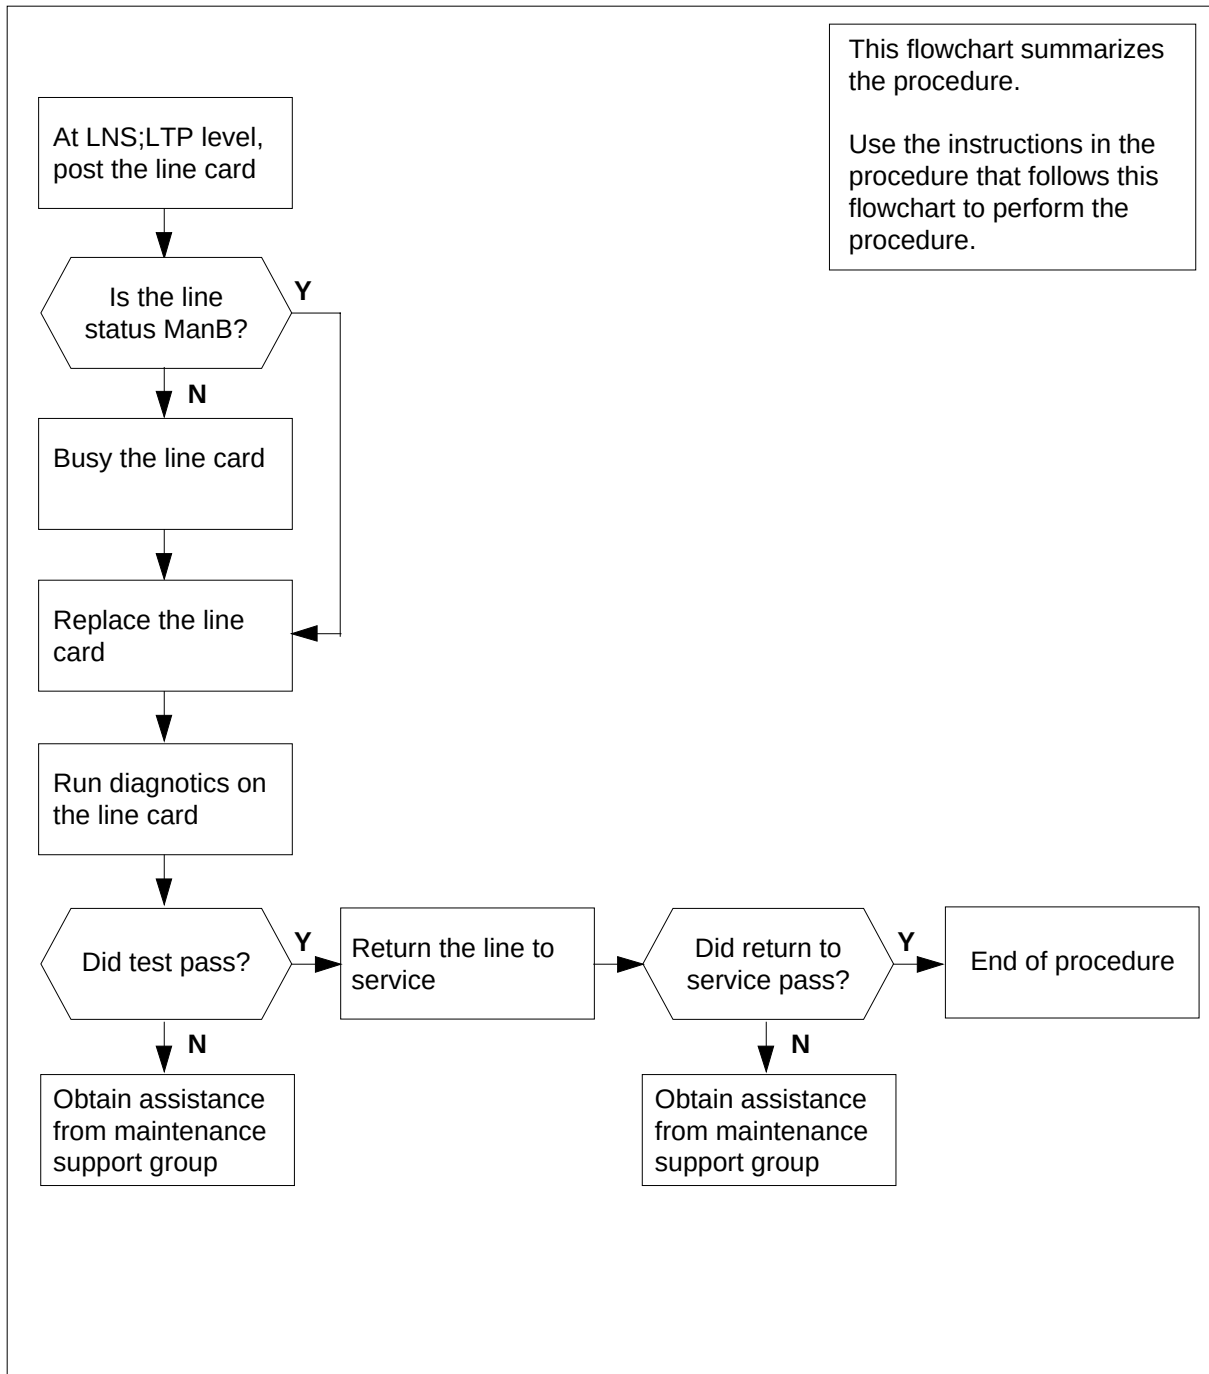

NT6X99 in an RLCM (continued)

Replacing an NT6X99 card in an RLCM

At your current location

- 1 Obtain a replacement card. Ensure that the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP display

- 2 Access the LTP level of the MAP and post the line associated with the card to be replaced by typing

>MAPCI;MTC;LNS;LTP;POST L site lcm lsg ckt

and pressing the Enter key.

where

site

is the name of the site where the RLCM is located

lcm

is the number of the RLCM with the faulty card

lsg

is the number of the line subgroup with the faulty card

ckt

is the number of the circuit associated with the faulty card

Example of a MAP display:

```
LCC PTY RNG . . . . .LEN . . . . .DN STA F S LTA TE RESULT
1FR          REM1 00 0 03 03 IBERT MB
```

- 3 Check the status of the posted line.

If the line status is	Do
manual busy (MB)	step 5
not MB	step 4

- 4 Busy the line by typing

>BSY

and pressing the Enter key.

- 5 Go to the common replacing a line card procedure in this document. When you have completed the procedure, return to this point.

NT6X99
in an RLCM (end)

At the MAP display

- 6** Test the line card just replaced by typing
>DIAG
and pressing the Enter key.

If the DIAG	Do
passed	step 7
failed	step 10

- 7** Return the line card to service by typing
>RTS
and pressing the Enter key.

If the RTS	Do
passed	step 8
failed	step 10

- 8** Send any faulty cards for repair according to local procedure.

- 9** Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 11.

- 10** Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.

- 11** You have successfully completed this procedure.

NT6X99 in an RSC LCM

Application

Use this procedure to replace the following card in an RSC LCM.


PEC	Suffix	Name
NT6X99	AA	Datapath bit error rate tester line card (2 slot)

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

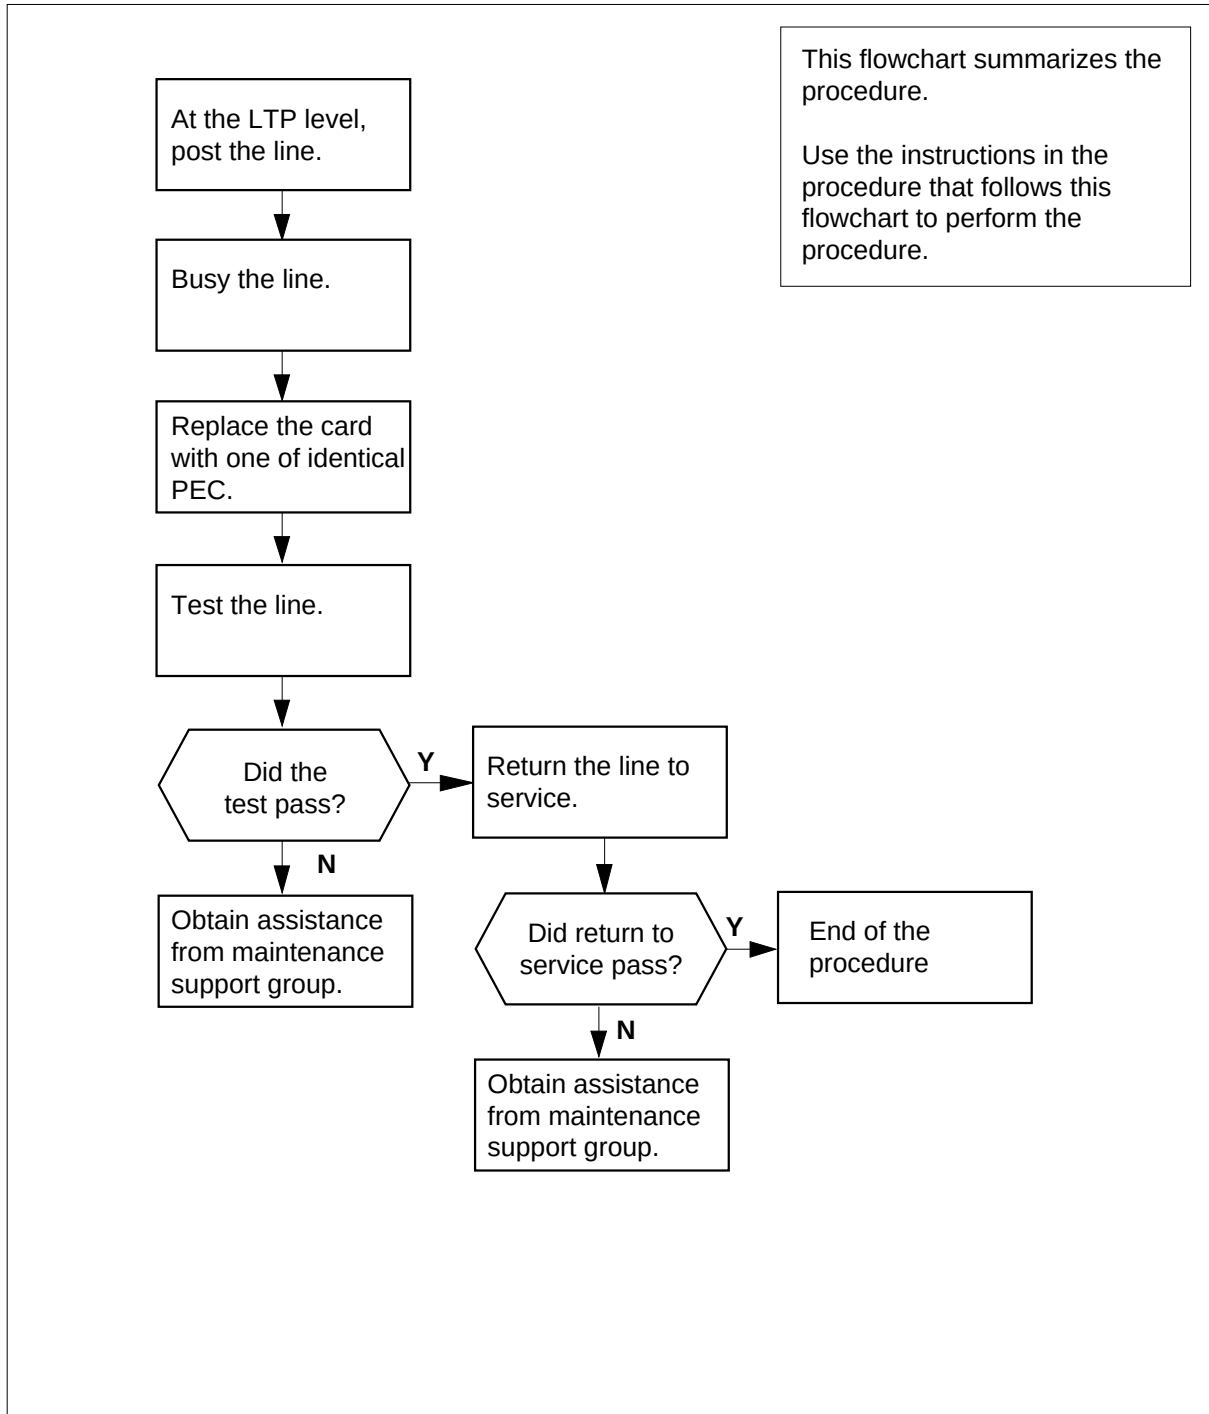NT6X99
in an RSC LCM (continued)**Summary of card replacement procedure for NT6X99 card in an RSC LCM**

NT6X99 in an RSC LCM (continued)

Replacing an NT6X99 in an LCM

- 1 Obtain a replacement card.
Ensure that the replacement card has the same product equipment code (PEC), including suffix, as the card to be removed.

At the MAP terminal

- 2 Access the line test position (LTP) level of the MAP display and post the line associated with the card to be replaced by typing

>MAPCI;MTC;LNS;LTP;POST L site lcm_no lsg_no ckt_no

and pressing the Enter key.

where

site

is the name of the site where the RSC LCM is located

lcm_no

is the number of the RSC LCM with the faulty card

lsg_no

is the number of the line subgroup with the faulty card

ckt_no

is the number of the circuit associated with the faulty card

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post		DELQ		BUSYQ		PREFIX	
2	Post_								
3		LCC PTY RNG....LEN..				DN		STA F S LTA TE	RESULT
4		CKT TYPE FL REM1 00 0 03 03				IBERT		SB	
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

NT6X99
in an RSC LCM (continued)

3 Busy the NT6X99 card by typing

>BSY

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ	BUSYQ	PREFIX				
2	Post_								
3	LCC	PTY	RNG....LEN..	...	DN	STA	F	S	LTA
4	CKT	TYPE	FL	REM1	00	0	03	03	IBERT
5	BSY					MB			
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LC0								
18	Level								

NT6X99 in an RSC LCM (continued)

At the LCE frame

4



WARNING

Card damage—transport

Take these precautions to protect circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wrist strap connected through a 1-megohm resistor, to a suitable grounded object such as a metal workbench or a DMS frame (Northern Telecom Corporate Standard 5028).

Store and transport circuit cards in an ESD protective container.



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the RSC LCM. This protects equipment against damage caused by static electricity.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.



CAUTION

Special tools required

Card shrouds and removal tools are required for removing cards from the line drawers. For descriptions of these tools, refer to the notes at the end of this procedure.

Put on a wrist strap.

NT6X99
in an RSC LCM (continued)

5

**DANGER****Hot materials**

Exercise care when handling a line card. The line feed resistor may be hot.

- a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
- b Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop is at the top, to prevent further travel.
- c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1 inch).
- d While holding the drawer in this position, push the bottom of the drawer nearest the shelf with your left hand, to a position about one 1 cm (.5 inch) to the right.
- e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
- f Ensure a card shroud and line card extractor are available.

Note 1: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with three-inch and/or six-inch cards.

Descriptions of these shrouds are as follows:

- Line card insertion/withdrawal tool (3")
 - QTH56A (apparatus code)
 - A0298291 (common product code)
- Line card insertion/withdrawal tool (6")
 - QTH58A (apparatus code)
 - A0313317 (common product code)

Note 2: Card removal tools are required for removing cards from line drawers. Two sizes are available.

Descriptions of these tools are as follows:

- Card removal tool (3-inch or larger)
 - QTH57A (apparatus code)
 - A0298292 (common product code)
- Large grip tool for 4-inch or larger cards is NT tool ITA9953

- 6 Remove the line card to be replaced by using the following steps:

NT6X99 in an RSC LCM (continued)

- a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
 - c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer to steady it with your left hand.
 - e Pull the extractor away from the drawer and the card will come unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the removed card into ESD container and store per local procedures.
- 7 Replace the faulty card by using the following steps:
 - a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots towards the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand, to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card towards the backplane until it plugs fully into the backplane socket.
- 8 Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
an alarm clearing procedure	step 14
other	step 9
- 9 Test the NT6X99 card by typing
>**DIAG**
and pressing the Enter key.

If DIAG	Do
passed	step 10
failed	step 15
- 10 Return the NT6X99 card to service by typing
>**RTS**

NT6X99
in an RSC LCM (end)

and pressing the Enter key.

If RTS	Do
passed	step 11
failed	step 15

At the MAP display

- 11** Send any faulty cards for repair according to local procedure.
- 12** Record the following items in office records:
 - date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
- 13** Go to step 16.
- 14** Return to the *Alarm Clearing Procedure* that directed you to this card replacement procedure. If necessary, go to the point where the faulty card list was produced, identify the next faulty card on the list, and go to the appropriate replacement procedure in this manual for that card.
- 15** Obtain further assistance in replacing this card by contacting personnel responsible for a higher level of support.
- 16** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT6X99 in an RSC-S (DS-1) Model A LCME

Application

Use this procedure to replace an NT6X99 card in an RSC-S LCME.

PEC	Suffixes	Name
NT6X99	AA	Datapath Bit Error Rate Tester Line Card

Common procedures

None


Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT6X99

in an RSC-S (DS-1) Model A LCME (continued)

Summary of card replacement procedure for an NT6X99 card in RSC-S LCME

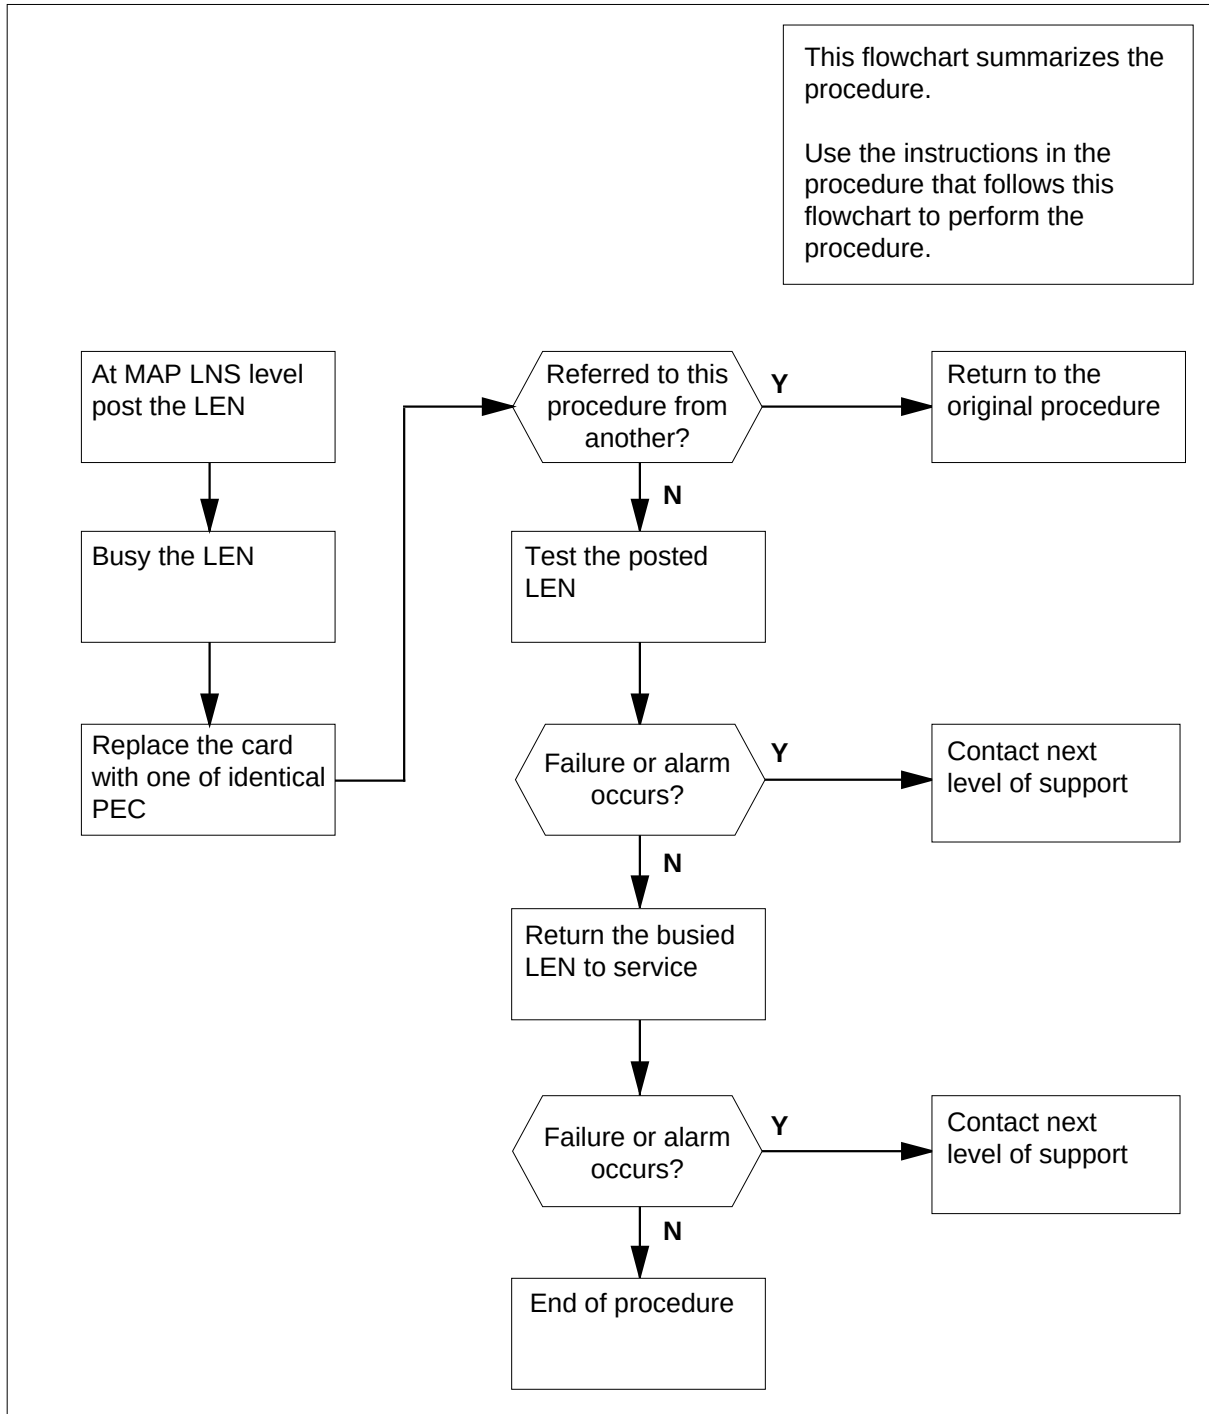

NT6X99

in an RSC-S (DS-1) Model A LCME (continued)

Replacing an NT6X99 card in RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NT6X99 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Post the line equipment number (LEN) from the line test position by typing
**> MAPCI;MTC;LNS;LTP;POST L site lcme_no unit_no lsg_no
ckt_no**

and pressing the Enter key.

where

site

is the site name assigned to the remote location

lcme_no

is the number of the LCME

unit_no

is the number of the LCME unit (0 or 1)

lsg_no

is the number of line subgroup (00-19)

ckt_no

is the circuit number (00-31)

Example of a MAP display:

NT6X99

in an RSC-S (DS-1) Model A LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	EXT	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit								
2	Post_	POST	DELQ	BusyQ	PREFIX				
3									
4		LCC	PTY RNG	LEN	DN	STA FS	LTA TE	RESULT	
5	Bsy_	CKT TYPE	FL Host	00 0 03 03	No DIRN	Idl			
6	RTS_								
7	Diag_								
8									
9	Almstat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix_								
17	LCO_								
18	Level_								

- 4 Busy the LEN posted by typing

>BSY

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit								
2	Post_	POST	DELQ	BusyQ	PREFIX				
3									
4		LCC	PTY RNG	LEN	DN	STA FS	LTA TE	RESULT	
5	Bsy_	CKT TYPE	FL Host	00 0 03 03	No DIRN	MB			
6	RTS_								
7	Diag_								
8									
9	Almstat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix_								
17	LCO_								
18	Level_								

NT6X99 in an RSC-S (DS-1) Model A LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take the following precautions to protect the circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.



WARNING

Static electricity damage

Before removing any cards, put on a wriststrap and connect it to the wriststrap grounding point on the left side of the frame supervisory panel (FSP) of the LCME. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



DANGER

Possible injury from hot materials

Exercise care when handling the line card. The line feed resistor may be hot.

NT6X99

in an RSC-S (DS-1) Model A LCME (continued)

**CAUTION****Special tools required**

Card shrouds and removal tools are required for removing cards from the line drawers. For descriptions of these tools, refer to the following notes.

Put on a wriststrap.

Note: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards, as shown in the following table.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note: Card removal tools are required for removing cards from line drawers. Two sizes are available, as shown in the following table.

Card removal tool for	Apparatus code	Common product code
3—4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 6 Open the line drawer and prepare to remove the faulty card by following these substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in).
 - d While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1.0 cm (0.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.

NT6X99

in an RSC-S (DS-1) Model A LCME (continued)

- f Ensure a card shroud and line card extractor are available.
- 7 Remove the line card to be replaced by following these substeps:
 - a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
 - c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 8 Replace the faulty card by following these substeps:
 - a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 9 Continue this procedure depending on where you were when you were directed to this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 14
other	step 10

- 10 Test the line card just replaced by typing **>DIAG** and pressing the Enter key.

If DIAG	Do
passes	step 11
fails	step 15

- 11 Return the line card to service by typing **>RTS**

NT6X99
in an RSC-S (DS-1) Model A LCME (end)

and pressing the Enter key.

If RTS	Do
passes	step 12
fails	step 15

- 12** Send any faulty cards for repair according to local procedure.
- 13** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 16.
- 14** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 15** Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.
- 16** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT6X99 in an RSC-S (DS-1) Model B LCME

Application

Use this procedure to replace an NT6X99 card in an RSC-S LCME.


PEC	Suffixes	Name
NT6X99	AA	Datapath Bit Error Rate Tester Line Card

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

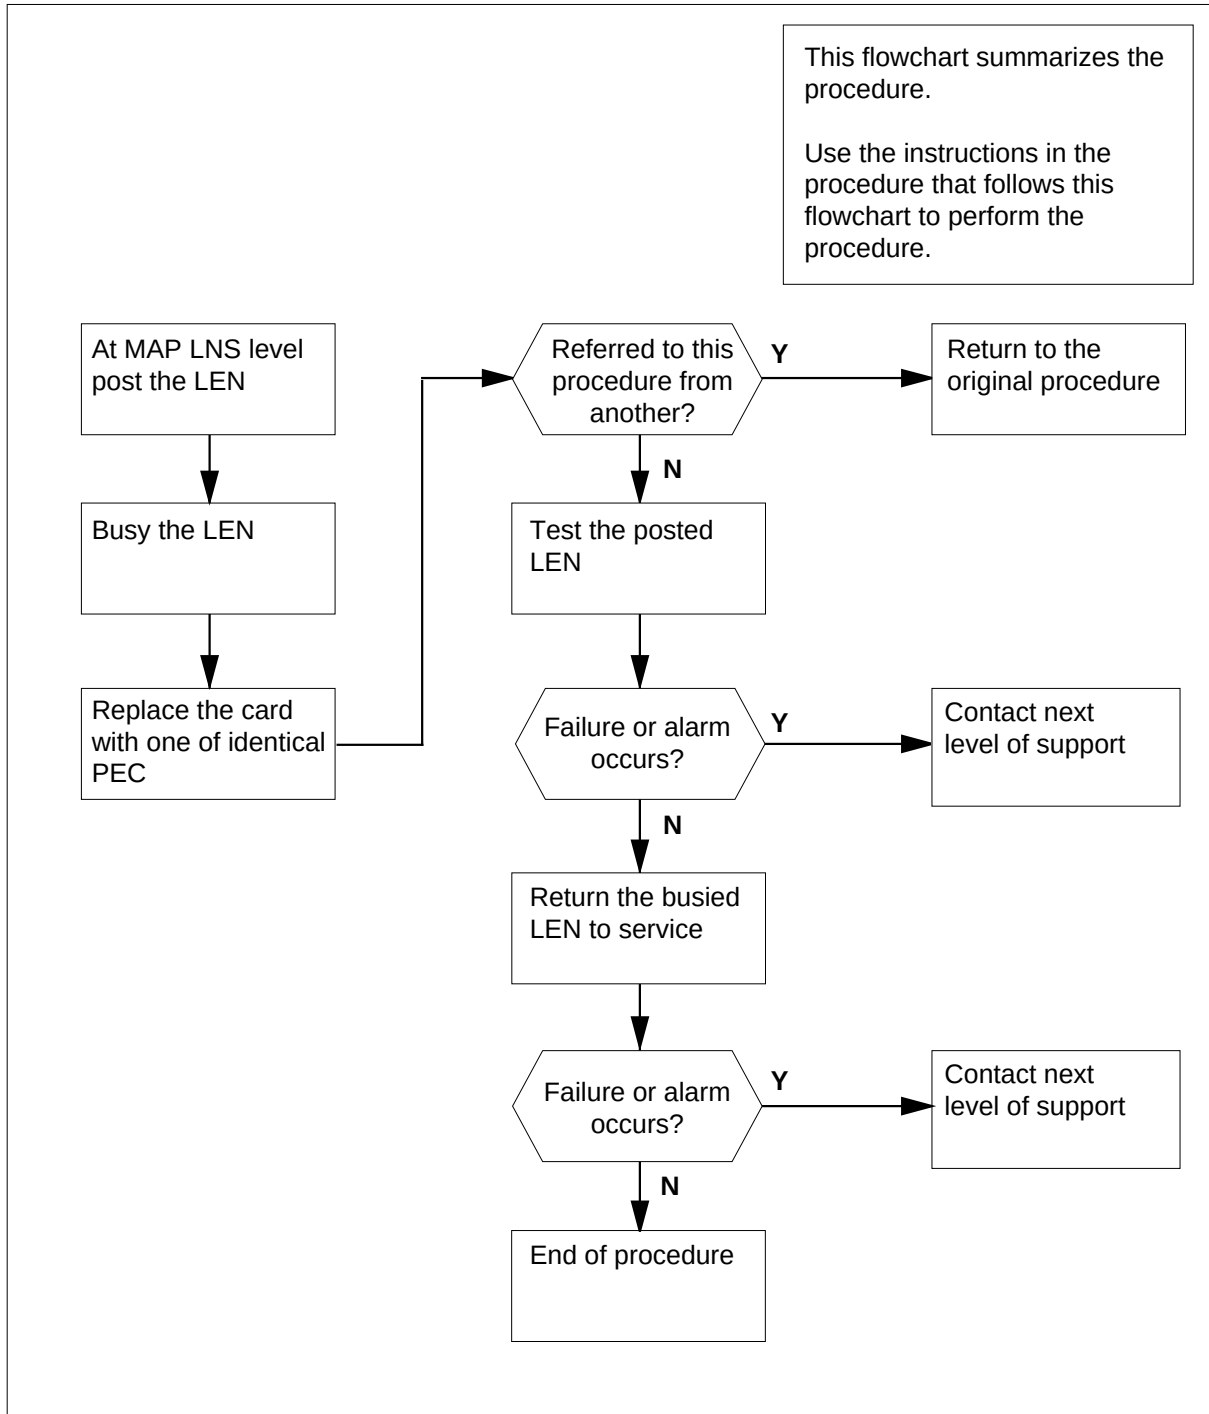NT6X99
in an RSC-S (DS-1) Model B LCME (continued)**Summary of card replacement procedure for an NT6X99 card in RSC-S LCME**

NT6X99

in an RSC-S (DS-1) Model B LCME (continued)

Replacing an NT6X99 card in RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NT6X99 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Post the line equipment number (LEN) from the line test position by typing
**> MAPCI;MTC;LNS;LTP;POST L site lcme_no unit_no lsg_no
ckt_no**

and pressing the Enter key.

where

site

is the site name assigned to the remote location

lcme_no

is the number of the LCME

unit_no

is the number of the LCME unit (0 or 1)

lsg_no

is the number of line subgroup (00—19)

ckt_no

is the circuit number (00—31)

NT6X99

in an RSC-S (DS-1) Model B LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	EXT	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit								
2	Post_								
3		POST	DELQ	BusyQ	PREFIX				
4									
5	Bsy_	LCC	PTY RNG	LEN		DN	STA FS	LTA TE	RESULT
6	RTS_	CKT TYPE	FL Host	00 0 03 03	No	DIRN	Idl		
7	Diag_								
8									
9	Almstat								
10	CKTLLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix_								
17	LCO_								
18	Level_								

- 4 Busy the LEN posted by typing

>BSY

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit								
2	Post_								
3		POST	DELQ	BusyQ	PREFIX				
4									
5	Bsy_	LCC	PTY RNG	LEN		DN	STA FS	LTA TE	RESULT
6	RTS_	CKT TYPE	FL Host	00 0 03 03	No	DIRN	MB		
7	Diag_								
8									
9	Almstat								
10	CKTLLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix_								
17	LCO_								
18	Level_								

NT6X99 in an RSC-S (DS-1) Model B LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take the following precautions to protect circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.



WARNING

Static electricity damage

Before removing any cards, put on a wriststrap and connect it to the wriststrap grounding point on the left side of the modular supervisory panel (MSP) of the LCME. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



DANGER

Possible injury from hot materials

Exercise care when handling the line card. The line feed resistor may be hot.

NT6X99

in an RSC-S (DS-1) Model B LCME (continued)

**CAUTION****Special tools required**

Card shrouds and removal tools are required for removing cards from the line drawers. For descriptions of these tools, refer to the following notes.

Put on a wrist strap.

Note: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards. The following table describes card shrouds.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note: Card removal tools are required for removing cards from line drawers. Two sizes are available. The following table describes these tools.

Card removal tool for	Apparatus code	Common product code
3—4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 6 Open the line drawer and prepare to remove the faulty card by following these substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in).
 - d While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1.0 cm (0.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.

NT6X99

in an RSC-S (DS-1) Model B LCME (continued)

- f Ensure a card shroud and line card extractor are available.
- 7 Remove the line card to be replaced by following these substeps:
 - a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
 - c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 8 Replace the faulty card by following these substeps:
 - a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 9 Continue this procedure depending on where you were when you were directed to this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 14
other	step 10

- 10 Test the line card just replaced by typing **>DIAG** and pressing the Enter key.

If DIAG	Do
passes	step 11
fails	step 15

- 11 Return the line card to service by typing **>RTS**

NT6X99
in an RSC-S (DS-1) Model B LCME (end)

and pressing the Enter key.

If RTS	Do
passes	step 12
fails	step 15

- 12** Send any faulty cards for repair according to local procedure.
- 13** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 16.
- 14** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 15** Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.
- 16** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT6X99 in a STAR or RLD

Application

Use this procedure to replace the following card in a STAR or remote line drawer (RLD).


PEC	Suffixes	Name
NT6X99	AA	Datapath Bit Error Rate Tester Line Card

Common procedures

The common replacing a line card procedure is referenced in this procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

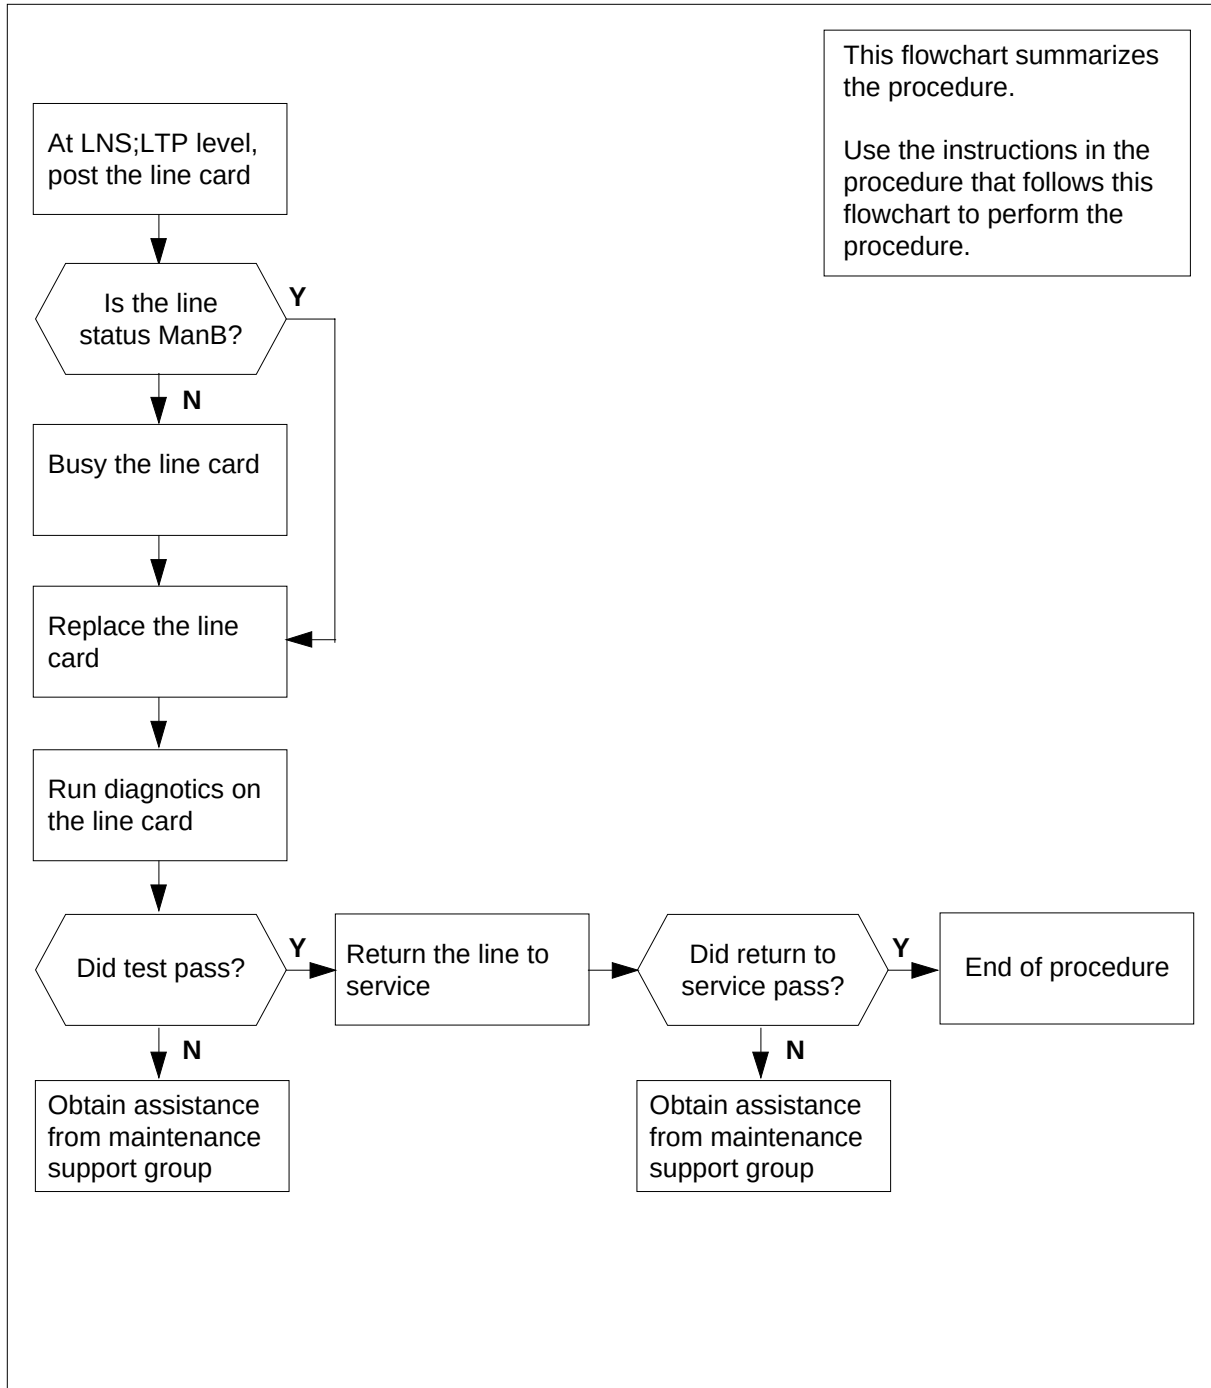NT6X99
in a STAR or RLD (continued)**Summary of card replacement procedure for an NT6X99 card in a STAR or RLD**

NT6X99 in a STAR or RLD (continued)

Replacing an NT6X99 card in a STAR or RLD

At your current location

- 1 Get a replacement card. Make sure that replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP display

- 2 To access the LTP level of the MAP and post the line associated with the card to be replaced, type

>MAPCI;MTC;LNS;LTP;POST L site frame unit lsg ckt

and press the Enter key.

where

site

is the name of the site where the STAR is located

frame

is the frame number of the STAR with the faulty card (0 to 511)

unit

is 0 for the STAR

lsg

is the number of the line subgroup with the faulty card (0 to 35)

ckt

is the number of the circuit associated with the faulty card (0 to 31)

Example of a MAP display:

```
LCC PTY RNG . . . . .LEN . . . . .DN STA F S LTA TE RESULT
RES          REM1 00 0 03 03 IBERT MB
```

- 3 Check the status of the posted line.

If the line status is	Do
manual busy (MB)	step 5
not MB	step 4

- 4 To busy the line, type

>BSY

and press the Enter key.

- 5 Go to the common replacing a line card procedure in this document. When you have completed the procedure, return to this point.

NT6X99
in a STAR or RLD (end)

At the MAP display

- 6** To test the line card just replaced, type
>DIAG
and press the Enter key.

If the DIAG	Do
passes	step 7
fails	step 10

- 7** To return the line card to service, type
>RTS
and press the Enter key.

If the RTS	Do
passes	step 8
fails	step 10

- 8** Send any faulty cards for repair according to local procedure.

- 9** Record the following items in office records:

- date the card was replaced
- serial number of the card
- indications that prompted replacement of the card

Go to step 11.

- 10** Get additional help replacing this card by contacting the personnel responsible for a higher level of support.

- 11** You have correctly completed this procedure.

NT7X05 in an RSC RCC/RCC2

Application

Use this procedure to replace the following card in an RSC RCC.

Note: This procedure is used to replace a card in an RCC or an RCC2. In this procedure the term RCC refers to both the RCC in an RSC frame, NT6X10, and an RCC2 in an RSCE cabinet, NTMX89.

PEC	Suffixes	Name
NT7X05	AA	Peripheral/Remote Loader-16 (PRL)

Common procedures


None

Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT7X05 in an RSC RCC/RCC2 (continued)

Summary of card replacement procedure for an NT7X05 card in an RSC RCC

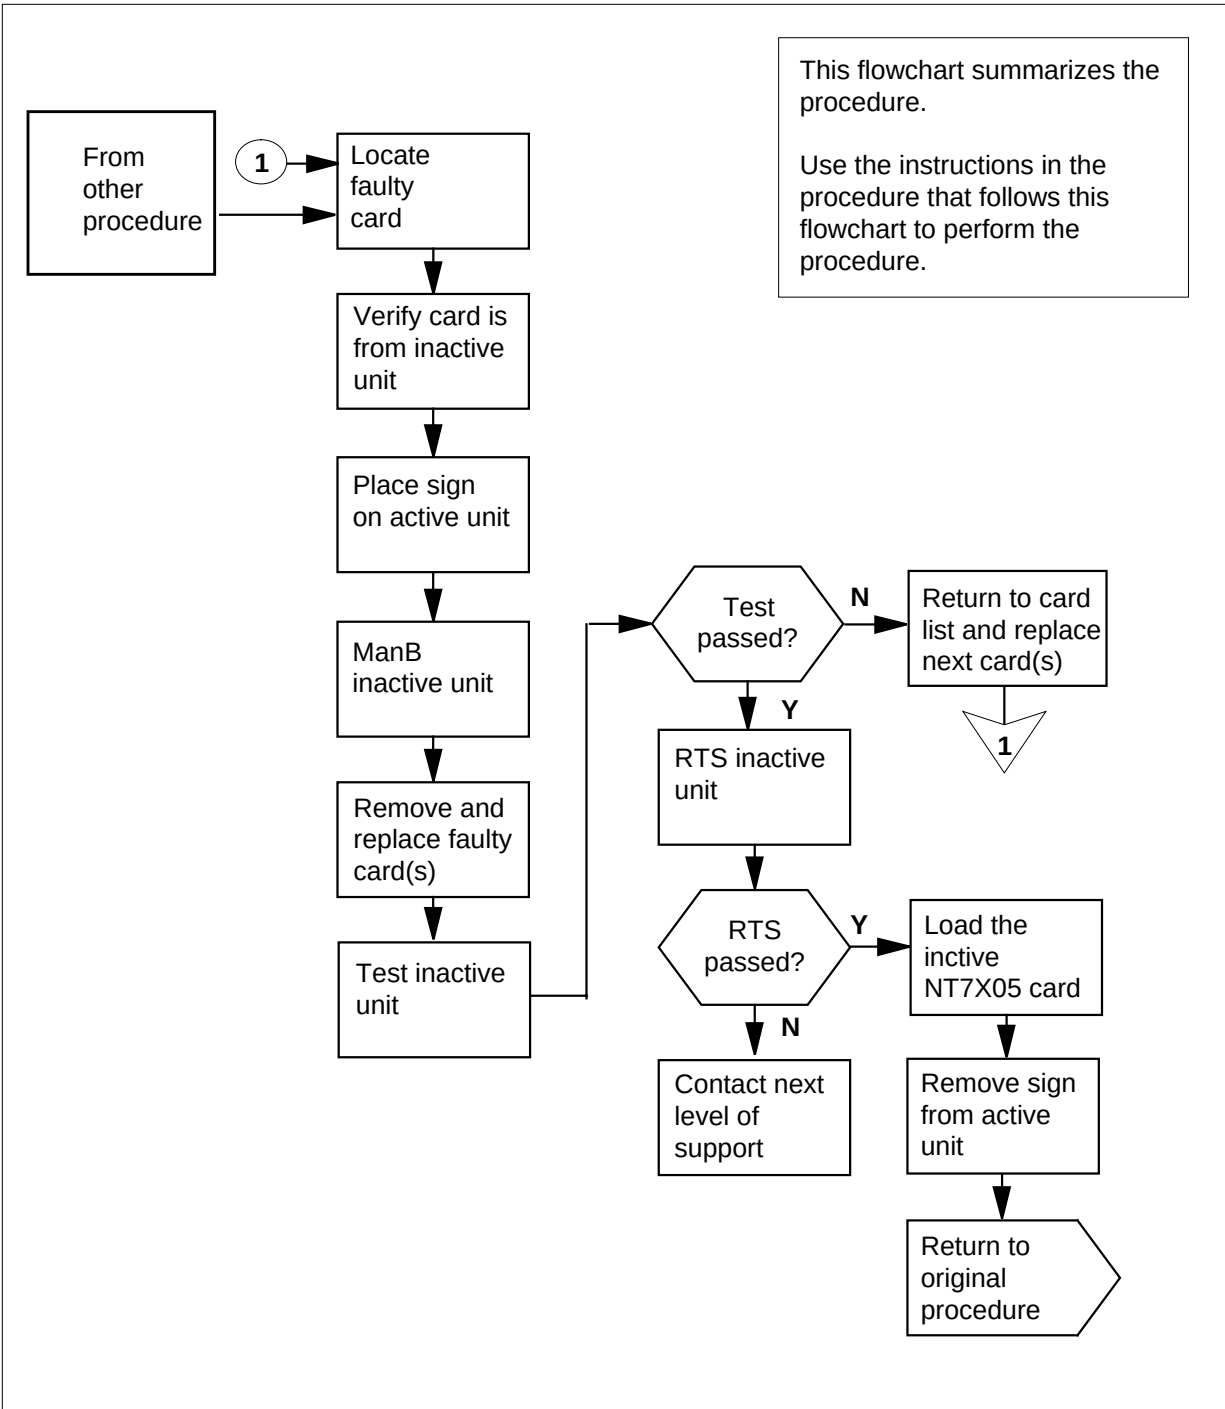

NT7X05 in an RSC RCC/RCC2 (continued)

Replacing an NT7X05 card in an RSC RCC

At your Current Location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure to verify or accept cards, or were directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCC ensure the unit where you are replacing the card is **INACTIVE** and the mate unit is **ACTIVE** by observing the **INSV** and **ACTIVE** LEDs on each **NTMX77** card.

Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC) including suffix, as the card to be removed.

At the MAP display

- 3 Access the PM level and post the RCC by typing
>MAPCI;MTC;PM;POST RCC rcc_no
and pressing the Enter key.
where
rcc_no
is the number of the RCC to be busied
Example of a MAP display:

NT7X05
in an RSC RCC/RCC2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1RCC	.	.	.	.	.
RCC			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	2	0	2	25	
2 Post_	RCC		0	0	0	0	1	1	
3 ListSet									
4	RCC		0 ISTb	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:		Inact	ISTb					
6 TST_	Unit1:		Act	InSv					
7 BSY_									
8 RTS_									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16 IRLINK									
17 Perform									
18									

- 4 By observing the MAP display, be sure the card to be removed is on the inactive unit.

At the RCE frame

- 5 Put a sign on the active unit bearing the words *Active unit—Do not touch*.

At the MAP display

- 6 Busy the inactive RCC unit by typing
>BSY INACTIVE
and pressing the Enter key.

NT7X05 in an RSC RCC/RCC2 (continued)

At the RCE frame

7



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the RCC. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage


Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


8 Remove the NT7X05 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

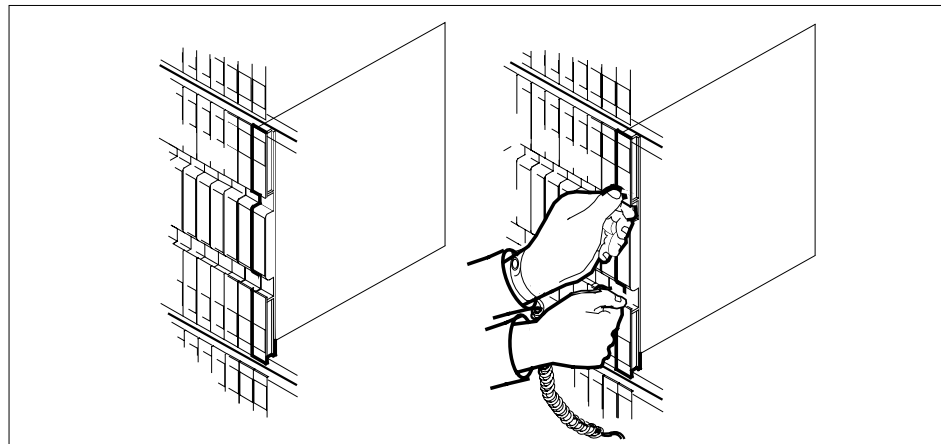


b Open the locking levers on the card to be replaced and gently pull the card towards you until it clears the shelf.

NT7X05
in an RSC RCC/RCC2 (continued)

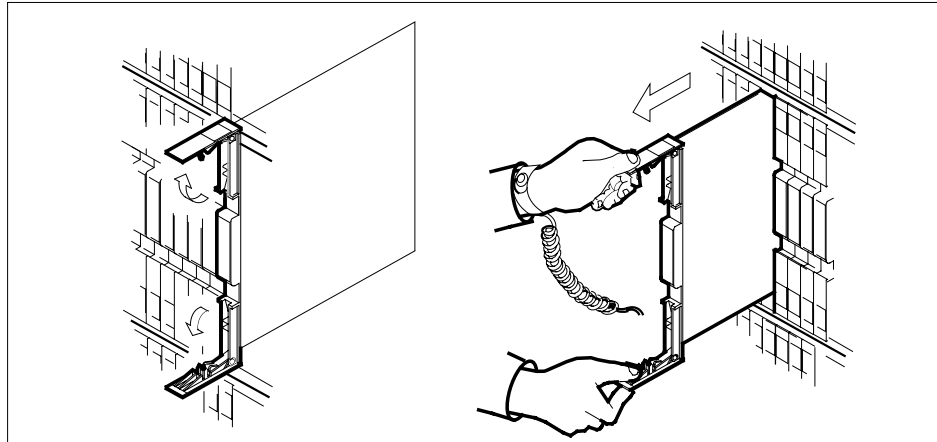


- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.
- 9** Open the locking levers on the replacement card.
- a Align the card with the slots in the shelf and gently slide the card into the shelf.

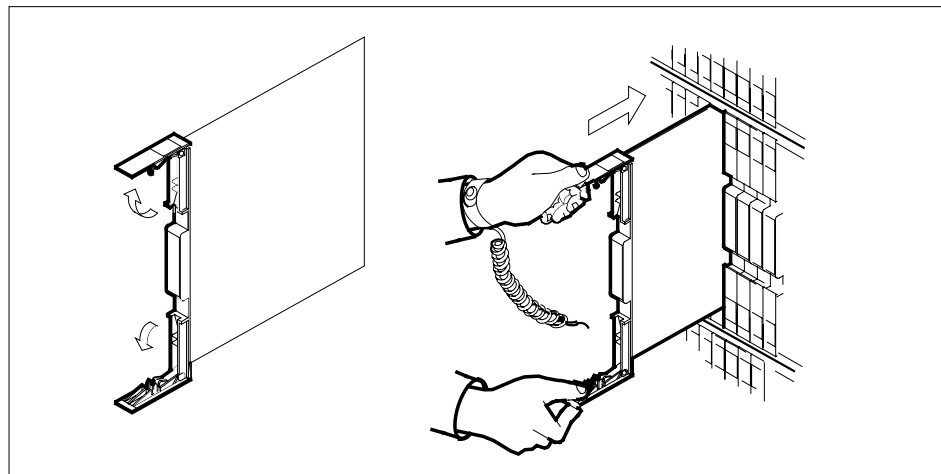

- 10** Seat and lock the card.
- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b Close the locking levers.

NT7X05 in an RSC RCC/RCC2 (continued)

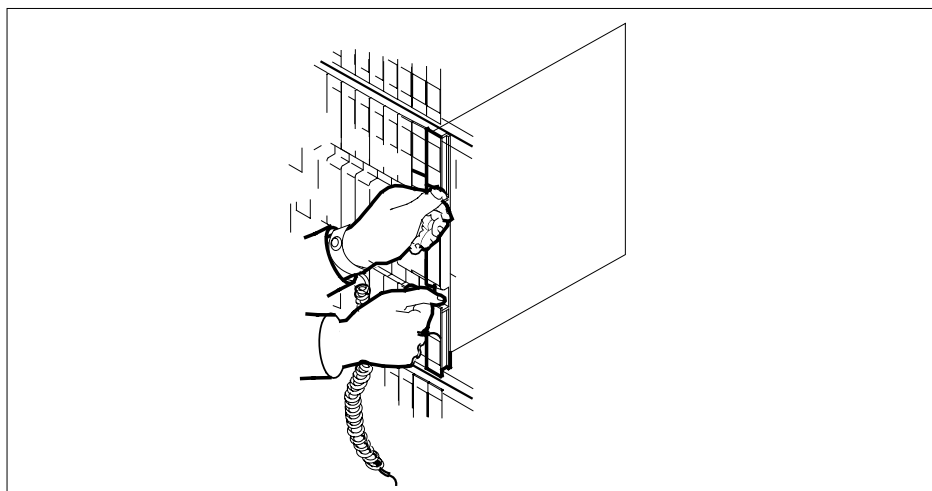

At the MAP display

- 11** Return the inactive RCC unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the RCC unit (0 or 1) busied in step 6

If the RTS	Do

passed	step 12

failed	step 15

-
- 12** Load the inactive NT7X05 card by typing

>LOADPM INACTIVE CC XPMSTOR [file_name]

and pressing the Enter key.

where

file_name

is the name of the file datafilled in field, LOAD, of the inventory table.

If load	Do

passed	step 13

failed	step 15

NT7X05
in an RSC RCC/RCC2 (end)

- 13** Send any faulty cards for repair according to local procedure. Remove the sign from the active unit.
- 14** Record the following items in office records:
 - date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the cardGo to Step 16
- 15** Obtain further assistance in replacing this card by contacting personnel responsible for higher level of support.
- 16** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT7X05 in an RSC-S (DS-1) Model A RCC2

Application

Use this procedure to replace the following cards in an RSC-RCC2.

PEC	Suffixes	Name
NT7X05	AA	Peripheral/Remote Loader-16
Note: NT7X05 functionality is supported only when the RCC2 is provisioned with the NTMX77 Unified Processor (UP). NT7X05 functionality is <i>not</i> supported when the RCC2 is provisioned with the optional NTAX74 Cellular Access Processor (CAP) instead of the NTMX77 UP.		

Common procedures

None


Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT7X05

in an RSC-S (DS-1) Model A RCC2 (continued)

Summary of card replacement procedure for an NT7X05 card in an RSC-S RCC2

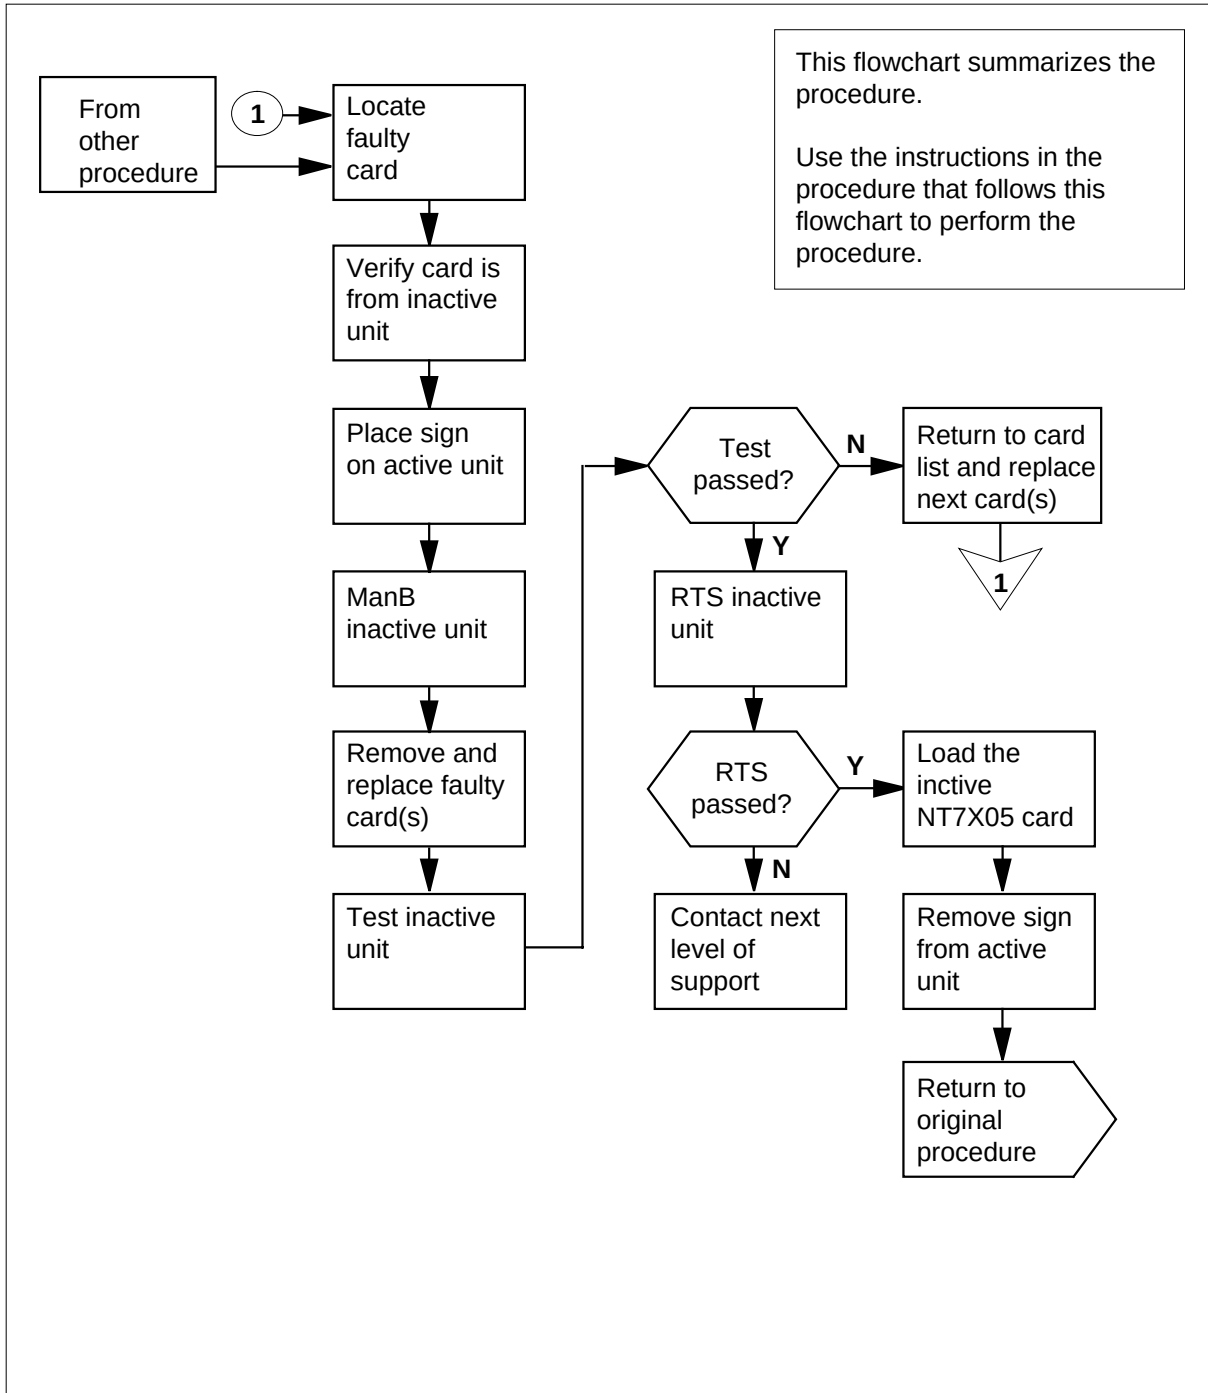

NT7X05 in an RSC-S (DS-1) Model A RCC2 (continued)

Replacing a/an NT7X05 in RSC-S RCC2

At your current location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure to verify or accept cards, or were directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCC2 ensure the unit where you are replacing the card is **INACTIVE** and the mate unit is **ACTIVE** by observing the **INSV** and **ACTIVE** LEDs on each **NTMX77** card.

Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC) including suffix, as the card to be removed.

At the MAP display

- 3 Access the PM level and post the RCC2 by typing
>MAPCI;MTC;PM;POST RCC2 rcc2_no
and pressing the Enter key.
where
rcc2_no
is the number of the RCC2 to be busied
Example of a MAP display:

NT7X05

in an RSC-S (DS-1) Model A RCC2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1RCC2	.	.	.	.	.
RCC2			SysB	ManB	OffL		CBsy	ISTb	InSv
0 Quit	PM		0	0	2		0	2	25
2 Post_	RCC2		0	0	0		0	1	1
3 ListSet									
4	RCC2		0 ISTb	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:		Inact	ISTb					
6 TST_	Unit1:		Act	InSv					
7 BSY_									
8 RTS_									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16 IRLINK									
17 Perform									
18									

- 4 By observing the MAP display, be sure the card to be removed is on the inactive unit.

If the faulty card is on an	Do
ACTIVE unit	step 5
INACTIVE unit	step 9

- 5 Switch the processing activity to the inactive unit by typing
>SWACT
 and pressing the Enter key.

If SWACT	Do
cannot continue at this time	step 6
can continue at this time	step 7

- 6 Do not switch activity of the units. Reject the switch by typing
>NO
 and pressing the Enter key.
 The system discontinues the switch of activity.
 Return to step 5 during a period of low traffic.

NT7X05

in an RSC-S (DS-1) Model A RCC2 (continued)

- 7 Switch the activity of the unit by typing
>YES
and pressing the Enter key.
The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SwAct passed	step 9
SwAct failed	step 8
SwAct refused by SwAct controller	step 8

- 8 Return to the *Alarm Clearing Procedure*, to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the RCE frame

- 9 Put a sign on the active unit bearing the words *Active unit—Do not touch*.

At the MAP display

- 10 Busy the inactive RCC2 unit by typing
>BSY INACTIVE
and pressing the Enter key.

NT7X05 in an RSC-S (DS-1) Model A RCC2 (continued)

At the RCE frame

11



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the RCC2. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.

12

Remove the NT7X05 card as shown in the following figures.


- a Locate the card to be removed on the appropriate shelf.

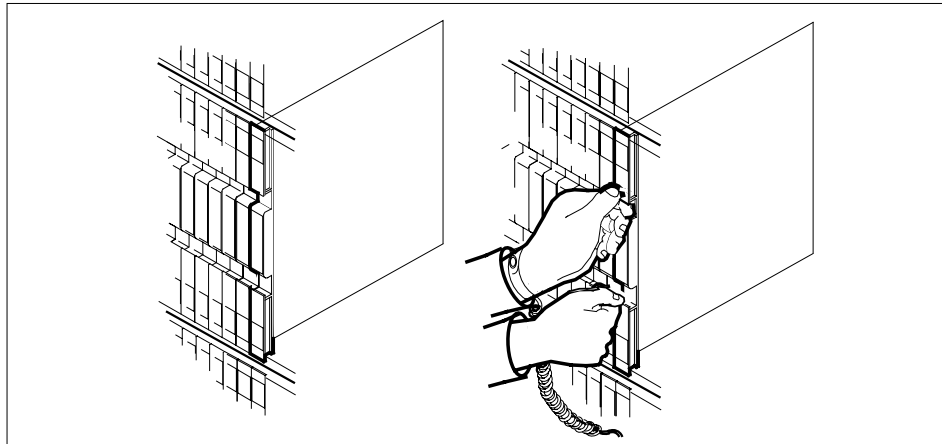

- b Open the locking levers on the card to be replaced and gently pull the card towards you until it clears the shelf.

NT7X05


in an RSC-S (DS-1) Model A RCC2 (continued)

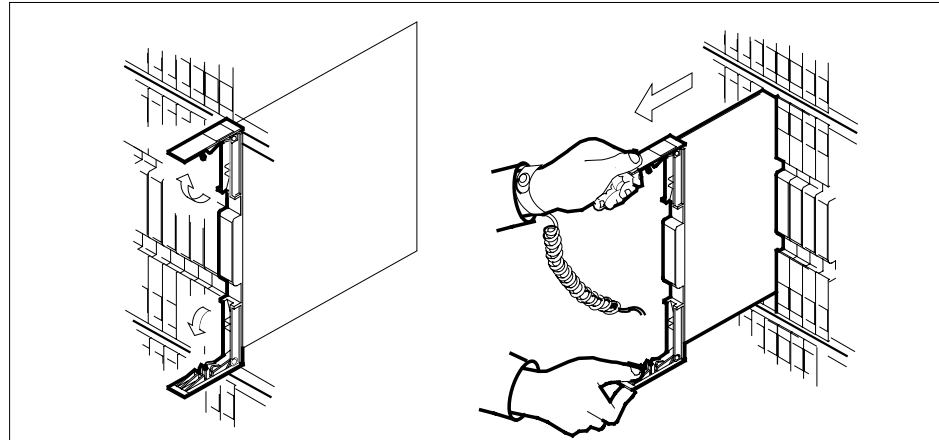

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

13 Open the locking levers on the replacement card.


- a Align the card with the slots in the shelf and gently slide the card into the shelf.

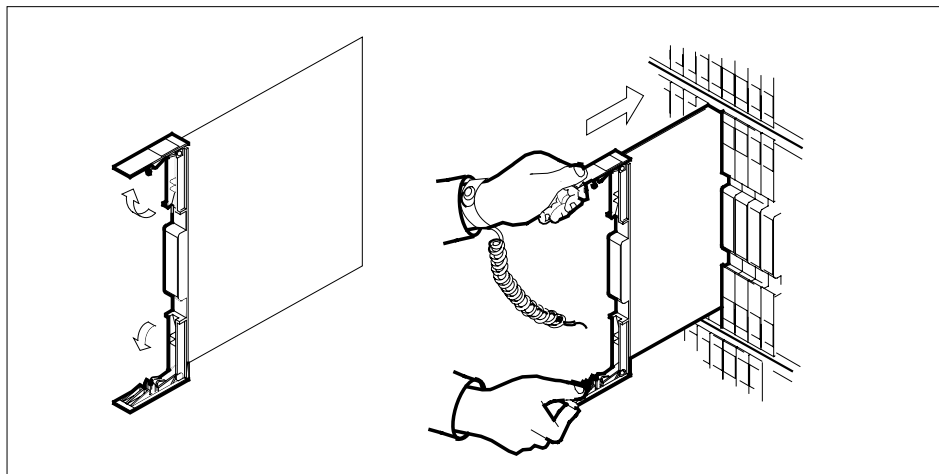

14 Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
- b Close the locking levers.

NT7X05
in an RSC-S (DS-1) Model A RCC2 (continued)

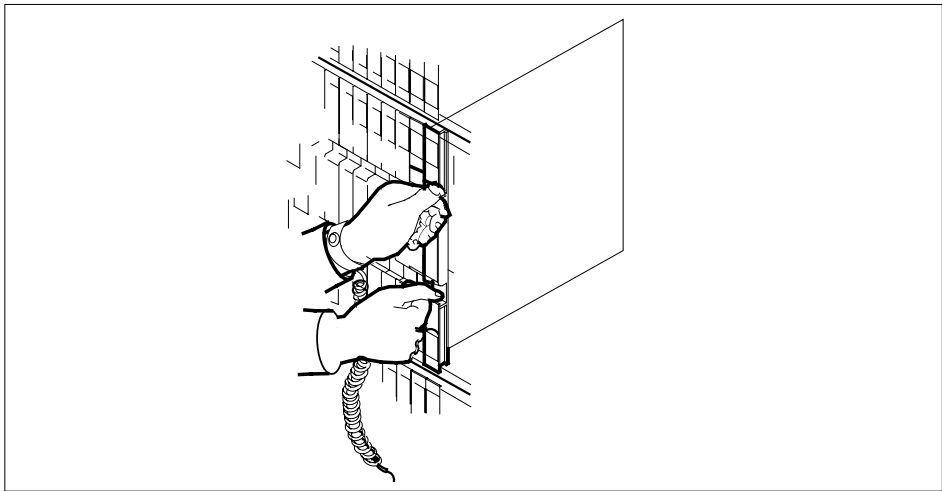

At the MAP display

15 Test the inactive RCC2 unit by typing

>TST UNIT unit_no

and pressing the Enter key.

where

rcc2_unit_no

is the number of the inactive RCC2 unit

Example of a MAP response:

Test Passed

or

Test Failed

If TST	Do
passed	step 16
failed	step 20

16 Return the inactive RCC2 unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

NT7X05 in an RSC-S (DS-1) Model A RCC2 (end)

unit_no

is the number of the RCC2 unit (0 or 1) tested in step 15

If the RTS	Do

passed	step 17
failed	step 20

- 17** Load the inactive NT7X05 card by typing
>XPMSTOR INACTIVE CC load_file _name
and pressing the Enter key.
where

load_file_name

is the name of the file datafilled in field LOAD of the inventory table.
The default load_file_name is the file currently datafilled.

Obtain further assistance in replacing this card by contacting personnel
responsible for higher level of support.

If load	Do

passed	step 18
failed	step 20

- 18** Send any faulty cards for repair according to local procedure.

- 19** Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 21.

- 20** Obtain further assistance in replacing this card by contacting personnel
responsible for higher level of support.

- 21** You have successfully completed this procedure. Return to the maintenance
procedure that directed you to this card replacement procedure and continue
as directed.

NT7X05
in an RSC-S (DS-1) Model B RCC2

Application

Use this procedure to replace the following cards in an RSC-RCC2.

PEC	Suffixes	Name
NT7X05	AA	Peripheral/Remote Loader-16

Common procedures

None


Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT7X05

in an RSC-S (DS-1) Model B RCC2 (continued)

Summary of card replacement procedure for an NT7X05 card in an RSC-S RCC2

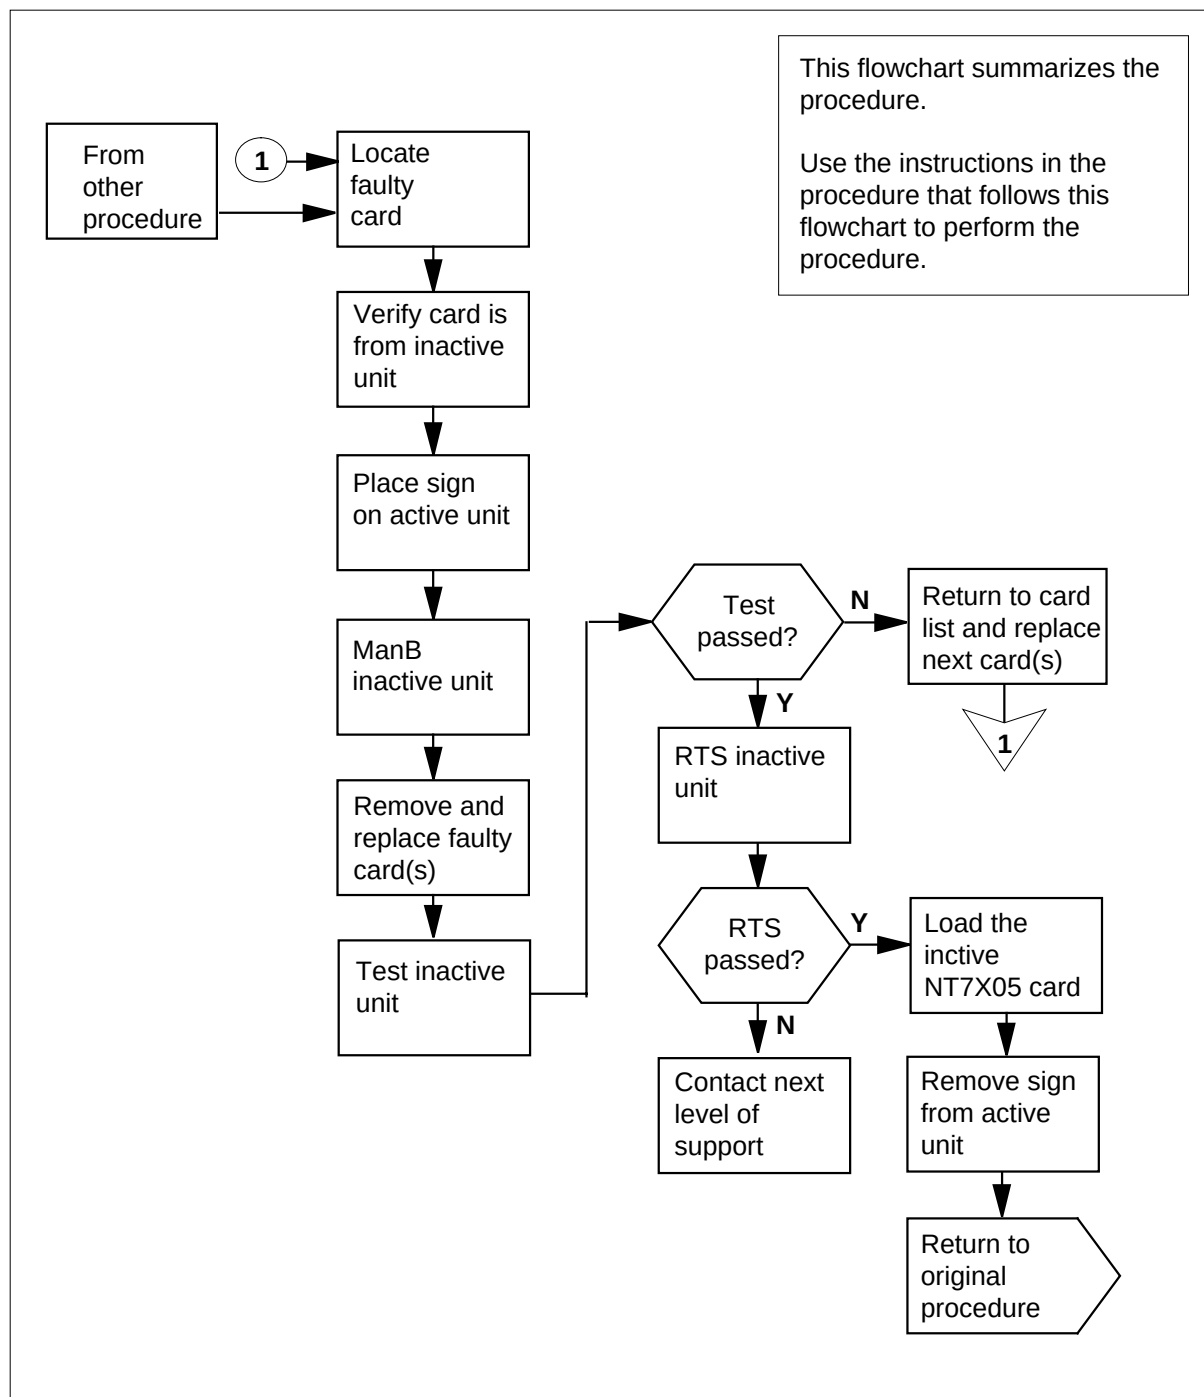

NT7X05 in an RSC-S (DS-1) Model B RCC2 (continued)

Replacing an NT7X05 in an RSC-S RCC2

At your Current Location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure to verify or accept cards, or were directed to this procedure by your maintenance support group.
- 2

**CAUTION****Loss of service**

When replacing a card in the RCC2 ensure the unit where you are replacing the card is INACTIVE and the mate unit is ACTIVE by observing the INSV and ACTIVE LEDs on each NTMX77 card.

Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC) including suffix, as the card to be removed.

At the MAP display

- 3 Access the PM level and post the RCC2 by typing
>MAPCI;MTC;PM;POST RCC2 rcc2_no
and pressing the Enter key.
where
rcc2_no
is the number of the RCC2 to be busied
Example of a MAP display:

NT7X05

in an RSC-S (DS-1) Model B RCC2 (continued)

```

      CM      MS      IOD      Net      PM      CCS      LNS      Trks      Ext      APPL
      .        .        .        .        1RCC2      .        .        .        .        .

RCC2
0 Quit      PM      0      0      2      0      2      25
2 Post_     RCC2    0      0      0      0      1      1
3 ListSet
4           RCC2    0 ISTb Links_00S: CSide 0, PSide 0
5 TRNSL_    Unit0:  Inact ISTb
6 TST_      Unit1:  Act  InSv
7 BSY_
8 RTS_
9 OffL
10 LoadPM_
11 Disp_
12 Next
13
14 QueryPM
15
16 IRLINK
17 Perform
18

```

- 4 By observing the MAP display, be sure the card to be removed is on the inactive unit.

If the faulty card is on an	Do
ACTIVE unit	step 5
INACTIVE unit	step 9

- 5 Switch the processing activity to the inactive unit by typing
>SWACT
 and pressing the Enter key.

If SwAct	Do
cannot continue at this time	step 6
can continue at this time	step 7

- 6 Do not switch activity of the units. Reject the switch by typing
>NO
 and pressing the Enter key.
 The system discontinues the switch of activity.
 Return to step 5 during a period of low traffic.

NT7X05
in an RSC-S (DS-1) Model B RCC2 (continued)

- 7 Switch the activity of the unit by typing
>YES
and pressing the Enter key.
The system runs a pre-SwAct audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SwAct passed	step 9
SwAct failed	step 8
SwAct refused by SwAct controller	step 8

- 8 Return to the *Alarm Clearing Procedure*, to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the RCE frame

- 9 Put a sign on the active unit bearing the words *Active unit—Do not touch*.

At the MAP display

- 10 Busy the inactive RCC2 unit by typing
>BSY INACTIVE
and pressing the Enter key.

NT7X05 in an RSC-S (DS-1) Model B RCC2 (continued)

At the RCE frame

11



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the RCC2. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage


Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


12 Remove the NT7X05 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

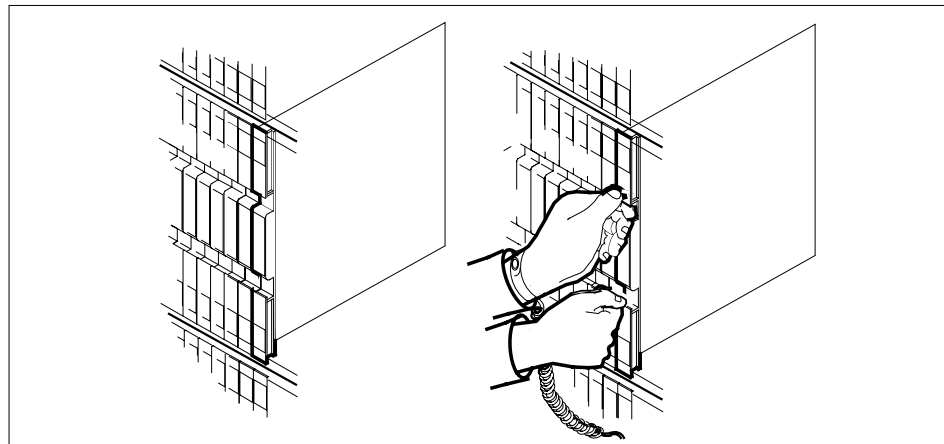

b Open the locking levers on the card to be replaced and gently pull the card towards you until it clears the shelf.


NT7X05
in an RSC-S (DS-1) Model B RCC2 (continued)

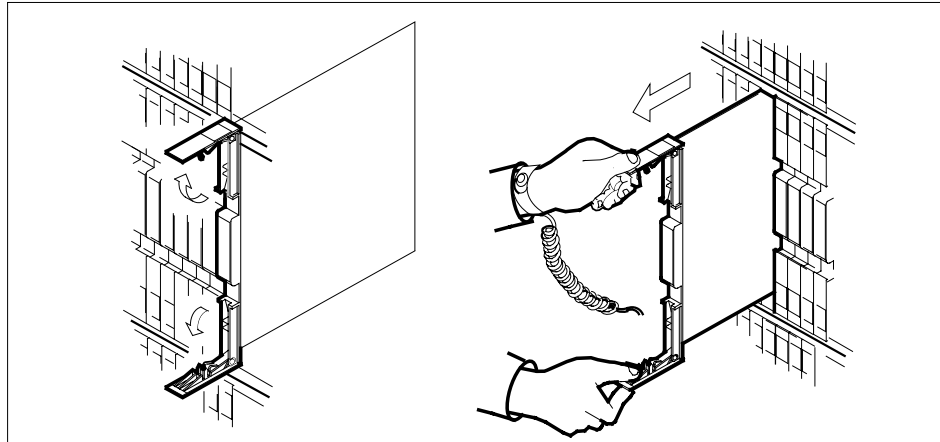

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

13 Open the locking levers on the replacement card.

- a Align the card with the slots in the shelf and gently slide the card into the shelf.

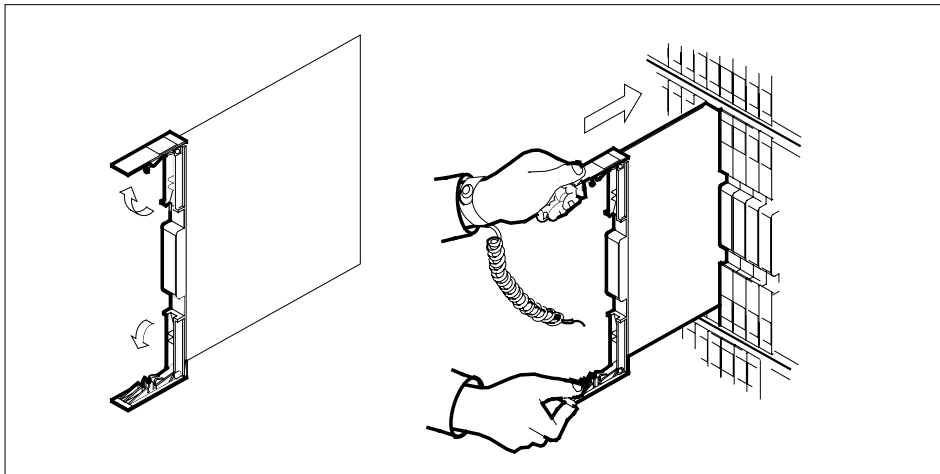


14 Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
- b Close the locking levers.

NT7X05

in an RSC-S (DS-1) Model B RCC2 (continued)

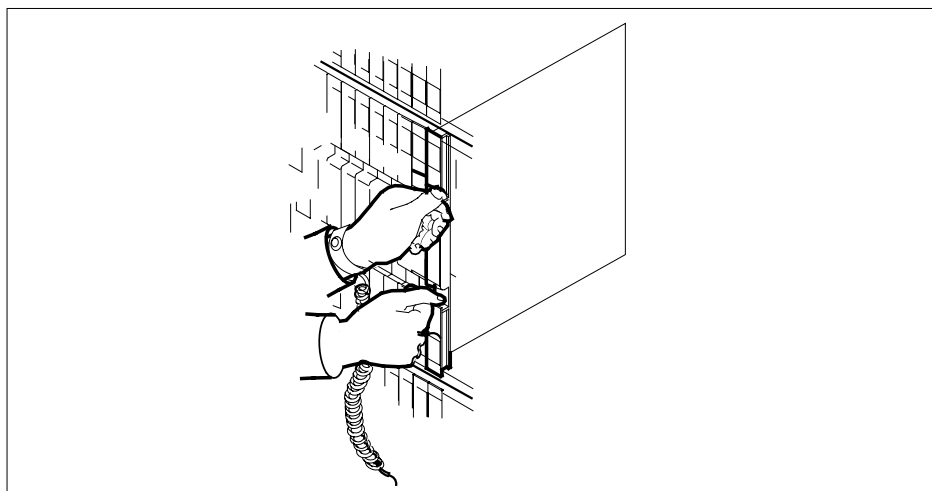

At the MAP display

- 15** Test the inactive RCC2 unit by typing

>TST UNIT unit_no

and pressing the Enter key.

where

rcc2_unit_no

is the number of the inactive RCC2 unit

Example of a MAP response:

Test Passed

or

Test Failed

If TST	Do
passed	step 16
failed	step 20

- 16** Return the inactive RCC2 unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

NT7X05

in an RSC-S (DS-1) Model B RCC2 (end)

unit_no

is the number of the RCC2 unit (0 or 1) tested in step 15

If the RTS	Do
passed	step 17
failed	step 20

- 17** Load the inactive NT7X05 card by typing
>XPMSTOR INACTIVE CC load_file _name
 and pressing the Enter key.

where

load_file_name

is the name of the file datafilled in field LOAD of the inventory table.
 The default load_file_name is the file currently datafilled.

Obtain further assistance in replacing this card by contacting personnel responsible for higher level of support.

If load	Do
passed	step 18
failed	step 20

- 18** Send any faulty cards for repair according to local procedure.

- 19** Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 21.

- 20** Obtain further assistance in replacing this card by contacting personnel responsible for higher level of support.

- 21** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT7X05 in an RSC-S (PCM-30) Model A RCO2

Application

Use this procedure to replace the following card in an RCO2.

PEC	Suffixes	Name
NT7X05	AA	Peripheral/Remote Loader-16
Note: NT7X05 functionality is supported only when the RCO2 is provisioned with the NTMX77 Unified Processor (UP). NT7X05 functionality is <i>not</i> supported when the RCO2 is provisioned with the optional NTAX74 Cellular Access Processor (CAP) instead of the NTMX77 UP.		

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT7X05 in an RSC-S (PCM-30) Model A RCO2 (continued)

Summary of card replacement procedure for an NT7X05 card in an RCO2

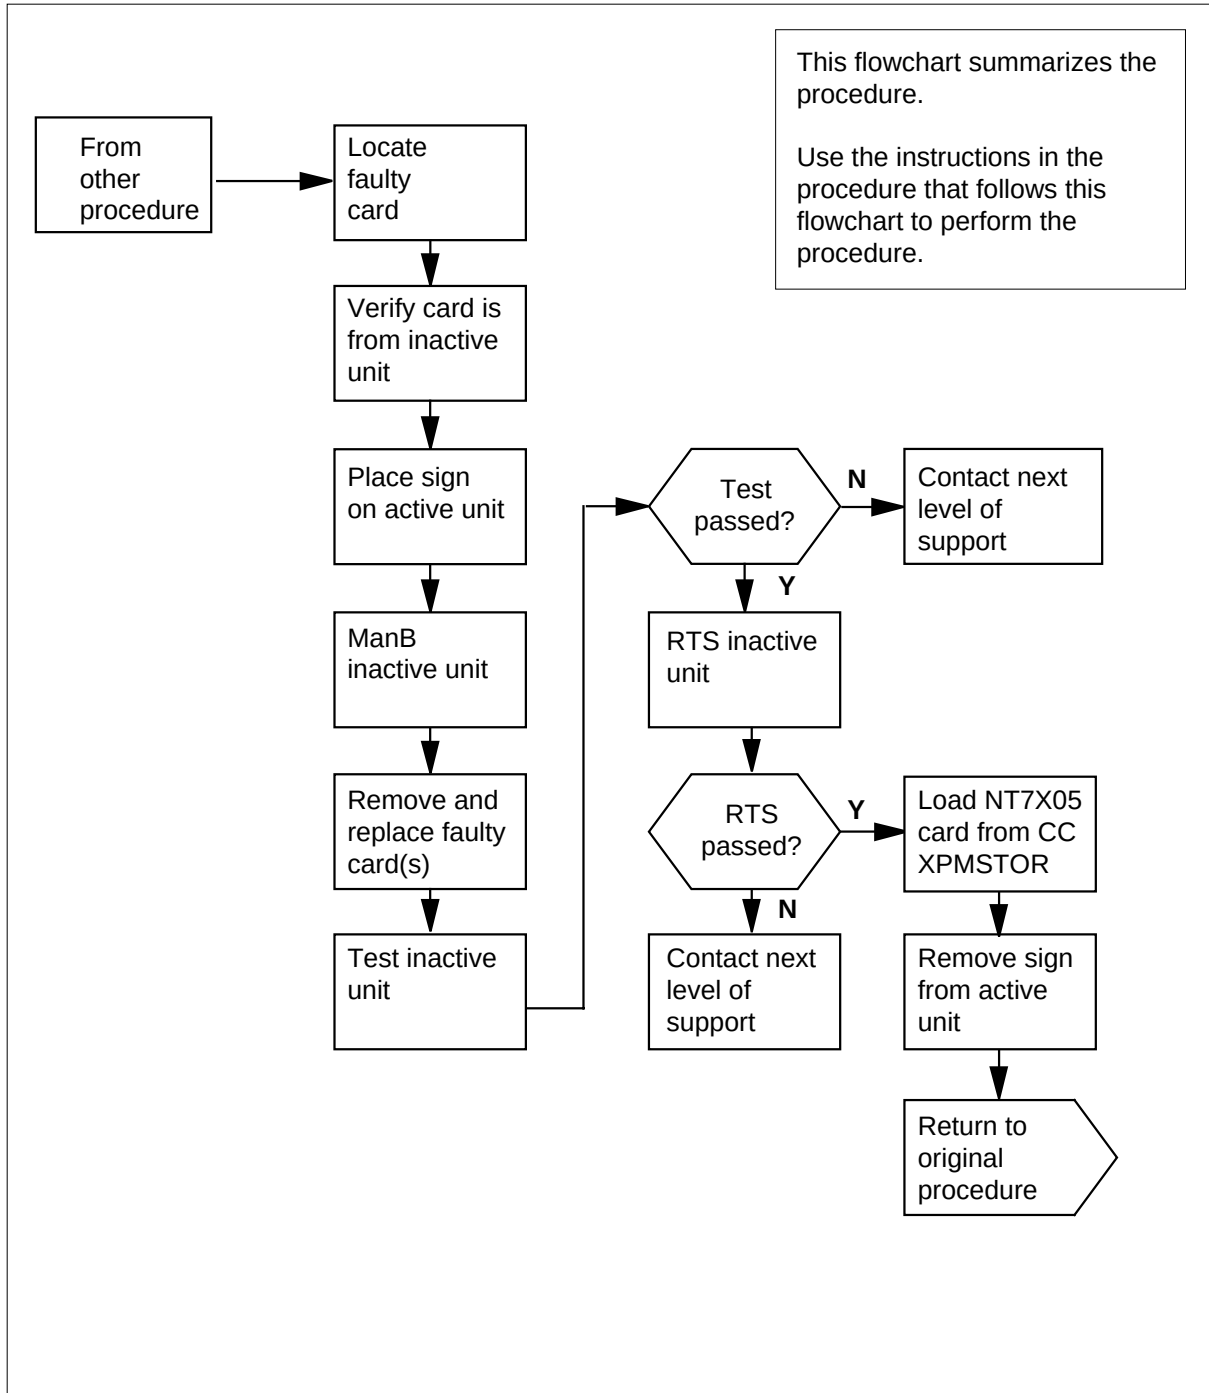

NT7X05 in an RSC-S (PCM-30) Model A RCO2 (continued)

Replacing a/an NT7X05 in RSC-S RCO2

At your current location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure to verify or accept cards, or were directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCO2 ensure the unit where you are replacing the card is **INACTIVE** and the mate unit is **ACTIVE**.

Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC) including suffix, as the card to be removed.

At the MAP display

- 3 Access the PM level and post the RCO2 by typing

>MAPCI;MTC;PM;POST RCO2 rco2_no

and pressing the Enter key.

where

rco2_no

is the number of the RCO2 to be busied

Example of a MAP display:

NT7X05
in an RSC-S (PCM-30) Model A RCO2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1RCO2	.	.	.	.	.
RCO2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	2	0	2	25	
2 Post_	RCO2		0	0	0	0	1	1	
3 ListSet									
4	RCO2		0 ISTb	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:		Inact	ISTb					
6 TST_	Unit1:		Act	InSv					
7 BSY_									
8 RTS_									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16 IRLINK									
17 Perform									
18									

- 4

By observing the MAP display, be sure the card to be removed is on the inactive unit.

If the faulty card is on an	Do
ACTIVE unit	step 5
INACTIVE unit	step 8
- 5

Switch the processing activity to the inactive unit by typing
>SWACT
and pressing the Enter key.
Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.
- 6

Switch the activity of the unit by typing
>YES
and pressing the Enter key.

NT7X05

in an RSC-S (PCM-30) Model A RCO2 (continued)

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 8
SWACT failed	step 7
SWACT failed Reason: XPM SWACTback	step 7
SWACT refused by SWACT controller	step 7

- 7 Return to the *Alarm Clearing Procedure*, to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the frame

- 8 Put a sign on the active unit bearing the words *Active unit—Do not touch*.

At the MAP display

- 9 Busy the inactive RCO2 unit by typing
>BSY INACTIVE
and pressing the Enter key.

NT7X05 in an RSC-S (PCM-30) Model A RCO2 (continued)

At the frame

10



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the RCO2. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage


Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


11 Remove the NT7X05 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

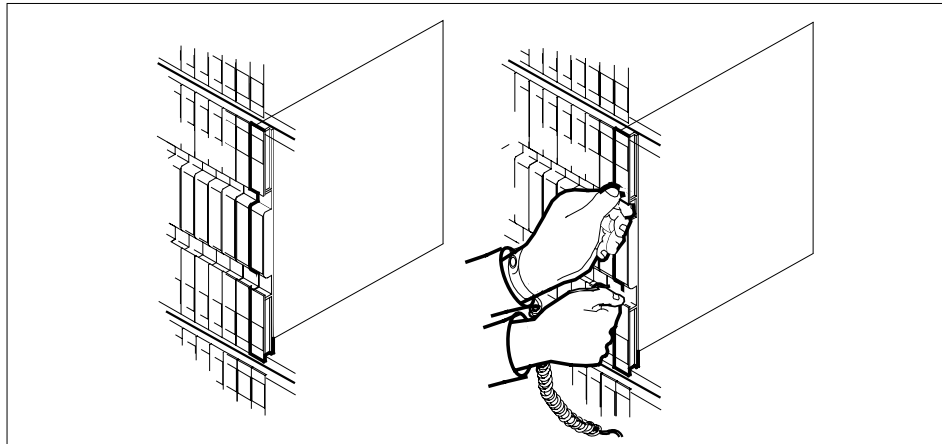

b Open the locking levers on the card to be replaced and gently pull the card towards you until it clears the shelf.


NT7X05 in an RSC-S (PCM-30) Model A RCO2 (continued)

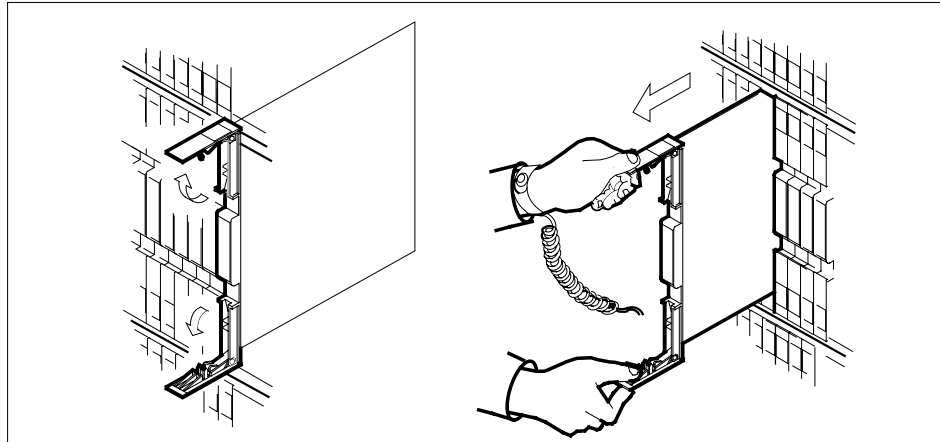

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

12 Open the locking levers on the replacement card.


- a Align the card with the slots in the shelf and gently slide the card into the shelf.

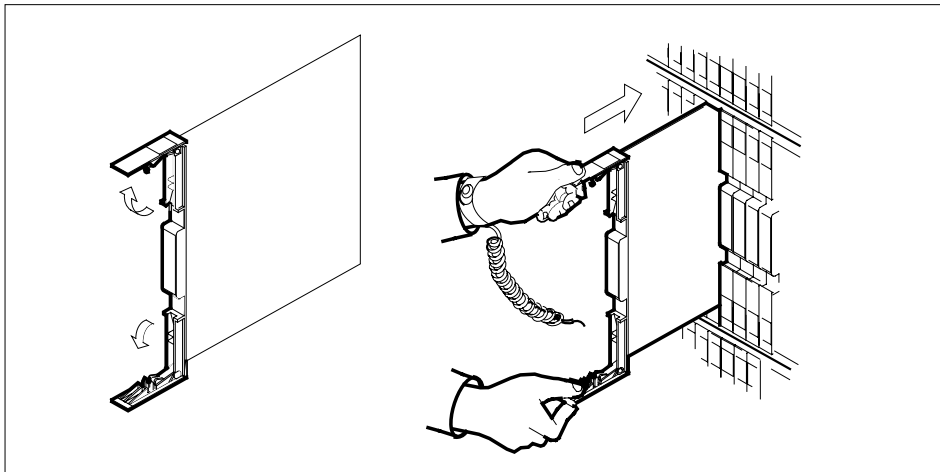

13 Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
- b Close the locking levers.

NT7X05
in an RSC-S (PCM-30) Model A RCO2 (continued)

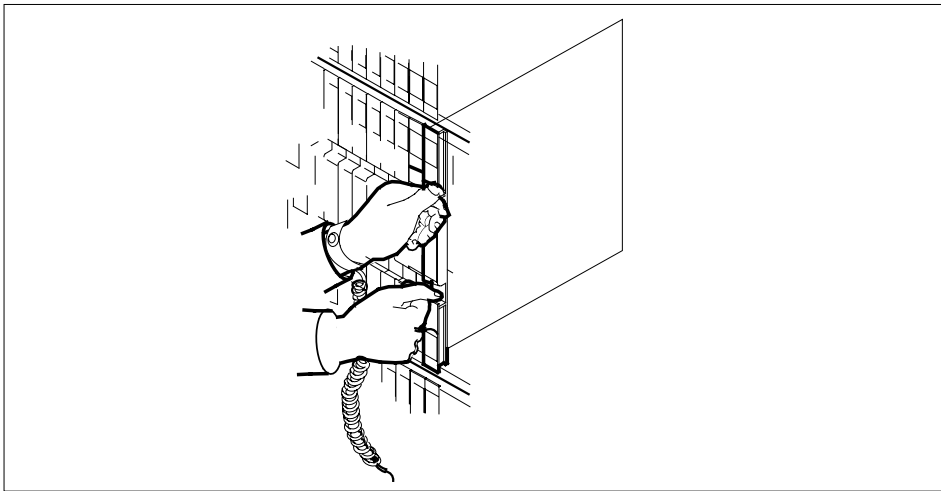

At the MAP display

- 14** Test the inactive RCO2 unit by typing
>TST UNIT RCO2_unit_no
and pressing the Enter key.
where
rco2_unit_no
is the number of the inactive RCO2 unit

Example of a MAP response:
Test Passed

or
Test Failed

If TST	Do
passed	step 15
failed	step 19

- 15** Return the inactive RCO2 unit to service by typing
>RTS UNIT unit_no
and pressing the Enter key.
where

NT7X05

in an RSC-S (PCM-30) Model A RCO2 (end)

unit_no

is the number of the RCO2 unit (0 or 1) tested in step 14

If TST	Do
passed	step 16
failed	step 19

- 16** Load the inactive RCO2 unit by typing
>XPMSTOR INACTIVE CC [load_file_name]
and pressing the Enter key.

where

load_file_name

is the name of the file datafilled in field, LOAD, of the inventory table.

If load	Do
passed	step 17
failed	step 19

- 17** Send any faulty cards for repair according to local procedure.

- 18** Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 20.

- 19** Obtain further assistance in replacing this card by contacting personnel responsible for higher level of support.

- 20** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NT7X05 in an RSC-S (PCM-30) Model B RCO2

Application

Use this procedure to replace the following card in an RCO2.

PEC	Suffixes	Name
NT7X05	AA	Peripheral/Remote Loader-16
Note: NT7X05 functionality is supported only when the RCO2 is provisioned with the NTMX77 Unified Processor (UP). NT7X05 functionality is <i>not</i> supported when the RCO2 is provisioned with the optional NTAX74 Cellular Access Processor (CAP) instead of the NTMX77 UP.		

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT7X05 in an RSC-S (PCM-30) Model B RCO2 (continued)

Summary of card replacement procedure for an NT7X05 card in an RCO2

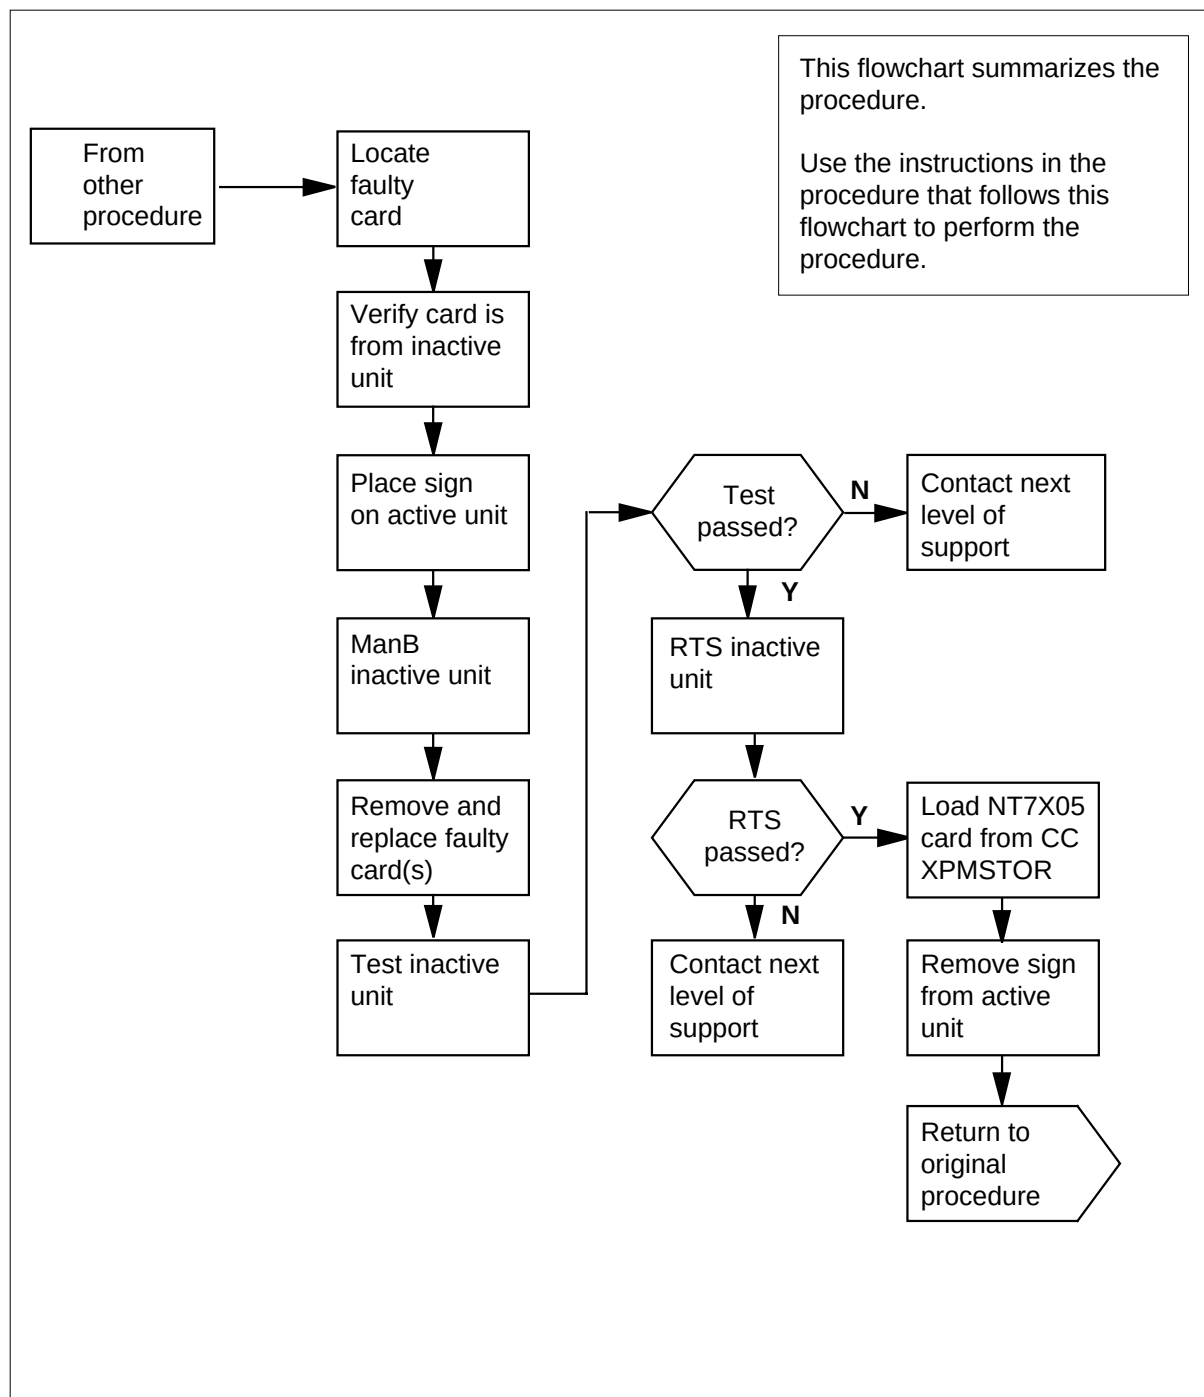

NT7X05 in an RSC-S (PCM-30) Model B RCO2 (continued)

Replacing a/an NT7X05 in RSC-S RCO2

At your current location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure to verify or accept cards, or were directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCO2 ensure the unit where you are replacing the card is **INACTIVE** and the mate unit is **ACTIVE**.

Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC) including suffix, as the card to be removed.

At the MAP display

- 3 Access the PM level and post the RCO2 by typing

>MAPCI;MTC;PM;POST RCO2 rc2_no

and pressing the Enter key.

where

rc2_no

is the number of the RCO2 to be busied

Example of a MAP display:

NT7X05**in an RSC-S (PCM-30) Model B RCO2** (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1RCO2	.	.	.	.	.
RCO2			SysB	ManB	OffL		CBsy	ISTb	InSv
0 Quit	PM		0	0	2		0	2	25
2 Post_	RCO2		0	0	0		0	1	1
3 ListSet									
4	RCO2		0 ISTb	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:		Inact	ISTb					
6 TST_	Unit1:		Act	InSv					
7 BSY_									
8 RTS_									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16 IRLINK									
17 Perform									
18									

- 4 By observing the MAP display, be sure the card to be removed is on the inactive unit.

If the faulty card is on an	Do
ACTIVE unit	step 5
INACTIVE unit	step 8

- 5 Switch the processing activity to the inactive unit by typing

>SWACT

and pressing the Enter key.

The system determines the type of SWACT it can perform and displays a confirmation prompt for the selected SWACT.

If SWACT	Do
can continue at this time	step 6
cannot continue at this time	step 21

- 6 Switch the activity of the unit by typing

>YES

and pressing the Enter key.

NT7X05

in an RSC-S (PCM-30) Model B RCO2 (continued)

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 8
SWACT failed	step 7
SWACT failed Reason: XPM SWACTback	step 7
SWACT refused by SWACT controller	step 7

- 7 Return to the *Alarm Clearing Procedure*, to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the frame

- 8 Put a sign on the active unit bearing the words *Active unit—Do not touch*.

At the MAP display

- 9 Busy the inactive RCO2 unit by typing
>BSY INACTIVE
 and pressing the Enter key.

NT7X05 in an RSC-S (PCM-30) Model B RCO2 (continued)

At the frame

10



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the RCO2. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage


Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.

11 Remove the NT7X05 card as shown in the following figures.


a Locate the card to be removed on the appropriate shelf.

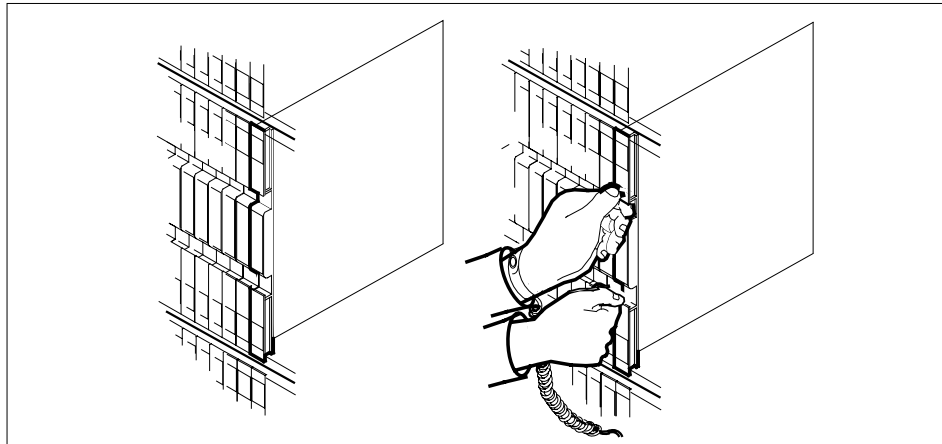

b Open the locking levers on the card to be replaced and gently pull the card towards you until it clears the shelf.

NT7X05


in an RSC-S (PCM-30) Model B RCO2 (continued)

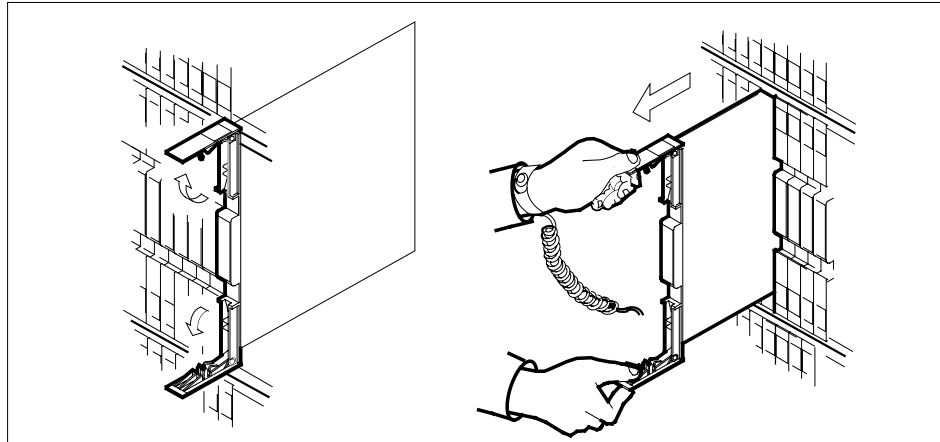

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

12 Open the locking levers on the replacement card.

- a Align the card with the slots in the shelf and gently slide the card into the shelf.

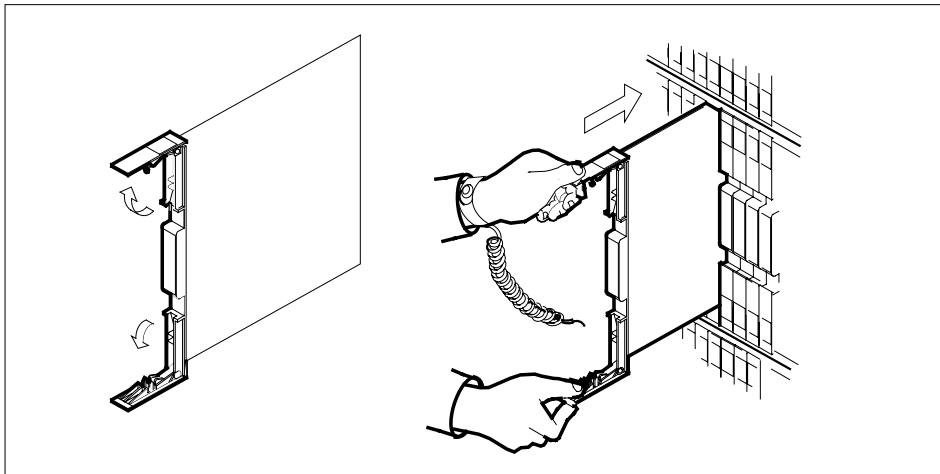


13 Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
- b Close the locking levers.

NT7X05

in an RSC-S (PCM-30) Model B RCO2 (continued)

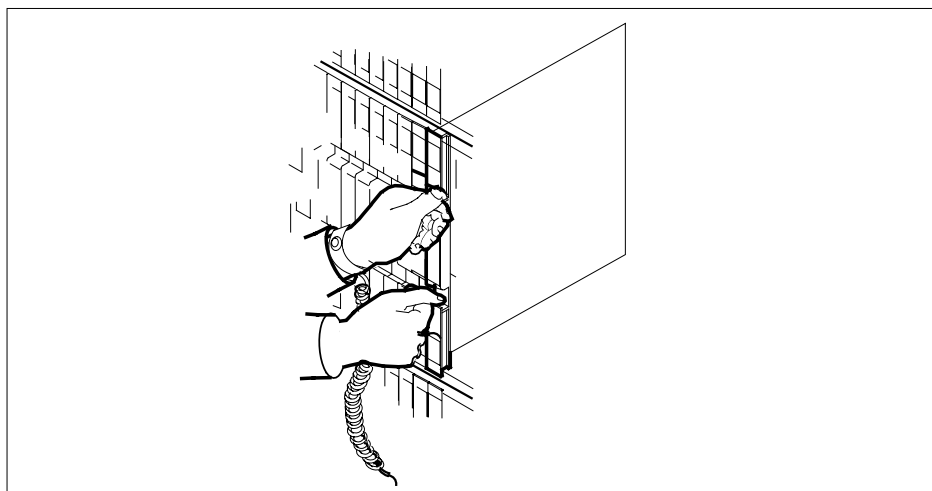

At the MAP display

- 14** Test the inactive RCO2 unit by typing

>TST UNIT RC02_unit_no

and pressing the Enter key.

where

rc02_unit_no

is the number of the inactive RCO2 unit

Example of a MAP response:

Test Passed

or

Test Failed

If TST	Do
passed	step 15
failed	step 19

- 15** Return the inactive RCO2 unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

NT7X05

in an RSC-S (PCM-30) Model B RCO2 (end)

unit_no

is the number of the RCO2 unit (0 or 1) tested in step 14

If TST	Do
passed	step 16
failed	step 19

- 16** Load the inactive RCO2 unit by typing
>XPMSTOR INACTIVE CC [load_file_name]
 and pressing the Enter key.

where

load_file_name

is the name of the file datafilled in field, LOAD, of the inventory table.

If load	Do
passed	step 17
failed	step 19

- 17** Send any faulty cards for repair according to local procedure.
- 18** Record the following items in office records:
- date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
- Go to step 20.
- 19** Obtain further assistance in replacing this card by contacting personnel responsible for higher level of support.
- 20** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.
- 21** For further assistance with switch of activity, contact the personnel responsible for the next level of support.

Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

NT7X05 in an SMS

Application

Use this procedure to replace the following card in an SMS.

PEC	Suffixes	Name
NT7X05	AA	Peripheral loader

Common procedures


None

Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT7X05 in an SMS (continued)

Summary of card replacement procedure for an NT7X05 card in an RSC SMS

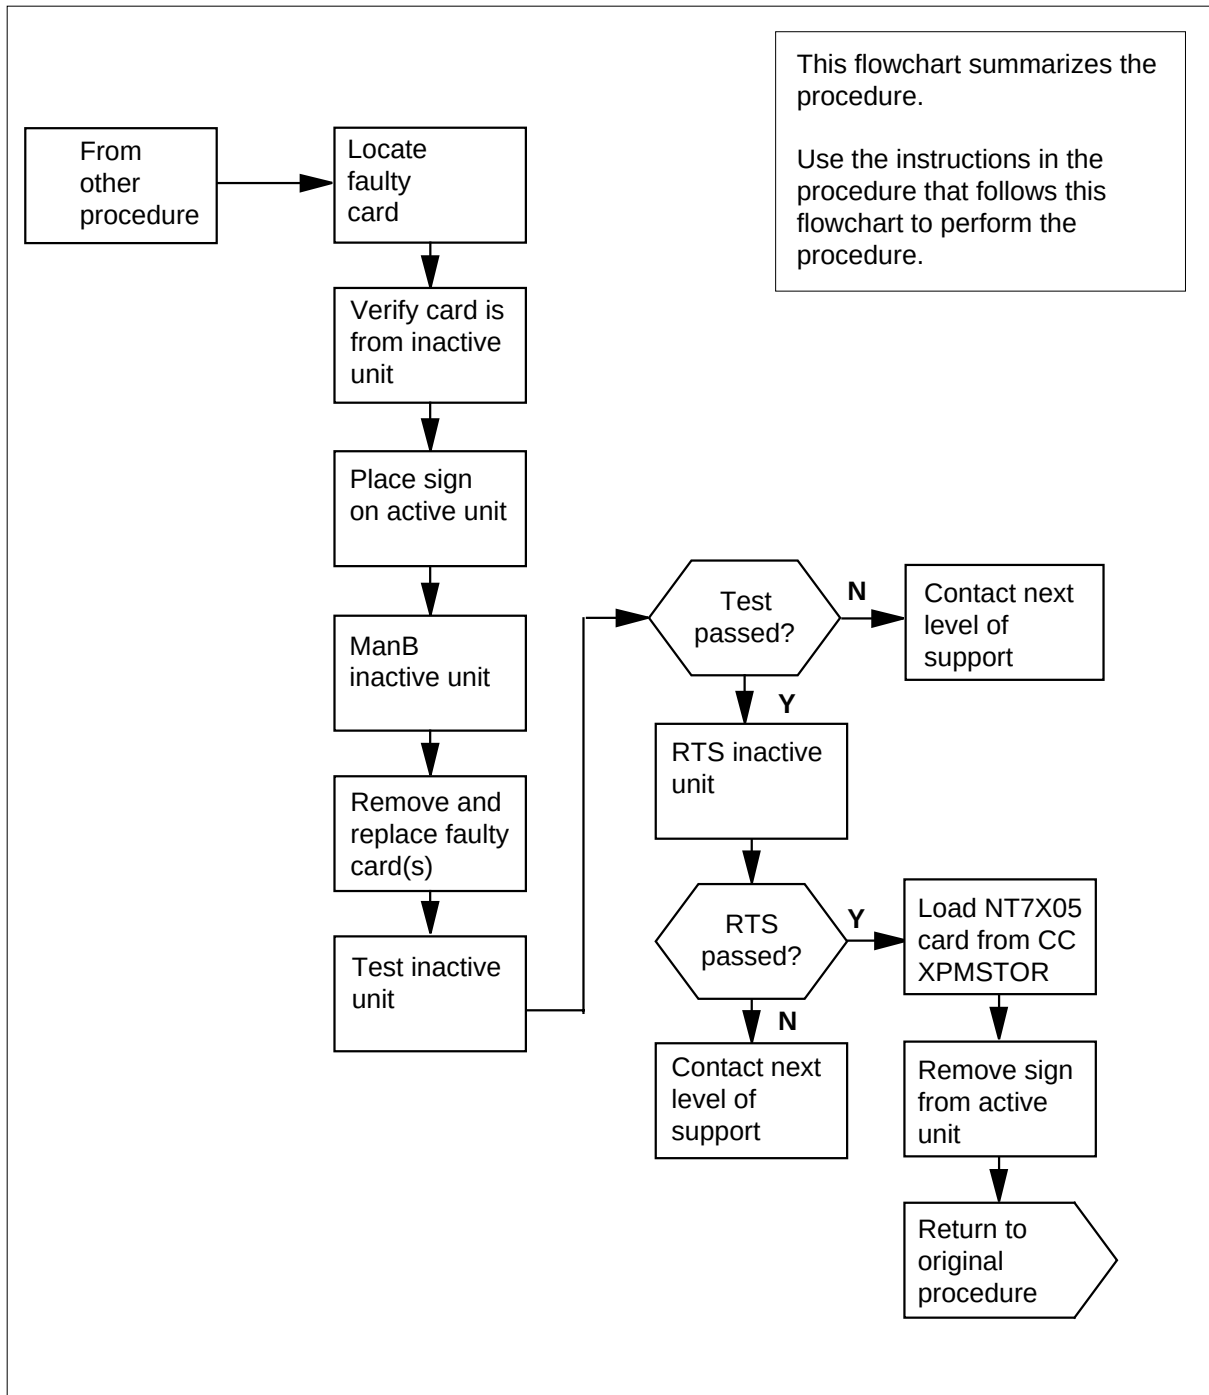

NT7X05 in an SMS (continued)

Replacing an NT7X05 card in an SMS

At your Current Location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure to verify or accept cards, or were directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the SMS ensure the unit where you are replacing the card is **INACTIVE** and the mate unit is **ACTIVE**.

Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC) including suffix, as the card to be removed.

At the MAP display

- 3 Access the PM level and post the SMS by typing

>MAPCI;MTC;PM;POST SMS sms_no

and pressing the Enter key.

where

sms_no

is the number of the SMS to be busied

Example of a MAP display:

NT7X05
in an SMS (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1SMS	.	.	.	.	.
SMS			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	2	0	2	25	
2 Post_	SMS		0	0	0	0	1	1	
3 ListSet									
4	SMS		0 ISTb	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:		Inact	ISTb					
6 TST_	Unit1:		Act	InSv					
7 BSY_									
8 RTS_									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16 IRLINK									
17 Perform									
18									

- 4

By observing the MAP display, be sure the card to be removed is on the inactive unit.

If the faulty card is on an	Do
ACTIVE unit	step 5
INACTIVE unit	step 8
- 5

Switch the processing activity to the inactive unit by typing **>SWACT** and pressing the Enter key.

The system determines the type of SWACT it can perform and displays a confirmation prompt for the selected SWACT.

If SWACT	Do
can continue at this time	step 6
cannot continue at this time	step 21
- 6

Switch the activity of the unit by typing **>YES** and pressing the Enter key.

NT7X05

in an SMS (continued)

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 8
SWACT failed	step 7
SWACT failed Reason: XPM SWACTback	step 7
SWACT refused by SWACT controller	step 7

- 7 Return to the “SMS alarm clearing procedures section of this document to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the frame

- 8 Put a sign on the active unit bearing the words *Active unit—Do not touch*.

At the MAP display

- 9 Busy the inactive SMS unit by typing
>BSY INACTIVE
and pressing the Enter key.

NT7X05
in an SMS (continued)**At the frame****10****WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the SMS. This protects the equipment against damage caused by static electricity.

**DANGER****Equipment damage**


Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


11 Remove the NT7X05 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

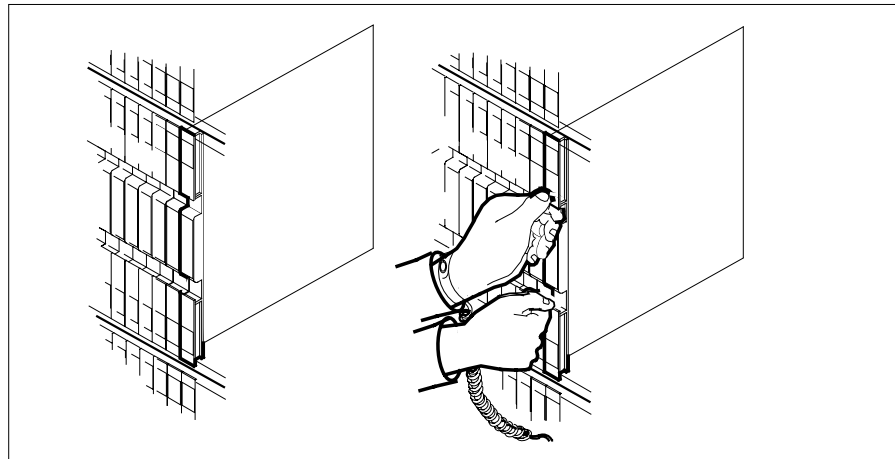

b Open the locking levers on the card to be replaced and gently pull the card towards you until it clears the shelf.


NT7X05 in an SMS (continued)

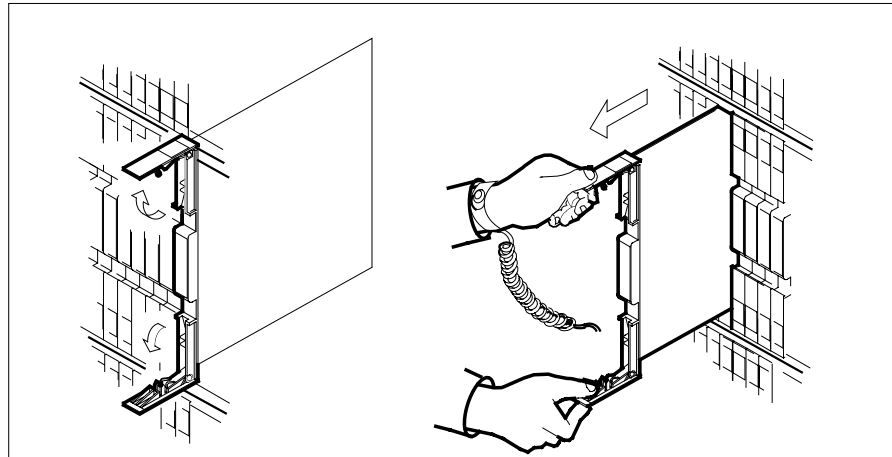

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

12 Open the locking levers on the replacement card.


- a Align the card with the slots in the shelf and gently slide the card into the shelf.

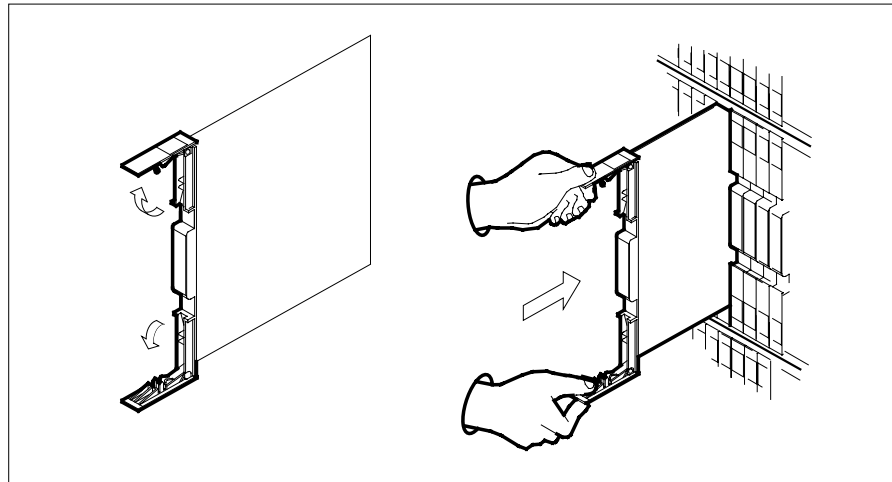

13 Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
- b Close the locking levers.

NT7X05
in an SMS (continued)

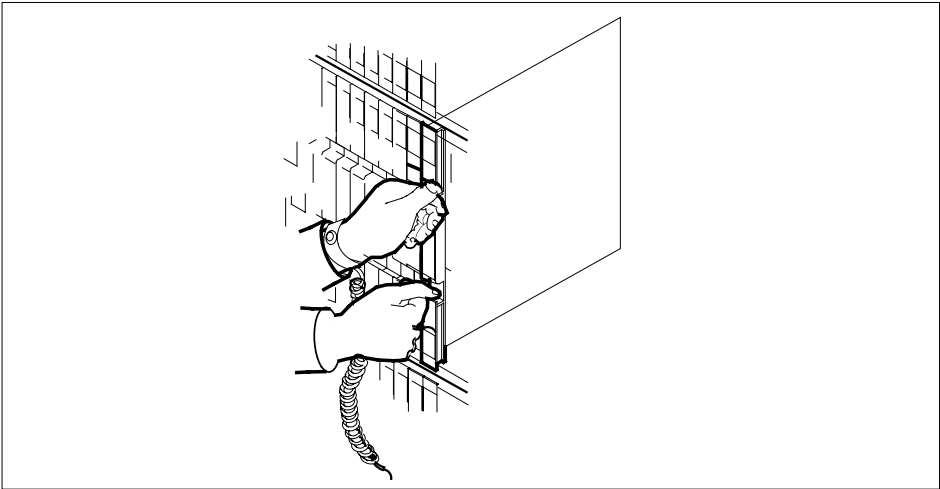

At the MAP display

- 14** Test the inactive SMS unit by typing
>TST UNIT sms_unit_no
and pressing the Enter key.
where
sms_unit_no
is the number of the inactive SMS unit

Example of a MAP response:
Test Passed

or
Test Failed

If TST	Do
passed	step 15
failed	step 19

- 15** Return the inactive SMS unit to service by typing
>RTS UNIT unit_no
and pressing the Enter key.
where

NT7X05
in an SMS (end)

unit_no

is the number of the SMS unit (0 or 1) tested in step 14

If TST**Do**

passed

step 16

failed

step 19

16 Load the 7X05 card in the inactive SMS unit by typing**>XPMSTOR INACTIVE CC [loadfile_name]**

and pressing the Enter key.

*where***file_name**

is an optional source file name, if not included the file name in the field LOAD in table LTCINV will be used.

If load**Do**

passed

step 17

failed

step 19

17 Send any faulty cards for repair according to local procedure.**18** Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 20.

19 Obtain further assistance in replacing this card by contacting personnel responsible for higher level of support.**20** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.**21** For further assistance with switch of activity, contact the personnel responsible for the next level of support.**Note:** If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

**NT7X05
in an SMS-R**

Application

Use this procedure to replace the following card in an SMS-R.

PEC	Suffixes	Name
NT7X05	AA	Peripheral remote loader

Common procedures


None

Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT7X05 in an SMS-R (continued)

Summary of card replacement procedure for an NT7X05 card in an RSC SMS-R

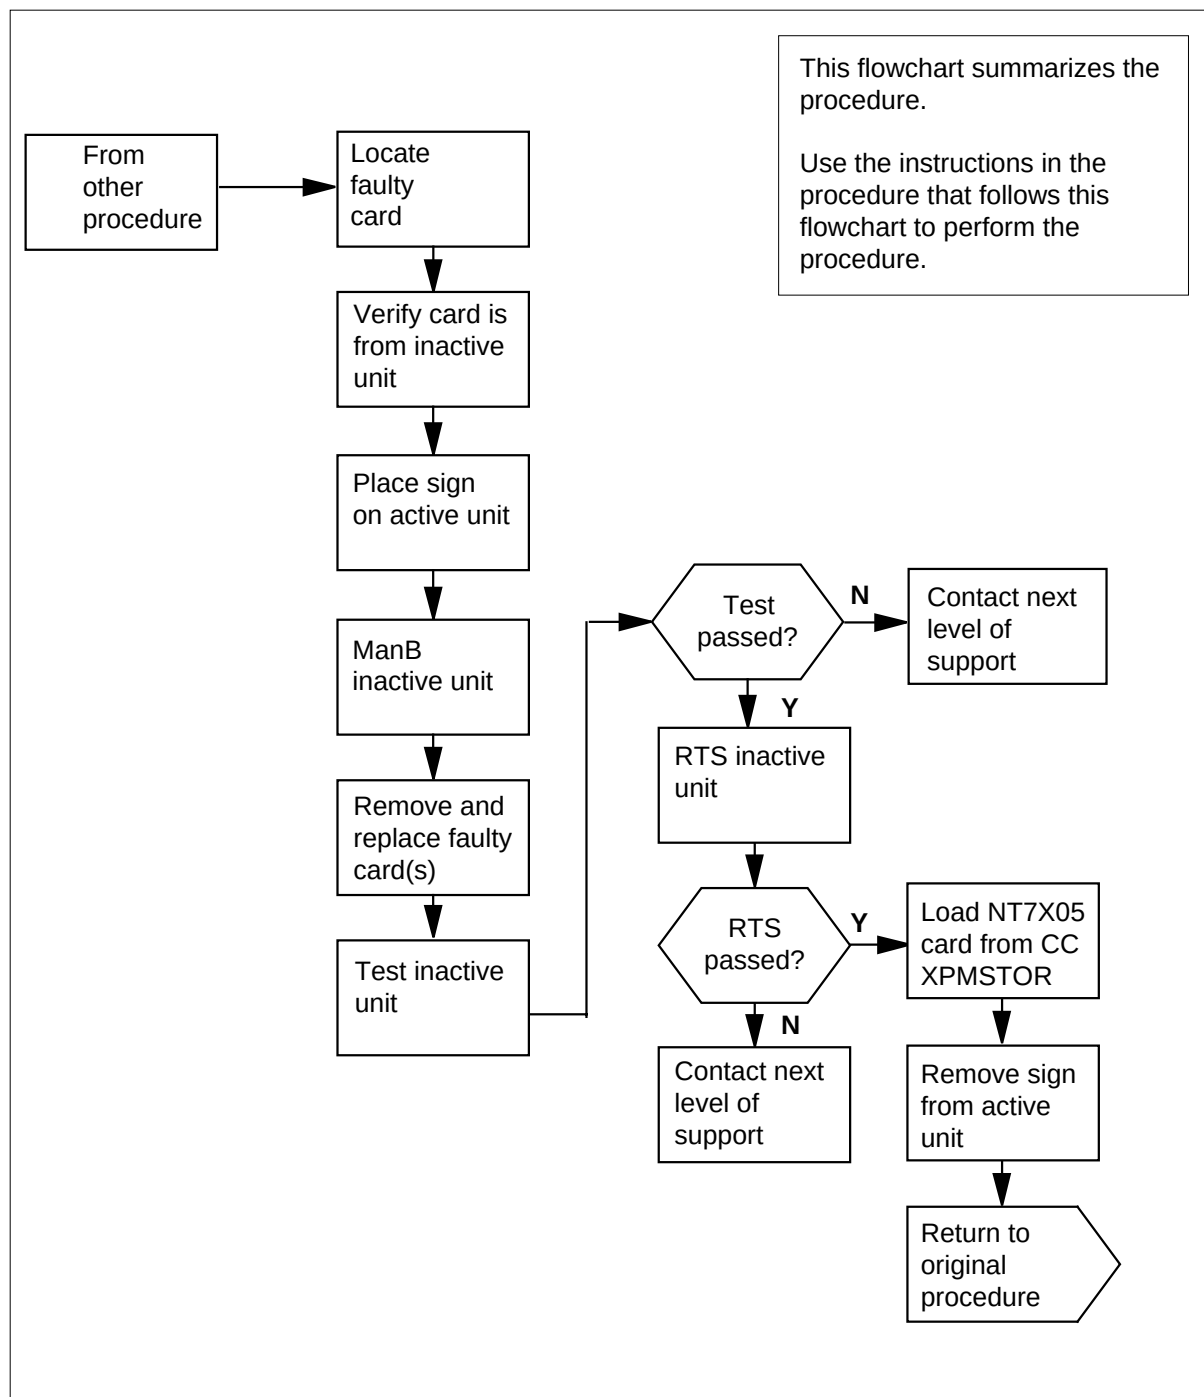

NT7X05 in an SMS-R (continued)

Replacing an NT7X05 card in an SMS-R

At your Current Location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure to verify or accept cards, or were directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the SMS-R ensure the unit where you are replacing the card is **INACTIVE** and the mate unit is **ACTIVE**.

Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC) including suffix, as the card to be removed.

At the MAP display

- 3 Access the PM level and post the SMS-R by typing
>MAPCI;MTC;PM;POST SMS-R sms-r_no
and pressing the Enter key.

where

sms-r_no

is the number of the SMS-R to be busied

Example of a MAP display:

NT7X05

in an SMS-R (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1SMS-R	.	.	.	.	.
SMS-R			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	2	0	2	25	
2 Post_	SMS-R		0	0	0	0	1	1	
3 ListSet									
4	SMS-R		0	ISTb	Links_00S:	CSide	0, PSide	0	
5 TRNSL_	Unit0:		Inact	ISTb					
6 TST_	Unit1:		Act	InSv					
7 BSY_									
8 RTS_									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16 IRLINK									
17 Perform									
18									

- 4 By observing the MAP display, be sure the card to be removed is on the inactive unit.

If the faulty card is on an	Do
ACTIVE unit	step 5
INACTIVE unit	step 8

- 5 Switch the processing activity to the inactive unit by typing

>SWACT

and pressing the Enter key.

The system determines the type of SWACT it can perform and displays a confirmation prompt for the selected SWACT.

If SWACT	Do
can continue at this time	step 6
cannot continue at this time	step 21

- 6 Switch the activity of the unit by typing

>YES

and pressing the Enter key.

NT7X05 in an SMS-R (continued)

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 8
SWACT failed	step 7
SWACT failed Reason: XPM SWACTback	step 7
SWACT refused by SWACT controller	step 7

- 7 Return to the *Alarm Clearing Procedure*, to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the frame

- 8 Put a sign on the active unit bearing the words *Active unit—Do not touch*.

At the MAP display

- 9 Busy the inactive SMS-R unit by typing
>BSY INACTIVE
and pressing the Enter key.

NT7X05 in an SMS-R (continued)

At the frame

10



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the SMS-R. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage


Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.


Put on a wrist strap.

11 Remove the NT7X05 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

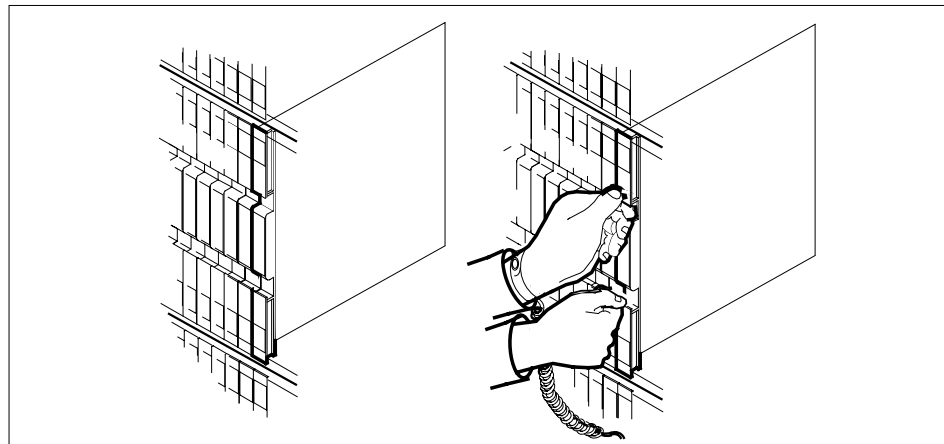


b Open the locking levers on the card to be replaced and gently pull the card towards you until it clears the shelf.

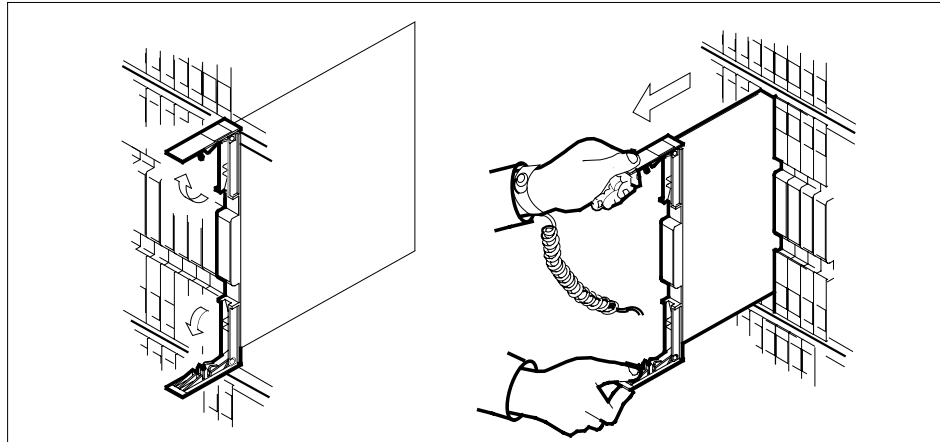NT7X05
in an SMS-R (continued)

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

12 Open the locking levers on the replacement card.


- a Align the card with the slots in the shelf and gently slide the card into the shelf.

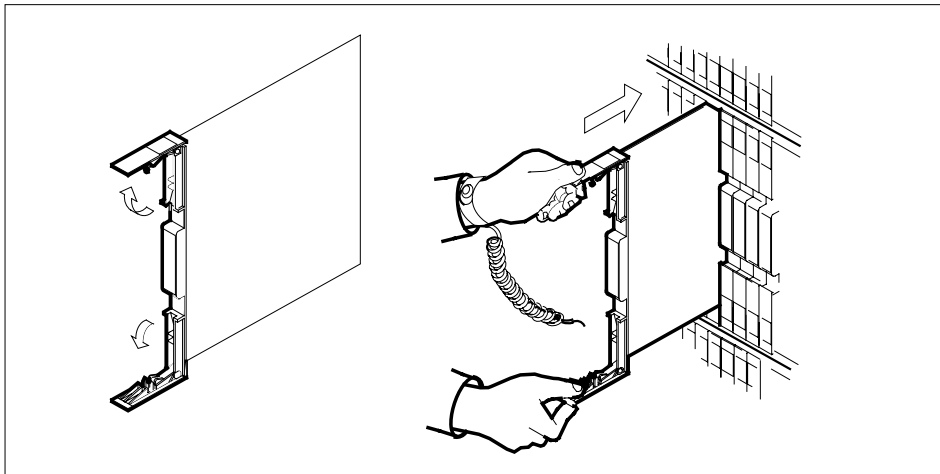**13** Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
- b Close the locking levers.

NT7X05

in an SMS-R (continued)

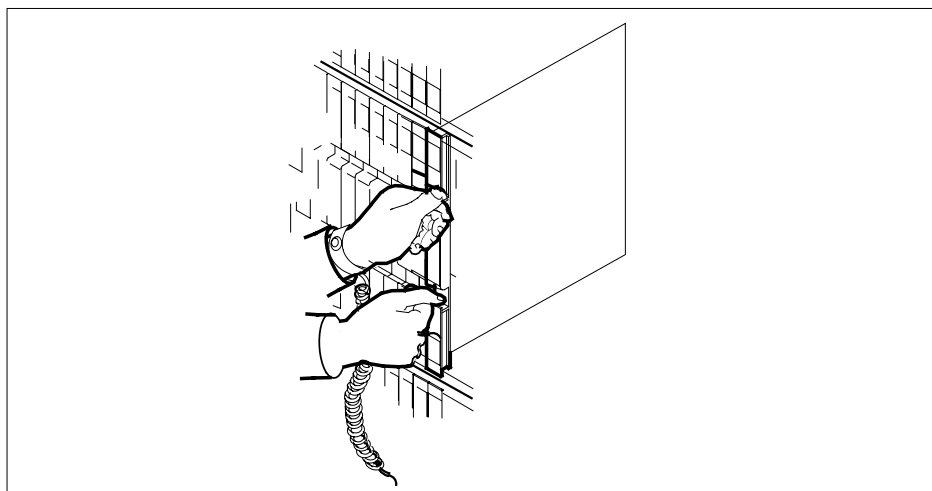

At the MAP display

- 14** Test the inactive SMS-R unit by typing

>TST UNIT sms-r_unit_no

and pressing the Enter key.

where

sms-r_unit_no

is the number of the inactive SMS-R unit

Example of a MAP response:

Test Passed

or

Test Failed

If TST	Do
passed	step 15
failed	step 19

- 15** Return the inactive SMS-R unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the SMS-R unit (0 or 1) tested in step 14

- 16** Load the inactive SMS-R unit by typing

>LOADPM INACTIVE CC [load_file_name]

NT7X05
in an SMS-R (end)

and pressing the Enter key.

If load	Do
passed	step 17
failed	step 19

17 Send any faulty cards for repair according to local procedure.

18 Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 20.

19 Obtain further assistance in replacing this card by contacting personnel responsible for higher level of support.

20 You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

21 For further assistance with switch of activity, contact the personnel responsible for the next level of support.

Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

NT7X05 in an SMU

Application

Use this procedure to replace the following card in an SMU.


PEC	Suffixes	Name
NT7X05	AA	Peripheral/Remote Loader-16

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

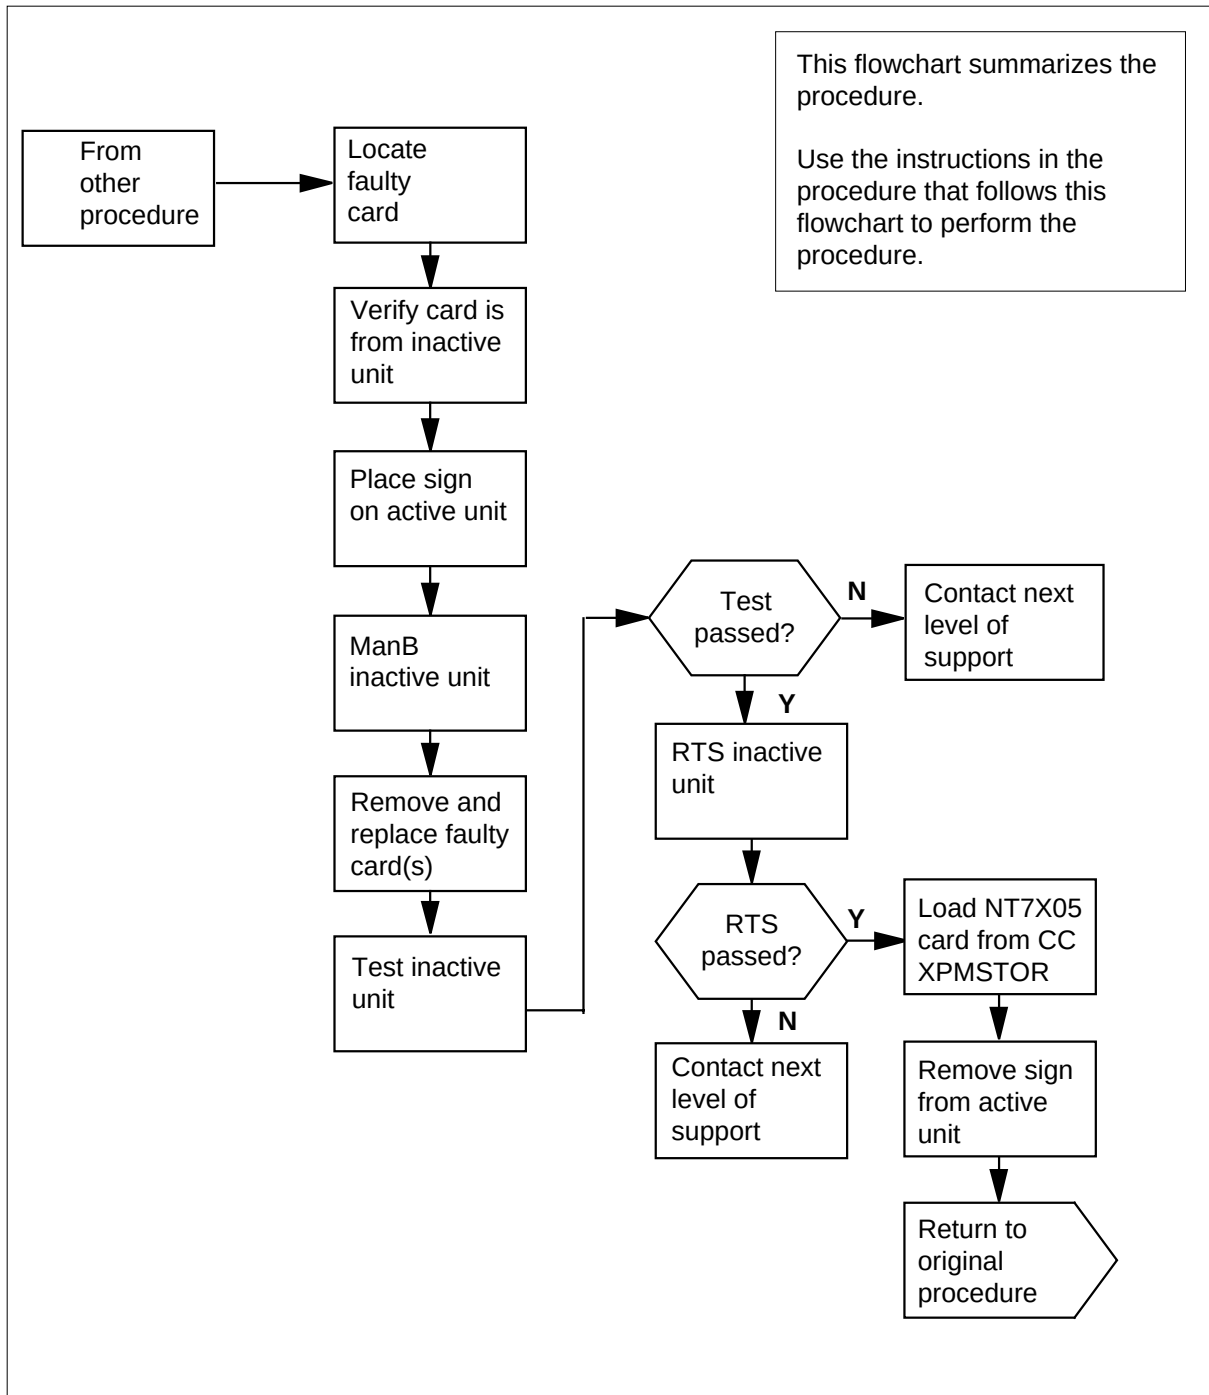NT7X05
in an SMU (continued)**Summary of replacing an NT7X05 card in an SMU**

NT7X05 in an SMU (continued)

Replacing an NT7X05 in an SMU

At your current location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure to verify or accept cards, or were directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the SMU ensure the unit where you are replacing the card is **INACTIVE** and the mate unit is **ACTIVE**.

Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC) including suffix, as the card to be removed.

At the MAP display

- 3 Access the PM level and post the SMU by typing

>MAPCI;MTC;PM;POST SMU smu_no

and pressing the Enter key.

where

SMU_no

is the number of the SMU to be busied

Example of a MAP display:

NT7X05 in an SMU (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1SMU	.	.	.	.	.
SMU			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	2	0	2	25	
2 Post_	SMU		0	0	0	0	1	1	
3 ListSet									
4	SMU		0 ISTb	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:		Inact	ISTb					
6 TST_	Unit1:		Act	InSv					
7 BSY_									
8 RTS_									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16 IRLINK									
17 Perform									
18									

- 4 By observing the MAP display, be sure the card to be removed is on the inactive unit.

If the faulty card is on an	Do
ACTIVE unit	step 5
INACTIVE unit	step 8

- 5 Switch the processing activity to the inactive unit by typing

>SWACT

and pressing the Enter key.

The system determines the type of SWACT it can perform and displays a confirmation prompt for the selected SWACT.

If SWACT	Do
can continue at this time	step 6
cannot continue at this time	step 21

- 6 Switch the activity of the unit by typing

>YES

and pressing the Enter key.

NT7X05

in an SMU (continued)

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 8
SWACT failed	step 7
SWACT failed Reason: XPM SWACTback	step 7
SWACT refused by SWACT controller	step 7

- 7 Return to the *Alarm Clearing Procedure*, to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the frame

- 8 Put a sign on the active unit bearing the words *Active unit—Do not touch*.

At the MAP display

- 9 Busy the inactive SMU unit by typing
>BSY INACTIVE
and pressing the Enter key.

NT7X05
in an SMU (continued)**At the frame****10****WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the SMU. This protects the equipment against damage caused by static electricity.

**DANGER****Equipment damage**


Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


11 Remove the NT7X05 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

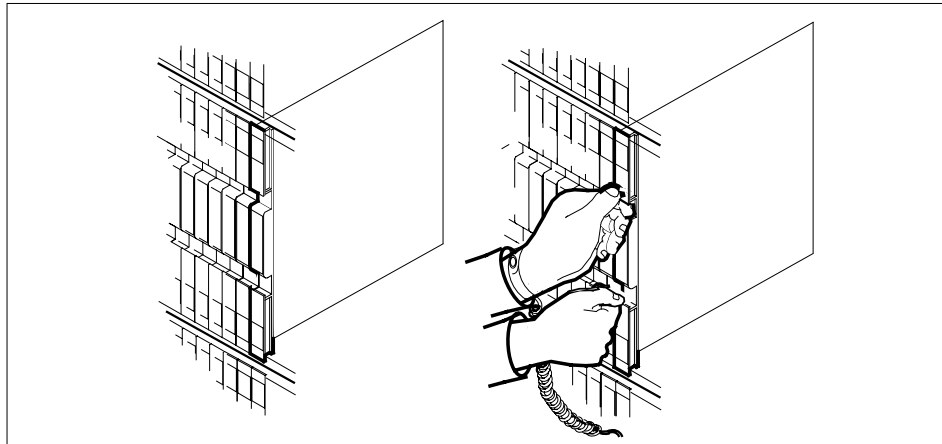

b Open the locking levers on the card to be replaced and gently pull the card towards you until it clears the shelf.


NT7X05 in an SMU (continued)

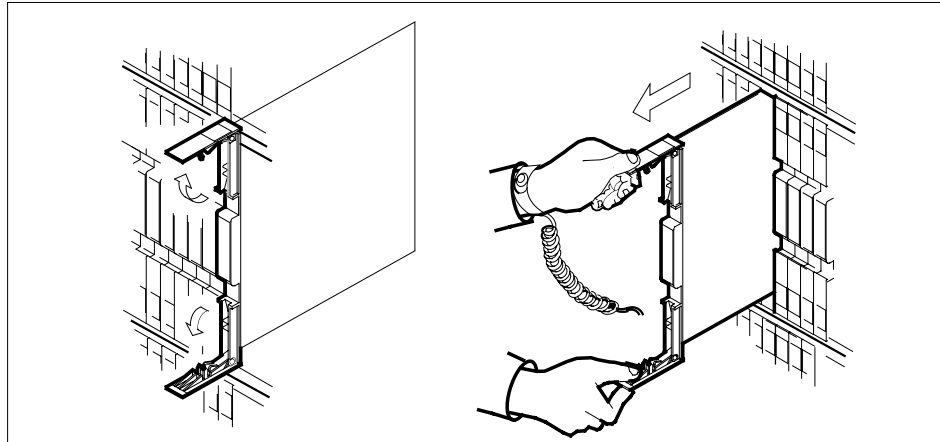

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

12 Open the locking levers on the replacement card.


- a Align the card with the slots in the shelf and gently slide the card into the shelf.

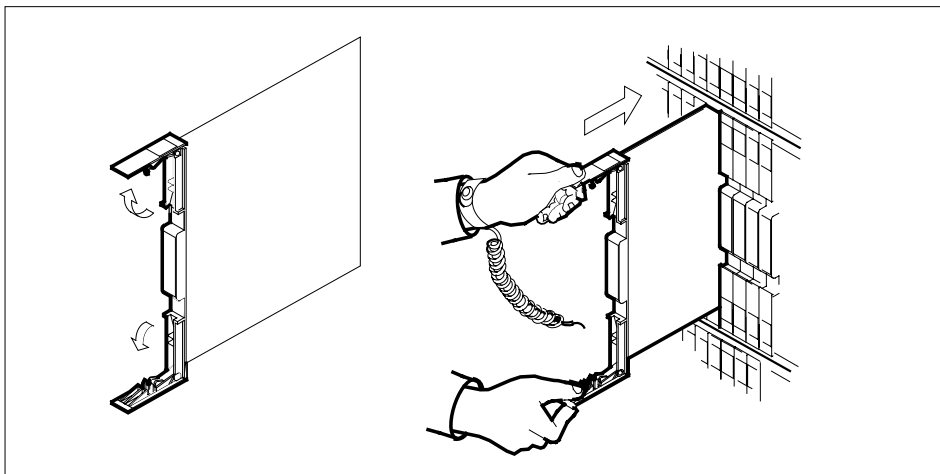

13 Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
- b Close the locking levers.

NT7X05
in an SMU (continued)

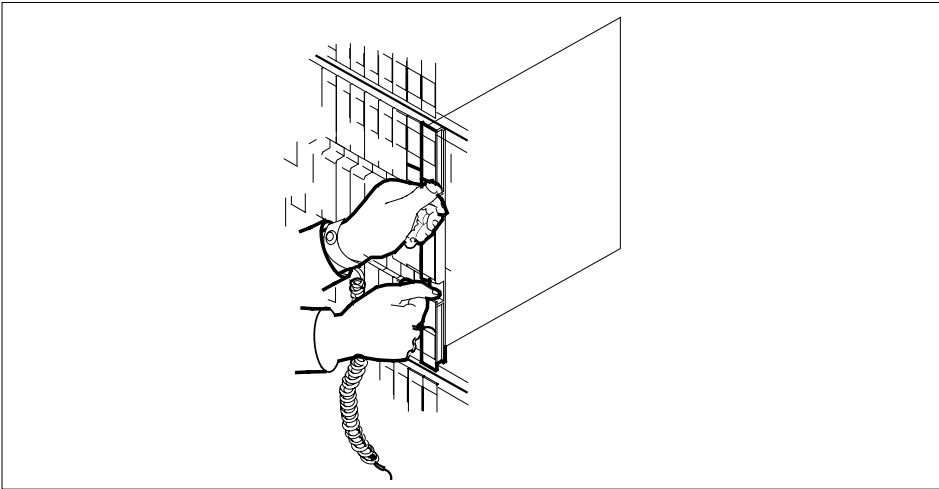

At the MAP display

- 14** Test the inactive SMU unit by typing
>TST UNIT SMU_unit_no
and pressing the Enter key.
where
SMU_unit_no
is the number of the inactive SMU unit

Example of a MAP response:
Test Passed

or
Test Failed

If TST	Do
passed	step 15
failed	step 19

- 15** Return the inactive SMU unit to service by typing
>RTS UNIT unit_no
and pressing the Enter key.
where

NT7X05

in an SMU (end)

unit_no

is the number of the SMU unit (0 or 1) tested in step 14

If load	Do
passed	step 16
failed	step 19

- 16** Load the inactive SMU unit by typing
>LOADPM INACTIVE CC XPMSTOR [file_name]
 and pressing the Enter key.

where

file_name

is the name of the file datafilled in field, LOAD, of the inventory table.

If load	Do
passed	step 17
failed	step 19

- 17** Send any faulty cards for repair according to local procedure.

- 18** Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 20.

- 19** Obtain further assistance in replacing this card by contacting personnel responsible for higher level of support.

- 20** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

- 21** For further assistance with switch of activity, contact the personnel responsible for the next level of support.

Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

**NT8X02
in an OPAC BCU**

Application

Use this procedure to replace the following card in a battery control unit (BCU).

PEC	Suffix	Name
NT8X02	AB	Battery charger controller card

Common procedures


The common replacing a card procedure is referenced in this procedure.

Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NT8X02 in an OPAC BCU (continued)

Summary of card replacement procedure for NT8X02 card in a BCU

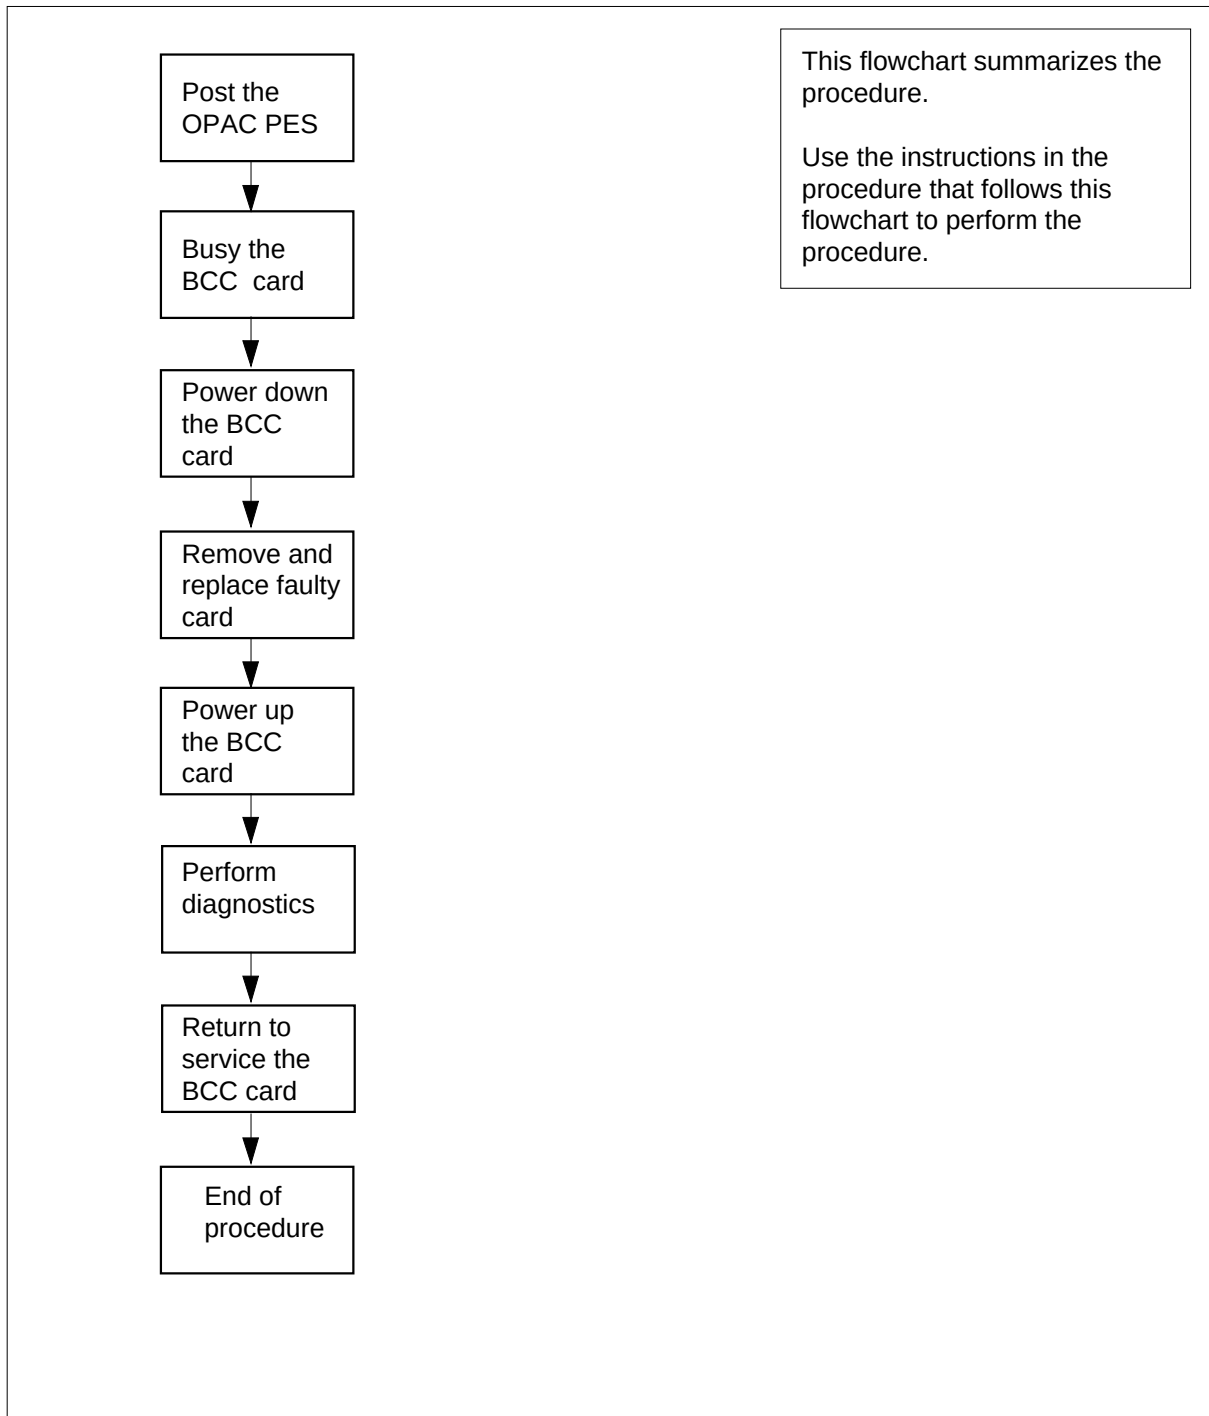

NT8X02 in an OPAC BCU (continued)

Replacing an NT8X02 card in a BCU

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card to be removed.
- 3 If you were directed to this procedure from the *Alarm Clearing Procedures*, go to step 6. Otherwise, continue with step 4.

At the MAP terminal

- 4 Post the OPAC PES with the BCU containing the battery charger controller (BCC) card to be replaced by typing

>MAPCI;MTC;PM;PES;POST ompmes

and pressing the Enter key.

where

ompmes

is the OPAC PES discrimination number (0-253)

Example of a MAP response:

		RED	AMBER	GREEN	OFFL	
OPMPES		0	0	3	0	
OPMPES	2	Cond:	GREEN	REM2	2	1 RMM 2
						Audit Week HBT
Common		Rectifiers				2
AC	FL0	FL1	CL0	CL1	BCCDVR	PESALRM ECU FSP
.	.	.	.	.	.	.
BCC	0	1	2	3	Temp	Door BCCFUSES
0=.	.	.	.	.	EHT ELT	FRNT SIDE 0 1
1=.	.	.	.	.	.	.

- 5 Busy the BCC driver (BCCDVR) card by typing

>BSY BCCDVR

At bay 1 of the OPAC

- 6 Turn switch on front of the BCC (NT8X02) card to the OFF position.
- 7 Replace the NT8X02 card by using the common replacing a card procedure in this document. When the card is replaced, return to this step.
- 8 Turn the switch on the BCC (NT8X02) card to the ON position.

NT8X02

in an OPAC BCU (end)

- 9 If you were directed to this procedure from the *Alarm Clearing Procedures*, return now to the alarm clearing procedure that directed you here. Otherwise, go to step 10.

At the MAP terminal

- 10 Perform diagnostics by typing
>TST
and pressing the Enter key

If test	Do
passed	step 11
failed	step 14

- 11 Return the BCCDVR card to service by typing
>RTS BCCDVR

If RTS	Do
passed	step 12
failed	step 14

- 12 Send any faulty cards for repair according to local procedure.

- 13 Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 15.

- 14 Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.

- 15 You have successfully completed this procedure.

**NT8X02
in an OPM BCU**

Application

Use this procedure to replace the following card in an OPM BCU battery control unit (BCU).

PEC	Suffixes	Name
NT8X02	AA, AB	Battery Charger Controller card (BCC)

Common procedures


The common replacing a card procedure is referenced in this procedure.

Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NT8X02 in an OPM BCU (continued)

Summary of card replacement procedure for an NT8X02 card in a BCU

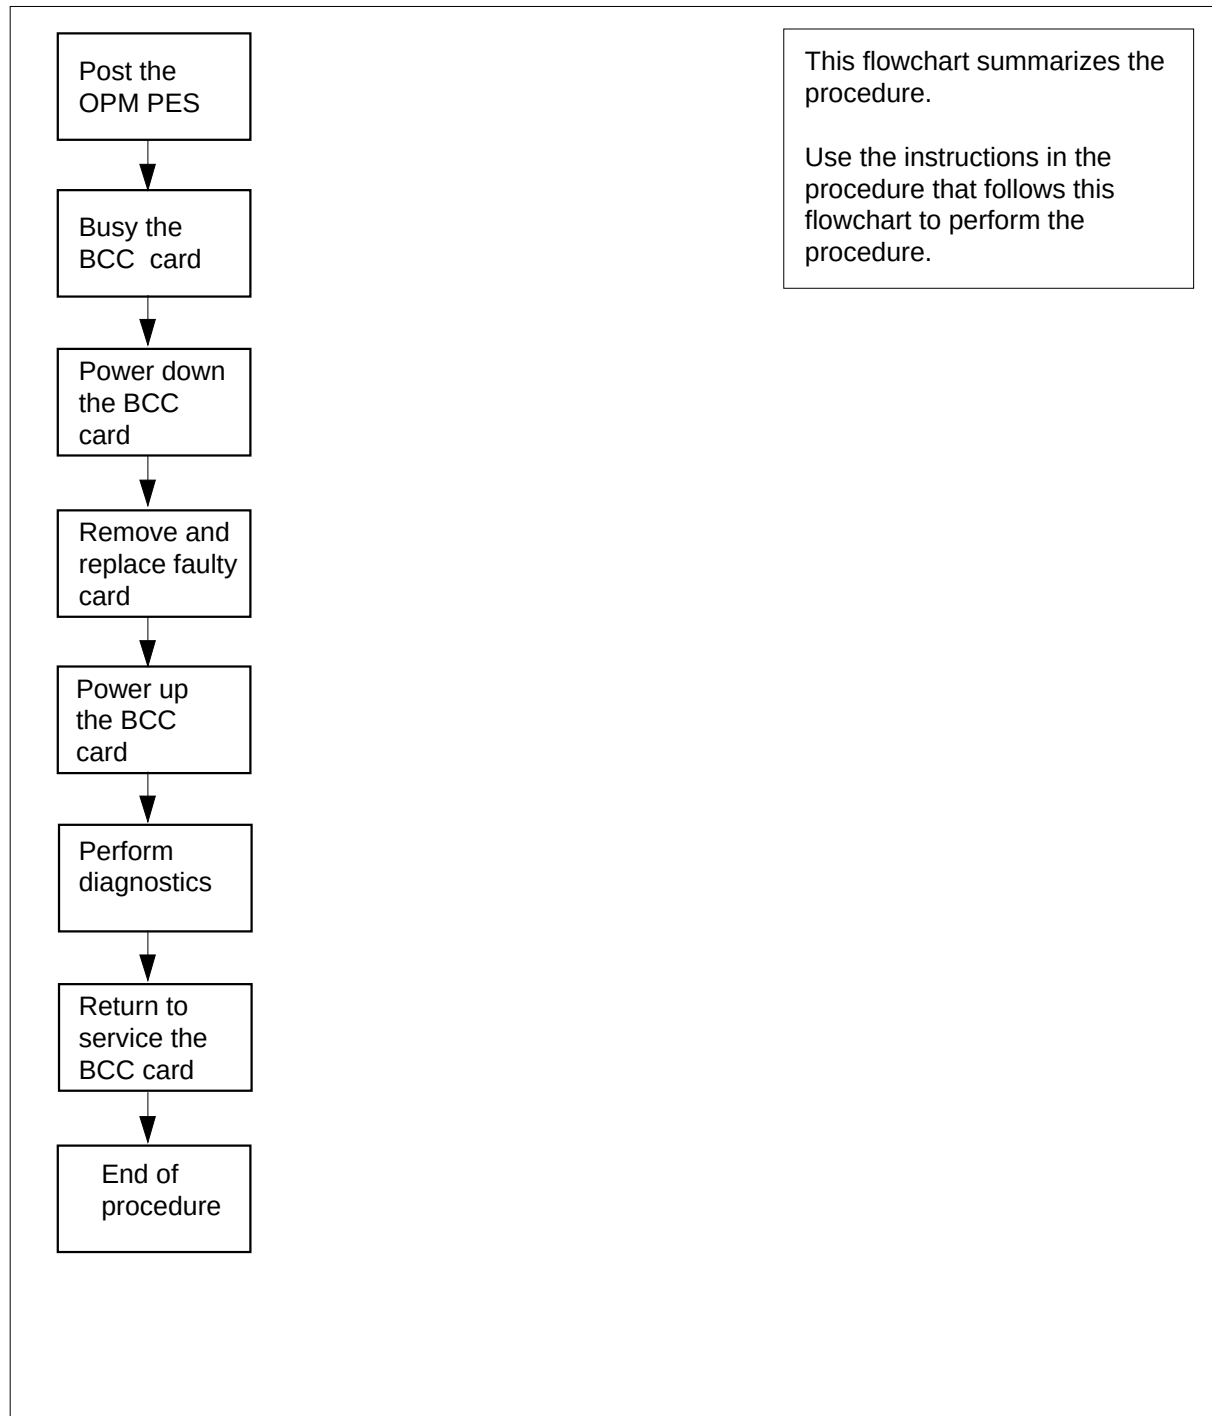

NT8X02
in an OPM BCU (continued)

Replacing an NT8X02 card in an BCU

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card to be removed.
- 3 If you were directed to this procedure from the *Alarm Clearing Procedures*, go to step 6. Otherwise, continue with step 4.

At the MAP terminal

- 4** Post the OPM PES with the BCU containing the battery charger controller (BCC) card to be replaced by typing

```
>MAPCI;MTC;PM;PES;POST opmpes
```

and pressing the Enter key.

where

opmpes

is the PES discrimination number (0 to 199)

Example of a MAP response:

		RED		AMBER		GREEN		OFFL	
OPMPES		1		2		3		4	
OPMPES		2		Cond: GREEN		REM2		2 1 RMM 2	
						Audit Week		HBT	
Common		Rectifiers						2	
AC	FL0	FL1	CL0	CL1	BCCDVR	PESALRM	ECU	FSP	
BCC	0	1	2	3	Temp	Door	BCCFUSES		
0=W	BSY	BSY	BSY	BSY	EHT	ELT	FRNT	SIDE	0 1
1=W	BSY	BSY	BSY	BSY	.	.	.	.	.

- 5** Busy the BCC driver (BCCDVR) card by typing

>BSY BCCDVR

and pressing the Enter key.

NT8X02 in an OPM BCU (continued)

At the OPM cabinet

6



DANGER

Possible loss of service during BCC (NT8X02) replacement
Do not turn off more than one BCC NT8X02 at a time or service is lost if AC power is interrupted. Turn off BCC0 when working on battery strings 0, 1, 2, or 3. Turn off BCC1 when working on battery strings 4, 5, 6, or 7.

Turn switch on front of the BCC (NT8X02) card to the OFF position.

- 7 Replace the NT8X02 card by using the common replacing a card procedure in this document. When the card is replaced, return to this step.
- 8 Turn the switch on the BCC (NT8X02) card to the ON position.
- 9 If you were directed to this procedure from the *Alarm Clearing Procedures*, return now to the alarm clearing procedure that directed you here. Otherwise, continue with step 10.

At the MAP terminal

- 10 Perform diagnostics by typing
>TST
and pressing the Enter key.

If test	Do
passed	step 11
failed	step 14

- 11 Return the BCCDVR card to service by typing
>RTS BCCDVR
and pressing the Enter key.

If RTS	Do
passes	step 12
fails	step 14

- 12 Send any faulty cards for repair according to local procedure.
- 13 Record the following items in office records:
 - date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card

NT8X02
in an OPM BCU (end)

Go to step 15.

- 14** Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.
- 15** You have successfully completed this procedure.

NT8X18 in an SMS-R

Application

Use this procedure to replace the following card in an SMS-R.

PEC	Suffixes	Name
NT8X18	BA	SCM DS30A Interface

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NT8X18 in an SMS-R (continued)

Summary of card replacement procedure for an NT8X18 card in an SMS-R

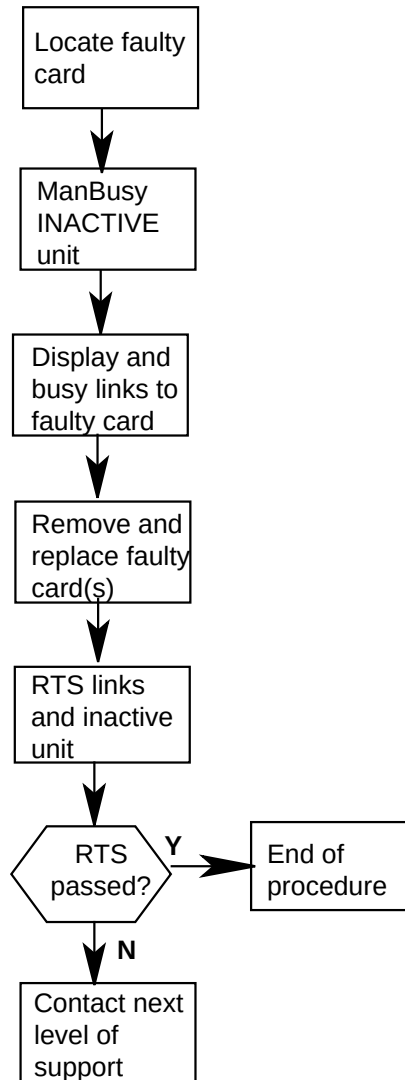

This flowchart summarizes the procedure.

Use the instructions in the procedure that follows this flowchart to perform the procedure.

NT8X18 in an SMS-R (continued)

Replacing an NT8X18 in an SMS-R

At your current location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure to verify or accept cards, or were directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the SMS-R, ensure that the unit in which you are replacing the card is inactive and that the mate unit is active.

Obtain a replacement card. Verify that the replacement card has the same product engineering code (PEC), including suffix, as the card that is to be removed.

At the MAP display

- 3 Access the PM level of the MAP display by typing
>MAPCI;MTC;PM;POST SMSR smsr_no
and pressing the Enter key.

where

smsr_no

is the number of the SMS-R to be posted

Example of a MAP response

SMSR 3	INSV	LINKS_00S	CSIDE 0	PSIDE 0
Unit0	Act	InSv		
Unit1	InAct	ISTb		

- 4 By observing the MAP display, ensure that the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 8

NT8X18 in an SMS-R (continued)

- 5 Switch the activity of the units by typing

>SWACT

and pressing the Enter key.

The system determines the type of SWACT it can perform and displays a confirmation prompt for the selected SWACT.

If SWACT	Do
can continue at this time	step 6
cannot continue at this time	step 29

- 6 Switch the activity of the unit by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SwAct passed	step 8
SwAct failed	step 7
SwAct failed. Reason: XPM SwActback	step 7
SwAct refused by SwAct controller	step 7

- 7 Return to the alarm clearing procedure to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the frame

- 8 Put a sign on the active unit with the words: *"Active unit—Do not touch."*

At the MAP display

- 9 Busy the inactive SMS-R unit by typing

>bsy UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the faulty SMS-R unit

NT8X18

in an SMS-R (continued)

- 10** Identify the RCC associated with the inactive SMS-R unit by typing
>TRNSL C
 and pressing the Enter key.

Example of a MAP response

```
LINK 0:RCC 1 6;Cap MS;Status:OK ;MsgCond:SPC,Restricted
LINK 1:RCC 1 7;Cap S;Status:OK
LINK 2:RCC 1 8;Cap MS;Status:OK ;MsgCond:OPN,Unrestricted
LINK 3:RCC 1 9;Cap S;Status:OK
```

Record the number of the RCC associated with the inactive SMS-R unit. In this example, RCC 1 is associated with the inactive SMS-R unit.

- 11** Access the RCC you just identified by typing
>Post Rcc unit_no
 and pressing the Enter key.

where

unit_no

is the number of the RCC unit

Example of a MAP response

```
RCC 1 INSV LINKS_00S CSIDE 0 PSIDE 0
Unit0 Act InSv
Unit1 InAct InSv
```

- 12** Display the RCC's P-side links connected to the inactive SMS-R unit by typing
>trns1 P
 and pressing the Enter key.

Example of a MAP response

```
LINK 0: RMM 4 0;Cap MS;Status:OK MsgCond:OPN
LINK 2: Carrier of Class-Trunk;Status:OK
LINK 3: Carrier of Class-Trunk;Status:OK
LINK 6: SMSR 0 0;Cap MS;Status:OK MsgCond:SPC,Restricted
LINK 7: SMSR 0 1;Cap S;Status:OK
LINK 8: SMSR 0 2;Cap MS;Status:OK MsgCond:OPN,Unrestricted
LINK 9: SMSR 0 3;Cap S;Status:OK
```

Record the link numbers of the links connected to the inactive SMS-R unit. SMS-R links 0 and 1 always correspond to SMS-R unit 0. SMS-R links 2 and 3 always correspond to SMS-R unit 1. Since SMS-R unit 0 was busied earlier in this procedure, the RCC's P-side links 6 and 7 should be busied in this example.

NT8X18 in an SMS-R (continued)

13

**CAUTION****Loss of subscriber service**

If the DMS-100 switch displays a message at the MAP terminal indicating the number of active calls on the SMS-R's C-side link to be busied, determine by local policy if these calls should be disconnected and respond accordingly to the confirmation request.

Busy the RCC's P-side links associated with the NT8X18 by typing

>BSY LINK link_no

and pressing the Enter key.

where

link_no

is the number of the link connected to the faulty NT8X18 card

See the note below, then repeat this command for each link to the faulty card.

Note: When the user enters the command string BSY LINK link_no, the system checks for active calls on the link. If there are active calls on the link, the first MAP display response identified below is displayed (where ## is the number of active calls). After the first MAP display response indicating the number of active calls, the user is prompted whether to continue. The response (Yes or No) must be based on operating company policy. If the user responds Yes, then the active calls will be disconnected. However, if there are no calls active on the link (as indicated by the second response), then the link is busied.

Example of a MAP response

active calls may be lost

or

There are no calls active on the link

NT8X18 in an SMS-R (continued)

At the frame

14



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the SMS-R. This protects the equipment against damage caused by static electricity. Do not replace more than one 8X18 card at a time.



DANGER

Equipment damage


Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


15 Remove the NT8X18 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

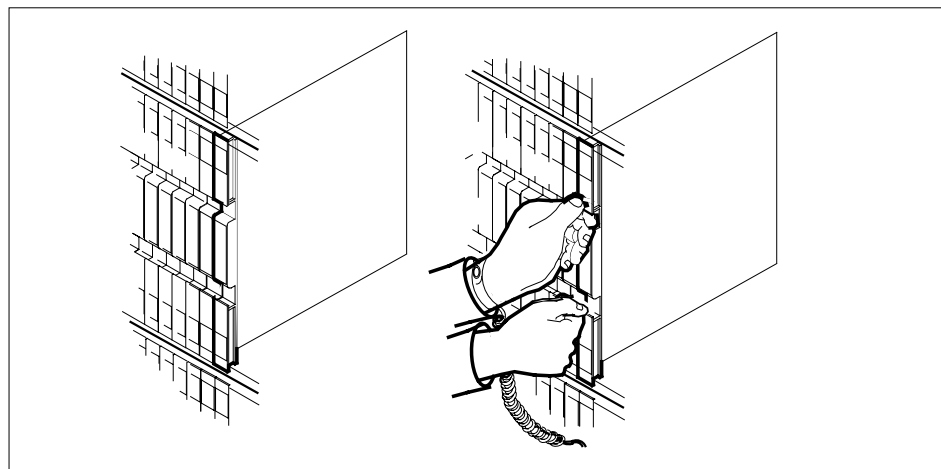


b Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

NT8X18
in an SMS-R (continued)

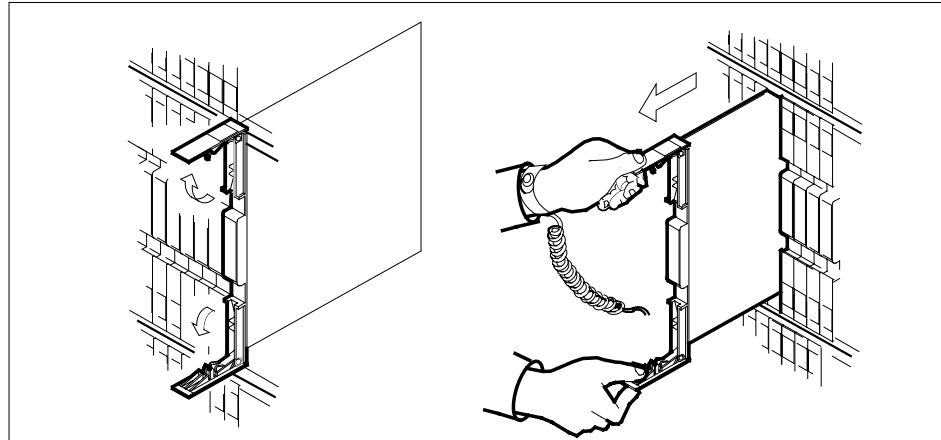


- c Verify that the replacement card has the same PEC, including suffix, as the card you just removed.

- 16** Open the locking levers on the replacement card.
Align the card with the slots in the shelf and gently slide the card into the shelf.

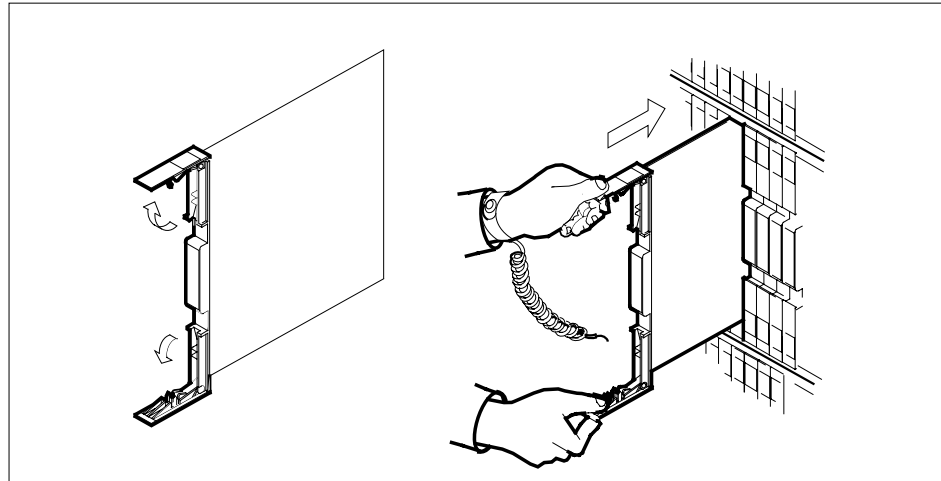

- 17** Seat and lock the card.
Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure that the card is fully seated in the shelf.
Close the locking levers.

NT8X18 in an SMS-R (continued)

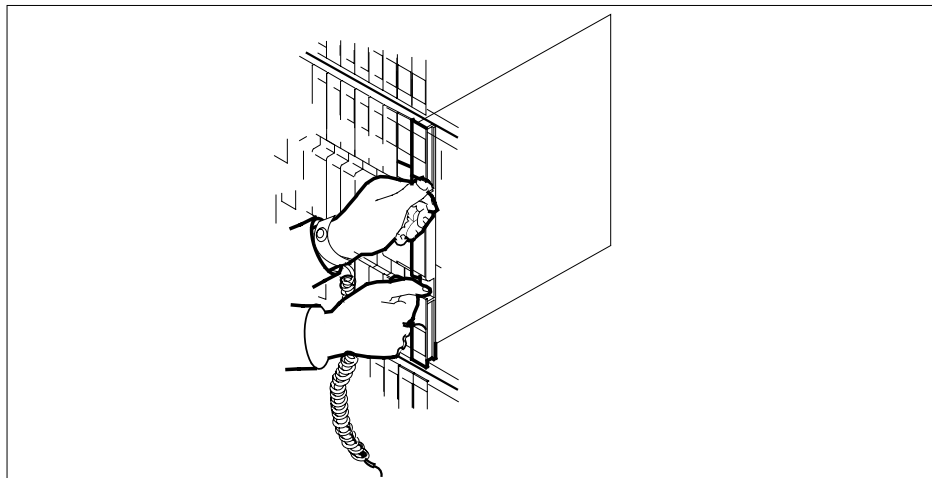

- 18** Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 26
other	step 19

At the MAP display

- 19** Test the busied P-side links by typing

>TST link_no

and pressing the Enter key.

where

link_no

is the number of the busied link connected to the faulty NT8X18 card

Repeat this command for each busied link to the faulty card.

If TST	Do
passes	step 20
fails	step 27

- 20** Return the busied P-side links to service by typing

>RTS link_no

and pressing the Enter key.

where

NT8X18 in an SMS-R (continued)

link_no

is the number of the busied link connected to the faulty NT8X18 card

Repeat this command for each busied link to the faulty card.

If RTS	Do
passes	step 21
fails	step 27

- 21** Access the inactive SMS-R unit by typing

>POST SMSR smsr_no

and pressing the Enter key.

where

smsr_no

is the number of the SMS-R to be posted

Example of a MAP response

```
SMSR 3   INSV   LINKS_00S   CSIDE 0   PSIDE 0
  Unit0   InAct   ManB
  Unit1   Act    InSv
```

- 22** Return the inactive SMS-R unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the faulty SMS-R unit

If RTS	Do
passes	step 23
fails	step 27

At the frame

- 23** Remove the sign from the active SMS-R unit.
- 24** Send any faulty cards for repair according to local procedure.
- 25** Note the following in office records according to local policy:
- the date the card was replaced
 - the serial number of the card
 - the symptoms that prompted replacement of the card
- Proceed to step 28.

NT8X18

in an SMS-R (end)

- 26 Return to *Alarm Clearing Procedures* section of this manual or to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 27 Obtain further assistance in replacing this card by contacting personnel responsible for a higher level of support.
- 28 You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.
- 29 For further assistance with switch of activity, contact the personnel responsible for the next level of support.

Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

NTAX74
in an RSC-S (DS-1) Model A RCC2

Application

Use this procedure to replace an NTAX74 card in an RCC2.

PEC	Suffixes	Name
NTAX74	AA	Cellular Access Processor with 16Mb Memory

Common procedures

Does not apply


Action


This procedure contains a summary flowchart and a list of steps. Use the flowchart to review the procedure. Follow the steps to perform the procedure.

NTAX74

in an RSC-S (DS-1) Model A RCC2 (continued)

Summary of card replacement procedure for an NTAX74 card in RSC-S RCC2

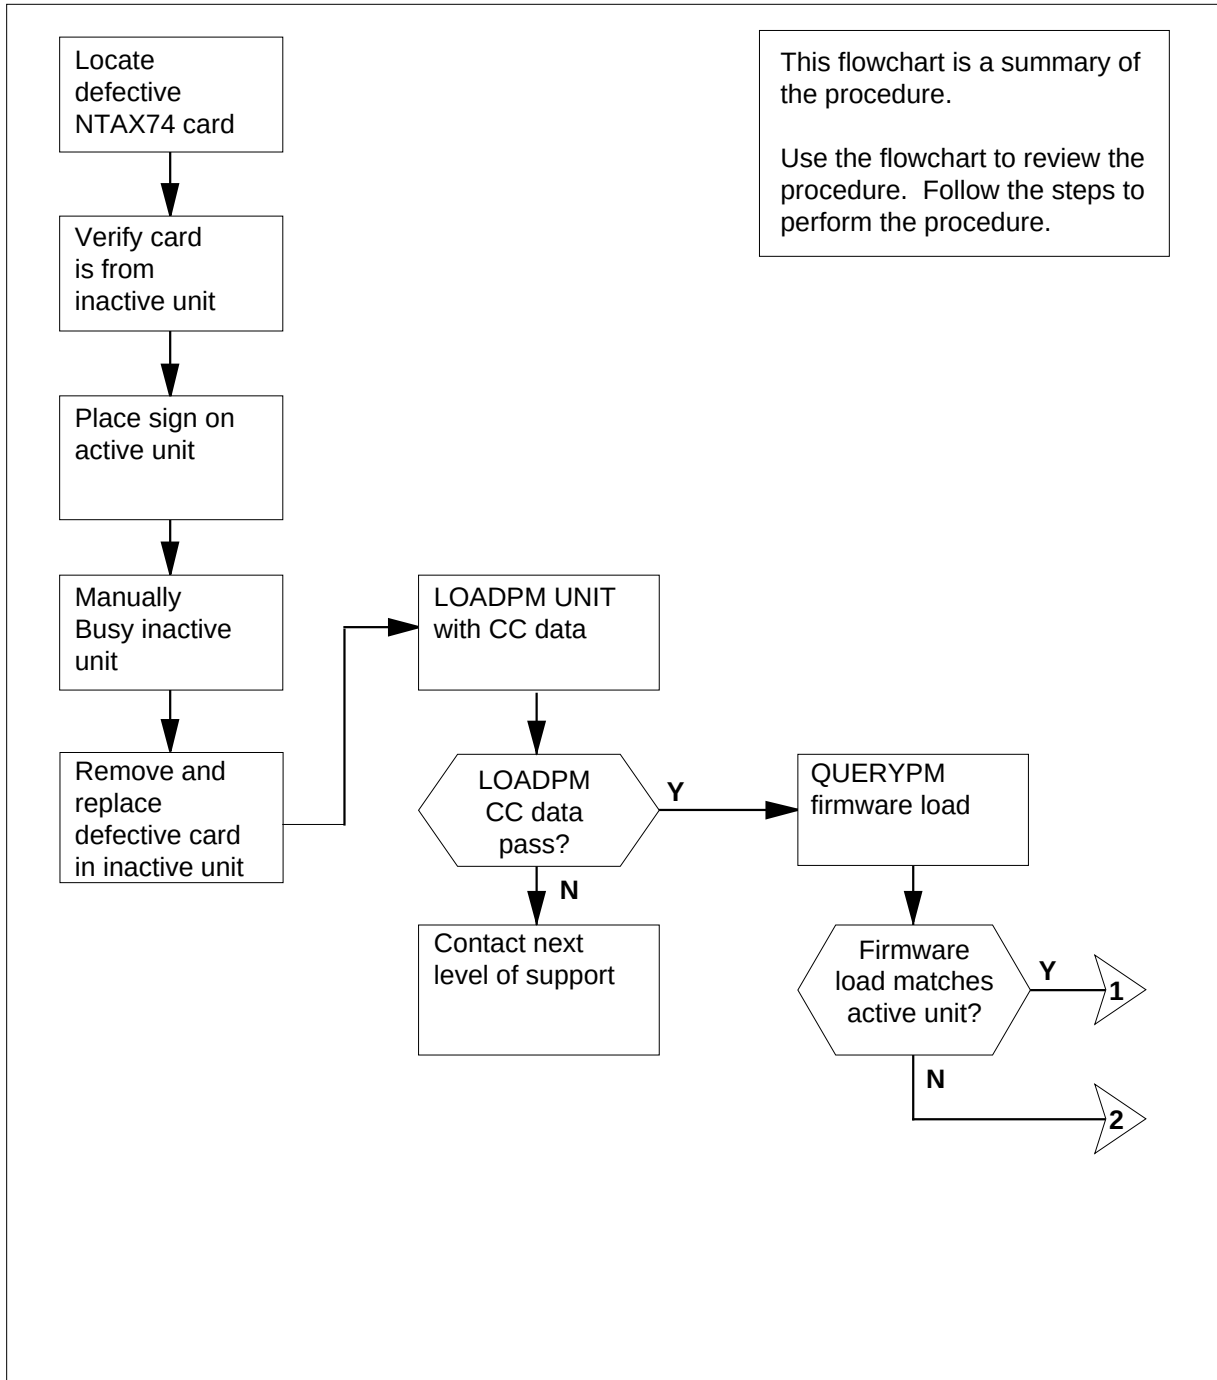

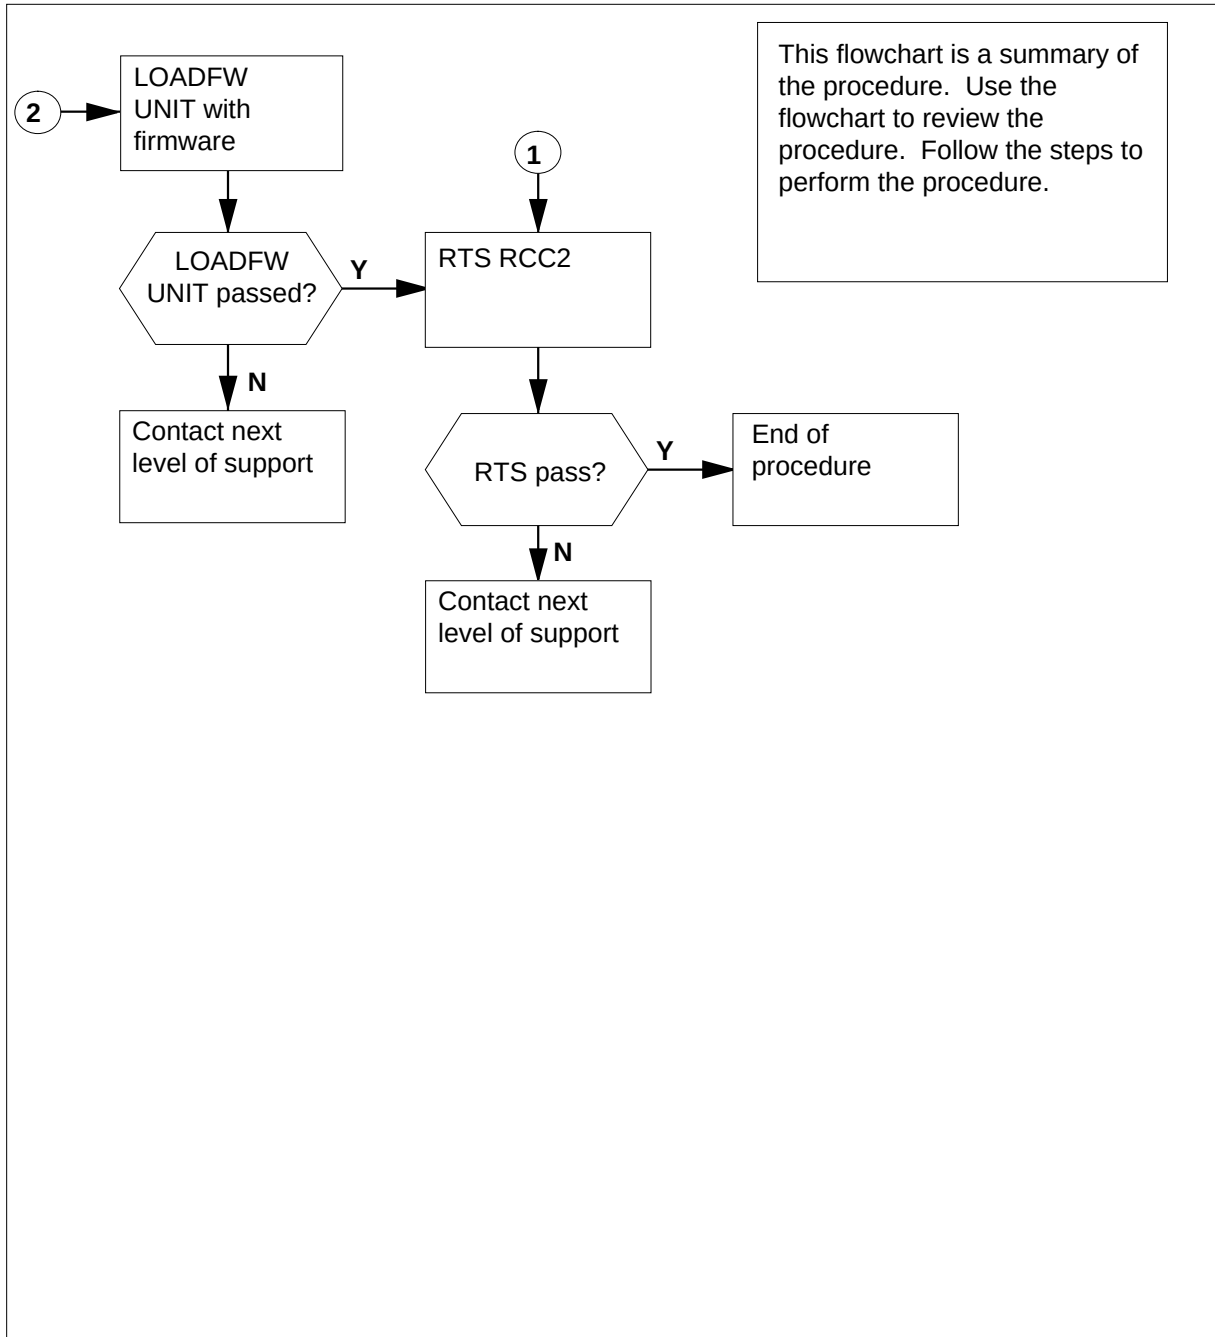NTAX74
in an RSC-S (DS-1) Model A RCC2 (continued)**Summary of card replacement procedure for an NTAX74 card in RSC-S RCC2 (continued)**

NTAX74 in an RSC-S (DS-1) Model A RCC2 (continued)

To replace an NTAX74 in RSC-S RCC2

At your current location

- 1 Proceed if one of the following conditions apply:
 - a step in a maintenance procedure directed you to this card replacement procedure
 - you use this procedure to verify or accept cards
 - the maintenance support group directed you to this procedure
- 2



WARNING

Loss of service

When you replace a card in an RCC2, make sure the unit in which you replace the card is *inactive* and the mate unit is *active*.

Obtain an NTAX74 replacement card. Make sure the replacement card has the same product engineering code (PEC) and PEC suffix, as the card to be removed.

At the MAP terminal

- 3 To make sure that the current MAP display is at the PM level and to post the RCC2, type:

>MAPCI;MTC;PM;POST RCC2 rcc2_no

and press the Enter key.

where

rcc2_no

is the number of the RCC2 to be busied

Example of a MAP display:

NTAX74

in an RSC-S (DS-1) Model A RCC2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1RCC2	.	.	.	.	.
RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	2	0	2	25	
2 Post_	RCC2		0	0	0	0	1	1	
3 ListSet									
4	RCC2	0	ISTb	Links_00S:	CSide	0, PSide	0		
5 TRNSL_	Unit0:		Inact	SysB					
6 TST_	Unit1:		Act	InSv					
7 BSY_									
8 RTS_									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13 SwAct									
14 QueryPM									
15									
16 IRLINK									
17 Perform									
18									

- 4 To verify the defective NTAX74 card is in the inactive unit, make sure the light-emitting diode (LED) labeled ACTIVE is OFF or check the MAP display.

If the defective card	Do
is in the active unit	step 5
is in the inactive unit	step 9

- 5 To cause the processing activity to perform a Switch of Activity (SWACT) to the inactive unit, type:

>SWACT

and press the Enter key.

A confirmation prompt for the SWACT command appears at the MAP terminal.

If SWACT	Do
cannot continue at this time	step 6
can continue at this time	step 7

- 6 To reject the prompt to SWACT the units, type:

>NO

and press the Enter key.

The system stops the SWACT.

NTAX74

in an RSC-S (DS-1) Model A RCC2 (continued)

- 7 Return to step 5 during periods of low traffic.
- To confirm the system prompt, type:
- >YES**
- and press the Enter key.
- The system runs a pre-SWACT audit to determine if the inactive unit can accept activity accurately.
- Note:** A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before you proceed with the next maintenance action.

If the message	Do
is SWACT passed	step 9
is SWACT failed Reason: XPM SWACTback	step 8
is SWACT refused by SWACT Controller	step 8

- 8 To clear the alarm condition on the inactive unit. Return to the *Alarm Clearing Procedures* when you clear the alarm, return to step 1 of this procedure.

At the RCE frame

- 9 Place a sign with the words *Active unit-Do not touch* on the active unit. Do not attach this sign with magnets or tape.

At the MAP terminal

- 10 Check the MAP display and determine the state of the inactive unit.

If state	Do
is SysB, CBsy, ISTb, or InSv	step 11
is ManB	step 12

- 11 To busy the inactive peripheral module (PM) unit, type
- >BSY INACTIVE**
- and press the Enter key.

- 12 To prevent the PM from trapping, type:
- >PMRESET UNIT rcc2_unit_no NORUN**
- and press the Enter key.
- where

rcc2_unit_no
is the number of the inactive RCC2 unit zero or one

NTAX74 in an RSC-S (DS-1) Model A RCC2 (continued)

At the RCE frame

13



WARNING

Static electricity damage

Before you remove cards, wear a wrist strap that connects to the wrist-strap grounding point on the left side of the frame supervisory panel (FSP) of the RCC2. This wrist strap protects the equipment against static electricity damage.



DANGER

Equipment damage


Take the following precautions when you remove or insert a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards in the slots.

Wear a wrist strap.

14 The following figures show removing the NTAX74 card:


a Locate the card to be removed on the appropriate shelf.

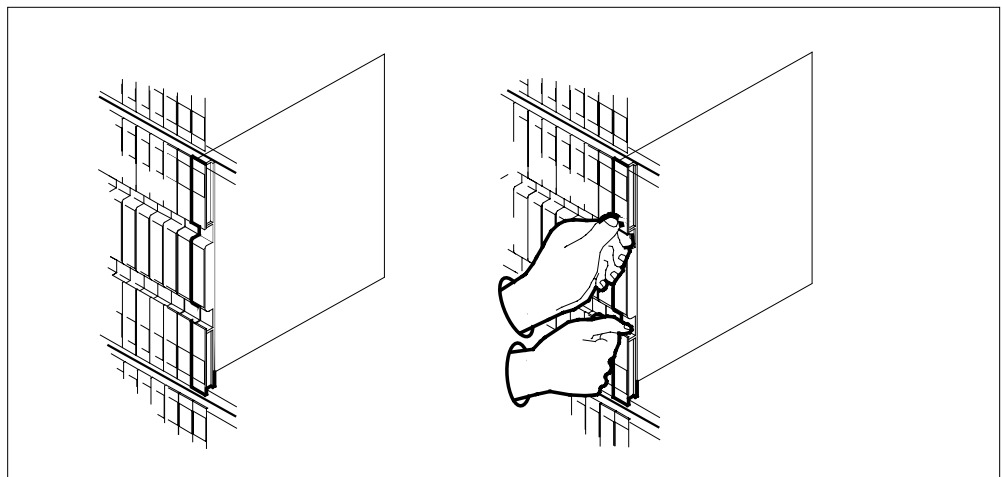

b Open the locking levers on the card to be replaced. Carefully pull the card toward you until the card clears the shelf.

NTAX74

in an RSC-S (DS-1) Model A RCC2 (continued)

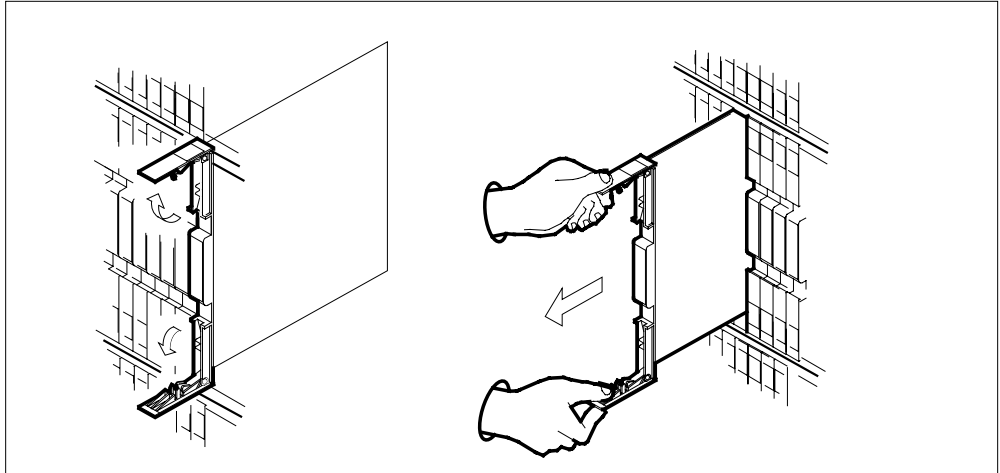

- c Make sure the replacement card has the same PEC and PEC suffix, as the card you removed. Make sure all replacement card DIP switch settings match settings of the card you removed.

Note: If the NTAX74 circuit card has a DIP switch, set the DIP switch S1 to the common peripheral module (CPM).

15



DANGER


Possible loss of P-side nodes

When you install the replacement NTAX74, monitor the LEDs on the faceplate of the NTAX74 for the following indicators: 1. The INSV and ESA LEDs come ON and remain ON until loading starts. 2. The ACT LED can come ON and light for less than 1 s. If the ACT LED remains ON for more than 1 s, remove the NTAX74 circuit card and return to this step. If the NTAX74 circuit card remains with both units that have an active processor, a condition of dual activity occurs. This condition causes the loss of P-side nodes.


Open the locking levers on the replacement card.

- a Align the card with the slots in the shelf.
b Carefully slide the card in the shelf.

NTAX74
in an RSC-S (DS-1) Model A RCC2 (continued)

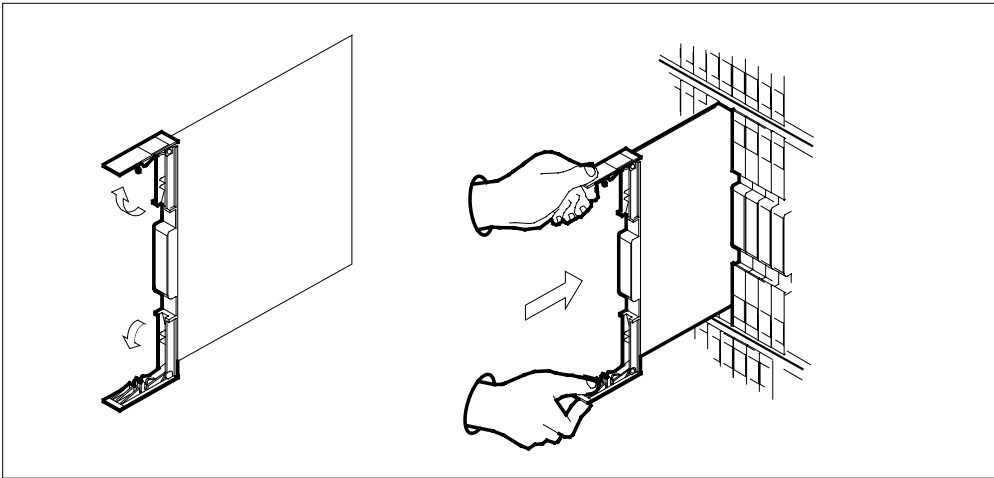

- 16** Seat and lock the card.
- a** Use your fingers or thumbs to push on the upper and lower edges of the faceplate. Make sure the card sits completely in the shelf.
 - b** Close the locking levers.

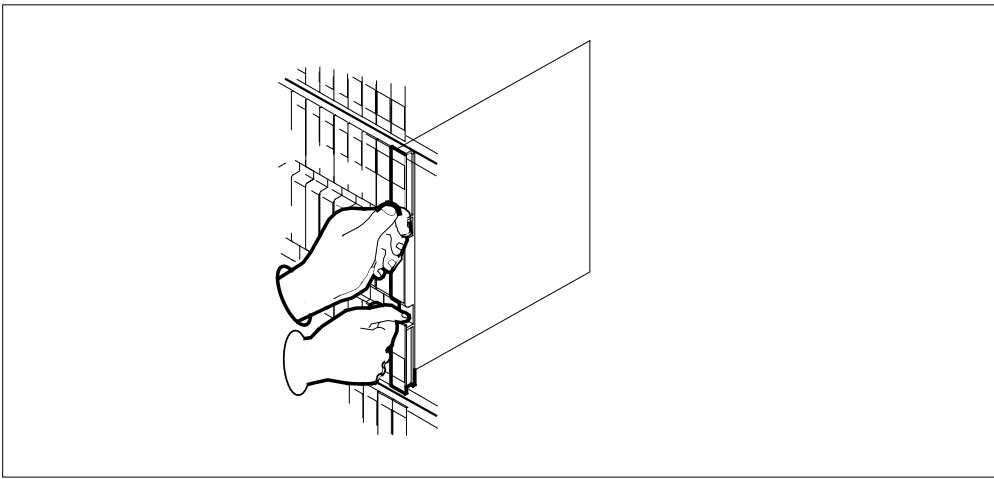

- 17** Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 26
other	step 18

NTAX74**in an RSC-S (DS-1) Model A RCC2** (continued)*At the MAP terminal*

- 18** To load the inactive RCC2 unit, type:

>LOADPM INACTIVE

and press the Enter key.

If load	Do
passed	step 19
failed	step 27

- 19** To query the XPM counters for the firmware load on the NTAX74, type:

>QUERYPM CNTRS

and press the Enter key.

Example of a MAP response

Unsolicited MSG limit = 250, Unit 0 = 0, Unit 1 = 0

Unit 0:

Ram Load: WRI07BE

EProm Version: AB02

EEPROM Load: Loadable: AX74XE01, Executable: AX74XE01

CMR Load: CMR03A

CAP:AX74AA

Unit 1:

Ram Load: WRI07BE

EProm Version: AB02

EEPROM Load: Loadable: [AX74XE01], Executable: [AX74XE01]

CMR Load: CMR03A

CAP:AX74AA

↑
NTAX74 firmware load name

If the firmware	Do
is valid	step 22
is invalid	step 20

- 20** To load the inactive unit firmware type:

>LOADFW INACTIVE

and press the Enter key.

If the LOADFW	Do
passed	step 21
failed	step 27

NTAX74

in an RSC-S (DS-1) Model A RCC2 (end)

- 21** To upgrade the inactive unit firmware type;

>LOADFW INACTIVE UPGRADE

and press the Enter key.

If the LOADFW UPGRADE	Do
passed	step 22
failed	step 27

- 22** To return the inactive RCC2 unit to service, type:

>RTS UNIT unit_no

and press the Enter key.

where

unit_no
is the number of the inactive RCC2 unit (0 or 1)

If RTS	Do
passes	step 23
fails	step 27

At the RCE frame

- 23** Remove the sign from the active RCC2 unit.
- 24** Send the defective cards for repair according to local procedure.
- 25** Note the following in the office records:
- date the card is replaced
 - serial number of the card
 - problems that prompted replacement of the card.
- Go to step 27.
- 26** Return to the Clearing an *Alarm Procedure* or other procedure that directed you to this procedure. If necessary, go to the point where the system produced the defective card list. Identify the next defective card on the list, and go to the appropriate procedure for that card in this manual.
- 27** For additional help, contact the next level of support.
- 28** This procedure is complete. Return to the maintenance procedure that directed you to this card replacement procedure. Continue as directed.

NTAX74 in an RSC-S (DS-1) Model B RCC2

Application

Use this procedure to replace an NTAX74 card in an RCC2.

PEC	Suffixes	Name
NTAX74	AA	Cellular Access Processor with 16Mb Memory

Common procedures


Does not apply

Action

This procedure contains a summary flowchart and a list of steps. Use the flowchart to review the procedure. Follow the steps to perform the procedure.

NTAX74 in an RSC-S (DS-1) Model B RCC2 (continued)


Summary of card replacement procedure for an NTAX74 card in RSC-S RCC2

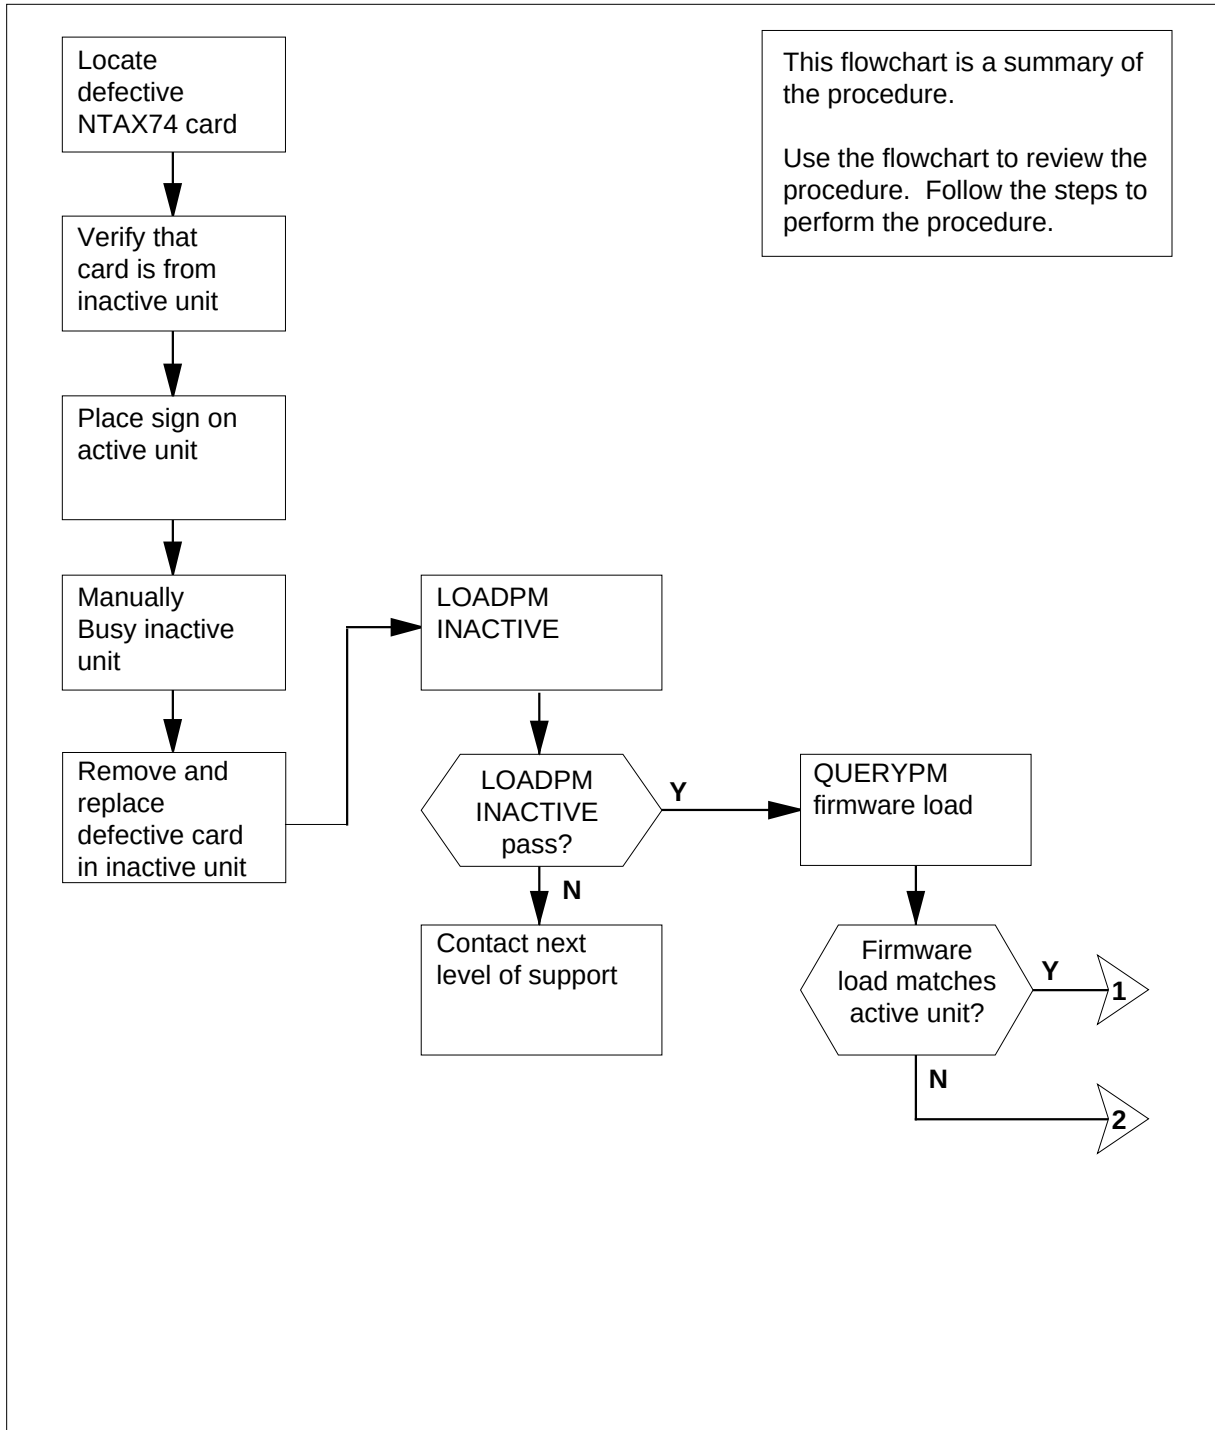

NTAX74

in an RSC-S (DS-1) Model B RCC2 (continued)

Summary of card replacement procedure for an NTAX74 card in RSC-S RCC2 (continued)

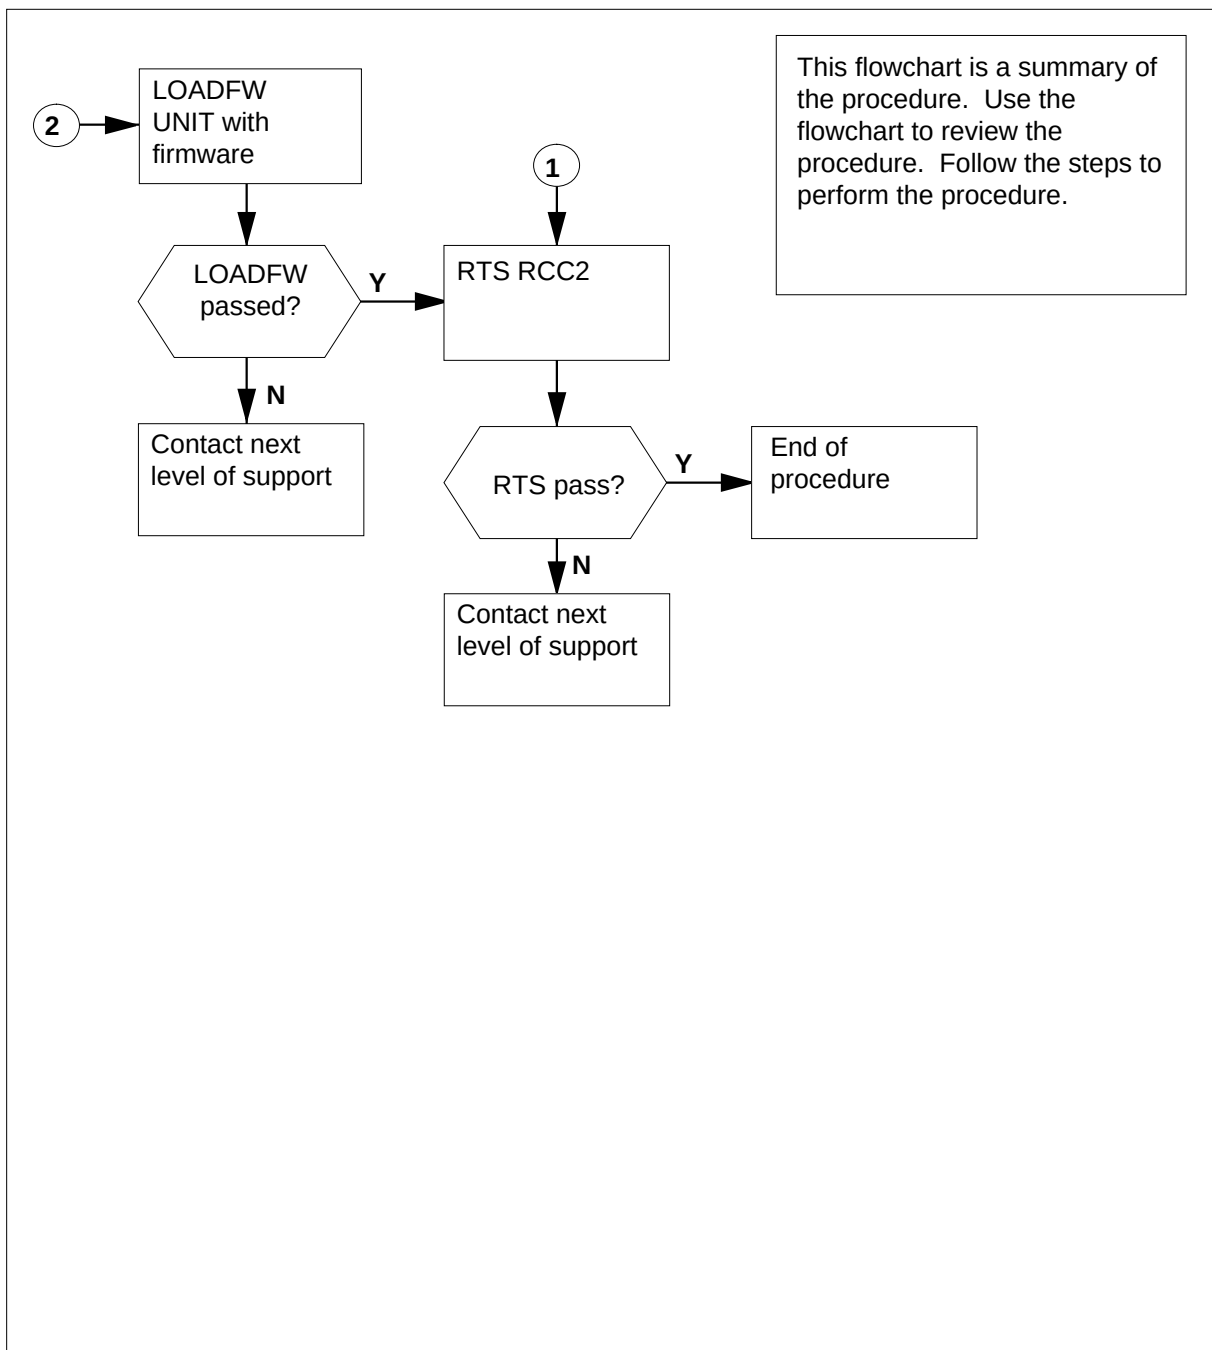

NTAX74

in an RSC-S (DS-1) Model B RCC2 (continued)

To replace an NTAX74 in RSC-S RCC2

At your current location

- 1 Proceed if one of the following conditions apply:
 - a step in a maintenance procedure directed you to this card replacement procedure
 - you use this procedure to verify or accept cards
 - the maintenance support group directed you to this procedure.
- 2

**WARNING****Loss of service**

When you replace a card in an RCC2, make sure the unit in which you replace the card is *inactive* and the mate unit is *active*.

Obtain an NTAX74 replacement card. Make sure the replacement card has the same product engineering code (PEC) and PEC suffix, as the card to be removed.

At the MAP terminal

- 3 To make sure the current MAP display is at the peripheral module (PM) level and to post the RCC2, type:

>MAPCI;MTC;PM;POST RCC2 rcc2_no

and press the Enter key.

where

rcc2_no

is the number of the RCC2 to be busied

Example of a MAP display:

NTAX74**in an RSC-S (DS-1) Model B RCC2** (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1RCC2	.	.	.	.	.
RCC2			SysB	ManB	OffL		CBsy	ISTb	InSv
0 Quit	PM		0	0	2		0	2	25
2 Post_	RCC2		0	0	0		0	1	1
3 ListSet									
4	RCC2	0	ISTb	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:		Inact	SysB					
6 TST_	Unit1:		Act	InSv					
7 BSY_									
8 RTS_									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13 SwAct									
14 QueryPM									
15									
16 IRLINK									
17 Perform									
18									

- 4** To verify the defective NTAX74 card is in the inactive unit, make sure the light-emitting diode (LED) labeled ACTIVE is OFF or check the MAP display.

If the defective card	Do
is in the active unit	step 5
is in the inactive unit	step 9

- 5** To switch the processing activity (SWACT) to the inactive unit, type:
>SWACT
 and press the Enter key.
 A confirmation prompt for the SWACT command appears at the MAP terminal.

If SWACT	Do
cannot continue at this time	step 6
can continue at this time	step 7

- 6** To reject the prompt to SWACT the units, type:
>NO
 and press the Enter key.
 The system stop the SWACT.
 Return to step 5 during periods of low traffic.

NTAX74

in an RSC-S (DS-1) Model B RCC2 (continued)

- 7 To confirm the system prompt, type:

>YES

and press the Enter key.

The system runs a pre-SWACT audit to determine if the inactive unit can accept activity accurately.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before you proceed with the next maintenance action.

If the message	Do
is SWACT passed	step 9
is SWACT failed Reason: XPM SWACTback	step 8
is SWACT refused by SWACT Controller	step 8

- 8 To clear the alarm condition on the inactive unit return to the *Clearing an Alarm Procedures* when you clear the alarm, return to step 1 of this procedure.

At the RCE frame

- 9 Place a sign with the words *Active unit-Do not touch* on the active unit. Do not attach this sign with magnets or tape.

At the MAP terminal

- 10 Check the MAP display and determine the state of the inactive unit.

If the state	Do
is SysB, CBsy, ISTb, or InSv	step 11
is ManB	step 12

- 11 To busy the inactive PM unit, type:

>BSY INACTIVE

and press the Enter key.

- 12 To prevent the PM from trapping, type:

>PMRESET UNIT rcc2_unit_no NORUN

and press the Enter key.

where

rcc2_unit_no

is the number of the inactive RCC2 unit zero and one

NTAX74 in an RSC-S (DS-1) Model B RCC2 (continued)

At the RCE frame

13



WARNING

Static electricity damage

Before you remove cards, wear a wrist strap that connects to the wrist-strap grounding point on the left side of the frame supervisory panel (FSP) of the RCC2. This protects the equipment against static electricity damage.



DANGER

Equipment damage


Take the following precautions when you remove or insert a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Wear a wrist strap.


14 The following figures show how to remove the NTAX74 card:

a Locate the card to be removed on the appropriate shelf.

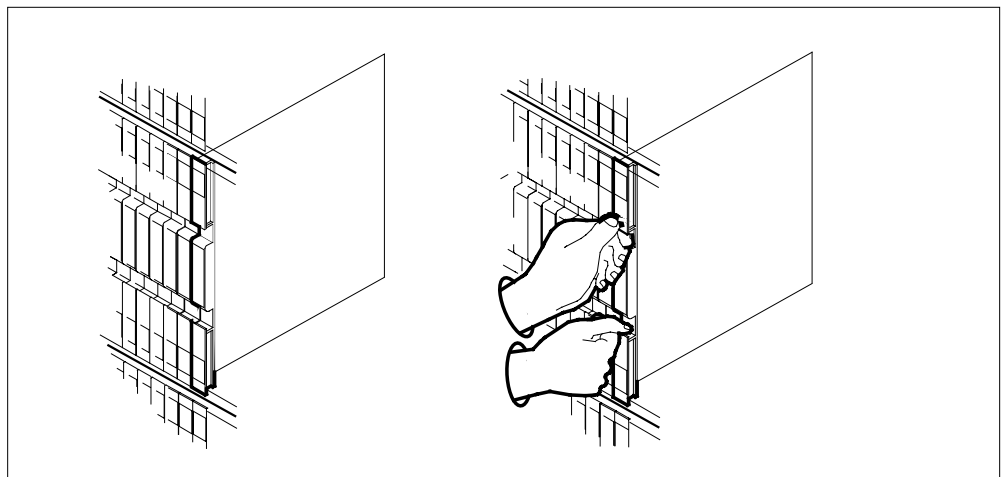

b Open the locking levers on the card to be replaced. Carefully pull the card toward you until the card clears the shelf.

NTAX74 in an RSC-S (DS-1) Model B RCC2 (continued)

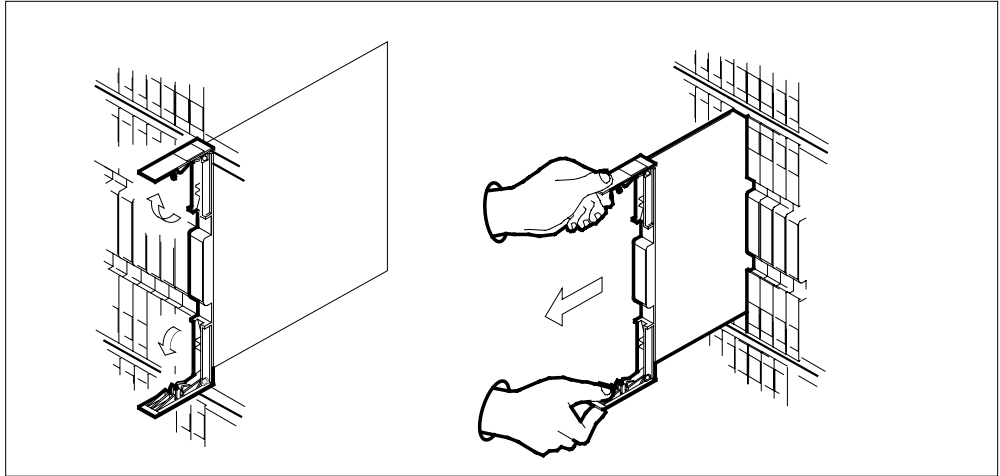

- c** Make sure the replacement card has the same PEC and PEC suffix, as the card you removed. Make sure all replacement card DIP switch settings match settings of the card you removed.

Note: If the NTAX74 circuit card has a DIP switch, set the DIP switch S1 to the common peripheral module (CPM).

15



DANGER

Possible loss of P-side nodes


When you install the replacement NTAX74, monitor the LEDs on the faceplate of the NTAX74 for the following indicators: 1. The INSV and ESA LEDs come ON and remain ON until loading begins. 2. The ACT LED can come ON and light for less than 1 s. If the ACT LED remains ON for more than 1 s, remove the NTAX74 circuit card and return to this step. If the NTAX74 circuit card remains with both units that have an active processor, a condition of dual activity occurs. This condition causes the loss of P-side nodes.

Open the locking levers on the replacement card.


- a** Align the card with the slots in the shelf.
- b** Carefully slide the card in the shelf.

NTAX74

in an RSC-S (DS-1) Model B RCC2 (continued)

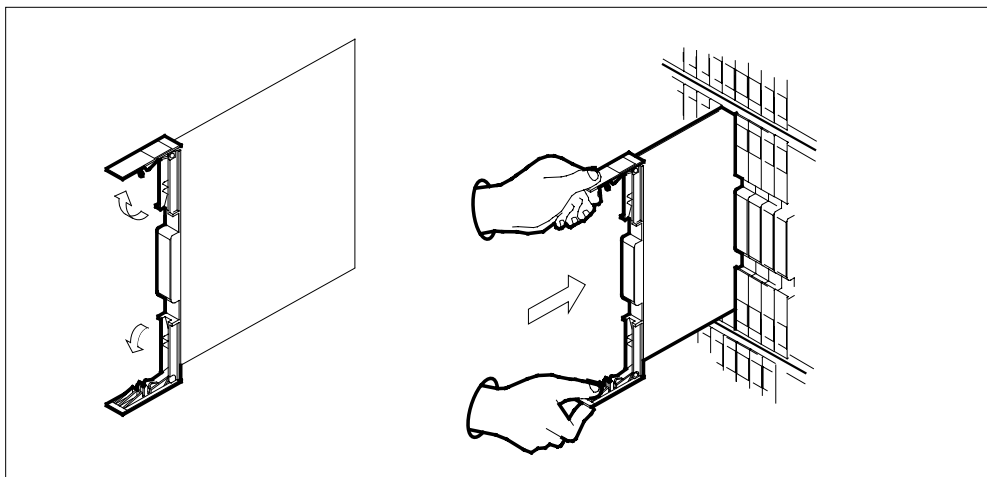

- 16** Seat and lock the card.
- a** Use your fingers or thumbs to push on the upper and lower edges of the faceplate. Make sure the card sits completely in the shelf.
 - b** Close the locking levers.

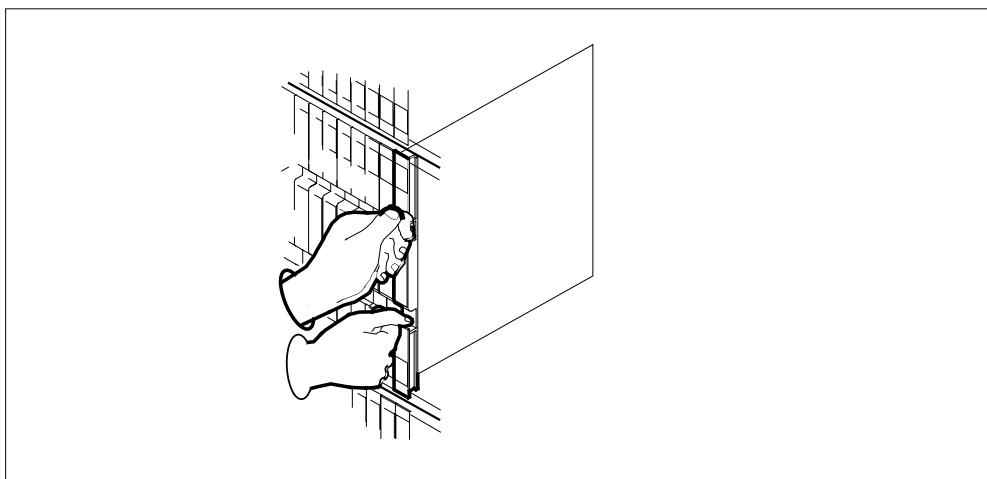

- 17** Use the following information to determine the next step:

If you were directed here from	Do
Clearing an alarm procedures	step 26
other	step 18

NTAX74

in an RSC-S (DS-1) Model B RCC2 (continued)

At the MAP terminal

- 18** To load the inactive RCC2 unit, type:

>LOADPM INACTIVE

and press the Enter key.

If load	Do
passed	step 19
failed	step 27

- 19** To query the XMS-based peripheral module (XPM) counters for the firmware load on the NTAX74, type:

>QUERYPM CNTRS

and press the Enter key.

Example of a MAP response

Unsolicited MSG limit = 250, Unit 0 = 0, Unit 1 = 0

Unit 0:

Ram Load: WRI07BE

EPROM Version: AB02

EEPROM Load: Loadable: AX74XE01, Executable: AX74XE01

CMR Load: CMR03A

CAP:AX74AA

Unit 1:

Ram Load: WRI07BE

EPROM Version: AB02

EEPROM Load: Loadable: [AX74XE01], Executable: [AX74XE01]

CMR Load: CMR03A

CAP:AX74AA

↑ NTAX74 firmware load name ↑

If firmware	Do
is valid	step 22
is invalid	step 20

- 20** To load the inactive unit firmware, type:

>LOADFW INACTIVE

and press the Enter key.

If LOADFW	Do
passed	step 21
failed	step 27

NTAX74

in an RSC-S (DS-1) Model B RCC2 (end)

- 21 To upgrade the inactive unit firmware, type:

>LOADFW INACTIVE UPGRADE

and press the Enter key.

If LOADFW UPGRADE	Do

passed	step 22

failed	step 27

- 22 To return the inactive RCC2 unit to service, type:

>RTS UNIT unit_no

and press the Enter key.

where

unit_no

is the number of the inactive RCC2 unit (0 or 1)

If RTS	Do

passes	step 23

fails	step 27

At the RCE frame

- 23 Remove the sign from the active RCC2 unit.

- 24 Send the defective cards for repair according to local procedure.

- 25 Note the following in the office records:

- date the card is replaced
- serial number of the card
- problems that prompted replacement of the card.

Go to step 27.

- 26 Return to the *Alarm Clearing Procedure* or other procedure that directed you to this procedure. If necessary, go to the point where the system produced the defective card list. Identify the next defective card on the list, and go to the appropriate procedure for that card in this manual.

- 27 For additional help, contact the next level of support.

- 28 This procedure is complete. Return to the maintenance procedure that directed you to this card replacement procedure. Continue as directed.

NTAX74
in an RSC-S (PCM-30) Model A RCO2

Application

Use this procedure to replace an NTAX74 card in an RCO2.

PEC	Suffixes	Name
NTAX74	AA	Cellular Access Processor with 16Mb Memory

Common procedures


Does not apply

Action

This procedure contains a summary flowchart and a list of steps. Use the flowchart to review the procedure. Follow the steps to perform the procedure.


NTAX74 in an RSC-S (PCM-30) Model A RCO2 (continued)

Summary of card replacement procedure for an NTAX74 card in RSC-S RCO2

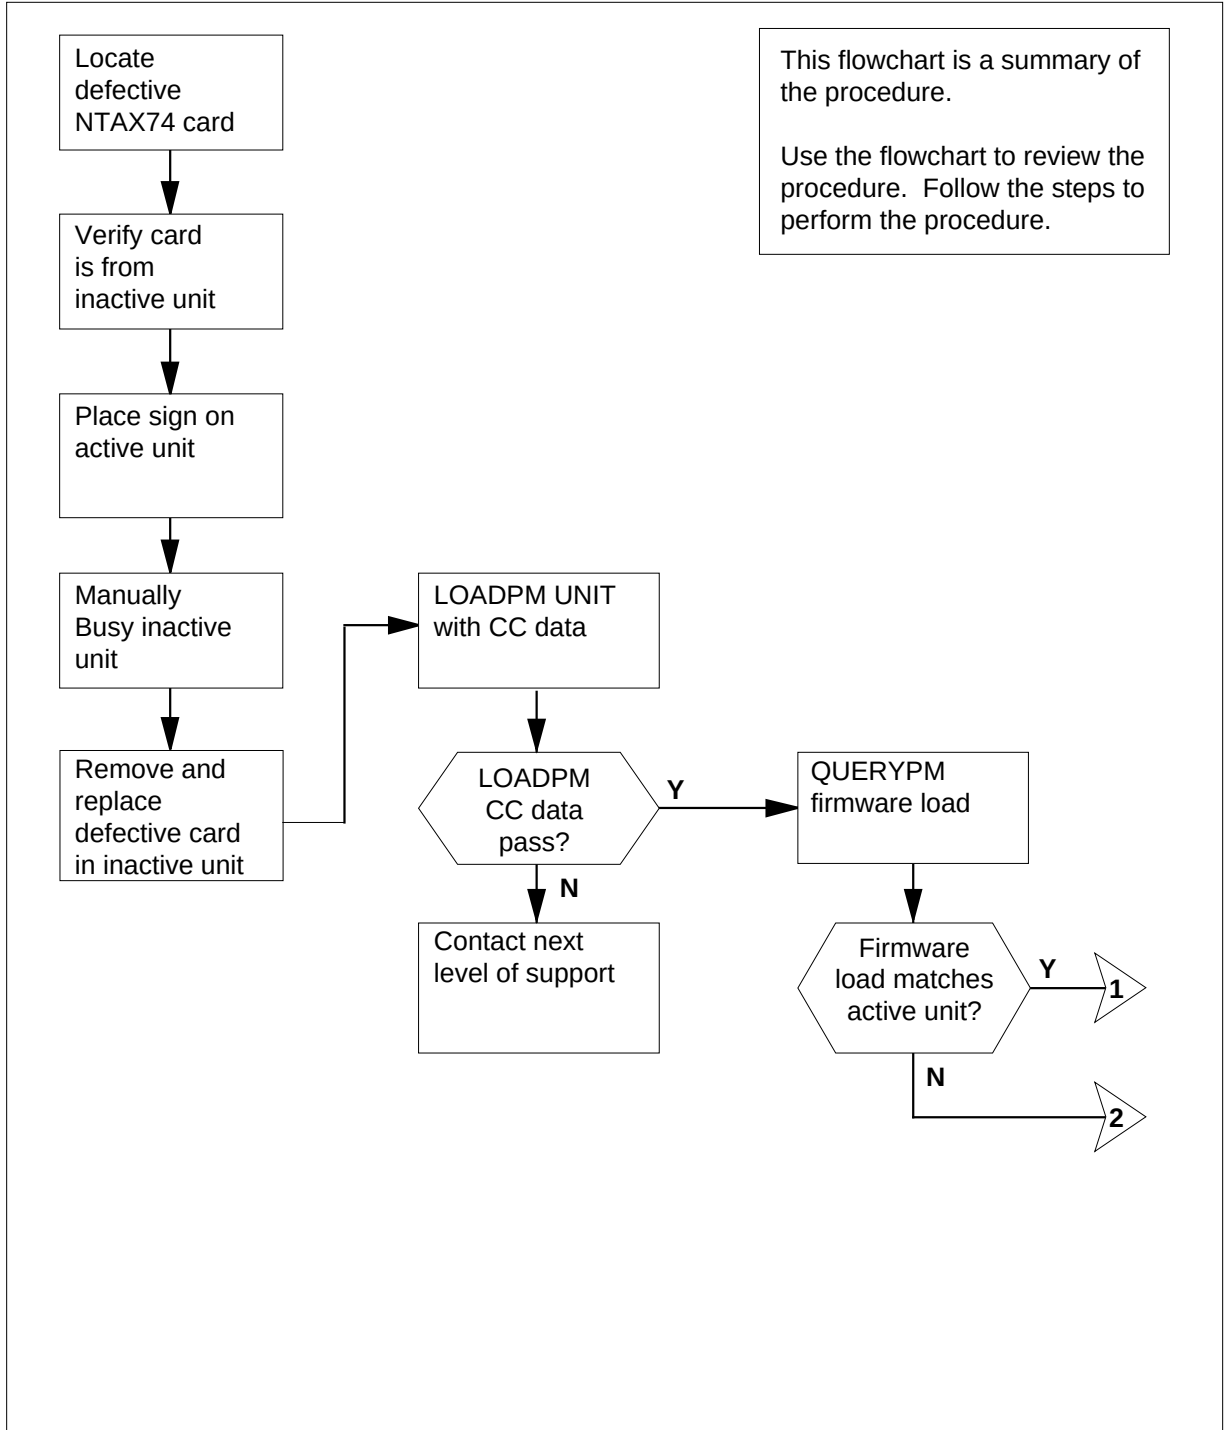

NTAX74 in an RSC-S (PCM-30) Model A RCO2 (continued)

Summary of card replacement procedure for an NTAX74 card in RSC-S RCO2 (continued)

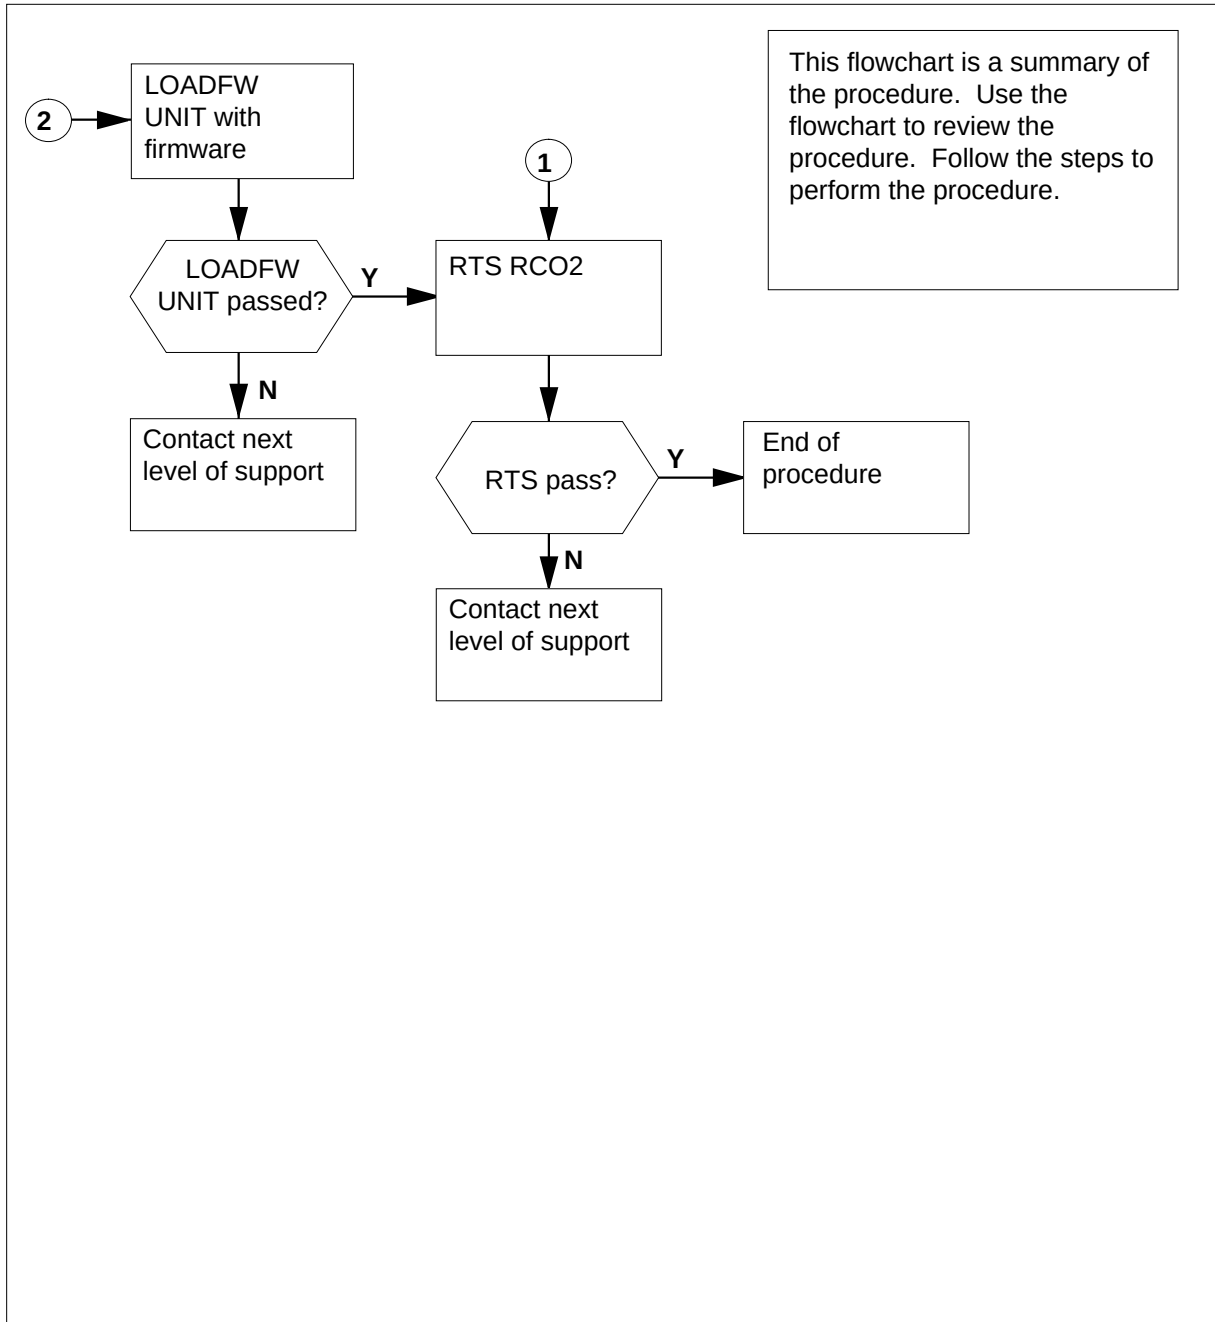

NTAX74 in an RSC-S (PCM-30) Model A RCO2 (continued)

To replace a/an NTAX74 in RSC-S RCO2

At your current location

- 1 Proceed if one of the following conditions apply:
 - a step in a maintenance procedure directed you to this card replacement procedure
 - you use this procedure to verify or accept cards
 - the maintenance support group directed you to this procedure.
- 2



WARNING

Loss of service

When you replace a card in an RCO2, make sure the unit in which you replace the card is *inactive* and the mate unit is *active*.

Obtain an NTAX74 replacement card. Make sure the replacement card has the same product engineering code (PEC) and (PEC) suffix, as the card to be removed.

At the MAP terminal

- 3 To make sure the current MAP display is at the peripheral module (PM) level and to post the RCO2, type:

>MAPCI;MTC;PM;POST RCO2 rco2_no

and press the Enter key.

where

rco2_no

is the number of the RCO2 to be busied

Example of a MAP display:

NTAX74

in an RSC-S (PCM-30) Model A RCO2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1RCO2	.	.	.	.	.
RCO2			SysB	ManB	OffL		CBsy	ISTb	InSv
0 Quit	PM		0	0	2		0	2	25
2 Post_	RCO2		0	0	0		0	1	1
3 ListSet									
4	RCO2	0	ISTb	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:		Inact	SysB					
6 TST_	Unit1:		Act	InSv					
7 BSY_									
8 RTS_									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13 SwAct									
14 QueryPM									
15									
16 IRLINK									
17 Perform									
18									

- 4** To verify the defective NTAX74 card is in the inactive unit, make sure the light-emitting diode (LED) labeled ACTIVE is OFF or check the MAP display.

If the defective card	Do
is in the active unit	step 5
is in the inactive unit	step 9

- 5** To switch the processing activity (SWACT) to the inactive unit, type:
>SWACT
 and press the Enter key.
 A confirmation prompt for the SWACT command appears at the MAP terminal.

If SWACT	Do
cannot continue at this time	step 6
can continue at this time	step 7

- 6** To reject the prompt to SWACT the units, type:
>NO
 and press the Enter key.
 The system stops the SWACT.
 Return to step 5 during periods of low traffic.

NTAX74

in an RSC-S (PCM-30) Model A RCO2 (continued)

- 7 To confirm the system prompt, type:
>YES
 and press the Enter key.
 The system runs a pre-SWACT audit to determine if the inactive unit can accept activity accurately.
Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before you proceed with the next maintenance action.

If the message	Do
is SWACT passed	step 9
is SWACT failed Reason: XPM SWACTback	step 8
is SWACT refused by SWACT Controller	step 8

- 8 To clear the alarm condition on the inactive unit return to the *Clearing an Alarm Procedures*. When you clear the alarm, return to step 1 of this procedure.

At the RCE frame

- 9 Place a sign with the words *Active unit-Do not touch* on the active unit. Do not attach this sign with magnets or tape.

At the MAP terminal

- 10 Check the MAP display and determine the state of the inactive unit.

If state	Do
is SysB, CBsy, ISTb, or InSv	step 11
is ManB	step 13

- 11 To busy the inactive PM unit, type:
>BSY UNIT unit_no
 and press the Enter key.
where
unit_no
 is the number of the inactive RCO2 unit zero or one
- 12 To prevent the PM from trapping, type:
>PMRESET UNIT rco2_unit_no NORUN
 and press the Enter key.

NTAX74 in an RSC-S (PCM-30) Model A RCO2 (continued)

where

rco2_unit_no

is the number of the inactive RCO2 unit zero or one

At the RCE frame

13



WARNING

Static electricity damage

Before you remove cards, wear a wrist strap that connects to the wrist-strap grounding point on the left side of the frame supervisory panel (FSP) of the RCO2. This protects the equipment against static electricity damage



DANGER

Equipment damage


Take the following precautions when you remove or insert a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards in the slots.

Wear a wrist strap.


14 The following figures show how to remove the NTAX74 card:

a Locate the card to be removed on the appropriate shelf.

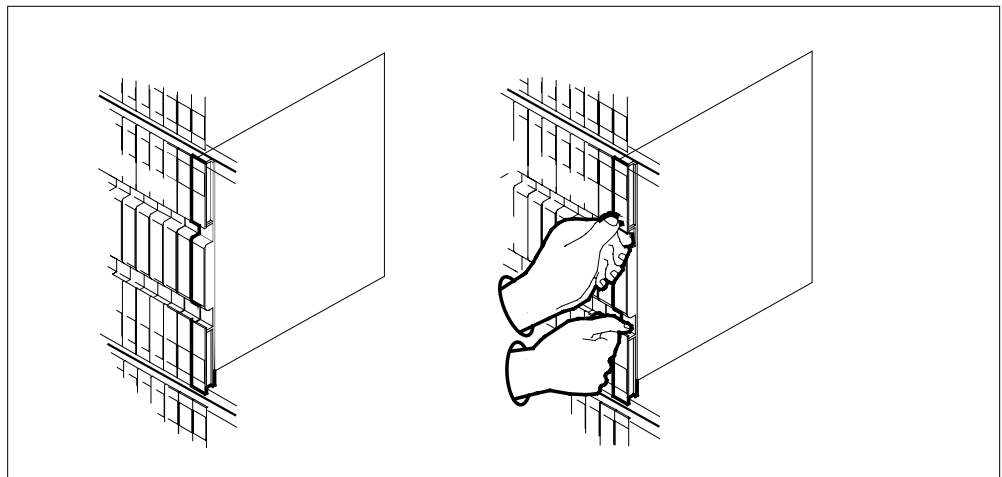

b Open the locking levers on the card to be replaced. Carefully pull the card toward you until the card clears the shelf.

NTAX74 in an RSC-S (PCM-30) Model A RCO2 (continued)

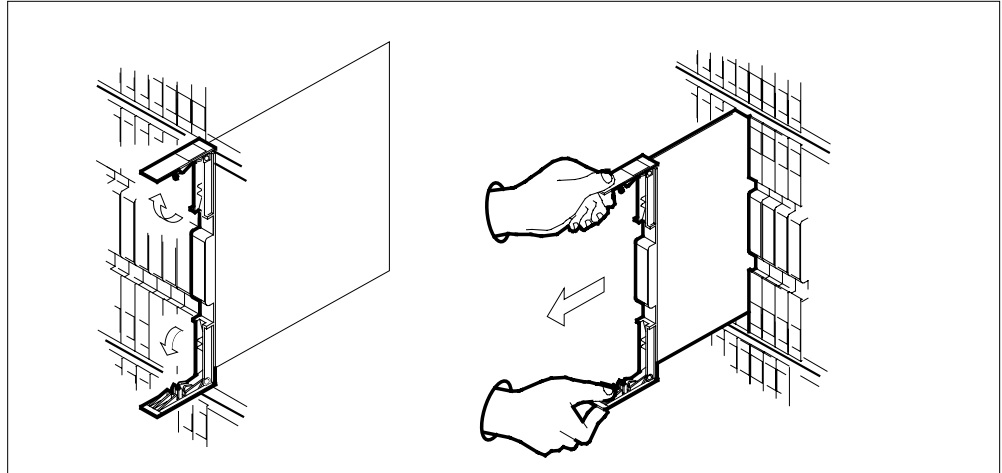

- c Make sure the replacement card has the same PEC and PEC suffix, as the card you removed. Make sure all replacement card DIP switch settings match settings of the card you removed.

Note: If the NTAX74 circuit card has a DIP switch, set the DIP switch S1 to the common peripheral module (CPM).

15



DANGER


Possible loss of P-side nodes

When you install the replacement NTAX74, monitor the LEDs on the faceplate of the NTAX74 for the following indicators: 1. The INSV and ESA LEDs come ON and remain ON until loading starts. 2. The ACT LED can come ON and light for less than 1 s. If the ACT LED remains ON for more than 1 s, remove the NTAX74 circuit card and return to this step. If the NTAX74 circuit card remains with both units that have an active processor, a condition of dual activity occurs. This condition causes the loss of P-side nodes.


Open the locking levers on the replacement card.

- a Align the card with the slots in the shelf.
b Carefully slide the card in the shelf.

NTAX74
in an RSC-S (PCM-30) Model A RCO2 (continued)

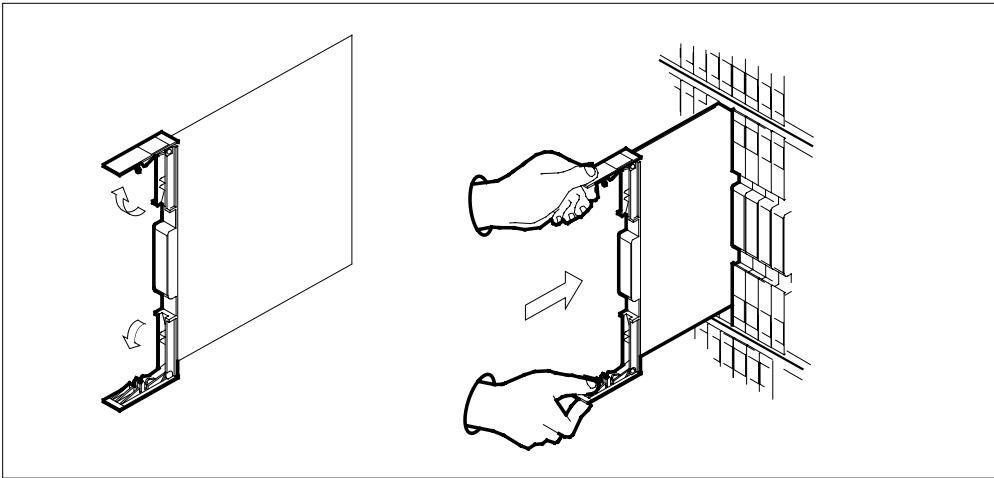

- 16** Seat and lock the card.
- a** Use your fingers or thumbs to push on the upper and lower edges of the faceplate. Make sure the card sits completely in the shelf.
 - b** Close the locking levers.

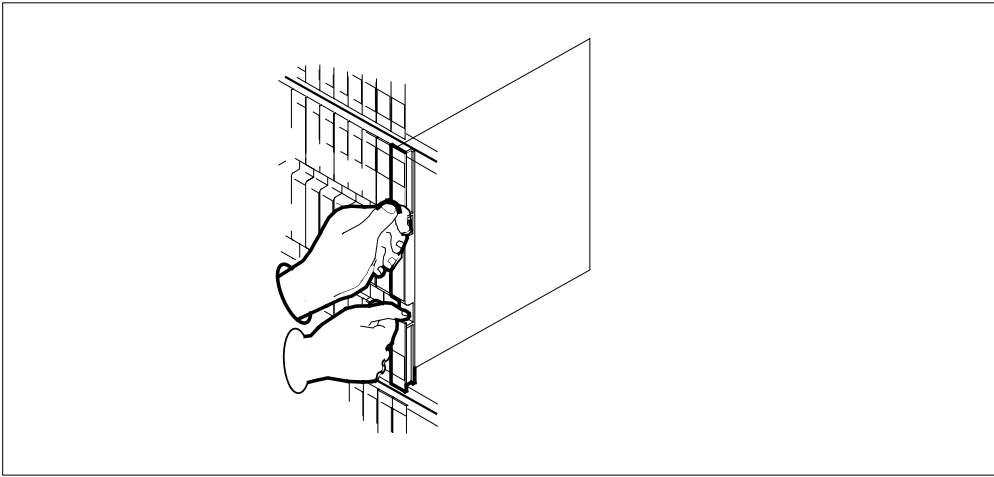

- 17** Use the following information to determine the next step:

If you were directed here from	Do
alarm clearing procedures	step 26
other	step 18

NTAX74 in an RSC-S (PCM-30) Model A RCO2 (continued)

At the MAP terminal

- 18** To load the inactive RCO2 unit, type:

>LOADPM UNIT rco2_unit_no

and press the Enter key.

where

rco2_unit_no

is the number of the busied RCO2 unit

If load	Do
passed	step 19
failed	step 27

- 19** To query the XMS-based peripheral module (XPM) counters for the firmware load on the NTAX74, type:

>QUERYPM CNTRS

and press the Enter key.

Example of a MAP response

Unsolicited MSG limit = 250, Unit 0 = 0, Unit 1 = 0

Unit 0:

Ram Load: WRI07BE

EPROM Version: AB02

EEPROM Load: Loadable: AX74XE01, Executable: AX74XE01

CMR Load: CMR03A

CAP:AX74AA

Unit 1:

Ram Load: WRI07BE

EPROM Version: AB02

EEPROM Load: Loadable: [AX74XE01], Executable: [AX74XE01]

CMR Load: CMR03A

CAP:AX74AA

NTAX74 firmware load name

If firmware	Do
is valid	step 22
is invalid	step 20

- 20** To load the firmware on the inactive unit type:

>LOADFW INACTIVE

NTAX74

in an RSC-S (PCM-30) Model A RCO2 (continued)

and press the Enter key.

	If the LOADFW	Do
	passes	step 21
	fails	step 27
21	To upgrade the firmware on the inactive unit type: >LOADFW INACTIVE UPGRADE and press the Enter key.	
	If the LOADFW UPGRADE	Do
	passes	step 22
	fails	step 27
22	To return the inactive RCO2 unit to service, type: >RTS UNIT unit_no and press the Enter key. <i>where</i> unit_no is the number of the inactive RCO2 unit	
	If RTS	Do
	passes	step 23
	fails	step 27

At the RCE frame

- 23** Remove the sign from the active RCO2 unit.
- 24** Send the defective cards for repair according to local procedure.
- 25** Note the following in the office records:
- date the card is replaced
 - serial number of the card
 - problems that prompted replacement of the card.
- Go to step 28.
- 26** Return to the *Clearing an Alarm Procedure* or other procedure that directed you to this procedure. If necessary, go to the point where the system produced the defective card list. Identify the next defective card on the list, and go to the appropriate procedure for that card in this manual.
- 27** For additional help, contact the next level of support.

NTAX74
in an RSC-S (PCM-30) Model A RCO2 (end)

- 28 This procedure is complete. Return to the maintenance procedure that directed you to this card replacement procedure. Continue as directed.

NTAX74

in an RSC-S (PCM-30) Model B RCO2

Application

Use this procedure to replace an NTAX74 card in an RCO2.

PEC	Suffixes	Name
NTAX74	AA	Cellular Access Processor with 16Mb Memory

Common procedures


Does not apply


Action

This procedure contains a summary flowchart and a list of steps. Use the flowchart to review the procedure. Follow the steps to perform the procedure.

NTAX74 in an RSC-S (PCM-30) Model B RCO2 (continued)

Summary of card replacement procedure for an NTAX74 card in TSC-S RCO2

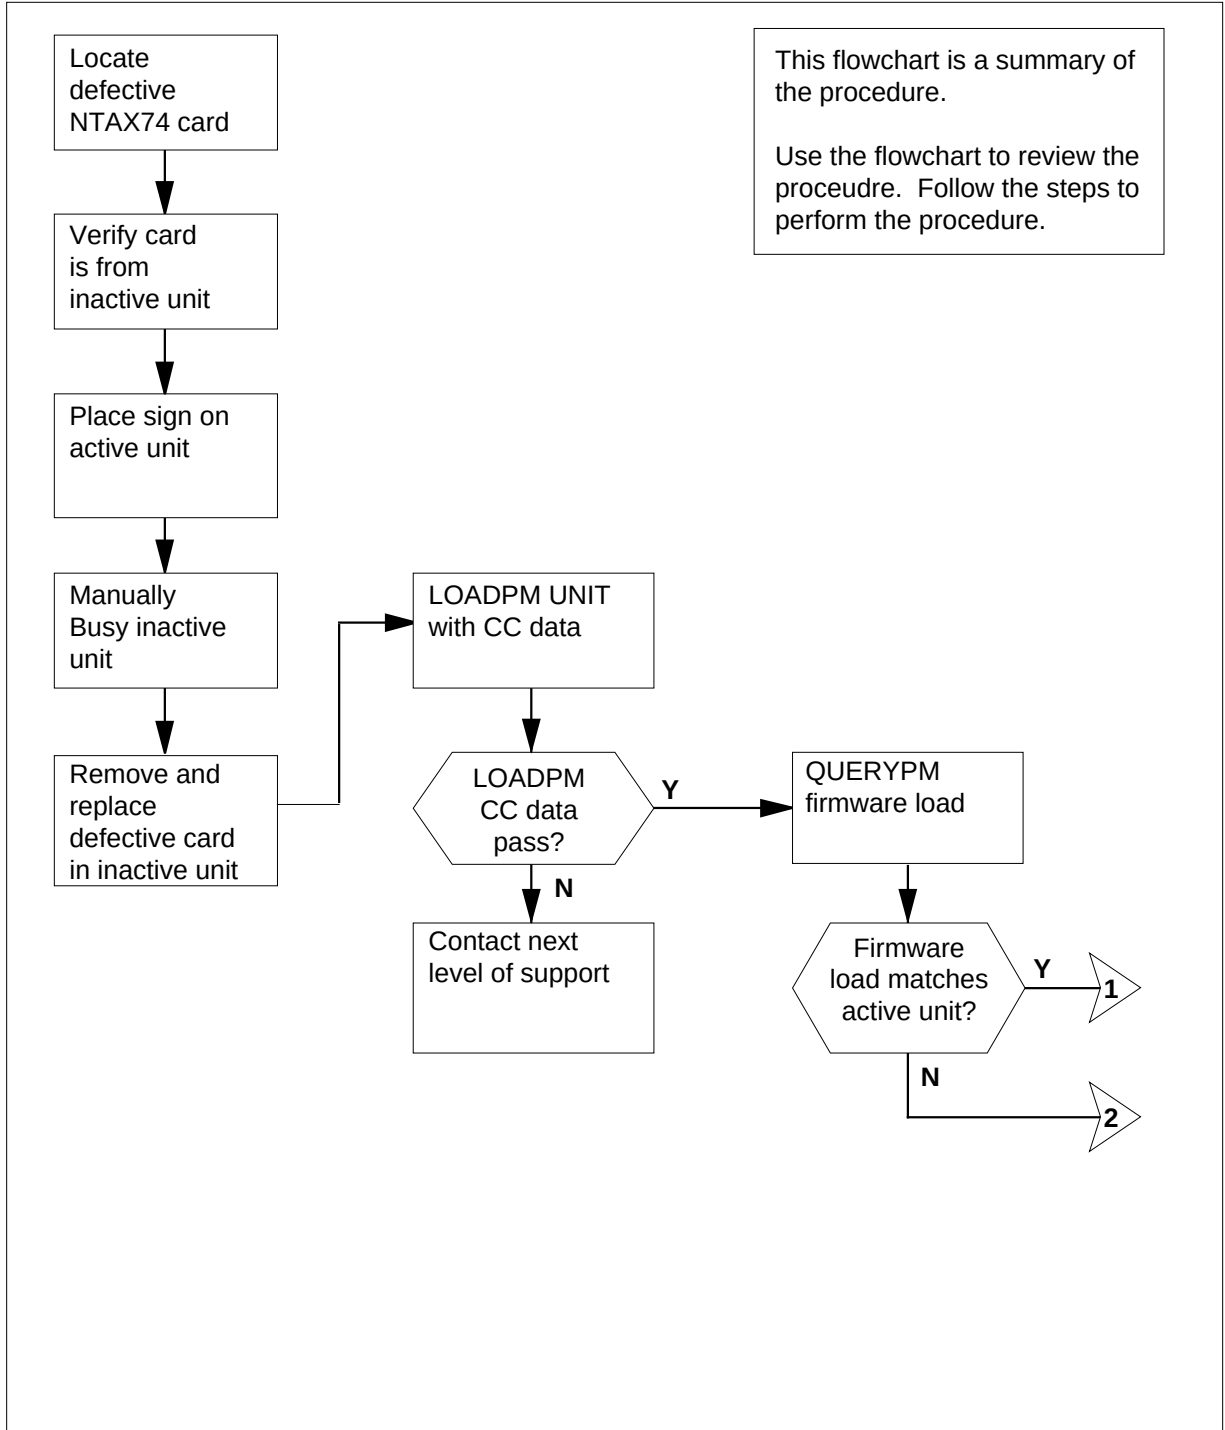

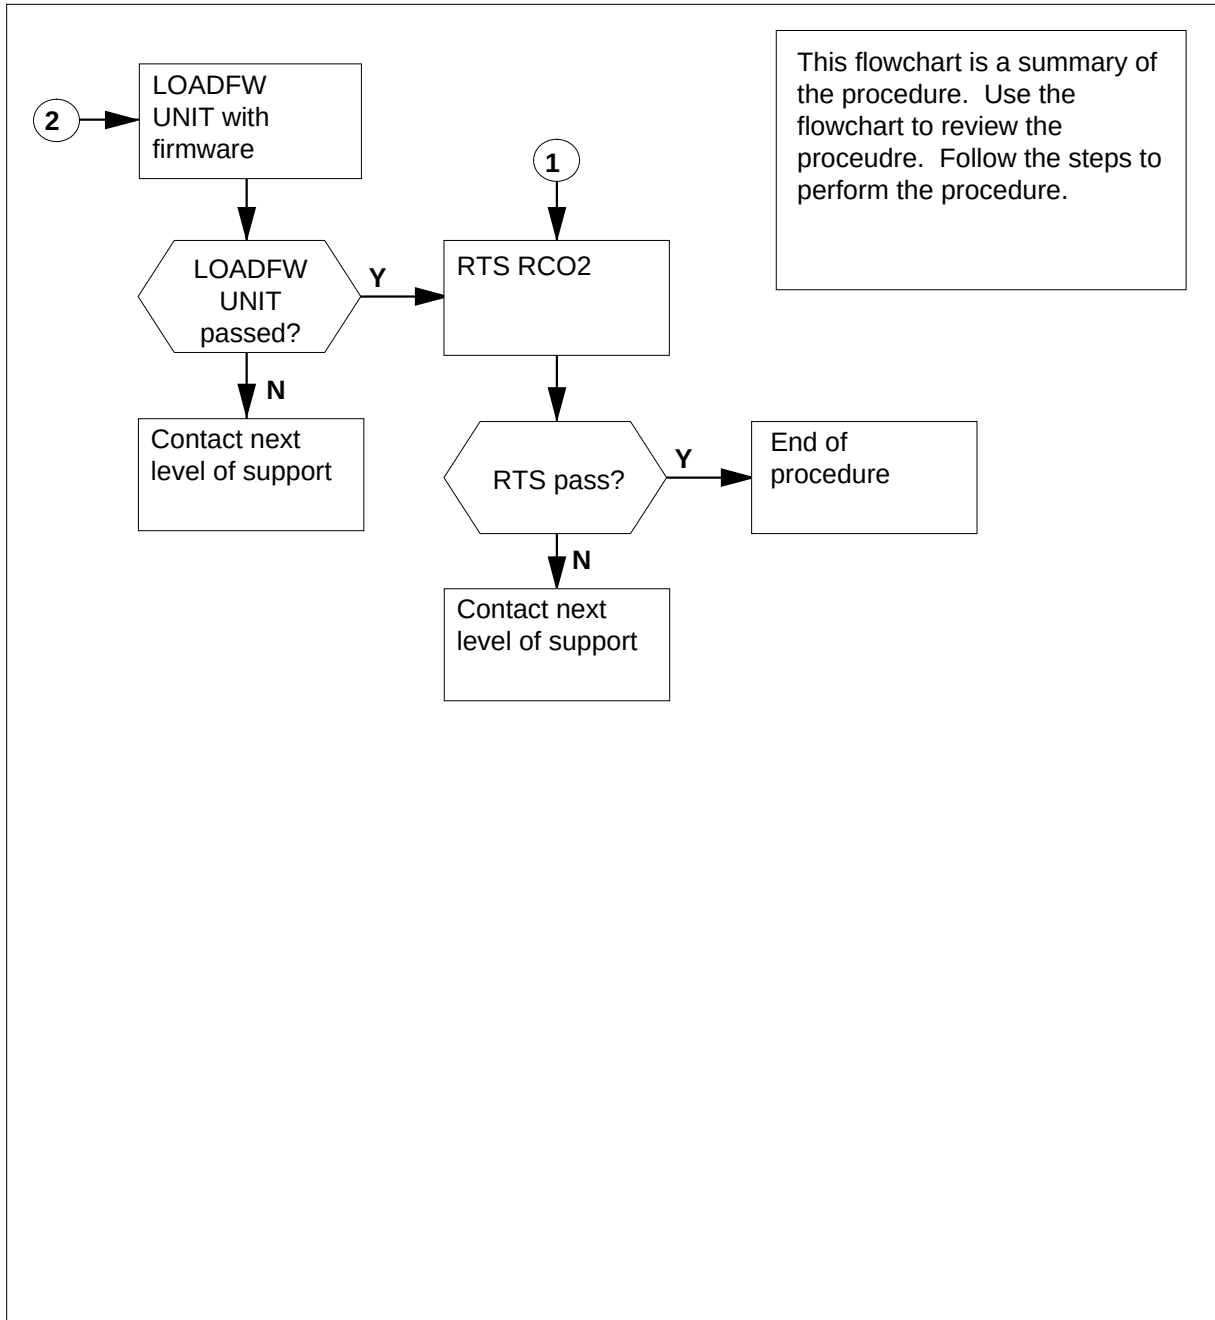NTAX74
in an RSC-S (PCM-30) Model B RCO2 (continued)**Summary of card replacement procedure for an NTAX74 card in TSC-S RCO2 (continued)**

NTAX74 in an RSC-S (PCM-30) Model B RCO2 (continued)

To replace an NTAX74 in RSC-S RCO2

At your current location

- 1 Proceed if one of the following conditions apply:
 - a step in a maintenance procedure directed you to this card replacement procedure
 - you use this procedure to verify or accept cards
 - the maintenance support group directed you to this procedure.
- 2



WARNING

Loss of service

When you replace a card in an RCO2, make sure the unit in which you replace the card is *inactive* and the mate unit is *active*.

Obtain an NTAX74 replacement card. Make sure the replacement card has the same product engineering code (PEC) and PEC suffix, as the card to be removed.

At the MAP terminal

- 3 To make sure the current MAP display is at the peripheral module (PM) level and to post the RCO2, type:

>MAPCI;MTC;PM;POST RCO2 rco2_no

and press the Enter key.

where

rco2_no

is the number of the RCO2 to be busied

Example of a MAP display:

NTAX74

in an RSC-S (PCM-30) Model B RCO2 (continued)

```

CM      MS      IOD      Net      PM      CCS      LNS      Trks      Ext      APPL
.        .        .        .        1RCO2      .        .        .        .        .

RCO2
0 Quit      PM      0      0      2      0      2      25
2 Post_     RCO2    0      0      0      0      1      1
3 ListSet
4           RCO2    0 ISTb Links_00S: CSide 0, PSide 0
5 TRNSL_    Unit0:  Inact SysB
6 TST_      Unit1:  Act  InSv
7 BSY_
8 RTS_
9 OffL
10 LoadPM_
11 Disp_
12 Next_
13 SwAct
14 QueryPM
15
16 IRLINK
17 Perform
18

```

- 4 To verify that the defective NTAX74 card is in the inactive unit, make sure the light-emitting Diode (LED) labeled ACTIVE is OFF or check the MAP display.

If the defective card	Do
is in the active unit	step 5
is in the inactive unit	step 9

- 5 To switch the processing activity (SWACT) to the inactive unit, type:

>SWACT

and press the Enter key.

A confirmation prompt for the SWACT command appears at the MAP terminal.

If SWACT	Do
cannot continue at this time	step 6
can continue at this time	step 7

- 6 To reject the prompt to SWACT the units, type:

>NO

and press the Enter key.

The system stops the SWACT.

Return to step 5 during periods of low traffic.

NTAX74

in an RSC-S (PCM-30) Model B RCO2 (continued)

- 7 To confirm the system prompt, type:
>YES
 and press the Enter key.
 The system runs a pre-SWACT audit to determine if the inactive unit can accept activity accurately.
Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before you proceed with the next maintenance action.

If the message	Do
is SWACT passed	step 9
is SWACT failed Reason: XPM SWACTback	step 8
is SWACT refused by SWACT Controller	step 8

- 8 Return to the *Alarm Clearing Procedures* to clear the alarm condition on the inactive unit. When you clear the alarm, return to step 1 of this procedure.

At the RCE frame

- 9 Place a sign with the words *Active unit-Do not touch* on the active unit. Do not attach this sign with magnets or tape.

At the MAP terminal

- 10 Check the MAP display and determine the state of the inactive unit.

If state	Do
is SysB, CBsy, ISTb, or InSv	step 11
is ManB	step 13

- 11 To busy the inactive PM unit, type:
>BSY UNIT unit_no
 and press the Enter key.
where
 unit_no
 is the number of the inactive RCO2 unit zero or one
- 12 To prevent the PM from trapping, type:
>PMRESET UNIT rco2_unit_no NORUN
 and press the Enter key.
where

NTAX74 in an RSC-S (PCM-30) Model B RCO2 (continued)

rco2_unit_no

is the number of the inactive RCO2 unit zero or one

At the RCE frame

13



WARNING

Static electricity damage

Before you remove cards, wear a wrist strap that connects to the wrist-strap grounding point on the left side of the frame supervisory panel (FSP) of the RCO2. This protects the equipment against static electricity damage.



DANGER

Equipment damage

Take the following precautions when you remove or insert a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Wear a wrist strap.

14


The following figures show how to remove the NTAX74 card:

- a** Locate the card to be removed on the appropriate shelf.

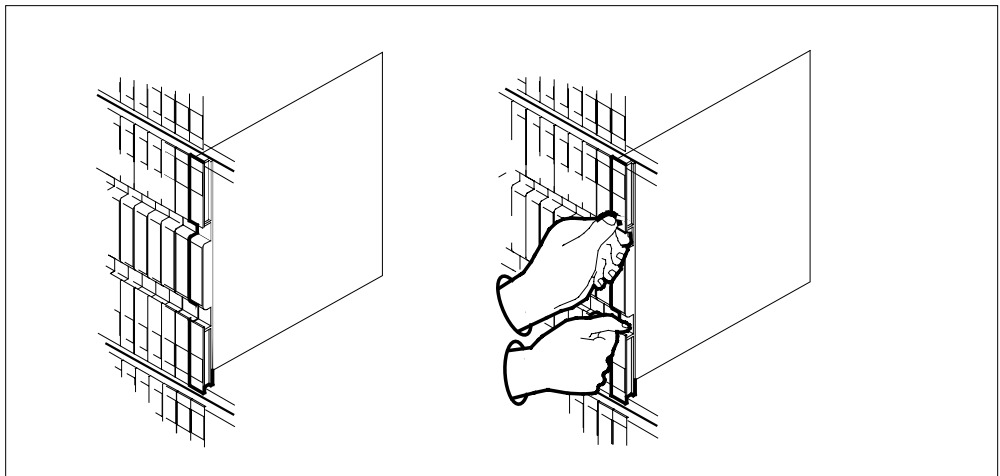

- b** Open the locking levers on the card to be replaced and carefully pull the card toward you until the card clears the shelf.

NTAX74 in an RSC-S (PCM-30) Model B RCO2 (continued)

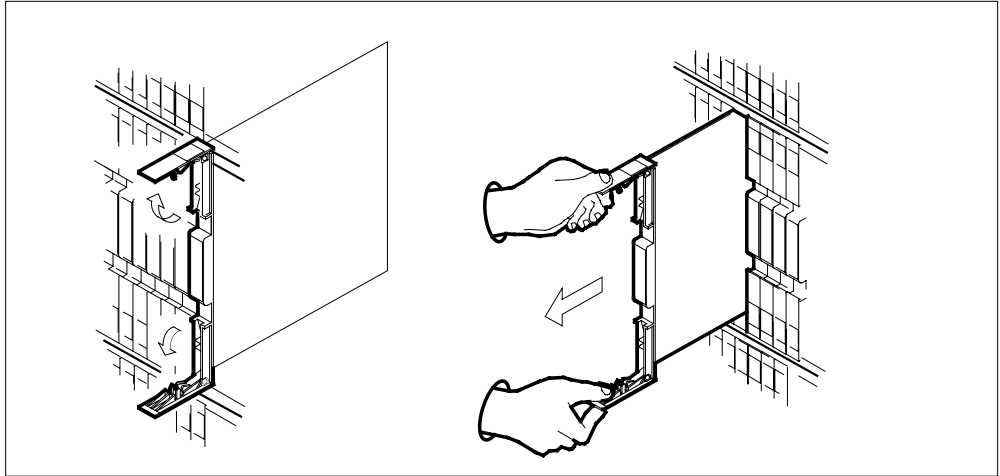

- c Make sure the replacement card has the same PEC and PEC suffix, as the card you removed. Make sure all replacement card DIP switch settings match settings of the card you removed.

Note: If the NTAX74 circuit card has a DIP switch, set the DIP switch S1 to the common peripheral module (CPM).

15



DANGER

Possible loss of P-side nodes


When you install the replacement NTAX74, monitor the LEDs on the faceplate of the NTAX74 for the following indicators:

1. The INSV and ESA LEDs come ON and remain ON until loading starts.
2. The ACT LED can come ON and light for less than 1 s. If the ACT LED remains ON for more than 1 s, remove the NTAX74 circuit card and return to this step. If the NTAX74 circuit card remains with both units that have an active processor, a condition of dual activity occurs. This condition causes the loss of P-side nodes.


Open the locking levers on the replacement card.

- a Align the card with the slots in the shelf.
- b Carefully slide the card in the shelf.

NTAX74
in an RSC-S (PCM-30) Model B RCO2 (continued)

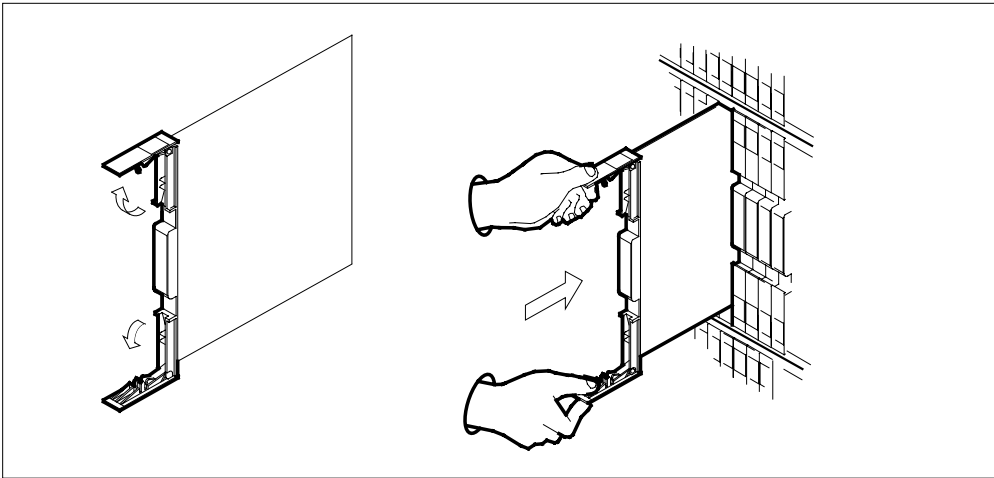

- 16** Seat and lock the card.
- a** Use your fingers or thumbs to push on the upper and lower edges of the faceplate. Make sure the card sits completely in the shelf.
 - b** Close the locking levers.

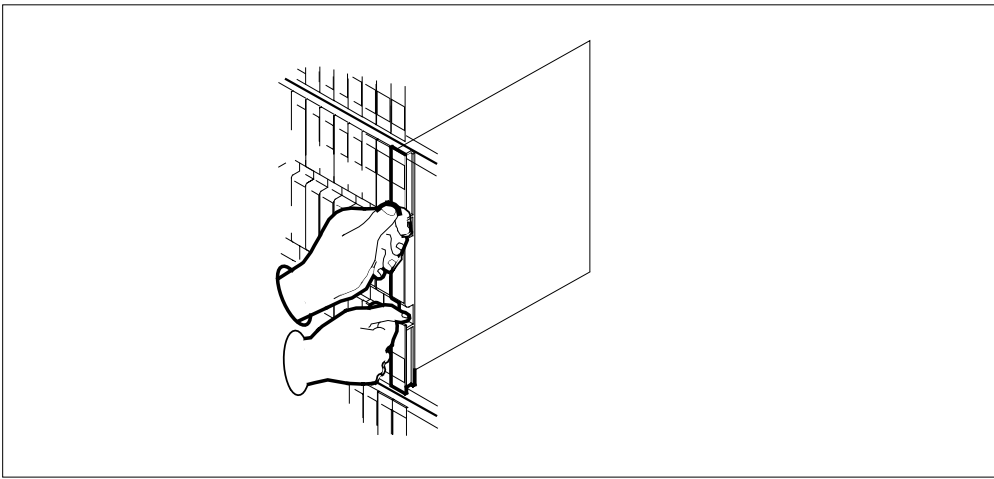

- 17** Use the following information to determine the next step:

If you were directed here from	Do
alarm clearing procedures	step 26
other	step 18

NTAX74

in an RSC-S (PCM-30) Model B RCO2 (continued)

At the MAP terminal

- 18 To load the inactive RCO2 unit, type:

>LOADPM UNIT rco2_unit_no

and press the Enter key.

where

rco2_unit_no

is the number of the busied RCO2 unit

If load	Do
passed	step 19
failed	step 27

- 19 To query the XMS-based peripheral module (XPM) counters for the firmware load on the NTAX74, type:

>QUERYPM CNTRS

and press the Enter key.

Example of a MAP response

Unsolicited MSG limit = 250, Unit 0 = 0, Unit 1 = 0

Unit 0:

Ram Load: WRI07BE

EPROM Version: AB02

EEPROM Load: Loadable: AX74XE01, Executable: AX74XE01

CMR Load: CMR03A

CAP:AX74AA

Unit 1:

Ram Load: WRI07BE

EPROM Version: AB02

EEPROM Load: Loadable: [AX74XE01], Executable: [AX74XE01]

CMR Load: CMR03A

CAP:AX74AA

NTAX74 firmware load name

If firmware	Do
is valid	step 22
is invalid	step 20

- 20 To load the inactive unit firmware, type:

>LOADFW INACTIVE

NTAX74

in an RSC-S (PCM-30) Model B RCO2 (continued)

and press the Enter key.

Note: If the firmware load is not specified with the LOADFW command, the command applies the firmware file datafilled in the appropriate inventory table.

If LOADFW	Do
passed	step 21
failed	step 27

- 21** To upgrade the inactive unit firmware, type:

>LOADFW INACTIVE UPGRADE

and press the Enter key.

If LOADFW UPGRADE	Do
passed	step 22
failed	step 27

- 22** To return the inactive RCO2 unit to service, type

>RTS UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive RCO2 unit

If RTS	Do
passed	step 23
failed	step 27

At the RCE frame

- 23** Remove the sign from the active RCO2 unit.

- 24** Send the defective cards for repair according to local procedure.

- 25** Note the following in the office records:

- date the card is replaced
- serial number of the card
- problems that prompted replacement of the card.

Go to step 28.

- 26** Return to the *Clearing an Alarm Procedure* or other procedure that directed you to this procedure. If necessary, go to the point where the system

NTAX74
in an RSC-S (PCM-30) Model B RCO2 (end)

produced the defective card list. Identify the next defective card on the list, and go to the appropriate procedure for that card in this manual.

- 27 For additional help, contact the next level of support.
- 28 This procedure is complete. Return to the maintenance procedure that directed you to this card replacement procedure. Continue as directed.

**NTAX74
in an SMA**

Application

Use this procedure to replace an NTAX74 card in an SMA.

PEC	Suffixes	Name
NTAX74	AA	Cellular Access Processor with 16Mb Memory

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA”
- unseating a card
- replacing a card
- reseating a card
- returning a card


Do not go to the common procedures unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTAX74 in an SMA (continued)

Summary of card replacement procedure for an NTAX74 card in an SMA

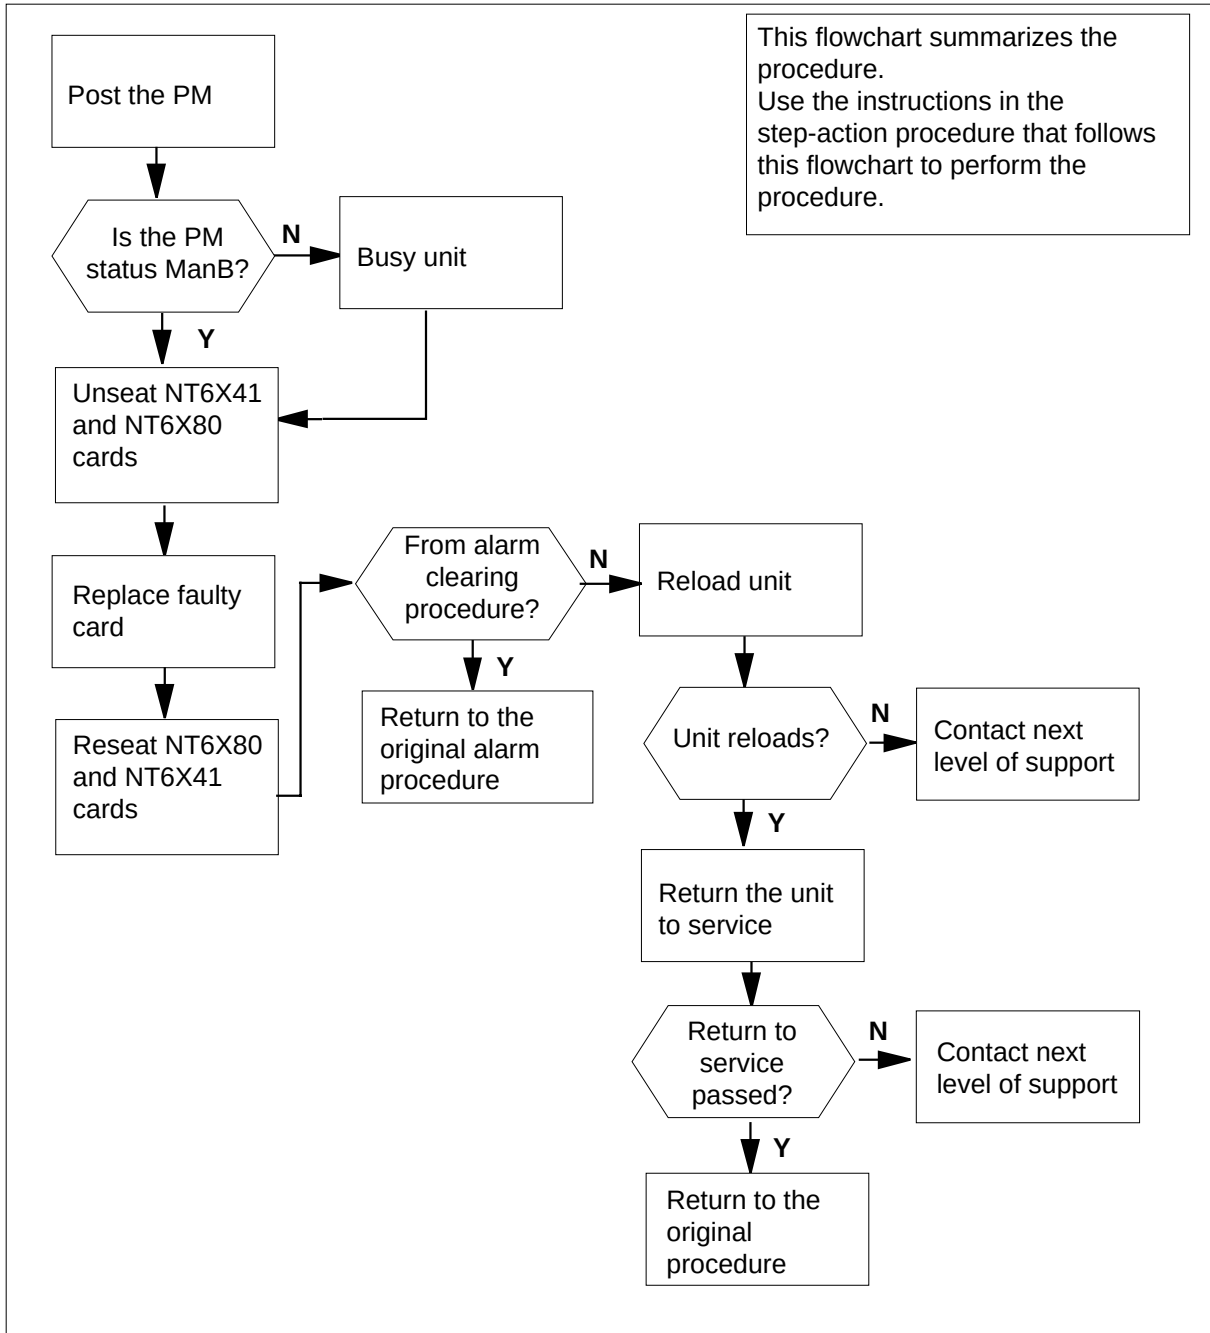

NTAX74 in an SMA (continued)

Replacing an NTAX74 card in an SMA

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.

- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA."

4



CAUTION

Loss of service

Ensure that you replace the card in the inactive unit and verify the mate unit is active.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA by typing
>MAPCI;MTC;PM;POST SMA sma_no
 and pressing the Enter key.

where

sma_no

is the number of the SMA being posted

Example of a MAP response

SMA	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA	0	0	0	0	1	7

```
SMA 0 ISTb Links_00S: CSide 0, PSide 0
Unit0: Act InSv
Unit1: Inact SysB
```

NTAX74

in an SMA (continued)

6	Observe the MAP display and determine if the faulty card is in the active or the inactive unit.								
	<table border="1"> <tr> <th data-bbox="540 438 854 466">If the faulty card is in the</th> <th data-bbox="987 438 1024 466">Do</th> </tr> <tr> <td data-bbox="540 493 675 520">active unit</td> <td data-bbox="987 493 1062 520">step 7</td> </tr> <tr> <td data-bbox="540 548 699 575">inactive unit</td> <td data-bbox="987 548 1078 575">step 10</td> </tr> </table>	If the faulty card is in the	Do	active unit	step 7	inactive unit	step 10		
If the faulty card is in the	Do								
active unit	step 7								
inactive unit	step 10								
7	Switch the activity of the units by typing >SWACT and pressing the Enter key. A confirmation prompt for the SWACT command is displayed at the MAP terminal. <table border="1"> <tr> <th data-bbox="540 821 662 848">If SWACT</th> <th data-bbox="987 821 1024 848">Do</th> </tr> <tr> <td data-bbox="540 875 854 903">can continue at this time</td> <td data-bbox="987 875 1062 903">step 8</td> </tr> <tr> <td data-bbox="540 930 894 957">cannot continue at this time</td> <td data-bbox="987 930 1078 957">step 46</td> </tr> </table>	If SWACT	Do	can continue at this time	step 8	cannot continue at this time	step 46		
If SWACT	Do								
can continue at this time	step 8								
cannot continue at this time	step 46								
8	Confirm the system prompt by typing >YES and pressing the Enter key. The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably. Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action. <table border="1"> <tr> <th data-bbox="540 1299 756 1327">If the message is</th> <th data-bbox="987 1299 1024 1327">Do</th> </tr> <tr> <td data-bbox="540 1354 769 1381">SWACT passed</td> <td data-bbox="987 1354 1078 1381">step 10</td> </tr> <tr> <td data-bbox="540 1409 951 1478">SWACT failed Rea- son: XPM SWACTback</td> <td data-bbox="987 1409 1062 1436">step 9</td> </tr> <tr> <td data-bbox="540 1505 951 1575">SWACT refused by SWACT Controller</td> <td data-bbox="987 1505 1062 1533">step 9</td> </tr> </table>	If the message is	Do	SWACT passed	step 10	SWACT failed Rea- son: XPM SWACTback	step 9	SWACT refused by SWACT Controller	step 9
If the message is	Do								
SWACT passed	step 10								
SWACT failed Rea- son: XPM SWACTback	step 9								
SWACT refused by SWACT Controller	step 9								
9	The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit. Go to step 44.								

NTAX74 in an SMA (continued)

At the equipment frame

- 10** Hang a sign on the active unit bearing the words: *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 11** Observe the MAP display and determine the state of the inactive unit.

If state is	Do
SysB, CBsy, ISTb, or InSv	step 12
ManB	step 13

- 12** Busy the inactive PM unit by typing
>BSY UNIT unit_no
 and pressing the Enter key.
where
unit_no
 is the number of the inactive SMA unit (0 or 1)

At the equipment frame

13



DANGER

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the frame supervisory panel (FSP). This protects the equipment against damage caused by static electricity.

Unseat but do not remove the NT6X41 Host Link Formatter circuit card, and the NT6X80 PCM Loss Addition circuit card using the common unseating a card procedure in this document.

- 14** Remove the faulty NTAX74 card using the common replacing a card procedure in this document.

NTAX74 in an SMA (continued)

15



DANGER

Possible loss of P-side nodes

Monitor the LEDs on the faceplate of the replacement NTAX74 circuit card.

1. The INSV and ESA LEDs will come ON and remain ON until loading begins.
2. The ACT LED may come ON and light for less than one second. If the ACT LED remains ON for more than 1 second, immediately remove the NTAX74 circuit card, obtain a new NTAX74 circuit card, and return to this step. If the NTAX74 circuit card is allowed to remain with both units having an active processor, a condition of dual activity exists, which results in the loss of P-side nodes.

Insert the new NTAX74 card using the common replacing a card procedure in this document.

- 16 Reseat the the NT6X80 PCM Loss Addition circuit card, and NT6X41 Host Link Formatter circuit card using the common reseating a card procedure in this document.

- 17 Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 43
other	step 18

- 18 After replacing the faulty card, load the inactive unit by typing

>LOADPM UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive unit

If	Do
message loadfile not found in directory is received	step 19
load passes	step 38

NTAX74 in an SMA (continued)

	If	Do
	load fails	step 44
19	Determine the type of device where the PM load files are located.	
	If load files are located on	Do
	tape	step 20
	IOC disk	step 26
	SLM disk	step 31
20	Locate the tape that contains the PM load files.	
21	Mount the tape on a magnetic tape drive.	
	At the MAP terminal	
22	Download the tape by typing >MOUNT tape_no and pressing the Enter key. <i>where</i> tape_no is the number of the tape drive containing the PM load files	
23	List the contents of the tape in your user directory by typing >LIST Ttape_no and pressing the Enter key. <i>where</i> tape_no is the number of the tape drive containing the PM load files	
24	Demount the tape drive by typing >DEMOUNT Ttape_no and pressing the Enter key. <i>where</i> tape_no is the number of the tape drive containing the PM load files	
25	Go to step 36.	
26	From office records, determine and note the number of the input/output controller (IOC) disk and the name of the volume that contains the PM load files.	
27	Access the disk utility level of the MAP display by typing >DSKUT	

NTAX74

in an SMA (continued)

- and pressing the Enter key.
- 28 List the IOC file names into your user directory by typing
>LISTVOL volume_name ALL
and pressing the Enter key.
where
volume_name
is the name of the volume that contains the PM load files obtained in step 26.
- 29 Leave the disk utility by typing
>QUIT
and pressing the Enter key.
- 30 Go to step 36.
- 31 From office records, determine and note the number of the system load module (SLM) disk and the name of the volume that contains the PM load files.
- 32 Access the disk utility level of the MAP display by typing
>DISKUT
and pressing the Enter key.
- 33 List the SLM disk volumes by typing
>LV CM
and pressing the Enter key.
- 34 List the SLM file names into your user directory by typing
>LISTFL volume_name
and pressing the Enter key.
where
volume_name
is the name of the volume that contains the PM load files, obtained in step 31.
- 35 Leave the disk utility by typing
>QUIT
and pressing the Enter key.
- 36 After listing the PM load files, load the inactive SMA unit by typing
>LOADPM INACTIVE
and pressing the Enter key.

If load	Do
passed	step 38

NTAX74 in an SMA (continued)

	If load	Do
	failed	step 44
37	Determine the name of the firmware load file by typing >QUERYPM CNTRS and pressing the Enter key. Cross-reference this name to the disk volume name on the PMLoad File Office Record (or similar list of all PM load files maintained in your office).	
	If the firmware load file name displayed is	Do
	the same	step 40
	different	step 38
38	Load the NTAX74 firmware by typing >LOADFW INACTIVE and pressing the Enter key.	
	If load	Do
	passed	step 39
	failed	step 44
39	To upgrade the firmware on the inactive unit type >LOADFW INACTIVE UPGRADE and pressing the Enter key.	
	If LOADFW UPGRADE	Do
	passed	step 40
	failed	step 44
40	Return the inactive SMA unit to service by typing >RTS INACTIVE and pressing the Enter key.	
	If RTS	Do
	passed	step 41
	failed	step 44

NTAX74

in an SMA (end)

At the equipment frame

- 41 Remove the sign from the active SMA unit.
- 42 Go to the common returning a card procedure in this document.
Go to step 45.
- 43 Return to the *Alarm Clearing Procedure* or other procedure that directed you to this procedure. If necessary, go to the point where the faulty card list was produced, identify the next faulty card on the list, and go to the appropriate procedure for that card in this manual.
- 44 For further assistance, contact the personnel responsible for the next level of support.
- 45 You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.
- 46 For further assistance with switch of activity, contact the personnel responsible for the next level of support.

Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

**NTAX74
in an SMA-MVI-20**

Application

Use this procedure to replace an NTAX74 card in an SMA.

PEC	Suffixes	Name
NTAX74	AA	Cellular Access Processor with 16Mb Memory

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA”
- unseating a card
- replacing a card
- reseating a card


Do not go to the common procedures unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTAX74 in an SMA-MVI-20 (continued)

Summary of card replacement procedure for an NTAX74 card in an SMA

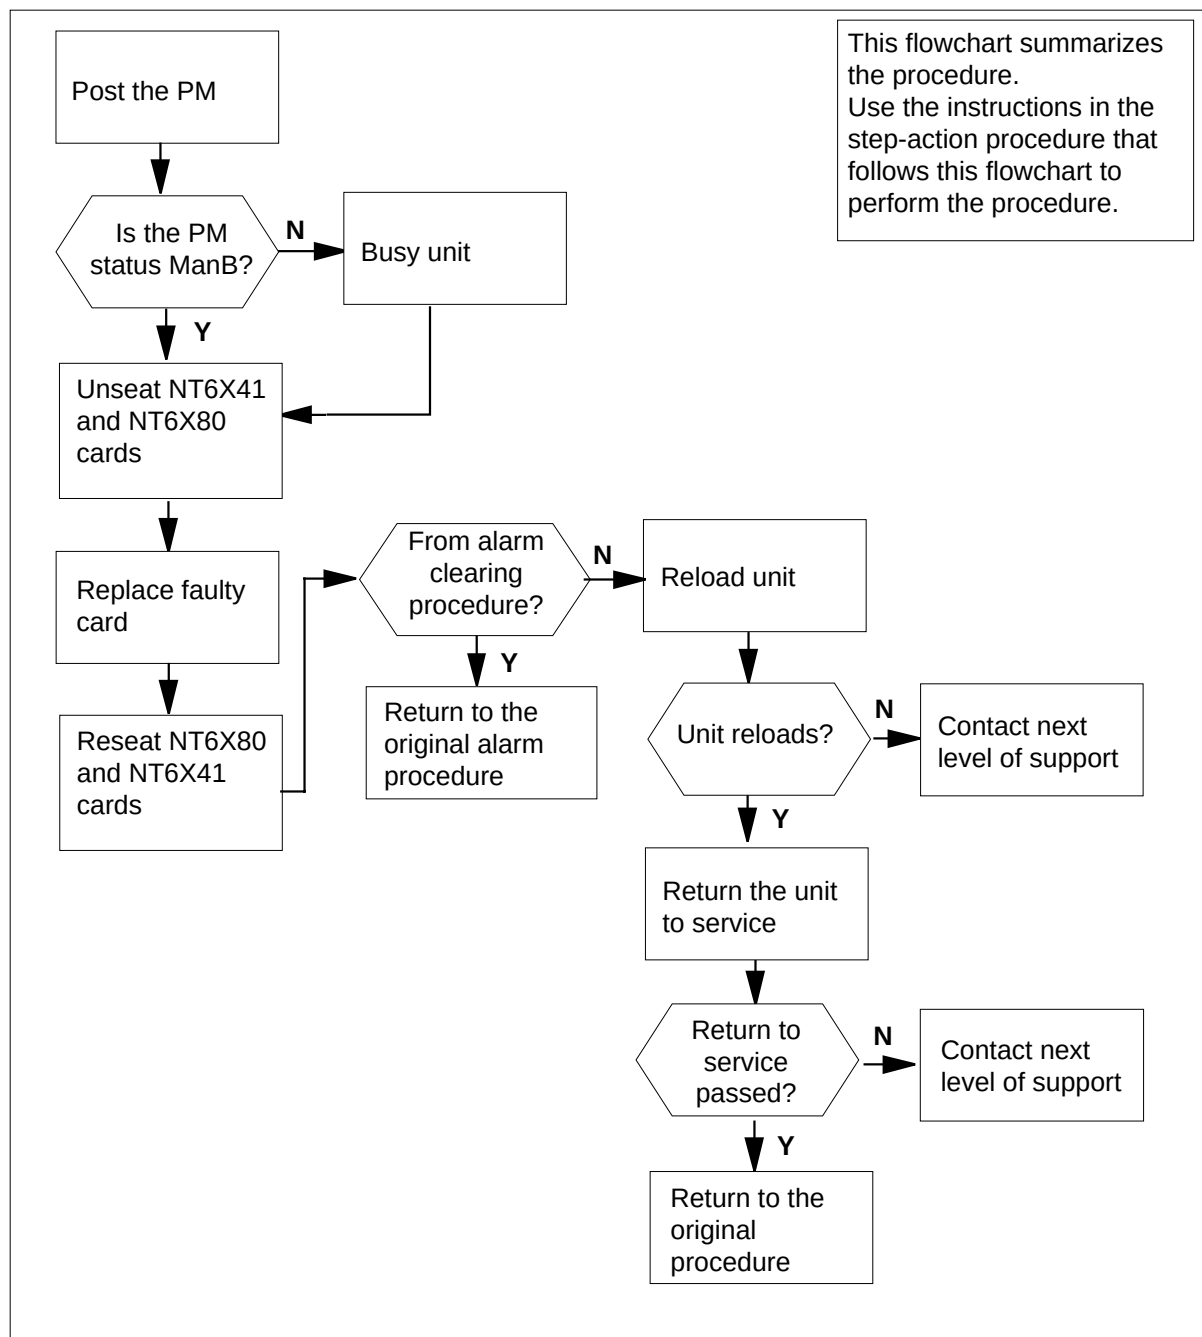

NTAX74 in an SMA-MVI-20 (continued)

Replacing an NTAX74 card in an SMA

At the equipment frame

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.

- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA."

4



CAUTION

Loss of service

When replacing a card in the SMA, ensure the unit in which you are replacing the card is *inactive* and the mate unit is *active*.

Obtain an NTAX74AA replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA by typing
>MAPCI;MTC;PM;POST SMA sma_no
and pressing the Enter key.

where

sma_no

is the number of the SMA being posted

Example of a MAP response

```
SMA      SysB  ManB  Offl  CBsy  ISTb  InSv
PM        3      0      1      0      2     13
SMA       0      0      0      0      1      7
```

```
SMA 0 ISTb  Links_00S:  CSide 0, PSide 0
Unit0:  Act   InSv
Unit1:  Inact SysB
```

NTAX74

in an SMA-MVI-20 (continued)

- 6 Observe the MAP display and determine if the card is in the active or the inactive unit.

If the card is in the	Do
active unit	step 7
inactive unit	step 11

- 7 Switch the activity of the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
cannot continue at this time	step 8
can continue at this time	step 9

- 8 Reject the prompt to switch the activity of the units by typing

>NO

and pressing the Enter key.

The system discontinues the SWACT.

- 9 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 11
SWACT failed Rea- son: XPM SWACTback	step 10
SWACT refused by SWACT Controller	step 10

- 10 The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on

NTAX74
in an SMA-MVI-20 (continued)

the inactive unit before attempting to clear the alarm condition on the active unit.
Go to step 47.

At the equipment frame

- 11 Hang a sign on the active unit bearing the words: *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 12 Observe the MAP display and determine the state of the inactive unit.
- | If state is | Do |
|---------------------------|---------|
| SysB, CBsy, ISTb, or InSv | step 13 |
| ManB | step 15 |
- 13 Busy the inactive PM unit by typing
>BSY UNIT unit_no
and pressing the Enter key.
where
 unit_no
 is the number of the inactive SMA unit (0 or 1)
- 14 Prevent PM traps by typing
>PMRESET UNIT unit_no NORUN
and pressing the Enter key.
where
 unit_no
 is the number of the inactive SMA unit (0 or 1)

NTAX74 in an SMA-MVI-20 (continued)

At the equipment frame

15



DANGER

Static electricity damage

Before removing any cards, put on a wrist strap connected to the wrist strap grounding point on the frame supervisory panel (FSP). This strap protects the cards against damage caused by static electricity.

Unseat but do not remove the NT6X41 Host Link Formatter circuit card, and the NT6X80 PCM Loss Addition circuit card using the common unseating a card procedure in this document.

16 Remove the faulty NTAX74 card using the common replacing a card procedure in this document.

17



DANGER

Possible loss of P-side nodes

Monitor the LEDs on the faceplate of the replacement NTAX74 circuit card.

1. The INSV and ESA LEDs will come ON and remain ON until loading begins.
2. The ACT LED may come ON and light for less than 1 second. If the ACT LED remains ON for more than one second, immediately remove the NTAX74 circuit card, obtain a new NTAX74 circuit card, and return to this step. If the NTAX74 circuit card is allowed to remain with both units having an active processor, a condition of dual activity exists, which results in the loss of P-side nodes.

Insert the new NTAX74 card using the common replacing a card procedure in this document.

18 Reseat the the NT6X80 PCM Loss Addition circuit card, and NT6X41 Host Link Formatter circuit card using the common reseating a card procedure in this document.

19 Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 46

NTAX74 in an SMA-MVI-20 (continued)

	If you were directed here from	Do
	other	step 20
20	After replacing the faulty card, load the inactive unit by typing >LOADPM UNIT unit_no and pressing the Enter key. <i>where</i> unit_no is the number of the inactive unit	
	If	Do
	message loadfile not found in directory is received	step 21
	load passes	step 40
	load fails	step 47
21	Determine the type of device where the PM load files are located.	
	If load files are located on	Do
	tape	step 22
	IOC disk	step 28
	SLM disk	step 33
22	Locate the tape that contains the PM load files.	
23	Mount the tape on a magnetic tape drive.	
	At the MAP terminal	
24	Download the tape by typing >MOUNT tape_no and pressing the Enter key. <i>where</i> tape_no is the number of the tape drive containing the PM load files	
25	List the contents of the tape in your user directory by typing >LIST Ttape_no and pressing the Enter key. <i>where</i>	

NTAX74

in an SMA-MVI-20 (continued)

- tape_no**
is the number of the tape drive containing the PM load files
- 26 Demount the tape drive by typing
>DEMOUNT Ttape_no
and pressing the Enter key.
where
tape_no
is the number of the tape drive containing the PM load files
- 27 Go to step 38.
- 28 From office records, determine and note the number of the input/output controller (IOC) disk and the name of the volume that contains the PM load files.
- 29 Access the disk utility level of the MAP display by typing
>DSKUT
and pressing the Enter key.
- 30 List the IOC file names into your user directory by typing
>LISTVOL volume_name ALL
and pressing the Enter key.
where
volume_name
is the name of the volume that contains the PM load files obtained in step 28.
- 31 Leave the disk utility by typing
>QUIT
and pressing the Enter key.
- 32 Go to step 38.
- 33 From office records, determine and note the number of the system load module (SLM) disk and the name of the volume that contains the PM load files.
- 34 Access the disk utility level of the MAP display by typing
>DISKUT
and pressing the Enter key.
- 35 List the SLM disk volumes by typing
>LV CM
and pressing the Enter key.
- 36 List the SLM file names into your user directory by typing
>LISTFL volume_name
and pressing the Enter key.

NTAX74 in an SMA-MVI-20 (continued)

where

volume_name

is the name of the volume that contains the PM load files, obtained in step 33.

- 37** Leave the disk utility by typing

>QUIT

and pressing the Enter key.

- 38** After listing the PM load files, load the inactive SMA unit by typing

>LOADPM INACTIVE

and pressing the Enter key.

If load	Do
passed	step 39
failed	step 47

- 39** Determine the name of the firmware load file by typing

>QUERYPM CNTRS

and pressing the Enter key.

Cross-reference this name to the disk volume name on the PMLoad File Office Record (or similar list of all PM load files maintained in your office).

If the firmware load file name displayed is	Do
the same	step 42
different	step 40

- 40** Load the NTAX74 firmware in the inactive unit by typing

>LOADFW INACTIVE

and pressing the Enter key.

If load	Do
passed	step 41
failed	step 47

- 41** To upgrade the firmware on the inactive unit type

>LOADFW INACTIVE UPGRADE

NTAX74

in an SMA-MVI-20 (end)

and pressing the Enter key.

If LOADFW UPGRADE	Do
passed	step 42
failed	step 47

- 42** Return the inactive SMA unit to service by typing
>RTS INACTIVE
and pressing the Enter key.

If RTS	Do
passed	step 43
failed	step 47

At the equipment frame

- 43** Remove the sign from the active SMA unit.
- 44** Send any faulty cards for repair according to local procedure.
- 45** Note the following in the office records:
- date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
- Go to step 48.
- 46** Return to the *Alarm Clearing Procedure* or other procedure that directed you to this procedure. If necessary, go to the point where the faulty card list was produced, identify the next faulty card on the list, and go to the appropriate procedure for that card in this manual.
- 47** For further assistance, contact the personnel responsible for the next level of support.
- 48** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

**NTAX74
in an SMA2**

Application

Use this procedure to replace an NTAX74 card in an SMA2.

PEC	Suffixes	Name
NTAX74	AA	Cellular Access Processor with 16Mb Memory

Common procedures

The following procedures are referenced in this procedure:


- “Locating a faulty card in an SMA2”
- replacing a card

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTAX74 in an SMA2 (continued)

Summary of card replacement procedure for an NTAX74 card in an SMA2

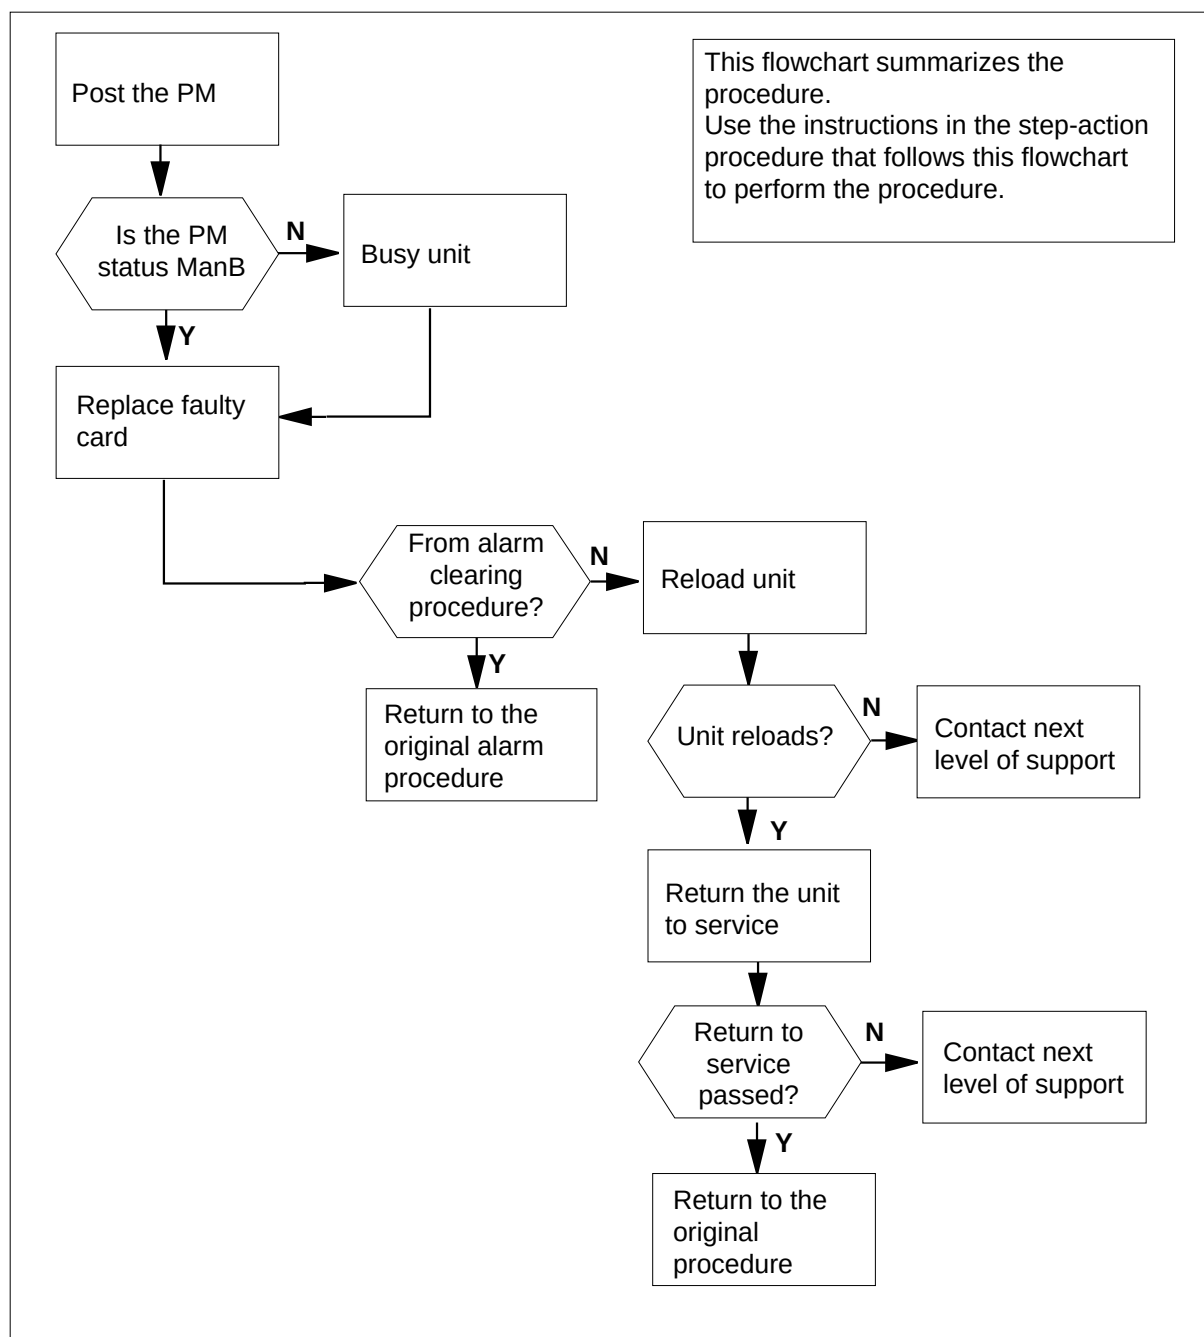

NTAX74 in an SMA2 (continued)

Replacing an NTAX74 card in an SMA2

At your current location

- 1 Proceed only if you are directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or are directed to this procedure by your maintenance support group.

- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA2."

4



CAUTION

Loss of service

When replacing a card in the SMA2, ensure the unit in which you are replacing the card is *inactive* and the mate unit is *active*.

Get an NTAX74 replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card to be removed

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA2 by typing

>MAPCI;MTC;PM;POST SMA2 sma2_no

and pressing the Enter key.

where

sma2_no

is the number of the SMA2 being posted

Example of a MAP response

NTAX74

in an SMA2 (continued)

SMA2	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA2	0	0	0	0	1	7

SMA2 0 ISTb Links_OOS: CSide 0, PSide 0
 Unit0: Act InSv
 Unit1: Inact SysB

- 6 Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If the faulty card is in the	Do
active unit	step 7
inactive unit	step 11

- 7 SWACT the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
cannot continue at this time	step 8
can continue at this time	step 9

- 8 Reject the prompt to SWACT the units by typing

>NO

and pressing the Enter key.

The system discontinues the SWACT.

- 9 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 11

NTAX74 in an SMA2 (continued)

	If the message is	Do
	SWACT failed	Rea- step 10
	son: XPM SWACTback	
	SWACT refused by SWACT Controller	step 10
10	The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit. Go to step 27.	

At the frame or cabinet

- 11 Hang a sign on the active unit bearing the words: *Active unit-Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 12 Observe the MAP display and determine the state of the inactive unit.

	If state is	Do
	SysB, CBsy, ISTb, or InSv	step 13
	ManB	step 15
13	Busy the inactive PM unit by typing >BSY INACTIVE and pressing the Enter key.	
14	Prevent the PM from trapping by typing >PMRESET UNIT unit_no NORUN and pressing the Enter key. <i>where</i> unit_no is the number of the inactive SMA2 unit (0 or 1)	

At the frame or cabinet

- 15 Remove the faulty NTAX74 card using the common replacing a card procedure in this document.

NTAX74 in an SMA2 (continued)

16



DANGER

Possible loss of P-side nodes

When installing the replacement NTAX74, monitor the LEDs on the faceplate of the NTAX74 for the following:

1. The INSV and ESA LEDs will come ON and remain ON until loading begins.
2. The ACT LED may come ON and light for less than 1 second. If the ACT LED remains ON for more than 1 second, immediately remove the NTAX74 circuit card and return to this step. If the NTAX74 circuit card is allowed to remain with both units having an active processor, a condition of dual activity exists, which results in the loss of P-side nodes.

Insert the new NTAX74 card using the common replacing a card procedure in this document.

- 17 Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 26
other	step 18

At the MAP terminal

- 18 Load the inactive SMA2 unit by typing
>LOADPM INACTIVE
and pressing the Enter key.

If load	Do
passed	step 19
failed	step 27

- 19 Determine the name of the firmware load file by typing
>QUERYPM CNTRS
and pressing the Enter key.

NTAX74 in an SMA2 (continued)

Cross-reference this name to the disk volume name on the PMLoad File Office Record (or similar list of all PM load files maintained in your office).

	If the firmware load file name displayed is	Do
	the same	step 22
	different	step 20
20	Load the NTAX74 firmware In the inactive unit by typing >LOADFW INACTIVE and pressing the Enter key. <i>Note:</i> If the firmware_file is not specified with the LOADFW command, the command applies the firmware_file datafilled in the appropriate inventory table.	
	If LOADFW	Do
	passed	step 21
	failed	step 27
21	To upgrade the firmware on the inactive unit type >LOADFW INACTIVE UPGRADE and pressing the Enter key.	
	If LOADFW UPGRADE	Do
	passed	step 22
	failed	step 27
22	Return the inactive SMA2 unit to service by typing >RTS INACTIVE and pressing the Enter key.	
	If RTS	Do
	passed	step 23
	failed	step 27

At the frame or cabinet

- 23** Remove the sign from the active SMA2 unit.
- 24** Send any faulty cards for repair according to local procedure.

NTAX74

in an SMA2 (end)

- 25** Go to the common procedure "Returning a card for repair or replacement" in this section.

Go to step 28
- 26** Return to the *Alarm Clearing Procedure* or other procedure that directed you to this procedure. If necessary, go to the point where the faulty card list was produced, identify the next faulty card on the list, and go to the appropriate procedure for that card in this manual.
- 27** For further assistance, contact the personnel responsible for the next level of support.
- 28** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

**NTAX78
in an SMA**

Application

Use this procedure to replace an NTAX78 card in an SMA.

PEC	Suffixes	Name
NTAX78	AB	Enhanced Time Switch

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA”
- replacing a card
- returning a card


Do not go to the common procedures unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTAX78 in an SMA (continued)

Summary of card replacement procedure for an NTAX78 card in an SMA

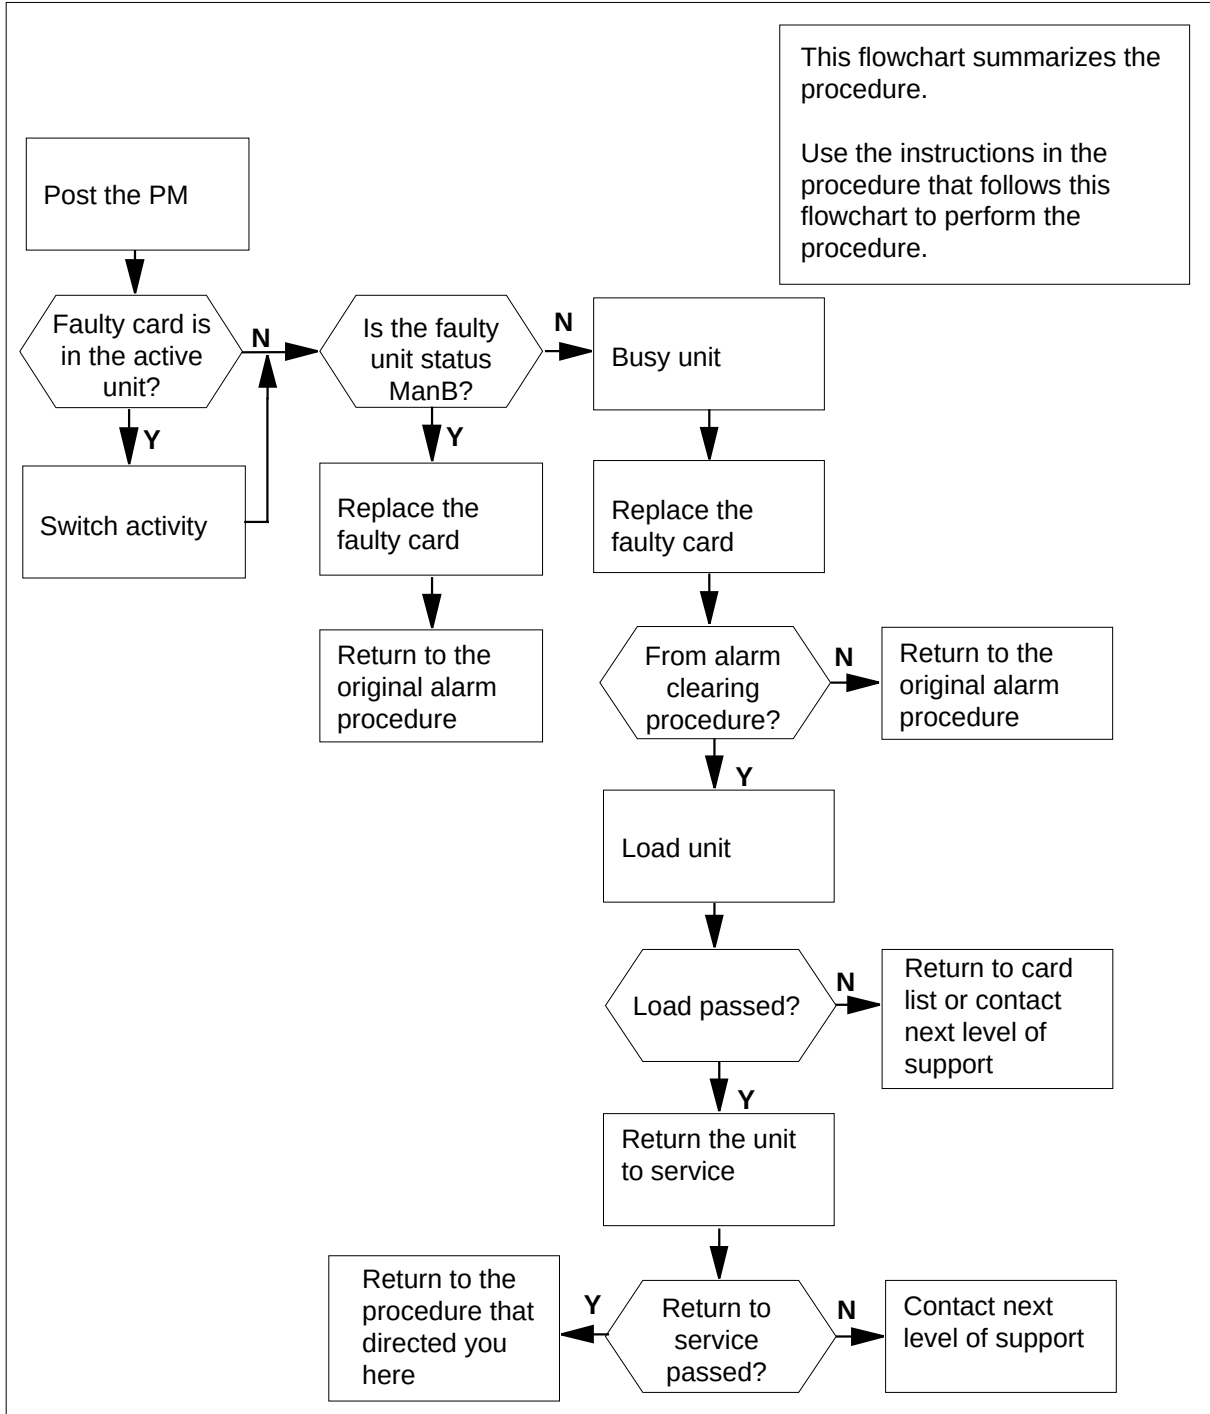

NTAX78 in an SMA (continued)

Replacing an NTAX78 card in an SMA

At your current location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If	Do
known	step 4
unknown	step 3
- 3 Perform the procedure "Locating a faulty card in an SMA."
- 4

**CAUTION****Loss of service**

Ensure that you replace the card in the inactive unit and verify the mate unit is active.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At your MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA by typing
>MAPCI; , MTC; PM; POST SMA sma_no
and pressing the Enter key.
where
sma_no
is the number of the SMA being posted
Example of a MAP response:

NTAX78**in an SMA** (continued)

SMA	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA	0	0	0	0	1	7

SMA 0 ISTb Links_00S: CSide 0, PSide 0
 Unit0: Act InSv
 Unit1: Inact ISTb

- 6 Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If faulty card is on	Do
active unit	step 7
inactive unit	step 10

- 7 Switch the activity of the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
can continue at this time	step 8
cannot continue at this time	step 23

- 8 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 10
SWACT failed Reason: XPM, SWACTback	step 9
SWACT refused by SWACT Controller	step 9

NTAX78 in an SMA (continued)

- 9 The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit.

Go to step 21.

At the equipment frame

- 10 Hang a sign on the active unit bearing the words: *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 11 Observe the MAP display and determine the state of the inactive unit.

If state is	Do
Manb	step 14
SysB, CBsy, ISTb, or InSv	step 12

- 12 Busy the inactive PM unit by typing

>BSY UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive SMA unit (0 or 1)

- 13 Reset the unit by typing

>PMRESET UNIT unit_no NORUN

and pressing the Enter key.

where

unit_no

is the number of the inactive SMA unit (0 or 1)

At the equipment frame

- 14



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the frame supervisory panel (FSP). This protects the equipment against damage caused by static electricity.

Perform the common replacing a card procedure in this document.

NTAX78

in an SMA (continued)

- 15** Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 19
other	step 16

- 16** Reset the unit by typing
>PMRESET UNIT unit_no
 and pressing the Enter key.
where
unit_no
 is the number of the inactive SMA unit (0 or 1)

At the MAP terminal

- 17** Load the inactive SMA unit by typing
>LOADPM UNIT unit_no
 and pressing the Enter key.
where
unit_no
 is the number of the busied SMA unit

If load	Do
passed	step 18
failed	step 21

- 18** Return the inactive SMA unit to service by typing
>RTS UNIT unit_no
 and pressing the Enter key.
where
unit_no
 is the number of the SMA unit loaded in step 17

If RTS	Do
passed	step 19
failed	step 21

At the equipment frame

- 19** Remove the sign from the active SMA unit.
20 Go to the common returning a card procedure in this document.

NTAX78
in an SMA (end)

Go to step 22.

- 21** For further assistance, contact the personnel responsible for the next level of support.
- 22** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.
- 23** For further assistance with switch of activity, contact the personnel responsible for the next level of support.

Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

NTAX78 in an SMA-MVI-20

Application

Use this procedure to replace an NTAX78 card in an SMA.

PEC	Suffixes	Name
NTAX78	AB	Enhanced Time Switch

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA”
- replacing a card


Do not go to the common procedures unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTAX78 in an SMA-MVI-20 (continued)

Summary of card replacement procedure for an NTAX78 card in an SMA

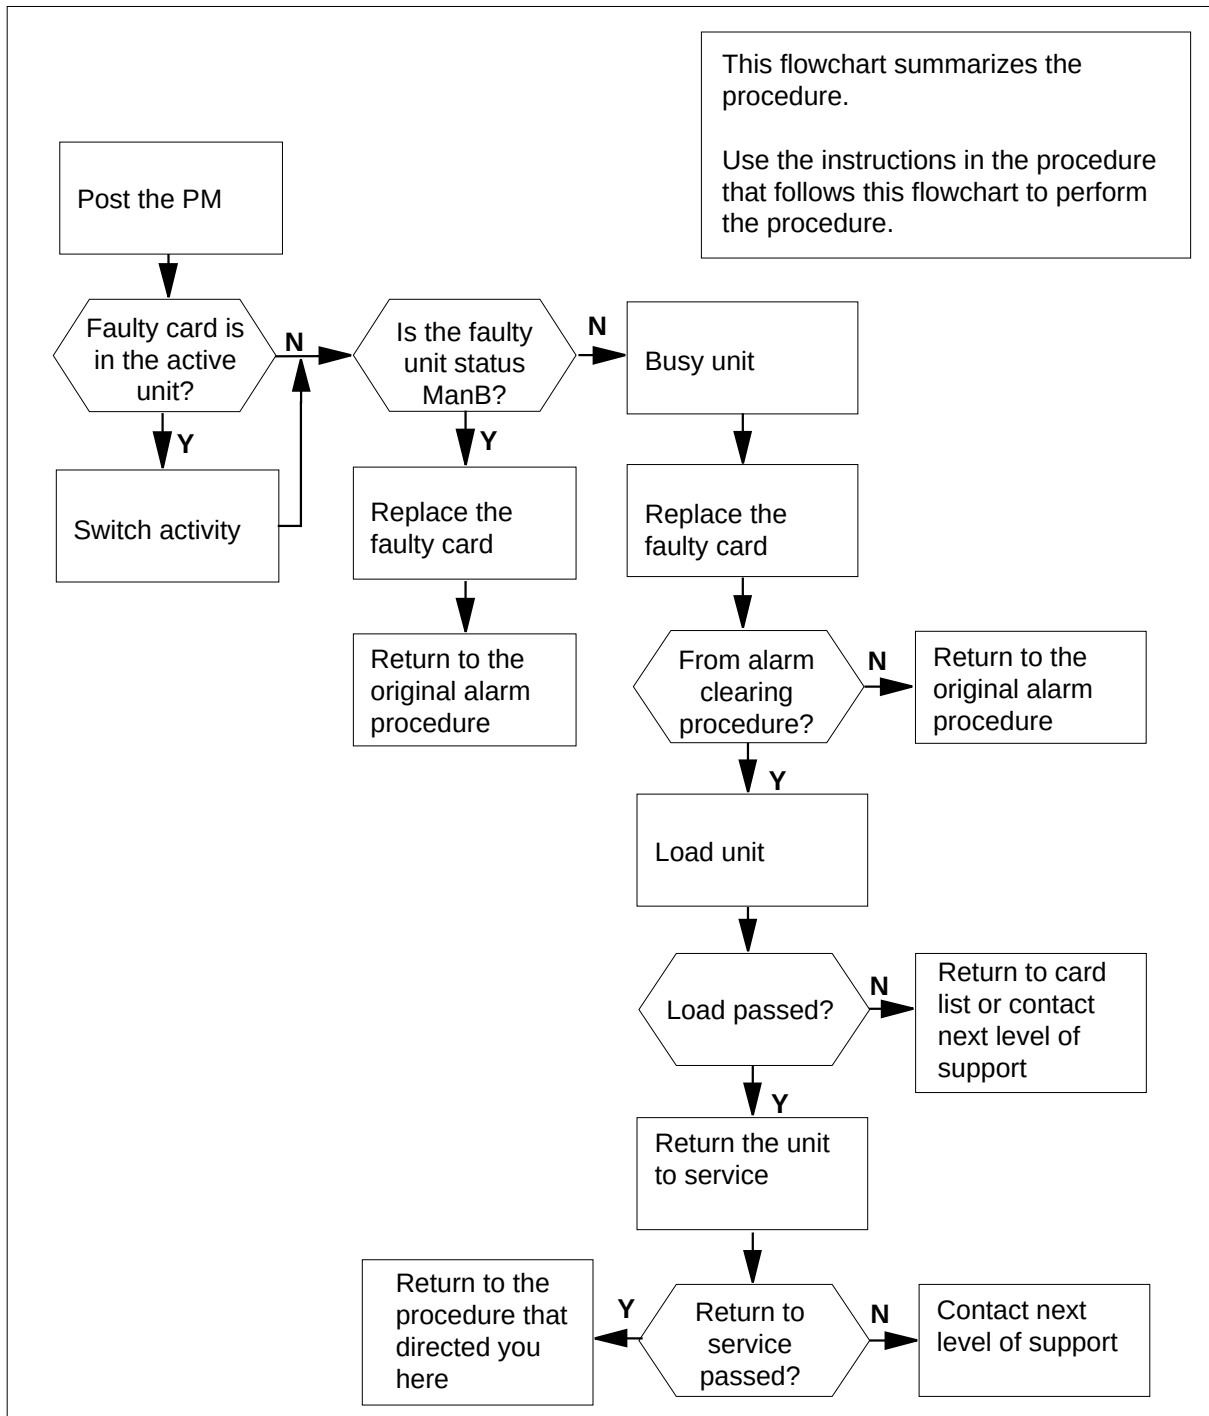

NTAX78 in an SMA-MVI-20 (continued)

Replacing an NTAX78 card in an SMA

At the equipment frame

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA."
- 4



CAUTION

Loss of service

Ensure that you replace the card in the inactive unit and verify the mate unit is active.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA by typing
>MAPCI; ,MTC;PM;POST SMA sma_no
and pressing the Enter key.

where

sma_no

is the number of the SMA being posted

Example of a MAP response:

NTAX78

in an SMA-MVI-20 (continued)

SMA	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA	0	0	0	0	1	7

SMA 0 ISTb Links_OOS: CSide 0, PSide 0
 Unit0: Act InSv
 Unit1: Inact ISTb

- 6 Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If faulty card is on	Do
active unit	step 7
inactive unit	step 11

- 7 SWACT the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
cannot continue at this time	step 8
can continue at this time	step 9

- 8 Reject the prompt to SWACT the unit by typing

>NO

and pressing the Enter key.

The system discontinues the SWACT.

- 9 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 11

NTAX78

in an SMA-MVI-20 (continued)

	If the message is	Do
	SWACT failed Reason: XPM, SWACTback	step 10
	SWACT refused by SWACT Controller	step 10
10	The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit. Go to step 23.	
At the equipment frame		
11	Hang a sign on the active unit bearing the words: <i>Active unit—Do not touch.</i> This sign should not be attached by magnets or tape.	
At the MAP terminal		
12	Observe the MAP display and determine the state of the inactive unit.	
	If state is	Do
	Manb	step 15
	SysB, CBsy, ISTb, or InSv	step 13
13	Busy the inactive PM unit by typing >BSY UNIT unit_no and pressing the Enter key. <i>where</i> unit_no is the number of the inactive SMA unit (0 or 1)	
14	Reset the unit by typing PMRESET UNIT unit_no NORUN and pressing the Enter key. <i>where</i> unit_no is the number of the inactive SMA unit (0 or 1)	

NTAX78

in an SMA-MVI-20 (continued)

At the equipment frame**15****WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the frame supervisory panel (FSP). This protects the equipment against damage caused by static electricity.

Perform the common replacing a card procedure in this document.

16

Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 20
other	step 17

17

Reset the unit by typing

PMRESET UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive SMA unit (0 or 1)

At the MAP terminal**18**

Load the inactive SMA unit by typing

>LOADPM UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the busied SMA unit

If load	Do
passed	step 19
failed	step 23

19

Return the inactive SMA unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

NTAX78

in an SMA-MVI-20 (end)

where

unit_no

is the number of the SMA unit loaded in step 18

If RTS	Do
passed	step 20
failed	step 23

At the equipment frame

- 20** Remove the sign from the active SMA unit.
- 21** Send any faulty cards for repair according to local procedure.
- 22** Note the following in the office records:
- date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
- Go to step 24.
- 23** For further assistance, contact the personnel responsible for the next level of support.
- 24** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

**NTAX78
in an SMU**

Application

Use this procedure to replace the following card in an SMU.

PEC	Suffix	Name
NTAX78	AB	Time switch

Common procedures


The common replacing a card procedure is referenced in this procedure.

Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTAX78 in an SMU (continued)

Summary of card replacement procedure for an NTAX78 card in an SMU

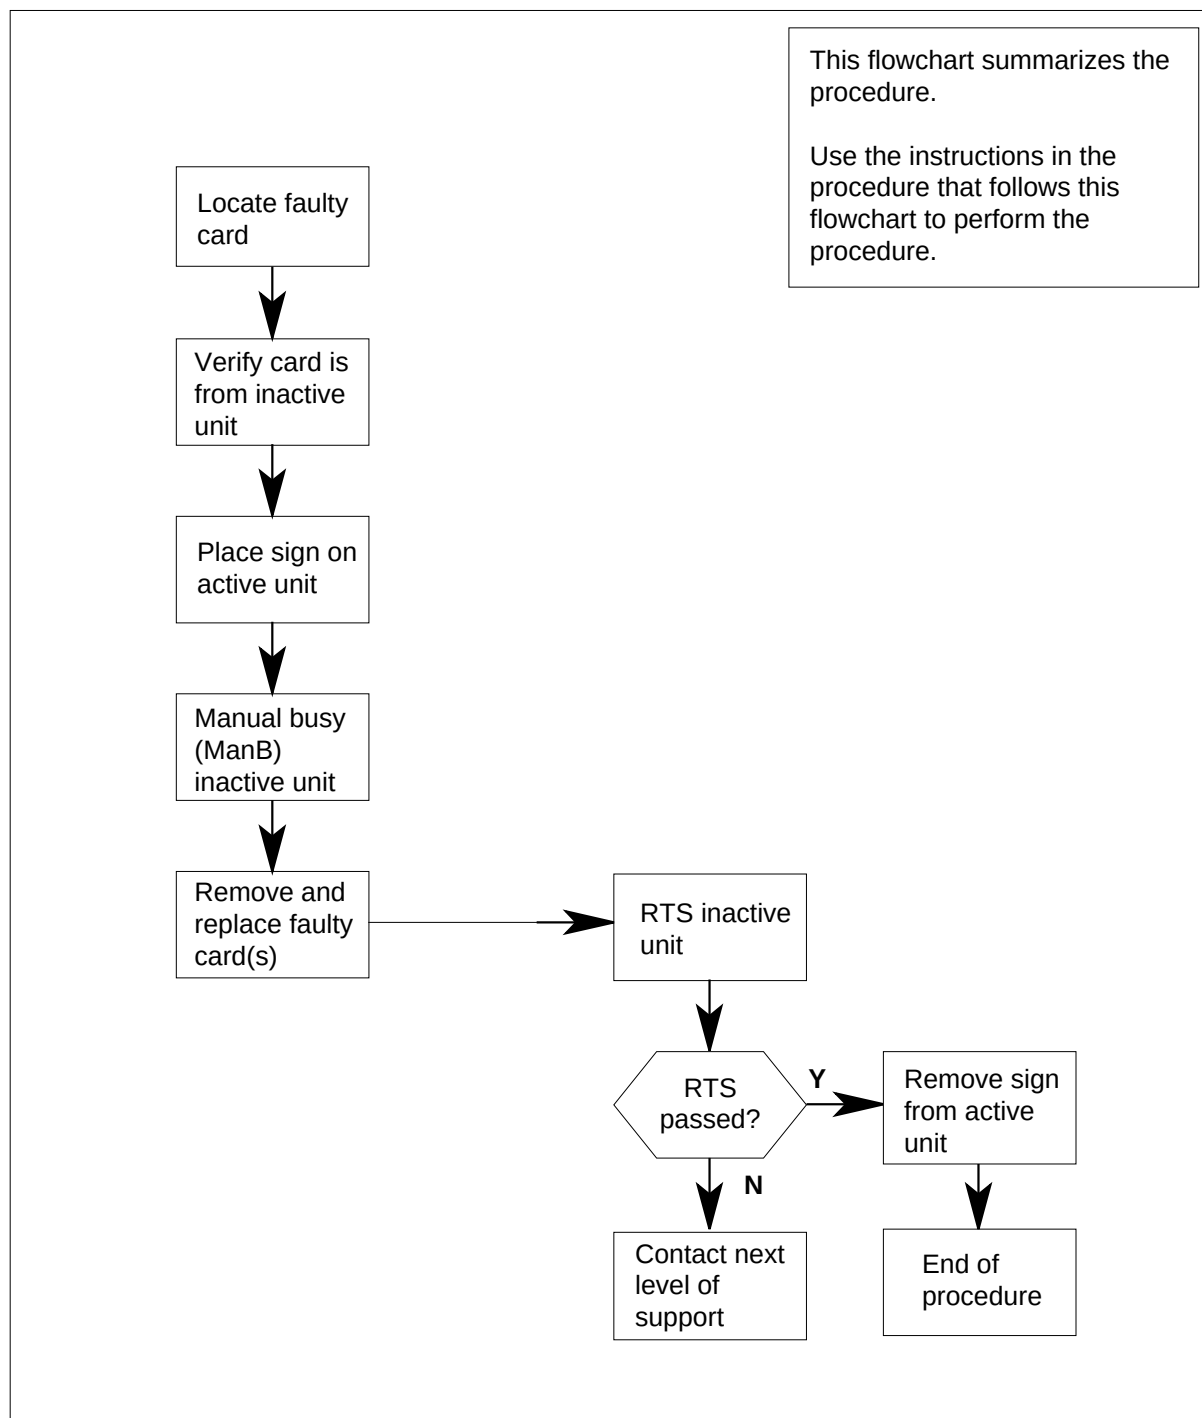

NTAX78
in an SMU (continued)

Replacing an NTAX78 card in an SMU

At your current location:

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure.
- 2



CAUTION
Loss of service
When replacing a card in the SMU, ensure that the unit where you are replacing the card is inactive and that the mate unit is active.

Get a replacement card. Ensure that the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal:

- 3 Ensure that the PM level of the MAP terminal is currently displayed by typing
>MAPCI;MTC;PM;POST SMU smu_no
and pressing the Enter key.
where

smu_no
is the number of the SMU to be posted

Example of a MAP response:

SMU	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	0	0	0	0	1	0
SMU	1	0	0	0	1	0

SMU 0 ISTb Links_00S: CSide 0, PSide 0
Unit0: Act SysB
Unit1: Inact InSv

- 4 By observing the MAP display, be sure the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 8

NTAX78

in an SMU (continued)

- 5 Switch the activity of the units by typing
>SWACT
 and pressing the Enter key.
 The system determines the type of SwAct it can perform. The system displays a confirmation prompt for the selected SwAct.

If SwAct	Do
can continue at this time	step 6
cannot continue at this time	step 18
- 6 Switch the activity of the unit by typing
>YES
 and pressing the Enter key.
 The system runs a pre-SwAct audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
passed	step 8
failed	step 7
SwAct failed Reason: XPM SwActback	step 7
SwAct refused by SwAct controller	step 7
- 7 Return to the *Alarm Clearing Procedures* to clear the alarm condition on the inactive unit. After the alarm is cleared, return to step 1 of this procedure.

At the SME frame:

 - 8 Put a sign on the active unit bearing the following words: "Active unit—Do not touch."

At the MAP terminal:

 - 9 Busy the inactive PM unit by typing
>BSY UNIT unit_no
 and pressing the Enter key.
where

NTAX78 in an SMU (end)

unit_no

is the number of the inactive SMU unit (0 or 1)

- 10** Go to the common replacing a card procedure in this document, then return to step 11 of this procedure.
- 11** Use the following information to determine where to go in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 13
other	step 12

- 12** Test the inactive SMU unit by typing

>TST UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the SMU unit busied in step 9

If TST	Do
passes	step 13
fails	step 13

- 13** Return to *Alarm Clearing Procedures*.
If necessary, go to the point where a faulty card list is initiated and identify the next faulty card on the list. Go to the appropriate card replacement procedure for that card.
- 14** Contact personnel responsible for higher level support and get further help to replace this card.
- 15** Send any faulty cards for repair according to local procedure.
- 16** Record the following items in the office records:
- date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
- 17** You have successfully completed this procedure. Remove the sign from the active unit, return to the maintenance procedure that directed you to this card replacement procedure, and continue as directed.
- 18** For further assistance with switch of activity, contact the personnel responsible for the next level of support.

Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

NTBX01 in an RSC RCC2

Application

Use this procedure to replace NTBX01 card in RSCE RCC2.


PEC	Suffixes	Name
NTBX01	AB	ISDN Preprocessor

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

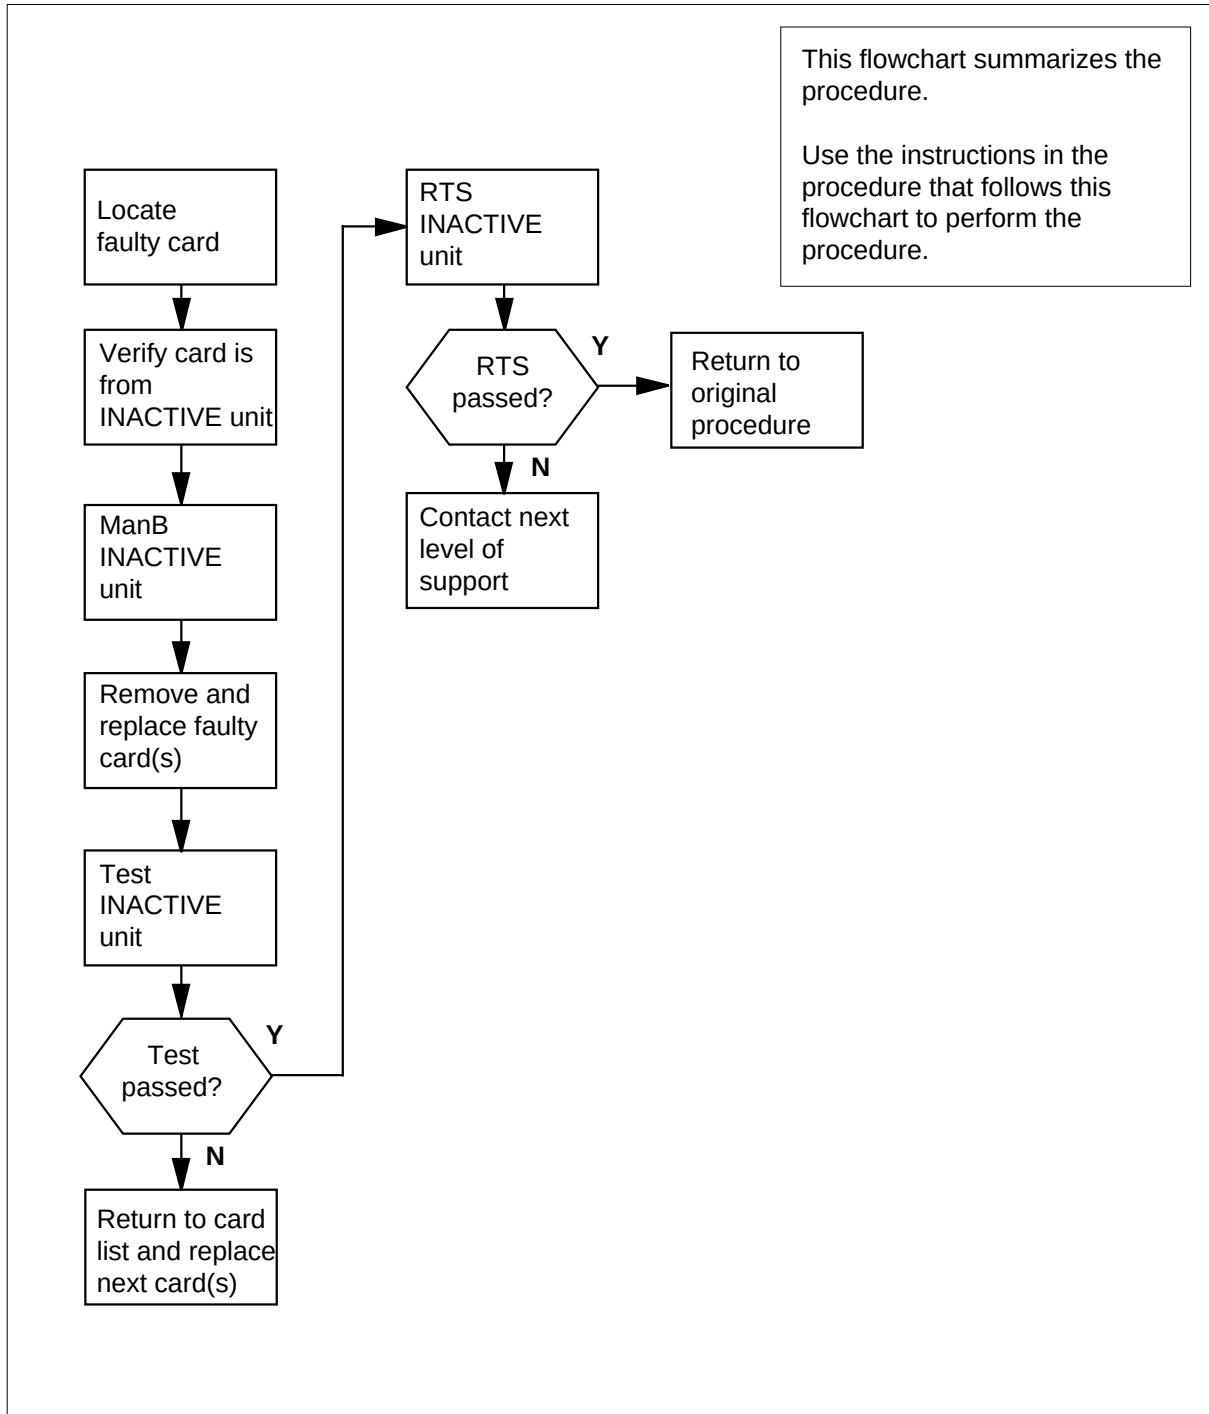NTBX01
in an RSC RCC2 (continued)**Summary of card replacement procedure for an NTBX01 card in RSCE RCC2**

NTBX01 in an RSC RCC2 (continued)

Replacing an NTBX01 card in RSCE RCC2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCC2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NTBX01 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Ensure the PM level of the MAP display is currently displayed and the RCC2 is posted by typing

>MAPCI;MTC;PM;POST RCC2 rcc2_unit_no

and pressing the Enter key.

where

rcc2_unit_no

is the number of the RCC2 with the faulty card

Example of a MAP display:

NTBX01 in an RSC RCC2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0	Quit	PM	0	0	0	0	0	25	
2	Post_	RCC2	0	0	0	0	0	0	
3	ListSet								
4		RCC2	0	ISTb	Links_00S:	CSide	0, PSide	0	
5	TRNSL	Unit0:	Inact	InSv					
6	TST	Unit1:	Act	InSv					
7	BSY								
8	RTS								
9	OffL								
10	LoadPM_								
11	Disp_								
12	Next_								
13									
14	QueryPM								
15									
16									
17									
18									

- 4 By observing the MAP display, ensure that the card to be removed is on the inactive unit.

At the RSCE frame

- 5 Place a sign on the active unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 6 Busy the inactive PM unit by typing

>bsy unit rcc2_unit_no

and pressing the Enter key.

where

rcc2_unit_no

is the number of the inactive RCC2 unit (0 or 1)

7



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel (FSP) of the RCC2. This protects the equipment against damage caused by static electricity.

NTBX01 in an RSC RCC2 (continued)



DANGER

Equipment damage


Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.


Put on a wrist strap.

- 8 Remove the NTBX01 card as shown in the following figures.

- a Locate the card to be removed on the appropriate shelf.

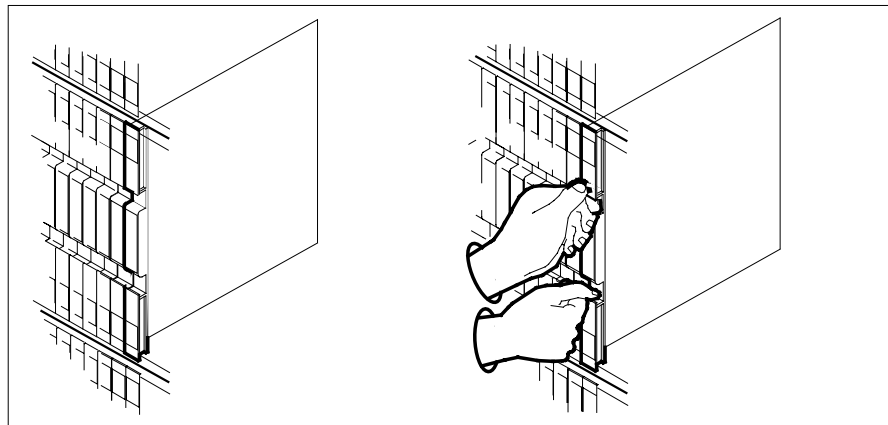


- b Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

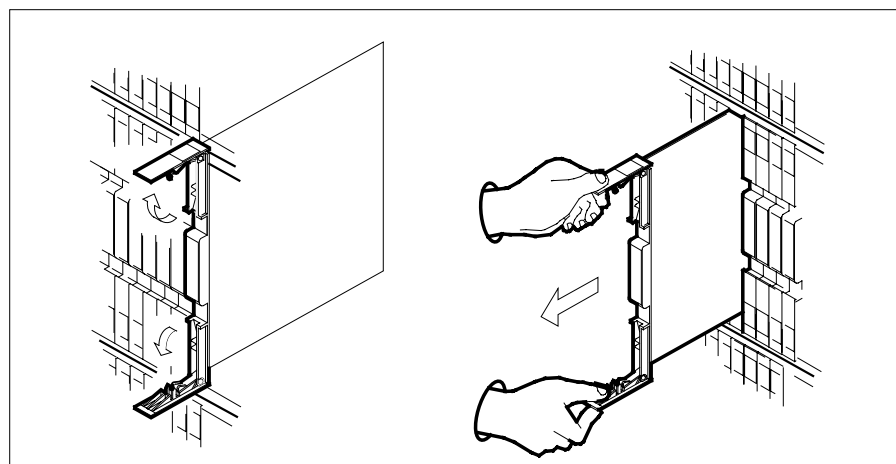


- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

NTBX01
in an RSC RCC2 (continued)

- 9 Open the locking levers on the replacement card.
- a Align the card with the slots in the shelf.
 - b Gently slide the card into the shelf.

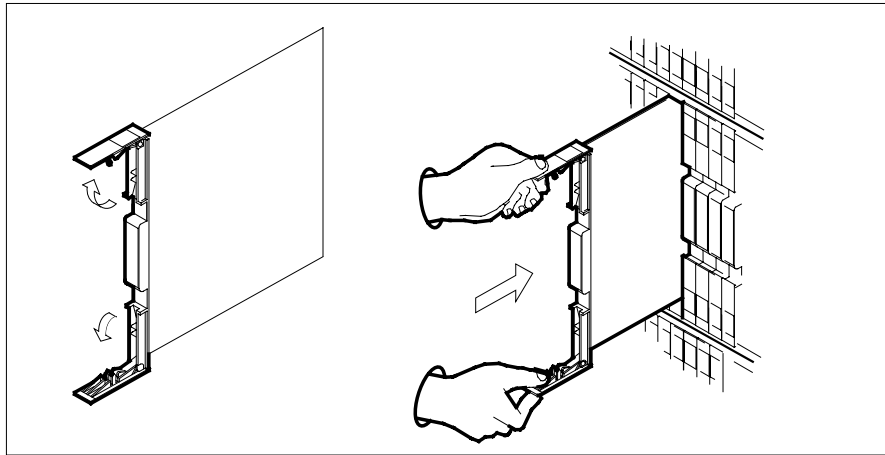

- 10 Seat and lock the card.
- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b Close the locking levers.

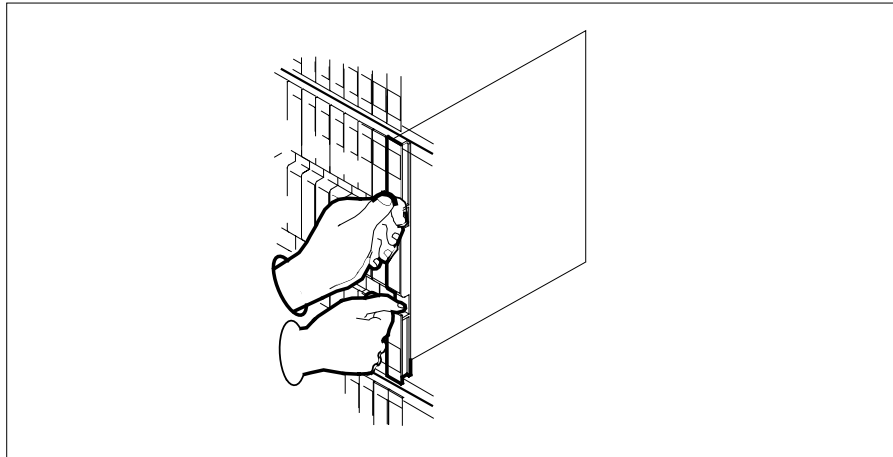**At the MAP terminal**

- 11 After replacing the faulty card, load the inactive RCC2 unit by typing
>LOADPM UNIT rcc2_unit_no CC
and pressing the Enter key.
where

NTBX01

in an RSC RCC2 (end)

- rcc2_unit_no**
is the number of the RCC2 unit busied in step 6
- 12** Use the following information to determine where to proceed.
- | If load | Do |
|---------|---------|
| passed | step 13 |
| failed | step 19 |
- 13** Use the following information to determine where to proceed.
- | If you entered this procedure from | Do |
|------------------------------------|---------|
| alarm clearing procedures | step 18 |
| other | step 14 |
- 14** Return the inactive RCC2 unit to service by typing
>RTS UNIT rcc2_unit_no
and pressing the Enter key.
where
rcc2_unit_no
is the number of the RCC2 unit busied in step 6
- 15** Use the following information to determine where to proceed.
- | If RTS | Do |
|--------|---------|
| passed | step 16 |
| failed | step 19 |
- 16** Send any faulty cards for repair according to local procedure.
- 17** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 20.
- 18** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in *Card Replacement Procedures*.
- 19** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 20** You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX01 in an RSC-S (DS-1) Model A RCC2

Application

Use this procedure to replace an NTBX01 card in an RSC-S RCC2.

PEC	Suffixes	Name
NTBX01	AB	ISDN Preprocessor
Note: NTBX01AC or NTBX01BA is required when the RCC2 is configured with the optional processor NTAX74AA instead of the NTMX77AA.		

Common procedures

None


Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX01

in an RSC-S (DS-1) Model A RCC2 (continued)

Summary of card replacement procedure for an NTBX01 card in RSC-S RCC2

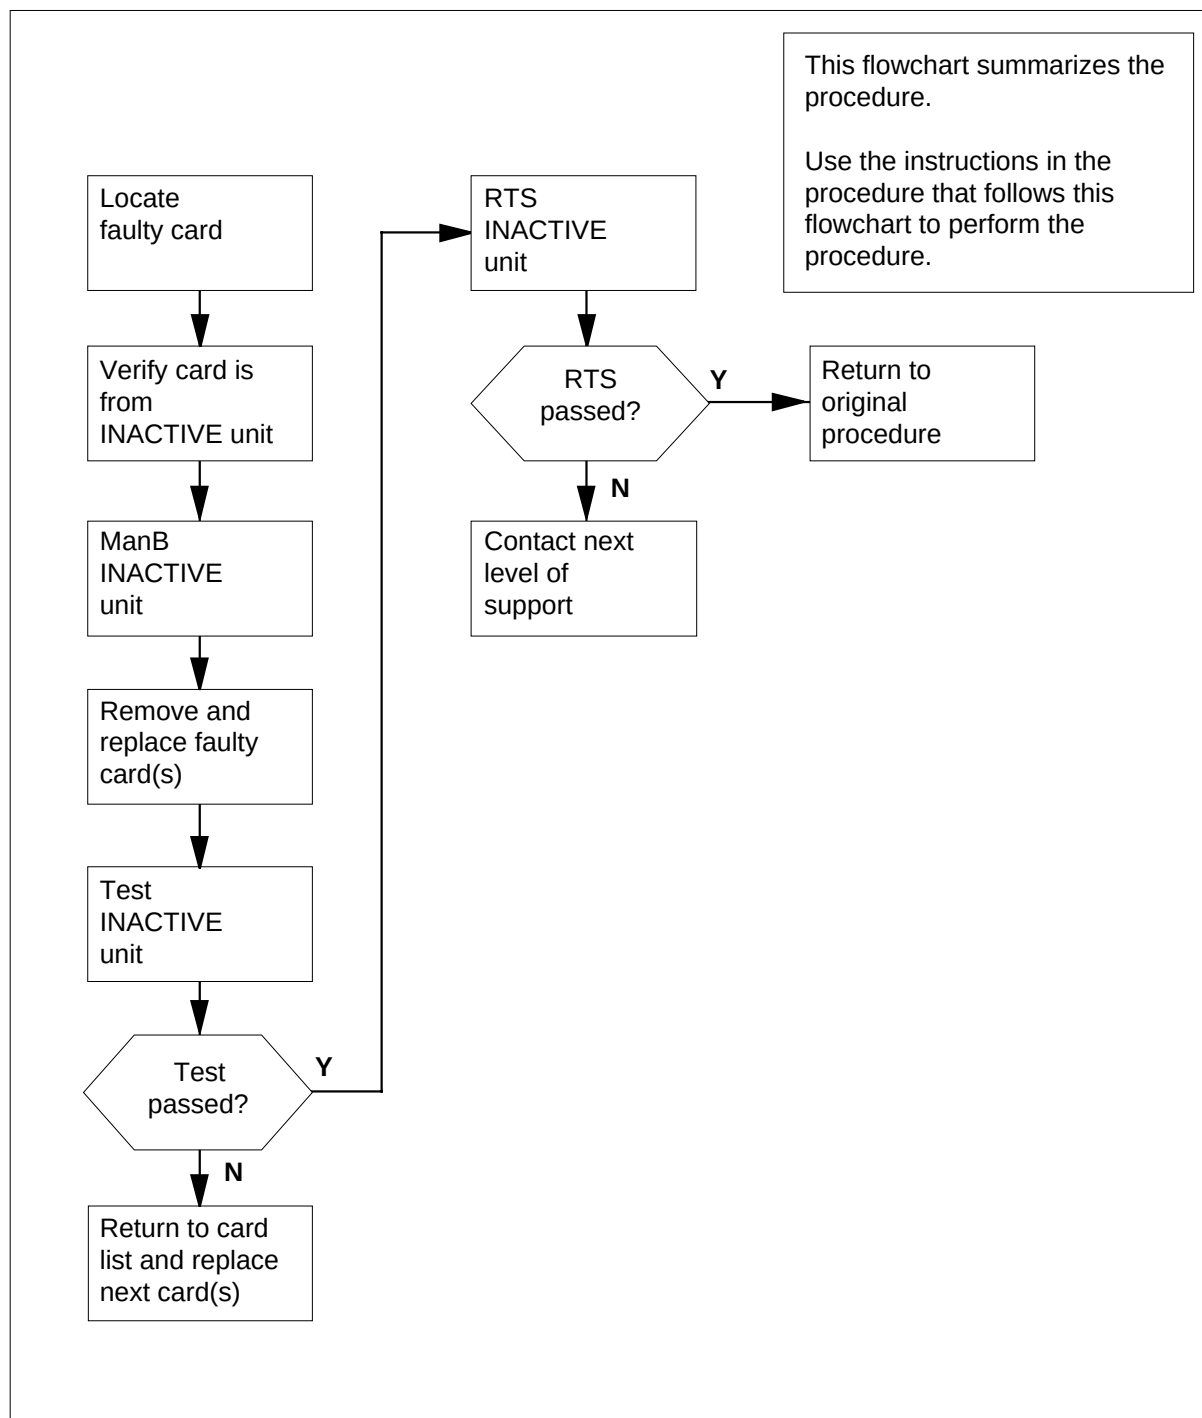

NTBX01 in an RSC-S (DS-1) Model A RCC2 (continued)

Replacing an NTBX01 card in RSC-S RCC2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2

**CAUTION****Loss of service**

When replacing a card in the RCC2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NTBX01 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Ensure the PM level of the MAP display is currently displayed and the RCC2 is posted by typing

>MAPCI;MTC;PM;POST RCC2 rcc2_unit_no

and pressing the Enter key.

where

rcc2_unit_no

is the number of the RCC2 with the faulty card

Example of a MAP display:

NTBX01**in an RSC-S (DS-1) Model A RCC2** (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	0	25
2 Post_	RCC2		0	0	0	0	0	0	0
3 ListSet									
4	RCC2		0 ISTb	Links_00S:	CSide	0, PSide	0		
5 TRNSL	Unit0:		Inact	InSv					
6 TST	Unit1:		Act	InSv					
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 By observing the MAP display, ensure that the card to be removed is on the inactive unit.

If faulty card is on**Do**

active unit

step 5

inactive unit

step 7

- 5 Switch the processing activity (SWACT) to the inactive unit by typing

>SWACT

and pressing the Enter key.

- 6 Confirm the system prompt by typing

>YES

and pressing the Enter key.

After both units are in service, proceed to the next step.

At the RCE frame

- 7 Place a sign on the active unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

NTBX01 in an RSC-S (DS-1) Model A RCC2 (continued)

At the MAP terminal

- 8 Busy the inactive PM unit by typing
>bsy unit rcc2_unit_no
and pressing the Enter key.
where
rcc2_unit_no
is the number of the inactive RCC2 unit (0 or 1)

At the RCE frame

9



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel (FSP) of the RCC2. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage


Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.


Put on a wrist strap.

- 10 Remove the NTBX01 card as shown in the following figures.
- a Locate the card to be removed on the appropriate shelf.

NTBX01
in an RSC-S (DS-1) Model A RCC2 (continued)

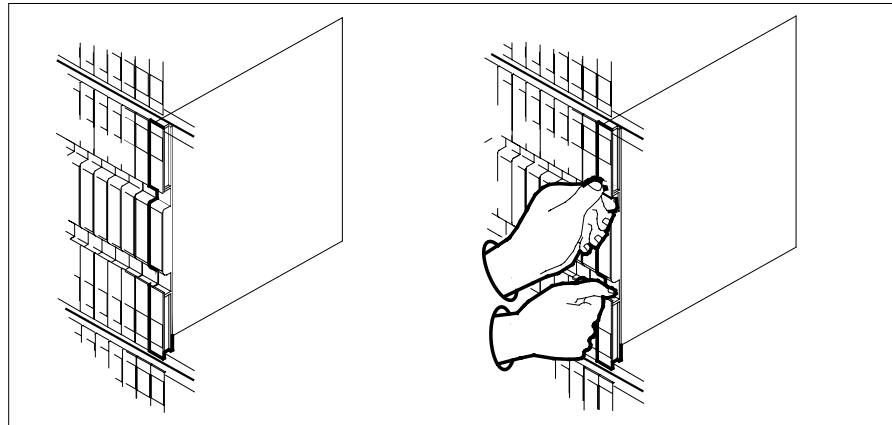


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

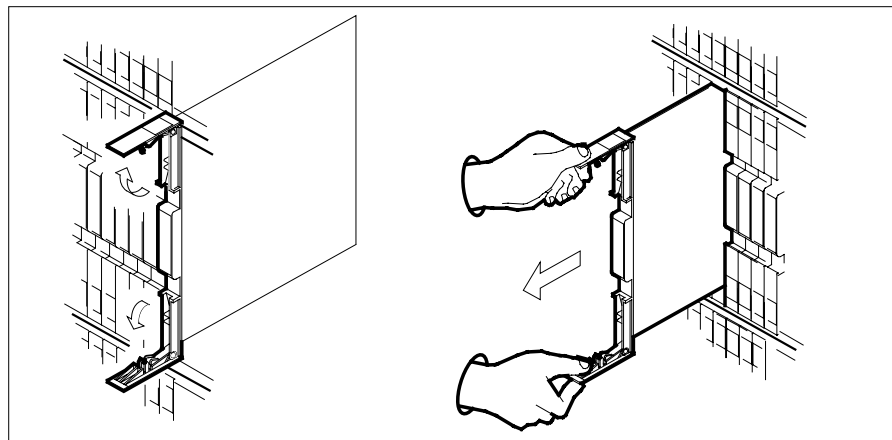


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.
- 11** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf.
- b** Gently slide the card into the shelf.

NTBX01
in an RSC-S (DS-1) Model A RCC2 (continued)

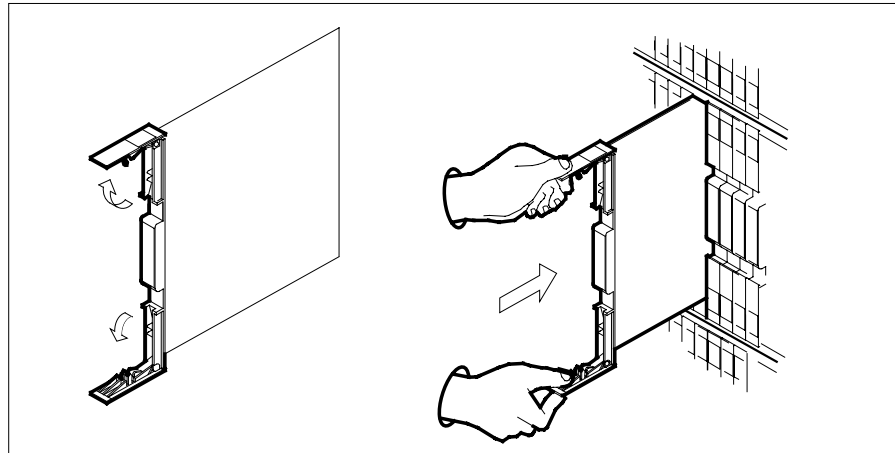

- 12** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

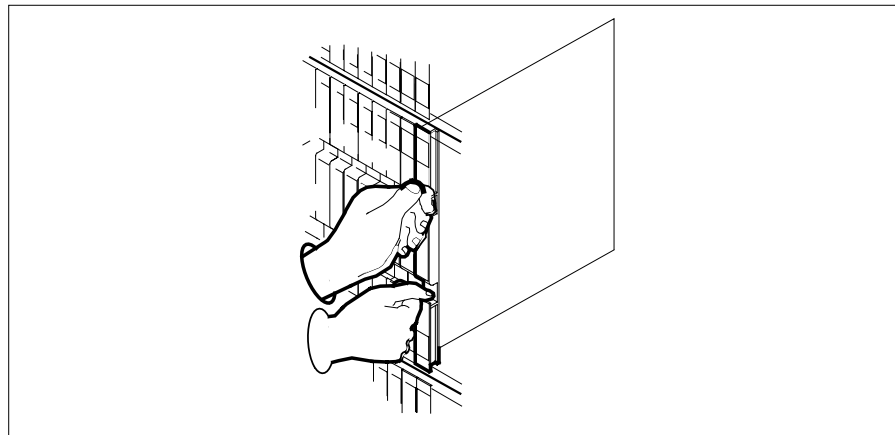**At the MAP terminal**

- 13** After replacing the faulty card, load the inactive RCC2 unit by typing
>LOADPM UNIT rcc2_unit_no CC
and pressing the Enter key.
where
rcc2_unit_no
is the number of the RCC2 unit busied in step 8

NTBX01**in an RSC-S (DS-1) Model A RCC2** (continued)

- 14** Use the following information to determine where to proceed.

If load	Do
passed	step 15
failed	step 23

- 15** Test the inactive unit by typing
>TST UNIT rcc2_unit_no
 and pressing the Enter key.
where

rcc2_unit_no
 is the number of the RCC2 unit loaded in step 13

- 16** Use the following information to determine where to proceed.

If TST	Do
passed	step 17
failed	step 22

- 17** Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 22
other	step 18

- 18** Return the inactive RCC2 unit to service by typing
>RTS UNIT rcc2_unit_no
 and pressing the Enter key.
where

rcc2_unit_no
 is the number of the RCC2 unit tested in step 15

- 19** Use the following information to determine where to proceed.

If RTS	Do
passed	step 20
failed	step 23

- 20** Send any faulty cards for repair according to local procedure.

NTBX01

in an RSC-S (DS-1) Model A RCC2 (end)

- 21** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 24.
- 22** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in *Card Replacement Procedures*.
- 23** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 24** You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX01 in an RSC-S (DS-1) Model B RCC2

Application

Use this procedure to replace an NTBX01 card in an RSC-S RCC2.


PEC	Suffixes	Name
NTBX01	AB	ISDN Preprocessor
Note: NTBX01AC or NTBX01BA is required when the RCC2 is configured with the optional processor NTAX74AA instead of the NTMX77AA.		

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

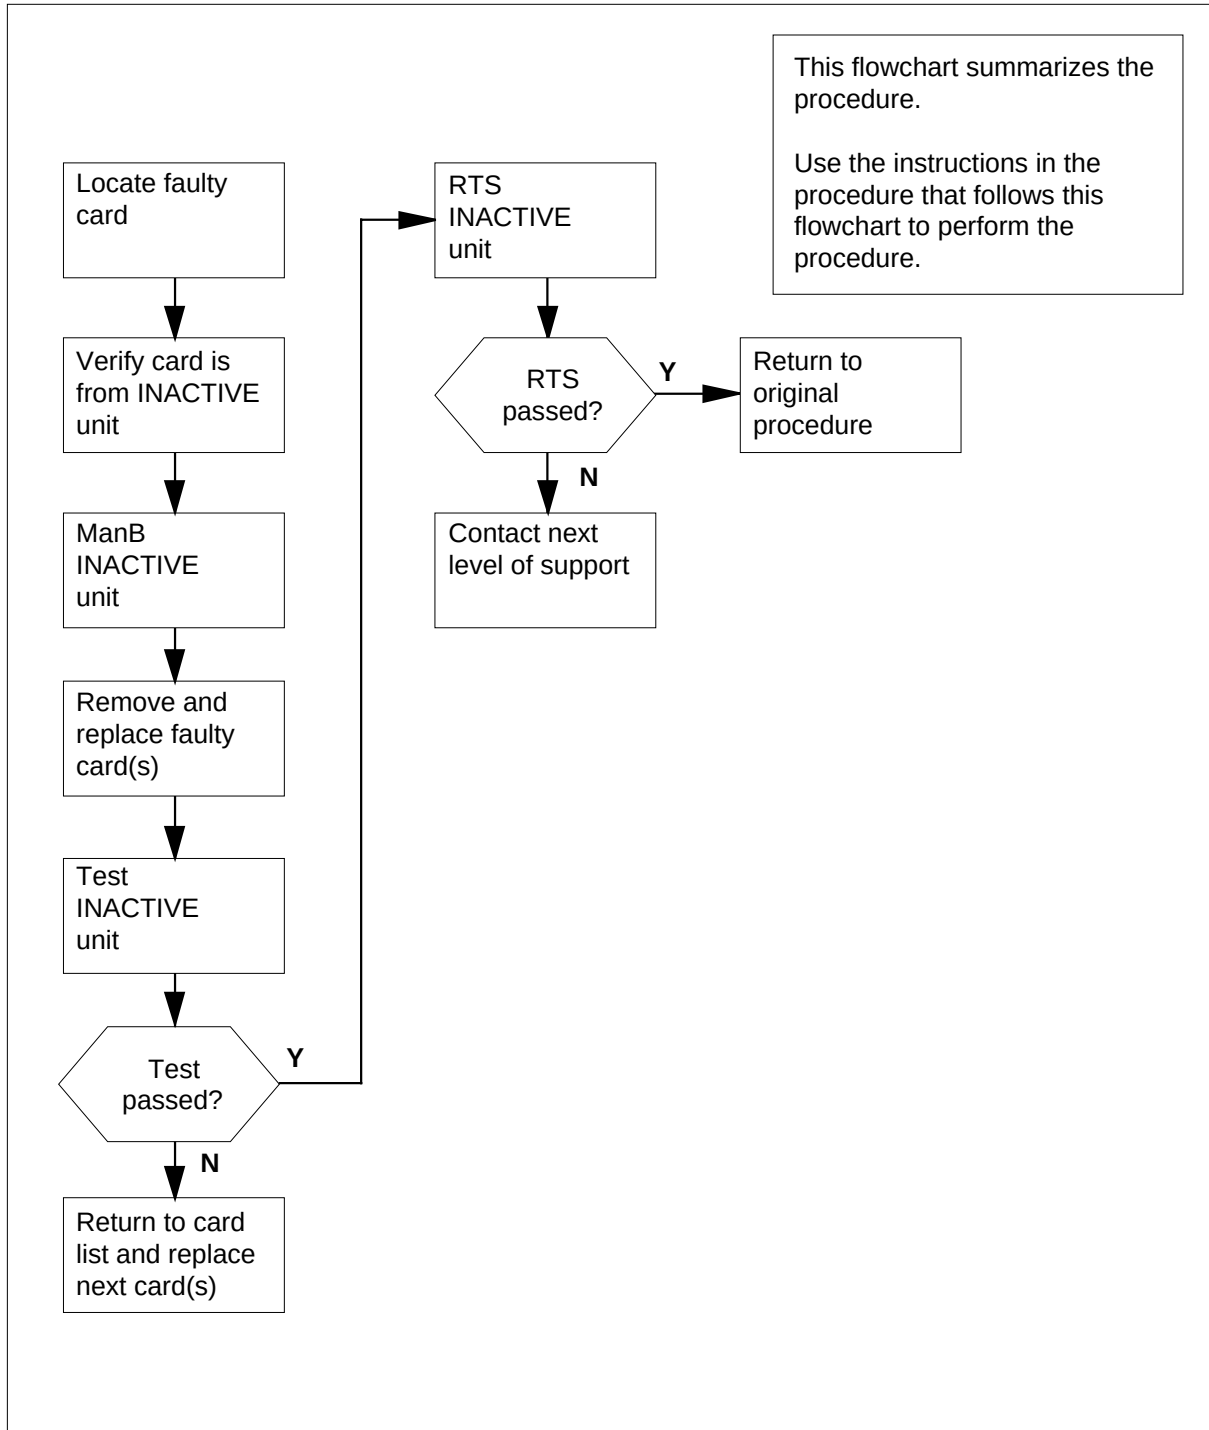NTBX01
in an RSC-S (DS-1) Model B RCC2 (continued)**Summary of card replacement procedure for an NTBX01 card in RSC-S RCC2**

NTBX01 in an RSC-S (DS-1) Model B RCC2 (continued)

Replacing an NTBX01 card in RSC-S RCC2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCC2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NTBX01 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Ensure the PM level of the MAP display is currently displayed and the RCC2 is posted by typing

>MAPCI;MTC;PM;POST RCC2 rcc2_unit_no

and pressing the Enter key.

where

rcc2_unit_no

is the number of the RCC2 with the faulty card

Example of a MAP display:

NTBX01
in an RSC-S (DS-1) Model B RCC2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0	Quit	PM	0	0	0	0	0	25	
2	Post_	RCC2	0	0	0	0	0	0	
3	ListSet								
4		RCC2	0	ISTb	Links_00S:	CSide	0, PSide	0	
5	TRNSL	Unit0:	Inact	InSv					
6	TST	Unit1:	Act	InSv					
7	BSY								
8	RTS								
9	OffL								
10	LoadPM_								
11	Disp_								
12	Next_								
13									
14	QueryPM								
15									
16									
17									
18									

- 4 By observing the MAP display, ensure that the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 7

- 5 Switch the processing activity (SWACT) to the inactive unit by typing **>SWACT** and pressing the Enter key.
- 6 Confirm the system prompt by typing **>YES** and pressing the Enter key.
- After both units are in service, proceed to the next step.

At the RCE frame

- 7 Place a sign on the active unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

NTBX01 in an RSC-S (DS-1) Model B RCC2 (continued)

At the MAP terminal

- 8 Busy the inactive PM unit by typing
>bsy unit rcc2_unit_no
and pressing the Enter key.
where
rcc2_unit_no
is the number of the inactive RCC2 unit (0 or 1)

At the RCE frame

9



DANGER

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the modular supervisory panel (MSP) of the RCC2. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage


Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.


Put on a wrist strap.

- 10 Remove the NTBX01 card as shown in the following figures.
- a Locate the card to be removed on the appropriate shelf.

NTBX01
in an RSC-S (DS-1) Model B RCC2 (continued)

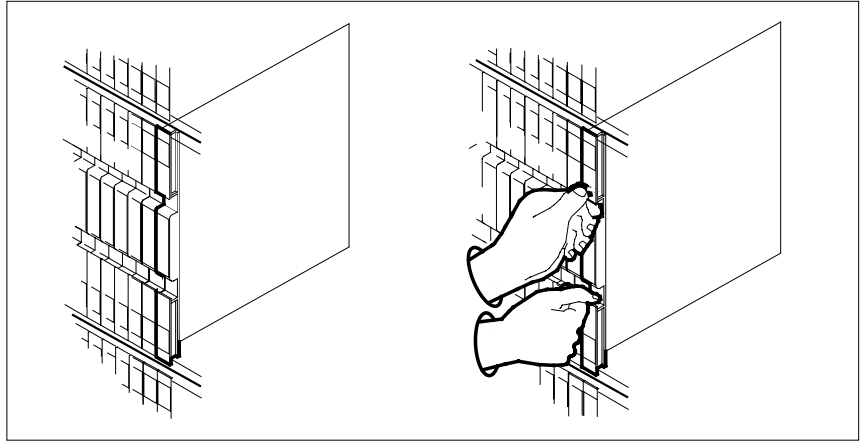


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

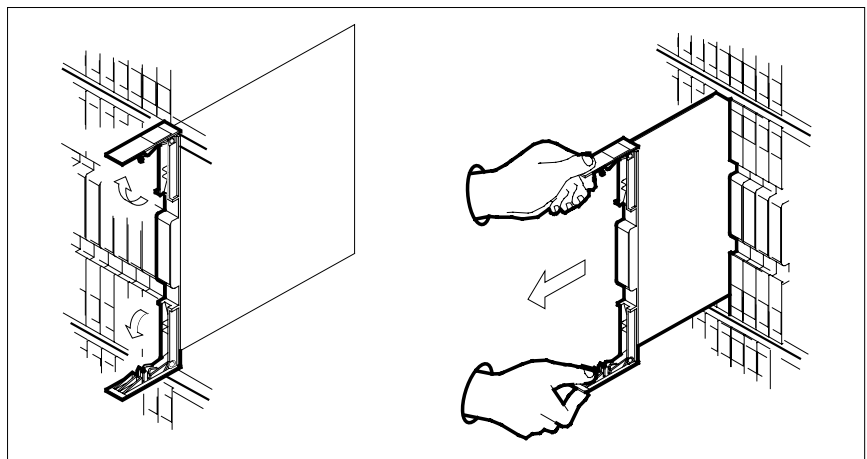


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.
- 11** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf.
- b** Gently slide the card into the shelf.

NTBX01

in an RSC-S (DS-1) Model B RCC2 (continued)

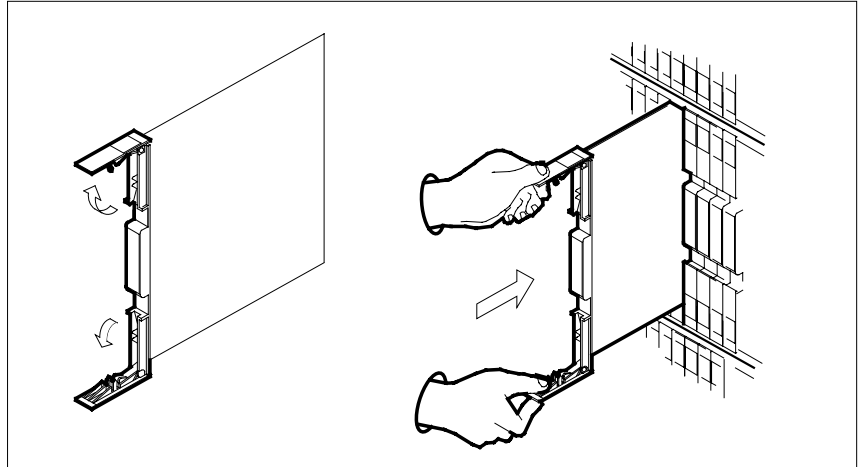

- 12 Seat and lock the card.
- Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - Close the locking levers.

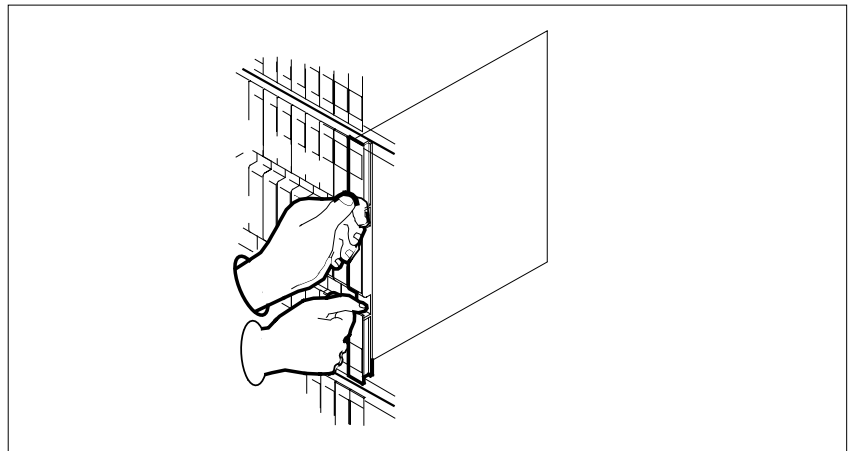

At the MAP terminal

- 13 After replacing the faulty card, load the inactive RCC2 unit by typing
>LOADPM UNIT rcc2_unit_no CC
and pressing the Enter key.
where

rcc2_unit_no
is the number of the RCC2 unit busied in step 8

NTBX01

in an RSC-S (DS-1) Model B RCC2 (continued)

- 14** Use the following information to determine where to proceed.

If load	Do
passed	step 15
failed	step 23

- 15** Test the inactive unit by typing
>TST UNIT rcc2_unit_no
 and pressing the Enter key.
where

rcc2_unit_no
 is the number of the RCC2 unit loaded in step 13

- 16** Use the following information to determine where to proceed.

If TST	Do
passed	step 17
failed	step 22

- 17** Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 22
other	step 18

- 18** Return the inactive RCC2 unit to service by typing
>RTS UNIT rcc2_unit_no
 and pressing the Enter key.
where

rcc2_unit_no
 is the number of the RCC2 unit tested in step 15

- 19** Use the following information to determine where to proceed.

If RTS	Do
passed	step 20
failed	step 23

- 20** Send any faulty cards for repair according to local procedure.

NTBX01
in an RSC-S (DS-1) Model B RCC2 (end)

- 21 Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 24.
- 22 Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in *Card Replacement Procedures*.
- 23 Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 24 You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX01 in an RSC-S (PCM-30) Model A RCO2

Application

Use this procedure to replace an NTBX01 card in an RSC-S RCO2.

PEC	Suffixes	Name
NTBX01	AB, AC, BA	ISDN Signaling Preprocessor
Note: NTBX01AC or NTBX01BA is required when the RCO2 is configured with the optional processor NTAX74AA instead of the NTMX77AA.		

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX01 in an RSC-S (PCM-30) Model A RCO2 (continued)

Summary of card replacement procedure for an NTBX01 card in RSC-S RCO2

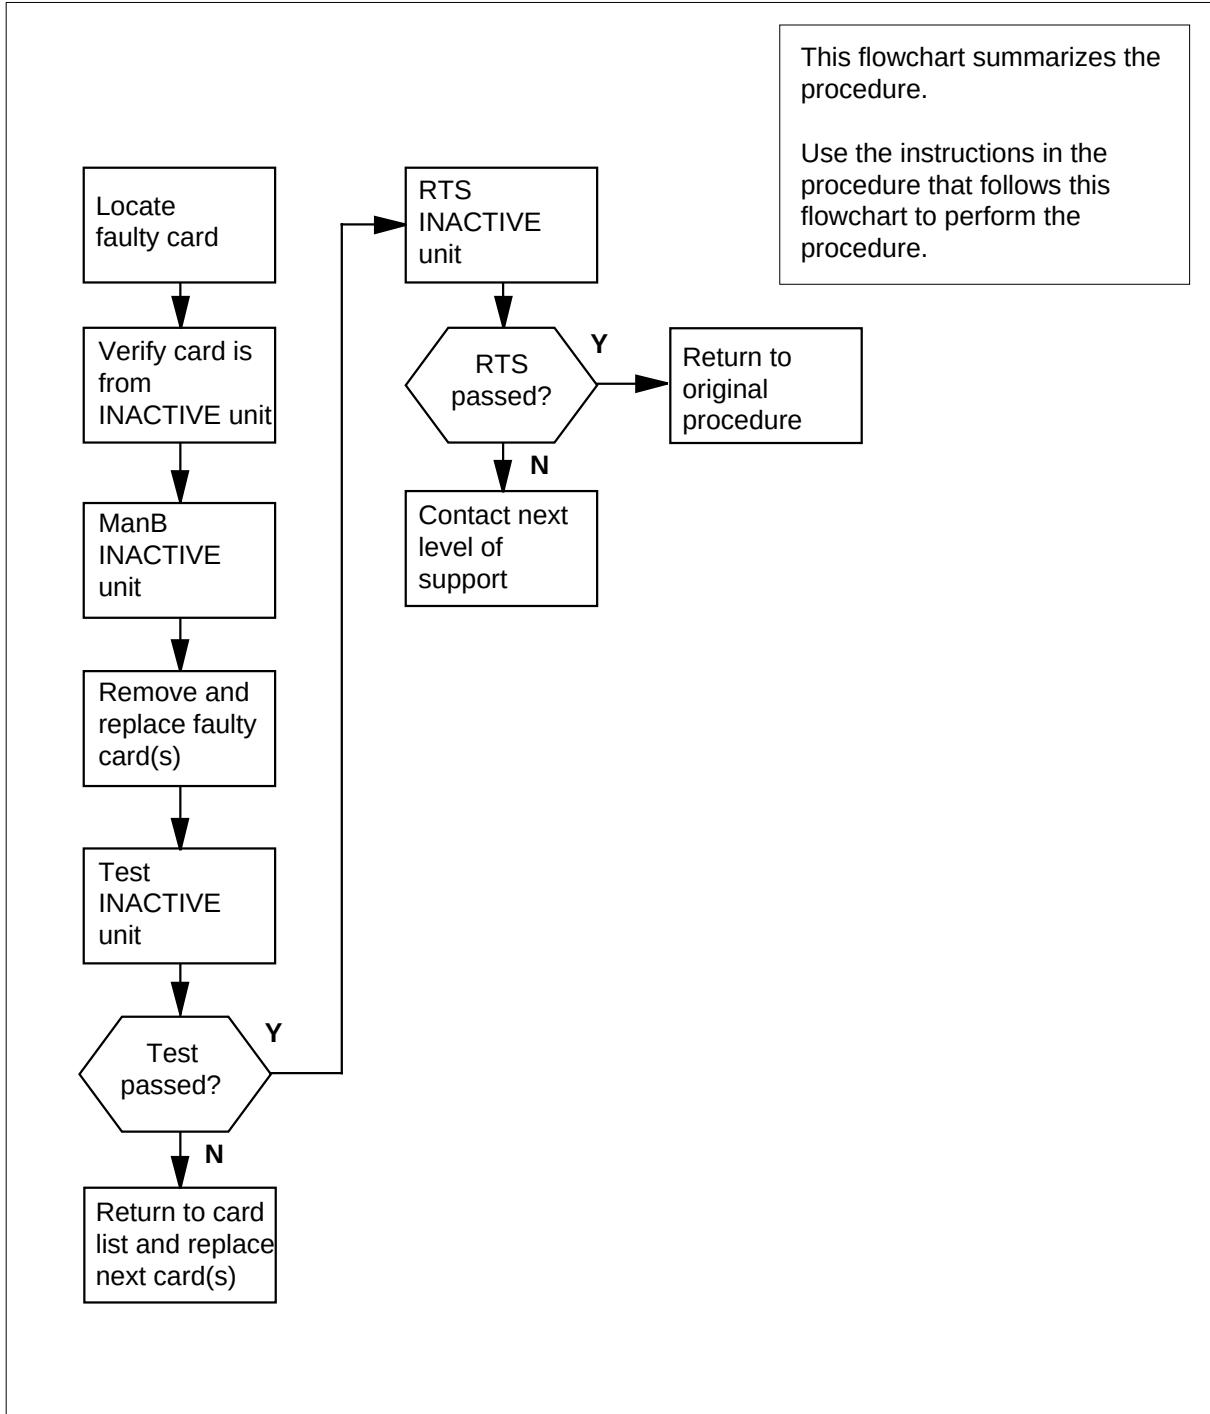

NTBX01 in an RSC-S (PCM-30) Model A RCO2 (continued)

Replacing an NTBX01 card in RSC-S RCO2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2

**CAUTION****Loss of service**

When replacing a card in the RCO2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NTBX01 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Ensure the PM level of the MAP display is currently displayed and the RCO2 is posted by typing

>MAPCI;MTC;PM;POST RCO2 rco2_unit_no

and pressing the Enter key.

where

rco2_unit_no

is the number of the RCO2 with the faulty card

Example of a MAP display:

NTBX01**in an RSC-S (PCM-30) Model A RCO2 (continued)**

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCO2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	25	
2 Post_	RCO2		0	0	0	0	0	0	
3 ListSet									
4	RCO2		0	ISTb	Links_00S:	CSide	0, PSide	0	
5 TRNSL	Unit0:		Inact	InSv					
6 TST	Unit1:		Act	InSv					
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 By observing the MAP display, be sure that the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 7

- 5 Switch the processing activity (SWACT) to the inactive unit by typing

>SWACT

and pressing the Enter key.

Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

- 6 Confirm the system prompt by typing

>YES

and pressing the Enter key.

After both units are in service, proceed to the next step.

At the RCE frame

- 7 Put a sign on the *active* unit bearing the words "Active unit—Do not touch." This sign should not be attached by magnets or tape.

NTBX01

in an RSC-S (PCM-30) Model A RCO2 (continued)

At the MAP terminal

- 8 Busy the inactive PM unit by typing
>bsy unit rco2_unit_no
and pressing the Enter key.
where
rco2_unit_no
is the number of the inactive RCO2 unit (0 or 1)

At the RCE frame

9

**WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the modular supervisory panel of the RCO2. This protects the equipment against damage caused by static electricity.

**DANGER****Equipment damage**


Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.


Put on a wrist strap.

- 10 Remove the NTBX01 card as shown in the following figures.
- a Locate the card to be removed on the appropriate shelf.

NTBX01
in an RSC-S (PCM-30) Model A RCO2 (continued)

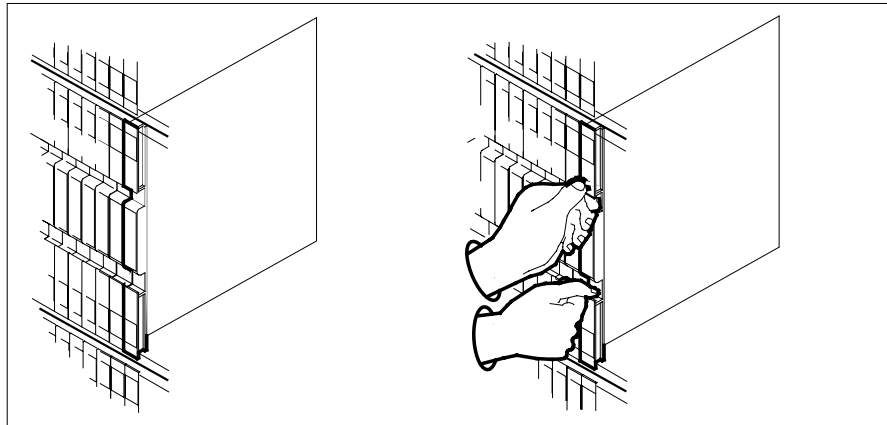


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

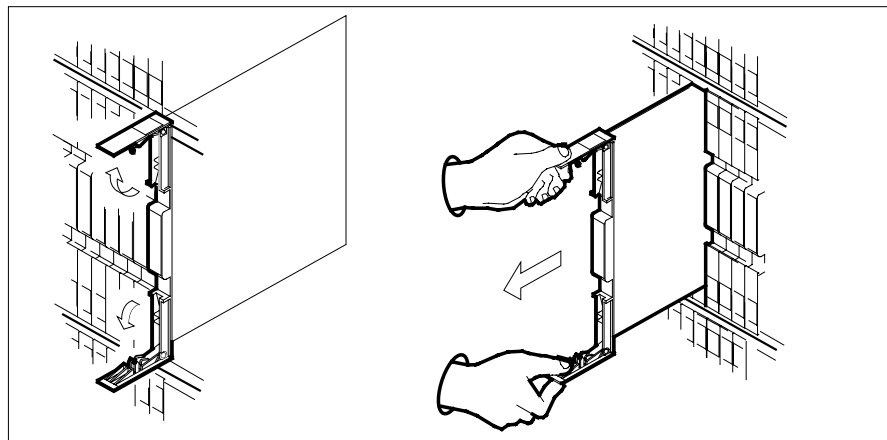


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.
- 11** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf.
- b** Gently slide the card into the shelf.

NTBX01
in an RSC-S (PCM-30) Model A RCO2 (continued)

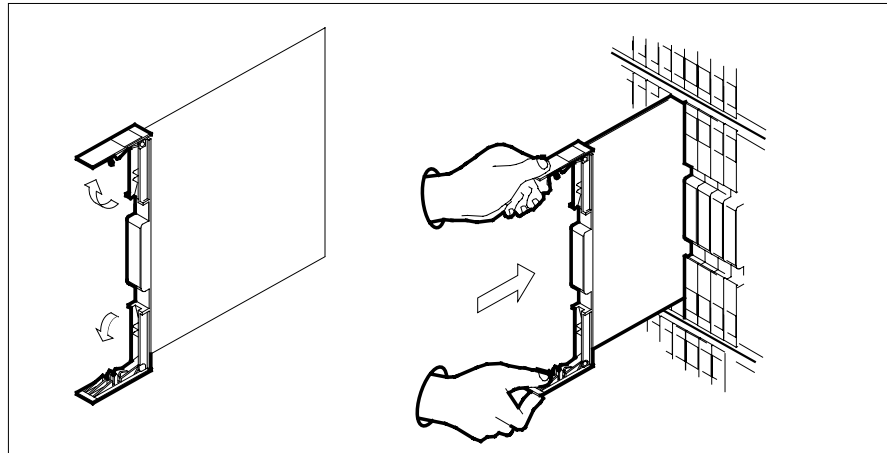

- 12** Seat and lock the card.
- Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - Close the locking levers.

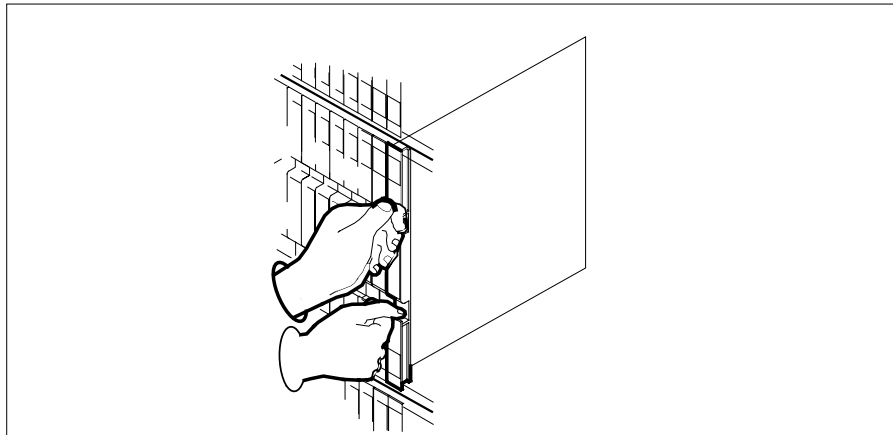***At the MAP terminal***

- 13** After replacing the faulty card, load the inactive RCO2 unit by typing
>LOADPM UNIT rco2_unit_no CC
and pressing the Enter key.
where
rco2_unit_no
is the number of the RCO2 unit busied in step 8

NTBX01**in an RSC-S (PCM-30) Model A RCO2** (continued)

- 14 Use the following information to determine where to proceed.

If LOADPM	Do
passed	step 15
failed	step 23

- 15 Test the inactive unit by typing
>TST UNIT rco2_unit_no
 and pressing the Enter key.
where

rco2_unit_no
 is the number of the RCO2 unit loaded in step 13

- 16 Use the following information to determine where to proceed.

If TST	Do
passed	step 17
failed	step 22

- 17 Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 22
other	step 18

- 18 Return the inactive RCO2 unit to service by typing
>RTS UNIT rco2_unit_no
 and pressing the Enter key.
where

rco2_unit_no
 is the number of the RCO2 unit tested in step 15

- 19 Use the following information to determine where to proceed.

If RTS	Do
passed	step 20
failed	step 24

- 20 Send any faulty cards for repair according to local procedure.

NTBX01

in an RSC-S (PCM-30) Model A RCO2 (end)

- 21** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 24.
- 22** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 23** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 24** You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX01 in an RSC-S (PCM-30) Model B RCO2

Application

Use this procedure to replace an NTBX01 card in an RSC-S RCO2.

PEC	Suffixes	Name
NTBX01	AB, AC, BA	ISDN Signaling Preprocessor
Note: NTBX01AC or NTBX01BA is required when the RCO2 is configured with the optional processor NTAX74AA instead of the NTMX77AA.		

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX01 in an RSC-S (PCM-30) Model B RCO2 (continued)

Summary of card replacement procedure for an NTBX01 card in RSC-S RCO2

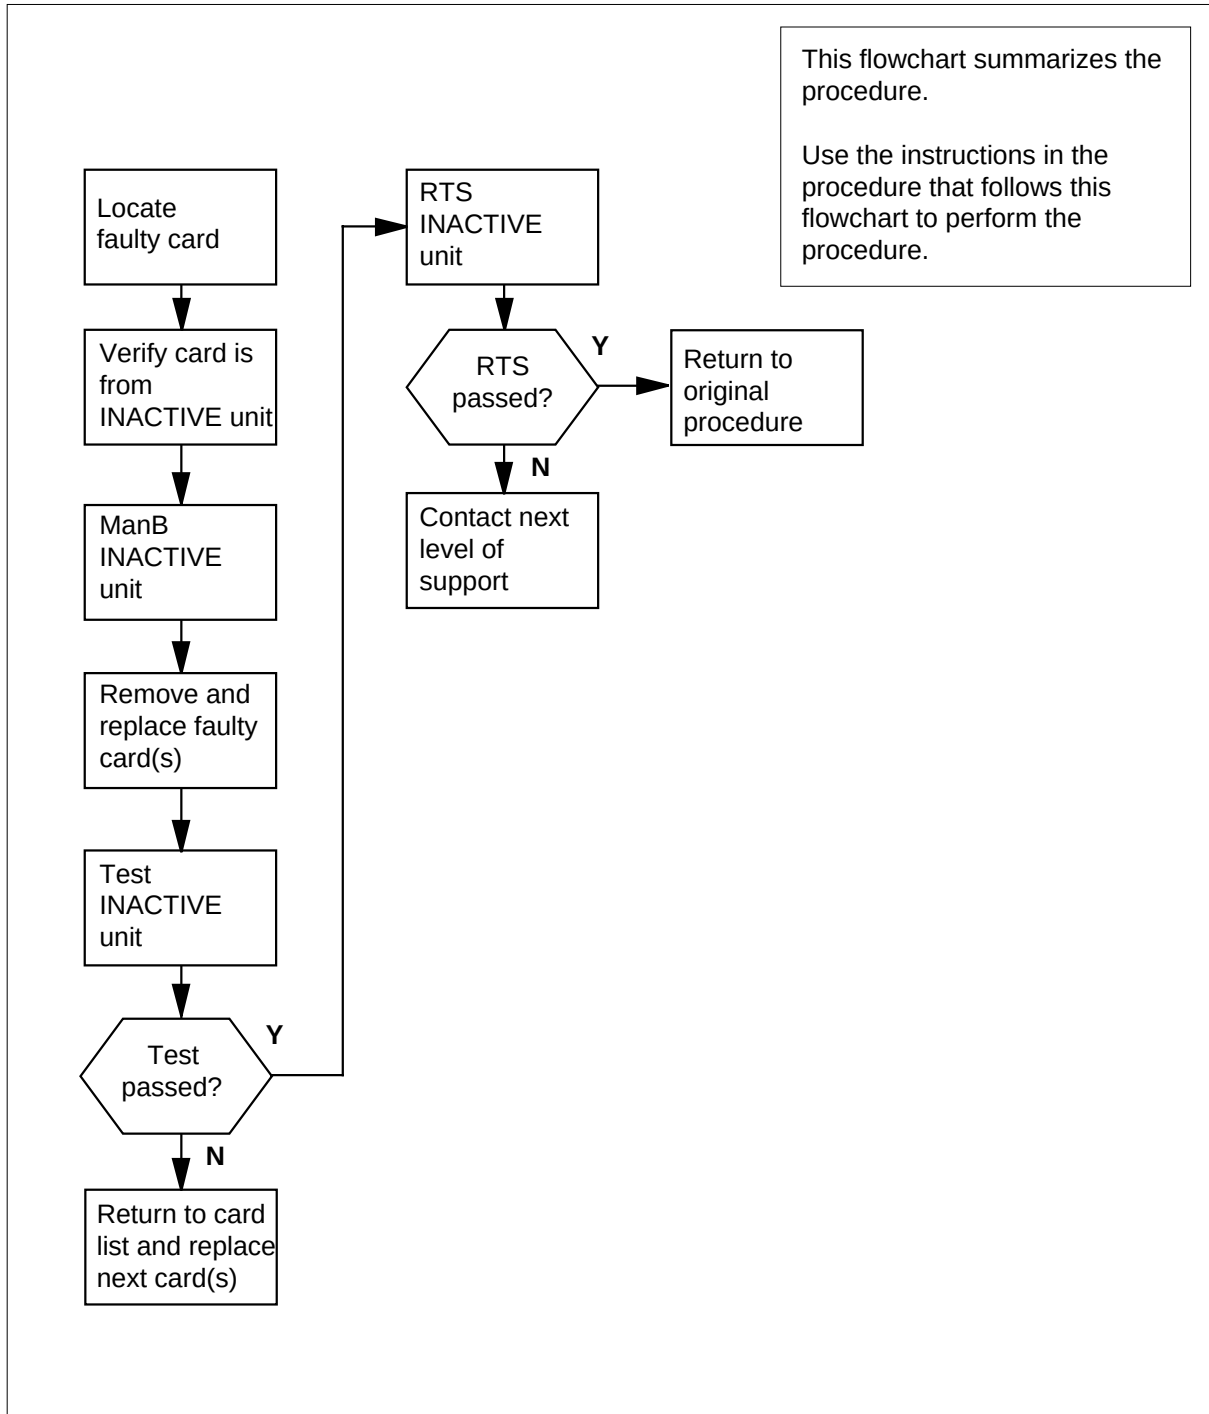

NTBX01 in an

RSC-S (PCM-30) Model B RCO2

Replacing an NTBX01 card in RSC-S RCO2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCO2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NTBX01 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Ensure the PM level of the MAP display is currently displayed and the RCO2 is posted by typing

>MAPCI;MTC;PM;POST RCO2 rco2_unit_no

and pressing the Enter key.

where

rco2_unit_no

is the number of the RCO2 with the faulty card

Example of a MAP display:

NTBX01
in an RSC-S (PCM-30) Model B RCO2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCO2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	25	
2 Post_	RCO2		0	0	0	0	0	0	
3 ListSet									
4	RCO2	0	ISTb	Links_00S:	CSide	0,	PSide	0	
5 TRNSL	Unit0:	Inact	InSv						
6 TST	Unit1:	Act	InSv						
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 By observing the MAP display, be sure that the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 7

- 5 Switch the processing activity (SWACT) to the inactive unit by typing **>SWACT** and pressing the Enter key.
- Note:** If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.
- 6 Confirm the system prompt by typing **>YES** and pressing the Enter key.

At the RCE frame

- 7 Put a sign on the *active* unit bearing the words "Active unit—Do not touch." This sign should not be attached by magnets or tape.

NTBX01 in an

RSC-S (PCM-30) Model B RCO2

At the MAP terminal

- 8 Busy the inactive PM unit by typing
>bsy unit rco2_unit_no
and pressing the Enter key.
where
rco2_unit_no
is the number of the inactive RCO2 unit (0 or 1)

At the RCE frame

9



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the modular supervisory panel of the RCO2. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.

Put on a wrist strap.


- 10 Remove the NTBX01 card as shown in the following figures.
- a Locate the card to be removed on the appropriate shelf.

NTBX01

in an RSC-S (PCM-30) Model B RCO2 (continued)

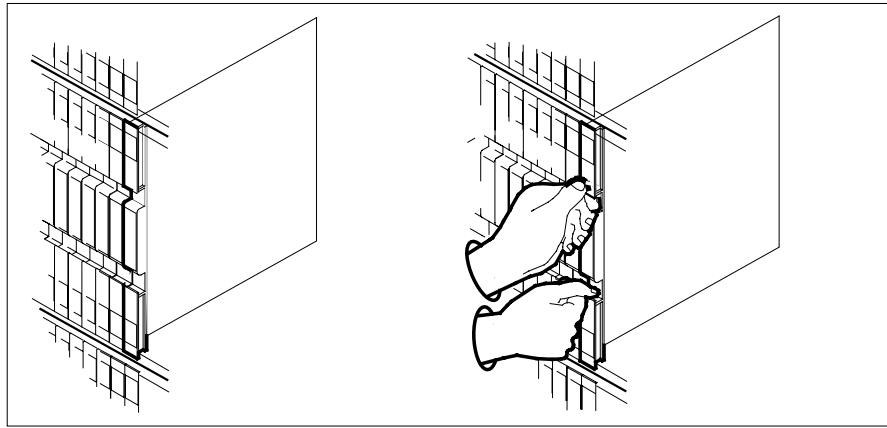


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

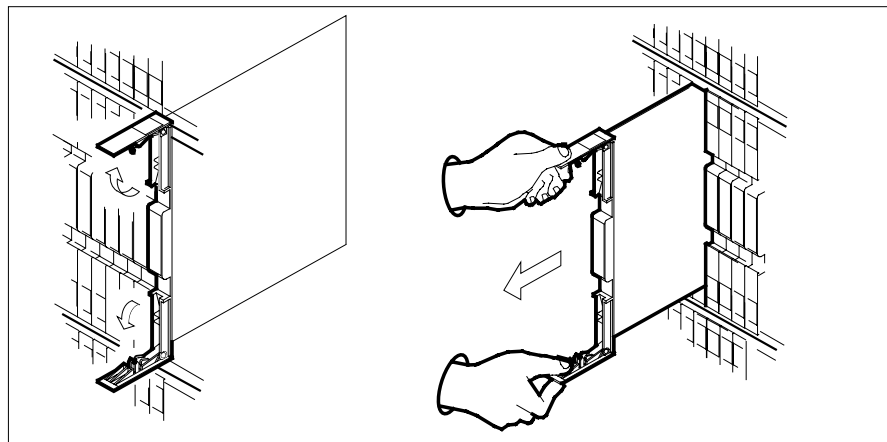


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.
- 11** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf.
- b** Gently slide the card into the shelf.

NTBX01
in an

RSC-S (PCM-30) Model B RCO2

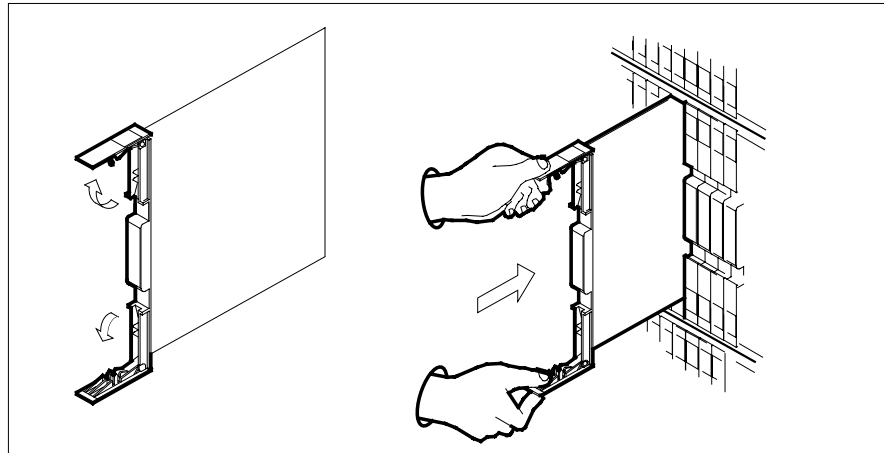

- 12** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

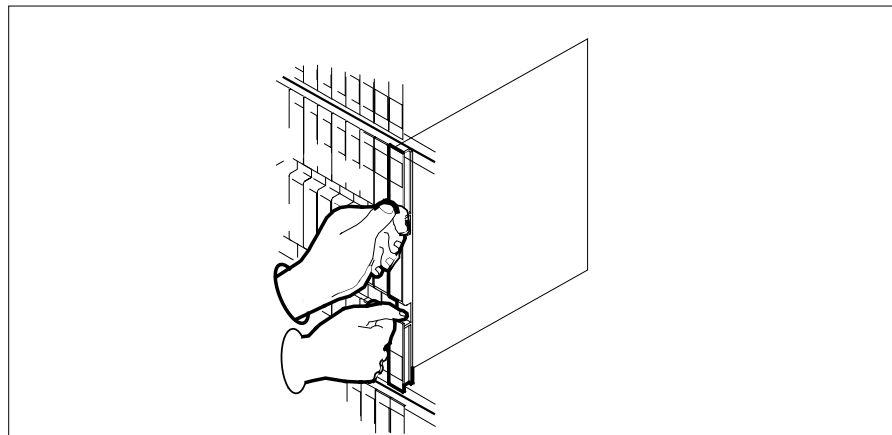

At the MAP terminal

- 13** After replacing the faulty card, load the inactive RCO2 unit by typing
>LOADPM UNIT rco2_unit_no CC
and pressing the Enter key.
where
rco2_unit_no
is the number of the RCO2 unit busied in step 8

NTBX01

in an RSC-S (PCM-30) Model B RCO2 (continued)

- 14** Use the following information to determine where to proceed.

If LOADPM	Do
passed	step 15
failed	step 23

- 15** Test the inactive unit by typing
>TST UNIT rco2_unit_no
 and pressing the Enter key.
where

rco2_unit_no
 is the number of the RCO2 unit loaded in step 13

- 16** Use the following information to determine where to proceed.

If TST	Do
passed	step 17
failed	step 22

- 17** Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 22
other	step 18

- 18** Return the inactive RCO2 unit to service by typing
>RTS UNIT rco2_unit_no
 and pressing the Enter key.
where

rco2_unit_no
 is the number of the RCO2 unit tested in step 15

- 19** Use the following information to determine where to proceed.

If RTS	Do
passed	step 20
failed	step 24

- 20** Send any faulty cards for repair according to local procedure.

NTBX01
in an

RSC-S (PCM-30) Model B RCO2

- 21** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 24.
- 22** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 23** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 24** You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

**NTBX01
in an SMA**

Application

Use this procedure to replace an NTBX01 card in an SMA.

PEC	Suffixes	Name
NTBX01	AB	Enhanced ISDN Signal Pre-processor

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA”
- replacing a card
- returning a card


Do not go to the common procedures unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTBX01 in an SMA (continued)

Summary of card replacement procedure for an NTBX01 card in an SMA

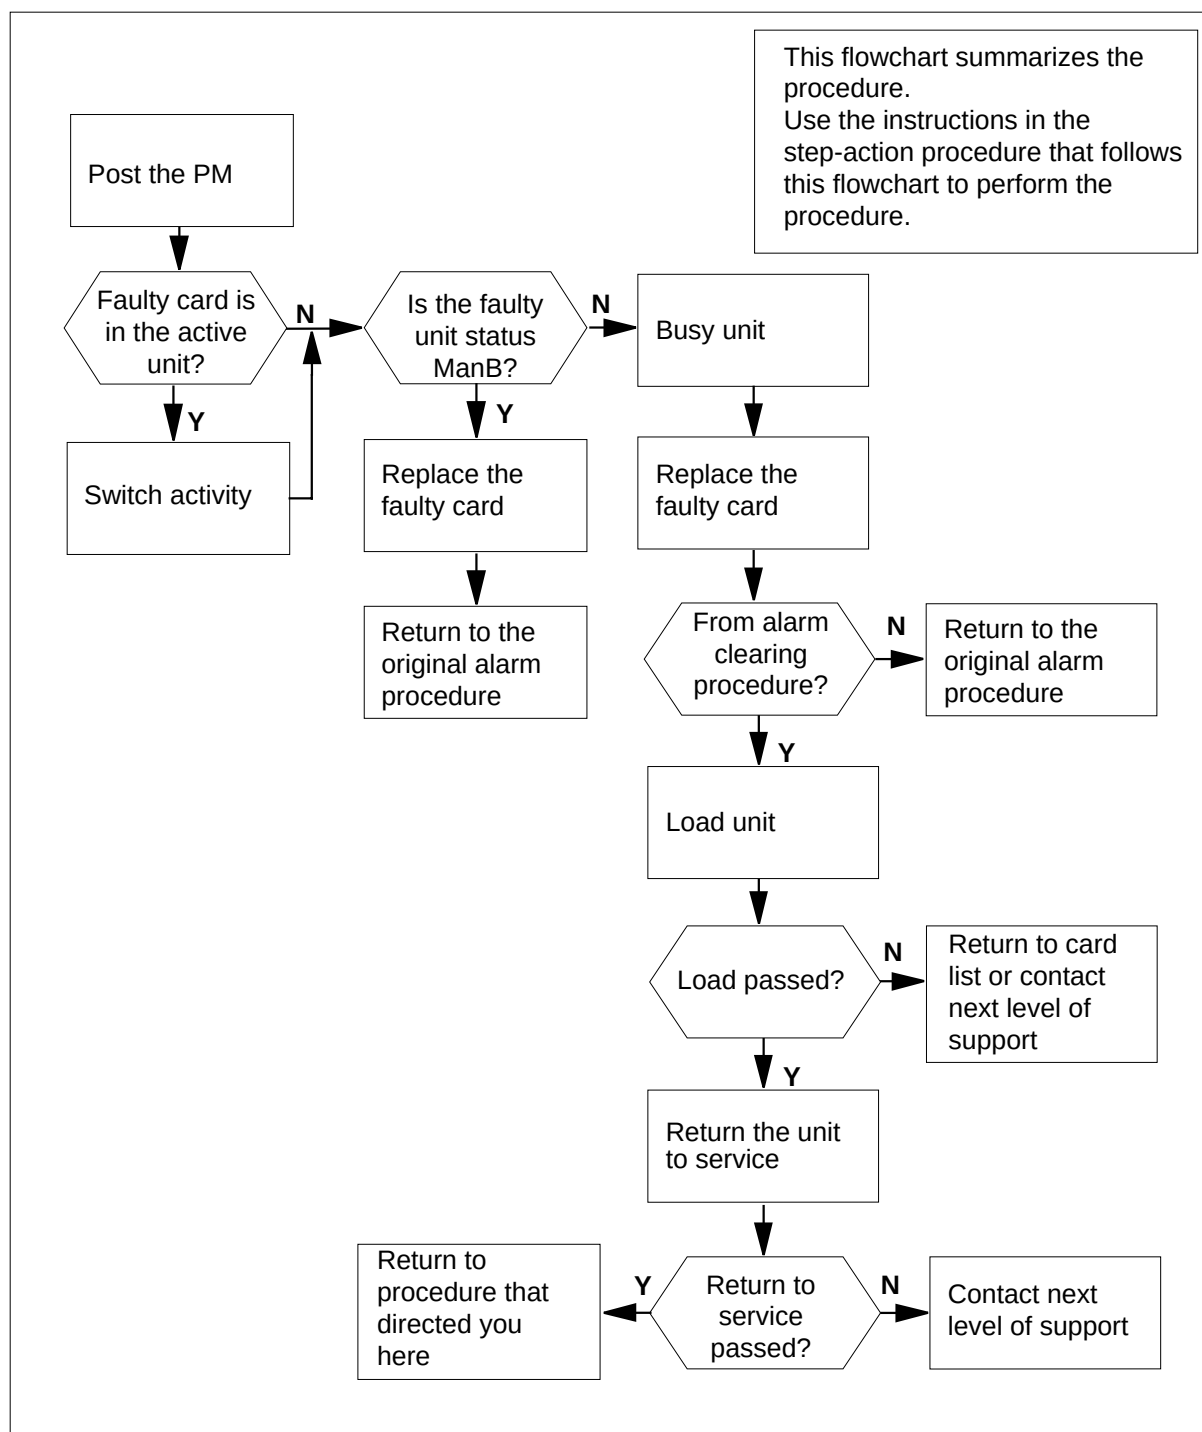

NTBX01 in an SMA (continued)

Replacing an NTBX01 card in an SMA

At your current location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA."
- 4

**CAUTION****Loss of service**

Ensure that you replace the card in the inactive unit and verify the mate unit is active.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA by typing
>MAPCI;MTC;PM;POST SMA sma_no
and pressing the Enter key.

where

sma_no

is the number of the SMA being posted

Example of a MAP response

NTBX01

in an SMA (continued)

	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA	0	0	0	0	1	7

SMA 0 ISTb Links_00S: CSide 0, PSide 0
 Unit0: Act InSv
 Unit1: Inact ISTb

- 6 Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If the faulty card is in the	Do
active unit	step 7
inactive unit	step 10

- 7 Switch the activity of the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
can continue at this time	step 8
cannot continue at this time	step 21

- 8 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 10
SWACT failedReason: XPM SWACTback	step 9
SWACT refused by SWACT Controller	step 9

NTBX01 in an SMA (continued)

- 9 The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit.

Go to step 19.

At the equipment frame

- 10 Hang a sign on the active unit bearing the words: *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 11 Observe the MAP display and determine the state of the inactive unit.

If the state is	Do
ManB	step 13
SysB, CBsy, ISTb, or InSv	step 12

12



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the frame supervisory panel (FSP). This protects the equipment against damage caused by static electricity.

Busy the inactive PM unit by typing

>BSY UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive SMA unit (0 or 1)

At the equipment frame

- 13 Perform the common replacing a card procedure in this document.
- 14 Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 17
other	step 15

NTBX01

in an SMA (end)

At the MAP terminal

- 15** Load the inactive SMA unit by typing

>LOADPM UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the busied SMA unit

If LOADPM	Do
passed	step 16
failed	step 19

- 16** Return the inactive SMA unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the SMA unit loaded in step 15

If RTS	Do
passed	step 17
failed	step 19

At the equipment frame

- 17** Remove the sign from the active SMA unit.

- 18** Go to the common returning a card procedure in this document.

Go to step 20.

- 19** For further assistance, contact the personnel responsible for the next level of support.

- 20** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

- 21** For further assistance with switch of activity, contact the personnel responsible for the next level of support.

Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

**NTBX01
in an SMA-MVI-20**

Application

Use this procedure to replace an NTBX01 card in an SMA.

PEC	Suffixes	Name
NTBX01	AB	Enhanced ISDN Signal Pre-processor

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA”
- replacing a card


Do not go to the common procedures unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTBX01 in an SMA-MVI-20 (continued)

Summary of card replacement procedure for an NTBX01 card in an SMA

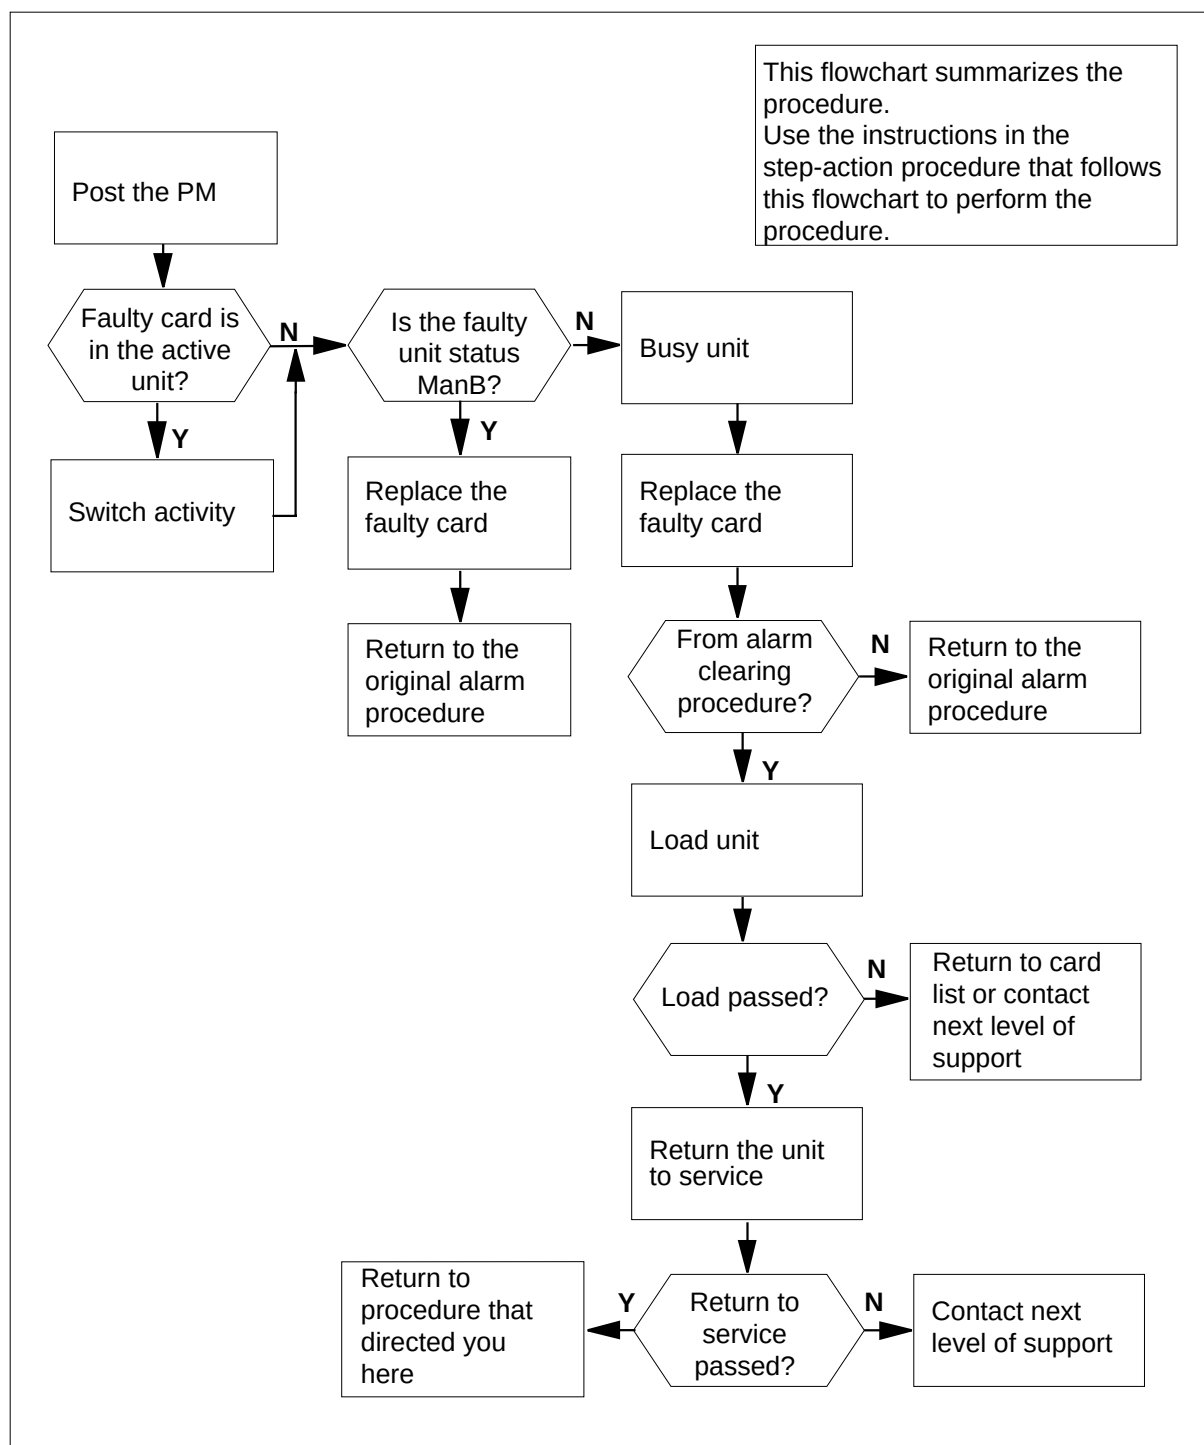

NTBX01 in an SMA-MVI-20 (continued)

Replacing an NTBX01 card in an SMA

At the equipment frame

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA."
- 4



CAUTION

Loss of service

Ensure that you replace the card in the inactive unit and verify the mate unit is active.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA by typing
>MAPCI;MTC;PM;POST SMA sma_no
 and pressing the Enter key.

where

sma_no

is the number of the SMA being posted

Example of a MAP response

NTBX01**in an SMA-MVI-20** (continued)

	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA	0	0	0	0	1	7

SMA 0 ISTb Links_00S: CSide 0, PSide 0

Unit0: Act InSv

Unit1: Inact ISTb

- 6** Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If the faulty card is in the	Do
active unit	step 7
inactive unit	step 11

- 7** SWACT the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
	step 8
	step 9

- 8** Reject the prompt to SWACT the units by typing

>NO

and pressing the Enter key.

The system discontinues the SWACT.

- 9** Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 11

NTBX01 in an SMA-MVI-20 (continued)

	If the message is	Do
	SWACT failedReason: XPM SWACTback	step 10
	SWACT refused by SWACT Controller	step 10
10	The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit. Go to step 22.	

At the equipment frame

- 11** Hang a sign on the active unit bearing the words: *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 12** Observe the MAP display and determine the state of the inactive unit.

	If the state is	Do
	ManB	step 14
	SysB, CBsy, ISTb, or InSv	step 13

13



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the frame supervisory panel (FSP). This protects the equipment against damage caused by static electricity.

Busy the inactive PM unit by typing

>BSY UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive SMA unit (0 or 1)

At the equipment frame

- 14** Perform the common replacing a card procedure in this document.

NTBX01
in an SMA-MVI-20 (continued)

- 15** Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 19
other	step 16

At the MAP terminal

- 16** Load the inactive SMA unit by typing

>LOADPM UNIT unit_no

and pressing the Enter key.

where

unit_no
is the number of the busied SMA unit

If load	Do
passed	step 17
failed	step 22

- 17** Test the inactive SMA unit by typing

>TST UNIT unit_no

and pressing the Enter key.

where

unit_no
is the number of the SMA unit loaded in step 16

If TST	Do
passed	step 18
failed	step 22

- 18** Return the inactive SMA unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

unit_no
is the number of the SMA unit tested in step 17

If RTS	Do
passed	step 19

NTBX01
in an SMA-MVI-20 (end)

If RTS

failed

Dostep 22

At the equipment frame

- 19** Remove the sign from the active SMA unit.
- 20** Send any faulty cards for repair according to local procedure.
- 21** Note the following in the office records:
- date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
- Go to step 23.
- 22** For further assistance, contact the personnel responsible for the next level of support.
- 23** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX01 in an SMA2

Application

Use this procedure to replace an NTBX01 card in an SMA2.

PEC	Suffixes	Name
NTBX01	AC	Enhanced ISDN Signal Pre-processor

Common procedures

The following procedures are referenced in this procedure:


- “Locating a faulty card in an SMA2”
- replacing a card
- returning a card

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTBX01 in an SMA2 (continued)

Summary of card replacement procedure for an NTBX01 card in an SMA2

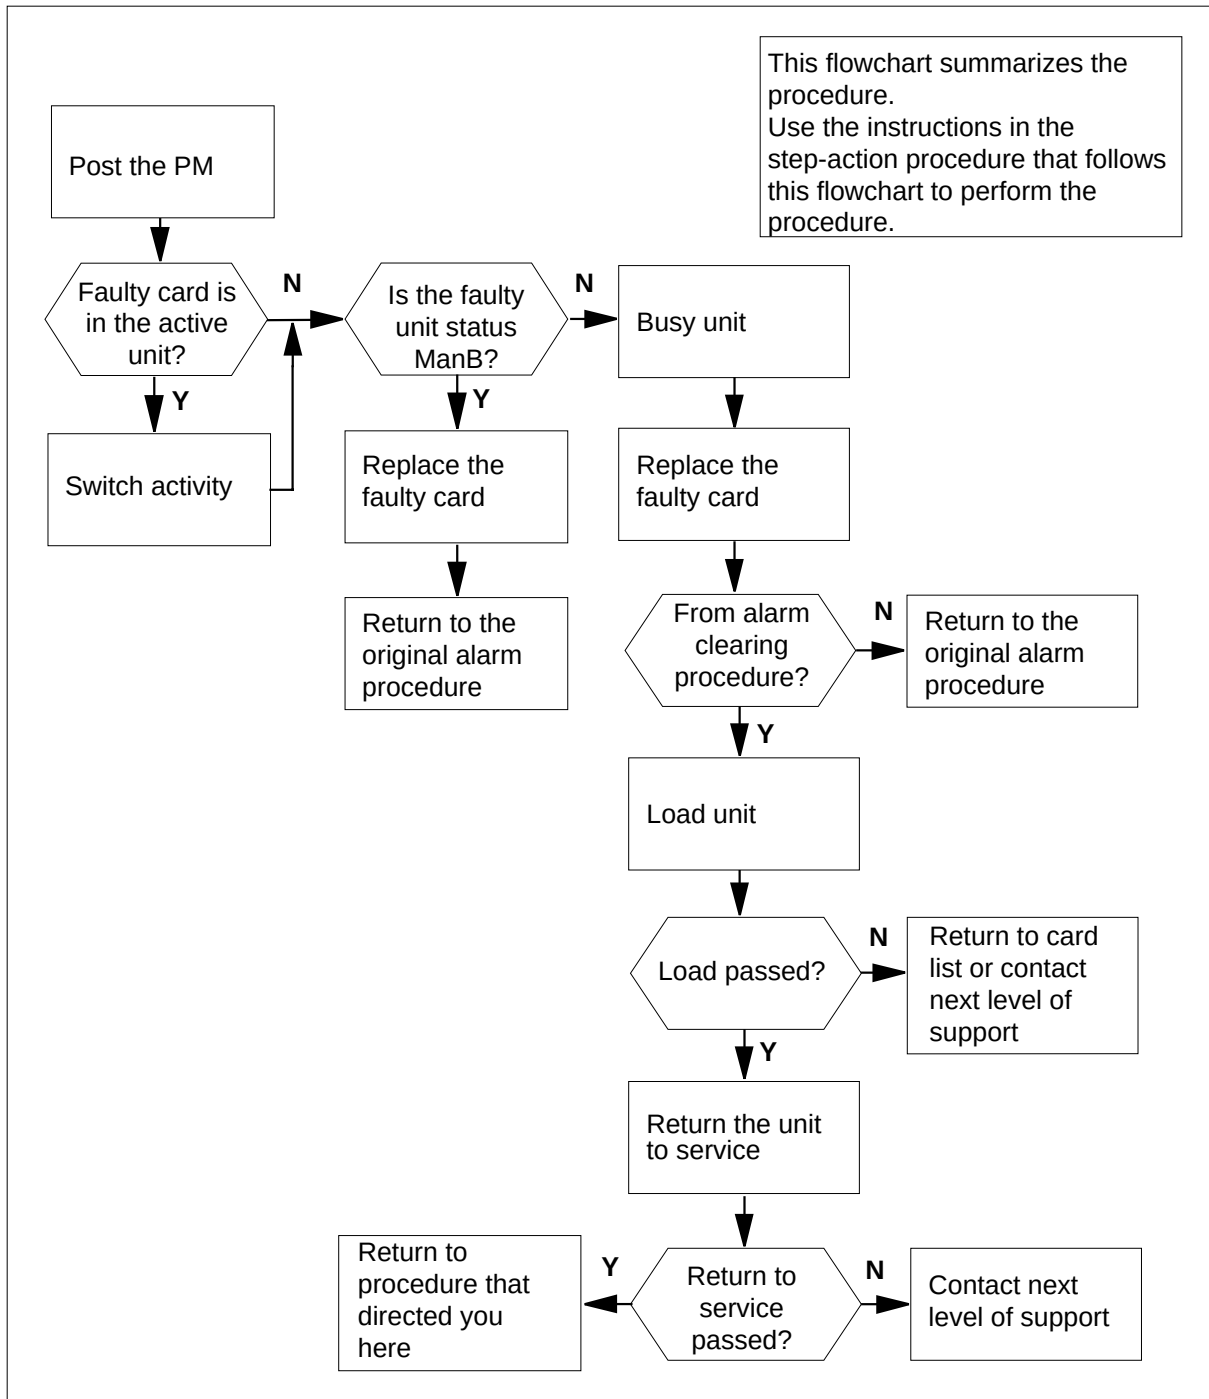

NTBX01 in an SMA2 (continued)

Replacing a NTBX01 card in a SMA2

At your current location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA2."
- 4



CAUTION

Loss of service

When replacing a card in the SMA2, ensure the unit in which you are replacing the card is *inactive* and the mate unit is *active*.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA2 by typing

>MAPCI;MTC;PM;POST SMA2 sma2_no

and pressing the Enter key.

where

sma2_no

is the number of the SMA2 being posted

Example of a MAP response

NTBX01

in an SMA2 (continued)

	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA2	0	0	0	0	1	7

SMA2 0 ISTb Links_00S: CSide 0, PSide 0

Unit0: Act InSv

Unit1: Inact ISTb

- 6** Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If the faulty card is in the	Do
active unit	step 7
inactive unit	step 11

- 7** SWACT the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
cannot continue at this time	step 8
can continue at this time	step 9

- 8** Reject the prompt to SWACT the units by typing

>NO

and pressing the Enter key.

The system discontinues the SWACT.

- 9** Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 11

NTBX01

in an SMA2 (continued)

	If the message is	Do
	SWACT failedReason: XPM SWACTback	step 10
	SWACT refused by SWACT Controller	step 10
10	The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit. Go to step 21.	

At the frame or cabinet

- 11 Hang a sign on the active unit bearing the words: *Active unit-Do not touch..* This sign should not be attached by magnets or tape.

At the MAP terminal

- 12 Observe the MAP display and determine the state of the inactive unit.

	If the state is	Do
	Manb	step 14
	SysB, CBsy, ISTb, or InSv	step 13

13



WARNING

Static electricity damage

Wear a strap connected to the wrist strap grounding modular supervisory panel (MSP) while handling cards. This strap protects the cards against damage caused by static electricity.

Busy the inactive PM unit by typing

>BSY UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive SMA2 unit (0 or 1)

NTBX01 in an SMA2 (continued)

At the frame or cabinet

- 14** Perform the common replacing a card procedure in this document.
- 15** Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 18
other	step 16

At the MAP terminal

- 16** Load the inactive SMA2 unit by typing
>LOADPM UNIT unit_no
and pressing the Enter key.

where

unit_no
is the number of the busied SMA2 unit

If load	Do
passed	step 17
failed	step 21

- 17** Return the inactive SMA2 unit to service by typing
>RTS UNIT unit_no
and pressing the Enter key.

where

unit_no
is the number of the SMA2 unit loaded in step 17

If RTS	Do
passed	step 18
failed	step 21

At the frame or cabinet

- 18** Remove the sign from the active SMA2 unit.
- 19** Send any faulty cards for repair according to local procedure.
- 20** Go to the common returning a card procedure in this document.
Go to step 22.
- 21** For further assistance, contact the personnel responsible for the next level of support.

NTBX01
in an SMA2 (end)

- 22 You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

**NTBX01
in an SMU**

Application

Use this procedure to replace the following card in an SMU.

PEC	Suffix	Name
NTBX01	AB	Enhanced ISDN pre-processor (EISP)


Common procedures

The common replacing a card procedure is referenced in this procedure.

Action

The following flowchart is a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTBX01 in an SMU (continued)

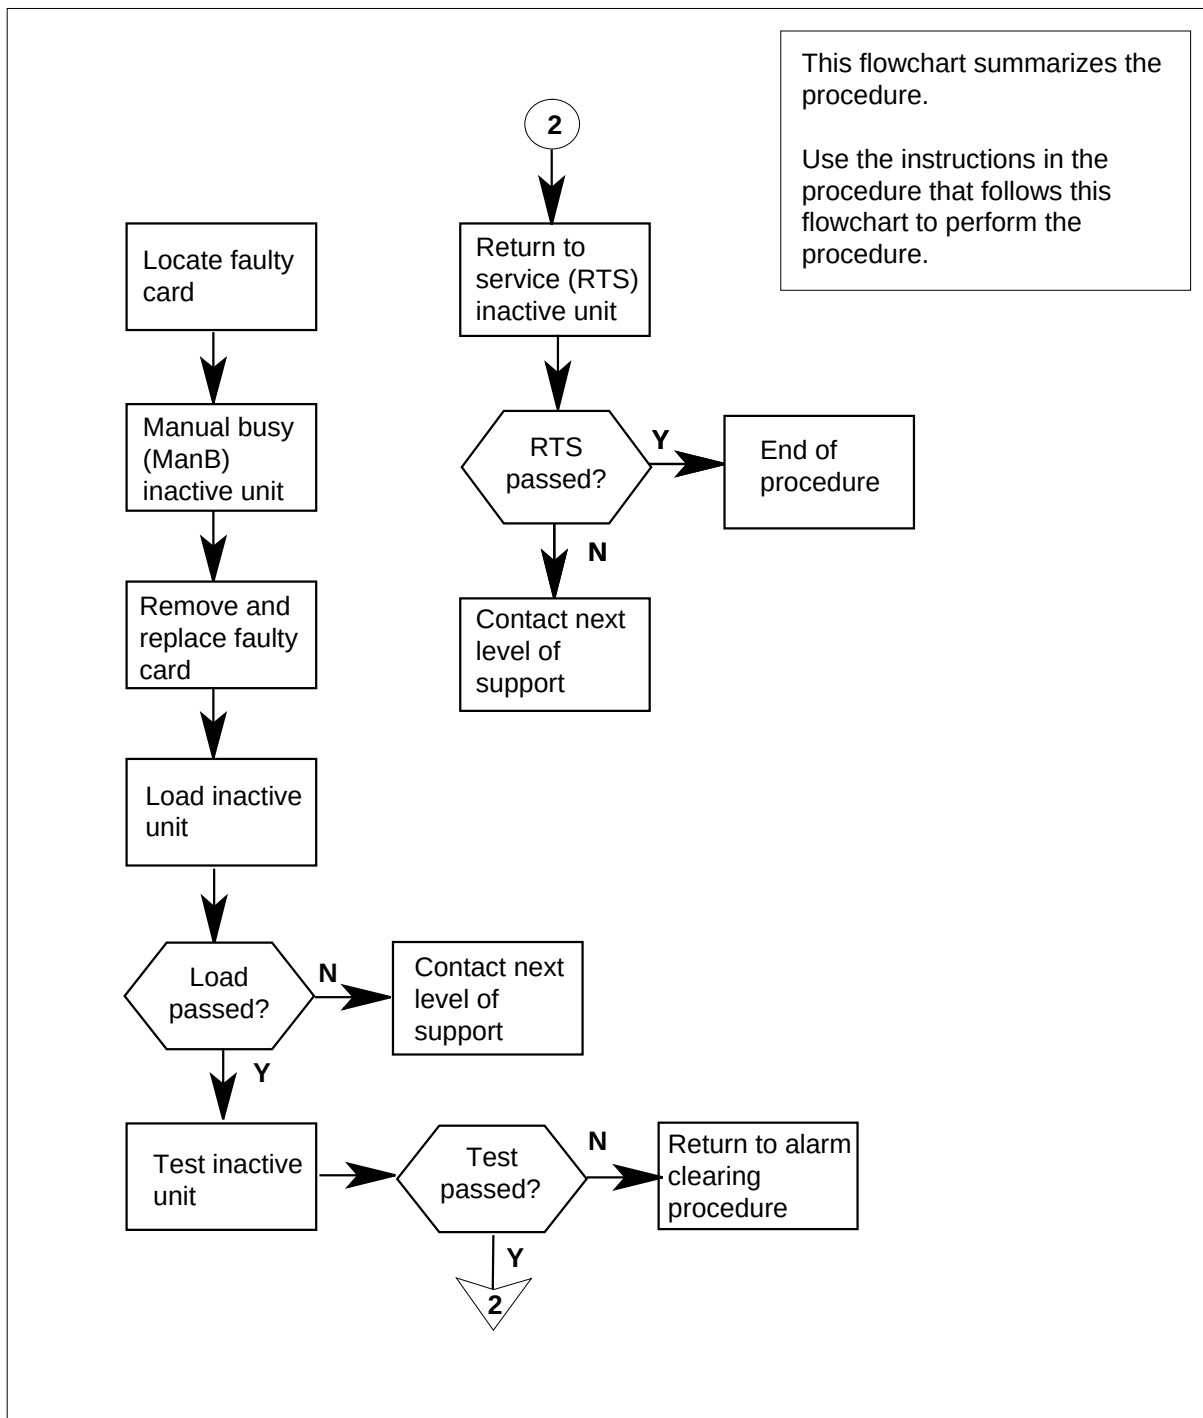

NTBX01
in an SMU (continued)

Replacing an NTBX01 card in an SMU

At your current location:

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure.
- 2



CAUTION
Loss of service
When replacing a card in the SMU, ensure that the unit where you are replacing the card is inactive and that the mate unit is active.

Get a replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card to be removed.

At the MAP terminal:

- 3 Access the PM level of the MAP (maintenance and administration position) terminal and post the SMU by typing
>MAPCI;MTC;PM;POST SMU smu_no
and pressing the Enter key.
where

smu_no
is the number of the SMU to be posted (0 or 1)

Example of a MAP response:

SMU 3	INSV	LINKS_00S	CSIDE	PSIDE 0
Unit0	Act	InSv		
Unit1	Inact	IsTb		

- 4 By observing the MAP display, ensure the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 8

- 5 Switch the activity of the units by typing
>SWACT
and pressing the Enter key.

NTBX01

in an SMU (continued)

The system determines the type of SwAct it can perform. The system displays a confirmation prompt for the selected SwAct.

If SwAct	Do
can continue at this time	step 6
cannot continue at this time	step 20

- 6 Switch the activity of the unit by typing

>YES

and pressing the Enter key.

The system runs a pre-SwAct audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SwAct passed	step 8
SwAct failed	step 7
SwAct failed Reason: XPM SwActback	step 7
SwAct refused by SwAct controller	step 7

- 7 Return to the *Alarm Clearing Procedures* to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 8 of this procedure.

At the SME frame:

- 8 Put a sign on the active unit bearing the following words: "Active unit—Do not touch."

At the MAP terminal:

- 9 Busy the inactive PM unit by typing

>bsy unit unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive SMU unit (0 or 1)

- 10 Go to the common replacing a card procedure in this document, then return to step 11 of this procedure.

NTBX01 in an SMU (continued)

- 11** Use the following information to determine where to go next in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 17
other	step 12

- 12** After replacing the faulty card, load the inactive SMU unit by typing
>LOADPM UNIT unit_no
 and pressing the Enter key.
where

unit_no
 is the number of the SMU unit busied in step 9

If LOADPM	Do
passed	step 13
failed	step 18

- 13** Test the inactive unit by typing
>TST UNIT unit_no
 and pressing the Enter key.
where

unit_no
 is the number of the SMU unit loaded in step 12

If TST	Do
passes	step 14
fails	step 18

- 14** Return the inactive SMU unit to service by typing
>RTS UNIT unit_no
 and pressing the Enter key.
where

unit_no
 is the number of the SMU unit tested in step 13

If RTS	Do
passed	step 15

NTBX01

in an SMU (end)

	If RTS	Do
	failed	step 18
15	Send any faulty cards for repair according to local procedure.	
16	Record the following items in the office records: • date the card was replaced • serial number of the card • symptoms that prompted replacement of the card Go to step 19.	
17	Return to <i>Alarm Clearing Procedures</i> . If necessary, go to the point where a faulty card list is initiated and identify the next faulty card on the list. Go to the appropriate card replacement procedure for that card.	
18	Obtain further assistance in replacing this card by contacting the personnel responsible for a higher level of support.	
19	You have successfully completed this procedure. Remove the sign from the active unit, return to the maintenance procedure that directed you to this card replacement procedure, and continue as directed.	
20	For further assistance with switch of activity, contact the personnel responsible for the next level of support. Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.	

**NTBX02
in an RSC RCC2**

Application

Use this procedure to replace an NTBX02 card in an RSCE RCC2.

PEC	Suffixes	Name
NTBX02	AA, BA	D-Channel Handler

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTBX02 in an RSC RCC2 (continued)

Summary of card replacement procedure for an NTBX02 card in an RSC-S RCC2

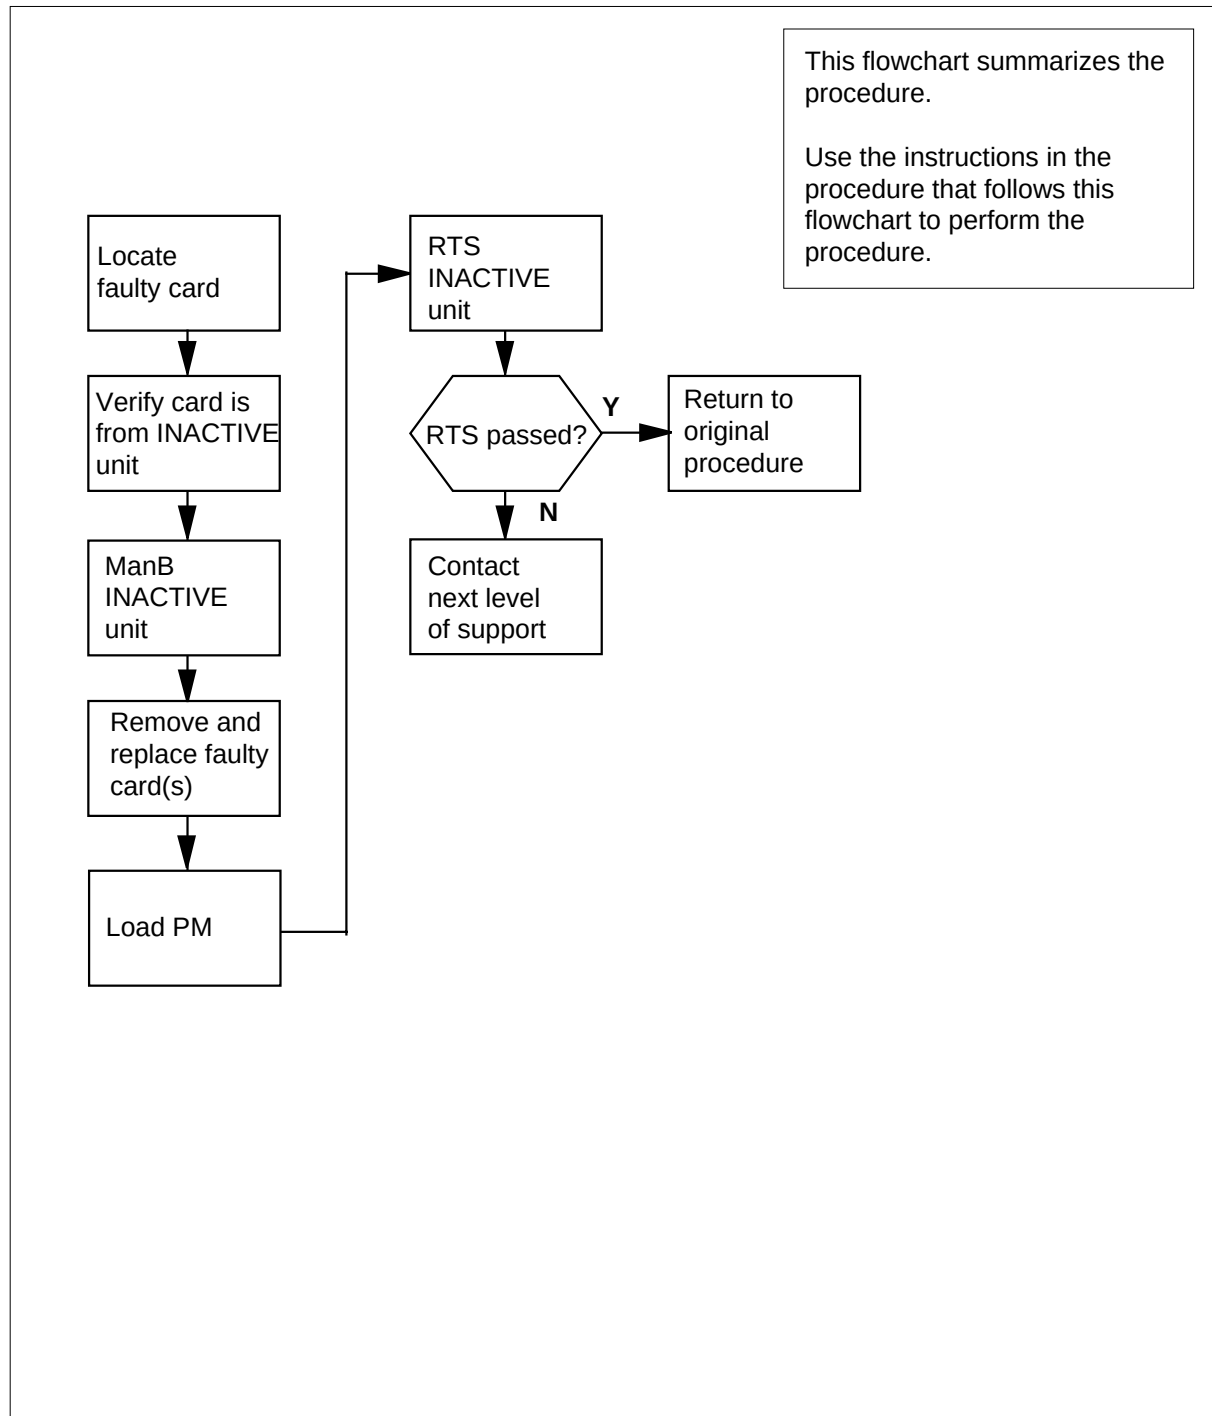

NTBX02
in an RSC RCC2 (continued)

Replacing an NTBX02 card in an RSC RCC2

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2**



CAUTION

Loss of service

When replacing a card in the RCC2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain a replacement card. Ensure that the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

If the faulty card is	Do
in an extension (EXT) shelf	step 3
not in an EXT shelf	step 4

At the MAP terminal

- 3** For an extension shelf, refer to the slot positions in the following table to determine which unit contains the faulty NTBX02 card, and proceed to step 4.

IfEXT shelf slot number	DoCPM unit number
3 / 24	0
4 / 23	0
5 / 22	0
6 / 21	0
7 / 20	0
8 / 19	1
9 / 18	1

NTBX02 in an RSC RCC2 (continued)

IfEXT shelf slot number	DoCPM unit number
10 / 17	1
11 / 16	1
12 / 15	1

- 4 Ensure the PM level of the MAP display is currently displayed and the RCC2 with the faulty DCH card is posted by typing

>MAPCI;MTC;PM;POST RCC2 rcc2_no

and pressing the Enter key.

where

rcc2_no

is the number of the RCC2 with the faulty card

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	25	
2 Post_	RCC2		0	0	0	0	0	0	
3 ListSet									
4	RCC2	0	Links_00S:	CSide	0,	PSide	0		
5 TRNSL	Unit0:	Inact	InSv						
6 TST	Unit1:	Act	InSv						
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15 DCH									
16									
17									
18									

- 5 Refer to the MAP display posted in step 4 to see if the faulty NTBX02 card is in the active or inactive unit.

If faulty card is in	Do
active unit	step 6
inactive unit	step 10

NTBX02 in an RSC RCC2 (continued)

- 6 Switch the processing activity (SWACT) to the inactive unit by typing
>SWACT
and pressing the Enter key.

If SWACT	Do
cannot continue at this time	step 7
can continue at this time	step 8

- 7 Do not switch activity of the units. Reject the SWACT by typing
>NO
and pressing the Enter key.

The system discontinues the SWACT.
Return to step 6 during a period of low traffic.

- 8 Confirm the system prompt by typing
>YES
and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding to the next maintenance action.

If the message is	Do
SWACT passed	step 10
SWACT failed	step 9
SWACT refused by SWACT controller	step 9

- 9 Return to the *Alarm Clearing Procedures* to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the RSCE frame

- 10 Place a sign on the active unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 11 Busy the inactive PM unit by typing
>bsy unit unit_no
and pressing the Enter key.
where

NTBX02
in an RSC RCC2 (continued)

unit_no
is the number of the inactive RCC2 unit (0 or 1) containing the faulty BX02 card

12 Access the DCH level of the MAP display by typing

>DCH
and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
DCH			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	0	0	0	0	25	
2 Post_	RCC2	0	0	0	0	0	0	0	
3									
4	RCC2	0	Links_00S:	CSide	0,	PSide	0		
5 TRNSL	Unit0:	InSv							
6 TST	Unit1:	InSv							
7 BSY									
8 RTS	DCH	0	0	0	1	0	0		
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13 SwAct									
14 QueryPM									
15 DCH									
16									
17 Perform									
18									

13 Using the information in the MAP display in step 12, identify and post the faulty DCH card state by typing

>POST dch_card_state
and pressing the Enter key.

where

dch_card_state
is either CBsy, SysB or ISTb. The example in step 12 shows the DCH card as being CBsy.

Example of a MAP display:

NTBX02 in an RSC RCC2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl	.
DCH			SysB	ManB	OffL	CBsy	ISTb	InSv		
0 Quit	PM	0	0	0	0	0	0	25		
2 Post_	RCC2	0	0	0	0	0	0	0		
3										
4	RCC2	0	Links_00S:	CSide	0,	PSide	0			
5 TRNSL	Unit0:	InSv								
6 TST	Unit1:	InSv								
7 BSY										
8 RTS	DCH	0	0	0	1	0	0			
9 OffL										
10 LoadPM_	DCH	0	ISG	1	CBSY	RCC2	2	PORT	15	
11 Disp_										
12 Next_										
13 SwAct										
14 QueryPM										
15 DCH										
16										
17 Perform										
18										

- 14** Identify the DCH load file name by typing

>QUERYPM

and pressing the Enter key.

Example of a MAP response

Site	Flr	RPos	Bay_id	Shf	Description	Slot	EqPEC
HOST	01	R09	LTEI 00	32	LTC : 002	02	BX02

Loadnames : DCHINV - DCH32BT : INTL INDEX : 8

The DCH load file name in the example is *DCH32BT*.

- 15** Use the following information to determine the next step in this procedure.

If system load module is	Do
version 1	step 16
version 2	step 17

- 16** List the loadfile in the directory by typing

>DSKUT;LISTVOL D000 DCH load_file_name ALL

and pressing the Enter key.

or

>DSKUT;LISTVOL D010 DCH_load_file_name ALL

NTBX02

in an RSC RCC2 (continued)

and pressing the Enter key.

Local operating company policy determines which disk, D000 or D010, the loadfile will be on.

Example of a MAP response

TAPE\$DIR

DCH32BT

Proceed to step 18.

- 17** List the loadfile in the directory by typing

>DISKUT;LV S00D

and pressing the Enter key.

>LF S00D file_name

and pressing the Enter key.

or

>DISKUT;LV S01D

and pressing the Enter key.

>LF S01D file_name

and pressing the Enter key.

- 18** Leave the disk utility by typing

>quit

and pressing the Enter key.

- 19** Compare the information in the example in step 14 with the information in the example in step 16 to verify the DCH file name exists. For instance, the file name in step 16 is *DCH32BT*, which corresponds to the file name in step 14.

- 20** Busy the faulty card by typing

>BSY

and pressing the Enter key.

NTBX02 in an RSC RCC2 (continued)

At the RSCE frame

21



WARNING

Static discharge may cause damage to circuit packs
Put on a wrist strap and connect it to the frame of the RMM before removing any cards. This protects the RMM against service degradation caused by static electricity.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.

22


Remove the NTBX02 card as shown in the following figures.

- a** Locate the card to be removed on the appropriate shelf.

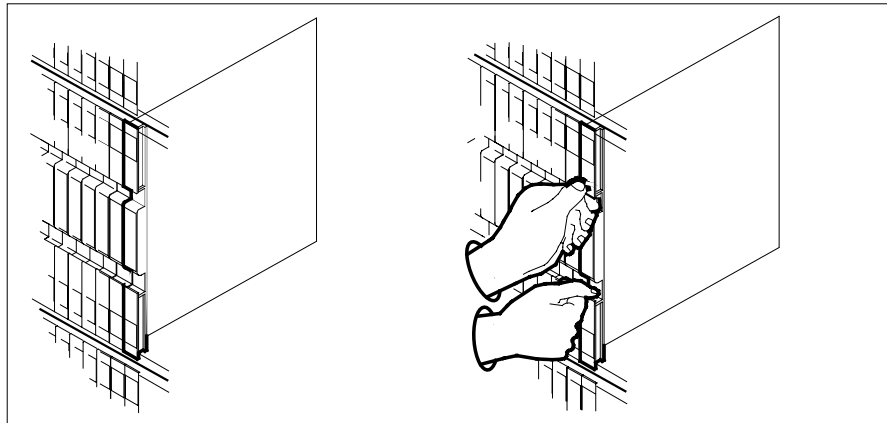

- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.


NTBX02 in an RSC RCC2 (continued)

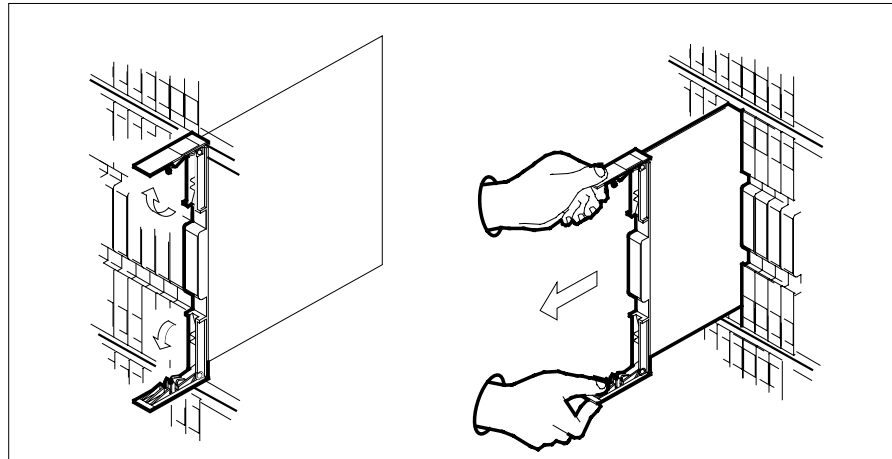

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

23 Open the locking levers on the replacement card.

- a Align the card with the slots in the shelf.
- b Gently slide the card into the shelf.

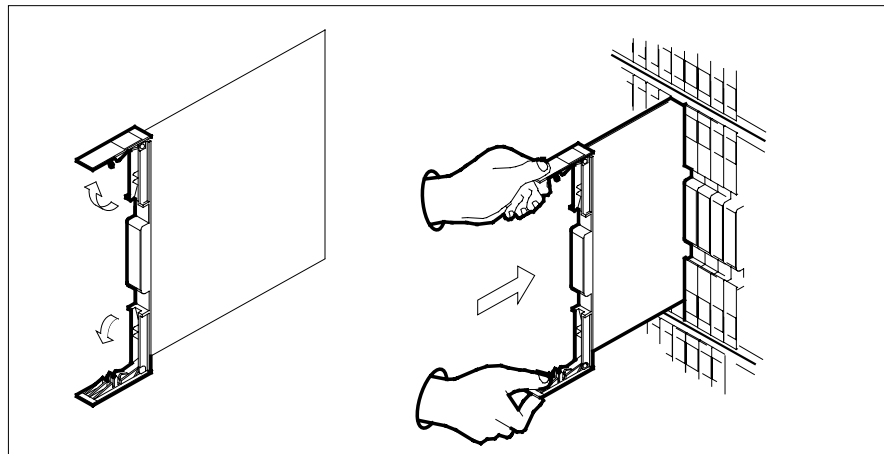

NTBX02 in an RSC RCC2 (continued)

24


**CAUTION****Loss of subscriber service**

Subscriber service may be lost in the active unit when reseating the NTBX02 card.

It is recommended that this procedure be performed during low traffic periods.

Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure that the card is fully seated in the shelf.
- b Close the locking levers.

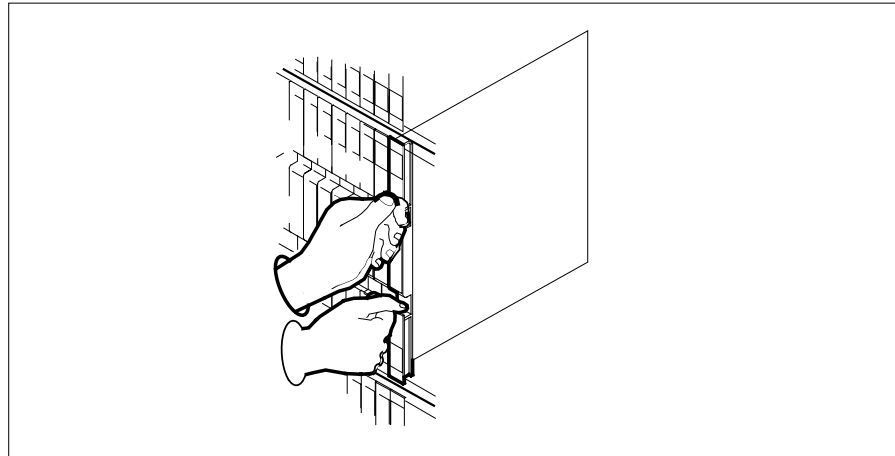**At the MAP terminal**

- 25 Load the DCH card by typing

>LOADPM

and pressing the Enter key.

- 26 Use the following information to determine the next step in this procedure.

If load	Do
passed	step 27
failed	step 34

- 27 Return the DCH card to service by typing

>RTS

NTBX02

in an RSC RCC2 (continued)

and pressing the Enter key.

If RTS	Do
passed	step 28
failed	step 34

- 28** Leave the DCH level of the MAP display and return to the RCC2 level by typing

>QUIT

and pressing the Enter key.

- 29** Return to service the PM unit busied in step 11 by typing

>RTS unit unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive RCC2 unit (0 or 1) containing the new BX02 card

- 30** Ensure that the RCC2 unit is in service by typing

>QUERYPM FLT

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	0	0	0	0	25	
2 Post_	RCC2	0	0	0	0	0	0	1	
3 ListSet									
4	RCC2	0	InSv	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:	Act	InSv						
6 Tst_	Unit1:	Inact	InSv						
7 Bsy_	QUERYPM FLT								
8 RTS_	Unit0	No troubles exist							
9 OffL	Unit1	No troubles exist							
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15 DCH									
16									
17									
18									

NTBX02
in an RSC RCC2 (end)

Use the following information to determine the next step in this procedure.

	If faults are	Do
	not indicated	step 31
	indicated	step 34
31	Send any faulty cards for repair according to local procedure.	
32	Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card.	
	If you entered this procedure from	Do
	alarm clearing procedures	step 33
	other	step 35
33	Return to <i>Alarm Clearing Procedures</i> or other procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.	
34	Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.	
35	You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.	

NTBX02 in an RSC-S (DS-1) Model A RCC2

Application

Use this procedure to replace an NTBX02 card in an RSC-S RCC2.


PEC	Suffixes	Name
NTBX02	AA, BA	D-Channel Handler
Note: NTBX02BA is required when the RCC2 is configured with the optional processor NTAX74AA instead of the NTMX77AA.		

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

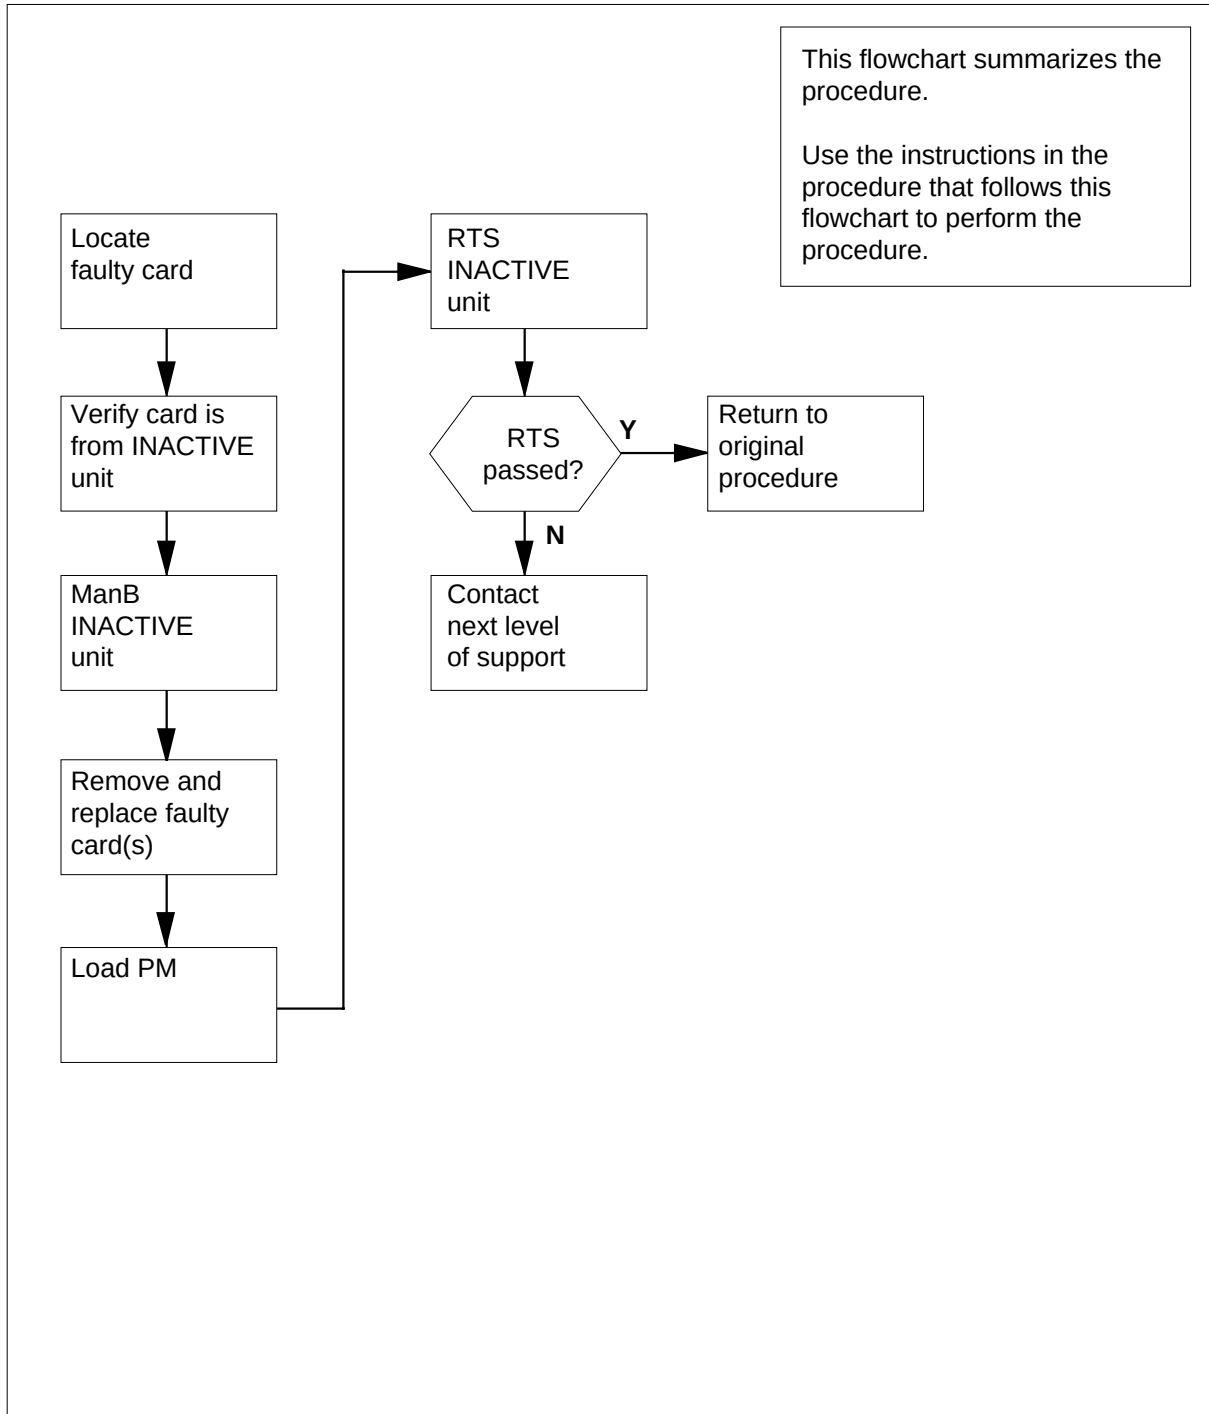NTBX02
in an RSC-S (DS-1) Model A RCC2 (continued)**Summary of card replacement procedure for an NTBX02 card in an RSC-S RCC2**

NTBX02 in an RSC-S (DS-1) Model A RCC2 (continued)

Replacing an NTBX02 card in an RSC-S RCC2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCC2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain a replacement card. Ensure that the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

If the faulty card is	Do
in an extension (EXT) shelf	step 3
not in an EXT shelf	step 4

At the MAP terminal

- 3 For an extension shelf, refer to the slot positions in the following table to determine which unit contains the faulty NTBX02 card, and proceed to step 4.

IfEXT shelf slot number	DoCPM unit number
3 / 24	0
4 / 23	0
5 / 22	0
6 / 21	0
7 / 20	0
8 / 19	1
9 / 18	1

NTBX02

in an RSC-S (DS-1) Model A RCC2 (continued)

IfEXT shelf slot number	DoCPM unit number
10 / 17	1
11 / 16	1
12 / 15	1

- 4 Ensure the PM level of the MAP display is currently displayed and the RCC2 with the faulty DCH card is posted by typing

>MAPCI;MTC;PM;POST RCC2 rcc2_no

and pressing the Enter key.

where

rcc2_no

is the number of the RCC2 with the faulty card

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	0	0	0	0	25	
2 Post_	RCC2	0	0	0	0	0	0	0	
3 ListSet									
4	RCC2	0	Links_OOS:	CSide	0,	PSide	0		
5 TRNSL	Unit0:	Inact	InSv						
6 TST	Unit1:	Act	InSv						
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15 DCH									
16									
17									
18									

- 5 Refer to the MAP display posted in step 4 to see if the faulty NTBX02 card is in the active or inactive unit.

If faulty card is in	Do
active unit	step 6
inactive unit	step 11

NTBX02

in an RSC-S (DS-1) Model A RCC2 (continued)

- 6 Switch the processing activity (SWACT) to the inactive unit by typing
>SWACT
 and pressing the Enter key.

If SWACT	Do
cannot continue at this time	step 7
can continue at this time	step 8

- 7 Do not switch activity of the units. Reject the SWACT by typing
>NO
 and pressing the Enter key.

The system discontinues the SWACT.
 Return to step 6 during a period of low traffic.

- 8 Confirm the system prompt by typing
>YES
 and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding to the next maintenance action.

If the message is	Do
SWACT passed	step 10
SWACT failed	step 9
SWACT refused by SWACT controller	step 9

- 9 Return to the *Alarm Clearing Procedures* to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the RCE frame

- 10 Place a sign on the active unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 11 Busy the inactive PM unit by typing
>bsy unit unit_no
 and pressing the Enter key.
where

NTBX02

in an RSC-S (DS-1) Model A RCC2 (continued)

unit_no

is the number of the inactive RCC2 unit (0 or 1) containing the faulty BX02 card

- 12** Access the DCH level of the MAP display by typing

>DCH

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
DCH			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	0	0	0	0	25	
2 Post_	RCC2	0	0	0	0	0	0	0	
3									
4	RCC2	0	Links_00S:	CSide	0,	PSide	0		
5 TRNSL	Unit0:	InSv							
6 TST	Unit1:	InSv							
7 BSY									
8 RTS	DCH	0	0	0	1	0	0		
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13 SwAct									
14 QueryPM									
15 DCH									
16									
17 Perform									
18									

- 13** Using the information in the MAP display in step 12, identify and post the faulty DCH card state by typing

>POST dch_card_state

and pressing the Enter key.

where

dch_card_state

is either CBsy, SysB or ISTb. The example in step 12 shows the DCH card as being CBsy.

Example of a MAP display:

NTBX02**in an RSC-S (DS-1) Model A RCC2** (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
DCH			SysB	ManB	OffL	CBSy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	0	25
2 Post_	RCC2		0	0	0	0	0	0	0
3									
4	RCC2	0	Links_00S:	CSide	0,	PSide	0		
5 TRNSL	Unit0:		InSv						
6 TST	Unit1:		InSv						
7 BSY									
8 RTS	DCH	0	0	0	1	0	0	0	
9 OffL									
10 LoadPM_	DCH	0	ISG	1	CBSY	RCC2	2	PORT	15
11 Disp_									
12 Next_									
13 SwAct									
14 QueryPM									
15 DCH									
16									
17 Perform									
18									

- 14** Identify the DCH load file name by typing

>QUERYPM

and pressing the Enter key.

Example of a MAP response

Site	Flr	RPos	Bay_id	Shf	Description	Slot	EqPEC
HOST	01	R09	LTEI 00	32	LTC : 002	02	BX02

Loadnames : DCHINV - DCH32BT : INTL INDEX : 8

The DCH load file name in the example is *DCH32BT*.

- 15** Use the following information to determine the next step in this procedure.

If system load module is	Do
version 1	step 16
version 2	step 17

- 16** List the loadfile in the directory by typing

>DSKUT;LISTVOL D000 DCH load_file_name ALL

and pressing the Enter key.

or

>DSKUT;LISTVOL D010 DCH load_file_name ALL

NTBX02

in an RSC-S (DS-1) Model A RCC2 (continued)

and pressing the Enter key.

Local operating company policy determines which disk, D000 or D010, the loadfile will be on.

Example of a MAP response

TAPE\$DIR

DCH32BT

Proceed to step 18.

- 17** List the loadfile in the directory by typing

>DISKUT;LV S00D

and pressing the Enter key.

>LF S00D file_name

and pressing the Enter key.

or

>DISKUT;LV S01D

and pressing the Enter key.

>LF S01D file_name

and pressing the Enter key.

- 18** Leave the disk utility by typing

>quit

and pressing the Enter key.

- 19** Compare the information in the example in step 14 with the information in the example in step 16 to verify the DCH file name exists. For instance, the file name in step 16 is *DCH32BT*, which corresponds to the file name in step 14.

- 20** Busy the faulty card by typing

>BSY

and pressing the Enter key.

NTBX02 in an RSC-S (DS-1) Model A RCC2 (continued)

At the RCE frame

21



WARNING

Static discharge may cause damage to circuit packs
Put on a wrist strap and connect it to the frame of the RMM before removing any cards. This protects the RMM against service degradation caused by static electricity.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


22

Remove the NTBX02 card as shown in the following figures.

- a** Locate the card to be removed on the appropriate shelf.

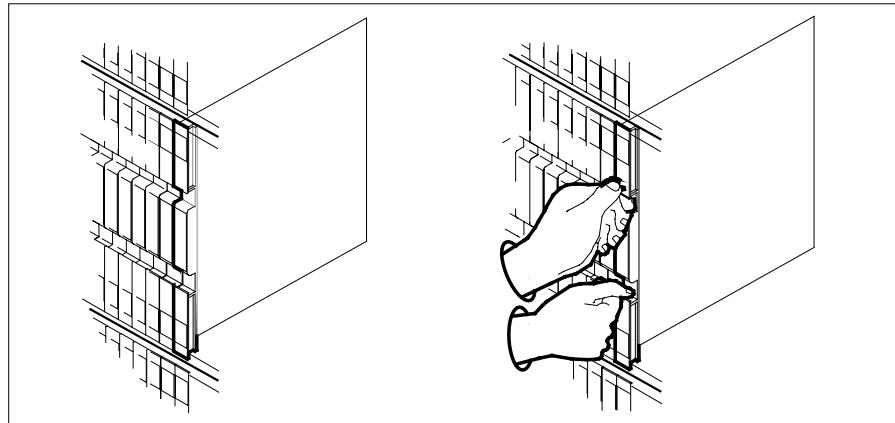


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

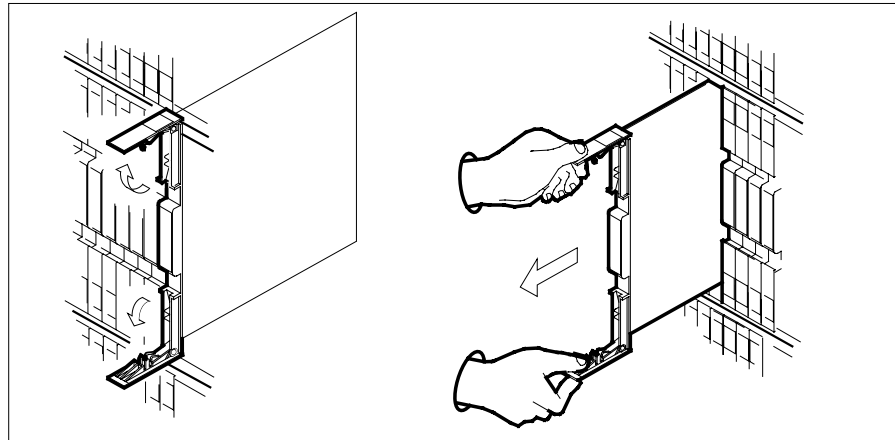NTBX02
in an RSC-S (DS-1) Model A RCC2 (continued)

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

23 Open the locking levers on the replacement card.

- a Align the card with the slots in the shelf.
b Gently slide the card into the shelf.

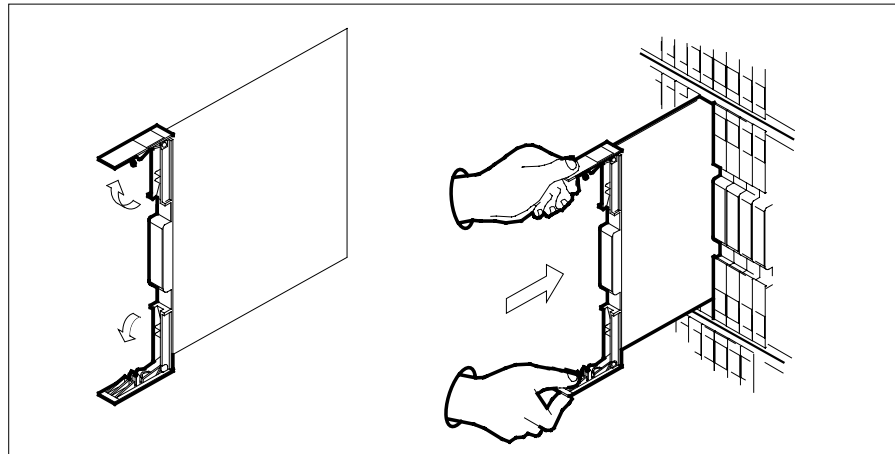

24

**CAUTION****Loss of subscriber service**


Subscriber service may be lost in the active unit when reseating the NTBX02 card. It is recommended that this procedure be performed during low traffic periods.

NTBX02

in an RSC-S (DS-1) Model A RCC2 (continued)

Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure that the card is fully seated in the shelf.
- b Close the locking levers.

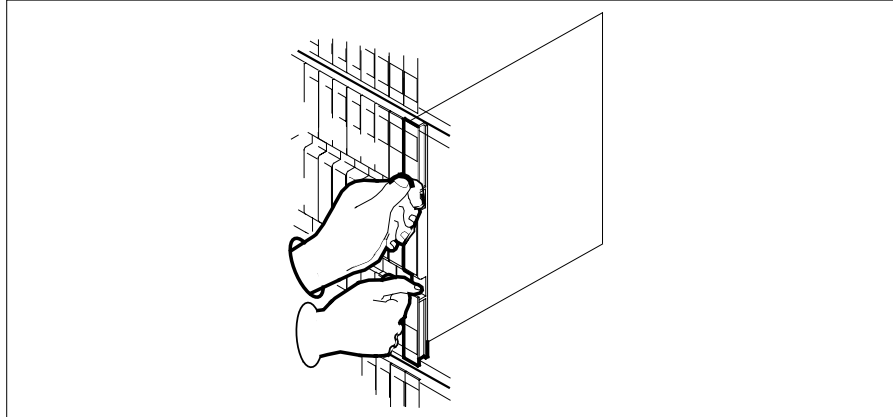

At the MAP terminal

- 25 Load the DCH card by typing

>LOADPM

and pressing the Enter key.

- 26 Use the following information to determine the next step in this procedure.

If load	Do
passed	step 27
failed	step 34

- 27 Return the DCH card to service by typing

>RTS

and pressing the Enter key.

If RTS	Do
passed	step 28
failed	step 34

- 28 Leave the DCH level of the MAP display and return to the RCC2 level by typing

>QUIT

and pressing the Enter key.

NTBX02

in an RSC-S (DS-1) Model A RCC2 (continued)

- 29** Return to service the PM unit busied in step 11 by typing
>RTS unit unit_no
 and pressing the Enter key.
where
unit_no
 is the number of the inactive RCC2 unit (0 or 1) containing the new BX02 card
- 30** Ensure that the RCC2 unit is in service by typing
>QUERYPM FLT
 and pressing the Enter key.
Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	0	0	0	0	25	
2 Post_	RCC2	0	0	0	0	0	0	1	
3 ListSet									
4	RCC2	0	InSv	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:	Act	InSv						
6 Tst_	Unit1:	Inact	InSv						
7 Bsy_	QUERYPM FLT								
8 RTS_	Unit0	No troubles exist							
9 OffL	Unit1	No troubles exist							
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15 DCH									
16									
17									
18									

Use the following information to determine the next step in this procedure.

If faults are	Do
not indicated	step 31
indicated	step 34

- 31** Send any faulty cards for repair according to local procedure.

NTBX02

in an RSC-S (DS-1) Model A RCC2 (end)

- 32** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card.
- | If you entered this procedure from | Do |
|---|-----------|
| alarm clearing procedures | step 33 |
| other | step 35 |
- 33** Return to *Alarm Clearing Procedures* or other procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 34** Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.
- 35** You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX02 in an RSC-S (DS-1) Model B RCC2

Application

Use this procedure to replace an NTBX02 card in an RSC-S RCC2.

PEC	Suffixes	Name
NTBX02	AA, BA	D-Channel Handler
Note: NTBX02BA is required when the RCC2 is configured with the optional processor NTAX74AA instead of the NTMX77AA.		

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX02 in an RSC-S (DS-1) Model B RCC2 (continued)

Summary of card replacement procedure for an NTBX02 card in an RSC-S RCC2

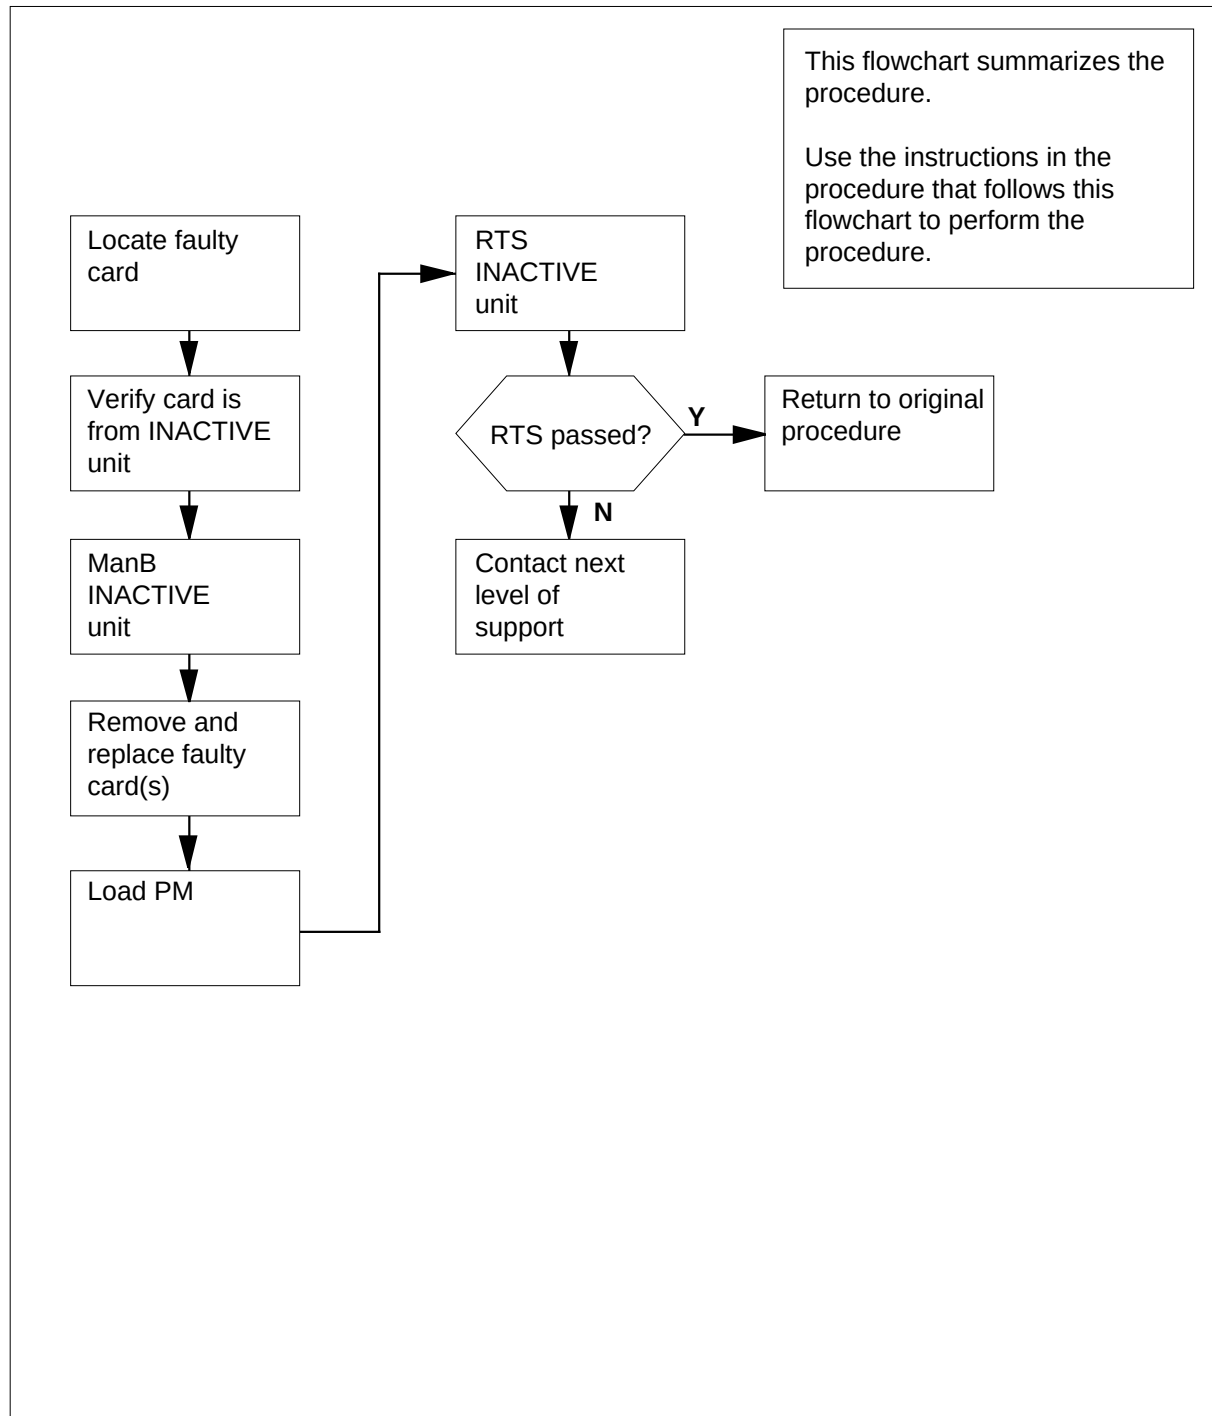

NTBX02

in an RSC-S (DS-1) Model B RCC2 (continued)

Replacing an NTBX02 card in an RSC-S RCC2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCC2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain a replacement card. Ensure that the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

If the faulty card is	Do
in an extension (EXT) shelf	step 3
not in an EXT shelf	step 4

At the MAP terminal

- 3 For an extension shelf, refer to the slot positions in the following table to determine which unit contains the faulty NTBX02 card, and proceed to step 4.

IfEXT shelf slot number	DoCPM unit number
3 / 24	0
4 / 23	0
5 / 22	0
6 / 21	0
7 / 20	0
8 / 19	1
9 / 18	1

NTBX02**in an RSC-S (DS-1) Model B RCC2** (continued)

IfEXT shelf slot number	DoCPM unit number
10 / 17	1
11 / 16	1
12 / 15	1

- 4 Ensure the PM level of the MAP display is currently displayed and the RCC2 with the faulty DCH card is posted by typing

>MAPCI;MTC;PM;POST RCC2 rcc2_no

and pressing the Enter key.

where

rcc2_no

is the number of the RCC2 with the faulty card

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.

RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	25	
2 Post_	RCC2		0	0	0	0	0	0	
3 ListSet									
4	RCC2	0	Links_00S:	CSide	0,	PSide	0		
5 TRNSL	Unit0:	Inact	InSv						
6 TST	Unit1:	Act	InSv						
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15 DCH									
16									
17									
18									

- 5 Refer to the MAP display posted in step 4 to see if the faulty NTBX02 card is in the active or inactive unit.

If faulty card is in	Do
active unit	step 6
inactive unit	step 11

NTBX02

in an RSC-S (DS-1) Model B RCC2 (continued)

- 6 Switch the processing activity (SWACT) to the inactive unit by typing
>SWACT
 and pressing the Enter key.

If SWACT	Do
cannot continue at this time	step 7
can continue at this time	step 8

- 7 Do not switch activity of the units. Reject the SWACT by typing
>NO
 and pressing the Enter key.

The system discontinues the SWACT.

Return to step 1 during a period of low traffic.

- 8 Confirm the system prompt by typing
>YES
 and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding to the next maintenance action.

If the message is	Do
SWACT passed	step 10
SWACT failed	step 9
SWACT refused by SWACT controller	step 9

- 9 Return to the *Alarm Clearing Procedures* to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

At the RCE frame

- 10 Place a sign on the active unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 11 Busy the inactive PM unit by typing
>bsy unit unit_no
 and pressing the Enter key.
where

NTBX02**in an RSC-S (DS-1) Model B RCC2** (continued)**unit_no**

is the number of the inactive RCC2 unit (0 or 1) containing the faulty BX02 card

- 12** Access the DCH level of the MAP display by typing

>DCH

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
DCH			SysB	ManB	OffL		CBsy	ISTb	InSv
0 Quit	PM		0	0	0		0	0	25
2 Post_	RCC2		0	0	0		0	0	0
3									
4	RCC2	0	Links_00S:		CSide	0,	PSide	0	
5 TRNSL	Unit0:		InSv						
6 TST	Unit1:		InSv						
7 BSY									
8 RTS	DCH		0	0	0		1	0	0
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13 SwAct									
14 QueryPM									
15 DCH									
16									
17 Perform									
18									

- 13** Using the information in the MAP display in step 12, identify and post the faulty DCH card state by typing

>POST dch_card_state

and pressing the Enter key.

where

dch_card_state

is either CBsy, SysB or ISTb. The example in step 12 shows the DCH card as being CBsy.

Example of a MAP display:

NTBX02

in an RSC-S (DS-1) Model B RCC2 (continued)

```

CM      MS      IOD      Net      PM      CCS      LNS      Trks      Ext      Appl
.       .       .       .       .       .       .       .       .       .

DCH
0 Quit      PM      0      0      0      0      0      0      25
2 Post_     RCC2    0      0      0      0      0      0
3
4           RCC2  0      Links_00S: CSide 0, PSide 0
5 TRNSL     Unit0:  InSv
6 TST       Unit1:  InSv
7 BSY
8 RTS       DCH     0      0      0      1      0      0
9 OffL
10 LoadPM_  DCH     0  ISG  1  CBSY  RCC2  2  PORT  15
11 Disp_
12 Next_
13 SwAct
14 QueryPM
15 DCH
16
17 Perform
18

```

- 14** Identify the DCH load file name by typing

>QUERYPM

and pressing the Enter key.

Example of a MAP response

```

Site  Flr  RPos  Bay_id  Shf  Description  Slot  EqPEC
HOST  01   R09  LTEI 00   32   LTC : 002   02   BX02

```

Loadnames : DCHINV - DCH32BT : INTL INDEX : 8

The DCH load file name in the example is *DCH32BT*.

- 15** Use the following information to determine the next step in this procedure.

If system load module is	Do
version 1	step 16
version 2	step 17

- 16** List the loadfile in the directory by typing

>DSKUT;LISTVOL D000 DCH load_file_name ALL

and pressing the Enter key.

or

>DSKUT;LISTVOL D010 DCH_load_file_name ALL

NTBX02

in an RSC-S (DS-1) Model B RCC2 (continued)

and pressing the Enter key.

Local operating company policy determines which disk, D000 or D010, the loadfile will be on.

Example of a MAP response

TAPE\$DIR

DCH32BT

Proceed to step 18.

- 17** List the loadfile in the directory by typing

>DISKUT;LV S00D

and pressing the Enter key.

>LF S00D file_name

and pressing the Enter key.

or

>DISKUT;LV S01D

and pressing the Enter key.

>LF S01D file_name

and pressing the Enter key.

- 18** Leave the disk utility by typing

>quit

and pressing the Enter key.

- 19** Compare the information in the example in step 14 with the information in the example in step 16 to verify the DCH file name exists. For instance, the file name in step 16 is *DCH32BT*, which corresponds to the file name in step 14.

- 20** Busy the faulty card by typing

>BSY

and pressing the Enter key.

NTBX02 in an RSC-S (DS-1) Model B RCC2 (continued)

At the RCE frame

21

**CAUTION**

Static discharge may cause damage to circuit packs
Put on a wrist strap and connect it to the frame of the RMM before removing any cards. This protects the RMM against service degradation caused by static electricity.

**DANGER****Equipment damage**

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.

22

Remove the NTBX02 card as shown in the following figures.


- a** Locate the card to be removed on the appropriate shelf.

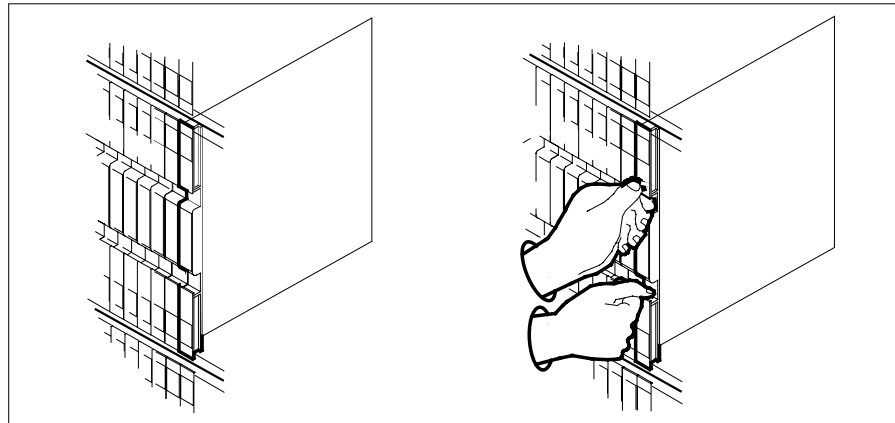

- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

NTBX02


in an RSC-S (DS-1) Model B RCC2 (continued)

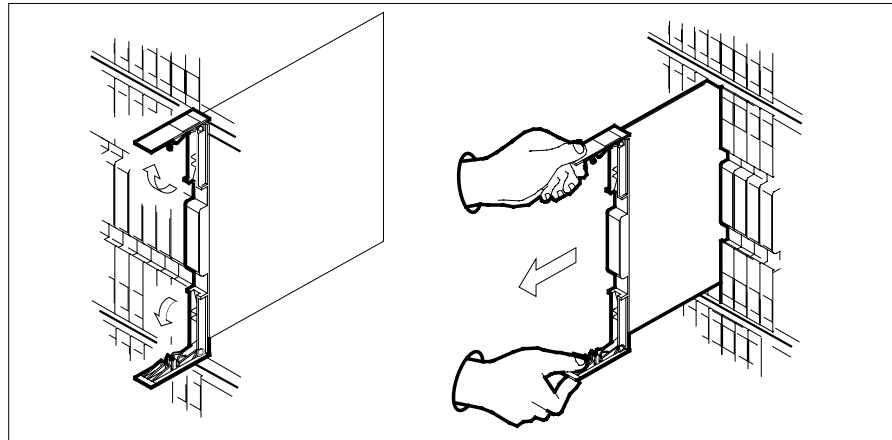

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

23 Open the locking levers on the replacement card.

- a Align the card with the slots in the shelf.
- b Gently slide the card into the shelf.

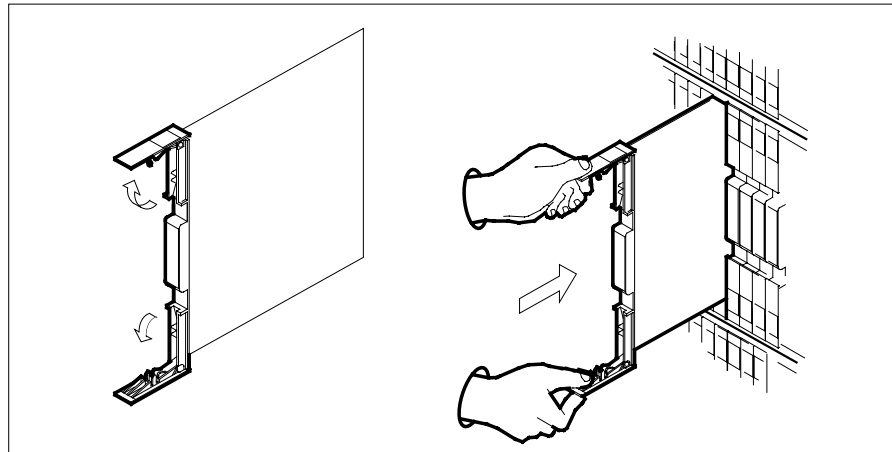

NTBX02

in an RSC-S (DS-1) Model B RCC2 (continued)

24


**CAUTION****Loss of subscriber service**

Subscriber service may be lost in the active unit when reseating the NTBX02 card.

It is recommended that this procedure be performed during low traffic periods.

Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure that the card is fully seated in the shelf.
- b Close the locking levers.

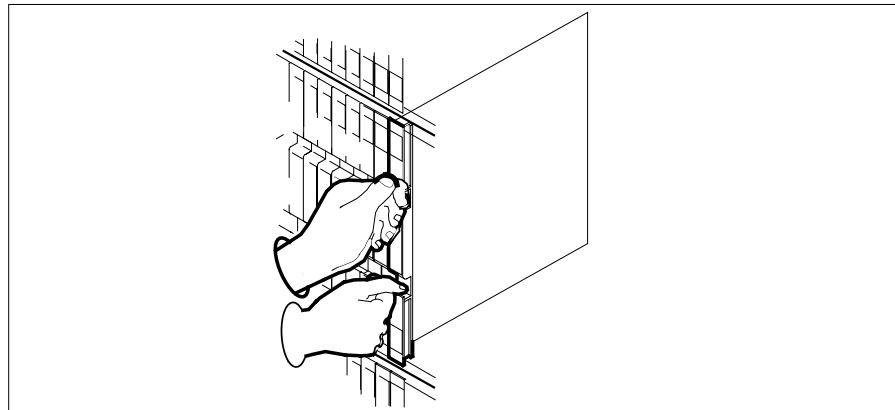**At the MAP terminal**

- 25 Load the DCH card by typing

>LOADPM

and pressing the Enter key.

- 26 Use the following information to determine the next step in this procedure.

If load	Do
passed	step 27
failed	step 34

- 27 Return the DCH card to service by typing

>RTS

NTBX02
in an RSC-S (DS-1) Model B RCC2 (continued)

and pressing the Enter key.

If RTS	Do
passed	step 28
failed	step 34

28 Leave the DCH level of the MAP display and return to the RCC2 level by typing

>QUIT

and pressing the Enter key.

29 Return to service the PM unit busied in step 11 by typing

>RTS unit unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive RCC2 unit (0 or 1) containing the new BX02 card

30 Ensure that the RCC2 unit is in service by typing

>QUERYPM FLT

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	0	0	0	0	25	
2 Post_	RCC2	0	0	0	0	0	0	1	
3 ListSet									
4	RCC2	0	InSv	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:	Act	InSv						
6 Tst_	Unit1:	Inact	InSv						
7 Bsy_	QUERYPM	FLT							
8 RTS_	Unit0	No troubles exist							
9 OffL	Unit1	No troubles exist							
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15 DCH									
16									
17									
18									

NTBX02

in an RSC-S (DS-1) Model B RCC2 (end)

Use the following information to determine the next step in this procedure.

	If faults are	Do
	not indicated	step 31
	indicated	step 34
31	Send any faulty cards for repair according to local procedure.	
32	Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card.	
	If you entered this procedure from	Do
	alarm clearing procedures	step 33
	other	step 35
33	Return to <i>Alarm Clearing Procedures</i> or other procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.	
34	Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.	
35	You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.	

NTBX02 in an RSC-S (PCM-30) Model A RCO2

Application

Use this procedure to replace an NTBX02 card in an RSC-S RCO2.

PEC	Suffixes	Name
NTBX02	AA	D-Channel Handler
NTBX02	BA	Enhanced D-Channel Handler
Note: NTBX02BA is required when the RCO2 is configured with the optional processor NTAX74AA instead of the NTMX77AA.		

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX02 in an RSC-S (PCM-30) Model A RCO2 (continued)

Summary of card replacement procedure for an NTBX02 card in an RSC-S RCO2

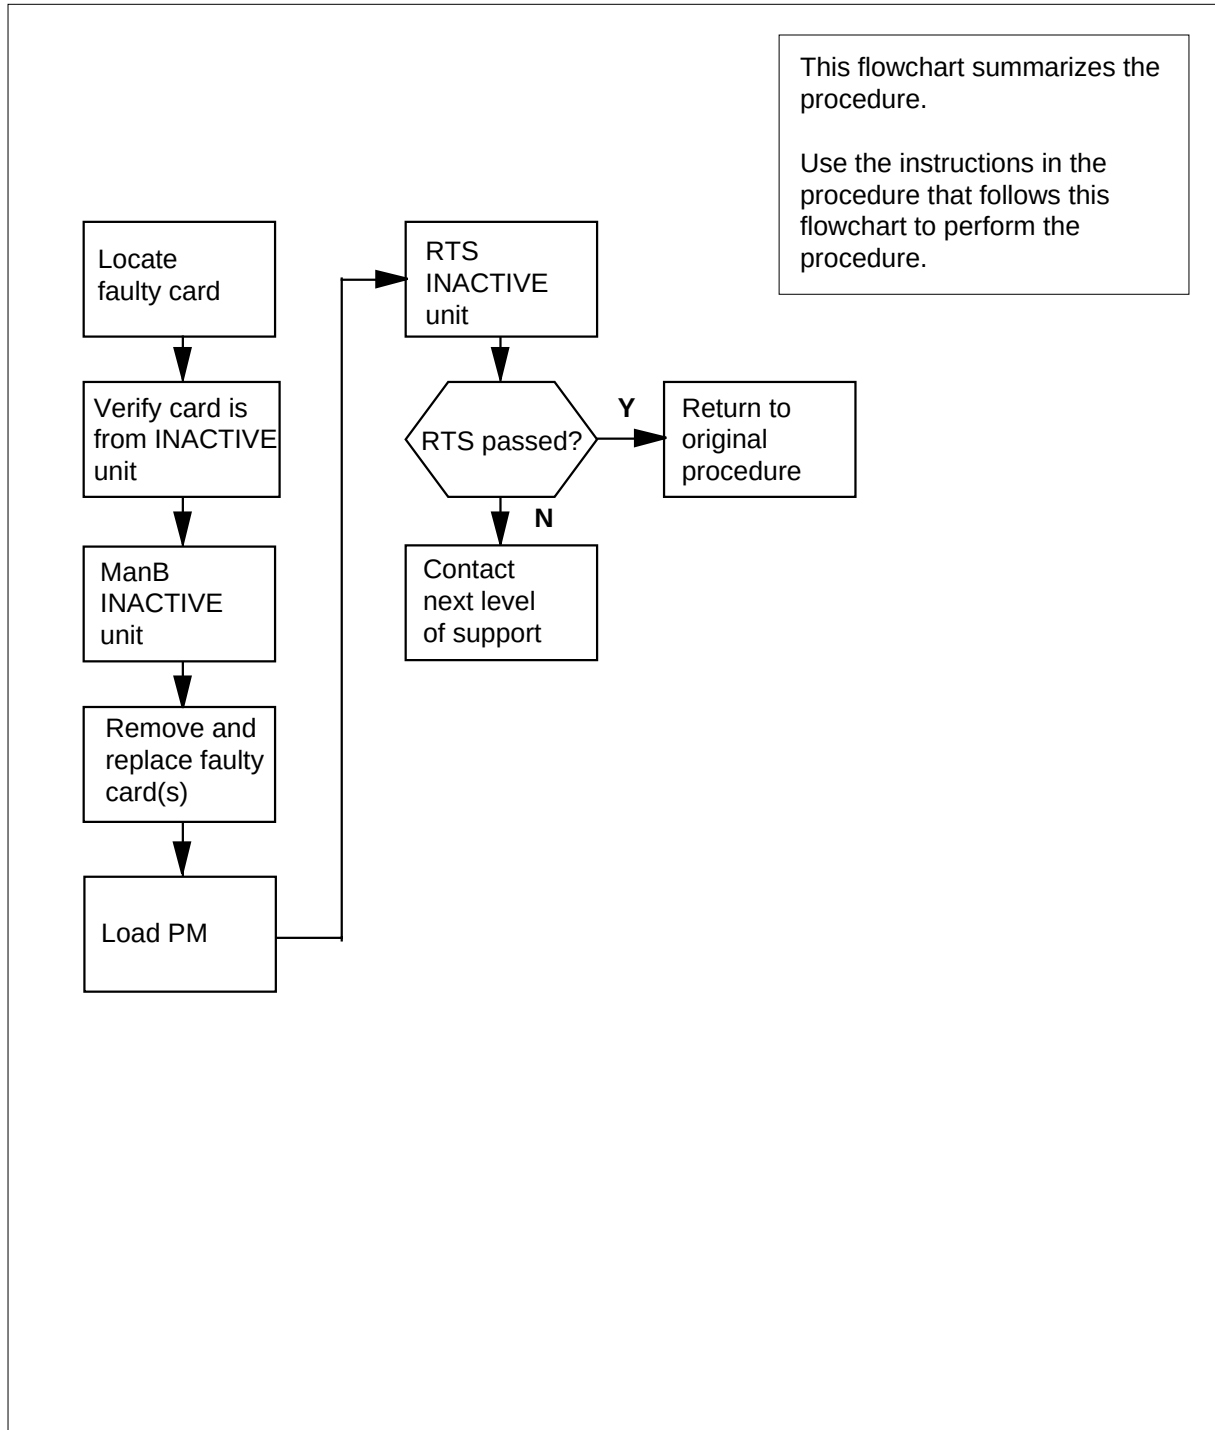

NTBX02 in an RSC-S (PCM-30) Model A RCO2 (continued)

Replacing an NTBX02 card in an RSC-S RCO2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCO2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain a replacement card. Ensure that the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

If the faulty card is	Do
in an extension (EXT) shelf	step 3
not in an EXT shelf	step 4

At the MAP terminal

- 3 For an extension shelf, refer to the slot positions in the following table to determine which unit contains the faulty NTBX02 card, and proceed to step 4.

If EXT shelf slot number	Do CPM unit number
3 / 24	0
4 / 23	0
5 / 22	0
6 / 21	0
7 / 20	0
8 / 19	1
9 / 18	1
10 / 17	1
11 / 16	1
12 / 15	1

NTBX02

in an RSC-S (PCM-30) Model A RCO2 (continued)

- 4 Ensure the PM level of the MAP display is currently displayed and the RCO2 with the faulty DCH card is posted by typing

>MAPCI;MTC;PM;POST RCO2 rco2_no

and pressing the Enter key.

where

rco2_no

is the number of the RCO2 with the faulty card

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
RCO2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0	Quit	PM	0	0	0	0	0	0	25
2	Post_	RCO2	0	0	0	0	0	0	0
3	ListSet								
4		RCO2	0	Links_00S:	CSide	0,	PSide	0	
5	TRNSL	Unit0:	Inact	InSv					
6	TST	Unit1:	Act	InSv					
7	BSY								
8	RTS								
9	OffL								
10	LoadPM_								
11	Disp_								
12	Next_								
13									
14	QueryPM								
15	DCH								
16									
17									
18									

- 5 Refer to the MAP display posted in step 4 to see if the faulty NTBX02 card is in the active or inactive unit.

If faulty card is in	Do
active unit	step 6
inactive unit	step 10

- 6 Switch the processing activity (SWACT) to the inactive unit by typing

>SWACT

and pressing the Enter key.

If SWACT	Do
cannot continue at this time	step 7

NTBX02

in an RSC-S (PCM-30) Model A RCO2 (continued)

	If SWACT	Do
	can continue at this time	step 8
7	Do not switch activity of the units. Reject the SWACT by typing >NO and pressing the Enter key. The system discontinues the SWACT. Return to step 6 during a period of low traffic.	
8	Confirm the system prompt by typing >YES and pressing the Enter key. The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably. Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding to the next maintenance action.	
	If the message is	Do
	SWACT passed	step 10
	SWACT failed	step 9
	SWACT refused by SWACT controller	step 9
9	Return to the <i>Alarm Clearing Procedures</i> to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.	
At the RCE frame		
10	Put a sign on the <i>active</i> unit bearing the words <i>Active unit—Do not touch</i> . This sign should not be attached by magnets or tape.	
At the MAP terminal		
11	Busy the inactive PM unit by typing >bsy unit unit_no and pressing the Enter key. <i>where</i> unit_no is the number of the inactive RCO2 unit (0 or 1) containing the faulty BX02 card	
12	Access the DCH level of the MAP display by typing >DCH	

NTBX02

in an RSC-S (PCM-30) Model A RCO2 (continued)

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
DCH			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	25	
2 Post_	RCO2		0	0	0	0	0	0	
3									
4	RCO2	0	Links_OOS:	CSide	0,	PSide	0		
5 TRNSL	Unit0:	InSv							
6 TST	Unit1:	InSv							
7 BSY									
8 RTS	DCH	0	0	0	1	0	0		
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13 SwAct									
14 QueryPM									
15 DCH									
16									
17 Perform									
18									

- 13** Using the information in the MAP display in step 12, identify and post the faulty DCH card state by typing

>POST dch_card_state

and pressing the Enter key.

where

dch_card_state

is either CBsy, SysB or ISTb. The example in step 12 shows the DCH card as being CBsy.

Example of a MAP display

NTBX02**in an RSC-S (PCM-30) Model A RCO2** (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
DCH			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	0	0	0	0	25	
2 Post_	RCO2	0	0	0	0	0	0	0	
3									
4	RCO2	0	Links_00S:	CSide	0,	PSide	0		
5 TRNSL	Unit0:	InSv							
6 TST	Unit1:	InSv							
7 BSY									
8 RTS	DCH	0	0	0	1	0	0		
9 OffL									
10 LoadPM_	DCH	0	ISG	1	CBSY	RCO2	2	PORT	15
11 Disp_									
12 Next_									
13 SwAct									
14 QueryPM									
15 DCH									
16									
17 Perform									
18									

- 14** Identify the DCH load file name by typing

>QUERYPM

and pressing the Enter key.

Example of a MAP response

Site	Flr	RPos	Bay_id	Shf	Description	Slot	EqPEC
HOST	01	R09	LTEI 00	32	PLGC : 002	02	BX02

Loadnames : DCHINV - DCH32BT : INTL INDEX : 8

The DCH load file name in the example is *DCH32BT*.

- 15** Use the following information to determine the next step in this procedure.

If system load module is	Do
version 1	step 16
version 2	step 17

- 16** List the loadfile in the directory by typing

>DSKUT;LISTVOL D000_dch_load_file_name ALL

and pressing the Enter key.

or

>DSKUT;LISTVOL D010_dch_load_file_name ALL

NTBX02

in an RSC-S (PCM-30) Model A RCO2 (continued)

and pressing the Enter key.

Local operating company policy determines which disk, D000 or D010, the loadfile will be on.

Example of a MAP response:

```
TAPE$DIR  
DCH32BT
```

Proceed to step 18.

- 17** List the loadfile in the directory by typing

>DISKUT;LV S00D

and pressing the Enter key.

>LF S00D file_name

and pressing the Enter key.

or

>DISKUT;LV S01D

and pressing the Enter key.

>LF S01D file_name

and pressing the Enter key.

- 18** Leave the disk utility by typing

>quit

and pressing the Enter key.

- 19** Compare the information in the example in step 14 with the information in the example in step 16 or 17 to verify the DCH file name exists. For instance, the file name in step 16 is *DCH32BT*, which corresponds with the file name in step 14.

- 20** Busy the faulty card by typing

>BSY

and pressing the Enter key.

NTBX02 in an RSC-S (PCM-30) Model A RCO2 (continued)

At the RCE frame

21



CAUTION

Static discharge may cause damage to circuit packs
Put on a wrist strap and connect it to the frame of the RMM before removing any cards. This protects the RMM against service degradation caused by static electricity.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.

22


Remove the NTBX02 card as shown in the following figures.

- a Locate the card to be removed on the appropriate shelf.

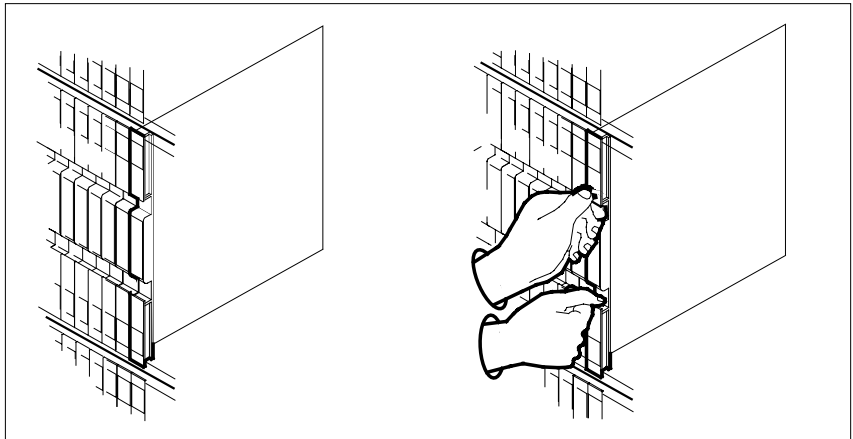

- b Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.


NTBX02
in an RSC-S (PCM-30) Model A RCO2 (continued)

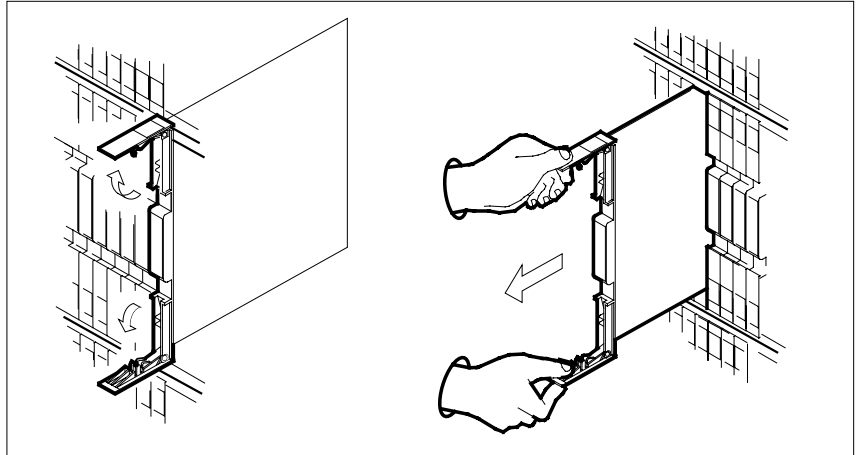

- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

23 Open the locking levers on the replacement card.

- a** Align the card with the slots in the shelf.
b Gently slide the card into the shelf.

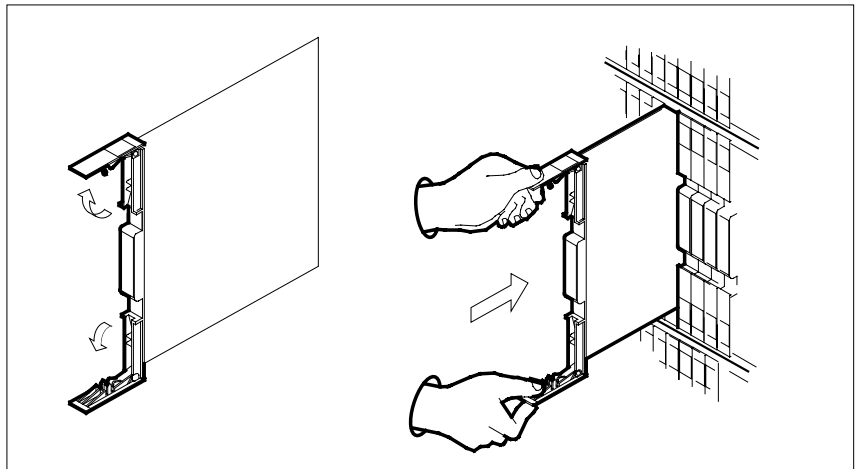

NTBX02 in an RSC-S (PCM-30) Model A RCO2 (continued)

24



CAUTION


Loss of subscriber service

Subscriber service may be lost in the active unit when reseating the NTBX02 card.

It is recommended that this procedure be performed during low traffic periods.

Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure that the card is fully seated in the shelf.
- b Close the locking levers.

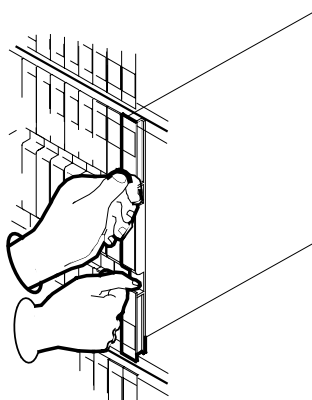

At the MAP terminal

- 25 Load the DCH card by typing

>LOADPM

and pressing the Enter key.

- 26 Use the following information to determine the next step in this procedure.

If LOADPM	Do
passed	step 27
failed	step 34

NTBX02
in an RSC-S (PCM-30) Model A RCO2 (continued)

- 27 Return the DCH card to service by typing

>RTS

and pressing the Enter key.

If RTS	Do
passed	step 28
failed	step 34

- 28 Leave the DCH level of the MAP display and return to the RCO2 level by typing

>QUIT

and pressing the Enter key.

- 29 Return to service the PM unit busied in step 11 by typing

>RTS unit unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive RCO2 unit (0 or 1) containing the new BX02 card

- 30 Ensure that the RCO2 unit is in service by typing

>QUERYPM FLT

and pressing the Enter key.

Example of a MAP display:

NTBX02**in an RSC-S (PCM-30) Model A RCO2 (end)**

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCO2			SysB	ManB		OffL	CBsy	ISTb	InSv
0 Quit	PM		0	0		0	0	0	25
2 Post_	RCO2		0	0		0	0	0	1
3 ListSet									
4	RCO2	0	InSv	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:		Act	InSv					
6 Tst_	Unit1:		Inact	InSv					
7 Bsy_	QUERYPM		FLT						
8 RTS_	Unit0		No troubles exist						
9 OffL	Unit1		No troubles exist						
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15 DCH									
16									
17									
18									

Use the following information to determine the next step in this procedure.

If faults are		Do
not indicated		step 31
indicated		step 34
31	Send any faulty cards for repair according to local procedure.	
32	Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card.	
If you entered this procedure from		Do
alarm clearing procedures		step 33
other		step 35
33	Return to <i>Alarm Clearing Procedures</i> or other procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.	
34	Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.	
35	You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.	

NTBX02 in an RSC-S (PCM-30) Model B RCO2

Application

Use this procedure to replace an NTBX02 card in an RSC-S RCO2.

PEC	Suffixes	Name
NTBX02	AA	D-Channel Handler
NTBX02	BA	Enhanced D-Channel Handler
Note: NTBX02BA is required when the RCO2 is configured with the optional processor NTAX74AA instead of the NTMX77AA.		

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX02 in an RSC-S (PCM-30) Model B RCO2 (continued)

Summary of card replacement procedure for an NTBX02 card in an RSC-S RCO2

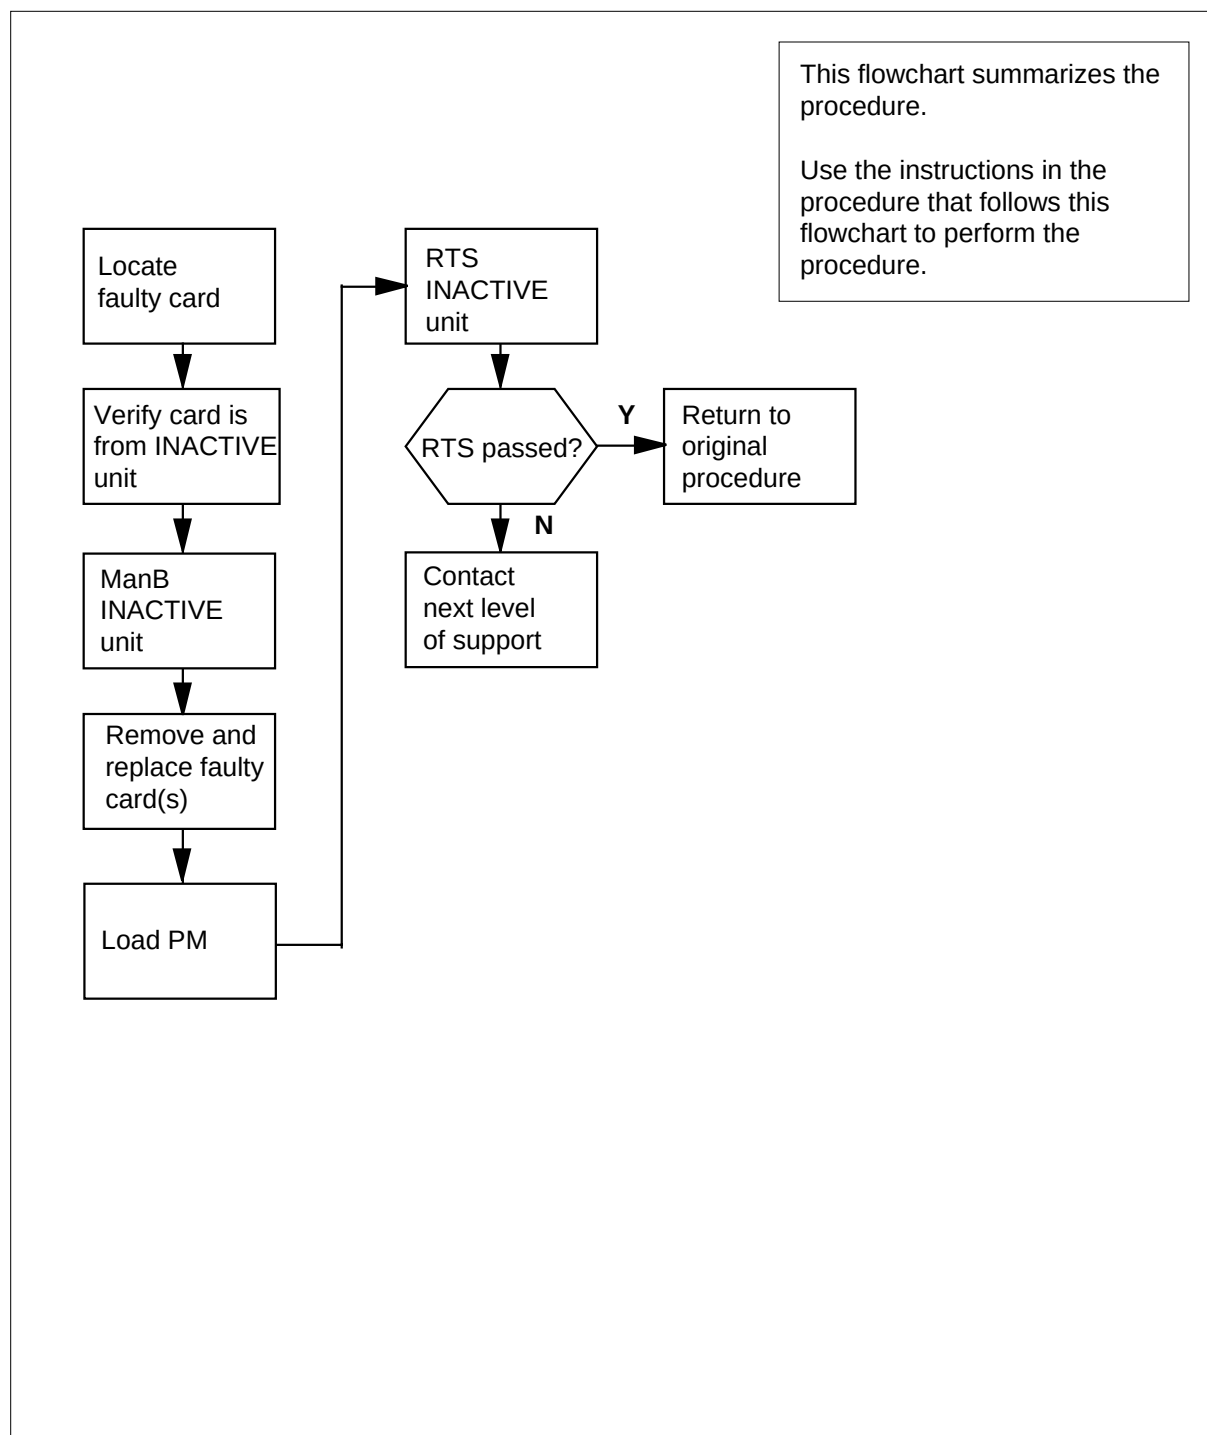

NTBX02

in an RSC-S (PCM-30) Model B RCO2 (continued)

Replacing an NTBX02 card in an RSC-S RCO2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCO2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain a replacement card. Ensure that the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

If the faulty card is	Do
in an extension (EXT) shelf	step 3
not in an EXT shelf	step 4

At the MAP terminal

- 3 For an extension shelf, refer to the slot positions in the following table to determine which unit contains the faulty NTBX02 card, and proceed to step 4.

If EXT shelf slot number	Do CPM unit number
3 / 24	0
4 / 23	0
5 / 22	0
6 / 21	0
7 / 20	0
8 / 19	1
9 / 18	1
10 / 17	1
11 / 16	1
12 / 15	1

NTBX02**in an RSC-S (PCM-30) Model B RCO2** (continued)

- 4 Ensure the PM level of the MAP display is currently displayed and the RCO2 with the faulty DCH card is posted by typing

>MAPCI;MTC;PM;POST RCO2 rco2_no

and pressing the Enter key.

where

rco2_no

is the number of the RCO2 with the faulty card

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
RCO2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0	Quit	PM	0	0	0	0	0	0	25
2	Post_	RCO2	0	0	0	0	0	0	0
3	ListSet								
4		RCO2	0	Links_00S:	CSide	0,	PSide	0	
5	TRNSL	Unit0:	Inact	InSv					
6	TST	Unit1:	Act	InSv					
7	BSY								
8	RTS								
9	OffL								
10	LoadPM_								
11	Disp_								
12	Next_								
13									
14	QueryPM								
15	DCH								
16									
17									
18									

- 5 Refer to the MAP display posted in step 4 to see if the faulty NTBX02 card is in the active or inactive unit.

If faulty card is in

Do

active unit

step 6

inactive unit

step 10

- 6 Switch the processing activity (SWACT) to the inactive unit by typing

>SWACT

and pressing the Enter key.

If SWACT

Do

cannot continue at this time

step 7

NTBX02

in an RSC-S (PCM-30) Model B RCO2 (continued)

	If SWACT	Do
	can continue at this time	step 8
7	Do not switch activity of the units. Reject the SWACT by typing >NO and pressing the Enter key. The system discontinues the SWACT. Return to step 6 during a period of low traffic.	
8	Confirm the system prompt by typing >YES and pressing the Enter key. The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably. Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding to the next maintenance action.	
	If the message is	Do
	SWACT passed	step 10
	SWACT failed	step 9
	SWACT refused by SWACT controller	step 9
9	Return to the <i>Alarm Clearing Procedures</i> to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.	
At the RCE frame		
10	Put a sign on the <i>active</i> unit bearing the words "Active unit—Do not touch." This sign should not be attached by magnets or tape.	
At the MAP terminal		
11	Busy the inactive PM unit by typing >bsy unit unit_no and pressing the Enter key. <i>where</i> unit_no is the number of the inactive RCO2 unit (0 or 1) containing the faulty BX02 card	
12	Access the DCH level of the MAP display by typing >DCH	

NTBX02
in an RSC-S (PCM-30) Model B RCO2 (continued)

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
DCH			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	25	
2 Post_	RCO2		0	0	0	0	0	0	
3									
4	RCO2	0	Links_OOS:	CSide	0,	PSide	0		
5 TRNSL	Unit0:	InSv							
6 TST	Unit1:	InSv							
7 BSY									
8 RTS	DCH	0	0	0	1	0	0		
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13 SwAct									
14 QueryPM									
15 DCH									
16									
17 Perform									
18									

- 13** Using the information in the MAP display in step 12, identify and post the faulty DCH card state by typing
- >POST dch_card_state**
- and pressing the Enter key.
- where*
- dch_card_state**
is either CBsy, SysB or ISTb. The example in step 12 shows the DCH card as being CBsy.
- Example of a MAP display*

NTBX02

in an RSC-S (PCM-30) Model B RCO2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
DCH			SysB	ManB	OffL	CBsy		ISTb	InSv
0 Quit	PM		0	0	0	0		0	25
2 Post_	RCO2		0	0	0	0		0	0
3									
4	RCO2	0	Links_00S:	CSide	0,	PSide	0		
5 TRNSL	Unit0:		InSv						
6 TST	Unit1:		InSv						
7 BSY									
8 RTS	DCH	0		0	0		1	0	0
9 OffL									
10 LoadPM_	DCH	0	ISG	1	CBSY	RCO2	2	PORT	15
11 Disp_									
12 Next_									
13 SwAct									
14 QueryPM									
15 DCH									
16									
17 Perform									
18									

- 14 Identify the DCH load file name by typing

>QUERYPM

and pressing the Enter key.

Example of a MAP response

Site	Flr	RPos	Bay_id	Shf	Description	Slot	EqPEC
HOST	01	R09	LTEI 00	32	PLGC : 002	02	BX02

Loadnames : DCHINV - DCH32BT : INTL INDEX : 8

The DCH load file name in the example is *DCH32BT*.

- 15 Use the following information to determine the next step in this procedure.

If system load module is	Do
version 1	step 16
version 2	step 17

- 16 List the loadfile in the directory by typing

>DSKUT;LISTVOL D000_dch_load_file_name ALL

and pressing the Enter key.

or

>DSKUT;LISTVOL D010_dch_load_file_name ALL

NTBX02

in an RSC-S (PCM-30) Model B RCO2 (continued)

and pressing the Enter key.

Local operating company policy determines which disk, D000 or D010, the loadfile will be on.

Example of a MAP response:

```
TAPE$DIR  
DCH32BT
```

Proceed to step 18.

- 17** List the loadfile in the directory by typing

>DISKUT;LV S00D

and pressing the Enter key.

>LF S00D file_name

and pressing the Enter key.

or

>DISKUT;LV S01D

and pressing the Enter key.

>LF S01D file_name

and pressing the Enter key.

- 18** Leave the disk utility by typing

>quit

and pressing the Enter key.

- 19** Compare the information in the example in step 14 with the information in the example in step 16 or 17 to verify the DCH file name exists. For instance, the file name in step 16 is *DCH32BT*, which corresponds with the file name in step 14.

- 20** Busy the faulty card by typing

>BSY

and pressing the Enter key.

NTBX02 in an RSC-S (PCM-30) Model B RCO2 (continued)

At the RCE frame

21

**CAUTION**

Static discharge may cause damage to circuit packs
Put on a wrist strap and connect it to the frame of the RMM before removing any cards. This protects the RMM against service degradation caused by static electricity.

**DANGER****Equipment damage**

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.

22

Remove the NTBX02 card as shown in the following figures.


- a** Locate the card to be removed on the appropriate shelf.

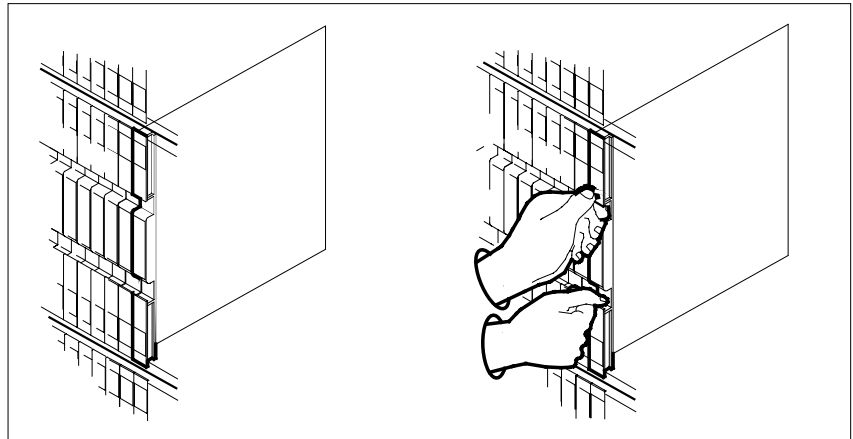

- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

NTBX02


in an RSC-S (PCM-30) Model B RCO2 (continued)

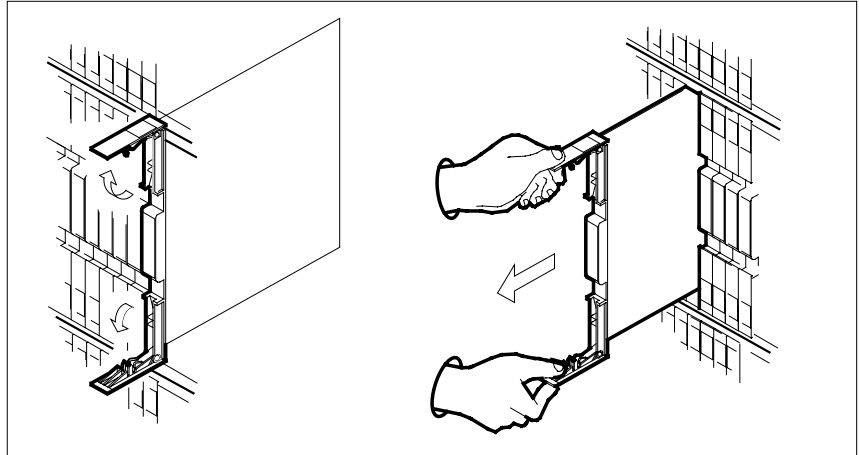

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

23 Open the locking levers on the replacement card.

- a Align the card with the slots in the shelf.
- b Gently slide the card into the shelf.

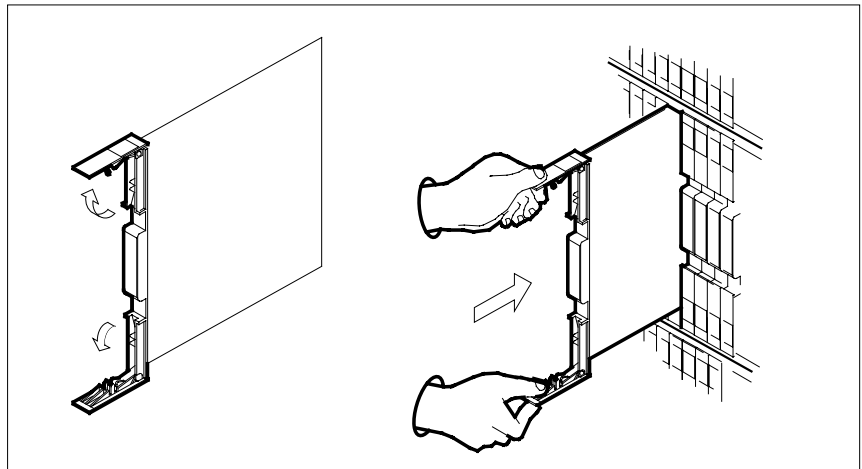

NTBX02

in an RSC-S (PCM-30) Model B RCO2 (continued)

24


**CAUTION****Loss of subscriber service**

Subscriber service may be lost in the active unit when reseating the NTBX02 card.

It is recommended that this procedure be performed during low traffic periods.

Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure that the card is fully seated in the shelf.
- b Close the locking levers.

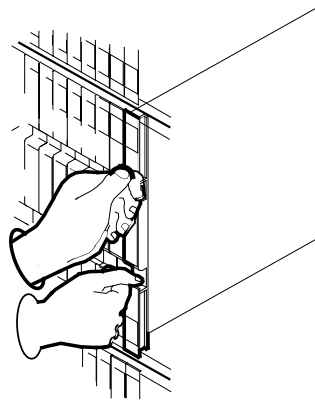**At the MAP terminal**

- 25** Load the DCH card by typing

>LOADPM

and pressing the Enter key.

- 26** Use the following information to determine the next step in this procedure.

If load	Do
passed	step 27
failed	step 34

NTBX02

in an RSC-S (PCM-30) Model B RCO2 (continued)

- 27 Return the DCH card to service by typing
>RTS
and pressing the Enter key.
- | If RTS | Do |
|--------|---------|
| passed | step 28 |
| failed | step 34 |
- 28 Leave the DCH level of the MAP display and return to the RCO2 level by typing
>QUIT
and pressing the Enter key.
- 29 Return to service the PM unit busied in step 11 by typing
>RTS unit unit_no
and pressing the Enter key.
where
unit_no
is the number of the inactive RCO2 unit (0 or 1) containing the new BX02 card
- 30 Ensure that the RCO2 unit is in service by typing
>QUERYPM FLT
and pressing the Enter key.
Example of a MAP display:

NTBX02

in an RSC-S (PCM-30) Model B RCO2 (end)

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCO2			SysB	ManB		OffL	CBsy	ISTb	InSv
0 Quit	PM		0	0		0	0	0	25
2 Post_	RCO2		0	0		0	0	0	1
3 ListSet									
4	RCO2	0	InSv	Links_00S:	CSide	0,	PSide	0	
5 TRNSL_	Unit0:		Act	InSv					
6 Tst_	Unit1:		Inact	InSv					
7 Bsy_	QUERYPM		FLT						
8 RTS_	Unit0		No troubles exist						
9 OffL	Unit1		No troubles exist						
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15 DCH									
16									
17									
18									

Use the following information to determine the next step in this procedure.

	If faults are	Do
	not indicated	step 31
	indicated	step 34
31	Send any faulty cards for repair according to local procedure.	
32	Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card.	
	If you entered this procedure from	Do
	alarm clearing procedures	step 33
	other	step 35
33	Return to <i>Alarm and Performance Monitoring Procedures</i> or other procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.	
34	Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.	
35	You have successfully completed this procedure. Remove the sign from the active unit and return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.	

NTBX02 in an SMA

Application

Use this procedure to replace an NTBX02 card in an SMA.

PEC	Suffixes	Name
NTBX02	BA	Enhanced D-Channel Handler (DCH) card

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA”
- replacing a card
- returning a card


Do not go to the common procedures unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTBX02 in an SMA (continued)

Summary of card replacement procedure for an NTBX02 card in an SMA

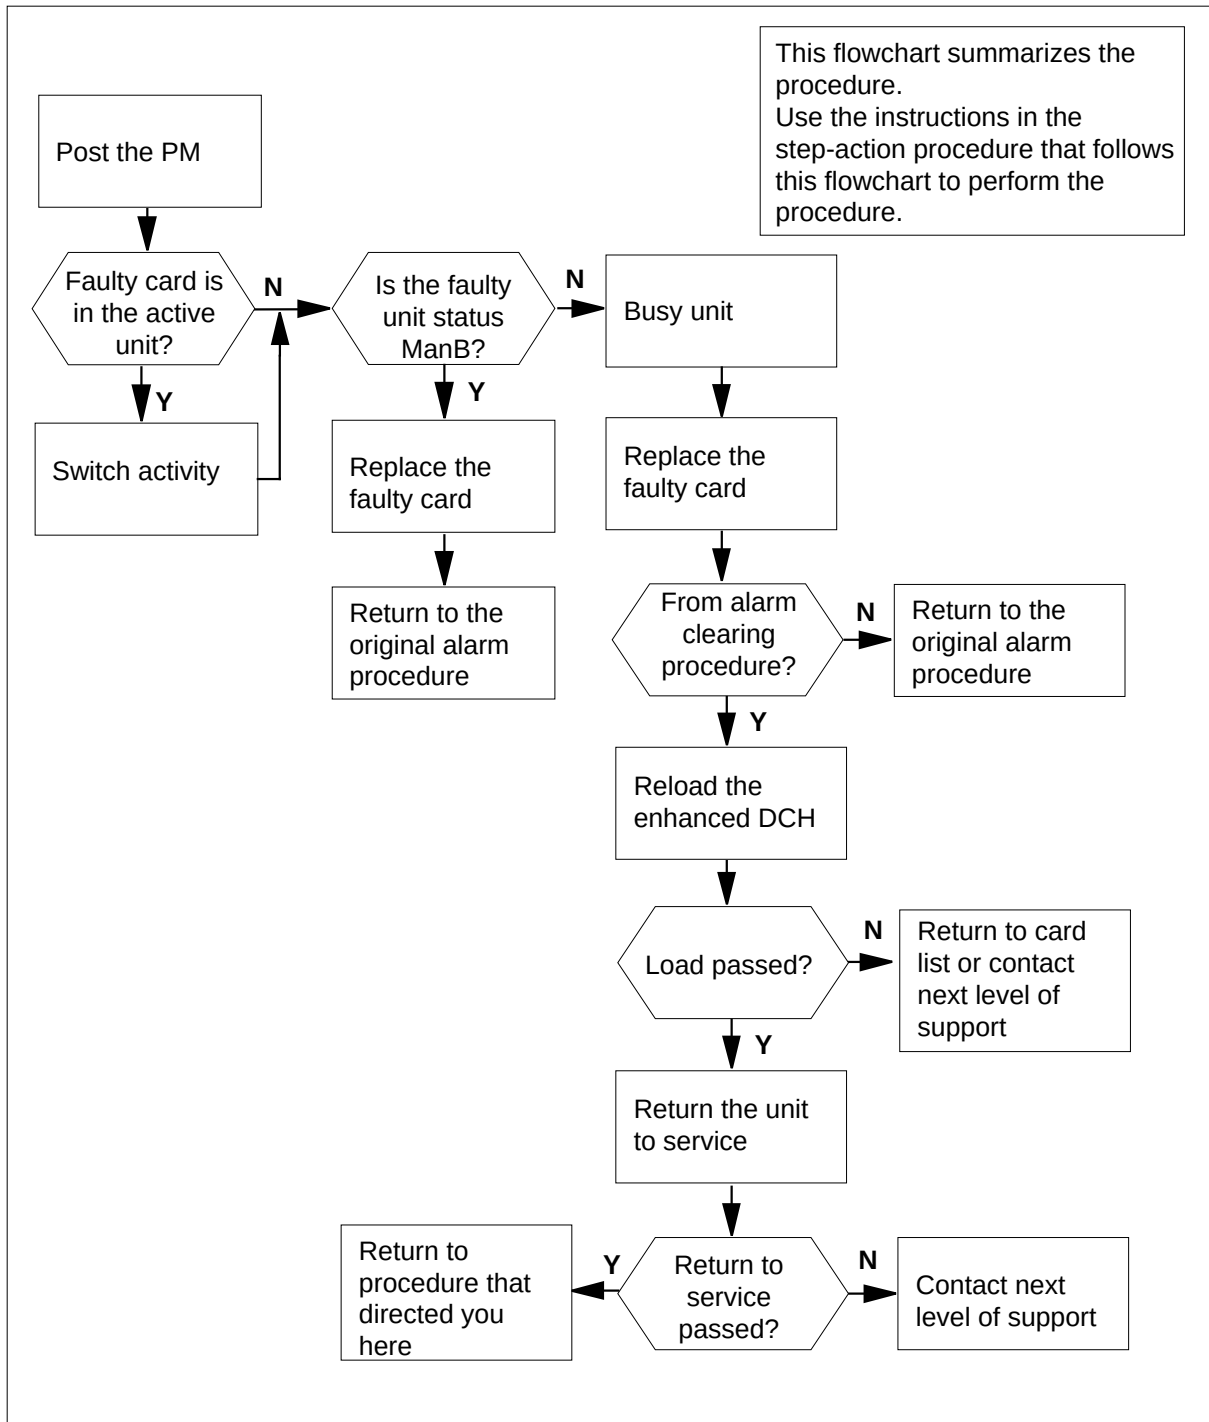

NTBX02 in an SMA (continued)

Replacing an NTBX02 card in an SMA

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA."
- 4



CAUTION

Loss of service

Ensure that you replace the card in the inactive unit and verify the mate unit is active.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA by typing
>MAPCI;MTC;PM;POST SMA sma_no
and pressing the Enter key.

where

sma_no

is the number of the SMA to be posted

Example of a MAP response

NTBX02

in an SMA (continued)

SMA	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA	0	0	0	0	1	7

SMA 0 ISTb Links_00S: CSide 0, PSide 0
 Unit0: Act InSv
 Unit1: Inact ISTb

- 6 Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If the faulty card is in the	Do
active unit	step 7
inactive unit	step 10

- 7 Switch the activity of the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
can continue at this time	step 8
cannot continue at this time	step 25

- 8 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 10
SWACT failed Reason: XPM SWACTback	step 9
SWACT refused by SWACT Controller	step 9

NTBX02 in an SMA (continued)

- 9 The inactive unit could not establish two-way communication with the central control and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit.

Go to step 23.

At the equipment frame

- 10 Hang a sign on the active unit bearing the words: *Active unit-Do not touch*. This sign should not be attached by magnets or tape.


At the MAP terminal

- 11 Observe the MAP display and determine the state of the inactive unit.

If the state is	Do
ManB	step 12
SysB, CBsy, ISTb, or InSv	step 13

- 12 Identify all D-channel handler (DCH) cards (NTBX02) with ports connected to the busied unit using the following diagram.

Table LTCPSINV shows the card type for each slot. Table DCHINV associates DCH numbers with slots.

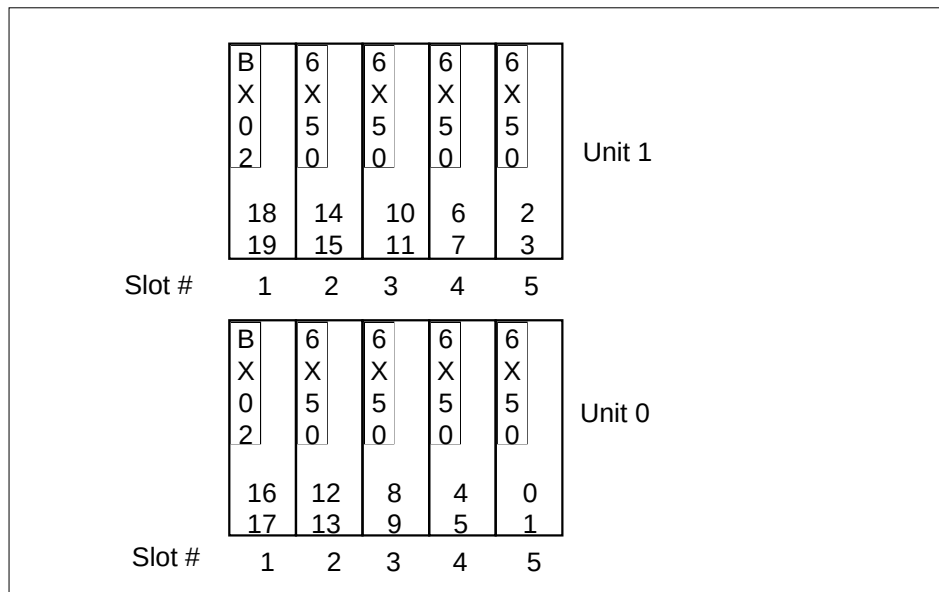

- 13 Go to the DCH level of the MAP terminal by typing
>DCH
and pressing the Enter key.

NTBX02 in an SMA (continued)

- 14** Post the faulty DCH card (NTBX02) by typing
>POST dch_no
 and pressing the Enter key.
 Table DCHINV details the physical P-side link, which maps the logical DCH number to the physical location.
- 15** Busy the link to the faulty DCH card by typing
>BSY dch_no
 and pressing the Enter key.
where
dch_no
 is one of the cards with ports connected to the busied unit

At the equipment frame

16



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the frame supervisory panel (FSP). This protects the equipment against damage caused by static electricity.

Repeat steps 14 and 15 for each DCH card (NTBX02) with ports connected to the busied unit.

- 17** Replace the faulty NTBX02 card using the common replacing a card procedure in this document.

At the MAP terminal

- 18** Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 24
other	step 19

- 19** Load the replaced DCH card by typing
>LOADPM
 and pressing the Enter key.

If load	Do
passed	step 20

NTBX02

in an SMA (end)

	If load	Do
	failed	step 23
20	Return to service one of the DCH cards with ports connected to the inactive unit by typing >RTS and pressing the Enter key.	
	If RTS	Do
	passed	step 21
	failed	step 23

At the equipment frame

- 21 Remove the sign from the active SMA unit.
- 22 Go to the common returning a card procedure in this document.
Go to step 24.
- 23 For further assistance, contact the personnel responsible for the next level of support.
- 24 You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.
- 25 For further assistance with switch of activity, contact the personnel responsible for the next level of support.
- Note:** If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

**NTBX02
in an SMA-MVI-20**

Application

Use this procedure to replace an NTBX02 card in an SMA.

PEC	Suffixes	Name
NTBX02	BA	Enhanced D-Channel Handler (DCH) card

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA”
- replacing a card


Do not go to the common procedures unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTBX02 in an SMA-MVI-20 (continued)

Summary of card replacement procedure for an NTBX02 card in an SMA

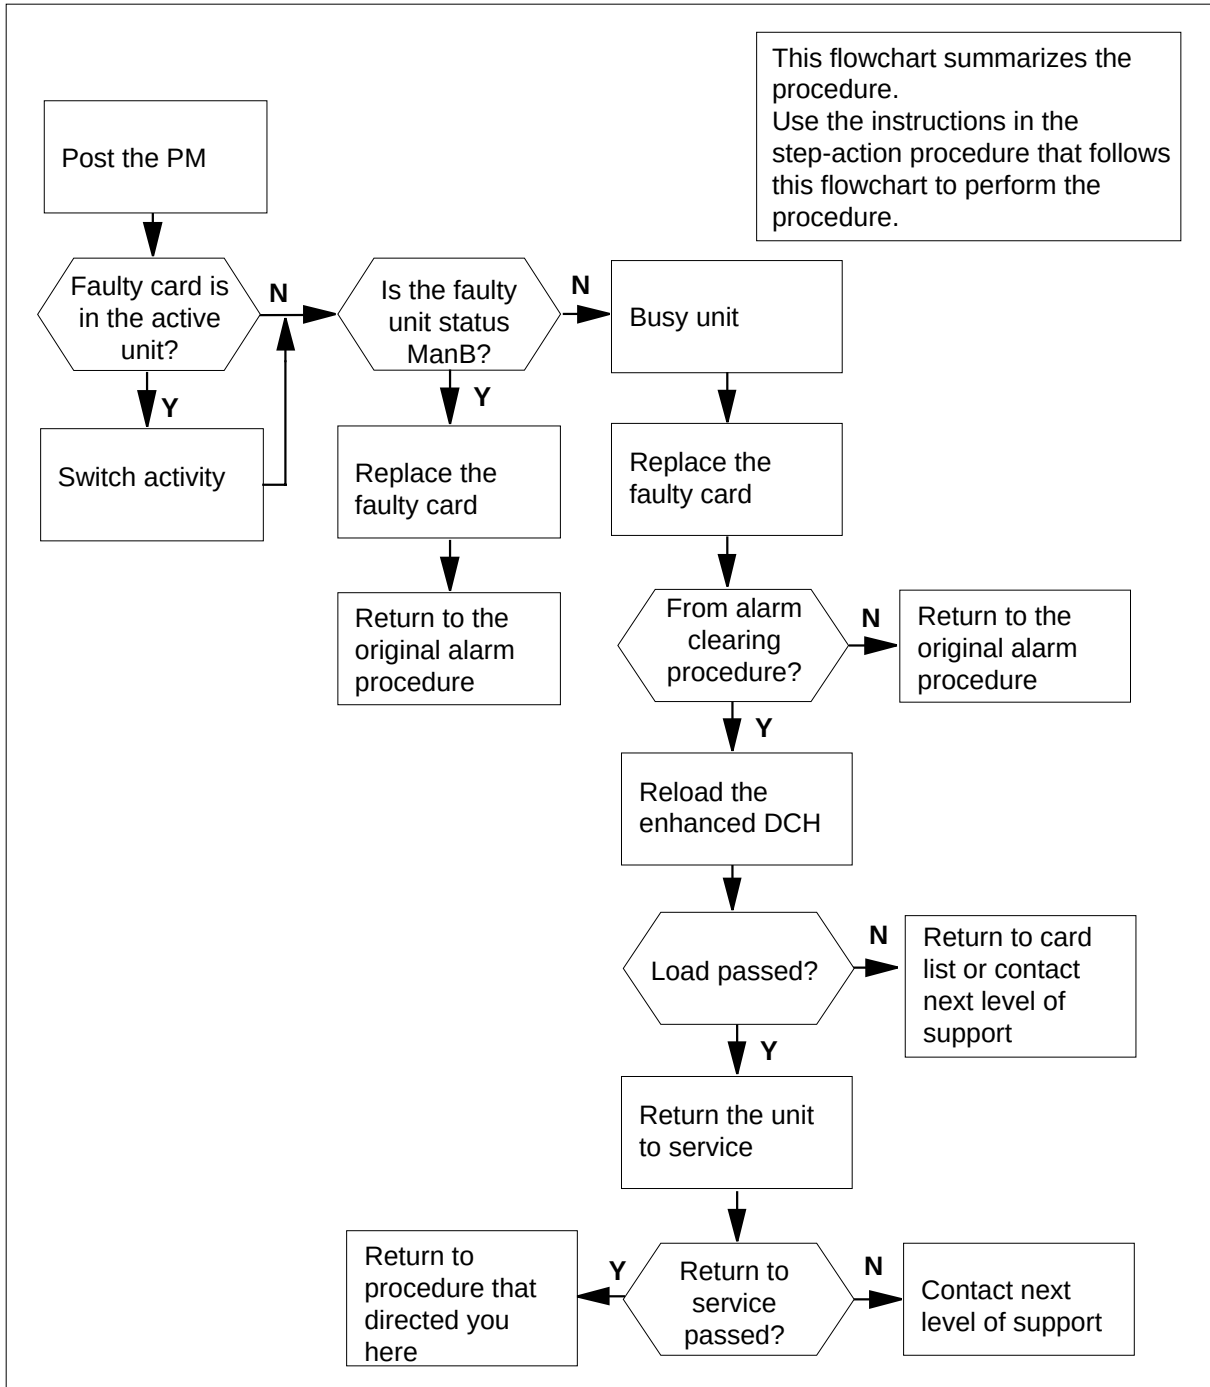

NTBX02 in an SMA-MVI-20 (continued)

Replacing an NTBX02 card in an SMA

At the equipment frame

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA."
- 4



CAUTION

Loss of service

Ensure that you replace the card in the inactive unit and verify the mate unit is active.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA by typing
>MAPCI;MTC;PM;POST SMA sma_no
 and pressing the Enter key.

where

sma_no

is the number of the SMA to be posted

Example of a MAP response

NTBX02**in an SMA-MVI-20** (continued)

SMA	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA	0	0	0	0	1	7

SMA 0 ISTb Links_00S: CSide 0, PSide 0
 Unit0: Act InSv
 Unit1: Inact ISTb

- 6 Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If the faulty card is in the	Do
active unit	step 7
inactive unit	step 11

- 7 SWACT the units by typing
>SWACT
 and pressing the Enter key.
 A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
cannot continue at this time	step 8
can continue at this time	step 9

- 8 Reject the prompt to SWACT the units by typing
>NO
 and pressing the Enter key.

The system discontinues the SWACT.

- 9 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.


Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 11

NTBX02 in an SMA-MVI-20 (continued)

	If the message is	Do
	SWACT failed Reason: XPM SWACTback	step 10
	SWACT refused by SWACT Controller	step 10
10	The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit. Go to step 25.	
At the equipment frame		
11	Hang a sign on the active unit bearing the words: <i>Active unit-Do not touch</i> . This sign should not be attached by magnets or tape.	
At the MAP terminal		
12	Observe the MAP display and determine the state of the inactive unit.	
	If the state is	Do
	ManB	step 13
	SysB, CBsy, ISTb, or InSv	step 14
13	Identify all D-channel handler (DCH) cards (NTBX02) with ports connected to the busied unit using the following diagram. Table LTCPSINV shows the card type for each slot. Table DCHINV associates DCH numbers with slots.	

NTBX02 in an SMA-MVI-20 (continued)

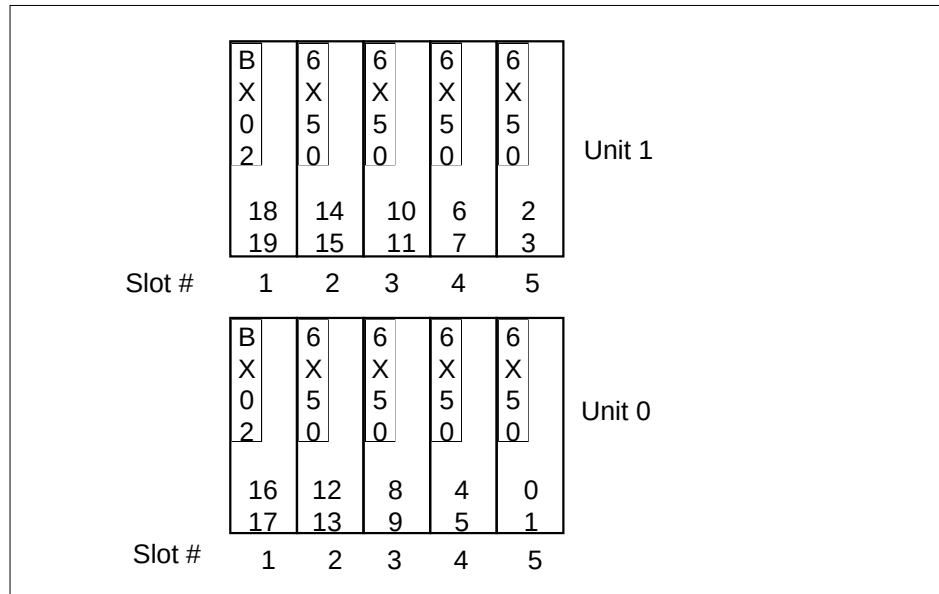

- 14 Go to the DCH level of the MAP terminal by typing
>DCH
 and pressing the Enter key.
- 15 Post the faulty DCH card (NTBX02) by typing
>POST dch_no
 and pressing the Enter key.
 Table DCHINV details the physical P-side link, which maps the logical DCH number to the physical location.
- 16 Busy the link to the faulty DCH card by typing
>BSY dch_no
 and pressing the Enter key.
where
dch_no
 is one of the cards with ports connected to the busied unit

NTBX02 in an SMA-MVI-20 (continued)

At the equipment frame

17

**WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the frame supervisory panel (FSP). This protects the equipment against damage caused by static electricity.

Repeat steps 15 and 16 for each DCH card (NTBX02) with ports connected to the busied unit.

- 18 Replace the faulty NTBX02 card using the common replacing a card procedure in this document.

At the MAP terminal

- 19 Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 26
other	step 20

- 20 Load the replaced DCH card by typing

>LOADPM

and pressing the Enter key.

If load	Do
passed	step 21
failed	step 25

- 21 Return-to-service one of the DCH cards with ports connected to the inactive unit by typing

>RTS

and pressing the Enter key.

If RTS	Do
passed	step 22
failed	step 25

NTBX02

in an SMA-MVI-20 (end)

At the equipment frame

- 22** Remove the sign from the active SMA unit.
- 23** Send any faulty cards for repair according to local procedure.
- 24** Note in office records:
 - date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the cardGo to step 26.
- 25** For further assistance, contact the personnel responsible for the next level of support.
- 26** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

**NTBX02
in an SMA2**

Application

Use this procedure to replace an NTBX02 card in an SMA2.

PEC	Suffixes	Name
NTBX02	BA	Enhanced D-Channel Handler (DCH) card

D-channel handler (DCH) circuit cards are not provided with the multi-vendor interface (MVI) 28 project, enhanced DCH (EDCH) circuit cards are provided instead. At the MAP position DCH is displayed, meaning an EDCH circuit card. Any reference to a DCH circuit card in this document means an EDCH circuit card.

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA2”
- replacing a card
- returning a card


Do not go to a common procedure unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTBX02 in an SMA2 (continued)

Summary of card replacement procedure for an NTBX02 card in an SMA2

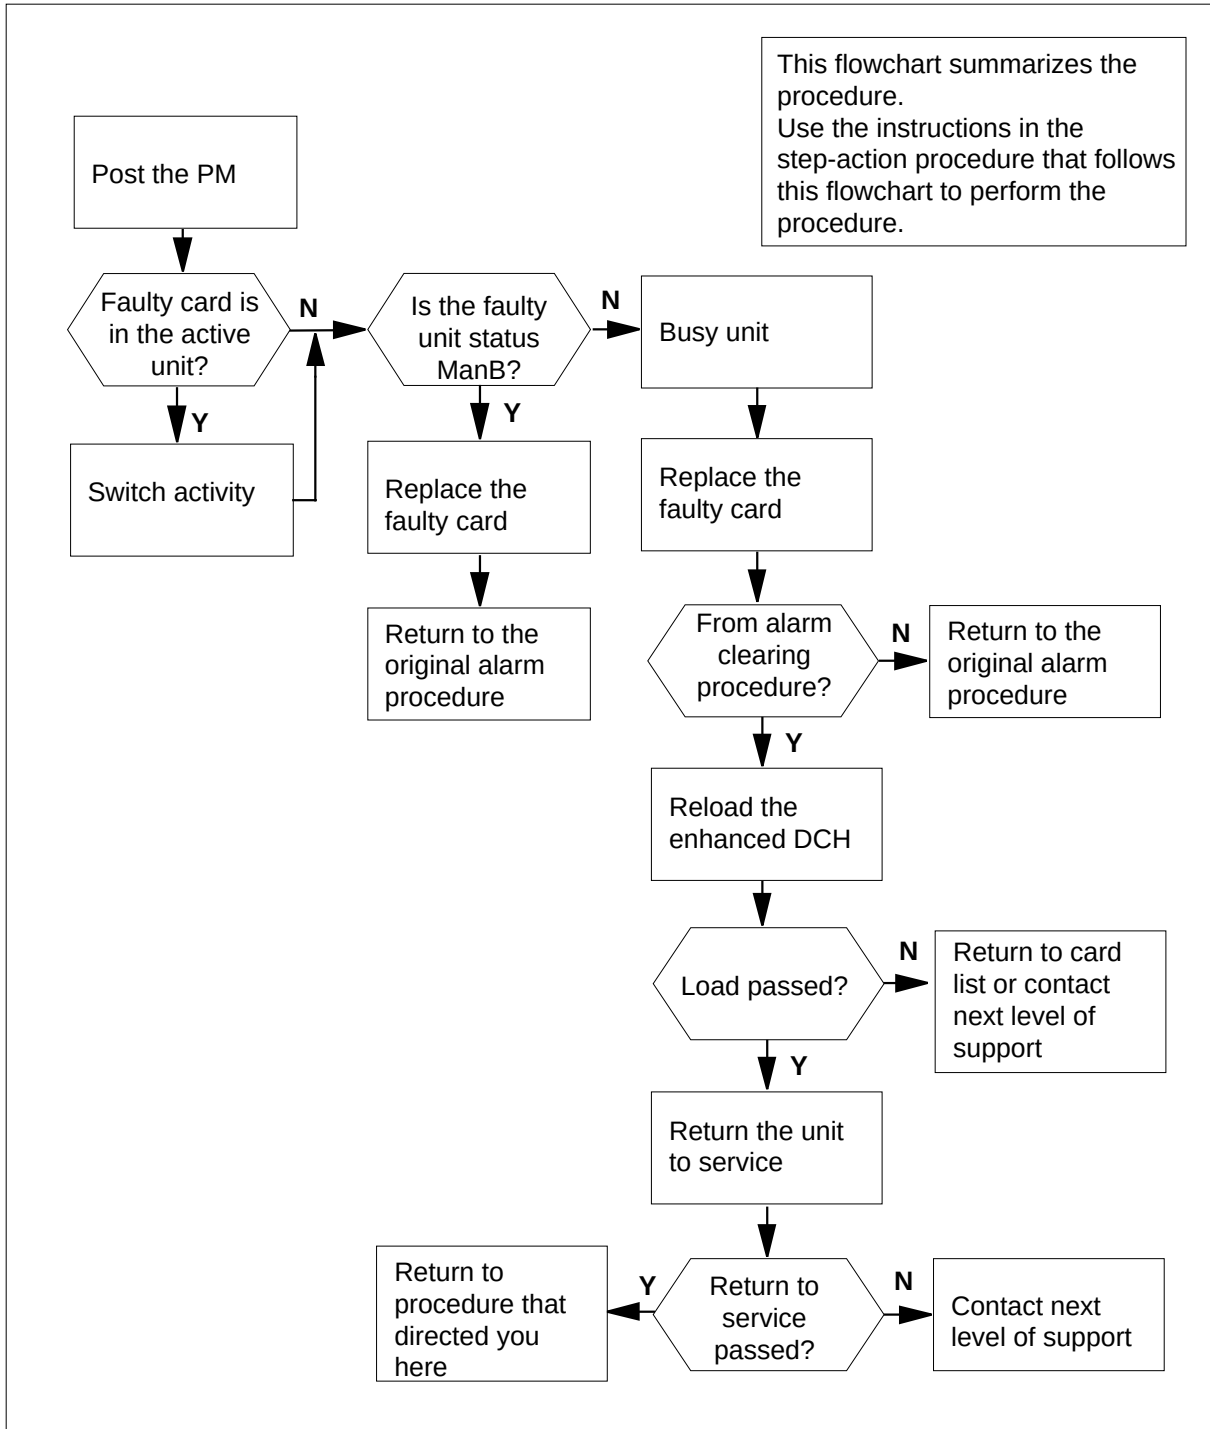

NTBX02 in an SMA2 (continued)

Replacing an NTBX02 card in an SMA2

At your current location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3
- 3 Perform the procedure "Locating a faulty card in an SMA2" and return to step 4
- 4 Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA2 by typing

>MAPCI;MTC;PM;POST SMA2 sma2_no

and pressing the Enter key.

where

sma2_no

is the number of the SMA2 to be posted

Example of a MAP response

SMA2	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA2	0	0	0	0	0	7

SMA2 0 InSv Links_00S: CSide 0, PSide 0

Unit0: Act InSv

Unit1: Inact InSv

- 6 Go to the DCH level of the MAP display by typing
>DCH
 and pressing the Enter key.
- 7 Post all DCH cards associated with the posted SMA2 by typing
>POST ALL

NTBX02

in an SMA2 (continued)

- and pressing the Enter key.
- 8** Display all DCH cards associated with the posted SMA2 by typing
>DISP ALL
and pressing the Enter key.

Note: Identify the number of a spare DCH card.

- 9** Post the faulty DCH circuit card by typing
>POST dch_no
and pressing the Enter key.

where

dch_no
is the number of the DCH card you are replacing

If the DCH card to be replaced is	Do

already a spare	step 11

not a spare	step 10

- 10** Make the posted DCH card a spare by typing
>SWTCH spare dch_no
and pressing the Enter key.

where

spare dch_no
is the number of the spare DCH card identified in step 8

If the switch is	Do

successful	step 11

not successful	step 18

- 11** Busy the link to the faulty DCH circuit card by typing
>BSY
and pressing the Enter key.

NTBX02 in an SMA2 (continued)

At the frame or cabinet**12****WARNING****Static electricity damage**

Wear a strap connected to the wrist strap grounding modular supervisory panel (MSP) while handling cards. This strap protects the cards against damage caused by static electricity.

Replace the faulty DCH circuit card using the common replacing a card procedure in this document.

At the MAP terminal**13** Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 19
other	step 14

14 Load the replaced DCH circuit card by typing
>LOADPM
 and pressing the Enter key.

If load	Do
passed	step 15
failed	step 18

15 Return-to-service one of the DCH circuit cards with ports connected to the inactive unit by typing
>RTS
 and pressing the Enter key.

If RTS	Do
passed	step 16
failed	step 18

16 Send any faulty cards for repair according to local procedure.

17 Go to the common returning a card procedure in this document.
 Go to step 19.

NTBX02
in an SMA2 (end)

- 18** For further assistance, contact the personnel responsible for the next level of support.
- 19** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

**NTBX02
in an SMU**

Application

Use this procedure to replace the following card in an SMU.

PEC	Suffixes	Name
NTBX02	AA, BA	D-Channel handler

If you cannot identify the PEC, suffix, and shelf or frame for the card you want to replace, refer to the Index for a list of cards, shelves, and frames discussed in this document.

Common procedure


The common replacing a card procedure is referenced in this procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTBX02 in an SMU (continued)

Summary of Replacing an NTBX02 in an SMU

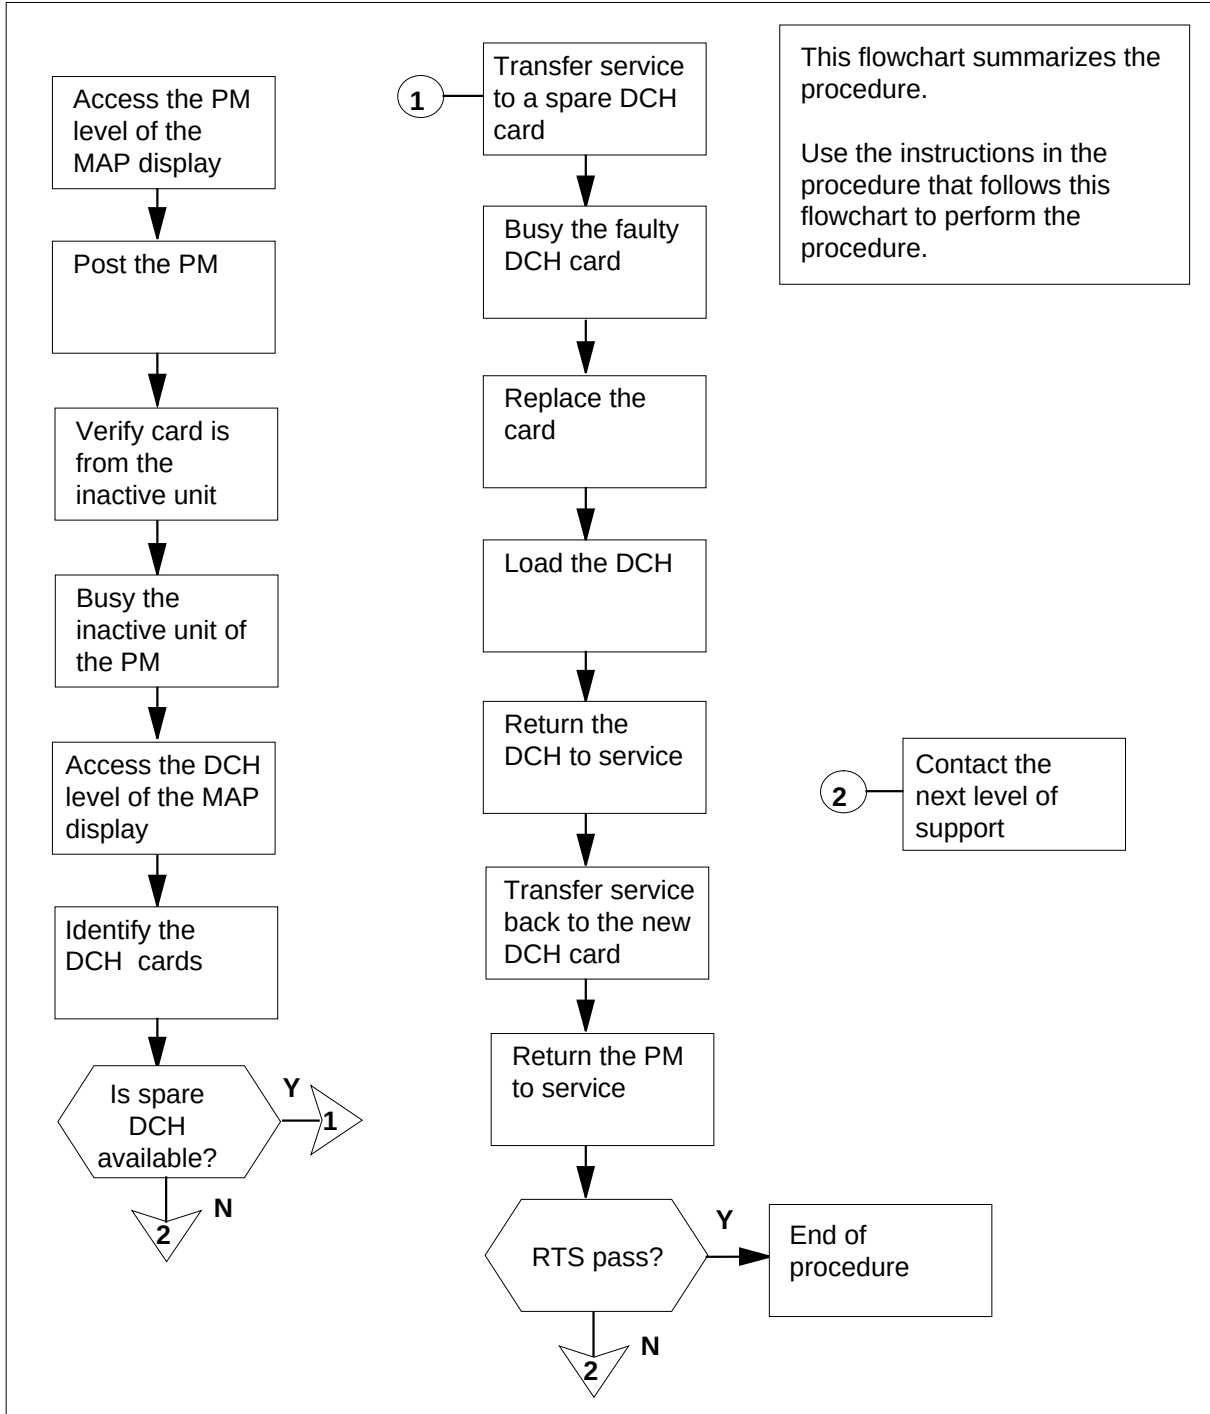

NTBX02 in an SMU (continued)

Replacing an NTBX02 in an SMU

At the your current location:

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure.
- 2



CAUTION

Loss of service

When replacing a card in the SMU, ensure that the unit where you are replacing the card is inactive and that the mate unit is active.

Obtain a replacement card. Ensure that the replacement card has the same PEC, including suffix, as the card being removed.

At the MAP terminal

- 3 Access the PM level of the MAP display by typing
>MAPCI;MTC;PM
and pressing the Enter key.
- 4 Post the SMU associated with the card you are replacing by typing
>POST SMU smu_no
and pressing the Enter key.
where

smu_no

is the number of the SMU with the faulty card

Example of a MAP response:

SMU	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMU	0	0	0	0	1	7

```
SMU 0 ISTb Links_00S: CSide 0, PSide 0
Unit0: Act ISTb
Unit1: Inact InSv
```

NTBX02

in an SMU (continued)

- 5 Refer to the MAP display posted in step 4 to see if the faulty NTBX02 card is in the active or inactive unit.

If faulty card is in	Do
active unit	step 6
inactive unit	step 10
- 6 Switch the processing activity (SWACT) to the inactive unit by typing **>SWACT** and pressing the Enter key.

If SWACT	Do
cannot continue at this time	step 7
can continue at this time	step 8
- 7 Do not switch activity of the units. Reject the SWACT by typing **>NO** and pressing the Enter key.
The system discontinues the SWACT.
Return to step 6 during a period of low traffic.
- 8 Confirm the system prompt by typing **>YES** and pressing the Enter key.
The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding to the next maintenance action.

If the message is	Do
SWACT passed	step 10
SWACT failed	step 9
SWACT refused by SWACT controller	step 9
- 9 Return to the *Alarm Clearing Procedures* to clear the alarm condition on the inactive unit. When the alarm is cleared, return to step 1 of this procedure.

NTBX02 in an SMU (continued)

At the frame:

- 10** Put a sign on the active unit bearing the following words: "Active unit-Do not touch."

At the MAP terminal:

- 11** Busy the inactive unit by typing
>bsy unit unit_no
 and pressing the Enter key.
where
unit_no
 is the number of the inactive SMU unit (0 or 1) containing the faulty BX02 card

- 12** Access the DCH level of the MAP display by typing
>DCH
 and pressing the Enter key.

- 13** Post all DCH cards by typing
>POST ALL
 and pressing the Enter key

- 14** Identify the faulty DCH card by typing
>DISP ALL
 and pressing the Enter key

Example of a MAP response:

```
DCH  8 ISG   4 Cbsy SMU   1 port 17
DCH  9 spare InSv SMU   1 port 19
```

- 15** Post the faulty DCH card by typing
>POST dch_card_state
 and pressing the Enter key.

where

dch_card_state
 is Cbsy, SysB, or ISTb

Example of a MAP display:

```
DCH  8 ISG 1 CBSY SMU 1 PORT 17
```

Note: Record the number of the faulty DCH card for later use in this procedure.

- 16** Identify the DCH load file name by typing
>QUERYPM
 and pressing the Enter key.

NTBX02

in an SMU (continued)

Example of a MAP response:

```
Site Flr RPos Bay_id Shf Description Slot EqPEC
HOST 01 R09 SME 00 32 SMU : 002 02 BX02
Loadnames : DCHINV - SCH36BT : INTL INDEX : 8
```

The DCH load file name in the example is *SCH36BT*. SCH is the load file name prefix for the DCH card. The enhanced DCH (EDCH) load file name prefix is ESH.

- 17 Identify available DCH cards by typing

>DISP ALL

and pressing the Enter key.

Example of a MAP response:

```
DCH 8 ISG 4 CBSy SMU 1 port 17
DCH 9 spare InSv SMU 1 port 19
```

If	Do
spare DCH cards are available	step 18
there are no spare DCH cards	step 30

- 18 Transfer the service group to a spare DCH by typing

SWTCH spare_dch_no

and pressing the Enter key.

where

spare_dch_no

is a number from 0 to 9 of an in-service DCH card that will take over service

Example of a MAP response:

Takeover passed DCH 8 to DCH 9 ISG 4

Note: Record the number of the spare DCH that is taking over service for use later in this procedure.

- 19 Busy the faulty DCH by typing

>BSY

and pressing the Enter key.

NTBX02
in an SMU (continued)

At the shelf

20



WARNING
Static electricity damage
Wear a wrist strap connected to the wrist-strap grounding point of a frame supervisory panel (FSP) or a modular supervisory panel (MSP) while handling circuit cards. This protects the cards against damage caused by static electricity.

Replace the card using the common replacing a card procedure in this document. When you have completed the procedure, return to this point.

Note: If the card you are replacing has switches, ensure that the switches on the replacement card have the same settings.

21 The next action depends on your reason for performing this procedure.

If you were	Do
directed to this procedure from a maintenance procedure	step 22
not directed to this procedure from a maintenance procedure	step 23

22 Return to the maintenance procedure that sent you to this procedure and continue as directed.

At the MAP terminal

23 Load the DCH by typing
>LOADPM
and pressing the Enter key.

If the LOADPM command	Do
failed	step 30
passed	step 24

24 Return the DCH to service by typing
>RTS
and pressing the Enter key.
where
unit_no
is the PM unit number (0 or 1)

NTBX02

in an SMU (continued)

Example of a MAP response:

DCH 8 Out-of-service test initiatedDCH 8 Tst PassedDCH 8 Rts Passed

If the RTS command	Do
failed	step 30
passed	step 25

- 25 Post the DCH card spared in step 18 by typing

>POST dch_card_no

and pressing the Enter key.

where

dch_card_no

is the spare DCH

Example of a MAP display:

DCH 9 ISG 1 InSv SMU 1 PORT 19

- 26 Transfer service back to the DCH card posted in step 15 by typing

>SWTCH spare_dch_no

and pressing the Enter key.

where

spare_dch_no

is the DCH card number from 0 to 9 identified in step 15

Example of a MAP response:

Takeover passed DCH 9 to DCH 8 ISG 4

- 27 Post the new DCH card by typing

>POST dch_card_no

and pressing the Enter key.

where

dch_card_no

is the replacement DCH card

Example of a MAP display:

DCH 8 ISG 1 InSv SMU 1 PORT 17

- 28 Return to the PM level of the MAP display by typing

>QUIT

NTBX02
in an SMU (end)

- and pressing the Enter key.
- 29** Return the inactive unit of the PM to service by typing
RTS UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the SMU unit (0 or 1) busied in step 11
- | If the RTS | Do |
|-------------------|-----------|
| passed | step 31 |
| failed | step 30 |
- 30** For further assistance, contact the personnel responsible for the next level of support.
- 31** You have completed this procedure.

NTBX26 in an RSC LCME

Application

Use this procedure to replace an NTBX26 card in an RSCE LCME.


PEC	Suffixes	Name
NTBX26	AA	ISDN S/T Interface Line card

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

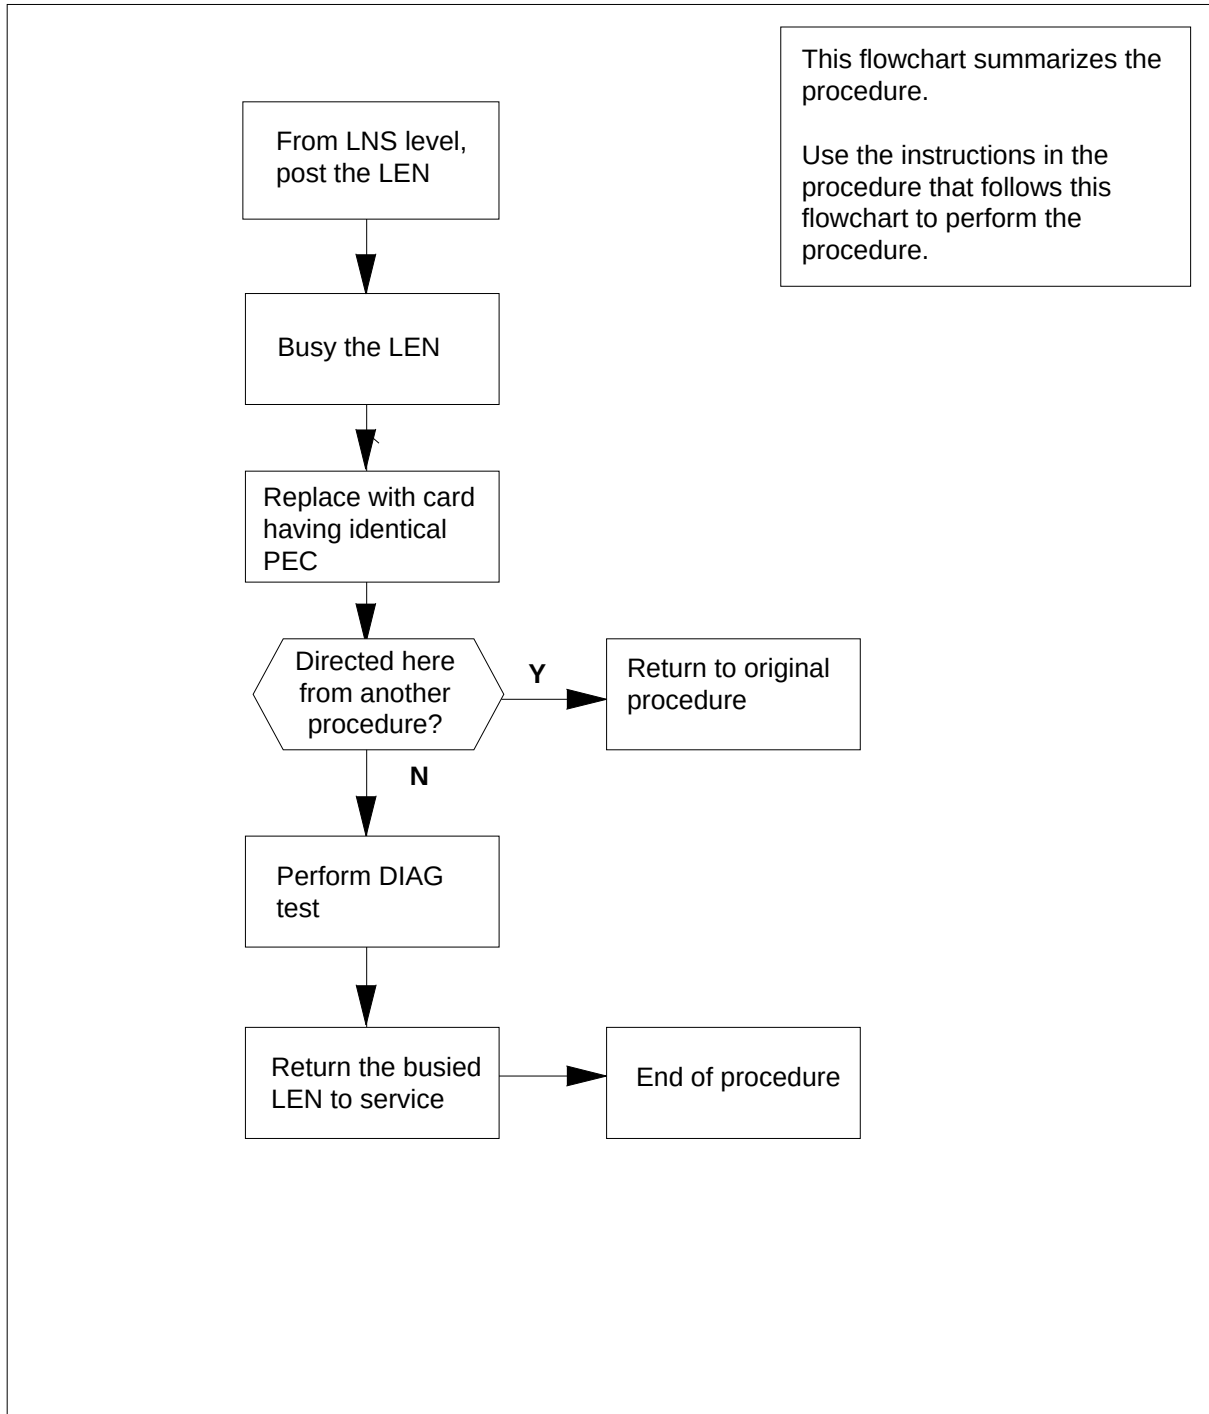NTBX26
in an RSC LCME (continued)**Summary of card replacement procedure for an NTBX26 card in an RSCE LCME**

NTBX26

in an RSC LCME (continued)

Replacing an NTBX26 card in an RSCE LCME

At your current location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX26 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Post the line equipment number (LEN) of the card to be replaced by typing **>MAPCI;MTC;LNS;POST L site lcme_no unit_no lsg_no ckt_no** and pressing the Enter key.

where

site

is the location name of the LCME with the faulty card

lcme_no

is the number of the LCME with the faulty card

unit_no

is the number of the LCME unit with the faulty card

lsg_no

is the number of the LSG with the faulty card

ckt_no

is the number of the circuit associated with the faulty card

Example of a MAP display:

NTBX26 in an RSC LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ		BUSYQ		PREFIX		
2	Post_								
3		LCC	PTY	RNG....LEN.....DN			STA F S LTA TE	RESULT	
4		ISDN	Loop	HOST 00 0 03 03		4931082	IDL		
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

- 4 Busy the NTBX26 line card by typing

>BSY

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ		BUSYQ		PREFIX		
2	Post_								
3		LCC	PTY	RNG....LEN.....DN			STA F S LTA TE	RESULT	
4		ISDN	Loop	HOST 00 0 03 03		4931082	MB		
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

NTBX26 in an RSC LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take these precautions to protect the circuit cards from electrical and mechanical damage while transporting cards.

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wrist strap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom Corporate Standard 5028).

Store and transport circuit cards in an ESD protective container.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



DANGER

Hot materials

Exercise care when handling the line card. The line feed resistor may be very hot.



CAUTION

Special tools required

Card shrouds and removal tools are required for removing cards from the line drawers.

NTBX26 in an RSC LCME (continued)

Put on a wrist strap.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note 1: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards. Descriptions of these shrouds follow.

Note 2: Card removal tools are required for removing cards from line drawers. Two sizes are available. Descriptions of these tools follow.

Card removal tool for	Apparatus code	Common product code
3-4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 6 To prepare to remove the faulty card, open the line drawer and do the following substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1 in).
 - d While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1 cm (.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
 - f Ensure a card shroud and line card extractor are available.
- 7 Remove the line card to be replaced by following these substeps:
 - a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.

NTBX26 in an RSC LCME (continued)

- c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 8 Replace the faulty card by following these substeps:
 - a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 9 Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 15
other	step 10

At the MAP terminal

- 10 Test the NTBX26 line card by typing
>DIAG
and pressing the Enter key.
- 11 Use the following information to determine where to proceed.

If DIAG	Do
passed	step 12
failed	step 15
- 12 Return the NTBX26 card to service by typing
>RTS

NTBX26
in an RSC LCME (end)

and pressing the Enter key.

If RTS	Do
passed	step 13
failed	step 16

- 13** Send any faulty cards for repair according to local procedure.
- 14** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 17.
- 15** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 16** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 17** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX26 in an RSC-S (DS-1) Model A LCME

Application

Use this procedure to replace an NTBX26 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX26	AA	ISDN S/T Interface Line card

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX26 in an RSC-S (DS-1) Model A LCME (continued)

Summary of card replacement procedure for an NTBX26 card in an RSC-S LCME

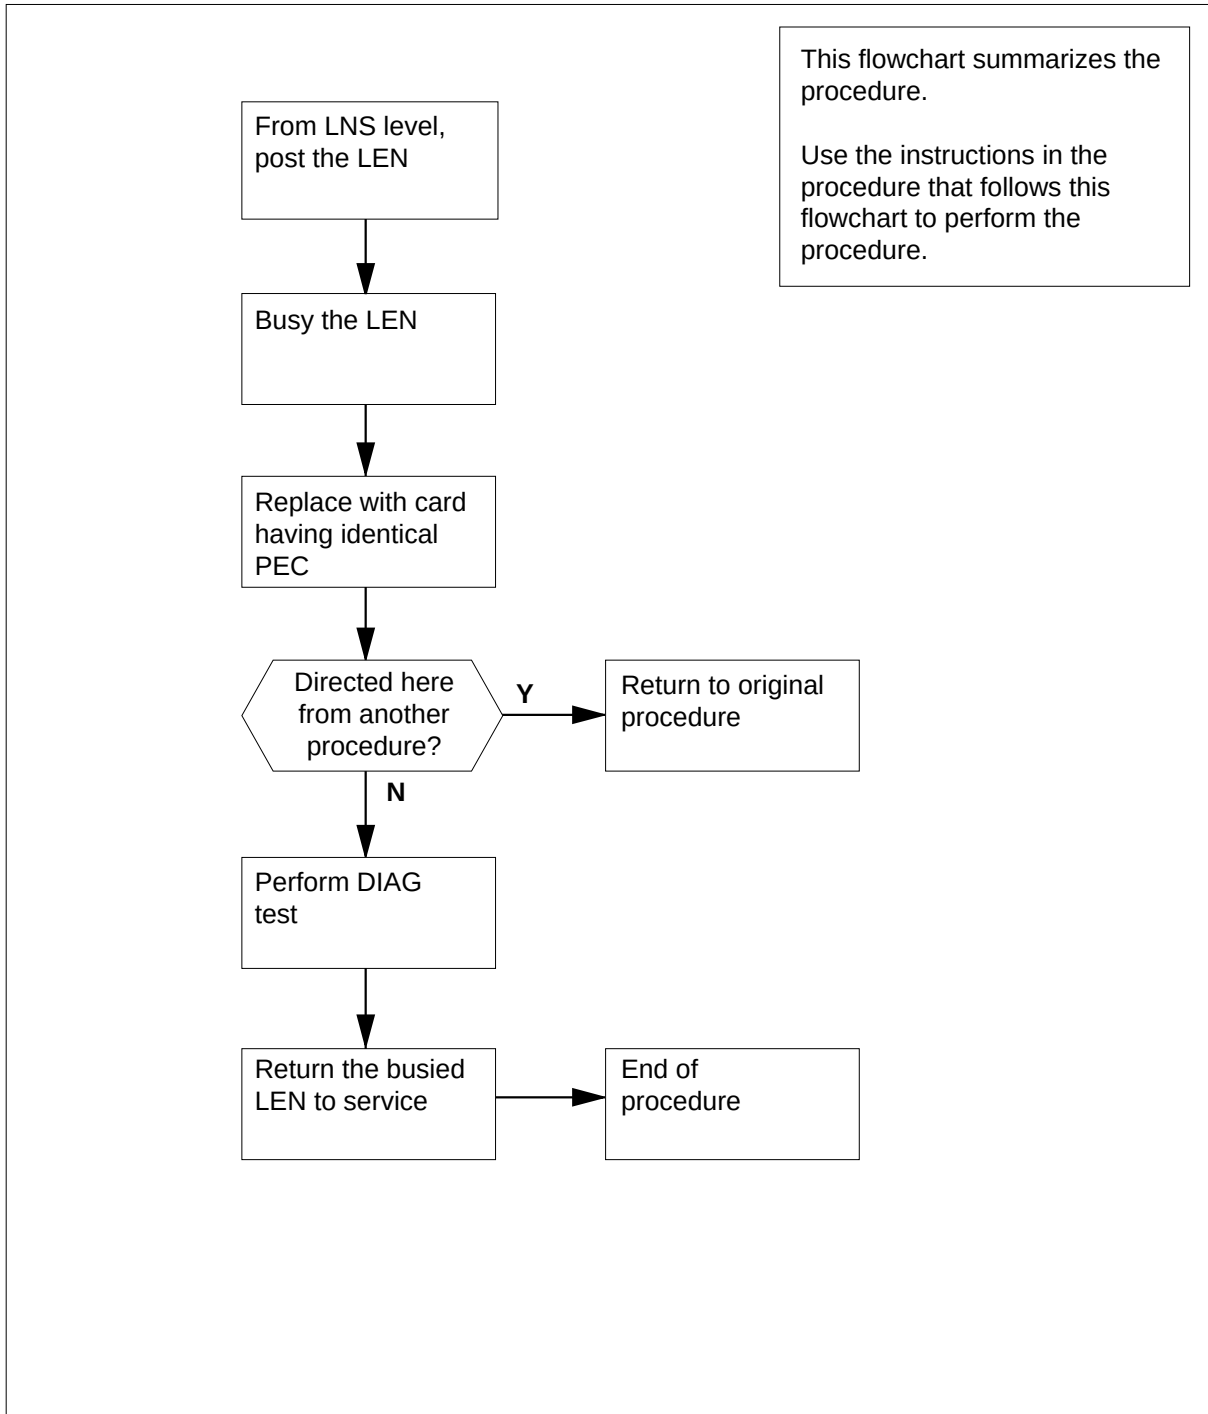

NTBX26

in an RSC-S (DS-1) Model A LCME (continued)

Replacing an NTBX26 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX26 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Post the line equipment number (LEN) of the card to be replaced by typing
**MAPCI;MTC;LNS;LTP;POST L site lcme_no unit_no lsg_no
ckt_no**

and pressing the Enter key.

where

site

is the location name of the LCME with the faulty card

lcme_no

is the number of the LCME with the faulty card

unit_no

is the number of the LCME unit with the faulty card

lsg_no

is the number of the LSG with the faulty card

ckt_no

is the number of the circuit associated with the faulty card

Example of a MAP display:

NTBX26

in an RSC-S (DS-1) Model A LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ	BUSYQ	PREFIX				
2	Post_								
3		LCC	PTY	RNG....LEN.....DN	STA	F	S	LTA	TE RESULT
4		ISDN	Loop	HOST	00	0	03	03	4931082 IDL
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

- 4 Busy the NTBX26 line card by typing

>BSY

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ	BUSYQ	PREFIX				
2	Post_								
3		LCC	PTY	RNG....LEN.....DN	STA	F	S	LTA	TE RESULT
4		ISDN	Loop	HOST	00	0	03	03	4931082 MB
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

NTBX26 in an RSC-S (DS-1) Model A LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take the following precautions to protect circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.



WARNING

Static electricity damage

Before removing any cards, put on a wriststrap and connect it to the wriststrap grounding point on the left side of the frame supervisory panel (FSP) of the LCME. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



DANGER

Hot materials

Exercise care when handling the line card. The line feed resistor may be very hot.

NTBX26

in an RSC-S (DS-1) Model A LCME (continued)

**CAUTION****Special tools required**

Card shrouds and removal tools are required for removing cards from the line drawers. For descriptions of these tools, refer to the following notes.

Put on a wriststrap.

Note: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards, as shown in the following table.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note: Card removal tools are required for removing cards from line drawers. Two sizes are available, as shown in the following table.

Card removal tool for	Apparatus code	Common product code
3—4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 6 To prepare to remove the faulty card, open the line drawer and do the following substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in).
 - d While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1.0 cm (0.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.

NTBX26

in an RSC-S (DS-1) Model A LCME (continued)

- f** Ensure a card shroud and line card extractor are available.
- 7** Remove the line card to be replaced by following these substeps:
- a** Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b** Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
 - c** Squeeze the handles of the extractor together to grasp the card tightly.
 - d** Hold the front cover of the line drawer to steady it using your left hand.
 - e** Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f** Continue pulling the card with the extractor until the card is clear of the shroud.
 - g** Insert the card removed into the ESD container and store using local procedures.
- 8** Replace the faulty card by following these substeps:
- a** Remove the replacement card from the ESD container.
 - b** Slide the card in the shroud guide slots toward the drawer backplane.
 - c** Hold the front cover of the line drawer with your left hand to steady it.
 - d** Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e** Push the card toward the backplane until it plugs fully into the backplane socket.
- 9** Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 15
other	step 10

At the MAP terminal

- 10** Test the NTBX26 line card by typing
>DIAG
and pressing the Enter key.
- 11** Use the following information to determine where to proceed.

If DIAG	Do
passed	step 12
failed	step 15

NTBX26
in an RSC-S (DS-1) Model A LCME (end)

- 12** Return the NTBX26 card to service by typing

>RTS

and pressing the Enter key.

If RTS	Do
passed	step 13
failed	step 16

- 13** Send any faulty cards for repair according to local procedure.

- 14** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 17.

- 15** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.

- 16** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.

- 17** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX26 in an RSC-S (DS-1) Model B LCME

Application

Use this procedure to replace an NTBX26 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX26	AA	ISDN S/T Interface Line card

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX26 in an RSC-S (DS-1) Model B LCME (continued)

Summary of card replacement procedure for an NTBX26 card in an RSC-S LCME

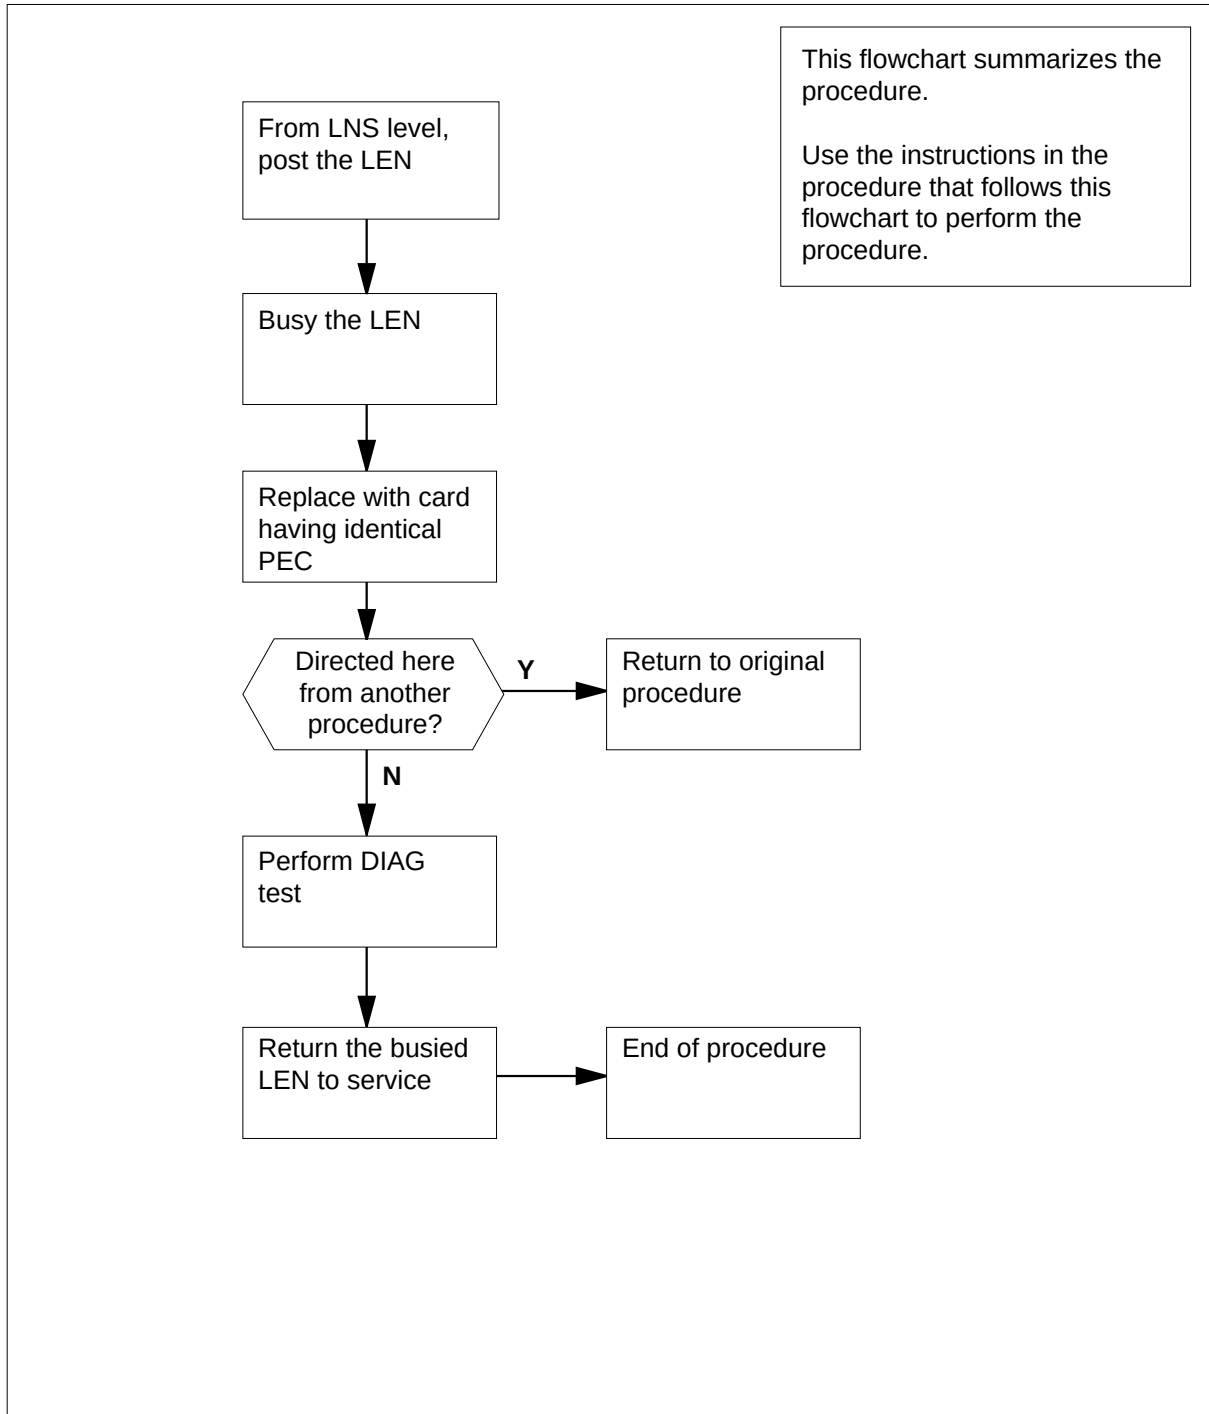

NTBX26

in an RSC-S (DS-1) Model B LCME (continued)

Replacing an NTBX26 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX26 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Post the line equipment number (LEN) of the card to be replaced by typing
**>MAPCI;MTC;LNS;LTP;POST L site lcme_no unit_no lsg_no
ckt_no**

and pressing the Enter key.

where

site

is the location name of the LCME with the faulty card

lcme_no

is the number of the LCME with the faulty card

unit_no

is the number of the LCME unit with the faulty card

lsg_no

is the number of the LSG with the faulty card

ckt_no

is the number of the circuit associated with the faulty card

Example of a MAP display:

NTBX26

in an RSC-S (DS-1) Model B LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ		BUSYQ		PREFIX		
2	Post_								
3		LCC	PTY	RNG....LEN.....DN			STA	F	S
4		ISDN	Loop	HOST 00 0 03 03		4931082	IDL		
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

- 4 Busy the NTBX26 line card by typing

>BSY

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ		BUSYQ		PREFIX		
2	Post_								
3		LCC	PTY	RNG....LEN.....DN			STA	F	S
4		ISDN	Loop	HOST 00 0 03 03		4931082	MB		
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

NTBX26 in an RSC-S (DS-1) Model B LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take the following precautions to protect circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.



WARNING

Static electricity damage

Before removing any cards, put on a wriststrap and connect it to the wriststrap grounding point on the left side of the modular supervisory panel (MSP) of the LCME. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



DANGER

Hot materials

Exercise care when handling the line card. The line feed resistor may be very hot.

NTBX26

in an RSC-S (DS-1) Model B LCME (continued)

**CAUTION****Special tools required**

Card shrouds and removal tools are required for removing cards from the line drawers. For descriptions of these tools, refer to the following notes.

Put on a wriststrap.

Note: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards, as shown in the following table.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note: Card removal tools are required for removing cards from line drawers. Two sizes are available, as shown in the following table.

Card removal tool for	Apparatus code	Common product code
3—4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 6 To prepare to remove the faulty card, open the line drawer and do the following substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in).
 - d While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1.0 cm (0.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.

NTBX26

in an RSC-S (DS-1) Model B LCME (continued)

- f** Ensure a card shroud and line card extractor are available.
- 7** Remove the line card to be replaced by following these substeps:
- a** Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b** Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
 - c** Squeeze the handles of the extractor together to grasp the card tightly.
 - d** Hold the front cover of the line drawer to steady it using your left hand.
 - e** Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f** Continue pulling the card with the extractor until the card is clear of the shroud.
 - g** Insert the card removed into the ESD container and store using local procedures.
- 8** Replace the faulty card by following these substeps:
- a** Remove the replacement card from the ESD container.
 - b** Slide the card in the shroud guide slots toward the drawer backplane.
 - c** Hold the front cover of the line drawer with your left hand to steady it.
 - d** Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e** Push the card toward the backplane until it plugs fully into the backplane socket.
- 9** Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 15
other	step 10

At the MAP terminal

- 10** Test the NTBX26 line card by typing
>DIAG
and pressing the Enter key.
- 11** Use the following information to determine where to proceed.

If DIAG	Do
passed	step 12
failed	step 15

NTBX26
in an RSC-S (DS-1) Model B LCME (end)

- 12** Return the NTBX26 card to service by typing

>RTS

and pressing the Enter key.

If RTS	Do
passed	step 13
failed	step 16

- 13** Send any faulty cards for repair according to local procedure.

- 14** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 17.

- 15** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.

- 16** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.

- 17** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX27 in an RSC LCME

Application

Use this procedure to replace an NTBX27 card in an RSCE LCME.


PEC	Suffixes	Name
NTBX27	AA	ISDN 2B1Q U Interface Line card

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

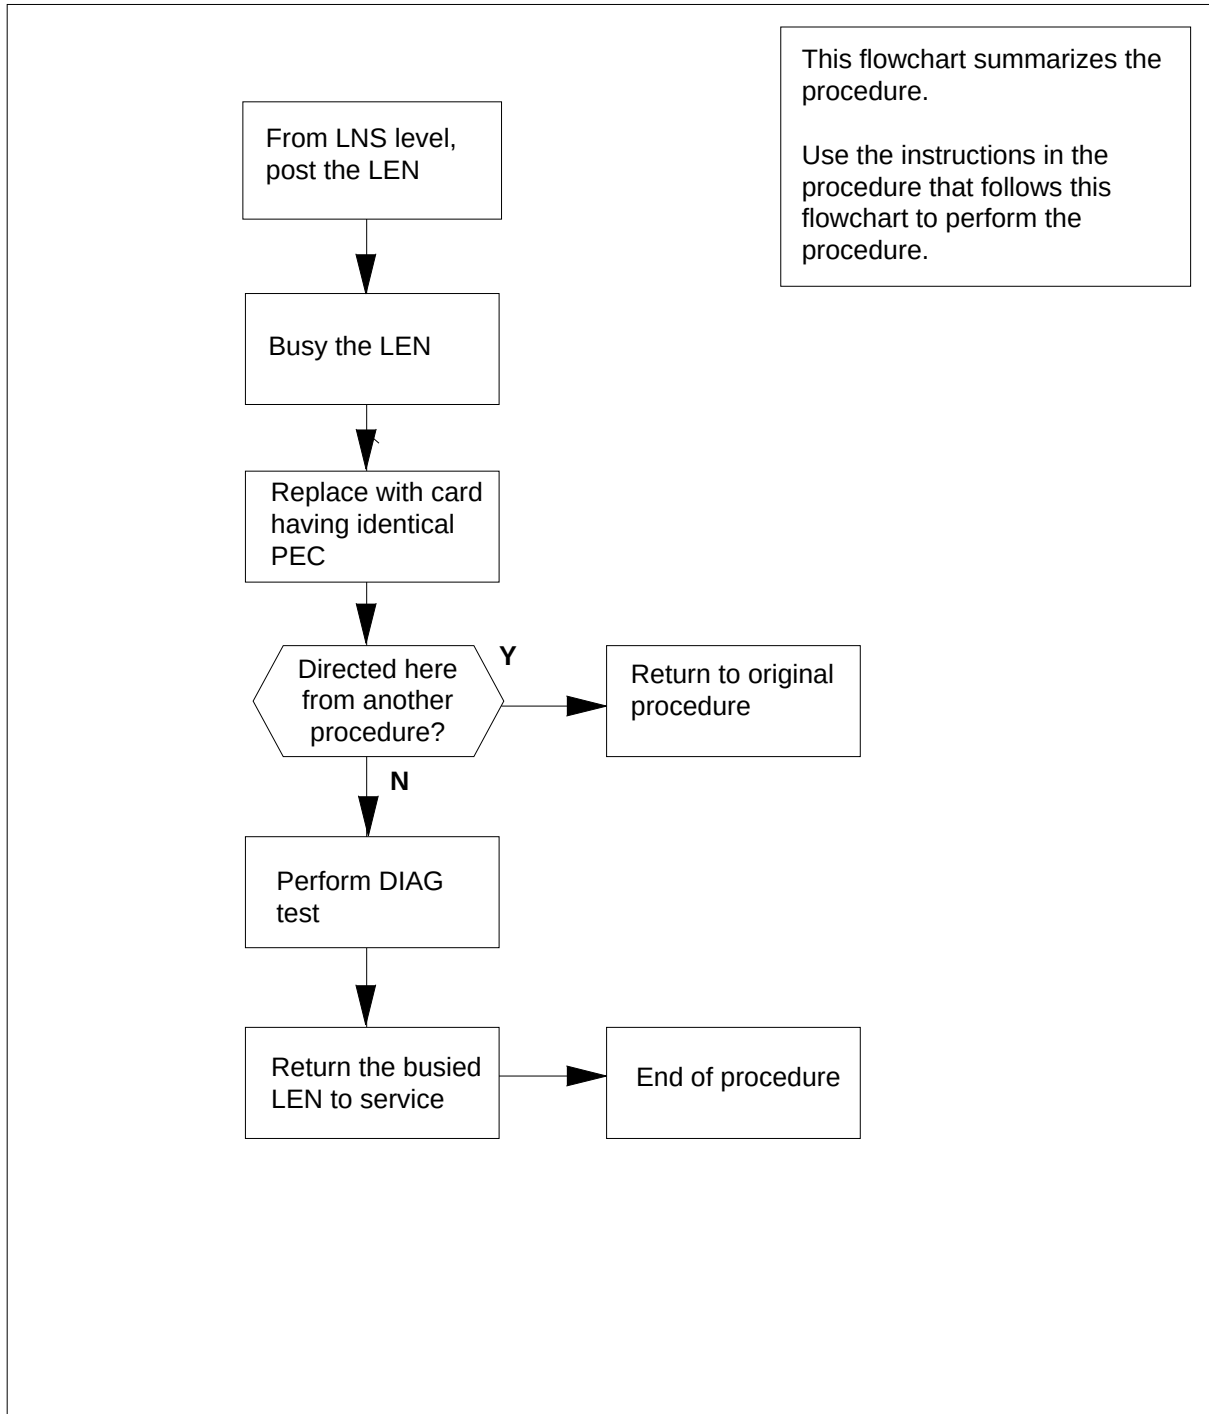NTBX27
in an RSC LCME (continued)**Summary of card replacement procedure for an NTBX27 card in an RSC LCME**

NTBX27

in an RSC LCME (continued)

Replacing an NTBX27 card in an RSCE LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX27 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Post the LEN of the card to be replaced by typing
**>MAPCI;MTC;LNS;LTP;POST L site lcme_no unit_no lsg_no
ckt_no**

and pressing the Enter key.

where

site

is the location name of the LCME with the faulty card

lcme_no

is the number of the LCME with the faulty card

unit_no

is the number of the LCME unit with the faulty card

lsg_no

is the number of the LSG with the faulty card

ckt_no

is the number of the circuit associated with the faulty card

Example of a MAP display:

NTBX27 in an RSC LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ		BUSYQ		PREFIX		
2	Post_								
3		LCC PTY RNG....LEN.....DN					STA F S LTA TE	RESULT	
4		ISDN Loop	HOST 00 0 03 03			4931082	IDL		
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

- 4 Busy the NTBX27 line card by typing

>BSY

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ		BUSYQ		PREFIX		
2	Post_								
3		LCC PTY RNG....LEN.....DN					STA F S LTA TE	RESULT	
4		ISDN Loop	HOST 00 0 03 03			4931082	MB		
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

NTBX27 in an RSC LCME (continued)

At the LCE frame

5



DANGER

Equipment damage

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



WARNING

Card damage—transport

Take these precautions to protect the circuit cards from electrical and mechanical damage while transporting cards.

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wrist strap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom Corporate Standard 5028).

Store and transport circuit cards in an ESD protective container.



DANGER

Hot materials

Exercise care when handling the line card. The line feed resistor may be very hot.



CAUTION

Special tools required

Card shrouds and removal tools are required for removing cards from the line drawers.

NTBX27 in an RSC LCME (continued)

Put on a wrist strap.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note 1: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards. Descriptions of these shrouds follow.

Note 2: Card removal tools are required for removing cards from line drawers. Two sizes are available. Descriptions of these tools follow.

Card removal tool for	Apparatus code	Common product code
3-4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 6 To prepare to remove the faulty card, open the line drawer and follow these substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1 in).
 - d While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1 cm (.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
 - f Ensure a card shroud and line card extractor are available.
- 7 Remove the line card to be replaced by following these substeps:
 - a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.

NTBX27

in an RSC LCME (continued)

- c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 8 Replace the faulty card by following these substeps:
 - a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 9 Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 15
other	step 10

At the MAP terminal

- 10 Test the NTBX27 line card by typing
>DIAG
and pressing the Enter key.
- 11 Use the following information to determine where to proceed.

If DIAG	Do
passed	step 12
failed	step 16
- 12 Return the NTBX27 card to service by typing
>RTS

NTBX27
in an RSC LCME (end)

and pressing the Enter key.

If RTS	Do
passed	step 13
failed	step 16

- 13** Send any faulty cards for repair according to local procedure.
- 14** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 17.
- 15** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 16** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 17** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX27 in an RSC-S (DS-1) Model A LCME

Application

Use this procedure to replace an NTBX27 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX27	AA	ISDN 2B1Q U Interface Line card

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX27 in an RSC-S (DS-1) Model A LCME (continued)

Summary of card replacement procedure for an NTBX27 card in an RSC-S LCME

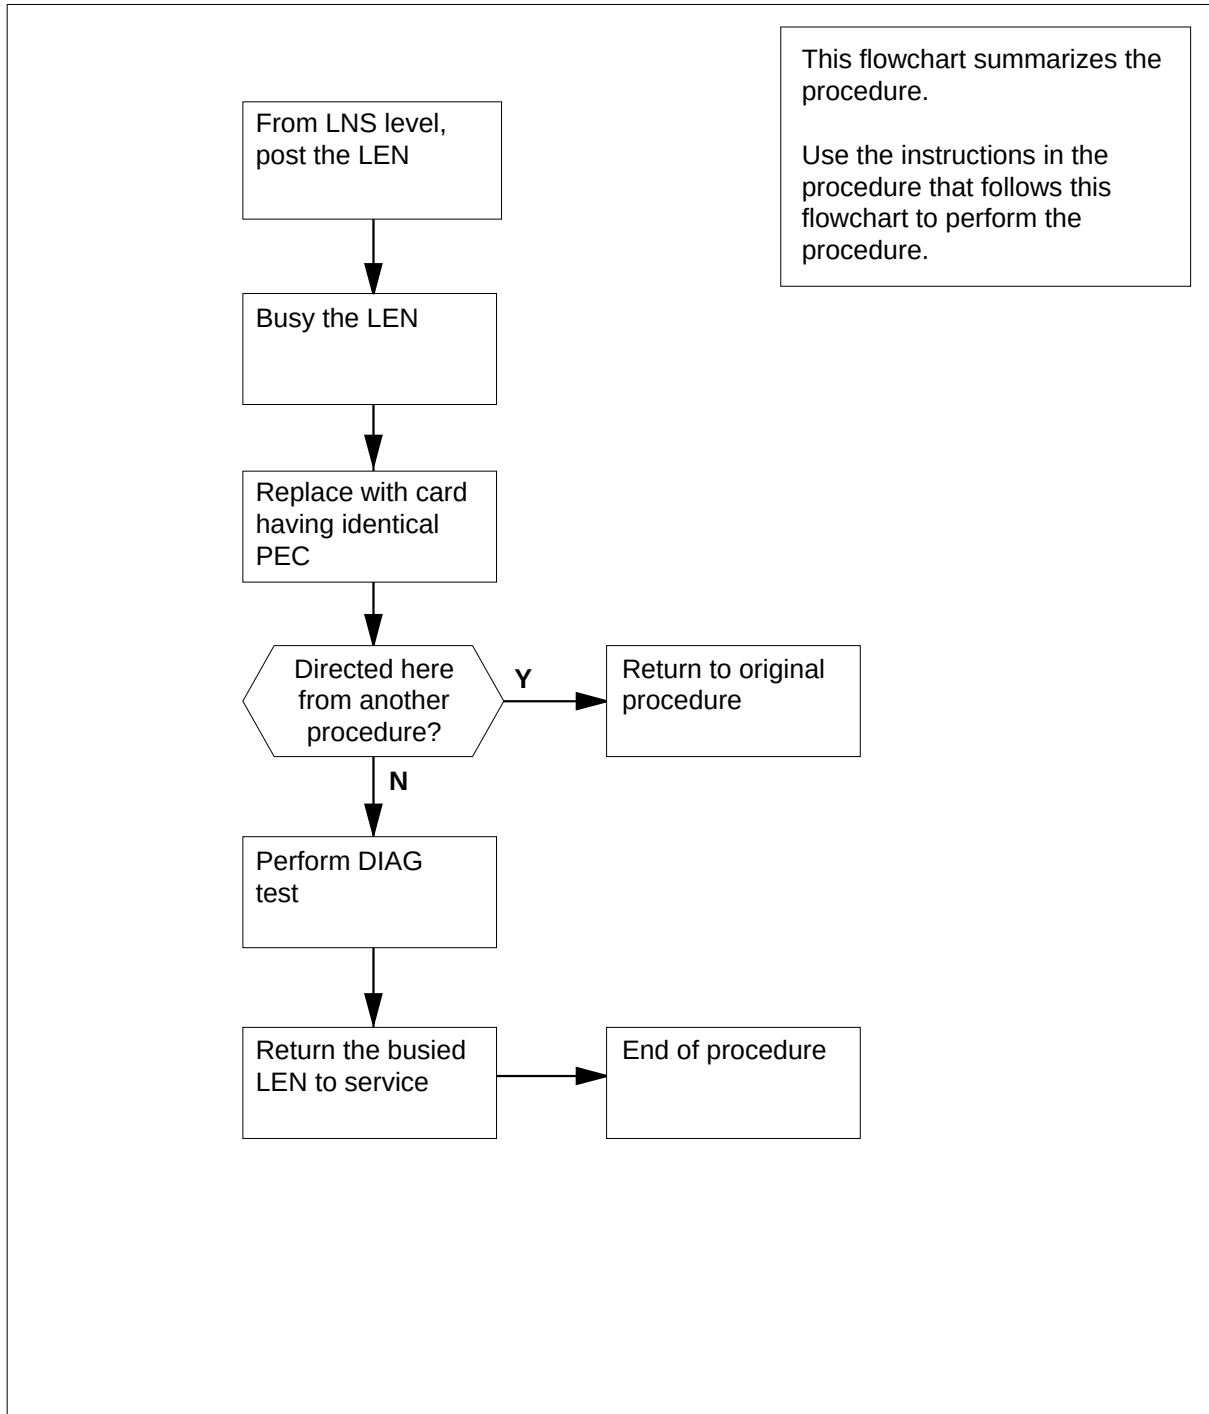

NTBX27

in an RSC-S (DS-1) Model A LCME (continued)

Replacing an NTBX27 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX27 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Post the LEN of the card to be replaced by typing
**>MAPCI;MTC;LNS;LTP;POST L site lcme_no unit_no lsg_no
ckt_no**

and pressing the Enter key.

where

site

is the location name of the LCME with the faulty card

lcme_no

is the number of the LCME with the faulty card

unit_no

is the number of the LCME unit with the faulty card

lsg_no

is the number of the LSG with the faulty card

ckt_no

is the number of the circuit associated with the faulty card

Example of a MAP display:

NTBX27

in an RSC-S (DS-1) Model A LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ	BUSYQ	PREFIX				
2	Post_								
3		LCC PTY RNG....LEN.....DN	STA F S LTA TE RESULT						
4		ISDN Loop	HOST 00 0 03 03	4931082	IDL				
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

- 4 Busy the NTBX27 line card by typing

>BSY

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ	BUSYQ	PREFIX				
2	Post_								
3		LCC PTY RNG....LEN.....DN	STA F S LTA TE RESULT						
4		ISDN Loop	HOST 00 0 03 03	4931082	MB				
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

NTBX27 in an RSC-S (DS-1) Model A LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take the following precautions to protect circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.



WARNING

Static electricity damage

Before removing any cards, put on a wriststrap and connect it to the wriststrap grounding point on the left side of the frame supervisory panel (FSP) of the LCME. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



DANGER

Hot materials

Exercise care when handling the line card. The line feed resistor may be very hot.

NTBX27

in an RSC-S (DS-1) Model A LCME (continued)

**CAUTION****Special tools required**

Card shrouds and removal tools are required for removing cards from the line drawers. For descriptions of these tools, refer to the following notes.

Put on a wriststrap.

Note: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards, as shown in the following table.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note: Card removal tools are required for removing cards from line drawers. Two sizes are available, as shown in the following table.

Card removal tool for	Apparatus code	Common product code
3—4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 6 To prepare to remove the faulty card, open the line drawer and follow these substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in).
 - d While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1.0 cm (0.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.

NTBX27

in an RSC-S (DS-1) Model A LCME (continued)

- f Ensure a card shroud and line card extractor are available.
- 7 Remove the line card to be replaced by following these substeps:
- a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
 - c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 8 Replace the faulty card by following these substeps:
- a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 9 Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 15
other	step 10

At the MAP terminal

- 10 Test the NTBX27 line card by typing
>DIAG
and pressing the Enter key.
- 11 Use the following information to determine where to proceed.

If DIAG	Do
passed	step 12
failed	step 16

NTBX27
in an RSC-S (DS-1) Model A LCME (end)

- 12** Return the NTBX27 card to service by typing
>RTS
and pressing the Enter key.
- | If RTS | Do |
|---------------|-----------|
| passed | step 13 |
| failed | step 16 |
- 13** Send any faulty cards for repair according to local procedure.
- 14** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 17.
- 15** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 16** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 17** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX27 in an RSC-S (DS-1) Model B LCME

Application

Use this procedure to replace an NTBX27 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX27	AA	ISDN 2B1Q U Interface Line card

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX27 in an RSC-S (DS-1) Model B LCME (continued)

Summary of card replacement procedure for an NTBX27 card in an RSC-S LCME

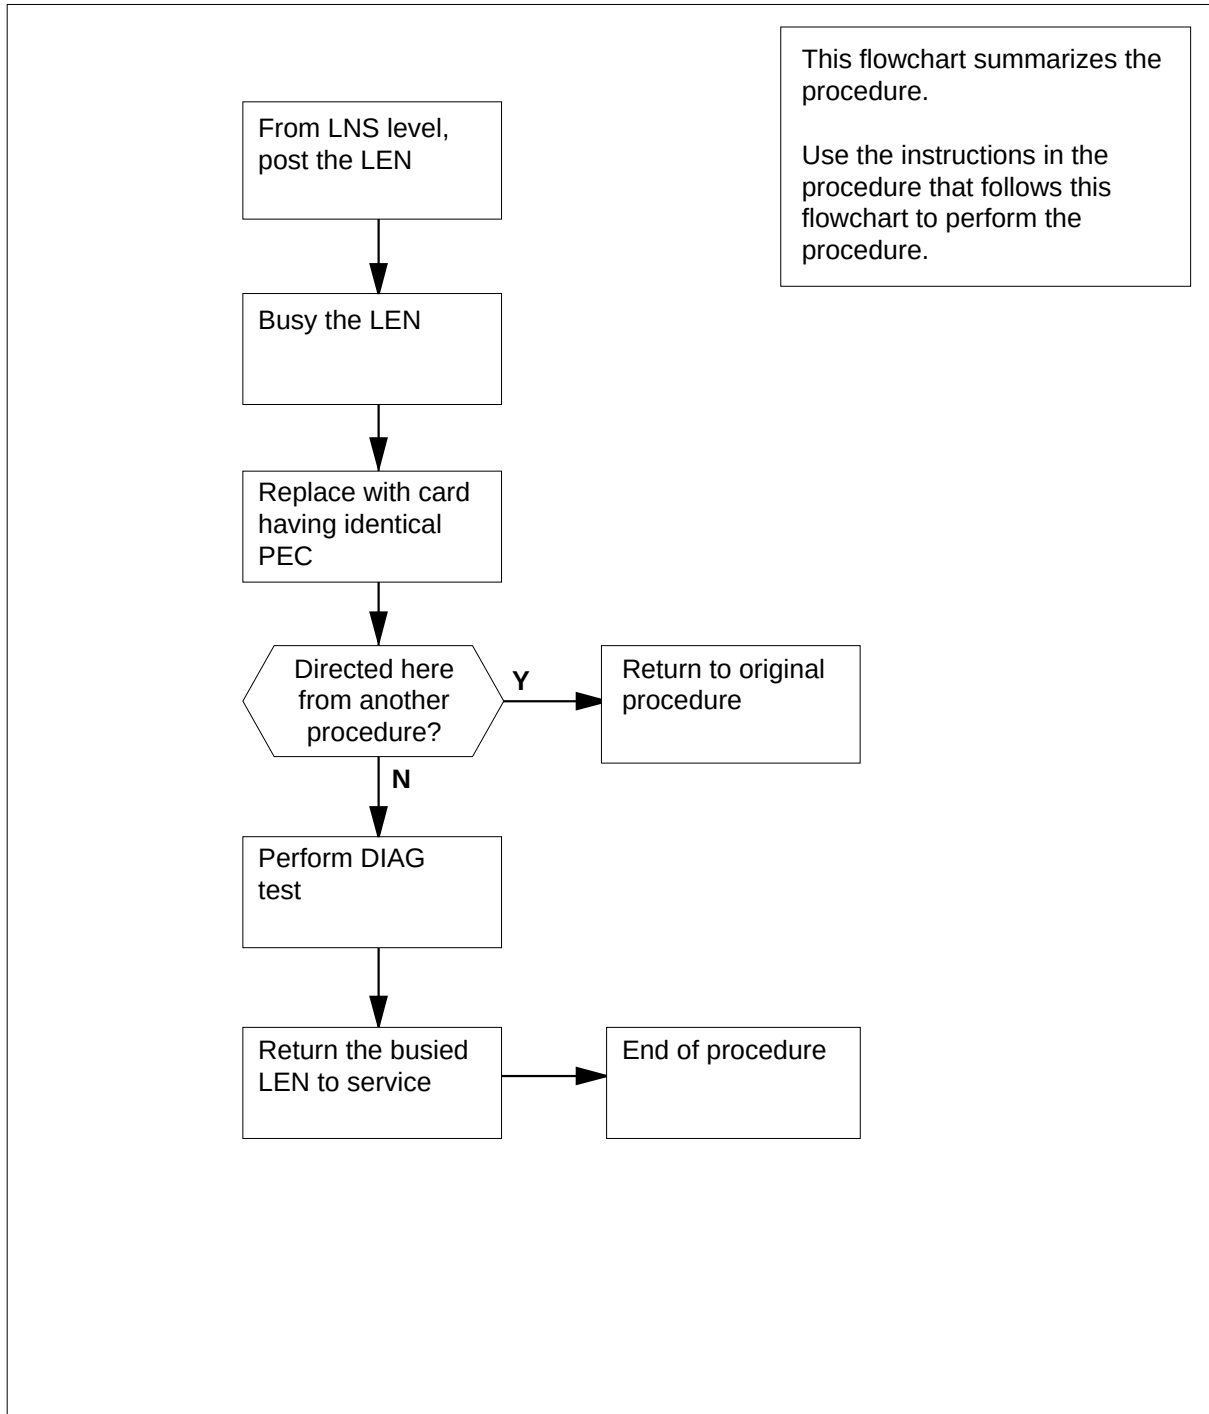

NTBX27

in an RSC-S (DS-1) Model B LCME (continued)

Replacing an NTBX27 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX27 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Post the LEN of the card to be replaced by typing
**>MAPCI;MTC;LNS;LTP;POST L site lcme_no unit_no lsg_no
ckt_no**

and pressing the Enter key.

where

site

is the location name of the LCME with the faulty card

lcme_no

is the number of the LCME with the faulty card

unit_no

is the number of the LCME unit with the faulty card

lsg_no

is the number of the LSG with the faulty card

ckt_no

is the number of the circuit associated with the faulty card

Example of a MAP display:

NTBX27

in an RSC-S (DS-1) Model B LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ	BUSYQ	PREFIX				
2	Post_								
3		LCC	PTY	RNG....LEN.....DN	STA	F	S	LTA	TE RESULT
4		ISDN	Loop	HOST	00	0	03	03	4931082 IDL
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

- 4 Busy the NTBX27 line card by typing

>BSY

and pressing the Enter key.

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LTP									
0	Quit	Post	DELQ	BUSYQ	PREFIX				
2	Post_								
3		LCC	PTY	RNG....LEN.....DN	STA	F	S	LTA	TE RESULT
4		ISDN	Loop	HOST	00	0	03	03	4931082 MB
5	BSY								
6	RTS								
7	DIAG								
8									
9	AIMStat								
10	CKTLOC								
11	Hold								
12	Next_								
13									
14									
15									
16	Prefix								
17	LCO								
18	Level								

NTBX27 in an RSC-S (DS-1) Model B LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take the following precautions to protect circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.



WARNING

Static electricity damage

Before removing any cards, put on a wriststrap and connect it to the wriststrap grounding point on the left side of the modular supervisory panel (MSP) of the LCME. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



DANGER

Hot materials

Exercise care when handling the line card. The line feed resistor may be very hot.

NTBX27

in an RSC-S (DS-1) Model B LCME (continued)

**CAUTION****Special tools required**

Card shrouds and removal tools are required for removing cards from the line drawers. For descriptions of these tools, refer to the following notes.

Put on a wriststrap.

Note: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards, as shown in the following table.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note: Card removal tools are required for removing cards from line drawers. Two sizes are available, as shown in the following table.

Card removal tool for	Apparatus code	Common product code
3—4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 6 To prepare to remove the faulty card, open the line drawer and follow these substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in).
 - d While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1.0 cm (0.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.

NTBX27

in an RSC-S (DS-1) Model B LCME (continued)

- f Ensure a card shroud and line card extractor are available.
- 7 Remove the line card to be replaced by following these substeps:
- a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
 - c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 8 Replace the faulty card by following these substeps:
- a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 9 Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 15
other	step 10

At the MAP terminal

- 10 Test the NTBX27 line card by typing
>DIAG
and pressing the Enter key.
- 11 Use the following information to determine where to proceed.

If DIAG	Do
passed	step 12
failed	step 16

NTBX27
in an RSC-S (DS-1) Model B LCME (end)

- 12** Return the NTBX27 card to service by typing

>RTS

and pressing the Enter key.

If RTS	Do
passed	step 13
failed	step 16

- 13** Send any faulty cards for repair according to local procedure.

- 14** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 17.

- 15** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.

- 16** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.

- 17** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX27 in a STAR or RLD

Application

Use this procedure to replace an NTBX27 card in a STAR or remote line drawer (RLD).

PEC	Suffixes	Name
NTBX27	AA	ISDN 2B1Q U Interface Line card

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTBX27 in a STAR or RLD (continued)

Summary of card replacement procedure for an NTBX27 card in a STAR or RLD

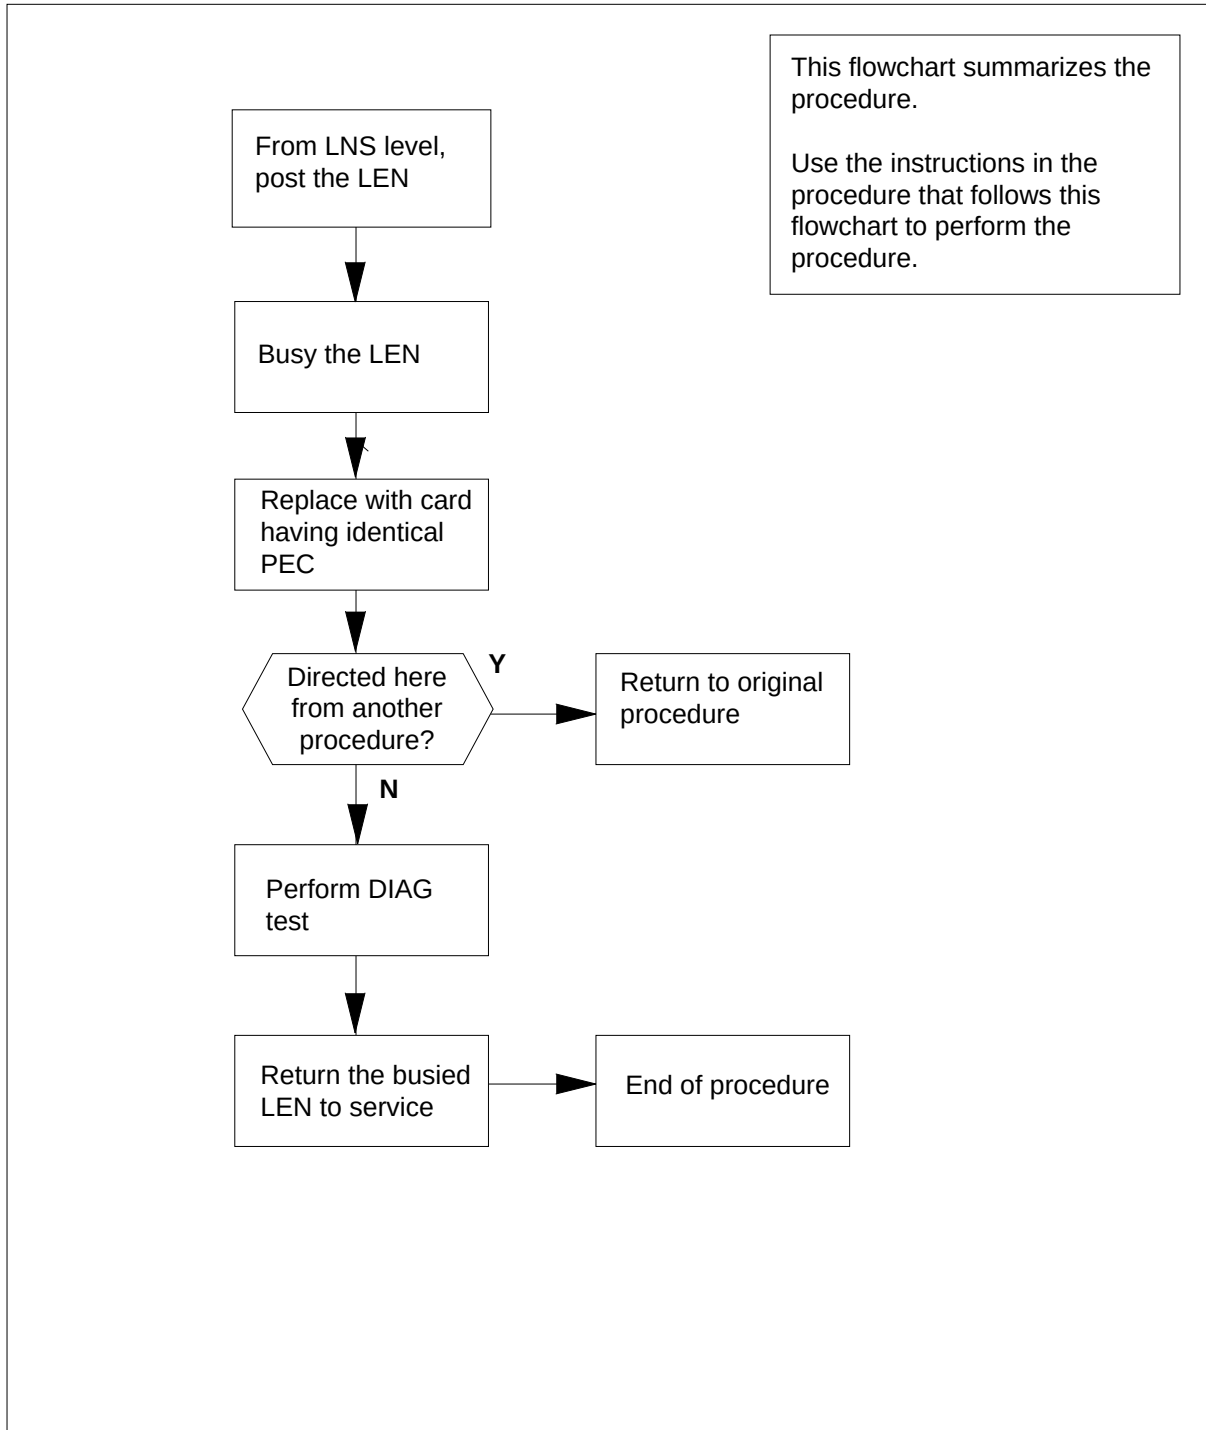

NTBX27 in a STAR or RLD (continued)

Replacing an NTBX27 card in a STAR or RLD

At your current location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Get a replacement card. Make sure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 To post the LEN of the card to be replaced, type
>mapci;mtc;lns;ltp;post l site frame unit lsg ckt
and press the Enter key.

where

site

is the name of the site where the STAR is located

frame

is the frame number of the STAR with the faulty card (0 to 511)

unit

is 0 for the STAR

lsg

is the number of the line subgroup with the faulty card (0 to 35)

ckt

is the number of the circuit associated with the faulty card (0 to 31)

Example of a MAP display:

Post	DELQ	BUSYQ	PREFIX
LCC PTY RNG.....LEN.....DN			STA F S LTA TE RESULT
ISDN Loop	HOST 00 0 03 03	4931082	IDL

- 4 To busy the NTBX27 line card, type
>BSY
and press the Enter key.

Example of a MAP display:

Post	DELQ	BUSYQ	PREFIX
LCC PTY RNG.....LEN.....DN			STA F S LTA TE RESULT
ISDN Loop	HOST 00 0 03 03	4931082	MB

NTBX27
in a STAR or RLD (continued)*At the SRHE frame*

5

**DANGER****Equipment damage**

Take these precautions when removing or inserting a card.

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

**DANGER****Card damage—transport**

Take these precautions to protect the circuit cards from electrical and mechanical damage while transporting cards.

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wrist strap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Nortel Networks Corporate Standard 5028).

Store and transport circuit cards in an ESD protective container.

**DANGER****Hot materials**

Exercise care when handling the line card. The line feed resistor may be very hot.

**CAUTION****Special tools required**

Card shrouds and removal tools are required for removing cards from the line drawers.

NTBX27

in a STAR or RLD (continued)

Put on a wrist strap.

Note: A card shroud is required for inserting or removing cards in line drawers. A description of this shroud follows.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291

Note: A card removal tool is required for removing cards from line drawers. A descriptions of this tool follows.

Card removal tool for	Apparatus code	Common product code
3-4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 6 To prepare to remove the faulty card, open the line drawer and follow these substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1 in).
 - d While holding the drawer in this position, push the bottom of the drawer nearest the shelf, with your left hand, to a position about 1 cm (.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
 - f Make sure a card shroud and line card extractor are available.
- 7 To remove the line card to be replaced, follow these substeps:
 - a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
 - c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer, to steady it, using your left hand.
 - e Pull the extractor away from the drawer and the card will become unplugged from its socket on the drawer backplane.

NTBX27 in a STAR or RLD (continued)

- f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 8 To replace the card with faults, follow these substeps:
 - a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 9 Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 15
other	step 10

At the MAP terminal

- 10 To test the NTBX27 line card, type
>DIAG
and press the Enter key.
- 11 Use the following information to determine how to proceed.

If DIAG	Do
passes	step 12
fails	step 16
- 12 To return the NTBX27 card to service, type
>RTS
and press the Enter key.

If RTS	Do
passes	step 13
fails	step 16
- 13 Send any faulty cards for repair according to local procedure.

NTBX27

in a STAR or RLD (end)

- 14** Record the following items in office records:
 - date the card was replaced
 - serial number of the card
 - indications that prompted replacement of the cardGo to step 17.
- 15** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 16** Get additional help replacing this card by contacting personnel responsible for a higher level of support.
- 17** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

**NTBX34
in an RSC LCME**

Application

Use this procedure to replace an NTBX34 card in RSCE LCME.

PEC	Suffixes	Name
NTBX34	BA	ISDN Enhanced LCM Processor

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTBX34 in an RSC LCME (continued)

Summary of card replacement procedure for an NTBX34 card in an RSC LCME

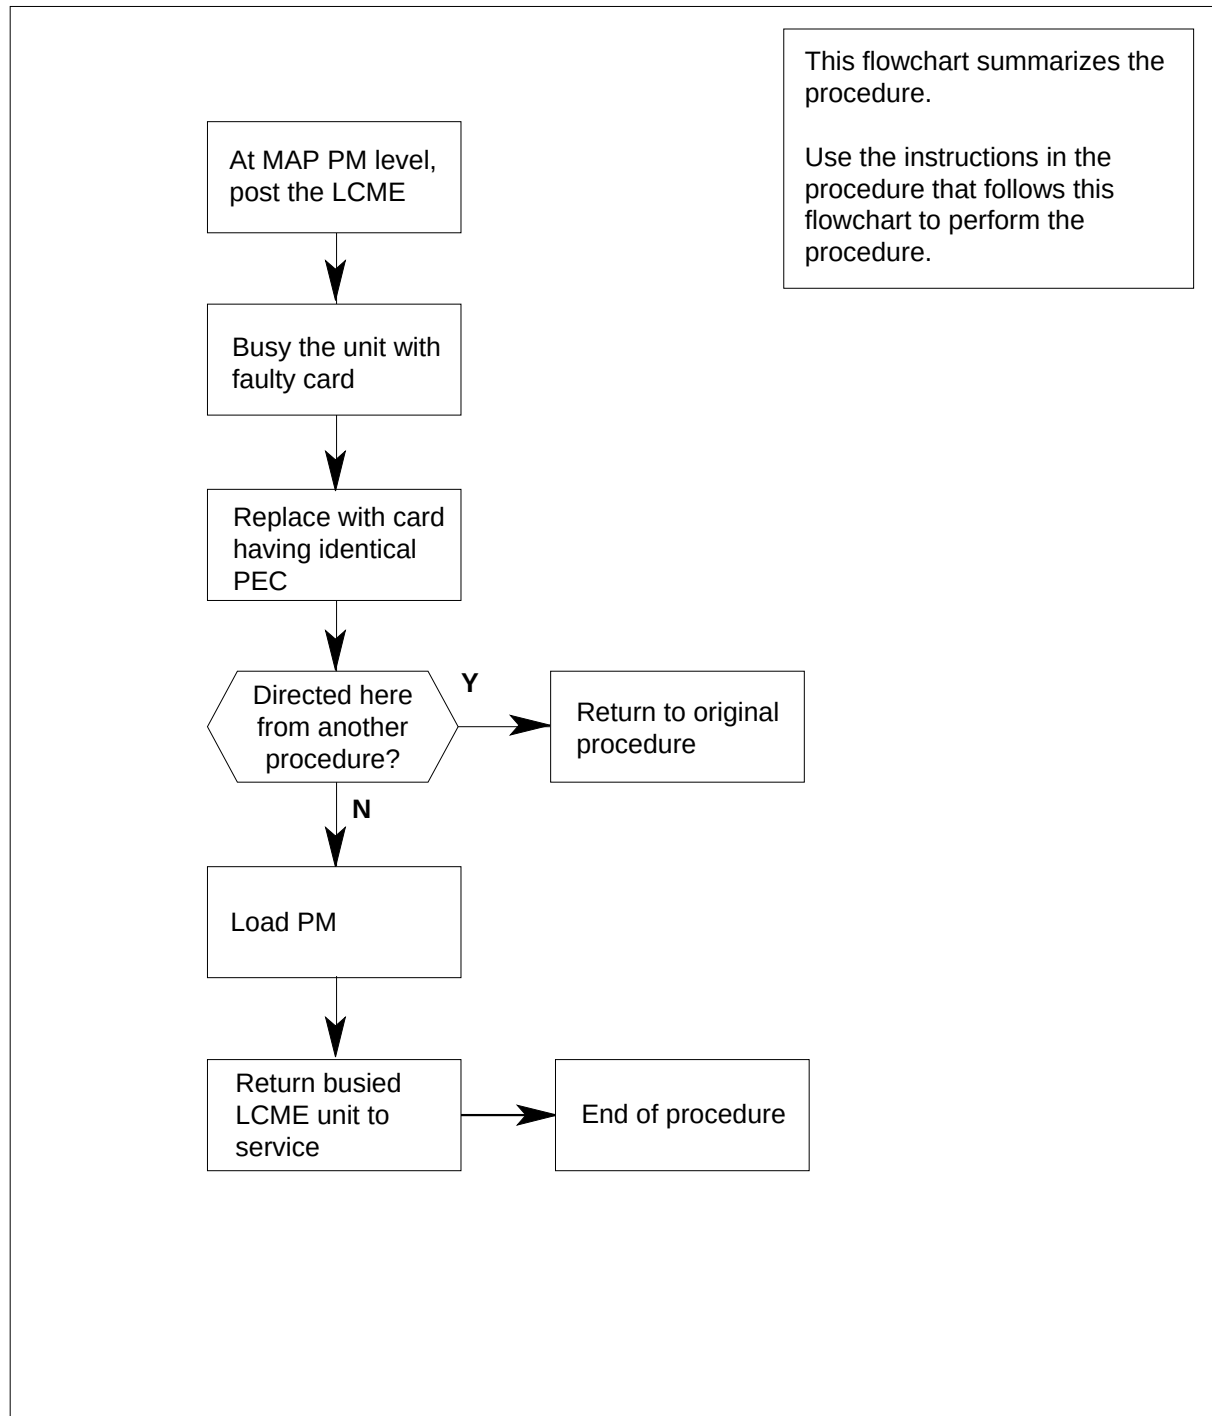

NTBX34 in an RSC LCME (continued)

Replacing an NTBX34 card in an RSC-S LCME

At your current location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Obtain an NTBX34 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.
- 3 Set the MAP display to the PM level and post the LCME by typing
>MAPCI;MTC;PM;POST LCME site frame_no lcme_no
 and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame at which the LCME is located

lcme_no

is the number of the LCME with the faulty card

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	130	
2 Post_	LCME		0	0	0	0	0	0	
3									
4 Swrg_		LCME	RemL	00 0	Links_00S:	CSide	0		
5 TrnsL_		Unit-0:	InSv		/RG:	0			
6 Tst_		Unit-1:	InSv		/RG:	0			
7 Bsy_		RG: Preferred	0:	InSv	Standby1:	InSv			
8 RTS_									
9 OffL_									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX34
in an RSC LCME (continued)

- 4 Busy the LCME unit by typing
>BSY UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the LCME unit with the faulty card
Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	130	
2 Post_	LCME		0	1	0	0	0	0	
3									
4 Swrg_	LCME	RemL	00 0	Links_00S:	CSide	0			
5 Trnsl_	Unit-0:	InSv	Mtce	Takeover	/RG:	0			
6 Tst_	Unit-1:	ManB	Mtce		/RG:	0			
7 Bsy_	RG: Preferred	0:	InSv	Standby1:	InSv				
8 RTS_									
9 OffL_									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX34
in an RSC LCME (continued)**At the LCE frame****5****DANGER****Equipment damage**

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

**WARNING****Card damage—transport**

Take these precautions to protect the circuit cards from electrical and mechanical damage while transporting cards.

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wrist strap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom Corporate Standard 5028).


Store and transport circuit cards in an ESD protective container.

Put on a wrist strap.

6

Remove the NTBX34 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

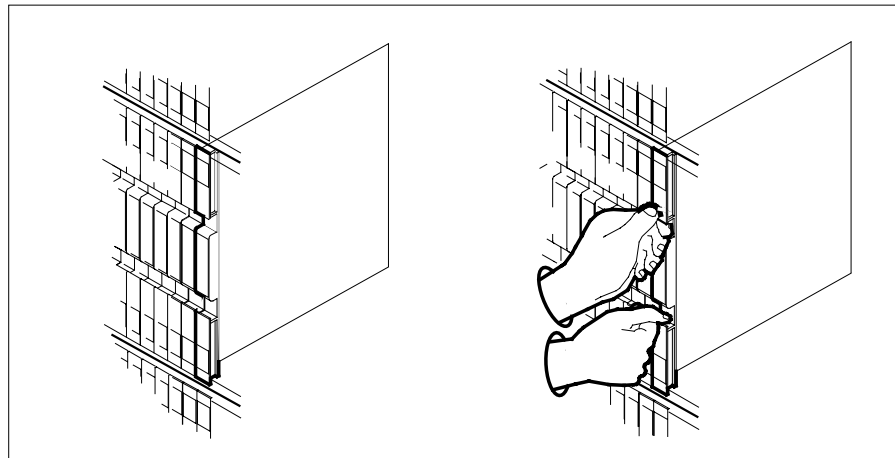


-

-

- 297-8001-547 Standard 14.02 May 2001

NTBX34
in an RSC LCME (continued)

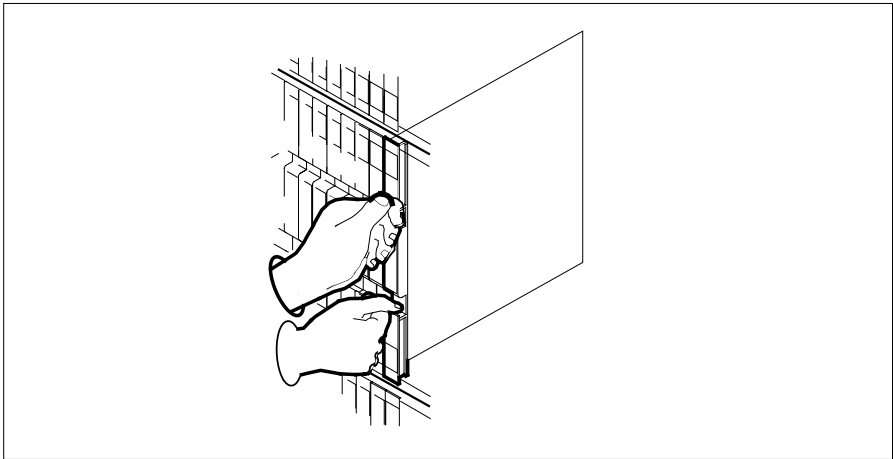

At the MAP terminal

- 9** Load the LCME unit by typing
>loadpm unit unit_no CC
and pressing the Enter key.
where

unit_no
is the number of the LCME unit busied in step 4

- 10** Use the following information to determine where to proceed.

If load	Do
passed	step 11
failed	step 17

- 11** Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 16
other	step 12

- 12** Return the LCME unit to service by typing
>RTS UNIT lcme_unit_no
and pressing the Enter key.
where

NTBX34

in an RSC LCME (end)

lcme_unit_no

is the number of the LCME unit busied in step 4

- 13** Use the following information to determine where to proceed.

If RTS	Do
passed	step 14
failed	step 17

- 14** Send any faulty cards for repair according to local procedure.
- 15** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 18.
- 16** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 17** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 18** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX34

in an RSC-S (DS-1) Model A LCME

Application

Use this procedure to replace an NTBX34 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX34	BA	ISDN Enhanced LCM Processor

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX34 in an RSC-S (DS-1) Model A LCME (continued)

Summary of card replacement procedure for an NTBX34 card in an RSC-S LCME

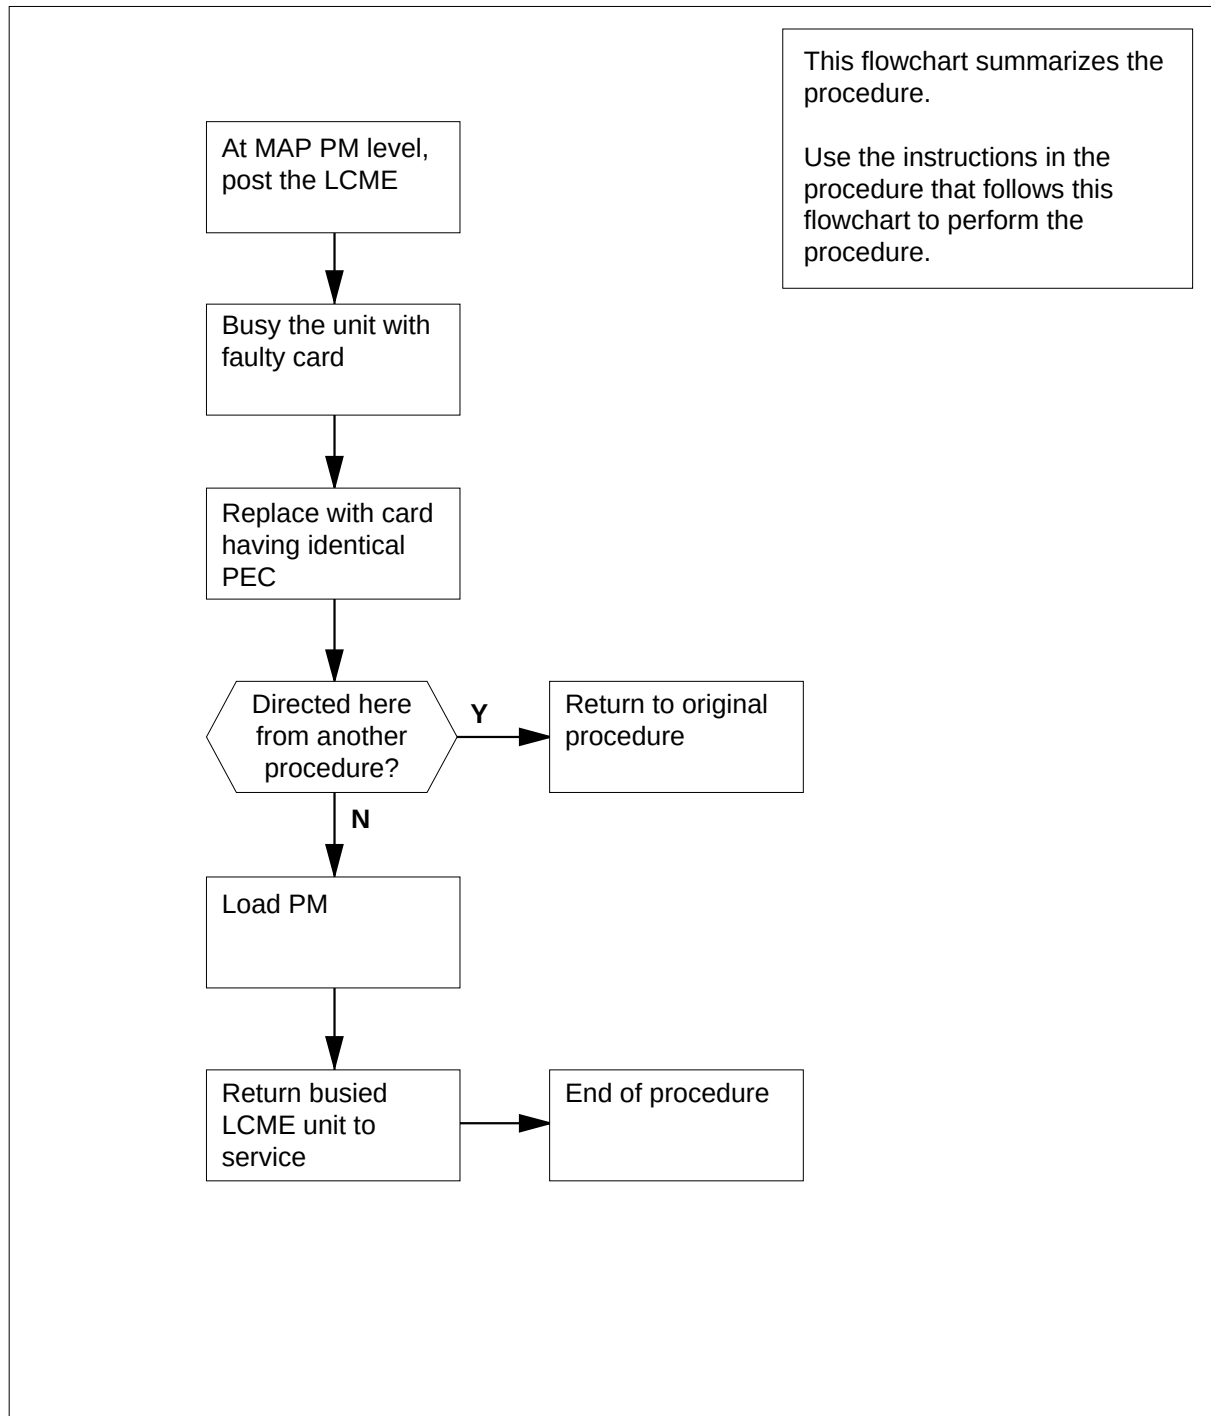

NTBX34 **in an RSC-S (DS-1) Model A LCME** (continued)

Replacing an NTBX34 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX34 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Set the MAP display to the PM level and post the LCME by typing
>MAPCI;MTC;PM;POST LCME site frame_no lcme_no
and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame at which the LCME is located

lcme_no

is the number of the LCME with the faulty card

Example of a MAP display:

NTBX34
in an RSC-S (DS-1) Model A LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	0	130
2 Post_	LCME		0	0	0	0	0	0	0
3									
4 Swrg_		LCME	RemL	00 0	Links_00S:	CSide	0		
5 TrnsL_		Unit-0:	InSv		/RG:	0			
6 Tst_		Unit-1:	InSv		/RG:	0			
7 Bsy_		RG: Preferred	0:	InSv	Standby1:	InSv			
8 RTS_									
9 OffL_									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 Busy the LCME unit by typing
>BSY UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the LCME unit with the faulty card
Example of a MAP display:

NTBX34
in an RSC-S (DS-1) Model A LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	0	130
2 Post_	LCME		0	1	0	0	0	0	0
3									
4 Swrg_		LCME	RemL	00 0	Links_00S:	CSide	0		
5 TrnsL_		Unit-0:	InSv	Mtce	Takeover	/RG:	0		
6 Tst_		Unit-1:	ManB	Mtce		/RG:	0		
7 Bsy_		RG: Preferred	0:	InSv	Standby1:	InSv			
8 RTS_									
9 OffL_									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX34 in an RSC-S (DS-1) Model A LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take the following precautions to protect circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.



WARNING

Static electricity damage

Before removing any cards, put on a wriststrap and connect it to the wriststrap grounding point on the left side of the frame supervisory panel (FSP) of the LCME. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.


Put on a wriststrap.

6


Remove the NTBX34 card as shown in the following figures.

- a Locate the card to be removed on the appropriate shelf.

NTBX34
in an RSC-S (DS-1) Model A LCME (continued)

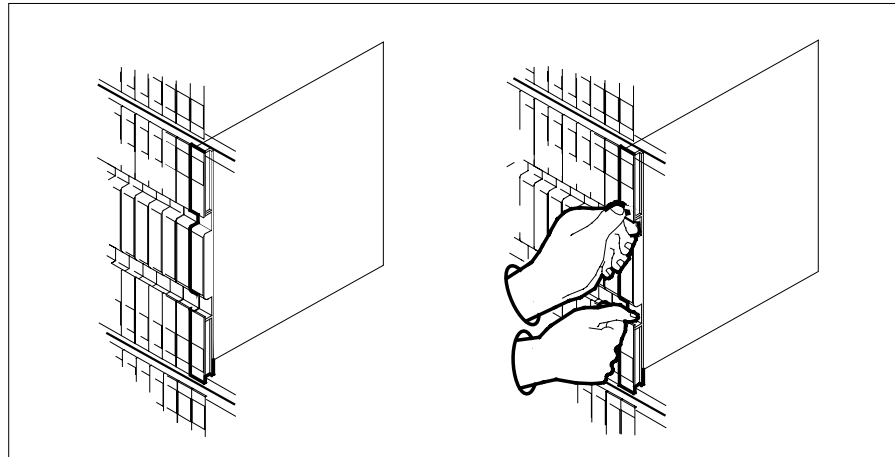

- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

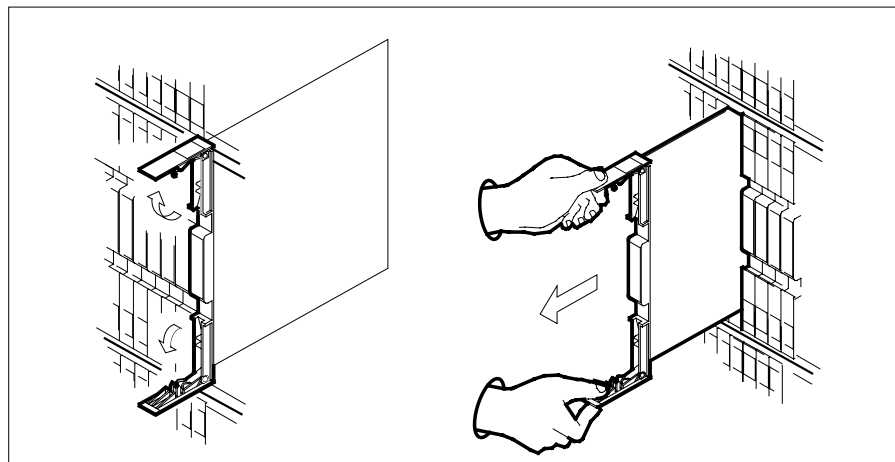


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.


7 Open the locking levers on the replacement card.

- a** Align the card with the slots in the shelf.
b Gently slide the card into the shelf.

NTBX34 in an RSC-S (DS-1) Model A LCME (continued)

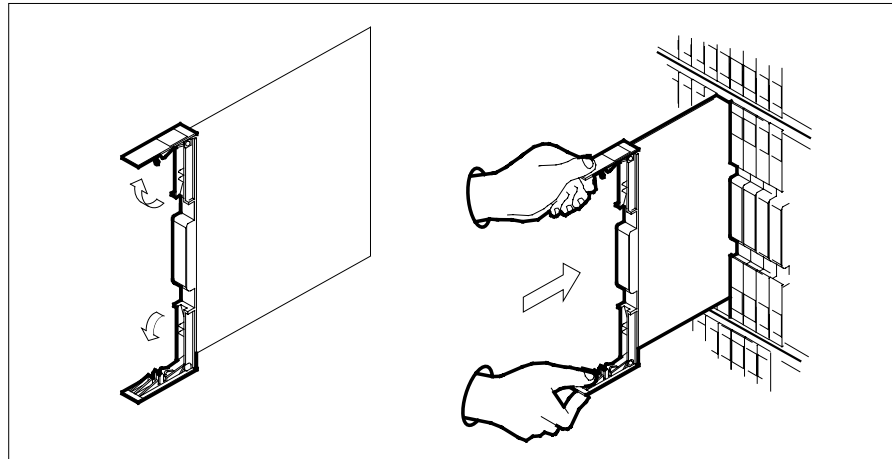

- 8 Seat and lock the card.
- Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - Close the locking levers.

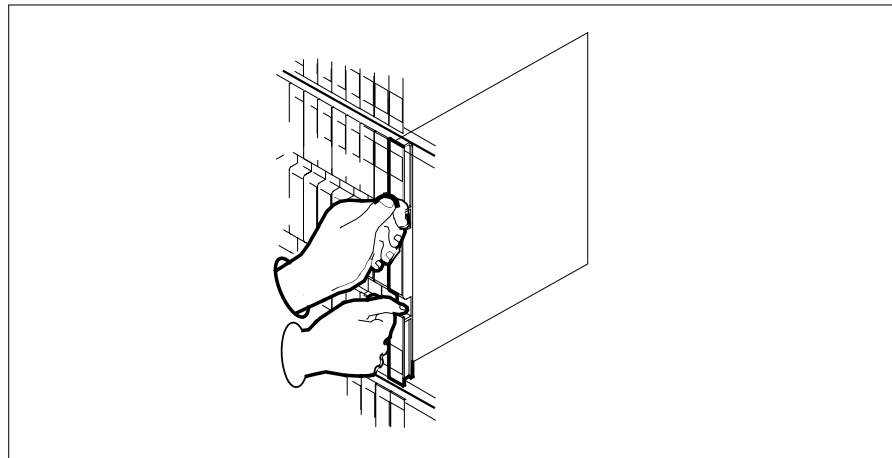

At the MAP terminal

- 9 Load the LCME unit by typing
`>loadpm unit unit_no CC`
and pressing the Enter key.
where
unit_no
is the number of the LCME unit busied in step 4

NTBX34

in an RSC-S (DS-1) Model A LCME (continued)

- 10** Use the following information to determine where to proceed.

If load	Do
passed	step 11
failed	step 19

- 11** Test the LCME unit by typing
>TST UNIT unit_no
 and pressing the Enter key.
where

unit_no
 is the number of the LCME unit loaded in step 9

- 12** Use the following information to determine where to proceed.

If TST	Do
passed	step 13
failed	step 18

- 13** Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 18
other	step 14

- 14** Return the LCME unit to service by typing
>RTS UNIT lcme_unit_no
 and pressing the Enter key.
where

lcme_unit_no
 is the number of the LCME unit tested in step 12

- 15** Use the following information to determine where to proceed.

If RTS	Do
passed	step 16
failed	step 19

- 16** Send any faulty cards for repair according to local procedure.

NTBX34
in an RSC-S (DS-1) Model A LCME (end)

- 17 Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 20.
- 18 Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 19 Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 20 You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX34

in an RSC-S (DS-1) Model B LCME

Application

Use this procedure to replace an NTBX34 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX34	BA	ISDN Enhanced LCM Processor

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX34 in an RSC-S (DS-1) Model B LCME (continued)

Summary of card replacement procedure for an NTBX34 card in an RSC-S LCME

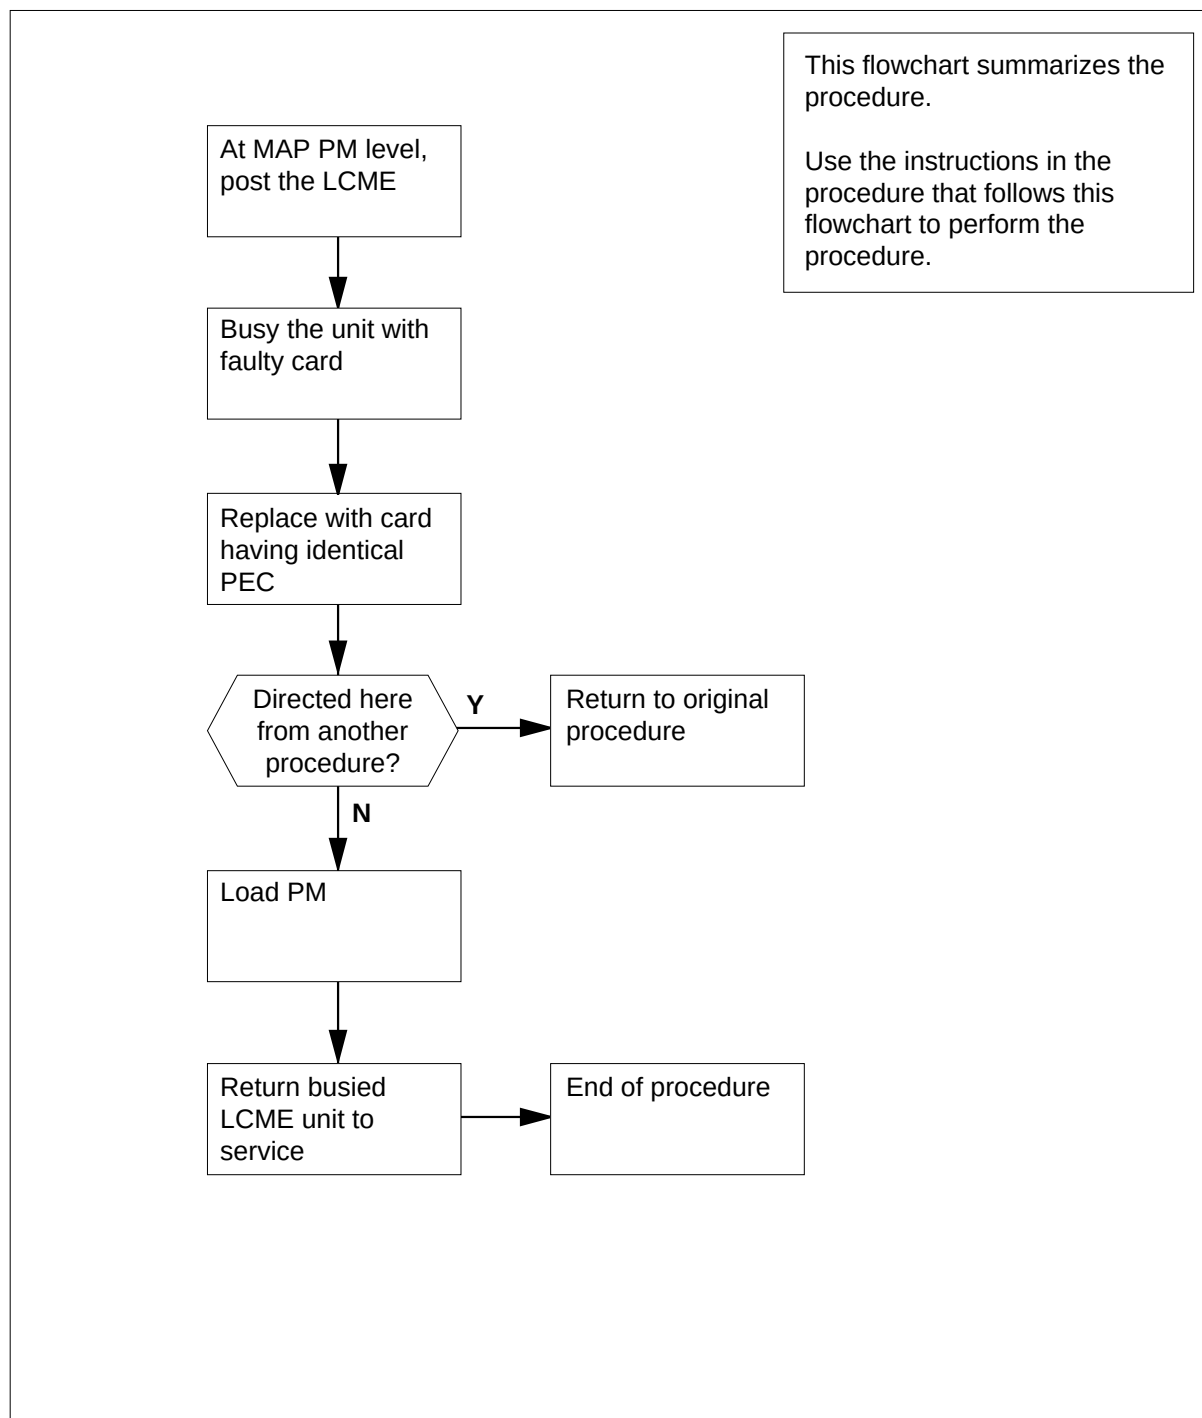

NTBX34

in an RSC-S (DS-1) Model B LCME (continued)

Replacing an NTBX34 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX34 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Set the MAP display to the PM level and post the LCME by typing
>MAPCI;MTC;PM;POST LCME site frame_no lcme_no
and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame at which the LCME is located

lcme_no

is the number of the LCME with the faulty card

Example of a MAP display:

NTBX34
in an RSC-S (DS-1) Model B LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	130	
2 Post_	LCME		0	0	0	0	0	0	
3									
4 Swrg_		LCME	RemL	00 0	Links_00S:	CSide	0		
5 Trnsl_		Unit-0:	InSv		/RG:	0			
6 Tst_		Unit-1:	InSv		/RG:	0			
7 Bsy_		RG: Preferred	0:	InSv	Standby1:	InSv			
8 RTS_									
9 OffL_									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 Busy the LCME unit by typing
>BSY UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the LCME unit with the faulty card
Example of a MAP display:

NTBX34
in an RSC-S (DS-1) Model B LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	130	
2 Post_	LCME		0	1	0	0	0	0	
3									
4 Swrg_		LCME	RemL	00 0	Links_00S:	CSide	0		
5 TrnsL_		Unit-0:	InSv	Mtce	Takeover	/RG:	0		
6 Tst_		Unit-1:	ManB	Mtce		/RG:	0		
7 Bsy_		RG: Preferred	0:	InSv	Standby1:	InSv			
8 RTS_									
9 OffL_									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX34 in an RSC-S (DS-1) Model B LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take the following precautions to protect circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.



WARNING

Static electricity damage

Before removing any cards, put on a wriststrap and connect it to the wriststrap grounding point on the left side of the modular supervisory panel (MSP) of the LCME. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.


Put on a wriststrap.

6


Remove the NTBX34 card as shown in the following figures.

- a Locate the card to be removed on the appropriate shelf.

NTBX34
in an RSC-S (DS-1) Model B LCME (continued)

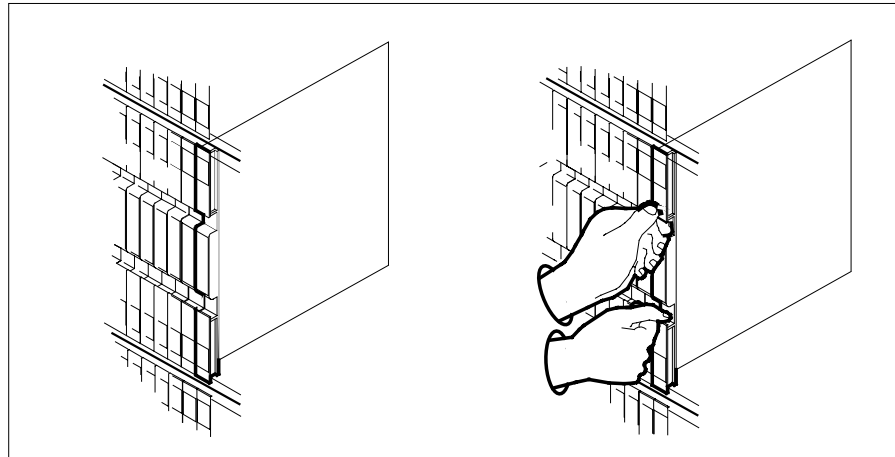

- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

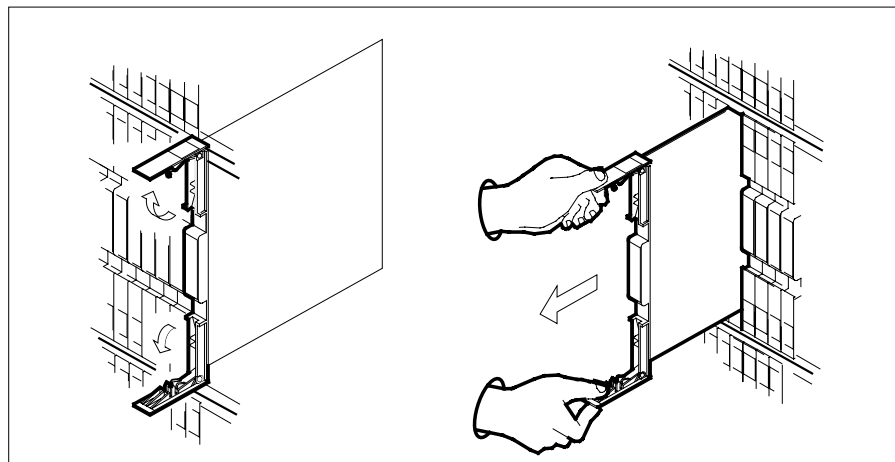


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.


7 Open the locking levers on the replacement card.

- a** Align the card with the slots in the shelf.
b Gently slide the card into the shelf.

NTBX34 in an RSC-S (DS-1) Model B LCME (continued)

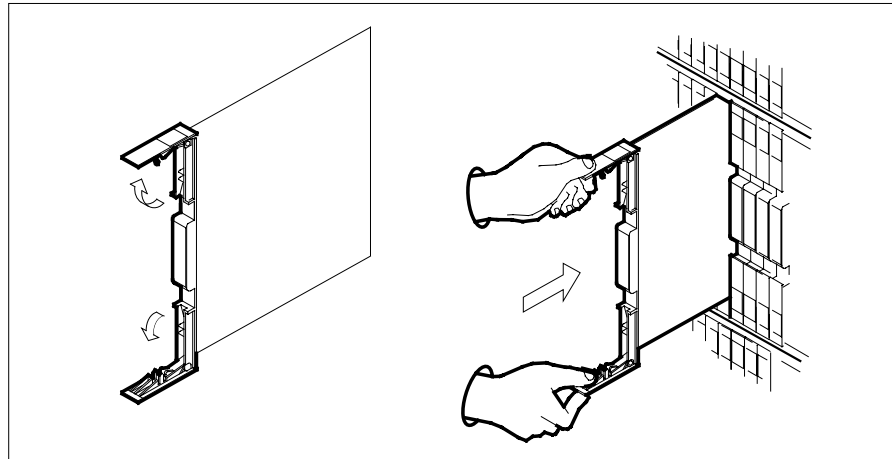

- 8 Seat and lock the card.
- Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - Close the locking levers.

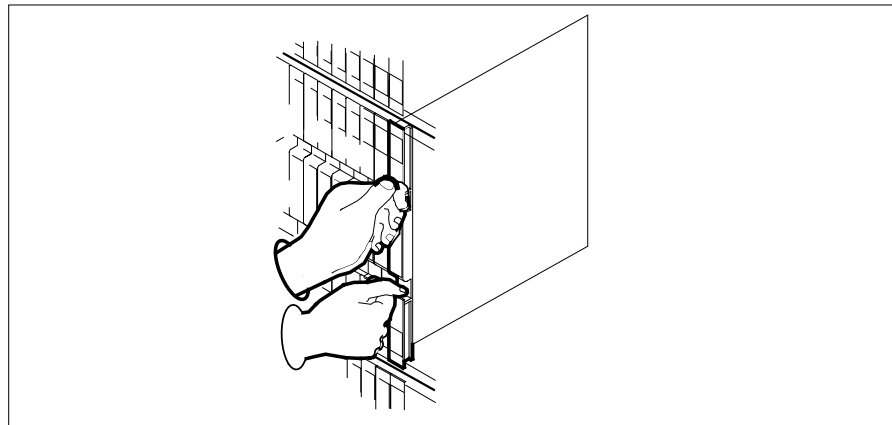

At the MAP terminal

- 9 Load the LCME unit by typing
>loadpm unit unit_no CC
and pressing the Enter key.
where
 unit_no
 is the number of the LCME unit busied in step 4

NTBX34

in an RSC-S (DS-1) Model B LCME (continued)

- 10** Use the following information to determine where to proceed.

If load	Do
passed	step 11
failed	step 19

- 11** Test the LCME unit by typing
>TST UNIT unit_no
 and pressing the Enter key.
where

unit_no
 is the number of the LCME unit loaded in step 9

- 12** Use the following information to determine where to proceed.

If TST	Do
passed	step 13
failed	step 18

- 13** Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 18
other	step 14

- 14** Return the LCME unit to service by typing
>RTS UNIT lcme_unit_no
 and pressing the Enter key.
where

lcme_unit_no
 is the number of the LCME unit tested in step 12

- 15** Use the following information to determine where to proceed.

If RTS	Do
passed	step 16
failed	step 19

- 16** Send any faulty cards for repair according to local procedure.

NTBX34
in an RSC-S (DS-1) Model B LCME (end)

- 17 Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 20.
- 18 Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 19 Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 20 You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX34

in an RSC-S (PCM-30) Model A LCME

Application

Use this procedure to replace an NTBX34 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX34	BA	ISDN Enhanced LCM Processor

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX34 in an RSC-S (PCM-30) Model A LCME (continued)

Summary of card replacement procedure for an NTBX34 card in an RSC-S LCME

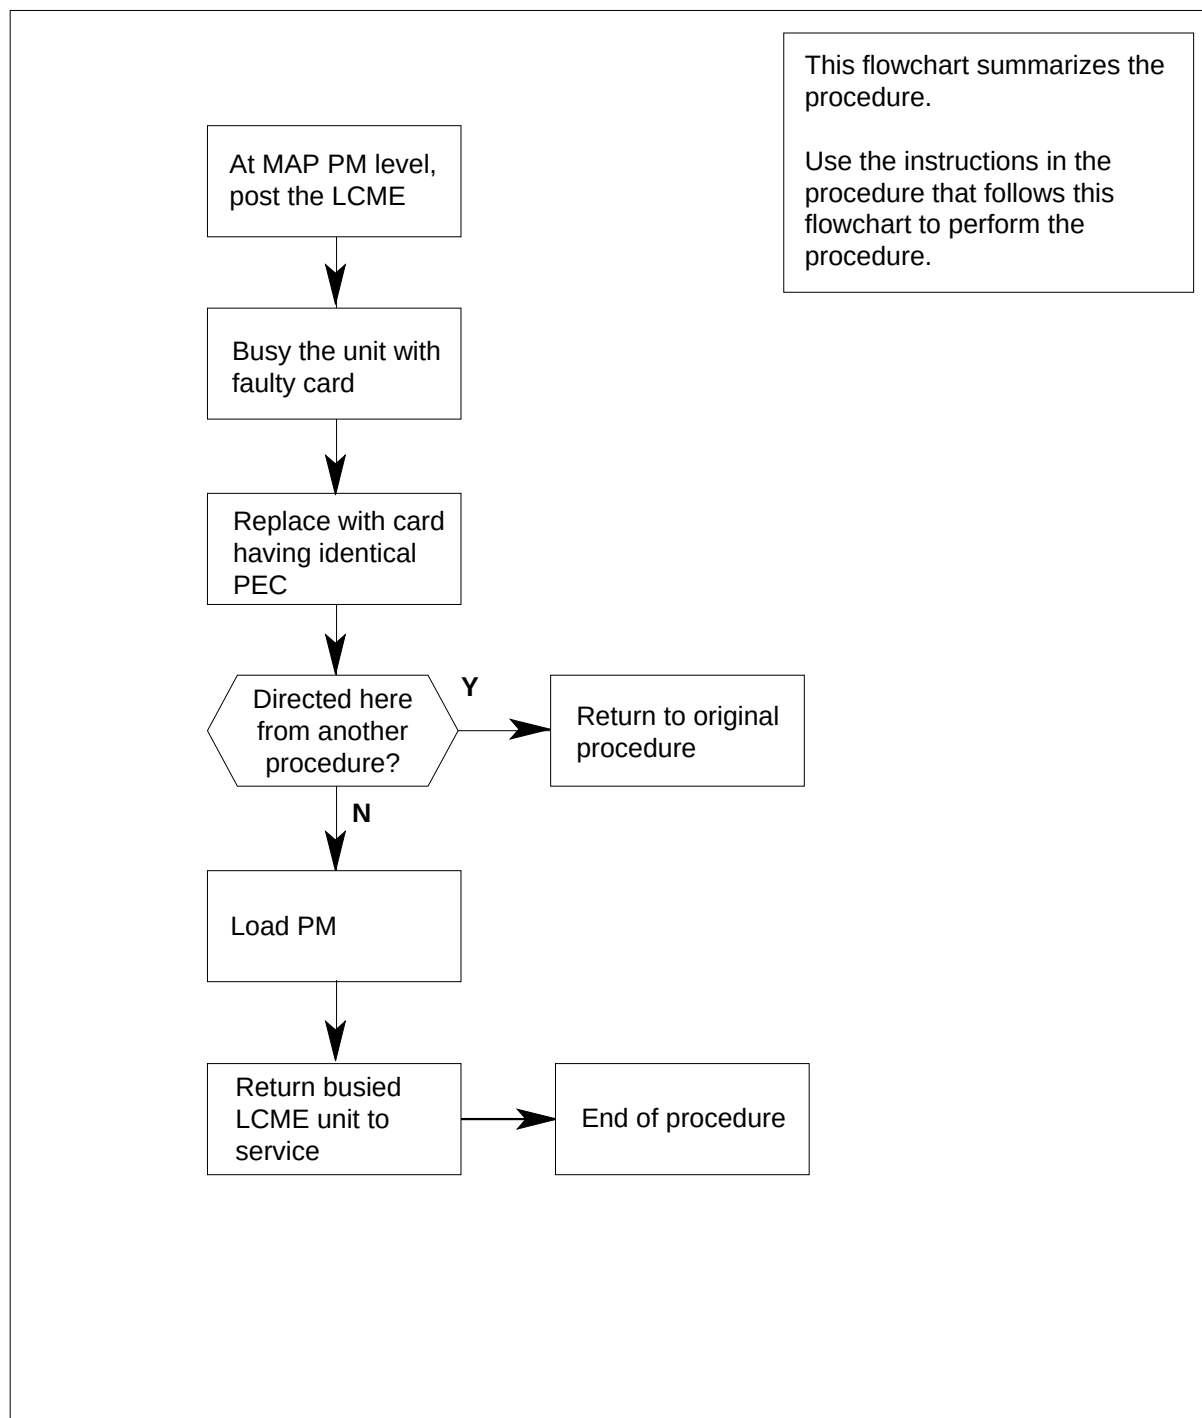

NTBX34

in an RSC-S (PCM-30) Model A LCME (continued)

Replacing an NTBX34 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX34 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Set the MAP display to the PM level and post the LCME by typing
>MAPCI;MTC;PM;POST LCME site frame_no lcme_no
and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame at which the LCME is located

lcme_no

is the number of the LCME with the faulty card

Example of a MAP display:

NTBX34
in an RSC-S (PCM-30) Model A LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	0	130
2 Post_	LCME		0	0	0	0	0	0	0
3									
4 Swrg_		LCME	RemL	00 0	Links_00S:	CSide	0		
5 TrnsL_		Unit-0:	InSv		/RG:	0			
6 Tst_		Unit-1:	InSv		/RG:	0			
7 Bsy_		RG: Preferred	0:	InSv	Standby1:	InSv			
8 RTS_									
9 OffL_									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 Busy the LCME unit by typing
>BSY UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the LCME unit with the faulty card
Example of a MAP display:

NTBX34
in an RSC-S (PCM-30) Model A LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	130	
2 Post_	LCME		0	1	0	0	0	0	
3									
4 Swrg_		LCME	RemL 00 0	Links_00S:	CSide 0				
5 TrnsL_		Unit-0:	InSv Mtce Takeover	/RG:	0				
6 Tst_		Unit-1:	ManB Mtce	/RG:	0				
7 Bsy_		RG: Preferred 0:	InSv Standby1:	InSv					
8 RTS_									
9 OffL_									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX34 in an RSC-S (PCM-30) Model A LCME (continued)

At the LCE frame

5



DANGER

Equipment damage

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



WARNING

Card damage—transport

Take these precautions to protect the circuit cards from electrical and mechanical damage while transporting cards.

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wrist strap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom Corporate Standard 5028).


Store and transport circuit cards in an ESD protective container.

Put on a wrist strap.

6

Remove the NTBX34 card as shown in the following figures.


a Locate the card to be removed on the appropriate shelf.

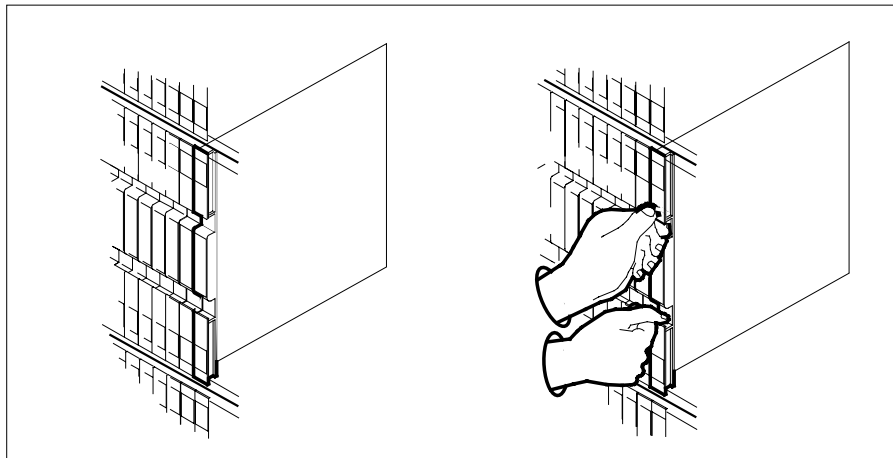

NTBX34

in an RSC-S (PCM-30) Model A LCME (continued)


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

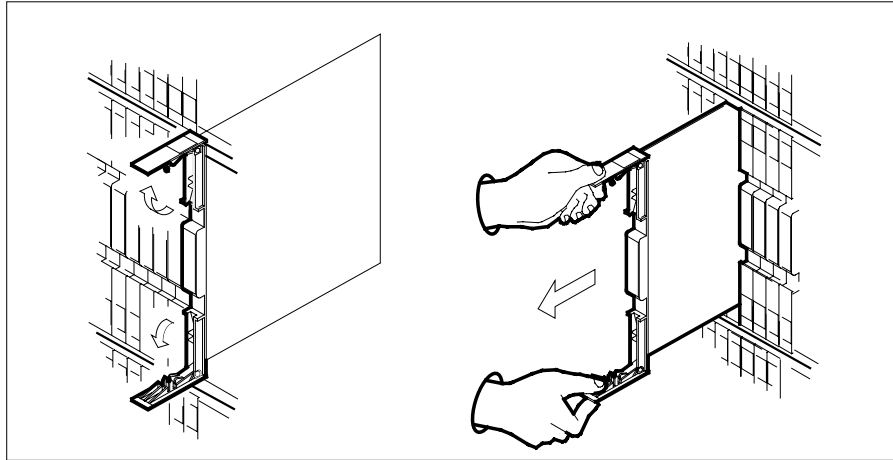

- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

7 Open the locking levers on the replacement card.

- a** Align the card with the slots in the shelf.
b Gently slide the card into the shelf.

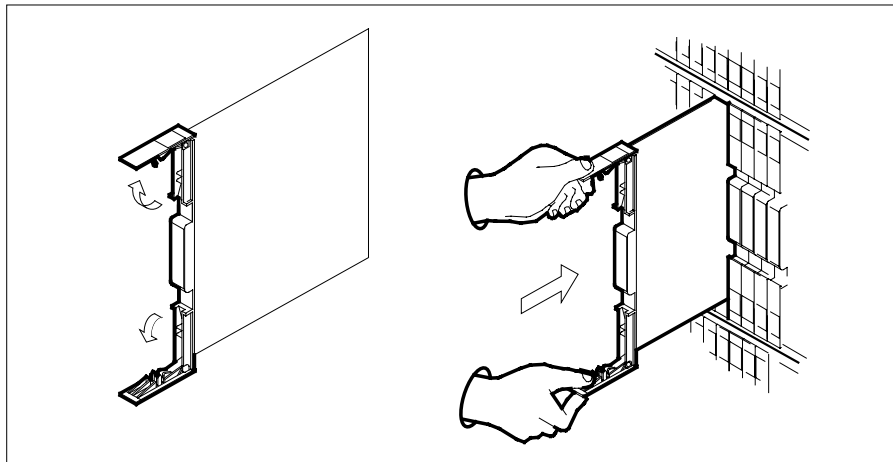


8 Seat and lock the card.

- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
b Close the locking levers.

NTBX34

in an RSC-S (PCM-30) Model A LCME (continued)

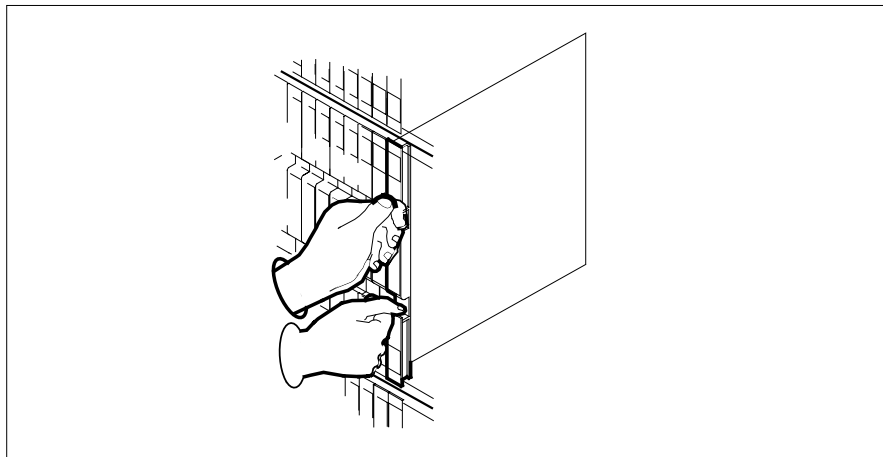

At the MAP terminal

- 9** Load the LCME unit by typing
>loadpm unit unit_no CC
and pressing the Enter key.
where

unit_no
is the number of the LCME unit busied in step 4

- 10** Use the following information to determine where to proceed.

If load	Do
passed	step 11
failed	step 19

- 11** Test the LCME unit by typing
>TST UNIT unit_no
and pressing the Enter key.
where

unit_no
is the number of the LCME unit loaded in step 9

- 12** Use the following information to determine where to proceed.

If TST	Do
passed	step 13
failed	step 18

NTBX34

in an RSC-S (PCM-30) Model A LCME (end)

- 13** Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 18
other	step 14

- 14** Return the LCME unit to service by typing

>RTS UNIT lcme_unit_no

and pressing the Enter key.

where

lcme_unit_no

is the number of the LCME unit tested in step 12

- 15** Use the following information to determine where to proceed.

If RTS	Do
passed	step 16
failed	step 19

- 16** Send any faulty cards for repair according to local procedure.

- 17** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 20.

- 18** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.

- 19** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.

- 20** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX35 in an RSC LCME

Application

Use this procedure to replace an NTBX35 card in an RSCE LCME.


PEC	Suffixes	Name
NTBX35	AA	ISDN LCM Digroup Controller

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

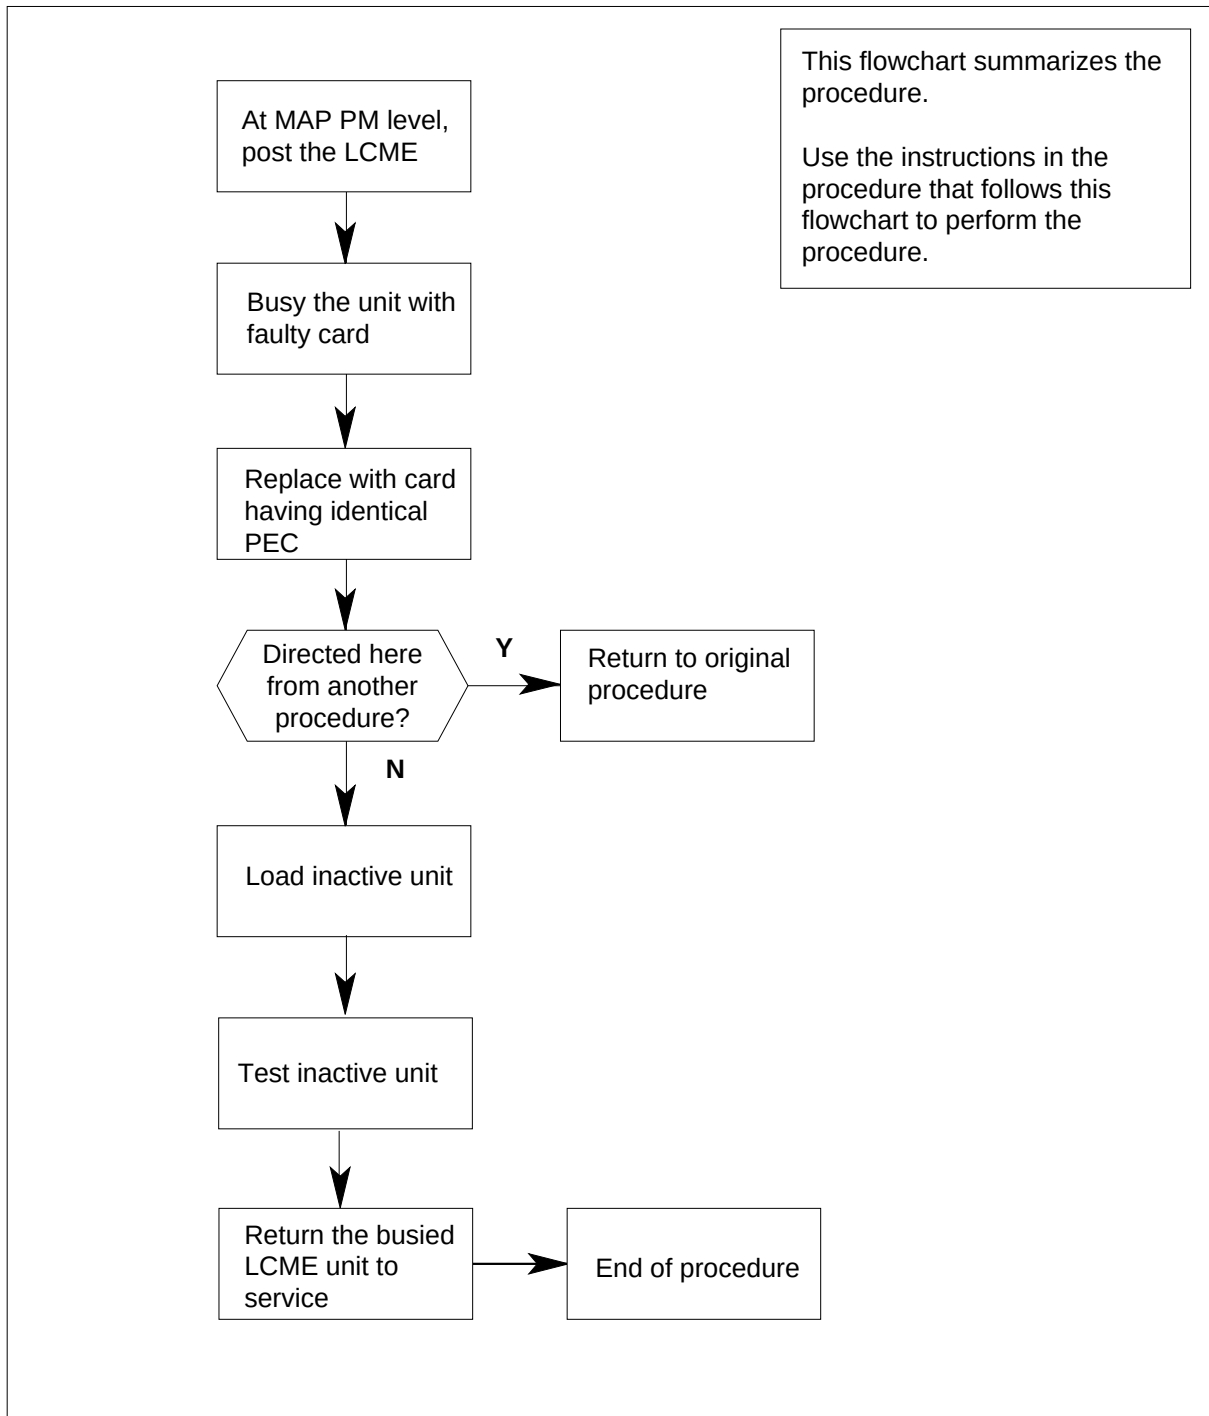NTBX35
in an RSC LCME (continued)**Summary of card replacement procedure for an NTBX35 card in an RSC-S LCME**

NTBX35 in an RSC LCME (continued)

Replacing an NTBX35 card in an RSCE LCME

At your current location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Obtain an NTBX35 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.
- 3 Set the MAP to the PM level and post the LCME by typing
>MAPCI;MTC;PM;POST LCME site frame_no unit_no
 and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME with the faulty card

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	0	0	0	0	130	
2 Post_	LCME	0	0	0	0	0	0	0	
3									
4 Swrg_									
5 TrnsL_				LCME	RemL	00 0	Links_00S:	CSide	0
6 Tst_				Unit-0:	InSv			/RG:	0
7 Bsy_				Unit-1:	InSv			/RG:	0
8 RTS_				RG: Preferred	0:	InSv	Standby1:	InSv	
9 OffL_									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX35
in an RSC LCME (continued)

- 4 Busy the LCME unit by typing
>BSY UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the LCME unit with the faulty card
Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME			SysB	ManB	OffL		CBsy	ISTb	InSv
0 Quit	PM		0	0	0		0	0	130
2 Post_	LCME		0	1	0		0	0	0
3									
4 SwRg			LCME	RemL	00 0	Links_OOS:	CSide	0	
5 TrnsL			Unit-0:	InSv	Mtce	TakeOver	/RG:	0	
6 Tst			Unit-1:	ManB	Mtce		/RG:	0	
7 Bsy			RG: Preferred	0:	InSv	Standby1:	InSv		
8 RTS									
9 OffL									
10 LoadPM									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX35 in an RSC LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take these precautions to protect the circuit cards from electrical and mechanical damage while transporting cards.

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wrist strap connected, through a 1-megohm resistor, to a suitably grounded object such as a metal workbench or a DMS switch frame (Northern Telecom Corporate Standard 5028).

Store and transport circuit cards in an ESD protective container.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.

6


Remove the NTBX35 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

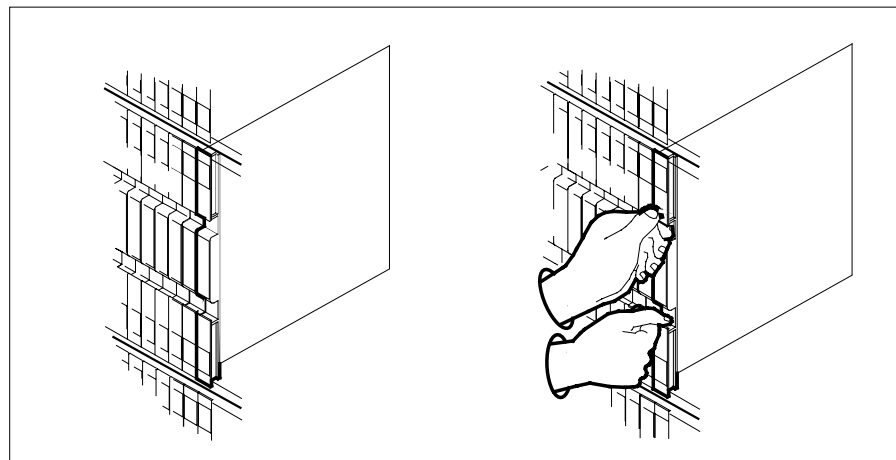

NTBX35
in an RSC LCME (continued)


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

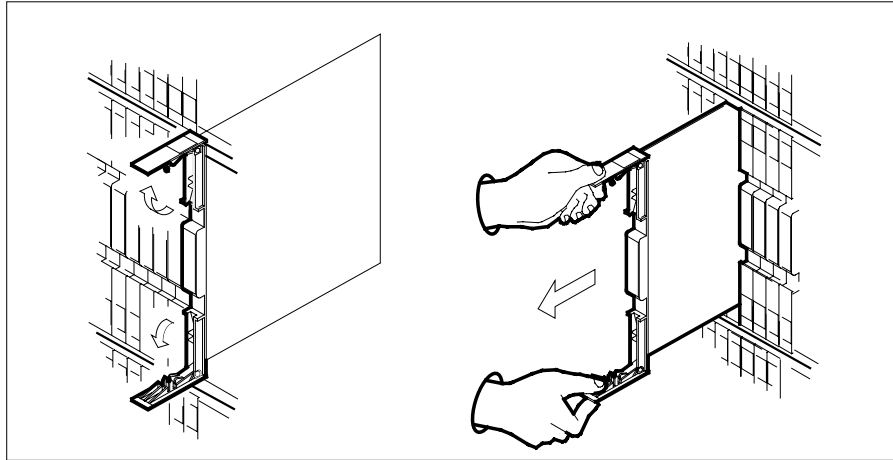

- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

7 Open the locking levers on the replacement card.


- a** Align the card with the slots in the shelf.
b Gently slide the card into the shelf.

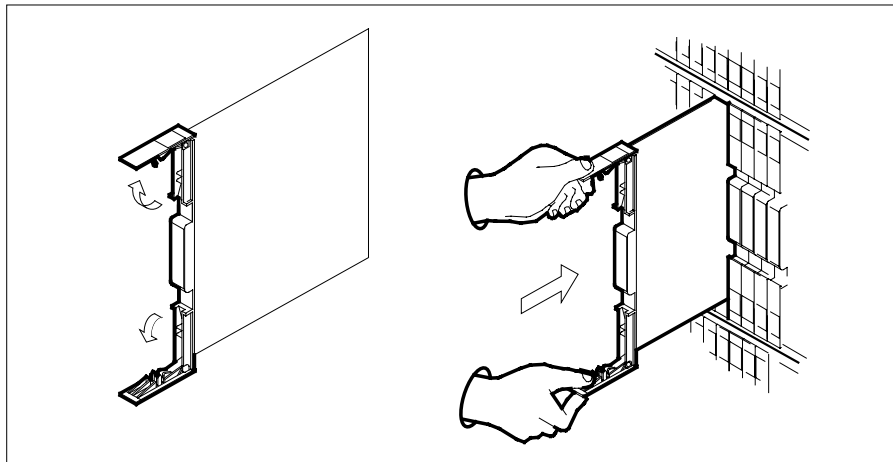

8 Seat and lock the card.

- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
b Close the locking levers.

NTBX35 in an RSC LCME (continued)

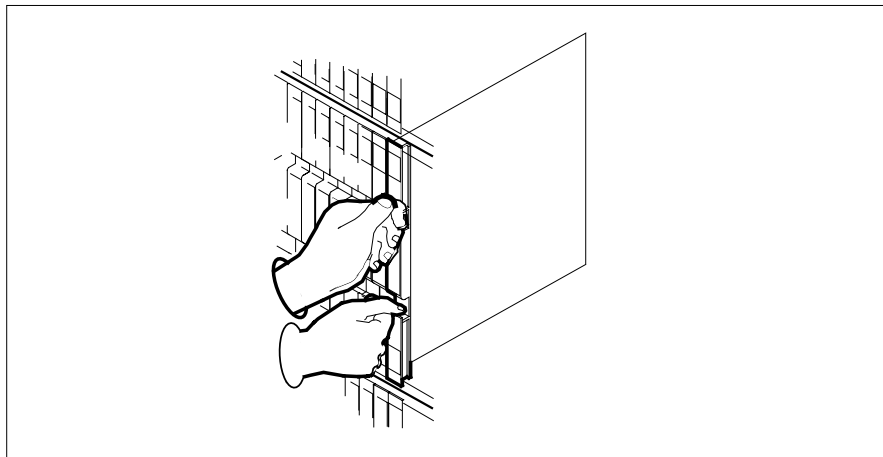

At the MAP terminal

- 9** Load the LCME unit by typing
>loadpm UNIT unit_no CC
and pressing the Enter key.

where

unit_no

is the number of the LCME unit busied in step 4

If load	Do
passed	step 10
failed	step 15

- 10** Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 14
other	step 11

- 11** Return the LCME unit to service by typing
>RTS UNIT lcme_unit_no
and pressing the Enter key.

where

NTBX35
in an RSC LCME (end)

lcme_unit_no

is the number of the LCME unit busied in step 4

	If RTS	Do
	passed	step 12
	failed	step 15
12	Send any faulty cards for repair according to local procedure.	
13	Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 16.	
14	Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.	
15	Obtain further assistance in replacing this card by contacting operating company maintenance personnel.	
16	You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.	

NTBX35 in an RSC-S (DS-1) Model A LCME

Application

Use this procedure to replace an NTBX35 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX35	AA	ISDN LCM Digroup Controller

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX35 in an RSC-S (DS-1) Model A LCME (continued)

Summary of card replacement procedure for an NTBX35 card in an RSC-S LCME

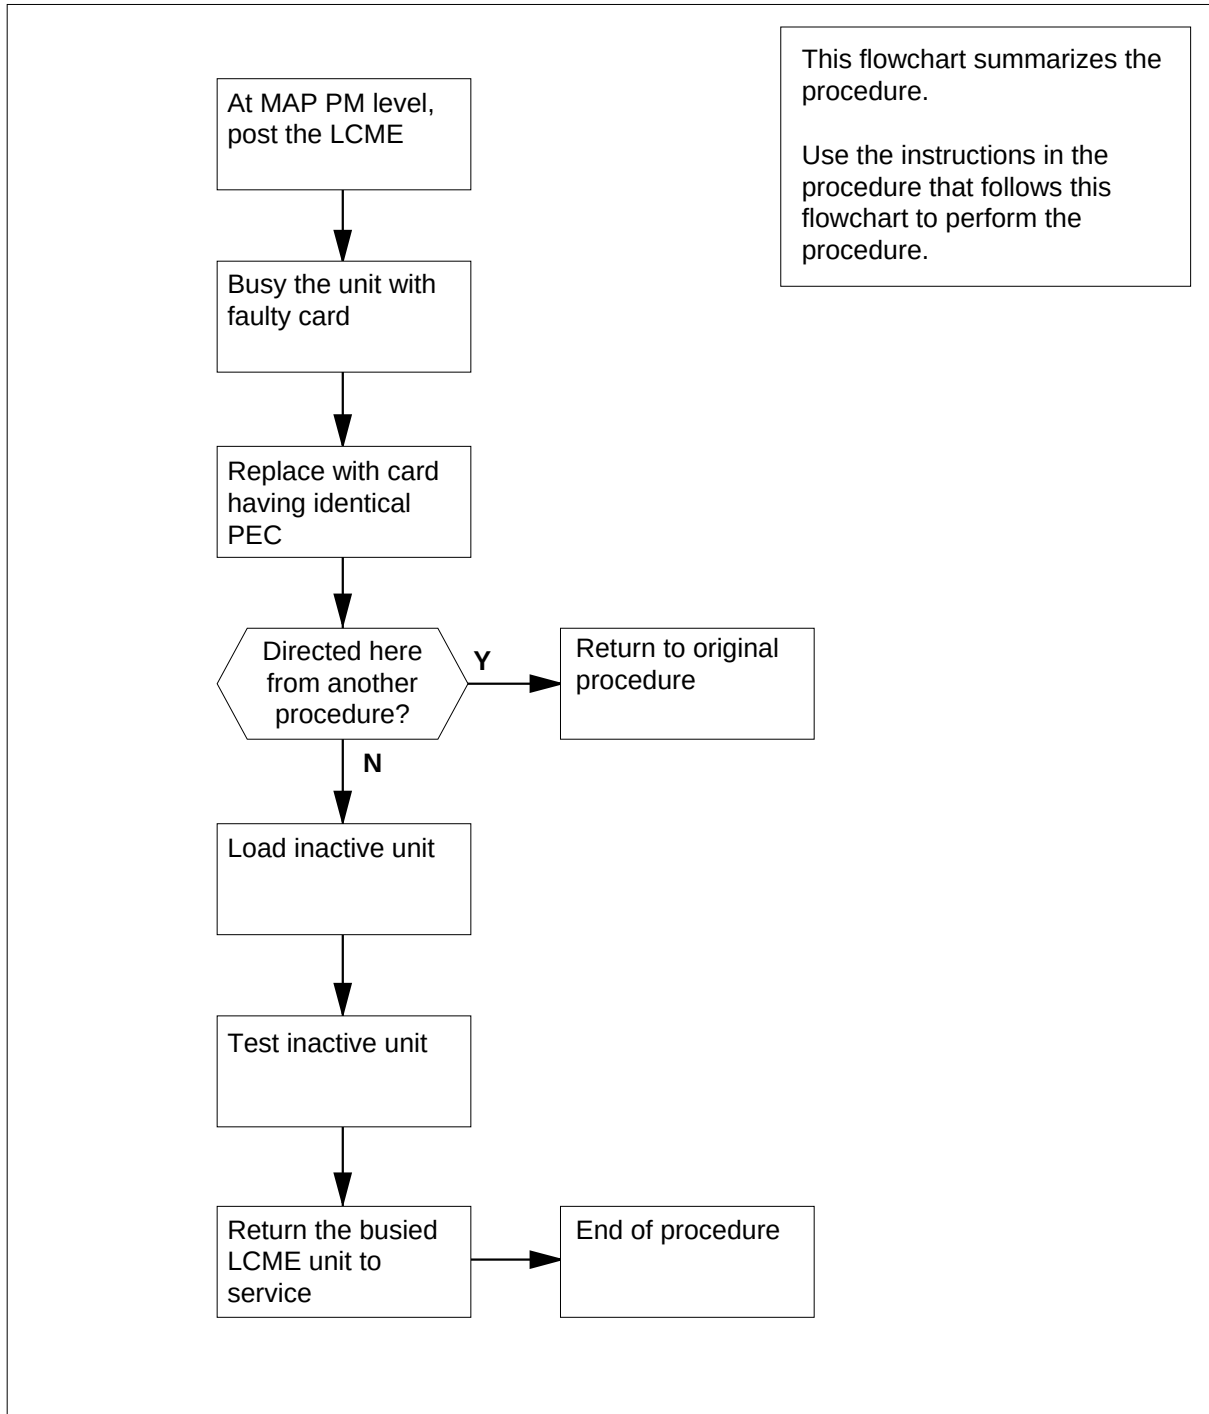

NTBX35

in an RSC-S (DS-1) Model A LCME (continued)

Replacing an NTBX35 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX35 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Set the MAP to the PM level and post the LCME by typing
>MAPCI;MTC;PM;POST LCME site frame_no unit_no
and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME with the faulty card

Example of a MAP display:

NTBX35
in an RSC-S (DS-1) Model A LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME		SysB	ManB	OffL	CBsy	ISTb	InSv		
0 Quit	PM	0	0	0	0	0	130		
2 Post_	LCME	0	0	0	0	0	0		
3									
4 Swrg_									
5 Trnsl_	LCME	RemL	00 0	Links_00S:	CSide	0			
6 Tst_		Unit-0:	InSv		/RG:	0			
7 Bsy_		Unit-1:	InSv		/RG:	0			
8 RTS_		RG: Preferred	0:	InSv	Standby1:	InSv			
9 OffL_									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 Busy the LCME unit by typing
>BSY UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the LCME unit with the faulty card
Example of a MAP display:

NTBX35**in an RSC-S (DS-1) Model A LCME** (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	130	
2 Post_	LCME		0	1	0	0	0	0	
3									
4 SwRg									
5 TrnsL	LCME	RemL	00 0	Links_00S:	CSide	0			
6 Tst		Unit-0:	InSv	Mtce	TakeOver	/RG:	0		
7 Bsy		Unit-1:	ManB	Mtce		/RG:	0		
8 RTS		RG: Preferred	0:	InSv	Standby1:	InSv			
9 OffL									
10 LoadPM									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX35
in an RSC-S (DS-1) Model A LCME (continued)

At the LCE frame

5

**WARNING****Card damage—transport**

Take the following precautions to protect circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.

**WARNING****Static electricity damage**

Before removing any cards, put on a wriststrap and connect it to the wriststrap grounding point on the left side of the frame supervisory panel (FSP) of the LCME. This protects the equipment against damage caused by static electricity.

**DANGER****Equipment damage**

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.


Put on a wriststrap.

6


Remove the NTBX35 card as shown in the following figures.

- a** Locate the card to be removed on the appropriate shelf.

NTBX35 in an RSC-S (DS-1) Model A LCME (continued)

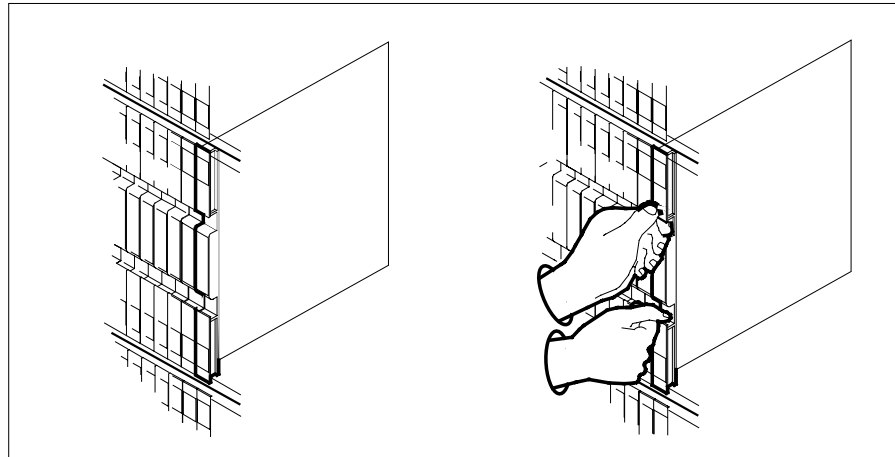


- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

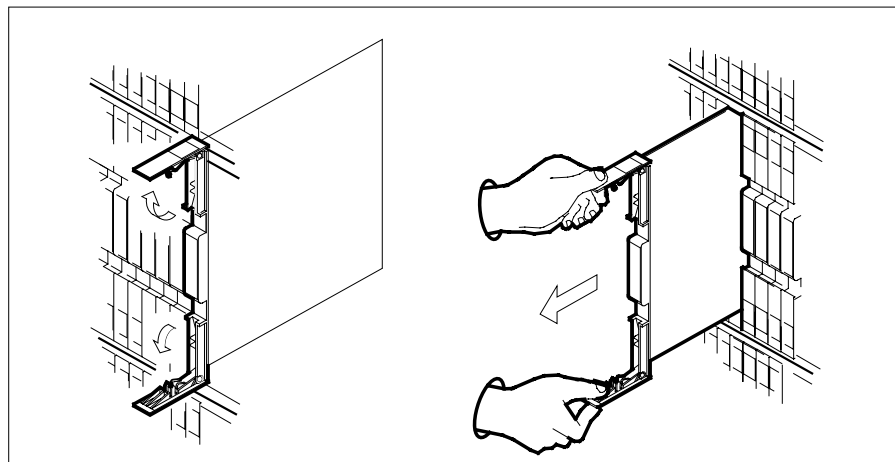


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.
- 7** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf.
- b** Gently slide the card into the shelf.

NTBX35

in an RSC-S (DS-1) Model A LCME (continued)

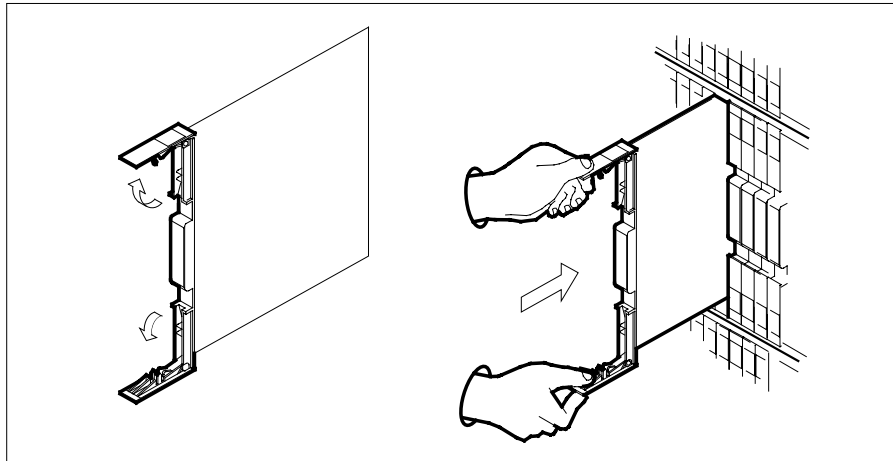

- 8** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

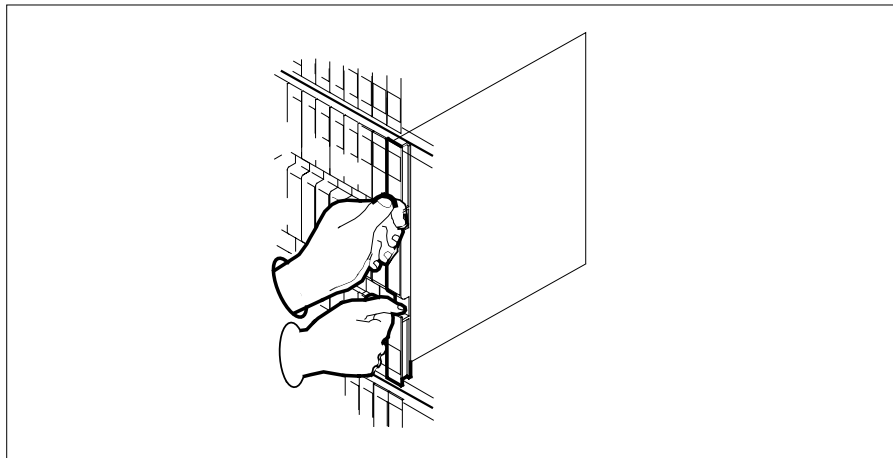

At the MAP terminal

- 9** Load the LCME unit by typing
>loadpm UNIT unit_no CC
and pressing the Enter key.
where

NTBX35**in an RSC-S (DS-1) Model A LCME** (continued)

	unit_no is the number of the LCME unit busied in step 4						
	<table> <tr> <th>If load</th><th>Do</th></tr> <tr> <td>passed</td><td>step 10</td></tr> <tr> <td>failed</td><td>step 16</td></tr> </table>	If load	Do	passed	step 10	failed	step 16
If load	Do						
passed	step 10						
failed	step 16						
10	Test the LCME unit by typing >TST UNIT unit_no and pressing the Enter key. <i>where</i> unit_no is the number of the LCME unit loaded in step 9						
	<table> <tr> <th>If TST</th><th>Do</th></tr> <tr> <td>passed</td><td>step 11</td></tr> <tr> <td>failed</td><td>step 15</td></tr> </table>	If TST	Do	passed	step 11	failed	step 15
If TST	Do						
passed	step 11						
failed	step 15						
11	Use the following information to determine where to proceed. <table> <tr> <th>If you entered this procedure from</th><th>Do</th></tr> <tr> <td>alarm clearing procedures</td><td>step 15</td></tr> <tr> <td>other</td><td>step 12</td></tr> </table>	If you entered this procedure from	Do	alarm clearing procedures	step 15	other	step 12
If you entered this procedure from	Do						
alarm clearing procedures	step 15						
other	step 12						
12	Return the LCME unit to service by typing >RTS UNIT lcme_unit_no and pressing the Enter key. <i>where</i> lcme_unit_no is the number of the LCME unit tested in step 10						
	<table> <tr> <th>If RTS</th><th>Do</th></tr> <tr> <td>passed</td><td>step 13</td></tr> <tr> <td>failed</td><td>step 16</td></tr> </table>	If RTS	Do	passed	step 13	failed	step 16
If RTS	Do						
passed	step 13						
failed	step 16						
13	Send any faulty cards for repair according to local procedure.						
14	Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 17.						

NTBX35

in an RSC-S (DS-1) Model A LCME (end)

- 15** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 16** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 17** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX35 in an RSC-S (DS-1) Model B LCME

Application

Use this procedure to replace an NTBX35 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX35	AA	ISDN LCM Digroup Controller

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX35 in an RSC-S (DS-1) Model B LCME (continued)

Summary of card replacement procedure for an NTBX35 card in an RSC-S LCME

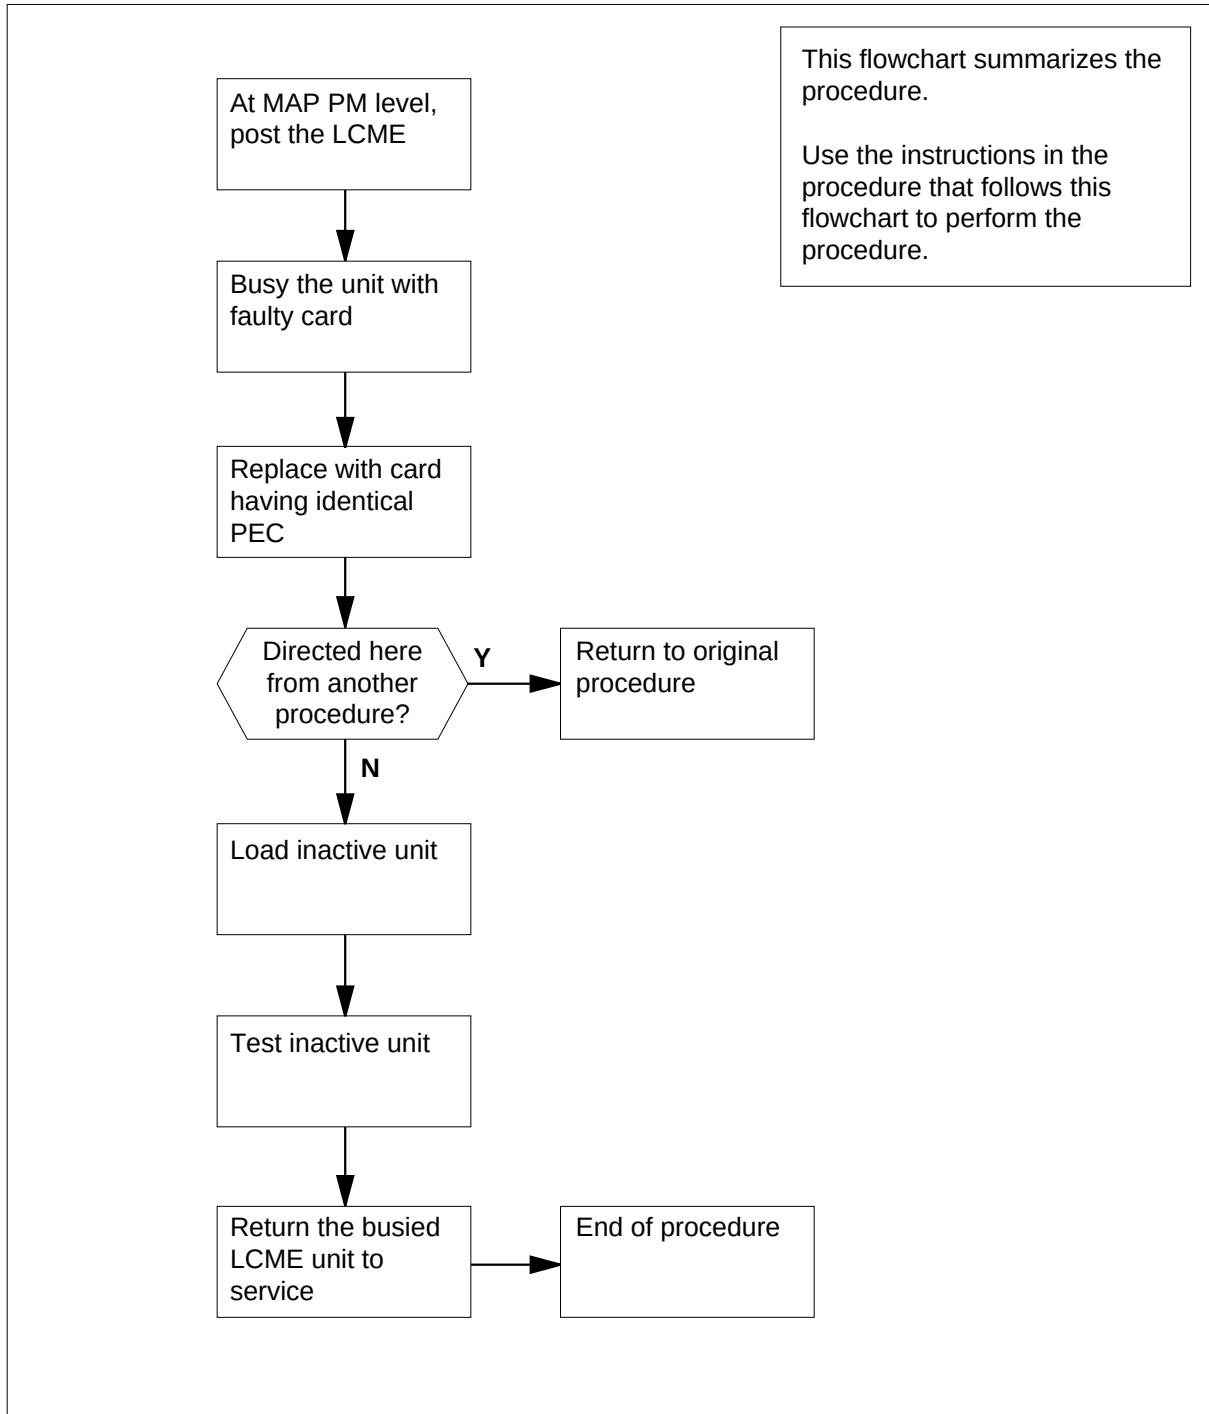

NTBX35

in an RSC-S (DS-1) Model B LCME (continued)

Replacing an NTBX35 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX35 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Set the MAP to the PM level and post the LCME by typing
>MAPCI;MTC;PM;POST LCME site frame_no unit_no
and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME with the faulty card

Example of a MAP display:

NTBX35
in an RSC-S (DS-1) Model B LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		o	0	0	0	0	130	
2 Post_	LCME		0	0	0	0	0	0	
3									
4 Swrg_									
5 TrnsL_	LCME	RemL	00 0	Links_00S:	CSide	0			
6 Tst_		Unit-0:	InSv		/RG:	0			
7 Bsy_		Unit-1:	InSv		/RG:	0			
8 RTS_		RG: Preferred	0: InSv	Standby1:	InSv				
9 OffL_									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 Busy the LCME unit by typing
>BSY UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the LCME unit with the faulty card
Example of a MAP display:

NTBX35**in an RSC-S (DS-1) Model B LCME** (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
LCME			SysB	ManB	OffL		CBsy	ISTb	InSv
0 Quit	PM		0	0	0		0	0	130
2 Post_	LCME		0	1	0		0	0	0
3									
4 SwRg		LCME	RemL	00 0	Links_OOS:		CSide	0	
5 Trnsl		Unit-0:	InSv	Mtce	TakeOver	/RG:	0		
6 Tst		Unit-1:	ManB	Mtce		/RG:	0		
7 Bsy		RG: Preferred	0:	InSv	Standby1:	InSv			
8 RTS									
9 OffL									
10 LoadPM									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX35
in an RSC-S (DS-1) Model B LCME (continued)

At the LCE frame

5

**WARNING****Card damage—transport**

Take the following precautions to protect circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.

**WARNING****Static electricity damage**

Before removing any cards, put on a wriststrap and connect it to the wriststrap grounding point on the left side of the modular supervisory panel (MSP) of the LCME. This protects the equipment against damage caused by static electricity.

**DANGER****Equipment damage**

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.


Put on a wriststrap.

6


Remove the NTBX35 card as shown in the following figures.

- a Locate the card to be removed on the appropriate shelf.

NTBX35 in an RSC-S (DS-1) Model B LCME (continued)

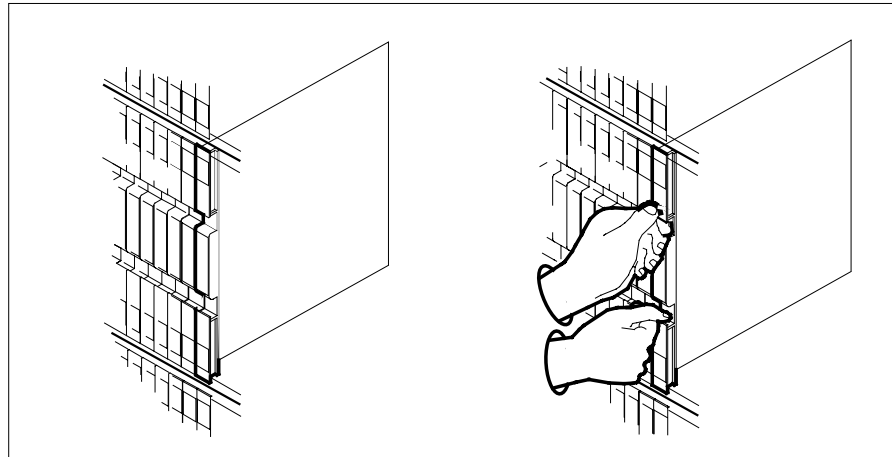

- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

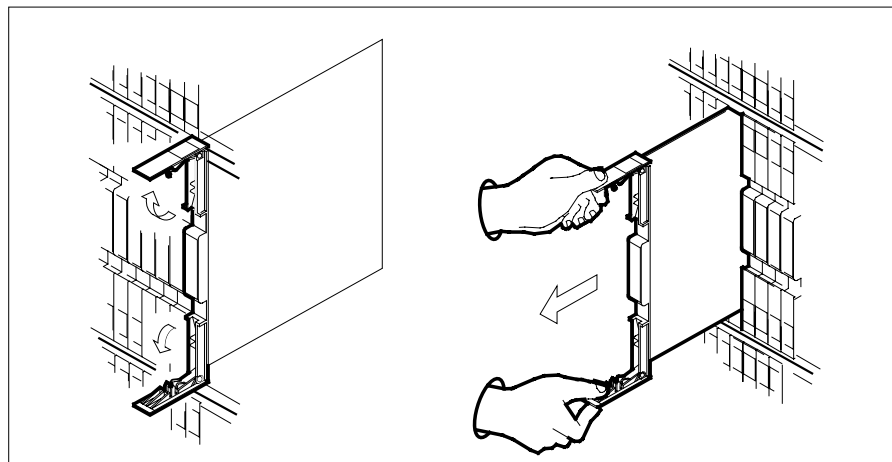


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

7 Open the locking levers on the replacement card.


- a** Align the card with the slots in the shelf.
b Gently slide the card into the shelf.

NTBX35

in an RSC-S (DS-1) Model B LCME (continued)

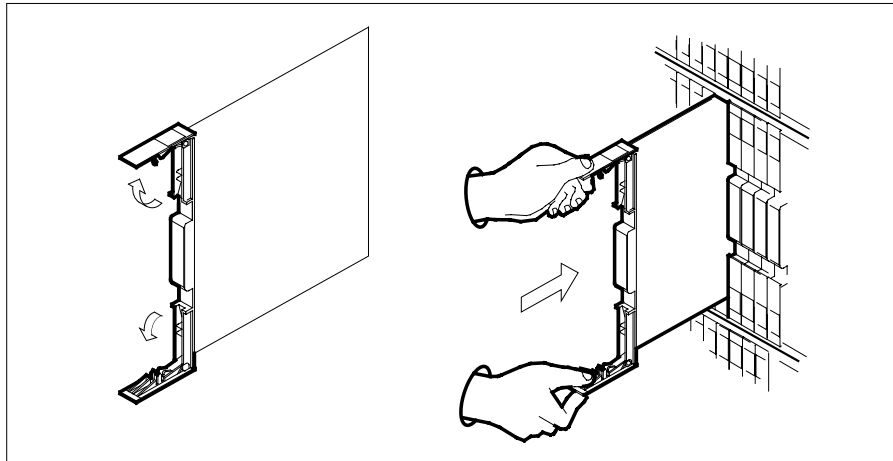

- 8** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

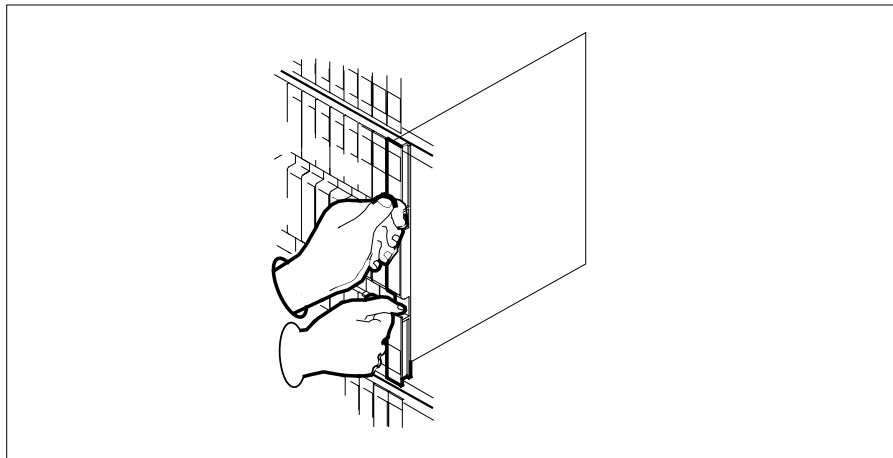

At the MAP terminal

- 9** Load the LCME unit by typing
>loadpm UNIT unit_no CC
and pressing the Enter key.
where

NTBX35**in an RSC-S (DS-1) Model B LCME** (continued)

	unit_no is the number of the LCME unit busied in step 4						
	<table> <tr> <th>If load</th><th>Do</th></tr> <tr> <td>passed</td><td>step 10</td></tr> <tr> <td>failed</td><td>step 16</td></tr> </table>	If load	Do	passed	step 10	failed	step 16
If load	Do						
passed	step 10						
failed	step 16						
10	Test the LCME unit by typing >TST UNIT unit_no and pressing the Enter key. <i>where</i> unit_no is the number of the LCME unit loaded in step 9						
	<table> <tr> <th>If TST</th><th>Do</th></tr> <tr> <td>passed</td><td>step 11</td></tr> <tr> <td>failed</td><td>step 15</td></tr> </table>	If TST	Do	passed	step 11	failed	step 15
If TST	Do						
passed	step 11						
failed	step 15						
11	Use the following information to determine where to proceed.						
	<table> <tr> <th>If you entered this procedure from</th><th>Do</th></tr> <tr> <td>alarm clearing procedures</td><td>step 15</td></tr> <tr> <td>other</td><td>step 12</td></tr> </table>	If you entered this procedure from	Do	alarm clearing procedures	step 15	other	step 12
If you entered this procedure from	Do						
alarm clearing procedures	step 15						
other	step 12						
12	Return the LCME unit to service by typing >RTS UNIT lcme_unit_no and pressing the Enter key. <i>where</i> lcme_unit_no is the number of the LCME unit tested in step 10						
	<table> <tr> <th>If RTS</th><th>Do</th></tr> <tr> <td>passed</td><td>step 13</td></tr> <tr> <td>failed</td><td>step 16</td></tr> </table>	If RTS	Do	passed	step 13	failed	step 16
If RTS	Do						
passed	step 13						
failed	step 16						
13	Send any faulty cards for repair according to local procedure.						
14	Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 17.						

NTBX35

in an RSC-S (DS-1) Model B LCME (end)

- 15** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 16** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 17** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX35 in an RSC-S (PCM-30) Model A LCME

Application

Use this procedure to replace an NTBX35 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX35	AA	ISDN LCM Digroup Controller

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX35 in an RSC-S (PCM-30) Model A LCME (continued)

Summary of card replacement procedure for an NTBX35 card in an RSC-S LCME

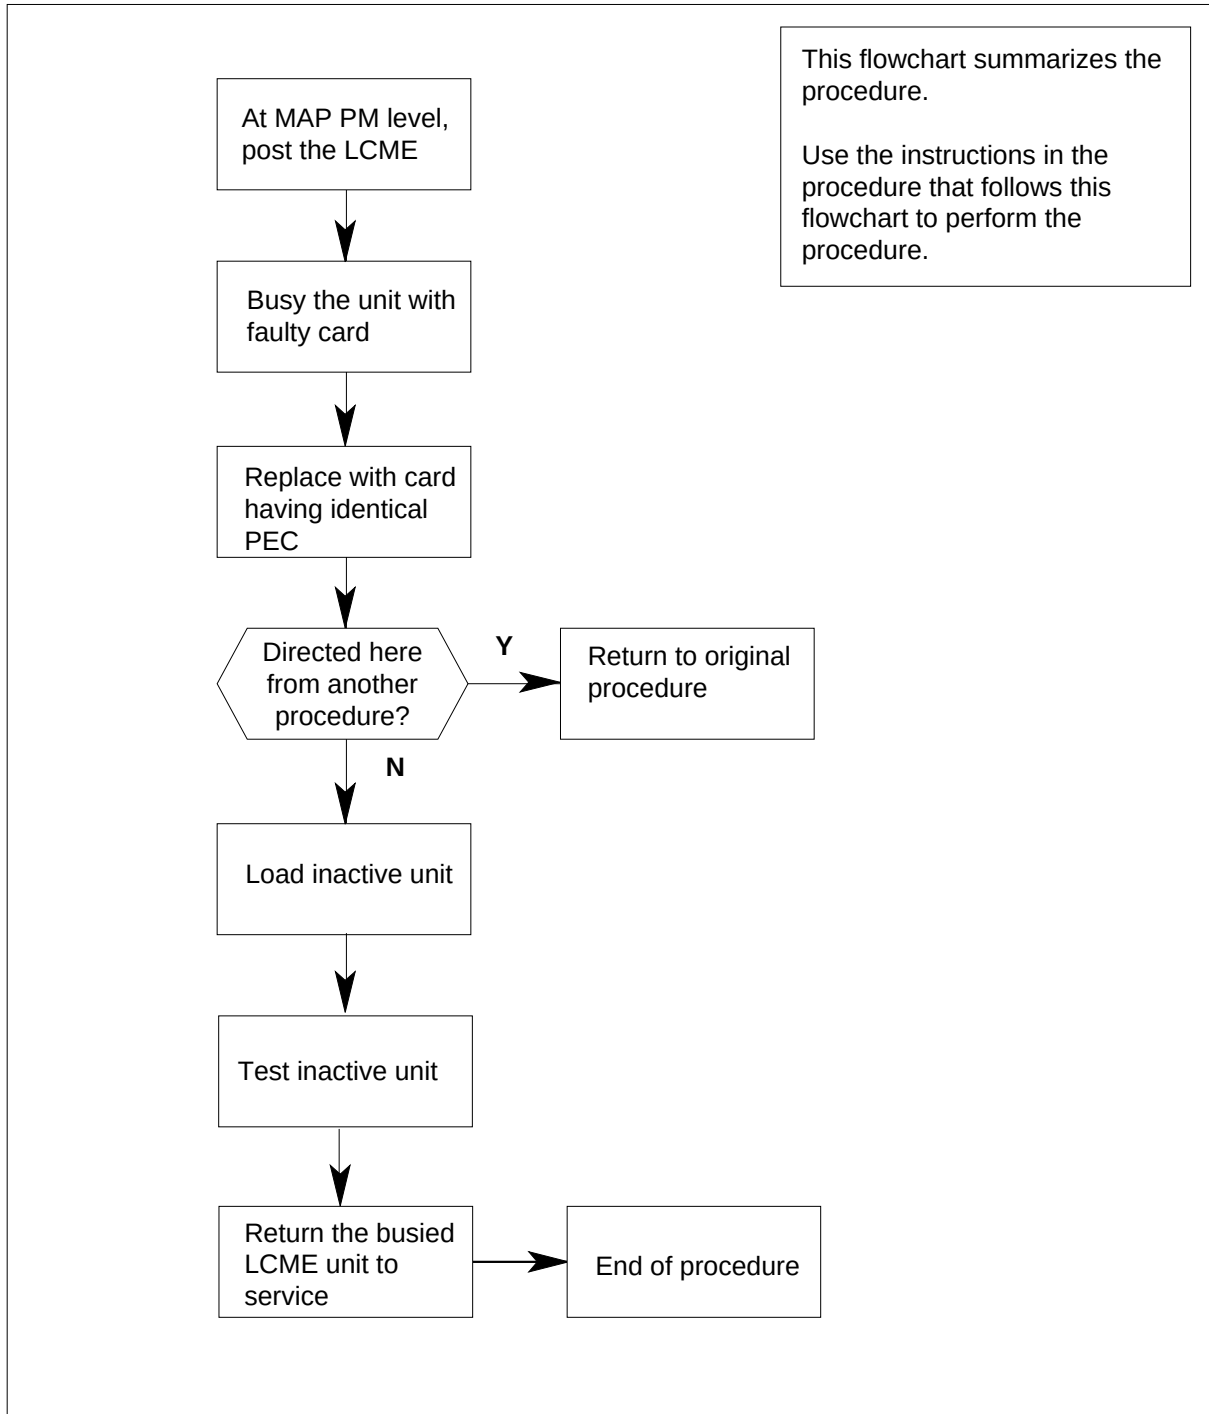

NTBX35

in an RSC-S (PCM-30) Model A LCME (continued)

Replacing an NTBX35 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX35 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Set the MAP to the PM level and post the LCME by typing
>MAPCI;MTC;PM;POST LCME site frame_no unit_no
and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME with the faulty card

Example of a MAP display:

NTBX35
in an RSC-S (PCM-30) Model A LCME (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	AppU
LCME		SysB	ManB	OffL	CBsy	ISTb	InSv		
0	Quit	PM	0	0	0	0	0	130	
2	Post_	LCME	0	0	0	0	0	0	
3									
4	Swrg_								
5	Trnsl_			LCME	RemL	00 0	Links_00S:	CSide 0	
6	Tst_			Unit-0:	InSv		/RG:	0	
7	Bsy_			Unit-1:	InSv		/RG:	0	
8	RTS_			RG: Preferred	0:	InSv	Standby1:	InSv	
9	OffL_								
10	LoadPM_								
11	Disp_								
12	Next_								
13									
14	QueryPM								
15									
16									
17									
18									

- 4 Busy the LCME unit by typing
>BSY UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the LCME unit with the faulty card
Example of a MAP display:

NTBX35**in an RSC-S (PCM-30) Model A LCME (continued)**

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
LCME	.	.	SysB	ManB	OffL	.	CBsy	ISTb	InSv
0 Quit	PM		0	0	0		0	0	130
2 Post_	LCME		0	1	0		0	0	0
3									
4 SwRg			LCME	RemL	00 0	Links_00S:	CSide	0	
5 Trnsl			Unit-0:	InSv	Mtce	TakeOver	/RG:	0	
6 Tst			Unit-1:	ManB	Mtce		/RG:	0	
7 Bsy			RG: Preferred	0:	InSv	Standby1:	InSv		
8 RTS									
9 OffL									
10 LoadPM									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX35 in an RSC-S (PCM-30) Model A LCME (continued)

At the LCE frame

5



WARNING

Card damage—transport

Take these precautions to protect the circuit cards from electrical and mechanical damage while transporting cards.

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wrist strap connected, through a 1-megohm resistor, to a suitably grounded object such as a metal workbench or a DMS switch frame (Northern Telecom Corporate Standard 5028).

Store and transport circuit cards in an ESD protective container.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


6

Remove the NTBX35 card as shown in the following figures.

- a Locate the card to be removed on the appropriate shelf.

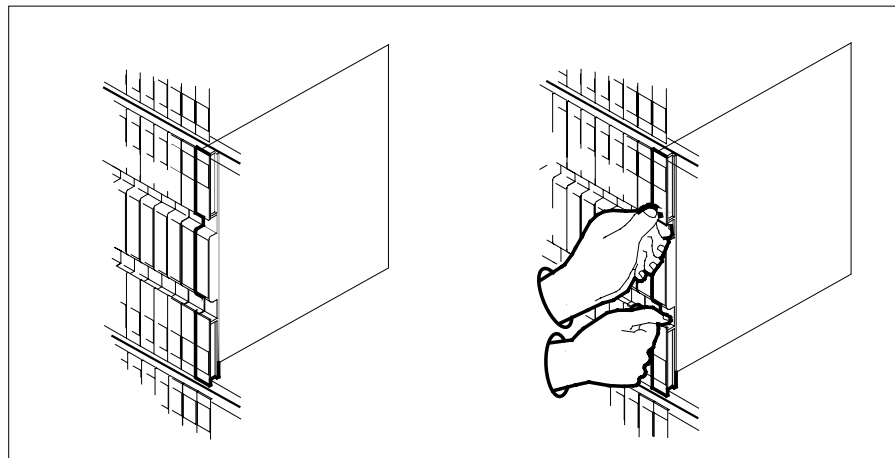

NTBX35
in an RSC-S (PCM-30) Model A LCME (continued)

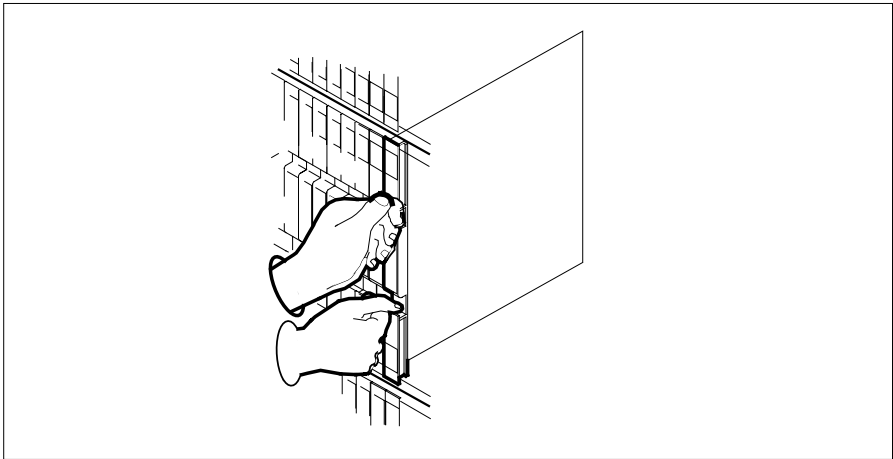

At the MAP terminal

- 9** Load the LCME unit by typing
>loadpm UNIT unit_no CC
and pressing the Enter key.
where
unit_no
is the number of the LCME unit busied in step 4

If load	Do
passed	step 10
failed	step 16

- 10** Test the LCME unit by typing
>TST UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the LCME unit loaded in step 9

If TST	Do
passed	step 11
failed	step 15

NTBX35

in an RSC-S (PCM-30) Model A LCME (end)

- 11 Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 15
other	step 12

- 12 Return the LCME unit to service by typing

>RTS UNIT lcme_unit_no

and pressing the Enter key.

where

lcme_unit_no

is the number of the LCME unit tested in step 10

If RTS	Do
passed	step 13
failed	step 16

- 13 Send any faulty cards for repair according to local procedure.
- 14 Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 17.
- 15 Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 16 Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 17 You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

**NTBX36
in an RSC LCME**

Application

Use this procedure to replace an NTBX36 card in an RSCE LCME.

PEC	Suffixes	Name
NTBX36	BA	Bus Interface Card (BIC)

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX36 in an RSC LCME (continued)

Summary of card replacement procedure for an NTBX36 card in RSC LCME

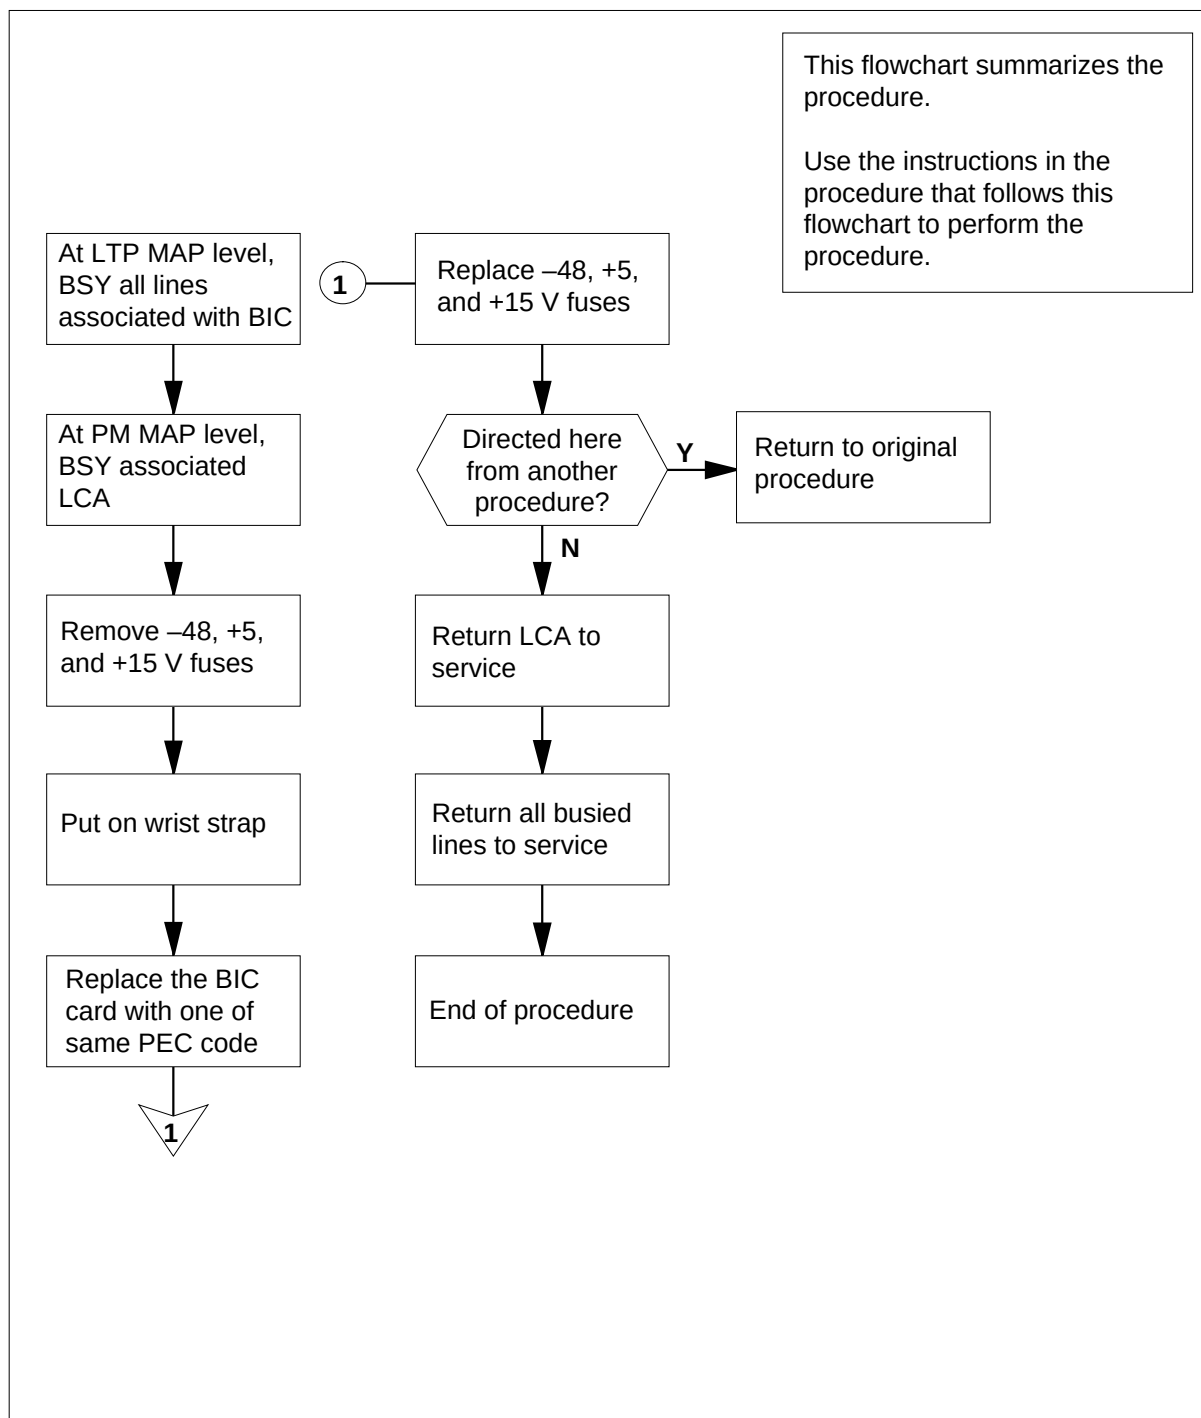

NTBX36 in an RSC LCME (continued)

Replacing an NTBX36 card in RSC LCME

At your Current Location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or were directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Ensure that the replacement card has the same product equipment code (PEC) including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Access the LTP level and post the first line subgroup (LSG) of the line drawer that contains the bus interface card (BIC) to be replaced by typing

```
>MAPCI;MTC;LNS;LTP;POST L site frame_no unit_no lcm_dr  
LSG
```

and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME unit with the faulty card

lcm_dr

is the number of the drawer with the faulty card

- 4 Busy all lines in the first LSG by typing

```
>BSY ALL
```

and pressing the Enter key.

- 5 Post the next LSG of the same line drawer by typing

```
>NEXT D
```

and pressing the Enter key.

- 6 Repeat step 4 and step 5 until all LSGs of the same line drawer are busied.

- 7 Post the LCME with the LCA shelf containing the card to be replaced by typing

```
>PM;POST LCME site frame_no unit_no
```

and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

NTBX36

in an RSC LCME (continued)

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME unit with the faulty card

Example of a MAP display:

```

CM      MS      IOD      Net      PM      CCS      LNS      Trks      Ext      Appl
.       .       .       .       1LCME      .       .       .       .       .
LCME
0 Quit      PM      0      0      0      0      0      130
2 Post_     LCME      0      0      0      0      0
3
4 SwRg      LCME      Reml  00 0  ISTb  Links_00S: CSide 1
5 Trnsl      Unit0:  InSV      /RG:  0
6 Tst        Unit1:  InSV      /RG:  0
7 Bsy
8 RTS        Drwr: 01 23 45 67 89 01 23 45      RG:Pref 0 InSv
9 OffL
10 LoadPM
11 Disp_
12 Next
13
14 QueryPM
15
16
17
18

```

- 8** Busy all LSGs associated with the LCME drawer in which the card is being replaced by typing

>BSY DRWR x

and pressing the Enter key.

>BSY DRWR y

and pressing the Enter key.

>BSY DRWR z

and pressing the Enter key.

where

x

is the first line subgroup

y

is the next line subgroup

z

is the next line subgroup (if an LCMI)

Example of a MAP response:
Please confirm ("YES" or "NO")

NTBX36
in an RSC LCME (continued)

- 9 Confirm the busied LSGs by typing
 >YES
 and pressing the Enter key.
 Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb		InSv
0 Quit	PM		0	1	0	0	0		130
2 Post_	LCME		0	1	0	0	0		0
3									
4 SwRg		LCME	RemL	00 0	ISTb	Links_00S:	CSide 1		
5 Trnsl		Unit 0:	InSv			/RG: 0			
6 Tst		Unit 1:	InSv			/RG: 0			
7 Bsy					11 11 11	RG:Pref 0	InSv		
8 RTS		Drwr: 01 23 45 46 67 89 01 23 45				Stby:1	InSv		
9 OffL		 MM							
10 LoadPM									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX36 in an RSC LCME (continued)

At the LCE frame

10



WARNING

Card damage—transport

Take these precautions to protect the circuit cards from electrical and mechanical damage while transporting cards.

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wrist strap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom Corporate Standard 5028).

Store and transport circuit cards in an ESD protective container.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



DANGER

Hot materials

Exercise care when handling the line card. The line feed resistor may be very hot.



CAUTION

Special tools required

Card shrouds and removal tools are required for removing cards from the line drawers.

Remove the -48V fuse for the line drawer containing the BIC to be replaced.

Remove the +5V fuse for the line drawer containing the BIC to be replaced.

Remove the + 15V fuse for the line drawer containing the BIC to be replaced.

NTBX36 in an RSC LCME (continued)

Put on a wrist strap.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note 1: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards. Descriptions of these shrouds follow.

Note 2: Card removal tools are required for removing cards from line drawers. Two sizes are available. Descriptions of these tools follow.

Card removal tool for	Apparatus code	Common product code
3-4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 11 To prepare to remove the faulty card, open the line drawer and follow these substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with the thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1 in).
 - d While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1 cm (.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
 - f Ensure a card shroud and line card extractor are available.
- 12 Remove the line card to be replaced by following these substeps:
 - a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.

NTBX36 in an RSC LCME (continued)

- c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 13 Replace the faulty card by following these substeps:
 - a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
 - f Close the line drawer.
- 14 Replace the -48V fuse for the line drawer containing the BIC that was replaced.
Replace the +5V fuse for the line drawer containing the BIC that was replaced.
Replace the +15V fuse for the line drawer containing the BIC that was replaced.
- 15 Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 25
other	step 16

At the MAP terminal

- 16 Return the LSGs to service by typing
>RTS DRWR x
and pressing the Enter key.
>RTS DRWR y
and pressing the Enter key.
where
 x
 is the first line subgroup busied in step 8

NTBX36
in an RSC LCME (continued)

- y*
is the next line subgroup busied in step 8
- 17** Access the PM level of the MAP display and post the first LSG of the line drawer that contains the BIC to be replaced by typing
>MAPCI;MTC;PM;LNS;LTP;POST L site frame_no unit_no lcm_dr
and pressing the Enter key.
where
site
is the name of the site at which the LCME is located
frame_no
is the number of the frame in which the LCME is located
unit_no
is the number of the LCME unit with the faulty card
lcm_dr
is the number of the drawer with the faulty card
- 18** Return the busied lines in the first LSG to service by typing
>RTS ALL
and pressing the Enter key.
- 19** Post the next LSG of the same line drawer by typing
>NEXT D
and pressing the Enter key.
- 20** Repeat step 18 and step 19 until all busied lines in the drawer are returned to service.
- 21** Post the LCME with the LCA shelf containing the replaced card by typing
>PM;POST LCME site frame_no unit_no
and pressing the Enter key.
where
site
is the name of the site at which the LCME is located
frame_no
is the number of the frame in which the LCME is located
unit_no
is the number of the LCME unit with the faulty card
- 22** Return the LCME unit to service by typing
>RTS lcm_unit_no
and pressing the Enter key.
where

NTBX36
in an RSC LCME (end)

lcm_unit_no

is the number of the LCME unit posted in step 21

If RTS

Do

passed

step 23

failed

step 26

- 23** Send any faulty cards for repair according to local procedure.
- 24** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 27.
- 25** Return to the Alarm Clearing or other procedure that directed you to this procedure. If necessary, go to the point where the faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 26** Obtain further assistance in replacing this card by contacting personnel responsible for a higher level of support.
- 27** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX36

in an RSC-S (DS-1) Model A LCME

Application

Use this procedure to replace an NTBX36 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX36	BA	Bus Interface Card (BIC)

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX36 in an RSC-S (DS-1) Model A LCME (continued)

Summary of card replacement procedure for an NTBX36 card in RSC-S LCME

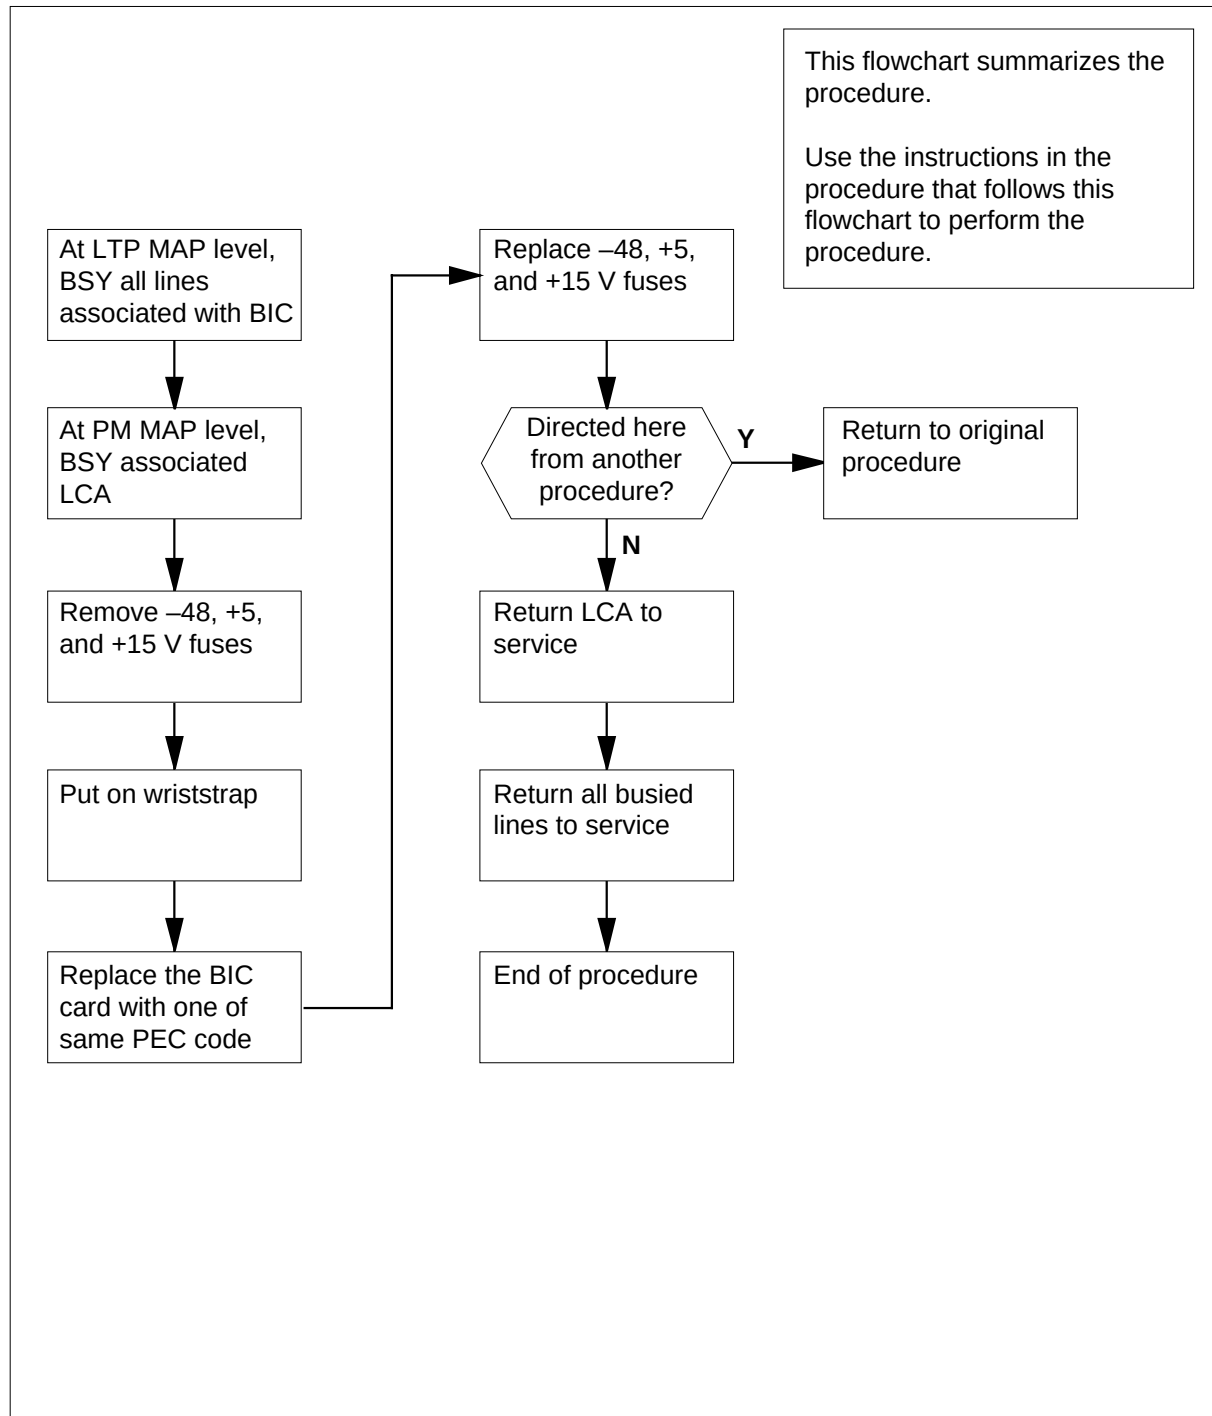

NTBX36

in an RSC-S (DS-1) Model A LCME (continued)

Replacing an NTBX36 card in RSC-S LCME

At your Current Location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or were directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Ensure that the replacement card has the same product equipment code (PEC) including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Access the LTP level and post the first line subgroup (LSG) of the line drawer that contains the bus interface card (BIC) to be replaced by typing

```
>MAPCI;MTC;LNS;LTP;POST L site frame_no unit_no lcm_dr
LSG
```

and pressing the Enter key.

where

site
is the name of the site at which the LCME is located

frame_no
is the number of the frame in which the LCME is located

unit_no
is the number of the LCME unit with the faulty card

lcm_dr
is the number of the drawer with the faulty card

- 4 Busy all lines in the first LSG by typing

```
>BSY ALL
```

and pressing the Enter key.

- 5 Post the next LSG of the same line drawer by typing

```
>NEXT D
```

and pressing the Enter key.

- 6 Repeat steps 4 and 5 until all LSGs of the same line drawer are busied.

- 7 Post the LCME with the LCA shelf containing the card to be replaced by typing

```
>PM;POST LCME site frame_no unit_no
```

and pressing the Enter key.

where

site
is the name of the site at which the LCME is located

NTBX36

in an RSC-S (DS-1) Model A LCME (continued)

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME unit with the faulty card

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME									
0	Quit	PM	0	0	0	0	0	130	
2	Post_	LCME	0	0	0	0	0	0	
3									
4	SwRg	LCME	Reml	00 0	ISTb	Links_00S:	CSide	1	
5	Trnsl	Unit0:	InSV			/RG:	0		
6	Tst	Unit1:	InSv			/RG:	0		
7	Bsy				11 11 11	RG:Pref	0	InSv	
8	RTS	Drwr:	01 23 45 67 89	01 23 45		Stby:1	InSv		
9	OffL								
10	LoadPM								
11	Disp_								
12	Next								
13									
14	QueryPM								
15									
16									
17									
18									

- 8 Busy all LSGs associated with the LCME drawer in which the card is being replaced by typing

>BSY DRWR x

and pressing the Enter key.

>BSY DRWR y

and pressing the Enter key.

>BSY DRWR z

and pressing the Enter key.

*where***x**

is the first line subgroup

y

is the next line subgroup

z

is the next line subgroup (if an LCMI)

Example of a MAP response:
Please confirm ("YES" or "NO")

NTBX36
in an RSC-S (DS-1) Model A LCME (continued)

- 9 Confirm the busied LSGs by typing
 >YES
 and pressing the Enter key.
 Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	1	0	0	0	0	130
2 Post_	LCME		0	1	0	0	0	0	0
3									
4 SwRg	LCME		RemL	00	0	ISTb	Links_00S:	CSide	1
5 Trnsl	Unit 0:		InSv				/RG:	0	
6 Tst	Unit 1:		InSv				/RG:	0	
7 Bsy					11	11	11	RG:Pref	0 InSv
8 RTS	Drwr:	01	23	45	46	67	89	01	23 45
9 OffL			..	..	MM	..	..	..	..
10 LoadPM									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX36 in an RSC-S (DS-1) Model A LCME (continued)

At the LCE frame

10



WARNING

Card damage—transport

Take the following precautions to protect circuit cards from electrical and mechanical damage during transport:

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



DANGER

Hot materials

Exercise care when handling the line card. The line feed resistor may be very hot.



CAUTION

Special tools required

Card shrouds and removal tools are required for removing cards from the line drawers. For descriptions of these tools, refer to the following notes.

Remove the -48V, +5V, and +15V fuses (in that order) for the line drawer containing the BIC to be replaced.

Put on a wriststrap.

NTBX36

in an RSC-S (DS-1) Model A LCME (continued)

Note: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards, as shown in the following table.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note: Card removal tools are required for removing cards from line drawers. Two sizes are available, as shown in the following table.

Card removal tool for	Apparatus code	Common product code
3—4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 11 To prepare to remove the faulty card, open the line drawer and follow these substeps:
 - a Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b Push up on the drawer latch with the thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in).
 - d While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1.0 cm (0.5 in) to the right.
 - e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
 - f Ensure a card shroud and line card extractor are available.
- 12 Remove the line card to be replaced by following these substeps:
 - a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
 - c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer to steady it using your left hand.

NTBX36**in an RSC-S (DS-1) Model A LCME** (continued)

- e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
- f Continue pulling the card with the extractor until the card is clear of the shroud.
- g Insert the card removed into the ESD container and store using local procedures.
- 13 Replace the faulty card by following these substeps:
 - a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
 - f Close the line drawer.
- 14 Replace the -48V, +5V, and +15V fuses (in that order) for the line drawer containing the BIC that was replaced.
- 15 Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 26
other	step 16

At the MAP terminal

- 16 Return the LSGs to service by typing
>RTS DRWR x
 and pressing the Enter key.
>RTS DRWR y
 and pressing the Enter key.
where
 x
 is the first line subgroup busied in step 8
 y
 is the next line subgroup busied in step 8
- 17 Access the PM level of the MAP display and post the first LSG of the line drawer that contains the BIC to be replaced by typing
>MAPCI;MTC;PM;LNS;LTP;POST L site frame_no unit_no lcm_dr
 and pressing the Enter key.

NTBX36

in an RSC-S (DS-1) Model A LCME (continued)

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME unit with the faulty card

lcm_dr

is the number of the drawer with the faulty card

- 18** Return the busied lines in the first LSG to service by typing

>RTS ALL

and pressing the Enter key.

- 19** Post the next LSG of the same line drawer by typing

>NEXT D

and pressing the Enter key.

- 20** Repeat steps 18 and 19 until all busied lines in the drawer are returned to service.

- 21** Post the LCME with the LCA shelf containing the replaced card by typing

>PM;POST LCME site frame_no unit_no

and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME unit with the faulty card

- 22** Test the LCME unit by typing

>TST UNIT lcm_unit_no

and pressing the Enter key.

where

lcm_unit_no

is the number of the LCME unit posted in step 21

If TST	Do
passed	step 23
failed	step 26

NTBX36

in an RSC-S (DS-1) Model A LCME (end)

- 23 Return the LCME unit to service by typing

>RTS lcm_unit_no

and pressing the Enter key.

where

lcm_unit_no

is the number of the LCME unit tested in step 22

If RTS	Do
passed	step 24
failed	step 27

- 24 Send any faulty cards for repair according to local procedure.
- 25 Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 28.
- 26 Return to the Alarm Clearing or other procedure that directed you to this procedure. If necessary, go to the point where the faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 27 Obtain further assistance in replacing this card by contacting personnel responsible for a higher level of support.
- 28 You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX36 in an RSC-S (DS-1) Model B LCME

Application

Use this procedure to replace an NTBX36 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX36	BA	Bus Interface Card (BIC)

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX36 in an RSC-S (DS-1) Model B LCME (continued)

Summary of card replacement procedure for an NTBX36 card in RSC-S LCME

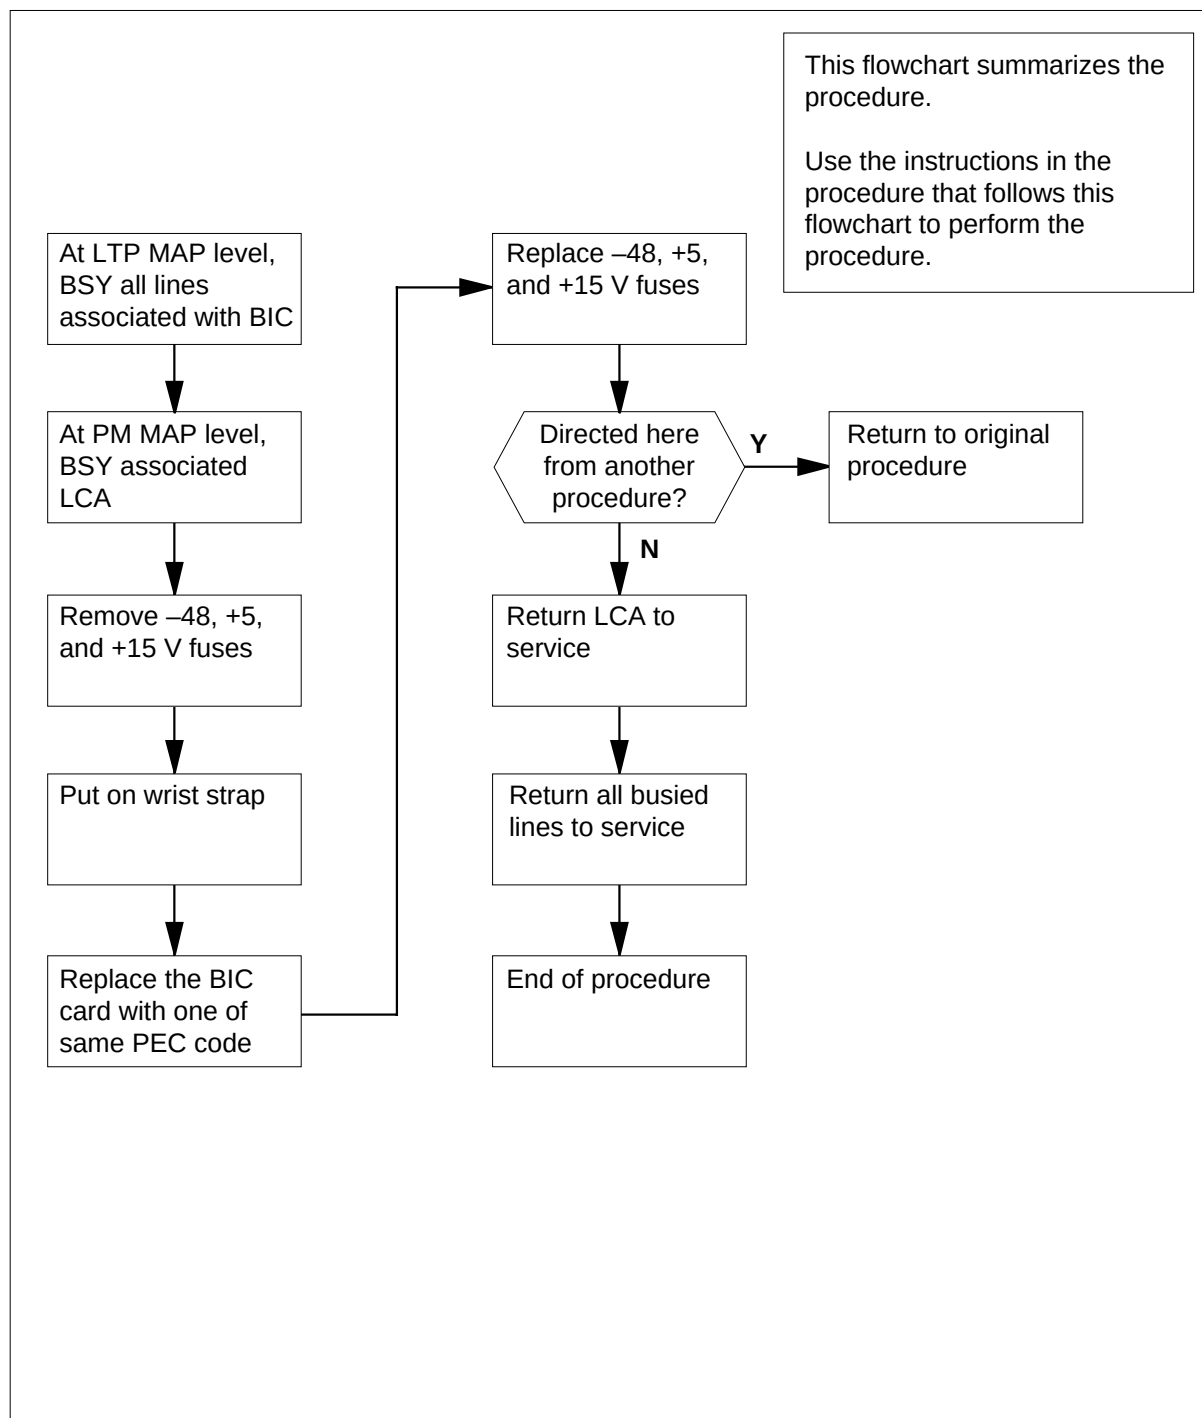

NTBX36

in an RSC-S (DS-1) Model B LCME (continued)

Replacing an NTBX36 card in RSC-S LCME

At your Current Location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or were directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Ensure that the replacement card has the same product equipment code (PEC) including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Access the LTP level and post the first line subgroup (LSG) of the line drawer that contains the bus interface card (BIC) to be replaced by typing

```
>MAPCI;MTC;LNS;LTP;POST L site frame_no unit_no lcm_dr
LSG
```

and pressing the Enter key.

where

site
is the name of the site at which the LCME is located

frame_no
is the number of the frame in which the LCME is located

unit_no
is the number of the LCME unit with the faulty card

lcm_dr
is the number of the drawer with the faulty card

- 4 Busy all lines in the first LSG by typing

```
>BSY ALL
```

 and pressing the Enter key.
- 5 Post the next LSG of the same line drawer by typing

```
>NEXT D
```

and pressing the Enter key.

- 6 Repeat steps 4 and 5 until all LSGs of the same line drawer are busied.
- 7 Post the LCME with the LCA shelf containing the card to be replaced by typing

```
>PM;POST LCME site frame_no unit_no
```

and pressing the Enter key.

where

site
is the name of the site at which the LCME is located

NTBX36**in an RSC-S (DS-1) Model B LCME** (continued)**frame_no**

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME unit with the faulty card

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	130	
2 Post_	LCME		0	0	0	0	0	0	
3									
4 SwRg		LCME	Reml	00	0	ISTb	Links_00S:	CSide	1
5 TrnsL		Unit0:	InSV				/RG:	0	
6 Tst		Unit1:	InSv				/RG:	0	
7 Bsy					11	11	11	RG:Pref	0 InSv
8 RTS		Drwr:	01 23 45 67 89	01 23 45				Stby:1	InSv
9 OffL									
10 LoadPM									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16									
17									
18									

- 8 Busy all LSGs associated with the LCME drawer in which the card is being replaced by typing

>BSY DRWR x

and pressing the Enter key.

>BSY DRWR y

and pressing the Enter key.

>BSY DRWR z

and pressing the Enter key.

where

x

is the first line subgroup

y

is the next line subgroup

z

is the next line subgroup (if an LCMI)

Example of a MAP response:

Please confirm ("YES" or "NO")

NTBX36
in an RSC-S (DS-1) Model B LCME (continued)

- 9 Confirm the busied LSGs by typing
 >YES
 and pressing the Enter key.
 Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	1	0	0	0	0	130	
2 Post_	LCME	0	1	0	0	0	0	0	
3									
4 SwRg	LCME	RemL	00 0	ISTb	Links_00S:	CSide	1		
5 Trnsl	Unit 0:	InSv			/RG:	0			
6 Tst	Unit 1:	InSv			/RG:	0			
7 Bsy				11 11 11	RG:Pref	0 InSv			
8 RTS	Drwr:	01 23 45 46 67 89 01 23 45			Stby:1	InSv			
9 OffL		 MM							
10 LoadPM									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16									
17									
18									

NTBX36 in an RSC-S (DS-1) Model B LCME (continued)

At the LCE frame

10



WARNING

Card damage—transport

Take the following precautions to protect circuit cards from electrical and mechanical damage during transport.

When handling a circuit card not in an electrostatic discharge (ESD) protective container, stand on a conductive floor mat and wear a wriststrap connected, through a 1-megohm resistor, to a suitably grounded object, such as a metal workbench or a DMS switch frame (Northern Telecom [Nortel] Corporate Standard 5028). Store and transport circuit cards in an ESD protective container.



WARNING

Static electricity damage

Before removing any cards, put on a wriststrap and connect it to the wriststrap grounding point on the left side of the modular supervisory panel (MSP) of the LCME. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.



DANGER

Hot materials

Exercise care when handling the line card. The line feed resistor may be very hot.

NTBX36

in an RSC-S (DS-1) Model B LCME (continued)

**CAUTION****Special tools required**

Card shrouds and removal tools are required for removing cards from the line drawers.

Remove the -48V, +5V, and +15V fuses (in that order) for the line drawer containing the BIC to be replaced.

Put on a wriststrap.

Note: Card shrouds are required for inserting or removing cards in line drawers. Two sizes are available for use with 3-inch and 6-inch cards, as shown in the following table.

Line card insertion / withdrawal tool for	Apparatus code	Common product code
3-inch cards	QTH56A	A0298291
6-inch cards	QTH58A	A0313317

Note: Card removal tools are required for removing cards from line drawers. Two sizes are available, as shown in the following table.

Card removal tool for	Apparatus code	Common product code
3—4 inch cards	QTH57A	A0298292
Note: For 4-inch or larger cards, use the large grip tool ITA9953.		

- 11** To prepare to remove the faulty card, open the line drawer and follow these substeps:
- a** Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
 - b** Push up on the drawer latch with the thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
 - c** Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in).
 - d** While holding the drawer in this position, push the bottom of the drawer, nearest the shelf with your left hand, to a position about 1.0 cm (0.5 in) to the right.

NTBX36

in an RSC-S (DS-1) Model B LCME (continued)

- e Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
 - f Ensure a card shroud and line card extractor are available.
- 12 Remove the line card to be replaced by following these substeps:
 - a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
 - b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
 - c Squeeze the handles of the extractor together to grasp the card tightly.
 - d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 13 Replace the faulty card by following these substeps:
 - a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
 - f Close the line drawer.
- 14 Replace the -48V, +5V, and +15V fuses (in that order) for the line drawer containing the BIC that was replaced.
- 15 Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 26
other	step 16

NTBX36
in an RSC-S (DS-1) Model B LCME (continued)

At the MAP terminal

- 16** Return the LSGs to service by typing
>RTS DRWR x
and pressing the Enter key.
>RTS DRWR y
and pressing the Enter key.
where
x
is the first line subgroup busied in step 8
y
is the next line subgroup busied in step 8
- 17** Access the PM level of the MAP display and post the first LSG of the line drawer that contains the BIC to be replaced by typing
>MAPCI;MTC;PM;LNS;LTP;POST L site frame_no unit_no lcm_dr
and pressing the Enter key.
where
site
is the name of the site at which the LCME is located
frame_no
is the number of the frame in which the LCME is located
unit_no
is the number of the LCME unit with the faulty card
lcm_dr
is the number of the drawer with the faulty card
- 18** Return the busied lines in the first LSG to service by typing
>RTS ALL
and pressing the Enter key.
- 19** Post the next LSG of the same line drawer by typing
>NEXT D
and pressing the Enter key.
- 20** Repeat steps 18 and 19 until all busied lines in the drawer are returned to service.
- 21** Post the LCME with the LCA shelf containing the replaced card by typing
>PM;POST LCME site frame_no unit_no
and pressing the Enter key.
where
site
is the name of the site at which the LCME is located

NTBX36

in an RSC-S (DS-1) Model B LCME (end)

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME unit with the faulty card

22 Test the LCME unit by typing

>TST UNIT lcm_unit_no

and pressing the Enter key.

where

lcm_unit_no

is the number of the LCME unit posted in step 21

If TST	Do
passed	step 23
failed	step 26

23 Return the LCME unit to service by typing

>RTS lcm_unit_no

and pressing the Enter key.

where

lcm_unit_no

is the number of the LCME unit tested in step 22

If RTS	Do
passed	step 24
failed	step 27

24 Send any faulty cards for repair according to local procedure.

25 Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 28.

26 Return to the alarm clearing or other procedure that directed you to this procedure. If necessary, go to the point where the faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.

27 Obtain further assistance in replacing this card by contacting personnel responsible for a higher level of support.

28 You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

**NTBX72
in an RSC LCME**

Application

Use this procedure to replace an NTBX72 card in an RSCE LCME.

PEC	Suffixes	Name
NTBX72	AA	ISDN LCME Battery and Ring Router

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX72 in an RSC LCME (continued)

Summary of card replacement procedure for an NTBX72 card in an RSCE LCME

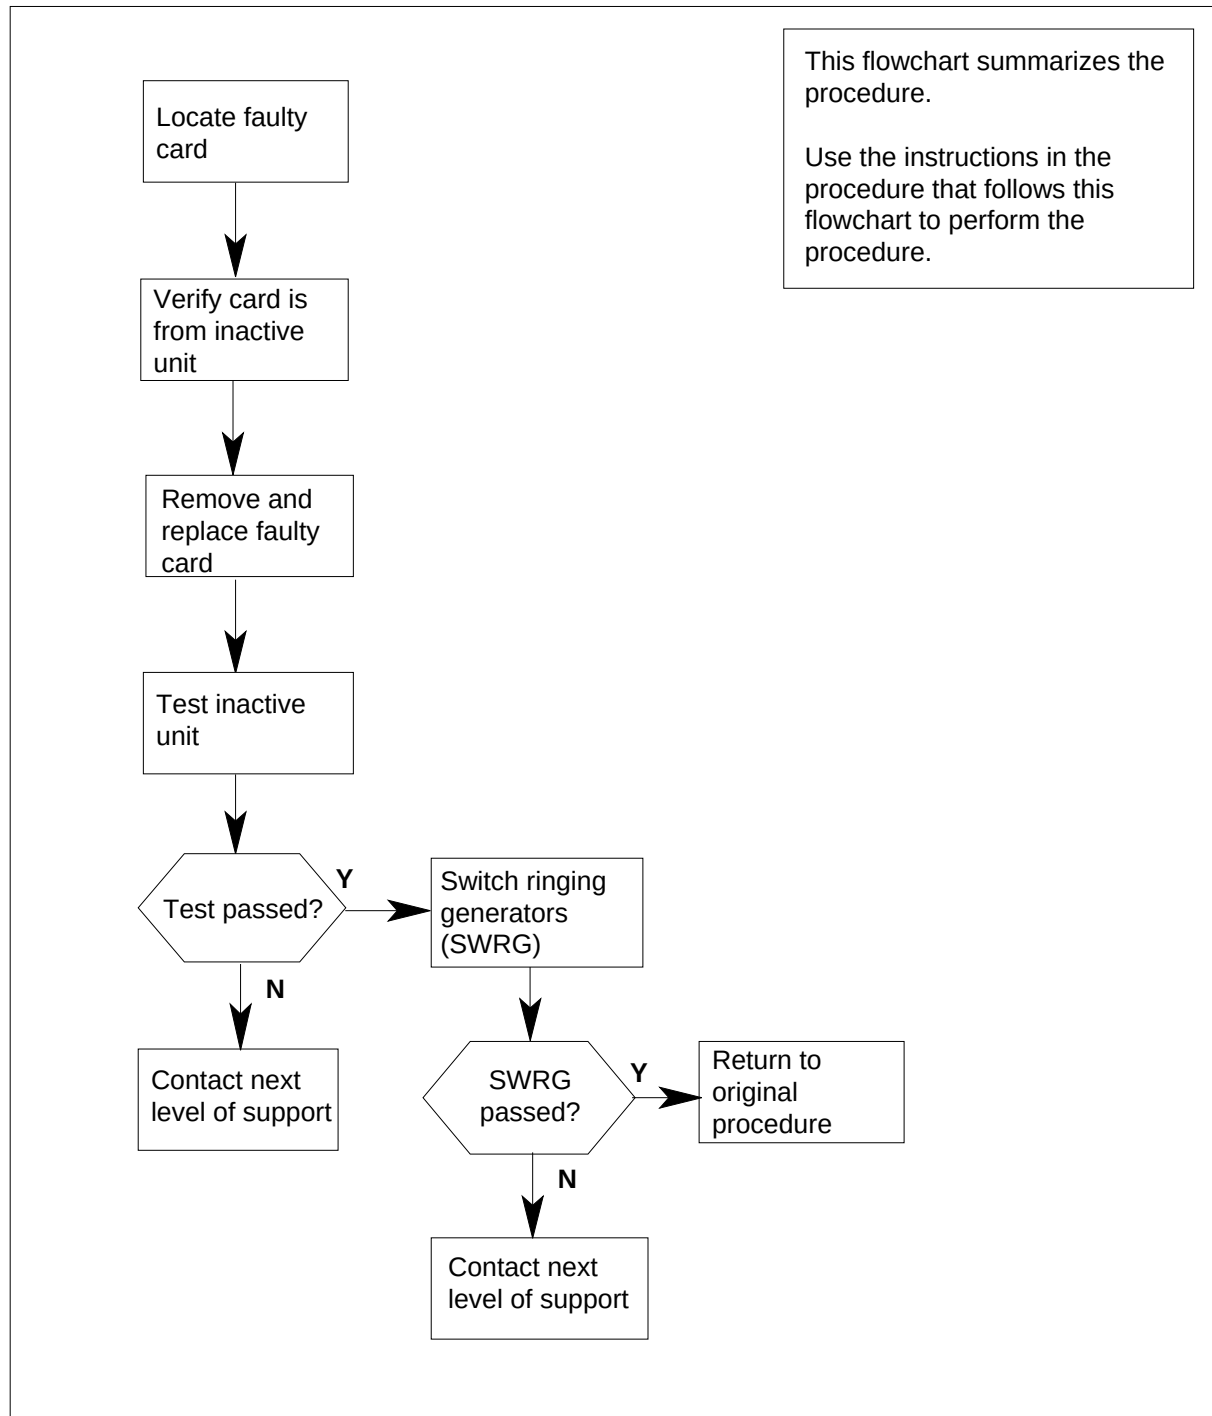

NTBX72 **in an RSC LCME (continued)**

Replacing an NTBX72 card in an RSCE LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX72 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Set the MAP display to the PM level and post the LCME by typing
>MAPCI;MTC;PM;POST LCME site frame_no unit_no
and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME with the faulty card

Example of a MAP display:

NTBX72
in an RSC LCME (continued)

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		1	0	2	0	2	12	
2 Post_	LCME		0	0	2	0	2	9	
3 ListSet									
4 SwRG	LCME	RSCE	14	1	ISTb	Links_00S:	CSide	0	PSide
5 Trnsl_	Unit0:	InSv				/RG: 1			
6 Tst_	Unit1:	InSv				/RG: 1			
7 Bsy_					11	11	11	11	RG:Pref 1
8 RTS_	Drwr:	01	23	45	67	89	01	23	45
9 OffL									67
10 LoadPM_									89
11 Disp_									Stby 0
12 Next									InSv
13									
14 QueryPM									
15									
16									
17									
18									

- 4 Check for fault indicators by typing
>QUERYPM FLT
and pressing the Enter key.
Example of a MAP display:

NTBX72
in an RSC LCME (continued)

CM	MS	IOD	Net	PM	CC	Lns	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	1	0	2	0	2	12		
2 Post_	LCME	0	0	2	0	2	9		
3 ListSet									
4 SWRG	LCME	RSCE	14	1	ISTb	Links_00S:	CSide	0	PSide 0
5 TrnsL_	Unit0:	InSv	Takeover		/RG:	1			
6 Tst_	Unit1:	ISTb			/RG:	1			
7 Bsy_					11	11	11	RG:Pref	1 ISTb
8 RTS_	Drwr:	01	23	45	67	89	01	23	45 Stby 0 InSv
9 OffL		..	..	..	..	..	..	..	..
10 LoadPM_	QUERYPM	FLT							
11 Disp_	Node	inservice	troubles	exist:					
12 Next	One	or both	Units	inservice	trouble				
13	LCME	UNIT	0	Inservice					
14 QueryPM	LCME	UNIT	1	Inservice					
15				Ringing	Generator	1	failure		
16									
17									
18									

- 5 Switch ringing generator activity from the unit with the faulty NTBX72 card by typing
- >SWRG PM**
- and pressing the Enter key.

If SWRG	Do
passed	step 6
failed	step 19

- 6 Busy the LCME unit by typing
- >BSY UNIT lcme_unit_no**
- and pressing the Enter key.
- where
- lcme_unit_no**
- is the number of the LCME unit with the faulty card

NTBX72 in an RSC LCME (continued)

At the RCE

7



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel (FSP) of the LCME. This protects the equipment against damage caused by static electricity.

Put on a wrist strap.

8



DANGER

Equipment damage

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Power down the NT6X53 power converter by setting the POWER switch to the OFF position.

9


Remove the NTBX72 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

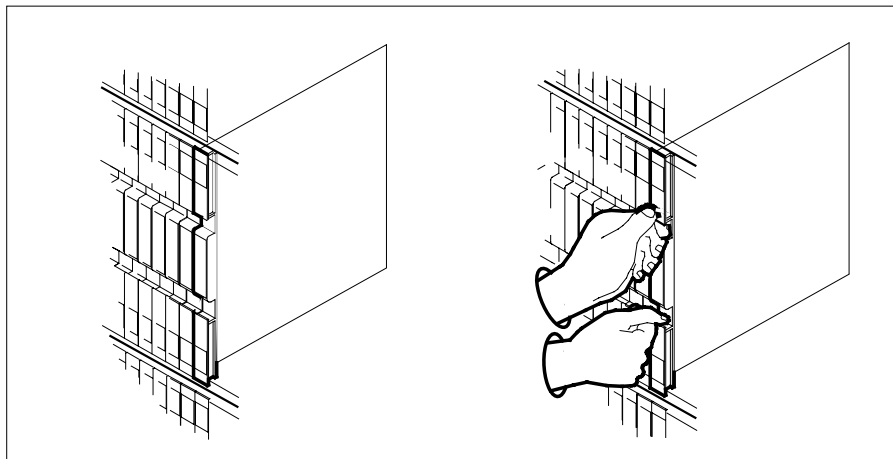

b Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.


NTBX72 in an RSC LCME (continued)

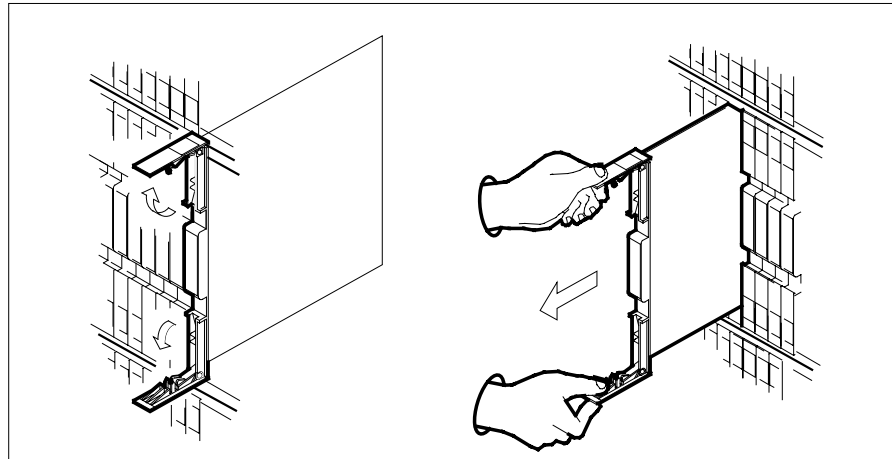

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

10 Open the locking levers on the replacement card.


- a Align the card with the slots in the shelf.
- b Gently slide the card into the shelf.

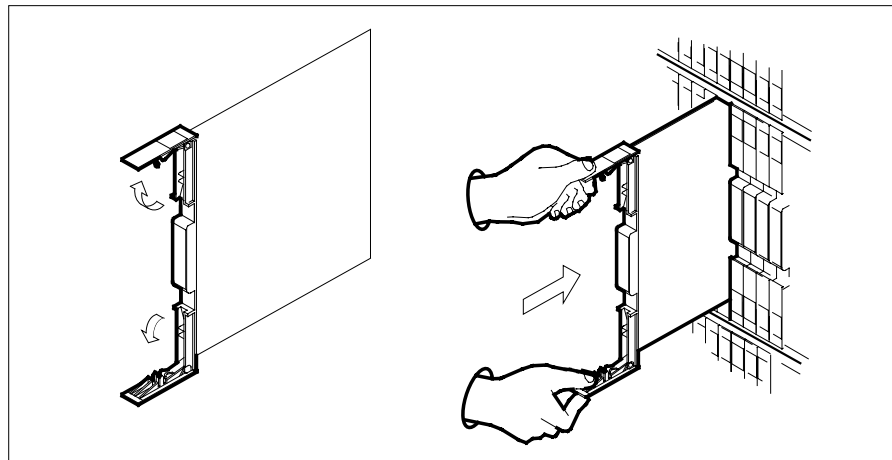

11 Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
- b Close the locking levers.

NTBX72 in an RSC LCME (continued)

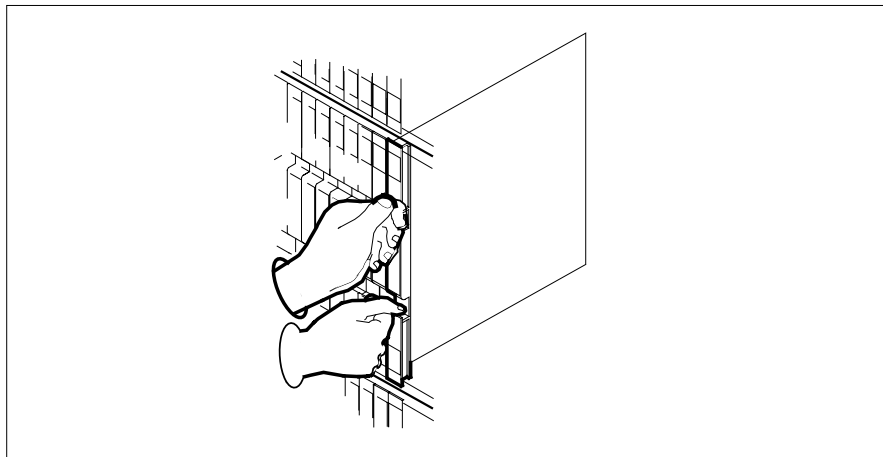

- 12** Power up the LCME unit as follows:
- a** Ensure the power converter (NT6X53) is inserted. A major audible alarm may sound. This alarm is silenced when power is restored to the converter.
 - b** Set the circuit breaker switch to the ON position.
- 13** Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 18
other	step 14

At the MAP terminal

- 14** Return the LCME unit to service by typing
>RTS UNIT lcme_unit_no
and pressing the Enter key.
where
lcme_unit_no
is the number of the LCME unit busied in step 6

If RTS	Do
passed	step 15
failed	step 19

- 15** Switch ringing generator activity to the new NTBX72 card by typing
>SWRG PM

NTBX72
in an RSC LCME (end)

and pressing the Enter key.

If SWRG	Do
passed	step 16
failed	step 19

- 16** Send any faulty cards for repair according to local procedure.
- 17** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 20.
- 18** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 19** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 20** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX72 in an RSC-S (DS-1) Model A LCME

Application

Use this procedure to replace an NTBX72 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX72	AA	ISDN LCME Battery and Ring Router

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX72 in an RSC-S (DS-1) Model A LCME (continued)

Summary of card replacement procedure for an NTBX72 card in an RSC-S LCME

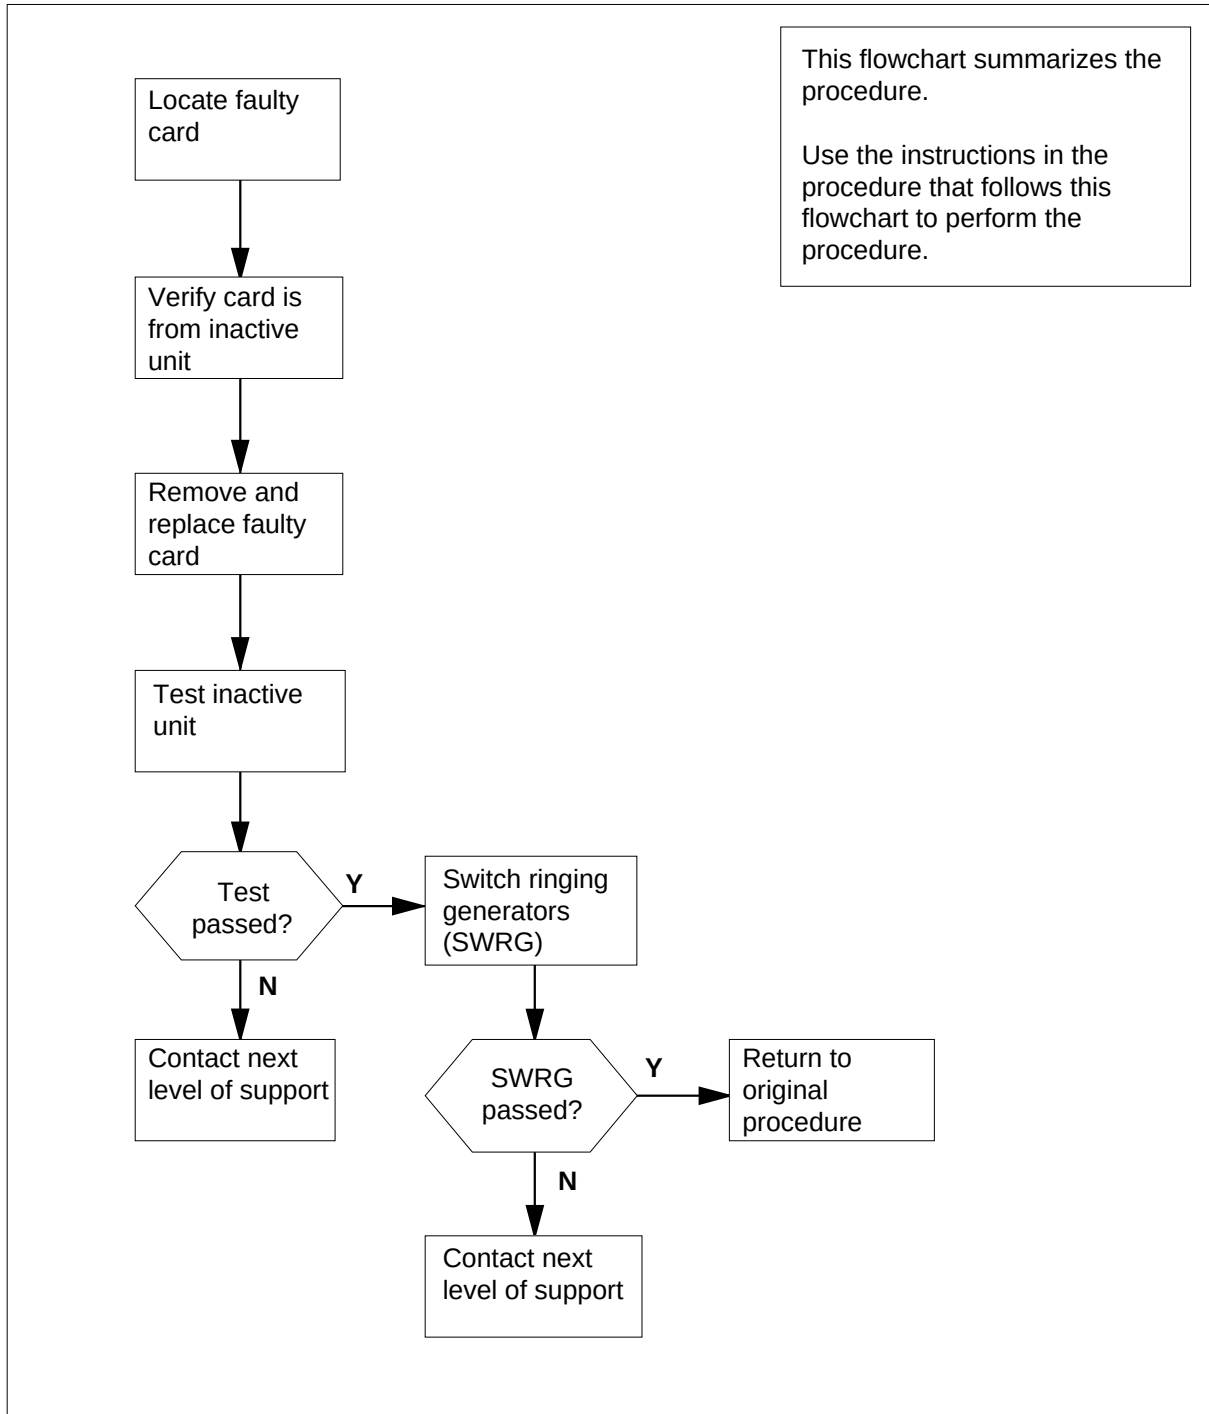

NTBX72

in an RSC-S (DS-1) Model A LCME (continued)

Replacing an NTBX72 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX72 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Set the MAP display to the PM level and post the LCME by typing
>MAPCI;MTC;PM;POST LCME site frame_no unit_no
and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME with the faulty card

Example of a MAP display:

NTBX72
in an RSC-S (DS-1) Model A LCME (continued)

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		1	0	2	0	2	12	
2 Post_	LCME		0	0	2	0	2	9	
3 ListSet									
4 SwRG	LCME	RSC-S	14	1	ISTb	Links_00S:	CSide	0	PSide 0
5 Trnsl_	Unit0:	InSv				/RG: 1			
6 Tst_	Unit1:	InSv				/RG: 1			
7 Bsy_					11	11	11	11	RG:Pref 1 ISTB
8 RTS_	Drwr:	01 23 45 67 89			01	23 45 67 89		Stby 0	InSv
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 Check for fault indicators by typing
>QUERYPM FLT
and pressing the Enter key.
Example of a MAP display:

NTBX72
in an RSC-S (DS-1) Model A LCME (continued)

CM	MS	IOD	Net	PM	CC	Lns	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	1	0	2	0	2	12		
2 Post_	LCME	0	0	2	0	2	9		
3 ListSet									
4 SwRG	LCME	RSC-S 14	1 ISTb	Links_00S:	CSide	0	PSide	0	
5 TrnsL_	Unit0:	InSv	Takeover	/RG:	1				
6 Tst_	Unit1:	ISTb		/RG:	1				
7 Bsy_				11	11	11	RG:Pref	1 ISTb	
8 RTS_	Drwr:	01 23 45 67 89	01 23 45	Stby	0 InSv				
9 OffL									
10 LoadPM_	QUERYPM	FLT							
11 Disp_	Node	inservice	troubles	exist:					
12 Next	One	or both	Units	inservice	trouble				
13	LCME	UNIT 0	Inservice						
14 QueryPM	LCME	UNIT 1	Inservice						
15	Ringing	Generator	1 failure						
16									
17									
18									

- 5
- Switch ringing generator activity from the unit with the faulty NTBX72 card by typing
>SWRG PM
and pressing the Enter key.

If SWRG	Do
passed	step 6
failed	step 20

- 6
- Busy the LCME unit by typing
>BSY UNIT lcme_unit_no
and pressing the Enter key.
where
lcme_unit_no
is the number of the LCME unit with the faulty card

NTBX72
in an RSC-S (DS-1) Model A LCME (continued)

At the RCE

7

**WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel (FSP) of the LCME. This protects the equipment against damage caused by static electricity.

Put on a wrist strap.

8

**DANGER****Equipment damage**

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Power down the NT6X53 power converter by setting the POWER switch to the OFF position.

9


Remove the NTBX72 card as shown in the following figures.

- a** Locate the card to be removed on the appropriate shelf.

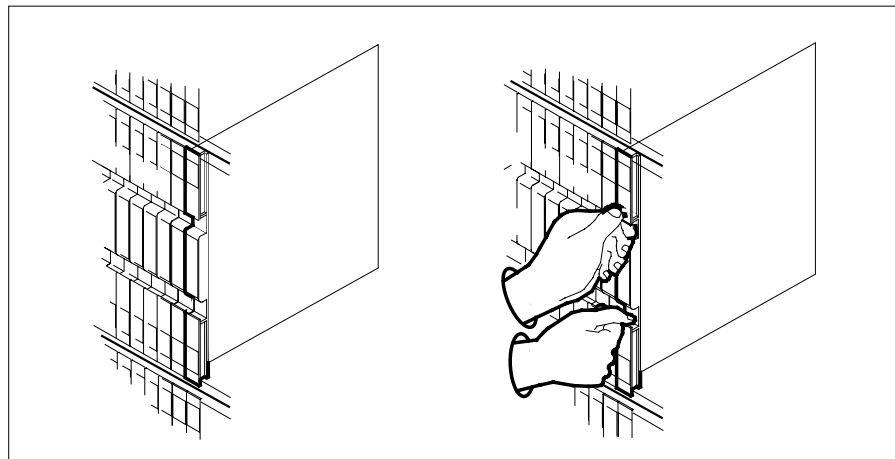

- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.


NTBX72 in an RSC-S (DS-1) Model A LCME (continued)

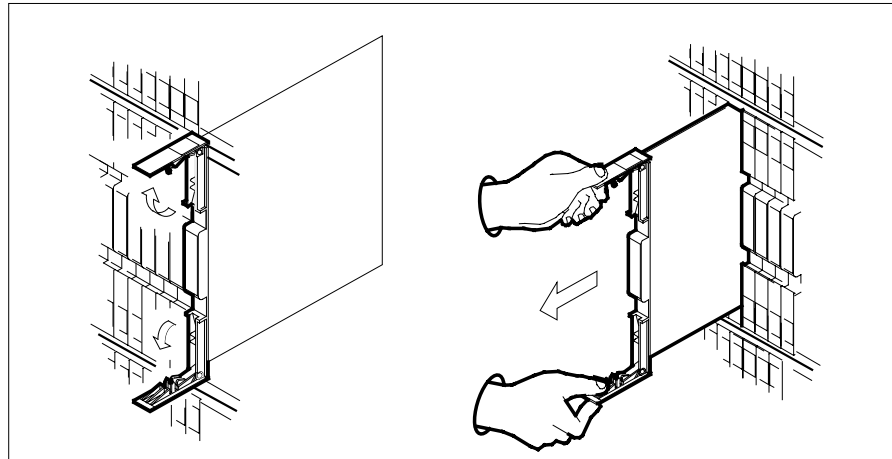

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

10 Open the locking levers on the replacement card.


- a Align the card with the slots in the shelf.
- b Gently slide the card into the shelf.

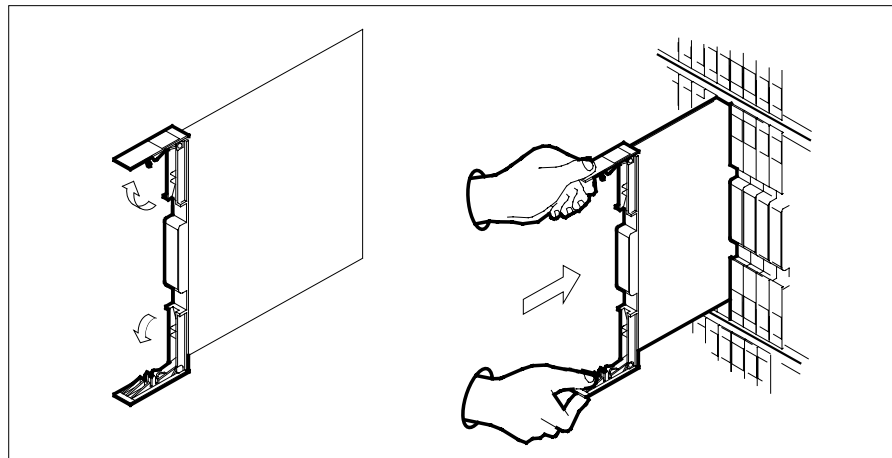

11 Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
- b Close the locking levers.

NTBX72
in an RSC-S (DS-1) Model A LCME (continued)

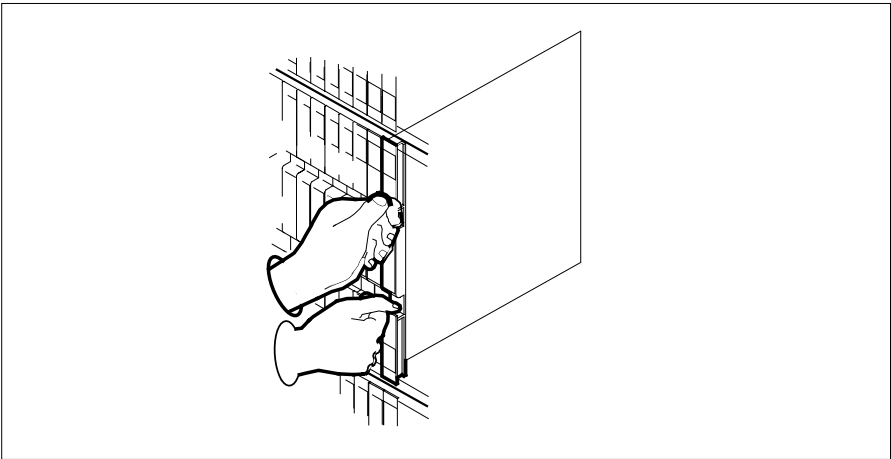

- 12** Power up the LCME unit as follows:
- a** Ensure the power converter (NT6X53) is inserted. A major audible alarm may sound. This alarm is silenced when power is restored to the converter.
 - b** Set the circuit breaker switch to the ON position.
- 13** Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 19
other	step 14

At the MAP terminal

- 14** Test the unit by typing
>TST UNIT lcme_unit_no
and pressing the Enter key.
where
lcme_unit_no
is the number of the LCME unit posted in step 3

If TST	Do
passed	step 15
failed	step 19

- 15** Return the LCME unit to service by typing
>RTS UNIT lcme_unit_no

NTBX72 in an RSC-S (DS-1) Model A LCME (end)

and pressing the Enter key.

where

lcme_unit_no

is the number of the LCME unit tested in step 14

If RTS	Do
passed	step 16
failed	step 20

- 16** Switch ringing generator activity to the new NTBX72 card by typing
>SWRG PM
and pressing the Enter key.

If SWRG	Do
passed	step 17
failed	step 20

- 17** Send any faulty cards for repair according to local procedure.
- 18** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 21.
- 19** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 20** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 21** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX72

in an RSC-S (DS-1) Model B LCME

Application

Use this procedure to replace an NTBX72 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX72	AA	ISDN LCME Battery and Ring Router

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX72 in an RSC-S (DS-1) Model B LCME (continued)

Summary of card replacement procedure for an NTBX72 card in an RSC-S LCME

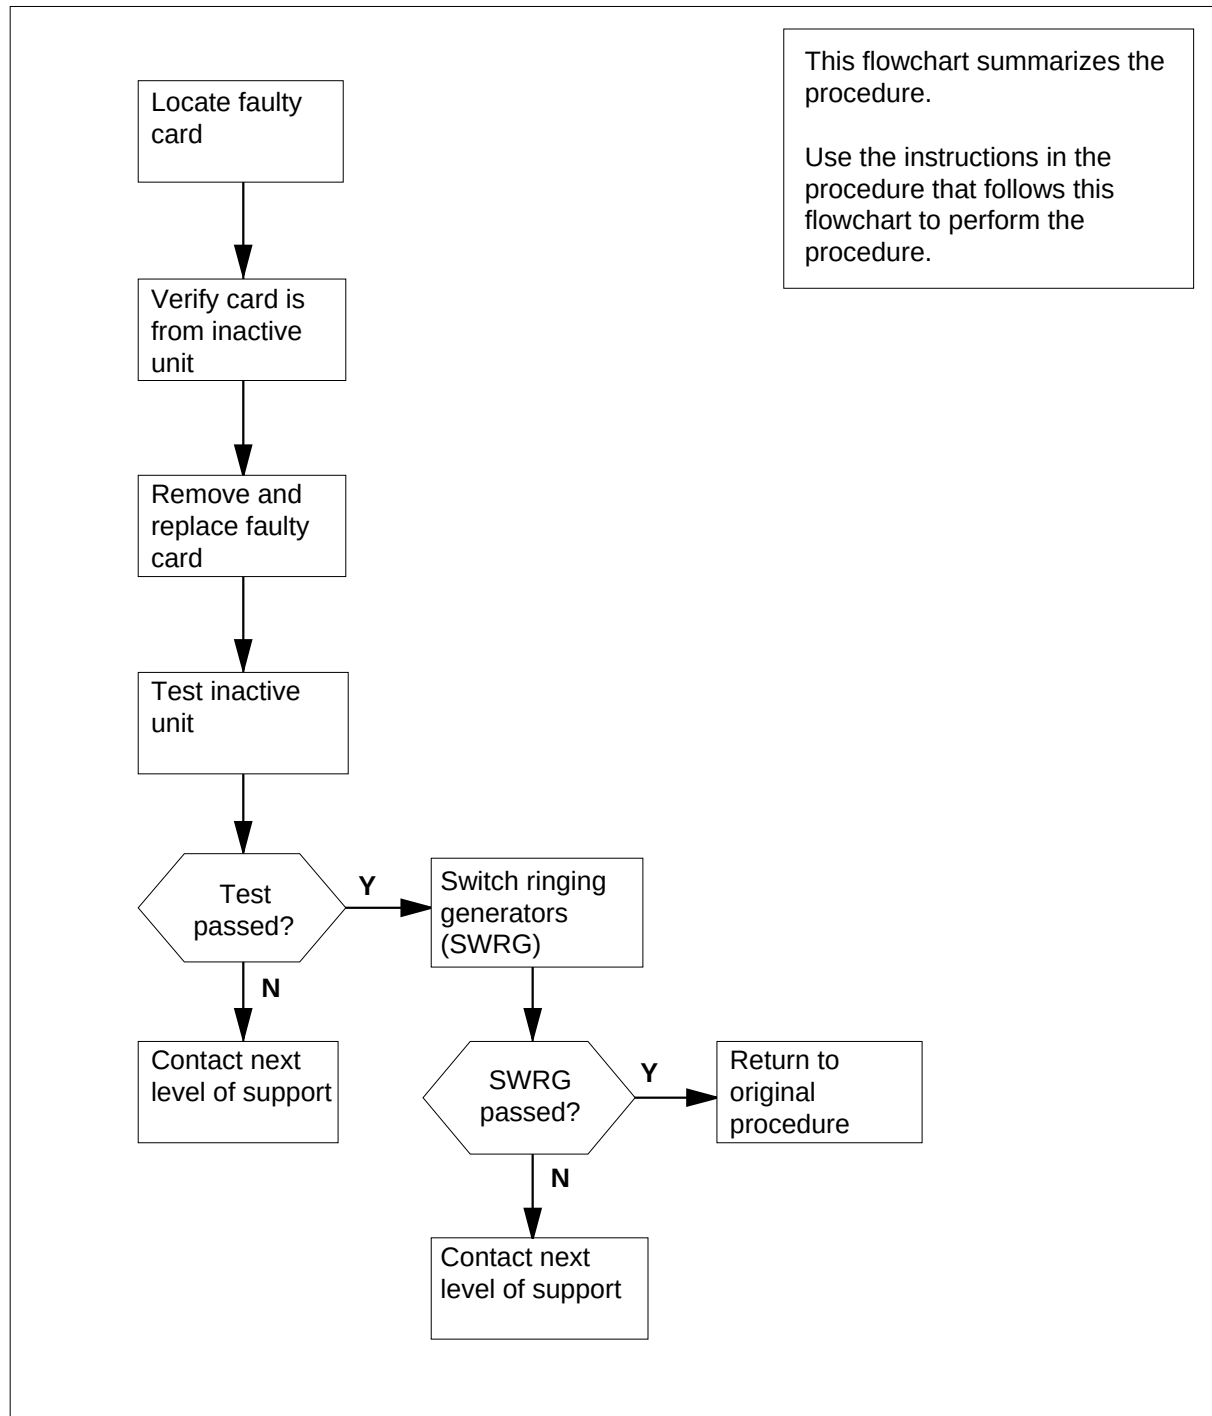

NTBX72

in an RSC-S (DS-1) Model B LCME (continued)

Replacing an NTBX72 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX72 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Set the MAP display to the PM level and post the LCME by typing
>MAPCI;MTC;PM;POST LCME site frame_no unit_no
and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME with the faulty card

Example of a MAP display:

NTBX72
in an RSC-S (DS-1) Model B LCME (continued)

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		1	0	2	0	2	12	
2 Post_	LCME		0	0	2	0	2	9	
3 ListSet									
4 SwRG	LCME	RSC-S	14 1	ISTb	Links_00S:	CSide	0	PSide	0
5 Trnsl_	Unit0:	InSv			/RG: 1				
6 Tst_	Unit1:	InSv			/RG: 1				
7 Bsy_					11 11 11 11 11	RG:Pref	1	ISTB	
8 RTS_	Drwr:	01 23 45 67 89			01 23 45 67 89	Stby	0	InSv	
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 Check for fault indicators by typing
>QUERYPM FLT
and pressing the Enter key.
Example of a MAP display:

NTBX72
in an RSC-S (DS-1) Model B LCME (continued)

CM	MS	IOD	Net	PM	CC	Lns	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME			SysB	ManB	OffL	CBSy	ISTb	InSv	
0 Quit	PM	1	0	2	0	2	12		
2 Post_	LCME	0	0	2	0	2	9		
3 ListSet									
4 SwRG	LCME	RSC-S 14	1 ISTb	Links_00S:	CSide	0	PSide	0	
5 TrnsL_	Unit0:	InSv	Takeover	/RG: 1					
6 Tst_	Unit1:	ISTb		/RG: 1					
7 Bsy_				11	11	11	RG:Pref 1	ISTb	
8 RTS_	Drwr:	01 23 45 67 89	01 23 45				Stby 0	InSv	
9 OffL									
10 LoadPM_	QUERYPM	FLT							
11 Disp_	Node	inservice	troubles	exist:					
12 Next	One or both	Units	inservice	trouble					
13	LCME	UNIT 0	Inservice						
14 QueryPM	LCME	UNIT 1	Inservice						
15	Ringing	Generator 1	failure						
16									
17									
18									

- 5 Switch ringing generator activity from the unit with the faulty NTBX72 card by typing
- >SWRG PM
- and pressing the Enter key.

If SWRG	Do
passed	step 6
failed	step 20

- 6 Busy the LCME unit by typing
- >BSY UNIT lcme_unit_no
- and pressing the Enter key.
- where
- lcme_unit_no
- is the number of the LCME unit with the faulty card

NTBX72 in an RSC-S (DS-1) Model B LCME (continued)

At the RCE

7



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the modular supervisory panel (MSP) of the LCME. This protects the equipment against damage caused by static electricity.

Put on a wrist strap.

8



DANGER

Equipment damage

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Power down the NT6X53 power converter by setting the POWER switch to the OFF position.

9


Remove the NTBX72 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

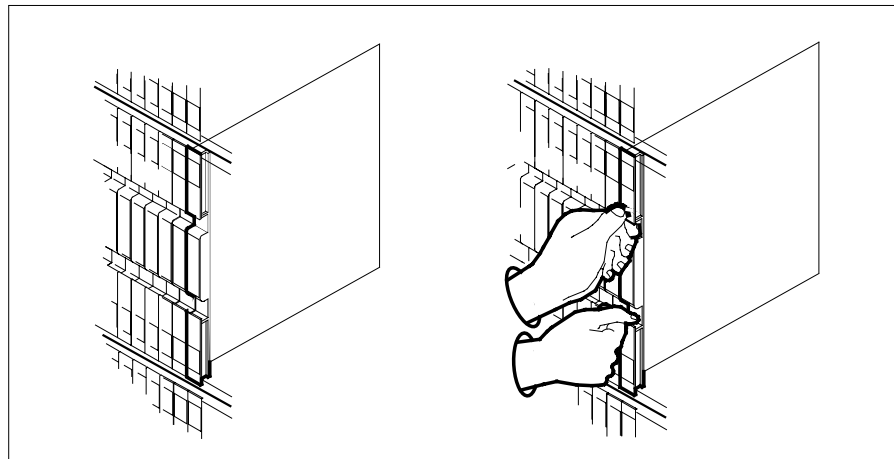

b Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.


NTBX72
in an RSC-S (DS-1) Model B LCME (continued)

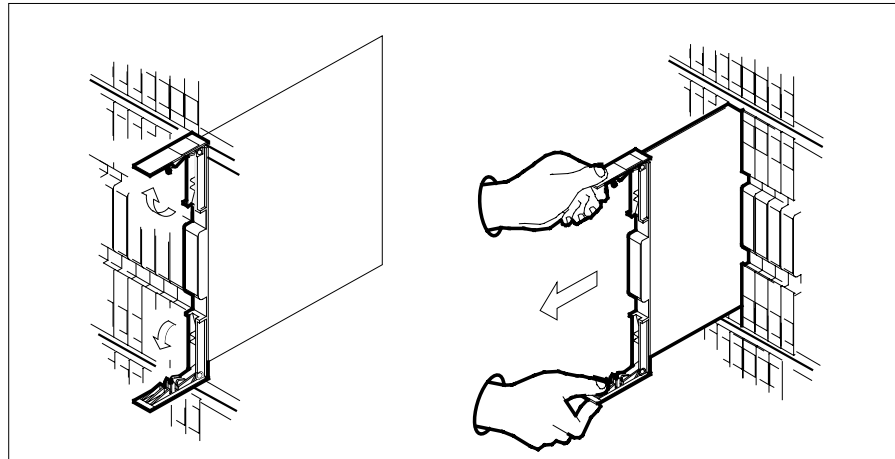

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

10 Open the locking levers on the replacement card.

- a Align the card with the slots in the shelf.
b Gently slide the card into the shelf.

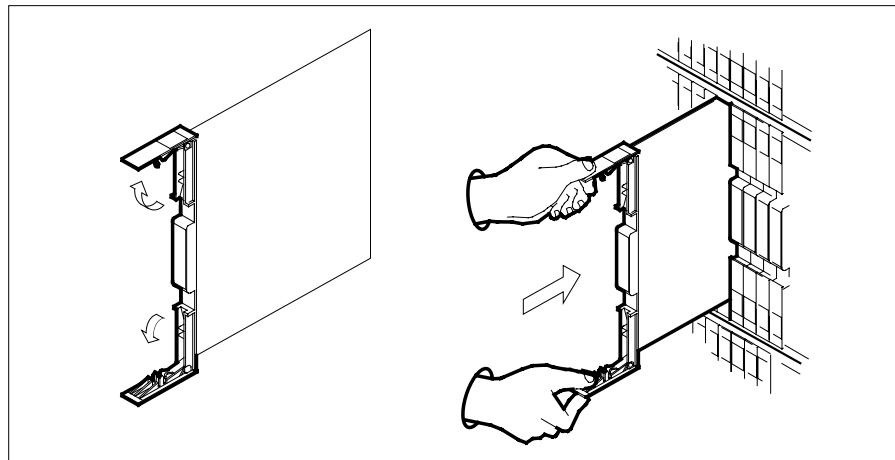


11 Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
b Close the locking levers.

NTBX72

in an RSC-S (DS-1) Model B LCME (continued)

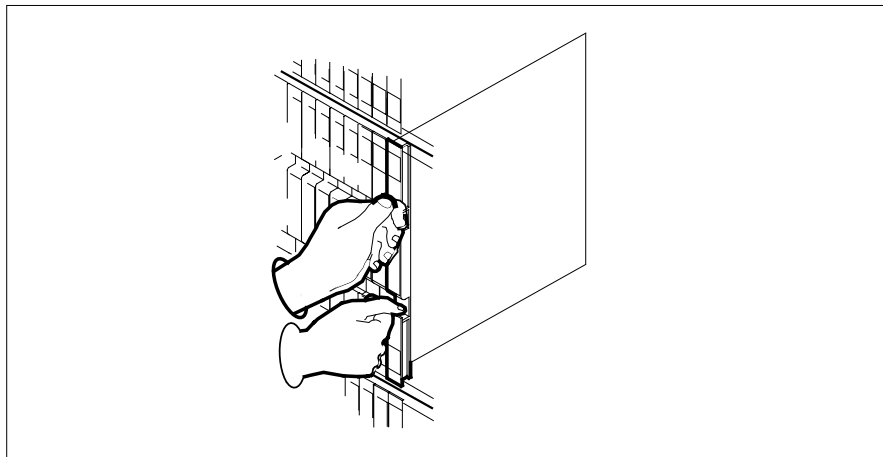

- 12** Power up the LCME unit as follows:
- a** Ensure the power converter (NT6X53) is inserted. A major audible alarm may sound. This alarm is silenced when power is restored to the converter.
 - b** Set the circuit breaker switch to the ON position.
- 13** Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 19
other	step 14

At the MAP terminal

- 14** Test the unit by typing
- ```
>TST UNIT lcme_unit_no
```
- and pressing the Enter key.
- where
- lcme\_unit\_no**  
is the number of the LCME unit posted in step 3

| If TST | Do      |
|--------|---------|
| passed | step 15 |
| failed | step 19 |

- 15** Return the LCME unit to service by typing
- ```
>RTS UNIT lcme_unit_no
```

NTBX72

in an RSC-S (DS-1) Model B LCME (end)

and pressing the Enter key.

where

lcme_unit_no

is the number of the LCME unit tested in step 14

If RTS	Do
passed	step 16
failed	step 20

- 16** Switch ringing generator activity to the new NTBX72 card by typing
>SWRG PM
 and pressing the Enter key.

If SWRG	Do
passed	step 17
failed	step 20

- 17** Send any faulty cards for repair according to local procedure.
- 18** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 21.
- 19** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 20** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 21** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTBX72 in an RSC-S (PCM-30) Model A LCME

Application

Use this procedure to replace an NTBX72 card in an RSC-S LCME.

PEC	Suffixes	Name
NTBX72	AA	ISDN LCME Battery and Ring Router

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTBX72 in an RSC-S (PCM-30) Model A LCME (continued)

Summary of card replacement procedure for an NTBX72 card in an RSC-S LCME

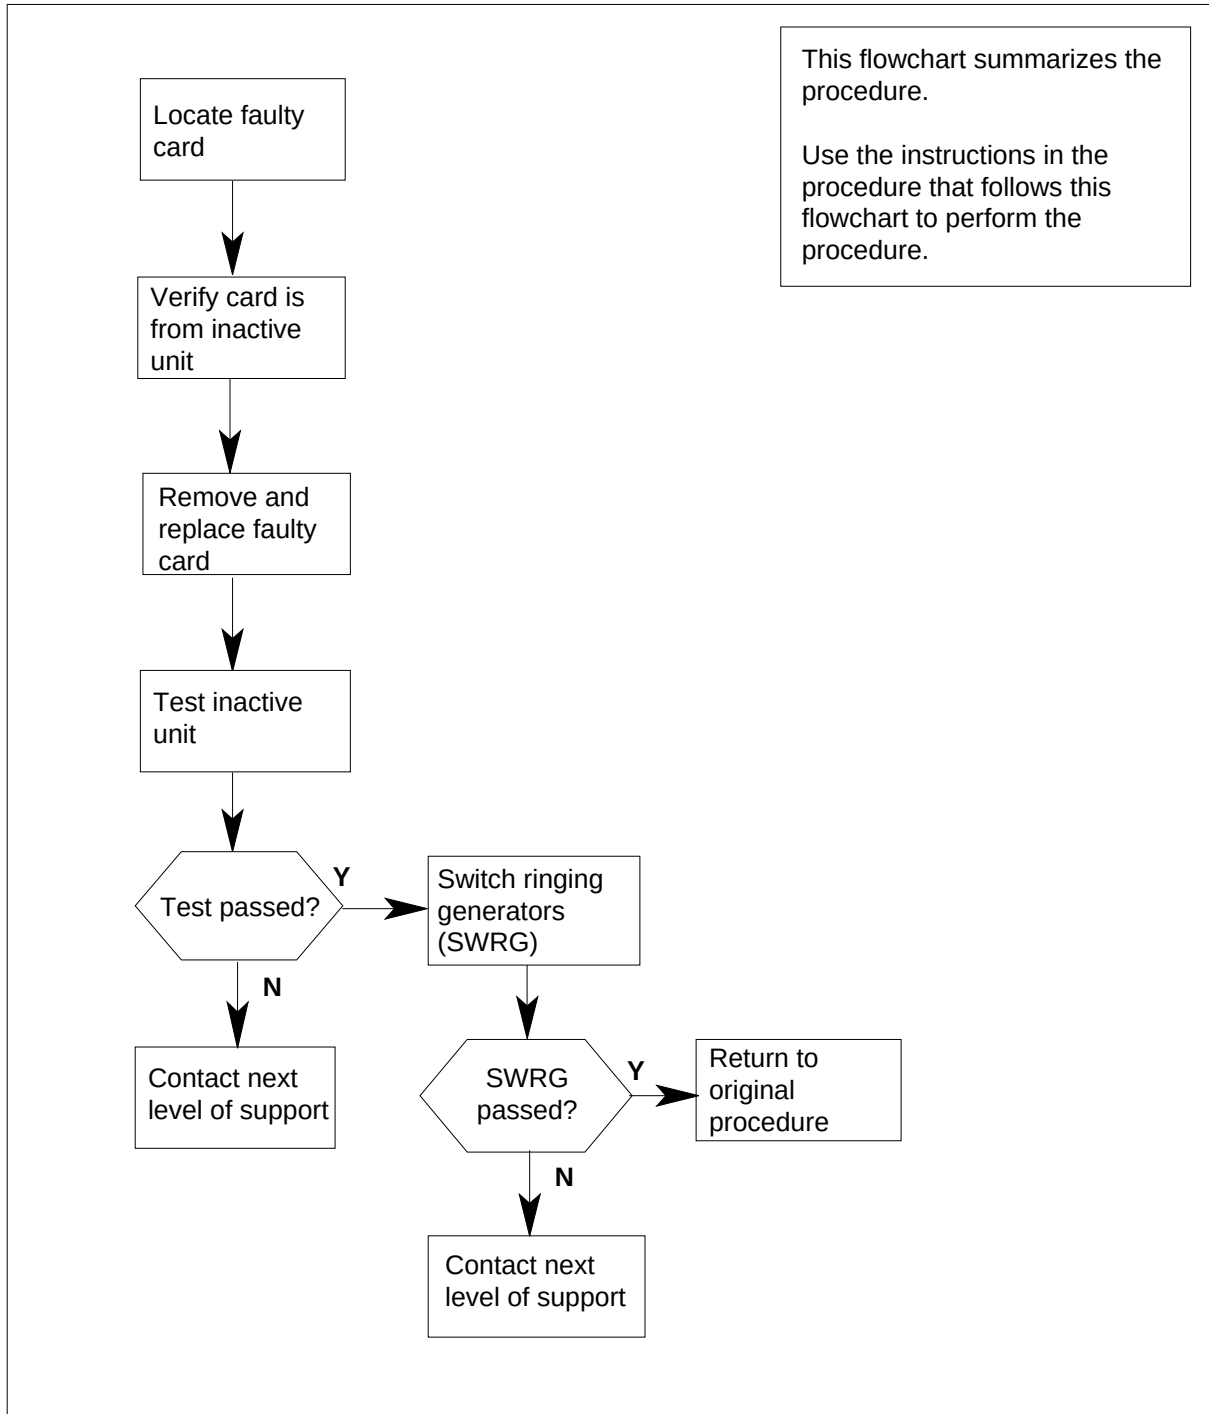

NTBX72

in an RSC-S (PCM-30) Model A LCME (continued)

Replacing an NTBX72 card in an RSC-S LCME

At your Current Location

- 1** Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2** Obtain an NTBX72 replacement card. Ensure the replacement card has the same product equipment code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3** Set the MAP display to the PM level and post the LCME by typing
>MAPCI;MTC;PM;POST LCME site frame_no unit_no
and pressing the Enter key.

where

site

is the name of the site at which the LCME is located

frame_no

is the number of the frame in which the LCME is located

unit_no

is the number of the LCME with the faulty card

Example of a MAP display:

NTBX72
in an RSC-S (PCM-30) Model A LCME (continued)

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		1	0	2	0	2	12	
2 Post_	LCME		0	0	2	0	2	9	
3 ListSet									
4 SwRG	LCME	RSC-S	14	1	ISTb	Links_00S:	CSide	0	PSide 0
5 Trnsl_	Unit0:	InSv				/RG: 1			
6 Tst_	Unit1:	InSv				/RG: 1			
7 Bsy_					11	11	11	11	RG:Pref 1 ISTB
8 RTS_	Drwr:	01	23	45	67	89	01	23	45 67 89 Stby 0 InSv
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 Check for fault indicators by typing
>QUERYPM FLT
and pressing the Enter key.
Example of a MAP display:

NTBX72
in an RSC-S (PCM-30) Model A LCME (continued)

CM	MS	IOD	Net	PM	CC	Lns	Trks	Ext	Appl
.	.	.	.	1LCME	.	.	.	.	.
LCME			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	1	0	2	0	2	12		
2 Post_	LCME	0	0	2	0	2	9		
3 ListSet									
4 SWRG	LCME	RSC-S 14	1 ISTb	Links_00S:	CSide	0	PSide	0	
5 TrnsL_	Unit0:	InSv	Takeover	/RG:	1				
6 Tst_	Unit1:	ISTb		/RG:	1				
7 Bsy_				11	11	11	RG:Pref	1 ISTb	
8 RTS_	Drwr:	01 23	45 67	89	01 23	45	Stby	0 InSv	
9 OffL									
10 LoadPM_	QUERYPM	FLT							
11 Disp_	Node	inservice	troubles	exist:					
12 Next	One	or both	Units	inservice	trouble				
13	LCME	UNIT 0	Inservice						
14 QueryPM	LCME	UNIT 1	Inservice						
15			Ringing	Generator 1	failure				
16									
17									
18									

- 5 Switch ringing generator activity from the unit with the faulty NTBX72 card by typing
- >SWRG PM
- and pressing the Enter key.

If SWRG	Do
passed	step 6
failed	step 20

- 6 Busy the LCME unit by typing
- >BSY UNIT lcme_unit_no
- and pressing the Enter key.
- where
- lcme_unit_no
- is the number of the LCME unit with the faulty card

NTBX72 in an RSC-S (PCM-30) Model A LCME (continued)

At the RCE

7



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel (FSP) of the LCME. This protects the equipment against damage caused by static electricity.

Put on a wrist strap.

8



DANGER

Equipment damage

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Power down the NT6X53 power converter by setting the POWER switch to the OFF position.

9


Remove the NTBX72 card as shown in the following figures.

a Locate the card to be removed on the appropriate shelf.

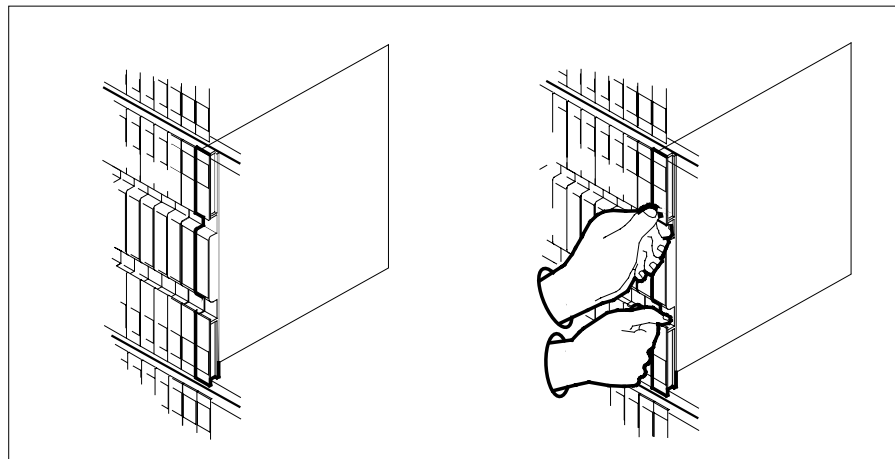

b Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.


NTBX72 in an RSC-S (PCM-30) Model A LCME (continued)

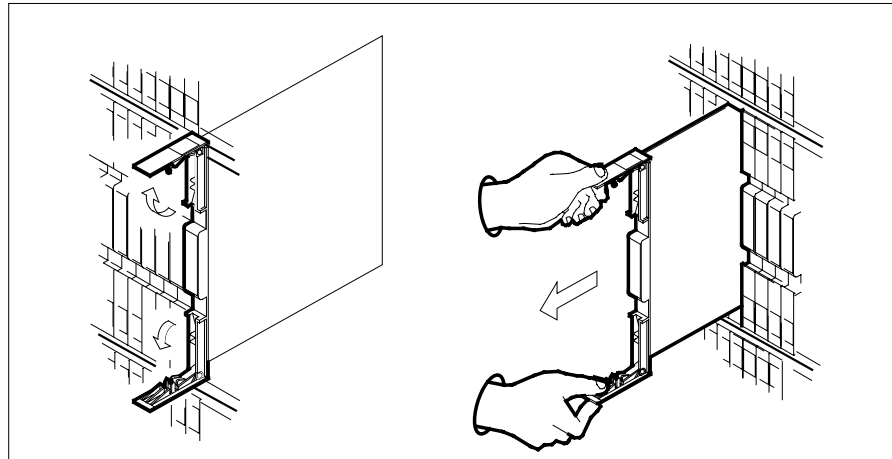

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

10 Open the locking levers on the replacement card.


- a Align the card with the slots in the shelf.
- b Gently slide the card into the shelf.

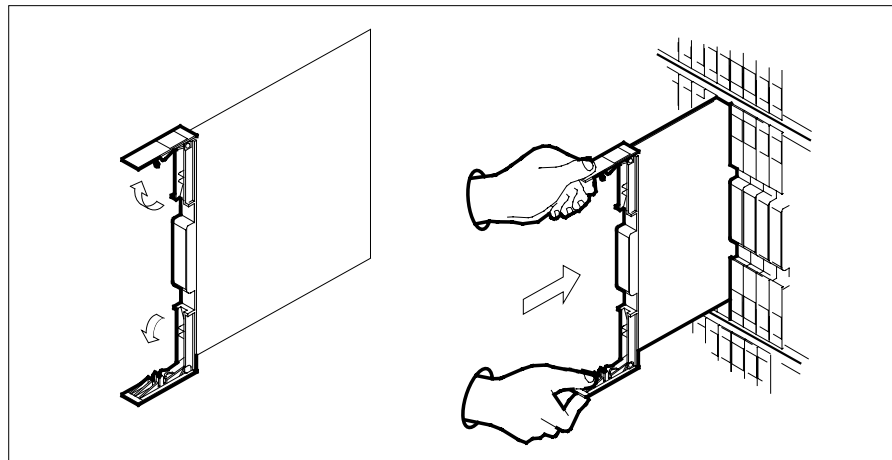

11 Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
- b Close the locking levers.

NTBX72
in an RSC-S (PCM-30) Model A LCME (continued)

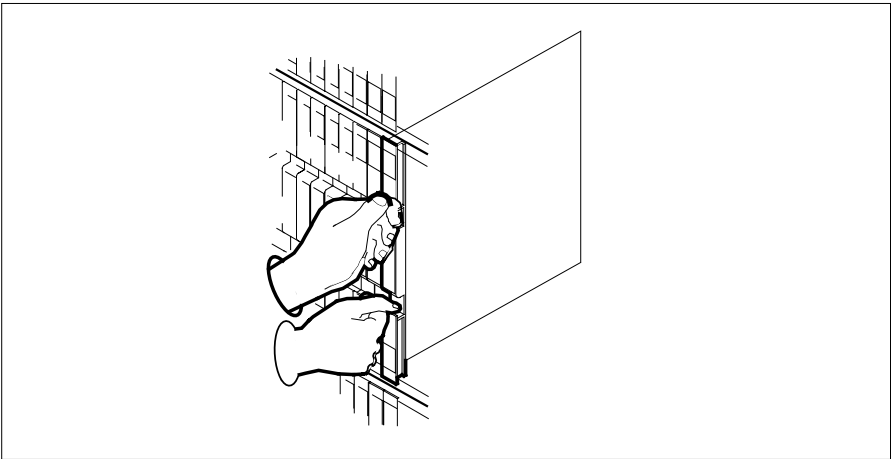

- 12** Power up the LCME unit as follows:
- a** Ensure the power converter (NT6X53) is inserted. A major audible alarm may sound. This alarm is silenced when power is restored to the converter.
 - b** Set the circuit breaker switch to the ON position.
- 13** Use the following information to determine the next step in this procedure.

If you entered this procedure from	Do
alarm clearing procedures	step 19
other	step 14

At the MAP terminal

- 14** Test the unit by typing
- ```
>TST UNIT lcme_unit_no
```
- and pressing the Enter key.
- where
- lcme\_unit\_no**  
is the number of the LCME unit posted in step 3

| If TST | Do      |
|--------|---------|
| passed | step 15 |
| failed | step 19 |

- 15** Return the LCME unit to service by typing
- ```
>RTS UNIT lcme_unit_no
```

NTBX72

in an RSC-S (PCM-30) Model A LCME (end)

and pressing the Enter key.

where

lcme_unit_no

is the number of the LCME unit tested in step 14

If RTS	Do
passed	step 16
failed	step 20

- 16** Switch ringing generator activity to the new NTBX72 card by typing
>SWRG PM
and pressing the Enter key.

If SWRG	Do
passed	step 17
failed	step 20

- 17** Send any faulty cards for repair according to local procedure.
- 18** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 21.
- 19** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 20** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 21** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

**NTEX17
in an RLCM**

Application

Use this procedure to replace the following card in an RLCM line drawer.

PEC	Suffixes	Name
NTEX17	AA	xDSL line card
NTEX17	BA	xDSL line card
NTEX17	CA	xDSL line card
NTEX17	DA	xDSL line card

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTEX17 in an RLCM (continued)

Summary of replacing an NTEX17 in an RLCM

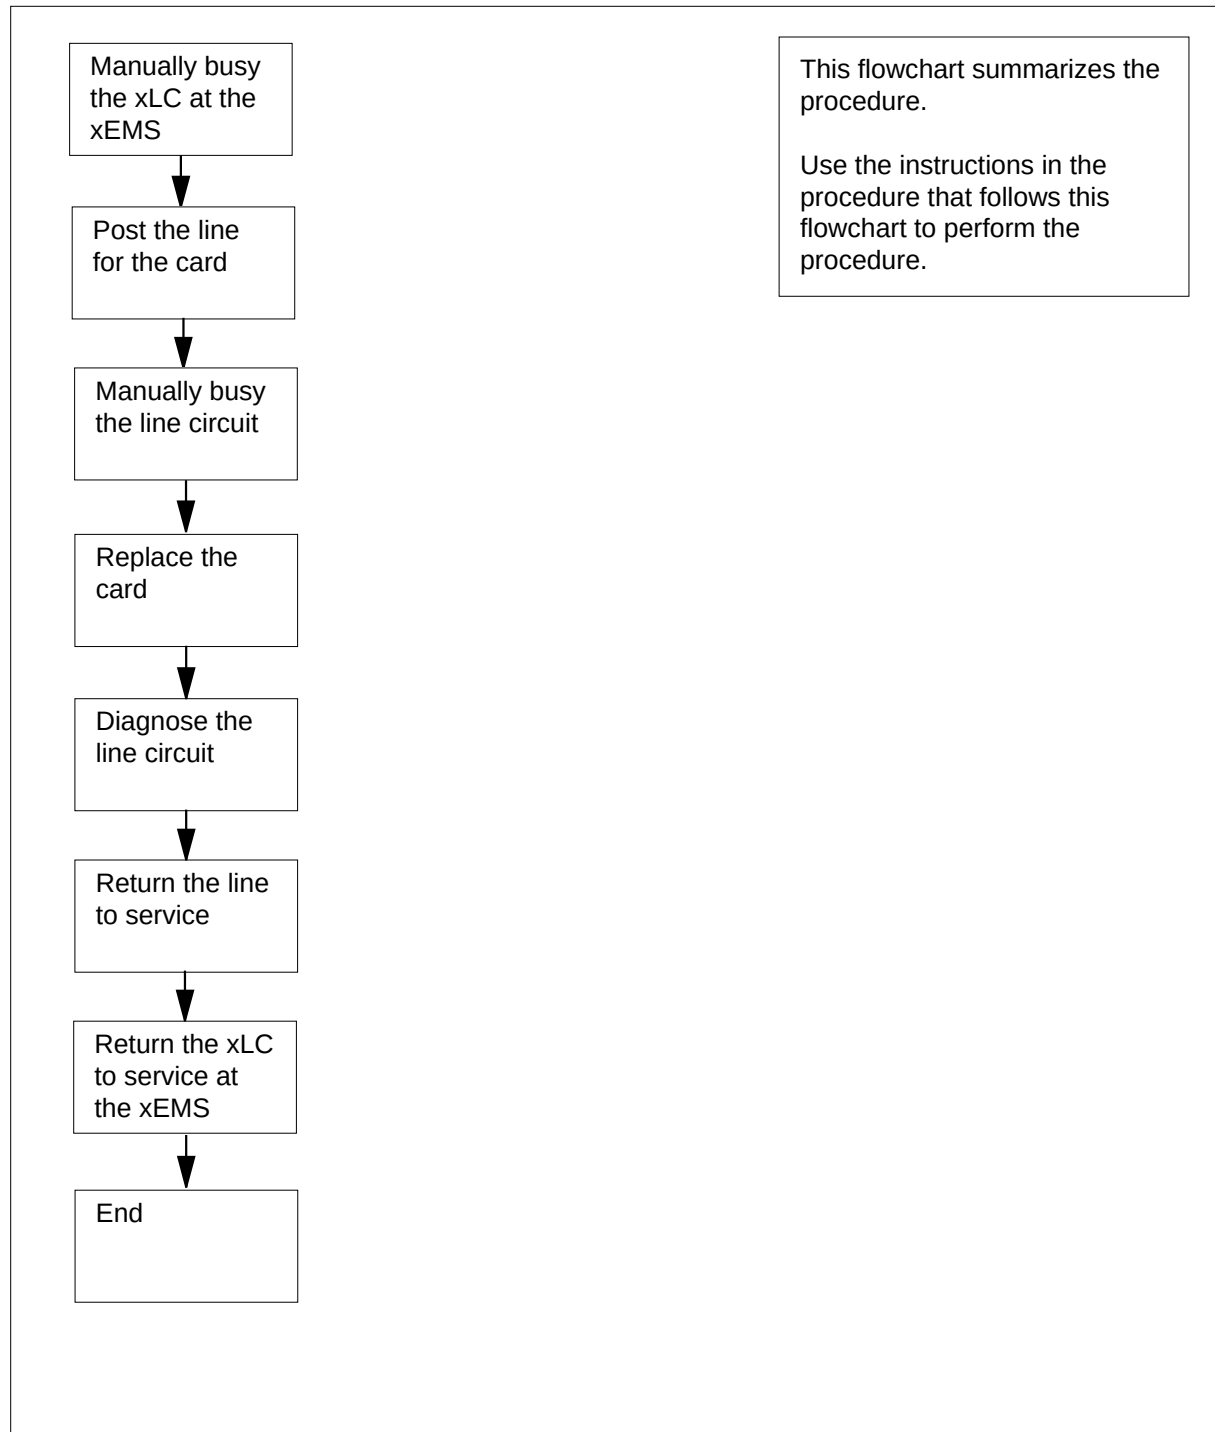

NTEX17 in an RLCM (continued)

Replacing an NTEX17 in an RLCM

At your current location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or were directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Make sure that the replacement card and the card that you remove have the same product engineering code (PEC) and PEC suffix.

At the xEMS workstation

- 3 Go to the submap of the LCM line drawer with the NTEX17 card that you will replace.
- 4 Place the cursor on the XLC you want to busy and use the mouse to select **Maintenance : XLC -> MB** and press the Enter key.

At the MAP terminal

- 5 To access the LTP level of the MAP display, type
>MAPCI;MTC;LNS;LTP
and press the Enter key.

Example of a MAP display:

```

POST      DELQ      BUSYQ      PREFIX
LCC PTY  RNG  ....LEN.....  DN  STA F S LTA  TE RESULT

```

Note: If you worked at the LTP level of the MAP display, a posted line can be present. A posted line does not interfere with this maintenance procedure.

- 6 To post the line for the card to be replaced, type
>POST L site frame_no unit_no drawer_no slot_no
and press the Enter key.

where

site

is the PM location (alphanumeric)

frame_no

is the frame number (0 to 511)

unit_no

is the PM unit number (0 or 1)

drawer_no

is the line drawer number (0 to 19)

ckt_no

is the card slot number (0 to 31)

NTEX17

in an RLCM (continued)

Example of a MAP display:

```
LCC PTY RNG .....LEN..... DN STA F S LTA TE RESULT
1FR          REM1 01 0 01 01 621 1134 IDL
```

- 7 Determine the state of the posted line.

If the state of the line	Do
is CPB, CPD	step 8
is CUT, HAZ, IDL, LO, PLO, SB	step 9
is MB	step 10
is NEQ	To determine why the component is offline or not equipped, consult operating company personnel. Continue as directed by operating company personnel.
is DEL, DMB, INB, LMB	step 19

- 8 Wait until the line state changes. Go to step 7.

- 9 To manually busy the line circuit, type

>BSY

and press the Enter key.

Example of a MAP display:

```
LCC PTY RNG .....LEN..... DN STA F S LTA TE RESULT
1FR          HOST 01 0 01 01 621 1134 MB
```

Note: Observe that the state that appears under the STA header changed to MB.

If BSY command	Do
passed	step 10
failed	step 19

At the MAP terminal

- 10 To display the cabinet location of the faulty line card, type

>CKTLOC

and press the Enter key.

Example of a MAP display:

NTEX17 in an RLCM (continued)

Site	Flr	RPos	Bay_id	Shf	Description	Slot	EqPEC
REM1	01	B04	LCE 01	04	LCM 01 0	01:00	EX17DA

GRD	START	2DB	LOSS	BAL	NETWORK	MAN	OVR	SET
NO		NO		NON	LOADED		NO	

Note: In the example MAP display, the line card is an NTEX17DA and the location of the card is

Site
in the remote site

Flr
on the 1st floor

RPos
row B is the location of the line equipment bay 04

Bay_id
in line concentrating equipment, bay 01

Shf
in shelf 04

Description
in hardware device LCM, bay 01

Slot
in line drawer 01, slot 00

NTEX17 in an RLCM (continued)

At the shelf

11



DANGER

Static electricity damage

Wear a wrist strap that connects to a wrist-strap grounding point to handle circuit cards. The wrist-strap grounding point is on a frame supervisory panel (FSP) or a modular supervisory panel (MSP). The wrist strap protects the cards against static electricity damage.



DANGER

Risk of equipment damage

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.



DANGER

Risk of equipment damage

Proceed only if a step in a maintenance procedure directs you here. If you perform this procedure without permission, equipment damage can occur.



DANGER

Risk of electrocution

Proceed only if a step in a maintenance procedure directs you here. If you perform this procedure without permission, personal injury can occur.

Put on a wriststrap.


Note 1: A card shroud is required to insert or remove an NTEX17 card in line drawers. This is a 6-inch (152 mm) card, and requires the card shroud with apparatus code QTH58A and common product code A0313317.

Note 2: A card removal tool is required to remove the NTEX17 card from line drawers. The apparatus code for the grip tool is QTH57A, and the common product code is A0298292. You can also use the large grip tool ITA9953.

- 12 Use the information you obtained in step 6 to locate the physical location of the line card.

NTEX17
in an RLCM (continued)

- 13** Prepare to remove the faulty card identified in step 6 by opening the line drawer and following these substeps.

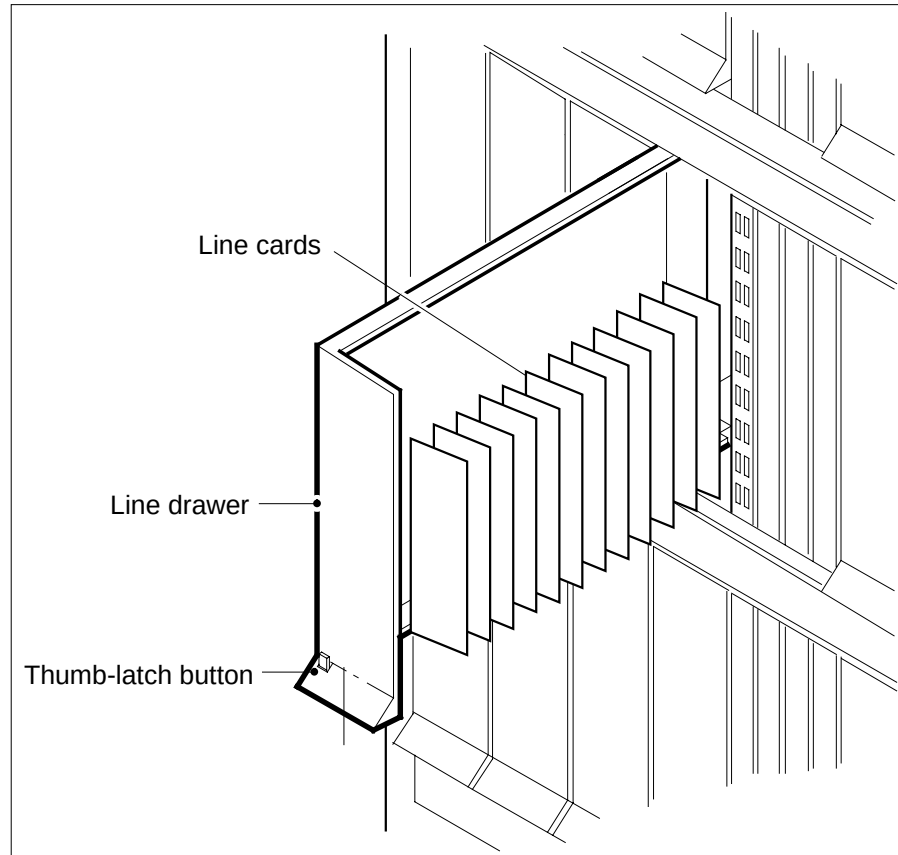

- a** Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
- b** Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
- c** Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in.).
- d** While holding the drawer in this position, push the bottom of the drawer nearest the shelf with your left hand to a position about 1.0 cm (0.5 in) to the right.
- e** Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
- f** Ensure a card shroud and line card extractor are available.

NTEX17 in an RLCM (continued)

14




DANGER

Risk of personal injury

Make sure you handle the line card carefully. The line feed resistor can be very hot. To avoid injury, use the insertion/withdrawal tool to remove the card as shown in the figure that follows.

Remove the line card to be replaced by using the following substeps:

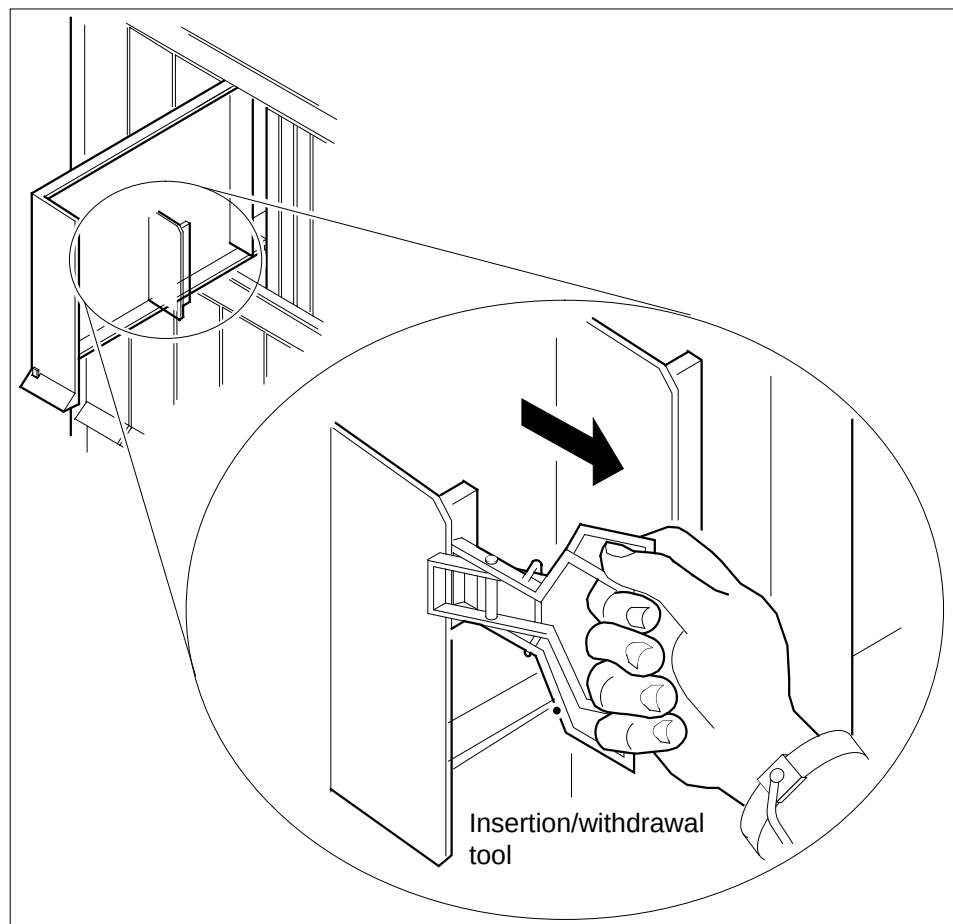

- a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
- b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
- c Squeeze the handles of the extractor together to grasp the card tightly.

NTEX17 in an RLCM (continued)

- d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 15** Replace the faulty card using the following substeps:
- a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 16** Close the line drawer.

At the MAP terminal

- 17** To perform a diagnostic test on the line, type
>DIAG
 and press the Enter key.

Example of a MAP response:

```
ECOME004AH ***+LINE100 DEC17 10:04:26 0200 PASS LN_DIAG
      LEN HOST 01 0 11 02      NO DIRN
      DIAGNOSTIC RESULT      Card Diagnostic OK
      ACTION REQUIRED      None
      CARD TYPE      EX17DA
```

If the DIAG command	Do
passed	step 18
failed	step 19

- 18** To return the line to service, type
>RTS
 and press the Enter key.

If RTS command	Do
passed	step 20
failed	step 19

NTEX17

in an RLCM (end)

- 19** Obtain further assistance in replacing this card by contacting personnel responsible for a higher level of support.

At the xEMS workstation

- 20** At the submap of the LCM line drawer with the NTEX17 card that you replaced.
- 21** Place the cursor on the the XLC card you want to return the card to service and use the mouse to select
Maintenance : XLC -> IDL
and press the Enter key.
- 22** The procedure is complete.

**NTEX17
in an RSC LCM**

Application

Use this procedure to replace the following card in an RSC LCM line drawer.

PEC	Suffixes	Name
NTEX17	AA	xDSL line card
NTEX17	BA	xDSL line card
NTEX17	CA	xDSL line card

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTEX17 in an RSC LCM (continued)

Summary of replacing an NTEX17 in RSC LCM

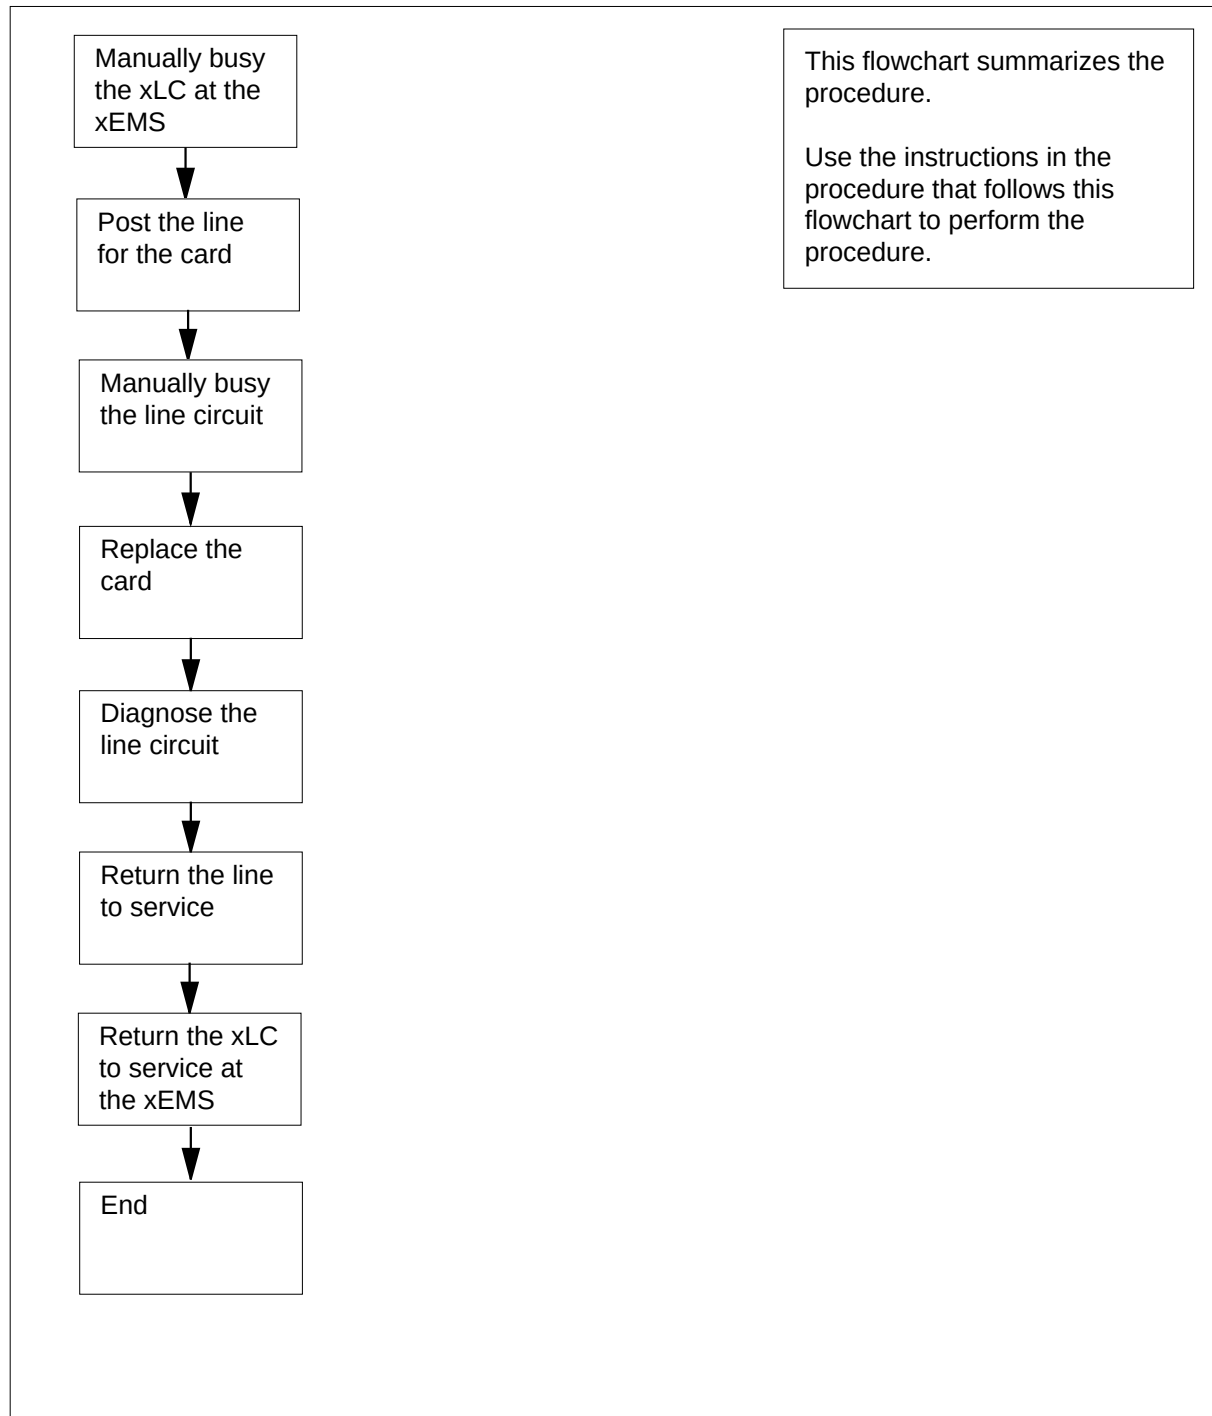

NTEX17 in an RSC LCM (continued)

Replacing an NTEX17 in RSC LCM

At your current location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or were directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Make sure that the replacement card and the card that you remove have the same product engineering code (PEC) and PEC suffix.

At the xEMS workstation

- 3 Go to the submap of the LCM line drawer with the NTEX17 card that you will replace.
- 4 Place the cursor on the XLC you want to busy and use the mouse to select **Maintenance : XLC -> MB** and press the Enter key.

At the MAP terminal

- 5 To access the LTP level of the MAP display, type
>MAPCI;MTC;LNS;LTP
and press the Enter key.

Example of a MAP display:

```

POST          DELQ          BUSYQ          PREFIX
LCC PTY RNG  .....LEN..... DN      STA F S LTA  TE  RESULT

```

Note: If you worked at the LTP level of the MAP display, a posted line can be present. A posted line does not interfere with this maintenance procedure.

- 6 To post the line for the card to be replaced, type
>POST L site frame_no unit_no drawer_no slot_no
and press the Enter key.

where

site
is the PM location (alphanumeric)

frame_no
is the frame number (0 to 511)

unit_no
is the PM unit number (0 or 1)

drawer_no
is the line drawer number (0 to 19)

NTEX17

in an RSC LCM (continued)

ckt_no

is the card slot number (0 to 31)

Example of a MAP display:

```
LCC PTY RNG .....LEN..... DN STA F S LTA TE RESULT
1FR REM1 01 0 01 01      621 1134 IDL
```

- 7** Determine the state of the posted line.

If the state of the line	Do
is CPB, CPD	step 8
is CUT, HAZ, IDL, LO, PLO, SB	step 9
is MB	step 10
is NEQ	To determine why the component is offline or not equipped, consult operating company personnel. Continue as directed by operating company personnel.
is DEL, DMB, INB, LMB	step 19

- 8** Wait until the line state changes. Go to step 7.

- 9** To manually busy the line circuit, type

>BSY

and press the Enter key.

Example of a MAP display:

```
LCC PTY RNG .....LEN..... DN STA F S LTA TE RI
1FR      HOST 01 0 01 01      621 1134 MB
```

Note: Observe that the state that appears under the STA header changed to MB.

If BSY command	Do
passed	step 10
failed	step 19

NTEX17 in an RSC LCM (continued)

At the MAP terminal

10 To display the cabinet location of the faulty line card, type

>CKTLOC

and press the Enter key.

Example of a MAP display:

Site	Flr	RPos	Bay_id	Shf	Description	Slot	EqPEC
REM1	01	B04	LCE 01	04	LCM 01 0	01:00	EX17CA
GRD	START	2DB	LOSS	BAL	NETWORK	MAN OVR	SET
NO		NO		NON	LOADED	NO	

Note: In the example MAP display, the line card is an NTEX17CA and the location of the card is

Site

in the remote site

Flr

on the 1st floor

RPos

row B is the location of the line equipment bay 04

Bay_id

in line concentrating equipment, bay 01

Shf

in shelf 04

Description

in hardware device LCM, bay 01

Slot

in line drawer 01, slot 00

NTEX17 in an RSC LCM (continued)

At the shelf

11



DANGER

Static electricity damage

Wear a wrist strap that connects to a wrist-strap grounding point to handle circuit cards. The wrist-strap grounding point is on a frame supervisory panel (FSP) or a modular supervisory panel (MSP). The wrist strap protects the cards against static electricity damage.



DANGER

Risk of equipment damage

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.



DANGER

Risk of equipment damage

Proceed only if a step in a maintenance procedure directs you here. If you perform this procedure without permission, equipment damage can occur.



DANGER

Risk of electrocution

Proceed only if a step in a maintenance procedure directs you here. If you perform this procedure without permission, personal injury can occur.


Put on a wriststrap.

Note 1: A card shroud is required to insert or remove an NTEX17 card in line drawers. This is a 6-inch (152 mm) card, and requires the card shroud with apparatus code QTH58A and common product code A0313317.

Note 2: A card removal tool is required to remove the NTEX17 card from line drawers. The apparatus code for the grip tool is QTH57A, and the common product code is A0298292. You can also use the large grip tool ITA9953.

NTEX17
in an RSC LCM (continued)

- 12** Use the information you obtained in step 6 to locate the physical location of the line card.
- 13** Prepare to remove the faulty card identified in step 6 by opening the line drawer and following these substeps.

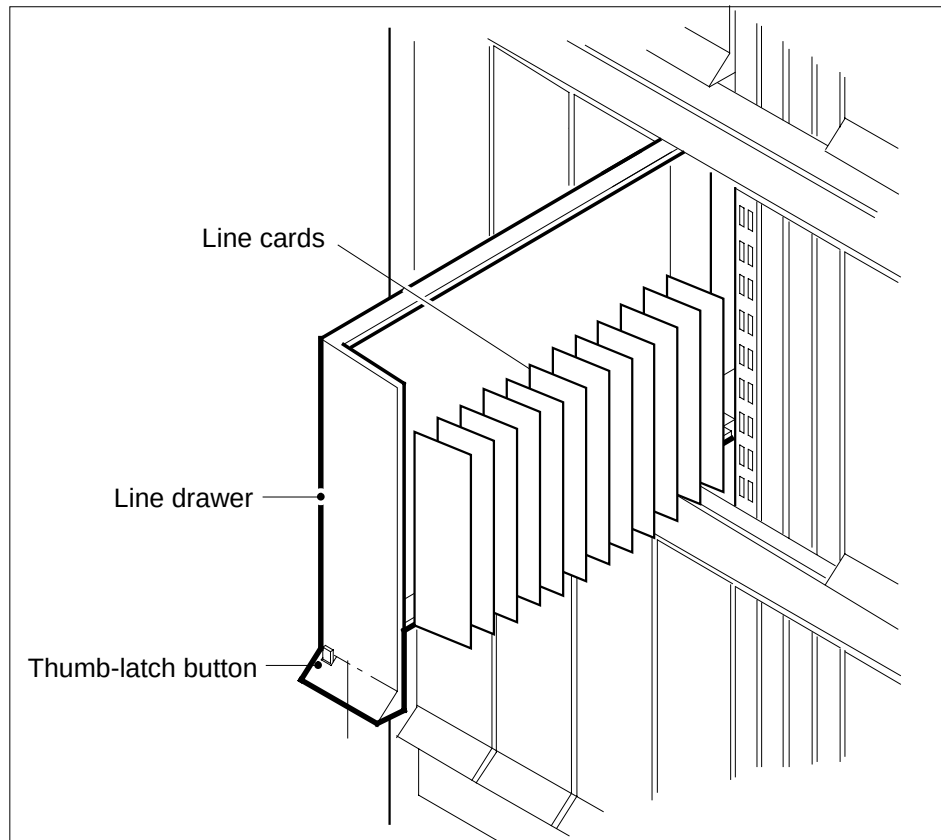

- a** Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
- b** Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
- c** Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in.).
- d** While holding the drawer in this position, push the bottom of the drawer nearest the shelf with your left hand to a position about 1.0 cm (0.5 in.) to the right.
- e** Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
- f** Ensure a card shroud and line card extractor are available.

NTEX17 in an RSC LCM (continued)

14




DANGER

Risk of personal injury

Make sure you handle the line card carefully. The line feed resistor can be very hot. To avoid injury, use the insertion/withdrawal tool to remove the card as shown in the figure that follows.

Remove the line card to be replaced by using the following substeps.

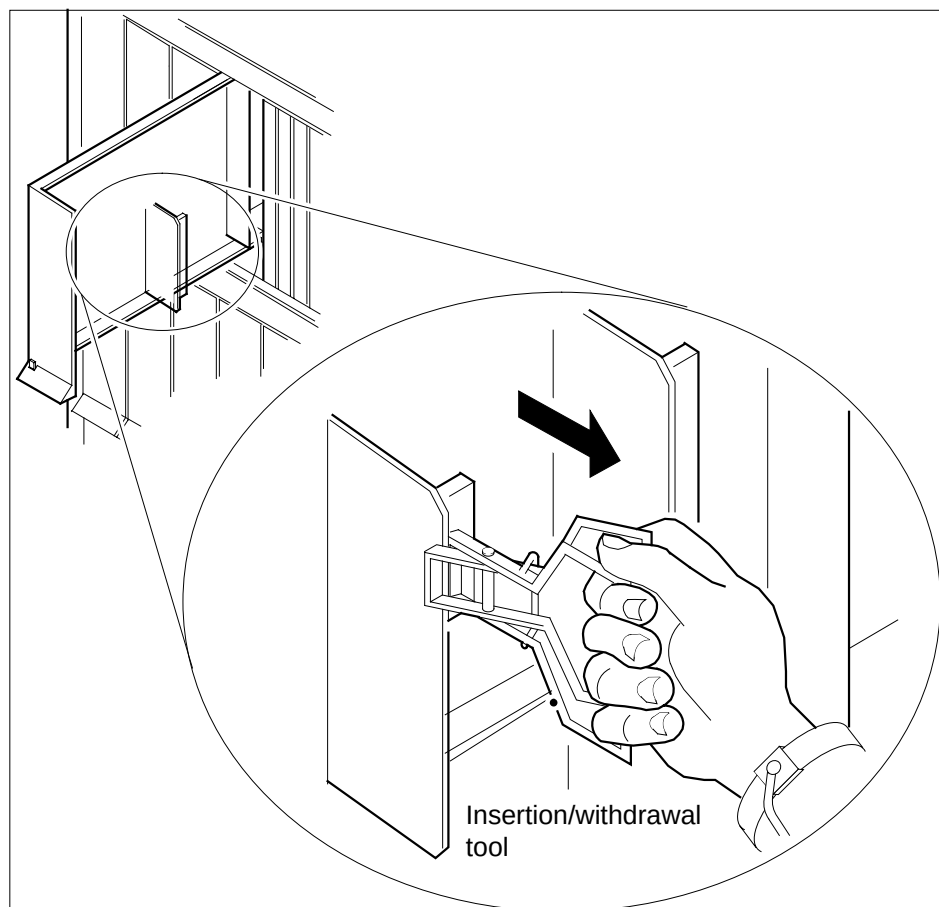

- a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
- b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
- c Squeeze the handles of the extractor together to grasp the card tightly.

NTEX17 in an RSC LCM (continued)

- d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 15** Replace the faulty card using the following substeps:
- a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 16** Close the line drawer.

At the MAP terminal

- 17** To perform a diagnostic test on the line, type
>DIAG
 and press the Enter key.
Example of a MAP response:

```
ECOME004AH ***+LINE100 DEC17 10:04:26 0200 PASS LN_DIAG
      LEN HOST 01 0 11 02 NO DIRN
      DIAGNOSTIC RESULT Card Diagnostic OK
      ACTION REQUIRED None
      CARD TYPE EX17BA
```

If the DIAG command	Do
passed	step 18
failed	step 19

- 18** To return the line to service, type
>RTS
 and press the Enter key.

If RTS command	Do
passed	step 20

NTEX17

in an RSC LCM (end)

	If RTS command	Do
	failed	step 19
19	Obtain further assistance in replacing this card by contacting personnel responsible for a higher level of support.	
	<i>At the xEMS workstation</i>	
20	At the submap of the LCM line drawer with the NTEX17 card that you replaced.	
21	Place the cursor on the the XLC card you want to return the card to service and use the mouse to select Maintenance : XLC -> IDL and press the Enter key.	
22	The procedure is complete.	

NTEX17
in an RSC-S (DS-1) Model A LCME

Application

Use this procedure to replace the following card in an RSC LCME line drawer.

PEC	Suffixes	Name
NTEX17	AA	xDSL line card
NTEX17	BA	xDSL line card
NTEX17	CA	xDSL line card

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTEX17 in an RSC-S (DS-1) Model A LCME (continued)

Summary of replacing an NTEX17 in RSC-S LCME

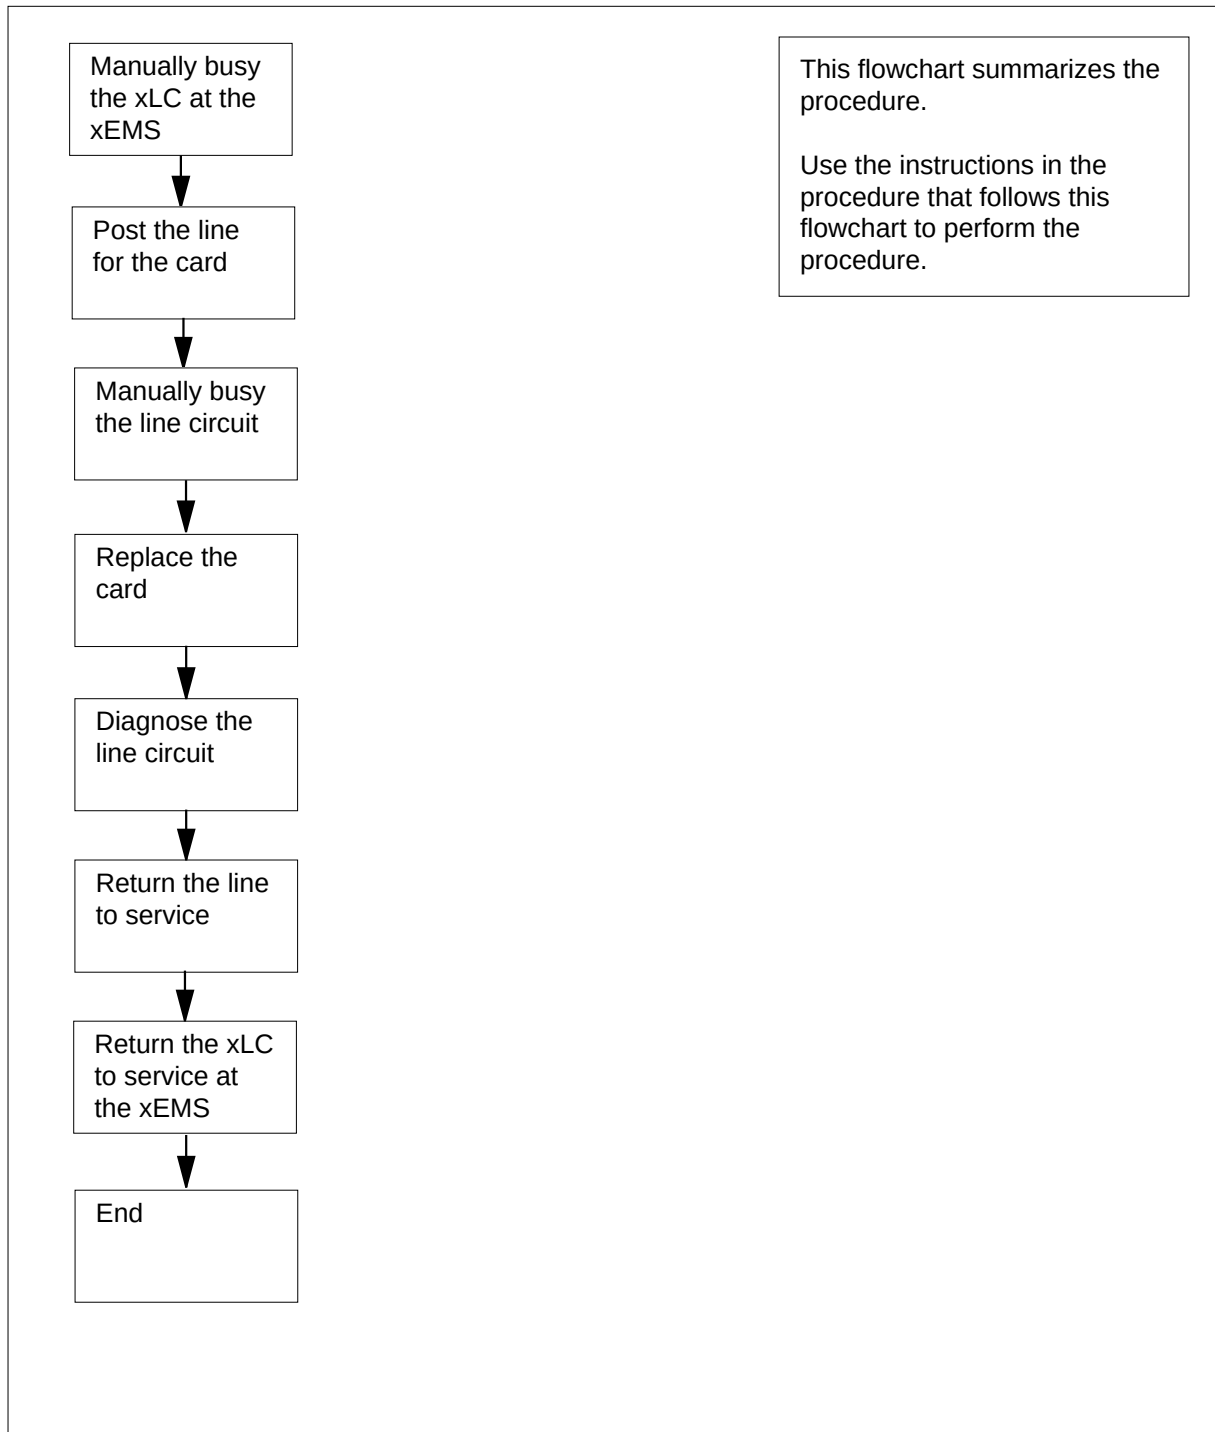

NTEX17

in an RSC-S (DS-1) Model A LCME (continued)

Replacing an NTEX17 in RSC-S LCME

At your current location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or were directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Make sure that the replacement card and the card that you remove have the same product engineering code (PEC) and PEC suffix.

At the xEMS workstation

- 3 Go to the submap of the LCM line drawer with the NTEX17 card that you will replace.
- 4 Place the cursor on the XLC you want to busy and use the mouse to select **Maintenance : XLC -> MB** and press the Enter key.

At the MAP terminal

- 5 To access the LTP level of the MAP display, type
>MAPCI;MTC;LNS;LTP
and press the Enter key.

Example of a MAP display:

POST	DELQ	BUSYQ	PREFIX	
LCC PTY RNG	LEN.....	DN	STA F S LTA TE	RESULT

Note: If you worked at the LTP level of the MAP display, a posted line can be present. A posted line does not interfere with this maintenance procedure.

- 6 To post the line for the card to be replaced, type
>POST L site frame_no unit_no drawer_no slot_no
and press the Enter key.

where

site
is the PM location (alphanumeric)

frame_no
is the frame number (0 to 511)

unit_no
is the PM unit number (0 or 1)

drawer_no
is the line drawer number (0 to 19)

ckt_no
is the card slot number (0 to 31)

NTEX17

in an RSC-S (DS-1) Model A LCME (continued)

Example of a MAP display:

LCC	PTY	RNG		LEN.....	DN	STA	F	S	LTA	TE	RESULT
1FR			REM1	01 0 01 01	621	1134	IDL				

- 7 Determine the state of the posted line.

If the state of the line	Do
is CPB, CPD	step 8
is CUT, HAZ, IDL, LO, PLO, SB	step 9
is MB	step 10
is NEQ	To determine why the component is offline or not equipped, consult operating company personnel. Continue as directed by operating company personnel.
is DEL, DMB, INB, LMB	step 19

- 8 Wait until the line state changes. Go to step 7.

- 9 To manually busy the line circuit, type

>BSY

and press the Enter key.

Example of a MAP display:

LCC	PTY	RNG		LEN.....	DN	STA	F	S	LTA	TE	RESULT
1FR			HOST	01 0 01 01	621	1134	MB				

Note: Observe that the state that appears under the STA header changed to MB.

If BSY command	Do
passed	step 10
failed	step 19

At the MAP terminal

- 10 To display the cabinet location of the faulty line card, type

>CKTLOC

and press the Enter key.

Example of a MAP display:

NTEX17

in an RSC-S (DS-1) Model A LCME (continued)

Site	Flr	RPos	Bay_id	Shf	Description	Slot	EqPEC
REM1	01	B04	LCE 01	04	LCM 01 0	01:00	EX17C
GRD	START	2DB	LOSS	BAL	NETWORK	MAN	OVR SET
	NO		NO	NON	LOADED		NO

Note: In the example MAP display, the line card is an NTEX17CA and the location of the card is

Site
in the remote site

Flr
on the 1st floor

RPos
row B is the location of the line equipment bay 04

Bay_id
in line concentrating equipment, bay 01

Shf
in shelf 04

Description
in hardware device LCM, bay 01

Slot
in line drawer 01, slot 00

NTEX17 in an RSC-S (DS-1) Model A LCME (continued)

At the shelf

11



DANGER

Static electricity damage

Wear a wrist strap that connects to a wrist-strap grounding point to handle circuit cards. The wrist-strap grounding point is on a frame supervisory panel (FSP) or a modular supervisory panel (MSP). The wrist strap protects the cards against static electricity damage.



DANGER

Risk of equipment damage

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.



DANGER

Risk of equipment damage

Proceed only if a step in a maintenance procedure directs you here. If you perform this procedure without permission, equipment damage can occur.



DANGER

Risk of electrocution

Proceed only if a step in a maintenance procedure directs you here. If you perform this procedure without permission, personal injury can occur.

Put on a wriststrap.

Note 1: A card shroud is required to insert or remove an NTEX17 card in line drawers. This is a 6-inch (152 mm) card, and requires the card shroud with apparatus code QTH58A and common product code A0313317.


Note 2: A card removal tool is required to remove the NTEX17 card from line drawers. The apparatus code for the grip tool is QTH57A, and the common product code is A0298292. You can also use the large grip tool ITA9953.

- 12** Use the information you obtained in step 6 to locate the physical location of the line card.

NTEX17

in an RSC-S (DS-1) Model A LCME (continued)

- 13** Prepare to remove the faulty card identified in step 6 by opening the line drawer and following these substeps.

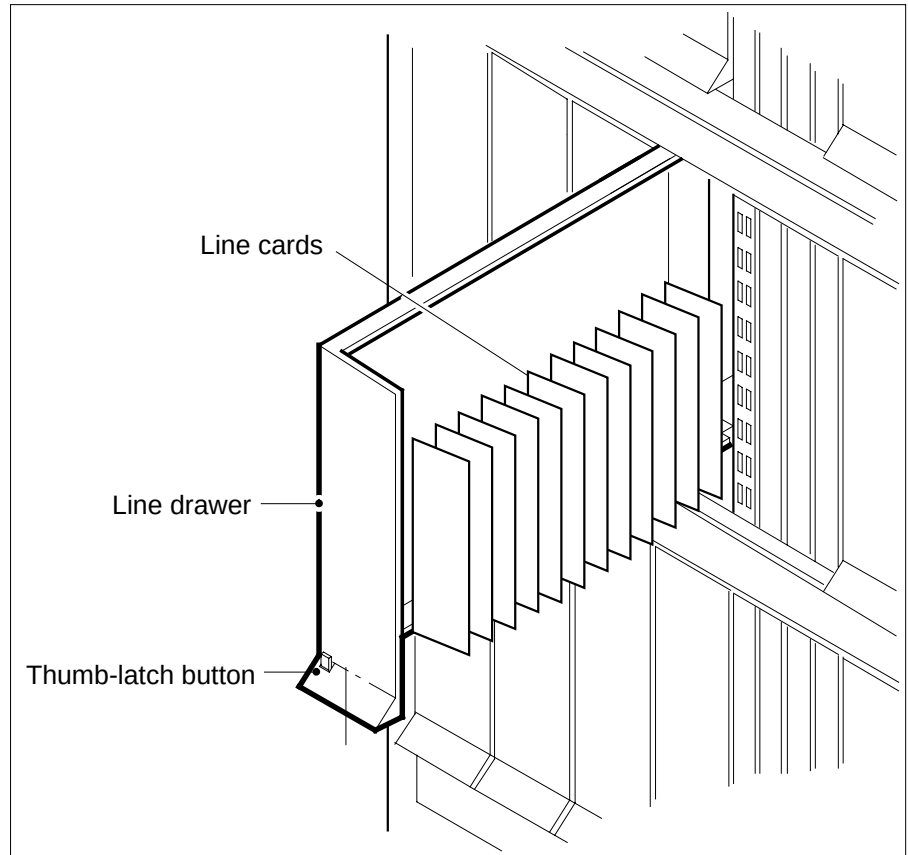

- a** Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
- b** Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
- c** Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in.).
- d** While holding the drawer in this position, push the bottom of the drawer nearest the shelf with your left hand to a position about 1.0 cm (0.5 in.) to the right.
- e** Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
- f** Ensure a card shroud and line card extractor are available.

NTEX17 in an RSC-S (DS-1) Model A LCME (continued)

14




DANGER

Risk of personal injury

Make sure you handle the line card carefully. The line feed resistor can be very hot. To avoid injury, use the insertion/withdrawal tool to remove the card as shown in the figure that follows.

Remove the line card to be replaced by using the following substeps.

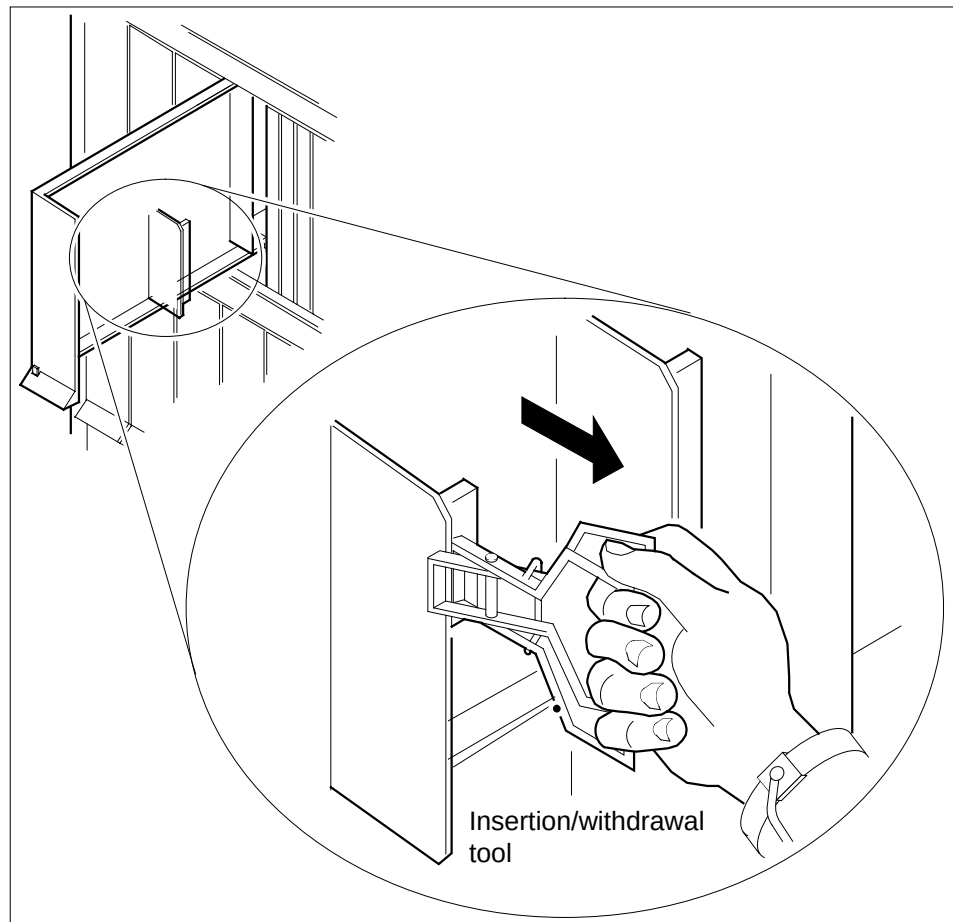

- a** Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
- b** Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
- c** Squeeze the handles of the extractor together to grasp the card tightly.

NTEX17

in an RSC-S (DS-1) Model A LCME (continued)

- d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 15** Replace the faulty card using the following substeps:
- a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 16** Close the line drawer.

At the MAP terminal

- 17** To perform a diagnostic test on the line, type
>DIAG
 and press the Enter key.

Example of a MAP response:

```
ECOME004AH ***+LINE100 DEC17 10:04:26 0200 PASS LN_DIAG
      LEN HOST 01 0 11 02      NO DIRN
      DIAGNOSTIC RESULT      Card Diagnostic OK
      ACTION REQUIRED      None
      CARD TYPE      EX17BA
```

If the DIAG command	Do
passed	step 18
failed	step 19

- 18** To return the line to service, type
>RTS
 and press the Enter key.

If RTS command	Do
passed	step 20
failed	step 19

NTEX17

in an RSC-S (DS-1) Model A LCME (end)

- 19** Obtain further assistance in replacing this card by contacting personnel responsible for a higher level of support.

At the xEMS workstation

- 20** Go to the submap of the LCM line drawer with the NTEX17 card that you replaced
- 21** Place the cursor on the the XLC card you want to return the card to service and use the mouse to select
- Maintenance : XLC -> IDL**
- and press the Enter key.
- 22** The procedure is complete.

NTEX17
in an RSC-S (DS-1) Model B LCM

Application

Use this procedure to replace the following card in an RSC-S LCM line drawer.

PEC	Suffixes	Name
NTEX17	AA	xDSL line card
NTEX17	BA	xDSL line card
NTEX17	CA	xDSL line card

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTEX17 in an RSC-S (DS-1) Model B LCM (continued)

Summary of replacing an NTEX17 in RSC-S LCM

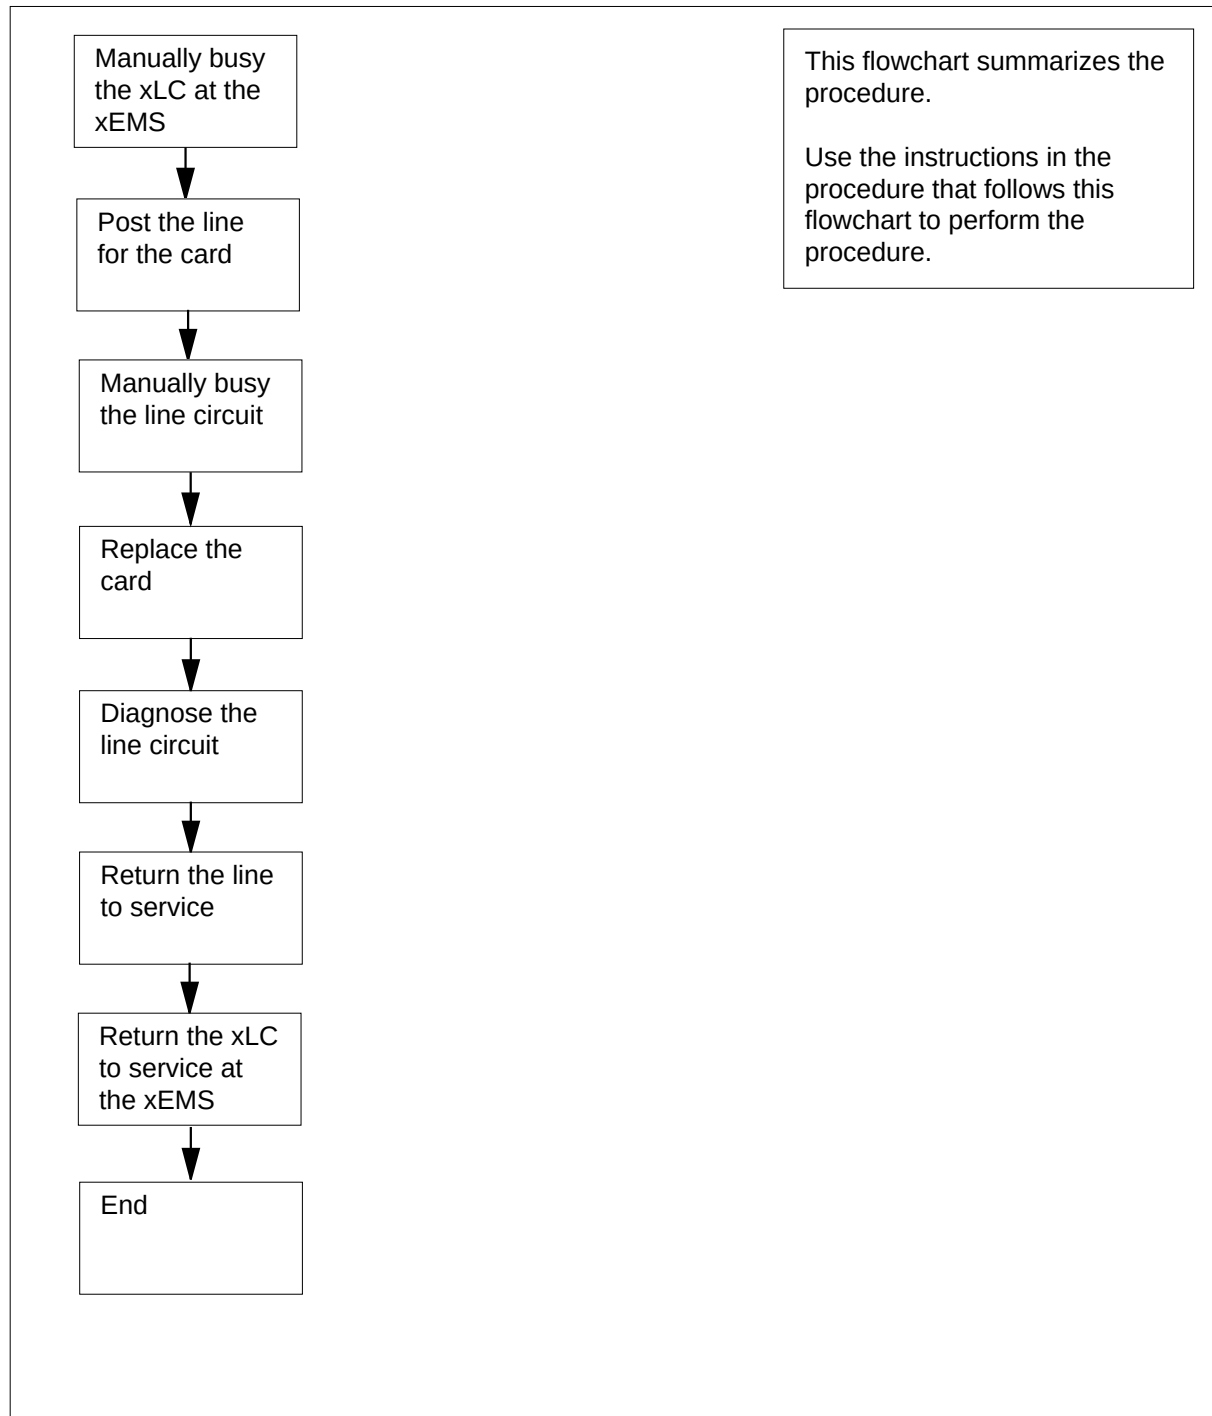

NTEX17

in an RSC-S (DS-1) Model B LCM (continued)

Replacing an NTEX17 in RSC-S LCM

At your current location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or were directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Make sure that the replacement card and the card that you remove have the same product engineering code (PEC) and PEC suffix.

At the xEMS workstation

- 3 Go to the submap of the LCM line drawer with the NTEX17 card that you will replace.
- 4 Place the cursor on the XLC you want to busy and use the mouse to select **Maintenance : XLC -> MB** and press the Enter key.

At the MAP terminal

- 5 To access the LTP level of the MAP display, type
>MAPCI;MTC;LNS;LTP
and press the Enter key.

Example of a MAP display:

```

POST          DELQ          BUSYQ          PREFIX
LCC PTY RNG  . . . . .LEN . . . . .DN      STA F S LTA  TE  RESULT

```

Note: If you worked at the LTP level of the MAP display, a posted line can be present. A posted line does not interfere with this maintenance procedure.

- 6 To post the line for the card to be replaced, type
>POST L site frame_no unit_no drawer_no slot_no
and press the Enter key.

where

site
is the PM location (alphanumeric)

frame_no
is the frame number (0 to 511)

unit_no
is the PM unit number (0 or 1)

drawer_no
is the line drawer number (0 to 19)

NTEX17

in an RSC-S (DS-1) Model B LCM (continued)

ckt_no

is the card slot number (0 to 31)

Example of a MAP display:

```
LCC PTY RNG .....LEN..... DN STA F S LTA TE RESULT
1FR          REM1 01 0 01 01 621 1134 IDL
```

- 7 Determine the state of the posted line.

If the state of the line	Do
is CPB, CPD	step 8
is CUT, HAZ, IDL, LO, PLO, SB	step 9
is MB	step 10
is NEQ	To determine why the component is offline or not equipped, consult operating company personnel. Continue as directed by operating company personnel.
is DEL, DMB, INB, LMB	step 19

- 8 Wait until the line state changes. Go to step 7.

- 9 To manually busy the line circuit, type
>BSY
and press the Enter key.

Example of a MAP display:

```
LCC PTY RNG .....LEN..... DN STA F S LTA TE RESULT
1FR          HOST 01 0 01 01 621 1134 MB
```

Note: Observe that the state that appears under the STA header changed to MB.

If BSY command	Do
passed	step 10
failed	step 19

NTEX17

in an RSC-S (DS-1) Model B LCM (continued)

At the MAP terminal

10 To display the cabinet location of the faulty line card, type

>CKTLOC

and press the Enter key.

Example of a MAP display:

Site	Flr	RPos	Bay_id	Shf	Description	Slot	EqPEC
REM1	01	B04	LCE 01	04	LCM 01 0	01:00	EX17CA

GRD	START	2DB	LOSS	BAL	NETWORK	MAN	OVR	SET
NO		NO		NON	LOADED		NO	

Note: In the example MAP display, the line card is an NTEX17CA and the location of the card is

Site

in the remote site

Flr

on the 1st floor

RPos

row B is the location of the line equipment bay 04

Bay_id

in line concentrating equipment, bay 01

Shf

in shelf 04

Description

in hardware device LCM, bay 01

Slot

in line drawer 01, slot 00

NTEX17 in an RSC-S (DS-1) Model B LCM (continued)

At the shelf

11



DANGER

Static electricity damage

Wear a wrist strap that connects to a wrist-strap grounding point to handle circuit cards. The wrist-strap grounding point is on a frame supervisory panel (FSP) or a modular supervisory panel (MSP). The wrist strap protects the cards against static electricity damage.



DANGER

Risk of equipment damage

Take these precautions when removing or inserting a card:1. Do not apply direct pressure to the components.2. Do not force the card into its slot.



DANGER

Risk of equipment damage

Proceed only if a step in a maintenance procedure directs you here. If you perform this procedure without permission, equipment damage can occur.



DANGER

Risk of electrocution

Proceed only if a step in a maintenance procedure directs you here. If you perform this procedure without permission, personal injury can occur.

Put on a wriststrap.


Note 1: A card shroud is required to insert or remove an NTEX17 card in line drawers. This is a 6-inch (152 mm) card, and requires the card shroud with apparatus code QTH58A and common product code A0313317.

Note 2: A card removal tool is required to remove the NTEX17 card from line drawers. The apparatus code for the grip tool is QTH57A, and the common product code is A0298292. You can also use the large grip tool ITA9953.

- 12** Use the information you obtained in step 6 to locate the physical location of the line card.

NTEX17
in an RSC-S (DS-1) Model B LCM (continued)

- 13** Prepare to remove the faulty card identified in step 6 by opening the line drawer and following these substeps.

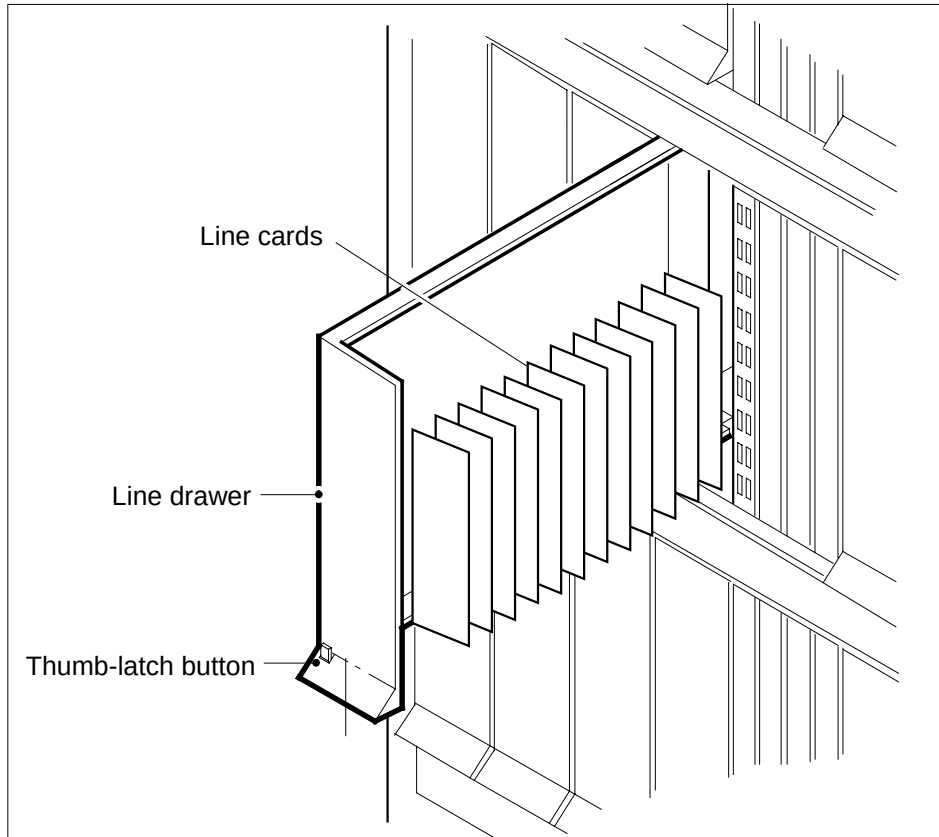

- a** Face the drawer shelf and grasp the handle at the bottom of the drawer with your right hand.
- b** Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
- c** Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in.).
- d** While holding the drawer in this position, push the bottom of the drawer nearest the shelf with your left hand to a position about 1.0 cm (0.5 in.) to the right.
- e** Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
- f** Ensure a card shroud and line card extractor are available.

NTEX17 in an RSC-S (DS-1) Model B LCM (continued)

14




DANGER

Risk of personal injury

Make sure you handle the line card carefully. The line feed resistor can be very hot. To avoid injury, use the insertion/withdrawal tool to remove the card as shown in the figure that follows.

Remove the line card to be replaced by using the following substeps.

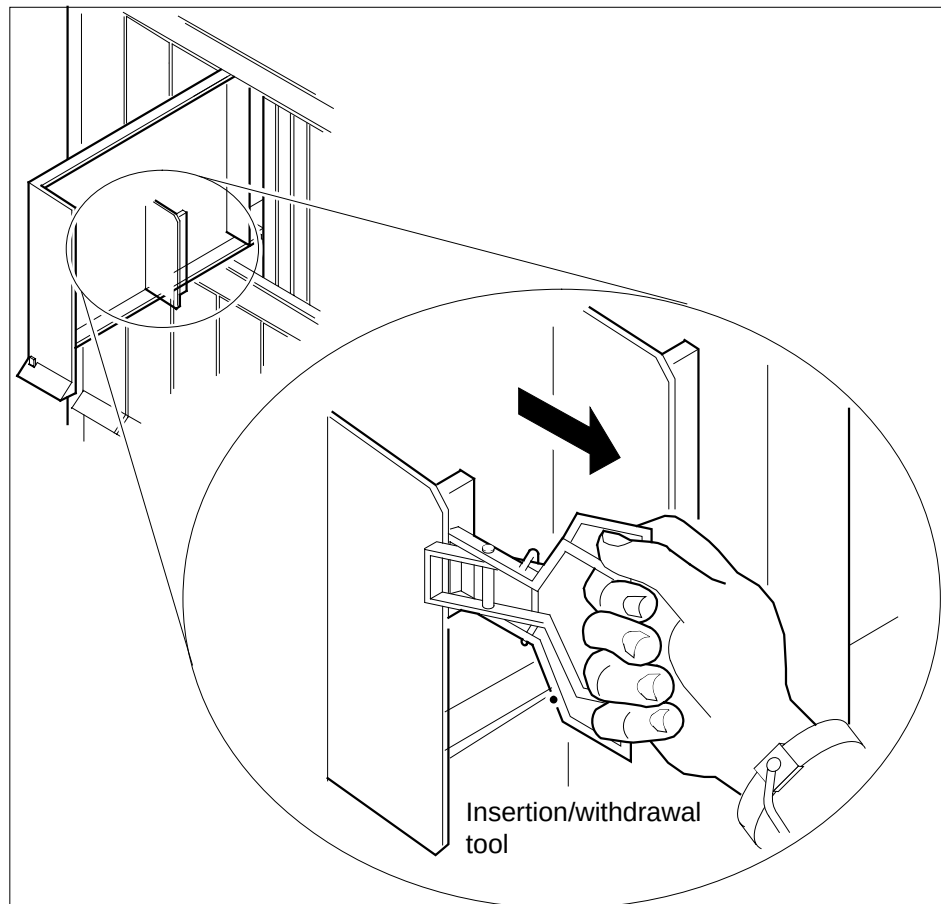

- a Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
- b Grasp the edge of the card with a line card extractor at a point midway between the top and bottom edges. Hold the extractor in your right hand.
- c Squeeze the handles of the extractor together to grasp the card tightly.

NTEX17

in an RSC-S (DS-1) Model B LCM (continued)

- d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card will become unplugged from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 15** Replace the faulty card using the following substeps:
- a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Grasp the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 16** Close the line drawer.

At the MAP terminal

- 17** To perform a diagnostic test on the line, type
>DIAG
 and press the Enter key.

Example of a MAP response:

```
ECOME004AH ***+LINE100 DEC17 10:04:26 0200 PASS LN_DIAG
LEN HOST 01 0 11 02      NO DIRN
DIAGNOSTIC RESULT   Card Diagnostic OK
ACTION REQUIRED   None
CARD TYPE   EX17BA
```

If the DIAG command	Do
passed	step 18
failed	step 19

- 18** To return the line to service, type
>RTS
 and press the Enter key.

If RTS command	Do
passed	step 20

NTEX17

in an RSC-S (DS-1) Model B LCM (end)

	If RTS command	Do
	failed	step 19
19	Obtain further assistance in replacing this card by contacting personnel responsible for a higher level of support.	
	<i>At the xEMS workstation</i>	
20	Go to the submap of the LCM line drawer with the NTEX17 card that you replaced.	
21	Place the cursor on the the XLC card you want to return the card to service and use the mouse to select Maintenance : XLC -> IDL and press the Enter key.	
22	The procedure is complete.	

**NTEX17
in a STAR**

Application

Use this procedure to replace the following card in a Star Hub line drawer.

PEC	Suffixes	Name
NTEX17	DA	xDSL line card

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTEX17 in a STAR (continued)

Summary of replacing an NTEX17 in a STAR

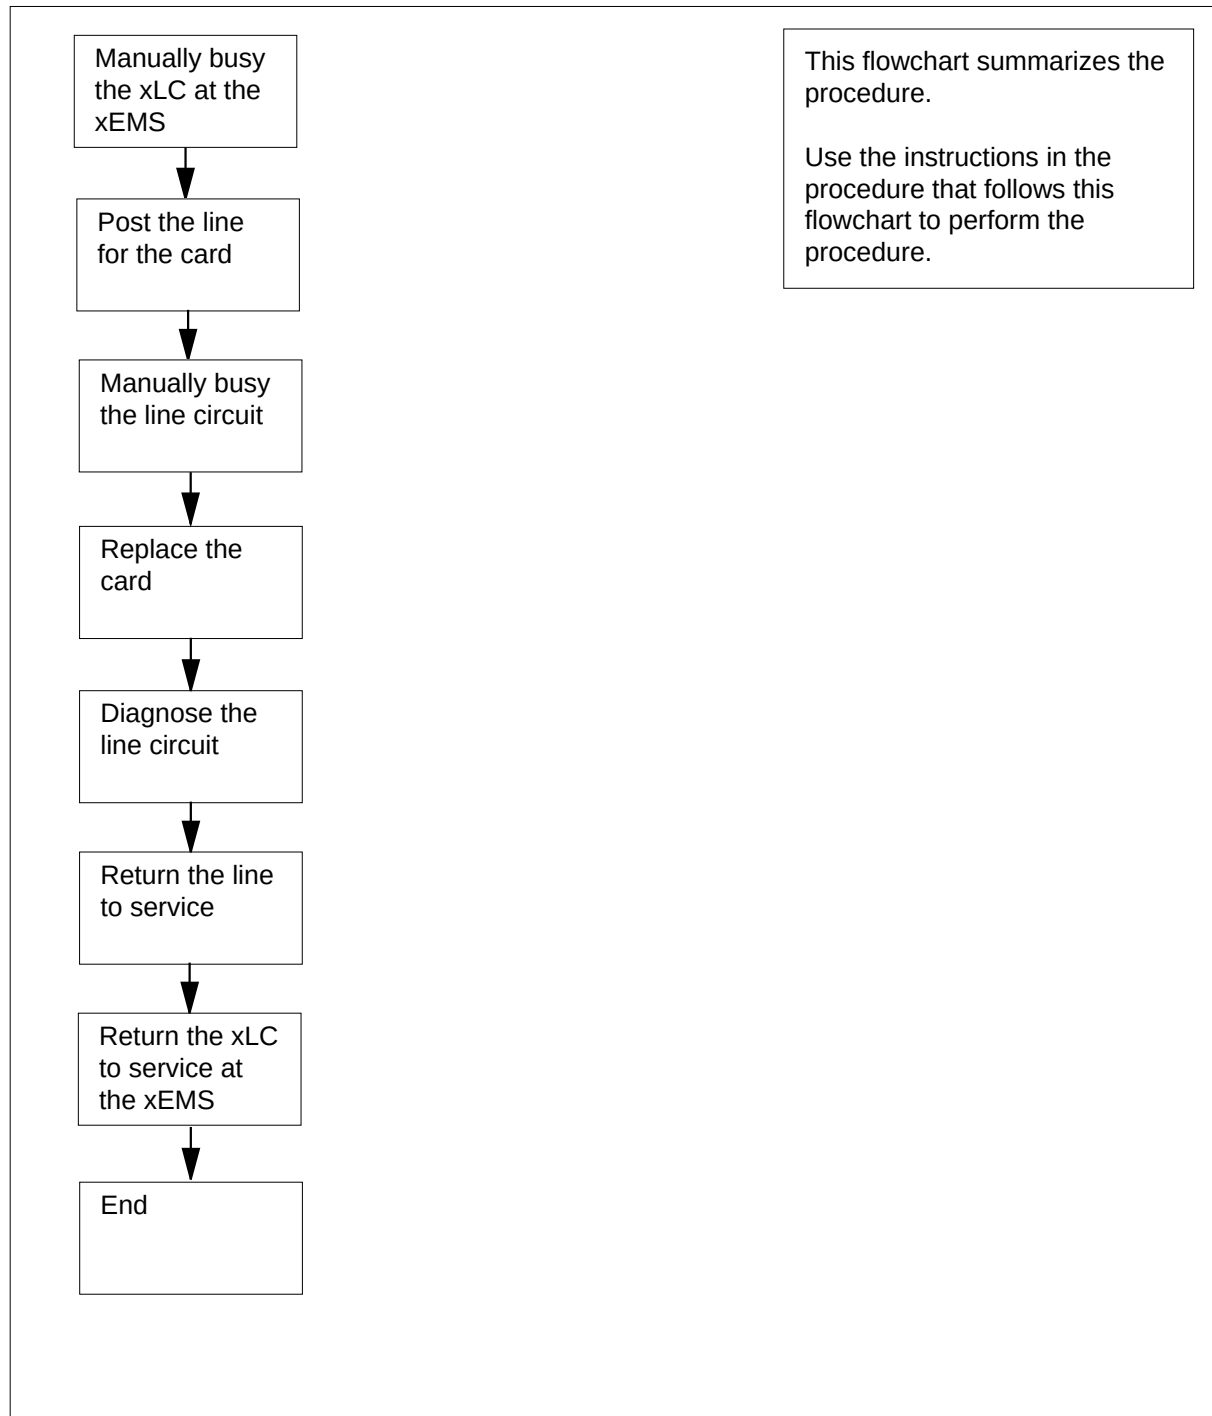

NTEX17 in a STAR (continued)

Replacing an NTEX17 in a STAR

At your current location

- 1 Proceed only if you were either directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for checking or accepting cards, or were directed to this procedure by your maintenance support group.
- 2 Get a replacement card. Make sure that the replacement card and the card that you remove have the same product engineering code (PEC) and PEC suffix.

At the xEMS workstation

- 3 Go to the submap of the STAR line drawer with the NTEX17 card to be replaced.
- 4 Place the cursor on the XLC you want to busy and use the mouse to select
Maintenance : XLC -> MB
and press the Enter key.

At the MAP terminal

- 5 To access the LTP level of the MAP display, type
>MAPCI;MTC;LNS;LTP
and press the Enter key.

Example of a MAP display:

POST	DELQ	BUSYQ	PREFIX
LCC	PTY	RNG	LEN.....DN
STA	F	S	LTA TE RESULT

Note: If you worked at the LTP level of the MAP display, a posted line can be present. A posted line does not interfere with this maintenance procedure.

- 6 To post the line for the card to be replaced, type
>POST L site frame_no unit_no drawer_no slot_no
and press the Enter key.

where

site
is the PM location (alphanumeric)

frame_no
is the frame number (0 to 511)

unit_no
is the PM unit number (0 or 1)

NTEX17

in a STAR (continued)

drawer_no
is the line drawer number (0 to 19)

ckt_no
is the card slot number (0 to 31)

Example of a MAP display:

```
LCC PTY RNG .....LEN..... DN STA F S LTA TE RESULT
1FR          REM1 01 0 01 01 621 1134 IDL
```

- 7** Determine the state of the posted line.

If the state of the line	Do
is CPB, CPD	step 8
is CUT, HAZ, IDL, LO, PLO, SB	step 9
is MB	step 10
is NEQ	To determine why the component is offline or not equipped, consult operating company personnel. Continue as directed by operating company personnel.
is DEL, DMB, INB, LMB	step 23

- 8** Wait until the line state changes. Go to step 7.

- 9** To manually busy the line circuit, type

>BSY

and press the Enter key.

Example of a MAP display:

```
LCC PTY RNG .....LEN..... DN STA F S LTA TE RESULT
1FR          REM1 01 0 01 01 621 1134 MB
```

Note: Observe that the state that appears under the STA header changed to MB.

If BSY command	Do
passes	step 10
fails	step 23

NTEX17 in a STAR (continued)

At the MAP terminal

10 To display the cabinet location of the line card with faults, type

>CKTLOC

and press the Enter key.

Example of a MAP display:

Site	Flr	RPos	Bay_id	Shf	Description	Slot	EqPEC
REM1	01	B04	SRHE01	03	HUB 01 0	01:00	EX17DA
GRD	START	2DB	LOSS	BANETWORK	MAN	OVR	SET
NO		NO		NON LOADED		NO	

Note: In the example MAP display, the line card is an NTEX17DA and the location of the card is

Site

in the remote site

Flr

on the 1st floor

RPos

row B is the location of the Star Hub bay 04

Bay_id

in Star Remote Hub Equipment (SRME), bay 01

Shf

in shelf 03

Description

in hardware device HUB, bay 01

Slot

in line drawer 01, slot 00

NTEX17 in a STAR (continued)

At the shelf

11



WARNING

Static electricity damage

Wear a wrist strap that connects to a wrist-strap grounding point to handle circuit cards. The wrist-strap grounding point is on the frame supervisory panel (FSP). The wrist strap protects the cards against static electricity damage.



WARNING

Risk of equipment damage

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.



WARNING

Risk of equipment damage

Proceed only if a step in a maintenance procedure directs you here. If you perform this procedure without permission, equipment damage can occur.



DANGER

Risk of electrocution

Proceed only if a step in a maintenance procedure directs you here. If you perform this procedure without permission, personal injury can occur.

Put on an ESD wrist strap.

Note 1: A card shroud is required to insert or remove an NTEX17 card in line drawers. This is a 6-inch (152 mm) card, and requires the card shroud with apparatus code QTH58A and common product code A0313317.


Note 2: A card removal tool is required to remove the NTEX17 card from line drawers. The apparatus code for the grip tool is QTH57A, and the common product code is A0298292. You can also use the large grip tool ITA9953.

12

Use the information you obtained in step 6 to locate the physical location of the line card.

NTEX17
in a STAR (continued)

- 13** Prepare to remove the faulty card identified in step 6 by opening the line drawer and following these substeps.

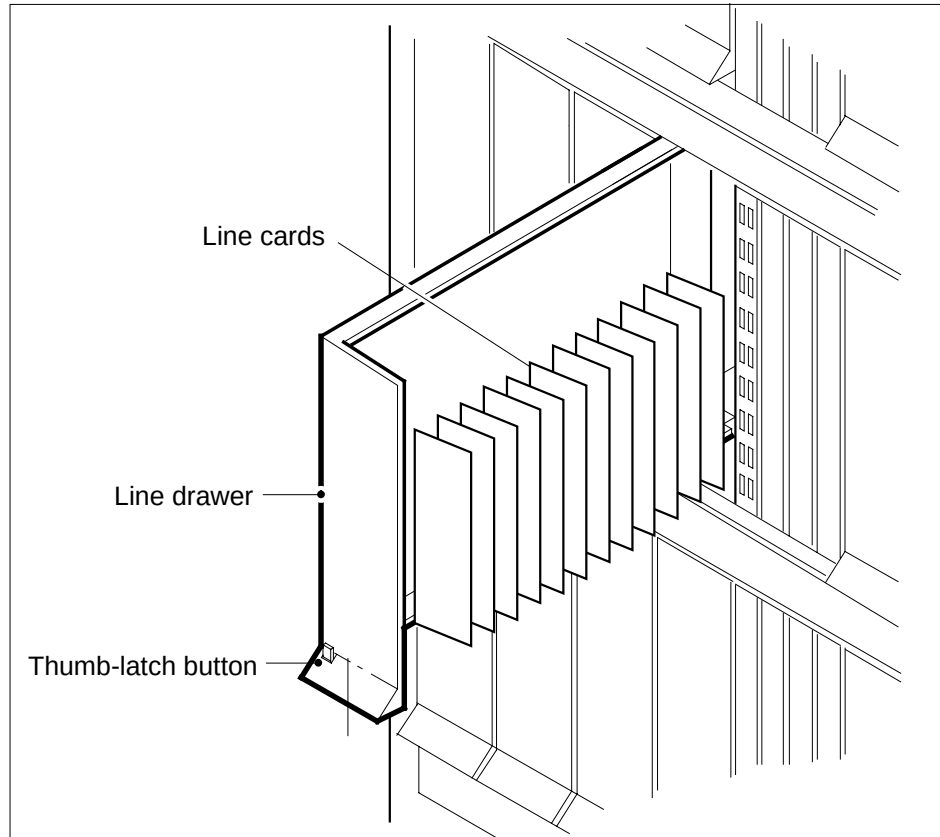

- a** Face the drawer shelf and hold the handle at the bottom of the drawer with your right hand.
- b** Push up on the drawer latch with your thumb and pull the drawer out until fully withdrawn. It is fully withdrawn when the drawer stop, at the top, prevents further travel.
- c** Maintain a slight pull on the handle and lift the faceplate of the drawer approximately 2.5 cm (1.0 in.).
- d** While holding the drawer in this position, push the bottom of the drawer nearest the shelf with your left hand to a position about 1.0 cm (0.5 in) to the right.
- e** Hold the drawer in this position with your left hand and lower the faceplate of the drawer by releasing the grip of your right hand.
- f** Make sure a card shroud and line card extractor are available.

NTEX17 in a STAR (continued)

14




DANGER

Risk of personal injury

Make sure you handle the line card carefully. The line feed resistor can be very hot. To avoid injury, use the insertion/withdrawal tool to remove the card as shown in the figure that follows.

Remove the line card to be replaced by using the following substeps:

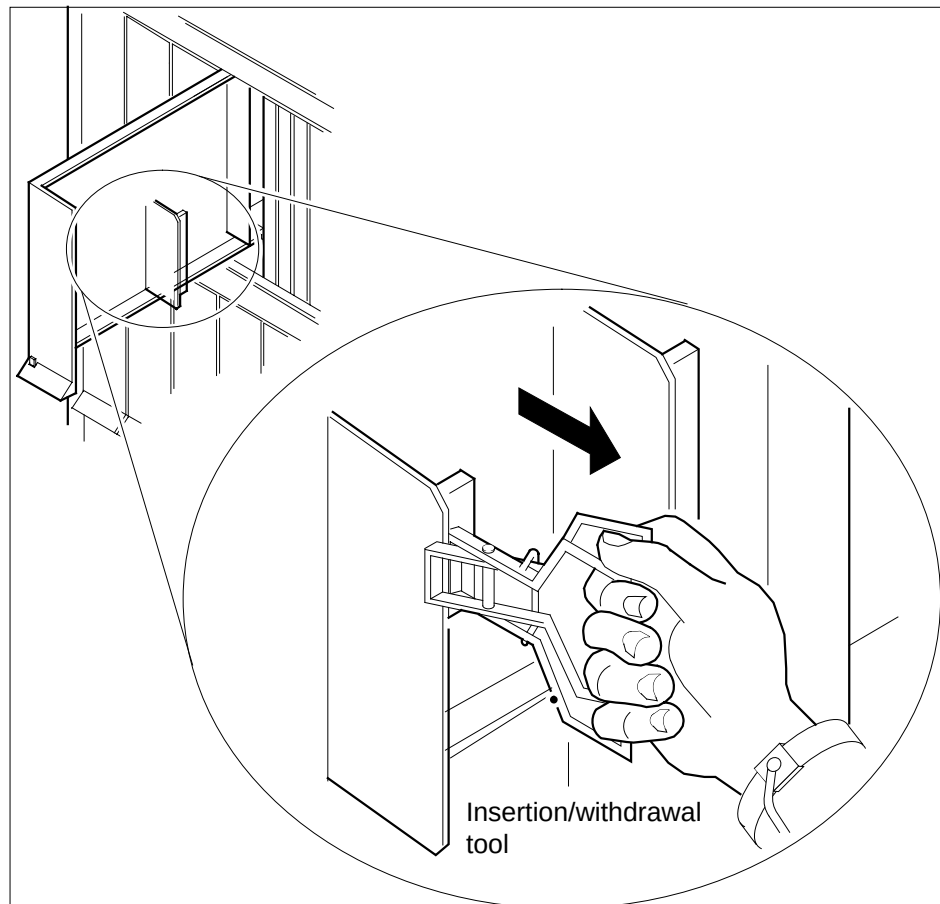

- a** Slide a card shroud over the card to be removed and an adjacent card. If there is not an adjacent card on either side, do not use the card shroud.
- b** Hold the edge of the card with a line card extractor at a point in the center between the top and bottom edges. Hold the extractor in your right hand.
- c** Squeeze the handles of the extractor together to hold the card tightly.

NTEX17 in a STAR (continued)

- d Hold the front cover of the line drawer to steady it using your left hand.
 - e Pull the extractor away from the drawer, and the card disconnects from its socket on the drawer backplane.
 - f Continue pulling the card with the extractor until the card is clear of the shroud.
 - g Insert the card removed into the ESD container and store using local procedures.
- 15** Replace the faulty card using the following substeps:
- a Remove the replacement card from the ESD container.
 - b Slide the card in the shroud guide slots toward the drawer backplane.
 - c Hold the front cover of the line drawer with your left hand to steady it.
 - d Hold the top and bottom edges of the card with the fingers of your right hand.
 - e Push the card toward the backplane until it plugs fully into the backplane socket.
- 16** Close the line drawer.

At the MAP terminal

- 17** To perform a diagnostic test on the line, type
>DIAG
 and press the Enter key.

Example of a MAP response:

```
ECOME004AH ***+LINE100 JUL17 10:04:26 0200 PASS LN_DIAG
      LEN REM1 01 0 01 01      NO DIRN
      DIAGNOSTIC RESULT Card Diagnostic OK
      ACTION REQUIRED None
      CARD TYPE EX17DA
```

If the DIAG command	Do
passes	step 18
fails	step 23

- 18** To return the line to service, type
>RTS
 and press the Enter key.

If RTS command	Do
passes	step 19
fails	step 23

NTEX17

in a STAR (end)

At the xEMS workstation

- 19** At the submap of the LCM line drawer with the NTEX17 card that you replaced.
- 20** Place the cursor on the the XLC card you want to return the card to service and use the mouse to select
Maintenance : XLC -> IDL
and press the Enter key.
- 21** Send any cards with faults for repair according to local procedure.
- 22** Record the following items in office records:
 - date the card was replaced
 - serial number of the card
 - indications that prompted replacement of the cardGo to step 24.
- 23** Get additional assistance in replacing this card by contacting personnel responsible for a higher level of support.
- 24** The procedure is complete.

**NTEX54
in an RLCM**

Application

Use this procedure to replace the following cards in an RLCM line drawer.

PEC	Suffixes	Name
NTEX54	AA	Data enhanced bus interface card (DBIC)
NTEX54	AB	Data enhanced bus interface card (DBIC)
NTEX54	BA	Data enhanced bus interface card (DBIC)
NTEX54	CA	Data enhanced bus interface card (DBIC)

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTEX54 in an RLCM (continued)

Summary of replacing an NTEX54 in an RLCM

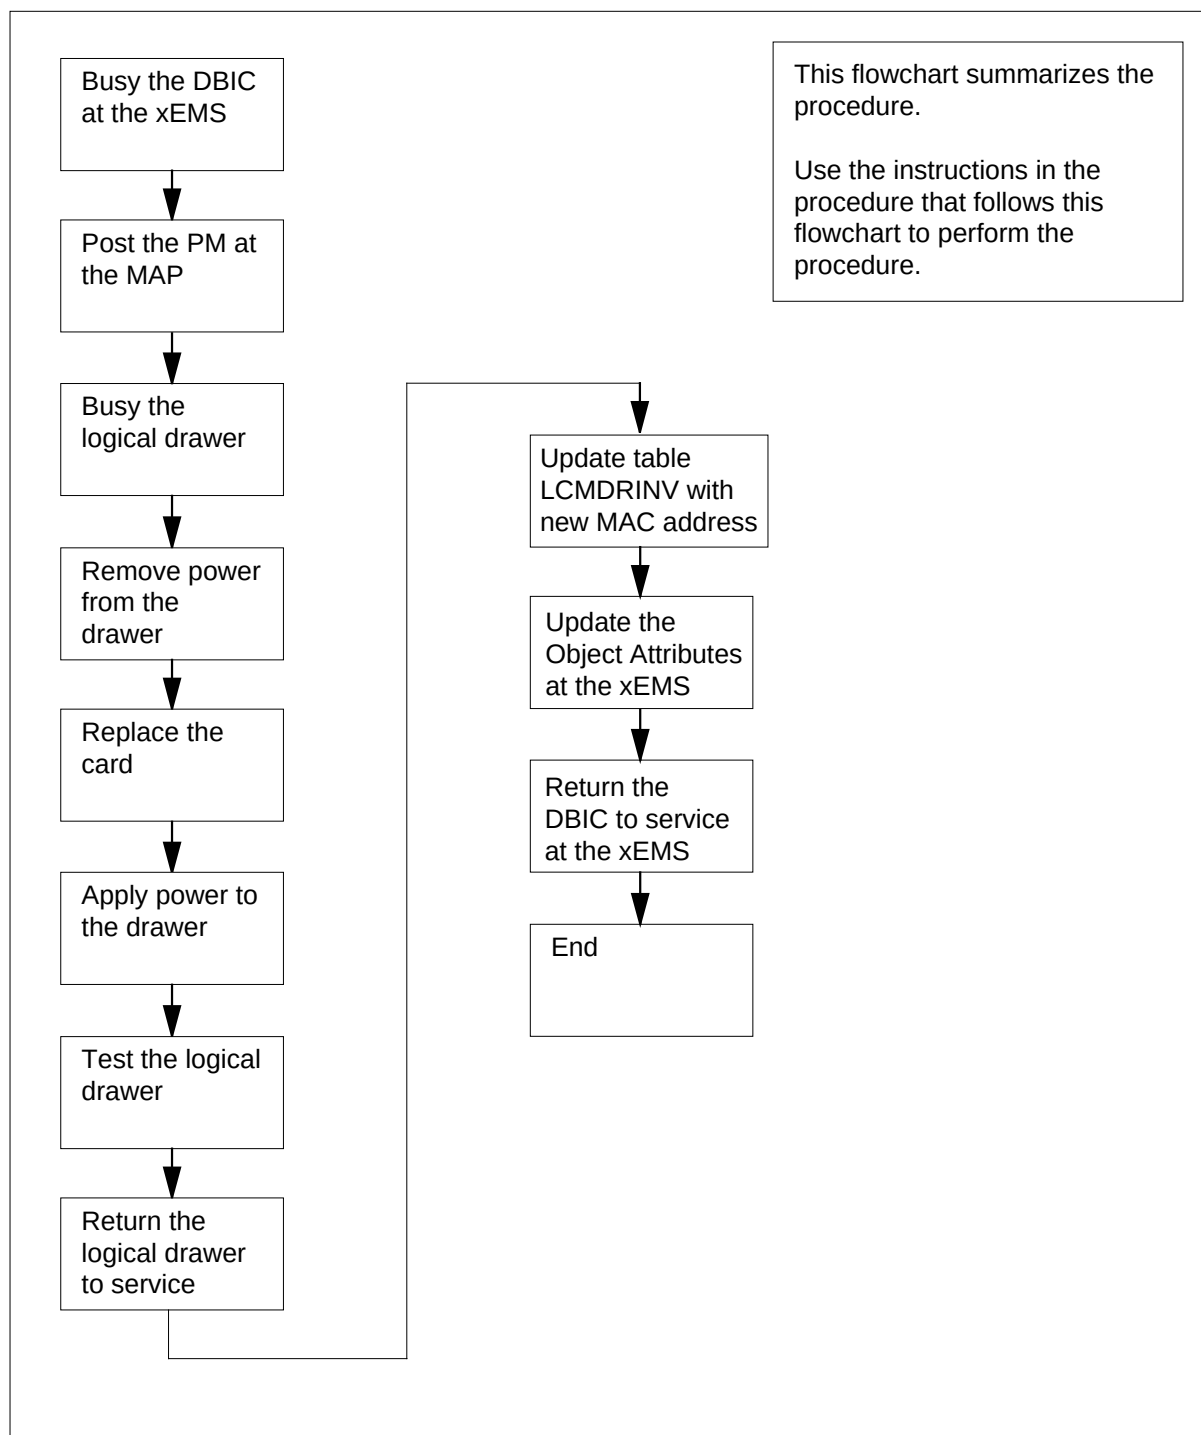

NTEX54 in an RLCM (continued)

Replacing an NTEX54 in an RLCM

At your current location

1

**CAUTION****Loss of service**

This procedure directs you to manually busy a line drawer. Removal of a line drawer from service can cause the system to drop calls in progress. Perform this procedure only if you need to restore out-of-service components. Unless it is urgent, perform this procedure during periods of low traffic.

Obtain a replacement card. Make sure that the replacement card and the card that you remove have the same product engineering code (PEC) and PEC suffix.

2

**CAUTION****Transport network must know new MAC address**

Work with the network administrator during this procedure. The transport network must know the MAC address of the new DBIC before the DBIC can support 1MMS.

Write down the 12-digit number stamped on the new NTEX54 card. This number is the media access control (MAC) address. You will use the MAC address later in this procedure.

At the xEMS workstation

- 3 Go to the submap of the LCM line drawer with the NTEX54 card that you will replace.
- 4 Place the cursor on the DBIC you want to busy and use the mouse to select **Maintenance -> DBIC -> ManB** from the pop-up menu.

At the MAP terminal

- 5 To access the peripheral module (PM) level of the MAP (maintenance and administration position) display and post the LCM, type
>MAPCI;MTC;PM;POST LCM site frame_no lcm_no
and press the Enter key.
where

NTEX54 in an RLCM (continued)

site

is the PM location (alphanumeric)

frame_no

is the equipment frame number (00 to 511)

lcm_no

is the number of the LCM (0 or 1)

Example of a MAP display:

```

LCM REM1 01 1  ISTb  Links 00S: Cside  0 Pside  0
Unit0: ISTb                               /RG:  0
Unit1: ISTb  Mtce                          /RG:  1  Ring gen Test
Drwr:  01  23  45  67  89  01  23  45  67  89  RG: Pref 1 InSv
      ..  ..  ..  ..  MM  ..  ..  ..  ..  ..  Stby 0 InSv

```

- 6 Record the numbers of the logical drawers for the NTEX54.

Note: Logical drawers configure in pairs for the physical drawer. The NTEX54 services the physical drawer. Both logical drawers must be manually busy to perform this card replacement procedure.

- 7 Check the state of the affected logical drawers.

If the state for	Do
one or both logical drawers is I, S, or . (dot)	step 8
both logical drawers is M	step 11
one or both logical drawers is 0 or -	Determine why the drawer is offline. If necessary, contact the next level of support.

- 8 To manually busy the logical drawer, type

>BSY DRWR drwr_no

and press the Enter key.

where

drwr_no

is the logical drawer number (0 to 23)

Example of a MAP response:

```

LCM REM1 01 1  Drwr 0 will be taken out of service
Please confirm ("YES", "Y", "NO", or "N"):

```

- 9 To confirm the command, type

>YES

and press the Enter key.

NTEX54
in an RLCM (continued)

Example of a MAP response:

LCM REM1 01 1 Drwr 0 Bsy Passed

If	Do
you must busy the other logical drawer of the pair	step 10
both logical drawers are now M	step 11

- 10** Busy the other logical drawer of the pair.
>BSY DRWR drwr_no
and press the Enter key.
where
drwr_no
is the logical drawer number (0 to 23)

Example of a MAP response:

LCM REM1 01 1 Drwr 0 Bsy Passed

NTEX54 in an RLCM (continued)

At the shelf

11



DANGER

Static electricity damage

Wear a wrist strap that connects to the wrist-strap grounding point to handle circuit cards. The wrist-strap grounding point is on a frame supervisory panel (FSP) or a modular supervisory panel (MSP). The wrist strap protects the cards against static electricity damage.



DANGER

Potential equipment damage

Note the fuses that you remove from the fuse panel. If you do not insert fuses in the correct location on the fuse panel, equipment damage occurs.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.

Remove fuses for the line drawer containing the faulty DBIC. Perform the following steps. Refer to the figure that follows to identify the correct fuses.

Note: Fuse markings do not always identify voltage. Make sure that you note the fuses and the location of the fuses in the fuse panel.


- a Remove the -48V fuse for the line drawer that contains the faulty DBIC.
- b Remove the +15V fuse for the line drawer that contains the faulty DBIC.
- c Remove the +5V fuse for the line drawer that contains the faulty DBIC.

NTEX54 in an RLCM (continued)

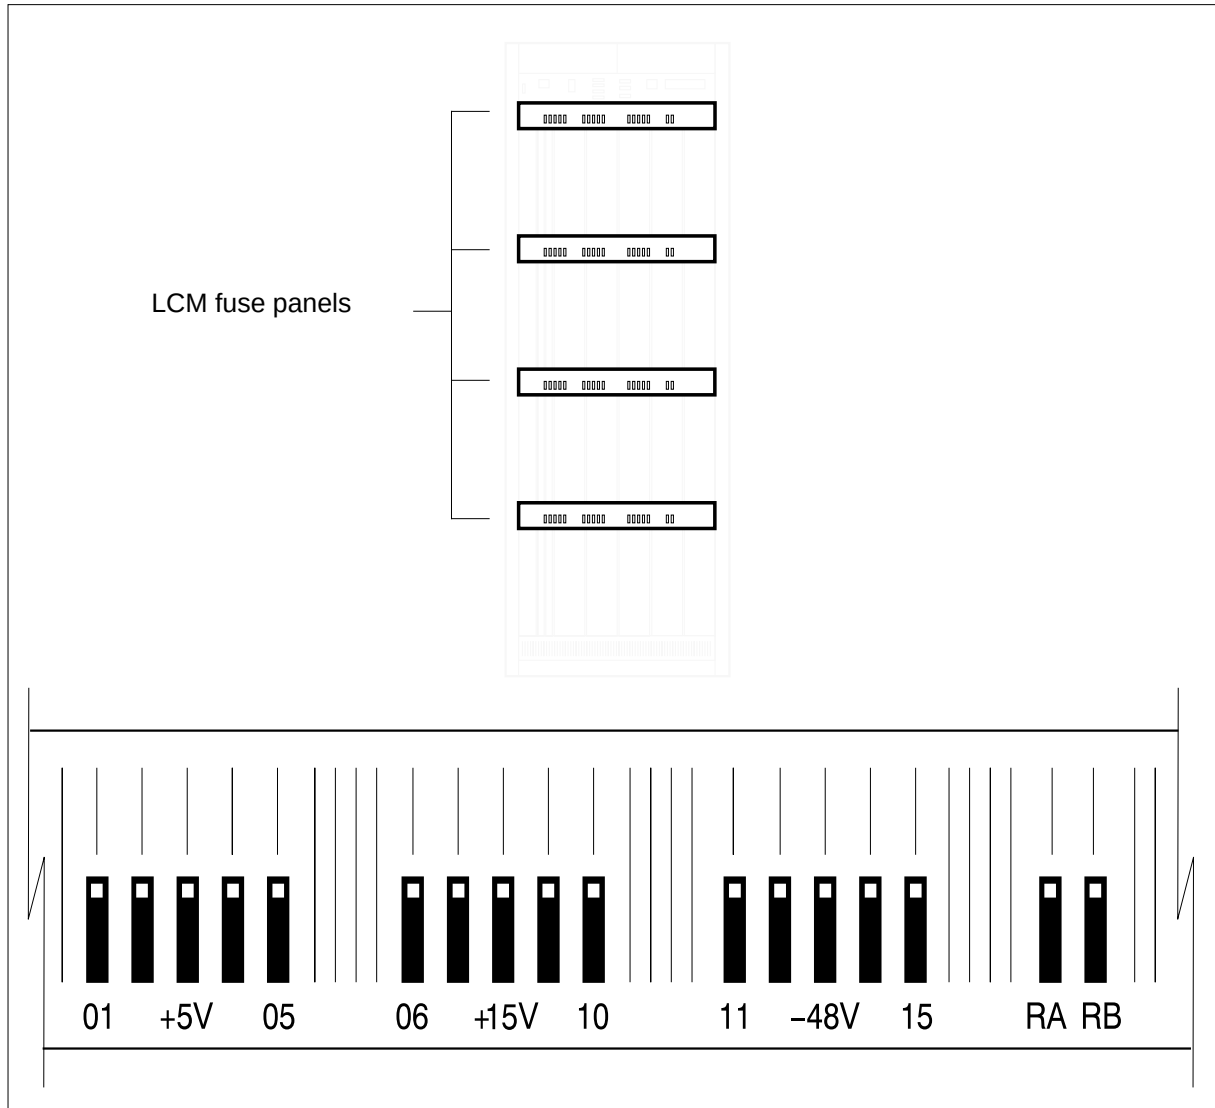


- 12** Identify the drawer. Press the small thumb-latch button on the lower left edge of the drawer. Pull the drawer out. To secure the drawer in a steady horizontal position, tip the drawer until the catch rests on the line drawer track.

NTEX54 in an RLCM (continued)

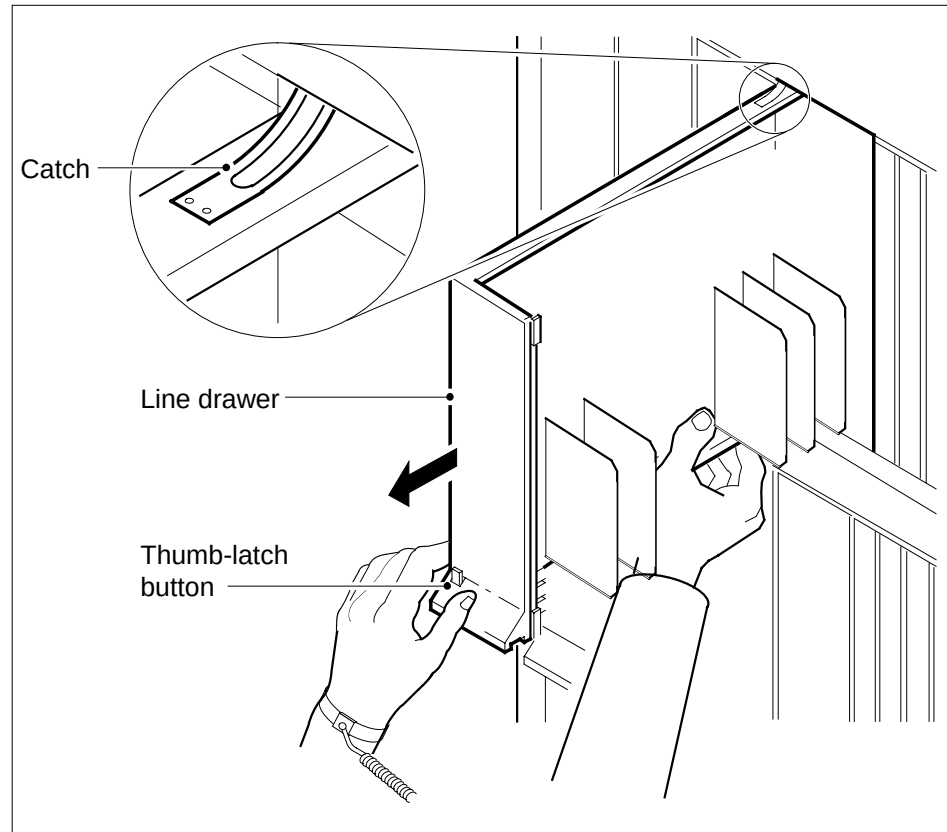

- 13** Disconnect the data cable from the RJ-45 connector on the DBIC. The RJ-45 connector is located at slot position 16 of the odd LSG (connector slot). Refer to the following figure.

NTEX54 in an RLCM (continued)

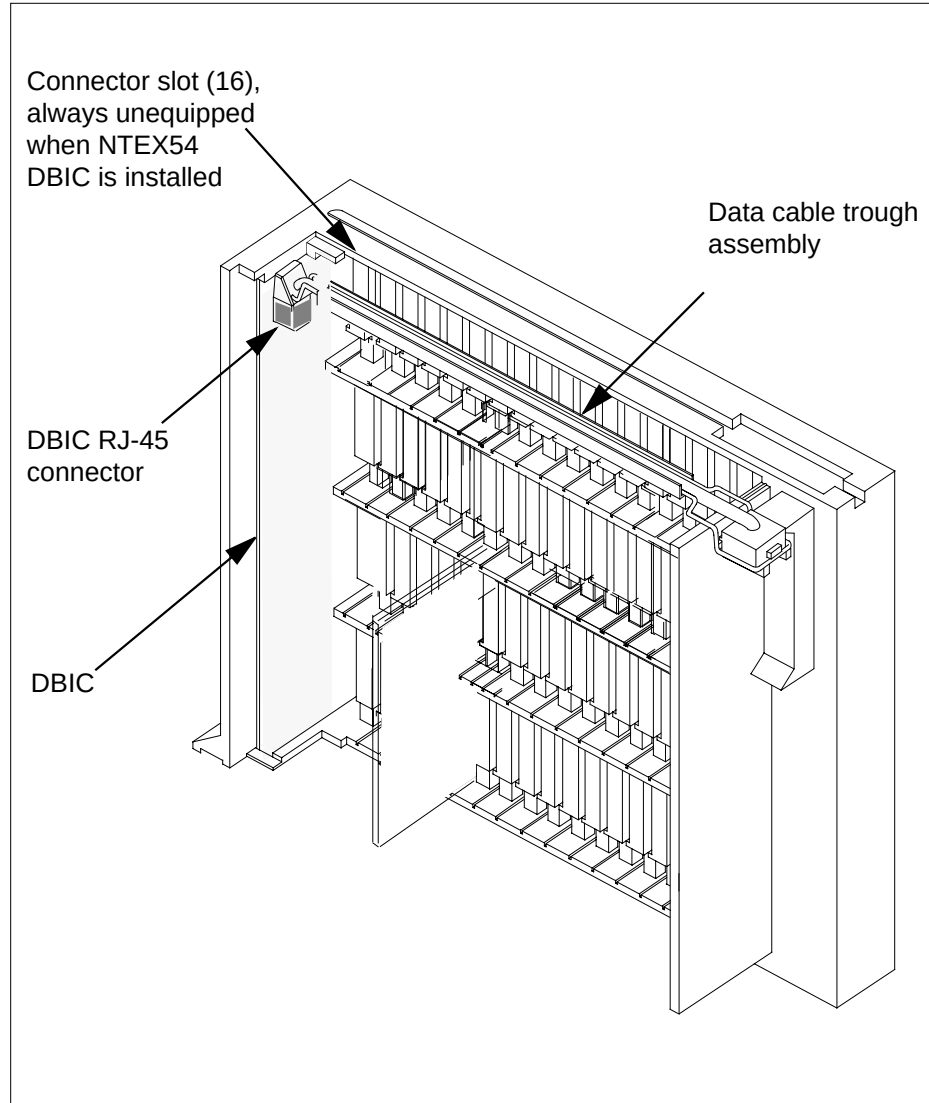

14




DANGER

Do not hold the card by the levers only

If you hold a card by the locking levers only, the levers can break. Pull the card half way out of the slot. Carefully grasp the card from below for more support. Continue to remove the card from the drawer. Make sure that you do not touch any wires or internal parts on the card.

NTEX54 in an RLCM (continued)


Open the locking levers on the face of the card.

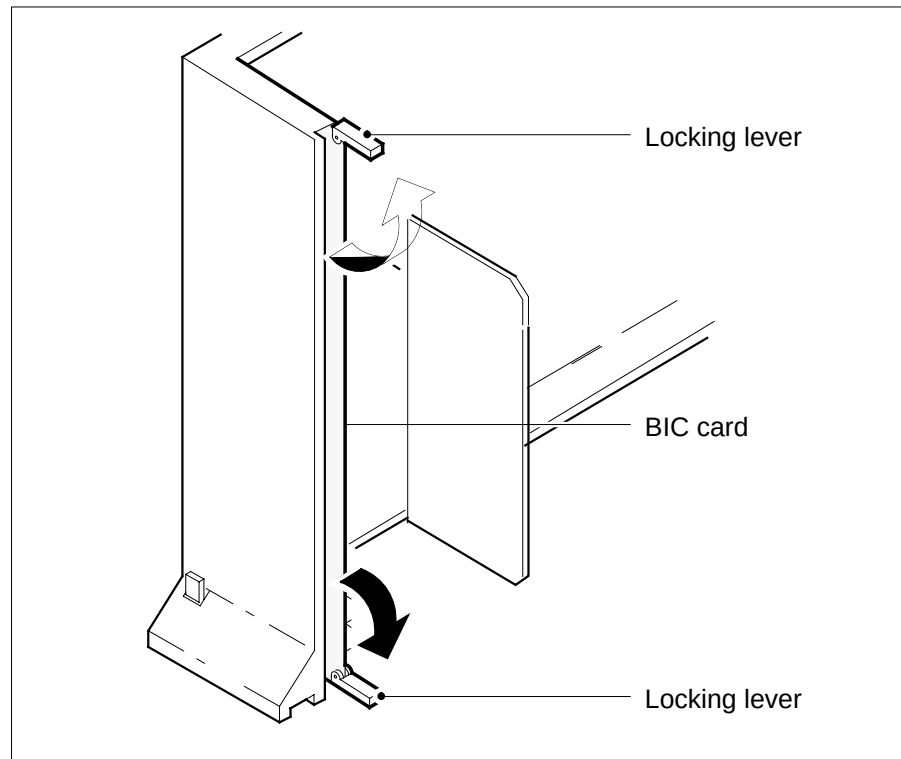

- 15** Grasp the locking levers. Carefully pull the card toward you until the card clears the drawer.

Note: Do not use a rocking motion to remove the card.


NTEX54
in an RLCM (continued)

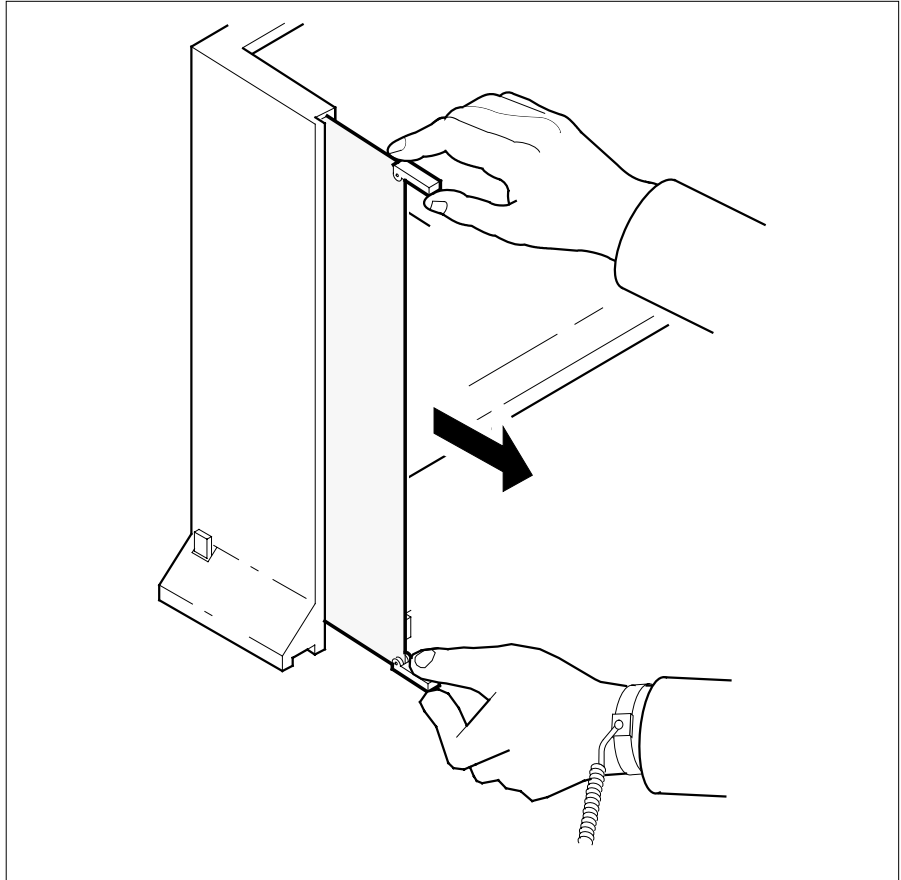

- 16** Place the card that you removed in an electrostatic discharge (ESD) protective container.
- 17** Make sure that the replacement card and the card that you remove have the same PEC and PEC suffix.
- 18** Close the locking levers on the replacement card. Align the card with the pin slots in the drawer. Carefully slide the card into the drawer.
- 19** Support the drawer with your left hand. Use your right hand to push on the upper and lower edges of the card. Make sure that the card sits completely in the drawer.


Note: Do not use a rocking motion to insert the card.

NTEX54
in an RLCM (continued)

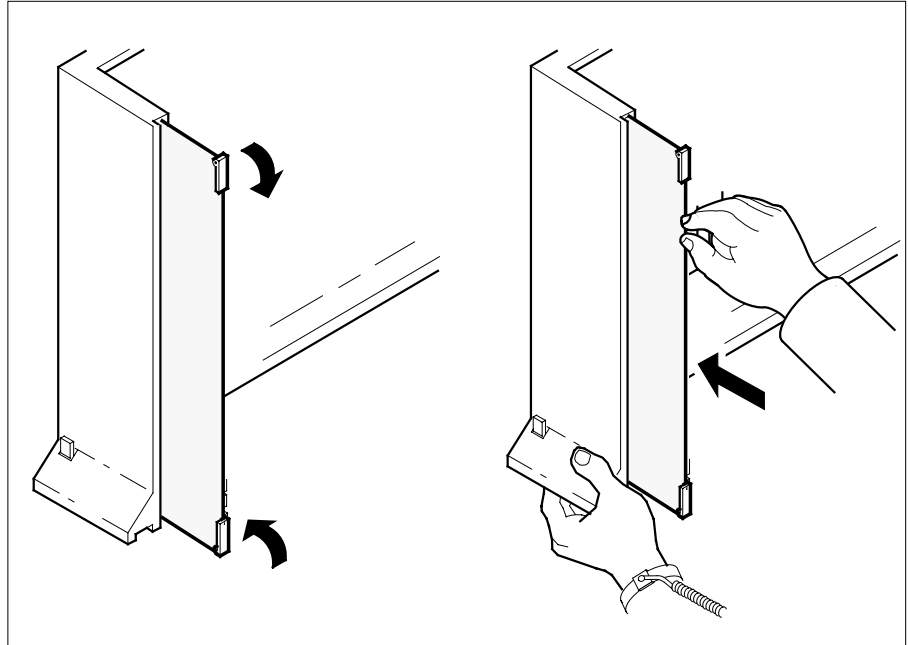

- 20** Connect the data cable to the RJ-45 connector that you disconnected in step 13. Refer to the following figure.

NTEX54 in an RLCM (continued)

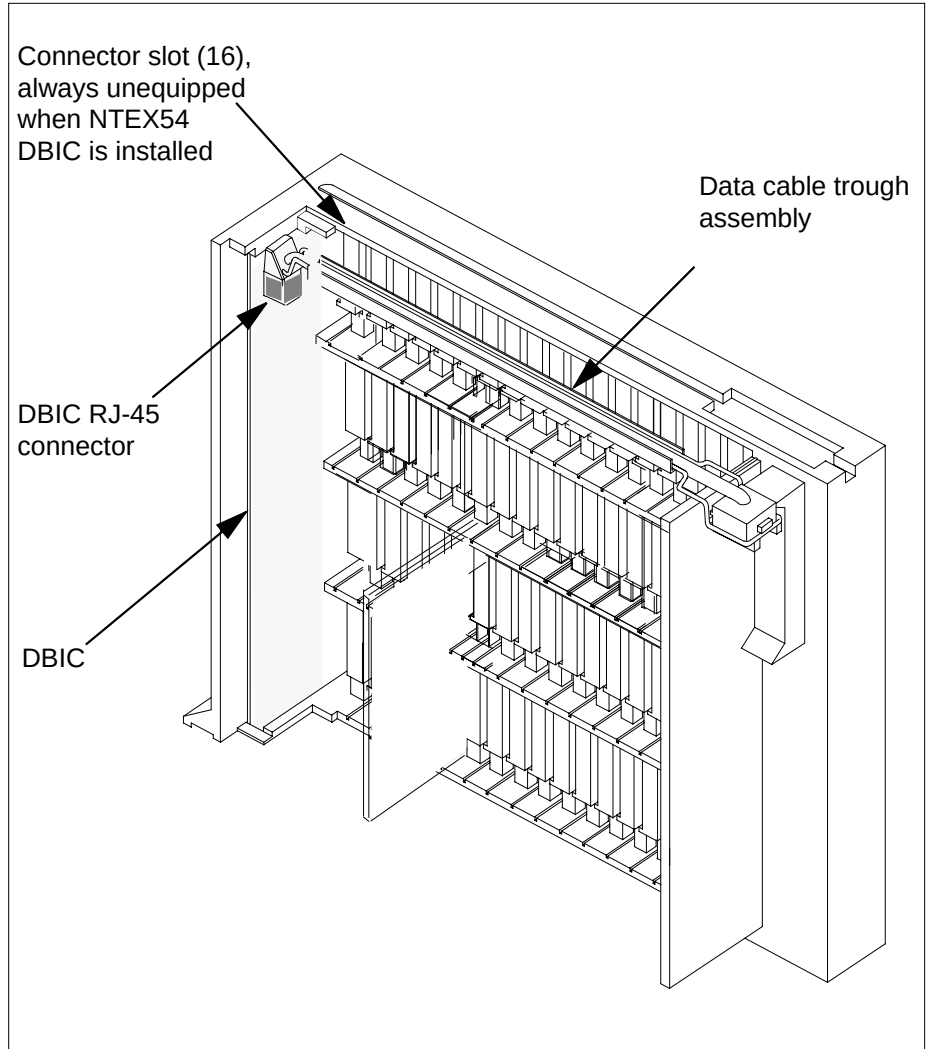

21 Close the line drawer.

22




DANGER

Potential equipment damage

Make sure you insert the fuses in the correct location on the fuse panel to prevent equipment damage.

Insert the fuses that you removed in step 11. Refer to the following figure.

NTEX54 in an RLCM (continued)

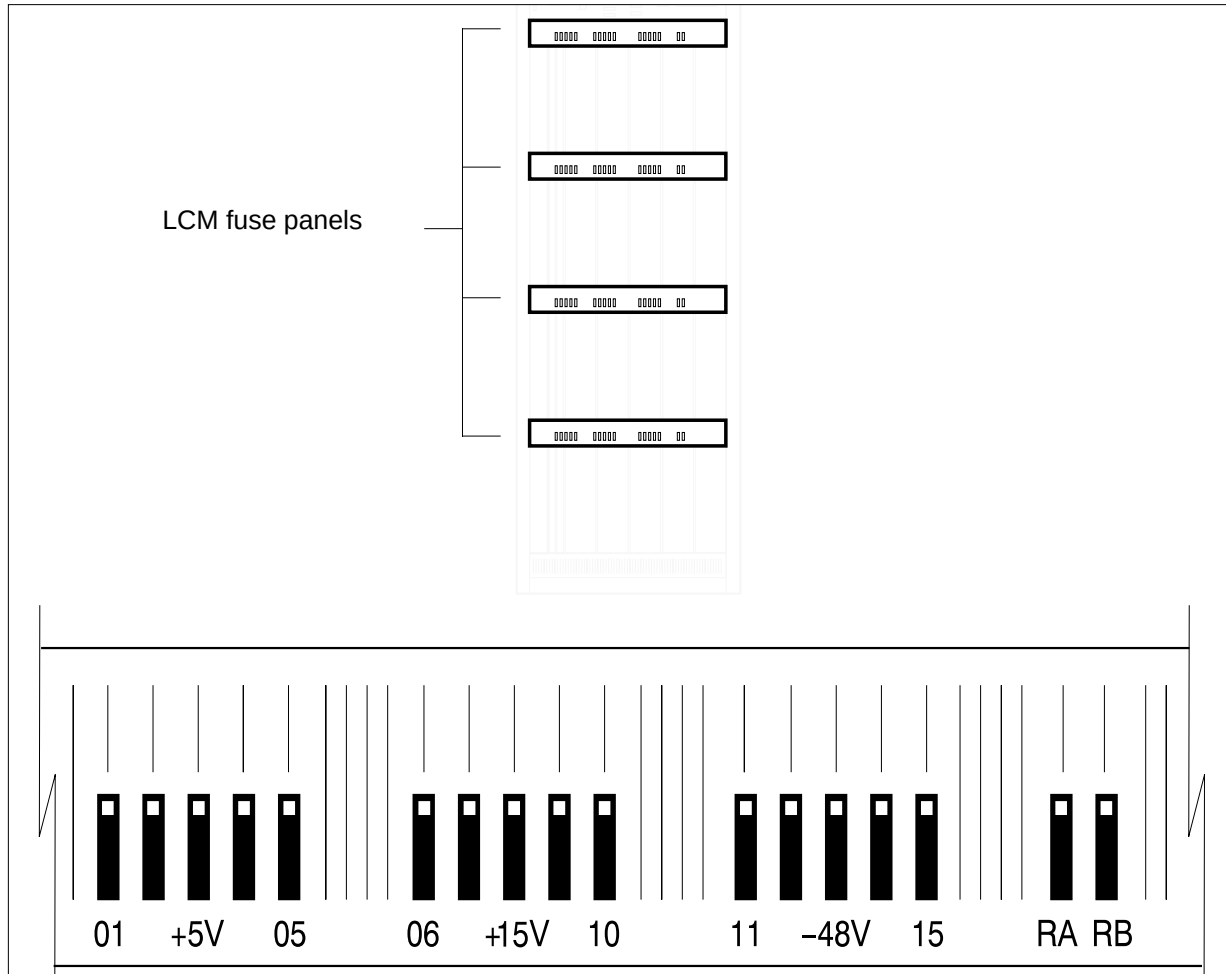

Note: Fuses are coded for position. The colored square on the face of the fuse identifies the top edge.

- a Insert the +5V fuse.
- b Insert the +15V fuse.
- c Insert the -48V fuse.

At the MAP terminal

23 A maintenance flag (Mtce) can appear. This flag indicates that system-initiated maintenance tasks are in progress. To stop the system-initiated maintenance tasks, type

>ABTK

and press the Enter key.

NTEX54 in an RLCM (continued)

- 24** To return the logical drawer to service, type

>RTS DRWR drwr_no

and press the Enter key.

where

drwr_no

is the logical drawer number (0 to 19)

Example of a MAP response:

```
OSvce Tests Initiated
LCM REM1 00 0 Drwr 0 Tst Passed
LCM REM1 00 0 Drwr 0 Rts Passed
```

If the RTS command	Do
passed, and you must return the other logical drawer to service	step 25
passed, and the other logical drawer is in service	step 26
failed	step 39

- 25** Repeat step 24 for the other logical drawer in the pair.

- 26** Update table LCMDRINV.

Note: Make sure you have the new MAC address from the replacement card as recorded in step 2.

- a** To open table LCMDRINV, type

>TABLE LCMDRINV

and press the Enter key.

- b** To position on the tuple for the LCM, type

>POS site_name frame_no lcm_no

and press the Enter key.

where

site_name

is the name of the site

frame_no

is the number of the frame

lcm_no

is the number of the LCM

- c** To begin changing the tuple, type

>CHA

and press the Enter key.

NTEX54 in an RLCM (continued)

- d To continue processing, type
>Y
and press the Enter key.
- e Press the Enter key to scroll through the fields until you access the field with the MAC address.
- f Enter the new MAC address. Type
>drwr_id card_pec drwr_pec mac_address ip_address
and press the Enter key.
where
 - drwr_id**
is the physical number of the drawer
 - card_pec**
is NTEX54AA, NTEX54AB, NTEX54BA, or NTEX54CA
 - drwr_pec**
is the PEC of the drawer
 - mac_address**
is the MAC address of the new NTEX54
 - ip_address**
is the IP address of the new NTEX54
- g Press the Enter key to scroll through remaining fields.
- h Confirm the change. Type
>Y
and press the Enter key.
- i Exit the table. Type
>QUIT
and press the Enter key.

At the xEMS workstation

27



CAUTION

Transport network must know new MAC address

Before you return the DBIC to service, you must provide the MAC address for the DBIC to the transport network. Contact the network administrator for assistance.

28

- Go to the submap of the LCM line drawer with the new NTEX54 card.
- Select the card by placing the cursor on the DBIC.

NTEX54
in an RLCM (end)

- 29 From the pop-up menu select Describe/Modify Object. The Object Description dialog box appears.
- 30 From the Object Description dialog box, select HSTP Application from the fields under Object Attributes.
- 31 Select View/Modify Object Attributes.
- 32 Enter the new MAC address in the %LAC MAC Address field, for example, 0060381120a1.
- 33 Click the Verify button to verify the information.
- 34 Click the OK button to close the Attributes dialog box.
- 35 Click OK to close the Object Description dialog box.
- 36 Place the cursor on the DBIC you want to return to service and use the mouse to select
Maintenance -> DBIC -> Rts
from the pop-up menu.
- 37 Send any faulty cards for repair according to local procedure.
- 38 Record the following items in office records:
 - date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the cardGo to step 40.
- 39 Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.
- 40 You have successfully completed this card replacement procedure.

NTEX54 in an RSC LCM

Application

Use this procedure to replace the following cards in an RSC LCM line drawer.


PEC	Suffixes	Name
NTEX54	AA	Data enhanced bus interface card (DBIC)
NTEX54	AB	Data enhanced bus interface card (DBIC)
NTEX54	BA	Data enhanced bus interface card (DBIC)

Common procedures

None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

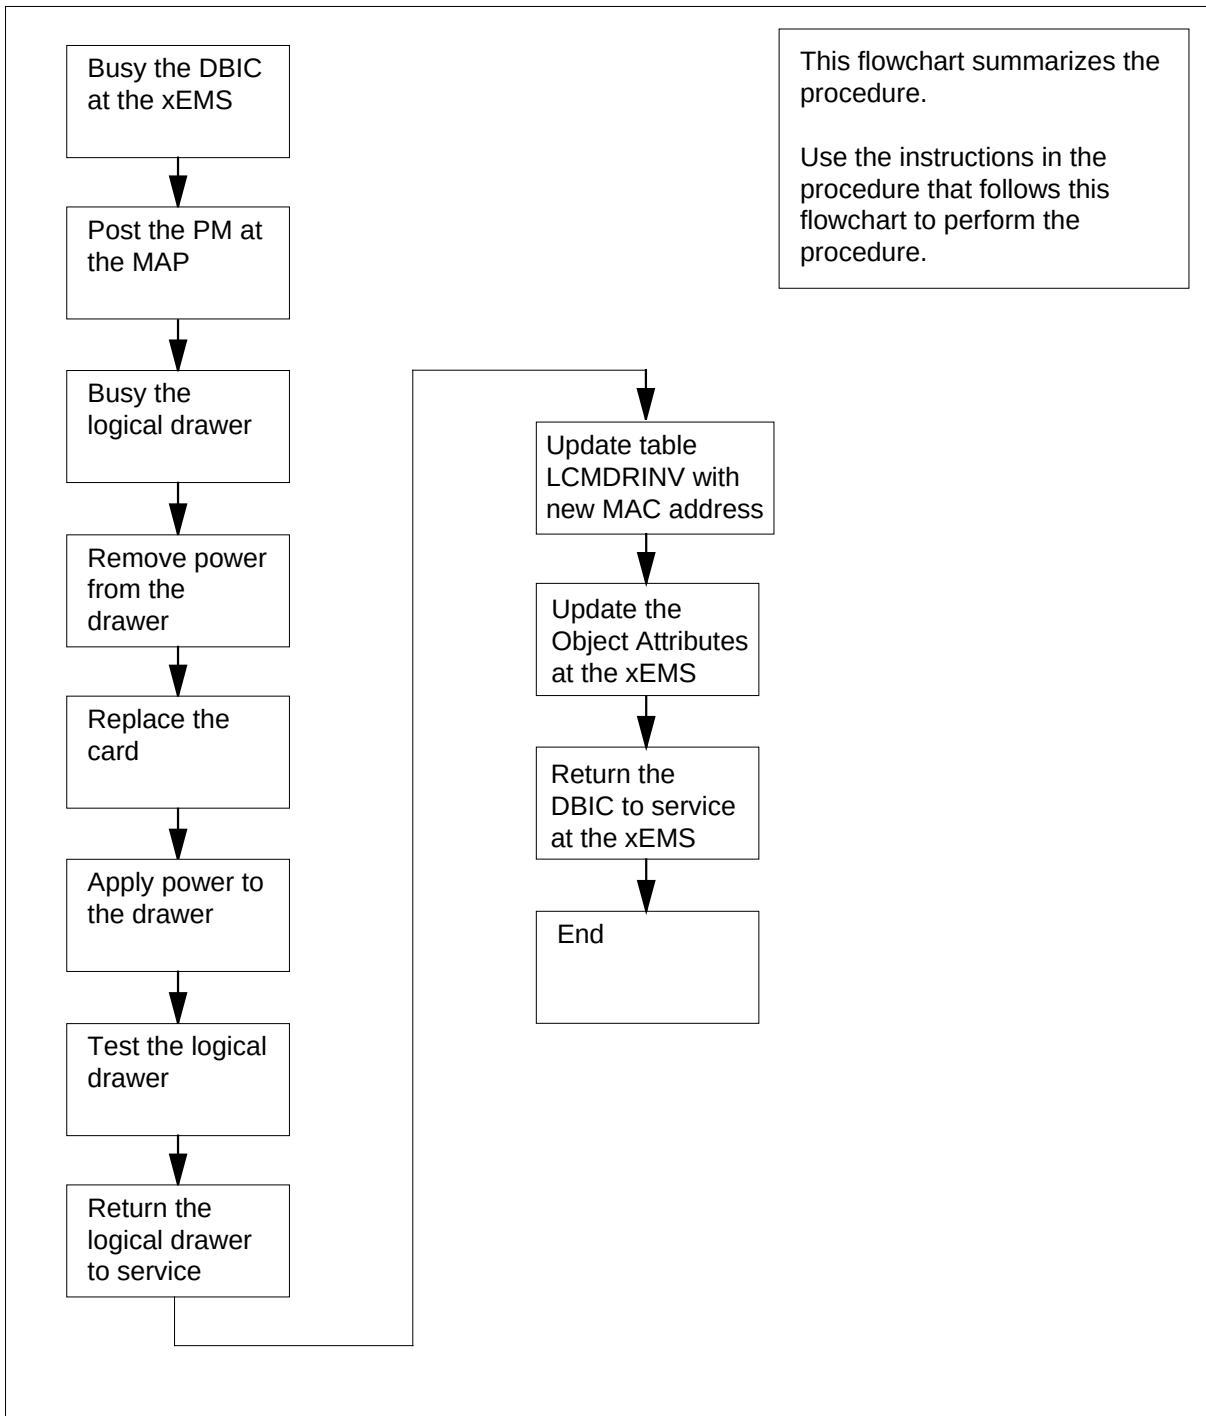NTEX54
in an RSC LCM (continued)**Summary of replacing an NTEX54 in RSC LCM**

NTEX54 in an RSC LCM (continued)

Replacing an NTEX54 in RSC LCM

At your current location

1



CAUTION

Loss of service

This procedure directs you to manually busy a line drawer. Removal of a line drawer from service can cause the system to drop calls in progress. Perform this procedure only if you need to restore out-of-service components. Unless it is urgent, perform this procedure during periods of low traffic.

Obtain a replacement card. Make sure that the replacement card and the card that you remove have the same product engineering code (PEC) and PEC suffix.

2



CAUTION

Transport network must know new MAC address

Work with the network administrator during this procedure. The transport network must know the MAC address of the new DBIC before the DBIC can support 1MMS.

Write down the 12-digit number stamped on the new NTEX54 card. This number is the media access control (MAC) address. You will use the MAC address later in this procedure.

At the xEMS workstation

- 3** Go to the submap of the LCM line drawer with the NTEX54 card that you will replace.
- 4** Place the cursor on the DBIC you want to busy and use the mouse to select **Maintenance -> DBIC -> ManB** from the pop-up menu.

NTEX54 in an RSC LCM (continued)

At the MAP terminal

- 5 To access the peripheral module (PM) level of the MAP (maintenance and administration position) display and post the LCM, type

>MAPCI;MTC;PM;POST LCM site frame_no lcm_no

and press the Enter key.

where

site

is the PM location (alphanumeric)

frame_no

is the equipment frame number (00 to 511)

lcm_no

is the number of the LCM (0 or 1)

Example of a MAP display:

```
LCM REM1 01 1 ISTb Links OOS: Cside 0 Pside 0Unit0: ISTb
/RG: 0Unit1: ISTb Mtce /RG: 1 Ring gen Test 11 11
11 11 11 RG: Pref 1 InSvDrwr: 01 23 45 67 89 01 23 45 67 89 Stby
0 InSv .. .. .. MM .. .. .. ..
```

- 6 Record the numbers of the logical drawers for the NTEX54.
- Note:** Logical drawers configure in pairs for the physical drawer. The NTEX54 services the physical drawer. Both logical drawers must be manually busy to perform this card replacement procedure.
- 7 Check the state of the affected logical drawers.

If the state for	Do
one or both logical drawers is I, S, or . (dot)	step 8
both logical drawers is M	step 11
one or both logical drawers is 0 or -	Determine why the drawer is offline. If necessary, contact the next level of support.

- 8 To manually busy the logical drawer, type

>BSY DRWR drwr_no

and press the Enter key.

where

drwr_no

is the logical drawer number (0 to 23)

NTEX54
in an RSC LCM (continued)

Example of a MAP response:

LCM REM1 01 1 Drwr 0 will be taken out of servicePlease confirm ("YES", "Y", "NO", or "N"):

- 9 To confirm the command, type
>YES
and press the Enter key.
Example of a MAP response:

LCM REM1 01 1 Drwr 0 Bsy Passed

If	Do
you must busy the other logical drawer of the pair	step 10
both logical drawers are now M	step 11

- 10 Busy the other logical drawer of the pair.
>BSY DRWR drwr_no
and press the Enter key.
where
drwr_no
is the logical drawer number (0 to 23)
Example of a MAP response:

LCM REM1 01 1 Drwr 0 Bsy Passed

NTEX54
in an RSC LCM (continued)

At the shelf**11****WARNING****Static electricity damage**

Wear a wrist strap that connects to the wrist-strap grounding point to handle circuit cards. The wrist-strap grounding point is on a frame supervisory panel (FSP) or a modular supervisory panel (MSP). The wrist strap protects the cards against static electricity damage.

**DANGER****Potential equipment damage**

Note the fuses that you remove from the fuse panel. If you do not insert fuses in the correct location on the fuse panel, equipment damage occurs.

**DANGER****Equipment damage**

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.

Remove fuses for the line drawer containing the faulty DBIC. Perform the following steps. Refer to the figure that follows to identify the correct fuses.

Note: Fuse markings do not always identify voltage. Make sure that you note the fuses and the location of the fuses in the fuse panel.


- a Remove the -48V fuse for the line drawer that contains the faulty DBIC.
- b Remove the +15V fuse for the line drawer that contains the faulty DBIC.
- c Remove the +5V fuse for the line drawer that contains the faulty DBIC.

NTEX54 in an RSC LCM (continued)

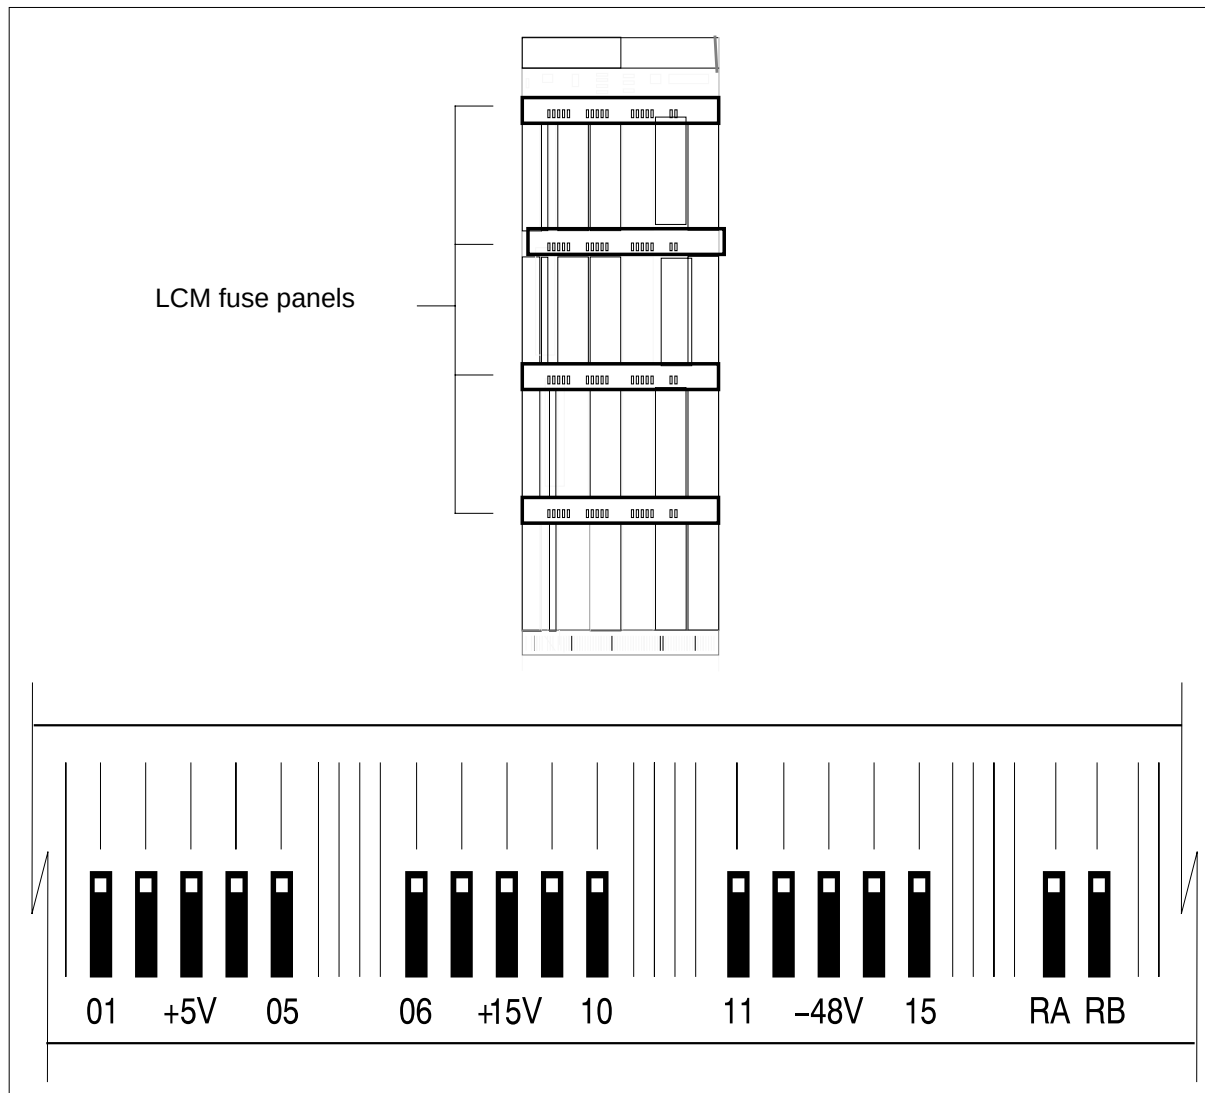


- 12** Identify the drawer. Press the small thumb-latch button on the lower left edge of the drawer. Pull the drawer out. To secure the drawer in a steady horizontal position, tip the drawer until the catch rests on the line drawer track.

NTEX54 in an RSC LCM (continued)

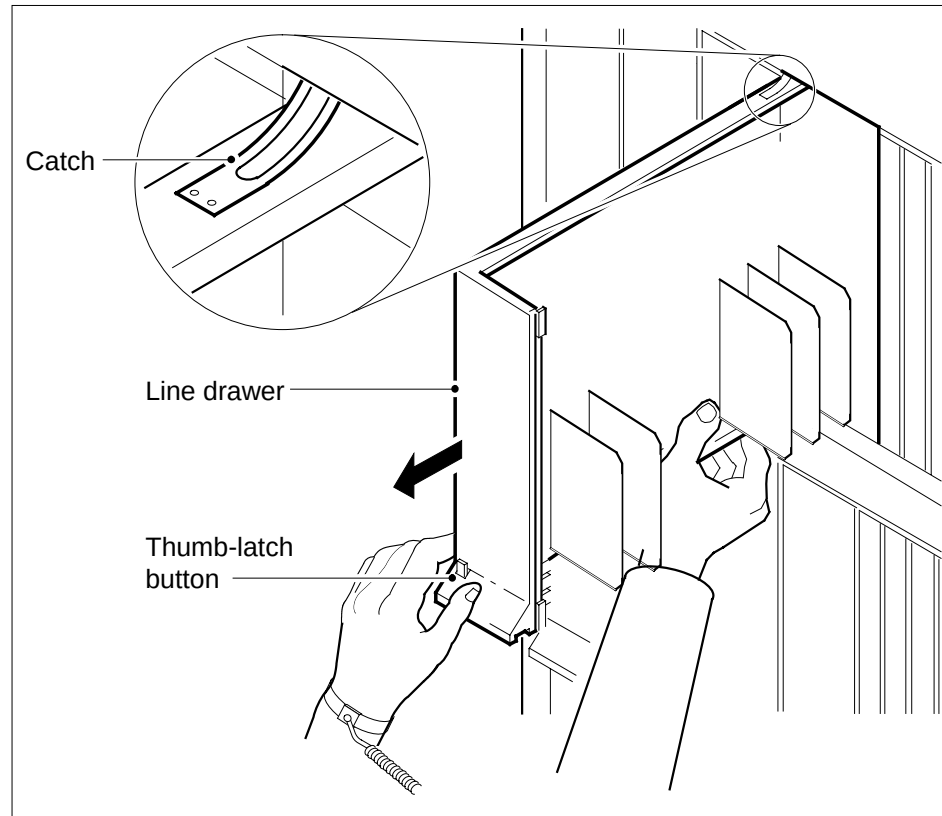

- 13** Disconnect the data cable from the RJ-45 connector on the DBIC card. The RJ-45 connector is located at slot position 16 of the odd LSG (connector slot). Refer to the following figure.

NTEX54 in an RSC LCM (continued)

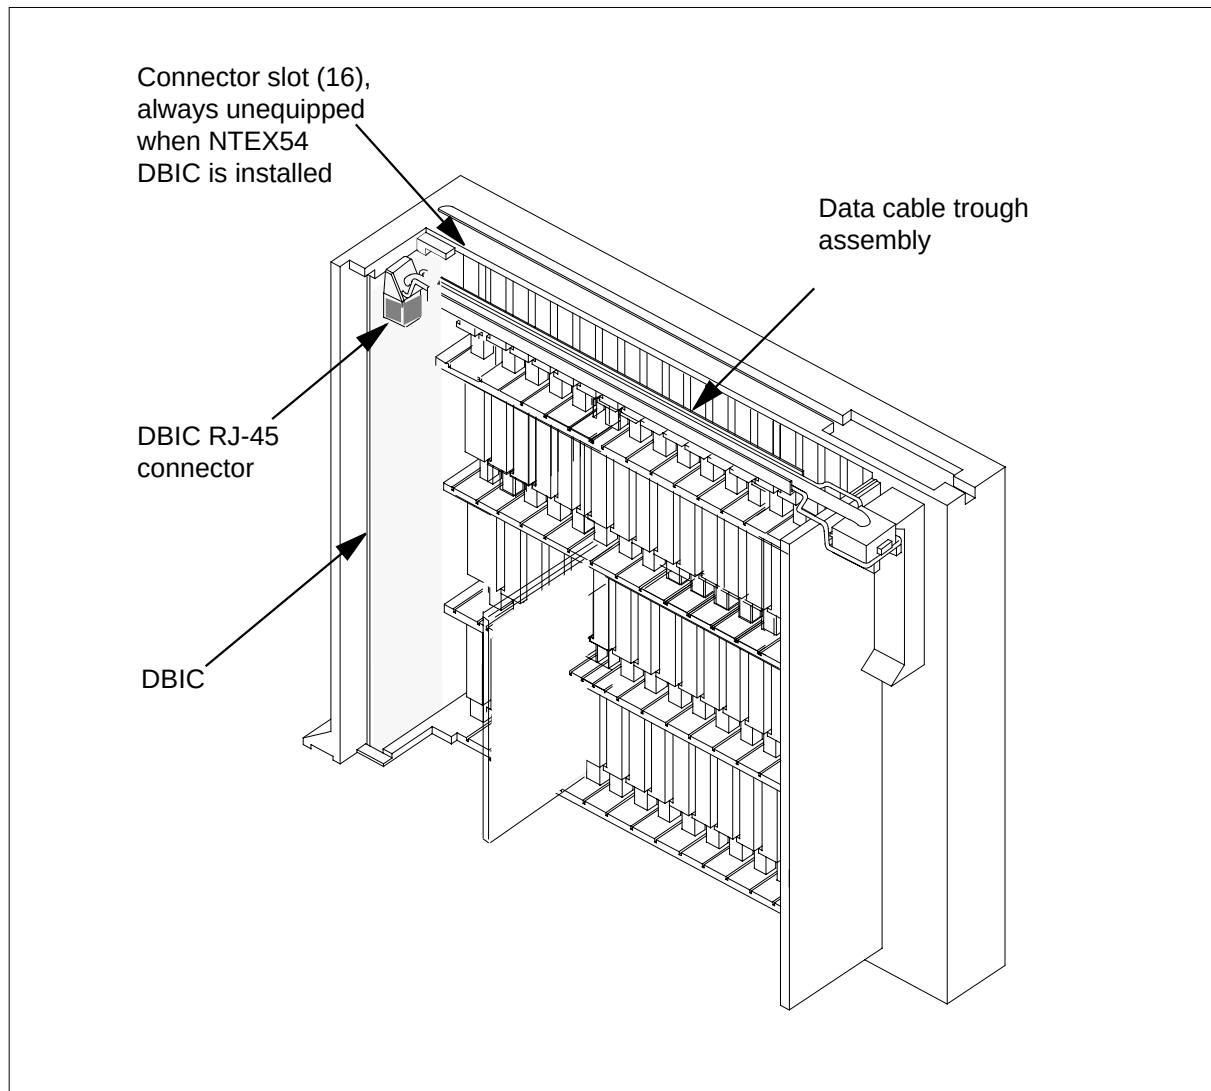

14




DANGER

Do not hold the card by the levers only

If you hold a card by the locking levers only, the levers can break. Pull the card half way out of the slot. Carefully grasp the card from below for more support. Continue to remove the card from the drawer. Make sure that you do not touch any wires or internal parts on the card.

NTEX54 in an RSC LCM (continued)


Open the locking levers on the face of the card.

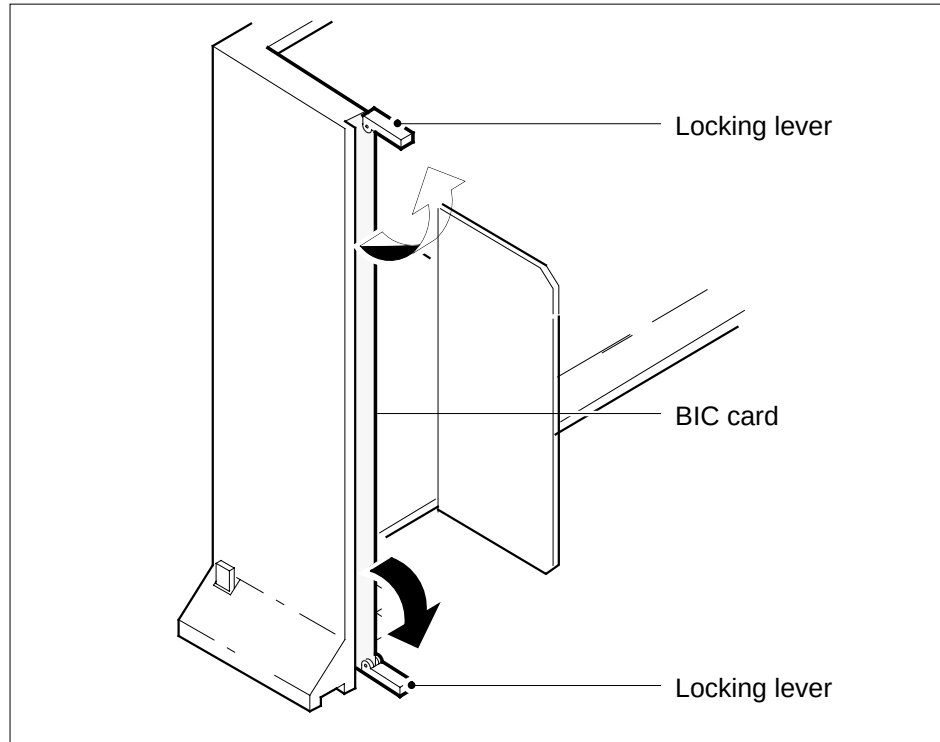

- 15** Grasp the locking levers. Carefully pull the card toward you until the card clears the drawer.

Note: Do not use a rocking motion to remove the card.


NTEX54 in an RSC LCM (continued)

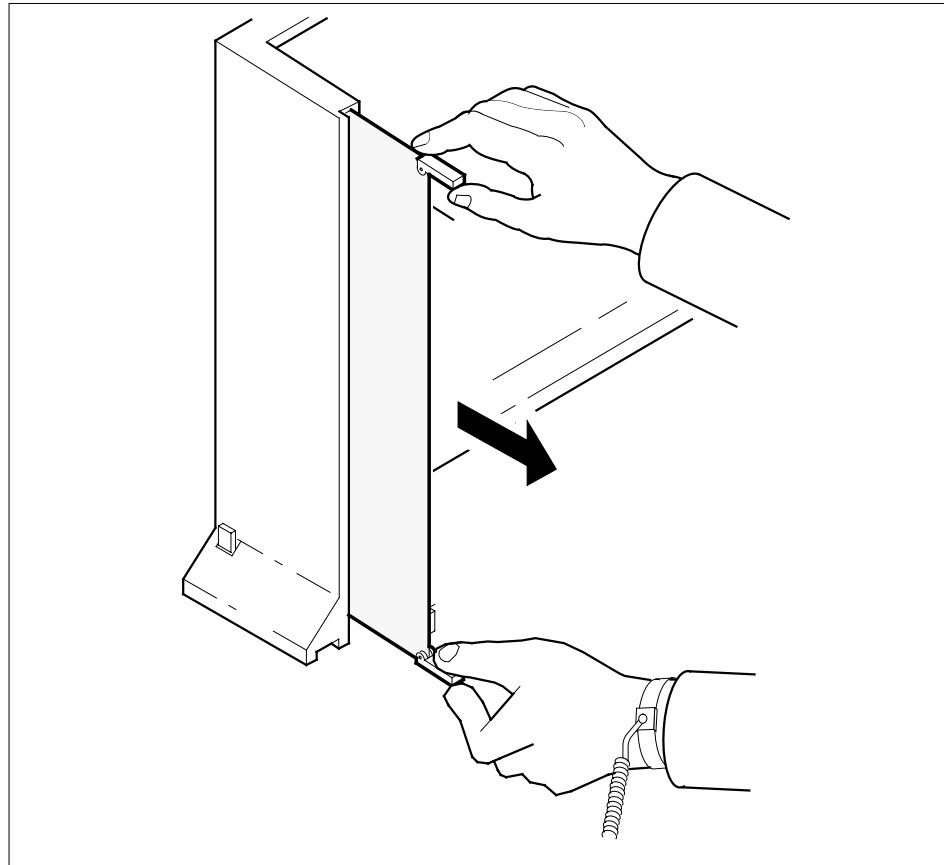

- 16 Place the card that you removed in an electrostatic discharge (ESD) protective container.
- 17 Make sure that the replacement card and the card that you remove have the same PEC and PEC suffix.
- 18 Close the locking levers on the replacement card. Align the card with the pin slots in the drawer. Carefully slide the card into the drawer.
- 19 Support the drawer with your left hand. Use your right hand to push on the upper and lower edges of the card. Make sure that the card sits completely in the drawer.


Note: Do not use a rocking motion to insert the card.

NTEX54
in an RSC LCM (continued)

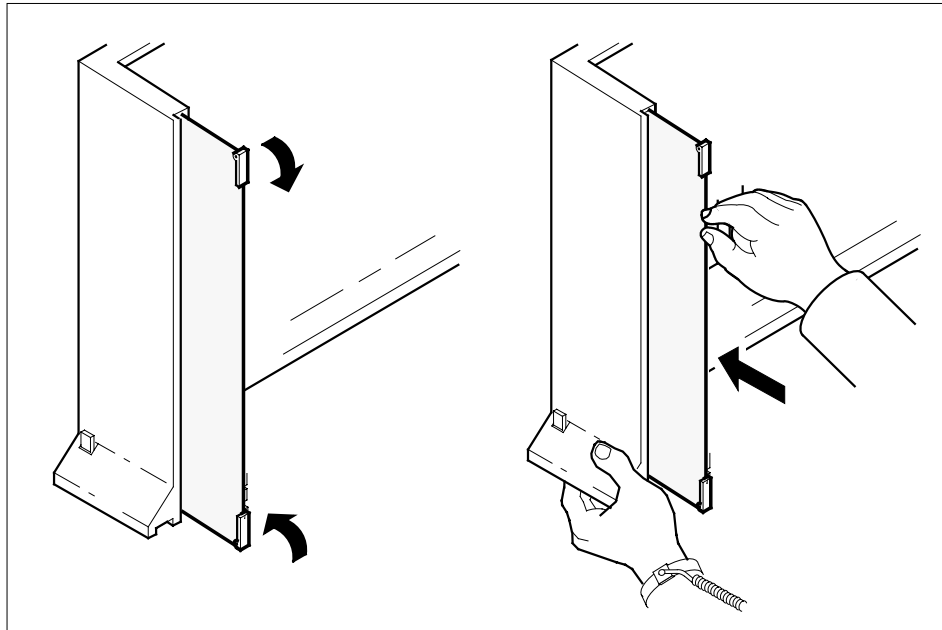

- 20** Connect the data cable to the RJ-45 connector that you disconnected in step 13 . Refer to the following figure.

NTEX54 in an RSC LCM (continued)

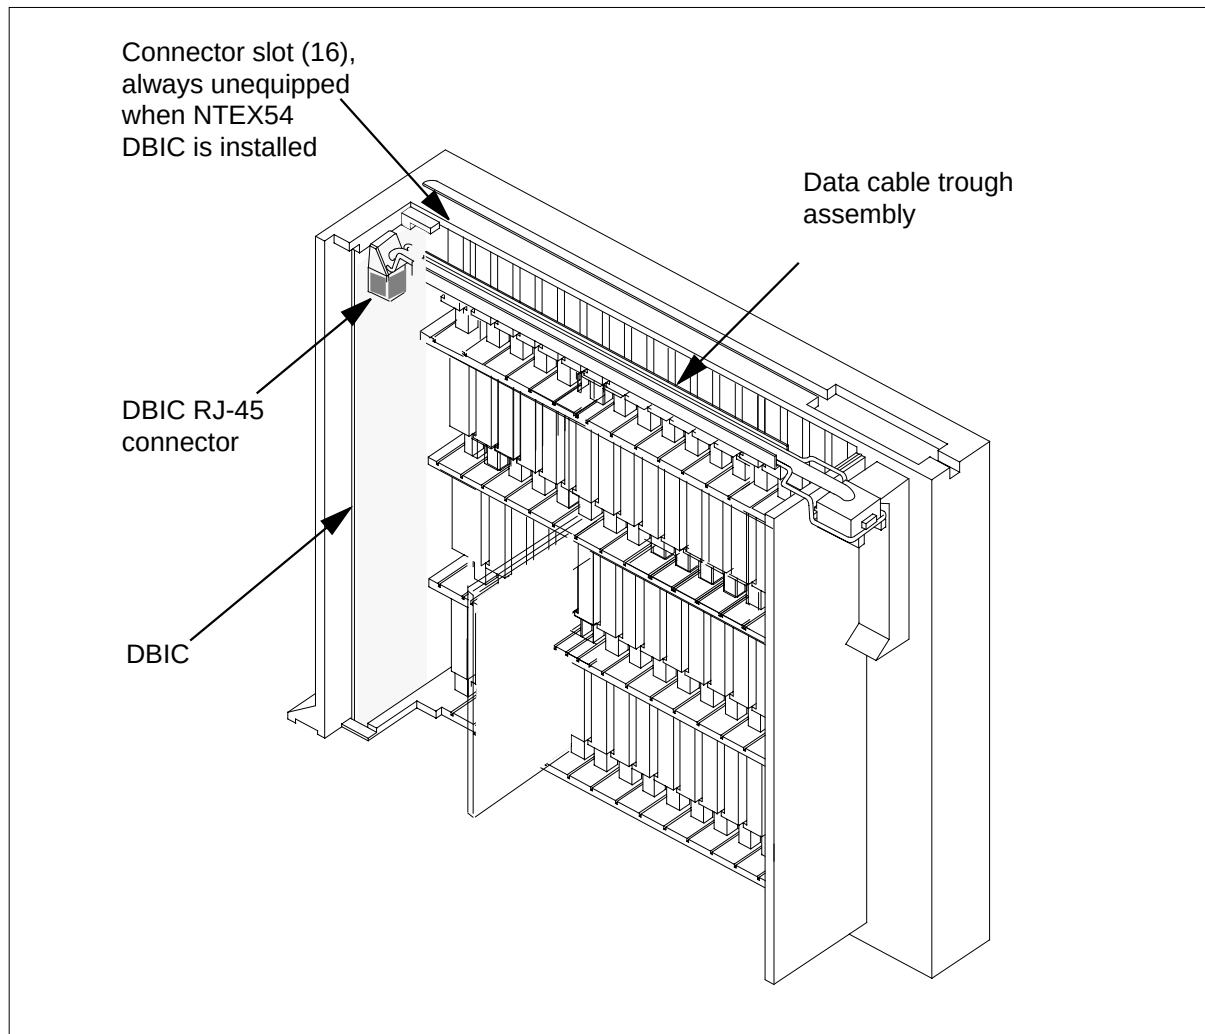

- 21 Close the line drawer.
- 22




DANGER

Potential equipment damage

Make sure you insert the fuses in the correct location on the fuse panel to prevent equipment damage.

Insert the fuses that you removed in step 11. Refer to the following figure.

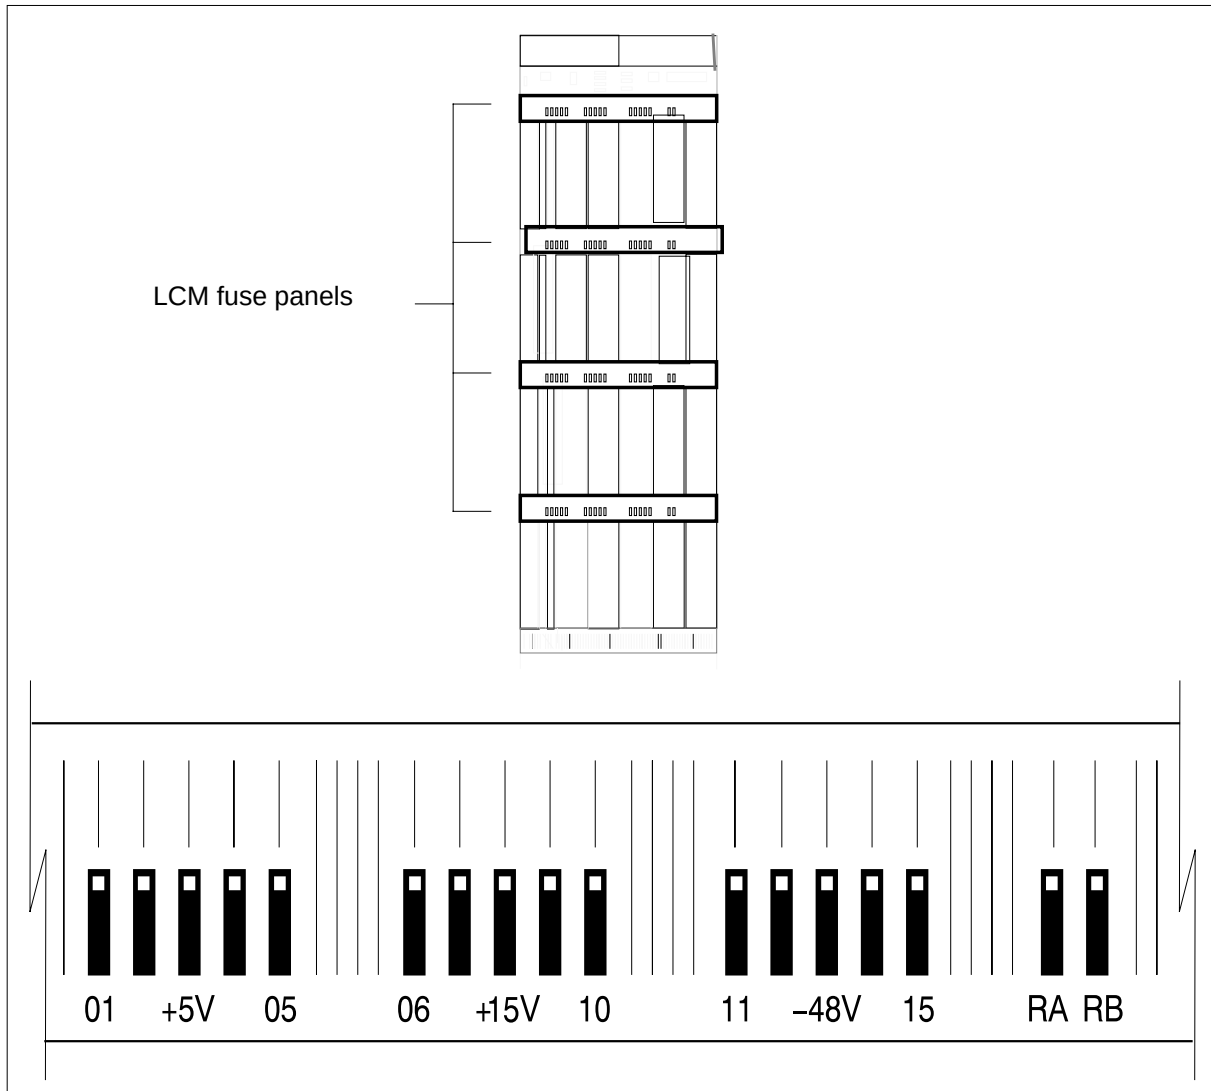NTEX54
in an RSC LCM (continued)

Note: Fuses are coded for position. The colored square on the face of the fuse identifies the top edge.

- a** Insert the +5V fuse.
- b** Insert the +15V fuse.
- c** Insert the -48V fuse.

NTEX54 in an RSC LCM (continued)

At the MAP terminal

- 23** A maintenance flag (Mtce) can appear. This flag indicates that system-initiated maintenance tasks are in progress. To stop the system-initiated maintenance tasks, type

>ABTK

and press the Enter key.

- 24** To return the logical drawer to service, type

>RTS DRWR drwr_no

and press the Enter key.

where

drwr_no

is the logical drawer number (0 to 19)

Example of a MAP response:

OSvce Tests InitiatedLCM REM1 00 0 Drwr 0 Tst PassedLCM REM1 00 0
Drwr 0 Rts Passed

If the RTS command

Do

passed, and you must return the other logical drawer to service

step 25

passed, and the other logical drawer is in service

step 26

failed

step 39

- 25** Repeat step 24 for the other logical drawer in the pair.

- 26** Update table LCMDRINV.

Note: Make sure you have the new MAC address from the replacement card as recorded in step 2.

- a** To open table LCMDRINV, type

>TABLE LCMDRINV

and press the Enter key.

- b** To position on the tuple for the LCM, type

>POS site_name frame_no lcm_no

and press the Enter key.

where

site_name

is the name of the site

frame_no

is the number of the frame

NTEX54 in an RSC LCM (continued)

lcm_no

is the number of the LCM

- c** To begin changing the tuple, type

>CHA

and press the Enter key.

- d** To continue processing, type

>Y

and press the Enter key.

- e** Press the Enter key to scroll through the fields until you access the field with the MAC address.

- f** Enter the new MAC address. Type

>drwr_id pec_id drwr_pec mac_address ip_address

and press the Enter key.

where

drwr_id

is the physical number of the drawer

pec_id

is NTEX54AA, NTEX54AB, or NTEX54BA

drwr_pec

is the PEC of the drawer

mac_address

is the MAC address of the new NTEX54

ip_address

is the IP address of the new NTEX54

- g** Press the Enter key to scroll through remaining fields.

- h** Confirm the change. Type

>Y

and press the Enter key.

- i** Exit the table. Type

>QUIT

and press the Enter key.

NTEX54 in an RSC LCM (end)

At the xEMS workstation

27



CAUTION

Transport network must know new MAC address

Before you return the DBIC to service, you must provide the MAC address for the DBIC to the transport network. Contact the network administrator for assistance.

Go to the submap of the LCM line drawer with the new NTEX54 card.

- 28 Select the card by placing the cursor on the DBIC.
- 29 From the pop-up menu select Describe/Modify Object. The Object Description dialog box appears.
- 30 From the Object Description dialog box, select HSTP Application from the fields under Object Attributes.
- 31 Select View/Modify Object Attributes.
- 32 Enter the new MAC address in the LAC MAC Address field, for example, 0060381120a1.
- 33 Click the Verify button to verify the information.
- 34 Click the OK button to close the Attributes dialog box.
- 35 Click OK to close the Object Description dialog box.
- 36 Place the cursor on the DBIC you want to return to service and use the mouse to select

Maintenance -> DBIC -> Rts

from the pop-up menu.

- 37 Send any faulty cards for repair according to local procedure.
- 38 Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 40.

- 39 Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.
- 40 You have successfully completed this card replacement procedure.

NTEX54

in an RSC-S (DS-1) Model A LCME

Application

Use this procedure to replace the following cards in an RSC-S LCME line drawer.

PEC	Suffixes	Name
NTEX54	AA	Data enhanced bus interface card (DBIC)
NTEX54	AB	Data enhanced bus interface card (DBIC)
NTEX54	BA	Data enhanced bus interface card (DBIC)

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTEX54 in an RSC-S (DS-1) Model A LCME (continued)

Summary of replacing an NTEX54 in RSC-S LCME

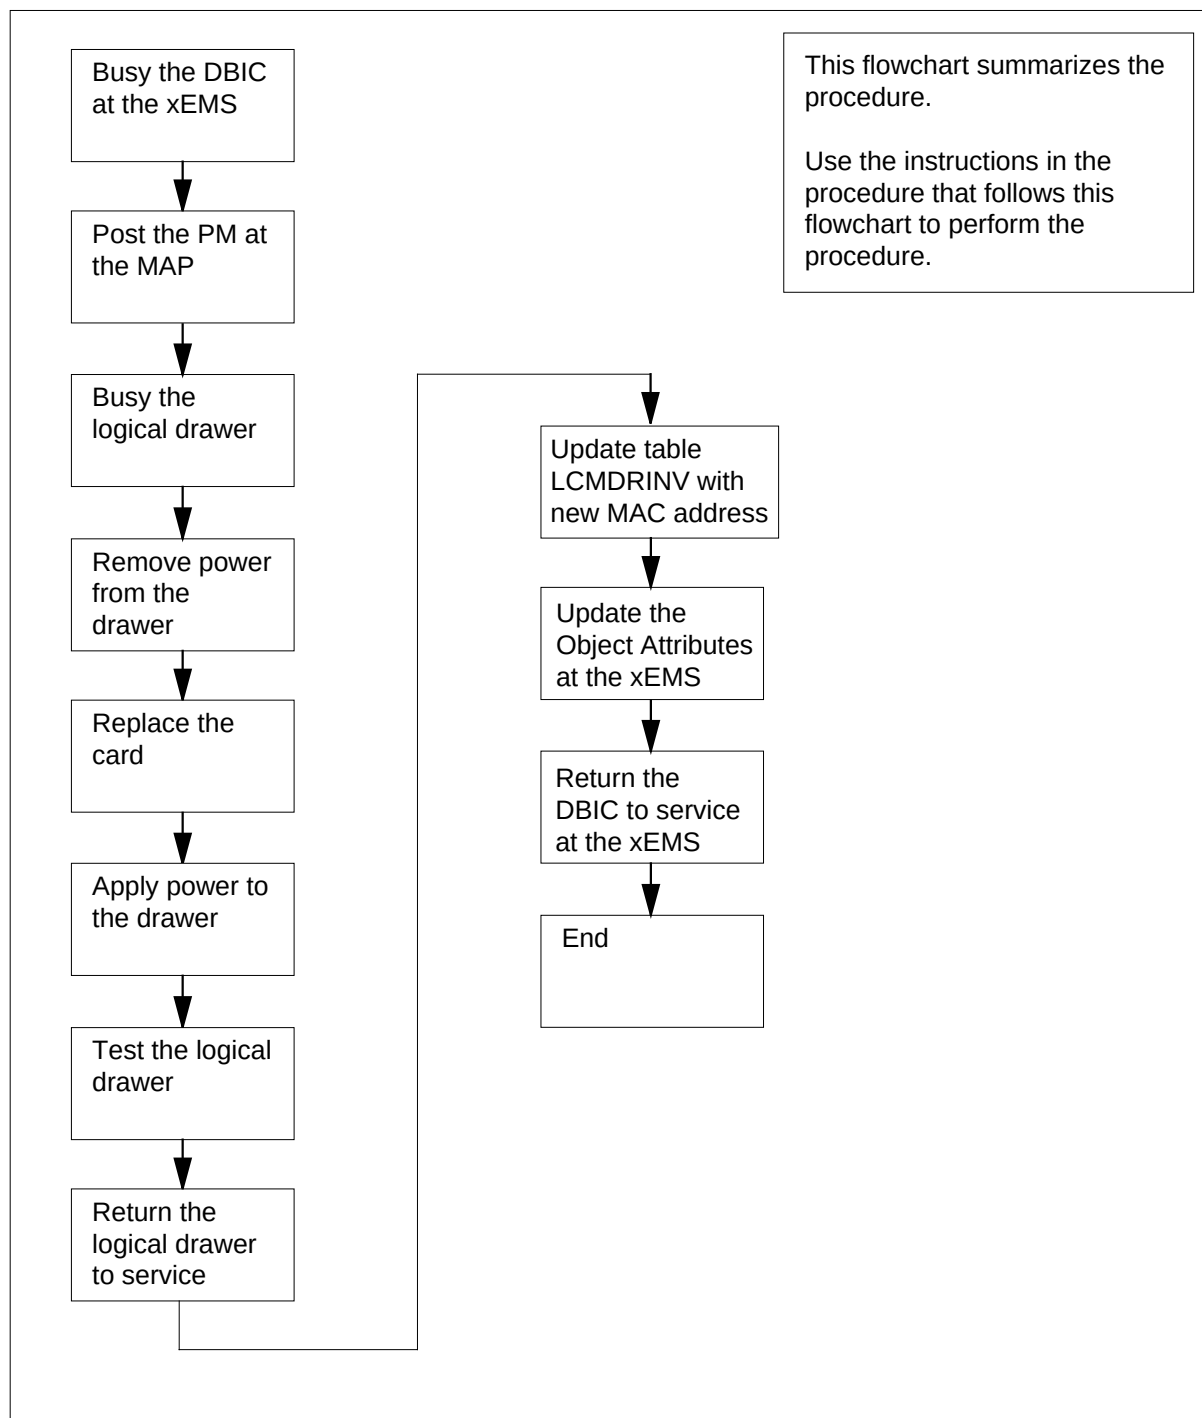

NTEX54

in an RSC-S (DS-1) Model A LCME (continued)

Replacing an NTEX54 in RSC-S LCME

At your current location

1



CAUTION

Loss of service

This procedure directs you to manually busy a line drawer. Removal of a line drawer from service can cause the system to drop calls in progress. Perform this procedure only if you need to restore out-of-service components. Unless it is urgent, perform this procedure during periods of low traffic.

Obtain a replacement card. Make sure that the replacement card and the card that you remove have the same product engineering code (PEC) and PEC suffix.

2



CAUTION

Transport network must know new MAC address

Work with the network administrator during this procedure. The transport network must know the MAC address of the new DBIC before the DBIC can support 1MMS.

Write down the 12-digit number stamped on the new NTEX54 card. This number is the media access control (MAC) address. You will use the MAC address later in this procedure.

At the xEMS workstation

- 3 Go to the submap of the LCM line drawer with the NTEX54 card that you will replace.
- 4 Place the cursor on the DBIC you want to busy and use the mouse to select **Maintenance -> DBIC -> ManB** from the pop-up menu.

NTEX54 in an RSC-S (DS-1) Model A LCME (continued)

At the MAP terminal

- 5 To access the peripheral module (PM) level of the MAP (maintenance and administration position) display and post the LCM, type

>MAPCI;MTC;PM;POST LCM site frame_no lcm_no

and press the Enter key.

where

site

is the PM location (alphanumeric)

frame_no

is the equipment frame number (00 to 511)

lcm_no

is the number of the LCM (0 or 1)

Example of a MAP display:

```
LCM REM1 01 1 ISTb Links OOS: Cside 0 Pside 0
Unit0: ISTb /RG: 0
Unit1: ISTb Mtce /RG: 1 Ring gen Test
11 11 11 11 11 RG: Pref 1 InSv
Drwr: 01 23 45 67 89 01 23 45 67 89 Stby 0 InSv
.. .. .. MM .. .. .. ..
```

- 6 Record the numbers of the logical drawers for the NTEX54.

Note: Logical drawers configure in pairs for the physical drawer. The NTEX54 services the physical drawer. Both logical drawers must be manually busy to perform this card replacement procedure.

- 7 Check the state of the affected logical drawers.

If the state for	Do
one or both logical drawers is I, S, or . (dot)	step 8
both logical drawers is M	step 11
one or both logical drawers is 0 or -	Determine why the drawer is of-line. If necessary, contact the next level of support.

- 8 To manually busy the logical drawer, type

>BSY DRWR drwr_no

and press the Enter key.

where

drwr_no

is the logical drawer number (0 to 23)

NTEX54

in an RSC-S (DS-1) Model A LCME (continued)

Example of a MAP response:

LCM REM1 01 1 Drwr 0 will be taken out of service
Please confirm ("YES", "Y", "NO", or "N"):

- 9** To confirm the command, type
>YES
and press the Enter key.

Example of a MAP response:

LCM REM1 01 1 Drwr 0 Bsy Passed

If	Do
you must busy the other logical drawer of the pair	step 10
both logical drawers are now M	step 11

- 10** Busy the other logical drawer of the pair.
>BSY DRWR drwr_no
and press the Enter key.
where
drwr_no
is the logical drawer number (0 to 23)

Example of a MAP response:

LCM REM1 01 1 Drwr 0 Bsy Passed

NTEX54 in an RSC-S (DS-1) Model A LCME (continued)

At the shelf

11



WARNING

Static electricity damage

Wear a wrist strap that connects to the wrist-strap grounding point to handle circuit cards. The wrist-strap grounding point is on a frame supervisory panel (FSP) or a modular supervisory panel (MSP). The wrist strap protects the cards against static electricity damage.



DANGER

Potential equipment damage

Note the fuses that you remove from the fuse panel. If you do not insert fuses in the correct location on the fuse panel, equipment damage occurs.



DANGER

Equipment damage

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.


Remove fuses for the line drawer containing the faulty DBIC. Perform the following steps. Refer to the figure that follows to identify the correct fuses.

Note: Fuse markings do not always identify voltage. Make sure that you note the fuses and the location of the fuses in the fuse panel.

- a Remove the -48V fuse for the line drawer that contains the faulty DBIC.
- b Remove the +15V fuse for the line drawer that contains the faulty DBIC.
- c Remove the +5V fuse for the line drawer that contains the faulty DBIC.


NTEX54

in an RSC-S (DS-1) Model A LCME (continued)

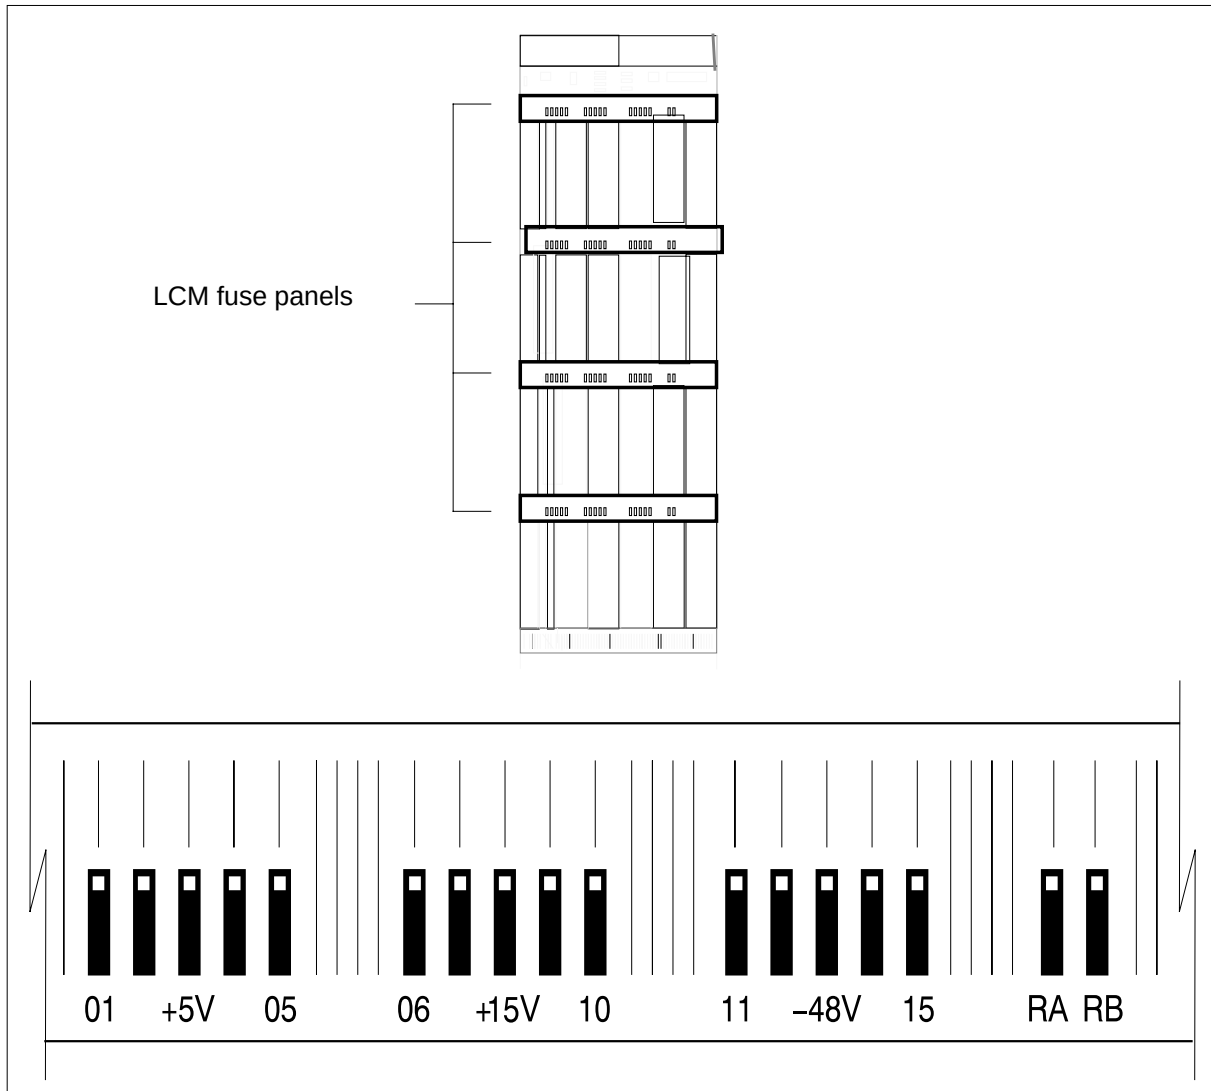


- 12** Identify the drawer. Press the small thumb-latch button on the lower left edge of the drawer. Pull the drawer out. To secure the drawer in a steady horizontal position, tip the drawer until the catch rests on the line drawer track.

NTEX54 in an RSC-S (DS-1) Model A LCME (continued)

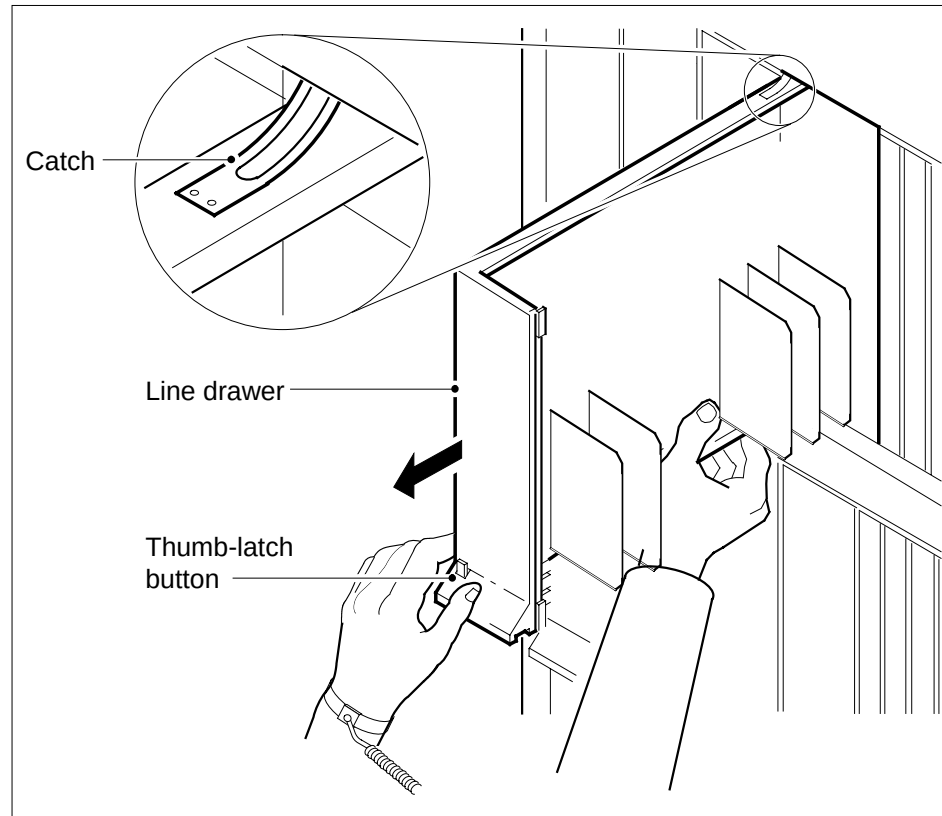

- 13** Disconnect the data cable from the RJ-45 connector on the card. The RJ-45 connector is located at slot position 16 of the odd LSG (connector slot). Refer to the following figure.

NTEX54 in an RSC-S (DS-1) Model A LCME (continued)

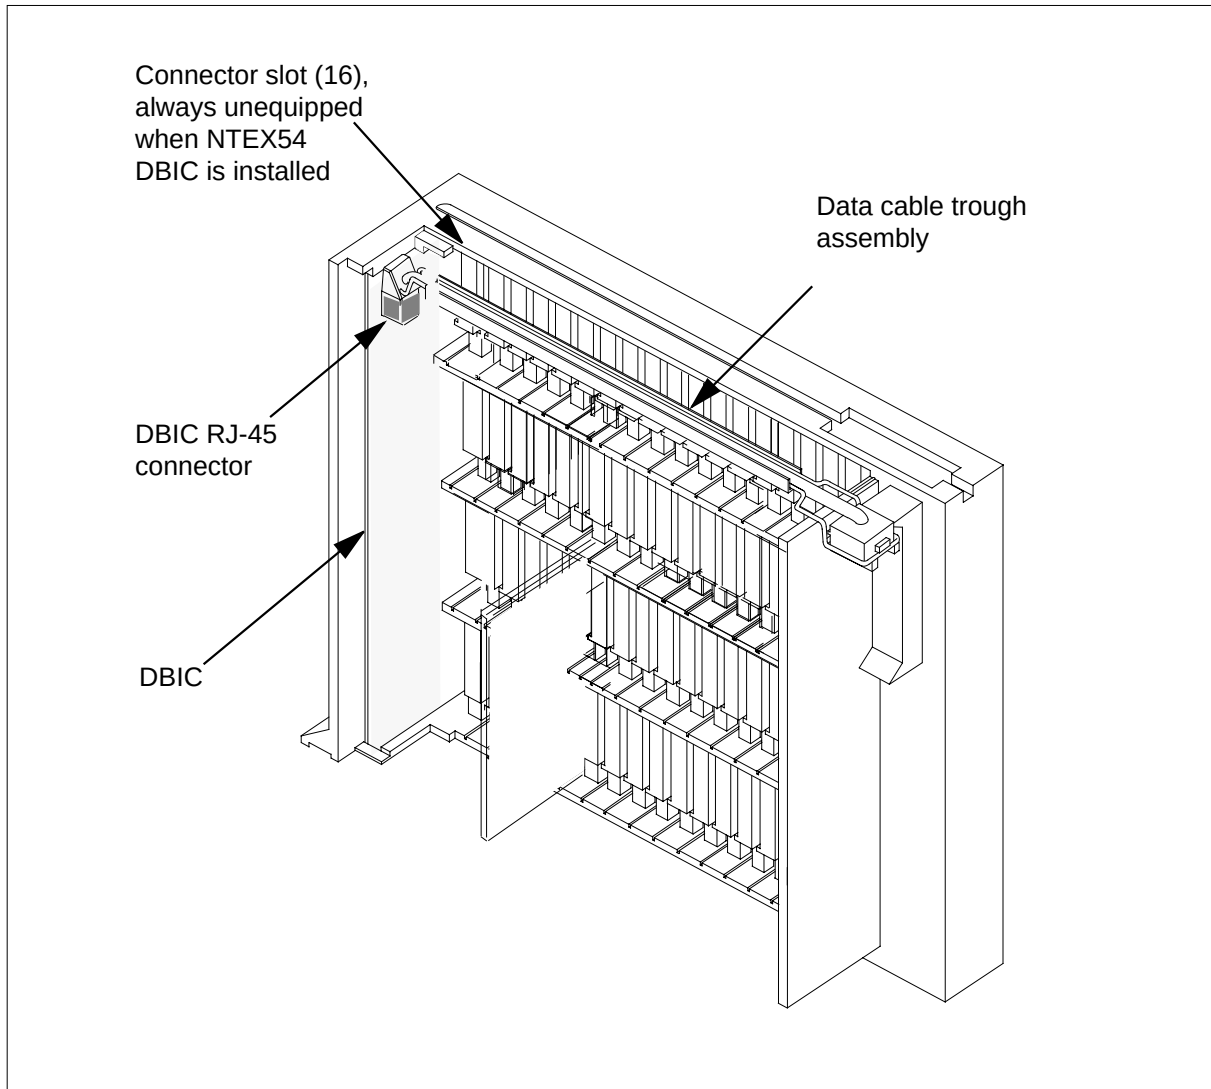


14

**DANGER****Do not hold the card by the levers only**

If you hold a card by the locking levers only, the levers can break. Pull the card half way out of the slot. Carefully grasp the card from below for more support. Continue to remove the card from the drawer. Make sure that you do not touch any wires or internal parts on the card.

NTEX54 in an RSC-S (DS-1) Model A LCME (continued)

Open the locking levers on the face of the card.

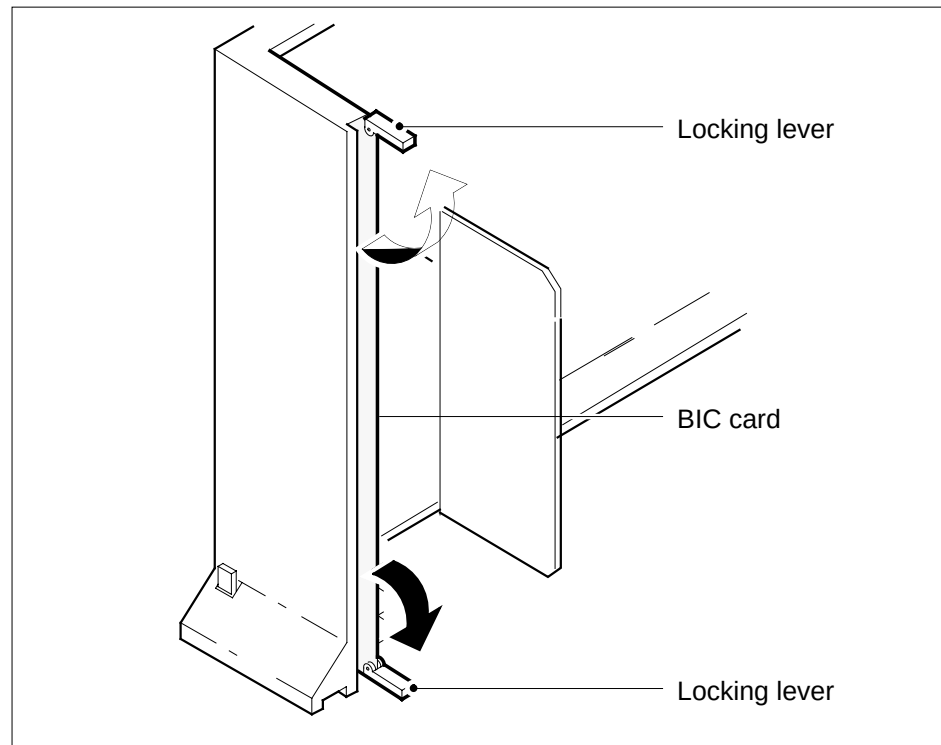


- 15** Grasp the locking levers. Carefully pull the card toward you until the card clears the drawer.

Note: Do not use a rocking motion to remove the card.

NTEX54


in an RSC-S (DS-1) Model A LCME (continued)

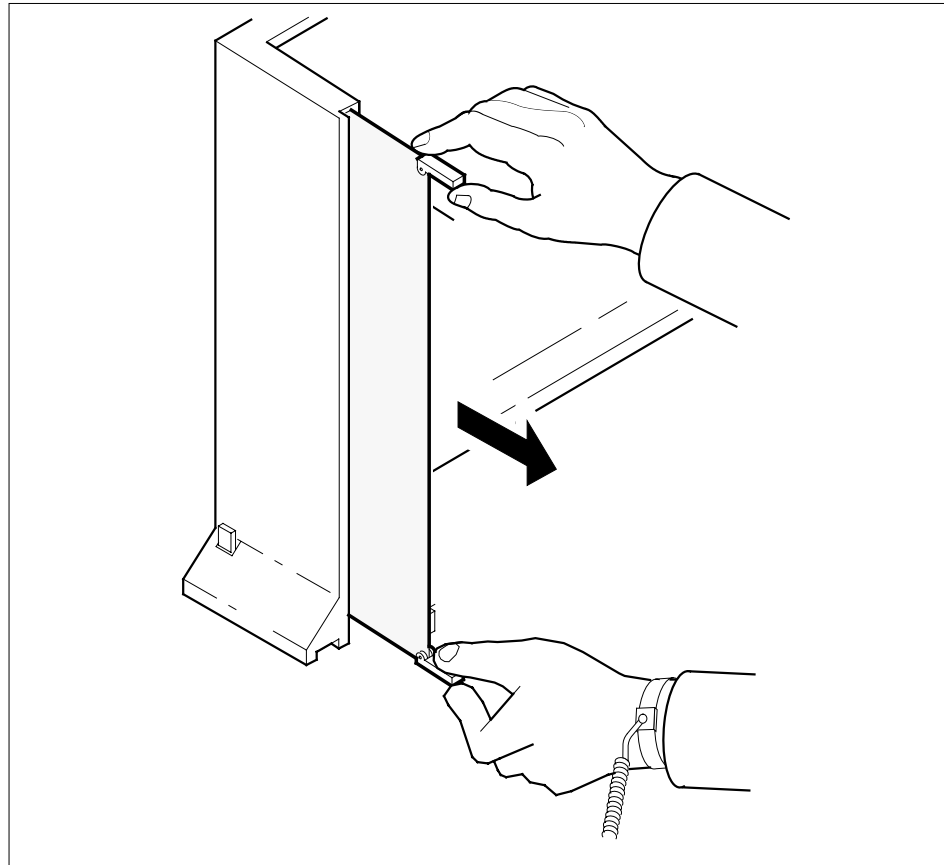

- 16** Place the card that you removed in an electrostatic discharge (ESD) protective container.
- 17** Make sure that the replacement card and the card that you remove have the same PEC and PEC suffix.
- 18** Close the locking levers on the replacement card. Align the card with the pin slots in the drawer. Carefully slide the card into the drawer.
- 19** Support the drawer with your left hand. Use your right hand to push on the upper and lower edges of the card. Make sure that the card sits completely in the drawer.


Note: Do not use a rocking motion to insert the card.

NTEX54
in an RSC-S (DS-1) Model A LCME (continued)

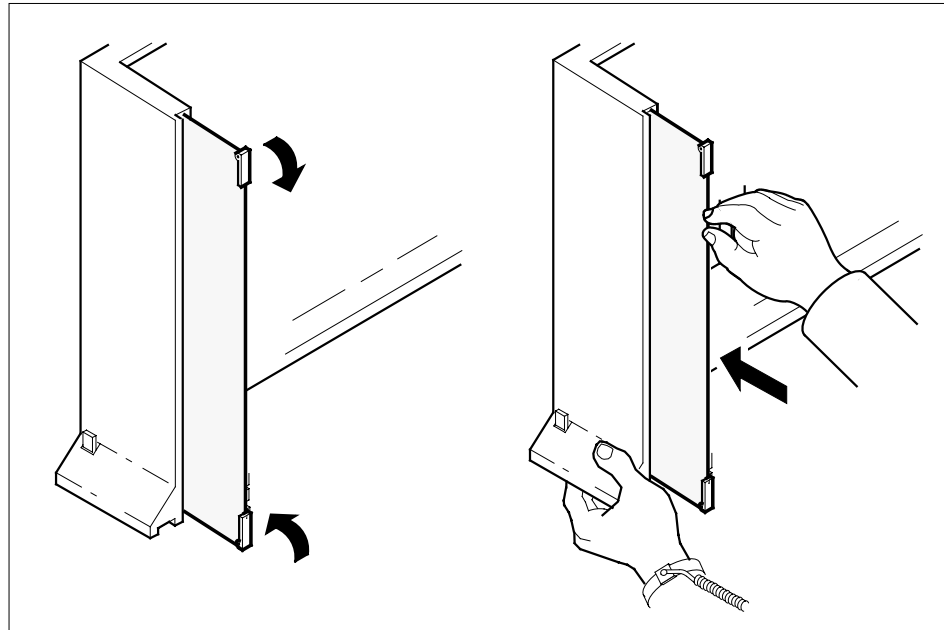

- 20** Connect the data cable to the RJ-45 connector that you disconnected in step 13. Refer to the following figure.

NTEX54 in an RSC-S (DS-1) Model A LCME (continued)

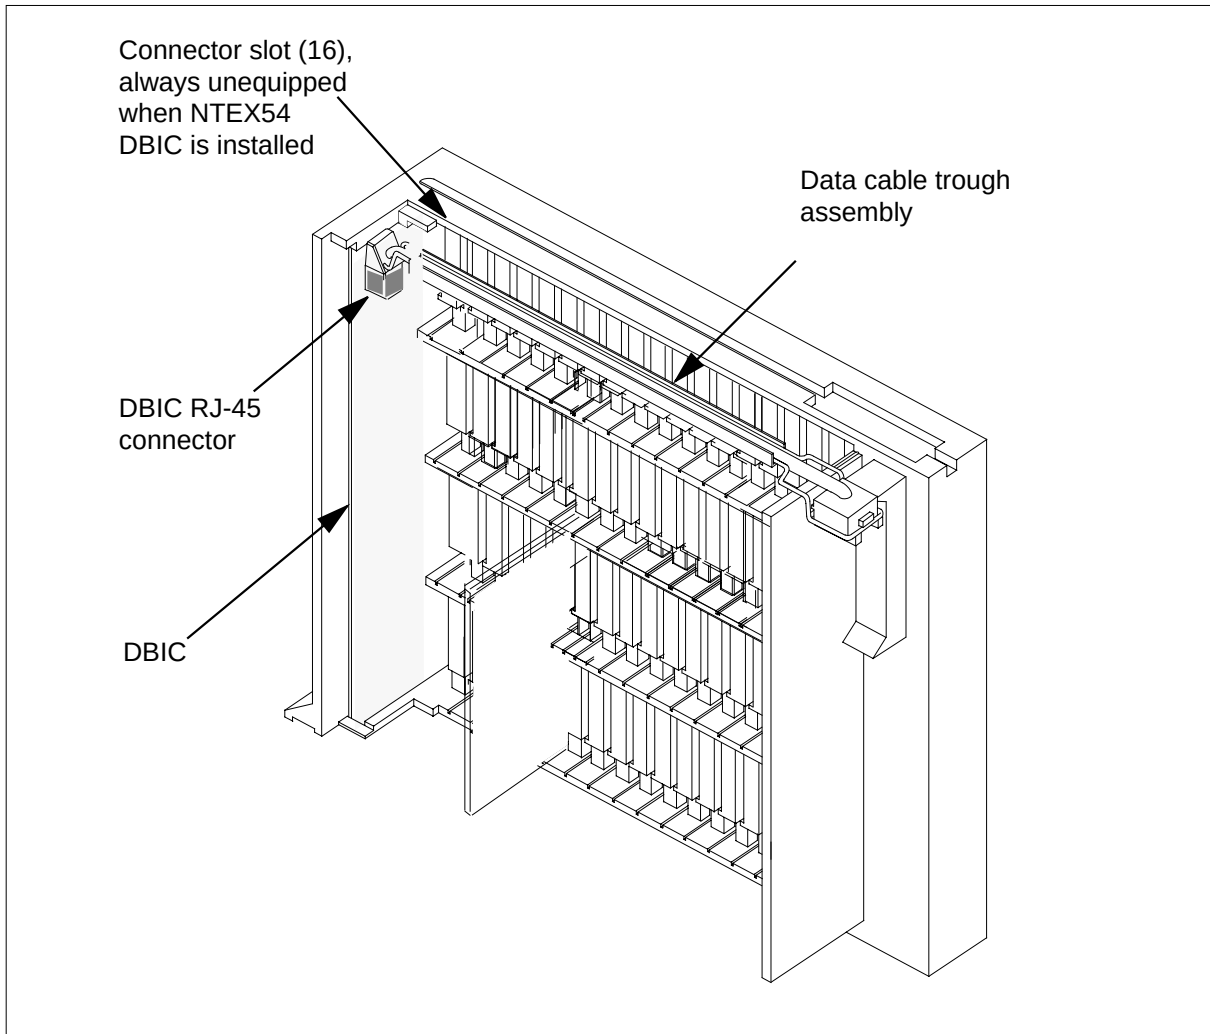

21 Close the line drawer.

22



DANGER


Potential equipment damage

Make sure you insert the fuses in the correct location on the fuse panel to prevent equipment damage.

Insert the fuses that you removed in step 11. Refer to the following figure.

NTEX54

in an RSC-S (DS-1) Model A LCME (continued)

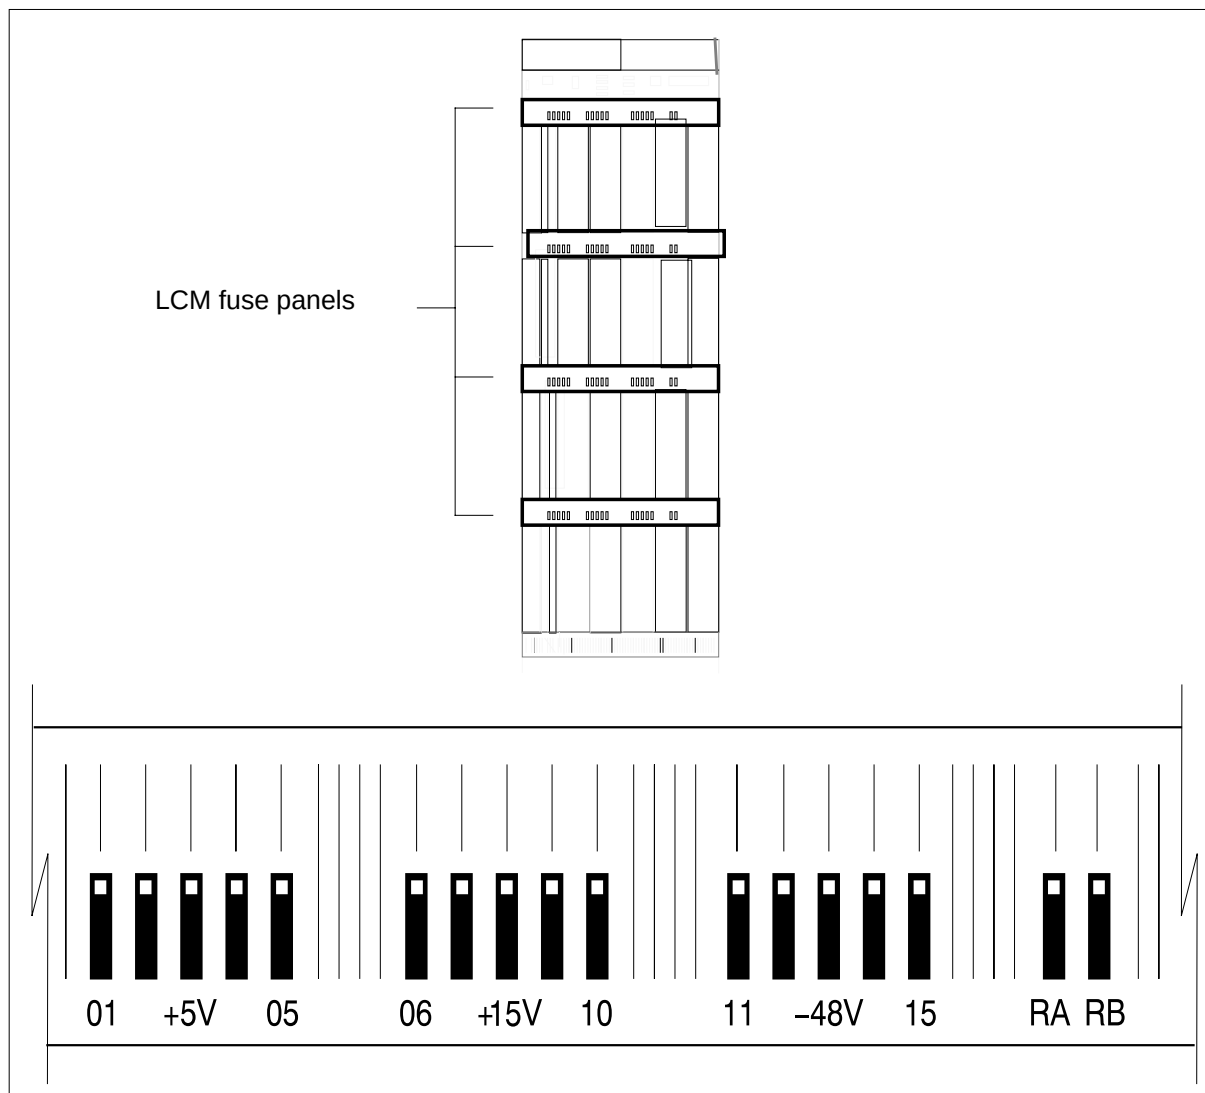

Note: Fuses are coded for position. The colored square on the face of the fuse identifies the top edge.

- a Insert the +5V fuse.
- b Insert the +15V fuse.
- c Insert the -48V fuse.

NTEX54

in an RSC-S (DS-1) Model A LCME (continued)

At the MAP terminal

- 23** A maintenance flag (Mtce) can appear. This flag indicates that system-initiated maintenance tasks are in progress. To stop the system-initiated maintenance tasks, type

>ABTK

and press the Enter key.

- 24** To return the logical drawer to service, type

>RTS DRWR drwr_no

and press the Enter key.

where

drwr_no

is the logical drawer number (0 to 19)

Example of a MAP response:

```
OSvce Tests Initiated
LCM REM1 00 0 Drwe 0 Tst Passed
LCM REM1 00 0 Drwr 0 Rts Passed
```

If the RTS command	Do
passed, and you must return the other logical drawer to service	step 25
passed, and the other logical drawer is in service	step 26
failed	step 39

- 25** Repeat step 24 for the other logical drawer in the pair.

- 26** Update table LCMDRINV.

Note: Make sure you have the new MAC address from the replacement card as recorded in step 2.

- a** To open table LCMDRINV, type

>TABLE LCMDRINV

and press the Enter key.

- b** To position on the tuple for the LCM, type

>POS site_name frame_no lcm_no

and press the Enter key.

where

site_name

is the name of the site

NTEX54 in an RSC-S (DS-1) Model A LCME (continued)

frame_no

is the number of the frame

lcm_no

is the number of the LCM

- c** To begin changing the tuple, type

>CHA

and press the Enter key.

- d** To continue processing, type

>Y

and press the Enter key.

- e** Press the Enter key to scroll through the fields until you access the field with the MAC address.

- f** Enter the new MAC address. Type

>drwr_id card_pec drwr_pec mac_address ip_address

and press the Enter key.

where

drwr_id

is the physical number of the drawer

card_pec

is NTEX54AA, NTEX54AB, or NTEX54BA

drwr_pec

is the PEC of the drawer

mac_address

is the MAC address of the new NTEX54

ip_address

is the IP address of the new NTEX54

- g** Press the Enter key to scroll through remaining fields.

- h** Confirm the change. Type

>Y

and press the Enter key.

- i** Exit the table. Type

>QUIT

and press the Enter key.

NTEX54

in an RSC-S (DS-1) Model A LCME (end)

At the xEMS workstation

27



CAUTION

Transport network must know new MAC address

Before you return the DBIC to service, you must provide the MAC address for the DBIC to the transport network. Contact the network administrator for assistance.

Go to the submap of the LCM line drawer with the new NTEX54 card.

- 28 Select the card by placing the cursor on the DBIC.
- 29 From the pop-up menu select Describe/Modify Object. The Object Description dialog box appears.
- 30 From the Object Description dialog box, select HSTP Application from the fields under Object Attributes.
- 31 Select View/Modify Object Attributes.
- 32 Enter the new MAC address in the %LAC MAC Address field, for example, 0060381120a1.
- 33 Click the Verify button to verify the information.
- 34 Click the OK button to close the Attributes dialog box.
- 35 Click OK to close the Object Description dialog box.
- 36 Place the cursor on the DBIC you want to return to service and use the mouse to select
Maintenance -> DBIC -> Rts
 from the pop-up menu.
- 37 Send any faulty cards for repair according to local procedure.
- 38 Record the following items in office records:
 - date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
 Go to step 40.
- 39 Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.
- 40 You have successfully completed this card replacement procedure.

NTEX54 in an RSC-S (DS-1) Model B LCM

Application

Use this procedure to replace the following cards in an RSC-S LCM line drawer.

PEC	Suffixes	Name
NTEX54	AA	Data enhanced bus interface card (DBIC)
NTEX54	AB	Data enhanced bus interface card (DBIC)
NTEX54	BA	Data enhanced bus interface card (DBIC)

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTEX54 in an RSC-S (DS-1) Model B LCM (continued)

Summary of replacing an NTEX54 in RSC-S LCM

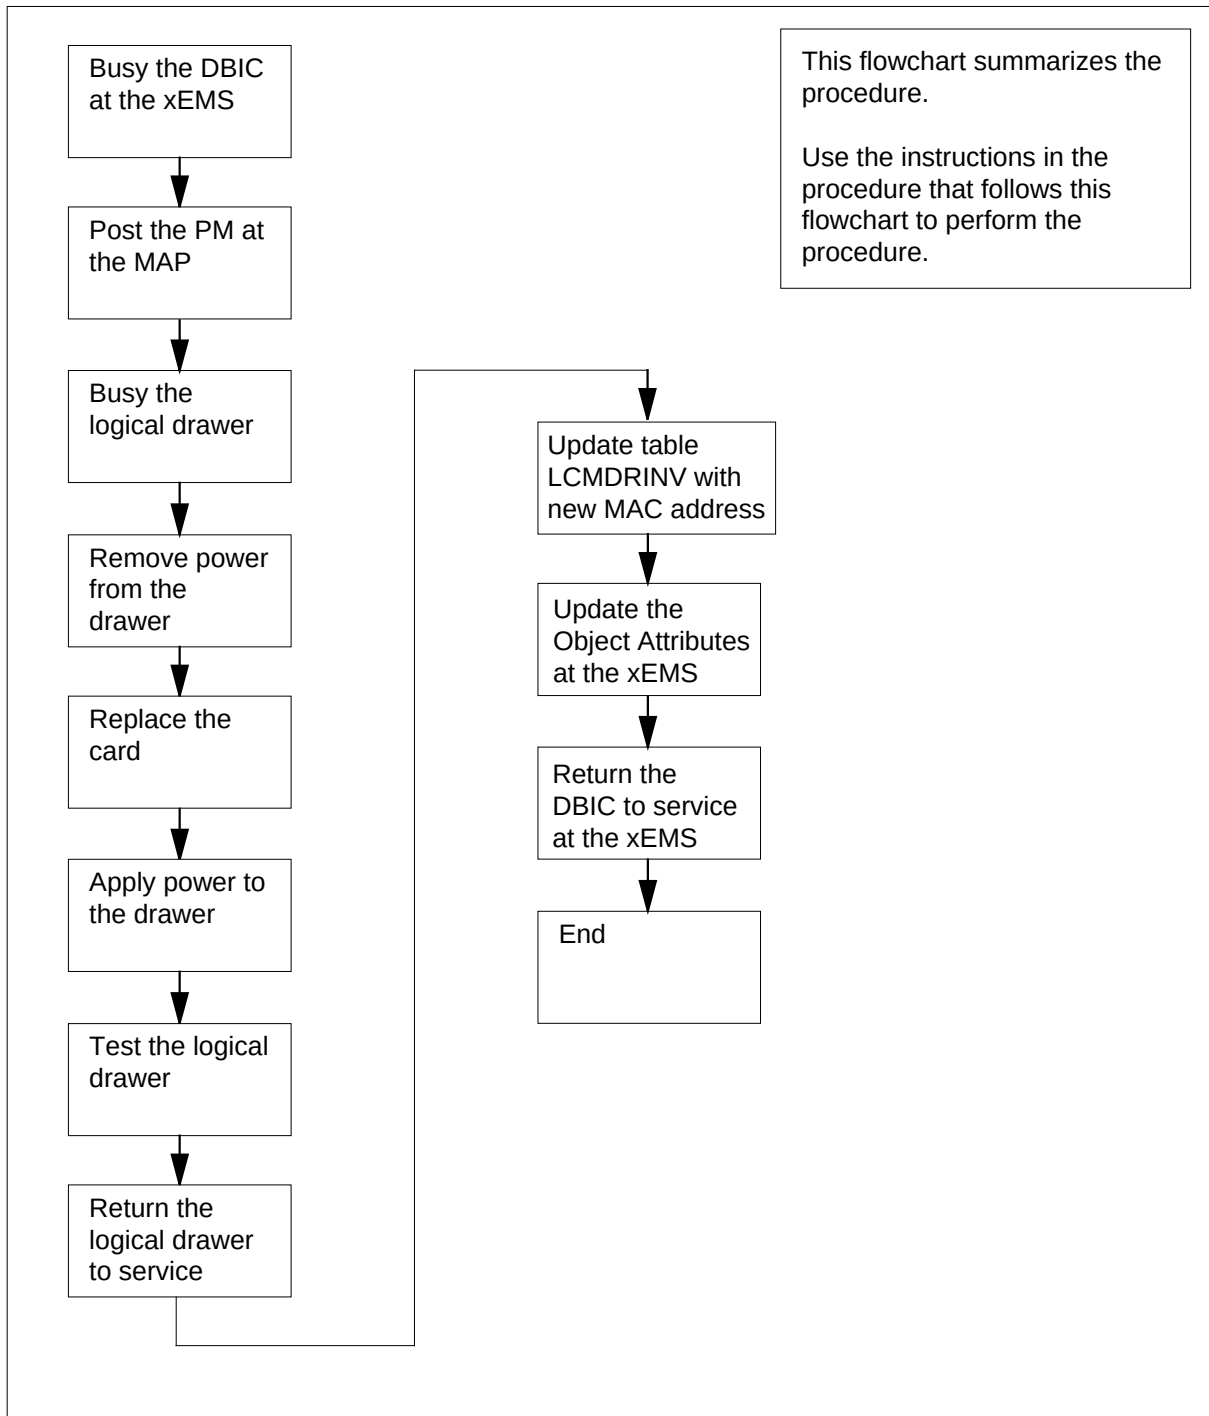

NTEX54

in an RSC-S (DS-1) Model B LCM (continued)

Replacing an NTEX54 in RSC-S LCM

At your current location

1



CAUTION

Loss of service

This procedure directs you to manually busy a line drawer. Removal of a line drawer from service can cause the system to drop calls in progress. Perform this procedure only if you need to restore out-of-service components. Unless it is urgent, perform this procedure during periods of low traffic.

Obtain a replacement card. Make sure that the replacement card and the card that you remove have the same product engineering code (PEC) and PEC suffix.

2



CAUTION

Transport network must know new MAC address

Work with the network administrator during this procedure. The transport network must know the MAC address of the new DBIC before the DBIC can support 1MMS.

Write down the 12-digit number stamped on the new NTEX54 card. This number is the media access control (MAC) address. You will use the MAC address later in this procedure.

At the xEMS workstation

- 3** Go to the submap of the LCM line drawer with the NTEX54 card that you will replace.
- 4** Place the cursor on the DBIC you want to busy and use the mouse to select **Maintenance -> DBIC -> ManB** from the pop-up menu.

NTEX54

in an RSC-S (DS-1) Model B LCM (continued)

At the MAP terminal

- 5 To access the peripheral module (PM) level of the MAP (maintenance and administration position) display and post the LCM, type

>MAPCI;MTC;PM;POST LCM site frame_no lcm_no

and press the Enter key.

where

site

is the PM location (alphanumeric)

frame_no

is the equipment frame number (00 to 511)

lcm_no

is the number of the LCM (0 or 1)

Example of a MAP display:

```
LCM  REM1 01 1  ISTb  Links OOS: Cside 0 Pside 0
Unit0: ISTb      /RG: 0
Unit1: ISTb Mtce  /RG: 1 Ring gen Test
      11 11 11 11 11 RG: Pref 1 InSv
Drwr: 01 23 45 67 89 01 23 45 67 89  Stby 0 InSv
      .. .. .. MM .. .. .. ..
```

- 6 Record the numbers of the logical drawers for the NTEX54.

Note: Logical drawers configure in pairs for the physical drawer. The NTEX54 services the physical drawer. Both logical drawers must be manually busy to perform this card replacement procedure.

- 7 Check the state of the affected logical drawers.

If the state for	Do
one or both logical drawers is I, S, or . (dot)	step 8
both logical drawers is M	step 11
one or both logical drawers is 0 or -	Determine why the drawer is of-line. If necessary, contact the next level of support.

- 8 To manually busy the logical drawer, type

>BSY DRWR drwr_no

and press the Enter key.

where

drwr_no

is the logical drawer number (0 to 23)

NTEX54
in an RSC-S (DS-1) Model B LCM (continued)

Example of a MAP response:

LCM REM1 01 1 Drwr 0 will be taken out of service
Please confirm ("YES", "Y", "NO", or "N"):

- 9** To confirm the command, type
>YES
and press the Enter key.

Example of a MAP response:

LCM REM1 01 1 Drwr 0 Bsy Passed

If	Do
you must busy the other logical drawer of the pair	step 10
both logical drawers are now M	step 11

- 10** Busy the other logical drawer of the pair.
>BSY DRWR drwr_no
and press the Enter key.
where
drwr_no
is the logical drawer number (0 to 23)

Example of a MAP response:

LCM REM1 01 1 Drwr 0 Bsy Passed

NTEX54
in an RSC-S (DS-1) Model B LCM (continued)

*At the shelf***11****WARNING****Static electricity damage**

Wear a wrist strap that connects to the wrist-strap grounding point to handle circuit cards. The wrist-strap grounding point is on a frame supervisory panel (FSP) or a modular supervisory panel (MSP). The wrist strap protects the cards against static electricity damage.

**DANGER****Potential equipment damage**

Note the fuses that you remove from the fuse panel. If you do not insert fuses in the correct location on the fuse panel, equipment damage occurs.

**DANGER****Equipment damage**

Take these precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.

Remove fuses for the line drawer containing the faulty DBIC. Perform the following steps. Refer to the figure that follows to identify the correct fuses.

Note: Fuse markings do not always identify voltage. Make sure that you note the fuses and the location of the fuses in the fuse panel.


- a Remove the -48V fuse for the line drawer that contains the faulty DBIC.
- b Remove the +15V fuse for the line drawer that contains the faulty DBIC.
- c Remove the +5V fuse for the line drawer that contains the faulty DBIC.

NTEX54 in an RSC-S (DS-1) Model B LCM (continued)

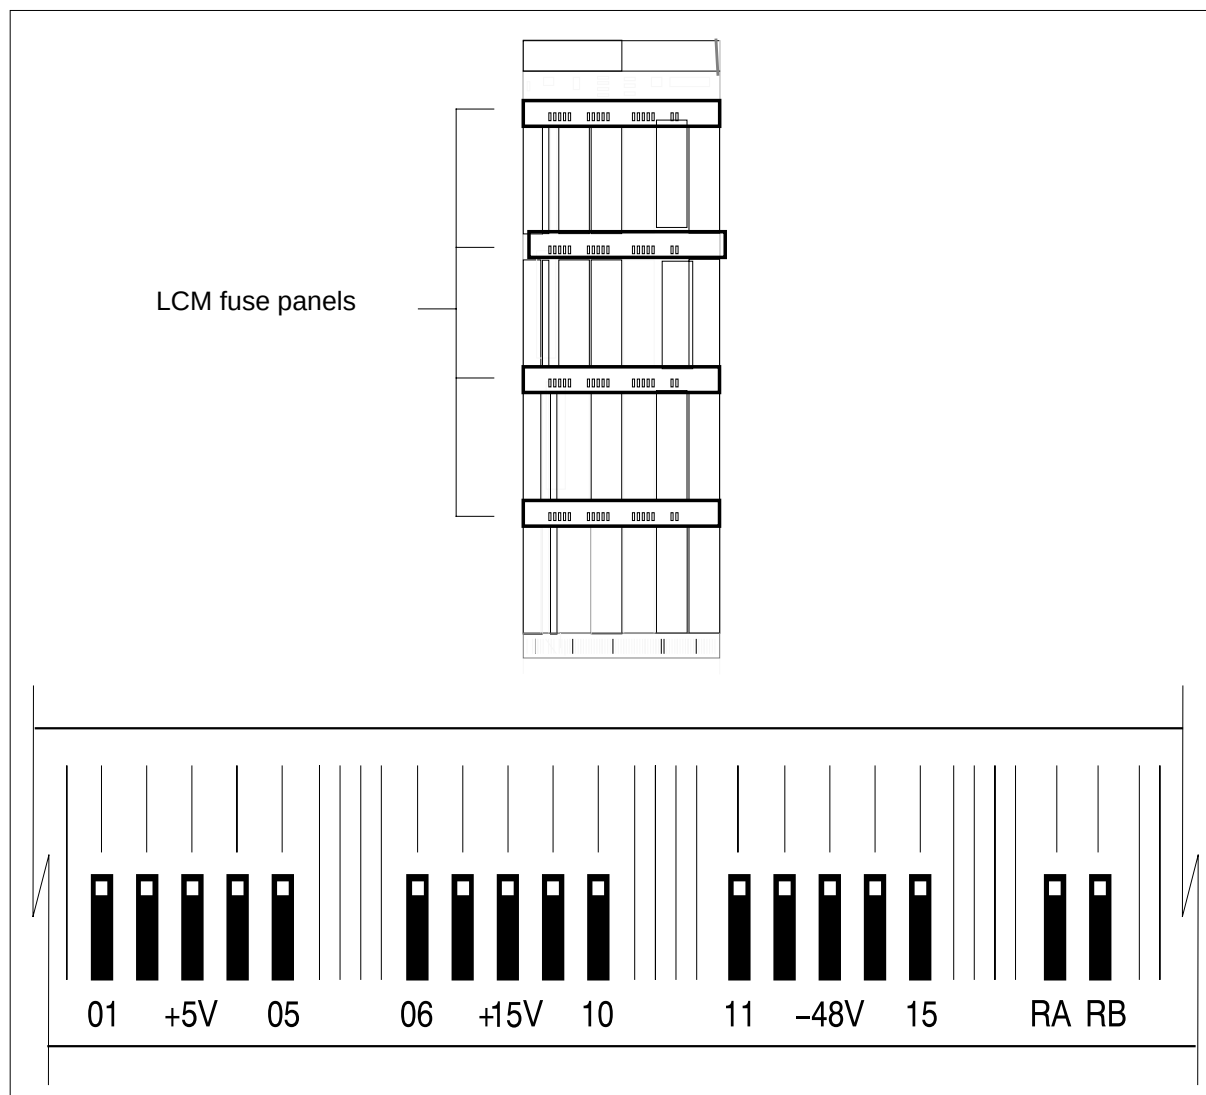


- 12** Identify the drawer. Press the small thumb-latch button on the lower left edge of the drawer. Pull the drawer out. To secure the drawer in a steady horizontal position, tip the drawer until the catch rests on the line drawer track.

NTEX54
in an RSC-S (DS-1) Model B LCM (continued)

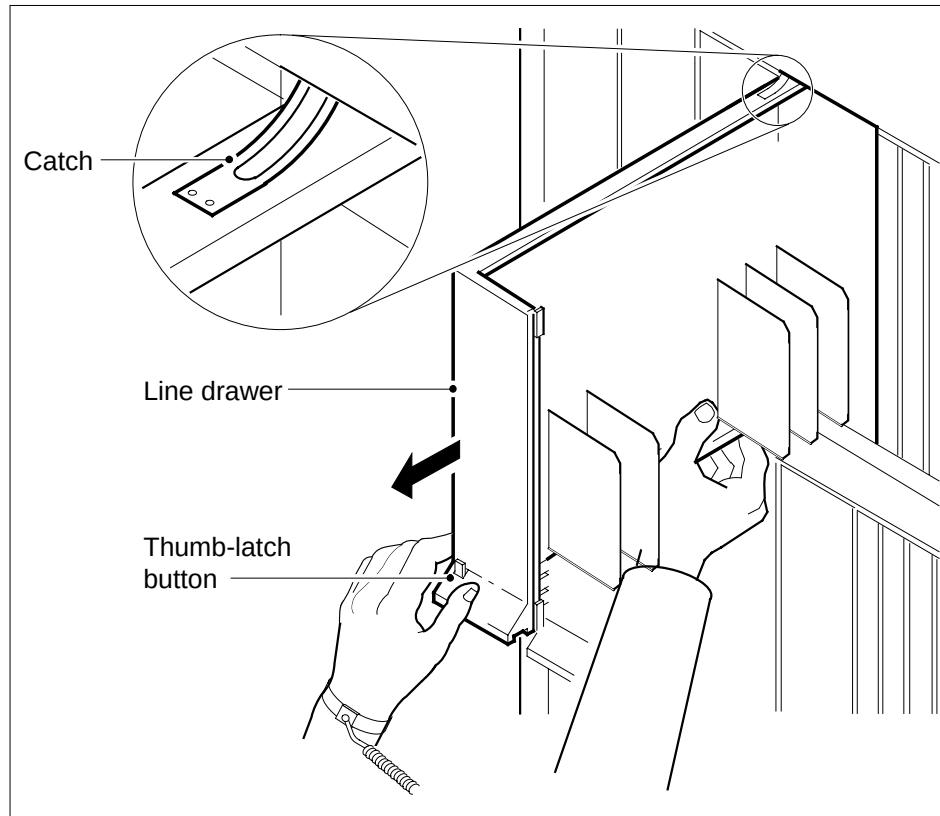

- 13** Disconnect the data cable from the RJ-45 connector on the DBIC. The RJ-45 connector is located at slot position 16 of the odd LSG (connector slot). Refer to the following figure.

NTEX54 in an RSC-S (DS-1) Model B LCM (continued)

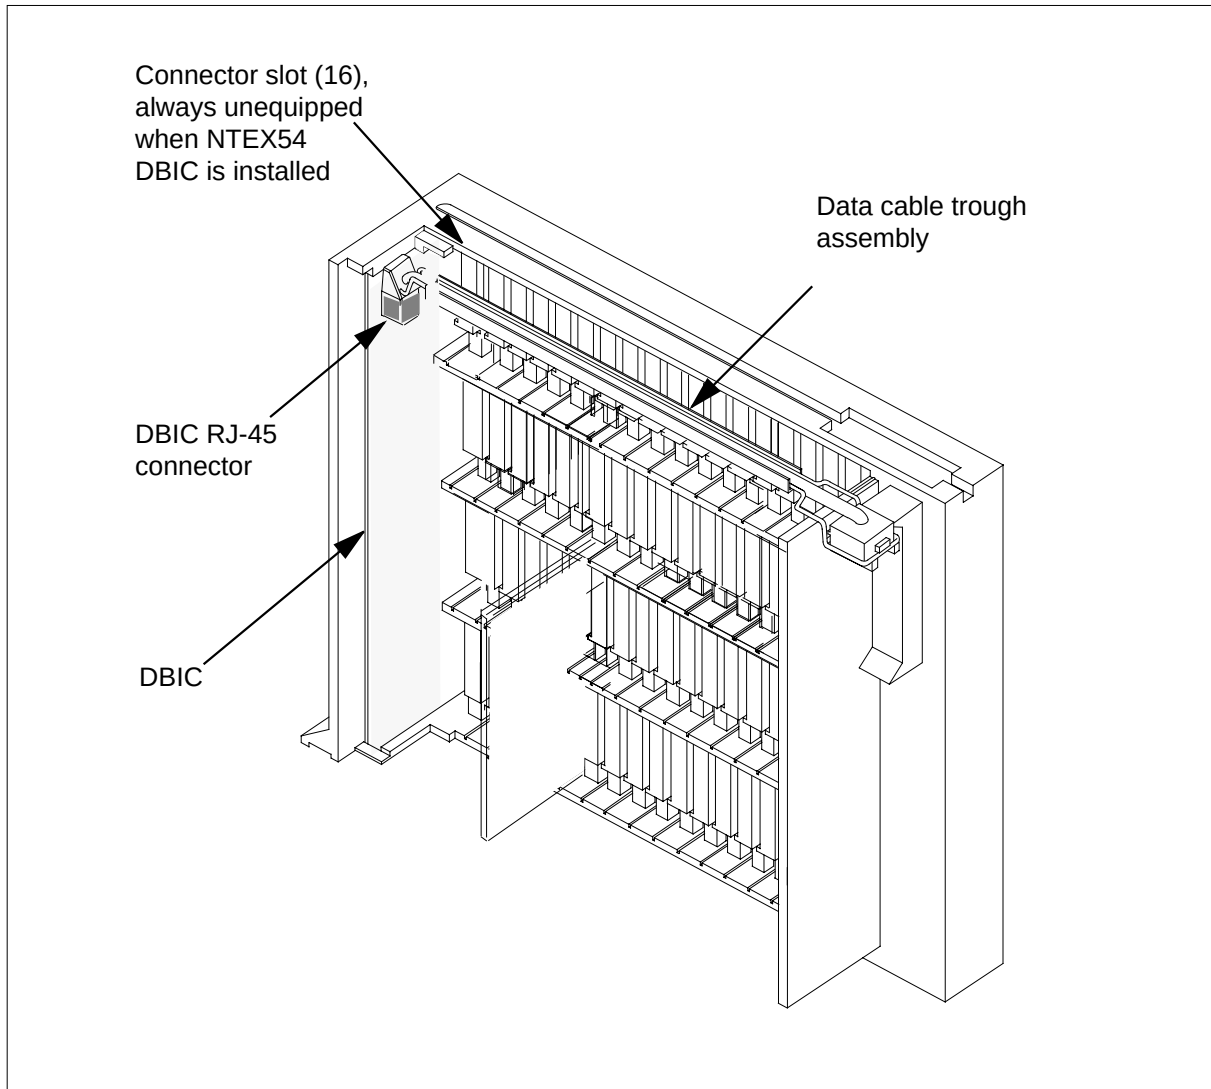

14




DANGER

Do not hold the card by the levers only

If you hold a card by the locking levers only, the levers can break. Pull the card half way out of the slot. Carefully grasp the card from below for more support. Continue to remove the card from the drawer. Make sure that you do not touch any wires or internal parts on the card.

NTEX54
in an RSC-S (DS-1) Model B LCM (continued)


Open the locking levers on the face of the card.

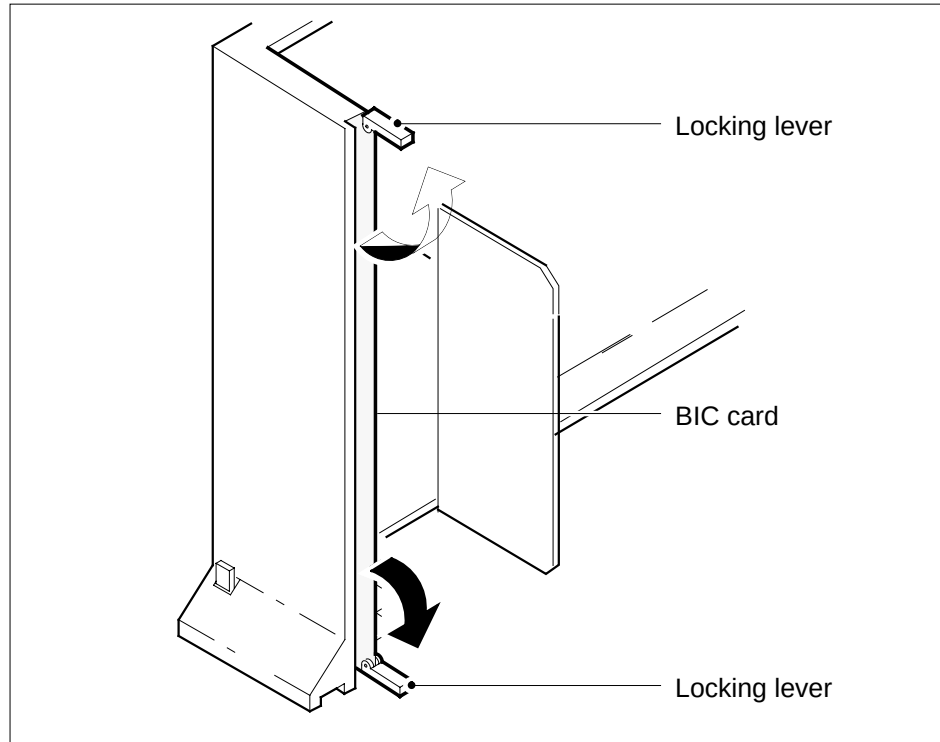

- 15** Grasp the locking levers. Carefully pull the card toward you until the card clears the drawer.

Note: Do not use a rocking motion to remove the card.


NTX54 in an RSC-S (DS-1) Model B LCM (continued)

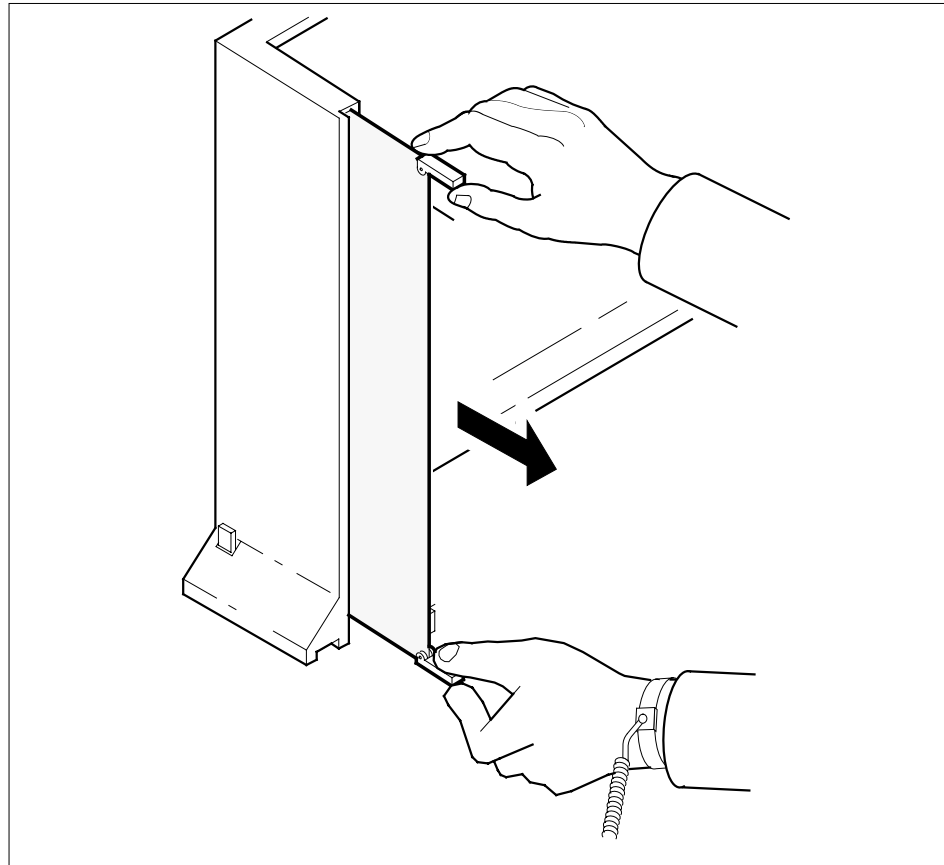

- 16 Place the card that you removed in an electrostatic discharge (ESD) protective container.
- 17 Make sure that the replacement card and the card that you remove have the same PEC and PEC suffix.
- 18 Close the locking levers on the replacement card. Align the card with the pin slots in the drawer. Carefully slide the card into the drawer.
- 19 Support the drawer with your left hand. Use your right hand to push on the upper and lower edges of the card. Make sure that the card sits completely in the drawer.


Note: Do not use a rocking motion to insert the card.

NTEX54
in an RSC-S (DS-1) Model B LCM (continued)

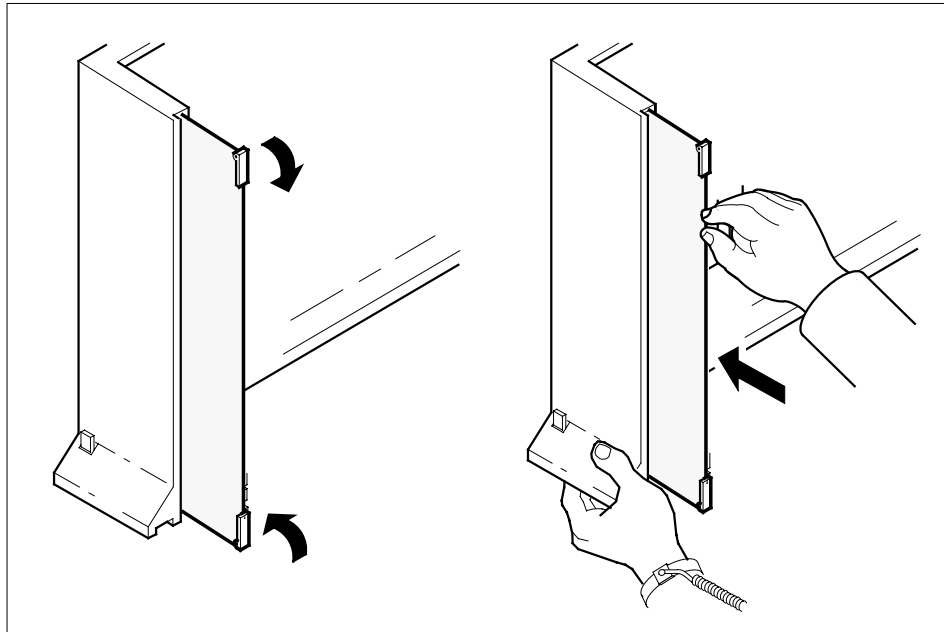

- 20** Connect the data cable RJ-45 connector that you disconnected in step 13. Refer to the following figure.

NTEX54 in an RSC-S (DS-1) Model B LCM (continued)

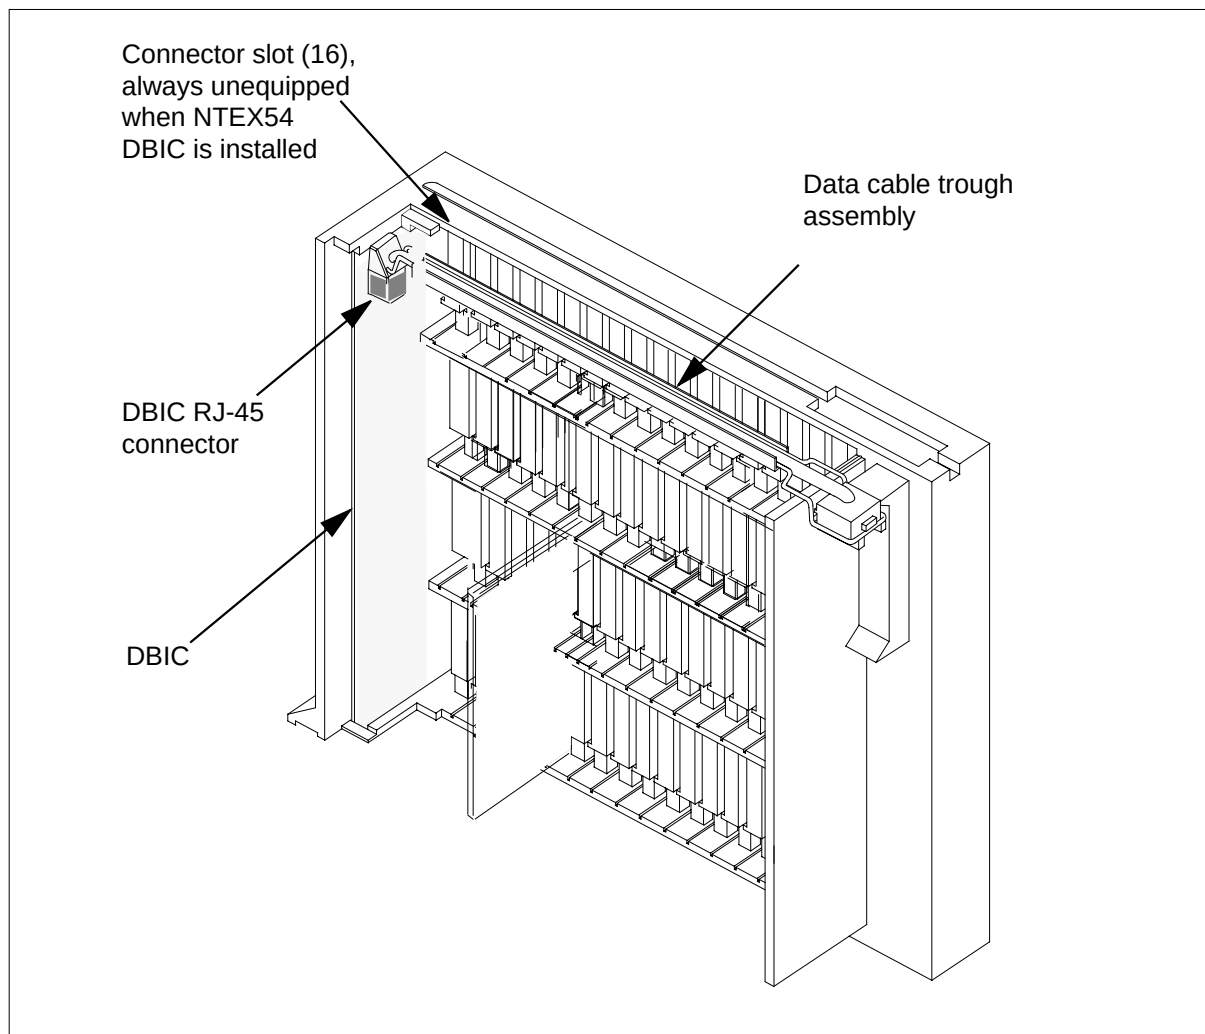

- 21 Close the line drawer.
- 22




DANGER

Potential equipment damage

Make sure you insert the fuses in the correct location on the fuse panel to prevent equipment damage.

Insert the fuses that you removed in step 11. Refer to the following figure.

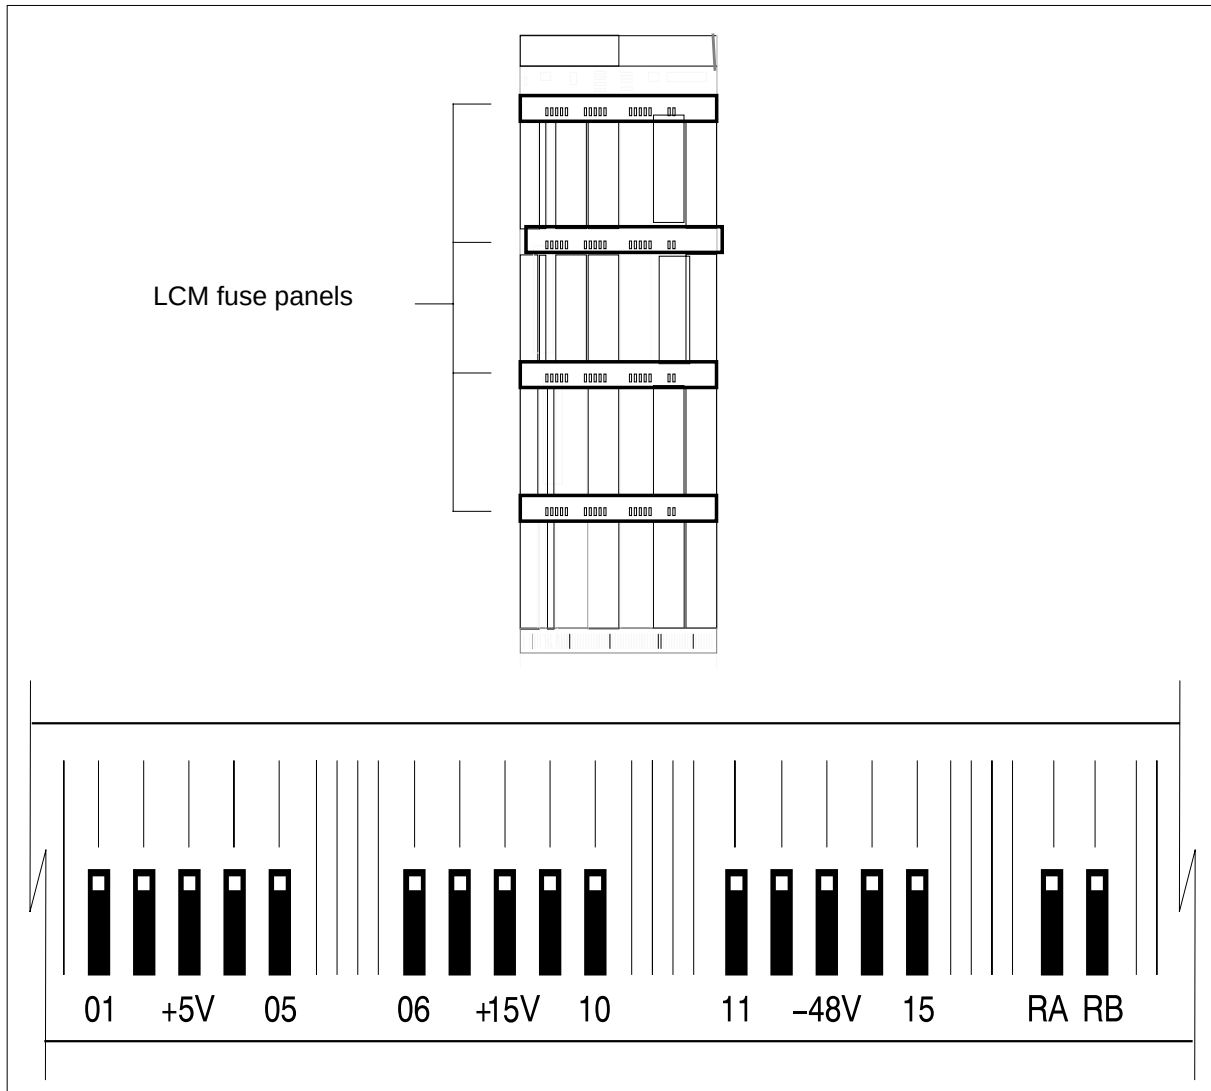NTEX54
in an RSC-S (DS-1) Model B LCM (continued)

Note: Fuses are coded for position. The colored square on the face of the fuse identifies the top edge.

- a Insert the +5V fuse.
- b Insert the +15V fuse.
- c Insert the -48V fuse.

NTEX54

in an RSC-S (DS-1) Model B LCM (continued)

At the MAP terminal

- 23** A maintenance flag (Mtce) can appear. This flag indicates that system-initiated maintenance tasks are in progress. To stop the system-initiated maintenance tasks, type

>ABTK

and press the Enter key.

- 24** To return the logical drawer to service, type

>RTS DRWR drwr_no

and press the Enter key.

where

drwr_no

is the logical drawer number (0 to 19)

Example of a MAP response:

```
OSvce Tests Initiated
LCM REM1 00 0 Drwr 0 Tst Passed
LCM REM1 00 0Drwr 0 Rts Passed
```

If the RTS command	Do
passed, and you must return the other logical drawer to service	step 25
passed, and the other logical drawer is in service	step 26
failed	step 39

- 25** Repeat step 24 for the other logical drawer in the pair.

- 26** Update table LCMDRINV.

Note: Make sure you have the new MAC address from the replacement card as recorded in step 2.

- a** To open table LCMDRINV, type

>TABLE LCMDRINV

and press the Enter key.

- b** To position on the tuple for the LCM, type

>POS site_name frame_no lcm_no

and press the Enter key.

where

site_name

is the name of the site

NTEX54

in an RSC-S (DS-1) Model B LCM (continued)

frame_no

is the number of the frame

lcm_no

is the number of the LCM

- c** To begin changing the tuple, type

>CHA

and press the Enter key.

- d** To continue processing, type

>Y

and press the Enter key.

- e** Press the Enter key to scroll through the fields until you access the field with the MAC address.

- f** Enter the new MAC address. Type

>drwr_id card_pec drwr_pec mac_address ip_address

and press the Enter key.

where

drwr_id

is the physical number of the drawer

card_pec

is NTEX54AA, NTEX54AB, or NTEX54BA

drwr_pec

is the PEC of the drawer

mac_address

is the MAC address of the new NTEX54

ip_address

is the IP address of the new NTEX54

- g** Press the Enter key to scroll through remaining fields.

- h** Confirm the change. Type

>Y

and press the Enter key.

- i** Exit the table. Type

>QUIT

and press the Enter key.

NTEX54

in an RSC-S (DS-1) Model B LCM (end)

At the xEMS workstation

27



CAUTION

Transport network must know new MAC address

Before you return the DBIC to service, you must provide the MAC address for the DBIC to the transport network. Contact the network administrator for assistance.

Go to the submap of the LCM line drawer with the new NTEX54 card.

- 28 Select the card by placing the cursor on the DBIC.
- 29 From the pop-up menu select Describe/Modify Object. The Object Description dialog box appears.
- 30 From the Object Description dialog box, select HSTP Application from the fields under Object Attributes.
- 31 Select View/Modify Object Attributes.
- 32 Enter the new MAC address in the %LAC MAC Address field, for example, 0060381120a1.
- 33 Click the Verify button to verify the information.
- 34 Click the OK button to close the Attributes dialog box.
- 35 Click OK to close the Object Description dialog box.
- 36 Place the cursor on the DBIC you want to return to service and use the mouse to select

Maintenance -> DBIC -> Rts

from the pop-up menu.

- 37 Send any faulty cards for repair according to local procedure.
- 38 Record the following items in office records:

- date the card was replaced
- serial number of the card
- symptoms that prompted replacement of the card

Go to step 40.

- 39 Obtain further assistance in replacing this card by contacting the personnel responsible for higher level of support.
- 40 You have successfully completed this card replacement procedure.

**NTEX54
in a STAR**

Application

Use this procedure to replace the following cards in a Star Hub line drawer.

PEC	Suffixes	Name
NTEX54	CA	Data enhanced bus interface card (DBIC)

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTEX54 in a STAR (continued)

Summary of replacing an NTEX54 in a STAR

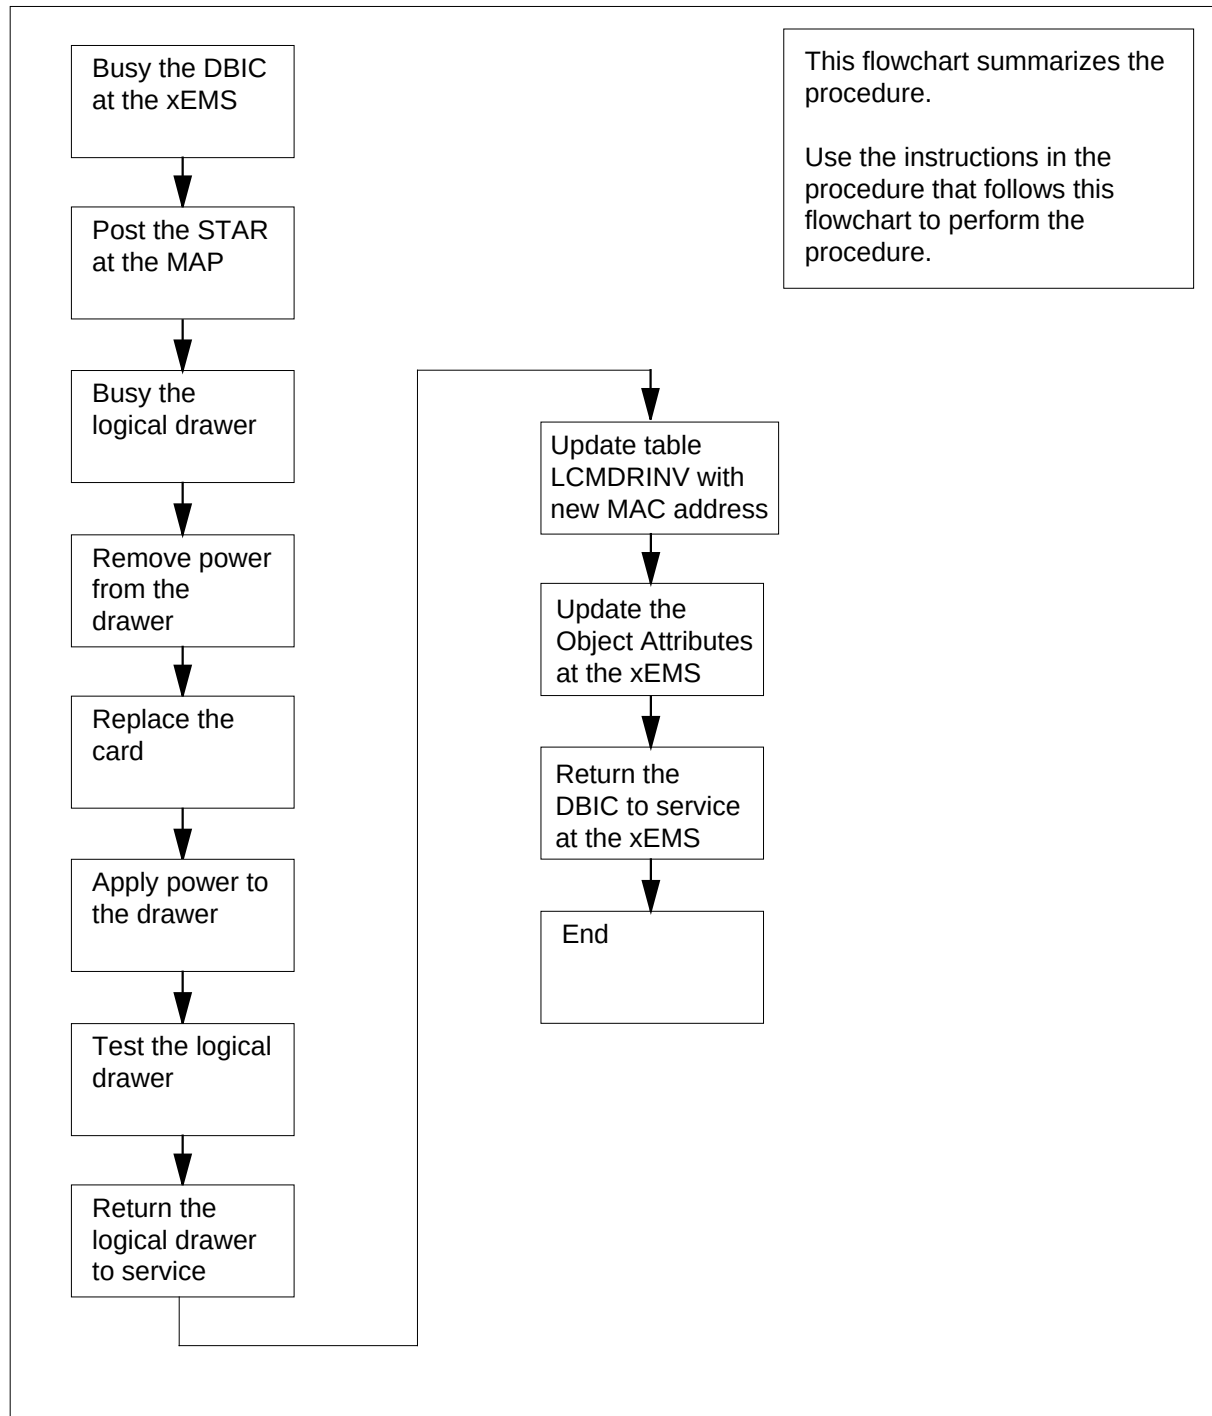

NTEX54 in a STAR (continued)

Replacing an NTEX54 in STAR

At your current location

1



CAUTION

Loss of service

This procedure directs you to manually busy a line drawer. Removal of a line drawer from service can cause the system to drop calls in progress. Perform this procedure only if you need to restore out-of-service components. Unless it is urgent, perform this procedure during periods of low traffic.

Get a replacement card. Make sure that the replacement card and the card that you remove have the same product engineering code (PEC) and PEC suffix.

2



CAUTION

Transport network must know new MAC address

Work with the network administrator during this procedure. The transport network must know the MAC address of the new DBIC before the DBIC can support 1-Meg Modem Service.

Write down the 12-digit number stamped on the new NTEX54 card. This number is the media access control (MAC) address. You will use the MAC address later in this procedure.

At the xEMS workstation

- 3** Go to the submap of the STAR line drawer with the NTEX54 card to be replaced.
- 4** Place the cursor on the data-enhanced bus interface card (DBIC) you want to busy and use the mouse to select
Maintenance -> DBIC -> ManB
from the pop-up menu.

NTEX54 in a STAR (continued)

At the MAP terminal

- 5 To access the peripheral module (PM) level of the MAP (maintenance and administration position) display and post the STAR, type

>MAPCI;MTC;PM;POST STAR site frame_no unit_no

and press the Enter key.

where

site

is the site name (alphanumeric) of the STAR

frame_no

is the equipment frame number (00 to 511) of the STAR

unit_no

is 0 for the STAR

Example of a MAP display:

```
STAR REM1 O1 1 ISTb Links_OOS: CSide 0 PSide 0 UMP OOS: 0
Unit 0: InSv Mtce /RG: 0
Unit 1: InsV Mtce /RG: 0 RG
11 11 11 11 11 22 22 22 22 22 33 33 33 Pref 0 InSv
01 23 45 67 89 01 23 45 67 89 01 23 45 67 89 01 23 45 Stby 1 InSv
.. .. SS .. .. .. .. .. .. .. .. .. .. .. .. .. ..
```

- 6 Record the numbers of the logical drawers for the NTEX54.
- Note:** Logical drawers configure in pairs for the physical drawer. The NTEX54 services the physical drawer. Both logical drawers must be manually busy to perform this card replacement procedure.
- 7 Check the state of the affected logical drawers.

If the state for	Do
one or both logical drawers is I, S, or . (dot)	step 8
both logical drawers is M	step 11
one or both logical drawers is 0 or -	Determine why the drawer is offline. If necessary, contact the next level of support.

- 8 To manually busy the logical drawer, type

>BSY DRWR drwr_no

and press the Enter key.

where

NTEX54
in a STAR (continued)

drwr_no
is the logical drawer number (0 to 23)

Example of a MAP response:

STAR REM1 01 Drwr 4 will be taken out of service
Please confirm ("YES", "Y", "NO", or "N"):

- 9 To confirm the command, type
>YES
and press the Enter key.
Example of a MAP response:

STAR REM1 01 1 Drwr 4 Bsy Passed

If	Do
you must busy the other logical drawer of the pair	step 10
both logical drawers are now M	step 11

- 10 Busy the other logical drawer of the pair.
>BSY DRWR drwr_no
and press the Enter key.
where

drwr_no
is the logical drawer number (0 to 23)

Example of a MAP response:

STAR REM1 01 1 Drwr 5 Bsy Passed

NTEX54 in a STAR (continued)

At the SRHE frame

11



WARNING

Static electricity damage

Wear a wrist strap that connects to the wrist-strap grounding point to handle circuit cards. The wrist-strap grounding point is on the frame supervisory panel (FSP). The wrist strap protects the cards against static electricity damage.



WARNING

Potential equipment damage

Note the fuses that you remove from the fuse panel. If you do not insert fuses in the correct location on the fuse panel, equipment damage occurs.



WARNING

Equipment damage

Take these precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the card into its slot.


Remove fuses for the line drawer containing the faulty DBIC. Refer to the figure and table that follow to identify the correct fuses. Perform the following steps.

- a Remove the -48V fuse for the line drawer that contains the faulty DBIC.
- b Remove the +15V fuse for the line drawer that contains the faulty DBIC.
- c Remove the +5V fuse for the line drawer that contains the faulty DBIC.

Note: The line drawer fuses are grouped and labeled as +5 V, +15 V, and -48 V and are numbered from 1 to 18. The line drawers are numbered from 1 to 18. Any +5 V, +15 V, or -48 V fuse in position 1 is associated with line drawer 1 and any fuse in position 2 is associated with line drawer 2, and so forth.

NTEX54
in a STAR (continued)

FSP front panel layout

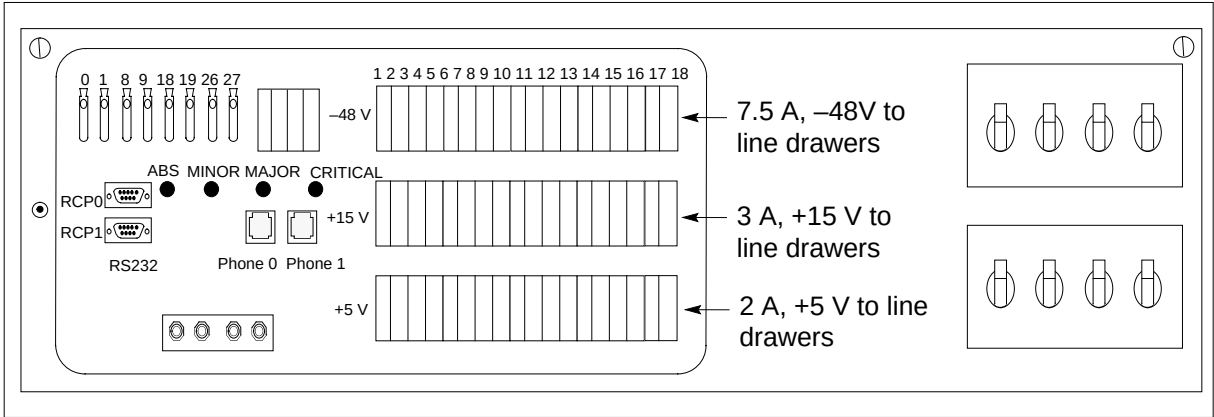

Relationship of line drawer to FSP fuse numbers (Sheet 1 of 2)


FSP FUSE numbers			
Line drawer	+5 V	+15 V	-48 V
1	01	01	01
2	02	02	02
3	03	03	03
4	04	04	04
5	05	05	05
6	06	06	06
7	07	07	07
8	08	08	08
9	09	09	09
10	10	10	10
11	11	11	11
12	12	12	12
13	13	13	13
14	14	14	14

NTEX54 in a STAR (continued)


Relationship of line drawer to FSP fuse numbers (Sheet 2 of 2)

Line drawer	FSP FUSE numbers		
	+5 V	+15 V	-48 V
15	15	15	15
16	16	16	16
17	17	17	17
18	18	18	18

- 12** Identify the drawer. Press the small thumb-latch button on the lower left edge of the drawer. Pull the drawer out. To secure the drawer in a steady horizontal position, tip the drawer until the catch rests on the line drawer track.

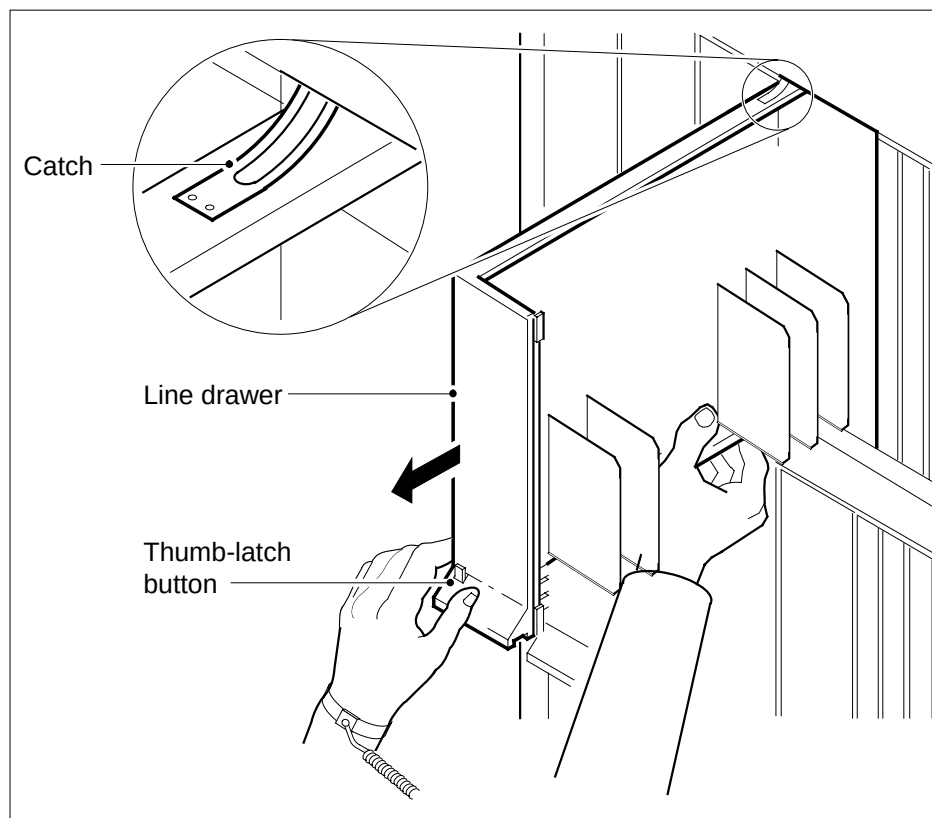

- 13** Disconnect the data cable from the RJ-45 connector on the DBIC. The RJ-45 connector is located at slot position 16 of the odd LSG (connector slot). Refer to the following figure.

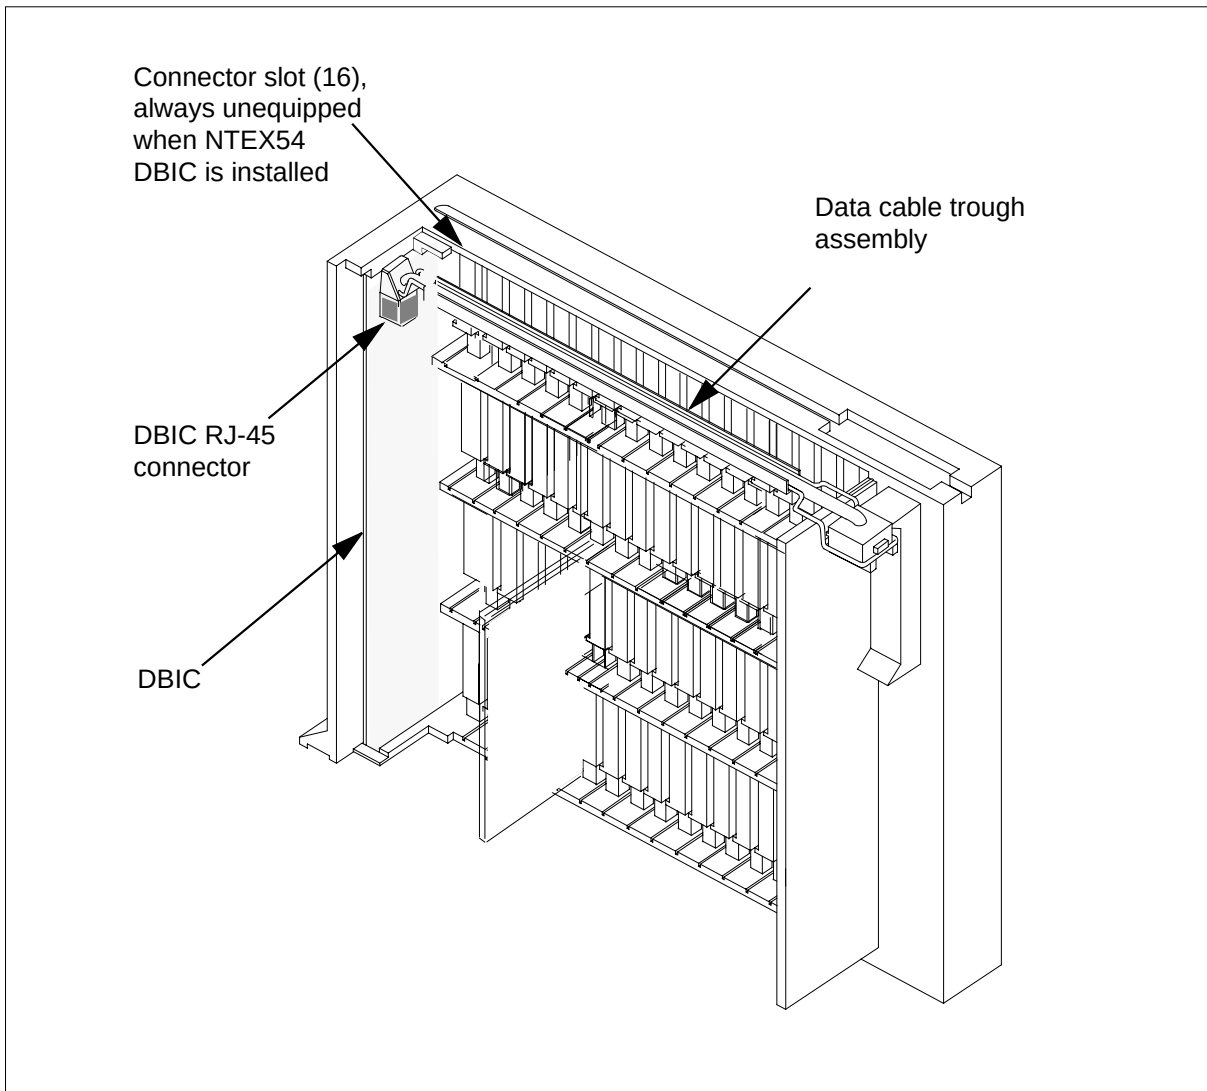NTEX54
in a STAR (continued)


14

**WARNING****Do not hold the card by the levers only**

If you hold a card by the locking levers only, the levers can break. Pull the card half way out of the slot. Carefully grasp the card from below for more support. Continue to remove the card from the drawer. Make sure that you do not touch any wires or internal parts on the card.

NTEX54 in a STAR (continued)


Open the locking levers on the face of the card.

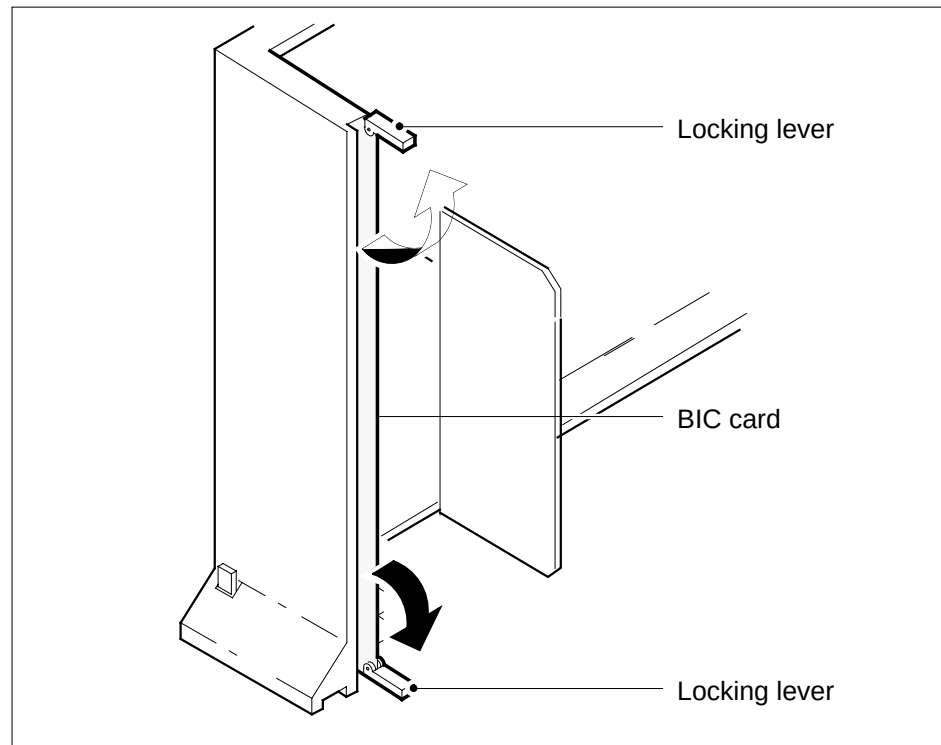

- 15** Hold the locking levers. Carefully pull the card toward you until the card clears the drawer.

Note: Do not use a rocking motion to remove the card.


NTEX54
in a STAR (continued)

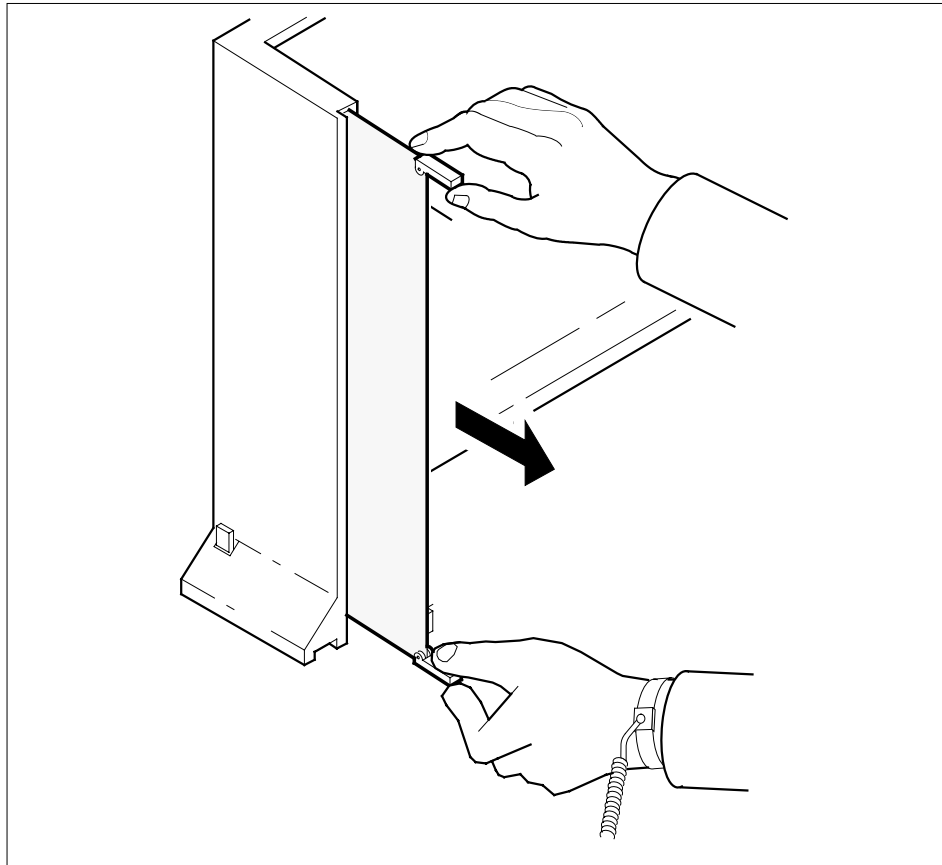

- 16** Place the card that you removed in an electrostatic discharge (ESD) protective container.
- 17** Make sure that the replacement card and the card that you remove have the same PEC and PEC suffix.
- 18** Close the locking levers on the replacement card. Align the card with the pin slots in the drawer. Carefully slide the card into the drawer.
- 19** Support the drawer with your left hand. Use your right hand to push on the upper and lower edges of the card. Make sure that the card sits completely in the drawer.


Note: Do not use a rocking motion to insert the card.

NTEX54
in a STAR (continued)

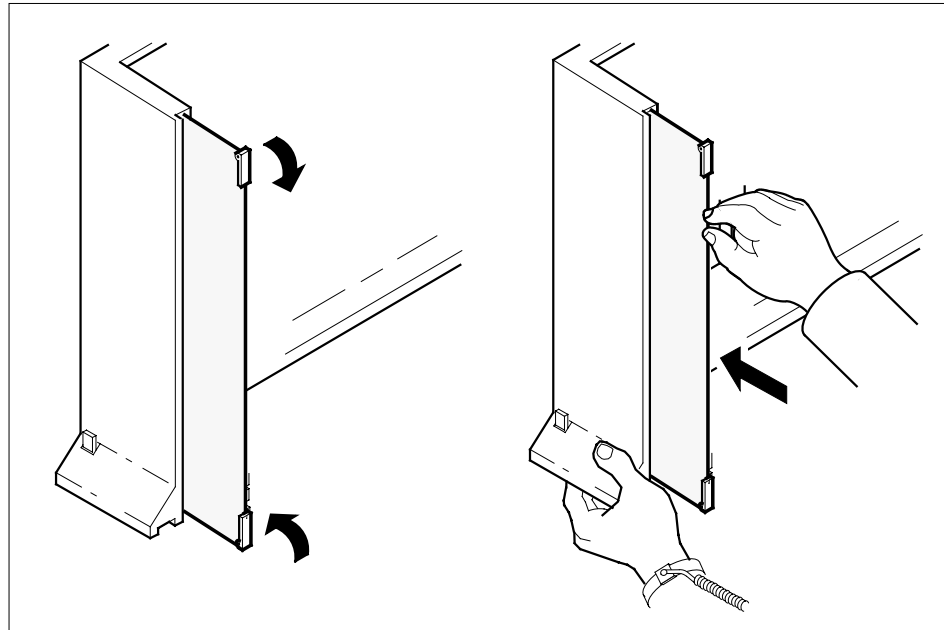

- 20** Connect the data cable to the RJ-45 connector that you disconnected in step 13. Refer to the following figure.

NTEX54 in a STAR (continued)

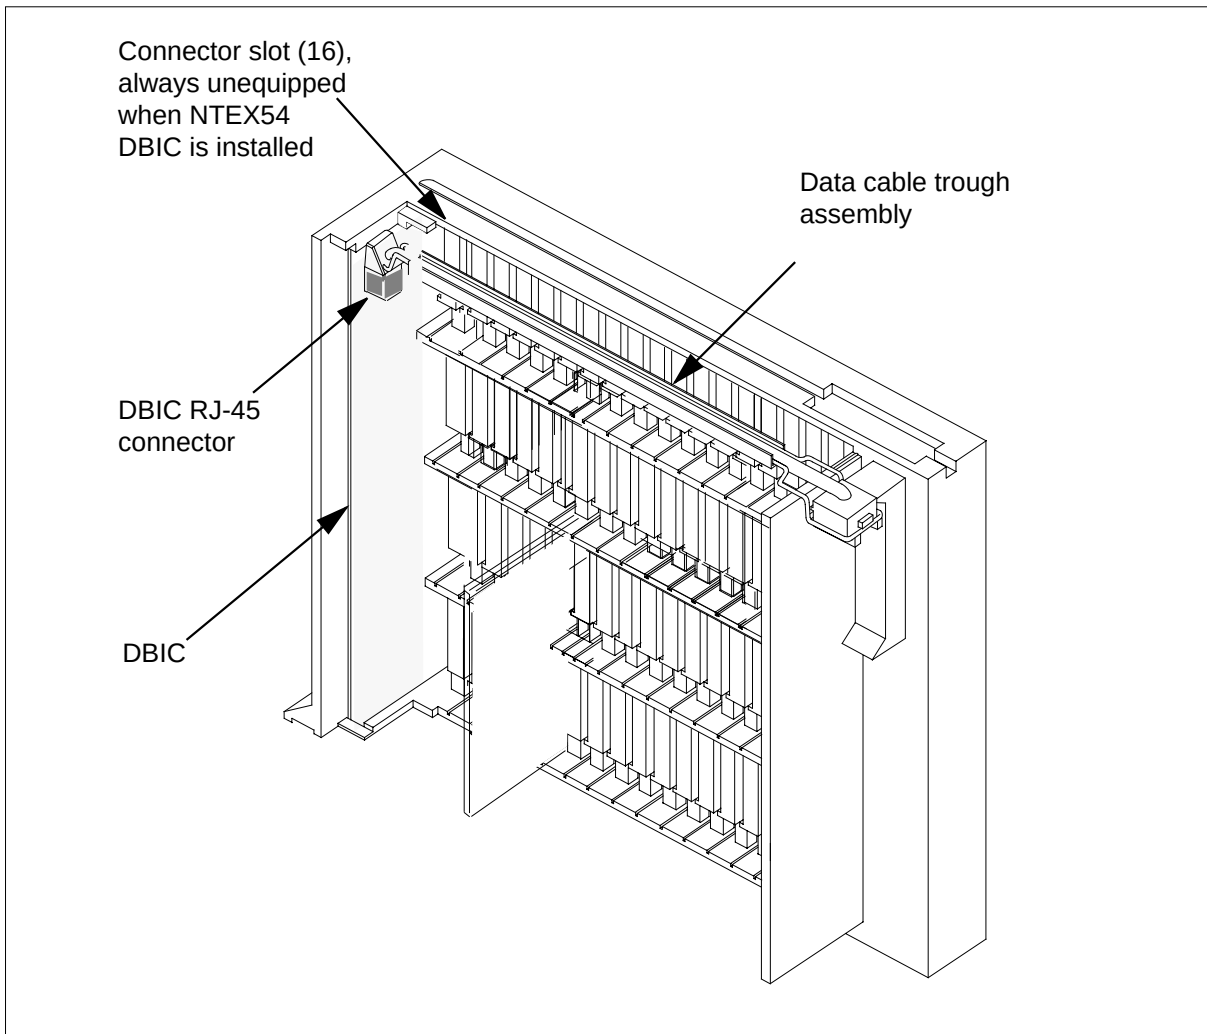

21 Close the line drawer.

22



WARNING

Potential equipment damage


Make sure you insert the fuses in the correct location on the fuse panel to prevent equipment damage.

Insert the fuses that you removed in step 11. Refer to the following figure.

NTEX54
in a STAR (continued)

- a Insert the +5V fuse.
- b Insert the +15V fuse.
- c Insert the -48V fuse.

FSP front panel layout

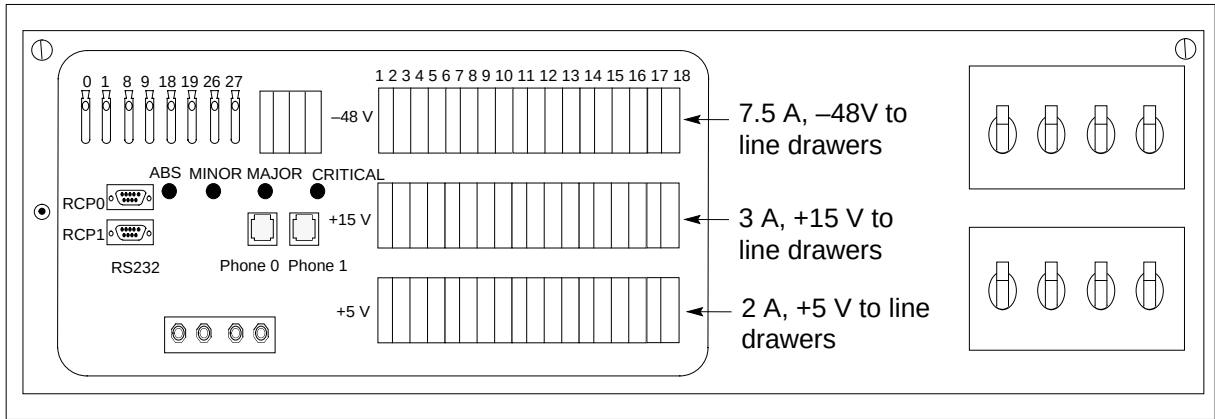

At the MAP terminal

- 23 A maintenance flag (Mtce) can appear. This flag indicates that system-initiated maintenance tasks are in progress. To stop the system-initiated maintenance tasks, type

>ABTK

and press the Enter key.

- 24 To return the logical drawer to service, type

>RTS DRWR drwr_no

and press the Enter key.

where

drwr_no

is the logical drawer number (0 to 17)

Example of a MAP response:

```
OSvce Tests Initiated
STAR REM1 00 0 Drwr 4 Tst Passed
STAR REM1 00 0 Drwr 4 Rts Passed
```

If the RTS command	Do
passes, and you must return the other logical drawer to service	step 25
passes, and the other logical drawer is in service	step 26

NTEX54 in a STAR (continued)

	If the RTS command	Do
	fails	step 39
25	Repeat step 24 for the other logical drawer in the pair.	
26	Update table LCMDRINV.	
	Note: Make sure you have the new MAC address from the replacement card as recorded in step 2.	
	a To open table LCMDRINV, type >TABLE LCMDRINV and press the Enter key. b To position on the tuple for the STAR, type >POS site_name frame_no lcm_no and press the Enter key. where site_name is the name of the site frame_no is the number of the frame lcm_no is the number of the STAR c To begin changing the tuple, type >CHA and press the Enter key. d To continue processing, type >Y and press the Enter key. e Press the Enter key to scroll through the fields until you access the field with the MAC address. f Enter the new MAC address. Type >drwr_id card_pec drwr_pec mac_address ip_address and press the Enter key. where drwr_id is the physical number of the drawer card_pec is NTEX54AA, NTEX54AB, NTEX54BA, or NTEX54CA drwr_pec is the PEC of the drawer	

NTEX54 in a STAR (continued)

mac_address

is the MAC address of the new NTEX54

ip_address

is the IP address of the new NTEX54

- g** Press the Enter key to scroll through remaining fields.
- h** Confirm the change. Type
>Y
and press the Enter key.
- i** Exit the table. Type
>QUIT
and press the Enter key.

At the xEMS workstation

27



CAUTION

Transport network must know new MAC address

Before you return the DBIC to service, you must provide the MAC address for the DBIC to the transport network. Contact the network administrator for assistance.

Go to the submap of the STAR line drawer with the new NTEX54 card.

- 28** Select the card by placing the cursor on the DBIC.
- 29** From the pop-up menu select Describe/Modify Object. The Object Description dialog box appears.
- 30** From the Object Description dialog box, select HSTP Application from the fields under Object Attributes.
- 31** Select View/Modify Object Attributes.
- 32** Enter the new MAC address in the %LAC MAC Address field, for example, 0060381120a1.
- 33** Click the Verify button to check the information.
- 34** Click the OK button to close the Attributes dialog box.
- 35** Click OK to close the Object Description dialog box.
- 36** Place the cursor on the DBIC you want to return to service and use the mouse to select
Maintenance -> DBIC -> Rts
from the pop-up menu.
- 37** Send any cards with faults for repair according to local procedure.

NTEX54
in a STAR (end)

- 38** Record the following items in office records:
- date the card was replaced
 - serial number of the card
 - indications that prompted replacement of the card
- Go to step 40.
- 39** Get additional help in replacing this card by contacting the personnel responsible for higher level of support.
- 40** You have correctly completed this card replacement procedure.

NTMX45 in an IOPAC HIE

Application

Use this procedure to replace an NTMX45 in host interface equipment (HIE) shelf.

PEC	Suffixes	Name
NTMX45	AA	Emergency Stand-Alone (ESA) processor (EP)

If you cannot identify the PEC, suffix, and shelf or frame for the card you want to replace, refer to the “Index” in this document. The index lists the cards, shelves, and frames in this card replacement NTP.

Common procedures

This procedure does not refer to any common procedures.

Next level of maintenance


A problem can occur that requires the help of the local maintenance personnel. Gather all important logs, reports, and system information (that is, product type and current software load) for analysis. The related logs, maintenance notes, and system information help make sure that the next level of maintenance and support can find the problem. More detail about logs appears in the *Log Report Reference Manual*.

Action

The flowchart that follows provides a summary of this procedure. Use the instructions in the step-action procedure that follows the flowchart to replace the card.

NTMX45 in an IOPAC HIE (continued)

Summary of replacing an NTMX45 HIE

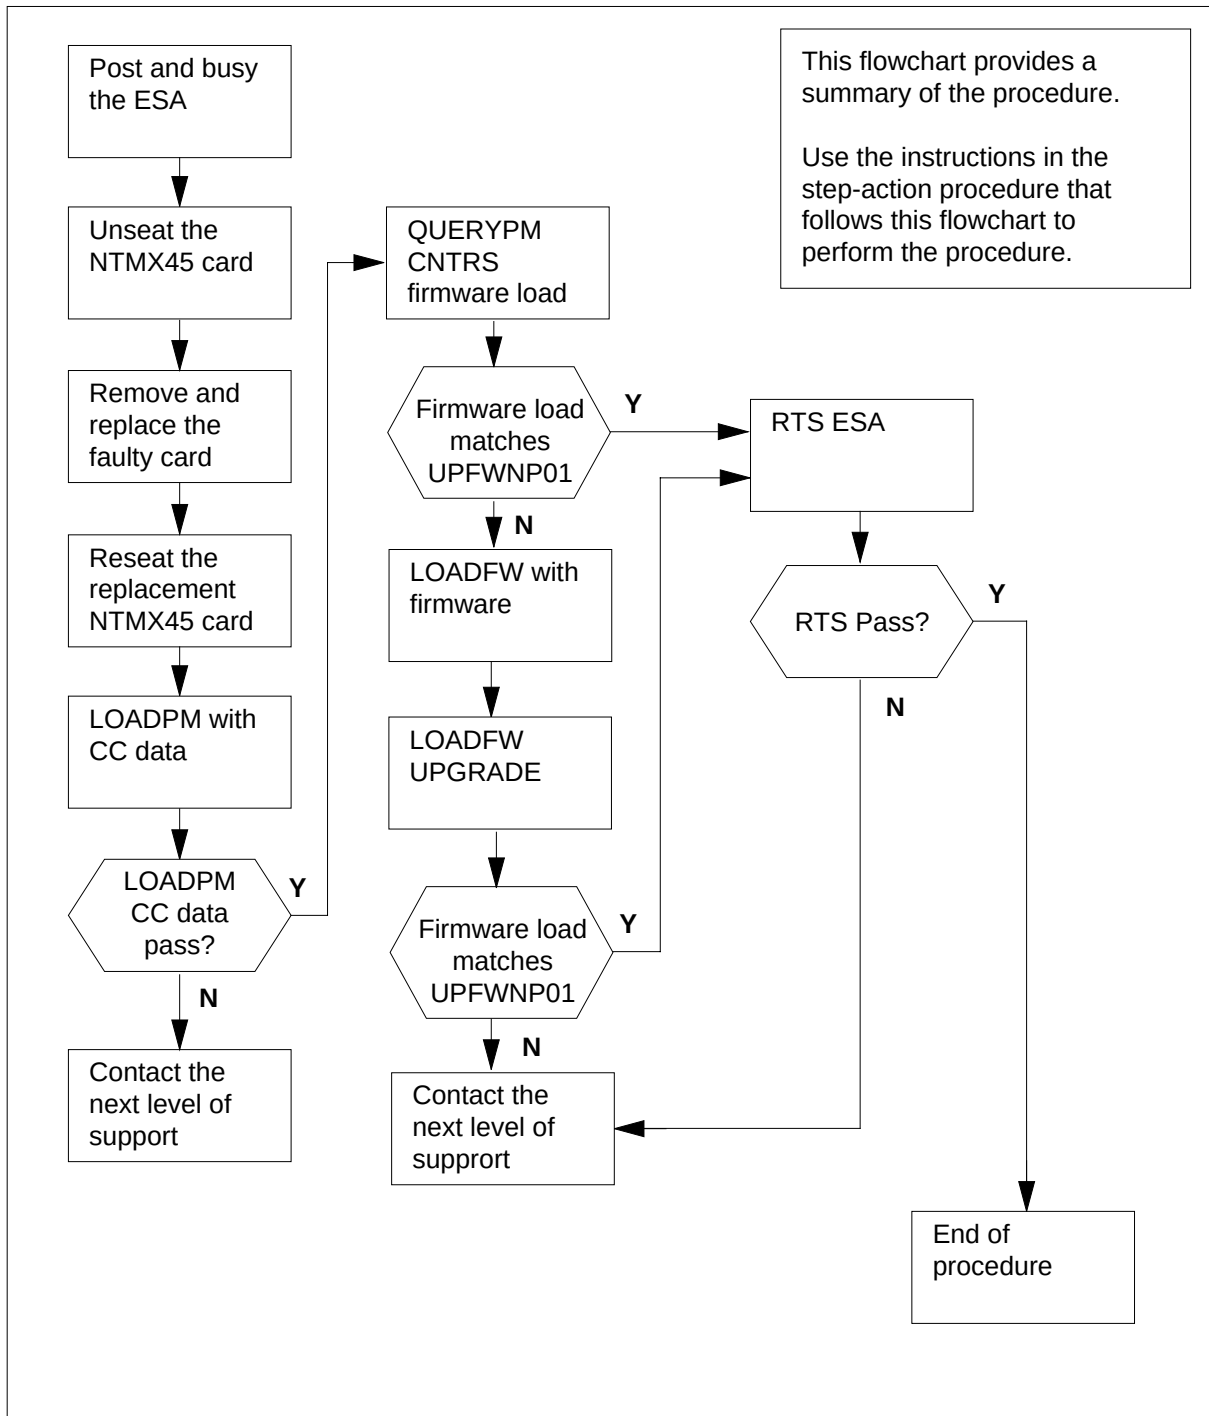

NTMX45 in an IOPAC HIE (continued)

Replacing an NTMX45 HIE

At your Current Location

- 1 Continue if you were referred to this card replacement procedure
 - from a step in a maintenance procedure
 - to verify or accept cards
 - by your maintenance support group
- 2 Get a replacement card. Make sure the replacement card has the same product equipment code (PEC) including suffix, as the original card.

At the MAP terminal

- 3 Access the PM level of the MAP and post the ESA by typing
>MAPCI;MTC;PM;POST ESA esa_no
 and pressing the Enter key.

where

esa_no

is the number of the ESA unit to be busied (0 to 255)

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1RLCM	.	.	.	.	.
ESA			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	2	0	2	25		
2 Post_	ESA	0	0	0	0	1	1		
3 ListSet									
4					Links_00S: CSide	0			
5 Trnsl		RLCM	ESA	4 Sysb					
6 Tst									
7 Bsy_									
8 RTS_									
9 OffL									
10 LoadPM									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

NTMX45 in an IOPAC HIE (continued)

At the MAP terminal

- 4 Busy the inactive ESA processor by typing

>BSY

and pressing the Enter key.

Example of a MAP response:

ESA 4 This action will take this PM
 out of service
Please confirm ("YES", "Y", "NO", or "N"):

Respond by typing

>YES

At the RLCM frame

- 5



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the LCM. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


- 6 Remove the NTMX45 card as shown in the following figures.

- a** Locate the damaged card on the appropriate shelf.

NTMX45 in an IOPAC HIE (continued)

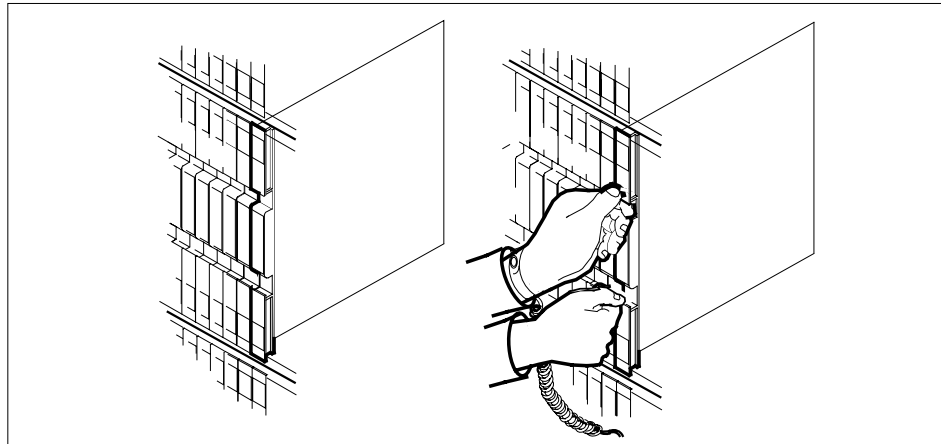


- b** Open the locking levers on the damaged card and carefully pull the card towards you until it clears the shelf.

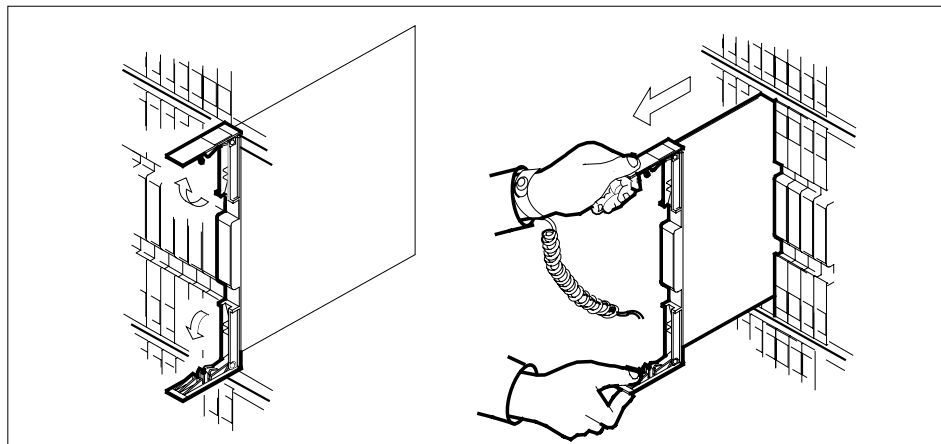


- c** Make sure that the replacement card has the same PEC and suffix as the card you just removed. Also make sure that all DIP switches on the replacement card match settings of the card just removed.
- 7** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf and carefully slide the card into the shelf.

NTMX45
in an IOPAC HIE (continued)

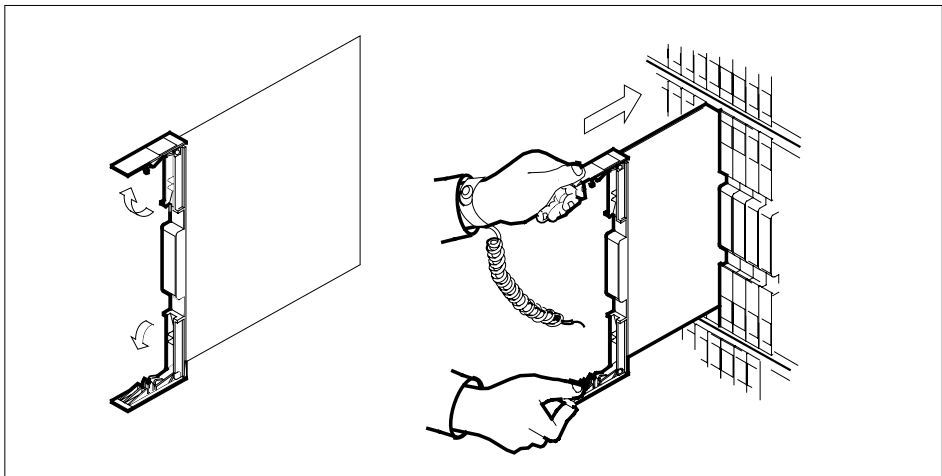

Seat and lock the card.

- b** Use your fingers or thumbs to push on the upper and lower edges of the faceplate.
- c** Close the locking levers.

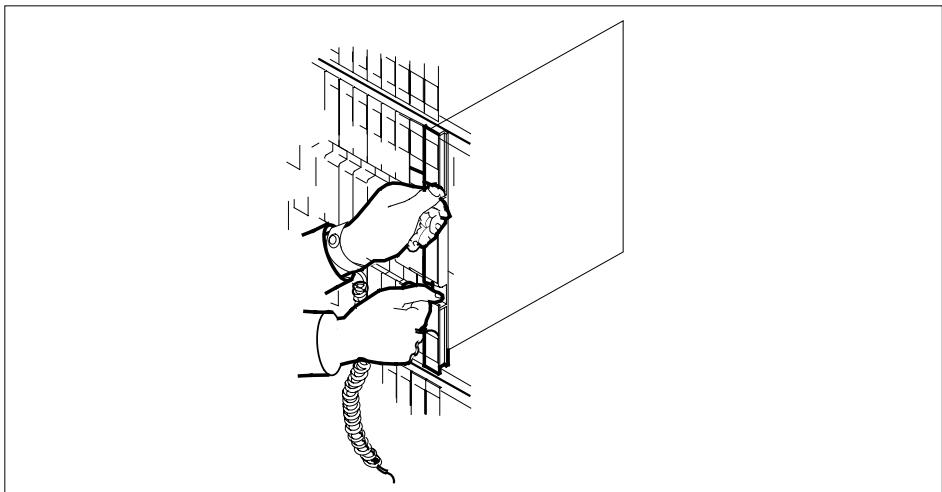

8 Use the following table to determine the next step in this procedure.

If you entered this procedure from	Do
an alarm clearing procedure	step 34
other	step 9

NTMX45 in an IOPAC HIE (continued)

- 9 Load the ESA processor by typing
>LOADPM
and pressing the Enter key.

If the load	Do
message "loadfile not found in directory" is received	step 10
load passes	step 28
load fails	step 35

- 10 Determine the type of device on which the PM load files are located.

If load files are located on	Do
tape	step 11
IOC disk	step 17
SLM disk	step 22

- 11 Locate the tape that contains the PM load files.

- 12 Mount the tape on a magnetic tape drive.

At the MAP terminal

- 13 Download the tape by typing
>MOUNT tape_no
and pressing the Enter key.

where

tape_no

is the number of the tape drive containing the PM load files

- 14 List the contents of the tape in your user directory by typing

>LIST T tape_no

and pressing the Enter key.

where

tape_no

is the number of the tape drive containing the PM load files

- 15 Demount the tape by typing

>DEMOUNT T tape_no

and pressing the Enter key.

where

NTMX45
in an IOPAC HIE (continued)

- tape_no**
is the number of the tape drive containing the PM load files
- 16** Go to step 27.
- 17** From office records, determine and note the number of the input/output controller (IOC) disk and the name of the volume that contains the PM load files.
- 18** Access the disk utility level of the MAP display by typing
>DSKUT
and pressing the Enter key.
- 19** List the IOC file names into your user directory by typing
>LISTVOL volume_name ALL
and pressing the Enter key.
where
volume_name
is the name of the volume that contains the PM load files, obtained in step 17
- 20** Leave the disk utility by typing
>QUIT
and pressing the Enter key.
- 21** Go to step 27.
- 22** From office records, determine and note the number of the system load module (SLM) disk and the name of the volume that contains the PM load files.
- 23** Access the disk utility level of the MAP display by typing
>DISKUT
and pressing the Enter key.
- 24** List all SLM disk volumes into your user directory by typing
>LV CM
and pressing the Enter key.
- 25** List the SLM file names into your user directory by typing
>LF volume_name
and pressing the Enter key.
where
volume_name
is the name of the volume that contains the PM load files, obtained in step 22
- 26** Leave the disk utility by typing
>QUIT
and pressing the Enter key.

NTMX45 in an IOPAC HIE (continued)

- 27 Reload the ESA processor by typing
>LOADPM
and pressing the Enter key.


If loadpm	Do
passes	step 28
fails	step 35

- 28 Query the PM counters for the firmware load on the NTMX45 by typing
>QUERYPM CNTRS
and pressing the Enter key.
Example of a MAP display:

```

Unsolicited MSG limit = 250, count = 0
Ram Load: MSA12AM1
EPRom Version: Ac01
EEPROM Load: Loadable [NP02], Executable: [NP02]
EP:MX45AA

```

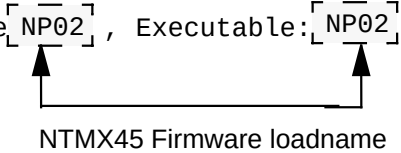

NTMX45 Firmware loadname

If firmware is	Do
valid	step 31
invalid	step 29

- 29 Load the NTMX45 firmware by typing
>LOADFW
and pressing the Enter key.

Note: The command applies the firmware file provisioned in table XESAINV unless the firmware load is indicated with the command.

If load	Do
passes	step 30
fails	step 35

- 30 Upgrade the firmware in the NTMX45AA by typing
>LOADFW UPGRADE

NTMX45 in an IOPAC HIE (end)

and pressing the Enter key.

If the LOADFW UPGRADE	Do

passes	step 31

fails	step 35

- 31** Return the ESA to service by typing
>RTS
and pressing the Enter key.

If the RTS	Do

passes	step 32

fails	step 35

- 32** Send any damaged cards for repair according to local procedure.

- 33** Record the following items in office records:

- date the card was replaced
- serial number of the card
- problems that required replacement of the card

Go to step 36.

- 34** Return to the *Alarm Clearing Procedure* that referred you to this procedure. If necessary, go to the point where the damaged card list was produced, identify the next damaged card on the list, and go to the appropriate procedure for that card in this manual.

- 35** Contact the next level of support for additional help to replace this card.

- 36** You have completed this procedure. Return to the maintenance procedure that referred you to this card replacement procedure and continue.

NTMX45 in an OPAC HIE

Application

Use this procedure to replace an NTMX45 in host interface equipment (HIE) shelf.

PEC	Suffixes	Name
NTMX45	AA	Emergency Stand-Alone (ESA) processor (EP)

If you cannot identify the PEC, suffix, and shelf or frame for the card you want to replace, refer to the “Index” in this document. The index lists the cards, shelves, and frames in this card replacement NTP.

Common procedures

This procedure does not refer to any common procedures.

Next level of maintenance


A problem can occur that requires the help of the local maintenance personnel. Gather all important logs, reports, and system information (that is, product type and current software load) for analysis. The related logs, maintenance notes, and system information help make sure that the next level of maintenance and support can find the problem. More detail about logs appears in the *Log Report Reference Manual*.

Action

The flowchart that follows provides a summary of this procedure. Use the instructions in the step-action procedure that follows the flowchart to replace the card.

NTMX45 in an OPAC HIE (continued)

Summary of replacing an NTMX45 HIE

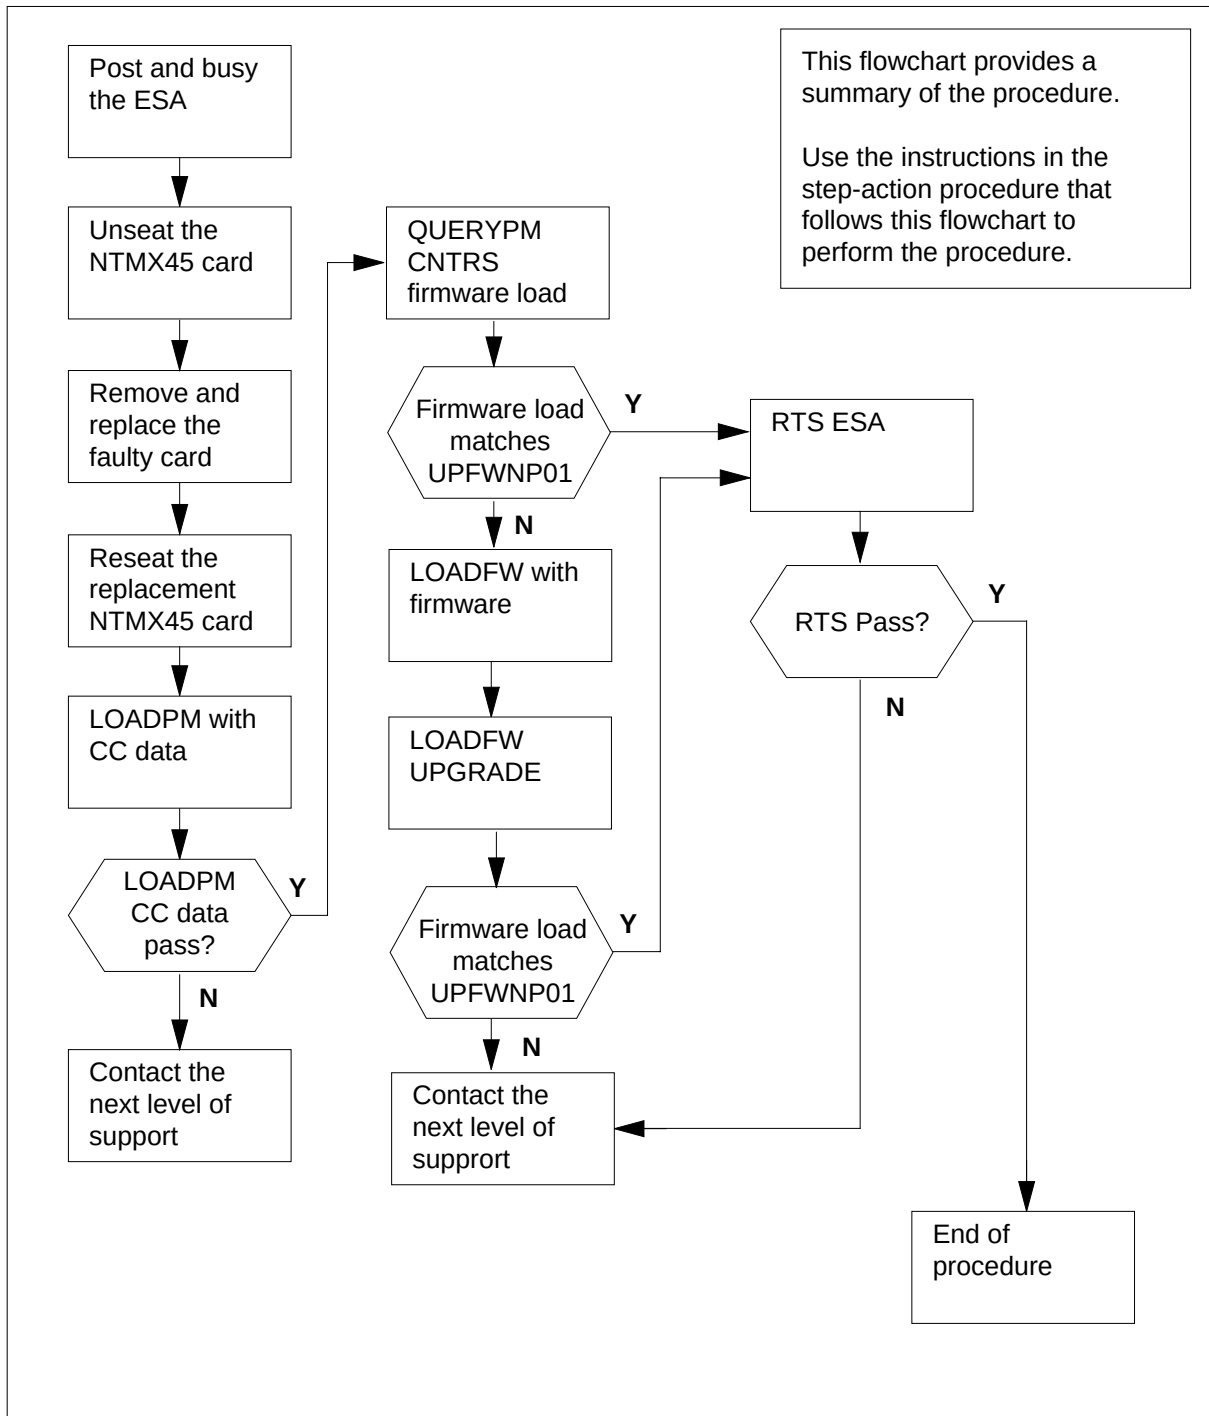

NTMX45
in an OPAC HIE (continued)

Replacing an NTMX45 HIE

At your Current Location

- 1
- Continue if you were referred to this card replacement procedure
- from a step in a maintenance procedure
 - to verify or accept cards
 - by your maintenance support group
- 2
- Get a replacement card. Make sure the replacement card has the same product equipment code (PEC) including suffix, as the original card.

At the MAP terminal

- 3
- Access the PM level of the MAP and post the ESA by typing
- >MAPCI;MTC;PM;POST ESA esa_no
- and pressing the Enter key.

where

esa_no
is the number of the ESA unit to be busied (0 to 255)

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1RLCM	.	.	.	.	.
ESA			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	2	0	2	25		
2 Post_	ESA	0	0	0	0	1	1		
3 ListSet									
4					Links_00S: CSide	0			
5 Trnsl		RLCM	ESA	4 Sysb					
6 Tst									
7 Bsy_									
8 RTS_									
9 OffL									
10 LoadPM									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

NTMX45 in an OPAC HIE (continued)

At the MAP terminal

- 4 Busy the inactive ESA processor by typing

>BSY

and pressing the Enter key.

Example of a MAP response:

```
ESA 4      This action will take this PM
           out of service
Please confirm ("YES", "Y", "NO", or "N"):
```

Respond by typing

>YES

At the RLCM frame

- 5



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the LCM. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


- 6 Remove the NTMX45 card as shown in the following figures.

- a** Locate the damaged card on the appropriate shelf.

NTMX45 in an OPAC HIE (continued)

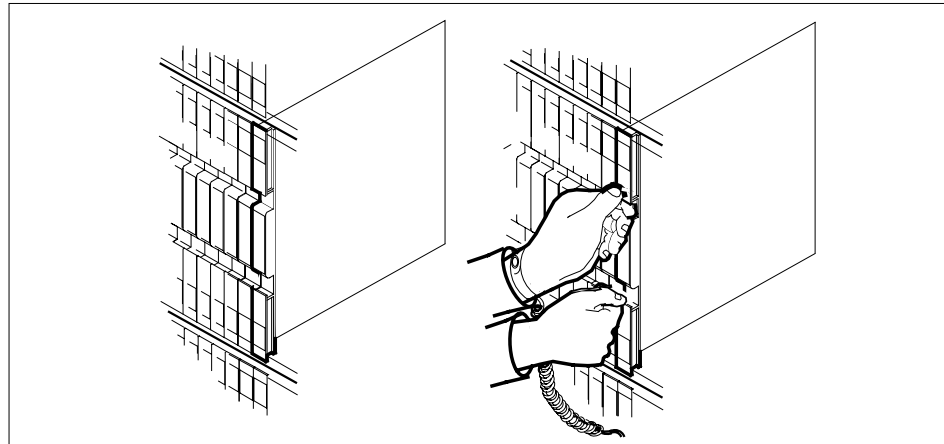


- b** Open the locking levers on the damaged card and carefully pull the card towards you until it clears the shelf.

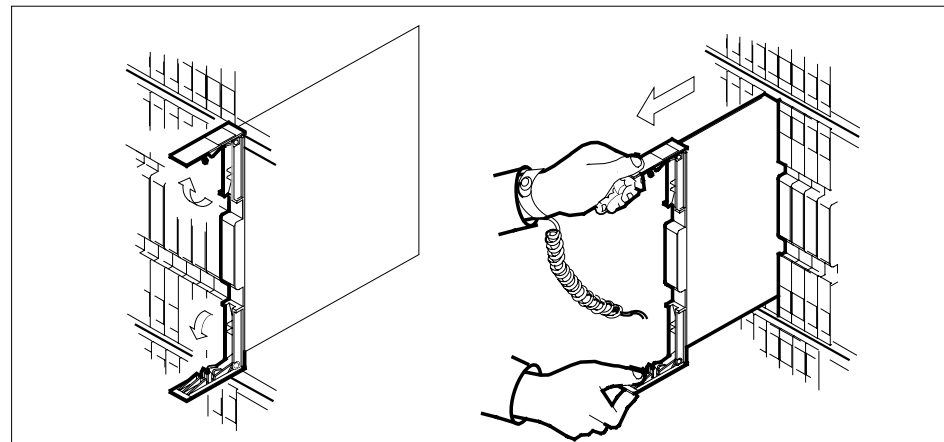


- c** Make sure that the replacement card has the same PEC and suffix as the card you just removed. Also make sure that all DIP switches on the replacement card match settings of the card just removed.
- 7** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf and carefully slide the card into the shelf.

NTMX45
in an OPAC HIE (continued)

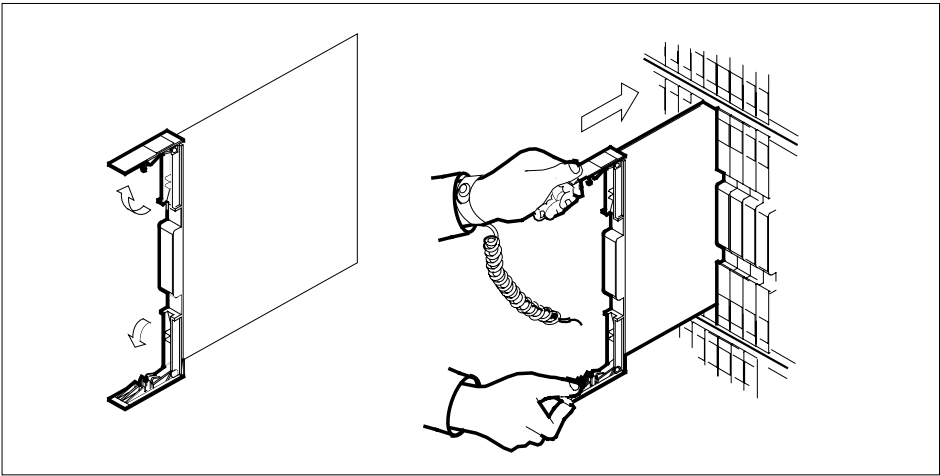

Seat and lock the card.

- b** Use your fingers or thumbs to push on the upper and lower edges of the faceplate.
- c** Close the locking levers.

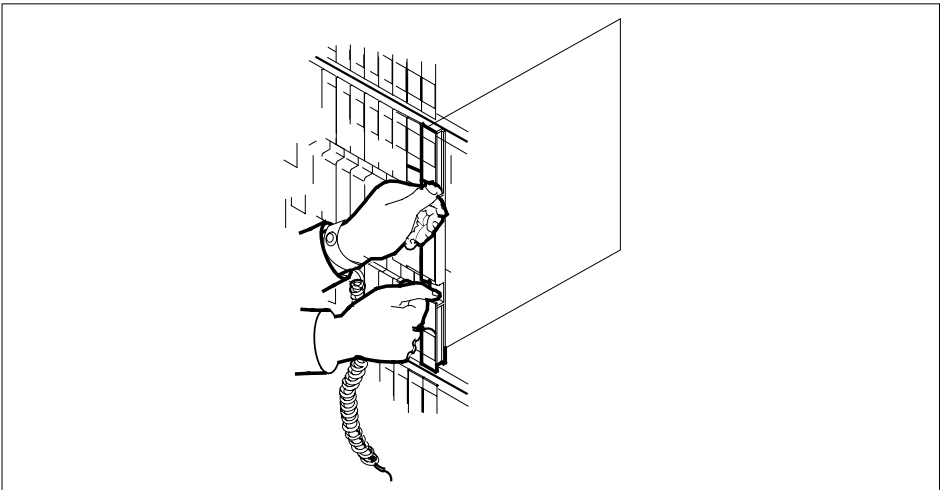

8 Use the following table to determine the next step in this procedure.

If you entered this procedure from	Do
an alarm clearing procedure	step 34
other	step 9

NTMX45

in an OPAC HIE (continued)

- 9 Load the ESA processor by typing
>LOADPM
 and pressing the Enter key.

If the load	Do
message "loadfile not found in directory" is received	step 10
load passes	step 28
load fails	step 35

- 10 Determine the type of device on which the PM load files are located.

If load files are located on	Do
tape	step 11
IOC disk	step 17
SLM disk	step 22

- 11 Locate the tape that contains the PM load files.

- 12 Mount the tape on a magnetic tape drive.

At the MAP terminal

- 13 Download the tape by typing
>MOUNT tape_no
 and pressing the Enter key.

where

tape_no

is the number of the tape drive containing the PM load files

- 14 List the contents of the tape in your user directory by typing

>LIST T tape_no

and pressing the Enter key.

where

tape_no

is the number of the tape drive containing the PM load files

- 15 Demount the tape by typing

>DEMOUNT T tape_no

and pressing the Enter key.

where

NTMX45
in an OPAC HIE (continued)

- tape_no**
is the number of the tape drive containing the PM load files
- 16** Go to step 27.
- 17** From office records, determine and note the number of the input/output controller (IOC) disk and the name of the volume that contains the PM load files.
- 18** Access the disk utility level of the MAP display by typing
>DSKUT
and pressing the Enter key.
- 19** List the IOC file names into your user directory by typing
>LISTVOL volume_name ALL
and pressing the Enter key.
where
volume_name
is the name of the volume that contains the PM load files, obtained in step 17
- 20** Leave the disk utility by typing
>QUIT
and pressing the Enter key.
- 21** Go to step 27.
- 22** From office records, determine and note the number of the system load module (SLM) disk and the name of the volume that contains the PM load files.
- 23** Access the disk utility level of the MAP display by typing
>DISKUT
and pressing the Enter key.
- 24** List all SLM disk volumes into your user directory by typing
>LV CM
and pressing the Enter key.
- 25** List the SLM file names into your user directory by typing
>LF volume_name
and pressing the Enter key.
where
volume_name
is the name of the volume that contains the PM load files, obtained in step 22
- 26** Leave the disk utility by typing
>QUIT
and pressing the Enter key.

NTMX45 in an OPAC HIE (continued)

- 27 Reload the ESA processor by typing
>LOADPM
and pressing the Enter key.

If loadpm	Do
passes	step 28
fails	step 35

- 28 Query the PM counters for the firmware load on the NTMX45 by typing
>QUERYPM CNTRS
and pressing the Enter key.
Example of a MAP display:

```
Unsolicited MSG limit = 250, count = 0
Ram Load: MSA12AM1
EProm Version: Ac01
EEProm Load: Loadable[NP02], Executable:[NP02]
EP:MX45AA
```

NTMX45 Firmware loadname

If firmware is	Do
valid	step 31
invalid	step 29

- 29 Load the NTMX45 firmware by typing
>LOADFW
and pressing the Enter key.

Note: The command applies the firmware file provisioned in table XESAINV unless the firmware load is indicated with the command.

If load	Do
passes	step 30
fails	step 35

- 30 Upgrade the firmware in the NTMX45AA by typing
>LOADFW UPGRADE

NTMX45
in an OPAC HIE (end)

and pressing the Enter key.

If the LOADFW UPGRADE**Do**

passes

step 31

fails

step 35

-
- 31** Return the ESA to service by typing
>RTS
and pressing the Enter key.

If the RTS**Do**

passes

step 32

fails

step 35

-
- 32** Send any damaged cards for repair according to local procedure.

- 33** Record the following items in office records:

- date the card was replaced
- serial number of the card
- problems that required replacement of the card

Go to step 36.

- 34** Return to the *Alarm Clearing Procedure* that referred you to this procedure. If necessary, go to the point where the damaged card list was produced, identify the next damaged card on the list, and go to the appropriate procedure for that card in this manual.

- 35** Contact the next level of support for additional help to replace this card.

- 36** You have completed this procedure. Return to the maintenance procedure that referred you to this card replacement procedure and continue.

NTMX45 in an OPM HIE

Application

Use this procedure to replace an NTMX45 in host interface equipment (HIE) shelf.

PEC	Suffixes	Name
NTMX45	AA	Emergency Stand-Alone (ESA) processor (EP)

If you cannot identify the PEC, suffix, and shelf or frame for the card you want to replace, refer to the “Index” in this document. The index lists the cards, shelves, and frames in this card replacement NTP.

Common procedures

This procedure does not refer to any common procedures.

Next level of maintenance


A problem can occur that requires the help of the local maintenance personnel. Gather all important logs, reports, and system information (that is, product type and current software load) for analysis. The related logs, maintenance notes, and system information help make sure that the next level of maintenance and support can find the problem. More detail about logs appears in the *Log Report Reference Manual*.

Action

The flowchart that follows provides a summary of this procedure. Use the instructions in the step-action procedure that follows the flowchart to replace the card.

NTMX45 in an OPM HIE (continued)

Summary of replacing an NTMX45 HIE

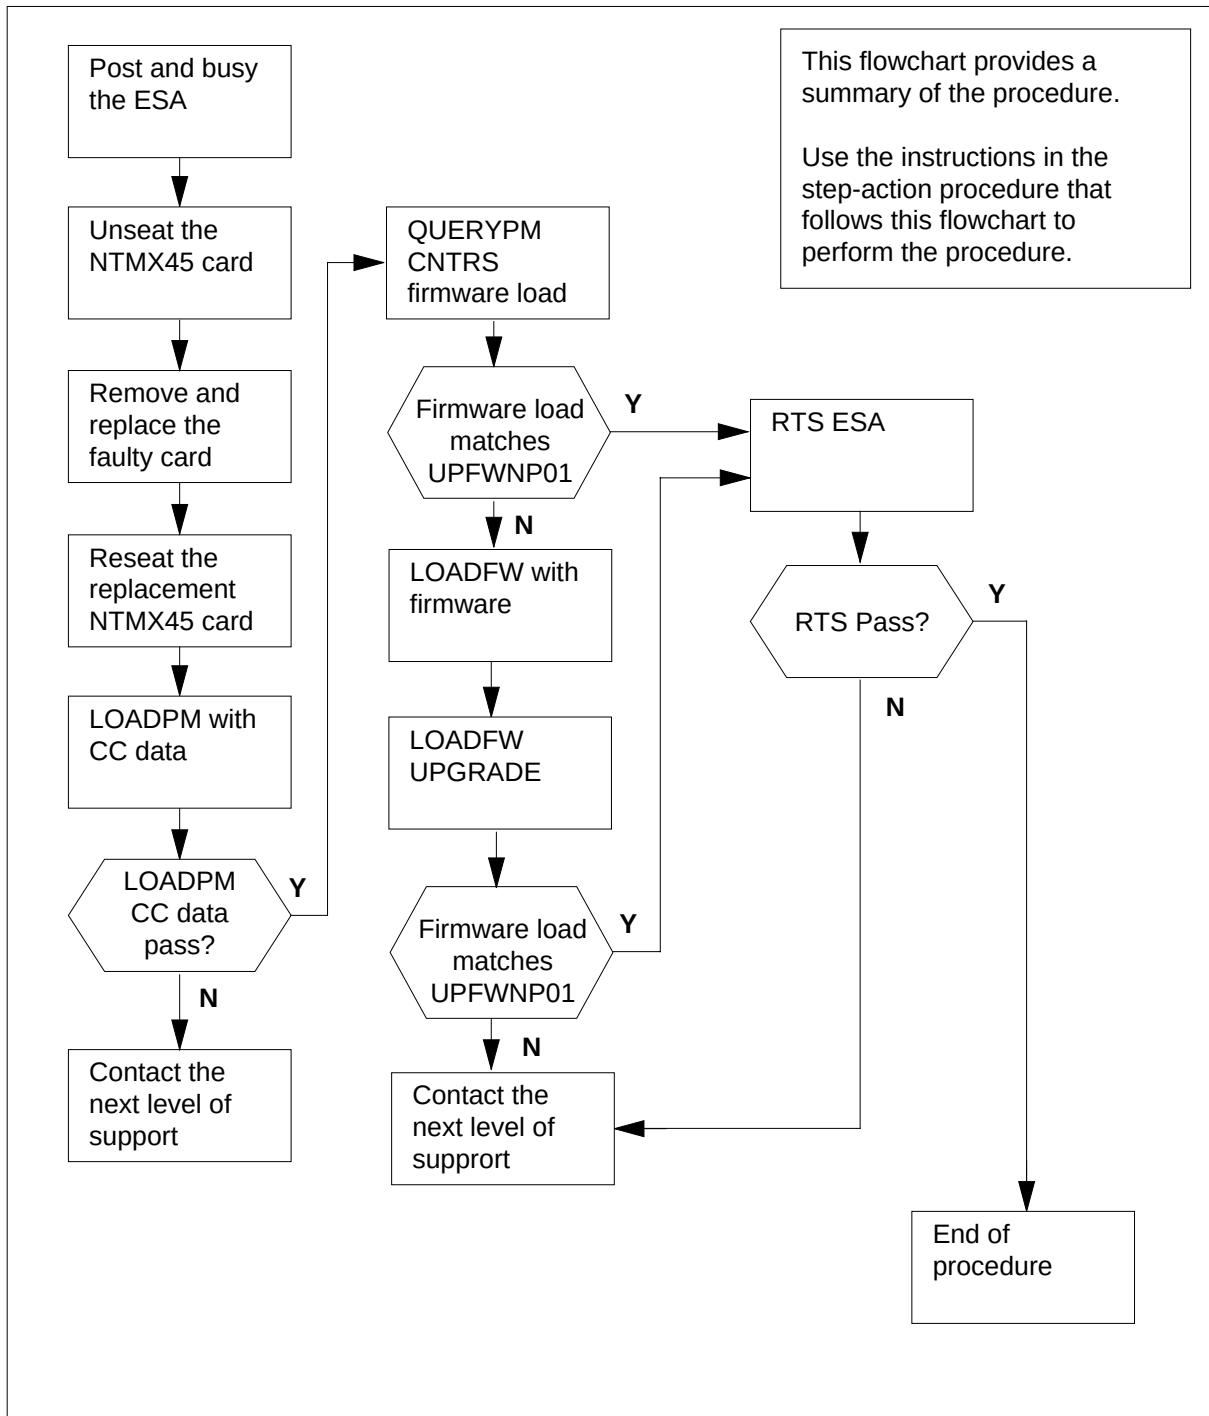

NTMX45
in an OPM HIE (continued)

Replacing an NTMX45 HIE

At your Current Location

- 1
- Continue if you were referred to this card replacement procedure
- from a step in a maintenance procedure
 - to verify or accept cards
 - by your maintenance support group
- 2
- Get a replacement card. Make sure the replacement card has the same product equipment code (PEC) including suffix, as the original card.

At the MAP terminal

- 3
- Access the PM level of the MAP and post the ESA by typing
- >MAPCI;MTC;PM;POST ESA esa_no
- and pressing the Enter key.

where

esa_no
is the number of the ESA unit to be busied (0 to 255)

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1RLCM	.	.	.	.	.
ESA			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	2	0	2	25		
2 Post_	ESA	0	0	0	0	1	1		
3 ListSet									
4					Links_00S: CSide	0			
5 Trnsl		RLCM	ESA	4 Sysb					
6 Tst									
7 Bsy_									
8 RTS_									
9 OffL									
10 LoadPM									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

NTMX45
in an OPM HIE (continued)

At the MAP terminal

- 4 Busy the inactive ESA processor by typing

>BSY

and pressing the Enter key.

Example of a MAP response:

ESA 4 This action will take this PM
 out of service
Please confirm ("YES", "Y", "NO", or "N"):

Respond by typing

>YES

At the RLCM frame

- 5

**WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the LCM. This protects the equipment against damage caused by static electricity.

**DANGER****Equipment damage**

Take the following precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


- 6 Remove the NTMX45 card as shown in the following figures.

- a Locate the damaged card on the appropriate shelf.

NTMX45 in an OPM HIE (continued)

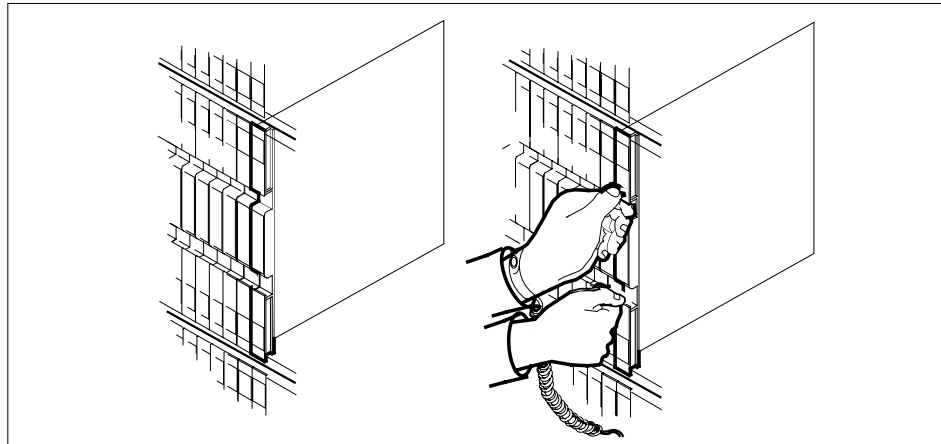


- b** Open the locking levers on the damaged card and carefully pull the card towards you until it clears the shelf.

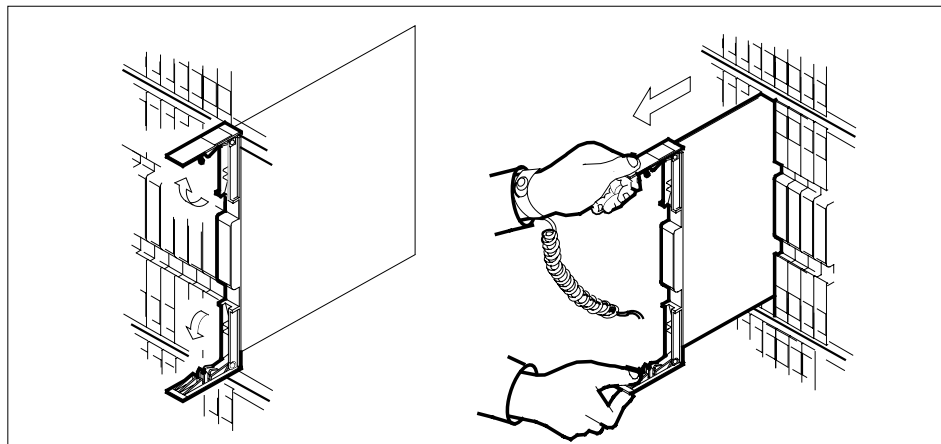


- c** Make sure that the replacement card has the same PEC and suffix as the card you just removed. Also make sure that all DIP switches on the replacement card match settings of the card just removed.
- 7** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf and carefully slide the card into the shelf.

NTMX45
in an OPM HIE (continued)

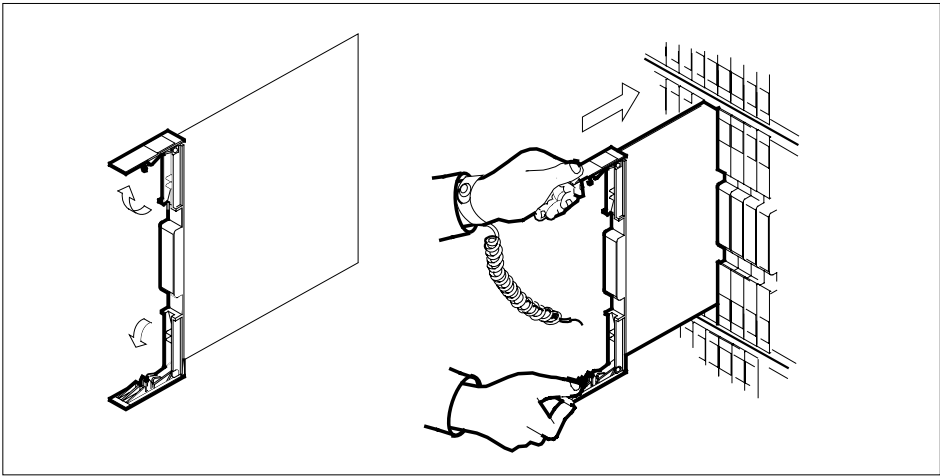

Seat and lock the card.

- b** Use your fingers or thumbs to push on the upper and lower edges of the faceplate.
- c** Close the locking levers.

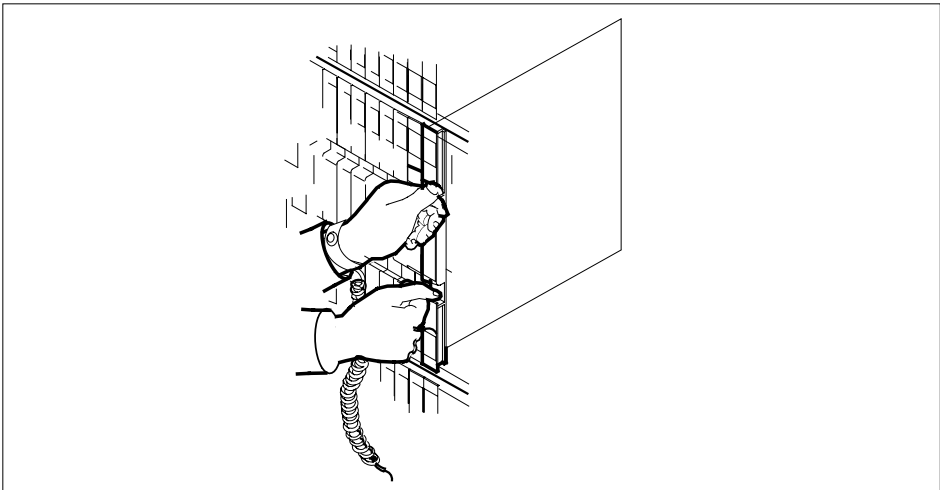

8 Use the following table to determine the next step in this procedure.

If you entered this procedure from	Do
an alarm clearing procedure	step 34
other	step 9

NTMX45 in an OPM HIE (continued)

- 9 Load the ESA processor by typing
>LOADPM
and pressing the Enter key.

If the load	Do
message "loadfile not found in directory" is received	step 10
load passes	step 28
load fails	step 35

- 10 Determine the type of device on which the PM load files are located.

If load files are located on	Do
tape	step 11
IOC disk	step 17
SLM disk	step 22

- 11 Locate the tape that contains the PM load files.

- 12 Mount the tape on a magnetic tape drive.

At the MAP terminal

- 13 Download the tape by typing
>MOUNT tape_no
and pressing the Enter key.

where

tape_no

is the number of the tape drive containing the PM load files

- 14 List the contents of the tape in your user directory by typing

>LIST T tape_no

and pressing the Enter key.

where

tape_no

is the number of the tape drive containing the PM load files

- 15 Demount the tape by typing

>DEMOUNT T tape_no

and pressing the Enter key.

where

NTMX45
in an OPM HIE (continued)

tape_no

is the number of the tape drive containing the PM load files

- 16** Go to step 27.
- 17** From office records, determine and note the number of the input/output controller (IOC) disk and the name of the volume that contains the PM load files.
- 18** Access the disk utility level of the MAP display by typing
>DSKUT
and pressing the Enter key.
- 19** List the IOC file names into your user directory by typing
>LISTVOL volume_name ALL
and pressing the Enter key.
where
volume_name
is the name of the volume that contains the PM load files, obtained in step 17
- 20** Leave the disk utility by typing
>QUIT
and pressing the Enter key.
- 21** Go to step 27.
- 22** From office records, determine and note the number of the system load module (SLM) disk and the name of the volume that contains the PM load files.
- 23** Access the disk utility level of the MAP display by typing
>DISKUT
and pressing the Enter key.
- 24** List all SLM disk volumes into your user directory by typing
>LV CM
and pressing the Enter key.
- 25** List the SLM file names into your user directory by typing
>LF volume_name
and pressing the Enter key.
where
volume_name
is the name of the volume that contains the PM load files, obtained in step 22
- 26** Leave the disk utility by typing
>QUIT
and pressing the Enter key.

NTMX45 in an OPM HIE (continued)

- 27 Reload the ESA processor by typing
>LOADPM
and pressing the Enter key.

If loadpm	Do
passes	step 28
fails	step 35

- 28 Query the PM counters for the firmware load on the NTMX45 by typing
>QUERYPM CNTRS
and pressing the Enter key.
Example of a MAP display:

```
Unsolicited MSG limit = 250, count = 0
Ram Load: MSA12AM1
EProm Version: Ac01
EEProm Load: Loadable[NP02], Executable:[NP02]
EP:MX45AA
```

NTMX45 Firmware loadname

If firmware is	Do
valid	step 31
invalid	step 29

- 29 Load the NTMX45 firmware by typing
>LOADFW
and pressing the Enter key.

Note: The command applies the firmware file provisioned in table XESAINV unless the firmware load is indicated with the command.

If load	Do
passes	step 30
fails	step 35

- 30 Upgrade the firmware in the NTMX45AA by typing
>LOADFW UPGRADE

NTMX45 in an OPM HIE (end)

and pressing the Enter key.

If the LOADFW UPGRADE	Do
passes	step 31
fails	step 35

- 31** Return the ESA to service by typing
>RTS
and pressing the Enter key.

If the RTS	Do
passes	step 32
fails	step 35

- 32** Send any damaged cards for repair according to local procedure.

- 33** Record the following items in office records:

- date the card was replaced
- serial number of the card
- problems that required replacement of the card

Go to step 36.

- 34** Return to the *Alarm Clearing Procedure* that referred you to this procedure. If necessary, go to the point where the damaged card list was produced, identify the next damaged card on the list, and go to the appropriate procedure for that card in this manual.

- 35** Contact the next level of support for additional help to replace this card.

- 36** You have completed this procedure. Return to the maintenance procedure that referred you to this card replacement procedure and continue.

NTMX45 in an RLCM HIE

Application

Use this procedure to replace an NTMX45 in host interface equipment (HIE) shelf.

PEC	Suffixes	Name
NTMX45	AA	Emergency Stand-Alone (ESA) processor (EP)

If you cannot identify the PEC, suffix, and shelf or frame for the card you want to replace, refer to the “Index” in this document. The index lists the cards, shelves, and frames in this card replacement NTP.

Common procedures

This procedure does not refer to any common procedures.

Next level of maintenance


A problem can occur that requires the help of the local maintenance personnel. Gather all important logs, reports, and system information (that is, product type and current software load) for analysis. The related logs, maintenance notes, and system information help make sure that the next level of maintenance and support can find the problem. More detail about logs appears in the *Log Report Reference Manual*.

Action

The flowchart that follows provides a summary of this procedure. Use the instructions in the step-action procedure that follows the flowchart to replace the card.

NTMX45 in an RLCM HIE (continued)

Summary of replacing an NTMX45 HIE

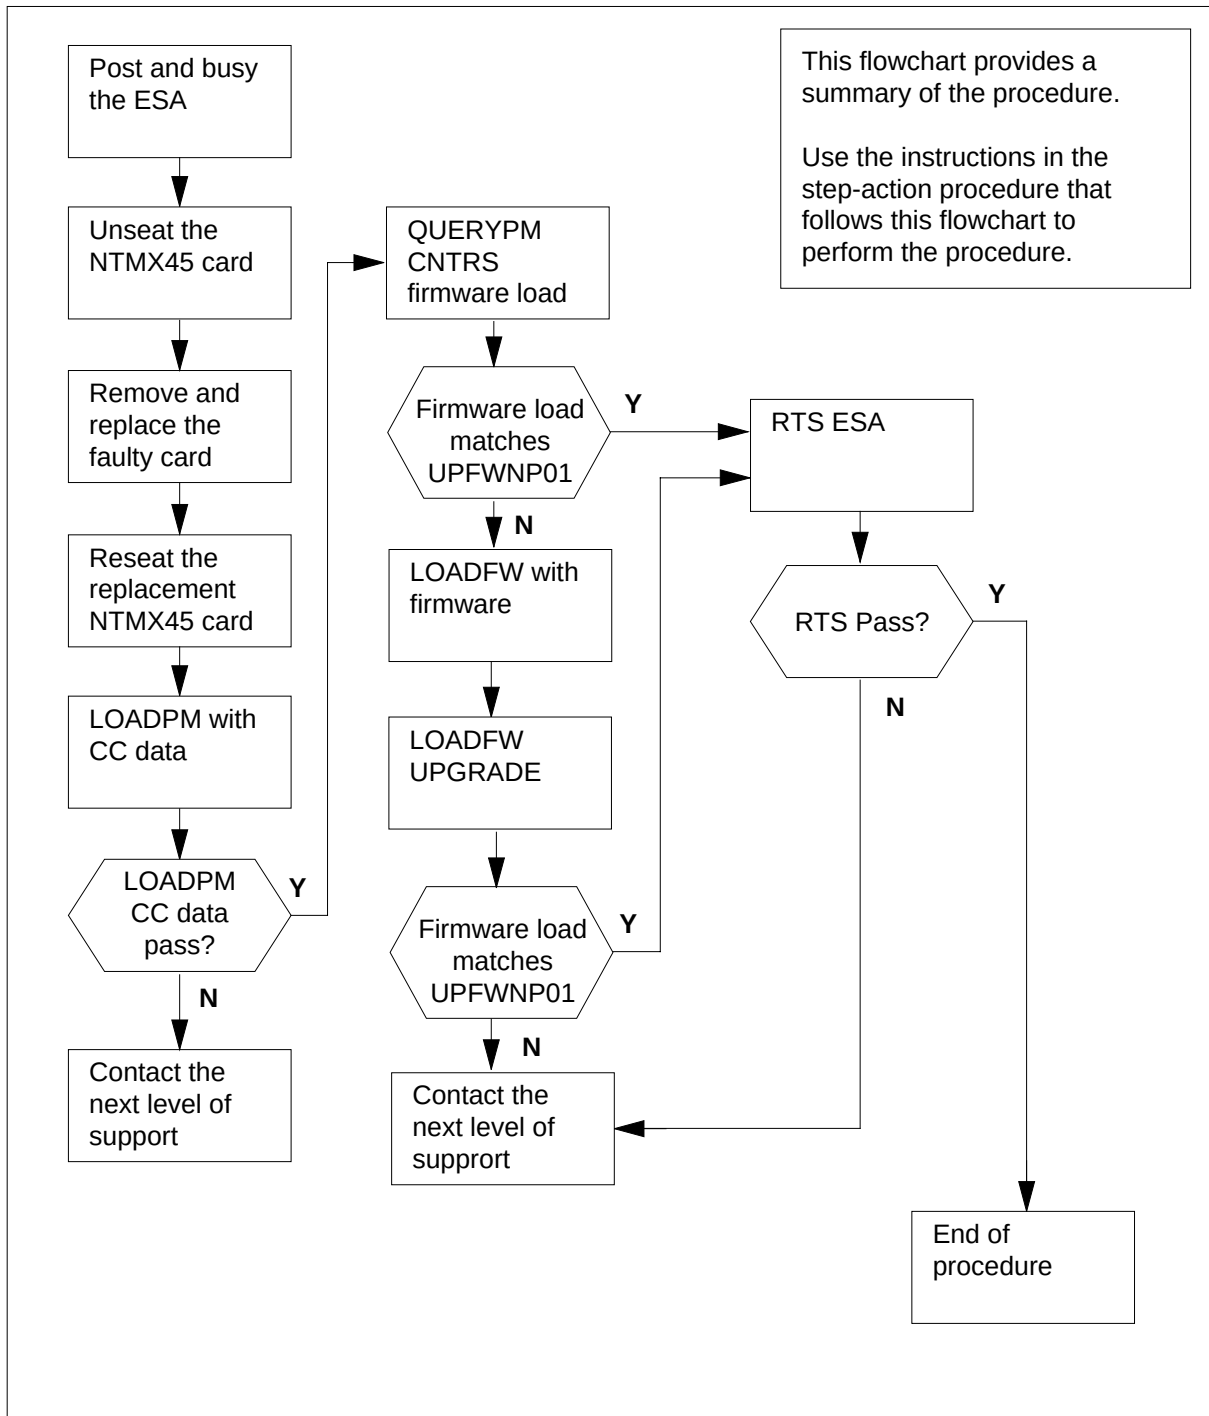

NTMX45
in an RLCM HIE (continued)

Replacing an NTMX45 HIE

At your Current Location

- 1
- Continue if you were referred to this card replacement procedure
- from a step in a maintenance procedure
 - to verify or accept cards
 - by your maintenance support group
- 2
- Get a replacement card. Make sure the replacement card has the same product equipment code (PEC) including suffix, as the original card.

At the MAP terminal

- 3
- Access the PM level of the MAP and post the ESA by typing
- >MAPCI;MTC;PM;POST ESA esa_no
- and pressing the Enter key.

where

esa_no
is the number of the ESA unit to be busied (0 to 255)

Example of a MAP display:

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	APPL
.	.	.	.	1RLCM	.	.	.	.	.
ESA			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	2	0	2	25		
2 Post_	ESA	0	0	0	0	1	1		
3 ListSet									
4					Links_00S: CSide	0			
5 Trnsl		RLCM	ESA	4 Sysb					
6 Tst									
7 Bsy_									
8 RTS_									
9 OffL									
10 LoadPM									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

NTMX45 in an RLCM HIE (continued)

At the MAP terminal

- 4 Busy the inactive ESA processor by typing

>BSY

and pressing the Enter key.

Example of a MAP response:

ESA 4 This action will take this PM
 out of service
Please confirm ("YES", "Y", "NO", or "N"):

Respond by typing

>YES

At the RLCM frame

- 5



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the LCM. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.


- 6 Remove the NTMX45 card as shown in the following figures.

- a** Locate the damaged card on the appropriate shelf.

NTMX45 in an RLCM HIE (continued)

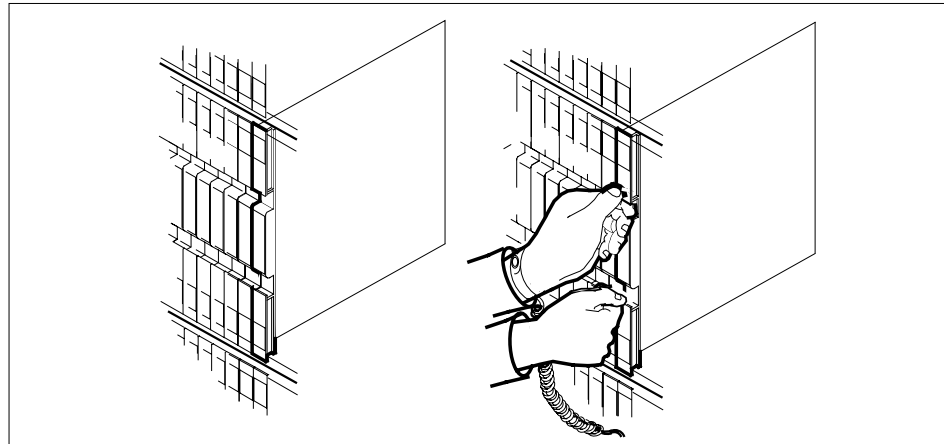


- b** Open the locking levers on the damaged card and carefully pull the card towards you until it clears the shelf.

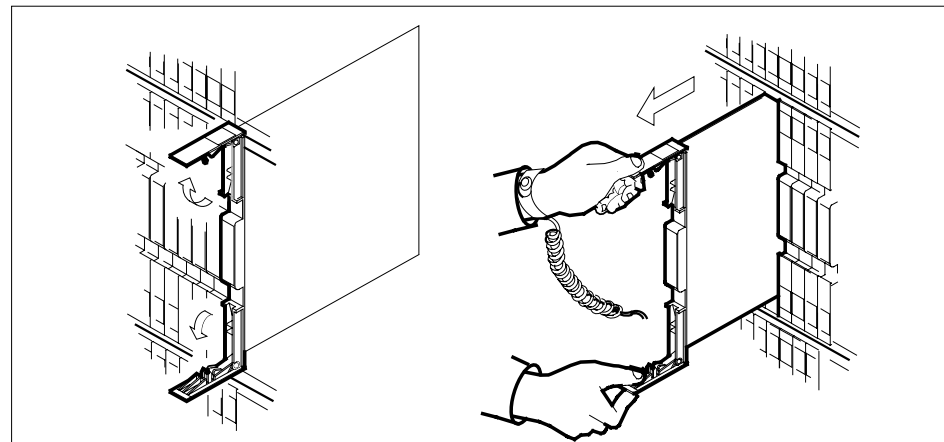


- c** Make sure that the replacement card has the same PEC and suffix as the card you just removed. Also make sure that all DIP switches on the replacement card match settings of the card just removed.
- 7** Open the locking levers on the replacement card.
- a** Align the card with the slots in the shelf and carefully slide the card into the shelf.

NTMX45
in an RLCM HIE (continued)

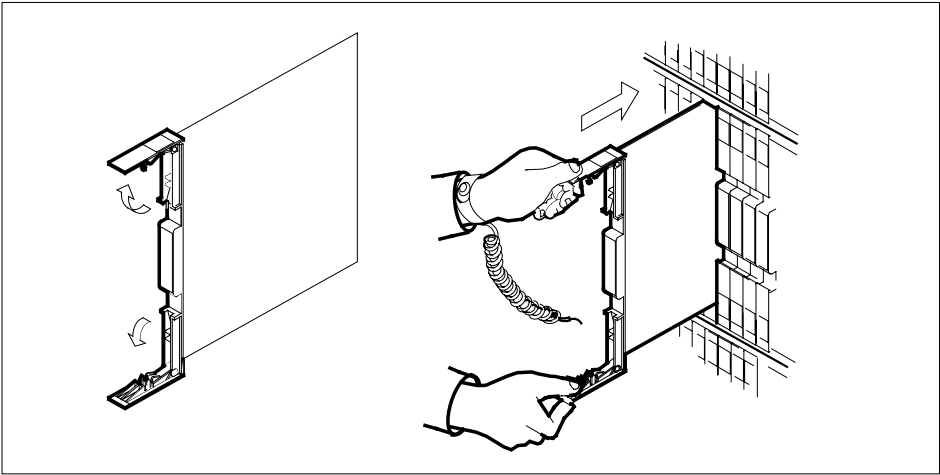

Seat and lock the card.

- b** Use your fingers or thumbs to push on the upper and lower edges of the faceplate.
- c** Close the locking levers.

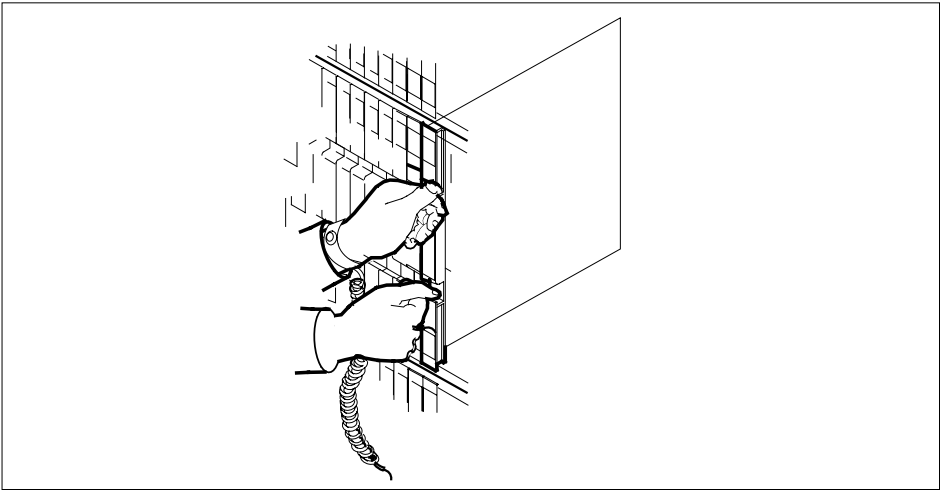

8 Use the following table to determine the next step in this procedure.

If you entered this procedure from	Do
an alarm clearing procedure	step 34
other	step 9

NTMX45 in an RLCM HIE (continued)

- 9 Load the ESA processor by typing
>LOADPM
and pressing the Enter key.

If the load	Do
message "loadfile not found in directory" is received	step 10
load passes	step 28
load fails	step 35

- 10 Determine the type of device on which the PM load files are located.

If load files are located on	Do
tape	step 11
IOC disk	step 17
SLM disk	step 22

- 11 Locate the tape that contains the PM load files.

- 12 Mount the tape on a magnetic tape drive.

At the MAP terminal

- 13 Download the tape by typing
>MOUNT tape_no
and pressing the Enter key.

where

tape_no

is the number of the tape drive containing the PM load files

- 14 List the contents of the tape in your user directory by typing

>LIST T tape_no

and pressing the Enter key.

where

tape_no

is the number of the tape drive containing the PM load files

- 15 Demount the tape by typing

>DEMOUNT T tape_no

and pressing the Enter key.

where

NTMX45
in an RLCM HIE (continued)

- tape_no**
is the number of the tape drive containing the PM load files
- 16** Go to step 27.
- 17** From office records, determine and note the number of the input/output controller (IOC) disk and the name of the volume that contains the PM load files.
- 18** Access the disk utility level of the MAP display by typing
>DSKUT
and pressing the Enter key.
- 19** List the IOC file names into your user directory by typing
>LISTVOL volume_name ALL
and pressing the Enter key.
where
volume_name
is the name of the volume that contains the PM load files, obtained in step 17
- 20** Leave the disk utility by typing
>QUIT
and pressing the Enter key.
- 21** Go to step 27.
- 22** From office records, determine and note the number of the system load module (SLM) disk and the name of the volume that contains the PM load files.
- 23** Access the disk utility level of the MAP display by typing
>DISKUT
and pressing the Enter key.
- 24** List all SLM disk volumes into your user directory by typing
>LV CM
and pressing the Enter key.
- 25** List the SLM file names into your user directory by typing
>LF volume_name
and pressing the Enter key.
where
volume_name
is the name of the volume that contains the PM load files, obtained in step 22
- 26** Leave the disk utility by typing
>QUIT
and pressing the Enter key.

NTMX45 in an RLCM HIE (continued)

- 27 Reload the ESA processor by typing
>LOADPM
and pressing the Enter key.

If loadpm	Do
passes	step 28
fails	step 35

- 28 Query the PM counters for the firmware load on the NTMX45 by typing
>QUERYPM CNTRS
and pressing the Enter key.
Example of a MAP display:

```
Unsolicited MSG limit = 250, count = 0
Ram Load: MSA12AM1
EProm Version: Ac01
EEPROM Load: Loadable[NP02], Executable:[NP02]
EP:MX45AA
```

NTMX45 Firmware loadname

If firmware is	Do
valid	step 31
invalid	step 29

- 29 Load the NTMX45 firmware by typing
>LOADFW
and pressing the Enter key.

Note: The command applies the firmware file provisioned in table XESAINV unless the firmware load is indicated with the command.

If load	Do
passes	step 30
fails	step 35

- 30 Upgrade the firmware in the NTMX45AA by typing
>LOADFW UPGRADE

NTMX45 in an RLCM HIE (end)

and pressing the Enter key.

If the LOADFW UPGRADE	Do

passes

step 31

fails

step 35

-
- 31** Return the ESA to service by typing
>RTS
and pressing the Enter key.

If the RTS	Do

passes

step 32

fails

step 35

-
- 32** Send any damaged cards for repair according to local procedure.

- 33** Record the following items in office records:

- date the card was replaced
- serial number of the card
- problems that required replacement of the card

Go to step 36.

- 34** Return to the *Alarm Clearing Procedure* that referred you to this procedure. If necessary, go to the point where the damaged card list was produced, identify the next damaged card on the list, and go to the appropriate procedure for that card in this manual.

- 35** Contact the next level of support for additional help to replace this card.

- 36** You have completed this procedure. Return to the maintenance procedure that referred you to this card replacement procedure and continue.

NTMX71 in an RSC

Application

Use this procedure to replace a NTMX71 card in a RCC.

PEC	Suffixes	Name
NTMX71	AA	XPM Plus Terminator Paddleboard

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTMX71 in an RSC (continued)

Summary of card replacement procedure for a NTMX71 card in a in RSC RCC

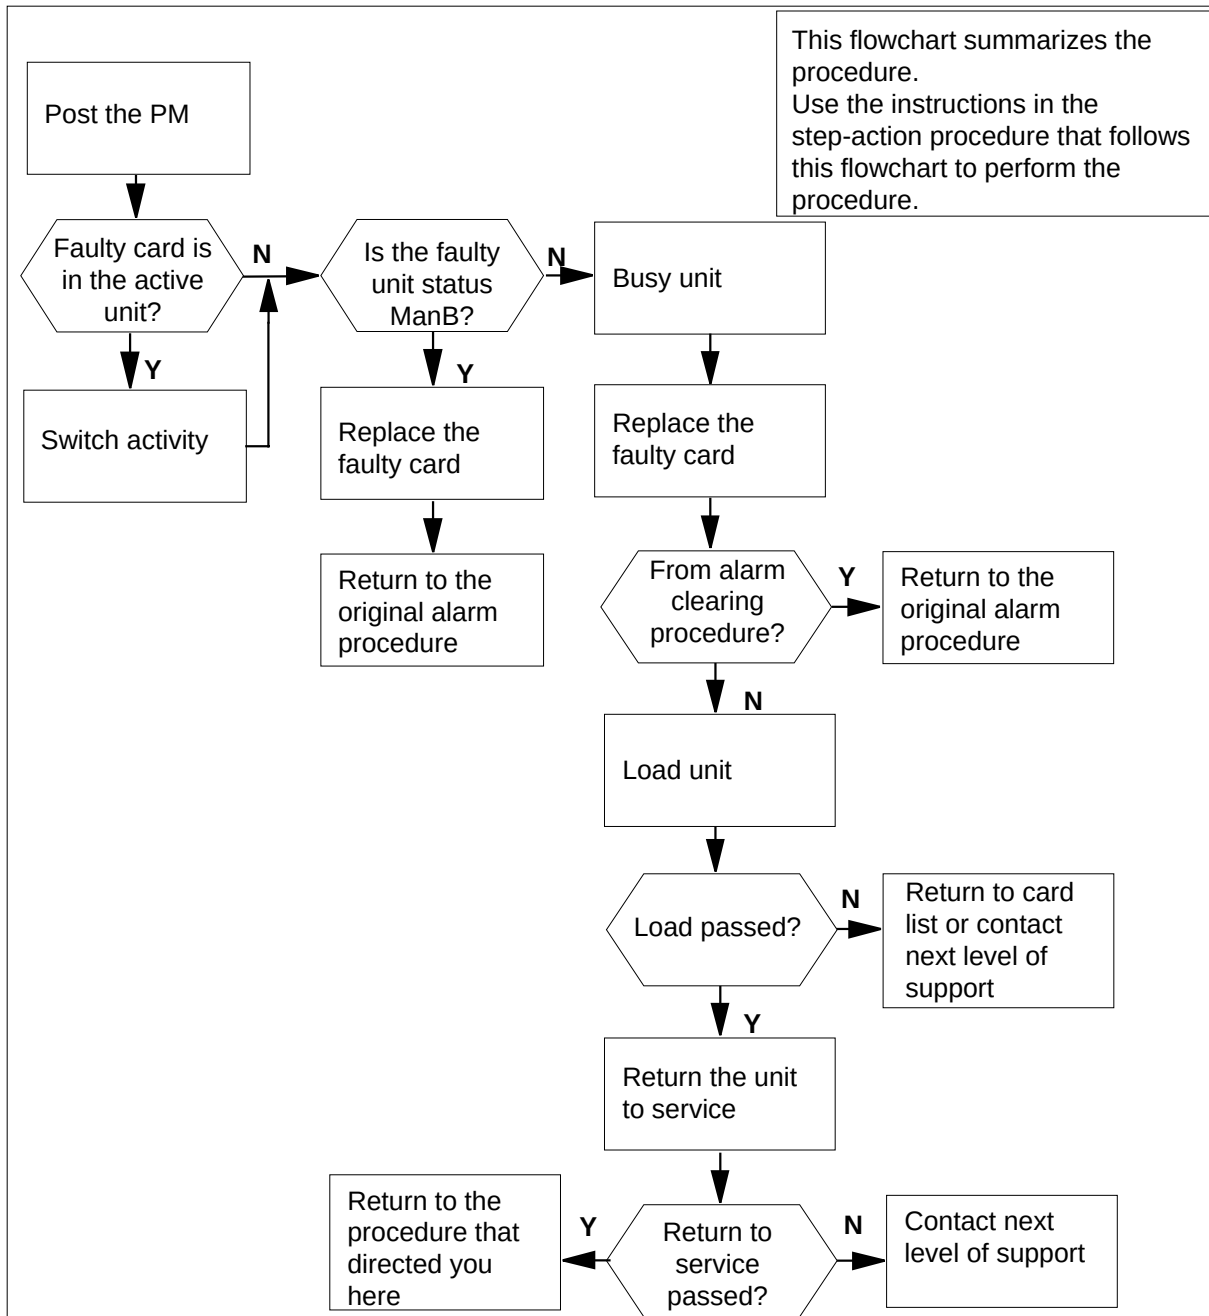

NTMX71 in an RSC (continued)

Replacing a NTMX71 card in a RCC

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 3 Ensure the current MAP display is at the PM level and post the RCC by typing
>MAPCI;MTC;PM;POST RCC rcc_no
 and pressing the Enter key.

where

rcc_no

is the number of the RCC being posted

Example of a MAP response

RCC	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
RCC	0	0	0	0	1	7

```
RCC 0 ISTb Links_00S: CSide 0, PSide 0
Unit0: Act InSv
Unit1: Inact ISTb
```

- 4 Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

At the equipment frame

- 5 Hang a sign on the active unit bearing the words: *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 6 Observe the MAP display and determine the state of the inactive unit. The example in step 3 shows the status of the PM as in-service on the active unit and in-service trouble on the inactive unit.

If state is	Do
ManB	step 8

NTMX71 in an RSC (continued)

	If state is	Do
	SysB, CBSy, ISTb, or InSv	step 7
7	Busy the inactive PM unit by typing >BSY UNIT unit_no and pressing the Enter key. <i>where</i> unit_no is the number of the inactive RCC unit (0 or 1)	

At the equipment frame

8



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the RCC. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.

- 9 Unseat the NT6X48 card in slots 06 and 07.
- 10 Unseat the NT6X72 card in slot 19.
- 11 Unseat the NTMX77 card in slot 13.

NTMX71 in an RSC (continued)

12



DANGER

Personal injury

Take the following precautions when removing a backplane card:

To prevent eye and facial injuries do not jerk the card from backplane pins. Gently rock the card off the backplane pins

Using a slot screwdriver, loosen the screws from the two brackets that secure the card to the backplane at slot 18. Keep the screws in place on the backplane, moving only the two securing brackets away from the screws.

- 13 Gently remove the card from the backplane pins.
- 14 Place the card you have removed in an electrostatic discharge (ESD) protective container.
- 15 Line up the holes on the brackets of the replacement card with the holes on the backplane of slot 18.
- 16 Using a slot screwdriver, secure the card to the backplane with the screws that were loosened in step 12. Ensure the fiber washer is between the securing brackets of the replacement card and the backplane before tightening the screws.
- 17 Reseat the NTMX77 card in slot 13.
- 18 Reseat the NT6X72 card in slot 19.
- 19 Reseat the NT6X48 cards in slots 06 and 07.
- 20 Use the following information to determine the next step.

If you were directed here from	Do
alarm and trouble clearing procedures	step 26
other	step 21

At the MAP terminal

- 21 The peripheral loader card (NT7X05) allows local loading of the RCC data. Local data loading reduces recovery time. Determine if an NT7X05 is located in slot 12. Check if the NT7X05 card is provisioned by typing:

>QUERYPM FILES

and pressing the Enter key.

Example of a MAP display:

NTMX71 in an RSC (continued)

```

CM      MS      IOD      Net      PM      CCS      LNS      Trks      Ext      APPL
.        .        .        .        1RCC
          *C*
RCC              SysB      ManB      OffL      CBSy      ISTb      InSv
0 Quit          PM        2          0          2          0          2          25
2 Post          RCC        1          0          0          0          1          1
3 ListSet
4              RCC          0 ISTb Links_00S: CSide 0, PSide 0
5 TRNSL_        Unit 0: Inact ManB
6 TST_          Unit 1: Act  InSv
7 BSY_
8 RTS_          QUERYPM files
9 OffL          Unit 0:
10 LoadPM_      NT7X05 load File: ESR05AT
11 Disp_        NT7X05 Image File:ESR05AT
12 Next_
13 SwAct        Unit 1:
14 QueryPM      NT7X05 load File: ESR05AT
15              NT7X05 Image File:ESR05AT
16 IRLINK
17 Perform
18

```

Note: If the NT7X05 card is not provisioned the MAP response is:Nt7X05 not datafilled, QueryPm files invalid

If the NT7X05 card is	Do
provisioned	step 22
not provisioned	step 24

- 22** Load the RCC from the local image by typing
>LOADPM UNIT unit_no LOCAL IMAGE
 and pressing the Enter key.
where

rcc_unit_no
 is the number of the inactive RCC unit

If the load	Do
passed	step 25
failed	step 23

- 23** Load the RCC from the local loadfile by typing
>LOADPM UNIT unit_no LOCAL LOADFILE
 and pressing the Enter key.

NTMX71 in an RSC (continued)

where

rcc_unit_no
is the number of the inactive RCC unit

If the load	Do
passed	step 25
failed	step 24

- 24** Load the inactive RCC unit by typing

>LOADPM UNIT unit_no

and pressing the Enter key.

where

unit_no
is the number of the inactive RCC unit

If load	Do
passed	step 25
failed	step 29

- 25** Return the inactive RCC unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

unit_no
is the number of the inactive RCC unit

If RTS	Do
passed	step 26
failed	step 29

At the equipment frame

- 26** Remove the sign from the active RCC unit.
- 27** Send any faulty cards for repair according to local procedure.
- 28** Note the following in the office records:
- date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
- Go to step 30.

NTMX71
in an RSC (end)

- 29** For further assistance, contact the personnel responsible for the next level of support.
- 30** You have completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTMX71 in an SMA

Application

Use this procedure to replace an NTMX71 card in an SMA.

PEC	Suffixes	Name
NTMX71	AA	XPM Plus Terminator Paddleboard

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA”
- returning a card


Do not go to the common procedures unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTMX71 in an SMA (continued)

Summary of card replacement procedure for an NTMX71 card in an SMA

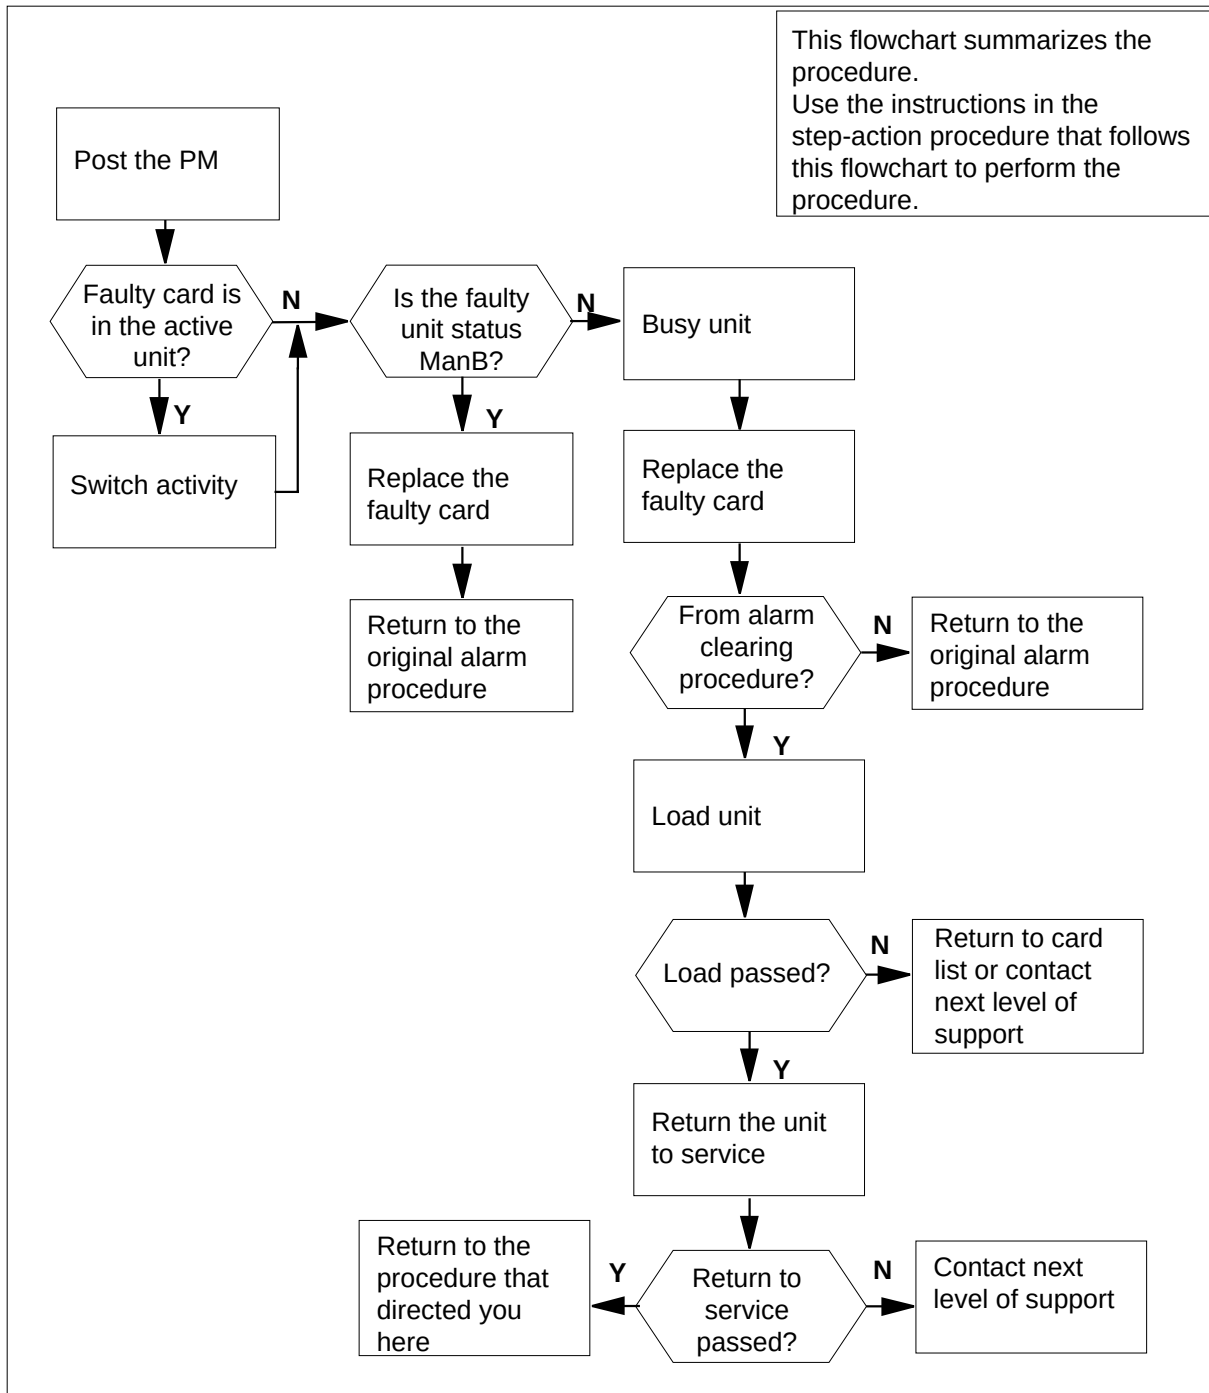

NTMX71 in an SMA (continued)

Replacing an NTMX71 card in an SMA

At your current location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA."
- 4



CAUTION

Loss of service

Ensure that you replace the card in the inactive unit and verify the mate unit is active.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA by typing
>MAPCI;MTC;PM;POST SMA sma_no
and pressing the Enter key.

where

sma_no

is the number of the SMA being posted

Example of a MAP response

NTMX71 in an SMA (continued)

SMA	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA	0	0	0	0	1	7

SMA 0 ISTb Links_00S: CSide 0, PSide 0
Unit0: Act InSv
Unit1: Inact ISTb

- 6 Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If the faulty card is in the	Do
active unit	step 7
inactive unit	step 10

- 7 Switch the activity of the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
can continue at this time	step 8
cannot continue at this time	step 29

- 8 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 10
SWACT failed Reason: XPM SWACTback	step 9
SWACT refused by SWACT Controller	step 9

NTMX71 in an SMA (continued)

- 9 The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit.

Go to step 27.

At the equipment frame

- 10 Hang a sign on the active unit bearing the words: *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 11 Observe the MAP display and determine the state of the inactive unit.

If state is	Do
ManB	step 13
SysB, CBsy, ISTb, or InSv	step 12

- 12 Busy the inactive PM unit by typing

>BSY UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive SMA unit (0 or 1)

NTMX71 in an SMA (continued)

At the equipment frame

13

**WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap connected to the wrist strap grounding point on the frame supervisory panel (FSP). This strap protects the cards against damage caused by static electricity.

**DANGER****Equipment damage**

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Unseat the NT6X41 card in slot 21.

14 Unseat the NTAX74 card in slot 12.

15

**DANGER****Risk of eye or facial injury**

When removing the NTMX71 card, do not jerk the paddleboard from the backplane pins. Instead, gently rock the paddleboard off the backplane pins.

Using a slot screwdriver, remove the screws from the two brackets that secure the card to the backplane at slot 19.

16 Gently remove the card from the backplane pins.

Note: A paddleboard extraction tool is available to ease removal of the NTMX71 card from the backplane pins. The tool can be purchased from Northern Telecom by using the following ordering information:

NPS Spec.
NPS50897-61

AO code
AO643786

17 Place the card you have removed in an electrostatic discharge (ESD) protective container.

NTMX71
in an SMA (continued)

- 18** Line up the holes on the brackets of the replacement card with the holes with the holes on the back plane at slot 19.
- 19** Using a slot screwdriver, secure the card to the backplane with the screws that were removed in step 15. Ensure the fiber washer is between the brackets of the replacement card and the backplane before tightening the screws.
- 20** Reseat the NTAX74 card in slot 12.
- 21** Reseat the NT6X41 card in slot 21.
- 22** Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 25
other	step 23

At the MAP terminal

- 23** Load the inactive SMA unit by typing
>LOADPM UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the busied SMA

If load	Do
passed	step 24
failed	step 27

- 24** Return the inactive SMA unit to service by typing
>RTS UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the SMA unit loaded in step 23

If RTS	Do
passed	step 25
failed	step 27

At the equipment frame

- 25** Remove the sign from the active SMA unit.

NTMX71
in an SMA (end)

- 26** Go to the common returning a card procedure in this document.
Go to step 28.
- 27** For further assistance, contact the personnel responsible for the next level of support.
- 28** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.
- 29** For further assistance with switch of activity, contact the personnel responsible for the next level of support.

Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

NTMX71 in an SMA-MVI-20

Application

Use this procedure to replace an NTMX71 card in an SMA.

PEC	Suffixes	Name
NTMX71	AA	XPM Plus Terminator Paddleboard

Common procedures

"Locating a faulty card in an SMA" is referenced in this procedure.


Do not go to the common procedure unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTMX71 in an SMA-MVI-20 (continued)

Summary of card replacement procedure for an NTMX71 card in an SMA

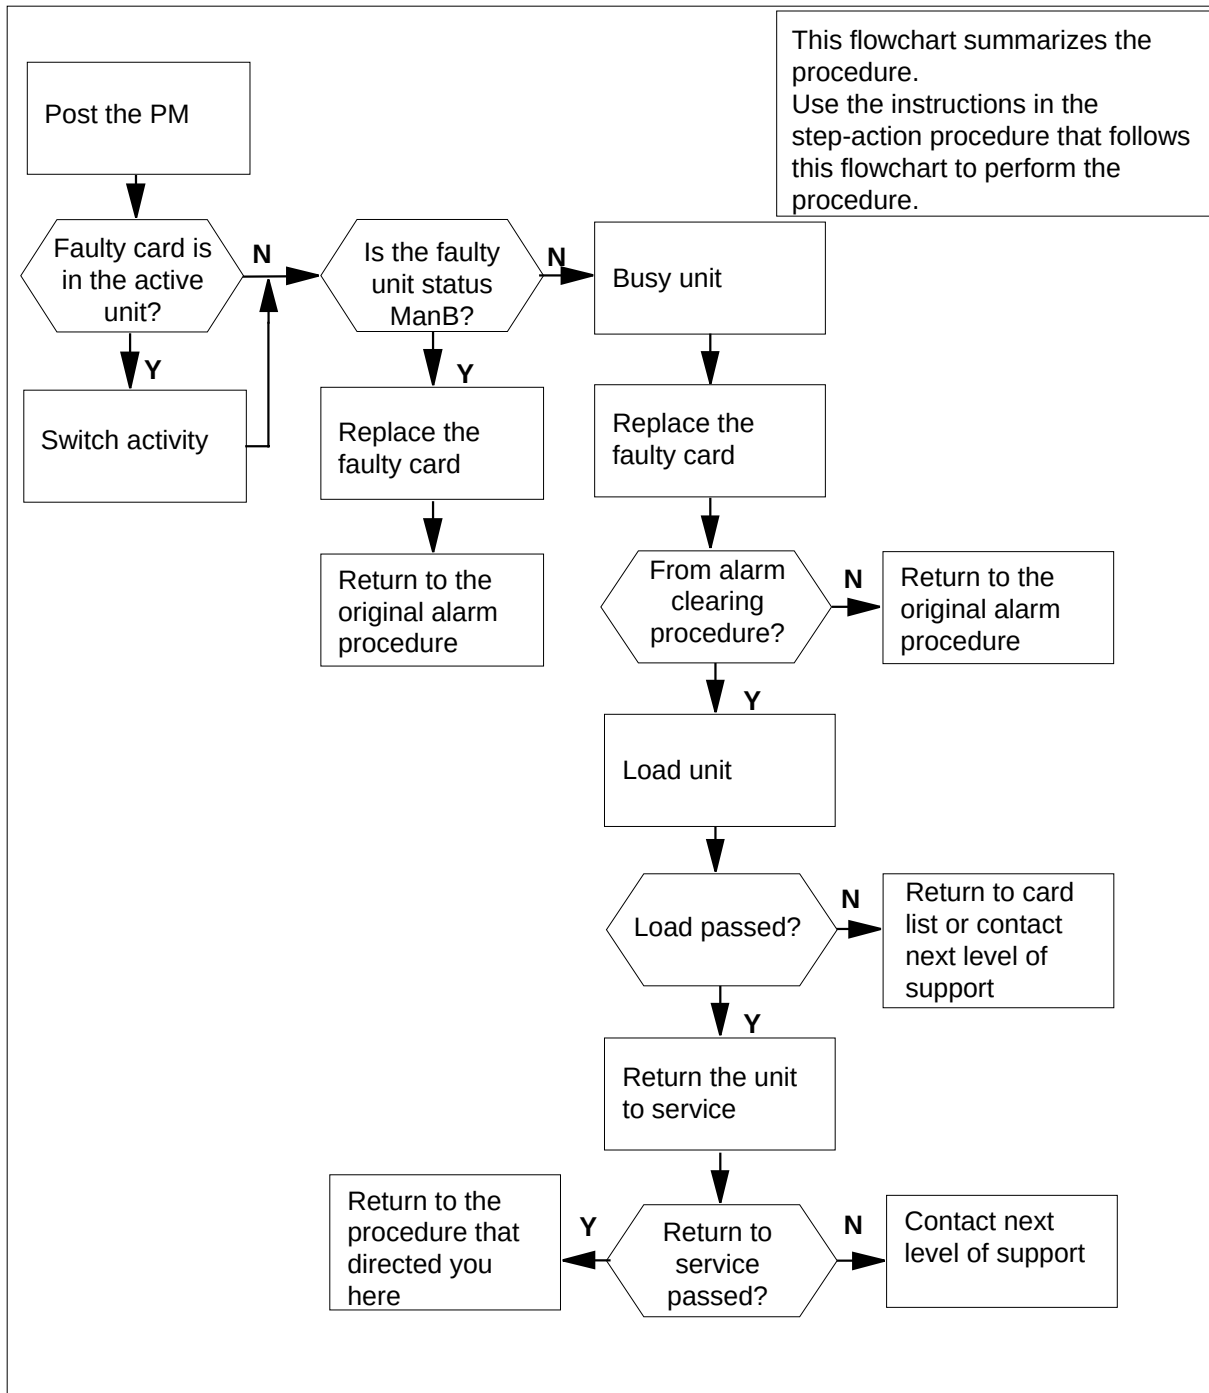

NTMX71 in an SMA-MVI-20 (continued)

Replacing an NTMX71 card in an SMA

At the SMA

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA."
- 4



CAUTION

Loss of service

Ensure that you replace the card in the inactive unit and verify the mate unit is active.

Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA by typing
>MAPCI;MTC;PM;POST SMA sma_no
and pressing the Enter key.

where

sma_no

is the number of the SMA being posted

Example of a MAP response

NTMX71 in an SMA-MVI-20 (continued)

SMA	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA	0	0	0	0	1	7

SMA 0 ISTb Links_00S: CSide 0, PSide 0
 Unit0: Act InSv
 Unit1: Inact ISTb

- 6 Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If the faulty card is in the	Do
active unit	step 7
inactive unit	step 11

- 7 Switch the activity of the units by typing

>SWACT

and pressing the Enter key.

A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If SWACT	Do
cannot continue at this time	step 8
can continue at this time	step 9

- 8 Reject the prompt to switch the activity of the units by typing

>NO

and pressing the Enter key.

The system discontinues the SWACT.

- 9 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 11

NTMX71**in an SMA-MVI-20** (continued)

	If the message is	Do
	SWACT failed Rea- son: XPM SWACTback	step 10
	SWACT refused by SWACT Controller	step 10
10	The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit. Go to step 29.	
At the equipment frame		
11	Hang a sign on the active unit bearing the words: <i>Active unit—Do not touch.</i> This sign should not be attached by magnets or tape.	
At the MAP terminal		
12	Observe the MAP display and determine the state of the inactive unit.	
	If state is	Do
	ManB	step 14
	SysB, CBsy, ISTb, or InSv	step 13
13	Busy the inactive PM unit by typing >BSY UNIT unit_no and pressing the Enter key. <i>where</i> unit_no is the number of the inactive SMA unit (0 or 1)	

NTMX71 in an SMA-MVI-20 (continued)

At the equipment frame

14

**WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap connected to the wrist strap grounding point on the frame supervisory panel (FSP). This strap protects the cards against damage caused by static electricity.

**DANGER****Equipment damage**

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Unseat the NT6X41 card in slot 21.

15 Unseat the NTAX74 card in slot 12.

16

**DANGER****Personal injury**

Take the following precautions when removing a backplane card:

To prevent eye and facial injuries do not jerk the card from backplane pins. Gently rock the card off the backplane pins

Using a slot screwdriver, remove the screws from the two brackets that secure the card to the backplane at slot 19.

17 Gently remove the card from the backplane pins.

Note: A paddleboard extraction tool is available to ease removal of the NTMX71 card from the backplane pins. The tool can be purchased from Northern Telecom by using the following ordering information:

NPS Spec.
NPS50897-61

AO code
AO643786

NTMX71

in an SMA-MVI-20 (continued)

- 18** Place the card you have removed in an electrostatic discharge (ESD) protective container.
- 19** Line up the holes on the brackets of the replacement card with the holes with the holes on the backplane at slot 19.
- 20** Using a slot screwdriver, secure the card to the backplane with the screws that were removed in step 16. Ensure the fiber washer is between the brackets of the replacement card and the backplane before tightening the screws.
- 21** Reseat the NTAX74 card in slot 12.
- 22** Reseat the NT6X41 card in slot 21.
- 23** Use the following information to determine the next step.

If you were directed here from	Do
alarm clearing procedures	step 26
other	step 24

At the MAP terminal

- 24** Load the inactive SMA unit by typing

>LOADPM UNIT unit_no

and pressing the Enter key.

where

unit_no
is the number of the busied SMA

If load	Do
passed	step 25
failed	step 29

- 25** Return the inactive SMA unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

unit_no
is the number of the SMA unit tested in step 24

If RTS	Do
passed	step 26
failed	step 29

NTMX71
in an SMA-MVI-20 (end)

At the equipment frame

- 26** Remove the sign from the active SMA unit.
- 27** Send any faulty cards for repair according to local procedure.
- 28** Note the following in the office records:
 - date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the cardGo to step 30.
- 29** For further assistance, contact the personnel responsible for the next level of support.
- 30** You have completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTMX71 in an SMS

Application

Use this procedure to replace a NTMX71 card in a SMS.

PEC	Suffixes	Name
NTMX71	AA	XPM Plus Terminator Paddleboard

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTMX71 in an SMS (continued)

Summary of card replacement procedure for a NTMX71 card in a SMS

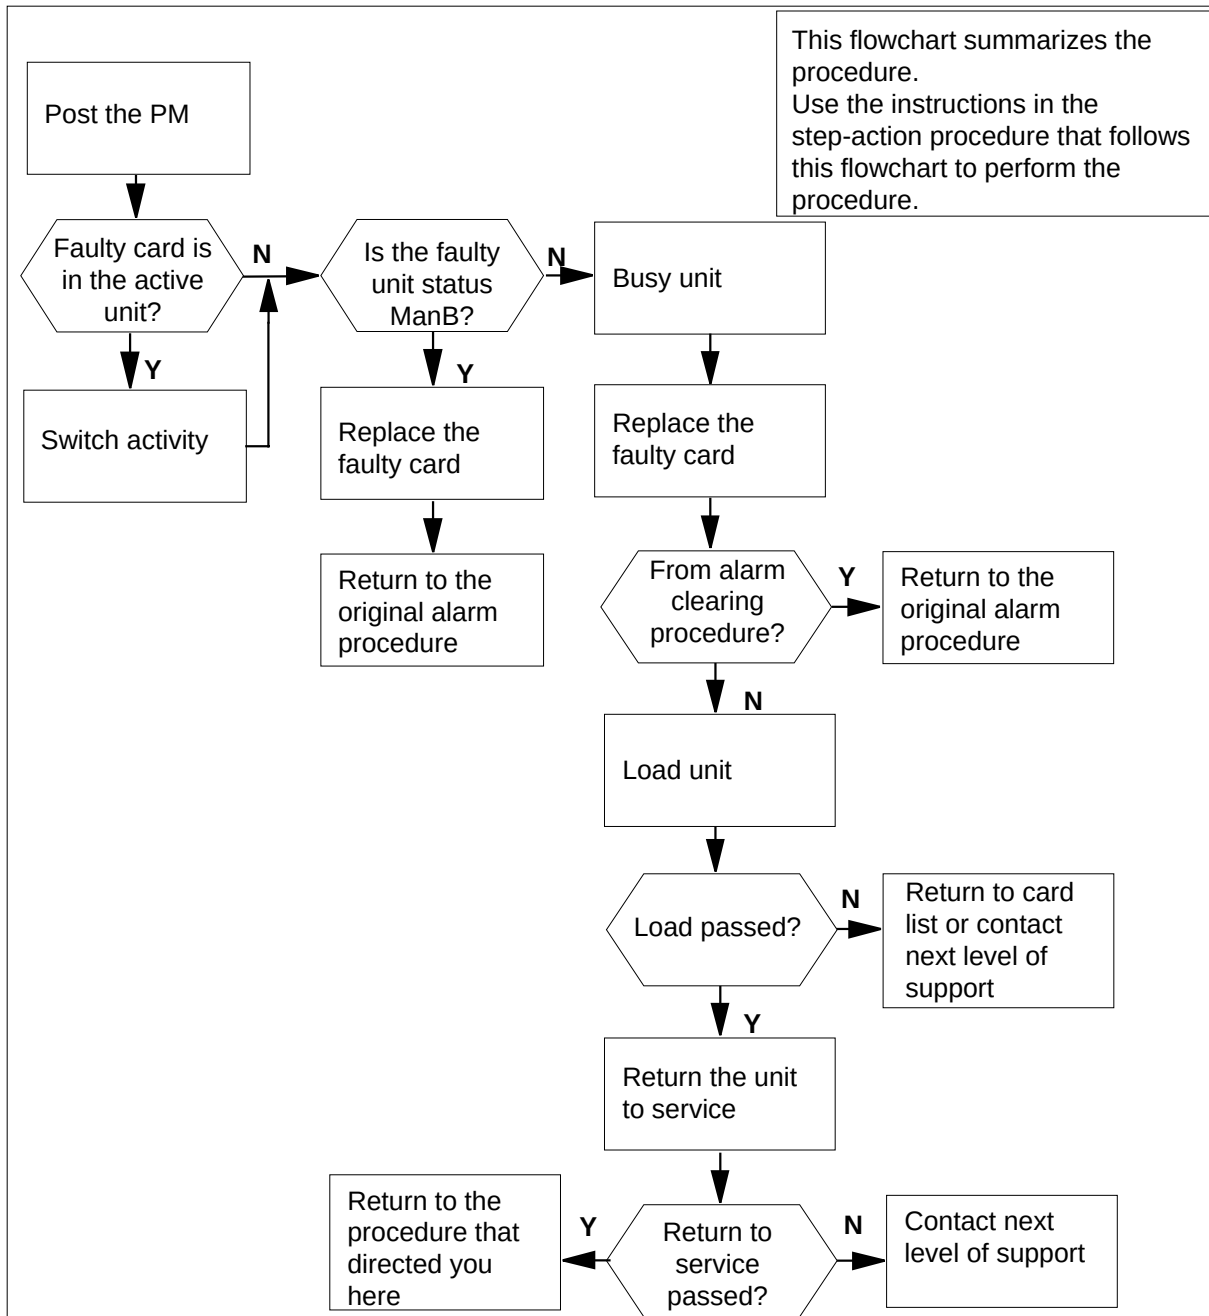

NTMX71 in an SMS (continued)

Replacing a NTMX71 card in a SMS

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 3 Ensure the current MAP display is at the PM level and post the SMS by typing
>MAPCI;MTC;PM;POST SMS sms_no
 and pressing the Enter key.

where

sms_no

is the number of the SMS being posted

Example of a MAP response

SMS	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMS	0	0	0	0	1	7

SMS 0 ISTb Links_00S: CSide 0, PSide 0

Unit0: Act InSv

Unit1: Inact ISTb

- 4 Observe the MAP display and determine if the faulty card is in the active or the inactive unit. The example in step 3 shows the status of the PM as in-service (InSv) on the active unit and in-service trouble (ISTb) on the inactive unit.

If the faulty card is in the	Do
active unit	step 5
inactive unit	step 12

- 5 Switch the activity of the units by typing
>SWACT
 and pressing the Enter key.

NTMX71 in an SMS (continued)

The system determines the type of SWACT it can perform and displays a confirmation prompt for the selected SWACT.

If SWACT	Do
can continue at this time	step 6
cannot continue at this time	step 35

- 6 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 12
SWACT failed Rea- son: XPM SWACTback	step 7
SWACT refused by SWACT Controller	step 8

- 7 The inactive unit could not establish two-way communication with the central control and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit.

Go to step 9.

- 8 The SWACT controller does not recommend a SWACT for one of the following reasons:

- IMC link failures
- message link failures
- parity audit failures
- superframe sync failures
- inactive unit was unable to keep activity last time
- dropping activity
- pre-SWACT query failure
- unit is jammed inactive
- unit is in overload
- pre-SWACT difficulties

NTMX71 in an SMS (continued)

- 9 You must clear all faults on the inactive unit and switch activity to the inactive unit before attempting to change the faulty card on the active unit.
- A problem has been detected as a result of your attempt to SWACT to the inactive unit. Check the alarm banner for alarms.

If there is a	Do
new alarm	step 10
no new alarm	step 33

- 10 Go to the appropriate procedure in the "SMS alarm clearing procedures" section of this document to determine what steps to take to clear the problem on the inactive unit.

Clear the problem then return to this step.

- 11 When the trouble on the inactive unit is cleared, force a SWACT to the active unit by typing

>SWACT FORCE

and pressing the Enter key.

At the equipment frame

- 12 Hang a sign on the active unit bearing the words: *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 13 Observe the MAP display and determine the state of the inactive unit. The example in step 3 shows the status of the PM as in-service on the active unit and in-service trouble on the inactive unit.

If state is	Do
ManB	step 19
SysB, CBsy, ISTb, or InSv	step 14

- 14 Busy the inactive PM unit by typing

>BSY UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive SMS unit (0 or 1)

- 15 Set the PM to the ROM level by typing

>PMRESET UNIT unit_no NORUN

and pressing the Enter key.

NTMX71
in an SMS (continued)

where

unit_no
is the number of the faulty SMS unit

At the equipment frame**16****WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the SMS. This protects the equipment against damage caused by static electricity.

**DANGER****Equipment damage**

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.

17 Unseat the NT6X41 card.**18** Unseat the NTMX77 card.**19** Using a slot screwdriver, loosen the screws from the two brackets that secure the NTMX71 card to the backplane in slot 19. Keep the screws in place on the backplane.**20****DANGER****Risk of eye or facial injury**

When removing the NTMX77 card, do not jerk the paddleboard from the backplane pins. Instead, gently rock the paddleboard off the packplane pins.

Remove the NTMX71 card.

21 Place the card you have removed in an electrostatic discharge (ESD) protective container.

NTMX71 in an SMS (continued)

- 22 Line up the holes on the brackets of the replacement card with the holes on the backplane of slot 19.
- 23 Using a slot screwdriver, secure the card to the backplane with the screws that were loosened in step 20. Ensure the fiber washer is between the brackets of the replacement card and the backplane before tightening the screws.
- 24 Reseat the NTMX77.
- 25 Reseat the NT6X41 card.
- 26 Use the following information to determine the next step.

If you were directed here from	Do
alarm and trouble clearing procedures	step 30
other	step 27

At the MAP terminal

- 27 Load the inactive SMS unit by typing
>LOADPM UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the busied SMS unit (0 or 1)

If load	Do
passed	step 28
failed	step 33

- 28 Test the inactive SMS unit by typing
>TST UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the SMS unit loaded in step 27

If TST	Do
passed	step 29
failed	step 33

NTMX71
in an SMS (end)

- 29** Return the inactive SMS unit to service by typing
>RTS UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the SMS unit tested in step 28

If RTS	Do
passed	step 30
failed	step 33

At the equipment frame

- 30** Remove the sign from the active SMS unit.
- 31** Send any faulty cards for repair according to local procedure.
- 32** Note the following in the office records:
- date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
- Go to step 34.
- 33** For further assistance, contact the personnel responsible for the next level of support.
- 34** You have completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.
- 35** For further assistance with switch of activity, contact the personnel responsible for the next level of support.
- Note:** If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.

NTMX71 in an SMU

Application

Use this procedure to replace a NTMX71 card in an SMU.

PEC	Suffixes	Name
NTMX71	AA	XPM Plus Terminator Paddleboard

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTMX71 in an SMU (continued)

Summary of card replacement procedure for a NTMX71 card in a in an SMU

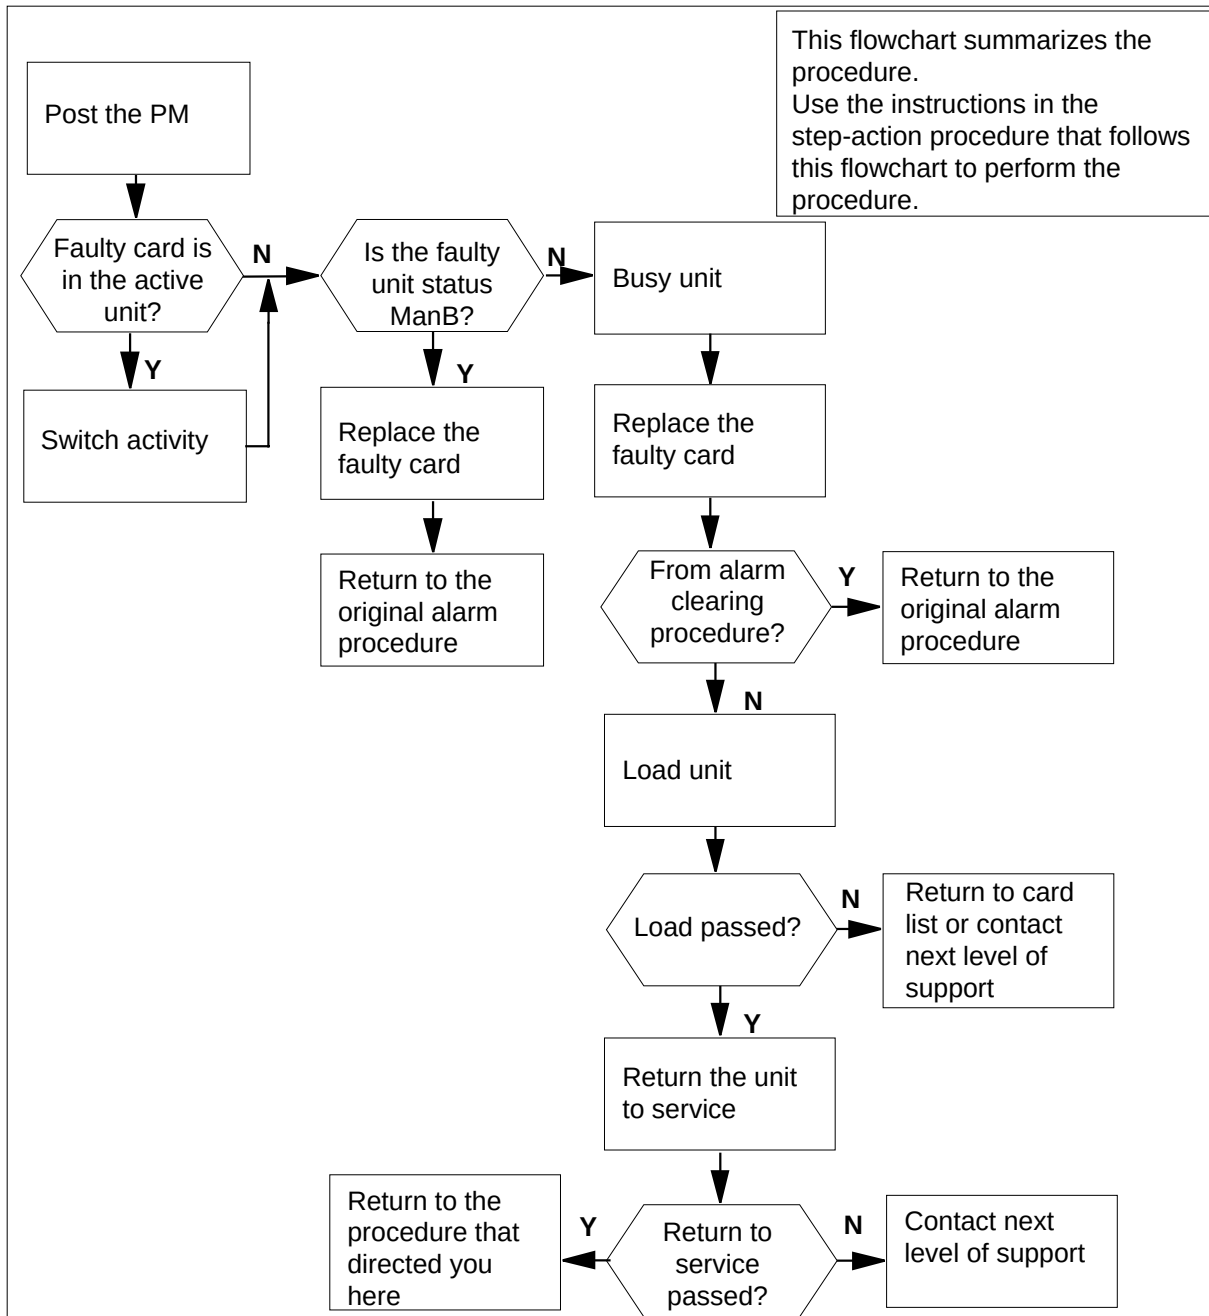

NTMX71 in an SMU (continued)

Replacing a NTMX71 card in a SMU

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Obtain a replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card being removed.

At the MAP terminal

- 3 Ensure the current MAP display is at the PM level and post the SMU by typing
>MAPCI;MTC;PM;POST SMU smu_no
 and pressing the Enter key.

where

smu_no

is the number of the SMU being posted

Example of a MAP response

SMU	SysB	ManB	Offl	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMU	0	0	0	0	1	7

SMU 0 ISTb Links_00S: CSide 0, PSide 0

Unit0: Act InSv

Unit1: Inact ISTb

- 4 Observe the MAP display and determine if the faulty card is in the active or the inactive unit. The example in step 3 shows the status of the PM as in-service (InSv) on the active unit and in-service trouble (ISTb) on the inactive unit.

If the faulty card is in the	Do
active unit	step 5
inactive unit	step 13

NTMX71 in an SMU (continued)

5

**CAUTION****Service disruption: calls may be dropped!**

If you are prompted to confirm a cold SWACT, perform this activity only during a period of low traffic. All calls being handled by this PM, including data calls, will be dropped.

Switch the activity of the units by typing

>SWACT

and pressing the Enter key.

The system determines the type of SWACT it can perform, a warm SWACT or a cold SWACT, and displays a confirmation prompt for the selected SWACT.

If SWACT	Do
cannot continue at this time	step 6
can continue at this time	step 7

6 Reject the prompt to switch the activity of the units by typing

>NO

and pressing the Enter key.

The system discontinues the SWACT.

7 Confirm the system prompt by typing

>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 13
SWACT failed Reason: XPM SWACTback	step 8
SWACT refused by SWACT Controller	step 9

NTMX71 in an SMU (continued)

- 8 The inactive unit could not establish two-way communication with the central control and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit.

Go to step 10.

- 9 The SWACT controller does not recommend a SWACT for one of the following reasons:

- IMC link failures
- message link failures
- parity audit failures
- superframe sync failures
- inactive unit was unable to keep activity last time
- dropping activity
- pre-SWACT query failure
- unit is jammed inactive
- unit is in overload
- pre-SWACT difficulties

You must clear all faults on the inactive unit and switch activity to the inactive unit before attempting to change the faulty card on the active unit.

- 10 A problem has been detected as a result of your attempt to SWACT to the inactive unit. Check the alarm banner for alarms.

If there is a	Do
new alarm	step 11
no new alarm	step 34

- 11 Go to the appropriate procedure in the *Alarm Clearing Procedures* to determine what steps to take to clear the problem on the inactive unit.

Clear the problem then return to this step.

- 12 When the trouble on the inactive unit is cleared, force a SWACT to the active unit by typing

>SWACT FORCE

and pressing the Enter key.

At the equipment frame

- 13 Hang a sign on the active unit bearing the words: *Active unit—Do not touch*. This sign should not be attached by magnets or tape.

NTMX71
in an SMU (continued)

At the MAP terminal

- 14** Observe the MAP display and determine the state of the inactive unit. The example in step 3 shows the status of the PM as in-service on the active unit and in-service trouble on the inactive unit.

If state is	Do
ManB	step 21
SysB, CBsy, ISTb, or InSv	step 15

- 15** Busy the inactive PM unit by typing
>BSY UNIT unit_no
and pressing the Enter key.
where
unit_no
is the number of the inactive SMU unit (0 or 1)
- 16** Set the inactive unit to the ROM level by typing
>PMRESET UNIT smu_unit_no NORUN
and pressing the Enter key.
where
smu_unit_no
is the number of the inactive unit (0 or 1)

NTMX71 in an SMU (continued)

At the equipment frame

17



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel of the SMU. This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Put on a wrist strap.

18 Unseat the NT6X41 card in slot 21.

19 Unseat the NTMX77 card in slot 13.

20



DANGER

Personal injury

Take the following precautions when removing a backplane card:

To prevent eye and facial injuries do not jerk the card from backplane pins. Gently rock the card off the backplane pins.

Using a slot screwdriver, loosen the screws from the two brackets that secure the card to the backplane at slot 19. Keep the screws in place on the backplane.

21 Remove the card.

22 Place the card you have removed in an electrostatic discharge (ESD) protective container.

23 Line up the holes on the brackets of the replacement card with the holes on the backplane of slot 19.

24 Using a slot screwdriver, secure the card to the backplane with the screws that were loosened in step 20. Ensure the fiber washer is between the

NTMX71 in an SMU (continued)

brackets of the replacement card and the backplane before tightening the screws.

25 Reseat the NTMX77 card in slot 13.

26 Reseat the NT6X41 card in slot 21.

27 Use the following information to determine the next step.

If you were directed here from	Do
alarm and trouble clearing procedures	step 31
other	step 28

At the MAP terminal

28 Load the inactive SMU unit by typing

>LOADPM UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the busied SMU unit (0 or 1)

If load	Do
passed	step 29
failed	step 34

29 Test the inactive SMU unit by typing

>TST UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the SMU unit loaded in step 28

If TST	Do
passed	step 30
failed	step 34

30 Return the inactive SMU unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

NTMX71

in an SMU (end)

unit_no

is the number of the SMU unit tested in step 29

If RTS	Do
passed	step 31
failed	step 34

At the equipment frame

- 31** Remove the sign from the active SMU unit.
- 32** Send any faulty cards for repair according to local procedure.
- 33** Note the following in the office records:
- date the card was replaced
 - serial number of the card
 - symptoms that prompted replacement of the card
- Go to step 35.
- 34** For further assistance, contact the personnel responsible for the next level of support.
- 35** You have completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTMX72 in an RSC-M

Application

Use this procedure to replace an NTMX72 circuit card in a Remote Switching Center Multi-Access (RSC-M) main shelf.

Note: In the examples in this section RSC-M refers to RCO2. When software outputs messages to the MAP terminal, the software does not differentiate between the two types of RCO2.

PEC	Suffixes	Name
NTMX72	AA, AB	Power converter

Common procedures

This section refers to the following common procedures:


- replacing a card
- returning a card

Action

This procedure contains a summary flowchart and a list of steps. Use the flowchart to review the procedure. Follow the steps to perform the procedure.

NTMX72 in an RSC-M (continued)

Summary of replacing an NTMX72 in an RSC-M

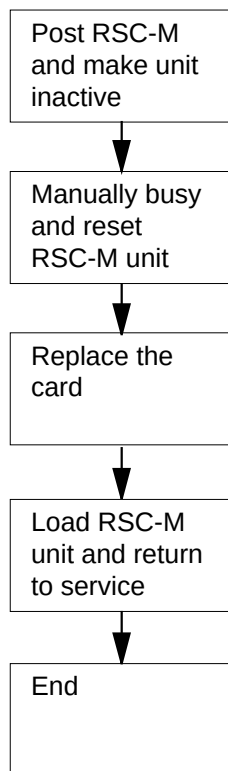

This flowchart is a summary of the procedure.

Use the flowchart to review the procedure. Follow the steps to perform the procedure.

NTMX72 in an RSC-M (continued)

To replace an NTMX72 in an RSC-M

At the MAP display

- 1 Proceed if one of the following conditions apply:
 - a step in a maintenance procedure directed you to this card replacement procedure
 - you use this procedure to verify or accept cards
 - the maintenance support group directed you to this procedure.
- 2



WARNING

Loss of service

When you replace a card in the RSC-M, make sure the unit in which you replace the card is *inactive* and the mate unit is *active*.

Obtain an NTMX72 replacement circuit card. Make sure the replacement circuit card has the same product engineering code (PEC) and PEC suffix, as the circuit card to be removed.

At the MAP terminal

- 3 To access the peripheral module (PM) level of the MAP display and to post the RSC-M/RCO2 with the defective card, type:

>MAPCI;MTC;PM;POST RCO2 rco2_no

and press the Enter key.

where

rco2_no

is the PM number zero to 255

Example of a MAP response:

NTMX72 in an RSC-M (continued)

```

RSC-M          SysB      ManB      OffL      CBsy      ISTb      InSv
0 Quit      PM      0      0      2      0      2      25
2 Post_     RCO2     0      0      0      0      1      1
3 ListSet
4           RCO2     0 ISTb Links_00S: CSide 1, PSide 1
5 TRNSL     Unit0:   Inact CBsy
6 TST       Unit1:   Act InSv
7 BSY
8 RTS
9 OffL
10 LoadPM_
11 Disp_
12 Next_

```

- 4 To determine the location of the RCO2 that contains the NTMX72 circuit card you are to replace, type:

>QUERYPM

and press the Enter key.

Example of a MAP response:

```

PM Type: RCO2 PM No.: 0 PM Int. No.: 9 Node_No: 24
PMs Equipped: 53 Loadname:KRI07BI1 EEPROM Load:MX77NG03
WARM SWACT is supported and available
RCO2 0 is included in the REX schedule.
REX on RCO2 0 has not been performed.
Node Status: {OK, FALSE}
Unit 0 Act, Status: {OK, FALSE}
Unit 1 Inact, Status: {OK, FALSE}
Site Flr RPos Bay_id Shf Description Slot EqPEC
RSC-M 00 C02 RSC-M 00 05 RCO2: 000 MX85AA
RSC-M 00 C02 RSC-M 00 47 EXT:LEFT 01:13 MX86AA

```

- 5 Determine the state of the RCO2 unit for the circuit card you are to replace.

If the state of the RCO2 unit	Do
is active	step 6
is inactive	step 8

- 6 To switch activity (SWACT) of the units, type:

>SWACT

and press the Enter key.

Example of a MAP response:

NTMX72 in an RSC-M (continued)

RC02 0 A Warm SwAct will be performed after
data sync of active terminals.
Please confirm ("YES", "Y", "NO", or "N"):

If the system	Do
prompts you to confirm a warm SWACT	step 7
rejects the SWACT	step 24

7 To confirm the command, type:

>YES

and press the Enter key.

Example of a MAP response:

```
Unit0:   Inact SysB  Mtce
Unit1:   Act   ISTb
```

RC02 0 SwAct Passed

If the MAP response	Do
is SWACT passed	step 8
other than listed here	step 23

8 A maintenance flag (Mtce) can appear. A maintenance flag indicates system-initiated maintenance tasks are in progress. Wait until the flag disappears from the status lines for both RCO2 units before you proceed to the next step.

At the cabinet

9 Place a sign with the words *Active unit-Do not touch* on the active unit. Do not attach this sign with magnets or tape.

10 To manually busy (ManB) the inactive unit, type:

>BSY INACTIVE

and press the Enter key.

Example of a MAP response:

NTMX72

in an RSC-M (continued)

```
RC02      0 ISTb  Links_00S: CSide  0 , PSide  1
Unit0:    Inact ManB
Unit1:    Act   ISTb
Bsy INACTIVE
RC02 0 Unit 0      Bsy Passed
```

If the BSY command	Do
passes	step 11
fails	step 23

- 11** To reset the inactive RCO2 unit, type:
>PMRESET UNIT unit_no NORUN
 and press the Enter key.
where
 unit_no
 is the RCO2 unit number zero or one

Example of a MAP response:

```
RC02 1 Unit 0      PMReset Passed
```

- 12** Use the following information to determine the next step:

If the card you are to replace has a suffix of	Do
AA	step 13
AB	step 15

NTMX72 in an RSC-M (continued)

At the shelf

13

**WARNING****Static electricity damage**

Wear a wrist strap that connects to the wrist-strap grounding point of the modular supervisory panel (MSP) to handle circuit cards. This protects the cards against static electricity damage.

To power down the inactive unit, set the power switch on the NTMX72 faceplate to the OFF position.

Note: The NTMX72 circuit cards, are in slots 1 and 2 of unit 0, and in slots 26 and 27 of unit 1.

14

To replace the card, use the common replacing a card procedure in this document. Complete this procedure and go to step 17.

Note: If the circuit card you are to replace has switches, make sure the switches on the replacement circuit card have the same settings.

15

**WARNING****Briefly state reasons for the ESDS caution**

Enter the reasons for the electro-static discharge caution: an ESDS caution informs the reader to observe precautions for handling an electrostatically sensitive device.

To power down the NTMX72AB power converter, set the circuit breaker on the MSP for the inactive unit to the OFF position.

16

To replace the card, use the procedure removing and replacing a card in this section. Complete this procedure and go to step 17.

17

Power up the NTMX72 circuit card as follows:

- a** Insert the NTMX72 circuit card completely. An audible alarm can sound. To silence this alarm, restore power to the NTMX72 circuit card.
- b** If you replaced an NTMX72AA power converter, set the POWER switch to the ON position. Set the POWER switch to RESET when you set the circuit breaker on the MSP to the ON position.
- c** If you replaced an NTMX72AB power converter, set the circuit breaker on the MSP to the ON position. Set the circuit breaker on the MSP to ON, for the NTMX72AB that you powered down in step 15.

18

To load the inactive unit, type:

>LOADPM INACTIVE

NTMX72

in an RSC-M (end)

and press the Enter key.

If the LOADPDM command	Do
passes	step 19
fails	step 23

- 19** To return the inactive unit to service, type:

>RTS INACTIVE

and press the Enter key.

If the RTS command	Do
passed	step 20
failed	step 23

- 20** Remove the sign from the active unit.
- 21** Go to the common returning a card procedure in this document.
- 22** This procedure is complete.
- 23** For additional help contact the next level of support.
- 24** For additional help with the SWACT, contact the next level of support.

Note: The system can recommend the of use the SWACT command with the FORCE option. When this condition occurs, contact office personnel to determine if the use of the FORCE option is acceptable.

**NTMX72
in an RSC RCC2**

Application

Use this procedure to replace an NTMX72 card in an RSCE RCC2.

PEC	Suffixes	Name
NTMX72	AA, AB	Power Converter

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTMX72 in an RSC RCC2 (continued)

Summary of card replacement procedure for an NTMX72 card in an RSC RCC2

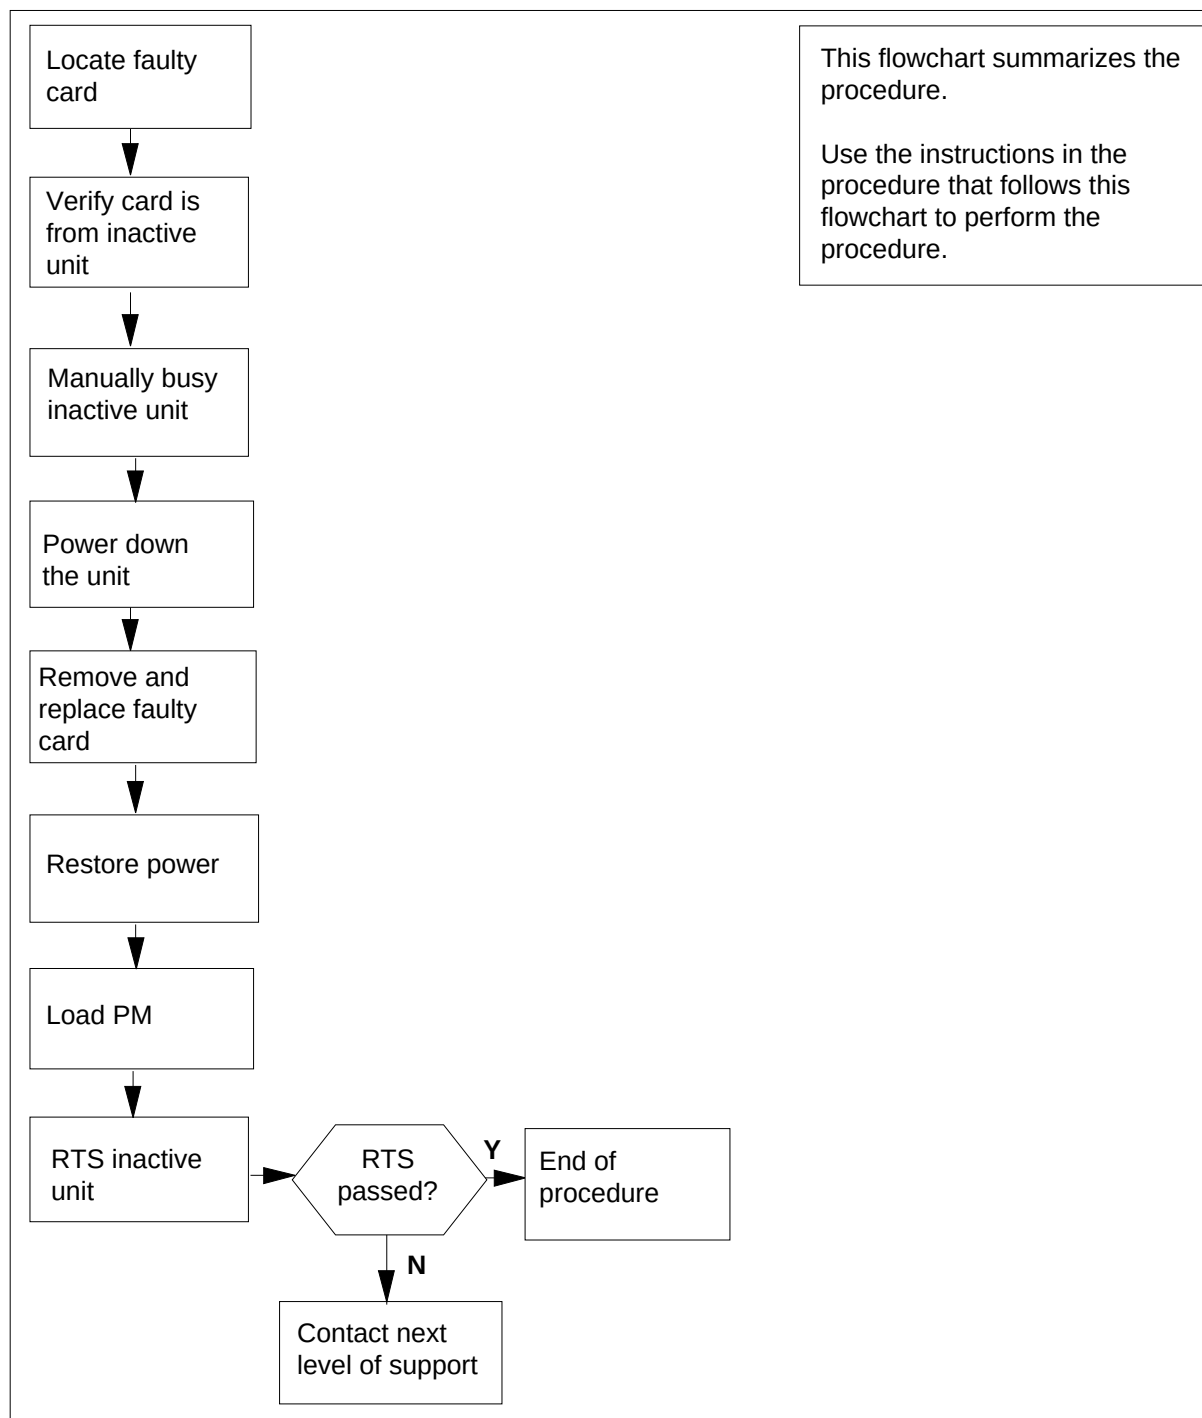

NTMX72 in an RSC RCC2 (continued)

Replacing an NTMX72 card in an RSCE RCC2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCC2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NTMX72 replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Set the MAP display to the PM level and post the RCC2 by typing
>MAPCI;MTC;PM;POST RCC2 rcc2_no
and pressing the Enter key.
where
rcc2_no
is the number of the RCC2 with the faulty card
Example of a MAP display:

NTMX72

in an RSC RCC2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	0	25
2 Post_	RCC2		0	0	0	0	0	0	0
3 ListSet									
4	RCC2		0 ISTb	Links_00S:	CSide	0, PSide	0		
5 TRNSL	Unit0:		Inact	InSv					
6 TST	Unit1:		Act	InSv					
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 By observing the MAP display, be sure that the card that is to be removed is on the inactive unit.

- 5 Busy the inactive PM unit by typing

>bsy INACTIVE

and pressing the Enter key.

Example of a MAP response:

```
RCC2      0 ISTb  Links_00S: CSide  0 , PSide  1
Unit0:    Inact ManB
Unit1:    Act   ISTb
bsy unit 0
RCC2 0 Unit 0      Bsy Passed
```

If the BSY command	Do
passed	step 6
failed	step 22

- 6 Reset the inactive RCC2 unit by typing
>PMRESET UNIT unit_no NORUN
 and pressing the Enter key.
where

NTMX72 in an RSC RCC2 (continued)

unit_no

is the RCC2 unit number (0 or 1)

Example of a MAP response:

RCC2 1 Unit 0 PMReset Passed

At the RSCE frame

- 7 Place a sign on the active unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.
- 8 Use the following information to determine where to proceed:

If the card you are replacing has a suffix of	Do
AA	step 9
AB	step 10
- 9 Power down the NTMX72AA power converter by setting the POWER switch on the NTMX72 card to the OFF position.
Go to step 11.
- 10 Power down the NTMX72AB power converter by setting the circuit breaker on the MSP for the inactive unit to the OFF position.
- 11



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the modular supervisory panel (MSP). This protects the equipment against damage caused by static electricity.



DANGER

Equipment damage


Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.


Remove the NTMX72 card as shown in the following figures.

- a Locate the card to be removed on the appropriate shelf.

NTMX72 in an RSC RCC2 (continued)

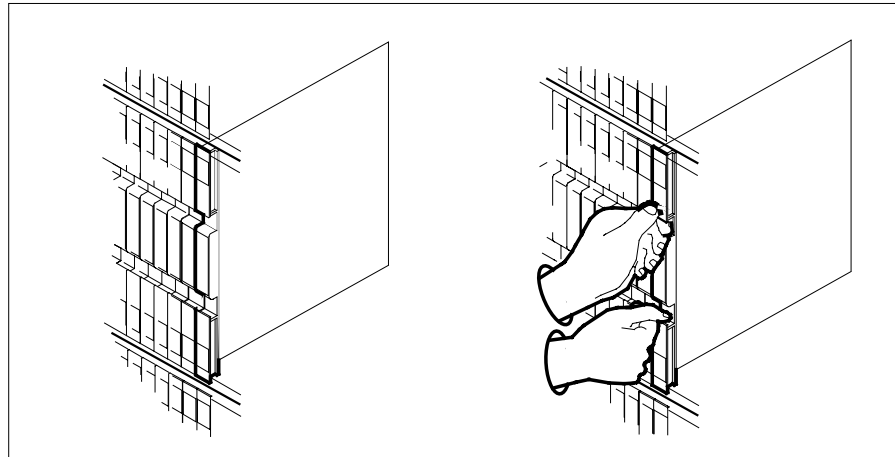

- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

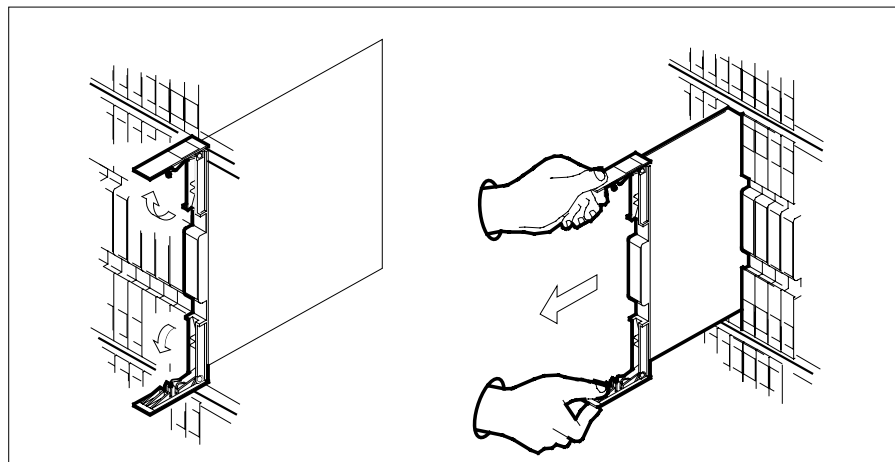


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.


12 Open the locking levers on the replacement card.

- a** Align the card with the slots in the shelf.
b Gently slide the card into the shelf.

NTMX72
in an RSC RCC2 (continued)

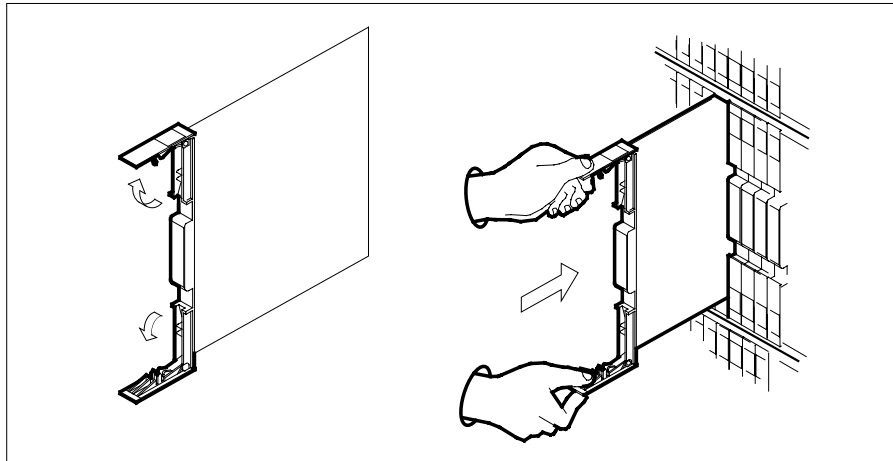

- 13** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

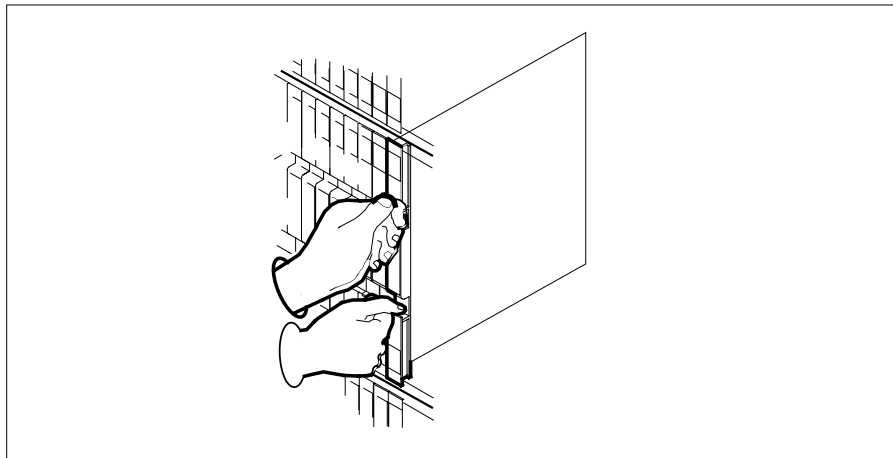

- 14** Power up the inactive RCC2 unit as follows:
- a** Ensure the NTMX72 circuit card is fully inserted. A major audible alarm may sound. This alarm is silenced when power to the NTMX72 circuit card is restored.
 - b** If the power converter replaced is an NTMX72AA, set the switch on the power converter to the Reset position. Set the associated circuit breaker on the MSP to the ON position.

Note:

If both the converter FAIL LED and FRAME FAIL lamp on the MSP go OFF, go to step 15.

NTMX72 in an RSC RCC2 (continued)

If both the converter FAIL LED and FRAME FAIL lamp on the MSP do not go OFF, hold the switch on the NTMX72AA power converter in the Reset position and simultaneously set the associated circuit breaker on the MSP to the ON position. Both the converter FAIL LED and FRAME FAIL lamp on the MSP will go OFF. Go to step 15.

- c If the power converter replaced is an NTMX72AB, set the associated circuit breaker on the MSP to the ON position for the NTMX72AB that was powered down in step 10. Both the converter FAIL LED and FRAME FAIL lamp on the MSP will go OFF. Go to step 15.

- 15 After replacing the faulty card, load the inactive RCC2 unit by typing

>LOADPM UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive RCC2 unit

If load	Do
passed	step 16
failed	step 22

- 16 Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 21
other	step 17

- 17 Return the inactive RCC2 unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive RCC2 unit

If RTS	Do
passed	step 18
failed	step 22

- 18 Remove the sign from the active RCC2 unit.

- 19 Send any faulty cards for repair according to local procedure.

NTMX72
in an RSC RCC2 (end)

- 20** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 23.
- 21** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 22** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 23** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTMX72 in an RSC-S (DS-1) Model A RCC2

Application

Use this procedure to replace an NTMX72 card in an RSC-S RCC2.

PEC	Suffixes	Name
NTMX72	AA, AB	Power Converter

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTMX72 in an RSC-S (DS-1) Model A RCC2 (continued)

Summary of card replacement procedure for an NTMX72 card in an RSC-S RCC2

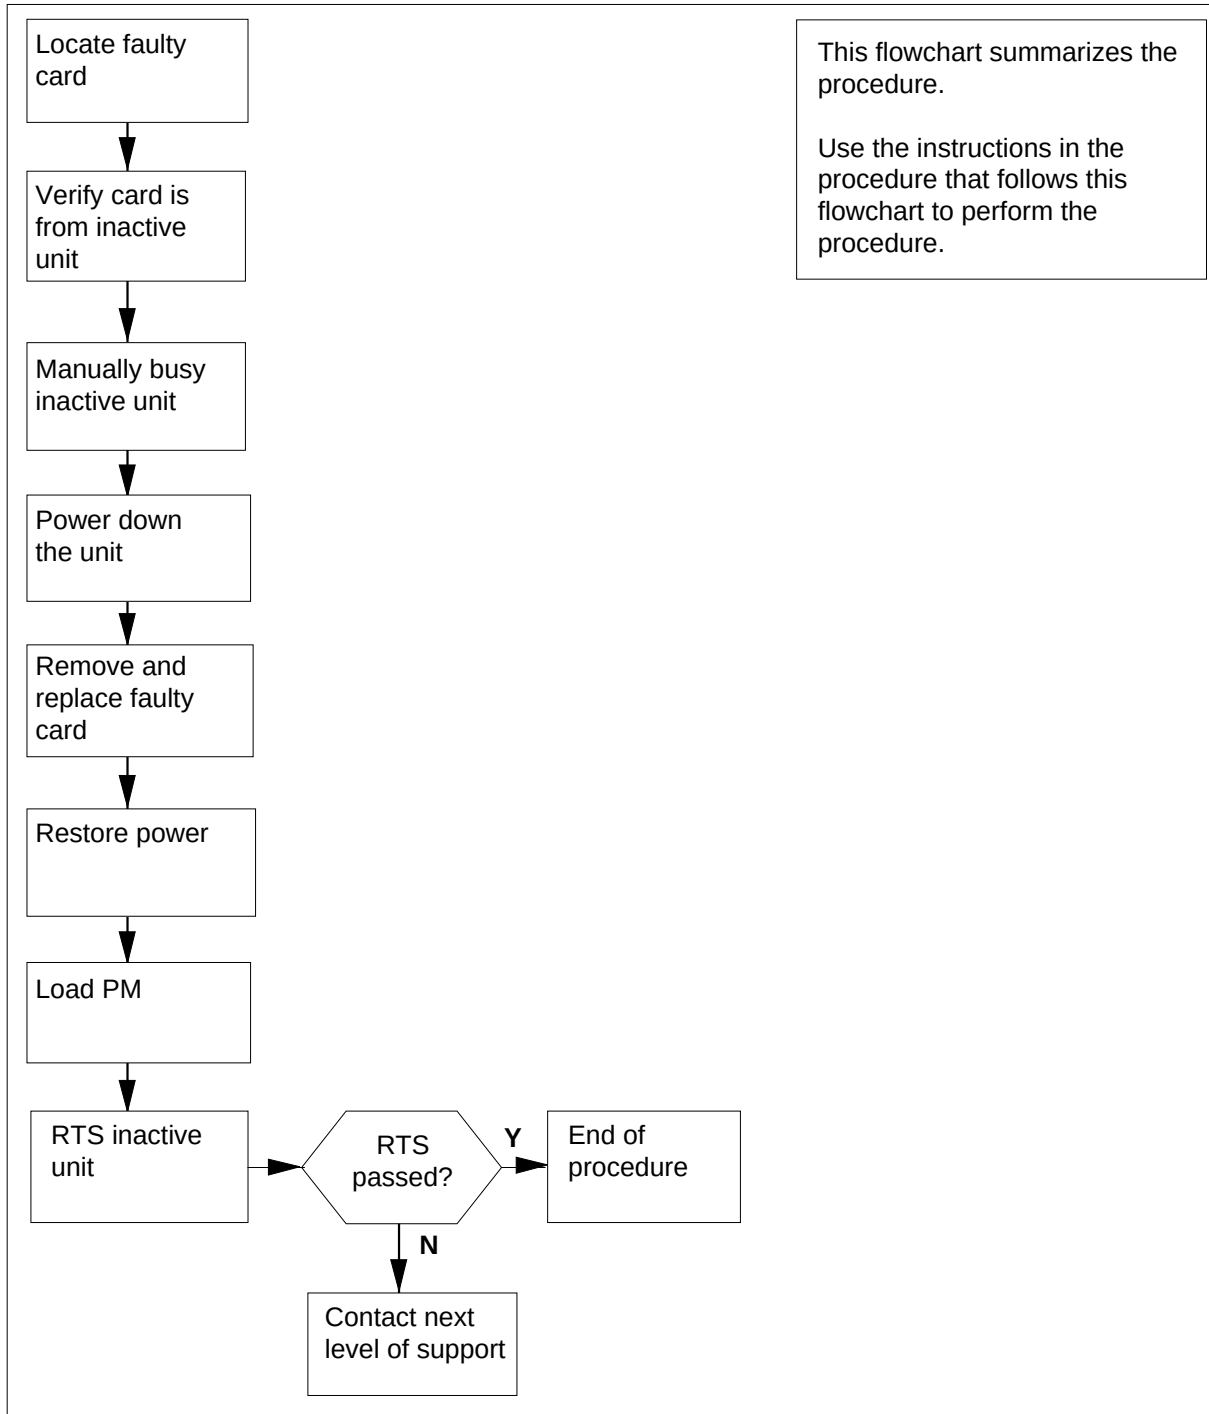

NTMX72 in an RSC-S (DS-1) Model A RCC2 (continued)

Replacing an NTMX72 card in an RSC-S RCC2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCC2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NTMX72 replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Set the MAP display to the PM level and post the RCC2 by typing
>MAPCI;MTC;PM;POST RCC2 rcc2_no
and pressing the Enter key.
where
rcc2_no
is the number of the RCC2 with the faulty card
Example of a MAP display:

NTMX72
in an RSC-S (DS-1) Model A RCC2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCC2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0	Quit	PM	0	0	0	0	0	0	25
2	Post_	RCC2	0	0	0	0	0	0	0
3	ListSet								
4		RCC2	0	ISTb	Links_00S:	CSide	0, PSide	0	
5	TRNSL	Unit0:	Inact	InSv					
6	TST	Unit1:	Act	InSv					
7	BSY								
8	RTS								
9	OffL								
10	LoadPM_								
11	Disp_								
12	Next_								
13									
14	QueryPM								
15									
16									
17									
18									

- 4 By observing the MAP display, be sure that the card that is to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 7

- 5 Switch the processing activity (SWACT) to the inactive unit by typing
>SWACT
and pressing the Enter key.
- 6 Answer the prompt by typing
>YES
and pressing the Enter key.
- 7 Busy the inactive PM unit by typing
>bsy INACTIVE
and pressing the Enter key.
Example of a MAP response:

NTMX72

in an RSC-S (DS-1) Model A RCC2 (continued)

```
RCC2      0 ISTb  Links_00S: CSide  0 , PSide  1
Unit0:    Inact ManB
Unit1:    Act   ISTb
bsy unit 0
RCC2 0 Unit 0      Bsy Passed
```

If the BSY command	Do
passed	step 8
failed	step 24

- 8** Reset the inactive RCC2 unit by typing
>PMRESET UNIT unit_no NORUN
 and pressing the Enter key.
where
 unit_no
 is the RCC2 unit number (0 or 1)

Example of a MAP response:

```
RCC2 0 Unit 0      PMReset Passed
```

At the RCC2 frame

- 9** Place a sign on the active unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.
- 10** Use the following information to determine where to proceed:
- | If the card you are replacing has a suffix of | Do |
|---|---------|
| AA | step 11 |
| AB | step 12 |
- 11** Power down the NTMX72AA power converter by setting the POWER switch on the NTMX72 card to the OFF position.
 Go to step 13.
- 12** Power down the NTMX72AB power converter by setting the circuit breaker on the frame supervisory panel (FSP) for the inactive unit to the OFF position.

NTMX72
in an RSC-S (DS-1) Model A RCC2 (continued)

13

**WARNING****Static electricity damage**

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the FSP. This protects the equipment against damage caused by static electricity.


**DANGER****Equipment damage**

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.


Remove the NTMX72 card as shown in the following figures.

- a** Locate the card to be removed on the appropriate shelf.

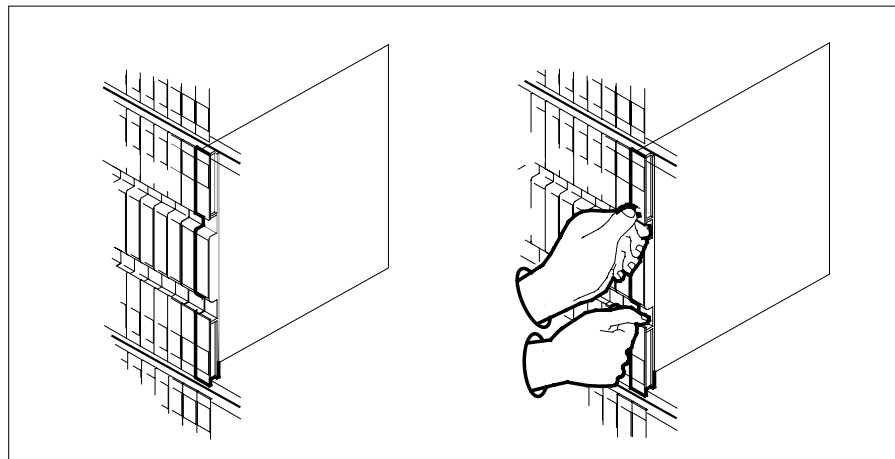

- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.


NTMX72 in an RSC-S (DS-1) Model A RCC2 (continued)

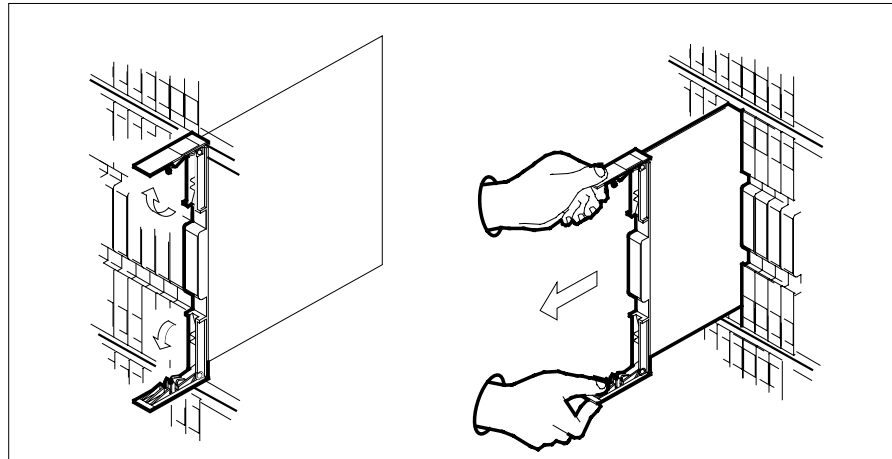

- c Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

14 Open the locking levers on the replacement card.


- a Align the card with the slots in the shelf.
- b Gently slide the card into the shelf.

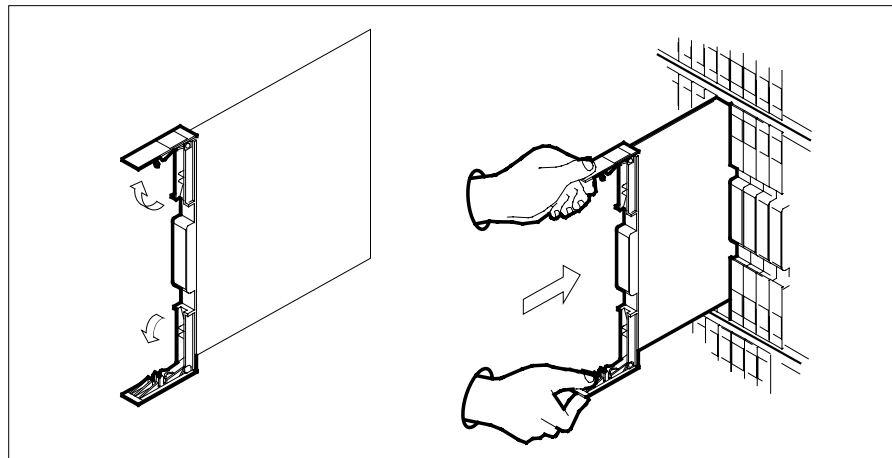

15 Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
- b Close the locking levers.

NTMX72
in an RSC-S (DS-1) Model A RCC2 (continued)

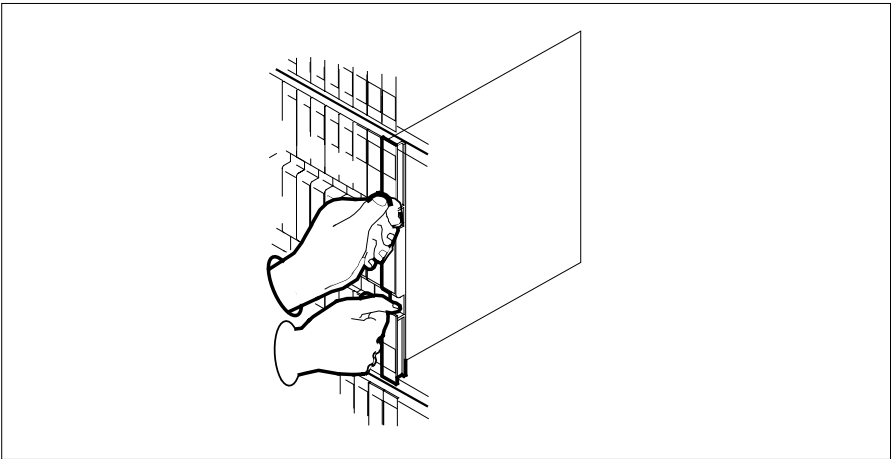

- 16** Power up the inactive RCC2 unit as follows:
- a** Ensure that the power converter (NTMX72) is fully inserted. A major audible alarm may sound. This alarm is silenced when power to the NTMX72 circuit card is restored.
- Note:**
- b** If the power converter is an NTMX72AA, set the switch on the power converter to the Reset position. Set the associated circuit breaker on the FSP to the ON position.
- If both the converter FAIL LED and FRAME FAIL lamp on the FSP go OFF, go to step 17.
- If both the converter FAIL LED and FRAME FAIL lamp on the FSP do not go OFF, hold the switch on the NTMX72AA converter in the Reset position and simultaneously set the associated circuit breaker on the FSP to the ON position. Both the converter FAIL LED and FRAME FAIL lamp on the FSP will go OFF. Go to step 17.
- c** If the power converter replaced is an NTMX72AB set the associated circuit breaker on the FSP to the ON position for the NTMX72AB that was powered down in step 12. Both the converter FAIL LED and FRAME FAIL lamp on the FSP will go OFF. Go to step 17.

- 17** After replacing the faulty card, load the inactive RCC2 unit by typing

>LOADPM UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive RCC2 unit

If load	Do
passed	step 18

NTMX72

in an RSC-S (DS-1) Model A RCC2 (end)

		If load	Do
		failed	step 24
18	Use the following information to determine where to proceed.		
		If you entered this procedure from	Do
		alarm clearing procedures	step 23
		other	step 19
19	Return the inactive RCC2 unit to service by typing >RTS UNIT unit_no and pressing the Enter key. <i>where</i> unit_no is the number of the inactive RCC2 unit		
		If RTS	Do
		passed	step 20
		failed	step 24
20	Remove the sign from the active RCC2 unit.		
21	Send any faulty cards for repair according to local procedure.		
22	Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 25.		
23	Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.		
24	Obtain further assistance in replacing this card by contacting operating company maintenance personnel.		
25	You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.		

NTMX72 in an RSC-S (DS-1) Model B RCC2

Application

Use this procedure to replace an NTMX72 card in an RSC-S RCC2.

PEC	Suffixes	Name
NTMX72	AA, AB	Power Converter

Common procedures

None


Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTMX72

in an RSC-S (DS-1) Model B RCC2 (continued)

Summary of card replacement procedure for an NTMX72 card in an RSC-S RCC2

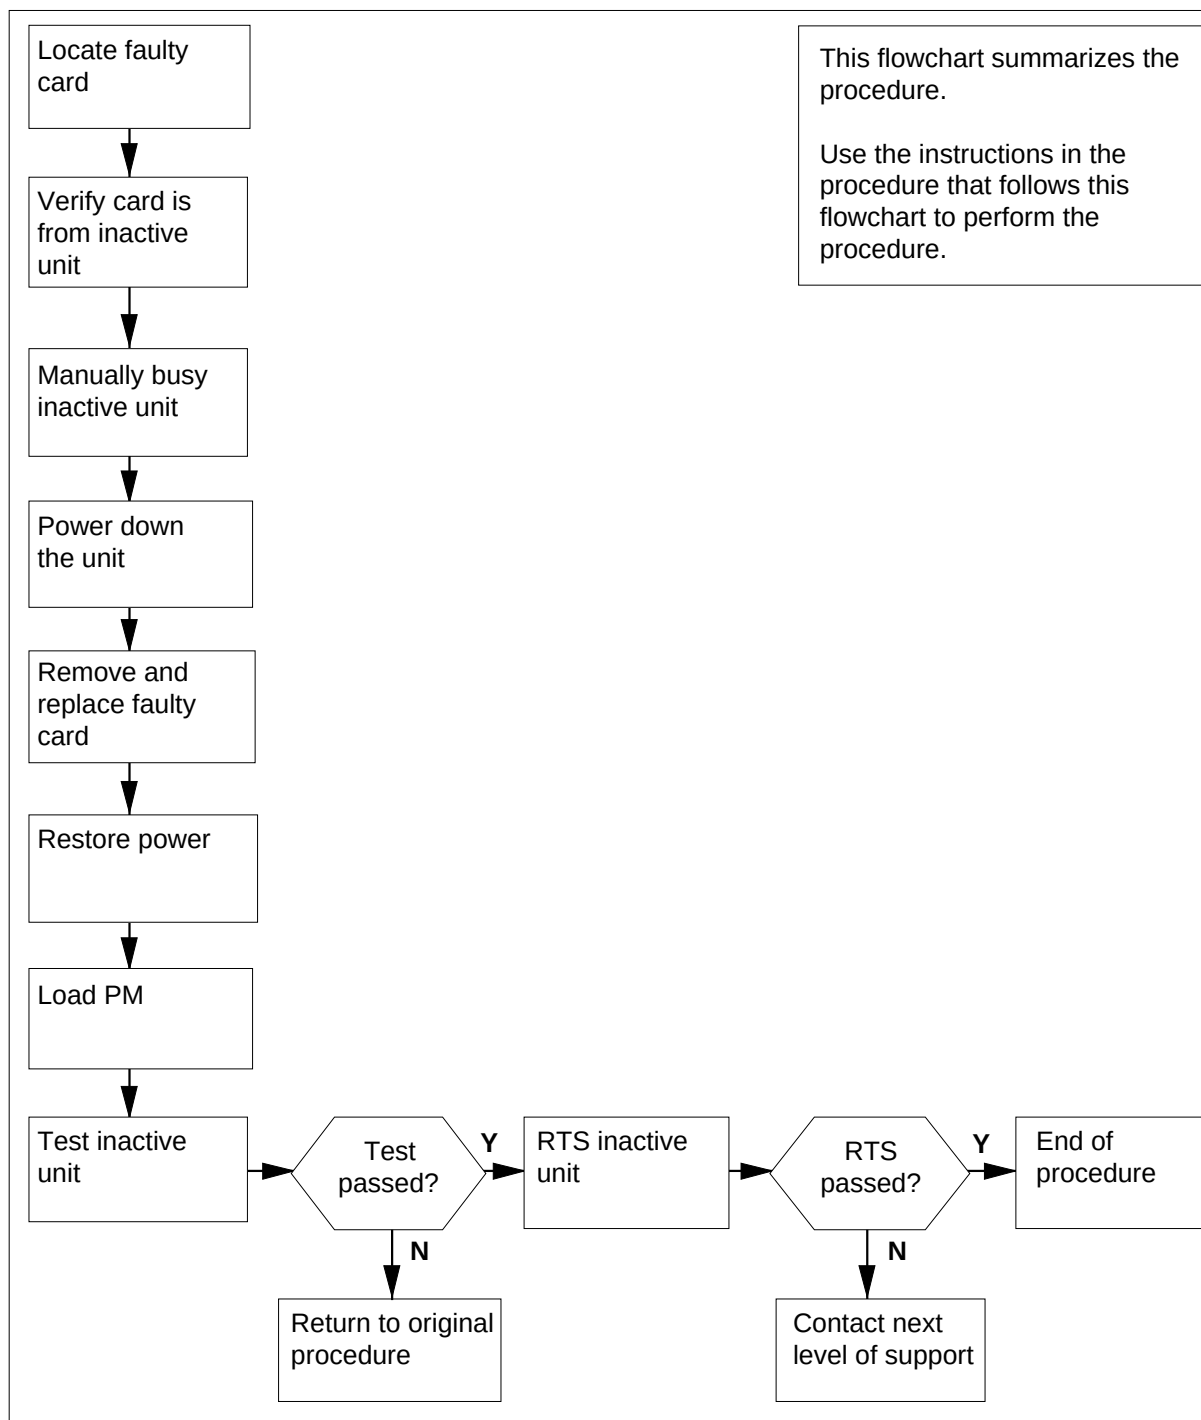

NTMX72 in an RSC-S (DS-1) Model B RCC2 (continued)

Replacing an NTMX72 card in an RSC-S RCC2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2

**CAUTION****Loss of service**

When replacing a card in the RCC2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NTMX72 replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Set the MAP display to the PM level and post the RCC2 by typing
>MAPCI;MTC;PM;POST RCC2 rcc2_no
and pressing the Enter key.
where
rcc2_no
is the number of the RCC2 with the faulty card
Example of a MAP display:

NTMX72**in an RSC-S (DS-1) Model B RCC2** (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCC2			SysB	ManB	OffL		CBsy	ISTb	InSv
0	Quit	PM	0	0	0		0	0	25
2	Post_	RCC2	0	0	0		0	0	0
3	ListSet								
4		RCC2	0	ISTb	Links_00S:	Cside	0, Pside	0	
5	TRNSL	Unit0:	Inact	InSv					
6	TST	Unit1:	Act	InSv					
7	BSY								
8	RTS								
9	OffL								
10	LoadPM_								
11	Disp_								
12	Next_								
13									
14	QueryPM								
15									
16									
17									
18									

- 4 By observing the MAP display, be sure that the card that is to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 7

- 5 Switch the processing activity (SWACT) to the inactive unit by typing
>SWACT
and pressing the Enter key.
- 6 Answer the prompt by typing
>YES
and pressing the Enter key.
- 7 Place a sign on the active unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.
- 8 Busy the inactive PM unit by typing
>bsy INACTIVE
Example of a MAP response:

NTMX72

in an RSC-S (DS-1) Model B RCC2 (continued)

```
RCC2      0 ISTb  Links_00S: CSide  0 , PSide  1
Unit0:    Inact ManB
Unit1:    Act   ISTb
bsy unit 0
RCC2 0 Unit 0      Bsy Passed
```

- 9 Reset the inactive RCC2 unit by typing
>PMRESET UNIT unit_no NORUN
 and pressing the Enter key.
where

unit_no
 is the RCC2 unit number (0 or 1)

Example of a MAP response:

```
RCC2 0 Unit 0      PMReset Passed
```

At the RSCE frame

- 10 Place a sign on the active unit bearing the words *Active unit—Do not touch*. This sign should not be attached by magnets or tape.
- 11 Use the following information to determine where to proceed:

If the card you are replacing has a suffix of	Do
AA	step 12
AB	step 13
anything else	step 14

- 12 Power down the NTMX72AA power converter by setting the POWER switch on the NTMX72 card to the OFF position.
- 13 Power down the NTMX72AB power converter by setting the circuit breaker on the MSP for the inactive unit to the OFF position.
- 14



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the modular supervisory panel (MSP). This protects the equipment against damage caused by static electricity.

NTMX72 in an RSC-S (DS-1) Model B RCC2 (continued)



DANGER


Equipment damage

Take the following precautions when removing or inserting a card:


1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Remove the NTMX72 card as shown in the following figures.

- a** Locate the card to be removed on the appropriate shelf.

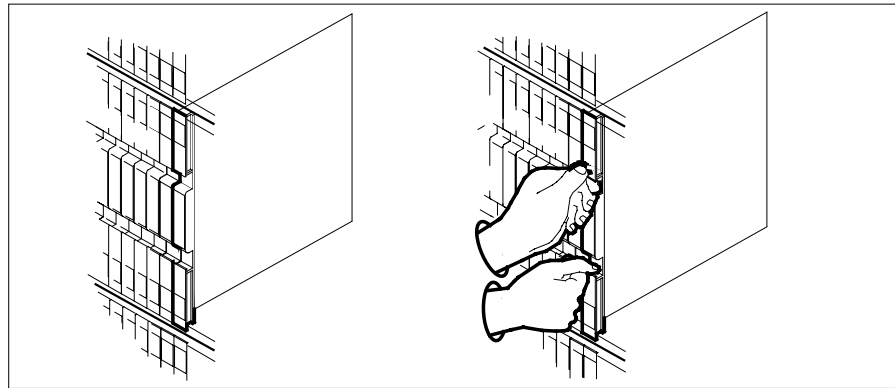

- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

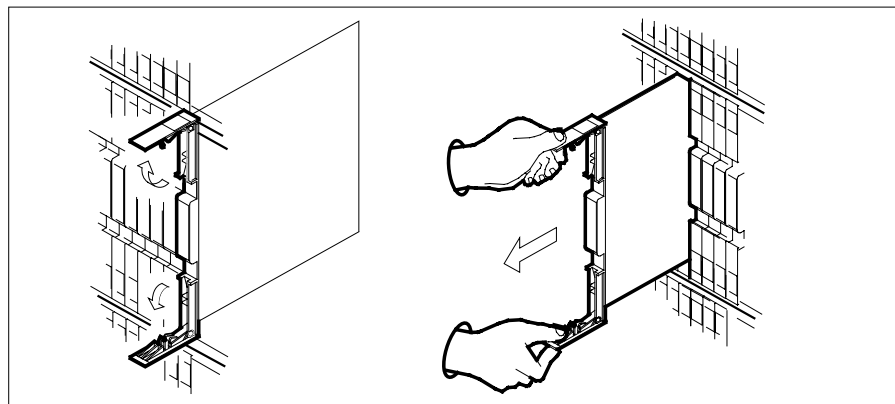


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

- 15** Open the locking levers on the replacement card.

- a** Align the card with the slots in the shelf.


NTMX72 in an RSC-S (DS-1) Model B RCC2 (continued)

- b Gently slide the card into the shelf.

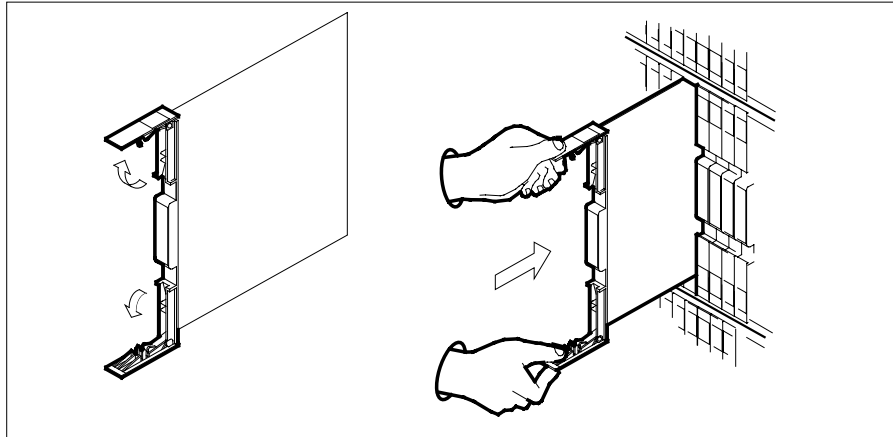

- 16 Seat and lock the card.

- a Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
- b Close the locking levers.

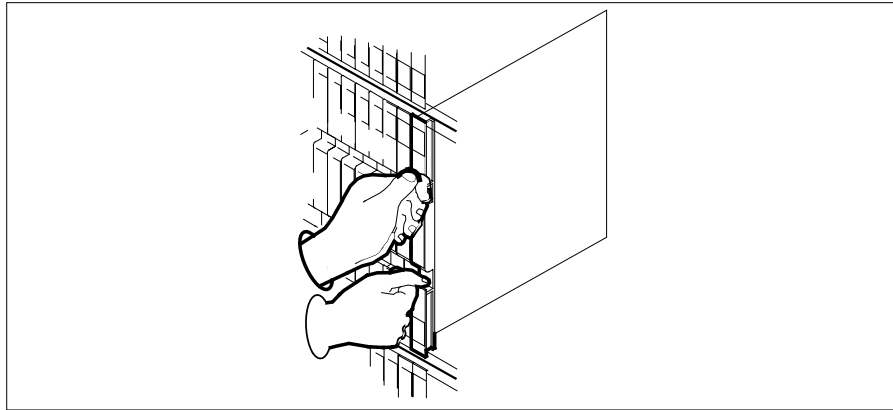

- 17 Power up the inactive RCC2 unit as follows:

- a Ensure the NTMX72 circuit card is fully inserted. A major audible alarm may sound. The alarm is silenced when power is restored to the NTMX72 circuit card.

Note:

- b If the power converter replaced is an NTMX72AA, set the switch on the power converter to the Reset position. Set the associated circuit breaker on the MSP to the ON position.

If both the converter FAIL LED and FRAME FAIL lamp on the MSP go OFF, go to step 18.

NTMX72

in an RSC-S (DS-1) Model B RCC2 (continued)

If both the converter FAIL LED and FRAME FAIL lamp on the MSP do not go OFF, hold the switch on the NTMX72AA power converter in the Reset position and simultaneously set the associated circuit breaker on the MSP to the ON position. Go to step 18.

- c If the power converter replaced is an NTMX72AB, set the associated circuit breaker on the MSP to the ON position for the NTMX72AB converter that was powered down in step 13.

- 18 After replacing the faulty card, load the inactive RCC2 unit by typing

>LOADPM UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive RCC2 unit

If load	Do
passed	step 19
failed	step 26

- 19 Test the inactive unit by typing

>TST UNIT unit_no

and pressing the Enter key.

where

unit_no

is the number of the inactive RCC2 unit

If TST	Do
passed	step 20
failed	step 25

- 20 Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 25
other	step 21

- 21 Return the inactive RCC2 unit to service by typing

>RTS UNIT unit_no

and pressing the Enter key.

where

NTMX72
in an RSC-S (DS-1) Model B RCC2 (end)

unit_no
is the number of the inactive RCC2 unit

If RTS	Do
passed	step 22
failed	step 26

- 22** Remove the sign from the active RCC2 unit.
- 23** Send any faulty cards for repair according to local procedure.
- 24** Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 27.
- 25** Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.
- 26** Obtain further assistance in replacing this card by contacting operating company maintenance personnel.
- 27** You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.

NTMX72 in an RSC-S (PCM-30) Model A RCO2

Application

Use this procedure to replace an NTMX72 card in an RSC-S RCO2.

PEC	Suffixes	Name
NTMX72	AA, AB	Power Converter

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTMX72 in an RSC-S (PCM-30) Model A RCO2 (continued)

Summary of card replacement procedure for an NTMX72 card in an RSC-S RCO2

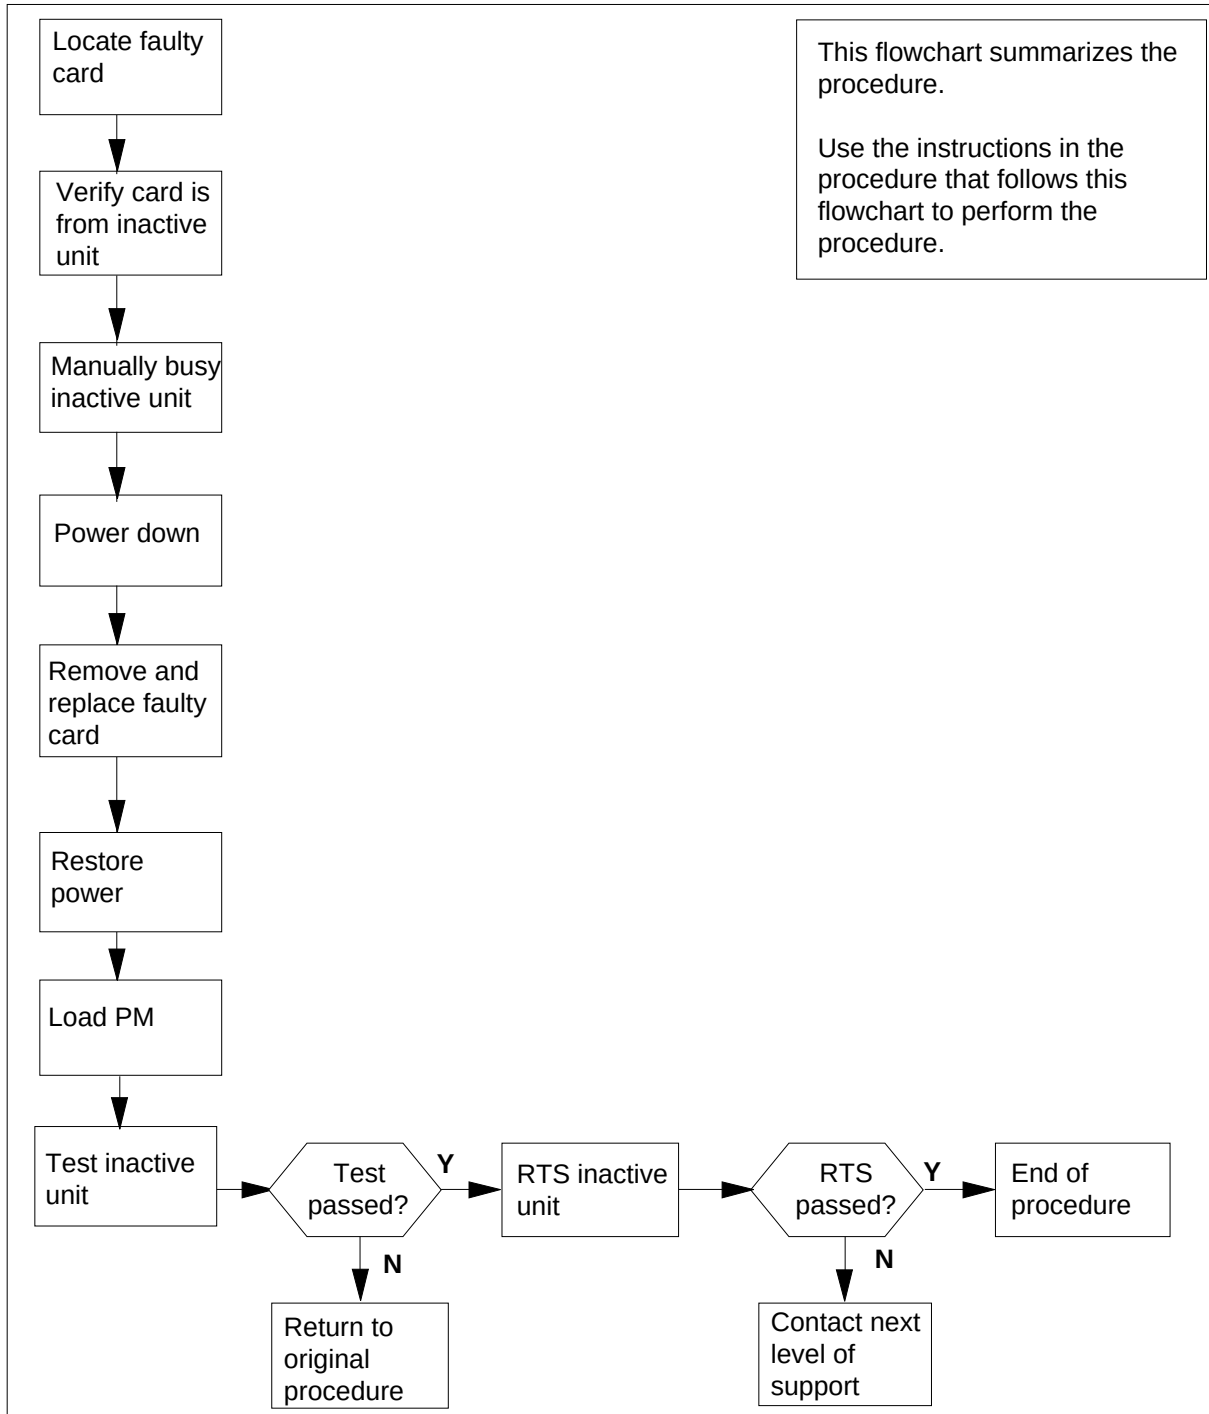

NTMX72 in an RSC-S (PCM-30) Model A RCO2 (continued)

Replacing an NTMX72 card in an RSC-S RCO2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2



CAUTION

Loss of service

When replacing a card in the RCO2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NTMX72 replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Set the MAP display to the PM level and post the RCO2 by typing

>MAPCI;MTC;PM;POST RCO2 rco2_no

and pressing the Enter key.

where

rco2_no

is the number of the RCO2 with the faulty card

Example of a MAP display:

NTMX72

in an RSC-S (PCM-30) Model A RCO2 (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
RCO2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM	0	0	0	0	0	0	25	
2 Post_	RCO2	0	0	0	0	0	0	0	
3 ListSet									
4	RCO2	0	ISTb	Links_00S:	CSide	0,	PSide	0	
5 TRNSL	Unit0:	Inact	InSv						
6 TST	Unit1:	Act	InSv						
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 By observing the MAP display, be sure that the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 7

- 5 Switch the processing activity (SWACT) to the inactive unit by typing
>SWACT
 and pressing the Enter key.
Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.
- 6 Answer the prompt by typing
>YES
 and pressing the Enter key.
- 7 Place a sign on the active unit bearing the words *Active Unit-Do Not Touch*. This sign should not be attached by magnets or tape.
- 8 Busy the inactive PM unit by typing
>bsy UNIT unit_no
 and pressing the Enter key.

NTMX72 in an RSC-S (PCM-30) Model A RCO2 (continued)

where

unit_no

is the number of the faulty RCO2 unit

- 9 Use the following information to determine where to proceed:

If the card you are replacing has a suffix of	Do
AA	step 10
AB	step 11

- 10



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the frame supervisory panel (FSP) of the RCO2. This protects the equipment against damage caused by static electricity.

Power down the NTMX72 power converter by setting the POWER switch on the face plate to the OFF position.

Go to step 12.

- 11



DANGER

Equipment damage

Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.


Power down the NTMX72AB power converter by setting the circuit breaker on the FSP for the inactive unit to the OFF position.

Go to step 12.


- 12 Remove the NTMX72 card as shown in the following figures.
- a Locate the card to be removed on the appropriate shelf.

NTMX72

in an RSC-S (PCM-30) Model A RCO2 (continued)

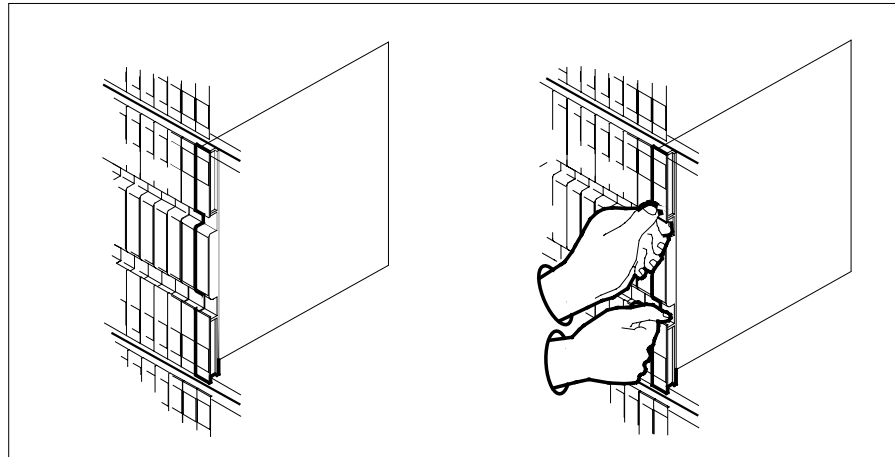

- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

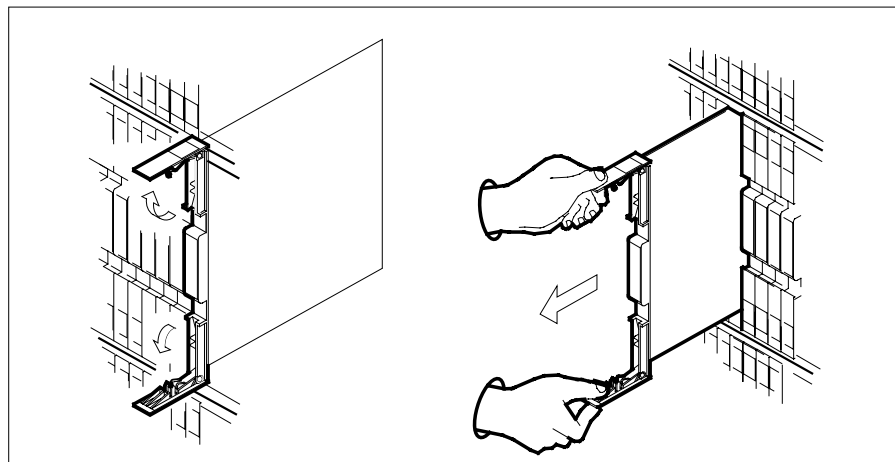


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.


13 Open the locking levers on the replacement card.

- a** Align the card with the slots in the shelf.
- b** Gently slide the card into the shelf.

NTMX72 in an RSC-S (PCM-30) Model A RCO2 (continued)

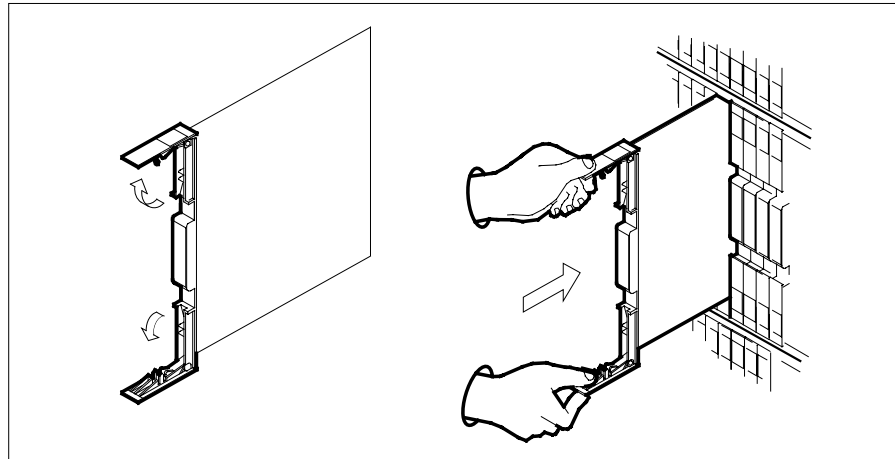

- 14** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

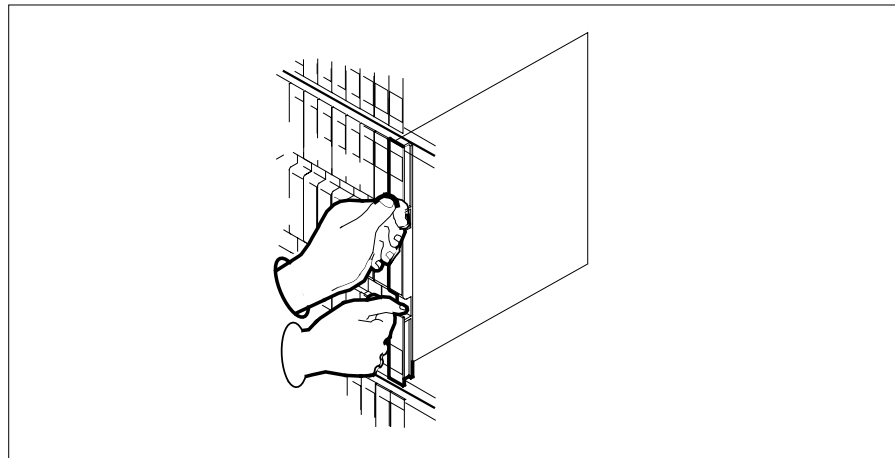

- 15** Power up the inactive RCO2 unit as follows:
- a** Ensure the power converter (NTMX72) is inserted. A major audible alarm may sound. This alarm is silenced when power is restored to the converter.
 - b** If the power converter you replaced is an NTMX72AA, set the POWER switch to the ON position. Set the POWER switch to RESET when setting the circuit breaker on the FSP to the ON position.
 - c** If the power converter you replaced is an NTMX72AB, set the circuit breaker on the FSP to the ON position for the NTMX72AB that was powered down in step 11.

NTMX72

in an RSC-S (PCM-30) Model A RCO2 (continued)

- 16** After replacing the faulty card, load the inactive RCO2 unit by typing
>LOADPM UNIT unit_no
 and pressing the Enter key.
where

unit_no
 is the number of the inactive RCO2 unit

If LOADPM	Do
passed	step 17
failed	step 24

- 17** Test the inactive unit by typing
>TST UNIT unit_no
 and pressing the Enter key.
where

unit_no
 is the number of the inactive RCO2 unit

If TST	Do
passed	step 18
failed	step 23

- 18** Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 23
other	step 19

- 19** Return the inactive RCO2 unit to service by typing
>RTS UNIT unit_no
 and pressing the Enter key.
where

unit_no
 is the number of the inactive RCO2 unit

If RTS	Do
passed	step 20

NTMX72
in an RSC-S (PCM-30) Model A RCO2 (end)

	If RTS	Do
	failed	step 24
20	Remove the sign from the active RCO2 unit.	
21	Send any faulty cards for repair according to local procedure.	
22	Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 25.	
23	Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.	
24	Obtain further assistance in replacing this card by contacting operating company maintenance personnel.	
25	You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.	

NTMX72

in an RSC-S (PCM-30) Model B RCO2

Application

Use this procedure to replace an NTMX72 card in an RSC-S RCO2.

PEC	Suffixes	Name
NTMX72	AA, AB	Power Converter

Common procedures


None

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the procedure that follows the flowchart.

NTMX72 in an RSC-S (PCM-30) Model B RCO2 (continued)

Summary of card replacement procedure for an NTMX72 card in an RSC-S RCO2

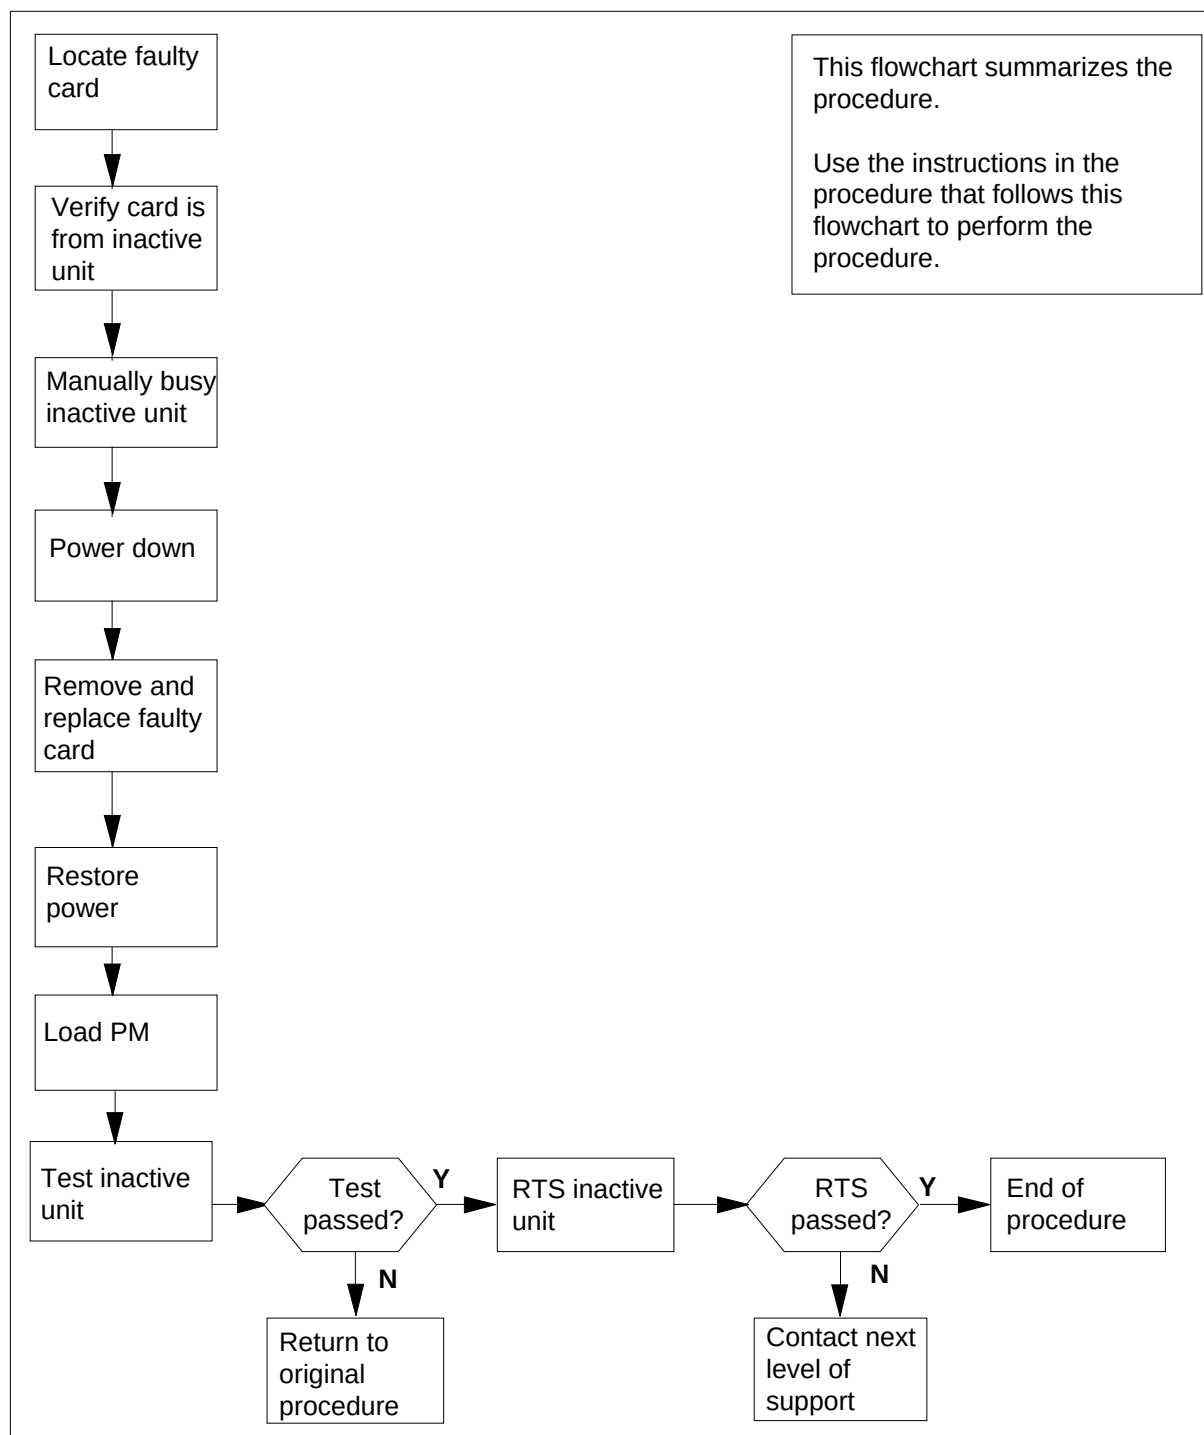

NTMX72 in an RSC-S (PCM-30) Model B RCO2 (continued)

Replacing an NTMX72 card in an RSC-S RCO2

At your Current Location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2

**CAUTION****Loss of service**

When replacing a card in the RCO2, ensure that the unit in which you are replacing the card is *inactive* and that the mate unit is *active*.

Obtain an NTMX72 replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card that is to be removed.

At the MAP terminal

- 3 Set the MAP display to the PM level and post the RCO2 by typing
>MAPCI;MTC;PM;POST RCO2 rco2_no
and pressing the Enter key.

where

rco2_no

is the number of the RCO2 with the faulty card

Example of a MAP display:

NTMX72**in an RSC-S (PCM-30) Model B RCO2** (continued)

CM	MS	IOD	Net	PM	CCS	LNS	Trks	Ext	Appl
.	.	.	.	.	.	.	.	.	.
RCO2			SysB	ManB	OffL	CBsy	ISTb	InSv	
0 Quit	PM		0	0	0	0	0	25	
2 Post_	RCO2		0	0	0	0	0	0	
3 ListSet									
4	RCO2	0	ISTb	Links_00S:	CSide	0,	PSide	0	
5 TRNSL	Unit0:	Inact	InSv						
6 TST	Unit1:	Act	InSv						
7 BSY									
8 RTS									
9 OffL									
10 LoadPM_									
11 Disp_									
12 Next_									
13									
14 QueryPM									
15									
16									
17									
18									

- 4 By observing the MAP display, be sure that the card to be removed is on the inactive unit.

If faulty card is on	Do
active unit	step 5
inactive unit	step 7

- 5 Switch the processing activity (SWACT) to the inactive unit by typing
>SWACT
 and pressing the Enter key.
Note: If the system recommends using the SWACT command with the FORCE option, consult office personnel to determine if use of the FORCE option is advisable.
- 6 Answer the prompt by typing
>YES
 and pressing the Enter key.
- 7 Place a sign on the active unit bearing the words "Active unit—Do not touch." This sign should not be attached by magnets or tape.
- 8 Busy the inactive PM unit by typing
>bsy UNIT unit_no
 and pressing the Enter key.

NTMX72
in an RSC-S (PCM-30) Model B RCO2 (continued)

where

unit_no
is the number of the faulty RCO2 unit

9 Use the following information to determine where to proceed:

If the card you are replacing has a suffix of	Do
AA	step 10
AB	step 11

10



DANGER
Static electricity damage
Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the modular supervisory panel (MSP) of the RCO2. This protects the equipment against damage caused by static electricity.

Power down the NTMX72 power converter by setting the POWER switch on the face plate to the OFF position.

Go to step 12.

11



DANGER
Equipment damage
Take the following precautions when removing or inserting a card:

1. Do not apply direct pressure to the components.
2. Do not force the cards into the slots.

Power down the NTMX72AB power converter by setting the circuit breaker on the MSP for the inactive unit to the OFF position.


Go to step 12.

12 Remove the NTMX72 card as shown in the following figures.


a Locate the card to be removed on the appropriate shelf.

NTMX72

in an RSC-S (PCM-30) Model B RCO2 (continued)

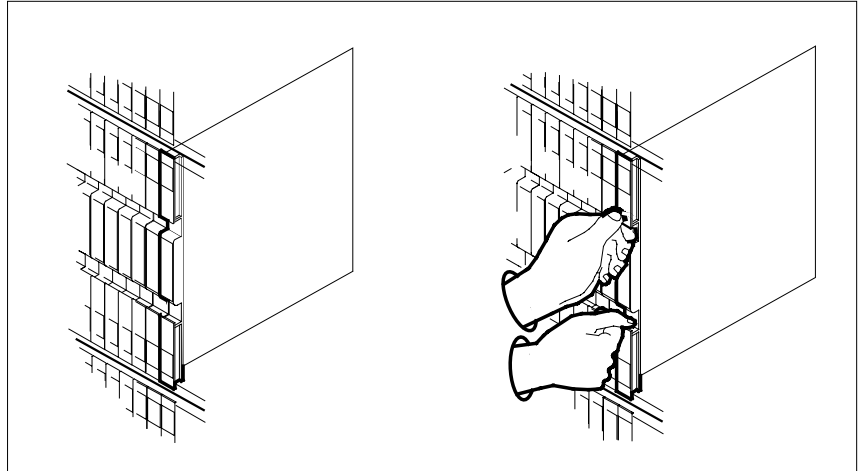

- b** Open the locking levers on the card to be replaced and gently pull the card toward you until it clears the shelf.

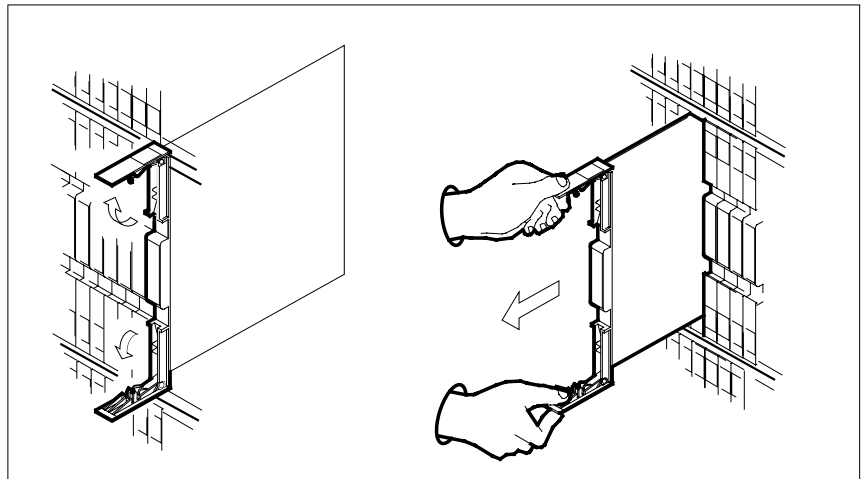


- c** Ensure the replacement card has the same PEC, including suffix, as the card you just removed.

13 Open the locking levers on the replacement card.


- a** Align the card with the slots in the shelf.
- b** Gently slide the card into the shelf.

NTMX72

in an RSC-S (PCM-30) Model B RCO2 (continued)

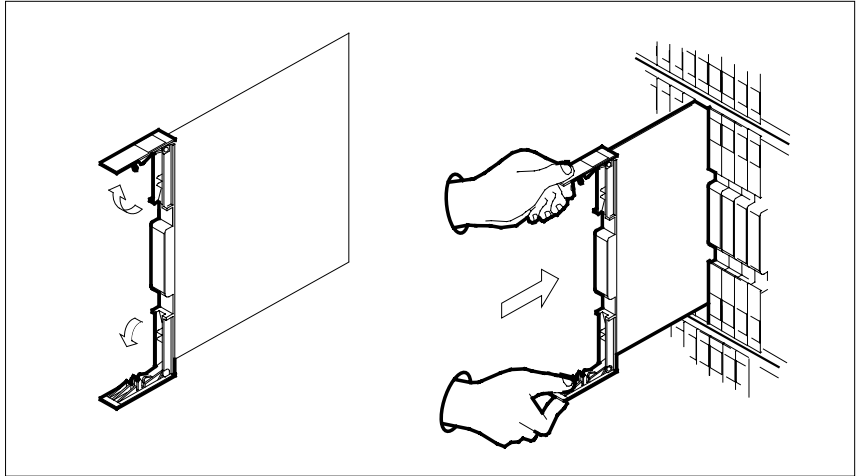

- 14** Seat and lock the card.
- a** Using your fingers or thumbs, push on the upper and lower edges of the faceplate to ensure the card is fully seated in the shelf.
 - b** Close the locking levers.

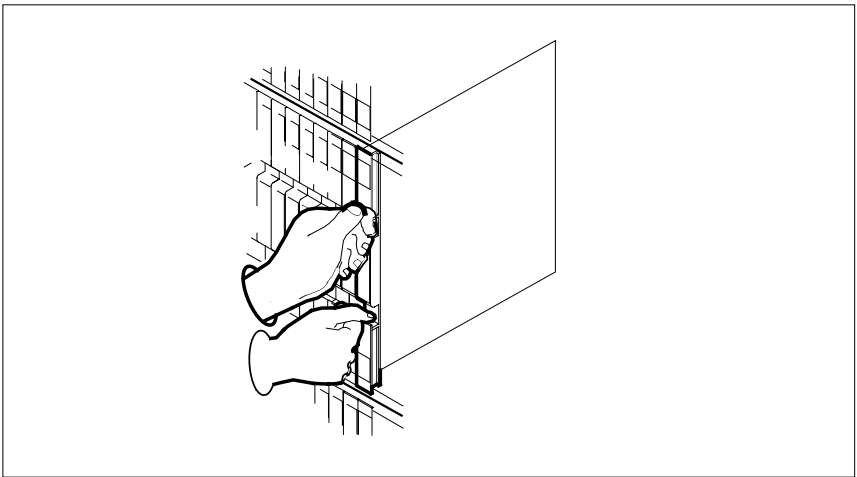

- 15** Power up the inactive RCO2 unit as follows:
- a** Ensure the power converter (NTMX72) is inserted. A major audible alarm may sound. This alarm is silenced when power is restored to the converter.
 - b** If the power converter you replaced is an NTMX72AA, set the POWER switch to the ON position. Set the POWER switch to RESET when setting the circuit breaker on the MSP to the ON position.
 - c** If the power converter you replaced is an NTMX72AB, set the circuit breaker on the MSP to the ON position for the NTMX72AB that was powered down in step 11.

NTMX72

in an RSC-S (PCM-30) Model B RCO2 (continued)

- 16** After replacing the faulty card, load the inactive RCO2 unit by typing
>LOADPM UNIT unit_no
and pressing the Enter key.

where

unit_no
is the number of the inactive RCO2 unit

If LOADPM	Do
passed	step 17
failed	step 24

- 17** Test the inactive unit by typing
>TST UNIT unit_no
and pressing the Enter key.

where

unit_no
is the number of the inactive RCO2 unit

If TST	Do
passed	step 18
failed	step 23

- 18** Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 23
other	step 19

- 19** Return the inactive RCO2 unit to service by typing
>RTS UNIT unit_no
and pressing the Enter key.

where

unit_no
is the number of the inactive RCO2 unit

If RTS	Do
passed	step 20

NTMX72
in an RSC-S (PCM-30) Model B RCO2 (end)

	If RTS	Do
	failed	step 24
20	Remove the sign from the active RCO2 unit.	
21	Send any faulty cards for repair according to local procedure.	
22	Record the date the card was replaced, the serial number of the card, and the symptoms that prompted replacement of the card. Go to step 25.	
23	Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.	
24	Obtain further assistance in replacing this card by contacting operating company maintenance personnel.	
25	You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.	

NTMX72 in an SMA2

Application

Use this procedure to replace an NTMX72 card in an SMA2.

PEC	Suffixes	Name
NTMX72	AA, AB	Power Converter

Common procedures

The following procedures are referenced in this procedure:

- “Locating a faulty card in an SMA2”
- replacing a card
- returning a card


Do not go to a common procedure unless directed to do so in the step-action procedure.

Action

The following flowchart is only a summary of the procedure. To replace the card, use the instructions in the step-action procedure that follows the flowchart.

NTMX72 in an SMA2 (continued)

Summary of card replacement procedure for an NTMX72 card in an SMA2

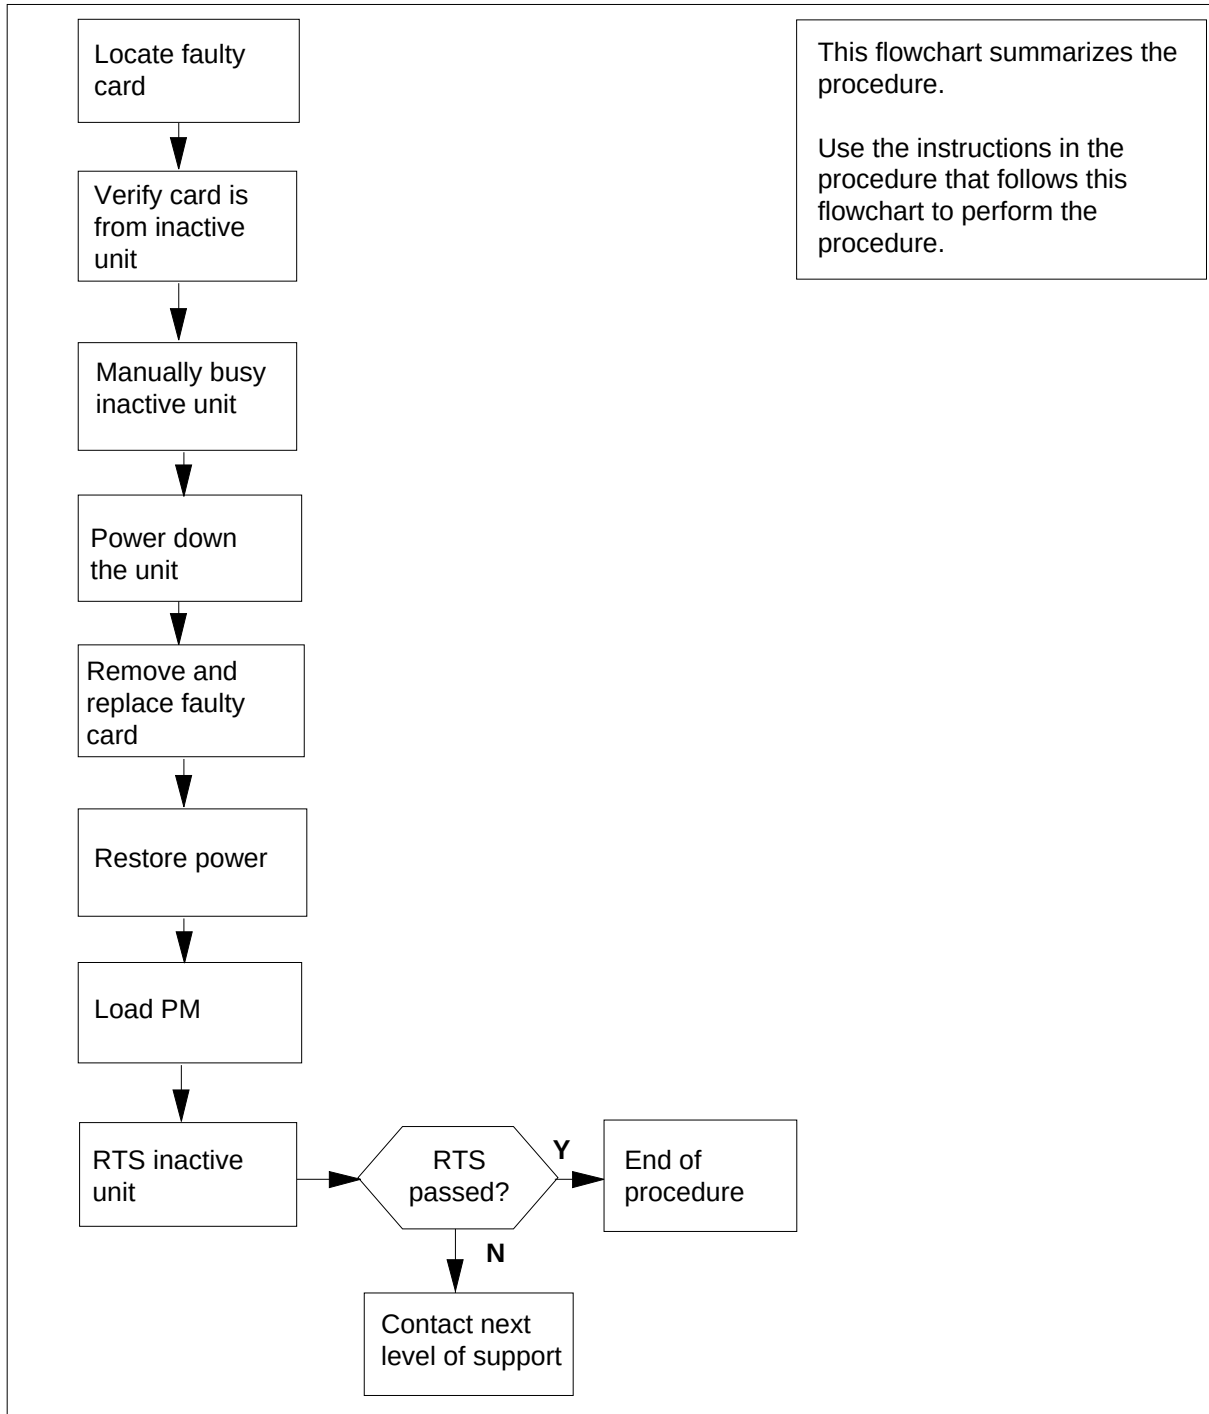

NTMX72 in an SMA2 (continued)

Replacing an NTMX72 card in an SMA2

At your current location

- 1 Proceed only if you have been directed to this card replacement procedure from a step in a maintenance procedure, are using the procedure for verifying or accepting cards, or have been directed to this procedure by your maintenance support group.
- 2 Ensure you know the physical location of the faulty card.

If card location is	Do
known	step 4
unknown	step 3

- 3 Perform the procedure "Locating a faulty card in an SMA2."

4



CAUTION

Loss of service

When replacing a card in the SMA2, ensure the unit in which you are replacing the card is *inactive* and the mate unit is *active*.

Obtain an NTMX72 replacement card. Ensure the replacement card has the same product engineering code (PEC), including suffix, as the card to be removed.

At the MAP terminal

- 5 Ensure the current MAP display is at the PM level and post the SMA2 by typing

>MAPCI;MTC;PM;POST SMA2 sma2_no

and pressing the Enter key.

where

sma2_no

is the number of the SMA2 with the faulty card

Example of a MAP display:

NTMX72 in an SMA2 (continued)

	SysB	ManB	OffL	CBsy	ISTb	InSv
PM	3	0	1	0	2	13
SMA2	0	0	0	0	1	7

SMA2 0 ISTb Links_00S: CSide 0, PSide 0
 Unit0: Act InSv
 Unit1: InAct IsTb

- 6** Observe the MAP display and determine if the faulty card is in the active or the inactive unit.

If faulty card is on	Do
active unit	step 7
inactive unit	step 11

- 7** Switch the processing activity (SWACT) to the inactive unit by typing
>SWACT
 and pressing the Enter key.
 A confirmation prompt for the SWACT command is displayed at the MAP terminal.

If prompt indicates	Do
cannot continue at this time	step 8
can continue at this time	step 9

- 8** Reject the prompt to SWACT of the units by typing
>NO
 and pressing the Enter key.

The system discontinues the SWACT.

- 9** Confirm the system prompt by typing
>YES

and pressing the Enter key.

The system runs a pre-SWACT audit to determine the ability of the inactive unit to accept activity reliably.

Note: A maintenance flag appears when maintenance tasks are in progress. Wait until the flag disappears before proceeding with the next maintenance action.

If the message is	Do
SWACT passed	step 11

NTMX72 in an SMA2 (continued)

	If the message is	Do
	SWACT failed Rea- son: XPM SWACTback	step 10
	SWACT refused by SWACT Controller	step 10
10	The inactive unit could not establish two-way communication with CC and has switched activity back to the originally active unit. You must clear all faults on the inactive unit before attempting to clear the alarm condition on the active unit. Go to step 23.	

At the frame or cabinet

- 11 Place a sign on the active unit bearing the words *Active unit-Do not touch*. This sign should not be attached by magnets or tape.

At the MAP terminal

- 12 Busy the inactive PM unit by typing
>bsy INACTIVE
and pressing the Enter key.

At the frame or cabinet

- 13 Use the following information to determine where to proceed:

	If the card you are replacing has a suffix of	Do
	AA	step 14
	AB	step 15

14



WARNING

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the modular supervisory panel (MSP). This protects the equipment against damage caused by static electricity.

Power down the NTMX72 power converter by setting the POWER switch on the face plate to the OFF position.

Perform the common replacing a card procedure in this document.

NTMX72 in an SMA2 (continued)

Go to step 16.

15



DANGER

Static electricity damage

Before removing any cards, put on a wrist strap and connect it to the wrist strap grounding point on the left side of the modular supervisory panel (MSP). This protects the equipment against damage caused by static electricity.

Power down the NTMX72AB power converter by setting the circuit breaker on the MSP for the inactive unit to the OFF position.

Perform the common replacing a card procedure in this document.

Go to step 16.

16

Power up the inactive SMA2 unit as follows:

- a** Ensure the power converter (NTMX72) is inserted. A major audible alarm may sound. This alarm is silenced when power is restored to the converter.
- b** If the power converter you replaced is an NTMX72AA, set the POWER switch to the ON position. Set the POWER switch to RESET when setting the circuit breaker on the MSP to the ON position.
- c** If the power converter you replaced is an NTMX72AB, set the circuit breaker on the MSP to the ON position for the NTMX72AB that was powered down in step 15.

17

After replacing the faulty card, load the inactive SMA2 unit by typing

>LOADPM INACTIVE

and pressing the Enter key.

where

unit_no

is the number of the inactive SMA2 unit

If load	Do
passed	step 18
failed	step 23

18

Use the following information to determine where to proceed.

If you entered this procedure from	Do
alarm clearing procedures	step 22

NTMX72

in an SMA2 (end)

	If you entered this procedure from	Do
	other	step 19
19	Return the inactive SMA2 unit to service by typing >RTS inactive and pressing the Enter key.	
	If RTS	Do
	passed	step 20
	failed	step 23
20	Remove the sign from the active SMA2 unit.	
21	Go to the common returning a card procedure in this document. Go to step 23.	
22	Return to the procedure that directed you to this procedure. At the point where a faulty card list was produced, identify the next faulty card on the list and go to the appropriate card replacement procedure for that card in this manual.	
23	Obtain further assistance in replacing this card by contacting operating company maintenance personnel.	
24	You have successfully completed this procedure. Return to the maintenance procedure that directed you to this card replacement procedure and continue as directed.	

Index

C

Card

- replacing Vol. 3, 7-150
- card replacement common procedures
 - Activating CCS7 links Vol. 3, 7-2
 - Activity switch with memory match Vol. 3, 7-11
 - Correcting a load mismatch Vol. 3, 7-27
 - Deactivating CCS7 links Vol. 3, 7-42
 - Failure to switch clock mastership Vol. 3, 7-50
 - Loading a PM Vol. 3, 7-59
 - Manually busying LIM-to-MS DS30 links Vol. 2, 5-26, Vol. 3, 7-71
 - Manually busying Series II PM C-side links Vol. 3, 7-77, Vol. 3, 7-90
 - Manually busying SMA C-side links Vol. 3, 7-84
 - Moving an XSG to a spare XLIU Vol. 3, 7-132
 - Replacing a card Vol. 3, 7-144
 - Replacing a line card Vol. 3, 7-156
 - Reseating cards in equipment shelves Vol. 3, 7-163
 - Returning LIM-to-MS DS30 links to service Vol. 2, 5-33, Vol. 3, 7-172
 - Switching the clock source Vol. 3, 7-177
 - Unseating cards in equipment shelves Vol. 3, 7-184
 - Verifying load compatibility of SuperNode cards Vol. 3, 7-188
- card replacement procedures
 - NT2X70 Vol. 4, 1-490, Vol. 4, 1-498
 - NT6X17 Vol. 4, 1-739
 - NT6X18 Vol. 4, 1-783
 - NT6X19 Vol. 4, 1-823
 - NT6X20 Vol. 4, 1-863
 - NT6X21 Vol. 4, 1-920
 - NT6X40 Vol. 5, 1-2, Vol. 5, 1-14, Vol. 5, 1-26
 - NT6X41 Vol. 5, 1-64, Vol. 5, 1-71
 - NT6X42 Vol. 5, 1-101, Vol. 5, 1-107
 - NT6X44 Vol. 5, 1-138
 - NT6X50 Vol. 5, 1-259, Vol. 5, 1-275
 - NT6X53 Vol. 5, 1-487
 - NT6X54 Vol. 5, 1-556
 - NT6X69 Vol. 5, 1-648, Vol. 5, 1-654
 - NT6X71 Vol. 5, 1-721
 - NT6X76 Vol. 5, 1-869
 - NT6X78 Vol. 5, 1-919, Vol. 5, 1-925, Vol. 5, 1-932
 - NT6X80 Vol. 5, 1-951, Vol. 5, 1-957
 - NT6X92 Vol. 6, 1-112, Vol. 6, 1-118, Vol. 6, 1-125
 - NT6X99 Vol. 6, 1-186
 - NTAX74 Vol. 6, 1-303, Vol. 6, 1-315, Vol. 6, 1-327, Vol. 6, 1-337, Vol. 6, 1-347
 - NTAX78 Vol. 6, 1-355, Vol. 6, 1-362
 - NTBX01 Vol. 6, 1-417, Vol. 6, 1-423, Vol. 6, 1-430
 - NTBX02 Vol. 6, 1-508, Vol. 6, 1-515, Vol. 6, 1-523
 - NTBX27 Vol. 6, 1-586
 - NTMX71 Vol. 6, 1-916, Vol. 6, 1-924
 - NTMX72 Vol. 6, 1-1002
 - NTMX73 Vol. 7, 1-54
 - NTMX75 Vol. 7, 1-162
 - NTMX76 Vol. 7, 1-214
 - NTMX79 Vol. 7, 1-390
 - NTMX81 Vol. 7, 1-435, Vol. 7, 1-451
 - NTRX41 Vol. 7, 1-655
 - in CDSN (cabinetized dual shelf network) Vol. 1, 8-197

- in CDTO (cabinetized digital trunk controller offshore) Vol. 1, 8-197
- in CIOE (cabinetized input/output equipment) Vol. 1, 8-197
- in CIPE (cabinetized international peripheral equipment) Vol. 1, 8-197
- in CLGO (cabinetized line group controller offshore) Vol. 1, 8-197
- in CMIS (cabinetized miscellaneous equipment) Vol. 1, 8-197
- in CMS7 (cabinetized message switch 7) Vol. 1, 8-197
- in CTME (cabinetized trunk module equipment) Vol. 1, 8-197
- NTRX42 Vol. 7, 1-766
- NTRX43 Vol. 7, 1-816
- NTRX54 Vol. 7, 1-889
- NTTR46 Vol. 7, 1-902
- NTTR47 Vol. 7, 1-908
- NTTR60 Vol. 7, 1-914
- NTTR66 Vol. 7, 1-921
- NTTR67 Vol. 7, 1-927
- NTTR70 Vol. 7, 1-934
- NTTR71 Vol. 7, 1-941
- NTTR72 Vol. 7, 1-946
- NTTR73 Vol. 7, 1-952
- NTTR74 Vol. 7, 1-956
- NTTR75 Vol. 7, 1-962
- NTTR76 Vol. 7, 1-970
- NTTR77 Vol. 7, 1-979
- NTTR87 Vol. 7, 1-986
- card replacement procedures
 - in a/an Vol. 3, 4-37, Vol. 3, 6-97, Vol. 6, 1-216, Vol. 6, 1-225, Vol. 6, 1-529, Vol. 6, 1-868, Vol. 6, 1-878, Vol. 6, 1-888
- EDRAM Vol. 3, 4-79
- NT0X10 Vol. 4, 1-2, Vol. 4, 1-6, Vol. 4, 1-14, Vol. 4, 1-18, Vol. 4, 1-25, Vol. 4, 1-31, Vol. 4, 1-37, Vol. 4, 1-43
 - in an RMM Vol. 4, 1-10
 - in MTM, STM Vol. 3, 4-88
 - in OAU Vol. 2, 9-7
- NT0X36
 - in an international cabinet auxiliary module Vol. 1, 8-74
 - in CIOE with DDU, DPP, IOC, MTD, or ROS Vol. 1, 8-8
 - in IOE frame Vol. 1, 8-53
- NT0X67
 - in IOC Vol. 1, 9-97
- NT0X70
 - in MTM, TM Vol. 3, 4-27
 - in OAU Vol. 2, 9-7
- NT0X91 Vol. 4, 1-61
 - in CPCE provisioned for DTC, DTCL, IDTC, PDTCL Vol. 1, 8-98
 - in CPCE provisioned for ILGC, LGC, LGCL, PLGC Vol. 1, 8-98
 - in CPCE provisioned for ILTC, LTC, LTCL, PLTC Vol. 1, 8-98
 - in CTME with ISM, MTM, OAU, STM, or TM Vol. 1, 8-29
 - in DCE Vol. 1, 8-112
 - in LME Vol. 1, 8-123
 - in MS6E Vol. 1, 8-133
 - in MS7E Vol. 1, 8-147
 - in NT0X48 single-bay network Vol. 1, 8-159
 - in NT5X13 combined single-bay network Vol. 1, 8-159
 - in NT8X11 dual shelf network Vol. 1, 8-159
 - in ST6E, ST7E Vol. 1, 8-147
 - in TME with ISM, MTM, OAU, STM, and TM Vol. 1, 8-172
- NT0X91AA Vol. 4, 1-49, Vol. 4, 1-90
- NT0X91AE Vol. 4, 1-49, Vol. 4, 1-96, Vol. 4, 1-105
- NT1X00
 - in ISM, MTM, STM Vol. 3, 4-88
- NT1X31
 - in MTM, STM Vol. 3, 4-88
- NT1X54
 - in ISM, TM Vol. 3, 4-88
- NT1X55
 - in IOC Vol. 1, 9-10
- NT1X62
 - in IOC Vol. 1, 9-97
- NT1X67
 - in IOC Vol. 1, 9-21
- NT1X68
 - in IOC Vol. 1, 9-10
- NT1X75
 - in MTM with DRAM, STM with DRAM Vol. 3, 4-27
- NT1X76
 - in DRAM Vol. 3, 4-88
 - in MTM, STM Vol. 3, 4-88

- NT1X77
 - in DRAM Vol. 3, 4-88
 - in MTM, STM Vol. 3, 4-88
- NT1X78
 - in dual DDU shelf Vol. 1, 9-28
 - in single DDU shelf Vol. 1, 9-28
 - in SuperNode ROS Vol. 3, 1-5
 - in SuperNode SE ROS Vol. 3, 1-5
- NT1X79
 - in DRAM Vol. 3, 4-88
 - in MTM, STM Vol. 3, 4-88
- NT1X80
 - in ISM, MTM, STM Vol. 3, 4-79
- NT1X81
 - in ISM, MTM, STM Vol. 3, 4-79
- NT1X89
 - in IOC Vol. 1, 9-37
- NT1X90
 - in ISM, MTM, STM Vol. 3, 4-88
- NT2X01
 - in ISM, MTM, STM Vol. 3, 4-88
- NT2X02
 - in LM line drawer Vol. 2, 2-16
- NT2X03
 - in LM line drawer Vol. 2, 2-16
- NT2X05
 - in LM controller Vol. 2, 2-30
 - in remote line controller Vol. 2, 10-22
 - in RLM Vol. 2, 10-22
- NT2X06 Vol. 4, 1-114, Vol. 4, 1-121,
Vol. 4, 1-129, Vol. 4, 1-136, Vol. 4, 1-144,
Vol. 4, 1-153, Vol. 4, 1-162
 - in DCM, DES Vol. 1, 4-47
 - in MTM, TM Vol. 3, 4-64
 - in NT0X48 single-bay network Vol. 2, 8-40
 - in OAU Vol. 2, 9-14
- NT2X07
 - in DCM, DES Vol. 1, 4-47
 - in NT0X48 single-bay network Vol. 2, 8-40
- NT2X09 Vol. 4, 1-171, Vol. 4, 1-178,
Vol. 4, 1-186, Vol. 4, 1-194, Vol. 4, 1-202,
Vol. 4, 1-211, Vol. 4, 1-220
 - in DRAM Vol. 3, 4-64
 - in EDRAM Vol. 3, 4-64
 - in MTM, TM Vol. 3, 4-64
 - in OAU Vol. 2, 9-14
- NT2X10 Vol. 4, 1-229, Vol. 4, 1-233,
Vol. 4, 1-237, Vol. 4, 1-244, Vol. 4, 1-251,
Vol. 4, 1-258
 - in ISM, MTM, STM Vol. 3, 4-88
- NT2X11 Vol. 4, 1-265, Vol. 4, 1-270,
Vol. 4, 1-278, Vol. 4, 1-282, Vol. 4, 1-289,
Vol. 4, 1-298, Vol. 4, 1-307
 - in an RMM Vol. 4, 1-274
 - in ISM, MTM, STM Vol. 3, 4-88
- NT2X16
 - in LM line drawer Vol. 2, 2-16
- NT2X20
 - in LM line drawer Vol. 2, 2-24, Vol. 2, 10-16
- NT2X21
 - in LM controller Vol. 2, 2-9
 - in remote line controller Vol. 2, 10-9
 - in RLM Vol. 2, 10-9
- NT2X22
 - in LM controller Vol. 2, 2-9
 - in remote line controller Vol. 2, 10-9
 - in RLM Vol. 2, 10-9
- NT2X23
 - in LM controller Vol. 2, 2-9
 - in remote line controller Vol. 2, 10-9
 - in RLM Vol. 2, 10-9
- NT2X24
 - in LM controller Vol. 2, 2-9
 - in remote line controller Vol. 2, 10-9
 - in RLM Vol. 2, 10-9
- NT2X25
 - in LM controller Vol. 2, 2-9
 - in remote line controller Vol. 2, 10-9
 - in RLM Vol. 2, 10-9
- NT2X26
 - in LM controller Vol. 2, 2-9
 - in remote line controller Vol. 2, 10-9
 - in RLM Vol. 2, 10-9
- NT2X27
 - in LM controller Vol. 2, 2-9
 - in remote line controller Vol. 2, 10-9
 - in RLM Vol. 2, 10-9
- NT2X32
 - in DCM, DES Vol. 1, 4-8
- NT2X33
 - in DCM, DES Vol. 1, 4-8
 - in LM controller Vol. 2, 2-9
- NT2X34
 - in DCM, DES Vol. 1, 4-8
 - in LM controller Vol. 2, 2-9
- NT2X35
 - in DCM Vol. 1, 4-13

- NT2X36
 - in DCM Vol. 1, 4-27
 - in LM controller Vol. 2, 2-9
- NT2X37
 - in DCM, DES Vol. 1, 4-8
- NT2X38
 - in DCM, DES Vol. 1, 4-8
- NT2X41
 - in OAU Vol. 2, 9-7
- NT2X42
 - in OAU Vol. 2, 9-7
- NT2X43
 - in ISM, MTM, STM Vol. 3, 4-88
 - in OAU Vol. 2, 9-7
- NT2X45
 - in MTM, TM Vol. 3, 4-27
 - in OAU Vol. 2, 9-7
- NT2X47
 - in ISM, MTM, STM Vol. 3, 4-88
- NT2X48 Vol. 4, 1-316, Vol. 4, 1-321, Vol. 4, 1-326
 - in ISM, MTM, STM Vol. 3, 4-88
- NT2X50
 - in MTM, STM Vol. 3, 4-88
- NT2X53
 - in MTM, TM Vol. 3, 4-27
 - in OAU Vol. 2, 9-7
- NT2X55 Vol. 4, 1-331
 - in ISM, MTM, STM Vol. 3, 4-88
- NT2X56
 - in ISM, MTM, STM Vol. 3, 4-88
- NT2X57 Vol. 4, 1-338, Vol. 4, 1-342, Vol. 4, 1-350, Vol. 4, 1-355, Vol. 4, 1-362, Vol. 4, 1-369, Vol. 4, 1-376
 - in an RMM Vol. 4, 1-346
 - in ISM, MTM, STM Vol. 3, 4-88
 - in OAU Vol. 2, 9-7
- NT2X59 Vol. 4, 1-383, Vol. 4, 1-387, Vol. 4, 1-401, Vol. 4, 1-406, Vol. 4, 1-413, Vol. 4, 1-420, Vol. 4, 1-427
 - in an RMM Vol. 4, 1-394
 - in MTM, TM Vol. 3, 4-27
 - in OAU Vol. 2, 9-7
- NT2X65
 - in ISM, MTM, STM, TM Vol. 3, 4-88
- NT2X66
 - in ISM, MTM, STM, TM Vol. 3, 4-88
- NT2X70 Vol. 4, 1-434, Vol. 4, 1-441, Vol. 4, 1-464, Vol. 4, 1-478, Vol. 4, 1-506, Vol. 4, 1-517, Vol. 4, 1-526
 - in 6STA or MSB6 Vol. 2, 7-20
 - in an HIE Vol. 4, 1-455
 - in DCM, DES Vol. 1, 4-47
 - in DRAM Vol. 3, 4-64
 - in DTC, DTCL, IDTC, PDTC Vol. 3, 6-42
 - in EDRAM Vol. 3, 4-64
 - in ILGC, LGC, LGCI, PLGC Vol. 3, 6-42
 - in ILTC, LTC, LTCL, PLTC Vol. 3, 6-42
 - in IOC Vol. 1, 9-44
 - in LM controller Vol. 2, 2-36
 - in NT5X13 combined single-bay network Vol. 2, 8-40
 - in NT8X11 dual shelf network Vol. 2, 8-40
 - in remote line module Vol. 2, 10-28
 - in RLM Vol. 2, 10-28
 - in ST7G of MSB7 Vol. 2, 7-35
 - in STA7 or MSB7 Vol. 2, 7-20
 - in STCM of MSB6 Vol. 2, 7-35
 - in STM Vol. 3, 4-64
- NT2X71
 - in ISM, MTM, STM Vol. 3, 4-88
- NT2X72
 - in ISM, TM Vol. 3, 4-88
- NT2X75
 - in ISM, MTM, STM Vol. 3, 4-88
- NT2X77
 - in ISM, MTM, STM Vol. 3, 4-88
- NT2X78
 - in TM Vol. 3, 4-88
- NT2X80
 - in MTM, STM Vol. 3, 4-88
- NT2X81
 - in TM Vol. 3, 4-88
- NT2X82
 - in ISM, TM Vol. 3, 4-88
- NT2X83
 - in TM Vol. 3, 4-88
- NT2X84
 - in ISM, TM Vol. 3, 4-88
- NT2X85
 - in ISM, TM Vol. 3, 4-88
- NT2X86
 - in ISM, TM Vol. 3, 4-88
- NT2X88
 - in TM Vol. 3, 4-88

-
- NT2X90 Vol. 4, 1-533, Vol. 4, 1-538,
Vol. 4, 1-543, Vol. 4, 1-557, Vol. 4, 1-562,
Vol. 4, 1-569, Vol. 4, 1-576
 - in an RMM Vol. 4, 1-551
 - in ISM, TM Vol. 3, 4-88
 - NT2X92
 - in TM Vol. 3, 4-88
 - NT2X95
 - in TM Vol. 3, 4-88
 - NT2X96
 - in ISM, MTM, STM Vol. 3, 4-88
 - NT2X98
 - in ISM, TM Vol. 3, 4-88
 - NT3X02
 - in ISM, MTM, STM Vol. 3, 4-88
 - NT3X03
 - in ISM, MTM, STM Vol. 3, 4-88
 - NT3X04 Vol. 4, 1-583
 - in ISM, TM Vol. 3, 4-88
 - NT3X05
 - in MTM, STM Vol. 3, 4-88
 - NT3X06
 - in ISM, TM Vol. 3, 4-88
 - NT3X07
 - in ISM, TM Vol. 3, 4-88
 - NT3X08
 - in ISM, MTM, STM Vol. 3, 4-88
 - NT3X09 Vol. 4, 1-590, Vol. 4, 1-596,
Vol. 4, 1-601, Vol. 4, 1-612, Vol. 4, 1-617,
Vol. 4, 1-624, Vol. 4, 1-634, Vol. 4, 1-644
 - in an RMM Vol. 4, 1-607
 - in ISM, MTM, STM Vol. 3, 4-88
 - NT3X16
 - in SuperNode ROS Vol. 3, 1-14
 - in SuperNode SE ROS Vol. 3, 1-14
 - NT3X17
 - in NT0X48 single-bay network Vol. 2, 8-72
 - NT3X18
 - in NT0X48 single-bay network Vol. 2, 8-72
 - NT3X19
 - in NT0X48 single-bay network Vol. 2, 8-72
 - NT3X20
 - in NT0X48 single-bay network Vol. 2, 8-72
 - NT3X21
 - in NT0X48 single-bay network Vol. 2, 8-72
 - NT3X22
 - in NT0X48 single-bay network Vol. 2, 8-72
 - NT3X23
 - in NT0X48 single-bay network Vol. 2, 8-72
 - NT3X24
 - in NT0X48 single-bay network Vol. 2, 8-72
 - NT3X47
 - in remote line controller Vol. 2, 10-9
 - in RLM Vol. 2, 10-9
 - NT3X48
 - in remote line controller Vol. 2, 10-9
 - in RLM Vol. 2, 10-9
 - NT3X49
 - in remote line controller Vol. 2, 10-9
 - in RLM Vol. 2, 10-9
 - NT3X65
 - in DCM Vol. 1, 4-37
 - NT3X67
 - in MTM, STM Vol. 3, 4-88
 - NT3X68
 - in MTM, STM Vol. 3, 4-88
 - NT3X70
 - in NT5X13 combined single-bay network
Vol. 2, 8-72
 - NT3X71
 - in NT5X13 combined single-bay network
Vol. 2, 8-72
 - NT3X72
 - in NT5X13 combined single-bay network
Vol. 2, 8-72
 - NT3X73
 - in NT5X13 combined single-bay network
Vol. 2, 8-72
 - NT3X74
 - in NT5X13 combined single-bay network
Vol. 2, 8-72
 - in NT8X11 dual-shelf network Vol. 2, 8-72
 - NT3X75
 - in NT5X13 combined single-bay network
Vol. 2, 8-72
 - in NT8X11 dual-shelf network Vol. 2, 8-72
 - NT3X76
 - in NT5X13 combined single-bay network
Vol. 2, 8-72
 - in NT8X11 dual-shelf network Vol. 2, 8-72
 - NT3X82 Vol. 4, 1-653
 - in OAU Vol. 2, 9-7
 - NT3X83 Vol. 4, 1-660
 - in OAU Vol. 2, 9-7
 - NT3X84
 - in OAU Vol. 2, 9-7
 - NT3X85
 - in OAU Vol. 2, 9-7
-

- NT3X86
 - in NT5X13 combined single-bay network Vol. 2, 8-72
- NT3X91
 - in ISM, TM Vol. 3, 4-88
- NT4X23
 - in ISM, MTM, STM Vol. 3, 4-88
- NT4X65
 - in MTM, STM, TM Vol. 3, 4-27
 - in OAU Vol. 2, 9-7
- NT4X97 Vol. 4, 1-668, Vol. 4, 1-673, Vol. 4, 1-680
 - in ISM, MTM, STM Vol. 3, 4-44
- NT4X98 Vol. 4, 1-687, Vol. 4, 1-694
 - in ISM, MTM, STM Vol. 3, 4-44
- NT5X03
 - in ISM, TM Vol. 3, 4-88
- NT5X04
 - in ISM, TM Vol. 3, 4-88
- NT5X06
 - in TM Vol. 3, 4-88
- NT5X25
 - in ISM, TM Vol. 3, 4-88
- NT5X29
 - in ISM, MTM, STM Vol. 3, 4-88
- NT5X30
 - in ISM, MTM, STM, TM Vol. 3, 4-88
- NT6X1205
 - in DTC, IDTC, PDTC Vol. 3, 6-19
 - in ILGC, LGC, PLGC Vol. 3, 6-19
 - in ILTC, LTC, PLTC Vol. 3, 6-19
- NT6X17 Vol. 4, 1-703, Vol. 4, 1-707, Vol. 4, 1-711, Vol. 4, 1-715, Vol. 4, 1-723, Vol. 4, 1-731
 - in ILCM, LCM, LCME Vol. 2, 1-39
 - in LM line drawer Vol. 2, 2-24, Vol. 2, 10-16
- NT6X18 Vol. 4, 1-743, Vol. 4, 1-747, Vol. 4, 1-751, Vol. 4, 1-755, Vol. 4, 1-759, Vol. 4, 1-767, Vol. 4, 1-775
 - in LCM, LCME Vol. 2, 1-39
 - in LM line drawer Vol. 2, 2-24, Vol. 2, 10-16
- NT6X19 Vol. 4, 1-787, Vol. 4, 1-791, Vol. 4, 1-795, Vol. 4, 1-799, Vol. 4, 1-807, Vol. 4, 1-815
 - in LCM, LCME Vol. 2, 1-39
- NT6X20 Vol. 4, 1-827, Vol. 4, 1-831, Vol. 4, 1-835, Vol. 4, 1-839, Vol. 4, 1-847, Vol. 4, 1-855
 - in LCM Vol. 2, 1-73
- NT6X21 Vol. 4, 1-867, Vol. 4, 1-871, Vol. 4, 1-875, Vol. 4, 1-883, Vol. 4, 1-893, Vol. 4, 1-902, Vol. 4, 1-911
 - in an LCM Vol. 4, 1-879
 - in LCM, LCME Vol. 2, 1-39
- NT6X23
 - in LCM Vol. 2, 1-73
- NT6X27 Vol. 4, 1-924, Vol. 4, 1-931, Vol. 4, 1-938
 - in IDTC, ILGC, ILTC Vol. 3, 6-124
 - in PDTC, PLGC, PLTC Vol. 3, 6-124
- NT6X28
 - in IDTC, ILGC, ILTC Vol. 3, 6-31
 - in IPDTC, PLGC, LTCO, PLTC Vol. 3, 6-31
- NT6X30 Vol. 4, 1-945, Vol. 4, 1-960, Vol. 4, 1-974, Vol. 4, 1-988, Vol. 4, 1-1002
 - in LCE, LCEI Vol. 2, 1-47
- NT6X33
 - in ILCM, LCM, LCME Vol. 2, 1-39
- NT6X36 Vol. 4, 1-1021, Vol. 4, 1-1031, Vol. 4, 1-1036
 - in an FSP Vol. 4, 1-1016, Vol. 4, 1-1026
 - in LCE frame Vol. 1, 8-192
 - in LCEI frame Vol. 1, 8-192
- NT6X40 Vol. 5, 1-38, Vol. 5, 1-51
 - in 6STA of MSB6 Vol. 2, 7-48
 - in DTC, DTCL, IDTC, DTCL, PDTC Vol. 3, 6-59
 - in ILGC, LGC, LGCL, LGCL, PLGC Vol. 3, 6-59
 - in ILTC, LTC, LTCL, LTCL, PLTC Vol. 3, 6-59
 - in STA7 of MSB7 Vol. 2, 7-48
- NT6X41 Vol. 5, 1-78, Vol. 5, 1-87, Vol. 5, 1-95
 - in DTC, DTCL, IDTC, DTCL, PDTC Vol. 3, 6-31
 - in ILGC, LGC, LGCL, LGCL, PLGC Vol. 3, 6-31
 - in ILTC, LTC, LTCL, LTCL, PLTC Vol. 3, 6-31
- NT6X42 Vol. 5, 1-114, Vol. 5, 1-122
 - in DTC, DTCL, IDTC, DTCL, PDTC Vol. 3, 6-31
 - in ILGC, LGC, LGCL, LGCL, PLGC Vol. 3, 6-31
 - in ILTC, LTC, LTCL, LTCL, PLTC Vol. 3, 6-31
- NT6X43
 - in DTC, LGC, LTC Vol. 3, 6-31

- NT6X44 Vol. 5, 1-130, Vol. 5, 1-144,
Vol. 5, 1-158
in DTC, DTCL, IDTC, DTCO, PDTC
Vol. 3, 6-31
in ILGC, LGC, LGCI, LGCO, PLGC
Vol. 3, 6-31
in ILTC, LTC, LTCL, LTCO, PLTC
Vol. 3, 6-31
- NT6X45 Vol. 5, 1-166, Vol. 5, 1-172,
Vol. 5, 1-178, Vol. 5, 1-184
in 6STA of MSB6 Vol. 2, 7-62
in STA7 of MSB7 Vol. 2, 7-62
- NT6X46
in 6STA of MSB6 Vol. 2, 7-62
in STA7 of MSB7 Vol. 2, 7-62
- NT6X47 Vol. 5, 1-190, Vol. 5, 1-196,
Vol. 5, 1-202
in 6STA of MSB6 Vol. 2, 7-62
in STA7 of MSB7 Vol. 2, 7-62
- NT6X48 Vol. 3, 6-72, Vol. 3, 6-82, Vol. 5, 1-208
- NT6X50 Vol. 5, 1-216, Vol. 5, 1-223,
Vol. 5, 1-237, Vol. 5, 1-244
in an HIE Vol. 5, 1-230
in DTC, DTCL, IDTC, DTCO, DTCOI
Vol. 3, 6-124
in ILGC LGC, LGCI, LGCO Vol. 3, 6-124
in ILTC, LTC, LTCL, LTCO Vol. 3, 6-124
- NT6X51 Vol. 5, 1-291, Vol. 5, 1-298,
Vol. 5, 1-305, Vol. 5, 1-312, Vol. 5, 1-324,
Vol. 5, 1-332, Vol. 5, 1-339, Vol. 5, 1-347
in an LCM Vol. 5, 1-319
in LCM, ILCM Vol. 2, 1-31
- NT6X52 Vol. 5, 1-355, Vol. 5, 1-361,
Vol. 5, 1-367, Vol. 5, 1-373, Vol. 5, 1-384,
Vol. 5, 1-392, Vol. 5, 1-401, Vol. 5, 1-410
in an LCM Vol. 5, 1-379
in LCM, ILCM Vol. 2, 1-31
- NT6X53 Vol. 5, 1-418, Vol. 5, 1-425,
Vol. 5, 1-432, Vol. 5, 1-444, Vol. 5, 1-460,
Vol. 5, 1-469, Vol. 5, 1-478
in an LCM Vol. 5, 1-453
in LCM, LCME Vol. 2, 1-79
- NT6X54 Vol. 5, 1-493, Vol. 5, 1-500,
Vol. 5, 1-509, Vol. 5, 1-518, Vol. 5, 1-533,
Vol. 5, 1-542, Vol. 5, 1-549
in an LCM Vol. 5, 1-527
in ILCM, LCM Vol. 2, 1-13
- NT6X55
in DTC, IDTC, DTCO, PDTC Vol. 3, 6-124
in ILGC, LGC, LGCO, PLGC Vol. 3, 6-124
in ILTC, LTC, LTCO, PLTC Vol. 3, 6-124
- NT6X60 Vol. 5, 1-565, Vol. 5, 1-572,
Vol. 5, 1-579, Vol. 5, 1-587
- NT6X62
in DTC, IDTC, DTCO, PDTC Vol. 3, 6-31
in ILGC, LGCO, PLGC Vol. 3, 6-31
- NT6X65
in STCM of MSB6 Vol. 2, 7-70
- NT6X66
in ST7G of MSB7 Vol. 2, 7-70
- NT6X68
in MSB6 Vol. 2, 7-55
in MSB7 Vol. 2, 7-55
- NT6X69 Vol. 5, 1-595, Vol. 5, 1-605,
Vol. 5, 1-613, Vol. 5, 1-622, Vol. 5, 1-630,
Vol. 5, 1-639, Vol. 5, 1-670, Vol. 5, 1-678
in DTC, DTCL, IDTC, DTCO, PDTC
Vol. 3, 6-31
in ILGC, LGC, LGCI, LGCO, PLGC
Vol. 3, 6-31
in ILTC, LTC, LTCL, LTCO, PLTC
Vol. 3, 6-31
- NT6X70
in LGC, LGCI Vol. 3, 6-31
in LTC, LTCL Vol. 3, 6-31
- NT6X71 Vol. 5, 1-684, Vol. 5, 1-688,
Vol. 5, 1-692, Vol. 5, 1-696, Vol. 5, 1-705,
Vol. 5, 1-713
in LCM, LCME Vol. 2, 1-39
- NT6X72 Vol. 5, 1-725
- NT6X73 Vol. 5, 1-734, Vol. 5, 1-738,
Vol. 5, 1-742, Vol. 5, 1-751
in an HIE Vol. 5, 1-746
- NT6X74 Vol. 5, 1-755, Vol. 5, 1-761,
Vol. 5, 1-775, Vol. 5, 1-782, Vol. 5, 1-790,
Vol. 5, 1-799, Vol. 5, 1-808
in an RMM Vol. 5, 1-768
- NT6X75 Vol. 5, 1-817, Vol. 5, 1-824,
Vol. 5, 1-831, Vol. 5, 1-838
- NT6X76 Vol. 5, 1-845, Vol. 5, 1-853,
Vol. 5, 1-861
in LCM, LCME Vol. 2, 1-39
- NT6X78 Vol. 5, 1-876, Vol. 5, 1-883,
Vol. 5, 1-891, Vol. 5, 1-898, Vol. 5, 1-905,
Vol. 5, 1-912, Vol. 5, 1-946
in ILGC Vol. 3, 6-90
in ILTC Vol. 3, 6-90
in LGC Vol. 3, 6-90

- in LGCO Vol. 3, 6-90
- in LGOI Vol. 3, 6-90
- in LTC Vol. 3, 6-90
- in LTCO Vol. 3, 6-90
- in LTCOI Vol. 3, 6-90
- in PLGC Vol. 3, 6-90
- in PLTC Vol. 3, 6-90
- NT6X79
 - in DTC, DTCO, PDTC Vol. 3, 6-31
 - in LGC, LGCI Vol. 3, 6-31
 - in LTC, LTCI Vol. 3, 6-31
- NT6X80 Vol. 5, 1-964, Vol. 5, 1-972, Vol. 5, 1-981
- NT6X85 Vol. 6, 1-2, Vol. 6, 1-13, Vol. 6, 1-24
- NT6X86 Vol. 6, 1-30, Vol. 6, 1-39
- NT6X87 Vol. 6, 1-48, Vol. 6, 1-56
- NT6X92 Vol. 6, 1-64, Vol. 6, 1-71, Vol. 6, 1-79, Vol. 6, 1-87, Vol. 6, 1-95, Vol. 6, 1-104, Vol. 6, 1-140, Vol. 6, 1-243
 - in DTC, DTCL, IDTC, DTCO, PDTC Vol. 3, 6-31
 - in ILGC, LGC, LGCI, LGCO, PLGC Vol. 3, 6-31
 - in ILTC, LTC, LTCI, LGCO, PLTC Vol. 3, 6-31
- NT6X93
 - in ILCM, LCM Vol. 2, 1-39
- NT6X94
 - in ILCM Vol. 2, 1-39
- NT6X95
 - in LCME Vol. 2, 1-73
- NT6X98
 - in ILCM, LCM, LCME Vol. 2, 1-39
- NT6X99 Vol. 6, 1-146, Vol. 6, 1-150, Vol. 6, 1-154, Vol. 6, 1-158, Vol. 6, 1-162, Vol. 6, 1-170, Vol. 6, 1-178
 - in LCM, LCME Vol. 2, 1-39
- NT7X05 Vol. 6, 1-190, Vol. 6, 1-198, Vol. 6, 1-207, Vol. 6, 1-234, Vol. 6, 1-252
 - in LGC, LGCI, LTC, LTCI, DTC, DTCL Vol. 3, 6-31
- NT8X02 Vol. 6, 1-261, Vol. 6, 1-265
- NT8X12
 - in NT8X11 dual-shelf network Vol. 2, 8-72
- NT8X13
 - in NT8X11 dual-shelf network Vol. 2, 8-72
- NT8X14
 - in NT8X11 dual-shelf network Vol. 2, 8-72
- NT8X18 Vol. 6, 1-270
- NT8X99
 - in LCM Vol. 2, 1-79
- NT9X10
 - in SuperNode CM Vol. 1, 2-22
 - in SuperNode SE CM/SLM Vol. 1, 3-85
- NT9X12
 - in SuperNode CM Vol. 1, 2-22
 - in SuperNode SE CM/SLM Vol. 1, 3-85
 - in SuperNode SLM Vol. 3, 3-137
- NT9X13
 - in an ELPP LIM unit Vol. 1, 5-36
 - in ENET 128k Vol. 2, 8-49
 - in ENET 64k Vol. 2, 8-49
 - in file processor Vol. 1, 7-43
 - in LIM unit of LPP Vol. 2, 3-89
 - in SuperNode CM Vol. 1, 2-22
 - in SuperNode MS Vol. 2, 5-39
 - in SuperNode SE 16k ENET Vol. 1, 6-77
 - in SuperNode SE CM/SLM Vol. 1, 3-85
 - in SuperNode SE ENI shelf Vol. 1, 6-77
 - in SuperNode SE MS Vol. 2, 6-25
- NT9X14
 - in APU in LPP LIS Vol. 2, 3-9
 - in file processor Vol. 1, 7-43
 - in LIM unit of LPP Vol. 2, 3-155
 - in SuperNode CM Vol. 1, 2-22
 - in SuperNode MS Vol. 2, 5-39
 - in SuperNode SE CM/SLM Vol. 1, 3-85
- NT9X15
 - in LIM unit of ELPP Vol. 1, 5-48
 - in LIM unit of LPP Vol. 2, 3-155
 - in SuperNode MS Vol. 2, 5-39
 - in SuperNode SE MS Vol. 2, 6-25
- NT9X17
 - in LIM unit of ELPP Vol. 1, 5-48
 - in LIM unit of LPP Vol. 2, 3-155
 - in SuperNode MS Vol. 2, 5-39
 - in SuperNode SE MS Vol. 2, 6-25
- NT9X20
 - in SuperNode CM Vol. 1, 2-5, Vol. 3, 3-37, Vol. 3, 3-78
 - in SuperNode MS Vol. 2, 5-5
- NT9X21
 - in file processor Vol. 1, 7-43
 - in SuperNode CM Vol. 1, 2-22
 - in SuperNode SE CM/SLM Vol. 1, 3-85
 - in SuperNode SLM Vol. 3, 3-137
- NT9X22
 - in SuperNode CM Vol. 1, 2-22
 - in SuperNode SLM Vol. 3, 3-137

- NT9X23
 - in LIM unit of LPP Vol. 2, 3-155
 - in SuperNode MS Vol. 2, 5-5
 - in SuperNode SE MS Vol. 2, 6-5
- NT9X25
 - in SuperNode MS Vol. 2, 5-39
 - in SuperNode SE MS Vol. 2, 6-25
- NT9X26
 - in ENET 128k Vol. 2, 8-49
 - in ENET 64k Vol. 2, 8-49
 - in file processor Vol. 1, 7-43
 - in LIM unit of ELPP Vol. 1, 5-48
 - in LIM unit of LPP Vol. 2, 3-155
 - in SuperNode CM Vol. 1, 2-22
 - in SuperNode MS Vol. 2, 5-39
 - in SuperNode SE 16k ENET Vol. 1, 6-77
 - in SuperNode SE CM/SLM Vol. 1, 3-85
 - in SuperNode SE ENI shelf Vol. 1, 6-77
 - in SuperNode SE MS Vol. 2, 6-25
- NT9X27
 - in superNode CM Vol. 1, 2-22
 - in SuperNode SLM Vol. 3, 3-137
- NT9X30
 - in ENET 128k Vol. 2, 8-49
 - in ENET 64k Vol. 2, 8-49
 - in LIM unit of ELPP Vol. 1, 5-48
 - in LIM unit of LPP Vol. 2, 3-155
 - in LPP LIS Vol. 2, 3-100
 - in SSLPP Vol. 3, 2-74
 - in SuperNode CM Vol. 1, 2-22
 - in SuperNode MS Vol. 2, 5-39
 - in SuperNode SE 16k ENET Vol. 1, 6-53
 - in SuperNode SE ENI shelf Vol. 1, 6-53
 - in SuperNode SE LIS Vol. 2, 4-64
 - in SuperNode SE MS Vol. 2, 6-25
 - in SuperNode SLM Vol. 3, 3-137
- NT9X31
 - in ENET 128k Vol. 2, 8-49
 - in ENET 64k Vol. 2, 8-49
 - in LIM unit of ELPP Vol. 1, 5-48
 - in SSLPP Vol. 3, 2-74
 - in SuperNode CM Vol. 1, 2-22
 - in SuperNode MS Vol. 2, 5-39
 - in SuperNode SE 16k ENET Vol. 1, 6-53
 - in SuperNode SE ENI shelf Vol. 1, 6-53
 - in SuperNode SE MS Vol. 2, 6-25
- NT9X32
 - in SuperNode MS Vol. 2, 5-39
- NT9X35
 - in ENET 128k Vol. 2, 8-15
 - in ENET 64k Vol. 2, 8-15
 - in SuperNode SE 16k ENET Vol. 1, 6-7
 - in SuperNode SE 32k ENET Vol. 1, 6-31
 - in SuperNode SE ENI shelf Vol. 1, 6-7
- NT9X36
 - in ENET 128K Vol. 2, 8-49
 - in ENET 64k Vol. 2, 8-49
 - in SuperNode SE 16k ENET Vol. 1, 6-77
 - in SuperNode SE ENI shelf Vol. 1, 6-77
- NT9X40
 - in ENET 128k Vol. 2, 8-15
 - in ENET 64k Vol. 2, 8-15
 - in SuperNode SE 16k ENET Vol. 1, 6-7, Vol. 1, 6-77
 - in SuperNode SE 32k ENET Vol. 1, 6-31
 - in SuperNode SE ENI shelf Vol. 1, 6-7, Vol. 1, 6-77
- NT9X41
 - in ENET 128k Vol. 2, 8-15
 - in ENET 64k Vol. 2, 8-15
 - in SuperNode SE 16k ENET Vol. 1, 6-7
 - in SuperNode SE 32k ENET Vol. 1, 6-31
 - in SuperNode SE ENI shelf Vol. 1, 6-7
- NT9X44
 - in SuperNode SE CM/SLM Vol. 1, 3-5
 - in SuperNode SLM Vol. 3, 3-5
- NT9X45
 - in ENET 128k Vol. 2, 8-15
 - in ENET 64k Vol. 2, 8-15
 - in SuperNode SE 16k ENET Vol. 1, 6-7
 - in SuperNode SE 32k ENET Vol. 1, 6-31
 - in SuperNode SE ENI shelf Vol. 1, 6-7
- NT9X46
 - in SuperNode SE CM/SLM Vol. 1, 3-27
 - in SuperNode SLM Vol. 3, 3-137
- NT9X47
 - in SuperNode SLM Vol. 3, 3-137
- NT9X49
 - in LIM unit of ELPP Vol. 1, 5-48
 - in LIM unit of LPP Vol. 2, 3-155
 - in SuperNode MS Vol. 2, 5-39
 - in SuperNode SE MS Vol. 2, 6-25
- NT9X52
 - in LIM unit of ELPP Vol. 1, 5-48
 - in LIM unit of LPP Vol. 2, 3-155
 - in SuperNode MS Vol. 2, 5-39
 - in SuperNode SE MS Vol. 2, 6-25
- NT9X53
 - in LIM unit of ELPP Vol. 1, 5-48
 - in LIM unit of LPP Vol. 2, 3-155

- in SuperNode MS Vol. 2, 5-39
 - in SuperNode SE MS Vol. 2, 6-25
- NT9X54
 - in SuperNode MS Vol. 2, 5-5
 - in SuperNode SE MS Vol. 2, 6-5
- NT9X62
 - in file processor Vol. 1, 7-43
 - in LIM unit of ELPP Vol. 1, 5-48
 - in SuperNode MS Vol. 2, 5-5
 - in SuperNode SE CM/SLM Vol. 1, 3-45
 - in SuperNode SE MS Vol. 2, 6-5
- NT9X69
 - in SuperNode MS Vol. 2, 5-5
 - in SuperNode SE MS Vol. 2, 6-5
- NT9X73
 - in LIM unit of ELPP Vol. 1, 5-48
 - in LIM unit of LPP Vol. 2, 3-155
 - in SuperNode SE MS Vol. 2, 6-25
- NT9X74
 - in ELPP LIS Vol. 1, 5-9
 - in LPP LIS Vol. 2, 3-126
 - in SuperNode SE ENI shelf Vol. 2, 4-6
 - in SuperNode SE LIS Vol. 2, 4-6
- NT9X76
 - in EIU in LPP LIS Vol. 2, 3-47
 - in EIU in SSLPP Vol. 3, 2-17
 - in EIU in SuperNode SE LIS Vol. 2, 4-13
 - in LIU7 in LPP LIS Vol. 2, 3-57
 - in LIU7 in SSLPP Vol. 3, 2-44
 - in LIU7 in SuperNode SE ENI shelf Vol. 2, 4-38
 - in LIU7 in SuperNode SE LIS Vol. 2, 4-38
- NT9X77
 - in LIU7 in LPP LIS Vol. 2, 3-57
 - in LIU7 in SSLPP Vol. 3, 2-44
 - in LIU7 in SuperNode SE ENI shelf Vol. 2, 4-38
 - in LIU7 in SuperNode SE LIS Vol. 2, 4-38
- NT9X78
 - in LIU7 in LPP LIS Vol. 2, 3-57
 - in LIU7 in SSLPP Vol. 3, 2-44
 - in LIU7 in SuperNode SE ENI shelf Vol. 2, 4-38
 - in LIU7 in SuperNode SE LIS Vol. 2, 4-38
- NT9X79
 - in ELPP LIS Vol. 1, 5-9
 - in LIM unit of ELPP Vol. 1, 5-48
 - in LIM unit of LPP Vol. 2, 3-155
 - in LPP LIS Vol. 2, 3-36
 - in SuperNode SE ENI shelf Vol. 2, 4-6
 - in SuperNode SE LIS Vol. 2, 4-6
 - in SuperNode SE MS Vol. 2, 6-5
- NT9X84
 - in EIU in LPP LIS Vol. 2, 3-47
- NT9X85
 - in EIU in LPP LIS Vol. 2, 3-47
 - in EIU in SSLPP Vol. 3, 2-17
 - in EIU in SuperNode SE LIS Vol. 2, 4-13
- NT9X86
 - in file processor Vol. 1, 7-43
 - in SuperNode SE CM/SLM Vol. 1, 3-85
- NT9X87
 - in file processor Vol. 1, 7-43
- NT9X88
 - in file processor Vol. 1, 7-43
- NT9X89
 - in file processor Vol. 1, 7-6
- NT9X90
 - in file processor Vol. 1, 7-18
- NT9X91
 - in file processor Vol. 1, 7-33
 - in SuperNode SE CM/SLM Vol. 1, 3-67
- NT9X96
 - in SSLPP Vol. 3, 2-7
- NT9X98
 - in SSLPP Vol. 3, 2-7
- NTAX74 Vol. 6, 1-281, Vol. 6, 1-292
 - in DTCL, PDTC Vol. 3, 6-147
- NTAX78 Vol. 6, 1-369
 - in DTCL Vol. 3, 6-31
- NTBX01 Vol. 6, 1-381, Vol. 6, 1-390, Vol. 6, 1-399, Vol. 6, 1-408, Vol. 6, 1-437
 - in DTCL, LGCI, LTCI Vol. 3, 6-147
 - in DTCO, LTCO, LGCO, PDTC, PLTC, PLGC Vol. 3, 6-147
- NTBX02 Vol. 6, 1-443, Vol. 6, 1-456, Vol. 6, 1-469, Vol. 6, 1-482, Vol. 6, 1-495
 - LGCI, PLGC Vol. 3, 6-115
 - LTCI, PLTC Vol. 3, 6-115
- NTBX25
 - in LCME Vol. 2, 1-39
- NTBX26 Vol. 6, 1-538, Vol. 6, 1-546, Vol. 6, 1-554
 - in LCME Vol. 2, 1-39
- NTBX27 Vol. 6, 1-562, Vol. 6, 1-570, Vol. 6, 1-578
 - in LCME Vol. 2, 1-39
- NTBX34 Vol. 6, 1-593, Vol. 6, 1-601, Vol. 6, 1-611, Vol. 6, 1-621

- in LCME Vol. 2, 1-31
- NTBX35 Vol. 6, 1-630, Vol. 6, 1-638,
Vol. 6, 1-648, Vol. 6, 1-658
- in LCME Vol. 2, 1-31
- NTBX36 Vol. 6, 1-667, Vol. 6, 1-677,
Vol. 6, 1-687
- in LCME Vol. 2, 1-13
- NTBX71
- in LCME Vol. 2, 1-62
- NTBX72 Vol. 6, 1-697, Vol. 6, 1-706,
Vol. 6, 1-715, Vol. 6, 1-724
- in LCME Vol. 2, 1-79
- NTCX50
- in PDTC Vol. 3, 6-19
- NTDX15
- in file processor Vol. 1, 7-43
- in SuperNode SE CM/SLM Vol. 1, 3-67
- NTDX16
- in LPP LIS Vol. 2, 3-140
- NTEX17 Vol. 6, 1-733, Vol. 6, 1-743,
Vol. 6, 1-753, Vol. 6, 1-763, Vol. 6, 1-773
- in LCM Vol. 2, 1-39
- NTEX20
- in ELPP LIS Vol. 1, 5-9
- in LPP LIS Vol. 2, 3-36
- in SSLPP Vol. 3, 2-7
- in SuperNode SE ENI shelf Vol. 2, 4-6
- in SuperNode SE LIS Vol. 2, 4-6
- NTEX22
- in APU in LPP LIS Vol. 2, 3-9
- in EIU in SSLPP Vol. 3, 2-17
- in EIU in SuperNode SE LIS Vol. 2, 4-13
- in FRIU in LPP LIS Vol. 2, 3-68
- in FRIU in SSLPP Vol. 3, 2-29
- in FRIU SuperNode SE LIS Vol. 2, 4-24
- in HLIU in an ELPP LIS Vol. 1, 5-17
- in HSLR in an ELPP LIS Vol. 1, 5-27
- in LIU7 in LPP LIS Vol. 2, 3-57
- in LIU7 in SSLPP Vol. 3, 2-44
- in LIU7 in SuperNode SE ENI shelf
Vol. 2, 4-38
- in LIU7 in SuperNode SE LIS Vol. 2, 4-38
- in NIU in LPP LIS Vol. 2, 3-82
- in NIU in SSLPP Vol. 3, 2-57
- in NIU in SuperNode SE LIS Vol. 2, 4-49
- in VPU in LPP LIS Vol. 2, 3-168
- in XLIU in LPP LIS Vol. 2, 3-177
- in XLIU in SSLPP Vol. 3, 2-105
- in XLIU in SuperNode SE LIS Vol. 2, 4-91
- NTEX25
- in NIU in LPP LIS Vol. 2, 3-82
- in NIU in SSLPP Vol. 3, 2-57
- in NIU in SuperNode SE LIS Vol. 2, 4-49
- NTEX26
- in LIU7 in LPP LIS Vol. 2, 3-57
- in LIU7 in SSLPP Vol. 3, 2-44
- in LIU7 in SuperNode SE ENI shelf
Vol. 2, 4-38
- in LIU7 in SuperNode SE LIS Vol. 2, 4-38
- NTEX28
- in NIU in LPP LIS Vol. 2, 3-145
- in NIU in SSLPP Vol. 3, 2-57
- in NIU in SuperNode SE LIS Vol. 2, 4-49
- NTEX30
- in FRIU in LPP LIS Vol. 2, 3-68
- in FRIU in SSLPP Vol. 3, 2-29
- in FRIU in SuperNode SE LIS Vol. 2, 4-24
- NTEX31
- in FRIU in LPP LIS Vol. 2, 3-68
- in FRIU in SSLPP Vol. 3, 2-29
- in FRIU in SuperNode SE LIS Vol. 2, 4-24
- NTEX54 Vol. 6, 1-783, Vol. 6, 1-800,
Vol. 6, 1-817, Vol. 6, 1-834, Vol. 6, 1-851
- in LCM Vol. 2, 1-13
- NTEX76
- in HLIU in an ELPP LIS Vol. 1, 5-17
- NTEX78
- in HLIU in an ELPP LIS Vol. 1, 5-17
- NTFX09
- in XLIU in LPP LIS Vol. 2, 3-177
- in XLIU in SSLPP Vol. 3, 2-105
- in XLIU in SuperNode SE LIS Vol. 2, 4-91
- NTFX10
- in XLIU in LPP LIS Vol. 2, 3-177
- in XLIU in SSLPP Vol. 3, 2-105
- in XLIU in SuperNode SE LIS Vol. 2, 4-91
- NTFX32AA
- in an ISM Vol. 1, 9-92
- NTFX42
- in ISM Vol. 3, 4-27
- NTFX43
- in ISM Vol. 3, 4-64
- NTMX45 Vol. 6, 1-898
- NTMX71 Vol. 6, 1-908, Vol. 6, 1-932,
Vol. 6, 1-940
- in DTC, DTCL, IDTC, PDTC Vol. 3, 6-19
- in ILGC, LGC, LGCI, PLGC Vol. 3, 6-19
- in ILTC, LTC, LTCL, PLTC Vol. 3, 6-19

NTMX72 Vol. 6, 1-949, Vol. 6, 1-957,
Vol. 6, 1-966, Vol. 6, 1-975, Vol. 6, 1-984,
Vol. 6, 1-993
NTMX73 Vol. 7, 1-2, Vol. 7, 1-9, Vol. 7, 1-17,
Vol. 7, 1-26, Vol. 7, 1-36, Vol. 7, 1-45
NTMX74 Vol. 7, 1-60, Vol. 7, 1-69,
Vol. 7, 1-77, Vol. 7, 1-86, Vol. 7, 1-95,
Vol. 7, 1-104
NTMX75 Vol. 7, 1-113, Vol. 7, 1-120,
Vol. 7, 1-128, Vol. 7, 1-136, Vol. 7, 1-144,
Vol. 7, 1-153
NTMX76 Vol. 7, 1-168, Vol. 7, 1-175,
Vol. 7, 1-182, Vol. 7, 1-188, Vol. 7, 1-195,
Vol. 7, 1-205
 in DTC, DTCI, IDTC, DTCO, PDTC
 Vol. 3, 6-31
 in ILGC, LGC, LGCI, LGCO, PLGC
 Vol. 3, 6-31
 in ILTC, LTC, LTCI, LTCO, PLTC
 Vol. 3, 6-31
NTMX77 Vol. 7, 1-221, Vol. 7, 1-234,
Vol. 7, 1-241, Vol. 7, 1-254, Vol. 7, 1-267,
Vol. 7, 1-280, Vol. 7, 1-293, Vol. 7, 1-306,
Vol. 7, 1-318
 in DTC, DTCI, IDTC, DTCO, PDTC
 Vol. 3, 6-147
 in ILGC, LGC, LGCI, LGCO, PLGC
 Vol. 3, 6-147
 in ILTC, LTC, LTCI, LTCO, PLTC
 Vol. 3, 6-147
NTMX79 Vol. 7, 1-333, Vol. 7, 1-343,
Vol. 7, 1-349, Vol. 7, 1-359, Vol. 7, 1-370,
Vol. 7, 1-380
NTMX81 Vol. 7, 1-397, Vol. 7, 1-409,
Vol. 7, 1-421, Vol. 7, 1-592
NTMX82 Vol. 7, 1-465, Vol. 7, 1-476,
Vol. 7, 1-486, Vol. 7, 1-496
NTMX87 Vol. 7, 1-508, Vol. 7, 1-528,
Vol. 7, 1-548, Vol. 7, 1-571
NTMX97
 in VPU in LPP LIS Vol. 2, 3-168
NTMX99
 in VPU in LPP LIS Vol. 2, 3-168
NTRX41 Vol. 7, 1-630, Vol. 7, 1-635,
Vol. 7, 1-640, Vol. 7, 1-650
NTRX42 Vol. 7, 1-660, Vol. 7, 1-677,
Vol. 7, 1-695, Vol. 7, 1-726, Vol. 7, 1-746

NTRX43 Vol. 7, 1-778, Vol. 7, 1-785,
Vol. 7, 1-792, Vol. 7, 1-808
NTRX44 Vol. 7, 1-824, Vol. 7, 1-836,
Vol. 7, 1-858
NTRX54 Vol. 7, 1-868, Vol. 7, 1-882
NTRX66 Vol. 7, 1-896
NTSX06
 in LTC, LTC, DTC, LGCI, and LTCI
 Vol. 3, 6-147
card replacement procedures
 NTBX01 Vol. 6, 1-374
cards
 inserting Vol. 3, 7-140
 removing Vol. 3, 7-140

M

Maintenance

 returning cards Vol. 3, 7-168

Media access control address

 DBIC provisioning Vol. 6, 1-785,
 Vol. 6, 1-797, Vol. 6, 1-802, Vol. 6, 1-814,
 Vol. 6, 1-819, Vol. 6, 1-831, Vol. 6, 1-836,
 Vol. 6, 1-848, Vol. 6, 1-853, Vol. 6, 1-865

N

NT0X10

 card replacement procedures Vol. 4, 1-2,
 Vol. 4, 1-6, Vol. 4, 1-14, Vol. 4, 1-18, Vol. 4, 1-25,
 Vol. 4, 1-31, Vol. 4, 1-37, Vol. 4, 1-43

NT0X91

 card replacement procedures Vol. 4, 1-61

NT0X91AA

 card replacement procedures Vol. 4, 1-49,
 Vol. 4, 1-90

NT0X91AE

 card replacement procedures Vol. 4, 1-49,
 Vol. 4, 1-96, Vol. 4, 1-105

NT2X06

 card replacement procedures Vol. 4, 1-114,
 Vol. 4, 1-121, Vol. 4, 1-129, Vol. 4, 1-136,
 Vol. 4, 1-144, Vol. 4, 1-153, Vol. 4, 1-162

NT2X09

 card replacement procedures Vol. 4, 1-171,
 Vol. 4, 1-178, Vol. 4, 1-186, Vol. 4, 1-194,
 Vol. 4, 1-202, Vol. 4, 1-211, Vol. 4, 1-220

-
- NT2X10
card replacement procedures Vol. 4, 1-229,
Vol. 4, 1-233, Vol. 4, 1-237, Vol. 4, 1-244,
Vol. 4, 1-251, Vol. 4, 1-258
- NT2X11
card replacement procedures Vol. 4, 1-265,
Vol. 4, 1-270, Vol. 4, 1-278, Vol. 4, 1-282,
Vol. 4, 1-289, Vol. 4, 1-298, Vol. 4, 1-307
- NT2X48
card replacement procedures Vol. 4, 1-316,
Vol. 4, 1-321, Vol. 4, 1-326
- NT2X55
card replacement procedures Vol. 4, 1-331
- NT2X57
card replacement procedures Vol. 4, 1-338,
Vol. 4, 1-342, Vol. 4, 1-350, Vol. 4, 1-355,
Vol. 4, 1-362, Vol. 4, 1-369, Vol. 4, 1-376
- NT2X59
card replacement procedures Vol. 4, 1-383,
Vol. 4, 1-387, Vol. 4, 1-401, Vol. 4, 1-406,
Vol. 4, 1-413, Vol. 4, 1-420, Vol. 4, 1-427
- NT2X70
card replacement procedures Vol. 4, 1-434,
Vol. 4, 1-441, Vol. 4, 1-464, Vol. 4, 1-478,
Vol. 4, 1-490, Vol. 4, 1-498, Vol. 4, 1-506,
Vol. 4, 1-517, Vol. 4, 1-526
- NT2X90
card replacement procedures Vol. 4, 1-533,
Vol. 4, 1-538, Vol. 4, 1-543, Vol. 4, 1-557,
Vol. 4, 1-562, Vol. 4, 1-569, Vol. 4, 1-576
- NT3X04
card replacement procedures Vol. 4, 1-583
- NT3X09
card replacement procedures Vol. 4, 1-590,
Vol. 4, 1-596, Vol. 4, 1-601, Vol. 4, 1-612,
Vol. 4, 1-617, Vol. 4, 1-624, Vol. 4, 1-634,
Vol. 4, 1-644
- NT3X82
card replacement procedures Vol. 4, 1-653
- NT3X83
card replacement procedures Vol. 4, 1-660
- NT4X97
card replacement procedures Vol. 4, 1-668,
Vol. 4, 1-673, Vol. 4, 1-680
- NT4X98
card replacement procedures Vol. 4, 1-687,
Vol. 4, 1-694
- NT6X17
card replacement procedures Vol. 4, 1-703,
Vol. 4, 1-707, Vol. 4, 1-711, Vol. 4, 1-715,
Vol. 4, 1-723, Vol. 4, 1-731, Vol. 4, 1-739
- NT6X18
card replacement procedures Vol. 4, 1-743,
Vol. 4, 1-747, Vol. 4, 1-751, Vol. 4, 1-755,
Vol. 4, 1-759, Vol. 4, 1-767, Vol. 4, 1-775,
Vol. 4, 1-783
- NT6X19
card replacement procedures Vol. 4, 1-787,
Vol. 4, 1-791, Vol. 4, 1-795, Vol. 4, 1-799,
Vol. 4, 1-807, Vol. 4, 1-815, Vol. 4, 1-823
- NT6X20
card replacement procedures Vol. 4, 1-827,
Vol. 4, 1-831, Vol. 4, 1-835, Vol. 4, 1-839,
Vol. 4, 1-847, Vol. 4, 1-855, Vol. 4, 1-863
- NT6X21
card replacement procedures Vol. 4, 1-867,
Vol. 4, 1-871, Vol. 4, 1-875, Vol. 4, 1-883,
Vol. 4, 1-893, Vol. 4, 1-902, Vol. 4, 1-911,
Vol. 4, 1-920
- NT6X27
card replacement procedures Vol. 4, 1-924,
Vol. 4, 1-931, Vol. 4, 1-938
- NT6X30
card replacement procedures Vol. 4, 1-945,
Vol. 4, 1-960, Vol. 4, 1-974, Vol. 4, 1-988,
Vol. 4, 1-1002
- NT6X36
card replacement procedures Vol. 4, 1-1021,
Vol. 4, 1-1031, Vol. 4, 1-1036
- NT6X40
card replacement procedures Vol. 5, 1-2,
Vol. 5, 1-14, Vol. 5, 1-26
- NT6X41
card replacement procedures Vol. 5, 1-64,
Vol. 5, 1-71, Vol. 5, 1-78, Vol. 5, 1-87, Vol. 5, 1-95
- NT6X42
card replacement procedures Vol. 5, 1-101,
Vol. 5, 1-107, Vol. 5, 1-114, Vol. 5, 1-122
- NT6X44
card replacement procedures Vol. 5, 1-130,
Vol. 5, 1-138, Vol. 5, 1-144, Vol. 5, 1-158
- NT6X45
card replacement procedures Vol. 5, 1-166,
Vol. 5, 1-172, Vol. 5, 1-178, Vol. 5, 1-184
-

- NT6X47
card replacement procedures Vol. 5, 1-190,
Vol. 5, 1-196, Vol. 5, 1-202
- NT6X48
card replacement procedures Vol. 3, 6-72,
Vol. 3, 6-82, Vol. 5, 1-208
- NT6X50
card replacement procedures Vol. 5, 1-216,
Vol. 5, 1-223, Vol. 5, 1-237, Vol. 5, 1-244,
Vol. 5, 1-259, Vol. 5, 1-275
- NT6X51
card replacement procedures Vol. 5, 1-291,
Vol. 5, 1-298, Vol. 5, 1-305, Vol. 5, 1-312,
Vol. 5, 1-324, Vol. 5, 1-332, Vol. 5, 1-339,
Vol. 5, 1-347
- NT6X52
card replacement procedures Vol. 5, 1-355,
Vol. 5, 1-361, Vol. 5, 1-367, Vol. 5, 1-373,
Vol. 5, 1-384, Vol. 5, 1-392, Vol. 5, 1-401,
Vol. 5, 1-410
- NT6X53
card replacement procedures Vol. 5, 1-418,
Vol. 5, 1-425, Vol. 5, 1-432, Vol. 5, 1-444,
Vol. 5, 1-460, Vol. 5, 1-469, Vol. 5, 1-478,
Vol. 5, 1-487
- NT6X54
card replacement procedures Vol. 5, 1-493,
Vol. 5, 1-500, Vol. 5, 1-509, Vol. 5, 1-518,
Vol. 5, 1-533, Vol. 5, 1-542, Vol. 5, 1-549,
Vol. 5, 1-556
- NT6X60
card replacement procedures Vol. 5, 1-565,
Vol. 5, 1-572, Vol. 5, 1-579, Vol. 5, 1-587
- NT6X69
card replacement procedures Vol. 5, 1-605,
Vol. 5, 1-613, Vol. 5, 1-622, Vol. 5, 1-630,
Vol. 5, 1-639, Vol. 5, 1-648, Vol. 5, 1-654,
Vol. 5, 1-670, Vol. 5, 1-678
- NT6X71
card replacement procedures Vol. 5, 1-684,
Vol. 5, 1-688, Vol. 5, 1-692, Vol. 5, 1-696,
Vol. 5, 1-705, Vol. 5, 1-713, Vol. 5, 1-721
- NT6X72
card replacement procedures Vol. 5, 1-725
- NT6X73
card replacement procedures Vol. 5, 1-734,
Vol. 5, 1-738, Vol. 5, 1-742, Vol. 5, 1-751
- NT6X74
card replacement procedures Vol. 5, 1-755,
Vol. 5, 1-761, Vol. 5, 1-775, Vol. 5, 1-782,
Vol. 5, 1-790, Vol. 5, 1-799, Vol. 5, 1-808
- NT6X75
card replacement procedures Vol. 5, 1-817,
Vol. 5, 1-824, Vol. 5, 1-831, Vol. 5, 1-838
- NT6X76
card replacement procedures Vol. 5, 1-845,
Vol. 5, 1-853, Vol. 5, 1-861, Vol. 5, 1-869
- NT6X78
card replacement procedures Vol. 5, 1-876,
Vol. 5, 1-883, Vol. 5, 1-891, Vol. 5, 1-898,
Vol. 5, 1-905, Vol. 5, 1-912, Vol. 5, 1-919,
Vol. 5, 1-925, Vol. 5, 1-932, Vol. 5, 1-946
- NT6X80
card replacement procedures Vol. 5, 1-951,
Vol. 5, 1-957, Vol. 5, 1-964, Vol. 5, 1-972,
Vol. 5, 1-981
- NT6X85
card replacement procedures Vol. 6, 1-2,
Vol. 6, 1-13, Vol. 6, 1-24
- NT6X86
card replacement procedures Vol. 6, 1-30,
Vol. 6, 1-39
- NT6X87
card replacement procedures Vol. 6, 1-48,
Vol. 6, 1-56
- NT6X92
card replacement procedures Vol. 6, 1-64,
Vol. 6, 1-71, Vol. 6, 1-79, Vol. 6, 1-87,
Vol. 6, 1-95, Vol. 6, 1-104, Vol. 6, 1-112,
Vol. 6, 1-118, Vol. 6, 1-125, Vol. 6, 1-140,
Vol. 6, 1-243
- NT6X99
card replacement procedures Vol. 6, 1-146,
Vol. 6, 1-150, Vol. 6, 1-154, Vol. 6, 1-158,
Vol. 6, 1-162, Vol. 6, 1-170, Vol. 6, 1-178,
Vol. 6, 1-186
- NT7X05
card replacement procedures Vol. 6, 1-190,
Vol. 6, 1-198, Vol. 6, 1-207, Vol. 6, 1-234,
Vol. 6, 1-252
- NT8X02
card replacement procedures Vol. 6, 1-261,
Vol. 6, 1-265

-
- NT8X18
card replacement procedures Vol. 6, 1-270
- NTAX74
card replacement procedures Vol. 6, 1-281,
Vol. 6, 1-292, Vol. 6, 1-303, Vol. 6, 1-315,
Vol. 6, 1-327, Vol. 6, 1-337, Vol. 6, 1-347
- NTAX78
card replacement procedures Vol. 6, 1-355,
Vol. 6, 1-362, Vol. 6, 1-369
- NTBX01
card replacement procedures Vol. 6, 1-374,
Vol. 6, 1-381, Vol. 6, 1-390, Vol. 6, 1-399,
Vol. 6, 1-408, Vol. 6, 1-417, Vol. 6, 1-423,
Vol. 6, 1-430, Vol. 6, 1-437
- NTBX02
card replacement procedures Vol. 6, 1-443,
Vol. 6, 1-456, Vol. 6, 1-469, Vol. 6, 1-482,
Vol. 6, 1-495, Vol. 6, 1-508, Vol. 6, 1-515,
Vol. 6, 1-523
- NTBX26
card replacement procedures Vol. 6, 1-538,
Vol. 6, 1-546, Vol. 6, 1-554
- NTBX27
card replacement procedures Vol. 6, 1-562,
Vol. 6, 1-570, Vol. 6, 1-578, Vol. 6, 1-586
- NTBX34
card replacement procedures Vol. 6, 1-593,
Vol. 6, 1-601, Vol. 6, 1-611, Vol. 6, 1-621
- NTBX35
card replacement procedures Vol. 6, 1-630,
Vol. 6, 1-638, Vol. 6, 1-648, Vol. 6, 1-658
- NTBX36
card replacement procedures Vol. 6, 1-667,
Vol. 6, 1-677, Vol. 6, 1-687
- NTBX72
card replacement procedures Vol. 6, 1-697,
Vol. 6, 1-706, Vol. 6, 1-715, Vol. 6, 1-724
- NTEX17
card replacement procedures Vol. 6, 1-733,
Vol. 6, 1-743, Vol. 6, 1-753, Vol. 6, 1-763,
Vol. 6, 1-773
- NTEX54
card replacement procedures Vol. 6, 1-783,
Vol. 6, 1-800, Vol. 6, 1-817, Vol. 6, 1-834,
Vol. 6, 1-851
- NTMX45
card replacement procedures Vol. 6, 1-898
- NTMX71
card replacement procedures Vol. 6, 1-908,
Vol. 6, 1-916, Vol. 6, 1-924, Vol. 6, 1-932,
Vol. 6, 1-940
- NTMX71, Back plane cards in an XPM
Vol. 3, 6-19
- NTMX72
card replacement procedures Vol. 6, 1-949,
Vol. 6, 1-957, Vol. 6, 1-966, Vol. 6, 1-975,
Vol. 6, 1-984, Vol. 6, 1-993, Vol. 6, 1-1002
- NTMX73
card replacement procedures Vol. 7, 1-9,
Vol. 7, 1-17, Vol. 7, 1-26, Vol. 7, 1-36,
Vol. 7, 1-45, Vol. 7, 1-54
card replacement procedures Vol. 7, 1-2
- NTMX74
card replacement procedures Vol. 7, 1-60,
Vol. 7, 1-69, Vol. 7, 1-77, Vol. 7, 1-86,
Vol. 7, 1-95, Vol. 7, 1-104
- NTMX75
card replacement procedures Vol. 7, 1-113,
Vol. 7, 1-120, Vol. 7, 1-128, Vol. 7, 1-136,
Vol. 7, 1-144, Vol. 7, 1-153, Vol. 7, 1-162
- NTMX76
card replacement procedures Vol. 7, 1-168,
Vol. 7, 1-175, Vol. 7, 1-182, Vol. 7, 1-188,
Vol. 7, 1-195, Vol. 7, 1-205, Vol. 7, 1-214
- NTMX77
card replacement procedures Vol. 7, 1-221,
Vol. 7, 1-234, Vol. 7, 1-241, Vol. 7, 1-254,
Vol. 7, 1-267, Vol. 7, 1-280, Vol. 7, 1-293,
Vol. 7, 1-306, Vol. 7, 1-318
- NTMX79
card replacement procedures Vol. 7, 1-333,
Vol. 7, 1-343, Vol. 7, 1-349, Vol. 7, 1-359,
Vol. 7, 1-370, Vol. 7, 1-380, Vol. 7, 1-390
- NTMX81
card replacement procedures Vol. 7, 1-397,
Vol. 7, 1-409, Vol. 7, 1-421, Vol. 7, 1-435,
Vol. 7, 1-451, Vol. 7, 1-592
- NTMX82
card replacement procedures Vol. 7, 1-465,
Vol. 7, 1-476, Vol. 7, 1-486, Vol. 7, 1-496
- NTMX87
card replacement procedures Vol. 7, 1-508,
Vol. 7, 1-528, Vol. 7, 1-548, Vol. 7, 1-571
-

NTRX41
card replacement procedures Vol. 7, 1-630,
Vol. 7, 1-635, Vol. 7, 1-640, Vol. 7, 1-650,
Vol. 7, 1-655

NTRX42
card replacement procedures Vol. 7, 1-660,
Vol. 7, 1-677, Vol. 7, 1-695, Vol. 7, 1-726,
Vol. 7, 1-746, Vol. 7, 1-766

NTRX43
card replacement procedures Vol. 7, 1-778,
Vol. 7, 1-785, Vol. 7, 1-792, Vol. 7, 1-808,
Vol. 7, 1-816

NTRX44
card replacement procedures Vol. 7, 1-824,
Vol. 7, 1-836, Vol. 7, 1-858

NTRX54
card replacement procedures Vol. 7, 1-868,
Vol. 7, 1-882, Vol. 7, 1-889

NTRX66
card replacement procedures Vol. 7, 1-896

NTTR46
card replacement procedures Vol. 7, 1-902

NTTR47
card replacement procedures Vol. 7, 1-908

NTTR60
card replacement procedures Vol. 7, 1-914

NTTR66
card replacement procedures Vol. 7, 1-921

NTTR67
card replacement procedures Vol. 7, 1-927

NTTR70
card replacement procedures Vol. 7, 1-934

NTTR71
card replacement procedures Vol. 7, 1-941

NTTR72
card replacement procedures Vol. 7, 1-946

NTTR73
card replacement procedures Vol. 7, 1-952

NTTR74
card replacement procedures Vol. 7, 1-956

NTTR75
card replacement procedures Vol. 7, 1-962

NTTR76
card replacement procedures Vol. 7, 1-970

NTTR77
card replacement procedures Vol. 7, 1-979

NTTR87
card replacement procedures Vol. 7, 1-986

R

returning cards Vol. 3, 7-168

S

shelf layouts

application processor cabinet

APC cabinet layout Vol. 1, 7-3

file processor shelf Vol. 1, 7-4

storage device shelf Vol. 1, 7-5

common peripheral controller equipment
frame

CPCE frame layout Vol. 3, 6-4

DTC with 2 NT6X45's Vol. 3, 6-8

international XPMs with 2 NT6X45's
Vol. 3, 6-14

international XPMs with 3 NT6X45's
Vol. 3, 6-15

international XPMs with NTMX77
Vol. 3, 6-13

ISDN XPMs with 2 NT6X45's Vol. 3, 6-12

ISDN XPMs with NTMX77 Vol. 3, 6-11

LGC with 2 NT6X45's Vol. 3, 6-9

LGC with NTMX77 Vol. 3, 6-6

LTC with 2 NT6X45's Vol. 3, 6-10

LTC with NTMX77 Vol. 3, 6-7

PCM30 XPMs with 2 NT6X45's Vol. 3, 6-18

PCM30 XPMs with NTMX77 Vol. 3, 6-16,
Vol. 3, 6-17

dual plane combined core cabinet

DPCC cabinet layout Vol. 2, 5-3, Vol. 3, 3-3

SuperNode message switch shelf Vol. 2, 5-4

SuperNode system load module shelf
Vol. 3, 3-4

enhanced link peripheral processor

ELPP cabinet layout Vol. 1, 5-4

link interface module showing LMS units
Vol. 1, 5-6

link interface shelf common fill Vol. 1, 5-7

link interface shelf for DLIUs Vol. 1, 5-8

triple F-bus configuration in ELPP cabinet
Vol. 1, 5-5

enhanced multipurpose cabinet

EMC cabinet layout Vol. 3, 2-4

single shelf link peripheral processor, 2-slot
ASUs Vol. 3, 2-6

-
- single shelf link peripheral processor, ASU common fill Vol. 3, 2-5
 - fiber link peripheral processor (SuperNode)
 - link interface module showing LMS units Vol. 2, 3-6
 - host ISDN XPMs Vol. 3, 6-3
 - host XPMs Vol. 3, 6-3
 - input/output equipment frame
 - dual disk drive unit shelf Vol. 1, 9-7, Vol. 1, 9-8, Vol. 1, 9-9
 - input/output controller shelf Vol. 1, 9-5
 - IOE frame layout Vol. 1, 9-4, Vol. 3, 1-3
 - remote oscillator shelf Vol. 3, 1-4
 - single disk drive unit shelf Vol. 1, 9-6
 - ISDN XPMs (host) Vol. 3, 6-3
 - line concentrating equipment frame
 - enhanced line concentrating module Vol. 2, 1-9
 - ISDN LCE frame layout Vol. 2, 1-5
 - ISDN line concentrating equipment frame Vol. 2, 1-3, Vol. 3, 5-3
 - LCE frame layout Vol. 2, 1-4, Vol. 3, 5-3
 - LCM line drawer Vol. 2, 1-7
 - LCME line drawer Vol. 2, 1-10
 - LCMI line drawer (international) Vol. 2, 1-8
 - line concentrating module Vol. 2, 1-6, Vol. 3, 5-4
 - line module equipment frame
 - line drawer layout (metal) Vol. 2, 2-8, Vol. 2, 10-8
 - line drawer layout (plastic) Vol. 2, 2-7, Vol. 2, 10-7
 - line drawer shelf Vol. 2, 2-6, Vol. 2, 10-6
 - line module controller Vol. 2, 2-5, Vol. 2, 10-5
 - LME frame layout Vol. 2, 10-4
 - link peripheral processor (SuperNode)
 - application processor unit Vol. 2, 3-8
 - CCS7 link interface unit (2-slot, channelized) Vol. 2, 3-8
 - CCS7 link interface unit (2-slot, non-channelized) Vol. 2, 3-8
 - Ethernet interface unit (2-slot) Vol. 2, 3-8
 - frame relay interface unit Vol. 2, 3-8
 - link interface module showing LMS units Vol. 2, 3-5
 - link interface shelf common fill, 2-slot ASUs Vol. 2, 3-7
 - link interface shelf for 2-slot ASUs Vol. 2, 3-8
 - LPP cabinet layout Vol. 2, 3-4
 - network interface unit Vol. 2, 3-8
 - voice processor unit Vol. 2, 3-8
 - X.25 link interface unit Vol. 2, 3-8
 - message switch and buffer equipment frame
 - CCS6 signaling terminal array Vol. 2, 7-8
 - CCS6 signaling terminal controller array Vol. 2, 7-9
 - CCS7 signaling terminal array Vol. 2, 7-11
 - CCS7 signaling terminal group Vol. 2, 7-10
 - MS6E frame layout Vol. 2, 7-4
 - MS7E frame layout Vol. 2, 7-6
 - ST6E frame layout Vol. 2, 7-5
 - ST7E frame layout Vol. 2, 7-7
 - network equipment frames
 - ENET 128K frame layout Vol. 2, 8-8
 - ENET 64K frame layout Vol. 2, 8-7
 - ENET shelf Vol. 2, 8-14
 - NT0X48 NET crosspoint shelf Vol. 2, 8-10
 - NT0X48 NET frame layout Vol. 2, 8-4
 - NT0X48 NET interface shelf Vol. 2, 8-9
 - NT5X13 NETC crosspoint shelf Vol. 2, 8-12
 - NT5X13 NETC frame layout Vol. 2, 8-5
 - NT5X13 NETC interface shelf Vol. 2, 8-11
 - NT8X11 DSN frame layout Vol. 2, 8-6
 - NX8X11 DSN shelf Vol. 2, 8-13
 - office alarm unit Vol. 2, 9-3
 - single core cabinet
 - enhanced network and interface shelf Vol. 1, 6-5, Vol. 1, 6-6
 - SCC cabinet layout Vol. 1, 3-3, Vol. 1, 6-3, Vol. 2, 4-3, Vol. 2, 6-3
 - SuperNode SE computing module/system load module Vol. 1, 3-4
 - SuperNode SE link interface shelf, 2-slot ASUs Vol. 2, 4-5
 - SuperNode SE link interface shelf, ASU common fill Vol. 2, 4-4
 - SuperNode SE message switch shelf Vol. 2, 6-4
 - SuperNode SE 16K ENET Vol. 1, 6-5
 - SuperNode SE 16k ENET Vol. 1, 6-3
-

- SuperNode SE 32k Vol. 1, 6-4
- trunk module equipment frame
 - digital recorded announcement machine with NT0X70 processor Vol. 3, 4-9
 - digital recorded announcement machine with NT4X65 processor Vol. 3, 4-10
 - integrated service module with NTFX42 processor Vol. 3, 4-12
 - integrated service module with single-card PMs Vol. 3, 4-13
 - maintenance trunk module with NT0X70 processor Vol. 3, 4-7
 - maintenance trunk module with NT4X65 processor Vol. 3, 4-8
 - office alarm unit with NT0X70 processor Vol. 2, 9-5
 - office alarm unit with NT4X65 processor Vol. 2, 9-6
 - service trunk module Vol. 3, 4-11
 - TME frame layout Vol. 2, 9-4, Vol. 3, 4-4
 - trunk module with NT0X70 processor Vol. 3, 4-5
 - trunk module with NT4X65 processor Vol. 3, 4-6
- XPMs (host) Vol. 3, 6-3
- Star Remote System
 - Star Module
 - C-side links mapping
 - illustrated Vol. 7, 1-459, Vol. 7, 1-993

DMS-100 Family
North American DMS-100
Card Replacement Procedures
Volume 6 of 7

Product Documentation - Dept. 3423
Nortel Networks
P.O. Box 13010
RTP, NC 27709-3010
Telephone: 1-877-662-5669
email: cits@nortelnetworks.com

Copyright © 1996-2001 Nortel Networks,
All Rights Reserved

NORTEL NETWORKS CONFIDENTIAL: The information contained herein is the property of Nortel Networks and is strictly confidential. Except as expressly authorized in writing by Nortel Networks, the holder shall keep all information contained herein confidential, shall disclose the information only to its employees with a need to know, and shall protect the information, in whole or in part, from disclosure and dissemination to third parties with the same degree of care it uses to protect its own confidential information, but with no less than reasonable care. Except as expressly authorized in writing by Nortel Networks, the holder is granted no rights to use the information contained herein.

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. Changes or modification to the DMS-100 without the express consent of Nortel Networks may void its warranty and void the user's authority to operate the equipment.

Nortel Networks, the Nortel Networks logo, the Globemark, How the World Shares Ideas, Unified Networks, DMS, DMS-100, Helmsman, MAP, Meridian, Nortel, Northern Telecom, NT, and Supernode are trademarks of Nortel Networks.

Publication number: 297-8001-547
Product release: LEC0015 and up
Document release: Standard 14.02
Date: May 2001
Printed in the United States of America

