

297-8001-840

DMS-100 Family

North American DMS-100

Log Report Reference Manual Volume 6 of 7

NO6100-RSDT100

LEC0015 and up Standard 14.02 May 2001

DMS-100 Family

North American DMS-100

Log Report Reference Manual Volume 6 of 7

NO6100-RSDT100

Publication number: 297-8001-840

Product release: LEC0015 and up

Document release: Standard 14.02

Date: May 2001

Copyright © 1996-2001 Nortel Networks,
All Rights Reserved

Printed in the United States of America

NORTEL NETWORKS CONFIDENTIAL: The information contained herein is the property of Nortel Networks and is strictly confidential. Except as expressly authorized in writing by Nortel Networks, the holder shall keep all information contained herein confidential, shall disclose the information only to its employees with a need to know, and shall protect the information, in whole or in part, from disclosure and dissemination to third parties with the same degree of care it uses to protect its own confidential information, but with no less than reasonable care. Except as expressly authorized in writing by Nortel Networks, the holder is granted no rights to use the information contained herein.

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. Changes or modification to the DMS-100 without the express consent of Nortel Networks may void its warranty and void the user's authority to operate the equipment.

Nortel Networks, the Nortel Networks logo, the Globemark, How the World Shares Ideas, Unified Networks, DMS, DMS-100, Helmsman, MAP, Meridian, Nortel, Northern Telecom, NT, and SuperNode are trademarks of Nortel Networks.

Contents

Log Report Reference Manual Volume 6 of 7 NO6100-RSDT100

NTP Summary Contents	xi

1 Log reports	1-1

Introduction	1-1
Explanation	1-1
Format	1-1
Example	1-1
Field descriptions	1-1
Action	1-1
Associated OM registers	1-1
Additional information	1-2
NO6100	1-3
NO6101	1-5
NO6103	1-7
NO6104	1-8
NO6120	1-9
NO6121	1-11
NO6200	1-12
NO6201	1-14
NO6202	1-16
NO6303	1-18
NODE300	1-20
NODE323	1-22
NODE450	1-24
NODE451	1-26
NODE600	1-28
NOP100	1-30
NOP101	1-33
NOP102	1-37
NOP103	1-39
NOP110	1-42
NOP111	1-44
NOP112	1-46
NPAC128	1-47
NPAC210	1-49

NPAC211	1-50
NPAC212	1-51
NSS100	1-52
NSS101	1-55
NSS104	1-57
NSS107	1-59
NWM100	1-61
NWM101	1-63
NWM102	1-65
NWM103	1-67
NWM104	1-69
NWM105	1-71
NWM106	1-73
NWM107	1-75
NWM108	1-78
NWM109	1-80
NWM110	1-82
NWM111	1-84
NWM200	1-86
NWM201	1-88
NWM202	1-90
NWM203	1-92
NWM300	1-94
NWM400	1-96
NWM500	1-98
NWM501	1-101
NWM502	1-103
NWM503	1-105
OCCP100	1-107
OCS100	1-109
ODM300	1-110
ODM301	1-112
ODM302	1-114
ODM303	1-116
ODM304	1-118
ODM305	1-120
ODM600	1-122
ODM601	1-124
ODM602	1-126
ODM603-NE36	1-128
OLS301	1-130
OLS302	1-132
OLS303	1-134
OLS304	1-136
OLS305	1-138
OLS306	1-140
OLS307	1-142
OLS308	1-144
OLS310	1-146
OLS311	1-148
OLS312	1-150

OLS313	1-152
OLS320	1-154
OLS321	1-156
OLS600	1-158
OLS601	1-160
OLS602	1-162
OM2113	1-164
OM2115	1-166
OM2116_M	1-168
OM2117	1-171
OM2200	1-174
OM2300	1-176
OMA400	1-178
OMA401	1-180
OMA402	1-182
OMA403	1-184
OMA404	1-186
OMA500	1-188
OMA501	1-190
OMPR200	1-192
OMRS0XX	1-193
OMX101	1-194
OMX102	1-195
OMX302	1-196
OSF301	1-197
OSF302	1-199
OSF303	1-201
OSF304	1-203
OSF306	1-205
OSF307	1-207
OSF308	1-209
OSF309	1-211
OSF313	1-213
OSF314	1-215
OSF317	1-217
OSF318	1-219
OSF319	1-221
OSF401	1-223
PCH100	1-225
PCH101	1-227
PCH102	1-229
PCH103	1-231
PCH105	1-232
PCH107	1-234
PCH111	1-237
PCH201	1-239
PCH203	1-241
PCH204	1-242
PCH350	1-244
PCH650	1-246
PEND100	1-248

PEND101	1-249
PES100	1-250
PES101	1-252
PES102	1-255
PES103	1-258
PES104	1-259
PES105	1-261
PES106	1-263
PES107	1-265
PES108	1-268
PES109	1-269
PES110	1-271
PES111	1-273
PES112	1-275
PES113	1-277
PES114	1-279
PES116	1-280
PES117	1-285
PES200	1-287
PES201	1-289
PES202	1-291
PM100	1-293
PM101	1-296
PM102	1-298
PM103	1-307
PM104	1-310
PM105	1-311
PM106	1-316
PM107	1-323
PM108	1-328
PM109	1-331
PM110	1-333
PM111	1-335
PM112	1-338
PM113	1-339
PM114	1-342
PM115	1-345
PM116	1-348
PM117	1-350
PM118	1-351
PM119	1-354
PM120	1-356
PM121	1-358
PM122	1-360
PM124	1-365
PM125	1-370
PM126	1-373
PM127	1-376
PM128	1-377
PM129	1-398
PM130	1-401

PM131	1-404
PM132	1-408
PM139	1-411
PM140	1-413
PM141	1-415
PM150	1-417
PM151	1-419
PM152	1-421
PM160	1-423
PM161	1-426
PM163	1-431
PM166	1-433
PM167	1-434
PM168	1-435
PM169	1-436
PM171	1-438
PM172	1-447
PM173	1-450
PM174	1-453
PM175	1-456
PM176	1-459
PM177	1-462
PM178	1-464
PM179	1-466
PM180	1-476
PM181	1-482
PM182	1-543
PM183	1-547
PM184	1-551
PM185	1-555
PM186	1-556
PM187	1-558
PM188	1-559
PM189	1-561
PM190	1-562
PM191	1-564
PM192	1-566
PM193	1-568
PM194	1-570
PM197	1-572
PM198	1-574
PM199	1-577
PM200	1-579
PM217	1-582
PM219	1-583
PM220	1-585
PM221	1-587
PM222	1-589
PM223	1-591
PM230	1-593
PM231	1-597

PM232	1-603
PM233	1-609
PM234	1-615
PM235	1-621
PM236	1-624
PM270	1-628
PM300	1-630
PM400	1-633
PM420	1-635
PM600	1-637
PM601	1-649
PM700	1-652
PM701	1-653
PM702	1-655
PM703	1-656
PM777	1-658
PM800	1-676
POOL300	1-678
POOL301	1-679
POOL302	1-680
POOL310	1-681
POOL311	1-683
POOL312	1-685
POOL320	1-687
POOL321	1-689
POOL600	1-691
POOL601	1-693
PRA200	1-695
PRFM200	1-697
PRFM201	1-701
PRFM204	1-704
PRFM210	1-707
PRSM300	1-711
PRSM301	1-713
PRSM302	1-714
PRSM360	1-717
PRSM380	1-719
PRSM381	1-721
PRSM400	1-723
PRSM400	1-726
PRSM401	1-729
PRSM470	1-731
PRSM600	1-734
PRSM603	1-735
PRSM680	1-737
PRSM681	1-739
PRSM682	1-741
PRSM683	1-743
RDT300	1-745
RDT301	1-748
RDT302	1-752

RDT303	1-757
RDT304	1-762
RDT305	1-767
RDT306	1-772
RDT307	1-775
RDT308	1-778
RDT309	1-782
RDT310	1-786
RDT600	1-790
RDT601	1-792
REPL100	1-794
RMAN100	1-796
RMAN101	1-798
RMAN102	1-801
RMAN103	1-803
RMAN104	1-805
RMAN105	1-807
RMAN106	1-809
RMAN107	1-811
RMAN108	1-814
RMAN109	1-816
RMAN110	1-818
RMAN111	1-820
RMAN112	1-822
RMAN113	1-824
RMAN114	1-826
RMAN115	1-828
RMAN116	1-830
RMAN117	1-832
RMAN118	1-834
RMAN119	1-836
RMAN120	1-838
RMAN121	1-840
RMAN122	1-842
RMAN123	1-844
RMAN139	1-846
RMAN140	1-848
RMAN141	1-850
RMSG600	1-852
RMSG601	1-854
RMSG602	1-856
RMSG603	1-859
RO101	1-861
RO102	1-864
RO103	1-866
RO104	1-869
RO105	1-871
RONI100	1-873
RSDT100	1-875

NTP Summary Contents

Log Report Reference Manual Volume 1 of 7 Log Reports ACD110-AUD420

About this document Vol. 1, xiii

- How to check the version and issue of this document Vol. 1, xiii
- References in this document Vol. 1, xiii
- What precautionary messages mean Vol. 1, xv
- How commands, parameters, and responses are represented Vol. 1, xvi
 - Input prompt (>) Vol. 1, xvi
 - Commands and fixed parameters Vol. 1, xvi
 - Variables Vol. 1, xvi
 - Responses Vol. 1, xvi

1 Understanding log reports Vol. 1, 1-1

- Controlling output from the log system Vol. 1, 1-1
- Log buffers Vol. 1, 1-1
- Routing log reports Vol. 1, 1-2
- Routing and reporting subsystems Vol. 1, 1-2
- Logutil commands Vol. 1, 1-3
- Tables Vol. 1, 1-3
 - Option of normal log or short log formats Vol. 1, 1-5
 - Log report formats Vol. 1, 1-5
 - Event type and identification Vol. 1, 1-9
 - Variable message/data area Vol. 1, 1-10
- Structure of a log report description Vol. 1, 1-10
 - Report format Vol. 1, 1-10
 - Example Vol. 1, 1-11
 - Explanation Vol. 1, 1-11
 - Explanation table Vol. 1, 1-11
 - Action taken Vol. 1, 1-12
 - Associated OM registers Vol. 1, 1-12
- How to understand hex tables in AUD and AUDT log reports Vol. 1, 1-12
- Log report list Vol. 1, 1-88
- Information-only logs Vol. 1, 1-100

2	Log reports	Vol. 1, 2-1
	Introduction Vol. 1, 2-1	
	Explanation Vol. 1, 2-1	
	Format Vol. 1, 2-1	
	Example Vol. 1, 2-1	
	Field descriptions Vol. 1, 2-1	
	Action Vol. 1, 2-1	
	Associated OM registers Vol. 1, 2-1	
	Additional information Vol. 1, 2-2	
	Log Reports ACD110-AUD420	Vol. 1, 2-3

Log Report Reference Manual Volume 2 of 7

Log Reports AUD422-CCS162

1	Log reports	Vol. 2, 1-1
	Introduction Vol. 2, 1-1	
	Explanation Vol. 2, 1-1	
	Format Vol. 2, 1-1	
	Example Vol. 2, 1-1	
	Field descriptions Vol. 2, 1-1	
	Action Vol. 2, 1-1	
	Associated OM registers Vol. 2, 1-1	
	Additional information Vol. 2, 1-2	
	Log Reports AUD422-CCS162	Vol. 2, 1-3

Log Report Reference Manual Volume 3 of 7

Log Reports CCS163-EATS100

1	Log reports	Vol. 3, 1-1
	Introduction Vol. 3, 1-1	
	Explanation Vol. 3, 1-1	
	Format Vol. 3, 1-1	
	Example Vol. 3, 1-1	
	Field descriptions Vol. 3, 1-1	
	Action Vol. 3, 1-1	
	Associated OM registers Vol. 3, 1-1	
	Additional information Vol. 3, 1-2	
	Log Reports CCS163-EATS100	Vol. 3, 1-3

Log Report Reference Manual Volume 4 of 7

Log Reports ECTS100-LINE301

1	Log reports	Vol. 4, 1-1
	Introduction	Vol. 4, 1-1
	Explanation	Vol. 4, 1-1
	Format	Vol. 4, 1-1
	Example	Vol. 4, 1-1
	Field descriptions	Vol. 4, 1-1
	Action	Vol. 4, 1-1
	Associated OM registers	Vol. 4, 1-1
	Additional information	Vol. 4, 1-2
	Log Reports ECTS100-LINE301	Vol. 4, 1-3

Log Report Reference Manual Volume 5 of 7

Log Reports LINE400-NMS104

1	Log reports	Vol. 5, 1-1
	Introduction	Vol. 5, 1-1
	Explanation	Vol. 5, 1-1
	Format	Vol. 5, 1-1
	Example	Vol. 5, 1-1
	Field descriptions	Vol. 5, 1-1
	Action	Vol. 5, 1-1
	Associated OM registers	Vol. 5, 1-1
	Additional information	Vol. 5, 1-2
	Log Reports LINE400-NMS104	Vol. 5, 1-3

Log Report Reference Manual Volume 6 of 7

Log Reports NO6100-RSDT100

1	Log reports	Vol. 6, 1-1
	Introduction	Vol. 6, 1-1
	Explanation	Vol. 6, 1-1
	Format	Vol. 6, 1-1
	Example	Vol. 6, 1-1
	Field descriptions	Vol. 6, 1-1
	Action	Vol. 6, 1-1
	Associated OM registers	Vol. 6, 1-1
	Additional information	Vol. 6, 1-2
	Log Reports NO6100-RSDT100	Vol. 6, 1-3

Log Report Reference Manual Volume 7 of 7

Log Reports SALN100-XAC640

1	Log reports	Vol. 7, 1-1
	Introduction	Vol. 7, 1-1
	Explanation	Vol. 7, 1-1
	Format	Vol. 7, 1-1
	Example	Vol. 7, 1-1
	Field descriptions	Vol. 7, 1-1
	Action	Vol. 7, 1-1
	Associated OM registers	Vol. 7, 1-1
	Additional information	Vol. 7, 1-2
	Log Reports SALN100-XAC640	Vol. 7, 1-3

1 Log reports

Introduction

This volume contains log report descriptions. Each log report description contains the following sections:

- Explanation
- Format
- Example
- Field descriptions
- Action
- Associated OM registers
- Additional information

Explanation

This section identifies the affected subsystem and indicates the reason the system generates the log report.

Format

This section shows the format of the log report. If the log report has more than one format, this section displays each format.

Example

This section contains an example of a log report. If the log report has more than one format, this section can contain a minimum of two examples.

Field descriptions

This section describes each field in the log report.

Action

This section describes the user action required when the system generates the log report.

Associated OM registers

This section lists associated OM registers for the log report.

Additional information

This section provides additional information about the log report.

NO6100

Explanation

The Number 6 Signaling (NO6) link management process generates NO6100 when the NO6 mailbox a message that contains invalid data.

Format

The log report format for NO6100 is as follows:

```
NO6100 mmmdd hh:mm:ss ssdd INFO NO6 INVALID MESSAGE
      hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh
      hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh
      N6SLMP: infotxt
```

Example

An example of log report NO6100 follows:

```
NO6100 APR25 12:25:49 1984 INFO NO6 INVALID MESSAGE
      0107 0608 0402 8080 80EE 8080 8080 8080 8080 8080 8080
      8080
      8080 8080 8080 8080 8080 8080 8080 8080 8080 8080 8080
      8080
      N6SLMP:HUNT UNEXPECTED HOH1
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO NO6 INVALID MESSAGE	Constant	Indicates mailbox received message that contains data that is not correct.
hhhh	0000-FFFF	Provides data contained in message.
N6SLMP	Character string	Provides additional information from NO6 link management process.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

NO6100 (end)

Additional information

There is no additional information.

NO6101

Explanation

The number 6 signaling (NO6) link management process generates NO6101 when the signaling terminal (ST) sends a signaling link failure message. The signaling link is automatically configured and synchronized.

Format

The log report format for NO6101 is as follows:

```
NO6101 mmmdd hh:mm:ss ssdd FLT NO6 LINK FAILURE
LINKSET=linkid , TRANSMISSION LINK= tlinkid
LINK STATE= txt , FAILURE REASON= reastxt
```

Example

An example of log report NO6101 follows:

```
NO6101 APR01 12:00:00 2112 FLT NO6 LINK FAILURE
LINKSET=LSBTOA1 0, TRANSMISSION LINK= R1LOOPA 20
LINK STATE= PRVD, FAILURE REASON= CONTINUOUS SU ERR
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FLT NO6 LINK FAILURE	Constant	Signaling link failure message received from signaling terminal.
LINKSET	Character string	Provides LINKSET identification.
TRANSMISSION LINK	Character string	Provides transmission link identification. Refer to customer data table NO6LKSET.
LINK STATE	Character string	Provides link state.
FAILURE REASON	Character string	Provides failure reason.

Action

Enter link set and monitor the synchronization progress of the signaling link.

NO6101 (end)

Associated OM registers

There are no associated OM registers.

NO6103

Explanation

The number 6 signaling (NO6) link management process generates NO6103 when a signaling link failure lasts longer than 5 min. The signaling terminal (ST) and modem are automatically diagnosed.

Format

The log report format for NO6103 is as follows:

```
*NO6103 mmmdd hh:mm:ss ssdd FLT NO6 LINK OVERALL SYNC  
TIMEOUT 5 MI  
LINKSET=linkid
```

Example

An example of log report NO6103 follows:

```
*NO6102 APR01 12:00:00 2112 FLT NO6 LINK OVERALL SYNC  
TIMEOUT 5 MI  
LINKSET=LSBT0A1 0
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FLT NO6 LINK OVERALL SYNC TIMEOUT 5 MI	Constant	Indicates signaling link failure lasted longer than 5 min.
LINKSET	Character string	Provides link set identification. Refer to customer data table NO6LKSET.

Action

Enter the peripheral module (PM) level and observe the diagnostic results of the ST to determine if any manual interruption is required.

Associated OM registers

There are no associated registers.

NO6104

Explanation

The number six signaling (NO6) link management process generates this report when a manually initiated action deactivates the signaling link. The NO6 signaling link management process also generates this report when the system detects a hard failure.

Format

The log report format for NO6104 is as follows:

```
**NO6104 mmmdd hh:mm:ss ssdd INFO NO6 LINK DEACTIVATED  
      LINKSET=linkid    REASON= reastxt
```

Example

An example of log report NO6104 follows:

```
**NO6104 APR01 12:00:00 2112 INFO NO6 LINK DEACTIVATED  
      LINKSET=LSBTOA1 0    REASON= SYNC TIMEOUT
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO NO6 LINK DEACTIVATED	Constant	Indicates signaling link deactivated.
LINKSET	Character string	Provides link set identification. See customer data table NO6LKSET.
REASON	Descriptive text	Provides reason for deactivation.

Action

Enter the signaling terminal controller (STC) level and return the signaling terminal (ST) to service if the deactivation reason is ST or MODEM failure.

Associated OM registers

There are no associated OM registers.

NO6120

Explanation

The number 6 signaling (NO6) subsystem generates NO6120 when the traffic state on a link changes.

Format

The log report format for NO6120 is as follows:

NO6120 mmmdd hh:mm:ss ssdd INFO NO6 LINK TRAFFIC STATE
Link = linkid Traffic State = statxt

Example

An example of log report NO6120 follows:

NO6120 MAY31 14:21:21 2112 INFO NO6 LINK TRAFFIC STATE
Link = AAAPRM1CAN 0 Traffic State = In service

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO NO6 LINK TRAFFIC STATE	Constant	Indicates a change of link traffic state.
Link	Symbolic text	Identifies the affected NO6 link. Refer to Table NO6LINKS in <i>Toll Customer Data Schema</i> , 297-2201-451 for values.
Traffic State	System Busy, Man Busy, Seized, Off Line, Remote Man Busy, Idle - not in service, In service, Standby Ready, Emer Avail, Unequipped	Indicates the new traffic state of the link.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

NO6120 (end)

Additional information

There is no additional information.

NO6121

Explanation

The Number 6 Signaling (NO6) subsystem generates NO6121 when the system aborts the manual changeover of the specified link.

Format

The log report format for NO6121 is as follows:

```
NO6121 mmmdd hh:mm:ss ssdd INFO NO6 LINK MANUAL  
CHANGEOVER ABORTED  
Link = linkid
```

Example

An example of log report NO6121 follows:

```
NO6121 MAY31 14:21:21 2112 INFO NO6 LINK MANUAL CHANGEOVER  
ABORTED  
Link = AAPRM1CAN 0
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO NO6 LINK MANUAL CHANGEOVER ABORTED	Constant	Indicates the system aborted the manual changeover of the specified link.
LINK	Symbolic text	Identifies the affected NO6 link. Refer to table NO6LINKS in customer data schema for values.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

NO6200

Explanation

The Number 6 Signaling (NO6) link management process generates log report NO6200. This report appears when a blocking signal is not acknowledged in the first 10 to 15 s period. The blocking signal is not acknowledged after an additional minute of repeating the signal. It is not known if the far end has received the blocking signals.

Format

The log report format for NO6200 is as follows:

```
NO6200 mmmdd hh:mm:ss ssdd INFO BLOCKING_ACK_TIMEOUT
      CKT clli
      ROUTESET: routeid    BAND: nnn CKT: nn
```

Example

An example of log report NO6200 follows:

```
NO6200 APR01 12:00:00 2112 INFO BLOCKING_ACK_TIMEOUT
      CKT  TRAFN062W1      0
      ROUTESET:PRM1BBBAUS    BAND: 25  CKT: 0
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO BLOCKING_ ACK_TIME OUT	Constant	Indicates the blocking signal was not acknowledged.
CKT	Symbolic text	Provides equipment identification for suspect trunk. Refer to customer data table CLLI.
ROUTESET	Symbolic text	Provides route set identification. Refer to customer data table NO6RTSET.
BAND	Integers	Provides band number. Refer to customer data table NO6BDXLA.
CKT	0-15	Provides circuit number.

Action

Manually restore the trunk to a compatible state between the two ends.

Associated OM registers

There are no associated OM registers.

NO6201

Explanation

The Number 6 Signaling (NO6) link management process generates log report NO6201. This report appears when an unblocking signal is not acknowledged in the first 10 to 15 s period. The unblocking signal is not acknowledged after an additional minute of repeating the signal. It is not known if the far end has received the unblocking signals.

Format

The log report format for NO6201 is as follows:

```
NO6201 mmmdd hh:mm:ss ssdd INFO
UNBLOCKING_ACK_TIMEOUT
CKT clli
ROUTESET: routeid    BAND: nnn CKT: nn
```

Example

An example of log report NO6201 follows:

```
NO6201 APR01 12:00:00 2112 INFO UNBLOCKING_ACK_TIMEOUT
CKT  NO6741AB      0
ROUTESET:PRM1AAACAN    BAND: 0    CKT: 0
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO UNBLOCKING_ ACK_TIMEOUT	Constant	Indicates the blocking signal was not acknowledged.
CKT	Symbolic text	Provides equipment identification for suspect trunk. Refer to customer data table CLLI.
ROUTESET	Symbolic text	Provides route set identification. Refer to customer data table NO6RTSET.

(Sheet 2 of 2)

Field	Value	Description
BAND	Integers	Provides band number. Refer to customer data table NO6BDXLA.
CKT	0-15	Provides route number.

Action

Manually restore the trunk to a compatible state between the two ends.

Associated OM registers

There are no associated OM registers.

NO6202

Explanation

The Number 6 Signaling (NO6) subsystem generates log report NO6202 when a trunk blocks for longer than 5 min.

Format

The log report format for NO6202 is as follows:

```
NO6202 mmmdd hh:mm:ss ssdd INFO
      TRUNK_IN_BLOCKED_STATE_OVER_FIVE_
      MINS
      ROUTESET: routeid  BAND: bandid CKT: cktid
```

Example

An example of log report NO6202 follows:

```
NO6202 NOV22 08:24:59 2112 INFO
      TRUNK_IN_BLOCKED_STATE_OVER_FIVE_
      MINS
      ROUTESET: RS01TLK    BAND: 6      CKT: 13
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO TRUNK_IN_BLOCKED_STATE_OVER_FIVE_MINS	Constant	Indicates a trunk blocks for more than 5 min.
ROUTESET	Symbolic text	Identifies the affected NO6 routeset by CLLI identifier. Refer to Table NO6RTSET in customer data schema for values.
BAND	0-127	Identifies the affected band.
CKT	0-15	Identifies the affected particular circuit in the specified band.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

NO6303

Explanation

The Number 6 Signaling (NO6) link management process generates log report NO6303. This report appears when the system correctly receives the reset band reply. The system corrects the trunk as part of initialization after a cold restart. Log report NO6303 reflects any change in the trunk state. The trunks marked CPB in the reset band reply are made RMB.

Format

The log report format for NO6303 is as follows:

```
NO6303 mmmdd hh:mm:ss ssdd INFO  
STATE_CHANGED_BY_RESET_BAND  
CKT clli  
FROM STATE: txt    TO STATE: txt
```

Example

There is no example.

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO STATE_CHANGED_BY_RESET_BAND	Constant	Indicates the reset reply band changed the trunk state.
CKT	Symbolic text	Provides equipment identification for suspect trunk. Refer to customer data Table CLLI.
FROM STATE	Character string	Provides old state of trunk.
TO STATE	Character string	Provides new state of trunk.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

NODE300

Explanation

The integrated node maintenance (INM) generates log report NODE300 when a trouble condition is present with the node. The INM supports node state management for different node designs. Examples of node designs are the application processor and the network interface unit (NIU). Report NODE300 indicates INM recovery actions when the node state is system busy.

The resource maintenance manager (RMM) reports faults to the INM when the system executes the QueryPM faults command at the MAP.

Format

The log report format for NODE300 is as follows:

```
NODE300 mmmdd hh:mm:ss ssdd INFO TBL Warning
  Location= <node>
  Status= <trouble_status>
  Trouble= <trouble_code>
  Action= <user_action>
  Integrated Node Maintenance Detailed Information
  Trouble Reason= <INM trouble condition reason>
```

Example

An example of log report NODE300 follows:

```
NODE300 FEB18 14:22:46 2511 INFO TBL Warning
  Location= FP 1
  Status= Alarm raised
  Trouble= Data not synchronized
  Action= Check datafill and correct if necessary
  Integrated Node Maintenance Detailed Information
  Trouble Reason= "Datafill Loadname does not match
                  Loadname in PM"
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO TBL Warning	Constant	Indicates the trouble condition with the node.
	Alphanumeric	Indicates the location of the peripheral module (PM) to which the event applies.
trouble_code	Cannot run test	Identifies the reason for the problem.
user_action	Run the test indicated below	Indicates the action to take.
INM trouble condition reason	Scheduled PM REX test not executed	Provides a reason for the trouble condition.

Action

Check the trouble field. Take action as indicated in the user action field.

Associated OM registers

There are no associated OM registers.

NODE323

Explanation

The integrated node maintenance (INM) system generates NODE323 when a REx request does not execute.

Format

The log report format for NODE323 is as follows:

```
** NODE323 mmmdd hh:mm:ss ssdd TBL REx Fault
  Location:      <location>
  Status:        <alarm_status>
  Trouble:       <trouble>
  Action:        <action>
  REX did not run
  Units:         <units_not_RExed>
  Reason:       <reason>
```

Example

An example of log report NODE323 follows:

```
** NODE323 FEB02 11:12:14 0600 TBL REx Fault
  Location:      LIM 1
  Status:        Alarm raised
  Trouble:       Scheduled test has not been executed
  Action:        Information for analysis, no immediate
                  action required
  REX did not run
  Units:         1
  Reason:       Failed
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
location	Character string	Indicates the location of the PM to which the event applies.
alarm_status	Alarm raised	Indicates an alarmed log. An alarmed log means that double stars at the beginning of the format highlight the log report. An alarmed log does not mean a MAP alarm is present.
trouble	Character string	Indicates the problem of the REx not run.
action	Character string	Indicates the trouble log is for information only.
units_not_RExed	0, 1, 0 and 1	Indicates the units which did not run the REx.
reason	Character string	Indicates the reason the REx does not run.

Action

Clear the reason that did not allow the REx to run. This reason can require a manual maintenance action or a waiting period for a system operation to clear a trouble condition. Refer NODE323 to the next level of support.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

NODE450

Explanation

The integrated node maintenance (INM) generates log report NODE450. This report summarizes a series of event reports under one log header during a routine exercise (REX) test. The NODE450 log is never in alarm mode. The NODE450 log is an abbreviated summary of the routine series of operations that compose an REX test.

The system reports all trouble events (faults) as separate logs to make them more accessible to mechanized downstream analysis. High priority events are logged as the events reach the central log system. Other events are logged following the generation of NODE450. Events of the INITIATE class appear only in NODE450, and never as separate logs.

Format

The log report formats for NODE450 are as follows:

Format 1

```
NODE450 mmmdd hh:mm:ss ssdd SUMM REX TEST SUMMARY
Location: entity name
Summary: REX Test Sequence Successful
```

Format 2

```
NODE450 mmmdd hh:mm:ss ssdd SUMM REX TEST SUMMARY
Location: entity name
Summary: REX Test Sequence Failed
TIME          EVENT
hh:mm:ss      detailed event type
hh:mm:ss      detailed event type
```

Example

Examples of log report NODE450 follow:

Example 1

```
NODE450 OCT17 12:05:01 9200 SUMM REX TEST SUMMARY
Location: NIU 7
Summary: REX Test Sequence Successful
```

Example 2

NODE450 (end)

```
NODE450 OCT17 12:05:01 9200 SUMM REX TEST SUMMARY
Location:  NIU 7
Summary:   REX Test Sequence Failed
TIME      EVENT
16:48:43   Initiate REX
16:50:13   Initiate CPU Test
16:51:06   REX Fault
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
SUMM REX TEST SUMMARY	Constant	Indicates information about the success or failure of an REX test.
Location	Symbolic text	Indicates the name of the hardware or software component or service involved.
Summary	REX Test Sequence Successful REX Test Sequence Failed	Indicates if the REX test was successful or failed.
TIME	Integers	If REX test failed, indicates the time (hh:mm:ss).
EVENT	Symbolic text	If REX test failed, indicates the event.

Action

The NODE450 log report helps log analysis. The NODE450 log report brings together related events in one report, in the correct time sequence. The action required, if any, depends on the nature of the repeated events.

Associated OM registers

There are no associated OM registers.

NODE451

Explanation

The integrated node maintenance (INM) system generates log report NODE451 when more information is available than will fit in log NODE450. The NODE451 log report continues the summary started in NODE450. The system will generate the necessary number of NODE451 logs to present a complete event failure summary. Note that the system generates NODE451 logs only if the failure event sequence will not fit in one NODE450 failure report.

Format

The log report format for NODE451 is as follows:

```
NODE451 mmmdd hh:mm:ss ssdd SUMM REX TEST SUMMARY
(contd)
  Location: entity name
  Summary:  REX Test Sequence Failed
  TIME          EVENT
  hh:mm:ss      detailed event type
  hh:mm:ss      detailed event type
```

Example

An example of log report NODE451 follows:

```
NODE450 OCT17 12:05:01 9200 SUMM REX TEST SUMMARY (contd)
  Location:  NIU 7
  Summary:   REX Test Sequence Failed
  TIME          EVENT
  16:48:43      Initiate REX
  16:50:13      Initiate CPU Test
  16:51:06      REX Fault
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
SUMM REX TEST SUMMARY	Constant	Indicates information about the completion or failure of a REX test.
Location	Symbolic text	Indicates the name of the hardware or software component or service involved.

NODE451 (end)

(Sheet 2 of 2)

Field	Value	Description
Summary : REX Test Sequence Failed	Constant	Indicates the REX test failed.
TIME	Integers	Indicates the time (hh:mm:ss).
EVENT	Symbolic text	Indicates the event.

Action

The NODE451 report helps log analysis. The NODE451 report brings together related events in one report, in the correct time sequence. The action required, if any, depends upon the nature of reported events.

Associated OM registers

There are no associated OM registers.

NODE600

Explanation

The integrated node maintenance (INM) generates log report NODE600 when a trouble condition with the node is present. The INM supports node state management for different node designs. Examples of node designs are the application processor and the network interface unit (NIU). The NODE600 log indicates INM recovery actions when the node state is system busy.

When a user executes the QueryPM faults command at the MAP, the resource maintenance manager (RMM) reports faults to the INM.

Format

The log report format for NODE600 is as follows:

```
NODE600 mmmdd hh:mm:ss ssdd INFO TBL Warning
Location= <node>
Trouble= <trouble_code>
Action= <user_action>
Integrated Node Maintenance Detailed Information
Trouble Reason= <INM trouble condition reason>
```

Example

An example of log report NODE600 follows:

```
NODE600 FEB18 14:22:46 2511 INFO TBL Warning
Location= FP 1
Trouble= Cannot run test
Action= Run the test indicated below
Integrated Node Maintenance Detailed Information
Trouble Reason= "Scheduled PM REX test not executed"
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO TBL Warning	Constant	Indicates the trouble condition related to the node.
	Alphanumeric	Indicates the location of the peripheral module (PM) to which the event applies.

NODE600 (end)

(Sheet 2 of 2)

Field	Value	Description
trouble_code	Cannot run test	Identifies the reason for the problem.
user_action	Run the test indicated below	Indicates the action you must take.
INM trouble condition reason	Scheduled PM REX test not executed	Provides a reason for the trouble condition.

Action

Check the trouble field. Take action as indicated in the user action field.

Associated OM registers

There are no associated OM registers.

NOP100

Explanation

The Network Operations Protocol (NOP) subsystem generates log report NOP100 when an invalid argument (ARG) error is present. An ARG error means the remote operation parameters are not formatted correctly. Remote operation (RO) is the level of NOP that defines the actions between the DMS and the Network Operations System (NOS).

Format

The log report format for NOP100 is as follows:

```
*NOP100 mmmdd hh:mm:ss ssdd INFO ARG errtxt
```

Example

An example of log report NOP100 follows:

```
*NOP100 JAN22 09:13:53 4566 INFO ARG 1 Wrong Userid  
Password
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO ARG	Constant	Indicates an invalid argument error.
errtxt		Identifies one of the following reasons:
	0	Default Reason.
	1	Userid Password Wrong.
	2	Parameter Missing.
	3	Value Range Error.
	4	Block Id Out of Range.
	5	Null Block Id Expected.
	6	Wrong Parameter Count.
	7	Type Range Error.
	8	Null Range Error.

NOP100 (continued)

(Sheet 2 of 2)

Field	Value	Description
	9	File Spec Error.
	10	Time Range Error.
	11	Unknown Application Identifier.
	12	PTDA Link Already Assigned.
	13	PTDA Invalid Device Name.
	14	PTDA Directory Problem.
	15	ACD Poolid Password Wrong.
	16	ACD Poolname Invalid.
	17	ACD Subpool Invalid.
	18	ACD Subpool Password Wrong.
	19	ACD Octet String Invalid.
	20	PADN Invalid Device.
	21	PADN File Not Found.
	22	PADN Wrong Processor.
	23	ACD Invalid Pool Protocol.
	24	FTRAN Invalid Device.
	25	FTRAN No Append Possible.
	26	FTRAN File Already Exists.
	27	FTRAN Not Enough Free Store.
	28	Unused.
	29	FTRAN Invalid File Name.
	30	FTRAN No File To Move.
	31	FTRAN Invalid RECFM.
	32	ACD Incomplete Range Processing.

NOP100 (end)

Action

Save the NOP100 report and contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

NOP101

Explanation

The Network Operations Protocol (NOP) subsystem generates this report when an operation sequence (SEQ) error occurs. An SEQ error indicates that remote operations (RO) are received in a not correct order.

The Network Operations Protocol (NOP) subsystem also generates this report when an invalid argument (ARG) error occurs. The ARG error means the remote operation parameters are not formatted correctly. Remote operation (RO) is the level of NOP that defines the actions between the DMS switch and the Network Operations System (NOS).

Format

The format for log report NOP101 follows:

*NOP101 mmmdd hh:mm:ss ssdd INFO SEQ errtxt

*NOP101 mmmdd hh:mm:ss ssdd INFO ARG errtxt

Example

An example of log report NOP101 follows:

*NOP101 JAN22 09:13:53 4566 INFO ARG 1 Wrong Userid
Password

Field descriptions

The following table explains each of the fields in the log report:

(Sheet 1 of 4)

Field	Value	Description
INFO SEQ	Constant	Indicates that there is an operations sequence error
errtxt		Identifies one of the following as the error reason:
	0	Default reason
	1	Nos logon not completed
	2	Duplicate logon
	3	Logout without logon

NOP101 (continued)

(Sheet 2 of 4)

Field	Value	Description
	4	Data transfer started before
	5	Requested data is being transferred
	6	Data transfer not started
	7	Nos list files in progress
	8	PTDA map already invoked
	9	PTDA scroll already invoked
	10	PTDA scroll input not pending
	11	Nos invalid state
	12	Wrong ACD mis state
	13	ACD pool associated before
	14	PADN patch applied but not needed
	15	PADN patch process in use
	16	PADN no file send received
	17	PADN no inform received
	18	PADN file already exists
	19	FTRAN invalid in this state
	20	FTRAN transmit data again requested
INFO ARG	Constant	Indicates that there is an invalid argument error
errtxt		Identifies one of the following reasons:
	0	Default Reason
	1	Userid Password Wrong
	2	Parameter Missing
	3	Value Range Error

NOP101 (continued)

(Sheet 3 of 4)

Field	Value	Description
	4	Block Id Out of Range
	5	Null Block Id Expected
	6	Wrong Parameter Count
	7	Type Range Error
	8	Null Range Error
	9	File Spec Error
	10	Time Range Error
	11	Not known Application Identifier
	12	PTDA Link Already Assigned
	13	PTDA Invalid Device Name
	14	PTDA Directory Problem
	15	ACD POOLID Password Wrong
	16	ACD Poolname Invalid
	17	ACD Subpool Invalid
	18	ACD Subpool Password Wrong
	19	ACD Octet String Invalid
	20	PADN Invalid Device
	21	PADN File Not Found
	22	PADN Wrong Processor
	23	ACD Invalid Pool Protocol
	24	FTRAN Invalid Device
	25	FTRAN No Append Possible
	26	FTRAN File Already Exists
	27	FTRAN Not Enough Free Store

NOP101 (end)

(Sheet 4 of 4)

Field	Value	Description
	28	Not used
	29	FTRAN Invalid File Name
	30	FTRAN No File To Move
	31	FTRAN Invalid RECFM
	32	ACD Not complete Range Processing

Action

Save this report and contact the next level of maintenance.

Associated OM registers

None

NOP102

Explanation

The Network Operations Protocol (NOP) subsystem generates this report when a resource (RES) problem occurs. A RES problem means there are not enough resources available for NOP on the DMS switch.

The NOP maintenance and administration position (MAP) level is accessed through the IOD MAP level and allows communication.

Format

The format for log report NOP102 follows:

*NOP102 mmmdd hh:mm:ss ssdd INFO RESn errtxt

Example

An example of log report NOP102 follows:

*NOP102 JAN22 09:13:53 4566 INFO RES0 Default Reason

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
INFO RES	0-6	Identifies one of the following as the error reason:
errtxt		
	0	Default reason
	1	Traffic load
	2	Maximum logon exceeded
	3	Too many ROS outstanding
	4	Too many files demanded
	5	Application initialization failed
	6	Application termination failed

NOP102 (end)

Action

Save this report and contact the next level of maintenance.

Associated OM registers

None

NOP103**Explanation**

The Network Operations Protocol (NOP) subsystem generates this report when a system (SYS) problem occurs. The SYS problem is a hardware, software, or communication problem during data transmission.

Format

The format for log report NOP103 follows:

```
**NOP103 JAN22 mmmdd hh:mm:ss ssdd INFO SYS errtxt
```

Example

An example of log report NOP103 follows:

```
**NOP103 JAN22 09:13:53 4566 INFO SYS 11 TRANSIENT ERROR
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO SYS	Constant	Indicates a system problem.
errtxt		Identifies one of the following as the error reason:
	10	Default Reason
	11	Transient Error
	12	Internal Buffer Not Allocated
	13	Ft Not initialized
	14	
	15	File Not Accessible
	16	File System Failure
	17	Dirp Subsystem Not Available
	18	Bad File Internal State
	19	File Not in Primary Dir

NOP103 (continued)

(Sheet 2 of 2)

Field	Value	Description
	20	File Not in Secondary Dir
	21	Bad Internal Subsystem Id
	22	Bad Internal Dirphold Id
	23	File Name Mismatch
	24	Bad File External State
	25	Active File Problem
	26	Active File Vaporized
	27	No Info For Active File
	28	File Naming Failure
	29	File In Wrong State
	30	File Not Found
	31	Active File Open Failure
	32	Unprocessed File Open Failure
	33	Processed File Open Failure
	34	Exception File Open Failure
	35	Primary Info Modified
	36	Device Not Supported
	37	Change State Not Supported
	38	System Mailbox Failure
	39	Exception File Access Failure
	40	Too Many Bad Blocks
	41	Ft Not Engineered

Action

Save this report and contact the next level of maintenance.

Associated OM registers

There are no associated OM registers

NOP110

Explanation

The Network Operations Protocol (NOP) subsystem generates this report when the passthru maintenance and administration position (MAP) application entity (PTAE) finds a session with not compatible data. The NOP subsystem generates this report when the session does not respond to a message within two minutes.

The log indicates that a centralized MAP (CMAP) user experiences problems.

Format

The format for log report NOP110 follows:

```
NOP 110 mmmdd hh:mm:ss ssdd INFO PTAE AUDIT
PTAE Session n in a bad state
No action taken
```

Example

An example of log report NOP110 follows:

```
NOP 110 SEP26 15:11:34 INFO PTAE AUDIT
PTAE Session 2 in a bad state
NO action taken
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO PTAE AUDIT	Constant	Indicates the PTAE audit has occurred
PTAE Session	0-9	Indicates the involved session
in a bad state	Constant	Indicates the session was in a bad state
No action taken	Constant	Indicates that system action was not taken

Action

There is no action required. If the audit finds the same session in the same bad state twice in a row, it will terminate the session. The audit generates a NOP111 log report. If this log occurs more than one time a day, refer to the next level of maintenance.

Associated OM registers

There are no associated OM registers

NOP111

Explanation

The Network Operations Protocol (NOP) subsystem generates this report when the passthru maintenance and application administration position (MAP) application entity (PTAE) finds one of two faults for the second time in a row.

The fault is either a session with not compatible data or a session that will not respond to a message. The session must respond to the message within two minutes. In either event, the PTAE audit stops and attempts to clean up the faulty session. This log can indicate if the system disconnects a centralized MAP (CMAP) user.

Format

The format for log report NOP111 follows:

```
*NOP111 mmmdd hh:mm:ss ssdd INFO PTAE AUDIT
    PTAE session n in a bad state
    Session KILLED
```

Example

An example of log report NOP111 follows:

```
*NOP111 SEP26 15:11:34 INFO PTAE AUDIT
    PTAE Session 2 in a bad state
    Session KILLED
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO PTAE AUDIT	Constant	Indicates that a PTAE audit takes place
PTAE Session	0-9	Indicates the number of the session concerned
in a bad state	Constant	Indicates the session was in a bad state
Session KILLED	Constant	Indicates the PTAE audit stops the damaged session

Action

There is no required action. The audit found the same session in the same bad state twice in a row and stops the session. If the log occurs more than one time a day, refer to the next level of maintenance.

Associated OM registers

There are no associated OM registers

Additional information

There is no additional information

NOP112

Explanation

The Network Operations Protocol (NOP) subsystem generates this report when the system creates a session on a DNC terminal. The system creates a session on a DNC terminal when a centralized MAP (CMAP) user logs in and can access the DMS MAP.

Format

The format for log report NOP112 follows:

```
NOP112 mmmdd hh:mm:ss ssdd INFO PTAE (CMAP)
      PTAE session n, has been created
```

Example

An example of log report NOP112 follows:

```
NOP112 SEP26 15:11:34 INFO PTAE (CMAP)
      PTAE Session 2, has been created
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
INFO PTAE (CMAP)	Constant	Indicates the creation of a CMAP session.
PTAE Session, has been created	0-9	Indicates the number of the session the system creates.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

NPAC128

Explanation

The Robust Application and Session Layer (RASL) interface generates log report NPAC128 to indicate that a system error involves a 6X91BA circuit card.

An Bad RTS Msg Params error causes the system to display the NPAC128 log. This error occurs when the system performs Return To Service (RTS) on a 6X91BA circuit card. This error occurs when a message passed to the circuit card is bad. An error reason of L2 Config. Error causes the system to display this log. The system displays this log when the near-end 6X91BA circuit card determines that a protocol is not compatible. Compatibility is between near-end and far-end 6X91BA circuit cards. The protocol can be Data Terminal Equipment (DTE) or Data Communication Equipment (DCE). This error implies that one end contains entries that are not correct.

Format

The format for log report NPAC128 follows:

```
NPAC128 mmmdd hh:mm:ss ssdd TBL 6X91BA SYSTEM ERROR
Error Reason = txt
  LINK = nn
  Application    =   NX25SLP
  Admin. Info.   =   CARD7_SLP
  PC Reg.    =   nn
  DE Reg.    =   nn
  BC Reg.    =   nn
  HL Reg.    =   nn
  PSW Reg.   =   nn
  A Reg.     =   nn
```

Example

An example of log report NPAC128 follows:

NPAC128 (end)

```
1.NPAC128 MAR31 12:11:00 2356 TBL 6X91BA SYSTEM ERROR
Error Reason = Software Trap
  LINK = 7
  Application =   NX25SLP
  Admin. Info. =   CARD7_SLP
  PC Reg. =   021212
  DE Reg. =   021212
  BC Reg. =   021212
  HL Reg. =   021212
  PSW Reg. =   021212
  A Reg. =   021212
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO 6X91BA SYSTEM ERROR	Constant	Indicates that a system error involves a 6X91BA circuit card
Error Reason	Alphanumeric	This field displays the error reason text.
Link	0-255	This field specifies the link number.
nbr	Numeric	This field provides the individual statistics.

Action

If the error text specifies Bad RTS Msg Params, check that Table NX25 datafill matches the configuration of the NT6X91BA card. Correct the entries if they are wrong. Perform RTS again. If the second RTS fails, contact the field support group.

The error reason text can specify L2 Config Error. If this event occurs enter either the near-end or far-end NT6X91BA card as DCE in Table NX25. Enter the other card as DTE. Take the card in error off-line. Correct the entries.

Associated OM registers

There are no associated OM registers

NPAC210

Explanation

The Northern X.25 (NPAC) subsystem generates NPAC210 when the system detects a minor incoming message overload (ICMO) condition on a link.

Format

The log report format for NPAC210 is as follows:

*NPAC210 mmmdd hh:mm:ss ssdd FLT Link: n Incoming Message
Overload

Example

An example of log report NPAC210 follows:

*NPAC210 MAR16 15:04:20 2112 FLT Link: 0 Incoming Message
Overload

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FLT	Constant	Indicates a defective link
Link	Integer	Identifies the link affected
Incoming Message Overload	Constant	Indicates an ICMO condition is present

Action

If the ICMO condition continues, remove the specified X.25 unit from service.

Associated OM registers

There are no associated OM registers.

NPAC211

Explanation

The Northern X.25 (NPAC) subsystem generates this report when a minor incoming message overload (ICMO) condition no longer affects a link.

Format

The log report format for NPAC211 is as follows:

*NPAC211 mmmdd hh:mm:ss ssdd Fault Cleared link: n ICMO Cleared

Example

An example of log report NPAC211 follows:

*NPAC211 MAR06 15:04:20 2112 Fault Cleared link: 0 ICMO
Cleared

Field descriptions

The following table describes each of the fields in the log report:

Field	Value	Description
Fault Cleared	Constant	Indicates clearance of a fault.
link	Integer	Identifies the link affected.
ICMO Cleared	Constant	Indicates clearance of an ICMO condition.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

NPAC212

Explanation

The Northern X.25 (NPAC) subsystem generates NPAC212 when a major incoming message overload (ICMO) condition is present on a link. The ICMO condition makes the link system busy (SysB).

Format

The log report format for NPAC212 is as follows:

```
**NPAC212 mmmdd hh:mm:ss ssdd SYSB Link: n;  
Incoming Message Overload
```

Example

An example of log report NPAC212 follows:

```
**NPAC212 JUN15 11:08:12 9036 SYSB Link: 0;  
Incoming Message Overload
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
SYSB	Constant	Indicates the link is system busy
Link	Integer	Identifies the link affected
Incoming Message Overload	Constant	Indicates the reason the link is SysB

Action

Monitor activities on this link from the MAP terminal. Automatic return to service of the link does not follow this log. Manual maintenance action must occur.

Associated OM registers

There are no associated OM registers.

NSS100

Explanation

Network Services Software (NSS) generates log report NSS100. This report provides information when incoming NSS feature group D (FGD) calls fail information digit or automatic number identification (ANI) screening.

Format

The log report format for NSS100 is as follows:

```
NSS100 mmmdd hh:mm:ss ssdd INFO DATA BASE TRBL
      CKT   CKTID
      PROBLEM CODE   =   reason
      DIGITS RECEIVED = hnnnnnnnnnnh
      CALLID         =   callid
```

Example

An example of log report NSS100 follows:

```
NSS100 JAN01 15:49:59 8234 INFO DATA BASE TRBL
      CKT   FGDIC   2
      PROBLEM CODE   =   ANI_NOT_FOUND_IN_ANIDATA
      DIGITS RECEIVED = D5198204880F
      CALLID         =   426196
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
INFO DATA BASE TRBL	Constant	Indicates a problem in an NSS FGD call
CKT	Representative text	Identifies the trunk circuit of the calling party
PROBLEM CODE	ANI_NOT_FOUND_IN ANIDATA	Indicates the three- or 10-digit automatic number identification (ANI) was received. This ANI did not have associated datafill in Table ANIDATA. This trunk must receive verify ANI. Make sure entry in Table ANIDATA is correct.

NSS100 (continued)

(Sheet 2 of 3)

Field	Value	Description
	INFO_DIGIT_TRANSLATION_ERROR	Indicates the two ANI information digits were received. It is possible that these digits do not appear for the pretranslator name in field IDPRTRAN for Table TRKGRP. The digits can appear with a selector other than ID in field PRERTSEL for Table STDPRTCT. Verify datafill in Table STDPRTCT for pretranslator name. The pretranslator name appears in field IDPRTRAN in Table TRKGRP for this trunk.
	INTDD_TRANSLATION_ERROR	Indicates system detected pretranslation of an INTDD. The digit stream does not fit the 1NX format for international dialing. Verify data entry in Table STDPRTCT for pretranslator name. The pretranslator name appears in field IDPRTRAN in Table TRKGRP for this trunk.
	INVALID_ANI_LENGTH	Indicates received ANI digits are not three or ten digits in length. This length value excludes KP, ST, and information digits. Check the ANI digit stream that this trunk receives.
	TEST_CALL_TRANSLATION_ERROR	Indicates system detected pretranslation of a TEST result. The digit stream received does not fit the 10X format or the 95XXXXX format. Verify datafill in Table STDPRTCT for pretranslator name. The pretranslator name appears in field IDPRTRAN in Table TRKGRP for this trunk.

NSS100 (end)

(Sheet 3 of 3)

Field	Value	Description
DIGITS RECEIVED	0-9, B, C, D, E, F	Indicates that the system must screen received digits. The digits include KP and ST digits.
CALLID	Integer	Identifies the call by a different call identification number

Action

The description section of the preceding table indicates instructions to follow for each problem code.

Associated OM registers

There are no associated OM registers.

NSS101**Explanation**

Network Services Software (NSS) generates log report NSS101. The NSS generates NSS101 when an incoming NSS Feature Group D (FGD) call does not receive automatic number identification (ANI) digits when field ANIDIGS is set to Y. Field ANIDIGS appears in Table TRKGRP.

Format

The log report format for NSS101 is as follows:

```
NSS101 mmmdd hh:mm:ss ssdd INFO DATA BASE TRBL
      CKT   cktid
      PROBLEM CODE   =   reason
      DIGITS RECEIVED = hnnnnnnnnnnh
      CALLID         =   callid
```

Example

An example of log report NSS101 follows:

```
NSS101 JAN01 15:49:59 8234 INFO DATA BASE TRBL
      CKT   FGDIC   2
      PROBLEM CODE   =   ANI_EXPECTED_NOT_RECEIVED
      DIGITS RECEIVED = D5198204880F
      CALLID         =   426196
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO DATA BASE TRBL	Constant	Indicates a problem in an NSS FGD call
CKT	Symbolic text	Identifies the trunk circuit of the calling party
PROBLEM CODE	ANI_EXPECTED_NOT_ RECEIVED	Indicates that system received no ANI digits and field ANIDIGS is set to Y for this trunk. Field ANIDIGS appears in Table TRKGRP.

NSS101 (end)

(Sheet 2 of 2)

Field	Value	Description
DIGITS RECEIVED	0-9, B, C, D, E, F	Indicates that received digits are for screening purposes. These digits include KP and ST digits.
CALLID	Integers	Identifies the call by a specified call identification number

Action

Verify that the system must send ANI on this trunk. If the system must not send ANIDIGS, set field ANIDIGS to N. If the system must send ANIDIGS, take appropriate action to resume transmission of ANI digits.

Associated OM registers

There are no associated OM registers.

NSS104

Explanation

The Network Services Software (NSS) subsystem generates log report NSS104. The NSS generates on either the service switching point (SSP) or on DBCP nodes. This action occurs when Table MSGRTE is not entered correctly.

An entry with PUBLIC netname and called address must appear in Table MSGRTE to send messages from the originating switch. This entry must be present to tandem messages. This entry must appear in table MSGRTE with Signaling System #7 (SS#7) or global title translation (GTT) selector. The LOCAL selector in Table MSGRTE indicates message processing must occur at the local node. The NSS generates this log in two cases. The NSS generates NSS104 when a tuple with PUBLIC netname and the called address does not appear in Table MSGRTE. The NSS generates the report when a tuple with PUBLIC netname and the called address appears in the table incorrectly. An example of an incorrect entry is a tuple marked SS#7 selector or LOCAL when the system must send the message out of the network.

Format

The log report format for NSS104 is as follows:

```
NSS104 mmmdd hh:mm:ss ssdd INFO NSS XLA PROBLEM
APPLICATION    = application
CALLED ADDRESS = nnnnnnnnnnn
REASON        = reason
```

Example

An example of log report NSS104 follows:

```
NSS104 JAN01 15:43:45 1234 INFO NSS XLA PROBLEM
APPLICATION    = NSS_TCN
CALLED ADDRESS = 6137224500
REASON        = INVALID_MSGRTE
```

NSS104 (end)

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO NSS XLA PROBLEM	Constant	Indicates Table MSGRTE not entered correctly
APPLICATION	Character string	Identifies the application that contained the problem
CALLED ADDRESS	Integers	Identifies the wrong entry in Table MSGRTE
REASON	Text	Indicates if the tuple is not present in the table or contains an invalid route

Action

Check data entry for Table MSGRTE.

Associated OM registers

There are no associated OM registers.

NSS107

Explanation

The Network Services Software (NSS) subsystem generates log report NSS107 at the NSS service switching point (SSP). The NSS generates NSS107 when the SSP receives a return error response from the NSS database control point (DBCP). The return error response indicates Table REPLDATA does not contain the dialed digits.

The NSS replace-dialed digits (RDD) feature allows the system to route a call to a number other than the number dialed. This feature replaces the originating call dialed digits and network class of service (NCOS) with new digits and a new NCOS. The feature uses the RDD database stored in Table REPLDATA to replace the dialed digits.

Format

The log report format for NSS107 is as follows:

```
NSS107 mmmdd hh:mm:ss ssdd INFO NSS REPLDIGS INFO
  CALLED ADDRESS = nnnnnnnnnnn
  DIGITS          = nnnnnnnnnnn
  REASON          = DIALED_DIGITS_NOT_FOUND
```

Example

An example of log report NSS107 follows:

```
NSS107 JAN01 15:50:49 8123 INFO NSS REPLDIGS INFO
  CALLED ADDRESS = 6137225000
  DIGITS          = 8008881234
  REASON          = DIALED_DIGITS_NOT_FOUND
```

NSS107 (end)

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO NSS REPLDIGS INFO	Constant	Indicates this log contains NSS replacing digits information
CALLED ADDRESS	Integers	Specifies the DBCP node where the RDD database resides. Table REPLDATA contains this database. This TCAP destination address appears in table MSGRTE.
DIGITS	Integers	Displays the dialed digits used to index in table REPLDATA
REASON=DIALED_DIGITS _NOT_FOUND	Constant	Indicates table REPLDATA does not contain the dialed digits.

Action

Confirm that the dialed digits are not correct for a replace-dialed digits call.

Associated OM registers

There are no associated OM registers.

NWM100**Explanation**

The Network Management (NWM) subsystem generates log report NWM100. The subsystem generates NWM100 when the directional reservation equipment (DRE) is set to an on or off state for a specified trunk group. The common language location identifier (CLLI) specifies the trunk group. The DRE control applies to a two-way trunk group to give priority to traffic that completes. The DRE reserves a number of idle trunks in the group for trunks that complete. The DRE affects direct and alternate routed traffic.

Format

The log report format for NWM100 is as follows:

```
NWM100 mmmdd hh:mm:ss ssdd INFO dretxt cli
      LEVEL=n cntltx OFRD=nnn OVFL=nnn DEFLD=nnn
```

Example

An example of log report NWM100 follows:

```
NWM100 APR01 12:00:00 2112 INFO DRE_ON PRS02F
      LEVEL=2 MANUAL OFRD=100 OVFL=7 DEFLD=2
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem
dretxt	DRE_OFF	Indicates DRE set to off
	DRE_ON	Indicates DRE set to on
cli	Symbolic text	Identifies trunk group affected. Refer to Table I. List CLLI from CI MAP level for office CLLI.
LEVEL	0-7	Provides number of idle trunks reserved for each subgroup of two-way trunks
cntltx	AUTO	Indicates dynamic overload control (DOC) signal automatically applies control
	MANUAL	Indicates control applied manually at the MAP

NWM100 (end)

(Sheet 2 of 2)

Field	Value	Description
OFRD	0-999	Provides peg count of number of calls offered to trunk group since last OM dump to holding register
OVFL	0-999	Provides peg count of number of calls that overflow from trunk group
DEFLD	0-999	Provides peg count of number of calls that NWM deflected from trunk group

Action

There is no action required. If the control activated automatically and is not required, use the REMOVE command to deactivate the control.

Associated OM registers

There are no associated OM registers.

NWM101**Explanation**

The Network Management (NWM) subsystem generates the NWM101 report. The subsystem generates NWM101 when the productional reservation equipment (PRE) feature is set to an on or off state. The PRE feature applies to a specified trunk group. The common language location identifier (CLLI) specifies the trunk group. The PRE affects only alternate route traffic on two-way trunk groups.

Format

The log report format for NWM101 is as follows:

```
NWM101 mmmdd hh:mm:ss ssdd INFO pretxt cli
      LEVEL=n cntltxt OFRD=nnn OVFL=nnn DEFLD=nnn
```

Example

An example of log report NWM101 follows:

```
NWM101 APR01 12:00:00 2112 INFO PRE_ON PRS02F
      LEVEL=2 MANUAL OFRD=122 OVFL=16 DEFLD=2
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem.
pretxt	PRE_OFF	Indicates PRE set to off.
	PRE_ON	Indicates PRE set to on.
cli	Symbolic text	Identifies trunk group affected. Refer to customer data Table CLLI for correct entries. List CLLI from CI MAP level for office CLLI.
LEVEL	0-7	Provides number of idle trunks reserved for each group of two-way trunks.
cntltxt	AUTO	Indicates dynamic overload control (DOC) signal automatically applied control.

NWM101 (end)

(Sheet 2 of 2)

Field	Value	Description
	MANUAL	Indicates manual application of control through MAP.
OFRD	0-999	Provides peg count of number of calls routed to trunk group since the last OM dump to holding register.
OVFL	0-999	Provides peg count of number of calls that overflow from trunk group.
DEFLD	0-999	Provides peg count of number of calls that NWM deflected from trunk group.

Action

There is no action required. If automatic activation of the control is not required, use the REMOVE command to deactivate this process. For information on the REMOVE command, refer to the Network Management System Reference Manual.

NWM102**Explanation**

The Network Management (NWM) subsystem log report NWM102. The subsystem generates NWM102 after the application or removal of a cancel-to (CANT) NWM control on a trunk group. The CANT control limits traffic on one-way out-going and two-way trunk groups. This control can cancel any percentage of direct and alternate route traffic to the trunk group. Percentages of traffic the control cancels range from 0-100% in one percent increments.

Format

The log report format for NWM102 is as follows:

```
NWM102 mmmdd hh:mm:ss ssdd INFO canttxt groupcli
      DR=nnn% AR=nnn% annm ctrlsc OFRD=nnn OVFL=nnn
      DEFLD=nnn
```

Example

An example of log report NWM102 follows:

```
NWM102 OCT10 08:05:35 7611 INFO CANT_ON PRS02F
      DR=0% AR=50% EA2 MANUAL OFRD=20 OVFL=0 DEFLD=0
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem.
canttxt	CANT_OFF	Indicates CANT control deactivated.
	CANT_ON	Indicates CANT control activated.
cli	Symbolic text	Identifies trunk group affected. Refer to customer data Table CLLI for correct entries. List CLLI from CI MAP level for office cli.
DR	0-100	Provides percentage of direct-routed traffic the control cancels.

NWM102 (end)

(Sheet 2 of 2)

Field	Value	Description
AR	0-100	Provides percentage of direct-routed traffic the control cancels.
annm	EA1	Indicates emergency announcement one receives traffic that control cancels.
	EA2	Indicates emergency announcement two receives traffic that control cancels.
	NCA	Indicates direction of traffic that control cancels to No circuit announcement.
cntltxt	AUTO	Indicates the dynamic overload control (DOC) signal automatically applied or removed the CANT control.
	MANUAL	Indicates manual application or removal of the CANT control at the MAP.
	EADAS	Indicates the EADAS/NM system applied or removed the CANT control.
OFRD	0-65535	Provides peg count of calls directed to trunk group since the last TRK dump to holding register.
OVFL	0-65535	Provides peg count of call overflow from trunk group since the last TRK dump to holding register.
DEFLD	0-65535	Provides peg count of calls that the CANT control deflected from the trunk group. The calls were deflected since the last TRK dump to holding registers.

Action

There is no action required.

NWM103**Explanation**

The Network Management (NWM) subsystem generates log report NWM103. The subsystem generates NWM103 after the application or removal of a cancel-from (CANF) NWM control on a trunk group. The CANF control limits traffic on one-way out-going and two-way trunk groups. This control can cancel any percentage of direct and alternate route traffic to the trunk group. Percentages of traffic the control cancels range from 0-100%, in one percent increments.

Format

The log report format for NWM103 is as follows:

```
NWM103 mmmdd hh:mm:ss ssdd INFO canftxt groupcli
      DR=nnn% AR=nnn% annm ctrlsc OFRD=nnn OVFL=nnn
      DEFLD=nnn
```

Example

An example of log report NWM103 follows:

```
NWM103 OCT10 08:05:35 7611 INFO CANF_ON PRS02F
      DR=0% AR=50% EA2 MANUAL OFRD=2- OVFL=0 DEFLD=0
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem.
canftxt	CANF_OFF	Indicates CANF control deactivated.
	CANF_ON	Indicates CANF control activated.
cli	Symbolic text	Identifies trunk group affected. Refer to customer data Table CLLI for correct entries. List CLLI from CI MAP level for office CLLI.
Note: U.S. only		

NWM103 (end)

(Sheet 2 of 2)

Field	Value	Description
DR	0 through 100	Provides percentage of direct-routed traffic that control cancels.
AR	0 through 100	Provides percentage of direct-routed traffic which control cancels.
annm	EA1	Indicates control cancels traffic that routes to emergency announcement 1.
	EA2	Indicates control cancels traffic that routes to emergency announcement 2.
	NCA	Indicates control cancels traffic that does not route to a circuit announcement.
cntltxt	AUTO	Indicates dynamic overload control (DOC) signal automatically applied or removed the CANF control.
	MANUAL	Indicates the EADAS/NM system applied or removed the CANF control.
	EADAS	Indicates the EADAS/NM system applied or removed the CANF control.
OFRD	0-65535	Provides peg count of number of calls directed to trunk group since the last TRK dump to holding register.
OVFL	0-65535	Provides peg count of overflow of calls from trunk group since the last TRK dump to holding register.
DEFLD	0-65535	Provides peg count of number of calls deflected from the trunk group by CANF control. Call deflection occurred since the last TRK dump to holding registers.
Note: U.S. only		

Action

There is no action required.

NWM104**Explanation**

The Network Management (NWM) subsystem log report NWM104. The subsystem generates NWM104 after the application or removal of a SKIP NWM control on a trunk group. The SKIP control affects traffic on one-way out-going and two-way trunk groups. The system can deny access to any percentage of direct or alternate route traffic to the trunk group. The system redirects that traffic percentage to the next in-chain route that has the SKIP control. Affected percentages of traffic range from 0-100%, in one percent increments.

Format

The log report format for NWM104 is as follows:

```
NWM104 mmmdd hh:mm:ss: INFO skiptxt groupcli
      DR=nnn% AR=nnn% annm ctrlsc OFRD=nnn OVFL=nnn
      DELFD=nnn
```

Example

An example of log report NWM104 follows:

```
NWM104 OCT10 08:05:35 7611 INFO SKIP _ON PRS02F
      DR=0% AR=50% EA2 MANUAL OFRD=20 OVFL=0 DEFLD=0
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem.
skiptxt	SKIP OFF	Indicates SKIP control deactivated.
	SKIP ON	Indicates SKIP control activated.
Note: U.S. only		

NWM104 (end)

(Sheet 2 of 2)

Field	Value	Description
clli	Symbolic text	Identifies trunk group affected. Refer to customer data Table CLLI for correct entries. List CLLI from CI MAP level for office CLLI.
DR	0-100	Provides cancel percentage of direct routed traffic .
annm	EA1	Indicates emergency announcement one receives traffic that the control cancels.
	EA2	Indicates emergency announcement two receives traffic the control cancels.
	NCA	Indicates system redirects traffic that the control cancels to no circuit announcement.
cntltxt	AUTO	Indicates dynamic overload control (DOC) signal automatically applies or removes the SKIP control.
	MANUAL	Indicates manual application or removal of the SKIP control through MAP.
	EADAS	Indicates the EADAS/NM system applies or removes the SKIP control.
OFRD	0-65535	Provides peg count of number of calls directed to trunk group since the last TRK dump to holding register.
OVFL	0-65535	Provides peg count of number of overflow calls from trunk group the last TRK dump to holding register.
DEFLD	0-65535	Provides peg count of calls SKIP control deflected from trunk group last TRK dump to holding registers.
Note: U.S. only		

Action

There is no action required.

NWM105**Explanation**

The Network Management (NWM) subsystem log report NWM105. The subsystem generates NWM105 on activation or deactivation of the incoming trunk busy (ITB) feature. This feature applies to the incoming trunk group that the CLLI specifies. The ITB feature removes from service a specified percentage (nnn%) of incoming trunks that have remote make busy (RMB) capability.

Format

The log report format for NWM105 is as follows:

```
NWM105 mmmdd hh:mm:ss ssdd INFO itbtxt cli
      nnn% cntltx
```

Example

An example of log report NWM105 follows:

```
NWM105 APR01 12:00: 00 2112 INFO ITB_ON PRS02F
      4% MANUAL
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem
itbtxt	ITB_OFF	Indicates ITB feature deactivated
	ITB_ON	Indicates ITB feature activated
cli	Symbolic text	Identifies trunk group affected. List CLLI from CI MAP level for office CLLI.
nnn%	0-100	Indicates percentage of incoming trunks in group removed from service
cntltx	AUTO	Indicates dynamic overload control (DOC) signal automatically applied control
	MANUAL	Indicates control applied manually at the MAP

NWM105 (end)

Action

There is no action required.

NWM106**Explanation**

The Network Management (NWM) system generates log report NWM106. The common language location identifier (CLLI) specifies a trunk group. The subsystem generates NWM106 when the system activates or deactivates the selective trunk reservation (STR) feature on the specified trunk group. The CLLI specifies the trunk group. The system blocks a percentage of traffic marked hard to reach (HTR) when the number of idle trunks falls to specified levels.

Format

The log report format for NWM106 is as follows:

```
<officeid> NWM106 <mmdd> <hh:mm:ss> <ssdd> INFO <strtxt>
      <clli> LEV1=<n> LEV2=<n> PCT=<nnn> <cntltxt>
      OFRD=<nnn> OVFL=<nnn> DEFLD=<nnn>
```

Example

An example of log report NWM106 follows:

```
ECOME010BT NWM106 APR01 12:00:00 2112 INFO STR_ON PRS02F
      LEV1=3 LEV2=2 PCT=24 MANUAL OFRD=68
      OVFL=8 DEFLD=1
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem
strtxt	STR_OFF	Indicates STR feature deactivated
	STR_ON	Indicates STR feature activated
CLLI	Symbolic text	Identifies trunk group affected. Lists CLLI from the CI MAP (maintenance and administration position) level for the office CLLI

NWM106 (end)

(Sheet 2 of 2)

Field	Value	Description
LEV1	0-63	Provides number of idle trunks for the Level 1 threshold. Above this number, the system allows hard-to-reach traffic to pass through. When the traffic reaches the threshold, the system blocks a percentage of hard-to-reach traffic.
LEV2	0-62	Provides number of idle trunks at which the system blocks 100% percent of alternate route traffic, 75% of HTR direct route traffic, and percentage of normal direct route traffic.
PCT	0-100	Provides percentage of HTR traffic blocked when number of idle trunks falls between levels one and two (LEV1 and LEV2). Provides percentage of normal direct route traffic blocked when number of idle trunks reaches level two.
cntltxt	AUTO	Indicates dynamic overload control (DOC) signal automatically applies control.
	MANUAL	Indicates control applied manually at the MAP
OFRD	0-999	Provides peg count of number of calls directed to trunk group since last OM dump to holding register.
OVFL	0-999	Provides peg count of number of calls involved in call overflow from trunk group.
DEFLD	0-999	Provides peg count of number of calls that NWM deflected from trunk group.

Action

There is no action required. If the system activates the control automatically and is not required, use the REMOVE command to deactivate the control.

Associated OM registers

There are no associated OM registers.

NWM107**Explanation**

The Network Management (NWM) subsystem log report NWM107. The subsystem generates NWM107 after the application or removal of a Flexible Reroute (FRR) control on a two-way or outgoing trunk group at the Group Control (GRPCTRL) level of the MAP.

Format

The log report format for NWM107 is as follows:

```
NWM107 mmmdd hh: ssdd INFO FRR statxt cllitxt
      DR=drpct AR=arpct ctrltxt ctrltxt eqtxt ctrltxt ctrltype
      VIA: viarte via1 via2 via3 via4 via5 via6 via7
      VIA: viaofc ofcrte ofrt ofr2 ofr3 ofr4
      OFRD=count ATTEMPTS=count FAILURES=count
```

Example

An example of log report NWM107 follows:

```
NWM107 APR01 12:00:00 2112 INFO FRR_ON OTMF1
      DR=50% AR=50% TRR
      VIA=
      VIAOFC= OFRT3
      MANUAL OFRD=0 ATTEMPTS=0 FAILURES=0
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
FRR statxt	ON	Indicates system applied Flexible Reroute (FRR) to the specified trunk group.
	OFF	Indicates system did not apply FRR
cllitxt	Short or Long CLLI name (from Table CLLIMITCE)	Specifies the trunk group on which the system activates or deactivates a FRR control.
DRLEV=drpct	0-100	Specifies the percentage of direct-routed traffic that the system rerouted with the FRR control.

NWM107 (continued)

(Sheet 2 of 3)

Field	Value	Description
ARLEV=arpct	0-100	Specifies the percentage of alternate-routed traffic that the system rerouted with the FRR control.
ctrltxt	IRR	Specifies that the Immediate Reroute (IRR) option applies to the FRR control.
	RRR	Specifies that the Regular Reroute (RRR) option applies to the FRR control.
ctrltxt	HTR	Specifies that the FRR control only affects Hard-to-Reach (HTR) calls.
eqtxt	EA	Specifies that the FRR control only affects Equal Access (EA) calls.
	NEA	Specifies the the FRR control only affects Non-Equal (NEA) calls.
ctrltxt	CICR	Specifies calls that have FRR controls.
ctrltype	AUTO	Indicates the system applied or removed the FRR control automatically. The application and removal of the FRR control is based on datafill in Table PREPLANS.
	MANUAL	Indicates the user applied or removed the FRR control at the GRPCTRL level of the MAP.
	EADAS	Indicates the EADAS/NM system applied or removed the FRR control.
VIA: Viarte	via1 through via7	Specifies the VIA routes (trunk groups) to which the system routes calls with the FRR control.
VIA: Viaofc	Via OFCRTE, OFRT, OFR2, OFR3, or OFR4	Specifies the VIA route (office route base) to which calls with the FRR control activated are routed.
OFRD=count	0 - 63535	Indicates the number of calls offered to a trunk group with an FRR control. This field reflects the register NATTMPT in the TRK OM group.

(Sheet 3 of 3)

Field	Value	Description
ATTEMPTS=count	0 - 63535	Indicates the number of calls offered to the VIA route list. This field reflects the register FRRTGATT in the NWMFRRTG OM group.
FAILURES=count	0-63535	Indicates the number of rerouted calls that failed to find an idle route in the VIA route list. This field reflects the register FRRTGFL in the NWM FFRTS OM group.

Action

There is action required.

NWM108

Explanation

The NWM subsystem log report NWM108. The subsystem generates NWM108 after the application or removal of the NWM International trunk override control on a trunk group. This log is for DMS300 when the subsystem ITOSUB is present.

Format

The log report format for NWM108 is as follows:

```
BTI_MADL NWM108 MMDD HH:MM:SS NUMB INFO ITO_ON/OFF
CLLI
    MANUAL    IC_TOTAL=  0   OG_SUCC=  0
```

Example

An example of log report NWM108 follows:

```
BTI_MADL NWM108 DEC06 11:45:12 2600 INFO ITO_ON IC101DMS300
    MANUAL    IC_TOTAL=   0   OG_SUCC=       0
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO	Constant	Indicates activity in the NWM subsystem.
ITOtxt	ITO_ON ITO_OFF	Indicates if application of ITO occurred.
CLLI	Symbolic text	Identifies affected trunk group. Refer to customer data Table CLLI for correct entries. List CLLI from CI MAP level for office CLLI.
IC_TOTAL	nnn	Indicates number of incoming calls received on the selected trunk.
OG_SUCC	nnn	Indicates the number of calls that originate on the given trunk and indicates if the trunk correctly transited.

Action

Check if the ITO (International trunk override) turns on or off on a specified trunk group. The state of the ITO affects NWM controls. The effect of the ITO state on the NWM controls depends on where application or removal of the ITO occurs.

Associated OM registers

Register TRK_INCATOT (incoming call attempts)

Register TRK_INOUT (tandem call attempts)

NWM109

Explanation

The Network Management (NWM) subsystem log report NWM109. The subsystem generates NWM109 after activation or deactivation of the Bi-directional Trunk Group Reservation Controls. The activation or deactivation of controls occurs on the trunk group that cllnm specifies.

Format

The log report format for NWM109 is as follows:

```
NWM109 mmmdd hh:mm:ss ssdd INFO BRC_txt cllnm cntltx  
      Pct_Inc=nn% Num_Inc=nn Pct_Og=nn% Num_Og=nnn  
      Num_Pr=nnnnn Tot_Trks=nnn
```

Example

An example of log report NWM109 follows:

```
NWM109 NOV22 17:33:43 2112 INFO BRC_ON JPNISUP1  MANUAL  
      PCT_Inc=40% Num_Inc=80 Pct_Og=30% Num_Og=60 Num_Pr=10  
      Tot_Trks=210
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
mmdd	JAN01 to DEC31	Indicates the month and day the subsystem generated the report.
hh:mm:ss	00 to 23: 00 to 59 00 to 59	Indicates the hour, minute and second at which the subsystem generated the report.
ssdd	0000 to 9999	Indicates the sequence number
BRC_txt	BRC_OFF BRC_ON	Indicates BRC deactivated. Indicates BRC activated.
cllinm	Customer Data Table CLLI	Identifies the trunk group affected.

(Sheet 2 of 2)

Field	Value	Description
Tot_Trks=nnnnnn	0 to 10000	Indicates the total number of trunks in the trunk group that clinm identified.
Pct_Inc=nnn	0 to 100	Provides the percentage of trunks reserved for incoming calls.
Num_Inc=nnnnnn	0 to 10000	Provides the number of trunks reserved for incoming calls.
Num_Og=nnnnnn	0 to 10000	Provides the number of trunks reserved for outgoing calls.
Num_Pr=nnnnnn	0 to 10000	Provides the number of trunks reserved for priority calls.
Pct_Og=nnn	0 to 100	Provides the percentage of trunks reserved for outgoing calls.
cntltxt	MANUAL	Indicates manual application of the control applied through MAP. The field can only take this value for BRC.

Action

There is no action required.

NWM110

Explanation

The Network Management (NWM) subsystem generates NWM110 when the system applies or removes Time Assignment Speed Interpolation (TASI) from a trunk group.

Format

The log report format for NWM110 is as follows:

```
NWM110 mmmdd hh:mm:ss ssdd INFO tasitxt clli  
cntltxt OFRD=nnn OVFL=nnn DEFLD=nnn
```

Example

```
NWM110 APR01 12:00:00 2112 INFO TASI_ON ITMF1  
MANUAL OFRD=68 OVFL=8 DEFLD=1
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
tasitxt	TASI_OFF	Indicates the system added TASI to trunk group.
	TASI_ON	Indicates the system removed TASI from the trunk group.
clli	Refer to Customer Data Table CLLI for values.	Identifies the trunk group affected. Refer to Table I. List CLLI from CI MAP level for office clli.
cntltxt	AUTO	Indicates Dynamic Overload Control (DOC) signal automatically applied control.
	MANUAL	
OFRD=nnn	0 to 999	Provides peg count of number of calls offered to trunk group since OM dump to holding register.

NWM110 (end)

(Sheet 2 of 2)

Field	Value	Description
OVFL=nnn	0 to 999	Provides peg count of overflow of calls from trunk group.
DEFLD=nnn	0 to 999	Provides peg count of number of calls NWM deflected from trunk group.

Action

There is no action required.

NWM111

Explanation

The Network Management (NWM) subsystem generates NWM111. The subsystem generates NWM111 when the NWM Bearer Service Skip group control is applied or removed from a trunk group.

Format

The log report format for NWM111 is as follows:

NWM111 INFO BSSKIP ON or OFF and trunk group name
Bearer Service not available and the Source of control
Some Trunk OM counts for the trunk group

Example

An example of log report NWM111 follows:

```
NWM111 JUN26 614:23:41 5882 INFO BSSKIP_ON DCMEISUP2
UNRESDIG DCME OFRD =    4 OVFL =    2 DEFLD =    1
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
bsskiptxt	BSSKIP ON	Indicates if the control has been applied or removed.
	BSSKIP OFF	
trunk group name	Variable	Indicates the Common Language Location Identifier (CLLI) for the trunk group.
Bearer Service not available	Speech	Indicates the reason the bearer service is not available. NOTE: No SPEECH means no UNRESDIG and no AU3K1HZ. No AU3K1HZ means no UNRESDIG.
	UNRESDIG	
	AU3K1HZ	
	AU7KHZ	

(Sheet 2 of 2)

Field	Value	Description
Source	DCME	Indicates that the source is Digital Circuit Multiplication Equipment (DCME).
OFRD	nnn	Indicates the number of attempts on this trunk group (allowed to search for an idle trunk).
OVFL	nnn	Indicates the number of times trunk has been accessed but an idle trunk is not available.
DEFLD	nnn	Indicates the number of calls deflected from the trunk group. The NWM Directional Reservation Equipment (DRE) and Protection Reservation Equipment (PRE) and DCME deflect the calls.

Action

There is no action required.

Associated OM registers

Some TRK OM counts related with the trunk group appear in this log. This log does not associate with an OM.

NWM200

Explanation

The Network Management (NWM) subsystem generates log report NWM200 when code blocking (CBK) controls are activated or deactivated.

Format

The log report format for NWM200 is as follows:

```
NWM200 mmmdd hh:mm:ss ssdd INFO cbktxt  
codetxt dn nnn% annm SNPA=npx PEG=nnn ALLOW=nnn
```

Example

An example of log report NWM200 follows:

```
NWM200 APR01 12:00:00 1900 INFO CBX_ON  
AC 613621 100% NCA SNPA=613 PEG=          0 ALLOW=0
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem.
cbktxt	CBK_OFF	Indicates CBK controls deactivated.
	CBK_ON	Indicates CBK controls activated.
codetxt	AC	Indicates code control enabled for area code directory number.
	CC	Indicates code control enabled for country code directory number.
	NAC	Indicates code control enabled for non-area code directory number.
	PFX	Indicates code control enabled for prefix code directory number. These prefix digits are digits used to access a network other than the primary access carrier.

(Sheet 2 of 2)

Field	Value	Description
dn	Integer	Identifies digit code for which a request for code block occurs. Up to 18 digits can be specified.
nnn%	0-100	Indicates the percentage of traffic to block.
annm	EA1	Indicates blocked traffic directed to emergency announcement 1.
	EA2	Indicates blocked traffic directed to emergency announcement 2.
	NCA	Indicates blocked traffic directed to no circuit announcement.
SNPA	0-999	The serving number plan area/serving translation scheme (SNPA/STS) code of digit code is blocked. If the digit code pegged controls all NPAs that the office controls, the system prints ALL.
PEG	0-63535	Provides peg counts of blocked calls.
ALLOW	0-63535	Peg count of calls that the control passes.

Action

There is no action required.

NWM201

Explanation

The Network Management (NWM) subsystem generates log report NWM201 when the preroute peg (PRP) count request is activated or deactivated at the MAP.

Format

The log report format for NWM201 is as follows:

```
NWM201 mmmdd hh:mm:ss ssdd INFO prptxt  
codetxt {dn} SNPA=nnn PEG=nnn
```

Example

An example of log report NWM201 follows:

```
NWM201 APR01 12:00:00 2112 INFO PRP_ON  
NAC                      613621 SNPA=613    PEG=0
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem.
prptxt	PRP_OFF	Indicates deactivation PRP count request.
	PRP_ON	Indicates activation PRP count request.
codetxt	AC	Indicates PRP count enabled for area code directory number (DN).
	CC	Indicates PRP count enabled for country code DN.
	NAC	Indicates PRP count enabled for non-area code DN.
	PFX	Indicates PRP count enabled for prefix code DN. These prefix digits are digits used to access a network other than the primary access carrier.

(Sheet 2 of 2)

Field	Value	Description
dn	Integer	Identifies digit code for which a request for preroute peg count occurs. Up to 18 digits can be specified.
SNPA	0-999	Serving numbering plan area/serving translation scheme (SNPA/STS) code of digit code pegged. If the digit code pegged controls all NPAs that the office serves, the system prints ALL. This field is valid only for NAC and AC code types.

Action

There is no action required.

NWM202

Explanation

The Network Management (NWM) subsystem generates log report NWM202 when the hard-to reach flag (HTRF) request is activated or deactivated at the MAP.

Format

The log report format for NWM202 is as follows:

```
NWM202 mmmdd hh:mm:ss ssdd INFO htrftxt  
codetxt {dn} SNPA=nnn
```

Example

An example of log report NWM202 follows:

```
NWM202 APR01 12:00:00 2112 INFO HTRF_ON  
NAC                      6211234 SNPA=819
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem.
htrftxt	HTRF_OFF	Indicates deactivation HRT request.
	HTRF_ON	Indicates activation HRTF request.
codetxt	AC	Indicates HTRF enabled for area code directory number (DN).
	CC	Indicates HTRF enabled for country code DN.
	NAC	Indicates HRTF enabled for non-area code DN.
	PFX	Indicates HTRF enabled for prefix code DN. These prefix digits are digits used to access a network other than the primary access carrier.

(Sheet 2 of 2)

Field	Value	Description
dn	Integer	Identifies digit code for which a request occurs for preroute peg count. Up to 18 digits can be specified.
SNPA	0-999	Serving-numbering plan area/serving translation scheme (SNPA/STS) code of digit code pegged. If the digit code pegged controls all NPAs that the office serves, the system prints ALL. This field is valid only for NAC and AC code types.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

NWM203

Explanation

The Network Management (NWM) subsystem generates this report when code gap controls activate or deactivate.

Format

The log report format for NWM203 is as follows:

```
NWM203 mmmdd hh:mm:ss ssdd INFO CGAP {ON, OFF}  
codetxt dn nnn% annnm SNPA=nnn PEG=nnn ALLOW=nnn  
GAP=nnn
```

Example

An example of log report NWM203 follows:

```
NWM203 APR01 12:00:00 1900 INFO CGAP_ON  
CC 613621 100% EA1 SNPA=613 PEG= 0 ALLOW= 0
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
CGAP	ON, OFF	
codetxt	CC	Indicates the code block control enables for country code directory number.
	AC	Indicates the code block control enables for area code directory number.
	NAC	Indicates the code block control enables for non-area code directory number.
	PFX	Indicates the code block control enables for prefix code directory number. Prefix code means digits are used to access a network other than the primary access carrier.
dn	Integer	Identifies digit code for which the preroute peg count is requested. This field can specify a maximum of 18 digits.
nnn%	0-100	Indicates percentage of gap controls.

(Sheet 2 of 2)

Field	Value	Description
annnm	NCA (no circuit announcement), EA1 (emergency announcement 1) EA2 (emergency announcement 2)	Indicates announcement to which system routes blocked call.
SNPA	0-999	Serving numbering plan area/serving translation scheme (SNPA/STS) code of digit code blocked. Field ALL prints if the pegged digit code controls all NPAs that an office serves. This field is valid for NAC and AC code types.
PEG	0-63535	Provides peg counts of calls. Peg counts specify the digit code before the system blocks the calls.
ALLOW	0-63535	Provides peg count of calls that pass. Calls that pass are calls the system does not block.
GAP	0.0-600.0	Indicates the gap interval in tenths of seconds.

Action

There is no action required.

NWM300

Explanation

The Network Management (NWM) subsystem generates NWN300 when a reroute (RRTE) control is activated or deactivated. The system can route a percentage of traffic from one trunk group to another in the routing chain.

Format

The log report format for NWM300 is as follows:

```
NWM300mmmdd hh:mm:ss ssdd INFO RRTE_txt  
RRTNO=nnn RRTSUB=nn nnn% cntltxt PEG=nnnn
```

Example

An example of log report NWM300 follows:

```
NWM300 APR01 12:00:00 2112 INFO RRTE_OFF  
RRTNO=3      RRTSUB=0      30%      MANUAL PEG=0
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem.
RRTE_txt	RRTE_OFF	Indicates RRTE control deactivated.
	RRTE_ON	Indicates RRTE control activated.
RRTNO	0-255	Identifies activated or deactivated reroute number.
RRTSUB	0-5	Provides reroute subindex for reroute number.
nnn%	0-100	Provides percentage of traffic the system rerouted.
cntltxt	AUTO	Indicates dynamic overload control (DOC) signal applied automatic control.

(Sheet 2 of 2)

Field	Value	Description
	MANUAL	Indicates manual control applied through the MAP.
PEG	0-9999	Provides peg count of rerouted calls.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

NWM400

Explanation

The Network Management (NWM) subsystem generates NWN400 when the system executes an automatic control command (acttxt).

Format

The log report format for NWM400 is as follows:

```
NWM400 mmmdd hh:mm:ss ssdd INFO  
ctlnm acttxt restxt INDEX=nnn SOURCE=srcetxt
```

Example

An example of log report NWM400 follows:

```
NWM400 APR01 12:00:00 2112 INFO  
AOCR APPLY SUCCESS INDEX=1 SOURCE=MANUAL
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem.
ctlnm	AOCR	Indicates automatic out-of-chain reroute (AOCR) affected.
	IDOC	Indicates internal dynamic overload control (IDOC) affected.
	PPLN	Indicates preplan number control (PPLN) affected.
	SDOC	Indicates selective dynamic overload control (SDOC) affected.
acttxt	APPLY	Indicates automatic control applied.
	DISABLE	Indicates automatic control disabled.
	ENABLE	Indicates automatic control enabled.
	REMOVE	Indicates automatic control removed.

(Sheet 2 of 2)

Field	Value	Description
restxt	FAILURE	Indicates failed action described in acttxt.
	SUCCESS	Indicates the success of the action described in acttxt.
INDEX	0-63	Indicates a type of AOCR automatic control based on the percentage overflow (when ctnm=AOCR).
	0-255	Indicates a type of PPLN automatic control for incoming signals from other switches (when ctnm=PPLN).
	1-3	Indicates a type of IDOC automatic control (when ctnm=IDOC).
SOURCE	AUTO	Indicates application of automatic control.
	CCIS	Indicates control applied for CCIS6 trunks of CCISTNWM.
	MANUAL	Indicates manual control applied through the MAP.

Action

There is no action required.

NWM500

Explanation

The Network Management (NWM) subsystem generates NWM500. The subsystem generates NWM500 to indicate that a NWM IntCCtrl Code Blocking command is applied or removed. This log helps to determine the current state of the switch with the network.

Format

The log report format for NWM500 is as follows:

```
NWM500 mmmdd hh:mm:ss ssdd INFO CBK_txt
      codenm direction userclass   country_code
      national code   nnn% annm PEG=nnn
```

```
NWM500 mmmdd hh:mm:ss ssdd INFO CBK_txt
      codenm direction userclass country_code
      national_code level annn
      no_blocked_calls no_passed_calls
```

Example

An example of log report NWM500 follows:

```
NWM500 JAN01 10:00:00 1000 INFO CBK_ON
      CCODE OUT SUBS   '32'   $
      BLOCK=   0   PASS=   0   EA1

NWM500 JAN01 10:00:00 1000 INFO CBK_OFF
      NATL IN  SUBS   '44'   '999'  20   EA2

NWM500 JAN01 10:00:00 1000 INFO CBK_OFF
      NATL OUT   OPER   '321' '12345678' 100 NCA
      BLOCK=   10  PASS=   0

NWM500 APR10 10:22:34 5260 INFO CBK)ON
      CC OUT   OPER 497 $ HULL 100% EA1
      BLOCK=   0  PASS=   0

NWM500 APR10 10:24:44 5299 INFO CBK_ON
      NATL TRAN OPER 49 4 MCL 100.0S EA1
      BLOCK=   0  PASS=   0
```

NWM500 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem.
CBK_txt	CBK_OFF	Indicates CBK control deactivated.
	CBK_ON	Indicates CBK controls activated.
codenm	CC	Indicates country code (CC) block.
	NATL	Indicates national code (NATL) block.
call direction	IN	Indicates the direction in which the calls the system increased, proceed.
	OUT	
	TRANS	
	ALL	
call userclass	SUBS	Indicates the calling party type of calls the system increased.
	OPER	
	ALL	
call country code	nnn	Indicates the country code digits of calls the system increased. The national country code appears if the control only applies to a national number.
national code	nnn	Indicates the national code digits of calls the system increased. A \$ appears if the control is only applied to a country code.
PEG	nnn	Indicates the percentage of calls that the system can block.
annm	EA1	Indicates blocked traffic directed to emergency announcement 1.
	EA2	Indicates blocked traffic directed to emergency announcement 2.

NWM500 (end)

(Sheet 2 of 2)

Field	Value	Description
	NCA	Indicates blocked traffic not directed to a circuit announcement.
BLOCK	nnn	Indicates the number of calls blocked.
PASS	nnn	Indicates the number of calls not blocked.

Action

There is no action required.

Associated OM registers

The register international code blocking (ICBK) is an associated OM register.

NWM501**Explanation**

The Network Management (NWM) subsystem generates NWM501 when an international preroute peg (PRP) command is applied or removed. This log report helps to determine the current state of the switch with the network.

Format

The log report format for NWM501 is as follows:

```
NWM501 mmmdd hh:mm:ss ssdd INFO PRP_txt
      codenm call direction userclass country_code national_code PEG=nnn
```

Example

An example of log report NWM501 follows:

```
NWM501 JAN01 10:00:00 1000 INFO PRP_ON
      CCODE OUT   SUBS   '32'   $   PEG=0
NWM501 JAN01 100:00:00 1000 INFO PRP_OFF
      NATL IN    SUBS '44' '999'           PEG=5

NWM501 JAN01 10:00:00 1000 INFO PRP_OFF
      NATL OUT OPER '321' '12345678' PEG=5
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem.
PRP_txt	PRP_OFF	Indicates PRP count request deactivated.
	PRP_ON	Indicates PRP count request activated.
codenm	CC	Indicates country code (CC) peg count request.
	NATL	Indicates national code (NATL) peg count request.
call direction	IN	Indicates the direction that calls are to proceed. The system did not increase these calls yet.

NWM501 (end)

(Sheet 2 of 2)

Field	Value	Description
call direction	OUT	Indicates the direction that calls are to proceed. The system did not increase these calls yet.
	TRANS	
	ALL	
call userclass	SUBS	Indicates the calling party type of calls the system counted.
	OPER	
	ALL	
country code	nnn	Indicates the country code digits of calls the system counted. The national country code digits appears if the control applies to a national number.
national code	nnn	Indicates the national code digits of calls the system counted. A \$ appears if the control applies to a country code.
PEG	nnn	Indicates the number of calls that matched all the control standards.

Action

There is no action required.

Associated OM registers

The register international preroute peg (IPRP) is an associated register.

NWM502**Explanation**

The Network Management (NWM) subsystem generates NWM502 when an international hard-to-reach peg (HTRP) command is applied or removed. This log report helps to determine the current state of the switch in the network.

Format

The log report format for NWM502 is as follows:

```
NWM502 mmmdd hh:mm:ss ssdd INFO HTRP_txt
      codenm direction userclass cc ATTEMPT=n1OUTP=n2    ANS=n3
```

Example

An example of log report NWM502 follows:

```
NWM502 JAN01 10:00:00 1000 INFO HTRP_ON
      CCODE OUT SUBS '32' $
      ATTMP= 0    OUTP= 0    ANS=0
NWM502 JAN01 10:00:00 1000 INFO HTRP_OFF
      NATL IN  SUBS '44'    '999'
      ATTMP= 5    OUTP= 5    ANS= 5
NWM502 JAN01 10:00:00 1000 INFO HTRP_OFF
      NATL OUT OPER '321'  '12345678'
      ATTMP= 3    OUTP= 3    ANS= 3
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity through the NWM subsystem.
HTRP_txt	HTRP_OFF	Indicates if the subsystem generates this log when the control is applied or removed.
	HTRP_ON	
codenm	CCODE	Indicates the specified discrimination level at which the code flags, CCODE or NATL.
	NATL	

NWM502 (end)

(Sheet 2 of 2)

Field	Value	Description
call direction	IN	Indicates which direction the calls that are not flagged proceed.
	OUT	
	TRANS	
	ALL	
call userclass	SUBS	Indicates the calling party type of calls the system did not flag.
	OPER	
	ALL	
country code	nnn	Indicates the country code digits of calls the system increases. The national country code appears if the control only applies to national number.
national code	nnn	Indicates the national code digits of calls the system counted. A \$ appears if the system applied the control to country code.
ATTMP	nnn	Indicates the number of call attempts that match the control criteria.
OUTP	nnn	Indicates the number of calls outpulsed that match the control criteria.
ANS	nnn	Indicates the number of calls answered that match the control criteria.

Action

There is no action required.

Associated OM registers

The register international hard to reach peg (IHTRF) is an associated OM register.

NWM503**Explanation**

The Network Management (NWM) subsystem generates NWM503. The subsystem generates NWM503 to indicate that a NWM IntCCtrl Hard to Reach Flag command is applied or removed. This log report helps to determine the current state of the switch in the network.

Format

The log report format for NWM503 is as follows:

```
NWM503mmmdd hh:mm:ss ssdd: INFO HTRF_txt
      codenm   direction userclass country_code national_code nnn
```

Example

An example of log report NWM503 follows:

```
NWM503 JAN01 10:00:00 1000 INFO HTRF_ON
      CCODE OUT SUBS '32' $
NWM503 JAN01 10:00:00 1000 INFO HTRF_OFF
      NATL IN  SUBS '44' '999'
NWM503 JAN01 10:00:00 1000 INFO HTRF_OFF
      NATL OUT OPER '321' '12345678'
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates the activity through the NWM subsystem.
HTRP txt	HTRP_ON	Indicates if the system generated this log when the control is applied or removed.
	HTRP_OFF	
codenm	CCODE	Indicates the specified discrimination level at which the code flags, CCODE, or NATL
	NATL	
call direction	IN	Indicates the direction in which calls the system flagged proceed.

NWM503 (end)

(Sheet 2 of 2)

Field	Value	Description
call userclass	OUT	Indicates the calling party type of calls the system did not flag.
	TRANS	
	ALL	
	SUBS	
	OPER	
call country code	ALL	Indicates the country code digits of calls the system did not flag. The national country code appears if the control only applies to national number.
	nnn	
national code	nnn	Indicates the national code digits of calls the system did not flag. A \$ appears if the control is applied only to country code.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

OCCP100**Explanation**

The Occupancy Peak (OCCP) subsystem generates OCCP100 when the central control (CC) is in an occupancy peak condition. This condition occurs for 12 consecutive five second periods. The subsystem generates OCCP100 when an occupancy peak condition that has a duration of ten seconds or more subsides.

Occupancy peak means the CC runs under a high percent of load. Log report OCCP100 is an international-only log report.

Format

The log report format for OCCP100 is as follows:

```
OCCP100 mmmdd hh:mm:ss ssdd INFO OCCUPANCY PEAK
nnnnnnnnnnnnnn
```

Example

An example of log report OCCP100 follows:

```
OCCP100 JAN01 14:32:10 4700 INFO OCCUPANCY PEAK
111000000000
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO OCCUPANCY PEAK	Constant	Indicates a report of an occupancy peak condition
nnnnnnnnnnnnnn	000000000000 - 111111111111	Each bit indicates the occupancy peak status for a 5 s period. All 12 bits provide a history of occupancy peak conditions for the last minute. A 1 indicates an occupancy peak condition was present for that 5 s period. A 0 indicates an occupancy peak condition that was not present for that 5 s period.

Action

If the subsystem generates a high number of these logs in a short period of time, contact the next level of maintenance.

OCCP100 (end)

Associated OM registers

There are no associated OM registers.

OCS100

Explanation

The Overload Control System (OCS) subsystem generates log report OCS100 when the OCS fails to get a guaranteed timer. The OCS dies as a result.

The system performance degrades quickly.

Format

The log report format for OCS100 is as follows:

```
**OCS100 mmmdd hh:mm:ss ssdd FAIL GUAR TIMER FAIL  
OVERLOAD CONTROL SYSTEM DEAD
```

Example

An example of log report OCS100 follows:

```
**OCS100 APR35 11:36:58 6610 FAIL GUAR TIMER FAIL  
OVERLOAD CONTROL SYSTEM DEAD
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL GUAR TIMER FAIL OVERLOAD CONTROL SYSTEM DEAD	Constant	Indicates that OCS fails to get a guaranteed timer. The OCS dies as a result.

Action

Contact field support immediately.

Associated OM registers

There are no associated OM registers.

ODM300

Explanation

The SuperNode (SN) Operations Controller (OPC) appears as a peripheral to the CM and acts as a peripheral node. The SN OPC connects to the CM through Ethernet interface units (EIU). The SN OPC has two connections: ODM serial link and ODM inter-nodal LAN connection. The OPC Duplex Manager (ODM) process uses these connections to control the job of the SN OPC unit in the duplex pair.

The subsystem generates ODM300 if a failure occurs in the inter-nodal LAN connection between the two OPC units along the inter-nodal LAN connection. This log indicates a hardware failure on this path. If an ODM202 log generates in one minute after the ODM300 log generates, refer to the ODM202 log report.

Format

The log report format for ODM300 is as follows:

```
*ODM300 mmmdd hh:mm:ss ssdd FAIL <ProcessName>(<ProcessId>)  
  Failure of internodal LAN connection  
  LOG:FAILED  
  1  
  Expert data; <ProcedureName>(<LineNo>)
```

Example

An example of log report ODM300 follows:

```
*ODM300 NOV21 16:27:49: 4232 FAIL odm(14876)  
  Failure of internodal LAN connection  
  LOG:FAILED  
  1  
  Expert data:odmmain.c(437)
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL	Constant	Indicates that the ODM process detects a failure
ProcessName	odm	Indicates the maintenance process name

(Sheet 2 of 2)

Field	Value	Description
ProcessId	14876	Provides the identification code of the maintenance process
Failure of internodal LAN connection	Constant	Indicates the failed connection between OPC units
Expert data: <ProcedureName> (<lineNo>)	odmmain.c(437)	Provides the name of the maintenance process and related line in HP maintenance software

Action

The fault isolation and detection for the OPC duplex system is based on a diagnostic system that Hewlett Packard (HP) provides. The diagnostic system has two different levels: Local Diagnostic and Remote Diagnostic.

Perform diagnostics to separate the defective component in this connection. This problem can occur because of a defective LAN card or a cable connection failure.

Associated OM registers

There are no associated OM registers.

ODM301

Explanation

The system generates ODM301 to indicate a hardware failure along the heartbeat connection of the ODM serial link between the two Operations Controller (OPC) units. If an ODM202 log follows this log in one minute, refer to *ODM202 log report*.

Format

The log report format for ODM301 is as follows:

```
*ODM301 mmmdd hh:mm:ss ssdd FAIL <ProcessName>(<ProcessId>)
  Failure of serial connection.
  LOG:FAILED
  1
  Expert data: <ProcedureName>(<LineNo>)
```

Example

An example of log report ODM301 follows:

```
*ODM301 MAY)6 16:00:30 4100 FAIL odm(14876)
  Failure of serial connection.
  LOG:FAILED
  1
  Expert data:odmmain.c(437)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL	Constant	Indicates that ODM process detects a failure
ProcessName	odm	Indicates the maintenance process name
ProcessId	14876	Provides the identification code of the process
Failure of serial connection	Constant	Provides the defective heartbeat connection type
Expert data: <ProcedureName>(<LineNo>)	odmmain.c(1437)	Provides the maintenance process and related line in HP software

Action

Use the HP diagnostic process to check the serial ports or the serial cables.
Use MAP level commands like *QueryPM* to monitor OPC unit.

Associated OM registers

There are no associated OM registers.

ODM302

Explanation

A heartbeat mechanism is present between the CM and each SuperNode (SN) Operations Controller (OPC) unit. When CM detects connection failure, CM updates the OPC MAP level and generates the PM log.

The system generates ODM302 when the connection between the OPC units fails because of hardware or important software problem.

Format

The log report format for ODM302 is as follows:

```
ODM302 mmmdd hh:mm:ss ssdd FAIL <Process Name>(<ProcessId>)
  Suspected failure of unit <unit no>
  LOG:FAILED
  1
  Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report ODM302 follows:

```
ODM302 MAY05 17:30:00 4200 FAIL odm(14876)
  Suspected failure of unit 1
  LOG:FAILED
  1
  Expert data:
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL	Constant	Indicates that ODM process detects a failure
Process Name	odm	Indicates maintenance process name
ProcessId	14876	Provides the identification code of the maintenance process
Suspected failure of unit	Constant	Identifies the defective unit of OPC

(Sheet 2 of 2)

Field	Value	Description
Unit No	0-1	Indicates which unit of the OPC is defective
Expert data: <ProcedureName> (<LineNo>)	odmmain.c(437)	Indicates the name of the process and the related line number of the HP software

Action

Use HP diagnostic facilities like Local diagnostic and Remote diagnostic, to investigate the sanity of the defective OPC unit. Monitor the MAP level OPC unit from the PM.

If the maintenance shell commands of HP diagnostic process are not enough, use the ISOLATE command in the MAP display to separate the defective OPC unit from the CM. Check the cards in the unit.

Associated OM registers

There are no associated OM registers.

ODM303

Explanation

The system implements a heartbeat mechanism between the CM and each SuperNode (SN) Operation Processor Control (OPC) unit.

When CM detects heartbeat failure during audit period of CM, the CM updates the OPC MAP level and generates the PM log. The system generates log report ODM303 when the CM-OPC unit communication fails.

Format

The log report format for ODM303 is as follows:

```
ODM303 mmmdd hh:mm:ss ssdd FAIL <ProcessName>(<ProcessId>)  
CM Communication Failure with Unit <UnitNo>  
Reason:<FailureReason>  
LOG:FAILED  
1  
Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report ODM303 follows:

```
ODM303 MAY06 16:30:00 FAIL odm(14876)  
CM Communication Failure with Unit 1  
Reason:Unknown, Possible CM Restart  
LOG:FAILED  
1  
Expert data:odmmain.c(437)
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL	Constant	Indicates that ODM process detects a failure
ProcessName	odm	Provides the maintenance process name
ProcessId	14876	Provides the maintenance process identification code
CM Communication Failure with Unit	Constant	Provides the defective unit

(Sheet 2 of 2)

Field	Value	Description
UnitNo	0-1	Indicates the defective unit of the OPC
Failure Reason	Unknown, Possible CM Restart	Indicates that the failure can result from a CM restart.
	Manual DISCONNECT	Indicates that the failure can result from a manual disconnection request

Action

If the reason text is unknown, a CM restart is the possible cause of the communication failure. Determine if the CM is in-service. If the CM is in-service, you must check the EIUs that provide interface with the CM and OPC.

If the reason is Manual DISCONNECT, use the "CONNECT" command at the OPC MAP level to connect the OPC.

Associated OM registers

There are no associated OM registers.

ODM304

Explanation

The SuperNode (SN) Operations Controller (OPC) has two units. One unit is active, the other unit is inactive.

The system generates log report ODM304 when an inactive SN OPC unit becomes active. The unit becomes active because of the failure of a minimum of one critical resource in the other unit. This log indicates a hardware or severe software failure of the other unit.

The SN OPC appears as a peripheral to the CM and acts as a peripheral node between the CM and Telco LAN in SNODE.

The SN OPC connects to the CM through Ethernet interface units (EIU). The SN OPC provides log processing through the Data Collector, the Problem Manager and the Problem Viewer. The Data Collector collects SN logs and SN OPC Unix Application Environment (UAE) logs. The Problem Manager correlates the SN logs. The Problem View browses through logs and problems. The SN OPC also delivers logs to a local printer.

Format

The log report format for ODM304 is as follows:

```
ODM304 mmmdd hh:mm:ss ssdd INFO <ProcessName> <ProcessID>  
Switch of Activity – Critical resource failed.  
LOG: FAILED  
1  
Expert data: odmmain.c (437)
```

Example

An example of log report ODM304 follows:

```
ODM304 OCT05 18:20:03 4233 INFO odm (14876)  
Switch of Activity – Critical resource failed.  
LOG: FAILED  
1  
Expert data: odmmain.c (437)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	odm	Indicates the running process of the OPC
ProcessID	nnnn	Indicates the identification code of the process.
Switch of Activity - Critical resource failed	Constant	Indicates that the active unit of the OPC changed.

Action

Use MAP level commands to test the inactive unit of the OPC.

Associated OM registers

There are no associated OM registers.

ODM305

Explanation

The system generates log report ODM305 when an inactive SuperNode (SN) Operations Controller (OPC) unit becomes active. The SN OPC unit becomes active as the result of duality failure between the units.

This log indicates a hardware or software failure of the indicated OPC unit. The SN OPC appears as a peripheral to the CM and acts as a peripheral node between the CM and Telco LAN in SNODE.

The SN OPC connects to the CM through Ethernet interface units (EIU). The SN OPC provides log processing through the Data Collector, the Problem Manager, and the Problem Viewer. The Data Collector collects SN logs and SN OPC Unix Application Environment (UAE) logs. The Problem viewer browses through logs and problems. The SNOPC also delivers logs to a local printer.

Format

The log report format for ODM305 is as follows:

```
ODM305 mmmdd hh:mm:ss ssdd INFO <ProcessName> <ProcessID>  
Switch of Activity – Suspected failure of unit <unitNo>  
LOG: FAILED  
1  
Expert data: odmmain.c (437)
```

Example

An example of log report ODM305 follows:

```
ODM305 OCT05 18:20:03 4233 INFO odm (14876)  
Switch of Activity – Suspected failure of unit 0  
LOG: FAILED  
1  
Expert data: odmmain.c (437)
```


Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	odm	Indicates the running process of OPC
ProcessID	nnnn	Indicates the identification code of the process
Switch of Activity - Suspected failure of unit <unitNo>	Constant	Indicates that the active unit of the OPC changed

Action

Use the MAP level commands to test the latest OPC inactive unit.

Associated OM registers

There are no associated OM registers.

ODM600

Explanation

The SuperNode (SN) Operations Controller (OPC) has two units. One of the units is active and the other is inactive. The system generates the report when SN OPC unit becomes active because of a manual switch of activity (SWACT).

This information log indicates why and when the SWACT occurred. The SN OPC appears as a peripheral to the computing module (CM). The SN OPC acts as a peripheral node that resides between the CM and the operating company LAN in SNODE.

The SN OPC connects to the CM through Ethernet interface units (EIU). The SN OPC uses the following method to process the logs:

- the Data Collector collects SN logs and SN OPC Unix Application Environment (UAE) logs
- the Problem Manager correlates SN logs
- the Problem Viewer browses logs and problems
- the SN OPC delivers logs to the local printer

Format

The log report format for ODM600 is as follows:

```
ODM600 mmmdd hh:mm:ss ssdd INFO <ProcessName> <ProcessID>  
Manual Switch of Activity  
LOG:  
1  
Expert data: odmmain.c (437)
```

Example

An example of log report ODM600 follows:

```
ODM600 OCT05 18:20:03 4233 INFO odm (14876)  
Manual Switch of Activity  
LOG:  
1  
Expert data: odmmain.c (437)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	odm	Indicates the running process of OPC
ProcessID	nnnn	Indicates the identification code of the process
Manual SWACT	Constant	Indicates a change in the active unit of the OPC

Action

There is no immediate action required because a manual SWACT occurred.

Associated OM registers

There are no associated OM registers.

ODM601

Explanation

The SuperNode (SN) Operations Controller (OPC) has two units. One of the units is active and the other is inactive.

The system generates the report when a SN OPC unit becomes active. The other unit enters the manual busy (ManB) state. The information log indicates why and when the SWACT occurred.

The SN OPC appears as a peripheral to the computing module (CM). This SN OPC acts as a peripheral node that resides between the CM and the operating company LAN in SNODE.

The SN OPC connects to the CM through Ethernet interface units (EIU). The SN OPC uses the following method to process the logs:

- the Data Collector collects SN logs and SN OPC Unix Application Environment (UAE) logs
- the Problem Manager correlates SN logs
- the Problem Viewer browses logs and problems
- the SN OPC delivers logs to the local printer

Format

The log report format for ODM601 is as follows:

```
ODM601 mmmdd hh:mm:ss ssdd INFO <ProcessName> <ProcessID>  
Switch of Activity – Active unit busied.  
LOG:  
1  
Expert data: odmmain.c (437)
```

Example

An example of log report ODM601 follows:

```
ODM601 OCT05 18:20:03 4233 INFO odm (14876)  
Switch of Activity – Active unit busied.  
LOG:  
1  
Expert data: odmmain.c (437)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
Process Name	odm	Indicates the running process of OPC
ProcessID	nnnn	Indicates the identification code of the process
SWACT - Active unit busied	Constant	Indicates that the active unit of the OPC is busied

Action

There is no immediate action required because a manual SWACT occurred.

Associated OM registers

There are no associated OM registers.

ODM602

Explanation

The SuperNode (SN) Operations Controller (OPC) has two units. One of the units is active and the other is inactive. The system generates the report when an SN OPC unit becomes active because of the failure of the duality between units.

This log indicates a hardware or dangerous software failure of the OPC unit. The SN OPC appears as a peripheral to the computing module (CM). The SN OPC behaves as a peripheral node that resides between the CM and the operating company LAN in SNODE.

The SN OPC connects to the CM through Ethernet Interface Units (EIUs). The SN OPC uses the following methods to process logs:

- the Data Collector collects SN logs and SN OPS Unix Application Environment (UAE) logs
- the Problem Manager correlates SN logs
- the Problem Viewer browses logs and problems
- the SN OPC delivers logs to the local printer

Format

The log report format for ODM602 is as follows:

```
ODM602 mmmdd hh:mm:ss ssdd INFO <ProcessName> <ProcessID>  
Switch of Activity – Suspected failure of unit <unitNo>.  
LOG: FAILED  
1  
Expert data: odmmain.c (437)
```

Example

An example of log report ODM602 follows:

```
ODM602 OCT05 18:20:03 4233 INFO odm (14876)  
Switch of Activity – Suspected failure of unit <unitNo>.  
LOG: FAILED  
1  
Expert data: odmmain.c (437)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	odm	Indicates the running process of OPC
ProcessID	nnnn	Indicates the identification code of process
Switch of Activity - Suspected failure of unit <unitNo>	Constant	Indicates failure of the OPC unit

Action

Enter the PM MAP level and investigate if the suspected OPC is in service (InSv).

Associated OM registers

There are no associated registers.

ODM603-NE36

Explanation

The system generates the Office Data Modification (ODM) NE36 log report when the system reestablishes communication with the computing module (CM). The generation of the report depends on the restoration of the CM and ODM.

The ODM process has two connections. The ODM serial link connection and the ODM InterNodal LAN connection. The connections control the activity between SuperNode (SN) Operations Controller (OPC) units.

The SN OPC appears as a peripheral to the CM. The SN OPC acts as a peripheral node that resides between the CM and the operating company LAN in SNODE. The SN OPC connects to the CM through Ethernet interface units (EIU). The SN OPC uses the following methods to process the logs:

- the Data Collector collects SN logs and SN OPC Unix Application Environment (UAE) logs
- the Problem Manager correlates SN logs
- the Problem Viewer browses logs and problems
- the SN OPC delivers logs to the local printer

Format

The log report format for ODM603-NE36 is as follows:

```
ODM603 mmmdd hh:mm:ss ssdd INFO <ProcessName> <ProcessID>  
CM Communication Re – Established with Unit <unitNo>  
Failure Reason: <reason>  
LOG: FAILED  
1  
Expert data: odmmain.c (437)
```

Example

An example of log report ODM603-NE36 follows:

```
ODM603 OCT05 18:20:03 4233 INFO odm (14876)  
CM Communication Re – Established with Unit 1  
Failure Reason: SOS WARM restart no.2 at OCT-05 18:18:00  
LOG: FAILED  
1  
Expert data: odmmain.c (437)
```

ODM603-NE36 (end)

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	odm	Indicates the running process of OPC
ProcessID	nnnn	Indicates the identification code of the process
reason	SOS WARM restart no.2 at mmmdd hh:mm:ss	Indicates the reason of failure

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

OLS301

Explanation

The Data Collector Interface delivers the logs to Log Store as the Data Collector receives the logs. Log Store receives logs from Data Collector and stores them in UNIX files. The Log Store rotates through a set of files and fills each file before over-writing the oldest one. The files are overwritten in a way that the size allocated remains constant.

The operations controller (OPC) Log Store (OLS) generates log report OLS301. The system generates the report when Log Store fails to connect to the Data Collector. This log does not appear while the Data Collector Interface software processes polling for the Data Collector.

Format

The log report format for OLS301 is as follows:

```
OLS301 mmmdd hh:mm:ss FAIL OLS <SeqNo><EventType>
  Unable to Connect to DCI, <ProcessName>(<ProcessId>)
  <Description>
  <Label>
  LOG:<Faulty mnemonic>
  1
  Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS301 follows:

```
OLS301 OCT22 13:24:05 0012 FAIL OLS(10032)
  Unable to Connect to DCI, return code=-10
  Init Fail
  LOG:FAILED
  1
  Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL OLS	Constant	Indicates when OPC OLS encounters trouble
Cannot Connect to DCI	Constant	Indicates when a connection problem occurs between DCI (Data Collector Interface) and Log Store
Init Fail	Constant	Indicates failure of initialization
Expert data	String	Indicates the procedure name written in C++ programming language

Action

The initialization process reads the Log Store configuration file. The system cannot establish a connection through Log Storage facility if a failure occurs during initialization. To clear the problem, restart the OLS and Data Collector.

Associated OM registers

There are no associated OM registers.

OLS302

Explanation

The system reads Log Store configuration file during initialization. This file has two parameters: the path to the storage files and the number of storage files. The Log Store allocates new files ahead of time. If the number of files increases, the Log Store includes the new log in the round buffer.

The system generates log report OLS302 when operations controller (OPC) log storage (OLS) cannot access the directory that includes the configuration file.

Format

The log report format for OLS302 is as follows:

```
OLS302 mmmdd hh:mm:ss FAIL OLS <SeqNo><EventType>  
Error in path to storage files, <ProcessName>(<ProcessId>)  
Init Fail  
LOG:<Faultymnemonic>  
1  
Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS302 follows:

```
LS302 OCT22 13:24:05 0012 FAIL OLS(10032)  
Error in path to storage files, erno=2  
Init Fail  
LOG:FAILED  
1  
Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on OPC OLS
Error in path to storage files	Constant	Indicates an error in the path to the storage files in the configuration file

(Sheet 2 of 2)

Field	Value	Description
Init Fail	Constant	Indicates failure of initialization
Expert data	String	Indicates the procedure name written in C++ programming language

Action

Edit the path to the storage in the configuration file or change the permission of the path.

Associated OM registers

There are no associated OM registers.

OLS303

Explanation

The operations controller (OPC) log storage (OLS) subsystem generates log report OLS303. The Log Store writes storage files. Log retrieval reads the storage files. To reserve space, the system allocates storage space for new files. Before the creation of the storage files, the Log Store checks if enough disk space is available for the files. Log Store generates the report and terminates file storage if not enough storage space is available.

Format

The log report format for OLS303 is as follows:

```
OLS303 mmmdd hh:mm:ss FAIL OLS <SeqNo><EventType>
    Insufficient disk space for storage files.
    Init Fail
    LOG:<Faulty mnemonic>
    1
    Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS303 follows:

```
OLS303 OCT21 13:24:05 0012 FAIL OLS(10032)
    Insufficient disk space for storage files.
    Init Fail
    LOG:FAILED
    1
    Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on the OPC OLS
Not enough disk space for storage files	Constant	Indicates not enough disk space for the storage files is present
Init Fail	Constant	Indicates initialization failure
Expert data	String	Indicates the procedure name written in C++ programming language

Action

Consult the system administrator to increase the free disk space. You also can reduce the value of the 'Number of files' parameter in the configuration file.

Associated OM registers

There are no associated OM registers.

OLS304

Explanation

The operations controller (OPC) log storage (OLS) subsystem generates log report OLS304. The system generates this report if a failure to read or write the directory file occurs during initialization. The directory file allows log store and log retrieval to communicate. The directory file allows the log store to determine which files to access.

Format

The log report format for OLS304 is as follows:

```
OLS304 mmmdd hh:mm:ss FAIL OLS <SeqNo><EventType>
Invalid directory file
Init Fail
LOG:<Faulty mnemonic>
1
Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS304 follows:

```
OLS304 OCT21 13:24:05 0012 FAIL OLS(10032)
Invalid directory file
Init Fail
LOG:FAILED
1
Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on OPC OLS.
Directory file not correct	Constant	Indicates that the directory file contains information that is not correct.
Init Fail	Constant	Indicates that initialization fails.
Expert data	String	Indicates the procedure name written in C++ programming language.

Action

Edit the directory file and correct the problem. If the edit fails, delete the directory file and restart the log store.

Associated OM registers

There are no associated OM registers.

OLS305

Explanation

The system reads the log store configuration file during initialization. The two parameters in the configuration file are: the path to the storage files and the number of storage files. The system generates log report OLS305 when the configuration file contains invalid information.

Format

The log report format for OLS305 is as follows:

```
OLS305 mmmdd hh:mm:ss FAIL OLS<SeqNo><EventType>  
invalid configuration file  
Init Fail  
LOG:<Faulty mnemonic>  
1  
Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS305 follows:

```
OLS305 OCT21 13:24:05 0012 FAIL OLS(10032)  
Invalid configuration file  
Init Fail  
LOG:FAILED  
1  
Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on OPC OLS.
configuration file not correct	Constant	Indicates that the configuration file contains information that is not correct.
Init Fail	Constant	Indicates that initialization fails.
Expert data	String	Indicates the procedure name written in C++ programming language.

Action

Edit the configuration file and correct the problem.

Associated OM registers

There are no associated OM registers.

OLS306

Explanation

The operations controller (OPC) log storage (OLS) subsystem generates log report OLS306. The subsystem generates this report when the configuration file does not have permission to read for the OPC OLS.

During initialization, the system reads the log store configuration file. This configuration file has (either) the default UNIX name of `ols.config`, on storage in the `/iws/opcfiles` directory, or a different UNIX name. The log store reads the path name and the number of files from the `ols.config` file.

Format

The log report format for OLS306 is as follows:

```
OLS306 mmmdd hh:mm:ss FAIL OLS<SeqNo><EventType>
Failed to open configuration file
Init Fail
LOG:<Faulty mnemonic>
1
Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS306 follows:

```
OLS306 OCT21 13:24:05 0012 FAIL OLS(10032)
Failed to open configuration file
/iws/opcfiles/ols.config, errno=2
Init Fail
LOG:FAILED
1
Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on OPC OLS.
Fails to open configuration file <code>/iws/opcfiles/ols.config</code>	Constant	Indicates that the configuration file does not have permission to read for OLS.

(Sheet 2 of 2)

Field	Value	Description
Init Fail	Constant	Indicates that initialization fails.
Expert data	String	Indicates the procedure name written in C++ programming language.

Action

Change the permission of the configuration file so that OLS can read the configuration file.

Associated OM registers

There are no associated OM registers.

OLS307

Explanation

The log store creates the storage files and establishes an interprocessor communications (IPC) connection with the Data Collector. The log store establishes a connection to get the UNIX Application Environment (UAE) loop and the loop from the DMS switch. The system generates log report OLS307 when OPC log storage (OLS) cannot create a storage file during initialization.

Format

The log report format OLS307 is as follows:

```
OLS307 mmmdd hh:mm:ss FAIL OLS<SeqNo><EventType>  
Failed to create storage file <ProcessName>(<ProcessId>  
Init Fail  
LOG:<Faulty mnemonic>  
1  
Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS307 follows:

```
OLS307 OCT21 13:24:05 0012 FAIL OLS(10032)  
Failed to create storage file STORAGE001, erno=13  
Init Fail  
LOG:FAILED  
1  
Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on OPC OLS.
Failed to create storage file STORAGE001	Constant	Indicates that the OLS cannot create a storage file.

(Sheet 2 of 2)

Field	Value	Description
Init Fail	Constant	Indicates that initialization fails.
Expert data	String	Indicates the procedure name written in C++ programming language.

Action

Check the permission of the storage directory. The storage directory and the storage files must have permission to read and write for the group.

Associated OM registers

There are no associated OM registers.

OLS308

Explanation

The system generates log report OLS308. The system generates this report when OPC log storage (OLS) cannot perform a file operation on the log directory during initialization. Some 7-6 operations are: open, read and write. The configuration file contains invalid information.

A failure to read or write to the directory file, during initialization, causes the log store to generate a log a self-destruct. The directory file allows communication between log store and log retrieval. The directory file allows the log store to determine the files to access. The OLS cannot proceed without the directory file. The error number is in the errno.h file.

Format

The log report format for OLS308 is as follows:

```
OLS308 mmmdd hh:mm:ss FAIL OLS<SeqNo><EventType>
Failed to read directory file, <ProcessName>(<ProcessId>)
Init Fail
LOG:<Faulty mnemonic>
1
Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS308 follows:

```
OLS308 OCT21 13:24:05 0012 FAIL OLS(10032)
Failed to read directory file, errno=2
Init Fail
LOG:FAILED
1
Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on OPC OLS.
Failed to read directory file	Constant	Indicates a failure occurs in a directory file during log store initialization.

(Sheet 2 of 2)

Field	Value	Description
Init Fail	Constant	Indicates that initialization fails.
Expert data	String	Indicates the procedure name written in C++ programming language.

Action

Investigate the contents and the permission of the directory file. Delete the directory file and restart log store.

Associated OM registers

There are no associated OM registers.

OLS310

Explanation

The log store maintains a directory file. The directory file has the time stamp of the first log in the storage files listed near the file name. The system generates log report OLS310 when the system receives a log with an invalid time-stamp.

Format

The log report format for OLS310 is as follows:

```
OLS310 mmmdd hh:mm:ss FAIL
OLS<SeqNo><EventType>
  Invalid time-stamp-dropping
<ProcessName>(<ProcessId>)
  <Description>
LOG:<Faulty mnemonic>
1
Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS310 follows:

```
OLS310 OCT21 13:24:05 0012 FAIL OLS(10032)
  Invalid time-stamp-dropping log.
Error
LOG:FAILED
1
Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on OPC OLS.
Time-stamp-dropping log not correct	Constant	Indicates that a log has an invalid time-stamp.

(Sheet 2 of 2)

Field	Value	Description
Error	Constant	Indicates that an error occurs.
Expert data	String	Indicates the procedure name written in C++ programming language.

Action

There are no required actions.

Associated OM registers

There are no associated OM registers.

OLS311

Explanation

The system generates log report OLS311 when OPC log storage (OLS) cannot open a storage file. When OLS cannot open a storage file, the file is not in the file rotation. The log store sends requests to the data synchronization process. The log store sends requests to maintain a current set of storage files on the inactive OPC processor. The log store sends requests for data synchronization to copy the most recently entered file and directory. The log store sends the requests when the log store switches storage files.

Format

The log report format for OLS311 is as follows:

```
OLS311 mmmdd hh:mm:ss FAIL OLS<SeqNo><EventType>  
Failed to open storage file <ProcessName>(<ProcessId>  
<Description>  
LOG:<Faulty mnemonic>  
1  
Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS311 follows:

```
OLS311 OCT21 13:24:05 0012 FAIL OLS(10032)  
Failed to open storage file STORAGE001, errno=2,  
switching files.  
Error  
LOG:FAILED  
1  
Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on OPC OLS.
Failed to open storage file STORAGE001, errno=2, switching files	Constant	Indicates that OLS cannot open a storage file.

(Sheet 2 of 2)

Field	Value	Description
Error	Constant	Indicates that an error occurred.
Expert data	String	Indicates the procedure name written in C++ programming language.

Action

The log store cannot delete the old files. When the log store restarts, the log store attempts to delete and create the files that are not in use again.

Associated OM registers

There are no associated OM registers.

OLS312

Explanation

During normal operation, if a write failure to storage file occurs, the system increments a counter and drops the log. If three write failures occur in a row, Log Store generates a log and switches to the next storage file. The system generates this log when OPC Log Storage (OLS) fails to write three consecutive logs to log storage file.

Format

The log report format for OLS312 is as follows:

```
OLS312 mmmdd hh:mm:ss FAIL OLS<SeqNo><EventType>  
Failed to write 3 logs to storage file <FileName> switching files  
<Description>  
LOG:<Faulty mnemonic>  
1  
Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS312 follows:

```
OLS312 OCT21 13:24:05 0012 FAIL OLS(10032)  
Failed to write 3 logs to storage file STORAGE001,  
switching files  
Error  
LOG:FAILED  
1  
Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on OLS
Failed to write 3 logs to storage file STORAGE001, switching files	Constant	Indicates that OLS failed to write three consecutive logs into a storage file

(Sheet 2 of 2)

Field	Value	Description
Error	Constant	Indicates an error.
Expert data	String	Indicates the procedure name in C++ programming language

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

OLS313

Explanation

The system generates this log when OPC log storage (OLS) lets two consecutive logs pass without writing them to a storage file. This occurs because of a failure to read/write to the directory file, or a failure to write to a storage file.

Format

The log report format for OLS313 is as follows:

```
OLS313 mmmdd hh:mm:ss <SeqNo><EventType>  
    <ProcessName>(<ProcessId>)  
    <Description>  
    <Label>  
LOG:<Faulty mnemonic>  
1  
Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS313 follows:

```
OLS313 OCT21 13:24:05 0012 FAIL OLS(10032)  
Failed to write 2 logs to storage file STORAGE001.  
Error  
LOG:FAILED  
1  
Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on OLS
Failed to write 2 logs to storage file STORAGE001	Constant	Indicates a failure to write to the directory or storage file
Error	Constant	Indicates an error
Expert data	String	Indicates the procedure name in C++ programming language

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

OLS320

Explanation

If an open or a write process fails on an OPC log storage (OLS) file, log store assigns the file a status of corrupt. Log store assigns the status of corrupt in the directory file. The system generates this log if more than 25% of the files have a status of corrupt.

Format

The log report format for OLS320 is as follows:

```
OLS320 mmmdd hh:mm:ss <SeqNo><EventType>  
      <ProcessName>(<ProcessId>)  
      <Description>  
      <Label>  
      LOG:<Faulty mnemonic>  
      1  
      Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS320 follows:

```
OLS320 OCT21 13:24:05 0012 FAIL OLS(10032)  
      Too many corrupt storage files  
      Aborting  
      LOG:FAILED  
      1  
      Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on OLS
Too many corrupt storage files	Constant	Indicates that more than 25% of the storage files have a status of corrupt
Aborting	Constant	Indicates the system cannot write the storage files any more. The system stops the process.
Expert data	String	Indicates procedure name in C++ programming language

Action

Restart the OLS. The system restarts log store as part of initialization by the Distributed Resource Manager (DRM). The log store goes through the directory file and finds the files with a status of corrupt. The system preallocates these files again.

Associated OM registers

There are no associated OM registers.

OLS321

Explanation

The system generates OLS321 when OPC log storage (OLS) cannot read or write to the directory file.

Format

The log report format for OLS321 is as follows:

```
OLS321 mmmdd hh:mm:ss <SeqNo><Event Type>  
      <ProcessName>(<ProcessId>)  
      <Description>  
      <Label>  
      LOG:<Faulty mnemonic>  
      1  
      Expert data:<ProcedureName>(<LineNo>)
```

Example

An example of log report OLS321 follows:

```
OLS321 OCT21 13:24:05 0012 FAIL OLS(10032)  
      Failed 3 read/write operations on the directory file.  
      Aborting  
      LOG:FAILED  
      1  
      Expert data:dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL OLS	Constant	Indicates a problem on OLS.
Failed 3 read/write operations on the directory file	Constant	Indicates that OLS failed to read or write three consecutive logs into a directory file.
Aborting	Constant	Indicates the system cannot read or write the storage files any more. The system stops the process.
Expert data	String	Indicates the procedure name in the C++ programming language.

Action

Investigate the contents and the permission of the directory file. If both the content and the permission fail, delete the directory file and reload the new file.

Associated OM registers

There are no associated OM registers.

OLS600

Explanation

The system generates OLS600 by OPC log storage (OLS) when OLS is initializing and preallocates new storage files. It is normal for this log to appear when the system starts OLS for the first time.

SuperNode (SN) Operations Controller (OPC) system provides log processing, collection and correlation of SN logs. The OPC browses and delivers logs to a local printer. Log store is a single process. The Distributed Resource Manager (DRM) starts log store when the system starts SN OPC.

Format

The log report format for OLS600 is as follows:

```
OLS600 mmmdd hh:mm:ss ssdd INFO OLS (10032)
<description>
<label>
LOG: <Faulty mnemonic>
1
Expert data: <ProcedureName. (<LineNo>)
```

Example

An example of log report OLS600 follows:

```
OLS600 JUL24 18:36:06 1800 INFO OLS
(10032)
Preallocated 10 storage file(s)
Init Info
LOG:
1
Expert data: dcilogp.c (264)
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
description	Preallocated n storage file(s)	Indicates new storage files are preallocated.

(Sheet 2 of 2)

Field	Value	Description
label	Init Info	Indicates start of initialization process.
ProcedureName LineNo	dcilogp.c (264)	Gives the running process name.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

OLS601

Explanation

The OPC log storage (OLS) generates this log when OLS deletes old storage files during initialization. This log should only appear if the number of files value in ols.config. recently decreases.

SuperNode (SN) Operations Controller (OPC) system provides log processing, collection and correlation of SN logs. The OPC also browses logs and delivers logs to a local printer. Log Store is a single process. The Distributed Resource Manager (DRM) starts the log store when the SN OPC starts.

During initialization, the system reads the log storage configuration file. A configuration file with a default name (UNIX) ols.config is stored in /iws/opcfiles or with a different UNIX name. The path name and the number of files are read from the file ols.config by OLS.

Format

The log report format for OLS601 is as follows:

```
OLS601 mmmdd hh:mm:ss ssdd INFO OLS (10032)
<description>
<label>
LOG: <Faulty mnemonic>
1
Expert data: <ProcedureName. (<LineNo>)
```

Example

An example of log report OLS601 follows:

```
OLS601 JUL24 18:36:06 1800 INFO OLS (10032)
Deleted 5 storage file(s)
Init Info
LOG:
1
Expert data: dcilogp.c (264)
```


Field descriptions

The following table describes each field in the log report:

Field	Value	Description
description	Deleted n storage file(s)	Indicates old storage files are deleted.
label	Init Info	Indicates start of initialization process.
ProcedureName LineNo	dcilogp.c (264)	Gives the running process name.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

OLS602

Explanation

OPC log storage (OLS) generates this log when OLS is initializes and preallocates storage files with a previous status of corrupt.

SuperNode (SN) Operations Controller (OPC) system provides log processing, collection and correlation of SN logs. It also browses logs and delivers logs to a local printer. Log Store is a single process. The Distributed Resource Manager (DRM) starts when the SN OPC starts up.

During initialization, the system reads the log storage configuration file. A configuration file with a default name (UNIX) ols.config is stored in /iws/opcfiles or with a different UNIX name. The path name and the number of files are read from the file ols.config by OLS.

Format

The log report format for OLS602 is as follows:

```
OLS602 mmmdd hh:mm:ss ssdd INFO OLS (10032)
<description>
<label>
LOG: <Faulty mnemonic>
1
Expert data: <ProcedureName. (<LineNo>)
```

Example

An example of log report OLS602 follows:

```
OLS602 JUL24 18:36:06 1800 INFO OLS (10032)
Rebuilt storage file STORAGE001
Init Info
LOG:
1
Expert data: dcilogp.c (264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
description	Rebuilt storage file <filename>	Indicates that old corrupted storage files are built again.
label	Init Info	Indicates initialization process started.
ProcedureName LineNo	dcilogp.c (264)	Gives the running process name.

Action

There is no action is required.

Associated OM registers

There are no associated OM registers.

OM2113

Explanation

The Operational Measurement 2 (OM2) subsystem generates this report when the OM recording process is inactive (the write session is over). This delay of writing to the storage device occurs after every transfer period (5, 15, or 30 m). Parameter OMXFR in Table OFCENG (refer to the *Office Parameters Reference Manual*) determines the transfer period.

This log indicates the interval during which maintenance personnel can change the magnetic tape without loss of data. The difference between reactivation time and the time when the system generates the log is the inactive period. After reactivation time, you must not change the magnetic tape until the system generates the next log.

Format

The log report format for OM2113 is as follows:

```
OM2113 mmmdd hh:mm:ss ssdd INFO OMTAPE
      OMRECORDING INACTIVE UNTIL: reactivation_time
```

Example

An example of log report OM2113 follows:

```
OM2113 NOV17 19:31:11 1842 INFO  OMTAPE
      OMRECORDING INACTIVE UNTIL: 1981/11/17 20:00:00 TUE
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO OMTAPE	Constant	Indicates an information-only log and refers to Table OMTAPE. Table OMTAPE controls the transfer of OM data to recording devices by the Device Independent Recording Package (DIRP) feature. (refer to <i>Translations Guide</i>).
OMRECORDING INACTIVE UNTIL	Integers	Gives the year/month/day hour/minute/second day-of-the-week, before which a tape change can be made with no loss of data.

Action

There is no action required. If you must change the tape, change it before the reactivation time.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

OM2115

Explanation

The Operational Measurement 2 (OM2) subsystem generates OM2115. This event occurs when an error stops the output of a buffered OM report to a dedicated output device. The system generates OM2115 by stopping an OM output device with the STOP command. The STOP command is in the Operational Measurements Buffered Report (OMBR) level of the MAP (maintenance and administration position). The system also generates OM2115 by stopping an OM output device.

Format

The log report format for OM2115 is as follows:

```
OM2115 mmmdd hh:mm:ss ssdd INFO OMBR STOPPED
      DEVICE = devtxt
      rsntxt
```

Example

An example of log report OM2115 follows:

```
OM2115 DEC15 21:12:00 2112 INFO OMBR STOPPED
      DEVICE = LP121
      Device not available.
```

Field descriptions

The following table describes each of the field in the log report:

Field	Value	Description
INFO OMBR STOPPED	Constant	Indicates why the output of a buffered OM report stopped.
DEVICE	Symbolic text	Identifies the dedicated device on which the system generated the OM report..
rsntxt	Text	Indicates why the output of a buffered OM report stopped.

Action

If a failure causes the buffered output to stop, check the dedicated output device. The dedicated output device must be online and ready. Make sure all applications, other than the OM2 subsystem, do not use the output device. Use

the REROUTE command of OMBR to restart the report at the fixed device.
The fixed device must be online and ready.

Associated OM registers

There are no associated OM registers.

OM2116_M

Explanation

The Operational Measurements 2 (OM2) subsystem generates OM2116. Generation occurs when a special condition arises while the system writes an Operational Measurement Buffered Report (OMPR) to the OMPR report buffer. The subsystem also generates OM2116 while the system reads an OMPR report from the OMPR report buffer. This condition may be an error condition that indicates a software error. It also can indicate that a special event happened (for example, the buffer became full or a restart happened).

Format

The format for log report OM2116_M is as follows:

```
OM2116 date time log# INFO OMBR ERROR
      OMBR-error-text
```

Example

An example of log report OM2116_M follows:

```
OM2116 DEC15 15:30:40 6265 INFO  OMBR ERROR
      Data overwriting has occurred.
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO OMBR ERROR	Constant	Indicates an error occurs during the writing of an OMPR to the OMPR report buffer. The error also can occur during the reading of an OMPR report from the OMPR report buffer.
OMBR error text	Text	Indicates which error occurs. Refer to Action Table on the next page.

Action

If a message repeatedly occurs during the normal direction of events, report the problem. The system will produce a log for the following events but no problem needs reporting: a restart, output cutoff buffer overflow. If this problem occurs, allocate a larger volume. The following table lists actions for other error messages.

OM2116_M (continued)

The following table gives an explanation and lists the correct action to take for each ERRTEXT message:

(Sheet 1 of 2)

ERRTEXT	Explanation	Action
Premature termination of output	Indicates the writing of an OMPR to the OMBR terminated too early.	If able to reproduce, contact the next level of maintenance.
Data overwriting has occurred	Indicates the switch overloaded during the report transfer.	There is no action required.
OMPR report terminated abnormally	Indicates possible buffer overload when a report is written to it.	If able to reproduce, contact the next level of maintenance.
Restart caused cutoff of report	Indicates a restart caused report reading or writing to cut off.	There is no action required.
A bad accumulation table was found.	Indicates a bad accumulation table found.	If able to reproduce, contact the next level of maintenance.
An invalid data storage mode was encountered.	Indicates possible file damage or software error.	Contact the next level of maintenance.
Invalid tuple number was used	Indicates the use of an invalid tuple number.	If able to reproduce, contact the next level of maintenance.
Tuple data not found in this office	Indicates the tuple data is not found in this office.	If able to reproduce, contact the next level of maintenance.
Error while recovering from previous error	Indicates an error occurred during error recovery.	Contact the next level of maintenance.
Unexpected record type	Indicates possible file damage or software error.	Contact the next level of maintenance.
Attempt to write to full disk buffer	Indicates a software error	Contact the next level of maintenance.

OM2116_M (end)

(Sheet 2 of 2)

ERRTXT	Explanation	Action
Could not write super record	Indicates problem with the file on disk	Probable hardware problem. If problem does not clear, recreate OMPR buffer.
Legal write on deleted buffer	Indicates the deletion of the buffer when writing an OMPR to it	There is no action required.
Attempting to read empty buffer	Indicates a software error	Contact the next level of maintenance.
Could not read super record	Indicates problem with the file on disk	If problem does not clear, recreate OMPR buffer.
OMBUFFP could not get awakened or suspended.	Indicates problem with OMBUFFP	If able to reproduce, contact the next level of maintenance
Attempt to open file for reading failed	Indicates possible hardware problem	If problem does not clear, contact the next level of maintenance.
Attempt to open file for writing failed	Indicates possible hardware problem	If problem does not clear, contact the next level of maintenance.
Invalid data in super record	Indicates disk file damage or software error	If able to reproduce, contact the next level of maintenance

Associated OM registers

There are no associated OM registers.

OM2117

Explanation

The Operational Measurement 2 (OM2) subsystem generates OM2117 when a given part of the OM system overload. In most occurrences, not appropriate entry of OM tables causes the overload. If the OM system seriously overloads, a number of logs can generate in a given transfer period. (Up to 30 classes can be entered in Table OMACC.)

Format

The format for log report OM2117 is as follows:

```
OM2117 mmmdd hh:mm:ss ssdd INFO OM overload
Process procesnm Del mess. type: msgtype Class
classnm not output.
```

Example

An example of log report OM2117 follows:

```
OM2117 OCT25 11:01:30 3327 INFO OM overload Process
OMP RTP Del Mess. type: 11 Class OMTEST not output
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO OM overload	Constant	Indicates the OM system is overloaded.
Process	Symbolic text	Identifies the process. Refer to table under action.
Del Mess. type	Integer	Identifies the internal number that to determines the type of work required. Msgtype 11 indicates that work must be performed on OM data.
Class	Text	Indicates the name of the class that is not generated or accumulated. The class name is only correct when the message type is 11. If the message type is not 11, ignore the last line of the log report.

OM2117 (continued)**Action**

The following Process and Action table provides an explanation of each process and lists the correct action for each process:

(Sheet 1 of 2)

Process	Explanation	Action
OMACCP	Indicates that because the OM system is congested, the accumulation for a transfer period will be skipped. The msgtype for this process is always 11 and the classnm is always set to HOLDING.	Reduce the size of the accumulation classes datafilled in table OMACC.
OMPRT	Two msgtypes for this process are present. Msgtype 11 indicates the data for a given class can not generate. The classnm will be missing from the OMPRTs.	Reduce the size of the OMPRTs entered in table OMPRT.
	Msgtype 12 indicates the issue of a DELETE or RESETBUF command of the OMBR CI increment. The OMPRT subsystem is overloaded when the command is issued.	Reissue the command when the system is not overloaded.
OMTAPEP	Two msgtypes for this process are present. Msgtype 11 indicates the data for a given class can not generate. The classnm will be missing from the reports produced by the OMTAPE subsystem.	Reduce the size of the classes the system generates.
	Msgtype 133 indicates the issue of a request for dumping traffic separation data to disk or tape. The request uses the OMTAPE subsystem through the TSNDMP CI. The request can not be processed.	Reissue the request when the OMTAPE subsystem is not overloaded.

(Sheet 2 of 2)

Process	Explanation	Action
OMREPP	Two msgtypes for this process are present. Msgtype 11 indicates the data required for the given report can not generate. The missing classnm will be indicated.	Reduce the frequency at which the system reports generates.
	Msgtype 315 indicates the issue of a request for an OM report with the REQUEST command of the OMREPORT CI. The request can not be processed.	Reissue the request when the OMREPORT subsystem is not overloaded.
SZDCANM	Indicates the SEAS system is overloaded. The process is set to OMREPP and the msgtype is always 11.	Contact the Signaling Engineering and Administration System (SEAS) system prime for additional instructions.

Associated OM registers

There are no associated OM registers.

OM2200

Explanation

The Operational Measurement 2 (OM2) subsystem generates OM2200 when the system exceeds a threshold condition. Entries in tables ALARMTAB (read only) and OMTHRESH (read/write) define thresholds. Register name and permit values entered for threshold, SCANTIME, and severity identify table entries. The number of events that the register counts during a period of minutes (SCANTIME) can exceed the value stored in threshold. If this error occurs, a log generates with the specified severity. Refer to *Operational Measurements Reference Manual* for commands to fill table OMTHRESH.

Format

The format for log report OM2200 is as follows:

```
**OM2200 mmmdd hh:mm:ss ssdd INFO THRESHOLD EXCEEDED  
ON                omregtxt  
THRESHOLD = nnnnn, DELTA = nnnnn, SCANTIME = nnnnn
```

Example

An example of log report OM2200 follows:

```
**OM2200 JAN22 09:50:32 9842 INFO OM THRESHOLD EXCEEDED ON  
CCBSZ$0  
THRESHOLD = 1500, DELTA = 1627, SCANTIME = 8
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO THRESHOLD EXCEEDED ON	Constant	Indicates OM threshold is exceeded.
omregtxt	Symbolic text	Gives the name of the register in table OMTHRESH or ALARMTAB that has had its threshold exceeded. Refer to <i>Operational Measurements Reference Guide</i> for OM field names.
THRESHOLD	1-32767	Gives the preset register threshold value stored in table OMTHRESH or ALARMTAB.

(Sheet 2 of 2)

Field	Value	Description
DELTA	1-32767	Gives the number of events possible to measure that occurred within the last scan interval. The log generates because this value meets or exceeds the threshold value.
SCANTIME	1-32767	Gives the time in minutes used to accumulate the Delta count. This value is entered in table OMTHRESH.

Action

Clear alarm from the EXT level of the MAP (maintenance and administration position). The name of the alarm is OMCritical, OMMAJOR, OMMINOR, or OMNOALARM, depending on the severity entered in the table. This data appears in the log report header.

Associated OM registers

There are no associated OM registers.

OM2300

Explanation

The Operational Measurement 2 (OM2) subsystem generates OM2300 under two conditions. The first condition is when the system fails to allocate store for an accumulator in response to an active table being extended. In this event, the OM group deletes automatically from the class and the system generates log report. The report also occurs if an internal data structure error occurs. In this event, the system can disable the processing of that group and class and generate a log.

Format

The format for log report OM2300 is as follows:

```
OM2300 mmmdd hh:mm:ss ssdd INFO OMACCUM STORE ERROR
      grptxt clastxt
      ACTION REQUIRED: TRY OMACCTAB CMD
```

Example

An example of log report OM2300 follows:

```
OM2300 AUG21 10:14:59 4101 INFO OMACCUM STORE ERROR
      TRK HOURLY
      ACTION REQUIRED: TRY OMACCTAB CMD
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO OMACCUM STORE ERROR	Constant	Indicates that the report generates because a problem with the OM accumulator store occurs
grptxt	Symbolic text	Indicates the name of the disabled OM group. A group is a set of related measurements identified by a common name. See <i>Operational Measurement Reference Manual</i> for possible group names.

(Sheet 2 of 2)

Field	Value	Description
clastxt	Symbolic text	Indicates the name of the affected OM accumulating class.
ACTION REQUIRED: TRY OMACCTAB CMD	Constant	This is an instruction to type the command OMACCTAB, which is used to include a group in a class.

Action

Use the OMACCTAB command to allocate the group to the class again. Refer to *Operational Measurements Reference Manual*.

If the log report persists, contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

OMA400

Explanation

The Communication Server generates log OMO400 when the Communication Server disconnects from the CM node at SuperNode (SN) site. While this connection is down, the Operations Controller (OPC) system does not collect any logs or OM values.

The SN OPC system provides log processing as collecting of SN logs and SN OPC Unix Application Environment (UAE) logs by the Data Collector. The system provides correlating of SN logs by the Problem Manager and the browsing of logs and problems through the Problem Viewer. The system also provides the delivering of logs to a local printer. The Problem Manager is responsible for the log correlations according to the rules in a knowledge base. The log acquisition server and the communication server control the acquisition of SN logs. The log acquisition server, resident on the SN, collects logs, and sends them to the OPC. The communication server, resident on the OPC, receives the logs, and sends them to the Problem Manager. The Problem Solver formats the logs.

Format

The format for log report OMA400 is as follows:

```
*** OMA400 mmmdd hh:mm:ss ssdd FAIL
<ProcessName><ProcessID>
  <Description>
LOG: <Faulty mnemonic>
1
Expert data: omartx.c (437)
```

Example

An example of log report OMA400 follows:

```
*** OMA400 OCT21 18:20:03 2 FAIL OMA (14876)
Lost connection to the CM
LOG: FAILED
1
Expert data: omartx.c (437)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OMA	Indicates running process of OPC
ProcessID	nnnn	Indicates identification code of process
Description	Lost connection to the CM	Indicates communication failure
Faulty mnemonic	FAILED	Gives fault type

Action

Check the CM logs, check the status of the Ethernet Interface Unit (EIU) which connects the OPC system and the SN and check link sanity.

Associated OM registers

There are no associated registers.

OMA401

Explanation

The Communication Server log report OMA401. The communication server generates this report when the server loses connection to the CM node at the SuperNode (SN) site. The communication server generates this report each time the communication server attempts to connect to the CM. This log can occur about every five minutes. The server can generate this report for all the possible causes of the OMA400 log. The server can generate this log if data entered on the Operations Controller (OPC) or the CM is not correct.

The SN OPC system provides the following log processing tasks as:

- the Data Collector collects SN logs and SN OPC Unix Application Environment (UAE) logs
- the Problem Manager correlates SN logs
- the Problem Viewer allows you to browse logs and
- the system delivers logs to a local printer

The Problem Manager is responsible for the log correlations according to the rules in a knowledge base. The log acquisition server and the communication server control the acquisition of SN logs. The log acquisition server, resident on the SN, collects logs and sends the logs to the OPC. The communication server, resident on the OPC, receives the logs and sends the logs so that the Problem Manager formats the logs.

Format

The log report format for OMA401 is as follows:

```
*** OMA401 mmmdd hh:mm:ss ssdd FAIL
<ProcessName><ProcessID> <Description> LOG: <Faulty
mnemonic> 1 Expert data: omartx.c (442)
```

Example

An example of log report OMA401 follows:

```
*** OMA401 OCT21 18:20:03 2 FAIL OMA (14876) Unable
to establish a connection to the CM LOG: FAILED 1
Expert data: omartx.c (442)
```

Field descriptions

The following table describes each field in the log report.

Field	Value	Description
ProcessName	OMA	Indicates process of OPC that runs
ProcessID	nnnn	Indicates identification code of process
Description	Unable to establish a connection to the CM	Indicates that the system cannot establish communication.
Faulty mnemonic	FAILED	Gives fault type.

Action

Check the CM logs. Check the state of the Ethernet Interface Unit (EIU) that connects the OPC system and the SN. Check link sanity. Verify the CM entry in the file /etc/osihosts. Verify entries in the CM table OSIROUTE.

Associated OM registers

There are no associated OM registers.

OMA402

Explanation

The system log OMA402. Log OMA402 is an information log. The system generates OMA402 when the system establishes a connection between Communication Server and CM. The production of this log indicates that previous OMA400 or OMA401 logs are not active problems.

The SuperNode (SN) Operations Controller (OPC) system provides the following log processing tasks:

- the Data Collector collects SN logs and SN OPC Unix Application Environment (UAE) logs
- the Problem Manager correlates SN logs
- the Problem Viewer allows you to browse logs and problems
- the system delivers logs to a local printer

The Problem Manager is responsible for the log correlations according to the rules in a knowledge base. The log acquisition server and the communication server control the acquisition of SN logs. The log acquisition server, resident on the SN, collects logs and sends the logs to the OPC. The communication server is resident on the OPC. The communication server receives the logs and sends the logs to the Problem Manager. The Problem Manager formats the logs.

Format

The log report format for OMA402 is as follows:

```
OMA402 mmmdd hh:mm:ss ssdd INFO <ProcessName><ProcessID>  
<Description>  
LOG:  
1  
Expert data: omartx.c (487)
```

Example

An example of log report OMA402 follows:

```
OMA402 OCT21 18:20:03 2 INFO OMA (14876)  
Established connection with CM.  
LOG:  
1  
Expert data: omartx.c (487)
```

Field descriptions

The following table describes each field in the log report.

Field	Value	Description
ProcessName	OMA	Indicates process of OPC that runs
ProcessID	nnnn	Indicates identification code of process
Description	Established connection with CM	Indicates the system established communication

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

OMA403

Explanation

The Communication Server log report OMA403. The communication server generates OMA403 when the server meets a condition that is not planned. The condition occurs when the server tries to initialize the communication environment. One possible cause of this error can be invalid data entered in the /etc/osihosts file for the CM entry.

The SuperNode (SN) Operations Controller (OPC) system provides the following log processing tasks:

- the Data Collector collects SN logs and SN OPC Unix Application Environment (UAE) logs
- the Problem Manager correlates SN logs
- the Problem Viewer allows you to browse logs and problems
- the system delivers logs to a local printer

The Problem Manager is responsible for the log correlations according to the rules in a knowledge base. The log acquisition server and the communication server control the acquisition of SN logs. The log acquisition server, resident on the SN, collects logs, and sends the logs to the OPC. The communication server, resident on the OPC, receives the logs, and sends the logs to the Problem Manager. The Problem Manager formats the logs.

Format

The log report format for OMA403 is as follows:

```
OMA403 mmmdd hh:mm:ss ssdd FAIL <ProcessName><ProcessID>
<Description>
LOG: <Faulty mnemonic>
1
Expert data: omartx.c (1362)
```

Example

An example of log report OMA403 follows:

```
OMA403 OCT21 18:20:03 2 FAIL OMA (14876)
Unable to create communication stack
LOG: FAILED
1
Expert data: omartx.c (1362)
```


Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OMA	Indicates process of OPC that runs
ProcessID	nnnn	Indicates identification code of process
Description	Unable to create communication stack	Indicates communication failure
Faulty mnemonic	FAILED	Gives fault type

Action

This report indicates that a serious error occurs when the system tries to establish the communication software. You must check the file /etc/osihosts to make sure that an entry for the CM is present and is correct.

Associated OM registers

There are no associated OM registers.

OMA404

Explanation

The Communication Server log report OMA404. The communication server generates OMA404 when a communication protocol violation occurs that is not planned. The communication protocol violation is associated with the CM.

The SuperNode (SN) Operations Controller (OPC) system provides the following log processing tasks:

- the Data Collector collects SN logs and SN OPC Unix Application Environment (UAE) logs
- the Problem Manager correlates SN logs
- the Problem Viewer allows you to browse logs and problems
- The system delivers logs to a local printer

The Problem Manager is responsible for the log correlations according to the rules in a knowledge base. The log acquisition server and the communication server control the acquisition of SN logs. The log acquisition server, resident on the SN, collects logs, and sends them to the OPC. The communication server, resident on the OPC, receives the logs, and sends them to be formatted by the Problem Manager.

Format

The log report format for OMA404 is as follows:

```
OMA404 mmmdd hh:mm:ss ssdd FAIL
<ProcessName><ProcessID> <Description> LOG: <Faulty
mnemonic> 1 Expert data: omartx.c (1362)
```

Example

An example of log report OMA404 follows:

```
FP503 SEP05 18:14:33 4827 INFO Device State Change
Location: FP 2 DEVICE 1 (DK) SCSI BUS 0
REASON: Change of state of associated entity
FROM: InSv ( Isolated )      DRIVE STATE: Unknown
TO: InSv                     DRIVE STATE: On Line
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OMA	Indicates process of OPC that runs
ProcessID	nnnn	Indicates identification code of process
Description	Error in ROSE protocol	Indicates protocol error
Faulty mnemonic	FAILED	Gives fault type

Action

Check the CM and OPC load to make sure that the loads have compatible releases.

Associated OM registers

There are no associated OM registers.

OMA500

Explanation

The system log report OMA500. The system generates OMA500 when the system discards a log received from the CM because the Data Collector is not ready.

The SuperNode (SN) Operations Controller (OPC) system provides the following log processing tasks:

- the Data Collector collects SN logs and SN OPC Unix Application Environment (UAE) logs
- the Problem Manager correlates SN logs by the Problem Manager
- the Problem Viewer allows you to browse logs and problems
- the system delivers logs to a local printer

Data Collector is a central component that collects both SN and UAE logs. When the system receives the logs, the Data Collector:

- Formats the UAE logs to the SN log format. The log formats are the same. The switch name and node name are part of the component name in UAE logs.
- Parses and tokenizes the log header. The Problem Manager can read the header.
- Designs a component name and a set of attributes from the log according to a set of user-predefined parse rules. The parse rules appear in an ASCII file that the Data Collector reads at start up.
- Distributes the tokenized logs over Interprocess Connectivity (IPC) link to client processes. These processes are problem manager and log storage.
- Buffers the tokenized logs to minimize the risk of lost logs when the connection to the client process is down.

Format

The log report format for OMA500 is as follows:

```
OMA500 mmmdd hh:mm:ss ssdd FAIL <ProcessName><ProcessID>
<Description>
LOG: <Faulty mnemonic>
1
Expert data: omalogaq.c (252)
```

Example

An example of log report OMA500 follows:

```
OMA500 OCT21 18:20:03 2 FAIL OMA (14876) 5 CM  
originated log(s) lost during last 10 minutes. LOG:  
FAILED 1 Expert data: omalogaq.c (252)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OMA	Indicates process of OPC that runs.
ProcessID	nnnn	Indicates identification code of process.
Description	5 CM originated log(s) lost during last 10 min	Indicates lost log condition.
Faulty mnemonic	FAILED	Gives fault type.

Action

Check the Data Collector if the system generates OMA500 several times.

Associated OM registers

There are no associated OM registers.

OMA501

Explanation

The system log report OMA501. The system generates OMA501 when the system parses the log configuration file (/iws/opcfiles/snlogsp.text) and meets a syntax error. Log collection continues. The log format or log suppression can be different from the normal format and suppression.

The SuperNode (SN) Operations Controller (OPC) system provides the following log processing tasks:

- the Data Collector collects SN logs and SN OPC Unix Application Environment (UAE) logs
- the Problem Manager correlates SN logs
- the Problem Viewer allows you to browse logs and problems
- the system delivers logs to a local printer

Data Collector is a central component that collects both SN and UAE logs. When the system receives logs, the Data Collector:

- Formats the UAE logs to the SN log format. The log formats are the same. The switch name and node name are part of the component name in UAE logs.
- Parses and tokenizes the log header. The Problem Manager can read the log header.
- Designs a component name and a set of attributes from the log according to a set of user-predefined parse rules. The parse rules appear in an ASCII file the Data Collector reads at start up.
- Distributes the tokenized logs over Interprocess Connectivity (IPC) link to client processes. These processes are problem manager and log storage.
- Buffers the tokenized logs to minimize the risk of logs lost when the connection to the client process is down.

Format

The log report format for OMA501 is as follows:

```
OMA501 mmmdd hh:mm:ss ssdd FAIL <ProcessName><ProcessID>
      <Description>
      LOG: <Faulty mnemonic>
      1
      Expert data: omalogaq.c (292)
```

Example

An example of log report OMA501 follows:

```
OMA501 OCT21 18:20:03 2 FAIL OMA (14876)
Error in log configuration file, line 12
LOG: FAILED
1
Expert data: omalogaq.c (292)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OMA	Indicates process of OPC that runs
ProcessID	nnnn	Indicates identification code of process
Description	Error in log configuration file, line 12	Indicates syntax error
Faulty mnemonic	FAILED	Gives fault type

Action

Correct the log configuration file according to the defective line that the log indicates. Save the configuration file. Restart OMA process.

Associated OM registers

There are no associated OM registers.

OMPR200

Explanation

Information for all log reports under Operational Measurements Print Report (OMPR) subsystem (OMPR200K OMPR201 . . .) is considered to be part of Basic Administration Procedures, 297-1001-300 and Service Problem Analysis Administration Guide, 297-1001-318.

Note: Only the last occurrence of a specified OMRS log in the logutil buffer contains correct data. The system allocates one buffer section for each report number. Any previous occurrence of the log found in the buffer contains the same information as the current log report. Route the logs to a device if you need to compare the current log to previous OMRS log reports.

Format

The log report format for OMPR200 is as follows:

```
OMPR200 mmmdd hh:mm:ss ssdd INFO OM_REPORT
```

Example

An example of log report OMPR200 follows:

```
OMPR200 OCT11 10:18:00 212 INFO OM_REPORT
```

Field descriptions

There are no field descriptions.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

OMRS0XX

Explanation

Information for all log reports under Operational Measurements Print Report (OMPR) subsystem (OMPR200K OMPR201 . . .) is considered to be part of Basic Administration Procedures, 297-1001-300 and Service Problem Analysis Administration Guide, 297-1001-318.

Note: Only the last occurrence of a particular OMRS log in the logutil buffer contains valid data. Only one buffer section is allocated for each report number; therefore, any previous occurrence of the log found in the buffer actually contains the same information of the current log report. Route the logs to a device if historical comparisons of an OMRS log report are needed.

Format

The format for log report OMRS0XX follows:

OMRS0XX mmmdd hh:mm:ss ssdd INFO OM PERIODIC REPORT

Example

An example of log report OMRS0XX follows:

OMRS OCT11 10:18:00 212 INFO OM PERIODIC REPORT

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
INFO OM PERIODIC REPORT	Constant	Identifies the last occurrence of OMRS log.

Action

No action is required.

Associated OM registers

None

Additional information

None

OMX101

Explanation

The system log report OMX101. The system generates OMX101 when the UNIX Operational Measurement (OM) transfer process on the Computing Module (CM) receives an OM data message. The OM transfer process receives this message from a central OM receiver. The message contains bad data.

Format

The log report format for OMX101 is as follows:

```
OMX100 mmmdd hh:mm:ss ssdd INFO OMX_SUMMARY_ERROR
OM Summary message group <groupname> invalid.
```

Example

An example of log report OMX101 follows:

```
OMX100 SEP14 15:08:39 1313INFO OMX_SUMMARY_ERROR
OM Summary message group ADASDSGN invalid.
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO OMX SUMMARY_ERROR	Constant	Indicates the UNIX OM transfer process on the CM received an OM data message. The OM transfer process received the message from a Central OM Receiver. The message contains bad data.
OM Summary message group <groupname> invalid	Constant	Indicates an OM Summary message group ADASSGN is invalid.

Action

If the problem persists, contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

OMX102

Explanation

The system log report OMX102. The system generates OMX102 when the UNIX Operational Measurement (OM) transfer process on the computing module (CM) attempts to allocate memory. The OM transfer process attempts to allocate memory to store OM group data. The system generates OMX102 when the attempt to allocate memory fails.

Format

The log report format for OMX102 is as follows:

```
OMX102 mmmdd hh:mm:ss ssdd INFO OMX_ALLOC_ERROR
      Cannot allocate memory for OM group <groupname>.
```

Example

An example of log report OMX102 follows:

```
OMX102 SEP14 15:08:39 1313INFO OM_ALLOC_ERROR
      Cannot allocate memory for OM group <groupname>.
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO OMX_ALLOC_ERRO R	Constant	Indicates the UNIX OM transfer process on the CM attempts to allocate memory to store OM group data and fails.
Cannot allocate memory for OM group <groupname>	Constant	Indicates the OM groupname that memory cannot allocate.

Action

If no memory is available for the OM group, contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

OMX302

Explanation

The system log OMX302. The system generates OMX302 when the system cannot establish or lose communication with a communication entity computing module (CM). The system also generates OMX302 when the same condition occurs with a voice processing unit (VPU) or any other communication entity.

Format

The format for log report OMX302 is as follows:

```
OMX302 mmmdd hh:mm:ss INFO UAE Log
<Cannot establish /Lost connection> with the <Communication
Entity><header>
<Cannot establish /Lost connection> with the <Communication Entity>
```

Example

An example of log report OMX302 follows:

```
OMX001 MAR02 19:20:21 INFO UAE Log
Cannot Establish Connection with CM.
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO UAE Log	Constant	Indicates when system cannot establish communication with a communication entity (CM, VPU, etc)
<Cannont establish /Lost connection> with the <Communication Entity> <header>	Constant	Indicates state of communication entity

Action

Check the state of the communication entity in question.

Associated OM registers

There are no associated OM registers

OSF301

Explanation

The operation system interface (OSF) system log report OSF301. The OSF system generates OSF301 when the system cannot open the required configuration file in the log brackets.

The SuperNode operation controller (OPC) system provides the following log processing tasks:

- The data collector gathers SuperNode (SN) and SN OPC UNIX application environment (UAE) logs.
- The problem manager correlates SN logs.
- The problem viewer browses logs and problems.
- The operation system (OS) interface (IF) delivers logs to a local printer.

The OS IF formats the logs in STD or SCC2 format. The OS IF:

- reads the configuration files
- allocates required resources at start-up
- requests logs from the problem manager
- receives logs from the problem manager

The OS IF reads configuration files in ASCII at start-up. The OS IF uses these files to specify the following parameters:

- the format of logs (STD or SCC2)
- the categories of logs to deliver
- the port identification for printer connection
- IP address of the OS remote host
- log parameters to customize log format over transmission control protocol (TCP)/Internet protocol (IP)

Northern Telecom personnel receive configuration files that are not complete. OS IF requires some files. Other files are optional.

Format

The log report format for OSF301 is as follows:

OSF301 (end)

```
*** OSF301 mmmdd hh:mm:ss ssdd FAIL
<ProcessName>(<ProcessID>)
  <Description>
    Config file
    LOG: <Faulty mnemonic>
    1
    Expert data: dcilogp.c(264)
```

Example

An example of log report OSF301 follows:

```
*** OSF301 JAN20 08:00:00 4200 FAIL OSF(1032)
  Cannot open configuration file </iws/opcfiles/osf.config>
  Config file
  LOG: FAILED
  1
  Expert data: dcilogp.c(264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OSF	Name of SN OPC process that runs
ProcessID	nnnn	Identification code of OS IF process
Description	Text	Provides reason for failure with required configuration file name and directory
Faulty mnemonic	FAILED	Provides the fault type

Action

Make sure the configuration file is in directory /iws/opcfiles. Refer to SN OPC administrator.

Associated OM registers

There are no associated OM registers

OSF302

Explanation

The operation system interface (OSF) system log report OSF302. The OSF system generates OSF302 when the system detects an interprocess connectivity (IPC) error.

The SuperNode operation controller (OPC) provides the following log processing tasks:

- The data collector gathers SuperNode (SN) and SN OPC UNIX application environment (UAE) logs.
- The problem manager correlates SN logs.
- The problem viewer browses logs and problems.
- The OSF delivers logs to a local printer.

The OSF formats the logs in STD or SCC2 format. The OSF:

- reads the configuration files
- allocates required resources at start-up
- requests logs from the problem manager
- receives logs from the problem manager

Format

The log report format for OSF302 is as follows:

```
*** OSF302 mmmdd hh:mm:ss ssdd FAIL
<ProcessName>(<ProcessID>)
  <Description>
  IPC Error
  LOG: <Faulty mnemonic>
  1
  Expert data: dcilogp.c (264)
```

Example

An example of log report OSF302 follows:

```
*** OSF302 JAN30 09:20:00 4200 FAIL OSF(1032)
  IPC call failed; error = -4
  IPC Error
  LOG: INVALID
  1
  Expert data: dcilogp.c(264)
```

OSF302 (end)

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OSF	Provides the name of the process that runs in SN OPC system
ProcessID	nnnn	Indicates identification code of OS IF process
Description	Text	Indicates the IPC call failure with error code
Faulty mnemonic	INVALID	Provides the fault type

Action

Refer to the OPC system administration practices document to determine how to solve the problem.

If the error occurs several times, check interprocess connectivity (IPC) and SN OPC state. Distributed resource manager (DRM) must automatically restart OSF.

Associated OM registers

There are no associated OM registers

OSF303

Explanation

The operation system interface (OSF) system log report OSF303. The system generates OSF303 when the required configuration file does not have a parameter. The system generates OSF303 when the required configuration file contains an invalid parameter. This event stops the OSF process.

The SuperNode operation controller (OPC) provides the following log processing tasks:

- The data collector gathers SuperNode (SN) and SN OPC UNIX Application Environment (UAE) logs.
- The problem manager correlates SN logs.
- The problem manager browses logs and problems.
- The OSF delivers logs to a local printer.

The OSF requests and receives the logs from the problem manager. The OSF formats the logs according to the configuration files. The OSF application reads the configuration files in ASCII at start-up. The OSF uses the configuration files to specify the following parameters:

- the format of logs (STD or SCC2)
- the categories of logs to deliver
- the port identification for printer connection
- IP address of the OS remote host
- log parameters to customize format of logs delivered over transmission control protocol (TCP)/Internet protocol (IP).

Format

The log report format for OSF303 is as follows:

```
*** OSF303 mmmdd hh:mm:ss ssdd FAIL <ProcessName>
(<ProcessID>)
  <Description>
  Config file
  LOG: <Faulty mnemonic>
  1
  Expert data: dcilogp.c (264)
```

Example

An example of log report OSF303 follows:

OSF303 (end)

```
*** OSF303 JAN20 08:23:00 4000 FAIL OSF(1032)
    Error reading</iws/opcfiles/osf.config>;parameter#2
    missing
    Config file
    LOG: MISSING
    1
    Expert data: dcilogp.c (264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OSF	Name of SN OPC process that runs
ProcessID	nnnn	Identification code of OS IF process
Description	Text	Indicates missing parameter
LOG	MISSING	Provides the fault type

Action

Refer to the OPC administration practices document to check the content of the configuration file. Restart the OSF process.

Associated OM registers

There are no associated OM registers.

OSF304

Explanation

The operation system interface (OSF) system log report OSF304. The system generates OSF304 when the configuration file osf.base.cnf specifies a printer address more than one time. The OSF process runs. The OSF process ignores this error condition.

The SuperNode (SN) operation controller (OPC) system provides the following log processing tasks:

- The data collector gathers data collector SuperNode and SN OPC UNIX application environment (UAE) logs
- The problem manager correlates SN logs.
- The problem viewer browses logs and problems.
- The OSF delivers logs to a local printer.

The OSF formats the logs in STD or SCC2 format. The OSF:

- reads the configuration files
- allocates required resources at start-up
- requests logs from the problem manager
- receives logs from the problem manager

The OSF application reads the configuration files at start-up. The configuration files appear in ASCII and specify the log parameters. The OSF uses three configuration files to control the levels of functionality. The first configuration file controls base functionality. Base functionality is the delivery of logs to the printers. The second file controls delivery through transmission control protocol (TCP). The third file controls the customization of log parameters. These parameters are start, end of line, and end of log.

Format

The log report format for OSF304 is as follows:

```
OSF304 mmmdd hh:mm:ss ssdd INFO <ProcessName> (<ProcessID>)
    <Description>
    Config file
    LOG:
    1
    Expert data: dcilogp.c (264)
```

OSF304 (end)

Example

An example of log report OSF304 follows:

```
OSF304 MAY05 12:00:00 3200 INFO OSF(1032)
Printer address </dev/ttydp01> specified twice in
</iws/opcfiles/osf.base.conf>
Config file
LOG:
1
Expert data: dcilogp.c (264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OSF	Indicates the name of the process that runs in SN OPC system
ProcessID	nnnn	Indicates the identification code of the OS IF process
Description	Text	Indicates that the configuration file specifies the printer address two times

Action

Check the file osf.base.conf to prevent repeated log generation when the OSF process restarts.

Associated OM registers

There are no associated OM registers.

OSF306

Explanation

The operation system interface (OSF) system log report OSF306. The system generates OSF306 when the system detects an invalid parameter in the configuration file `osf.TCP.conf` or in the file `osf.cust.conf`. The OSF system does not deliver customized logs over TCP if the error is in file `osf.TCP.conf`. The OSF can deliver logs that are not customized if the error is in `osf.cust.conf`.

The SuperNode (SN) operation controller (OPC) system provides the following log processing tasks:

- The data collector gathers SuperNode and SN OPC UNIX application environment (UAE) logs.
- The problem manager correlates SN logs.
- The problem viewer browses logs and problems.
- The OSF system delivers logs to a local printer.

The OSF formats the logs in STD or SCC2 format. The OSF:

- reads the configuration files
- allocates required resources at start-up
- requests logs from the problem manager
- receives logs from the problem manager

The OSF application reads configuration files in ASCII at start-up. The configuration files specify the log parameters. The OSF uses three configuration files to control levels of functionality. The first file controls base functionality. Base functionality is the delivery of logs to printers. The second file controls delivery through transmission control protocol (TCP). The third file controls log parameters. The log parameters include start of log, end of line, end of log.

Format

The log report format for OSF306 is as follows:

```
* OSF306 mmmdd hh:mm:ss ssdd FAIL <ProcessName> (<ProcessID>)
  <Description>
  Config file
  LOG: <Faulty mnemonic>
  1
  Expert data: dcilogp.c (264)
```

OSF306 (end)

Example

An example of log report OSF306 follows:

```
* OSF306 OCT21 08:23:12 4200 FAIL OSF(1032)
  Error reading custom configuration
  </iws/opcfiles/osf.cust.conf>; invalid parameter
  Config file
  LOG: INVALID
  1
  Expert data: dcilogp.c (264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OSF	Provides the name of the process that runs in the SN OPC system
ProcessID	nnnn	Indicates identification code of OS IF process
Description	Error reading custom configuration </iws/opcfiles/osf.cust.conf>; invalid parameter	Indicates configuration file failure
Description	Error reading TCP configuration </iws/opcfiles/osf.TCP.conf>; invalid parameter	Indicates configuration file failure
Faulty mnemonic	INVALID	Indicates the fault type

Action

Correct the content of the configuration file that has faults according to the OPC system administration practices document. Restart the OSF process.

Associated OM registers

There are no associated OM registers.

OSF307

Explanation

The Operation System Interface (OSF) generates log report OSF307 when an internal error occurs that is not planned. One example of an error occurs when the OSF process stops because of a system out-of-memory problem.

The SuperNode (SN) Operations Controller (OPC) processes logs as follows:

- the data collector collects SN and SN OPC UNIX application environment (UAE) logs
- the problem manager correlates SN logs
- the problem viewer browses logs and problems
- the OS interface (IF) delivers logs to a local printer

The OS IF requests logs from the problem manager of SN OPC. The OS IF receives logs from the problem manager and formats the logs with configuration files. The system sends logs to a remote client with transmission control protocol (TCP) and Internet protocol (IP).

Format

The log report format for OSF307 is as follows:

```
*** OSF307 mmmdd hh:mm:ss ssdd FAIL <ProcessName>
(<ProcessID>)
  <Description>
  Memory Error
  LOG: <Faulty mnemonic>
  1
  Expert data: dcilogp.c (264)
```

Example

An example of log report OSF307 follows:

```
*** OSF307 MAY25 07:30:00 4200 FAIL OSF (1032)
  Memory allocation error
  Memory Error
  LOG: INVALID
  1
  Expert data: dcilogp.c (264)
```

OSF307 (end)

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OSF	Name of SN OPC process that runs
ProcessID	nnnn	Identification code of OS IF process
Description	Memory allocation error	Indicates that OSF has memory fault
Faulty mnemonic	INVALID	Provides the fault type

Action

Check state of SN OPC from PM MAP. If necessary, reload SN OPC that refers to SN OPC system administration guide.

Associated OM registers

There are no associated OM registers.

OSF308

Explanation

The Operation System Interface (OSF) generates this log when it cannot open or configure the device (printer) for TTY delivery. The OSF runs but does not deliver logs to the device given in brackets in description data field.

The SuperNode (SN) Operations Controller (OPC) processes logs with the following tasks :

- the data collector collects SN and SN OPC UNIX application environment (UAE) logs
- the problem manager correlates SN logs
- the problem viewer browses logs and problems
- the OS interface (IF) delivers logs to a local printer

The OSF formats the logs in STD or SCC2 format. The OSF has the following responsibilities:

- to read the configuration files
- to allocate required resources at start-up
- to request logs from the problem manager
- to receive logs from the problem manager

Printer delivery supports log delivery for one or two printers. Printers connect to SN OPC through the modem rack and dedicated modem links. The OSF has two circular buffers. Each printers has a buffer for logs not delivered because of lost modem connections or a received XOFF printer signal. In OSF, printer delivery unit buffers these logs and delivers them through TTY port to the printers. This unit also opens and configures the port and checks that the modem connection is up.

Format

The log report format for OSF308 is as follows:

```
*** OSF308 mmmdd hh:mm:ss ssdd FAIL <ProcessName>
(<ProcessID>)
  <Description>
  Open device
  LOG: <Faulty mnemonic>
  1
  Expert data; dcilogp.c (264)
```

OSF308 (end)

Example

An example of log report OSF308 follows:

```
*** OSF308 JAN20 09:30:00 4020 FAIL OSF (1032)
    Could not open device </dev/ttyd01>: errno=6
    Open device
    LOG: <Faulty mnemonic>
    1
    Expert data; dcilogp.c (264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OSF	Name of SN OPC process that runs
ProcessID	nnnn	Identification code of OS IF process
Description	Device cannot open </dev/ttydnns>: errno=n	Indicates device failure for TTY connection
Faulty mnemonic	FAILED	Gives the fault type

Action

Check if the device file is present and check the file type. When the device file corrects an OSF, start again according to OPC system administration practices document.

Associated OM registers

There are no associated OM registers.

OSF309

Explanation

The operation system interface (OSF) generates OSF309 when the OSF cannot establish transmission control protocol (TCP) with the remote host. The configuration file <osf.TCP.conf contains the TCP address of the remote host. The following problems can cause a TCP connection failure:

- the address format is invalid
- a networking subsystem that is not started
- socket not created, operating system out of file specifications or buffers

The OSF will run log delivery does not occur over TCP. The OSF application reads configuration files at start up. The files specify different parameters. The files are ASCII files. The OSF must use three configuration files. The first file controls base functionality. Base functionality is delivery of logs to the printers. The second file controls delivery through TCP. The third file customizes log limits. Start of log, end of line and end of log are log limits.

The SuperNode (SN) operations controller (OPC) processes, collects and correlates SN logs. The SN explores logs, and delivers the logs to a local printer through the OSF.

The OSF formats the logs in STD or SCC2 format. The OSF has the following responsibilities:

- to read the configuration files
- to allocate required resources at start-up
- to request logs from the problem manager
- to receive logs from the problem manager

Format

The log report format for OSF309 follows:

```
OSF309 mmmdd hh:mm:ss ssdd FAIL <ProcessName> (<ProcessID>)  
  <Description>  
  Address Error  
  LOG: <Faulty mnemonic>  
  1  
  Expert data: dcilogp.c (264)
```

Example

An example of log report OSF309 follows:

OSF309 (end)

```
OSF309 MAY24 12:00:20 4100 FAIL OSF (1032)
  Invalid TCP host address: string too long
  Address Error
  LOG: FAILED
  1
  Expert data: dcilogp.c (264)
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
ProcessName	OSF	Name of SN OPC process that runs
ProcessID	nnnn	Identification code of OS IF process
Description	Invalid TCP host address: string too long	Indicates configuration file error
Faulty mnemonic	FAILED	Indicates the fault type

Action

Check TCP address and port number in configuration file. Start the OSF again according to SN OPC administration guide.

Associated OM registers

There are no associated OM registers.

OSF313

Explanation

The operation system interface (OSF) generates OSF313 when the problem manager sends an invalid message to the OSF. The system drops the log when the message contains log data.

The SuperNode (SN) operations controller (OPC) system processes logs. To process the logs, the SN OPD:

- collects SuperNode (SN) and SN OPC UNIX application environment (UAE) logs by the data collector
- correlates SN logs by the problem manager
- browses and logs problems through the problem viewer
- delivers logs to a local printer through the OSF

The OSF formats the logs in STD or SCC2 format and:

- reads the configuration files
- allocates required resources at start-up
- requests logs from the problem manager
- receives logs from the problem manager

The OSF reads the Configuration files in ASCII when the system starts. The Configuration files specify the following parameters:

- format of logs (STD or SCC2)
- the categories of logs the system delivers
- the port identification for printer connection
- the IP address of the OS remote host
- log delimiters to customize formatting of logs over transmission control protocol (TCP)/Internet protocol (IP)

Format

The log report format for OSF313 is as follows:

OSF313 (end)

```
* OSF313 mmmdd hh:mm:ss ssdd WARN <ProcessName>
(<ProcessID>)
  <Description>
  Invalid data
  LOG: <Faulty mnemonic>
  1
  Expert data: dcilogp.c (264)
```

Example

An example of log report OSF313 follows:

```
OSF313 MAY24 12:00:00 4100 WARN OSF(1032)
  Invalid message from ProbMgr:received unexpected
  extradata
  Invalid data
  LOG: INVALID
  1
  Expert data: dcilogp.c (264)
```

Field descriptions

The following table explains each field in the log report:

Field	Value	Description
ProcessName	OSF	Gives the name of the SN OPC system that runs.
ProcessID	nnnn	Identification code of the OS IF process.
Description	Invalid message from ProbMgr:received extra data that is not planned	Problem manager failure.
Faulty mnemonic	INVALID	Indicates the fault type.

Action

If this condition occurs often, examine sanity of the problem manager according to the SN OPC administration practices document.

Associated OM registers

There are no associated OM registers.

OSF314

Explanation

The operation system interface (OSF) generates OSF314 when the following events occur:

- the problem manager sends a log with an invalid message to the OSF
- the system drops the log

The SuperNode (SN) operations controller (OPC) system processes the logs. To process the logs, the SN OPC does:

- collects the SN logs and SN OPC UNIX application environment (UAE) logs by the data collector
- correlates SN logs by the problem manager
- browses the logs and problems through the problem viewer
- delivers the logs to a local printer through the OSF

The OSF formats logs in STD or SCC2 format and:

- reads the configuration files
- allocates required resources at start-up
- requests logs from the problem manager
- receives logs from the problem manager

The OSF application reads the files in ASCII configuration when the system starts. The files specify the following parameters:

- format of logs (STD or SCC2)
- the categories of logs the system delivers
- the port identification for printer connection
- the IP address of the OS remote host
- log delimiters used to customize formatting of the logs the system delivers over transmission control protocol (TCP)/Internet protocol (IP)

Format

The log report format for OSF314 is as follows:

OSF314 (end)

```
* OSF314 mmdd hh:mm:ss ssdd WARN <ProcessName> (<ProcessID>)
  <Description>
  Invalid message
  LOG: <Faulty mnemonic>
  1
  Expert data: dcilogp.c (264)
```

Example

An example of log report OSF314 follows:

```
* OSF314 MAY24 12:00:00 4100 WARN OSF(1032)
  Received invalid log data from Problem Manager
  Invalid message
  LOG: INVALID
  1
  Expert data: dcilogp.c (264)
```

Field descriptions

The following table explains each field in the log report:

Field	Value	Description
ProcessName	OSF	Gives the name of the SN OPC that runs.
ProcessID	nnnn	Identification code of the OS IF process.
Description	Received invalid log data from problem manager	Indicates Problem Manager failure.
Faulty mnemonic	INVALID	Indicates the fault type.

Action

If this condition occurs several times, examine the sanity of the problem manager according to SN OPC administration practices document.

Associated OM registers

There are no associated OM registers.

OSF317

Explanation

The operation system interface (OSF) system generates OSF317 when the transmission control protocol (TCP) connection with the remote host is lost. The OSF tries to establish the connection again at constant intervals.

The SuperNode (SN) operations controller (OPC) processes logs. To process the logs, the SN OPC does:

- collects SN logs and SN OPC UNIX application environment (UAE) logs by the data collector
- correlates SN logs by the problem manager
- browses logs and problems through the problem viewer
- delivers logs to a local printer through the OSF

The OSF formats the logs in STD or SCC2 format and:

- reads the configuration files
- allocates required resources when the system starts
- requests logs from the problem manager
- receives logs from the problem manager

Logs go to a remote client where the system runs TCP at start up on an Internet protocol (IP). The IP is an internetworking protocol with connectionless service. The service exchanges datagrams between two host computers over a minimum of one network.

Format

The log report format for OSF317 is as follows:

```
* OSF317 mmmdd hh:mm:ss ssdd FAIL <ProcessName> (<ProcessID>)
  <Description>
  Lost connection
  LOG: <Faulty mnemonic>
  1
  Expert data: dcilogp.c (264)
```

Example

An example of log report OSF317 follows:

OSF317 (end)

```
* OSF317 MAY24 20:00:00 4220 FAIL OSF (1032)
  Lost connection with TCP server; errno=255
  Lost connection
  LOG: FAILED
  1
  Expert data: dcilogp.c (264)
```

Field descriptions

The following table explains each field in the log report:

Field	Value	Description
ProcessName	OSF	Name of the SN OPC that runs.
ProcessID	nnnn	Identification code of the OS IF process.
Description	Lost connection with TCP server; errno=255	Indicates TCP connection failure.
Faulty mnemonic	FAILED	Indicates the fault type.

Action

Check the remote TCP application runs. Check if the remote host is active, and if the network functions correctly.

Associated OM registers

There are no associated OM registers.

OSF318

Explanation

The operation system interface (OSF) generates OSF318 when it receives data from the TCP server. The TCP server should not be sending data. The system ignores the data and OSF use is not affected.

The SuperNode (SN) operations controller (OPC) system processes logs. To process the logs the SN OPC does:

- collects the SN logs and SN OPC UNIX application environment (UAE) logs by the data collector
- correlates SN logs by the problem manager
- browses the logs and problems through the problem viewer
- delivers the logs to a local printer through the OSF

The OSF formats the logs in STD or SCC2 format and:

- reads the configuration files
- allocates required resources at start-up
- requests logs from the problem manager
- receives logs from the problem manager

A remote client uses TCP and Internet protocol (IP) to send logs. The TCP runs over IP which is an internetworking protocol with connectionless service. The service exchanges datagrams between two host computers on a minimum of one network.

Format

The log report format for OSF318 is as follows:

```
.* OSF318 mmmdd hh:mm:ss ssdd INFO <ProcessName> (<ProcessID>)
  <Description>
  Received data
  LOG:
  1
  Expert data: dcilogp.c (264)
```

Example

An example of log report OSF318 follows:

OSF318 (end)

```
* OSF318 MAY24 07:30:20 4100 INFO OSF (1032)
  Received data from TCP server
  Received data
  LOG:
  1
  Expert data: dcilogp.c (264)
```

Field descriptions

The following table explains each field in the log report:

Field	Value	Description
ProcessName	OSF	Name of the SN OPC that runs.
ProcessID	nnnn	Identification code of the OS IF process.
Description	Received data from TCP server	Indicates that the TCP server sends data.

Action

Check why remote TCP application is sending data. If OSF318 appears several times, this can indicate OSF connects with the wrong TCP server. If the OSF connects with the wrong TCP server, change the port number. Start the OSF again if necessary.

Associated OM registers

There are no associated OM registers.

OSF319

Explanation

The operation system interface (OSF) generates OSF319 when the OSF system loses connection with the remote transmission control protocol (TCP). The system loses connection caused by an error condition that is not planned, and not established again.

The SuperNode (SN) operations controller (OPC) system processes logs. To process the logs, the SN OPC does:

- collects the SN logs and SN OPC UNIX application environment (UAE) logs by the data collector
- correlates SN logs by the problem manager
- browses the logs and problems through the problem viewer
- delivers the logs to a local printer through the OSF

The OSF formats the logs in STD or SCC2 format and:

- reads the configuration files
- allocates required resources at start-up
- requests logs from the problem manager
- receives logs from the problem manager

A remote client uses TCP and Internet protocol (IP) to send logs. The TCP runs over IP which is an internetworking protocol with connectionless service. The service exchanges datagrams between two host computers on a minimum of one network.

Format

The log report OSF319 is as follows:

```
OSF319 mmmdd hh:mm:ss ssdd FAIL <ProcessName> (<ProcessID>)  
    <Description>  
    Closing connection  
    LOG: <Faulty mnemonic>  
    1  
    Expert data: dcilogp.c (264)
```

Example

An example of log report OSF319 follows:

OSF319 (end)

```
OSF319 MAY24 07:30:20 4200 FAIL OSF (1032)
  Lost TCP connection due to an unexpected status -4;
  errno=0
  Closing connection
  LOG: INVALID
  1
  Expert data: dcilogp.c (264)
```

Field descriptions

The following table explains each field in the log report:

Field	Value	Description
ProcessName	OSF	Name of SN OPC process that runs.
ProcessID	nnnn	Identification code of the OS IF process.
Description	Lost TCP connection because of an unexpected status -4; errno=0	Indicates TCP connection failure.
Faulty mnemonic	INVALID	Indicates the fault type.

Action

In order to establish TCP connection again, bring down and start the OSF again.

Associated OM registers

There are no associated OM registers.

OSF401

Explanation

The operation system interface (OSF) generates OSF401 when OSF loses excessive logs delivered to the device in 15 minutes. The system describes the device in brackets in the description data field.

The SuperNode (SN) operations controller (OPC) system processes logs. To process the logs, the SN OPC does:

- collects the SN logs and SN OPC UNIX application environment (UAE) logs by the data collector
- correlates SN logs by the problem manager
- browses the logs and problems through the problem viewer
- delivers the logs to a local printer through the OSF

The OSF formats the logs in STD or SCC2 format and:

- reads the configuration files
- allocates required resources at start-up
- requests logs from the problem manager
- receives logs from the problem manager

Printer delivery supports log delivery to a maximum of two printers. Printers connect to SN OPC through the modem rack and dedicated modem links. The OSF has two circular buffers. Each printer has a buffer for logs that OSF cannot deliver. The OSF cannot deliver these logs because of a lost modem connection or reception of an XOFF signal from the printer. The buffers in each printer can accommodate conditions where delivery rate quickly exceeds printer capacity caused by bursty arrival of logs. The buffers do not prevent data loss when a sustained high rate of logs occurs. The buffers do not prevent data loss if the printer is not available (for example, printer out of paper). If the buffer fills, OSF discards the logs. The OSF discards the oldest logs first.

Format

The log report format for OSF401 is as follows:

```
. * OSF401 mmmdd hh:mm:ss ssdd FAIL <ProcessName> (<ProcessID>)  
  <Description>  
  Lost logs  
  LOG: <Faulty mnemonic>  
  1  
  Expert data: dcilogp.c (264)
```

OSF401 (end)

Example

An example of log report OSF401 follows:

```
* OSF401 MAY24 04:02:03 4100 FAIL OSF (1032)
  Lost 8 logs intended for </dev/ttyd01/> in the last 15
  minutes
  Lost logs
  LOG: FAILED
  1
  Expert data: dcilogp.c (264)
```

Field descriptions

The following table explains each field in the log report:

Field	Value	Description
ProcessName	OSF	Name of SN OPC process that runs.
ProcessID	nnnn	Identification code of the OS IF process.
Description	Text	Logs lost for special printer or device.
Faulty mnemonic	FAILED	Indicates the fault type.

Action

Check connection between the OSF and the device. When the OSF delivers logs to the device, the log flow exceeds printer capacity. There is no way to retrieve the logs when the log flow exceeds printer capacity.

Associated OM registers

There are no associated OM registers.

PCH100

Explanation

The PATCH (PCH) subsystem generates log report PCH100 when the system checks a group of patches. The system checks patches to determine if a remote office requires a patch. The DMS PATCHER facility uses the DLCHECK (download check) command through remote operations. The subsystem can generate more than one PCH100 log. The number of logs depends on the number of patches checked in one session.

Format

The log report format for PCH100 is as follows:

```
PCH100 mmmdd hh:mm:ss ssdd INFO DLCHECK
      SESSION nn
      PATCHES DLCHECKED
      pchnm needtxt
      pchnm needtxt
      pchnm needtxt
```

Example

An example of log report PCH100 follows:

```
PCH100 JAN22 09:12:23 3656 PATCH DLCHECK
      SESSION 3
      PATCHES DLCHECKED
      ASD00A25  NEEDED
      PJK56A25  NEEDED
      SRC23A25  NOT NEEDED
```

Field descriptions

The following table explains each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO DLCHECK	Constant	Indicates the system used the DLCHECK command
SESSION nn	Integer	Identifies the remote operations session in which the system used the DLCHECK command.

PCH100 (end)

(Sheet 2 of 2)

Field	Value	Description
PATCHES DLCHECKED	Constant	Indicates that the system DLCHECKED some patches.
pchnm	Symbolic text	Identifies the patch checked.
needtxt	NEEDED	Indicates that the remote office needs the identified patch.
	NOT NEEDED	Indicates that the remote office does not need the identified patch.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PCH101**Explanation**

The PATCH (PCH) subsystem generates report PCH101 when the system downloads a group of files to a DMS from a remote node. The system downloads the files through the use of remote operations. The subsystem generates more than one PCH101 log. The number of logs depends on the number of files downloaded in one remote operations session.

Format

The log report format for PCH101 is as follows:

```
PCH101 mmmdd hh:mm:ss ssdd INFO FILE DOWNLOAD
      SESSION nn
      FILES DOWNLOADED
      DEVICE devname
      pchnm pchnm
      pchnm pchnm
```

Example

An example of log report PCH101 follows:

```
PCH101 JAN22 09:13:43 4566 INFO FILE DOWNLOAD
      SESSION 3
      FILES DOWNLOADED
      DEVICE : SFDEV
      ASD00A25$PATCH      PKL34A25$PATCH
      ZRW67A25$PATCH      THY32A25$DF
```

Field descriptions

The following table explains each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO FILE DOWNLOAD	Constant	Indicates the system downloaded a group of files.
SESSION nn	Integer	Identifies the remote operations session from which the system issued the DOWNLOAD command.
FILES DOWNLOADED	Constant	Indicates the system downloaded the files to a remote DMS.

PCH101 (end)

(Sheet 2 of 2)

Field	Value	Description
DEVICE devname	Symbolic text	Indicates the device to which the system downloaded the group of files. For example, a disk volume.
pchnm	Symbolic text	Identifies the file(s) downloaded. Each line lists two files.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

PCH102**Explanation**

The PATCH (PCH) subsystem generates log report PCH102. The subsystem generates this report when the DMS PATCHER facility checks a group of patches through remote operations. The CHECK command determines if patches apply without problems. The subsystem generates more than one PCH102 log. The number of logs depends on the number of patches checked in a single remote operations session.

Format

The log report format for PCH102 is as follows:

```
PCH102 mmmdd hh:mm:ss ssdd INFO CHECK
      SESSION nn
      PATCHES CHECKED
      pchnm chtxt
      pchnm chtxt
      pchnm chtxt
```

Example

An example of log report PCH102 follows:

```
PCH102 JAN22 09:16:43 5476 PATCH CHECK
      SESSION 3
      PATCHES CHECKED
      ASD00A25  CHECKED
      PKL34A25  CHECKED
      ZRW67A25  CHECKED
      THY32A25  CHECKED
      PJK56A25  DID NOT CHECK
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO PATCH CHECK	Constant	Indicates a patch check.
SESSION nn	Integer	Identifies the remote operations session that issued the CHECK command.
PATCHES CHECKED	Constant	Indicates that the system checked patches.

PCH102 (end)

(Sheet 2 of 2)

Field	Value	Description
pchnm	Symbolic text	Identifies the patch that the system checked.
chktxt	CHECKED	Indicates that the identified patch will apply without problems.
	DID NOT CHECK	Indicates an error with the patch file. This file will not apply.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

PCH103**Explanation**

The PATCH (PCH) subsystem generates log report PCH103. The subsystem generates this report when conditions occur as follows:

- Office parameter APPLY_PATCHES_BY_SEQUENCE is ON.
- A user applies a patch that is out of sequence with the command APPLY patchid FORCE.

Format

The log report format for PCH103 is as follows:

```
PCH103 <date> <time> <logseq> INFO PATCH FORCE
    The following patch has been force applied: <patchid>
    USER: userid  DEVICE: deviceid
    Node          Date          Time
    <Node>        <Date>        <Time>
```

Example

An example of log report PCH103 follows:

```
PCH103 FEB01 16:21:37 7789 INFO PATCH FORCE
    The following patch has been force applied: VET00I93
    USER: VETRANO  DEVICE: PLEX4
    Node          Date          Time
    LTC 0 0        02/01/1990    16:21:37
```

Field descriptions

There are no field descriptions.

Action

The log report PCH103 is for information only.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PCH105

Explanation

The PATCH (PCH) subsystem generates log report PCH105 when a patch FAILS to dlcheck, apply, remove, or reclaim. The subsystem immediately generates this report after a failure, including when failure occurs during loadbuild.

Format

The log report format for PCH105 is as follows:

```
PCH105 mmmmdh hh ss ssdd INFO PATCH ACTION FAILED
USER: userid DEVICE: deviceid
Patch Name Action Node Date Time
```

Example

An example of log report PCH105 follows:

```
<pchnm> <pchact> <node> <date> <time>
<patch failure reason>
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO PATCH ACTION FAILED	Constant	Indicates patch failure.
User	Symbolic text	Indicates the name of the user that requests action.
Device	Symbolic text	Indicates the device that requires patch.
Patch name	Symbolic text	Indicates name of patch.
Action	dlcheck, check, apply, remove, or reclaim	Indicates the action for which patch fails.
Node	XPM node, ISN node, CM node, or CC node	Indicates the node of the applied patch.
Date	Integers	Indicates date of action failure.

(Sheet 2 of 2)

Field	Value	Description
Time	Integers	Displays the time of the patch action failure.
patch failure reason	Text	Indicates the reason for the patch failure.

Action

Note the reason for patch failure and contact the next level of support.

Associated OM registers

There are no associated OM registers.

PCH107

Explanation

The Patch (PCH) subsystem generates log report PCH107 for the ISN/XPM node/unit. The subsystem generates PCH107 when the audit cannot run as a result of a discrepancy. Initial design cancels the audit if a REX test or a loadbuild is in progress. If the audit does not receive instructions to UPDATE the patch status, the node/unit is marked ISTb. If the update fails, the node/unit is marked ISTb.

The subsystem also generates log report PCH107 if an ACT Patch (Host or ISN) is in the OFF condition. The PATCHOPT tuple ON determines the OFF condition. Settings of the PATCHAUD entry in table PATCHOPT control the patch audit. If this PATCHOPT tuple is set to Y, an audit of the ACT patches in the OFF state occurs. If this tuple is set to N, an audit of the ACT patches in the OFF state does not occur.

The ACTPATCH is an external alarm that activates in addition to this report. The ACTPATCH indicates that patches that apply to the switch can activate. Operating company personnel must deactivate this external alarm manually.

Note: The PATCHOPT tuple START controls the time of the audit. The feature NODEREEXCONTROL in table OFCVAR schedules REX tests. The time of audit must not overlap the time of REX tests. A schedule conflict causes the cancellation of the patch audit.

Format

The log report format for PCH107 is as follows:

```
PCH107 mmmdd hh:mm:ss ssdd INFO PATCH AUDIT FAILED
    <failure reason>
    <failure details>
    where <failure reason> is
    PATCH AUDIT FOUND MISMATCH or
    PATCH AUDIT CANCELLED.
```

The log report format for PCH107 is as follows:

```
PCH107 mmmdd hh:mm:ss ssdd INFO PATCH AUDIT FAILED
    <target info>
    Corrective ACT patch is not ON or NA: <patchid>
```

Example

An example of log report PCH107 follows:

PCH107 (continued)

```

PCH107 JAN27 05:06:07 1234 INFO PATCH AUDIT FAILED
  PATCH AUDIT FOUND MISMATCH
  Patches in the CM that are NOT in LIM 0 0 :
  HCB50I31
  MCD80I31
  DBG01I31
  Patch statuses updated
  LOADBUILD IN PROGRESS or
  REX TEST ACTIVE.

```

An example of log report PCH107 follows:

```

RTPD    PCH107 FEB05 17:24:45 2300 INFO PATCH AUDIT FAILED
      MS 0
      Corrective ACT Patch is not ON or NA:   CHC00192

```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO PATCH AUDIT FAILED	Constant	Identifies patch audit failure.
failure reason	PATCH AUDIT FOUND MISMATCH, PATCH AUDIT CANCELLED	A mismatch description indicates a discrepancy. For example, a patch that shows as applied in the CM but not applied in the node is a discrepancy. A list of a maximum of nine patches follows this field. The list indicates if the patches update. If more than nine patches on an ISN/XPM node/unit mismatch, the subsystem generates log PCH107. The subsystem continues to generate this log until all mismatched patches list.

Action

The node/unit is marked ISTb in the occurrence of a patch status mismatch. An image of an ISN node load can fail. Check patches in the CC/CM and the ISN/XPM node/unit to determine if failure occurred. If the problem persists, contact Technical Assistance Service (TAS).

PCH107 (end)

The patch for the target specified in the PCH107 can require an ACT setting of ON. Operating company personnel must use the PATCHEDIT command to modify the setting to ON.

A patch can require an ACT setting of OFF and require additional audits. Operating company personnel must use the PATCHEDIT command to modify the setting value to NA. The operating company personnel must read the patch description to determine if the ACTPATCH is necessary for the switch. If the ACTPATCH is necessary, operating company personnel must obtain permission and a password from TAS to activate the patch. If the ACTPATCH is not necessary, operating company personnel does not require a password to set patch status to NA.

Associated OM registers

There are no associated OM registers.

PCH111

Explanation

The Patch (PCH) subsystem generates log report PCH111. The subsystem generates this report if the switch sanity is questionable after the application of the autopatch process. The subsystem checks the system sanity against an acceptable threshold level in Table PATSET. If the system sanity exceeds the threshold, the subsystem generates log report PCH111.

Format

The log report format for PCH111 is as follows:

```
PCH111 mmmdd hh:mm:ss ssdd INFO Autopatch Switch Sanity
      REASON<reason>
      <text reason>
```

Example

An example of log report PCH111 follows:

```
PCH111 AUG07 09:15:00 7840 INFO Autopatch Switch Sanity
      REASON = MPC.S.101: 28
      Switch sanity threshold exceeded after applying patches.
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO AUTOPATCH SWITCH SANITY	Constant	Indicates an autopatch switch sanity check.
REASON	Symbolic text	Indicates the log report and count that exceeds the threshold.
text reason	Switch Sanity threshold exceeded before patch application; Switch Sanity threshold exceeded after patch application.	Indicates the time of the threshold breach.

PCH111 (end)

Action

Go to table PATSET and change the value of the field THRESHOLD to 100. This change in value instructs AUTOPATCH to bypass a check of switch sanity. Or, from CI, type:

```
>AUTOPATCH DEBUG  
>LISTST  
>PRINT AUTOPDIR  
>HELP INHIBIT
```

Use the inhibit command to inhibit logs that do not require consideration during the sanity check. The user can inhibit log groups or single log reports as follows:

For log groups:

```
>INHIBIT TRK ON
```

For single log reports:

```
>INHIBIT TRK 101 ON  
>QUIT
```

To uninhibit logs inhibited earlier:

```
>INHIBIT TRK 101  
OFF  
>QUIT
```

Analyze the logs to determine possible software or hardware problems.

Associated OM registers

There are no associated OM registers.

PCH201

Explanation

The PATCH (PCH) subsystem generates log report PCH102 after every issue of the GETPAT command. The log report summarizes activities that occur during the execution of the GETPAT command.

There are no changes to the report, except for sections that relate to removed patches. When the GETPAT command issues with the REMOVED parameter, the PCH201 log report can contain the following information:

- removed patches found
- removed necessary patches
- confirmed removed patches

Format

The log report format PCH201 is as follows:

```
PCH201 mmmdd hh:mm:ss ssdd INFO Getpat Summary
  USER: userid          DEVICE:deviceid
  Removed patches found:<nnn>
  Removed need patches:<nnn>
    <patchid> needs <patchid>
    <patchid>
    <patchid> needs <patchid>
  Removed patches (have/have not) been confirmed
  Apply manually: <nnn>
    <patchid>
    .
    <patchid>
  Pending: <nnn>
```

Example

An example of log report PCH201 follows:

```
PCH201 MAY24 12:24:21 3900 INFO Getpat Summary
  USER: TERM1          DEVICE:CONSOLE:TERM1
  Removed patches found:5
  Removed need patches:1
    DFB90C36 needs DFB89C36
  Removed patches have been confirmed
  Apply manually: 1
    EGJ17C36
  Pending: 2
```

PCH201 (end)

Field descriptions

The following table describes each variable field in the log report:

Field	Value	Description
userid	Text	Identifies the MAP user.
deviceid	Text	Indicates the MAP device name.
patchid	Symbolic Text	Indicates the name of the removed patches applied.

Action

Refer to the log report text and perform the action specified.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PCH203

Explanation

The Patch (PCH) subsystem generates log report PCH203 when the system sanity exceeds the threshold level in table PATSET. The subsystem checks system sanity against an acceptable threshold level in table PATSET.

Format

The log report format for PCH203 is as follows:

```
PCH203 mmmdd hh:mm:ss ssdd INFO Autopatch Switch Sanity  
  REASON=<reason>  
  <text reason>
```

Example

An example of log report PCH203 follows:

```
PCH203 MAY24 12:24:21 7840 INFO Autopatch Switch Sanity  
  REASON= MPC.S.101:28  
  Switch sanity threshold exceeded after applying patches.
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
reason	Symbolic Text	Indicates the log report and count that exceed the threshold.
text reason	Symbolic Text	Indicates the reason why switch sanity is not known.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

PCH204

Explanation

The log report PCH204 generates each time a user executes the START, STOP, CANCEL or DELAY commands in the Autopatcher Command Increment.

Format

The log report format for PCH204 is as follows:

```
PCH204 mmmdd hh:mm:ss ssdd INFO AUTOPATCH COMMAND
      USED
      USER: userid          DEVICE:deviceid
      <text reason>
      Delayed From: <day, mmmdd hh:mm> To: <day,mmmdd hh:mm>
```

Example

An example of log report PCH204 follows:

```
PCH204 MAY25 11:48:14 6100 INFO AUTOPATCH COMMAND
      USED
      USER: TERM1          DEVICE:CONSOLE:TERM1
      Autopatch process DELAYED by command
      Delayed From:09:30 on Wed,05/27 To: 09:30 on Fri,05/29
```

Field descriptions

The following table describes each variable field in the log report:

Field	Value	Description
deviceid	Text	Indicates the MAP device name.
text reason	Autopatch processed CANCELLED by command	Indicates the command for the autopatch process.
	Autopatch processed SCHEDULED by command	Indicates the command for the autopatch process.
	Autopatch processed STOPPED by command	Indicates the command for the autopatch process.
	Autopatch processed STARTED by command	Indicates the command for the autopatch process.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PCH350

Explanation

The system generates report PCH350 when XPM loadfile patching fails. Loadfile patching helps XPM maintenance reduce recovery time for XPMs. Loadfile patching prevents the need to compile XPM loads and provides automatic XPM loadfile patching. The PCH350 log report records data that associates with the failure of XPM loadfile patching. The PCH350 also contains the name of the XPM load and records if the system or the operating company personnel initiate the loadfile.

Format

The log report format for PCH350 is as follows:

```
PCH350 mmmdd hh:mm:ss ssdd FAIL Loadfile Patch failure
  Start Time:<date time>   End Time:<date time>
  Pmload: <loadname>
  Reason: <initiation reason>
  <failure text>
  <failure text>
  <failure text>
```

Example

An example of log report PCH350 follows:

```
PCH350 OCT31 11:59:59 0013 FAIL Loadfile Patch Failure
  Start Time:1993/05/30 09:30:05 End Time:1993/05/30 09:31:05
  Pmload: NLG36BD
  Reason: System
  Patch file not found for:
  XAT09X36 XCH66X36 XKN83X36
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL Loadfile Patch Failure	Constant	Indicates the process failure.
Start Time:	Numeric	Patching listed by year, month, day, hour, minute, second format.

(Sheet 2 of 2)

Field	Value	Description
End Time	Numeric	Indicates end date and time of patching.
Pmload	Symbolic name	Indicates the XPM load that the system will patch.
Reason	Manual or system	Indicates if the system or the operating company personnel initiate loadfile patching.
Failure text	Text	Identifies the reason that the loadfile patching aborts.

Action

The XPM loadfile patching stops if devices in table XPMLFP do not have disk space. Make sure that space is available for the devices in table XPMLFP. To correct loadfile creation errors, repeat the download process, or find the missing patch files.

Associated OM registers

There are no associated OM registers.

PCH650

Explanation

The system generates report PCH650 when XPM loadfile patching is complete. Loadfile patching helps XPM maintenance reduce recovery time for XPMs. Loadfile patching also provides automatic XPM loadfile patching and prevents the need to compile XPM loads. The PCH650 contains information about the patched loadfile. The PCH650 also includes:

- the names of the patches applied during the loadfile session
- the name of the pmlload
- the name of the loadfile that the loadfile session created
- the device used to store the new load file
- the reason that the loadfile starts (manual or system)

Format

The log report format for PCH650 is as follows:

```
PCH650 mmmdd hh:mm:ss ssdd INFO Loadfile Patch Successful
  Start Time: <date time>  End Time: <date time>
  Pmlload: <loadname>
  Loadfile: <loadfilename>
  Loadfile Device: <deviceid>
  Reason: <initiation reason>
  <text line 1>
  <text line 2>
  <text line 3>
  <text line 4>
  <text line 5>
  <text line 6>
```

Example

An example of log report PCH650 follows:

PCH650 (end)

PCH650 JUL24 18:36:06 1800 INFO Loadfile Patch Successful
Start Time:1993/09/06 17:30:00 End Time:1993/09/06 18:00:00
Pmload: NLT36BD
Loadfile: NLT36BD_930906
Loadfile Device: SOODXPMLF
Reason: Manual
Patches added to loadfile:
XDF30X36 XLD09X36 XNF34X36
Patches that could not be removed from the loadfile:
XVB94X36

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
loadname	String	Indicates the name of the tuple in table PMLOADS.
loadfilename	String	Indicates the name of the loadfile created during loadfile patch session.
deviceid	Symbolic Text	Indicates the name of the device. The name includes loadfile.
reason	Manual or System	Indicates the type of initialization.

Action

There are no required actions.

Associated OM registers

There are no associated OM registers.

PEND100

Explanation

The pending order system (PEND) generates report PEND100 at 0000 h and 1200 h. The PEND system generates PEND100 if one or more service orders are past due or due in the next 12 h. Refer to the *Basic Translations Tools Guide*.

Format

The log report format for PEND100 is as follows:

```
PEND100 mmmdd hh:mm:ss ssdd INFO PENDING ORDER AUDIT:
nnnn
      PENDING ORDERS ARE DUE IN THE NEXT 12 HOURS
```

Example

An example of log report PEND100 follows:

```
PEND100 JUL31 00:00:01 2880 INFO PENDING ORDER AUDIT: 4
      PENDING ORDERS ARE DUE IN THE NEXT 12 HOURS
```

Field descriptions

The following table explains each field in the log report:

Field	Value	Description
INFO PENDING ORDER AUDIT	Constant	Indicates that an audit of pending service orders occurs.
nnnn	0 - 9999	Indicates number of pending orders past due or due in the next 12 h.
PENDING ORDERS ARE DUE IN THE NEXT 12 HOURS	Constant	Indicates pending orders past due.

Action

Enter the PENDING CI increment and use the DISPLAY DUE command to see the pending orders past due, or due in the next 12 hours. Verify the validity of the orders. You can use the ACTIVATE command.

Associated OM registers

There are no associated OM registers.

PEND101

Explanation

The pending service order (PEND) subsystem generates report PEND101 at 0000 h and 1200 h. The subsystem generates PEND101 if one or more service orders are in prompting range.

Format

The log report format for PEND101 is as follows:

```
PEND101 mmmdd hh:mm:ss ssdd INFO PENDING ORDER AUDIT:
nnnn
PENDING ORDERS ARE WITHIN PROMPTING RANGE
```

Example

An example of log report PEND101 follows:

```
PEND101 JUL20 12:00:01 1163 INFO PENDING ORDER AUDIT: 2
PENDING ORDERS ARE WITHIN PROMPTING RANGE
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO PENDING ORDER AUDIT	Constant	Indicates that an audit of pending orders occurs.
nnnn	0—9999	Indicates the number of pending orders in prompting range.
PENDING ORDERS ARE WITHIN PROMPTING RANGE	Constant	Indicates that service orders are in prompting range.

Action

Enter the PENDING CI increment and use the DISPLAY PROMPTING command to view pending orders in prompting range. Verify that the pending orders are ready for the due date.

Associated OM registers

There are no associated OM registers.

PES100

Explanation

The power and environment system (PES) generates report PES100. The PES system generates PES100 when a change occurs from ok or closed to fail or open. The change occurs in one or more outside plant module power and environment system (OPMPES) components.

Format

The log report format for PES100 is as follows:

```
**PES100 mmmdd hh:mm:ss ssdd INFO PES
      OPMPES  nnn pmtxt
      infotxt
```

Example

An example of log report PES100 follows:

```
**PES100 APR01 12:00:00 2112 INFO PES
      OPMPES  33  REM1 03  0 RMM 3
      High Temp.          Fail          from OK
      Front door          Open          from Closed
```

Field descriptions

The following table explains each field in the log report:

Field	Value	Description
INFO PES	Constant	Information on the PES follows.
OPMPES	0—198	OPMPES key in table OPMINV
pmtxt	Alphanumeric	RLCM and associated trunk module type. Refer to table OPMINV for values.
pmtxt	Alphanumeric	RLCM appears as: site (for example REM1), frame (0-99), and unit (always 0); see pmid description in table I.
pmtxt	Alphanumeric	Trunk module type is RMM; TM number between ranges from 0-2047; see pmid description in table I.
infotxt	Text	OPMPES component status. See additional information section below.

Action

See additional information section of this log report.

Associated OM registers

There are no associated OM registers.

Additional information

Event	State	Explanation
High Temp.	Fail from OK	Cabinet temperature too high; system attempts to correct temperature
Low Temp.	Fail from OK	Cabinet temperature too low; system attempts to correct temperature
Rectifier 0	Fail from OK	Repair rectifier or AC
Rectifier 1	Fail from OK	Repair rectifier or AC
Cur. Limit 0	Fail from OK	Overload on rectifier; investigate and correct problem before you replace the rectifier.
Cur. Limit 1	Fail from OK	Overload on rectifier; investigate and correct problem before you replace the rectifier.
Front Door	Open from Closed	Cabinet opens
Side Door	Open from Closed	Cabinet opens
Common AC	Fail from OK	AC power failure; investigate and correct problem.
FSP State	Fail from OK	Frame supervisory panel fuse failed; replace fuse.

PES101

Explanation

The power and environment system (PES) generates report PES101. The PES system generates PES101 when the system does not perform a requested operation.. The system does not perform a requested operation because the operation fails or the system receives a higher priority request.

Format

The log report format for PES101 is as follows:

```
**PES101 APR01 12:00:00 2112 INFO PES
  OMPES 33 REM1 03 0 RMM 3
  OPERATION Aborted: higher priority request ON BCCCDVR
```

Example

An example of log report PES101 follows:

```
**PES101 mmmdd hh:mm:ss ssdd INFO PES
  OMPES nnn rlcmm RMM nnnn
  OPERATION: opertxt
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO PES	Constant	Indicates a PES log report
OMPES	Symbolic text	OMPES key; see table OPMINV.
rlcmm	Symbolic text	Remote line concentrating module (RLCM) number; see table OPMINV.
RMM	Symbolic text	Remote maintenance module (RMM) number; see table OPMINV.
OPERATION	Aborted: higher priority request	Higher order request preempts operation. If this happens often, contact next level of maintenance level.
OPERATION	BCCDVR card failure	Battery charger controller driver (BCCDVR) card fails. Replace card.

PES101 (continued)

(Sheet 2 of 2)

Field	Value	Description
OPERATION	Communication failure: Invalid data received	Invalid data. Check and test the OPMPES circuit(s) again.
OPERATION	Fail to get pathend	Indicates a software messaging error. Check RMM, LCM, LTC.
OPERATION	Fail to get route to node	Software messaging error. Error occurs during high traffic. If error occurs often, contact next level of maintenance.
OPERATION	Invalid message received	Test RMM.
OPERATION	Invalid Tid	Indicates that the system receives invalid terminal identification (TID). If possible, repeat the action that causes the operation to fail. If the error occurs again, contact next level of maintenance.
OPERATION	Message wait failed.	Indicates timeout waiting on reply. Repeat the task.
OPERATION	MTCBASE failed	Software error. If this error occurs often, contact next level of maintenance.
OPERATION	MTCBASE wait time out	Indicates timeout waiting for a task reply. If this happens often, contact next level of maintenance.
OPERATION	No reply received from OPM	State of OPMPES is not known. Check LTC, RMM, LCM links.
OPERATION	PM is system busy	State of OPMPES is not known. Check LCM, RMM, LTC.
OPERATION	PM not in service	OPMPES state not known; PM is offline. Make sure LCM and RMM have correct software load. If necessary, manual busy and return PM to service.
OPERATION	Task aborted from MTCBASE	Software aborts request because of internal problems. If this happens often, contact next level of maintenance.
ON	BCCDVR	Indicates BCCDVR card affected.
ON	PESALRM	PES alarm detector card affected.

PES101 (end)

Action

Refer to the description supplied with each field.

Associated OM registers

There are no associated OM registers.

PES102**Explanation**

The power and environment system (PES) generates report PES102. The PES system generates PES102 when an outside plant module power and environmental system (OPMPES) audit finds a mismatch between the software and hardware. A return to service (RTS) updates the hardware to the condition in the software.

Format

The log report format for PES102 is as follows:

```
**PES102 mmmdd hh:mm:ss ssdd INFO PES
  OPMPES nnn rlcmmn RMM nnnn
  AUDIT: evntnm
  cardnm State newnm from oldnm
```

Example

An example of log report PES102 follows:

```
**PES100 APR01 12:00:00 2112 INFO PES
  OPMPES 33 REM1 03 0 RMM 3
  AUDIT Mismatch in reply data
  BCCDVR State Sysb from 0k
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
INFO PES	Constant	Indicates a PES log report.
OPMPES	Symbolic text	OPMPES key. See table OPMINV.
rlcmmn	Symbolic text	Identifies the remote line concentrating module (RLCM) number. See table OPMINV.
RMM	Symbolic text	Identifies the remote maintenance module (RMM) number. See table OPMINV.
AUDIT	Aborted: higher priority request	Indicates that the system finds a higher order request and preempts operation. There are no required actions.

PES102 (continued)

(Sheet 2 of 3)

Field	Value	Description
AUDIT	BCCDVR card failure	Battery charger controller driver (BCCDVR) card failed. Replace the card.
AUDIT	Communication failure: Invalid data received	Indicates invalid data received. Check and test OPM PES circuit(s) again.
AUDIT	Fail to get pathend	Indicates software messaging error. Check RMM, LCM and LTC.
AUDIT	Fail to get route to node	Indicates software messaging error. Check RMM, LCM and LTC.
AUDIT	Invalid message received	Indicates that the system receives an invalid message. Test RMM.
AUDIT	Invalid Tid	Indicates invalid terminal identification (TID). Repeat the action that causes failure. If the error occurs again, contact next level of maintenance.
AUDIT	Message wait fails.	Timeout waits on reply. Repeat.
AUDIT	MTCBASE fails	Software error. If this error happens often, contact next level of maintenance.
AUDIT	MTCBASE wait time out	Timeout waiting for task reply. If this timeout happens often, contact next level of maintenance.
AUDIT	No reply received from OPM	State of OPM PES not known. Check LCM, RMM and LTC links.
AUDIT	PM is manual busy	OPM PES state not known. Verify if you must return OPM to service. If necessary, return peripheral module (PM) to service to perform desired actions.
AUDIT	PM is system busy	State of OPM PES not known. Check LCM, RMM and LTC.
AUDIT	PM not in service	OPM PES state not known; PM offline. Make sure LCM and RMM have correct software load. If necessary, manual busy and return PM to service.
AUDIT	Software aborts task from MTCBASE	Software aborts request because of internal problems. There are no required actions.

(Sheet 3 of 3)

Field	Value	Description
cardnm	BCCDVR	Indicates BCCDVR card affected.
cardnm	PESALRM	PES alarm (PESALRM) detector card affected.
State	Symbolic text	Indicates new state of card.
from	Symbolic text	Indicates previous state of card.

Action

See the action supplied with each field.

Associated OM registers

There are no associated OM registers.

PES103

Explanation

The power and environment system (PES) subsystem generates report PES103. The subsystem generates PES103 when the state of the outside plant module power and environment system (OPMPES) changes to RED. The system generates the PES100, PES101, or PES102 log report after report PES103.

Format

The log report format for PES103 is as follows:

```
**PES103 mmmdd hh:mm:ss ssdd INFO PES nnn Condition: infotxt
```

Example

An example of log report PES103 follows:

```
**PES103 APR01 12:00:00 2112 INFO PES 33 Condition: RED  
from      GREEN
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO PES	Constant	Information about an OPMPES follows. See table OMPINV for values.
Condition	RED from GREEN	A failure occurs.
	RED from AMBER	A failure occurs.

Action

Refer to log report PES100, PES101, or PES102 for failure reasons. Follow the instructions in the log.

Associated OM registers

There are no associated OM registers.

PES104

Explanation

The power environment system (PES) generates report PES104 when an AC power failure occurs. During an AC power failure, the load bus test registers a voltage of 47V or less. The batteries provide power for approximately two h after the system generates this report, . The PES system generates a PES107 report when the system recovers.

Format

The log report format for PES104 is as follows:

```
**PES104 mmmdd hh:mm:ss ssdd FAIL PES
      OPMPEs nnn site nn n  RMM nn
      LOAD BUS LOW VOLTAGE ALARM
```

Example

An example of log report PES104 follows:

```
**PES104 JAN14 10:24:16 7650 FAIL PES
      OPMPEs 2  REM1 01 0  RMM 3
      LOAD BUS LOW VOLTAGE ALARM
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL PES	Constant	Indicates that information about a PES failure follows.
OPMPES	Integers	Provides OPMPEs key. See table OPMINv for values.
site	Integers	Identifies the remote line concentrating module (RLCM) identification (site, frame and number). See tables SITE and LCMINv for values.
RMM	Integers	Identifies the remote maintenance module (RMM) number. See table OPMINv for values.
LOAD BUS LOW VOLTAGE ALARM	Constant	Indicates the battery voltage is low.

PES104 (end)

Action

Prepare to lose system. Install emergency generators on the site immediately.
The system recovers when the AC failure alarm condition is cleared.

Associated OM registers

There are no associated OM registers.

PES105**Explanation**

The power and environment system (PES) subsystem generates report PES105 during the normal battery rotation mode. The subsystem generates PES105 when the charge bus test runs and fails. The system also generates PES105 if the operating company personnel requests a test of the charge bus from the MAP terminal.

Format

The log report format for PES105 is as follows:

```
*PES105 mmmdd hh:mm:ss ssdd FAIL PES
  OMPES nnn site nn n RMM nn
  CHARGE BUS LOW VOLTAGE ALARM: BCC n
  Site Flr RPOS Bay_id Shf Description Slot EqPEC
  site 00 A01 OPE n 32 BCC n n 8X02AA
```

Example

An example of log report PES105 follows:

```
*PES105 JAN15 08:10:10 3450 FAIL PES
  OMPES 2 REM1 01 0 RMM 3
  CHARGE BUS LOW VOLTAGE ALARM: BCC1
  Site Flr RPOS Bay_id Shf Description Slot EqPEC
  REM1 00 A01 OPE 2 32 BCC 1 4 8X02AA
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL PES	Constant	Provides information about PES failure
OMPES	Integers	OMPES key. See table OPMINV for values.
site	Integers	Indicates the Remote Line Concentrating Module (RLCM) number. See tables SITE and LCMINV.
RMM	Integers	Indicates the remote maintenance module (RMM) number. See table OPMINV for values.

PES105 (end)

(Sheet 2 of 2)

Field	Value	Description
CHARGE BUS LOW VOLTAGE ALARM	Constant	Indicates the charge bus test discovers a fault.
BCC	0,1	Indicates that the battery charger controller is defective.
Site	Alphanumeric	Location of OMPES. See table SITE for values.
Flr 00	Constant	Indicates the floor
RPOS A01	Constant	Indicates the position
Bay_id	OPE, Integers	Indicates the bay. See customer data table OPMINV for values.
Shf 32	Constant	Provides the shelf number.
Description	BCC, Integers	Identifies the battery charger controller (BCC) affected (0 or 1).
Slot	2,4	Provides the slot. If BCC0 is involved, slot = 2. If BCC1 is involved, slot = 4.
EqPEC	Alphanumeric	Product engineering code (PEC)

Action

Replace the defective battery charger controller (BCC) immediately. Issue the TST CHARGEbus, CI command to run the charge bus test again. If the charge bus test succeeds, the alarm clears.

Associated OM registers

There are no associated OM registers.

PES106**Explanation**

The Power and Environment System (PES) subsystem generates report PES106. The subsystem generates PES106 when the system reports a charge bus alarm and the audit runs a successful charge bus test.

The PES subsystem also generates PES106 when the user requests a charge bus test from the MAP terminal.

Format

The log report format for PES106 is as follows:

```
PES106 mmmdd hh:mm:ss ssdd INFO PES
      OMPES nnn site nn n RMM nn
      CHARGE BUS BCC n OK
```

Example

An example of log report PES106 follows:

```
PES106 JAN15 08:10:10 3450 INFO PES
      OMPES 2 REM1 01 0 RMM 3
      CHARGE BUS BCC1 OK
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO PES	Constant	Indicates that information about the PES system follows.
OMPES nnn	Refer to customer data Table OPMINV for values.	Provides OMPES key. Refer to customer data Table OPMINV for values.
site nn n	Refer to customer data Table SITE and Table LCMINV for values.	Identifies the remote line concentrating module (RLCM) number.
RMM nn	Refer to customer data Table OPMINV for values.	Identifies the remote maintenance module (RMM) number.
CHARGE BUS BCC n	0,1	Indicates which battery charger controller is now OK.

PES106 (end)

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

PES107**Explanation**

The Power and Environment System (PES) subsystem generates report PES 107. The subsystem generates PES107 when a change occurs in the state of one or more components of the outside plant module power and environment system (OPMPES). The subsystem generates PES107 if one or more OPMPES component changes state to OK from Fail or to Closed from Open .

Format

The log report format for PES107 is as follows:

```
PES107 mmmdd hh:mm:ss ssdd INFO PES
      OPMPES nnn pmtxt
      infotxt
```

Example

An example of log report PES107 follows:

```
PES107 SEP25 01:41:23 5413 INFO PES
      OPMPES 33  REMI 03  0  RMM 3
      High Temp.      Ok      from Fail
      Front Door      Closed  from Open
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
PES	Constant	Indicates that information on the OPMPES subsystem follows.
OPMPES nnn	0-198	Provides OPMPES key in customer data Table OPMINV.
pmtxt	Refer to customer data Table OPMINV for values.	Identifies the RLCM and the associated trunk module type. The RLCM appears as the site, like frame (0-99) and unit (always 0). Refer to PMID description in Table I.

PES107 (continued)

(Sheet 2 of 2)

Field	Value	Description
infotxt	Refer to Table EVENTS at the end of this log report.	Indicates the trunk module type in RMM, and that the TM number is between 0 and 2047. Refer to PMID description in Table I. Provides information on the status of one or more components of the OPMPEs.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information**Events (Sheet 1 of 2)**

Events	State	Explanation
High Temp	OK from Fail	System corrects High temperature.
Low Temp	OK from Fail	System corrects Low temperature.
Rectifier 0	OK from Fail	System corrects Rectifier 0 failure.
Rectifier 1	OK from Fail	System corrects Rectifier 1 failure.
Current Limit 1	OK from Fail	System corrects overload on rectifier 1.
Current Limit 0	OK from Fail	System corrects overload on rectifier 0.
Front Door	Closed from Open	Cabinet is shut.
Side Door	Closed from Open	Cabinet is shut.
Common AC	OK from Fail	System corrects Common AC failure.
FSP State	OK from Fail	System corrects From supervisory panel fuse failure.

Events (Sheet 2 of 2)

Events	State	Explanation
BCC Fuse 0	OK from Fail	System corrects Battery Charge Controller 0 fuse failure.
BCC Fuse 1	OK from Fail	Battery charger controller 1 fuse failure corrected.
ECU State	OK from Fail	Note: Fan failure in environmental control unit (ECU) corrected.
BCC Unit 0	OK From Warning	Battery charger controller 0 strings are on load bus.
BCC Unit 1	OK from Warning	Battery charger controller 1 strings are on load bus.

PES108

Explanation

The Power and Environment System (PES) subsystem generates report PES108. The subsystem generates report PES108 when the state of the outside plant module power and environment system (OPMPES) changes.

Format

The log report format for PES108 is as follows:

PES108 mmmdd hh:mm:ss ssdd INFO PES nnn Condition: infotxt

Example

An example of log report PES108 follows:

PES108 SEP25 01:41:23 5413 INFO PES 33 Condition: GREEN
from RED

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
PES nnn	Refer to customer data Table OPMINV for values.	Indicates that information about an OPMPES follows.
Condition: infotxt	GREEN from RED	Indicates the system clears a problem.
	OFFL from AMBER	Indicates manual action. This action is necessary when the BATTINFO field of Table OPMINV must change or OPMPES must be deleted.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

PES109**Explanation**

The power and environment system (PES) subsystem generates report PES109. The subsystem generates PES109 when one or more components of the outside plant module power and environment system (OPMPES) changes state from OK to system busy (SysB).

Format

The log report format for PES109 is as follows:

```
**PES109 mmmdd hh:mm:ss ssdd SYSB PES
    OPMPES nnn pmtxt
    infotxt
```

Example

An example of log report PES109 follows:

```
**PES109 SEP25 01:41:23 5413 SYSB PES
    OPMPES 33 REMI 03 0 RMM 3
    BCCDVR State PMB from OK
    PESALRM State PMB from Ok
    BCC Unit 0 Warning from Ok
    BCC Unit 1 Warning from Ok
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
SYSB PES	Constant	Indicates that information about a SysB state on the PES follows
OPMPES	0-198	Provides OPMPES key in customer data table OPMINV
pmtxt	Alphanumeric	Identifies the remote line concentrating module (RLCM) and the trunk module type. Refer to customer data table OPMINV for values.
pmtxt	Alphanumeric	The RLCM appear as: the site, for example, REM1, frame (0-99), and unit (always 0).

PES109 (end)

(Sheet 2 of 2)

Field	Value	Description
pmtxt	Alphanumeric	Indicates that the trunk module (TM) type is remote maintenance module (RMM), and the TM number is between 0 and 2047.
infotxt	Symbolic text	Provides information on the status of one or more components of the OPMPEs. Refer to Events table at the end of this log report.

Action

Refer to the Events table at the end of this log report.

Associated OM registers

There are no associated OM registers.

Additional information

Event	State	Explanation
PESALRM	State SysB from OK	There is no action required.
BCCDVR	State SysB from OK	There is no action required.
BCCDVR	State PMB from OK	Check the RMM state.
PESALRM	State PMB from OK	Check the RMM state.
BCC Unit 0	Warning from OK	Not all on load bus.
BCC Unit 1	Warning from OK	Not all on load bus.
Note: The automatic battery rotation/charging feature usually has one battery string on the charge bus. This alarm is important if more than one battery string is not on the load bus.		

PES110**Explanation**

The Power and Environment System (PES) subsystem generates report PES110. The subsystem generates PES110 when one or more components of the outside plant module power and environment system (OPMPES) changes to the manual busy (ManBusy) state.

Format

The log format for report PES110 is as follows:

```
**PES110 mmmdd hh:mm:ss ssdd MANB PES
    OPMPES nnn pmtxt
    infotxt
```

Example

An example of log report PES110 follows:

```
**PES110 SEP25 01:41:23 5413 MANB PES
    OPMPES 33 REMI 03 0 RMM 3
    BCCDVR State MANB from Ok
    PESALRM State MANB from Ok
    BCC Unit 0 Warning from Ok
    BCC Unit 1 Warning from Ok
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
PES	Constant	Indicates that information on the power and environment system follows.
OPMPES nnn	0-198	Provides OPMPES key in customer Data Table OPMINV.
pmtxt	Refer to customer data Table OPMINV for values.	Identifies the RLCM and the associated trunk module type. The RLCM appears as the site, for example, as REM1, frame (0-99), and unit (always 0). Refer to PMID description in Table I.

PES110 (end)

(Sheet 2 of 2)

Field	Value	Description
		Indicates the trunk module type is RMM, and the TM number is between 0 and 2047. Refer to pmid description in Table I.
infotxt	Refer to Events table at the end of this log report.	Provides information on the status of one or more components of the OMPES.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information**Events**

Events	State
BCCDVR	State ManB from OK
PESALRM	State ManB from OK
BCCDVR	State ManB from Offl
PESALRM	State ManB from Offl
BCCDVR	State ManB from PMB
PESALRM	State ManB from PMB
BCC Unit 0	Warning from OK
BCC Unit 1	Warning from OK
Note: The appearance of the BCC units in the PES110 log indicates that the BCC driver goes MANb.	

PES111**Explanation**

The Power and Environment System (PES) subsystem generates report PES111. The subsystem generates PES111 when one or more components of the outside plant module power and environment system (OPMPES) changes state from OK to offline.

Format

The log report format for PES111 is as follows:

```
**PES111 mmmdd hh:mm:ss ssdd OFFL PES
    OPMPES nnn pmtxt
    infotxt
```

Example

An example of log report PES111 follows:

```
**PES111 SEP25 01:41:23 5413 OFFL PES
    OPMPES 33 REM1 03 0 RMM 3
    BCCDVR State Offl from Ok
    PESALRM State Offl from Ok
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
OFFL PES	Constant	Indicates that information on the power and environment system follows.
OPMPES nnn	0-198	Provides OPMPES key in customer data Table OPMINV.
pmtxt	Refer to customer data Table OPMINV for values.	Identifies the RLCM and the associated trunk module type. The RLCM appears as: the site, for example REM1, frame (0-99), and unit (always 0). Refer to PMID description in Table I. Indicates the trunk module (TM) type is RMM, and the TM number is between 0 and 2047. Refer to PMID description in Table I.

PES111 (end)

(Sheet 2 of 2)

Field	Value	Description
infotxt	BCCDVR State Offl from OK	Indicates that the battery charger controller (BCC) driver card is offline or manbusy state.
	PESALRM State Offl from OK	Indicates that the PES alarm is in the offline or manbusy state.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

PES112**Explanation**

The Power and Environment System (PES) subsystem generates report PES112. The subsystem generates PES112 when one or more components of the outside plant module power and environment system (OPMPES) changes state to the OK state.

Format

The log report format for PES112 is as follows:

```
PES112 mmmdd hh:mm:ss ssdd RTS PES
      OPMPES nnn pmtxt
      infotxt
```

Example

An example of log report PES112 follows:

```
PES112 SEP25 01:41:23 5413 RTS PES
      OPMPES 33 REM1 03 0 RMM 3
      BCCDVR State      Ok      from MANB
      PESALRM State     Ok      from MANB
      BCC Unit 0        Ok      from Warning
      BCC Unit 1        Ok      from Warning
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
PES	Constant	Indicates that information about an OPMPES follows.
OPMPES nnn	0-198	Provides OPMPES key in customer data Table OPMINV.
pmtxt	Symbolic text	Identifies the RLCM and the associated trunk module (TM) type. Refer to Customer Data Table OPMINV for values. Indicates the RLCM appears as the site, for example, REM1, frame (0-99), and unit (always 0). Refer to PMID description in Table I.

PES112 (end)

(Sheet 2 of 2)

Field	Value	Description
		The TM type is RMM, and the TM number is between 0 and 2047. Refer to PMID description in Table I.
infotxt	Symbolic text	Provides information on the status of one or more components of the OPMPEs. Refer to Table Events at the end of this log report.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information**Events**

Events	State
BCCDVR	State OK from SysB
PESALRM	State OK from SysB
BCCDVR	State OK from ManB
PESALRM	State OK from ManB
BCCDVR	State OK from PMB
PESALRM	State OK from PMB
BCC Unit 0	OK from Warning
BCC Unit 1	OK from Warning

PES113**Explanation**

The following is the log report format for PES113:

Format

The log report format for PES113 is as follows:

```
*PES113 mmmdd hh:mm:ss ssdd INFO PES
  OMPES nnn pmtxt
  infotxt
```

Example

An example of log report PES113 follows:

```
*PES113 SEP25 01:41:23 5413 INFO PES
  OMPES 33 REM1 03 0 RMM 3
  BCC fuse 0      Fail      from 0k
  ECU State      Fail      from 0k
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO PES	Constant	Contains information on the power and environment system
OMPES	0-198	OMPES key in data table OPMINV
pmtxt	Alphanumeric	Identifies the remote line concentrating module (RLCM) and associated trunk module (TM). See data table OPMINV for values.
pmtxt	Alphanumeric	RLCM appears at site, for example REM1, frame (0-99) and unit (always 0).
pmtxt	Alphanumeric	Indicates the trunk module type is remote maintenance module (RMM); TM number is between 0 and 2047.
infotxt	Symbolic text	Gives the status of one or more OMPES components. Refer to table of events below.

PES113 (end)

Action

Refer to the table of events below.

Associated OM registers

There are no associated OM registers.

Table of events

Events	State	Action
BCC Fuse 0	Fail from OK	Battery charger controller 0 fuse fails. Replace fuse.
BCC Fuse 1	Fail from OK	Battery charger controller 1 fuse fails. Replace fuse.
ECU State	Fail from OK	Environmental control unit fan fails; investigate and correct.
BCC Unit 0	Warning from OK	Battery charger controller unit 0 strings does not connect to load bus.
BCC Unit 1	Warning from OK	Battery charger controller unit 1 strings does not connect to the load bus.
Note: Automatic battery rotation/charging normally keeps one battery string on the charge bus. Action is required if more than one battery string is not on the load bus. Enter the OPMPES level of the MAP display and place the strings on the load bus.		

PES114

Explanation

The power and environment system (PES) subsystem generates report PES114. The subsystem generates PES114 when the state of the outside plant module power and environment system (OPMPES) changes to AMBER. When the system generates PES114, it also generates a PES101, PES102, or PES113 log report.

Format

The log report format for PES114 is as follows:

```
*PES114 mmmdd hh:mm:ss ssdd INFO PES nnn Condition
:infotxt
```

Example

An example of log report PES114 follows:

```
*PES114 SEP25 01:41:23 5413 INFO PES 33 Condition:AMBER
from GREEN
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO PES	Integers	Indicates that information on OPMPES follows.
Condition	AMBER from GREEN	Indicates a potentially serious problem. The system generates this connection after a command to BSY a battery charger controller driver card (BCCDVR) or PESALRM succeeds.
Condition	AMBER from OFFL	This condition occurs when the user first enters data in OPMPES and OPMPES is manually busy. There is no action required.

Action

Refer to the PES101, PES102, or PES113 log reports. Take action as directed.

Associated OM registers

There are no associated registers.

PES116

Explanation

Log report PES116 shows the measured voltage of the SRU battery string. This report also provides an error message there is no measurement. Only the voltage for STR 0 or STR 1 can be measured. Ignore the results that appear for other strings.

Format

The log report format for PES116 is as follows:

```
PES116 mmmdd hh:mm:ss ssdd INFO PES
OPMPES nnn site nn n RMM n
SYSTEM VOLTAGE MEASUREMENT
LOAD BUS = -vv.vV
BCC 0 = -vv.vV BCC 1 = -vv.vV
STRG 0 = -vv.vV STRG 4 = -vv.vV
STRG 1 = -vv.vV STRG 5 = -vv.vV
STRG 2 = -vv.vV STRG 6 = -vv.vV
STRG 3 = -vv.vV STRG 7 = -vv.vV
```

Example

An example of log report PES116 with an error message follows:

```
PES116 SEP05 18:14:33 4827 INFO PES
OPMPES 12 F007 0 0 RMM 11
SYSTEM VOLTAGE MEASUREMENT
No MTE available
```

An example of log report PES116 with a measured voltage follows:

```
PES116 SEP05 18:14:33 4827 INFO PES
OPMPES 40 REM1 40 0 RMM 40
SYSTEM VOLTAGE MEASUREMENT
LOAD BUS = -52.5V
BCC 0 = -58.1V BCC 1 = .0V
STRG 0 = -52.5V STRG 4 = .0V
STRG 1 = -52.5V STRG 5 = .0V
STRG 2 = -.0V STRG 6 = .0V
STRG 3 = -.0V STRG 7 = .0V
```


PES116 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
The first line is defined as for other PES logs such as PES113		
OPMPES nnn	0-198	OPMPES key in Table OPMINV
site nn n	integers	Provides RLCM identification. Refer to Table SITE and LCMINV for values.
RMM n	integers	RMM number. Refer to Table OPMINV for values.
Load Bus = -vv.vV	voltage	Load bus measured voltage.
STRG n = -vv.vV	voltage	Measured voltage of battery string n
Error_Condition	No MTE available	An LTU or MTU was not available.
	MTE reset fail	An error occurs while MTE is being opened to take the measurements.
	MTE measurement fail	After connection of MTE, an error occurs during the measurement of voltage.
	MTE tests need OPM line 0 equipped	Line 0 of the OPM must be equipped in Table LNINV with 6X17 card to locate test equipment.
	Aborted: higher priority request	A higher order request preempts operation. Examples of higher priority requests are: AC or rectifier failure, disable the audit, RTS BCCDVR from PMB, and MANB BCCDVR.
	BCCDVR card failure	Battery Charger Controller Driver Card (BCCDVR) card fails.
	Fail to get pathend	Software messaging error.
	Invalid string state. String must be open circuit.	A manual action causes this condition. Battery string must be in a different state.
	Fail to get route to node	Software messaging error.

PES116 (continued)

(Sheet 2 of 2)

Field	Value	Description
	Invalid message received	A message from the RMM has a message type not for use with OPMPES data.
	Invalid TID	Invalid Terminal Identification (TID) was received.
	Message wait failed	Time-out occurs to wait for reply from mtc.
	MTCBASE failed	Software error.
	MTCBASE wait time-out	Time-out occurs to wait for a task reply.
	No reply received from RMM for OPMPES	The RMM did not reply to request for OPMPES data.
	PM is manual busy	The state of OPMPES is not available because the RMM is MANB.
	PM is system busy	The state of OPMPES is not known because the RMM is SYSB.
	PM not in service	The state of OPMPES is not known because the RMM is down (probably CBSY).
	PM is offline	The state of the OPMPES is not known because the RMM is offline.
	Task aborted from MTCBASE	Software aborts a request because of internal problems.
	Overall condition too unsafe to permit requested action	An AC or rectifier fails.
	BCCDVR must be on line	BCCDVR not InSv during attempt to open circuit battery pair before measurement.
	No battery pair on LDB	To test the Load Bus (LDB), at least one battery pair must connect to the LDB.
	MTE connection fail	Error connection of LTU/MTU, to take the measurements.

PES116 (continued)**Action**

The following table describes the correct action to take for each error condition.

Actions (Sheet 1 of 2)

Error Condition	Action
No MTE available	Repeat request. If error persists, check entry in OPMINV, RMMINV, MTAHORIZ, TRKMEM, TRKGRP, and MTAMDRVE.
MTE reset fail	Repeat request. If error persists, check RMM. If MTU is in use, check the load.
MTE measurement fail	Repeat request. If error persists, check RMM. If MTE is an MTU, check the load in the MTU.
MTE tests need OPM line 0 equipped	Enter line 0 in Table LNINV and repeat request.
Aborted: higher priority request	Repeat the task when conditions allow.
BCCDVR card failure	Replace card.
Fail to get pathend	Check RMM, RLCM, LTC.
Invalid string state. String must be open circuit.	Put the battery string into a different state. Enter the original command again.
Fail to get route to node	Check RMM, RLCM, LTC.
Invalid message received	Test RMM.
Invalid TID	If possible, repeat the original cause of the failure. If the error occurs again, contact the next level of support.
Message wait failed	Repeat the task. If this error condition occurs often, the time-out value for the task can be low. Contact TAS.
MTCBASE failed	If this error condition occurs often, contact the next level of support.
MTCBASE wait time-out	If this error condition occurs often, contact the next level of support.
No reply received from RMM for OPMPES	Check RLCM, RMM, LTC links. If you cannot find a problem and the RMM is InSv, then warmswact LTC/LGC.

PES116 (end)

Actions (Sheet 2 of 2)

Error Condition	Action
PM is manual busy	RTS RMM to restore control and monitoring of OPMPEs.
PM is system busy	Check RLCM, RMM, LTC, and all important links. Return RMM to service and restore OPMPEs monitoring and control.
PM not in service	Check RLCM, RMM, LTC, and all important links. Return RMM to service and restore OPMPEs monitoring and control.
PM is offline	Make sure RLCM and RMM have correct software load. If necessary, manbsy and return RMM to service to restore OPMPEs monitoring and control.
Task aborted from MTCBASE	There is no action required.
Overall condition too unsafe to permit requested action	There is no action required.
BCCDVR must be on line	Check BCCDVR, RMM, RLCM, LTC, and all links. Restore BCCDVR to service to take measurements.
No battery pair on LDB	Return a pair to the LDB and repeat the request.
MTE connection fail	Repeat request. If error persists, check RMM.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PES117**Explanation**

The log report PES117 indicates the SRU battery string that has low voltage. This report indicates the battery pair failed for the discharge, open circuit, or post charge test. A failed battery pair returns to the Load Bus.

Format

The log report format for PES117 is as follows:

```
PES117 mmmdd hh:mm:ss ssdd INFO PES
OMPES nnn site nn n RMM nn
BATT PAIR n Fail from OK
Low battery string voltage
STR n xxxxxxxxxxxx = -vv.vV
STR m xxxxxxxxxxxx = -vv.vV
```

Example

An example of log report PES117 follows. The example does not match the format. For the SRU, a measured voltage applies only to STR 0 or STR 1. Ignore results that appear for any other string.

```
PES117 SEP05 18:14:33 4827 INFO PES
OMPES 24 C015 0 0 RMM 24
BATT PAIR 1 Fail From OK
Low battery string voltage
STR 1 DISCHARGE TEST VOLTAGE = -48.7V
STR -32092 VOLTAGE=
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
The first two lines are defined as for the other PES logs such as PES113.		
BATT PAIR n Fail from OK	0-3	Indicates pair n fails.

PES117 (end)

(Sheet 2 of 2)

Field	Value	Description
STR n	0-1	Indicates the string of the measured voltage that appears.
x.....x	test name	OPEN-CIRCUIT test or DISCHARGE test or POST CHARGE test.

Action

Replace battery string, check voltage, and recharge if necessary.

Associated OM registers

There are no associated registers.

Additional information

There is no additional information.

PES200**Explanation**

The log report PES200 indicates an event has occurred on one or more alarms for the remote line drawer (RLD) Power and Environmental System (PES). This report also indicates a battery test failure.

Format

The format for log report PES200 follows:

```
<severity>PES200 mmmdd hh:mm:ss ssdd INFO PES
RLDSITE <HUB Name>
<RLD site name> RLD <RLD number>
      <alarm name>      <new_state>  <from <old_state>
```

Example

An example of log report PES200 follows:

```
CMP2A ***PES200 FEB04 01:41:23 1604 INFO PES
RLDPES  STAR  REM1 02 0 02
SITE1  RLD5
DC fail      Ok      from Fail
PWRTYP      Ok      from Fail
AC fail      Ok      from Fail
DOOR        Closed  from Open
```

Field descriptions

The following table explains each of the fields in the log report.

(Sheet 1 of 2)

Field	Value	Description
The first two lines are defined as for other PES logs, such as PES113.		
HUB name	Site name, frame, or bay	The Star Hub where the RLD belongs.
RLD site name	Any site name	The name of the site where the RLD is located.
RLD number	0-999	The RLD number in the Star Hub.

PES200 (end)

(Sheet 2 of 2)

Field	Value	Description
Alarm name	Cabinet alarm name	The name of the specific alarm that was raised in the cabinet.
New state, old state	OK, fail, open, close	The new state and old state of the alarm. Most alarms state is OK or fail. In the case of the door alarm, the states are open and close.

Action

This log is for information. In most cases the cabinet environmental system is operated to balance the conditions.

Associated OM registers

There are no associated registers.

Additional information

There is no additional information.

PES201**Explanation**

The log report PES201 indicates the audit of the remote line drawer (RLD) Power and Environmental System (PES) has found a mismatch between the software state and the hardware state.

Format

The format for log report PES201 follows:

```
<severity>PES201 mmmdd hh:mm:ss ssdd INFO PES
RLDSITE <HUB Name>
<RLD site name> RLD <RLD number>
AUDIT: Mismatch in reply data
      <alarm name> <new_state> from <old_state>
```

Example

An example of log report PES201 follows:

```
CPM2A *** PES201 FEB04 09:12:37 1604 INFO PES
RLDPES STAR REM1 02 0 02
SITE1 RLD 5
AUDIT: Mismatch in reply data
DC fail      Ok      from Fail
PWRTYP              Ok      from Fail
AC fail      Ok      from Fail
DOOR         Closed   from Open
```

Field descriptions

The following table explains each of the fields in the log report.

(Sheet 1 of 2)

Field	Value	Description
The first two lines are defined as for other PES logs, such as PES113.		
HUB name	Site name, frame, bay	The Star Hub where the RLD belongs.
RLD site name	Any site name	The name of the site where the RLD is located.

PES201 (end)

(Sheet 2 of 2)

Field	Value	Description
RLD number	0-999	The RLD number in the Star Hub.
Alarm name	Cabinet alarm name	The name of the specific alarm that was raised in the cabinet.
New state, old state	OK, fail, open, close	The new state and old state of the alarm. Most alarms state is OK or fail. In the case of the door alarm, the states are open and close.

Action

This log is for information. In most cases the cabinet environmental system is operated to balance the conditions.

Associated OM registers

There are no associated registers.

Additional information

There is no additional information.

PES202

Explanation

The log report PES202 indicates the overall condition of the remote line drawer (RLD) Power and Environmental System (PES) has changed.

Format

The format for log report PES202 follows:

```
<severity>FP503 mmmdd hh:mm:ss ssdd INFO PES
RLDPES <HUB Name>
  <RLD site name> RLD <RLD number>
    Condition <new condition> from <old condition>
```

Example

An example of log report PES202 follows:

```
CPM2A PES202 FEB04 09:12:37 1705 INFO PES
RLDPES STAR REM1 02 0 02
SITE1 RLD 5
Condition: GREEN from RED
```

Field descriptions

The following table explains each of the fields in the log report.

Field	Value	Description
The first two lines are defined as for other PES logs, such as PES113.		
HUB name	Site name, frame, bay	The Star Hub where the RLD belongs.
RLD site name	Any site name	The name of the site where the RLD is located.
RLD number	0-999	The RLD number in the Star Hub.
New condition, old condition	RED, GREEN	The new and old condition of the whole RLD cabinet Power and Environmental System.

PES202 (end)

Action

This log is for information. In most cases the RLD cabinet Power and Environmental System is operated to balance the conditions.

Associated OM registers

There are no associated registers.

Additional information

There is no additional information.

PM100

Explanation

The Peripheral Module (PM) subsystem generates log report PM100 when a peripheral module fails a diagnostic (DIAG) test. The subsystem generates this report when an out-of-service test fails on an Operator Services Node Maintained (OSNM).

Format

The log report format for PM100 is as follows:

```
PM100 mmmdd hh:mm:ss ssdd FAIL DIAG pmid
      REASON: reastxt
      CKSM: n , TONE: hhhhhhhh, TEST: 00hh
```

Example

An example of log report PM100 follows:

```
PM100 APR01 12:00:00 2112 FAIL DIAG TM8 1
      REASON: TONE TEST FAILED
      CKSM: 0, TONE: 00000400, TEST: 0010
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL DIAG	Symbolic text	Indicates diagnostic test fails.
pmid	Symbolic text	Identifies the affected PM.
REASON	Symbolic text	Identifies reason the system generates the log report.
CKSM	0 or 1	Indicates checksum value and result. 0 indicates correct checksum test complete. 1 means checksum is not correct. The checksum test identifies table differences between the central controller and a PM.

PM100 (continued)

(Sheet 2 of 2)

Field	Value	Description
TONE	0000-FFFF	Provides 8 hex digits that correspond to 32 bits which represent tones on the read only memory (ROM). Value is 00000000 if tone test passes.
TEST	0000-00FF	Provides 2 hex digits that correspond to 8 bits which represent the test. Bits are 0,1,2,3 for network interface test. Each bit corresponds to a link (only bit 0 applies to a trunk module (TM)). Bits are 4,5,6 for ROM tone test. Each bit corresponds to a ROM chip on the tone card (only bit 5 applies to a TM). Bit number 7 is a coder-decoder test that applies to the TM.

Action

Repeat diagnostic test. A circuit pack list appears on the terminal if a failure occurs.

If the test passes, but the PM does not return to service (RTS), contact the next level of support immediately.

If the test fails, change the first circuit pack on the list and run the test again. If the test fails again, change the second circuit pack on the list and run the test again. Continue until the test passes or there are no more circuit packs on the list. For additional information, refer to *Log Report Reference Manual*.

If the test passes, but the PM does not RTS, contact the next level maintenance.

Contact the next level of maintenance if all of the following events occur:

- there are no more circuit packs on the list
- the test does not pass
- the PM does not RTS

Operator Services Node Maintained actions

Repeat diagnostic test. If the test passes, but the PM does not RTS, contact the next level of maintenance.

If the PM generates the log with "IP ping failed" then:

- The DMS switch cannot communicate with the service node. Make sure that all DMS EIUs are in-service. Make sure the DMS LAN-BAY is

operational. Make sure that all cabling is in good condition. If these components are in-service, check for service node faults.

If the PM generates the log "Fail message received," then:

- The DMS switch can communicate with the service node. The problem is local to the service node. Refer to service node documentation for additional diagnostics to help correct the problem.
 - DIAG Fails
 - The DMS cannot process the TST or RTS command. Check for traps/Swerrs. Contact the next level of maintenance.
 - Node does not respond
 - The DMS can send the message, but times-out before the DMS receives a response. Execute the test. Use the TST Ping to check for connectivity. If the Ping passes, refer to service node documentation to run additional diagnostics.

Associated OM registers

Operator Services Node Maintained OM information

The PM can generate a log when an out-of-service test failure occurs. Register TSTFAIL increases each time a test failure occurs on that node. The OM group EXNDINV contains register TSTFAIL.

PM101

Explanation

The Peripheral Module (PM) subsystem generates log report PM101. The system generates this report when a peripheral module fails a checksum test (CHKSUM-TST). The PM fails a CHKSUM-TST because a checksum is not correct or not available. The checksum test identifies table differences between the central controller (CC) and PMs.

Format

The log report format for PM101 is as follows:

```
PM101 mmmdd hh:mm:ss ssdd FAIL CHKSUM-TST pmid  
VALUE: nnnn, REASON: reastxt
```

Example

An example of log report PM101 follows:

```
PM101 APR01 12:00:00 2112 FAIL CHKSUM-TST DCM 0  
VALUE: 6, REASON: FAILED TO GET CHKSUM
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL CHKSUM-TST	Symbolic text	Indicates checksum test fails.
pmid	Symbolic text	Identifies the affected PM.
VALUE	0 to 9999	Provides checksum value.
REASON	Symbolic text	Identifies reason the system generates the log.

Action

Repeat checksum test. A circuit pack list appears on the MAP terminal if a failure occurs.

If the test fails, change the first circuit pack on list. Run the test again. If the test fails again, change second circuit pack on list and run the test again. Continue until test passes or until there are no more circuit packs on the list.

PM101 (end)

Contact the next level of maintenance if all of the following events occur:

- there are no more circuit packs on the list
- the test does not pass
- the PM does not return to service (RTS)

If the test passes, but the PM does not return to service, contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

PM102

Explanation

The peripheral module (PM) subsystem generates log report PM102 when the state of a PM changes to system busy (SysB). The following are example situations that generate this log:

- An Operator Services Node Maintained (OSNM) changes state when a node audit detects a fault.
- An Ethernet TPC connection is lost. The log indicates the date and time of the transmission failure and the name and id number of the node on the lost connection. Audits will attempt to re-establish the connection.

Format

The maintenance arbitrator (MtcArb) state is associated with the PM log. The MtcArb state can be functional or disabled. The MtcArb state is associated with the PM log when MtcArb is present on the XPM load. The log format is Format 2 when a load that contains MtcArb is present on both XPM units. The log format is Format 3 when a load that contains MtcArb is present in the units.

The fields and entries associated with maintenance arbitrator are optional (apply only to XPMs). When a load containing MtcArb is present in both XPM units, the MtcArb state is indicated for each unit as either functional or disabled. In XPM81, when a load containing MtcArb is present in only one of the units, the MtcArb state is indicated for that unit only. The state of the of the second unit is not indicated. Beginning in TL09, MtcArb is always functional and the MtcArb state is not indicated in the logs.

The log report formats for PM102 are as follows:

Format 1

```
alm PM102 mmmdd hh:mm:ss ssdd SYSB pmid
Node : SysB <sq> From <previous PM state>
<optional text>
Unit0 : <unit state> <sq> <reason text> <previous unit state>
Unit1 : <unit state> <sq> <reason text> <previous unit state>
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>
```

Format 2

PM102 (continued)

alm PM102 mmmdd hh:mm:ss ssdd SYSB pmid
SysB <sq> From <previous PM state> <sq>
REASON: Processing data update request
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>

Format 3

alm PM102 mmmdd hh:mm:ss ssdd SYSB pmid
FROM: <previous PM state> <comment text>
REASON: <reason text>
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>

Format 4

alm PM102 mmmdd hh:mm:ss ssdd SYSB pmid
FROM: <previous PM state><comment text> REASON: <reason text>
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>

Format 5

alm PM102 mmmdd hh:mm:ss ssdd SYSB pmid
Node : SysB <reason text> From <previous PM state>
<log reason>
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>

Format 6

alm PM102 mmmdd hh:mm:ss ssdd SYSB pmid
SysB <sq> From <previous PM state>
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>
<optional text>

Format 7

PM102 (continued)

```
alm PM102 mmmdd hh:mm:ss ssdd SYSB pmid
SysB <sq> From <previous PM state>
Unit<unit_no>: MTCARB is <state>
<optional text>
```

Format 8

```
alm PM102 mmmdd hh:mm:ss ssdd SYSB pmttype pmid
<text>
```

Example

Examples of log report PM102 follow:

Example 1

```
***PM102 MAY31 08:22:32 2112 SYSB LGC HOST 02 0
Node   : SysB from CBsy
Unit0  : SysB (CSLink RTS)
Unit1  : SysB (CSLink RTS) From CBsy
Unit0: MTCARB is functional, Unit1: MTCARB is disabled
```

Example 2

```
PM102 JAN11 16:43:22 2201 SYSB LCOM 101
SysB From SysB (NA)
REASON: Processing data update request
```

Example 3

```
PM102 MAR10 12:23:34 4501 SYSB LDT PSAP 4 0
FROM: InSv
REASON: CS Link
```

Example 4

```
** PM102 FEB14 08:00:01 1988 SYSB TPC 60
FROM: InSv REASON: UNSOLICITED MSG THR EXCEEDED
```

PM102 (continued)**Example 5**

PM102 APR25 08:19:42 3200 SYSB IPE HOST 00 3
 Node: SysB (WAI recvd) From CBsy

Example 6

PM102 MAR13 03:20:15 3791 SYSB DTC 3
 SysB From InSv
 Unit0: MTCARB is functional, Unit1: MTCARB is disabled

Example 7

PM102 MAR13 03:20:15 3791 SYSB DTC 3
 SysB From InSv
 Unit0: MTCARB is functional

Example 8

PM102 APR06 14:25:52 2600 SYSB OSNM 27
 SysB From InSv

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 4)

Field	Value	Description
alm	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates that an alarm is not present.
	mmdd	Month and day that the system generates log report, for example, OCT25.
	hh:mm:ss	Time that the system generates the log report, in hours, minutes, and seconds.

PM102 (continued)

(Sheet 2 of 4)

Field	Value	Description
	ssdd	The sequence number for the log report.
pmtype	alphanumeric text	Identifies the affected PM type.
pmid	alphanumeric text	Identifies the affected PM number.
SYSB	constant	Indicates the node (PM) is system busy.
Node : SysB	constant	Indicates the node (PM) is system busy.
SysB	constant	Indicates the node (PM) is system busy.
sq		Optional field. Provides the status qualifier. This field appears when the PM is one of the following: • a link interface module (LIM) • application processing unit (APU) • application processing unit with UNIX (APUX) • data communication processor (DCP) • LIU datacom (LCOM) • external node (EXND) • service peripheral module (SPM) • service processor with UNIX (SPX) • voice processing unit (VPU)
	NA	Not accessible (NA) indicates that all links to the PM unit are logically closed or physically out of service. Messaging between the PM and the CM is not possible.
	RU	Resources unavailable (RU) means external resources, which are necessary for the PM unit to be in service, are out of service.
REASON: Processing data update request.	constant	
previous PM state	InSv, ISTb, Offl, ManB, or Cbsy	Indicates the previous state of the PM.

PM102 (continued)

(Sheet 3 of 4)

Field	Value	Description
optional text	ISTb cleared <character string>	Optional field. Indicates the clearance of a PM ISTb condition. A clearance occurs as a result of a state change.
Unit n	n = 0 or 1	The PM unit number.
unit state	InSv, ISTb, Cbsy, SysB, Offl, or ManB	The current state of the unit.
reason text	text	Optional field. Indicates the reason for the state change. Some of the entries in this field are: • INIT or CS Link: Indicates that a central control (CC) restart or the central-side (C-side) link of the line appearance on a digital trunk (LDT) is out-of-service. • LINK AUDIT: Indicates that a recent audit detects a C-side busy (Cbsy) TOPS position controller (TPC), which causes the TPC to become SysB. • RTS FAILED: Indicates that an attempt to return a Cbsy TPC to service fails because of the data channel returns. • UNSOLICITED MSG THR EXCEEDED: Indicates that messages the TPC does not request exceed the threshold. • FAULT OCCURRED ON CSC/TMC CHANNELS: Indicates that a fault occurs on the cell site controller (CSC) or the timeslot management channel (TMC). • NODE AUDIT FAILED: Indicates that the node audit, associated with an OSNM, detects a fault.
previous unit state	InSv, ISTb, Cbsy, SysB, Offl, or ManB	An optional field that indicates the previous state of the PM unit.

PM102 (continued)

(Sheet 4 of 4)

Field	Value	Description
Unit 0: MTCARB is	constant	Indicates that the current state of the maintenance arbitrator in XMS-based peripheral module (XPM) unit 0 follows. An optional field that applies only to digital trunk controllers (DTC), line trunk controllers (LTC) and line group controllers (LGC). If the XPM maintenance arbitrator is not loaded in the unit, the field is blank. Beginning in TL09, this field is not present.
Unit 1: MTCARB is	constant	Indicates that the current state of the maintenance arbitrator in XPM unit 0 follows. An optional field that applies to DTCs, LTCs, and LGCs. If the unit does not contain the XPM maintenance arbitrator, the field is blank. Beginning in TL09, this field is not present.
state	functional or disabled	Indicates the state of MtcArb in the XPM unit when the log is formatted for display. This state may differ from the state of the log at the time that the system generates the log. The possibility of a difference increases as the time between log generation and log formatting increases. Beginning in TL09, this field is not present.
comment text	text	An optional field. If the affected PM is an LDT, this field provides additional information on the previous state.
log reason	text	The reason the system generates the log report.

Action

Manually test the PM or PM unit. Identify the fault(s) responsible for the system busy state, correct the faults, and return the PM to service.

- If the test passes but the PM does not return to service (RTS), contact the next level of maintenance. Save the reports that the system produces during the 5 min period before the system generates the PM102 log report.
- If the test fails and the system generates a card list, follow correct card replacement procedure. Change the first card on the list. Repeat the test. If the test fails again, change the next card on the list, and repeat the test.

PM102 (continued)

Continue until the test passes or until there are no more cards on the card list.

- There are no more cards on the card list and the test fails. The PM does not return to service. Save the reports that the system produces during the 5 min period before the system generates the PM102 log report. Contact the next level of maintenance.

If DS-1 message links or the cell site controller (CSC) channel are busy, perform the following steps:

- Verify that associated facilities, like group intercom (GIC), DS-1s, and D-channel handlers (DCH), are in-service.
- Attempt to RTS the DS-1 message links at the GIC PM level.
- Attempt to RTS the channels at the GIC; ISG level.
- Issue the CONT command on the channel at the GIC; ISG level.
- If the problem persists, contact the next level of support.

If an external node is busy, refer to log PM181. For additional information on potential causes of the problem, refer to log PM181.

Operator Services Node Maintained problems

In addition to the general actions that the user must perform, the user also must perform the following actions:

- Determine the reason, repair, and return PM to service. A circuit pack list appears on the terminal when a manual test fails.
- Make sure that all DMS EIUs are in-service, the DMS LAN-BAY is operational, and all cabling is in good condition. If these components are in-service, check for service node faults.

Note: For OSNM post analysis, every in-service session pool entered on the SYSB service node has an OAIN107 CBSY log. Manually busy and test the service node to determine the reason for the change to out-of-service state.

Ethernet connection is lost

Investigate data connectivity between the DMS switch and the node.

Associated OM registers

Registers SYSBUSE and INSSYSB associate with PMs EXND and SPX.

PM102 (end)

Operator Services Node Maintained OM information

For an OSNM log, OM group EXNDINV, register INSSYSB increases for that service node. A use register SYSBUSE records the amount of time the service node stays SYSB.

Ethernet connection is lost

There is no OM associated with this log.

PM103

Explanation

The peripheral module (PM) subsystem generates log report PM103 when a PM node becomes offline (OffL). This basic log report uses Format 1.

The PM log contains the maintenance arbitrator (MtcArb) state (functional or disabled). The PM log contains the MtcArb when the MtcArb is present in the XPM load. The log format is Format 2 when a load that contains MtcArb is present in both XPM units. The log format is Format 3 when a load that contains MtcArb is present in one of the units.

Format

The fields and entries associated with maintenance arbitrator are optional (apply only to XPMs). When a load containing MtcArb is present in both XPM units, the MtcArb state is indicated for each unit as either functional or disabled. In XPM81, when a load containing MtcArb is present in only one of the units, the MtcArb state is indicated for that unit only. The state of the of the second unit is not indicated. Beginning in TL09, MtcArb is always functional and the MtcArb state is not indicated in the logs.

The log report formats for PM103 are as follows:

Format 1

```
PM103 mmmdd hh:mm:ss ssdd OFFL pmid
      OffL from statxt (sq)
      <info_text>
```

Format 2

```
PM103 mmmdd hh:mm:ss ssdd OFFL pmid
      OffL from statxt (sq)
      <info_text>
      Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM103 mmmdd hh:mm:ss ssdd OFFL pmid
      OffL from statxt (sq)
      <info_text>
      Unit<unit_no>: MtcArb is <state>
```

PM103 (continued)

Examples

Examples of log report PM103 follow:

Example 1

```
PM103 JAN20 23:11:10 1200 OFFL EIU 0
      OffL from ManB
```

Example 2

```
PM103 JAN20 23:11:10 1200 OFFL DTC 0
      OffL from ManB
      Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM103 JAN20 23:11:10 1200 OFFL DTC 0
      OffL from ManB
      Unit0: MtcArb is disabled
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm is not present.
pmid	symbolic text	Identifies affected PM.
statxt	Uneq or ManB	Defines the state before the change to OffL.
sq	Blank or (NA)	(NA) indicates that communication is not available.
<info_text>	text	Indicates the reason the PM changes to OffL state.

(Sheet 2 of 2)

Field	Value	Description
Unit 0: MTCARB is	constant	Indicates the current state of the maintenance arbitrator in XPM unit 0 follows. This is an optional field that applies only to digital trunk controllers (DTC), line trunk controllers (LTC) and line group controllers (LGC). If the XPM maintenance arbitrator is not loaded in the unit, the field is blank. Beginning in TL09, this field is not present.
Unit 1: MTCARB is	constant	Indicates the current state of the maintenance arbitrator in XPM unit 1 follows. This is an optional field that applies only to DTCs, LTCs, and LGCs. If the XPM maintenance arbitrator is not loaded in the unit, the field is blank. Beginning in TL09, this field is not present.
state	functional or disabled	Indicates the state of MtcArb in the XPM unit when the log is formatted for display. This state can differ from the state of the log when the system generates the log. The possibility of a difference increases as the period between log generation and log formatting increases.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PM104

Explanation

The Peripheral Module (PM) subsystem generates log report PM104 when a PM changes from offline (OffL) state to unequipped (UNEQ) state.

Format

The log report format for PM104 is as follows:

```
PM104 mmmdd hh:mm:ss ssdd UNEQ pmid  
      Uneq from OffL
```

Example

An example of log report PM104 follows:

```
PM104 JAN20 23:11:10 1200 UNEQ EIU 0  
      Uneq from OffL
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
pmid	symbolic text	Identifies the affected PM.
statxt	OffL	Defines the current state of the unit.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PM105

Explanation

The peripheral module (PM) subsystem generates log report PM105 when a PM changes to manual busy (ManB) state. The change of state appears in Formats 1 and 2. The PM generates PM105 when the Subscriber Carrier Module-100S Remote (SMS-R) is set to busy at the MAP display while in the offline (Offl) state.

The PM subsystem generates Format 2 when the Operator Services Node Maintained (OSNM) changes state to ManB. The OSNM changes state to ManB as a result of a manual action.

The PM subsystem generates Format 3 when a line on a digital trunk (LDT) is set to ManB.

The PM subsystem generates Format 4 when a PM changes state to ManB. Log report PM105 confirms the change of the PM state to ManB.

The PM subsystem generates Format 5 when a load that contains maintenance arbitrator (MtcArb) is present in only one of the units.

Format

The fields and entries associated with maintenance arbitrator are optional (apply only to XPMs). When a load containing MtcArb is present in both XPM units, the MtcArb state is indicated for each unit as either functional or disabled. In XPM81, when a load containing MtcArb is present in only one of the units, the MtcArb state is indicated for that unit only. The state of the of the second unit is not indicated. Beginning in TL09, MtcArb is always functional and the MtcArb state is not indicated in the logs.

The log report format for PM105 are as follows:

Format 1

```
PM105 mmmdd hh:mm:ss ssdd MANB pmid
Node   :   ManB From <previous PM state>
        <optional text>
Unit0   : <sq> <unit state> <previous unit state> <reason text>
Unit1   : <sq> <unit state> <previous unit state> <reason text>
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>
```

Format 2

PM105 (continued)

```
PM105 mmmdd hh:mm:ss ssdd MANB pmid
MANB <sq> from <previous PM state> <sq>
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>
```

Format 3

```
PM105 mmmdd hh:mm:ss ssdd MANB pmid
From: <previous PM state>
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>
```

Format 4

```
PM105 mmmdd hh:mm:ss ssdd MANB pmid
From <previous PM state>
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>
```

Format 5

```
PM105 mmmdd hh:mm:ss ssdd MANB pmid
From <previous PM state>
Unit<unit_no>: MTCARB is <state>
```

Example

Examples of log report PM105 follow:

Example 1

```
PM105 APR01 12:00:00 2112 MANB HOST LGC 7 0
Node   :      ManB From ISTb
ISTb Cleared (Unit OOS)
Unit0   :      ManB
Unit1   :      ManB From InSv
Unit0: MTCARB is functional, Unit1: MTCARB is disabled
```

Example 2

```
PM105 FEB09 15:31:54 0697 MANB DCP 201
ManB From OffL
```

Example 3

PM105 (continued)

```
PM105 FEB09 15:31:54 0697 MANB LDT PSAP 01 0
FROM: INSV
```

Example 4

```
PM105 JAN01 08:32:51 1181 MANB DTC HOST 00 3
Node :ManB From Offl
Unit0: MTCARB is functional, Unit1: MTCARB is disabled
```

Example 5

```
PM105 JAN01 08:32:51 1181 MANB DTC HOST 00 3
Node :ManB From Offl
Unit0: MTCARB is functional
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm is not present.
	mmdd	Month and day that the system generates the log report, for example, OCT25.
	hh:mm:ss	Time that the system generates the log report, in hours, minutes, and seconds.
	ssdd	The sequence number of the log report.
MANB	constant	Indicates that the current state of the PM is ManB.
pmid	alphanumeric text	Identifies the affected PM.

PM105 (continued)

(Sheet 2 of 3)

Field	Value	Description
	IPE, SPX, APUX ff s	Identifies an IPE, SPX, or APUX PM type. The frame and shelf that the PM occupies.
FROM:	constant	Indicates that the previous PM state follows.
previous PM state	InSv, ISTb, SBsy, Offl, Uneq, or Cbsy	The previous state of the PM.
optional text	ISTb cleared <character string>	Indicates the clearance of a PM ISTb condition a clearance occurs as a result of a state change. If not in use, this field is blank.
Unit0:	constant	Indicates information on unit 0 follows.
Unit1:	constant	Indicates information on unit 1 follows.
sq	(RU) or (NA), blank for an APUX.	Provides status qualifier: resources unavailable (RU), or not accessible (NA). The RU status indicates that external resources of an in-service PM unit are out of service. The NA status indicates that all links to the PM unit are logically closed or physically out of service. Messaging between the PM and the CM is not possible.
unit state	ManB, InSv, ISTb, Offl, Uneq, Cbsy, or SysB	The current state of the PM unit.
previous unit state	ManB, InSv, ISTb, Cbsy, Offl, SysB, Uneq, or blank	Indicates the previous state of a PM unit. Indicates the reason for that state. If no state change occurs on a PM when the system generates a log, this field is blank.
reason text	text	Indicates the reason for the state change. If not in use, the field is blank.
Unit 0: MTCARB is	constant	This field applies to digital trunk controllers (DTC), line trunk controllers (LTC) and line group controllers (LGC). If the XPM maintenance arbitrator is not loaded in the unit, the field is blank. If the field is in use, the field indicates that the current state of the maintenance arbitrator in XPM unit 0 follows. Beginning in TL09, this field is not present.

(Sheet 3 of 3)

Field	Value	Description
Unit 1: MTCARB is	constant	This field applies to DTCs, LTCs, and LGCs. If the XPM maintenance arbitrator is not loaded in the unit, the field is blank. If the field is in use, the field indicates that the current state of the maintenance arbitrator in XPM unit 1 follows. Beginning in TL09, this field is not present.
state	functional or disabled	Indicates the state of MtcArb in the XPM unit when the log is formatted for display. This state can differ from the state of the log when the system generates the log. The possibility of a conflict increases as the period between log generation and log formatting increases. Beginning in TL09, this field is not present.

Action

There is no action required.

Associated OM registers**Operator Services Node Maintained OM information**

For Format 2, INSV, ISTB to MANB transitions, OM group EXNDINV, register INSMANB increases. The OM register MANBUSE records the amount of time that the service node is in the MANB state.

PM106

Explanation

The peripheral module (PM) subsystem generates log report PM106 in Formats 1 and 4. The subsystem generates this report when a PM returns to service (RTS). The subsystem also generates this report when a PM changes from system busy (SysB) to in-service (InSv) state. The log indicates the previous state of each PM unit, and provides the reason for the state change.

The PM subsystem generates this report in Format 2 when a remote carrier urban (RCU) module completes initialization. There are two initialization modes: warm start and backup switchover. When warm start initialization is complete, the subsystem generates log report PM106. When backup switchover initialization is complete, the system generates log report PM106. The system only generates this log if no alarms are present on the RCU. If alarms are present, the system generates log report PM128. Log report PM128 indicates that initialization is complete and alarms are present on the RCU.

The PM subsystem generates this report in Format 3 when the final alarm on a specified RCU clears. If an alarm clears on an RCU but other alarms are present, the system generates a PM128 log. The types of alarms that appear in the PM106 log are card, configuration, digital line, and coded alarms.

The PM subsystem generates this report in Format 4 when an Operator Services Node Maintained (OSNM) changes state. The OSNM changes to InSv from a manual busy (ManB) or SysB state.

The PM subsystem generates this report in Format 5 when a line appearance on a digital trunk (LDT) is in service.

The PM subsystem generates this report in Format 6 to confirm and notify of a change in a PM to InSv. The PM subsystem generates this report when a system request set returns the SysB RTS of a PM to service. The subsystem also generates the report after a manual request returns a PM to service from ManB.

The PM subsystem generates this report in Format 7 when a load with a maintenance arbitrator (MtcArb) is present in only one unit.

Format

The fields and entries associated with maintenance arbitrator are optional (apply only to XPMs). When a load containing MtcArb is present in both XPM units, the MtcArb state is indicated for each unit as either functional or disabled. In XPM81, when a load containing MtcArb is present in only one of the units, the MtcArb state is indicated for that unit only. The state of the of

PM106 (continued)

the second unit is not indicated. Beginning in TL09, MtcArb is always functional and the MtcArb state is not indicated in the logs.

The log report formats for PM106 are as follows:

Format 1

```
PM106 mmmdd hh:mm:ss ssdd RTS pmid
Node : INSV From <previous PM state> <reason>
<optional text>
Unit0 : <unit state> <previous unit state> <reason text>
Unit1 : <unit state> <previous unit state> <reason text>
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>
```

Format 2

```
PM106 mmmdd hh:mm:ss ssdd RTS pmid
FROM: <previous PM state>, REMOTE INITIALIZATION
COMPLETE :<initialization type>
REMOTE INITIALIZATION COMPLETE
```

Format 3

```
PM106 mmmdd hh:mm:ss ssdd RTS pmid
FROM: <previous PM state> <alarm text>
REMOTE ALARM CLEARED
```

Format 4

```
PM106 mmmdd hh:mm:ss ssdd RTS pmid
InSv From <previous PM state>
```

Format 5

```
PM106 mmmdd hh:mm:ss ssdd RTS pmid
From <previous PM state>
```

Format 6

PM106 (continued)

```
PM106 mmmdd hh:mm:ss ssdd RTS pmid
Node :InSv From <previous IPE state>
<optional text>
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>
```

Format 7

```
PM106 mmmdd hh:mm:ss ssdd RTS pmid
Node :InSv From <previous IPE state>
<optional text>
Unit<unit_no>: MTCARB is <state>
```

Example

Examples of log report PM106 follow:

Example 1

```
PM106 APR01 12:00:00 2112 RTS LGC HOST 7 1
Node : InSv From ISTb
ISTb Cleared (Unit 00S)
Unit0 : InSv
Unit1 : InSv From SysB (CSLink RTS)
Unit0: MTCARB is functional, Unit1: MTCARB is disabled
```

Example 2

```
PM106 APR01 12:00:00 2112 RTS RCU RCU0 00 1
From: ISTb, REMOTE INITIALIZATION COMPLETE :Backup
Switchover
REMOTE INITIALIZATION COMPLETE
```

Example 3

```
PM106 APR01 12:00:00 2112 RTS RCU RCU0 00 1
From: ISTb Min loc=3,10 Configuration alarm
remote alarm cleared
```

Example 4

```
PM106 FEB09 16:27:36 8030 RTS DCP 201
InSv from ManB
<reason_text>
```

PM106 (continued)

Example 5

```
PM106 FEB09 16:27:36 8030 RTS LDT PSAP 01 0
      From SYSB
```

Example 6

```
PM106 FEB01 21:50:00 2200 RTS IPE HOST 00 3
      Node   :InSv From ISTb
      :ISTb   Cleared (Load File Mismatch)
```

Example 7

```
PM106 FEB01 21:50:00 2200 RTS IPE HOST 00 3
      Node   :InSv From ISTb
      :ISTb   Cleared (Load File Mismatch)
      Unit0: MTCARB is functional
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 4)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm is not present.
	mmdd	Month and day the system generates the log report, for example, OCT25.
	hh:mm:ss	Time the system generates the log report, in hours, minutes, and seconds.
	ssdd	The sequence number of the log report.
RTS	constant	Indicates the PM returns to service or changes from system busy to in-service.
pmid	symbolic text	Identifies the affected PM.

PM106 (continued)

(Sheet 2 of 4)

Field	Value	Description
	IPE, APUX ff s	Identifies the IPE, or APUX PM type and the frame (ff) and shelf (s) the PM occupies.
Node : INSV	constant	Indicates the node (PM) is in service.
From	constant	Indicates the previous state of the node (PM) follows.
previous PM state	SBsy, ManB, ISTb, Offl, or Cbsy	Indicates the previous state of the PM.
reason	text	Optional field. Indicates the reason for the previous PM state.
optional text	ISTb cleared <character string>	Indicates the clearance of a PM ISTb condition. A clearance occurs as a result of a state change. If the field is not in use, this field is blank.
Unit n	n = 0 or 1	Indicates the PM unit number.
unit state	InSv, ISTb, SysB, or ManB	Indicates the current state of the unit.
previous unit state	InSv, ISTb, SysB, ManB	Indicates the previous state of the PM unit.
reason text	text	Optional field. Indicates the reason for the previous PM unit state. If no state change occurs on a unit when the system generates the log, the field is blank.
REMOTE INITIALIZATION COMPLETE	constant	Indicates initialization of the remote terminal.

PM106 (continued)

(Sheet 3 of 4)

Field	Value	Description
initialization type	warm start or backup switchover	Identifies the type of initialization. For warm start initialization, enter the PMRESET command from the PM level of the MAP display. You can also enter the P6055 or P6087 RCU maintenance card faceplate commands. The TST or BCKPSEL commands you enter from the PM level of the MAP display cause a backup switchover. The P6011, P6022, or P6044 RCU maintenance card faceplate commands can also invoke backup switchover.
sq	NA	Indicates that no communication is available between the CM and the SDM.
alarm text	REMOTE ALARM CLEARED	Indicates a remote alarm on an RCU cleared.
	min loc=x, y configuration alarm	Indicates the configuration alarm, which is a minor alarm, cleared. The location of the fault is on shelf x (x = 1 to 7) slot y (y = 1 to 24).
	min loc=x, y card failure	Indicates a card failure alarm, which is a minor alarm, cleared. The location of the fault is on shelf x (x = 1 to 7) slot y (y = 1 to 24).
	maj code=xxx digital line failure	Indicates a digital line failure, which is a major alarm, cleared. A three-digit code (001 to 008) identifies the digital line that fails. Code 001 is the topmost digital line that connects to line shelf 1 (shelf 5). Code 008 is the bottom digital line that connects to control shelf 2 (shelf 1).
	maj code=xxx "coded alarm text"	Indicates a coded alarm failure, which is a major alarm, cleared. Refer to 363-2051-108 for details on coded alarms. Coded alarms 600-625 and 700-725 apply to special-service modules.

PM106 (end)

(Sheet 4 of 4)

Field	Value	Description
Unit 0: MTCARB is	constant	Indicates that the current state of the MtcArb in XPM unit 0 follows. Optional field that applies only to digital trunk controllers (DTC), line trunk controllers (LTC) and line group controllers (LGC). If the XPM MtcArb is not loaded in the unit, the field is blank. Beginning in TL09, this field is not present.
Unit 1: MTCARB is	constant	Indicates that the current state of the MtcArb in XPM unit 1 follows. Optional field that applies only to DTCs, LTCs, and LGCs. If the XPM MtcArb is not loaded in the unit, the field is blank. Beginning in TL09, this field is not present.
state	functional, disabled	Indicates the state of MtcArb in the XPM unit at the time the log is formatted for display. This state can differ from the state of the log when the system generates the log. The possibility of a difference increases as the period between log generation and log formatting increases. Beginning in TL09, this field is not present.
previous IPE state	text	Describes the state of the IPE module before the IPE module is in service.

Action

There is no action required.

Associated OM registers**Operator Services Node Maintained OM information**

A successful RTS does not have an OM register. If the RTS fails in OM group EXNDINV, register RTSFAIL increases.

PM107

Explanation

The log report formats for PM107 are as follows:

The Peripheral Module (PM) subsystem generates Format 1 when a PM changes state to central-side busy (CBsy). A system or manual request from the C-side node of the PM causes the change in state.

The PM generates Format 2 when the line appearance on a digital trunk (LDT) subsystem changes state to CBsy. A system or manual request from the C-side node of the subsystem causes the change in state.

The PM generates Format 3 when a PM changes state to CBsy. A system request for a specific PM causes the change in state.

The PM log contains the maintenance arbitrator (MtcArb) state (functional or disabled). The PM log contains MtcArb when MtcArb is present in the XPM load. The PM generates Format 5 when a load that contains MtcArb is present in both XPM units. The PM generates Format 6 when a load that contains MtcArb is present in only one of the units.

Format

The fields and entries associated with maintenance arbitrator are optional and apply only to XPMs. If a load contains MtcArb in both XPM units, the MtcArb state is indicated for each unit as either functional or disabled. In XPM81, when a load containing MtcArb is present in only one of the units, the MtcArb state is indicated for that unit only. The state of the of the second unit is not indicated. Beginning in TL09, MtcArb is always functional and the MtcArb state is not indicated in the logs.

The log report formats for PM107 are as follows:

Format 1

```
PM107 mmmdd hh:mm:ss ssdd CBSY pmid
Node : CBsy
      opttxt2
Unit0 : statxt opttxt1
Unit1 : statxt opttxt1
```

Format 2

PM107 (continued)

PM107 mmmdd hh:mm:ss ssdd CBSY pmid
FROM: State Text

Format 3

PM107 mmmdd hh:mm:ss ssdd CBSY pmid
Node :CBsy From sttxt
opttxt

Format 4

PM107 mmmdd hh:mm:ss ssdd CBSY pmid
Node : CBsy
Unit0 Act: statxt
Unit1 Inact: statxt

Format 5

PM107 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
REASON: reastxt
Unit0: MtcArb is <state>, Unit1: MtcArb is <state>

Format 6

PM107 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
REASON: reastxt
Unit<unit_no>: MtcArb is <state>

Example

Examples of log report PM107 follow:

Example 1

PM107 APR01 12:00:00 2112 CBSY HOST LCM 7 0 Node : CBsy Unit0
: CBsy From ManB Unit1 : CBsy

Example 2

PM107 FEB09 15:30:17 8879 CBSY LDT PSAP 04 FROM: InSv

PM107 (continued)

Example 3

PM107 JAN18 15:14:26 4405 CBSY IPE HOST 00 3 Node :CBsy From InSv

Example 4

PM107 MAR16 11:25:53 5493 CBSY RCC 0 Node : CBsy From ISTb Unit0 Act: CBsy From InSv Unit1 Inact: SysB (XPM in ESA)

Example 5

PM107 APR01 12:00:00 2112 TBL PP-HARDWARE DTC 1 REASON: SysB From ISTb Unit0: MtcArb is disabled, Unit1: MtcArb is functional

Example 6

PM107 APR01 12:00:00 2112 TBL PP-HARDWARE DTC 1 REASON: SysB From ISTb Unit0: MtcArb is disabled

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm is not present.
CBSY pmid	Symbolic text	Identifies the PM affected.
Node : CBsy From	Symbolic text	Indicates the previous state of the node.
TBL PP-HARDWARE	Symbolic text	Defines trouble as a peripheral processor hardware or firmware error.
FROM	InSv, ISTb, and SysB	Node changes to SBSY from a previous state.
UNIT0	Symbolic text	Equipment state of unit 0 of the PM.

PM107 (continued)

(Sheet 2 of 2)

Field	Value	Description
UNIT1	Symbolic text	Equipment state of unit 1 of the PM.
opttxt1	Character string or blank	Identifies the previous state of the PM unit. Indicates the cause of that state. If no state change occurs when the system generates the log, this field is blank.
opttxt2	ISTb CLEARED and a character string, or blank	Clearance of PM in-service trouble (ISTb) as a result of a state change. If no state change occurs, field is empty.
sttxt	Symbolic text	Defines state before CBSY state.
opttxt	Symbolic text	For ISTb conditions that the system clears.
REASON: reastxt	Symbolic text	Identifies the reason that the PM generates the log. Identifies the product engineering code (PEC) for the suspect circuit pack.
Unit 0: MTCARB is	constant	Indicates the current state of the maintenance arbitrator in XPM unit 0 follows. This is an optional field that applies only to digital trunk controllers (DTC), line trunk controllers (LTC) and line group controllers (LGC). If the XPM maintenance arbitrator is not loaded in the unit, the field is blank. Beginning in TL09, this field is not present.
Unit 1: MTCARB is	constant	Indicates the current state of the maintenance arbitrator in XPM unit 1 follows. This is an optional field that applies only to DTCs, LTCs, and LGCs. If the XPM maintenance arbitrator is not loaded in the unit, the field is blank. Beginning in TL09, this field is not present.
state	functional or disabled	Indicates the state of MtcArb in the XPM unit at the time the log is formatted for display. This state may differ from the state of the log at the time it is generated. The likelihood of such a discrepancy increases as the time between log generation and log formatting increases. Beginning in TL09, this field is not present.

Action

Determine the cause of the CBsy state and return to service (RTS). A circuit pack list appears on the terminal if a failure occurs.

- If test passes, but PM is not RTS, contact next level of maintenance.
- If test fails, change first circuit pack on the list and run the test again. If test fails again, change second pack on list and run test again. Continue until test passes or no more circuit packs are on the list.
- The PM does not RTS after no more circuit packs are on the list. The test fails. Contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

PM108

Explanation

The peripheral module (PM) subsystem generates log report PM108. The subsystem generates this report after the system detects a firmware or hardware error in the peripheral processor (PP). This basic log report uses Format 1.

The PM log contains the maintenance arbitrator (MtcArb) state (functional or disabled). The PM log contains the MtcArb when MtcArb is present in the XPM load. The log format is Format 2 when a load that contains MtcArb is present in both XPM units. The log format is Format 3 when a load that contains MtcArb is present in only one of the units.

Format

The log report formats for PM108 are as follows:

Format 1

```
PM108 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid  
REASON: reastxt
```

Format 2

```
PM108 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid  
REASON: reastxt  
Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM108 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid  
REASON: reastxt  
Unit<unit_no>: MtcArb is <state>
```

Example

Examples of log report PM108 follow:

Example 1

```
PM108 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3  
REASON: SIGNAL FAILED ON 2X38
```

Example 2

PM108 (continued)

```
PM108 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM108 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm is not present.
PP-HARDWARE	Constant	Defines problem as a peripheral processor hardware or firmware error.
pmid	Symbolic text	Identifies the affected PM.
REASON: reastxt	Symbolic text	Identifies the reason the system generates the log. Identifies the product engineering code (PEC) for the suspect circuit pack.
Unit_no	0 or 1	When MtcArb is loaded in only one PM unit, the field identifies that unit.
state	functional or disabled	Indicates the state of MtcArb in the XPM unit when the log is formatted for display. This state can differ from the state of the log when the system generates the log. The possibility of a difference increases as the period between log generation and log formatting increases.

PM108 (end)

Action

If the PM subsystem generates PM108 for less than 2 min, there is no action required.

If a diagnostic fails or the system generates log report PM108 for more than 2 min, initiate a manual test. The terminal displays a circuit pack list if a manual test fails.

If the manual test passes but the PM does not return to service (RTS), contact the next level of maintenance.

If the manual test fails, change the first circuit pack on the list and run the test again. If the test fails again, change the second circuit pack on the list and run the test again. Continue until the test passes or no more circuit packs are on the list.

If the test passes but the PM does not RTS, contact the next level of maintenance. The PM does not RTS, and there are no more circuit packs on the list. The test fails. Contact the next level of support.

Associated OM registers

There are no associated OM registers.

PM109**Explanation**

The Peripheral Module (PM) subsystem generates log report PM109 when a T1 carrier line is set to System Busy (SBsy).

This log also contains a blank line of 64 characters in length. This blank line is initialized to be overwritten by MSL layer procedures if the specific PM and carrier exists in table CARID.

Format

The log report format for PM109 is as follows:

```
*PM109 mmmdd hh:mm:ss ssdd SBSY CARRIER pmid
  sidetxt CARRIER-NO: nnnn, REASON: reastxt
  (blank line)
```

Example

An example of log report PM109 follows:

```
*PM109 APR01 12:00:00 2112 SBSY CARRIER FRIU 202
  CARRIER-NO: 1, REASON: CARRIER LOCAL ALARM SET
  (blank line)
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
CARRIER	Symbolic text	Indicates T1 carrier is SBsy.
sidetxt	Symbolic text	Identifies the affected PM. When PMID is frame relay interface unit (FRIU), the 3 digits that follow indicate the FRIU identification.
sidetxt	C-side	Indicates that the T1 carrier made SBsy is on the C-side of the peripheral module. The system generates this field if the PM has T1 carriers on both P-side and C-side.
	P-side	Indicates that the T1 carrier set to SBsy is on the P-side of the peripheral module. The system generates this field if the PM has T1 carriers on both P-side and C-side.

PM109 (end)

(Sheet 2 of 2)

Field	Value	Description
	blank	Indicates that the peripheral module does not have T1 carriers on both C-side and P-side.
CARRIER-NO: nnnn	0 -9999	Indicates which T1 carrier the log report refers to. When pmid is FRIU, CARRIER-NO is set to 1, because the FRIU has only one carrier.
REASON: reastxt	Symbolic text	Identifies the reason that the system generates the log.
(blank line)	constant	Consists of a blank line, 64 characters in length. The blank characters can only be overwritten by MSL layer procedures if the specific PM and carrier exists in table CARID. Refer to Table CARID in the data schema section of the <i>Translations Guide</i> .

Action

If the PM subsystem generates log report PM109 for less than 2 min, there is no action required.

If the PM subsystem generates log report PM109 for more than 2 min, perform maintenance on the T1 carrier. *Trunks, Subsystem Alarm Analysis, Testing and Card Replacement*, 297-1001-501, lists step-by-step procedures for trunk maintenance.

PM110

Explanation

The Peripheral Module (PM) subsystem generates log report PM110 when a change in the service count level occurs. No trunks are removed from service when an out-of-service (OOS) limit is set. The OOS limit affects 24 trunks. Maintenance personnel can use the trunk test position (TTP) to deload the trunks. The system generates this report when the number of service counts reaches the service count threshold.

This log also contains a blank line of 64 characters in length. This blank line is initialized to be overwritten by MSL layer procedures if the specific PM and carrier exists in table CARID.

Format

The log report format for PM110 is as follows:

```
*PM110 mmmdd hh:mm:ss ssdd INFO CARRIER pmid  
sidetxt CARRIER-NO: nnnn, REASON: reastxt
```

Example

An example of log report PM110 follows:

```
*PM110 APR01 12:00:00 2112 INFO CARRIER FRIU 202  
CARRIER-NO: 1, REASON: CARRIER BER-OOS LIMIT SET
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO CARRIER	Symbolic text	Indicates that the information the log report supplies, relates to the T1 carrier.
pmid	Constant	When pmid IS frame relay interface unit (FRIU), the 3 digits that follow indicate the FRIU identification number.
sidetxt	C-side	Indicates that the T1 carrier set to PBsy is on the C-side of the peripheral module. The system generates this field if the PM has T1 carriers on both the P-side and C-side.

PM110 (end)

(Sheet 2 of 2)

Field	Value	Description
	P-side	Indicates that the T1 carrier set to PBsy is on the P-side of the peripheral module. The system generates this field if the PM has T1 carriers on both the P-side and C-side.
	blank	Indicates the peripheral module does not have T1 carriers on both C-side and P-side.
CARRIER-NO: nnnn	0-9999	Identifies T1 carrier. When PMID is FRIU, CARRIER-NO is set to 1, because the FRIU has only one carrier.
REASON: reastxt	Table H	Identifies the reason the system generates the log. Refer to Table H in the front of this document.
(blank line)	constant	Consists of a blank line, 64 characters in length. The blank characters can only be overwritten by MSL layer procedures if the specific PM and carrier exists in table CARID. Refer to Table CARID in the data schema section of the <i>Translations Guide</i> .

Action

If the limit is cleared, there is no action required.

If maintenance limit is set, perform facility maintenance. Refer to the operating company facility maintenance and repair manual for digital trunks.

If OOS limit is set, deload trunks and perform facility maintenance. Refer to the operating company facility maintenance and repair manual for digital trunks.

PM111

Explanation

The peripheral module (PM) subsystem generates log report PM111 when a T1 carrier returns to service (RTS). This report also indicates the cause of the RTS. The basic log report format for PM111 is Format 1.

The PM log contains the maintenance arbitrator (MtcArb) state (functional or disabled). The PM log contains the MtcArb when the MtcArb is present in the XPM load. The log format is Format 2 when a load that contains MtcArb is present in both XPM units. The log format is Format 3 when a load that contains MtcArb is present in only one of the units.

This log also contains a blank line of 64 characters in length. This blank line is initialized to be overwritten by MSL layer procedures if the specific PM and carrier exists in table CARID.

Format

The log report formats for PM111 are as follows:

Format 1

```
PM111 mmmdd hh:mm:ss ssdd RTS CARRIER pmid
      sidetxt CARRIER-NO: nnnn, REASON: reastxt
```

Format 2

```
PM111 mmmdd hh:mm:ss ssdd RTS CARRIER pmid
      sidetxt CARRIER-NO: nnnn, REASON: reastxt
      Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM111 mmmdd hh:mm:ss ssdd RTS CARRIER pmid
      sidetxt CARRIER-NO: nnnn, REASON: reastxt
      Unit<unit_no>: MtcArb is <state>
```

Example

Examples of log report PM111 follow:

Example 1

PM111 (continued)

```
PM111 APR01 12:00:00 2112 RTS CARRIER FRIU 202
CARRIER-NO: 15, REASON: CARRIER LOCAL ALARM CLEARED
```

Example 2

```
PM111 APR01 12:00:00 2112 RTS CARRIER FRIU 202
CARRIER-NO: 15, REASON: CARRIER LOCAL ALARM CLEARED
Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM111 APR01 12:00:00 2112 RTS CARRIER FRIU 202
CARRIER-NO: 15, REASON: CARRIER LOCAL ALARM CLEARED
Unit0: MtcArb is disabled
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm is not present.
CARRIER	Constant	Indicates that the information, which the log report supplies, relates to T1 carrier.
pmid	Symbolic text	Identifies the affected PM. When pmid=FRIU (frame relay interface unit) the 3 digits that follow indicate the FRIU identification number.
sidetxt	C-side	Indicates that the T1 carrier set to PBSY is on the C-side of the PM. The system generates this field if the PM has T1 carriers on both P-side and C-side.

PM111 (end)

(Sheet 2 of 2)

Field	Value	Description
	P-side	Indicates that the T1 carrier set to PBSY is on the P-side of the PM. The system generates this field if the PM has T1 carriers on both P-side and C-side.
	blank	Indicates the PM does not have T1 carriers on both C-side and P-side.
CARRIER-NO: nnnn	0 through 9999	Identifies the T1 carrier. When pmid=FRIU, CARRIER-NO is set to 1 because the FRIU has only one carrier.
REASON: reastxt	Symbolic text	Identifies the reason the system generates the log.
Unit_no	0 or 1	When MtcArb is loaded in only one PM unit, this field identifies that unit.
state	functional or disabled	Indicates the state of MtcArb in the XPM unit at the time the log is formatted for display. This state can differ from the state of the log when the system generates the log. The possibility of a difference increases as the period between log generation and log formatting increases.
(blank line)	constant	Consists of a blank line, 64 characters in length. The Blanks can only be overwritten by MSL layer procedures if the specific PM and carrier exists in table CARID. Refer to Table CARID in the data schema section of the <i>Translations Guide</i> .

Action

There is no action required. Log PM111 is an information log.

Associated OM registers

There are no associated OM registers.

PM112

Explanation

The Peripheral Module (PM) subsystem generates log report PM112. The subsystem generates this report when the T1 carrier slip counter is set to zero by the central control (CC). The subsystem generates a report every 24 h for each digital carrier module (DCM). Log report PM112 provides notification of a slip counter restart. If the subsystem generates more than one report in 24 h, the log indicates a facility fault.

Format

The log report format for PM112 is as follows:

```
PM112 mmmdd hh:mm:ss ssdd INFO T1-SLIP-INIT DCM nnnn
```

Example

An example of log report PM112 follows:

```
PM112 APR01 12:00:00 2112 INFO T1-SLIP-INIT DCM 7
```

Field descriptions

The following table describes the fields in the log report:

Field	Value	Description
INFO T1-SLIP-INIT	Symbolic text	Indicates restart of T1 carrier slip counter.
DCM nnnn	0 to 9999	Identifies DCM for the T1 slip counter restart.

Action

If the subsystem only generates one report in 24 h, there is no action required.

If the subsystem generates more than one report in 24 h, perform facility maintenance. Refer to the operating company facility maintenance and repair manual for digital trunks.

Associated OM registers

There are no associated OM registers.

PM113

Explanation

The Peripheral Module (PM) subsystem generates log report PM113 when a peripheral processor (PP) encounters message congestion.

The PM log contains the maintenance arbitrator (MtcArb) state (functional or disabled). The PM log contains the MtcArb when the MtcArb is in the XPM load. The log format is Format 2 when a load that contains MtcArb is in both XPM units. The log format is Format 3 when a load that contains MtcArb is in only one of the units.

Format

The log report formats for PM113 are as follow:

Format 1

PM113 mmmdd hh:mm:ss ssdd TBL PP_CONGESTION pmid

Format 2

PM113 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
 REASON: reastxt
 Unit0: MtcArb is <state>, Unit1: MtcArb is <state>

Format 3

PM113 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
 REASON: reastxt
 Unit<unit_no>: MtcArb is <state>

Example

Examples of log report PM113 follow:

Example 1

PM113 APR01 12:00:00 2112 TBL PP_CONGESTION DCM 7

Example 2

PM113 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
 REASON: SIGNAL FAILED ON 2X38
 Unit0: MtcArb is disabled, Unit1: MtcArb is functional

PM113 (continued)

Example 3

```
PM113 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled
```

Field descriptions

The following table describes the fields in the log report:

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm is not present.
TBL PP_CONGESTION	Symbolic text	Indicates PP encounters congestion.
TBL PP-HARDWARE	Symbolic text	Defines problem as a peripheral processor hardware or firmware error.
pmid	Symbolic text	Indicates the affected PM.
REASON: reastxt	Symbolic text	Identifies the reason the system generates the log. Identifies the product engineering code (PEC) for the suspect circuit pack.
Unit_no	0 or 1	When MtcArb is loaded in only one PM unit, this field identifies that unit.
state	operating or disabled	Indicates the state of MtcArb in the XPM unit when the log is formatted for display. This state can differ from the state of the log when the system generates the log. The possibility of a difference increases as the period between log generation and log formatting increases.

Action

If the system generates PM113 in less than 2 min, there is no action required. Expect message congestion on high traffic days.

PM113 (end)

If the system generates log report PM113 in more than 2 min, perform maintenance. If the condition persists, contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

PM114

Explanation

The Peripheral Module (PM) subsystem generates PM114 when a trouble (TBL) occurs during a PM operation. This condition can occur during an attempt to load, test, initialize or return a PM to service. The line appearance on a digital trunk (LDT) subsystem generates this log when a return to service (RTS) of the LDT fails.

The PM log contains maintenance arbitrator (MtcArb) state (functional or disabled). The PM log contains the MtcArb when MtcArb is in the XPM load. The log format is Format 2 when a load that contains MtcArb is in both XPM units. The log format is Format 3 when a load that contains MtcArb is in only one of the units.

Format

The log report formats for PM114 are as follow:

Format 1

```
*PM114 mmmdd hh:mm:ss ssdd TBL pmid  
  REASON: reastxt
```

Format 2

```
PM114 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid  
  REASON: reastxt  
  Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM114 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid  
  REASON: reastxt  
  Unit<unit_no>: MtcArb is <state>
```

Example

Examples of log report PM114 follow:

Example 1

```
*PM114 APR01 12:00:00 2112 TBL DCM 7  
  REASON: FAILED TO GET A ROUTE
```

PM114 (continued)

Example 2

```
PM114 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM114 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled
```

Field descriptions

The following table describes the fields in the log report:

(Sheet 1 of 2)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm does not occur.
TBL	Constant	Indicates problem on a PM.
pmid	Symbolic text	Indicates the affected PM.
REASON: reastxt	Symbolic text	Identifies the reason the system generates the log. Identifies the PEC for the suspect circuit pack.
REASON	NO RESPONSE FROM PP	Reply not received from the TPC in response to the RTS request.
	RTS FAIL	Fail or bad message received from TPC in response to the RTS request.
	TBL PP-HARDWARE	Defines problem as a peripheral processor hardware or firmware error.

PM114 (end)

(Sheet 2 of 2)

Field	Value	Description
Unit_no	0 or 1	When MtcArb is loaded in only one PM unit, this field identifies the unit.
state	operating or disabled	Indicates the state of MtcArb in the XPM unit at the time the system formats the log for display. This state can differ from the state of the log at the time the system generates the log. The possibility of difference increases as the period between log generation and log formatting increases.

Action

The following actions relate to log report PM114:

1. Operation requests can fail on the peripheral side (P-side) message DS-1s of the SMA associated with the corresponding international digit trunk (IDT). Check the status of the SMA, IDT, and P-side message DS-1s at the MAP terminal. Failure to MTCOPEN or open the P-side message DS-1s can cause operation requests to fail. Refer to other logs for PM reports that can describe the cause of the problem.
2. Failure can occur during the RTS phase of the line. This phase is part of the RTS of the IDT. This failure indicates an internal problem. Refer to other logs for PM reports that can describe the cause of the problem. For additional information, refer to the note that followed.
3. If SMA fails to respond or does not respond correctly to RTS message for the IDT, the log indicates internal routing problems. If central control (CC) fails to send the message correctly, the log indicates internal routing problems. At the MAP terminal, check status of SMA, and C-side message links of the IDT for faults. Refer to other logs with PM and software error (SWER) that can describe the cause of the problem.
4. If SMA does not respond to messages for the IDT, log PM180.

Note: The IDT does not fail to RTS when the line RTS fails, unless an internal process problem occurs.

Associated OM registers

There are no associated OM registers.

PM115

Explanation

The Peripheral Module (PM) subsystem generates log report PM115. The subsystem generates this report when the peripheral processor (PP) finds miscellaneous trouble (TBL) during normal operation.

The subsystem generates log report PM115 when an SHI link of an InSv TPC is out of service (OOS). The log report can include asterisks to denote the severity of the alarm associated with the report. One asterisk denotes a minor alarm (one SHI link OOS). Two asterisks denote a major alarm (both SHI links OOS). Three asterisks denote a critical alarm.

The PM log contains the maintenance arbitrator (MtcArb) state (functional or disabled). The log contains MtcArb when MtcArb is in the XPM load. The log format is Format 2 when a load that contains MtcArb is in both XPM units. The log format is Format 3 when a load that contains MtcArb is in only one of the units.

Format

The log report formats for PM115 are as follows:

Format 1

```
PM115 mmmdd hh:mm:ss ssdd INFO PP-MISC-TBL pmid
      REASON: reastxt
```

Format 2

```
PM115 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM115 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit<unit_no>: MtcArb is <state>
```

Example

Examples of log report PM115 follow:

Example 1

PM115 (continued)

```
PM115 APR01 12:00:00 2112 INFO PP-MISC_TBL TM8 0
REASON: DEL.NODE FAILED: FACIL. ATTCHD
```

Example 2

```
PM115 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM115 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled
```

Field descriptions

The following table explains each of the fields in the log report:

(Sheet 1 of 2)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm did not occur.
INFO PP-MISC-TBL	Symbolic text	Miscellaneous trouble on a PP.
TBL PP-HARDWARE	Symbolic text	Defines trouble as a peripheral processor hardware or firmware error.
pmid	Symbolic text	Indicates the affected PM.
REASON	Symbolic text	Identifies reason the system generates the log.

PM115 (end)

(Sheet 2 of 2)

Field	Value	Description
Unit_no	0 or 1	When MtcArb is loaded in only one PM unit, this field identifies that unit.
state	operating or disabled	Indicates the state of MtcArb in the XPM unit when the log is formatted for display. This state can differ from the state of the log when the system generates the log. The possibility of this conflict increases as the period between log generation and log formatting increases.

Action

If the system generates less than three reports in 2 min, there is no action required.

The system generates three reports and a PM108 report that indicates a firmware error. Check for a hardware fault in the PM. Follow "Action" for log report PM108.

If you do not find faults, load the PM again. This condition can indicate a corrupted load. If the system continues to generate PM115, contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

PM116

Explanation

The Peripheral Module (PM) subsystem generates log report PM116 when a message error report is received from a PM.

Format

The log report format for PM116 is as follows:

```
PM116 mmmdd hh:mm:ss ssdd INFO PP-REPORT-DUMP pmid  
      hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh . . .  
      hhhh hhhh
```

Example

An example of log report PM116 follows:

```
PM116 APR01 12:00:00 2112 INFO PP-REPORT-DUMP TM8 0  
      3F3A 4000 0017 0000 0B55 FF01 FFFF FFFF 0600 0600 . . .  
      6162 2064
```

Field descriptions

The following table describes the fields in the log report:

Field	Value	Description
INFO PP-REPORT-DUMP	Symbolic text	Indicates message error report received from PM.
pmid	Symbolic text	Indicates the affected PM.
hhhh	0000-FFFF	Provides additional information for problem isolation by Northern Telecom or operating company software experts.

Action

The system can generate a PM108, PM115, PM124, PM125, PM126 before this report. The system also can generate a PM138 report for the same PM. If this condition occurs, ignore log report PM116. Investigate the report that the system generates before PM116.

If the system generates more than three PM116 reports for the same PM, contact the next level of maintenance. If the system generates only one PM116 report, there is no action required.

Associated OM registers

There are no associated OM registers.

PM117

Explanation

The Peripheral Module (PM) subsystem generates log report PM117 when trouble (TBL) occurs during a PM operation. The subsystem generates log PM117 to indicate that a TBL occurs. The reason text describes the trouble.

Format

The log report format for PM117 is as follows:

```
PM117 mmmdd hh:mm:ss ssdd TBL pmid  
      VALUE: nnnn, REASON: reastxt
```

Example

An example of log report PM117 follows:

```
PM117 JAN18 17:20:48 1097 TBL IPE HOST 00 3 UNIT 0  
      VALUE: 0. REASON: NO RESPONSE FROM PP
```

Field descriptions

The following table describes the fields in the log report:

Field	Value	Description
TBL	Symbolic text	TBL occurs during a PM operation.
pmid	Symbolic text	Indicates the affected PM.
	IPE ff s	IPE PM type with frame and shelf the PM occupies.
VALUE:	0-35	Link that associates with the trouble. Values between 0-19 are for P-side links with port numbers 0-19. Values between 20-35 are for C-side links with port numbers 0-15.
REASON:	Symbolic text	The suspect PM finds trouble.

Action

Refer to maintenance procedures for action required.

Associated OM registers

There are no associated OM registers.

PM118

Explanation

The Peripheral Module (PM) subsystem generates log report PM118. The subsystem generates this report when miscellaneous trouble (TBL) occurs during normal operation of the peripheral processor PP.

The PM log contains the maintenance arbitrator (MtcArb) state (functional or disabled). The PM log contains the MtcArb when MtcArb is in the XPM load. The log report format is Format 2 when a load that contains MtcArb is in both XPM units. The log report format is Format 3 when a load that contains MtcArb is in only one of the units.

Format

The log report formats for PM118 are as follows:

Format 1

```
PM118 mmmdd hh:mm:ss ssdd INFO PP-MISC-TBL pmid
      VALUE: n, REASON: reastxt
```

Format 2

```
PM118 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM118 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit<unit_no>: MtcArb is <state>
```

Example

Examples of log report PM118 follow:

Example 1

```
PM118 APR01 12:00:00 2112 INFO PP-MISC_TBL TM2 2
      VALUE: 0, REASON: PP WAIT FOR MESSAGE TIMEOUT
```

Example 2

PM118 (continued)

```
PM118 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM118 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled
```

Field descriptions

The following table describes the fields in the log report:

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm did not occur.
INFO PP-MISC-TBL	Symbolic text	Indicates miscellaneous trouble on a PP.
TBL PP-HARDWARE	Symbolic text	Defines problem as a peripheral processor hardware or firmware error.
pmid	Symbolic text	Indicates the affected PM.
VALUE: n	0-1	Defines affected plane of PM.
REASON: reastxt	Symbolic text	Identifies reason the system generates the log.
Unit_no	0 or 1	When MtcArb is loaded in only one PM unit, this field identifies that unit.
state	operating or disabled	Indicates the state of MtcArb in the XPM unit when the log is formatted for display. This state can differ from the state of the log when the system generates the log. The possibility of conflict increases as the period between log generation and log formatting increases.

PM118 (end)

Action

If the system generates less than three reports in 2 min, there is no action required.

If the system generates three reports and a PM108 report that indicates a firmware error, check the PM for hardware faults. Follow the “Action” description for log report PM108.

If you do not find faults, load the PM again. This condition can indicate a corrupt load.

If the system continues to generate log report PM118, contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

PM119

Explanation

The Peripheral Module (PM) subsystem generates log report PM119. The subsystem generates this report when integrity loss occurs on an intra-bay link or inter-bay link. A remote line module (RLM) channel reports an integrity failure or a parity failure while the RLM handles a call. The call does not involve a connection through the network in the host office.

Format

The log report format for PM119 is as follows:

```
PM119 mmmdd hh:mm:ss ssdd INFO PP-INTEG-FLD pmid  
Location: <object description> REASON: <change reason>
```

Example

An example of log report PM119 follows:

```
FP119 APR01 12:00:00 INFO PP-INTEG-FLD pmid  
PORT: 0, PL:1, CHNL: 10 REASON INTEGRITY FAILURE
```

Field descriptions

The following table describes the fields in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO PP-INTEG-FLD	Symbolic text	Indicates integrity lost on intra-bay or inter-bay link.
pmid	Symbolic text	Indicates affected PM.
PORT: n	0- 3	Identifies line module (LM) port (RLM bay).
PL: n	0	Indicates plane 1 integrity failure; no call set up.
	1	Indicates plane 1 accuracy failure; call set up.
	2	Indicates plane 1 parity error; no call set up.
	3	Indicates plane 1 parity error; call set up.
PL: n (continued)	4	Indicates plane 0 integrity failure; no call set up.

PM119 (end)

(Sheet 2 of 2)

Field	Value	Description
	5	Indicates plane 0 integrity failure; call set up.
	6	Indicates plane 0 parity error; no call set up.
	7	Indicates plane 0 parity error; call set up.
CHNL: nnn	0-119	Provides LM (RLM bay) internal channel number.
REASON:	Symbolic text	Provides reason for integrity loss.

Action

There is no action required.

Associated OM registers

Refer to OM register PMFLT.

Additional information

There is no additional information.

PM120

Explanation

The Peripheral Module (PM) subsystem generates log report PM120. The subsystem generates this report when one or more peripheral processor (PP) error counters are not zero during a node audit. The counters are set to zero again.

Example

An example of log report PM120 follows:

```
PM120 APR21 22:49:17 8110 INFO PP_ERROR_COUNTERS TM4 2
      NACKS_SENT FALSE_MIS NACKS_REC MIS_NOT_RECOG
      EVEN/ODD_PORT: 0/ 2 0/ 0 0/ 1
0/ 0
      LOST_MSGS: 0, REP_LOST_BUF_OVFL: 0, REP_LOST_LIM_EXCD:
0
```

Field descriptions

The following table describes the fields in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO PP_ERROR_COUNTERS	Constant	Indicates one or more PP error counters are not zero
pmid	Symbolic text	Indicates the affected PM.
NACKS_SENT	Constant	If NACK sends the number of messages to central control (CC). Provides header for NOT_ACKNOWLEDGE (NACK) SENT counter value.
FALSE_MIS	Constant	Provides header for FALSE MAY_I_SEND (MIS) counter value. Indicates MIS from CC and SEND dispatches back to CC, but CC does not receive more messages before timeout.
NACK_REC	Constant	Provides header for NACK RECEIVED counter value. Indicates NACK is received or no ACKNOWLEDGE (ACK) is received from CC before timeout.

PM120 (end)

(Sheet 2 of 2)

Field	Value	Description
MIS_NOT_RECOG	Constant	Provides header for MIS NOT RECOGNIZED counter value, that indicates MIS sends to CC. The SEND does not return from CC before timeout.
EVEN/ODD_PORT	0-9999	Provides header for counter values of both planes.
LOST_MSG	0-9999	Provides LOST MESSAGE counter value, which indicates the reason for the lost the messages. Double received NACK, invalid command (length less than 9 bytes), network module (NM) cannot send message to central message controller (CMC), or no message buffer, can result in a lost message.
REP_LOST_BUF_OVF L	0-9999	Provides REPORT LOST BUFFER OVERFLOW counter value that indicates report from CC to PM dumped because report buffer is not available.
REP_LOST_LIM_EXCD	0-9999	Provides REPORT LOST LIMIT EXCEEDED counter value, that indicates report from CC to PM is dumped. Report dumped because number of reports is more than time frame can support.

Action

Check for continuous reports from same PM during normal operation.

- NACKS_SENT, FALSE_MIS, NACK_REC, and MIS_NOT_RECOG errors can occur on both planes of network. To correct this condition, replace the 36 card (network interface).
- If these errors occur on only one plane, refer to other PM120 logs. Replace the message processor card in the associated PM.

If these actions do not correct the problem, contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

PM121

Explanation

The Peripheral Module (PM) subsystem generates log report PM121. The system generates this report when the active high-level data link control (HDLC) link switches. The HDLC link switches between the host office digital carrier module (DCM) and the line module (LM) in the remote site. System noise can cause switchovers. Switchovers are not common.

Format

The log report format for PM121 is as follows:

```
PM121 mmmdd hh:mm:ss ssdd INFO HDLC_T1_SWITCHOVER pmid  
From T1 n To T1 n
```

Example

An example of log report PM121 follows:

```
PM121 APR01 12:00:00 2112 INFO HDLC_T1_SWITCHOVER TM4 2  
From T1 0 To T1 1
```

Field descriptions

The following table describes the fields in the log report:

Field	Value	Description
INFO HDLC_T1_SWITCHOV ER	Symbolic text	Indicates active HDLC that switches.
pmid	Symbolic text	PM Identification (pmid). Indicates the affected PM.
From T1 n	0 or 1	Provides previous HDLC link number.
To T1 n	0 or 1	Provides current HDLC link number.

Action

If switchovers occur more than one time every 30 s for a PM, check for bi-polar violations, loss of frame, and slips. Large numbers of bi-polar violations, loss of frame, and slips can indicate a T-1 facility fault. A T-1 line facility fault can be a defective DCM interface card (NT2X35) or a defective remote line module (RLM) T1 line card (NT3X48).

Associated OM registers

There are no associated OM registers.

PM122

Explanation

The Peripheral Module (PM) subsystem generates log report PM122. The subsystem generates this report when a peripheral processor (PP) exception report occurs during normal operation.

The PM log contains the maintenance arbitrator (MtcArb) state (functional or disabled). The log contains MtcArb when MtcArb is present in the XPM load. The log format is Format 2 when a load that contains MtcArb is present in both XPM units. The log format is Format 3 when a load that contains MtcArb is present in only one of the units.

Format

The log report formats for PM122 are as follow:

Format 1

```
PM122 mmmdd hh:mm:ss ssdd INFO PP-EXCPTN-RPT pmid
      excptxt CLCD=hhhh CT=hhhh RG=hhhh hhhh hhhh SP=hhhh
      RA=hhhh PS=hhhh
```

Format 2

```
PM122 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM122 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit<unit_no>: MtcArb is <state>
```

Example

Examples of log report PM122 follow:

Example 1

```
PM122 APR01 12:00:00 2112 INFO PP-EXCPTN-RPT HOST 01 1 LM 4
      CC CHALRT CLCD=0101 CT=0004 RG=0F14 0209 0501 SP=AFEE
      RA=6EF7 PS=000F
```


PM122 (continued)

Example 2

```
PM122 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM122 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm did not occur.
INFO PP-EXCPTN-RPT	Symbolic text	Indicates PP exception report encountered.
TBL PP-HARDWARE	Symbolic text	Defines trouble as a peripheral processor hardware or firmware error.
pmid	Symbolic text	Indicates the PMID.
excptxt	Symbolic text	Indicates the reason the system generates log report PM122. Refer to table Exception reasons at the end of log report.

PM122 (continued)

(Sheet 2 of 2)

Field	Value	Description
CLCD=nnnn	0000-FFFF	Provides error class (CL) and error code (CD). Bits 0-7 provide the error code. Bits 8-15 provide the error class. Values for error class are: • 01= CC errors • 02= PP firmware exception errors • 03= PP SP firmware exception errors • 04= PP checksum errors
CT=nnnm	0000-FFFF	Provides error count.
RG=nnnn	0000-FFFF	Identifies registers.
SP=nnnn	0000-FFFF	Provides stack pointer value.
RA=nnnn	0000-FFFF	Provides register address.
PS=nnnn	0000-FFFF	Provides previously stacked data.
REASON: reastxt	Symbolic text	Identifies the reason the system generates the log. Identifies the product engineering code (PEC) for the suspect circuit pack.
Unit_no	0 or 1	When MtcArb is loaded in only one PM unit, this field identifies that unit.
state	operating or disabled	Indicates the state of MtcArb in the XPM unit when the log is formatted for display. This state can differ from the state of the log when the system generates the log. The possibility of a conflict increases as the period between log generation and log formatting increases.

Action

For additional help, contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

PM122 (continued)**Error Table**

The following table describe the possible exception reasons.

Exception reasons (Sheet 1 of 2)

Class	Type	Description
CC CREATED ERRORS:	CC CHALTR	Indicates channel has associated terminal
	CCCHDGIV	Indicates the digit group and channel-line drawer assignment conflict
	CCDGCOER	Indicates error in table-driven digit collection function
	CCRLMTIV	Indicates attempt of remote line module (RLM) maintenance test on remote service module (RSM) drawer; test skipped
	CCRSLTNR	Indicates cdtb prime issues when line test unit (LTU) test position is not ready
	CCRSMTIV	Indicates attempt of RSM maintenance test when no RSM defined; test skipped
	CCTRALCH	Indicates terminal has associated channel
PP CHECKSUM ERRORS:	CKCMRA	Indicates card NT2X22 connection random access memory (RAM) failure
	CKEMRA	Indicates card NT3X49 extension RAM failure
	CKHDEP	Indicates card NT3X47 high-level data link control (HDLC) process EPROM failure
	CKMPEP	Indicates card NT2X26 master process EPROM failure
	CKMPRA	Indicates card NT2X26 master process RAM failure
	CKSPEP	Indicates card NT2X24 signaling processor EPROM failure
	CKSPRA	Indicates card NT2X24 signaling processor RAM failure
	CKUTEP	Indicates utility test card EPROM failure

PM122 (end)**Exception reasons (Sheet 2 of 2)**

Class	Type	Description
PP FIRMWARE EXCEPTION ERRORS:	PMDECDGR	Indicates decrease in the number of DGREC process from 0
	PMINCDGR	Indicates increase in the number of DGREC when the count is FF
	PMMSACIV	Indicates a message that is not expected is received
	PMRSBUIV	Indicates wrong LTU buffer number for release
	PMRSCHMM	Indicates channel number of terminal is not equal to channel number in tpb table
	PMRSCHMM	Indicates channel number of terminal is not equal to channel number in tpb table
	PMRSCHNA	Indicates channel number in message does not associate to RSM terminal
	PMRSGT6B	Indicates register more than six LTU buffers
	PMRSTNIV	Indicates invalid RSM terminal number in tpb
	PMRSTNOR	Indicates terminal number out of range
	PMRSTPIV	Indicates invalid tp state for trunk scan message
	PMRTTHEX	Indicates real time threshold exceeds limit
	PMSMSGEX	Indicates terminal processes receives more than 256 stray messages on start up
	PMTPIV	Indicates invalid activity code for terminal processes
PP SP FIRMWARE EXCEPTION ERRORS	SPRSLRIV	Indicates not ready to receive from LTU; read-pending
	SPRSLXIV	Indicates not ready to send to LTU; write-pending

PM124

Explanation

The Peripheral Module (PM) generates log report PM124 when a peripheral processor (PP) encounters miscellaneous problems during normal operation.

The PM log contains maintenance arbitrator (MtcArb) state (functional or disabled). The log contains MtcArb when MtcArb is present in the XPM load. The log format is Format 2 when a load that contains MtcArb is present in both XPM units. The log format is Format 3 when a load that contains MtcArb is present in only one of the units.

Format

The log report formats for PM124 are as follows:

Format 1

```
PM124 mmmdd hh:mm:ss ssdd INFO PP-MISC-TBL pmid
      REASON: reastxt
      vltnm EC=hhhh TN=hhhh CP=hhhh OPC=hhhh hhhh hhhh hhhh
      EX= hhhh hhhh hhhh hhhh SQ=hhhh hhhh hhhh hhhh
```

Format 2

```
PM124 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM124 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit<unit_no>: MtcArb is <state>
```

Example

Examples of log report PM124 follow:

Example 1

```
PM124 APR01 12:00:00 2112 INFO PP-MISC-TBL REM1 00 0 LM 4
      REASON: PP COMMAND PROTOCOL VIOLATION
      SV PSUF EC=0007 TN=0000 CP=BC09 OPC=0000 0000 0000 0500
      EX= 0000 0000 0000 0000 SQ=0000 0516 0000 0105
```

PM124 (continued)

Example 2

```
PM124 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM124 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm did not occur.
INFO PP-MISC-TBL	Symbolic text	Indicates miscellaneous problem encountered.
TBL PP-HARDWARE	Symbolic text	Defines problem as a peripheral processor hardware or firmware error.
pmid	Symbolic text	Indicates the pmid.
REASON	Symbolic text	Identifies problem.
vltnnm	Symbolic text	The reason the system generates the log report; refer to table command protocol violations that follow.
EC=nnnn	0000-FFFF	Provides error code.
TN=nnnn	0000-FFFF	Provides terminal number.
CP=nnnn	0000-FFFF	Provides command pointer value.

PM124 (continued)

(Sheet 2 of 2)

Field	Value	Description
OPC=nnnn	0000-FFFF	Provides option code (opcode).
EX=nnnn	0000-FFFF	Additional problem isolation information.
SQ=nnnn	0000-FFFF	Additional problem isolation information.
Unit_no	0 or 1	When the MtcArb is loaded in only one PM unit, this field identifies the unit.
state	operating or disabled	Indicates the state of MtcArb in the XPM unit when the log is formatted for display. This state can differ from the state of the log when the system generates the log. The possibility of conflict increases as the period between log generation and log formatting increases.

Table command protocol violation

The following list describes possible command protocol violations.

Command protocol violations (Sheet 1 of 3)

Type	Description
CHDGIV	Conflict in digit group (channel-line drawer) assignment
CHIDIV	Invalid line module (LM) channel/process identification
CHIDIV	Channel identification is invalid or out of range
CHNTAS	There is no correct channel
DRHDNE	High-level data link control (HDLC) is not defined
DRLKCL	Indicates link is not open
DRT1IV	Indicates specified T1 carrier is not in message group
DTBFUS	Indicates data terminal pb buffer is in use
DTXFNR	Data terminal input data not ready for transfer
ESATOR	Indicates attribute table offset out of range
ESENV	Attempt to enter again emergency stand alone (ESA)
ESLDNE	ESA load is not present; ESA enter ignored

PM124 (continued)

Command protocol violations (Sheet 2 of 3)

Type	Description
ESLVIV	Indicates attempt to leave ESA when not in ESA
ESXLNA	ESA data base not active; ESA enter ignored
EXENIV	Indicates ENDXEC attempt when not in an exec
EXIDIV	Indicates exec identification is invalid or out of range
EXIVEX	Indicates attempt to reference exec that is not defined
EXSTOV	Indicates not enough store to save exec
EXWRIV	Indicates exec store area write protection problem
GLOFOR	Indicates global area offset out of range
MTMSIG	CC hardware maintenance message too long
MTPRIV	Indicates maintenance process identification invalid
MTPRNS	Indicates maintenance process not stopped
PRIDIV	Indicates parameter identity invalid
PVBRIV	Indicates invalid branch value for primitive
RLRSIV	Indicates an RLM to remote service module (RSM) switchover that is not permitted after first definition
RPHDOR	Attempt to write past report header with MRPHDR
RPNTOP	Close report attempted when no report is open
RPNTOP	Indicates attempt to write in report that is not present
RPOFOR	Indicates not enough room in report
RSTBOV	Indicates data terminal buffer overflow
RSTPNR	Indicates terminal process does not run
STBFOV	Indicates stacked AUX command buffer overflow
STCMIV	Indicates invalid stacked command mode
SVDCTO	Indicates PP server decoder timeout
SVFCIV	Indicates invalid control/function code for primitive

Command protocol violations (Sheet 3 of 3)

Type	Description
SVMBUF	Indicates server memory block counter underflow
SVOPIV	Indicates primitive opcode is invalid or not assigned
SVPSOV	Indicates PP server decoder timeout
SVPSUF	Indicates not enough parameters on parameter stack
SVRFIV	Indicates reflex message length is invalid
SVSCIV	Security code violation on restricted opcode
TDOFOR	Indicates terminal data area index out of range
TNIVOR	Indicates terminal number is invalid or out of range
TVOFOR	Terminal pb variable area offset out of range

Action

For additional help, contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

PM125

Explanation

The Peripheral Module (PM) subsystem generates log report PM125 after the detection of a firmware or hardware error in the peripheral processor (PP).

The maintenance arbitrator (MtcArb) state is operational or disabled. The PM log includes the MtcArb state when MtcArb is present in the XPM load. Log report PM125 uses format 2 when a load that contains MtcArb is present in both XPM units. Log report PM125 uses format 3 when a load that contains MtcArb is present in only one XPM unit.

Format

The log report formats for PM125 are as follows:

Format 1

```
*PM125 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid  
  REASON: reastxt  
  CT=hhhh RG=hhhh hhhh hhhh hhhh SP=hhhh RA=hhhh PS=hhhh
```

Format 2

```
PM125 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid  
  REASON: reastxt  
  Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM125 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid  
  REASON: reastxt  
  Unit<unit_no>: MtcArb is <state>
```

Example

Examples of log report PM125 follow:

Example 1

```
*PM125 APR01 12:00:00 2112 TBL PP-HARDWARE HOST 17 1 LM  
  35  
  REASON: PP FIRMWARE ERROR  
  CT=000D  RG=4000 B963 B960 AB72  SP=AFF4  RA=5972  
  PS=AB70
```

PM125 (continued)

Example 2

```
PM125 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM125 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanied the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates there is no alarm.
TBL PP-HARDWARE	Symbolic text	Defines trouble as a peripheral processor hardware or firmware error.
pmid	Symbolic text	Indicates the pmid.
REASON	Symbolic text	Identifies the error.
CT=nnnn	0000-FFFF	Provides the error count.
RG=nnnn	0000-FFFF	Identifies registers.
SP=nnnn	0000-FFFF	Provides the stack pointer value.
RA=nnnn	0000-FFFF	Provides the register address.
PS=nnnn	0000-FFFF	Provides the previous stacked data

PM125 (end)

(Sheet 2 of 2)

Field	Value	Description
Unit_no	0 or 1	When only one PM unit contains MtcArb, this field identifies that unit.
state	operational or disabled	Indicates the state of MtcArb in the XPM unit at the time the log is formatted for display. This state can be different from the state of the log at the time the log generates. The possibility of a discrepancy increases as the time between log generation and log formatting increases.

Action

Retain this report and all reports that generate during a two min period after this report. Contact the next level of support.

Associated OM registers

There are no associated OM registers.

PM126**Explanation**

The Peripheral Module (PM) subsystem generates log report PM126 when trouble (TBL) occurs in a peripheral processor (PP) during normal operation.

The maintenance arbitrator (MtcArb) state is operational or disabled. The PM log includes the MtcArb state when MtcArb is present in the XPM load. The log report uses format 2 when a load that contains MtcArb is present in both XPM units. The log report uses format 3 when a load that contains MtcArb is present in only one XPM unit.

Format

The log report formats for PM126 are as follows:

Format 1

```
PM126 mmmdd hh:mm:ss ssdd INFO PP-MISC-TBL
      pmid
      REASON: reastxt
      vltnm EC=hhhh TN=hhhh CP=hhhh OPC=hhhh
```

Format 2

```
PM126 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM126 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit<unit_no>: MtcArb is <state>
```

Example

Examples of log report PM126 follow:

Example 1

```
PM126 APR01 12:00:00 2112 INFO PP-MISC-TBL
      LM  HOST 00 0
      REASON: PP COMMAND PROTOCOL VIOLATION
      SV  PSUF EC=0007 TN=0002 CP=370B OPC=00EF
```

PM126 (continued)

Example 2

```
PM126 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM126 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanied the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates there is no alarm.
INFO PP-MISC-TBL	Symbolic text	Indicates detection of miscellaneous trouble.
TBL PP-HARDWARE	Symbolic text	Defines trouble as a peripheral processor hardware or firmware error.
pmid	Symbolic text	Indicates the pmid.
REASON	Symbolic text	Identifies trouble detected.
vltnnm	Symbolic text	Reason the system generates log report.
EC=nnnn	0000-FFFF	Provides error code.
TN=nnnn	0000-FFFF	Provides terminal number.
CP=nnnn	0000-FFFF	Provides command pointer value.
OP=nnnn	0000-FFFF	Provides opcode.

(Sheet 2 of 2)

Field	Value	Description
Unit_no	0 or 1	When one PM unit contains MtcArb, this field identifies that unit.
state	operational or disabled	Indicates the state of MtcArb in the XPM unit at the time the log is formatted for display. This state can be different from the state of the log at the time the log generates. The possibility of a discrepancy increases as the time between log generation and log formatting increases.

Action

Contact the next level of support.

Associated OM registers

There are no associated OM registers.

PM127

Explanation

The Peripheral Module (PM) subsystem generates log report PM127. The subsystem generates PM127 when the system forces high-level data link control (HDLC) link between host office and a remote peripheral out of service. The remote peripheral can be in an emergency stand alone (ESA) state.

Format

The log report format for PM127 is as follows:

```
*PM127 mmmdd hh:mm:ss ssdd PBSY CARRIER pmid  
      SYNC VALUE: hhhh, REASON: reastxt
```

Example

An example of log report PM127 follows:

```
*PM127 APR01 12:00:00 2112 PBSY CARRIER DCM 2  
      SYNC VALUE: 0007, REASON: HDLC_LINK_DOWN
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
PBSY CARRIER	Symbolic text	Indicates the HDLC link between host office and remote peripheral forced out of service.
pmid	Symbolic text	Indicates the affected PM.
SYNC VALUE=nnnn	0000-FFFF	Provides sync value.
REASON	Symbolic text	Indicates the reason the system forced the HDLC link out of service.

Action

Check the HDLC link and the mate link, at PBsy CARRIER MAP to determine the cause of failure.

Associated OM registers

There are no associated OM registers.

PM128

Explanation

The peripheral module (PM) subsystem generates a PM128 log when the PM encounters trouble (TBL) during normal operation. The PM state changes as a result of a system or manual request. In-service trouble (ISTb) conditions are usually not service affecting and are resolved by system action.

Note: For the SuperNode Data Manager (SDM), an ISTb condition indicates that one or more non-critical faults are present on the SDM. An SDM fault requires manual intervention to clear in most cases. For additional information, refer to the *SuperNode Data Manager User Guide* for your system.

One set of fault reasons, called power-miscellaneous alarms, is programmed during datafill in table RCSINV. This table contains a field named MISCTEXT (miscellaneous text) that can hold up to 16 characters. Operating company personnel can enter whatever text they want to describe the alarm, and this text appears in PM128 log reports when the associated alarm occurs. Typical entries are for high temperature, cabinet door open, flooding, and related problems. Another field in table RCSINV named ALMSEVER (alarm severity) is datafilled to indicate whether the alarm is minor or major.

Note: The sending of operation, administration, maintenance, and provisioning messages to corresponding remote digital terminals (RDT) is unavailable.

In NA006, the PM subsystem also generates a PM128 log when an operator centralization data link (OCDL) changes to either a system busy (SysB) or manual busy (ManB) state and causes the OC Enhanced Traffic Operator Position System (TOPS) message switch (ETMS) PM to change to a state of ISTb. When this condition occurs, ETMS OCDL OOS is displayed in the reason text of this log for the ETMS.

The PM subsystem generates a PM128 log when the Extended Peripheral Modules Diagnostics History feature (Diag Hist) system registers a hardware fault for the posted XPM and requires a check of the hardware system (such as the 6X69 messaging card) that is displayed in the Diag Hist system. When this condition occurs, DIAG HIST is displayed in the status report field of this log for the XPM.

Format

The fields and entries associated with the maintenance arbitrator are optional, and apply only to XMS-based peripheral modules (XPMs). That is, these fields do not appear in all PM128 log reports. If maintenance arbitrator is not

PM128 (continued)

loaded in one or both XPM units, the fields indicating the status of maintenance arbitrator in one or both units are not in the log report.

Formats for log report PM128 are as follows:

Format 1

```
almPM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
Node      : ISTb <state info>
Unit 0 <unit state/status info><sq>
Unit 1 <unit state/status info><sq>
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>
```

Format 1 is the default format for the PM128 log report. The PM subsystem generates this log when a PM state is set to TBL (trouble) due to a fault that does not affect service. This format is used for all TBL conditions not specifically covered by the additional formats.

Format 2

```
PM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
FROM: <previous PM state> REASON: <severity>: <trouble info>
```

Format 2 is generated when an alarm is reported for a line assigned to any of the following cards:

- NT7A20AA line card
- NT7A21AA line card
- NT7A23AA line card
- NT7A25AA line card
- NT7A26AA line card
- NT7A27AA line card

Format 2 is also generated when an alarm is cleared for a line assigned to an NT7A25AA, NT7A26AA, or NT7A27AA line card.

Format 3

PM128 (continued)

PM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
 ISTb (sq) <From <previous PM state> <sq>>
 <reason text>

Format 3 is generated when a Common Channel Signaling 7 (CCS7) link interface unit (LIU7) or multiple link interface unit (MLIU) has difficulty processing CCS7 messages because of real time limitations. This condition indicates that CCS7 messages are in danger of being discarded. Format 3 is also generated when the state of the SDM node changes to in-service trouble.

Where the link interface unit (LIU) is a multiple link interface unit (MLIU), the output string of this log is MLIU in place of LIU7.

Note: The previous PM state is only displayed if the state changes.

Format 4

PM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
 FROM: ISTb, Remote Initialization Complete:Backup Switchover
 remote initialization complete

Format 5

PM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
 FROM: ISTb <trouble reason>
 remote alarm <alarm info>

Format 6

PM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
 Node: ISTb <reason>
 Unit 0 <state/status info> FROM <previous unit state>
 Unit 1 <state/status info> FROM <previous unit state>
 Unit0: MTCARB is <state>, Unit1: MTCARB is <state>

PM128 (continued)

Format 7

PM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
remote initialization warning

Format 8

PM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
From <previous PM state>, REASON

Format 9

PM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
FROM: <previous PM state> REASON: <reason>

Format 10

This format has two versions:

PM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
FROM: <previous PM state>
<trouble info>

PM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
From <previous PM state>

Format 11

PM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
Node : ISTb <reason text> From Insv
Unit 0 : ISTb <trouble info>
Unit 1 : InSv
Unit0: MTCARB is <state>, Unit1: MTCARB is <state>

Format 12

PM128 (continued)

```

PM128 mmmdd hh:mm:ss ssdd TBL ISTB pmid
Node      :   ISTb <reason text> From Sysb
Unit 0    <state/status info>
Unit 1    <state/status info>

```

Format 13

```

PM128 mmmdd hh:mm:ss ssdd TBL  ISTB pmid
Node          : ISTb <reason text> From InSv
Unit0         <state/status info>
Unit1         <state/status info>

```

Example

Examples of log report PM128 follow:

Example 1

```

PM128 APR01 12:00:00 2112 TBL ISTB LGC 0
Node          : ISTb (Unit ISTb, CSLink OOS)
Unit0 Inact   : ISTb (PM Load)
Unit1 Act     : ISTb (PM Load)
Unit0: MTCARB is functional, Unit1: MTCARB is disabled

```

Example 1 generates Format 1 when the PM encounters trouble during normal operation. The display shows the status of the node, Unit 0, and Unit 1, and reasons for the trouble.

Example 2

```

PM128 JUL05 11:07:14 1989 TBL ISTB RCS IDT 55 0
FROM: InSv, REASON: minor: Maintenance connection not
established

```

Example 2 generates Format 2 when a remote concentrator SLC-96 (RCS) peripheral module encounters problems that might affect service. Examples of faults that affect service are loss of commercial AC power to the RCS or failure of equipped ringing generators. Examples of faults that may not affect

PM128 (continued)

service are disabling of a protection link or a fault on a protection link. An RCS and an RCU will both cause a PM128 log report when

- the state of the RCS or RCU changes from InSv to ISTb
- an alarm is set in the central control (CC) for an RCS or an RCU
- an alarm is cleared in the CC for an RCS or an RCU
- an alarm occurs or clears at the RCU.

Example 3

Example for an LCME:

```
PM128 MAY29 08:28:48 1990 TBL ISTB LCME 21
      ISTb(NA) From InSv
```

Example for an SDM:

```
PM128 JAN20 23:11:10 1200 TBL ISTB SDM 0
      ISTb from InSv
      <reason_text>
```

Example 3 generates Format 3 when a PM encounters trouble during normal operation when any of the following PM types become ISTb:

- link interface module (LIM)
- application processing unit (APU)
- application processing unit with UNIX (APUX)
- data communication processor (DCP)
- link interface unit datacom (LCOM)
- external node (EXND)
- service peripheral module (SPM)
- voice processing unit (VPU)
- Packet Handler node (PHN)
- service processor with UNIX (SPX) Node
- SuperNode Data Manager (SDM)

Example 4

PM128 (continued)

```
PM128 APR01 11:23:44 2115 TBL ISTB RCU RCU0 00 1
FROM: ISTb, Remote Initialization Complete :Backup
Switchover
remote initialization complete
```

Example 4 generates Format 4 when an RCU completes initialization only if alarms still exist at the RCU; otherwise, a PM106 log is generated to indicate that initialization has completed.

Example 5

```
PM128 APR01 11:23:44 2115 TBL ISTB RCU RCU0 00 1
FROM: ISTb, Min loc=3,7 Card failure
remote alarm received
```

Example 5 generates Format 5 when an alarm occurs or clears at an RCU or ICB. Several types of alarms can occur on an RCU: line card, line card carrier, or common equipment card alarms; configuration alarms (where hardware equipped on a shelf does not match datafill); digital line alarms; and coded alarms. Coded alarms cover many faults, such as excessive bipolar violations, blown fuses, and faulty common equipment cards.

Coded alarms 120-130 are programmable spare RCU alarms. Coded alarms 600-625 and 700-725 are special service module alarms. The text that appears in log reports when these alarms occur is datafilled in field RCUSPALM of table RCUINV.

If the alarm occurs at an integrated channel bank (ICB), the log reports the following:

- ICB number
- link number
- if the link is out of service (remote alarm received)
- if the link was returned to service (remote alarm cleared)

Example 6

```
PM128 JAN09 09:43:02 6994 TBL ISTB LTC 1
Node      : ISTb (Unit ISTb)
Unit 0 Act: InSv
Unit 1 Inact: ISTB (CMR Load) FROM InSv
```

PM128 (continued)

Example 6 generates Format 6 when a unit goes into the ISTb state. It is also generated for the detection of a hard-memory parity fault. A hard-memory parity fault results in the generation of a faulty card list. The unit remains system busy (SysB) until the faulty card(s) is replaced. The unit must be reloaded and returned to service (RTS) manually.

When the XMS-based peripheral module (XPM) is a subscriber carrier module-100 urban (SMU) RCU, log report PM128 indicates that the CLASS modern resource (CMR) card is no longer functioning and implies that the Calling Number Delivery feature is not working for terminating lines on the RCU. In order to recover from this fault, the operating company personnel must switch activity (SWACT) from the SMU to the other unit.

Example 7

```
PM128 APR01 11:23:44 2115 TBL ISTB RCU RCU0 00 1
remote initialization warning
```

Example 7 generates Format 7 when the remote carrier urban (RCU) warns that it is about to initialize. The following RCU maintenance card faceplate and MAP commands cause backup switchover initialization:

- P6011 (RCU maintenance card faceplate command)
- P6022 (RCU maintenance card faceplate command)
- P6044 (RCU maintenance card faceplate command)
- BCKPSEL (PM level MAP command)
- TST (PM level MAP command)

Example 8

```
PM128 FEB10 13:18:10 4523 TBL ISTB LDT PSAP 04 0
From InSv, REASON:
```

Example 8 generates Format 8 from the line appearance on a digital trunk (LDT) subsystem when the LDT is made ISTb by the system.

Example 9

PM128 (continued)

```

PM128 JUL05 11:07:14 1989 TBL ISTB pmid
FROM: ISTB REASON: EOC d1B Sync. in Progress
PM128 JUL05 11:07:14 1989 ISTB IDT55
FROM: ISTB REASON EPC D/B Corrupted

```

Example 9 generates Format 9 when the EOC d1B Sync.in Progress occurs in the process of synchronizing the embedded operations channel (EOC) local object database corresponding international digital trunk (IDT). The EOC D/B Corrupted log occurs when the information in the EOC local object database is known to be incorrect for the RDT corresponding to a particular IDT.

Example 10

```

PM128 JUL05 11:07:14 7306 TBL ISTB IDT12
FROM: InSv
Fault occurred on the channel

```

Example 10 generates Format 10 when the IDT becomes ISTb, or when an additional ISTb reason is detected.

```

PM128 JUN27 10:41:21 5678 TBL ISTB OSNM 0
ISTB from INSV
REASON: Session pool out of service

```

In the previous example PM128 is generated when a service node goes from InSv to IsTb due to a session pool going out-of-service (SySb or ManB).

Example 11

```

PM128 JAN02 11:06:49 3804 TBL ISTB LGC HOST 00 0
Node : ISTb (Unit ISTb) From InSv
Unit 0: ISTb (Rex Failed)
Unit 1: InSv
Unit0: MTCARB is functional, Unit1: MTCARB is disabled

```

Example 11 uses Format 11 to display the state of the two units, here indicating that unit 0 went from an in-service (InSv) state to an ISTb state due to a routine exercise (REx) failure reason, and that unit 1 is InSv.

Example 12

PM128 (continued)

```
PM128 MAR10 05:36:01 2323 TBL ISTB RCC 0
Node       : ISTb (Inact 00S) From SysB
Unit 0     Inact: SysB (XPM in ESA)
Unit 1     Act: InSv From SysB (XPM in ESA)
```

Example 12 uses Format 12 to indicate a system busy reason of XPM in emergency stand-alone (ESA) when a remote carrier cluster (RCC) is returned to service after entering ESA over a central control (CC) warm or cold restart.

Example 13

```
PM128 MAR22 12:16:16 1701 TBL   ISTB DTC  0
Node       : ISTb (Unit ISTb) From InSv
Unit0      Act: ISTb (Diag Hist) From InSv
Unit1      Inact: InSv
```

Example 13 uses Format 13 to indicate that the Diag Hist system registers a hardware fault for that XPM and requires a check of the hardware system (such as the 6X69 messaging card) that is displayed in the Diag Hist system. In order to recover from this fault, the operating company personnel must perform a SWACT FORCE, since a simple BSY/RTS will not do the work.

Field descriptions

The following table explains each of the fields in the log report.

(Sheet 1 of 10)

Field	Value	Description
alm	***	Optional field indicating a critical alarm.
	**	Optional field indicating a major alarm.
	*	Optional field indicating a minor alarm.
	(blank)	Indicates no alarm.
	mmdd	Month and day the log report was generated, for example, OCT25.
	hh:mm:ss	Time the log report was generated, in hours, minutes, and seconds.

PM128 (continued)

(Sheet 2 of 10)

Field	Value	Description
TBL ISTB	constant	Indicates the node (PM) is in-service trouble.
pmid	alphanumeric text	Identifies the affected PM.
Node :	constant	Indicates the state of the node (PM) follows.
state info	Unit ISTb <reason text>	Indicates a unit is in-service trouble, and indicates the reason for the in-service trouble (reason text). See example 1.
	Unit ISTb	Indicates a unit has gone into the in-service trouble state. See example 6.
	From InSv	Indicates a unit went from in-service. See example 11.
	<reason text> From SysB	Indicates the previous state of the node was system busy, and indicates the reason for the system-busy state (reason text). See example 12.
sq	RU, NA, or blank	Provides the status qualifier, which can be not accessible (NA), or resources unavailable (RU). RU is printed only when the PM in question is a link interface module (LIM). See format 1.
ISTb	constant	Indicates the node (PM) is in-service trouble.
Unit n	n = 0 or 1	Identifies the PM unit number.
unit state/status info	InSv	Indicates the unit is in-service (InSv). See example 11.
	Act or Inact: InSv	Indicates the unit is active (Act) or inactive (Inact), and in-service (InSv). See example 6.
	Act or Inact <reason text>	Indicates the unit is active (Act) or inactive (Inact), and indicates the reason for the trouble (reason text). See example 11.
	Act or Inact ISTb <reason text>	Indicates the unit is active (Act) or inactive (Inact), is in-service trouble, and the indicates reason for the in-service trouble state (reason text). See examples 1 and 11.

PM128 (continued)

(Sheet 3 of 10)

Field	Value	Description
	Act or Inact SysB <reason text>	Indicates the unit is active (Act) or inactive (Inact), is system busy, and indicates the reason for the system busy state. See example 12.
FROM	constant	Indicates the previous state of the PM follows.
previous PM state	InSv, ManB, SysB, CBsy	Indicates the previous state of the PM.
REASON:	constant	Indicates the reason for the trouble follows. May also indicate whether the trouble is minor (not service-affecting) or major (service-affecting).
severity	major, minor	This optional field indicates trouble severity. Minor indicates the trouble is not service-affecting. Major indicates the trouble is service-affecting.
trouble reason	text	Indicates the reason for the in-service trouble condition. See examples 2, 4, 8, 9, and 10.
	Min loc= x,y line card z failure or missing	Indicates a line card failed or is missing: • Min indicates a minor alarm. • x refers to the RCU shelf where the card has failed or is missing. • y refers to the slot where the fault exists.
	Min loc= x,y card failure	Indicates a common equipment card or line card carrier failed: • Min indicates a minor alarm. • x refers to the RCU shelf on which the fault exists, where: — x refers to the RCU shelf where the line card has failed or is missing — y refers to the slot on this shelf where the card has failed or is missing. — z refers to the position of the card on the line card carrier, with 1 being the top position and 4 or 8 the bottom position.

PM128 (continued)

(Sheet 4 of 10)

Field	Value	Description
	Min loc= x,y configuration alarm	Indicates a minor configuration alarm: - Min indicates hardware equipped on a shelf or multiple shelves does not match datafill. - x indicates the shelf on which the discrepancy exists. - y indicates the slot where the discrepancy exists.
	Min loc= x,y line card z refresh failure	Min indicates a minor alarm that applies to 7A20AA, 7A21AA, and 7A23AA line cards. The line card could not be provisioned.
	Min loc= x,y line card z failure, CGA set	Min indicates a minor alarm that applies to 7A20AA, 7A21AA, and 7A23AA line cards. A line card had a hardware failure.
	Min loc= x,y line card z provisioning incompatibility	Min indicates a minor alarm that applies to 7A20AA, 7A21AA, and 7A23AA line cards. The card in the slot does not match the cardcode value in table LNINV.
	Min loc= x,y line card z missing	Min indicates a minor alarm that applies to 7A20AA, 7A21AA, and 7A23AA line cards. The line card has been provisioned but is not in the slot.
	Min loc= x,y line card z signaling module missing	Min indicates a minor alarm that applies to 7A20AA, 7A21AA, and 7A23AA line cards. The line card assigned requires a signaling module (SM) to be assigned in the next slot, and the SM is not there.
	Min loc= x,y invalid line card carrier present	Min indicates a minor alarm that applies to 7A20AA, 7A21AA, and 7A23AA line cards. The line card is provisioned but is not provisioned into the correct slot.
	Min loc= x,y line card carrier missing	Min indicates a minor alarm that applies to 7A20AA, 7A21AA, and 7A23AA line cards. The line card is provisioned, but is missing.

PM128 (continued)

(Sheet 5 of 10)

Field	Value	Description
	Min loc= x,y line card z does not match the CARDCODE	Min indicates a minor alarm that applies to 7A20AA, 7A21AA, and 7A23AA line cards. The line card provisioned in LNINV does not match the card that is in the slot.
	Maj code=xxx digital line failure	Maj refers to a major alarm, here a digital line failure alarm, where code xxx (001-008) refers to the number of the digital line that failed. The top digital line (shelf 5) is coded 001, and the bottom digital line (shelf 1) is coded 008.
	Maj code= zzz <code text>	Maj refers to a major alarm such as a blown fuse. • zzz refers to the three-digit code of the major alarm. • <code text> takes many text strings.
	ISTb multiple card fault	Indicates a line card of RCT 0 was tested and found faulty, but not enough line cards were tested to determine if it is actually a line card or buffer card (for example, QPP496) fault. This log tells operating company personnel to replace the list of cards tested in the order displayed on the MAP terminal. ACTION: At the MAP display, post the RCT indicated in the log and enter QUERYPM FLT. Note the card list. Replace the cards in the order shown, entering TST after each replacement. If the failure continues, replace the next card in the list.

PM128 (continued)

(Sheet 6 of 10)

Field	Value	Description
	ISTb line card tested on <shelf> <card>	Indicates a designated card on the specified shelf was tested and found faulty, but not enough line cards were tested to determine if it is actually a line card or buffer card (for example, QPP496) fault. This log tells operating company personnel to replace the list of cards tested in the order displayed on the MAP terminal. ACTION: At the MAP display, post the RCT indicated in the log and enter QUERYPM FLT. Note the card list. Replace the cards in the order shown, entering TST after each replacement. If the fault continues, then replace the next card in the list.
	ISTb line card fault on <shelf> <card>	Indicates a fault occurred on the specified line card on the specified shelf. ACTION: At the MAP display, post the RCT indicated in the log and enter QUERYPM FLT. Note the card list. Replace the cards in the order shown, entering TST after each replacement. If the fault continues, then replace the next card in the list.
	ISTb buffer card tested on <shelf>	Indicates a buffer card on the specified shelf was tested and found faulty, but not enough line cards were tested to determine if it is actually a line card or buffer card (for example; QPP496) fault. This log tells operating company personnel to replace the list of cards tested in the order displayed on the MAP terminal. ACTION: At the MAP display, post the RCT indicated in the log and enter QUERYPM FLT. Note the card list. Replace the cards in the order shown, entering TST after each replacement. If the fault continues, then replace the next card in the list.

PM128 (continued)

(Sheet 7 of 10)

Field	Value	Description
	ISTb Buffer card fault on <shelf> <card>	Indicates a fault occurred on the buffer card on the specified shelf. ACTION: At the MAP display, post the RCT indicated in the log and enter QUERYPM FLT. Note the card list. Replace the cards in the order shown, entering TST after each replacement. If the fault continues, then replace the next card in the list.
	ISTb driver card <Num.> Fault on <Digroup>	Indicates fault of specified driver card on designated digroup. ACTION: At the MAP display, post the RCT indicated in the log and enter QUERYPM FLT. Note the card list. Replace the cards in the order shown, entering TST after each replacement. If the fault continues, then replace the next card in the list.
	ISTb address control fault on <Digroup>	Indicates a fault of the address control card (for example, QPP417) on indicated digroup. ACTION: At the MAP display, post the RCT indicated in the log and enter QUERYPM FLT. Note the card list. Replace the cards in the order shown, entering TST after each replacement. If the fault continues, then replace the next card in the list.

PM128 (continued)

(Sheet 8 of 10)

Field	Value	Description
	ISTb address control fault	Indicates a fault of the address control card (for example, QPP417) on either digroup A and/or B of designated RCT. ACTION: At the MAP display, post the RCT indicated in the log and enter QUERYPM FLT. Note the card list. Replace the cards in the order shown, entering TST after each replacement. If the fault continues, then replace the next card in the list. Note: RCT register audit cannot determine which address control on digroup A or B is faulty. Therefore, when replacing suspect address control card(s) found by the audit, replace the address control card on digroup A if digroup A is in-service; otherwise, replace the address control card on digroup B.
	ISTb <Digroup> card fault	Indicates a fault of the designated digroup card (for example, QPP419). ACTION: At the MAP display, post the RCT indicated in the log and enter QUERYPM FLT. Note the card list. Replace the cards in the order shown, entering TST after each replacement. If the fault continues, then replace the next card in the list.
	ISTb alarm card fault	Indicates a fault of the alarm card (QPP420). ACTION: At the MAP display, post the RCT indicated in the log and enter QUERYPM FLT. Note the card list. Replace the cards in the order shown, entering TST after each replacement. If the fault continues, then replace the next card in the list.

PM128 (continued)

(Sheet 9 of 10)

Field	Value	Description
	ISTb SLT card fault	Indicates a fault of the SLT card. ACTION: At the MAP display, post the RCT indicated in the log and enter QUERYPM FLT. Note the card list. Replace the cards in the order shown, entering TST after each replacement. If the fault continues, then replace the next card in the list.
	ISTb Diag Hist fault	Indicates that a hardware failure is pegged against the Diag Hist system, which displays the history of diagnostic failures for the posted peripheral. ACTION: At the MAP display, post the peripheral and enter QUERYPM DIAGHIST to list the card (for example, a 6X69 messaging card) associated with the fault. The only way to clear this alarm is to perform a SWACT FORCE, since a simple BSY/RTS will not do the work.
Link	1 to 4	Indicates a link to an ICB. This link is out of service if the remote alarm is received. This link is in service if the remote alarm cleared.
state/status info	text	Indicates the state and status (Act or Inact) of the PM unit, and provides additional information regarding the faulty card(s). See example 6.
remote initialization warning	constant	Indicates that an RCU is about to initialize. See example 7.
Unit 0: MTCARB is	constant	Indicates the current state of the maintenance arbitrator in XPM unit 0 follows. This is an optional field that applies only to digital trunk controllers (DTCs), line trunk controllers (LTCs), and line group controllers (LGCs). When the XPM maintenance arbitrator is not loaded in the unit, the field is blank.

PM128 (continued)

(Sheet 10 of 10)

Field	Value	Description
Unit 1: MTCARB is	constant	Indicates the current state of the maintenance arbitrator in XPM unit 0 follows. This is an optional field that applies only to digital trunk controllers (DTC), line trunk controllers (LTC), and line group controllers (LGC). When the XPM maintenance arbitrator is not loaded in the unit, the field is blank.
state	functional, disabled	The current state of the maintenance arbitrator in the XPM unit.
sw_nm	alphanumeric	Optional field. Indicates the name of the switch associated with the PH node ISTb condition.

Action

This section explains the actions to take for the following situations:

- line card faults and alarms
- RSC problems
- SDM problems
- miscellaneous problems and alarms

Line card faults and alarms

A multiple line card fault indicates that a line card of the remote concentrator terminal (RCT) 0 was tested and found faulty, but not enough line cards were tested to determine if it is actually a line card or buffer card (for example, a QPP496) fault. The log report tells the operating company personnel to replace the list of cards tested in the order shown on the MAP display.

At the MAP terminal, post the RCT indicated in the log and enter the QUERYPM FLT command. Note the card list. Replace the cards in the order shown on the MAP display, entering the TST command after each replacement. If the fault continues, replace the next card in the list.

An ISTb line card tested on a shelf card fault indicates that a designated card on the specified shelf was tested and found faulty, but not enough line cards were tested to determine if it is actually a line card or buffer card (for example, the QPP496) fault. This log tells the operating company personnel to replace the list of cards tested in the order shown on the MAP display.

PM128 (continued)

At the MAP terminal, post the RCT indicated in the log and enter the QUERYPM FLT command. Note the card list. Replace the cards in the order shown on the MAP display, entering the TST command after each replacement. If the fault continues, replace the next card in the list.

An ISTb buffer card on a shelf fault indicates that a buffer card on a shelf was tested and found faulty, but not enough line cards were tested to determine if it is actually a line card or buffer card (for example; the QPP496) fault. This log tells operating company personnel to replace the list of cards tested in the order shown on the MAP display.

At the MAP terminal, post the RCT indicated in the log and enter the QUERYPM FLT command. Note the card list. Replace the cards in the order shown, entering the TST command after each replacement. If the fault continues, replace the next card in the list.

An ISTb buffer card fault on a shelf indicates a fault was detected in the buffer card (for example, the QPP496) on the specified shelf.

At the MAP terminal, post the RCT indicated in the log and enter the QUERYPM FLT command. Note the card list. Replace the cards in the order shown on the MAP display, entering the TST command after each replacement. If the fault continues, replace the next card in the list.

An ISTb driver card <Num.> fault on <Digroup> indicates a fault of specified driver card on designated digroup.

At the MAP terminal, post the RCT indicated in the log and enter the QUERYPM FLT command. Note the card list. Replace the cards in the order shown on the MAP display, entering the TST command after each replacement. If the fault continues, replace the next card in the list.

An ISTb address control fault on <Digroup> indicates a fault of the address control card (QPP417) on indicated digroup.

At the MAP terminal, post the RCT indicated in the log and enter the QUERYPM FLT command. Note the card list. Replace the cards in the order shown on the MAP display, entering the TST command after each replacement. If the fault continues, replace the next card in the list.

An ISTb address control fault indicates a fault of the address control card (QPP417) on either digroup A and/or B of designated RCT.

At the MAP display, post the RCT indicated in the log and enter the QUERYPM FLT command. Note the card list. Replace the cards in the order

PM128 (end)

shown on the MAP display, entering the TST command after each replacement. If the fault continues, replace the next card in the list.

PM129

Explanation

The peripheral module (PM) subsystem generates log report PM129 when table LMOVCODE changes. The PM129 provides a hard copy record of changes to the LMOVCODE table. Log report PM129 uses format 1.

The PM log includes the maintenance arbitrator (MtcArb) state (either functional or disabled) when MtcArb is present in the XPM load. This log uses format 2 when a load that contains MtcArb is present in both XPM units. This log uses format 3 when a load that contains MtcArb is present in only one of the units.

Format

The log report formats for PM129 are as follows:

Format 1

```
PM129 mmmdd hh:mm:ss ssdd INFO  
      REASON: reastxt
```

Format 2

```
PM129 mmmdd hh:mm:ss ssdd INFO  
      REASON: reastxt  
      Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM129 mmmdd hh:mm:ss ssdd INFO  
      REASON: reastxt  
      Unit<unit_no>: MtcArb is <state>
```

Example

Examples of log report PM129 are as follows:

Example 1

```
PM129 APR12 12:23:37 2112 INFO DATA CHANGED  
      REASON: DIGIT_COLLECTION_DATA_CHANGED
```

Example 2

PM129 (continued)

```
PM129 APR12 12:23:37 2112 INFO DATA CHANGED
      REASON: DIGIT_COLLECTION_DATA_CHANGED
      Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM129 APR12 12:23:37 2112 INFO DATA CHANGED
      REASON: DIGIT_COLLECTION_DATA_CHANGED
      Unit0: MtcArb is disabled
```

Field descriptions

Descriptions of each field in the log report appear in the following table:

Field	Value	Description
alarm		Optional field. Indicates the type of alarm that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm did not occur.
INFO	Constant	Informs of activity on the PM.
REASON: reastxt	Symbolic text	Identifies the reason the system generated the log. Identifies the product engineering code (PEC) for the suspect circuit pack.
Unit_no	0 or 1	When only one PM unit includes MtcArb, identifies that unit.
state	functional or disabled	Indicates the state of MtcArb in the XPM unit at the time the system formats the log for display. There can be a difference between this state and the state of the log when the system generated the log. The possibility of a difference increases as the time between the log generation and log formatting increases.

PM129 (end)

Action

When table LMOVCODE changes, reload the static data to any line group controllers (LGC) and signaling terminal controllers (STC). Busy and return-to-service (RTS) any line modules (LM).

Associated OM registers

There are no associated OM registers.

PM130**Explanation**

The Peripheral Module (PM) subsystem log report PM130. Log PM130 appears when the SwAct (SWitching ACTion between central control) flag is set to a value that is not zero. This action occurs during warm SwAct. The flag must be reset to zero for audits and returns to service (RTS) to function.

This log indicates that the audit or a manual RTS resets the flag to zero.

The subsystem adds the maintenance arbitrator (MtcArb) state (operating or disabled) to the PM log when MtcArb is present in the XPM load. The system uses format 2 when a load that contains MtcArb is in both XPM units. The system uses format 3 when a load that contains MtcArb is in one unit.

Format

The log report formats for PM130 are as follows:

Format 1

```
PM130 mmmdd hh:mm:ss ssdd INFO AUDIT_SWCT_FLAG pmid
      VALUE: nnnnn REASON: PM_SWCT_FLAG_SET
```

Format 2

```
PM130 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM130 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit<unit_no>: MtcArb is <state>
```

Example

Examples of log report PM130 follow:

Example 1

```
PM130 APR01 12:00:00 2112 INFO AUDIT_SWCT_FLAG DCM 2
      VALUE:      3 REASON: PM_SWCT_FLAG_SET
```

PM130 (continued)

Example 2

```
PM130 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM130 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm, if an alarm occurs, that accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates that an alarm did not occur.
INFO AUDIT_SWCT_FLAG	Symbolic text	Indicates SWCT_EXEC_VALID_FLAG is not zero.
TBL PP-HARDWARE	Symbolic text	Defines trouble as a peripheral processor hardware or firmware error.
pmid	Symbolic text	Identifies affected PMs. Refer to descriptions for pmid in Table I at the beginning of this document.
VALUE: nnnnn	1-32767	Provides flag value.
REASON: PM_SWCT _FLAG_SET	Constant	Indicates that the flag is reset to zero.
REASON: reastxt	Symbolic text	Identifies the reason the system generates this log and also identifies the product engineering code (PEC) for the suspect circuit pack.

(Sheet 2 of 2)

Field	Value	Description
Unit_no	0 or 1	When MtcArb is in one PM unit, this field identifies that unit.
state	functional or disabled	Indicates the state of MtcArb in the XPM unit at the time the system formats the log for display. The MtcArb state can differ from the state of the log at the time the system generates this log. The possibility of a difference increases as the time between log generation and log formatting increases.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

PM131

Explanation

The Peripheral Module (PM) subsystem generates PM131 when a state change occurs because of the routine exercise (REX) test. A system or manual request causes the PM to change state.

Format 1 is the default format for the PM131 log report. The PM subsystem generates this log when a PM state changes because of a REX test. Use this format for all trouble (TBL) conditions not covered by the additional formats.

The maintenance arbitrator (MtcArb) state (functional or disabled) is appended to the PM log when MtcArb is present in the XPM load. Use format 2 when a load that contains MtcArb is present in both XPM units. Use format 3 when a load that contains MtcArb is present in only one of the units.

Format

The log report formats for PM131 are as follow:

Format 1

```
PM131 mmmdd hh:mm:ss ssdd
      Node          : statxt (sq) (reastxt) opttxt3
      opttxt2
      Unit n actxt   : statxt1 (sq) (reastxt) opttxt1
      Unit n actxt   : statxt1 (sq) (reastxt) opttxt1
```

Format 2

```
PM131 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit0: MtcArb is <state>, Unit1: MtcArb is <state>
```

Format 3

```
PM131 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
      REASON: reastxt
      Unit<unit_no>: MtcArb is <state>
```

Example

Examples of log report PM131 follow:

Example 1

PM131 (continued)

```
PM131 APR01 12:00:00 2112 INFO LGC 0
Node       : INSV (REX)
Unit0 Inact : INSV (PM Load)
Unit1 Act   : INSV (PM Load)
```

Example 2

```
PM131 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled, Unit1: MtcArb is functional
```

Example 3

```
PM131 APR01 12:00:00 2112 TBL PP-HARDWARE DCM 3
REASON: SIGNAL FAILED ON 2X38
Unit0: MtcArb is disabled
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm, if any are present, accompanied the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates an alarm is not present.
TBL PP-HARDWARE	Symbolic text	Defines trouble as a peripheral processor hardware or firmware error.
pmid	This field contains the peripheral that changed states.	Indicates the PM the state change affected.
Node	INSV (rsntxt)	Indicates the status of the node. The status of Unit 1 and Unit 0 will follow.

PM131 (continued)

(Sheet 2 of 2)

Field	Value	Description
Unit 0		Indicates that the unit is in-service.
Unit 1	Act, Inact	
	actxt : InSv	Indicates the status of the unit as active (Act) or inactive (Inact), and that the unit is in-service (InSv).
REASON: reastxt	Symbolic text	Identifies the reason the system generated the log. Identifies the PEC for the suspect circuit pack.
Unit_no	0 or 1	When MtcArb is loaded in only one PM unit, this field identifies that unit.
state	functional or disabled	Indicates the state of MtcArb in the XPM unit at the time the log is formatted for display. This state can be different from the state of the log at the time the system generated the log. A discrepancy is more possible as the time between log generation and log formatting increases.

Action

There is no actions required. The PM131 is an information log.

As a successful REX progresses, the system generates PM131. Successful REX sequence:

- BSY inactive unit (PM131)
- RTS original inactive unit with full diagnostics
- Wait for superframe/data sync (PM131)
- Perform warm SWACT
- Busy newly inactive unit (PM131)
- Test newly active unit with in-service diagnostics
- Test newly inactive unit with out-of-service (OOS) diagnostics
- Wait for superframe/data sync (PM181 and PM131)

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PM132

Explanation

The system log report PM132. The system generates PM132 when a bus interface card (BIC) relay test completes on a line concentrating module (LCM). The report gives a summary of each drawer in the LCM. The BIC relay test does not run on ILDN line drawers for remotes (ILDR).

The ILDR is available for remote switching center-SONET (RSC-S) and remote switching center (RSC) configurations in the NA007/XPM08 timeframe. The ILDR is available for the following configurations in the NA007/XPM08 timeframe:

- remote line concentrating module (RLCM)
- outside plant module (OPM)
- outside plant access cabinet (OPAC)

Format

The log report format for PM132 is as follows:

```
PM132 mmmdd hh:mm:ss ssdd INFO pmid  
      opttxt  
      Drawer <drawer_no>: <result>: <reason>
```

Example

An example of log report PM132 follows:

PM132 (continued)

FP503 SEP05 18:14:33 4827 INFO Device State Change
 Location: FP 2 DEVICE 1 (DK) SCSI BUS 0
 REASON: Change of state of associated entity
 FROM: InSv (Isolated) DRIVE STATE: Unknown
 TO: InSv DRIVE STATE: On Line

PM132 OCT 04 17:21:50 0100 INFO BIC RELAY TEST LCM Host 00
 0
 Node: ISTb,
 Unit0: InSv,
 Unit1: InSv
 LCM Host 00 0
 Node: ISTb,
 Unit0: InSv,
 Unit1: InSv
 Drawer 0: Passed:
 Drawer 1: Passed:
 Drawer 2: Passed:
 Drawer 3: Passed:
 Drawer 4: Not Run: ISDN Line Drawer
 Drawer 5: Not Run: ISDN Line Drawer
 Drawer 6: Passed:
 Drawer 7: Failed: REVERSAL Relay Test
 Drawer 8: Passed:
 Drawer 9: Failed: REVERSAL Relay Test
 Drawer 10: Passed:
 Drawer 11: Passed:
 Drawer 12: Passed:
 Drawer 13: Passed:
 Drawer 14: Not Run: Line card not available
 Drawer 15: Passed:
 Drawer 16: Passed:
 Drawer 17: Passed:
 Drawer 18: Passed:
 Drawer 19: Passed:

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Indicates activity on the PM.
pmid	Symbolic text	Identifies affected PM.

PM132 (end)

(Sheet 2 of 2)

Field	Value	Description
opttxt	Symbolic text	Provides information about LCM node state.
drawer_no	0 through 19	Indicates the drawer number in the LCM.
result	Symbolic text	Indicates the results of the BIC relay test for each drawer.
reason	Symbolic text	Indicates the reason for the BIC relay test results.

Action

If a failure occurs, replace the BIC and test the BIC again on a single drawer level. If test does not run on a given drawer, the test cannot seize the metallic test equipment (MTE). The MTE can go bad during the test. The test can abort, or lines can be in a call processing busy state.

You must enter an NT6X17 in the drawer or you must diagnose and fix the MTE. If the test aborted or calls are in progress, test the drawer again.

Associated OM registers

There are no associated OM registers.

PM139

Explanation

The peripheral module (PM) subsystem log report PM139. The subsystem generates PM139 when over 90 percent of buffers in office parameter PPMBUFFS are in use. This event can occur in high maintenance conditions when the system requires more buffers than normal.

Format

The log report format for PM139 is as follows:

```
PM139 mmmdd hh:mm:ss ssdd TBL PPMBUFFS LEVEL CRITICAL
trouble text
action text
```

Example

An example of log report PM139 follows:

```
PM139 MAR19 15:42:29 3900 TBL PPMBUFFS LEVEL CRITICAL
OVER 90% OF PPM BUFFS UTILIZED. THE VALUE OF OFFICE
PARAMETER PPMBUFFS IN TABLE OFCENG SHOULD BE INCREASED.
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
TBL PPMBUFFS LEVEL CRITICAL	Constant	Indicates trouble in the PPMBUFFS
trouble text	Character string	Identifies the type of trouble in PPMBUFFS
action text	Character string	Indicates additional trouble text line that indicates the action to take

Action

The PM subsystem generates PM139 when the switch does not receive enough PPMBUFFS. When the subsystem generates PM139 the first time, increase the value of office parameter PPMBUFFS in table OFCENG by 50 percent. If the log appears after this increase, set office parameter PPMBUFFS to the maximum value of 244.

PM139 (end)

Associated OM registers

There are no associated OM registers.

PM140**Explanation**

The Peripheral Module (PM) subsystem log report PM140. The subsystem generates PM140 when a request arrives at a busy line module (LM) and aborts. This event occurs when a MAP terminal operator tests a LM when the system tests the same LM.

Format

The log report format for PM140 is as follows:

```
PM140 mmmdd hh:mm:ss ssdd INFO LM_MTCE_REQUEST_ABORTED
      pmid
      CURRENT TEST: testnm          , hhhh, hhhh
      ABORTED TEST: testnm          , hhhh, hhhh
```

Example

An example of log report PM140 follows:

```
PM140 APR01 12:00:00 2112 INFO LM_MTCE_REQUEST_ABORTED LM
      REM1 00
      CURRENT TEST: SYSTEM RTS TASK          , B054, E002
      ABORTED TEST: BKGND 10 MINUTE AUDIT    , 404C, 8001
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO LM_MTCE_REQUEST_ ABORTED	Constant	Indicates LM maintenance request aborted.
pmid	Symbolic text	Refer to definition for PMID in Table I.
CURRENT TEST: testnm	Symbolic text	Identifies test is in progress. Refer to Table LM ACTIONS at the end of this log report.
hhhh, hhhh	0000-FFFF	Provides process identification for current test.

PM140 (end)

(Sheet 2 of 2)

Field	Value	Description
ABORTED TEST: testnm	Symbolic text	Identifies aborted test. Refer to Table LM ACTIONS at the end of this log report.
hhhh, hhhh	0000-FFFF	Provides process identification for aborted test.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information**LM actions**

Action
BKGND TEST FAIL ANALYSIS
UNSOL ACTVTY DROP ANALYSIS
SYSTEM BUSY TASK ON RESET
SYSTEM RTS TASK
BKGND 10 MINUTE AUDIT
STATUS CHANGE
TEST ACTION
MSG OVERFLOW ANALYSIS
DOWNLOAD
FORCE BUSY ACTION
SOFTWARE ERROR
WARM ACTION
CUT OVER RELAY ACTION

PM141**Explanation**

The Peripheral Module (PM) subsystem log report PM141. The subsystem generates PM141 when a more important request arrives at a busy line module (LM) and the current request aborts.

Format

The log report format for PM141 is as follows:

```
PM141 mmmdd hh:mm:ss ssdd INFO LM_MTCE_PRE_EMPTED pmid
      OLD TEST: testnm           , hhhh, hhhh
      NEW TEST: testnm           , hhhh, hhhh
```

Example

An example of log report PM141 follows:

```
PM141 APR01 12:00:00 2112 INFO LM_MTCE_PRE_EMPTED LM REM1 00
      0
      OLD TEST: SYSTEM RTS TASK           , B054, E002
      NEW TEST: BKGND 10 MINUTE AUDIT     , 404C, 8001
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO LM_MTCE_PRE_EMPTED	Constant	Indicates LM maintenance request preempted.
pmid	Symbolic text	Identifies affected PM. Refer to description for PMID in Standard descriptions and equipment identification table.
OLD TEST: testnm		Identifies new test. Refer to Table LM ACTIONS at the end of PM140 log report.
hhhh, hhhh	0000-FFFF	Provides process identification for new test.
NEW TEST: testnm		Identifies aborted test. Refer to Table LM ACTIONS at the end of PM140 log report.
hhhh, hhhh	0000-FFFF	Provides process identification for aborted test.

PM141 (end)

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

PM150**Explanation**

The peripheral module (PM) subsystem log report PM150. The subsystem generates PM150 when the system detects temporary failures on a line drawer.

Format

The log report format for PM150 is as follows:

```
PM150 mmmdd hh:mm:ss ssdd TRAN LINE_DRAWER_TEST
LEN len pec
CTRL: LM site ff b/m TEST: testnm
```

Example

An example of log report PM150 follows:

```
PM150 APR01 12:00:00 2112 TRAN LINE_DRAWER_TEST
LEN MERV 05 1 13 2
CTRL: LM MERV 05 1 TRAN: ACCESS REG
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
TRAN LINE_DRAWER_TEST	Constant	Indicates the system detected temporary failure on line drawer
LEN	Alphanumeric	Control shelf that reports error condition. The control shelf can be the mate if the mate (a takeover condition) controls the bay that contains defective equipment. The control shelf can be the mate when test runs on the secondary Bus Interface (BI) card on the mate bay.
pec	Symbolic text	Refer to table card values below for strings that can be output for central control and PEC. The PEC can remain blank.

PM150 (end)

(Sheet 2 of 2)

Field	Value	Description
CTRL: LM	Symbolic text	The LM or RLM bay that contains line module controller (LMC) that reports defect. Refer to table I.
TEST	(blank), Connected again to RG-Bus, Access Reg	Identifies test performed on drawer

Action

There is no action required. If many temporary failures occur (50 or more in 8 h) on the same card, replace the card.

Associated OM registers

There are no associated OM registers.

PM151**Explanation**

The Peripheral Module (PM) subsystem log report PM151. The subsystem generates PM151 when the system detects a failure on a line drawer.

Format

The log report format for PM151 is as follows:

```
PM151 mmmdd hh:mm:ss ssdd FAIL LINE_DRAWER_TEST
      LEN len pec
      CTRL: LM site ff b/m TEST: testnm
```

Example

An example of log report PM151 follows:

```
PM151 APR01 12:00:00 2112 FAIL LINE_DRAWER_TEST
      LEN HOST 00 1 00 01 LINE
      CTRL: LM HOST 00 1   TEST: Test Reg Wr
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
FAIL LINE_DRAWER_TEST	Constant	Indicates failure on line drawer.
LEN	Symbolic text	Indicates the control shelf that reported the error condition. The control shelf can be the mate if the mate (takeover condition) controls the bay that contains the defective equipment. The control shelf can be the mate if test runs on the secondary bus interface (BI) card on mate bay. Refer to Table Card Values at the end of log PM150 for values.
pec	Symbolic text	Refer to Table Card Values at the end of log PM150. The strings that can be output for CC and PEC appear in this table. The PEC can remain blank.

PM151 (end)

(Sheet 2 of 2)

Field	Value	Description
CTRL: LM	Symbolic text	The LM or RLM bay that contains line module controller (LMC) that reports errors.
TEST	Representative text	Identifies test performed on drawer. Refer to Table DRAWER TESTS at the end of this log report.

Action

Perform manual test on drawer. If test passes, there is no action required. If test fails, refer to *Lines, Trunks, and Peripherals Line Alarm and Performance Monitoring Procedures*. This document describes step-by-step procedures for PM maintenance.

Associated OM registers

There are no associated OM registers.

Additional information

The following is a list of drawer tests:

- Drawer Feed Interrupt
- Drwr RG-Bus Relay
- RSM Diagnostic
- F/W Testing Unequip Drwr
- Rel0 not on active RG
- Disconnected from RB-Bus
- Test Reg Wr

PM152**Explanation**

The peripheral module (PM) subsystem log report PM152. The subsystem generates PM152 when a line drawer is made busy.

Format

The log report format for PM152 is as follows:

```
PM152 mmmdd hh:mm:ss ssdd SYSB LINEDRAWER LEN len pec
      CTRL: LM site ff b/m FROM: statnm
```

Example

An example of log report PM152 follows:

```
PM152 APR01 12:00:00 2112 SYSB LINEDRAWER LEN HOST 00 1 00 01
      2X16
      CTRL: LM HOST 00 1   FROM: SYSB
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
SYSB LINEDRAWER	Constant	Indicates the subsystem busied a line drawer
LEN	Symbolic text	Control shelf that reports error condition. The control shelf can be the mate if the mate (takeover condition) that contains the bay controls the defective equipment. The control shelf can be the mate if test runs on the secondary bus interface (BI) card on the mate bay. Refer to table card values at the end of log PM150 for the values.
pec	Symbolic text	Refer to table card values at the end of log PM150. This table indicates strings that can be output for CC and PEC. The PEC can remain blank.

PM152 (end)

(Sheet 2 of 2)

Field	Value	Description
CTRL: LM	Symbolic text	Line module (LM) drawer that contains the state of the circuit that changes
FROM	OK, SYSB	Indicates previous drawer state

Action

Perform the manual test on the drawer. If the test passes, return to service (RTS). If the test fails, refer to *Lines, Trunks, and Peripherals Card Replacement Procedures* for step-by-step procedures for PM maintenance.

Associated OM registers

There are no associated OM registers.

PM160

Explanation

The peripheral module (PM) subsystem log report PM160. The subsystem generates PM160 when the PM subsystem detects a temporary failure on a line module (LM). The subsystem generates PM160 when the PM subsystem detects a temporary failure on a remote line module (RLM) control pack.

Format

The log report format for PM160 is as follows:

```
PM160 mmmdd hh:mm:ss ssdd TRAN LM_CTRL_PACK_TEST
      LM len pec
      CTRL: LM site ff b/m TEST: testnm
```

Example

An example of log report PM160 follows:

```
PM160 APR01 12:00:00 2112 TRAN LM_CTRL_PACK_TEST
      LM REM1 00 1 01 02 2X05
      CTRL: LM REM1 00 1    TEST: RING GEN SHUTBACK
```

PM160 (continued)**Field descriptions**

The following table describes each field in the log report:

Field	Value	Description
TRAN LM_CTRL_PACK_TEST	Constant	Indicates a failure detected on LM or RLM control pack
LM	Symbolic text	Control shelf that reported the error condition. The control shelf can be the mate if the mate (takeover condition) controls the bay with the defective equipment. The control shelf can be the secondary bus interface (BI) card on a mate bay. CC values cc are: • SHELF Indicates fault cannot isolate to single card • 01 indicates failure in ringing generator 0 • 02 indicates failure in ringing generator 1
pec	Symbolic text	Product engineering code (PEC) for circuit pack. Failure in ringing generator. If cc value is SHELF, PEC remains blank.
CTRL: LM	Symbolic text	The LM or RLM bay has line module controller (LMC) that reports the error.
TEST	Symbolic text	Test performed on control pack. Refer to table temporary failures below.

The following table lists temporary failure tests.

Transient failure tests
SP CONTROL WORD LOOPBACK
ACTIVITY SCAN
RING GEN SHUTBACK

Action

There is no action required. If several temporary failures occur on the same card, replace the card.

Associated OM registers

There are no associated OM registers.

PM161

Explanation

The peripheral module (PM) subsystem log report PM161. The subsystem generates PM161 when the subsystem detects a diagnostic failure on a line module (LM). The subsystem generates this report when the subsystem detects a failure on remote line module (RLM) control pack.

Format

The log report format for PM161 is as follows:

```
PM161 mmmdd hh:mm:ss ssdd FAIL LM_CTRL_PACK_TEST LM len  
pec  
CTRL: LM site ff b/m TEST: testnm
```

Example

An example of log report PM161 follows:

```
PM161 APR01 12:00:00 2112 FAIL LM_CTRL_PACK_TEST LM HOST 00  
1 00 01 2X05  
CTRL: LM HOST 00 1 TEST: RING GEN SHUTBACK
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
PEC	Symbolic text	Product engineering code (PEC) for circuit pack. Failure in ringing generator. This field appears when value of CC in SHELF PEC is blank.
CTRL: LM	Symbolic text	The LM or RLM bay with line module controller (LMC) that reports the fault.
TEST	Representative text	Test performed on control pack. Refer to table fail messages and table REX fail messages at end of log report.

PM161 (continued)

The following table lists failure messages:

Fail messages (Sheet 1 of 3)

Messages
SCAN LINES
DRAWER TEST
MOST DRAWERS FAIL
AUDIBLE TONES
RGI INDICATOR STATUS
EXCESS VOLTAGE DETECTED
RG TEST ABORTED
INACTIVE RG, IND STAT TST NOT DONE
RG TEST VIA MTA
ALL RING GEN FAULTY
DRWR FEED INTERRUPT
DRWR RG_BUS RELAY
F/W TESTING UNEQUIP DRWR
REL0 NO ON ACTIVE RG
RECONNECTED TO RG_BUS
DISCONNECT FROM RG BUS
RSM DIAGNOSTIC
RSM TEST
F/W TESTING UNEQUIP DRWR
TEST REG WRITE
TEST REG WR
FAILED TO RAISE ACTIVITY
COMMUNICATION FAILURE WITH LM

PM161 (continued)

Fail messages (Sheet 2 of 3)

Messages
COULD NOT TAKEOVER MATE
FAILED TO RTS LINES
FAILED TO TAKEOVER MATES RG
FAILED TO LOWER ACTIVITY
DEAD LM
FAILED TO SEND STATIC DATA TO LM
CC-RLM COMM CHECK FLAG
RTS TESTS FAIL
TO SYSTEM BUSY LM
BASIC SANITY
MSG BUFFER
IBML TEST
NO RESPONSE
ACCESS TO DRAWERS
CONTROL CARD TEST
CLOCK SWITCH COUNT
LM TEST
RESET INHB_MATE_REPORT_FLAG
RING GEN VOLTAGE
RINGING GENERATOR TEST
ROUTINE EXERCISE
SYNC FAIL: INTERBAY T1
INTERBAY T1 LOOPBACK
LOF/SLP OS LIMIT EXCEEDED

PM161 (continued)

Fail messages (Sheet 3 of 3)

Messages
NO RESOURCES TO SYSBUSY LM
NO RESOURCES TO RECOVER STATUS
NO RESOURCES TO BCS SWACT BSY
LINK TEST FAILURE

The following table lists REX fail messages:

REX fail messages (Sheet 1 of 2)

Messages
REX insv test failed
mate REX insv test failed
HDLC link switch failed
mate HDLC link switch failed
takeover failed
mate takeover failed
REX takeover test failed
mate REX takeover test failed
drawer fault
mate drawer fault
tone fault
mate tone fault
ringing fault
mate ringing fault
RG fault
mate RG fault
takeback failed

PM161 (end)

REX fail messages (Sheet 2 of 2)

Messages
mate takeback failed
DCMR link test failed
mate DCMR link test failed
interbay link test failed
interbay link test failed

Action

There is no action required. If several test failures occur on the same card, replace the card.

Associated OM registers

There are no associated OM registers.

PM163**Explanation**

The peripheral module (PM) subsystem log report PM163. The subsystem generates PM163 when a redundant circuit changes state.

Format

The log report format for PM163 is as follows:

```
PM163 mmmdd hh:mm:ss ssdd SYSB LM_CTRL_PACK LM len pec
CTRL: LM site ff b/m FROM: statnm
```

Example

An example of log report PM163 follows:

```
PM163 APR01 12:00:00 2112 SYSB LM_CTRL_PACK LM REM1 00 1
01 2X05
CTRL: LM REM1 00 1 FROM: OK
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
SYSB LM_CTRL_PACK	Constant	Indicates redundant circuit changed state
LM	Symbolic text	Indicates the control shelf that reported the fault condition. This control shelf can be the mate if the mate (takeover condition) controls the bay that contains defective equipment. The control shelf can be the secondary bus interface (BI) card on the mate bay. Values for CC are : • SHELF indicates system cannot isolate error to single card. • 01 indicates failure in ringing generator 0. • 02 indicates failure in ringing generator 1.

PM163 (end)

(Sheet 2 of 2)

Field	Value	Description
pec	Symbolic text	Identifies product engineering code (PEC) for circuit pack. Indicates failure in ringing generator. If value of CC is SHELF, PEC remains blank.
CTRL: LM	Symbolic text	Line module (LM) or remote line module (RLM) bay that contains line module controller (LMC) that reports the fault.
FROM	OK MANB, OFFL, UNEQ	Indicates previous control pack state.

Action

Perform manual test on drawer. If test passes, there is no action required. If test fails, see maintenance procedures.

Associated OM registers

There are no associated OM registers.

PM166

Explanation

The Peripheral Module (PM) subsystem log report PM166. The subsystem generates PM166 when the system downloads a remote line module (RLM) with emergency stand alone (ESA). The subsystem downloads this data from the RLM host office. Manual requests from the host office cause the system to download RLM with ESA data. The system downloads all ESA feature RLM automatically with ESA data from the host office at approximately 0200 hours each day.

Format

The log report format for PM166 is as follows:

PM166 mmmdd hh:mm:ss ssdd INFO ESA_DATA_LOAD

Example

An example of log report PM166 follows:

PM166 APR01 12:00:00 2112 INFO ESA_DATA_LOAD

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO ESA_DATA_LOAD	Constant	Indicates RLM downloaded with ESA data from RLM host office.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

PM167

Explanation

The Peripheral Module (PM) subsystem log report PM167. The subsystem generates PM167 when an attempt to download emergency stand-alone (ESA) data occurs. The attempt to download ESA data from the host office to a remote line module (RLM) fails.

Format

The log report format for PM167 is as follows:

```
PM167 mmmdd hh:mm:ss ssdd FAIL ESA_DATA_LOAD  
reastxt
```

Example

An example of log report PM167 follows:

```
PM167 APR01 12:00:00 2112 FAIL ESA_DATA_LOAD  
ESA LOADER BUSY
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL ESA_DATA_LOAD	Constant	Indicates attempt to download ESA data failed.
reastxt	Character string	Provides the cause for failure.

Action

If the attempt to download of ESA data fails and a request for manual action occurs, repeat the request (ESALOAD command).

Contact the next level of support if the following conditions occur:

- the action fails the second time
- an automatic request to download occurs (at approximately 0200 hours each day)

Associated OM registers

There are no associated OM registers.

PM168

Explanation

The Peripheral Module (PM) subsystem log report PM168. The subsystem generates PM168. It generates it when a directory number (DN) in table Emergency stand-alone (ESA) does not equal the DN for any line on the remote line module (RLM). The subsystem generates this report during download of ESA data from the host office to a RLM.

Format

The log report format for PM168 is as follows:

```
PM168 mmmdd hh:mm:ss ssdd FAIL ESA_DATA_LOAD  
BAD DN IN ESA TABLE: dn
```

Example

An example of log report PM168 follows:

```
PM168 APR01 12:00:00 2112 FAIL ESA_DATA_LOAD  
BAD DN IN ESA TABLE: 3652646
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
FAIL ESA_DATA_LOAD	Constant	Indicates DN in customer data table ESA does not equal any DN at RLM.
BAD DN IN ESA TABLE	Symbolic text	Provides bad DN.

Action

Correct the DN in customer data table ESA.

Associated OM registers

There are no associated OM registers.

PM169

Explanation

The Peripheral Module (PM) subsystem log report PM119. The subsystem generates PM119 when the subsystem takes operational measurement (OM) counts for a line module (LM) at a remote site. The subsystem takes OM counts for a LM when the LM is in the emergency stand-alone (ESA) mode.

Format

The log report format for PM169 is as follows:

```
PM169 mmmdd hh:mm:ss ssdd INFO ESA_OM_STATS
      ORIGATT nn, TERMATT nn,
      TERMSUCC nn PREFIX USAGE  n n n n n n n n n n n n n n n
      RCVR UNAVAIL nn,RING BLK nn,RING FLT nn, COIN FLT nn,
      PRETRIP nn
```

Example

An example of log report PM169 follows:

```
PM169 APR01 12:00:00 2112 INFO ESA_OM_STATS
      ORIGATT 23, TERMATT 5,
      TERMSUCC 1 PREFIX USAGE  0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
      RCVR UNAVAIL 0,RING BLK 0,RING FLT 0, COIN FLT 0,
      PRETRIP 0
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO ESA_OM_STATS	Constant	Indicates OM counts generated for LM.
ORIGATT	0-99	Provides count of origination attempts.
TERMATT	0-99	Provides count of termination attempts.
TERMSUCC	0-99	Provides count of terminating completions.
PREFIX USAGE	0-9	Provides use counts for each of 16 entries in prefix table.
RCVR UNAVAIL	0-99	Provides count of reoriginations because of digitone (DT) receiver.

(Sheet 2 of 2)

Field	Value	Description
RING BLK	0-99	Provides count of ringing blocks.
RING FLT	0-99	Provides count of ringing faults.
COIN FLT	0-99	Provides count of coin faults.
PRETRIP	0-99	Provides count of pretrips.

Action

Process as for other OM data.

Associated OM registers

There are no associated OM registers.

PM171

Explanation

The Peripheral Module (PM) subsystem log report PM171. The subsystem generates PM171 to display the present operational measurement (OM) counts for an XMS-based PM (XPM). This report displays the current OM counts for an XPM that exits the emergency stand-alone (ESA) mode.

Format

The log report format for PM171 is as follows:

PM171 (continued)

PM171 mmmdd hh:mm:ss ssdd INFO XPM_ESA_EXIT_OM_STATS

RCC n Unit m

ESA ENTER REASON : C_Side message links down, VALUE : n

ESA entry time <hh>:<mm>:<ss> Aggregate time in ESA : <at> mins

ESA entrymethod ENTRY/exitmethod EXIT

CALLS_UP_ON_ENTRY nn

CALLS_UP_ON_EXIT nn

TRANS_DROP_ON_EXIT nn

LINES:

ORIG_ATT_TOTAL nn

ORIG_BLK n, ORIG_ABAND n, DIAL_ERR n,

ORIG_SB n, XLA_ERR n, DIALED_NUM_INV n

INTRA:

IA_TERM_ATT_TOTAL nn

IA_TERM_SUC nn, IA_TERM_BLK n, IA_TERM_BSY n,

IA_TERM_SB n, IA_TERM_NO_ANS n

INTER:

IE_TERM_ATT_TOTAL nn

IE_TERM_SUC nn, IE_NO_RESP n, IE_TERM_BLK n,

IE_TERM_BSY n, IE_TERM_SB n, IE_TERM_UNAVAIL n,

IE_TERM_NO_ANS n

COIN_FLT n, RING_BLK n, TEST_REG n,

CON_FAIL n, PRE_TRIP nn

TRUNKS:

ORIG_ATT_TOTAL nn

ORIG_BLK n, ORIG_ABAND n, ORIG_SB n,

XLA_ERR n, DIALED_NUM_INV n

INTRA:

IA_TERM_ATT_TOTAL nn

IA_TERM_SUC n, IA_TERM_BLK n, IA_TERM_BSY n,

IA_TERM_SB n, IA_TERM_NO_ANS n

INTER:

IE_TERM_ATT_TOTAL nn

IE_TERM_SUC n, IE_NO_RESP n, IE_TERM_BLK n,

IE_TERM_BSY n, IE_TERM_SB n, IE_TERM_UNAVAIL n,

IE_TERM_NO_ANS n

COMBINED:

RING_TMO nn, NO_IPC nn

PREFIX USAGE preftxt

HNPAT USAGE hnpatxt

PM171 (continued)

Example

An example of log report PM171 follows:

PM171 (continued)

```

PM171 OCT24 09:58:30 3714 INFO XPM_ESA_EXIT_OM_STATS
RCC JRSC 1 Unit 0
ESA ENTER REASON : Manual entry, VALUE : 4
ESA entry time: 09:40:22 Aggregate time in ESA :18 mins
ESA WARM ENTRY/warm EXIT
CALLS_SURVIVING_WARM_ENTRY      0
CALLS_SURVIVING_EXIT            0
TRANSIENT_CALLS_DROPPED_ON_EXIT 0
STABLE_CALLS_DROPPED_ON_EXIT    0
LINES:
ORIG_ATT_TOTAL 0
ORIG_BLK 0, ORIG_ABAND 6, DIAL_ERR 0,
ORIG_SB 0, XLA_ERR 0, DIALED_NUM_INV 0
INTRA:
IA_TERM_ATT_TOTAL 0
IA_TERM_SUC 0, IA_TERM_BLK 0, IA_TERM_BSY 0,
IA_TERM_SB 0, IA_TERM_NO_ANS 0
INTER:
IE_TERM_ATT_TOTAL 0
IE_TERM_SUC 0, IE_NO_RESP 0, IE_TERM_BLK 0,
IE_TERM_BSY 0, IE_TERM_SB 0, IE_TERM_UNAVAIL 0
IE_TERM_SUC 0, IE_NO_RESP 0, IE_TERM_BLK 0,
IE_TERM_BSY 0, IE_TERM_SB 0, IE_TERM_UNAVAIL 0
IE_TERM_NO_ANS 0
COIN_FLT 0, RING_BLK 0, TEST_REG 0,
CON_FAIL 0, PRE_TRIP 0
TRUNKS:
ORIG_ATT_TOTAL 0
ORIG_BLK 0, ORIG_ABAND 0, ORIG_SB 0,
XLA_ERR 0, DIALED_NUM_INV 0
INTRA:
IA_TERM_ATT_TOTAL 0
IA_TERM_SUC 0, IA_TERM_BLK 0, IA_TERM_BSY 0,
IA_TERM_SB 0, IA_TERM_NO_ANS 0
INTER:
IE_TERM_ATT_TOTAL 0
IE_TERM_SUC 0, IE_NO_RESP 0, IE_TERM_BLK 0,
IE_TERM_BSY 0, IE_TERM_SB 0, IE_TERM_UNAVAIL 0,
IE_TERM_NO_ANS 0
IE_TERM_BSY 0, IE_TERM_SB 0, IE_TERM_UNAVAIL 0,
IE_TERM_NO_ANS 0
COMBINED:
RING_TMO 0, NO_IPC 0
PREFIX USAGE
HNPA USAGE 0 0 0 0 0 0 0 0
            0 0 0 0 0 0 0 0

```

PM171 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 5)

Field	Value	Description
INFO XPM_ESA_EXIT_OM_STATS	Constant	Indicates the current OM counts for an XPM that exits ESA.
RCC	Integers	Indicates the remote cluster controller (RCC).
Unit	Integers	Indicates the unit.
ESA ENTER REASON	Symbolic text	Indicates the ESA enter cause. For example, "manual entry."
VALUE	Integers	Indicates the value.
hh, mm, ss	hh=hour,mm=minute,ss=second	Indicates time RCC last entered ESA.
at	0-MAXINT	Indicates total time RCC was in ESA.
ESA entrymethod ENTRY/ exitmethod EXIT	Symbolic text	Indicates the entry and exit methods.
CALLS_UP_ON_ENTRY	0-32766 or OVERFLOW	Indicates number of stable calls on ESA entry.
CALL_UP_ON_EXIT	0-32766 or OVERFLOW	Indicates number of stable calls on exit.
CHNL_BLK	0-32766 or OVERFLOW	Indicates channel block count in dialing state.
COIN_FLT	0-32766 or OVERFLOW	Indicates coin failures.
COMBINED	Constant	Indicates that grouped measurements follow.
CON_FAIL	0-32766 or OVERFLOW	Indicates continuous test failures while ringing.
DIAL_ERR	0-32766 or OVERFLOW	Indicates error in Digitone (DGT) or data port (DP) dialing.

PM171 (continued)

(Sheet 2 of 5)

Field	Value	Description
DIALED_NUM_INV	0-32766 or OVERFLOW	Indicates the dialed number was not on the same RCC or the spouse RCC. Can indicate that an interval occurred when the subscriber dialed. (subscriber took too long to dial number).
HNPB USAGE	Refer to Customer group 0 in Table HNPB in customer data schema.	Indicates use counts for each entry in Customer group 0 in table HNPB.
IA_TERM_ATT_TOTAL	0-32766 or OVERFLOW	Indicates termination attempts for intra-switched calls.
IA_TERM_BLK	0-32766 or OVERFLOW	Indicates intra-switched calls blocked because resources not available.
IA_TERM_BSY	0-32766 or OVERFLOW	Indicates intra-switched calls with non_idle terminations. For example, busy, system busy, or abandoned.
IA_TERM_NO_ANS	0-32766 or OVERFLOW	Indicates intra-switched calls not answered. Note: this field is always pegged unless the ultimate terminator (line) answers.
IA_TERM_SB	0-32766 or OVERFLOW	Indicates intra-switched calls with terminations that went system busy while the system processed the call. This condition normally occurs because of ring faults.
IA_TERM_SUC	0-32766 or OVERFLOW	Indicates intra-switched calls terminated correctly.
IE_NO_RESP	0-32766 or OVERFLOW	Indicates no response from spouse RCC (links down, etc.).
IE_TERM_ATT_TOTAL	0-32766 or OVERFLOW	Indicates termination attempts for inter-switched calls.
IE_TERM_BLK	0-32766 or OVERFLOW	Indicates inter-switched calls blocked because resources not available.

PM171 (continued)

(Sheet 3 of 5)

Field	Value	Description
IE_TERM_BSY	0-32766 or OVERFLOW	Indicates inter-switched calls with terminations that were non_idle (busy, system busy, abandoned).
IE_TERM_NO_ANS	0-32766 or OVERFLOW	Indicates inter-switched calls not answered. Note: this field is always pegged unless the ultimate terminator (line) answers.
IE_TERM_SB	0-32766 or OVERFLOW	Indicates inter-switched calls whose terminations went system busy while the system processes the call (normally because of ring faults).
IE_TERM_SUC	0-32766 or OVERFLOW	Indicates termination completions for inter-switched calls (number of calls answered).
IE_TERM_UNAVAIL	0-32766 or OVERFLOW	Indicates inter-switched calls whose terminations were manually busied or not equipped (not available).
LINES	Constant	Indicates line information.
LINK_SB	0-32766 or OVERFLOW	Indicates line system busy conditions.
NO_IPC	0-32766 or OVERFLOW	Indicates a condition of no inter-peripheral connection (IPC) buffer is available.
ORIG_ABAND	0-32766 or OVERFLOW	Indicates call originator terminated call and did not dial any number. Can indicate call originator did not complete dial and hung up.
ORIG_ATT	0-32766 or OVERFLOW	Indicates origination attempts.
ORIG_BLK	0-32766 or OVERFLOW	Indicates resources not available for origination.
ORIG_SB	0-32766 or OVERFLOW	Indicates originating facility goes system busy.

PM171 (continued)

(Sheet 4 of 5)

Field	Value	Description
PRE_TRIP	0-32766 or OVERFLOW	Indicates ringing fault message count in talking state.
PREFIX USAGE	Integers	Indicates use counts for each of 16 entries in Customer group 0, Table Prefix (ie. plain ordinary telephone service (POTS) lines prefix table). If no prefix entry defined, this field remains blank. Refer to Customer group 0, table Prefix in the data schema section of the <i>Translations Guide</i> .
RING_BLK	0-32766 or OVERFLOW	Indicates ringing fault message count in ringing state (with error byte set to ring block).
RING_TMO	0-32766 or OVERFLOW	Indicates ringing time outs.
STABLE_DROP_ON_EXIT	0-32766 or OVERFLOW	Indicates number of stable calls taken down on ESA exit.
TERM_ATT	0-32766 or OVERFLOW	Indicates terminating attempts. (Sends ringing supervision to phone.)
TERM_BLK	0-32766 or OVERFLOW	Indicates channel block count in ringing state.
TERM_SUC	0-32766 or OVERFLOW	Indicates termination completions. (Call answered.)
TEST_REG	0-32766 or OVERFLOW	Indicates ringing fault message count in ringing state. The error byte is set to test for register failure.
TRANS_DROP_ON_EXIT	0-32766 or OVERFLOW	Indicates number of transitory calls taken down on ESA exit.
TRKS_SB	0-32766 or OVERFLOW	Indicates trunks were system busy because too many errors occur.
TRUNKS	Constant	Indicates trunk information.

PM171 (end)

(Sheet 5 of 5)

Field	Value	Description
UNIT	0, 1	Identifies active PM unit. If the PM is of type ESA, the value of unit is always 0.
VALUE	0-99	Provides an ESA enter cause ID.
XLA_ERR	0-32766 or OVERFLOW	Indicates translation errors.

Action

Send this log to your traffic operator or the next level of support.

Associated OM registers

There are no associated OM registers.

PM172

Explanation

The peripheral module (PM) subsystem generates this report when it first discovers the remote cluster controller (RCC) in the emergency stand-alone (ESA) feature. This report gives the ESA exit recommended actions.

Format

The format for log report PM172 follows:

```
PM172 mmmdd hh:mm:ss ssdd INFO XPM_IN_ESA <pm_name>  
Node: <ns>, Unit0 <ai>: <us>, Unit1 <ai>: <us>  
PM discovered in ESA  
ESA_EXIT_METHOD
```

Example

Examples of log report PM172 follow:

Example 1

```
PM172 DEC14 09:58:30 3725 INFO XPM_IN_ESA RCC JRSC 1  
Node: SysB, Unit0 Act: SysB, Unit1 Inact: CBsy  
PM discovered in ESA  
Exit pending RSC_XPMESAEXIT countdown
```

Example 2

```
PM172 DEC14 09:58:30 3725 INFO XPM_IN_ESA RCC JRSC 1  
Node: SysB, Unit0 Act: SysB, Unit1 Inact: CBsy  
PM discovered in ESA  
Manual ESA Exit required: try RTS WARMEXIT
```

PM172 (continued)**Field descriptions**

The following table explains each of the fields in the log report:

Field	Value	Description
PM_NAME	PM_TYPE, SITE_INDEX, EXT_PMNO	Indicates the PM name and number of the RCC in ESA. For example, PM_TYPE is RCC, SITE_INDEX is the site name, and EXT_PMNO is a number from 0 through 255.
ns	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv	Indicates the node status of RCC.
ai	Act, Inact	Indicates active and inactive units of RCC.
us	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv	Indicates status of RCC units.
ESA_EXIT_METHOD	Exit pending RSC_XPMESAEXIT countdown or Manual ESA Exit required: try RTS WARMEXIT	Indicates how ESA is to be exited.

Action

If a manual ESA exit is required, post the RCC at the Maintenance Administration Position (MAP) and attempt to exit ESA using the RETURN TO SERVICE (RTS) command with the appropriate exit parameter.

Associated OM registers

None

PM173

Explanation

The peripheral module (PM) subsystem generates this report when an emergency stand-alone (ESA) exit is attempted for the remote cluster controller (RCC) in ESA. This report shows if the exit was manually- or system-initiated.

Format

The format for log report PM173 follows:

```
PM173 mmmdd hh:mm:ss ssdd INFO ESA_EXIT_ATTEMPT
      <pm_name>
      Node: <ns>, Unit0 <ai>: <us>, Unit1 <ai>: <us>
      <ESA_EXIT_METHOD> ESA Exit started by <username>
```

Example

Examples of log report PM173 follow:

Example 1

```
PM173 DEC14 11:58:30 3735 INFO ESA_EXIT_ATTEMPT RCC JRSC 1
      Node: SysB, Unit0 Act: SysB, Unit1 Inact: CBsy
      Warm ESA Exit attempt started by SYSTEM
```

Example 2

```
PM173 DEC14 11:58:30 3736 INFO ESA_EXIT_ATTEMPT RCC JRSC 1
      Node: SysB, Unit0 Act: SysB, Unit1 Inact: CBsy
      Warm ESA Exit attempt started by USERNAME: ESAHMI
```

Example 3

```
PM173 DEC14 11:58:30 3737 INFO ESA_EXIT_ATTEMPT RCC JRSC 1
      Node: SysB, Unit0 Act: SysB, Unit1 Inact: CBsy
      Cold ESA Exit attempt started by USERNAME: ESAHMI
```

PM173 (continued)**Field descriptions**

The following table explains each of the fields in the log report:

Field	Value	Description
PM_NAME	PM_TYPE, SITE_INDEX, EXT_PMNO •	Indicates the PM name and number of the RCC in ESA. For example, PM_TYPE is RCC, SITE_INDEX is the site name, and EXT_PMNO is a number from 0 through 255.
ns	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv •	Indicates the node status of RCC.
ai	Act, Inact •	Indicates active and inactive units of RCC.
us	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv •	Indicates status of RCC units.
ESA_EXIT_METHOD	Warm or Cold	Indicates how ESA is to be exited.
Username	Username or SYSTEM	Indicates user that initiated the ESA exit.

PM173 (end)

Action

If the ESA exit fails, forward this log to the next level of maintenance.

Associated OM registers

None

PM174

Explanation

The peripheral module (PM) subsystem generates this report when the remote cluster controller (RCC) fails an emergency stand-alone (ESA) exit. This report displays the reason for the exit failure.

Format

The format for log report PM174 follows:

```
PM174 mmmdd hh:mm:ss ssdd INFO ESA_EXIT_FAILED <pm_name>  
Node: <ns>, Unit0 <ai>: <us>, Unit1 <ai>: <us>  
<ESA_EXIT_METHOD> ESA Exit failed  
<PMFR>
```

Example

Examples of log report PM174 follow:

Example 1

```
PM174 DEC14 12:07:01 3745 INFO ESA_EXIT_FAILED RCC JRSC 1  
Node: SysB, Unit0 Act: SysB, Unit1 Inact: CBsy  
Warm ESA Exit failed  
Failed to open link - cside
```

Example 2

```
PM174 DEC14 12:07:01 3746 INFO ESA_EXIT_FAILED RCC JRSC 1  
Node: SysB, Unit0 Act: SysB, Unit1 Inact: CBsy  
Cold ESA Exit failed  
No response from ROM-RAM query
```

PM174 (continued)

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
PM_NAME	PM_TYPE, SITE_INDEX, EXT_PMNO	Indicates the PM name and number of the RCC in ESA. For example, PM_TYPE is RCC, SITE_INDEX is the site name, and EXT_PMNO is a number from 0 through 255.
ns	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv •	Indicates the node status of RCC.
ai	Act, Inact •	Indicates active and inactive units of RCC.
us	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv •	Indicates status of RCC units.
ESA_EXIT_METHOD	Warm or Cold	Indicates how ESA is to be exited.
PMFR	PM_FAILURE_REASON	Indicates the reason for the ESA failure.

Action

Forward this log to the next level of maintenance.

Associated OM registers

None

Additional information

An ESA exit failure log should not be generated if the craftsperson uses the EXITBYPASS option and the RETURN TO SERVICE (RTS) fails.

PM175

Explanation

The peripheral module (PM) subsystem generates this report when the emergency stand-alone (ESA) firewall created by the Remote Switching Center (RSC) ESA Human-Machine Interface (HMI) Robustness feature is bypassed by an HMI request. This report shows when the ESA exit bypass was initiated and who initiated it.

If the bypass is executed successfully, an outage will occur as the remote cluster controller (RCC) is forced out of ESA mode and ESA operational measurement (OM) data is lost.

Format

The format for log report PM175 follows:

```
PM175 mmmdd hh:mm:ss ssdd INFO ESA_EXIT_BYPASSED
<pm_name>
  Node: <ns>, Unit0 <ai>: <us>, Unit1 <ai>: <us>
  <bypass_command> initiated by USERNAME: <username>
  All stable calls and ESA OM data have been lost.
```

Example

Examples of log report PM175 follow:

Example 1

```
PM175 DEC14 12:22:01 3755 INFO ESA_EXIT_BYPASSED RCC JRSC 1
  Node: ManB, Unit0 Act: ManB, Unit1 Inact: ManB
  PMRESET EXITBYPASS initiated by USERNAME: ESAHMI
  All stable calls and ESA OM data have been lost.
```

Example 2

```
PM175 DEC14 12:22:01 3756 INFO ESA_EXIT_BYPASSED RCC JRSC 1
  Node: ManB, Unit0 Act: ManB, Unit1 Inact: ManB
  RTS EXITBYPASS initiated by USERNAME: ESAHMI
  All stable calls and ESA OM data have been lost.
```

Example 3

```
PM175 DEC14 12:22:01 3757 INFO ESA_EXIT_BYPASSED RCC JRSC 1
  Node: ManB, Unit0 Act: ManB, Unit1 Inact: ManB
  RECOVER EXITBYPASS initiated by USERNAME: ESAHMI
  All stable calls and ESA OM data have been lost.
```


PM175 (continued)**Field descriptions**

The following table explains each of the fields in the log report:

Field	Value	Description
PM_NAME	PM_TYPE, SITE_INDEX, EXT_PMNO	Indicates the PM name and number of the RCC in ESA. For example, PM_TYPE is RCC, SITE_INDEX is the site name, and EXT_PMNO is a number from 0 through 255.
ns	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv	Indicates the node status of RCC.
ai	Act, Inact	Indicates active and inactive units of RCC.
us	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv	Indicates status of RCC units.
BYPASS_COMMAND	RMRESET, RTS, or RECOVER	Indicates which user initiated the bypass.
USERNAME	Username	Indicates user initiated the bypass command.

Action

Forward this log to the next level of maintenance.

1-458 Log reports

PM175 (end)

Associated OM registers

None

PM176

Explanation

The Peripheral Module (PM) subsystem generates this report when the Remote Switching Center (RSC) Emergency Stand-Alone (ESA) Human-Machine Interface (HMI) feature rejects a detrimental system request. This report shows when the ESA firewall denies either a system-initiated or manual RESET, RESTART, or JAM request sent to the remote cluster controller (RCC) in ESA mode.

The ESA firewall will not allow maintenance if the bypass option is specified. The PM176 log will be followed by a SWER to obtain a traceback of the calling module and procedures.

Format

The format for log report PM176 follows:

```
PM176 mmmdd hh:mm:ss ssdd INFO MTC_REJECTED <pm_name>  
Node: <node>, Unit0 <ai>: <us>, Unit1 <ai>: <us>  
ESA Firewall rejected maintenance request.  
Message: <msg> Request: <reqt> Element: <elemno>
```

Example

An example of log report PM176 and an explanation of the values in the Message, Request, and Element fields follows:

```
PM176 DEC14 12:45:17 3765 INFO MTC_REJECTED RCC JRSC 1  
Node: SysB, Unit0 Act: SysB, Unit1 Inact: CBSy  
ESA Firewall rejected maintenance request.  
Message: 0007 Request: 0032 Element: 0068
```

The example PM176 log translates as follows:

Message: 0007 = MRT_RESTART
Request: 0032 = MT_MRT_RESPONSE
Element: 0068 = SWACT_ELEMNO

PM176 (continued)

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
PM_NAME	PM_TYPE, SITE_INDEX, EXT_PMNO	Indicates the PM name and number of the RCC in ESA. For example, PM_TYPE is RCC, SITE_INDEX is the site name, and EXT_PMNO is a number from 0 through 255.
ns	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv	Indicates the node status of RCC.
ai	Act, Inact	Indicates active and inactive units of RCC.
us	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv	Indicates status of RCC units
msg	0-31	Indicates message type captured by the ESA firewall.
reqt	0-255	Indicates request type captured by the ESA firewall.
elemno	0-32767	Indicates the element number of the maintenance request.

Action

If this log is generated as a result of system maintenance, forward the log to BNR design support.

Associated OM registers

None

PM177

Explanation

The peripheral module (PM) subsystem generates this report when the remote cluster controller (RCC) inactive unit messaging link is restored prior to the active unit's link and an emergency stand-alone (ESA) warm exit is not possible. A warm ESA exit may not be possible because 1) a warm SWACT to exit is not possible or 2) the ESA status of the RCC is unknown because the inactive unit is at ROM and communication to the active unit cannot be established.

Log report PM177 replaces the log report PM181, which was generated when an RCC was found in ESA but could not warm SWACT to exit.

Format

The format for log report PM177 follows:

```
PM177 mmmdd hh:mm:ss ssdd INFO XPM_INACT_RECOVERY
<pm_name>
Node: <ns>, Unit0 <ai>: <us>, Unit1 <ai>: <us>
Recovery of the Inactive unit <recovery_method> has started.
```

Example

Examples of log report PM177 follow:

Example 1

```
PM177 DEC14 12:50:22 3775 INFO XPM_INACT_RECOVERY RCC JRSC 0
Node: CBSy, Unit0 Inact: SysB (CSLink RTS), Unit1 Act:
CBSy
Recovery of the Inactive unit for ESA exit has started.
```

Example 2

```
PM177 DEC14 12:50:22 3776 INFO XPM_INACT_RECOVERY RCC JRSC 0
Node: CBSy, Unit0 Inact: SysB (CSLink RTS), Unit1 Act:
CBSy
Recovery of the Inactive unit from ROM has started.
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
PM_NAME	PM_TYPE SITE_INDEX EXT_PMNO	Indicates the PM name and number of the RCC in ESA. For example, PM_TYPE is RCC, SITE_INDEX is the site name, and EXT_PMNO is a number from 0 through 255.
ns	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv	Indicates the node status of RCC.
ai	Act, Inact	Indicates active and inactive units of RCC.
us	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv	Indicates status of RCC units.
recovery_method	from ROM or for ESA exit	Indicates recovery method for inactive unit.

Action

If an inactive unit fails, forward this log to the next level of maintenance.

Associated OM registers

None

PM178

Explanation

The peripheral module (PM) subsystem generates this report when a craftsperson makes a request to load emergency stand-alone (ESA) static data to a remote cluster controller (RCC) running in simplex mode although the existing ESA static data is already valid in the active unit.

Format

The format for log report PM178 follows:

```
PM178 mmmdd hh:mm:ss ssdd INFO ESASDATA_ABORTED
<pm_name>
Node: <ns>, Unit0 <ai>: <us>, Unit1 <ai>: <us>
ESA Data download aborted due to lack of node redundancy.
Existing ESA static data is valid.
```

Example

An example of log report PM178 follows:

```
PM178 DEC15 11:20:17 3765 INFO ESASDATA_ABORTED RCC JRSC 0
Node: InSv, Unit0 Inact: SysB (CSLink RTS), Unit1 Act:
Insv
ESA Data download aborted due to lack of node redundancy.
Existing ESA static data is valid.
```


Field descriptions

The following table explains each of the fields in the log report:

PM 178 field descriptions

Field	Value	Description
PM_NAME	PM_TYPE SITE_INDEX EXT_PMNO	Indicates the PM name and number of the RCC in ESA. For example, PM_TYPE is RCC, SITE_INDEX is the site name, and EXT_PMNO is a number from 0 through 255.
ns	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv	Indicates the node status of RCC.
ai	Act, Inact	Indicates active and inactive units of RCC.
us	Uneq, SysB, ManB, OffL, CBsy, ISTb, InSv	Indicates status of RCC units.

Action

If it is necessary to reload ESA static data, wait until the inactive unit is inservice, then load the ESA static data to the active unit.

Associated OM registers

None

PM179

Explanation

The Peripheral Module (PM) subsystem generates PM179. The subsystem generates PM179 when a hardware condition affects the normal operation of the DMS switch or the peripherals of the DMS switch. The PM subsystem generates PM179 to provide information on a PM hardware (HW) exception report.

The alarm field for Format 8 (talk battery failure detected on a line concentrating module [LCM] shelf) contains three asterisks. The alarm field for Format 8 with three asterisks indicates a critical alarm. For Format 9 (not able to test talk battery on an LCM shelf), the alarm field contains one asterisk. One asterisk for Format 9 indicates a minor alarm.

For Format 8, the system generates a critical alarm if all of the following conditions are true:

- Office parameter TALK_BATTERY_ALARM in table OFCENG is set to Y.
- The state of the LCM unit is in-service (InSv) or in-service trouble (ISTb).
- The Talk Battery Alarm feature supports the LCM type.
- The LCM shelf detected loss of talk battery through a world line card (WLC).

For Format 9, the system generates the minor alarm if all conditions are true:

- Office parameter TALK_BATTERY_ALARM in table OFCENG is set to Y.
- The state of the LCM unit is InSv or ISTb.
- The Talk Battery Alarm feature supports the LCM type.
- There is no WLC available to test for loss of talk battery on an LCM shelf.

For Format 10, the log contains processor information about the remote line concentrating module with extended distance capability (RLCM-EDC) and the universal edge 9000 (UE9000). The field values depend on the task and the type of trap.

Format

The log report formats for PM179 are as follows:

PM179 (continued)

Note: In the following format examples, h indicates a hexadecimal value, and x indicates a text response.

Format 1

```
PM179 mmmdd hh:mm:ss ssdd TBL PM HW EXCEPTION REPORT
      pmid: acttxt
      TASKID: taskid;    TIME: time, COMID: comid
      TEXT: swertxt hh hh hh hh hh hh hh hh
```

Format 2

```
PM179 mmmdd hh:mm:ss ssdd TBL PM HW EXCEPTION REPORT
      pmid: Unit n: acttx
```

Format 3

```
PM179 mmmdd hh:mm:ss ssdd TBL PM HW EXCEPTION REPORT
      pmid Unit n
      Self Test Fail – DPMC FAULT: FLTXT
```

Format 4

```
PM179 mmmdd hh:mm:ss ssdd TBL PM HW EXCEPTION REPORT
      pmid
      Exception ID: hh    TEXT: xxxxxxxxxxxx
      Status Register: hhhh    Program Counter: hhhhhhhh
```

Format 5

```
PM179 mmmdd hh:mm:ss ssdd TBL PM HW EXCEPTION REPORT
      pmid
      Exception ID: hh    TEXT: xxxxxxxxxxxx
      Status Register: hhhh    Program Counter: hhhhhhhh
      Instruction Address:    hhhhhhhh
```

Format 6

PM179 (continued)

PM179 mmmdd hh:mm:ss ssdd TBL PM HW EXCEPTION REPORT

pmid

Exception ID: hh TEXT: xxxxxxxxxx

Status Register: hhhh Program Counter: hhhhhhhh

Special Status Register: hhhh

Instruction Pipe Stage C: hhhh

Instruction Pipe Stage B: hhhh

Data Cycle Fault Address: hhhhhhhh

Data Output Buffer: hhhhhhhh

Format 7

**PM179 mmmdd hh:mm:ss ssdd TBL PM HW EXCEPTION REPORT

pmid

CONFIG REG: hhhh TEXT: xxxxxxxxxx

hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh

Format 8

***PM179 mmmdd hh:mm:ss ssdd TBL PM HW EXCEPTION REPORT

pmid Unit n

Self Test Fail – Talk Battery Problem

Talk Battery Failure: detected on shelf <ss> by card <pack>-<lsg>:<card>

Format 9

*PM179 mmmdd hh:mm:ss ssdd TBL PM HW EXCEPTION REPORT

pmid Unit n

Self Test Fail – Talk Battery Problem

Cannot test Talk Battery: shelf <ss> <reason>

Format 10

PM179 (continued)

```

PM179 mmmdd hh:mm:ss ssdd TBL PM HW EXCEPTION REPORT
  pmid acttxt      Unit n
  <HWEX_String>
  Status Register:      Processor ID:
  Program Counter:      Time:
  Data: hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh
        hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh hhhh

```

Example

Examples of log report PM179 follow:

Example 1

```

PM179 APR01 12:00:00 2112 TBL PM HW EXCEPTION REPORT
  LGC 0 Unit 0: Act
  TASKID: 12345678 TPT; TIME: 0002A83E00, COMID: FF NILCID
  TEXT: no execs 00 C3 35 01 00 3F 10 23 0F

```

Example 2

```

PM179 JAN30 15:25:27 5266 TBL PM HW EXCEPTION REPORT
  LCME HOST 00 0 Unit 0
  Self Test Fail - Line Card Communication : 6X71AC-11:31

```

Example 3

```

PM179 JAN05 15:45:27 8756 TBL PM HW EXCEPTION REPORT
  UEN 08 0 Unit 0
  SELF TEST FAIL - CARD NOT PRESENT

```

Example 4

```

PM179 MAR15 18:54:26 8055 TBL PM HW EXCEPTION REPORT
  IPE HOST 00 3
  Exception ID: 04      TEXT: I1 Instruc
  Status Register: 0004      Program Counter: 00401D44

```

Example 5

PM179 (continued)

```
PM179 MAR12 15:54:41 3109 TBL PM HW EXCEPTION REPORT
  IPE HOST 00 3
  Exception ID: 09      TEXT: Trace
  Status Register: 4704      Program Counter: 0040BA9C
  Instruction Address: 0040BA8E
```

Example 6

```
PM179 MAR12 15:40:27 0078 TBL PM HW EXCEPTION REPORT
  IPE HOST 00 3
  Exception ID: 02      TEXT: Bus Error
  Status Register: 2009      Program Counter: 00E00876
  Special Status Register: 0110
  Instruction Pipe Stage C: FDD8
  Instruction Pipe Stage B: 4280
  Data Cycle Fault Address: 004019C9
  Data Output Buffer: 0044D94B
```

Example 7

```
**PM179 SEP01 21:22:02 4000 TBL PM HW EXCEPTION REPORT
  ILCM HOST 00 0 Unit 1
  PCM30    Line drawer 15: AIS Alarm
```

Example 8

```
***PM179 NOV30 19:02:45 7465 TBL PM HW EXCEPTION REPORT
  LCM HOST 00 1 Unit 0
  Self Test Fail - Talk Battery Problem
  Talk Battery Failure: detected on shelf 38 by card
  6X17BA-8:2
```

Example 9

```
*PM179 NOV30 18:57:45 5148 TBL PM HW EXCEPTION REPORT
  LCME RSC1 04 1 Unit 0
  Self Test Fail - Talk Battery Problem
  Cannot test Talk Battery: shelf 38 no WLC provisioned
```

Example 10

```
* PM179 JUL15 11:12:36 5119 TBL PM HW EXCEPTION REPORT
  UEN HOST 02 0 Unit 0
  PM 30    Line Card Communication :NIL_CC-2:4 :NIL_CC-2:18
```

PM179 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
*	Alarm	One asterisk indicates a minor alarm condition. The log report identifies the alarm and the location of the alarm.
**	Alarm	Two asterisks indicate a major alarm condition. The log report identifies the alarm and the location of the alarm.
***	Alarm	Three asterisks indicate a critical alarm condition. The log report identifies the alarm and the location of the alarm.
TBL PM HW EXCEPTION REPORT	Constant	Indicates a problem that affects normal operation of the DMS switch or one of the PMs of the DMS.
pmid	Alphanumeric	Identifies the PM affected.
UNIT-n	Integer (0 or 1)	Identifies the PM unit that starts the report.
acttxt	Act or Inact	Identifies the activity state of the unit as active (Act) or inactive (Inact).
Exception ID	Integer	Provides the ID number for the exception that occurred.
TEXT	Symbolic text (xxxx)	Provides the cause for the exception that occurred.
TASKID	Alphanumeric	Provides identification for suspect task.
CONFIG REG	0000-FFFF	Provides configuration register value. Field CONFIG REG appears for the following four types of traps: bus interval, parity error, write prot, and sanity interval.
TIME	Hex (0000-FFFF)	Indicates time the exception occurred.

PM179 (continued)

(Sheet 2 of 3)

Field	Value	Description
Time	00 00-2359	Indicates the RLCM-EDC or the UE9000 time of exception.
COMID	Hex (0000-FFFF)	Provides switch identification.
SELF TEST FAIL	FLTXT	Indicates the fault and reason for the failure.
Data Output Buffer	Hex (0000-FFFF)	Provides data dump from the procedure.
ss	2 decimal characters (value depends on on LCM bay type)	Identifies the number of the LCM shelf that had loss of talk battery.
pack	6X17BA or 6X18BA	Identifies the pack code of the WLC that reported the talk battery failure.
lsg	0-19 (Note)	Identifies the line subgroup (LSG) and the location of the WLC. Note: The LSG upper limit is 15 for LCMEs.
card	0-31	Identifies the card slot from the LSG that contains the WLC.
reason	no WLC provisioned or card <lsg>: <card> (or other WLCS) unavailable	The reason no WLC provisioned appears if no WLC appears on the LCM shelf. The reason card <lsg>: <card> (or other WLCS) unavailable appears if one WLC appears on the LCM shelf, but the WLC is not available for talk battery testing. A WLC is not available for talk battery testing if the line, the drawer of the line, or both are out of service (OOS).
<HWEX_String>	Character string	Identifies the type of hardware exception.

PM179 (continued)

(Sheet 3 of 3)

Field	Value	Description
Processor ID	MP, CP, or PP	Indicates the processor in the RLCM-EDC or the UE9000 that generates the report is a master processor, control side (C-side), or peripheral processor (P-side).
Status Register	Alphanumeric	Identifies the values of the different registers.
Program Counter	Hex (0000-FFFF)	Identifies the RLCM-EDC or UE9000 program counter.
Stack Pointer	Hex (0000-FFFF)	Identifies the RLCM-EDC or UE9000 stack pointer.
Data	Hex (0000-FFFF)	Provides additional information for problem isolation by software experts.

Action

For Formats 1 to 9, save all reports generated during the 5 min before the system generated PM179 report. Contact the next level of support.

For Format 10, save all reports generated during the 6 h before the system generated the PM179 report. Contact the next level of support.

For digital line modules (DLMs), the fault is a **SELF TEST FAIL - DPMC FAULT** fault reason. Refer to the table under “Additional information” for the appropriate action for each fault.

For Format 2, manually-busy the power converter and replace the card that has faults, if the following conditions apply:

- the PM is a line concentrating module (LCM)
- the PM includes the phrase **Self-Test Fail - Pwr Conv Non Critical Flt:**
- the PM identifies a power converter card that has faults

The system generates PM179 when a system test detects a power converter card that has faults.

PM179 (continued)

Format 8 normally requires immediate on-site action to resolve the talk battery failure on an LCM shelf. Follow these steps:

- If a PDCFAIL EXT critical alarm raises, fix the alarm to clear the LCM alarm and ISTb state.
- Check the LCM shelf and drawer fuses.
- Run the MAPCI;MTC;LNS;LTP;DIAG command on the WLC, to test the WLC that reported the alarm.
- If the DIAG command fails or the talk battery failure alarm continues, replace WLC that reported the alarm.

Resolve the problem then run the LCM InSv tests. Use the TST PM command while the LCM appears at the PM level of the MAP. This procedure tests the talk battery and clears the alarm if the test passes.

For Format 9, on-site action may be able to determine why the talk battery cannot test on an LCM shelf. Follow these steps:

- If <reason> is no WLC provisioned , provision a WLC on the LCM shelf.
- If <reason> is card <lsg>: <card> (or other WLCS) unavailable , attempt to RTS the WLC, the drawer of the WLC, or both. If the WLC is available and the minor alarm is temporary (less than 1 min), the alarm does not require any action. This temporary alarm can occur because automatic line testing (ALT) was used to test the last available WLC on the LCM shelf. The alarm can also occur because the LNS, LTR, DIAG command was used to test the last available WLC on the LCM shelf. The temporary alarm occurs because these tests temporarily ManB the WLC. When the tests ManB the WLC, the WLC is not available for talk battery testing.
- If <reason> is <len> is unavailable , attempt to RTS the WLC, the WLC drawer, or both. If the WLC is in-service (or HASU) and idle, test the WLC. Run the MAPCI;MTC;LNS;LTP;DIAG command. If the DIAG command fails or the "unable to test talk battery" alarm continues, try to replace the WLC.
- If the reported WLC cannot RTS, use the CI command QDNWRK (query working [assigned] directory number). This command lists other possible WLCs on the same LCM shelf. If other WLCs are present, attempt to RTS the WLCs.

Resolve the problem then run LCM InSv tests. To verify that the talk battery alarm is clear, use the TST PM command while LCM appears at the PM level of MAP.

Associated OM registers

Format 8 (talk battery failure detected on an LCM shelf) pegs the PMERR register of the PM operational measurement (OM) group. This log also pegs the PM2ERR register of the PM2 OM group.

Additional information

The following table provides DPMC fault reasons and actions.

Fault reason	Action
Card Not Present	Insert a DPMC in the DLM shelf in slot 13, Or change table DLMINV to indicate that the DLM is not equipped with a DPMC.
Card Not Accessible	The card was in use at the time the test. Activate in-service tests on either units of the DLM to test the DPMC again.
Control Logic Defective	For this and following fault reasons, replace the DPMC.
Mate DMSX fail	Indicates that the mate DMS-X failed. The DMS-X operates in simplex mode. Off-line, test, and return to service (RTS) the failed unit. Monitor the response, and apply all required changes

PM180

Explanation

The peripheral module (PM) subsystem generates log report PM180. This report appears when the system encounters a software exception. A software exception occurs when software is not used correctly. Operating company personnel use log report PM180 to identify and correct software errors. A software exception that relates to hardware can also generate log report PM 180.

The PM subsystem generates this report when a software condition occurs. This software condition affects normal operation of the DMS or the peripherals of the DMS. Formats 3 and 4 supply information on a PM EXCEPTION REPORT. Format 5 identifies software exceptions in the remote line concentrating module with extended distance capability (RLCM-EDC) and the universal edge 9000 (UE9000)..

Format

The log report formats for PM180 are as follow:

Format 1

```
PM180 mmmdd hh:mm:ss ssdd TBL PM EXCEPTION REPORT
  pmid UNIT n: acttxt
  TASKID : taskid, TIME: hhhhhhhh, COMID: comid
  TEXT: swerrtxt hh hh hh hh hh hh hh
  CONTEXT TERMINAL: TID=(nodenum,termnum), EXTBYTE=n,
  AGENT=CKT trkid
```

Format 2

```
PM180 mmmdd hh:mm:ss ssdd TBL PM EXCEPTION REPORT
  pmid UNIT n
  swerrtxt
```

Format 3

```
PM180 mmmdd hh:mm:ss ssdd TBL PM EXCEPTION REPORT
  pmid
  text                               Exception Class: hh
```

Format 4

PM180 (continued)

PM180 mmmdd hh:mm:ss ssdd TBL PM EXCEPTION REPORT

pmid

text

Exception Class: hh

Information Byte: hh

Format 5

PM180 mmmdd hh:mm:ss ssdd TBL PM EXCEPTION REPORT

pmid UNIT n

Software Exception:

Processor ID:

Task ID:

Time:

Data:

Format 6

PM180 mmmdd hh:mm:ss ssdd TBL PM SW EXCEPTION REPORT

ILD <site> <frame> <unit> <drawer>

TEXT: <swerrtxt>

<swerrdata>

ATTENTION

The ISDN line drawer for remotes (ILDR) is first available for the following configurations in the NA007/XPM08 timeframe:

- remote switching center-SONET (RSC-S)
- remote switching center (RSC)

The ILDR is first available for the following configurations in the NA008/XPM81 timeframe:

- remote line concentrating module (RLCM)
- outside plant module (OPM)
- outside plant access cabinet (OPAC)

Example

Examples of log report PM180 follow:

Example 1

PM180 (continued)

```
PM180 APR01 12:00:00 2112 TBL PM EXCEPTION REPORT
DTC 0 UNIT 0 : Act
TASKID : 00210021 TPT, TIME: 0002A83E, COMID: FF NILCID
TEXT: no execs 00 C6 01 00 5F 38 0F
CONTEXT TERMINAL: TID=(24,197), EXTBYTE=0,
AGENT=CKT PXKDKGSICDT 0
```

Example 2

```
PM180 APR01 12:00:00 2112 TBL PM EXCEPTION REPORT
DLM HOST 03 0 UNIT 0
INVALID TERMINAL: 254, UNEQUIPPED
```

Example 3

```
*PM180 JAN01 17:44:11 2106 TBL PM EXCEPTION REPORT
IPE HOST 00 3
MTCE: Illegal Circuit State Rcvd      Exception Class: 21
```

Example 4

```
*PM180 JAN01 17:44:10 2005 TBL PM EXCEPTION REPORT
IPE HOST 00 3
MTCE: Illegal Destination Rcvd      Exception Class: 11
Information Byte: 0D
```

Example 5

```
PM180 AUG15 10:31:20 9500 TBL PM SW EXCEPTION REPORT
LCM ZLCM 03 0      UNIT 0
Software Exception: MT IV CONT
Processor ID:  MP      Task ID:  #0900
Time: 12:55:51
Data: 0609 FEB3 B300 3776 B3B3 B3B3 B3B3 B3B3
      B3B3 B3B3 B3B3 B3B3 B3B3 B3B3
```

Example 6

```
PM180 AUG15 10:31:20 9500 TBL PM SW EXCEPTION REPORT
UEN ZLCM 03 0      UNIT 0
Software Exception: MT IV CONT
Processor ID:  MP      Task ID:  #0900
Time: 12:55:51
Data: 0609 FEB3 B300 3776 B3B3 B3B3 B3B3 B3B3
      B3B3 B3B3 B3B3 B3B3 B3B3 B3B3
```

PM180 (continued)

Example 7

```

PM180 MAY21 16:50:45 0231 TBL PM SW EXCEPTION REPORT
      ILD REM1 01 2 4
      TEXT: IV FIAT CM
      D3BE 0000 4C03 1400 001E A562 99A4 97FE A55D 0000 0000

```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
TBL PM EXCEPTION REPORT	Constant	Indicates a PM exception report.
pmid	Symbolic text	Identifies the affected PM
UNIT	Integer (0 or 1)	Identifies the PM unit that generates the report
acttxt	Act	Indicates that the PM unit is active (Act). Not provided for digital line module (DLM).
	Inact	Indicates that the PM unit is inactive (Inact). Not provided for DLM.
TASKID	Symbolic text	Provides identification for suspect task
TIME	Hex (0000-FFFF)	Indicates time that exception occurred
COMID	Hex (0000-FFFF), Character string	Provides communication port identification. Not provided for DLM.
swerrtxt	Character string	Provides the reason that the exeception occurred
hhhh	Hex (0000-FFFF)	The 14 hexadecimal characters display contents of process status word for DLMs. The hexadecimal characters display more than 14 characters in the hhhh format to display the following: • contents of process status word • different registers • other information used in troubleshooting

PM180 (continued)

(Sheet 2 of 3)

Field	Value	Description
CONTEXT TERMINAL	Constant	Indicates the information that follows applies to the terminal involved in the transaction that produced the exception condition. Not provided for DLM.
TID	Integers	Provides the node number and terminal number for terminal identification. Not provided for DLM.
EXTBYTE5000	0 or 1	Identifies the extension byte of the call involved in the exception condition. Electronic business sets use the extension byte to distinguish directory number (DN) keys. For 500 series and 2500 series sets and for trunks, the field does not apply and is set to zero. Not provided for DLM.
AGENT	Symbolic text	Provides identification for context terminal equipment. Not provided for DLM.
TEXT	CMR CARD TROUBLE	Indicates the system detected a problem on the CLASS modem resource (CMR) card. The system attempts to reset the card. Report that this log occurred.
	Character string or blank	Provides additional information for operating company personnel to isolate problems
hhhh	Hex (0000-FFFF)	Provides a dump of information for operating company personnel to use
Text string	Alphabetic	Provides the reason of the exception
Software Exception	Character string	Provides the reason for the log
Processor ID	MP, CP, or PP	Indicates that the processor in the RLCM-EDC or the UE9000 that generates the report is one of the following: • master processor • control side (C-side) • peripheral processor (P-side)
Task ID	Symbolic text	Identifies the ID of the RLCM-EDC or the UE9000 task that generated the log

(Sheet 3 of 3)

Field	Value	Description
Time	00 00-2359	Indicates the RLCM-EDC or the UE9000 time of exception
Data	Hex (0000-FFFF)	Identifies the type of hardware exception
site	0000-ZZZZ	Identifies the site to the ILDR
frame	0 through 99	Identifies the line concentrating module (LCM) frame number
drawer	0 through 19	Identifies the ILDR drawer number in the LCM
swerrdata	Character string	Provides the exception data from the software error text (swerrtxt)

Action

Attempt to interpret swerrdata character string to determine the cause of the exception. If you are not able to interpret swerrdata, contact the next level of support.

If the system indicates a hardware problem, perform diagnostic and maintenance procedures on the suspect equipment.

If the character string indicates a software error, retain the log report for trend analysis. There is no action required.

For formats 3 and 4, save all reports generated during the 5 min before the subsystem generated log report PM180 report. Contact the next level of support.

For format 5, save all reports generated during the 6 h before the subsystem generated log report PM180. Contact the next level of support.

Associated OM registers

There are no associated OM registers.

PM181

Explanation

The peripheral module (PM) subsystem generates PM181 when a specified step occurs in a PM function. The PM181 reports the occurrence of a PM exception.

The following conditions use Format 1:

- Examples 1 and 2 use Format 1. The PM generates these examples when a request for diagnostics arrives from the host. The subsystem also generates these examples during a return to service (RTS) procedure with diagnostics permitted. Format 1 specifies the unit (0 or 1) for a routine exercise (REX) test failure, if the failure is unit specific.
- Example 3 uses Format 1. The PM subsystem generates this example in the following condition. The call processing node status table is not the same as the current status of the line appearance on a digital trunk (LDT). The LDT node status table records the current status.
- Example 4 uses Format 1. The PM subsystem generates this example when one or more frame transport buses (F-bus) tap in a link interface module (LIM). The error occurs because the frame transport buses have changed to the in-service trouble (ISTb) state within the previous 3 s.
- Example 5 uses Format 1. The PM subsystem generates this example when an XMS-based peripheral module (XPM) facility audit detects a state change in an echo canceller module.
- Example 22 uses Format 1. The PM subsystem generates this example under the following conditions:
 - a line concentrating module (LCM) REX test or LCM continuity and voltage (LCMCOV) REX test passes
 - the LCM REX test or LCMCOV REX test has not occurred on a specified node for a fixed number of days

Note: In NA004 and up, feature AF5898 (LCM REX Controller Enhancement) migrates the LCM REX test from the LCM node audit process to the system REX (SREX) controller. Feature AF5898 also places the continuity and voltage (COV) part of the LCM REX test in a separate LCMCOV test.

- Example 24 uses Format 1. The PM subsystem generates this example when a return to service command fails on an external node entered in table EXNDINV.

PM181 (continued)

- Example 25 uses Format 1. This example generates when a TEST command fails on an external node entered in table EXNDINV.
- Example 26 uses Format 1. The PM subsystem generates this example when a service processor with UNIX (SPX) is system busy. The log lists the possible causes for the system being busy, which can include faults in the following components:
 - the single-shelf link peripheral processor (SSLPP)
 - Ethernet interface unit (EIU)
 - local area network (LAN) connections
 - the LAN-BAY cards
 - the SPX cards

The following conditions use Format 2:

- Example 6 uses Format 2. The PM subsystem generates this example for PMs when a PM exception occurs.
- Examples 7, 8, and 9 use Format 2. These examples provide the status of the intelligent peripheral equipment (IPE) load.
- Example 21 uses Format 2. The subsystem generates this example when a BSY PM command causes removal of an LCM node from an in-service (InSv) state. The LCM node changes to an out-of-service (OOS) state.
- Example 28 uses Format 2. The PM subsystem generates this example when a digital subscriber loop (xDSL) line card is added to the LNINV table. The drawer for the table does not support the high speed data traffic of the 1 Meg Modem Service. The line installed functions as a standard voice line only.
- Example 29 uses Format 2. The PM subsystem generates this example when an xDSL line card is added to the LNINV table. The drawer for the table supports the high speed data traffic of the 1 Meg Modem Service. The line drawer contains more xDSL line cards than the xDSL engineering rules allow. The installed xDSL line card functions as an xDSL line. The whole line drawer is at risk of failure because the drawer is operating beyond its thermal and electrical limits. Operating company personnel receive warning of the xDSL engineering rules breach at the time of the

PM181 (continued)

addition. These personnel can perform the following actions to correct the condition:

- use the QXNET EXPANDALL command to locate another LCM that supports xDSL and has room for expansion
- upgrade another LCM line drawer with a data-enhanced bus interface card (DBIC) and relocate this xDSL line card to that drawer
- use the QXNET VERIFY <site> <frame> <unit> <drawer> command to verify the xDSL line card assignments
- Example 30 uses Format 2. The PM subsystem generates this example when an xDSL line card is added to the LNINV table. The drawer contains more xDSL line cards in a vertical row than the xDSL engineering rules allow. The installed xDSL line card functions as an xDSL line. The whole line drawer is at risk of failure because the drawer is operating beyond the thermal and electrical limits. Operating company personnel receive warning of the xDSL engineering rules breach at the time of the addition. These personnel can perform the following actions to correct the condition:
 - use the QXNET EXPAND <site> <frame> <unit> <drawer> command to locate another row in the same drawer for the xDSL line card
 - use the QXNET EXPANDALL command to locate another LCM that supports xDSL

The following conditions use Format 3:

- Example 10 uses Format 3. This example indicates the detection of a fault on an LIM during any InSv or OOS test. Refer to the MS200 and MS300 series of logs for the possible faults.
- Example 11 uses Format 3. The PM subsystem generates this example when the central control (CC) receives a report from an XPM. This report indicates the detection of a parity fault. The parity fault can be hard, soft or not continuous. If the XPM detects a hard parity fault, the system displays the card that has faults on the card list. Format 3 changes to include the user name and the message **Performed Override of SWACT Controller**. This change occurs when a user overrides the rejection by the switch of activity (SWACT) controller to perform a SWACT. The user assumes all responsibility for XPM SWACT operation when the user overrides the decision of the SWACT controller.
- Example 12 uses Format 3. The PM subsystem generates this example when an XPM diagnostic detects a fault in the echo canceller control card.
- Example 23 uses Format 3. The PM subsystem generates this example when the system detects an F-Bus composite clock fault on the LIM. The

PM181 (continued)

log also lists possible cause and possible action. Possible cause indicates all possible causes to the composite clock fault report. Possible action indicates the actions to take to resolve the composite clock fault and the CCS7 outage protection.

- Example 43 uses Format 3. The PM subsystem generates this example when an XPM unit reports a fault report message that is not requested. The XPM unit reports this message to the computing module (CM). The log report contains the current degradation level in the XPM unit and a card list of any cards that have faults. The following list is a correct list of status messages that can appear in this occurrence of PM181 log:
 - No degradation of service in unit
 - Minor or potential service degradation in unit
 - Partial service degradation in unit
 - Severe service degradation in unit
- Example 45 uses Format 3. This format is generated when an XPM unit reports an unsolicited fault report message to the computing module (CM). Beginning in XPM09, the log report also identifies the type of fault and the states in which the faults have been detected. Following is a list of the fault types:
 - Fault inferred by maintenance
 - Fault detected by diagnostics
 - Operational fault

The following conditions use Format 4:

- Examples 13 and 14 use Format 4. The PM subsystem generates these examples when the host sends a request for diagnostics. These examples also occur during a return to service (RTS) with diagnostics permitted.
- Example 15 uses Format 4. This example indicates if the broadcast patching function was successful and if the units passed or failed.
- Example 16 uses Format 4. The PM subsystem generates this example as a result of a PM diagnostic failure or as notification of test completion. The system also generates this log with the new system busy reason of XPM in emergency stand-alone (ESA). This generation occurs when a remote cluster controller (RCC) can return to service after the RCC enters a CC warm or cold restart.
- Example 17 uses Format 4. This example produces a message that indicates unified processor (UP) activity because of signaling processor (SIGP) clock failure or power failure.

PM181 (continued)

- Example 18 uses Format 4. The PM subsystem generates this example when the enhanced ISDN-line concentrating module (LCME) does not load multipoint embedded operations channel (EOC) data from the CC. The LCME returns a failure code to the CC. The system also generates this log when the LCME does not load data from the CC that monitors performance.
- Example 19 uses Format 4. The message field indicates that the firmware name for LOADABLE EEPROM is different from the firmware name for EXECUTABLE EEPROM. During the initialization, an attempt to upgrade the EEPROM with the wrong firmware name can result in failure. This error is the reason for the mismatch.
- Example 20 uses Format 4. The PM subsystem generates this example when a user uses the SWACT Force MAP command to attempt an XPM SWACT. This attempt overrides the rejection of the SWACT controller to perform a SWACT. Format 4 changes with the text string **failed: XPM SWACT Back** to inform the user that a SWACT back occurred. Format 4 also changes to indicate if the aborted SWACT was an override of the SWACT controller. When the system generates this log with this text string, the active unit is not indicated. The user assumes all responsibility for the XPM SWACT when the user overrides the decision of the SWACT controller.

The system suppresses PM181 log reports in Format 4 that indicate **Static Data Updated/Cleared** for the following XPMs that run REX:

- line trunk controller (LTC), LTC+, ISDN LTC (LTCI)
- line group controller (LGC), LGC+, ISDN LGC (LCDI)
- digital trunk controller (DTC), DTC7, DTC+, ISDN DTC (DTCI)
- remote cluster controller (RCC), RCC+, RCC2
- subscriber carrier module-100S (SMS), SM-100 rural (SMR), SM-100 urban (SMU), and SMS remote (SMSR)

Several of the following formats apply to ISDN line drawer for remotes (ILDR). The ILDR is first available for remote switching center-SONET (RSC-S) and remote switching center (RSC) configurations in the NA007/XPM08 timeframe. The ILDR is first available for the following configurations in the NA008/XPM81 timeframe:

- remote line concentrating module (RLCM)
- outside plant module (OPM)
- outside plant access cabinet (OPAC)

PM181 (continued)

The following condition uses Format 5:

- Example 31 uses Format 5. The PM subsystem generates this example when an ISDN line drawer for remotes (ILDR) state changes from InSv to SysB.

The following condition uses Format 6:

- Example 32 uses Format 6. The PM subsystem generates this example when an ILDR changes from InSv to ISTb.

The following condition uses Format 7:

- Example 33 uses Format 7. The PM subsystem generates this example when an ISTb reason is set or deleted (ILDR).

The following condition uses Format 8:

- Example 34 uses Format 8. The PM subsystem generates this example when a switch bank is complete. The system generates this log if the switch bank is successful or not successful.

The following condition uses Format 9:

- Example 35 uses Format 9. The PM subsystem generates this example when an ILDR test fails.

The following condition uses Format 10:

- Example 36 uses Format 10. The PM subsystem generates this example when a file is loaded to the ISDN drawer controller (IDC). The PM subsystem also generates this example when the load attempt fails.

The following conditions use Format 11:

- Examples 37 and 38 use Format 11. The PM subsystem generates these examples when a minimum of one LIS or FBus taps change state. The log indicates the LIS number and the tap number when these numbers apply.

PM181 (continued)

This format applies only to an LIM with triple FBus configuration. Tap number range is 0-11.

The following condition uses Format 12:

- Example 39 uses Format 12. The PM subsystem generates this example when the system detects a tap fault. This format applies only to an LIM with triple FBus configuration. Tap number range is 0-11.

The following condition uses Format 13:

- Example 40 uses Format 13. The PM subsystem generates this example when the system detects a bus fault. This format applies only to an LIM with triple FBus configuration.

The following conditions use Format 14:

- Example 41 uses Format 14. The PM subsystem generates this example when an ILDR enters the congestion state.
- Example 42 uses Format 14. The PM subsystem generates this example when an ILDR exits the congestion state.

The following condition uses Format 15:

- Example 44 uses Format 15 when a load containing MtcArb is present in only one unit. Beginning with CSP09, MtcArb will always be functional by the fact of its being part of the load. The operating company personnel will not be able to disable MtcArb. Therefore, log PM181 will not indicate if MtcArb is functional or disabled.

The following condition uses Format 16:

- Example 46 displays the EEPROM loading process log report in Format 16. One of the F/W loading processes is the erase step. After the erase step finishes, the system displays the log.

The following condition uses Format 17:

- Example 47 displays the recovery failure log report in Format 17. The SXO5 processor card could contain a flash memory (SX06) in one of its internal slots. When the XPM image dump fails, the system displays the log.

The following condition uses Format 18:

- Example 48 uses Format 18. If the configuration data table (CDT) Audit finds a static data mismatch between the CM and the XPM configuration data, the system sets the XPM to ISTb. In the event of a configuration data

PM181 (continued)

manager (CDM) checksum mismatch, the PM subsystem generates a log. The log displays the table and the table ID of the CDT table that failed.

The following condition uses Format 19:

- Example 49 uses Format 19. An RTS of a unit that does not have the hardware associated with the extended messaging feature will fail. A log will be generated.

The following condition uses Format 20:

- Example 50 uses Format 20. If the CC and LCM do not indicate the same current generator for the LCM units, the system generates this example.

During a one night process (ONP), the system initializes the CC to the default ring generator of the LCM. If there is a mismatch between the CC and LCM, on NORESTARTSWACT the system updates the CC to match the LCM. This log does not require action.

The following condition uses Format 21:

- Example 51 uses Format 21. The system generates this example in section VCPY (module XPMMASUI) when the configuration data management (CDM) dynamic tuple update fails.

The following condition uses Format 22:

- Example 52 uses Format 22. The system generates this example when the static data download fails.

The following condition uses Format 23:

- Example 53 uses Format 23. The system generates this example when the state of the entry `xpm_supports_dynamic_sd` is false.

The following condition uses Format 24:

- Example 54 uses Format 24. The system generates this example when a reload completes.

Format

The fields and entries associated with maintenance arbitrator are optional (apply only to XPMs). When a load containing MtcArb is present in both XPM units, the MtcArb state is indicated for each unit as either functional or disabled. In XPM81, when a load containing MtcArb is present in only one of the units, the MtcArb state is indicated for that unit only. The state of the of the second unit is not indicated. Beginning in TL09, MtcArb is always functional and the MtcArb state is not indicated in the logs.

PM181 (continued)

The log report formats for PM181 are as follows:

Format 1

```
PM181 mmmdd hh:mm:ss ssdd INFO
  pmid
  opttxt
  Unit0: MTCARB is <state>, Unit1: MTCARB is <state>
```

liu loaFormat 2

```
PM181 mmmdd hh:mm:ss ssdd INFO
  pmid
  Node : statxt
  opttxt
```

Format 3

```
PM181 mmmdd hh:mm:ss ssdd INFO
  pmid Unit n
  Node: statxt, Unit0 actxt: statxt1, Unit1 actxt: statxt1
  Unit0: MTCARB is <state>, Unit1: MTCARB is <state>
  TEXT_STRING
  Site Flr RPos Bay_id Shf Description Slot EqPec
  site nn cn ccc 00 nn type :no :nn pec_id
```

Format 4

```
PM181 mmmdd hh:mm:ss ssdd INFO
  pmid Unit n
  Node: statxt, Unit0 actxt: statxt1, opttxt0 Unit1 actxt: statxt1 opttxt1
  opttxt
  Unit0: MTCARB is <state>, Unit1: MTCARB is <state>
```

Format 5

PM181 (continued)

PM181 mmmdd hh:mm:ss ssdd INFO
LCM <site> <frame> <unit>
Node: <state>, Unit0: <state>, Unit1: <state>
Drawer <drawer>: <state> from <state>
Reason: <SysB_reason>

Format 6

PM181 mmmdd hh:mm:ss ssdd INFO
LCM <site> <frame> <unit>
Node: <state>, Unit0: <state>, Unit1: <state>
Drawer <drawer>: <state> from <state>
Reason: <ISTb_reason>

Format 7

PM181 mmmdd hh:mm:ss ssdd INFO
LCM <site> <frame> <unit>
Node: <state>, Unit0: <state>, Unit1: <state>
Drawer <drawer>: <state>
Reason: <ISTb_reason>
(<Set/Delete>) <ISTb_reason>

Format 8

PM181 mmmdd hh:mm:ss ssdd INFO
LCM <site> <frame> <unit>
Node: <state>, Unit0: <state>, Unit1: <state>
Drawer <drawer>: ILD <C/W> switch bank <S/F> (<S/M> action).
Reason: <Switch_Bank_Failure_reason>

Note: In the preceding format, the log report displays the “Reason” only when the switch bank fails.

PM181 (continued)

Format 9

```
PM181 mmmdd hh:mm:ss ssdd INFO
  LCM <site> <frame> <unit>
  Node: <state>, Unit0: <state>, Unit1: <state>
  Drawer <drawer>: Test <C/F>
  Reason: <Test_Failure_reason>
```

Format 10

```
PM181 mmmdd hh:mm:ss ssdd INFO
  LCM <site> <frame> <unit>
  Node: <state>, Unit0: <state>, Unit1: <state>
  ILD <drawer>
    IDC bank <bank_no> load <load_result> from <srctxt>    Load file:
    <load_file>
    Failure reason: <reasontxt>
  ILD <drawer>
    IDC bank <bank_no> load <load_result> from <srctxt>    Load file:
    <load_file>
    Failure reason: <reasontxt>
```

Note 1: The preceding format applies to loading all ILDRs in the LCM. When loading a given ILDR, the log report shows only the results for that IDC.

Note 2: In the preceding format, the log report displays the “Failure reason” only if the loading fails.

Format 11

```
<node><Alarm_ind>PM181 mmmdd hh:mm:ss seqnbr INFO
  LIM <LIM_number>
  LIS <LIS_number>
    FBus <FBus_number>
    <Tap_header> <Tap_number>
  From: <from_s>
  To: <to_s> : <Tap_header> <Tap_number>
```

Note: The preceding format applies only to an LIM in the triple FBus configuration.

PM181 (continued)

Format 12

```
<node><Alarm_ind>PM181 mmmdd hh:mm:ss seqnbr INFO
  LIM <LIM_number>
  LIS <LIS_number>
    FBus <FBus_number>
    <Tap_header> <Tap_number>
```

Service affecting faults. CODE: <Fault_code>

Note: The preceding format applies only to an LIM in the triple FBus configuration.

Format 13

```
<node><Alarm_ind>PM181 mmmdd hh:mm:ss seqnbr INFO
  LIM <LIM_number>
  LIS <LIS_number>
    FBus <FBus_number>
    <Tap_header> <Tap_number>
```

Fault found against LIS <LIS_number> (Shelf Pos <shelf_position>)

Note: The preceding format applies only to an LIM in the triple FBus configuration.

Format 14

```
PM181 mmmdd hh:mm:ss ssdd INFO
  LCM <site> <frame> <unit>
  <text>
```

Format 15

```
PM181 mmmdd hh:mm:ss ssdd INFO
  pmid
  opttxt
  Unit n: MTCARB is <state>
```

PM181 (continued)

Format 16

PM181 mmmdd hh:mm:ss log no INFO PM no Unit no
Node: <state>, Unit n : <state>, Unit n : <state>
<string1>

Format 17

PM181 mmmdd hh:mm:ss ssdd INFO
Node: <state>, Unit n : <state>, Unit n : <state>
<string 1>
<string 2>

Format 18

PM181 mmmdd hh:mm:ss ssdd INFO pmid
Node: statxt, Unit0 actxt: statxt1, Unit1 actxt: statxt1
<ISTb_reason>: <TBL> <(tab_id)>

Format 19

PM181 mmmdd hh:mm:ss ssdd INFO pmid Unit <n>:actxt
Node: statxt, Unit0 actxt: statxt1, Unit1 actxt: statxt1
<Switch Bank Failure Reason>: Reason: <SysB_reason>

Format 20

PM181 mmmdd hh:mm:ss ssdd INFO LCM <site> <frame> <unit> Unit 1
Node: <state>, Unit0 : <state>, Unit1 : <state>
RGI Mismatch

Format 21

PM181 (continued)

PM181 mmmdd hh:mm:ss ssdd INFO pmid Unit<n>:actxt
 Node: <statxt>, Unit0 actxt: statxt1, Unit1 actxt: statxt1
 Dynamic Tuple update failed tabID: <table ID> (Reason:
 <Dynamic_Download_Failure_Reason>)

Format 22

PM181 <mmmdd> hh:mm:ss ssdd INFO <PM no.>
 Node: <state> UNIT : <state> UNIT : <state>
 <string l>

Format 23

PM181 <mmmdd> hh:mm:ss ssdd INFO pmid
 Node: statxt, Unit0 actxt: statxt Unit1 actxt: statxt
 <Reason>

Format 24

PM181 <mmmdd> hh:mm:ss ssd INFO pmid
 PMTYPE loaded with LOADFILE, Elapsed time: mm: ss

Example

Examples of log report PM181 follow.

Example 1

PM181 APR05 12:00:00 2112 INFO
 DTC 0 UNIT 0
 Speech Audit: PORT 15 OLD: 005 NEW: InSv
 Unit0: MTCARB is functional, Unit1: MTCARB is disabled

Example 2

PM181 (continued)

```
PM181 JAN01 11:47:21 9469 INFO
      DML HOST 08 0 UNIT 0
      DPMC Fault - <fault reason>
```

Example 3

```
PM181 JAN01 11:47:21 9469 INFO
      LDT PSAP 04 0
      Status Mismatch: Call Processing; OK
      LDT Node Status; ManB
```

Example 4

```
PM181 FEB16 11:30:22 9190 INFO
      LIM 2 FBus 1 TAP
      FROM: SysB (NA) TO: ISTb (NA) TAP: 11-12,15,19-21,23
```

Example 5

```
PM181 JUN29 22:37:21 7354 INFO
      PDTC 4
      Echo Cancellers:PsPort Ec_Mod ISTb FROM SysB Bit Map (Hex
      2      3      OK      FAULT
      5      7      OK      SUSPECT
      10     8      SUSPECT  OK
      11     9      FAULT    OK
      12     5      SUSPECT  SUSPECT 12 32 23 A1
```

Example 6

```
PM181 MAY30 12:22:55 4133 INFO
      IPE HOST 01 3
      Node      : InSv
      CARD      15: InSv FROM ManB
```

Example 7

PM181 (continued)

```

PM181 JAN01 09:44:11 4133 INFO
  IPE HOST 01 3
  Node      :   ManB
  Loaded with IPE31RC
  Loading method: Regular Loading, Elapsed time: 00:01:22
  Summary: single plane, bundle size 1, FS delays 0
  #re-tr msgs 0, #re-trns blocks 0

```

Example 8

```

PM181 JAN01 09:44:11 4133 INFO
  IPE HOST 01 3
  Node      :   ManB
  Loaded with IPE31RC
  Task aborted while loading IPE.

```

Example 9

```

PM181 JAN01 09:44:11 1333 INFO
  IPE HOST 01 3
  Node      :   ManB
  Failed to load IPE.

```

Example 10

```

PM181 DEC13 19:25:53 7622 INFO
  LIM 1 UNIT 1
  Routine Exercise is in progress
  CLOCK    NON Service affecting faults.   CODE:
  000000008000000000
  1. Subsystem Clock DAC 70% limit reached
  Site Flr RPos Bay_id Shf Description Slot EqPEC
  HOST 01 A02 LIM 501 00 CLOCK          18 9X53AA FRNT

```

Example 11

PM181 (continued)

```
PM181 DEC13 22:29:16 5561 INFO
DTC 0 UNIT 0
Node : ISTb, Unit:0 Act: InSv, Unit1 Inact: InSv
Unit0: MTCARB is functional, Unit1: MTCARB is disabled
Parity audit detected hard parity fault.
Site Flr RPos Bay_id Shf Description Slot EqPEC
HOST 00 A05 DTE 00. 18 DTC : 000 :10 6X47
```

Example 12

```
PM181 JUN13 22:37:21 7354 INFO
PDTC 4
Node : InSv, Unit:0 Act: InSv, Unit1 Inact: InSv
Test Failed : TESTALL
Site Flr RPos Bay_id Shf Description Slot EqPEC
HOST 01 A07 IDTE 18. 01 PDTC : 004 19 XXXX
```

Example 13

```
PM181 JAN01 10:15:45 1781 INFO
LTC1 UNIT0
Node: ISTb, Unit:0 Inact: InSv, Unit1 Act: InSv
Unit0: MTCARB is functional, Unit1: MTCARB is disabled
Diagnostic TestALL failed, Cardlist: 6X69. Replace cards
...
PP Hex Dump: 01 11 FF 20 30 3E AA CB 24 30 40 00 00 00
```

Example 14

```
PM181 JAN01 10:54:39 4023 INFO
LTC 0
Node: ManB, Unit:0 Act: ManB, Unit1 Inact: ManB
Unit0: MTCARB is functional, Unit1: MTCARB is disabled
Failed to MTC open cslink 0...
```

Example 15

PM181 (continued)

```
PM181 DEC13 19:46:53 9700 INFO
LTC 0 UNIT 0 : Inact
Node : ISTb, Unit:0 Inact: ManB, Unit1 Act: InSv
Unit0: MTCARB is functional, Unit1: MTCARB is disabled
Patches were successfully applied to the following XPM:
LTC 0 0, LTC 0 1, LTC 1 0, LTC 1 1, LTC 2 0, LTC 2 1,
LTC 3 1
Patches were not applied to the following XPM:
LTC 3 0: No reply from PM
```

Example 16

```
PM181 JAN01 15:54:59 1948 INFO
LCM HOST 00 1 Unit 0
Node: ISTb, Unit:0 : ISTb, Unit 1 :ISTb
Diag Failed: Ringing Ovld Test - NT6X30 1
```

Example 17

```
PM181 JAN01 09:44:11 1333 INFO
RCC2 2 Unit 0 : ACTIVE
Node: ISTb, Unit:0 Act : InSv, Unit 1 Inact : SysB
Unit 1 dropped activity because of power fail
```

Example 18

```
PM181 JAN01 09:44:11 1333 INFO
LCME HOST 67 0 Unit 1
Node: InSv, Unit:0 :InSv, Unit1 :InSv
Loading of mp-eoc data failed
```

Example 19

```
PM181 JAN01 09:44:11 1933 INFO
RCC 2 Unit 0 : Inact
Node: ISTb, Unit0 Inact : ManB, Unit1 ACT :InSv
Mismatch of the firmware edition between the LOADABLE and
EXECUTABLE EEPROMS in unit 0
```

PM181 (continued)

Example 20

```
PM181  JAN01  09:44:11  1933  INFO
      RCC 2
      Node : ISTb, Unit0 Act : ISTb, Unit1 SysB (Swacting)
      XPM Manual Warm SwAct Override has occurred: Active unit
      is 0
```

Example 21

```
PM181  MAY26  11:31:36  6401  INFO
      LCM HOST 00 1
      Node: ISTb, Unit0:  ISTb, Unit1: ManB
      USERNAME: ADMIN ** Performed a BSY PM **
```

Example 22

```
PM181  JUN22  01:05:35  1234  INFO
      LCM HOST 10 0
      LCMCOV REX PASSED.
```

Example 23

```
CST4AT  CM                      PM181 FEB24 18:55:22 8800 INFO
      LIM  2 FBus 1
      Non-service affecting faults.
      CODE:000300000020000000000000000000
      Fault found against LMS
      1. Composite clock failure detected LIS 3
      (SHELFPOS 0).
      POSSIBLE CAUSE :FBUS, ST Card, composite (external)
      clock cables,composite (external) clock.
      POSSIBLE ACTION:Tst the FBUS (insv), BSY/TST/RTS the
      FBUS, inspect composite (external) clock cables,
      then composite clock generator (TSG), and monitor
      occurrences.
      Site Flr RPos Bay_id Shf  Description Slot  EqPEC
      Host 03  C02  LIM 501  00   FBUS      32  9X79BA BACK
```

Example 24

PM181 (continued)

```
PM181 DEC20 11:25:01 3434 INFO
      SPX 3
      RTS Failed - SPX did not reply.
```

Example 25

```
PM181 MAY02 01:45:59 1099 INFO
      SPX 3
      TEST Failed - SPX did not reply.
```

Example 26

```
PM181 AUG23 10:19:34 1212 INFO
      SPX 3
      Potential faults: FLIS 1, EIU 2, LAN-BAY, LAN-Connections
      and SPX Cards - NT1X9000, NT1X2000, NT9X3000
```

Example 27

Where the link interface unit (LIU) is a multiple link interface unit (MLIU), the output string of this log is MLIU in place of LIU7.

```
PM181 MAY17 17:21:33 0300 INFO
      LIU7 40
      Load aborted:
      Loadfile LRS06BF is meant for a 8-Meg processor.
      LIU7 40 has been datafilled with a 32-Meg processor.
```

Example 28

```
PM181 JUL17 21:24:40 5700 INFO
      LCM HOST 00 1 Unit 0      xDSL ENGINEERING RULES VIOLATED
      LEN = HOST 00 1 00 12    PHYSICAL DRWR 0 DOES NOT SUPPORT
      xDSL DATA TRAFFIC
```

Example 29

PM181 (continued)

```
PM181 JUL17 21:24:40 5700 INFO
LCM HOST 00 1 Unit 0      xDSL ENGINEERING RULES VIOLATED
LEN = HOST 00 1 00 12    MAXIMUM NO (30) OF xDSL LINES PER
PHYSICAL DRWR EXCEEDED   MEMBERS PER PHYSICAL DRWR EXCEEDED
```

Example 30

```
PM181 JUL17 21:24:40 5700 INFO
LCM HOST 00 1 Unit 0      xDSL ENGINEERING RULES VIOLATED
LEN = HOST 00 1 00 12    MAXIMUM NO OF xDSL LINES PER VERT ROW
EXCEEDED MAX MEMBERS (2) of xDSL LINES PER VERT ROW EXCEEDED
```

Example 31

```
PM181 JAN23 15:03:56 3700 INFO
LCM REM1 05 0
Node: InSv, Unit0 : InSv, Unit1 : ISTb
Drawer 14: SysB from InSv
Reason: No Response From ILD
```

Example 32

```
PM181 JAN23 14:37:06 7300 INFO
LCM REM1 06 0
Node: InSv, Unit0 : InSv, Unit1 : InSv
Drawer 8: ISTb from InSv
Reason: Invalid Load file
```

Example 33

```
PM181 JAN23 14:37:03 6900 INFO
LCM REM1 00 0
Node: ISTb, Unit0 : InSv, Unit1 : InSv
Drawer 8: ISTb
Reason: One DMSX is unavailable
(Delete): Load in progress
```

Example 34

PM181 (continued)

```
PM181 JAN23 15:38:13 4500 INFO
LCM REM1 05 0
Node: InSv, Unit0 : InSv, Unit1 : InSv
Drawer 8: ILD cold switch bank passed (manual action)
```

Example 35

```
PM181 FEB06 15:10:01 8800 INFO
LCM REM1 09 0
Node: ISTb, Unit0 : InSv, Unit1 : CBsy
Drawer 8: Test failed
Reason: No reply from ILD.
```

Example 36

```
PM181 JAN23 14:37:03 7000 INFO
LCM REM1 00 0
Node: ISTb, Unit0 : InSv, Unit1 : InSv
ILD 8
IDC bank 0 load passed from CM Load File: IDAA08L1
ILD 18
IDC bank 1 load passed from CM Load File: IDAA08L1
```

Example 37

```
PM181 JAN 1 16:08:03 7700 INFO
LIM 0 LIS 2 FBus 1
From: InSv To: ISTb
```

Example 38

```
PM181 JAN 1 19:45:36 7800 INFO
LIM 0 LIS 2 FBus 1 TAP 7
From: InSv To: ISTb :Tap 7
```

Example 39

PM181 (continued)

```
PM181 JAN 1 14:08:57 7900 INFO
LIM 0 LIS 2 FBus 1 TAP 9
Service affecting faults. CODE: 5B030000000000000000800000
```

Example 40

```
PM181 JAN 1 08:23:05 8000 INFO
LIM 0 LIS 2 FBus 1
Fault found against LIS 2 (shelf pos 13)
```

Example 41

```
PM181 MAY21 16:50:45 0231 INFO
LCM REM1 00 0
ILD congestion state-Entry
```

Example 42

```
PM181 MAY21 16:50:45 0231 INFO
LCM REM1 00 0
ILD congestion state-Exit
```

Example 43

```
PM181 DEC11 08:16:58 6018 INFO LTC 5 UNIT 0
Node: ISTb, Unit0 Act: ISTB, Unit1 Inact: ManB
Unit0: MtcArb is functional, Unit1: MtcArb is functional
Severe service degradation in unit
The following cards should be replaced:
```

Site	Flr	RPos	Bay_id	Shf	Description	Slot	EqPEC
HOST	01	ZZ02	LTE 03	51	LTC : 006	14	6X44
HOST	01	ZZ02	LTE 03	51	LTC : 006	18	6X69
HOST	01	ZZ02	LTE 03	51	LTC : 006	07	6X48

Example 44

PM181 (continued)

```
PM181 APR05 12:00:00 2112 INFO
DTC 0 UNIT 0
Speech Audit:  PORT 15 OLD:  005 NEW:  InSv
Unit0: MTCARB is functional
```

Example 45

```
PM181 DEC11 08:16:58 6018 INFO LTC 5 UNIT 0
Node: ISTb, Unit0 Inact: SysB, Unit1 Act: InSv
Fault detected by diagnostics
  while InSv: Y  OOS: N  Act: Y  Inact: Y
Severe service degradation in unit
The following cards should be replaced:
```

Site	Flr	RPos	Bay_id	Shf	Description	Slot	EqPEC
HOST	01	ZZ02	LTE 03	51	LTC : 006	14	6X44
HOST	01	ZZ02	LTE 03	51	LTC : 006	18	6X69
HOST	01	ZZ02	LTE 03	51	LTC : 006	07	6X48

Example 46

```
PM181 MAY21 06:28:07 3369 INFO LTC 0 Unit 0
Node: ManB, Unit0 :ManB, Unit1 :ManB
ERASE EEPROM #{0,1} COMPLETED SUCCESSFULLY
```

Example 47

```
PM181 FEB09 06:28:07 3369 INFO LTC 0 Unit 0
Node: ManB, Unit0 :ManB, Unit1 :ManB
Unit 0: XPM image dump failed
Reason: Flash Mem Failure
```

Example 48

```
PM181 FEB23 05:03:24 3400 INFO LTC 1
Node: ISTb, Unit0 Act: ISTb, Unit1 Inact: SysB (CC
Restart)
CDT Chksm Mismatch: VR_CNTXT_B TBL (tab_id 229)
```

Example 49

PM181 (continued)

```
PM181 NOV06 11:10:17 1100 INFO LTC 1
Node: ISTb, Unit0 Act: ISTb, Unit1 Inact: SysB (ExtMSG
HW)
RTS Failed - Reason: Extended Messaging Hardware Mismatch
CDT Chksm Mismatch: VR_CNTXT_B TBL (tab_id 229)
```

Example 50

```
PM181 MAY07 22:18:50 1030 INFO LCM DVBE 39 0 Unit 1
Node: InSv, Unit0 :InSv, Unit1 :InSv
RGI Mismatch
```

Example 51

```
PM181 SEP01 21:21:04 2700 INFO DTC 1
Node: ISTb, Unit0 Act: InSv, Unit1 Inact: SysB (RTS
Failed)
Dynamic tuple update fialed tabID :229 (Reason: timeout)
```

Example 52

```
PM181 OCT18 02:36:39 9675 INFO PDTC 35
Node: ISTb, Unit0 Act: InSv, Unit1 Inact: SysB (REX)
Could not configure NETPROT for unit 1
Dynamic tuple update fialed tabID :229 (Reason: timeout)
```

Example 53

```
PM181 JAN30 16:40:23 0913 INFO LTC 2
Node: ISTb, Unit0 Inact: ISTb, Unit1 Act: ISTb
FLAG xpm_supports_dynamic_sd is FALSE. is setback to TRUE
```

PM181 (continued)**Example 54****ATTENTION**

A PM181 log has SVR7 in the header and has LIU in the text. This condition is correct. The pmtyp for SVR7 is LIU7.

UKGSM40

PM181 JAN20 14:36:39 0490 INFO SVR7 106
LIU loaded with GSA11CT, Elapsed time: 01:01

Field descriptions

The following table describes each field in the log report:

Field descriptions table (Sheet 1 of 8)

Field	Value	Description
actxt	Act	Identifies the activity state of the PM unit as active (Act).
	Inact	Identifies the activity state of the PM unit as inactive (Inact).
alarm		Optional field. Indicates the type of alarm that accompanied the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates no alarm.
bank_no	0 or 1	Indicates the bank number loaded.
C/F	completed or failed	Indicates the test result. The "Reason" line is populated only in the case of a failed result.
C/W	cold or warm	Indicates a cold or warm switch bank.
Dynamic_Download_Failure_reason	tblacktimeout Wrong Message, UNIT OOS, or unknown	Indicates why dynamic tuple download failed.

PM181 (continued)**Field descriptions table (Sheet 2 of 8)**

Field	Value	Description
drawer	0 through 19	Indicates the drawer number.
ISTb_reason	Incoming message overloaded One DMSX channel is unavailable Load name mismatch CDT Chksm mismatch Noncritical inservice test failed One or both Bd-channels are out of service Load in progress Invalid load file or Overload	Indicates the reason for the ISTb state.
load_result	succeeded or failed	Indicates if the load succeeded or failed. The log format changes according to this field.
<link_mtc_action>	RTS Request ManB Request SysB Request Mtce Open Request Close Request Test Request or Abort Request	Indicates the maintenance action request made to link maintenance.
link_mtc_result	Failed to close link Fault found on link Failed to open link Failed to mtce open link or Failed to test link	Indicates the result of the maintenance action request sent to link maintenance.
<m>	6 to 21	Indicates the MS card.
opttxt	Character string	Optional field. Provides additional information to help software troubleshooting technicians isolate problems.
opttxt0	Character string	Optional field. Provides additional information to help software troubleshooting technicians isolate trouble.
	(8x46)	Indicates that the NT8X46 card on unit 0 failed pulse code modulation (PCM) or signaling tests.
	(swacting)	Indicates that unit 0 is switching activity in response to a SWACT Force MAP command. This action overrides the rejection by the SWACT controller to switch activity.

PM181 (continued)

Field descriptions table (Sheet 3 of 8)

Field	Value	Description
opttxt1	(XPM in ESA)	Indicates that unit 0 became SysB because of an XPM in ESA mode.
	Character string	Optional field. Provides additional information to help software troubleshooting technicians isolate trouble.
	(8x46)	Indicates that the NT8X46 card on unit 1 failed PCM or signaling tests.
	(swacting)	Indicates that unit 1 is switching activity in response to a SWACT Force MAP command. This switch overrides the rejection by the SWACT controller to switch activity.
pmid	(XPM in ESA)	Indicates that unit 1 is switching activity in response to a SWACT Force MAP command. This switch overrides the rejection by the SWACT controller to switch activity.
	alphanumeric	Indicates the PM affected. Note: A change of state in the F-bus taps in an LIM can generate PM181. In this condition, the pmid field appears in the form: LIM nn FBus n TAP. The subfield "FBus n Tap" indicates the specific F-bus tap responsible.
reasontxt	Illegal S-record File incorrect Fail to erase bank Bad checksum Task aborted while loading Invalid load address Failed to write the record Sequence number error Fail to send query message Fail to load mate bank Fail to get route or Fail to establish connection	Indicates the reason for the failure.
S/F	succeeded or failed	Indicates the switch bank result. The "Reason" line is populated only in the case of a failed result.
S/M	system or manual	Indicates the action originator.

PM181 (continued)**Field descriptions table (Sheet 4 of 8)**

Field	Value	Description
Set/Delete	set or deleted	Indicates if the reason for the ISTb is a new reason (Set) or if a reason was cleared (Deleted).
Switch_Bank_Failure_reason	No reply from ILD Active bank not changed Invalid load Bsy failed or RTS failed	Indicates the reason for the switch bank failure.
SysB_reason	Incoming message overload Critical in-service test failed No response from ILD Active bank mismatch Call process activity mismatch LCM activity mismatch Unsolicited message limit exceeded S/W error message limit exceeded WAI received Cold switch bank in progress CC restart has occurred C-side node RTSILDR Bus interface card (BIC) loop failure Fault message received from ILD or Extended Messaging Hardware Mismatch	Indicates the reason for the SysB state.
state	functional or disabled	Indicates the state of MtcArb in the XPM unit at the time the log is formatted for display. This state can differ from the state of the log at the time the system generated the log. The possibility of this difference increases as the time between log generation and log formatting increases.
statxt	InSv, ISTb, Cbsy, SysB, and ManB	Defines the current state of the PM node. Examples are: C-side busy (Cbsy), system busy (SysB), manual busy (ManB).
	username: <userid> Performed Override of SWACT Controller	Indicates that a user did override the refusal of the SWACT controller to SWACT. The subfield "userid" identifies the individual who performed the override.
	username: <userid> Performed a BSY PM	Indicates that a user used the BSY PM command to remove an LCM node from an InSv state to an OOS state.

PM181 (continued)**Field descriptions table (Sheet 5 of 8)**

Field	Value	Description
	FROM: <state> (sq) TO: <statxt> (sq) TAP: <tap_number_set>	The subfields “state” and “statxt” are defined earlier in this table. The optional subfield (sq) provides the status qualifier. The subfield only prints when the PM in question is one of the following: • an LIM • an application processing unit (APU) • an application processing unit with UNIX (APUX) • a data communication processor (DCP) • an LIU datacom (LCOM) • an external node (EXND) • a service peripheral module (SPM) • a voice processing unit (VPU) The subfield (sq) can have one of the following values: • (NA) - Not accessible means all links to the PM unit are logically closed or physically out of service. Messages cannot pass between the PM and the computing module (CM). • (RU) - Resources unavailable means external resources required to have the PM unit in service are out of service. The subfield “tap_number_set”, with values in the format n2>n1, identifies a group of F-bus tap numbers. For example: TAP10-12, 15, 19-21, 23 indicates that the state change, that the log reported, affected taps 10, 11, 12, 15, 19, 20, 21, and 23.
	Diag Failed: <TTTTTT> <CCCCCn>	The subfield “TTTTTT” identifies the testid that failed the diagnostic test. The subfield “CCCCC” identifies the specific card that failed the test (NT6X30 or NT6X54).
	<reason text>	

PM181 (continued)**Field descriptions table (Sheet 6 of 8)**

Field	Value	Description
	Loading of mp-eoc data failed	
	Loading of Performance Monitoring Data Failed	
	Diag Failed: <failtxt> Possible 8x46 fault.	The subfield "failtxt" provides additional information for trouble isolation. Refer to the host-requested diagnostics failures table in the host-requested diagnostics subsection. The "Additional information" section of this log report contains this subsection. When the PM is an Ethernet interface unit (EIU), refer to the EIU failure messages table. The "Additional information" section of this log report contains this table. Logs output can occur when the remote line concentrating module or the remote digital line module (RLCM/RDLM) runs in emergency stand-alone (ESA) mode. If this output occurs, refer to the RLCM/RDLM-ESA message table. The "Additional information" section of this log report contains this table.
	Diag Failed: DPMC Fault <fault reason>	The subfield "fault reason" provides additional information for trouble isolation when the system detects a fault. The system detects the fault on a digital port maintenance card (DPMC). Refer to the DPMC fault reasons table in the "Additional information" section of this log report.
	XPM Manual Warm SwAct Override <action>Active Unit is <n>	The optional subfield "action" specifies diagnostic maintenance action to take for failures that the host detected. This field can be blank. Refer to the Maintenance actions table in the host-requested diagnostics subsection of the "Additional information" section of this log report. Subfield "n" gives the number of the active unit.

PM181 (continued)

Field descriptions table (Sheet 7 of 8)

Field	Value	Description
	Echo Cancellers:PsPortEc_Mod<status> FROM<status>Bit Map (Hex)	The subfield "PsPort" identifies the P-side port with which an echo canceller is associated (0 to 15). The subfield "Ec_Mod" identifies the echo canceller module number. Refer to table ECHINV for values. The subfield "status" indicates the operational state of the echo canceller module. The subfield "status" can have one of the following values: - OK - indicates that a fault is not present in the echo canceller module - FAULT - indicates that all of the echo canceller module channels are not operational - SUSPECT - indicates that a minimum of one, but not all, of the echo canceller module channels are not in operation The subfield "Bit Map" contains a hexadecimal number that identifies the current channel states associated with the echo canceller module. The four hexadecimal numbers are identified only when both the new and old states have the value of SUSPECT. The hexadecimal number on the right, the least significant byte, represents Channels 0-7. The hexadecimal number on the left, the most significant byte, represents Channels 24-31. A value of 0 indicates that the channel state is okay. A value of 1 indicates that the channel state is defective.
statxt1	ManB, InSv, ISTb, Cbsy, OffL, UnEq, SysB	Defines the current state of the PM unit. Off-line (OffL) is an example.
TBL	character string	Indicates the name of the table.

PM181 (continued)**Field descriptions table (Sheet 8 of 8)**

Field	Value	Description
TEXT_STRING	Character string	Indicates the type of fault detected in the XPM. Beginning in XPM09, this field also indicates the states in which the faults were detected and how the faults were detected. This value is followed by a card list if the log indicates a hard fault. See the Parity audit faults table in the “Additional information” section of this log report. See the <i>Peripheral Modules Maintenance Guide</i> (Circuit location display) for details about the card list format.
Test_Failure_reason	Flash memory bank Sanity time out Active bank: Checksum Inactive bank: Checksum Timing MatrixB53 Application-specific integrated circuit (ASIC) 100V U-loop power supply or No reply from ILD	Indicates the reason for the switch bank failure.
tab_id	alphanumeric	Indicates the table identification number.
Unit n	0 or 1	Identifies the PM unit that generates the report. If the PM that generates the report is an ESA, there is no unit specified. When MtcArb is loaded in only one PM unit, this value identifies that unit.
Unit 0: MTCARB is	constant	Indicates that the current state of the maintenance arbitrator in XPM unit 0 follows. This field is optional and applies only to digital trunk controllers (DTC), line trunk controllers (LTC) and line group controllers (LGC). If the XPM maintenance arbitrator is not loaded in the unit, the field is blank. Beginning in TL09, this field is not present.
Unit 1: MTCARB is	constant	Indicates the current state of the maintenance arbitrator in XPM unit 1 follows. This field is optional and applies only to DTCs, LTCs, and LGCs. If the XPM maintenance arbitrator is not loaded in the unit, the field is blank. Beginning in TL09, this field is not present.

PM181 (continued)

Action

Take action as the report specifies. If you cannot resolve the problem, save all reports generated during the 5 min before the system generated PM181. Contact the next level of maintenance.

If loading the IPE fails, maintenance can be required.

If PM nodes fail the patching function, modify the nodeset (or create a new nodeset) that includes the failed units. Try to remove or apply the patch again.

If the failure involves an SPX, perform fault diagnostics on the SPX. Access the SPX through the console port at the DMS ServiceBuilder LAN-BAY.

If a failure involves an integrated digital terminal (IDT), the IDT becomes ManB. Take the correct maintenance steps. If the problem persists, contact the next level of support. A time-out can occur while the CC maintenance task waits for the busy request reply from the subscriber carrier module-100 access (SMA). If a time-out occurs, check the status of the SMA, the IDT, and the P-side message DS-1 links at the MAP display. If the SMA responds that the busy request failed, refer to log reports for additional information.

The system can generate this log because of a parity audit fault (Format 3, Example 11). In this condition, refer to the Parity audit faults table at the end of this log. The table contains information on the correct action to take.

If the XPM diagnostic detects a fault in the echo canceller control card, replace the card.

If the XPM facility audit detects a state change in an echo canceller module, replace the echo canceller module that has faults. Check the buses that connect the ring generator to the units.

If the log indicates that a line card that has faults overloads the ring generator, determine the line card that causes the fault. Remove the cards and test the drawer that faults to check for the card that has faults. The test passes when more than one line card that has faults is installed. With all line cards unseated, test the drawer to clear the fault. Next, reseat the cards one at a time. The LCM sends a message that is not requested. This message reports the ring generator overload when you reseat the card that has faults. Remove the known card that has faults and replace the card. The PM179 log is the current report for ring generator overload.

The log can indicate that an ASU attempts SYSB recovery (autoloading of an ASU). An error occurs if a mismatch between the processor card and the

PM181 (continued)

loadsize causes the loading to fail. The load continues to fail autoloading until the load is compatible with the process size.

If the log indicates a ring generator overload that a line card that has faults does not cause, replace the ring generator that has faults.

The opttxt field can indicate that the firmware name of the loadable EEPROM is different from that of the executable EEPROM. In this condition, the action fails because the system cannot upgrade the EEPROM with the wrong firmware name. Load the firmware to the EEPROM. If the log appears again, replace the card.

If the opttxt field indicates that the unit is in ROM level, perform the command PMRESET. If this command does not work, load the unit again and perform an RTS. After you perform the RTS, load the firmware to the EEPROM again.

If the opttxt field indicates the programming was not successful, perform the LOADPM command again. The programming failed because of time-out open route.

If the opttxt field indicates that the query was not successful, perform the LOADPM command again. If the system generates same log message is after you reissue the LOADPM command, replace the card.

If the number of erases that erased more than one time is close to 3000, the time of the load process increases. Replace the EEPROM in the unit with a newer one because the EEPROM is old.

The opttxt field can indicate that the programming was not successful because of a file name that was not correct. In this condition, the loadfile in the inventory table is not correct. Change the file name in the inventory table.

The opttxt field can indicate that the programming was not successful because of flags that were not correct. In this condition, the loadfile in the inventory table is not correct. Return the unit to service to upgrade the erased EEPROM. Change the firmware file that includes correct flags. Replace the loadfile.

The opttxt field can indicate that the programming was not successful because burning action failed. In this condition, issue the LOADPM command again. If the system generates the same log message after you reissue the LOADPM command, replace the EEPROM. If the system generates the same log message after the reissue, replace the card.

PM181 (continued)

The opttxt field can indicate that the programming was not successful because of address overlap. In this condition, the loadfile in the inventory table is not correct. Change the file name in the inventory table.

The opttxt field can indicate that the programming was not successful because of an S-record that was not legal. In this condition, the loadfile in the inventory table is not correct. Change the file name in the inventory table.

The opttxt field can indicate that the programming was not successful because of address range error. In this condition, the loadfile in the inventory table is not correct. Change the file name in the inventory table.

If the opttxt field indicates that the checksum of the EEPROM failed, perform the LOADPM command again. If the system generates the same log, change the file name in the inventory table.

If the opttxt field indicates that the switching action between the two EEPROMs failed, perform the LOADPM command. If the system generates the same log again, replace the card.

If the opttxt field indicates that the ROM diagnostics failed, perform the LOADPM command. If the system generates the same log, replace the card.

The opttxt field can indicate that the running on the EEPROM that executes was not successful. In this condition, check for additional log messages and load the unit again with the previous firmware. Load the firmware to the EEPROM. If the log appears again, replace the card.

The opttxt field can indicate LCM REX test has not been performed on this node for nn days. This field also can indicate LCMCOV REX test has not been performed on this node for nn days. In these conditions, the operating-company technician can determine why the test was not performed on the specified LCM. The TST REX OFF or TST COVREX OFF commands can cause the system to disable REX testing on the LCM. These commands are at the LCM level of the MAP display. In this condition, the technician should make the correct entry changes to enable REX testing for the LCM.

If the opttxt field indicates LCM REX TEST PASSED or LCMCOV REX TEST PASSED, no action is required.

The system can generate this log because an NT8X46 card fails a PCM or signaling test. In this condition, follow resolution recommendations in the PCM/Signaling test failures table. A card that has faults affects voice and data

PM181 (continued)

calls until you replace the card. Refer to *Meridian SL-100 Digital Line Module Reference Manual* for additional information on the NT8X46 card.

The system can generate this log as a result of an override of the decision of the SWACT controller. This condition does not require immediate action. The system generates this log to inform the user that a SWACT back occurred. This log also informs the user if the SWACT back was an override of the decision of the SWACT controller. The system also generates this log to identify the user with the responsibility for the SWACT.

If the state of the ILDR changes to ISTb, SysB, or switch bank failure, proceed according to the failure reason. If none of these changes are the reason, there is no action required.

If you correctly load the ILDR file, there is no action required.

If the ILDR load operation fails, check the reason for the failure and proceed as required.

A continuing and prolonged occurrence of the ILD overload state can require distribution of the users again.

There is no action required if ILDR enters or exits the congestion state.

If the XPM maintenance arbitrator (MtcArb) diagnostic detects a card that has faults in the XPM unit, replace the card.

If the RTS fails because of an Extended Messaging Hardware Mismatch, install the appropriate circuit packs to support extended messaging.

If the CDT Audit detects a CDT Chksm Mismatch, the system sets the peripheral ISTb. The log identifies the mismatched CDM table. To clear the ISTb, busy (BSY) and return the peripheral to service (RTS). This action sends a static data download to the PM and corrects the static data mismatch in the CDM table.

If the message `Could not configure NETPROT for unit 1 occurs`, reload static data. Use the LOADPM command to reload static data in the unit identified in the log (for example, LOADPM UNIT 1 CC DATA).

If the flag `xpm_supports_dynamic_sd` is false, the 1 minute audit sets the boolean to 'True' and generates a log indicating the same.

PM181 (continued)**Associated OM registers**

There are no associated OM registers.

Additional information**Host-requested diagnostics**

The following table provides failure reasons for host-requested diagnostics:

Host-requested diagnostics (Sheet 1 of 2)

Failure reason	Explanation
CMR NT6X78AA OOS CMR Diagnostic Fail	Indicates the class modem resource card is out-of-service. This failure implies that the calling number delivery feature does not work for terminating lines on that peripheral.
Test Failed: CTRDIAG	Indicates the detection of an operational fault on the CX10. Call progress tone receiver (CTR) configured in the specified test access controller XPM (TAC) is not available for call progress tone reception.
Test Failed: CPADIAG	Indicates the detection of an operational fault on the CX09. Class protocol analyzer (CPA) configured in the specified TAC is not available for class message reception.
Diagnostic TestAll passed.	Indicates diagnostics ran and did not find faults.
Diagnostic TestAll failed.	Indicates the diagnostic failed but was not able to generate a card list.
Diagnostic TestAll failed, CardList: nXnn, nXnn	Indicates the diagnostic failed the cards listed in the card list. Table ROM test failures provide the text strings that reflect the failure of ROM tests run on the NT6X51AB board. Refer to the end of the log for the Table ROM test failures.
Diagnostic TestAll failed, Invalid Static Data.	Indicates the diagnostic failed because the requested diagnostics require static data in the peripheral module.
Diagnostic TestAll failed, a resource was unavailable.	Indicates the request to run a diagnostic. The diagnostic system in the PM was not able to allocate all the resources that the diagnostic required.
Diagnostic TestAll was not run.	Indicates that for some reason, the diagnostic system in the PM was not able to run the requested diagnostic.
Diagnostic TestAll failed, PP has an invalid load.	Indicates the diagnostic system did not run the diagnostic because this system has a temporary overload.

PM181 (continued)**Host-requested diagnostics (Sheet 2 of 2)**

Failure reason	Explanation
Diagnostic TestAll not run, Diagnostic system is in overload	Indicates the diagnostic system did not run the diagnostic because this system has a temporary overload.
Software error in Diagnostic TestAll	Indicates the diagnostic system encountered a software error. The error occurred when the system tried to run the requested diagnostics.
Diagnostic Test All not present in PP load.	Indicates the requested diagnostic is not present in that given peripheral module.
Diagnostic TestAll - unknown return code.	Indicates the diagnostic system returned a reply to the host that the host cannot process.

The following table provides maintenance action explanations for host-requested diagnostics.

Maintenance action table (Sheet 1 of 2)

Maintenance action	Explanation
(Blank)	There is no action required.
Reload this unit.	
BSY and RTS this unit.	
Diagnose this unit.	The audits in the PM discovered a fault. Use the TST command from the MAP display to isolate the fault in this unit.
Try diagnostics again later.	
Watch for and report PM180 logs.	The diagnostics can have triggered some PM180 logs. Record these PM180 logs on any problem report.
Replace cards on card list.	The card list presents cards in order of the most probable cause of the failure. Replace each card in order, testing with each replacement until a replacement clears the fault.
Report this log to your field support division.	
BSY and RTS C-Side PP LCM REMn n	A C-side peripheral module is the most probable cause of the failure. The most possible state for this module is a system busy state. Perform the BSY and RTS commands on the peripheral module identified in the text section of the log.

PM181 (continued)**Maintenance action table (Sheet 2 of 2)**

Maintenance action	Explanation
Diagnose C-Side PP LCM REMn n n	A fault isolation in the PM determined the fault lies in the C-side peripheral. Perform the POST and TST commands on the peripheral identified in the log text.
Diagnose C-Side links:	Post the C-side peripheral of this unit and diagnose the P-side links of that peripheral module.
Reload Static Data:	Use the LOADPM command to reload static data in the unit identified in the log (for example, LOADPM UNIT 1 CC DATA).

DPMC faults

The format of the text string (opttxt) for digital port maintenance card (DPMC) faults is as follows;

Diag Failed: DPMC Fault - <fault reason>

The following table lists DPMC faults and actions:

DPMC fault table (Sheet 1 of 2)

DPMC fault reason	Action
Card Not Present	Insert a DPMC card completely in the DLM shelf in slot 13 or change customer data in table DLMINV. Change this data to indicate that the DLM is not equipped with a DPMC.
Card Not Accessible	The card was in use during the test. Start InSv tests on one of the units of the DLM to test the DPMC again.
Control Logic Defective	Replace the DPMC.
Relay Drivers Defective	Replace the DPMC.
Facility Sensors Defective	Replace the DPMC.
DSIC 30V Measurement Circuit Defective	Replace the DPMC.
Loop Voltage Sensor Defective	Replace the DPMC.
30V Source Defective	Replace the DPMC.
Defective DSIC Emulation Circuit	Replace the DPMC.

PM181 (continued)**DPMC fault table (Sheet 2 of 2)**

DPMC fault reason	Action
Prime DSIC 10V Measurement Circuit Defective	Replace the DPMC.
Mate DSIC 10V Measurement Circuit Defective	Replace the DPMC.

RLCM/RDLM-ESA messages

The following table provides RLCM/RDLM-ESA log messages and actions:

RLCM/RDLM-ESA table

RLCM/RDLM-ESA message	Explanation	Action
PM in ESA, communication restored, ready to be returned to service	The RLCM/RDLM runs in ESA and the office parameter RLCM_XPMESAEXIT is set to 0. This condition means that the system will issue a warning log for every audit cycle.	Manually return the RLCM/RDLM to service when problems with the links of the RLCM/RDLMs links are resolved.
ESA Exit failed, Reason: no reply from PM	Indicates that the RLCM/RDLM did not perform a successful exit from the ESA.	For information only.
LCM unit inhibiting ESA. Return to service or reload this PM.	The CC found an LCM unit that requests ESA while the LCM is InSv. The possible cause is a defective exit or an ESA REX test.	Busy and return the unit to service to clear the problem. If this action does not work, reload the unit from the mate and return the unit to service.
DLM unit inhibiting ESA. Return to service or reload this	The CC found a DLM unit that requests ESA while the DLM is InSv. The possible cause is a defective exit or an ESA REX test.	Busy and return the unit to service to clear the problem. If this action does not work, reload the unit from the mate and return the unit to service.
DLM unit inhibiting ESA. Return to service or reload this PM.	The CC found a DLM unit that requests ESA while the DLM is InSv. The possible cause is a defective exit or an ESA REX Test.	Busy and return the unit to service to clear the problem. If this action does not work, reload the unit from the mate and return the unit to service.

PM181 (continued)**EIU failure messages**

The following table lists EIU failure messages and actions.

EIU failure message table (Sheet 1 of 4)

EIU failure message	Additional information	Action
ISTb condition	Indicates the EIU detects the following errors on the LAN: • rx framing errors • rx overflow errors • rx CRC errors • tx deferred errors • loss of carrier errors • late collision errors • retries exceeded errors	Perform external diagnostics. Retain all reports generated 5 min before and 5 min after this report and contact the next level of maintenance.
ISTb condition - lack of buftype	Indicates one of the following buffers caused the EIU to overload: • rx sw buffers • tx hw buffers	Retain all reports generated 5 min before and 5 min after this report and contact the next level of support.
In-service Test Failure Card: <cardtxt> <failure id>	Indicates a test failure occurred. Subfield cardtxt identifies the card. Subfield failure id indicates one of the following messages: EIC CARD LOCATE TEST EIP CARD LOCATE TEST EIP CARD ID PROM TEST	Follow the procedures as indicated for each failure id. Verify that the product engineering code (PEC) of the card in the slot is a valid Ethernet interface card (EIC) PEC. Run the test again. Verify that the Ethernet interface paddle board (EIP) card is in the correct shelf and slot. Run the test again. Verify that the PEC of the paddle board in the EIP shelf and slot is a valid EIP PEC. Run the test again.

PM181 (continued)**EIU failure message table (Sheet 2 of 4)**

EIU failure message	Additional information	Action
Operation Affecting Fault: faultxt	EIC CARD TEST	Replace the EIC for the specified EIU and run the test again.
	EIP CARD TEST	Replace the EIP card for the specified EIU and run the test again.
	EIC AND EIP CARD TEST	Replace the EIC for the specified EIU and run the test again. If the second test fails for the same reason, replace the EIP card and run the test again.
	EIP AND EIC CARD TEST	Replace the EIP card for the specified EIU and run the test again. If the second test fails for the same reason, replace the EIC and run the test again.
	Indicates the fault encountered affects the operation. One of the following messages generates:	Refer to the fault messages for any possible action to take.
	Local EIU mtce software error: rsntxt. Field rsntxt consists of one of the following messages:	The system automatically places the EIU in a system busy state. Save this report and all other reports generated in the past 5 min. Contact the next level of support.
	• Inconsistent local mtce state • Unexpected msg from EICM • Bad parms for EICM command • EICM in illegal state for command	
	EIC mtce software error	
		The system automatically places the EIU in a system busy state. Save this report and all other reports generated in the past 5 min. Contact the next level of maintenance.

PM181 (continued)**EIU failure message table (Sheet 3 of 4)**

EIU failure message	Additional information	Action
	• Excessive spurious interrupts • EIC card failure	The system automatically places the EIU in a system busy state. Save this report and all other reports generated in the past 5 min. Contact the next level of support.
	EIU fault: <rsntxt> - Subfield "rsntxt" consists of one of the following messages:	Refer to the correct reason for any possible action to take.
	Enable failed - EIC card not found	Verify that the EIC card is in the correct shelf and slot. Attempt to return the EIU to service.
	Enable failed - EIC PEC mismatch	Verify that the PEC of the card in the EIC shelf and slot is a valid EIC PEC. Return the EIU to service.
	Enable failed - EIP card not found	Verify that the EIP card is in the correct shelf and slot. Return the EIU to service.
	Enable failed - EIP PEC mismatch	Verify that the PEC of the card in the EIP shelf and slot is a valid EIP PEC. Return the EIU to service.
	Enable failed - EIC card failure	Replace the EIC card for the specified EIU. Return the EIU to service.
	Enable failed - EIP card failure	Replace the EIP card for the specified EIU. Return the EIU to service.

PM181 (continued)

EIU failure message table (Sheet 4 of 4)

EIU failure message	Additional information	Action
	Enable failed - EIC and EIP cards failed (EIC most probable)	Replace the EIC card for the specified EIU. Try to return the EIU to service. If the second attempt fails for the same reason, replace the EIP card. Return the EIU to service.
	Enable failed - EIP and EIC cards failed (EIP most probable)	Replace the EIP card for the specified EIU and return the EIU to service. If the second attempt fails for the same reason, replace the EIC card. Return the EIU to service.

PM181 (continued)**NT8X46 PCM/signaling test failure**

The following table lists NT8X46 PCM/signaling test failure messages and actions:

NT8X46 PCM table

NT8X46 PCM/signaling test failure message	Action
For the following messages: • Unit 0 failed PCM testing. • Unit 0 failed signaling tests. • Unit 0 failed PCM & signaling tests.	If unit 1 is already in a SysB state, unit 0 becomes ISTb. Replace the NT8X46 card in unit 0 as soon as possible. If unit 1 is in an InSv state, unit 0 becomes SysB. Run an InSv test on unit 1. If unit 1 passes and all data packet controllers (DPC) remain InSv, replace the NT8X46 card for unit 0. If any DPCs become SysB during the unit 1 InSv testing, the unit 0 NT8X46 card can be safe. Replace the NT8X47 cards associated with the DPCs that are SysB. Return those cards to service and return to service unit 0. If unit 0 stays in service, the NT8X47 cards are defective and unit 0 NT8X46 card works. If unit 0 becomes SysB again, and the NT8X46 reports the same failure, replace the unit 0 NT8X46 card.
For the following messages: • Unit 1 failed PCM testing. • Unit 1 failed signaling tests. • Unit 1 failed PCM & signaling tests.	If unit 0 is already in a SysB state, the state of unit 1 becomes ISTb. Replace the NT8X46 card in unit 1 as soon as possible. If unit 0 is in an InSv state, the state of unit 1 becomes SysB. Run an InSv test on unit 0. If unit 0 passes and all DPCs remain in service, replace the NT8X46 card for unit 1. If any DPCs become SysB during the unit 0 in service testing, the unit 1 NT8X46 card can be working. Replace the NT8X47 cards associated with the DPCs that are SysB. Return those cards to service and return unit 1 to service. If unit 1 stays in service, the NT8X47 cards are defective. The unit 1 NT8X46 card works. If unit 1 becomes SysB again, and the NT8X46 reports the same failure, replace the unit 1 NT8X46 card.

PM181 (continued)**ESA Failure**

The following table lists emergency stand-alone (ESA) failure messages and actions:

of ESA failure messages (Sheet 1 of 2)

ESA failure message	Additional Information	Action
Preparation Failure: LCM REMn nn n Unit n failed to enter ESA	One of the C-side LCM units failed to enter ESA when the software requested this action.	Check the state of the LCM unit. If SysB, attempt to RTS the LCM unit.
Preparation Failure: DLM REMn nn n Unit n failed to enter ESA	One of the C-side DLM units failed to enter ESA when the software requested this action.	Check the state of the DLM unit. If SysB, attempt to return the DLM unit to service.
ESA REX preparation Failure: LCM REMn nn n Unit n failed to enter ESA	Maintenance already started on the LCM when the REX test was requested. This maintenance on the LCM prevents the entry of the LCM unit into the ESA and aborts the REX test.	There is no action required.
ESA REX preparation Failure: DLM REMn nn n Unit n failed to enter ESA	Maintenance already started on the DLM when the REX test was requested. This maintenance on the DLM prevents the entry of the DLM unit into the ESA and aborts the REX test.	There is no action required.
Test Failure: LCM REMn nn n Unit n failed to exit ESA	The ESA software placed a unit of the LCM in ESA. The system used this unit to run the REX test. When the test was complete, the LCM unit failed to return to service. This failure caused the REX test to abort. (A no resources message normally accompanies this occurrence at the MAP display.)	Attempt to RTS the LCM unit.
Test Failure: DLM REMn nn n Unit n failed to exit ESA	The ESA software placed a unit of the DLM in ESA. The system used this unit to run the REX test. When the test was complete, the DLM unit failed to return to service. This failure caused the REX test to abort. (A no resources message normally accompanies this occurrence at the MAP display.)	Attempt to RTS the DLM unit.

PM181 (continued)**of ESA failure messages (Sheet 2 of 2)**

ESA failure message	Additional Information	Action
Preparation Failure: LCM REMn nn n Unit n failed C-side message test	The C-side LCM failed its C-side messaging test.	Post the PM 0on the C-side of the LCM unit that reports the fault. Test the P-side link from the PM to that LCM unit.
Preparation Failure: DLM REMn nn n Unit n failed C-side message test	The C-side DLM failed its C-side messaging test.	Post the PM on the C-side of the DLM unit that reports the fault. Test the P-side link from the PM to that DLM unit.
ESA Test Preparation Failure: RMM n failed C-side message test	The remote maintenance module (RMM) failed the C-side messaging test. The ESA software module needs the RMM in order to perform an REX test.	Check the state of the RMM to make sure that the RMM is in service and can pass diagnostics.
ESA Test Preparation Failure: ESA failed C-side message test	The ESA software module failed the internal C-side messaging test for ESA.	Post the LCM/DLM that contains the ESA module. Attempt to return to service the system busy link to the ESA.

ROM test failure

The following is a list of ROM test failure messages, all of which require that you replace the NT6X51AB board:

- Config reg rw test
- Stack test
- Rom size test
- Manual bank switch test
- Auto bank switch test
- Common bank data test

PM181 (continued)

- Code execution test
- Common bank exec test

RCU and SMU status

The following table lists remote carrier urban (RCU) and SMU status messages and actions:

RCU/SMU status message table (Sheet 1 of 2)

RCU/SMU status message	Explanation	Action
Node Status Mismatch	A difference in status information between the SMU and the CC is present.	Contact your maintenance support group.
AST Line Testing Initiated from <MAP or RCU>	Automatic system testing initiated from the MAP level or from the faceplate of the maintenance card at the RCU. Automatic system testing includes testing and switchover of common equipment cards and line card testing.	There is no action required.
AST Line Testing Completed from <MAP or RCU>	The system initiated automatic system testing from the MAP level or faceplate of the maintenance card at the RCU. Then the system completed automatic system testing.	There is no action required.
AST Line Testing Aborted from <MAP or RCU>	One of the following reasons caused the automatic system testing to abort: • a user entered the TST command with the ABORTLNTST parameter at the MAP display • a user pressed the EXEC button at the faceplate of the maintenance card at the RCU • a user set the AUTOTEST field in Table RCUINV to N during a test	There is no action required.
Switchover Initiated	The system initiates 24 h switchover for each RCU.	There is no action required.
Switchover Completed	24 h switchover for each RCU is complete.	There is no action required.

PM181 (continued)**RCU/SMU status message table (Sheet 2 of 2)**

RCU/SMU status message	Explanation	Action
Switchover Timeout waiting for Reply	A task waiting for a reply on the completion of the 24 h switchover for a RCU has timed out.	There is no action required.
RCU node status flag cleared	The setting of the RCU node status flag was not correct. This flag setting is now clear.	There is no action required.
Status Mismatch: Call Processing; *STATUS*, RCU Node Status; *STATUS*	The call processing node status table does not agree with the current status of the RCU. The call processing node status table is a quick reference for call processing to check the status of a given node. The RCU node status table records the current status.	There is no action required. The system updates the call processing node status table to reflect the status from the RCU node status table.
PCM Loopback test failed on P-side link 5	The PCM loopback test failed on the specified link. A PM183 state change log always follows this log. The Pm183 log indicates that the system placed the link in the SysB state.	Post the correct RCU from the PM level of the MAP display, and determine if any alarms are present. Run tests on the RCU or the links to determine the cause of the failure. Link tests can run with the SMU posted at the PM level, or with the links posted at the CARRIER level.

PM181 (continued)

TONES sample generation messages

The following table lists TONES sample generation messages and actions:

TONES sample generation messages table

TONES sample generation message	Explanation	Action
Maketone Passed	Indicates the tone samples generation facility in the XPM had successful completion.	There is no action required.
Maketone Failed	Indicates the tones samples generation facility in the XPM failed.	After posting the defective PM on the MAP display, ManB the unit. Run OOS tests and proceed depending on return code. If OOS test fails, reload and return the unit to service. If the RTS command is not successful, contact the next level of support.

CMR loading status messages

The following table lists CLASS modem resource (CMR) loading status messages and actions:

CMR loading status message table

CMR status message	Explanation
Loaded CMR	Indicates the system loaded the CMR file.
Loaded CMR via Mate	Indicates the system loaded the CMR file through the mate.
Failed to Load the CMR	Indicates the system failed to load the CMR file.
Failed to load CMR via Mate	Indicates the system was not able to load the CMR file through the mate.
Task Aborted while Loading CMR	Indicates loading process. was aborted.

PM181 (continued)**XPM loading status messages**

The following table lists XPM loading status messages and actions:

XPM loading status message table

XPM loading status message	Description
Loaded XPM	Indicates the system loaded the XPM file.
Loaded XPM via Mate	Indicates the system loaded the XPM through the mate.
Failed to Load the XPM	Indicates the system did not load the XPM.
Failed to load XPM via Mate	Indicates the system was not able to load the XPM through the mate.
Task Aborted while Loading XPM	Indicates the loading process was aborted.

The following table lists a summary of loading types:

XPM loading types table (Sheet 1 of 3)

Loading type	Description
Regular loading	Loaded with NDT28AU. Loaded CMR with CMR28AB. Failed to load with NDT28AU. Failed to load while loading with NDT28AU. Task aborted while loading with NDT28AU. Task aborted while loading CMR with CMR28AU.
Mate loading	Received NDT28AU and broadcasted to the inactive unit of the NDT28AU. Failed to receive NDT28AU and failed to broadcast to the inactive unit of the NDT28AU. Task aborted during reception of NDT28AU broadcasting to the inactive unit of the NDT28AU.
Enhanced RCC loading	Loaded with NRC28AU and broadcasted to the inactive unit of the NRC28AU. Loaded CMR with CMR28AU and broadcasted to the inactive unit of the CMR.

PM181 (continued)**XPM loading types table (Sheet 2 of 3)**

Loading type	Description
Broadcast loading	Failed to load with NRC28AU and failed to broadcast to the inactive unit of the NRC28AU.
	Failed to load CMR with CMR28AU and failed to broadcast to the inactive unit of the CMR.
	Loaded with NRC28AU.
	Loaded CMR with CMR28AU.
	Failed to load with NRC28AU.
	Failed to load CMR with CMR28AU.
	Task aborted while loading with NRC28AU and broadcasting to the mate of NRC28AU.
	Task aborted while loading CMR with CMR28AU and broadcasting to the CMR mate.
	Task aborted while loading with NRC28AU.
	Task aborted while loading CMR with CMR28AU.
	Loaded with NDT28AU and broadcasted to unit 0 of DTC 0, 1, 2, 3, 4.
	Loaded CMR with CMR28AU and broadcasted to unit 0 of DTC 0, 1, 2, 3, 4.
	Loaded with NDT28AU and broadcasted to the mate and both units of DTC 0, 1, 2, 3, 4.
	Loaded CMR with CMR28AU and broadcasted to the mate and both units of DTC 0, 1, 2, 3, 4.
	Failed to load with NDT28AU and failed to broadcast to unit 0 of DTC 0, 1, 2, 3, 4.
	Failed to load CMR with CMR28AU and failed to broadcast to unit 0 of DTC 0, 1, 2, 3, 4.
	Failed to load with NDT28AU. Failed to broadcast to the mate of NDT28AU and both units of DTC 0, 1, 2, 3, 4.
	Failed to load CMR with CMR28AU. Failed to broadcast to the CMR mate and both units of DTC 0, 1, 2, 3, 4.

PM181 (continued)**XPM loading types table (Sheet 3 of 3)**

Loading type	Description
Broadcast mate loading	Task aborted while loading with NDT28AU and broadcasting to unit 0 of DTC 0, 1, 2, 3, 4.
	Task aborted while loading CMR with CMR28AU and broadcasting to unit 0 of DTC 0, 1, 2, 3, 4.
	Task aborted while loading with NDT28AU. Task aborted while broadcasting to the mate of NDT28AU and both units of DTC 0, 1, 2, 3, 4.
	Task aborted while loading CMR with CMR28AU and broadcasting to the CMR mate and both units of DTC 0, 1, 2, 3, 4.
	Received NDT28AU and broadcasted to the inactive unit of DTC 0, 1, 2, 3, 4.
	Received CMR28AU and broadcasted to the inactive unit of DTC 0, 1, 2, 3, 4.
	Failed to receive NDT28AU and failed to broadcast to the inactive unit of DTC 0, 1, 2, 3, 4.
Broadcast LCM loading	Failed to receive CMR28AU and failed to broadcast to the inactive unit of DTC 0, 1, 2, 3, 4.
	Task aborted while receiving NDT28AU and broadcasting to the inactive unit of DTC 0, 1, 2, 3, 4.
	Task aborted while receiving CMR28AU and broadcasting to the inactive unit of DTC 0, 1, 2, 3, 4.
	Received LCM28A and broadcasted to unit 0 of LCM HOST 00 0, REM1 00 1, HOST 10 0.
	Received LCM28A and broadcasted to both units of LCM HOST 00 0, REM1 00 1, HOST 10 0.
	Failed to receive NDT28AU and failed to broadcast to unit 0 of LCM HOST 00 0, REM1 00 1, HOST 10 0
	Task aborted while receiving NDT28AU and broadcasting to unit 0 of LCM HOST 00 0, REM1 00 1, HOST 10 0.

PM181 (continued)

The following list provides a summary of loading results:

- failed to open link
- no reply from PM
- bad message received from PM
- fail message received from PM
- first get on file failed
- invalid I/P record length
- invalid first char
- invalid character
- load error message received
- failed to get checksum
- failed to open file
- C-side links unavailable
- bad checksum over load
- record count error
- PM reports bad load checksum
- load message error count
- no resources available - try again
- no system resources are available
- load ESA aborted: Nil ESA target
- failed to submit secondary process
- PM excluded from loading group
- timed out waiting to open file
- unexpected who am I (WAI) detected from PM

PM181 (continued)**Operational message faults**

The following tables explain operational message faults for DMSX and HDLC protocols:

Operational message fault table for DMSX protocols (Sheet 1 of 2)

Operational message fault	Explanation
BACKPR	Back pressure time-out - no free receiver buffers.
BADCRC	Occurs when the cyclic redundancy check (CRC) code is not correct.
BADSUM	Occurs when the checksum for a message is not correct.
BCKDWN	Occurs when a slave process waits for a SEND message so that the process can transmit a message. Instead the slave process receives an MIS (may I send) message from the master process.
BUFOVF	Occurs when no buffers are available.
FLSMIS	False MIS that occurs when only one MIS is on the link. A minimum of two MISs are needed on the link for the message to be valid.
MISTO	May I send Time Out.
MSGLEN	Message length error that occurs during reception of a message length that is not correct.
NACK1	Occurs during reception of the first negative acknowledgement (NACK) after a message transmission.
NACK2	Occurs during the reception of a second NACK after a message transmission.
NACKX	Occurs during NACK transmission after reception of a corrupted message.
RBNDMSG	Rebounded message error occurs when a message rebounds.
WACKTO	Wait for acknowledgement time-out error occurs when transmission of a SEND does not result in reception of a start of message (SOM).
WANRTO	Wait for Idle after acknowledging. A positive acknowledgement (PACK) or a NACK can acknowledge a message. A message time-out occurs when this acknowledgement does not result in reception of IDLE.

PM181 (continued)

Operational message fault table for DMSX protocols (Sheet 2 of 2)

Operational message fault	Explanation
WANXTO	Wait for Idle after a PACK. A NACK time-out occurs when the reception of a NACK acknowledgement does not result in the reception of a PACK or NACK.
WASTO	Wait to send time-out occurs when the transmission of an MIS does not result in the reception of a filtered SEND.

Operational message fault table for HDLC protocols

Operational message fault	Explanation
INGLN	Occurs when the first alignment attempt of the protocol fails.
MSURX	The message signal unit (MSU) contains messages that UP tasks generate.
MSUTX	The number of MSUs transmitted on the link divided by 128.
NKRCV	Occurs during reception of NACK.
NTRSH	The number of MSUs retrieved from the transmission queue after reactivation occurred.
REACT	The number of reactivations on the link.
SGERR	Detects loops on the link, and occurs in two conditions: • the system receives on the link a bad backward sequence number (BSN) or bad forward indicator bit (FIB) detected in a signal unit (SU) • the system detects a looped signal
SGRCV	The system detects an error in a received SU.

Loopback status messages

The following is a list of loopback status messages:

- Local loopback enabled
- Local loopback cleared
- Remote loopback enabled

PM181 (continued)

- Remote loopback cleared
- Remote loopback waiting enabled

PSAP test failure messages

The following table lists public-safety answering point (PSAP) messages and actions:

PSAP test failure messages table

PSAP test failure message	Explanation	Action
PM not responding	Identifies that the generated LDT fails to receive an expected message from the SMU. This message also can indicate that the CC and SMU do not agree on the status of an LDT node.	Try to determine reason for the failure of the SMU to respond.
LDT node status flag cleared	Indicates that the audit set and cleared the LDT node status flag by accident.	There is no action required.
LDT node status; ManB	Identifies that the generated call processing node status table is not the same as the correct status of the LDT. The LDT node status table records the correct status of the LDT.	There is no action required.
Node status mismatch	Indicates differences in information between the SMU node/link status table and the CC statue table.	There is no action required.

PM181 (continued)

Parity audit fault messages

The following table lists parity audit fault messages and actions:

Parity audit fault message table

Parity audit fault message	Explanation	Action
Parity audit detected hard parity fault	Indicates that the parity audit detected a parity fault that a hardware failure caused. The system generates a list of memory cards that have faults.	Perform the following steps: 1. Replace the card that has faults displayed in the cardlist. 2. Reload and RTS the unit that has faults. Refer to table XPM LOADING STATUS for loading information.
Parity audit detected soft parity fault in the program store.	Indicates that the parity audit detected a parity error that a software fault in the program store caused.	Reload and RTS the unit that has faults indicated in the log.
Parity audit detected soft parity fault in the data store.	Indicates that the parity audit detected a parity error that a software fault in the data store caused.	BUSY and RTS the unit that has faults indicated in the log.
Parity audit detected intermittent parity fault.	Indicates that the parity audit detected a parity error. The parity audit did not detect a parity error on the reread of the location at fault.	BUSY and RTS the unit that has faults.

RCC2 messages

A list of RCC2 messages follows:

- Mismatch of the firmware edition between the LOADABLE and EXECUTABLE EEPROM in unit
- Mismatch of the firmware edition between the inventory table and EEPROM # & in the unit
- FAIL TO LOAD EEPROM - UNIT FOUND IN FRM LEVEL
- FAIL TO LOAD EEPROM - TIME OUT OPEN ROUTE
- FAIL TO LOAD EEPROM - UNIT FOUND IN ROM LEVEL
- FAIL TO QUERY FOR EDITION OF EEPROM

PM181 (continued)

- ERASE EEPROM #& COMPLETED SUCCESSFULLY # OF REERASES : &\$ # OF REWRITES : &\$
- FAIL TO ERASE EEPROM #& # OF REERASES : &\$ # OF REWRITES : &\$
- FAIL TO LOAD EEPROM # & - FILE INCORRECT
- FAIL TO LOAD EEPROM # & - FLAGS INCORRECT
- FAIL TO LOAD EEPROM # & - FAIL TO PROGRAM
- FAIL TO LOAD EEPROM # & - ADDRESS OVERLAP
- FAIL TO LOAD EEPROM # & - ILLEGAL S-RECORD
- FAIL TO LOAD EEPROM # & - ADDRESS RANGE VIOLATION
- BAD EEPROM # & CHECKSUM MS COUNT OF CC IS : N MSG COUNT OF XPM IS : N
- FAIL TO LOAD EEPROM # & - FAIL TO SWITCH BETWEEN EEPROMS
- FAIL TO LOAD EEPROM # & - ROM DIAGNOSTIC FAILED
- FAIL TO LOAD EEPROM # & - FAIL TO RUN FROM EEPROM # \$
- FAIL TO LOAD EEPROM # & - FLAGS UPDATE FAIL
- UPDATE EEPROM #& WITH <file name> COMPLETED SUCCESSFULLY EEPROM # & EDITION WAS CHANGED FROM <edition> to <edition>
- UPDATE EEPROM #& INFO : # OF REWRITES :&\$
- UPGRADE EEPROM #& WITH <file name> COMPLETED SUCCESSFULLY EEPROM #& EDITION WAS CHANGED FROM <edition> TO <edition>
- UPGRADE EEPROM # & INFO : # OF REERASES : &\$ OF REWRITES : &\$
- If the loading process is aborted the text field will read: TASK ABORTED WHILE LOADING EEPROM
- HDLC Cside msg link GAINED sync - link 0
- HDLC Cside msg link LOST sync - link 2

XLIU ISTb messages

When congestion causes an X.25/X.75 link interface unit (XLIU) to go ISTb, the system issues a PM181 log. The system issues PM181 to provide the

PM181 (end)

reason for the congestion. The following table lists XLIU ISTb messages. These messages use the following acronyms:

- packet (PKT)
- buffer management system (BMS)
- dynamic window (DW)
- HDLC frame processor (HFP)
- HFP buffer management (HBM)
- receiver not ready (RNR)
- layer two (L2)

XLIU ISTb messages table

XLIU message	Explanation	Action
PKT drop threshold reached.	ISTb condition	There is no action required.
BMS DW congestion threshold reached.	ISTb condition	There is no action required.
HBM DW congestion threshold reached.	ISTb condition	There is no action required.
BMS RNR@L2 threshold reached.	ISTb condition	There is no action required.
HBM RNR@L2 threshold reached.	ISTb condition	There is no action required.

PM182**Explanation**

Log report PM182 associates with a major PM alarm. The peripheral module (PM) subsystem generates PM182. PM 182 reports that either an F-bus or one or more LIM F-bus taps changed state to manual busy in the last 3 s. It is possible that operating personnel must manually busy a LIM F-bus to perform maintenance tasks.

Format

The log report format for PM182 is as follows:

```
<node> <Alarm_ind> PM182 mmmdd hh:mm:ss<seqnbr>ManB
LIM <LIM_number> LIS <LIS_number> FBus <F-bus_number> <tap header>
FROM: <From_s> TO: ManB TAP : <Tap_number>
```

Example

An example of log report PM182 follows:

```
PM182 SEP05 18:14:33 8100 MANB
LIM 0 LIS 2 FBus 1 Tap
From: InSv To: ManB (NA) : Tap 7
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
node		
Alarm_ind		Optional field. Indicates the type of alarm that accompanied the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates alarm did not occur.

PM182 (continued)

(Sheet 2 of 3)

Field	Value	Description
pmid	alphanumeric	Indicates the PM affected. Note: A change of state in the FBus taps in an LIM causes the subsystem to generate a PM183 log report. When the subsystem generates PM183, the pmid field appears in the form: LIM nn FBus n TAP. The subfield FBus n Tap indicates the specified F-bus tap.
seqnbr	four-digit number	Identifies the sequence number of the log.
Unit n	0 or 1	Identifies the PM unit that generates the report. If the PM that generates the report is an emergency standalone (ESA), there is no unit specified.
statxt	InSv, ISTb, SysB, and ManB	Specifies the state of the F-bus or tap, for example, in service (InSv), system busy (SysB), manual busy (ManB), or in service trouble (Istb)
FBus	0 or 1	Identifies the F-bus affected by the change of state.
LIS header	LIS	Optional field. This field appears when the LIM is in triple F-bus configuration.
LIS number	1, 2, or 3	Optional field. Specifies the LIS that the log refers to.
Tap header	Tap	Optional field. Specifies the tap, if any, that the log refers to.
Tap number	0 to 35	Optional field. Specifies the tap, if any, that the log refers to. The tap number is 0 to 11 if the LIM is in the triple F-bus configuration and 0 to 35 if the LIM is in single F-bus configuration.
opttxt	Character string	Optional field. Provides additional information. Maintenance personnel can use this information for problem solving.

PM182 (continued)

(Sheet 3 of 3)

Field	Value	Description
	FROM: <state> (sq) TO: <statxt> (sq) TAP:<tap_number _set>	The subfields appear earlier in this table. The optional subfield (sq) provides the status qualifier. The system prints this subfield only when the PM in question is one of the following: • an LIM • an application processing unit (APU) • an application processing unit with UNIX (APUX) • a data communication processor (DCP) • an LIU datacom (LCOM) • an external node (EXND) • a service peripheral module (SPM) • a voice processing unit (VPU) The subfield tap_number_set identifies a group of F-bus tap numbers. For example, TAP10-12, 15, 19-21, 23 indicates that the state change that this log reports affected taps 10, 11, 12, 15, 19, 20, 21, and 23. The subfield (sq) can have one of the following values: • (NA) - Not accessible means all links to the PM unit are closed or physically out of service. Messaging between the PM and the computing module (CM) is not possible. • (RU) - Resources unavailable means external resources are out of service. The subsystem requires these resources to keep the PM unit in service.

Action

Return the LIM F-bus to service when maintenance action is complete.

Associated OM registers

There are no associated OM registers.

PM182 (end)

Additional information

Refer to the procedure "Clearing a PM LIMF major alarm" in *Alarm and Performance Monitoring Procedures*

PM183**Explanation**

This log is associated with a critical or major PM alarm. The peripheral module (PM) subsystem generates log report PM183 when either an F-bus or one or more LIM F-bus taps have changed state to system busy within the last 3 s. If the state change is not from system busy, the log is generated immediately.

Format

The format for log report PM183 follows:

```
<node> <Alarm_ind> PM183 mmmdd hh:mm:ss<seqnbr>ManB
LIM <LIM_number> LIS <LIS_number> FBus <F-bus_number> <tap header>
FROM: <From_s> TO: ManB : Tap <tap_number>
```

Examples

An example of log report PM183 follows:

```
PM183 SEP05 18:14:33 8200 SYSB
LIM 0 LIS 2 FBus 1 TAP
FROM: InSv TO: SysB : Tap 7
```

Field descriptions

The following table explains each of the fields in the log report:

(Sheet 1 of 3)

Field	Value	Description
Alarm_ind		Optional field. Specifies the type of alarm, if any, that accompanied the change of state.
	***	Specifies a critical alarm.
	**	Specifies a major alarm.
	*	Specifies a minor alarm.
	(blank)	Specifies no alarm.
Log header		Specifies the log ID, time and date of occurrence, log type, and log name.
seqnbr	four-digit number	Identifies the sequence number of the log.

PM183 (continued)

(Sheet 2 of 3)

Field	Value	Description
pmid	alphanumeric	Indicates the PM affected. Note: When a PM183 log report is generated by a change of state in the F-bus taps in a LIM, the PMID field is displayed as LIM nn F-bus n TAP. Subfield F-bus n Tap specifies the F-bus tap.
Unit n	0 or 1	Identifies the PM unit generating the report. If the PM is an emergency standalone (ESA), no unit is specified.
statxt	InSv, ISTb, SysB, and ManB	Specifies the state of the F-bus or tap, for example, in service (InSv), system busy (SysB), manual busy (ManB), or in service trouble (ISTb).
FBus	0 or 1	Identifies the F-bus affected by the change of state.
LIS header	LIS	Optional field. Displays only if the LIM is a triple F-bus configuration.
LIS number	1, 2, or 3	Optional field. Specifies the LIS to which the log refers.
Tap header	Tap	Optional field. Specifies the particular tap, if any, to which the log refers.
Tap number	0 to 35	Optional field. Specifies the particular tap, if any, to which the log refers. The tap number is 0 to 11 if the LIM is a triple F-bus configuration and 0 to 35 if the LIM is a single F-bus configuration.
opttxt	Character string	Optional field. Provides additional information for trouble isolation by software troubleshooting personnel.

PM183 (continued)

(Sheet 3 of 3)

Field	Value	Description
	FROM: <statxt> (sq)	The subfield statxt is defined earlier in this table.
	TO: <statxt> (sq)	Optional subfield (sq) provides the status qualifier. Displays only when the PM is one of the following: • LIM • application processing unit (APU) • APU with UNIX (APUX) • data communications processor (DCP) • LIU datacom (LCOM) • external node (EXND) • service peripheral module (SPM) • voice processing unit (VPU)
	TAP: <tap _number_set>	Specifies a group of F-bus tap numbers. For example, tap 10-12, 15, 19-21, 23 indicates that taps 10, 11, 12, 15, 19, 20, 21, and 23 are affected by the state change reported by the log. Subfield (sq) can have one of the following values: • (NA)—Not accessible means that all links to the PM unit are either logically closed or physically out of service. Messaging between the PM and the computing module (CM) is impossible. • (RU)—Resources unavailable means that the required external resources are out of service.

Action

Identify the system-busy LIM F-bus or tap from the first line of the log report. Post the LIM associated with the system-busy F-bus or tap. Access the F-bus MAP level (for single F-bus configuration) or LIS MAP level (for triple F-bus configuration). If both F-buses are system busy, perform the procedure "Clearing a PM LIMF critical alarm" in *Alarm and Performance Monitoring*

PM183 (end)

Procedures. If only one F-bus is system busy, perform the procedure “Cleaing a PM LIMF major alarm” in *Alarm and Performance Monitoring Procedures*.

Associated OM registers

Not applicable.

Additional information

For more information, refer to the procedure “Cleaing a PM LIMF major alarm” in *Alarm and Performance Monitoring Procedures*.

PM184**Explanation**

The system generates PM184 when the switch or a manual request returns the P-side link to service.

Format

The log report format for PM184 is as follows:

```
<node> <Alarm_ind> PM184 mmmdd hh:mm:ss<seqnbr>RTS
LIM <LIM_number> LIS <LIS_number> FBus <F-bus_number> <tap header>
FROM: <From_s> TO: InSv : Tap <tap_number>
```

Example

An example of log report PM184 follows:

```
PM184 SEP05 18:14:33 8200 RTS
LIM 0 LIS 2 FBus 1 Tap
From: ISTb To: InSv : Tap 7
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
Alarm_ind		Optional field. Specifies the type of alarm, if any, that accompanied the change of state.
	***	Specifies a critical alarm.
	**	Specifies a major alarm.
	*	Specifies a minor alarm.
	(blank)	Specifies no alarm.
Log header		Specifies the log ID, time and date of occurrence, log type, and log name.
seqnbr	four-digit number	Identifies the sequence number of the log.

PM184 (continued)

(Sheet 2 of 3)

Field	Value	Description
pmid	alphanumeric	Indicates the PM affected. Note: When a PM184 log report is generated by a change of state in the F-bus taps in a LIM, the PMID field is displayed as LIM nn F-bus n TAP. Subfield F-bus n Tap specifies the F-bus tap.
Unit n	0 or 1	Identifies the PM unit generating the report. If the PM is an emergency standalone (ESA), no unit is specified.
statxt	InSv, ISTb, SysB, and ManB	Specifies the state of the F-bus or tap, for example, in service (InSv), system busy (SysB), manual busy (ManB), or in service trouble (ISTb).
FBus	0 or 1	Identifies the F-bus affected by the change of state.
LIS header	LIS	Optional field. Displays only if the LIM is a triple F-bus configuration.
LIS number	1, 2, or 3	Optional field. Specifies the LIS to which the log refers.
Tap header	Tap	Optional field. Specifies the particular tap, if any, to which the log refers.
Tap number	0 to 35	Optional field. Specifies the particular tap, if any, to which the log refers. The tap number is 0 to 11 if the LIM is a triple F-bus configuration and 0 to 35 if the LIM is a single F-bus configuration.

PM184 (continued)

(Sheet 3 of 3)

Field	Value	Description
	FROM: <statxt> (sq)	The subfield statxt is defined earlier in this table.
	TO: <statxt> (sq)	Optional subfield (sq) provides the status qualifier. Displays only when the PM is one of the following: • LIM • application processing unit (APU) • APU with UNIX (APUX) • data communications processor (DCP) • LIU datacom (LCOM) • external node (EXND) • service peripheral module (SPM) • voice processing unit (VPU)
	TAP: <tap _number_set>	Specifies a group of F-bus tap numbers. For example, tap 10-12, 15, 19-21, 23 indicates that taps 10, 11, 12, 15, 19, 20, 21, and 23 are affected by the state change reported by the log. Subfield (sq) can have one of the following values: • (NA)—Not accessible means that all links to the PM unit are either logically closed or physically out of service. Messaging between the PM and the computing module (CM) is impossible. • (RU)—Resources unavailable means that the required external resources are out of service.

Action

There is no action required. This log is an information log.

Associated OM registers

There are no associated OM registers.

PM184 (end)

Additional information

There is no additional information.

PM185

Explanation

The PM185 log gives the trace back of the last trap that caused a peripheral to start again.

Format

The log report format for PM185 is as follows:

PM185 date time seqnbr TBL PM TRAP pmtyp pmnbr

Example

An example of log report PM185 follows:

PM185 MAY16 09:13:53 4588 TBL PM TRAP DCM 7

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
pmtyp	alphabetic	The peripheral module type.
pmbnr	0000-9999	The peripheral module number.

Action

There is no action required. This log only provides information.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PM186

Explanation

The Peripheral Module (PM) subsystem generates PM186 as general information for carriers. This log identifies problems that the carrier audit detects.

Format

The log report format for PM186 is as follows:

PM186 date time seqnbr INFO CARRIER pmtyp pmnbr CARRIER_NO:
nbr, REASON: reason, optional text

Example

An example of log report PM186 follows:

PM186 MAY16 09:13:53 4588 INFO CARRIER DCM 7 CARRIER_NO: 3
REASON: <text>

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
pmtyp	alphabetic	The peripheral module type.
pmnbr	0000-9999	The peripheral module number.
reason	alphabetic	The reason that the system generated the log.
(blank line)	constant	Consists of a blank line, 64 characters in length. The Blanks can only be overwritten by MSL layer procedures if the specific PM and carrier exists in table CARID. Refer to Table CARID in the data schema section of the <i>Translations Guide</i> .

Action

There is no action required. This log only provides information.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PM187

Explanation

The Peripheral Module (PM) subsystem generates PM187 when a PM carrier state changes to system busy (SysB).

Format

The log report format for PM187 is as follows:

```
PM187 mmmdd hh:mm:ss ssdd SYSB CARRIER pmid  
CARRIER-NO: nn
```

Example

An example of log report PM187 follows:

```
PM187 APR01 12:00:00 2112 SYSB CARRIER DCM 7  
CARRIER-NO: 23
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
SYSB CARRIER	Constant	Indicates that log report supplies information that concerns carrier.
pmid	Symbolic text	Indicates the peripheral module identification.
CARRIER-NO	0 -9999	Provides equipment identification for carrier.

Action

Perform testing and diagnostics for carrier.

If you cannot determine error condition, return carrier to service.

If you cannot determine and correct error condition, contact the next level of support.

Associated OM registers

There are no associated OM registers.

PM188

Explanation

The Peripheral Module (PM) subsystem generates PM188 when:

- the DMS system automatically protection switches a carrier.
- the switch operator manually switches a carrier with a Map command.
- a carrier is entered on disabled for protection switching.
- the switch operator manually returns a carrier to service through the MAP return-to-service (RTS) command.

The subsystem generates PM188 to notify of a carrier protection switch. Log report PM188 helps evaluate system activity.

Format

The log report format for PM188 is as follows:

```
PM188 mmmdd hh:mm:ss ssdd INFO CARRIER pmid CARRIER_NO nn  
sitenm PROTLINE: nn REASON: reastxt
```

Example

An example of log report PM188 follows:

```
PM188 APR01 12:00:00 2112 INFO CARRIER SMS 0 CARRIER_NO: 2  
REM1 4 1 PROTLINE: 6 REASON: AUTO SWITCH
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
CARRIER pmid	Symbolic text	Identifies PM involved in protection switch. Refer to Table I.
CARRIER-NO nn	0-20	Indicates the carrier number that was protection switched.
sitenm	Symbolic text	Identifies remote site. List SITE from CI MAP level for correct office remote sites. Refer to Customer Data Table SITE.

PM188 (end)

(Sheet 2 of 2)

Field	Value	Description
PROTLINE nn	0-20	Identifies protection line involved in protection switch.
REASON: reastxt	Symbolic text.	Identifies reason report the system generated. Refer to Table I.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Information-only log

This log is an information log for Nortel Networks use only. This log does not require any operating company action. The operating company can suppress or threshold this log.

PM190

Explanation

The Peripheral Module (PM) subsystem generates PM190 when the signaling terminal controller (STC) changes state to system busy (SysB) caused by a system request. The signaling terminal (ST) identified in the report is made SysB as a result of the specified change of state for the STC.

When the D-channel handler (DCH) changes state to SysB, the subsystem generates Format 2. A fault detected in the DCH makes the DCH SysB. The services that the ISDN service group (ISG) defines are switched to a spare DCH to prevent the loss of service. The services that the ISG defines are switched to a spare DCH only when a DCH is available.

Format

The log report formats for PM190 are as follows:

Format 1

```
**PM190 mmmdd hh:mm:ssss ssdd SYSB ST
      ST nnn: Bsy from sttxt STC: SysB from sttxt
```

Format 2

```
**PM190 mmmdd hh:mm:ss ssdd SYSB ST
      DCH nnn: SYSB from dchstate ISG nnn
```

Example

Examples of log report PM190 follow:

Format 1

```
**PM190 APR01 12:00:00 2112 SYSB ST
      ST 20: Bsy from CPB STC: SysB from InSv
```

Format 2

```
**PM190 APR27 12:00:22 2112 SYSB ST
      DCH 235: SYSB from INSV ISG 210
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
SYSB ST	Constant	Indicates ST was made SysB.
ST	0-127	Provides equipment identification for ST. Refer to customer data Table STINV for values.
Bsy from	Symbolic text	Defines signaling terminal state before SysB. (Previous state may not be central-side busy [CBSY].)
STC: SysB from	Symbolic text	Identifies STC state before SysB.
DCH	0-255	Identifies the DCH.
SysB from	Symbolic text	Indicates previous state of the DCH.
ISG	0-255	Identifies services in the ISG that this action affects.

Action

If the peripheral does not recover, perform diagnostics on the suspect STC or DCH. The system displays a circuit pack list on the terminal if a failure occurs. Proceed as follows:

- If the test passes but the STC or DCH is not returned-to-service, contact the next level of maintenance immediately.
- If the test fails, change out the first circuit pack listed and run the test again. If the test fails again, change the second circuit pack on the list and run the test again. Continue until the test passes or the list is exhausted.
- If the test passes, but the STC or DCH is not returned-to-service, contact the next level of maintenance immediately.
- If the list is exhausted but the test did not pass, and the STC or DCH is not returned-to-service, contact the next level of maintenance immediately.

Associated OM registers

The following pegs and usage counters correlate with this log: PM1SBU (system busy usage counter), PM1ERR (error counter), and PM2FLT (fault counter).

PM191

Explanation

The Peripheral Module (PM) subsystem generates PM191 when the signaling terminal controller (STC) changes state to manual busy (ManB) because of a manual request. The signaling terminal (ST) identified in the report is made ManB in response to the specified change of state for the STC.

The subsystem generates Format 2 when a manual request changes the D-channel handler (DCH) changes state to manual busy. The ISDN service group (ISG) identifies the services this action affects.

Format

The log report format for PM191 is as follows:

Format 1

```
**PM191 mmmdd hh:mm:ss ssdd MANB ST  
      ST nnn: Bsy from sttxt STC: ManB from sttxt
```

Format 2

```
**PM191 mmmdd hh:mm:ss ssdd MANB ST  
      DCH nnn: MANB from dchstate ISG nnn
```

Example

Examples of log report PM191 follow:

Format 1

```
**PM191 APR01 12:00:00 2112 MANB ST  
      ST 20: Bsy from Idle STC: ManB from InSv
```

Format 2

```
**PM191 APR12 11:23:33 3123 MANB ST  
      DCH 34: MANB from ISTB ISG 201
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
MANB ST	Constant	Indicates a manual request made an ST busy.
ST nnn:	0-127	Provides equipment identification for the ST. Refer to customer data Table STINV for values.
Bsy from sttxt	Symbolic text	Identifies ST state before being made ManB. Refer to Table I.
STC: ManB from sttxt	Symbolic text	Identifies STC state before being made ManB. Refer to Table I.
DCH nnn	0-255	Identifies the D Channel Handler (DCH).
dchstate	Symbolic text	Indicates previous state of the DCH. Refer to Table I.
ISG nnn	0-255	Identifies services in the ISG that this action affect.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

The manual busy usage counter, PM1MBU, and the fault counter, PM2FLT, correlate with this log.

PM192

Explanation

The Peripheral Module (PM) subsystem generates PM192 when the signaling terminal controller (STC) is manual busy. The central-side (C-side) node, the ISDN access controller (IAC), is removed from service.

The subsystem generates Format 2 when the C-side node of the D-channel handler (DCH) is removed from service.

Format

The log report formats for log PM192 are as follows:

Format 1

```
**PM192 mmmdd hh:mm:ss ssdd CBSY ST
      DCH nnn: CBSY from dchstate ISG nnn
```

Format 2

```
**PM190 mmmdd hh:mm:ssss ssdd SYSB ST
      ST nnn: Bsy from sttxt STC: SysB from sttxt
```

Example

Examples of log report PM192 follow:

Format 1

```
*PM192 APR01 12:00:00 2112 CBSY ST
      ST 40: Bsy          STC: CBsy from ManB
```

Format 2

```
**PM192 APR12 11:23:33 3123 CBSY ST
      DCH 34: CBSY from ISTB ISG 201
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
CBsy ST	Constant	Indicates the system action made the ST busy.
ST	0-127	Provides equipment identification for ST. Refer to customer data Table STINV for values.
Bsy	Constant	Identifies current ST state.
STC: CBsy from	Symbolic text	Identifies the STC state before being made CBsy.
DCH	0-255	Identifies the DCH.
CBsy from	Symbolic text	Indicates previous state of the DCH.
ISG	0-255	Identifies services in the ISDN service group (ISG) that this action affects.

Action

The STC or DCH should recover without manual interruption when the C-side node is back in service.

Associated OM registers

The fault counter, PM2FLT, correlates with this log.

PM193

Explanation

The Peripheral Module (PM) subsystem generates PM193 when the signaling terminal controller (STC) is taken offline (OFFL). The signaling terminal (ST) identified in the report is made busy (BSY) because of the specified change of state for the STC.

Format 2 generates when the D-channel handler (DCH) is placed in the OFFL state.

Format

The log report formats for PM193 are as follows:

Format 1

```
PM193 mmmdd hh:mm:ss ssdd OFFL ST
      ST nnn: Bsy      STC: Offl from ManB
```

Format 2

```
**PM193 mmmdd hh:mm:ss ssdd OFFL ST
      DCH nnn: OFFL from dchstate ISG nnn
```

Example

Examples of log report PM193 follow:

Format 1

```
PM193 APR01 12:00:00 2112 OFFL ST
      ST 60: Bsy      STC: Offl from ManB
```

Format 2

```
**PM193 APR12 11:23:33 3123 OFFL ST
      DCH 34: OFFL from ISTB ISG 201
```


Field descriptions

The following table describes each field in the log report:

Field	Value	Description
OFFL ST	Constant	Indicates a manual request made ST OFFL.
ST nnn:	0-127	Provides equipment identification for ST. Refer to customer data Table STINV for values.
Bsy	Constant	Identifies ST state as BSY.
STC: Offl from ManB	Constant	Identifies STC state before OFFL.
DCH nnn	0-255	Identifies the DCH.
dchstate	Symbolic text	Indicates the previous state of the DCH. Refer to Table I.
ISG nnn	0-255	Identifies services in the ISDN service group (ISG) that this action affects.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

PM194

Explanation

The Peripheral Module (PM) subsystem generates this report when the signaling terminal controller (STC) encounters trouble (TBL) during normal operation. The STC state changes to in-service trouble (ISTb) from in-service (InSv). The subsystem makes the signaling terminal (ST) idle as a result of the specified change of state for the STC. The ISTb conditions do not affect service. System action normally solves ISTb conditions.

The subsystem generates format 2 when the D-channel handler (DCH) encounters trouble during normal operation. The DCH changes state from InSv to ISTb.

Format

The log report format for PM194 is as follows:

Format 1

```
*PM194 mmmdd hh:mm:ss ssdd TBL ST
      ST nnn: Idle   STC: ISTb from InSv Loadname
```

Format 2

```
**PM194 mmmdd hh:mm:ss ssdd ISTB ST
      DCH nnn: ISTB from INSV ISG nnn
```

Example

An example of log report PM194 follows:

Format 1

```
*PM194 APR01 12:00:00 2112 OFFL ST
      ST 70: Idle   STC: ISTb from InSv
```

Format 2

```
**PM194 APR12 11:23:33 3123 ISTB ST
      DCH 34: ISTB from INSV ISG 201
```

Field descriptions

Descriptions for each field in the log report appear in the following table:

Field	Value	Description
TBL ST	Constant	Indicates ST TBL condition during normal operation.
ST	0-127	Provides equipment identification for ST. Refer to customer data table STINV for values.
Bsy	Constant	Identifies ST state.
STC: ISTb from InSv	Constant	Identifies STC state before ISTb.
Loadname	Symbolic text	Identifies the loadname that was changed in Table STINV. Refer to customer data table STINV.
DCH	0-255	Identifies the DCH.
ISTB from INSV	Constant	Indicates the DCH changed state from InSv to ISTb.
ISG	0-255	Identifies services in the Integrated Services Digital Network (ISDN) Service Group (ISG) affected by this action.

Action

If system action resolves the trouble, action is not required.

If the system cannot solve the problem the subsystem generates a PM190 report. Follow "Action" for PM190 report.

Associated OM registers

The fault counter, PM1FLT, corresponds to this log.

PM197

Explanation

The Peripheral Module (PM) subsystem generates this report when the signaling terminal (ST) changes state and the Signalling Terminal Controller (STC) state remains the same.

Format

The log report format for PM197 is as follows:

```
FP503 mmmdd hh:mm:ss ssdd INFO ST
      ST nnn: sttxt1 from sttxt2  STC:sttxt3
```

Example

An example of log report PM197 follows:

```
PM197 SEP05 18:14:33 2112 INFO ST
      ST 60: CPB from Bsy      STC: InSv
```

Field descriptions

Descriptions for each field in the log report appear in the following table:

Field	Value	Description
INFO ST	Constant	Indicates ST state was changed.
ST nnn:	0-127	Provides equipment identification for ST. Refer to customer data Table STINV in the data schema section of the Translations Guide.
sttxt1	Symbolic text	Identifies current ST state. Refer to Table E.
from sttxt2	Symbolic text	Identifies previous ST state. Refer to Table E.
sttxt3	Symbolic text	Identifies new STC state. Refer Table E.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PM198

Explanation

The Peripheral Module (PM) subsystem generates PM198 when the signaling terminal controller (STC) sends an unsolicited message. The message contains a valid fault condition. This condition does not affect service and must be resolved through system action.

The system generates format 2 when a D-channel handler (DCH) sends an unsolicited message that contains a valid fault condition. This condition does not affect service.

Format

The log report formats for PM198 are as follows:

Format 1

```
PM198 mmmdd hh:mm:ss ssdd INFO ST
      ST nnn: reastxt
```

Format 2

```
**PM198 mmmdd hh:mm:ss ssdd INFO ST
      DCH nnn: infotxt ISG nnn
```

Example

An example of log report PM198 follows:

Format 1

```
PM198 APR01 12:00:00 2112 INFO ST
      ST 60: STC DLP Invalid Message STD ID
```

Format 2

```
**PM198 JAN88 11:23:33 1122 INFO ST
      DCH 23: Swerr ISG nnn
```

PM198 (continued)**Field descriptions**

The following table describes each field in the log report:

Field	Value	Description
INFO ST	Constant	Indicates information about the ST follows.
ST	0-127	Provides equipment identification for ST. Refer to customer data Table STINV for values.
reastxt	STC DLP Invalid Message STD ID	Indicates that the STC sent an unsolicited message that contains a valid fault condition.
	STC interface memory (no message)	Indicates the STC Interface has a memory error.
	STC access error parity error	Indicates the system cannot access the STC because of a parity error.
	STC interface memory message, where STC is not initialized	Indicates the STC has a memory error. The memory for the STC is not initialized.
DCH	0-255	Identifies the DCH.
infotxt	Symbolic text	Indicates the message that the DCH generates.
ISG	0-255	Identifies services in the ISDN service group (ISG) that this action affects.

Action

If system action resolves the trouble, action is not required.

If the system sends invalid messages over a maximum of 50 in 1 min, the STC state changes to system busy (SysB). Perform diagnostics on the suspect STC. A circuit pack list displays on the terminal if a failure occurs.

- If the test passes, but the STC does not return-to-service (RTS), contact the next level of maintenance.
- If the test fails, change the first circuit pack on the list and run the test again. If the test fails again, change the second circuit pack on the list and

PM198 (end)

run the test again. Continue until the test passes or the number of circuit packs on the list are exhausted.

- If the list is exhausted, the test did not pass, and the STC is not RTS, contact the next level of maintenance.

Associated OM registers

The OM register PM1ERR of the OM group PM1 and log PM198 have a direct correlation.

PM199

Explanation

The Peripheral Module (PM) subsystem generates PM199 when the signaling terminal controller (STC) ends a system diagnostic test. The result of the diagnostic test appears in the log.

The the system generates the second format when the D-channel handler (DCH) ends a system diagnostic test.

Format

The log report formats for PM199 are as follows:

```
PM199 mmmdd hh:mm:ssdd INFO ST  
ST nnn STC Test tsttxt
```

```
PM199 mmmdd hh:mm:ssdd INFO ST  
DCH nnn on XPM nn: DCH Test tsttxt ISG nnn
```

Example

Examples of log report PM199 follow:

```
PM199 APR01 12:00:00 2112 INFO ST  
ST 60: STC Test passed
```

```
PM199 JAN88 11:32:33 1122 INFO ST  
DCH 23 on PLGC 0: DCH Test passed  
ISG nnn
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO ST	Constant	Indicates information about the signaling terminal (ST) follows.
ST	0-127	Provides equipment identification for ST as the identification appears in customer data Table STINV.

PM199 (end)

(Sheet 2 of 2)

Field	Value	Description
DCH	0-255	Identifies the DCH number on XPM module number.
STC/DCH Test	Constant, passed, failed	Indicates if STC or DCH passed or failed the system diagnostic test.
ISG	0-255	Identifies services in the ISDN Service Group (ISG) that this action affects.

Action

If the STC or DCH passes system diagnostic test, action is not required.

If the test passes, but the STC or DCH does not return-to-service, contact the next level of maintenance.

If the STC or DCH fails system diagnostic test, perform manual diagnostic tests on the suspect STC or DCH.

A circuit pack list appears on the terminal if a failure occurs. If the test fails, change the first circuit pack on the list and run the test again. If the test fails again, change the second circuit pack on the list and run the test again. Continue until the test passes or the number of circuit packs are exhausted.

If the number of packs are exhausted, the test fails, and the STC or DCH does not return-to-service, contact the next level of maintenance.

Associated OM registers

Log PM199 is a direct correlation of the PM1FLT and PM1ERR counters.

PM200

Explanation

The Peripheral Module (PM) subsystem generates this report when a file is loaded to the signaling terminal controller (STC).

The system generates format 2 when a file is loaded to the D-channel handler (DCH).

Format

The log report formats for PM200 are as follows:

Format 1

PM200 mmmdd hh:mm:ss ssdd INFO ST
ST nnn: STC loadtxt from srctxt Load file: fileid

Format 2

PM200 mmmdd hh:mm:ss ssdd INFO ST
DCH nnn: DCH loadtxt from srctxt Load file: fileid
Elapsed time: hh:mm:ss
Summary:
 dddd plane, bundle size n, FS delays nnn,
 # re-trans msg nnn, # re-trans blocks nnn
List of DCH:
 DCH nnn isgtxt restxt
 DCH nnn isgtxt restxt

Format 3

PM200 mmmdd hh:mm:ss ssdd INFO ST
DCH nnn: DCH loadtxt from srctxt Load file: fileid
Failure reason: reasontxt
List of DCH:
 DCH nnn isgtxt restxt
 DCH nnn isgtxt restxt

Example

An example of log report PM200 follows:

Format 1

PM200 (continued)

PM200 APR01 12:00:00 2112 INFO ST
ST 60: STC Load failed from CC Load file: M7FA0241

Format 2

**PM200 JAN23 12:23:33 4334 INFO ST
DCH 123: DCH load passed from CC Load File : DCH29AQ
Elapsed time: 00:20:45
Summary:
 double plane, bundle size 8, FS delays 0,
 # re-trans msg 2, # re-trans blocks 2
List of DCH:
 DCH 0 ISG10 passed
 DCH 1 ISG5 failed
 DCH 2 SPARE passed

Format 3

PM200 JAN11 09:05:44 0910 INFO ST
DCH load failed from CC Load file: DCH29AQ
Failure reason: No reply from PM
List of DCH:
 DCH 0 ISG 1 failed
 DCH 1 SPARE failed
 DCH 2 SPARE failed

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO ST	Constant	Indicates that an STC completed an attempt to load a file.
ST	0-127	Provides equipment identification for ST. Refer to customer data Table STINV for values.
loadtxt	Load failed	Indicates the load failed.
	Load passed	Indicates the load passed.
from srctxt	CC, IAC DCH	Indicates the source where the file originated.

(Sheet 2 of 2)

Field	Value	Description
Load file	Symbolic text	Identifies the file sent to the DCH or the STC.
Summary	Symbolic text	Provides the summary of the results. The system generates this field when DCH load passes.
Failure reason	Text	Indicates the reason for PM failure. The system generates this field when the load fails.
List of DCH	Symbolic text	Provides the list of the DCH and ISG. Also provides the status of the load.
DCH	0-255	Identifies the DCH.
isgtxt	Symbolic text	Identifies services in the ISDN service group (ISG) that this action affects.
restxt	passed failed	Indicates if the load passed or failed for the specified DCH.

Action

Action is not required if the file is loaded successfully.

If the load operation fails, perform diagnostics on the suspect DCH or STC.

If a manual test fails, a circuit pack list appears on the terminal.

- If the test passes, and the STC or DCH does not return-to-service (RTS), contact the next level of maintenance.
- If the test fails, change the first circuit pack listed and run the test again. If the test fails again, change the second circuit pack on the list and run the test again. Continue until the test passes or the number of circuit packs on the list are exhausted.
 - If the list is exhausted, the test did not pass, and the STC or DCH is not RTS, contact the next level of maintenance.

If a manual test failure does not occur, perform maintenance on the file source.

Associated OM registers

There are no associated OM registers.

PM217

Explanation

The Peripheral Module (PM) subsystem generates this report when an inter-peripheral message link (IPML) is not equipped.

Format

The log report format for PM217 is as follows:

```
PM217 mmmdd hh:mm:ss ssdd UNEQ IPML
      IPMLn: statxt from statxt IPC0: statxt IPC1: statxt
      IPC0P0: statxt IPC0P1: statxt IPC1P0: statxt
      IPC1P1: statxt
```

Example

An example of log report PM217 follows:

```
PM217 JAN01 04:21:05 5391 UNEQ IPML
      IPML1: UNEQ from OFFL IPC0: UNEQ IPC1: UNEQ
      IPC0P0: OFFL IPC0P1: OFFL IPC1P0: OFFL IPC1P1: OFFL
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
UNEQ IPML	Constant	Indicates the IPML is not equipped.
IPML	0-240	Identifies the inter-peripheral message link.
statxt	Symbolic text	Refer to Table E. Indicates state of the module.
IPC	0,1	Identifies the inter-peripheral connections.
P	0,1	Identifies the inter-peripheral connection plane.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

PM219**Explanation**

The Peripheral Module (PM) subsystem generates this report when an inter-peripheral message link (IPML) causes an exception report. The system had software or hardware problems during normal call processes that involve an IPML link.

Format

The log report PM219 is as follows:

```
PM219 mmmdd hh:mm:ss ssdd INFO IPML
      IPMLn: IPCn IPML EXCEPTION REPORT
      TEXT: aa aa aa aa
      Connects: FROM pm type pm num TO pm type pm num
```

Example

An example of log report PM219 follows:

```
PM219 SEP18 08:35:28 9700 TEST IPML
      IPML: 11 IPC: 0 IPML EXCEPTION REPORT
      TEXT: 28 0D 26 01 02
      Connects: FROM MSB7 1 TO PDTC 1
```

Explanation

The following table describes each field in the log report:

Field	Value	Description
TEST IPML	Constant	Indicates tests were performed on the IPML.
IPML	0-240	Identifies the inter-peripheral message link.
IPCn	0,1	Identifies the inter-peripheral connections.
pm type	MSB7, MSB6, DTC, or PDTC	Identifies the peripheral module type.
pm num	0-255	Indicates the peripheral module number.

Action

Check other logs (for example, PM220) for information about related failures. The system generates these logs on the CCS7 link. Post the peripherals indicated and QUERYPM FLT for problems. Check the IPML links at the

PM219 (end)

TRKS; CARRIER level. Document the PM types and numbers, frequency and rate of the exceptions, and other conditions. Provide this information to the next level of maintenance.

Associated OM registers

There are no associated OM registers.

PM220**Explanation**

The Peripheral Module (PM) subsystem generates PM220 when tests are run on the inter-peripheral message link (IPML).

Format

The log report format for PM220 is as follows:

```
PM220 mmmdd hh:mm:ss ssdd TEST IPML
      IPMLn: IPCn Pn tstxt
      Reason: rsntxt
      Connects: FROM pm type pm num TO pm type pm num
```

Example

An example of log report PM220 follows:

```
PM220 SEP18 08:35:28 9700 TEST IPML
      IPML: 0 IPC: 0 P: 1 Test passed
      Reason:
      Connects: FROM MSB7 0 TO DTC 1
```

Explanation

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
TEST IPML	Constant	Indicates tests were run on the IPML.
IPML	0-240	Identifies the IPML.
IPCn	0,1	Identifies the inter-peripheral connections.
P	0,1	Identifies the inter-peripheral connection plane.
tstxt	Test passed failed	Test Indicates if the test passed or failed.
Reason	text	Indicates the reason for the failure. This field is present only when a test fails.

PM220 (end)

(Sheet 2 of 2)

Field	Value		Description
pm type	MSB7 DTC	MSB6	Identifies the PM type.
pm num	0-127		Indicates the PM number.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

PM221

Explanation

The Peripheral Module (PM) subsystem generates this report when the state of a dual remote cluster controller (RCC) interlink (IRLINK) changes to manual busy (ManB).

Format

The log report format for PM221 is as follows:

```
PM221 mmmdd hh:mm:ss ssdd MANB IRLINK
PORT: modno C-SIDE LINK linkno
PORT: modno C-SIDE LINK linkno
IRLINK NO: irlnkno FROM: state
```

Example

An example of log report PM221 follows:

```
PM221 NOV17 19:03:00 5603 MANB IRLINK
PORT: RCC 0 C-SIDE LINK 1
PORT: RCC 1 C-SIDE LINK 1
IRLINK NO: 0 FROM: INSV
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
MANB IRLINK	Constant	Indicates a state change to ManB on an IRLINK.
PORT	RCC 0 - RCC 127	Indicates, from the view of the posted RCC, the port number of the interlink. The change of state for the interlink caused the system to generate log report PM221.
C-SIDE LINK	0-15	Indicates the central side (C-side) link.
IRLINK NO	0-13	Indicates number of interlink. The state of the Interlink changed to ManB.
FROM	Character string	Indicates interlink state before change to present ManB state.

PM221 (end)

Action

Forward this log to the traffic administrator or the next level of maintenance.

Associated OM registers

There are no associated OM registers.

PM222**Explanation**

The Peripheral Module (PM) subsystem generates PM222 when the state of a dual remote cluster controller (RCC) interlink (IRLINK) changes to system busy (SysB).

Format

The log report format for PM222 is as follows:

```
PM222 mmmdd hh:mm:ss ssdd SYSB IRLINK
PORT: modno C-SIDE LINK linkno
PORT: modno C-SIDE LINK linkno
IRLINK NO: irlnkno FROM: state
```

Example

An example of log report PM222 follows:

```
PM222 NOV18 19:03:30 5604 SYSB IRLINK
PORT: RCC 0 C-SIDE LINK 1
PORT: RCC 1 C-SIDE LINK 1
IRLINK NO: 0 FROM: INSV
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
SYSB IRLINK	Constant	Indicates a state change for SysB on an IRLINK.
PORT	RCC 0 - RCC 127	Indicates, from the view of the posted RCC, the port number and number of the interlink. The change of state of the interlink caused the system to generate log report PM222.
C-SIDE LINK	0-15	Indicates the central side (C-side) link.
IRLINK NO	0-13	Indicates number of the interlink. The Interlink state changed to SysB.
FROM	Character string	Indicates interlink state before change to present SysB state.

PM222 (end)

Action

Forward this log to the traffic administrator or the next level of maintenance.

Associated OM registers

There are no associated OM registers.

PM223

Explanation

The Peripheral Module (PM) subsystem generates PM223 when a dual remote cluster controller (RCC) interlink (IRLINK) is returned to service (RTS).

Format

The log report format for PM223 is as follows:

```
PM223 mmmdd hh:mm:ss ssdd RTS IRLINK
PORT: modno C-SIDE LINK linkno
PORT: modno C-SIDE LINK linkno
IRLINK NO: irlnkno FROM: state
```

Example

An example of log report PM223 follows:

```
PM223 NOV18 19:03:40 5604 RTS IRLINK
PORT: RCC 0 C-SIDE LINK 3
PORT: RCC 1 C-SIDE LINK 3
IRLINK NO: 1 FROM: MANB
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
RTS IRLINK	Constant	Indicates that IRLINK is RTS.
PORT	RCC 0 - RCC 127	Indicates, from the view of the posted RCC, the port number and interlink number. The change of state for the interlink caused the system to generate log report PM223.
C-SIDE LINK	0-15	Indicates the central side (C-side) link.
IRLINK NO	0-13	Indicates number of the interlink. The interlink state changed to in service.
FROM	Character string	Indicates interlink state before change to present in service state.

Action

Forward this log to the traffic administrator or the next level of maintenance.

PM223 (end)

Associated OM registers

There are no associated OM registers.

PM230

Explanation

The Peripheral Module (PM) subsystem generates log report PM230. The subsystem generates this report when the system generates or clears one of the following:

- types 1 through 4 line card alarms
- selected type 5 line card carrier alarms
- type 6 configuration alarms
- type 8 coded alarms (some type 8 alarms inhibit call processing for a number of subscriber lines)

When the system generates one of these alarms, the system takes down calls in progress on the affected subscriber lines. When the system generates one of these alarms, the system also blocks new originations from or terminations to these lines.

The system sets the lines to line module busy (LMB). A PM230 log report precedes the log report that the system generates for the type 1 through 6 or coded alarm.

The following faults and associated alarms affect subscriber lines. These alarms appear at the MAP when the user posts the associated remote carrier urban (RCU) and enters the command string QUERYPM FLT. The alarms also appear at the faceplate of the maintenance card on Shelf 3 of the RCU.

- Defective line card (top on line card carrier): type 1 alarm
- Defective line card (second from top on line card carrier): type 2 alarm
- Defective line card (third from top on line card carrier): type 3 alarm
- Defective line card (bottom on line card carrier): type 4 alarm
- Defective line card carrier: type 5 alarm

PM230 (continued)

- Mismatch between entries and hardware for lines: type 6 alarm
- Coded alarm:
 - 190: Defective RCU supervisory card on shelf 4 or line card carrier. This condition causes line card address error on group 1 (shelves 4 and 5).
 - 191: Defective RCU supervisory card on shelf 1 or line card carrier. This condition causes line card address error on group 2 (shelves 1 and 2).
 - 192: Defective supervisory card or line card carrier. This condition causes line card address error on group 1 line shelf (shelf 5).
 - 193: Defective supervisory card or line card carrier. This condition causes line card address error on group 1 control shelf (shelf 4).
 - 194: Defective supervisory card or line card carrier. This condition causes line card address error on group 2 line shelf (shelf 2).
 - 195: Defective supervisory card or line card carrier. This condition causes line card address error on group 2 control shelf (shelf 1).
 - 196: Defective supervisory or switch cards. The system cannot detect line status change in group 1. A lack of common equipment cards prevents full fault diagnostics.
 - 197: Defective supervisory or switch cards. The system cannot detect line status change in group 2. A lack of common equipment cards prevents full fault diagnostics.
 - 306: Power converters 1 (slot 4, shelf 3) and 2 (slot 5, shelf 3), with switched voltage supply, failed. This condition causes group 1 line card power failure.
 - 307: Power converters 3 (slot 2, shelf 3) and 4 (slot 3, shelf 3), with switched voltage supply, failed. This condition causes group 2 line card power failure.
 - 312: Set of common equipment cards in group 2 is not complete.
 - 340: Missing talk battery filter or failure of all line cards in group 1 line shelf. (All line cards fail automatic system testing.)
 - 341: Missing talk battery filter or failure of all line cards in group 1 control shelf. (All line cards fail automatic system testing.)
 - 342: Missing talk battery filter or failure of all line cards in group 2 line shelf. (All line cards fail automatic system testing.)
 - 343: Missing talk battery filter or failure of all line cards in group 2 control shelf. (All line cards fail automatic system testing.)

PM230 (continued)

- 344: Missing talk battery filter or failure of all line cards in group 1. (All line cards fail automatic system testing.)
- 345: Missing talk battery filter or failure of all line cards in group 2. (All line cards fail automatic system testing.)
- 600: Special service module (SSM) 1 failure.
- 601-624: Special service module 1 channel unit mismatch (hardware present/absent on SSM and provisioning data do not agree)
- 625: Total SSM 1 mismatch (missing bus extender)
- 700: Special service module 2 failure
- 701-724: Special service module 2 channel unit mismatch (hardware present/absent on SSM and provisioning data do not agree)
- 725: Total SSM 2 mismatch (missing bus extender)

Format

The log report format for PM230 is as follows:

```
PM230 mmmdd hh:mm:ss ssdd INFO PP_LINES_ACTION
      pmid
      REASON: remote alarm optxt
      lines lmb: txt1
```

Example

An example of log report PM230 follows:

```
PM230 APR01 12:00:00 2112 INFO PP_LINES_ACTION
      RCU RCU0 04 0
      REASON: remote alarm received
      lines lmb: shelf= 4 slot= 12
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO PP_LINES_ACTION	Symbolic text	Indicates that some subscriber lines an RCU supports changed states.
pmid	Symbolic text	Indicates affected PM.

PM230 (end)

(Sheet 2 of 2)

Field	Value	Description
REASON: reastxt	Symbolic text	Identifies why the system generates the log. Identifies the product engineering code (PEC) for the suspect circuit pack.
optxt	received	Indicates the RCU generated an alarm that affects the state of subscriber lines.
	cleared	Indicates the RCU cleared an alarm that affects the state of subscriber lines.
lines lmb	Constant	Indicates that the system made some subscriber lines line module busy (LMB).
txt1	shelf= x slot= y	Identifies the RCU shelf and slot on affected subscriber lines.

Action

For a defective line card, make sure the other cards on the line card carrier of the MAP, pass. Replace the defective card and test the new card for defects. Replace the line card carrier and retest the line. Perform tests on the line cards in the new line card carrier.

Associated OM registers

There are no associated OM registers.

PM231**Explanation**

The peripheral module (PM) subsystem generates PM231. This report appears when a PM fails to acknowledge an audit request to add or delete a channel connection. The request is from Integrated Services Digital Network (ISDN) Special Connection Table Control Facility (SPEC.CONN) to add or delete a channel connection. The subsystem generates the modified log when the tuple fails to update to the correct state.

Format

Format 1 applies to Example 1 and format 2 applies to Example 2.

The log report formats for PM231 are as follows:

Format 1

```
PM231 mmmdd hh:mm:ss ssdd TBL
<PM_name><PM_number> SPEC.CONN <log_type>
Con Type: <con_type>
Status: <con_status_delta>
EndPt1: <endpt_1_of_the_connection>
EndPt2: <endpt_2_of_the_connection>
SEGMENT INFORMATION:
```

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS
<seg_no>	<seg_endpt1>	<seg_endpt2>	<seg_contype>	<seg_status_delta>
<seg_no>				
<seg_no>				

Format 2

PM231 (continued)

PM231 mmmdd hh:mm:ss ssdd TBL
<PM_name><PM_number> SPEC.CONN <log_type>
Con Type: <con_type>
Status: <con_status_delta>
EndPt1: ILDCHNL <site> <frame> <unit> <drawer> Channel:
<Bd_chnl>
EndPt2: <endpt_2_of_the_connection>
SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS

<seg_no> ILDCHNL <site> <frame> <unit> <Bd_chnl>
<seg_endpt2><seg_contype> <seg_status_delta>
<seg_no> <endpt1> <endpt2> <seg_contype>
<seg_status_delta>
<seg_no>

ATTENTION

The ISDN line drawer for remotes (ILDR) is first available for remote switching center-SONET (RSC-S) and remote switching center (RSC) configurations in the NA007/XPM08 timeframe. The ILDR is first available for the following configurations in the NA008/XPM81 timeframe:

- for remote line concentrating module (RLCM)
- outside plant module (OPM)
- outside plant access cabinet (OPAC)

Example

Example 1 applies to Format 1 and Example 2 applies to Format 2.

Examples of log report PM231 follow:

Example 1

PM231 (continued)

PM231 JAN07 15:16:58 9100 TBL
 LTC 10 SPEC.CONN Fail to Add
 Con Type: CON
 Status: MTC (no change)
 EndPt1: ISLC HOST 67 0 07 03 B2
 EndPt2: DS1 LTC 10 5 9
 SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS
0	ISLCHOST 6700703	LCM_CSIDE228	Con	InActive from MTC
1	XPM_PSIDELTC10728	XPM_CSIDELTC101224	Con	MTC (No change)
2	XPM_CSIDELTC10710	DS1LTC1059	Con	MTC (No change)

Example 2

PM231 JAN07 15:16:58 9100 TBL
 LTC 10 SPEC.CONN Fail to Add
 Con Type: CON
 Status: Inactive (no change)
 EndPt1: ILDCHNL REM1 02 0 2 Channel: Bd1
 EndPt2: XSGCHNL 0 5
 SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS
0	ILDCHNL REM1 02 0 2 Bd1	LCM_CSIDE 1 6	Con	InActive from MTC
1	XPM_PSIDE LTC 0 7 6	XPM_CSIDE LTC 0 5 6	Con	InActive from MTC
2	JNET 0 5 2	JNET 0 57 6	Con	InActive from MTC
3	XPM_CSIDE NIU 0 0 2	XSGCHNL 0 5	Con	InActive from MTC

PM231 (continued)**Field descriptions**

The following table describes each field in the log report:

Field descriptions table (Sheet 1 of 2)

Field	Value	Description
PM_name	String	Indicates the name of the involved PM (line trunk controller [LTC], digital trunk controller [DTC], etc.)
PM_number	Integer	Gives the number of the involved PM.
log_type	Fail to add, Pass, Rep, or Fail to Suspect	Indicates the type or definition of the log.
con_type	Pend	Indicates a PENDING connection type. The system does not establish a connection in the PM.
	Res	Indicates the connection reserved in the PM.
	Con	Indicates the connection requested in the PM.
con_status_delta	String	Refer to Status changes tables at the end of this log report.
endpt n	String	Identifies the endpoint types. Refer to endpoint types table at the end of this log report.
seg_no	Integer	Indicates the number of the segment.
seg_endpt1	String	Indicates the endpoint 1 of the segment.
seg_endpt2	String	Indicates the endpoint 2 of the segment.
seg_contype	String	Indicates connection type of the segment.
seg_status_delta	String	Indicates previous and current status of the segment.
site	0000-ZZZZ	Indicates the site name (abbreviation).
frame	0 through 99	Indicates the line concentrating module (LCM) frame number.
unit	0 or 1	Indicates the unit number.

PM231 (continued)**Field descriptions table (Sheet 2 of 2)**

Field	Value	Description
drawer	0 through 19	Indicates the ILDR drawer number in the LCM.
Bd_chnl	Bd1 or Bd2	Indicates the Bd-channel number in the ILDR.

Action

There is no action required. Information in this log provides help when you take operational measurements and perform other tasks.

Associated OM registers

There are no associated OM registers.

Additional information

The following table lists status changes.

Status changes (Sheet 1 of 2)

Value	Description
Inactive (no change)	Indicates the PM cannot establish a connection.
Inactive (busy)	Indicates the PM was busy and cannot establish a connection..
Inactive from Active	Indicates the PM established a connection, but that connection is not established now.
Inactive from MTC	Indicates that maintenance used the connection, and the PM cannot establish a connection.
MTC (no change)	Indicates that maintenance used the connection, and the PM still cannot establish a connection.
Active (no change)	Indicates the PM establishes and maintains the connection.
Active from PMBusy	Indicates the PM is busy and is able to establish a connection.
Active from Active	Indicates the connection in the PM changed from one established connection to another established connection.
Active from MTC	Indicates that maintenance used the connection in the PM, and now the PM can establish a connection.
MTC for 2 audt.cycles	Indicates the PM is in the maintenance state for one full audit cycle.

PM231 (end)**Status changes (Sheet 2 of 2)**

Value	Description
PMBusy from Active	Indicates the PM established a connection, and now the PM is busy.
PMBusy from MTC	Indicates that maintenance used the PM, and the PM is busy.

The following table lists endpoint types.

Endpoint types

Endpoint types	Description
ISLC <LEN> <channel Type>	Indicates the endpoint is an ISDN subscriber line card.
ST <ST number>	Indicates the endpoint is a signalling terminal. Signalling terminal endpoints apply only to ISDN.
DS1 pmid <DS1port> <DS1 channel>	Indicates the endpoint is a DS-1 carrier.
DCH <Dchno> Chnl <No>	Indicates the endpoint is a D-channel handler. The endpoint includes the D-channel handler number and the channel number. The D-channel handler endpoints can apply to ISDN connections on an ISDN line trunk controller, or connections on an ISDN line group controller.
A TDM connection (lists up to four D channels)	An endpoint can be a time-division multiplexed endpoint in a line concentrating module for ISDNs. The system displays a maximum of four line equipment numbers in the connection. The TDM connections only connect to DCH endpoints.
ISLC <LEN> D	
ISLC <LEN> D	
ISLC <LEN> D	
• ISLC <LEN> D	

PM232**Explanation**

The peripheral module (PM) subsystem generates PM232. This report appears when a PM fails to acknowledge an audit request to add or delete a channel connection. This request is from the integrated services digital network (ISDN) Special Connection Table Control Facility (SPEC.CONN). The system generates the modified log when the tuple updates.

Format

Format 1 applies to Example 1 and Format 2 applies to Example 2.

The log report formats for PM232 are as follows:

Format 1

```
PM232 mmmdd hh:mm:ss ssdd INFO
<PM_name><PM_number> SPEC.CONN <log_type>
Con Type: <con_type>
Status: <con_status_delta>
EndPt1: <endpt_1_of_the_connection>
EndPt2: <endpt_2_of_the_connection>
SEGMENT INFORMATION:
```

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS
<seg_no>	<seg_endpt1>	<seg_endpt2>	<seg_contype>	<seg_status_delta>
<seg_no>	<seg_endpt1>	<seg_endpt2>	<seg_contype>	<seg_status_delta>
<seg_no>	<seg_endpt1>	<seg_endpt2>	<seg_contype>	<seg_status_delta>

Format 2

PM232 (continued)

PM232 mmmdd hh:mm:ss ssdd INFO
 <PM_name><PM_number> SPEC.CONN <log_type>
 Con Type: <con_type>
 Status: <con_status_delta>
 EndPt1: ILDCHNL <site> <frame> <unit> <drawer> Channel:
 <Bd_chnl>
 EndPt2: <endpt_2_of_the_connection>
 SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS
<seg_no>	ILDCHNL <site> <frame> <unit> <Bd_chnl>	<seg_endpt2>		
	<seg_contype>	<seg_status_delta>		
<seg_no>	<seg_endpt1>	<seg_endpt2>	<seg_contype>	
	<seg_status_delta>			
<seg_no>	<seg_endpt1>	<seg_endpt2>	<seg_contype>	
	<seg_status_delta>			

Example

Example 1 applies to Format 1 and Example 2 applies to Format 2.

Examples of log report PM232 follow:

Example 1

PM232 JAN07 15:16:58 9100 INFO
 LTC 10 SPEC.CONN Pass Add
 Con Type: CON
 Status: MTC (no change)
 EndPt1: ISLC HOST 67 0 07 03 B2
 EndPt2: DS1 LTC 10 5 9
 SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS
0	ISLCHOST 6700703	LCM_CSIDE228	Con	Active
	from Inactive			
1	XPM_PSIDELTC10728	XPM_CSIDELTC101224	Con	Active (No change)
2	XPM_CSIDELTC10710	DS1LTC1059	Con	MTC (No change)

Example 2

PM232 (continued)

PM232 JAN07 15:16:58 9100 INFO
 LTC 10 SPEC.CONN Pass Add
 Con Type: CON
 Status: Inactive (no change)
 EndPt1: ILDCHNL REM1 02 0 2 Channel: Bd1
 EndPt2: XSGCHNL 0 5
 SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS
0	ILDCHNL REM1 02 0 2 Bd1	LCM_CSIDE 1 6	Con	InActive from MTC
1	XPM_PSIDELTC10728	XPM_CSIDELTC101224	Con	Active(No change)
2	XPM_CSIDELTC10710	DS1LTC1059	Con	MTC (No change)

The ISDN line drawer for remotes (ILDR) is first available for remote switching center-SONET (RSC-S) and remote switching center (RSC) configurations in the NA007/XPM08 timeframe. The ILDR is first available for the following configurations in the NA0008/XPM81 timeframe:

- remote line concentrating module (RLCM)
- outside plant module (OPM)
- outside plant access cabinet module (OPAC)

Field descriptions

The following table describes each field in the log report:

Field descriptions table (Sheet 1 of 2)

Field	Value	Description
PM_name	String	Indicates the name of the involved PM (line trunk controller [LTC], digital trunk controller [DTC], etc.)
PM_number	Integer	Gives the number of the involved PM.
log_type	Fail to add, Pass, Rep, or Fail to Suspect	Indicates the type or definition of the log.
con_type	Pend	Indicates a PENDING connection type. A connection is not established in the PM.
con_status_delta	Res	Indicates the connection reserved in the PM.

PM232 (continued)**Field descriptions table (Sheet 2 of 2)**

Field	Value	Description
endpt n	Con	Indicates the connection requested in the PM.
seg_no	String	Refer to Status changes table at the end of this log report.
seg_endpt1	String	Indicates the endpoint 1 of the segment.
seg_endpt2	String	Indicates the endpoint 2 of the segment.
seg_contype	String	Indicates connection type of the segment.
seg_status_delta	String	Indicates previous and current status of the segment.
site	0000-ZZZZ	Indicates the site name (abbreviation).
frame	0 through 99	Indicates the line concentrating module (LCM) frame number.
unit	0 or 1	Indicates the unit number.
drawer	0 through 19	Indicates the ILDR drawer number in the LCM.
Bd_chnl	Bd1 or Bd2	Indicates the Bd-channel number in the ILDR.

Action

There is no action required. This log helps operational measurements and other tasks.

Associated OM registers

There are no associated OM registers.

Additional information

The following table lists status changes.

Status changes (Sheet 1 of 2)

Value	Description
Inactive (no change)	Indicates the PM cannot establish the connection.
Inactive from PMBusy	Indicates the PM was busy and the PM cannot establish a connection.

PM232 (continued)**Status changes (Sheet 2 of 2)**

Value	Description
Inactive from Active	Indicates the PM established a connection, but that connection is not established now..
Inactive from MTC	Indicates maintenance used the connection, and the PM cannot establish a connection.
MTC (no change)	Indicates maintenance used the connection, and the PM cannot establish a connection.
Active (no change)	Indicates the PM establishes and maintains a connection.
Active from PMBusy	Indicates the PM was busy and the PM can established a connection now.
Active from Active	Indicates the connection in the PM changed from one established connection to another established connection..
Active from MTC	Indicates maintenance used the connection in the PM, and the PM established a connection.
MTC for 2 audt.cycles	Indicates the PM was in the maintenance state for one full audit cycle.
PMBusy from Active	Indicates the PM had an established connection, the PM is busy now.
PMBusy from MTC	Indicates the maintenance used the PM, the PM is busy now.

The following table lists endpoint types.

Endpoint types (Sheet 1 of 2)

Value	Description
ISLC <LEN> <channel Type>	Indicates the endpoint is an ISDN subscriber line card.
ST <ST number>	Indicates the endpoint is a signaling terminal. Signaling terminal endpoints apply only to ISDN.
DS1 pmid <DS1port> <DS1 channel>	Indicates the endpoint is a DS-1 carrier.

PM232 (end)

Endpoint types (Sheet 2 of 2)

Value	Description
DCH <Dchno> Chnl <No>	Indicates the endpoint is a D-channel handler. The endpoint includes the D-channel handler number and the channel number. The D-channel handler endpoints apply to ISDN connections on an ISDN line trunk controller or connections on an ISDN line group controller.
A TDM connection lists up to four D channels	An endpoint can be a time-division multiplexed endpoint in a line concentrating module for ISDNs. The system displays up to four line equipment numbers in the connection. The TDM connections only connect to DCH endpoints.
ISLC <LEN>D	
ISLC <LEN> D	
ISLC <LEN> D	
ISLC <LEN> D	

PM233**Explanation**

The peripheral module (PM) subsystem generates log report PM233. This report appears when a PM fails to acknowledge an audit request. This request is from the integrated services digital network (ISDN) Special Connection Table Control Facility (SPEC.CONN) to add or delete a channel connection. The system generates the modified log when the tuple fails to update to the correct status for two consecutive audit cycles.

Format

Format 1 applies to example 1 and format 2 applies to example 2.

The log report formats for PM233 are as follows:

Format 1

PM233 mmmdd hh:mm:ss ssdd INFO

<PM_name><PM_number> SPEC.CONN<log_type>

Con Type: <con_type>

Status: <con_status_delta>

EndPt1: <endpt_1_of_the_connection>

EndPt2: <endpt_2_of_the_connection>

SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS

<seg_no> <seg_endpt1> <seg_endpt2> <seg_contype>
 <seg_status_delta>
 <seg_no>
 <seg_no>

Format 2

PM233 (continued)

```
PM233 mmmdd hh:mm:ss ssdd INFO
  <PM_name><PM_number>          SPEC.CONN<log_type>
  Con Type: <con_type>
  Status: <con_status_delta>
  EndPt1: ILDCHNL <site> <frame> <unit> <drawer>      Channel:
  <Bd_chnl>
  EndPt2: <endpt_2_of_the_connection>
  SEGMENT INFORMATION:
  -
  SEG          ENDPOINT1    ENDPOINT2    CONTYPE      STATUS
  -
  <seg_no> ILDCHNL <site> <frame> <unit> <Bd_chnl>
  <seg_endpt2> <seg_contype> <seg_status_delta>
  <seg_status_delta>
  <seg_no>
```

The ISDN line drawer for remotes (ILDR) is first available for remote switching center-SONET (RSC-S) and remote switching center (RSC) configurations in the NA007/XPM08 timeframe. ILDR is first available for the following configuration in the NA008/XPM81 time frame:

- remote line concentrating module (RLCM)
- outside plant module (OPM)
- outside plant access cabinet (OPAC)

Example

Example 1 applies to format 1 and example 2 applies to format 2.

Examples of log report PM233 follow:

Example 1

PM233 (continued)

PM233 JAN07 15:16:58 9100 INFO

LTC 10

SPEC.CONN Fail to Add

Con Type: CON

Status: MTC (no change)

EndPt1: ISLC HOST 67 0 07 03 B2

EndPt2: DS1 LTC 10 5 9

SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS
0	ISLCHOST6700703	LCM_CSIDE228	Con	InActive from MTC
1	XPM_PSIDELTC10728	XPM_CSIDELTC101224	Con	MTC (No change)
2	XPM_CSIDELTC10710	DS1LTC1059	Con	MTC (No change)

Example 2

PM233 JAN07 15:16:58 9100 INFO

LTC 10

SPEC.CONN Fail to Add

Con Type: CON

Status: Inactive (no change)

EndPt1: ILDCHNL REM1 02 0 2

Channel: Bd1

EndPt2: XSGCHNL 0 5

SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS
0	ILDCHNL REM1 02 0 2 Bd1	LCM_CSIDE 1 6	Con	InActive from MTC
1	XPM_PSIDELTC10728	XPM_CSIDELTC101224	Con	MTC (No change)
2	XPM_CSIDELTC10710	DS1LTC1059	Con	MTC (No change)

PM233 (continued)**Field descriptions**

The following table describes each field in the log report:

Field descriptions table (Sheet 1 of 2)

Field	Value	Description
PM_name	String	Indicates the name of the PM involved (line trunk controller [LTC], digital trunk controller [DTC], etc.)
PM_number	Integer	Gives the number of the PM involved.
log_type	Fail to add, Pass, Rep, or Fail to Suspect	Indicates the type or definition of the log.
con_type	Pend	Indicates a PENDING connection type. No connection will be established in the PM.
	Res	Indicates the connection is reserved in the PM.
	Con	Indicates the connection was requested in the PM.
con_status_delta	String	Refer to Status changes table at the end of this log report.
endpt n	String	Identifies the endpoint types. Refer to the Endpoint types table at the end of this log report.
seg_no	Integer	Indicates the number of the segment.
seg_endpt1	String	Indicates the endpoint 1 of the segment.
seg_endpt2	String	Indicates the endpoint 2 of the segment.
seg_contype	String	Indicates connection type of the segment.
seg_status_delta	String	Indicates previous and current status of the segment.
site	0000-ZZZZ	Indicates the site name (abbreviation).
frame	0 through 99	Indicates the line concentrating module (LCM) frame number.
unit	0 or 1	Indicates the unit number.

PM233 (continued)**Field descriptions table (Sheet 2 of 2)**

Field	Value	Description
drawer	0 through 19	Indicates the ILDR drawer number in the LCM.
Bd_chnl	Bd1 or Bd2	Indicates the Bd-channel number in the ILDR.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

The following table lists status changes:

Status changes (Sheet 1 of 2)

Value	Description
Inactive (no change)	Indicates the connection in the PM remained not established.
Inactive from PMBusy	Indicates the PM was busy and the connection in the PM is now not established.
Inactive from Active	Indicates the PM had an established connection and the connection is now not established.
Inactive from MTC	Indicates maintenance used the connection in the PM that was not established and the connection is now not established.
MTC (no change)	Indicates maintenance used the connection in the PM and the connection has remained not established.
Active (no change)	Indicates the PM has a connection in the PM that remains established.
Active from PMBusy	Indicates the PM was busy and the connection in the PM is now established.
Active from Active	Indicates the connection in the PM changed from one established connection to another.
Active from MTC	Indicates maintenance used the connection in the PM and the connection is now established.

PM233 (end)**Status changes (Sheet 2 of 2)**

Value	Description
MTC for 2 audt.cycles	Indicates the PM has been in the maintenance state for one full audit cycle.
PMBusy from Active	Indicates the PM had an established connection and the PM is now busy.
PMBusy from MTC	Indicates maintenance used the PM and the PM is now busy.

The following table lists endpoint types:

Endpoint types

Value	Description
ISLC <LEN> <channelType>	Indicates the endpoint is an ISDN subscriber line card.
ST <ST number>	Indicates the endpoint is a signaling terminal. Signalling terminal endpoints apply only to ISDN.
DS1 pmid <DS1port> <DS1 channel>	Indicates the endpoint is a DS-1 carrier.
DCH <Dchno> Chnl <No>	Indicates the endpoint is a D-channel handler. The endpoint includes the D-channel handler number and the channel number. D-channel handler endpoints apply to ISDN connections on an ISDN line trunk controller or on an ISDN line group controller.
A TDM connection (lists up to four D channels)	An endpoint can be a time-division multiplexed endpoint in a line concentrating module for ISDNs. In this case, up to four line equipment numbers in the connection are displayed. The TDM connections are only connected to DCH endpoints.
ISLC<LEN>D	
ISLC<LEN>D	
ISLC<LEN>DI	
I	
• SLC<LEN>D	

PM234**Explanation**

The peripheral module (PM) subsystem generates log report PM234. This report appears when a PM fails to acknowledge an audit request. This request is from the integrated services digital network (ISDN) Special Connection Table Control Facility (SPEC.CONN) to add or delete a channel connection. The system generates the modified log when segment status is maintenance (MTC) for two consecutive audit cycles.

Format

Format 1 applies to example 1 and format 2 applies to example 2.

The log report formats for PM234 are as follows:

Format 1

PM234 mmmdd hh:mm:ss ssdd INFO

<PM_name><PM_number> SPEC.CONN<log_type>

Con Type: <con_type>

Status: <con_status_delta>

EndPt1: <endpt_1_of_the_connection>

EndPt2: <endpt_2_of_the_connection>

SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS
<seg_no>	<seg_endpt1>	<seg_endpt2>	<seg_contype>	<seg_status_delta>
<seg_no>				
<seg_no>				

Format 2

PM234 (continued)

PM234 mmmdd hh:mm:ss ssdd INFO

<PM_name><PM_number> SPEC.CONN<log_type>

Con Type: <con_type>

Status: <con_status_delta>

EndPt1: ILDCHNL <site> <frame> <unit> <drawer> Channel:
<Bd_chnl>

EndPt2: <endpt_2_of_the_connection>

SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS

<seg_no> ILDCHNL <site> <frame> <unit> <Bd_chnl>

<seg_endpt2> <seg_contype> <seg_status_delta>

<seg_no>

The ISDN line drawer for remotes (ILDR) is first available for remote switching center-SONET (RSC-S) and remote switching center (RSC) configurations in the NA007/XPM08 timeframe. ILDR is first available for the following configurations in the NA008/XPM81 timeframe:

- remote line concentrating module (RLCM)
- outside plant module (OPM)
- outside plant concentrating module (OPAC)

Example

Example 1 applies to format 1 and example 2 applies to format 2.

Examples of log report PM234 follow:

Example 1

PM234 (continued)

PM233 JAN07 15:16:58 9100 INFO

LTC 10

SPEC.CONN Fail to Add

Con Type: CON

Status: MTC (no change)

EndPt1: ISLC HOST 67 0 07 03 B2

EndPt2: DS1 LTC 10 5 9

SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS
0	ISLCHOST6700703	LCM_CSIDE228	Con InActive	from MTC
1	XPM_PSIDELTC10728	XPM_CSIDELTC101224	Con MTC (No change)	
2	XPM_CSIDELTC10710	DS1LTC1059	Con MTC (No change)	

Example 2

PM233 JAN07 15:16:58 9100 INFO

LTC 10

SPEC.CONN Suspect

Con Type: CON

Status: MTC for 2 audt. cycles

EndPt1: ILDCHNL REM1 02 0 2 Channel: Bd1

EndPt2: XSGCHNL 0 5

SEGMENT INFORMATION:

SEG	ENDPOINT1	ENDPOINT2	CONTYPE	STATUS
0	ILDCHNL REM1 02 0 2 Bd1	LCM_CSIDE 1 6	Con	InActive from MTC
1	XPM_PSIDE LTC 0 7 6	XPM_CSIDE LTC1 0 5 6	Con	InActive from MTC
2	JNET 0 5 2	JNET 0 57 6	Con InActive	from MTC
3	XPM_CSIDE NIU 0 0 2	XSGCHNL 0 5	Con InActive	from MTC

PM234 (continued)**Field descriptions**

The following table describes each field in the log report:

Field descriptions table (Sheet 1 of 2)

Field	Value	Description
PM_name	String	Indicates the name of the PM involved (line trunk controller [LTC], digital trunk controller [DTC], etc.)
PM_number	Integer	Gives the number of the PM involved.
log_type	Fail to Add, Pass, Rep, or Fail to Suspect	Indicates the type or definition of the log.
con_type	Pend	Indicates a PENDING connection type. A connection will not be established in the PM.
	Res	Indicates the connection is reserved in the PM.
	Con	Indicates the connection was requested in the PM.
con_status_delta	String	Refer to Status changes table at the end of this log report.
endpt n	string	Identifies the endpoint types. Refer to the Endpoint types table at the end of this log report.
seg_no	Integer	Indicates the number of the segment.
seg_endpt1	String	Indicates the endpoint 1 of the segment.
seg_endpt2	String	Indicates the endpoint 2 of the segment.
seg_contype	String	Indicates connection type of the segment.
seg_status_delta	String	Indicates previous and current status of the segment.
site	0000-ZZZZ	Indicates the site name (abbreviation).
frame	0 through 99	Indicates the line concentrating module (LCM) frame number.
unit	0 or 1	Indicates the unit number.

PM234 (continued)**Field descriptions table (Sheet 2 of 2)**

Field	Value	Description
drawer	0 through 19	Indicates the ILDR drawer number in the LCM.
Bd_chnl	Bd1 or Bd2	Indicates the Bd-channel number in the ILDR.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

The following table lists status changes:

Status changes (Sheet 1 of 2)

Value	Description
Inactive (no change)	Indicates the connection in the PM remains not established.
Inactive from PMBusy	Indicates the PM was busy and the connection in the PM is now not established.
Inactive from Active	Indicates the PM had an established connection and it is now not established.
Inactive from MTC	Indicates that maintenance used the not established connection in the PM and the connection is now not established.
MTC (no change)	Indicates that maintenance used the connection in the PM that remains not established.
Active (no change)	Indicates the connection in the PM remains established.
Active from PMBusy	Indicates the PM was busy and the PM now has an established connection.
Active from Active	Indicates the connection in the PM changed from one established connection to another.
Active from MTC	Indicates that maintenance used the connection in the PM and the PM now has an established connection.

PM234 (end)**Status changes (Sheet 2 of 2)**

Value	Description
MTC for 2 audt.cycles	Indicates the PM was in the maintenance state for one full audit cycle.
PMBusy from Active	Indicates the PM had an established connection and the PM is now busy.
PMBusy from MTC	Indicates that maintenance used the PM and the PM is now busy.

The following table lists endpoint types:

Endpoint types

Value	Description
ISLC <LEN> <channelType>	Indicates the endpoint is an ISDN subscriber line card.
ST <ST number>	Indicates the endpoint is a signaling terminal. Signalling terminal endpoints apply only to ISDN.
DS1 pmid <DS1port> <DS1 channel>	Indicates the endpoint is a DS-1 carrier.
DCH <Dchno> Chnl <No>	Indicates the endpoint is a D-channel handler. The endpoint includes the D-channel handler number and the channel number. D-channel handler endpoints apply to ISDN connections on an ISDN line trunk controller or on an ISDN line group controller.
A TDM connection (lists up to four D channels) ISLC<LEN>D ISLC<LEN>D ISLC<LEN>D ISLC<LEN>D	An endpoint can be a time-division multiplexed endpoint in a line concentrating module for ISDNs. The system displays up to four line equipment numbers in the connection. The TDM connections only connect to DCH endpoints.

PM235

Explanation

The Peripheral Module (PM) subsystem generates log report PM235 when a D-channel handler (DCH) takeover occurs. The report identifies the source and destination DCHs with the ISDN service group (ISG).

Log PM235 is modified to show that the ISDN signaling preprocessor (ISP) reports an explanation for the DCH takeover failure to the central control (CC). If the DCH passes takeover, the log is not modified.

Format

The log report format for PM235 is as follows:

```
**PM235 mmmdd hh: mm: ss ssdd INFO DCH
    DCH TAKEOVER infotxt : DCH nnn TO DCH nnn ISG nnn
    Pass/fail message received from PM
    Reason: Explanation returned by XPM
```

Example

An example of log report PM235 follows:

```
**PM235 DEC24 23: 59: 59 1121 INFO DCH
    DCH TAKEOVER failed on PLGC 4: DCH 123 TO DCH 45 ISG 27
    Fail message received from PM
    Reason: Spare DCH has incompatible load
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO DCH	Constant	Indicates that a DCH takeover occurred.
DCH TAKEOVER	passed	Indicates takeover was successful.
	failed	Indicates takeover was not successful.
DCH nnn TO DCH nnn	0-255	Identifies the source and destination DCH.
ISG	0-255	Identifies services in the ISDN ISG that this action affected.

PM235 (continued)

(Sheet 2 of 2)

Field	Value	Description
Pass/Fail message received from PM	Constant	Indicates a pass or fail message was received from the PM.
Reason	Character string	Indicates the explanation from the PM for the failure.

Action

If the takeover succeeds, there is no action required. If the takeover failed, the system makes the destination DCH that PM235 identifies system busy (SysB) and generates log report PM190.

The ISDN signaling processor (ISP) can report an explanation for the enhanced DCH (EDCH) failed takeover to the CC. The following table contains the possible reasons and their corresponding actions.

(Sheet 1 of 2)

Reason	Action
Spare DCH has incompatible load.	Reload the spare DCH with the correct EDCH load.
Could not convert DCH port number.	Do BSY and RTS on the XPM to resend static data to the XPM.
Invalid message from initiator.	Attempt takeover again.
Source DCH already performing takeover.	Attempt takeover again.
Source DCH datafilled as a spare.	Check DCH and ISG mapping.
Spare DCH not specified in request.	Attempt takeover again.
Source DCH not in valid state for takeover request.	Check state of source DCH in takeover.
Spare DCH already performing takeover.	Attempt takeover again.
Target DCH not a spare.	Check DCH and ISG mapping.
Target DCH not in valid state for takeover request.	Check state of destination DCH in takeover.
No spares available.	Check sparing enable flag on destination DCH.

(Sheet 2 of 2)

Reason	Action
No resource takeover block allocated for request.	Attempt takeover again.
DCH recovery timer has expired.	Attempt takeover again.
Error recovery sequence initiated.	Attempt takeover again.
Undefined failure reason XX.	Attempt takeover again.

Associated OM registers

There are no associated OM registers.

PM236

Explanation

The peripheral module (PM) subsystem generates log report PM236. This log report appears when the system finds, does not find, or loses integrity. The integrity condition is on one endpoint of the network segment of a special connection (SPECCONN). The system uses an integrated services digital network (ISDN), or other PM and XPM (XMS-based PM) types in this operation. The log has three different meanings, depending on the integrity message type: integrity found, integrity not found, and integrity lost.

The system finds integrity on one endpoint of the network segment of the connection. This log appears after one of the following occurs:

- the system makes a SPECCONN again
- integrity was lost or not found
- the SPECCONN audit acts on a special connection that has the status of NO_INTEG

The system did not find integrity on one endpoint of the network segment, of the connection. The report appears when the system makes or remakes a SPECCONN. A NET102 integrity failure log always precedes this log.

One endpoint of the network segment of the connection loses integrity. A NET102 integrity failure log always precedes this log.

Format

Format 1 applies to example 1 and format 2 applies to example 2.

The log report formats for PM236 are as follows:

Format 1

```
PM236 mmmdd hh:mm:ss ssdd INFO
  <pmid> SPECCONN <Integrity message type>
  CS Port: <port#> CS Chnl: <chnl#>
  EndPt1 : <endpt1>
  EndPt2 : <endpt2>
```

Format 2

PM236 (continued)

```

PM236 mmmdd hh:mm:ss ssdd INFO
      <pmid> SPECCONN <Integrity message type>
      CS Port: <port#> CS Chnl: <chnl#>
      EndPt1 : ILDCHNL <site> <frame> <unit> <drawer>      Channel:
      <Bd_chnl>
      EndPt2 : <endpt2>

```

The ISDN line drawer for remotes (ILDR) is first available for remote switching center-SONET (RSC-S) and remote switching center (RSC) configurations in the NA007/XPM08 time frame. The ILDR is first available for the following configurations in the NA008/XPM81 time frame:

- remote line concentrating module (RLCM)
- outside plant module (OPM)
- outside plant access cabinet (OPAC)

Example

Example 1 applies to format 1 and example 2 applies to format 2.

Examples of log report PM236 follow:

Example 1

```

PM236 APR04 16:48:46 6362 INFO
      LTC 2 SPECCON Integrity Lost
      CS Port: 6 CS Chnl: 30
      EndPt1 : DS1 DTC 0 5 24
      EndPt2 : DCHCHNL 100 30

```

Example 2

```

PM236 APR04 16:48:46 6362 INFO
      LTC 2 SPECCON Integrity Lost
      CS Port: 6 CS Chnl: 30
      EndPt1 : ILDCHNL REM1 02 0 2      Channel: Bd1
      EndPt2 : XSGCHNL 0 5

```

PM236 (continued)**Field descriptions**

The following table describes each field in the log report:

Field descriptions table (Sheet 1 of 2)

Field	Value	Description
INFO	Constant	Informs of activity on the PM subsystem.
pmid	Alphanumeric	Indicates PM type.
SPECCONN	Constant	Indicates an integrated-services digital network special connection table control facility audit.
Integrity message type	Character string	Indicates the type of message and affects the meaning of the log: integrity found, integrity not found, and integrity lost. Refer to "Explanation" in this log report for more detailed information.
CS Port	0 through 15	Indicates the central side (C-side) port on the peripheral.
CSCHNL	0 through 31	Indicates the C-side channel number on the peripheral.
EndPt1, EndPt2	DS1, ISLC, or DCHNL	Defines endpoint 1 or 2 for the special connection and requires the parameters listed in fields DS1, ISLC, or DCHNL.
DS1	PM_TYPE PM_NUMBER P-SIDE PORT P-SIDE CHNL	These values together define the characteristics of the DS1 endpoint #1 or #2 connections.
ISLC	LCM_ID1 LCM_ID2 LEN_ID1 LEN_ID2	These values together define the characteristics of the line concentrating module (LCM) and line equipment number (LEN) involved in the ISLC endpoint 1 or 2 connections.
DCHCHNL	ISG_NUMBER CHANNEL_NUMBER	These values together define the characteristics of the D-channel handler (DCH) involved in the DCHCHNL endpoint 1 or 2 connections.
site	0000-ZZZZ	Indicates the site name (abbreviation).

Field descriptions table (Sheet 2 of 2)

Field	Value	Description
frame	0 through 99	Indicates the line concentrating module (LCM) frame number.
unit	0 or 1	Indicates the unit number.
drawer	0 through 19	Indicates the ILDR drawer number in the LCM.
Bd_chnl	Bd1 or Bd2	Indicates the Bd-channel number in the ILDR.

Action

If an integrity found log does not follow an integrity not found or an integrity lost log, consult the *Networks Maintenance Guide*. Refer to the "Network Failures" section or the log is for information only and there is no action required.

Associated OM registers

There are no associated OM registers.

PM270

Explanation

The peripheral module (PM) subsystem generates log report PM270. The subsystem generates this report when the congestion state of a D-channel handler (DCH) changes. Congestion can result from:

- a processor blockage that an excess of memory buffers queued for servicing causes
- not enough memory buffers for storage of incoming messages on D-channels or high CPU occupancy in the DCH

The congestion logs indicate when a DCH enters congestion, enters overload, leaves overload, and leaves congestion. Repeated overload and congestion logs indicate that the office ISDN services require maintenance.

Format

The log report format for PM270 is as follows:

```
PM270 mmmdd hh:mm:ss ssdd INFO DCH Congestion
DCH <d#> on <xpm> <x#>:DCH Congestion: <faulttext> ISG <i#>
Cause: <faultcause>    <,> <faultcause><,><faultcause>
```

Example

An example of log report PM270 follows:

```
PM270 JAN01 12:13:14 1234 INFO DCH Congestion
DCH 0 on LTC 10:DCH Congestion: Congestion ISG 3
Cause: FIFO Backed Up, Low CPU
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
DCH Congestion	Constant	Indicates the status of the D-channel Handler (DCH).
d#	0-255	Identifies the DCH.

(Sheet 2 of 2)

Field	Value	Description
xpm	RCCI, LTC, LGC, PLGC, TMS, SMA, SMU, PRCC, ALGC, RCC2, SRCC, RC02	Identifies the host XPM type.
x#	(0-255)	Identifies the host XPM number.
faulttext	Congestion	Denotes the change of the DCH into congestion.
	Service Affecting State of Overload	Denotes the change of the DCH into overload.
	Congestion Abated	Denotes the change of the DCH into congestion abated.
	Overload Abated	Denotes the change of the DCH into overload abated.
i#	0-255	Identifies ISDN Service Group (ISG) that associates with this DCH.
fault_cause	Low Buffer Pool	Indicates the reason of the DCH congestion.
	FIFO Backed Up	Indicates the reason of the DCH congestion.
	Low CPU	Indicates the reason of the DCH congestion.

Action

There is no action required.

Associated OM registers

This log increases the PM1 PM1ERR OM.

PM300

Explanation

The Peripheral Module (PM) subsystem generates report PM300. The subsystem generates PM300 when an error condition causes a TRAP interrupt. One of the following detects the error condition:

- firmware
- hardware
- software

The report includes information like a traceback. A traceback is a record of software execution that shows the sequence in which the system executes instructions. Log PM185 reports a TRAP interrupt. Save PM185 for the next level of maintenance.

Format

The log report format for PM300 is as follows:

```
*PM300 mmmdd hh:mm:ss ssdd      TBL PM TRAP
  pmid Unit n: acttxt
  Ram Load name = proctxt
  MP rom name = proctxt, SP rom name = proctxt
  trap: traptxt
  Task: tasknm      Trap Sequence #: seqtxt
  CC Time: dd:hh:mm:ssnn
  PP Time: dd:hh:mm:ssnn
  <trapinfo>
```

Example

An example of log report PM300 follows:

PM300 (continued)

```

*PM300 JUN02 23:08:02 7500      TBL PM TRAP
  SMS 0 Unit 0: Act
  Ram Load name = SS20ZA
  MP rom name = XPMRFA10, SP rom name = XPMRFA10
  trap: Value range err=0
  Task: BASEMON 000A 000A  Trap Sequence #: 3 Current load
  CC Time: 02:22:56:11.00
  PP Time: 00:01:09:09.80
  Occurred at:002CB5CE SMSSPMON 116 DISPALM 27 Offset:#8A
  Called from:002CB6BC SMSSPMON 116 DDLT00BP 28 Offset:#5E
    002CE4B5 SMSSPMON 116 DDLDATAD 55 Offset: #11B
    002CFDA1 SMSSPMON 116 SPMON      77 Offset: #BD
    002F5749 BASEMON 16  TERMDRIV 10 Offset: #14B
  PC:0000159E SR=2000 US=0000EC SS=0007FFF6 TCB=0000DEE0
  D0 =00000A4A D1 =0020F18C D2 =FFFFFFFF D3 =00000001
  D4 =0000060C D5 =FFFFFFF0 D6 =00002942 D7 =00000000
  A0 =00208492 A1 =0000DEE0 A2 =0000ECA8 A3 =002CB5CE
  A4 =0002CA6A A5 =0000ECBC A6 =000015C6 A7 =0007FFF6
  Stack: 0004 0000 0001 0000 DEE0 000C 000C 000F 0012 ...

```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
TBL PM TRAP	Constant	Identifies the problem that causes a TRAP interrupt.
pmid	Symbolic text	See descriptions for pmid_1, pmid_2 and pmid_3 in table I.
UNIT	0 or 1	Identifies the PM plane.
acttxt	Act	Identifies the activity state of PM plane as active (Act).
	Inact	Identifies the activity state of PM plane as inactive (Inact).
Ram Load name	Symbolic text	Provides the name of the procedure resident in random access memory (RAM).
MP rom name	Symbolic text	Provides the name of the procedure resident in master processor (MP) read only memory (ROM).

PM300 (end)

(Sheet 2 of 2)

Field	Value	Description
SP rom name	Symbolic text	Provides the name of the procedure resident in signaling processor (SP) ROM.
trap	Symbolic text	Indicates the type of TRAP.
Task	Symbolic text	Identifies the suspect task.
Trap sequence	0-99	Provides sequence and load identification for TRAP occurrence.
CC Time	Integers	Provides time central control recorded TRAP.
PP Time	Integers	Provides time peripheral processor (PP) recorded TRAP.
trapinfo	Symbolic text	Provides traceback of procedures from where TRAP occurs.

Action

Save all reports that the system generates one minute before the TRAP report.
Contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

PM400

Explanation

The peripheral module (PM) subsystem generates report PM400. The subsystem generates PM400 when a failure occurs in the link that associates with the logical terminal. The failure in the link causes the system to take down one or more calls. The Problem Manager also generates PM400. The Problem Manager generates PM400 when the PM subsystem generates 15 or more PM180 reports at the end of the hour.

The PM subsystem generates report PM180 when the system encounters a software exception. A software exception occurs when software does not execute correctly. The subsystem also generates log report PM180 for software exceptions related to hardware problems.

Format

The log report format for PM400 is as follows:

```
PM400 mmmdd hh:mm:ss ssdd SUMM PM Exception Report
  Location: <pmid> <unit_no>
  Problem id: <probid>
  Event : <rsntxt>
  Initial event time: <initime>
  Event count : <num_events>
  Duration: <eventime>
```

Example

An example of log report PM400 follows:

```
PM400 MAY26 14:56:12 5400 SUMM PM Exception Report
  Location: RCCI 2 0
  Problem id: 7112
  Event: PM software exception count
  Initial event time: 13:51:42
  Event count: 19
  Duration: 60 min
```

PM400 (end)

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
SUMM PM Exception Report	Constant	Indicates the summary of logs that concern the PM exception report.
pmid	Refer to Table I	Identifies the PM that generates this report.
unit_no	0 or 1	Identifies the PM unit that generates this report.
probid	nnnnnn	Provides the problem number. This number associates logs that relate to the same problem. The Problem Viewer also displays this number.
rsntxt	'PM software exception count'	Identifies the event that caused the subsystem to generate this report.
initime	hh:mm:ss	Provides the time of the first event.
num_events	n,nnnnnnnn	Provides the number of observed events.
eventime	nnnn min	Provides the duration of the event.

Action

Inspect the XMS-based peripheral module (XPM) to identify faults. If PM180 indicates a hardware problem, perform diagnostic and maintenance procedures on the suspect equipment.

If PM180 indicates a software error or a problem with the XPM software, reload the software.

Associated OM registers

There are no associated OM registers.

PM420**Explanation**

Log title: PM420

Name: PM P-SIDE Overload report

Event type: INFO

Description:

Operational measurement MSGPSOC tracks the transfer rate of messages sent and received on the P-side link of the XPM. The system converts the number of messages into the percentage of link capacity used. If the percentage exceeds 60% of link capacity, overload occurs. The system generates and sends you PM420, the PM P-SIDE Overload report.

Format

The format for log report PM420 follows.

```
GCSA13AE CM          PM420 JAN19 21:26:26 5000 INFO
LTC 0                Number of overloaded P-side Links: 2
Node: ISTb, Unit0 Act: ISTb, Unit1 Inact: ISTb
P-side Overload
Node No : 2    Percentage : 60-65%
Node No : 7    Percentage : 85-90%
```

Example

The above format example for log report PM420 also reflects a report example.

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
Node No	integer	the number of the node that is in overload condition
Percentage	60% to 100%	the message transfer rate expressed as the percentage of link capacity used

Action

None

1-636 Log reports

PM420 (end)

Related OM registers

MSGPSOC

Additional information

None

PM600

Explanation

The peripheral module (PM) subsystem generates report PM600 when the XMS-based peripheral module (XPM) routine exercise (REX) test fails. The PM600 records the REX test from the start of testing to the test step that fails. The PM600 identifies the recovery actions that the test initiates to determine the cause of the XPM REX test failure. The PM600 replaces the PM181 REX Failed logs and PM181 REX Recovery logs that AF2989 added in BCS32. The PM600 is a trouble log that raises a major alarm for the PM that fails the XPM REX test.

The subsystem generates report Format 2 when the REX test on a line concentrating module (LCM) fails. The LCM test consists of the LCM REX test and the LCM continuity and voltage (LCMCOV) REX test. The system performs the LCMCOV REX test on the LCM power converters and ringing generator. The report contains the name of the REX test and records the status of the nodes and the units. The failure reason indicates the step in which the REX test failed.

Note: In NA004 and later, feature AF5898 (LCM REX Controller Enhancement) migrates the LCM REX test. The LCM REX Controller Enhancement migrates the test from the LCM node audit process to the system REX (SREX) controller. The LCM REX Controller Enhancement places the continuity and voltage (COV) portion of the LCM REX test in a separate LCMCOV test.

Log report PM600 includes the maintenance arbitrator (MtcArb) state (either operating or disabled) when MtcArb is present in the XPM load. The subsystem generates report Format 3 when a load that contains MtcArb is present in both XPM units. The subsystem generates report Format 4 when a load that contains MtcArb is present in only one XPM unit.

Format

The fields and entries associated with maintenance arbitrator are optional (apply only to XPMs). When a load containing MtcArb is present in both XPM units, the MtcArb state is indicated for each unit as either functional or disabled. In XPM81, when a load containing MtcArb is present in only one of the units, the MtcArb state is indicated for that unit only. The state of the of the second unit is not indicated. Beginning in TL09, MtcArb is always functional and the MtcArb state is not indicated in the logs.

The log report formats for PM600 are as follows:

Format 1

PM600 (continued)

PM600 mmmdd hh:mm:ss ssdd TBL REX Failed <pmid>
Node:<status>, Unit <act>: <state>, Unit 1 <act> : <state>
Rex Step Unit Start Time Failure Reason
<rex_step> <unit_no> <hh:mm:ss> <Failure>

Format 2

PM600 mmmdd hh:mm:ss ssdd TBL REX Failed <lcm_rex_name>
<lcm_id> Node: <status>, Unit 0: <state>, Unit 1: <state>
<rex_fail_reason>

Format 3

PM600 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
REASON: reastxt
Unit0: MtcArb is <state>, Unit1: MtcArb is <state>

Format 4

PM600 mmmdd hh:mm:ss ssdd TBL PP-HARDWARE pmid
REASON: reastxt
Unit<unit_no>: MtcArb is <state>

Example

Examples of log report PM600 follow.

Example 1

PM600 (continued)

```

PM600 JUN08 01:28 8600 TBL REX FAILED LTC 0
Node:ISTb, Unit0 Act:InSv, Unit1 Inact:SysB(RTS Failed)
  REX Step      Unit      Start Time  Failure Reason
  -----
TST Inact      0        01:20:33
BSY Inact      0        01:20:47
RTS Inact      0        01:21:15
Sync Inact     0        01:24:43
PreSwAct       0        01:25:51
Warm SwAct     -        01:26:05
BSY Inact      1        01:26:14
RTS Inact      1        01:27:18    REX Failed-RTS of
                                     Inactive Unit1 after SwAct
Finished      -        01:28:25

```

.....

```

Diagnostic Failures: UTRDIAG
Site Flr RPos Bay_id Shf Description Slot EqPEC
HOST 01  L15  LTE 00  65  LTC : 000  16 6X92

```

Example 2

```

PM600 JUN22 01:05:35 1234 TBL REX Failed LCMCOV_REX
LCM HOST 0 0 Node: ISTb, Unit 0: SysB, Unit 1: InSv
LCM REX TEST FAILED.

```

Example 3

```

PM600 APR01 12:00:00 2112 TBL PP-HARDWARE DTC 1
REASON: DTC REX TEST FAILED
Unit0: MtcArb is disabled, Unit1: MtcArb is functional

```

Example 4

```

PM600 APR01 12:00:00 2112 TBL PP-HARDWARE DTC 1
REASON: DTC REX TEST FAILED
Unit0: MtcArb is disabled

```

PM600 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
alarm		Optional field. Indicates the type of alarm. Also indicates if an alarm accompanies the change of state.
	***	Indicates a critical alarm.
	**	Indicates a major alarm.
	*	Indicates a minor alarm.
	(blank)	Indicates no alarm.
TBL PP-HARDWARE	Symbolic text	Indicates a peripheral processor (PP) hardware error or firmware error.
state	InSv, ISTb, Manb, SysB, CBsy, Offl	Indicates the node and unit state of the PM that reports the log.
state	operating or disabled	Indicates the state of MtcArb in the XPM unit when the subsystem formats the log for display. This state can differ from the state of the log when the subsystem generates the log. The time from when the subsystem generates the log to when the subsystem formats the log indicates a possible discrepancy. The possibility of a discrepancy can increase as the time between the two increases. Beginning in TL09, this field is not present.
act	Act, Inact	Indicates if the PM unit is active or inactive.
rex_step	Refer to the table "rex_step and unit_no values" in this document.	Indicates the action the REX test performs at that time.
unit_no	Refer to the table "rex_step and unit_no values" in this document.	Indicates the unit on which the system performs the rex_step.

PM600 (continued)

(Sheet 2 of 3)

Field	Value	Description
Unit 0: MTCARB is	constant	Indicates the current state of the maintenance arbitrator in XPM unit 0 follows. This is an optional field that applies only to digital trunk controllers (DTC), line trunk controllers (LTC) and line group controllers (LGC). If the XPM maintenance arbitrator is not loaded in the unit, the field is blank. Beginning in TL09, this field is not present.
Unit 1: MTCARB is	constant	Indicates the current state of the maintenance arbitrator in XPM unit 1 follows. This is an optional field that applies only to DTCs, LTCs, and LGCs. If the XPM maintenance arbitrator is not loaded in the unit, the field is blank. Beginning in TL09, this field is not present.
Start Time	hh: 00-24, mm: 00-59, ss: 00-59	hh: HOUR, mm: MINUTE, ss: SECOND of the rex_step started.
Failure	Refer to the table "XPM REX logs and associated messages prior to AF5008" on page ten and the table "Revised XPM REX failure reasons" in this document.	Indicates the text specifies REX test failure reasons.
Additional data	Only present if a diagnostic or PreSwACT failure occurs	Text identifies additional REX test failure data.
diag_id	Refer to the table "Diagnostics supported by AF5008" in this document.	Indicates each Diag_id is a mnemonic for a diagnostic that failed during REX testing.
card_list	From 1 to 10 suspect cards that the XPM reports.	Identifies the cards that diagnostic failure indicates can be defective.
history	Refer to the table "Diagnostics supported by AF5008" in this document.	Indicates the reasons the central control (CC) gives that indicate you must not attempt a SWACT during the REX test.

PM600 (continued)

(Sheet 3 of 3)

Field	Value	Description
xpm_text	Refer to the table "Diagnostics supported by AF5008" in this document.	Indicates the reasons the CC gives that indicate you must not attempt an XPM during the REX test.
lcm_rex_name	LCM REX, LCMCOV REX	Indicates the name of the LCM REX test failure.
lcm_id	Variable string of up to 13 characters (possible values are office-dependent)	Indicates the LCM node type on which the REX test failed.
status	SysB, ISTb, InSv	Indicates the status of the node or the units on which the REX test failed.
rex_fail_reason	Refer to the section "LCM and LCMCOV REX test failure reasons" in this document.	Indicates the reason for the LCM or LCMCOV REX test failure.

Action

The PM600 report is a record of the maintenance actions that the system performs on the XPM during the REX test failure. The PM600 records maintenance actions from the start of the REX test to the test step that failed. The PM600 includes any recovery actions that the test initiates. This log can identify the source of the REX test failure.

For Format report 2, the system automatically recovers the LCM if the LCM unit is down. If the automatic recovery fails, the technician must bring the unit(s) back into service manually.

If the LCMCOV REX test fails, it is possible that test hardware is not set up correctly. Examples of test hardware are the:

- metallic test unit (MTU)
- line test unit (LTU)
- maintenance line card
- test access bus
- ringing generators
- other connections

The LCMCOV REX test can also fail when MTU/LTU connections in tables MTAVERT or MTAHORIZ do not contain complete data.

PM600 (continued)**Associated OM registers**

There are no associated OM registers.

Additional information

The following table provides XPM REX logs and associated messages before AF5008.

XPM REX logs and associated messages before AF5008 (Sheet 1 of 2)

Log	Message
REX not performed	Node ISTb
REX not performed	Node CBSy
REX not performed	Node ManB
REX not performed	Node SysB
REX not performed	Node Offl
REX not performed	Node Uneq
REX test Passed	
* REX test Failed (Note)	Inactive InSv tests before SwAct
* REX test Failed (Note)	Inactive OOS tests
REX test Failed	Inactive RTS
REX test Failed	Achieving Superframe/Data Sync
REX test Failed	Warm SwAct
* REX test Failed (Note)	Active InSv tests after SwAct
* REX test Failed (Note)	Inactive OOS tests after SwAct
REX test Failed	Inactive RTS after SwAct
REX test Failed	Achieving Superframe SwAct
REX test Failed	Terminated due to WARM SwAct
REX test Failed	Terminated due to Autonomous SwAct
REX aborted, Reason;	Various abort messages
Note: * indicates a list of 1 to 10 defective cards.	

PM600 (continued)

XPM REX logs and associated messages before AF5008 (Sheet 2 of 2)

Log	Message
REX recovery attempt	BSY both units after fails
REX recovery attempt	RTS inactive and SwAct back
REX recovery attempt	RTS original active after fail
REX recovery attempt	RTS original inactive after fail
REX recovery result	RTS inactive successful
REX recovery result	RTS inactive failed
REX recovery result	Inactive achieved Superframe/Data Sync
REX recovery result	Inactive cannot achieve Superframe/Data Sync
REX recovery result	Warm SwAct successful
REX recovery result	Both units busied
REX recovery result	RTS original active request submitted
REX recovery result	Unable to submit RTS request
REX recovery result	RTS original Inactive request submitted
REX recovery result	Warm SwAct failed
REX recovery result	Inactive achieved Superframe/Data Sync
Note: * indicates a list of 1 to 10 defective cards.	

PM600 (continued)

The following table provides a revision of the reasons for XPM REX failure:

Revised XPM REX failure reasons

Before AF5008	After AF5008
Inactive InSv tests before SwACT	InSv tests of Inactive Unit 0 before SwAct, InSv tests of Inactive Unit 1 before SwAct
Inactive OOS tests	OOS tests of Inactive Unit 0, OOS tests of Inactive Unit 1
Inactive RTS	RTS of Inactive Unit 0, RTS of Inactive Unit 1
Active InSv tests after SwACT	InSv tests of Active Unit 0 after SwAct, InSv tests of Active Unit 1 after SwAct
Inactive OOS tests after SwACT (Note 1)	InSv tests of Inactive Unit 0 after SwAct, InSv tests of Inactive Unit 1 after SwAct
Inactive RTS after SwACT	RTS of inactive Unit 0 after SwAct, RTS of inactive Unit 1 after SwAct
Achieving Superframe/Data Sync	Achieving Superframe/ Data Sync of Unit 0 Achieving Superframe/ Data Sync of Unit 1
Achieving Superframe/Data Sync after SwACT	Achieving Superframe/ Data Sync of Unit 0 after SwAct, Achieving Superframe/ Data Sync of Unit 1 after SwAct
(Note 2)	SwAct to Unit 0 refused by SwAct Controller, SwAct to Unit 0 refused by SwAct Controller
(Note 3)	SwAct Back to Unit 0 occurred, SwAct Back to Unit 1 occurred
Note 1: The tests on the inactive unit after SwACT now occur when the unit is InSv, so that the failure string indicates "InSv" instead of "OOS". Note 2: This is the new failure string that this feature adds to handle when the SwACT Controller (see AF5007) indicates "InSv". Note 3: This is the new failure string that this feature adds when a SwACT back to the original active unit occurs.	

PM600 (continued)

The following table provides rex_step and unit_no values.

rex_step and unit_no values

rex_step	unit_no	Comment
TST INACT	0/1	Test the inactive unit
TST ACT	0/1	Test the active unit
BSY INACT	0/1	Busy the inactive unit
BSY BOTH	-	Busy both inactive unit
RTS INACT	0/1	RTS the inactive unit
RTS ACT	0/1	RTS the active unit
Sync Inact	0/1	Wait for data and superframe sync
PreSwACT	0/1	Perform pre-SwACT audit
Warm SwACT	-	Perform warm SwACT
Finished	-	Rex finished

The following table provides diagnostics that AF5008 supports:

Diagnostics supported by AF5008 (Sheet 1 of 2)

CC diagnostic name	Description
AMUDIAG	SX50 External Loop
CDS1 DG	C Side DS1
CMRDIAG	CMR Card
CONT DG	Continuity Diag
CSMDIAG	CSM Diag
CS SPCH	Network Links
DCHIALB	DCH Inactive Loopback
DS1DIAG	P side DS1
FORMATR	Local Formatter
ISPHDLC	ISP HDLC Diag

PM600 (continued)

Diagnostics supported by AF5008 (Sheet 2 of 2)

CC diagnostic name	Description
ISPSPHI	ISP Speech Bus Internal
ISPSPHF	ISP Speech Bus Full
MSGDIAG	6X69 Messaging Card
MSG IMC	IMC Link
MX76 MSG	MX76 Messaging Card
PADRING	6X80 Pad/Ring
PS LOOP	PSide Loops
PS SPCH	PSide Speech Links
RCC FMT	Remote Formatter
SMS AB	6X81 A/B Bits
SPCH DG	Speech Path
STRDIAG	Speech Tone Receiver
SYNC DG	Sync Diag
TONE DG	Tone Diag
TS DIAG	Time Switch Diag
UTRDIAG	UTR Card

PM600 (end)

LCM REX and LCMCOV REX test failure reasons

For PM600 report Format 2, the <rex_fail_reason> field can contain the following failure reason values:

- LCM REX TEST FAILED indicates failure of the LCM REX test. One of the following strings precedes the test and identifies the step where the failure occurred:
 - SysB Unit x Failed : LCM REX Failed
 - SysB Unit x Failed : LCM REX Incomplete
 - InSv Diag Unit x Failed : LCM REX Failed
 - OOS Diag Unit x Failed : LCM REX Failed
 - RTS Unit x Failed : LCM REX Failed
- LCM REX TEST ABORTED indicates that another task aborted the LCM REX test.
- LCMCOV REX TEST FAILED indicates an LCMCOV REX test failure. One of the following strings precedes the test failure notification and indicates the test step where the failure occurs:
 - COVREX TEST INCOMPLETE : NO TEST LINE DATAFILLED
 - COVREX TEST INCOMPLETE : TEST HARDWARE UNAVAILABLE
 - COVREX TEST: PWR CARD/RING TST: Wrong parameters
 - COVREX TEST: PWR CARD/RING TST: Fail TAN connection
 - COVREX TEST: PWR CARD/RING TST: No MTE for MTC line
 - COVREX TEST: PWR CARD/RING TST: No test equipment available
 - COVREX TEST: Check RING GENs, POWER CARD, T/A BUS or MTC line card
 - PWR CARD/RING GEN TEST: Check test setup
 - SysB Unit 0 Failed : LCMCOV REX Failed
 - RTS Unit 0 Failed : LCMCOV REX Failed
- LCMCOV REX test : Routine Exercise ABORTED indicates that another task aborts the LCMCOV REX test.

PM601**Explanation**

The peripheral module (PM) subsystem generates report PM601. The subsystem generates PM601 when the operating company personnel reset the long term failure (LTF) or short term failure (STF) counters to zero for an XMS-based PM (XPM). The operating company personnel reset the LTF or STF counters at the MAP terminal. The LTF counters are reset with the QueryPM DiagHist Reset command. The STF counters are reset when a warm SwAct occurs, only for the unit that is newly active. The subsystem also generates PM601 when an XPM is deleted from datafill. The PM601 log records diagnostic failures. The PM601 records failures from the earlier reset time to the next reset (log time). The PM 601 displays the earlier reset time in the LTF or STF last reset field.

Format

The log report format for PM601 is as follows:

PM601 mmmdd hh:mm:ss ssdd INFO XPM Diagnostic History

pmid

Reset Long Term Failure (LTF) counts

LTF last reset : yy/mm/dd hh:mm:ss

Summary of LTF counts prior to reset :

UNIT 0 UNIT 1

DIAGLIST

	UNIT 0	UNIT 1
diaglst	n	n

CARDLIST

crdlst	n	n

PM601 mmmdd hh:mm:ss ssdd INFO XPM Diagnostic History

pmid

Reset ShortTerm Failure (STF) counts

STF last reset : yy/mm/dd hh:mm:ss

Summary of STF counts prior to reset :

UNIT X

DIAGLIST

diaglst	n

CARDLIST

crdlst	n

PM601 (continued)**Example**

An example of log report PM601 follows:

```
PM601 JAN27 05:07:08 1234 INFO XPM Diagnostic History
RCC1
Reset Long Term Failure (LTF) counts
LTF last reset: 92/07/01 06:22:10
Summary of LTF counts prior to reset:
                                UNIT 0          UNIT 1
DIAGLIST
AB DIAG                        1              1
-----
CARDLIST
NT6X44                        1              1
NT6X41                        0              1
NT6X43                        0              2
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO XPM Diagnostic History	Constant	Indicates the history of diagnostic failures on a PM.
pmid	Alphanumeric	Identifies the PM involved.
Reset LTF counts or STF counts	Constant	Indicates the LTF or STF counters are reset to zero.
LTF last reset or STF last reset	Integers	Indicates the date and time of the last LTF or STF reset (yy/mm/dd hh:mm:ss).
Summary of LTF or STF counts before reset	Constant	Indicates the information that follows is the summary of LTF or STF counts from before the reset.
UNIT 0	Constant	Indicates the information that follows is for Unit 0.
UNIT 1	Constant	Indicates the information that follows is for Unit 1.
UNIT X	Integer	Indicates the unit number (0 or 1) that has generated the PM601 log after a warm SwAct.

(Sheet 2 of 2)

Field	Value	Description
DIAGLIST	Symbolic text, Integers	Indicates the list of failed diagnostics on the XPM and the number of failures on each unit.
CARDLIST	Alphanumeric, Integers	Indicates the list of cards that the system reports as defective during a diagnostic failure. Also indicates the number of failures that the LTF or STF counters record for the unit indicated.

Action

Save this report. The Technical Assistance Service (TAS) and field support personnel use this report in the event of a later outage.

Associated OM registers

There are no associated OM registers.

PM700

Explanation

The peripheral module (PM) subsystem generates report PM700. The subsystem generates PM700 to record the start time, finish time, and abort time of PM upgrade shifts.

Format

The log report format for PM700 is as follows:

```
PM700 mmmdd hh:mm:ss ssdd INFO PM Upgrade  
<status>
```

Example

An example of log report PM700 follows:

```
PM700 SEP05 18:14:33 4827 INFO PM Upgrade  
SHIFT STARTED
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
status	SHIFT STARTED SHIFT FINISHED SHIFT ABORTED	Indicates start, finish, or abort of PM upgrade shift

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PM701**Explanation**

The peripheral module (PM) subsystem generates report PM701. The subsystem generates PM701 to record the time of the start of a PM upgrade task. The PM701 displays the nodes to upgrade and the name of the load used in the upgrade task.

Format

The log report format for PM701 is as follows:

```
PM701 mmmdd hh:mm:ss ssdd INFO PM Upgrade
TASK:      <id>      Report <cur_report> of <max_report>
AUTOMATED:<automation_flag>
STATUS:    <status>
NODES:     <node_name>
LOADS:     <load_name>
```

Example

An example of log report PM701 follows:

```
PM701 SEP05 18:14:33 4827 INFO PM Upgrade
TASK:      5              Report  1 of 1
AUTOMATED: YES
STATUS:    STARTED
NODES:     LCM REM4  1  0
LOADS:     LCM08AH
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
id	integer	Identifies the PM upgrade task
cur_report	integer	Indicates the number of the log report associated with the start of a task
max_report	integer	Indicates the total number of log reports associated with the start of a task
automation_flag	YES NO	Indicates if the task is automated

PM701 (end)

(Sheet 2 of 2)

Field	Value	Description
status	STARTED REQUESTED	Indicates if the task starts automatic execution or if a manual upgrade has been requested.
node_name	text string of the format node_type site node_id	Indicates the type of node, the site of the node, and the number of the node. Site is an optional value. The PEC indicates the MS multi-port card.
load_name	text string	Indicates the name of the new load associated with the task.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PM702

Explanation

The peripheral module (PM) generates report PM702. The PM702 records the time of the successful completion of a task.

Format

The log report format for PM702 is as follows:

```
PM702 mmmdd hh:mm:ss ssdd INFO PM Upgrade
TASK:    <id>
STATUS:  <status>
```

Example

An example of log report PM702 follows:

```
PM702 SEP05 18:14:33 4827 INFO PM Upgrade
TASK:      5
STATUS:    PASSED
```

Field descriptions

The following table describes field in the log report:

Field	Value	Description
id	integer	Indicates the PM upgrade task
status	PASSED (WITH WARNING)	PASSED Indicates the status of completed task

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PM703

Explanation

The peripheral module (PM) generates report PM703. The PM703 records the time that an automated PM upgrade task failed. The PM703 also records the completion or failure of each node that the system upgrades during the task.

Format

The log report format for PM703 is as follows:

```
PM703 mmmdd hh:mm:ss ssdd INFO PM Upgrade
TASK:      <id>      Report <cur_report> of <max_report>
AUTOMATED:<automation_flag>
STATUS:    <status>
NODES:     <node_name>
LOADS:     <load_name>
PATCHES FOR<load_name>:
            <patch_name>
```

Example

An example of log report PM703 follows:

```
PM703 SEP05 18:14:33 4827 INFO PM Upgrade
TASK:      5              Report  1 of 1
AUTOMATED: YES
STATUS:    FAILED
NODES:     LGC 0:  FAILED,
            LGC 1:  PASSED
LOADS:     ECL05BC, MX77NB03, CMR03A
PATCHES FOR ECL05BC:
            MMI45BX8      MMI47XB8
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
id	integer	Indicates the PM upgrade task
cur_report	integer	Indicates the number of this log report associated with the start of a task

PM703 (end)

(Sheet 2 of 2)

Field	Value	Description
max_report	integer	Indicates the total number of log reports associated with the start of a task
automation_flag	YES NO	Indicates if the task is automated
status	FAILED (INTERNAL SYSTEM ERROR) ABORTED ATTEMPTED SUPPORTED RETURN CODE FAILED NOT NOT UNKNOWN	Indicates the status of the task that is not successful
node_name	text string of the format node_type site node_id	Indicates the type of node, the site of the node, and the number of the node. Site is an optional value.
load_name	text string	Indicates the name of the load associated with the task
patch_name	text string	Indicates the patches associated with each load in the task. The patch heading is not displayed when the task does not have patches.

Action

If the upgrade task fails, examine the nodes that failed. The nodes can have a maintenance problem that does not relate to the PM upgrade. Troubleshoot the problem or contact the next level of support.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PM777

Explanation

The peripheral module (PM) subsystem generates report PM777 when the software detects a hardware defect. The PM777 indicates the source of the hardware defect.

Format

The log report format for PM777 is as follows:

```
PM777 mmmdd hh:mm:ss ssdd INFO SUSPECTED H/W FAULT pmid
unit no.
PP TIME: hh:mm:sshs
ERROR STATE: xxxxxxxxxxxxxxxxxxxx
SUSPECTED CARD(S):
SITE FLR RPOS BAY ID SHF DESCRIPTION SLOT EQPEC
host fl# row# bay id sh# frame# slot# cardid
DATA: xx xx xx xx xx xx xx
```

Example

An example of log report PM777 follows:

Example 1

```
PM777 MAY21 12:39:25 3200 INFO SUSPECTED H/W FAULT RTPK
LTC 0
UNIT NO: 00
PP TIME: 00:32:33.01
Error State: audtfail
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Eqpec
HOST 00 L14 LTE 00 18 LTC: 000 18 6X69
DATA: 01 18 84 00 01 00 00 55 50 FF FF FF FF FF FF FF
```

(Sheet 1 of 2)

Data byte #	Reason
0	number of error logs
1	error reason (qualifier) of diagnostics
2	diagnostic identifier

PM777 (continued)

(Sheet 2 of 2)

Data byte #	Reason
3-4	location msw
5-6	location lsw
7	accurate value
8	expected value
9	number of error logs
10	error reason (qualifier) of diagnostics
11	diagnostic identifier
12-13	location msw
14-15	location lsw

Example 2

```
PM777 MAY21 13:29:00 3265 INFO SUSPECTED H/W FAULT RTPK
  LTC 0
  UNIT NO: 00
  PP TIME: 00:11:16.12
  Error State: SPURIOUS L1 INT
  Suspected cards:
  Site Flr RPos Bay_id Shf Description Slot Espec
  HOST 00 L14 LTE 00 18 LTC: 000 18 6X69
  DATA: 01 18 84 00 01 00 00 55 50 FF FF FF FF FF FF FF
```

Example 3

```
PM777 APR18 14:31:16 2312 INFO SUSPECTED H/W FAULT RTPK
  LTC 1
  UNIT NO: 01
  PP TIME: 00:51:31.16
  Error State: MsgCdFailedReset
  Suspected cards:
  Site Flr RPos Bay_id Shf Description Slot Espec
  HOST 00 L14 LTE 00 32 LTC: 000 18 6X69
  DATA: 0C FF FF FF FF FF FF FF FF FF FF
```

Example 4

PM777 (continued)

```
PM777 APR19 12:29:22 4544 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:11:21.32
Error State: 6X69hndshkfailed
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 DTE 00 32 LTC: 000 18 6X69
```

Example 5

```
PM777 APR19 12:29:45 4563 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:11:21.55
Error State: 6X69hndshkfail2
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 DTE 00 32 LTC: 000 18 6X69
```

Example 6

```
PM777 APR19 12:32:16 4112 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:01:11.00
Error State: 6X69NoOpcdeArea
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 LTE 00 32 LTC: 000 18 6X69
DATA: 14 02 00 02 01 FF FF FF FF FF FF FF FF
```

(Sheet 1 of 2)

Data byte #	Reason
0	opcode
1	msb of first TIMESLOT
2	lsb of first TIMESLOT

PM777 (continued)

(Sheet 2 of 2)

Data byte #	Reason
3	number of TIMESLOTS - 1
4	increment between TIMESLOTS

Example 7

```

PM777 APR19 12:32:26 4132 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:01:21.00
Error State: 6X69NoResTo0pcde
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 LTE 00 32 LTC: 000 18 6X69
DATA: 14 02 00 02 01 FF FF FF FF FF FF FF FF

```

Data byte #	Reason
0	opcode
1	msb of first TIMESLOT
2	lsb of first TIMESLOT
3	number of TIMESLOTS - 1
4	increment between TIMESLOTS

Example 8

PM777 (continued)

```
PM777 APR20 08:45:16 1089 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:13:09.52
Error State: SpeechBusNoResp
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 LTE 00 32 LTC: 000 18 6X69
DATA: 12 02 00 04 01 FF FF FF FF FF FF FF FF
```

Data byte #	Reason
0	opcode
1	msb of first TIMESLOT
2	lsb of first TIMESLOT
3	number of TIMESLOTS - 1
4	increment between TIMESLOTS

Example 9

```
PM777 APR18 12:59:35 1300 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:01:31.16
Error State: Insame 6X69
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 LTE 00 32 LTC: 000 18 6X69
DATA: F0 AA 0F 00 00 00 00 00 21 4B EE 00 21 4B F8
```

PM777 (continued)

Data byte #	Reason
0	PP sync desired
1	PP sync desired
2	SP sync desired
3	SP sync actual

Example 10

```

PM777 APR18 14:21:02 1653 INFO SUSPECTED H/W FAULT RTPK
  LTC 0
  UNIT NO: 01
  PP TIME: 00:55:41.30
  Error State: nd_xfr_tmo
  Suspected cards:
  Site Flr RPos Bay_id Shf Description Slot Espec
  HOST 00 L15 LTE 00 32 LTC: 000 18 6X69
  DATA: 00 02 03 FF FF FF FF FF FF FF FF FF FF FF FF

```

Data byte #	Reason
0	intermodule communications working (false = 0 / true= 1)
1	ordinal value of link state
2	number of transfer attempts

Example 11

PM777 (continued)

```
PM777 APR19 13:13:21 1414 INFO SUSPECTED H/W FAULT RTPK
LTC 0
UNIT NO: 01
PP TIME: 01:32:18.12
Error State: XLA_FLD
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 LTE 00 32 LTC: 000 18 6X69
DATA: 03 FF FF FF FF FF FF FF FF FF FF FF FF FF
```

Data byte #	Reason
0	number of transfer attempts

Example 12

```
PM777 MAY22 13:39:22 6500 INFO SUSPECTED H/W FAULT RTPK
LTC 0
UNIT NO: 01
PP TIME: 01:41:16.28
Error State: BadCdNoUnderTest
Suspected cards: ARE UNDETERMINED
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 LTE 00 32 LTC: 000 18 6X69
DATA: 05 FF FF FF FF FF FF FF FF FF FF FF FF FF
```

Data byte #	Reason
0	card under test

Example 13

PM777 (continued)

```

PM777 APR22 09:58:44 0600 INFO SUSPECTED H/W FAULT RTPK
  LTC 0
  UNIT NO: 00
  PP TIME: 00:03:18.18
  Error State: MEMORY PARITY
  Suspected cards: ARE UNDETERMINED
  Site Flr RPos Bay_id Shf Description Slot Espec
  HOST 00 L15 LTE 00 32 LTC: 000 18 6X69
  DATA: 00 02 00 00 00 09 B2 54 00 00 2B 60 00 10 00 1E

```

Data byte #	Reason
0	defect type
1	procedure identifier
2-3	last address msw
4-5	last address lsw

Example 14

```

PM777 APR23 09:23:21 1213 INFO SUSPECTED H/W FAULT RTPK
  LTC 0
  UNIT NO: 01
  PP TIME: 02:32:18.12
  Error State: card/date wrong
  Suspected cards:
  Site Flr RPos Bay_id Shf Description Slot Espec
  HOST 00 L15 LTE 00 32 LTC: 000 19 6X79
  DATA: 00 02 00 00 00 09 B2 54 00 00 2B 60 00 10 00 1E

```

Example 15

```

PM777 MAY21 12:32:54 3241 INFO SUSPECTED H/W FAULT RTPK
  DTC 0
  UNIT NO: 01
  PP TIME: 09:42:12.21
  Error State: STR INSV FAILED
  Suspected cards: ARE UNDETERMINED
  DATA: 05 01 02 05 05 FF FF FF FF FF FF FF FF FF

```

PM777 (continued)

Data byte #	Reason
0	length of data that follows this byte
1	report code from special tone receiver (STR)
2	test result or signal set
3	internal node (valid for digit reports only)
4-5	internal terminal (valid for digit reports only)

Example 16

```
PM777 MAY21 12:01:22 1023 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 12:32:11.43
Error State: STR-RESET FAILED
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 DTE 00 32 DTC: 000 16 6X62
DATA: 00 02 00 12 11 FF FF FF FF FF FF FF FF FF
```

Data byte #	Reason
0	status 1
1	status 2
2	status 3
3	tp revision firmware level
4	dsp revision firmware level

Example 17

PM777 (continued)

```

PM777 MAY20 09:01:22 2015 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:46:10.19
Error State: STR DidNotReset
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 DTE 00 32 DTC: 000 16 6X62
DATA: 02 02 FF FF FF FF FF FF FF FF FF FF FF FF

```

Data byte #	Reason
0	action code
1	length of message

Example 18

```

PM777 MAY20 10:23:41 1754 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:46:10.19
Error State: INSV FAIL-NO STR
Suspected cards: ARE UNDETERMINED
DATA: 01 00 01 10 00 00 00 00 00 00 FF FF FF FF FF FF FF

```

(Sheet 1 of 2)

Data byte #	Reason
0	UTR card present
1-2	number of UTR cards present
3	STR card present (bool)
3	spare slot at STR installation (0..5)
3	BBF entered (bool)
3	DTRE entered (bool)

PM777 (continued)

(Sheet 2 of 2)

Data byte #	Reason
3	STR scans speech bus (bool)
3	STR scans for N5 signals (bool)
5-6	STR LP firmware revision
7-8	STR DSP firmware revision

Example 19

```
PM777 MAY20 09:01:22 2015 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:46:10.19
Error State: STR NOT RESET
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 DTE 00 32 DTC: 000 16 6X62
DATA: 01 02 FF FF FF FF FF FF FF FF FF FF FF FF
```

Data byte #	Reason
0	action code
1	length of message

Example 20

```
PM777 MAY20 10:12:34 2225 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:46:10.19
Error State: STR INSANE
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 DTE 00 32 DTC: 000 16 6X62
```

Example 21

PM777 (continued)

```

PM777 MAY20 10:12:34 2225 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:46:10.19
Error State: STR INIT FAIL
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 DTE 00 32 DTC: 000 16 6X62

```

Example 22

```

PM777 MAY20 12:33:34 2654 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:02:12.11
Error State: STR-FAIL SANITY
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 DTE 00 32 DTC: 000 16 6X62
DATA: 00 02 FF FF FF FF FF FF FF FF FF FF FF FF

```

Data byte #	Reason
0	fail/pass sanity
1	status of STR

Example 23

```

PM777 MAY20 13:01:22 4435 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:00:12.39
Error State: AUDIT-NO STR CD
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 DTE 00 32 DTC: 000 16 6X62

```

Example 24

PM777 (continued)

```
PM777 MAY20 12:33:43 2654 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:12:22.11
Error State: STR REMOVED
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 DTE 00 32 DTC: 000 16 6X62
DATA: 00 00 00 11 00 00 00 00 FF FF FF FF FF FF FF
```

Data byte #	Reason
0	UTR card present
1-2	number of UTR cards present
3	STR card present (bool)
3	spare slot where STR installed (0..5)
3	BBF entered (bool)
3	DTRE entered (bool)
3	STR scans speech bus (bool)
3	STR scans for N5 signals (bool)
5-6	STR LP firmware revision
7-8	STR DSP firmware revision

Example 25

```
PM777 MAY21 13:01:22 4435 INFO SUSPECTED H/W FAULT RTPK
DTC 0
UNIT NO: 01
PP TIME: 00:01:12.39
Error State: NO STR HARDWARE
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 DTE 00 32 DTC: 000 16 6X62
```

Example 26

PM777 (continued)

```
PM777 MAY22 12:13:35 3452 INFO SUSPECTED H/W FAULT RTPK
  LTC 0
  UNIT NO: 01
  PP TIME: 00:36:31.01
  Error State: Unknown UTR addr
  Suspected cards: ARE UNDETERMINED
```

Example 27

```
PM777 MAY22 15:22:35 3452 INFO SUSPECTED H/W FAULT RTPK
  LTC 0
  UNIT NO: 01
  PP TIME: 09:36:31.01
  Error State: Too Many UTRs
  Suspected cards: ARE UNDETERMINED
```

Example 28

```
PM777 APR19 12:32:26 4132 INFO SUSPECTED H/W FAULT RTPK
  LTC 0
  UNIT NO: 00
  PP TIME: 00:01:21.00
  Error State: UTR0 Bad Status
  Suspected cards:
  Site Flr RPos Bay_id Shf Description Slot Espec
  HOST 00 L15 LTE 00 18 LTC: 000 16 6X92
  DATA: 02 FF FF FF FF FF FF FF FF FF FF FF FF FF FF
```

Data byte #	Reason
0	status

Example 29

PM777 (continued)

```
PM777 APR19 12:55:43 4954 INFO SUSPECTED H/W FAULT RTPK
LTC 0
UNIT NO: 01
PP TIME: 00:11:42.12
Error State: UTR1 Bad Status
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 LTE 00 32 LTC: 000 17 6X92
DATA: 02 FF FF FF FF FF FF FF FF FF FF FF FF FF FF
```

Data byte #	Reason
0	status

Example 30

```
PM777 APR19 13:35:33 4344 INFO SUSPECTED H/W FAULT RTPK
LTC 0
UNIT NO: 01
PP TIME: 00:11:42.12
Error State: UTR Sanity Error
Suspected cards:
Site Flr RPos Bay_id Shf Description Slot Espec
HOST 00 L15 LTE 00 32 LTC: 000 17 6X92
DATA: 01 FF FF FF FF FF FF FF FF FF FF FF FF FF FF
```

Data byte #	Reason
0	status

Example 31

PM777 (continued)

PM777 APR19 13:54:22 4555 INFO SUSPECTED H/W FAULT RTPK
 LTC 0
 UNIT NO: 01
 PP TIME: 00:11:42.12
 Error State: UtrCardNotPresent
 Suspected cards: ARE UNDETERMINED
 DATA: 01 FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF

Data byte #	Reason
0	entered UTR spare slot number

Example 32

PM777 APR19 14:02:19 4687 INFO SUSPECTED H/W FAULT RTPK
 LTC 0
 UNIT NO: 01
 PP TIME: 00:25:11.29
 Error State: UtrInSpareSlot4
 Suspected cards: ARE UNDETERMINED
 DATA: 16 FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF

Data byte #	Reason
0	card type in spare slot 4

Example 33

PM777 MAY22 12:33:35 4452 INFO SUSPECTED H/W FAULT RTPK
 LTC 0
 UNIT NO: 01
 PP TIME: 00:43:31.01
 Error State: Socote1NoSupprtd
 Suspected cards: ARE UNDETERMINED

Example 34

PM777 (continued)

```
PM777 MAY22 12:35:25 4352 INFO SUSPECTED H/W FAULT RTPK
  LTC 0
  UNIT NO: 01
  PP TIME: 00:21:31.01
  Error State: MfcSugNotSupprtd
  Suspected cards: ARE UNDETERMINED
```

Example 35

```
PM777 MAY23 10:11:43 2322 INFO SUSPECTED H/W FAULT RTPK
  DTC 0
  UNIT NO: 00
  PP TIME: 00:21:31.01
  Error State: Wrong Pside Card
  Suspected cards:
  Site Flr RPos Bay_id Shf Description  Slot Espec
  HOST 00  L14  DTE 00 18  DTC: 000      05  6X50
  DATA: 00 00 FF FF FF FF FF FF FF FF FF FF FF FF FF FF
```

Data byte #	Reason
0-1	port number (ds1)

Example 36

```
PM777 MAY23 11:00:54 2335 INFO SUSPECTED H/W FAULT RTPK
  DTC 0
  UNIT NO: 00
  PP TIME: 00:11:43.21
  Error State: Wrong Pside Card
  Suspected cards:
  Site Flr RPos Bay_id Shf Description  Slot Espec
  HOST 00  L14  DTE 00 18  DTC: 000      05  6X50
  DATA: 00 00 FF FF FF FF FF FF FF FF FF FF FF FF FF FF
```

Data byte #	Reason
0-1	port number (ds0)

PM777 (end)

Example 37

```

PM777 APR30 11:53:39 6637 INFO
SUSPECTED H/W FAULT
    LTC 2
    UNIT NO : 00
PP Time: 00:04:55.56
Error State : C-SIDE FAULT
Suspected Cards :
Site Flr RPos Bay_id Shf Description Slot EqPEC
HOST 01 C00 DTE 00 51 LTC : 002 22 6X40
HOST 01 C00 DTE 00 51 LTC : 002 21 6X41
DATA : 00 01 00 00 00 12 07 FE 00 00 AF C2 00 10 00 1E

```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO SUSPECTED H/W FAULT	Symbolic text	Indicates the PM with the suspected hardware defect.
unit no.	Integers	Indicates the unit number.
PP TIME	Integers	Indicates the time of the defect.
ERROR STATE	Symbolic text	Indicates the error state.
SUSPECTED CARD(S)	Numeric	Indicates the suspect cards.
DATA	Alphanumeric	Indicates more information about the defect.

Action

Follow standard maintenance procedures.

Associated OM registers

There are no associated OM registers.

PM800

Explanation

The Problem Manager generates log report PM800. The Program Manager generates this report when the count of incoming PM180 reports for a unit reaches 5 and 15 within one hour.

The PM subsystem generates report PM180 when it encounters a software exception. A software exception is an occurrence of bad software execution. The system also generates log report PM180 because of a software exception that is hardware related.

Format

The log report format for PM800 is as follows:

```
PM800 mmmdd hh:mm:ss ssdd THR PM Exception Report
  Location: <pmid> <unit_no>
  Problem id: <probid>
  Event: <rsntxt>
  Initial event time: <initime>
  Event count: <num_events>
```

Example

An example of log report PM800 follows:

```
PM800 MAY26 14:56:12 5400 THR PM Exception Report
  Location: RCCI 2 0
  Problem id: 7112
  Event: PM software exception count
  Initial event time: 13:50:00
  Event count: 5
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
THR PM Exception Report	Constant	Indicates that the number of logs that concern a PM exception report exceeds the threshold level.
pmid	Refer to Table I	Indicates the PM that generates this report.

(Sheet 2 of 2)

Field	Value	Description
unit_no	0 or 1	Indicates the PM unit that generates this report.
probid	nnnnnn	Provides the problem number. Use this number to associate the logs that relate to the same problem. The Problem Viewer also displays the number.
rsntxt	PM software exception count	Indicates the purpose for the generation this log report.
initime	hh:mm:ss	Provides the time of the first event.
num_events	n,nnnnnnnn	Provides the number of observed events.

Action

Inspect the XMS-based peripheral module (XPM) to identify faults. If log a hardware problem is present, perform diagnostic and maintenance procedures on the suspect equipment.

If report PM180 indicates a XPM software error or software problem, the system can require a software reload.

Associated OM registers

There are no associated OM registers.

POOL300

Explanation

The Pool manager generates trouble report POOL300. The manager generates the report when the number of free vast areas the server owns are at 30% of server memory. The report indicates when the available free resources begin to run low.

The system raises a minor alarm when the Pool manager generates Trouble report POOL300.

Format

The log report format for POOL300 is as follows:

LOCATION LOG_NUMBER TIMESTAMP TITLE

Example

An example of log report POOL300 follows:

```
*POOL300 JUL10 12:49:00 7500 TBL Server at 70% Usage
```

Field descriptions

There are no fields in the log body of POOL 300.

Action

Report this log to Northern Telecom personnel to examine the memory provisioning guidelines for this switch.

Verify DYNAMIC_MEMORY_SIZE OFCENG parameter is correctly set. You may have to increase this parameter based on the provisioning rules.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

POOL301

Explanation

The Pool manager generates trouble report POOL301. The manager generates the report when the number of free vast areas the server owns are at 20% of server memory. The report POOL301 indicates that the available free resources are running low.

The system raises a major alarm when the Pool manager generates trouble report POOL301.

Format

The log report format for POOL301 is as follows:

LOCATION LOG_NUMBER TIMESTAMP TITLE

Example

An example of log report POOL301 follows:

```
**POOL301 JUL10 12:50:18 7700 TBL Server at 80% Usage
```

Field descriptions

The log body of trouble report POOL 301 does not have fields.

Action

Report this log to Northern Telecom personnel. Northern Telecom personnel will examine memory provisioning guidelines for this switch.

Verify DYNAMIC_MEMORY_SIZE OFCENG parameter is correctly set. The provisioning rules determine if you have to increase this parameter.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

POOL302

Explanation

The Pool manager issues trouble report POOL302 when the free vast areas that the server owns are at 10% of server memory. Report POOL302 indicates that available free resources are critically low.

The system raises a critical alarm when the Pool manager generates trouble report POOL302.

Format

The log report format for POOL302 is as follows:

LOCATION LOG_NUMBER TIMESTAMP TITLE

Example

An example of log report POOL302 follows:

```
***POOL302 JUL10 12:51:10 7900 TBL Server at 90% Usage
```

Field descriptions

The log body of trouble report POOL302 does not have any fields.

Action

Report POOL302 to Northern Telecom personnel. Northern Telecom personnel will examine the memory provisioning guidelines for this switch.

Make sure the DYNAMIC_MEMORY_SIZE OFCENG parameter is correct. The provisioning rules will determine if you have to increase this parameter.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

POOL310

Explanation

The system limits each pool that the CPPOOLMGR utility manages to a percentage of server memory. The server limit is 50% of server memory for CCBLOCKS and 30% server memory for other pools. The CPPOOLMGR utility generates trouble report POOL310 when the amount of memory that a pool uses reaches 70% of the server limit.

The system raises a minor alarm when the CPPOOLMGR utility generates trouble report POOL310.

Format

The log report format for POOL310 is as follows:

```
LOCATION LOG_NUMBER TIMESTAMP TITLE
POOL_NAME:
POOL_TYPE:
```

Example

An example of log report POOL310 follows:

```
*POOL310 JUL10 14:02:34 3300 TBL Pool at 70% CPPOOLMGR Limit
  POOL NAME: FTRQAGENTS
  POOL TYPE: FTRQAGENTS
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
POOL_NAME	character string	Name of the pool that begins to use too much memory
POOL TYPE	EXTBLOCK, FTRQAGENT, FTRQAREA, FTRQPERM, GSFBLOCK, CCBLOCK	Type of pool that begins to use too much memory

POOL310 (end)

Action

Report POOL310 to Northern Telecom personnel. Northern Telecom personnel will examine the memory provisioning guidelines for this switch.

Make sure DYNAMIC_MEMORY_SIZE OFCENG parameter is correctly set. The provisioning rules will determine if you have to increase this parameter.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

POOL311

Explanation

The system limits each pool that the CPPOOLMGR utility manages to a percentage of server memory. The server limit is 50% of server memory for CCBLOCKS and 30% server memory for other pools. The CPPOOLMGR utility generates trouble report POOL311 when the amount of memory that a pool uses reaches 80% of the server limit.

The system raises a major alarm when the CPPOOLMGR generates trouble report POOL311.

Format

The log report format for POOL311 is as follows:

```
LOCATION LOG_NUMBER TIMESTAMP TITLE
POOL_NAME:
POOL_TYPE:
```

Example

An example of log report POOL311 follows:

```
**POOL311 JUL10 14:04:46 2800 TBL Pool at 80% CPPOOLMGR
Limit
POOL NAME:  FTRQAGENTS
POOL TYPE:  FTRQAGENT
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
POOL_NAME	character string	Name of the pool that begins to use too much memory
POOL TYPE	EXTBLOCK, FTRQAGENT, FTRQAREA, FTRQPERM, GSFBLOCK, CCBBLOCK	Type of pool that that begins to use too much memory

POOL311 (end)

Action

Report POOL311 to Northern Telecom personnel. Northern Telecom personnel will examine the memory provisioning guidelines for this switch.

Make sure the DYNAMIC_MEMORY_SIZE OFCENG parameter is correctly set. The provisioning rules determine if you have to increase this parameter.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

POOL312

Explanation

The system limits each pool that the CPPOOLMGR utility manages to a percentage of server memory. The server limit is 50% of server memory for CCBLOCKS and 30% server memory for other pools. The CPPOOLMGR utility generates trouble report POOL312 when the pool uses 90% of the server memory limit.

The system raises a critical alarm when the CPPOOLMGR utility generates POOL312.

Format

The log report format for POOL312 is as follows:

```
LOCATION LOG_NUMBER TIMESTAMP TITLE
POOL_NAME:
POOL_TYPE:
```

Example

An example of log report POOL312 follows:

```
***POOL312 JUL10 14:08:39 4100 Pool at 90% CPPOOLMGR Limit
POOL NAME: FTRQAGENTS
POOL TYPE: FTRQAGENT
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
POOL_NAME	character string	Name of the pool that begins to use too much memory
POOL TYPE	EXTBLOCK, FTRQAGENT, FTRQAREA, FTRQPERM, GSFBLOCK, CCBLOCK	Type of pool that begins to use too much memory

POOL312 (end)

Action

Report this log to Northern Telecom personnel. Northern Telecom personnel will examine the memory provisioning guidelines for this switch.

Make sure that DYNAMIC_MEMORY_SIZE OFCENG parameter is correctly set. The provisioning rules will determine if you have to increase this parameter.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

POOL320

Explanation

The POOLMGR generates trouble report POOL320 when the pool uses 90% of the maximum memory available.

The system raises a minor alarm when the POOLMGR generates POOL320.

Format

The log report format for POOL320 is as follows:

```
LOCATION LOG_NUMBER TIMESTAMP TITLE
POOL_NAME:
POOL_TYPE:
```

Example

An example of log report POOL320 follows:

```
*POOL320 JUL10 14:09:28 5900 TBL Pool at 90% Absolute Size
POOL NAME: FTRQAGENTS
POOL TYPE: FTRQAGENT
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
POOL_NAME	character string	Name of the pool that begins to use too much memory
POOL TYPE	EXTBLOCK, FTQRAGENT, FTQRAREA, FTQRPERM, GSFBLOCK, CCBBLOCK	Type of pool that begins to use too much memory

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

POOL320 (end)

Additional information

Report POOL 320 to Northern Telecom personnel for examination.

POOL321

Explanation

The Pool Manager (POOLMGR) generates this information report when a pool reaches 100% of the maximum use level.

The system raises a critical alarm when the system generates POOL321.

Format

The log report format for POOL321 is as follows:

```
LOCATION LOG_NUMBER TIMESTAMP TITLE
POOL_NAME:
POOL_TYPE:
```

Example

An example of log report POOL321 follows:

```
***POOL321 JUL10 14:09:28 5900 TBL Pool at 100% Absolute
Size
POOL NAME: FTRQAGENTS
POOL TYPE: FTRQAGENT
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
POOL_NAME	character string	Indicates the name of the pool that uses too much memory
POOL TYPE	EXTBLOCK, FTRQAGENT, FTRQAREA, FTRQPERM, GSFBLOCK, CCBBLOCK	Indicates type of pool that uses too much memory

Action

You must report this condition to Northern Telecom personnel. This log indicates that more resources are not available to users of this pool.

POOL321 (end)

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

POOL600

Explanation

The Pool Manager (POOLMGR) generates this information report when operating company personnel enter the DOWNSIZEPOOL command in the CPPOOLMGR CI. Operating company personnel enter this command to reset the memory use of this pool back to zero.

Format

The log report format for POOL600 is as follows:

```
LOCATION LOG_NUMBER TIMESTAMP TITLE
POOL_NAME:
POOL_TYPE:
```

Example

An example of log report POOL600 follows:

```
**POOL 600 APR17 14:36:17 5200 TBL Pool Manually Downsized
POOL NAME: FTRQ0WPERMS
POOL TYPE: FTQRAGENT
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
POOL_NAME	character string	Name of the pool that uses too much memory
POOL TYPE	EXTBLOCK, FTRQAGENT, FTQRAREA, FTQRPERM. GSFBLOCK, CCBBLOCK	Type of pool that uses too much memory

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

POOL600 (end)

Additional information

There is no additional information.

POOL601

Explanation

The POOLMGR generates information report POOL601 when operating company personnel change the office parameter DYNAMIC_MEMORY_SIZE.

Format

The log report format for POOL601 is as follows:

```
LOCATION LOG_NUMBER TIMESTAMP TITLE  
OLD_SIZE  NEW_SIZE
```

Example

An example of log report POOL601 follows:

```
**POOL 601 APR17 14:36:17 5200 INFO DYNAMIC_MEMORY_SIZE  
Office Parameter Changed  
OLD SIZE: 10MBytes  NEW SIZE: 20MBytes
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
POOL_NAME	character string	Indicates name of the pool that uses too much memory
POOL TYPE	EXTBLOCK, FTRQAGENT, FTQRAREA, FTQRPERM. GSFBLOCK, CCBBLOCK	Indicates type of pool that uses too much memory
OLD SIZE	0-2048 MBytes	Indicates the old size of the DYNAMIC_MEMORY_SIZE parameter
NEW SIZE	0-2048 MBytes	Indicates the new size of the DYNAMIC_MMORY_SIZE parameter

Action

There is no action required.

POOL601 (end)

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PRA200**Explanation**

The Network Primary Rate Access (PRA) Utilities subsystem generates log report PRA20. The subsystem generates PRA200 after each failure to send an originating transaction capability application part (TCAP) message through Table MSGRTE. The Send failure can occur if Table MSGRTE does not contain the route or the route is local.

Format

The log report format for PRA200 is as follows:

```
PRA200 mmmdd hh:mm:ss ssdd INFO TCAP FAC SEND FAILED
      ORG NETID: xxx   DN: nnnnnnnnnnn
      DST NETID: xxx   DN: nnnnnnnnnnn
      PKG TYPE: pkgtyp
      REASON: rsntxt  hhhh hhhh hhhh ... (message contents)
```

Example

An example of log report PRA200 follows:

```
PRA200 MAY11 12:12:14 5800 INFO TCAP FAC SEND FAILED
      ORG NETID: 0      DN: 6137221121
      DST NETID: 0      DN: 6137221123
      PKG TYPE: QUERY_W_PERMISSION
      REASON: NO ROUTE DATAFILLED
      32E2 04C7 0000 0008 2AE8 28E9 01CF D101
      7E02 F203 AA1F 841D 0109 2100 160A 2273
      3211 C0DF 0949 00FA 0A21 7316 1122 DF12
      45C0 0101 007F EBAD CE12 210A 000A 001D
```

Field descriptions

The following table describes each field in the log report.

(Sheet 1 of 2)

Field	Value	Description
INFO TCAP FAC SEND FAILED	Constant	Indicates a report of transaction capabilities application part (TCAP) facility message.
ORG NETID	0-255	Identifies the network identifier of the originating station.
DN	Integers	Identifies the directory number DN of the originating station.

PRA200 (end)

(Sheet 2 of 2)

Field	Value	Description
DST NETID	0-255	Identifies the network identifier of the terminating station.
DN	Integers	Identifies the DN of the terminating station.
PKG TYPE	Symbolic text	Identifies the TCAP package type.
REASON	Character string	Indicates the reason for TCAP failure.
hhhh hhhh...	0000-FFFF	Provides the contents the of the TCAP message.

Action

Refer to the reason that the log report indicates, and performs are one of the following actions:

- ROUTE IS LOCAL—correct the datafill.
- NO ROUTE DATAFILLED—enter the required route in Table MSGRTE.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PRFM200

Explanation

The Performance (PRFM) subsystem generates log report PRFM200 to represent activity data for the following peripheral modules (PM):

- PDTC with master processor (MP) and signaling processor (SP).
- PLGC, PDTC, ILGC, IDTC, ALGC, ADTC and ARCC with MP, SP and facility processor (FP)
- PLGC, PDTC, PRCC, RCCI, SMA and TMS with MP, SP and ISDN signaling processor (ISP)

This log report shows the data for 1 min and the last 15 min.

The UTR and CHNL fields record the mean number of channels in use during the minute. The UTRHIGH and PSIDEHIGH fields record the highest number of channels in use during the minute.

You can start PRFM200 from the PMACT sublevel of the MAP display if the system posts the peripheral.

Format

The log report format for PRFM200 is as follows:

PRFM200 mmmdd hh:mm:ss ssdd INFO PMACT_DATA

pmtxt Unit n : Act

Load Name: nmtxt

MPCP	MPLP	SPCP	SPLP	XPCP	XPLP	ORIG	TERM	UTR	CHNL
1:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nnn	nnn
2:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nnn	nnn
3:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nnn	nnn

Example

An example of log report PRFM200 follows:

PRFM200 (continued)

PRFM200 JAN05 18:20:02 1753 INFO PMACT_DATA

PLGC 1 Unit 0 : Act
Load Name: NPL32AK

MPCP	MPLP	SPCP	SPLP	FPCP	FPLP	ORIG	TERM	UTR	CHNL
1:21%	12%	45%	18%	39%	20%	10	8		
2:24%	20%	42%	20%	31%	21%	8	7		
3:25%	19%	53%	11%	22%	33%	12	15		
4:28%	18%	44%	13%	33%	45%	13	15		
5:23%	21%	55%	21%	24%	39%	0	9		
6:22%	12%	56%	12%	36%	22%	1	3		
7:30%	22%	27%	23%	38%	34%	10	0		
8:23%	13%	58%	24%	20%	36%	8	18		
9:33%	22%	49%	13%	32%	28%	5	20		
10:24%	23%	52%	22%	24%	32%	4	8		
11:23%	14%	34%	33%	33%	23%	8	5		
12:37%	25%	42%	24%	35%	36%	20	0		
13:28%	16%	53%	25%	27%	27%	21	0		
14:39%	37%	44%	16%	39%	38%	5	22	2	5
15:20%	30%	35%	24%	23%	29%	12	18	5	30
SUMMARY	27%	20%	46%	20%	30%	31		9	10
SUMMARY	UTRAVAIL	32	UTRHIGH	10	PSIDEAVAIL	180	PSIDEHIGH	30	

PRFM200 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO PMACT_DATA	Constant	Indicates that PM activity data follows.
pmtxt	PLGC,PDTC,PRCC	Provides the name and number of the PM that the system reports about.
Unit n:	0, 1	Indicates the side of the PM affected.
Act	Constant	Indicates that the system queries the active unit.
Load Name	Symbolic text	Identifies the XPM software load.
UTR	0-64	Identifies the total number of universal tone receiver (UTR) channels used.
CHNL	0-640	Identifies the total number of P-side channels used.
MPCP	0-100	Master processor (MP) call processing occupancy. High priority occupancies and the call processing occupancies provide service.
MPLP	0-100	The MP low priority background. Audits and diagnostics use this field.
SPCP	0-100	Signalling processor (SP) call processing occupancy.
SPLP	0-100	The SP low priority background. Audits and diagnostics use this field.
XPCP	0-100	Facility processor (FP) or ISDN SP (ISP) call processing occupancy. In the log, FPCP replaces XPCP for a PLGC with FP. In the log, ISPCP replaces XPCP for a PLGC, PDTC, or PRCC with ISP.
XPLP	0-100	FP or ISP low priority background are used for audits and diagnostics. In the log, FPLP replaces XPLP for a PLGP with FP. In the log, ISPLP replaces XPLP for a PLGC, PDTC or PRCC with ISP.
ORIG	0-999	Number of originations.

PRFM200 (end)

(Sheet 2 of 2)

Field	Value	Description
TERM	0-999	Terminations. Calls that cause physical or visual ringing. Origination and termination counts help determine the call rate for the peripheral.
SUMMARY	Constant	The summary line is an average of the samples for the last entry in the ten columns from MPCP to CHNL.
SUMMARY	Constant	Indicates that a summary follows.
UTRAVAIL nn	0-64	The summary line UTRAVAIL is the highest number of UTRs available.
UTRHIGH nn	0-64	The summary line UTRHIGH is the highest number of UTRs in use during the sample period.
PSIDEAVAIL nnn	0-640	The summary line PSIDEAVIL is the highest number of P-side channels available to call processing during the sample period.
PSIDEHIGH nnn	0-640	The summary line PSIDEHIGH is the highest number of P-side channels used.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional Information

There is no additional information.

PRFM201**Explanation**

The Performance (PRFM) subsystem generates log report PRFM201 to provide information on call processing delays. Log report PRFM201 starts from the DELAYS sublevel of the MAP display.

The log report PRFM subsystem provides values for the last 15 min period.

Format

The log report format for PRFM201 is as follows:

PRFM201 mmmdd hh:mm:ss ssdd INFO DELAYS_DATA

pmid Unitn : Act

Load Name: nmtxt

		DIALTONE		POST			
		REMOVAL		DIALING		CUTTHROUGH	
DP	DT	DP	DT	DP	DT	ANSWER	SPEECHPATH

AVG nnnms nnnms nnnms nnnms nnnms nnnms nnnms nnnms

50%< nnnms nnnms nnnms nnnms nnnms nnnms nnnms nnnms

95%< nnnms nnnms nnnms nnnms nnnms nnnms nnnms nnnms

Example

An example of log report PRFM201 follows:

PRFM201 SEP23 17:40:44 2883 INFO DELAYS_DATA

LGC 1 Unit 1 : Act

Load Name: NLG24BK

	DIALTONE		DIALTONE		POST			
	REMOVAL				DIALING		CUTTHROUGH	
	DP	DT	DP	DT	DP	DT	ANSWER	SPEECHPATH
AVG	374ms	693ms	69ms	157ms	458ms	1128ms	59ms	131ms
50%<	288ms	480ms	32ms	96ms	416ms	864ms	32ms	288ms
95%<	864ms	1824ms	224ms	352ms	672ms	2656ms	160ms	96ms

PRFM201 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO DELAYS_DATA	Constant	Indicates that data from the DELAYS level of the MAP follows.
pmid	LGC, LTC, DTC, RCC	Provides the name and number of the PM that the system reports about.
Unitn :	0,1	Indicates the side of the PM affected.
Act	Constant	Indicates that the system queries the active unit.
Load Name	Symbolic text	Identifies the XPM software load.
DIALTONE	0-9999 secs	Indicates the delay between the time when PM detects the off hook and the time of the application of dial tone.
DIALTONE REMOVAL		Specifies delay between the time the peripheral detects the first digit, and the IDLE tone application and the dial tone removal.
POST DIALLING		Specifies delay between the time when the last digit dialed, and the application of audible ringing.
CUTTHROUGH		Specifies the combination of answer and speech_path. This field represents the time the system takes to connect speech path from the off hook.
DT	0-9999 secs	Indicates digitone lines or universal tone receiver lines.
DP	0-9999 secs	Indicates digipulse lines or electronic business set lines.
ANSWER	0-9999 secs	Specifies delay between the time the peripheral detects an answer, and the transmission of the off hook to the originating end.

(Sheet 2 of 2)

Field	Value	Description
SPEECHPATH	0-9999 secs	Specifies delay between the time the originating party detects the offhook, and the application of speech path between the two parties.
AVG	0-9999 secs	Specifies the average delay for the category.
50%	0-9999 secs	The 50th percent mark for the category indicates that 50 percent of the delays are less than this value.
95%	0-9999 secs	The 95th percent mark for the category indicates that 95 percent of the delays are less than this value.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PRFM204

Explanation

The Performance (PRFM) subsystem generates log report PRFM204. This report displays PM activity data for a specified PM. The report indicates data for 1 min and a summary from the last 15 min. When the system posts data channel handler (DCH), PRFM204 can start from the ISGACT sublevel of the MAP display.

Format

The log report format for PRFM204 is as follows:

PRFM204 mmmdd hh: mm: ss ssdd INFO ISGACT_DATA

pmtxt n Unit n : Act

Load Name: nmtxt

DCH_LOAD_NAME :nmtxt1 ISG NUMBER :nnn DCH NUMBER :

nnn

CPU	TX	RX	TX	RX	TX	RX	TX	RX
OCCUP	SAPI0	SAPI0	SAPI16	SAPI16	SAPI17/63	SAPI17/63	FRAME	
FRAME								
							ERROR	ERROR
1:nn%	nn	nn	nn	nn	nn	nn	nn	nn
2:nn%	nn	nn	nn	nn	nn	nn	nn	nn
3:nn%	nn	nn	nn	nn	nn	nn	nn	nn
4:nn%	nn	nn	nn	nn	nn	nn	nn	nn
5:nn%	nn	nn	nn	nn	nn	nn	nn	nn
6:nn%	nn	nn	nn	nn	nn	nn	nn	nn
7:nn%	nn	nn	nn	nn	nn	nn	nn	nn
8:nn%	nn	nn	nn	nn	nn	nn	nn	nn
9:nn%	nn	nn	nn	nn	nn	nn	nn	nn
10:nn%	nn	nn	nn	nn	nn	nn	nn	nn
11:nn%	nn	nn	nn	nn	nn	nn	nn	nn
12:nn%	nn	nn	nn	nn	nn	nn	nn	nn
13:nn%	nn	nn	nn	nn	nn	nn	nn	nn
14:nn%	nn	nn	nn	nn	nn	nn	nn	nn
15:nn%	nn	nn	nn	nn	nn	nn	nn	nn
16:nn%	nn	nn	nn	nn	nn	nn	nn	nn
17:nn%	nn	nn	nn	nn	nn	nn	nn	nn
SUMMARY								
nn%	nn	nn	nn	nn	nn	nn	nn	nn

PRFM204 (continued)**Example**

An example of log report PRFM204 follows:

```

PRFM204 JAN05 18:20:02 1753 INFO PMACT_DATA
LTCI 1 Unit 0 : Act
Load Name: LTI29AA
DCH_LOAD_NAME : DCH29AA ISG_NUMBER : 6 DCH_NUMBER : 3
  CPU TX RX TX RX TX RX TX RX
OCCUP SAPI0 SAPI0 SAPI16 SAPI16 SAPI17/63 SAPI17/63 FRAME FRAME
1:21% 3 3 3 3 3 3 3 3
2:24% 23 23 23 23 23 23 23 23
3:25% 14 14 14 14 14 14 14 14
4:28% 4 4 4 4 4 4 4 4
5:25% 12 12 12 12 12 12 12 12
6:22% 11 1 11 11 11 11 11 11
7:30% 15 15 15 15 15 15 15 15
8:23% 12 12 12 12 12 12 12 12
9:33% 15 15 15 15 15 15 15 15
10:24% 16 16 16 16 16 16 16 16
11:23% 5 5 5 5 5 5 5 5
12:23% 8 8 8 8 8 8 8 8
13:28% 12 12 12 12 12 12 12 12
14:39% 14 14 14 14 14 14 14 14
15:20% 17 17 17 17 17 17 1 17
SUMMARY:
27% 11 11 11 11 11 11 11 11

```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO ISGACT_DATA	Constant	Indicates PM activity data follows.
pmid	LGCI LTCI	Provides the name and number of the PM. The system reports on the activity of this PM.
Unit	0 or 1	Indicates the side of the PM affected.
Act	Constant	Indicates the system queried the active unit.
Load Name	Symbolic text	Identifies the LTCI software load.
DCH_LOAD_NAME	Symbolic text	Identifies the DCH software load.

PRFM204 (end)

(Sheet 2 of 2)

Field	Value	Description
ISG NUMBER	0-255	Identifies the ISG.
DCH NUMBER	0-255	Identifies the data channel handler (DCH).
CPU OCCUP	0-100	Indicates the percentage of DCH occupancy.
TX SAPI0	0 -32767	Indicates the number of SAPI0 frames the DCH transmits.
RX SAPI0	0-32767	Indicates the number of SAPI0 frames the DCH receives.
TX SAPI16	0-32767	Indicates the number of SAPI16 frames the DCH transmits.
RX SAPI16	0-32767	Indicates the number of SAPI16 frames the DCH receives.
TX SAPI17/63	0-32767	Indicates the number of SAPI17 and SAPI63 frames the DCH transmits.
RX SAPI17/63	0-32767	Indicates the number of SAPI17 and SAPI63 frames the DCH receives.
TX FRAME ERROR	0-32767	Indicates the total of (SAPI0 + SAPI16 + SAPI17 + SAPI63) error frames the DCH transmits.
RX FRAME ERROR	0-32767	Indicates the total of (SAPI0 + SAPI16 + SAPI17 + SAPI63) error frames the DCH receives.
SUMMARY	Constant	Indicates that a summary follows.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PRFM210**Explanation**

The Performance (PRFM) subsystem generates log report PRFM210. This report displays PM activity data for a PM. The data for 1 min appears on each line. The log is a summary of the last 15 min. If the log stop under 15 min after the last log, PRFM210 summarizes the time after the last log.

When the system posts an LGCI or LTCI, this log can start from the PMACTI sublevel of the MAP terminal.

Format

The log report format for PRFM210 is as follows:

PRFM210 mmmdd hh:mm:ss ssdd INFO PMACT_DATA

pmid: n Unit n : Act

Load Name: nmtxt

MPCP	MPLP	SPCP	SPLP	ISPCP	ISPLP	ORIG	TERM	UTR	CHNI
1:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
2:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
3:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
4:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
5:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
6:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
7:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
8:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
9:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
10:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
11:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
12:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
13:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
14:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
15:nn%	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
SUMMARY	nn%	nn%	nn%	nn%	nn%	nnn	nnn	nn	nnn
SUMMARY UTRAVAIL nn UTRHIGH nn PSIDEAVAIL nnn PSIDEHIGH nnn									

PRFM210 (continued)

Example

An example of log report PRFM210 follows:

PRFM210 JAN05 18:20:02 1753 INFO PMACT_DATA

LGCI 1 Unit 0 : Act

Load Name: LTI27AA

	MPCP	MPLP	SPCP	SPLP	ISPCP	ISPLP	ORIG	TERM	UTR	CHNL
1:	21%	12%	45%	18%	0%	00%	10	8	6	18
2:	24%	20%	42%	20%	0%	00%	8	7	8	14
3:	25%	19%	53%	11%	0%	00%	12	15	10	20
4:	28%	18%	44%	13%	0%	00%	13	15	3	24
5:	23%	21%	55%	21%	0%	00%	0	9	0	9
6:	22%	12%	56%	12%	0%	00%	1	3	0	3-
7:	30%	22%	27%	23%	0%	00%	10	0	6	5-
8:	23%	13%	58%	24%	0%	00%	8	18	4	26
9:	33%	22%	49%	13%	0%	00%	5	20	3	25
10:	24%	23%	52%	22%	0%	00%	4	8	0	12
11:	23%	14%	34%	33%	0%	00%	8	5	1	11
12:	37%	25%	42%	24%	0%	00%	20	0	10	18
13:	28%	16%	53%	25%	0%	00%	21	0	2	22
14:	39%	37%	44%	16%	0%	00%	5	22	2	5
15:	20%	30%	35%	24%	0%	00%	12	18	5	30
SUMMARY	27%	20%	46%	20%	0%	00%	9	10	4	16

PRFM210 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO PMACT_DATA	Constant	Indicates that PM activity data follows.
pmid	LGCI or LTCI	Provides the name and number of the peripheral module that the system reports about.
Unit n	0 or 1	Indicates the affected side of the PM.
Act	Constant	Indicates that the active unit is queried.
Load Name	Symbolic text	Identifies the XPM software load.
MPCP	0-100	Indicates master processor (MP) call processing occupancy.
MPLP	0-100	Indicates MP low priority background. Audits and diagnostics use MP low priority background.
SPCP	0-100	Indicates SP call processing occupancy.
SPLP	0-100	Indicates SP low priority background. Audits and tests use SP low priority background.
ISPLP	0-100	Indicates ISDN pre-processor (ISP) call processing occupancy.
ISPLP	0-100	Indicates ISP low priority background. Audits and tests use ISP low priority background.
ORIG	0-999	Indicates number of originations.
TERM	0-999	Indicates number of terminations. Origination and termination counts help determine the call rate for the peripheral.
UTR	0-64	Indicates the number of universal tone receiver (UTR) channels used.
CHNL	0-640	Indicates the number of P-side channels used.
SUMMARY	Constant	Indicates that a summary follows. The summary line is an average of the samples from MPCP to CHNL in the example.

PRFM210 (end)

(Sheet 2 of 2)

Field	Value	Description
UTRAVAIL	0-64	The summary line UTRAVAIL is the highest number of UTRs available.
UTRHIGH	0-64	The summary line UTRHIGH is the highest number of UTRs used at the same time during the sample period.
PSIDEAVAIL	0-640	The summary line PSIDEAVIL is the highest number of P-side channels available to call processing during the sample period.
PSIDEHIGH	0-640	The summary line PSIDEHIGH is the highest number of P-side channels used at the same time during the sample period.

Action

There is no action required. This log is for information only.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

PRSM300

Explanation

The Post-Release Software Manager (PRSM) subsystem generates the PRSM300 log report. This log report is a trouble log that lists general problems that could affect service.

Format

The format for log report PRSM300 follows:

```
PRSM300 mmmdd hh:mm:ss ssdd TBL General Trouble
User Class: <user>      User Identity <user_id>
<problem_txt>
```

Example

An example of log report PRSM300 follows:

```
PRSM300 APR18 13:46:58 0800 TBL General Trouble
User Class: CI_USER      User Identity: TEAM20
ERROR: Could not create disconnected user to
execute CI commands for PRSUs.
PRSM user is OPERATOR.
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
TBL General Trouble	Constant	Indicates a general problem
User Class: <user>	Any valid PRSM user	The PRSM user type of the user
User Identity: <user_id>	Any valid userid	The name of the user
<problem_txt>	Up to five lines of text	The general problem that could affect service

Action

Follow office policy. Correct the problem or contact the next level of support.

Associated OM registers

None

1-712 Log reports

PRSM300 (end)

Additional information

None

PRSM301

Explanation

The Post-Release Software Manager (PRSM) subsystem generates the PRSM301 log report. This log report is a trouble log that lists failures when the switch locates or reads post-release software update (PRSU) files.

Format

The format for log report PRSM301 follows:

```
PRSM301 mmmdd hh:mm:ss ssdd TBL PRSM File Failure
<failure_txt>
```

Example

An example of log report PRSM301 follows:

```
PRSM301 APR27 12:04:16 1800 TBL PRSM File Failure
Corrupt PRSU file with the reason of 601.
PRSU:    ABC05CB5
File:    ABC05CB5$PATCH
Device:  S00DTEST
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
TBL PRSM File Failure	Constant	Indicates a PRSM file failure
<failure_txt>	Up to five lines of text	The failure the switch encountered when it located or read the PRSU file

Action

Refer to “PRSM301 log reason interpretation” in the *Post-Release Software Manager Reference Guide*, 297-8991-540, for a list of reasons, explanations, and actions for PRSM301.

Associated OM registers

None

Additional information

None

PRSM302

Explanation

The Post-Release Software Manager (PRSM) subsystem generates the PRSM302 log report. This log report is a trouble log that lists problems related to post-release software update (PRSU) file management. These problems can occur if the switch cannot open, read, manipulate, or manage a PRSU file.

Format

Following are the formats for log report PRSM302:

Format 1

```
PRSM302 mmmdd hh:mm:ss ssdd TBL PRSM File Control Problem
  Command: <command>
  Action: <action>
  Device: <device_id>
  <problem_txt>
```

Format 2

```
PRSM302 mmmdd hh:mm:ss ssdd TBL PRSM File Control Problem
  Command: <command>
  Action: <action>
  PRSU: <prsuid>
  <problem_txt>
```

Format 3

```
PRSM302 mmmdd hh:mm:ss ssdd TBL PRSM File Control Problem
  Command: <command>
  Action: <action>
  Filename: <file_name>
  <problem_txt>
```

Example

Following are examples of log report PRSM302:

Example 1

PRSM302 (continued)

```

1.PRSM302 MAY01 10:27:23 7700 TBL  PRSM File Control
Problem
2. Command: prsu file search
3. Action: scan all files
4. Device:SFDEV
5. Device error
6. *** There may be other logs, please check. ***

```

Example 2

```

1.PRSM302 MAY02 15:42:39 3400 TBL  PRSM File Control
Problem
2. Command: VALIDATE
3. Action: get file information
4. PRSU:GNA07CB9
5. Illegal file system operation requested
6. *** There may be other logs, please check. ***

```

Example 3

```

1.PRSM302 JAN08 00:01:34 9400 TBL  PRSM File Control
Problem
2. Command: prsu file compare
3. Action: close a file
4. Filename: JED31BB9$PATCH
5. File not open
6. *** There may be other logs, please check. ***

```

Field descriptions

The following table explains each of the fields in the log report:

(Sheet 1 of 2)

Field	Value	Description
TBL PRSM File Control Problem	Constant	Indicates a PRSM file control problem
Command: <command>	Any PRSM command	The PRSM command that detected the problem
Action: <action>	Any PRSM action	The PRSM action performed by the command
Device: <device_id>	Any device id	The name of the device with the file with the problem

PRSM302 (end)

(Sheet 2 of 2)

Field	Value	Description
PRSU: <prsuid>	Any valid prsuid	The name of the PRSU with the problem
Filename: <file_name>	Any file name	The name of the file with the problem
<problem_txt>	Text string	The file management problem

Action

Follow office policy. Troubleshoot the problem or contact the next level of support.

Associated OM registers

None

Additional information

None

PRSM360

Explanation

The Post-Release Software Manager (PRSM) subsystem generates the PRSM360 log report. This log report is a trouble log that indicates a problem with the nightly PRSM File Audit. The following problems can cause this log.

- The PRSM File Audit aborts.
- The PRSM File Audit detects a missing XPM post-release software update (PRSU) file.
- The PRSM File Audit finds more than one unequal \$PATCH file for a PRSU.

The log lists the ids of up to 10 PRSUs. If the switch detects a missing PRSU file, the log lists the last device where the PRSU was found. If the switch finds multiple unequal \$PATCH files, the log lists all devices associated with the file.

Format

The format for log report PRSM360 follows:

PRSM360 mmmdd hh:mm:ss ssdd TBL File Audit Failure

Files Not Found

Last device

<file_id>

<device_id>

Unequal Files

Devices

<file_id>

<device_id>>

Example

An example of log report PRSM360 follows:

PRSM360 FEB12 23:09:17 2000 TBL File Audit Failure

Files Not Found Last device

(no missing XPM PRSU files)

Unequal Files

Devices

BAL00BB8\$PATCH

SFDEV

S00DSCRATCH

PRSM360 (end)

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
TBL File Audit Failure	Constant	Indicates a file audit failure
<file_id>	Any file identifier	The name of the missing PRSU file, unequal \$PATCH file
<device_id>	Any device identifier	The name of the device that last contained the missing PRSU file or the device with the unequal \$PATCH file

Action

Follow office policy. Troubleshoot the problem or contact the next level of support.

Associated OM registers

None

Additional information

None

PRSM380

Explanation

The Post-Release Software Manager (PRSM) subsystem generates the PRSM380 log report. This log report is a trouble log that lists problems encountered during the execution of PRSM automated processes. The following situations are examples of possible causes of a PRSM380 log.

- The switch cannot drop sync during an automated process because the switch is already out of sync.
- The switch cannot establish a connection with the PRSM Request Router to execute PRSM maintenance commands.

Format

The format for log report PRSM380 follows:

```
PRSM380 mmmdd hh:mm:ss ssdd TRBL AUTOMATED PROCESS FAILURE
Automated process: <process>
<action>
```

Example

An example of log report PRSM380 follows:

```
PRSM380 OCT1 01:03:17 8900 TRBL AUTOMATED PROCESS FAILURE
Automated Process: AUTOAPP
Process aborted: Switch is out-of-sync.
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
TRBL AUTOMATED PROCESS FAILURE	Constant	Indicates the failure of a PRSM automated process
Automated process: <process>	AUTOAPP, FILE_AUDIT, STATUS_AUDIT	The PRSM automated process that encountered the problem
<action>	Text string	The action of the process and the reason for the action

PRSM380 (end)

Action

Follow office policy. Correct the error condition or contact the next level of support.

Associated OM registers

None

Additional information

None

PRSM381**Explanation**

The Post-Release Software Manager (PRSM) subsystem generates the PRSM 381 log report. This log report is a trouble log that indicates a switch sanity failure based on table AUTOMON. Table AUTOMON lists the number of allowable logs during a log monitoring period before or after a PRSM Autoapply or Autoinstall process. PREMON is the log monitoring period before the process begins. POSTMON is the log monitoring period after the process finishes.

Format

The format for log report PRSM381 follows:

```
PRSM381 mmmdd hh:mm:ss ssdd TBL SWITCH SANITY FAILURE
<failure_txt>
  Log    Allowed    Exceeded    Log    Allowed    Exceeded
  ---    -
  <log>  <al_no>    <ex_no>    <log>  <al_no>    <ex_no>
```

Example

An example of log report PRSM381 follows:

```
PRSM381 OCT1 01:03:17 8900 TRBL SWITCH SANITY FAILURE
Switch Sanity limit exceeded before applying/installing PRSUs.
  Log    Allowed    Exceeded    Log    Allowed    Exceeded
  ---    -
  CM115:    1         4         CM119:   24        40
  SWER:     5         6
```

Field descriptions

The following table explains each of the fields in the log report:

(Sheet 1 of 2)

Field	Value	Description
TBL SWITCH SANITY FAILURE	Constant	Indicates the switch failed sanity
<failure_txt>	Text string	The problem that caused the switch sanity failure
<log>	The name of any log	The log that exceeded the allowed number

PRSM381 (end)

(Sheet 2 of 2)

Field	Value	Description
<al_no>	Numeric	The number of allowed logs
<ex_no>	Numeric	The number of generated logs

Action

Follow office policy. Correct the error condition or contact the next level of support.

Associated OM registers

None

Additional information

None

PRSM400

Explanation

The Post-Release Software Manager (PRSM) subsystem generates the PRSM400 log report. This log report is a service summary log that lists the actions taken in response to the following PRSM commands:

- APPLY
- REMOVE
- VALIDATE
- FREEMEM
- DBAUDIT
- ASSIGN, when used to install increment post-release software updates (PRSU)

The PRSM400 command summary log generates for a Spectrum Peripheral Module (SPM) destination when an SPM loadfile (containing SPM PRSU fixes) is datafilled in table PMLOADS. The PRSM400 summary log is generated for any DBAUDITs performed on any SPM destinations.

Each PRSM400 log report lists up to 15 actions. A single command can create multiple actions and multiple PRSM400 logs. For example, you could apply an XPM PRSU to a DEST set of 30 XPMs. PRSM will perform 30 actions, and the switch will generate two PRSM400 logs.

The switch generates the log after 15 actions or when the user quits PRSM.

Format

The format for log report PRSM400 follows:

PRSM400 mmmdd hh:mm:ss ssdd INFO COMMAND SUMMARY

User-Class: <user> User Identity: <userid>

REASON: <change reason>

PRSU id	Destination (DEST)	Command Method	Pass/ Fail	Time Complete
<prsuid>	<destid>	<command>	<status>	<time>

Example

An example of log report PRSM400 follows:

PRSM400 (continued)

```

PRSM400 DEC11 10:30:58 8200 INFO COMMAND SUMMARY
  User Class: CI_USER           User Identity: OPERATOR
                                Destination  Command  Pass/   Time
                                (DEST)      Method   Fail    Complete
                                -----
                                CAL22CB8     NONE     APPLY   Fail    09:52:32
                                CAL22CB8     NONE     APPLY   Fail    09:53:12
                                BAS07AL      SITE     APPLY   Pass    10:30:16
                                CAL22CB7      CM       VALIDATE Pass    10:30:26
                                CAL22CB7      CM       APPLY   Pass    10:30:39
                                CAL22CB7      CM       REMOVE  Pass    10:30:47

```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
INFO COMMAND SUMMARY	Constant	Indicates that a PRSM command has been performed
User Class: <user>	Any valid PRSM user	The PRSM user type of the user
User Identity: <user_id>	Any valid userid	The name of the user
<prsuid>	Any valid prsuid	The name of the PRSU affected by the action
<destid>	Any valid destid	The name of the destination affected by the action
<command>	APPLY, REMOVE, VALIDATE, FREEMEM, DBAUDIT, ASSIGN	The PRSM command that initiated the action
<status>	Pass, Fail	The status of the action
<time>	Time	The time the action completed

Action

Check office policy. The contents of the log and office policy determines the need for additional action. For example, action needs to be taken if a PRSU or destination reports a "Fail" value in the log. If a "Fail" value is reported, monitor other logs generated by PRSM for further action.

Associated OM registers

None

Additional information

None

PRSM400

Explanation

The PRSM400 command summary log generates for an SPM destination when an SPM loadfile (containing SPM PRSU fixes) is datafilled in table PMLOADS. The PRSM400 summary log is generated for any DBAUDITs performed on any SPM destinations.

ATTENTION

Only information specific to the Spectrum-Peripheral Module (SPM) is included here.

Format

The format for log report PRSM400 for SPM follows:

```
** PRSM400 mmmdd hh:mm:ss ssdd INFO COMMAND SUMMARY
   User-Class: <user>           User Identity: <userid>
   REASON: <change reason>

   PRSU id      Destination      Command      Pass/      Time
   -----      (DEST)          Method       Fail       Complete
   <prsuidd>    <destid>          <command>    <status>   <time>
```

Example

An example of log report PRSM400 for SPM follows:

```
** PRSM400 DEC11 10:30:58 8200 INFO COMMAND SUMMARY
   User-Class: CI_USER           User Identity: OPERATOR

   PRSU id      Destination      Command      Pass/      Time
   -----      (DEST)          Method       Fail       Complete
   CAL22CB8     NONE                     APPLY        Fail       09:52:32
   CAL22CB8     NONE                     APPLY        Fail       09:53:12
   BAS07AL      SITE                     APPLY        Pass       10:30:16
   CAL22CB7     CM                      VALIDATE     Pass       10:30:26
   CAL22CB7     CM                      APPLY        Pass       10:30:39
   CAL22CB7     CM                      REMOVE       Pass       10:30:47
```

PRSM400 (continued)**Field descriptions**

The following table explains each of the fields specific to the SPM in the log report:

(Sheet 1 of 2)

Field	Value	Description
User Class	User Class	Field heading, 11 characters
user_class	ci_user	Class of user, 16 characters
	padn_use	
	autoapply_user	
	file_audit_user	
	status_audit_user	
	xpm_reload_user	
	onp_user, reporting_user	
	misc_user	
	communication_pipe	
	comm_pipe_pal	
	dmscom_user	
	autoinstall_user	
	autoproc_user	
User Identity	User Class	Field heading, 14 characters
user_ident	mapci userid	Identity of user, 16 characters
PRSUid	PRSUid	Field heading, 6 characters
Destination	Destination	Field heading, 11 characters
Command	Command	Field heading, 7 characters
Pass/Fail	Pass/Fail	Field heading, 9 characters
Time Complete	Pass/Fail	Field heading, 13 characters
<prsuid>	PRSU name	Field value for PRSU name, 32 characters

PRSM400 (end)

(Sheet 2 of 2)

Field	Value	Description
<destname>	destination name	Field value for destination name, 32 characters
	UNKNOWN	
	NONE	
<com_name>	APPLY	Command name for the given action, 16 characters
	REMOVE	
	VALIDATE	
	DBAUDIT	
	FREEMEM	
	ASSIGN	
<pass_fail>	Pass	Success value of the action, 4 characters
	Fail	
<timestamp>	00:00:00-24:00:00	Timestamp when the action occurred, 16 characters

Action

Action only needs to be taken if a PRSU or destination reports a "Fail" value in the log. If a "Fail" value is reported, monitor other logs generated by PRSM for further action.

Associated OM registers

Not applicable

Additional information

Not applicable

PRSM401**Explanation**

The Post-Release Software Manager (PRSM) subsystem generates the PRSM401 log report. This log report is an assignment summary log that lists each activatable post-release software update (PRSU) that has been activated or deactivated. The command ASSIGN ACTIVE Y activates the PRSU, and the command ASSIGN ACTIVE N deactivates the PRSU. The subsystem generates the log after the user quits PRSM or the log records 15 PRSUs that have been activated or deactivated.

Format

The format for log report PRSM401 follows:

```
PRSM401 mmmdd hh:mm:ss ssdd INFO ASSIGN SUMMARY
  User Class: <user>          User Identity <userid>
  PRSU id      Destination    Assign Action    Pass/  Time
                (DEST)                Fail  Complete
  -----
  <prsuid>      destid          ACTIVE <y/n>    <p/f>  <time>
```

Example

An example of log report PRSM401 follows:

```
PRSM401 JAN10 10:34:33 1900 INFO ASSIGN SUMMARY
  User Class:  CI USER      User Identity:  VMAP1
                Destination
  PRSU id      (DEST)          Assign Action    Pass/  Time
                -----
  PLR01BB9     CM              ACTIVE  Y          Pass   10:24:59
  PLR01BB9     CM              ACTIVE  Y          Pass   10:24:59
  PLR01BB9     CM              ACTIVE  N          Pass   10:25:02
```

Field descriptions

The following table explains each of the fields in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO ASSIGN SUMMARY	Constant	Indicates that an activatable PRSU has been activated or deactivated
User Class: <user>	Any valid PRSM user	The PRSM user type of the user
User Identity: <user_id>	Any valid userid	The name of the user

PRSM401 (end)

(Sheet 2 of 2)

Field	Value	Description
<prsuid>	Any valid prsuid	The name of the PRSU that was activated or deactivated
<destid>	Any valid destid	The name of the destination that contains the PRSU that was activated or deactivated
ACTIVE	Constant	Indicates that the PRSU is activatable
<y/n>	Y, N	Identifies whether the PRSU was activated or deactivated
<p/f>	PASS , FAIL	The status of the ASSIGN action
<time>	Any valid time in the office	The time the ASSIGN command was completed

Action

This log only provides information. No action is required.

Associated OM registers

None

Additional information

None

PRSM470

Explanation

The Post-Release Software Manager (PRSM) subsystem generates the PRSM470 log report. This log report is a service summary log that lists the results of the nightly PRSM Status Audit. The log lists the following information:

- each post-release software update (PRSU) alarm condition
- the number of PRSUs in each alarm condition
- the PRSUs in each alarm condition

Format

The format for log report PRSM470 follows:

PRSM470 mmmdd hh:mm:ss ssdd INFO Status Audit Summary	
PRSU Condition	Number of PRSUs
<alm_condtn>	<number>
PRSU Condition Details	
<alm_condtn>	
<prsu>	

Example

An example of log report PRSM470 follows:

PRSM470 (continued)

PRSM470 MAR11 09:31:41 9400 INFO Status Audit Summary

PRSU Condition	Number of PRSUs
-----	-----
ACT_NOT_APP	0
NOTACTIVATED	0
ACTPW_NOTACT	0
DBG_APP	1
DBG_NOT_APP	0
DNR_NOT_APP	0
EMG_NOT_APP	0
GEN_NOT_APP	2
LTD_NOT_APP	0
MAN_NOT_APP	0
SRC_NOT_APP	1
OBS_NOT_REM	0
OBE_NOT_REM	0
REM_PRSUS	0
INCNOTINST	0
UNITMISMATCH	0

PRSU Condition Details

ACT_NOT_APP
*
NOTACTIVATED
*
ACTPW_NOTACT
*
DBG_APP
DKC52CB5
*
DBG_NOT_APP
*
DNR_NOT_APP
*
EMG_NOT_APP
*
GEN_NOT_APP
MBR30CB5
LNC15IB5
*
LTD_NOT_APP
*
MAN_NOT_APP
*
SRC_NOT_APP
XMF06X05
*
OBS_NOT_REM
*
OBE_NOT_REM
*
REM_PRSUS
*
INCNOTINST
*
UNITMISMATCH
*

PRSM470 (end)

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
INFO Status Audit Summary	Constant	Indicates that PRSM has completed a nightly status audit
<alarm_condtn>	Any PRSM alarm condition	The PRSM alarm condition, as entered in table PRSMALRM. If the ENABLED field for the alarm in table PRSMALRM is set to N, the alarm will not be listed in log PRSM470.
<number>	Number	The number of PRSUs in the alarm condition. A series of periods (...) indicates more PRSUs than are shown in the alarm condition. PRSM470 displays only the first 10 PRSUs in the alarm condition.
<prsu>	Asterisk (*), any valid prsuid	The PRSUs in the alarm condition. An asterisk (*) indicates no PRSUs.

Action

Check office policy. The contents of the log and office policy will determine if you must perform additional action.

Associated OM registers

None

Additional information

None

PRSM600

Explanation

The Post-Release Software Manager (PRSM) subsystem generates the PRSM600 log report. This log report is an information log that describes an activity that may be beyond normal operating conditions.

Format

The format for log report PRSM600 follows:

```
PRSM600 mmmdd hh:mm:ss ssdd INFO General Info  
<information_txt>
```

Example

An example of log report PRSM600 follows:

```
PRSM600 APR27 11:29:56 1700 INFO General Info  
PRSM CM Statuses have been synced by operator.
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
INFO General Info	Constant	Identifies an activity that may be beyond normal operating conditions
<information_txt>	Up to five lines of text	The activity that may be beyond normal operating conditions

Action

None

Associated OM registers

None

Additional information

None

PRSM603**Explanation**

The Post-Release Software Manager (PRSM) subsystem generates the PRSM603 log report. This log report is an information log that lists any change to any field in table PRSMOPTS.

Format

The format for log report PRSM603 follows:

```
PRSM603 mmmdd hh:mm:ss ssdd INFO PRSMOPTS Option Change
      <field> changed from <old_value> to <new_value>
```

Example

An example of log report PRSM603 follows:

```
PRSM603 MAY16 15:19:47 8300 INFO PRSMOPTS Option Change
      DESTMETH changed from BROADCAST to NO_BROADCAST.
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
INFO PRSMOPTS	Constant	Indicates that a field in table PRSMOPTS has changed
<field>	DESTMETH, COEXDUR, COEXCMAX, COEXCMIN	Any field in table PRSMOPTS
changed from	Constant	Indicates the old value follows
<old_value>	Any acceptable value	The previous value in the field in table PRSMOPTS
to	Constant	Indicates the new value follows
<new_value>	Any acceptable value	The new value in the field in table PRSMOPTS
Note: Values COEXDUR, COEXCMAX, and COEXCMIN are available only in offices that use Generic Services Framework (GSF).		

PRSM603 (end)

Action

None

Associated OM registers

None

Additional information

None

PRSM680

Explanation

The Post-Release Software Manager (PRSM) subsystem generates the PRSM680 log report. This log report is an information log that lists information on PRSM automated processes.

Format

The format for log report PRSM680 follows:

```
PRSM680 mmmdd hh:mm:ss ssdd INFO Automated Process Info
Automated Process: <process>
<information_txt>
```

Example

Following are examples of log report PRSM680:

Example 1

```
PRSM680 OCT1 01:03:17 8900 INFO Automated Process Info
Automated Process: AUTOAPP
Process started.
```

Example 2

```
PRSM680 OCT1 01:03:17 8900 INFO AUTOMATED PROCESS INFO
Automated Process: AUTOAPP
Process has been manually delayed
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
INFO AUTOMATED PROCESS INFO	Constant	Displays information on a PRSM automated process
Automated Process: <process>	AUTOAPP, FILE_AUDIT, STATUS_AUDIT	The PRSM automated process
<information_txt>	Text string	The information related to the automated process

PRSM680 (end)

Action

None

Associated OM registers

None

Additional information

None

PRSM681

Explanation

The Post-Release Software Manager (PRSM) subsystem generates the PRSM681 log report. This log report is an information log that identifies when a PRSM automated process is started, stopped, or delayed. The subsystem generates the log whenever a user performs one of the following commands.

- AUTOPROC <auto_process> START
- AUTOPROC <auto_process> STOP
- AUTOPROC <auto_process> DELAY

Format

The format for log report PRSM681 follows:

```
PRSM681 mmmdd hh:mm:ss ssdd INFO AUTOPROCESS CI COMMAND  
      <command> issued by <user>
```

Example

Following are examples of log report PRSM681:

Example 1

```
PRSM681 OCT1 01:03:17 8900 INFO AUTOPROCESS CI COMMAND  
      AUTOPROC AUTOAPP STOP issued by ADMIN.
```

Example 2

```
PRSM681 OCT1 01:03:18 8900 INFO AUTOPROCESS CI COMMAND  
      AUTOPROC FILEAUD START issued by ADMIN.
```

PRSM681 (end)

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
INFO AUTOPROCESS CI COMMAND	Constant	Indicates that a PRSM automated process has been started, stopped, or delayed
<command>	Any AUTOPROC CI command with the START, STOP, or DELAY parameter	The PRSM command that stops, starts, or delays a PRSM automated process
<user>	Any PRSM user	The PRSM user that started, stopped, or delayed the automated process

Action

None

Associated OM registers

None

Additional information

None

PRSM682

Explanation

The Post-Release Software Manager (PRSM) subsystem generates the PRSM682 log report. This log report is an information log that lists any change to any field in table AUTOOPTS.

Format

The format for log report PRSM682 follows:

```
PRSM682 mmmdd hh:mm:ss ssdd INFO AUTOOPTS OPTION  
CHANGE  
    <field> changed from <old_value> to <new_value> by <user>.
```

Example

Following are examples of log report PRSM682:

Example 1

```
PRSM682 OCT1 12:15:27 6900 INFO AUTOOPTS OPTION CHANGE  
    MAXATMPT changed from $ to 4 by ADMIN.
```

Example 2

```
PRSM682 OCT1 12:15:27 6900 INFO AUTOOPTS OPTION CHANGE  
    APPROVAL changed from N to Y by ADMIN.
```

Field descriptions

The following table explains each of the fields in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO AUTOOPTS OPTION CHANGE	Constant	Indicates a field has changed in table AUTOOPTS
<field>	Any valid field in table AUTOOPTS	The field in table AUTOOPTS that was changed
changed from	Constant	Indicates the old value follows

PRSM682 (end)

(Sheet 2 of 2)

Field	Value	Description
<old_value>	Any value for the field	The previous value in the field
to	Constant	Indicates the new value follows
<new_value>	Any value for the field	The new value in the field
by	Constant	Indicates the PRSM user follows
<user>	Any PRSM user	The PRSM user that changed the value

Action

None

Associated OM registers

None

Additional information

None

PRSM683**Explanation**

The Post-Release Software Manager (PRSM) subsystem generates the PRSM683 log report. This log report is an information log that lists any option change to table AUTOPRSU.

Format

The format for log report PRSM683 follows:

```
PRSM683 mmmdd hh:mm:ss ssdd INFO AUTOPRSU OPTION CHANGE
Automated Process: <process>
<field> changed from <old_value> to <new_value> by <user>
```

Example

An example of log report PRSM683 follows:

```
PRSM683 OCT1 12:15:28 8900 INFO AUTOPRSU OPTION CHANGE
Automated Process: AUTOAPP
MTWTFSS changed from NNNNNNN to YYYYYYY by ADMIN
```

Field descriptions

The following table explains each of the fields in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO AUTOPRSU OPTION CHANGE	Constant	Indicates an option has changed in table AUTOPRSU
Automated Process: <process>	Any PRSM automated process	The PRSM automated process
<field>	FIELDNAME, MTWTFSS	The field in table AUTOPRSU
changed from	Constant	Indicates the old value follows
<old_value>	Any acceptable value	The previous value in the field in table AUTOPRSU
to	Constant	Indicates the new value follows
<new_value>	Any acceptable value	The new value in the field in table AUTOPRSU

PRSM683 (end)

(Sheet 2 of 2)

Field	Value	Description
by	Constant	Indicates the name of the user follows
<user>	Any PRSM user	The PRSM user that changed the value

Action

None

Associated OM registers

None

Additional information

None

RDT300**Explanation**

The subsystem generates the Remote Digital Terminal (RDT) subsystem log RDT300 when the database audit process finds a mismatch. This mismatch occurs between object data in the remote digital terminal (RDT) and the computing module (CM). The system cannot correct the error. Operating company personnel support is required.

Format

The log report format for RDT300 is as follows:

```
RDT300 mmmdd hh:mm:ss ssdd TBL Transmission Alarm
Location:      <site><ff><u>
Status:        <status>
Trouble:       Transmission alarm
Action:        Refer to Trouble recovery documentation
Object class:   <object class>
Description:    <descriptive text>
Correction procedure: <service_condition>
```

Example

An example of log report RDT300 follows:

```
**RDT300 FEB25 14:35:10 0123 TBL Mismatch Fault
Location: RDT1 00 0
Status:    Alarm raised
Trouble:   Data not synchronized
Action:    Check datafill and correct if necessary
Object class: 500 (equipment)
Description: Object data mismatch between RDT and CM
Correction procedure: Delete and redatafill this IDT
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
TBL Mismatch Fault	Constant	Indicates the database audit process found a mismatch between the RDT and the CM.
Location <site>	RDT Integer	Identifies the source RDT site.

RDT300 (continued)

(Sheet 2 of 2)

Field	Value	Description
<ff>	0-99	Identifies the source RDT frame.
<u>	0-9	Identifies the source RDT unit.
Status	Alarm raised	Indicates an alarm raised.
Trouble	Data not synchronized	Indicates data is not in sync.
Action	Symbolic text	Describes the action required.
Object class	Symbolic text	Provides the type of object where the audit finds a mismatch.
Description	Symbolic text	Indicates where the mismatch occurred.
Correction procedure	Symbolic text	Describes the action that corrects the fault.

Action

Refer to the following table for associated actions to correct the error.

Objects	Description	Correction Procedure
Inherent	If the object class is "Equipment," inherent object data is defective. The last line of the log contains the text.	Delete and enter this IDT again. To recover from the database mismatch, delete the integrated digital terminal (IDT) from table RDTINV. Enter table RDTINV again.
Auto-create	For other (auto-create) object classes, the last line of the log contains the text.	Busy (BSY) and return to service (RTS) active and standby EOCs for this IDT. At the IDT level of the MAPCI, set the active embedded operations channel (EOC) and the standby EOC (if available) to ManB. Return to service the active EOC and the standby EOC (if available). The command sequence is: MAPCI MTC PM POST IDT n <- where n is the IDT number (0-255) BSY EOC1 <- or whatever is the active EOC BSY EOC2 <- or whatever is the standby EOC RTS EOC1 RTS EOC2 This action causes the system to start the auto-create objects in the database again.

Associated OM registers

There are no associated OM registers.

RDT301

Explanation

The subsystem changes RDT301 for remote digital terminals (RDTs) of type GENTMC or GENCSC. These changes do not affect RDTs of different types of RFT. The RDTs of different types of GENTMC or GENCSC do not contain the RDT primary OPC and RDT backup OPC fields.

The system generates RDT301 when the system receives a facility alarm from an RDT. The field Text of the log can identify the problem. Field Text is optional. The RDT does not always provide Field Text. The asterisks in the log header indicate how important the problem is. The field Service condition of the log also indicates how important the problem is. Field Service condition is optional. The RDT does not always provide field Service condition.

Format

The log report for format RDT301 is as follows:

```
<sv> RDT301 <date/time> <sq> TBL Facility Alarm
  Location:      RDT <site><ff><u>
  Status:        <status>
  Trouble:       Facility alarm
  Action:        Refer to trouble recovery documentation
  Text:          <text>
  Procedure:     Clear the alarm condition at the RDT
  Associated IDT: <id#>      Network element: <NEID> <NEName>
  RDT alarm record ID: <rID> RDT primary OPC:
  Correlated record ID: <cID> RDT backup OPC:
  Service condition: <service_condition>
```

Example

An example of log report RDT301 follows:

```
***RDT301 FEB25 14:35:10 3302 TBL Facility Alarm
  Location:  RDT RDT1 1 0
  Status:    Alarm raised
  Trouble:   Facility alarm
  Action:    Refer to trouble recovery documentation
  Text:      Faulty path
  Procedure: Clear the alarm condition at the RDT
  Associated IDT: 1      Network element: 10 ANODE_1_RFT
  RDT alarm record ID: 289 RDT primary OPC: BRTPY451
  Correlated record ID: None RDT backup OPC: Unnamed
  Service condition: Service affecting
```

RDT301 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
<sv>	*	Indicates how important the alarm is: "" = No alarm "*" = Minor alarm "***" = Major alarm "****" = Critical alarm
TBL Facility Alarm	Constant	Indicates the system received a facility alarm from the RDT.
Location RDT <site><ff><u>	Any correct site name as entered in table SITE	Identifies the source RDT area. The source RDT area, the frame, and unit numbers consist the name of the RDT entered in table RDTINV.
<ff>	0-99	Identifies the source RDT frame. This field, the area name, and unit number, form the name of the RDT entered in table RDTINV.
<u>	0-9	Identifies the source RDT unit. This field, the area name, and frame number form the name of the RDT entered in table RDTINV.
Status <status>	Alarm raised, Alarm cleared, or Trouble alert	Indicates the state of the RFT is one of the following: "Alarm raised" indicates the subsystem generates new alarm from the RDT. "Alarm cleared" indicates an alarm cleared at the RDT. "Trouble alert" indicates an alarm and the value is not known.
Trouble	Facility alarm	Indicates the RDT alarm is a facility alarm.
Action	Refer to Trouble recovery documentation	Describes the action. This field does not appear in an Alarm cleared report.
Text <text>	Any text the RDT received, or None	Indicates a text string from the alarm and indicates the reason for the problem. A None message appears if the RDT does not provide text.

RDT301 (continued)

(Sheet 2 of 3)

Field	Value	Description
Procedure	Clear the alarm condition at the RDT	Indicates a technician must connect to the indicated RDT (network element) to clear the alarm. This field does not appear in an Alarm cleared report.
Associated IDT <id#>	0-255	Indicates the IDT the system posts under the PM level of the MAPCI terminal to track this RDT alarm.
Network element ID <NEID>	0-32767	Indicates the Network element ID of the RDT that originated the alarm report.
Network element name <NEName>	Any text as entered in table RDTINV, or Unnamed	Indicates the Network element name of the RDT that originated the alarm report. If the NENAME is not set to a text string, Unnamed prints for the Network element name.
RDT alarm record ID <rID>	0-9999, ????, or None	Indicates the record ID of the alarm at the RDT. This integer can be used as a log against the alarm at the RDT. If the system cannot determine the record ID, ???? appears. If RDT does not provide the record ID, None appears in this field.
RDT primary OPC	alphanumeric (up to 20 characters) or \$	Indicates the name of the primary operations controller (OPC) that controls the RDT. If no operations controller controls the RDT, enter \$.
RDT backup OPC	alphanumeric (up to 20 characters) or \$	Indicates the backup OPC name for the RDT. If no OPC is used, enter \$. If the backup OPC is entered with no primary OPC, the entry is rejected. The default value for this field is \$.
Correlated record ID <cID>	0-9999, ????, or None	If this is an Alarm cleared report, the field indicates the cleared alarm at the RDT. If the correlated record ID is not determined, ???? appears. If the RDT does not provide record ID, or this is an Alarm raised report, None message appears in this field.

RDT301 (end)

(Sheet 3 of 3)

Field	Value	Description
Service condition <service_condition>	Service-affecting, Non-service affecting, or Unknown	Indicates when this alarm condition affects subscriber service. This field does not appear if the log report documents an alarm that clears. If the RDT does not provide the service condition, Unknown appears in this field.
Object class <Object class #>	An object class number of any correct object class for which the subsystem generates alarms at RDT	Indicates the class number of the object for which the subsystem event report.
Object class <Object class name>	An object class name of any correct object class for which the subsystem generates the alarms at RDT	Indicates the class name of the object for which the subsystem generates the event report.

Action

When the subsystem generates log RDT301, perform the following steps:

1. Post the associated Integrated Digital Terminal (IDT) at the Peripheral Module (PM) level of the Maintenance and Administration Position command interpreter (MAPCI terminal). This action tracks the alarm.
2. To clear the alarm at the RDT, refer to the correct RDT vendor documentation.

Associated OM registers

There are no associated OM registers.

Additional information

Field Correlated record ID of an Alarm cleared report matches the field RDT alarm record ID of the associated Alarm raised report. Field Correlated record ID is optional. The RDT does not always provide the field Correlated record ID.

Module RDTLOG defines the RDT301 log. Establish a maintenance connection to a real or simulated RDT and report an RDT facility alarm to generate this log.

RDT302

Explanation

Changes to log report RDT302 are for remote digital terminals (RDTs) of type GENTMC or GENCSC. These changes do not affect RDTs of different type RFT. RDTs of different type GENTMC or GENCSC do not contain the RDT primary OPC and RDT backup OPC fields.

The subsystem generates RDT302 when the system receives an equipment alarm from an RDT. This log indicates a problem detected at the RDT that involves RDT equipment. The field Text of the log identifies the problem. Field Text is optional. The RDT does not always provide the field Text. The asterisks in the log header and field Service condition of the log indicate how important the problem is. Field Service condition is optional. The RDT does not always provide field Service condition.

Format

The log report format for RDT302 is as follows:

```
<sv> RDT302 <date/time> <sq> TBL Equipment Alarm
  Location:      <site><ff><u>
  Status:        <status>
  Trouble:       Equipment alarm
  Action:        Refer to Trouble recovery documentation
  Text:          <text>
  Procedure:      Clear the alarm condition at the RDT
  Associated IDT: <idt#> Network element: <NEID> <NEName>
  RDT alarm record ID: <rID>
  Correlated record ID: <cID>
  Service condition: <service_condition>
  Object class:   <Object class# (Object class name)>
```

Example

An example of log report RDT302 follows:

RDT302 (continued)

```

**RDT302 FEB25 14:35:10 3403 TBL Equipment Alarm
  Location: RDT1 03 0
  Status:      Alarm raised
  Trouble:     Equipment Alarm
  Action:      Refer to Trouble recovery documentation
  Text:        DS3 MPR Cctpk mismatch
  Procedure:   Clear the alarm condition at the RDT
  Associated IDT: 3   Network element: 3 RALEIGH_AMEX_B13
  RDT alarm record ID: 13
  Correlated record ID: None
  Service condition:      Service affecting
  Object class:           00A0 (loopStRes_line_termination)

```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
<sv>	*	Indicates how important the alarm is: "" = No alarm ""*"" = Minor alarm ""***"" = Major alarm ""*****"" = Critical alarm
TBL Equipment Alarm	Constant	Indicates the system received an Equipment alarm from the RDT.
Location <site> <ff> <u>	Any correct site name as entered in table SITE	Identifies the source RDT area. This field, RDT area, the frame, and unit numbers form the name of the RDT entered in table RDTINV.
<ff>	0-99	Identifies the source RDT frame. This field, the area name, and unit number form the name of the RDT entered in table RDTINV.
<u>	0-9	Identifies the source RDT unit. This field, RDT unit, the area name, and frame number form the name of the RDT as entered in table RDTINV.

RDT302 (continued)

(Sheet 2 of 3)

Field	Value	Description
Status <status>	Alarm raised, Alarm cleared, or Trouble alert	Indicates the state of the RDT: "Alarm raised" - indicates new alarm generates from the RDT. "Alarm cleared" - log indicates an alarm cleared at the RDT. "Trouble alert" - log indicates an alarm of an importance that is not known.
Trouble	Equipment alarm	Indicates the RDT alarm is an equipment problem.
Action	Refer to Trouble recovery documentation	Describes the action. This field does not appear in an alarm cleared report.
Text <text>	Any text as received from the RDT, or None	Indicates a text string from the alarm and indicates the type of problem. A None message appears if the RDT does not provide text.
Procedure	Clear the alarm condition at the RDT	Indicates a technician must connect to the indicated RDT (network element) to clear the alarm. This field does not appear included for an Alarm cleared report.
Associated IDT <id#>	0-255	Indicates the IDT the system posts under the PM level of the MAPCI terminal to track this RDT alarm.
Network element ID <NEID>	0-32767	Indicates the Network element ID of the RDT that originated the alarm report.
Network element name <NEName>	Any text as entered in table RDTINV, or Unnamed	Indicates the Network element name of the RDT that started the alarm report. If the NENAME is not set to a text string, the system prints Unnamed for the Network element name.
RDT alarm record ID <rID>	0-999, ????, or None	Indicates the record ID of the alarm at the RDT. This integer can be used as a log against the alarm at the RDT. If the record ID is not determined, ???? appears. If the RDT does not provide the record ID, a None message appears in this field.

RDT302 (continued)

(Sheet 3 of 3)

Field	Value	Description
Correlated record ID <CID>	0-9999, ????, or None	Indicates which alarm at the RDT cleared, if this is an alarm cleared report. If the correlated record ID is not determined, ???? appears. If the RDT does not provide correlated record ID, or this is an alarm raised report, None appears in this field.
Service condition	Service-affecting, Non-service affecting, or Unknown	Indicates when this alarm condition affects subscriber service. This field does not appear if the log report documents an alarm that the subsystem clears. If the RDT does not provide the service condition, Unknown appears in this field.
Object class <Object class#>	An object class number of any correct object class for which the subsystem generates the alarms at RDT.	Indicates the class number of the object for which the subsystem generates the event report.
Object class <Object class name>	An object class name of any correct object class for which the subsystem generates the alarms at RDT.	Indicates the class name of the object for which the subsystem generates the event report.

Action

When the subsystem generates RDT302, perform the following actions:

1. Post the associated Integrated Digital Terminal (IDT) at the Peripheral Module (PM) level of the Maintenance and Administration Position command interpreter (MAPCI) terminal to track the alarm.
2. To clear the alarm at the RDT, refer to the correct RDT vendor documentation.

Associated OM registers

There are no associated OM registers.

Additional information

Field Correlated record ID of an Alarm cleared report matches the field RDT alarm record ID of the associated Alarm raised report. Field Correlated record ID is optional. The RDT does not always provide field Correlated record ID.

RDT302 (end)

Module RDTLOG defines the RDT302 log. To generate this log, establish a maintenance connection to a real or simulated RDT and report an RDT equipment alarm.

RDT303

Explanation

Changes to RDT303 are for remote digital terminals (RDTs) of type GENTMC or GENCSC. These changes do not affect RDTs of different types of RFT. The RDTs of different types of GENTMC or GENCSC do not contain the RDT primary OPC and RDT backup OPC fields.

The subsystem generates RDT303 when the subsystem receives an environmental alarm from an RDT. The field Text of the log identifies the problem. Field Text is optional. The RDT does not always provide the field Text. The asterisks in the log header and the field Service condition of the log indicate how important the problem is. Field Service condition is optional. The RDT does not always provide the field Service condition.

Format

The log report format for RDT303 is as follows:

```
<sv> RDT303 <date/time> <sq> TBL Environmental Alarm
  Location:      <site><ff><u>
  Status:        <status>
  Trouble:       Environmental alarm
  Action:        Refer to Trouble recovery documentation
  Text:          <text>
  Procedure:     Clear the alarm condition at the RDT
  Associated IDT  <id#> Network element: <NEID> <NEName>
  RDT alarm record ID: <rID>
  Correlated record ID: <cID>
  Service condition: <service_condition>
  Object class:  <Object class# (Object class name)>
```

Example

An example of log report RDT303 follows:

RDT303 (continued)

*RDT303 FEB25 14:35:10 3504 TBL Environmental Alarm
Location: RDT1 03 0
Status: Alarm raised
Trouble Environmental Alarm
Action: Refer to Trouble recovery documentation
Text: Fan 2 Fail
Procedure: Clear the alarm condition at the RDT
Associated IDT: 3 Network element: 3 RALEIGH_AMEX_B13
RDT alarm record ID: 15
Correlated record ID: None
Service condition: Service affecting
Object class: 0098 (frame)

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
<sv>	*	Indicates the how important alarm is: "" = No alarm ""*"" = Minor alarm ""***"" = Major alarm ""****"" = Critical alarm
TBL Environmental Alarm	Constant	Indicates the system received an environmental alarm from the RDT.
Location <site><ff><u>	Any correct site name as entered in table SITE	Identifies the source RDT site. This field, the frame, and unit numbers form the name of the RDT entered in table RDTINV.
<ff>	0-99	Identifies the source RDT frame. This field, the area name, and unit number form the name of the RDT entered in table RDTINV.
<u>	0-9	Identifies the source RDT unit. This field, the area name, and frame number form the name of the RDT entered in table RDTINV.

RDT303 (continued)

(Sheet 2 of 3)

Field	Value	Description
Status <status>	Alarm raised, Alarm cleared, or Trouble alert	Indicates the state of the RDT: "Alarm raised" - indicates new alarm generates from the RDT. "Alarm cleared" - log indicates an alarm cleared at the RDT. "Trouble alert" - log indicates an alarm of an importance that is not known.
Trouble	Environmental alarm	Indicates the RDT alarm is an environmental problem.
Action	Refer to Trouble recovery documentation	Describes the action. This field does not appear in an alarm cleared report.
Text <text>	Any text as received from the RDT, or None	Indicates a text string from the alarm and indicates the reason for the problem. If the RDT does not provide text, a None message appears.
Procedure	Clear the alarm condition at the RDT	Indicates operating company personnel must connect to the indicated RDT (network element) to clear the alarm. This field does not appear for an Alarm cleared report.
Associated IDT <id#>	0-255	Indicates the IDT to post under the PM level of the MAPCI terminal to track this RDT alarm.
Network element ID <NEID>	0-32767	Indicates the Network element ID of the RDT that started the alarm report.
Network element name <NEName>	Any text as entered in table RDTINV, or Unnamed	Indicates the Network element name of the RDT that started the alarm report. If the NENAME is not set to a text string, Unnamed prints for the Network element name.
RDT alarm record ID <rlD>	0-9999, "????," or "None"	Indicates the record ID of the alarm at the RDT. This integer can be used as a log against the alarm at the RDT. If the record ID is not determined, ???? appears. If the RDT does not provide the record ID, None appears in this field.

RDT303 (continued)

(Sheet 3 of 3)

Field	Value	Description
Correlated record ID <cID>	0-9999, "????," or "None"	Indicates the record ID of the alarm at the RDT. This integer can be used as a log against the alarm at the RDT. If the record ID is not determined, ???? appears. If the RDT does not provide the record ID, None appears in this field.
Service condition <srvice_condtn>	Service affecting, Non-service affecting, or Unknown	Indicates when this alarm condition affects subscriber service. This field does not appear if the log report documents an alarm that clears. If the RDT does not provide the service condition, Unknown appears in this field.
Object class <Object class#>	An object class number of any correct object class for which the subsystem generates alarms at RDT.	Indicates the class number of the object for which the subsystem generates the event report.
Object class <Object class name>	An object class name of any correct object class for which the subsystem generates the alarms at RDT.	Indicates the class name of the object for which the subsystem generates the event report.

Action

When the subsystem generates RDT303, perform the following actions:

- Post the associated Integrated Digital Terminal (IDT) at the Peripheral Module (PM) level of the Maintenance and Administration Position command interpreter (MAPCI) terminal to track the alarm.
- To clear the alarm at the RDT, refer to the correct RDT vendor documentation.

Associated OM registers

There are no associated OM registers.

Additional information

Field Correlated record ID of an Alarm cleared report matches the field RDT alarm record ID of the associated Alarm raised report. Field Correlated record ID is optional. The RDT does not always provide field Correlated record ID.

RD303 (end)

Module RDLOG defines the RD303 log. To generate this log, establish a maintenance connection to a real or simulated RD and report an RD equipment alarm.

RDT304

Explanation

Changes to RDT304 are for remote digital terminals (RDTs) of type GENTMC or GENCSC. These changes do not affect RDTs of different types of RFT. The RDTs of different types of GENTMC or GENCSC do not contain the RDT primary OPC and RDT backup OPC fields.

The subsystem generates RDT304 when the system receives an equipment alarm from an RDT. This log indicates that the subsystem detects a problem that involves RDT equipment at the RDT. The field Text of the log identifies the problem. Field Text is optional. The RDT does not always provide the field Text. The asterisks in the log header and the field Service condition of the log indicate how important the problem is. Field Service condition is optional. The RDT does not always provide field Service condition.

Format

The log report format for RDT304 is as follows:

```
<sv> RDT304 <date/time> <sq> TBL Software Alarm
  Location:      <site><ff><u>
  Status:        <status>
  Trouble:       Software alarm
  Action:        Refer to Trouble recovery documentation
  Text:          <text>
  Procedure:      Clear the alarm condition at the RDT
  Associated IDT: <idt#> Network element: <NEID> <NEName>
  RDT alarm record ID: <rID>
  Correlated record ID: <cID>
  Service condition: <service_condition>
  Object class:   <Object class# (Object class name)>
```

Example

An example of log report RDT304 follows:

RDT304 (continued)

```

***RDT304 FEB25 14:35:10 3605 TBL Software Alarm
  Location: RDT1 03 0
  Status:      Alarm raised
  Trouble:     Software Alarm
  Action:      Refer to Trouble recovery documentation
  Text:        Storage capacity exceeded
  Procedure:   Clear the alarm condition at the RDT
  Associated ID: 3   Network element: 3 RALEIGH_AMEX_B13
  RDT alarm record ID: 16
  Correlated record ID: None
  Service condition:      Service affecting
  Object class:           0093 (network_element)

```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
<sv>	*	Indicates how important the alarm is: "" = No alarm "*" = Minor alarm "***" = Major alarm "****" = Critical alarm
TBL Equipment Alarm	Constant	Indicates the subsystem received an Equipment alarm from the RDT.
Location <site> <ff> <u>	Any valid site name as entered in table SITE	Identifies the source RDT area. This field, the frame and unit numbers form of the name of the RDT entered in table RDTINV.
<ff>	0-99	Identifies the source RDT frame. This field, the area name, and unit number form of the name of the RDT entered in table RDTINV.
<u>	0-9	Identifies the source RDT unit. This field, the area name, and Frame number form the name of the RDT entered in table RDTINV.

RDT304 (continued)

(Sheet 2 of 3)

Field	Value	Description
Status <status>	Alarm raised, Alarm cleared, or Trouble alert	Indicates the state of the RDT: Alarm raised - indicates new alarm generates from the RDT. Alarm cleared - log indicates an alarm cleared at the RDT. Trouble alert - log indicates that it is not known how important the an alarm is.
Trouble	Software alarm	Indicates the RDT alarm is an equipment problem.
Action	Refer to Trouble recovery documentation	Describes the action. This field does not appear in an alarm cleared report.
Text <text>	Any text as received from the RDT, or None	Indicates a text string from the alarm, and indicates the reason for the problem. If the RDT does not provide text, None appears.
Procedure	Clear the alarm condition at the RDT	Indicates operating company personnel must connect to the indicated RDT (network element) to clear the alarm. This field does not appear for an Alarm cleared report.
Associated IDT <id#>	0-255	Indicates the IDT to post under the PM level of the MAPCI terminal to track this RDT alarm.
Network element ID <NEID>	0-32767	Indicates the Network element ID of the RDT that started the alarm report.
Network element name <NEName>	Any text as entered in table RDTINV, or Unnamed	Indicates the Network element name of the RDT that started the alarm report. If the NENAME is not set to a text string, Unnamed prints for the Network element name.
RDT alarm record ID <rID>	0-999, ????, or None	Indicates the record ID of the alarm at the RDT. This integer can be used as a log against the alarm at the RDT. If the record ID is not determined, ???? appears. If the RDT does not provide the record ID, None appears in this field.

RDT304 (continued)

(Sheet 3 of 3)

Field	Value	Description
Correlated record ID <cID>	0-9999, ???? , or None	Indicates which alarm at the RDT cleared, if this is an alarm cleared report. If the correlated record ID is not determined, ???? appears. If the RDT does not provide correlated record ID, or this is an alarm raised report, None appears in this field.
Service condition	Service-affecting, Non-service affecting, or Unknown	Indicates when this alarm condition affects subscriber service. This field does not appear if the log report documents an alarm that clears. If the RDT does not provide the service condition, Unknown appears in this field.
Object class <Object class#>	An object class number of any correct object class for which the subsystem generates alarms at RDT.	Indicates the class number of the object for which the subsystem generated the event report.
Object class <Object class name>	An object class name of any correct object class for which the subsystem generates the alarms at RDT.	Indicates the class name of the object for which the subsystem generated the event report.

Action

When the subsystem generates RDT304, perform the following actions:

1. Post the associated Integrated Digital Terminal (IDT) at the Peripheral Module (PM) level of the Maintenance and Administration Position command interpreter (MAPCI) terminal to track the alarm.
2. To clear the alarm at the RDT, refer to the correct RDT vendor documentation.

Associated OM registers

There are no associated OM registers.

Additional information

Field Correlated record ID of an Alarm cleared report matches the field RDT alarm record ID of the associated Alarm raised report. Field Correlated record ID is optional. The RDT does not always provide the field Correlated record ID.

RDT304 (end)

Module RDTLOG defines the RDT304 log. To generate this log, establish a maintenance connection to a real or simulated RDT and report an RDT equipment alarm.

RDT305

Explanation

Changes to RDT305 are for remote digital terminals (RDTs) of type GENTMC or GENCSC. These changes do not affect RDTs of different types of RFT. RDTs of different types of GENTMC or GENCSC do not contain the RDT primary OPC and RDT backup OPC fields.

The subsystem generates RDT305 when the subsystem receives an equipment alarm from an RDT. This log indicates the subsystem detects a problem that involves RDT equipment at the RDT. The field Text of the log identifies the problem. Field Text is optional. The RDT does not always provide the field Text. The asterisks in the log header and the field Service condition of the log indicate how important the problem is. Field Service condition is optional. The RDT does not always provide the field Service condition.

Format

The log report format for RDT305 is as follows:

```
<sv> RDT305 <date/time> <sq> TBL Service Alarm
  Location:      <site><ff><u>
  Status:        <status>
  Trouble:       Service alarm
  Action:        Refer to Trouble recovery documentation
  Text:          <text>
  Procedure:      Clear the alarm condition at the RDT
  Associated IDT: <idt#> Network element: <NEID> <NEName>
  RDT alarm record ID: <rID>
  Correlated record ID: <cID>
  Service condition: <service_condition>
  Object class:   <Object class# (Object class name)>
  Call reference value: <CRV#>
```

Example

An example of log report RDT305 follows:

RDT305 (continued)

```
**RDT305 FEB25 14:35:10 3706 TBL Service Alarm
  Location: RDT1 03 0
  Status:      Alarm raised
  Trouble:     Service Alarm
  Action:      Refer to Trouble recovery documentation
  Text:        None
  Procedure:   Clear the alarm condition at the RDT
  Associated ID: 3   Network element: 3 RALEIGH_AMEX_B13
  RDT alarm record ID: 17
  Correlated record ID: None
  Service condition: Service affecting
  Object class: 0093 (network_element)
  Call reference value: 30
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
<sv>	*	Indicates how important the alarm is: "" = No alarm ""*"" = Minor alarm ""**"" = Major alarm ""***"" = Critical alarm
TBL Equipment Alarm	Constant	Indicates the subsystem received an Equipment alarm from the RDT.
Location <site> <ff> <u>	Any correct site name as entered in table SITE	Identifies the source RDT area. This field, the frame, and unit numbers form the name of the RDT entered in table RDTINV.
<ff>	0-99	Identifies the source RDT frame. This field, the area name, and unit number form the name of the RDT entered in table RDTINV.
<u>	0-9	Identifies the source RDT unit. This field, the area name, and frame number form the name of the RDT entered in table RDTINV.

RDT305 (continued)

(Sheet 2 of 3)

Field	Value	Description
Status <status>	Alarm raised, Alarm cleared, or Trouble alert	Indicates the state of the RDT: Alarm raised - indicates new alarm generates from the RDT. Alarm cleared - log indicates an alarm cleared at the RDT. Trouble alert - log indicates that it is not known how important an alarm is.
Trouble	Equipment alarm	Indicates the RDT alarm is an equipment problem.
Action	Refer to Trouble recovery documentation	Describes the action. This field does not appear in an alarm cleared report.
Text <text>	Any text as received from the RDT, or None	Indicates a text string from the alarm and indicates the reason for the problem. If the RDT does not provide text, a None message appears.
Procedure	Clear the alarm condition at the RDT	Indicates operating company personnel must connect to the indicated RDT (network element) to clear the alarm. This field does not appear for an Alarm cleared report.
Associated IDT <id#>	0-255	Indicates the IDT to post under the PM level of the MAPCI terminal to track this RDT alarm.
Network element ID <NEID>	0-32767	Indicates the Network element ID of the RDT that started the alarm report.
Network element name <NEName>	Any text as entered in table RDTINV, or Unnamed	Indicates the Network element name of the RDT that started the alarm report. If the NENAME is not set to a text string, Unnamed prints for the Network element name.
RDT alarm record ID <rID>	0-999, ????, or None	Indicates the record ID of the alarm at the RDT. This integer can be used as a log against the alarm at the RDT. If the record ID is not determined, ???? appears. If the RDT does not provide the record ID, None appears in this field.

RDT305 (continued)

(Sheet 3 of 3)

Field	Value	Description
Correlated record ID <CID>	0-9999, ????, or None	Indicates which alarm at the RDT cleared, if this is an alarm cleared report. If the correlated record ID is not determined, ???? appears. If the RDT does not provide correlated record ID, or this is an alarm raised report, None appears in this field.
Service condition	Service-affecting, Non-service affecting, or Unknown	Indicates when this alarm condition affects subscriber service. This field does not appear if the log report documents an alarm that clears. If the RDT does not provide the service condition, Unknown appears in this field.
Object class <Object class#>	An object class number of any correct object class for which the subsystem generates the alarms at RDT.	Indicates the class number of the object for which the subsystem generates the event report.
Object class <Object class name>	An object class name of any correct object class for which the subsystem generates the alarms at RDT.	Indicates the class name of the object for which the subsystem generates the event report.
Call reference value <CRV#>	1-n, where n is the maximum number of circuits in the RDT, normally 2048.	Indicates the logical number equal to the line circuit. The call reference value identifies the wire pair.

Action

When the subsystem generates RDT305, perform the following actions:

1. Post the associated Integrated Digital Terminal (IDT) at the Peripheral Module (PM) level of the Maintenance and Administration Position command interpreter (MAPCI) terminal to track the alarm.
2. To clear the alarm at the RDT, refer to the correct RDT vendor documentation.

Associated OM registers

There are no associated OM registers.

Additional information

Field Correlated record ID of an Alarm cleared report matches the field RDT alarm record ID of the associated Alarm raised report. Field Correlated record ID is optional. The RDT does not always provide the field Correlated record ID.

Module RDTLOG defines the RDT305 log. To generate this log, establish a maintenance connection to a real or simulated RDT and report an RDT equipment alarm.

RDT306

Explanation

The line provisioning process generates RDT306 when the DMS switch receives an error response. This error response indicates the remote digital terminal (RDT) did not act on the request message sent from the switch. An error or a defective condition at the RDT caused this failure. The failure is not resolved at the switch.

The system also generates this log when the DMS switch does not receive a response from the RDT when a multiple timeout occurs. This log also removes the LINE121 log.

Format

The log report format for RDT306 is as follows:

```
RDT306 mmmdd hh:mm:ss ssdd TBL Line Provisioning Failure
  Location: <LEN>
  Status: Trouble alert
  Trouble: <trouble text>
  Action: Refer to trouble recovery documentation
  Associated IDT: nnn
  Object class: <object text>
  Operation: <operation text>
  Problem type: <problem text>
  Correction procedure: Correct problem at RDT then retry
```

Example

An example of log report RDT306 follows:

```
RDT306 FEB25 14:35:10 0123 TBL Line Provisioning Failure
  Location: RDT1 00 0 2 1
  Status: Trouble alert
  Trouble: Error response received from remote
  Action: Refer to trouble recovery documentation
  Associated IDT: 100
  Object class: 1311 (coin-line-termination)
  Operation: Create - e
  Problem type: Internal Error
  Correction procedure: Correct problem at RDT then retry
```

RDT306 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
TBL Line Provisioning Failure	Constant	Indicates the fault type.
Location	LEN	Indicates the line equipment number (LEN).
Status	Constant	Indicates Problem Alert.
Trouble	Constant	Either of the following messages appear: error response received from remote, or application failed to respond within expected period.
Associated IDT	Numeric	The IDT number for the LEN.
Object class	Constant	Indicates the type of object on which the operation is to perform. An example type is isdn-u-path-termination.
Operation	Symbolic text	Indicates CMIS operation.
Problem type	No response from RDT	The RDT is busy and does not respond in a given time.
	Security violation	The requested operation cannot perform because of an authorization restriction.
	Class instance conflict	The object instance is not a part of the given class.
	Complexity limitation	The system cannot perform the operation at the RDT because of the complicated parameters.
	Application busy error	The application that must process the message is busy at the RDT.
	Data store update problem	Indicates an error detected when system accesses the database at the RDT.
	Internal error	Indicates a hardware or software error at the RDT.
	Partial failure	A provisioning request is partially complete.

RDT306 (end)

(Sheet 2 of 2)

Field	Value	Description
	Unavailable feature	A feature required to process the message is not available at the RDT.
Correction procedure	Constant	"Correct problem at RDT then retry."

Action

When RDT line provisioning generates log, stated above, the system deletes all objects at the RDT and in the local object database.

The following table provides problem types and required actions.

Problem type	Action
No Response from RDT	Provision the line or delete line in table LNINV. Enter the same tuple again.
Security Violation (Access Denied)	Check if the request is correct.
Class instance conflict	Look for more information at the RDT, correct error and try to provision the line again.
Complexity limitation	Look for more information at the RDT, correct error and try to provision the line again.
Application busy error	Wait and try to provision the line again. Delete the line in table LNINV and enter the same tuple again.
Data store update problem	Look for more information at the RDT, correct error and try to provision the line again.
Internal error	Look for more information at the RDT, correct error and try to provision the line again.
Partial failure	Look for more information at the RDT, correct error and try to provision the line again.
Unavailable failure	Checks available features to provision line at RDT.

Associated OM registers

There are no associated OM registers.

RDT307

Explanation

The system generates log report RCT307. This report indicates when the system assigned the Message Waiting (MWT) option with the Message Waiting Lamp (MWL) notice, to an Epsilon source line card. This card does not support the MWL notice. The system assigns a notice when it cannot check the circuit for compatibility. For example, the system assigns a notice when the maintenance connection is not established or the circuit pack is missing.

The system normally generates this log when one of the following conditions occur:

- The background line audit attempted to return to service (RTS) a system-busied Epsilon card. This attempt occurs with the MWL notice assigned to that line card.
- Operating company personnel attempted to manually RTS a system-busied Epsilon card. This attempt occurs with the MWL notice assigned to that line card.
- The daily audit detected an Epsilon card with the MWL notice. The system generates one log each day for each line that has an MWL notice assigned to an Epsilon card. This audit runs one time every 24 h.

In all of the above conditions, the line remains in service or returns to service. Do not prevent service to a customer because of a problem with a single line option.

Format

The log report format for RDT307 is as follows:

```
RDT307 mmmdd hh:mm:ss ssdd <event type>  
  Location: <site> <ff> <u> <sh> <sl>  
  Status: <status>  
  Trouble: <trouble>  
  Action: <action>  
  Assigned IDT: <IDT_number>  
  Object class: <object class>  
  Description: <problem description>  
  Correction procedure: <steps to correct problem>
```

Example

An example of log report RDT307 follows:

RDT307 (continued)

RDT307 SEP1 16:45:10 0003 TBL Datafill Fault
Location: RDT1 04 0 01 24
Status: Trouble alert
Action: Check hardware against datafill
Associated IDT: 104
Object class: 006A (loopStRes_line_termination)
Description: System detected datafill error.
Line card NT4K65 cannot support MWL notice
Correction procedure: Replace card or reprovision service

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
event type	Character string	This field identifies the type of fault.
site	Character string	This field identifies the area of the source remote digital terminal (RDT).
ff	Numeric, 0 to 99	This field identifies the number of the source RDT frame.
u	Numeric, 0 to 9	This field identifies the number of the source RDT unit.
sh	Numeric	This field identifies the shelf number of the line.
sl	Numeric	This field identifies the slot number of the line.
status	Alarm raised	A field with this value indicates that the system raised an alarm.
	Alarm cleared	A field with this value indicates that the system cleared an alarm.
	Trouble alert	A field with this value indicates a problem condition on the line.
trouble	Character string	This field describes the trouble condition.
action	Character string	This field describes how to recover from the problem.

(Sheet 2 of 2)

Field	Value	Description
IDT number	Numeric	This field identifies the number of the affected integrated digital terminal (IDT).
object class	Numeric and character string	This field identifies the type of object in which the mismatch occurred.

Action

Check the circuit pack and assigned options, and change the notice or replace the card. A more appropriate notice can be STuttered Dial Tone (STD). Use the ADD or CHF SERVORD commands to change the notice. The Omega line source card supports MWL. Refer to *S/DMS AccessNode Module Replacement Procedures* for procedures to replace the Epsilon card with the Omega card.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

RDT308

Explanation

Log report RDT308 applies to remote digital terminals (RDTs) of type GENTMC or GENCSC. The system generates RDT308 when the system receives a threshold alert from an remote fiber terminal (RFT). The field Text of the log identifies the problem. Field Text is optional. The RDT does not always provide the field Text. The asterisks in the log header and the field Service condition of the log indicate the severity of the problem. Field Service condition is optional. The RDT does not always provide the field Service condition.

Format

The log report format for RDT308 is as follows:

```
<sv> RDT308 <date/time> <sq> TBL Threshold Alert
Location:  <site><ff><u>
Status:    <status>
Trouble:   Threshold alert
Action:    Refer to Trouble recovery documentation
Text:      <text>
Procedure: Clear the alarm condition at the RDT
Associated IDT:  <idt#> Network element: <NEID> <NENName>
RDT alarm record ID: <rID>
Correlated record ID: <cID>
Service condition:  <service_condition>
Object class:      <Object class# (Object class name)>
```

Example

An example of log report RDT308 follows:

```
**RDT308 FEB25 14:35:10 3706 TBL Threshold Alert
Location:  RDT1  03  0
Status:    Alarm raised
Trouble:   Threshold alert
Action     Refer to Trouble recovery documentation
Text:      None
Procedure: Clear the alarm condition at the RDT
Associated IDT:  3      Network element: 3 RALEIGH_AMEX_B1
RDT alarm record ID: 17
Correlated record ID: None
Service condition:  Service affecting
Object class:      008D (ds1_line_termination)
```

RDT308 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
<S V>	*	Indicates the severity of the alarm, " " = No alarm "*" = Minor alarm "***" = Major alarm "****" = Critical alarm
TBL Threshold Alert	Constant	Indicates the system received a threshold alert from the RFT.
Location <site> <ff><u>	Any valid site name as datafilled in table SITE	Identifies the source RDT site. This field, the Frame, and Unit numbers form the name of the RD entered in table RDTINV.
<ff>	0-99	Identifies the source RDT frame. This field, the area name, and Unit number form the name of the RDT entered in table RDTINV.
<u>	0-9	Identifies the source RDT unit. This field, the area name, and Frame number form the name of the RDT entered in table RDTINV.
Status <status>	Alarm raised, Alarm cleared, or Trouble alert	Indicates the state of the RFT as follows: - Alarm raised-log indicates the new alarm generates from the RFT. - Alarm cleared-log indicates an alarm clears at the RFT. - Trouble alert-log indicates an alarm of an severity that is not known.
Trouble	Threshold alert	Indicates the RDT alarm is a threshold alert.
Action	Refer to trouble recovery documentation	Describes the action. This field does not appear in an Alarm cleared report.
Text <text>	Any text as received from the RDT, or None	Indicates a text string from the alarm and indicates the type of the problem. If the RDT does not provide text, None appears.

RDT308 (continued)

(Sheet 2 of 3)

Field	Value	Description
Procedure	Clear the alarm condition at the RDT	Indicates operating company personnel must connect to the indicated RDT (Network element) to clear the alarm. This field does not appear for an Alarm cleared report.
Associated IDT <idt#>	0-255	Indicates the IDT to post under the PM level of the MAPCI terminal to track this RDT alarm.
Network element ID <NEID>	0-32767	Indicates the Network element ID of the RDT that started the alarm report.
Network element name <NEName>	Any text as entered in table RDTINV, or Unnamed	Indicates the Network element name of the RDT that started the alarm report. If the NENAME is not set to a text string, the Network element name prints unnamed.
RDT alarm record ID <rID>	0-9999, ????, or None	Indicates the record ID of the alarm at the RDT. This integer can perform as a log against the alarm at the RDT. If the system cannot determine record ID, ???? appears. If the RDT does not provide the record ID, None appears in this field.
Correlated record ID <cID>	0-9999, ????, or None	Indicates which alarm the system cleared at the RDT, if the report is an alarm cleared report. If the system cannot determine the correlated record ID, ???? appears. If RDT does not provide correlated record ID or the report is an alarm raised report, None appears in this field.
Service condition <service_condition>	Service-affecting, Non-service affecting, or Unknown	Indicates when this alarm condition affects subscriber service. This field does not appear if the log report documents an alarm that the system clears. If the RDT does not provide the service condition, Unknown appears in this field.

RDT308 (end)

(Sheet 3 of 3)

Field	Value	Description
Object class <Object class#>	An object class number of any valid object class for which the system generates the alarms at RDT	Indicates the class number of the object for which the system generated the event report.
Object class <Object class name>	An object class name of any valid object class for which the the system generates the alarms at RDT	Indicates the class name of the object for which the system generated the event report.

Action

When the system generates RDT308, perform the following actions:

1. Post the associated Integrated Digital Terminal (IDT) at the Peripheral Module (PM) level of the Maintenance and Administration Position command interpreter (MAPCI) terminal to track the alarm.
2. To clear the alarm at the RDT, refer to the correct RDT vendor documentation.

Associated OM registers

There are no associated OM registers.

Additional information

Field Correlated record ID of an Alarm cleared report matches the field RDT alarm record ID of the associated Alarm raised report. Field Correlated record ID is optional. The RDT does not always provide the field Correlated record ID.

Module RDTLOG defines the RDT308 log. To generate this log, establish a maintenance connection to a real or simulated RDT and report an RDT threshold alert.

RDT309

Explanation

Log report RDT309 applies to remote digital terminals (RDTs) of type GENTMC or GENCSC. The system generates the RDT309 when the system receives an Indeterminate alarm from an RFT. The field Text of the log identifies the problem. Field Text is optional. The RDT does not always provide the field Text. The asterisks in the log header and the field Service condition of the log indicate the severity of the problem. Field Service condition is optional. The RDT does not always provide the field Service condition.

Format

The log report format for RDT309 is as follows:

```
<sv> RDT309 <date/time> <sq> TBL Indeterminate alarm
Location:  <site><ff><u>
Status:    <status>
Trouble:   Indeterminate alarm
Action:    Refer to Trouble recovery documentation
Text:      <text>
Procedure: Clear the alarm condition at the RDT
Associated IDT:  <idt#> Network element: <NEID> <NENName>
RDT alarm record ID: <rID>
Correlated record ID: <cID>
Service condition:  <service_condition>
Object class:      <Object class# (Object class name)>
```

Example

An example of log report RDT309 follows:

```
*RDT309 FEB25 14:35:10 3706 TBL Indeterminate alarm
  Location:  RDT1  03  0
  Status:    Alarm raised
  Trouble:   Indeterminate alarm
  Action     Refer to Trouble recovery documentation
  Text:      None
  Procedure: Clear the alarm condition at the RDT
  Associated IDT:  3      Network element: 3 RALEIGH_AMEX_B1
  RDT alarm record ID: 17
  Correlated record ID: None
  Service condition:  Non-Service affecting
  Object class:      0093 (network_element)
```

RDT309 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 3)

Field	Value	Description
<sv>	*	Indicates the severity of the alarm: " " = No alarm "*" = Minor alarm "***" = Major alarm "****" = Critical alarm
TBL Indeterminate Alarm	Constant	Indicates system received a transmission alarm from the RFT.
Location <site><ff><u>	Any valid site name as entered in table SITE	Identifies the source RDT site. This field, the Frame, and Unit numbers form the name of the RDT entered in table RDTINV.
<ff>	0-99	Identifies the source RDT frame. This field, the site name, and Unit number form the name of the RDT entered in table RDTINV.
<u>	0-9	Identifies the source RDT unit. This field, the site name, and Frame number form the name of the RDT entered in table RDTINV.
Status <status>	Alarm raised, Alarm cleared, or Trouble alert	Indicates the state of the RFT as follows: - Alarm raised-log indicates new alarm generates from the RFT. - Alarm cleared-log indicates an alarm cleared at the RFT. - Trouble alert-log indicates an alarm of an unknown severity..
Trouble	Indeterminate alarm	Indicates the problem that caused the RDT alarm is not known.
Action	Refer to trouble recovery documentation	Describes the action. This field does not appear in an Alarm cleared report.
Text <text>	Any text as received from the RDT, or None	Indicates a text string from the alarm and indicates the type of problem. If the RDT does not provide text, None appears.

RDT309 (continued)

(Sheet 2 of 3)

Field	Value	Description
Procedure	Clear the alarm condition at the RDT	Indicates operating company personnel must connect to the indicated RDT (Network element) to clear the alarm. This field does not appear for an Alarm cleared report.
Associated IDT <idt#>	0-255	Indicates the IDT to post under the PM level of the MAPCI terminal to track this RDT alarm.
Network element ID <NEID>	0-32767	Indicates the Network element ID of the RDT that started the alarm report.
Network element name <NEName>	Any text as entered in table RDTINV, or Unnamed	Indicates the Network element name of the RDT that started the alarm report. If the NENAME is not set to a text string, the Network element name prints unnamed.
Service condition <service_condition>	Service-affecting, Non-service affecting, or Unknown	Indicates when this alarm condition affects subscriber service. This field does not appear if the log report documents an alarm that clears. If the RDT does not provide the service condition, Unknown appears in this field.
RDT alarm record ID <rID>	0-9999, ????, or None	Indicates the record ID of the alarm at the RDT. The system can use this integer as a log against the alarm at the RDT. If the record ID is not determined, ???? appears. If the RDT does not provide the record ID, No record ID appears in this field.
Correlated record ID <cID>	0-9999, ????, or None	Indicates which alarm at the RDT cleared, if the report is an alarm cleared report. If the correlated record ID is not determined, ???? appears. If RDT does not provide correlated record ID or the report is an alarm raised report, None appears in this field.

RDT309 (end)

(Sheet 3 of 3)

Field	Value	Description
Object class <Object class#>	An object class number of any valid object class for which the system generates the alarms at RDT	Indicates the class number of the object for which the system generates the event report.
Object class <Object class name>	An object class name of any valid object class for which the system generates the alarms at RDT	Indicates the class name of the object for which the system generates the event report.

Action

When the system generates log RDT309, perform the following actions:

1. Post the associated Integrated Digital Terminal (IDT) at the Peripheral Module (PM) level of the Maintenance and Administration Position command interpreter (MAPCI) terminal to track the alarm.
2. To clear the alarm at the RDT, refer to the correct RDT vendor documentation.

Associated OM registers

There are no associated OM registers.

Additional information

Field Correlated record ID of an Alarm cleared report matches the field RDT alarm record ID of the equivalent Alarm raised report. Field Correlated record ID is optional. The RDT does not always provide the field Correlated record ID.

Module RDTLOG defines the RDT309 log. To generate this log, establish a maintenance connection to a real or simulated RDT and report an RDT Indeterminate alarm.

RDT310

Explanation

Log report RDT310 indicates that a required resource is not available at the remote digital terminal (RDT). Log report RDT310 includes two lines of text. The DMS application that generates the log provides this text.

Format

The log report format for RDT310 is as follows:

```
RDT310 <d.ate> <time> <sequence-number> TBL Resource Unavailable
Location:      <site> <frame> <unit>
Status:        Trouble alert
Trouble:        Error response received from remote
Action:         Refer to Trouble recovery documentation
Problem:        <description-text>
Resource:       <description-text>
Associated IDT: <idt#> Network element: <NEID> <NEName>
```

Example

An example of log report RDT310 follows:

```
RDT310 FEB25 14:35:10 3706 TBL Resource Unavailable
Location: RDT 05 0
Status:   Trouble alert
Trouble:   Error response received from remote
Action    Refer to Trouble recovery documentation
Problem:   Alarm count list object create failed
Resource:  Alarm count list object not supported by the RDT
Associated IDT: 3      Network element: 3 RALEIGH_AMEX_B1
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
TBL Resource unavailable	Constant	Indicates an RDT resource is not available.
Location <site><ff><u>	Any valid site name as datafilled in table SITE	Identifies the source RDT area. The source RDT area, the Frame, and Unit numbers contain the name of the RDT e in table RDTINV.

RDT310 (continued)

(Sheet 2 of 2)

Field	Value	Description
<ff>	0-99	Identifies the source RDT frame. The source RDT frame, the area name, and unit number contain the name of the RDT in table RDTINV.
<u>	0-9	Identifies the source RDT unit. The source RDT unit, the area name, and Frame number contain the name of the RDT datafilled in table RDTINV.
Status <status>	Trouble alert	Indicates the log reports a problem condition because a resource is not available at the RDT.
Trouble	Error response received from remote	Indicates an RDT resource is not available.
Action	Refer to trouble recovery documentation	Indicates that operating company personnel must consult the correct RDT vendor documentation to check this problem.
Problem	Any text as defined by the application generating the log	Indicates the type of the problem. This field is optional and can be blank.
Resource	Any text as defined by the application generating the log	Indicates the resource of the problem.
Associated IDT <idt#>	0-255	Indicates the IDT to post under the PM level of the MAPCI terminal to track this RDT alarm.
Network element ID <NEID>	0-32767	Indicates the Network element ID of the RDT when the resource is not available.
Network element name <NEName>	Any text as datafilled in table RDTINV, or Unnamed	Indicates the Network element name of the RDT. If the NENAME is not set to a text string, the system prints Unnamed.

Action

When the system generates log RDT310, there is no immediate action required.

RDT310 (continued)

Associated OM registers

There are no associated OM registers.

Additional information

The system can generate RDT310 at association installation of RDT. Field Problem is optional and indicates the alert type. Field Resource indicates the "Alarm count list object not supported by the RDT." Consult the RDT vendor documentation to determine the limit of the RDT software support for this resource.

Module RDTLOG defines the RDT310 log. The content of the RDT310 log depends on the application that generates the log. The system generates this log in the following methods:

- the system allows an RDT alarm audit to run on an RDT of different types of GENTMC or GENCSC. GENTMC and GENCSC do not support the Alarm Count List object class. Check this condition after installation of association. Check the condition after the associated IDT or EOC maintenance connection becomes INSV from an OFFL condition).
- if the Event Report Control (ERC) process cannot create an ERC object, the Problem field indicates that creation of the object failed. The Resource field indicates the cause of the failure.
 - If the Resource field is "Event report control object not supported by the RDT," the RDT does not support the ERC object. The ERC process tries to create the ERC object again. This ERC process occurs when another association installation occurs and the system receives a Threshold Alert Event Report.
 - If the Resource field is "Failed to create event report control object," the RDT supports the ERC object. An error occurs when the ERC process tried to create the object. The ERC process tries to create the

ERC object again on the next association installation or Trouble Alert notice.

- if the RDT sends a Rose Reject. The type of Rose Reject message controls the display of the Resource field. The Resource field displays one of the following values:
 - Rose P-Reject: General Problem
 - APDU not recognized
 - Mistyped APDU
 - Badly structured APDU
 - Rose U-Reject: Cause Problem
 - Duplicate invocation
 - operation not recognized
 - Mistyped arguments
 - Resource limit
 - Initiator releases
 - linked ID not recognized
 - Linked response unexpected not expected
 - child operation that is not expected
 - Rose U-Reject: Return Result Problem
 - cause not recognized
 - Result response not expected
 - Mistyped result
 - Rose U-Reject: Return Error Problem
 - cause not recognized
 - Error response not expected
 - error not recognized
 - error not expected
 - Mistyped parameter

The system does not generate a log for an IDT that has the discriminator state set to false.

RDT600

Explanation

The system generates remote digital terminal (RDT600) when the database audit process finds a mismatch. This mismatch occurs between object data in the RDT and the computing module (CM). The system corrects the fault automatically.

Format

The log report format for RDT600 is as follows:

```
RDT600 mmmdd hh:mm:ss ssdd INFO Audit Resolved
Location:      <site><ff><u>
Resolved trouble: Data not synchronized
Object class:  <object class>
Description:   Object data mismatch between RDT and CM
```

Example

An example of log report RDT600 follows:

```
*RDT600 FEB25 14:35:10 0123 INFO Audit Resolved
Location: RDT1 00 0
Resolved trouble: Data not synchronized
Object class: 563 (mtau)
Description: Object data mismatch between RDT and CM
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO Audit Resolved	Constant	Indicates the database audit process found a mismatch between the RDT and the CM.
Location:	RDT	Identifies the source RDT site.
<ff>	0-99	Identifies the source RDT frame.
<u>	0-9	Identifies the source RDT unit.
Resolved trouble: Data not synchronized	Constant	Indicates that data is not in sync.

(Sheet 2 of 2)

Field	Value	Description
Object class	Symbolic text	Provides the type of object in which the mismatch occurs.
Description	Symbolic text	Indicates where the data mismatch occurred.

Action

This log is for information only. There is no action required. A mismatch can indicate another problem. The operating company personnel must note this log and check for more errors conditions.

Associated OM registers

There are no associated OM registers.

RDT601

Explanation

The system generates the RDT601 log when the lines that provision audit process find a mismatch. This mismatch occurs between line data in the remote digital terminal (RDT) and the computing module (CM). The system starts a procedure to correct the fault.

Format

The log report format for RDT601 is as follows:

```
RDT601 mmmdd hh:mm:ss ssdd INFO Audit Action
Location:      <site><ff><u>
Acting on trouble: Data not synchronized
Object class:  <object class>
Description:   Object data mismatch between RDT and CM
```

Example

An example of log report RDT601 follows:

```
*RDT601 FEB25 14:35:10 0123 INFO Audit Action
Location: RDT1 00 0
Acting on trouble: Data not synchronized
Object class: 4e8 (loopGndBus_line_termination)
Description: Object data mismatch between RDT and CM
```

Field descriptions

The table following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO Audit Action	Constant	Indicates the audit process found a mismatch between the RDT and the CM.
Location: <site>	RDT	Identifies the source RDT area.
<ff>	0-99	Identifies the source RDT frame.
<u>	0-9	Identifies the source RDT unit.
Acting on trouble: Data not synchronized	Constant	Indicates that data is not in sync.

(Sheet 2 of 2)

Field	Value	Description
Object class	Symbolic text	Provides the type of object in which the mismatch occurs.
Description: Object data mismatch between RDT and CM	Constant	Indicates a data mismatch.

Action

This log is for information only. There is no action required. A mismatch can indicate another problem. The operating company personnel must note this log and check for other error conditions.

Associated OM registers

There are no associated OM registers.

REPL100

Explanation

The Report Log (EPL) subsystem generates REPL100. The subsystem does this when the system updates an entry in Table REPLCODE during call processing with the journal file not active. The log warns that the journal file does not receive the tuple update.

At the present time, the system does not generate this log because updates to Table REPLCODE from a call process are for future use.

Format

The log report design for REPL100 is as follows:

```
REPL100 mmmdd hh:mm:ss ssdd INFO NO JOURNAL FILE
        REPLCODE TABLE UPDATE, NO JFILE.
        Updated Contents Are: repltxt
```

Example

An example of log report REPL100 follows:

```
REPL100 AUG17 19:08_05 INFO NO JOURNAL FILE
        REPLCODE TABLE UPDATE, NO JFILE.
        Updated Contents Are: REPL1 123 7224111 NSC COSMAP1
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO NO JOURNAL FILE	Constant	Indicates that the journal file is not active.
REPLCODE TABLE UPDATE, NO JFILE.	Constant	Indicates that the system updated Table REPLCODE while the journal file was not active.
Updated Contents Are	Symbolic text	Contains the tuple update the user entered. Refer to the data schema section of the <i>Translations Guide</i> for more information.

Action

Mount the journal file to save the updates or ignore the log. If the user ignores the log, the change does not appear in the journal file.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

RMAN100

Explanation

The Automatic Call Distribution (ACD) remote load management (RMAN) subsystem, a part of the ACD management information system, generates this report when the down stream processor (DSP) issues a REASSIGN AGENT POSITION command.

The ACD remote load management provides a DSP the capability of issuing ACD load management commands remotely.

Format

The format for log report RMAN100 follows:

```
RMAN100 mmmdd hh:mm:ss ssdd INFO REASSIGN_AGENT_POS
SESSION ID:                nn
POOL                       poolname
SUBPOOL:                   subpoolname
NEW ACD GROUP:             newgroupname
NEW SUPERVISOR ID          idnbr
AGENT POSITION ID           idnbr
JOURNAL FILE ACTIVE:      answrtxt
```

Example

An example of log report RMAN100 follows:

```
RMAN100 SEP05 18:14:33 4827 INFO REASSIGN_AGENT_POS
SESSION ID:                2
POOL;                     POOL1
SUBPOOL;                   SUBPOOL1
NEW ACD GROUP:             ACDGRP1
NEW SUPERVISOR ID          0023
AGENT POSITION ID           0010
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
INFO REASSIGN_AGENT_POS	Constant	Indicates the DSP issues a REASSIGN AGENT POSITION command.
SESSION ID: nn	0-14	Specifies the number of the session in use.
POOL	Up to 16 characters	Identifies the pool of ACD groups associated with the data stream. ACD groups are associated with one data stream at a given time. Only one pool of ACD groups is associated with a data stream at a given time.
SUBPOOL: subpoolname	Up to 16 characters	Identifies the subpool within a pool of ACD groups. Subpools are a method of ensuring switch and ACD customer security. Normally, all ACD groups belonging to an ACD customer are grouped within one subpool.
NEW ACD GROUP	Up to 16 characters	Identifies the ACD group to which the agent position is reassigned.
NEW SUPERVISOR ID	0001-9999	Identifies the position identification (ID) of the supervisor to which the agent is reassigned.
AGENT POSITION ID	0001-9999	Identifies the position ID of the reassigned agent.
JOURNAL FILE ACTIVE	YES, NO	Indicates whether or not the journal file was active at the time of the remote load management command.

Action

No action is required.

Associated OM registers

None

RMAN101

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem is part of the ACD Management Information System. The ACD RMAN generates RMAN101 when the down stream processor (DSP) issues a REASSIGN ACD DIRECTORY NUMBER command.

The ACD RMAN provides a DSP the ability to issue ACD Load Management commands from a distance.

Format

The log report format for RMAN101 is as follows:

```
RMAN101 mmmdd hh:mm:ss ssdd INFO REASSIGN_ACD_DN
SESSION ID:      nn
POOL:            poolname
SUBPOOL:         subpoolname
OLD GROUP:       oldgroupname
NEW GROUP:       newgroupname
DN:              nn
PRIMARY OR SUPPLEMENTARY: answrtxt
P1: n   P2: n
JOURNAL FILE ACTIVE:      answrtxt
```

Example

An example of log report RMAN101 follows:

```
RMAN101 AUG23 09:45:15 1234 INFO REASSIGN_ACD_DN
SESSION ID:      2
POOL:            POOL1
SUBPOOL:         SUBPOOLA
OLD GROUP:       ACDGRP1
NEW GROUP:       ACDGRP2
DN:              6
PRIM OR SUPP:    PRIM
P1: 0   P2: 1
JOURNAL FILE ACTIVE:      YES
```

RMAN101 (continued)**Field descriptions**

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO REASSIGN_ACD_DN	Constant	Indicates that the DSP issued a REASSIGN ACD DN command.
SESSION ID	0-14	Specifies the number of the session in use.
POOL	Up to 16 characters	Identifies the pool of ACD groups that associate with the data stream. ACD groups can be associated with only one data stream at a time. Only one pool of ACD groups can be associated with each data stream at a given time.
SUBPOOL: subpoolname	Up to 16 characters	Identifies the subpool within a pool of ACD groups. Subpools make sure the switch and ACD customer are secure. ACD groups that belong to an ACD customer are in groups in each subpool.
OLD GROUP: oldgroupname	Up to 16 characters	Identifies the ACD group to which the ACD directory number (DN) is assigned.
NEW GROUP: newgroupname	Up to 16 characters	Identifies the ACD group to which the ACD DN is assigned.
DN: nn	0-16	Identifies the ACD DN that is assigned again.
PRIM OR SUPP: answrtxt	PRIM or SUPP	Indicates if the ACD DN that is assigned again is a primary or auxiliary ACD DN in the new group.
P1: n	0-3	The field PRIM OR SUPP can be PRIM. When this event occurs, P1: n indicates the trunk priority that the primary ACD DN is assigned. If the field is SUPP, P1:n indicates the general priority of the auxiliary ACD DN.

RMAN101 (end)

(Sheet 2 of 2)

Field	Value	Description
P2: n	0-3	The field PRIM OR SUPP can be PRIM. When this event occurs, P2: n indicates the line priority that the primary ACD DN is assigned. If the field is SUPP, this field appears.
JOURNAL FILE ACTIVE	YES, NO	Indicates if the journal file was active at the time of the remote load management command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN102**Explanation**

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem is a part of the ACD Management Information System. The ACD RMAN generates RMAN102 when the down stream processor (DSP) issues a CHANGE MAXWAIT command.

The ACD RMAN provides a DSP the ability to issue ACD load management commands from a distance.

Format

The log report format for RMAN102 is as follows:

```
RMAN102 mmmdd hh:mm:ss ssdd INFO CHANGE_MAXWAIT
SESSION ID:      nn
POOL:            poolname
SUBPOOL:         subpoolname
ACD GROUP        groupname
NEW MAXWAIT: nnnn SECS
JOURNAL FILE ACTIVE:      answrtxt
```

Example

An example of log report RMAN102 follows:

```
RMAN102 AUG23 09:45:15 1234 INFO CHANGE_MAXWAIT
SESSION ID:      3
POOL:            POOL1
SUBPOOL:         SUBPOOLC
ACD GROUP:       ACDGRP2
NEW MAXWAIT      30 SECS
JOURNAL FILE ACTIVE:      YES
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO CHANGE_MAXWAIT	Constant	Indicates that the DSP issued a CHANGE MAXWAIT command.
SESSION ID	0-14	Specifies the number of the current session.

RMAN102 (end)

(Sheet 2 of 2)

Field	Value	Description
POOL	Up to 16 characters	Identifies the pool of ACD groups associated with the data stream. The ACD groups are associated with only one data stream at a time. Only one pool of ACD groups can be associated with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool within a pool of ACD groups. Subpools make sure the switch and ACD customer are secure. The ACD groups that belong to an ACD customer are in groups in each subpool.
ACD GROUP	Up to 16 characters	Identifies the ACD group for which the MAXWAIT value is changed.
NEW MAXWAIT SECS	0-1800	Indicates the maximum wait time in seconds. This wait time is the time that a call must wait in the incoming call queue. The system must present the call to an agent position in the maximum wait time.
JOURNAL FILE ACTIVE	YES, NO	Indicates if the journal file was active at the time of the remote load management command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN103**Explanation**

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem is a part of the ACD Management Information System. This subsystem generates this report when the down stream processor (DSP) issues a CHANGE MAXCQSIZE command.

The RMAN allows a DSP to issue ACD load management reports remotely.

Format

The log report format for RMAN103 is as follows:

```
RMAN103 mmmdd hh:mm:ss ssdd INFO CHANGE_MAXCQSIZE
SESSION ID: nn
POOL: poolname
SUBPOOL: subpoolname
ACD GROUP: groupname
NEW MAXQSIZE: nnn
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN103 follows:

```
RMAN103 AUG23 09:45:15 1234 INFO CHANGE_MAXCQSIZE
SESSION ID: 10
POOL: POOL1
SUBPOOL: SUBPOOL2
ACD GROUP: ACDGRP2
NEW MAXQSIZE: 20
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
CHANGE_MAXCQSIZE	Constant	Indicates that the DSP issued a CHANGE MAXCQSIZE command.
SESSION ID	0-14	Indicates the number of the session in use.

RMAN103 (end)

(Sheet 2 of 2)

Field	Value	Description
POOL	Up to 16 characters	Identifies the pool of ACD groups associated with the data stream. The ACD groups can associate with one data stream at a given time. One pool of ACD groups can associate with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools are a method of security for switches and ACD customers. Normally, all ACD groups that belong to an ACD customer are together in each subpool.
ACD GROUP	Up to 16 characters	Identifies the ACD group for which the MAXCQSIZE value is changed.
NEW MAXCQSIZE	0-255	Indicates the new maximum call queue size. Indicates the number of calls that the system can queue in the incoming call queue at any one point in time.
JOURNAL FILE ACTIVE	YES, NO	Indicates if the journal file was active at the time of the remote load management command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN104

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem, is a part of the ACD Management Information System. The subsystem generates this report every time the down stream processor (DSP) issues a CHANGE THROUTE command.

The ACD RMAN allows a DSP to issue ACD load management commands remotely.

Format

The log report format for RMAN104 is as follows:

```
RMAN104 mmmdd hh:mm:ss ssdd INFO CHANGE_THROUTE
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
NEW THROUTE INDEX:   nnnn
NEW THROUTE TABLE:  tablename
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN104 follows:

```
RMAN104 AUG23 09:45:15 1234 INFO CHANGE_THROUTE
SESSION ID:          14
POOL:                POOL1
SUBPOOL:             SUBPOOLA
ACD GROUP:           ACDGRP1
NEW THROUTE INDEX:   1001
NEW THROUTE TABLE:  OFRT
JOURNAL FILE ACTIVE: YES
```

RMAN104 (end)

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO CHANGE_THROUTE	Constant	Indicates that the DSP issued a CHANGE THROUTE command.
SESSION ID	0-14	Indicates the number of the session in use.
POOL	Up to 16 characters	Identifies the pool of ACD groups associated with the data stream. The ACD groups can associate with one data stream at a given time. One pool of ACD groups can associate with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools are a method of security for switches and ACD customers. Normally, ACD groups that belong to an ACD customer are together in each subpool.
ACD GROUP	Up to 16 characters	Identifies the ACD group for which the threshold route must change.
NEW THROUTE INDEX	0-1023	Indicates the route list in the routing table for use with the new threshold route index.
NEW THROUTE TABLE	OFRT, IBNRTE	Specifies the new routing table for use with the new threshold route.
JOURNAL FILE ACTIVE	YES, NO	Indicates if the journal file was active at the time of the remote load management command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN105

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem is a part of the ACD Management Information System. The subsystem generates this report every time the down stream processor (DSP) issues a CHANGE NSROUTE command.

The ACD RMAN allows a DSP to issue ACD load management commands remotely.

Format

The log report format for RMAN105 is as follows:

```
RMAN105 mmmdd hh:mm:ss ssdd INFO CHANGE_NSROUTE
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
NEW NSROUTE INDEX:   nnnn
NEW NSROUTE TABLE:  tablename
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN105 follows:

```
RMAN105 AUG23 09:45:15 1234 INFO CHANGE_NSROUTE
SESSION ID:          2
POOL:                POOL1
SUBPOOL:             SUBPOOLA
ACD GROUP:           ACDGRP1
NEW THROUTE INDEX:   55
NEW THROUTE TABLE:  IBNRTE
JOURNAL FILE ACTIVE: YES
```

RMAN105 (end)

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
CHANGE_NSROUTE	Constant	Indicates that the DSP issued a CHANGE NSROUTE command.
SESSION ID	0-14	Indicates the number of the session in use.
POOL	Up to 16 characters	Identifies the pool of ACD groups associated with the data stream. The ACD groups can associate with one data stream at a given time. One pool of ACD groups can associate with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool within a pool of ACD groups. Subpools are a method of security for switches and ACD customers. Normally, all ACD groups that belong to an ACD customer are grouped in each subpool.
ACD GROUP	Up to 16 characters	Identifies the ACD group for which the night service route must be changed.
NEW NSROUTE INDEX	0-1023	Specifies the route list in the routing table for use with the new night service route.
NEW THROUTE TABLE	OFRT, IBNRTE	Specifies the new routing table for use with the night service route.
JOURNAL FILE ACTIVE	YES, NO	Indicates if the journal file was or was not active at the time of the remote load management command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN106

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem is a part of the ACD Management Information System. The subsystem generates this report every time the down stream processor (DSP) issues a CHANGE EHOVFL command.

The ACD RMAN allows a DSP to issue ACD load management commands remotely.

Format

The log report format for RMAN106 is as follows:

```
RMAN106 mmmdd hh:mm:ss ssdd INFO CHANGE_EHOVFL
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
EHOVFL GRP1:         groupname
EHOVFL GRP2:         groupname
EHOVFL GRP3:         groupname
EHOVFL GRP4:         groupname
EHOVFL NUMBER:      n
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN106 follows:

```
RMAN106 AUG23 09:45:15 1234 INFO CHANGE_EHOVFL
SESSION ID:          3
POOL:                POOL1
SUBPOOL:             SUBPOOL1
ACD GROUP:           ACDGRP1
EHOVFL GRP1:         ACDGRP11
EHOVFL GRP2:         ACDGRP22
EHOVFL GRP3:         ACDGRP33
EHOVFL GRP4:         ACDGRP44
EHOVFL NUMBER:      4
JOURNAL FILE ACTIVE: YES
```

RMAN106 (end)

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO CHANGE_ EHOVFL	Constant	Indicates that the DSP issued a CHANGE EHOVFL command to change the enhanced overflow list.
SESSION ID	0-14	Indicates the number of the session in use.
POOL	Up to 16 characters	Identifies the ACD groups associated with the data stream. ACD groups can associate with one data stream at a given time. One pool of ACD groups can associate with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool within a pool of ACD groups. Subpools are a method of security for switches and ACD customers. Normally, all ACD groups that belong to an ACD customer are together in each subpool.
ACD GROUP	Up to 16 characters	Identifies the ACD group for which the enhanced overflow list must be changed.
EHOVFL GROUP1	Up to 16 characters	Identifies the first ACD group in the enhanced overflow list.
EHOVFL GROUP2	Up to 16 characters	Identifies the second ACD group in the enhanced overflow list.
EHOVFL GROUP3	Up to 16 characters	Identifies the third ACD group in the enhanced overflow list.
EHOVFL GROUP4	Up to 16 characters	Identifies the fourth ACD group in the enhanced overflow list.
EHOVFL NUMBER	0-4	Indicates the number of ACD groups in the enhanced overflow list.
JOURNAL FILE ACTIVE	YES, NO	Indicates if the journal file was or was not active at the time of the remote load management command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN107

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem is a part of the ACD Management Information System. The subsystem generates this report every time the down stream processor (DSP) issues a CHANGE ACD DN PRIORITY command.

The ACD RMAN allows a DSP to issue ACD load management commands remotely.

Format

The log report format for RMAN107 is as follows:

```
RMAN107 mmmdd hh:mm:ss ssdd INFO CHANGE_ACD_DN_
PRIORITY
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
DN:                  nn
PRIM OR SUPP:        answrtxt
P1: n   P2:          n
P2:                  n
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN107 follows:

```
RMAN107 AUG23 09:45:15 1234 INFO CHANGE_ACD_DN_PRIORITY
SESSION ID:          2
POOL:                POOL1
SUBPOOL:             SUBPOOL1
ACD GROUP:           ACDGRP1
DN:                  6
PRIM OR SUPP:        PRIM
P1: 1   P2: 0
P2:                  0
JOURNAL FILE ACTIVE: YES
```

RMAN107 (continued)**Field descriptions**

The following table describes each field in the log report:

Field	Value	Description
INFO CHANGE_ACD_DN_PRIORITY	Constant	Indicates that the DSP issued a CHANGE ACD DN PRIORITY command.
SESSION ID	0-14	Indicates the number of the session in use.
POOL	Up to 16 characters	Identifies the pool of ACD groups associated with the data stream. The ACD groups can associate with one data stream at a given time. One pool of ACD groups can associate with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool within a pool of ACD groups. Subpools are a method of security for switches and ACD customers. Normally, all ACD groups that belong to an ACD customer are grouped within each subpool.
ACD GROUP	Up to 16 characters	Identifies the ACD group for which the priorities of the ACD DN must change.
DN	0-16	Identifies the directory number (DN) ID that is the sequence in which the system assigned the ACD DN to the ACD group.
PRIM OR SUPP	PRIM, SUPP	Indicates if the ACD DN that has a changing priority is a primary or supplementary ACD DN.
P1	0-3	If the field PRIM OR SUPP is PRIM, this field indicates the trunk priority that the system assigns the primary ACD DN to. If SUPP, this field indicates the general priority of the supplementary ACD DN.
P2	0-3	If the field PRIM OR SUPP is PRIM, this field indicates the line priority that the system assigns the primary ACD DN to. If SUPP, this field appears blank.
JOURNAL FILE ACTIVE	YES, NO	Indicates if the journal file was or was not active at the time of the RMAN command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN108

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem is a part of the ACD Management Information System. The subsystem generates this report every time the down stream processor (DSP) issues a CHANGE AUDIO GROUP command.

The ACD RMAN allows a DSP to issue ACD Load Management commands remotely.

Format

The log report format for RMAN108 is as follows:

```
RMAN108 mmmdd hh:mm:ss ssdd INFO CHANGE_AUDIO_GROUP
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
NEW AUDIO GROUP:     groupname
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN108 follows:

```
RMAN108 AUG23 09:45:15 1234 INFO CHANGE_AUDIO_GROUP
SESSION ID:          2
POOL:                POOL1
SUBPOOL:             SUBPOOL1
ACD GROUP:           ACDGRP1
NEW AUDIO GROUP:     AUDIO1
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO CHANGE_AUDIO_GROUP	Constant	Indicates that the DSP issued a CHANGE AUDIO GROUP command
SESSION ID	0-14	Specifies the number of the session in use.

(Sheet 2 of 2)

Field	Value	Description
POOL	Up to 16 characters	Identifies the pool of ACD groups associated with the data stream. The ACD groups can associate with one data stream at a given time. One pool of ACD groups can associate with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools are a method of security for switches and ACD customers. Normally, all ACD groups that belong to an ACD customer are together in each subpool.
ACD GROUP	Up to 16 characters	Identifies the ACD group for which the AUDIO group must be changed.
NEW AUDIO GROUP	AUDIO1-AUDIO15	Indicates the new AUDIO group to use to give announcements and/or music to callers queued in the incoming call queue.
JOURNAL FILE ACTIVE	YES, NO	Indicates if the journal file was or was not active at the time of the RMAN command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN109

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem is a part of the ACD Management Information System. The subsystem generates this report every time the down stream processor (DSP) issues a CHANGE RANTH command.

The ACD RMAN allows a DSP to issue ACD Load Management commands remotely.

Format

The log report format for RMAN109 is as follows:

```
RMAN109 mmmdd hh:mm:ss ssdd INFO CHANGE_RANTH
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
NEW AUDIO RANTH:nn SECS
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN109 follows:

```
RMAN109 AUG23 09:45:15 1234 INFO CHANGE_RANTH
SESSION ID:          2
POOL:                POOL1
SUBPOOL:             SUBPOOL1
ACD GROUP:           ACDGRP1
NEW AUDIO RANTH:     45 SECS
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO CHANGE_RANTH	Constant	Indicates that the DSP issued a CHANGE RANTH command to change the recorded announcement threshold.
SESSION ID	0-14	Indicates the number of the session in use.

(Sheet 2 of 2)

Field	Value	Description
POOL	Up to 16 characters	Identifies the pool of ACD groups associated with the data stream. The ACD groups can associate with one data stream at a given time. One pool of ACD groups can associate with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool within a pool of ACD groups. Subpools are a method of security for switches and ACD customers. Normally, all ACD groups that belong to an ACD customer are together in one subpool.
ACD GROUP	Up to 16 characters	Identifies the ACD group for which the system changes the recorded announcement threshold.
NEW RANTH	0, 6-60	Indicates the new recorded announcement threshold time in seconds.
JOURNAL FILE ACTIVE	YES, NO	Indicates if the journal file was or was not active at the time of the remote load management command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN110

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem is a part of the ACD Management Information System. The subsystem generates this report every time the down stream processor (DSP) issues a CHANGE QTHRESHOLD command.

The ACD RMAN allows a DSP to issue ACD Load Management commands remotely.

Format

The log report format for RMAN110 is as follows:

```
RMAN110 mmmdd hh:mm:ss ssdd INFO CHANGE_QTHRESHOLD
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
QTHRESHOLDS:         queueid
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN110 follows:

```
RMAN110 AUG23 09:45:15 1234 INFO CHANGE_QTHRESHOLD
SESSION ID:          3
POOL:                POOL1
SUBPOOL:             SUBPOOLC
ACD GROUP:           ACDGRP1
QTHRESHOLDS:         T2
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO CHANGE_QTHRESHOLD	Constant	Indicates that the DSP issued a CHANGE QTHRESHOLD command.
SESSION ID	0-14	Indicates the number of the session in use.

(Sheet 2 of 2)

Field	Value	Description
POOL	Up to 16 characters	Identifies the pool of ACD groups associated with the data stream. The ACD groups can only associate with one data stream at a given time. One pool of ACD groups can associate with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool with a pool of ACD groups. Subpools are a method of security for switches and ACD customers. Normally, all ACD groups that belong to an ACD customer are together in one subpool.
ACD GROUP	Up to 16 characters	Identifies the ACD groups that needs the QTHRESHOLD value changed.
QTHRESHOLDS	T1, T2, T3	Indicates the new MSQS thresholds for the specified ACD group, where T1, T2, and T3 are in the range 10 to 2400.
JOURNAL FILE ACTIVE	YES, NO	Indicates if the journal file was or was not active at the time of the RMAN command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN111

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem is a part of the ACD Management Information System. The subsystem generates this report every time the down stream processor (DSP) issues a CHANGE ACDDNNAME command.

The ACD RMAN allows a DSP to issue ACD load management commands remotely.

Format

The log report format for RMAN111 is as follows:

```
RMAN111 mmmdd hh:mm:ss ssdd INFO CHANGE_ACDDNNAME
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
ACDDNID:             idnbr
ACDDNNAME:           newgroupname
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN111 follows:

```
RMAN111 AUG23 09:45:15 1234 INFO CHANGE_ACDDNNAME
SESSION ID:          2
POOL:                POOL1
SUBPOOL:             SUBPOOL1
ACD GROUP:           ACDGRP1
ACDDNID:             1
ACDDNNAME:           ACDGRP2
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO CHANGE_ ACDDNNAME	Constant	Indicates that the DSP has been issued a CHANGE ACDDNNAME command.
SESSION ID	0-14	Specifies the number of the session in use.
POOL	Up to 16 characters	Identifies the pool of ACD groups associated with the data stream. The ACD groups can associate with one data stream at a given time. Only one pool of ACD groups can associate with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool within a pool of ACD groups. Subpools are a method of security for switches and ACD customers. Normally, all ACD groups that belong to an ACD customer are together in one subpool.
ACD GROUP	Up to 16 characters	Identifies the ACD group to which the system assigns the agent position.
ACDDNID	1-16	Indicates which ACD directory number (DN) to which the system assigns the name.
ACDDNNAME	Up to 16 characters	Indicates the new ACDDN name that must change. If the name is 15 blanks, the system requests a delete.
JOURNAL FILE ACTIVE	YES or NO	Indicates if the journal file was or was not active at the time of the RMAN command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN112

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem generates log report RMAN112. The RMAN is a part of the ACD Management Information System. This report appears when the down stream processor (DSP) issues a CHANGE DISPDIGS command.

The ACD RMAN subsystem allows a DSP to issue ACD load management commands from a remote site.

Format

The log report format for RMAN112 is as follows:

```
RMAN112 mmmdd hh:mm:ss ssdd INFO CHANGE_DISPDIGS
SESSION ID: nn
POOL: poolname
SUBPOOL: subpoolname
ACD GROUP: groupname
NEW VALUE: nn
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN112 follows:

```
RMAN112 AUG23 09:45:15 1234 INFO CHANGE_DISPDIGS
SESSION ID: 3
POOL: POOL1
SUBPOOL: SUBPOOLC
ACD GROUP: ACDGRP1
NEW VALUE: 4
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO CHANGE_ DISPDIGS	Constant	Indicates that the DSP issues a CHANGE DISDIGS command
SESSION ID	0-14	Specifies the number of the session in use

(Sheet 2 of 2)

Field	Value	Description
POOL	Up to 16 characters	Identifies the pool of ACD that associates with data stream. The ACD groups only associate with one data stream at a given time. Only one pool of ACD groups associates with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools protect switch and ACD customer security. One group normally contains all ACD groups that belong to an ACD customer.
ACD GROUP	Up to 16 characters	Identifies the ACD group in which the DISPDIGS value changed.
NEW VALUE	0-7	Indicates the new value of the display digits.
JOURNAL FILE ACTIVE	YES, NO	Indicates if the journal file is active during the RMAN command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN113

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem generates log report RMAN113. The RMAN is part of the ACD Management Information System. This report appears when the down stream processor (DSP) issues a CHANGE SUBPOOL command.

The ACD RMAN subsystem allows a DSP the ability to issue ACD load management commands from a remote site.

Format

The log report format for RMAN113 is as follows:

```
RMAN113 mmmdd hh:mm:ss ssdd INFO CHANGE_SUBPOOL
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
NEW SUBPOOL:         subpoolname
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN113 follows:

```
RMAN113 AUG23 09:45:15 1234 INFO CHANGE_SUBPOOL
SESSION ID:          3
POOL:                POOL1
SUBPOOL:             SUBPOOL1
ACD GROUP:           ACDGRP1
NEW SUBPOOL:         SUBPOOL2
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO CHANGE_ SUBPOOL	Constant	Indicates that the DSP issues a CHANGE SUBPOOL command
SESSION ID	0-14	Specifies the number of the session in use

(Sheet 2 of 2)

Field	Value	Description
POOL	Up to 16 characters	Identifies the pool of ACD groups that associates with the data stream. The ACD groups only associate with one data stream at a given time. Only one pool of ACD groups associates with a data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools protect switch and ACD customer security. One subpool normally contains all ACD groups that belong to an ACD customer.
ACD GROUP	Up to 16 characters	Identifies the ACD group in which the DISPDIGS value changes.
NEW SUBPOOL	Up to 16 characters	Indicates the new subpool to which the system assigns the ACD group
JOURNAL FILE ACTIVE	YES or NO	Indicates if the journal file is active at the time of the RMAN command

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN114

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem generates log report RMAN114. The RMAN is a part of the ACD Management Information System. This report appears when the down stream processor (DSP) issues a CHANGE PRIOPRO (Priority Promotion) command.

The ACD Remote Load Management allows a DSP to issue ACD load management commands from a remote site.

Format

The log report format for RMAN114 is as follows:

```
RMAN114 mmmdd hh:mm:ss ssdd INFO CHANGE_PRIOPRO
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
NEW PRIOPRO:         nnn
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN114 follows:

```
RMAN114 AUG23 09:45:15 1234 INFO CHANGE_PRIOPRO
SESSION ID:          3
POOL:                POOL1
SUBPOOL:             SUBPOOL1
ACD GROUP:           ACDGRP1
NEW PRIOPRO:         20
JOURNAL FILE ACTIVE: YES
```

Field description

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO CHANGE_ PRIOPRO	Constant	Indicates that the DSP issues a CHANGE ACDDNNAME command
SESSION ID	0-14	Specifies the number of the session in use

(Sheet 2 of 2)

Field	Value	Description
POOL	Up to 16 characters	Identifies the pool of ACD groups that associates with the data stream. The ACD groups associate with one data stream at a given time. Only one pool of ACD groups associates with one data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools protect switch and ACD customer security. One subpool normally contains all ACD groups that belong to an ACD customer.
ACD GROUP	Up to 16 characters	Identifies the ACD group in which the DISPDIGS value changed.
NEW PRIOPRO	0-255	Indicates the new priority promotion time
JOURNAL FILE ACTIVE	YES or NO	Indicates if the journal file is active at the time of the RMAN command

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN115

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem generates log report RMAN115. The ACD RMAN subsystem is a part of the ACD Management Information System. This report appears when the down stream processor (DSP) issues a time delay overflow (CHANGE TMDELOFL) command.

The ACD RMAN subsystem allows a DSP to issue ACD load management commands from a remote site.

Format

The log report format for RMAN115 is as follows:

```
RMAN115 mmmdd hh:mm:ss ssdd INFO CHANGE_TMDELOFL
SESSION ID: nn
POOL: poolname
SUBPOOL: subpoolname
ACD GROUP: groupname
NEW TMDELOFL: nnnn
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN115 follows:

```
RMAN115 AUG23 09:45:15 1234 INFO CHANGE_TMDELOFL
SESSION ID: 3
POOL: POOL1
SUBPOOL: SUBPOOL1
ACD GROUP: ACDGRP1
NEW TMDELOFL: 30
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO CHANGE_ TMDELOFL	Constant	Indicates that the DSP issued a CHANGE TMDELOFL command
SESSION ID	0-14	Specifies the number of the session in use

RMAN115 (end)

(Sheet 2 of 2)

Field	Value	Description
POOL	Up to 16 characters	Identifies the pool of ACD groups that associates with the data stream. The ACD groups only associate with one data stream at a given time. Only one pool of ACD groups associates with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools protect switch and ACD customer security. One subpool normally contains all ACD groups that belong to an ACD customer.
ACD GROUP	Up to 16 characters	Identifies the ACD group in which the DISPDIGS value changes
NEW TMDELOFL	0-1800	Indicates the new time delay overflow time
JOURNAL FILE ACTIVE	YES or NO	Indicates if the journal file is active at the time of the RMAN command

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN116

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem generates log report RMNA116. The ACD RMAN subsystem is a part of the ACD Management Information System. This report appears when the Down Stream Processor (DSP) issues an overflow type (CHANGE OFLTYPE) command.

The ACD RMAN subsystem allows a DSP to issue ACD load management commands from a remote site.

Format

The log report format for RMAN116 is as follows:

```
RMAN116 mmmdd hh:mm:ss ssdd INFO CHANGE_OFLTYPE
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
NEW OFLTYPE:         answrtxt
NEW START:           answrtxt
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN116 follows:

```
RMAN116 AUG23 09:45:15 1234 INFO CHANGE_OFLTYPE
SESSION ID:          3
POOL:                POOL1
SUBPOOL:             SUBPOOLC
ACD GROUP:           ACDGRP1
NEW OFLTYPE:         ALLPRI0
NEW START:           IMMEDIAT
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO CHANGE_ OFLTYPE	Constant	Indicates the DSP issued a CHANGE OFLTYPE command
SESSION ID	0-14	Specifies the number of the session in use
POOL	Up to 16 characters	Identifies the pool of ACD groups that associates with the data stream. The ACD groups only associate with one data stream at a given time. Only one pool of ACD groups associate with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools protect switch and ACD customer security. One subpool normally contains all ACD groups that belong to an ACD customer.
ACD GROUP	Up to 16 characters	Identifies the ACD group in which the DISPDIGS value changes.
NEW OFLTYPE	ALLPRIO, PRI0ONLY	Indicates the new type of time delay overflow desired.
NEW START	IMMEDIAT, P0ONLY	Indicates the new start time for the time delay overflow timer.
JOURNAL FILE ACTIVE	YES or NO	Indicates if the journal file is active during the RMAN command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN117

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem generates log report RMAN117. The RMAN subsystem is a part of the ACD Management Information System. This report appears when the down stream processor (DSP) issues a CHANGE SERVICE command.

The ACD RMAN subsystem allows a DSP to issue ACD load management commands from a remote site.

Format

The log report format for RMAN117 is as follows:

```
RMAN117 mmmdd hh:mm:ss ssdd INFO CHANGE_SERVICE
SESSION ID:          nn
POOL:                poolname
SUBPOOL:            subpoolname
ACD GROUP:          groupname
NEW SERVICE:        answrtxt
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN117 follows:

```
RMAN117 AUG23 09:45:15 1234 INFO CHANGE_SERVICE
SESSION ID:          3
POOL:                POOL1
SUBPOOL:            SUBPOOL1
ACD GROUP:          ACDGRP1
NEW SERVICE:        OLDEST
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
NFO CHANGE_ SERVICE	Constant	Indicates the DSP issued a CHANGE SERVICE command
SESSION ID	0-14	Specifies the number of the session in use

(Sheet 2 of 2)

Field	Value	Description
POOL	Up to 16 characters	Identifies the pool of ACD groups that associate with the data stream. The ACD groups only associate with one data stream at a given time. Only one pool of ACD groups associates with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools protect switch and ACD customer security. One subpool normally contains all ACD groups that belong to an ACD customer.
ACD GROUP	Up to 16 characters	Identifies the ACD group in which the DISPDIGS value changes
NEW SERVICE	OVFLIN, P0FIRST, OLDEST	Indicates the method to service ACD calls
JOURNAL FILE ACTIVE	YES or NO	Indicates if the journal file is active during the RMAN command

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN118

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem generates log report RMAN118. The ACD RMAN subsystem is a part of the ACD Management Information System. This report appears when the down stream processor (DSP) issues a maximum virtual queue size (CHANGE MAXVQSIZE) command.

The ACD RMAN subsystem allows a DSP to issue ACD load management commands from a remote site.

Format

The log report format for RMAN118 is as follows:

```
RMAN118 mmmdd hh:mm:ss ssdd INFO CHANGE_MAXVQSIZE
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
NEW MAXVQSIZE:       nnn
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN118 follows:

```
RMAN118 AUG23 09:45:15 1234 INFO CHANGE_MAXVQSIZE
SESSION ID:          3
POOL:                POOL1
SUBPOOL:             SUBPOOL1
ACD GROUP:           ACDGRP1
NEW MAXVQSIZE:       255
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO CHANGE_MAXVQSIZE	Constant	Indicates that the DSP issued a CHANGE MAXVQSIZE command
SESSION ID	0-14	Specifies the number of the session in use

(Sheet 2 of 2)

Field	Value	Description
POOL	Up to 16 characters	Identifies the pool of ACD groups that associates with the data stream. The ACD groups only associate with one data stream at a given time. Only one pool of ACD groups associates with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools protect switch and ACD customer security. One subpool normally contains all ACD groups that belong to an ACD customer.
ACD GROUP	Up to 16 characters	Identifies the ACD group in which the DISPDIGS value changes
NEW MAXVQSIZE	0-511	Indicates the new maximum virtual queue size
JOURNAL FILE ACTIVE	YES or NO	Indicates if the journal file is active during the RMAN command

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN119

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem generates log report RMAN119. The ACD RMAN subsystem is a part of the ACD Management Information System. This report appears when the down stream processor (DSP) issues a control interflow route (CHANGE CIFROUTE) command.

The ACD RMAN subsystem allows a DSP to issue ACD load management commands from a remote site.

Format

The log report format for RMAN119 is as follows:

```
RMAN119 mmmdd hh:mm:ss ssdd INFO CHANGE_CIFROUTE
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
NEW CIFROUTE INDEX:  nnnn
NEW CIFROUTE TABLE: answrtxt
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN119 follows:

```
RMAN119 AUG23 09:45:15 1234 INFO CHANGE_CIFROUTE
SESSION ID:          3
POOL:                POOL1
SUBPOOL:             SUBPOOL1
ACD GROUP:           ACDGRP1
NEW CIFROUTE INDEX:  55
NEW CIFROUTE TABLE: IBNRTE
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO CHANGE_ CIFROUTE	Constant	Indicates the DSP issued a CHANGE CIFROUTE command
SESSION ID	0-14	Specifies the number of the session in use
POOL	Up to 16 characters	Identifies the pool of ACD groups that associates with the data stream. The ACD groups only associate with one data stream at a given time. Only one pool of ACD groups associates with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools protect switch and ACD customer security. One subpool normally contains all ACD groups that belong to an ACD customer.
ACD GROUP	Up to 16 characters	Identifies the ACD group in which the DISPDIGS value changes
NEW CIFROUTE INDEX	0-1023	Specifies the location of the route list in the routing table for the use of the control interflow route
NEW CIFROUTE TABLE	OFRT, IBNRTE	Indicates the new routing table for use of the control interflow route
JOURNAL FILE ACTIVE	YES or NO	Indicates if the journal file is active during the RMAN command

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN120

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem generates log report RMAN120. The ACD RMAN subsystem is a part of the ACD Management Information System. This report appears when the Down Stream Processor (DSP) issues a CHANGE QUEUE THRESHOLD command.

The ACD RMAN subsystem allows a DSP to issue ACD load management commands from a remote site.

Format

The log report format for RMAN120 is as follows:

```
RMAN120 mmmdd hh:mm:ss ssdd INFO
CHANGE_QUEUE THRESHOLD
SESSION ID: nn
POOL: poolname
SUBPOOL: subpoolname
ACD GROUP: groupname
NEW QUEUE THRESHOLD: nnn
JOURNAL FILE ACTIVE: ansrtxt
```

Example

An example of log report RMAN120 follows:

```
RMAN120 AUG23 09:45:15 1234 INFO CHANGE_QUEUE THRESHOLD
SESSION ID: 3
POOL: POOL1
SUBPOOL: SUBPOOL1
ACD GROUP: ACDGRP1
NEW QUEUE THRESHOLD: 250
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO CHANGE_QUEUETHRESHOLD	Constant	Indicates the DSP issued a CHANGE QUEUETHRESHOLD command
SESSION ID	0-14	Specifies the number of the session in use
POOL	Up to 16 characters	Identifies the pool of ACD groups that associates with the data stream. The ACD groups only associate with one data stream at a given time. Only one pool of ACD groups associates with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools protect switch and ACD customer security. One subpool normally contains all ACD groups that belong to an ACD customer.
ACD GROUP	Up to 16 characters	Identifies the ACD group in which the DISPDIGS value changes.
NEW QUEUE THRESHOLD	0-511	Indicates the maximum number of calls an NACD group treats as nodal calls. When calls reach the threshold, all new incoming calls receive network service.
JOURNAL FILE ACTIVE	YES or NO	Indicates if the journal file is active during the RMAN command

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN121

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem generates log report RMAN121. The ACD RMAN subsystem is a part of the ACD Management Information System. This report appears when the down stream processor (DSP) issues a CHANGE WAITTHRESHOLD command.

The ACD RMAN subsystem allows a DSP to issue ACD load management commands from a remote site.

Format

The log report format for RMAN121 is as follows:

```
RMAN121 mmmdd hh:mm:ss ssdd INFO
CHANGE_WAITTHRESHOLD
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
NEW WAIT THRESHOLD:  nnnn
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN121 follows:

```
RMAN121 AUG23 09:45:15 1234 INFO CHANGE_WAITTHRESHOLD
SESSION ID:          3
POOL:                POOL1
SUBPOOL:             SUBPOOL1
ACD GROUP:           ACDGRP1
NEW WAIT THRESHOLD:  360
JOURNAL FILE ACTIVE: YES
```


Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO CHANGE_WAITTHRESHOLD	Constant	Indicates the DSP issued a CHANGE WAITTHRESHOLD command
SESSION ID	0-14	Specifies the number of the session in use
POOL	Up to 16 characters	Identifies the pool of ACD groups that associates with the data stream. The ACD groups only associate with one data stream at a given time. Only one pool of ACD groups associates with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools protect switch and ACD customer security. One subpool normally contains all ACD groups that belong to an ACD customer.
ACD GROUP	Up to 16 characters	Identifies the ACD group in which the DISPDIGS value changes
NEW WAITTHRESHOLD	0-1800	Indicates the new wait threshold time. When calls reach the threshold, all new incoming calls receive network service.
JOURNAL FILE ACTIVE	YES or NO	Indicates if the journal file is active during the RMAN command

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN122

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem generates log report RMAN122. The ACD RMAN subsystem is a part of the ACD Management Information System. This report appears when the down stream processor (DSP) issues a preference waiting factor (CHANGE PWF) command.

The ACD RMAN subsystem allows a DSP to issue ACD load management commands from a remote site.

Format

The log report format for RMAN122 is as follows:

```
RMAN122 mmmdd hh:mm:ss ssdd INFO CHANGE_PWF
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
DEST ACD GROUP:      groupname
NEW PWF:             nn
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN122 follows:

```
RMAN122 AUG23 09:45:15 1234 INFO CHANGE_PWF
SESSION ID:          3
POOL:                POOL1
SUBPOOL:             SUBPOOL1
ACD GROUP:           ACDGRP1
DEST ACD GROUP:      ACDGRP2
NEW PWF:             25
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO CHANGE_PWF	Constant	Indicates that the DSP issued a CHANGE PWF command
SESSION ID	0-14	Specifies the number of the sessions in use
POOL	Up to 16 characters	Identifies the pool of ACD groups that associates with the data stream. The ACD groups can only associate with one data stream at a given time. Only one pool of ACD groups can associate with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools protect switch and ACD customer security. One subpool normally contains all ACD groups that belong to an ACD customer.
ACD GROUP	Up to 16 characters	Identifies the ACD group in which the DISPDIGS value changes
DEST ACD GROUP	Up to 16 characters	Identifies the ACD group that associates with the new PWF
NEW PWF	0-31	Indicates the new PWF
JOURNAL FILE ACTIVE	YES or NO	Indicates if the journal file is active at the time of the RMAN command

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN123

Explanation

The Automatic Call Distribution (ACD) Remote Load Management (RMAN) subsystem generates log report RMAN123. The ACD RMAN subsystem is a part of the ACD Management Information System. This report appears when the down stream processor (DSP) issues a resource index (CHANGE RI) command.

The ACD RMAN subsystem allows a DSP to issue ACD load management commands from a remote site.

Format

The log report format for RMAN123 is as follows:

```
RMAN123 mmmdd hh:mm:ss ssdd INFO CHANGE_RI
SESSION ID:          nn
POOL:                poolname
SUBPOOL:             subpoolname
ACD GROUP:           groupname
DEST ACD GROUP:      groupname
NEW RI:              nnn
JOURNAL FILE ACTIVE: answrtxt
```

Example

An example of log report RMAN123 follows:

```
RMAN123 AUG23 09:45:15 1234 INFO CHANGE_RI
SESSION ID:          3
POOL:                POOL1
SUBPOOL:             SUBPOOL1
ACD GROUP:           ACDGRP1
DEST ACD GROUP:      ACDGRP2
NEW RI:              20
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
CHANGE_RI	Constant	Indicates that the DSP issued a CHANGE RI command
SESSION ID	0-14	Specifies the number of the session in use
POOL	Up to 16 characters	Identifies the pool of ACD groups that associates with the data stream. The ACD groups can only associate with one data stream at a given time. Only one pool of ACD groups can associate with each data stream at a given time.
SUBPOOL	Up to 16 characters	Identifies the subpool in a pool of ACD groups. Subpools protect switch and ACD customer security. One subpool normally contains all ACD groups that belong to an ACD customer.
ACD GROUP	Up to 16 characters	Identifies the ACD group in which the DISPDIGS value changes
DEST ACD GROUP	Up to 16 characters	Indicates the non-DMS ACD group resource index.
NEW RI	0-255	Indicates the new route index value
JOURNAL FILE ACTIVE	YES, NO	Indicates if the journal file is active at the time of the remote load management command.

Action

There is no action required.

Associated OM registers

There are no associated OM registers.

RMAN139

Explanation

The Automatic Call Distribution (ACD) Management Information System (MIS) enables Remote Load Management (RLM) commands to control data queued again for ACD groups. The system generates this log when the downstream processor (DSP) issues the Remote Load Management command, CHANGE RENQTOUT.

Format

The format for log report RMAN139 follows:

```
RMAN139 mmmdd hh:mm:ss ssdd INFO CHANGE RENQTOUT
SESSION ID: <range 0–14>
POOL: <16 character vector>
SUBPOOL: <16 character vector>
ACD GROUP: <16 character vector>
NEW RENQ TIME: <range 0–1800>
JOURNAL FILE ACTIVE: <either YES or NO>
```

Example

An example of log report RMAN139 follows:

```
RMAN139 JUL25 22:45:15 1234 INFO CHANGE_RENQTOUT
SESSION ID: 2
POOL: POOL1
SUBPOOL: SUBPOOL1
ACD GROUP: ABCGRP1
NOW RENQ TIME: 20
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
SESSION ID	0-14 digits	Represents the correct number of the session in use
POOL	1-16 alphanumeric	ACD group partitioning between data streams for the ACD MIS. ACD groups can belong to only one pool at a time. You can associate a pool with only one data stream at a time. You can associate only one pool of groups with each data stream at a time. The DSP must specify the pool of ACD groups that you plan to associate with the data stream.
SUBPOOL	1-16 alphanumeric	Method of insuring switch and ACD customer security. You define subpools of ACD groups within a pool of ACD groups. Normally, you group all ACD groups belonging to an ACD customer within one subpool.
ACD GROUP	1-16 alphanumeric	The ACD group for the changed RENQTOUT timer
NEW RENQ TIME	0-1800 s	Specifies the index in table specified by field NEW RENQROUTE TABLE
JOURNAL FILE ACTIVE	YES or NO	Indicates the activation status of the journal file at the time of the Remote Load Management command

Action

None

Associated OM registers

None

Additional information

None

RMAN140

Explanation

The Automatic Call Distribution (ACD) Management Information System (MIS) enables Remote Load Management (RLM) commands to control re-enqueue data for ACD groups. The system generates this log when the down stream processor (DSP) issues the RLM command, CHANGE RENQRTE.

Format

The format for log report RMAN140 follows:

```
RMAN140 mmmdd hh:mm:ss ssdd INFO CHANGE RENQRTE
SESSION ID: <range 0–14>
POOL: <16 character vector>
SUBPOOL: <16 character vector>
ACD GROUP: <16 character vector>
NEW RENQROUTE INDEX: <range 0–1023>
NEW RENQROUTE TABLE: <6 character vector>
JOURNAL FILE ACTIVE: <either YES or NO>
```

Example

An example of log report RMAN140 follows:

```
RMAN140 JUL25 22:45:15 1234 INFO CHANGE_RENQRTE
SESSION ID: 2
POOL: POOL1
SUBPOOL: SUBPOOL1
ACD GROUP: ABCGRP1
NEW RENQROUTE INDEX: 99
NEW RENQROUTE TABLE: IBNRTE
JOURNAL FILE ACTIVE: YES
```


Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
SESSION ID	0-14 digits	Correct number of the session in use
POOL	1-16 alphanumeric	ACD group partitioning between data streams for the ACD MIS. ACD groups can belong to only one pool at a time. You can associate a pool with only one data stream at a time. You can associate only one pool of groups with each data stream at a time. The DSP must specify the pool of ACD groups associated with the data stream.
SUBPOOL	1-16 alphanumeric	Method of insuring switch and ACD customer security. Subpools of ACD groups reside within a pool of ACD groups. Normally, all ACD groups belonging to an ACD customer belong to one subpool.
ACD GROUP	1-16 alphanumeric	ACD group of the changed RENQTOUT timer
NEW RENQROUTE INDEX	0-1023 numeric	Specifies the index in table specified by the NEW RENQROUTE TABLE field
NEW RENQROUTE TABLE	IBNRTE, OFRT	Specifies the table for selecting the re-enqueue route
JOURNAL FILE ACTIVE	YES or NO	Indicates the activation status of the journal file at the time of the Remote Load Management command

Action

None

Associated OM registers

None

Additional information

None

RMAN141

Explanation

The Automatic Call Distribution (ACD) Management Information System (MIS) enables Remote Load Management (RLM) commands to control re-enqueue data for ACD groups. The system generates this log when the down stream processor (DSP) issues the Remote Load Management command, CHANGE RENQAUD.

Format

The format for log report RMAN141 follows:

```
RMAN141 mmmdd hh:mm:ss ssdd INFO CHANGE_RENQAUD  
SESSION ID: <range 0–14>  
POOL: <16 character vector>  
SUBPOOL: <16 character vector>  
ACD GROUP: <16 character vector>  
NEW RENQ AUDIO GROUP: <range 0–511>  
JOURNAL FILE ACTIVE: <either YES or NO>
```

Example

An example of log report RMAN141 follows:

```
RMAN141 JUL25 22:45:15 1234 INFO CHANGE_RENQAUD  
SESSION ID: 2  
POOL: POOL1  
SUBPOOL: SUBPOOL1  
ACD GROUP: ABCGRP1  
NOW RENQ AUDIO GROUP: AUDIO1  
JOURNAL FILE ACTIVE: YES
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
SESSION ID	0-14 digits	Represents the actual number of the session in use
POOL	1-16 alphanumeric	ACD group partitioning between data streams for the ACD MIS. ACD groups can belong to only one pool at a time. You can associate a pool with only one data stream at a time. You can associate only one pool of groups with each data stream at a time. The DSP must specify the pool of ACD groups associated with the data stream.
SUBPOOL	1-16 alphanumeric	Method of insuring switch and ACD security. Subpools of ACD groups are defined within a pool of ACD groups. Normally, all ACD groups belonging to an ACD customer are grouped within one subpool.
ACD GROUP	1-16 alphanumeric	The ACD group for which the RENQTOUT timer is changing
NEW RENQ AUDIO GROUP	0-511 numeric	Specifies the new audio group for the ACD group
JOURNAL FILE ACTIVE	YES or NO	Indicates the activation status of the journal file at the time of the Remote Load Management command

Action

None

Associated OM registers

None

Additional information

None

RMSG600

Explanation

The system generates an RMSG600 log report each time rapid messaging (RM) places a basic rate interface (BRI) logical terminal identifier (LTID) in a RM temporary out-of-service state. RM places the BRI LTID in a RM temporary out-of-service state under either of the following conditions:

- The rate of incoming Q.931 messages from the BRI terminal or terminals associated with the BRI LTID exceeds the administrable threshold twice in one RM measurement interval.
- The rate of incoming Q.931 messages from the BRI terminal or terminals associated with the BRI LTID exceeds the administrable threshold once in each of two consecutive RM measurement intervals.

The administrable threshold is specified by the overload messaging limit (OML) parameter on an office-wide basis or for each LTID.

When RM places the BRI LTID out-of-service, the system does not permit new calls to or from the BRI terminal or terminals associated with the LTID. However, the out-of-service condition does not affect the following calls:

- calls already in the active state (talking state)
- calls already in the process of origination or termination

When RM places a BRI LTID in a RM temporary out-of-service state, the BRI LTID automatically returns to RM in-service at the end of the next full RM measurement interval.

Format

The format for log report RMSG600 follows:

```
RTP2  RMSG600 JAN19 14:31:07 1805 INFO BRI LTID Temp Out-of-
Service
      LTID: <ltid>
      LEN:  <len>
```

Example

An example of log report RMSG600 follows:

```
RTP2  RMSG600 JAN19 14:31:07 1805 INFO BRI LTID Temp Out-
of-Service
      LTID: ISDN 25
      LEN:  Host 01 1 07 03
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
LTID	3-13 alphanumeric characters	This mandatory value is a two-part logical terminal identifier (LTID) expressed as a combination of logical terminal group (LTGRP) and logical terminal number (LTNUM) within the group. The first part of the value is a 1- to 8-alphanumeric character LTGRP name. The second part is an LTNUM (1-1023).
LEN	15 alphanumeric characters	This mandatory value is the line equipment number (LEN) to which the LTID is attached. The value of the LEN is in standard DMS-100 LEN format.

Action

The RMSG600 log report informs operating company personnel that new call processing for the BRI LTID is temporarily inhibited until the BRI LTID automatically returns to RM in-service. The BRI LTID automatically returns to RM in-service at the end of the next full RM measurement interval. However, operating company personnel can return the BRI LTID to RM in-service earlier by executing a return-to-service (RTS) command at the MAP (maintenance and administration position) terminal.

Associated OM registers

Register RMBRIOOS of OM group RMSGOMGP is an office-wide operational measurement that counts the number of times RM places a BRI LTID out-of-service.

Additional information

None

RMSG601

Explanation

The system generates an RMSG601 log report each time rapid messaging (RM) places a basic rate interface (BRI) logical terminal identifier (LTID) in a RM permanent out-of-service state. RM places a BRI LTID in a permanent out-of-service state when the following condition occurs:

- The rate of incoming Q.931 messages from the BRI terminal or terminals associated with the LTID satisfies the conditions for RM temporary out-of-service for the 10th time in a 1/2-hr period.

When RM places the BRI LTID out-of-service, the system does not permit new calls to or from the BRI terminal or terminals associated with the LTID. However, the following calls are unaffected:

- calls already in the active state (talking state)
- calls already in the process of origination or termination

When RM places a BRI LTID in a RM permanent out-of-service state, the BRI LTID does not automatically return to RM in-service. Operating company personnel must return the BRI LTID to RM in-service by executing a return-to-service (RTS) command at the MAP (maintenance and administration position) terminal.

Format

The format for log report RMSG601 follows:

```
RTP2  RMSG601 JAN19 14:31:07 1805 INFO BRI LTID Perm Out-of-  
Service  
      LTID: <ltid>  
      LEN:  <len>
```

Example

An example of log report RMSG601 follows:

```
RTP2    RMSG601 JAN19 14:31:07 1805 INFO BRI LTID Perm Out-  
of-Service  
      LTID: ISDN 25  
      LEN:  HOST 01 1 07 03
```

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
LTID	3-13 alphanumeric characters	This mandatory value is a two-part logical terminal identifier (LTID) expressed as a combination of logical terminal group (LTGRP) and logical terminal number (LTNUM) within the group. The first part of the value is a 1- to 8-alphanumeric character LTGRP name. The second part is an LTNUM (1-1023) within the group.
LEN	15 alphanumeric characters	This mandatory value is the line equipment number (LEN) to which the LTID is attached. The value of the LEN is in the standard DMS-100 LEN format.

Action

The RMSG601 log report informs the operating company personnel that new call processing for the BRI LTID is permanently inhibited. To make new call processing available to the BRI terminal or terminals associated with the LTID, operating company personnel must execute a return-to-service (RTS) command at the MAP terminal.

The operating company determines if the LTID can return to service, depending on both the LTID and the policies and procedures of the operating company.

Associated OM registers

Register RMBRIOOS of OM group RMSGOMGP is an office-wide operational measurement that counts the number of times RM places a BRI LTID out-of-service.

Additional information

None

RMSG602

Explanation

The system generates an RMSG602 log report when rapid messaging (RM) returns a basic rate interface (BRI) logical terminal identifier (LTID) to RM in-service from either a RM temporary or RM permanent out-of-service state. The From field in the body of the log report indicates the existing RM out-of-service state (temporary or permanent) before the BRI LTID is returned to RM in-service.

When RM places a BRI LTID in a temporary out-of-service state, RM automatically returns the BRI LTID to RM in-service at the end of the next full RM measurement interval without any action from the operating company personnel.

When RM places a BRI LTID in a permanent out-of-service state, the BRI LTID remains RM out-of-service until the operating company personnel returns the BRI LTID to RM in-service by executing a return-to-service (RTS) command at the MAP (maintenance and administration position) terminal.

When RM returns a BRI LTID to RM in-service from an RM out-of-service state, the DMS-100 switch updates the feature indicators of the BRI terminal or terminals associated with the LTID, and then permits new calls to or from the terminal or terminals.

Format

The format for log report RMSG602 follows:

```
RTP2    RMSG602 JAN19 14:31:07 1805 INFO BRI LTID In-Service
        LTID: <ltid>
        LEN:  <len>
        From: <previous_RM_state>
```

Example

Examples of log report RMSG602 follow:

RMSG602 (continued)

RTP2 RMSG602 JAN19 14:31:07 1802 INFO BRI LTID In-Service
 LTID: ISDN 25
 LEN: HOST 01 1 07 03
 From: Temp Out-of-Service

RTP2 RMSG602 JAN19 14:31:07 1802 INFO BRI LTID In-Service
 LTID: ISDN 25
 LEN: HOST 01 1 07 03
 From: Perm Out-of-Service

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
LTID	3-13 alphanumeric characters	This mandatory value is a two-part logical terminal identifier (LTID) expressed as a combination of logical terminal group (LTGRP) and logical terminal number (LTNUM) within the group. The first part of the value is a 1- to 8-alphanumeric character LTGRP group name. The second part is an LTNUM (1-1023).
LEN	15 alphanumeric characters	This mandatory value is the line equipment number (LEN) to which the LTID is attached. This value is in the standard DMS-100 LEN format.
From	19 alphanumeric characters	This mandatory value indicates the existing temporary or permanent out-of-service state before the BRI LTID is returned to in-service. The values are either Temp Out-of-Service or Perm Out-of-Service.

Action

No action is required. This log report is for informational purposes only.

Associated OM registers

None

1-858 Log reports

RMSG602 (end)

Additional information

None

RMSG603

Explanation

The system generates an RMSG603 log report for logical terminal identifiers (LTID) with an overload condition treatment (OCT) parameter value of REONLY (report only). For these LTIDs, the system generates this log report when rapid messaging (RM) detects either of the following conditions:

- The rate of incoming Q.931 messages from the basic rate interface (BRI) terminal or terminals associated with the LTID exceeds the administrable threshold twice in one RM measurement interval.
- The rate of incoming Q.931 messages from the BRI terminal or terminals associated with the LTID exceeds the administrable threshold once in each of two consecutive RM measurement intervals.

Format

The format for log report RMSG603 follows:

```
RTP2  RMSG603 JAN19 14:31:07 1805 INFO BRI LTID Overload
      LTID: <ltid>
      LEN:  <len>
```

Example

An example of log report RMSG603 follows:

```
RTP2  RMSG603 JAN19 14:31:07 1805 INFO BRI LTID Overload
      LTID:  IDSN 25
      LEN:   HOST 01 1 07 03
```

RMSG603 (end)

Field descriptions

The following table explains each of the fields in the log report:

Field	Value	Description
LTID	3-13 alphanumeric characters	This mandatory value is a two-part logical terminal identifier (LTID) expressed as a combination of logical terminal group (LTGRP) and logical terminal number (LTNUM) within the group. The first part of the value is a 1- to 8-alphanumeric character LTGRP name. The second part is an LTNUM (1-1023).
LEN	15 alphanumeric characters	This mandatory value is the line equipment number (LEN) to which the LTID is attached. This value is in the standard DMS-100 LEN format.

Action

Each RMSG603 log report indicates a BRI terminal can be overloading the call processing resources of the DMS-100 switch. Operating company personnel can monitor RMSG603 log reports to recognize potentially overloading BRI terminals. The policies and procedures of the operating company determine whether further response is required.

Associated OM registers

None

Additional information

None

RO101

Explanation

The Remote Operation (RO) subsystem generates log report RO101 when a remote logon attempt occurs.

The associated operational measurement (OM) group is ROAPPL. The associated OM registers are successful logons (ROAPLOGA) and failed logons (ROAPFLOG).

Format

The log report format for RO101 is as follows:

```
RO101 mmmdd hh:mm:ss ssdd INFO  SESSION LOGON
      SESSION nn
      desc.txt
      appl.txt
```

Example

An example of log report RO101 follows:

```
RO101 MAR17 17:10:40 1089 INFO  SESSION LOGON
      Session 1
      Logon Successful
      0: Nil Parameter
      FT
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO SESSION LOGON	Constant	Indicates a remote logon attempt occurred
SESSION	0-15	Indicates the session that received the logon request. (Value set by office parameter NOS_QUANTITY_OF_SVCS).

RO101 (continued)

(Sheet 2 of 2)

Field	Value	Description
desctxt	Logon Successful	If the logon failed, provides the reason for the failure. The system displays a return code if necessary. Refer to Table LOGON FAILURE REASONS at the end of this log report
appltxt	Symbolic text	The name of the application that requests the logon, if logon is not successful. Refer to Table LOGON FAILURE REASONS at the end of this log report.

Action

There is no action required.

Logon failure reasons (Sheet 1 of 2)

Reasons	Application	RC	Explanation
FLAG CREATION FAILED	none	flag system return code	The system generates this log when RO Service fails to create flags.
OUTPUT FILE CREATION FAILED	none	file system return code	The system generates this log when RO Service fails to create an output file for the DOWN task.
CANNOT DE CODE LOGON RO	none	none	The system generates this log when RO Service fails to decode the incoming remote LOGON request.
LOGON DURING INVALID STATE	none	session state	The system generates this log when RO Service receives a remote logon and is in an unknown state. This condition does not occur normally.
DUPLICATE LOGON	none	session state	The system generates this log when RO service receives a remote LOGON request when already logged on.
APPLICATION ID NOT RECOGNIZED	none	received application id	The system generates this log when RO Service receives a remote LOGON request. This request contains an application identifier that RO Service does not use.

RO101 (end)**Logon failure reasons (Sheet 2 of 2)**

Reasons	Application	RC	Explanation
NO SESSIONS AVAILABLE	present	number of session already running	The system generates this log when RO Service receives a remote LOGON request for an application. This application already runs the maximum number of sessions allowed.
APPLICATION INIT. FAILED	present	none	The system generates this log when a remote LOGON requests an application that does not initialize.
STORE ALLOCATION FAILED	present	store return code	The system generates this log when RO Service fails an attempt to allocate store. The RO Services allocates store for RO Service input and output data buffers.
UP/DOWN TASK SYNCH FAILED	present	none	The system generates this log when RO Service UP task fails to notify the down task that corresponds.
LOGON SUCCESSFUL	present	none	The system generates this log after RO Service performs a session logon and sends a RETURN RESULT to the remote system.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

RO102

Explanation

The Remote Operation (RO) subsystem generates log report RO102 when a remote logoff attempt occurs.

Format

The log report format for RO102 follows:

```
.RO102 mmmdd hh:mm:ss ssdd INFO  SESSION LOGOFF  
      SESSION nn  
      descxt  
      appltxt
```

Example

An example of log report RO102 follows:

```
RO102 MAR 17 16:48:50 4526 INFO  SESSION LOGOFF  
      SESSION 6  
      Logoff Successful  
      0 : Nil Parameter  
      Ptae Appl
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO SESSION LOGOFF	Constant	Indicates the system attempted a remote logoff
SESSION	0-15	Indicates the session that received the logoff request. (Value set by office parameter "NOS_QUANTITY_OF_SVCS").
descxt	Logoff Successful	If the logoff failed, provides the reason for the failure. The system displays a return code if necessary. Refer to Table LOGOFF FAILURE REASONS at the end of this log report.
appltxt	Symbolic text	The name of the application that requested the logoff if logoff failed. Refer to Table LOGOFF FAILURE REASONS at the end of this log report.

Action

There is no action required.

Logoff failure reasons

Reason	Application	RC	Explanation
LOGOFF DURING INVALID STATE	none	session state	The system generates this log when RO service is not in a LOGON state and receives a remote LOGOFF request.
APPL. TERMINATION FAILED	present	none	The system generates this log when the application fails to terminate during the logoff process.
LOGOFF SUCCESSFUL	present	none	The system generates this log when RO service logs off and sends a LOGOFF RE to the remote system.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

RO103

Explanation

The Remote Operation (RO) subsystem log generates log report RO103. This report appears when the DMS cannot encode or decode (translate) a remote operation.

The OM group that associates with this log is ROAPPL. The registers that increase are ROAPIC (encoding error) and ROAPOG (decoding error).

Format

The log report format for RO103 is as follows:

```
RO103 mmmdd hh:mm:ss ssdd INFO TRANS ERROR
SESSION nn
desctxt
rctxt
appltxt
```

Example

An example of log report RO103 follows:

```
RO103 MAR17 17:10:02 0786 INFO TRANS ERROR
SESSION 9
OG OP ID NOT FOUND
69: OPERATION ID
FT
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
TRANS ERROR	Constant	Indicates that the DMS cannot translate (encode or decode) a remote operation
SESSION nn	0-15	Indicates the session that had the error. Value set by office parameter NOS_QUANTITY_OF_SVCS.
desctxt	Symbolic text	Text description that states the type of error. Refer to Table 1, Translation error reasons.

RO103 (continued)

(Sheet 2 of 2)

Field	Value	Description
rctxt	Symbolic text	The operation identifier. Refer to Table 1, Translation error reasons.
appltxt	Symbolic text	The name of the application that owns the remote operation. Refer to Table 1, Translation error reasons.

Action

There is no action required.

Translation error reasons (Sheet 1 of 2)

Reason	Application	RC	Explanation
DECODE HEADER FAILED	present session logged	if none	The system generates this log when RO service receives a remote operation, but cannot decode the header data.
IC OPDU TYPE NOT RECOGNIZED	present session logged	if opdu id	The system generates this log when RO service receives a remote operation. The opdu id of this remote operation is not equal to INVOKE, RETURN RESULT, RETURN ERROR, or REJECT.
IC OP ID NOT RECOGNIZED	present	op id	The system generates this log when RO service receives an INVOKE remote operation. The RO services does not recognize the op id of this INVOKE remote operation.
IC RO NOT IN CORR. TABLE	present	invoke id	The system generates this log when RO service receives a RETURN RESULT, RETURN ERROR or REJECT RO. These RO services cannot correlate with any INVOKE that the system sent earlier.
DECODE RE FAILED	present	op id	The system generates this log when RO service fails to decode an incoming RETURN ERROR remote operation.
NO DECODE PROCEDURE FOUND	present	op id	The system generates this log when RO service receives a remote operation and does not have a decode procedure to process.

RO103 (end)**Translation error reasons (Sheet 2 of 2)**

Reason	Application	RC	Explanation
DECODE FAILED	present	op id	The system generates this log when RO service fails to decode the received remote operation with the decode procedure that the application provides.
OG OPDU ID NOT FOUND	op id	none	The system generates this log when the application sends data to remote operation service for encoding. The RO service encodes the data with opdu id that RO service does not recognize.
OG OP ID NOT FOUND	present	op id	The system generates this log when the application sends data to RO service for encoding. The RO service encodes the data with operation id that RO service does not recognize.
OG RO NOT IN CORR. TABLE	present	invoke id	The system generates this log when the application sends RETURN RESULT, RETURN ERROR or REJECT data to RO service for encoding. The RO services encodes the data with an invoke id that does not correlate with earlier INVOKE remote operations.
ENCODE PROC NOT FOUND	present	op id	The system generates this log when the application sends data to RO service for encoding. The RO service cannot locate the encoding procedure required to process the data that the applications provides.
ENCODE FAILED	present	op id	The system generates this log when RO service fails an attempt to encode data with the procedure that the application provides.
ENCODE HEADER FAILED	present	op id	The system generates this log when remote operation service fails an attempt to encode the header data.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

RO104

Explanation

The Remote Operation (RO) subsystem generates log report RO104.

This report appears when the following services use a method that is not normal to terminate a session:

- the remote system
- an application
- remote operation service

The operational measurement (OM) group that associates with this log is ROMISC. The associated OM register is ROMTERM.

Format

The log report format for RO104 is as follows:

```
RO104 mmmdd hh:mm:ss ssdd INFO  ABNORMAL TERMINATION
      SESSION nn
      descxt
      apltxt
```

Example

An example of log report RO104 follows:

```
RO104 MAR17 17:10:03 0988 INFO  ABNORMAL TERMINATION
      SESSION 9
      Application Terminated
      FT
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO ABNORMAL TERMINATION	Constant	Indicates that the remote system used a method that is not normal to terminate a session
SESSION nn	0-15	Indicates the terminated session. (Value set by office parameter NOS_QUANTITY_OF_SVCS.

RO104 (end)

(Sheet 2 of 2)

Field	Value	Description
desctxt	Symbolic text	Description shown in text that states the service initiated the termination, and the reason for the termination, if known. Refer to Table 1, Termination reasons.
appltxt	Symbolic text	The application that uses this session, if known. Refer to Table 1, Termination reasons.

Action

There is no action required.

Termination reasons

Reason	Application	Explanation
LINK DROPPED	present if logged on	The system generates this log when the remote operation service detects a link failure or termination
APPLICATION TERMINATED	present	The system generates this log when the application initiates a session termination
ROS CORRELATION TABLE FULL	present	The system generates this log when RO service finds the correlation table full as a result of many outstanding invokes.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

RO105

Explanation

The Remote Operation (RO) subsystem generates log report RO105. This report appears when the remote operation service audit detects an invalid state. A state is invalid if the state of the data does not match the state of the session. This condition is a severe software error and must not occur often. The audit task terminates and cleans up the session.

Format

The log report format for RO105 is as follows:

```
RO105 mmmdd hh:mm:ss ssdd INFO INVALID STATE
      SESSION nn
      descxt
```

Example

An example of log report format for RO105 follows:

```
RO105 MAR17 18:40:25 7649 INFO INVALID STATE
      SESSION 12
      TOO LONG IN PENDING STATE
```

Field descriptions

The following table describes each field in the log report:

Field	Value	Description
INFO INVALID STATE	Constant	Indicates that the remote operation service audit detected a state that is not valid
SESSION	0-15	Indicates the data of the session that does not match the data of the state. Value set by office parameter NOS_QUANTITY_OF_SVCS.
descxt	Symbolic text	Indicates description of the state difference shown in text. Refer to Invalid states table.

RO105 (end)

Action

Contact the next level of maintenance.

State	Explanation
INVALID IDLE STATE	An idle session has data that is not compatible with the state of the data
INVALID LOGOFF STATE	A logged-off session has data that is not compatible with the state of the data
TOO LONG IN PENDING STATE	The system detects a session in a LOGON PENDING or LOGOFF PENDING state for too long

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

RONI100**Explanation**

The Remote Operator Number Identification (RONI) subsystem generates log report RONI100. The subsystem generates this report when the subsystem encounters a problem during a remote central automatic message accounting (RCAMA) call attempt. This problem forces the RCAMA trunk to system busy (SysB).

Format

The log report format for RONI100 is as follows:

```
RONI100 mmmdd hh:mm:ss ssdd SYSB RONI TROUBLE LOG
      CKT trkid
      CALL_ID = callid
      VOICE TRUNK = CKT trkid
      DATA TRUNK = CKT trkid
      TROUBLE CODE = trbtxt
```

Example

An example of log report RONI100 follows:

```
RONI100 APR01 12:00:00 2112 SYSB RONI TROUBLE LOG
      CKT OGVLON2301TV 106
      CALL_ID = 131604
      VOICE TRUNK = CKT OGVLON2301TV 106
      DATA TRUNK = CKT OGVLON2301TV 156
      TROUBLE CODE = NO_ZIP_TONES_DETECTED
```

Field descriptions

The following table describes each field in the log report:

(Sheet 1 of 2)

Field	Value	Description
SYSB RONI TROUBLE LOG	Constant	Indicates that the system encounters trouble during RCAMA call attempt.
CKT	Symbolic text	Provides equipment identification for suspect trunk equipment.
CALL_ID	Symbolic text	Identifies RCAMA call that generates log report.

RONI100 (end)

(Sheet 2 of 2)

Field	Value	Description
VOICE TRUNK	Symbolic text	Provides equipment identification for voice trunk equipment in RONI circuit
DATA TRUNK	Symbolic text	Provides equipment identification for data trunk equipment in RONI circuit
TROUBLE CODE	CAMA_RELEASE_ _TIMEOUT	Indicates originating toll office fails to send good digits signal.
	FORCE_RELEASE_ _TIMEOUT	Indicates originating toll office does not acknowledge RONI force release.
	NO_ZIP_TONES_ _DETECTED	Indicates failure to detect 480 Hz ZIP tones from originating toll office.
	REORDER_TIMEOUT	Indicates originating toll office does not send bad digits signal or reset signal.
	SENDER_ATTACHED_ _TIMEOUT	Indicates originating toll office does not send attached signal.

Action

Perform diagnostics on suspect trunk. Refer to *Alarm Clearing and Performance Monitoring Procedures* for step-by-step maintenance procedures.

If diagnostics on the suspect trunk do not resolve the problem, perform diagnostics on voice trunk, data trunk, or the tone detector. Check the integrity of the voice and signaling paths. Check the originating toll office for failure.

If these actions are not effective, contact the next level of maintenance.

Associated OM registers

There are no associated OM registers.

Additional information

There is no additional information.

RSDT100

Explanation

This report is generated under the following conditions:

- by the SERVORD system when a LEN that is no longer RSDT compatible is deleted from table RSDTLIN
- each time an inconsistent tuple is found in table RSDTLIN on activation or deactivation
- when an RSDT line could not be returned to service
- when an RSDT command fails to complete
- when a line could not be deleted from table RSDTLIN
- an improper line state is encountered during deactivation

Format

The format for log report RSDT100 follows:

```
*RSDT100 mmmdd hh:mm:ss ssdd INFO RSDTLIN UPDATE REPORT
      LEN:len                      OLD STATE = preaudit state
      ERROR:probtxt
      ACTION:actxt
```

Example

An example of log report RSDT100 follows:

```
FP503 SEP05 18:14:33 4827 INFO RSDTLIN UPDATE REPORT
      LEN: HOST 00 1 00 08          OLD STATE = IN_EFFECT
      ERROR: INCOMPATIBLE LCC FOR RSDTLIN
      ACTION: RSDT LINE HAS BEEN DELETED BY SERVORD
```

Field descriptions

The following table explains each of the fields in the log report:

(Sheet 1 of 2)

Field	Value	Description
INFO RSDTLIN UPDATE REPORT	Constant	Indicates that an error has been detected in the RSDTLIN table.
LEN	Symbolic text	Indicates the line equipment number of the line with the error condition.

RSDT100 (continued)

(Sheet 2 of 2)

Field	Value	Description
OLD STATE	Character string	Indicates the LEN state in table RSDTLIN before the audit process (IN_EFFECT, ELIGIBLE, or UNDEFINED).
ERROR	Descriptive text	Indicates the error that has occurred. See the Problem/Action table at the end of this report.
ACTION	Descriptive text	Identifies what has been attempted by the system to correct the error. If the system cannot correct the error, it may be necessary for the user to take action. See the Problem/Action section at the end of this report.

Action

Message text describes the process invoked to correct the error and whether or not it was successful. If the problem was not corrected, the next audit cycle may correct the inconsistency.

Associated OM registers

Group RSDT registers DELACT and DELSO

Additional information

The following table explains problems and actions in the log report:

(Sheet 1 of 3)

Problem	Action
ERROR : LINE IS IN_EFFECT BUT NOT IN SERVICE ACTION: RSDT LINE SHOULD BE RTS	<i>Action required.</i> Check the state of the line and attempt to RTS if possible.
ERROR : LEN MUST BE PRESENT IN TABLE LNINV ACTION: RSDT LINE HAS BEEN DELETED	<i>No further action required.</i> LEN has been removed from RSDTLIN due to missing datafill in table LNINV.
ERROR : LEN MUST BE PRESENT IN TABLE LNINV ACTION: RSDT LINE CANNOT BE DELETED	<i>Possible action required.</i> LEN has no LNINV tuple. Investigate datafill and report problem to Nortel if necessary.

RSDT100 (continued)

(Sheet 2 of 3)

Problem	Action
ERROR : CARDCODE NOT SUPPORTED ACTION: RSDT LINE HAS BEEN DELETED	<i>No further action required.</i> LEN has been removed from RSDTLIN due to an unsupported CARDCODE in table LNINV.
ERROR : INCOMPATIBLE LINE STATUS FOR RSDT LINEACTION: RSDT LINE HAS BEEN DELETED	<i>No further action required.</i> LEN has been removed from RSDTLIN due to an incompatible line status in LNINV.
ERROR : INCOMPATIBLE LINE STATUS FOR RSDT LINEACTION: RSDT LINE CANNOT BE DELETED	<i>Possible action required.</i> LEN has an unsupported line STATUS in LNINV. Investigate datafill and report problem to Nortel if necessary.
ERROR : INCOMPATIBLE LCC FOR RSDT LINEACTION: RSDT LINE HAS BEEN DELETED	<i>No further action required.</i> LEN has been removed from RSDTLIN due to an unsupported LCC.
ERROR : INCOMPATIBLE LCC FOR RSDT LINEACTION: RSDT LINE CANNOT BE DELETED	<i>Possible action required.</i> LEN has an unsupported LCC. Investigate datafill and report problem to Nortel if necessary.
ERROR : INCOMPATIBLE OPTION FOR RSDT LINEACTION: RSDT LINE HAS BEEN DELETED	<i>No further action required.</i> LEN has been removed from RSDTLIN due to an incompatible option.
ERROR : INCOMPATIBLE OPTION FOR RSDT LINEACTION: RSDT LINE CANNOT BE DELETED	<i>Possible action required.</i> LEN has an unsupported option. Investigate datafill and report problem to Nortel if necessary.
ERROR : INCOMPATIBLE LCC FOR RSDT LINEACTION: RSDT LINE HAS BEEN DELETED BY SERVORD	<i>No further action required.</i> A SERVORD NEW, CHG, or SWAP command has deleted the LEN from RSDTLIN.
ERROR : INCOMPATIBLE OPTION FOR RSDT LINEACTION: RSDT LINE HAS BEEN DELETED BY SERVORD	<i>No further action required.</i> A SERVORD command has deleted the LEN from RSDTLIN.

(Sheet 3 of 3)

Problem	Action
ERROR : RSDT CI COMMAND DID NOT COMPLETE ACTION: CI CLEANUP WAS INVOKED	<i>Possible action required.</i> RSDT CI clean-up was invoked because the RSDT CI command failed to complete. As a result, an RSDT audit is scheduled to run in the next cycle. It is recommended that an audit be initiated immediately to correct any corruption by entering the CI command RSDT AUDIT.
ERROR : RSDT CHGDN COMMAND DELETED RSDT DN ACTION: RSDT DN MUST BE ADDED TO TABLE DNROUTE	<i>Action required.</i> The RSDT DN must be added to table DNROUTE. If RSDT was active before the RSDT CHGDN command was executed, then RSDT must be reactivated by entering the CI command RSDT ACT after the RSDT DN has been entered.
ERROR : IMPROPER LINE STATE ACTION: RSDT STATE CANNOT BE SET TO UNDEFINED	<i>Action required.</i> The RSDT IN_EFFECT line cannot be set to UNDEFINED because it is in an improper line state. It is recommended that the CI command RSDT AUDIT be entered when the line becomes IDLE.
ERROR : CARDCODE NOT SUPPORTED ACTION: RSDT LINE CANNOT BE DELETED	<i>Possible action required.</i> LEN has an unsupported CARDCODE in LNINV. Investigate datafill and report problem to Nortel if necessary.

DMS-100 Family

North American DMS-100

Log Report Reference Manual Volume 6 of 7

NO6100-RSDT100

Product Documentation - Dept. 3423

Nortel Networks

P.O. Box 13010

RTP, NC 27709-3010

Telephone: 1-877-662-5669

email: cits@nortelnetworks.com

Copyright © 1996-2001 Nortel Networks,
All Rights Reserved

NORTEL NETWORKS CONFIDENTIAL: The information contained herein is the property of Nortel Networks and is strictly confidential. Except as expressly authorized in writing by Nortel Networks, the holder shall keep all information contained herein confidential, shall disclose the information only to its employees with a need to know, and shall protect the information, in whole or in part, from disclosure and dissemination to third parties with the same degree of care it uses to protect its own confidential information, but with no less than reasonable care. Except as expressly authorized in writing by Nortel Networks, the holder is granted no rights to use the information contained herein.

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. Changes or modification to the DMS-100 without the express consent of Nortel Networks may void its warranty and void the user's authority to operate the equipment.

Nortel Networks, the Nortel Networks logo, the Globemark, How the World Shares Ideas, Unified Networks, DMS, DMS-100, Helmsman, MAP, Meridian, Nortel, Northern Telecom, NT, and SuperNode are trademarks of Nortel Networks.

Publication number: 297-8001-840

Product release: LEC0015 and up

Document release: Standard 14.02

Date: May 2001

Printed in the United States of America

