

297-8001-855

DMS-100 Family

North American DMS-100

Office Parameters Reference Manual Volume 3 of 3

OFCVAR, Preset office parameters

LEC0015 and up Standard 14.02 May 2001

DMS-100 Family

North American DMS-100

Office Parameters Reference Manual Volume 3 of 3

OFCVAR, Preset office parameters

Publication number: 297-8001-855

Product release: LEC0015 and up

Document release: Standard 14.02

Date: May 2001

Copyright © 1996-2001 Nortel Networks,
All Rights Reserved

Published in the United States of America

NORTEL NETWORKS CONFIDENTIAL: The information contained herein is the property of Nortel Networks and is strictly confidential. Except as expressly authorized in writing by Nortel Networks, the holder shall keep all information contained herein confidential, shall disclose the information only to its employees with a need to know, and shall protect the information, in whole or in part, from disclosure and dissemination to third parties with the same degree of care it uses to protect its own confidential information, but with no less than reasonable care. Except as expressly authorized in writing by Nortel Networks, the holder is granted no rights to use the information contained herein.

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. Changes or modification to the DMS-100 without the express consent of Nortel Networks may void its warranty and void the user's authority to operate the equipment.

Nortel Networks, the Nortel Networks logo, the Globemark, How the World Shares Ideas, Unified Networks, DMS, DMS-100, Helmsman, MAP, Meridian, Nortel, Northern Telecom, NT, and SuperNode are trademarks of Nortel Networks.

Contents

Office Parameters Reference Manual Volume 3 of 3 OFCVAR, Preset office parameters

NTP Summary Contents xi

1 OFCVAR parameters 1-1

AC_MOREDIGIT_WAIT	1-2
ACBAR_DNROUTE_ALLOW_TCAP_QUERY	1-4
ACCS_CCV_QUERY_BLK	1-6
ACCS_INTERDIGIT_TIMEOUT	1-8
ACCS_MAX_REJECTS	1-10
ACCS_OPER_SERV_ACCESS_CODE	1-12
ACCS_SEQ_CALL_LIM	1-14
ACCS_SEQ_QUERY	1-16
ACCT_ES_DIGITS	1-18
ACMS_NOC_LOG_ON-CANADA ONLY	1-20
ACQS_AUDIT_ON	1-22
AIN_OFFICE_TRIGGRP	1-24
ALIT_LOG_GEN_FREQ	1-26
AMA_FAILURE_ROUTE_POSITION	1-28
ANI_IN_SMDR	1-30
APS_REPORT_ALL_CALLS	1-32
ARI_CDR_VALUE	1-35
ASCS_DISABLE_LEVEL	1-37
ASCS_MONITOR_DELAY	1-39
ASCS_NOALARM_THRESHOLD	1-41
ASCS_NOSEND_THRESHOLD	1-43
ASCS_ROUTE_INDEX	1-45
ASCS_TRUNK_TIMEOUT	1-47
ASR_AUDIT_TIME	1-49
ASR_CUSTGRP	1-51
AUTO_ASSIGN_DNH_GRPNUM	1-53
AUTO_ASSIGN_DNH_RANGE	1-55
BICRELAY_NUM_SIMUL_TESTS	1-57
BICRELAY_XLCM_TEST_SCHEDULE	1-59
BLOCK_0_INF_INW_CALLS	1-62
BT_MCI_TIMER	1-64
BUFFER_THRESHOLDDED_REPORTS	1-66

C7_CHGOVER_SLMPR_THRESHOLD	1-67
C7_NACK_ERROR_SLMPR_THRESHOLD	1-69
C7_PDU_ERROR_SLMPR_THRESHOLD	1-71
C7_SLMPR_ALARM_ON	1-73
C7_SSCOP_CON_SLMPR_THRSHOLD	1-75
C7_SSCOP_RETRANS_SLMPR_THRESHOLD	1-77
C7_SU_ERROR_SLMPR_THRESHOLD	1-79
C7UP_RSC_LOG_THRESHOLD	1-81
CALL_CONTROL_DEFAULTS	1-83
CALL_REPORT_FORMAT	1-85
CAMA_SUSP_CALL_ALLOWED	1-87
CCW_AS_LINE_OPTION	1-89
CCW_WITHOUT_CWT_ALLOWED	1-91
CDIV_SDN_XLA	1-93
CDO_ROUTE	1-95
CDS_DN_CHECK	1-97
CFGDA_SEND_PILOT_DN_TO_SMDI_ISUP	1-99
CHECK_FOR_TMEM	1-102
CHNG_NUM_OF_TGS_FOR_PKT_18_22	1-104
CIRCUIT_TEST_NUMBER_MESSAGES	1-106
CLF_ACCESS_CODE	1-108
CMAJALARM	1-110
CMD_MAP_ENABLED	1-112
CMG_ENABLED	1-114
CMINALARM	1-115
CNDB_ON_POTS	1-117
COIN_DTF_TOTALIZER_RESET	1-119
COIN_OPERATOR_RELEASED_ON_OA	1-121
COIN_RETAIN_ON_OA	1-123
CONTINUOUS_RETRY_TIMERS	1-125
CREATE_PARTIAL_800_AMA-CANADA ONLY	1-127
CUSTOMER_DATA_CHANGE_LOGS	1-129
CUTOFF_ON_DISC_TIME	1-131
CWT_TIMEOUT	1-133
CWT_TONE_LENGTH	1-135
DAILY_ISDN_L2L3_PEG_AUDIT_TIME	1-137
DEFAULT_SIGNALLING_TYPE	1-139
DATA_CALL_SMDR	1-140
DCN_BUFFER_NUMBER_OF_BLOCKS	1-143
DCT_TEST_CALL_SPILL	1-145
DENY_POPULATED_SUBTABLE_DELETION	1-147
DIAGALARM	1-149
DIALBACKPW_ENCRYPTED	1-151
DISKLOGMEMORY	1-153
DIST_CWT_TONE	1-156
DND_ROUTE	1-158
DTULDINFO	1-161
DTUOHBTLTD	1-163
E911_CHECK_DEFAULT_ESN	1-165
E911_PSAP_DISCONNECT_TIME	1-167
E911_PSAP_OFFHK_ALARM_TIME	1-169

EA_FGD_MFTOSS7_CIP	1-171
EA_TEST_CALL_SPILL	1-173
EADAS_ENABLED-U.S. ONLY	1-175
EADAS_GENERIC_ID-U.S. ONLY	1-177
EADAS_MPC_AND_LINK-U.S. ONLY	1-179
EADAS_POPULATE_HUNT_SECTIONS	1-181
ECHODUMP_OUTPUT_FORMAT	1-183
ECORE_FORMAT	1-185
EDTULDFILE	1-187
EMERG_ANNC	1-189
ENG640M1_SCAN_RATE	1-191
ENHANCED_TRUNK_PREROUTE_ABANDON	1-193
ESG_ALARM	1-195
ESG_RERING_TIME	1-197
FACALARM	1-199
FGD_ANI_SMDR_REQD	1-201
FGD_TEST_CALL_ACK_OFFHOOK	1-203
FIXED_CFBF_DEFAULT_STATE	1-205
FOT_DIGITS	1-207
GEN_CDR300_ISDN_LOGS	1-209
GEN_CDR300_MIDNT_LOGS	1-211
GEN_CDR300_SYNC_LOGS	1-213
GENERATE_CALL_RECORDING_LOGS	1-215
GENERATE_ICAMA_LOG_ENTRY	1-217
GENERATE_ITOPS_LOG_ENTRY	1-219
HPC_EGRESS_QUEUEING	1-221
IAA_REQUESTED	1-223
ICAMA_ANI_FAILURE_ACTION	1-226
ICAMA_REQUESTED	1-228
ICT_DN_CHECK	1-230
IGNORE_REGION_THRESH	1-232
IMAJALARM	1-234
IMINALARM	1-236
INHIBIT_AUTO_CONGESTION_CNTL	1-238
INTL_ICR_REQUESTED	1-239
INTL_RU_OVFL_ACTION	1-241
INTL_SILENT_SWITCHMAN_TMO	1-243
ISDN_LOSS_OF_SIG_DGASP_ALARM	1-245
ISDN_LOSS_OF_SIG_NO_DGASP_ALARM	1-247
ISDN_LOSS_OF_SYNC_WORD_ALARM	1-249
ISDN_MPLU_NODE_FAILURE_ALARM	1-251
ISDN_NT1_TEST_MODE_ALARM	1-253
ISDN_PERFORMANCE_MON_ALARM	1-255
ISDN_T_SYNC_LOST_ALARM	1-257
ISDNBRI_PRIVACY_CHANGE_ALLOWED	1-259
ITS_TEST_SESSION_TIMEOUT	1-261
JPN1_ACM_ALWAYS_EXPECTED	1-263
LAYER2_CIRCUIT_ABN_PEGS_THLD	1-265
LAYER2_PACKET_ABN_PEGS_THLD	1-267
LAYER2_PEGS_THRESHOLD_LEVEL	1-269
LAYER2_SERVICE_DSRPT_THLD	1-271

LAYER3_CIRCUIT_ABN_PEGS_THLD	1-273
LAYER3_PACKET_ABN_PEGS_THLD	1-275
LAYER3_PACKET_SVC_THLD	1-277
LCARDALARM	1-279
LCDREX_CONTROL	1-281
LEAS_SS7_ACTIVE	1-285
LINE_CARD_MONITOR	1-287
LINE_WITH_CWT_CAN_FLASH	1-289
LOCAL_COIN_INIT_TIME	1-291
LOCAL_COIN_OVER_TIME	1-292
LOG_CENTRAL_BUFFER_SIZE	1-293
LOG_DEVICE_BUFFER_SIZE	1-295
LOG_OFFICE_ID	1-297
LOOP_AROUND_TIMEOUT_IN_MIN	1-299
LSETALARM	1-301
MAX_IAM_HOPS	1-303
MAX_RMAP_SESSIONS	1-305
MCARDALARM	1-307
MCCS_SEQ_CALL_LIM	1-309
MCCS_SEQ_QUERY	1-311
MCT_TONE	1-313
MCTIMER	1-315
METER_PULSE_MISMATCH_THRESHOLD	1-317
METER_PULSE_MONETARY_RATE	1-319
MSETALARM	1-321
MSGPSOC_OM_CONTROL	1-323
MTA_RLM_TIME	1-325
MTA_RMM_TIME	1-326
MTULDINFO	1-328
NDIAGALARM	1-330
NEMHEARTBEAT	1-332
NETFAB_DAILY_DURATION	1-334
NETFAB_SCHEDULE_ENABLED	1-336
NETFAB_SCHEDULE_TIME	1-338
NETMINDER_MPC_AND_LINK	1-340
NEW_OE_LOG_FORMAT	1-342
NODEREXCONTROL	1-345
NON_DMS_NAME_LOOKUP	1-352
NPAC204_THROTTLE	1-355
NSS_DBCP_TCN_BLOCK_CALL	1-357
NSS_DBCP_TCN_RESP_TIMEOUT	1-359
NTC_CALL_DURATION_ADJ	1-360
NTC_CONN_REATTEMPTS	1-362
NTC_REATTEMPTS	1-364
NTC_TIME_BTW_CONN_REATTEMPTS	1-366
NTC_TIME_BTW_REATTEMPTS	1-368
NTC_XLATIONS	1-370
OCCTS_DEFAULT_REG_LOG	1-372
OM_SOURCE_IDENTIFICATION	1-374
ORIG_ARTER_FREQUENCY	1-376
ORIG_ARTER_LEVEL	1-378

ORIG_INCREASE_SPM 1-380
PER_CALL_GND_LOOP_TEST 1-382
PER_OPC_LOGDEV_BUFFER_SIZE 1-384
PERFORMANCE 1-386
PMSTAT_OM_CONTROL 1-388
POTS_SIMULATE_1A 1-390
PRE_ROUTE_ABANDON_TRK116_LOG 1-392
PRINTOUT_OF_CALLS 1-394
PROMPT_HUNT_MEM_LCC 1-396
PSPDALARM 1-398
QDIAGALARM 1-400
R2_ANI_DENY 1-402
RAG_QUE_LEN 1-404
RAG_RECALL_TIMEOUT 1-406
RATING_SMALLEST_COIN 1-408
RECORD_CLG_NPA_NXX 1-410
RECORD_UNANSWERED_CALLS 1-412
REDUCE_DIGMAN_ANS_DETECTION_TIME 1-414
RES_CHK_OOS 1-416
RES_CMSG_ACCESS_AND_ERROR_TMT 1-418
RES_SO_SIMPLIFICATION 1-420
REVERSE_DISPLAY_DISALLOWED 1-422
RMAN_REASGNAGT_CHGROUTE_IN_DUMP 1-424
RMSG_MAJALARM 1-426
RMSG_MINALARM 1-428
SCAI_CONTINUITY_AUDIT_INTERVAL 1-430
SDIAGALARM 1-432
SEAS_LRF_GTT_OCC 1-434
SEAS_LRF_GTT_PER 1-436
SEAS_LRF_MTP_OCC 1-438
SEAS_LRF_MTP_PER 1-440
SIG_TST 1-442
SLE_LANGUAGE 1-444
SLE_VOICEBACK_PUBLIC_ICM 1-446
SLNETWORK_NAME 1-448
SLU_7DIGIT_DN 1-450
SLVP_RCHD_TIMER 1-452
SMDR_LOG_RPT 1-454
SO_ALLOW_REDUNDANT_FEATURE 1-456
SO_ALLOW_REDUNDANT_FEATURE_CHF 1-458
SO_CICP_OFRT_ICP_ALLOWED 1-460
SO_PROMPT_FOR_CABLE_PAIR 1-462
SO_PROMPT_FOR_LTG 1-464
SPCL_SECURITY_A_DR 1-465
SPECIAL_AMA_REPORT 1-467
SRCF_FILE_VOLNAME 1-469
SYSLOG_ACCESS 1-471
TABLE_ACCESS_CONTROL 1-473
TASINTVL 1-475
TBI_CONNECT_OPR_A 1-477
TBI_FORCE_RELEASE 1-479

TBI_OFFER 1-481
TBI_OPR_TIMEOUT 1-483
TCAPNM_BLK_QUERY_PRIV_DNS 1-485
TCAPNM_INTERLATA_QUERY 1-487
TCMALARM 1-489
TERM_ARTER_FREQUENCY 1-491
TERM_ARTER_LEVEL 1-493
TEST_CALL_AMR_SPILL 1-495
TEST_CALL_II_SPILL 1-496
TEST_CALL_SPILL 1-498
TEST_R2_ANI_DENY 1-499
THRESHOLD_IS_SAMPLING 1-501
TOLL_DIVERSION_SIGNAL 1-502
TRA125M1_SCAN_RATE 1-503
TRA125M2_SCAN_RATE 1-504
TRA250M1_SCAN_RATE 1-505
TRANSLATION_OPTIONS 1-506
TRK_OOS_CHK_ON 1-508
TRKLPBK_TIMEOUT_IN_MINUTES 1-510
TRUNK_QUERY_AUDIT_START_TIME 1-512
TSO_FIRST_STAGE_TIMEOUT 1-514
TSTLN_OP_DELAY 1-516
TTR_SELECTION_OPTION 1-518
UDIAGALARM 1-521
USAID_CLID_BLK_SC 1-523
UVM_DEPOSIT_PRIV_DN_TMT 1-525
VARIABLE_STUTTER_DIALTONE_TIMING 1-527
WLC_OV_REPORTING 1-529
WLN_DEFAULT_TIMEOUT 1-531
WML_ACCESS_CODE 1-533
XBAR_OVERFLOW_ON 1-534
XBARCAB1 1-536
XBARCAB2 1-538
XBARSAT1 1-540
XBARSAT2 1-542
XID_DESTINATION_ID 1-544
XLAPLAN_RATEAREA_SERVORD_ENABLED 1-545
XPMSGOC_OM_CONTROL 1-551
XPMOCC_OM_CONTROL 1-553
XPMOVLDM_OM_CONTROL 1-555

2	Preset office parameters—U.S. only	2-1
	Description 2-1	

3	DMS-100 local switch with 0-35% MDC and ISDN lines—U.S. only	3-1
	Organization 3-1	
	DMS-100 local switch with 0-35% MDC and ISDN lines	
	Table OFCENG 3-2	
	DMS-100 local switch with 0-35% MDC and ISDN lines	

Table OFCOPT	3-51
DMS-100 local switch with 0-35% MDC and ISDN lines	
Table OFCSTD	3-53
DMS-100 local switch with 0-35% MDC and ISDN lines	
Table OFCVAR	3-54
DMS-100 local switch with 0-35% MDC and ISDN lines	
Table DATASIZE	3-55

4 DMS-100 local switch with 36—100% MDC and ISDN lines—U.S. only **4-1**

Organization	4-1
DMS-100 local switch with 36-100% MDC and ISDN lines	
Table OFCENG	4-2
DMS-100 local switch with 36-100% MDC and ISDN lines	
Table OFCOPT	4-51
DMS-100 local switch with 36-100% MDC and ISDN lines	
Table OFCSTD	4-53
DMS-100 local switch with 36-100% MDC and ISDN lines	
Table OFCVAR	4-54
DMS-100 local switch with 36-100% MDC and ISDN lines	
Table DATASIZE	4-55

5 DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines—U.S. only **5-1**

Organization	5-1
DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines	
Table OFCENG	5-2
DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines	
Table OFCOPT	5-88
DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines	
Table OFCSTD	5-90
DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines	
Table OFCVAR	5-91
DMS-100 local/toll switch with 0-35% MDC and ISDN lines	
Table DATASIZE	5-92

6 DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines—U.S. only **6-1**

Organization	6-1
DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines	
Table OFCENG	6-2
DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines	
Table OFCOPT	6-88
DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines	
Table OFCVAR	6-90
DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines	
Table DATASIZE	6-91

7	DMS-200 toll switch—U.S. only	7-1
	Organization	7-1
	DMS-200 toll switch Table OFCENG	7-2
	DMS-200 toll switch Table OFCOPT	7-12
	DMS-200 toll switch Table OFCSTD	7-13
	DMS-200 toll switch Table OFCVAR	7-14
	DMS-200 toll switch Table DATASIZE	7-15

NTP Summary Contents

Office Parameters Reference Manual Volume 1 of 3 OFCENG

About this document	Vol. 1, xxxvii
How to check the version and issue of this document	Vol. 1, xxxv
References in this document	Vol. 1, xxxv
What precautionary messages mean	Vol. 1, xxxvi
How commands, parameters, and responses are represented	Vol. 1, xxxvii
Input prompt (>)	Vol. 1, xxxvii
Commands and fixed parameters	Vol. 1, xxxvii
Variables	Vol. 1, xxxvii
Responses	Vol. 1, xxxviii
 1 Office parameters overview	 Vol. 1, 1-1
Introduction	Vol. 1, 1-1
What to collect	Vol. 1, 1-2
Operational measurements	Vol. 1, 1-2
DMSMON	Vol. 1, 1-5
Tables of daily usage for critical office parameters	Vol. 1, 1-8
Table OFCENG	Vol. 1, 1-10
How to interpret what is collected	Vol. 1, 1-12
How often to collect	Vol. 1, 1-15
How to make a decision	Vol. 1, 1-15
Office parameters that are not recommended to be modified	Vol. 1, 1-16
Reducing office parameter values	Vol. 1, 1-16
Increasing office parameter values	Vol. 1, 1-17
Notifying Nortel	Vol. 1, 1-17
NORESTARTSWACT utility	Vol. 1, 1-18
Summary of NORESTARTSWACT procedure	Vol. 1, 1-20
NORESTARTSWACT procedure	Vol. 1, 1-21
 2 Parameter to table cross-reference	 Vol. 1, 2-1
 3 OFCENG parameters	 Vol. 1, 3-1
ACB_BLOCKED_FOR_ACD_UCD	Vol. 1, 3-2
ACCS_NUM_RU	Vol. 1, 3-4
ACCSDB_RESPONSE_DELAY	Vol. 1, 3-6
ACD_MIS_OUT_EVENT_BUFFER_SIZE	Vol. 1, 3-8

ACD_OVERFLOW_BLOCKS	Vol. 1, 3-11
ACD_TOLL_DELAYED_BILLING	Vol. 1, 3-14
ACT_MAX_DURATION	Vol. 1, 3-16
ACTIVE_DN_SYSTEM	Vol. 1, 3-18
AIN_ACTIVE	Vol. 1, 3-23
AIN_ALT_ROUTE_SEL	Vol. 1, 3-25
AIN_MAX_SERIAL_TRIGGERS	Vol. 1, 3-27
AIN_NUM_00_PARA_EXT_BLKs	Vol. 1, 3-30
AIN_NUM_01_00_EXT_BLKs	Vol. 1, 3-32
AIN_NUM_EXT_BLKs	Vol. 1, 3-34
AIN_NUM_PROCESSING_EXT_BLKs	Vol. 1, 3-37
AIN_NUM_TERM_NOTIF_EXT_BLKs	Vol. 1, 3-39
AIN_O_NO_ANSWER_EVENT_TIMER	Vol. 1, 3-41
AIN_O_NO_ANSWER_TRIGGER_TIMER	Vol. 1, 3-43
AIN_T_NO_ANSWER_EVENT_TIMER	Vol. 1, 3-45
AIN_T1_TIMER	Vol. 1, 3-48
AIN_TDISC_TIMER	Vol. 1, 3-50
AIN_TSTRC_TIMER	Vol. 1, 3-52
AIN00_EXTEND_NAT_OF_NUM	Vol. 1, 3-54
AIN00_PCM_SSP_BILLING	Vol. 1, 3-56
AIN00_PODP_ANI_CN_OUTPULSING	Vol. 1, 3-58
ALL_ACD_LOGIN_IDS_VALID	Vol. 1, 3-60
ALLOC_UNIV_EXT_BLK	Vol. 1, 3-62
ALLOW_RINGING_ON_TIP_SIDE	Vol. 1, 3-64
ALT_LIT_RES_NUM_FAILS_TO_SET	Vol. 1, 3-66
ALT_LIT_RES_NUM_PASSES_TO_CLR	Vol. 1, 3-69
ALT_TTT_USAGE_PERCENTAGE	Vol. 1, 3-71
ALT_TTU_USAGE_PERCENTAGE	Vol. 1, 3-73
AMA_EBCDIC_CONVERT	Vol. 1, 3-75
AMA_FAILURE_FREE_CALL	Vol. 1, 3-77
AMA_LONG_DUR_AUDIT_INTERVAL	Vol. 1, 3-79
APPLY_PATCHES_BY_SEQUENCE	Vol. 1, 3-81
AR_BLOCK_PRIVATE_CTX	Vol. 1, 3-83
AR_BLOCK_PRIVATE_RES	Vol. 1, 3-85
AR_BLOCK_PRIVATE_TOLL_METHOD	Vol. 1, 3-87
AR_DDN_LINE_OR_OFFICE	Vol. 1, 3-89
AUXCP_CPU_SHARE	Vol. 1, 3-91
AVG_NUM_TGS_PER_OHCBQCALL	Vol. 1, 3-94
B911_3WC_ALLOWED	Vol. 1, 3-96
BACKUP_METER_FREQUENCY_LINES	Vol. 1, 3-98
BACKUP_METER_FREQUENCY_TRUNKS	Vol. 1, 3-100
BC_CHECKING_SCOPE	Vol. 1, 3-102
BELL_ANI_ALARM_ID	Vol. 1, 3-104
BELL_ANI_INTERCEPT_ID	Vol. 1, 3-106
BLOCK_555_DIGITS	Vol. 1, 3-108
BLOCK_D_E_DIGITS	Vol. 1, 3-110
BTUP_INTL_DGT_PREFIX	Vol. 1, 3-112
BTUP_NETWK_ID	Vol. 1, 3-114
BTUP_PARTIAL_CLI	Vol. 1, 3-116
BTUP_VER_IND	Vol. 1, 3-118
C7GTT_DELTA_FILE_ACTIVITY_STATE	Vol. 1, 3-120

C11_EXPANSION	Vol. 1, 3-122
C11_OUTG_EXPANSION	Vol. 1, 3-123
C12_EXPANSION	Vol. 1, 3-125
C12_OUTG_EXPANSION	Vol. 1, 3-126
C12_PLUS_OUTG_EXPANSION	Vol. 1, 3-128
CABLE_LOCATE_TIMEOUT	Vol. 1, 3-130
CABLE_SHORT_TIMEOUT	Vol. 1, 3-132
CALL_WAITING_CONFERECE	Vol. 1, 3-134
CC_ENGLEVELEVEL_WARNING_THRESHOLD	Vol. 1, 3-136
CC_REX_SCHEDULED_HR	Vol. 1, 3-139
CCMTR_FAILURE_FREE_CALL	Vol. 1, 3-141
CCW_ORIGINATION_CONFIRM_TONE	Vol. 1, 3-143
CDC_RESTRICTION_ACTIVE	Vol. 1, 3-146
CDIV_EXT_BLOCKS	Vol. 1, 3-148
CDR_100_BYTE_FORMAT	Vol. 1, 3-150
CDR_FORMAT	Vol. 1, 3-152
CFD_EXT_BLOCKS	Vol. 1, 3-154
CFFP_CONTROL	Vol. 1, 3-157
CFW_EXT_BLOCKS	Vol. 1, 3-159
CFX_SEPARATE_KEYLIST_FEATURE	Vol. 1, 3-163
CFZ_EXT_BLOCKS	Vol. 1, 3-165
CHARGE_UPDATE_FREQUENCY	Vol. 1, 3-169
CIRCUIT_QUERY_AUDIT_START_TIME	Vol. 1, 3-172
CLI_NATIONAL_PREFIX	Vol. 1, 3-174
CMC_REX_SCHEDULED_HR	Vol. 1, 3-176
COINDISPOSAL	Vol. 1, 3-178
COMMAND_SCREEN	Vol. 1, 3-180
CONNECTION_HOLD_TIMER	Vol. 1, 3-182
COPP_RELAY_OPEN_TIME	Vol. 1, 3-183
COT_ANNOUNCEMENT_TYPE	Vol. 1, 3-186
CPERRORTHRESHOLD	Vol. 1, 3-188
CPM_EXTENDED	Vol. 1, 3-190
CRS_ALARM_CRITICAL_THRESHOLD	Vol. 1, 3-192
CRS_ALARM_MAJOR_THRESHOLD	Vol. 1, 3-194
CRS_PRU_POOL1_SIZE	Vol. 1, 3-196
CRS_PRU_POOL2_SIZE	Vol. 1, 3-201
CRS_PRU_POOL3_SIZE	Vol. 1, 3-223
CRS_SUBRU_POOL1_SIZE	Vol. 1, 3-227
CRS_SUBRU_POOL2_SIZE	Vol. 1, 3-246
CRS_SUBRU_POOL3_SIZE	Vol. 1, 3-267
CRS_SUBRU_POOL4_SIZE	Vol. 1, 3-281
CRS_SUBRU_POOL5_SIZE	Vol. 1, 3-291
CSLINK_ALARM_THRESHOLDS	Vol. 1, 3-294
CSMI_CUST_PROG_CFW	Vol. 1, 3-297
CSMI_DELETE_STUB_VM	Vol. 1, 3-299
CSMI_INTERCEPT_3WC_CONNECTION	Vol. 1, 3-301
CSMI_PPU_SCREENING_TIMER	Vol. 1, 3-303
CSMI_SCREENING_TIMER	Vol. 1, 3-305
CUSTOMER_GROUP_IBNGRP_OM_COUNT	Vol. 1, 3-307
CWT_ON_POTS_IBN_3WC_CONTROLLER	Vol. 1, 3-309
DAL_PXFX_ON_SAME_SPM	Vol. 1, 3-311

DATA_COS Vol. 1, 3-314
DB_MAX_SIZE Vol. 1, 3-316
DCA_GATEWAY Vol. 1, 3-318
DCH_BD_STATMUX_RATIO Vol. 1, 3-320
DCND_TIMERS Vol. 1, 3-323
DCT_MEM_LIMIT Vol. 1, 3-325
DEBUG_HUNT_SWERRS Vol. 1, 3-329
DEF_AMR5_CAT_CODE Vol. 1, 3-331
DEFAULT_BEARER_CAPABILITY Vol. 1, 3-333
DEFAULT_CARRIER_OR_TREAT Vol. 1, 3-336
DEFAULT_COMMANDCLASS Vol. 1, 3-338
DEFAULT_DCA_NETWORK Vol. 1, 3-340
DEFAULT_LANGUAGE Vol. 1, 3-342
DEFAULT_LSPAO Vol. 1, 3-344
DEFAULT_LSPSO Vol. 1, 3-346
DELAY_FSPAIS_ALARMS Vol. 1, 3-348
DIAGHIST_M_LTF_COUNT Vol. 1, 3-350
DIAGHIST_M_LTF_DETECTION Vol. 1, 3-352
DIRP_PFILE_AUDIT Vol. 1, 3-354
DISC_TIME_BILLED Vol. 1, 3-356
DISCTO_TIMEOUT_VALUE Vol. 1, 3-358
DM_HIT_TIME Vol. 1, 3-360
DM_PCM_ENCODING Vol. 1, 3-362
DMSBUS_POLL_FREQUENCY Vol. 1, 3-364
DNLPIC_MAX_NUM_DN_TUPLES Vol. 1, 3-366
DNPIC_MAX_NUM_DN_TUPLES Vol. 1, 3-368
DRAM_BARGE_IN Vol. 1, 3-370
DTSR_AUTO_DEACTIVATION_ENABLE Vol. 1, 3-372
DYNAMIC_MEMORY_SIZE Vol. 1, 3-374
E2ALINKEQP Vol. 1, 3-377
E911_AUD_RING_FROM_PSAP Vol. 1, 3-379
E911_LDT_PSAP_SW_STATUS Vol. 1, 3-381
E911_LOCAL_ACCESS_ROH_TONE_TIME Vol. 1, 3-383
EA_CCIS6_TANDEM_BILL Vol. 1, 3-385
EA_ISUP_INTERMEDIATE_TANDEM Vol. 1, 3-388
EA_MF_SS7_EXT_BLOCK_COUNT Vol. 1, 3-390
EA_OCS_AND_DP_OVLP_NEEDED Vol. 1, 3-393
EA_OCS_DIGCOL_METHOD Vol. 1, 3-395
EA_OSS_HOLD_TIMEOUT_MINS Vol. 1, 3-401
EA_OVERLAP_CARRIER_SELECTION Vol. 1, 3-403
EA_TAB_CICSIZE4_OBSOLETE Vol. 1, 3-405
EA_WITH_CD Vol. 1, 3-407
EADAS_CIC_STATUS Vol. 1, 3-409
EADAS24H_BUFFER_SIZE Vol. 1, 3-411
EADAS30M_BUFFER_SIZE Vol. 1, 3-414
EADAS60M_BUFFER_SIZE Vol. 1, 3-417
EAEO_FOUR_DIGIT_CIC_STATUS Vol. 1, 3-420
EAEO_OFFICE_TYPE Vol. 1, 3-423
EBS_BUZZ_SPLASH_ON Vol. 1, 3-425
EBS_TO_TRUNK_TRD_TIME Vol. 1, 3-427
ENHANCED_DEAD_SYSTEM_ALARM Vol. 1, 3-429

ESAENTRY	Vol. 1, 3-431
ESAEXIT	Vol. 1, 3-433
EXPIRED_PASSWORD_GRACE	Vol. 1, 3-435
FEATURE_ADMIN_CHARGE	Vol. 1, 3-437
FLOW_CONTROL_TIMEOUT	Vol. 1, 3-439
FRR_ROUTING_RULES_OVERRIDE	Vol. 1, 3-441
FTRQ2WPERMS	Vol. 1, 3-443
FTRQ8WPERMS	Vol. 1, 3-446
FTRQ16WAREAS	Vol. 1, 3-450
FTRQAGENTS	Vol. 1, 3-455
FTRQAUDIT	Vol. 1, 3-462
FXOGS_REMBSY_BITS	Vol. 1, 3-464
GLOBAL_CUTOFF_ON_DISCONNECT	Vol. 1, 3-466
GOS_NUM_RU	Vol. 1, 3-470
GROUND_START_DELAY	Vol. 1, 3-473
GUARANTEED_TERMINAL_CPU_SHARE	Vol. 1, 3-475
HPC_IAM_Priority	Vol. 1, 3-478
IAM_USE_NAME_CHARS	Vol. 1, 3-480
IMMEDIATE_RING_ENABLE	Vol. 1, 3-482
IMP_DELAY	Vol. 1, 3-484
INTL_GATEWAY_OFFICE	Vol. 1, 3-486
INTL_LOCAL_OFFICE	Vol. 1, 3-488
INTRALATA_DEFAULT_USE_TRKLATA	Vol. 1, 3-490
INWATS_CCIS_OSO_ENABLE	Vol. 1, 3-492
INWATS_LOCAL_TERMINATION	Vol. 1, 3-494
INWATS_ON_AMA	Vol. 1, 3-496
ISDN_DPN_PH_GENERIC	Vol. 1, 3-498
ISDN_NET_1A_INTERWORKING	Vol. 1, 3-500
ISDNBRI_CNAMD_CND_ONE_AMA	Vol. 1, 3-502
ISGBDOM_BLKSIZE	Vol. 1, 3-504
ITS_NUM_CONCURRENT_SESSIONS	Vol. 1, 3-506
KSET_INTER_GRP_DISP	Vol. 1, 3-508
KSHUNT_EXT_BLOCKS	Vol. 1, 3-510
LCDI_SYNC_BURST	Vol. 1, 3-513
LCDI_SYNC_DELAY	Vol. 1, 3-515
LCDR_SEC_ANI_TEST	Vol. 1, 3-517
LCML_SYNC_BURST	Vol. 1, 3-519
LCML_SYNC_DELAY	Vol. 1, 3-520
LDS_ALERT_NO_CLID	Vol. 1, 3-521
LDS_AUTO_PROV_ENABLED	Vol. 1, 3-523
LDS_CWT_TIMEOUT	Vol. 1, 3-526
LDS_ENABLED	Vol. 1, 3-529
LDS_OM_ENABLED	Vol. 1, 3-531
LDS_PATTERN	Vol. 1, 3-533
LDS_RINGING_ENABLED	Vol. 1, 3-536
LEAS_FOUR_DIGIT_CIC_STATUS	Vol. 1, 3-538
LEAS_SS7_CIC	Vol. 1, 3-540
LN_LONG_PARTIAL_DIAL_TIME	Vol. 1, 3-542
LN_PERM_SIG_TIME	Vol. 1, 3-545
LN_SHORT_PARTIAL_DIAL_TIME	Vol. 1, 3-547
LOCAL_LD_SPRI_ON_SAME_SPM	Vol. 1, 3-550

LOG_PRIORITIZATION	Vol. 1, 3-553
LONG_TIMED_RELEASE_DISC_TIME	Vol. 1, 3-555
LOWSPR_ALARM_ON_CARD_SPR_BASIS	Vol. 1, 3-558
LSCM_SYNC_BURST	Vol. 1, 3-560
LSCM_SYNC_DELAY	Vol. 1, 3-563
LSPI_FORWARD	Vol. 1, 3-566
MARKET_OF_OFFICE	Vol. 1, 3-568
MAX_CMAP_SESSIONS	Vol. 1, 3-572
MAX_DTA_ON_SWITCH	Vol. 1, 3-574
MAX_HPC_CALLS_QUEUED	Vol. 1, 3-576
MAX_LINES	Vol. 1, 3-578
MAX_MADN_MEMBERS_PER_LSG	Vol. 1, 3-580
MAX_MFT_FILES	Vol. 1, 3-582
MAX_NO_OF_3_PORTS_IN_CHAIN	Vol. 1, 3-584
MAX_NO_OF_ALT_TEST_PROCS	Vol. 1, 3-586
MAX_NO_OF_TRANS_ID	Vol. 1, 3-588
MAX_NPT_SESSIONS	Vol. 1, 3-589
MAX_NRL_SESSIONS	Vol. 1, 3-591
MAX_NUM_PCM_RCVR	Vol. 1, 3-593
MAX_NUM_PRI_MWIC_CONTROL	Vol. 1, 3-595
MAX_NUM_WIDEBAND_CALLS	Vol. 1, 3-597
MAX_PROGRAMMERS	Vol. 1, 3-599
MAX_ROUTE_QUEUED_PER_TRKGRP	Vol. 1, 3-601
MAX_SDPOOL_NO	Vol. 1, 3-604
MAX_SUBSCRIBERS_IN_VLR	Vol. 1, 3-606
MAX_TRUNK_METER_BLOCKS	Vol. 1, 3-608
MAX_TRUNKS_IN_ACB_SCAN	Vol. 1, 3-610
MAXNUCS	Vol. 1, 3-612
MAXSTS	Vol. 1, 3-615
METER_AUDIT	Vol. 1, 3-617
MF_LAST_DIGIT_DELAY	Vol. 1, 3-619
MIN_NUMBER_OF_DIGS_RPTD_ON_OVLP	Vol. 1, 3-621
MIN_PASSWORD_LENGTH	Vol. 1, 3-623
MINIMUM_CHARGE_DURATION	Vol. 1, 3-624
MINIMUM_CLI_LENGTH	Vol. 1, 3-626
N5_CLB_TIMER	Vol. 1, 3-628
N5_USING_UTR	Vol. 1, 3-630
N6_CLB_TIMER	Vol. 1, 3-632
NACD_BRDCAST_INTERVAL	Vol. 1, 3-634
NACD_RI_DELTA_PARM	Vol. 1, 3-636
NATIONAL_COUNTRY_CODE	Vol. 1, 3-638
NCCBS	Vol. 1, 3-640
NETWORK_ELEMENT_ID	Vol. 1, 3-644
NFA_ANSWER_DETECT_TIME	Vol. 1, 3-646
NFA_IMPL_CONNECT_TIMER	Vol. 1, 3-648
NFA_IMPL_DISCON_RECON_TIMER	Vol. 1, 3-650
NFA_IMPLCT_BYPASS_UTR	Vol. 1, 3-653
NFA_INVERTED_WINK_DURATION	Vol. 1, 3-656
NFA_PRE_DIAL_DELAY_TIME	Vol. 1, 3-658
NMS_ACKNOWLEDGEMENT_TIMEOUT	Vol. 1, 3-660
NMULTIBLKS	Vol. 1, 3-662

NO_ANS_CALLS_ONTAPE Vol. 1, 3-664
NO_LOCAL_COIN_EXT_BLKs Vol. 1, 3-666
NO_OCCTS_OM_REGISTERS Vol. 1, 3-669
NO_OF_CLONE_TIDS Vol. 1, 3-671
NO_OF_CRITICAL_FTR_DATA_BLKs Vol. 1, 3-675
NO_OF_FTR_CONTROL_BLKs Vol. 1, 3-678
NO_OF_FTR_XLA_BLKs Vol. 1, 3-682
NO_OF_HIS_CONTROL_BLKs Vol. 1, 3-685
NO_OF_HIS_DATA_BLKs Vol. 1, 3-690
NO_OF_HUGE_EXT_BLKs Vol. 1, 3-705
NO_OF_LARGE_EXT_BLKs Vol. 1, 3-707
NO_OF_LARGE_FTR_DATA_BLKs Vol. 1, 3-710
NO_OF_MEDIUM_EXT_BLKs Vol. 1, 3-713
NO_OF_MEDIUM_FTR_DATA_BLKs Vol. 1, 3-715
NO_OF_ORIG_INFO_EXT_BLKs Vol. 1, 3-719
NO_OF_PVN_EXTBLK Vol. 1, 3-722
NO_OF_PVN_TERM_EXTBLK Vol. 1, 3-726
NO_OF_SC_EXT_BLKs Vol. 1, 3-729
NO_OF_SMALL_EXT_BLKs Vol. 1, 3-732
NO_OF_SMALL_FTR_DATA_BLKs Vol. 1, 3-736
NO_OF_X_LARGE_FTR_DATA_BLKs Vol. 1, 3-739
NO_OF_XLARGE_EXT_BLKs Vol. 1, 3-741
NO_RING_ON_TIP_FOR_LM Vol. 1, 3-745
NO_TFAN_OM_REGISTERS Vol. 1, 3-747
NODE Vol. 1, 3-749
NOP_DNA_DEFAULT_ACCESS Vol. 1, 3-751
NOP_USERID_SECURITY_ACCESS Vol. 1, 3-753
NORM_CALL_SS7_IAM_MSG_PRIORITY Vol. 1, 3-755
NOS_QUANTITY_OF_SVCS Vol. 1, 3-757
NRS_AUD_DELAY Vol. 1, 3-759
NSS_RDD_REPLDIGS_LENGTH_A Vol. 1, 3-761
NSS_RDD_REPLDIGS_LENGTH_B Vol. 1, 3-763
NTC_RNGBACK_TIME Vol. 1, 3-765
NUM_CALLREC_STREAMS Vol. 1, 3-767
NUM_DCR_EXT_BLKs Vol. 1, 3-769
NUM_DCR_NP_ACCESS Vol. 1, 3-772
NUM_ENGR_NWM_TRKGRP_CTRLs Vol. 1, 3-774
NUM_IBN_IXLA_EXT_BLOCKS Vol. 1, 3-776
NUM_ICAMA_RECORDING_UNITS Vol. 1, 3-779
NUM_ICT_EXT_BLKs Vol. 1, 3-781
NUM_INDA_EXT_BLKs Vol. 1, 3-783
NUM_INTL_RECORDING_UNITS Vol. 1, 3-785
NUM_ISUP_EXT_BLKs Vol. 1, 3-787
NUM_MTR_EXT_BLOCKS Vol. 1, 3-788
NUM_OF_CCIS_INWATS_BLOCKS Vol. 1, 3-793
NUM_OF_INWATS_EXT_BLOCKS Vol. 1, 3-796
NUM_OF_NSC_EXT_BLK Vol. 1, 3-799
NUM_OF_NT_RECORDING_UNITS Vol. 1, 3-803
NUM_OF_RTEB_EXTBLKS Vol. 1, 3-806
NUM_RC_EXT_BLKs Vol. 1, 3-809
NUM_SME_CONTROL_BLOCKS Vol. 1, 3-813

NUM_SME_DATA_BLOCKS Vol. 1, 3-816
 NUMBER_OF_CDR_UNITS Vol. 1, 3-818
 NUMBER_OF_DIGITS_PER_DN Vol. 1, 3-820
 NUMBER_OF_DITM_EXTENSION_BLOCKS Vol. 1, 3-822
 NUMCALLPROCESSES Vol. 1, 3-825
 NUMCPWAKE Vol. 1, 3-828
 NUMECCBS Vol. 1, 3-834
 NUMIBNCQEXTBLK Vol. 1, 3-836
 NUMLONGBUFFERS Vol. 1, 3-839
 NUMOHCQBQTRANSBLKS Vol. 1, 3-842
 NUMPERMEXT Vol. 1, 3-844
 NUMTLBS Vol. 1, 3-846
 NWMTGBLU Vol. 1, 3-849
 NX25_RR_EACH Vol. 1, 3-850
 OAM_HW_PRESENT Vol. 1, 3-852
 OCCTS_ENHANCED_FEATURE Vol. 1, 3-854
 OCCTS_IN_MAX_NUMBER Vol. 1, 3-856
 OCCTS_OUT_MAX_NUMBER Vol. 1, 3-859
 OFFICE_CLLI_NAME Vol. 1, 3-862
 OFFICE_DS_FUNCTION_NUMBER Vol. 1, 3-864
 OFFICE_DS_SQD_SAMPLING_RATE Vol. 1, 3-866
 OFFICE_ID_ON_AMA_TAPE Vol. 1, 3-868
 OFFICE_ID_ON_CDR_TAPE Vol. 1, 3-869
 OFFICE_LANGUAGE Vol. 1, 3-870
 OMPRTFORMAT Vol. 1, 3-873
 OMTAPESUPPRESSION Vol. 1, 3-874
 OMTELCOLABEL Vol. 1, 3-875
 OMXFR Vol. 1, 3-876
 ORIGS_TO_BLEED Vol. 1, 3-878
 ORIGTHRES Vol. 1, 3-881
 OS_CALLS_WAITING_Q_SIZE Vol. 1, 3-884
 OS_CT_SEARCH_DEPTH Vol. 1, 3-885
 OS_NUM_CALL_QUEUES Vol. 1, 3-887
 OS_NUM_POSITIONS Vol. 1, 3-889
 PASSWORD_LIFETIME Vol. 1, 3-891
 PATCH_BUNDLE Vol. 1, 3-893
 PHINFO_AUDIT_TIME Vol. 1, 3-895
 PLUS48V_OVERTIME_COIN_TEST Vol. 1, 3-897
 PM_PCM_PROTOCOL_SELECTION Vol. 1, 3-899
 POLL_SCHEDULER Vol. 1, 3-902
 PPMBUFFS Vol. 1, 3-904
 PREEMPTABLE_CONF6_THRESHOLD Vol. 1, 3-907
 PRINT_NET102_LOGS Vol. 1, 3-908
 PSTN_GT_SIZE Vol. 1, 3-910
 QMSFM_NUM_QUEUES Vol. 1, 3-912
 QMSFM_NUM_SERVICES Vol. 1, 3-914
 QMSFM_NUM_STUDY_REG Vol. 1, 3-916

Office Parameters Reference Manual Volume 2 of 3

OFCENG, OFCOPT, OFCSTD, ISDNVAR

1 OFCENG parameters (continued)

Vol. 2, 1-1

R2_AN_ANSWER_FLTR_TIME Vol. 2, 1-2
 R2_AN_BLK_FLTR_TIME Vol. 2, 1-4
 R2_AN_CLR_BCK_FLTR_TIME Vol. 2, 1-6
 R2_AN_CLR_FWD_FLTR_TIME Vol. 2, 1-8
 R2_AN_IDLE_FLTR_TIME Vol. 2, 1-10
 R2_AN_OG_CSM_FLTR_TIME Vol. 2, 1-12
 R2_AN_RE_ANS_FLTR_TIME Vol. 2, 1-14
 R2_AN_RLS_ACK_FLTR_TIME Vol. 2, 1-16
 R2_AN_RTS_GUARD_TIME Vol. 2, 1-18
 R2_AN_SEIZE_FLTR_TIME Vol. 2, 1-20
 R2_AN_WAIT_BEFORE_CF Vol. 2, 1-21
 R2_AN_WAIT_FOR_ANSWER Vol. 2, 1-23
 R2_AN_WAIT_FOR_IDLE Vol. 2, 1-25
 R2_AN_WAIT_FOR_RLS_ACK Vol. 2, 1-27
 R2_TEST_CALL_ANI Vol. 2, 1-29
 R2DIG_ABNRML_DURING_IDLE Vol. 2, 1-31
 R2DIG_ABNRML_DURING_OPLS Vol. 2, 1-33
 R2DIG_ANSWER_FLTR_TIME Vol. 2, 1-35
 R2DIG_BLK_FLTR_TIME Vol. 2, 1-37
 R2DIG_CD_BITS Vol. 2, 1-39
 R2DIG_CLR_BCK_FLTR_TIME Vol. 2, 1-40
 R2DIG_CLR_FWD_FLTR_TIME Vol. 2, 1-42
 R2DIG_HOLD_SZ_IN_Glare Vol. 2, 1-44
 R2DIG_IDLE_AFTER_GLARE Vol. 2, 1-46
 R2DIG_IDLE_FLTR_TIME Vol. 2, 1-48
 R2DIG_OG_CSM_FLTR_TIME Vol. 2, 1-50
 R2DIG_RE_ANS_FLTR_TIME Vol. 2, 1-52
 R2DIG_SEIZE_ACK_FLTR_TIME Vol. 2, 1-54
 R2DIG_SEIZE_FAILURE_TIME Vol. 2, 1-56
 R2DIG_SEIZE_FLTR_TIME Vol. 2, 1-58
 R2DIG_WAIT_FOR_ANSWER Vol. 2, 1-60
 R2DIG_WAIT_FOR_SEIZE_ACK Vol. 2, 1-62
 R2SM_TIMEOUT Vol. 2, 1-64
 RDT_SO_AUTOCREATE_LNINV Vol. 2, 1-66
 RECOVERY_INTERVAL_AFTER_RELOAD Vol. 2, 1-69
 RECOVERY_INTERVAL_AFTER_WARMCOLD Vol. 2, 1-71
 REMTERMEQP Vol. 2, 1-73
 REVERSE_EC_EQUIP Vol. 2, 1-75
 REVRING Vol. 2, 1-77
 RING_NO_ANSWER_TMO Vol. 2, 1-80
 RINGCTRL_MIN_VALUE Vol. 2, 1-82
 RINGCTRL_ZERO_CAN_RING Vol. 2, 1-84
 RLCM_ESA_NOTIFY_TONE Vol. 2, 1-86
 RLCM_ESAENTRY_BADCSIDE Vol. 2, 1-88
 RLCM_ESAENTRY_BADLINK Vol. 2, 1-90

RLCM_ESASDUPD_BOOL	Vol. 2, 1-92
RLCM_ESASDUPD_HOUR	Vol. 2, 1-94
RLCM_XPMESAEXIT	Vol. 2, 1-96
RM_SYNC_BURST	Vol. 2, 1-98
RM_SYNC_DELAY	Vol. 2, 1-100
RMI_RING_TIMERS	Vol. 2, 1-102
RNG_TMEOUT_NO_OF_SECS	Vol. 2, 1-104
RNG_TMEOUT_TKLN_SECS	Vol. 2, 1-106
ROTL_OUT_OF_SERVICE_LEVEL	Vol. 2, 1-108
ROTL_TIME_IN_20MIN	Vol. 2, 1-110
ROUTE_ON_FOT	Vol. 2, 1-111
RSC_ESA_NOTIFY_TONE	Vol. 2, 1-113
RSC_ESASDUPD_BOOL	Vol. 2, 1-115
RSC_ESASDUPD_HOUR	Vol. 2, 1-117
RSC_XPMESAEXIT	Vol. 2, 1-119
RSDT_ENABLED	Vol. 2, 1-122
SAPARMS	Vol. 2, 1-124
SC_OP_ANI_REQ_TIME	Vol. 2, 1-126
SCREEN_AC_LOGIDS	Vol. 2, 1-128
SDB_QUERY_TIMEOUT	Vol. 2, 1-130
SDS_ENABLED	Vol. 2, 1-132
SEP_EQUIPPED	Vol. 2, 1-134
SERVORD_TABLE_PROTECTION_ON	Vol. 2, 1-136
SET_TO_UNBALANCE	Vol. 2, 1-138
SILENT_SWITCHMAN_TIMEOUT	Vol. 2, 1-140
SIMRING_CENTREX_CONTROL	Vol. 2, 1-142
SIMRING_RES_CONTROL	Vol. 2, 1-144
SLE_ITEMS_IN_SEGMENT	Vol. 2, 1-146
SLE_MAX_PROGRAMMERS	Vol. 2, 1-149
SLE_MAX_SEGMENT_COUNT	Vol. 2, 1-151
SLE_TCAP_RESPONSE_TIME	Vol. 2, 1-153
SLE_TRANSACTION_THRESHOLD	Vol. 2, 1-155
SLE_WAKEUP_TIME	Vol. 2, 1-157
SO_MAX_OPTIONS_ALLOWED	Vol. 2, 1-159
SOUTHBOUND-Canada only	Vol. 2, 1-161
SPCCLITIMEOUT-Canada only	Vol. 2, 1-163
SPDD_DIGIT	Vol. 2, 1-165
SPILL_ANI_9	Vol. 2, 1-167
SPMS_START_OF_MONTH	Vol. 2, 1-169
SPP_MAX_PROGRAMMERS	Vol. 2, 1-171
SR60_BURST_MODE_SUPPORTED	Vol. 2, 1-173
SRA_BILLING	Vol. 2, 1-175
SRA_TIMERS	Vol. 2, 1-177
SRA_TREATMENT	Vol. 2, 1-179
SRDBUPD_SWITCH_ID	Vol. 2, 1-181
SS7_CONGESTION_CONTROL_TIME	Vol. 2, 1-183
SSP_EA_ACKWINK_DELAY_TIME	Vol. 2, 1-185
SSP_NSC_CARRIER_ID	Vol. 2, 1-187
ST_AUDIT_START_TIME	Vol. 2, 1-189
STINV_BLOCK_SIZE	Vol. 2, 1-191
SUPPRESS_ANI_TO_CLID_DISPLAY	Vol. 2, 1-193

SWCT_AMA_PREBILLING Vol. 2, 1-195
 T108ISDN_TIMEOUT_IN_MINUTES Vol. 2, 1-197
 TABLE_ADJNODE_INUSE Vol. 2, 1-199
 TALK_BATTERY_ALARM Vol. 2, 1-201
 TAPEXLATE Vol. 2, 1-203
 TCM_SYNC_LINES Vol. 2, 1-205
 TCM_SYNC_MONITOR_PERIOD Vol. 2, 1-207
 TCM_SYNC_THRESHOLD Vol. 2, 1-209
 TCW_OFFERED_ON_SCWID_DSCWID Vol. 2, 1-211
 TFAN_DEFAULT_REG_LOG Vol. 2, 1-213
 TFAN_IN_MAX_NUMBER Vol. 2, 1-215
 TFAN_OUT_MAX_NUMBER Vol. 2, 1-218
 TLINK_DELAY Vol. 2, 1-221
 TLINK_DET_TIMEOUT Vol. 2, 1-223
 TLINK_EST_TIMEOUT Vol. 2, 1-225
 TOLL_OFFICE_DELAYED BILLING Vol. 2, 1-227
 TOPS_THRESHOLD Vol. 2, 1-229
 TOTAL_ROUTE_QUEUED_CALLS Vol. 2, 1-231
 TRANSIT_COUNTER_LIMIT Vol. 2, 1-234
 TRBQ_EBS_LINE_AFTER_MISDIALS Vol. 2, 1-236
 TRIGDIG_NUM_DGLTR_POOLS Vol. 2, 1-238
 TRK_MEMSEL_AUDIT_TIME Vol. 2, 1-240
 TYPE_OF_ACCS Vol. 2, 1-242
 TYPE_OF_NETWORK Vol. 2, 1-244
 U3WC_ELAPSED_TIME Vol. 2, 1-246
 U3WC_FLASH_ONLY Vol. 2, 1-248
 U3WC_POTS_ENABLED Vol. 2, 1-250
 UCFW_STAYS_ON_LINE Vol. 2, 1-252
 UK_OP_DELAY Vol. 2, 1-254
 UNIQUE_BY_SITE_NUMBERING Vol. 2, 1-256
 UNIVERSAL_AMA BILLING Vol. 2, 1-258
 USE_ZEROMPOS_FOR_CAMA Vol. 2, 1-260
 USP_ENABLED Vol. 2, 1-262
 VALIDATE_CCITT_LUHN_DIGIT Vol. 2, 1-264
 VPN_PREFIX_DIGS Vol. 2, 1-266
 VSN_SIMULATOR_ON Vol. 2, 1-268
 WAKEUP_REREQUEST_DELAY Vol. 2, 1-269
 WAKEUP_RINGING_TMO Vol. 2, 1-271
 WUCR_RINGING_TIMEOUT Vol. 2, 1-273
 ZERO_MINUS_LOCAL_CARRIER Vol. 2, 1-275
 ZERO_MINUS_TO_CARRIER Vol. 2, 1-277
 ZERO_PLUS_LOCAL_CARRIER Vol. 2, 1-279
 ZONE_OF_ORIGIN Vol. 2, 1-281

2 OFCOPT parameters

Vol. 2, 2-1

ACD_LOAD_MGMT_RESTRICTIONS Vol. 2, 2-2
 ACOU_DATAFILLED Vol. 2, 2-4
 ADSI_RAM_BASED_TONE Vol. 2, 2-6
 AMA_EBCDIC_CONVERT_ENABLE Vol. 2, 2-8
 AMREP_ACTIVE Vol. 2, 2-10

AQ_CLD_NUM_ON_NC	Vol. 2, 2-12
AR_PRIV_LESS_THAN_10_DIGITS	Vol. 2, 2-14
AUD_AUTH_ALLOWED	Vol. 2, 2-16
CALL_TRF	Vol. 2, 2-18
CASUAL_FEATURES_OFF	Vol. 2, 2-20
CCS7_H0H1_RCP	Vol. 2, 2-21
CCTO_COMB_BILL	Vol. 2, 2-23
CCTO_COMB_BILL-CANADA ONLY	Vol. 2, 2-25
CCW_ACTIVE	Vol. 2, 2-27
CKT_LOC	Vol. 2, 2-30
CM_PROCESSOR_OPTION	Vol. 2, 2-32
CND_PRIV_LESS_THAN_10_DIGITS	Vol. 2, 2-34
DELIVER_NUMBER_TO_SMDI_ON_3WC	Vol. 2, 2-36
DIS_LKD_CKT	Vol. 2, 2-38
DSR_OFFICE	Vol. 2, 2-39
EA_LATANAME_IN_SERVORD	Vol. 2, 2-42
EADAS_SHORT_XFER_ALLOWED-U.S.only	Vol. 2, 2-44
ENET_AVAILABLE	Vol. 2, 2-46
ENET_MAX_CHANNEL_GROUP	Vol. 2, 2-48
ENHANCED_COMMAND_SCREENING	Vol. 2, 2-50
ENHANCED_PASSWORD_CONTROL	Vol. 2, 2-52
ERL_SPT	Vol. 2, 2-54
EXPANDED_INBAND_PERMITTED	Vol. 2, 2-56
FIVMIN_SNAPSHOT_ENABLED-U.S. only	Vol. 2, 2-58
FLEXIBLE_DIGIT_ANALYSIS	Vol. 2, 2-60
FRB_RINGING_TIME	Vol. 2, 2-62
FREE_NUMBER_DENIAL	Vol. 2, 2-64
FRIU_BILLING_COUNT_FORMAT	Vol. 2, 2-66
GATEWAY_CDR_RECORD_ID	Vol. 2, 2-68
GRP_NUM_FEAT_CTRL	Vol. 2, 2-71
HNT_SO_SIMPLIFICATION	Vol. 2, 2-73
IBN_CFW	Vol. 2, 2-75
IBN_DATA_LINE_SPLIT	Vol. 2, 2-76
ILR_OPTIONS	Vol. 2, 2-78
INTERCOM	Vol. 2, 2-80
INTL_INTRASWITCHING	Vol. 2, 2-82
ISDN_INFO_EXT_REC	Vol. 2, 2-84
ISUP_SUBGRP_GLARE_AVAILABLE	Vol. 2, 2-86
KEYSET_SRT	Vol. 2, 2-89
LAMA_OFFICE	Vol. 2, 2-91
LCM_PM_MSG_CNT	Vol. 2, 2-93
LOCAL_COIN_OVERTIME_FEATURE	Vol. 2, 2-95
LOOP_BACK	Vol. 2, 2-97
MAX_ACDMIS_SESSIONS	Vol. 2, 2-99
MAX_BCLID_DATA_LINKS	Vol. 2, 2-102
MAX_BRA_LINES	Vol. 2, 2-104
MAX_DATA_LINES	Vol. 2, 2-106
MAX_LAPB_TERMINALS	Vol. 2, 2-109
MAX_LAPD_TERMINALS	Vol. 2, 2-111
MAX_MBG_LINES	Vol. 2, 2-113
MAX_NUM_ACD_AGENTS_PER_SWITCH	Vol. 2, 2-115

MAX_NUM_CTX_ASSOC	Vol. 2, 2-117
MAX_NUM_ECM_ACDEVENT	Vol. 2, 2-120
MAX_NUM_ECM_CALLINIT	Vol. 2, 2-122
MAX_NUM_ECM_CTXEVENT	Vol. 2, 2-124
MAX_NUM_ECM_DNQUERY	Vol. 2, 2-126
MAX_NUM_ECM_ICCM	Vol. 2, 2-128
MAX_NUM_ECM_LINE_MAKECALL	Vol. 2, 2-130
MAX_NUM_ECM_LINE_SCAI3WC	Vol. 2, 2-132
MAX_NUM_ECM_LINE_SCAICC	Vol. 2, 2-134
MAX_NUM_ECM_LINE_SCAIMWT	Vol. 2, 2-136
MAX_NUM_ECM_RESEVENT	Vol. 2, 2-138
MAX_NUM_ECM_RESOURCE	Vol. 2, 2-140
MAX_NUM_ECM_ROUTING	Vol. 2, 2-142
MAX_NUM_ECM_SCAI3WC	Vol. 2, 2-144
MAX_NUM_ECM_SCAICC	Vol. 2, 2-146
MAX_NUM_ECM_SCAIMWTI	Vol. 2, 2-148
MAX_NUM_ECM_SVC	Vol. 2, 2-150
MAX_NUM_ECM_TPAC	Vol. 2, 2-152
MAX_NUM_ECM_TPCC	Vol. 2, 2-154
MAX_NUM_ECM_TPQC	Vol. 2, 2-156
MAX_NUM_RES_ASSOC	Vol. 2, 2-158
MAX_PDATA_LINES	Vol. 2, 2-160
MAX_PRI_LINKS	Vol. 2, 2-162
MAX_RCUS_PER_SMU	Vol. 2, 2-164
MAX_RES_LINES	Vol. 2, 2-166
MAX_TRKMEM_PER_SWITCH	Vol. 2, 2-169
MODEM_DIALBACK_CONTROL	Vol. 2, 2-171
MONITOR_TABLE_ACCESS	Vol. 2, 2-173
N5_ANSWER_PROP_DELAY	Vol. 2, 2-175
NETWORK_ACTIVE	Vol. 2, 2-177
NETWORK_ICM_ACTIVE	Vol. 2, 2-180
NOISE_MEAS	Vol. 2, 2-182
NORTHAM_TOLLFREE_VARIANT	Vol. 2, 2-184
NRS_MP	Vol. 2, 2-187
NRTEST	Vol. 2, 2-189
NWM_STR_CTRL	Vol. 2, 2-191
OMHISTORYON	Vol. 2, 2-193
OMINERLANGS	Vol. 2, 2-195
OPTIONAL_SLU_FEATURE	Vol. 2, 2-197
PASSWORD_ENCRYPTED	Vol. 2, 2-199
PI_CALL_TOPO	Vol. 2, 2-201
PRI_LINK_PRICING	Vol. 2, 2-203
PTS_RUNNING_EDTK	Vol. 2, 2-205
QCUST_CMD	Vol. 2, 2-207
RLM_INTRA_OPT	Vol. 2, 2-209
SCC2_LOGS	Vol. 2, 2-211
SDOC3_ENABLE	Vol. 2, 2-212
SMDR_OFFICE	Vol. 2, 2-214
SO_BULK_DMO	Vol. 2, 2-216
SO_DID	Vol. 2, 2-217
SO_ECHO	Vol. 2, 2-219

SO_RCF Vol. 2, 2-220
SPEED_CALL_ACCESS_DIGITS Vol. 2, 2-222
SPM_MAX_MSGTRK_CARRIER Vol. 2, 2-224
SPM_MAX_PRITRK_CARRIER Vol. 2, 2-226
SUPPRESS_USERNAME Vol. 2, 2-228
TFAN_ENHANCED_FEATURE Vol. 2, 2-230
TIE_ROUTE_INFO_EXT_REC Vol. 2, 2-233
TRAFFIC_INFO_EXT_REC Vol. 2, 2-235
TWO_WAY_FOR_AMR5 Vol. 2, 2-237
TWO_WAY_FOR_OC Vol. 2, 2-238
TWO_WAY_FOR_OP Vol. 2, 2-240
US_CUG_ENABLED Vol. 2, 2-242
USINGSITE Vol. 2, 2-244
UT_MAX_AND_CURRENT_TRUNK_COUNT Vol. 2, 2-245
VSLE_PRESENT Vol. 2, 2-247
XPM_CSIDE_DMSX Vol. 2, 2-249
XPM_MATE_DIAGNOSTICS_AVAILABLE Vol. 2, 2-251
ZERO_PLUS_FEATURE Vol. 2, 2-253

3 OFCSTD parameters

Vol. 2, 3-1

AC_AUDIT_INTERVAL Vol. 2, 3-2
AC_MAX_NUM_ERRORS Vol. 2, 3-4
AC_TPB_BSY_RCV Vol. 2, 3-6
AC_TPB_BSY_SND Vol. 2, 3-8
ACD_AGENTQ_AUDIT_INTERVAL Vol. 2, 3-10
ACD_CALL_QUEUE_AUDIT_INTERVAL Vol. 2, 3-12
ATT_NOSTART_DIALS Vol. 2, 3-14
AUDHIGHFREQ Vol. 2, 3-16
AUDIT_INTERVAL Vol. 2, 3-17
AUDLOWFREQ Vol. 2, 3-18
AUDMEDFREQ Vol. 2, 3-19
AUDVLOWFREQ Vol. 2, 3-20
BCS_NUMBER Vol. 2, 3-22
CARD_X53 Vol. 2, 3-24
CHANNEL_UNIT_601_PRESENT Vol. 2, 3-26
CHECK_FIELD_NAME Vol. 2, 3-29
CONSOLE_SILO_CHARS Vol. 2, 3-31
CONSOLE_SILO_RECORDS Vol. 2, 3-33
CPSTACKSIZES Vol. 2, 3-35
CUG_REGION Vol. 2, 3-38
DCM_PARITY_FILTER Vol. 2, 3-40
DIGIT_COL_OFFICE_CODE Vol. 2, 3-42
DIRPKILL_IN_EFFECT Vol. 2, 3-46
DPREC_INTER_DGT_TIMING Vol. 2, 3-48
DUMP_RESTORE_IN_PROGRESS Vol. 2, 3-50
E911_NPD_TO_NPA_CONV_IN_EFFECT Vol. 2, 3-52
E911_PSAP_REC_PRE_WK_TIME Vol. 2, 3-54
E911_PSAPS_USING_1_INFO_DIGIT Vol. 2, 3-56
EA_REC_1ST_PRE_WK_TIME Vol. 2, 3-59
EA_REC_MAX_WK_TIME Vol. 2, 3-61

EA_REC_SUB_PRE_WK_TIME	Vol. 2, 3-63
EAEO_REC_1ST_PRE_WK_TIME	Vol. 2, 3-65
EAEO_REC_2ND_PRE_WK_TIME	Vol. 2, 3-67
FREEZE_ON_REINIT	Vol. 2, 3-69
HBS_SPOOLER_ACT	Vol. 2, 3-71
HM_INTERPULSE_TIME	Vol. 2, 3-73
HM_PULSE_TIME	Vol. 2, 3-75
IMMED_PRE_DIAL_DELAY	Vol. 2, 3-77
ISDD_OM_THRESHOLD	Vol. 2, 3-79
MAX_COLDS	Vol. 2, 3-81
MAX_EMERG_ICI	Vol. 2, 3-82
MAX_LOCKED_TRAPS	Vol. 2, 3-84
MAX_SANITY_TIMEOUTS	Vol. 2, 3-85
MAX_WARMS	Vol. 2, 3-86
MAXIMUM_ONHK_FLASH	Vol. 2, 3-87
MIN_REC_DP_PULSE_WD	Vol. 2, 3-89
MINIMUM_ONHK_FLASH	Vol. 2, 3-91
MK_BRK_DP_OUTPULSING	Vol. 2, 3-93
MTCBASE_EXTRAMSG	Vol. 2, 3-95
MTCBASE_SCPD	Vol. 2, 3-97
NEW_CF6P_CCT	Vol. 2, 3-99
NEW_PS_PIPE	Vol. 2, 3-100
NO_ESB_RINGBACK_CYCLES_IDENT	Vol. 2, 3-101
NO_ESB_RINGBACK_CYCLES_NONIDENT	Vol. 2, 3-102
NORTEL_ID	Vol. 2, 3-104
NUMOUTBUFFS	Vol. 2, 3-105
OFFICETYPE	Vol. 2, 3-107
OPM_CHARGE_DURATION	Vol. 2, 3-110
OPM_CHARGE_START_TIME	Vol. 2, 3-112
OPM_DISCHARGE_TIME	Vol. 2, 3-114
OPM_MIN_CHG_VOLT	Vol. 2, 3-116
OPM_VOLT_TST_CHG	Vol. 2, 3-118
OPM_VOLT_TST_DIS	Vol. 2, 3-120
OPM_VOLT_TST_LTU_ADJUSTMENT	Vol. 2, 3-122
OPM_VOLT_TST_OCC	Vol. 2, 3-124
PM180	Vol. 2, 3-126
PRE_ANI_SPILL_DELAY	Vol. 2, 3-128
PRE_SND_WK_DD_TIME	Vol. 2, 3-130
RATE_PERIOD_SPECIFIC_BILLING	Vol. 2, 3-132
REC_MAX_DD_TIME	Vol. 2, 3-134
REC_MAX_WK_TIME	Vol. 2, 3-136
REC_MIN_DD_TIME	Vol. 2, 3-138
REC_MIN_WK_TIME	Vol. 2, 3-140
REC_PRE_DD_TIME	Vol. 2, 3-142
REC_PRE_WK_TIME	Vol. 2, 3-144
RONIXFR	Vol. 2, 3-146
RP_INTER_SELECTION_TIMER	Vol. 2, 3-148
RP_INTRA_SELECTION_TIMER	Vol. 2, 3-150
RP_OVERALL_TIMER	Vol. 2, 3-152
SCP_DELAY	Vol. 2, 3-154
SHORT_TIMED_RELEASE_DISC_TIME	Vol. 2, 3-156

SND_DD_TIME Vol. 2, 3-159
SND_DP_WK_TIME Vol. 2, 3-161
SND_MF_WK_TIME Vol. 2, 3-163
SWHK_FLTR_TIME_400MS_ENABLED Vol. 2, 3-165
SWHK_FLTR_TIME_640MS_ENABLED Vol. 2, 3-168
TERM_REV_FREQ_ANN_TIME Vol. 2, 3-171
TRAP_THRESHOLD Vol. 2, 3-173
UCD_QSL_AUDIT_INTERVAL Vol. 2, 3-175
WK_DD_PRE_DIAL_DELAY Vol. 2, 3-177
XPM_PARITY_THRESHOLD Vol. 2, 3-179

4 ISDNVAR parameters

Vol. 2, 4-1

AUTOSPID Vol. 2, 4-2
CND_BRI_OFFICE Vol. 2, 4-4
DEFOML Vol. 2, 4-6
ECHO_STAT_BILL_PARM Vol. 2, 4-8
L2_DM_FRAME_RCVD Vol. 2, 4-10
L2_DM_FRAME_SENT Vol. 2, 4-12
L2_FRAME_RCVD_CNTRL_UNDEF Vol. 2, 4-14
L2_FRAME_RCVD_EXCD_INFO Vol. 2, 4-16
L2_FRAME_RCVD_INVALID_SEQ_NUM Vol. 2, 4-18
L2_FRAME_RCVD_INVALID_INFO Vol. 2, 4-20
L2_FRAME_RCVD_UNEXPECTED Vol. 2, 4-22
L2_FRMR_FRAME_RCVD Vol. 2, 4-24
L2_INVALID_FRAME_RCVD Vol. 2, 4-26
L2_PROPER_RESPONSE_NOT_RCVD Vol. 2, 4-28
L3_CLEAR_REQ_RCVD Vol. 2, 4-31
L3_CLEAR_REQ_TRANS Vol. 2, 4-33
L3_DIAG_PKT_RCVD Vol. 2, 4-35
L3_DIAG_PKT_TRANS Vol. 2, 4-37
L3_DISCONNECT_MSG_RCVD Vol. 2, 4-39
L3_DISCONNECT_MSG_TRANS Vol. 2, 4-41
L3_MSG_RCVD_BAD_LENGTH Vol. 2, 4-43
L3_MSG_RCVD_INVALID_CR_FLAG Vol. 2, 4-45
L3_MSG_RCVD_INVALID_CR_VALUE Vol. 2, 4-47
L3_MSG_RCVD_INVALID_INFO Vol. 2, 4-49
L3_PROGRESS_MSG_TRANS Vol. 2, 4-52
L3_RELEASE_COMPL_MSG_RCVD Vol. 2, 4-54
L3_RELEASE_COMPL_MSG_TRANS Vol. 2, 4-56
L3_RELEASE_MSG_RCVD Vol. 2, 4-58
L3_RELEASE_MSG_TRANS Vol. 2, 4-60
L3_RESET_REQ_RCVD Vol. 2, 4-62
L3_RESET_REQ_TRANS Vol. 2, 4-64
L3_RESTART_REQ_RCVD Vol. 2, 4-66
L3_RESTART_REQ_TRANS Vol. 2, 4-68
L3_STATUS_MSG_RCVD Vol. 2, 4-70
L3_STATUS_MSG_TRANS Vol. 2, 4-72
L3_SVC_DSRPT_CTRL Vol. 2, 4-74
L3_SVC_DSRPT_THLD Vol. 2, 4-76
LAPB_ABN_LOG Vol. 2, 4-78

LAPD_ABN_LOG Vol. 2, 4-80
 LAPD16_ABN_LOG Vol. 2, 4-83
 MAX_ASYNC_ISDN_DIAGS Vol. 2, 4-85
 PKT_ABN_LOG Vol. 2, 4-87
 Q931_ABN_LOG Vol. 2, 4-89
 RND_BRI_OFFICE Vol. 2, 4-91
 SDT_SUBSCRIPTION_LIMIT_EXCD Vol. 2, 4-93
 TEI_IDENTITY_VERIFY_MSG Vol. 2, 4-96
 TEI_MULTIPLE_RESPONSE Vol. 2, 4-98
 TEI_NO_RESPONSE Vol. 2, 4-100
 TEI_NOT_ASSIGNED Vol. 2, 4-102
 TEI_ROUTINE_TEST Vol. 2, 4-104
 TEI_SUBSCRIPTION_LIMITS_EXCD Vol. 2, 4-106
 TEI_UNSOLICITED_RESPONSE Vol. 2, 4-108
 TMEAS Vol. 2, 4-110

Office Parameters Reference Manual Volume 3 of 3

OFCVAR, Preset office parameters

1 OFCVAR parameters

Vol. 3, 1-1

AC_MOREDIGIT_WAIT Vol. 3, 1-2
 ACBAR_DNROUTE_ALLOW_TCAP_QUERY Vol. 3, 1-4
 ACCS_CCV_QUERY_BLK Vol. 3, 1-6
 ACCS_INTERDIGIT_TIMEOUT Vol. 3, 1-8
 ACCS_MAX_REJECTS Vol. 3, 1-10
 ACCS_OPER_SERV_ACCESS_CODE Vol. 3, 1-12
 ACCS_SEQ_CALL_LIM Vol. 3, 1-14
 ACCS_SEQ_QUERY Vol. 3, 1-16
 ACCT_ES_DIGITS Vol. 3, 1-18
 ACMS_NOC_LOG_ON-CANADA ONLY Vol. 3, 1-20
 ACQS_AUDIT_ON Vol. 3, 1-22
 AIN_OFFICE_TRIGGRP Vol. 3, 1-24
 ALIT_LOG_GEN_FREQ Vol. 3, 1-26
 AMA_FAILURE_ROUTE_POSITION Vol. 3, 1-28
 ANI_IN_SMDR Vol. 3, 1-30
 APS_REPORT_ALL_CALLS Vol. 3, 1-32
 ARI_CDR_VALUE Vol. 3, 1-35
 ASCS_DISABLE_LEVEL Vol. 3, 1-37
 ASCS_MONITOR_DELAY Vol. 3, 1-39
 ASCS_NOALARM_THRESHOLD Vol. 3, 1-41
 ASCS_NOSEND_THRESHOLD Vol. 3, 1-43
 ASCS_ROUTE_INDEX Vol. 3, 1-45
 ASCS_TRUNK_TIMEOUT Vol. 3, 1-47
 ASR_AUDIT_TIME Vol. 3, 1-49
 ASR_CUSTGRP Vol. 3, 1-51
 AUTO_ASSIGN_DNH_GRPNUM Vol. 3, 1-53
 AUTO_ASSIGN_DNH_RANGE Vol. 3, 1-55
 BICRELAY_NUM_SIMUL_TESTS Vol. 3, 1-57

BICRELAY_XLCM_TEST_SCHEDULE	Vol. 3, 1-59
BLOCK_0_INF_INW_CALLS	Vol. 3, 1-62
BT_MCI_TIMER	Vol. 3, 1-64
BUFFER_THRESHOLD_REPORTS	Vol. 3, 1-66
C7_CHGOVER_SLMPR_THRESHOLD	Vol. 3, 1-67
C7_NACK_ERROR_SLMPR_THRESHOLD	Vol. 3, 1-69
C7_PDU_ERROR_SLMPR_THRESHOLD	Vol. 3, 1-71
C7_SLMPR_ALARM_ON	Vol. 3, 1-73
C7_SSCOP_CON_SLMPR_THRESHOLD	Vol. 3, 1-75
C7_SSCOP_RETRANS_SLMPR_THRESHOLD	Vol. 3, 1-77
C7_SU_ERROR_SLMPR_THRESHOLD	Vol. 3, 1-79
C7UP_RSC_LOG_THRESHOLD	Vol. 3, 1-81
CALL_CONTROL_DEFAULTS	Vol. 3, 1-83
CALL_REPORT_FORMAT	Vol. 3, 1-85
CAMA_SUSP_CALL_ALLOWED	Vol. 3, 1-87
CCW_AS_LINE_OPTION	Vol. 3, 1-89
CCW_WITHOUT_CWT_ALLOWED	Vol. 3, 1-91
CDIV_SDN_XLA	Vol. 3, 1-93
CDO_ROUTE	Vol. 3, 1-95
CDS_DN_CHECK	Vol. 3, 1-97
CFGDA_SEND_PILOT_DN_TO_SMDI_ISUP	Vol. 3, 1-99
CHECK_FOR_TMEM	Vol. 3, 1-102
CHNG_NUM_OF_TGS_FOR_PKT_18_22	Vol. 3, 1-104
CIRCUIT_TEST_NUMBER_MESSAGES	Vol. 3, 1-106
CLF_ACCESS_CODE	Vol. 3, 1-108
CMAJALARM	Vol. 3, 1-110
CMD_MAP_ENABLED	Vol. 3, 1-112
CMG_ENABLED	Vol. 3, 1-114
CMINALARM	Vol. 3, 1-115
CNDB_ON_POTS	Vol. 3, 1-117
COIN_DTF_TOTALIZER_RESET	Vol. 3, 1-119
COIN_OPERATOR_RELEASED_ON_OA	Vol. 3, 1-121
COIN_RETAIN_ON_OA	Vol. 3, 1-123
CONTINUOUS_RETRY_TIMERS	Vol. 3, 1-125
CREATE_PARTIAL_800_AMA-CANADA ONLY	Vol. 3, 1-127
CUSTOMER_DATA_CHANGE_LOGS	Vol. 3, 1-129
CUTOFF_ON_DISC_TIME	Vol. 3, 1-131
CWT_TIMEOUT	Vol. 3, 1-133
CWT_TONE_LENGTH	Vol. 3, 1-135
DAILY_ISDN_L2L3_PEG_AUDIT_TIME	Vol. 3, 1-137
DEFAULT_SIGNALLING_TYPE	Vol. 3, 1-139
DATA_CALL_SMDR	Vol. 3, 1-140
DCN_BUFFER_NUMBER_OF_BLOCKS	Vol. 3, 1-143
DCT_TEST_CALL_SPILL	Vol. 3, 1-145
DENY_POPULATED_SUBTABLE_DELETION	Vol. 3, 1-147
DIAGALARM	Vol. 3, 1-149
DIALBACKPW_ENCRYPTED	Vol. 3, 1-151
DISKLOGMEMORY	Vol. 3, 1-153
DIST_CWT_TONE	Vol. 3, 1-156
DND_ROUTE	Vol. 3, 1-158
DTULDINFO	Vol. 3, 1-161

DTUOHBTLTD Vol. 3, 1-163
E911_CHECK_DEFAULT_ESN Vol. 3, 1-165
E911_PSAP_DISCONNECT_TIME Vol. 3, 1-167
E911_PSAP_OFFHK_ALARM_TIME Vol. 3, 1-169
EA_FGD_MFTOSS7_CIP Vol. 3, 1-171
EA_TEST_CALL_SPILL Vol. 3, 1-173
EADAS_ENABLED-U.S. ONLY Vol. 3, 1-175
EADAS_GENERIC_ID-U.S. ONLY Vol. 3, 1-177
EADAS_MPC_AND_LINK-U.S. ONLY Vol. 3, 1-179
EADAS_POPULATE_HUNT_SECTIONS Vol. 3, 1-181
ECHODUMP_OUTPUT_FORMAT Vol. 3, 1-183
ECORE_FORMAT Vol. 3, 1-185
EDTULDFILE Vol. 3, 1-187
EMERG_ANNC Vol. 3, 1-189
ENG640M1_SCAN_RATE Vol. 3, 1-191
ENHANCED_TRUNK_PREROUTE_ABANDON Vol. 3, 1-193
ESG_ALARM Vol. 3, 1-195
ESG_RERING_TIME Vol. 3, 1-197
FACALARM Vol. 3, 1-199
FGD_ANI_SMDR_REQD Vol. 3, 1-201
FGD_TEST_CALL_ACK_OFFHOOK Vol. 3, 1-203
FIXED_CFBF_DEFAULT_STATE Vol. 3, 1-205
FOT_DIGITS Vol. 3, 1-207
GEN_CDR300_ISDN_LOGS Vol. 3, 1-209
GEN_CDR300_MIDNT_LOGS Vol. 3, 1-211
GEN_CDR300_SYNC_LOGS Vol. 3, 1-213
GENERATE_CALL_RECORDING_LOGS Vol. 3, 1-215
GENERATE_ICAMA_LOG_ENTRY Vol. 3, 1-217
GENERATE_ITOPS_LOG_ENTRY Vol. 3, 1-219
HPC_EGRESS_QUEUEING Vol. 3, 1-221
IAA_REQUESTED Vol. 3, 1-223
ICAMA_ANI_FAILURE_ACTION Vol. 3, 1-226
ICAMA_REQUESTED Vol. 3, 1-228
ICT_DN_CHECK Vol. 3, 1-230
IGNORE_REGION_THRESH Vol. 3, 1-232
IMAJALARM Vol. 3, 1-234
IMINALARM Vol. 3, 1-236
INHIBIT_AUTO_CONGESTION_CNTL Vol. 3, 1-238
INTL_ICR_REQUESTED Vol. 3, 1-239
INTL_RU_OVFL_ACTION Vol. 3, 1-241
INTL_SILENT_SWITCHMAN_TMO Vol. 3, 1-243
ISDN_LOSS_OF_SIG_DGASP_ALARM Vol. 3, 1-245
ISDN_LOSS_OF_SIG_NO_DGASP_ALARM Vol. 3, 1-247
ISDN_LOSS_OF_SYNC_WORD_ALARM Vol. 3, 1-249
ISDN_MPLU_NODE_FAILURE_ALARM Vol. 3, 1-251
ISDN_NT1_TEST_MODE_ALARM Vol. 3, 1-253
ISDN_PERFORMANCE_MON_ALARM Vol. 3, 1-255
ISDN_T_SYNC_LOST_ALARM Vol. 3, 1-257
ISDNBRI_PRIVACY_CHANGE_ALLOWED Vol. 3, 1-259
ITS_TEST_SESSION_TIMEOUT Vol. 3, 1-261
JPN1_ACM_ALWAYS_EXPECTED Vol. 3, 1-263

LAYER2_CIRCUIT_ABN_PEGS_THLD Vol. 3, 1-265
LAYER2_PACKET_ABN_PEGS_THLD Vol. 3, 1-267
LAYER2_PEGS_THRESHOLD_LEVEL Vol. 3, 1-269
LAYER2_SERVICE_DSRPT_THLD Vol. 3, 1-271
LAYER3_CIRCUIT_ABN_PEGS_THLD Vol. 3, 1-273
LAYER3_PACKET_ABN_PEGS_THLD Vol. 3, 1-275
LAYER3_PACKET_SVC_THLD Vol. 3, 1-277
LCARDALARM Vol. 3, 1-279
LCDREX_CONTROL Vol. 3, 1-281
LEAS_SS7_ACTIVE Vol. 3, 1-285
LINE_CARD_MONITOR Vol. 3, 1-287
LINE_WITH_CWT_CAN_FLASH Vol. 3, 1-289
LOCAL_COIN_INIT_TIME Vol. 3, 1-291
LOCAL_COIN_OVER_TIME Vol. 3, 1-292
LOG_CENTRAL_BUFFER_SIZE Vol. 3, 1-293
LOG_DEVICE_BUFFER_SIZE Vol. 3, 1-295
LOG_OFFICE_ID Vol. 3, 1-297
LOOP_AROUND_TIMEOUT_IN_MIN Vol. 3, 1-299
LSETALARM Vol. 3, 1-301
MAX_IAM_HOPS Vol. 3, 1-303
MAX_RMAP_SESSIONS Vol. 3, 1-305
MCARDALARM Vol. 3, 1-307
MCCS_SEQ_CALL_LIM Vol. 3, 1-309
MCCS_SEQ_QUERY Vol. 3, 1-311
MCT_TONE Vol. 3, 1-313
MCTIMER Vol. 3, 1-315
METER_PULSE_MISMATCH_THRESHOLD Vol. 3, 1-317
METER_PULSE_MONETARY_RATE Vol. 3, 1-319
MSETALARM Vol. 3, 1-321
MSGPSOC_OM_CONTROL Vol. 3, 1-323
MTA_RLM_TIME Vol. 3, 1-325
MTA_RMM_TIME Vol. 3, 1-326
MTULDINFO Vol. 3, 1-328
NDIAGALARM Vol. 3, 1-330
NEMHEARTBEAT Vol. 3, 1-332
NETFAB_DAILY_DURATION Vol. 3, 1-334
NETFAB_SCHEDULE_ENABLED Vol. 3, 1-336
NETFAB_SCHEDULE_TIME Vol. 3, 1-338
NETMINDER_MPC_AND_LINK Vol. 3, 1-340
NEW_OE_LOG_FORMAT Vol. 3, 1-342
NODEREXCONTROL Vol. 3, 1-345
NON_DMS_NAME_LOOKUP Vol. 3, 1-352
NPAC204_THROTTLE Vol. 3, 1-355
NSS_DBCP_TCN_BLOCK_CALL Vol. 3, 1-357
NSS_DBCP_TCN_RESP_TIMEOUT Vol. 3, 1-359
NTC_CALL_DURATION_ADJ Vol. 3, 1-360
NTC_CONN_REATTEMPTS Vol. 3, 1-362
NTC_REATTEMPTS Vol. 3, 1-364
NTC_TIME_BTW_CONN_REATTEMPTS Vol. 3, 1-366
NTC_TIME_BTW_REATTEMPTS Vol. 3, 1-368
NTC_XLATIONS Vol. 3, 1-370

OCCTS_DEFAULT_REG_LOG Vol. 3, 1-372
OM_SOURCE_IDENTIFICATION Vol. 3, 1-374
ORIG_ARTER_FREQUENCY Vol. 3, 1-376
ORIG_ARTER_LEVEL Vol. 3, 1-378
ORIG_INCREASE_SPM Vol. 3, 1-380
PER_CALL_GND_LOOP_TEST Vol. 3, 1-382
PER_OPC_LOGDEV_BUFFER_SIZE Vol. 3, 1-384
PERFORMANCE Vol. 3, 1-386
PMSTAT_OM_CONTROL Vol. 3, 1-388
POTS_SIMULATE_1A Vol. 3, 1-390
PRE_ROUTE_ABANDON_TRK116_LOG Vol. 3, 1-392
PRINTOUT_OF_CALLS Vol. 3, 1-394
PROMPT_HUNT_MEM_LCC Vol. 3, 1-396
PSPDALARM Vol. 3, 1-398
QDIAGALARM Vol. 3, 1-400
R2_ANI_DENY Vol. 3, 1-402
RAG_QUE_LEN Vol. 3, 1-404
RAG_RECALL_TIMEOUT Vol. 3, 1-406
RATING_SMALLEST_COIN Vol. 3, 1-408
RECORD_CLG_NPA_NXX Vol. 3, 1-410
RECORD_UNANSWERED_CALLS Vol. 3, 1-412
REDUCE_DIGMAN_ANS_DETECTION_TIME Vol. 3, 1-414
RES_CHK_OOS Vol. 3, 1-416
RES_CMSG_ACCESS_AND_ERROR_TMT Vol. 3, 1-418
RES_SO_SIMPLIFICATION Vol. 3, 1-420
REVERSE_DISPLAY_DISALLOWED Vol. 3, 1-422
RMAN_REASGNAGT_CHGROUTE_IN_DUMP Vol. 3, 1-424
RMSG_MAJALARM Vol. 3, 1-426
RMSG_MINALARM Vol. 3, 1-428
SCAI_CONTINUITY_AUDIT_INTERVAL Vol. 3, 1-430
SDIAGALARM Vol. 3, 1-432
SEAS_LRF_GTT_OCC Vol. 3, 1-434
SEAS_LRF_GTT_PER Vol. 3, 1-436
SEAS_LRF_MTP_OCC Vol. 3, 1-438
SEAS_LRF_MTP_PER Vol. 3, 1-440
SIG_TST Vol. 3, 1-442
SLE_LANGUAGE Vol. 3, 1-444
SLE_VOICEBACK_PUBLIC_ICM Vol. 3, 1-446
SLNETWORK_NAME Vol. 3, 1-448
SLU_7DIGIT_DN Vol. 3, 1-450
SLVP_RCHD_TIMER Vol. 3, 1-452
SMDR_LOG_RPT Vol. 3, 1-454
SO_ALLOW_REDUNDANT_FEATURE Vol. 3, 1-456
SO_ALLOW_REDUNDANT_FEATURE_CHF Vol. 3, 1-458
SO_CICP_OFRT_ICP_ALLOWED Vol. 3, 1-460
SO_PROMPT_FOR_CABLE_PAIR Vol. 3, 1-462
SO_PROMPT_FOR_LTG Vol. 3, 1-464
SPCL_SECURITY_A_DR Vol. 3, 1-465
SPECIAL_AMA_REPORT Vol. 3, 1-467
SRCF_FILE_VOLNAME Vol. 3, 1-469
SYSLOG_ACCESS Vol. 3, 1-471

TABLE_ACCESS_CONTROL	Vol. 3, 1-473
TASINTVL	Vol. 3, 1-475
TBI_CONNECT_OPR_A	Vol. 3, 1-477
TBI_FORCE_RELEASE	Vol. 3, 1-479
TBI_OFFER	Vol. 3, 1-481
TBI_OPR_TIMEOUT	Vol. 3, 1-483
TCAPNM_BLK_QUERY_PRIV_DNS	Vol. 3, 1-485
TCAPNM_INTERLATA_QUERY	Vol. 3, 1-487
TCMALARM	Vol. 3, 1-489
TERM_ARTER_FREQUENCY	Vol. 3, 1-491
TERM_ARTER_LEVEL	Vol. 3, 1-493
TEST_CALL_AMR_SPILL	Vol. 3, 1-495
TEST_CALL_II_SPILL	Vol. 3, 1-496
TEST_CALL_SPILL	Vol. 3, 1-498
TEST_R2_ANI_DENY	Vol. 3, 1-499
THRESHOLD_IS_SAMPLING	Vol. 3, 1-501
TOLL_DIVERSION_SIGNAL	Vol. 3, 1-502
TRA125M1_SCAN_RATE	Vol. 3, 1-503
TRA125M2_SCAN_RATE	Vol. 3, 1-504
TRA250M1_SCAN_RATE	Vol. 3, 1-505
TRANSLATION_OPTIONS	Vol. 3, 1-506
TRK_OOS_CHK_ON	Vol. 3, 1-508
TRKLPBK_TIMEOUT_IN_MINUTES	Vol. 3, 1-510
TRUNK_QUERY_AUDIT_START_TIME	Vol. 3, 1-512
TSO_FIRST_STAGE_TIMEOUT	Vol. 3, 1-514
TSTLN_OP_DELAY	Vol. 3, 1-516
TTR_SELECTION_OPTION	Vol. 3, 1-518
UDIAGALARM	Vol. 3, 1-521
USAID_CLID_BLK_SC	Vol. 3, 1-523
UVM_DEPOSIT_PRIV_DN_TMT	Vol. 3, 1-525
VARIABLE_STUTTER_DIALTONE_TIMING	Vol. 3, 1-527
WLC_OV_REPORTING	Vol. 3, 1-529
WLN_DEFAULT_TIMEOUT	Vol. 3, 1-531
WML_ACCESS_CODE	Vol. 3, 1-533
XBAR_OVERFLOW_ON	Vol. 3, 1-534
XBARCAB1	Vol. 3, 1-536
XBARCAB2	Vol. 3, 1-538
XBARSAT1	Vol. 3, 1-540
XBARSAT2	Vol. 3, 1-542
XID_DESTINATION_ID	Vol. 3, 1-544
XLAPLAN_RATEAREA_SERVORD_ENABLED	Vol. 3, 1-545
XPMMSGOC_OM_CONTROL	Vol. 3, 1-551
XPMOCC_OM_CONTROL	Vol. 3, 1-553
XPMOVLDM_OM_CONTROL	Vol. 3, 1-555

2 Preset office parameters—U.S. only

Vol. 3, 2-1

Description Vol. 3, 2-1

3 DMS-100 local switch with 0-35% MDC and ISDN lines—U.S. only **Vol. 3, 3-1**

Organization Vol. 3, 3-1
 DMS-100 local switch with 0-35% MDC and ISDN lines
 Table OFCENG Vol. 3, 3-2
 DMS-100 local switch with 0-35% MDC and ISDN lines
 Table OFCOPT Vol. 3, 3-51
 DMS-100 local switch with 0-35% MDC and ISDN lines
 Table OFCSTD Vol. 3, 3-53
 DMS-100 local switch with 0-35% MDC and ISDN lines
 Table OFCVAR Vol. 3, 3-54
 DMS-100 local switch with 0-35% MDC and ISDN lines
 Table DATASIZE Vol. 3, 3-55

4 DMS-100 local switch with 36—100% MDC and ISDN lines—U.S. only **Vol. 3, 4-1**

Organization Vol. 3, 4-1
 DMS-100 local switch with 36-100% MDC and ISDN lines
 Table OFCENG Vol. 3, 4-2
 DMS-100 local switch with 36-100% MDC and ISDN lines
 Table OFCOPT Vol. 3, 4-51
 DMS-100 local switch with 36-100% MDC and ISDN lines
 Table OFCSTD Vol. 3, 4-53
 DMS-100 local switch with 36-100% MDC and ISDN lines
 Table OFCVAR Vol. 3, 4-54
 DMS-100 local switch with 36-100% MDC and ISDN lines
 Table DATASIZE Vol. 3, 4-55

5 DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines—U.S. only **Vol. 3, 5-1**

Organization Vol. 3, 5-1
 DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines
 Table OFCENG Vol. 3, 5-2
 DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines
 Table OFCOPT Vol. 3, 5-88
 DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines
 Table OFCSTD Vol. 3, 5-90
 DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines
 Table OFCVAR Vol. 3, 5-91
 DMS-100 local/toll switch with 0-35% MDC and ISDN lines
 Table DATASIZE Vol. 3, 5-92

6 DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines—U.S. only **Vol. 3, 6-1**

Organization Vol. 3, 6-1
 DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines
 Table OFCENG Vol. 3, 6-2
 DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines
 Table OFCOPT Vol. 3, 6-88

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCVAR Vol. 3, 6-90

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table DATASIZE Vol. 3, 6-91

7 DMS-200 toll switch—U.S. only

Vol. 3, 7-1

Organization Vol. 3, 7-1

DMS-200 toll switch Table OFCENG Vol. 3, 7-2

DMS-200 toll switch Table OFCOPT Vol. 3, 7-12

DMS-200 toll switch Table OFCSTD Vol. 3, 7-13

DMS-200 toll switch Table OFCVAR Vol. 3, 7-14

DMS-200 toll switch Table DATASIZE Vol. 3, 7-15

1 OFCVAR parameters

This chapter contains descriptions of the parameters in table office variables (OFCVAR).

AC_MOREDIGIT_WAIT

Parameter name

Attendant Console More Digits Wait

Functional description

This parameter specifies the period of time in seconds that an attendant console (AC) waits for more digits. The attendant console waits until the user dials a 9+0 type call, to process the call.

Rules in provisioning

Leave the value of this parameter at the default of 10 s, unless a special customer requirement is present.

Range information

Minimum	Maximum	Default
1	10	10

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

AC_MOREDIGIT_WAIT (end)

Parameter history

BCS29

This parameter was introduced in BCS29.

ACBAR_DNROUTE_ALLOW_TCAP_QUERY

Parameter name

ACBAR_DNROUTE_ALLOW_TCAP_QUERY

Functional description

This parameter permits or denies transaction-capabilities application part (TCAP) messaging for directory numbers (DN) dialed from a line with the automatic call back (ACB) or automatic recall (AR) option, when the DNs have tuples in table DNROUTE that use the T selector.

Subscribers with the ACB option can originate a call to the last dialed DN.

Provisioning rules

Table DNROUTE cannot be provisioned on a per tuple basis.

If you require TCAP messaging for DNs entered in table DNROUTE that use the T selector when ACB or AR re-originate to these DNs, set the parameter to Y.

If TCAP messaging is not required for DNs entered in table DNROUTE that use the T selector when ACB or AR re-originate to these DNs, set the parameter to N.

Range information

Minimum	Maximum	Default
		Y

Activation

None

Dependencies

Automatic call back or automatic recall option activation. requires this parameter.

Consequences

The parameter affects all tuples in table DNROUTE. that use the T selector when ACB or AR re-originates a call to the last dialed Dn. All entries in table DNROUTE with the DN T selector permit TCAP messaging for ACB or AR

ACBAR_DNROUTE_ALLOW_TCAP_QUERY (end)

lies. For parameter equals N, all DN entries in table DNROUTE with DN T are denied TCAP messaging for ACB/AR lines.

Verification

None

Memory requirements

None

Dump and restore rules

None

Parameter history

This parameter was introduced in NA007 for the NA010 timeframe.

ACCS_CCV_QUERY_BLK

Parameter name

Automated Calling Card Service Calling Card Validation Query Block

Functional description

Table ACCSERR replaces the functionality of this parameter.

This parameter is for dump and restore purposes only. Before BCS35, this parameter provided the following function.

The system determines all Automated Calling Card Service (ACCS) calls that fail database validation. This parameter determines whether the system blocks or floats the calls as valid. If the parameter is Y (yes), the system checks the calls that the system cannot query. If the parameter is N (no), the system floats the calls that the system cannot query. Then the AMA indicates that the system does not query the database.

Rules in provisioning

Set the parameter to Y to block or N to float calls that the system cannot query.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

ACCS_CCV_QUERY_BLK (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS31**

This parameter was introduced in BCS31.

ACCS_INTERDIGIT_TIMEOUT

Parameter name

Automated Calling Card Service Interdigit Timeout

Functional description

This parameter specifies the maximum time (in seconds) that a customer can delay between digits that the customer dials. This condition only applies in an Automated Calling Card Service (ACCS) call.

Rules in provisioning

Set the value of this parameter to the maximum time (in seconds) that a customer can delay between digits that the customer dials in an ACCS call.

Range information

Minimum	Maximum	Default
2	8	4

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

ACCS_INTERDIGIT_TIMEOUT (end)

Parameter history**BCS36**

This default value is corrected in BCS36.

BSC31

This parameter was introduced in BSC31.

ACCS_MAX_REJECTS

Parameter name

Automated Calling Card Service Maximum Number Of Rejects

Functional description

A switching unit for the Automated Calling Card Service requires this parameter. The parameter specifies the maximum number of times a customer can enter one of the following numbers:

- the credit card account number (CCAN)
- the called number

This parameter also limits the number of database queries that are not valid.

Rules in provisioning

Set this parameter to the maximum number of times a customer can enter the CCAN or the called number.

Range information

Minimum	Maximum	Default
0	6	3

Activation

Immediate

Dependencies

Does not apply

Consequences

When the parameter value has too many provisions, the customer can prevent access to the ACCS resources.

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

ACCS_MAX_REJECTS (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BSC31.**

This parameter was introduced in BSC31.

ACCS_OPER_SERV_ACCESS_CODE

Parameter name

Automated Calling Card Service Operator Service Access Code

Functional description

This parameter specifies access code digits. The system transmits these digits with the Automated Calling Card Service (ACCS) call to the operator.

Rules in provisioning

Specify the access code digits. The system transmits these digits with the ACCS call to the operator.

Range information

Minimum	Maximum	Default
		0000

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 5 words of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

ACCS_OPER_SERV_ACCESS_CODE (end)

Parameter history**BCS36**

This default value is corrected in BCS36.

BCS31

This parameter was introduced in BCS31.

ACCS_SEQ_CALL_LIM

Parameter name

Automated Calling Card Service Sequence Call Limit

Functional description

This parameter specifies the maximum number of Automated Calling Card Service (ACCS) sequence calls for each origination.

Rules in provisioning

Set the value of this parameter to the maximum number of sequence calls permitted for each origination.

Range information

Minimum	Maximum	Default
0	127	127

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

BCS31

This parameter was introduced in BCS31.

ACCS_SEQ_CALL_LIM (end)

Parameter history

Copy the current value of this parameter when you perform a dump and restore.

ACCS_SEQ_QUERY

Parameter name

Automatic Calling Card Service Sequence Query

Functional description

This parameter remains for dump and restore purposes only. Before BCS35, this parameter functioned in the following way.

Rules in provisioning

This parameter determines if the system must query the database on each leg of an Automatic Calling Card Service (ACCS) sequence call. If the parameter is set to Y (yes), the system queries each sequence leg. If the parameter is set to N (no), the system sends the original query.

Range information

Set the value of this parameter to Y if the system must query each leg of a sequence call. In all other conditions, set the value of the parameter to N.

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

Consequences

If the parameter indicates N, the system does not query each leg of a sequence call. Some SCP features cannot function.

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

ACCS_SEQ_QUERY (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS36**

This default value is corrected in BCS36.

BCS31

This parameter was introduced in BCS31.

ACCT_ES_DIGITS

Parameter name

Account Code Emergency Service Digits.

Functional description

This parameter deals with emergency service calls for customers with cost center codes (CCC). If the parameter is set correctly, the system analyzes the first three or four digits of the CCC and destination number. The system treats the first three or four digits of the CCC and destination number as an emergency call attempt. This treatment occurs if the group of digits are one of the following:

- 999
- 112
- 9999
- 9112

The office parameter ALLOC_EMERGENCY_EXT_BLK uses this parameter. The ALLOC_EMERGENCY_EXT_BLK parameter sets the number of emergency extension blocks for the switch. The allocation of an extension block determines if the call is an emergency call attempt. These blocks are allocated on not direct calling line identity (CLI) Service two-stage calls and direct access account calls. These blocks are allocated to determine if the call is an emergency call attempt.

Rules in provisioning

The office parameter ALLOC_EMERGENCY_EXT_BLK must be set to the number of CLI Service two-stage calls (not direct) and direct access account calls. This parameter must be set to the number of calls possible at one time. If this parameter is not set, the system does not route emergency calls correctly.

Range information

A parameter value of ACCT_DEST_COMBO activates the feature. Any other value deactivates the feature.

Activation

Immediate

Consequences

When this parameter is set to ACCT_DEST_COMBO, the system activates this feature. In this condition, calls that start with 112 or 999 are emergency call attempts.

ACCT_ES_DIGITS (end)

Verification

Does not apply

Memory requirements

Does not apply

Dump and restore rules

Does not apply

Parameter history**Introduced in EUR004.**

This parameter was introduced in EUR004 (PRS BX66453).

EUR006

This parameter was changed in EUR006, to include ACCT_ES_COMBO (Feature AG4687).

ACMS_NOC_LOG_ON-CANADA ONLY

Parameter name

ACMS105 Log On or Off

Functional description

This parameter activates and disables the ACMS105 log (no Calling-Line Identification (CLI)).

This action is different from the suppression of each log because suppression only applies to log output. This parameter inhibits the generation of logs and saves central control (CC) real time.

Rules in provisioning

Set the parameter to N (no) to prevent the generation the ACMS105 log.

Set the parameter to Y (yes) to generate the ACMS105 log. The system can suppress the log through the normal log suppression methods.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

If this parameter is set to Y (yes), the system generates an additional log. When the system generates a log, the log uses additional CC real time.

Use this log for tests and office set-up. This parameter must remain at the default. If an ACMS105 log is required, the parameter cannot remain at default.

Verification

Does not apply

ACMS_NOC_LOG_ON-CANADA ONLY (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS29**

This parameter was introduced in BCS29.

ACQS_AUDIT_ON

Parameter name

Attendant Console Call Queue Status Audit On

Functional description

This parameter activates the attendant console call queue status (ACQS) audit.

The ACQS audit provides two external signal distribution (SD) points that indicate one of the following conditions:

- a specified number of calls are in the attendant subgroup call queue
- the oldest call waits more than the specified period of time

The SD points connect to an external status display that the ACQS audit drives. The ACQS audit runs every 30 s.

Rules in provisioning

Set the value of this parameter to Y (yes) to activate the ACQS audit.

Leave the value of this parameter at the default of N (no) if an audit is not required.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

This background audit process operates at a lower priority than the call processing software. As a result the interval between audits differs according to switch traffic.

ACQS_AUDIT_ON (end)

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS29**

This parameter was introduced in BCS29.

AIN_OFFICE_TRIGGRP

Parameter name

Advanced Intelligent Network Office Trigger Group

Functional description

This parameter subscribes trigger behaviors for the whole office.

The parameter contains one of the entries that follow:

- an AIN group identifier (AINGRPID), as entered in the AINGRP field of table TRIGGRP
- the reserved symbol TIID, that indicates the office-wide AIN subscription uses the trigger item provisioning interface

Rules in provisioning

Indicate the trigger behaviors to assign through the office.

Range information

Minimum	Maximum	Default
		NIL

Activation

Immediate

Dependencies

Datafill table TRIGGRP with an AIN group identifier. Then, enter the identifier in this parameter.

Consequences

Change the AIN_OFFICE_TRIGGRP parameter in table OFCVAR during low traffic periods. Changes to this parameter can have an effect on office-wide AIN service.

Verification

This parameter, when set to an AIN group identifier, can cause calls from AIN supported agents to detect the AIN triggers defined in the AIN trigger group.

AIN_OFFICE_TRIGGRP (end)

This parameter, when set to the reserved symbol TIID, can cause calls from AIN supported agents to detect the AIN trigger items defined in table OFCTIID.

Note: Datafill table TRIGITM. Then, datafill table OFCTIID.

Memory requirements

This parameter does not change memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**NA009**

Updates to reflect the trigger item provisioning model.

BCS35

Added information to the Consequence section.

The BCS535 product release introduced this parameter.

ALIT_LOG_GEN_FREQ

Parameter name

ALIT log generation frequency

Functional description

The ALIT_LOG_GEN_FREQ office parameter is added to table OFCVAR. The parameter value determines the frequency of ALT112 and ALT113 log generation. Enter a value from 0 to 180.

Provisioning rules

Not applicable.

Range information

The range information is as follows:

Minimum	Maximum	Default
0	180	0

Activation

A change in the value of this office parameter does not require a restart.

Requirements

This office parameter does not affect data schema tables.

Results

If you enter a value that is outside the range for the office parameter ALIT_LOG_GEN_FREQ, the following error message displays:

THE ENTERED VALUE IS OUT OF THE RANGE FOR THE OFFICE PARAMETER ALIT_LOG_GEN_FREQ. THE ACCEPTABLE RANGE IS FROM 0 TO 180. IF 0 IS ENTERED THEN LOG GENERATION IS DISABLED.

If you enter a value <n> other than 0 that is within the range for the office parameter ALIT_LOG_GEN_FREQ, the following message displays and the system accepts the entered value:

THE LOGS WILL BE GENERATED AFTER N DAYS.

ALIT_LOG_GEN_FREQ (end)

If you enter a value of 0 for the office parameter ALIT_LOG_GEN_FREQ, the following message displays:

THE GENERATION OF THE LOGS ALT112 AND ALT113 IS
DISABLED.

Testing

At the CI prompt, issue the following command to verify the value of this office parameter:

> **TABLE OFCVAR; POS ALIT_LOG_GEN_FREQ**

Memory requirements

There are no additional memory requirements.

Dump and restore rules

Not applicable.

Parameter history**NA014**

Feature 59018646 adds office parameter ALIT_LOG_GEN_FREQ to table OFCVAR.

AMA_FAILURE_ROUTE_POSITION

Parameter name

Automatic Message Accounting Failure Route Position

Functional description

A switch with the Automatic Message Accounting (AMA) failure routing options requires this parameter.

Rules in provisioning

If office parameter AMA_FAILURE_FREE_CALL in Table OFCENG is set to N (no), enter this parameter. Enter this parameter to indicate, in table POSITION, the allocation of all AMA failure calls (CAMA and LAMA).

The values for this parameter are as follows:

- NONE
- CAMA
- TOPS
- CTOP
- AMRX
- RTE1
- RTE2
- RTE3
- RTE4
- TSPS
- AMAFAIL
- AOSS
- OOC

Range information

Minimum	Maximum	Default
		AMAFAIL

AMA_FAILURE_ROUTE_POSITION (end)

Activation

Immediate

Dependencies

The system takes calls out of service along with CCB and CDB dumps, with the following conditions:

- the system routes AMA failure calls to position AMAFAIL in the POSITION table
- position AMAFAIL does not contain a route index from the OFRT table

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

ANI_IN_SMDR

Parameter name

Automatic Number Identification In Station Message Detail Recording

Functional description

A switching unit for the station-message detail recording (SMDR) system requires this parameter. The parameter applies to the following trunk types:

- private branch exchange (PBX) trunks (trunk group type PX and P2)
- incoming or two-way integrated business network (trunk group type IBNTI or IBNT2) trunks with the AIOD feature
- 2WAY CAMA trunks

This parameter specifies if the SMDR record has values that correspond to the automatic number identification (ANI) information and not the virtual facility group (VFG) ID. The ORIGTYPE and ORIGID fields indicate the VFGID. The parameter applies only to incoming trunk calls in which:

- the trunk provides the ANI
- the call translates again through an Integrated Business Network (IBN) VFG
- the second leg of the call generates an SMDR record

The VFG must have the special billing number entered as N (no). For CAMA trunk calls, the first leg of the call must be a toll leg to receive ANI.

Rules in provisioning

Set the value of this parameter to Y (yes) to replace the VFGID in the SMDR record with the current calling number. The ANI of the incoming trunks provides the calling number.

Leave the value of this parameter at the default of N if the VFGID must appear in the SMDR record.

Range information

Minimum	Maximum	Default
		N

ANI_IN_SMDR (end)

Activation

Immediate

Dependencies

One of the following conditions must occur:

- The entry in Table IBNXLA for the digits dialed must have field SMDR equal to Y
- The VFG entry in Table VIRTGRPS must have the SMDR field set to Y

Consequences

Does not apply

Verification

Set the value of this parameter to Y (yes). Make a call over a PBX or IBN trunk with AIOD that terminates on a VFG with SMDR equal to Y. The call terminates at another location. Check the SMDR record to determine if the calling number from the PBX or IBN trunk is in field ORIGID.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS27**

This parameter was introduced in BCS27.

APS_REPORT_ALL_CALLS

Parameter name

Attendant Pay Station Report All Calls

Functional description

A switching unit in the People's Republic of China with the service hall feature requires this parameter.

A service hall is a site where the public places calls under the supervision of an attendant. The attendant assigns telephones to customers and collects for call charges. This system uses this service in areas with limited access to private telephone lines.

Each line in the Service Hall must have the attendant pay station (APS) option. Service order procedures assign the APS option.

The originating party can place two types of calls in the service hall: direct dial call (automatic) or operator assisted. When each direct call from the APS is completed, the system routes a log to a log system device. This log contains the call details. For direct dialed calls, the system generates a billing record. For other types of calls, the system issues manual tickets to obtain the charges.

Logs the system generates for direct dialed calls are billing records.

For direct dialed toll calls, evaluate the charges. To evaluate the charges, use the call duration field of the log and the value of parameter METER_PULSE_MONETARY_RATE in Table OFCVAR.

This parameter indicates the types of calls for which the system generates logs.

Rules in provisioning

Set the value of this parameter to Y (yes), if the system must generate logs for all direct dial calls. Direct dial calls include the following call types:

- calls the system routes to treatment
- calls not answered
- free number terminating (FNT) calls

APS_REPORT_ALL_CALLS (continued)

Leave the parameter value at the default of N (no), when the system must generate logs for all direct dial calls. The system does not generate logs for the following types of calls:

- calls the system routes to treatment
- calls that are not answered
- free number terminating (FNT) calls

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

The parameter is set to a value of N (no). Determine if the system does not generate a log for the following calls:

- calls the system routes to treatment
- calls not answered
- free number terminating (FNT) calls

The parameter is set to a value of Y (yes). Determine if the system does not generate a log for the following calls:

- calls the system routes to treatment
- calls that are not answered
- free number terminating (FNT) calls

APS_REPORT_ALL_CALLS (end)

Refer to OM group IREC for operational measurement (OM) for this parameter.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS26

This parameter was introduced in BCS26.

ARI_CDR_VALUE

Parameter name

Accounting Route Index Call Detail Recording Value

Functional description

This parameter associates with the No. 7 signaling systems Telephone User Part Enhanced (TUP(E)) and ISDN User Part Enhanced (ISUP(E)) for the DMS-300.

The parameter specifies the value of the accounting route index (ARI). The record for a call includes the ARI in the call detail recording (CDR), in which:

- the incoming trunk is a TUP(E) or ISUP(E) trunk with field COFFTYPE set to a value of TIEROUTE
- the incoming route index (IRI) is a valid message (IRI is Y(yes))
- a IRI message is not received during the call, or IRI is N (no)

The field COFFTYPE in Table TRKGRP contain the values INTL, NATL, and TIEROUTE. If COFFTYPE is set to TIEROUTE, the next field for which the system prompts is the IRI field.

The ARI is a 16-bit parameter that provides the parameter with the range of 0 to 65535. Enter the ARI as a series, to a maximum of five decimal digits.

Rules in provisioning

The user can entered any value for this parameter. The ARI value entered in ARI_CDR_DEFAULT must not be the same as the ARI value in an IRI message.

Range information

Minimum	Maximum	Default
0	65535	0

Activation

Immediate

Dependencies

Does not apply

ARI_CDR_VALUE (end)

Consequences

Does not apply

Verification

Set up a call to make sure this parameter is valid. This call must have an incoming trunk, either a TUP(E) or ISUP(E) trunk with field COFFTYPE set to TIEROUTE. The IRI of the call must be set to Y (yes) in Table TRKGRP. Do not send an IRI message to the TUP(E) or ISUP(E) trunk during the call. Clear the call down.

The CDR record produced for the call contains an ARI value of ARI_CDR_DEFAULT in the extension record. The system generates a log that indicates an IRI message is not received during the call.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS31

This parameter was introduced in BCS31.

ASCS_DISABLE_LEVEL

Parameter name

Alarm Sending And Checking System Disable Level

Functional description

A switching unit with the maintenance assistance package requires this parameter. The parameter allows the selection of alarms to disable on the alarm sending and checking system (ASCS) trunk. The system does not send alarms to the ASCS trunks when the alarms occur.

Rules in provisioning

Set the parameter to one of the following values:

- NO_ALM (no alarm)
- MIN (minor)
- MAJ (major)
- FSP (fuse and power alarms)
- CRIT (critical)

If the value is FSP, the system does not send major or minor alarms on the ASCS trunk when the alarms occur.

If the value is MAJOR, the system does not send major or minor alarms on the ASCS trunk when the alarms occur.

If the value is MINOR, the system does not send minor alarms on the ASCS trunk when the alarms occur.

If the value is CRIT, the system does not send critical alarms on the ASCS trunk when the alarms occur.

If the value is NO_ALM, the system sends all alarms on the ASCS trunk when the alarms occur.

Range information

Minimum	Maximum	Default
		NO_ALM

ASCS_DISABLE_LEVEL (end)

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

ASCS_MONITOR_DELAY

Parameter name

Alarm Sending And Checking Monitor Delay

Functional description

A switching unit with the maintenance assistance package requires this parameter. The following features use this parameter:

- the alarm sending and checking (ASCS) with tones
- the alarm sending over Traffic Service Position System (TSPS)/Traffic Operator Position System (TOPS) trunk (for example, automatic numbering identification (ANI) information digit 8)

These features require a fixed pseudocode of ASCS in the common language location identifier (CLLI) table. If the switching unit has the alarm sending and checking with tones feature, refer to Table ASCS.

This parameter specifies the time, in seconds, between alarm scans in the monitor process.

Rules in provisioning

Specify the time, in seconds, between alarm scans.

Range information

Minimum	Maximum	Default
0	32767 (reserved) 3600 (programmed)	30

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

ASCS_MONITOR_DELAY (end)

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

ASCS_NOALARM_THRESHOLD

Parameter name

Alarm Sending And Checking No Alarm Threshold

Functional description

The following features require this parameter:

- the alarm sending and checking with tones
- alarm sending over a Traffic Service Position System (TSPS)/Traffic Operator Position System (TOPS) trunk (for example, ANI information digit 8)

These features require a fixed pseudocode of ASCS in Table CLLI. When the switching unit has the alarm sending and checking with tones feature, refer to Table ASCS.

Rules in provisioning

A no alarm condition must pass through monitor delay units. This parameter specifies the time that a no alarm condition must pass before the system can bring a call down. This parameter makes sure the alarm condition does not cause repeat sends.

Range information

Minimum	Maximum	Default
0	32767 (reserved)	2
	1200 (programmed)	2 X ASCS_MONITOR_DELAY in seconds

Activation

Immediate

Dependencies

Refer to office parameter ASCS_MONITOR_DELAY

Consequences

Does not apply

ASCS_NOALARM_THRESHOLD (end)

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

ASCS_NOSEND_THRESHOLD

Parameter name

Alarm Sending And Checking No Send Threshold

Functional description

The following features require this parameter:

- alarm sending over and checking (ASCS) with tones
- alarm sending over TSPS/TOPS trunk (for example ANI information digit 8)

Both features require a constant pseudocode of alarm send and check (ASCS) in table CLLI. When the switching unit has the ASCS with tones feature, refer to table ASCS.

Rules in provisioning

This parameter specifies the time, in units of monitor delay time, that the system inhibits sends after a checking call. This condition occurs while the alarm condition remains the same or reduces. For example, when monitor delay time is 30 s and the no send threshold is 60, NOSEND is equal to $30 \times 60 = 1/2$ hr.

Range information

Minimum	Maximum	Default
0	1200	60

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

ASCS_NOSEND_THRESHOLD (end)

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

ASCS_ROUTE_INDEX

Parameter name

Alarm Sending and Checking Route Index

Functional description

The following features require this parameter:

- alarm sending and checking (ASCS) with tones
- alarm sending over traffic-service position system (TSPS) / traffic operator position system (TOPS) trunk (for example, automatic number system (ANI) information digit 8)

Both features require a fixed pseudocode of ASCS in table CLLI. When the switching unit has the alarm sending and checking with tones feature, refer to table ASCS.

Rules in provisioning

This parameter specifies the route reference index in the office route table (OFRT) that the system assigns for the ASCS feature.

Range information

Minimum	Maximum	Default
0	1023	0

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

ASCS_ROUTE_INDEX (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

ASCS_TRUNK_TIMEOUT

Parameter name

Alarm Sending And Checking Trunk Timeout

Functional description

The following features require this parameter:

- alarm sending and checking with tones
- alarm sending over the traffic sending position system (TSPS) / traffic operator position system (TOPS) trunk (for example, ANI information digit 8)

Both features require a fixed pseudocode of ASCS in table CLLI. When the switching unit has the alarm sending and checking with tones feature, refer to table ASCS.

Rules in provisioning

This parameter specifies the time, in seconds, that a send call hangs on to a trunk without a response. After the time passes without an response, the send call releases the trunk and selects another trunk in the group.

Range information

Minimum	Maximum	Default
0	32767 (reserved) 3600 (programmed)	60

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

ASCS_TRUNK_TIMEOUT (end)

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

ASR_AUDIT_TIME

Parameter name

Automatic Set Relocation Audit Time

Functional description

A switching unit with the Automatic Set Relocation (ASR) feature requires this parameter. This parameter specifies the time when the ASR audit runs. This audit clears temporary entries for ASR.

Rules in provisioning

The value of this parameter (0 to 23) represents the time that the ASR audit runs. The value of this parameter indicates the time on a 24-h clock (for example, 1 represents 1:00 a.m.).

The recommended value is 1, because of the normal lack of activity on a switch at 1:00 a.m. The value of 1 makes sure the CC REx test or the extended multiprocessor system (XMS) based peripheral module (XPM) REx test do not run when this audit begins. The central control (CC) routine exercise (REx) test default is 12:00 a.m., and the XPM REx test default is 2.

Range information

Minimum	Maximum	Default
0	23	1

Activation

Immediate

Dependencies

Does not apply

Consequences

If you use a value that causes the audit to run during peak hours of operation, this audit runs in contention with other tasks. This condition causes the audit to run more slowly and can affect system performance.

Verification

Does not apply

ASR_AUDIT_TIME (end)

Memory requirements

This parameter uses 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS36

Corrected activation from restart to immediate in BCS 36.

BCS31

This parameter was introduced in BCS31.

ASR_CUSTGRP

Parameter name

Automatic Set Relocation Customer Group

Functional description

This parameter associates with the Automatic Set Relocation (ASR) feature. The ASR feature allows a user to move integrated voice and data (IVD) telephone sets from one location to another location. The user can perform this action without the help of operating company personnel.

The process that places a set back into service with the ASR IN code is ASRI.

A customer group must be available for the use of the ASRI process. This office parameter defines the ASR customer group. This customer group allows the user to dial the ASRI code (identified in table IBNXLA).

Rules in provisioning

Set the value of this parameter to Y CUSTOMER_GROUP, this action allows the customer group to use the ASRI process.

Leave this parameter at the default of N CUSTGRP_DELETED if the customer group does not require this function.

Range information

Minimum	Maximum	Default
		ASRDFLT

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

ASR_CUSTGRP (end)

Verification

Enter this parameter and perform an automatic set relocation process to check the function of the ASR feature.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Dump and restore rules

BCS30

This parameter was introduced in BCS30.

AUTO_ASSIGN_DNH_GRPNUM

Parameter name

Automatic Assignment Of Directory Number Hunt Group Numbers

Functional description

This parameter activates the dynamic assignment of directory number hunt (DNH) group numbers in offices that use the Service Order Simplification for Hunt Groups feature.

Rules in provisioning

Set the value of this parameter to Y (yes), to activate the dynamic assignment of DNH group numbers.

If this function is not required, leave the value of this parameter at the default of N (no).

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

The following message displays when you change the value of this parameter to Y from N:

WARNING: AUTO_ASSIGN_DNH_GRPNUM IS BEING TURNED ON. PLEASE SPECIFY THE PARAMETER AUTO_ASSIGN_DNH_RANGE IN TABLE OFCVAR FOR AUTO ASSIGNMENT OF GROUP NUMBER TO DNH HUNT GROUP.

Consequences

Does not apply

Verification

Does not apply

AUTO_ASSIGN_DNH_GRPNUM (end)

Memory requirements

This parameter does not impact on memory.

Dump and restore rules

This parameter was introduced in BCS31.

Copy the current value of the parameter when you perform a dump and restore.

AUTO_ASSIGN_DNH_RANGE

Parameter name

Automatic Assignment of Directory Number Hunt Range

Functional description

This parameter specifies the starting and ending group numbers for automatic assignment to directory number hunt (DNH) groups. This parameter specifies the group numbers for offices that use the Service Order Simplification for Hunt Groups feature.

Rules in provisioning

Set this parameter to two numeric values that represent the starting and ending group numbers for automatic assignment to DNH groups. The first value is the starting group number. The value of the starting group number must be smaller than the second value, the ending group number.

Avoid wasting memory when the automatic assignment of group numbers is made. Use the smallest number available for the starting group number.

Range information

Minimum	Maximum	Default
0 0	8191 8191	0 0

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

AUTO_ASSIGN_DNH_RANGE (end)

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

BCS31

This parameter was introduced in BCS31.

BICRELAY_NUM_SIMUL_TESTS

Parameter name

Number Of Simultaneous Bus Interface Card Relay Tests

Functional description

This parameter specifies the number of bus interface card relay tests (BRT) that can run at the same time. Refer to office parameter BICRELAY_XLCM_TEST_SCHEDULE for the scheduling of BRTs.

Rules in provisioning

It takes 1 min for each XMS-based line concentrating module (XLCM) to run BIC relay tests. When this parameter is set to a value of 1, 60 XLCMs tests can occur in 1 h. When this parameter is set to a maximum of 3, a total of 180 XLCMs tests occur each hour.

Larger offices must increase the allotted time for BIC relay tests and/or the number of simultaneous tests that can run.

If an office does not have the test equipment for multiple simultaneous tests, this parameter must remain at the default value of 1. If an office does not have test equipment available, the BRT does not run.

Range information

Minimum	Maximum	Default
1	3	1

Activation

Immediate

Dependencies

Does not apply

Consequences

If this parameter is underprovisioned, the office BRT does not test all XLCMs in the time allotted by the office parameter BICRELAY_XLCM_TEST_SCHEDULE. Tests resume at the next interval, and begin where the previous test ended.

BICRELAY_NUM_SIMUL_TESTS (end)

If the BRT is in progress the parameter does not change. The CI command BICRELAY OFF stops the BRT. Entering the CI command BICRELAY ON to change the parameter and resume the BRT. Some BRTs can be in progress when the BICRELAY OFF command is in use. When these tests are complete, the parameter can change. The tests take time to complete. The CI command BICRELAY QUERY can determine a time when tests are not in progress.

Verification

At the scheduled start time, XLCMs under test are set in MTCE. Operating company personnel can examine the logutil reports that the test generates.

Memory requirements

Each unit requires 1 word of memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS33.

BICRELAY_XLCM_TEST_SCHEDULE

Parameter name

Bus Interface Card Relay XMS-based Line Concentrating Module Test Schedule

Functional description

This parameter specifies the time frame in which the system performs a bus interface card relay test (BRT). The BRT tests the tip and ring reversal relay on each bus interface card (BIC-NT6X54) for a given XMS-based line concentrating module (XLCM). This parameter indicates the time of day and days of the week that the BRT runs.

Rules in provisioning

This parameter consists of the following fields and ranges of values. All hours shown use the 24-h clock.

Fields and ranges of values

Field	Value
BRTST_START_TIME	0 to 23 (hours), 0 to 59 (minutes)
BRTST_STOP_TIME	0 to 23 (hours), 0 to 59 (minutes)
BRTST_DAYS_OF_TEST	Combinations of MO, TU, WE, TH, FR, SA, SU

For example, the default value of this parameter is 3 0 5 0 SU\$. This setting runs the BRT as follows:

Results of defaults

Field	Value
BRTST_START_TIME	HOURS 3, Start test at 3:00 a.m. MINUTES 0
BRTST_STOP_TIME	HOURS 5, Stop test at 5:00 a.m. MINUTES 0
BRTST_DAYS_OF_TEST	SU Run test on Sunday

Set the window for the BRT according to the number of XLCMs in the office to include in the test. The test requires 1 min for each XLCM. The operating company personnel only need to run this test one time each week. A window of 1 h with the number of tests that occur at the same time set to 1 tests 60 XLCMs. Refer to office parameter BICRELAY_NUM_SIMUL_TESTS. If the system does not test all XLCMs in the allotted time, the test resumes at the

BICRELAY_XLCM_TEST_SCHEDULE (continued)

last XLCM. This XLCM is the last XLCM the system tested during the previous BRT.

A larger office can require an increase in the size of the test window, specified by the default value. Also a larger office can require an increase in the number of tests that run at the same time. A larger office can require both of these increases.

Range information

Minimum	Maximum	Default
		3 0 5 0 SU \$

Activation

Immediate

Dependencies

Does not apply

Consequences

If the time window value is too low, the BRT does not test all XLCMs in the allotted time. The test resumes where the test stopped in the next scheduled window.

The user cannot enter the BRTST_START_TIME and the BRTST_STOP_TIME with the same values. The user must specify a minimum of a 10 min window. If the window is less than 10 min, the following warning message appears:

THE START AND STOP TIMES MUST INDICATE A WINDOW OF AT
LEAST TEN MINUTES.

The user cannot change this parameter while the scheduled BRT is in progress. Use the CI command BICRELAY OFF to turn the BRT off and change the parameter. Use the BICRELAY ON command to restart the BRT.

Verification

At the scheduled start time, XLCMs under test are set in MTCE. Operating company personnel can examine the logutil reports that the test generates.

BICRELAY_XLCM_TEST_SCHEDULE (end)

Memory requirements

Each unit requires 5 words of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

You will find this parameter introduced in BCS33.

BLOCK_0_INF_INW_CALLS

Parameter name

Block 0 Information INWATS Calls

Functional description

A local or SL-100 switching unit requires this parameter. This parameter specifies if the system blocks or routes through normal translation the following 0+DA (directory assistance) call types:

- 0+800 (INWATS)
- 0+411
- 0+555
- 0+NPA555

Call attempts of this type cause the system to block the call and sends the call to treatment. This parameter provides an option to the blocking of these calls. The option is to allow the calls to go through normal translation. The option applies to all of the call types that originate in a given switching unit.

Rules in provisioning

The default value of this parameter is Y (yes). With the value of Y, the system blocks all of the above call types and routes the calls to treatment. An example of a treatment is the vacant code.

This parameter can have a value of N (no). With the value of N, the system does not block the above call types. The system routes the calls through the route specified in the OA class of the service screening table.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

BLOCK_0_INF_INW_CALLS (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS20.

BT_MCI_TIMER

Parameter name

British Telephone Malicious Call Indication Timer

Functional description

This parameter is a timer for the Malicious Call Indication (MCI) feature with British Telephone national user part (BTUP) version 2 trunks. The timer can activate when a call occurs over a BTUP trunk that terminates on an MCI-equipped line. The timer activates if the called subscriber does not activate the MCI feature during the speech phase of the call.

The timer starts when the caller goes on hook before the called subscriber. The reception of a clear (CLR) or REL message must occur in the forward direction at the terminating node. This time period allows the called subscriber to activate the MCI feature after the calling subscriber goes on hook. When the feature activates, the system logs details of the call origin.

When the timer times out, the called subscriber cannot activate the MCI feature. The system uses the terminating node to clear the call, which sends a REL message in the backward direction.

Rules in provisioning

The BTNR 167 Issue 2 specifies that the recommended range of this timer be between 4 and 10 s. The default setting is 7 s. Values between 1 and 30 s are valid. The value of this parameter can be set outside of the recommended range of 4 to 10. If this condition occurs, the system issues a warning that states the value is not in the standard range.

Range information

Minimum	Maximum	Default
1	30	7

Activation

Immediate

Dependencies

Does not apply

BT_MCI_TIMER (end)

Consequences

A change in the parameter value increases or decreases the time limit for the called subscriber to activate the MCI feature.

Verification

Set BT_MCI_TIMER to the maximum value of 30 s. Make a call as described in the description of this parameter. Make sure that the calling subscriber goes on hook before the called subscriber. Measure the difference between the time the calling subscriber goes on hook and the call clears. Change the parameter to an intermediate value (for example, 15 s) and repeat the test call.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS32.

BUFFER_THRESHOLDDED_REPORTS

Parameter name

Buffer Thresholded Reports

Functional description

This parameter controls the removal of log reports that do not print because of the log threshold process.

Rules in provisioning

If this parameter is set to Y (yes), reports that do not print are in the log buffer. The reports are accessible by the use of logutil.

If this parameter is set to N (no), the system discards the reports.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

C7_CHGOVER_SLMPR_THRESHOLD

Parameter name

C7 Changeover Signaling Link Marginal Performance Report Threshold

Functional description

This parameter associates with the Signaling Link Marginal Performance Report (SLMPR) feature. Every hour, the SLMPR feature reports all signaling links that exceed a minimum of one of the following threshold values:

- signaling units in error
- negative acknowledgments received
- automatic changeovers

This parameter specifies the threshold number of link changeovers. If the count of changeovers is more than this value, the hourly report lists the link. This parameter associates with the OM register C7AUTOCO in OM group C7LINK1.

Rules in provisioning

Set the value of this parameter to represent the threshold number of link changeovers.

Range information

Minimum	Maximum	Default
0	32767	4

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

C7_CHGOVER_SLMPR_THRESHOLD (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS29

This parameter was introduced in BCS29.

C7_NACK_ERROR_SLMPR_THRESHOLD

Parameter name

C7 Negative Acknowledgments Error Signaling Link Marginal Performance Report Threshold

Functional description

This parameter associates with the Signaling Link Marginal Performance Report (SLMPR) feature. Every hour, SLMPR feature reports all signaling links that exceed a minimum of one of the following threshold values:

- signaling units in error
- negative acknowledgments (NACK) received
- automatic changeovers

This parameter specifies the threshold number of NACKs received. If the count of NACKs is more than this value, the hourly report lists the link. This parameter associates with the OM register C7NACKRX.

Range information

Minimum	Maximum	Default
	32767	400

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

C7_NACK_ERROR_SLMPR_THRESHOLD (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS29

This parameter was introduced in BCS29.

C7_PDU_ERROR_SLMPR_THRESHOLD

Parameter name

CCS7 Service Specific Connection Oriented Protocol Errored Protocol Data Unit Signaling Link Marginal Performance Report Threshold

Functional description

This parameter creates a process that, once per hour, examines the holding data in the operational measurement (OM) system for accumulation class C7_SLMPR. The process reports all links in table C7LINK that exceed the office parameter.

This parameter is associated with OM group C7HSLAL2 and register C7SEPSEC. Register C7SEPSEC is the counter for high-speed link interface unit (HLIU)-based CCS7 links. If the value in register C7SEPSEC exceeds the value in parameter C7_PDU_ERROR_SLMPR_THRESHOLD, a CCS120 log is generated.

Provisioning rules

None

Range information

Minimum	Maximum	Default
1	9999	2

Activation

Immediate

Dependencies

OFCVAR

Consequences

Logs that report exceeded performance parameter thresholds are generated unnecessarily when this parameter is under-provisioned.

Logs that report exceeded threshold performance parameters fail to be produced when this parameter is over-provisioned.

C7_PDU_ERROR_SLMPR_THRESHOLD (end)

Verification

To verify this parameter, the performance measurement number must exceed the parameter threshold number.

Memory requirements

There are no dump and restore rules.

Dump and restore rules

There are no dump and restore rules.

Parameter history

CSP07

This parameter was introduced.

C7_SLMPR_ALARM_ON

Parameter name

C7 Signaling Link Marginal Performance Report Alarm On

Functional description

This parameter associates with the Signaling Link Marginal Performance Report (SLMPR) feature. Every hour, the feature reports all signaling links that exceed a minimum of one of the following limit values:

- signaling units in error
- negative acknowledgments(NACK) received
- automatic changeovers.

This parameter allows the feature to set a link minor alarm. This parameter also allows the feature to change the link state from In Service (InSu) to In Service Trouble (ISTb) against a link that exceeds a threshold value.

Rules in provisioning

Set the parameter value to Y(yes) to allow the feature to set alarms against links or change the link state.

Set the value of this parameter to N (no) so that the feature cannot set alarms or change the link state.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

C7_SLMPR_ALARM_ON (end)

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS29.

C7_SSCOP_CON_SLMPR_THRSHOLD

Parameter name

CCS7 Service Specific Connection Oriented Protocol Connection Signaling Link Marginal Performance Report Threshold

Functional description

This parameter generates a log when a performance parameter exceeds its specified threshold.

This parameter is associated with with operational measurement (OM) group C7HSLAL2, register C7SCSEC. Register C7SCSEC counts the sum of errors in the SSCOP connection. If the value in register C7SCSEC exceeds the value in C7_SSCOP_CON_SLMPR_THRSHOLD, log CCS120 is generated.

Rules in provisioning

There are no rules in provisioning.

Range information

Minimum	Maximum	Default
1	9999	16

Activation

Immediate

Dependencies

OFCVAR

Consequences

Logs that report exceeded performance parameter thresholds are generated unnecessarily when this parameter is under-provisioned.

Logs that report exceeded threshold performance parameters fail to be produced when this parameter is over-provisioned.

Verification

To verify this parameter, the performance measurement number must exceed the parameter threshold number.

C7_SSCOP_CON_SLMPR_THRSHOLD (end)

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

There are no dump and restore rules.

Parameter history

TL10

The default value changes from 5 to 16.

TL07

This parameter was introduced.

C7_SSCOP_RETRANS_SLMPR_THRESHOLD

Parameter name

CCS7 Service Specific Connection Oriented Protocol Protocol Data Units
Requiring Re-transmission Signaling Link Marginal Performance Report
Threshold

Functional description

This parameter generates a log when a performance parameter exceeds its specified threshold for high-speed links.

This parameter is associated with operational measurement (OM) group C7HSLAL2 and register C7SPDURR. Register C7SPDURR is the counter SSCOP PDUs requiring retransmission for the high-speed link interface unit (HLIU)-based CCS7 links. If the value in this register exceeds the value in C7_SSCOP_RETRANS_SLMPR_THRESHOLD, log CCS120 is generated.

Rules in provisioning

There are no rules in provisioning.

Range information

Minimum	Maximum	Default
1	9999	1000

Activation

Immediate

Dependencies

OFCVAR

Consequences

Logs that report exceeded threshold performance parameters are generated when this parameter is under-provisioned.

Logs that report exceeded threshold performance parameters fail to be produced when this parameter is over-provisioned.

C7_SSCOP_RETRANS_SLMPR_THRESHOLD (end)

Verification

To verify this parameter, the performance measurement number must exceed the parameter threshold number.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

There are no dump and restore rules.

Parameter history

CSP07

This parameter was introduced in CSP07.

C7_SU_ERROR_SLMPR_THRESHOLD

Parameter name

C7 Signaling Units Error Signaling Link Marginal Performance Report Threshold

Functional description

This parameter associates with the Signaling Link Marginal Performance Report (SLMPR) feature. Every hour, the SLMPR feature reports on all signaling links that exceed a minimum of one of the following threshold values:

- signaling units in error
- negative acknowledgments received
- automatic changeovers

Rules in provisioning

This parameter specifies the threshold value for the number of signaling units (SU) in error. If the count of SUs in error exceeds this value, the SLMPR report records the link. This parameter associate with the OM register C7SUERR.

Range information

Minimum	Maximum	Default
0	32767	400

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

C7_SU_ERROR_SLMPR_THRESHOLD (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS29.

C7UP_RSC_LOG_THRESHOLD

Parameter name

C7UP Release Complete Log Threshold

Functional description

This parameter specifies the time interval between Integrated Services Digital Network User Part (ISUP) trunk audits. This audit indicates the number of ISUP trunks that are in the state of lockout (LO). A release complete (RLC) message timeout causes these LO state. The system can generate log report C7UP123 as a result of the audit.

The following is a sample of a C7UP123 log report:

```
C7UP123 OCT23 12:00:00 2112 INFO RSC_NOT_RECEIVED
10 OF THE 100 TRUNKS (10%) IN ISUPITOG 0
REMAIN LO DUE TO RLC TIMEOUT.
ROUTESET C7RTESET1 IS IN SERVICE.
AUDIT INTERVAL IS 15 MINUTES.
```

Rules in provisioning

The default value for this parameter is 15 min. The system activates ISUP trunk audit in intervals of 10 min. The trunk audit occurs along with the throttling mechanism for logs C7UP100 and C7UP300. A value of 10 min. is the lowest possible audit interval.

Operating companies that do not want to activate this feature must set the value of this parameter to 0 (zero).

Range information

Minimum	Maximum	Default
0 (min)	60 (min)	15 (min)

Activation

Immediate

Dependencies

Does not apply

C7UP_RSC_LOG_THRESHOLD (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

CALL_CONTROL_DEFAULTS

Parameter name

Call Control Defaults

Functional description

This parameter specifies the default values for call control. This parameter replaces parameter INTRA_OFFICE_CALL_CNTRL in table OFCVAR.

This parameter describes two default values in two input fields. The first field defines the default call control for line-to-line calls. The second field defines the default for line-to-trunk calls.

Rules in provisioning

This parameter has two input fields with the values CALLING, CALLED, or MUTUAL.

Specify the default controlling party for line-to-line calls in field 1. The default controlling party is one of the following:

- the CALLED party (terminator)
- the CALLING party (originator)
- the MUTUAL party (terminator or originator)

Specify the default controlling party for line-to-trunk calls in field 2. The default controlling party is one of the following:

- the CALLED party (terminator)
- the CALLING party (originator)
- the MUTUAL party (terminator or originator)

Range information

Minimum	Maximum	Default
		MUTUAL CALLING

Activation

Immediate

CALL_CONTROL_DEFAULTS (end)

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS29.

CALL_REPORT_FORMAT

Parameter name

Call Report Format

Functional description

An international switching unit with standard translations requires this parameter. This parameter specifies one of the following conditions:

- if the call detail records for Selective Charge Record (SCR) and the Attendant Pay Station (APS) features format and route to a log device
- if the call detail records for the SCR and the APS features format and route to a hotel billing information center (HOBIC)

Rules in provisioning

Set the value of this parameter to HOBIC when the following conditions occur:

- Call records for APS and SCR must be in HOBIC record format.
- Call records for APS and SCR must route to a HOBIC device.

If HOBIC is present, set the value of this parameter to HOBIC.

Leave the value of this parameter at the default of LOG when the following conditions occur:

- APS and SCR call records must be in log format.
- APS and SCR call records must route to a log device.

Range information

Minimum	Maximum	Default
		LOG

Activation

Warm restart

Dependencies

Does not apply

CALL_REPORT_FORMAT (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

CAMA_SUSP_CALL_ALLOWED

Parameter name

Centralized Automatic Message Accounting Suspended Call Allowed

Functional description

A switching unit with the TOPS feature requires this parameter.

This parameter specifies if calls proceed without billing or without operator interruption CAMA suspended for the following types of calls:

- 1+ CAMA
- 1+ COIN
- 1+ HOTEL

Rules in provisioning

If the proceeding call types proceed without billing or operator interruption when CAMA is suspended, set the value of this parameter to ALL.

If the proceeding call types do not proceed without billing or operator interruption when CAMA is suspended, set the value of this parameter to NONE.

If a minimum of one, but not all, of the above call types proceed when CAMA is suspended, enter the correct data. The correct data appears in the following table.

Provisioning parameter CAMA_SUSP_CALL_ALLOWED

Call type	Value
1+ CAMA	CS_CAMA
1+ COIN	CS_COIN
1+ HOTEL	CS_HOTEL
Note: A space must separate an entry of two values.	

CAMA_SUSP_CALL_ALLOWED (end)

Range information

Minimum	Maximum	Default
		NONE

Activation

Immediate

Dependencies

The system routes the call to reorder (RODR) treatment in the Treatment Table when CAMA is suspended. This procedure occurs when a call cannot proceed without billing or operator interruption when CAMA is suspended.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

CCW_AS_LINE_OPTION

Parameter name

Cancel Call Waiting As Line Option

Functional description

This parameter specifies how the Cancel Call Waiting feature offers to subscribers. The parameter associates with the 200 ms disconnect timing feature that provides residential enhanced services (RES) lines with equal disconnect signal timing. This timing feature provides RES lines with equal disconnect signal timing to plain ordinary telephone service (POTS) lines.

This parameter improves disconnect signal timing for POTS and RES lines in conditions that involve the call waiting (CWT) option.

Before BCS30, RES lines had disconnect timing with flash privileges in all conditions. Options or features that appeared on the line did not affect RES lines with disconnect timing with flash privileges. Now, RES lines receive flash timing when necessary. For example, when features or options that activate flash are present on the line. When flash privileges are not necessary for the RES line, the RES line uses disconnect timing without a flash. This procedure occurs so that any on-hook duration greater than 200 ms is a disconnect, not a flash. In BCS30, this function extends to current office-wide CCW in the POTS and RES environments.

Rules in provisioning

If this parameter is set to Y (yes), a line must have the option CCW to use CCW.

If this parameter is set to N (no), the following lines can use CCW:

- POTS lines with Call Waiting (CWT)
- Meridian Digital Centrex (MDC) and RES lines that have an access code to CCW

Range information

Minimum	Maximum	Default
		N

CCW_AS_LINE_OPTION (end)

Activation

Immediate

Dependencies

Parameter CCW_ACTIVE must be set to Y to change the value of CCW_AS_LINE_OPTION to Y.

If CCW_ACTIVE changes to N, the CCW feature is not permitted on POTS or RES lines even if CCW_AS_LINE_OPTION is set to Y.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

Warm restart activation requirement was removed in CSP02.

CCW_WITHOUT_CWT_ALLOWED

Parameter name

CCW_WITHOUT_CWT_ALLOWED

Functional description

This parameter in table OFCVAR controls the functionality of feature AF7524, Sourcing of Patch FPA75 on a switch-wide basis.

Setting the value of this parameter to Y invokes the Cancel Call Waiting (CCW) feature. This occurs irrespective of whether the Call Waiting (CWT) feature exists on a line. The line can be either plain ordinary telephone set (POTS) or residential enhanced services (RES).

To prevent a user from invoking CCW to an individual line, an operating company can assign the No Cancel Call Waiting without Call Waiting (NCCW) SERVORD to that line. When the operating company sets the value of the parameter to N, the CCW feature behaves normally.

Provisioning rules

Not applicable

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Not applicable

Consequences

Not applicable

Verification

Not applicable

CCW_WITHOUT_CWT_ALLOWED (end)

Memory requirements

Not applicable

Dump and restore rules

Copy the existing value of this parameter when doing a dump and restore.

Parameter history

NA010

The NA010 release adds this parameter in feature AF7524, Sourcing of Patch FPA75.

CDIV_SDN_XLA

Parameter name

Call Diversion SDN Selector Translation

Functional description

A local or toll (international) switching unit with standard translations and a minimum of one of the following features requires this parameter:

- Call Diversion Operator (CDO)
- Call Diversion to Announcement (CDA)
- Call Diversion to Subscriber (CDS)

This parameter uses the SDN selector to specify the default translation information for a change in path for a call. The system uses this information in the following conditions:

- when the CDA, CDO, or CDS option with the SDN selector is added to a line with the use of service orders
- when NIL is specified for the XLASYS or XLANAME. The NIL with the use of table control to add options CDA, CDO, or CDS with the SDN selector.

Rules in provisioning

If the switching unit has this feature, a valid FT translation system instance must be specified as input for this parameter. The valid FT translation instances are in table FTHEAD.

Use caution when you enter a new value for this parameter. If you do not enter a valid translation table aspect, the parameter returns to NIL on a restart.

Range information

Minimum	Maximum	Default
		NIL

Activation

Warm restart

CDIV_SDN_XLA (end)

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS20.

CDO_ROUTE**Parameter name**

Call Diversion Operator Route

Functional description

An international local or toll switching unit with the Call Diversion Operator (CDO) feature requires this parameter. This parameter specifies the default translation information for a call diversion with the use of the RTE selector. The system uses this information when the CDO option with RTE selector is added to a line with the use of service orders.

Rules in provisioning

If the switching unit has this feature, enter a valid route or the call diversion does not operate. The route entered must route a call to an on-operator board.

If the described route is in table IRTE, the format for the value of this parameter is as follows:

```
TABNAME IRTE XLASYS VALID TRANSLATION SYSTEM
XLANAME TRANSLATION SYSTEM INSTANCE
RTEREF 1 TO 1023
```

If the described route is in table OFRT, the format for the value of this parameter is as follows:

```
TABNAME OFRT
INDEX 1 TO 1023
```

Range information

Minimum	Maximum	Default
		NIL

Activation

Immediate

Dependencies

Does not apply

CDO_ROUTE (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS20.

CDS_DN_CHECK

Parameter name

CDS Directory Number Check

Functional description

This parameter is necessary for a local or toll switching unit with common translations.

Certain directory numbers (DN) can have a limit so that the DNs cannot be diverted to. These DNs are in table FTCODE, if this parameter specifies this instance.

This instance can limit changes in path (according to the dialing plan) to a group of local, national, or international numbers.

Rules in provisioning

Specify the one-to-eight character name assigned to the instance in table FTCODE to check routing limits.

Range information

Minimum	Maximum	Default
		NIL

Activation

Warm restart

Dependencies

A valid FT translation system instance must be specified as input for this parameter. The valid FT translation instances are in table FTCODE. For example, if routing limits are in table FTCODE under CDSCHK, the value of this parameter is CDSCHK.

Consequences

Does not apply

Verification

Does not apply

CDS_DN_CHECK (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS36

Activation statement corrected to specify a warm restart in BCS36.

Parameter history

BCS22

This parameter was introduced in BCS22.

CFGDA_SEND_PILOT_DN_TO_SMDI_ISUP

Parameter name

Call Forward Group Don't Answer (CFGDA) Send Pilot Directory Number (DN) to Simplified Message Desk Interface (SMDI) or Integrated Services Digital Network User Part (ISUP), or both

Functional description

When a call is forwarded by way of CFGDA to SMDI, the member DN is passed to the SMDI as the forward-from DN, and is therefore routed to the voice mail box of the member DN. This office parameter provides an option for the pilot DN to be passed to the SMDI when a call is forwarded by way of CFGDA to SMDI from any member of the hunt group. This method allows calls that have hunted to any member of a group to be forwarded to the voice mail box of the pilot DN.

This office parameter applies to both CFDA (POTS and RES) and CFGD (call forward group don't answer for MDC).

The CFGDA feature allows Call Forward Don't Answer (CFD or CFDA) to be applied to a whole hunt group by being assigned to the pilot of the hunt group. The following types of hunt groups can be assigned to CFGDA: Directory Number Hunt (DNH), Distributed Line Hunt (DLH), and Multiline hunt (MLH). CFGDA cannot be assigned to Bridged Night Number (BNN) Hunt groups, and so has no effect on these groups.

It is possible to assign call CFD or CFDA to individual members of a DNH group. When CFGD is assigned to the DNH group, feature precedence is determined as follows:

- For calls to the pilot DN, CFGD takes precedence over CFD.
- For calls to the pilot DN, CFDA takes precedence over CFGDA.
- For calls that terminate on a DNH group member due to a direct call to that DN, CFD or CFDA takes precedence over CFGD or CFGDA.
- For calls that terminate on a hunt group member in the course of hunting, CFGD or CFGDA takes precedence over CFD or CFDA.

This office parameter has effect only when CFGDA/CFGD takes precedence over CFDA/CFD. If a call is forwarded from a member of a hunt group because of CFDA/CFD, the member DN will be passed to SMDI even when CFGDA/CFGD is datafilled on the hunt group. The pilot DN can be passed only for calls that are forwarded because of CFGDA/CFGD.

CFGDA_SEND_PILOT_DN_TO_SMDI_ISUP (continued)

If either Boolean value in this office parameter is set to Y, verify that the pilot DN of the hunt group is passed to the SMDI instead of the member DN for the appropriate CFGDA/CFGD scenario.

If this feature is activated to send the pilot DN over an ISUP trunk, the pilot DN will be used by all applications in the terminating switch that rely on the OCN (original called number) and RDN (redirected number) parameters of the ISUP IAM (initial address message). For example, Meridian business set (MBS) display of the forward-from DN shows the pilot DN, even when the call forwards from a member DN.

When the office parameter for intraswitch is set to send the pilot DN, the pilot DN is sent for all calls that forward from hunt groups by way of CFGDA to SMDI. When the office parameter for interswitch is set to send the pilot DN, the pilot DN is sent for all calls that forward from hunt groups by way of CFGDA over an ISUP trunk.

Provisioning rules

This office parameter contains two Booleans: one for intraswitch SMDI, and one for interswitch ISUP to SMDI. If the CFGDA call is forwarded to SMDI intraswitch, the first Boolean value determines whether the pilot or the member DN gets passed to the SMDI. If the CFGDA call is forwarded over ISUP to SMDI in another switch, the second Boolean determines whether the pilot or the member DN gets passed over ISUP to the SMDI. A value of N in either field means that the member DN is passed to the SMDI. A value of Y means that the pilot DN is passed to the SMDI.

Range information

Minimum	Maximum	Default
		N N

Activation

Immediate

Dependencies

Not applicable

Consequences

Not applicable

CFGDA_SEND_PILOT_DN_TO_SMDI_ISUP (end)

Verification

Not applicable

Memory requirements

Not applicable

Dump and restore rules

Prior to this office parameter, ACT patches RER06 and RER34 provided the same functionality. During a BCS upgrade, when a site goes from a load with these ACT patches to a load with this office parameter, the activation status of the ACT patches is queried. If the patches are active, the value of the office parameter is set accordingly. If patch RER06 is active, the first Boolean is set to Y. If patch RER34 is active, the second Boolean is set to Y.

Parameter history**NA004**

This parameter was introduced.

CHECK_FOR_TMEM

Parameter name

Check For TMEM Route Selector

Functional description

This parameter activates a check of the route tables (for example, PXRTE) for the TMEM route selector when a trunk member is deleted.

This parameter allows a network operator to stop all checks for the TMEM selector. This procedure increases the removal of trunk members. When a check occurs, each scan of the route tables can cause a large delay of a maximum of 30 s.

Rules in provisioning

When the value of this parameter is set to N (no), a check of the route tables does not occur. A check normally occurs when the an attempt is made to delete a trunk member.

When the value of this parameter is set to Y (yes), a check of the route tables occurs.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

Consequences

The trunk members to be deleted can route to a TMEM selector. This action can corrupt translations datafill if a trunk member is deleted. At this time, the TMEM route tuple of the trunk member remains.

Verification

Does not apply

CHECK_FOR_TMEM (end)

Memory requirements

This parameter does not impact memory

Parameter history

This parameter was introduced in BCS30.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

CHNG_NUM_OF_TGS_FOR_PKT_18_22

Parameter name

Change Number of Trunk Groups for Packets 18 and 22

Functional description

The DMS-100 switch generates 5-minute data to provide the network manager with a current view of how the DMS switch is processing calls. The 5-minute data response message is divided into 25 packets of data.

Telcordia imposed a restriction on the number of trunk groups supported by packets 18 and 22 to avoid a possibility of throughput problems. Therefore, the maximum number of trunk groups supported by packets 18 and 22 has been limited to 200 and 819, respectively. This parameter provides the operating companies with an option to increase the number of trunk groups supported for packets 18 and 22 from 200 and 819 to 250 and 1024, respectively.

This office parameter has two fields that cause the following actions:

- The first field indicates the maximum number of trunk groups supported by packet 18. The value range in this field is 199 to 249.
- The second field indicates the maximum number of trunk groups supported by packet 22. The value range in this field is 818 to 1023.

Provisioning rules

None

Range information

The range information is as follows:

Minimum	Maximum	Default
199	249	249
818	1023	1023

Activation

Change activation is immediate. No restart or any other manual action is required to activate a parameter change.

Requirements

None

CHNG_NUM_OF_TGS_FOR_PKT_18_22 (end)

Results

Changing the values in this parameter increases or reduces the limits on the number of trunk groups supported by packets 18 and 22.

Testing

At the MAP level, issue the following command to verify the value of the office parameter:

```
TABLE OFCVAR;POS CHNG_NUM_OF_TGS_FOR_PKT_18_22
```

Memory requirements

There is no impact to memory.

Dump and restore rules

None

Parameter history**NA014**

The CHN_NUM_OF_TGS_FOR_PKT_18_22 parameter was introduced.

CIRCUIT_TEST_NUMBER_MESSAGES

Parameter name

Circuit Test Number of Messages

Functional description

Switching units with the Meridian Digital Centrex (MDC) Circuit Test Enhancement feature require this parameter.

This parameter specifies the number of messages sent during the loop signaling at terminal and line card tests of the diagnostic. The method used to initiate the diagnostic does not affect this action.

This parameter also specifies the number of messages sent during the circuit test part of the station ringer test. The parameter specifies the number of messages on enhanced business sets (EBS) and data (DATA) units.

This parameter also specifies the default number of messages sent during the CKTTST command at LTPMAN. If a value is not specified, the system uses the ALT CKTTST command.

Rules in provisioning

The value of this parameter reflects the number of messages required to make the results of the following tests reliable:

- the diagnostic loop-signaling tests
- the station ringer circuit test

The parameter value must be greater than 1, because the system often loses the first message. Additional messages are received, which affects the result failure raised.

Use the recommended default value of 10. This value keeps the amount of time required to run the circuit test short and catches any hard failures. This value also safeguards against a message overload in the line concentrating modules (LCM).

The recommended value of 10 is based on the current switching unit signaling failure condition. If a high percentage of signaling failures occur at intervals, increase the value of this parameter. Increasing the value of the parameter helps to find the problem.

CIRCUIT_TEST_NUMBER_MESSAGES (end)

Range information

Minimum	Maximum	Default
1	5 0	1 0

Activation

Activation begins when the next diagnostic or station ringer test on an EBS, DATA, AIM or IBERT line starts.

Dependencies

Does not apply

Consequences

If this parameter is overprovisioned a message overload in the LCM can occur. This overload occurs if the system runs too many tests on EBS, DATA, AIM, or IBERT lines. The tests can be diagnostics, circuit tests, or station ringer tests.

If this parameter is underprovisioned, test results are not always accurate. Results that are not accurate can occur for either of the following:

- the loop signaling part of the diagnostic
- the circuit test part of the station ringer test

Verification

Run the LTPMAN CKTTST command at the line card on an line with data entry where a card is not installed. The result should indicate that the circuit test failed. The number of messages sent should be equal to the value of this parameter.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS26.

CLF_ACCESS_CODE

Parameter name

CLF Access Code

Functional description

This parameter provides a two-digit access code for custom calling service lines that request the Calling Line Identification with Flash (CLF) feature. The CLF option is for analog lines within the DMS-100. Local switching units require this parameter. Combined local and toll switching units require this parameter.

CLF can be present with the following features:

- switch hook flashing
- three-way calling
- call transfers

Lines without the CLF option require only switch hook flashing for custom calling.

Rules in provisioning

Specify the two-digit access code for custom calling service lines that request the CLF feature.

The range is 00 to 99. The default value is NN.

Range information

Minimum	Maximum	Default
00	99	NN

Activation

Immediate

Dependencies

For assignment of CLF, refer to table LENLINES.

CLF_ACCESS_CODE (end)

Consequences

The user cannot use the two-digit code that this parameter specifies for two-digit dialing. The user also cannot use the two-digit code as a feature access code in table IBNXLA.

The CLF feature is not compatible with integrated-services digital network (ISDN) telephone sets that originate calls. A call can originate from an ISDN telephone set to an Integrated Business Network (IBN) line that has CLF assigned. When this condition occurs the IBN subscriber flashes the hookswitch and dials the CLF access code (for example, 11#). The CLF feature does not continue to hold the ISDN line. When the IBN line tries to apply the CLF option, the system generates log FTR138. This log means treatment is set to FNAL (FEATURE_NOT_ALLOWED).

Verification

Does not apply

Memory requirements

This parameter value requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

CMAJALARM

Parameter name

C Major Alarm Thresholds

Functional description

This parameter specifies the minor, major, and critical alarm thresholds for lines with a failure flag of C (uppercase C).

A diagnostic failure flag C denotes a line that failed the system diagnostic after the line exceeded the call processing (CP) error thresholds. The flag also denotes a line that exceeded the CP major error threshold a second time. The line exceeded the threshold less than 15 min after the line returned to service. The line returned to service after the line exceeded the threshold the first time.

If the number of C failures equals or is greater than one of the alarm thresholds, the system raises the correct alarm.

Rules in provisioning

Set the CMAJALARM thresholds based on the current level of office failure problems and the level of notification required for these failures. The three fields, read from left to right, represent the minor, major, and critical alarm thresholds.

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	5 10 15

Activation

To change this parameter, use the ALMSTAT command at the LTP Map level. When the user changes the value, the system updates all current alarms to reflect the failures with the new values.

Dependencies

Does not apply

Consequences

If the user sets the alarm thresholds too high, the system can encounter too many call processing errors without enough notification.

CMAJALARM (end)

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS29.

CMD_MAP_ENABLED

Parameter name

Command MAP Enabled

Functional description

This parameter determines the type of display used for MAPCI full screen output. The system creates a MAPCI full screen output when the user enters MAPCI during a NEMAS MTP CMD Session. This action allows the session device to behave like the session device is a terminal hooked to the DMS IOC.

Rules in provisioning

If the parameter is N (no), the full MAPCI display scrolls up as 24 lines of 80 characters. This action occurs when the parameter is set after the user enters the MAPCI or CI level command. This display indicates the state of the current display and the display at the end of the last command. This display includes any automatic updates that occur while the system waits for input from the AOM. When the command is complete, the display scrolls up again to reflect the result of the command. This display includes any automatic updates that occur during the command execution. The AOM enters another MAPCI or CI command.

Use N if the display terminal for the CMD Session is not configured to handle VT100 control codes. These codes are for full screen MAP terminal control.

If the parameter is Y (yes), the screen receives the automatic updates. These updates occur from the time the user last entered the MAPCI or CI command. When the command executes, the system sends updates to the display and the terminal. When the system completes the command, the display freezes. This freeze allows the user to enter another command. When the parameter is set to Y, the parameter assumes the AOM terminal understands the VT100 control codes.

The MORE... performs as before, with the following exceptions:

- When set to N, the display continues to scroll up.
- When set to Y, the display continues to apply to the terminal.
- The MORE... does not time-out and display the command output after 15 s. The MORE... normally times out and displays the command output after 15 s.
- The SAVEMAP command and the PRINTMAP command do not work. If the user needs a PRINTMAP image, change the setting to N. Enter the desired command the user needs for the PRINTMAP image.

CMD_MAP_ENABLED (end)

Range information

The range of values for this parameter is Y or N.

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

Does not apply

Dump and restore rules

Copy the current value of this parameter or consult Northern Telecom Customer Engineering.

CMG_ENABLED

Parameter name

Call Management Group (CMG) Enabled

Functional description

This parameter activates or deactivates the functionality of the Dual Line Call Management (DLCM) feature on the switch.

Provisioning rules

Not applicable

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

None

Consequences

Not applicable

Verification

None

Memory requirements

None

Dump and restore rules

Not applicable

Parameter history

NA010

The DLCM feature (AJ4899) introduced this parameter.

CMINALARM

Parameter name

C Minimum Alarm Thresholds

Functional description

This parameter specifies the minor, major, and critical alarm thresholds for lines with a failure flag of c (lowercase c).

A diagnostic failure of c indicates a line exceeds the call processing (CP) minor error thresholds. The system did not put the call in a shower queue for a diagnostic. The number of c failures can be equal to, or greater than, one of the alarm thresholds. When this condition occurs, the system raises the correct alarm according to the number of c failures.

Rules in provisioning

Set CMINALARM thresholds based on the current level of office failure problems and the level of notification required for these failures. The fields of this parameter, read from left to right, represent minor, major, and critical alarm thresholds.

Range information

Minimum	Maximum	Default
0 0 0	32 767 32 767 32 767	5 10 15

Activation

Use the ALMSTAT command at the LTP MAP level to change this parameter. When the user changes the value, the system updates all current alarms to reflect the failures with the new values.

Dependencies

Does not apply

Consequences

If the user sets the alarm thresholds too high, the system can encounter too many call processing errors without enough notification.

Verification

Does not apply

CMINALARM (end)

Memory requirements

This parameter does not impact on memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

BCS29

This parameter was introduced in BCS29.

CNDB_ON_POTS

Parameter name

Calling Number Delivery Blocking on Plain Ordinary Telephone Service

Functional description

This parameter activates, or deactivates, the office ability to provide calling number delivery blocking (CNDB) functionality for the plain ordinary telephone service (POTS) environment.

Rules in provisioning

When application of feature package NXP73AA to the office occurs, this parameter has initial setting N (no). If this parameter is set to N, subscribers cannot activate CNDB for the line of the subscriber. This action results in a dialing error treatment.

If this parameter is set to Y (yes), POTS subscribers can activate CNDB for the line of the subscriber. The POTS subscribers dial the CNDB on POTS access code to activate CNDB. This feature allows the subscriber to prevent the display of the subscriber directory number private to other subscribers for each call.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

When this parameter is set to Y, the POTS subscriber can dial the CNDB on POTS access code. This action activates CNDB for the call.

CNDB_ON_POTS (end)

Memory requirements

Each unit requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS33.

COIN_DTF_TOTALIZER_RESET

Parameter name

Coin Dial Tone First Totalizer Reset

Functional description

The operating company requires this parameter when the switching unit has AT&T dial tone first coin telephones.

Rules in provisioning

Set this parameter to Y (yes) when the user requires an 800 ms delay. The delay occurs after a tip/ring line reversal and before the blind coin return of the operator. This delay works on a coin line to operator call. With the parameter changed to Y, the system prevents coin tones to the operator for coins that will be returned.

Leave the value of this parameter at the default of N (no) if the user does not require this function.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

COIN_DTF_TOTALIZER_RESET (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

COIN_OPERATOR_RELEASED_ON_OA

Parameter name

Coin Operator Released on Operator Assistance

Functional description

An AT&T switching unit that implements or can route credit card service requires this parameter. This parameter applies to all coin first and dial tone first coin lines in the switching unit.

This parameter makes sure that the system maintains normal battery on coin lines for operator assisted calls on first answer.

Rules in provisioning

If coin lines are coin first (line class code CCF in table LINEATTR), set the value of this parameter to CCF.

If coin lines are dial tone first (line class code CDF in table LINEATTR), set the value of this parameter to CDF.

If a combination of coin first and dial tone first coin lines are present, set the value of this parameter to CCFCDF.

If the operating company does not require this parameter, set the value to INACTIVE.

Range information

Minimum	Maximum	Default
		INACTIVE

Activation

Immediate

Dependencies

Refer to table LINEATTR in the data schema section of *Translations Guide* for a description of line codes CCF and CDF.

Consequences

Does not apply

COIN_OPERATOR_RELEASED_ON_OA (end)

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

COIN_RETAIN_ON_OA

Parameter name

Coin Retain on Operator Assistance

Functional description

An AT&T switching unit that implements or that can route credit card service requires this parameter. This parameter applies to all coin first and dial tone first coin lines in the switching unit.

The parameter retains the first deposit (no coin return) on operator assisted calls on first answer.

Rules in provisioning

If the coin lines are coin first (line class code CCF in table LINEATTR), set the value of this parameter to CCF.

If the coin lines are dial tone first (line class code CDF in table LINEATTR), set the value of this parameter to CDF.

If a combination of coin first and dial tone first coin lines are present, set the value of this parameter to CCFCDF.

If the operating company does not require this parameter, set the value to INACTIVE.

Range information

Minimum	Maximum	Default
		INACTIVE

Activation

Immediate

Dependencies

For an explanation of line class codes CCF and CDF, refer to table LINEATTR in the data schema section of the *Translations Guide*.

Consequences

Does not apply

COIN_RETAIN_ON_OA (end)

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

CONTINUOUS_RETRY_TIMERS

Parameter name

Continuous Retry Timers

Functional description

This parameter specifies the sleep timer and the sanity timer for continuous retry calls.

Rules in provisioning

The first field of this parameter is the sleep timer. The sleep timer has a range of 2 to 10 s. The second field of this parameter is the sanity timer. The sanity timer has a range of 11 to 90 s.

The sleep timer controls the time the DMS waits before the DMS again attempts to find an outgoing route for a call. The outgoing route must have a routing control indicator (RCI) value that supports continuous retry.

The sanity timer allows the operating company to stop calls from attempting again if the calls cannot find a free route. The calls must find a free route before the timer expires.

Set the value of this parameter according to the commitment of the operating company to route continuous retry calls. Emergency service calls are an example of continuous retry calls. If continuous retry calls are not as important as a high service rate, set the sanity timer to a low value. Set the sleep timer to a high value.

Range information

Minimum	Maximum	Default
211	10 90	212

Activation

Immediate

Dependencies

Does not apply

CONTINUOUS_RETRY_TIMERS (end)

Consequences

If the values of this parameter are not set correctly, a problem can occur. The switch can use a high amount of time to attempt to find a route for a continuous retry call. This action affects call capacity.

Verification

To verify changes to the value of this parameter, make retry calls. Monitor the switch performance.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS36.

CREATE_PARTIAL_800_AMA-CANADA ONLY

Parameter name

Create Partial 800 Automatic Message Accounting

Functional description

The system requires this parameter when 800 PLUS capabilities are active in the office. This parameter controls the generation of 800 PLUS billing records if the system receives a calling number that is not complete.

Rules in provisioning

If two conditions are present, the system does not generate the automatic message accounting (AMA) record. These conditions are a parameter value of N (no) and a calling number on the 800 PLUS call that is not complete. These conditions include calls that originate from lines or trunks.

The system generates the AMA record if two conditions are present. These conditions are a parameter value of Y (yes) and a calling number on the 800 PLUS call that is not complete. These conditions include calls that originate from lines or trunks.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

CREATE_PARTIAL_800_AMA-CANADA ONLY (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS22.

CUSTOMER_DATA_CHANGE_LOGS

Parameter name

Customer Data Change Logs

Functional description

A minimum of one customer group can have the Customer Data Change (CDC) feature. When a customer group has this feature, this parameter controls if the system generates logs CDC101, CDC102, and CDC103.

The system generates a CDC101 log report each time a CDC user issues a service order command.

The system generates a CDC102 log report each time a CDC user issues a table editor command.

The system generates a CDC103 log report each time a CDC user issues a pending service order command.

Rules in Provisioning

When the user sets this parameter to Y (yes), the system issues the log reports.

When the user sets this parameter to N (no), the system does not issue the log reports.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

CUSTOMER_DATA_CHANGE_LOGS (end)

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

CUTOFF_ON_DISC_TIME

Parameter name

Cutoff on Disconnect Time

Functional description

This parameter specifies the time that the system cuts off a line with the cutoff on disconnect (COD) option after disconnect. The parameter specifies the time in 10-ms intervals. This parameter specifies this time before the system returns the line to the IDLE state. The NTP 297-8001-808 entitled "SERVORD Reference Manual" describes the line option COD.

Rules in provisioning

Specify the length of time after disconnect that the system cuts off a line with the cutoff on disconnect option.

Range information

Minimum	Maximum	Default
0	255 (2.55s)	80 (800 ms)

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore procedure.

CUTOFF_ON_DISC_TIME (end)

Parameter history

BCS36

The default value was changed from 30 to 80 to correspond to the Global cutoff on disconnect value.

CWT_TIMEOUT

Parameter name

Call Waiting Timeout

Functional description

A local switching unit with universal translations and the Call Waiting (CWT) feature requires this parameter.

This parameter specifies the time between the first and second burst of CWT tone. The time is in seconds. This parameter also specifies the timeout after the system applies the second CWT tone for a call with call waiting.

When a subscriber with the CWT feature is in a call, the following events occur:

- an incoming caller to that directory number (DN) receives a ringing signal
- the system gives a call waiting tone to the busy DN

The call is to a line or trunk and not to a tone or an announcement.

Only the intended subscriber can hear the CWT tone. This parameter allows the new call to wait for the time that this parameter specifies. During this period, the called subscriber can accept or reject the waiting call. If the timeout expires or the called subscriber rejects the call, the system immediately returns the busy tone to the caller.

The CWT tone is a single tone of 300-ms duration.

Rules in provisioning

Do not apply

Range information

Minimum	Maximum	Default
5	30	15

Activation

Immediate

CWT_TIMEOUT (end)

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

Does not apply

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS36

Activation statement changed to immediate in BCS36.

BCS22

This parameter was introduced in BCS22.

CWT_TONE_LENGTH

Parameter name

Call Waiting Tone Length

Functional description

This parameter specifies the length of a solid burst of call waiting tone, in 100-ms intervals, for Integrated Business Network (IBN) call waiting as follows:

- customer groups that do not specify option DISTCWTN in table CUSTSTN
- customer groups where option DISTCWTN has been specified and the waiting party is in the same customer group as the station being waited on

Provisioning rules

Specify the length of a solid burst of call waiting tone, in 100-ms intervals, for IBN call waiting.

Range information

Minimum	Maximum	Default
1	15	3

Activation

Immediate

Dependencies

Not applicable

Consequences

Not applicable

Verification

Not applicable

Memory requirements

This parameter has no memory impact.

CWT_TONE_LENGTH (end)

Dump and restore rules

This parameter was introduced in BCS15.

Copy the existing value of this parameter when doing a dump and restore.

DAILY_ISDN_L2L3_PEG_AUDIT_TIME

Parameter name

Daily Integrated Services Digital Network Layer 2 Layer 3 Peg Audit Time

Functional description

This parameter specifies the time of day that the system audits and resets all ISDN layer 2 and layer 3 peg counts.

The report that the system generated creates ISDN201 logs.

Rules in provisioning

Set parameter DAILY_ISDN_L2L3_PEG_AUDIT_TIME to become active during a low traffic period on the switch. Do not change the setting while the audit is active.

Use the 24-h clock with the range of values of 0:00-23:59 for the time of day for this parameter. For example, 8:30 PM=20:30.

Range information

The range of values for this parameter is time of day: 0:00 to 23:59.

Minimum	Maximum	Default
0 00	23 59	2 00 (2:00 AM)

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

The system generates ISDN201 logs when the audit is complete.

Memory requirements

This parameter does not impact memory.

DAILY_ISDN_L2L3_PEG_AUDIT_TIME (end)

Dump and restore rules

Follow the reformat procedure to change parameter name.

Parameter history

NA008

This parameter replaces office parameter DAILY_ISDN_LAYER2_PEG_AUDIT_TIME in NA008. This parameter replaces this office parameter to include layer 3 functionality to run in conjunction with layer 2 audits.

DEFAULT_SIGNALLING_TYPE

Parameter name

Default Signalling Type

Functional description

This parameter allows for the selection of a default signalling type for a line. Either DP (Dial Pulse) or DT Digitone may be selected. This parameter is applicable only for non-keyset lines.

Provisioning rules

This office parameter is used to select the default signalling type while provisioning a non-keyset line. The behavioral changes are as follow:

DEFAULT_SIGNALLING_TYPE = DP: When office parameter is set to default value DP, the signalling type of a line provisioned will be DP signalling unless DGT option is in the input list.

DEFAULT_SIGNALLING_TYPE = DT: When office parameter is set to the value DT, the signalling type of a line provisioned will be DT signalling unless DP option is in the input list.

The range information is as follows:

Minimum	Maximum	Default
		DP

Activation

Immediate

Parameter history

This parameter was introduced in NA015.

DATA_CALL_SMDR

Parameter name

Data Call Station Message Detail Recording

Functional description

Switching units with Datapath, ISDN and the station message detail recording (SMDR) system require this parameter. The parameter indicates if a SMDR record includes data call and resource identification (DCI) data.

The following table outlines the DCI codes that field DCI accepts:

DCI codes acceptable

DCI code	Data call	Modem pool used	Meaning
0	N	N	Voice call
2	Y	Y	Data call without MP
3	Y	Y	Data call with MP
A	-	-	Unknown or feature inactive

Rules in provisioning

If the value is set to Y (yes), the SMDR call records can have the new format, which includes the DCI code.

If the value is set to the default value of N (no), the SMDR call records can have the old format.

Set the value of the parameter to Y for only switching units that must bill or analyze data calls.

Use the default value for switching units that do not have the Datapath and ISDN features.

Range information

Minimum	Maximum	Default
		N

DATA_CALL_SMDR (continued)

Activation

The change is immediate and applies only to calls disconnected after the parameter change.

Dependencies

Does not apply

Consequences

Does not apply

Verification

When you enable the parameter, follow these steps to verify that the parameter is operational:

1. Originate a call from a data unit (DU) to another party.
2. Answer from the other party.
3. Change the office parameter value to Y.
4. Enable the AMAB150 log.
5. Disconnect the call.
6. Note that the 12th digit of the originating DU has the correct DCI value of 2.

When you disable the parameter, follow these steps to verify that the parameter is operational:

1. Originate a call from a DU to another party.
2. Answer from the other party.
3. Change the office parameter value to N.
4. Enable the AMAB150 log.
5. Disconnect the call.
6. Note that the 12th digit of the originating DU has the correct DCI value of A.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

DATA_CALL_SMDR (end)

Parameter history

BCS26

This parameter was introduced in BCS26.

DCN_BUFFER_NUMBER_OF_BLOCKS

Parameter name

DCN buffer number of blocks

Functional description

The DCN_BUFFER_NUMBER_OF_BLOCKS is a read only parameter.

This parameter indicates the number of blocks of memory reserved for table buffering changes. The table changes are synchronized to TelePATH. TelePATH is an Operational Support System for provisioning a DMS switch. TelePATH uses a datalink to send and receive table datafill to and from a switch.

This parameter maintains the set number of buffers after a software upgrade.

Rules in provisioning

Does not apply

Range information

Minimum	Maximum	Default
0	1024	0

Activation

Does not apply

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

Does not apply

DCN_BUFFER_NUMBER_OF_BLOCKS (end)

Dump and restore rules

Does not apply

Parameter history

BASE08

Parameter DCN_BUFFER_NUMBER_OF_BLOCKS was introduced in BASE08.

DCT_TEST_CALL_SPILL

Parameter name

Data Call Tester Test Call Spill

Functional description

A DMS-100 or DMS-200 with the Data Call Tester (DTC) feature requires this parameter. The parameter defines the directory number (DN) that receives billing for all DCT test calls.

Rules in provisioning

Specify the 10-digit DN that receives all DCT test calls bills.

If the DN is not 10 digits in length the MAP displays, the following message:

DCT_TEST_CALL_SPILL MUST BE A 10-DIGIT DN.

Range information

Minimum	Maximum	Default
		4185551212

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Verify that the specified DN receives billing for DCT test calls to verify that the parameter is operational.

Memory requirements

This parameter does not impact memory.

DCT_TEST_CALL_SPILL (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS36

This parameter was introduced in BCS36.

DENY_POPULATED_SUBTABLE_DELETION

Parameter name

DENY_POPULATED_SUBTABLE_DELETION

Functional description

This parameter controls the automatic deletion of tuples after the deletion of a head table tuple.

If this parameter is set to N, the default value, a request to delete a head table tuple creates the following conditions:

- If subtable tuples are present, the system generates a warning message that indicates that subtable tuples are present. The warning message lists the names of the subtables. If the operating company personnel confirm that the head table tuples must be deleted then the deletion of all subtable tuples occurs automatically.
- If subtable tuples are not present, the system does not generate a message and the head table tuple is deleted.

If this parameter is set to Y, a request to delete a head table tuple creates the following conditions:

- If subtable tuples are present, the system does not generate an error message that lists the subtables that contain the tuples. The deletion request is rejected. The operating company personnel must manually delete each subtable tuple and enter the head table deletion request again.
- If subtable tuples are not present, the system does not generate a message and the head table tuple is deleted.

Rules in provisioning

There are no rules in provisioning.

Range information

N or Y

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

DENY_POPULATED_SUBTABLE_DELETION (end)

Verification

Request the deletion of a head table tuple which has associated subtable tuples. If the request is rejected and an error generates, the parameter is set to Y. If only a warning message generates, the parameter is set to N.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

There are no dump and restore rules.

Parameter history

BASE 08

Parameter DENY_POPULATED_SUBTABLE DELETION was introduced in release BASE 08.

DIAGALARM

Parameter name

Diagnostic Alarm

Functional description

This parameter is the diagnostic failure flag. The parameter maintains a counter and three threshold levels for the diagnostic failure type. The three threshold levels are minor, major and critical. An alarm condition occurs when one or more of the failure counters exceeds a threshold level that the parameter specifies.

To change the value of this parameter, use the AlmStat command at the LTP MAP level.

Rules in provisioning

Set the value of this parameter to represent the thresholds for the diagnostic failure alarms. The three fields, from left to right, represent minor, major, and critical alarm thresholds.

For example, the default value of 10 20 30 defines the alarm thresholds as follows:

- the minor alarm threshold is 10 failures
- the major alarm threshold is 20 failures
- the critical alarm threshold is 30 failures

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	10 20 30

Activation

Use the ALMSTAT command at the LTP Map level to change the parameter. The use of the ALMSTAT command to change the parameter updates all current alarms with the new values to reflect the failures.

Dependencies

Does not apply

DIAGALARM (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

These parameter values require 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

DIALBACKPW_ENCRYPTED

Parameter name

Dial Back Password Encrypted

Functional description

A switch with the Automatic Dial Back feature requires this parameter. The parameter indicates if suppression of the show dial-back password (SHOWDBPW) command must occur.

Rules in provisioning

Set the value of this parameter to Y to suppress the SHOWDBPW command. Leave the value of this parameter at the default of N (no) if suppression of the SHOWDBPW is not required.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

DIALBACKPW_ENCRYPTED (end)

Parameter history

BCS18

This parameter was introduced in BCS18.

DISKLOGMEMORY

Parameter name

Disk Log Memory

Functional description

This parameter specifies the number of bytes, in units of 1000, that the log interception function uses.

The greater this value, the greater the number of captured unformatted logs. Problem conditions can prevent the capture of all logs by the LOGUTIL feature. The log interception code that uses this store can intercept logs that the LOGUTIL does not capture.

This parameter can contain any value from 16 to 512 in units of 2. Values 1 to 15 are invalid.

Lower the value of the parameter if the switching unit does not have enough data store for other, more important, applications.

Rules in provisioning

Specify the amount of memory (in kbytes) that the log interception feature uses.

To deactivate the interception feature, you can set the value of this parameter to 0. This change can not be immediate because of pending deallocation.

Range information

Minimum	Maximum	Default
0 (deactivated) 16 (activated)	512	0

Activation

Immediate

Requests for more memory receive an immediate response if memory is available. Requests for reduction of the amount of DISKLOGMEMORY are met if permanent store records all logs that the memory contains. The permanent store is normally in disk format.

DISKLOGMEMORY (continued)

To make sure that enough data store is available, a warning appears when data store becomes low. The number of free untyped vast areas indicates the level of available data store. Users must terminate the request when the untyped free vast areas is less than or equal to twice the data store types.

Dependencies

The deallocation of memory associated with captured logs that permanent store does not record is not immediate. Permanent store must record these logs before the memory associated with the logs is available to the rest of the system.

Note that setting this value to 0 does not completely turn the associated DIRP DLOG subsystem off. To turn the subsystem off, the user must set the parameter DIRPKILL_IN_EFFECT in table OFCSTD to Y. The user must reduce the MINFILES to zero. Make sure that the number of alarms that are not NA corresponds to the value in NUMFILES. The user must demount all volumes.

Consequences

The overprovisioning of this parameter value results in memory that is not used.

The overprovisioning of this parameter causes the feature to take longer to fill its buffers before it rejects logs if the system is in a tight log-generating loop. If the same log generates repeatedly it is best to discard logs quickly so that important CPU time is not wasted.

The underprovisioning of the parameter results in the rejection of informative logs. The event occurs when the entire collection of buffers is filled and the buffer permanent store does not record contents.

Verification

Go into DIRP level of the MAP (MAPCI;MTC;IOD;DIRP) and type the command QUERY DLOG.

The record count must increase over time if the value of the parameter is not set to 0 and the system continues to generate logs. This increase indicates that some logs are being taken from memory and placed in permanent store.

Memory requirements

The value of parameter multiplied by 1000 represents the number of bytes of memory for use in log interception.

DISKLOGMEMORY (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS28**

This parameter was introduced in BCS28.

DIST_CWT_TONE

Parameter name

Distinctive Call Waiting Tone

Functional description

This parameter specifies the on-off durations for the special call waiting (CWT) distinctive cadence, in 10-ms intervals.

The CWT feature uses this cadence when table CUSTSTN contains the DISTCWTN option and the waiting party is from outside the customer group of the party the waiting party terminates on.

Rules in provisioning

This parameter requires two values: ON_SCALE, and OFF_SCALE.

The default value is 25 (250 ms) on and 10 (100 ms) off.

Range information

Minimum	Maximum	Default
1 1	70 10	25 10

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

DIST_CWT_TONE (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS15**

This parameter was introduced in BCS15.

DND_ROUTE

Parameter name

Do Not Disturb Route

Functional description

A local (international) switching unit with universal translations and the Call Diversion (CDO) Do Not Disturb (DND) feature requires this parameter. When interception of a call occurs the parameter specifies the call destination to allow the call to be routed again.

International DND (IDND) allows all incoming calls to divert to treatment when the feature is active.

The IDND is available to all subscribers with a DTMF line. A subscriber can activate, deactivate, and interrogate the feature. A subscriber with IDND active on the line receives a special dial tone.

Rules in provisioning

Use of the IDND for a switching unit requires entry of a valid route. The route must route a call to an announcement or treatment.

DND_ROUTE (continued)

If the specified route is in table IRTE, the format for the value of this parameter is the following:

- TABNAME
— IRTE
- XLASYS
— valid translation system
- XLANAME
— translation system instance
- RTEREF
— 1 to 1023

If the route entry is in table OFRT, the format for the value of this parameter is as follows:

- TABNAME
— OFRT
- INDEX
— 1 to 1023

Range information

Minimum	Maximum	Default
		NIL

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

DND_ROUTE (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS23

This parameter was introduced in BCS23.

DTULDINFO

Parameter name

Digital Test Unit Load Information

Functional description

This parameter stores the firmware filename of the default digital test unit (DTU).

The LOADFW command contains a filename option to let the user specify the filename of the firmware load. When the user specifies the filename, the load-firmware software takes DTU firmware from the specified load file. If the user does not specify a filename, the software uses the default that this parameter specifies.

Rules in provisioning

The value of this parameter is the eight-character DTU firmware default filename.

Range information

Minimum	Maximum	Default
		NILFNAME

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter value requires 1 word of memory.

DTULDINFO (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS35

This parameter was introduced in BCS35.

DTUOHBTLTD

Parameter name

Digital Test Unit Off-hook Balance Test Load Name

Functional description

This parameter specifies the balanced network (BalNet) data test unit (DTU) firmware load name.

The LOADFW (load firmware) command provides a file name option. This file name option allows the user to specify the file name of the firmware load. The load-firmware software takes BalNet DTU firmware from the load file that the user specifies. If the command does not specify a file name, the system uses the default that this parameter specifies.

Rules in provisioning

Set the value of this parameter to the eight-character BalNet DTU firmware default file name.

Range information

Minimum	Maximum	Default
		NILFNAME

Activation

Immediate

Dependencies

Does not apply

Consequences

The value specified by this office parameter is compared against valid firmware load file names. If a match does not appear, the user is informed that the LOADFW action is aborted. LOADFW is aborted because of a not permitted load file name.

Verification

Does not apply

DTUOHBTLTD (end)

Memory requirements

This parameter does not impact on memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

CSP02

This parameter was introduced in CSP02.

E911_CHECK_DEFAULT_ESN

Parameter name

E911 Check Default Emergency Service Numbers

Functional description

This parameter stops the user from being able to enter emergency service numbers (ESN) that are not in Table E911ESN for E911 trunk groups.

Rules in provisioning

The user can set the value of this parameter to Y (yes). This action stops the user from being able to enter an ESN in E911 trunk groups not contained in Table E911ESN.

The user can leave this parameter at the default value of N (no). This action allows the user to enter an ESN in E911 trunk groups not contained in Table E911ESN.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

This parameter affects the addition of E911 trunk groups in table TRKGRP.

The user can set the parameter to Y, and attempt to add an E911 tuple with an ESN not in Table E911ESN. If this action occurs, the addition or change fails.

Verification

In table TRKGRP, attempt to add an E911 trunk group with an ESN not entered in Table E911ESN.

E911_CHECK_DEFAULT_ESN (end)

If the office parameter is N, the system adds the tuple and generates a warning message and log. If the office parameter is Y, the system does not add the tuple. The system generates an error message.

Memory requirements

This parameter value requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS34

This parameter was introduced in BCS34.

E911_PSAP_DISCONNECT_TIME

Parameter name

E911 Public Safety Answering Point Disconnect Time

Functional description

This parameter is for the E911 feature that provides centralized emergency service. The service is provided through a DMS-100 or 100/200 switch that functions as an E911 tandem. The E911 tandem receives 911 calls from several end offices. The call tandem routes the calls to the appropriate public safety answering point (PSAP) for customer area or emergency service zone (ESZ). The E911 feature makes sure that subscriber receive the emergency services best suited to the location.

The system generates an E911204 log when an LDT PSAP does not return an on-hook signal to the E911 tandem. This log generation occurs in response to a calling party that disconnects in the time specified by this parameter.

The system generates an E911204 log when:

- an LDT PSAP does not return an on-hook signal to the E911 tandem in the time that this parameter specifies
- the on-hook signal is on response to a calling party that disconnects

Rules in provisioning

After a disconnect, specify the maximum time period that the E911 tandem waits for a PSAP to return an on-hook signal. Specify the time in seconds.

Range information

Minimum	Maximum	Default
10	600	16

Activation

Immediate

Dependencies

Does not apply

E911_PSAP_DISCONNECT_TIME (end)

Consequences

Does not apply

Verification

Does not apply.

Memory requirements

This parameter does not impact on memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS29

This parameter was introduced in BCS29.

E911_PSAP_OFFHK_ALARM_TIME

Parameter name

E911 Public Safety Answering Point Off-hook Alarm Time

Functional description

This parameter replaces E911_ALARMS_ACTIVE in BCS34. The E911_PSAP_OFFHK_ALARM_TIME specifies the length of time an alarm sounds. The alarm sounds when a public safety answering point (PSAP) remains off-hook for a length of time that exceeds the maximum. The office parameter E911_PSAP_DISCONNECT_TIME in Table OFCVAR specifies the maximum time.

Rules in provisioning

Set the value of this parameter equal to the length of time (in seconds) that the alarm remains active.

Leave the value of this parameter at the default of zero to stop the alarm sound when a PSAP remains off-hook.

Range information

Minimum	Maximum	Default
0	600	0

Activation

Immediate

Dependencies

This parameter works with office parameter E911_PSAP_DISCONNECT_TIME in table OFCVAR.

Consequences

When the value of this parameter is zero, the system stops the alarm and alerts the user that a PSAP remains off-hook. The system generates an E911204 log. The PSAP position, that remains off-hook, cannot receive calls until the line state is IDLE.

E911_PSAP_OFFHK_ALARM_TIME (end)

Verification

Take a PSAP off-hook for a length of time longer than the E911_PSAP_DISCONNECT_TIME specifies. Measure the length of time that the alarm stays active without manual clearing.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

When you change from software release BCS33 and lower to software release BCS34 and higher, check the value of office parameter E911_ALARMS_ACTIVE.

If the value is N (no), E911_PSAP_OFFHK_ALARM_TIME must be set to 0 (zero).

If E911_ALARMS_ACTIVE is Y (yes), set the value of E911_PSAP_OFFHK_ALARM_TIME to 25.

Copy the current value of this parameter when you perform a dump and restore from software release BCS34 to software release BCS34 or higher.

Parameter history

This parameter was introduced in BCS34.

EA_FGD_MFTOSS7_CIP

Parameter name

Equal Access Feature Group D Multifrequency to Signaling System 7 Carrier Identification Parameter

Functional description

Office parameter EA_FGD_MFTOSS7_CIP in table OFCVAR controls the addition of the carrier identification parameter (CIP) in the outgoing Initial Address Message (IAM) for Equal Access (EA) feature group D (FGD) multifrequency (MF) to signaling system 7 (SS7) calls. If this parameter is set to a value of Y, the outgoing IAM does not include the CIP. If this parameter is set to the default value of N, the outgoing IAM does have to include the CIP.

Rules in provisioning

Set the value of this parameter to Y (yes) if the IAM for EA FGD MF to SS7 calls does not have to include the CIP.

Leave the value of this parameter at the default of N (no) if the IAM for EA FGD MF to SS7 calls does not have to include the CIP.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

If this parameter is set to N, the IAM for EA FGD MF to SS7 calls does not include CIP.

Verification

Does not apply

EA_FGD_MFTOSS7_CIP (end)

Memory requirements

Does not apply

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

NA004

This parameter was introduced in NA004.

EA_TEST_CALL_SPILL

Parameter name

Equal Access Test Call Spill

Functional description

Switching units with equal access traffic between the access tandem and the carrier, trunk group AIC require this parameter.

This parameter specifies the number spilled on a test call and consists of the following digits:

- 2 information digits (95 for test call)
- 3 digits for calling NPA
- 7 digits for calling number

Rules in provisioning

Specify the number spilled on a test call. This number can consist of a maximum of 15 digits.

Range information

Minimum	Maximum	Default
		950005551212

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

EA_TEST_CALL_SPILL (end)

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

EADAS_ENABLED-U.S. ONLY

Parameter name

Engineering and Administrative Data Acquisition System Enabled

Functional description

The EADAS is an AT&T operational measurement support system (OSS). The EADAS collects operational measurement (OM) data from telephone switching units over serial data links. The EADAS computer submits a poll or request for data over a logical channel. The switching unit responds with the data requested, or a message. The message indicates why the data is not sent.

The operating company uses this parameter as an ON/OFF switch to start and stop this feature. Use this feature where the EADAS software is present but the necessary hardware is not present or does not work. When the transceivers are disabled, the system does not generate logs.

The operating company can use this parameter to change the multiprotocol controller (MPC) or link that the transceivers use. For more information, refer to parameter EADAS_MPC_AND_LINK in Table OFCVAR.

Rules in provisioning

This parameter must be set to Y (yes) to start the EADAS feature.

This parameter must be set to N (no) to stop the EADAS feature.

This parameter must not be set to Y if the MPC has not been activated.

The system generates EAD101 logs when this parameter is set to Y and Table MPC is empty. The system generates the EAD101 logs at the rate of eight each minute.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

EADAS_ENABLED-U.S. ONLY (end)

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact on memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

BCS19

This parameter was introduced in BCS19.

EADAS_GENERIC_ID-U.S. ONLY

Parameter name

Engineering and Administrative Data Acquisition System Interface Generic Identifier

Functional description

A switching unit with the EADAS feature requires this parameter. This parameter specifies the switch generic identification numbers that identify the number of the current DMS-100 switch software release.

These numbers are used in each message header sent to EADAS.

The parameter value has three numeric values in the range of 0 (zero) to 255.

Rules in provisioning

The EADAS administration of the operating company must determine the parameter value for each software release. The EADAS administration must also update the parameter to the appropriate value.

The first value must be the default value of 0 0 0 (zero zero zero).

Range information

Minimum	Maximum	Default
0 0 0	255 255 255	0 0 0

Activation

Immediate

Dependencies

Does not apply

Consequences

This office parameter affects SOC option OAM00007. Before OAM00007 is turned on, EADAS_GENERIC_ID must ensure a Semi-TR compliant header by setting the first field value of this parameter to 74.

Note: Changing to a Semi-TR compliant value will alter the header by adding a unique CLLI to it.

EADAS_GENERIC_ID-U.S. ONLY (end)

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

EADAS_MPC_AND_LINK-U.S. ONLY

Parameter name

Engineering and Administrative Data Acquisition System Multiprotocol Controller And Link

Functional description

This parameter specifies the multiprotocol controller (MPC) number. This parameter also specifies the link number that the transceivers assigned to the EADAS feature use.

This parameter consists of two numeric fields. These fields are: MPC and LINK. Field MPC can have a value of 0 to 255. Field LINK can have a value of 0 to 3.

You can change this parameter, on site, to allow the change of hardware if error conditions are present. You can also change this parameter to permit initial configuration of the system.

If it is necessary to switch to a spare MPC. The system uses the value of this parameter to show the change to the transceivers.

Rules in provisioning

The following method changes the value of this parameter:

1. Change the value of parameter EADAS_ENABLED in Table OFCVAR to N (no).
2. To enter the MAP display level, type

>MAPCI;MTC;IOD;IOC i;MPC n;BUSY FORCE

and press the Enter key.

where

i

is the IOC number of the MPC

n

is the card of the MPC

3. To change the value of this parameter, type

>MAPCI;MTC;IOD;IOC i;MPC n;BSY;RTS

and press the Enter key.

i

is the IOC number of the MPC

EADAS_MPC_AND_LINK-U.S. ONLY (end)

n

is the card of the MPC

4. Change the value of parameter EADAS_ENABLED in table OFCVAR to Y (yes).

The default value has field MPC equal to 0 (zero) and field LINK equal to 3.

Range information

Minimum	Maximum	Default
		0 3

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

BCS19

This parameter was introduced in BCS19.

EADAS_POPULATE_HUNT_SECTIONS

Parameter name

Engineering and Administrative Data Acquisition System Populate Hunt Sections

Functional description

The EADAS Interface uses this parameter to determine if EADAS OM class 96 gathers and transmits operational measurement (OM) group HUNT data for new groups.

The operating company controls the population of EADAS OM class section 96. The operating company collects OM data for selected hunt groups. The operating company does not collect OM data for established hunt groups. The operating company personnel does not populate EADAS OM class section 96. The personnel enter the CI level EADASKEY command to select the hunt groups.

Rules in provisioning

The operating company determines if new hunt groups populate EADAS OM class section 96. This class consists of OM group HUNT.

If this parameter is set to Y, the system adds new hunt group records and tuples to EADAS OM class section 96.

If this parameter is set to N, the system does not add new hunt group records and tuples to EADAS OM class section 96.

The default value of this parameter is Y. This default setting allows new hunt groups to populate EADAS OM section 96. The hunt groups populated this section before the creation of this office parameter.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

EADAS_POPULATE_HUNT_SECTIONS (end)

Dependencies

Does not apply

Consequences

When the value of this parameter changes, the change does not affect current hunt groups in EADAS OM class section 96. This office parameter affects new hunt groups when EADAS_POPULATE_HUNT_SECTIONS is set to N.

Verification

Use the CI level EADASFMT command to determine if new hunt groups populate EADAS OM class section 96.

Memory requirements

This parameter does not impact on memory.

Dump and restore rules

Does not apply

Parameter history

NA004

This parameter was introduced in NA004.

ECHODUMP_OUTPUT_FORMAT

Parameter name

ECHODUMP_OUTPUT_FORMAT

Functional description

Use the ECHODUMP CI command in conjunction with the ECHOBACK feature to dump the data change notification records. The data change notification records can contain a large amount of data depending on the number of changes that have been made. This office parameter allows the operating company to specify the information that is to be displayed in response to a ECHODUMP CI command.

The data dump may be specified as one of the following:

- ECHODUMP_OUTPUT_FORMAT NONE - no output required
- ECHODUMP_OUTPUT_FORMAT ALL - dump all information stored in each data change record
- ECHODUMP_OUTPUT_FORMAT {see table 1} - dump the information associated with the parameters listed in table 1.

ECHODUMP_OUTPUT_FORMAT PARAMETERS

Parameter	Output
CLLI	Office CLLI name
SEQ	Sequence number
DTS	Date and time stamp
COM	Command
PCL	PCL name and version
USER	UserID
DEV	Device type and device name
TAB	Table name
DIG	Digilator table (Y/N)
KEY	The key
TUP	The tuple

Example: ECHODUMP_OUTPUT_FORMAT {CLLI, SEQ, USER, TAB, TUP}

ECHODUMP_OUTPUT_FORMAT (end)

Provisioning rules

None

Range information

Minimum	Maximum	Default
		All

Activation

Immediate

Dependencies

None

Consequences

If ECHODUMP_OUTPUT_FORMAT NONE is specified, no output will be produced in response to the ECHODUMP CI command.

Verification

Set parameter to ECHODUMP_OUTPUT_FORMAT {CLLI}

Execute the ECHODUMP CI command. Only the office CLLI name will be displayed.

Memory requirements

This parameter has no memory impact

Dump and restore rules

This parameter has no dump and restore rules

Parameter history

CSP08

This parameter was introduced in CSP08.

ECORE_FORMAT

Parameter name

Enhanced Core Format

Functional description

A switching unit with the Enhanced Core (ECORE) feature requires this parameter. This parameter specifies if the log header is expanded to the ECORE format.

In the ECORE format, the log header contains a NODENAME field. The limit of this field is ten characters. These characters are eight NODENAME characters, plus one leading and trailing space. If the NODENAME field is less than eight characters in length, the field blanks are added to fill the eight character field.

The internal format of all logs does not change.

The parameter must be set all offices monitored in a downstream process.

Rules in provisioning

For switching units with the ECORE feature, set the value of this parameter to Y (yes).

For switching units that do not have the ECORE feature, leave the value at the default of N (no).

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Refer to the *Log Report Reference Manual* for additional information on these log formats.

ECORE_FORMAT (end)

Consequences

If the parameter is set to Y (Yes), an extra field (CM) is added to the LOG report when using the STD format in Table LOGDEV. See the example below.

```
CHRLNCRUDS2          CM          CM100 DEC18 09:16:20 6100 SUMM CM REPORT
                      CM 0 DATA FOLLOWS
```

If the parameter is set to Y (Yes) when using the SCC2 format in LOGDEV, an extra line (Log from node CM) is added. See the example below.

```
20 TRK 138 9509 INFO TRMT CKT          CNCRNCXA03T          72
Log from node CM
TREATMENT SET = INAC  CALLED NO =
CALLID= 0A2D 000E
```

If the parameter is set to N (No), the extra field (CM) does not appear in the log report when using the STD format in Table LOGDEV. See the example below.

```
CHRLNCRUDS2          CM100 DEC18 09:16:20 6100 SUMM CM REPORT
                      CM 0 DATA FOLLOWS
```

If the parameter is set to N (No) when using the SCC2 format in LOGDEV, the extra line (Log from node CM) does not appear in the log report. See the example below.

```
20 TRK 138 9509 INFO TRMT CKT          CNCRNCXA03T          72

TREATMENT SET = INAC  CALLED NO =
CALLID= 0A2D 000E
```

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**BCS23**

This parameter was introduced in BCS23.

EDTULDFILE

Parameter name

Enhanced Digital Test Unit

Functional description

This parameter is used to store the default Enhanced Digital Test Unit (EDTU) firmware filename.

A filename option is provided in the LOADFW command to enable the user to specify the filename of the firmware load. When activated, the load-firmware software extracts EDTU firmware from the specified load file. If no filename is given, the default specified by this parameter is used.

Provisioning rules

Set the value of this parameter to the eight-character EDTU firmware default filename.

Range information

Minimum	Maximum	Default
		NILFNAME

Activation

Immediate

Dependencies

Not applicable

Consequences

Not applicable

Verification

Datafill the default EDTU load in the table OFCVAR for tuple EDTULDINFO.

Memory requirements

No memory impact

EDTULDFILE (end)

Dump and restore rules

Not applicable

Parameter history

CSP04

This parameter was introduced in CSP04.

EMERG_ANNC

Parameter name

Emergency Announcement— EMERG_ANNC

Functional description

This parameter provides the common language location identifier (CLLI) for an emergency call announcement on emergency calls. If the parameter value is Y (yes), a valid CLLI entry from table ANNS must accompany the parameter. If this condition does not occur, the system does not consider this parameter active. Table CLLI must contain the CLLI entry. If the table does not contain the entry, set this parameter to N (no).

Rules in provisioning

Leave this parameter at the default value of N if this parameter must remain inactive.

Set this parameter to Y and enter a valid entry (CLLI name) from table ANNS to activate this parameter. A sample value is Y EMERG.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Entries in this parameter must be valid entries present in table ANNS. The user can enter a valid entry in table ANNS against this parameter. If this condition occurs, the system cannot delete the entry from table ANNS unless this parameter value changes.

Consequences

Not applicable

Verification

Set this parameter to the value Y EMERG. Make sure that free routes are not available and that the call is in a queue. Make the call and verify the

EMERG_ANNC (end)

announcement. Make sure that the system does not identify the calls as emergency calls. Make the call again and verify that the off-hook queue notice is the same as the notice in table NCOS.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

MMP13

This parameter BTUP_EMERG_ANNC is renamed as EMERG_ANNC.

UK002

Design activity AE0901 (BT7 Emergency Calls) introduced this parameter in BCS33.

ENG640M1_SCAN_RATE

Parameter name

ENG640M1 Scan Rate

Functional description

Local or combined local and toll switching units require this parameter. The switching units that require this parameter have the Operational Measurement Data Modification Order Selectable Subscribers Line Usage (SLU) Scan Rate Interval software.

This parameter appears if parameter OPTIONAL_SLU_FEATURE in table OFCOPT is set to Y (yes).

Rules in provisioning

Specify the scan rate in 10 s intervals for the traffic usage register ENG125M1.

At initial program load time this parameter is set to the default value, which is 10 (100 s).

Range information

Minimum	Maximum	Default
1	32767	10

Activation

Activation is immediate when the optional SLU scan rate interval software is provided.

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

ENG640M1_SCAN_RATE (end)

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

ENHANCED_TRUNK_PREROUTE_ABANDON

Parameter name

Enhanced Trunk Preroute Abandon

Functional description

Local international switching units with universal translations require this parameter. This parameter allows a different pattern of reports to the central control (CC) if trunk preroute abandons occur in the peripheral module (PM).

The PM counts preroute abandons. The PM sends the total to the CC with the next call that completes.

This change allows the CC to report the trunk that causes the preroute abandon.

Trunk preroute abandons occur when a trunk that dials another trunk is stopped before or during the receipt of the digits.

Rules in provisioning

If the value of this parameter is Y (yes), the PM sends a message to the CC. The PM sends a message for each trunk preroute abandon. Each message causes the system to generate a log. The CC counts operational measurements (OM).

If the value of this parameter is the default value of N (no), the PM counts the preroute abandons. The PM sends the number of preroute abandons to the CC when the next call completes.

Range information

Minimum	Maximum	Default
		N

Activation

Busy (BSY) and return to service (RTS) the PM.

Dependencies

Does not apply

ENHANCED_TRUNK_PREROUTE_ABANDON (end)

Consequences

Does not apply

Verification

If the value of this parameter is Y, the PM counts OMs for separate trunk group preroute abandons and general system abandon.

If the value of this parameter is N, the OMs for the general system abandon increase.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

BCS26

This parameter was introduced in BCS26.

ESG_ALARM

Parameter name

Emergency Service Group Alarm

Functional description

This parameter specifies if an alarm sounds and the system generates an ESG100 log. These events can occur when a call terminates at an emergency service group (ESG) station.

Rules in provisioning

Set this parameter to Y (yes) to sound an alarm and generate an ESG100 log when a call terminates at an ESG station.

Set this parameter to N (no) so that an alarm does not sound when a call terminates at an ESG station.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

ESG_ALARM (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS33

This parameter was introduced in BCS33.

ESG_RERING_TIME

Parameter name

Emergency Service Group Re-ring Time

Functional description

Switching units with the Emergency Service Group (ESG) feature in the Peoples Republic of China require this parameter. This parameter specifies the number of seconds that an ESG attendant can remain off hook before the system applies ringing. The system applies ringing to the calling subscriber. The count begins after the calling subscriber has gone on hook.

The re-ring feature allows the ESG attendant to maintain a connection to the calling subscriber hangs up. When an ESG attendant is assigned as an ESG, the ESG attendant has called subscriber control. The connection to the calling subscriber continues.

If the value of this parameter is 0, the re-ring capability is not active.

The recommended default value is 5.

Rules for provisioning

Specify the number of seconds other than five that an ESG attendant can remain off hook. The system applies ringing to the calling subscriber after the specified number of seconds. The count begins after the calling subscriber has gone on hook.

The default value is 5 s. This value gives the ESG attendant enough time to go on hook after the calling subscriber has gone on hook. This value prevents the ESG attendant from re-ringing the calling subscriber in error.

Range information

Minimum	Maximum	Default
0	9	5

Activation

Busy (BUSY) and return to service (RTS) the peripheral module (PM).

ESG_RERING_TIME (end)

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

BCS26

This parameter was introduced in BCS26.

FACALARM

Parameter name

Facility Check Failure Alarm (FACALARM)

Functional description

This parameter is the facility check failure flag. The system maintains three threshold levels are for the failure type. The threshold levels are minor, major and critical.

An alarm condition occurs when one or more of the failure counters exceeds one of the threshold levels.

To change the value of this parameter, use the ALMSTAT command at the LTP MAP level.

Rules in provisioning

Set the values of this parameter to represent the facility check failure alarm thresholds. For example, the default value of 10 20 30 represents the following alarm thresholds:

- a minor alarm threshold of 10 failures
- a major alarm threshold of 20 failures
- a critical alarm threshold of 30 failures

Range information

Minimum	Maximum	Default
0	32767	10 20 30

Activation

Use the ALMSTAT command at the LTP MAP level to change this parameter. The ALMSTAT changes the value, all current alarms update to reflect the failures with the new values. Changes to the parameter value at ALMSTAT update all current albums to reflect failures that occur with the new values.

Dependencies

Does not apply

FACALARM (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

FGD_ANI_SMDR_REQD

Parameter name

Feature Group D Automatic Number Identification Station Message Detail Recording Required

Functional description

An MSL-100 with the stand-alone feature group D (FGD) software or a DMS-100 with virtual access to private networks (VAPN) software requires this parameter.

The FGD defines a set of connection rules between local exchange carrier (LEC) access facilities and long distance (LD) carriers. The FGD treats all LD carriers the same.

The FGD is available only for incoming trunks (trunk group type IBNTI and IBNT2) to the MSL-100 and DMS-100. The stand-alone FGD and VAPN software packages do not support FGD signaling on outgoing trunks.

This parameter allows the operating company to have an additional Station Message Detail Recording (SMDR) system record produced for each incoming stand-alone FGD. The operating company can also have an additional SMDR record produced for each VAPN call that includes ANI digits. The system can produce the additional SMDR record if table TRKGRP must be Y (yes) for the trunk group that receives the calls.

The system produces an extra record when:

- SMDR is enabled for the call
- the user sets ANIDIGS (in table TRKGRP) to Y (yes) for the trunk group that receives the calls

Rules in provisioning

To produce an additional SMDR record for all incoming stand-alone FGD and VAPN calls, set this parameter value to Y (yes).

If the value of this parameter is the default of N (no), the system does not produce an additional SMDR record.

FGD_ANI_SMDR_REQD (end)

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

This parameter only applies to the switching units with the stand-alone FGD or VAPN capability.

Consequences

Does not apply

Verification

To verify that this parameter is active, check that the system produces an additional SMDR record for all incoming FGD calls.

Memory requirements

Does not apply

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS26

This parameter was introduced in BCS26.

FGD_TEST_CALL_ACK_OFFHOOK

Parameter name

Feature Group D Test Call Acknowledgement Offhook

Functional description

Two protocols are in use for Feature Group D test calls that originate from Bell operating company (BOC) Equal Access End Offices (EAEO) and terminate to carriers. One protocol specifies when the system sends an offhook signal by the carrier. The carrier sends this signal to the BOC after receipt of the test call digit stream. The other protocol specifies when the system sends an acknowledgement wink by the carrier. The carrier sends this acknowledgement wink to the BOC after receipt of the test call digit stream.

This office parameter allows the carrier to select the signal to send to acknowledge receipt of the test call digit stream.

When this parameter is set to a value of Y (yes), the carrier sends an offhook signal to the BOC. When this parameter is set to N (no), the carrier sends an acknowledgement wink to the BOC.

Rules in Provisioning

Set the parameter value to Y, to send an offhook signal to acknowledge receipt of a test call digit stream.

Leave the value of this parameter at the default of N, to send an acknowledgement wink.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

FGD_TEST_CALL_ACK_OFFHOOK (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact on memory.

Dump and restore rules

Copy the value of this parameter when you perform a dump and restore.

Parameter history

BCS31

This parameter was introduced in BCS31.

FIXED_CFBD_DEFAULT_STATE

Parameter name

Fixed CFBD default state.

Functional description

This parameter controls the default value of Call Forward Do Not Answer (CFDA) and Call Forward Busy Line (CFBL) states. This parameter controls the default value of the CFDA and CFBL when the value of field CFDACNTL or CFBLCNTL is F (fixed). This parameter also contains the default value of CFDA and CFBL when the value of field CFDACNTL or CFBLCNTL changes from N (normal) to F.

The NTX413AB IBN Enhanced Call Forward package allows end users to modify the CFDA and CFBL states and the forwarded-to directory number (DN). The Service Order System (SERVORD) prompts the user for fields CFDACNTL and CFBLCNTL. The SERVORD prompts the user when the office parameter RES_SO_SIMPLIFICATION subfield ENHANCED_POTS_OPTIONS in table OFCVAR is Y.

Fields CFDACNTL and CFBLCNTL can have the following values:

- N - Normal assignment. This value is the default value. This value is always active. The end user cannot control the call forward state or the forwarded DN.
- F - Fixed assignment. The end user can change the call forward state only.
- C - Programmed assignment. The end user can change the call forward state and the forwarded DN.

Rules in provisioning

Patch FPA48 activates the options CFDA and CFBL. Patch 48 activates these options when CFDA and CFBL are on a RES line. Options CFDA and CFBL are present on a RES line where the user changes the contrast of field from N to F. The default value of this office parameter depends on the state of patch FPA48. If patch FPA48 is active on the dump side, set this office parameter to ACT. If patch FPA48 was not active on the dump side, the default is INACT.

Range information

Minimum	Maximum	Default
NA	NA	INACT

FIXED_CFBD_DEFAULT_STATE (end)

Activation

Immediate

Dependencies

The value of office parameter FIXED_CFBD_DEFAULT_STATE can affect table CFX (Call forwarding). This office parameter affects table CFX when the value of CFD is the same as the value of office parameter FIXED_CFBD_DEFAULT_STATE.

Set the office parameter RES_SO_SIMPLIFICATION subfield ENHANCED_POTS_OPTIONS to Y to display the CFDACNTL or CFBLCNTL prompts.

Consequences

Does not apply

Verification

Verify that table OFCVAR contains this parameter.

Memory requirements

Does not apply

Dump and restore rules

Does not apply

Parameter history

NA002

This parameter was introduced in NA002.

FOT_DIGITS

Parameter name

Forward Transfer Digits

Functional description

This parameter specifies the route a call takes after a forward transfer signal. This parameter specifies the route of the call when the value of parameter ROUTE_ON_FOT in table OFCENG is Y (yes). This parameter applies to DMS-300 gateway switching units.

Rules in provisioning

Specify one to four digits (zero to nine) that drive the current call back through translations. The outgoing route is the same route that the digits take when received from the preceding exchange on the trunk circuit.

The parameter can accept inputs #B or #C.

Use this feature is to re-route to an International Traffic Operator Position System (ITOPS) position. This input #B is the international code (code-11) to access incoming operators.

The input #B is the default.

If the value of parameter ROUTE_ON_FOT is N (no), this parameter does not affect the route of the call.

Range information

Minimum	Maximum	Default
		#B

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

FOT_DIGITS (end)

Verification

Does not apply

Memory requirements

This parameter requires 20 words of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS29.

GEN_CDR300_ISDN_LOGS

Parameter name

Generate CDR300 Integrated Services Digital Network Logs

Functional description

An ISDN DMS-300 Gateway switch requires this parameter. The switch uses this parameter to produce new call detail records (CDRs) as required for the accounting statistics processing system (ASPS).

This parameter specifies if the system generates a CDR300 ISDN standard call record log when a CDR300 ISDN call record is output. This parameter specifies if the system generates logs when extension records are output.

Rules in provisioning

Set the value of this parameter to Y (yes), if the system must generate a log. The system outputs the log when the system generates a CDR300 ISDN call record or an extension record. Set the value to N (no), if the logs are not required.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

GEN_CDR300_ISDN_LOGS (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS31

This parameter was introduced in BCS31.

GEN_CDR300_MIDNT_LOGS

Parameter name

Generate CDR300 Midnight Logs

Functional description

This parameter specifies if the system generates a log when a call detail record (CDR) midnight audit end record is output. The CDR midnight audit end record is output on the CDR stream in a DMS-300 switch. The system can generate this log only when the user selects format 1A in office parameter GATEWAY_CDR_RECORD_ID in table OFCOPT.

Rules in provisioning

Set the value of this parameter to Y (yes) for the system to generate a log when a CDR midnight audit end record is output.

Set the value of this parameter to N (no), if the user does not require this function.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

GEN_CDR300_MIDNT_LOGS (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS34.

GEN_CDR300_SYNC_LOGS

Parameter name

Generate CDR300 Synchronization Logs

Functional description

This parameter specifies if the system generates a log when the system outputs a Call Detail Record (CDR) synchronization record. The system generates the CDR synchronization record on the CDR stream in a DMS-300 switch. The system can only generate this log when the user selects CDR format 1A in office parameter GATEWAY_CDR_RECORD_ID in table OFCOPT.

Rules in provisioning

Set the value of this parameter to Y (yes) to allow the system to generate this log. The system generates this log when the system outputs a CDR synchronization record on the CDR stream.

Set the value of this parameter to N (no) if this functionality is not required.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

If the user does not activate this parameter, the system does not generate a log for the synchronization record.

Verification

Does not apply

Memory requirements

This parameter value requires 1 word of memory.

GEN_CDR300_SYNC_LOGS (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS34.

GENERATE_CALL_RECORDING_LOGS

Parameter name

Generate Call Recording Logs

Functional description

International local switching unit with the Toll Call Recording (TCR) feature require this parameter. This parameter specifies if the system generates a log message when the system creates an automatic message accounting (AMA) record for transfer recent change (TRC).

Rules in provisioning

If the value of this parameter is the default value of N (no). The system does not generate a log message every time the system creates an AMA record for TRC.

If the value of this parameter is Y (yes). The system generates a log message. This system generates the message for a toll calls and sends the call record to AMA. Use this message for testing purposes. This message displays the contents of the toll call record in a readable format.

For a description of TRC, refer to parameter INTL_TCR_REQUESTED in table OFCVAR.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

GENERATE_CALL_RECORDING_LOGS (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS20

This parameter was introduced in BCS20.

GENERATE_ICAMA_LOG_ENTRY

Parameter name

Generate International Centralized Automatic Message Accounting Log Entry

Functional description

A toll switching unit (international) with common translations and either one or both of the following:

- International Centralized Automatic Message Accounting (ICAMA)
- the Inter-administration Accounting (IAA) feature

Rules in provisioning

If the user sets the value of this parameter to Y (yes), the system generates log message ICAMA LOG ENTRY. The system generates the log each time the system creates an ICAMA record.

This log is for testing purposes. The contents of the ICAMA call entry record appear in this log in a readable format.

If the user leaves the value of the parameter at the default of N (no), the system generates no ICAMA LOG ENTRY logs.

Refer to parameters ICAMA_REQUESTED and IAA_REQUESTED in table OFCVAR for other parameters and tables associated with the preceding features.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

To activate the preceding features, set either one or both of the following parameters to Y:

- ICAMA_REQUESTED
- IAA_REQUESTED

GENERATE_ICAMA_LOG_ENTRY (end)

Table OFCVAR contains these parameters.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS23

This parameter was introduced in BCS23.

GENERATE_ITOPS_LOG_ENTRY

Parameter name

Generate International Traffic Operator Position System Log Entry

Functional description

The operating company requires this parameter for a toll switching unit (international) that contains the following:

- universal translations
- the International call details record feature for the International Traffic Operator Position System (ITOPS)

This parameter specifies if the system generates an ITOPS log entry record when an ITOPS record is created.

The user must increase parameter NUM_CALLREC_STREAMS in table OFCENG. Increasing the parameter allows the user to add the new stream format ITOPS.

Rules in provisioning

Set the value of this parameter to N (no), if the user does not require the system to generate an ITOPS log entry record. The system normally generates this log when an ITOPS record is created.

Set the value of this parameter to Y (yes), if the system must generate an ITOPS log entry record when an ITOPS record is created.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

This feature requires the user to enter stream ITOPS in tables CRSMAP, CRSFMT, DIRPPOOL and DIRPSSYS.

GENERATE_ITOPS_LOG_ENTRY (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS25

This parameter was introduced in BCS25.

HPC_EGRESS_QUEUEING

Parameter name

HPC Egress Queuing

Functional description

Office parameter HPC_EGRESS_QUEUEING is used to enable or disable HPCTQ to all supported egress trunk groups in an office. Through this parameter, an operating company can also set the following values:

- the maximum time an HPC call can wait in an egress trunk group queue for an available trunk
- the maximum number of calls that can simultaneously queue in an egress trunk group queue
- the announcement or tone, if required, to be provided on calls that are queued to an egress trunk group

Provisioning rules

The values provided for HPC_EGRESS_QUEUEING are at the discretion of the operating company.

When an HPC call coming from an ISUP trunk is queued to an egress trunk and no treatment is provided (Treatment = NONE), a race condition can occur between the *Tiam* value and the Timeout value. The *Tiam* is a timer that starts when an Initial Address Message (IAM) is sent to initiate call setup for a call carried through an ISUP trunk between two switches. If the Timeout value is higher than the *Tiam* value, which is between 20 and 30 seconds with a default of 25 seconds, the queued HPC call is taken down.

When a treatment is provided (Treatment = Tone or ANNC), no race condition occurs.

Range information

(Sheet 1 of 2)

Field name	Value	Default
Enabled	Y or N	N
Timeout	1 to 90	
MaxCalls	1 to 256	

HPC_EGRESS_QUEUEING (end)

(Sheet 2 of 2)

Field name	Value	Default
Treatment	NONE, TONE, or ANNC	
Annc	CLLI code for announcement	

Activation

No action is required to activate the changes to office parameter HPC_EGRESS_QUEUEING. Changes to the values of this office parameter are handled as follows:

- When the MaxCalls value is changed, any HPC calls that are already queued to an egress trunk group remain in the queue even if the number of queued calls exceeds the new value.
- When the Timeout value is changed, any HPC calls that are already queued to an egress trunk group remain in the queue for the duration of the old Timeout value.
- Disabling the GETS HPC Egress Queuing feature has no effect on HPC calls already queued to egress trunk groups.

Requirements

Not applicable

Results

Not applicable

Testing

Not applicable

Memory requirements

None

Dump and restore rules

None

Parameter history**NA012**

Parameter HPC_EGRESS_QUEUEING was introduced.

IAA_REQUESTED

Parameter name

Inter-administration Accounting Requested

Functional description

An international toll switching unit that has universal translations requires this parameter. The parameter specifies when Inter-administration Accounting (IAA) applies to trunk groups of trunk group type MTR. These trunk groups have the IAA field in table TRKGRP set to Y (yes).

The IAA feature allows the customer to record international toll transit and toll completing call details. The IAA feature uses International Centralized Automatic Message Accounting (ICAMA) to record the call details.

The system sends records for IAA and for ICAMA to the same output stream. The ICAMA stream is an example of an output stream. The system treats the IAA as an extension of ICAMA. The IAA uses the same data collection procedures and formatter as ICAMA.

Rules in provisioning

If the user sets the value of the parameter to Y (yes), the system only records calls over trunks with trunk group type MTR.

If the user sets the parameter to the default value of N (no), the system does not generate IAA records.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

The IAA uses the same office parameters as ICAMA to perform the following tasks:

- control recording units
- record calls that are not answered

IAA_REQUESTED (continued)

- generate a log of the call record
- describe recommended action when recording unit allocation fails

Use office parameter NUM_ICAMA_RECORDING_UNITS, in table OFCENG, to control the number of recording units available.

If the system cannot allocate a recording unit, office parameter INTL_RU_OVFL_ACTION, in table OFCVAR, determines if calls can go through. When this event occurs, the system generates log ICAMA LOG ENTRY. The system does not generate IAA records in this condition.

If a call fails before the appropriate time, the system generates an IAA record. Integrity failure and force release cause a call to fail before the appropriate time. The IAA record for the call extends to the point of the failure. The second digit of the CALL INFO field is set to a value of 2 to indicate this failure. Administrations determine when to bill the call under these conditions. The system records the correct call duration and does not set the value to zero.

Use the office parameter RECORD_UNANSWERED_CALLS, in table OFCVAR, to determine if the system generated IAA records. The system can generate the IAA records for calls that were not answered.

The user does not require office parameter ICAMA_REQUESTED, in table OFCVAR, for IAA. This parameter only controls the switching ON/OFF of ICAMA.

The ICAMA logs for recording unit allocation failure and for the call record apply to IAA, AMAB160 and AMAB161 logs.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

IAA_REQUESTED (end)

Parameter history

BCS24

This parameter was introduced in BCS24.

ICAMA_ANI_FAILURE_ACTION

Parameter name

International Centralized Automatic Message Accounting Automatic Number Identification Failure Action

Functional description

An international toll switching unit requires this parameter. The switching unit contains universal translations and either one or both of the following:

- International Centralized Automatic Message Accounting (ICAMA)
- the Inter-administration Accounting (IAA) feature

Rules in provisioning

If the user sets the value of this parameter to NCONT, the system routes an ANI failure of an ICAMA call to reorder (RODR) treatment. The system routes the failure to the correct treatment table.

If the user sets this parameter to the default value of CONT, an ICAMA call can continue after ANI failure. The system cannot bill for the call.

Range information

Minimum	Maximum	Default
		CONT

Activation

Immediate

Dependencies

To activate the above features, you must set parameter ICAMA_REQUESTED and/or IAA_REQUESTED in table OFCVAR to Y (yes).

Refer to parameters ICAMA_REQUESTED and IAA_REQUESTED in table OFCVAR for other parameters and tables associated with the preceding features.

Consequences

Does not apply

ICAMA_ANI_FAILURE_ACTION (end)

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS23.

ICAMA_REQUESTED

Parameter name

International Centralized Automatic Message Accounting Requested

Functional description

An international toll switching unit that has universal translations and the International Centralized Automatic Message Accounting (ICAMA) feature requires this parameter.

Rules in provisioning

If the user sets the value of this parameter to Y (yes), the system enables the ICAMA feature.

If the user sets the value of this parameter to the default value of N (no), the system disables the ICAMA feature.

The ICAMA system records details of international calls that originate on ANI trunks. These calls use the device independent recording package (DIRP) to output the records to permanent storage, tape or disk.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

This feature requires the following parameters:

- GENERATE_ICAMA_LOG_ENTRY in table OFCVAR
- ICAMA_ANI_FAILURE_ACTION in table OFCVAR
- INTL_RU_OVFL_ACTION in table OFCVAR
- RECORD_UNANSWERED_CALLS in table OFCVAR
- NUM_ICAMA_RECORDING_UNITS in table OFCENG
- NUM_CALLREC_STREAMS in table OFCENG

ICAMA_REQUESTED (end)

This feature affects the following tables:

- CRSFMT
- CRSMAP
- DIRPPPOOL
- DIRPSYS

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS23.

ICT_DN_CHECK

Parameter name

International Call Transfer Directory Number Check

Functional description

An international switching unit that has universal translations and the International Call Transfer (ICT) feature requires this parameter.

ICT allows a subscriber to transfer a call to another subscriber. To transfer the call, the subscriber flashes the switch hook and dials the other party. After R4, the two other parties connect together and the system releases the first caller from the call.

This parameter specifies a 1 to 8 character name. The system uses this name to index table FTCODE each time a subscriber attempts call transfer. Administration can use this name to restrict the transfer of calls based on the target number (TN). If the system detects an instance for the TN, the system denies the transfer.

If the user attempts an R4 transfer with a TN that routes to TRMT, the ICT fails. The attempt to transfer results in NACK (negative acknowledgement) treatment to the controller.

The R code (R4) to initiate a call transfer is 4.

Rules in provisioning

If the switching unit has the ICT feature, enter the 1 to 8 character name used as an index in table FTCODE. Table FTCODE can define transfer routing restrictions.

For a switching unit that does not have the ICT feature, leave the value of this parameter at the default value.

Range information

Minimum	Maximum	Default
		NIL

Activation

Warm restart

ICT_DN_CHECK (end)

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS26**

This parameter was introduced in BCS26.

IGNORE_REGION_THRESH

Parameter name

Ignore Region Threshold

Functional description

The system uses this parameter to specify the frames received in the region, outside MV (R) to MV (R) + MW + MX - 1. The system ignores these frames before the multilink reset procedures starts.

Rules in provisioning

Specify the frames received in the region, outside MV (R) to MV (R) + MW + MX - 1. The system ignores these frames before the multilink reset procedures start.

If you do not require this function, set the value of this parameter to 0.

Range information

Minimum	Maximum	Default
0	4096	10

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

IGNORE_REGION_THRESH (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

IMAJALARM

Parameter name

Incoming Message Major Alarm

Functional description

This parameter is the major incoming message overload (ICMO) diagnostic failure flag.

When a line has too many keyhits in a specified time period, the line has a major ICMO condition. For an intelligent line, the system uses two time periods to determine an ICMO condition. On this type of line, the system considers 15 on/offers in a 1 s period to indicate a major ICMO. The system also considers 50 on/offers in a 5 s period to indicate a major ICMO condition. An intelligent line is a business or data set line.

For other types of lines, different time periods apply to determine an ICMO condition. These lines have a major ICMO condition when the system detects 135 on/offers in a 1 s period. When the system detects 100 on/offers in a 3 s period, the line has an ICMO condition.

When the time interval is greater than 1 s, the system only counts the first 40 on/offers per second.

A counter and three threshold levels (minor, major, and critical) are maintained for the failure type.

An alarm condition occurs when one or more of the failure counters exceeds one of the threshold levels.

To change the value of this parameter, use the ALMSTAT command at the LTP.

Rules in provisioning

Set the values of this parameter to represent the ICMO failure alarm thresholds. For example, the default value of 100 150 200 represents three different failures. A value of 100 represents a minor alarm threshold of 100 minor failures. A value of 150 represents a major alarm threshold of 150 failures. A value of 200 represents a critical alarm threshold of 200 failures.

IMAJALARM (end)

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	100 150 200

Activation

Use the ALMSTAT command at the LTP MAP Level to change this parameter. When you use the ALMSTAT command to change the value, the system updates all current alarms to reflect the failures with the new values.

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires one word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

IMINALARM

Parameter name

Incoming Message Minor Alarm

Functional description

This parameter sets maintenance alarm thresholds for the minor incoming message overload (ICMO) diagnostic failure flag. The system maintains a counter and three threshold levels for the failure type. The three threshold levels are minor, major, and critical. An alarm condition occurs when one or more of the failure counters exceeds one of the threshold levels.

To change the value of this parameter, use the ALMSTAT command at the LTP MAP level.

Rules in provisioning

Set the values of this parameter to represent the incoming message overload alarm threshold values.

Northern Telecom recommends that this parameter remain set at the default value of 100 150 200. A value of 100 represents a minor alarm threshold of 100 failures. A value of 150 represents a major alarm threshold of 150 failures. A value of 200 represents a critical alarm threshold of 200 failures.

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	100 150 200

Activation

Use the ALMSTAT command at the LTP MAP level to change this parameter. This action causes the system to update all current alarms to reflect the failures with the new values.

Dependencies

Does not apply

Consequences

Does not apply

IMINALARM (end)

Verification

Does not apply

Memory requirements

This parameter requires one word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS19.

INHIBIT_AUTO_CONGESTION_CNTL

Parameter name

Inhibit Auto Congestion Control

Functional description

This parameter blocks the sending of the ISDN User Part Release Message (ISUP REL message) Automatic Congestion Level (ACL) parameter to every office. A congested office uses this parameter.

Rules in provisioning

There are no rules in provisioning.

Range information

Minimum	Maximum	Default
		N

Activation

The change can operate when the system downloads the affected peripherals.

Dependencies

Does not apply

Consequences

Set this parameter to Y to block the sending of the ACL parameter and to turn the ACC feature off.

Verification

Does not apply

Memory requirements

This parameter requires a boolean memory location.

Dump and restore rules

Does not apply

Parameter history

This parameter was introduced in NA008.

INTL_ICR_REQUESTED

Parameter name

International Call Recording Requested

Functional description

An international local switching unit with the International Call Recording (ICR) feature requires this parameter. This parameter specifies if the system applies ICR to every line in the switching unit.

The ICR is the process that records information about all call of the following type. These calls are chargeable, direct dialed, long distance toll calls for selected lines that originate on the DMS-100 international switch. These calls can be within a country or international.

The ICR feature requires the metering, Automatic Message Accounting (AMA), and Device-Independent Recording Package (DIRP) subsystems.

Rules in provisioning

When this parameter value is the default of N (no), the ICR does not apply to every line in the switching unit. To assign the feature to a line, the user can designate a line option. The user must designate the line option ICR in Table LENLINES to the correct line.

When the value of this parameter is Y (yes), the ICR applies to every line in the switching unit. You do not have to assign the line option ICR in table LENLINES for each line.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Refer to parameter RECORD_UNANSWERED_CALLS in Table OFCVAR for the recording of all calls that are not answered and not charged.

INTL_ICR_REQUESTED (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS20.

INTL_RU_OVFL_ACTION

Parameter name

International Recording Unit Overflow Action

Functional description

A toll switching unit (international) with universal translations requires this parameter. The toll switching unit also has one or both of the International Centralized Automatic Message Accounting (ICAMA) or the Inter-administration Accounting (IAA) feature.

Rules in provisioning

When this parameter value is set to NCONT and there are no ICAMA available, the following event occurs. The system routes an ICAMA call to No Software Resource (NOSR) treatment in the correct treatment table.

The default value of this parameter, CONT, allows an ICAMA call to continue when there are no ICAMA recording units available. In this event, the system generates log ICAMA_RU_OVFL_LOG does not generate ICAMA records.

Range information

Minimum	Maximum	Default
		CONT

Activation

Immediate

Dependencies

To activate the above features, set parameter ICAMA_REQUESTED and/or IAA_REQUESTED in Table OFCVAR to Y (yes).

Refer to parameter NUM_ICAMA_RECORDING_UNITS in Table OFCENG for the assignment of ICAMA recording units.

Refer to parameters ICAMA_REQUESTED and IAA_REQUESTED in Table OFCVAR for other parameters and tables associated with the previous features.

INTL_RU_OVFL_ACTION (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS23.

INTL_SILENT_SWITCHMAN_TMO

Parameter name

International Silent Switchman Timeout

Functional description

A local (international) switching unit with universal translations requires this parameter.

The Silent Switchman (SSM) feature uses this parameter. This parameter specifies the period of time, in 1 s intervals, that the system disconnects the subscriber loop at the switching unit. This action occurs when a user dials the SSM access code.

The default value is 2 min. This value is an acceptable period of cutoff. This period makes the feature immediately available. The administration does not have to set the period.

Any of the universal translation code tables (PXC CODE, CTCODE, FACODE, OFCCODE, or ACCODE) can define the access code for this feature.

Rules in provisioning

When the SSM timeout requires more or less than 2 min, enter the time required in 1 s intervals.

Range information

Minimum	Maximum	Default
0	255	120

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

INTL_SILENT_SWITCHMAN_TMO (end)

Verification

Dial the SSM access code and verify that timeout occurs after the specified time for this parameter.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS25.

ISDN_LOSS_OF_SIG_DGASP_ALARM

Parameter name

Integrated System Digital Network Loss Of Signal Dying Gasp Alarm

Functional description

This parameter controls the reporting of layer 1 loss of signal with dying gasp.
This parameter uses two binary - one quaternary (2B1Q) loops for each office.

Rules in provisioning

Set this parameter to control the generation of LINE145 logs for each office.
The LINE145 logs are loss of signal with dying gasp logs.

Set the value of this parameter to ON to allow the system to generate LINE145 logs.

Set the value of this parameter to OFF so that the system does not generate LINE145 logs.

Range information

Minimum	Maximum	Default
		ON

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Disconnect the NT1 power supply to initiate a dying gasp loss of signal on a 2B1Q loop. Verify that the system generates or does not generate a LINE145 log as applicable. To do this disconnect the U-loop.

Memory requirements

This office parameter does not impact memory.

ISDN_LOSS_OF_SIG_DGASP_ALARM (end)

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS34.

ISDN_LOSS_OF_SIG_NO_DGASP_ALARM

Parameter name

Integrated Systems Digital Network Loss Of Signal No Dying Gasp Alarm

Functional description

This parameter controls layer1 loss of signal that do not have dying gasp reports. This parameter uses two binary - one quaternary (2B1Q) loops for each office.

Rules in provisioning

Set the value of this parameter to control the reporting of LINE145 loss of signal without dying gasp logs for each office.

Set the value of this parameter to ON to allow the system to generate LINE145 logs.

Set the value of this parameter to OFF so that the system does not generate LINE145 logs.

Range information

Minimum	Maximum	Default
		ON

Activation

Immediate

Dependencies

Does not apply

Consequences

This parameter affects the reports of signal for alternate mark inversion (AMI) U-loop technology.

Verification

Verify that this parameter is operational. Initiate a Loss of Signal on a 2B1Q loop. Verify that the system generates or does not generate LINE145 logs. Disconnect the U-loop to perform this verification.

ISDN_LOSS_OF_SIG_NO_DGASP_ALARM (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS34.

ISDN_LOSS_OF_SYNC_WORD_ALARM

Parameter name

Integrated Services Digital Network Loss Of Synchronization Word Alarm

Functional description

This parameter controls reports of layer 1 loss of synchronization word (LOSW) events. This parameter uses two binary - one quaternary (2B1Q) loops for each office.

Rules in provisioning

Set the value of this parameter to control reports of LOSW office-by-office.

When this parameter is set to a value of ON, the system generates LINE145 logs with the text Loss of SYNC. Word. The generation of this log indicates a layer 1 LOSW condition.

When this parameter is set to a value of OFF, the system does not generate LINE145 logs.

Range information

Minimum	Maximum	Default
		ON

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

This parameter controls reports of LOSW alarms from 2B1Q loops. This parameter can be set to a value of OFF. When this event occurs, the operating company does not see LINE145 LOSW logs for any lines in the office. The operating company does not see logs when this Layer1 event occurs on any 2B1Q loop in the office. To verify this parameter is operational, initiate an

ISDN_LOSS_OF_SYNC_WORD_ALARM (end)

LOSW event on any 2B1Q loop in the office. Verify that the system generates logs when the parameter is set to a value of ON.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS34.

ISDN_MPLU_NODE_FAILURE_ALARM

Parameter name

ISDN MPLU Node Failure Alarm

Functional description

This parameter controls reports of Layer 1 mp-eoc line unit node failures for each office. When the parameter is set to OFF, the system does not generate Line 145 logs in the office. This event occurs when an mp-eoc line unit has an internal failure (node failure).

Rules in provisioning**Range information**

Minimum	Maximum	Default
ON, OFF		ON

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Does not apply

ISDN_MPLU_NODE_FAILURE_ALARM (end)

Parameter history

The ISDN_MPLU_NODE_FAILURE_ALARM parameter was introduced in NA008.

ISDN_NT1_TEST_MODE_ALARM

Parameter name

Integrated Systems Digital Network NT1 Test Mode Alarm

Functional description

This parameter controls the reports of network termination 1 (NT1) test mode alarm logs by two binary - one quaternary (2B1Q) loops for each office.

Rules in provisioning

Set the value of this parameter as required to control the generation of LINE147 NT1 test mode alarm logs.

Set the parameter value to ON to activate the generation of LINE147 NT1 test mode alarm logs.

Set the parameter value to OFF so that the system cannot generate these logs.

Range information

Minimum	Maximum	Default
		OFF

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Enable NT1 test mode. Verify that the LINE147 logs are printed or not printed as appropriate.

Memory requirements

This parameter does not impact memory.

ISDN_NT1_TEST_MODE_ALARM (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS34.

ISDN_PERFORMANCE_MON_ALARM

Parameter name

Integrated Services Digital Network Performance Monitoring Alarm

Functional description

This parameter controls reports of performance monitoring LINE131 logs for each office. This parameter affects integrated services digital network (ISDN) line types on the ISDN line concentrating module (LCMI), and the Enhanced ISDN line concentrating module (LCME) as follows:

- two binary - one quaternary (2B1Q)
- alternate mark inversion (AMI-U)
- S/T
- optical

Rules in provisioning

To control the generation of performance monitoring LINE131 logs for each office, set the value of this parameter as required.

To activate the generation of performance monitoring LINE131 logs, set the value of this parameter to ON.

To deactivate these logs, set the value of this parameter to OFF.

Range information

Minimum	Maximum	Default
		ON

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

ISDN_PERFORMANCE_MON_ALARM (end)

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS34.

ISDN_T_SYNC_LOST_ALARM

Parameter name

Integrated Services Digital Network T-SYNC Lost Alarm.

Functional description

This parameter controls reports of the T-SYNC by two binary - one quaternary (2B1Q) and S/T loops for each office.

Rules in provisioning

To control the reports of T-SYNC LINE146 alarm logs for each office, set the value of this parameter.

To deactivate T-SYNC LINE146 alarm logs, set the parameter value to ON.

To deactivate the generation of these alarm logs, set the parameter value to OFF.

Range information

Minimum	Maximum	Default
		ON

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Disconnect the last set on the T-interface of the loop. Verify if the system generates the logs as appropriate.

Memory requirements

This parameter does not impact memory.

ISDN_T_SYNC_LOST_ALARM (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS34.

ISDNBRI_PRIVACY_CHANGE_ALLOWED

Parameter name

Integrated Services Digital Network (ISDN) Basic Rate Interface (BRI)
Privacy Change Allowed

Functional description

This office parameter controls Presentation Indicator (PI) in the ISDN SETUP message. This parameter allows or does not allow PI in the ISDN SETUP message. When this parameter is set to Y, the subscriber can change the privacy status with the PI in the SETUP message. When the parameter is set to N, the subscriber cannot change the privacy status with the PI.

Note: The customer group option and the line option PCACIDS can override the office parameter value.

Rules in provisioning

Does not apply

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

The parameter can be set to N and the PCACIDS customer group or line option does not always override the parameter. If this event occurs, the subscriber cannot change the privacy status through the PI in the ISDN SETUP message. The parameter can be set to Y and the PCACIDS customer group or line option does not always override this parameter. When this event occurs, the

ISDNBRI_PRIVACY_CHANGE_ALLOWED (end)

subscriber can to change the privacy status through the PI in the ISDN SETUP message.

Memory requirements

Parameter change does not impact memory.

Dump and restore rules

Does not apply

Parameter history

This parameter was introduced in NA008.

ITS_TEST_SESSION_TIMEOUT

Parameter name

Integrated Testing System Test Session Timeout

Functional description

This parameter specifies the timeout value for the Integrated Testing System (ITS) Translation Language 1 (TL1) capability in a DMS-100 switch.

The ITS TL1 interface is through an X.25 data link. The interface allows an Operation System (OS) to use TL1 to test DMS-100 lines through use of TL1. The TL1 commands create a test session on a DMS-100 switch to perform the test. This office parameter determines the inactivity of the test session.

When a test session remains inactive for the time-out value, the system sends an automatic report to the ITS OS. The ITS OS responds to the DMS-100 switch.

Test sessions already timed are not changed to include the new time-out. The timeout value and control is set on the timeout value. The timeout value and control is set when the system processes the last command for the test session.

This parameter applies only to the ISDN TL1 facility provided on the DMS-100.

Rules in provisioning

This office parameter determines the length (in minutes) a subscriber service does not function for test purposes. This parameter determines this time when the ITS OS loses track of the test session.

The default value of 20 is appropriate for the initial ISDN TL1 interface. The initial interface is machine-to-machine. Increase this parameter value when operating company personnel drive the TL1 commands on a one-to-one basis.

Range information

Minimum	Maximum	Default
20	480	20

Activation

Immediate

ITS_TEST_SESSION_TIMEOUT (end)

Dependencies

Does not apply

Consequences

Overprovisioning this parameter causes the risk that a subscriber service does not function for a period of time that is not acceptable.

Underprovisioning this parameter causes the ITS OS to receive too many of automatic responses.

Verification

Does not apply

Memory requirements

Each unit requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS33.

JPN1_ACM_ALWAYS_EXPECTED

Parameter name

Japanese Public Network ISDN User Part Address Complete Messages
Always Expected

Functional description

This parameter indicates if Address Complete Messages (ACM) are expected for all ISDN User Part (ISUP) calls in the Japanese Public Network (JPN).

Rules in provisioning

When this parameter is a value of Y (yes), the ACMs must be received for all calls. Timer T7 (wait for ACM) is started when the Super Metropolitan Switch (SMS) is the exchange that controls.

The value of this parameter can remain at the default of N (no). The parameter must remain at N (no) until all switches in the JPN can send ACM for all JPN ISUP calls.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

When the value of this parameter is changed, all in-service peripherals that process ISUP calls are updated with the new value. These peripherals have the value updated on a node state change of the peripheral. These peripherals have the value updated on application of a BCS upgrade to the CC.

Dependencies

Does not apply

Consequences

Does not apply

JPN1_ACM_ALWAYS_EXPECTED (end)

Verification

Set the parameter value to Y. Attempt to make a JPN ISUP call and do not send an ACM before the Answer Message (ANM). When the ANM is received, send an RSC.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS35.

LAYER2_CIRCUIT_ABN_PEGS_THLD

Parameter name

Layer 2 Circuit Abnormality Pegs Threshold

Functional description

This parameter sets the number of the high abnormality rate threshold. This number indicates the number of layer 2 protocol abnormalities allowed on any circuit-switched ISDN line. This number sets the number of abnormalities allowed of over a 24-hr period. When the number of abnormalities exceeds the threshold number, a high abnormality rate is declared and audit registers increase.

Rules in provisioning

Set the value of this parameter when audit is inactive.

Range information

The range of values for this parameter is 1-1000.

Minimum	Maximum	Default
1	1000	20

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

The system generates ISDN201 and ISDN203 log reports when an ISDN line exceeds the threshold value set.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Follow reformat procedure to change parameter name.

LAYER2_CIRCUIT_ABN_PEGS_THLD (end)

Parameter history

NA008

This parameter replaces office parameter LAYER2_SAPI0_ABN_PEGS_THLD to make differences between circuit and packet threshold counts clear.

The range of possible values is changed from 1-100 to 1-1000.

The default value is increased from 10 to 20 to include problems in the terminal endpoint identifier (TEI) assignment.

LAYER2_PACKET_ABN_PEGS_THLD

Parameter name

Layer 2 Packet Abnormality Pegs Threshold

Functional description

This parameter sets the number of the high abnormality rate threshold. The number indicates the number of layer 2 protocol abnormalities allowed on any packet switched Integrated Services Digital Network (ISDN) line over a 24-hour period. When the number of abnormalities exceeds the threshold number, the system declares a high abnormality rate and pegs audit registers.

Rules in provisioning

Set value of this parameter during period when audit is inactive.

Range information

The range of values for this parameter is 1-1000.

Minimum	Maximum	Default
1	1000	10

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Does not apply

LAYER2_PACKET_ABN_PEGS_THLD (end)

Parameter history

NA008

This parameter replaces office parameter
LAYER2_SAPI16_ABN_PEGS_THLD to separate circuit and packet
threshold counts.

LAYER2_PEGS_THRESHOLD_LEVEL

Parameter name

Layer 2 Pegs Threshold Level

Functional description

This parameter indicates the threshold value for the Layer 2 peg percentages that contain errors or were transmitted again. These peg percentages cause an integrated services digital network (ISDN) line to have faults. The ISDN200 log contains the defective line.

Rules in provisioning

Leave this parameter at the Bellcore-approved default value of 4.

Range information

Minimum	Maximum	Default
1	100	4

Activation

Immediate

Dependencies

Does not apply

Consequences

If this parameter is overprovisioned, the produced audit shows some or no problems, when some lines are defective.

Underprovisioning results in an audit that labels some functioning lines as defective.

Verification

The system generates ISDN200 logs each day when an ISDN line exceeds the threshold value.

Memory requirements

This parameter requires 1 word of memory.

LAYER2_PEGS_THRESHOLD_LEVEL (end)

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.
Copy the current value from software release BCS32 to software release BCS32 or higher.

Parameter history

BCS34

This parameter was moved from Table OFCENG in BCS34.

BCS32

This parameter was introduced in BCS32.

LAYER2_SERVICE_DSRPT_THLD

Parameter name

Layer2 Service Disruption Threshold

Functional description

A DMS switch that supports the integrated services digital network (ISDN) XMS-based peripheral module (XPM) uses this parameter.

This parameter specifies the threshold value for line equipment number (LEN) service disruptions. Section 5.4.5.2.B. of *Bellcore technical reference* TR-TSY-000475 describes LEN service disruptions. When the error count exceeds the threshold value, the LEN is in a state of service disruption. The monitored errors are the number of Layer 2 resets and the number of overflows of the received frame buffer.

The XPM identifies as service disruption in a LEN an error count that exceeds the value of this parameter. The user can query the state of the LEN when the MAP terminal in the LTPDATA level posts the LEN.

Rules in provisioning

Set this parameter to a value that represents the number of acceptable LEN errors before a LEN experiences a service disruption. Bellcore technical reference TR-TSY-000475 does not recommend a value for the parameter. The default value of 4 is not a calculated choice.

Range information

Minimum	Maximum	Default
1	100	4

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

LAYER2_SERVICE_DSRPT_THLD (end)

Verification

One time a day, the system generates an ISDN203 log that indicates the number of service disruptions that the LEN experiences.

Memory requirements

This parameter value requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS34.

LAYER3_CIRCUIT_ABN_PEGS_THLD

Parameter name

Layer 3 Circuit Abnormality Pegs Threshold

Functional description

This parameter sets the high abnormality rate threshold number for acceptable layer 3 protocol abnormalities. The threshold applies to layer 3 protocol abnormalities on a circuit switched Integrated Digital Services Network (ISDN) line over a 24-hour period. When the layer 3 protocol abnormalities exceed the threshold number, the system declares a high abnormality rate and increases audit registers.

Rules in provisioning

Set the value of this parameter when an audit is not active.

Range information

The range of values for this parameter is 1-1000.

Minimum	Maximum	Default
1	1000	10

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Does not apply

LAYER3_CIRCUIT_ABN_PEGS_THLD (end)

Parameter history

NA008

This parameter was introduced in NA008.

LAYER3_PACKET_ABN_PEGS_THLD

Parameter name

Layer 3 Packet Abnormality Pegs Threshold

Functional description

This parameter sets the high abnormality rate threshold number for acceptable layer 3 protocol abnormalities. The threshold applies to layer 3 protocol abnormalities on a packet switched Integrated Services Digital Network (ISDN) line over a 24-hour period. When the number of abnormalities exceeds the threshold number, the system declares a high abnormality rate and audit pegs the registers.

Rules in provisioning

Set the value of this parameter when an audit is not active.

Range information

The range of values for this parameter is 1-1000.

Minimum	Maximum	Default
1	1000	10

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Does not apply

LAYER3_PACKET_ABN_PEGS_THLD (end)

Parameter history

NA008

This parameter was introduced in NA008.

LAYER3_PACKET_SVC_THLD

Parameter name

Layer 3 Packet Service Disruption Threshold

Functional description

This parameter sets the threshold value for layer 3 service disruptions of X.25 packet data on an ISDN line over a 24-h period. Log report ISDN309 generates if the count of layer 3 service disruptions exceeds the value set for this parameter.

Provisioning rules

Not applicable

Range information

Minimum	Maximum	Default
1	1000	4

Activation

Immediate

Dependencies

Not applicable

Consequences

Not applicable

Verification

Log report ISDN309 generates every 24 h if the count of layer 3 service disruptions exceeds the value set for this parameter.

Memory requirements

Not applicable

Dump and restore rules

Not applicable

LAYER3_PACKET_SVC_THLD (end)

Parameter history

NA010

This parameter was introduced by AF7446, L2/L3 PKT Abnormality Counts and Logs - CM.

LCARDALARM

Parameter name

L Card Alarm

Functional description

This parameter specifies minor, major, and critical alarm thresholds for circuit test or loop signaling failures at the line card L. When the number of L failures reaches one of the alarm thresholds, the system raises the correct alarm.

Use the ALMSTAT command at the line test position (LTP) of the MAP to change the value of this parameter.

Rules in provisioning

Use current office failure problems to determine the LCARDALARM alarm thresholds. Notification of these failures also determines the LCARDALARM thresholds.

The default values are 100 for the minor alarm threshold, 150 for the major alarm threshold, and 200 for the critical alarm threshold. The default values are the standard line failure threshold values.

Range information

Minimum	Maximum	Default
000	32767 32767 32767	100 150 200

Activation

Use the ALMSTAT command at the LTP MAP level to change this parameter. The use of the ALMSTAT command to change the parameter updates all current alarms with the new values. The new values allow the alarms to reflect the failures.

Dependencies

Does not apply

Consequences

When the parameter values are overprovisioned, alarms for loop signaling or circuit test failures at the line card do not activate quickly enough. When this event occurs, a trouble report can be received.

LCARDALARM (end)

When the parameter value is underprovisioned, the system can activate too many alarms. Loop signaling or circuit test failures at the line card cause the system to activate the alarms.

Verification

Run the LTPMAN CktTst command at the line card on a line for which data entry occurred without the installation of a card. When the number of failures reaches than one of the thresholds, the correct alarm activates.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS26.

LCDREX_CONTROL

Parameter name

Line Concentrating Device Routine Exercise Test Control

Functional description

This parameter indicates the line concentrating device routine exercise (LCDREX) test start and stop times for modules. Examples of modules that use the LCDREX are line modules (LM), digital line modules (DLM), and remote carrier urban (RCU) modules.

The takeover/takeback portion of the REX test runs only for modules that have field LCDREX_ENABLE of office parameter LCDREX_CONTROL set to Y. The modules must have field REX in table LMINV set to REX. The use of the takeover/takeback portions appears in the table that follows.

When you set field LCDREX_ENABLE of office parameter LCDREX_CONTROL to N, the system generates a log at the LCDREX start time. This log indicates that REX test is disabled, and the system runs only the in-service test. When you set this field to Y, the system runs takeover/takeback portion of the REX test. You can run this test with the in-service tests each day. The system runs the test between the LCDREX start and stop times.

Activation of takeover/takeback portion of REX test

Field LCDREX_ENABLE value	Table LMINV field REX value	Takeover/takeback portion of REX test enabled?
N	NOREX	No
N	REX	No
Y	NOREX	No
Y	REX	Yes

For remote line concentrating modules (RLCM) that have the emergency stand-alone (ESA) service, the following condition occurs. The system runs an ESA REX test as part of the REX test.

The test cycle does not always function at the exact start and stop times. The test starts and stops within minutes of start and stop time when the last test started before the stop completes.

LCDREX_CONTROL (continued)

The REX test tests the modules one at a time. The test stops when the number of modules that fail exceeds the number that the office parameter specifies. The test also stops when the time reaches the LCDREX stop time.

The number of modules tested each day depends on the following information:

- the start and stop times
- the state of the modules
- the amount of specified activity in the switching unit during REX testing. This activity is the activity that affects the availability of the warm action flag that the REX test requires.

The full test for each unit requires approximately 10 min.

The daily cycle starts where the previous cycle stopped. The REX test only tests modules with both bays in an in service (InSv) or in-service trouble (ISTb) state. In these modules, the REX test tests bay 0 of all modules first, followed by bay 1 of all modules.

Rules in provisioning

Use the information in the following table to set the values of this parameter.

Provisioning

Field name	Entry	Explanation
LCDREX_ENABLE	Y or N	Enter Y to activate the takeover/takeback portion of the REX test. You also can enter N.
LCDREX_START_TIME	numeric	Enter the start time in hours (0 to 23) and minutes (0 to 59) at which the REX test must start. The default is 1 0 (1 a.m.).
LCDREX_STOP_TIME	numeric	Enter the stop time in hours (0 to 23) and minutes (0 to 59) at which to stop the REX test. The default is 3 0 (3 a.m.).
LCDREX_FAIL_LIMIT	1 to 253	Enter the maximum number of REX test failures allowed during each daily cycle before REX testing stops. If this field is set to 253, there is no limit. The default is 2.

LCDREX_CONTROL (continued)**Range information**

Minimum	Maximum	Default
		N 1 0 3 0 2

Activation

Immediate

Change field value REX in table LMINV to N for a module to deactivate the takeover/takeback portion of the REX test.

Dependencies

The takeover/takeback portion of the REX test only runs for modules that have both field LCDREX_ENABLE of office parameter LCDREX_CONTROL set to Y and field REX in table LMINV set to REX.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**NA004**

The following changes were made:

- Changed long-form parameter name from Line Concentrating Device Routine Exercise Control to Line Concentrating Device Routine Exercise Test Control.
- In agreement with feature AF5898, LCM REX Controller Enhancement, removed references to office parameter LCDREX_CONTROL in use for LCM REX testing. The system REX (SREX) controller now coordinates

LCDREX_CONTROL (end)

LCM REX testing with this feature. This system controller uses office parameter NODEREXCONTROL in table OFCVAR instead of office parameter LCDREX_CONTROL.

- Added table "Activation of takeover/takeback portion of REX test" to "Functional description" section.
- In "Functional description" section, changed reference to "office parameter LCDREX_ENABLE" to read "field LCDREX_ENABLE of office parameter LCDREX_CONTROL."
- Changed references to values Y and N for field REX in table LMINV to refer to the correct values, REX and NOREX. These changes occur through document.

BCS16

This parameter was introduced in BCS16.

LEAS_SS7_ACTIVE

Parameter name

LATA Equal Access Signaling System 7 Active

Functional description

This parameter is for LEAS Access Tandem switches that require Signaling System 7 (SS7) interworking. Use this parameter to control feature functionality and additional time-consuming translations for operating companies. These operating companies do not require LEAS interworking on SS7 intertoll (IT) group type trunks.

Rules in provisioning

Set the value of this parameter to Y (yes) to allow LEAS translations. At any other time, enter N (no).

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Set the value of this parameter to Y and calls can generate a CALL CODE 110. These calls originate over integrated services digital network (ISDN) user part (ISUP) IT trunks entered in table TRKLATA. The subtending end office (EO) can subscribe users to a carrier identification code (CIC) equal to the value of parameter LEAS_SS7_CIC. In this condition, the system uses LEAS translations. Use TRAVER to verify this parameter.

Memory requirements

This parameter requires 1 word of memory.

LEAS_SS7_ACTIVE (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

LINE_CARD_MONITOR

Parameter name

Line Card Monitor

Functional description

This parameter enables and disables the Line Card Monitor feature for the office. The Line Card Monitor feature uses current DMS line card diagnostics, permanent lockout (PLO) and incoming message overload (ICMO). The Line Card Monitor feature identifies and reacts to potential problems on subscriber lines.

Rules in provisioning

Set the value of this parameter to Y (yes) to activate this feature.

Leave the value of this parameter at the default of N (no) if this feature is not required.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter value requires 1 word of memory.

LINE_CARD_MONITOR (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS33.

LINE_WITH_CWT_CAN_FLASH

Parameter name

Line With Call Waiting Can Flash

Functional description

This parameter associates with the 200 ms disconnect timing feature. This timing feature provides residential enhanced services (RES) lines with disconnect signal timing. This time is equivalent to the timing of plain ordinary telephone service (POTS) lines.

This parameter also enhances disconnect signal timing for POTS and RES lines in conditions that involve the call waiting (CWT) option.

Before BCS30, RES lines had disconnect timing with flash privileges in all conditions. Options or features on the line did affect disconnect timing with flash privileges. This parameter changes the condition so that RES lines only receive flash timing when these lines require flash timing. RES lines require flash timing when flash activated features or options are present on the line. When an RES line does not require flash privileges, the line uses disconnect timing without flash. This use allows the recognition of any on hook duration greater than 200 ms as a disconnect, not a flash.

In BCS30, this functionality extends to office-wide CCW already present in the POTS and RES environments.

Rules in provisioning

Some lines can activate the Cancel Call Waiting (CCW) feature and do not have other flash features or options. These lines only can receive flash timing when the parameter is set to a value of Y (yes). This condition allows these lines to activate the CCW feature during the talking stage of a call. The lines flash and dial the CCW access code. If the parameter is set to Y (yes), the lines can activate CCW before the lines originate calls.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

LINE_WITH_CWT_CAN_FLASH (end)

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the existing value of this parameter when you perform a dump and restore.

Parameter history

BCS29

This parameter was introduced in BCS29

CSP02

Restart activation requirement was removed in CSP02.

LOCAL_COIN_INIT_TIME

Parameter name

Local Coin Initial Time

Functional description

This parameter provides the initial period, in 1 s intervals, for local coin overtime charging.

Rules in provisioning

Specify the the initial period, in 1 s intervals, for local coin overtime charging.

Range information

Minimum	Maximum	Default
60 (1 min)	3600 (1 h)	180 (3 min)

Activation

Immediate

Dependencies

This parameter appears in a switching unit with the value of parameter LOCAL_COIN_OVERTIME_FEATURE set to Y (yes) in table OFCOPT.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

LOCAL_COIN_OVER_TIME

Parameter name

Local Coin Overtime Period

Functional description

This parameter specifies the overtime period, in 1-s intervals, for local coin overtime charging.

Rules in provisioning

Specify the overtime period, in 1-s intervals, for local coin overtime charging.

Range information

Minimum	Maximum	Default
60 (1 min)	3600 (1 h)	180 (3 min)

Activation

Immediate

Dependencies

This parameter appears in a switching unit with the value of parameter LOCAL_COIN_OVERTIME_FEATURE set to Y (yes) in table OFCOPT.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter value requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

LOG_CENTRAL_BUFFER_SIZE

Parameter name

Log Central Buffer Size

Functional description

All switching units require this parameter. The parameter specifies the size of the log system central buffer where all reports are stored. The system central buffer stores the logs until the system routes the logs to the correct device buffer(s). Log class determines the correct device buffer(s).

Rules in provisioning

The default value is normally adequate for the log system. When a large number of reports are lost, an increase in the default value can occur to compensate. A decrease in the default value can occur if there not enough store and a small number of reports are available.

The recommended value for this parameter is 2500. This value applies for a switching unit (international) with universal translations and the Selective Charge Record (SCR) or Attendant Pay Station (APS) feature.

Range information

Minimum	Maximum	Default
1000	32000	2000

Activation

The activation of this parameter occurs after a cold restart.

Dependencies

Does not apply

Consequences

Underprovisioning of this parameter results in lost reports. Overprovisioning results in memory that the system does not use.

Verification

Does not apply

LOG_CENTRAL_BUFFER_SIZE (end)

Memory requirements

This parameter value requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

LOG_DEVICE_BUFFER_SIZE

Parameter name

Log Device Buffer Size

Functional description

All switching units require this parameter. This parameter specifies the size of the buffer for devices.

Each device has an allocated buffer. This buffer stores reports routed to the device.

Reports in a queue against the device stay in this buffer until the reports print.

Rules in Provisioning

You will find the default value as the recommended value. Increase the parameter value if the loss of a large number of reports occurs. Decrease the value if a crucial shortage of store is present and the number of reports is small.

The recommended value for this parameter is 1500. The value refers to a switching unit (international) with universal translations. The value also refers to the Selective Charge Record (SCR) or Attendant Pay Station (APS) feature.

Note: Perform one of the following for any device that uses the new buffer size value:

(1) stopdev, deldevice, and startdev

(2) stopdev, resetroute, and startdev

If table LOGDEV contains the definition for the device, delete and re-enter the device into table LOGDEV. Do not perform the deldevice or resetroute only.

If you perform a resetroute, loss of all temporary routing occurs. Temporary routing is not entered in table LOGDEV.

Range information

Minimum	Maximum	Default
500	32000	2000 (CM) 1000 (all other nodes)

LOG_DEVICE_BUFFER_SIZE (end)

Activation

Activation occurs on the next STARTDEV command.

Dependencies

Does not apply

Consequences

An underprovisioned parameter results in lost reports. An overprovisioned parameter results in memory that is not used.

Verification

Does not apply

Memory requirements

Each unit requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

LOG_OFFICE_ID

Parameter name

Log Office Identifier

Functional description

This parameter appears in all switching units and specifies the name for office identification in the log output header.

Rules in Provisioning

If the log output header requires an office identifier, enter the 1-to-12 character name for office identification.

If the log output header does not require an office identifier, leave the value of this parameter at the default of \$.

Range information

Minimum	Maximum	Default
		\$ (a nil vector)

Activation

Immediate

When the parameter changes, the following logs have the new office identifier.

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

LOG_OFFICE_ID (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

LOOP_AROUND_TIMEOUT_IN_MIN

Parameter name

Loop-around Timeout In Minutes

Functional description

The loop-around test line for CCITT ISUP feature for the DMS-300 uses this parameter.

Parameter LOOP_AROUND_TIMEOUT_IN_MIN is a safeguard. This parameter prevents the digital loop-around test call connection from being held up indefinitely. This parameter prevents this problem if the originating office fails to clear down the call.

Rules in Provisioning

Set this parameter at a value between 20 min and 15,300 min (255 h). This value allows the terminating office to take down the call under the following conditions:

- the loop around timeout is complete
- the originating office has not transmitted a call disconnect message

Range information

Minimum	Maximum	Default
20 (min)	15300 (min)	20 (min)

Activation

Immediate

Dependencies

Does not apply

Consequences

If the parameter is underprovisioned, the originating office can clear down the test call connection. The originating office can clear down the test call connection before the originating office completes the test call.

LOOP_AROUND_TIMEOUT_IN_MIN (end)

The trunk under test at the terminating office cannot carry call traffic for an amount of time that is not necessary. This trunk cannot carry call traffic if the following conditions occur:

- the parameter is overprovisioned
- the originating office fails to clear down the test call connection at the far-end office

Verification

Does not apply

Memory requirements

This parameter value requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS32.

LSETALARM

Parameter name

L Set Alarm

Functional description

This parameter specifies minor, major and critical alarm thresholds. This parameter specifies these thresholds for circuit test or loop signaling failures at the terminal l (small l).

The number of l failures can be equal to or greater than one of the alarm thresholds. If this condition occurs, the system raises the appropriate alarm.

Use the ALMSTAT command at the line test position (LTP) level of the MAP terminal to change the parameter value. This command is the recommended method to change the value of this parameter.

Rules in provisioning

Set the LSETALARM alarm thresholds based on the current office failure problems and if you want notification for these failures.

The default values are 100 for the minor alarm threshold, 150 for the major alarm threshold, and 200 for the critical alarm threshold.

The default values are the standard line failure threshold values.

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	100 150 200

Activation

Use the ALMSTAT command at the LTP MAP level to change this parameter. When you use the ALMSTAT command, the system updates all current alarms to reflect the failures with the new values.

Dependencies

Does not apply

LSETALARM (end)

Consequences

An overprovisioned parameter causes the system to raise late alarms for loop signaling or circuit test failures at the terminal. A trouble report can be received because of the late alarms.

An underprovisioned parameter causes the system to raise too many alarms because of loop signaling or circuit test failures at the terminal.

Verification

Run the LTPMAN CKTTST command at the terminal on lines entered in a table. These lines do not have a set plugged in. When the number of failures equals one of the thresholds, the system will raise the appropriate alarm.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS26.

MAX_IAM_HOPS

Parameter name

Maximum Initial Address Message (IAM) Hops

Functional description

The MAX_IAM_HOPS parameter indicates the maximum number of transfers (hops) that an IAM related to one call can make between switches. The value range for this parameter is 10 to 20. When the construction of the IAM occurs, the parameter value is placed in the HC field. The parameter value is part of call processing of the next switch in the call path. If the parameter value expires, the call is released and a release (REL) message goes to the originating switch. This parameter prevents IAMs from entering continuous transmission loops.

Rules in provisioning

There are no rules in provisioning.

Range information

Minimum	Maximum	Default
10	20	20

Activation

Immediate following change. Restart not required.

Dependencies

Does not apply

Consequences

If you select a low value (for example, 10), some IAMs will not terminate. If IAMs cannot terminate with the maximum value, this can indicate translations problems in the operating company network.

Verification

Does not apply

Memory requirements

This parameter requires 1 byte of memory.

MAX_IAM_HOPS (end)

Dump and restore rules

Does not apply

Parameter history

NA005

This parameter was introduced in NA005.

MAX_RMAP_SESSIONS

Parameter name

Maximum Number Of Remote Map Sessions

Functional description

This parameter specifies the maximum number of remote MAP (RMAP) sessions on an MSL-100. The number of remote MAP sessions can vary from one to three.

Rules in provisioning

To use a minimum of two RMAP session, change the value of this parameter.

Range information

Minimum	Maximum	Default
1	3	1

Activation

Warm restart

Dependencies

This parameter also controls the number of entries for RMAP applications in table SLNWK. For each RMAP session, table SLNWK needs to be entered separately.

Consequences

Does not apply

Verification

To verify that this parameter is set correctly and operating, add data to table SLNWK for RMAP applications.

Each RMAP session requires one entry for RMAP application in table SLNWK. You cannot add more tables for RMAP application than the value of this parameter.

Memory requirements

This parameter does not impact memory.

MAX_RMAP_SESSIONS (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS30.

MCARDALARM

Parameter name

Missing Line Card Alarm

Functional description

This parameter is the missing line card diagnostic failure flag. The system maintains a counter and three threshold levels for the failure type. The three threshold types are minor, major, and critical.

An alarm condition occurs when a minimum of one of the failure counters exceeds one of the threshold levels.

To change the value of this parameter, use the ALMSTAT command at the LTP level of the MAP.

Rules in provisioning

Specify the line card diagnostic alarm thresholds.

For example, the default value of 100 150 200 represents the following thresholds:

- a minor alarm threshold of 100 failures
- a major alarm threshold of 150 failures
- a critical alarm threshold of 200 failures

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	100 150 200

Activation

Only use the ALMSTAT command at the LTP Map Level to change this parameter. When you use the ALMSTAT command, the system updates all current alarms to reflect the failures with the new values.

Dependencies

Does not apply

MCARDALARM (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Parameter history

This parameter was introduced in BCS19.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

MCCS_SEQ_CALL_LIM

Parameter name

Mechanized Calling Card Service Sequence Call Limit

Functional description

This parameter allows the operating company to limit the number of sequence calls permitted. The sequence calls are from a single Billing Validation Center (BVC) query. This parameter blocks calls. The system routes these blocked calls to an announcement.

This parameter limits the number of mechanized calling-card service (MCCS) sequence calls for each switching unit. If a subscriber attempts to exceed the permitted number of MCCS sequence calls for an office, the following occurs:

- announcement number 9 plays
- the system takes down the call

The subscriber must re-enter the calling card number according to the same rules in which the subscriber first entered the calling card number.

Rules in provisioning

Specify the maximum number of sequence calls that a subscriber can make from a single BVC query.

Range information

Minimum	Maximum	Default
0	127	127

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

MCCS_SEQ_CALL_LIM (end)

Verification

Does not apply

Memory requirements

This parameter value requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS19.

MCCS_SEQ_QUERY

Parameter name

Mechanized Calling Card Service Sequence Query

Functional description

This parameter specifies a query sent on every sequence call for Calling Card Validation (CCV) on the Common Channel Signaling 6 (CCS6) network.

This parameter does not affect expanded format calling cards.

Rules in provisioning

Leave the value of this parameter at the default of N (no). Perform this action to make sure that queries are not performed on CCV sequence calls. This action enables a customer to bill multiple calls to a single credit card number without requiring repeated database validation.

To forward queries to a Billing Validation Center (BVC) for each customer-dialed CCV call, set this parameter to Y (yes) .

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

For customer-dialed calls over a CCS7 network, field SEQQRY in table CCVPARMS provides the function of this parameter.

Consequences

When you set this parameter to Y, a large increase in real-time processing for CCV sequence calls occurs. A parameter set to Y also increases the trunk holding times for these calls. You must provision enough datalinks to the database to handle the increased number of queries. Evaluate the engineering/capacity of the office again.

MCCS_SEQ_QUERY (end)

Verification

Does not apply

Memory requirements

This parameter value requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS31.

MCT_TONE

Parameter name

Malicious Call Traced Tone

Functional description

A local switching unit (international) with universal translations and the Malicious Call Traced (MCT) feature requires this parameter. This parameter determines which tone the system gives to the originating party when the terminating party activates the MCT feature.

This parameter can have the following values:

- SILENT - Cut off speech from the terminator to the originator.
- DIAL - Replace speech with dial tone for both parties.
- AUDRING - Replace speech with audible ringing for both parties.
- SPEECH - Retain speech between the parties (no tone).

The above tones are maintained on the call for the terminator until the terminator is on hook. The tones remain on the line of the originator until operating company personnel force release the line.

Rules in provisioning

Specify the tone that the system gives to the originating party when the terminating party activates the MCT feature.

Leave this parameter at the default value if the system does not activate this feature.

Range information

Minimum	Maximum	Default
		DIAL

Activation

Immediate

Dependencies

Does not apply

MCT_TONE (end)

Consequences

Does not apply

Verification

To verify that this parameter works correctly, set the parameter to the desired value and set up a 2-port call. Use the MCT feature on the originator. Verify that the traced party receives the tone that this parameter specifies.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS24.

MCTIMER

Parameter name

Malicious Call Timer

Functional description

The features MCH and CLF use this parameter when the system traces malicious calls. These features use this parameter to give a delay for the called subscriber to activate MCH or CLF. This delay allows the subscriber to activate MCH or CLF after the malicious caller goes on-hook.

Rules in provisioning

This parameter consists of two parts, MCTO and MCTT. Each part is a value from 30 to 120, in multiples of 10, and represents a time interval in seconds.

At the terminating exchange, the timer (MCTIMER MCTO) starts if a calling subscriber goes on-hook before a called subscriber (with CLF or MCH). When the called subscriber goes on-hook the timer terminates. If the timer expires the system holds the trunks involved in the call.

At the originating exchange, the timer (MCTIMER MCTT) starts if a calling subscriber goes on-hook before a called subscriber (with CLF or MCH). When the called subscriber goes on-hook, or the called subscriber activates CLF or MCH, the timer terminates. If the timer expires the call, the system takes the call down.

Range information

Minimum	Maximum	Default
30	120	90 90

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

MCTIMER (end)

Verification

Does not apply

Memory requirements

This parameter requires 2 words of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

The minimum value of MCTIMER is changed from 60 to 30 in MMP13.

This parameter was introduced in BCS31.

METER_PULSE_MISMATCH_THRESHOLD

Parameter name

Meter Pulse Mismatch Threshold

Functional description

This parameter specifies the allowed percentage difference between the pulse counts. The originating and terminating agents report the pulse counts when these agents perform tandeming. If the percentage difference between pulse counts is greater than the difference this parameter specifies, the system generates an MTR145 log.

Rules in provisioning

The recommended value for initial data entry is the default value 5. If the system generates a large number of MTR145 logs at this setting, increase the value. Increase the value in increments of two or three percent until the system does not generate these logs often. A value of more than 10 for METER_PULSE_MISMATCH_THRESHOLD can indicate a problem in the network or the tandeming software.

Range information

Minimum	Maximum	Default
0 (%)	100 (%)	5 (%)

Activation

Immediate

Dependencies

Does not apply

Consequences

The value of this parameter controls the tolerance toward mismatches between the pulse count that the originating and terminating agents report. A low value results in a low tolerance toward mismatches. A higher value results in a higher tolerance.

Verification

Does not apply

METER_PULSE_MISMATCH_THRESHOLD (end)

Memory requirements

This parameter requires 2 words of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS32.

METER_PULSE_MONETARY_RATE

Parameter name

Meter Pulse Monetary Rate

Functional description

The METER_PULSE_MONETARY_RATE parameter holds the multiplying factor for the charge for Attendant Pay Station (APS) and Hotel (HOT) direct dialed local calls. Switching units in the People's Republic of China with the Service Hall feature require this parameter.

A service hall is a site where the public can place calls under the supervision of an attendant. The attendant assigns telephones to customers and collects call charges. This service is for areas with limited access to private phone lines.

This parameter indicates the monetary value of each meter pulse. The administration should set this value based on the lowest unit of currency.

The value of this parameter multiplied by the number of pulses for each call gives the total charge for each call. The APS option billing record includes the total charge for each call.

Provisioning rules

The value of this parameter is based on the lowest unit of currency.

Range information

The range information is as follows:

Minimum	Maximum	Default
0	32767	1

Activation

Immediate

Requirements

See parameter APS_REPORT_ALL_CALLS in table OFCVAR for a definition of billing records.

Results

This parameter determines the charge for APS and HOT direct dialed local calls.

METER_PULSE_MONETARY_RATE (end)

Testing

To determine whether the parameter is set correctly, check the value of the parameter in table OFCVAR.

To determine whether the parameter is working correctly, change the value of the parameter and check that the charge changes accordingly.

Memory requirements

This parameter requires one word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS26.

MSETALARM

Parameter name

Missing Set Alarm

Functional description

Local, SL100, or Austrian local switching units require this parameter. This parameter specifies alarm thresholds. These thresholds are for the number of lines missing sets before the system raises a minor, major, or critical alarm.

An alarm condition occurs when one or more of the failure counters exceeds one of the threshold levels.

To change the value of this parameter use the ALMSTAT command at the LTP level of the MAP.

Rules in provisioning

Specify the alarm threshold. For example, the default value of 10 20 30 represents the following thresholds:

- a minor alarm threshold of 10 failures
- a major alarm threshold of 20 failures
- a critical alarm threshold of 30 failures

If this feature is not required, set the parameter values to 32001 32002 32002.

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	10 20 30

Activation

Use only the ALMSTAT command at the LTP MAP Level to change this parameter. When you use the ALMSTAT command to change this value, the system updates all current alarms. This update reflects the failures with the new values.

Dependencies

Does not apply

MSETALARM (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

MSGPSOC_OM_CONTROL

Parameter name

MSGPSOC_OM_CONTROL

Functional description

MSGPSOC_OM_CONTROL enables or disables the MSGPSOC operational measurement.

To disable the OM, change the value to N(o). A message lets the crafts person know that the OM is disabled, and the system sends new static data messages to the XPMs to indicate that the OM is turned off. To re-enable the OM, change the value back to Y(es). A message lets the crafts person know that the OM is enabled, and the system sends new static data messages to the XPMs to indicate that the OM is turned on.

Provisioning rules

None

Range information

The range is Y(es) or N(o).The default is Y (OM enables).

Activation

Immediate

Requirements

None

Results

The system sends static messages to the XPMs reporting the enabled or disabled state of the OM.

Testing

With this parameter set to Y, generate sufficient messages from the LCM to the host XPM to exceed the 60% threshold. Use the OMSHOW command to view the data, or watch for a PM420 log that reports the overload.

With this parameter set to N, generate sufficient messages from the LCM to the host XPM to exceed the 60% threshold.

Memory requirements

None

MSGPSOC_OM_CONTROL (end)

Dump and restore rules

None

Parameter history

XPM14 introduced the office parameter, MSGPSOC_OM_CONTROL.

MTA_RLM_TIME

Parameter name

Metallic Test Access Remote Line Module Time

Functional description

Local or combined local and toll switching units with remote operation require this parameter. This parameter specifies the time, in 10-ms intervals, that the remote line module requires to perform a metallic test access (MTA) hardware scan.

Rules in provisioning

Specify the time, in 10-ms intervals, that the remote line module requires to perform an MTA hardware scan.

Range information

Minimum	Maximum	Default
0	255	20 (200 ms)

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

MTA_RMM_TIME

Parameter name

Metallic Access Test Remote Maintenance Module Time

Functional description

Switching units with remote operation where the remote has NT3X09 Metallic Access Test (MTA) driver cards mounted on a remote maintenance module (RMM) require this parameter.

This parameter specifies the time, in 10-ms intervals, that the RMM requires to perform an MTA hardware scan.

Rules in provisioning

Specify the time, in 10-ms intervals, that the RMM requires to perform an MTA hardware scan.

Range information

Minimum	Maximum	Default
0	255	10 (100 ms)

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

MTA_RMM_TIME (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS15.

MTULDINFO

Parameter name

Metallic Test Unit Load Information

Functional description

This parameter stores the default metallic test unit (MTU) firmware filename.

The MTU is like the Line Test Unit (LTU) from the software point of view. One major difference is that the central control (CC) can download the firmware (8086 micro program) that controls the MTU. Load the physical MTU only because one physical MTU hardware performs the function of two logical MTUs.

Rules in provisioning

Specify the file name of the default MTU firmware.

Range information

Minimum	Maximum	Default
		NILFNAME

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS21**

This parameter was introduced in BC521.

NDIAGALARM

Parameter name

Need Diagnostics Alarm

Functional description

This parameter is the need diagnostic (NDIAG) failure flag. The system maintains a counter and three threshold levels (minor, major, and critical) for this failure type. An alarm condition occurs when a minimum of one of the failure counters exceeds one of the threshold levels.

Use the ALMSTAT command at the LTP MAP level to change the value of this parameter.

Rules in provisioning

Specify the alarm thresholds for NDIAG failures. For example, the default value of 10 20 30 represents the following thresholds:

- a minor alarm threshold of 10 failures
- a major alarm threshold of 20 failures
- a critical alarm threshold of 30 failures

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	10 20 30

Activation

Use only the ALMSTAT command at the LTP MAP level to change this parameter value. When you use the ALMSTAT command to change the value, the system updates all current alarms to reflect the failures with the new values.

Dependencies

Does not apply

Consequences

Does not apply

NDIAGALARM (end)

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

NEMHEARTBEAT

Parameter name

NEMAS Heartbeat

Functional description

This parameter defines the length of time between each HEARTBEAT log for NEMAS Spontaneous Reporting (SPR) sessions.

A HEARTBEAT is a special log that the system generates to indicate to NEMAS that the DMS switch continues to function.

Rules in provisioning

Specify the length of time, in 15-s intervals, between each HEARTBEAT log for NEMAS SPR sessions. For example, a value of four indicates a period of 60 s between HEARTBEAT logs.

If the value of this parameter is set to 0 (zero), the system does not generate HEARTBEAT logs.

Range information

Minimum	Maximum	Default
0	60	4

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

NEMHEARTBEAT (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

NETFAB_DAILY_DURATION

Parameter name

Network Fabric Test Daily Duration

Functional description

This parameter specifies the daily duration of the network fabric (NetFab) test.

The NetFab test checks the accuracy of the network call paths. The complete test takes more than 10 h to run. The test runs four hours every night. This test is completed over a period of three days.

Before BCS34, the daily duration of this test was hardcoded at a value of 4 (hours). This parameter provides the flexibility to set the test duration between 1 h and 4 h. This flexibility allows time for other maintenance software to run during low traffic periods.

Rules in provisioning

The recommended value for this parameter is 4.

Range information

Minimum	Maximum	Default
1	4	4

Activation

Immediate

If a scheduled test is running when the daily duration changes, the current test runs to completion according to the original value.

Dependencies

This office parameter works in conjunction with office parameters NETFAB_SCHEDULE_ENABLED and NETFAB_SCHEDULE_TIME in table OFCVAR. The parameter NETFAB_SCHEDULE_ENABLED allows NetFab test to run. The parameter NETFAB_SCHEDULE_TIME is the daily test start time.

NETFAB_DAILY_DURATION (end)

Consequences

If you set this parameter to a value of less than 4, the number of days required to complete the test increases.

Verification

Use the STATUS command to verify a change of value in this parameter after you enter ICTS followed by NETFAB. The test duration displays the start and end times.

Memory requirements

This parameter value requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS34**

This parameter was introduced in BCS34.

NETFAB_SCHEDULE_ENABLED

Parameter name

Network Fabric Schedule Enabled

Functional description

The scheduled testing of the DMS network fabric test requires this parameter. The enhanced network (ENET) and junctored network (JNET) share this parameter.

The network fabric test uses the integrity-check traffic simulator (ICTS) package to test the network. The ICTS establishes a series of connections through the network and performs integrity/parity checking. These connections are essentially pseudo calls. If the system detects an integrity fault on one of these connections, the system establishes supervision on the same network plane. Supervision that occurs on the same plane focuses the test on the problem. A normal call switches to the other plane. The network fabric test sets up groups of these connections in a controlled method to cover all the call paths in the network.

Rules in provisioning

The recommended value is the default of Y (yes).

To disable the network fabric testing, change the value of this parameter to N (no).

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

If a scheduled test runs when the value of this parameter changes from Y to N, the current test completes.

NETFAB_SCHEDULE_ENABLED (end)

Dependencies

To start the network fabric test at the time that NETFAB_SCHEDULED_TIME in table OFCVAR specifies, leave the default value Y.

Consequences

Does not apply

Verification

To verify the value of this parameter, use the commands ICTS, NETFAB and STATUS at the NET level of the MAP. Use these commands to check that scheduled testing is enabled.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS25**

This parameter was introduced in BCS25.

NETFAB_SCHEDULE_TIME

Parameter name

Network Fabric Test Schedule Time

Functional description

This parameter specifies the hour that the scheduled network fabric test starts if this test is enabled. The enhanced network (ENET) and junctored network (JNET) share this parameter.

Select the time at the start of 4 h of low traffic (the testing duration).

Rules in provisioning

If the required time for the network fabric test is 2 a.m., leave the value of the parameter at the default value 2.

To specify a different start time for the network fabric test, change the value of this parameter to the required hour.

Range information

Minimum	Maximum	Default
0 (midnight)	23	2

Activation

Immediate

If a scheduled test runs when the value of this parameter changes, the following occurs:

- the current scheduled test completes
- the next test uses the new scheduled time

Dependencies

Office parameter NETFAB_SCHEDULE_ENABLED in table OFCVAR determines if the network fabric test starts to run at the hour that this parameter specifies.

Consequences

Does not apply

NETFAB_SCHEDULE_TIME (end)

Verification

To verify the value of this parameter, use the NETFAB command STATUS at the MAP to see the scheduled start time.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS25**

This parameter was introduced in BCS25.

NETMINDER_MPC_AND_LINK

Parameter name

NetMinder MPC and Link

Functional description

This parameter stores the multiprotocol (MPC) number and the MPCLINK number. This parameter allows the user to change the MPC connection at any time.

Rules in provisioning

Specify the MPC number (0-255) and the MPCLINK number (0-3).

Range information

Name	Minimum	Maximum	Default
MPC	0	255	0
LINK	0	3	3

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Verify this parameter through table control.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

NETMINDER_MPC_AND_LINK (end)

Parameter history

NA007

This parameter was introduced in NA007.

NEW_OE_LOG_FORMAT

Parameter name

NEW_OE_LOG_FORMAT

Functional description

This office parameter allows you to specify the log format of the originating equipment (OE) DN. You can display the OE DN as seven or ten digits. The 10-digit DN option prevents ambiguous 7-digit DNs if duplicate NXX codes exist on the switch.

Provisioning rules

To select the 7-digit DN format, set the NEW_OE_LOG_FORMAT parameter to N. To select the 10-digit DN format, set parameter NEW_OE_LOG_FORMAT to Y. The following examples show the MAP displays for the possible input combinations.

Example 1. 7-digit format active, enter N for parameter NEW_OE_LOG_FORMAT.

```
>N
ALREADY IN THE OLD OE LOG FORMAT, NO ACTION TAKEN.
>
```

Example 2. 7-digit format active, enter Y for parameter NEW_OE_LOG_FORMAT.

```
>Y
WARNING: BY MAKING THIS CHANGE, THE OE FORMAT IN LOGS
ARE CHANGED FROM THE FOLLOWING EXAMPLE.
      LEN HOST 02 1 08 10 DN 6211027 KEY 1
TO:
      HOST 02 1 08 10 DN 9056211027 KEY 1
DO YOU REALLY WANT TO CONTINUE?
PLEASE CONFIRM ("Y" OR "N"):
>
```

Enter Y to implement the change.

Enter N to cancel the change, the system displays the following message.

NEW_OE_LOG_FORMAT (continued)

```
>N
COMMAND HAS BEEN CANCELED!!

>
```

Example 3. 10-digit format active, enter Y for parameter NEW_OE_LOG_FORMAT.

```
>Y
ALREADY IN THE NEW OE LOG FORMAT, NO ACTION TAKEN.

>
```

Example 4. 10-digit format active, enter N for parameter NEW_OE_LOG_FORMAT.

```
>N
WARNING: IF NPE00001 PACKAGE, NORTH AMERICAN NUMBERING
PLAN EVOLUTION1, IS USED, THEN THIS DISPLAY CHANGE IS
NOT RECOMMENDED. THE 7-DIGIT DN DISPLAYED IN LOGS COULD
BE AMBIGUOUS. BY MAKING THIS CHANGE, THE OE FORMAT IN
LOGS ARE CHANGED FROM THE FOLLOWING EXAMPLE:
    HOST 02 1 08 10 DN  9056211027 KEY 1
TO:
    LEN HOST 02 1 08 10 DN 6211027 KEY 1
DO YOU REALLY WANT TO CONTINUE?
PLEASE CONFIRM ("Y" OR "N")

>
```

Enter Y to implement the change.

Enter N to cancel the change, the system displays the following message.

```
>N
COMMAND HAS BEEN CANCELED!!

>
```

NEW_OE_LOG_FORMAT (end)

Range information

Minimum	Maximum	Default
		Y

Activation

Activation is immediate.

Dependencies

There are no dependencies.

Consequences

Not applicable

Verification

Print a LINE log, check that the OE DN is in the correct format.

Memory requirements

1 word

Dump and restore rules

Not applicable

Parameter history

NA10

This parameter was introduced in NA10

NODEREXCONTROL

Parameter name

Node Routine Exercise Test Control

Functional description

All switching units require this parameter. This parameter allows the operating company to control the routine exercise (REx) test scheduling mechanism. The following (critical) REx tests are not controlled:

- SuperNode computing module (CM)
- SuperNode message switch (MS)
- SuperNode enhanced network (ENET)

For SuperNode, the critical REx tests always run before the XPM REx tests. For NT40, office parameters CC_REX_SCHEDULED_HR and CMC_REX_SCHEDULED_HR in table OFCENG control REx test scheduling. This is scheduling on the central control (CC) and central message controller (CMC) separately.

You also can perform REx tests manually. Office parameter NODEREXCONTROL does not affect manual REx tests.

LCM and LCMCOV REx tests

In NA004 and up, the LCM REX Controller Enhancement feature eliminates the compatibility problems between the XPM REx test and line concentrating module (LCM) REx tests. This feature migrates the LCM REx test from the LCM node audit process to the system REX (SREX) controller. Another name for the SREX controller is the REX scheduler. The LCM continuity and voltage (COV) tests performed on the power converter and ringing generator packs are removed from the LCM REx test. The LCM COV test is a separate test, the LCMCOV REx test.

Before, the LCM REX Controller Enhancement feature:

- the node audit process coordinated LCM REx tests
- office parameter LCDREX_CONTROL in table OFCVAR specified REx test start and stop times

Now, with the LCM REX Controller Enhancement feature:

- the SREX controller coordinates LCM REx testing
- the SREX office parameter uses NODEREXCONTROL instead of office parameter LCDREX_CONTROL

NODEREXCONTROL (continued)

Note: For more information on the LCM REX Controller Enhancement feature, refer to "LCM REX Controller Enhancement" in the BAS translations section of this document.

REx test sequence

Automatic REX tests occur every 24 hours during the time interval specified by fields REXSTART and REXSTOP. The name of this interval is the *REX test window*.

At the start time, REX test routines initiate automatically in the following sequence:

1. MS REX test (approximately 15 min for each plane for a total of 30 min)
2. CM REX test (approximately 15 min for each plane for a total of 30 min)
3. ENET REX test:
 - 1 shelf ENET - 5 min
 - 2 shelf ENET - 12 min
 - 4 shelf ENET - 26 min
4. LIM REX test (approximately 15 min for each plane for a total of 30 min if site has LIMs)

Note: The tests of LIMs occur in sequence. The LIM REX test can run in parallel with the CM REX or ENET REX tests.

After these REX tests, during the time left in the REX test window, tests of the XPMs in the office occur in sequence. Tests of both units of an XPM occur before the tests of the next XPM. Each XPM REX test takes approximately 10 min to complete.

If all XPMs are not tested before the time in the REX test window expires, the REX tests of the following day run. These tests start with front-end REX tests. These tests continue with the test of the next XPM not tested during the REX tests of the previous day. When the last XPM test is complete, the XPM REX test routine cycles back to the top of the XPM list. The test continues within the allocated window.

REx test activation

Office parameter NODEREXCONTROL contains three fields: REXON, REXSTART, and REXSTOP.

- Field REXON specifies if the REX test scheduling mechanism activates or deactivates for REX tests that are not critical. If you set field REXON to N (no), the REX test scheduling mechanism deactivates for XPMs. The REX

NODEREXCONTROL (continued)

test scheduling mechanism continues for front-end testing (critical REx tests). If field REXON is at default value Y (yes), the XPM REx test scheduling mechanism activates for all REx testing. Even if you set field REXON to N, the front-end (critical) REx tests will run.

- Field REXSTART defines the time for the start of the REx test mechanism in hours (0 to 23) and minutes (0 to 59). The default value is 1 30 (1:30 a.m.).
- Field REXSTOP defines the time that the REx test mechanism stops in hours (0 to 23) and minutes (0 to 59). The default value is 3 30 (3:30 a.m.).

The REX scheduler activates in less than 5 s after you set field REXON to Y. The current clock time must be between the start and stop times specified.

A change from a REXON value of Y to N takes place immediately and does not require restart activation. If you set REXON to N, any REx test that is not critical already in progress runs to completion. The next REx test that is not critical does not start. The test will not start, even if time remains in the REx test window. Automated REx tests that are not critical will not activate until you set field REXON back to Y.

The scheduler selects XPMs for REx tests between the specified start and stop times. The last XPM REx test can start exactly at the end of the REx test window and run to completion. The REx test can run for several minutes after the time entered in field REXSTOP.

The automatic REx test that this parameter provides runs daily. The REx test start and stop times can change on a day when a test already ran. If this condition occurs, the time change will take effect the following day. If the XPMs require a second REx test, you can perform a manual REx test. If you perform a manual REx test, a delay occurs before the next automatic REx test. For example, the next automatic REx test occurs at 2:00 a.m. on Thursday if conditions occur as follows:

- the daily automatic REx test performs at 2:00 a.m. on a Tuesday
- you perform a manual REx test at 7:00 a.m. on the same Tuesday

To exclude specified XPMs from the REx test schedule under special conditions, enter datafill in table REXSCHD. Introduce these XPMs back into the REx test schedule as soon as possible.

Logs

If you set field REXON to N, the system generates log IOAU112 daily at the start time the field REXSTART specifies. If field REXSTART, field

NODEREXCONTROL (continued)

REXSTOP, or both fields change, the system generates a IOAU112 log that indicates the following:

You will find REX Scheduler control parameters changed.

REx test scheduling

The SREX controller schedules REx tests in the office according to the value of office parameter NODEREXCONTROL in table OFCVAR. This parameter contains the start and stop times for the REx test window. This parameter also can disable all REx tests that are not critical.

At the start of the test window, the SREX controller generates an internal list of objects on which the SREX controller will perform REx tests. This list consists of objects on which the SREX controller enabled both the REx test and the class. The SREX sorts this list so that all objects that require critical tests are at the top of the list. Objects that have not had tests for longer intervals are higher on the list. The SREX controller can generate a different list every day. The CM, MS, and ENET tests are the only critical tests. These tests always appear at the top of the list. These tests can appear in an order different than listed here.

The SREX controller chooses one object at a time from the top of the list and initiates REx tests on that object. The SREX controller continues to start REx tests on objects on the list. The SREX controller continues as long as the tests do not conflict with the tests that are already in progress. The process continues until the process reaches the maximum number of tests in parallel. The current maximum setting is 50 tests. The SREX controller also introduces a 30-s delay between the beginning of two consecutive tests.

Tests of all of the peripherals can take several days. The amount of time these tests require depend on the time for REx tests and the number and variety of XPMs. Run the REx tests on each peripheral a minimum of one time a week for reasons of integrity and reliability. Activate REx tests, field REXON set to Y, in all offices.

Schedule automated REx tests for periods of low switch traffic. Stagger automated REx tests for signal transfer points (STP) and signal control points (SCP) in the network, so that two mate offices do not run REx tests at the same time.

Rules in provisioning

The following table lists approximate REx test times for different XPM types. Use these times, to estimate the number of XPMs that the SREX will test in

NODEREXCONTROL (continued)

the REX scheduler times. With this information you can calculate the time to test all the XPMs in the switching unit.

The test time in the table for a node type provides an indication of total time for nodes of this type. Adjust the size of the REx test window to achieve the required rate.

XPM test type	Approximate time required for REx test (minutes)
Line group controller (LGC)	10
Line trunk controller (LTC)	10
Digital trunk controller (DTC)	10
International line group controller (ILGC)	12
International line trunk controller (ILTC)	12
International digital trunk controller (IDTC)	12
Austrian digital trunk controller (ADTC)	15
Link interface module (LIM)	30
Offshore digital trunk controller (ODTC)	15
Subscriber carrier module-100 rural (SMR)	15
Subscriber carrier module-100S (SMS)	15
Subscriber carrier module-100 urban (SMU)	15
Message switch and buffer 6 (MSB6)	12
Message switch and buffer 7 (MSB7)	10
Remote cluster controller (RCC)	12
Line concentrating module (LCM)	8
Line concentrating module continuity and voltage test (LCMCOV)	2

NODEREXCONTROL (continued)

Example

Assume the times for each frame listed in the table. A switching unit has 10 LTCs, 20 LGCs, 20 DTCs, and 4 RCCs. The total time to perform REx testing on these units is as follows:

$$(10 \times 10) + (20 \times 10) + (20 \times 10) + (4 \times 12) = 548 \text{ min} = 9 \text{ h } 8 \text{ min.}$$

The following table shows the values for fields REXSTART and REXSTOP to achieve coverage in 4, 5, and 55 days.

REx test coverage rates

REXSTART (hours/minutes)	REXSTOP (hours/minutes)	Window (hours/minutes)	Days to complete coverage
1 30	4 00	2 30	4
1 30	3 30	2 00	5
1 30	1 40	0 10	55

Range information

Minimum	Maximum	Default
		Y 1 30 3 30

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

NODEREXCONTROL (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**NA004**

The following changes occurred in NA004:

- In agreement with feature AF5898, LCM REX Controller Enhancement, this release removed reference to office parameter LCDREX_CONTROL used for LCM REX tests. This reference occurred in the "Functional description" section.
- Added "LCM and LCMCOV REX tests" subsection under "Functional description."
- Added REX test schedule information under "REX test scheduling."
- Added information on LCM and LCMCOV REX test times to "XPM REX test times" table.

BCS36

The delay of an automatic REX test that follows a manual REX test described in the "REX test activation" section.

BCS22

This parameter was introduced in BCS22.

NON_DMS_NAME_LOOKUP

Parameter name

Non-DMS Name Lookup

Functional description

This parameter specifies if a name lookup occurs in a multi-vendor environment. The parameter specifies if a name lookup occurs for calls from trunks that do not support the name parameter. This parameter specifies this information for an office-wide area. This parameter contains two subfields.

Custom Local Area Signaling Services (CLASS) provide residential customers with expanded features and capabilities. The CLASS CNAMD delivers the name of the calling party to the customer premise equipment (CPE) of the residential subscriber.

Subfield NON_DMS_NAME_LOOKUP_ACT delivers calling name information on calls from vendors that cannot provide the DMS with calling name information. This subfield allows the system to deploy CNAMD in a multi-vendor environment. The system can deploy CNAMD until switches other than DMS can provide calling name information for a network-wide area.

Subfield PRIV_NAME_OPTION provides private name optionality.

Rules in provisioning

This parameter contains the following two subfields:

- NON_DMS_NAME_LOOKUP_ACT
- PRIV_NAME_OPTION

Both subfields are set to N (no) when functional group RES00023 (Calling Name Display Software) is loaded to the office.

Set NON_DMS_NAME_LOOKUP_ACT to N to indicate that name lookup does not occur.

Set NON_DMS_NAME_LOOKUP_ACT to Y (yes) for name lookup to occur in table DNATTRS for calls incoming from AISUP and ATUP trunks.

Set PRIV_NAME_OPTION to N to indicate that the name supplied from the name lookup continues to display. The name lookup continues to display even with the restricted number display.

NON_DMS_NAME_LOOKUP (continued)

Set PRIV_NAME_OPTION to Y to indicate that a name lookup does not occur if a directory number cannot display. The name display cannot appear if the system restricts the number display.

Range information

Minimum	Maximum	Default
		N N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

If NON_DMS_NAME_LOOKUP_ACT is default value N, an Out of Area indication occurs on interoffice calls from adjacent nodes. The CNAMD subscriber receives this indication on calls that cannot provide calling name information.

If NON_DMS_NAME_LOOKUP_ACT is Y, the CNAMD subscriber receives the calling name information on these calls. The subscriber receives the this information if the information is in table DNATTRS.

If PRIV_NAME_OPTION is N, the name continues to display when the system restricts directory numbers on calls terminating to subscribers with CNAMD.

If PRIV_NAME_OPTION is set to Y, the system restricts the name display for restricted originator numbers.

Memory requirements

This parameter requires 2 words of protected store.

NON_DMS_NAME_LOOKUP (end)

Dump and restore rules

This parameter was introduced in BCS31.

Copy the current value of this parameter when you perform a dump and restore.

NPAC204_THROTTLE

Parameter name

NPAC204 Log Throttle

Functional description

This parameter limits the generation of the NPAC204 log. This log indicates that a multilink reset starts. The system generates the NPAC204 log the first time that a multilink group goes into service. After this event, the system generates the log each time a reset begins after successful transmission of multilink frames.

The system uses this parameter when the reset procedure is not successful. The system generates a log after a number of attempted resets. The value of this parameter specifies the number of reset attempts. When the multilink group resets correctly, the system generates the log at reset time.

The throttle is not applied to the "Far End MLG reset initiated" version of the NPAC204 log.

Rules in provisioning

Specify the number of attempted resets that were not successful that occur before the system generates a log.

Range information

Minimum	Maximum	Default
0	1024	10

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

NPAC204_THROTTLE (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

NSS_DBCP_TCN_BLOCK_CALL

Parameter name

NSS Database Control Point Travel Card Number (TCN) Block Call

Functional description

This parameter specifies if the system must route a call to treatment (blocked) when a problem occurs. If the system does not route the call the system allows the call to proceed as normal. If this parameter is set to N (no) the system allows the call to proceed as normal. If this parameter is set to Y (yes) the system routes the call to treatment.

Examples of problems that affect this parameter are:

- bad connection between the switches
- REJECT is received from the database control point (DBCP) because of a protocol decoding problem
- the wait time for the response expires before the response is received

Rules in provisioning

To block calls, set the value of this parameter to Y (yes).

Set the value of this parameter to N (no) to allow calls to proceed when a problem occurs.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

NSS_DBCP_TCN_BLOCK_CALL (end)

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS31.

NSS_DBCP_TCN_RESP_TIMEOUT

Parameter name

NSS Database Control Point Travel Card Number (TCN) Response Timeout

Functional description

This parameter specifies the wait time in seconds for a travel card number (TCN) database control point (DBCP) response message.

Rules in provisioning

Set the value of this parameter to the length of time (in seconds) to wait for a TCN DBCP response message.

Range information

Minimum	Maximum	Default
1	10	3

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS31.

NTC_CALL_DURATION_ADJ

Parameter name

Notification of Time and Charge (NTC) Call Duration Adjustment

Functional description

A DMS-100 switching unit in the Japanese market with the following features requires this parameter:

- Integrated Business Network (IBN) ISDN User Part (ISUP) trunks
- the Notification of Time and Charge (NTC) feature

This parameter specifies the call duration adjustment for NTC calls.

Rules in provisioning

To specify the length of time for the call duration adjustment, set the two values. The first value can be from 0 s to 99 s. The second value can be from 0 to 0.99 s.

Use the call duration adjustment to calculate the charged amount of the call. The following formula determines the charged amount:

New call duration = elapsed time in SMDR record - the value of this parameter

If the result of this adjustment is less than zero, the new call duration is set to zero. The call duration adjustment does not affect the value recorded in the elapsed time field in the SMDR record.

For example, if the real elapsed time is 120.50 s and this parameter is set to a value of 10 50 (10.50 s), calculate the new call duration as follows:

New call duration = 120.50 - 10.50 = 110.0 s

Range information

Minimum	Maximum	Default
0 0	99 99	0 0

NTC_CALL_DURATION_ADJ (end)

Activation

Immediate

Dependencies

Does not apply

Consequences

If this parameter is set too high, too many calls will have an adjusted call duration of zero, or less than zero. These calls will receive no charge and, as a result, call back attempts cannot occur.

Verification

Set the value of this parameter to a value that is not zero. Make an NTC call. Verify that the NTC call back announces the charge amount of the completed call based on the adjusted call duration.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS36.

NTC_CONN_REATTEMPTS

Parameter name

Notification of Time and Charge Connection Reattempts

Functional description

A DMS-100 switching unit in the Japanese market requires this parameter if the unit has the following features:

- Integrated Business Network (IBN) ISDN User Part (ISUP) trunks
- the Notification of Time and Charge (NTC) feature

This parameter specifies the number of NTC connection reattempts that the system makes after a problem causes a connection failure. An enhanced-digital recorded announcement machine (EDRAM) failure is an example of a problem that can cause a connection failure.

Rules in provisioning

Specify the number of NTC connection reattempts the system makes after a connection failure.

Range information

Minimum	Maximum	Default
0	4	3

Activation

Immediate

Dependencies

Office parameter NTC_TIME_BTW_CONN_REATTEMPTS in table OFCVAR specifies the amount of time between connection reattempts.

Consequences

Does not apply

Verification

To verify the operation of this office parameter, cause an EDRAM failure. Originate and complete a call that activates an NTC feature. The NTC call

NTC_CONN_REATTEMPTS (end)

back attempt will fail because of the EDRAM failure. Verify that the number of connection reattempts that follow is equal to the value of this parameter.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS36.

NTC_REATTEMPTS

Parameter name

Notification of Time and Charge Number of Reattempts

Functional description

A DMS-100 switching unit in the Japanese market requires this parameter if the unit has the following features:

- Integrated Business Network (IBN) ISDN User Part (ISUP) trunks
- the Notification of Time and Charge (NTC) feature

The system releases the callback if the subscriber does not answer the original callback. This parameter specifies the number of times that the system reattempts an NTC callback.

Rules in provisioning

Specify the number of NTC callbacks that the system attempts if the subscriber does not answer the original callback.

If the value is 0 (zero), callback reattempts do not occur.

Range information

Minimum	Maximum	Default
0	4	2

Activation

Immediate

Dependencies

Office parameter NTC_TIME_BTW_REATTEMPTS in table OFCVAR the amount of time between callback reattempts.

Consequences

Does not apply

Verification

To verify the operation of this parameter, originate and complete a call that activates an NTC feature. Wait for the NTC callback. Do not answer the

NTC_REATTEMPTS (end)

callback. Verify that the number of ringback reattempts is equal to the value of this parameter.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS36.

NTC_TIME_BTW_CONN_REATTEMPTS

Parameter name

Notification of Time and Charge Time Between Connection Reattempts

Functional description

A DMS-100 switching unit in the Japanese market requires this parameter if the unit has the following features:

- Integrated Business Network (IBN) ISDN User Part (ISUP) trunks
- the Notification of Time and Charge (NTC) feature

This parameter specifies the amount of time, in seconds, between NTC connection reattempts after a problem causes a connection failure. An enhanced-digital recorded announcement machine (EDRAM) failure is an example of a problem that causes.

Rules in provisioning

Specify the amount of time between NTC connection reattempts after a connection failure.

Range information

Minimum	Maximum	Default
0	20	10

Activation

Immediate

Dependencies

Office parameter NTC_CONN_REATTEMPTS in table OFCVAR specifies the number of NTC connection reattempts that occur after a connection failure.

Consequences

Does not apply

Verification

To verify the operation of this office parameter, cause an EDRAM failure. Originate and complete a call that activates an NTC feature. The NTC callback attempt will fail because of the EDRAM failure. Verify that the time

NTC_TIME_BTW_CONN_REATTEMPTS (end)

between connection reattempts that follow is equal to the value of this parameter.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS36.

NTC_TIME_BTW_REATTEMPTS

Parameter name

Notification of Time and Charge Time Between Reattempts

Functional description

A DMS-100 switching unit in the Japanese market requires this parameter if the unit has the following features:

- Integrated Business Network (IBN) ISDN User Part (ISUP) trunks
- the Notification of Time and Charge (NTC) feature

This parameter specifies the amount of time, in seconds, between NTC callback reattempts after the NTC subscriber does not answer a callback.

Rules in provisioning

Specify the amount of time between NTC callback reattempts after the subscriber does not answer a callback.

Range information

Minimum	Maximum	Default
60	240	120

Activation

Immediate

Dependencies

Office parameter NTC_REATTEMPTS in table OFCVAR specifies the number of NTC callback attempts.

Consequences

Does not apply

Verification

To verify the operation of this parameter, originate and complete an NTC feature activation call. Wait for the NTC callback. Do not answer the call back. Verify that the time between ringback reattempts is equal to the value of this parameter.

NTC_TIME_BTW_REATTEMPTS (end)

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS36.

NTC_XLATIONS

Parameter name

Notification of Time and Charge Translations

Functional description

A DMS-100 switching unit in the Japanese market requires this parameter if the unit has the following features:

- Integrated Business Network (IBN) ISDN User Part (ISUP) trunks
- the Notification of Time and Charge (NTC) feature

This parameter specifies the translation system and name that the system uses for the NTC callback.

Rules in provisioning

This parameter has two fields: XLASYS and XLANAME. Specify the translation system (field XLASYS) and name (field XLANAME) for the system to use for the NTC callback.

Field XLASYS can have value NIL, AC, PX, CT, FA, OFC, DN, AM, FT, CC, NSC, CTY, or NN.

Range information

Minimum	Maximum	Default
		NIL XLASYS

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

NTC_XLATIONS (end)

Verification

If field XLASYS or XLANAME is set to NIL, the system does not perform NTC callbacks to subscribers over trunks. The system abandons the call back and does not make additional callback attempts.

If field XLASYS and XLANAME have values other than NIL, NTC callback uses the translations system and name defined.

Memory requirements

This parameter requires 4 words of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS36.

OCCTS_DEFAULT_REG_LOG

Parameter name

OCCTS Default Register Log

Functional description

This parameter allows you to turn the Equal Access Traffic Separation Measurement System (EATSMS) information log on or off.

Rules in provisioning

This parameter has four fields. These field values control the four event types in EATSMS. From left to right the four fields represent peg, overflow, setup usage and connect usage. These values are in an EATS100 log report as TSPEG, TSOVFL, TSSETUP, and TSCONNECT.

If one or more of these fields is set to Y, that event type produces a log report.

Range information

Minimum	Maximum	Default
		N N N N

Activation

Immediate

Dependencies

Only turn on this report after the EATSMS data entry is complete.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

OCCTS_DEFAULT_REG_LOG (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS16.

OM_SOURCE_IDENTIFICATION

Parameter name

Operational Measurements Source Identification

Functional description

This parameter enables or disables the ability to display the source node on which Operational Measurements (OM) reports collected an OM tuple.

Rules in provisioning

In order to set OM_SOURCE_IDENTIFICATION to ON, the parameter OMDISTRIBUTION in table OFCOPT must be ON also.

Note: In the UK market, this parameter is always set to OFF. Do not enter datafill into parameter OMDISTRIBUTION.

Range information

The range of values for this parameter are ON or OFF. The parameter value is set to OFF when the feature is not active. If the OM system disables the source name reporting capability, the distributed OM system generates OM reports. The OM reports are like those reports in the original system.

Minimum	Maximum	Default
		Off

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

OM_SOURCE_IDENTIFICATION (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore from software release BCS30 to BCS30 or higher.

Parameter history**UK002**

This parameter is always set to OFF in the UK market.

BCS30

This parameter was introduced in BCS30.

ORIG_ARTER_FREQUENCY

Parameter name

Originating ARTER Frequency

Functional description

Switching units in Turkey that require the ARTER trunk testing feature require this parameter. Switching units in North America do not require this parameter.

The name ARTER describes equipment for automatic transmission testing of outgoing trunks in the Turkish network.

The ARTER system works with type 6805 units in distant offices that provide the 804 Hz reference frequency and the quiet termination. There are two types of 6805 units, one for two-wire switches and one for four-wire switches.

This feature provides a DMS switch equivalent to the ARTER function for the following switching units in Turkey:

- the DMS-200 (toll) switching unit
- the DMS-100 (local) switching unit
- the DMS-300 (gateway) switching unit

The value of this parameter indicates the following:

- the frequency of test tone to expect from the distant office
- the frequency of test tone to generate on the transmit path in the loop-around section of the test sequence
- the frequency of test tone to expect on the receive path in the loop-around section of the test sequence

Enter the test name TART in table ATTSCHEd for ARTER tests.

Rules in provisioning

Set the value of this parameter to the same value as the value of parameter TERM_ARTER_FREQUENCY in one of the following tables:

- the table OFCVAR
- the equivalent table in the terminating office

ORIG_ARTER_FREQUENCY (end)

Range information

Minimum	Maximum	Default
400	2800	804

Activation

Immediate

Dependencies

The testline line number for the ARTER testline test is in the subtable TLNOS of table TSTLCONT.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS17.

ORIG_ARTER_LEVEL

Parameter name

Originating ARTER Level

Functional description

Switching units in Turkey that require the ARTER trunk test feature require this parameter. Switching units in North America require this parameter.

The name ARTER describes equipment for automatic transmission tests of outgoing trunks in the Turkish network.

The ARTER system works with type 6805 units in distant offices that provide the 804 Hz reference frequency and the quiet termination. There are two types of 6805 units, one for two-wire switches and one for four-wire switches.

This feature provides a DMS switch equivalent to the ARTER function for the following switching units in Turkey:

- the DMS-200 (toll) switching unit
- the DMS-100 (local) switching unit
- the DMS-300 (gateway) switching unit

During the loop-around section of the four-wire test sequence, the originating ARTER generates a test tone. This parameter specifies the level at which originating ARTER must generate the test tone.

The test name TART must be in table ATTSCHEd for ARTER tests.

Rules in provisioning

Set the value of this parameter to the same value as the value of parameter TERM_ARTER_FREQUENCY in one of the following tables:

- the table OFCVAR
- the equivalent table in the terminating office

Range information

Minimum	Maximum	Default
10	10	0

ORIG_ARTER_LEVEL (end)

Activation

Immediate

Dependencies

The testline number for the ARTER testline test is in the subtable TLNOS of table TSTLCONT.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS17.

ORIG_INCREASE_SPM

Parameter name

Originating Increase Subscribers Private Metering

Functional description

A local world switch (international switching unit) requires this parameter. This parameter specifies if the lines have the Subscribers Private Metering (SPM) feature.

Rules in provisioning

If the value of this parameter is set to Y (yes), the system meters lines originated through MONTALK. Command ORIG at the LTPLTA level of LNS MAP originates a line through MONTALK.

If this feature is not required, leave the value of this parameter at the default.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Verify that the SPM increases when conditions occur as follows:

- the value of this parameter is set to Y
- the international line originates through MONTALK

Memory requirements

This parameter does not impact memory.

ORIG_INCREASE_SPM (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS21.

PER_CALL_GND_LOOP_TEST

Parameter name

Per Call Ground Start Line Loop Test

Functional description

Switching units with ground start lines require this parameter. This parameter specifies if the per call loop tests occur for each call on ground start lines. These tests stop the possibility of glare and failure on ground start lines. To stop these problems, the tests make sure that the peripheral module (PM) checks the line status. The PM that supports the line before the application of ringing voltage checks the line status.

Rules in provisioning

If the value of this parameter is set to Y (yes), the system performs the tests. The tests do not occur on loop start lines.

If the value of this parameter is set to N (no), the system does not perform the tests.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

PER_CALL_GND_LOOP_TEST (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

PER_OPC_LOGDEV_BUFFER_SIZE

Parameter name

Per Operational Controller Logical Device Buffer Size

Functional description

A SuperNode switching unit requires this parameter. This parameter determines the size of the buffer, in bytes, assigned to the operational controller (OC) logical device opc_logdev02.

Rules in provisioning

Specify the size of the buffer, in bytes, assigned to the OC logical device opc_logdev02.

Range information

Minimum	Maximum	Default
2000	22000	22000

Activation

Immediate

Dependencies

Does not apply

Consequences

A change to the value of this parameter causes the loss of the logs that the buffers already stored.

Verification

Does not apply

Memory requirements

This parameter requires 2 bytes of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

PER_OPC_LOGDEV_BUFFER_SIZE (end)

Parameter history**BCS36**

This parameter was introduced in BCS36.

PERFORMANCE

Parameter name

Performance

Functional description

This parameter appears in a local switching unit. This parameter specifies the minor, major and critical alarm thresholds for line performance at the line card P. If the number of P failures equals or is greater than an alarm threshold, the related alarm is raised.

Rules in provisioning

Base the alarm thresholds on the following:

- the current switching unit failure problems
- the desire or lack of desire for notification for these failures

The default values are as follows:

- 100 for the minor alarm threshold
- 150 for the major alarm threshold
- 200 for the critical alarm threshold

These values are standard line failure threshold values.

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	100 150 200

Activation

Use only the ALMSTAT command at the LTP MAP level to change this parameter. When the ALMSTAT command changes the value, the system updates all current alarms to reflect the failures with the new values.

Dependencies

Does not apply

PERFORMANCE (end)

Consequences

When the values of this parameter are too high, alarms are not raised at the correct time for service degradation. For example, if the minor threshold is set to 80% of the switching unit lines, the alarm is not raised. The alarm is not raised even if 75% of the lines in the switching unit experience degraded service.

When the values of this parameter are too low, the alarm is raised before warranted.

Verification

Insert pulses on the line card to degrade the performance of the line card. This action causes a failure to occur. Set the minor threshold to 1, then the alarm is raised. Increase the minor alarm threshold to 10 and the alarm disappears. Decrease the minor alarm threshold to 1 again and the alarm is raised again. Use major and critical alarm values to repeat this sequence.

Memory requirements

These parameter values require 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS28.

PMSTAT_OM_CONTROL

Parameter name

PMSTAT Operational Measurement Control

Functional description

This parameter enables or disables the polling of PMSTAT operational measurement (OM) data from expanded memory line concentration modules (XLCM) through the XMS-based peripheral modules (XPM).

If the parameter value changes, data immediately transmits to all XPM peripherals with subtending XLCMs in one of the following states:

- in-service trouble (ISTB)
- in-service (INSV)

The message "Polling Activated" or "Polling Deactivated" appears at the MAP display. Data transmits to the XPM peripherals during the return to service (RTS) action if the XPM in one of the following states:

- out of service (OOS)
- manually busy (MANB)

Rules in provisioning

Set the value of this parameter to Y (yes) to enable data collection for the PMSTAT OM group.

Set the value of this parameter to N (no) to disable data collection for the PMSTAT OM group.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Refer to the *Operational Measurements Reference Manual* for a description of OM group PMSTAT.

PMSTAT_OM_CONTROL (end)

Consequences

Does not apply

Verification

At the MAP, enter the command OMSHOW PMSTAT ACTIVE.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS35.

POTS_SIMULATE_1A

Parameter name

Plain Ordinary Telephone Service Simulate 1AESS

Functional description

This parameter forces central office plain ordinary telephone service (POTS) lines to behave as 1AESS lines instead of DMS-100 lines.

This office parameter only affects the interaction between Call Forward Do Not Answer (CFD/CFDA/CFGD/CFGDA) and Call Waiting (CWT). This parameter allows the DMS-100 switch to emulate this interaction in a 1AESS switch.

Rules in provisioning

To allow all POTS lines in the office to behave like DMS switch lines, set the parameter value to N (no)

To allow POTS lines with CFD to behave like 1A lines with CFD, set the parameter value to Y (yes) .

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

POTS_SIMULATE_1A (end)

Verification

To verify that POTS_SIMULATE_1A works, perform the following actions:

- set the value to Y
- allow a call to forward to a busy remote with CWT, through CFD (from a POTS line)
- verify that the call does not forward and that the base continues to ring

Memory requirements

Each unit requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS32.

PRE_ROUTE_ABANDON_TRK116_LOG

Parameter name

Pre-route Abandon TRK116 Log

Functional description

This parameter enables or disables the output of pre-route abandon TRK116 logs. These logs occur when a trunk is seized but the subscriber does not dial digits. Excessive logs can be the result of timing problems that occur on two different switches.

This parameter is for use with Traffic Operator Position System (TOPS) multifrequency (MF) trunks. This parameter suppresses TRK116 logs for some TOPS offices, when fields have values as follows:

- TRBCODE equals PRE_ROUTE_ABANDON
- CLDKP equals NIL_MF_KP
- CLDST equals NIL_MF_ST

Rules in provisioning

The office can set the parameter value to N (no) if an office experiences an excessive number of TRK116 logs. These logs contain the following:

- pre-route abandon reasons
- NIL_KP/NIL_ST

The parameter value is set to value Y (yes) when the feature is not active.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

PRE_ROUTE_ABANDON_TRK116_LOG (end)

Consequences

A parameter setting of N can mask a real problem with trunks that are improperly seized. This condition can cause the office to overengineer trunk and receiver resources.

Verification

If this parameter is set to value N, TRK116 logs must not have either of the following:

- a TRKCODE of PRE_ROUTE_ABANDONED CLDKP and NIL_KP
- a CLDST of NIL_MF_ST

Memory requirements

Each unit requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS31**

This parameter was introduced in BCS31.

PRINTOUT_OF_CALLS

Parameter name

Printout Of Calls

Functional description

A DMS-300 switch requires this parameter. This parameter controls if the system places a copy of call detail recording (CDR) entries in the appropriate CDRC log.

Rules in provisioning

If the value of this parameter is set to Y (yes), the system places all CDR entries in the CDRC log.

If the value of this parameter is set to N (no), the system does not place entries in the CDRC log.

Northern Telecom sets this parameter. Consult Northern Telecom before you change this parameter.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

PRINTOUT_OF_CALLS (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

PROMPT_HUNT_MEM_LCC

Parameter name

Prompt Hunt Member Line Class Code

Functional description

This parameter activates the hunt member line class code (LCC) prompt in offices that use the Service Order Simplification for Hunt Groups feature.

Rules in provisioning

To activate the hunt member LCC prompt, set the value of this parameter to Y (yes). This value activates the prompt in the ADD and EST commands of the SERVORD.

If you do not require this feature, leave the value of this parameter at the default N (no).

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

PROMPT_HUNT_MEM_LCC (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS31.

PSPDALARM

Parameter name

Permanent Signal Partial Dial Alarm

Functional description

This parameter is the permanent signal partial dial failure flag. A counter and three threshold levels (minor, major, and critical) are present for the failure type.

An alarm condition occurs if one or more of the failure counters exceeds one of the threshold levels.

Rules in provisioning

Specify the alarm threshold levels for permanent signal partial dial failures. For example, the default value of 10 20 30 represents the following failure thresholds:

- a minor alarm threshold of 10 failures
- a major alarm threshold of 20 failures
- a critical alarm threshold of 30 failures

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	10 20 30

Activation

Use only the ALMSTAT command at the LTP MAP level to change the parameter value. When the ALMSTAT command changes the value, the system updates all current alarms to reflect the failures with the new values.

Dependencies

Does not apply

Consequences

Does not apply

PSPDALARM (end)

Verification

Does not apply

Memory requirements

These parameter values require 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

QDIAGALARM

Parameter name

Shower Queue Diagnostic Alarm

Functional description

A local, SL100 or Austrian local switching unit requires this parameter. This parameter specifies the alarm thresholds for the number of lines in the shower queue. When the number of lines exceed the thresholds the system raises a minor, major or critical alarm.

An alarm condition occurs when one or more of the failure counters exceeds one of the threshold levels.

To change the value of this parameter, use the ALMSTAT command at the LTP MAP level.

Rules in provisioning

Specify the alarm thresholds for the number of lines in the shower queue. For example, the default value of 100 150 200 represents the following alarm thresholds:

- a minor alarm threshold of 100 failures
- a major alarm threshold of 150 failures
- a critical alarm threshold of 200 failures

If you do not require this feature, set the parameter values to 32001 32002 32002.

Range information

Minimum	Maximum	Default
0	32767	100 150 200

Activation

Use only the ALMSTAT command at the LTP MAP level to change this parameter value. When the ALMSTAT command changes the value, the system updates all current alarms to reflect the failures with the new values.

QDIAGALARM (end)

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

These parameter values require 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

R2_ANI_DENY

Parameter name

R2 Automatic Number Identification Deny

Functional description

Before BCS30, automatic number identification (ANI) information was only given on R2 trunks that had a traffic class of Centralized Automatic Message Accounting (CAMA). The system treated a request for ANI for any other traffic classes as an error.

This parameter allows the transmission of ANI information for any traffic class, as requested. If a call over R2 trunks terminates on a line with the malicious call trace (MCT) option, a request for ANI always occurs.

Rules in provisioning

A parameter value of Y (yes) denies ANI information to R2 trunks with a traffic class other than CAMA or TNCA.

A parameter value of default N (no) allows transmission of ANI information for all traffic class requests over R2 trunks.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS30.

RAG_QUE_LEN

Parameter name

International Ring Again Queue Length

Functional description

A switching unit (international) with universal translations and the International Ring Again (IRAG) requires this feature. This parameter specifies the size of the IRAG recall queue length.

This feature provides administration with the ability to restrict the number of IRAG requests in a switching unit.

The maximum number of Ring Again (RAG) requests allowed in the queue for a busy line determines the value of this parameter.

Rules in provisioning

Determine if the number of IRAG requests the system can queue against a line is less than the default value of eight. If the number is less than eight, enter the maximum RAG requests the system can queue against a busy line.

Range information

Minimum	Maximum	Default
0	8	8

Activation

Immediate

Dependencies

Parameter RAG_RECALL_TIMEOUT in table OFCVAR also associates with the IRAG feature.

This feature affects the value of the value of the following parameters in table OFCENG.

- FTRQAGENTS
- FTRQ2WAREAS
- FTRQ8WAREAS

RAG_QUE_LEN (end)

- NO_OF_FTR_CONTROL_BLOCKS
- NO_OF_FTR_DATA_BLOCKS

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**BCS25**

This parameter was introduced in BCS25.

RAG_RECALL_TIMEOUT

Parameter name

International Ring Again Recall Timeout

Functional description

A switching unit (international) with universal translations. The International Ring Again (IRAG) feature requires this parameter. The parameter specifies the time in 1 s intervals for the Ring Again (RAG) interval timer.

Consider two users, A and B. User A dials User B and receives a busy signal. User A activates the IRAG feature against the line of User B. When the line of User B becomes idle, an IRAG recall signal alerts the line of User A, with special ringing. At this point an interval timer begins. The system aborts the IRAG request if the timer expires. If a recall is not possible because the line of User A is busy, the system redirects the IRAG request until both lines are idle.

Rules in provisioning

If the timeout exceeds 8 s, enter the time in 1 s intervals for the timeout of the interval timer.

Range information

Minimum	Maximum	Default
8	32	8

Activation

Immediate

Dependencies

Parameter RAG_QUE_LEN in table OFCVAR associates with the IRAG feature. For other parameters this feature affects, see parameter RAG_QUE_LEN in table OFCVAR.

Consequences

Does not apply

Verification

Does not apply

RAG_RECALL_TIMEOUT (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**BCS25**

This parameter was introduced in BCS25.

RATING_SMALLEST_COIN

Parameter name

Rating Smallest Coin

Functional description

A toll switching unit (international) with universal translations and the International Traffic Operator Position System (ITOPS) require this parameter. This parameter specifies the lowest coin value that coin telephones use.

Coin lines rounded to the nearest unit are handled in a different way than lines that do not use coins. The system handles lines in a different way. The lowest coin value of a coin telephone may differ from the smallest value for charges.

For example, charges are based on the penny. The lowest coin value available for use in a coin telephone is a 5 pence. In this occurrence, the 5 pence is used for all coin telephones and the penny is used for all other telephones.

Rules in provisioning

Specify the lowest coin value that is available for use in a coin telephone.

For example, if the lowest coin value a coin telephone uses is 5 pence, the value would be 5.

Range information

Minimum	Maximum	Default
1	10000	1

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

RATING_SMALLEST_COIN (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**BCS27**

This parameter was introduced in BCS27.

RECORD_CLG_NPA_NXX

Parameter name

Record Calling Numbering Plan Area And Originating Number

Functional description

Operators do not handle Traffic Operator Position System (TOPS) and Centralized Automatic Message Accounting (CAMA) calls and use this parameter. This parameter generates an originating numbering plan area (NPA) and originating number (NXX) fields for some types of Automatic Message Accounting (AMA) records. The NPA and NNX of some AMA records generate when no calling number is present.

Rules in provisioning

Specify the incoming call types and determine if these calls are impacted. The impacted call types are found in the following list:

- DEFAULT_REC
- TOPS_REC
- CAMA_REC
- TOPS_AND_CAMA_REC

If this parameter value is set to DEFAULT_REC, this feature is not activated.

Range information

Minimum	Maximum	Default
		DEFAULT_REC

Activation

Immediate

Dependencies

For calls that originate from TOPS trunks, the NPA and NXX are taken from table TOPSBC based on the incoming trunk group.

For calls that originate from SuperCama (SC) trunks, the NPA and NXX are taken from table BILLCODE based on the incoming trunk group.

RECORD_CLG_NPA_NXX (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**BCS29**

This parameter was introduced in BCS29.

RECORD_UNANSWERED_CALLS

Parameter name

Record Unanswered Calls

Functional description

Local switching units (international) with universal translations and the International Call Recording (ICR) feature require this parameter. This parameter specifies either the system records calls not charged or not answered with International Centralized Automatic Message Accounting (ICAMA), or Inter-administration Accounting (IAA).

The ICR is the process of recording information about all direct dialed, long distance, national, and international toll calls that are charged. These are calls for selected lines that originate on the DMS-100 international switch.

The ICR feature requires the metering, Automatic Message Accounting (AMA), and Device Independent Recording Package (DIRP) subsystems.

Rules in provisioning

If this parameter is set to the value of Y (yes), all unanswered calls are recorded. Calls that are not charged or calls that end at an FNT line are also recorded. Calls directed to treatment are not recorded.

For unanswered calls, the call start time is the time of origination. The call duration is the time that the call was in the ringing phase.

If the user leaves this parameter at the default value of N (no), the above type of calls are not recorded.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

RECORD_UNANSWERED_CALLS (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**BCS21**

This parameter was introduced in BCS21.

REDUCE_DIGMAN_ANS_DETECTION_TIME

Parameter name

Reduce digman ans detection time.

Functional description

This parameter controls the duration of time before a stuttered dial tone breaks.

Set this parameter to the value of Y (yes) to assign new values to the variable TEMPLATE. MIN_DIALTONE_TIME and DIAL STATUS index the TEMPLATE in order to break the stuttered dial tone after 1.5 s.

If the office parameter is set to the default value N (no), the stuttered dial tone cannot break for 6 s.

Rules in provisioning

To activate this feature, use table control to set the value of this office parameter to the values of Y or N.

If the system allows a break in a stuttered dial tone after 1.5 s, set this parameter to the value of Y.

If the system does not allow a break in a stuttered dial tone after 1.5 s, set this parameter to the default value N

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

If this office parameter is not used, patch GWR48 cannot receive the option control.

REDUCE_DIGMAN_ANS_DETECTION_TIME (end)

Verification

Does not apply

Memory requirements

This office parameter requires 1 byte of protected data store (DSPROT).

Dump and restore rules

Before the introduction of this office parameter, ACT patch GWR48 provided this functionality. When a site goes from a load with ACT patch GWR48 to a load with this office parameter, query the ACT state of ACT patch GWR48. Adjust the value of this office parameter. If ACT patch GWR48 is active in the previous load, set the value of office parameter REDUCE_DIGMAN_ANS_DETECTION_TIME to the value of Y. If the ACT patch GWR48 is not active, leave the value of this parameter set to the default value N.

Parameter history**NA007**

This parameter was introduced in NA007.

RES_CHK_OOS

Parameter name

Residential Line Check Out of Service

Functional description

The office parameter RES_CHK_OOS provides controlled access to changing a RES line's network class of service (NCOS) in table LINEATTR. This activity supports feature AU2503 - RES Translations Simplification. This feature allows the operating company to change the NCOS value in table LINEATTR for a RES line without taking the line out of service.

Provisioning rules

None

Range information

Minimum	Maximum	Default
Y	N	Y

Activation

Immediate

Dependencies

None

Consequences

This feature allows the operating company to change the NCOS value in table LINEATTR for a RES line without taking the line out of service. Office parameter RES_CHK_OOS should be set to N only during the transition to the new RES schema.



CAUTION

Possible accidental change to NCOS value

The NCOS value in table LINEATTR can be changed inadvertently if the office parameter RES_CHK_OOS is set to the N value. Set this parameter to the N value only when making a transition to the new RES schema.

RES_CHK_OOS (end)

Verification

With RES_CHK_OOS = Y, maintenance personnel cannot modify the NCOS value in a LINEATTR tuple. With RES_CHK_OOS =N, maintenance personnel can modify the NCOS of a LINEATTR tuple while the RES lines that use that LINEATTR tuple are in service.

Memory requirements

None

Dump and restore rules

None

Parameter history**NA009**

This parameter was introduced in NA009 as part of the Cost of Ownership Reduction feature. Corrected typos in June 1999.

RES_CMSG_ACCESS_AND_ERROR_TMT

Parameter name

Residential Call Messenger Access and Error Treatment

Functional description

Call Messenger is enabled and error treatment specified in office parameter RES_CMSG_ACCESS_AND_ERROR_TMT in table OFCVAR. The following table describes the entry for the Call Messenger office parameter.

Rules in provisioning

Does not apply

Range information**RES_CMSG_ACCESS_AND_ERROR_TMT**

Field name	Value	Description
ACCESS	OFF or UNIVERSAL	A value of UNIVERSAL specifies the feature is universally available in the end office. A value of OFF disables the feature.
ERRTREAT	ANNCLLI <cli> or DMSTREAT <treatment>	This feature distinguishes a Call Messenger error treatment from an error announcement or a DMS standard treatment. A value of ERRTREAT=ANNCLLI along with a CLI or 1 to 16 alpha-numeric characters specifies the error announcement. A value of ERRTREAT=DMSTREAT along with a treatment name specifies a DMS standard treatment.

Activation

Does not apply

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

RES_CMSG_ACCESS_AND_ERROR_TMT (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

RES_SO_SIMPLIFICATION

Parameter name

Residential Enhanced Services Service Order Simplification

Functional description

A switching unit with the Enhanced Residential Services software package requires this parameter. This parameter permits consideration of Residential Enhanced Service (RES) lines as plain ordinary telephone service (POTS) lines from service orders (SO).

This parameter consists of two fields: RES_AS_POTS and ENHANCED_POTS_OPTIONS.

If you set RES_AS_POTS to Y (yes), during execution of service order commands ADO, DEO, and CHF, a line can change. The line can change from a POTS line to a RES line or from a RES line to a POTS line.

If you set ENHANCED_POTS_OPTIONS to Y, the system introduces the following additional prompts:

- prompt CFDACNTL appears when the user adds the option Call Forwarding Don't Answer CFDA to a line
- prompt CFBLCNTL appears when the user adds the option Call Forwarding Busy CFBL to a line
- prompt FWD_INTERNAL appears when the user adds the option Call Forwarding Group Don't Answer CFGD to a hunt group pilot

Rules in provisioning

RES AS POTS remains at the default value of Y when RES lines are considered POTS lines within service orders.

Prompts CFDACNTL, CFBLCNTL, and FWD_INTERNAL must appear for RES lines. If these prompts do not appear ENHANCE POTS OPTION remains at the default value of N.

Set the value of this parameter to N N, if the above features are not required.

RES_SO_SIMPLIFICATION (end)

Range information

Minimum	Maximum	Default
		Y N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**BCS27**

You will find his parameter introduced in BCS27.

REVERSE_DISPLAY_DISALLOWED

Parameter name

Reverse display disallowed.

Functional description

This parameter controls the display of the public name of the called party on the display of the calling party.

To engage this parameter, set this parameter to the value of Y (yes). This action prevents the public name of the called party from appearing on the display of the caller. When set to the value of N (no), the public name of the called party appears on the display of the calling party.

Rules in provisioning

To activate this feature, use table control to set the value of this office parameter to the value of Y or N.

Set this parameter to the value of Y if the called party does not want the name on the display of the calling party.

Set this parameter to the value of N if the called party wants their name displayed on the display of the calling party.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

If the office parameter is not used, the patch JBD02 does not receive a selection control.

REVERSE_DISPLAY_DISALLOWED (end)

Verification

Does not apply

Memory requirements

This parameter requires 1 byte of protected data store (DSPROT).

Dump and restore rules

Before the introduction of this office parameter, ACT patch JBD02 provided this functionality. When a site upgrades, query the activation status of ACT patch JBD02. The site upgrades from a load with ACT patch JBD02 to a load with this office parameter. Set this office parameter to the activity of patch JBD02. If patch JBD02 is active in the previous load, set the value of office parameter REVERSE_DISPLAY_DISALLOWED to the value of Y. If patch JBD02 is not active in the previous load, leave this parameter set to the default value N.

Parameter history**NA007**

This parameter was introduced in NA007.

RMAN_REASGNAGT_CHGROUTE_IN_DUMP

Parameter name

RMAN_REASGNAGT_CHGROUTE_IN_DUMP

Functional description

This parameter provides optionality for the AF7483, Automatic Call Distribution (ACD) Login During Imaging feature in table OFCVAR.

If you set this parameter to Y, you can use the following Remote Load Management commands during an image dump:

- Change Night Service Route
- Change Overflow Route
- Change Threshold Route
- Reassign Agent Position

When you use these commands, other commands are disallowed.

When you set this parameter to N, the following occurs:

- The commands do not work during an image dump.
- The Down Stream Processor (DSP) receives a return error message.

Provisioning rules

Not applicable.

Range information

Minimum	Maximum	Default
N	Y	N

Activation

Immediate

Dependencies

Not applicable.

RMAN_REASGNAGT_CHGROUTE_IN_DUMP (end)

Consequences

If you do not use the office parameter, you can not activate feature AF7483.

Verification

Not applicable.

Memory requirements

This parameter requires one byte of the DSP.

Dump and restore rules

Not applicable.

Parameter history**NA010**

NA010 introduced this office parameter.

RMSG_MAJALARM

Parameter name

Rapid Messaging Major Alarm

Functional description

This parameter holds the minor, major, and critical thresholds for the OMAJ lines alarm. The OMAJ lines alarm appears under the lines (Lns) header in the MAP status display.

The OMAJ lines alarm activates when the number of line equipment numbers (LEN) with two or more out-of-service logical terminal identifiers (LTID) crosses one of the three thresholds. When two or more LTIDs for a posted LEN are out-of-service because of rapid messaging, the failure code O appears. This failure code appears under the F field in the LTP level of the MAP display.

Provisioning rules

This parameter holds values for the following:

- minor alarm threshold for lines office wide
- major alarm threshold for lines office wide
- critical alarm threshold for lines office wide

Change the values of this parameter by using the ALMSTAT OMAJ command at the LTP level of the MAP display. The thresholds are available for viewing in table OFCVAR.

Note: Use the ALMSTAT OMAJ command to change the values of this parameter. Using the table editor to change the threshold values does not update the alarms.

Range information

Minimum	Maximum	Default
0	32767	Minor alarm-10 Major alarm-20 Critical alarm-30

RMSG_MAJALARM (end)

Activation

Immediate

Dependencies

Not applicable

Consequences

Consequences for this parameter are

- If an alarm threshold value is zero, the OMAJ alarm displays continuously.
- If an alarm threshold is lower than expected, the OMAJ alarm can display continuously.
- If an alarm threshold is higher than expected, the OMAJ alarm does not indicate rapid messaging problems office wide.

Verification

Monitor the number of ISDN lines that have the O failure code and look for the following:

- When the number of lines reaches the minor alarm threshold, the OMAJ minor alarm displays.
- When the number of lines reaches the major alarm threshold, the OMAJ major alarm displays.
- When the number of lines reaches the critical alarm threshold, the OMAJ critical alarm displays.

Memory requirements

Not applicable

Dump and restore rules

Not applicable

Parameter history**NA010**

This parameter was introduced by AF7449, BRI Maintenance for Rapid Messaging.

RMSG_MINALARM

Parameter name

Rapid Messaging Minor Alarm

Functional description

This parameter holds the minor, major, and critical thresholds for the OMIN lines alarm. The OMIN lines alarm appears under the lines (Lns) header in the MAP status display.

The OMIN lines alarm activates when the number of line equipment numbers (LEN) with one out-of-service logical terminal identifier (LTID) crosses one of the three thresholds. When one LTID for a posted LEN is out-of-service because of rapid messaging, the failure code o appears. This failure code appears under the F header in the LTP level of the MAP display.

Provisioning rules

This parameter holds values for the following:

- minor alarm threshold for lines office wide
- major alarm threshold for lines office wide
- critical alarm threshold for lines office wide

Change the values of this parameter by using the ALMSTAT OMIN command at the LTP level of the MAP display. The thresholds are available for viewing in table OFCVAR.

Note: Use the ALMSTAT OMIN command to change the values of this parameter. Using the table editor to change the threshold values does not update the alarms.

Range information

Minimum	Maximum	Default
0	32767	Minor alarm-10 Major alarm-20 Critical alarm-30

Activation

Immediate

RMSG_MINALARM (end)

Dependencies

Not applicable

Consequences

Consequences for this parameter are

- If an alarm threshold value is zero, the OMIN alarm displays continuously.
- If an alarm threshold is lower than expected, the OMIN alarm can display continuously.
- If an alarm threshold is higher than expected, the OMIN alarm does not indicate rapid messaging problems office wide.

Verification

Monitor the number of ISDN lines that have the o failure code and look for the following:

- When the number of lines reaches the minor alarm threshold, the OMIN minor alarm displays.
- When the number of lines reaches the major alarm threshold, the OMIN major alarm displays.
- When the number of lines reaches the critical alarm threshold, the OMIN critical alarm displays.

Memory requirements

Not applicable

Dump and restore rules

Not applicable

Parameter history**NA010**

This parameter was introduced by AF7449, BRI Maintenance for Rapid Messaging.

SCAI_CONTINUITY_AUDIT_INTERVAL

Parameter name

Switch Computer Application Interface Continuity Audit Interval

Functional description

This parameter specifies the number of minutes between executions of the switch/computer application interface (SCAI) continuity audit. This audit verifies the switch-to-host continuity of SCAI applications.

Rules in provisioning

To turn off the SCAI continuity audit, set this parameter to a value of 0 (zero). You can set this parameter to the number of minutes desired between SCAI continuity audits.

The time the audit requires varies according to the number of SCAI applications and SCAI links. This audit runs at a lower priority than call processing. The time required for the audit depends on the duration of the traffic.

If this parameter changes, the implemented change in value occurs during the next SCAI audit process. For example, if the parameter value changes from 30 to 60, the change occurs within the next 30 min. After 30 min the SCAI uses the new value of 60 min.

Range information

Minimum	Maximum	Default
0	720	30

Activation

Immediate

Dependencies

Does not apply

Consequences

Audit frequencies drop with higher values.

SCAI_CONTINUITY_AUDIT_INTERVAL (end)

Verification

Does not apply

Memory requirements

This parameter value requires 2 words of memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**BCS32**

This parameter was introduced in BCS32.

SDIAGALARM

Parameter name

Short Diagnostic Alarm

Functional description

Use this parameter to set alarm thresholds for short diagnostic failures. The system flags these failures under the F field with an uppercase S on a MAP display for a posted line. A counter and three threshold levels, minor, major, and critical, are maintained for the failure type. An alarm condition occurs when one or more of the failure counters exceeds one of the threshold levels.

To change the value of this parameter, use the ALMSTAT command at the LTP MAP level.

Rules in provisioning

Specifies the alarm thresholds for short diagnostic failures. For example, the default value of 10 20 30 specifies minor, major, and critical alarm thresholds.

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	10 20 30

Activation

Use the ALMSTAT command at the LTP MAP level to change this parameter. The changed command enables an update of current alarms to reflect any failures with the new values.

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

SDIAGALARM (end)

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

SEAS_LRF_GTT_OCC

Parameter name

Signaling Engineering And Administration System Global Title Translation Failure Occurrences

Functional description

A DMS Signal Transfer Point (STP) switching unit with the Signaling Engineering and Administration System (SEAS) software package requires this parameter. This package supports the user application layer (UAL) interface to the signaling engineering and administrative center (SEAC). This package also supports the user program layer (UPL). The UAL interface and the transport layer of the OSI communications protocol model are equal. The UPL software layer provides SEAS application-level support for the STP.

Bellcore developed a database for SEAS, an operations-support software system. This database provides mechanized support capabilities for the personnel of the operating company SEAC. The database provides the capability to provision, engineer, and administer the network of STPs and signaling links. The STPs and Signaling links are for each Bell company or Bell operating company (BOC).

This parameter specifies the maximum number of occurrences of global title translation (GTT) failures reported to the SEAC. The system reports these failures in the form of REPT_NOTRNS SEAS messages. The GTT failures must occur in the time period parameter SEAS_LRF_GTT_PER in table OFCVAR specifies.

If this parameter is set to a value of 0 (zero), REPT_NOTRNS SEAS messages are not sent.

Rules in provisioning

Specify the maximum number of reported occurrences of GTT failures for any number other than 10. Report these failures to the SEAC in the time period parameter SEAS_LRF_GTT_PER specifies in table OFCVAR.

Set the value of this parameter to 0 when the feature is not activated. The default value serves as the recommended value.

SEAS_LRF_GTT_OCC (end)

Range information

Minimum	Maximum	Default
0	255	10

Activation

Immediate

Dependencies

Does not apply

Consequences

A smaller number of REPT_NOTRNS SEAS messages are sent in the time period when the value of this parameter decreases. A larger number of REPT_NOTRNS SEAS messages are sent in the time period when the value of this parameter increases.

Verification

Does not apply

Memory requirements

This parameter does not have impact on memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**BCS26**

This parameter was introduced in BCS26.

SEAS_LRF_GTT_PER

Parameter name

Signaling Engineering And Administration System Global Title Translation Failure Time Period

Functional description

DMS Signal Transfer Point (STP) switching unit requires this parameter with the Signaling Engineering and Administration System (SEAS) software package. This package supports the user application layer (UAL) interface to the signaling engineering and administrative center (SEAC). This package supports the user program layer (UPL). The UAL interface is the same as the transport layer of the OSI communications protocol model. The UPL software layer provides SEAS application-level support for the STP.

The SEAS is an operations-support software system with a database developed by Bellcore. The SEAS provides operating company SEAC personnel with mechanized support capabilities to, provision, engineer and administer the network of STPs and signaling links. The network of STPs and signaling links are for each regional Bell company or Bell operating company (BOC).

This parameter specifies the time period in minutes the system needs to report to the SEAC. The value of parameter SEAS_LRF_GTT_OCC in table OFCVAR, specifies the maximum number of global title translation (GTT) failures. The system reports the number of failures to the SEAC (in the form of REPT_NOTRNS SEAS messages).

Rules in provisioning

Specify the time period in minutes that the system takes to report the maximum number of GTT failures, to the SEAC. The number must be equal to the value of parameter SEAS_LRF_GTT_OCC in table OFCVAR.

The recommended value is the default value.

Set the value of this parameter to 180 when this feature is not activated.

Range information

Minimum	Maximum	Default
1	180	5

SEAS_LRF_GTT_PER (end)

Activation

Immediate

Dependencies

Does not apply

Consequences

A decrease in the value of this parameter results in a shorter time period.

An increase in the value of this parameter results in a longer time period.

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**BCS26**

This parameter was introduced in BCS26.

SEAS_LRF_MTP_OCC

Parameter name

Signaling Engineering and Administration System Message Transfer Part
Failure Occurrences

Functional description

A DMS Signal Transfer Point (STP) with the Signaling Engineering and Administration System (SEAS) software package requires this parameter. This package supports the user application layer (UAL) interface to the signaling engineering and administrative center (SEAC). This parameter also supports the user program layer (UPL). The UAL interface is the same as the transport layer of the OSI communications protocol model. The UPL software layer provides SEAS application-level support for the STP.

The SEAS is an operations-support software system with a database developed by Bellcore. The SEAS provides personnel of the operating company SEAC with mechanized support capabilities to provision, engineer and administer the network of STPs and signaling links. The network of STPs and signaling links are for each regional Bell company or Bell operating company (BOC).

This parameter specifies the maximum number of Message Transfer Part (MTP) routing errors that the system reports to the SEAC. The reports are in the form of REPT_MTPERR SEAS messages. The system must report the errors in the time period that office parameter SEAS_LRF_MTP_PER specifies.

Rules of provisioning

Specify the maximum number of errors that the system can report.

When set to a value of 0 (zero), the system does not send REPT_MTPERR SEAS messages.

Range information

Minimum	Maximum	Default
0	255	10

Activation

Immediate

SEAS_LRF_MTP_OCC (end)

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**BCS29**

This parameter was introduced in BCS29.

SEAS_LRF_MTP_PER

Parameter name

Signaling Engineering And Administration System Message Transfer Part
Failure Time Period

Functional description

A DMS Signal Transfer Point (STP) with the Signaling Engineering and Administration System (SEAS) software package requires this parameter. This package supports the user application layer (UAL) interface to the signaling engineering and administrative center (SEAC). This package also supports the user program layer (UPL). The UAL interface is the same as the transport layer of the OSI communications protocol model. The UPL software layer provides SEAS application-level support for the STP.

The SEAS is an operations-support software system with a database developed by Bellcore. The SEAS allows SEAC personnel at the operating company to provision, engineer and administer STPs and signaling links. The SEAC personnel can provide functions to STPs and signaling links for each regional Bell operating company.

Rules in provisioning

This parameter specifies the time, in minutes, that the SEAC receives a maximum number of Message Transfer Part (MTP) routing errors. Office parameter SEAS_LRF_MTP_OCC specifies the maximum number of MTP routing errors. The SEAC receives the errors in the form of REPT_MTPERR SEAS messages.

Range information

Minimum	Maximum	Default
1	180	5

Activation

Immediate

Dependencies

Does not apply

SEAS_LRF_MTP_PER (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS29**

This parameter was introduced in BCS29.

SIG_TST

Parameter name

Signaling Test

Functional description

This parameter controls the feature that allows the signaling tests, to run after a diagnostic test. The diagnostic test runs from system maintenance or from the trunk test position (TTP).

Rules in provisioning

Set the value of this parameter to Y (yes). This setting allows signaling tests to run from system maintenance or from the TTP.

Set the value of this parameter to N (no) if this feature is not required.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Signaling tests apply to trunk groups that have field SIGTST in table CLLIMITCE set to Y.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS15**

This parameter was introduced in BCS15.

SLE_LANGUAGE

Parameter name

Screening List Editing Language

Functional description

This parameter is associated with the screening list editing (SLE) portion of the call screening feature. Call screening services allow subscribers to screen out some incoming calls. For each call screening feature, the switch maintains a list of directory numbers (DN) that identifies incoming calls for special treatment. The SLE allows the subscriber to create and modify these lists.

This parameter specifies the language in which subscribers receive announcements. The two fields are PRIMARY and SECONDARY.

The system provides announcements in the language that the PRIMARY field specifies. Subscribers with the SL line option, receive announcements in the language that the SECONDARY field specifies.

The values for this parameter can be two of the following:

- LANG1
- LANG2
- NIL

Rules in provisioning

Set the PRIMARY field to the language in which SLE users will hear announcements. The PRIMARY field can be LANG1 OR LANG2. Set the SECONDARY field to the language in which subscribers with the SL line option will hear SLE announcements. The SECONDARY field can be LANG1, LANG2 OR NIL. If the office uses one language only, set the SECONDARY field to NIL.

The PRIMARY field cannot be NIL.

Range information

Minimum	Maximum	Default
		LANG1 NIL

SLE_LANGUAGE (end)

Activation

Immediate

Dependencies

Does not apply

Consequences

If the fields are not set correctly, SLE users do not hear announcements in the correct language.

Verification

From a telephone without the SL option, activate an SLE session. The user hears the announcement in the language that the PRIMARY field of the parameter specifies.

From a telephone with the SL option, develop an SLE session. The user will hear the announcement in the language that the SECONDARY field of the parameter specifies.

Memory requirements

Each of the units requires 2 words of memory.

Dump and restore rules

If the previous BCS does not have SLE_LANGUAGE, leave the parameter at the default value. If the previous BCS has the parameter, copy the current value when you perform a dump and restore.

SLE_VOICEBACK_PUBLIC_ICM

Parameter name

Screening List Editing Voiceback Public Incoming Call Memory

Functional description

This parameter controls the voiceback of directory numbers (DN). This parameter controls the voiceback of DNs in the screening list of a subscriber with the screening list editing (SLE) feature. This parameter controls the voiceback of DNs in the screening list from incoming call memory.

Rules in provisioning

Set the value of this parameter to Y (yes). To activate voiceback of DNs in screening lists from incoming call memory. The system voices back the DNs that are not marked private.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter value requires 1 word of memory.

Dump and restore rules

Copy the existing value of this parameter when you perform a dump and restore.

SLE_VOICEBACK_PUBLIC_ICM (end)

Parameter history

BCS32

This parameter was introduced in BCS32.

SLNETWORK_NAME

Parameter name

SL-100 Network Name

Functional description

An SL-100 switching unit that has parameter SLNETWORK_ENABLED in table OFCVAR set to Y (yes) requires this parameter. This parameter specifies the three-character name that identifies the node of the system.

Rules in provisioning

The node name cannot match the node entered in table SLNWK as the Sub-regional control facility (SRCF) node name.

All of the network control commands originate either from SRCF or SL-100 contain fields. The fields identify the site node name and the SRCF node name.

Range information

Minimum	Maximum	Default
		NIL

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

SLNETWORK_NAME (end)

Dump and restore rules

Copy the existing value of this parameter when you perform a dump and restore.

Parameter history**BCS23**

This parameter was introduced in BCS23.

SLU_7DIGIT_DN

Parameter name

Subscriber Line Usage (SLU) 7-Digit Directory Number (DN)

Functional description

SLU_7DIGIT_DN provides the option of 7-digit or 10-digit DNs for SLU command interpreter (CI) commands and SLU-related OMSHOW procedures.

Provisioning rules

Operating company personnel can set SLU_7DIGIT_DN to "N" for 10-digit DNs.

Range information

Minimum	Maximum	Default
N	Y	Y

Activation

Immediate.

Dependencies

Not applicable.

Consequences

If operating company personnel change the office parameter (OFCPARM), the results are as follows:

- For a change from "Y" to "Y", the message is as follows:

ALREADY IN 7 DIGIT MODE, NO ACTION TAKEN

- For a change from "Y" to "N", the message is as follows:

WARNING: A CHANGE FROM 7 DIGIT MODE TO 10 DIGIT MODE WILL
CHANGE SLU REPORTING FORMAT AND POSSIBLY IMPACT DATA
COLLECTION. DO YOU REALLY WANT TO CONTINUE?

— If the response is "N", the message is as follows:

COMMAND HAS BEEN CANCELED!! (N)

— If the response is "Y", the command executes.

SLU_7DIGIT_DN (end)

- For a change from “N” to “N”, the message is as follows:

ALREADY IN 10 DIGIT MODE, NO ACTION TAKEN

- For a change from “N” to “Y”, the message is as follows:

WARNING: A CHANGE FROM 10 DIGIT MODE TO 7 DIGIT MODE WILL
CHANGE SLU REPORTING FORMAT AND POSSIBLY IMPACT DATA
COLLECTION. DO YOU REALLY WANT TO CONTINUE?

— If the response is “N”, the message is as follows:

COMMAND HAS BEEN CANCELED!! (N)

— If the response is “Y”, an example of the message is as follows:

AMBIGUOUS DN WITH KEY: D10 416 224 0001 IN TABLE:ENG640I

THE CHANGE FROM 10 DIGIT MODE TO 7 DIGIT MODE WILL NOT BE
POSSIBLE UNTIL PRECEDING AMBIGUOUS TUPLES ARE REMOVED FROM
SLU TABLES (Y with any ambiguous DN in SLU tables)

Verification

Operating company personnel can check the SLU format to verify the operation of the OFCPARM.

Memory requirements

SLU_7DIGIT_DN requires one word of memory.

Dump and restore rules

Not applicable.

Parameter history

CSP09

Introduction of SLU_7DIGIT_DN.

SLVP_RCHD_TIMER

Parameter name

Single Line Variety Package Option RCHD Timer

Functional description

This parameter contains two timing values, MAX_RING_DURATION and INTER_RING_DELAY. You will find the first value associated with a single line variety package (SLVP) intercom or an SLVP transfer. The first value determines how these two attributes can ring without creating an off-hook extension. The second value determines the time span between reminder rings for SLVP hold.

When using SLVP hold with a parameter value of default, a reminder ring occurs every minute for a maximum of 3 min. The system takes down a held call 15 s after the last reminder ring. This occurs if the system did not detect an off-hook extension.

An extension must dial an access code to attempt to initiate an SLVP intercom. In this event, the MAX_RING_DURATION value determines how long the line rings if the system does not detect an off-hook extension. The extension also dials an access code to transfer an existing call using SLVP transfer. The MAX_RING_DURATION value determines how long the line rings before the system abandons the call. This value also determines how long a call can remain on hold using SLVP hold.

The accepted values for INTER_RING_DELAY are 0 and 15 to 300 s.

The INTER_RING_DELAY value begins when a subscriber places the handset on-hook after the subscriber dials the SLVP access code. The system places a reminder ring on the line when the timer expires to ensure the time restarts. This process continues until an extension comes off-hook to retrieve the call, the held party releases, or MAX_RING_DURATION expires.

The accepted values for MAX_RING_DURATION are 15 to 300 s. Two values can denote that the system does not give a reminder ring. These values are zero or a value equal to the timing value established by the operating company.

The office parameter is only relevant when line option SLVP or option Residential Call Hold (RCHD) is assigned to a line.

Rules in provisioning

A value equal to MAX_RING_DURATION or a value of zero for INTER_RING_DELAY results in no reminder ring.

SLVP_RCHD_TIMER (end)

Values entered between 0 and 15 for MAX_RING_DURATION and 1 and 15 for INTER_RING_DELAY result in errors. These values ensure that the system has enough time to complete the task before the timeout. The timeout requests the reminder ring again.

Range information

Minimum	Maximum	Default
15 0	300 300	195 60

Activation

Immediate

When a technician changes the value of either of these timing values, an immediate effect on the system occurs. Current calls could notice a change in the frequency of reminder rings. Technicians must change the values of this parameter should during low traffic periods.

Dependencies

Does not apply

Consequences

Does not apply

Verification

To verify this parameter, activate SLVP hold from a line with option SLVP. Determine the time between reminder rings and the duration of the hold.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter History**BCS31**

You will find this parameter introduced in BCS31.

SMDR_LOG_RPT

Parameter name

Station Message Detail Recording Log Report

Functional description

A switching unit with North American translations and the Integrated Business Network (IBN) feature requires this parameter. This parameter specifies if the system generates Station Message Detail Recording (SMDR) billing information AMAB150 logs.

Rules in provisioning

This parameter contains two fields. The CHOICE field is the left hand value. The MAX_DUR field is the right hand value.

Set the value of field CHOICE to ALL, ANS_ONLY, or NONE to specify which calls the system prints in the AMAB150 log.

The value ALL specifies that the system generates log reports for all SMDR calls.

The value ANS_ONLY specifies that the system generates AMAB150 log reports for answered calls only.

The value NONE specifies that the system does not generate AMAB150 log reports.

Set field MAX_DUR to a value of 0 to 32 767 min. The value specifies the threshold for the maximum length of calls printed as part of the report. A value of zero does not apply a threshold.

Range information

Minimum	Maximum	Default
		NONE 0

Activation

Immediate

SMDR_LOG_RPT (end)

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

SO_ALLOW_REDUNDANT_FEATURE

Parameter name

Service Order Allow Redundant Feature

Functional description

This parameter enables or disables the Service Order Allow Redundant Feature. This parameter changes the behavior of the following SERVORD commands:

- DEO. If you enable office parameter SO_ALLOW_REDUNDANT_FEATURE, SERVORD accepts attempts to delete from a DN an option or feature that was not assigned to the DN. Instead of rejecting the DEO command with an error message, SERVORD accepts the command entry and displays a message that verifies acceptance. The text of the messages can vary according to the option or feature you are adding.
- ADO. If you enable office parameter SO_ALLOW_REDUNDANT_FEATURE, SERVORD accepts attempts to add an option or feature to a DN when the DN already has the option or feature. Instead of rejecting the ADO command with an error message, SERVORD accepts the command entry and displays a message that verifies acceptance. The text of the messages can vary according to the option or feature you are adding.

Provisioning rules

Set the value of this parameter to Y to enable the Service Order Allow Redundant Feature for the ADO and DEO commands.

Set the value of this parameter to N to disable the Service Order Allow Redundant Feature for the ADO and DEO commands.

Range information

The choice of values for this parameter is Y or N.

Minimum	Maximum	Default
		N

Activation

Immediate. Activation affects whole office/computing module (CM) and all users, current and future.

SO_ALLOW_REDUNDANT_FEATURE (end)

Dependencies

Not applicable

Consequences

Not applicable

Verification

Not applicable

Memory requirements

This parameter has no impact on memory.

Dump and restore rules

Not applicable

Parameter history**NA014**

Added additional line options to the Service Order Allow Redundant Feature in activity 59017494.

NA010

AF7511, added activation note.

NA009

AF7334, Allow ADO and DEO Redundant Features introduced the parameter SO_ALLOW_REDUNDANT_FEATURE to table OFCVAR.

SO_ALLOW_REDUNDANT_FEATURE_CHF

Parameter name

Service Order Allow Redundant Feature Change

Functional description

This parameter enables or disables the Service Order Allow Redundant Feature Change feature, which changes the behavior of the CHF SERVORD command.

Use SO_ALLOW_REDUNDANT_FEATURE_CHF to reduce service order failure and allow the command to add features/options not already assigned when specified on a CHF command.

If you enable this office parameter, SERVORD accepts and processes as an ADO Features/Options not assigned to a line when they are specified on the CHF command.

The SO_ALLOW_REDUNDANT_FEATURE_CHF parameter changes the behavior of the SERVORD CHF command. When you disable this parameter, SERVORD rejects CHF commands that contain features or options not already assigned to the DN (directory number). CHF allows you only to change a feature or option that is already assigned to the line. If you enable this parameter, SERVORD handles such options as an implied ADO.

Provisioning rules

Set the value of this parameter to Y to enable the Service Order Allow Redundant Feature for the CHF command.

Set the value of this parameter to N to disable the Service Order Allow Redundant Feature for the CHF command.

Range information

The choice of values for this parameter is Y or N.

Minimum	Maximum	Default
		N

Activation

Immediate

SO_ALLOW_REDUNDANT_FEATURE_CHF (end)

Dependencies

None

Consequences

Not applicable

Verification

Not applicable

Memory requirements

This parameter does not affect memory.

Dump and restore rules

Not applicable

Parameter history**NA014**

Added additional line options to the Service Order Allow Redundant Feature in activity 59017494.

NA010

Attention box added. Currently specified new features or options on a CHF command cause the command to be rejected.

NA009

This parameter was introduced.

SO_CICP_OFRT_ICP_ALLOWED

Parameter name

Service Order Change Intercept Office Route Intercept Allowed

Functional description

Office parameter Service Order Change Intercept Office Route Intercept Allowed (SO_CICP_OFRT_ICP_ALLOWED) controls the Service Order System (SERVORD) command CICP (Change Intercept). This parameter allows the CICP command to change the intercept of a directory number (DN) routed to an office route (OFRT). The CICP command changes the type of intercept on DNs that are not assigned.

Rules in provisioning

Office parameter SO_CICP_OFRT_ICP_ALLOWED is added in table OFCVAR (Office Variable) as a boolean switch. When the value of this parameter is Y (yes), the CICP command changes DNs from OFRT to intercept. When the value is N (no), the CICP command does not change DNs from OFRT to intercept.

A user can attempt to use the CICP command to change a DN on an OFRT to intercept. When the user attempts this change, the system prompts the user to use SERVORD command Out-Directory Number (OUTDN). This prompt occurs when the value of this parameter is set to N. The OUTDN command deletes a block of DNs associated with an office route. The OUTDN command also places the DNs on the intercept Blank Directory Number (BLDN).

The SERVORD prompt INTERCEPT_NAME can have the following valid entries. Enter BLDN if the DN is not known.

- AINT=attendant intercept (IBN line only)
- ANCT=machine intercept
- BLDN=blank DN
- CANN=customer announcement (IBN lines only)
- OPRT=operator intercept
- UNDN=undefined DN

Office parameter SO_CICP_OFRT_ICP_ALLOWED permits the user to change between OPRT and BLDN.

SO_CICP_OFRT_ICP_ALLOWED (end)

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

Consequences

The CICP command does not check if the OFRT is a CANN intercept. With the OUT command applied to a line set to CANN, the CANN is researched in table Customer Announcement (CUSTANN). The CANN is researched with the customer group of the line and the CANN number as the table key applied to an OFRT. Table Directory Number Inventory (DNINV) exhibits a T selector (route to OFRT). After the OUT command completes a line routed to CANN is not different from any other OFRT. The CICP command recognizes and disposes of the CANN as an OFRT, not as a CANN intercept.

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**NA003**

This parameter was introduced in NA003.

SO_PROMPT_FOR_CABLE_PAIR

Parameter name

Service Order Prompt For Cable Pair

Functional description

All local or combined local and toll switching units require this parameter. This parameter specifies if the service order system echoes cabling information on the hard-copy terminal of an operator.

Rules in provisioning

If the value of this parameter is Y (yes), the service order system echoes cabling information on the hard-copy terminal of an operator.

If the value of this parameter is the default of N (no) this function does not apply.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

SO_PROMPT_FOR_CABLE_PAIR (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

SO_PROMPT_FOR_LTG

Parameter name

Service Order Prompt For Line Treatment Group

Functional description

This parameter determines if the service order system prompts the user for the line treatment group where required.

Rules in provisioning

The number of current line treatment groups for the office determines the value of this parameter. If the number of current line treatment groups is one, set this parameter to N (no). If the number is not one, set the value of this parameter to Y (yes).

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Table LINEATTR specifies the line treatment groups.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

SPCL_SECURITY_A_DR

Parameter name

Automatic Number Identification Special Security

Functional description

Switching units with feature package NTX441AA require this parameter.

Rules in provisioning

If you find the operating company purchased this software package, contact DSD Marketing in Bramalea for further details.

This parameter affects the Billing and Automatic Message Accounting (AMA) entries.

Range information

Minimum	Maximum	Default
0000	9999	0000

Activation

Immediate

Dependencies

Does not apply

Consequences

The operating company personnel must carefully read the information on feature package NTX441AA.

Verification

Does not apply

Memory requirements

This parameter value requires 1 word of memory.

Dump and restore rules

Copy the existing value of this parameter when doing a dump and restore.

SPCL_SECURITY_A_DR (end)

Parameter History

BCS14

You will find this parameter introduced in BCS14.

SPECIAL_AMA_REPORT

Parameter name

Special Automatic Message Accounting Report

Functional description

This parameter determines if the system prints a special report and records the report on tape. The default of this parameter turns the special report off. Turn on this parameter only for debugging purposes.

Rules in provisioning

Descriptions of the three fields in the unit AMARPT appear in the following table.

Field	Entry	Explanation
ON_OFF	Y or N	Enter Y (yes) to print if the information. Enter N (no) to not print the report.
WHICH_CALLS	ONLY or BOTH	Enter ONLY to print only calls that answer. Enter BOTH to print all calls.
MAX_DUR	0 to 32767	Enter the number of seconds that specifies a threshold for the maximum length of calls to print. The system prints these calls as part of the report.

Range information

Minimum	Maximum	Default
		N BOTH 0

Activation

Immediate

Dependencies

Does not apply

SPECIAL_AMA_REPORT (end)

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

SRCF_FILE_VOLNAME

Parameter name

Sub-regional Control Facility File Volume Name

Functional description

An SL-100 switching unit with the Sub-Regional Control Facility (SRCF) feature requires this parameter.

The SRCF feature transmits files between SCRF and SL-100, using FILE/FREQ commands. The FILE/FREQ commands are part of the NDMS commands set for file transfer and file management activities.

The SRCF feature performs the following functions:

- sends files to or from SRCF
- provides CI commands to initiate and monitor file transfer
- sends and receives files at the same time

Rules in provisioning

The FREQ command does not provide information about the requested file like the device name and volume number. This parameter specifies the 1 to 16 character device/volume name used to place the incoming files from the SRCF. The 1 to 16 character device/volume name also allows the user to find the requested file to transfer to the SRCF.

Range information

Minimum	Maximum	Default
		NIL

Activation

Immediate

Dependencies

The SRCF feature is optional. The SRCF feature is part of software package NTX716AA. The SRCF feature requires software packages NTX347AA (DMS-100 Base Data Communication) and NTX273AA (Multi-Protocol Controller).

SRCF_FILE_VOLNAME (end)

The SRCF feature requires one or more entries in tables MPC, RASAPPL, SLNWK and X25LINK.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

BCS24

This parameter was introduced in BCS24.

SYSLOG_ACCESS

Parameter name

Field SYSLOG Access

Functional description

This parameter safeguards the SYSLOG field in table LOGCLASS. This parameter is set to Y, first to allows the default tuples to be entered at loadbuild time. To provide security to the SYSLOG during normal operation, set the parameter to N after the loadbuild.

To change the SYSLOG field in table LOGCLASS, the parameter is set to Y (yes).

The field SYSLOG in table LOGCLASS specifies if a LOG is a system log. The field SYSLOG in table LOGCLASS removes the SYSLOG command in LOGUTIL.

All SYSLOGS are placed in table LOGCLASS with the SYSLOG field equal to Y from the EXT files at loadbuild time.

Rules in provisioning

The value of this parameter must be Y when you modify field SYSLOG. The value of this parameter must be Y when adding/deleting tuples with field SYSLOG in table LOGCLASS equal to Y (yes).

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

SYSLOG_ACCESS (end)

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

This parameter must have a value of Y (yes) to allow default syslog tuples to be added at loadbuild time. Set the value of the parameter to N (no) at dump/restore time to protect field SYSLOG in table LOGCLASS.

Parameter history

BCS20

This parameter was introduced in BCS20.

TABLE_ACCESS_CONTROL

Parameter name

Table Access Control

Functional description

A switching unit with the Security Table Enhancement feature requires the Table Access Control parameter. The Security Table Enhancement feature allows the operating company to activate or deactivate this parameter.

Rules in provisioning

Set the value of this parameter to Y (yes) to activate the Security Table Enhancement feature.

Set the value of this parameter to N (no) to deactivate the Security Table Enhancement feature.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

When this parameter is set to Y, the operating company can activate or deactivate the Security Table Enhancement feature for the table. The operating company changes the value of fields VALLACC or DENACC in table CUSTPROT to activate or deactivate this feature.

Office parameter MONITOR_TABLE_ACCESS in OFCOPT is set to a value of Y to function.

Consequences

Does not apply

Verification

Does not apply

TABLE_ACCESS_CONTROL (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

BCS18

This parameter was introduced in BCS18.

TASINTVL

Parameter name

Time Assignment Speech Interpolation Interval

Functional description

This parameter determines the frequency with which the following occur:

- the Time Assignment Speech Interpolation (TASI) signal is sent to the Dynamic Load Control (DLC) unit
- the TASI clear signal is set again
- the software and the hardware are checked to remain in step

Rules in provisioning

This parameter controls the audit interval from the TASI DLC (three times the specified value). This parameter also controls the frequency at which the TASI CLEAR lead is updated (the specified value).

The operating company determines the value of this parameter.

Range information

Minimum	Maximum	Default
1	60	3

Activation

The value of this parameter must be the amount of time specified.

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

TASINTVL (end)

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

TBI_CONNECT_OPR_A

Parameter name

Toll Break-in Connect Operator A

Functional description

Switching units with the World Systems and Toll Break In (TBI) features require this parameter. This parameter specifies if subscriber A in a TBI call can stay off-hook and receive a booked call from the operator.

Rules in provisioning

If the value of this parameter is Y (yes), the operator and subscriber A can stay connected (A off-hook) during a TBI.

If the parameter remains at the default value, subscriber A must disconnect (A on-hook) during a TBI.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

TBI_CONNECT_OPR_A (end)

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS28.

TBI_FORCE_RELEASE

Parameter name

Toll Break-in Force Release

Functional description

International switching units with universal translations and the Toll Break-In (TBI) feature require this parameter.

In countries where toll circuits are not common because of high traffic or limited toll circuits, toll calls are often booked. When an operator attempts to set up a booked call, one or both subscribers can be on other calls. The TBI allows the operator to interrupt a call that originates or terminates in a local office. The operator can also offer a toll call to one of the subscribers. The subscriber can accept or refuse the call.

This parameter specifies if the operator can force release the other subscriber from a call. This force release occurs when the call terminates on a subscriber already on a call.

This parameter does not appear in countries that do not require this capability. The default of N (no) guarantees the functionality of TBI does not change in these countries.

In China, the use of the TBI feature depends on which area of the country the switch is located.

The TBI feature requires the conference circuit board NT3X67BB. Conference circuit board NT3X67BB can produce TBI tone as a background tone while the PCM is connected. The NT3X67BB capability allows both speech and tone on the conference circuit.

Each toll break in call requires a three port conference circuit.

Rules in provisioning

Set the value of this parameter to Y (yes) if the operator can force release the other subscriber from a call. The call that the operator releases must terminate on a subscriber already on a call.

Leave this parameter at the default of N (no) if the operator cannot force release the other subscriber from a call. The call that the operator cannot force release terminates on a subscriber already involved in a call.

TBI_FORCE_RELEASE (end)

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

The following parameters associate with the TBI feature:

- TBI_OFFER in table OFCVAR
- TBI_OPR_TIMEOUT in table OFCVAR

The TBI feature affects the value of the following parameters:

- NO_OF_FTR_CONTROL_BLKs in table OFCENG
- NO_OF_FTR_DATA_BLKs in table OFCENG

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS26.

TBI_OFFER

Parameter name

Toll Break-in Offer

Functional description

International switching units with universal translations and the Toll Break-in (TBI) feature require this parameter.

In countries where toll circuits are not common because of high traffic or limited toll circuits, toll calls are often booked. When an operator tries to set up a booked call, one or both of the subscribers can be on other calls. The TBI feature allows the operator to interrupt a call that originates or terminates in a local office. This feature also allows the operator to make a toll call available to a subscriber during a call. The subscriber can accept or not accept the call.

This parameter specifies if the TBI feature is automatic, manual, or off. This parameter does not appear in countries that do not require this capability. The value of OFF guarantees the functionality of TBI does not change.

The TBI feature requires conference circuit board NT3X67BB. Conference circuit board NT3X67BB has the capability to produce TBI tone as a background tone while pulse-coded modulation (PCM) is connected. The NT3X67BB capability allows both speech and tone on the conference circuit.

Each toll break-in call requires a three port conference circuit.

Provisioning rules

The operator can automatically interrupt a call after the operator terminates on a busy line. Set the value of this parameter to AUTOMATIC.

Leave the value of this parameter at default MANUAL if the operator must use the re-ring/TBI key. The operator uses re-ring/TBI key to initiate a TBI after the operator terminates on a busy line.

Activation

Immediate

Dependencies

The TBI feature uses the following table OFCVAR parameters:

- TBI_FORCE_RELEASE in table OFCVAR
- TBI_OPR_TIMEOUT

TBI_OFFER (end)

The TBI feature changes the value of the following parameters:

- NO_OF_FTR_CONTROL_BLKs in table OFCENG
- NO_OF_FTR_DATA_BLKs in table OFCENG

Consequences

None

Verification

Not applicable

Memory requirements

This parameter does not change memory.

Dump and restore rules

A One Night Process (ONP) sets this parameter to the correct default value for the market.

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

MMP14

This parameter is enhanced to allow for manual TBI.

WT011

This parameter is available to Europe and Japan customers.

APC010

AU2943 introduces this parameter to APC100.

BCS26

BCS26 introduces this parameter.

TBI_OPR_TIMEOUT

Parameter name

Toll Break-in Operator Timeout

Functional description

International switching units with universal translations and the Toll Break-in (TBI) feature require this parameter.

In countries where toll circuits are not common because of high traffic or limited toll circuits, toll calls are often booked. When an operator tries to set up a booked call, one or both of the subscribers can be on other calls. The TBI feature allows the operator to interrupt a call that originates or terminates in a local office. This feature also allows the operator to make a toll call available to a subscriber during a call. The subscriber can accept or not accept the call.

This parameter indicates the length of time, in seconds, that an operator can remain on a TBI call. This parameter indicates the maximum number of seconds that the operator can connect to the call.

When the operator breaks in on a call, the TBI tone sounds. The TBI tone advises subscribers that the operator is on the line as long as all parties are on the line.

Rules in provisioning

Indicate the length of time, in seconds if different from 20 s, that an operator can remain on a TBI call.

Indicate the length of time, in seconds, that an operator can remain on a TBI call.

Set the value to the minimum of 10 s if this feature does not apply.

Range information

The following table shows range information.

Minimum	Maximum	Default
10	300	20

Activation

Immediate

TBI_OPR_TIMEOUT (end)

Dependencies

The TBI feature uses the following table OFCVAR parameters:

- TBI_FORCE_RELEASE in table OFCVAR
- LOCAL_TBI_TONE
- TBI_OFFER
- TBI_CONNECT_OPR_A in table OFCVAR

The TBI feature changes the value of NO_OF_FTR_CONTROL_BLKs in table OFCENG.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not change memory.

Dump and restore rules

A One Night Process (ONP) sets this parameter to the correct default value for the market.

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

WT011

This parameter is available to Japan and Europe customers.

APC010

AU2943 introduces this parameter to the APC100 switch.

BCS19

BCS19 introduces this parameter to the DMS-100i switch.

TCAPNM_BLK_QUERY_PRIV_DNS

Parameter name

Transaction Capabilities Application Part Block Query of Private Directory Numbers

Functional description

Switching units with Custom Local Area Signaling Systems (CLASS) feature Calling Name Delivery (CNAMD) Transaction Capabilities Application Part (TCAP) interfaces require this parameter.

This parameter specifies if the system queries the name database when one of the following occurs:

- calling party number has presentation restricted status
- calling party does not activate the following features:
 - Calling-Name-Delivery-Blocking (CNAB)
 - Calling-Name-and-Number-Delivery-Blocking (CNNB)
 - Calling-Name-and-Number-Delivery (CNND)

Rules in provisioning

If the value of this parameter is Y (yes), the system does not query the name database. The system delivers a private indicator to the customer premise equipment (CPE) for the calling name.

If the value of this parameter is N (no), the system queries the name database. The queries to the name database do not depend on the presentation status of the calling party number.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

TCAPNM_BLK_QUERY_PRIV_DNS (end)

Consequences

If the value of this parameter is Y, the name database is not queried when the calling DN is private. A private indicator is delivered for the name.

Verification

When the value of this parameter is Y:

- verify that the system does not perform a TCAP query for a blocked calling DN
- verify that the system delivers a private indicator to the CPE

When the parameter is set to N, verify that the system performs a TCAP query. When the system performs a TCAP query, the system displays the correct information from the name database.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

TCAPNM_INTERLATA_QUERY

Parameter name

Transaction Capabilities Application Part Name InterLATA Query

Functional description

Switching units with the Custom-Local-Area Signaling-Systems (CLASS) feature Calling-Name-Delivery (CNAMD) and Transaction-Capabilities-Application-Part (TCAP) interfaces require this parameter.

This parameter determines if inter Local-Access-Transport-Area (InterLATA) calls require a TCAP query to obtain name information.

Rules in provisioning

If the parameter is Y (yes), the system performs a TCAP query for InterLATA and IntraLATA calls.

If the parameter is N (no) and the call is InterLATA, the system does not perform a TCAP query. The customer premise equipment (CPE) of the called user (if the called line is to receive name information) receives an out-of-area indicator.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

If the parameter is N, the CPE of the called user for InterLATA calls receives an out-of-area or unavailable indicator.

TCAPNM_INTERLATA_QUERY (end)

Verification

If the parameter is Y, verify that a TCAP query is performed for InterLATA calls when:

- a calling name is required
- the TCAP method is to be utilized

If the parameter is N, verify that the system does not perform a TCAP query for the same InterLATA call.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS36.

TCMALARM

Parameter name

Time Compressed Multiplex Synchronization Alarm

Functional description

Switching units with the Datapath feature require this parameter. This parameter specifies the threshold values for minor, major, and critical alarms. These alarms are activated if too many Datapath lines flag with time compressed multiplex (TCM) synchronization (SYNC) failures.

This parameter associates with the failure flag T.

Rules in provisioning

Specify the alarm thresholds for Datapath lines flagged as TCM SYNC failures. For example, the default value of 100 150 200 represents:

- a minor alarm threshold of 100 failures
- a major alarm threshold of 150 failures
- a critical alarm threshold of 200 failures

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	100 150 200

Activation

Use the ALMSTAT command at the LTP MAP level only to change this parameter. When the ALMSTAT command changes the parameter value, all current alarms are updated to reflect the failures with the new values.

Dependencies

Does not apply

Consequences

If the alarm threshold value is set too low, the alarm sounds often.

TCMALARM (end)

Verification

Simulate SYNC problems on Datapath lines. Verify that the alarms are activated.

Memory requirements

This parameter value requires 1 word of memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS27.

TERM_ARTER_FREQUENCY

Parameter name

Terminal ARTER Frequency

Functional description

In Turkey, the following switching units require the ARTER trunk testing feature:

- DMS-200 (toll)
- DMS-100 (local)
- DMS-300 (gateway)

This parameter is not required for switching units in North America.

The term ARTER describes equipment for automatic transmission testing of outgoing trunks in the Turkish network. The ARTER feature:

- selects and seizes an outgoing trunk
- outputs a digit code
- connects to a 6805 test unit in the distant office

The two versions of the 6805 test unit are for two-wire trunks and four-wire trunks. Each trunk uses a different version.

This feature provides a DMS equivalent to the 6805 function for DMS-200, DMS-100 and DMS-300 switching units.

This feature allows local, toll, and gateway switching units to perform tests on outgoing trunks. The local, toll and gateway switching units can perform tests on outgoing trunks to a DMS-200, DMS-100 or DMS-300 switching unit.

This parameter indicates the frequency (Hz) at which the terminating ARTER test equipment generates the test tone.

Rules in provisioning

The value of this parameter is set to one of the following:

- the value of parameter ORIG_ARTER_FREQUENCY in table OFCVAR
- the equivalent of ORIG_ARTER_FREQUENCY in the originating switching unit

TERM_ARTER_FREQUENCY (end)

Range information

Minimum	Maximum	Default
400	2800	804

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Refer to OM group OFZ for operational measurements associated with this parameter.

Refer to the *Operational Measurements Reference Manual* for a description of OM group OFZ.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS17.

TERM_ARTER_LEVEL

Parameter name

Terminating Arter Level

Functional description

In Turkey, switching units that require the ARTER trunk testing feature require this parameter. Switching units that require this parameter include:

- DMS-200 (toll)
- DMS-100 (local)
- DMS-300 (gateway)

This parameter is not required for switching units in North America.

The term ARTER describes equipment for automatic transmission testing of outgoing trunks in the Turkish network. The ARTER performs the following functions:

- selects and seizes an outgoing trunk
- output pulses a digit code,
- connects to a 6805 test unit in the distant office.

The two versions of the 6805 test unit are for two-wire trunks and four-wire trunks. Each trunk uses a different version.

This feature provides a DMS equivalent to the 6805 function for DMS-200, DMS-100 and DMS-300 switching units.

This feature allows local, toll and gateway switching units to perform tests on outgoing trunks. The local, toll and gateway units can perform tests on outgoing trunks to DMS-200, DMS-100 or DMS-300 switching units.

This parameter indicates the level (dB) at which the terminating ARTER test equipment generates the test tone.

Rules in provisioning

Set the value of this parameter to one of the following:

- the value of parameter ORIG_ARTER_LEVEL in table OFCVAR
- the equivalent of ORIG_ARTER_LEVEL in the originating switching unit.

TERM_ARTER_LEVEL (end)

Range information

Minimum	Maximum	Default
10	10	0

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Refer to OM GROUP OFZ for operational measurements associated with this parameter.

Refer to the *Operational Measurements Reference Manual* for a description of OM group OFZ.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS17.

TEST_CALL_AMR_SPILL

Parameter name

Test Call AMR Spill

Functional description

Local non-LAMA switching units that use AMR4/5 formats for the automatic number identification (ANI) spill to a toll switching unit require this parameter.

Rules in provisioning

The value of this parameter must equal the test call billing number and include the category digits a test call requires.

Range information

Minimum	Maximum	Default
		505551212 (50 are the category digits)

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

TEST_CALL_II_SPILL

Parameter name

Test Call II Spill

Functional description

This parameter creates the automatic number identification (ANI) spill that a test call uses. The test call uses the spill when an automatic time and charges (ATC) trunk that uses Bell type signaling with two ANI ID digits is tested.

Rules in provisioning

This parameter value must equal the test call billing number that a test call requires. The test call billing number contains a maximum of 18 digits.

Range information

Minimum	Maximum	Default
		005551212

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

TEST_CALL_II_SPILL (end)

Parameter history

BCS16

This parameter was introduced in BCS16.

TEST_CALL_SPILL

Parameter name

Test Call Spill

Functional description

Local non-local automatic message accounting (non-LAMA) switching units that use Bell formats for the automatic number identification (ANI) spill to a toll switching unit require this parameter.

Rules in provisioning

This parameter value must equal the test call billing number a test call requires.

Range information

Minimum	Maximum	Default
		05551212 (0 = ID digit)

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

TEST_R2_ANI_DENY

Parameter name

TEST_R2_ANI_DENY

Functional description

The parameter TEST_R2_ANI_DENY is a BOOL that is datafilled with the values of Y or N. The ANI digits are controlled by this parameter and are sent out when the value is N.

Provisioning rules

This parameter controls the sending of ANI digits and has values of "Y" or "N".

Range information

Minimum	Maximum	Default
N	Y	N

Activation

Immediate.

Dependencies

None.

Consequences

The parameter is datafilled with either "Y" or "N".

Verification

Follow these instructions to verify that the TEST_R2_ANI_DENY parameter is set to the correct value.

1. On a MAP terminal, invoke table OFCVAR by typing:
table OFCVAR
2. Type:
pos TEST_R2_ANI_DENY

If the current value of the displayed parameter is set to N, it is listed as follows:

TEST_R2_ANI_DENY (end)

TEST_R2_ANI_DENY N

Memory requirements

There are no memory requirements.

Dump and restore rules

As this is a new parameter, data from previous loads or carrying out reformatting procedures is not required.

Parameter history

EURO08

Office parameter TEST_R2_ANI_DENY is created in table OFCVAR in EUR008.

THRESHOLD_IS_SAMPLING

Parameter name

Log Sampling Threshold

Functional description

This parameter controls the action of log thresholding.

Rules in provisioning

If the value of this parameter is Y (yes), the system prints every Nth report.

If the value of this parameter is N (no), the system prints every report after the Nth.

The N is the value of field THRESHOLD in table LOGCLASS.

Range information

Minimum	Maximum	Default
		Y

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

TOLL_DIVERSION_SIGNAL

Parameter name

Toll Diversion Signal

Functional description

This parameter applies to originating lines and private branch exchange (PBX) trunks that have the toll diversion option. The PBX trunks include trunk group P2 and trunk group PX.

Rules in provisioning

Specify if the type of TDV signal is WINK or REVERSAL. If the type of signal is WINK, specify the length of the WINK signal. Specify the length of the WINK signal in 10-ms units from 50 ms to 500 ms. Specify the time that the system waits for a disconnect after the application of the TDV signal. Specify the time in 10-ms units 0 ms to 1000 ms.

Range information

Minimum	Maximum	Default
		REVERSAL 0

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

TRA125M1_SCAN_RATE

Parameter name

TRA125M1 Scan Rate

Functional description

Local or combined local and toll switching units with the Operational Measurement Data Modification Order Selectable Subscribers Line Usage Scan Interval (Optional SLU) feature require this parameter. This parameter specifies the scan rate in 10-s intervals for the traffic use register TRA125M1.

Rules in provisioning

At initial program load time this parameter is set to the default value of 10 (100 s).

Range information

Minimum	Maximum	Default
1	32767	10

Activation

Immediate (if optional SLU Scan Rate Interval software is provided)

Dependencies

This parameter appears if the value of office parameter OPTIONAL_SLU_FEATURE in table OFCOPT is Y (yes).

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

TRA125M2_SCAN_RATE

Parameter name

TRA125M2 Scan Rate

Functional description

Local or combined local and toll switching units with the Operational Measurement Data Modification Order Selectable Subscribers Line Usage Scan Interval (Optional SLU) feature require this parameter. This parameter specifies the scan rate in 10-s intervals for the traffic use register TRA125M2.

Rules in provisioning

At initial program load time this parameter is set to the default value of 10 (100 s).

Range information

Minimum	Maximum	Default
1	32767	10

Activation

Immediate (if optional SLU Scan Rate Interval software is provided)

Dependencies

This parameter appears if the value of office parameter OPTIONAL_SLU_FEATURE in table OFCOPT is Y (yes).

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

TRA250M1_SCAN_RATE

Parameter name

TRA250M1 Scan Rate

Functional description

Local or combined local and toll switching units with the Operational Measurement Data Modification Order Selectable Subscribers Line Usage Scan Interval (optional SLU) feature require this parameter. This parameter specifies the scan rate in 10-s units for the traffic use register TRA250M1.

Rules in provisioning

Specify the scan rate for the traffic use register TRA250M1 in 10-s units.

At initial program load time this parameter is set to the default value 10 (100 s).

Range information

Minimum	Maximum	Default
1	32767	10 (100 s)

Activation

Immediate (if optional SLU Scan Rate Interval software is provided)

Dependencies

This parameter appears if the value of office parameter OPTIONAL_SLU_FEATURE in table OFCOPT is Y (yes).

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

TRANSLATION_OPTIONS

Parameter name

Translation Options

Functional description

This parameter gives you the ability to select translation treatment options for 1+7D and direct dial service code (SCD) calls.

Provisioning rules

The first field in this parameter, tmt_pdil_for_pfx10, allows you to choose between partial dial (PDIL) and misdirected CAMA call (MSCA) when a 1+7D call is routed to treatment. Set this value to Y to route 1+7D calls to PDIL treatment. Set this value to N to route 1+7D calls to MSCA treatment. N is the default.

The second field, no_tmt_for_scd, allows you to choose whether direct dial SCD calls complete or go to MSCA treatment. Set this field to Y for the SCD call to complete. Set this field to N for the SCD call to route to MSCA treatment. N is the default.

Range information

Minimum	Maximum	Default
		N (tmt_pdil_for_pfx10)
		N (no_tmt_for_scd)

Activation

Immediate

Requirements

Not applicable

Results

Not applicable

TRANSLATION_OPTIONS (end)

Testing

Set field tmt_pdil_for_pfx10 to N and make a 1+7D call. The call routes to MSCA treatment. Set field tmt_pdil_for_pfx10 to Y and make a 1+7D call. The call routes to PDIL treatment.

Set field no_tmt_for_scd to N and make an SCD call. The call routes to MSCA treatment. Set field no_tmt_for_scd to Y and make an SCD call. The call completes.

Memory requirements

This parameter value requires one word of memory.

Dump and restore rules

Not applicable

Parameter history**NA012**

SR 10237061 adds field no_tmt_for_scd to this parameter.

NA010

Feature BY67346 adds this parameter in release NA010.

TRK_OOS_CHK_ON

Parameter name

Trunk Out Of Service Check On

Functional description

This parameter specifies if a check is made when the trunks in a trunk group are out of service. The trunks are out of service when the values of exact fields in the table TRKGRP are changed by data modification order.

Rules in provisioning

If this parameter is Y (yes), a check is made to see if the trunks in a trunk group are out of service. This check is made when the values of exact fields in the table TRKGRP are changed by data modification order.

If the value of this parameter is N (no), the system does not make this check.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

This parameter affects each section that describes the different trunk group types in table TRKGRP.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

TRK_OOS_CHK_ON (end)

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

TRKLPBK_TIMEOUT_IN_MINUTES

Parameter name

Trunk Loopback Timeout in Minutes

Functional description

An SL-100, local or toll switching unit with the Dialed Loopback on Trunks feature requires this parameter. This parameter specifies the trunk loopback timeout in 1-min intervals.

The Dialed Loopback on Trunks feature can provide automatic loopbacks for trunks that are DS-0 channels. The loopback points are at the DMS-100 network module (NM) and looping back is on the same trunk. To access these loopbacks, incoming or two-way trunks must dial an access code to the switching unit. The access code must be incoming digits and must be able to contain data. The terminating switching unit sends an answer signal to the originating switching unit when the loopback is complete.

The access codes listed in the following table are for different switching centers across a nation. Unify the entries of the access codes so different switches at the same level in the switching network hierarchy contain the same data.

Access code unification

Center	Access Code
local/PBX switching unit	5667
toll center	109
primary center	110
sectional center	111
regional center	112

Rules in provisioning

Specify the trunk loopback timeout in minutes.

After the trunk loopback timeout lapses, the system disconnects the call. The call goes to the idle state.

Leave the value of this parameter at the default of 20 if this feature is not required.

TRKLPBK_TIMEOUT_IN_MINUTES (end)

Range information

Minimum	Maximum	Default
20	15300	20

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Dial a trunk loop around access code from a telephone or a data unit. Verify that the call disconnects and goes to the idle state after the time specified for this parameter.

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**BCS24**

This parameter was introduced in BCS24.

TRUNK_QUERY_AUDIT_START_TIME

Parameter name

Trunk Query Audit Start Time

Functional description

A switching unit with the Common Channel Inter-office Switching feature requires this parameter.

This process sends a trunk query message for each equipped band in the switching unit. When the process receives the reply, the process takes action to correct any problems that occur. When this process ends, all the equipped trunks in the switching unit are in a compatible state. All the equipped trunks in the switching unit are in a compatible state to that of the far end switching unit.

This parameter specifies the time of day the Trunk Query Audit process runs.

Rules in provisioning

You must specify the start time for the trunk query audit process in hours (00 to 23) and minutes (00 to 59).

Range information

Minimum	Maximum	Default
		0 0 (midnight)

Activation

Immediate

The change occurs after the next scheduled wakeup.

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

TRUNK_QUERY_AUDIT_START_TIME (end)

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

TSO_FIRST_STAGE_TIMEOUT

Parameter name

Two-Stage Outpulsing First Stage Timeout

Functional description

A local or toll switching unit with International translations and two stage outpulsing (TSO) for international calls requires this parameter. The user can only use this parameter with UNIVXLA tables xxRTE that use the value TSO in the RTESEL field. The system defines this field with a trunk CLLI that has TRKSGRP field SIGDATA set to the SIGSYS value. The system defines this field with a trunk CLLI. The trunk CLLI has the LNOGSSI field reference table LNSIGSYS data values of NTLS01 or NTLS02. The trunk can be on an International Line Trunk Controller (ILTC) or International Digital Trunk Controller (IDTC) peripheral. The ILTC and IDTC have WINK or delay dial line signaling.

The TSO uses a modified version of R1 signaling system. The TSO uses one or more intermediate toll centers to provide indirect access to an International Switching Center (ISC).

The system uses a primary set of digits to route the call to the ISC. The system outpulses a second set of digits that contains the called number. The system can specify more than 12 digits.

For the TSO, the originating switch seizes a trunk to the toll switch and outpulses a code based on the country code. The system routes the call to the ISC switch. The ISC terminates the call and sends a backward signal (a wink) to the originating switch. The originating switch outpulses the required destination number. This second stage of outpulsing whistles through MF tones to reach the distant ISC switch directly.

This parameter specifies the maximum time to wait for a wink signal after the outpulsing of the first set of digits.

Rules in provisioning

You must specify the maximum time, in 10-ms intervals, to wait for the outpulsing of a wink signal. A wink signal outpulses after the first set of digits.

TSO_FIRST_STAGE_TIMEOUT (end)

Range information

Minimum	Maximum	Default
0	64000	9000 (90 seconds)

Activation

Immediate

Dependencies

The OFCRTE table contains the first set of defined outpulsed digits.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS21**

This parameter was introduced in BCS21.

TSTLN_OP_DELAY

Parameter name

Test Line Outputting Delay

Functional description

This parameter specifies the length of time, in seconds, of the delay. The delay occurs between trunk seizure and digit outputting for testline-type trunk tests. This delay is available during the execution of the OP (output) and TST (test) commands or during automatic trunk testing (ATT).

The delay that this parameter specifies allows time for older mechanical offices that are tested to attach a digit receiver.

Rules in provisioning

Specify the length of time of the delay between trunk seizure and digit outputting for testline-type trunk tests.

Range information

Minimum	Maximum	Default
0	3	0

Activation

Immediate

Dependencies

Table TSTLCONT contains testline digits required for trunk testing.

Consequences

Does not apply

Verification

Use the command PMIST to check that the specified delay time occurs between trunk seizure and the outputting of digits. Delay time occurs between trunk seizure and the outputting of digits during the execution of the OP and TST commands. Delay time occurs between trunk seizure and the outputting of digits during automatic trunk testing (ATT).

TSTLN_OP_DELAY (end)

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**BCS36**

This parameter was introduced in BCS36.

TTR_SELECTION_OPTION

Parameter name

Automatic Trunk Testing Report Selection Option

Functional description

The Automatic Trunk Testing Report (TTR) feature requires this parameter in switching units.

The purpose of the TTR feature is to transfer the scheduled automatic trunk testing results. The TTR feature transfers the scheduled automatic trunk testing results to a device independent recording package (DIRP) file.

The TTR uses the ownership facility that the Customer Network Data Changes feature introduced. The facility identifies the trunk that belongs to each user. The operating company can specify the trunk groups that belong to a specified customer.

The system captures all current TTR reports. The system makes sure of user access only to trunks that belong to that user. The system formats the record to a standard format. The DIRP can transfer this standard formatted record to the appropriate stream based on trunk group ownership. An operating company sets up the datafill for the Customer Network Changes feature. The operating company makes sure that centrex users have access only to specified trunk groups.

At scheduled testing intervals, the ATT process generates a report through the log system. This parameter transfers the TTR results to a DIRP file. The DIRP file does not need to contain trunk test results for all trunk groups tested. The DIRP file can include or exclude results based on the ownership of the trunk group.

Customer ownership tables allow the system to classify each trunk group as TELCO or CUSTOMER owned. The system normally prints all the trunk group reports on a log device. This parameter provides the ability to select which class of trunk groups to place on the DIRP file.

The system classifies each trunk group common language location identifier (CLLI) as TELCO or CUSTOMER owned. The file contains selectively stored TTR data that associates with a CLLI. This data depends on the value of the parameter. If table DATAOWNR is not present, the user can assume that all of the trunks are TELCO owned. The table DATAOWNR determines the customer that owns a trunk.

TTR_SELECTION_OPTION (continued)

This feature can handle one customer only. This feature does not provide a difference between customers in a multicustomer environment.

Rules in provisioning

You must set the value of this parameter to NO_DATA if TTR data is not stored on file.

You must set the value of this parameter to ALL_DATA if you have both TELCO and CUSTOMER data stored on file.

You must set the value of this parameter to TELCO_DATA if you have only TELCO data stored on file.

You must set the value of this parameter to CUSTOMER_DATA if you have only CUSTOMER data stored on file.

Range information

Minimum	Maximum	Default
		ALL_DATA

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

TTR_SELECTION_OPTION (end)

Parameter history

BCS19

You will find this parameter introduced in BCS19.

UDIAGALARM

Parameter name

Utility Line Card Diagnostic Alarm

Functional description

This parameter sets the alarm thresholds for the utility line card diagnostic failure flag of U under the heading F. This parameter sets the alarm thresholds for a posted line at the MAP terminal.

A utility line card is the power supply card located on the line drawer. The power supply card can be +48 Volt. A utility line card is the power supply card located on message waiting lamp power supply cards.

The system maintains a counter and three threshold levels for the failure type. The threshold levels are minor, major, and critical. An alarm condition occurs when one or more of the failure counters exceeds a threshold level.

Rules in provisioning

Specify the alarm threshold for the utility line card diagnostic failure flag. The default value of 100 150 200 represents a minor alarm threshold of 100 failures. The default value of 100 150 200 represents a major alarm threshold of 150 failures. The default value of 100 150 200 represents a critical alarm threshold of 200 failures.

Range information

Minimum	Maximum	Default
0 0 0	32767 32767 32767	100 150 200

Activation

Use the ALMSTAT command at the LTP MAP level to modify this parameter. When you use the ALMSTAT command to modify the value, the system updates all current alarms to reflect the failures with the new values.

Dependencies

Does not apply

Consequences

Does not apply

UDIAGALARM (end)

Verification

Does not apply

Memory requirements

This parameter requires 1 word of memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS19

This parameter was introduced in BCS19.

USAID_CLID_BLK_SC

Parameter name

USAID_CLID_BLK_SC

Functional description

The system enters office parameter USAID_CLID_BLK_SC with a digit string in table OFCVAR. The digit string, which consists of 1 to 5 characters, outputpulses to the Intelligent Peripheral during a USAID call. This digit string outputpulses to the Intelligent Peripheral during a USAID call when Calling Line Identification (CLID) blocking is in effect.

Rules in provisioning

The recommended service code value is a five-digit string.

Range information

Minimum	Maximum	Default
1-character digit string (1 to 9, \$, or *)	5-character digit string (1 to 9, \$, or *)	NULL string

Activation

Immediate

Dependencies

Does not apply

Consequences

You must enter this parameter to make sure that a service code outputpulses when CLID blocking is in effect.

Verification

Does not apply

Memory requirements

This parameter requires 5 bytes of data store.

USAID_CLID_BLK_SC (end)

Dump and restore rules

There are no changes required for dump and restore. There are no changes required for TabXfer. Normal tables processes do not change.

Parameter history

CCM03

This parameter was introduced in CCM03.

UVM_DEPOSIT_PRIV_DN_TMT

Parameter name

UVM_DEPOSIT_PRIV_DN_TMT

Functional description

This parameter specifies an announcement common language location identifier (CLLI) or a DMS standard treatment. The system must route a UVM Deposit call to this treatment. The system must route a UVM Deposit call when the system attempts to deposit a message. The system attempts to deposit a message to a DN marked private in the outgoing call memory (OCM).

Rules in provisioning

Does not apply

Range information

The parameter UVM_DEPOSIT_PRIV_DN_TMT can have one of two possible values.

Field	Subfield or refinement	Entry	Explanation and action
ERRTREAT		Refer to subfields	<i>Error treatment</i> Enter the method by which the system provides treatment. Perform this action when the system attempts to deposit a message to a private DN.
	TREATMT	DMSTREAT <treatment>	<i>DMS treatment</i> Enter the name of a DMS standard treatment from table TMTCNTL. Default value is RODR.
	CLLI	ANNCLLI <cli>	<i>Announcement CLLI</i> Enter the CLLI of an announcement from table CLLI.

Activation

Immediate

UVM_DEPOSIT_PRIV_DN_TMT (end)

Dependencies

No current data table or office parameter depends on this office parameter. UVM_DEPOSIT_PRIV_DN_TMT depends on the following items to function correctly.

- If UVM_DEPOSIT_PRIV_DN_TMT appears as an announcement CLLI, tables CLLI, ANNS, and ANNMEMS must contain the correct announcement CLLI.
- If UVM_DEPOSIT_PRIV_DN_TMT appears as a DMS standard treatment, table TMTCNTL must contain the specified treatment.

These conditions are not enforced. If the tables are not entered correctly, the system provides a default treatment.

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter requires 1 byte of memory.

Dump and restore rules

This parameter requires dump and restore.

Parameter history

CDNB004

This parameter was introduced in CDNB004.

VARIABLE_STUTTER_DIALTONE_TIMING

Parameter name

Variable Stutter Dialtone Timing.

Functional description

This parameter specifies the time, in seconds, that subscribers with stuttered dialtone (STD) as the message waiting indicator (MWI) hear STD. After this time duration, subscribers hear steady dialtone. This process occurs when the system queues a message. The system queues a message against the line of the subscriber.

Rules in provisioning

Specify the time that a subscriber with an MWI of STD hears STD before the subscriber hears steady dialtone. The subscriber hears steady dialtone when the system queues a message against the line of the subscriber.

A value of 0 (zero) indicates that the subscriber hears STD as an MWI. The subscriber hears STD as an MWI if the system queues a message until the subscriber dials digits.

Range information

Minimum	Maximum	Default
0	7	0

Activation

Immediate

Dependencies

Does not apply

Consequences

If the value of this parameter is too low, the subscriber cannot hear the STD when the subscriber raises the handset.

Verification

Check that this parameter is operational. Queue a message against a line with STD as the MWI. Go off-hook. Check that the subscriber hears STD for the number of seconds that this parameter specifies.

VARIABLE_STUTTER_DIALTONE_TIMING (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS36.

WLC_OV_REPORTING

Parameter name

World Line Card Overvoltage Condition Reporting

Functional description

A switching unit with world line cards (WLC) requires this parameter. This parameter enables and disables the WLC overvoltage reporting feature.

The WLC overvoltage reporting feature indicates WLCs that report a continuing steady-state overvoltage condition for line card types 6X17BA and 6X18BA. This condition occurs in the following line concentrating devices:

- North American expanded memory line concentrating modules (XLCM)
- expanded memory international LCM (XILCM)
- enhanced integrated services digital network LCM (LCME)
- small remote unit (SRU)

The WLC overvoltage conditions cause the system to generate a LINE 132 log and the major alarm HAZ. The system generates this log and the major alarm at the LNS level of the MAP.

Rules in provisioning

Does not apply

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

The value of this parameter does not change after a restart.

Dependencies

Does not apply

WLC_OV_REPORTING (end)

Consequences

If the user does not set the value of this parameter to Y, WLC lines can be in an unreported dangerous state.

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore. The value of this parameter does not change after a restart.

Parameter history

BCS36

You can find the parameter description added in BCS36.

BCS35

You can find this parameter introduced in BCS35.

WLN_DEFAULT_TIMEOUT

Parameter name

Warm Line Default Timeout

Functional description

A local switching unit (international) with universal translations requires this parameter. This parameter specifies the default timeout, in 1-s intervals, for the Warm Line (WLN) feature.

The WLN feature allows the subscriber to reach a specified destination. The subscriber does not dial any digits.

Rules in provisioning

The timeout value for the WLN feature assigned to the line in table LENFEAT can have a value of 0 (zero). When this condition occurs, the system uses the value of the WLN default timeout parameter.

If the WLN feature is not required, leave the parameter at the default value.

Range information

Minimum	Maximum	Default
1	20	5

Activation

Immediate

Dependencies

Assign the activate, deactivate, and interrogate codes to program the WLN feature in table ACCODE.

To assign this feature to a line, assign the WLN option in table LENFEAT or by service order.

Consequences

Does not apply

Verification

Does not apply

WLN_DEFAULT_TIMEOUT (end)

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history

BCS22

This parameter was introduced in BCS22.

WML_ACCESS_CODE

Parameter name

Warm Line Access Code

Functional description

This parameter specifies the two-digit access code that a subscriber with the customer modifiable Warm Line feature (WML) dials. A subscriber dials this two-digit access code to update the directory number that receives forwarded calls.

Rules in provisioning

Specify the two-digit access code that a subscriber with WML requires. The subscriber requires this code to update the directory number that receives forwarded calls.

Range information

Minimum	Maximum	Default
20	99	77

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

XBAR_OVERFLOW_ON

Parameter name

XBAR Overflow On

Functional description

Use this parameter to turn the overflow group checking on and off.

If all overflow common language location identifiers (CLLI) are correct, the system verifies that calls do not loop between the two offices. The system makes sure that if an incoming call is satellite, the overflow group for that call is satellite.

Rules in provisioning

Set the value of this parameter to Y (yes) to activate overflow group checking.

If you do not require this feature, leave the value of this parameter at the default of N (no).

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

XBAR_OVERFLOW_ON (end)

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

This parameter was introduced in BCS15.

XBARCAB1

Parameter name

XBAR Overflow Trunk Common Language Location Identifier 1

Functional description

A DMS-300 switch requires this parameter. This parameter specifies the Common Language Location Identifier (CLLI) of the overflow trunk. This trunk handles non-satellite calls that overflow from the DMS or X-Bar switch. These calls were non-satellite when the calls entered the DMS or X-Bar switch.

The overflow trunk group must be a No.5 trunk group. You must mark the overflow trunk group as a non-satellite trunk or it must appear in table SATOVER.

Rules in provisioning

Specify the CLLI of the overflow trunk that handles non-satellite calls that overflow from the DMS or X-Bar switch. These calls were non-satellite when the calls entered the DMS or X-Bar switch.

Range information

Minimum	Maximum	Default
		DUMPANDRESTORE

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**CSP03**

The warm restart activation requirement was removed in CSP03.

BCS15

This parameter was introduced in BCS15.

XBARCAB2

Parameter name

XBAR Common Language Overflow Trunk Location Identifier 2

Functional description

A DMS-300 switch requires this parameter. This parameter specifies the Common Language Location Identifier (CLLI) of the overflow trunk. This trunk handles calls that overflow from the DMS or X-Bar switch. These calls were non-satellite when the calls entered the DMS or X-Bar switch.

The overflow trunk group must be a No.5 trunk group. The overflow trunk group must be marked as a non-satellite trunk or appear in table SATOVER.

Rules in provisioning

Specify the CLLI of the overflow trunk that handles calls that overflow from the DMS or X-Bar switch that are non-satellite. Calls are non-satellite when the system enters the call on the DMS or X-Bar switch.

Range information

Minimum	Maximum	Default
		DUMPANDRESTORE

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**CSP03**

This parameter was removed in CSP03.

BCS15

This parameter was introduced in BCS15.

XBARSAT1

Parameter name

XBAR Overflow Trunk Common Language Location Identifier 1

Functional description

A DMS-300 switch requires this parameter. This parameter specifies the Common Language Location Identifier (CLLI) of the overflow trunk. This trunk handles calls that overflow from the DMS or X-Bar switch. These calls are satellite when the calls enter the DMS or X-Bar switch.

The overflow trunk group must be a No.5 trunk group. The overflow trunk group must be marked as a non-satellite trunk or appear in table SATOVER.

Rules in provisioning

Specify the CLLI of the overflow trunk that handles satellite calls that overflow from the DMS or X-Bar switch. Calls are satellite when the system enters the call on the DMS or X-Bar switch.

Range information

Minimum	Maximum	Default
		DUMPANDRESTORE

Activation

Does not apply

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of this parameter when you perform a dump and restore.

Parameter history**CSP03**

This parameter was removed in CSP03.

BCS15

This parameter was introduced in BCS15.

XBARSAT2

Parameter name

XBAR Overflow Trunk Common Language Location Identifier 2

Functional description

The DMS-300 switch requires this parameter. This parameter specifies the common language location identifier (CLLI) of the overflow trunk. The overflow trunk handles calls that overflow from the DMS or X-Bar switch. These overflow calls were satellite when the calls entered the DMS or X-Bar switch.

The overflow trunk group must be a No.5 trunk group. The overflow trunk group must be marked as a non-satellite trunk or appear in table SATOVER.

Rules in provisioning

Specify the CLLI of the overflow trunk that handles calls that overflow from the DMS or X-Bar switch. The DMS or X-Bar switch calls were satellite when the calls entered the DMS or X-Bar switch.

Range information

Minimum	Maximum	Default
		DUMPANDRESTORE

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history**CSP03**

Warm restart activation requirement was removed in CSP03.

BCS15

This parameter was introduced in BCS15.

XID_DESTINATION_ID

Parameter name

X.25 Destination Identifier

Functional description

This parameter provides a mechanism for the operating company to define the exchange identification (ID). The system uses the X.25 link(s) to send the exchange ID.

Rules in provisioning

Specify the exchange ID for the system to send.

The exchange ID identifies the type of switch and the destination of the ID. The destination ID is a code that is three to nine characters in length. The destination ID identifies the switching unit to which a data link connects.

Range information

Minimum	Maximum	Default
		XID

Activation

Immediate

Dependencies

Does not apply

Consequences

Does not apply

Verification

Does not apply

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

XLAPLAN_RATEAREA_SERVORD_ENABLED

Parameter name

XLAPLAN_RATEAREA_SERVORD_ENABLED

Functional description

Office parameter XLAPLAN_RATEAREA_SERVORD_ENABLED (XRSE) enables table LINEATTR restructuring.

Feature AU3249 (XLAPLAN and RATEAREA Tables and Utilities) splits tables XLAPLAN and RATEAREA out of table LINEATTR. These tables store translations and rate area information that previously was stored in table LINEATTR.

Feature AU3279 (LINEATTR Servord Enhancements) provides the SERVORD enhancements required to provision and modify the XLAPLAN and RATEAREA keys assigned against a POTS/RES or SLBRI line. Office parameter XLAPLAN_RATEAREA_SERVORD_ENABLED controls some of the functionality of feature AU3279.

Feature 59017776 (LINEATTR Compression Tool) provides the following functions with the XRSE parameter set to MANDATORY_PROMPTS:

- enables a warning message to display when administrators enter a duplicate tuple, through the ADD, CHA, or REP commands, in the LINEATTR, XLAPLAN, or RATEAREA tables
- enables use of the COMPRSCI tool used to reduce redundant tuples in the LINEATTR table

XLAPLAN_RATEAREA_SERVORD_ENABLED (continued)

The impact of office parameter XLAPLAN_RATEAREA_SERVORD_ENABLED is described in the table that follows.

(Sheet 1 of 3)

Value of XLAPLAN_RATEAREA_SERVORD_ENABLED			
Function affected	OFF	OPTIONS_ENABLED	MANDATORY_PROMPTS
SERVORD line options XLAPLAN and RATEAREA	The options are disabled. They cannot be used when you provision a new line.	The options are available to allow specification of XLAPLAN and RATEAREA values on a per line basis. These values overwrite the default XLAPLAN and RATEAREA values in line attribute tuples (the values of XLAPLAN and RATEAREA referenced by the DFLTXLP and DFLTRA keys from table LINEATTR).	SERVORD line options are not available in this state.
SERVORD command CHG options LINEATTR, XLAPLAN, RATEAREA, and LTG	ATTRBS, LINEATTR, XLAPLAN, RATEAREA, and LTG are disabled. You must use the CLTG command to change the translations and billing characteristics of a line.	The options are available to specify keys into tables LINEATTR, XLAPLAN, and RATEAREA. You can use the LTG option to change the LTG of a line.	The CHG-LTG SERVORD command option is disabled. The LTG option is disabled. Line option ATTRBS modifies the keys, LINEATTR, XLAPLAN, and RATEAREA in a single command.

XLAPLAN_RATEAREA_SERVORD_ENABLED (continued)

(Sheet 2 of 3)

Value of XLAPLAN_RATEAREA_SERVORD_ENABLED			
Function affected	OFF	OPTIONS_ENABLED	MANDATORY_PROMPTS
SERVORD commands NEW, ADD, and EST	No change	The options are available to specify keys into tables XLAPLAN and RATEAREA.	The LCC prompt is replaced by the LINEATTR_OR_LCC prompt for commands NEW and EST and the LINEATTR prompt for command ADD. XLAPLAN and RATEAREA line options are disabled. XLAPLAN and RATEAREA are mandatory prompts for POTS, RES and SLBRI lines. The LTG and LATANAME prompts are removed in this state for POTS/RES and SLBRI lines.
SERVORD command CLTG	No change	The CLTG command is disabled. The LTG of a line is changed with the LTG option of the CHG command.	The CLTG command is disabled.
CI query commands QDN, QLEN, QDNWRK, and QLENWRK	No change	The responses to the commands display the keys into tables XLAPLAN and RATEAREA.	The LTG prompt is no longer displayed.
SERVORD command NEWDN	No change	No change	The LTG prompt is replaced by a LINEATTR prompt. XLAPLAN and RATEAREA are mandatory prompts.
SERVORD command CDN	No change	LINEATTR, XLAPLAN, and RATEAREA will not change if a DN's SNPA changes, for POTS/RES lines.	The LINEATTR, XLAPLAN, and RATEAREA prompts appear for RCF and RCFEA DNs.

XLAPLAN_RATEAREA_SERVORD_ENABLED (continued)

(Sheet 3 of 3)

Value of XLAPLAN_RATEAREA_SERVORD_ENABLED			
Function affected	OFF	OPTIONS_ENABLED	MANDATORY_PROMPTS
COMPRSCI tool	Disabled	Disabled	Enabled
Duplicate tuple warning message for tables LINEATTR, RATEAREA, and XLAPLAN	Disabled	Disabled	Enabled

Provisioning rules

Not applicable

Range information

The valid values for office parameter XLAPLAN_RATEAREA_SERVORD_ENABLED are OPTIONS_ENABLED, MANDATORY_PROMPTS, and OFF. The default value is OFF.

Activation

The activation of office parameter XLAPLAN_RATEAREA_SERVORD_ENABLED is immediate.

Dependencies

Office parameter XLAPLAN_RATEAREA_SERVORD_ENABLED has no dependencies.

Consequences

When office parameter XLAPLAN_RATEAREA_SERVORD_ENABLED field is set to OFF, any use of the CLTG command will cause a coupling between the XLAPLAN line table tuple and the default value for XLAPLAN in table LINEATTR. Any use of the CLTG command will cause a coupling between the RATEAREA line table tuple and the default value for RATEAREA in table LINEATTR. The existing XLAPLAN and RATEAREA line table tuple keys are replaced by the default keys from the line attribute.

XLAPLAN_RATEAREA_SERVORD_ENABLED (continued)

When you attempt to change the value of XLAPLAN_RATEAREA_SERVORD_ENABLED, the system generates a warning message that explains the functional changes that occur when you change the value of the office parameter.

The system generates an error message if you attempt to use the LINEATTR, XLAPLAN, RATEAREA, or LTG option with the CHG command when office parameter XLAPLAN_RATEAREA_SERVORD_ENABLED office parameter is set to OFF.

The system generates an error message if you attempt to use the XLAPLAN or RATEAREA option with the NEW, EST, or ADD commands when office parameter XLAPLAN_RATEAREA_SERVORD_ENABLED is set to OFF.

The system generates an error message if you attempt to use the CLTG command when office parameter XLAPLAN_RATEAREA_SERVORD_ENABLED is set to OPTIONS_ENABLED.

When XRSE is set to MANDATORY_PROMPTS it cannot be changed to the OFF or OPTIONS_ENABLED state. Changing the state to MANDATORY_PROMPTS can only be reversed by using the XRSECHG CI tool.

The XRSE parameter set to MANDATORY_PROMPTS enables a warning message to display when administrators enter a duplicate tuple in the following tables:

- LINEATTR
- XLAPLAN
- RATEAREA

The XRSE parameter set to MANDATORY_PROMPTS enables use of the COMPRSCI tool used to reduce redundant tuples in the LINEATTR table.

Verification

Not applicable.

Memory requirements

The XLAPLAN_RATEAREA_SERVORD_ENABLED office parameter has no memory impact.

XLAPLAN_RATEAREA_SERVORD_ENABLED (end)

Dump and restore rules

Not applicable.

Parameter history

NA014

The XRSE parameter set to MANDATORY_PROMPTS enables:

- the COMPRSCRI tool
- a duplicate tuple warning message for the LINEATTR, XLAPLAN, and RATEAREA tables

NA012

The MANDATORY_PROMPTS state was added to the XRSE parameter.

NA011

Office parameter XLAPLAN_RATEAREA_SERVORD_ENABLED was introduced.

XPMMMSGOC_OM_CONTROL

Parameter name

XPMMMSGOC_OM_CONTROL

Functional description

XPMMMSGOC_OM_CONTROL controls the on and off function of the Extended Peripheral Module Messaging Occupancy (XPMMMSGOC) operational measurement.

Provisioning rules

None

Range information

Minimum	Maximum	Default
Y/N	Y/N	Y (Yes)

Activation

Immediate

Dependencies

OFCVAR

Consequences

If the customer enters a value other than Y (Yes) or N (No), a standard error string appears.

Verification

The customer can check XPMMMSGOC is working using one of the following methods:

- Enter the OMSHOW XPMMMSGOC ACTIVE command. Observe the data.
- Go to PMDEBUG in the Extended Peripheral Module (XPM) active unit. Enter the OMU (Operational Measurements Unsolicited) level and type ST (status).

Memory requirements

No memory impact.

XPMMMSGOC_OM_CONTROL (end)

Dump and restore rules

None

Parameter history

XPMMMSGOC_OM_CONTROL was introduced in TL10.

XPMOCC_OM_CONTROL

Parameter name

XMS-based Peripheral Module Central Processing Unit Occupancy
Operational Measurement Control

Functional description

This parameter activates or deactivates the polling of information by operational measurement (OM) group XPMOCC. Operational measurement (OM) group XPMOCC is an XMS-based peripheral module central processing unit occupancy.

Refer to the *Operational Measurements Reference Manual* for more information about OM group XPMOCC.

Rules in provisioning

Set the value of this parameter to Y (yes). This setting activates information polling by OM group XPMOCC.

Leave this parameter value at the default of N (no) if you do not require information gathered by OM group XPMOCC.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate.

Dependencies

Does not apply

Consequences

Leave the value of this parameter at the default value of N until you add feature AF5585 (XPM Resource Monitoring OM). If you set the value to Y before this software is available, OM group XPMOCC does not gather information.

XPMOCC_OM_CONTROL (end)

Verification

When you set the value of this parameter to Y (yes), use one of the following methods to verify the functionality of this parameter at a MAP terminal:

- Enter the command OMSHOW XPMOCC ACTIVE. Observe the data that appears.
- Use the command PMDEBUG to connect to the active unit of the XPM. Type ST (status) at the OMU level of the MAP terminal. Verify that item 14 shows a status of ACTIVE.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

CSP02

This parameter was introduced in CSP02.

XPMOVL_D_OM_CONTROL

Parameter name

XMS-based Peripheral Module Overload Operational Measurement Control

Functional description

Use this parameter to activate or deactivate information polling by operational measurement (OM) group XPMOVL_D. The XPMOVL_D is XMS-based peripheral module overload.

Refer to the *Operational Measurements Reference Manual* for more information about OM group XPMOVL_D.

Rules in provisioning

Set the value of this parameter to Y (yes). This setting activates information polling by OM group XPMOVL_D.

Leave the parameter value at the default of N (no) if you do not require information that OM group XPMOVL_D gathers.

Range information

Minimum	Maximum	Default
		N

Activation

Immediate

Dependencies

Does not apply

Consequences

Leave the value of this parameter at the default value of N until you add feature AF5585 (XPM Resource Monitoring OM). If you set the value to Y before this software is available, OM group XPMOVL_D does not gather information.

XPMOVL_D_OM_CONTROL (end)

Verification

Set the value of this parameter to Y (yes). Use one of the following methods to verify the functionality of this parameter at a MAP terminal:

- Enter the command OMSHOW XPMOVL_D_OM_CONTROL ACTIVE. Observe the data that appears.
- Use the command PMDEBUG to connect to the active unit of the XPM. Type ST (status) at the OMU level of the MAP terminal. Verify that item 15 shows a status of ACTIVE.

Memory requirements

This parameter does not impact memory.

Dump and restore rules

Copy the current value of the parameter when you perform a dump and restore.

Parameter history

CSP02

This parameter was introduced in CSP02.

2 Preset office parameters—U.S. only

Description

Detailed engineering rules were the base of office parameter value calculations before BCS36. The creation of preset office parameters prevents the requirement of switch outages to change or correct these values. Preset parameters are a less complicated, more reliable method of parameter engineering. Preset parameters remove the load of provisioning many office parameters from the operating company to Nortel Networks. The preset parameters do not require any calculations by the operating company. Releases NA001 and up require preset parameters and apply to the U.S. market only.

Preset parameters are a part of the office parameters in the tables OFCENG, OFCOPT, OFCSTD, OFCVAR and DATASIZE.

The parameters in these tables use a lot of memory or require a restart to activate. The preset parameters are designed to standardize their values according to the following:

- product
- line size
- percentage of total lines that are Meridian Digital Centrex (MDC) and integrated services digital network (ISDN) lines
- trunk size
- network type

For more information and a copy of the most recent Preset Parameters Guide, go to Web address

<http://www.nortelnetworks.com/products/01/preparms/>

In addition to the above Web site, many table OFCENG parameters can be calculated and controlled automatically by table OFCAUT. For more information, refer to table OFCAUT in the NA DMS-100 Customer Data Schema Reference Manual.

3 DMS-100 local switch with 0-35% MDC and ISDN lines—U.S. only

Organization

This chapter applies to DMS-100 local switch offices where 0-35% of the total lines are Meridian Digital Centrex (MDC) and integrated services digital network (ISDN) lines.

This chapter contains modules. This chapter includes a module for each office parameter table with the following preset values:

- Table OFCENG
- Table OFCOPT
- Table OFCSTD
- Table OFCVAR
- Table DATASIZE

Each office parameter module includes five tables. The number of lines determines the table groups.

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG

Line sizes 1-20 000

The following table lists the table OFCENG parameter names and preset values for line sizes 1-20 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 1 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
ACD_OVERFLOW_BLOCKS		3000	3000
AIN_NUM_00_PARA_EXT_BLKs		300	300
AIN_NUM_01_00_EXT_BLKs		150	150
AIN_NUM_EXT_BLKs		125	250
AIN_NUM_PROCESSING_EXT_BLKs		125	250
AIN_NUM_TERM_NOTIF_EXT_BLKs		250	500
CFD_EXT_BLOCKS		1750	3500
CFW_EXT_BLOCKS		2000	4000
CFZ_EXT_BLOCKS		1200	2400
CRS_PRU_POOL1_SIZE		1000	1000
CRS_PRU_POOL2_SIZE		10 584	13 078
CRS_PRU_POOL3_SIZE		750	1500
CRS_SUBRU_POOL1_SIZE		1500	3000
CRS_SUBRU_POOL2_SIZE			
	0-1000	2855	4680
	1001-2000	2885	4710
	2001-5000	2975	4800
	5001-10 000	3125	4950
	10 001-15 000	3275	5100
	15 001-20 000	3425	5250

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 2 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
CRS_SUBRU_POOL3_SIZE	20 001-25 000	3575	5400
	25 001-30 000	3725	5550
	30 001-35 000	3875	5700
	35 001+	4025	5850
	0-1 000	3500	4250
	1 001-2 000	3550	4300
	2 001-5 000	3700	4450
	5 001-10 000	3950	4700
	10 001-15 000	4200	4950
	15 001-20 000	4450	5200
	20 001-25 000	4700	5450
	25 001-30 000	4950	5700
	30 001-35 000	5200	5950
	35 001+	5450	6200
CRS_SUBRU_POOL4_SIZE		7100	7200
CUSTOMER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		0	0
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		25	50
MAX_SDPOOL_NO		15	15

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 3 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		32	32
NCCBS (JNET)			
	0-1000	9 840	10 800
	1001-2000	10 800	11 760
	2001-5000	11 760	13 680
	5001-10 000	14 640	15 600
	10 001-15 000	16 560	18 480
	15 001-20 000	19 440	20 400
	20 001-25 000	22 320	23 280
	25 001-30 000	24 240	26 160
	30 001-35 000	27 120	28 080
	35 001+	29 040	30 960
NCCBS (ENET)			
	0-1000	20 400	20 400
	1001-2000	20 400	20 400
	2001-5000	20 400	20 400
	5001-10 000	20 400	20 400
	10 001-15 000	20 400	20 400
	15 001-20 000	20 400	20 400
	20 001-25 000	34 800	34 800
	25 001-30 000	34 800	34 800

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 4 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	30 001-35 000	34 800	34 800
	35 001+	34 800	34 800
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		3509	3634
NO_OF_FTR_XLA_BLKs		1625	1750
NO_OF_HIS_CONTROL_BLKs			
	0-1000	2000	2000
	1001-2000	4000	4000
	2001-5000	10 000	10 000
	5001-10 000	20 000	20 000
	10 001-15 000	30 000	30 000
	15 001-20 000	40 000	40 000
	20 001-25 000	50 000	50 000
	25 001-30 000	60 000	60 000
	30 001-35 000	70 000	70 000
	35 001+	80 000	80 000
NO_OF_HIS_DATA_BLKs - X1			
	0-1000	2600	3100
	1001-2000	4700	5200
	2001-5000	11 000	11 500
	5001-10 000	21 500	22 000

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 5 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
NO_OF_HIS_DATA_BLKs - X2	10 001-15 000	32 000	32 500
	15 001-20 000	42 500	43 000
	20 001-25 000	53 000	53 500
	25 001-30 000	63 500	64 000
	30 001-35 000	74 000	74 500
	35 001+	84 500	85 000
NO_OF_HIS_DATA_BLKs - X2	0-1000	1525	1650
	1001-2000	2925	3050
	2001-5000	7125	7250
	5001-10 000	14 125	14 250
	10 001-15 000	21 125	21 250
	15 001-20 000	28 125	28 250
	20 001-25 000	35 125	35 250
	25 001-30 000	42 125	42 250
	30 001-35 000	49 125	49 250
	35 001+	56 125	56 250
NO_OF_HIS_DATA_BLKs - X3	0-1000	325	450
	1001-2000	525	650
	2001-5000	1125	1250
	5001-10 000	2125	2250
	10 001-15 000	3125	3250

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 6 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	15 001-20 000	4125	4250
	20 001-25 000	5125	5250
	25 001-30 000	6125	6250
	30 001-35 000	7125	7250
	35 001+	8125	8250
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs		2309	2434
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		4 013	7025
NO_OF_PVN_EXTBLK		2 700	2700
NO_OF_PVN_TERM_EXTBLK		1 200	1200
NO_OF_SC_EXT_BLKs		25	50
NO_OF_SDS_EXT_BLKs		125	250
NO_OF_SMALL_EXT_BLKs		1 000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1 200	1200
NO_OF_XLARGE_EXT_BLKs		506	513
NO_TFAN_OM_REGISTERS		2 047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_IBN_IXLA_EXT_BLOCKS		1 000	1000
NUM_OF_NSC_EXT_BLK		512	512
NUM_OF_RTEB_EXTBLKS			
	0-1000	80	80
	1001-2000	160	160

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 7 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	2001-5000	400	400
	5001-10 000	800	800
	10 001-15 000	1200	1200
	15 001-20 000	1600	1600
	20 001-25 000	2000	2000
	25 001-30 000	2400	2400
	30 001-35 000	2800	2800
	35 001+	3200	3200
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		4000	6000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Line sizes 20 001-40 000

The following table lists the table OFCENG parameter names and their preset values for line sizes 20 001-40 000. Trunk size (if applicable) determines the order in which the names appear.

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 1 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
ACD_OVERFLOW_BLOCKS		3000	4094
AIN_NUM_00_PARA_EXT_BLKs		375	500
AIN_NUM_01_00_EXT_BLKs		188	250
AIN_NUM_EXT_BLKs		375	500
AIN_NUM_PROCESSING_EXT_BLKs		375	500
AIN_NUM_TERM_NOTIF_EXT_BLKs		750	1000
CFD_EXT_BLOCKS		5250	7000
CFW_EXT_BLOCKS		6000	8000
CFZ_EXT_BLOCKS		3600	4800
CRS_PRU_POOL1_SIZE		1000	1000
CRS_PRU_POOL2_SIZE		15 572	18 066
CRS_PRU_POOL3_SIZE		2250	3000
CRS_SUBRU_POOL1_SIZE		4500	6000
CRS_SUBRU_POOL2_SIZE			
	0-1000	6505	8330
	1001-2000	6535	8360
	2001-5000	6625	8450
	5001-10 000	6775	8600
	10 001-15 000	6925	8750
	15 001-20 000	7075	8900

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 2 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
CRS_SUBRU_POOL3_SIZE	20 001-25 000	7225	9050
	25 001-30 000	7375	9200
	30 001-35 000	7525	9350
	35 001+	7675	9500
	0-1000	5000	5750
	1001-2000	5050	5800
	2001-5000	5200	5950
	5001-10 000	5450	6200
	10 001-15 000	5700	6450
	15 001-20 000	5950	6700
	20 001-25 000	6200	6950
	25 001-30 000	6 450	7200
	30 001-35 000	6700	7450
	35 001+	6950	7700
	CRS_SUBRU_POOL4_SIZE	7300	7400
	CUSTOMER_GROUP_IBNGRP_OM_COUNT	4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		0	0
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		75	100
MAX_SDPOOL_NO		15	15

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 3 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		32	64
NCCBS (JNET)			
	0-1000	12 720	13 680
	1001-2000	12 720	14 640
	2001-5000	14 640	15 600
	5001-10 000	17 520	18 480
	10 001-15 000	19 440	21 360
	15 001-20 000	22 320	23 280
	20 001-25 000	24 240	26 160
	25 001-30 000	27 120	28 080
	30 001-35 000	30 000	30 960
	35 001+	31 920	33 840
NCCBS (ENET)			
	0-1000	20 400	20 400
	1001-2000	20 400	20 400
	2001-5000	20 400	20 400
	5001-10 000	20 400	20 400
	10 001-15 000	20 400	34 800
	15 001-20 000	34 800	34 800
	20 001-25 000	34 800	34 800
	25 001-30 000	34 800	34 800

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 4 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	30 001-35 000	34 800	34 800
	35 001+	34 800	34 800
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		3759	3884
NO_OF_FTR_XLA_BLKs		1875	2000
NO_OF_HIS_CONTROL_BLKs			
	0-1000	2000	2000
	1001-2000	4000	4000
	2001-5000	10 000	10 000
	5001-10 000	20 000	20 000
	10 001-15 000	30 000	30 000
	15 001-20 000	40 000	40 000
	20 001-25 000	50 000	50 000
	25 001-30 000	60 000	60 000
	30 001-35 000	70 000	70 000
	35 001+	80 000	80 000
NO_OF_HIS_DATA_BLKs - X1			
	0-1000	3600	4100
	1001-2000	5700	6200
	2001-5000	12 000	12 500
	5001-10 000	22 500	23 000

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 5 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
NO_OF_HIS_DATA_BLKs - X2	10 001-15 000	33 000	33 500
	15 001-20 000	43 500	44 000
	20 001-25 000	54 000	54 500
	25 001-30 000	64 500	65 000
	30 001-35 000	75 000	75 500
	35 001+	85 500	86 000
	0-1000	1 775	1900
	1001-2000	3 175	3300
	2001-5000	7 375	7500
	5001-10 000	14 375	14 500
	10 001-15 000	21 375	21 500
	15 001-20 000	28 375	28 500
	20 001-25 000	35 375	35 500
NO_OF_HIS_DATA_BLKs - X3	25 001-30 000	42 375	42 500
	30 001-35 000	49 375	49 500
	35 001+	56 375	56 500
	0-1000	575	700
	1001-2000	775	900
	2001-5000	1375	1500
	5001-10 000	2375	2500
	10 001-15 000	3375	3500

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 6 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	15 001-20 000	4375	4500
	20 001-25 000	5375	5500
	25 001-30 000	6375	6500
	30 001-35 000	7375	7500
	35 001+	8375	8500
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs		2559	2684
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		10 038	13 050
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		75	100
NO_OF_SDS_EXT_BLKs		375	500
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs		519	525
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		512	512
NUM_OF_RTEB_EXTBLKS			
	0-1000	80	80
	1001-2000	160	160

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 7 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	2001-5000	400	400
	5001-10 000	800	800
	10 001-15 000	1200	1200
	15 001-20 000	1600	1600
	20 001-25 000	2000	2000
	25 001-30 000	2400	2400
	30 001-35 000	2800	2800
	35 001+	3200	3200
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		8000	10 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)**Line sizes 40 001-60 000**

The following table lists the table OFCENG parameter names and preset values for line sizes 40 001-60 000. The table lists the parameter names according to trunk size, if a parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 1 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs		625	750
AIN_NUM_01_00_EXT_BLKs		313	375
AIN_NUM_EXT_BLKs		625	750
AIN_NUM_PROCESSING_EXT_BLKs		625	750
AIN_NUM_TERM_NOTIF_EXT_BLKs		1250	1500
CFD_EXT_BLOCKS		8750	10 500
CFW_EXT_BLOCKS		10 000	12 000
CFZ_EXT_BLOCKS		6000	7200
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE		20 560	23 054
CRS_PRU_POOL3_SIZE		3750	4500
CRS_SUBRU_POOL1_SIZE		7500	9000
CRS_SUBRU_POOL2_SIZE		6125	8150
	0-1000	10 155	11 980
	1001-2000	10 185	12 010
	2001-5000	10 275	12 100
	5001-10 000	10 425	12 250
	10 001-15 000	10 575	12 400
	15 001-20 000	10 725	12 550

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 2 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
CRS_SUBRU_POOL3_SIZE	20 001-25 000	10 875	12 700
	25 001-30 000	11.025	12 850
	30 001-35 000	11 175	13 000
	35 001+	11 325	13 150
	0-1000	6500	7250
	1001-2000	6550	7300
	2001-5000	6700	7450
	5001-10 000	6950	7700
	10 001-15 000	7200	7950
	15 001-20 000	7450	8200
	20 001-25 000	7700	8450
	25 001-30 000	7950	8700
	30 001-35 000	8200	8950
	35 001+	8450	9200
CRS_SUBRU_POOL4_SIZE		8500	8600
CUSTOMER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		0	0
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		125	150
MAX_SDPOOL_NO		15	15

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 3 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0-1000	15 600	16 560
	1001-2000	15 600	17 520
	2001-5000	17 520	18 480
	5001-10 000	20 400	21 360
	10 001-15 000	22 320	24 240
	15 001-20 000	25 200	26 160
	20 001-25 000	27 120	29 040
	25 001-30 000	30 000	30 960
	30 001-35 000	32 880	33 840
	35 001+	34 800	34 800
NCCBS (ENET)			
	0-1000	20 400	20 400
	1001-2000	20 400	20 400
	2001-5000	20 400	20 400
	5001-10 000	20 400	34 800
	10 001-15 000	34 800	34 800
	15 001-20 000	34 800	34 800
	20 001-25 000	34 800	34 800
	25 001-30 000	34 800	34 800

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 4 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	30 001-35 000	34 800	34 800
	35 001+	34 800	49 200
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		4009	4134
NO_OF_FTR_XLA_BLKs		2125	2250
NO_OF_HIS_CONTROL_BLKs			
	0-1000	2000	2000
	1001-2000	4000	4000
	2001-5000	10 000	10 000
	5001-10 000	20 000	20 000
	10 001-15 000	30 000	30 000
	15 001-20 000	40 000	40 000
	20 001-25 000	50 000	50 000
	25 001-30 000	60 000	60 000
	30 001-35 000	70 000	70 000
	35 001+	80 000	80 000
NO_OF_HIS_DATA_BLKs - X1			
	0-1000	4600	5100
	1001-2000	6700	7200
	2001-5000	13 000	13 500
	5001-10 000	23 500	24 000

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 5 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
NO_OF_HIS_DATA_BLKs - X2	10 001-15 000	34 000	34 500
	15 001-20 000	44 500	45 000
	20 001-25 000	55 000	55 500
	25 001-30 000	65 500	66 000
	30 001-35 000	76 000	76 500
	35 001+	86 500	87 000
NO_OF_HIS_DATA_BLKs - X2	0-1000	2025	2150
	1001-2000	3425	3550
	2001-5000	7625	7750
	5001-10 000	14 625	14 750
	10 001-15 000	21 625	21 750
	15 001-20 000	28 625	28 750
	20 001-25 000	35 625	35 750
	25 001-30 000	42 625	42 750
	30 001-35 000	49 625	49 750
	35 001+	56 625	56 750
NO_OF_HIS_DATA_BLKs - X3	0-1000	825	950
	1001-2000	1025	1150
	2001-5000	1625	1750
	5001-10 000	2625	2750
	10 001-15 000	3625	3750

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 6 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	15 001-20 000	4625	4750
	20 001-25 000	5625	5750
	25 001-30 000	6625	6750
	30 001-35 000	7625	7750
	35 001+	8625	8750
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs		2809	2934
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		16 063	19 075
NO_OF_PVN_EXTBLK		2 700	2700
NO_OF_PVN_TERM_EXTBLK		1 200	1200
NO_OF_SC_EXT_BLKs		125	150
NO_OF_SDS_EXT_BLKs		625	750
NO_OF_SMALL_EXT_BLKs		1 000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1 200	1200
NO_OF_XLARGE_EXT_BLKs		531	538
NO_TFAN_OM_REGISTERS		2 047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_IBN_IXLA_EXT_BLOCKS		1 000	1 000
NUM_OF_NSC_EXT_BLK		512	512
NUM_OF_RTEB_EXTBLKS			
	0-1000	80	80
	1001-2000	160	160

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 7 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	2001-5000	400	400
	5001-10 000	800	800
	10 001-15 000	1200	1200
	15 001-20 000	1600	1600
	20 001-25 000	2000	2000
	25 001-30 000	2400	2400
	30 001-35 000	2800	2800
	35 001+	3200	3200
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		12 000	14 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Line sizes 60 001-80 000

The following table lists the table OFCENG parameter names and the set values for line sizes 60 001-80 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 1 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs		875	1000
AIN_NUM_01_00_EXT_BLKs		438	500
AIN_NUM_EXT_BLKs		875	1000
AIN_NUM_PROCESSING_EXT_BLKs		875	1000
AIN_NUM_TERM_NOTIF_EXT_BLKs		1750	2000
CFD_EXT_BLOCKS		12 250	14 000
CFW_EXT_BLOCKS		14 000	16 000
CFZ_EXT_BLOCKS		8400	9600
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE		25 548	28 042
CRS_PRU_POOL3_SIZE		5250	6000
CRS_SUBRU_POOL1_SIZE		10 500	12 000
CRS_SUBRU_POOL2_SIZE			
	0-1000	13 805	15 630
	1001-2000	13 835	15 660
	2001-5000	13 925	15 750
	5001-10 000	14 075	15 900
	10 001-15 000	14 225	16 050
	15 001-20 000	14 375	16 200

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 2 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
CRS_SUBRU_POOL3_SIZE	20 001-25 000	14 525	16 350
	25 001-30 000	14 675	16 500
	30 001-35 000	14 825	16 650
	35 001+	14 975	16 800
	0-1000	8000	8750
	1001-2000	8050	8800
	2001-5000	8200	8950
	5001-10 000	8450	9200
	10 001-15 000	8700	9450
	15 001-20 000	8950	9700
	20 001-25 000	9200	9950
	25 001-30 000	9450	10 200
	30 001-35 000	9700	10 450
	35 001+	9950	10 700
CRS_SUBRU_POOL4_SIZE		8700	8800
CUSTOMER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		0	0
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		175	200
MAX_SDPOOL_NO		15	15

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 3 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0-1000	18 480	19 440
	1001-2000	18 480	20 400
	2001-5000	20 400	21 360
	5001-10 000	22 320	24 240
	10 001-15 000	25 200	26 160
	15 001-20 000	28 080	29 040
	20 001-25 000	30 000	31 920
	25 001-30 000	32 880	33 840
	30 001-35 000	34 800	34 800
	35 001+	34 800	34 800
NCCBS (ENET)			
	0-1000	20 400	20 400
	1001-2000	20 400	20 400
	2001-5000	20 400	34 800
	5001-10 000	34 800	34 800
	10 001-15 000	34 800	34 800
	15 001-20 000	34 800	34 800
	20 001-25 000	34 800	34 800
	25 001-30 000	34 800	34 800

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 4 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	30 001-35 000	34 800	49 200
	35 001+	49 200	49 200
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		4259	4384
NO_OF_FTR_XLA_BLKs		2375	2500
NO_OF_HIS_CONTROL_BLKs			
	0-1000	2000	2000
	1001-2000	4000	4000
	2001-5000	10 000	10 000
	5001-10 000	20 000	20 000
	10 001-15 000	30 000	30 000
	15 001-20 000	40 000	40 000
	20 001-25 000	50 000	50 000
	25 001-30 000	60 000	60 000
	30 001-35 000	70 000	70 000
	35 001+	80 000	80 000
NO_OF_HIS_DATA_BLKs - X1			
	0-1000	5600	6100
	1001-2000	7700	8200
	2001-5000	14 000	14 500
	5001-10 000	24 500	25 000

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 5 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
NO_OF_HIS_DATA_BLKs - X2	10 001-15 000	35 000	35 500
	15 001-20 000	45 500	46 000
	20 001-25 000	56 000	56 500
	25 001-30 000	66 500	67 000
	30 001-35 000	77 000	77 500
	35 001+	87 500	88 000
	0-1000	2275	2400
	1001-2000	3675	3800
	2001-5000	7875	8000
	5001-10 000	14 875	15 000
	10 001-15 000	21 875	22 000
	15 001-20 000	28 875	29 000
	20 001-25 000	35 875	36 000
NO_OF_HIS_DATA_BLKs - X3	25 001-30 000	42 875	43 000
	30 001-35 000	49 875	50 000
	35 001+	56 875	57 000
	0-1000	1075	1200
	1001-2000	1275	1400
	2001-5000	1875	2000
	5001-10 000	2875	3000
	10 001-15 000	3875	4000

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 6 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	15 001-20 000	4875	5000
	20 001-25 000	5875	6000
	25 001-30 000	6875	7000
	30 001-35 000	7875	8000
	35 001+	8875	9000
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs		3509	3184
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		22 088	25 100
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		175	200
NO_OF_SDS_EXT_BLKs		875	1000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs		544	550
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		512	512
NUM_OF_RTEB_EXTBLKS			
	0-1000	80	80
	1001-2000	160	160

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 7 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	2001-5000	400	400
	5001-10 000	800	800
	10 001-15 000	1200	1200
	15 001-20 000	1600	1600
	20 001-25 000	2000	2000
	25 001-30 000	2400	2400
	30 001-35 000	2800	2800
	35 001+	3200	3200
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		16 000	18 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)**Line sizes 80 001-100 000**

The following table lists the table OFCENG parameter names and the preset values for line sizes 80 001-100 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 1 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001 - 100 000
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs		1125	1250
AIN_NUM_01_00_EXT_BLKs		563	625
AIN_NUM_EXT_BLKs		1125	1250
AIN_NUM_PROCESSING_EXT_BLKs		1125	1250
AIN_NUM_TERM_NOTIF_EXT_BLKs		2250	2500
CFD_EXT_BLOCKS		15 750	17 500
CFW_EXT_BLOCKS		18 000	20 000
CFZ_EXT_BLOCKS		10 800	12 000
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE		30 536	33 030
CRS_PRU_POOL3_SIZE		6750	7500
CRS_SUBRU_POOL1_SIZE		13 500	15 000
CRS_SUBRU_POOL2_SIZE			
	0-1000	17 455	19 280
	1001-2000	17 485	19 310
	2001-5000	17 575	19 400
	5001-10 000	17 725	19 550
	10 001-15 000	17 875	19 700
	15 001-20 000	18 025	19 850

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 2 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001 - 100 000
CRS_SUBRU_POOL3_SIZE	20 001-25 000	18 175	20 000
	25 001-30 000	18 325	20 150
	30 001-35 000	18 475	20 300
	35 001+	18 625	20 450
	0-1000	9500	10 250
	1001-2000	9550	10 300
	2001-5000	9700	10 450
	5001-10 000	9950	10 700
	10 001-15 000	10 200	10 950
	15 001-20 000	10 450	11 200
	20 001-25 000	10 700	11 450
	25 001-30 000	10 950	11 700
	30 001-35 000	11 200	11 950
	35 001+	11 450	12 200
CRS_SUBRU_POOL4_SIZE		8900	9000
CUSTOMER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		0	0
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		225	250
MAX_SDPOOL_NO		15	15

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 3 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001 - 100 000
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0-1000	21 360	22 320
	1001-2000	21 360	23 280
	2001-5000	23 280	24 240
	5001-10 000	25 200	27 120
	10 001-15 000	28 080	29 040
	15 001-20 000	30 960	31 920
	20 001-25 000	32 880	34 800
	25 001-30 000	34 800	34 800
	30 001-35 000	34 800	34 800
	35 001+	34 800	34 800
NCCBS (ENET)			
	0-1000	34 800	34 800
	1001-2000	34 800	34 800
	2001-5000	34 800	34 800
	5001-10 000	34 800	34 800
	10 001-15 000	34 800	34 800
	15 001-20 000	34 800	34 800
	20 001-25 000	34 800	34 800
	25 001-30 000	49 200	49 200

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 4 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001 - 100 000
	30 001-35 000	49 200	49 200
	35 001+	49 200	49 200
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		4509	4634
NO_OF_FTR_XLA_BLKs		2625	2750
NO_OF_HIS_CONTROL_BLKs			
	0-1000	2000	2000
	1001-2000	4000	4000
	2001-5000	10 000	10 000
	5001-10 000	20 000	20 000
	10 001-15 000	30 000	30 000
	15 001-20 000	40 000	40 000
	20 001-25 000	50 000	50 000
	25 001-30 000	60 000	60 000
	30 001-35 000	70 000	70 000
	35 001+	80 000	80 000
NO_OF_HIS_DATA_BLKs - X1			
	0-1000	6600	7100
	1001-2000	8700	9200
	2001-5000	15 000	15 500
	5001-10 000	25 500	26 000

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 5 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001 - 100 000
NO_OF_HIS_DATA_BLKs - X2	10 001-15 000	36 000	36 500
	15 001-20 000	46 500	47 000
	20 001-25 000	57 000	57 500
	25 001-30 000	67 500	68 000
	30 001-35 000	78 000	78 500
	35 001+	88 500	89 000
NO_OF_HIS_DATA_BLKs - X2	0-1000	2525	2650
	1001-2000	3925	4050
	2001-5000	8125	8250
	5001-10 000	15 125	15 250
	10 001-15 000	22 125	22 250
	15 001-20 000	29 125	29 250
	20 001-25 000	36 125	36 250
	25 001-30 000	43 125	43 250
	30 001-35 000	50 125	50 250
	35 001+	57 125	57 250
NO_OF_HIS_DATA_BLKs - X3	0-1000	1325	1450
	1001-2000	1525	1650
	2001-5000	2125	2250
	5001-10 000	3125	3250
	10 001-15 000	4125	4250

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 6 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001 - 100 000
	15 001-20 000	5125	5250
	20 001-25 000	6125	6250
	25 001-30 000	7125	7250
	30 001-35 000	8125	8250
	35 001+	9125	9250
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs		3309	3434
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		28 113	31 125
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		225	250
NO_OF_SDS_EXT_BLKs		1125	1250
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs		556	563
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		512	512
NUM_OF_RTEB_EXTBLKS			
	0-1000	80	80
	1001-2000	160	160

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 7 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001 - 100 000
	2001-5000	400	400
	5001-10 000	800	800
	10 001-15 000	1200	1200
	15 001-20 000	1600	1600
	20 001-25 000	2000	2000
	25 001-30 000	2400	2400
	30 001-35 000	2800	2800
	35 001+	3200	3200
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		20 000	22 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Line sizes 101 000-140 000

The following table lists the table OFCENG parameter names and the preset values for line sizes 101 000-140 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 1 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
ACD_OVERFLOW_BLOCKS		4094	4 094
AIN_NUM_00_PARA_EXT_BLKs		1500	1 750
AIN_NUM_01_00_EXT_BLKs		750	875
AIN_NUM_EXT_BLKs		1500	1 750
AIN_NUM_PROCESSING_EXT_BLKs		1500	1 750
AIN_NUM_TERM_NOTIF_EXT_BLKs		3000	3 500
CFD_EXT_BLOCKS		21 000	24 500
CFW_EXT_BLOCKS		24 000	28 000
CFZ_EXT_BLOCKS		14 400	16 800
CRS_PRU_POOL1_SIZE		2 000	2000
CRS_PRU_POOL2_SIZE		38 018	43 006
CRS_PRU_POOL3_SIZE		9 000	10 500
CRS_SUBRU_POOL1_SIZE		18 000	21 000
CRS_SUBRU_POOL2_SIZE			
	0-1000	22 930	26 580
	1001-2000	22 960	26 610
	2001-5000	23 050	26 700
	5001-10 000	23 200	26 850
	10 001-15 000	23 350	27 000
	15 001-20 000	23 500	27 150

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 2 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
CRS_SUBRU_POOL3_SIZE	20 001-25 000	23 650	27 300
	25 001-30 000	23 800	27 450
	30 001-35 000	23 950	27 600
	35 001+	24 100	27 750
	0-1000	11 750	13 250
	1001-2000	11 800	13 300
	2001-5000	11 950	13 450
	5001-10 000	12 200	13 700
	10 001-15 000	12 450	13 950
	15 001-20 000	12 700	14 200
	20 001-25 000	12 950	14 450
	25 001-30 000	13 200	14 700
	30 001-35 000	13 450	14 950
	35 001+	13 700	15 200
CRS_SUBRU_POOL4_SIZE		9200	9400
CUSTOMER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		0	0
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		300	350
MAX_SDPOOL_NO		15	15

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 3 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0-1000	25 200	28 080
	1001-2000	25 200	28 080
	2001-5000	27 120	30 000
	5001-10 000	30 000	32 880
	10 001-15 000	31 920	34 800
	15 001-20 000	34 800	34 800
	20 001-25 000	34 800	34 800
	25 001-30 000	34 800	34 800
	30 001-35 000	34 800	34 800
	35 001+	34 800	34 800
NCCBS (ENET)			
	0-1000	34 800	34 800
	1001-2000	34 800	34 800
	2001-5000	34 800	34 800
	5001-10 000	34 800	34 800
	10 001-15 000	34 800	34 800
	15 001-20 000	34 800	49 200
	20 001-25 000	49 200	49 200
	25 001-30 000	49 200	49 200

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 4 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
	30 001-35 000	49 200	49 200
	35 001+	49 200	49 200
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2 047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1 000
NO_OF_FTR_CONTROL_BLKs		4884	5 134
NO_OF_FTR_XLA_BLKs		3000	3 250
NO_OF_HIS_CONTROL_BLKs			
	0-1000	2000	2000
	1001-2000	4000	4000
	2001-5000	10 000	10 000
	5001-10 000	20 000	20 000
	10 001-15 000	30 000	30 000
	15 001-20 000	40 000	40 000
	20 001-25 000	50 000	50 000
	25 001-30 000	60 000	60 000
	30 001-35 000	70 000	70 000
	35 001+	80 000	80 000
NO_OF_HIS_DATA_BLKs - X1			
	0-1000	8 100	9 100
	1001-2000	10 200	11 200
	2001-5000	16 500	17 500
	5001-10 000	27 000	28 000

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 5 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
NO_OF_HIS_DATA_BLKs - X2	10 001-15 000	37 500	38 500
	15 001-20 000	48 000	49 000
	20 001-25 000	58 500	59 500
	25 001-30 000	69 000	70 000
	30 001-35 000	79 500	80 500
	35 001+	90 000	91 000
NO_OF_HIS_DATA_BLKs - X2	0-1 000	2900	3150
	1 001-2 000	4300	4550
	2 001-5 000	8500	8750
	5 001-10 000	15 500	15 750
	10 001-15 000	22 500	22 750
	15 001-20 000	29 500	29 750
	20 001-25 000	36 500	36 750
	25 001-30 000	43 500	43 750
	30 001-35 000	50 500	50 750
	35 001+	57 500	57 750
NO_OF_HIS_DATA_BLKs - X3	0-1000	1700	1950
	1001-2000	1900	2150
	2001-5000	2500	2750
	5001-10 000	3500	3750
	10 001-15 000	4500	4750

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 6 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
	15 001-20 000	5500	5750
	20 001-25 000	6500	6750
	25 001-30 000	7500	7750
	30 001-35 000	8500	8750
	35 001+	9500	9750
NO_OF_LARGE_EXT_BLKs		1000	1001
NO_OF_LARGE_FTR_DATA_BLKs		3684	3934
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		32 767	32 767
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		300	350
NO_OF_SDS_EXT_BLKs		1500	1750
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs		575	588
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		512	512
NUM_OF_RTEB_EXTBLKS			
	0-1000	80	80
	1001-2000	160	160

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 7 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
	2001-5000	400	400
	5001-10 000	800	800
	10 001-15 000	1200	1200
	15 001-20 000	1600	1600
	20 001-25 000	2000	2000
	25 001-30 000	2400	2400
	30 001-35 000	2800	2800
	35 001+	3200	3200
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		26 000	30 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)**Line sizes 140 001-160 000**

The following table lists the table OFCENG parameter names and preset values for line sizes 140 001-160 000. The table lists parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 1 of 7)

Parameter name	Trunk size	140 001- 160 000
ACD_OVERFLOW_BLOCKS		4094
AIN_NUM_00_PARA_EXT_BLKs		2000
AIN_NUM_01_00_EXT_BLKs		1000
AIN_NUM_EXT_BLKs		2000
AIN_NUM_PROCESSING_EXT_BLKs		2000
AIN_NUM_TERM_NOTIF_EXT_BLKs		4000
CFD_EXT_BLOCKS		28 000
CFW_EXT_BLOCKS		32 000
CFZ_EXT_BLOCKS		19 200
CRS_PRU_POOL1_SIZE		2000
CRS_PRU_POOL2_SIZE		47 994
CRS_PRU_POOL3_SIZE		12 000
CRS_SUBRU_POOL1_SIZE		18 000
CRS_SUBRU_POOL2_SIZE		
	0-1000	30 230
	1001-2000	30 260
	2001-5000	30 350
	5001-10 000	30 500
	10 001-15 000	30 650
	15 001-20 000	30 800

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 2 of 7)

Parameter name	Trunk size	140 001- 160 000
CRS_SUBRU_POOL3_SIZE	20 001-25 000	30 950
	25 001-30 000	31 100
	30 001-35 000	31 250
	35 001+	31 400
	0-1000	14 750
	1001-2000	14 800
	2001-5000	14 950
	5001-10 000	15 200
	10 001-15 000	15 450
	15 001-20 000	15 700
	20 001-25 000	15 950
	25 001-30 000	16 200
	30 001-35 000	16 450
	35 001+	16 700
CRS_SUBRU_POOL4_SIZE		9600
CUSTOMER_GROUP_IBNGRP_OM_COUNT		4095
EA_MF_SS7_EXT_BLOCK_COUNT		0
E911_NUMBER_OF_FDBS		1000
KSHUNT_EXT_BLOCKS		500
MAX_NO_OF_TRANS_ID		16 000
MAX_NUM_WIDEBAND_CALLS		400
MAX_SDPOOL_NO		15

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 3 of 7)

Parameter name	Trunk size	140 001- 160 000
MAXNUCS (JNET)		1024
MAXNUCS (ENET)		0
MAXSTS		64
NCCBS (JNET)		
	0-1000	30 960
	1001-2000	30 960
	2001-5000	32 880
	5001-10 000	34 800
	10 001-15 000	34 800
	15 001-20 000	34 800
	20 001-25 000	34 800
	25 001-30 000	34 800
	30 001-35 000	34 800
	35 001+	34 800
NCCBS (ENET)		
	0-1000	34 800
	1001-2000	34 800
	2001-5000	34 800
	5001-10 000	34 800
	10 001-15 000	49 200
	15 001-20 000	49 200
	20 001-25 000	49 200
	25 001-30 000	49 200

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 4 of 7)

Parameter name	Trunk size	140 001- 160 000
	30 001-35 000	49 200
	35 001+	63 600
NO_LOCAL_COIN_EXT_BLKs		256
NO_OCCTS_OM_REGISTERS		2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000
NO_OF_FTR_CONTROL_BLKs		5384
NO_OF_FTR_XLA_BLKs		3500
NO_OF_HIS_CONTROL_BLKs	0-1000	2000
	1001-2000	4000
	2001-5000	10 000
	5001-10 000	20 000
	10 001-15 000	30 000
	15 001-20 000	40 000
	20 001-25 000	50 000
	25 001-30 000	60 000
	30 001-35 000	70 000
	35 001+	80 000
NO_OF_HIS_DATA_BLKs - X1	0-1000	10 100
	1001-2000	12 200
	2001-5000	18 500
	5001-10 000	29 000

DMS-100 local switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 5 of 7)

Parameter name	Trunk size	140 001- 160 000
NO_OF_HIS_DATA_BLKs - X2	10 001-15 000	39 500
	15 001-20 000	50 000
	20 001-25 000	60 500
	25 001-30 000	71 000
	30 001-35 000	81 500
	35 001+	92 000
	0-1000	3400
	1001-2000	4800
	2001-5000	9000
	5001-10 000	16 000
	10 001-15 000	23 000
	15 001-20 000	30 000
	20 001-25 000	37 000
NO_OF_HIS_DATA_BLKs - X3	25 001-30 000	44 000
	30 001-35 000	51 000
	35 001+	58 000
	0-1000	2200
	1001-2000	2400
	2001-5000	3000
	5001-10 000	4000
	10 001-15 000	5000

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 6 of 7)

Parameter name	Trunk size	140 001- 160 000
	15 001-20 000	6000
	20 001-25 000	7000
	25 001-30 000	8000
	30 001-35 000	9000
	35 001+	10 000
NO_OF_LARGE_EXT_BLKs		1000
NO_OF_LARGE_FTR_DATA_BLKs		4184
NO_OF_MEDIUM_EXT_BLKs		1000
NO_OF_MEDIUM_FTR_DATA_BLKs		32 767
NO_OF_PVN_EXTBLK		2700
NO_OF_PVN_TERM_EXTBLK		1200
NO_OF_SC_EXT_BLKs		400
NO_OF_SDS_EXT_BLKs		2000
NO_OF_SMALL_EXT_BLKs		1000
NO_OF_SMALL_FTR_DATA_BLKs		1200
NO_OF_XLARGE_EXT_BLKs		600
NO_TFAN_OM_REGISTERS		2047
NOS_QUANTITY_OF_SVCS		15
NUM_IBN_IXLA_EXT_BLOCKS		1000
NUM_OF_NSC_EXT_BLK		512
NUM_OF_RTEB_EXTBLKS		
	0-1000	80
	1001-2000	160

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCENG (end)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 7 of 7)

Parameter name	Trunk size	140 001- 160 000
	2001-5000	400
	5001-10 000	800
	10 001-15 000	1200
	15 001-20 000	1600
	20 001-25 000	2000
	25 001-30 000	2400
	30 001-35 000	2800
	35 001+	3200
NUM_RC_EXT_BLKs		1000
NUMCALLPROCESSES		80
NUMCPWAKE		32 767
NUMIBNCQEXTBLK		3825
NUMOHCQBQTRANSBLKS		1169
NUMPERMEXT		7000
OCCTS_ENHANCED_FEATURE		Y
PSTN_GT_SIZE		10
SLE_ITEMS_IN_SEGMENT		1024
SLE_MAX_SEGMENT_COUNT		2047

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCOPT

Line sizes 1-160 000

The Table OFCOPT parameter lists the following names and preset values for line sizes 1-160 000.

Preset office parameter values for Table OFCOPT line sizes 1-160 000 (Sheet 1 of 2)

Parameter name	1-160 000 lines
MAX_ACDMIS_SESSIONS	5
MAX_MBG_LINES	1 000
MAX_NUM_CTX_ASSOC	32 767
MAX_NUM_ECM_ACDEVENT	32 767
MAX_NUM_ECM_CALLINIT	32 767
MAX_NUM_ECM_CTXEVENT	32 767
MAX_NUM_ECM_DNQUERY	32 767
MAX_NUM_ECM_ICCM	32 767
MAX_NUM_ECM_LINE_MAKECALL	32 767
MAX_NUM_ECM_LINE_SCAICC	32 767
MAX_NUM_ECM_LINE_SCAI3WC	32 767
MAX_NUM_ECM_RESEVENT	32 767
MAX_NUM_ECM_RESOURCE	32 767
MAX_NUM_ECM_ROUTING	32 767
MAX_NUM_ECM_SCAICC	32 767
MAX_NUM_ECM_SCAI3WC	32 767
MAX_NUM_ECM_SCAIMWTI	32 767
MAX_NUM_ECM_SVC	32 767
MAX_NUM_ECM_TPAC	32 767
MAX_NUM_ECM_TPCC	32 767
MAX_NUM_ECM_TPQC	32 767

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCOPT (end)

Preset office parameter values for Table OFCOPT line sizes 1-160 000 (Sheet 2 of 2)

Parameter name	1-160 000 lines
MAX_NUM_ECM_ASSOC	32 767
NA_TOLL_FREE_TYPE	US_SERVICE
TFAN_ENHANCED_FEATURE	Y

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCSTD

Line sizes 1-160,000

The Table OFCSTD parameter lists the following names and preset values for line sizes 1-160 000.

Preset office parm values for table OFCSTD line sizes 1-160,000

Parameter name	1- 160,000 lines
MTCBASE_SCPD	2,047

DMS-100 local switch with 0-35% MDC and ISDN lines

Table OFCVAR

Line sizes 1-160 000

The Table OFCVAR parameter lists the following names and preset values for line sizes 1-160 000.

Preset office parameter values for Table OFCVAR line sizes 1-160 000

Parameter name	1-160 000 lines
PER_OPC_LOGDEV_BUFFER_SIZE	22 000

DMS-100 local switch with 0-35% MDC and ISDN lines
Table DATASIZE

Line sizes 1-160 000

The Table DATASIZE parameter lists the following names and the preset values for line sizes 1-160 000.

Preset office parameter values for Table DATASIZE line sizes 1-160 000

Parameter name	1-160 000 lines
AIODGRP	255
AIODMEM	255
CLLI	2 048
CPOS	64
NWMAOCR	64
NWMPPLN	256
TRKGRP	2 048

4 DMS-100 local switch with 36—100% MDC and ISDN lines-U.S. only

Organization

This chapter applies to DMS-100 local switch offices in which 36-100% of the total lines are Meridian Digital Centrex (MDC) and integrated services digital network (ISDN) lines.

This chapter is organized in modules. A module is present for each of the following office parameter tables, which have preset values:

- table OFCENG
- table OFCOPT
- table OFCSTD
- table OFCVAR
- table DATASIZE

Each office parameter module includes five tables grouped according to the number of lines.

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG

Line sizes 1-20 000

The following table lists the table OFCENG parameter names and preset values for line sizes 1 - 20 000. The table lists the parameter according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 1 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
ACD_OVERFLOW_BLOCKS		3000	3000
AIN_NUM_00_PARA_EXT_BLKs		375	750
AIN_NUM_01_00_EXT_BLKs		188	375
AIN_NUM_EXT_BLKs		375	750
AIN_NUM_PROCESSING_EXT_BLKs		375	750
AIN_NUM_TERM_NOTIF_EXT_BLKs		750	1500
CFD_EXT_BLOCKS		5250	10 500
CFW_EXT_BLOCKS		2000	4000
CFZ_EXT_BLOCKS		1200	2400
CRS_PRU_POOL1_SIZE		1000	1000
CRS_PRU_POOL2_SIZE		12 084	16 078
CRS_PRU_POOL3_SIZE		2250	4500
CRS_SUBRU_POOL1_SIZE		4500	9000
CRS_SUBRU_POOL2_SIZE			
	0 - 1000	4905	8780
	1001 - 2000	4935	8810
	2001 - 5000	5025	8900
	5001 - 10 000	5175	9050
	10 001 - 15 000	5325	9200
	15 001 - 20 000	5475	9350

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 2 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
CRS_SUBRU_POOL3_SIZE	20 001 - 25 000	5625	9500
	25 001 - 30 000	5775	9650
	30 001 - 35 000	5925	9800
	35 001+	6075	9950
	0 - 1000	5000	7250
	1001 - 2000	5050	7300
	2001 - 5000	5200	7450
	5001 - 10 000	5450	7700
	10 001 - 15 000	5700	7950
	15 001 - 20 000	5950	8200
	20 001 - 25 000	6200	8450
	25 001 - 30 000	6450	8700
	30 001 - 35 000	6700	8950
	35 001+	6950	9200
CRS_SUBRU_POOL4_SIZE		7100	7200
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		0	0
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_CMAP_SESSIONS		5	5
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		75	150

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 3 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
MAX_SDPOOL_NO		15	15
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		32	32
NCCBS (JNET)			
	0 - 1000	9840	10 800
	1001 - 2000	10 800	11 760
	2001 - 5000	11 760	13 680
	5001 - 10 000	14 640	15 600
	10 001 - 15 000	16 560	18 480
	15 001 - 20 000	19 440	20 400
	20 001 - 25 000	22 320	23 280
	25 001 - 30 000	24 240	26 160
	30 001 - 35 000	27 120	28 080
	35 001+	29 040	30 960
NCCBS (ENET)			
	0 - 1000	20 400	20 400
	1001 - 2000	20 400	20 400
	2001 - 5000	20 400	20 400
	5001 - 10 000	20 400	20 400
	10 001 - 15 000	20 400	20 400
	15 001 - 20 000	20 400	20 400
	20 001 - 25 000	34 800	34 800

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 4 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	25 001 - 30 000	34 800	34 800
	30 001 - 35 000	34 800	34 800
	35 001+	34 800	34 800
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		3759	4134
NO_OF_FTR_XLA_BLKs		1875	2250
NO_OF_HIS_CONTROL_BLKs			
	0 - 1000	2000	2000
	1001 - 2000	4000	4000
	2001 - 5000	10 000	10 000
	5001 - 10 000	20 000	20 000
	10 001 - 15 000	30 000	30 000
	15 001 - 20 000	40 000	40 000
	20 001 - 25 000	50 000	50 000
	25 001 - 30 000	60 000	60 000
	30 001 - 35 000	70 000	70 000
	35 001+	80 000	80 000
NO_OF_HIS_DATA_BLKs - X1			
	0 - 1000	3650	5200
	1001 - 2000	5750	7300
	2001 - 5000	12 050	13 600

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 5 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	5001 - 10 000	22 550	24 100
	10 001 - 15 000	33 050	34 600
	15 001 - 20 000	43 550	45 100
	20 001 - 25 000	54 050	55 600
	25 001 - 30 000	64 550	66 100
	30 001 - 35 000	75 050	76 600
	35 001+	85 550	87 100
NO_OF_HIS_DATA_BLKs - X2			
	0 - 1000	1925	2450
	1001 - 2000	3325	3850
	2001 - 5000	7525	8050
	5001 - 10 000	14 525	15 050
	10 001 - 15 000	21 525	22 050
	15 001 - 20 000	28 525	29 050
	20 001 - 25 000	35 525	36 050
	25 001 - 30 000	42 525	43 050
	30 001 - 35 000	49 525	50 050
	35 001+	56 525	57 050
NO_OF_HIS_DATA_BLKs - X3			
	0 - 1000	613	1025
	1001 - 2000	813	1225
	2001 - 5000	1413	1825
	5001 - 10 000	2413	2825

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 6 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	10 001 - 15 000	3413	3825
	15 001 - 20 000	4413	4825
	20 001 - 25 000	5413	5825
	25 001 - 30 000	6413	6825
	30 001 - 35 000	7413	7825
	35 001+	8413	8825
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs		2597	3009
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		4038	7075
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		75	150
NO_OF_SDS_EXT_BLKs		1000	2000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1238	1275
NO_OF_XLARGE_EXT_BLKs		519	538
NO_TFAN_OM_REGISTERS		4095	4095
NOS_QUANTITY_OF_SVCS		15	15
NUM_ENGR_NWM_TRKGRP_CTRLs		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		512	512
NUM_OF_RTEB_EXTBLKS			

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 7 of 7)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	0 - 1000	80	80
	1001 - 2000	160	160
	2001 - 5000	400	400
	5001 - 10 000	800	800
	10 001 - 15 000	1200	1200
	15 001 - 20 000	1600	1600
	20 001 - 25 000	2000	2000
	25 001 - 30 000	2400	2400
	30 001 - 35 000	2800	2800
	35 001+	3200	3200
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		4000	6000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Line sizes 20 001-40 000

The following table lists the table OFCENG parameter names and preset values for line sizes 20 001 - 40 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 1 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
ACD_OVERFLOW_BLOCKS		3000	4094
AIN_NUM_00_PARA_EXT_BLKs		1125	1500
AIN_NUM_01_00_EXT_BLKs		563	750
AIN_NUM_EXT_BLKs		1125	1500
AIN_NUM_PROCESSING_EXT_BLKs		1125	1500
AIN_NUM_TERM_NOTIF_EXT_BLKs		2250	3000
CFD_EXT_BLOCKS		15 750	21 000
CFW_EXT_BLOCKS		6000	8000
CFZ_EXT_BLOCKS		3600	4800
CRS_PRU_POOL1_SIZE		1000	1000
CRS_PRU_POOL2_SIZE		20 072	24 066
CRS_PRU_POOL3_SIZE		6750	9000
CRS_SUBRU_POOL1_SIZE		13 500	18 000
CRS_SUBRU_POOL2_SIZE			
	0 - 1000	12 655	16 530
	1001 - 2000	12 685	16 560
	2001 - 5000	12 775	16 650
	5001 - 10 000	12 925	16 800
	10 001 - 15 000	13 075	16 950
	15 001 - 20 000	13 225	17 100

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 2 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
CRS_SUBRU_POOL3_SIZE	20 001 - 25 000	13 375	17 250
	25 001 - 30 000	13 525	17 400
	30 001 - 35 000	13 675	17 550
	35 001+	13 825	17 700
	0 - 1000	9500	11 750
	1001 - 2000	9550	11 800
	2001 - 5000	9700	11 950
	5001 - 10 000	9950	12 200
	10 001 - 15 000	10 200	12 450
	15 001 - 20 000	10 450	12 700
	20 001 - 25 000	10 700	12 950
	25 001 - 30 000	10 950	13 200
	30 001 - 35 000	11 200	13 450
	35 001+	11 450	13 700
CRS_SUBRU_POOL4_SIZE		7300	7400
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		0	0
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		225	300
MAX_SDPOOL_NO		15	15

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 3 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		32	64
NCCBS (JNET)			
	0 - 1000	12 720	13 680
	1001 - 2000	12 720	14 640
	2001 - 5000	14 640	15 600
	5001 - 10 000	17 520	18 480
	10 001 - 15 000	19 440	21 360
	15 001 - 20 000	22 320	23 280
	20 001 - 25 000	24 240	26 160
	25 001 - 30 000	27 120	28 080
	30 001 - 35 000	30 000	30 960
	35 001+	31 920	33 840
NCCBS (ENET)			
	0 - 1000	20 400	20 400
	1001 - 2000	20 400	20 400
	2001 - 5000	20 400	20 400
	5001 - 10 000	20 400	20 400
	10 001 - 15 000	20 400	34 800
	15 001 - 20 000	34 800	34 800
	20 001 - 25 000	34 800	34 800
	25 001 - 30 000	34 800	34 800

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 4 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	30 001 - 35 000	34 800	34 800
	35 001+	34 800	34 800
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		4509	4884
NO_OF_FTR_XLA_BLKs		2625	3000
NO_OF_HIS_CONTROL_BLKs			
	0 - 1000	2000	2000
	1001 - 2000	4000	4000
	2001 - 5000	10 000	10 000
	5001 - 10 000	20 000	20 000
	10 001 - 15 000	30 000	30 000
	15 001 - 20 000	40 000	40 000
	20 001 - 25 000	50 000	50 000
	25 000 - 30 000	60 000	60 000
	30 001 - 35 000	70 000	70 000
	35 001+	80 000	80 000
NO_OF_HIS_DATA_BLKs - X1			
	0 - 1000	6750	8300
	1001 - 2000	8850	10 400
	2001 - 5000	15 150	16 700
	5001 - 10 000	25 650	27 200

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 5 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
NO_OF_HIS_DATA_BLKs - X2	10 001 - 15 000	36 150	37 700
	15 001 - 20 000	46 650	48 200
	20 001 - 25 000	57 150	58 700
	25 001 - 30 000	67 650	69 200
	30 001 - 35 000	78 150	79 700
	35 001+	88 650	90 200
NO_OF_HIS_DATA_BLKs - X2	0 - 1000	2975	3500
	1001 - 2000	4375	4900
	2001 - 5000	8575	9100
	5001 - 10 000	15 575	16 100
	10 001 - 15 000	22 575	23 100
	15 001 - 20 000	29 575	30 100
	20 001 - 25 000	36 575	37 100
	25 001 - 30 000	43 575	44 100
	30 001 - 35 000	50 575	51 100
	35 001+	57 575	58 100
NO_OF_HIS_DATA_BLKs - X3	0 - 1000	1438	1850
	1001 - 2000	1638	2050
	2001 - 5000	2238	2650
	5001 - 10 000	3238	3650
	10 001 - 15 000	4238	4650

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 6 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	15 001 - 20 000	5238	5650
	20 001 - 25 000	6238	6650
	25 001 - 30 000	7238	7650
	30 001 - 35 000	8238	8650
	35 001+	9238	9650
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs		3422	3834
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		10 113	13 150
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		225	300
NO_OF_SDS_EXT_BLKs		3000	4000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1313	1350
NO_OF_XLARGE_EXT_BLKs		613	650
NO_TFAN_OM_REGISTERS		4095	4095
NOS_QUANTITY_OF_SVCS		15	15
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		512	512
NUM_OF_RTEB_EXTBLKS			
	0 - 1000	80	80
	1001 - 2000	160	160

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 7 of 7)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	2001 - 5000	400	400
	5001 - 10 000	800	800
	10 001 - 15 000	1200	1200
	15 001 - 20 000	1600	1600
	20 001 - 25 000	2000	2000
	25 001 - 30 000	2400	2400
	30 001 - 35 000	2800	2800
	35 001+	3200	3200
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		8000	10 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)**Line sizes 40 001-60 000**

The following table lists the table OFCENG parameter names and preset values for line sizes 40 001 - 60 000. The table lists the parameter names according to trunk size if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 1 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs		1875	2250
AIN_NUM_01_00_EXT_BLKs		938	1125
AIN_NUM_EXT_BLKs		1875	2250
AIN_NUM_PROCESSING_EXT_BLKs		1875	2250
AIN_NUM_TERM_NOTIF_EXT_BLKs		3750	4500
CFD_EXT_BLOCKS		26 250	31 500
CFW_EXT_BLOCKS		10 000	12 000
CFZ_EXT_BLOCKS		6000	7200
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE		28 060	32 054
CRS_PRU_POOL3_SIZE		13 500	15 750
CRS_SUBRU_POOL1_SIZE		22 500	27 000
CRS_SUBRU_POOL2_SIZE			
	0 -1000	20 405	24 280
	1001 - 2000	20 435	24 310
	2001 - 5000	20 525	24 400
	5001 - 10 000	20 675	24 550
	10 001 - 15 000	20 825	24 700
	15 001 - 20 000	20 975	24 850

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 2 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
CRS_SUBRU_POOL3_SIZE	20 001 - 25 000	21 125	25 000
	25 001 - 30 000	21 275	25 150
	30 001 - 35 000	21 425	25 300
	35 001+	21 575	25 450
	0 - 1000	14 000	16 250
	1001 - 2000	14 050	16 300
	2001 - 5000	14 200	16 450
	5001 - 10 000	14 450	16 700
	10 001 - 15 000	14 700	16 950
	15 001 - 20 000	14 950	17 200
	20 001 - 25 000	15 200	17 450
	25 001 - 30 000	15 450	17 700
	30 001 - 35 000	15 700	17 950
	35 001+	15 950	18 200
CRS_SUBRU_POOL4_SIZE		8500	8600
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		0	0
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		375	450
MAX_SDPOOL_NO		15	15

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 3 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0 - 1000	15 600	16 560
	1001 - 2000	15 600	17 520
	2001 - 5000	17 520	18 480
	5001 - 10 000	20 400	21 360
	10 001 - 15 000	22 320	24 240
	15 001 - 20 000	25 200	26 160
	20 001 - 25 000	27 120	29 040
	25 001 - 30 000	30 000	30 960
	30 001 - 35 000	32 880	33 840
	35 001+	34 800	34 800
NCCBS (ENET)			
	0 - 1000	20 400	20 400
	1001 - 2000	20 400	20 400
	2001 - 5000	20 400	20 400
	5001 - 10 000	20 400	34 800
	10 001 - 15 000	34 800	34 800
	15 001 - 20 000	34 800	34 800
	20 001 - 25 000	34 800	34 800
	25 001 - 30 000	34 800	34 800

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 4 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	30 001 - 35 000	34 800	34 800
	35 001+	34 800	49 200
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		5259	5634
NO_OF_FTR_XLA_BLKs		3375	3750
NO_OF_HIS_CONTROL_BLKs			
	0 - 1000	2000	2000
	1001 - 2000	4000	4000
	2001 - 5000	10 000	10 000
	5001 - 10 000	20 000	20 000
	10 001 - 15 000	30 000	30 000
	15 001 - 20 000	40 000	40 000
	20 001 - 25 000	50 000	50 000
	25 001 - 30 000	60 000	60 000
	30 001 - 35 000	70 000	70 000
	35 001+	80 000	80 000
NO_OF_HIS_DATA_BLKs - X1			
	0 - 1000	9850	11 400
	1001 - 2000	11 950	13 500
	2001 - 5000	18 250	19 800
	5001 - 10 000	28 750	30 300

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 5 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	10 001 - 15 000	39 250	40 800
	15 001 - 20 000	49 750	51 300
	20 001 - 25 000	60 250	61 800
	25 001 - 30 000	70 750	72 300
	30 001 - 35 000	81 250	82 800
	35 001+	91 750	93 300
NO_OF_HIS_DATA_BLKs - X2			
	0 - 1000	4025	4550
	1001 - 2000	5425	5950
	2001 - 5000	9625	10 150
	5001 - 10 000	16 625	17 150
	10 001 - 15 000	23 625	24 150
	15 001 - 20 000	30 625	31 150
	20 001 - 25 000	37 625	38 150
	25 001 - 30 000	44 625	45 150
	30 001 - 35 000	51 625	52 150
	35 001+	58 625	59 150
NO_OF_HIS_DATA_BLKs - X3			
	0 - 1000	2263	2675
	1001 - 2000	2463	2875
	2001 - 5000	3063	3475
	5001 - 10 000	4063	4475
	10 001 - 15 000	5063	5475

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 6 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	15 001 - 20 000	6063	6475
	20 001 - 25 000	7063	7475
	25 001 - 30 000	8063	8475
	30 001 - 35 000	9063	9475
	35 001+	10 063	10 475
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs		4247	4659
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		16 188	19 225
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		375	450
NO_OF_SDS_EXT_BLKs		5000	6000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1388	1425
NO_OF_XLARGE_EXT_BLKs		688	725
NO_TFAN_OM_REGISTERS		4095	4095
NOS_QUANTITY_OF_SVCS		15	15
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		512	512
NUM_OF_RTEB_EXTBLKS			
	0 - 1000	80	80
	1001 - 2000	160	160

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 7 of 7)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	2001 - 5000	400	400
	5001 - 10 000	800	800
	10 001 - 15 000	1200	1200
	15 001 - 20 000	1600	1600
	20 001 - 25 000	2000	2000
	25 001 - 30 000	2400	2400
	30 001 - 35 000	2800	2800
	35 001+	3200	3200
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		12 000	14 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Line sizes 60 001-80 000

The following table lists the table OFCENG parameter names and preset values for line sizes 60 001 - 80 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 1 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs		2625	3000
AIN_NUM_01_00_EXT_BLKs		1313	1500
AIN_NUM_EXT_BLKs		2625	3000
AIN_NUM_PROCESSING_EXT_BLKs		2625	3000
AIN_NUM_TERM_NOTIF_EXT_BLKs		5250	6000
CFD_EXT_BLOCKS		32 767	32 767
CFW_EXT_BLOCKS		14 000	16 000
CFZ_EXT_BLOCKS		8400	9600
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE		36 048	40 042
CRS_PRU_POOL3_SIZE		15 750	18 000
CRS_SUBRU_POOL1_SIZE		31 500	36 000
CRS_SUBRU_POOL2_SIZE			
	0 - 1000	28 155	32 030
	1001 - 2000	28 185	32 060
	2001 - 5000	28 275	32 150
	5001 - 10 000	28 425	32 300
	10 001 - 15 000	28 575	32 450
	15 001 - 20 000	28 725	32 600

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 2 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
CRS_SUBRU_POOL3_SIZE	20 001 - 25 000	28 875	32 750
	25 001 - 30 000	29 025	32 900
	30 001 - 35 000	29 175	33050
	35 001+	29 325	33 200
	0 - 1000	18 500	20 750
	1001 - 2000	18 550	20 800
	2001 - 5000	18 700	20 950
	5001 - 10 000	18 950	21 200
	10 001 - 15 000	19 200	21 450
	15 001 - 20 000	19 450	21 700
	20 001 - 25 000	19 700	21 950
	25 001 - 30 000	19 950	22 200
CRS_SUBRU_POOL4_SIZE	30 001 - 35 000	20 200	22 450
	35 001+	20 450	22 700
		8700	8800
		4095	4095
		0	0
		1000	1000
		500	500
		16 000	16 000
		500	500
		15	15
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		0	0
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		500	500
MAX_SDPOOL_NO		15	15

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 3 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0 - 1000	18 480	19 440
	1001 - 2000	18 480	20 400
	2001 - 5000	20 400	21 360
	5001 - 10 000	22 320	24 240
	10 001 - 15 000	25 200	26 160
	15 001 - 20 000	28 080	29 040
	20 001 - 25 000	30 000	31 920
	25 001 - 30 000	32 880	33 840
	30 001 - 35 000	34 800	34 800
	35 001+	34 800	34 800
NCCBS (ENET)			
	0 - 1000	20 400	20 400
	1001 - 2000	20 400	20 400
	2001 - 5000	20 400	34 800
	5001 - 10 000	34 800	34 800
	10 001 - 15 000	34 800	34 800
	15 001 - 20 000	34 800	34 800
	20 001 - 25 000	34 800	34 800
	25 001 - 30 000	34 800	34 800

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 4 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	30 001 - 35 000	34 800	49 200
	35 001+	49 200	49 200
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		6009	6384
NO_OF_FTR_XLA_BLKs		4125	4500
NO_OF_HIS_CONTROL_BLKs			
	0 - 1000	2000	2000
	1001 - 2000	4000	4000
	2001 - 5000	10 000	10 000
	5001 - 10 000	20 000	20 000
	10 001 - 15 000	30 000	30 000
	15 001 - 20 000	40 000	40 000
	20 001 - 25 000	50 000	50 000
	25 001 - 30 000	60 000	60 000
	30 001 - 35 000	70 000	70 000
	35 001+	80 000	80 000
NO_OF_HIS_DATA_BLKs - X1			
	0 - 1000	12 950	14 500
	1001 - 2000	15 050	16 600
	2001 - 5000	21 350	22 900
	5001 - 10 000	31 850	33 400

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 5 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
NO_OF_HIS_DATA_BLKs - X2	10 01 - 15 000	42 350	43 900
	15 001 - 20 000	52 850	54 400
	20 001 - 25 000	63 350	64 900
	25 001 - 30 000	73 850	75 400
	30 001 - 35 000	84 350	85 900
	35 001+	94 850	96 400
NO_OF_HIS_DATA_BLKs - X2	0 - 1000	5075	5600
	1001 - 2000	6475	7000
	2001 - 5000	10 675	11 200
	5001 - 10 000	17 675	18 200
	10 001 - 15 000	24 675	25 200
	15 001 - 20 000	31 675	32 200
	20 001 - 25 000	38 675	39 200
	25 001 - 30 000	45 675	46 200
	30 001 - 35 000	52 675	53 200
	35 001+	59 675	60 200
NO_OF_HIS_DATA_BLKs - X3	0 - 1000	3088	3500
	1001 - 2000	3288	3700
	2001 - 5000	3888	4300
	5001 - 10 000	4888	5300
	10 001 - 15 000	5888	6300

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 6 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	15 001 - 20 000	6888	7300
	20 001 - 25 000	7888	8300
	25 001 - 30 000	8888	9300
	30 001 - 35 000	9888	10 300
	35 001+	10 888	11 300
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs		5072	5484
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		22 263	25 300
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		525	600
NO_OF_SDS_EXT_BLKs		7000	8000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1463	1500
NO_OF_XLARGE_EXT_BLKs		763	800
NO_TFAN_OM_REGISTERS		4095	4095
NOS_QUANTITY_OF_SVCS		15	15
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		512	512
NUM_OF_RTEB_EXTBLKS			
	0 - 1000	80	80
	1001 - 2000	160	160

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 7 of 7)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	2001 - 5000	400	400
	5001 - 10 000	800	800
	10 001 - 15 000	1200	1200
	15 001 - 20 000	1600	1600
	20 001 - 25 000	2000	2000
	25 001 - 30 000	2400	2400
	30 001 - 35 000	2800	2800
	35 001+	3200	3200
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		16 000	18 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)**Line sizes 80 001-100 000**

The following table lists the table OFCENG parameter names and preset values for line sizes 80 001 - 100 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 1 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001- 100 000
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs		3375	3750
AIN_NUM_01_00_EXT_BLKs		1688	1875
AIN_NUM_EXT_BLKs		3375	3750
AIN_NUM_PROCESSING_EXT_BLKs		3375	3750
AIN_NUM_TERM_NOTIF_EXT_BLKs		6750	7500
CFD_EXT_BLOCKS		32 767	32 767
CFW_EXT_BLOCKS		18 000	20 000
CFZ_EXT_BLOCKS		10 800	12 000
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE		44 036	48 030
CRS_PRU_POOL3_SIZE		20 250	22 500
CRS_SUBRU_POOL1_SIZE		40 500	45 000
CRS_SUBRU_POOL2_SIZE			
	0 - 1000	35 905	39 780
	1001 - 2000	35 935	39 810
	2001 - 5000	36 025	39 900
	5001 - 10 000	36 175	40 050
	10 001 - 15 000	36 325	40 200
	15 001 - 20 000	36 475	40 350

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 2 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001- 100 000
CRS_SUBRU_POOL3_SIZE	20 001 - 25 000	36 625	40 500
	25 001 - 30 000	36 775	40 650
	30 001 - 35 000	36 925	40 800
	35 001+	37 075	40 950
	0 - 1000	23 000	25 250
	1001 - 2000	23 050	25 300
	2001 - 5000	23 200	25 450
	5001 - 10 000	23 450	25 700
	10 001 - 15 000	23 700	25 950
	15 001 - 20 000	23 950	26 200
	20 001 - 25 000	24 200	26 450
	25 001 - 30 000	24 450	26 700
	30 001 - 35 000	24 700	26 950
	35 001+	24 950	27 200
CRS_SUBRU_POOL4_SIZE		8900	9000
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		0	0
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		500	500
MAX_SDPOOL_NO		15	15

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 3 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001- 100 000
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0 - 1000	21 360	22 320
	1001 - 2000	21 360	23 280
	2001 - 5000	23 280	24 240
	5001 - 10 000	25 200	27 120
	10 001 - 15 000	28 080	29 040
	15 001 - 20 000	30 960	31 920
	20 001 - 25 000	32 880	34 800
	25 001 - 30 000	34 800	34 800
	30 001 - 35 000	34 800	34 800
	35 001+	34 800	34 800
NCCBS (ENET)			
	0 - 1000	34 800	34 800
	1001 - 2000	34 800	34 800
	2001 - 5000	34 800	34 800
	5001 - 10 000	34 800	34 800
	10 001 - 15 000	34 800	34 800
	15 001 - 20 000	34 800	34 800
	20 001 - 25 000	34 800	34 800
	25 001 - 30 000	49 200	49 200

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 4 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001- 100 000
	30 001 - 35 000	49 200	49 200
	35 001+	49 200	49 200
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		6759	7134
NO_OF_FTR_XLA_BLKs		4875	5250
NO_OF_HIS_CONTROL_BLKs			
	0 - 1000	2000	2000
	1001 - 2000	4000	4000
	2001 - 5000	10 000	10 000
	5001 - 10 000	20 000	20 000
	10 001 - 15 000	30 000	30 000
	15 001 - 20 000	40 000	40 000
	20 001 - 25 000	50 000	50 000
	25 001 - 30 000	60 000	60 000
	30 001 - 35 000	70 000	70 000
	35 001+	80 000	80 000
NO_OF_HIS_DATA_BLKs - X1			
	0 - 1000	16 050	17 600
	1001 - 2000	18 150	19 700
	2001 - 5000	24 450	26 000
	5001 - 10 000	34 950	36 500

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 5 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001- 100 000
NO_OF_HIS_DATA_BLKs - X2	10 001 - 15 000	45 450	47 000
	15 001 - 20 000	55 950	57 500
	20 001 - 25 000	66 450	68 000
	25 001 - 30 000	76 950	78 500
	30 001 - 35 000	87 450	89 000
	35 001+	97 950	99 500
NO_OF_HIS_DATA_BLKs - X2	0 - 1000	6125	66 500
	1001 - 2000	7525	8050
	2001 - 5000	11 725	12 250
	5001 - 10 000	18 725	19 250
	10 001 - 15 000	25 725	26 250
	15 001 - 20 000	32 725	33 250
	20 001 - 25 000	39 725	40 250
	25 001 - 30 000	46 725	47 250
	30 001 - 35 000	53 725	54 250
	35 001+	60 725	61 250
NO_OF_HIS_DATA_BLKs - X3	0 - 1000	3913	4325
	1001 - 2000	4113	4525
	2001 - 5000	4713	5125
	5001 - 10 000	5713	6125
	10 001 - 15 000	6713	7125

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 6 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001- 100 000
	15 001 - 20 000	7713	8125
	20 001 - 25 000	8713	9125
	25 001 - 30 000	9713	10 125
	30 001 - 35 000	10 713	11 125
	35 001+	11 713	12 125
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs		5897	6309
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		28 338	31 375
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		675	750
NO_OF_SDS_EXT_BLKs		9000	10 000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1538	1575
NO_OF_XLARGE_EXT_BLKs		838	875
NO_TFAN_OM_REGISTERS		4095	4095
NOS_QUANTITY_OF_SVCS		15	15
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		512	512
NUM_OF_RTEB_EXTBLKS			
	0 - 1000	80	80
	1001 - 2000	160	160

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 7 of 7)

Parameter name	Trunk size	80 001- 90 000 lines	90 001- 100 000
	2001 - 5000	400	400
	5001 - 10 000	800	800
	10 001 - 15 000	1200	1200
	15 001 - 20 000	1600	1600
	20 001 - 25 000	2000	2000
	25 001 - 30 000	2400	2400
	30 001 - 35 000	2800	2800
	35 001+	3200	3200
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		20 000	22 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100 local switch with 36-100% MDC and ISDN lines Table OFCENG (continued)

Line sizes 100 001-140 000

The following table lists the table OFCENG parameter names and preset values for line sizes 100 001 - 140 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 1 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs		4500	5250
AIN_NUM_01_00_EXT_BLKs		2250	2625
AIN_NUM_EXT_BLKs		4500	5250
AIN_NUM_PROCESSING_EXT_BLKs		4500	5250
AIN_NUM_TERM_NOTIF_EXT_BLKs		9000	10 500
CFD_EXT_BLOCKS		32 767	32 767
CFW_EXT_BLOCKS		24 000	28 000
CFZ_EXT_BLOCKS		14 400	16 800
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE		56 018	64 006
CRS_PRU_POOL3_SIZE		27 000	31 500
CRS_SUBRU_POOL1_SIZE		54 000	63 000
CRS_SUBRU_POOL2_SIZE			
	0 - 1000	47 530	55 280
	1001 - 2000	47 560	55 310
	2001 - 5000	47 650	55 400
	5001 - 10 000	47 800	55 550
	10 001 - 15 000	47 950	55 700
	15 001 - 20 000	48 100	55 850

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 2 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
CRS_SUBRU_POOL3_SIZE	20 001 - 25 000	48 250	56 000
	25 001 - 30 000	48 400	56 150
	30 001 - 35 000	48 550	56 300
	35 001+	48 700	56 450
	0 - 1000	29 750	34 250
	1001 - 2000	29 800	34 300
	2001 - 5000	29 950	34 450
	5001 - 10 000	30 200	34 700
	10 001 - 15 000	30 450	34 950
	15 001 - 20 000	30 700	35 200
	20 001 - 25 000	30 950	35 450
	25 001 - 30 000	31 200	35 700
	30 001 - 35 000	31 450	35 950
	35 001+	31 700	36 200
CRS_SUBRU_POOL4_SIZE		9200	9400
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		0	0
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		500	500
MAX_SDPOOL_NO		15	15

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 3 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0 - 1000	25 200	28 080
	1001 - 2000	25 200	28 080
	2001 - 5000	27 120	30 000
	5001 - 10 000	30 000	32 880
	10 001 - 15 000	31 920	34 800
	15 001 - 20 000	34 800	34 800
	20 001 - 25 000	34 800	34 800
	25 001 - 30 000	34 800	34 800
	30 001 - 35 000	34 800	34 800
	35 001+	34 800	34 800
NCCBS (ENET)			
	0 - 1000	34 800	34 800
	1001 - 2000	34 800	34 800
	2001 - 5000	34 800	34 800
	5001 - 10 000	34 800	34 800
	10 001 - 15 000	34 800	34 800
	15 001 - 20 000	34 800	49 200
	20 001 - 25 000	49 200	49 200
	25 001 - 30 000	49 200	49 200

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 4 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
	30 001 - 35 000	49 200	49 200
	35 001+	49 200	49 200
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		7884	8634
NO_OF_FTR_XLA_BLKs		6000	6750
NO_OF_HIS_CONTROL_BLKs			
	0 - 1000	2000	2000
	1001 - 2000	4000	4000
	2001 - 5000	10 000	10 000
	5001 - 10 000	20 000	20 000
	10 001 - 15 000	30 000	30 000
	15 001 - 20 000	40 000	40 000
	20 001 - 25 000	50 000	50 000
	25 001 - 30 000	60 000	60 000
	30 001 - 35 000	70 000	70 000
	35 001+	80 000	80 000
NO_OF_HIS_DATA_BLKs - X1			
	0 - 1000	20 700	23 800
	1001 - 2000	22 800	25 900
	2001 - 5000	29 100	32 200
	5001 - 10 000	39 600	42 700

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 5 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
NO_OF_HIS_DATA_BLKs - X2	10 001 - 15 000	50 100	53 200
	15 001 - 20 000	60 600	63 700
	20 001 - 25 000	71 100	74 200
	25 001 - 30 000	81 600	84 700
	30 001 - 35 000	92 100	95 200
	35 001+	102 600	105 700
NO_OF_HIS_DATA_BLKs - X3	0 - 1000	7700	8750
	1001 - 2000	9100	10 150
	2001 - 5000	13 300	12 250
	5001 - 10 000	20 300	21 350
	10 001 - 15 000	27 300	28 350
	15 001 - 20 000	34 300	35 350
	20 001 - 25 000	41 300	42 350
	25 001 - 30 000	48 300	49 350
	30 001 - 35 000	55 300	56 350
	35 001+	62 300	63 350
	0 - 1000	5150	5975
	1001 - 2000	5350	6175
	2001 - 5000	5950	6775
	5001 - 10 000	6950	7775
	10 001 - 15 000	7950	8775

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 6 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
	15 001 - 20 000	8950	9775
	20 001 - 25 000	9950	10 775
	25 001 - 30 000	10 950	11 775
	30 001 - 35 000	11 950	12 775
	35 001+	12 950	13 775
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs		7134	7959
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		32 767	32 767
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		900	1050
NO_OF_SDS_EXT_BLKs		12 000	14 000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1650	1725
NO_OF_XLARGE_EXT_BLKs		950	1025
NO_TFAN_OM_REGISTERS		4095	4095
NOS_QUANTITY_OF_SVCS		15	15
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		512	512
NUM_OF_RTEB_EXTBLKS			
	0 - 1000	80	80
	1001 - 2000	160	160

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 7 of 7)

Parameter name	Trunk size	100 001- 120 000	120 001- 140 000
	2001 - 5000	400	400
	5001 - 10 000	800	800
	10 001 - 15 000	1200	1200
	15 001 - 20 000	1600	1600
	20 001 - 25 000	2000	2000
	25 001 - 30 000	2400	2400
	30 001 - 35 000	2800	2800
	35 001+	3200	3200
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		26 000	30 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)**Line sizes 140 001-160 000**

The following table lists the table OFCENG parameter names and preset values for line sizes 140 001 - 160 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 1 of 7)

Parameter name	Trunk size	140 001- 160 000
ACD_OVERFLOW_BLOCKS		4094
AIN_NUM_00_PARA_EXT_BLKs		6000
AIN_NUM_01_00_EXT_BLKs		3000
AIN_NUM_EXT_BLKs		6000
AIN_NUM_PROCESSING_EXT_BLKs		6000
AIN_NUM_TERM_NOTIF_EXT_BLKs		12 000
CFD_EXT_BLOCKS		32 767
CFW_EXT_BLOCKS		32 000
CFZ_EXT_BLOCKS		19 200
CRS_PRU_POOL1_SIZE		2000
CRS_PRU_POOL2_SIZE		71 994
CRS_PRU_POOL3_SIZE		36 000
CRS_SUBRU_POOL1_SIZE		72 000
CRS_SUBRU_POOL2_SIZE		35 200
	0 - 1000	63 030
	1001 - 2000	63 060
	2001 - 5000	63 150
	5001 - 10 000	63 300
	10 000 - 15 000	63 450

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 2 of 7)

Parameter name	Trunk size	140 001- 160 000
CRS_SUBRU_POOL3_SIZE	15 001 - 20 000	63 600
	20 001 - 25 000	63 750
	25 001 - 30 000	63 900
	30 001 - 35 000	64 050
	35 001+	64 200
	0 - 1000	38 750
	1001 - 2000	38 800
	2001 - 5000	38 950
	5001 - 10 000	39 200
	10 001 - 15 000	39 450
	15 001 - 20 000	39 700
	20 001 - 25 000	39 950
	25 001 - 30 000	40 200
	30 001 - 35 000	40 450
	35 001+	40 700
CRS_SUBRU_POOL4_SIZE		9600
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095
EA_MF_SS7_EXT_BLOCK_COUNT		0
E911_NUMBER_OF_FDBS		1000
KSHUNT_EXT_BLOCKS		500
MAX_NO_OF_TRANS_ID		16 000
MAX_NUM_WIDEBAND_CALLS		500

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 3 of 7)

Parameter name	Trunk size	140 001- 160 000
MAX_SDPOOL_NO		15
MAXNUCS (JNET)		1024
MAXNUCS (ENET)		0
MAXSTS		64
NCCBS (JNET)		
	0 - 1000	30 960
	1001 - 2000	30 960
	2001 - 5000	32 880
	5001 - 10 000	34 800
	10 001 - 15 000	34 800
	15 001 - 20 000	34 800
	20 001 - 25 000	34 800
	25 001 - 30 000	34 800
	30 001 - 35 000	34 800
	35 001+	34 800
NCCBS (ENET)		
	0 - 1000	34 800
	1001 - 2000	34 800
	2001 - 5000	34 800
	5001 - 10 000	34 800
	10 001 - 15 000	49 200
	15 001 - 20 000	49 200
	20 001 - 25 000	49 200

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 4 of 7)

Parameter name	Trunk size	140 001- 160 000
	25 001 - 30 000	49 200
	30 001 - 35 000	49 200
	35 001+	63 600
NO_LOCAL_COIN_EXT_BLKs		256
NO_OCCTS_OM_REGISTERS		2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000
NO_OF_FTR_CONTROL_BLKs		9384
NO_OF_FTR_XLA_BLKs		7500
NO_OF_HIS_CONTROL_BLKs		
	0 - 1000	2000
	1001 - 2000	4000
	2001 - 5000	10 000
	5001 - 10 000	20 000
	10 001 - 15 000	30 000
	15 001 - 20 000	40 000
	20 001 - 25 000	50 000
	25 001 - 30 000	60 000
	30 001 - 35 000	70 000
	35 001+	80 000
NO_OF_HIS_DATA_BLKs - X1		
	0 - 1000	26 900
	1001 - 2000	29 000
	2001 - 5000	35 300

DMS-100 local switch with 36-100% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 5 of 7)

Parameter name	Trunk size	140 001- 160 000
NO_OF_HIS_DATA_BLKs - X2	5001 - 10 000	45 800
	10 001 - 15 000	56 300
	15 001 - 20 000	66 800
	20 001 - 25 000	77 300
	25 001 - 30 000	87 800
	30 001 - 35 000	98 300
	35 001+	108 800
NO_OF_HIS_DATA_BLKs - X3	0 - 1000	9800
	1001 - 2000	11 200
	2001 - 5000	15 400
	5001 - 10 000	22 400
	10 001 - 15 000	29 400
	15 001 - 20 000	36 400
	20 001 - 25 000	43 400
	25 001 - 30 000	50 400
	30 001 - 35 000	57 400
	35 001+	64 400
	0 - 1000	6800
	1001 - 2000	7000
	2001 - 5000	7600
	5001 - 10 000	8600

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 6 of 7)

Parameter name	Trunk size	140 001- 160 000
	10 001 - 15 000	9600
	15 001 - 20 000	10 600
	20 001 - 25 000	11 600
	25 001 - 30 000	12 600
	30 001 - 35 000	13 600
	35 001+	14 600
NO_OF_LARGE_EXT_BLKs		1000
NO_OF_LARGE_FTR_DATA_BLKs		8784
NO_OF_MEDIUM_EXT_BLKs		1000
NO_OF_MEDIUM_FTR_DATA_BLKs		32 767
NO_OF_PVN_EXTBLK		2700
NO_OF_PVN_TERM_EXTBLK		1200
NO_OF_SC_EXT_BLKs		1200
NO_OF_SDS_EXT_BLKs		16 000
NO_OF_SMALL_EXT_BLKs		1000
NO_OF_SMALL_FTR_DATA_BLKs		1800
NO_OF_XLARGE_EXT_BLKs		1100
NO_TFAN_OM_REGISTERS		4095
NOS_QUANTITY_OF_SVCS		15
NUM_IBN_IXLA_EXT_BLOCKS		1000
NUM_OF_NSC_EXT_BLK		512
NUM_OF_RTEB_EXTBLKS		
	0 - 1000	80

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCENG (end)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 7 of 7)

Parameter name	Trunk size	140 001- 160 000
	1001 - 2000	160
	2001 - 5000	400
	5001 - 10 000	800
	10 001 - 15 000	1200
	15 001 - 20 000	1600
	20 001 - 25 000	2000
	25 001 - 30 000	2400
	30 001 - 35 000	2800
	35 001+	3200
NUM_RC_EXT_BLKs		1000
NUMCALLPROCESSES		80
NUMCPWAKE		32 767
NUMIBNCQEXTBLK		3825
NUMOHCQBQTRANSBLKS		1169
NUMPERMEXT		7000
OCCTS_ENHANCED_FEATURE		Y
SLE_ITEMS_IN_SEGMENT		1024
SLE_MAX_SEGMENT_COUNT		2047

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCOPT

Line sizes 1-160 000

The Table OFCOPT parameter lists the following names and preset values for line sizes 1-160 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for Table OFCOPT line sizes 1-160 000 (Sheet 1 of 2)

Parameter name	1-160 000 lines
ENET_MAX_CHANNEL_GROUP	3 840
MAX_ACDMIS_SESSIONS	5
MAX_MBG_LINES	1 000
MAX_NUM_CTX_ASSOC	32 767
MAX_NUM_ECM_ACDEVENT	32 767
MAX_NUM_ECM_CALLINIT	32 767
MAX_NUM_ECM_CTXEVENT	32 767
MAX_NUM_ECM_DNQUERY	32 767
MAX_NUM_ECM_ICCM	32 767
MAX_NUM_ECM_LINE_MAKECALL	32 767
MAX_NUM_ECM_LINE_SCAICC	32 767
MAX_NUM_ECM_LINE_SCAI3WC	32 767
MAX_NUM_ECM_LINE_SCAIMWT	32 767
MAX_NUM_ECM_RESEVENT	32 767
MAX_NUM_ECM_RESOURCE	32 767
MAX_NUM_ECM_ROUTING	32 767
MAX_NUM_ECM_SCAICC	32 767
MAX_NUM_ECM_SCAI3WC	32 767
MAX_NUM_ECM_SCAIMWTI	32 767
MAX_NUM_ECM_SVC	32 767

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCOPT (end)

Preset office parameter values for Table OFCOPT line sizes 1-160 000 (Sheet 2 of 2)

Parameter name	1-160 000 lines
MAX_NUM_ECM_TPAC	32 767
MAX_NUM_ECM_TPCC	32 767
MAX_NUM_ECM_TPQC	32 767
MAX_NUM_RES_ASSOC	32 767
NA_TOLL_FREE_TYPE	US_SERVICE
TFAN_ENHANCED_FEATURE	Y

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCSTD

Line sizes 1-160,000

The Table OFCSTD parameter lists the following names and preset values for line sizes 1-160 000.

Preset office parameter values for Table OFCSTD line sizes 1-160 000

Parameter name	1- 160 000 lines
MTCBASE_SCPD	2047

DMS-100 local switch with 36-100% MDC and ISDN lines

Table OFCVAR

Line sizes 1-160 000

The Table OFCVAR parameter lists the following names and preset values for line sizes 1-160 000.

Preset office parameter values for Table OFCVAR line sizes 1-160 000

Parameter name	1- 160 000 lines
PER_OPC_LOGDEV_BUFFER_SIZE	22 000

DMS-100 local switch with 36-100% MDC and ISDN lines
Table DATASIZE

Line sizes 1-160 000

The Table DATASIZE office lists the following parameter names and preset values for line sizes 1-160 000.

Preset office parameter values for Table DATASIZE line sizes 1-160 000

Parameter name	1-160 000 lines
AIODGRP	255
AIODMEM	255
CLLI	2 048
CPOS	64
NWMAOCR	64
NWMPPLN	256
TRKGRP	2 048

5 DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines—U.S. only

Organization

This chapter applies to DMS-100 local switch offices in which 36-100% of the total lines are Meridian Digital Centrex (MDC) and integrated services digital network (ISDN) lines.

This chapter is organized in modules. A module exists for each of the following office parameter tables, which have preset values:

- table OFCENG
- table OFCOPT
- table OFCSTD
- table OFCVAR
- table DATASIZE

Each office parameter module includes five tables grouped according to the number of lines.

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG

Line sizes 1-20 000

The table OFCENG parameter names and the preset values for line sizes 1-20 000 appear in the following table. The OFCENG parameter names appear according to trunk size.

Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 1 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
ACD_OVERFLOW_BLOCKS		3000	3000
AIN_NUM_00_PARA_EXT_BLKs			
	0-2000	300	350
	2001-5000	375	500
	5001-10 000	625	750
	10 001-20 000	1125	1250
	20 001-30 000	1625	1750
	30 001-40 000	2125	2250
	40 001-50 000	2625	2750
	50 001-60 000	3125	3250
	60 001-70 000	3625	3750
	70 001+	4125	4250
AIN_NUM_01_00_EXT_BLKs			
	0-2000	150	175
	2001-5000	188	250
	5001-10 000	313	375
	10 001-20 000	563	625
	20 001-30 000	813	875
	30 001-40 000	1063	1125
	40 001-50 000	1313	1375

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 2 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
AIN_NUM_EXT_BLKs	50 001-60 000	1563	1625
	60 001-70 000	1813	1875
	70 001+	2063	2125
	0-2000	225	350
	2001-5000	375	500
	5001-10 000	625	750
	10 001-20 000	1125	1250
	20 001-30 000	1625	1750
	30 001-40 000	2125	2250
	40 001-50 000	2625	2750
	50 001-60 000	3125	3250
	60 001-70 000	3625	3750
AIN_NUM_PROCESSING_EXT_BLKs	70 001+	4125	4250
	0-2000	225	350
	2001-5000	375	500
	5001-10 000	625	750
	10 001-20 000	1125	1250
	20 001-30 000	1625	1750
	30 001-40 000	2125	2250
	40 001-50 000	2625	2750
	50 001-60 000	3125	3250

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 3 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
AIN_NUM_TERM_NOTIF_EXT_BLKs	60 001-70 000	3625	3750
	70 001+	4125	4250
	0-2000	450	700
	2001-5000	750	1000
	5001-10 000	1250	1500
	10 001-20 000	2250	2500
	20 001-30 000	3250	3500
	30 001-40 000	4250	4500
	40 001-50 000	5250	5500
	50 001-60 000	6250	6500
	60 001-70 000	7250	7500
	70 001+	8250	8500
CFD_EXT_BLOCKS		1750	3500
CFW_EXT_BLOCKS		2000	4000
CFZ_EXT_BLOCKS		1200	2400
CRS_PRU_POOL1_SIZE		1000	1000
CRS_PRU_POOL2_SIZE			
	0-2000	11 084	12 978
	2001-5000	12 734	14 628
	5001-10 000	15 484	17 378
	10 001-20 000	20 984	22 878
	20 001-30 000	26 484	28 378

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 4 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	30 001-40 000	31 984	33 878
	40 001-50 000	37 484	39 378
	50 001-60 000	42 984	44 878
	60 001-70 000	48 484	50 378
	70 001+	53 984	55 878
CRS_PRU_POOL3_SIZE		750	1500
CRS_SUBRU_POOL1_SIZE			
	0-2000	1800	3300
	2001-5000	2250	3750
	5001-10 000	3000	4500
	10 001-20 000	4500	6000
	20 001-30 000	6000	7500
	30 001-40 000	7500	9000
	40 001-50 000	9000	10 500
	50 001-60 000	10 500	12 000
	60 001-70 000	12 000	13 500
	70 001+	13 500	15 000
CRS_SUBRU_POOL2_SIZE			
	0-2000	3285	5110
	2001-5000	3975	5800
	5001-10 000	5125	6950
	10 001-20 000	7425	9250
	20 001-30 000	9725	11 550

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 5 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
CRS_SUBRU_POOL3_SIZE	30 001-40 000	12 025	13 850
	40 001-50 000	14 325	16 150
	50 001-60 000	16 625	18 450
	60 001-70 000	18 925	20 750
	70 001+	21 225	23 050
	0-2000	3650	4400
	2001-5000	3950	4700
	5001-10 000	4450	5200
	10 001-20 000	5450	6200
	20 001-30 000	6450	7200
	30 001-40 000	7450	8200
	40 001-50 000	8450	9200
	50 001-60 000	9450	10 200
	60 001-70 000	10 450	11 200
	70 001+	11 450	12 200
CRS_SUBRU_POOL4_SIZE	0-2000	7600	7600
	2001-5000	8500	8500
	5001-10 000	10 000	10 000
	10 001-20 000	13 000	13 000
	20 001-30 000	16 000	16 000
	30 001-40 000	19 000	19 000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 6 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	40 001-50 000	22 000	22 000
	50 001-60 000	25 000	25 000
	60 001-70 000	28 000	28 000
	70 001+	31 000	31 000
CUSTOMER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		800	800
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		25	50
MAX_SDPOOL_NO		15	15
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		32	32
NCCBS (JNET)			
	0-2000	10 800	11 760
	2001-5000	11 760	13 680
	5001-10 000	14 640	15 600
	10 001-20 000	19 440	20 400
	20 001-30 000	24 240	26 160
	30 001-40 000	29 040	30 960
	40 001-50 000	34 800	34 800
	50 001-60 000	34 800	34 800

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 7 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
NCCBS (ENET)	60 001-70 000	34 800	34 800
	70 001+	34 800	34 800
	0-2000	20 400	20 400
	2001-5000	20 400	20 400
	5001-10 000	20 400	20 400
	10 001-20 000	20 400	20 400
	20 001-30 000	34 800	34 800
	30 001-40 000	34 800	34 800
	40 001-50 000	34 800	49 200
	50 001-60 000	49 200	49 200
	60 001-70 000	49 200	49 200
	70 001+	49 200	63 600
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs			
	0-2000	3609	3734
	2001-5000	3759	3884
	5001-10 000	4009	4134
	10 001-20 000	4509	4634
	20 001-30 000	5009	5134
	30 001-40 000	5509	5634

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 8 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
NO_OF_FTR_XLA_BLKs	40 001-50 000	6009	6134
	50 001-60 000	6509	6634
	60 001-70 000	7009	7134
	70 001+	7509	7634
NO_OF_HIS_CONTROL_BLKs	0-2000	1725	1850
	2001-5000	1875	2000
	5001-10 000	2125	2250
	10 001-20 000	2625	2750
	20 001-30 000	3125	3250
	30 001-40 000	3625	3750
	40 001-50 000	4125	4250
	50 001-60 000	4625	4750
	60 001-70 000	5125	5250
	70 001+	5625	5750
	0-2000	4000	4000
	2001-5000	10 000	10 000
	5001-10 000	20 000	20 000
	10 001-20 000	40 000	40 000
	20 001-30 000	60 000	60 000
	30 001-40 000	80 000	80 000
	40 001-50 000	100 000	100 000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 9 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
NO_OF_HIS_DATA_BLKs - X1	50 001-60 000	120 000	120 000
	60 001-70 000	140 000	140 000
	70 001+	160 000	160 000
	0-2000	4700	5200
	2001-5000	11 000	11 500
	5001-10 000	21 500	22 000
	10 001-20 000	42 500	43 000
	20 001-30 000	63 500	64 000
	30 001-40 000	84 500	85 000
	40 001-50 000	105 500	106 000
	50 001-60 000	126 500	127 000
	60 001-70 000	147 500	148 000
	70 001+	168 500	169 000
	0-2000	3025	3150
	2001-5000	7375	7500
NO_OF_HIS_DATA_BLKs - X2	5001-10 000	14 625	14 750
	10 001-20 000	29 125	29 250
	20 001-30 000	43 625	43 750
	30 001-40 000	58.125	58 250
	40 001-50 000	72 625	72 750
	50 001-60 000	87 125	87 250

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 10 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
NO_OF_HIS_DATA_BLKs - X3	60 001-70 000	101 625	101 750
	70 001+	116 125	116 250
	0-2000	725	850
	2001-5000	1625	1750
	5001-10 000	3125	3250
	10 001-20 000	6125	6250
	20 001-30 000	9125	9250
	30 001-40 000	12 125	12 250
	40 001-50 000	15 125	15 250
	50 001-60 000	18 125	18 250
	60 001-70 000	21 125	21 250
	70 001+	24 125	24 250
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs	0-2000	2409	2534
	2001-5000	2559	2684
	5001-10 000	2809	2934
	10 001-20 000	3309	3434
	20 001-30 000	3809	3934
	30 001-40 000	4309	4434
	40 001-50 000	4809	4934
	50 001-60 000	5309	5434

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 11 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	60 001-70 000	5809	5934
	70 001+	6309	6434
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		4413	7425
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		25	50
NO_OF_SDS_EXT_BLKs		125	250
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs			
	0-2000	511	518
	2001-5000	519	525
	5001-10 000	531	538
	10 001-20 000	556	563
	20 001-30 000	581	588
	30 001-40 000	606	613
	40 001-50 000	631	638
	50 001-60 000	656	663
	60 001-70 000	681	688
	70 001+	706	713
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 12 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
NUM_ENGR_NWM_TRKGRP_CTRL		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		2000	2000
NUM_OF_RTEB_EXTBLKS			
	0-2000	160	160
	2001-5000	400	400
	5001-10 000	800	800
	10 001-20 000	1600	1600
	20 001-30 000	2400	2400
	30 001-40 000	3200	3200
	40 001-50 000	4000	4000
	50 001-60 000	4800	4800
	60 001-70 000	5000	5000
	70 001+	5000	5000
NUM_RC_EXT_BLK		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		4000	6000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)**Preset office parm values for table OFCENG line sizes 1-20 000 (Sheet 13 of 13)**

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

Line sizes 20 001-40 000

The table OFCENG parameter names and the preset values for line sizes 20 001-40 000 appear in the following table. The OFCENG parameter names appear according to trunk size.

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 1 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
ACD_OVERFLOW_BLOCKS		3000	4094
AIN_NUM_00_PARA_EXT_BLKs			
	0-2000	475	600
	2001-5000	625	750
	5001-10 000	875	1000
	10 001-20 000	1375	1500
	20 001-30 000	1875	2000
	30 001-40 000	2375	2500
	40 001-50 000	2875	3000
	50 001-60 000	3375	3500
	60 001-70 000	3875	4000
	70 001+	4375	4500
AIN_NUM_01_00_EXT_BLKs			
	0-2000	238	300
	2001-5000	313	375

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 2 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
AIN_NUM_EXT_BLKs	5001-10 000	438	500
	10 001-20 000	688	750
	20 001-30 000	938	1000
	30 001-40 000	1188	1250
	40 001-50 000	1438	1500
	50 001-60 000	1688	1750
	60 001-70 000	1938	2000
	70 001+	2188	2250
AIN_NUM_PROCESSING_EXT_BLKs	0-2000	475	600
	2001-5000	625	750
	5001-10 000	875	1000
	10 001-20 000	1375	1500
	20 001-30 000	1875	2000
	30 001-40 000	2375	2500
	40 001-50 000	2875	3000
	50 001-60 000	3375	3500
	60 001-70 000	3875	4000
	70 001+	4375	4500
	0-2000	475	600
	2001-5000	625	750
	5001-10 000	875	1000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 3 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	10 001-20 000	1375	1500
	20 001-30 000	1875	2000
	30 001-40 000	2375	2500
	40 001-50 000	2875	3000
	50 001-60 000	3375	3500
	60 001-70 000	3875	4000
	70 001+	4375	4500
AIN_NUM_TERM_NOTIF_EXT_BLKs			
	0-2000	950	1200
	2001-5000	1250	1500
	5001-10 000	1750	2000
	10 001-20 000	2750	3000
	20 001-30 000	3750	4000
	30 001-40 000	4750	5000
	40 001-50 000	5750	6000
	50 001-60 000	6750	7000
	60 001-70 000	7750	8000
	70 001+	8750	9000
CFD_EXT_BLOCKS		5250	7000
CFW_EXT_BLOCKS		6000	8000
CFZ_EXT_BLOCKS		3600	4800
CRS_PRU_POOL1_SIZE		1000	1000
CRS_PRU_POOL2_SIZE			

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 4 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	0-2000	14 872	16 766
	2001-5000	16 522	18 416
	5001-10 000	19 272	21 166
	10 001-20 000	24 772	26 666
	20 001-30 000	30 272	32 166
	30 001-40 000	35 772	37 666
	40 001-50 000	41 272	43 166
	50 001-60 000	46 272	48 666
	60 001-70 000	52 272	54 166
	70 001+	57 772	59 666
CRS_PRU_POOL3_SIZE		2250	3000
CRS_SUBRU_POOL1_SIZE			
	0-2000	4800	6300
	2001-5000	5250	6750
	5001-10 000	6000	7500
	10 001-20 000	7500	9000
	20 001-30 000	9000	10 500
	30 001-40 000	10 500	12 000
	40 001-50 000	12 000	13 500
	50 001-60 000	13 500	15 000
	60 001-70 000	15 000	16 500
	70 001+	16 500	18 000
CRS_SUBRU_POOL2_SIZE			

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 5 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	0-2000	6935	8760
	2001-5000	7625	9450
	5001-10 000	8775	10 600
	10 001-20 000	11 075	12 900
	20 001-30 000	13.375	15 200
	30 001-40 000	15 675	17 500
	40 001-50 000	17 975	19 800
	50 001-60 000	20 275	22 100
	60 001-70 000	22 575	24 400
	70 001+	24 875	26 700
CRS_SUBRU_POOL3_SIZE			
	0-2000	5150	5900
	2001-5000	5450	6200
	5001-10 000	5950	6700
	10 001-20 000	6950	7700
	20 001-30 000	7950	8700
	30 001-40 000	8950	9700
	40 001-50 000	9950	10 700
	50 001-60 000	10 950	11 700
	60 001-70 000	11 950	12 700
	70 001+	12 950	13 700
CRS_SUBRU_POOL4_SIZE			
	0-2000	7600	7600

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 6 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	2001-5000	8500	8500
	5001-10 000	10 000	10 000
	10 001-20 000	13 000	13 000
	20 001-30 000	16 000	16 000
	30 001-40 000	19 000	19 000
	40 001-50 000	22 000	22 000
	50 001-60 000	25 000	25 000
	60 001-70 000	28 000	28 000
	70 001+	31 000	31 000
CUSTOMER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		800	800
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		75	100
MAX_SDPOOL_NO		15	15
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		32	64
NCCBS (JNET)			
	0-2000	12 720	14 640
	2001-5000	14 640	15 600
	5001-10 000	17 520	18 480

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 7 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
NCCBS (ENET)	10 001-20 000	22 320	23 280
	20 001-30 000	27 120	28 080
	30 001-40 000	31 920	33 840
	40 001-50 000	34 800	34 800
	50 001-60 000	34 800	34 800
	60 001-70 000	34 800	34 800
	70 001+	34 800	34 800
	0-2000	20 400	20 400
	2001-5000	20 400	20 400
	5001-10 000	20 400	20 400
	10 001-20 000	34 800	34 800
	20 001-30 000	34 800	34 800
	30 001-40 000	34 800	34 800
	40 001-50 000	49 200	49 200
	50 001-60 000	49 200	49 200
	60 001-70 000	49 200	49 200
	70 001+	63 600	63 600
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		3572	3634
	0-2000	3859	3984

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 8 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
NO_OF_FTR_XLA_BLKs	2001-5000	4009	4134
	5001-10 000	4259	4384
	10 001-20 000	4759	4884
	20 001-30 000	5259	5384
	30 001-40 000	5759	5884
	40 001-50 000	6259	6384
	50 001-60 000	6759	6884
	60 001-70 000	7259	7384
	70 001+	7759	7884
NO_OF_HIS_CONTROL_BLKs	0-2000	1975	2100
	2001-5000	2125	2250
	5001-10 000	2375	2500
	10 001-20 000	2875	3000
	20 001-30 000	3375	3500
	30 001-40 000	3875	4000
	40 001-50 000	4375	4500
	50 001-60 000	4875	5000
	60 001-70 000	5375	5500
	70 001+	5875	6000
	0-2000	4000	4000
	2001-5000	10 000	10 000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 9 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
NO_OF_HIS_DATA_BLKs - X1	5001-10 000	20 000	20 000
	10 001-20 000	40 000	40 000
	20 001-30 000	60 000	60 000
	30 001-40 000	80 000	80 000
	40 001-50 000	100 000	100 000
	50 001-60 000	120 000	120 000
	60 001-70 000	140 000	140 000
	70 001+	160 000	160 000
NO_OF_HIS_DATA_BLKs - X2	0-2000	5700	6200
	2001-5000	12 000	12 500
	5001-10 000	22 500	23 000
	10 001-20 000	43 500	44 000
	20 001-30 000	64 500	65 000
	30 001-40 000	85 500	86 000
	40 001-50 000	106 500	107 000
	50 001-60 000	127 500	128 000
	60 001-70 000	148 500	149 000
	70 001+	169 500	170 000
NO_OF_HIS_DATA_BLKs - X2	0-2000	3275	3400
	2001-5000	7625	7750
	5001-10 000	14 875	15 000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 10 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	10 001-20 000	29 375	29 500
	20 001-30 000	43 875	44 000
	30 001-40 000	58 375	58 500
	40 001-50 000	72 875	73 000
	50 001-60 000	87 375	87 500
	60 001-70 000	101 875	102 000
	70 001+	116 375	116 500
NO_OF_HIS_DATA_BLKs - X3			
	0-2000	975	1100
	2001-5000	1875	2000
	5001-10 000	3375	3500
	10 001-20 000	6375	6500
	20 001-30 000	9375	9500
	30 001-40 000	12 375	12 500
	40 001-50 000	15 375	15 500
	50 001-60 000	18 375	18 500
	60 001-70 000	21 375	21 500
	70 001+	24 375	24 500
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs			
	0-2000	2659	2784
	2001-5000	2809	2934
	5001-10 000	3059	3184

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 11 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	10 001-20 000	3599	3684
	20 001-30 000	4059	4184
	30 001-40 000	4599	4684
	40 001-50 000	5059	5184
	50 001-60 000	5559	5684
	60 001-70 000	6059	6184
	70 001+	6559	6684
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		10 438	13 450
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		75	100
NO_OF_SDS_EXT_BLKs		375	500
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs			
	0-2000	524	530
	2001-5000	531	538
	5001-10 000	544	550
	10 001-20 000	569	575
	20 001-30 000	594	600
	30 001-40 000	619	625
	40 001-50 000	644	650

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 12 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	50 001-60 000	669	675
	60 001-70 000	694	700
	70 001+	719	725
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_ENGR_NWM_TRKGRP_CTRL		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		2000	2000
NUM_OF_RTEB_EXTBLKS			
	0-2000	160	160
	2001-5000	400	400
	5001-10 000	800	800
	10 001-20 000	1600	1600
	20 001-30 000	2400	2400
	30 001-40 000	3200	3200
	40 001-50 000	4000	4000
	50 001-60 000	4800	4800
	60 001-70 000	5000	5000
	70 001+	5000	5000
NUM_RC_EXT_BLK		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		8000	10 000
NUMIBNCQEXTBLK		3825	3825

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 20 001-40 000 (Sheet 13 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

Line sizes 40 001-60 000

The table OFCENG parameter names and the preset values for line sizes 40 001-60 000 appear in the following table. The OFCENG parameter names appear according to trunk size.

Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 1 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs			
	0-2000	725	850
	2001-5000	875	1000
	5001-10 000	1125	1250
	10 001-20 000	1625	1750
	20 001-30 000	2125	2250
	30 001-40 000	2625	2750
	40 001-50 000	3125	3250
	50 001-60 000	3625	3750
	60 001-70 000	4125	4250

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 2 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
AIN_NUM_01_00_EXT_BLKs	70 001+	4625	4750
	0-2000	363	425
	2001-5000	438	500
	5001-10 000	563	625
	10 001-20 000	813	875
	20 001-30 000	1063	1125
	30 001-40 000	1313	1375
	40 001-50 000	1563	1625
	50 001-60 000	1813	1875
	60 001-70 000	2063	2125
	70 001+	2313	2375
AIN_NUM_EXT_BLKs	0-2000	725	850
	2001-5000	875	1000
	5001-10 000	1125	1250
	10 001-20 000	1625	1750
	20 001-30 000	2125	2250
	30 001-40 000	2625	2750
	40 001-50 000	3125	3250
	50 001-60 000	3625	3750
	60 001-70 000	4125	4250
	70 001+	4625	4750

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 3 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
AIN_NUM_PROCESSING_EXT_BLKs	0-2000	725	850
	2001-5000	875	1000
	5001-10 000	1125	1250
	10 001-20 000	1625	1750
	20 001-30 000	2125	2250
	30 001-40 000	2625	2750
	40 001-50 000	3125	3250
	50 001-60 000	3625	3750
	60 001-70 000	4125	4250
	70 001+	4625	4750
AIN_NUM_TERM_NOTIF_EXT_BLKs	0-2000	1450	1700
	2001-5000	1750	2000
	5001-10 000	2250	2500
	10 001-20 000	3250	3500
	20 001-30 000	4250	4500
	30 001-40 000	5250	5500
	40 001-50 000	6250	6500
	50 001-60 000	7250	7500
	60 001-70 000	8250	8500
	70 001+	9250	9500
CFD_EXT_BLOCKS		8750	10 500

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 4 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
CFW_EXT_BLOCKS		10 000	12 000
CFZ_EXT_BLOCKS		6000	7200
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE			
	0-2000	18 660	20 554
	2001-5000	20 310	22 204
	5001-10 000	23 060	24 954
	10 001-20 000	28 560	30 454
	20 001-30 000	34 060	35 954
	30 001-40 000	37 560	41 454
	40 001-50 000	45 060	46 954
	50 001-60 000	50 560	52 454
	60 001-70 000	56 060	57 954
	70 001+	61 560	63 454
CRS_PRU_POOL3_SIZE		3750	4500
CRS_SUBRU_POOL1_SIZE			
	0-2000	7800	9300
	2001-5000	8250	9750
	5001-10 000	9000	10 500
	10 001-20 000	10 500	12 000
	20 001-30 000	12 000	13 500
	30 001-40 000	13 500	15 000
	40 001-50 000	15 000	16 500

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 5 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
CRS_SUBRU_POOL2_SIZE	50 001-60 000	16 500	18 000
	60 001-70 000	18 000	19 500
	70 001+	19 500	21 000
	0-2000	10 585	12 410
	2001-5000	11 275	13 100
	5001-10 000	12 425	14 250
	10 001-20 000	14 725	16 550
	20 001-30 000	17 025	18 850
	30 001-40 000	19 335	21 150
	40 001-50 000	21 625	23 450
	50 001-60 000	23 925	25 750
	60 001-70 000	26 225	28 050
CRS_SUBRU_POOL3_SIZE	70 001+	28 525	30 350
	0-2000	6650	7400
	2001-5000	6950	7700
	5001-10 000	7450	8200
	10 001-20 000	8450	9200
	20 001-30 000	9450	10 200
	30 001-40 000	10 450	11 200
	40 001-50 000	11 450	12 200
	50 001-60 000	12 450	13 200

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 6 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
CRS_SUBRU_POOL4_SIZE	60 001-70 000	13 450	14 200
	70 001+	14 450	15 200
	0-2000	8600	8600
	2001-5000	9500	9500
	5001-10 000	11 000	11 000
	10 001-20 000	14 000	14 000
	20 001-30 000	17 000	17 000
	30 001-40 000	20 000	20 000
	40 001-50 000	23 000	23 000
	50 001-60 000	26 000	26 000
	60 001-70 000	29 000	29 000
	70 001+	32 000	32 000
CUSTOMER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		800	800
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		125	150
MAX_SDPOOL_NO		15	15
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 7 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
NCCBS (JNET)	0-2000	15 600	17 520
	2001-5000	17 520	18 480
	5001-10 000	20 400	21 360
	10 001-20 000	25 200	26 160
	20 001-30 000	30 000	30 960
	30 001-40 000	34 800	34 800
	40 001-50 000	34 800	34 800
	50 001-60 000	34 800	34 800
	60 001-70 000	34 800	34 800
	70 001+	34 800	34 800
NCCBS (ENET)	0-2000	20 400	20 400
	2001-5000	20 400	20 400
	5001-10 000	20 400	34 800
	10 001-20 000	34 800	34 800
	20 001-30 000	34 800	34 800
	30 001-40 000	34 800	49 200
	40 001-50 000	49 200	49 200
	50 001-60 000	49 200	49 200
	60 001-70 000	63 600	63 600
	70 001+	63 600	63 600
NO_LOCAL_COIN_EXT_BLKs		256	256

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 8 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs			
	0-2000	4109	4234
	2001-5000	4259	4384
	5001-10 000	4509	4634
	10 001-20 000	5009	5134
	20 001-30 000	5509	5634
	30 001-40 000	6009	6134
	40 001-50 000	6509	6634
	50 001-60 000	7009	7134
	60 001-70 000	7509	7634
	70 001+	8009	8134
NO_OF_FTR_XLA_BLKs			
	0-2000	2225	2350
	2001-5000	2375	2500
	5001-10 000	2625	2750
	10 001-20 000	3125	3250
	20 001-30 000	3625	3750
	30 001-40 000	4125	4250
	40 001-50 000	4625	4750
	50 001-60 000	5125	5250
	60 001-70 000	5625	5750

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 9 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
NO_OF_HIS_CONTROL_BLKs	70 001+	6125	6250
	0-2000	4000	4000
	2001-5000	10 000	10 000
	5001-10 000	20 000	20 000
	10 001-20 000	40 000	40 000
	20 001-30 000	60 000	60 000
	30 001-40 000	80 000	80 000
	40 001-50 000	100 000	100 000
	50 001-60 000	120 000	120 000
	60 001-70 000	140 000	140 000
	70 001+	160 000	160 000
NO_OF_HIS_DATA_BLKs - X1	0-2000	6700	7200
	2001-5000	13 000	13 500
	5001-10 000	23 500	24 000
	10 001-20 000	44 500	45 000
	20 001-30 000	65 500	66 000
	30 001-40 000	86 500	87 000
	40 001-50 000	107 500	108 000
	50 001-60 000	128 500	129 000
	60 001-70 000	149 500	150 000
	70 001+	170 500	171 000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 10 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
NO_OF_HIS_DATA_BLKs - X2	0-2000	3525	3650
	2001-5000	7875	8000
	5001-10 000	15 125	15 250
	10 001-20 000	29 625	29 750
	20 001-30 000	44 125	44 250
	30 001-40 000	58 625	58 750
	40 001-50 000	73 125	73 250
	50 001-60 000	87 625	87 750
	60 001-70 000	102 125	102 250
	70 001+	116 625	116 750
NO_OF_HIS_DATA_BLKs - X3	0-2000	1225	1350
	2001-5000	2125	2250
	5001-10 000	3625	3750
	10 001-20 000	6625	6750
	20 001-30 000	9625	9750
	30 001+40 000	12 625	12 750
	40 001-50 000	15 625	15 750
	50 001-60 000	18 625	18 750
	60 001-70 000	21 625	21 750
	70 001+	24 625	24 750
NO_OF_LARGE_EXT_BLKs		1000	1000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 11 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
NO_OF_LARGE_FTR_DATA_BLKs	0-2000	2909	3034
	2001-5000	3059	3184
	5001-10 000	3309	3434
	10 001-20 000	3809	3934
	20 001-30 000	4309	4434
	30 001+40 000	4809	4934
	40 001-50 000	5309	5434
	50 001-60 000	5809	5934
	60 001-70 000	6309	6434
	70 001+	6809	6934
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		16 463	19 475
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		125	150
NO_OF_SDS_EXT_BLKs		625	750
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs	0-2000	536	543
	2001-5000	544	550
	5001-10 000	556	563

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 12 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	10 001-20 000	581	588
	20 001-30 000	606	613
	30 001+40 000	631	638
	40 001-50 000	656	663
	50 001-60 000	681	688
	60 001-70 000	706	713
	70 001+	731	738
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_ENGR_NWM_TRKGRP_CTRL		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		2000	2000
NUM_OF_RTEB_EXTBLKS			
	0-2000	160	160
	2001-5000	400	400
	5001-10 000	800	800
	10 001-20 000	1600	1600
	20 001-30 000	2400	2400
	30 001+40 000	3200	3200
	40 001-50 000	4000	4000
	50 001-60 000	4800	4800
	60 001-70 000	5000	5000
	70 001+	5000	5000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)**Preset office parm values for table OFCENG line sizes 40 001-60 000 (Sheet 13 of 13)**

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		12 000	14 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

Line sizes 60 001-80 000

The table OFCENG parameter names and the preset values for line sizes 60 001-80 000 appear in the following table. The OFCENG parameter names appear according to trunk size.

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 1 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs			
	0-2000	975	1100
	2001-5000	1125	1250
	5001-10 000	1375	1500
	10 001-20 000	1875	2000
	20 001-30 000	2375	2500

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 2 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
AIN_NUM_01_00_EXT_BLK5	30 001+40 000	2875	3000
	40 001-50 000	3375	3500
	50 001-60 000	3875	4000
	60 001-70 000	4375	4500
	70 001+	4875	5000
AIN_NUM_EXT_BLK5	0-2000	488	550
	2001-5000	563	625
	5001-10 000	688	750
	10 001-20 000	938	1000
	20 001-30 000	1188	1250
	30 001+40 000	1438	1500
	40 001-50 000	1688	1750
	50 001-60 000	1938	2000
	60 001-70 000	2188	2250
	70 001+	2438	2500
	0-2000	975	1110
AIN_NUM_EXT_BLK5	2001-5000	1125	1250
	5001-10 000	1375	1500
	10 001-20 000	1875	2000
	20 001-30 000	2375	2500
	30 001-40 000	2875	3000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 3 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
AIN_NUM_PROCESSING_EXT_BLKs	40 001-50 000	3375	3500
	50 001-60 000	3875	4000
	60 001-70 000	4375	4500
	70 001+	4875	5000
	0-2000	975	1100
	2001-5000	1125	1250
	5001-10 000	1375	1500
	10 001-20 000	1875	2000
	20 001-30 000	2375	2500
	30 001-40 000	2875	3000
	40 001-50 000	3375	3500
	50 001-60 000	3875	4000
	60 001-70 000	4375	4500
	70 001+	4875	5000
	0-2000	1950	2200
	2001-5000	2250	2500
AIN_NUM_TERM_NOTIF_EXT_BLKs	5001-10 000	2750	3000
	10 001-20 000	3750	4000
	20 001-30 000	4750	5000
	30 001+40 000	5750	6000
	40 001-50 000	6750	7000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 4 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	50 001-60 000	7750	8000
	60 001-70 000	8750	9000
	70 001+	9750	10 000
CFD_EXT_BLOCKS		12 250	14 000
CFW_EXT_BLOCKS		14 000	16 000
CFZ_EXT_BLOCKS		8400	9600
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE			
	0-2000	22 448	24 342
	2001-5000	24 098	25 992
	5001-10 000	26 848	28 742
	10 001-20 000	32 848	34 242
	20 001-30 000	37 848	39 742
	30 001-40 000	43 348	45 242
	40 001-50 000	48 848	50 742
	50 001-60 000	53 348	56 242
	60 001-70 000	59 848	61 742
	70 001+	65 348	67 242
CRS_PRU_POOL3_SIZE		5250	6000
CRS_SUBRU_POOL1_SIZE			
	0-2000	10 800	12 300
	2001-5000	11 250	12 750
	5001-10 000	12 000	13 500

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines**Table OFCENG** (continued)

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 5 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
CRS_SUBRU_POOL2_SIZE	10 001-20 000	13 500	15 000
	20 001-30 000	15 000	16 500
	30 001-40 000	16 500	18 000
	40 001-50 000	18 000	19 500
	50 001-60 000	19 500	21 000
	60 001-70 000	21 000	22 500
	70 001+	22 500	24 000
CRS_SUBRU_POOL3_SIZE	0-2000	14 235	16 060
	2001-5000	14 925	16 750
	5001-10 000	16 075	17 900
	10 001-20 000	18 375	20 200
	20 001-30 000	20 675	22 500
	30 001-40 000	22 975	24 800
	40 001-50 000	25 275	27 100
	50 001-60 000	25 575	29 400
	60 001-70 000	29 875	31 700
	70 001+	32 175	34 000
CRS_SUBRU_POOL3_SIZE	0-2000	8150	8900
	2001-5000	8450	9200
	5001-10 000	8950	9700
	10 001-20 000	9950	10 700

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 6 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
CRS_SUBRU_POOL4_SIZE	20 001-30 000	10 950	11 700
	30 001-40 000	11 950	12 700
	40 001-50 000	12 950	13 700
	50 001-60 000	13 950	14 700
	60 001-70 000	14 950	15 700
	70 001+	15 950	16 700
	0-2000	8600	8600
	2001-5000	9500	9500
	5001-10 000	11 000	11 000
	10 001-20 000	14 000	14 000
	20 001-30 000	17 000	17 000
	30 001-40 000	20 000	20 000
	40 001-50 000	23 000	23 000
CUSTOMER_GROUP_IBNGRP_OM_COUNT	50 001-60 000	26 000	26 000
	60 001-70 000	29 000	29 000
	70 001+	32 000	32 000
		4095	4095
		800	800
		1000	1000
		500	500
		16 000	16 000
		175	200

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 7 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
MAX_SDPOOL_NO		15	15
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0- 2000	18 480	20 400
	2001-5000	20 400	21 360
	5001-10 000	22 320	24 240
	10 001-20 000	28 080	29 040
	20 001-30 000	32 880	33 840
	30 001-40 000	34 800	34 800
	40 001-50 000	34 800	34 800
	50 001-60 000	34 800	34 800
	60 001-70 000	34 800	34 800
	70 001+	34 800	34 800
NCCBS (ENET)			
	0-2000	20 400	20 400
	2001-5000	20 400	34 800
	5001-10 000	34 800	34 800
	10 001-20 000	34 800	34 800
	20 001-30 000	34 800	34 800
	30 001-40 000	49 200	49 200
	40 001-50 000	49 200	49 200

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 8 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	50 001-60 000	49 200	49 200
	60 001-70 000	63 600	63 600
	70 001+	63 600	63 600
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs		3822	3884
	0-2000	4359	4484
	2001-5000	4509	4634
	5001-10 000	4759	4884
	10 001-20 000	5259	5384
	20 001-30 000	5759	5884
	30 001-40 000	6259	6384
	40 001-50 000	6759	6884
	50 001-60 000	7259	7384
	60 001-70 000	7759	7884
	70 001+	8259	8384
NO_OF_FTR_XLA_BLKs			
	0-2000	2475	2600
	2001-5000	2625	2750
	5001-10 000	2875	3000
	10 001-20 000	3375	3500
	20 001-30 000	3875	4000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 9 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
NO_OF_HIS_CONTROL_BLKs	30 001-40 000	4375	4500
	40 001-50 000	4875	5000
	50 001-60 000	5375	5500
	60 001-70 000	5875	6000
	70 001+	6375	6500
NO_OF_HIS_DATA_BLKs - X1	0-2000	4000	4000
	2001-5000	10 000	10 000
	5001-10 000	20 000	20 000
	10 001-20 000	40 000	40 000
	20 001-30 000	60 000	60 000
	30 001-40 000	80 000	80 000
	40 001-50 000	100 000	100 000
	50 001-60 000	120 000	120 000
	60 001-70 000	140 000	140 000
	70 001+	160 000	160 000
	0-2000	7700	8200
	2001-5000	14 000	14 500
	5001-10 000	24 500	25 000
	10 001-20 000	45 500	46 000
	20 001-30 000	66 500	67 000
	30 001-40 000	87 500	88 000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 10 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
NO_OF_HIS_DATA_BLKs - X2	40 001-50 000	108 500	109 000
	50 001-60 000	129 500	130 000
	60 001-70 000	150 500	151 000
	70 001+	171 500	172 000
	0-2000	3775	3150
	2001-5000	8125	8250
	5001-10 000	15 375	15 500
	10 001-20 000	29 875	30 000
	20 001-30 000	44 375	44 500
	30 001-40 000	58 875	59 000
	40 001-50 000	73 375	73 500
	50 001-60 000	87 875	88 000
	60 001-70 000	102 375	102 500
NO_OF_HIS_DATA_BLKs - X3	70 001+	116 875	117 000
	0-2000	1475	1600
	2001-5000	2375	2500
	5001-10 000	3875	4000
	10 001-20 000	6875	7000
	20 001-30 000	9875	10 000
	30 001-40 000	12 875	13 000
	40 001-50 000	15 875	16 000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 11 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	50 001-60 000	18 875	19 000
	60 001-70 000	21 875	22 000
	70 001+	24 875	25 000
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs			
	0-2000	3159	3284
	2001-5000	3309	3434
	5001-10 000	3559	3684
	10 001-20 000	4059	4184
	20 001-30 000	4559	4684
	30 001-40 000	5059	5184
	40 001-50 000	5559	5684
	50 001-60 000	6059	6184
	60 001-70 000	6559	6684
	70 001+	7059	7184
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		22 488	25 500
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		175	200
NO_OF_SDS_EXT_BLKs		875	1000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 12 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
NO_OF_XLARGE_EXT_BLKs	0-2000	549	555
	2001-5000	556	563
	5001-10 000	569	575
	10 001-20 000	594	600
	20 001-30 000	619	625
	30 001-40 000	644	650
	40 001-50 000	669	675
	50 001-60 000	694	700
	60 001-70 000	719	725
	70 001+	744	750
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_ENGR_NWM_TRKGRP_CTRLs		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		2000	2000
NUM_OF_RTEB_EXTBLKS	0-2000	160	160
	2001-5000	400	400
	5001-10 000	800	800
	10 001-20 000	1600	1600
	20 001-30 000	2400	2400
	30 001-40 000	3200	3200

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 60 001-80 000 (Sheet 13 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	40 001-50 000	4000	4000
	50 001-60 000	4800	4800
	60 001-70 000	5000	5000
	70 001+	5000	5000
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		16 000	18 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

Line sizes 80 001-100 000

The table OFCENG parameter names and the preset values for line sizes 80 001-100 000 appear in the following table. The OFCENG parameter names appear according to trunk size.

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 1 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs	0-2000	1225	1350

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 2 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
AIN_NUM_01_00_EXT_BLK5	2001-5000	1375	1500
	5001-10 000	1625	1750
	10 001-20 000	2125	2250
	20 001-30 000	2625	2750
	30 001-40 000	3125	3250
	40 001-50 000	3625	3750
	50 001-60 000	4125	4250
	60 001-70 000	4625	4750
	70 001+	5125	5250
AIN_NUM_EXT_BLK5	0-2000	613	675
	2001-5000	688	750
	5001-10 000	813	875
	10 001-20 000	1063	1125
	20 001-30 000	1313	1375
	30 001-40 000	1563	1625
	40 001-50 000	1813	1875
	50 001-60 000	2063	2125
	60 001-70 000	2313	2375
AIN_NUM_EXT_BLK5	70 001+	2563	2625
	0-2000	1225	1350
	2001-5000	1375	1500

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 3 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
AIN_NUM_PROCESSING_EXT_BLKs	5001-10 000	1625	1750
	10 001-20 000	2125	2250
	20 001-30 000	2625	2750
	30 001-40 000	3125	3250
	40 001-50 000	3625	3750
	50 001-60 000	4125	4250
	60 001-70 000	4625	4750
	70 001+	5125	5250
AIN_NUM_TERM_NOTIF_EXT_BLKs	0-2000	1225	1350
	2001-5000	1375	1500
	5001-10 000	1625	1750
	10 001-20 000	2125	2250
	20 001-30 000	2625	2750
	30 001-40 000	3125	3250
	40 001-50 000	3625	3750
	50 001-60 000	4125	4250
AIN_NUM_TERM_NOTIF_EXT_BLKs	60 001-70 000	4625	4750
	70 001+	5125	5250
	0-2000	2450	2700
	2001-5000	2750	3000
	5001-10 000	3250	3500

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 4 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
	10 001-20 000	4250	4500
	20 001-30 000	5250	5500
	30 001-40 000	6250	6500
	40 001-50 000	7250	7500
	50 001-60 000	8250	8500
	60 001-70 000	9250	9500
	70 001+	10 250	10 500
CFD_EXT_BLOCKS		15 750	17 500
CFW_EXT_BLOCKS		18 000	20 000
CFZ_EXT_BLOCKS		10 800	12 000
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE			
	0-2000	26 236	28 130
	2001-5000	27 886	29 780
	5001-10 000	30 636	32 530
	10 001-20 000	36 136	38 030
	20 001-30 000	41 636	43 530
	30 001-40 000	47 136	49 030
	40 001-50 000	52 636	54 530
	50 001-60 000	58 136	60 030
	60 001-70 000	63 636	65 530
	70 001+	69 136	71 030
CRS_PRU_POOL3_SIZE		6750	7500

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 5 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
CRS_SUBRU_POOL1_SIZE	0-2000	13 800	15 300
	2001-5000	14 250	15 750
	5001-10 000	15 000	16 500
	10 001-20 000	16 500	18 000
	20 001-30 000	18 000	19 500
	30 001-40 000	19 500	21 000
	40 001-50 000	21 000	22 500
	50 001-60 000	22 500	24 000
	60 001-70 000	24 000	25 500
	70 001+	25 500	27 000
CRS_SUBRU_POOL2_SIZE	0-2000	17 885	19 710
	2001-5000	18 575	20 400
	5001-10 000	19 725	21 550
	10 001-20 000	22 025	23 850
	20 001-30 000	24 325	26 150
	30 001-40 000	26 625	28 450
	40 001-50 000	28 925	30 750
	50 001-60 000	31 225	33 050
	60 001-70 000	33 525	35 350
	70 001+	35 825	37 650
CRS_SUBRU_POOL3_SIZE			

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 6 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
CRS_SUBRU_POOL4_SIZE	0-2000	9650	10 400
	2001-5000	9950	10 700
	5001-10 000	10 450	11 200
	10 001-20 000	11 450	12 200
	20 001-30 000	12 450	13 200
	30 001-40 000	13 450	14 200
	40 001-50 000	14 450	15 200
	50 001-60 000	15 450	16 200
	60 001-70 000	16 450	17 200
	70 001+	17 450	18 200
CUSTOMER_GROUP_IBNGRP_OM_COUNT	0-2000	8600	8600
	2001-5000	9500	9500
	5001-10 000	11 000	11 000
	10 001-20 000	14 000	14 000
	20 001-30 000	17 000	17 000
	30 001-40 000	20 000	20 000
	40 001-50 000	23 000	23 000
	50 001-60 000	26 000	26 000
	60 001-70 000	29 000	29 000
	70 001+	32 000	32 000
EA_MF_SS7_EXT_BLOCK_COUNT		800	800

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 7 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		225	250
MAX_SDPOOL_NO		15	15
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0-2000	21 360	23 280
	2001-5000	23 280	24 240
	5001-10 000	25 200	27 120
	10 001-20 000	30 960	31 920
	20 001-30 000	34 800	34 800
	30 001-40 000	34 800	34 800
	40 001-50 000	34 800	34 800
	50 001-60 000	34 800	34 800
	60 001-70 000	34 800	34 800
	70 001+	34 800	34 800
NCCBS (ENET)			
	0-2000	34 800	34 800
	2001-5000	34 800	34 800
	5001-10 000	34 800	34 800

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 8 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
	10 001-20 000	34 800	34 800
	20 001-30 000	49 200	49 200
	30 001-40 000	49 200	49 200
	40 001-50 000	49 200	49 200
	50 001-60 000	63 600	63 600
	60 001-70 000	63 600	63 600
	70 001+	63 600	63 600
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs			
	0-2000	4609	4734
	2001-5000	4759	4884
	5001-10 000	5009	5134
	10 001-20 000	5509	5634
	20 001-30 000	6009	6134
	30 001-40 000	6509	6634
	40 001-50 000	7009	7134
	50 001-60 000	7509	7634
	60 001-70 000	8009	8134
	70 001+	8509	8634
NO_OF_FTR_XLA_BLKs			
	0-2000	2725	2850

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 9 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
NO_OF_HIS_CONTROL_BLKs	2001-5000	2875	3000
	5001-10 000	3125	3250
	10 001-20 000	3625	3750
	20 001-30 000	4125	4250
	30 001-40 000	4625	4750
	40 001-50 000	5125	5250
	50 001-60 000	5625	5750
	60 001-70 000	6125	6250
	70 001+	6625	6750
NO_OF_HIS_DATA_BLKs - X1	0-2000	4000	4000
	2001-5000	10 000	10 000
	5001-10 000	20 000	20 000
	10 001-20 000	40 000	40 000
	20 001-30 000	60 000	60 000
	30 001-40 000	80 000	80 000
	40 001-50 000	100 000	100 000
	50 001-60 000	120 000	120 000
	60 001-70 000	140 000	140 000
	70 001+	160 000	160 000
	0-2000	8700	9200
	2001-5000	15 000	15 500

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 10 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
NO_OF_HIS_DATA_BLKs - X2	5001-10 000	25 500	26 000
	10 001-20 000	46 500	47 000
	20 001-30 000	67 500	68 000
	30 001-40 000	88 500	89 000
	40 001-50 000	109 500	110 000
	50 001-60 000	130 500	131 000
	60 001-70 000	151 500	152 000
	70 001+	172 500	173 000
NO_OF_HIS_DATA_BLKs - X2	0-2000	4025	4150
	2001-5000	8375	8500
	5001-10 000	15 625	15 750
	10 001-20 000	30 125	30 250
	20 001-30 000	44 625	44 750
	30 001-40 000	59 125	59 250
	40 001-50 000	73 625	73 750
	50 001-60 000	88 125	88 250
	60 001-70 000	102 625	102 750
	70 001+	117 125	117 250
NO_OF_HIS_DATA_BLKs - X3	0-2000	1725	1850
	2001-5000	2625	2750
	5001-10 000	4125	4250

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 11 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
	10 001-20 000	7125	7250
	20 001-30 000	10 125	10 250
	30 001-40 000	13 125	13 250
	40 001-50 000	16 125	16 250
	50 001-60 000	19 125	19 250
	60 001-70 000	22 125	22 250
	70 001+	25 125	25 250
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs			
	0-2000	3409	3534
	2001-5000	3559	3684
	5001-10 000	3809	3934
	10 001-20 000	4309	4434
	20 001-30 000	4809	4934
	30 001-40 000	5309	5434
	40 001-50 000	5809	5934
	50 001-60 000	6309	6434
	60 001-70 000	6809	6934
	70 001+	7309	7434
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		28 513	31 525
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 12 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
NO_OF_SC_EXT_BLKs		225	250
NO_OF_SDS_EXT_BLKs		1125	1250
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs			
	0-2000	561	568
	2001-5000	569	575
	5001-10 000	581	588
	10 001-20 000	606	613
	20 001-30 000	631	638
	30 001-40 000	656	663
	40 001-50 000	681	688
	50 001-60 000	706	713
	60 001-70 000	731	738
	70 001+	756	763
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_ENGR_NWM_TRKGRP_CTRLs		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		2000	2000
NUM_OF_RTEB_EXTBLKS			
	0-2000	160	160
	2001-5000	400	400

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 80 001-100 000 (Sheet 13 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
	5001-10 000	800	800
	10 001-20 000	1600	1600
	20 001-30 000	2400	2400
	30 001-40 000	3200	3200
	40 001-50 000	4000	4000
	50 001-60 000	4800	4800
	60 001-70 000	5000	5000
	70 001+	5000	5000
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		20 000	22 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Line sizes 100 001-140 000

The table OFCENG parameter names and the preset values for line sizes 100 001-140 000 appear in the following table. The OFCENG parameter names appear according to trunk size.

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 1 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs			
	0-2000	1600	1850
	2001-5000	1750	2000
	5001-10 000	2000	2250
	10 001-20 000	2500	2750
	20 001-30 000	3000	3250
	30 001-40 000	3500	3750
	40 001-50 000	4000	4250
	50 001-60 000	4500	4750
	60 001-70 000	5000	5250
	70 001+	5500	5750
AIN_NUM_01_00_EXT_BLKs			
	0-2000	800	925
	2001-5000	875	1000
	5001-10 000	1000	1125
	10 001-20 000	1250	1375
	20 001-30 000	1500	1625
	30 001-40 000	1750	1875
	40 001-50 000	2000	2125

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 2 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
AIN_NUM_EXT_BLKs	50 001-60 000	2250	2375
	60 001-70 000	2500	2625
	70 001+	2750	2875
	0-2000	1600	1850
	2001-5000	1750	2000
	5001-10 000	2000	2250
	10 001-20 000	2500	2750
	20 001-30 000	3000	3250
	30 001-40 000	3500	3750
	40 001-50 000	4000	4250
	50 001-60 000	4500	4750
	60 001-70 000	5000	5250
	70 001+	5500	5750
AIN_NUM_PROCESSING_EXT_BLKs	0-2000	1600	1850
	2001-5000	1750	2000
	5001-10 000	2000	2250
	10 001-20 000	2500	2750
	20 001-30 000	3000	3250
	30 001-40 000	3500	3750
	40 001-50 000	4000	4250
	50 001-60 000	4500	4750

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 3 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
AIN_NUM_TERM_NOTIF_EXT_BLKs	60 001-70 000	5000	5250
	70 001+	5500	5750
	0-2000	3200	3700
	2001-5000	3500	4000
	5001-10 000	4000	4500
	10 001-20 000	5000	5500
	20 001-30 000	6000	6500
	30 001-40 000	7000	7500
	40 001-50 000	8000	8500
	50 001-60 000	9000	9500
	60 001-70 000	10 000	10 500
	70 001+	11 000	11 500
		21 000	24 500
		24 000	28 000
CFD_EXT_BLOCKS		21 000	24 500
CFW_EXT_BLOCKS		24 000	28 000
CFZ_EXT_BLOCKS		14 400	16 800
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE			
	0-2000	31 918	35 706
	2001-5000	33 568	37 356
	5001-10 000	36 318	40 106
	10 001-20 000	41 818	45 606
	20 001-30 000	47 318	51 106

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 4 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
	30 001-40 000	52 818	57 606
	40 001-50 000	58 318	62 106
	50 001-60 000	63 818	67 606
	60 001-70 000	69 318	73 106
	70 001+	74 818	78 606
CRS_PRU_POOL3_SIZE		9000	10 500
CRS_SUBRU_POOL1_SIZE			
	0-2000	18 300	21 300
	2001-5000	18 750	21 750
	5001-10 000	19 500	22 500
	10 001-20 000	21 000	24 000
	20 001-30 000	22 500	25 500
	30 001-40 000	24 000	27 000
	40 001-50 000	25 500	28 500
	50 001-60 000	27 000	30 000
	60 001-70 000	28 500	31 500
	70 001+	30 000	33 000
CRS_SUBRU_POOL2_SIZE			
	0-2000	23 360	27 010
	2001-5000	24 050	27 700
	5001-10 000	25 200	28 850
	10 001-20 000	27 200	31 150
	20 001-30 000	29 800	33 450

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 5 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
CRS_SUBRU_POOL3_SIZE	30 001-40 000	32 100	35 750
	40 001-50 000	34 400	38 050
	50 001-60 000	36 700	40 350
	60 001-70 000	39 000	42 650
	70 001+	41 300	44 950
CRS_SUBRU_POOL4_SIZE	0-2000	11 900	13 400
	2001-5000	12 200	13 700
	5001-10 000	12 700	14 200
	10 001-20 000	13 700	15 200
	20 001-30 000	14 700	16 200
	30 001-40 000	15 700	17 200
	40 001-50 000	16 700	18 200
	50 001-60 000	17 700	19 200
	60 001-70 000	18 700	20 200
	70 001+	19 700	21 200
	0-2000	8600	8600
CRS_SUBRU_POOL4_SIZE	2001-5000	9500	9500
	5001-10 000	11 000	11 000
	10 001-20 000	14 000	14 000
	20 001-30 000	17 000	17 000
	30 001-40 000	20 000	20 000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 6 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
	40 001-50 000	23 000	23 000
	50 001-60 000	26 000	26 000
	60 001-70 000	29 000	29 000
	70 001+	32 000	32 000
CUSTOMER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		800	800
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		300	350
MAX_SDPOOL_NO		15	15
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0-2000	25 200	28 080
	2001-5000	27 120	30 000
	5001-10 000	30 000	32 880
	10 001-20 000	34 800	34 800
	20 001-30 000	34 800	34 800
	30 001-40 000	34 800	34 800
	40 001-50 000	34 800	34 800
	50 001-60 000	34 800	34 800

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 7 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
NCCBS (ENET)	60 001-70 000	34 800	34 800
	70 001+	34 800	34 800
	0-2000	34 800	34 800
	2001-5000	34 800	34 800
	5001-10 000	34 800	34 800
	10 001-20 000	34 800	49 200
	20 001-30 000	49 200	49 200
	30 001-40 000	49 200	49 200
	40 001-50 000	49 200	63 600
	50 001-60 000	63 600	63 600
	60 001-70 000	63 600	63 600
	70 001+	63 600	63 600
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs			
	0-2000	4984	5234
	2001-5000	5134	5384
	5001-10 000	5384	5634
	10 001-20 000	5884	6134
	20 001-30 000	6384	6634
	30 001-40 000	6884	7134

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines **Table OFCENG (continued)**

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 8 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
NO_OF_FTR_XLA_BLKs	40 001-50 000	7384	7634
	50 001-60 000	7884	8134
	60 001-70 000	8384	8634
	70 001+	8884	9134
NO_OF_HIS_CONTROL_BLKs	0-2000	3100	3350
	2001-5000	3250	3500
	5001-10 000	3500	3750
	10 001-20 000	4000	4250
	20 001-30 000	4500	4750
	30 001-40 000	5000	5250
	40 001-50 000	5500	5750
	50 001-60 000	6000	6250
	60 001-70 000	6500	6750
	70 001+	7000	7250
	0-2000	4000	4000
	2001-5000	10 000	10 000
	5001-10 000	20 000	20 000
	10 001-20 000	40 000	40 000
	20 001-30 000	60 000	60 000
	30 001-40 000	80 000	80 000
	40 001-50 000	100 000	100 000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 9 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
NO_OF_HIS_DATA_BLKs - X1	50 001-60 000	120 000	120 000
	60 001-70 000	140 000	140 000
	70 001+	160 000	160 000
	0-2000	10 200	11 200
	2001-5000	16 500	17 500
	5001-10 000	27 000	28 000
	10 001-20 000	48 000	49 000
	20 001-30 000	69 000	70 000
	30 001-40 000	90 000	91 000
	40 001-50 000	111 000	112 000
	50 001-60 000	132 000	133 000
	60 001-70 000	153 000	154 000
	70 001+	174 000	175 000
NO_OF_HIS_DATA_BLKs - X2	0-2000	4400	4650
	2001-5000	8750	9000
	5001-10 000	16 000	16 250
	10 001-20 000	30 500	30 750
	20 001-30 000	45 000	45 250
	30 001-40 000	59 500	59 750
	40 001-50 000	74 000	74 250
	50 001-60 000	88 500	88 750

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 10 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
NO_OF_HIS_DATA_BLKs - X3	60 001-70 000	103 000	103 250
	70 001+	117 500	117 750
	0-2000	2100	2350
	2001-5000	3000	3250
	5001-10 000	4500	4750
	10 001-20 000	7500	7750
	20 001-30 000	10 500	10 750
	30 001-40 000	13 500	13 750
	40 001-50 000	16 500	16 750
	50 001-60 000	19 250	19 750
	60 001-70 000	22 500	22 750
	70 001+	25 500	25 750
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs	0-2000	3784	4034
	2001-5000	3934	4184
	5001-10 000	4184	4434
	10 001-20 000	4684	4934
	20 001-30 000	5184	5434
	30 001-40 000	5684	5934
	40 001-50 000	6184	6434
	50 001-60 000	6684	6934

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 11 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
	60 001-70 000	7184	7434
	70 001+	7684	7934
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		32 767	32 767
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		300	350
NO_OF_SDS_EXT_BLKs		1500	1750
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs			
	0-2000	580	593
	2001-5000	588	600
	5001-10 000	600	613
	10 001-20 000	625	638
	20 001-30 000	650	663
	30 001-40 000	675	688
	40 001-50 000	700	713
	50 001-60 000	725	738
	60 001-70 000	750	763
	70 001+	775	788
NO_TFAN_OM_REGISTERS		2 047	2047
NOS_QUANTITY_OF_SVCS		15	15

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 12 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
NUM_ENGR_NWM_TRKGRP_CTRL		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1 000	1000
NUM_OF_NSC_EXT_BLK		2 000	2 000
NUM_OF_RTEB_EXTBLKS			
	0-2000	160	160
	2001-5000	400	400
	5001-10 000	800	800
	10 001-20 000	1600	1600
	20 001-30 000	2400	2400
	30 001-40 000	3200	3200
	40 001-50 000	4000	4000
	50 001-60 000	4800	4800
	60 001-70 000	5000	5000
	70 001+	5000	5000
NUM_RC_EXT_BLK		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		26 000	30 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 100 001-140 000 (Sheet 13 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

Line sizes 140 001-160 000

The table OFCENG parameter names and the preset values for line sizes 140 001-160 000 appear in the following table. The OFCENG parameter names appear according to trunk size.

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 1 of 13)

Parameter name	Trunk size	140 001-160 000
ACD_OVERFLOW_BLOCKS		4094
AIN_NUM_00_PARA_EXT_BLKs		
	0-2000	2100
	2001-5000	2250
	5001-10 000	2500
	10 001-20 000	3000
	20 001-30 000	3500
	30 001-40 000	4000
	40 001-50 000	4500
	50 001-60 000	5000
	60 001-70 000	5500
	70 001+	6000
AIN_NUM_01_00_EXT_BLKs		
	0-2000	1050
	2001-5000	1125

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 2 of 13)

Parameter name	Trunk size	140 001-160 000
AIN_NUM_EXT_BLKs	5001-10 000	1250
	10 001-20 000	1500
	20 001-30 000	1750
	30 001-40 000	2000
	40 001-50 000	2250
	50 001-60 000	2500
	60 001-70 000	2750
	70 001+	3000
AIN_NUM_PROCESSING_EXT_BLKs	0-2000	2100
	2001-5000	2250
	5001-10 000	2500
	10 001-20 000	3000
	20 001-30 000	3500
	30 001-40 000	4000
	40 001-50 000	4500
	50 001-60 000	5000
AIN_NUM_PROCESSING_EXT_BLKs	60 001-70 000	5500
	70 001+	6000
	0-2000	2100
	2001-5000	2250
	5001-10 000	2500

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 3 of 13)

Parameter name	Trunk size	140 001-160 000
	10 001-20 000	3000
	20 001-30 000	3500
	30 001-40 000	4000
	40 001-50 000	4500
	50 001-60 000	5000
	60 001-70 000	5500
	70 001+	6000
AIN_NUM_TERM_NOTIF_EXT_BLKs		
	0-2000	4200
	2001-5000	4500
	5001-10 000	5000
	10 001-20 000	6000
	20 001-30 000	7000
	30 001-40 000	8000
	40 001-50 000	9000
	50 001-60 000	10 000
	60 001-70 000	11 000
	70 001+	12 000
CFD_EXT_BLOCKS		28 000
CFW_EXT_BLOCKS		32 000
CFZ_EXT_BLOCKS		19 200
CRS_PRU_POOL1_SIZE		2000
CRS_PRU_POOL2_SIZE		

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 4 of 13)

Parameter name	Trunk size	140 001-160 000
	0-2000	39 494
	2001-5000	41 144
	5001-10 000	43 894
	10 001-20 000	49 394
	20 001-30 000	54 894
	30 001-40 000	60 394
	40 001-50 000	65 894
	50 001-60 000	71 394
	60 001-70 000	76 894
	70 001+	82 394
CRS_PRU_POOL3_SIZE		12 000
CRS_SUBRU_POOL1_SIZE		
	0-2000	24 300
	2001-5000	24 750
	5001-10 000	25 500
	10 001-20 000	27 000
	20 001-30 000	28 500
	30 001-40 000	30 000
	40 001-50 000	31 500
	50 001-60 000	33 000
	60 001-70 000	34 500
	70 001+	36 000
CRS_SUBRU_POOL2_SIZE		

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 5 of 13)

Parameter name	Trunk size	140 001-160 000
CRS_SUBRU_POOL3_SIZE	0-2000	30 660
	2001-5000	31 350
	5001-10 000	32 500
	10 001-20 000	34 800
	20 001-30 000	37 100
	30 001-40 000	39 400
	40 001-50 000	41 700
	50 001-60 000	44 000
	60 001-70 000	46 300
	70 001+	48 600
CRS_SUBRU_POOL4_SIZE	0-2000	14 900
	2001-5000	15 200
	5001-10 000	15 700
	10 001-20 000	16 700
	20 001-30 000	17 700
	30 001-40 000	18 700
	40 001-50 000	19 700
	50 001-60 000	20 700
	60 001-70 000	21 700
	70 001+	22 700
CRS_SUBRU_POOL4_SIZE	0-2000	8600

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 6 of 13)

Parameter name	Trunk size	140 001-160 000
	2001-5000	9500
	5001-10 000	11 000
	10 001-20 000	14 000
	20 001-30 000	17 000
	30 001-40 000	20 000
	40 001-50 000	23 000
	50 001-60 000	26 000
	60 001-70 000	29 000
	70 001+	32 000
CUSTOMER_GROUP_IBNGRP_OM_COUNT		4095
EA_MF_SS7_EXT_BLOCK_COUNT		800
E911_NUMBER_OF_FDBS		1000
KSHUNT_EXT_BLOCKS		500
MAX_NO_OF_TRANS_ID		16 000
MAX_NUM_WIDEBAND_CALLS		400
MAX_SDPOOL_NO		15
MAXNUCS (JNET)		1024
MAXNUCS (ENET)		0
MAXSTS		64
NCCBS (JNET)		
	0-2000	30 960
	2001-5000	32 880
	5001-10 000	34 800

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 7 of 13)

Parameter name	Trunk size	140 001-160 000
NCCBS (ENET)	10 001-20 000	34 800
	20 001-30 000	34 800
	30 001-40 000	34 800
	40 001-50 000	34 800
	50 001-60 000	34 800
	60 001-70 000	34 800
	70 001+	34 800
	0-2000	34 800
	2001-5000	34 800
	5001-10 000	34 800
	10 001-20 000	49 200
	20 001-30 000	49 200
	30 001-40 000	63 600
	40 001-50 000	63 600
	50 001-60 000	63 600
	60 001-70 000	63 600
	70 001+	63 600
NO_LOCAL_COIN_EXT_BLKs		256
NO_OCCTS_OM_REGISTERS		2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000
NO_OF_FTR_CONTROL_BLKs	0-2000	5484

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 8 of 13)

Parameter name	Trunk size	140 001-160 000
NO_OF_FTR_XLA_BLKs	2001-5000	5634
	5001-10 000	5884
	10 001-20 000	6384
	20 001-30 000	6884
	30 001-40 000	7384
	40 001-50 000	7884
	50 001-60 000	8384
	60 001-70 000	8884
	70 001+	9384
NO_OF_HIS_CONTROL_BLKs	0-2000	3600
	2001-5000	3750
	5001-10 000	4000
	10 001-20 000	4500
	20 001-30 000	5000
	30 001-40 000	5500
	40 001-50 000	6000
	50 001-60 000	6500
	60 001-70 000	7000
	70 001+	7500
	0-2000	4000
	2001-5000	10 000

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 9 of 13)

Parameter name	Trunk size	140 001-160 000
NO_OF_HIS_DATA_BLKs - X1	5001-10 000	20 000
	10 001-20 000	40 000
	20 001-30 000	60 000
	30 001-40 000	80 000
	40 001-50 000	100 000
	50 001-60 000	120 000
	60 001-70 000	140 000
	70 001+	160 000
NO_OF_HIS_DATA_BLKs - X2	0-2000	12 200
	2001-5000	18 500
	5001-10 000	29 000
	10 001-20 000	50 000
	20 001-30 000	71 000
	30 001-40 000	92 000
	40 001-50 000	113 000
	50 001-60 000	134 000
	60 001-70 000	155 000
	70 001+	176 000
	0-2000	4900
	2001-5000	9250
	5001-10 000	16 500

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 10 of 13)

Parameter name	Trunk size	140 001-160 000
NO_OF_HIS_DATA_BLKs - X3	10 001-20 000	31 000
	20 001-30 000	45 500
	30 001-40 000	60 000
	40 001-50 000	74 500
	50 001-60 000	87 000
	60 001-70 000	103 500
	70 001+	118 000
NO_OF_LARGE_EXT_BLKs	0-2000	2600
	2001-5000	3500
	5001-10 000	5000
	10 001-20 000	8000
	20 001-30 000	11 000
	30 001-40 000	14 000
	40 001-50 000	17 000
	50 001-60 000	20 000
	60 001-70 000	23 000
	70 001+	26 000
NO_OF_LARGE_FTR_DATA_BLKs		1000
	0-2000	4284
	2001-5000	4434
	5001-10 000	4684

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 11 of 13)

Parameter name	Trunk size	140 001-160 000
	10 001-20 000	5184
	20 001-30 000	5684
	30 001-40 000	6184
	40 001-50 000	6684
	50 001-60 000	7684
	60 001-70 000	8184
	70 001+	800
NO_OF_MEDIUM_EXT_BLKs		1000
NO_OF_MEDIUM_FTR_DATA_BLKs		32 767
NO_OF_PVN_EXTBLK		2700
NO_OF_PVN_TERM_EXTBLK		1200
NO_OF_SC_EXT_BLKs		400
NO_OF_SDS_EXT_BLKs		2000
NO_OF_SMALL_EXT_BLKs		1000
NO_OF_SMALL_FTR_DATA_BLKs		1200
NO_OF_XLARGE_EXT_BLKs		
	0-2000	605
	2001-5000	613
	5001-10 000	625
	10 001-20 000	650
	20 001-30 000	675
	30 001-40 000	700
	40 001-50 000	725

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCENG (continued)

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 12 of 13)

Parameter name	Trunk size	140 001-160 000
	50 001-60 000	750
	60 001-70 000	775
	70 001+	800
NO_TFAN_OM_REGISTERS		2047
NOS_QUANTITY_OF_SVCS		15
NUM_ENGR_NWM_TRKGRP_CTRL		255
NUM_IBN_IXLA_EXT_BLOCKS		1000
NUM_OF_NSC_EXT_BLK		2000
NUM_OF_RTEB_EXTBLKS		
	0-2000	160
	2001-5000	400
	5001-10 000	800
	10 001-20 000	1600
	20 001-30 000	2400
	30 001-40 000	3200
	40 001-50 000	4000
	50 001-60 000	4800
	60 001-70 000	5000
	70 001+	5000
NUM_RC_EXT_BLK		1000
NUMCALLPROCESSES		80
NUMCPWAKE		32 767
NUMIBNCQEXTBLK		3825

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines
Table OFCENG (end)

Preset office parm values for table OFCENG line sizes 140 001-160 000 (Sheet 13 of 13)

Parameter name	Trunk size	140 001-160 000
NUMOHCQBQTRANSBLKS		1169
NUMPERMEXT		7000
OCCTS_ENHANCED_FEATURE		Y
PSTN_GT_SIZE		10
SLE_ITEMS_IN_SEGMENT		1024
SLE_MAX_SEGMENT_COUNT		2047

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCOPT

Line sizes 1-160 000

The following table lists the table OFCOPT parameter names and the preset values for line sizes 1-160 000.

Preset office parameter values for table OFCOPT line sizes 1-160 000 (Sheet 1 of 2)

Parameter name	1- 160 000 lines
ENET_MAX_CHANNEL_GROUP	3840
MAX_ACDMIS_SESSIONS	5
MAX_MBG_LINES	1000
MAX_NUM_CTX_ASSOC	32 767
MAX_NUM_ECM_ACDEVENT	32 767
MAX_NUM_ECM_CALLINIT	32 767
MAX_NUM_ECM_CTXEVENT	32 767
MAX_NUM_ECM_DNQUERY	32 767
MAX_NUM_ECM_ICCM	32 767
MAX_NUM_ECM_LINE_MAKECALL	32 767
MAX_NUM_ECM_LINE_SCAICC	32 767
MAX_NUM_ECM_LINE_SCAI3WC	32 767
MAX_NUM_ECM_LINE_SCAIMWT	32 767
MAX_NUM_ECM_RESEVENT	32 767
MAX_NUM_ECM_RESOURCE	32 767
MAX_NUM_ECM_ROUTING	32 767
MAX_NUM_ECM_SCAICC	32 767
MAX_NUM_ECM_SCAI3WC	32 767
MAX_NUM_ECM_SCAIMWTI	32 767
MAX_NUM_ECM_SVC	32 767
MAX_NUM_ECM_TPAC	32 767

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines
Table OFCOPT (end)

Preset office parameter values for table OFCOPT line sizes 1-160 000 (Sheet 2 of 2)

Parameter name	1- 160 000 lines
MAX_NUM_ECM_TPCC	32 767
MAX_NUM_ECM_TPQC	32 767
MAX_NUM_RES_ASSOC	32 767
NA_TOLL_FREE_TYPE	US_SERVICE
TFAN_ENHANCED_FEATURE	Y

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCSTD

Line sizes 1-160 000

The following table lists the table OFCSTD parameter names and preset values for line sizes 1-160 000. The table lists the parameter name according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCSTD line sizes 1-160 000

Parameter name	1-160 000 lines
MTCBASE_SCPD	2047

DMS-100/200 local/toll switch with 0-35% MDC and ISDN lines

Table OFCVAR

Line sizes 1-160 000

The following table lists the table OFCVAR parameter names and the preset values for line sizes 1-160 000.

Preset office parameter values for table OFCVAR line sizes 1-160 000

Parameter name	1-160 000 lines
PER_OPC_LOGDEV_BUFFER_SIZE	22 000

DMS-100 local/toll switch with 0-35% MDC and ISDN lines

Table DATASIZE

Line sizes 1-160 000

The Table DATASIZE office parameter lists the following names and preset values for line sizes 1-160 000.

Preset office parameter values for Table DATASIZE line sizes 1-160 000

Parameter name	1-160 000 lines
AIODGRP	255
AIODMEM	255
CLLI	2 048
CPOS	64
NWMAOCR	64
NWMPPLN	256
TRKGRP	2 048

6 DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines—U.S. only

Organization

This chapter applies to DMS-100/200 local/toll switches. In the DMS-100/200 local/toll switches, 36 to 100% of the total lines are Meridian Digital Centrex (MDC) and integrated services digital network (ISDN) lines.

This chapter is organized in modules. A module is present for each of the following office parameter tables that have preset values:

- table OFCENG
- table OFCOPT
- table OFCSTD
- table OFCVAR
- table DATASIZE

Each office parameter module includes five tables grouped according to the number of lines.

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG

Line sizes 1-20 000

The following table lists the table OFCENG parameter names and preset values for line sizes 1-20 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 1 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
ACD_OVERFLOW_BLOCKS		3 000	3000
AIN_NUM_01_00_EXT_BLKs			
AIN_NUM_00_PARA_EXT_BLKs			
	0 - 2000	475	850
	2001 - 5000	625	1000
	5001 - 10 000	875	1250
	10 001 - 20 000	1375	1750
	20 001 - 30 000	1875	2250
	30 001 - 40 000	2375	2750
	40 001 - 50 000	2875	3250
	50 001 - 60 000	3375	3750
	60 001 - 70 000	3875	4250
	70 001+	4375	4750
AIN_NUM_01_00_EXT_BLKs			
	0 - 2000	238	425
	2001 - 5000	313	500
	5001 - 10 000	438	625
	10 001 - 20 000	688	875
	20 001 - 30 000	938	1125
	30 001 - 40 000	1188	1375

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 2 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
AIN_NUM_EXT_BKLS	40 001 - 50 000	1438	1625
	50 001 - 60 000	1688	1875
	60 001 - 70 000	1938	2125
	70 001+	2188	2375
	0 - 2000	475	850
	2001 - 5000	625	1000
	5001 - 10 000	875	1250
	10 001 - 20 000	1375	1750
	20 001 - 30 000	1875	2250
	30 001 - 40 000	2375	2750
	40 001 - 50 000	2875	3250
	50 001 - 60 000	3375	3750
	60 001 - 70 000	3875	4250
	70 001+	4375	4750
	0 - 2000	475	850
	2001 - 5000	625	1000
AIN_NUM_PROCESSING_EXT_BKLS	5001 - 10 000	875	1250
	10 001 - 20 000	1375	1750
	20 001 - 30 000	1875	2250
	30 001 - 40 000	2375	2750
	40 001 - 50 000	2875	3250

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 3 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
AIN_NUM_TERM_NOTIF_EXT_BLKs	50 001 - 60 000	3375	3750
	60 001 - 70 000	3875	4250
	70 001+	4375	4750
	0 - 2000	950	1700
	2001 - 5000	1250	2000
	5001 - 10 000	1750	2500
	10 001 - 20 000	2750	3500
	20 001 - 30 000	3750	4500
	30 001 - 40 000	4750	5500
	40 001 - 50 000	5750	6500
	50 001 - 60 000	6750	7500
	60 001 - 70 000	7750	8500
	70 001+	8750	9500
CFD_EXT_BLOCKS		5250	10 500
CFW_EXT_BLOCKS		2000	4000
CFZ_EXT_BLOCKS		1200	2400
CRS_PRU_POOL1_SIZE		1000	1000
CRS_PRU_POOL2_SIZE			
	0 - 2000	12 584	15 978
	2001 - 5000	14 234	17 628
	5001 - 10 000	16 984	20 378
	10 001 - 20 000	22 484	25 878

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 4 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	20 001 - 30 000	27 984	31 378
	30 001 - 40 000	33 484	36 878
	40 001 - 50 000	38 984	42 378
	50 001 - 60 000	44 484	47 878
	60 001 - 70 000	49 484	53 878
	70 001+	55 484	58 878
CRS_PRU_POOL3_SIZE		2250	4500
CRS_SUBRU_POOL1_SIZE			
	0 - 2000	4800	9300
	2001 - 5000	5250	9750
	5001 - 10 000	6000	10 500
	10 001 - 20 000	7500	12 000
	20 001 - 30 000	9000	13 500
	30 001 - 40 000	10 500	15 000
	40 001 - 50 000	12 000	16 500
	50 001 - 60 000	13 500	18 000
	60 001 - 70 000	15 000	19 500
	70 001+	16 500	21 000
CRS_SUBRU_POOL2_SIZE			
	0 - 2000	5335	9210
	2001 - 5000	6025	9900
	5001 - 10 000	7175	11 050
	10 001 - 20 000	9475	13 350

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 5 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
CRS_SUBRU_POOL3_SIZE	20 001 - 30 000	11 775	15 650
	30 001 - 40 000	14 075	17 950
	40 001 - 50 000	16 375	20 250
	50 001 - 60 000	18 675	22 550
	60 001 - 70 000	20 975	24 850
	70 001+	23 275	27 150
CRS_SUBRU_POOL4_SIZE	0 - 2000	5150	7400
	2001 - 5000	5450	7700
	5001 - 10 000	5950	8200
	10 001 - 20 000	6950	9200
	20 001 - 30 000	7950	10 200
	30 001 - 40 000	8950	11 200
	40 001 - 50 000	9950	12 200
	50 001 - 60 000	10 950	13 200
	60 001 - 70 000	11 950	14 200
	70 001+	12 950	15 200
CRS_SUBRU_POOL4_SIZE	0 - 2000	7600	7600
	2001 - 5000	8500	8500
	5001 - 10 000	10 000	10 000
	10 001 - 20 000	13 000	13 000
	20 001 - 30 000	16 000	16 000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 6 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	30 001 - 40 000	19 000	19 000
	40 001 - 50 000	22 000	22 000
	50 001 - 60 000	25 000	25 000
	60 001 - 70 000	28 000	28 000
	70 001+	31 000	31 000
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		800	800
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_CMAP_SESSIONS		5	5
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		75	150
MAX_SDPOOL_NO		15	15
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		32	32
NCCBS (JNET)			
	0 - 2000	10 800	11 760
	2001 - 5000	11 760	13 680
	5001 - 10 000	14 640	15 600
	10 001 - 20 000	19 440	20 400
	20 001 - 30 000	24 240	26 160
	30 001 - 40 000	29 040	30 960

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 7 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
NCCBS (ENET)	40 001 - 50 000	34 800	34 800
	50 001 - 60 000	34 800	34 800
	60 001 - 70 000	34 800	34 800
	70 001+	34 800	34 800
	0 - 2000	20 400	20 400
	2001 - 5000	20 400	20 400
	5001 - 10 000	20 400	20 400
	10 001 - 20 000	20 400	20 400
	20 001 - 30 000	34 800	34 800
	30 001 - 40 000	34 800	34 800
	40 001 - 50 000	34 800	49 200
	50 001 - 60 000	49 200	49 200
	60 001 - 70 000	49 200	49 200
	70 001+	49 200	63 600
	NO_LOCAL_COIN_EXT_BLKs	256	256
	NO_OCCTS_OM_REGISTERS	2047	2047
NO_OF_FTR_CONTROL_BLKs	NO_OF_CRITICAL_FTR_DATA_BLKs	1000	1000
	0 - 2000	3859	4234
	2001 - 5000	4009	4384
	5001 - 10 000	4259	4634
	10 001 - 20 000	4759	5134

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 8 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
NO_OF_FTR_XLA_BKLS	20 001 - 30 000	5259	5634
	30 001 - 40 000	5759	6134
	40 001 - 50 000	6259	6634
	50 001 - 60 000	6759	7134
	60 001 - 70 000	7259	7634
	70 001+	7759	8134
NO_OF_HIS_CONTROL_BKLS	0 - 2000	1975	2350
	2001 - 5000	2125	2500
	5001 - 10 000	2375	2750
	10 001 - 20 000	2875	3250
	20 001 - 30 000	3375	3750
	30 001 - 40 000	3875	4250
	40 001 - 50 000	4375	4750
	50 001 - 60 000	4875	5250
	60 001 - 70 000	5375	5750
	70 001+	5875	6250
	0 - 2000	4000	4000
	2001 - 5000	10 000	10 000
	5001 - 10 000	20 000	20 000
	10 001 - 20 000	40 000	40 000
	20 001 - 30 000	60 000	60 000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 9 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
NO_OF_HIS_DATA_BLKs - X1	30 001 - 40 000	80 000	80 000
	40 001 - 50 000	100 000	100 000
	50 001 - 60 000	120 000	120 000
	60 001 - 70 000	140 000	140 000
	70 001+	160 000	160 000
	0 - 2000	5750	7300
	2001 - 5000	12 050	13 600
	5001 - 10 000	22 550	24 100
	10 001 - 20 000	43 550	45 100
	20 001 - 30 000	64 550	66 100
	30 001 - 40 000	85 550	87 100
	40 001 - 50 000	106 550	108 100
	50 001 - 60 000	127 550	129 100
NO_OF_HIS_DATA_BLKs - X2	60 001 - 70 000	148 550	150 100
	70 001+	169 550	171 100
	0 - 2000	3275	3650
	2001 - 5000	7625	8000
	5001 - 10 000	14 875	15 250
	10 001 - 20 000	29 375	29 750
	20 001 - 30 000	43 875	44 250
	30 001 - 40 000	58 375	58 750

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 10 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
NO_OF_HIS_DATA_BLKs - X3	40 001 - 50 000	72 875	73 250
	50 001 - 60 000	83 375	87 750
	60 001 - 70 000	101 875	102 250
	70 001+	116 375	116 750
	0 - 2000	975	1350
	2001 - 5000	1875	2250
	5001 - 10 000	3375	3750
	10 001 - 20 000	6375	6750
	25 001 - 30 000	9375	9750
	30 001 - 40 000	12 375	12 750
	40 001 - 50 000	15 375	15 750
	50 001 - 60 000	18 375	18 750
	60 001 - 70 000	21 375	21 750
	70 001+	24 375	24 750
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs			
	0 - 2000	2659	3034
	2001 - 5000	2809	3184
	5001 - 10 000	3059	3434
	10 001 - 20 000	3559	3934
	25 001 - 30 000	4049	4434
	30 001 - 40 000	4559	4934

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 11 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
	40 001 - 50 000	5059	5434
	50 001 - 60 000	5559	5934
	60 001 - 70 000	6059	6434
	70 001+	6559	6934
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		4438	7475
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		75	150
NO_OF_SDS_EXT_BLKs		125	250
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs			
	0 - 2000	524	543
	2001 - 5000	531	550
	5001 - 10 000	544	563
	10 001 - 20 000	569	588
	20 001 - 30 000	594	613
	30 001 - 40 000	619	638
	40 001 - 50 000	644	663
	50 001 - 60 000	669	688
	60 001 - 70 000	694	713
	70 001+	719	738

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 12 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_ENGR_NWM_TRKGRP_CTRL		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1000	1 000
NUM_OF_NSC_EXT_BLK		2000	2 000
NUM_OF_RTEB_EXTBLKS			
	0 - 2000	160	160
	2001 - 5000	400	400
	5001 - 10 000	800	800
	10 001 - 20 000	1600	1600
	25 001 - 30 000	2400	2400
	30 001 - 40 000	3200	3200
	40 001 - 50 000	4000	4000
	50 001 - 60 000	4800	4800
	60 001 - 70 000	5000	5000
	70 001+	5000	5000
NUM_RC_EXT_BLK		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		4000	6000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 1-20 000 (Sheet 13 of 13)

Parameter name	Trunk size	1-10 000 lines	10 001- 20 000 lines
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

Line sizes 20 001-40 000

The following table lists the table OFCENG parameter names and preset values for line sizes 20 001-40 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 1 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
ACD_OVERFLOW_BLOCKS		3000	4094
AIN_NUM_00_PARA_EXT_BLKs			
	0 - 2000	1225	1600
	2001 - 5000	1375	1750
	5001 - 10 000	1625	2000
	10 001 - 20 000	2125	2500
	20 001 - 30 000	2625	3000
	30 001 - 40 000	3125	3500
	40 001 - 50 000	3625	4000
	50 001 - 60 000	4125	4500
	60 001 - 70 000	4625	5000
	70 001+	5125	5500
AIN_NUM_01_00_EXT_BLKs			
	0 - 2000	613	800

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 2 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
AIN_NUM_EXT_BLKs	2001 - 5000	688	875
	5001 - 10 000	813	1000
	10 001 - 20 000	1063	1250
	20 001 - 30 000	1313	1500
	30 001 - 40 000	1563	1750
	40 001 - 50 000	1813	2000
	50 001 - 60 000	2063	2250
	60 001 - 70 000	2313	2500
	70 001+	2563	2750
AIN_NUM_PROCESSING_EXT_BLKs	0 - 2000	1225	1600
	2001 - 5000	1375	1750
	5001 - 10 000	1625	2000
	10 001 - 20 000	2125	2500
	20 001 - 30 000	2625	3000
	30 001 - 40 000	3125	3500
	40 001 - 50 000	3625	4000
	50 001 - 60 000	4125	4500
	60 001 - 70 000	4625	5000
AIN_NUM_PROCESSING_EXT_BLKs	70 001+	5125	5500
	0 - 2000	1255	1600
	2001 - 5000	1375	1750

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 3 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
AIN_NUM_TERM_NOTIF_EXT_BLKs	5001 - 10 000	1625	2000
	10 001 - 20 000	2125	2500
	20 001 - 30 000	2625	3000
	30 001 - 40 000	3125	3500
	40 001 - 50 000	3625	4000
	50 001 - 60 000	4125	4500
	60 001 - 70 000	4625	5000
	70 001+	5125	5500
CFD_EXT_BLOCKS	0 - 2000	2450	3200
	2001 - 5000	2750	3500
	5001 - 10 000	3250	4000
	10 001 - 20 000	4250	5000
	20 001 - 30 000	5250	6000
	30 001 - 40 000	6250	7000
	40 001 - 50 000	7250	8000
	50 001 - 60 000	8250	9000
	60 001 - 70 000	9250	10 000
	70 001+	10 250	11 000
CFW_EXT_BLOCKS		15 750	21 000
CFZ_EXT_BLOCKS		6000	8000
CRS_PRU_POOL1_SIZE		3600	4800
		1000	1000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 4 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
CRS_PRU_POOL2_SIZE	0 - 2000	19 372	22 766
	2001 - 5000	21 022	24 416
	5001 - 10 000	23 772	27 166
	10 001 - 20 000	29 272	32 666
	20 001 - 30 000	34 772	38 166
	30 001 - 40 000	40 272	43 666
	40 001 - 50 000	45 772	49 166
	50 001 - 60 000	51.272	54 666
	60 001 - 70 000	56 772	60 166
	70 001+	62 272	65 666
CRS_PRU_POOL3_SIZE		6750	9000
CRS_SUBRU_POOL1_SIZE	0 - 2000	13 800	18 300
	2001 - 5000	14 250	18 750
	5001 - 10 000	15 000	19 500
	10 001 - 20 000	16 500	21 000
	20 001 - 30 000	18 000	22 500
	30 001 - 40 000	19 500	24 000
	40 001 - 50 000	21 000	25 500
	50 001 - 60 000	22 500	27 000
	60 001 - 70 000	24 000	28 500
	70 001+	25 500	30 000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 5 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
CRS_SUBRU_POOL2_SIZE	0 - 2000	13 085	16 960
	2001 - 5000	13 775	17 650
	5001 - 10 000	14 925	18 800
	10 001 - 20 000	17 225	21 100
	20 001 - 30 000	19 525	23 400
	30 001 - 40 000	21 825	25 700
	40 001 - 50 000	24 125	28 800
	50 001 - 60 000	26 425	30 300
	60 001 - 70 000	28 725	32 600
	70 001+	31 025	34 900
CRS_SUBRU_POOL3_SIZE	0 - 2000	9650	11 900
	2001 - 5000	9950	12 200
	5001 - 10 000	10 450	12 700
	10 001 - 20 000	11 450	13 700
	20 001 - 30 000	12 450	14 700
	30 001 - 40 000	13 450	15 700
	40 001 - 50 000	14 450	16 700
	50 001 - 60 000	15 450	17 700
	60 001 - 70 000	16 450	18 700
	70 001+	17 450	19 700
CRS_SUBRU_POOL4_SIZE			

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 6 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	0 - 2000	7600	7600
	2001 - 5000	8500	8500
	5001 - 10 000	10 000	10 000
	10 001 - 20 000	13 000	13 000
	20 001 - 30 000	16 000	16 000
	30 001 - 40 000	19 000	19 000
	40 001 - 50 000	22 000	22 000
	50 001 - 60 000	25 000	25 000
	60 001 - 70 000	28 000	28 000
	70 001+	31 000	31 000
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		800	800
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_CMAP_SESSIONS		5	5
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		225	300
MAX_SDPOOL_NO		15	15
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		32	64
NCCBS (JNET)			
	0 - 2000	12 720	14 640

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 7 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
NCCBS (ENET)	2001 - 5000	14 640	15 600
	5001 - 10 000	17 520	18 480
	10 001 - 20 000	22 320	23 280
	20 001 - 30 000	27 120	28 080
	30 001 - 40 000	31 920	33 840
	40 001 - 50 000	34 800	34 800
	50 001 - 60 000	34 800	34 800
	60 001 - 70 000	34 800	34 800
	70 001+	34 800	34 800
	0 - 2000	20 400	20 400
	2001 - 5000	20 400	20 400
	5001 - 10 000	20 400	20 400
	10 001 - 20 000	34 800	34 800
	20 001 - 30 000	34 800	34 800
	30 001 - 40 000	34 800	34 800
	40 001 - 50 000	49 200	49 200
	50 001 - 60 000	49 200	49 200
	60 001 - 70 000	49 200	49 200
	70 001+	63 600	63 600
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 8 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
NO_OF_FTR_CONTROL_BLKs	0 - 2000	4609	4984
	2001 - 5000	4759	5134
	5001 - 10 000	5009	5384
	10 001 - 20 000	5509	5884
	20 001 - 30 000	6009	6384
	30 001 - 40 000	6509	6884
	40 001 - 50 000	7009	7384
	50 001 - 60 000	7509	7884
	60 001 - 70 000	8009	8384
	70 001+	8509	8884
NO_OF_FTR_XLA_BLKs	0 - 2000	2725	3100
	2001 - 5000	2875	3250
	5001 - 10 000	3125	3500
	10 001 - 20 000	3625	4000
	20 001 - 30 000	4125	4500
	30 001 - 40 000	4625	5000
	40 001 - 50 000	5125	5500
	50 001 - 60 000	5625	6000
	60 001 - 70 000	6125	6500
	70 001+	6625	7000
NO_OF_HIS_CONTROL_BLKs			

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 9 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	0 - 2000	4000	4000
	2001 - 5000	10 000	10 000
	5001 - 10 000	20 000	20 000
	10 001 - 20 000	40 000	40 000
	20 001 - 30 000	60 000	60 000
	30 001 - 40 000	80 000	80 000
	40 001 - 50 000	100 000	100 000
	50 001 - 60 000	120 000	120 000
	60 001 - 70 000	140 000	140 000
	70 001+	160 000	160 000
NO_OF_HIS_DATA_BLKs - X1	0 - 2000	8850	10 400
	2001 - 5000	15 150	16 700
	5001 - 10 000	25 650	27 200
	10 001 - 20 000	46 650	48 200
	20 001 - 30 000	67 650	69 200
	30 001 - 40 000	88 650	90 200
	40 001 - 50 000	109 650	111 200
	50 001 - 60 000	130 650	132 200
	60 001 - 70 000	151 650	153 200
	70 001+	172 650	174 200
NO_OF_HIS_DATA_BLKs - X2	0 - 2000	4025	4400

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 10 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
NO_OF_HIS_DATA_BLKs - X3	2001 - 5000	8375	8750
	5001 - 10 000	15 625	16 000
	10 001 - 20 000	30 125	30 500
	20 001 - 30 000	44 625	45 000
	30 001 - 40 000	59 125	59 500
	40 001 - 50 000	73 625	74 000
	50 001 - 60 000	88 125	88 500
	60 001 - 70 000	102 625	103 000
	70 001+	117 125	117 500
NO_OF_LARGE_EXT_BLKs	0 - 2000	1725	2100
	2001 - 5000	2625	3000
	5001 - 10 000	4125	4500
	10 001 - 20 000	7125	7500
	20 001 - 30 000	10 125	10 500
	30 001 - 40 000	13 125	13 500
	40 001 - 50 000	16 125	16 500
	50 001 - 60 000	19 125	19 500
	60 001 - 70 000	22 125	22 500
NO_OF_LARGE_FTR_DATA_BLKs	70 001+	25 125	25 500
	0 - 2000	1000	1000
NO_OF_LARGE_FTR_DATA_BLKs	0 - 2000	3409	3784

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 11 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	2001 - 5000	3559	3934
	5001 - 10 000	3809	4184
	10 001 - 20 000	4309	4684
	20 001 - 30 000	4809	5184
	30 001 - 40 000	5309	5684
	40 001 - 50 000	5809	6184
	50 001 - 60 000	6309	6684
	60 001 - 70 000	6809	7184
	70 001+	7309	7684
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		10 513	13 550
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		225	300
NO_OF_SDS_EXT_BLKs		3000	4000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs			
	0 - 2000	561	580
	2001 - 5000	569	588
	5001 - 10 000	581	600
	10 001 - 20 000	606	625
	20 001 - 30 000	631	650

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 12 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
	30 001 - 40 000	656	675
	40 001 - 50 000	681	700
	50 001 - 60 000	706	725
	60 001 - 70 000	731	750
	70 001+	756	775
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_ENGR_NWM_TRKGRP_CTRL		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		2000	2000
NUM_OF_RTEB_EXTBLKS			
	0 - 2000	160	160
	2001 - 5000	400	400
	5001 - 10 000	800	800
	10 001 - 20 000	1600	1600
	20 001 - 30 000	2400	2400
	30 001 - 40 000	3200	3200
	40 001 - 50 000	4000	4000
	50 001 - 60 000	4800	4800
	60 001 - 70 000	5000	5000
	70 001+	5000	5000
NUM_RC_EXT_BLK		1000	1000
NUMCALLPROCESSES		80	80

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 20 001-40 000 (Sheet 13 of 13)

Parameter name	Trunk size	20 001- 30 000 lines	30 001- 40 000 lines
NUMCPWAKE		8000	10 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

Line sizes 40 001-60 000

The following table lists the table OFCENG parameter names and preset values for line sizes 40 001-60 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 1 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs			
	0 - 2000	1975	2350
	2001 - 5000	2125	2500
	5001 - 10 000	2375	2750
	10 001 - 20 000	2875	3250
	20 001 - 30 000	3375	3750
	30 001 - 40 000	3875	4250
	40 001 - 50 000	4375	4750

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 2 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
AIN_NUM_01_00_EXT_BLKs	50 001 - 60 000	4875	5250
	60 001 - 70 000	5375	5750
	70 001+	5875	6250
	0 - 2000	988	1175
	2001 - 5000	1063	1250
	5001 - 10 000	1188	1375
	10 001 - 20 000	1438	1625
	20 001 - 30 000	1688	1875
	30 001 - 40 000	1938	2125
	40 001 - 50 000	2188	2375
	50 001 - 60 000	2438	2625
	60 001 - 70 000	2688	2875
	70 001+	2938	3125
	0 - 2000	1975	2350
	2001 - 5000	2125	2500
AIN_NUM_EXT_BLKs	5001 - 10 000	2375	2750
	10 001 - 20 000	2875	3250
	20 001 - 30 000	3375	3750
	30 001 - 40 000	3875	4250
	40 001 - 50 000	4375	4750
	50 001 - 60 000	4875	5250

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 3 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
AIN_NUM_PROCESSING_EXT_BLKs	60 001 - 70 000	5375	5750
	70 001+	5875	6250
	0 - 2000	1975	2350
	2001 - 5000	2125	2500
	5001 - 10 000	2375	2750
	10 001 - 20 000	2875	3250
	20 001 - 30 000	3375	3750
	30 001 - 40 000	3875	4250
	40 001 - 50 000	4375	4750
	50 001 - 60 000	4875	5250
	60 001 - 70 000	5375	5750
	70 001+	5875	6250
AIN_NUM_TERM_NOTIF_EXT_BLKs	0 - 2000	3950	4700
	2001 - 5000	4250	5000
	5001 - 10 000	4750	5500
	10 001 - 20 000	5750	6500
	20 001 - 30 000	6750	7500
	30 001 - 40 000	7750	8500
	40 001 - 50 000	8750	9500
	50 001 - 60 000	9750	10 500
	60 001 - 70 000	10 750	11 500

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 4 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	70 001+	11 750	12 500
CFD_EXT_BLOCKS		26 250	31 500
CFW_EXT_BLOCKS		10 000	12 000
CFZ_EXT_BLOCKS		6000	7200
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE			
	0 - 2000	26 160	29 554
	2001 - 5000	27 810	31 204
	5001 - 10 000	30 560	33 954
	10 001 - 20 000	36 060	39 454
	20 001 - 30 000	41 560	44 954
	30 001 - 40 000	47 060	50 454
	40 001 - 50 000	52 560	55 954
	50 001 - 60 000	58 060	61 454
	60 001 - 70 000	63 560	66 954
	70 001+	69 060	72 454
CRS_PRU_POOL3_SIZE		11 250	13 500
CRS_SUBRU_POOL1_SIZE			
	0 - 2000	22 800	27 300
	2001 - 5000	23 250	27 750
	5001 - 10 000	24 000	28 500
	10 001 - 20 000	25 500	30 000
	20 001 - 30 000	27 000	31 500

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 5 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
CRS_SUBRU_POOL2_SIZE	30 001 - 40 000	28 500	33 000
	40 001 - 50 000	30 000	34 500
	50 001 - 60 000	31 500	36 000
	60 001 - 70 000	33 000	37 500
	70 001+	34 500	39 000
	0 - 2000	20 835	24 710
	2001 - 5000	21 525	25 400
	5001 - 10 000	22 675	26 550
	10 001 - 20 000	24 975	28 850
	20 001 - 30 000	27 275	31 150
CRS_SUBRU_POOL3_SIZE	30 001 - 40 000	29 725	33 450
	40 001 - 50 000	31 875	35 750
	50 001 - 60 000	34 175	38 050
	60 001 - 70 000	36 475	40 350
	70 001+	38 775	42 650
	0 - 2000	14 150	16 400
	2001 - 5000	14 450	16 700
	5001 - 10 000	14 950	17 200
	10 001 - 20 000	15 950	18 200
	20 001 - 30 000	16 950	19 200
	30 001 - 40 000	17 950	20 200

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 6 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
CRS_SUBRU_POOL4_SIZE	40 001 - 50 000	18 950	21 200
	50 001 - 60 000	19 950	22 200
	60 001 - 70 000	20 950	23 200
	70 001+	21 950	24 200
	0 - 2000	8600	8600
	2001 - 5000	9500	9500
	5001 - 10 000	11 000	11 000
	10 001 - 20 000	14 000	14 000
	20 001 - 30 000	17 000	17 000
	30 001 - 40 000	20 000	20 000
	40 001 - 50 000	23 000	23 000
	50 001 - 60 000	26 000	26 000
	60 001 - 70 000	29 000	29 000
	70 001+	32 000	32 000
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		800	800
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_CMAP_SESSIONS		5	5
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		375	450
MAX_SDPOOL_NO		15	15

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 7 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0 - 2000	15 600	17 520
	2001 - 5000	17 520	18 480
	5001 - 10 000	20 400	21 360
	10 001 - 20 000	25 200	26 160
	20 001 - 30 000	30 000	30 960
	30 001 - 40 000	34 800	34 800
	40 001 - 50 000	34 800	34 800
	50 001 - 60 000	34 800	34 800
	60 001 - 70 000	34 800	34 800
	70 001+	34 800	34 800
NCCBS (ENET)			
	0 - 2000	20 400	20 400
	2001 - 5000	20 400	20 400
	5001 - 10 000	20 400	34 800
	10 001 - 20 000	34 800	34 800
	20 001 - 30 000	34 800	34 800
	30 001 - 40 000	34 800	49 200
	40 001 - 50 000	49 200	49 200
	50 001 - 60 000	49 200	49 200

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 8 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	60 001 - 70 000	63 600	63 600
	70 001+	63 600	63 600
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs			
	0 - 2000	5359	5734
	2001 - 5000	5509	5884
	5001 - 10 000	5759	6134
	10 001 - 20 000	6259	6634
	20 001 - 30 000	6759	7134
	30 001 - 40 000	7259	7634
	40 001 - 50 000	7759	8134
	50 001 - 60 000	8259	8634
	60 001 - 70 000	8759	9134
	70 001+	9259	9634
NO_OF_FTR_XLA_BLKs			
	0 - 2000	3475	3850
	2001 - 5000	3625	4000
	5001 - 10 000	3875	4250
	10 001 - 20 000	4375	4750
	20 001 - 30 000	4875	5250
	30 001 - 40 000	5375	5750

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 9 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
NO_OF_HIS_CONTROL_BLKs	40 001 - 50 000	5875	6250
	50 001 - 60 000	6375	6750
	60 001 - 70 000	6875	7250
	70 001+	7375	7750
	0 - 2000	4000	4000
	2001 - 5000	10 000	10 000
	5001 - 10 000	20 000	20 000
	10 001 - 20 000	40 000	40 000
	20 001 - 30 000	60 000	60 000
	30 001 - 40 000	80 000	80 000
	40 001 - 50 000	100 000	100 000
	50 001 - 60 000	120 000	120 000
	60 001 - 70 000	140 000	140 000
NO_OF_HIS_DATA_BLKs - X1	70 001+	160 000	160 000
	0 - 2000	11 950	13 500
	2001 - 5000	18 250	19 800
	5001 - 10 000	28 750	30 300
	10 001 - 20 000	49 750	51 300
	20 001 - 30 000	70 750	72 300
	30 001 - 40 000	91 750	93 300
	40 001 - 50 000	112 750	114 300

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 10 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
NO_OF_HIS_DATA_BLKs - X2	50 001 - 60 000	133 750	135 300
	60 001 - 70 000	154 750	156 300
	70 001+	175 750	177 300
	0 - 2000	4775	5150
	2001 - 5000	9125	9500
	5001 - 10 000	16 375	16 750
	10 001 - 20 000	30 875	31 250
	20 001 - 30 000	45 375	45 750
	30 001 - 40 000	59 875	60 250
	40 001 - 50 000	74 375	74 750
	50 001 - 60 000	88 875	89 250
	60 001 - 70 000	103 375	103 750
	70 001+	117 875	118 250
	0 - 2000	2475	2850
	2001 - 5000	3375	3750
NO_OF_HIS_DATA_BLKs - X3	5001 - 10 000	4875	5250
	10 001 - 20 000	7875	8250
	20 001 - 30 000	10 875	11 250
	30 001 - 40 000	13 875	14 250
	40 001 - 50 000	16 875	17 250
	50 001 - 60 000	19 875	20 250

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 11 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	60 001 - 70 000	22 875	23 250
	70 001+	25 875	26 250
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs			
	0 - 2000	4159	4534
	2001 - 5000	4309	4684
	5001 - 10 000	4559	4934
	10 001 - 20 000	5059	5434
	20 001 - 30 000	5559	5934
	30 001 - 40 000	6059	6434
	40 001 - 50 000	6559	6934
	50 001 - 60 000	7059	7434
	60 001 - 70 000	7559	7934
	70 001+	8059	8434
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		16 588	19 625
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		375	450
NO_OF_SDS_EXT_BLKs		5000	6000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs			

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 12 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	0 - 2000	599	618
	2001 - 5000	606	625
	5001 - 10 000	619	638
	10 001 - 20 000	644	663
	20 001 - 30 000	669	688
	30 001 - 40 000	694	713
	40 001 - 50 000	719	738
	50 001 - 60 000	744	763
	60 001 - 70 000	769	788
	70 001+	794	813
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_ENGR_NWM_TRKGRP_CTRL		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		2000	2000
NUM_OF_RTEB_EXTBLKS			
	0 - 2000	160	160
	2001 - 5000	400	400
	5001 - 10 000	800	800
	10 001 - 20 000	1600	1600
	20 001 - 30 000	2400	2400
	30 001 - 40 000	3200	3200
	40 001 - 50 000	4000	4000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 40 001-60 000 (Sheet 13 of 13)

Parameter name	Trunk size	40 001- 50 000 lines	50 001- 60 000 lines
	50 001 - 60 000	4800	4800
	60 001 - 70 000	5000	5000
	70 001+	5000	5000
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		12 000	14 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

Line sizes 60 001-80 000

The following table lists the table OFCENG parameter names and preset values for line sizes 60 001-80 000. The table lists the parameter names according to trunk size if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 1 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs			
	0 - 2000	2725	3100
	2001 - 5000	2875	3250

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 2 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
AIN_NUM_01_00_EXT_BLKs	5001 - 10 000	3125	3500
	10 001 - 20 000	3625	4000
	20 001 - 30 000	4125	4500
	30 001 - 40 000	4625	5000
	40 001 - 50 000	5125	5500
	50 001 - 60 000	5625	6000
	60 001 - 70 000	6125	6500
	70 001+	6625	7000
AIN_NUM_EXT_BLKs	0 - 2000	1363	1550
	2001 - 5000	1438	1625
	5001 - 10 000	1563	1750
	10 001 - 20 000	1813	2000
	20 001 - 30 000	2063	2250
	30 001 - 40 000	2313	2500
	40 001 - 50 000	2563	2750
	50 001 - 60 000	2813	3000
	60 001 - 70 000	3063	3250
	70 001+	3313	3500
	0 - 2000	2725	3100
	2001 - 5000	2875	3250
	5001 - 10 000	3125	3500

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 3 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
AIN_NUM_PROCESSING_EXT_BLKs	10 001 - 20 000	3625	4000
	20 001 - 30 000	4125	4500
	30 001 - 40 000	4625	5000
	40 001 - 50 000	5125	5500
	50 001 - 60 000	5625	6000
	60 001 - 70 000	6125	6500
	70 001+	6625	7000
AIN_NUM_TERM_NOTIF_EXT_BLKs	0 - 2000	2725	3100
	2001 - 5000	2875	3250
	5001 - 10 000	3125	3500
	10 001 - 20 000	3625	4000
	20 001 - 30 000	4125	4500
	30 001 - 40 000	4625	5000
	40 001 - 50 000	5125	5500
	50 001 - 60 000	5625	6000
	60 001 - 70 000	6125	6500
	70 001+	6625	7000
	0 - 2000	5450	6200
	2001 - 5000	5750	6500
	5001 - 10 000	6250	7000
	10 001 - 20 000	7250	8000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 4 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	20 001 - 30 000	8250	9000
	30 001 - 40 000	9250	10 000
	40 001 - 50 000	10 250	11 000
	50 001 - 60 000	11 250	12 000
	60 001 - 70 000	12 250	13 000
	70 001+	13 250	14 000
CFD_EXT_BLOCKS		32 767	32 767
CFW_EXT_BLOCKS		14 000	16 000
CFZ_EXT_BLOCKS		8400	9600
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE			
	0 - 2000	32 948	36 342
	2001 - 5000	34 598	37 992
	5001 - 10 000	37 348	40 742
	10 001 - 20 000	42 848	46 242
	20 001 - 30 000	48 348	51 742
	30 001 - 40 000	53 848	57 242
	40 001 - 50 000	59 348	62 742
	50 001 - 60 000	64 848	68 242
	60 001 - 70 000	70 348	73 742
	70 001+	75 848	79 242
CRS_PRU_POOL3_SIZE		15 750	18 000
CRS_SUBRU_POOL1_SIZE			

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 5 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	0 - 2000	31 800	36 300
	2001 - 5000	32 250	36 750
	5001 - 10 000	33 000	37 500
	10 001 - 20 000	34 500	39 000
	20 001 - 30 000	36 000	40 500
	30 001 - 40 000	37 500	42 000
	40 001 - 50 000	39 000	43 500
	50 001 - 60 000	40 500	45 000
	60 001 - 70 000	42 000	46 500
	70 001+	43 500	48 000
CRS_SUBRU_POOL2_SIZE	0 - 2000	28 585	32 460
	2001 - 5000	29 275	33 150
	5001 - 10 000	30 425	34 300
	10 001 - 20 000	32 725	36 600
	20 001 - 30 000	35 025	38 900
	30 001 - 40 000	37 325	41 200
	40 001 - 50 000	39 625	43 500
	50 001 - 60 000	41 925	45 800
	60 001 - 70 000	44 225	48 100
	70 001+	46 525	50 400
CRS_SUBRU_POOL3_SIZE	0 - 2000	18 650	20 900

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 6 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
CRS_SUBRU_POOL4_SIZE	2001 - 5000	18 950	21 200
	5001 - 10 000	19 450	21 700
	10 001 - 20 000	20 450	22 700
	20 001 - 30 000	21 450	23 700
	30 001 - 40 000	22 450	24 700
	40 001 - 50 000	23 450	25 700
	50 001 - 60 000	24 450	26 700
	60 001 - 70 000	25 450	27 700
	70 001+	26 450	28 700
CRS_SUBRU_POOL4_SIZE	0 - 2000	8600	8600
	2001 - 5000	9500	9500
	5001 - 10 000	11 000	11 000
	10 001 - 20 000	14 000	14 000
	20 001 - 30 000	17 000	17 000
	30 001 - 40 000	20 000	20 000
	40 001 - 50 000	23 000	23 000
	50 001- 60 000	26 000	26 000
	60 001 - 70 000	29 000	29 000
	70 001+	32 000	32 000
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		800	800
E911_NUMBER_OF_FDBS		1000	1000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 7 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
KSHUNT_EXT_BLOCKS		500	500
MAX_CMAP_SESSIONS		5	5
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		500	500
MAX_SDPOOL_NO		15	15
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0 - 2000	18 480	20 400
	2001 - 5000	20 400	21 360
	5001 - 10 000	22 320	24 240
	10 001 - 20 000	28 080	29 040
	20 001 - 30 000	32 880	33 840
	30 001 - 40 000	34 800	34 800
	40 001 - 50 000	34 800	34 800
	50 001 - 60 000	34 800	34 800
	60 001 - 70 000	34 800	34 800
	70 001+	34 800	34 800
NCCBS (ENET)			
	0- 2000	20 400	20 400
	2001 - 5000	20 400	34 800
	5001 - 10 000	34 800	34 800

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 8 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	10 001 - 20 000	34 800	34 800
	20 001 - 30 000	34 800	34 800
	30 001 - 40 000	49 200	49 200
	40 001 - 50 000	49 200	49 200
	50 001 - 60 000	49 200	49 200
	60 001 - 70 000	63 600	63 600
	70 001+	63 600	63 600
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs			
	0 - 2000	6109	6484
	2001 - 5000	6259	6634
	5001 - 10 000	6509	6884
	10 001 - 20 000	7009	7384
	20 001 - 30 000	7509	7884
	30 001 - 40 000	8009	8384
	40 001 - 50 000	8509	8884
	50 001 - 60 000	9009	9384
	60 001 - 70 000	9509	9884
	70 001+	10 009	10 384
NO_OF_FTR_XLA_BLKs			
	0 - 2000	4225	4600

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 9 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
NO_OF_HIS_CONTROL_BLKs	2001 - 5000	4375	4750
	5001 - 10 000	4625	5000
	10 001 - 20 000	5125	5500
	20 001 - 30 000	5625	6000
	30 001 - 40 000	6125	6500
	40 001 - 50 000	6625	7000
	50 001 - 60 000	7125	7500
	60 001 - 70 000	7625	8000
	70 001+	8125	8500
NO_OF_HIS_DATA_BLKs - X1	0 - 2000	4000	4000
	2001 - 5000	10 000	10 000
	5001 - 10 000	20 000	20 000
	10 001 - 20 000	40 000	40 000
	20 001 - 30 000	60 000	60 000
	30 001 - 40 000	80 000	80 000
	40 001 - 50 000	100 000	100 000
	50 001 - 60 000	120 000	120 000
	60 001 - 70 000	140 000	140 000
	70 001+	160 000	160 000
	0 - 2000	15 050	16 600
	2001 - 5000	21 350	22 900

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 10 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	5001 - 10 000	31 850	33 400
	10 001 - 20 000	52 850	54 400
	20 001 - 30 000	73 850	75 400
	30 001 - 40 000	94 850	96 400
	40 001 - 50 000	115 850	117 400
	50 001 - 60 000	136 850	138 400
	60 001 - 70 000	157 850	159 400
	70 001+	178 850	180 400
NO_OF_HIS_DATA_BLKs - X2			
	0 - 2000	5525	5900
	2001 - 5000	9875	10 250
	5001 - 10 000	17 125	17 500
	10 001 - 20 000	31 625	32 000
	20 001 - 30 000	46 125	46 500
	30 001 - 40 000	60 625	61 000
	40 001 - 50 000	75 125	75 500
	50 001 - 60 000	89 625	90 000
	60 001 - 70 000	104 125	104 500
	70 001+	118 625	119 000
NO_OF_HIS_DATA_BLKs - X3			
	0 - 2000	3225	3600
	2001 - 5000	4125	4500
	5001 - 10 000	5625	6000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines **Table OFCENG (continued)**

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 11 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	10 001 - 20 000	8625	9000
	20 001 - 30 000	11 625	12 000
	30 001 - 40 000	14 625	15 000
	40 001 - 50 000	17 625	18 000
	50 001 - 60 000	20 625	21 000
	60 001 - 70 000	23 625	24 000
	70 001+	26 625	27 000
NO_OF_LARGE_EXT_BLKs		1 000	1000
NO_OF_LARGE_FTR_DATA_BLKs			
	0 - 2000	4909	5284
	2001 - 5000	5059	5434
	5001 - 10 000	5309	5684
	10 001 - 20 000	5809	6184
	20 001 - 30 000	6309	6684
	30 001 - 40 000	6809	7184
	40 001 - 50 000	7309	7684
	50 001 - 60 000	7809	8184
	60 001 - 70 000	8309	8684
	70 001+	8809	9184
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		22 663	25 700
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 12 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
NO_OF_SC_EXT_BLKs		525	600
NO_OF_SDS_EXT_BLKs		7000	8000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs			
	0 - 2000	636	655
	2001 - 5000	644	663
	5001 - 10 000	656	675
	10 001 - 20 000	681	700
	20 001 - 30 000	706	725
	30 001 - 40 000	731	750
	40 001 - 50 000	756	775
	50 001 - 60 000	781	800
	60 001 - 70 000	806	825
	70 001+	831	850
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_ENGR_NWM_TRKGRP_CTRLs		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		2000	2000
NUM_OF_RTEB_EXTBLKS			
	0 - 2000	160	160
	2001 - 5000	400	400

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 60 001-80 000 (Sheet 13 of 13)

Parameter name	Trunk size	60 001- 70 000 lines	70 001- 80 000 lines
	5001 - 10 000	800	800
	10 001 - 20 000	1600	1600
	20 001 - 30 000	2400	2400
	30 001 - 40 000	3200	3200
	40 001 - 50 000	4000	4000
	50 001 - 60 000	4800	4800
	60 001 - 70 000	5000	5000
	70 001+	5000	5000
NUM_RC_EXT_BLKs		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		16 000	18 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Line sizes 80 001-100 000

The following table lists the table OFCENG parameter names and preset values for line sizes 80 001-100 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 1 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs			
	0 - 2000	3475	3850
	2001 - 5000	3625	4000
	5001 - 10 000	3875	4250
	10 001 - 20 000	4375	4750
	20 001 - 30 000	4875	5250
	30 001 - 40 000	5375	5750
	40 001 - 50 000	5875	6250
	50 001 - 60 000	6375	6750
	60 001 - 70 000	6875	7250
	70 001+	7375	7750
AIN_NUM_01_00_EXT_BLKs			
	0 - 2000	1738	1925
	2001 - 5000	1813	2000
	5001 - 10 000	1938	2125
	10 001 - 20 000	2188	2375
	20 001 - 30 000	2438	2625
	30 001 - 40 000	2688	2875
	40 001 - 50 000	2938	3125

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 2 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
AIN_NUM_EXT_BLKs	50 001 - 60 000	3188	3375
	60 001 - 70 000	3438	3625
	70 001+	3688	3875
	0 - 2000	3475	3850
	2001 - 5000	3625	4000
	5001 - 10 000	3875	4250
	10 001 - 20 000	4375	4750
	20 001 - 30 000	4875	5250
	30 001 - 40 000	5375	5750
	40 001 - 50 000	5875	6250
	50 001 - 60 000	6375	6750
	60 001 - 70 000	6875	7250
	70 001+	7375	7750
AIN_NUM_PROCESSING_EXT_BLKs	0 - 2000	3475	3850
	2001 - 5000	3625	4000
	5001 - 10 000	3875	4250
	10 001 - 20 000	4375	4750
	20 001 - 30 000	4875	5250
	30 001 - 40 000	5375	5750
	40 001 - 50 000	5875	6250
	50 001 - 60 000	6375	6750

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 3 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
AIN_NUM_TERM_NOTIF_EXT_BLKs	60 001 - 70 000	6875	7250
	70 001+	7375	7750
	0 - 2000	6950	7700
	2001 - 5000	7250	8000
	5001 - 10 000	7750	8500
	10 001 - 20 000	8750	9500
	20 001 - 30 000	9750	10 500
	30 001 - 40 000	10 750	11 500
	40 001 - 50 000	11 750	12 500
	50 001 - 60 000	12 750	13 500
	60 001 - 70 000	13 750	14 500
	70 001+	14 750	15 500
CFD_EXT_BLOCKS		32 767	32 767
CFW_EXT_BLOCKS		18 000	20 000
CFZ_EXT_BLOCKS		10 800	12 000
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE			
	0 - 2000	39 736	43 130
	2001 - 5000	41 386	44 780
	5001 - 10 000	44 136	47 530
	10 001 - 20 000	49 636	53 030
	20 001 - 30 000	55 136	58 530

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 4 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
	30 001 - 40 000	60 636	64 030
	40 001 - 50 000	66 136	69 530
	50 001 - 60 000	71 636	75 030
	60 001 - 70 000	77 136	80 530
	70 001+	82 636	86 030
CRS_PRU_POOL3_SIZE		20 250	22 500
CRS_SUBRU_POOL1_SIZE			
	0 - 2000	40 800	45 300
	2001 - 5000	41 250	45 750
	5001 - 10 000	42 000	46 500
	10 001 - 20 000	43 500	48 000
	20 001 - 30 000	45 000	49 500
	30 001 - 40 000	46 500	51 000
	40 001 - 50 000	48 000	52 500
	50 001 - 60 000	49 500	54 000
	60 001 - 70 000	51 000	55 500
	70 001+	52 500	57 000
CRS_SUBRU_POOL2_SIZE			
	0 - 2000	36 335	40 210
	2001 - 5000	37 025	40 900
	5001 - 10 000	38 175	42 050
	10 001 - 20 000	40 475	44 350
	20 001 - 30 000	42 775	46 650

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 5 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
CRS_SUBRU_POOL3_SIZE	30 001 - 40 000	45 075	48 950
	40 001 - 50 000	47 375	51 250
	50 001 - 60 000	49 675	53 550
	60 001 - 70 000	51 975	55 580
	70 001+	54 275	58 150
	0 - 2000	23 150	25 400
	2001 - 5000	23 450	25 700
	5001 - 10 000	23 950	26 200
	10 001 - 20 000	24 950	27 200
	20 001 - 30 000	25 950	28 200
	30 001 - 40 000	26 950	29 200
	40 001 - 50 000	27 950	30 200
	50 001 - 60 000	28 950	31 200
	60 001 - 70 000	29 950	32 200
	70 001+	30 950	33 200
CRS_SUBRU_POOL4_SIZE	0 - 2000	8600	8600
	2001 - 5000	9500	9500
	5001 - 10 000	11 000	11 000
	10 001 - 20 000	14 000	14 000
	20 001 - 30 000	17 000	17 000
	30 001 - 40 000	20 000	20 000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 6 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
	40 001 - 50 000	23 000	23 000
	50 001 - 60 000	26 000	26 000
	60 001 - 70 000	29 000	29 000
	70 001+	32 000	32 000
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		800	800
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_CMAP_SESSIONS		5	5
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		500	500
MAX_SDPOOL_NO		15	15
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0 - 2000	21 360	23 280
	2001 - 5000	23 280	24 240
	5001 - 10 000	25 200	27 120
	10 001 - 20 000	30 960	31 920
	20 001 - 30 000	34 800	34 800
	30 001 - 40 000	34 800	34 800
	40 001 - 50 000	34 800	34 800

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 7 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
NCCBS (ENET)	50 001 - 60 000	34 800	34 800
	60 001 - 70 000	34 800	34 800
	70 001+	34 800	34 800
	0 - 2000	34 800	34 800
	2001 - 5000	34 800	34 800
	5001 - 10 000	34 800	34 800
	10 001 - 20 000	34 800	34 800
	20 001 - 30 000	49 200	49 200
	30 001 - 40 000	49 200	49 200
	40 001 - 50 000	49 200	49 200
	50 001 - 60 000	63 600	63 600
	60 001 - 70 000	63 600	63 600
	70 001+	63 600	63 600
	NO_LOCAL_COIN_EXT_BLKs	256	256
	NO_OCCTS_OM_REGISTERS	2047	2047
NO_OF_FTR_CONTROL_BLKs	NO_OF_CRITICAL_FTR_DATA_BLKs	1000	1000
	0 - 2000	6859	7234
	2001 - 5000	7009	7384
	5001 - 10 000	7259	7634
	10 001 - 20 000	7759	8134
	20 001 - 30 000	8259	8634

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 8 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
NO_OF_FTR_XLA_BLKs	30 001 - 40 000	8759	9134
	40 001 - 50 000	9259	9634
	50 001 - 60 000	9759	10 134
	60 001 - 70 000	10 259	10 634
	70 001+	10 759	11 134
NO_OF_HIS_CONTROL_BLKs	0 - 2000	4975	5350
	2001 - 5000	5125	5500
	5001 - 10 000	5375	5750
	10 001 - 20 000	5875	6250
	20 001 - 30 000	6375	6750
	30 001 - 40 000	6875	7250
	40 001 - 50 000	7375	7750
	50 001 - 60 000	7875	8250
	60 001 - 70 000	8375	8750
	70 001+	8875	9250
	0 - 2000	4000	4000
	2001 - 5000	10 000	10 000
	5001 - 10 000	20 000	20 000
	10 001 - 20 000	40 000	40 000
	20 001 - 30 000	60 000	60 000
	30 001 - 40 000	80 000	80 000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 9 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
NO_OF_HIS_DATA_BLKs - X1	40 001 - 50 000	100 000	100 000
	50 001 - 60 000	120 000	120 000
	60 001 - 70 000	140 000	140 000
	70 001+	160 000	160 000
	0 - 2000	18 150	19 700
	2001 - 5000	24 450	26 000
	5001 - 10 000	34 950	36 500
	10 001 - 20 000	55 950	57 500
	20 001 - 30 000	76 950	78 500
	30 001 - 40 000	97 950	99 500
	40 001 - 50 000	118 950	120 500
	50 001 - 60 000	139 950	141 500
	60 001 - 70 000	160 950	162 500
NO_OF_HIS_DATA_BLKs - X2	70 001+	181 950	183 500
	0 - 2000	6275	6650
	2001 - 5000	10 625	11 000
	5001 - 10 000	17 875	18 250
	10 001 - 20 000	32 375	32 750
	20 001 - 30 000	46 875	47 250
	30 001 - 40 000	61 375	61 750
	40 001 - 50 000	75 875	76 250

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 10 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
NO_OF_HIS_DATA_BLKs - X3	50 001 - 60 000	90 375	90 750
	60 001 - 70 000	104 875	105 250
	70 001+	119 375	119 750
	0 - 2000	3975	4350
	2001 - 5000	4875	5250
	5001 - 10 000	6375	6750
	10 001 - 20 000	9375	9750
	20 001 - 30 000	12 375	12 750
	30 001 - 40 000	15 375	15 750
	40 001 - 50 000	18 375	18 750
	50 001 - 60 000	21 375	21 750
	60 001 - 70 000	24 375	24 750
	70 001+	27 375	27 750
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs	0 - 2000	5659	6034
	2001 - 5000	5809	6184
	5001 - 10 000	6059	6434
	10 001 - 20 000	6559	6934
	20 001 - 30 000	7059	7434
	30 001 - 40 000	7559	7934
	40 001 - 50 000	8059	8434

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 11 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
	50 001 - 60 000	8559	8934
	60 001 - 70 000	9059	9434
	70 001+	9559	9934
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		28 738	31 775
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		675	750
NO_OF_SDS_EXT_BLKs		9000	10 000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs			
	0 - 2000	674	693
	2001 - 5000	681	700
	5001 - 10 000	694	713
	10 001 - 20 000	719	738
	20 001 - 30 000	744	763
	30 001 - 40 000	769	788
	40 001 - 50 000	794	813
	50 001 - 60 000	819	838
	60 001 - 70 000	844	863
	70 001+	869	888
NO_TFAN_OM_REGISTERS		2047	2047

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 12 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
NOS_QUANTITY_OF_SVCS		15	15
NUM_ENGR_NWM_TRKGRP_CTRL		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		2000	2000
NUM_OF_RTEB_EXTBLKS			
	0 - 2000	160	160
	2001 - 5000	400	400
	5001 - 10 000	800	800
	10 001 - 20 000	1600	1600
	20 001 - 30 000	2400	2400
	30 001 - 40 000	3200	3200
	40 001 - 50 000	4000	4000
	50 001 - 60 000	4800	4800
	60 001 - 70 000	5000	5000
	70 001+	5000	5000
NUM_RC_EXT_BLK		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		20 000	22 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1169
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 80 001-100 000 (Sheet 13 of 13)

Parameter name	Trunk size	80 001- 90 000 lines	90 001-100 000
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

Line sizes 100 001-140 000

The following table lists the table OFCENG parameter names and preset values for line sizes 100 001-140 000. The table lists the parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 1 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
ACD_OVERFLOW_BLOCKS		4094	4094
AIN_NUM_00_PARA_EXT_BLKs			
	0 - 2000	4600	5350
	2001 - 5000	4750	5500
	5001 - 10 000	5000	5750
	10 001 - 20 000	5500	6250
	20 001 - 30 000	6000	6750
	30 001 - 40 000	6500	7250
	40 001 - 50 000	7000	7750
	50 001 - 60 000	7500	8250
	60 001 - 70 000	8000	8750
	70 001+	8500	9250
AIN_NUM_01_00_EXT_BLKs			
	0 - 2000	2300	2675
	2001 - 5000	2375	2750

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 2 of 13)

Parameter name	Trunk size	100 001- 120 000	120 001-140 000
AIN_NUM_EXT_BLKs	5001 - 10 000	2500	2875
	10 001 - 20 000	2750	3125
	20 001 - 30 000	3000	3375
	30 001 - 40 000	3250	3625
	40 001 - 50 000	3500	3875
	50 001 - 60 000	3750	4125
	60 001 - 70 000	4000	4375
	70 001+	4250	4625
AIN_NUM_PROCESSING_EXT_BLKs	0 - 2000	4600	5350
	2001 - 5000	4750	5500
	5001 - 10 000	5000	5750
	10 001 - 20 000	5500	6250
	20 001 - 30 000	6000	6750
	30 001 - 40 000	6500	7250
	40 001 - 50 000	7000	7750
	50 001 - 60 000	7500	8250
	60 001 - 70 000	8000	8750
	70 001+	8500	9250
AIN_NUM_PROCESSING_EXT_BLKs	0 - 2000	4600	5350
	2001 - 5000	4750	5500
	5001 - 10 000	5000	5750

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 3 of 13)

Parameter name	Trunk size	100 001- 120 000	120 001-140 000
	10 001 - 20 000	5500	6250
	20 001 - 30 000	6000	6750
	30 001 - 40 000	6500	7250
	40 001 - 50 000	7000	7750
	50 001 - 60 000	7500	8250
	60 001 - 70 000	8000	8750
	70 001+	8500	9250
AIN_NUM_TERM_NOTIF_EXT_BLKs			
	0 - 2000	9200	10 700
	2001 - 5000	9500	11 000
	5001 - 10 000	10 000	11 500
	10 001 - 20 000	11 000	12 500
	20 001 - 30 000	12 000	13 500
	30 001 - 40 000	13 000	14 500
	40 001 - 50 000	14 000	15 500
	50 001 - 60 000	15 000	16 500
	60 001 - 70 000	16 000	17 500
	70 001+	17 000	18 500
CFD_EXT_BLOCKS		32 767	32 767
CFW_EXT_BLOCKS		24 000	28 000
CFZ_EXT_BLOCKS		14 400	16 800
CRS_PRU_POOL1_SIZE		2000	2000
CRS_PRU_POOL2_SIZE			

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 4 of 13)

Parameter name	Trunk size	100 001- 120 000	120 001-140 000
	0 - 2000	49 918	56 706
	2001 - 5000	51 568	58 356
	5001 - 10 000	54 318	61 106
	10 001 - 20 000	59 818	66 606
	20 001 - 30 000	65 318	72 106
	30 001 - 40 000	70 818	77 606
	40 001 - 50 000	76 318	83 106
	50 001 - 60 000	81 818	88 606
	60 001 - 70 000	87 318	94 106
	70 001+	92 818	99 606
CRS_PRU_POOL3_SIZE		27 000	31 520
CRS_SUBRU_POOL1_SIZE			
	0 - 2000	54 300	63 300
	2001 - 5000	54 750	63 750
	5001 - 10 000	55 500	64 500
	10 001 - 20 000	57 000	66 000
	20 001 - 30 000	58 500	67 500
	30 001 - 40 000	60 000	69 000
	40 001 - 50 000	61 500	70 500
	50 001 - 60 000	63 000	72 000
	60 001 - 70 000	64 500	73 500
	70 001+	66 000	75 000
CRS_SUBRU_POOL2_SIZE			

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 5 of 13)

Parameter name	Trunk size	100 001- 120 000	120 001-140 000
CRS_SUBRU_POOL3_SIZE	0 - 2000	46 960	55 710
	2001 - 5000	48 650	56 400
	5001 - 10 000	49 800	57 550
	10 001 - 20 000	52 100	59 850
	20 001 - 30 000	54 400	62 150
	30 001 - 40 000	56 700	64 450
	40 001 - 50 000	59 000	66 750
	50 001 - 60 000	61 300	69 050
	60 001 - 70 000	63 600	71 350
	70 001+	65 900	73 650
CRS_SUBRU_POOL4_SIZE	0 - 2000	29 900	34 400
	2001 - 5000	30 200	34 700
	5001 - 10 000	30 700	35 200
	10 001 - 20 000	31 700	36 200
	20 001 - 30 000	32 700	37 200
	30 001 - 40 000	33 700	38 200
	40 001 - 50 000	34 700	39 200
	50 001 - 60 000	35 700	40 200
	60 001 - 70 000	36 700	41 200
	70 001+	37 700	42 200
CRS_SUBRU_POOL4_SIZE	0 - 2000	8600	8600

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 6 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
	2001 - 5000	9500	9500
	5001 - 10 000	11 000	11 000
	10 001 - 20 000	14 000	14 000
	20 001 - 30 000	17 000	17 000
	30 001 - 40 000	20 000	20 000
	40 001 - 50 000	23 000	23 000
	50 001 - 60 000	26 000	26 000
	60 001 - 70 000	29 000	29 000
	70 001+	32 000	32 000
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095	4095
EA_MF_SS7_EXT_BLOCK_COUNT		800	800
E911_NUMBER_OF_FDBS		1000	1000
KSHUNT_EXT_BLOCKS		500	500
MAX_CMAP_SESSIONS		5	5
MAX_NO_OF_TRANS_ID		16 000	16 000
MAX_NUM_WIDEBAND_CALLS		500	500
MAX_SDPOOL_NO		15	15
MAXNUCS (JNET)		1024	1024
MAXNUCS (ENET)		0	0
MAXSTS		64	64
NCCBS (JNET)			
	0 - 2000	25 200	28 080
	2001 - 5000	27 120	30 000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 7 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
NCCBS (ENET)	5001 - 10 000	30 000	32 880
	10 001 - 20 000	34 800	34 800
	20 001 - 30 000	34 800	34 800
	30 001 - 40 000	34 800	34 800
	40 001 - 50 000	34 800	34 800
	50 001 - 60 000	34 800	34 800
	60 001 - 70 000	34 800	34 800
	70 001+	34 800	34 800
	0 - 2000	34 800	34 800
	2001 - 5000	34 800	34 800
	5001 - 10 000	34 800	34 800
	10 001 - 20 000	34 800	49 200
	20 001 - 30 000	49 200	49 200
	30 001 - 40 000	49 200	49 200
	40 001 - 50 000	49 200	63 600
	50 001 - 60 000	63 600	63 600
	60 001 - 70 000	63 600	63 600
	70 001+	63 600	63 600
NO_LOCAL_COIN_EXT_BLKs		256	256
NO_OCCTS_OM_REGISTERS		2047	2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000	1000
NO_OF_FTR_CONTROL_BLKs			

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 8 of 13)

Parameter name	Trunk size	100 001- 120 000	120 001-140 000
	0 - 2000	7984	8734
	2001 - 5000	8134	8884
	5001 - 10 000	8384	9134
	10 001 - 20 000	8884	9634
	20 001 - 30 000	9384	10 134
	30 001 - 40 000	9884	10 634
	40 001 - 50 000	10 384	11 134
	50 001 - 60 000	10 884	11 634
	60 001 - 70 000	11 384	12 134
	70 001+	11 884	12 634
NO_OF_FTR_XLA_BLKs	0 - 2000	6100	6850
	2001 - 5000	6250	7000
	5001 - 10 000	6500	7250
	10 001 - 20 000	7000	7750
	20 001 - 30 000	7500	8250
	30 001 - 40 000	8000	8750
	40 001 - 50 000	8500	9250
	50 001 - 60 000	9000	9750
	60 001 - 70 000	9500	10 250
	70 001+	10 000	10 750
NO_OF_HIS_CONTROL_BLKs			
	0 - 2000	4000	4000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 9 of 13)

Parameter name	Trunk size	100 001- 120 000	120 001-140 000
NO_OF_HIS_DATA_BLKs - X1	2001 - 5000	10 000	10 000
	5001 - 10 000	20 000	20 000
	10 001 - 20 000	40 000	40 000
	20 001 - 30 000	60 000	60 000
	30 001 - 40 000	80 000	80 000
	40 001 - 50 000	100 000	100 000
	50 001 - 60 000	120 000	120 000
	60 001 - 70 000	140 000	140 000
	70 001+	160 000	160 000
NO_OF_HIS_DATA_BLKs - X2	0 - 2000	22 800	25 900
	2001 - 5000	29 100	32 200
	5001 - 10 000	39 600	42 700
	10 001 - 20 000	60 600	63 700
	20 001 - 30 000	81 600	84 700
	30 001 - 40 000	102 600	105 700
	40 001 - 50 000	123 600	126 700
	50 001 - 60 000	144 600	147 700
	60 001 - 70 000	165 600	168 700
NO_OF_HIS_DATA_BLKs - X2	70 001+	186 600	189 700
	0 - 2000	7400	8150
	2001 - 5000	11 750	12 550

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 10 of 13)

Parameter name	Trunk size	100 001- 120 000	120 001-140 000
	5001 - 10 000	19 000	19 750
	10 001 - 20 000	33 500	34 250
	20 001 - 30 000	48 000	48 750
	30 001 - 40 000	62 500	63 250
	40 001 - 50 000	77 000	77 750
	50 001 - 60 000	91 500	92 250
	60 001 - 70 000	106 000	106 750
	70 001+	120 500	121 250
NO_OF_HIS_DATA_BLKs - X3	0 - 2000	5100	5850
	2001 - 5000	6000	6750
	5001 - 10 000	7500	8250
	10 001 - 20 000	10 500	11 250
	20 001 - 30 000	13 500	14 250
	30 001 - 40 000	16 500	17 250
	40 001 - 50 000	19 500	20 250
	50 001 - 60 000	22 500	23 250
	60 001 - 70 000	25 500	26 250
	70 001+	28 500	29 250
NO_OF_LARGE_EXT_BLKs		1000	1000
NO_OF_LARGE_FTR_DATA_BLKs			
	0 - 2000	6784	7534
	2001 - 5000	6934	7684

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 11 of 13)

Parameter name	Trunk size	100 001- 120 000	120 001-140 000
	5001 - 10 000	7184	7934
	10 001 - 20 000	7684	8434
	20 001 - 30 000	8184	8934
	30 001 - 40 000	8684	9434
	40 001 - 50 000	9184	9934
	50 001 - 60 000	9684	10 434
	60 001 - 70 000	10 184	10 934
	70 001+	10 684	11 434
NO_OF_MEDIUM_EXT_BLKs		1000	1000
NO_OF_MEDIUM_FTR_DATA_BLKs		32 767	32 767
NO_OF_PVN_EXTBLK		2700	2700
NO_OF_PVN_TERM_EXTBLK		1200	1200
NO_OF_SC_EXT_BLKs		900	1050
NO_OF_SDS_EXT_BLKs		12 000	14 000
NO_OF_SMALL_EXT_BLKs		1000	1000
NO_OF_SMALL_FTR_DATA_BLKs		1200	1200
NO_OF_XLARGE_EXT_BLKs			
	0 - 2000	730	768
	2001 - 5000	738	775
	5001 - 10 000	750	788
	10 001 - 20 000	775	813
	20 001 - 30 000	800	838
	30 001 - 40 000	825	863

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 12 of 13)

Parameter name	Trunk size	100 001- 120 000	120 001-140 000
	40 001 - 50 000	850	888
	50 001 - 60 000	875	913
	60 001 - 70 000	900	938
	70 001+	925	963
NO_TFAN_OM_REGISTERS		2047	2047
NOS_QUANTITY_OF_SVCS		15	15
NUM_ENGR_NWM_TRKGRP_CTRL		255	255
NUM_IBN_IXLA_EXT_BLOCKS		1000	1000
NUM_OF_NSC_EXT_BLK		2000	2000
NUM_OF_RTEB_EXTBLKS			
	0 - 2000	160	160
	2001 - 5000	400	400
	5001 - 10 000	800	800
	10 001 - 20 000	1600	1600
	20 001 - 30 000	2400	2400
	30 001 - 40 000	3200	3200
	40 001 - 50 000	4000	4000
	50 001 - 60 000	4800	4800
	60 001 - 70 000	5000	5000
	70 001+	5000	5000
NUM_RC_EXT_BLK		1000	1000
NUMCALLPROCESSES		80	80
NUMCPWAKE		26 000	30 000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 100 001-140 000 (Sheet 13 of 13)

Parameter name	Trunk size	100 001-120 000	120 001-140 000
NUMIBNCQEXTBLK		3825	3825
NUMOHCQBQTRANSBLKS		1169	1170
NUMPERMEXT		7000	7000
OCCTS_ENHANCED_FEATURE		Y	Y
PSTN_GT_SIZE		10	10
SLE_ITEMS_IN_SEGMENT		1024	1024
SLE_MAX_SEGMENT_COUNT		2047	2047

Line sizes 140 001-160 000

The following table lists the table OFCENG parameter names and preset values for line sizes 140 001-160 000. The table lists parameter names according to trunk size, if the parameter has a trunk size.

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 1 of 13)

Parameter name	Trunk size	140 001-160 000
ACD_OVERFLOW_BLOCKS		4094
AIN_NUM_00_PARA_EXT_BLKs		
	0 - 2000	6100
	2001 - 5000	6250
	5001 - 10 000	6500
	10 001 - 20 000	7000
	20 001 - 30 000	7500
	30 001 - 40 000	8000
	40 001 - 50 000	8500
	50 001 - 60 000	9000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 2 of 13)

Parameter name	Trunk size	140 001-160 000
AIN_NUM_01_00_EXT_BLKs	60 001 - 70 000	9500
	70 001+	10 000
	0 - 2000	3050
	2001 - 5000	3125
	5001 - 10 000	3250
	10 001 - 20 000	3500
	20 001 - 30 000	3750
	30 001 - 40 000	4000
	40 001 - 50 000	4250
	50 001 - 60 000	4500
	60 001 - 70 000	4750
	70 001+	5000
AIN_NUM_EXT_BLKs	0 - 2000	6100
	2001 - 5000	6250
	5001 - 10 000	6500
	10 001 - 20 000	7000
	20 001 - 30 000	7500
	30 001 - 40 000	8000
	40 001 - 50 000	8500
	50 001 - 60 000	9000
	60 001 - 70 000	9500

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 3 of 13)

Parameter name	Trunk size	140 001-160 000
AIN_NUM_PROCESSING_EXT_BLKs	70 001+	10 000
	0 - 2000	6100
	2001 - 5000	6250
	5001 - 10 000	6500
	10 001 - 20 000	7000
	20 001 - 30 000	7500
	30 001 - 40 000	8000
	40 001 - 50 000	8500
	50 001 - 60 000	9000
	60 001 - 70 000	9500
	70 001+	10 000
AIN_NUM_TERM_NOTIF_EXT_BLKs	0 - 2000	12 200
	2 001 - 5000	12 500
	5 001 - 10 000	13 000
	10 001 - 20 000	14 000
	20 001 - 30 000	15 000
	30 001 - 40 000	16 000
	40 001 - 50 000	17 000
	50 001 - 60 000	18 000
	60 001 - 70 000	19 000
	70 001+	20 000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 4 of 13)

Parameter name	Trunk size	140 001-160 000
CFD_EXT_BLOCKS		32 767
CFW_EXT_BLOCKS		32 000
CFZ_EXT_BLOCKS		19 200
CRS_PRU_POOL1_SIZE		2000
CRS_PRU_POOL2_SIZE		
	0 - 2000	63 494
	2001 - 5000	65 144
	5001 - 10 000	67 894
	10 001 - 20 000	73 394
	20 001 - 30 000	78 894
	30 001 - 40 000	84 394
	40 001 - 50 000	89 894
	50 001 - 60 000	95 394
	60 001 - 70 000	100 894
	70 001+	106 394
CRS_PRU_POOL3_SIZE		36 000
CRS_SUBRU_POOL1_SIZE		
	0 - 2000	72 300
	2001 - 5000	72 750
	5001 - 10 000	73 500
	10 001 - 20 000	75 000
	20 001 - 30 000	76 500
	30 001 - 40 000	78 000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 5 of 13)

Parameter name	Trunk size	140 001-160 000
CRS_SUBRU_POOL2_SIZE	40 001 - 50 000	79 500
	50 001 - 60 000	81 000
	60 001 - 70 000	82 500
	70 001+	84 000
	0 - 2000	63 460
	2001 - 5000	64 150
	5001 - 10 000	65 300
	10 001 - 20 000	67 600
	20 001 - 30 000	69 900
	30 001 - 40 000	72 200
	40 001 - 50 000	74 500
	50 001 - 60 000	76 800
	60 001 - 70 000	79 100
	70 001+	81 400
CRS_SUBRU_POOL3_SIZE	0 - 2000	38 900
	2001 - 5000	39 200
	5001 - 10 000	39 700
	10 001 - 20 000	40 700
	20 001 - 30 000	41 700
	30 001 - 40 000	42 700
	40 001 - 50 000	43 700

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 6 of 13)

Parameter name	Trunk size	140 001-160 000
CRS_SUBRU_POOL4_SIZE	50 001 - 60 000	44 700
	60 001 - 70 000	45 700
	70 001+	46 700
	0 - 2000	8600
	2001 - 5000	9500
	5001 - 10 000	11 000
	10 001 - 20 000	14 000
	20 001 - 30 000	17 000
	30 001 - 40 000	20 000
	40 001 - 50 000	23 000
	50 001 - 60 000	26 000
	60 001 - 70 000	29 000
	70 001+	32 000
CUS-MER_GROUP_IBNGRP_OM_COUNT		4095
EA_MF_SS7_EXT_BLOCK_COUNT		800
E911_NUMBER_OF_FDBS		1000
KSHUNT_EXT_BLOCKS		500
MAX_CMAP_SESSIONS		5
MAX_NO_OF_TRANS_ID		16 000
MAX_NUM_WIDEBAND_CALLS		500
MAX_SDPOOL_NO		15
MAXNUCS (JNET)		1024

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 7 of 13)

Parameter name	Trunk size	140 001-160 000
MAXNUCS (ENET)		0
MAXSTS		64
NCCBS (JNET)		
	0 - 2000	30 960
	2001 - 5000	32 880
	5001 - 10 000	34 800
	10 001 - 20 000	34 800
	20 001 - 30 000	34 800
	30 001 - 40 000	34 800
	40 001 - 50 000	34 800
	50 001 - 60 000	34 800
	60 001 - 70 000	34 800
	70 001+	34 800
NCCBS (ENET)		
	0 - 2000	34 800
	2001 - 5000	34 800
	5001 - 10 000	34 800
	10 001 - 20 000	49 200
	20 001 - 30 000	49 200
	30 001 - 40 000	63 600
	40 001 - 50 000	63 600
	50 001 - 60 000	63 600
	60 001 - 70 000	63 600

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 8 of 13)

Parameter name	Trunk size	140 001-160 000
	70 001+	63 600
NO_LOCAL_COIN_EXT_BLKs		256
NO_OCCTS_OM_REGISTERS		2047
NO_OF_CRITICAL_FTR_DATA_BLKs		1000
NO_OF_FTR_CONTROL_BLKs		
	0 - 2000	9484
	2001 - 5000	9634
	5001 - 10 000	9884
	10 001 - 20 000	10 384
	20 001 - 30 000	10 884
	30 001 - 40 000	11 384
	40 001 - 50 000	11 884
	50 001 - 60 000	12 384
	60 001 - 70 000	12 884
	70 001+	13 384
NO_OF_FTR_XLA_BLKs		
	0 - 2000	7600
	2001 - 5000	7750
	5001 - 10 000	8000
	10 001 - 20 000	8500
	20 001 - 30 000	9000
	30 001 - 40 000	9500
	40 001 - 50 000	10 000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 9 of 13)

Parameter name	Trunk size	140 001-160 000
NO_OF_HIS_CONTROL_BLKs	50 001 - 60 000	10 500
	60 001 - 70 000	11 000
	70 001+	11 500
	0 - 2000	4000
	2001 - 5000	10 000
	5001 - 10 000	20 000
	10 001 - 20 000	40 000
	20 001 - 30 000	60 000
	30 001 - 40 000	80 000
	40 001 - 50 000	100 000
	50 001 - 60 000	120 000
	60 001 - 70 000	140 000
	70 001+	160 000
NO_OF_HIS_DATA_BLKs - X1	0 - 2000	29 000
	2001 - 5000	35 300
	5001 - 10 000	45 800
	10 001 - 20 000	66 800
	20 001 - 30 000	87 800
	30 001 - 40 000	108 800
	40 001 - 50 000	129 800
	50 001 - 60 000	150 800

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 10 of 13)

Parameter name	Trunk size	140 001-160 000
NO_OF_HIS_DATA_BLKs - X2	60 001 - 70 000	171 800
	70 001+	192 800
	0 - 2000	8900
	2001 - 5000	13 250
	5001 - 10 000	20 500
	10 001 - 20 000	35 000
	20 001 - 30 000	49 500
	30 001 - 40 000	64 000
	40 001 - 50 000	78 500
	50 001 - 60 000	93 000
	60 001 - 70 000	107 500
	70 001+	122 000
NO_OF_HIS_DATA_BLKs - X3	0 - 2000	6600
	2001 - 5000	7500
	5001 - 10 000	9000
	10 001 - 20 000	12 000
	20 001 - 30 000	15 000
	30 001 - 40 000	18 000
	40 001 - 50 000	21 000
	50 001 - 60 000	24 000
	60 001 - 70 000	27 000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 11 of 13)

Parameter name	Trunk size	140 001-160 000
	70 001+	30 000
NO_OF_LARGE_EXT_BLKs		1000
NO_OF_LARGE_FTR_DATA_BLKs		
	0 - 2000	8284
	2001 - 5000	8434
	5001 - 10 000	8684
	10 001 - 20 000	9184
	20 001 - 30 000	9684
	30 001 - 40 000	10 184
	40 001 - 50 000	10 684
	50 001 - 60 000	11 184
	60 001 - 70 000	11 684
	70 001+	12 184
NO_OF_MEDIUM_EXT_BLKs		1000
NO_OF_MEDIUM_FTR_DATA_BLKs		32 767
NO_OF_PVN_EXTBLK		2700
NO_OF_PVN_TERM_EXTBLK		1200
NO_OF_SC_EXT_BLKs		1200
NO_OF_SDS_EXT_BLKs		16 000
NO_OF_SMALL_EXT_BLKs		1000
NO_OF_SMALL_FTR_DATA_BLKs		1200
NO_OF_XLARGE_EXT_BLKs		
	0 - 2000	805

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (continued)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 12 of 13)

Parameter name	Trunk size	140 001-160 000
	2001 - 5000	813
	5001 - 10 000	825
	10 001 - 20 000	850
	20 001 - 30 000	875
	30 001 - 40 000	900
	40 001 - 50 000	925
	50 001 - 60 000	950
	60 001 - 70 000	975
	70 001+	1000
NO_TFAN_OM_REGISTERS		2047
NOS_QUANTITY_OF_SVCS		15
NUM_ENGR_NWM_TRKGRP_CTRL		255
NUM_IBN_IXLA_EXT_BLOCKS		1000
NUM_OF_NSC_EXT_BLK		2000
NUM_OF_RTEB_EXTBLKS		
	0 - 2000	160
	2001 - 5000	400
	5001 - 10 000	800
	10 001 - 20 000	1600
	20 001 - 30 000	2400
	30 001 - 40 000	3200
	40 001 -50 000	4000
	50 001 - 60 000	4800

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCENG (end)

Preset office parameter values for table OFCENG line sizes 140 001-160 000 (Sheet 13 of 13)

Parameter name	Trunk size	140 001-160 000
	60 001 - 70 000	5000
	70 001+	5000
NUM_RC_EXT_BLKs		1000
NUMCALLPROCESSES		80
NUMCPWAKE		32 767
NUMIBNCQEXTBLK		3825
NUMOHCQBQTRANSBLKS		1169
NUMPERMEXT		7000
OCCTS_ENHANCED_FEATURE		Y
PSTN_GT_SIZE		10
SLE_ITEMS_IN_SEGMENT		1024
SLE_MAX_SEGMENT_COUNT		2047

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCOPT

Line sizes 1-160 000

The following table lists the table OFCOPT parameter names and the preset values for line sizes 1-160 000.

Preset office parameter values for table OFCOPT line sizes 1-160 000 (Sheet 1 of 2)

Parameter name	1- 160 000 lines
ENET_MAX_CHANNEL_GROUP	3840
MAX_ACDMIS_SESSIONS	5
MAX_MBG_LINES	1000
MAX_NUM_CTX_ASSOC	32 767
MAX_NUM_ECM_ACDEVENT	32 767
MAX_NUM_ECM_CALLINIT	32 767
MAX_NUM_ECM_CTXEVENT	32 767
MAX_NUM_ECM_DNQUERY	32 767
MAX_NUM_ECM_ICCM	32 767
MAX_NUM_ECM_LINE_MAKECALL	32 767
MAX_NUM_ECM_LINE_SCAICC	32 767
MAX_NUM_ECM_LINE_SCAI3WC	32 767
MAX_NUM_ECM_LINE_SCAIMWT	32 767
MAX_NUM_ECM_RESEVENT	32 767
MAX_NUM_ECM_RESOURCE	32 767
MAX_NUM_ECM_ROUTING	32 767
MAX_NUM_ECM_SCAICC	32 767
MAX_NUM_ECM_SCAI3WC	32 767
MAX_NUM_ECM_SCAIMWTI	32 767
MAX_NUM_ECM_SVC	32 767
MAX_NUM_ECM_TPAC	32 767

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines
Table OFCOPT (end)

Preset office parameter values for table OFCOPT line sizes 1-160 000 (Sheet 2 of 2)

Parameter name	1- 160 000 lines
MAX_NUM_ECM_TPCC	32 767
MAX_NUM_ECM_TPQC	32 767
MAX_NUM_RES_ASSOC	32 767
NA_TOLL_FREE_TYPE	US_SERVICE
TFAN_ENHANCED_FEATURE	Y

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines

Table OFCVAR

Line sizes 1-160 000

The following table lists the table OFCVAR parameter names and preset values for line sizes 1-160 000.

Preset office parameter values for table OFCVAR line sizes 1-160 000

Parameter name	1- 160 000 lines
PER_OPC_LOGDEV_BUFFER_SIZE	22 000

DMS-100/200 local/toll switch with 36-100% MDC and ISDN lines
Table DATASIZE

Line sizes 1-160 000

The following table lists the table DATASIZE parameter names and the preset values for line sizes 1-160 000. The table lists the parameter names according to the trunk size, if the parameter has a trunk size.

Preset office parameter values for table DATASIZE line sizes 1-160 000

Parameter name	1-160 000 lines
AIODGRP	255
AIODMEM	255
CLLI	2048
CPOS	64
NWMAOCR	64
NWMPPLN	256
TRKGRP	2048

7 DMS-200 toll switch—U.S. only

Organization

This chapter applies to DMS-200 toll switches with preset office parameters.

This chapter divides into modules. A module is present for each of the following office parameter tables, with preset values:

- table OFCENG
- table OFCOPT
- table OFCSTD
- table OFCVAR
- table DATASIZE

Each office parameter module includes five tables grouped according to the number of trunks.

DMS-200 toll switch

Table OFCENG

Trunk sizes 0-20 000

The following table lists the table OFCENG parameter names and preset values for trunk sizes 0-20 000.

Preset office parameter values for table OFCENG trunk sizes 0-20 000 (Sheet 1 of 2)

Parameter name	0-10 000 trunks	10 001-20 000 trunks
AIN_NUM_00_PARA_EXT_BLKs	500	1000
AIN_NUM_01_00_EXT_BLKs	250	500
AIN_NUM_EXT_BLKs	500	1000
AIN_NUM_PROCESSING_EXT_BLKs	500	1500
AIN_NUM_TERM_NOTIF_EXT_BLKs	1000	2000
CRS_PRU_POOL1_SIZE	1000	1000
CRS_PRU_POOL2_SIZE	9000	17 000
CRS_PRU_POOL3_SIZE	100	100
CRS_SUBRU_POOL1_SIZE	1500	3000
CRS_SUBRU_POOL2_SIZE	3300	5600
CRS_SUBRU_POOL3_SIZE	2500	5000
CRS_SUBRU_POOL4_SIZE	6000	11 000
EA_MF_SS7_EXT_BLOCK_COUNT	800	800
MAX_NO_OF_TRANS_ID	16 000	16 000
MAXNUCS (JNET)	1024	1024
MAXNUCS (ENET)	0	0
MAX_NUM_WIDEBAND_CALLS	50	100
MAXSTS	32	32
NCCBS (JNET)	6720	11 520
NCCBS (ENET)	14 400	14 400

DMS-200 toll switch Table OFCENG (continued)

Preset office parameter values for table OFCENG trunk sizes 0-20 000 (Sheet 2 of 2)

Parameter name	0-10 000 trunks	10 001-20 000 trunks
NO_OCCTS_OM_REGISTERS	2047	2047
NO_OF_FTR_CONTROL_BLKs	884	1384
NO_OF_FTR_XLA_BLKs	500	1000
NO_OF_HIS_CONTROL_BLKs	10 250	20 500
NO_OF_HIS_DATA_BLKs - X1	21 000	42 000
NO_OF_HIS_DATA_BLKs - X2	14 000	28 000
NO_OF_HIS_DATA_BLKs - X3	3000	6000
NO_OF_LARGE_FTR_DATA_BLKs	884	1384
NO_TFAN_OM_REGISTERS	2047	2047
NOS_QUANTITY_OF_SVCS	15	15
NUM_OF_NSC_EXT_BLK	2000	2000
NUM_OF_RTEB_EXTBLKS	800	1600
NUM_RC_EXT_BLKs	1250	1500
NUMCALLPROCESSES	336	336
NUMCPWAKE	2000	2000
OCCTS_ENHANCED_FEATURE	Y	Y
PSTN_GT_SIZE	10	10

DMS-200 toll switch**Table OFCENG** (continued)**Trunk sizes 20 001-40 000**

The following table lists the table OFCENG parameter names and preset values for trunk sizes 20 001-40 000.

Preset office parameter values for table OFCENG trunk sizes 20 001-40 000 (Sheet 1 of 2)

Parameter name	20 001-30 000 trunks	30 001-40 000 trunks
AIN_NUM_00_PARA_EXT_BLKs	1500	2000
AIN_NUM_01_00_EXT_BLKs	750	1000
AIN_NUM_EXT_BLKs	1500	2000
AIN_NUM_PROCESSING_EXT_BLKs	1500	2000
AIN_NUM_TERM_NOTIF_EXT_BLKs	3000	4000
CRS_PRU_POOL1_SIZE	1000	1000
CRS_PRU_POOL2_SIZE	25 000	33 000
CRS_PRU_POOL3_SIZE	100	100
CRS_SUBRU_POOL1_SIZE	4500	6000
CRS_SUBRU_POOL2_SIZE	7900	10 200
CRS_SUBRU_POOL3_SIZE	7500	10 000
CRS_SUBRU_POOL4_SIZE	16 000	21 000
EA_MF_SS7_EXT_BLOCK_COUNT	800	800
MAX_NO_OF_TRANS_ID	16 000	16 000
MAXNUCS (JNET)	1024	1024
MAXNUCS (ENET)	0	0
MAX_NUM_WIDEBAND_CALLS	150	200
MAXSTS	32	64
NCCBS (JNET)	17 280	22 080
NCCBS (ENET)	28 800	28 800
NO_OCCTS_OM_REGISTERS	2047	2047

DMS-200 toll switch Table OFCENG (continued)

Preset office parameter values for table OFCENG trunk sizes 20 001-40 000 (Sheet 2 of 2)

Parameter name	20 001-30 000 trunks	30 001-40 000 trunks
NO_OF_FTR_CONTROL_BLKs	1884	2384
NO_OF_FTR_XLA_BLKs	1500	2000
NO_OF_HIS_CONTROL_BLKs	30 750	41 000
NO_OF_HIS_DATA_BLKs - X1	63 000	84 000
NO_OF_HIS_DATA_BLKs - X2	42 000	56 000
NO_OF_HIS_DATA_BLKs - X3	9000	12 000
NO_OF_LARGE_FTR_DATA_BLKs	1884	2384
NO_TFAN_OM_REGISTERS	2047	2047
NOS_QUANTITY_OF_SVCS	15	15
NUM_OF_NSC_EXT_BLK	2000	2000
NUM_OF_RTEB_EXTBLKS	2400	3200
NUM_RC_EXT_BLKs	1750	2000
NUMCALLPROCESSES	336	336
NUMCPWAKE	2000	2000
OCCTS_ENHANCED_FEATURE	Y	Y
PSTN_GT_SIZE	10	10

Trunk sizes 40 001-60 000

The following table lists the table OFCENG parameter names and preset values for trunk sizes 40 001-60 000.

Preset office parameter values for table OFCENG trunk sizes 40 001-60 000 (Sheet 1 of 3)

Parameter name	40 001-50 000 trunks	50 001-60 000 trunks
AIN_NUM_00_PARA_EXT_BLKs	2500	3000
AIN_NUM_01_00_EXT_BLKs	1250	1500

DMS-200 toll switch**Table OFCENG** (continued)

Preset office parameter values for table OFCENG trunk sizes 40 001-60 000 (Sheet 2 of 3)

Parameter name	40 001-50 000 trunks	50 001-60 000 trunks
AIN_NUM_EXT_BLKs	2500	3000
AIN_NUM_PROCESSING_EXT_BLKs	2500	3000
AIN_NUM_TERM_NOTIF_EXT_BLKs	5000	6000
CRS_PRU_POOL1_SIZE	2000	2000
CRS_PRU_POOL2_SIZE	41 000	49 000
CRS_PRU_POOL3_SIZE	100	100
CRS_SUBRU_POOL1_SIZE	7500	9000
CRS_SUBRU_POOL2_SIZE	12 500	14 800
CRS_SUBRU_POOL3_SIZE	12 500	15 000
CRS_SUBRU_POOL4_SIZE	27 000	32 000
EA_MF_SS7_EXT_BLOCK_COUNT	800	800
MAX_NO_OF_TRANS_ID	16 000	16 000
MAXNUCS (JNET)	1024	1024
MAXNUCS (ENET)	0	0
MAX_NUM_WIDEBAND_CALLS	250	300
MAXSTS	64	64
NCCBS (JNET)	26 880	28 800
NCCBS (ENET)	28 800	43 200
NO_OCCTS_OM_REGISTERS	2047	2047
NO_OF_FTR_CONTROL_BLKs	2884	3884
NO_OF_FTR_XLA_BLKs	2500	3000
NO_OF_HIS_CONTROL_BLKs	51 250	61 500
NO_OF_HIS_DATA_BLKs - X1	105 000	126 000

DMS-200 toll switch Table OFCENG (continued)

Preset office parameter values for table OFCENG trunk sizes 40 001-60 000 (Sheet 3 of 3)

Parameter name	40 001-50 000 trunks	50 001-60 000 trunks
NO_OF_HIS_DATA_BLKs - X2	70 000	84 000
NO_OF_HIS_DATA_BLKs - X3	15 000	18 000
NO_OF_LARGE_FTR_DATA_BLKs	2884	3384
NO_TFAN_OM_REGISTERS	2047	2047
NOS_QUANTITY_OF_SVCS	15	15
NUM_OF_NSC_EXT_BLK	2000	2000
NUM_OF_RTEB_EXTBLKS	4000	4800
NUM_RC_EXT_BLKs	2250	2500
NUMCALLPROCESSES	336	336
NUMCPWAKE	2000	2000
OCCTS_ENHANCED_FEATURE	Y	Y
PSTN_GT_SIZE	10	10

Trunk sizes 60 001-80 000

The following table lists the table OFCENG parameter names and preset values for trunk sizes 60 001-80 000.

Preset office parameter values for table OFCENG trunk sizes 60 001-80 000 (Sheet 1 of 3)

Parameter name	60 001-70 000 trunks	70 000-80 000 trunks
AIN_NUM_00_PARA_EXT_BLKs	3500	4000
AIN_NUM_01_00_EXT_BLKs	1750	2000
AIN_NUM_EXT_BLKs	3500	4000
AIN_NUM_PROCESSING_EXT_BLKs	3500	4000
AIN_NUM_TERM_NOTIF_EXT_BLKs	7000	8000
CRS_PRU_POOL1_SIZE	2000	2000

DMS-200 toll switch**Table OFCENG** (continued)

Preset office parameter values for table OFCENG trunk sizes 60 001-80 000 (Sheet 2 of 3)

Parameter name	60 001-70 000 trunks	70 000-80 000 trunks
CRS_PRU_POOL2_SIZE	57 000	65 000
CRS_PRU_POOL3_SIZE	100	100
CRS_SUBRU_POOL1_SIZE	10 500	12 000
CRS_SUBRU_POOL2_SIZE	17 100	19 400
CRS_SUBRU_POOL3_SIZE	17 500	20 000
CRS_SUBRU_POOL4_SIZE	37 000	42 000
EA_MF_SS7_EXT_BLOCK_COUNT	800	800
MAX_NO_OF_TRANS_ID	16 000	16 000
MAXNUCS (JNET)	1024	1024
MAXNUCS (ENET)	0	0
MAX_NUM_WIDEBAND_CALLS	350	400
MAXSTS	64	64
NCCBS (JNET)	28 800	28 800
NCCBS (ENET)	43 200	43 200
NO_OCCTS_OM_REGISTERS	2047	2047
NO_OF_FTR_CONTROL_BLKs	3884	4384
NO_OF_FTR_XLA_BLKs	3500	4000
NO_OF_HIS_CONTROL_BLKs	71 750	82 000
NO_OF_HIS_DATA_BLKs - X1	147 000	168 000
NO_OF_HIS_DATA_BLKs - X2	98 000	112 000
NO_OF_HIS_DATA_BLKs - X3	21 000	24 000
NO_OF_LARGE_FTR_DATA_BLKs	3384	4384
NO_TFAN_OM_REGISTERS	2047	2047

DMS-200 toll switch Table OFCENG (continued)

Preset office parameter values for table OFCENG trunk sizes 60 001-80 000 (Sheet 3 of 3)

Parameter name	60 001-70 000 trunks	70 000-80 000 trunks
NOS_QUANTITY_OF_SVCS	15	15
NUM_OF_NSC_EXT_BLK	2000	2000
NUM_OF_RTEB_EXTBLKS	5000	5000
NUM_RC_EXT_BLKs	2750	3000
NUMCALLPROCESSES	336	336
NUMCPWAKE	2000	2000
OCCTS_ENHANCED_FEATURE	Y	Y
PSTN_GT_SIZE	10	10

Trunk sizes 80 001 and higher

The following table lists the table OFCENG parameter names and preset values for trunk sizes 80 001 and higher.

Preset office parameter values for table OFCENG trunk sizes 80 001 and higher (Sheet 1 of 3)

Parameter name	80 001-90 000 trunks	90 001 and higher trunks
AIN_NUM_00_PARA_EXT_BLKs	4000	5000
AIN_NUM_01_00_EXT_BLKs	2250	2500
AIN_NUM_EXT_BLKs	4500	5000
AIN_NUM_PROCESSING_EXT_BLKs	4500	5000
AIN_NUM_TERM_NOTIF_EXT_BLKs	9000	10 000
CRS_PRU_POOL1_SIZE	2000	2000
CRS_PRU_POOL2_SIZE	73 000	81 000
CRS_PRU_POOL3_SIZE	100	100
CRS_SUBRU_POOL1_SIZE	13 500	15 000
CRS_SUBRU_POOL2_SIZE	21 700	24 000

DMS-200 toll switch**Table OFCENG** (continued)

Preset office parameter values for table OFCENG trunk sizes 80 001 and higher (Sheet 2 of 3)

Parameter name	80 001-90 000 trunks	90 001 and higher trunks
CRS_SUBRU_POOL3_SIZE	22 500	25 000
CRS_SUBRU_POOL4_SIZE	47 000	52 000
EA_MF_SS7_EXT_BLOCK_COUNT	800	800
MAX_NO_OF_TRANS_ID	16 000	16 000
MAXNUCS (JNET)	1024	1024
MAXNUCS (ENET)	0	0
MAX_NUM_WIDEBAND_CALLS	450	500
MAXSTS	64	64
NCCBS (JNET)	28 800	28 800
NCCBS (ENET)	57 600	57 600
NO_OCCTS_OM_REGISTERS	2047	2047
NO_OF_FTR_CONTROL_BLKs	4884	5384
NO_OF_FTR_XLA_BLKs	4500	5000
NO_OF_HIS_CONTROL_BLKs	92 250	102 500
NO_OF_HIS_DATA_BLKs - X1	189 000	210 000
NO_OF_HIS_DATA_BLKs - X2	126 000	140 000
NO_OF_HIS_DATA_BLKs - X3	27 000	30 000
NO_OF_LARGE_FTR_DATA_BLKs	4884	5384
NO_TFAN_OM_REGISTERS	2047	2047
NOS_QUANTITY_OF_SVCS	15	15
NUM_OF_NSC_EXT_BLK	2000	2000
NUM_OF_RTEB_EXTBLKS	5000	5000
NUM_RC_EXT_BLKs	3250	3500

DMS-200 toll switch
Table OFCENG (end)

Preset office parameter values for table OFCENG trunk sizes 80 001 and higher (Sheet 3 of 3)

Parameter name	80 001-90 000 trunks	90 001 and higher trunks
NUMCALLPROCESSES	336	336
NUMCPWAKE	2000	2000
OCCTS_ENHANCED_FEATURE	Y	Y
PSTN_GT_SIZE	10	10

DMS-200 toll switch

Table OFCOPT

Trunk sizes 0-90 000 and up

The following table lists the table OFCOPT parameter names and preset values for trunk sizes 0-90 000 and up.

Preset office parameter values for table OFCOPT trunk sizes 0-90 000 and up

Parameter name	0-90 000 and up trunks
NA_TOLL_FREE_TYPE	US_SERVICE
TFAN_ENHANCED_FEATURE	Y

DMS-200 toll switch
Table OFCSTD

Trunk sizes 0-90 000 and up

The following table lists the table OFCSTD parameter names and the preset values for trunk sizes at least 0-90 000.

Preset office parameter values for table OFCSTD trunk sizes 0-90 000 and up

Parameter name	0-90 000 and up trunks
MTCBASE_SCPD	2047

DMS-200 toll switch

Table OFCVAR

Trunk sizes 0-90 000 and up

The Table OFCVAR parameter lists the following names and preset values for trunk sizes 0-90 000 and up.

Preset office parameter values for Table OFCVAR trunks 0-90 000 and up

Parameter name	0-90 000 and up trunks
PER_OPC_LOGDEV_BUFFER_SIZE	22 000

**DMS-200 toll switch
Table DATASIZE**

Trunk sizes 0-90 000 and up

The Table DATASIZE parameter lists the following names and preset values for trunk sizes 0-90 000 and up.

Preset office parameter values for Table DATASIZE trunk sizes 0-90 000 and up

Parameter name	0-90 000 and up trunks
CLLI	2 048
CPOS	64
NWMAOCR	64
NWMPPLN	256
TRKGRP	2 048

DMS-100 Family

North American DMS-100

Office Parameters Reference Manual Volume 3 of 3
OFCVAR, Preset office parameters

Product Documentation - Dept. 3423
Nortel Networks
P.O. Box 13010
RTP, NC 27709-3010
Telephone: 1-877-662-5669
email: cits@nortelnetworks.com

Copyright © 1996-2001 Nortel Networks,
All Rights Reserved

NORTEL NETWORKS CONFIDENTIAL: The information contained herein is the property of Nortel Networks and is strictly confidential. Except as expressly authorized in writing by Nortel Networks, the holder shall keep all information contained herein confidential, shall disclose the information only to its employees with a need to know, and shall protect the information, in whole or in part, from disclosure and dissemination to third parties with the same degree of care it uses to protect its own confidential information, but with no less than reasonable care. Except as expressly authorized in writing by Nortel Networks, the holder is granted no rights to use the information contained herein.

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. Changes or modification to the DMS-100 without the express consent of Nortel Networks may void its warranty and void the user's authority to operate the equipment.

Nortel Networks, the Nortel Networks logo, the Globemark, How the World Shares Ideas, Unified Networks, DMS, DMS-100, Helmsman, MAP, Meridian, Nortel, Northern Telecom, NT, and SuperNode are trademarks of Nortel Networks.

Publication number: 297-8001-855
Product release: LEC0015 and up
Document release: Standard 14.02
Date: May 2001
Published in the United States of America

