

Part No. 312748-C Rev 00
September 2002

4655 Great America Parkway
Santa Clara, CA 95054

Installing and Maintaining the 8006 Chassis and Components



NORTEL
NETWORKS™

Copyright © 2002 Nortel Networks

All rights reserved. September 2002.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks Inc.

Trademarks

Nortel Networks, the Nortel Networks logo, the Globemark, Unified Networks, BayStack, and Passport are trademarks of Nortel Networks.

Adobe and Acrobat Reader are trademarks of Adobe Systems Incorporated.

3Com is a trademark of 3Com Corporation.

Intel is a trademark of Intel Corporation.

SanDisk is a trademark of SanDisk Corporation.

The asterisk after a name denotes a trademarked item.

Statement of conditions

In the interest of improving internal design, operational function, and/or reliability, Nortel Networks Inc. reserves the right to make changes to the products described in this document without notice.

Nortel Networks Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

International regulatory statements of conformity

This is to certify that the Nortel Networks 8000 Series chassis and components installed within the chassis were evaluated to the international regulatory standards for electromagnetic compliance (EMC) and safety and were found to have met the requirements for the following international standards:

- EMC - Electromagnetic Emissions – CISPR 22, Class A
- EMC - Electromagnetic Immunity – CISPR 24
- Electrical Safety – IEC 60950, with CB member national deviations

Further, the equipment has been certified as compliant with the national standards as detailed below.

National electromagnetic compliance (EMC) statements of compliance

FCC statement (USA only)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy. If it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to take whatever measures may be necessary to correct the interference at their own expense.

ICES statement (Canada only)

Canadian Department of Communications Radio Interference Regulations

This digital apparatus (8000 Series chassis and installed components) does not exceed the Class A limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Règlement sur le brouillage radioélectrique du ministère des Communications

Cet appareil numérique (8000 Series chassis) respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada.

CE marking statement (Europe only)

EN 55 022 statements

This is to certify that the Nortel Networks 8000 Series chassis and components installed within the chassis are shielded against the generation of radio interference in accordance with the application of Council Directive 89/336/EEC. Conformity is declared by the application of EN 55 022 Class A (CISPR 22).

Warning: This is a Class A product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take appropriate measures.

Achtung: Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

Attention: Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

EN 55 024 statement

This is to certify that the Nortel Networks 8000 Series chassis is shielded against the susceptibility to radio interference in accordance with the application of Council Directive 89/336/EEC. Conformity is declared by the application of EN 55 024 (CISPR 24).

EC Declaration of Conformity

This product conforms to the provisions of the R&TTE Directive 1999/5/EC.

VCCI statement (Japan/Nippon only)

This is a Class A product based on the standard of the Voluntary Control Council for Interference (VCCI) for information technology equipment. If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

BSMI statement (Taiwan only)

This is a Class A product based on the standard of the Bureau of Standards, Metrology and Inspection (BSMI) CNS 13438, Class A.

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

MIC notice (Republic of Korea only)

This device has been approved for use in Business applications only per the Class A requirements of the Republic of Korea Ministry of Information and Communications (MIC). This device may not be sold for use in a non-business application.



명 칭 (모 델 명) : Switch (Passport 8600)
인 증 번 호 : E-E011-02-0015 (A)
인 증 받 은 자 의 상 호 : Nortel Networks Ltd.
제 조 일 : 별도 표기
제 조 자 (제 조 국) : Nortel Networks Ltd. (미국)

National safety statements of compliance

CE marking statement (Europe only)

EN 60 950 statement

This is to certify that the Nortel Networks 8000 Series chassis and components installed within the chassis are in compliance with the requirements of EN 60 950 in accordance with the Low Voltage Directive. Additional national differences for all European Union countries have been evaluated for compliance. Some components installed within the 8000 Series chassis may use a nickel-metal hydride (NiMH) and/or lithium-ion battery. The NiMH and lithium-ion batteries are long-life batteries, and it is very possible that you will never need to replace them. However, should you need to replace them, refer to the individual component manual for directions on replacement and disposal of the battery.

NOM statement (Mexico only)

The following information is provided on the devices described in this document in compliance with the safety requirements of the Norma Oficial Mexicana (NOM):

Exporter:	Nortel Networks, Inc. 4655 Great America Parkway Santa Clara CA 95054 USA
Importer:	Nortel Networks de México, S.A. de C.V. Avenida Insurgentes Sur #1605 Piso 30, Oficina Col. San Jose Insurgentes Deleg-Benito Juarez México D.F. 03900 Tel: 52 5 480 2100 Fax: 52 5 480 2199
Input:	100 to 240 VAC, 50 to 60 Hz, 12 A max. per power supply -48 to -60 VDC, 29 A max. per power supply single supply, two supply or two + one redundant supply configurations

Información NOM (unicamente para México)

La información siguiente se proporciona en el dispositivo o en los dispositivos descritos en este documento, en cumplimiento con los requisitos de la Norma Oficial Mexicana (NOM):

Exportador:	Nortel Networks, Inc. 4655 Great America Parkway Santa Clara, CA 95054 USA
Importador:	Nortel Networks de México, S.A. de C.V. Avenida Insurgentes Sur #1605 Piso 30, Oficina Col. San Jose Insurgentes Deleg-Benito Juarez México D.F. 03900 Tel: 52 5 480 2100 Fax: 52 5 480 2199

Embarcar a: 100 to 240 V CA, 50 to 60 Hz, 12 A max. por fuente de poder
-48 to -60 V CD, 29 A max. por fuente de poder
una fuente, dos fuentes o dos + configuraciones de una fuente redundante

Nortel Networks Inc. software license agreement

This Software License Agreement (“License Agreement”) is between you, the end-user (“Customer”) and Nortel Networks Corporation and its subsidiaries and affiliates (“Nortel Networks”). PLEASE READ THE FOLLOWING CAREFULLY. YOU MUST ACCEPT THESE LICENSE TERMS IN ORDER TO DOWNLOAD AND/OR USE THE SOFTWARE. USE OF THE SOFTWARE CONSTITUTES YOUR ACCEPTANCE OF THIS LICENSE AGREEMENT. If you do not accept these terms and conditions, return the Software, unused and in the original shipping container, within 30 days of purchase to obtain a credit for the full purchase price.

“Software” is owned or licensed by Nortel Networks, its parent or one of its subsidiaries or affiliates, and is copyrighted and licensed, not sold. Software consists of machine-readable instructions, its components, data, audio-visual content (such as images, text, recordings or pictures) and related licensed materials including all whole or partial copies. Nortel Networks grants you a license to use the Software only in the country where you acquired the Software. You obtain no rights other than those granted to you under this License Agreement. You are responsible for the selection of the Software and for the installation of, use of, and results obtained from the Software.

1. Licensed Use of Software. Nortel Networks grants Customer a nonexclusive license to use a copy of the Software on only one machine at any one time or to the extent of the activation or authorized usage level, whichever is applicable. To the extent Software is furnished for use with designated hardware or Customer furnished equipment (“CFE”), Customer is granted a nonexclusive license to use Software only on such hardware or CFE, as applicable. Software contains trade secrets and Customer agrees to treat Software as confidential information using the same care and discretion Customer uses with its own similar information that it does not wish to disclose, publish or disseminate. Customer will ensure that anyone who uses the Software does so only in compliance with the terms of this Agreement. Customer shall not a) use, copy, modify, transfer or distribute the Software except as expressly authorized; b) reverse assemble, reverse compile, reverse engineer or otherwise translate the Software; c) create derivative works or modifications unless expressly authorized; or d) sublicense, rent or lease the Software. Licensors of intellectual property to Nortel Networks are beneficiaries of this provision. Upon termination or breach of the license by Customer or in the event designated hardware or CFE is no longer in use, Customer will promptly return the Software to Nortel Networks or certify its destruction. Nortel Networks may audit by remote polling or other reasonable means to determine Customer’s Software activation or usage levels. If suppliers of third party software included in Software require Nortel Networks to include additional or different terms, Customer agrees to abide by such terms provided by Nortel Networks with respect to such third party software.

2. Warranty. Except as may be otherwise expressly agreed to in writing between Nortel Networks and Customer, Software is provided “AS IS” without any warranties (conditions) of any kind. NORTEL NETWORKS DISCLAIMS ALL WARRANTIES (CONDITIONS) FOR THE SOFTWARE, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ANY WARRANTY OF NON-INFRINGEMENT. Nortel Networks is not obligated to provide support of any kind for the Software. Some jurisdictions do not allow exclusion of implied warranties, and, in such event, the above exclusions may not apply.

3. Limitation of Remedies. IN NO EVENT SHALL NORTEL NETWORKS OR ITS AGENTS OR SUPPLIERS BE LIABLE FOR ANY OF THE FOLLOWING: a) DAMAGES BASED ON ANY THIRD PARTY CLAIM; b) LOSS OF, OR DAMAGE TO, CUSTOMER’S RECORDS, FILES OR DATA; OR c) DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), WHETHER IN CONTRACT, TORT OR OTHERWISE (INCLUDING NEGLIGENCE) ARISING OUT OF YOUR USE OF THE SOFTWARE, EVEN IF NORTEL NETWORKS, ITS AGENTS OR SUPPLIERS HAVE BEEN ADVISED OF THEIR POSSIBILITY. The forgoing limitations of remedies also apply to any developer and/or supplier of the Software. Such developer and/or supplier is an intended beneficiary of this Section. Some jurisdictions do not allow these limitations or exclusions and, in such event, they may not apply.

4. General

- a)** If Customer is the United States Government, the following paragraph shall apply: All Nortel Networks Software available under this License Agreement is commercial computer software and commercial computer software documentation and, in the event Software is licensed for or on behalf of the United States Government, the respective rights to the software and software documentation are governed by Nortel Networks standard commercial license in accordance with U.S. Federal Regulations at 48 C.F.R. Sections 12.212 (for non-DoD entities) and 48 C.F.R. 227.7202 (for DoD entities).
- b)** Customer may terminate the license at any time. Nortel Networks may terminate the license if Customer fails to comply with the terms and conditions of this license. In either event, upon termination, Customer must either return the Software to Nortel Networks or certify its destruction.
- c)** Customer is responsible for payment of any taxes, including personal property taxes, resulting from Customer's use of the Software. Customer agrees to comply with all applicable laws including all applicable export and import laws and regulations.
- d)** Neither party may bring an action, regardless of form, more than two years after the cause of the action arose.
- e)** The terms and conditions of this License Agreement form the complete and exclusive agreement between Customer and Nortel Networks.
- f)** This License Agreement is governed by the laws of the country in which Customer acquires the Software. If the Software is acquired in the United States, then this License Agreement is governed by the laws of the state of New York.

Contents

Preface	21
Before you begin	21
Text conventions	21
Hard-copy technical manuals	22
How to get help	22
Chapter 1	
8006 Chassis hardware components	23
Chassis	24
Power supplies	24
Fan tray	25
Chapter 2	
8100 modules	27
8108GBIC Module	28
8116FX Module	31
8132TX Module	33
MDA slot	34
8148TX Module	36
8190SM Module	38
LEDs	39
Ethernet Management port	40
DCE/DTE switch	41
Serial ports	41
Reset button	41
PCMCIA card slot	41

Chapter 3	
8600 modules	43
8608GBE and 8608GBM Modules	46
8608GTE and 8608GTM Modules	49
8608SXE Module	51
8616GTE Module	53
8616SXE Module	55
8624FXE Module	57
8632TXE and 8632TXM Modules	59
8648TXE and 8648TXM Modules	62
8672ATME and 8672ATMM Modules	65
8681XLR Module	67
8681XLW Module	70
8683POSM Module	72
8691SF Module	74
LEDs	76
Ethernet Management port	78
DCE/DTE switch	78
Serial ports	78
Reset button	78
PCMCIA card slot	79
Chapter 4	
Installing the 8006 Chassis	81
Preparing to install the 8006 Chassis	81
Shipment contents	81
Supplying equipment	83
Management console	83
Cables	83
Hardware for mounting the chassis in an equipment rack	83
Site requirements	84
Space requirements	84
AC input electrical requirements	84
DC input electrical requirements	85
Environmental requirements	85

Installing the chassis	85
Installing the chassis on a flat surface	85
Mounting the 8006 Chassis in an equipment rack	86
Installing the cable guide	89
Chapter 5	
Installing power supplies	91
Power supplies for the 8006 Chassis	91
Removing and installing a power filler panel	93
Installing the DC power supply	95
Preparing cables	96
Installing the power supply	97
Removing the DC power supply	104
Installing the AC power supply	108
Removing the AC power supply	110
Chapter 6	
Installing 8000 Series modules and connecting equipment	113
Location of the 8000 Series modules	113
Removing and installing a filler panel	114
Removing a filler panel	114
Installing a filler panel	115
Installing and replacing a module	115
Removing a module	116
Installing a module	118
Connecting a PC or terminal to the console port	120
Connecting a network management station to the switch	121
Connecting a modem	122
Connecting communications cables to 8100 modules	123
Connecting communications cables to 8600 modules	125
Chapter 7	
Installing gigabit interface converters	129
Installing a GBIC	131
Removing a GBIC	132

Chapter 8	
Installing media dependent adapters on 8100 Modules.....	135
450 Series MDAs	136
8100-4TX MDA	138
8100 Series fiber MDAs	139
Installing an MDA on a 8100 module	140
Chapter 9	
Installing media dependent adapters on 8600 modules.....	143
8672ATME and 8672ATMM Module MDAs	144
Specifications for the 8672ATME and 8672ATMM Module MDAs	146
8683POSM Module MDAs	148
Specifications for the 8683POSM Module MDAs	150
Installing an MDA on a 8600 module	152
Replacing an MDA on a 8600 module	155
Connecting fiber cables to a 8600 module MDA	156
Connecting coaxial cables to a 8600 module MDA	159
Chapter 10	
Installing or removing the fan tray.....	161
Replacing the fan tray	162
Chapter 11	
Operating the 8000 Series switch.....	165
Turning the 8000 Series switch on and off	166
Turning DC power supplies on and off	166
Turning AC power supplies on and off	168
Verifying a successful installation	169
Initializing the 8672ATME, 8672ATMM, and 8683POSM Modules	170
Initializing the 8672ATME and 8672ATMM Modules	170
Initializing the 8683POSM Module	173
Configuring the chassis to operate in 32K or 128K Mode	176
Resetting the 8000 Series switch	177
Removing flash memory cards	177
Installing flash memory cards	178

Protecting memory card files	179
Troubleshooting	180
LED indications of problems	181
Apparent module failure	182
Module failure workaround 1	182
Module failure workaround 2	182
Failure to get a login prompt from the Console port	182
Cable connection problems	183
10BASE-T cables	183
100BASE-T cables	184
8100 Series fiber MDA cables	184
GBIC cables	184
Autonegotiation mode problems for 8100 modules	184
Appendix A	
Chassis technical specifications	187
Appendix B	
8100 module technical specifications	191
General specifications	192
8108GBIC Module	194
GBICs	195
1000BASE-SX GBIC	195
1000BASE-LX GBIC	195
1000BASE-XD GBIC	196
1000BASE-ZX GBIC	196
8116FX Module	197
8132TX Module	198
Data port connectors	198
MDAs	199
8148TX Module	201
Port connectors	201
8190SM Module	202
Management port	203
Console serial port	203
Modem serial port	204

MDI and MDI-X connections	205
Appendix C	
8600 module technical specifications	207
General specifications	208
8608GBE and 8608GBM Modules	210
GBICs	211
1000BASE-SX GBIC	211
1000BASE-LX GBIC	211
1000BASE-XD GBIC	212
1000BASE-ZX GBIC	212
8608GTE and 8608GTM Modules	214
Port connectors	215
8608SXE Module	216
8616GTE Module	217
Port connectors	217
8616SXE Module	218
8624FXE Module	219
8632TXE and 8632TXM Modules	220
8648TXE and 8648TXM Modules	221
Port connectors	221
8672ATME and 8672ATMM Modules	222
8681XLR Module	224
8681XLW Module	225
8683POSM Module	226
8691SF Module	227
Management port	228
Console serial port	228
Modem serial port	229
Index	231

Figures

Figure 1	8006 Chassis and components	23
Figure 2	8108GBIC Module	28
Figure 3	8108GBIC Module LEDs	29
Figure 4	8116FX Module	31
Figure 5	8116FX Module LEDs	32
Figure 6	8132TX Module	33
Figure 7	8132TX Module LEDs	35
Figure 8	8148TX Module	36
Figure 9	8148TX Module LEDs	37
Figure 10	8190SM Module	38
Figure 11	8190SM Module LEDs	39
Figure 12	8608GBE/8608GBM Module	46
Figure 13	8608GBE/8608GBM Module LEDs	47
Figure 14	8608GTE/8608GTM Module	50
Figure 15	8608GTE/8608GTM Module LEDs	50
Figure 16	8608SXE Module	52
Figure 17	8608SXE Module LEDs	52
Figure 18	8616GTE Module	54
Figure 19	8616GTE Module LEDs	54
Figure 20	8616SXE Module	55
Figure 21	8616SXE Module LEDs	56
Figure 22	8624FXE Module	57
Figure 23	8624FXE Module LEDs	57
Figure 24	8632TXE/8632TXM Module	60
Figure 25	8632TXE/8632TXM Module LEDs	60
Figure 26	8648TXE/8648TXM Module	63
Figure 27	8648TXE/8648TXM Module LEDs	63
Figure 28	8672ATME/8672ATMM module with an OC-12c/STM-4 MDA	65
Figure 29	8672ATME/8672ATMM Module LED	66

Figure 30	8681XLR Module	67
Figure 31	8681XLR Module LEDs	68
Figure 32	8681XLW Module	70
Figure 33	8681XLW Module LEDs	71
Figure 34	8683POSM Module with an OC-12c/STM-4 MDA	73
Figure 35	8683POSM Module LED	74
Figure 36	8691SF Module	75
Figure 37	8691SF Module LEDs	76
Figure 38	Items in the 8006 Chassis shipping container	82
Figure 39	Side rail dimensions for equipment racks	83
Figure 40	Positioning the rack-mounting brackets	87
Figure 41	Attaching the rack-mounting brackets to the chassis	87
Figure 42	Sliding the chassis into the rack	88
Figure 43	Securing the chassis to the rack	88
Figure 44	Loosening the rack-mounting screws	89
Figure 45	Sliding the cable guide onto the screws	89
Figure 46	Securing the cable guide to the chassis	90
Figure 47	Routing cables through the cable guide	90
Figure 48	8002 DC power supply	92
Figure 49	8001 Chassis AC power supply	92
Figure 50	Removing a power filler panel	94
Figure 51	Installing a power filler panel	94
Figure 52	Cable stripping requirements	96
Figure 53	DC power supply power switch	97
Figure 54	Inserting the DC power supply	98
Figure 55	DC power supply input and ground stud location	98
Figure 56	Attaching the earth ground lead to the grounding stud	100
Figure 57	Attaching the voltage leads to the power supply terminals	100
Figure 58	Replacing the plastic safety cover	101
Figure 59	Tightening the retaining screws on the DC power supply	102
Figure 60	DC power supply power switch	103
Figure 61	DC power supply power switch	104
Figure 62	Loosening the retaining screws on the DC power supply	105
Figure 63	Disconnecting the DC power supply from the backplane	105
Figure 64	Removing the plastic safety cover	106

Figure 65	Disconnecting the positive and negative voltage lead	106
Figure 66	Disconnecting the earth ground lead from the DC power supply	107
Figure 67	Removing the DC power supply from the chassis	107
Figure 68	Installing the AC power supply	108
Figure 69	Tightening the retaining screws on the AC power supply	108
Figure 70	Connecting the power cord to the AC power supply	109
Figure 71	AC power supply power switch on	109
Figure 72	AC power supply power switch off	110
Figure 73	Disconnecting the power cord from the AC power supply	110
Figure 74	Loosening the retaining screws on the AC power supply	111
Figure 75	Disconnecting the AC power supply from the chassis backplane	111
Figure 76	Location of 8000 Series modules	114
Figure 77	Removing a filler panel	115
Figure 78	Removing a 8000 Series module	117
Figure 79	Insert/extract levers in extended position	118
Figure 80	Installing a 8000 Series module	119
Figure 81	Seating the backplane connectors	119
Figure 82	Securing a 8000 Series module in the chassis	120
Figure 83	Types of GBICs	131
Figure 84	Installing a GBIC	132
Figure 85	Removing a GBIC	133
Figure 86	1000BASE-SX (shortwave gigabit) MDA front panels	136
Figure 87	1000BASE-LX (longwave gigabit) MDA front panels	137
Figure 88	8100-4TX MDA front panel	138
Figure 89	8100 Series fiber MDA front panels	139
Figure 90	Installing an MDA on the 8132TX Module	140
Figure 91	8672ATME/8672ATMM Module MDA: OC-12c/STM-4	144
Figure 92	8672ATME/8672ATMM Module MDA: OC-3c/STM-1	144
Figure 93	8672ATME/8672ATMM Module MDA: DS-3	144
Figure 94	Product label for the 8672ATME/8672ATMM Module MDA	145
Figure 95	8683POSM Module MDA: OC-12c/STM-4	149
Figure 96	8683POSM Module MDA: OC-3c/STM-1	149
Figure 97	Product label for the 8683POSM Module MDA	149
Figure 98	Removing the MDA slot cover	152
Figure 99	Aligning the MDA with the front of the module	153

Figure 100	Aligning the MDA with the mounting posts of the module	153
Figure 101	Seating the MDA on the module	153
Figure 102	Tightening the screws on the MDA	154
Figure 103	Preparing an MDA for removal	155
Figure 104	Loosening the MDA from the mounting posts	155
Figure 105	Removing the MDA from the module	156
Figure 106	OC-12c/STM-4 MDA duplex SC connector with dust cover	156
Figure 107	OC-3c/STM-1 MDA MT-RJ connector with dust cap	156
Figure 108	Removing the dust plug from an OC-12c/STM-4 MDA (SC) connector	157
Figure 109	Removing the dust plug from an OC-3c/STM-1 MDA (MT-RJ) connector	157
Figure 110	Removing the dust cap from an SC fiber cable connector	157
Figure 111	Removing the dust cap from an MT-RJ fiber cable connector	158
Figure 112	Inserting the SC cable connector into an OC-12c/STM-4 MDA	158
Figure 113	Inserting the MT-RJ cable connector into an OC-3c/STM-1 MDA	158
Figure 114	Pushing the coaxial cable onto a DS-3 connector	159
Figure 115	Fan tray	161
Figure 116	Removing the fan tray	162
Figure 117	Installing the fan tray	163
Figure 118	Fan tray LED	163
Figure 119	DC power switch	166
Figure 120	DC power switch	167
Figure 121	AC power switch in on position	168
Figure 122	AC power switch in off position	169
Figure 123	Unsuccessful download screen output	172
Figure 124	Reset button on the 8190SM Module	177
Figure 125	Reset button on the 8691SF Module	177
Figure 126	Removing a flash memory card	178
Figure 127	Inserting a flash memory card	178
Figure 128	Memory card read/write protect switch	180
Figure 129	DCE/DTE switch	183
Figure 130	MDI-X to MDI cable connections	205
Figure 131	MDI-X to MDI-X cable connections	206

Tables

Table 1	Maximum port densities for 8100 modules	28
Table 2	Passport 8108GBIC Module LEDs	30
Table 3	8116FX Module LEDs	32
Table 4	Module LEDs on the 8132TX Module	35
Table 5	8148TX Module LEDs	37
Table 6	8190SM Module LEDs	40
Table 7	Maximum port densities for 8600 modules	44
Table 8	8608GBE/8608GBM Module LEDs	48
Table 9	8608GTE/8608GTM Module LEDs	50
Table 10	8608SXE Module LEDs	53
Table 11	8616GTE Module LEDs	54
Table 12	8616SXE Module LEDs	56
Table 13	8624FXE Module LEDs	58
Table 14	8632TXE/8632TXM Module LEDs	61
Table 15	8648TXE/8648TXM Module LEDs	64
Table 16	8672ATME and 8672ATMM Modules Online LED	66
Table 17	8681XLR Module LEDs	69
Table 18	8681XLW Module LEDs	72
Table 19	8683POSM Module LED	74
Table 20	8691SF Module LEDs	76
Table 21	8006 Chassis package contents	82
Table 22	Wall receptacle requirements for AC power	84
Table 23	Environmental requirements	85
Table 24	Power supply LED	91
Table 25	Number of power supplies to install	93
Table 26	DC power supply shipping accessories	95
Table 27	Correct cable connection to the DC power supply	99
Table 28	PC and terminal parameters	121
Table 29	Modem settings	122

Table 30	Connectors and cables for 8100 modules	123
Table 31	Connectors and cables for 8600 modules	125
Table 32	In-line optical attenuators for 1000BASE-ZX and 1000BASE-XD GBICs	132
Table 33	1000BASE-SX and 1000BASE-LX MDA LEDs	137
Table 34	8100-4TX MDA LEDs	138
Table 35	8100 Series fiber MDA LEDs	139
Table 36	MDAs for the 8672ATME and 8672ATMM Modules	145
Table 37	LEDs on the 8672ATME/8672ATMM Module MDA	145
Table 38	8672ATME/8672ATMM Module MDA specifications- OC3c/STM-1 and OC-12c/STM-4	146
Table 39	OC-3c/STM-1 specifications: 8672ATME/8672ATMM Module MDA	147
Table 40	OC-12c/STM-4 specifications: 8672ATME/8672ATMM Module MDA	148
Table 41	DS-3 specifications: 8672ATME/8672ATMM Module MDA	148
Table 42	MDAs for the 8683POSM Module	149
Table 43	LEDs on the 8683POSM Module MDA	150
Table 44	8683POSM Module MDA specifications	150
Table 45	OC-3c/STM-1 specifications: 8683POSM Module MDA	151
Table 46	OC-12c/STM-4 specifications: 8683POSM Module MDA	151
Table 47	Image filenames for 8672ATME/8672ATMM/8683POSM	170
Table 48	Boot mode at startup	176
Table 49	LED problem indicators	181
Table 50	8132TX Module port pin assignments	198
Table 51	8148TX Module port pin assignments	201
Table 52	Pin assignments in the 8190SM Module Management port	203
Table 53	Pin assignments in the 8190SM Module console port	204
Table 54	DTE-to-DCE pin assignments	204
Table 55	8608GTE/8608GTM Module port pin assignments	215
Table 56	Pin assignments: 8616GTE Module port	217
Table 57	8648TXE/8648TXM Module port pin assignments	221
Table 58	Pin assignments in the 8691SF Module Management port	228
Table 59	Pin assignments in the 8691SF Module Console port	229
Table 60	DTE-to-DCE pin assignments	229

Preface

The Nortel Networks* 8006 Chassis provides the physical framework for the 8000 Series switch modules. When switch modules are installed in the chassis, the resulting network switch provides a range of data speeds and high-performance switching and routing features.

This guide provides instructions on how to install the 8006 Chassis in an equipment rack and how to install and replace fan trays, power supplies, modules, gigabit interface converters, and media dependent adapters. This guide also describes some of the routine tasks of operating the 8000 Series switch and includes technical specifications for the chassis and modules.

For a list of related publications, see the release notes that accompany your software.

Before you begin

This guide is intended for qualified service personnel who are installing the 8006 Chassis for the first time or who need to install or replace any of the customer-replaceable units (CRUs) in the chassis.

Before you install the 8006 Chassis, make sure that all network wiring has been installed on the premises using standard cable-system practices.

Text conventions

This guide uses the following text conventions:

italic text

Indicates new terms and book titles.

Hard-copy technical manuals

You can print selected technical manuals and release notes free, directly from the Internet. Go to the www.nortelnetworks.com/documentation URL. Find the product for which you need documentation. Then locate the specific category and model or version for your hardware or software product. Use Adobe* Acrobat Reader* to open the manuals and release notes, search for the sections you need, and print them on most standard printers. Go to Adobe Systems at the www.adobe.com URL to download a free copy of the Adobe Acrobat Reader.

You can purchase printed books and documentation sets from Vervante. To order printed documentation, go to Vervante at the www.vervante.com/nortel URL.

How to get help

If you purchased a service contract for your Nortel Networks product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance.

If you purchased a Nortel Networks service program, contact one of the following Nortel Networks Technical Solutions Centers:

Technical Solutions Center	Telephone
Europe, Middle East, and Africa	(33) (4) 92-966-968
North America	(800) 4NORTEL or (800) 466-7835
Asia Pacific	(61) (2) 9927-8800
China	(800) 810-5000

Additional information about the Nortel Networks Technical Solutions Centers is available from the www.nortelnetworks.com/help/contact/global URL.

An Express Routing Code (ERC) is available for many Nortel Networks products and services. When you use an ERC, your call is routed to a technical support person who specializes in supporting that product or service. To locate an ERC for your product or service, go to the <http://www130.nortelnetworks.com/cgi-bin/eserv/common/essContactUs.jsp> URL.

Chapter 1


8006 Chassis hardware components

The 8006 Chassis provides the physical enclosure for 8000 modules. When 8000 modules are installed in the chassis, the resulting switch provides high-performance switching and routing functions for the network.

The 8006 Chassis consists of a sheet metal enclosure, a backplane, a power backplane, three bays for either AC or DC power supplies, and a fan tray for cooling.

Figure 1 shows the location of customer-replaceable components in the chassis.

Figure 1 8006 Chassis and components

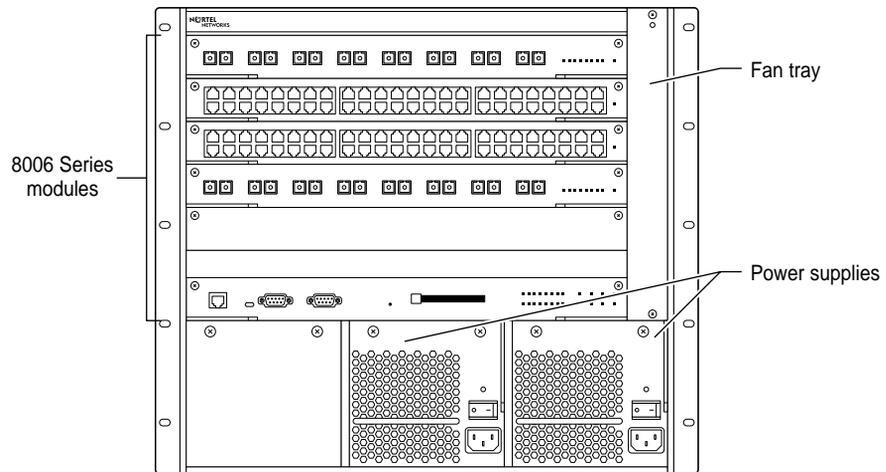

10323FB

Chassis

The 8006 Chassis provides four slots for installing I/O modules and two slots for installing either 8190SM Switch Management Modules or 8691SF Switch Fabric Modules. Slots are numbered from the top down. The top four slots allow you to install either 8100 or 8600 I/O switch modules. Slots 5 and 6 are reserved for 8000 Series switch fabric or switch management modules.

8100 modules installed in slots 1 or 2 serve as a clock source for the entire chassis. Therefore, you must install a 8100 series module in either slot 1 or 2 to avoid traffic loss.



Note: 8000 Series software Release 3.2 and later does not support configurations of 8100 modules and 8600 modules installed within the same chassis.

Power supplies

The 8006 Chassis provides three bays for power supplies. The following power supplies are available:

- 8004 AC Power Supply
- 8004 DC Power Supply

Each power supply provides 850 watts (W) of power to the switch. Two power supplies constitute a redundant power configuration for most installed module configurations in the 8006 Chassis.



Note: The 8004 AC Power Supply is derated from 850 W to 780 W maximum output @ 100-109 VAC input. See [Appendix A, “Chassis technical specifications,” on page 187](#) for additional power supply technical specifications.

Fan tray

A fan tray containing eight high-capacity, multispeed fans provides cooling for the chassis. A control/monitor circuit board in the fan tray reports temperature and fan operating status to the network management software. A green LED indicates that the fan is operating correctly.

Chapter 2

8100 modules

The 8100 modules provide a full complement of switching capabilities in a 8006 Chassis. The 8100 modules include a switch management module and input/output (I/O) modules. For CPU system redundancy, you can install two management modules. A 8006 Chassis with installed 8100 modules constitutes a 8100 Switch with distributed management and full redundancy.

The 8100 modules support different types of Ethernet interfaces with different speeds and port types, including:

- 10/100 megabit per second (Mb/s) autonegotiating twisted pair Ethernet ports
- 100 Mb/s fiber Ethernet ports
- 1000 Mb/s fiber Ethernet ports

This chapter includes the following topics:

Topic	Page
8108GBIC Module	28
8116FX Module	31
8132TX Module	33
8148TX Module	36
8190SM Module	38

Table 1 lists the maximum port densities available with each type of 8100 I/O module in the 8006 Chassis.

Table 1 Maximum port densities for 8100 modules


Module type	Port type	Maximum number of ports
8108GBIC	1000BASE-SX	32
	1000BASE-LX	32
	1000BASE-ZX	32
	1000BASE-XD	32
8116FX	100BASE-FX	64
8132TX	10BASE-T/100BASE-TX	128 ¹
8148TX	10/100 Mb/s	192

¹ Does not include ports on MDAs; for information about the MDAs, see [Chapter 8, "Installing media dependent adapters on 8100 Modules,"](#) on page 135.

8108GBIC Module

The 8108GBIC Module ([Figure 2](#)) is a 1000 Mb/s Ethernet I/O module that provides eight bays for installing any of four types of gigabit interface converters (GBICs).

Figure 2 8108GBIC Module

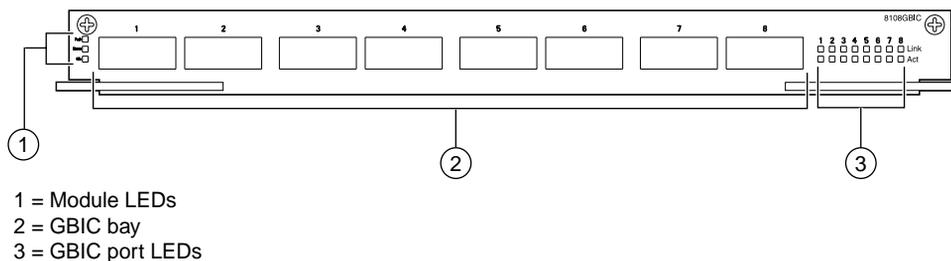

10353EA

The following four types of GBICs are available:

- 1000BASE-SX
- 1000BASE-LX
- 1000BASE-XD
- 1000BASE-ZX

The fiber ports on the GBICs allow you to make riser connection, server attachments, or interswitch links.




Note: Only GBICs qualified by Nortel Networks are supported for use in the 8108GBIC Module. For specific model numbers, refer to the Nortel Networks price list.

For more information about the GBICs and instructions to install them, see [Chapter 7, “Installing gigabit interface converters,” on page 129](#).

[Figure 3](#) shows the LEDs on the 8108GBIC Module.

Figure 3 8108GBIC Module LEDs

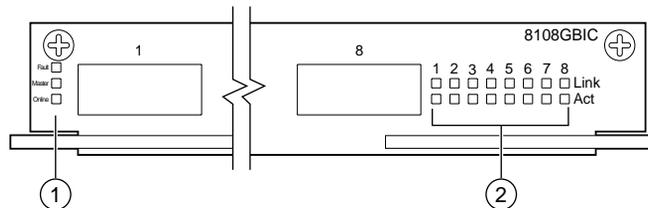

9682EA

1 = Module LEDs
2 = GBIC port Link and Activity LEDs

[Table 2](#) describes the operation of the LEDs on the 8108GBIC Module.


Table 2 Passport 8108GBIC Module LEDs

Type	Label	Color/State	Meaning
Module	Fault	Amber/Steady	A diagnostics failure or hardware failure has been detected.
		Amber/Blinking	A chassis failure has been detected.
		Off	The system is functioning normally.
	Master	Green/Steady	This module is properly generating the system clock for the switch.
		Amber/Steady	This module has detected a system clock generation failure on its own circuitry.
		Off	This module is not providing the system clock for the switch. You can pull this module out of the chassis without resetting the switch.
	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off. Or The power has been turned on, and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.
Port	Activity	Green	The port is transmitting data.
		Off	No data activity is occurring.
	Link	Green	The port has established a link and is enabled.
		Off	The port has no link.

8116FX Module

The 8116FX Module ([Figure 4](#)) is an Ethernet I/O module that provides 16 fiber optic 100 Mb/s ports that can operate in full- or half-duplex mode. The 8116FX Module includes a slot for an optional media dependent adapter (MDA) to provide other port types.

Figure 4 8116FX Module

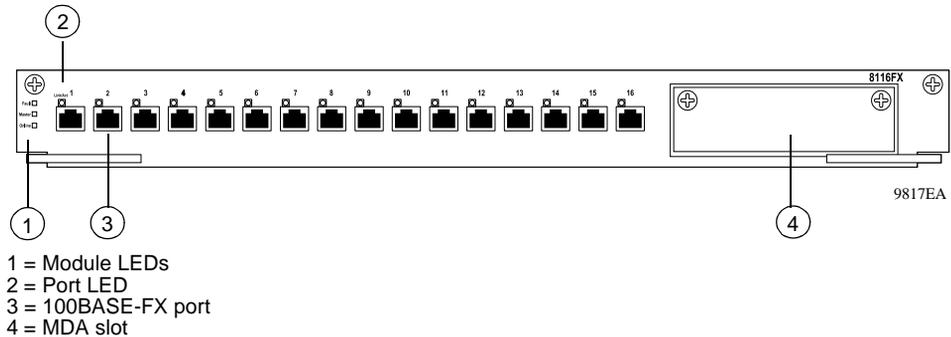

The 8116FX Module includes a slot for one of the following optional MDAs:

- 8100-4TX MDA—10BASE-T/100BASE-TX MDA (4-port copper)
- 8100-2-FX MDA—100BASE-FX MDA (2-port multimode fiber with SC connectors)
- 8100-4FX MDA—100BASE-FX MDA (4-port multimode fiber with MT-RJ connectors)
- 450-1SX MDA—1000BASE-SX MDA (1-port shortwave gigabit fiber)
- 450-1SR MDA—1000BASE-SX MDA (1-port shortwave gigabit fiber, with 1 redundant port)
- 450-1LX MDA—1000BASE-LX MDA (1-port longwave gigabit fiber)
- 450-1LR MDA—1000BASE-LX MDA (1-port longwave gigabit fiber, with 1 redundant port)

For more information about the GBICs and instructions for installing them, see [Chapter 7, “Installing gigabit interface converters,” on page 129](#).

The port connectors in the 8116FX Module are MT-RJ connectors for use with multimode fiber optic cable.

Each port on the 8116FX Module has a bicolor LED that indicates link and activity status for the port. In addition, the module has three LEDs to indicate system operating conditions (Table 3). Figure 5 shows the locations of the LEDs.

Figure 5 8116FX Module LEDs

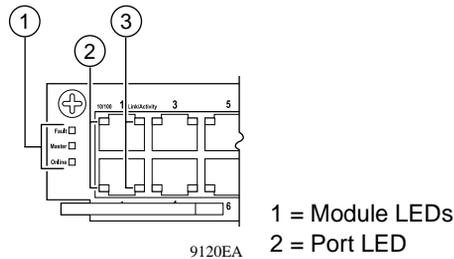


Table 3 8116FX Module LEDs

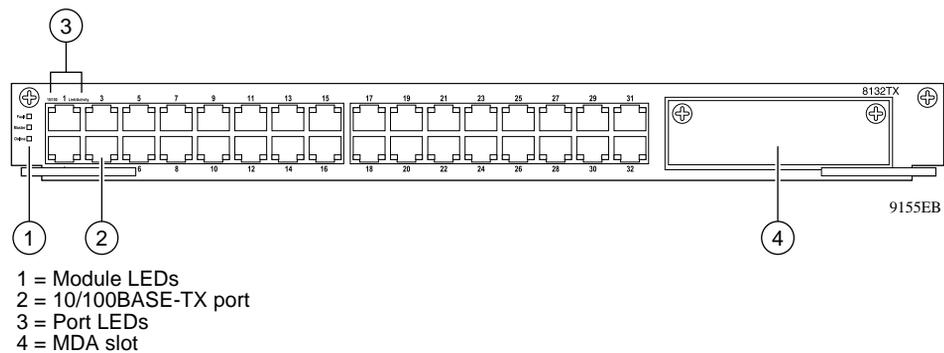
Type	Label	Color/State	Meaning
Module	Fault	Amber/Steady	A diagnostics failure or hardware failure has been detected.
		Amber/Blinking	A chassis failure has been detected.
		Off	The system is functioning normally.
	Master	Green/Steady	This module is properly generating the system clock for the switch. This LED indication is valid only when the module is installed in chassis slot 1 or 2.
		Amber/Steady	This module has detected a system clock generation failure on its own circuitry. This LED indication is valid only when the module is installed in chassis slot 1 or 2.
		Off	This module is not providing the system clock for the switch. You can pull this module out of the chassis without resetting the switch. Note: When the module is installed in any slot other than slot 1 or 2, the Master LED is always off.
	Online	Green/Steady	The module is functioning normally and is in switching mode.
		Green/Blinking	The module is running diagnostic tests.
		Amber/Steady	The module is not in switching mode. Software incompatibility exists, or the module cannot communicate with the master module over the backplane.
		Off	The module is not receiving power or is administratively disabled.

Table 3 8116FX Module LEDs (continued)

Type	Label	Color/State	Meaning
Port	Link/Act	Green/Steady	The port has established a link.
		Green/Blinking	The port has established a link and is passing traffic.
		Off	The port has no link.

8132TX Module

The 8132TX Module is an Ethernet I/O module that provides 32 autosensing 10BASE-T/100BASE-TX ports with RJ-45 connectors (Figure 6). The ports have integrated LEDs to indicate port operation, and the module has three additional LEDs to indicate system operation.

Figure 6 8132TX Module

The 8132TX Module ports support the IEEE 802.3 1998 Clause 28 autonegotiation standard. Each port can operate in full- or half-duplex mode. When a port is connected to another device that also supports the IEEE 802.3 1998 Clause 28 autonegotiation standard, the two devices negotiate the best speed and duplex mode of operation.

An expansion slot allows you to install an optional MDA to provide additional port types. You can add 10/100BASE-T, 100BASE-FX, or Gigabit Ethernet ports by installing an optional MDA. The MDAs support high-speed connections to servers, shared Fast Ethernet hubs, or backbone devices.

The port connectors are 8-pin modular RJ-45 connectors configured as MDI-X (media-dependent interface-crossover) connections. You can connect these ports to an MDI port (for example, a workstation or server) using a straight-through cable. If you are connecting a module port to a device that does not have an MDI port, use a crossover cable (see [“MDI and MDI-X connections” on page 205](#)).



Note: For 10 Mb/s connections, you can use Category 3, 4, or 5 copper unshielded twisted pair (UTP) cable. Use only Category 5 UTP cable to connect ports that will operate at 100 Mb/s.

MDA slot

The MDA slot allows you to install optional MDAs that support a range of media types. The following MDA versions are available for the 8132TX Module:

- 8100-4TX MDA—10BASE-T/100BASE-TX MDA (4-port copper)
- 8100-2FX MDA—100BASE-FX MDA (2-port multimode fiber with SC connectors)
- 8100-4FX MDA—100BASE-FX MDA (4-port multimode fiber with MT-RJ connectors)
- 450-1SX MDA—1000BASE-SX MDA (1-port shortwave gigabit fiber)
- 450-1SR MDA—1000BASE-SX MDA (1-port shortwave gigabit fiber, with 1 redundant port)
- 450-1LX MDA—1000BASE-LX MDA (1-port longwave gigabit fiber)
- 450-1LR MDA—1000BASE-LX MDA (1-port longwave gigabit fiber, with 1 redundant port)

For information about installing MDAs, see [Chapter 8, “Installing media dependent adapters on 8100 Modules,” on page 135](#).

[Figure 7](#) shows the 8132TX Module LEDs.

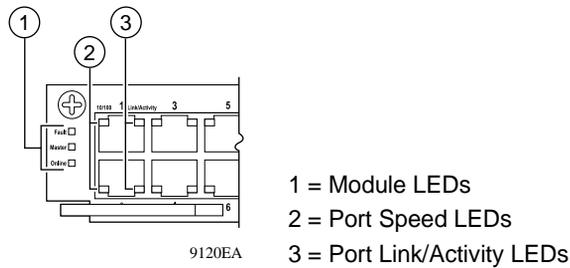
Figure 7 8132TX Module LEDs

Table 4 describes the LEDs on the 8132TX Module.


Table 4 Module LEDs on the 8132TX Module

Type	Label	Color/State	Meaning
Module	Fault	Amber/Steady	A diagnostics failure or hardware failure has been detected.
		Amber/Steady	A chassis failure has been detected.
		Off	The system is functioning normally.
	Master	Green/Steady	This module is properly generating the system clock for the switch.
		Amber/Steady	This module has detected a system clock generation failure on its own circuitry.
		Off	This module is not providing the system clock for the switch. You can pull this module out of the chassis without resetting the switch.
	Online	Green/Steady	The module is functioning normally and is in switching mode.
		Green/Blinking	The module is running diagnostic tests.
		Amber/Steady	The module is not in switching mode. Software incompatibility exists, or the module cannot communicate with the master module over the backplane.
		Off	The module is not receiving power or is administratively disabled.
Port	10/100 (speed)	Green/Steady	The port is set to operate at 100 Mb/s.
		Off	The port is set to operate at 10 Mb/s.
	Link/Activity	Green/Steady	The port has established a link.
		Green/Blinking	The port has established a link, and the port is passing traffic.
		Off	No link exists, or the port is disabled.

8148TX Module

The 8148TX Module is an Ethernet I/O module that provides 48 autonegotiating 10/100 Mb/s ports (Figure 8). Each port can operate in full- or half-duplex mode. Autonegotiation circuitry automatically negotiates the highest possible data rate and the duplex operation possible with the attached device, if the attached device supports the IEEE 802.3 1998 Clause 28 autonegotiation standard.

Figure 8 8148TX Module

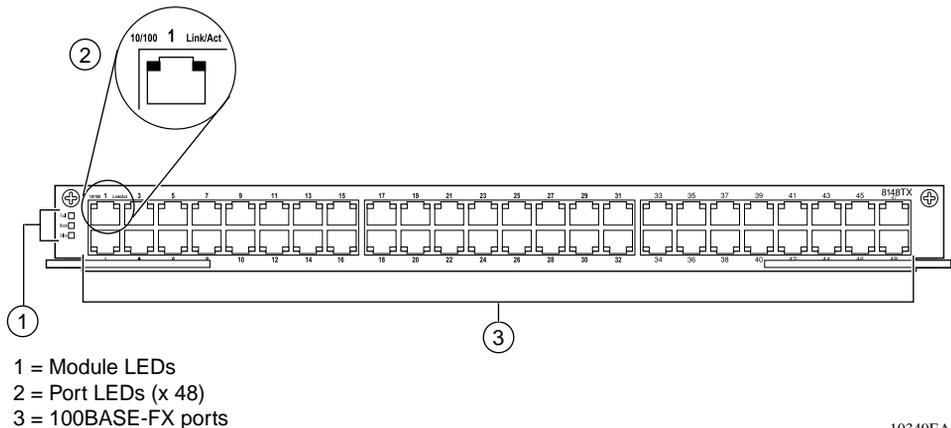

10349EA

The port connectors are modular RJ-45 connectors with MDI-X wiring. You can connect these ports can be connected to an MDI port (for example, a workstation or server) using a straight-through cable.



Note: For 10 Mb/s connections, you can use Category 3, 4, or 5 copper unshielded twisted pair (UTP) cable. Use only Category 5 UTP cable to connect ports that will operate at 100 Mb/s.

Figure 9 shows the 8148TX Module LEDs

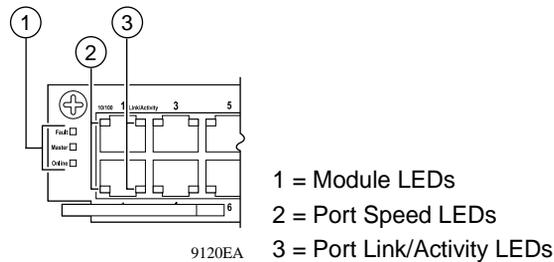
Figure 9 8148TX Module LEDs

Table 5 describes the 8148TX Module LEDs.


Table 5 8148TX Module LEDs

Type	Label	Color/State	Meaning
Module	Fault	Amber/Steady	A diagnostics failure or hardware failure has been detected.
		Amber/Blinking	A chassis failure has been detected.
		Off	The system is functioning normally.
	Master	Green/Steady	This module is properly generating the system clock for the switch.
		Amber/Steady	This module has detected a system clock generation failure on its own circuitry.
		Off	This module is not providing the system clock for the switch. You can pull this module out of the chassis without resetting the switch.
	Online	Green/Steady	The module is functioning normally and is in switching mode.
		Green/Blinking	The module is running diagnostic tests.
		Amber/Steady	The module is not in switching mode. Software incompatibility exists, or the module cannot communicate with the master module over the backplane.
		Off	The module is not receiving power or is administratively disabled.
Port	10/100 (Speed)	Green/Steady	The port is set to operate at 100 Mb/s.
		Off	The port is set to operate at 10 Mb/s.
	Link/Activity	Off	No link exists, or the port is disabled.
		Green/Steady	The port has established a link.
		Green/Blinking	The port has established a link, and the port is passing traffic.

8190SM Module

The 8190SM Module (Figure 10) provides an on-board CPU for management of the 8100 modules. The 8190SM Module fits into either slot 5 or slot 6 in the 8006 Chassis. Use this module to configure and manage all 8100 modules in the chassis.

Figure 10 8190SM Module

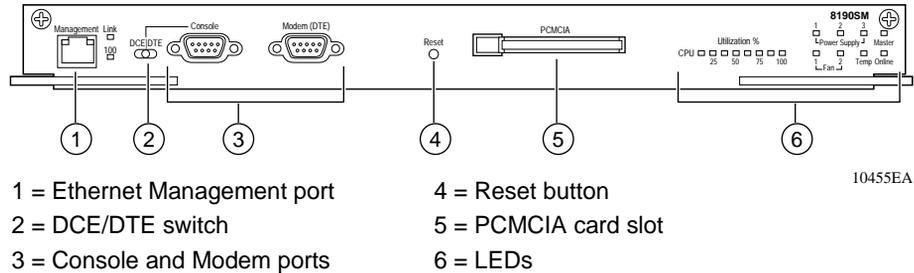

The 8190SM Module hardware features include status LEDs, a PCMCIA card slot, a Management port, a Console port, a Modem port, a Reset button, and a DCE/DTE switch for the console port.

Image, configuration, and log files are maintained on the flash memory (onboard and PCMCIA) of this module. The module also provides out-of-band management by using the Management port on the module.



Note: Nortel Networks recommends that you use the Ethernet port on the 8190SM Module instead of a switched port for connecting a network management station.

To enable redundant operation, install a 8190SM Module in both slots 5 and 6 of the chassis. If one CPU fails, control is automatically passed to the redundant 8190SM Module.

You can install the switch management module (8190SM Module) in the chassis with the switch fabric module (8691SF Module). The 8691SF Module provides layer 3 functionality for routing switch modules.




Note: 8000 Series software Release 3.2 and beyond does not support configurations of 8100 modules and 8600 modules installed within the same chassis.

LEDs

Figure 11 shows the location of the LEDs on the 8190SM module. Table 6 describes the 8190SM Module LEDs.

Figure 11 8190SM Module LEDs

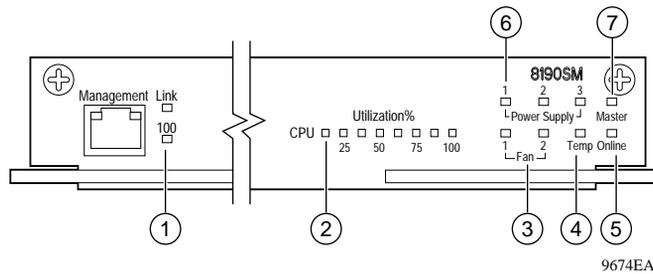

1 = Management port LEDs

2 = CPU utilization LEDs

3 = Fan LEDs

4 = Temp LED

5 = Online LED

6 = Power Supply LEDs

7 = Master LED

Table 6 8190SM Module LEDs

Label	Color/State	Meaning
Link	Green/Steady	The management port is connected, and the link is good.
	Off	There is no link to the management port.
100	Green/Steady	The management port is operating at 100 Mb/s.
	Off	The management port is operating at 10 Mb/s.
Utilization % (8 LEDs)	Green	The number of lit LEDs indicates the level of CPU activity.
Power Supply 1, 2, 3	Green/Steady	The specified power supply is operating normally.
	Amber/Steady	The specified power supply has a fault.
	Off	A power supply is not present in the specified position, or the power supply in the specified position is not turned on.
Fan 1, 2	Green/Steady	The specified fan is operating normally.
	Amber/Steady	The specified fan has failed.
Temp	Green/Steady	The temperature is normal for switch operation.
	Amber/Steady	The maximum operating temperature has been exceeded.
Master	Green/Blinking	This module is providing active CPU functions for the switch.
	Green/Steady	The CPU subsystem on this module is up and in standby mode.
	Amber/Steady	The CPU subsystem is in a fault state.
	Off	The CPU subsystem on the module is performing diagnostics.
Online	Off	This LED is always off during operation of the Passport 8190SM module.

Ethernet Management port

The Ethernet Management port on the 8190SM Module is an MDI 10/100BASE-T port that allows out-of-band management using a Web browser, Device Manager, or a Telnet session to access the CLI. You can use this port to connect the switch to a network management station. The port has its own IP address but does not switch traffic to other ports in the chassis.



Note: This port should be used only as a management port. This port provides out-of-band management for the 8190SM Module.

DCE/DTE switch

The DCE/DTE switch changes the pin assignments on the Console port and allows you to designate the connector as either DTE or DCE. For information about pin assignments for the Console port, see [“Console serial port” on page 203](#).

Serial ports

The 8190SM Module provides two serial ports for attaching modem or console devices. The Console port provides terminal access to the 8190SM Module to use the CLI. The Modem port allows you to connect a standard modem for out-of-band, dial-up management. For information about pin assignments for these ports, see [“Console serial port” on page 203](#) and [“Modem serial port” on page 204](#).

Reset button

The recessed Reset button on the module allows you to perform a hard reset or reboot of the system.

PCMCIA card slot

The 8190SM Module provides a PCMCIA card slot for use with an ATA-type SanDisk*-compatible flash memory card. This memory card provides a convenient way to store switch configurations and boot images. Using a memory card, you can quickly transfer configurations and images among multiple switches or store multiple configurations for a single switch.



Caution: You cannot use the Accelar 1200 PCMCIA card in 8000 Series equipment.

Chapter 3

8600 modules

The 8600 modules provide core routing and switching capabilities in a 8006 Chassis. The 8600 modules include a switch fabric module and input/output (I/O) modules. For CPU system redundancy, you can install two switch fabric modules. A 8006 Chassis with installed 8600 modules constitutes a 8600 Switch with distributed management and full redundancy that delivers wire-speed routing and layer 2 switching.

The 8600 modules support different types of interfaces with different speeds and port types, including:

- 10/100 megabit per second (Mb/s) autonegotiating twisted pair Ethernet ports
- 100 Mb/s fiber Ethernet ports
- 1000 Mb/s fiber Ethernet ports
- 10,000 Mb/s fiber Ethernet ports
- ATM OC-3c/STM-1, OC-12c/STM-4 and DS-3 ports
- POS OC-3c/STM-1 and OC-12c/STM-4 ports

This chapter includes the following topics:

Topic	Page
8608GBE and 8608GBM Modules	46
8608GTE and 8608GTM Modules	49
8608SXE Module	51
8616GTE Module	53
8616SXE Module	55
8624FXE Module	57
8632TXE and 8632TXM Modules	59
8648TXE and 8648TXM Modules	62

Topic	Page
8672ATME and 8672ATMM Modules	65
8681XLR Module	67
8681XLW Module	70
8683POSM Module	72
8691SF Module	74

Table 7 lists the maximum port densities available with each type of 8600 I/O module in the 8006 Chassis.

Table 7 Maximum port densities for 8600 modules

Module type	Port type	Maximum number of ports
8608GBE or 8608GBM	1000BASE-SX	32
	1000BASE-LX	32
	1000BASE-ZX	32
	1000BASE-XD	32
	1000BASE-CWDM	32
8608GTE or 8608GTM	1000BASE-T	32
8608SXE	1000BASE-SX	32
8616GTE	1000BASE-T	64
8616SXE	1000BASE-SX	64
8624FXE	100BASE-FX	96
8632TXE or 8632TXM	10BASE-T/100BASE-TX	128
	1000BASE-SX	8
	1000BASE-LX	8
	1000BASE-ZX	8
	1000BASE-XD	8
	1000BASE-CWDM	8
8648TXE or 8632TXM	10/100 Mb/s	192

Table 7 Maximum port densities for 8600 modules

Module type	Port type	Maximum number of ports
8672ATME or 8672ATMM ¹	OC-3c MDA	32
	OC-12c MDA	8
	DS-3 MDA	16
8681XLR	10GBASE-LR	4
8681XLW	10GBASE-LW	4
8683POSM ²	OC-3c MDA	24
	OC-12c MDA	12

1 For information about MDA choices for the 8672ATME and 8672ATMM Modules, see [“8672ATME and 8672ATMM Modules” on page 65](#).

2 For information about MDA choices for the 8683POSM Module, see [“8683POSM Module” on page 72](#).

Local storage of forwarding data allows the forwarding engine to resolve addresses and to forward packets through the switch fabric without CPU intervention. The forwarding engine also filters packets against current prioritization policies and can set prioritization information in the internal packet header. The backplane forwarding module is equipped with eight priority queues per port. You can use either of the following two prioritization schemes:

- Strict priority
- Weighted Round Robin (WRR)

Strict priority guarantees the highest priority. WRR gives priority based on a round robin algorithm. For more information on prioritization schemes see *Network Design Guidelines*.

Output buffer memory consists of 8 MB of memory allocated to each Gigabit Ethernet port or shared among eight 10/100 ports. For the 8681XLR and the 8681XLW Modules, output buffer memory consists of 64 MB of memory allocated to the port.

The front end of the module contains the physical layer devices, including the optical transceivers and the MAC controllers.

8608GBE and 8608GBM Modules

The 8608GBE Module is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.


The 8608GBM Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. The 8608GBM module will only operate with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module. If the chassis includes a 8690SF module, the mode defaults back to 32K mode.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

Both the 8608GBE and 8608GBM Modules (Figure 12) provide eight bays for installing any of five types of gigabit interface converters (GBICs). These fiber ports allow you to make riser connections, server attachments, or interswitch links.

Figure 12 8608GBE/8608GBM Module

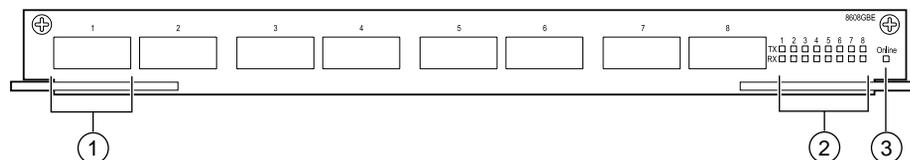

- 1 = GBIC bay
- 2 = Port link LEDs
- 3 = Module Online LED

9717EC

The following five types of GBICs are available:

- 1000BASE-CWDM
- 1000BASE-SX
- 1000BASE-LX
- 1000BASE-ZX
- 1000BASE-XD




Note: Only GBICs qualified by Nortel Networks are supported for use in the 8608GBE and 8608GBM modules. For specific model numbers, see the Nortel Networks price list.

For more information about the GBICs and instructions to install them, see [Chapter 7, “Installing gigabit interface converters,” on page 129.](#)

[Figure 13](#) shows the location of the LEDs on the 8608GBE and 8608GBM Modules.

Figure 13 8608GBE/8608GBM Module LEDs

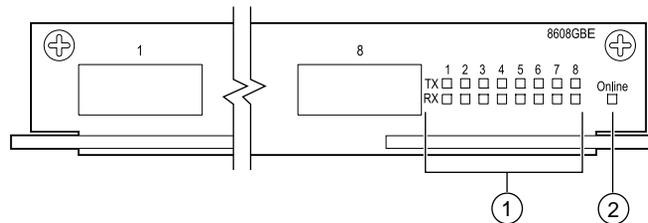

1 = Port TX and RX LEDs
2 = Module Online LED

[Table 8](#) describes the operation of the LEDs on the 8608GBE and 8608GBM Modules.

Table 8 8608GBE/8608GBM Module LEDs

Type	Label	Color/State	Meaning
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off. Or The power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.
Port	TX	Green/Blinking	The port is transmitting data.
		Amber/Steady	A fault condition exists on the line or attached remote device.
		Off	The port has not detected a fault condition.
	RX	Green/Steady	The port has established a link and is enabled.
		Green/Blinking	The port is receiving data.
		Amber/Steady	The port has either no optical signal or no link synchronization.
		Off	The port has signal but no link.

8608GTE and 8608GTM Modules

The 8608GTE Module is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.


The 8608GTM Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. The 8608GTM module will only operate with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module. If the chassis includes a 8690SF module, the mode defaults back to 32K mode.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

Both the 8608GTE and 8608GTM Modules provide eight 1000BASE-T, copper gigabit ports (Figure 14). The ports support the 802.3ab standard for autonegotiation. The ports can only operate full duplex at a rate of 1000 Mb/s. Links are established only with devices that support autonegotiated connections that meet these parameters.


Figure 14 8608GTE/8608GTM Module

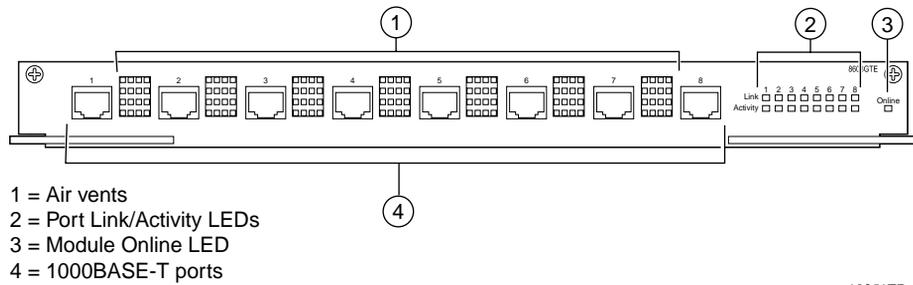

10351EB

Figure 15 shows the location of the 8608GTE and 8608GTM Module LEDs.

Figure 15 8608GTE/8608GTM Module LEDs

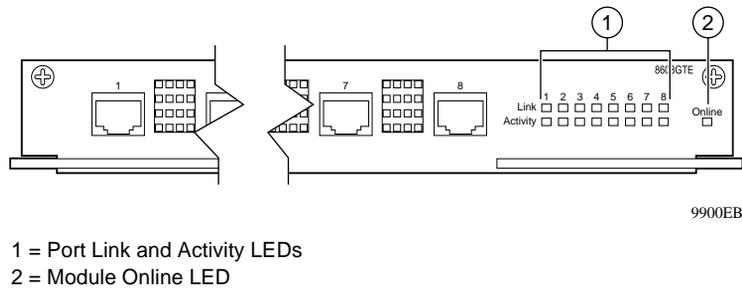

9900EB

Table 9 describes the operation of the LEDs on the 8608GTE and 8608GTM Modules.

Table 9 8608GTE/8608GTM Module LEDs

Type	Label	Color/State	Meaning
Port	Link	Off	The port is disabled or has no link.
		Green/Steady	The port has established a link and is enabled.
		Amber/Steady	This port is connected, but an error condition is detected.
	Activity	Green/Blinking	The port is receiving data. NOTE: As port utilization increases this LED may blink so fast that it appears to be steady.

Table 9 8608GTE/8608GTM Module LEDs

Type	Label	Color/State	Meaning
Module	Online	Off	The module power is off. or The power has been turned on, and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.
		Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Amber/Blinking	The module has been inserted into the chassis, and diagnostics are running.

8608SXE Module


The 8608SXE Module ([Figure 16](#)) is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.

The 8608SXE Module provides eight 1000BASE-SX (850 nm, shortwave, Gigabit Ethernet) ports for riser connections, server attachments, or interswitch links. The shortwave optical transceivers provide transmission ranges up to 260 meters (m) using 62.5 μm multimode fiber cable or up to 440 m using 50 μm multimode fiber cable.

Figure 16 8608SXE Module

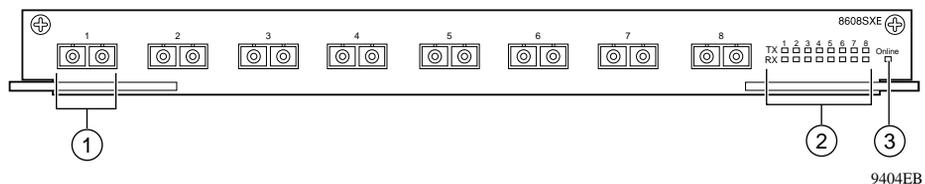


- 1 = 1000BASE-SX port
- 2 = Port TX and RX LEDs
- 3 = Module Online LED

The 8608SXE Module supports standards-based full-duplex operation only.

[Figure 17](#) shows the location of the 8608SXE Module LEDs.

Figure 17 8608SXE Module LEDs

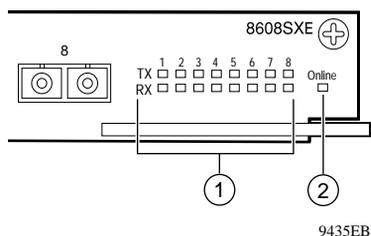

- 1 = Port TX and RX LEDs
- 2 = Module Online LED

[Table 10](#) describes the operation of the LEDs on the 8608SXE Module.

Table 10 8608SXE Module LEDs

Type	Label	Color/State	Meaning
Port	TX	Green/Blinking	The port is transmitting data.
		Amber/Steady	A fault condition exists on the line or attached remote device.
		Off	The port has not detected a fault condition.
	RX	Green/Steady	The port has link and is enabled.
		Green/Blinking	The port is receiving data.
		Amber/Steady	The port has either no optical signal or no link synchronization.
		Off	The port has signal but no link.
	Module	Online	Green/Steady
Amber/Steady			The module failed its power-on self-test.
Off			The switch power is off. or The power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.

8616GTE Module

The 8616GTE Module ([Figure 18](#)) is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.

The 8616GTE Module provides sixteen 1000BASE-T, copper gigabit ports. The ports support the 802.3ab standard for autonegotiation. The ports can only operate full duplex at a rate of 1000 Mb/s. Links are established only with devices that support autonegotiated connections that meet these parameters.

Figure 18 8616GTE Module

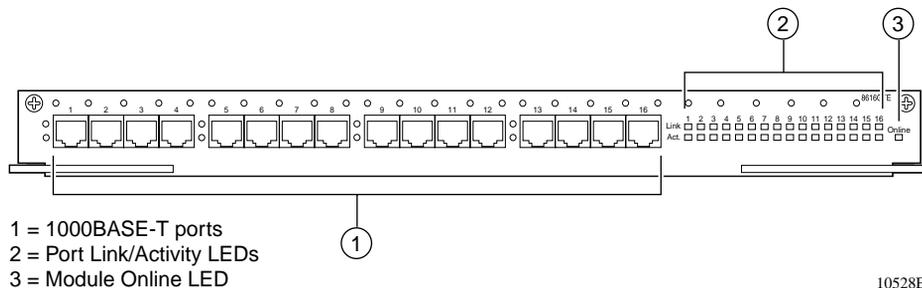


Figure 19 shows the location of the 8616GTE Module LEDs.

Figure 19 8616GTE Module LEDs

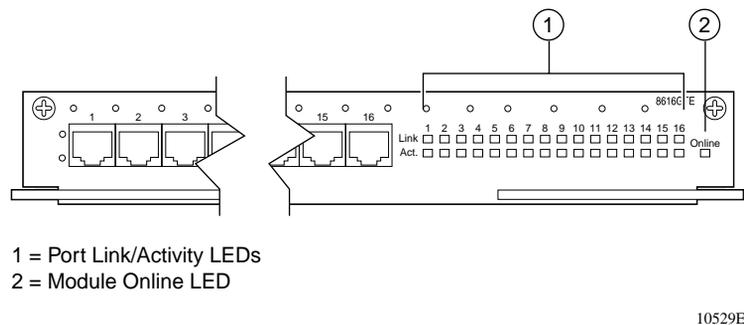


Table 11 describes the 8616GTE Module LEDs.

Table 11 8616GTE Module LEDs

Type	Label	Color/State	Meaning
Port	Link	Green/Steady	The port has established a link and is enabled.
		Amber/Steady	The port is connected, but an error condition is detected.
		Off	The port is disabled or has no link.
	Activity	Green/Blinking	The port is receiving data. NOTE: As port utilization increases this LED may blink so fast that it appears to be steady.

Table 11 8616GTE Module LEDs

Type	Label	Color/State	Meaning
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Amber/Blinking	The module has been inserted into the chassis and diagnostics are running.
		Off	The module power is off, or the power has been turned on, and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.


8616SXE Module

The 8616SXE Module (Figure 20) is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.

The 8616SXE Module (Figure 20) provides 16 1000BASE-SX ports (850 nm, short wavelength, Gigabit Ethernet) for riser connections, server attachments, or interswitch links. The shortwave optical transceivers provide transmission ranges up to 275 meters (m) using 62.5 μm multimode fiber cable or up to 550 m using 50 μm multimode fiber cable.

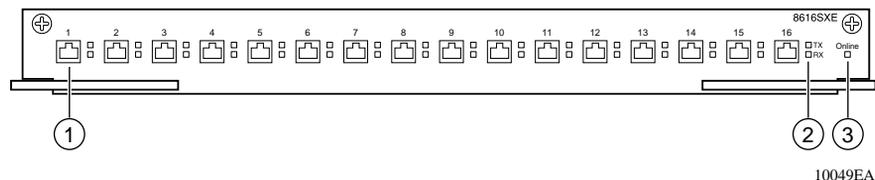
Figure 20 8616SXE Module

- 1 = 1000BASE-SX port
- 2 = Port TX and RX LEDs
- 3 = Module Online LED

The 8616SXE Module supports standards-based 1000 Mb/s full-duplex operation only.

Figure 21 shows the location of the 8616SXE Module LEDs.

Figure 21 8616SXE Module LEDs

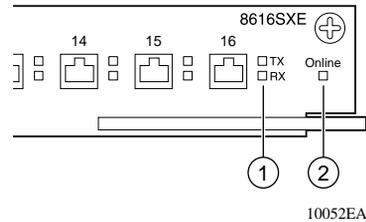

- 1 = Port TX and RX LEDs
2 = Module Online LED

Table 12 describes the operation of the 8616SXE Module LEDs.

Table 12 8616SXE Module LEDs

Type	Label	Color/State	Meaning
Port	TX	Green/Blinking	This port is transferring data.
		Off	There is no port activity.
	RX	Green/Steady	The port has established a link and is enabled.
		Green/Blinking	The port is receiving data.
		Amber/Steady	The port has either no optical signal or no link synchronization.
		Off	The port has a signal but no link.
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off. or The power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.

8624FXE Module


The 8624FXE Module (Figure 22) is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.

The 8624FXE Module provides 24 100BASE-FX ports that can operate in full-duplex mode. The optical transceivers used in the module provide transmission ranges of up to 6562 ft (2 km) using 62.5 μm multimode fiber cable.

Figure 22 8624FXE Module

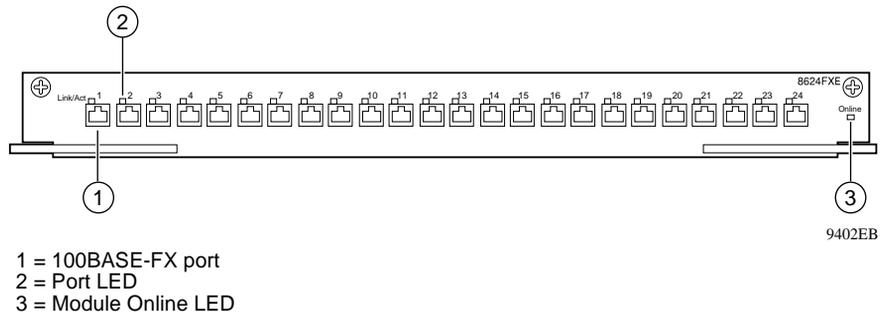

Status LEDs (Figure 23) indicate port and module operating conditions.

Figure 23 8624FXE Module LEDs

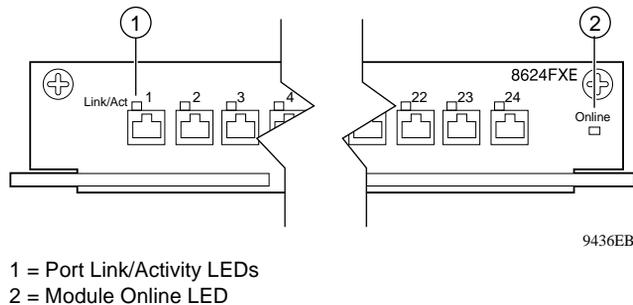


Table 13 describes the operation of the 8624FXE Module LEDs.

Table 13 8624FXE Module LEDs

Type	Label	Color/State	Meaning
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off. or The power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.
Port	Link/Act	Green/Steady	The port is connected, and the link is good.
		Green/Blinking	Data is passing through this port.
		Amber/Steady	A fault condition exists at the far end of the connection.
		Amber/Blinking	A fault condition exists at the far end of the connection, and the port is sending or receiving.
		Off	The port is not connected, or it is connected but has no link.

8632TXE and 8632TXM Modules

The 8632TXE Module is a 32K records module.




Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.

The 8632TXM Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. The 8632TXM module will only operate with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module. If the chassis includes a 8690SF module, the mode defaults back to 32K mode.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

Both the 8632TXE and the 8632TXM Modules (Figure 24) provide 32 autonegotiating 10BASE-T/100BASE-TX ports with RJ-45 connectors. In addition, two bays allow you to install 1000BASE-X gigabit interface converters (GBICs).

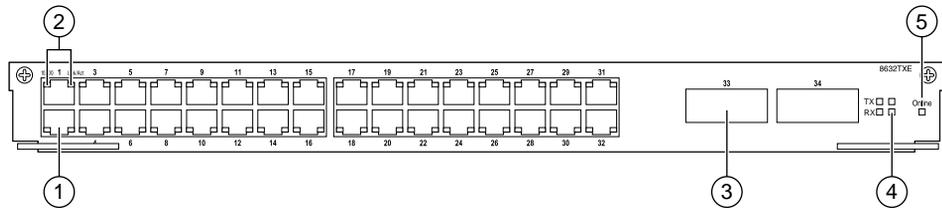
Figure 24 8632TXE/8632TXM Module

- 1 = 10/100 Mb/s port
- 2 = Port LEDs: 10/100 (speed), link/activity
- 3 = GBIC bay
- 4 = GBIC TX and RX LEDs
- 5 = Module online LED

10458EA

Both the 8632TXE and 8632TXM Module ports support the IEEE 802.3 Clause 28 autonegotiation standard. Each port can operate in full- or half-duplex mode. When a port is connected to another device that also supports the IEEE 802.3 Clause 28 autonegotiation standard, the two devices negotiate the best speed and duplex mode of operation.

[Figure 25](#) shows the location of the 8632TXE and 8632TXM Module LEDs.

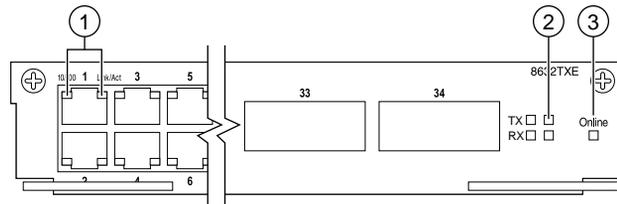Figure 25 8632TXE/8632TXM Module LEDs

- 1 = Port LEDs: 10/100 (speed), link/activity
- 2 = GBIC TX and RX LEDs
- 3 = Module online LED

10459EA

Table 14 describes the operation of the LEDs on the 8632TXE and 8632TXM Modules.

Table 14 8632TXE/8632TXM Module LEDs

Type	Label	Color/State	Meaning
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off. or The power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.
Port	10/100	Green/Steady	This port is operating at 100 Mb/s.
		Off	This port is operating at 10 Mb/s.
	Link/Act	Green/Steady	This port is connected, and the link is good.
		Green/Blinking	Data is passing through this port.
		Off	The port is disabled or has no link.
GBIC	TX	Green/Blinking	The port is transmitting data.
		Amber/Steady	A fault condition exists on the line or attached remote device.
		Off	The port has not detected a fault condition.
	RX	Green/Steady	The port has link and is enabled.
		Green/Blinking	The port is receiving data.
		Amber/Steady	The port has either no optical signal or no link synchronization.

8648TXE and 8648TXM Modules

The 8648TXE Module is a 32K records module.




Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.

The 8648TXM Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. The 8648TXM module will only operate with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module. If the chassis includes a 8690SF module, the mode defaults back to 32K mode.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

Both the 8648TXE and 8648TXM Modules (Figure 26) provide 48 autonegotiating 10/100 Mb/s ports. Each port can operate in full- or half-duplex mode. Autonegotiation circuitry automatically negotiates the highest possible data rate and the duplex operation possible with the attached device, if the attached device supports the IEEE 802.3 Clause 28 autonegotiation standard.

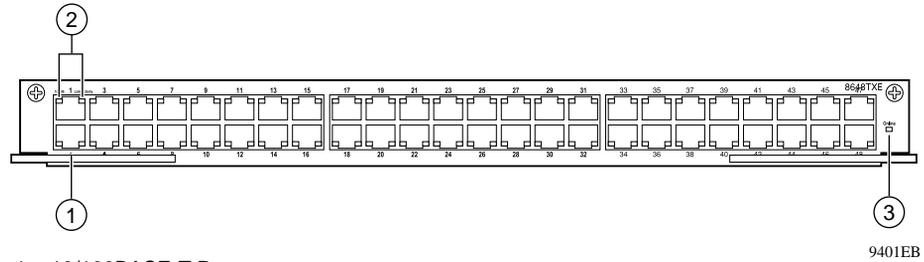Figure 26 8648TXE/8648TXM Module


- 1 = 10/100BASE-T Port
- 2 = Port LEDs: 10/100 (speed)
Link/Activity
- 3 = Module Online LED

The port connectors are modular RJ-45 connectors with MDI-X wiring. You can connect these ports to an MDI port (for example, a workstation or server) using a straight-through cable.



Note: For 10 Mb/s connections, you can use Category 3, 4, or 5 copper unshielded twisted pair (UTP) cable. Use only Category 5 UTP cable to connect ports that will operate at 100 Mb/s.

Figure 27 shows the location of the 8648TXE and 8648TXM Module LEDs.

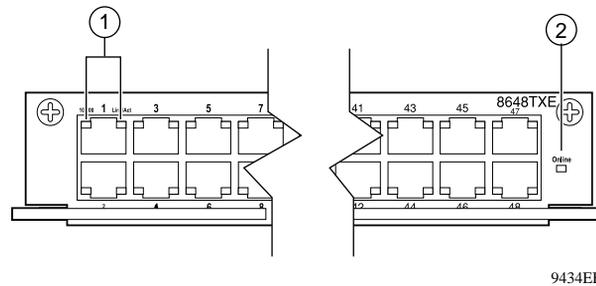Figure 27 8648TXE/8648TXM Module LEDs

- 1 = Port LEDs: 10/100 (speed)
Link/Activity
- 2 = Module Online LED

Table 15 describes the operation of the LEDs on the 8648TXE and 8648TXM Module.

Table 15 8648TXE/8648TXM Module LEDs

Type	Label	Color/State	Meaning
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off. or The power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.
Port	10/100	Green/Steady	The port is operating at 100 Mb/s.
		Off	The port is operating at 10 Mb/s.
	Link/Act	Green/Steady	The port is connected, and the link is good.
		Green/Blinking	Data is passing through this port.
		Off	The port is disabled or has no link.

8672ATME and 8672ATMM Modules

The 8672ATME Module is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.


The 8672ATMM Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. The 8672ATMM module will only operate with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module. If the chassis includes a 8690SF module, the mode defaults back to 32K mode.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

Both the 8672ATME and 8672ATMM Modules ([Figure 28](#)) have two bays for installing ATM MDAs. These MDAs provide network transmission that supports RFC 1483 routed and bridged PVCs. The 8672ATME and 8672ATMM Modules support SONET and SDH frame structures for data.

Figure 28 8672ATME/8672ATMM module with an OC-12c/STM-4 MDA

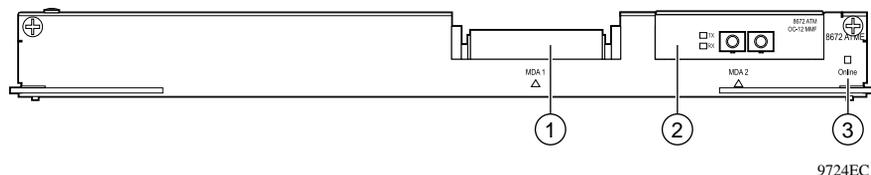

- 1 = MDA bay
2 = Installed MDA
3 = Module Online LED

The module requires at least one of the following MDAs:


- 1-port OC-12c/STM-4: SMF or MMF using the Synchronous Optical Network (SONET) or Synchronous Digital Hierarchy (SDH) media
- 4-port OC-3c/STM-1: SMF or MMF using SONET or SDH media
- 2-port DS-3

For more information about the MDAs for the 8672ATME and 8672ATMM Modules, see [Chapter 9, “Installing media dependent adapters on 8600 modules,” on page 143](#).

In the data center, the 8672ATME and 8672ATMM Modules act as an edge device for WAN connectivity to connect a 8600 Switch to public or private ATM networks. In the wiring closet, this module provides inter-building connections for campus networks where each building is supported by frame-switched networks. You can install four 8672ATME or 8672ATMM Modules in one 8006 Chassis.

An Online LED on both the 8672ATME and 8672ATMM Modules indicates overall module status ([Figure 29](#)). The MDAs have LEDs to indicate port status. For more information about these LEDs, see [Table 37 on page 145](#).

Figure 29 8672ATME/8672ATMM Module LED

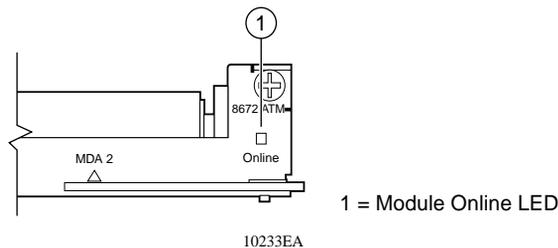

[Table 16](#) describes the Online LED for the 8672ATME and 8672ATMM Modules.

Table 16 8672ATME and 8672ATMM Modules Online LED

Color/Status	Meaning
Green	The module is receiving power and ready to receive and transmit traffic.
Amber	The module is initializing and performing diagnostic self-tests.
Off	The module is offline and not receiving power.

See *Using the 8672ATME and 8672ATMM Modules* for a description of how to configure the 8672ATME and 8672ATMM Modules using the Command Line Interface (CLI) or Device Manager.

8681XLR Module

The 8681XLR Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. This module only operates with 8000 Series software release 3.3 and later.


For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module. If the chassis includes a 8690SF module, the mode defaults back to 32K mode.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

The 8681XLR Module ([Figure 30](#)) consists of a printed circuit board with status LEDs, and one 10GBASE-LR 1310nm 10 gigabit Ethernet serial LAN port. The 10GBASE-LR port (10.3 Gb/s LAN PHY) operates in full-duplex mode and provides transmission ranges of up to 10 km using 9/125 μm single-mode fiber cable.

You can use up to four 8681XLR Modules in one 8006 Chassis.

Figure 30 8681XLR Module

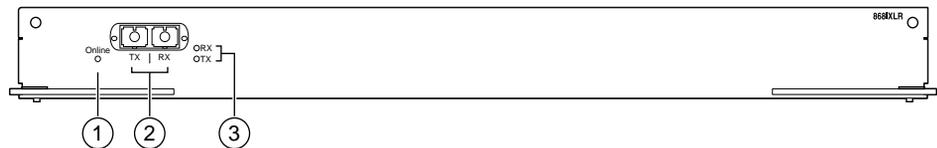

- 1 = Online LED
 2 = 10GBASE LR port
 3 = Port RX and TX LEDs


10548EA

Figure 31 shows the location of the 8681XLR Module LEDs.



Note: Unlike other 8600 Modules, the TX LED for the 8681XLR and 8681XLW Modules is located below the RX LED.

Figure 31 8681XLR Module LEDs

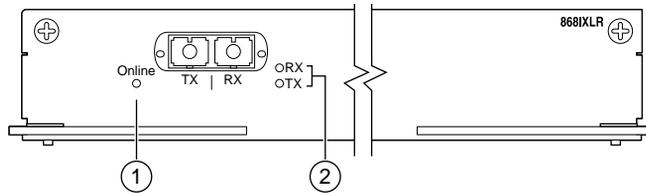

1 = Online LED
2 = Port RX and TX LEDs

10550EA

Table 17 describes the 8681XLR Module LEDs.

Table 17 8681XLR Module LEDs

Type	Label	Color/State	Meaning
Port	TX	Green/Steady	The port is enabled but not transmitting data.
		Green /Blinking	The port is transmitting data.
		Off	The port transmit is disabled.
	RX	Green/Steady	The port has a link and is enabled.
		Green/Blinking	The port is receiving data.
		Amber/Steady	The cable is disconnected, the port is disabled, or the link is down.
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module slot is disabled.
		Off	The switch power is off, or the power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.

8681XLW Module

The 8681XLW Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. This module only operates with 8000 Series software release 3.3 and later.


For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module. If the chassis includes a 8690SF module, the mode defaults back to 32K mode.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

The 8681XLW Module (Figure 32) consists of a printed circuit board with status LEDs, and one 10GBASE-LW 1310nm 10 gigabit Ethernet serial WAN port. The 10GBASE-LW port (9.95 Gb/s WAN PHY) operates in full-duplex mode and provides transmission ranges of up to 10 km using 9/125 μm single-mode fiber cable.

You can use up to four 8681XLW Modules in one 8006 Chassis.

Figure 32 8681XLW Module

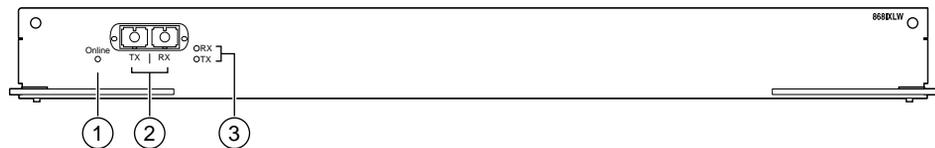


- 1 = Online LED
 2 = 10GBASE LW port
 3 = Port RX and TX LEDs

10547EA

Figure 33 shows the location of the 8681XLW Module LEDs.



Note: Unlike other 8600 Modules, the TX LED for the 8681XLR and 8681XLW Modules is located below the RX LED.

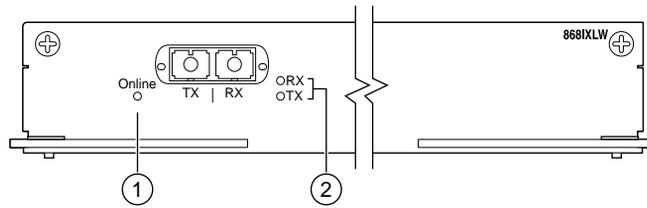Figure 33 8681XLW Module LEDs

1 = Online LED
2 = Port RX and TX LEDs

10549EA

Table 18 describes the 8681XLW Module LEDs.

Table 18 8681XLW Module LEDs

Type	Label	Color/State	Meaning
Port	TX	Green/Steady	The port is enabled but not transmitting data.
		Green/Blinking	The port is transmitting data.
		Off	The port transmit is disabled.
	RX	Green/Steady	The port has a link and is enabled.
		Green/Blinking	The port is receiving data.
		Amber/Steady	The cable is disconnected, the port is disabled, the link is down, or SONET errors are detected.
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module slot is disabled.
		Off	The switch power is off, or the power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.

8683POSM Module


The 8683POSM Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. This module only operates with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module. If the chassis includes a 8690SF module, the mode defaults back to 32K mode.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

The 8683POSM Module ([Figure 34](#)) has three bays for installing Packet over SONET (POS) MDAs. These MDAs provide WAN support to the Passport 8000 Series product line by allowing access to Synchronous Optical Network (SONET) services in the metropolitan area. Where multiple campuses exist in a single metropolitan area, you can connect these campuses without compromising performance or increasing complexity.

Figure 34 8683POSM Module with an OC-12c/STM-4 MDA

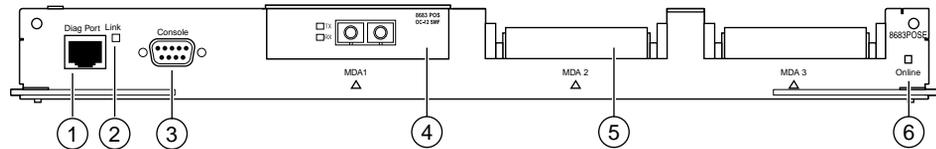

1 = Diag port 3 = Console port 5 = MDA bay
 2 = Link LED 4 = Installed MDA 6 = Online LED

10352EB

To operate, each module requires at least one of the following MDAs:


- 1-port OC-12c/STM-4: single-mode fiber or multimode fiber using SONET media
- 2-port OC-3c/STM-1: single-mode fiber or multimode fiber using SONET media

For more information about the MDAs for the 8683POSM Module, see [Chapter 9, “Installing media dependent adapters on 8600 modules,”](#) on page 143.

The 8683POSM Module supports a mixture of OC-3c/STM-1 and OC-12c/STM-4 lines. For example, you can put an OC-12c/STM-4 MDA into the first bay and OC-3c/STM-1 MDAs into the two remaining bays. This module supports up to six I/O OC-3c/STM-1 lines and up to three I/O OC-12c/STM-4 lines. You can install up to four 8683POSM Modules in one 8006 Chassis.

An Online LED indicates overall module status for the 8683POSM Module (Figure 35). The MDAs have LEDs to indicate port status. For more information about these LEDs, see Table 43 on page 150.

Figure 35 8683POSM Module LED

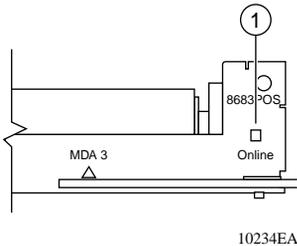

1 = Module Online LED

Table 19 describes the Online LED on the 8683POSM Module.


Table 19 8683POSM Module LED

Color/Status	Meaning
Green	The module is receiving power and ready to receive and transmit traffic.
Amber	The module is initializing and performing diagnostic self-tests.
Off	The module is offline and not receiving power.

See *Using the 8683POSM Module* for a description of how to configure the 8683POSM Module using the Command Line Interface (CLI) or Device Manager.

8691SF Module

The 8691SF Module (Figure 36) provides the core switching fabric for the 8600 Switch, as well as a CPU subsystem and a real-time clock. The core switching fabric switches all traffic through the 8600 modules. The CPU subsystem manages the switching fabric and the I/O modules.

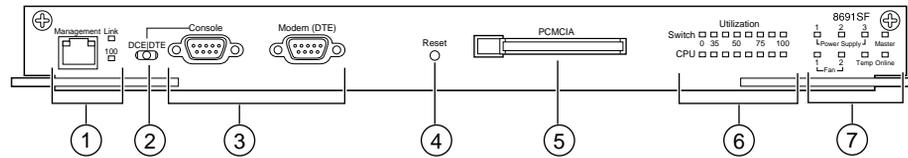Figure 36 8691SF Module

- | | |
|------------------------------|------------------------|
| 1 = Management port and LEDs | 5 = PCMCIA card slot |
| 2 = DCE/DTE switch | 6 = Utilization LEDs |
| 3 = Console and Modem ports | 7 = Module status LEDs |
| 4 = Reset button | |

10354EA



Note: To achieve maximum performance using the 8600 I/O modules, you must install two 8691SF Modules in the chassis.

The 8691SF Module fits into either slot 5 or slot 6 in the 8006 Chassis. The 8691SF Module hardware features include status LEDs, a Management port, a Console port, a Modem port, a DCE/DTE switch for the Console port, a Reset button, and a PCMCIA card slot.

The CPU subsystem uses a PowerPC CPU and 64 megabytes (MB) of synchronous dynamic random access memory (SDRAM). The 8691SF Module contains 16 MB of onboard flash memory, used to store the image file, and 2 MB of boot memory (ROM).

The routing switch fabric uses 10 MB of shared, high-speed memory. This memory buffers traffic destined for I/O modules. The switch logic allocates memory to the various switch priority queues according to traffic usage and current switch configuration.


To enable redundant operation, install a 8691SF Module in both slots 5 and 6 of the chassis. The redundant module can then assume the processing duties of a failing primary 8691SF Module. When the redundant 8691SF Module completes initialization, it relearns the routing and VLAN bridging information for the switch unless the HA-CPU flag has been enabled. In that case the static routes and ARP entries for routing are synchronized to the redundant CPU which will result in no interruption of network services.

The two Modules 8691SF share switch fabric functions for the switch. If one 8691SF Module fails, the system reverts to operation with a single 8691SF Module.

LEDs

Figure 37 shows the location of the LEDs on the 8691SF Module.

Figure 37 8691SF Module LEDs

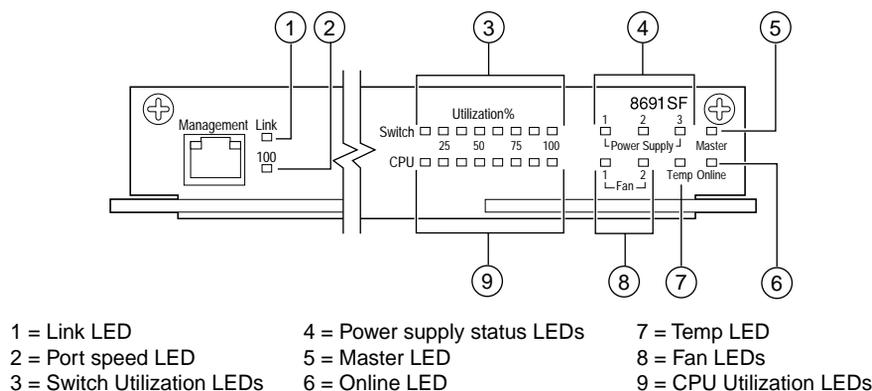

10350EA

The Switch and CPU LEDs serve as a bar graph to indicate card activity. The Switch bar graph increases as the switch fabric utilization increases. The CPU bar graph increases when the CPU is actively performing tasks, such as learning media access control (MAC) addresses, updating routing tables, or interacting with the device management station.

Table 20 describes the operation of the LEDs on the 8691SF Module.

Table 20 8691SF Module LEDs

Label	Color/State	Meaning
Link	Green/Steady	The Management port is connected, and the link is good.
	Off	There is no link to the Management port.
100	Green/Steady	The Management port is operating at 100 Mb/s.
	Off	The Management port is operating at 10 Mb/s.

Table 20 8691SF Module LEDs

Label	Color/State	Meaning
Switch Utilization (8 LEDs)	Green	The number of lit LEDs indicates the utilization level of the switch fabric as follows: 1 LED = 10 Mb/s 5 LEDs = 10 Gb/s 2 LEDs = 100 Mb/s 6 LEDs = 20 Gb/s 3 LEDs = 1 Gb/s 7 LEDs = 40 Gb/s 4 LEDs = 5 Gb/s 8 LEDs = 64 Gb/s
CPU Utilization (8 LEDs)	Green	The number of lit LEDs indicates the level of CPU activity as follows: 1 LED = 12% 5 LEDs = 60% 2 LEDs = 24% 6 LEDs = 72% 3 LEDs = 36% 7 LEDs = 84% 4 LEDs = 48% 8 LEDs = 100%
Power Supply 1, 2, 3	Green/Steady	The specified power supply is operating normally.
	Amber/Steady	The specified power supply has a fault.
	Off	A power supply is not present in the specified position, or the power supply in the specified position is not turned on.
Fan 1, 2	Green/Steady	The specified fan is operating normally.
	Amber/Steady	The specified fan has failed.
Temp	Green/Steady	The temperature is normal for switch operation.
	Amber/Steady	The maximum operating temperature has been exceeded.
Master	Green/Steady	The CPU subsystem on the module is performing diagnostics.
	Green/Blinking	This module is providing active CPU functions for the switch and is the master CPU module.
	Amber/Steady	The CPU subsystem is in a fault state.
	Off	The CPU subsystem on the module is up and in standby mode.
Online	Green/Steady	The switch fabric portion of the module is online and is load-sharing.
	Amber/Steady	The switch fabric portion of the module has failed diagnostics.
	Off	The switch fabric portion of the module is off-line.

Ethernet Management port

The Ethernet Management port on the 8691SF Module is an MDI 10/100BASE-T port that allows out-of-band management of the switch using a Web browser or Device Manager. You can also establish a Telnet or SSH (Secure Shell) session to access the CLI. You can use this port to connect the switch to a network management station. The port has its own IP address but does not participate with the switching fabric.



Note: This port should be used only as a management port. This port provides out-of-band management for the 8691SF Module.

DCE/DTE switch

The DCE/DTE switch changes the pin assignments on the Console port and allows you to designate the connector as either DTE or DCE. For information about pin assignments for the Console port, see [“Console serial port” on page 228](#).

Serial ports

The 8691SF Module provides two serial ports for attaching modem or console devices. The Console port provides terminal access to the 8691SF Module to use the CLI. The Modem port allows you to connect a standard modem for out-of-band, dial-up management. For information about pin assignments for these ports, see [“Console serial port” on page 228](#) and [“Modem serial port” on page 229](#).

Reset button

The recessed Reset button on the module allows you to perform a hard reset or reboot of the system.

PCMCIA card slot

The PCMCIA card slot on the 8691SF Module accepts an ATA-type, SanDisk-compatible flash memory card. This memory card provides a convenient way to store switch configurations and boot images. Using a memory card, you can quickly transfer configurations and images between multiple switches or store multiple configurations for a single switch.

Memory cards that will work in the 8691SF module also include the following cards:

- Modem cards that are compatible with Intel* 8250 or National 16552 serial ports
- LAN cards from 3Com* 589, 562, or 556 equipment



Caution: You cannot use the Accelar 1200 memory card in 8000 Series equipment.

Chapter 4

Installing the 8006 Chassis

This chapter describes how to install the 8006 Chassis in a standard EIA 19-inch equipment rack or on a sturdy table or shelf. The chapter includes the following topics:

Topic	Page
Preparing to install the 8006 Chassis	81
Installing the chassis	85

Preparing to install the 8006 Chassis

Before beginning the installation, verify that:

- Your shipment is complete and undamaged.
- You have the cables, tools, and other equipment that you need.
- Your installation site meets the physical, electrical, and environmental requirements described in [“Site requirements” on page 84](#).

The sections that follow provide information to help you prepare for installation.

Shipment contents

Inspect all items for shipping damage. If you detect any damage, do not install the 8006 Chassis. Call the Nortel Networks Technical Solutions Center in your area (see [“How to get help” on page 22](#)).

In addition to the 8006 Chassis, your shipping container contains several hardware accessories. Verify that the items in the shipping container match those on the shipment packing list.


Use [Table 21](#) as a checklist when verifying the contents of the shipping container.

Table 21 8006 Chassis package contents

Check	Accessory	Use To
	Bracket kit containing: <ul style="list-style-type: none"> • Two rack-mounting brackets • Flat-head screws 	Prepare chassis for installation in an equipment rack.
	Screw package	Mount the chassis in an equipment rack.
	One side cable management bracket	Manage network interface cables.
	Cable adapter	Connect an optional management console.

[Figure 38](#) illustrates the items in the 8006 Chassis shipment.

Figure 38 Items in the 8006 Chassis shipping container

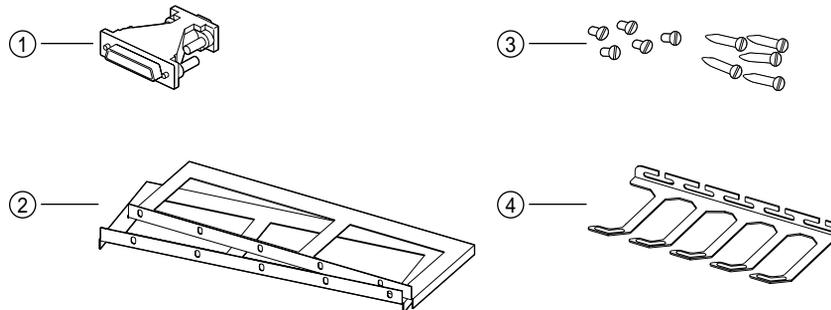

- 1 = Cable adapter
 2 = Rack mounting brackets
 3 = Screws for brackets and equipment rack
 4 = Cable guide

9416FB

Supplying equipment

You will need items that are not included in the accessory package. Before installing the hardware, make sure that you have all the cables, tools, and other equipment that you will need.

Management console

To configure startup options and to monitor the results of startup diagnostics, you can attach an optional PC, laptop, VT-100 console or equivalent, such as a PC terminal emulator. Or you can attach an AT-compatible modem to allow dial-in access to startup configuration and diagnostics.

Cables


Unless you specifically ordered them, the cables required for your network configuration are not included in the 8006 Chassis accessory package. If you do not have the proper cables, contact your network administrator.

Hardware for mounting the chassis in an equipment rack

To install the chassis in an equipment rack, you need a Phillips screwdriver and an equipment rack that meets the following specifications:

- Heavy-duty steel construction
- Electronic Industries Association (EIA) standard hole-spacing
- Rack with width of 19 in. (48.26 cm) and depth of 24 in. (60.96 cm)
- Side rail dimensions as shown in [Figure 39](#)

Figure 39 Side rail dimensions for equipment racks

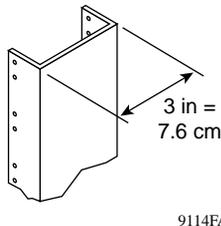

Site requirements

Ensure that the installation site meets the space, electrical, and environmental requirements listed in this section. See [Appendix A, “Chassis technical specifications,” on page 187](#) for more information.

Space requirements

The installation site must provide sufficient free space around the 8006 Chassis to ensure proper ventilation and access for servicing.


Use the following guidelines to plan front and rear access:

- The maintenance aisle in front of the frame requires a clearance of 76.2 cm (30 inches).
- The wiring aisle at the back of the frame requires a clearance of 61 cm (24 inches).

AC input electrical requirements

The installation site must meet the following wall receptacle requirements for AC power ([Table 22](#)).

Table 22 Wall receptacle requirements for AC power

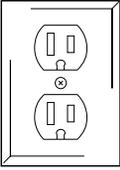Country	Receptacle	Voltage
United States and Canada	National Electrical Manufacturers Association (NEMA) 5-15P standard receptacle  10405EA	100-120 V
Any other country	For installation outside of North America, make sure that you have the proper power cord for your country.	100-240 V

DC input electrical requirements

The installation site must meet the electrical requirements for DC power as listed in [Appendix A, “Chassis technical specifications,”](#) on page 187.)

Environmental requirements

The installation site must meet the following environmental requirements (Table 23).

Table 23 Environmental requirements

Altitude	Humidity	Temperature
0-10,000 ft (0-3048 m)	5%-85%, noncondensing	32°F-104°F (0°C-40°C), stable

Installing the chassis

When you are ready to install the 8006 Chassis, you can do one of the following:

- Position the chassis on a flat, sturdy, horizontal surface.
- Mount the chassis in a standard equipment rack.



Note: To make the chassis lighter during the installation, you can remove the module filler panels (see [page 114](#)), power supply filler panels (see [page 93](#)), and the fan tray (see [page 162](#)).

Installing the chassis on a flat surface

When positioning the 8006 Chassis on a flat surface, make sure that the surface is large enough for the chassis to operate properly and sturdy enough to support the combined weight of the chassis, its components and any cables that you attach to it (170 pounds or 77 kilograms).

Mounting the 8006 Chassis in an equipment rack

To mount the 8006 Chassis in an equipment rack, you need the following equipment:

- A standard 19-inch equipment rack. If the rack does not have threaded rail holes, you must attach the cagenuts shipped with the 8006 Chassis.



Note: If you are mounting the 8006 Chassis in a 23-inch equipment rack, refer to the rack manufacturer's 19-inch-to-23-inch rack adapter installation instructions.

- Ten screws and washers (supplied with the chassis)
- A Phillips screwdriver

In a 7-foot equipment rack, you can install five 8006 Chassis.


To install the 8006 Chassis in a 19-inch equipment rack:

- 1 Hold each rack-mounting bracket against one side of the chassis (Figure 40). Make sure the attachment holes in the bracket match the holes in the chassis.




Note: Each bracket fits only one side of the chassis. If the mounting holes do not line up between a bracket and the chassis, try that bracket on the other side of the chassis.

Figure 40 Positioning the rack-mounting brackets

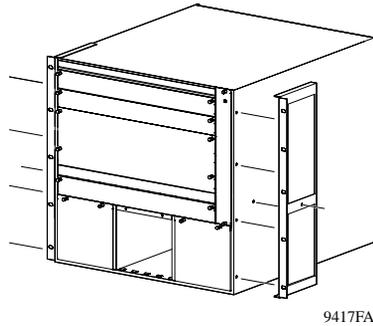

- 2 Insert and tighten the supplied flat-head screws to fasten each bracket to the chassis (Figure 41).


Figure 41 Attaching the rack-mounting brackets to the chassis

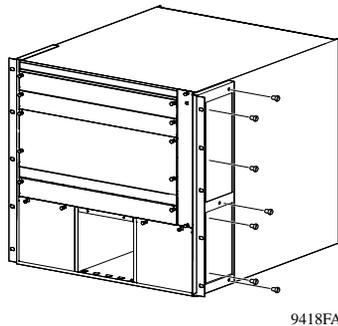

- 3 Measure 9 rack units (15.75 in.) of free vertical space inside the rack and mark the spot.

- 4 Slide the chassis into the rack (Figure 42).


Figure 42 Sliding the chassis into the rack

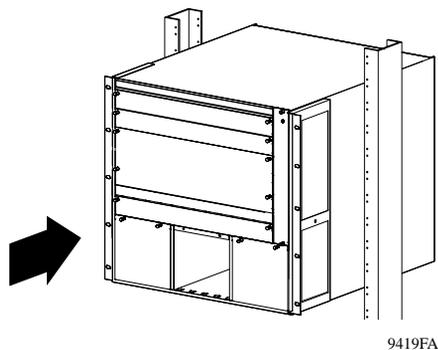

- 5 Holding the chassis in position, align the flanged end of each mounting bracket with two holes on each side of the vertical rack support.

- 6 Insert and tighten the rack-mounting screws (Figure 43).

Figure 43 Securing the chassis to the rack

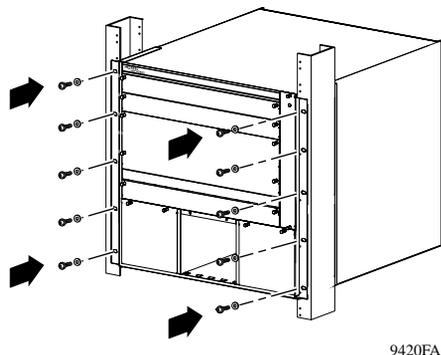


Installing the cable guide

The cable guide keeps cable clusters fastened and out of the way but still accessible for maintenance. Attach the cable guide to the left side of the chassis so that the bundled cables will not obstruct airflow to the right side of the chassis.

To install the cable guide:

- 1 Loosen, but do not remove, the rack-mounting screws needed to install the cable guide (Figure 44).


Figure 44 Loosening the rack-mounting screws

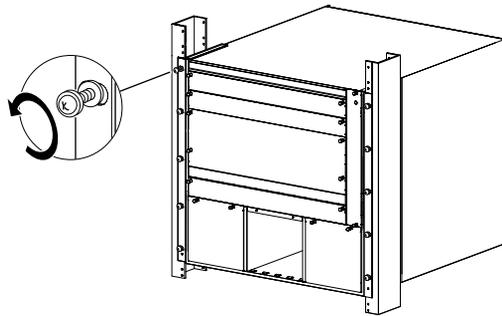

9421FA

- 2 Slide the guide onto the loosened screws (Figure 45).


Figure 45 Sliding the cable guide onto the screws

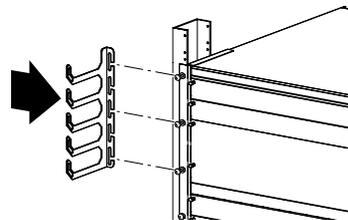

9106FA

- 3 Tighten the screws to secure the guide to the chassis (Figure 46).


Figure 46 Securing the cable guide to the chassis

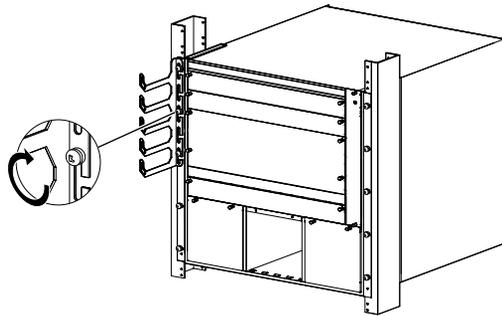

9422FA

- 4 When you connect cables to installed modules in the chassis, route them through the cable guide (Figure 47).

Figure 47 Routing cables through the cable guide

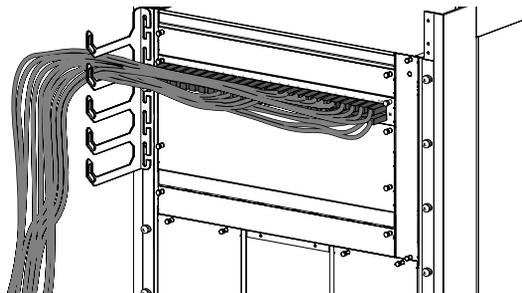

9573FA

Chapter 5

Installing power supplies

This chapter contains information about installing power supplies. This chapter includes the following topics:

Topic	Page
Power supplies for the 8006 Chassis	91
Removing and installing a power filler panel	93
Installing the DC power supply	95
Removing the DC power supply	104
Installing the AC power supply	108
Removing the AC power supply	109

Power supplies for the 8006 Chassis


The 8006 Chassis operates with either an AC or DC input power source. The 8006 Chassis has three bays for AC or DC power supplies. Use the AC power supply with an AC input power source. Use the DC power supply with a DC input power source. [Figure 48](#) shows a DC power supply. [Figure 49](#) shows an AC power supply.

[Table 24](#) describes the power supply LED on the AC and DC power supply.

Table 24 Power supply LED


State	Meaning
Off	No output is present.
On (green)	Power supply output is normal.

Figure 48 8002 DC power supply

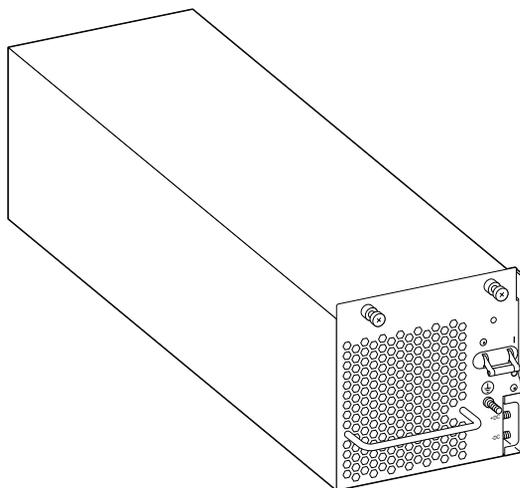

10220FA

Figure 49 8001 Chassis AC power supply

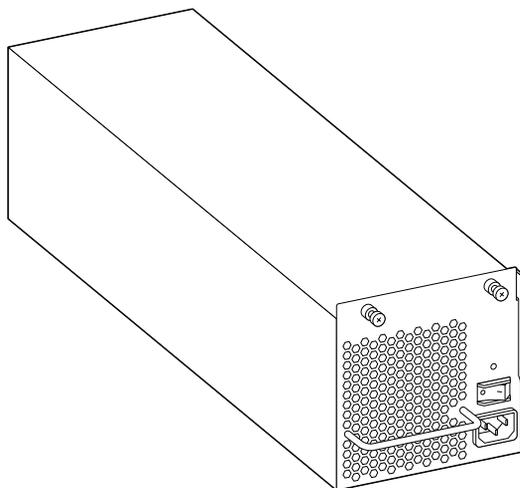

10221FA

The 8006 Chassis ships with no installed power supplies. Install the first power supply in the leftmost bay. (Power supply bays are numbered 1, 2, and 3 left to right as viewed from the front of the chassis.)

The number of power supplies that you need to install—1, 2, or 3—depends on the number of modules installed in the chassis and whether you want an optional redundant power supply (Table 25).

Table 25 Number of power supplies to install

Number of modules ¹	Number of power supplies	
	Required	Redundant configuration
1—5	1	2
6	2	3

¹ Includes one or two 8190SM Modules or one or two 8691SF Modules.

If a chassis has a redundant power configuration and one power supply fails, the chassis continues to operate with no interruption of service.



Note: When you plug the power cord for each power supply into separate AC circuits or separate DC power sources, the redundant power supply also provides protection against the disconnection or power loss of an individual circuit or power source.

If a chassis has the minimum power supply configuration and one power supply fails, the system loses power and network connectivity.


Removing and installing a power filler panel

A power filler panel maintains the proper cooling airflow in the 8006 Chassis. If you remove a power supply from the 8006 Chassis without replacing it, you must install a power filler panel. When you install a power supply, you must first remove the power filler panel from the power bay.

To remove a power filler panel:

- 1 Using a Phillips screwdriver, loosen the 2 captive screws that fasten the power filler panel to the chassis until the power filler panel disengages (Figure 50).

Figure 50 Removing a power filler panel

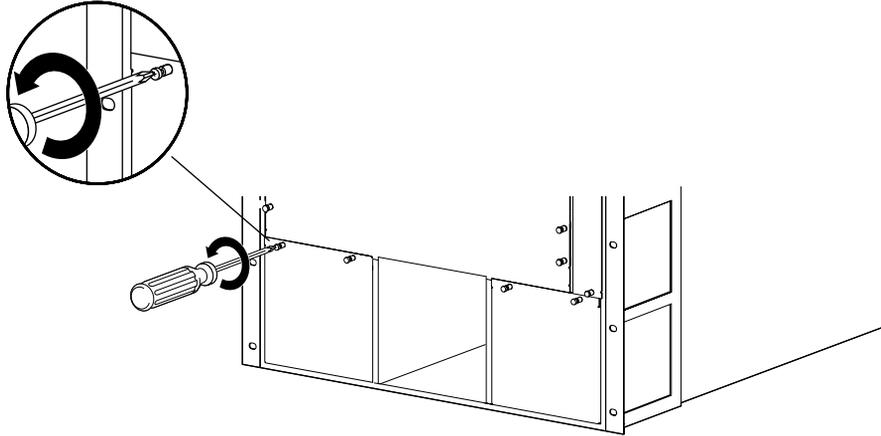


10454FA

- 2 Pull the power filler panel out of the 8006 Chassis.

To install a power filler panel:

- 1 Place the power filler panel in the empty power supply bay (Figure 51).
- 2 Tighten the 2 captive screws until the power filler panel is seated firmly.

Figure 51 Installing a power filler panel

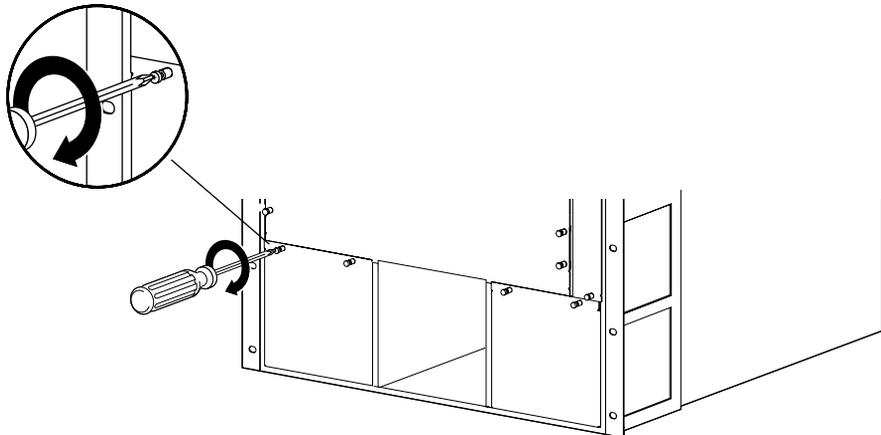

10453FA

Installing the DC power supply



Danger: Due to high-energy hazards, only qualified service personnel are permitted to connect the 8006 Chassis to the DC power source. Make sure the DC input power source is off and disconnected at the remote end before you perform any of the steps in this section.

In addition to the DC power supply and a guide for installing it, your DC power supply shipping container contains several hardware accessories. Verify that the items in the shipping container match those on the shipment packing list.

Use [Table 26](#) as a checklist to verify the contents of the shipping container.

Table 26 DC power supply shipping accessories

Check	Accessory		Use to
	2 two-hole crimp lug terminals with attached tubing		Connect the positive and negative power inputs.
	1 one-hole crimp lug terminal with attached tubing		Connect the ground stud.
	5 nuts		Connect all leads.
	5 lock washers		Connect all leads.
	1 washer		Connect the ground stud.

Before you begin the installation, verify that you have the following tools and materials:

- Cable
- Crimping tool for crimping the lugs onto the cable
- Heat gun to shrink the tubing around the cable (optional)
- 7/16-inch hex wrench
- Phillips screwdriver

Preparing cables

Nortel Networks does not supply the cables for connecting the 8004DC Power Supply to the DC input power source. Select cables that comply with the electrical code of the country where you will use the DC power supply.




Caution: You have the sole responsibility of ensuring that the connection cable used with the 8004DC Power Supply is appropriate for use with the DC power source to which the power supply is connected. Consider gauge, flammability, and mechanical serviceability when determining which cables to use.

To prepare cables for connecting the power supply:

- 1 Strip 0.81 in. (2.1 cm) of insulation from the ends of the cables (Figure 52).

Figure 52 Cable stripping requirements

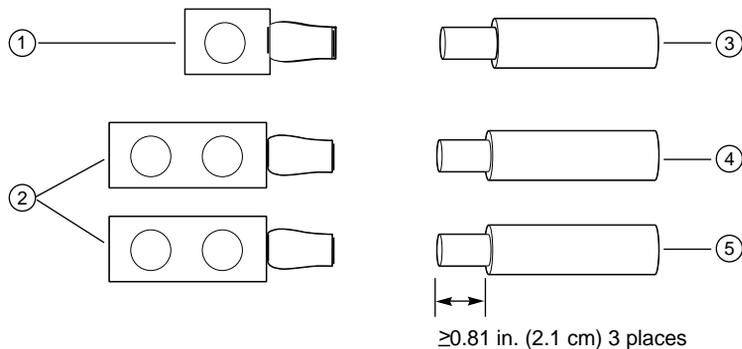

- | | |
|---------------------------|------------------------|
| 1 = Single-hole crimp lug | 3 = Ground lead wire |
| 2 = Two-hole crimp lug | 4 = Positive lead wire |
| | 5 = Negative lead wire |

10296EA


- 2 Crimp the lugs onto the cables using a standard crimping tool.
Failure to properly crimp the lugs onto the cables constitutes a safety hazard.
- 3 If necessary, use a heat gun to shrink the tubing around the cable.

Installing the power supply

To install a DC power supply:

- 1 Make sure that the power switch is turned off ([Figure 53](#)).

Figure 53 DC power supply power switch

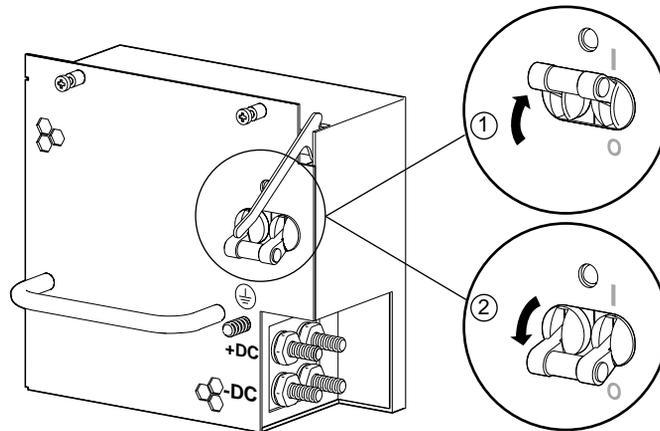


1 = On
2 = Off

10298FA

- 2 Remove the filler panel from the power bay if necessary.
For instructions, see [“Removing and installing a power filler panel”](#) on [page 93](#).
- 3 If you are replacing a failed power supply, remove the failed supply.
For instructions, see [“Removing the DC power supply”](#) on [page 104](#).
- 4 Grasp the handle of the new power supply.
- 5 Push the new power supply partway into the bay, leaving the terminal block at the side of the power supply exposed ([Figure 54](#)).

Figure 54 Inserting the DC power supply

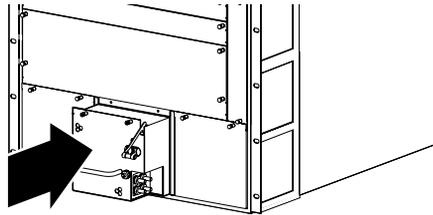


9412FA

- 6** Note the positions of the ground stud and of the positive and negative power inputs ([Figure 55](#)).

The +VDC and -VDC inputs to the power supply are isolated from frame ground. Either +VDC or -VDC may be referenced to frame ground.

Figure 55 DC power supply input and ground stud location

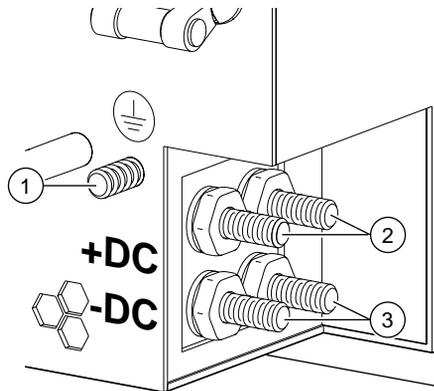

10299FA

- 1 = Ground stud
- 2 = Positive power inputs
- 3 = Negative power inputs

- 7 Refer to [Table 27](#) to verify the proper connection of the positive and negative power leads.

Table 27 Correct cable connection to the DC power supply


Type of DC voltage	Voltage lead	Power supply terminal
Positive	Ground	Ground
	Positive voltage	+ terminal
	Return	– terminal
Negative	Ground	Ground
	Negative voltage	– terminal
	Return	+ terminal



Danger: Make sure that the DC input power source is off or disconnected at the remote end before you connect the terminal leads to the power supply.

- 8 Attach the earth ground lead to the grounding stud on the power supply ([Figure 56](#)). Use the washers in this order:
- a Flat washer
 - b Crimp lug
 - c Lock washer
 - d Hex nut

Figure 56 Attaching the earth ground lead to the grounding stud

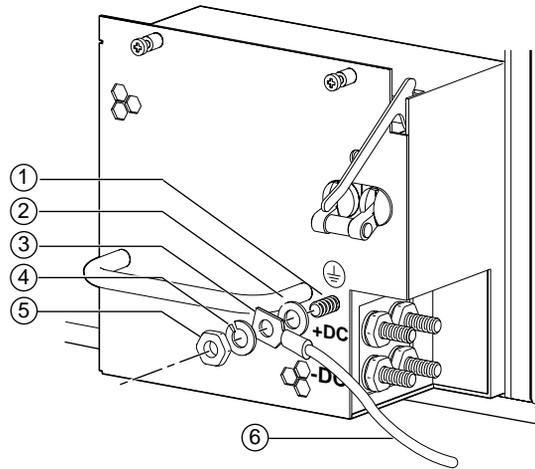


- 1 = Grounding stud
- 2 = Flat washer
- 3 = Crimp lug
- 4 = Lock washer
- 5 = Hex nut
- 6 = Earth ground lead

10297FA

- 9** Attach the positive voltage lead to the positive terminal on the power supply, inserting a lock washer between the crimp lug and each hex nut (Figure 57).

Figure 57 Attaching the voltage leads to the power supply terminals

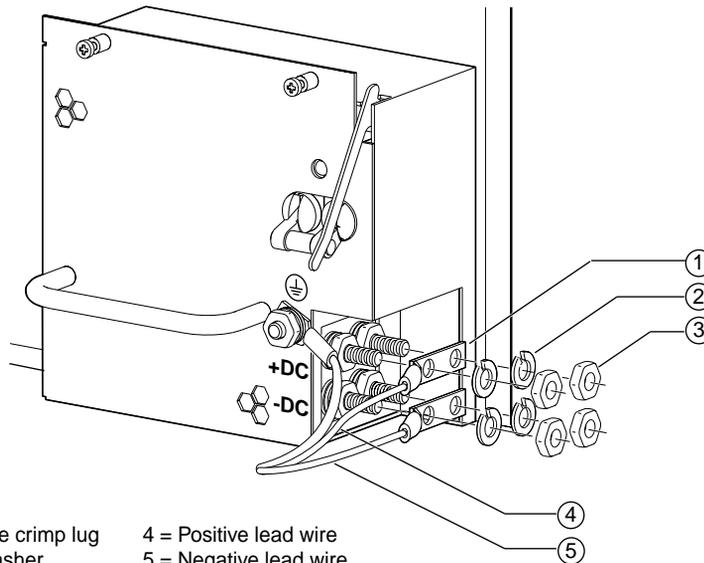


- 1 = Two-hole crimp lug
- 2 = Lock washer
- 3 = Hex nut
- 4 = Positive lead wire
- 5 = Negative lead wire

10300FA

- 10 Attach the negative voltage lead to the negative terminal on the power supply inserting a lock washer between the crimp lug and each hex nut (Figure 57).
- 11 Using a 7/16 in. hex wrench, tighten the hex nut on each terminal.
- 12 Attach the earth ground cable to the system or rack ground for your DC input power source.
- 13 Using a Phillips screwdriver, install the plastic safety cover on the power supply (Figure 58).

Figure 58 Replacing the plastic safety cover

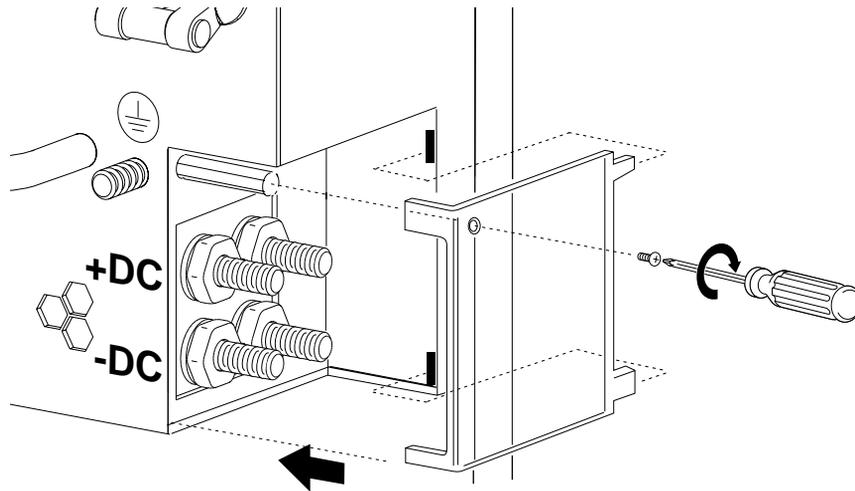


10413FA

- 14 Firmly slide the power supply all the way into the bay.

- 15 Tighten the retaining screws until the power supply is seated firmly (Figure 59).

Figure 59 Tightening the retaining screws on the DC power supply

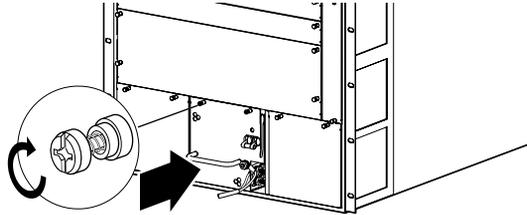


9428FA

- 16 Attach the positive and negative terminal leads and ground to the DC input power source according to the proper safety and technical specifications for your 48 V power distribution system.
- 17 Turn the DC input power source on, or reset the power source circuit breaker, to provide power to the power supply.

18 Turn the power supply switch to the on position (Figure 60).

Figure 60 DC power supply power switch

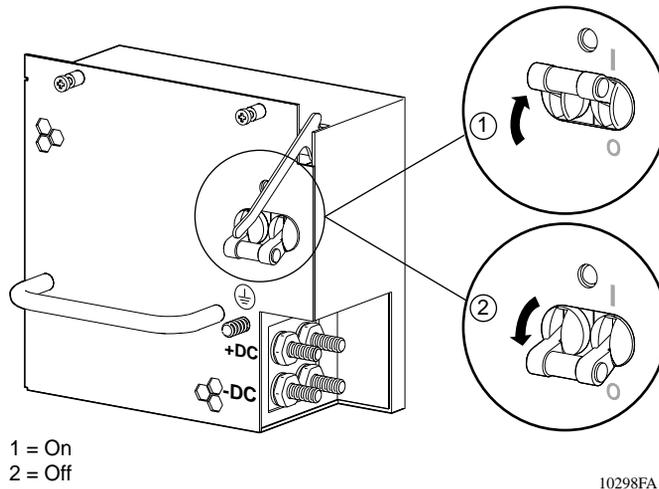

Note: When you first install a 8006 Chassis that contains two or three power supplies, you must turn on two of the power supply units within 2 seconds of each other. If you wait longer to turn on the second power supply, one of the power supplies could shut down. To correct this condition, turn off both power supplies, wait at least 30 seconds, and then turn on both power supplies again within 2 seconds.

If the LED on the power supply does not turn on, contact the Nortel Networks Technical Solutions Center.

Removing the DC power supply

You can remove a redundant power supply without affecting the operation of the 8000 Series switch. When you remove a power supply, the LED on the power supply turns off, and the 8006 Chassis automatically redistributes the load to the remaining power supplies.




Caution: To maintain proper cooling, never operate the 8006 Chassis with an empty power supply bay. If you are replacing a failed power supply and you do not have a power filler panel, leave the failed power supply installed until a replacement power supply is available.

To remove a DC power supply:

- 1 Turn the power supply switch to the off position (Figure 61).

Figure 61 DC power supply power switch

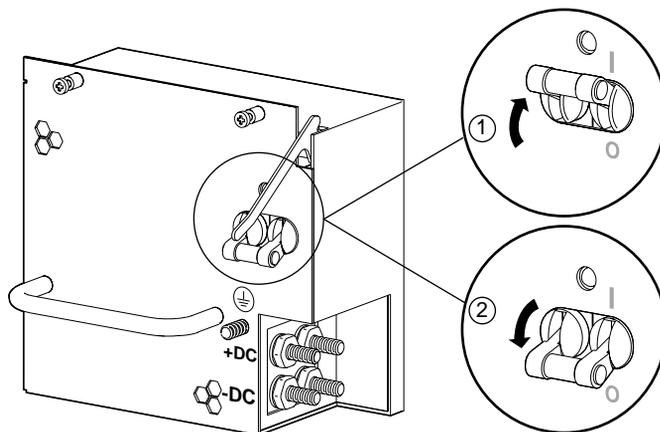

1 = On
2 = Off

10298FA


- 2 Disable the incoming power from the DC input power source. You may need to switch a circuit breaker or turn off the DC input power source.



Danger: Make sure that the DC power source is off or disconnected at the remote end before you connect or disconnect cables from the power supply.

- 3 Loosen the retaining screws on the power supply (Figure 62).


Figure 62 Loosening the retaining screws on the DC power supply

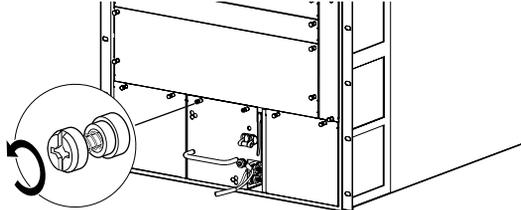

9431FA

- 4 Lift the extractor lever to disconnect the power supply from the backplane connector (Figure 63).

Figure 63 Disconnecting the DC power supply from the backplane

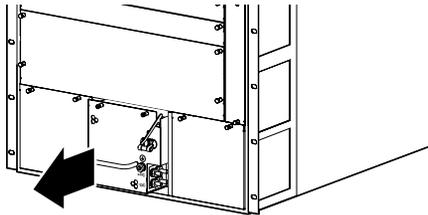


9432FA

- 5 Slide the power supply partway out of the chassis.
- 6 Using a Phillips screwdriver, remove the screw securing the plastic safety cover to the power supply, and then remove the cover (Figure 64).

Set the cover aside for replacement later.


Figure 64 Removing the plastic safety cover

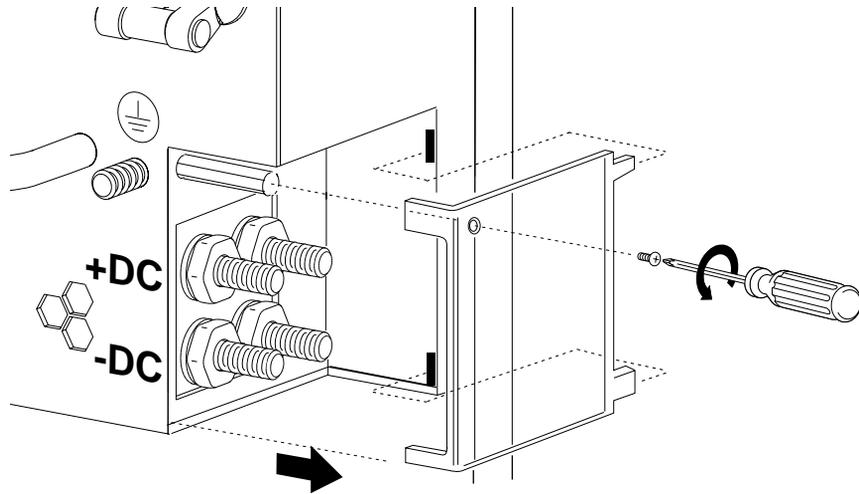

10412FA

7 Disconnect the positive and negative voltage leads from the power supply terminals (Figure 65).

Figure 65 Disconnecting the positive and negative voltage lead

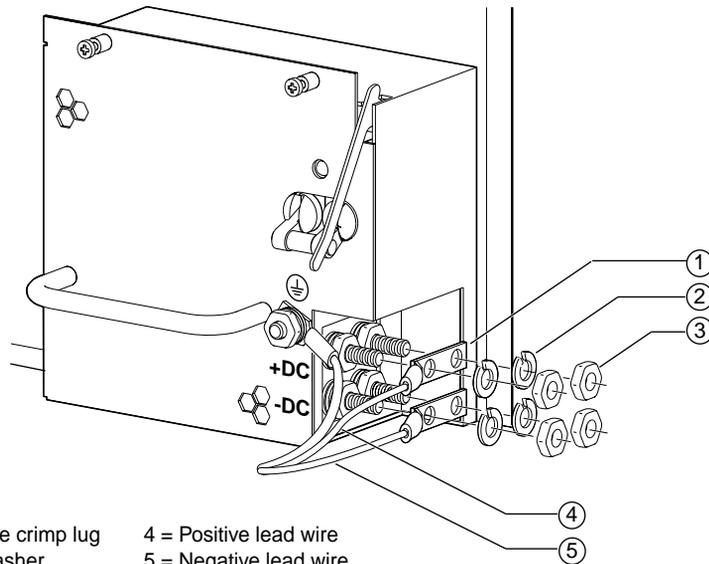


- 1 = Two-hole crimp lug
- 2 = Lock washer
- 3 = Hex nut
- 4 = Positive lead wire
- 5 = Negative lead wire

10300FA

- 8 Disconnect the earth ground lead from the ground lug on the power supply (Figure 66).

Figure 66 Disconnecting the earth ground lead from the DC power supply

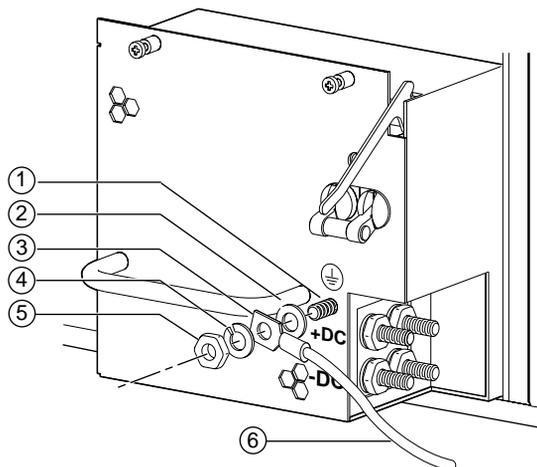


- | | |
|--------------------|-----------------------|
| 1 = Grounding stud | 4 = Lock washer |
| 2 = Flat washer | 5 = Hex nut |
| 3 = Crimp lug | 6 = Earth ground lead |

10297FA

- 9 Slide the power supply all the way out of the chassis and set it aside (Figure 67).

Figure 67 Removing the DC power supply from the chassis

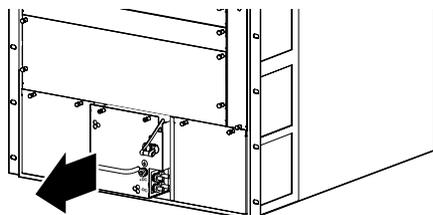

9432FA


- 10 Install a new power supply (see “Installing the DC power supply” on page 95) or install a power filler panel (see “Removing and installing a power filler panel” on page 93).

Installing the AC power supply

To install an AC power supply:

- 1 Remove the filler panel from the power bay if necessary.
For instructions, see [“Removing and installing a power filler panel” on page 93.](#)
- 2 If you are replacing a failed power supply, remove the failed supply.
For instructions, see [“Removing the AC power supply” on page 110.](#)
- 3 Grasp the handle of the new power supply.
- 4 Push the new power supply firmly into the bay ([Figure 68](#)).


Figure 68 Installing the AC power supply

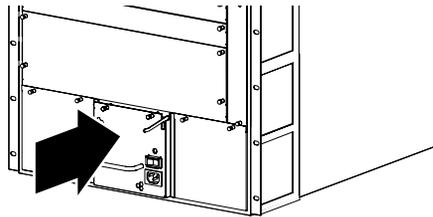

8958FA

- 5 Tighten the retaining screws until the power supply is seated firmly ([Figure 69](#)).

Figure 69 Tightening the retaining screws on the AC power supply

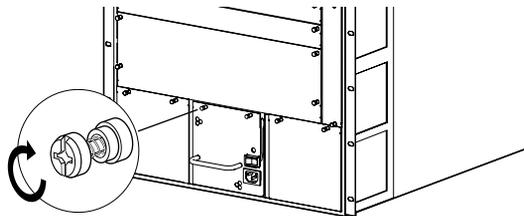


8959FA

- 6 With the AC power switch off, connect the power cord to the power supply and to an AC power outlet that is on a circuit with no other equipment connected to it (Figure 70).


Connect each power supply in the chassis to a separate AC circuit.

Figure 70 Connecting the power cord to the AC power supply

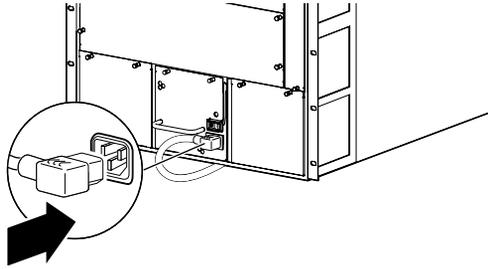

- 7 Turn on the power switch (Figure 71).

Figure 71 AC power supply power switch on

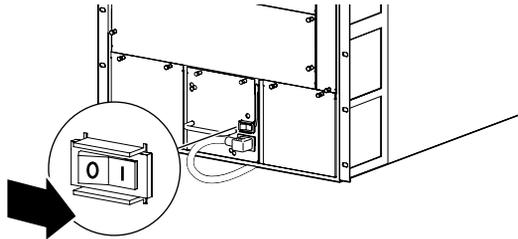

Note: When you first install a 8006 Chassis that contains two or three power supplies, you must turn on two of the power supply units within 2 seconds of each other. If you wait longer to turn on the second power supply, one of the power supplies could shut down. To correct this condition, turn off both power supplies, wait at least 30 seconds, and then turn on both power supplies again within 2 seconds.


Removing the AC power supply

You can remove a redundant power supply without affecting the operation of the 8000 Series switch. When you remove a power supply, the LED on the power supply turns off, and the 8006 Chassis automatically redistributes the load to the remaining power supplies.

To remove an AC power supply:

- 1 Turn off the power switch on the power supply that you are replacing (Figure 72).


Figure 72 AC power supply power switch off

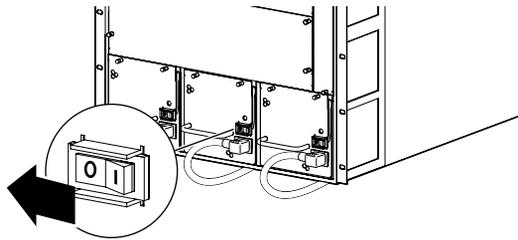

8972FA

- 2 Disconnect the power cord from the power outlet and from the power supply (Figure 73).


Figure 73 Disconnecting the power cord from the AC power supply

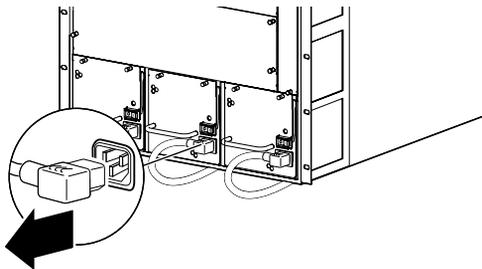

8962FA

- 3 Loosen the retaining screws on the power supply ([Figure 74](#)).


Figure 74 Loosening the retaining screws on the AC power supply

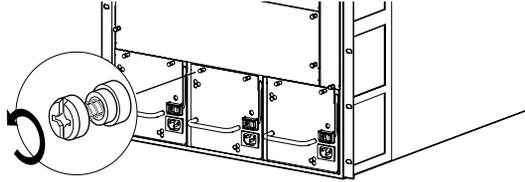

8963FA

- 4 Lift the extractor lever to disconnect the power supply from the backplane connector ([Figure 75](#)).

Figure 75 Disconnecting the AC power supply from the chassis backplane

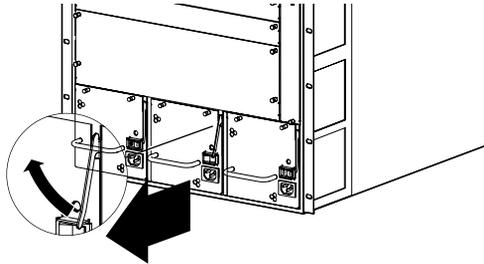

9072FA

- 5 Pull the power supply out of the chassis.
- 6 Install a new power supply (see [“Installing the AC power supply”](#) on [page 108](#)) or install a power filler panel (see [“Removing and installing a power filler panel”](#) on [page 93](#)).

Chapter 6

Installing 8000 Series modules and connecting equipment

This chapter provides instructions for installing and connecting 8000 Series modules in a 8006 Chassis to create a 8000 Series switch. It includes the following topics:

Topic	Page
Location of the 8000 Series modules	113
Installing and replacing a module	115
Connecting a PC or terminal to the console port	120
Connecting a modem	122
Connecting communications cables to 8100 modules	123
Connecting communications cables to 8600 modules	125


Location of the 8000 Series modules

[Figure 76](#) shows the location of the 8000 Series modules in a 8006 Chassis. For descriptions of these modules, see [Chapter 2, “8100 modules”](#) and [Chapter 3, “8600 modules.”](#)

8100 modules installed in slots 1 or 2 serve as a clock source for the entire chassis. Therefore, you must install a 8100 module in either slot 1 or 2 to avoid traffic loss.



Note: 8000 Series software Release 3.2 and later does not support configurations of 8100 modules and 8600 modules installed within the same chassis.

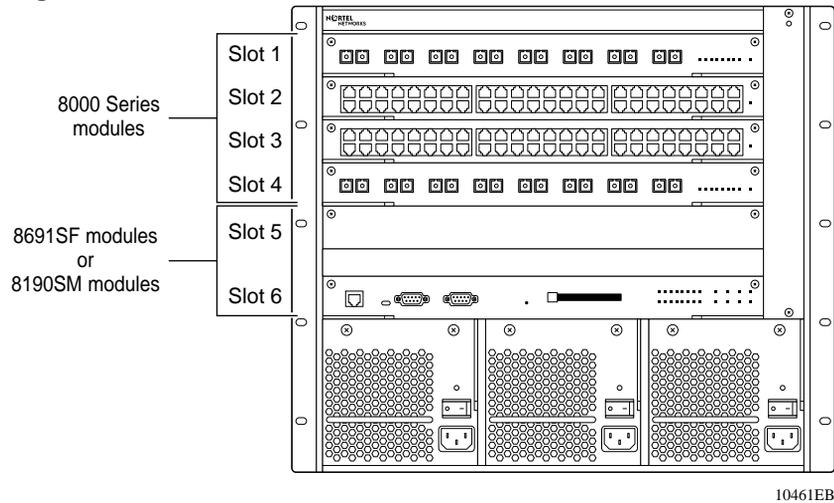Figure 76 Location of 8000 Series modules

Removing and installing a filler panel

Nortel Networks ships the 8006 Chassis with a filler panel in each empty module slot.

Before you can install a new module, you must remove the appropriate filler panel. For instructions, see the next section, [“Removing a filler panel.”](#)


If you need to install a filler panel, see [“Installing a filler panel”](#) on page 115.

Removing a filler panel

To remove a filler panel:

- 1 Using a Phillips screwdriver, loosen the 2 captive screws that fasten the filler panel to the slot ([Figure 77](#)).

Figure 77 Removing a filler panel

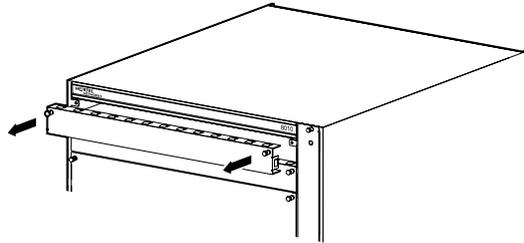

9058FA

- 2 Pull the filler panel away from the chassis.

Installing a filler panel

If you plan to remove a module from the 8006 Chassis without immediately replacing it, you must install a filler panel over the slot.

To install a filler panel:

- 1 Locate the slot where you want to install the filler panel.
- 2 Place the filler panel over the slot.
- 3 Tighten the 2 screws with a Phillips screwdriver.

Installing and replacing a module

You can add or replace a module with the power on or off. To replace a module, see the next section, [“Removing a module” on page 116](#). To install a module, see [“Installing a module” on page 118](#).



Warning: Fiber optic equipment can emit laser or infrared light that can injure your eyes. Never look into an optical fiber or connector port. Always assume that fiber optic cables are connected to a light source.



8769EB

Removing a module

You can remove a module from an operating switch chassis without turning off the chassis power.



Caution: Do not operate the 8006 Chassis with an empty module slot. If you must replace a failed module and you do not have a replacement module, leave the failed module installed or install a filler panel.

After you remove or replace a module in your chassis, you can expect the following results:


- If you remove an I/O module from an operating switch without turning off the chassis power and replace it with the same type module, the system restores the configuration.
- If you remove a 8672ATME, 8672ATMM, or 8683POSM module from an operating switch without turning off the chassis power and the module you insert has the same type MDAs installed as the module which was removed, the system saves the configuration.
- If you remove a 8672ATME, 8672ATMM, or 8683POSM module from an operating switch without turning off the chassis power and the module you insert has different MDAs installed than the module which was removed, you must reconfigure the module. Nortel Networks recommends that you save the original configuration in a file for future use.

- If you replace a module with a different type module, the system discards the configuration of the old ports, and the new ports are added to either the default VLAN or a null VLAN, depending on the operating mode of the switch.
- If you save the configuration in nonvolatile random access memory (NVRAM), turn off the switch, replace a module with a different module type, and turn the system on again, the system discards the configuration of the old ports, add adds new ports to either the default VLAN or an unassigned VLAN, depending on the operating mode of the switch.
- If you replace a 8691SF Module, all the other modules in the chassis reset and revert to their saved configuration settings. If configuration settings for a module were not saved, the module reverts to its factory default settings.
- If you remove a 8190SM Module (for example, to replace it), the switch continues switching for up to 2 minutes. Then it reboots using the configuration settings on the backup switch management module, if one is present. If, after 2 minutes, no backup switch management module is present, all ports go to blocking mode.

To remove a module:

- 1 Disconnect any cables attached to the ports on the module.
- 2 Using a Phillips screwdriver, loosen the 2 captive screws that secure the module to the chassis (Figure 78).

Figure 78 Removing a 8000 Series module

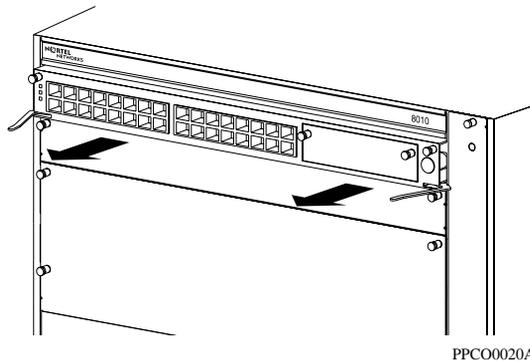

- 3 Rotate the insert/extract levers to eject the module from the chassis.
- 4 Slide the module out of the chassis.

- 5 If you are installing a replacement module, go to the next section. Otherwise, install a filler panel (see [“Installing a filler panel” on page 115](#)).

Installing a module

You can install a 8000 Series module with the power on or off. If you install a module in the same chassis slot where the same type of module was previously installed, the previous configuration is maintained for the new module in that slot. In all other cases, a module installed in a 8006 Chassis is reset to factory defaults.


To install a 8000 Series module:

- 1 Locate the slot where you want to install the module.
- 2 Remove the filler panel.

For instructions, see [“Removing a filler panel” on page 114](#).

- 3 Make sure that the insert/extract levers are extended away from the front of the module ([Figure 79](#)).


Figure 79 Insert/extract levers in extended position

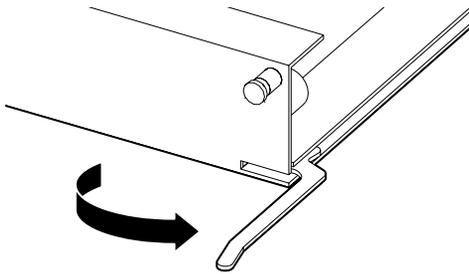

9397FA


- 4 Slide the module into the slot using the slot module guides (Figure 80).

Figure 80 Installing a 8000 Series module

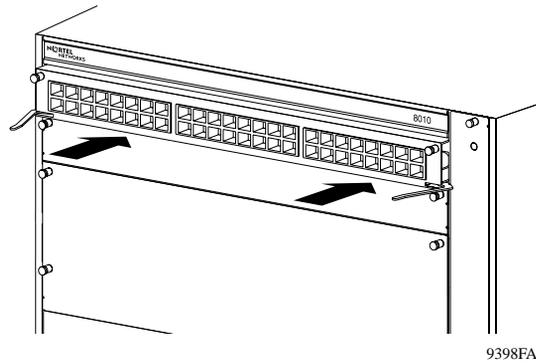


- 5 Slide the module into the chassis until its connector panel touches the chassis back panel.
- 6 Rotate the insert/extract levers to seat the module backplane connectors (Figure 81).

Figure 81 Seating the backplane connectors

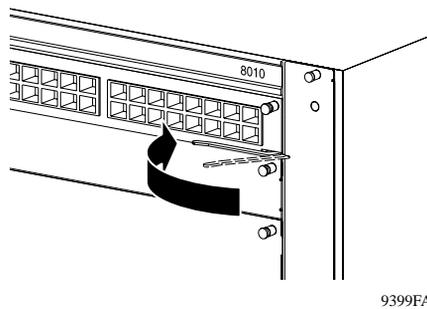

- 7 Using a Phillips screwdriver, tighten the 2 captive screws to secure the 8000 Series module to the chassis (Figure 82).

Figure 82 Securing a 8000 Series module in the chassis

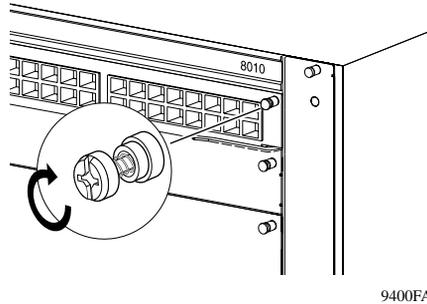

Note: Make sure that both screws are tight for proper module operation.

After you install the modules, connect console equipment and network cables. For instructions, see these sections:

- [“Connecting a PC or terminal to the console port” on page 120](#)
- [“Connecting a modem” on page 122](#)
- [“Connecting communications cables to 8100 modules” on page 123](#)
- [“Connecting communications cables to 8100 modules” on page 123](#)
- [“Connecting communications cables to 8600 modules” on page 125](#)

Connecting a PC or terminal to the console port

You use Device Manager or the command line interface (CLI) to customize your 8000 Series switch configuration (for example, by editing IP parameters). To establish a local CLI or Device Manager session, you must connect a PC, laptop, or a VT-100 terminal to the console port on the 8190SM Module or the 8691SF Module.

To connect a PC, laptop, or terminal to the console port, you need a serial console cable with a 9-pin receptacle connector. See “[Console serial port](#)” on page 228 for a list of pin assignments.

To connect a PC, laptop, or terminal to the console port:

- 1 Turn on and configure the terminal or a communications port on the PC, using the parameters in [Table 28](#).

See the PC or terminal user manual for instructions.

Table 28 PC and terminal parameters

Parameter	Value
Baud rate	9600
Data bits	8
Stop bits	1
Parity	None

- 2 Insert the 9-pin receptacle end of the console cable into the console connector on the 8190SM Module or the 8691SF Module.
- 3 Attach the 9-pin plug end of the cable to the serial communications port on the back of the PC or terminal.

Connecting a network management station to the switch

The management port on the 8190SM Module and the 8691SF Module is a 10/100 Mb/s Ethernet port implemented on an RJ-45 connector wired as an MDI connection. You can use this port to connect the switch to a network management station for out-of-band management of the switch using a Web browser or Device Manager.

The port has its own IP address but does not switch traffic to other ports in the chassis.



Note: For 10 Mb/s connections, you can use Category 3, 4, or 5 copper unshielded twisted pair (UTP) cable. Use only Category 5 UTP cable to connect ports that will operate at 100 Mb/s.

To connect a UTP cable to the management port, insert the cable into the RJ-45 receptacle connector on the 8190SM Module or the 8691SF Module.

Connecting a modem

If you need remote dial-in access to the CLI, you can connect a modem (AT or Hayes compatible) to the 8190SM Module or the 8691SF Module using a serial cable.

To connect a modem to the 8000 Series switch:

- 1 Turn on and configure the modem, using the parameters in [Table 29](#).

See the modem documentation for instructions.

Table 29 Modem settings

Setting	Value
Clear to send (CTS) signal	On
Data terminal ready (DTR) signal	Modem will only connect if the DTR signal is present. If the DTR signal is not present, the modem will disconnect.
Data carrier detect (DCD) or received line signal detection (RLSD)	On while the carrier is present. The switch uses DCD to detect modem connect and disconnect.
Data set ready (DSR) signal	On
Ready to send (RTS) signal	Ignored
Synchronous/asynchronous mode	Asynchronous
Auto answer	Answer on two rings when DTR is active.
Local character echo	Off

Table 29 Modem settings

Setting	Value
Supervisory functions	Off
Baud rate	9600
Data bits	8
Stop bits	1
Parity	None

- 2 Insert the 9-pin receptacle end of the serial cable into the modem connector on the 8190SM Module or the 8691SF Module.
- 3 Insert the 25-pin plug connector at the other end of the serial cable into the modem's RS-232 data communications port.

Connecting communications cables to 8100 modules

Gather the communications equipment and cables that you will attach to the 8100 modules. If you do not have the proper cables, contact your network administrator. [Table 30](#) lists the cable requirements for the 8100 modules.

Table 30 Connectors and cables for 8100 modules

Module	Port	Connector	Recommended cable type	Maximum cable length
8108GBIC	1000 Mb/s Ethernet port	Duplex SC	Depends on installed GBIC model; for specifications, see “GBICs” on page 195 .	
8116FX	100 Mb/s Ethernet port	MT-RJ	62.5 μ m or 50 μ m multimode fiber optic	1352 ft (412 m) for half-duplex links 6562 ft (2 km) for full-duplex links
8132TX	10/100 Mb/s Ethernet ports	RJ-45 wired as MDI-X	EIA Category 3, 4, or 5 UTP for 10 Mb/s operation; EIA Category 5 UTP required for 100 Mb/s operation	328 ft (100 m)
8148TX	10/100 Mb/s Ethernet ports	RJ-45 wired as MDI-X	EIA Category 3, 4, or 5 UTP for 10 Mb/s operation; EIA Category 5 UTP required for 100 Mb/s operation	328 ft (100 m)

Table 30 Connectors and cables for 8100 modules (continued)

Module	Port	Connector	Recommended cable type	Maximum cable length
8190SM	Ethernet Management port	RJ-45	EIA Category 3, 4, or 5 UTP for 10 Mb/s operation; EIA Category 5 UTP required for 100 Mb/s operation	328 ft (100 m)
	Serial ports	DB-9	RS-232	



Note: Ports on the 8132TX and 8148TX Modules are wired as MDI-X. Use straight-through cables to connect these ports to MDI connections such as workstations or servers. Use crossover cables to connect these ports to other MDI-X connections such as hubs or other switches.

Connecting communications cables to 8600 modules

Gather the communications equipment and cables that you will attach to the 8600 modules. If you do not have the proper cables, contact your network administrator. [Table 31](#) lists the cable requirements for the 8600 modules.

Table 31 Connectors and cables for 8600 modules

Module	Port	Connector	Recommended cable type	Minimum cable length	Maximum cable length
8608GBE or 8608GBM	1000 Mb/s Ethernet port	Duplex SC fiber optic connector	Depends on installed GBIC model; for specifications, see “GBICs” on page 211 .	None	Depends on installed GBIC model; for specifications, see “GBICs” on page 211 .
8608GTE or 8608GTM	1000BASE-T Ethernet ports	RJ-45	EIA Category 5 or better UTP/STP straight-through cable. Cables must use all four pairs.	7 ft (2.1 m)	328 ft (100 m)
8608SXE	1000BASE-SX Ethernet ports	Duplex SC	62.5 μ m multi mode fiber optic cable	None	722 ft (220 m) @ 160 MHz/km bandwidth 902 ft (275 m) @ 200 MHz/km bandwidth
			50 μ m multimode fiber optic cable	None	1640 ft (500 m) @ 400 MHz/km bandwidth 1804 ft (550 m) @ 400 MHz/km bandwidth
8616GTE	1000BASE-T Ethernet ports	RJ-45	EIA Category 5 or better UTP/STP straight-through cable. Cables must use all four pairs	7 ft (2.1 m)	328 ft (100 m)

Table 31 Connectors and cables for 8600 modules (continued)

Module	Port	Connector	Recommended cable type	Minimum cable length	Maximum cable length
8616SXE	1000BASE-SX Ethernet ports	MT-RJ	62.5 μ m multimode fiber optic cable	None	722 ft (220 m) @ 160 MHz/km bandwidth 902 ft (275 m) @ 200 MHz/km bandwidth
			50 μ m multimode fiber optic cable	None	1640 ft (500 m) @ 400 MHz/km bandwidth 1804 ft (550 m) @ 400 MHz/km bandwidth
8624FXE	100BASE-FX Ethernet ports	MT-RJ	62.5 μ m multimode fiber optic cable	None	6562 ft (2 km)
8632TXE or 8632TXM	1000 Mb/s Ethernet port	Duplex SC	Depends on installed GBIC model; for specifications, see “GBICs” on page 211 .	None	Depends on installed GBIC model; for specifications, see “GBICs” on page 211
	10/100 Mb/s Ethernet ports	RJ-45 wired as MDI-X	EIA Category 3, 4, or 5 UTP for 10 Mb/s operation; EIA Category 5 UTP required for 100 Mb/s operation	None	328 ft (100 m)
8648TXE or 8648TXM	10/100 Mb/s Ethernet ports	RJ-45 wired as MDI-X	EIA Category 3, 4, or 5 UTP for 10 Mb/s operation; EIA Category 5 UTP required for 100 Mb/s operation	None	328 ft (100 m)
8672ATME OC-3 or 8672ATMM OC-3	OC-3	MT-RJ	9/125 μ m single-mode fiber optic cable	None	9.3 mi (15 km)
	OC-3	MT-RJ	62.5/125 μ m multimode fiber optic cable	None	1.24 mi (2 km)

Table 31 Connectors and cables for 8600 modules (continued)

Module	Port	Connector	Recommended cable type	Minimum cable length	Maximum cable length
8672ATME OC-12 or 8672ATMM OC-12	OC-12	Duplex SC	9/125- μ m single-mode fiber optic cable	None	9.3 mi (15 km)
	OC-12	Duplex SC	62.5/125 μ m multimode fiber optic cable	None	1640 ft (500 m)
8672ATME DS-3 or 8672ATMM DS-3	DS-3	BNC	75 ohm coaxial cable	None	450 ft (137 m)
8681XLR	10GBASE-LR port	Duplex SC	9/125 μ m single-mode fiber optic cable	None	6.2 mi (10 km)
8681XLW	10GBASE-LW port	Duplex SC	9/125 μ m single-mode fiber optic cable	None	6.2 mi (10 km)
8683POSM OC-3	OC-3	MT-RJ	9/125 μ m single-mode fiber optic cable	None	9.3 mi (15 km)
	OC-3	MT-RJ	62.5/125 μ m multimode fiber optic cable	None	1.24 mi (2 km)
8683POSM OC-12	OC-12	Duplex SC	9/125- μ m single-mode fiber optic cable	None	9.3 mi (15 km)
	OC-12	Duplex SC	62.5/125 μ m multimode fiber optic cable	None	1640 ft (500 m)
8691SF	Ethernet Management port	RJ-45	EIA Category 3, 4, or 5 UTP for 10 Mb/s operation; EIA Category 5 UTP required for 100 Mb/s operation	None	328 ft (100 m)
	Serial ports	DB-9	RS-232		



Note: Ports on the 8632TXE and 8648TXE Modules are wired as MDI-X. Use straight-through cables to connect these ports to MDI connections such as workstations or servers. Use crossover cables to connect these ports to other MDI-X connections such as hubs or other switches.

Chapter 7

Installing gigabit interface converters

Gigabit interface converters (GBICs) are hot-swappable I/O enhancement components that link Gigabit Ethernet ports to fiber optic networks.

This chapter describes how to install GBICs in the following 8000 Series modules that support GBICs:

- 8108GBIC Module
- 8608GBE Module
- 8608GBM Module
- 8632TXE Module
- 8632TXM Module

This chapter does not describe how to install coarse wavelength division multiplexing (CWDM) GBICs in 8000 Series modules. To install the CWDM GBICs and the optical routing system, see the following documents:

- *Installing CWDM Gigabit Interface Converters*
Describes how to install CWDM GBICs in 8000 Series modules.
- *Installation and Networking Guidelines for Optical Routing*
Describes how to install the optical routing system, including connections between the GBICs, multiplexers, and the switch.

This chapter includes the following topics:

Topic	Page
Installing a GBIC	131
Removing a GBIC	132

The 8108GBIC, 8608GBE, and 8608GBM Modules have eight bays for installing GBICs. The 8632TXE and 8632TXM Modules have two bays for installing GBICs. The GBIC bays are covered by spring-loaded filler panels that rotate out of the way when you push the GBIC into place.

The following types of GBIC are available:


- 1000BASE-SX—uses multimode fiber over distances up to 550 meters (m)
- 1000BASE-LX—uses multimode fiber over distances up to 550 m or single-mode fiber over distances up to 5 kilometers (km)
- 1000BASE-XD—uses single-mode fiber over distances up to 50 km
- 1000BASE-ZX—uses single-mode fiber over distances up to 70 km
- 1000BASE-CWDM—uses single-mode fiber over distances up to 120 km



Note: CWDM GBICs are not supported on the 8108GBIC Module.

GBICs are available in different case styles ([Figure 83](#)). One type has two spring tabs at the front of the GBIC; the other type has an extractor handle on the front.

Figure 83 Types of GBICs

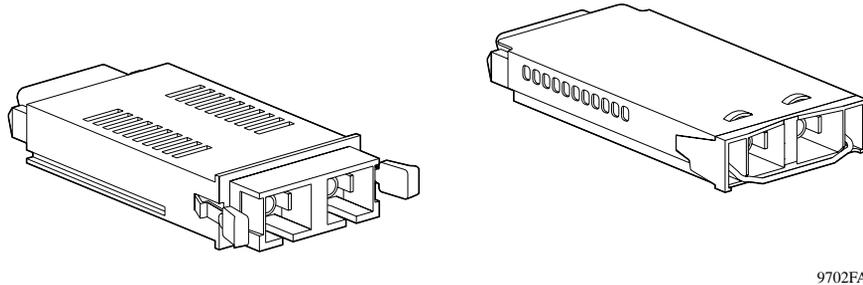

GBICs are shipped with a protective rubber plug in the connectors. Leave the plug in place when no cables are connected to the GBIC.

Installing a GBIC

You can install or replace a GBIC in an operating 8000 Series switch module without turning off power to the switch.




Danger: Fiber optic equipment can emit laser or infrared light that can injure your eyes. Never look into an optical fiber or connector port. Always assume that fiber optic cables are connected to a light source.

To install a GBIC:

- 1 Remove the GBIC from its protective packaging.
- 2 Insert the GBIC into the bay on the module ([Figure 84](#)).

GBICs are keyed to prevent improper insertion. If the GBIC resists pressure, do not force it. Remove it, turn it over, and reinsert it.

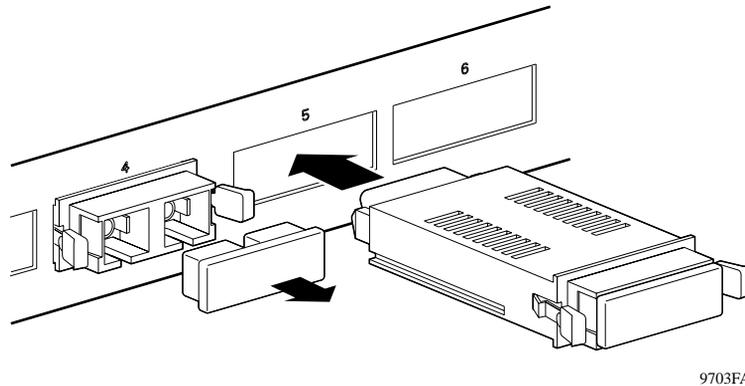Figure 84 Installing a GBIC

- 3 Press on the front of the GBIC until it snaps into place.
- 4 Remove the rubber plug from the connectors to connect the cables.

When shorter lengths of single-mode fiber cable are used with the 1000BASE-ZX and 1000BASE-XD GBICs, there is a risk of overloading the receiver. You may need to insert an in-line optical attenuator at each end of the link between the fiber optic cable plant and the receiving port on the 1000BASE-ZX or 1000BASE-XD GBIC ([Table 32](#)).

Table 32 In-line optical attenuators for 1000BASE-ZX and 1000BASE-XD GBICs


Fiber optic cable span	In-line optical attenuator
Less than 25 km	10 dB
Less than 50 km	5 dB

Removing a GBIC

To remove an installed GBIC:

- If the GBIC has an extractor handle, grasp the handle and pull firmly to remove the GBIC from the bay.
- If the GBIC has spring tabs, press in on the tabs on each side of the GBIC and pull the GBIC out of the bay ([Figure 85](#)).

Figure 85 Removing a GBIC

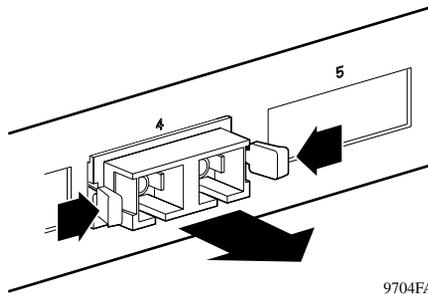

9704FA

Chapter 8

Installing media dependent adapters on 8100 Modules

This chapter describes the 400 Series and 8100 Series media dependent adapters (MDAs) and how to install them on the 8116FX Module and the 8132TX Module. The MDAs support high-speed connections to servers, shared Fast Ethernet hubs, or backbone devices.

This chapter includes the following topics:

Topic	Page
450 Series MDAs	136
8100-4TX MDA	138
8100 Series fiber MDAs	139
Installing an MDA on a 8100 module	140

The 8116FX and 8132TX Modules support the following MDAs:

- 450-1SX MDA—1000BASE-SX MDA (1-port shortwave gigabit fiber)
- 450-1SR MDA—1000BASE-SX MDA (1-port shortwave gigabit fiber with 1 redundant port)
- 450-1LX MDA—1000BASE-LX MDA (1-port longwave gigabit fiber)
- 450-1LR MDA—1000BASE-LX MDA (1-port longwave gigabit fiber with 1 redundant port)
- 8100-4TX MDA—10BASE-T/100BASE-TX MDA (4-port copper)
- 8100-2FX MDA—100BASE-FX MDA (2-port multimode fiber with SC connectors)
- 8100-4FX MDA—100BASE-FX MDA (4-port multimode fiber with MT-RJ connectors)

450 Series MDAs

Four Gigabit Ethernet MDAs are available for the 8116FX Module and the 8132TX Module:

- Two shortwave gigabit MDAs (Figure 86):
 - The 450-1SX MDA is a single-Phy MDA.
 - The 450-1SR MDA is a single-MAC MDA with a redundant Phy port.

These MDAs use shortwave 850 nm fiber optic connectors to connect devices over multimode (550 meter) fiber optic cable.

- Two longwave gigabit MDAs (Figure 87):
 - The 450-1LX MDA is a single-Phy MDA.
 - The 450-1LR MDA is a single-MAC MDA with a redundant Phy port.

These MDAs use longwave 1300 nm fiber optic connectors to connect devices over single-mode (3 kilometer) or multimode (550 meter) fiber optic cable.

Figure 86 1000BASE-SX (shortwave gigabit) MDA front panels

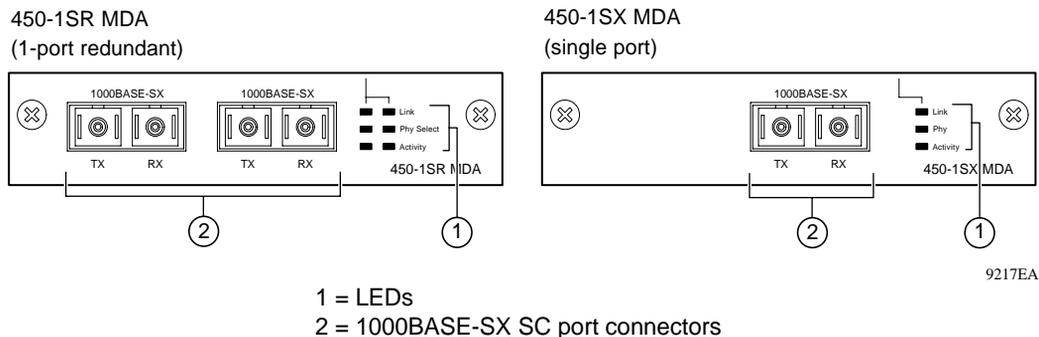


Figure 87 1000BASE-LX (longwave gigabit) MDA front panels

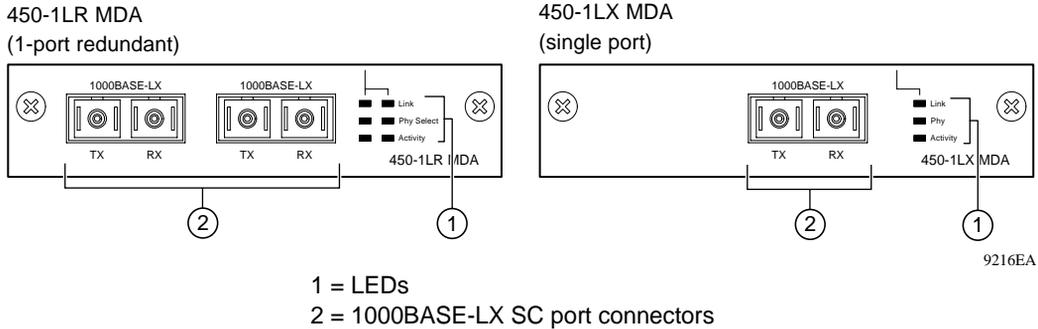


Table 33 describes the 1000BASE-SX and 1000BASE-LX MDA LEDs.


Table 33 1000BASE-SX and 1000BASE-LX MDA LEDs

Label	Color/State	Meaning
Link	Green/Steady	A valid communication link is established.
	Green/Blinking	The corresponding port is management disabled.
	Off	The communication link connection is bad, or there is no connection to this port.
Phy Select	Green/Steady	The corresponding Phy port is selected.
	Off	The corresponding Phy port is in backup mode.
Activity	Green/Blinking	Indicates the network activity level for the corresponding port. A high level of network activity can cause LEDs to appear to be on continuously.

8100-4TX MDA

The 8100-4TX MDA (Figure 88) has four standard RJ-45 connectors to attach to Ethernet devices. This MDA can operate at either 10 Mb/s or 100 Mb/s speed. The speed is determined through autonegotiation with the connected device.

Figure 88 8100-4TX MDA front panel

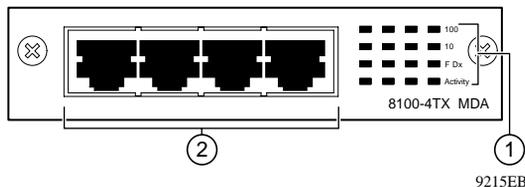

1 = LEDs

2 = 10BASE-T/100BASE-TX port connectors

Table 34 describes the 8100-4TX MDA LEDs.

Table 34 8100-4TX MDA LEDs

Label	Description	Color/State	Meaning
100	100BASE-TX port status LEDs	Green/Steady	The corresponding port is set to operate at 100 Mb/s.
		Green/Blinking	The corresponding port is management disabled.
		Off	The link connection is bad, or there is no connection to this port.
10	10BASE-T port status LEDs	Green/Steady	The corresponding port is set to operate at 10 Mb/s.
		Green/Blinking	The corresponding port is management disabled.
		Off	The link connection is bad, or there is no connection to this port.
F Dx	Full-duplex port status LEDs	Green/Steady	The corresponding port is in full-duplex mode.
		Off	The corresponding port is in half-duplex mode.
Activity	Port activity LEDs	Green/Blinking	Indicates the network activity level for the corresponding port. A high level of network activity can cause LEDs to appear to be on continuously.

8100 Series fiber MDAs

The 8100 Series fiber MDAs are used to make fiber-based 100 Mb/s connections to the switch. Two versions of this MDA are available (Figure 89):

- The 8100-2FX MDA uses two longwave 1300 nm SC connectors to connect devices over 62.5/125 μm multimode fiber optic cable.
- The 8100-4FX MDA uses four longwave 1300 nm MT-RJ connectors to connect devices over 62.5/125 μm multimode fiber optic cable.

The 8100 Series fiber MDAs do not support single-mode fiber cable.

Figure 89 8100 Series fiber MDA front panels

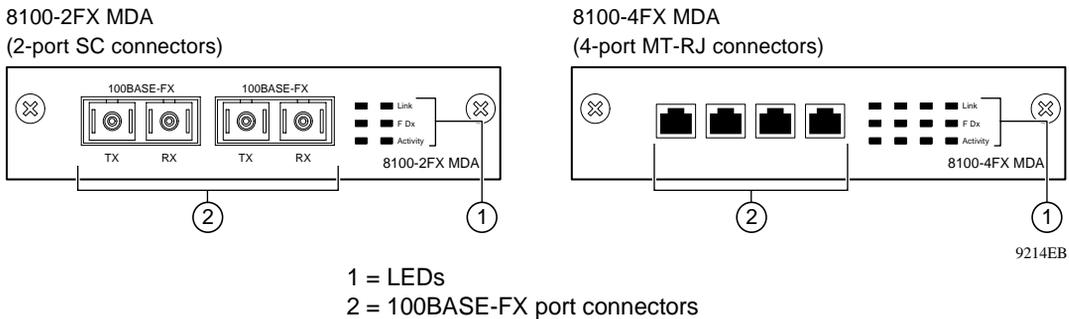


Table 35 describes the 8100 Series fiber MDA LEDs.

Table 35 8100 Series fiber MDA LEDs

Label	Description	Color/State	Meaning
Link	Communication link LEDs	Green/Steady	A valid communication link is established.
		Green/Blinking	The corresponding port is management disabled.
		Off	The communication link connection is bad, or there is no connection to this port.
F Dx	Full-duplex port status LEDs	Green/Steady	The corresponding port is in full-duplex mode.
		Off	The corresponding port is in half-duplex mode.
Activity	Port activity LEDs	Green/Blinking	Indicates the network activity level for the corresponding port. A high level of network activity can cause LEDs to appear to be on continuously.

Installing an MDA on a 8100 module

The 8116FX Module and the 8132TX Module have one slot for a single MDA.



Note: You can install or replace an MDA without turning off the chassis; however, the module resets when an MDA is inserted or removed.


To install or replace an MDA:

- 1 Loosen the retaining screw at each end of the module.
- 2 Use the insert/extract levers to disconnect the module from the chassis backplane connector.
- 3 Loosen the thumbscrews and remove the filler panel (or the installed MDA) from the MDA slot.
- 4 Insert the MDA into the slot ([Figure 90](#)), taking care to slide the MDA onto the guides provided on the module backing.



Caution: Make sure that the MDA slides in on the guides provided. Failure to align the MDA with the guides can result in bent and broken pins.

Figure 90 Installing an MDA on the 8132TX Module

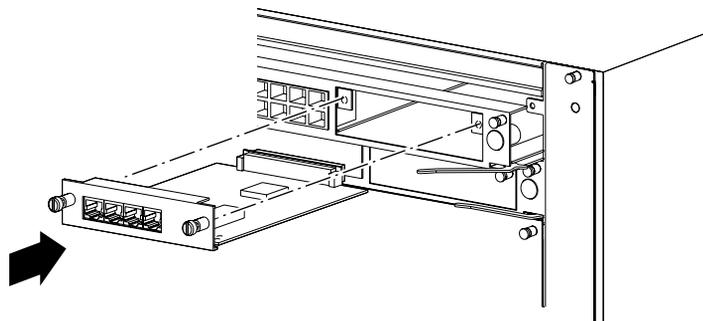

9169FA

- 5 Press the MDA firmly into the slot. Make sure that the MDA is fully seated in the connector.

- 6 Secure the MDA in the module by tightening the thumbscrews on the MDA front panel.
- 7 Use the insert/extract levers to reseal the module backplane connector.
- 8 Tighten the module retaining screws.
- 9 Attach devices to the MDA ports.



Note: The IEEE 802.3 1998 Clause 28 specification requires that all ports operating at 100 Mb/s use only Category 5 unshielded twisted pair (UTP) cabling.

Chapter 9

Installing media dependent adapters on 8600 modules

This chapter provides instructions for adding and replacing media dependent adapters (MDAs) on the 8672ATME Module and the 8683POSM Module. It also discusses connecting communications cables. This chapter includes the following topics:

Topic	Page
8672ATME and 8672ATMM Module MDAs	144
8683POSM Module MDAs	148
Installing an MDA on a 8600 module	152
Replacing an MDA on a 8600 module	155
Connecting fiber cables to a 8600 module MDA	156
Connecting coaxial cables to a 8600 module MDA	159

8672ATME and 8672ATMM Module MDAs

The media dependent adapters (MDAs) for the 8672ATME and 8672ATMM Modules are modular port adapters that you install on the module. Each module has two slots for MDAs. You can install one or two of the following MDAs:

- 1-port OC-12c/STM-4 (Figure 91)
- 4-port OC-3c/STM-1 (Figure 92)
- 2-port DS-3 (Figure 93)

Figure 91 8672ATME/8672ATMM Module MDA: OC-12c/STM-4

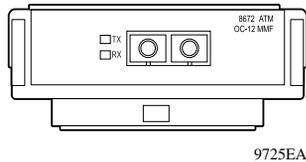


Figure 92 8672ATME/8672ATMM Module MDA: OC-3c/STM-1


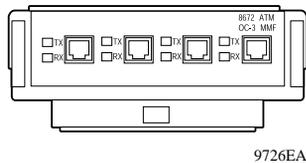


Figure 93 8672ATME/8672ATMM Module MDA: DS-3

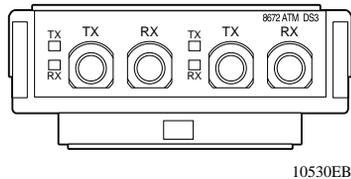

Each MDA has ports for connection to an ATM network. You can install both types of MDA to achieve flexibility in connectivity types. [Table 36](#) lists the MDAs available for the 8672ATME and 8672ATMM Modules.

Table 36 MDAs for the 8672ATME and 8672ATMM Modules

Port type	Model	Cable type	Connector type
OC-12c/STM-4	DS1304004	Multimode fiber	Duplex SC
	DS1304005	Single-mode fiber	Duplex SC
OC-3c/STM-1	DS1304006	Multimode fiber	MT-RJ
	DS1304007	Single-mode fiber	MT-RJ
DS-3	DS1304002	75 ohm coaxial	BNC

The OC-3c/STM-1 and OC-12c/STM-4 MDAs for the 8672ATME and 8672ATMM Modules are Class 1 laser products, as identified by the label on the MDA ([Figure 94](#)).

Figure 94 Product label for the 8672ATME/8672ATMM Module MDA



8769EB

The MDAs have two bicolor LEDs for each port: one marked TX (transmit) and one marked RX (receive). [Table 37](#) describes the LEDs.

Table 37 LEDs on the 8672ATME/8672ATMM Module MDA

Label	Color	State	Meaning
Tx	Green	Steady	Indicates network activity for the corresponding port. A very low level of network activity (approximately 1-5 pps) can cause the LED to blink.
	—	Off	The port is not transmitting data (no network activity).
	Amber	Blinking	The port is out of order; the administrative state is down.

Table 37 LEDs on the 8672ATME/8672ATMM Module MDA (continued)

Label	Color	State	Meaning
Rx	Green	Steady	The port is operational; no network activity.
	Green	Blinking	Indicates network activity for the corresponding port (the port is receiving traffic).
	Amber	Steady	An Remote Defect Indication (RDI) ¹ alarm condition has been detected; the administrative state is down.
	Amber	Blinking	The port is not operational; the administrative state is down.
	—	Off	The port is not operational; (be sure the MDA is fully seated in the slot; check that the port is properly configured).

¹ Remote defect indication (RDI): Indicates that a failure has occurred at the far end of the network in ATM, when the physical layer detects loss of signal or cell synchronization, RDI cells are used to report a VPC/VCC failure. RDI cells are sent upstream by a VPC/VCC endpoint to notify the source VPC/VCC endpoint of the downstream failure.

Specifications for the 8672ATME and 8672ATMM Module MDAs

[Table 38](#) lists the specifications for the 8672ATME and 8672ATMM Module MDA- OC3c and OC-12c.

Table 38 8672ATME/8672ATMM Module MDA specifications- OC3c/STM-1 and OC-12c/STM-4

Port type	Operating wavelength	Operating power	Pulse repetition rate
OC-12c/STM-4	1274-1356 nm	-14 to -20 dBm	622.08 Mb/s
	1260-1360 nm	-8 to -15 dBm	622.08 Mb/s
OC-3c/STM-1	1274-1356 nm	-14 to -20 dBm	155.52 Mb/s
	1260-1360 nm	-8 to -15 dBm	155.52 Mb/s



Note: See [Table 41](#) for DS-3 specifications.

The OC-3c/STM-1 MDA uses SONET STS-3c/SDH STM-1 1300 nm optical transceivers with MT-RJ fiber optic connectors and either single-mode fiber (SMF) or multimode fiber (MMF) cabling. [Table 39](#) describes the connector specifications.

Table 39 OC-3c/STM-1 specifications: 8672ATME/8672ATMM Module MDA

Parameter	SMF description	MMF description
Physical media	9/125 μm	62.5/125 μm
Line code	NRZ	NRZ
Wavelength	1274 to 1356 nm	1274 to 1356 nm
Average transmit output power	-8 to -15 dBm	-14 to -20 dBm
Average receiver sensitivity	-8 to -28 dBm	-14 to -30 dBm
Distance	15 km	2 km
Input power	40 W	40 W
Thermal rating	138 Btu/hour maximum	138 Btu/hour maximum

The OC-12c/STM-4 MDA uses SONET STS-3c/SDH STM-1 1300 nm optical transceivers with duplex SC-type fiber optic connectors and either single-mode fiber (SMF) or multimode fiber (MMF) cabling. [Table 40](#) describes the connector specifications.

Table 40 OC-12c/STM-4 specifications: 8672ATME/8672ATMM Module MDA

Parameter	SMF description	MMF description
Physical media	9/125 μm	62.5/125 μm
Line code	NRZ	NRZ
Wavelength	1260 to 1356 nm	1274 to 1356 nm
Average transmit output power	-8 to -15 dBm	-14 to -20 dBm
Average receiver sensitivity	-8 to -28 dBm	-14 to -26 dBm
Distance	15 km	500 m
Input power	40 W	40 W
Thermal rating	138 Btu/hour maximum	138 Btu/hour maximum

The DS-3 MDA uses a 75 ohm coaxial cable. [Table 41](#) describes the DS-3 MDA.



Table 41 DS-3 specifications: 8672ATME/8672ATMM Module MDA

Parameter	Specification
Line rate	44.736 Mb/s (20 ppm)
Impedance	75 ohms
Maximum length	450 feet (135 m)

8683POSM Module MDAs

The MDAs for the 8683POSM Module are modular port adapters that you install on the module. The module has three slots for MDAs. You can install one, two, or three of the following SMF and MMF MDAs:

- 1-port OC-12c/STM-4 ([Figure 95](#))
- 2-port OC-3c/STM-1 ([Figure 96](#))

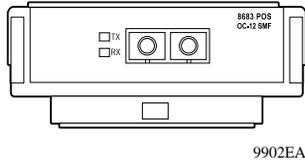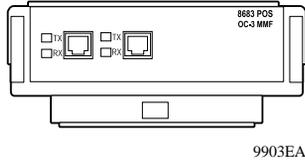Figure 95 8683POSM Module MDA: OC-12c/STM-4**Figure 96** 8683POSM Module MDA: OC-3c/STM-1

Each MDA has ports for connection to a packet over SONET (POS) network. You can install both types of MDA to achieve flexibility in connectivity types.

[Table 42](#) lists the MDAs available for the 8683POSM Module.

Table 42 MDAs for the 8683POSM Module

Port type	Model	Cable type	Connector type
OC-12c/STM-4	DS1333001	Multimode fiber	Duplex SC
	DS1333002	Single-mode fiber	Duplex SC
OC-3c/STM-1	DS1333003	Multimode fiber	MT-RJ
	DS1333004	Single-mode fiber	MT-RJ

The MDAs for the 8683POSM Module are Class 1 laser products, as identified by the label on the MDA ([Figure 97](#)).

Figure 97 Product label for the 8683POSM Module MDA

The MDAs have two bicolor LEDs for each port: one marked TX (transmit) and one marked RX (receive). [Table 43](#) describes the LEDs.

Table 43 LEDs on the 8683POSM Module MDA

Label	Color	State	Meaning
Tx	Green	Steady	Indicates network activity for the corresponding port. A very low level of network activity (approximately 1-5 pps) can cause the LED to blink.
	—	Off	The port is not transmitting data (no network activity).
	Amber	Blinking	The port is out of order; the administrative state is down.
Rx	Green	Steady	The port is operational; no network activity.
	Green	Blinking	Indicates network activity for the corresponding port (the port is receiving traffic).
	Amber	Steady	An Remote Defect Indication (RDI) ¹ alarm condition has been detected; the administrative state is down.
	Amber	Blinking	The port is not operational; the administrative state is down.
	—	Off	The port is not operational; (be sure the MDA is fully seated in the slot; check that the port is properly configured).

¹ Remote defect indication (RDI): Indicates that a failure has occurred at the far end of the network in POS, when the physical layer detects loss of signal or cell synchronization, RDI cells are used to report a VPC/VCC failure. RDI cells are sent upstream by a VPC/VCC endpoint to notify the source VPC/VCC endpoint of the downstream failure.

Specifications for the 8683POSM Module MDAs

Table 44 lists the specifications for the 8683POSM Module MDA.

Table 44 8683POSM Module MDA specifications

Port type	Operating wavelength	Operating power	Pulse repetition rate
OC-12c/STM-4	1274-1356 nm	-14 to -20 dBm	622.08 Mbs
	1260-1360 nm	-8 to -15 dBm	622.08 Mbs
OC-3c/STM-1	1274-1356 nm	-14 to -20 dBm	155.52 Mbs
	1274-1356 nm	-8 to -15 dBm	155.52 Mbs

The OC-3c/STM-1 MDA uses SONET STS-3c/STM-1 1300 nm optical transceivers with MT-RJ fiber optic connectors and either single-mode fiber (SMF) or multimode fiber (MMF) cabling. [Table 45](#) describes the connector specifications for OC-3c/STM-1.

Table 45 OC-3c/STM-1 specifications: 8683POSM Module MDA

Parameter	SMF description	MMF description
Physical media	9/125 μm	62.5/125 μm
Line code	NRZ	NRZ
Wavelength	1274 to 1356 nm	1274 to 1356 nm
Average transmit output power	-8 to -15 dBm	-14 to -20 dBm
Average receiver sensitivity	-14 to -28 dBm	-4 to -29 dBm
Distance	15 km	2 km
Input power	70 W	70 W
Thermal rating	241 Btu/hour maximum	241 Btu/hour maximum

The OC-12c/STM-4 MDA uses SONET STS-3c/STM-1 1300 nm optical transceivers with duplex SC-type fiber optic connectors and either single-mode fiber (SMF) or multimode fiber (MMF) cabling. [Table 46](#) describes the connector specifications for OC-12c/STM-4.

Table 46 OC-12c/STM-4 specifications: 8683POSM Module MDA

Parameter	SMF description	MMF description
Physical media	9/125 μm	62.5/125 μm
Line code	NRZ	NRZ
Wavelength	1274 to 1356 nm	1260 to 1360 nm
Average transmit output power	-8 to -15 dBm	-14 to -20 dBm
Average receiver sensitivity	-7 to -18 dBm	-14 to -28 dBm
Distance	15 km	500 m
Input power	90 W	90 W
Thermal rating	310 Btu/hour maximum	310 Btu/hour maximum

Installing an MDA on a 8600 module

To install an MDA on a 8672ATME or 8672ATMM Module or a 8683POSM Module:


- 1 Remove the module from the chassis and place it on a flat, static-free surface.
For instructions on removing a module, see [“Removing a module” on page 116](#).



Warning: You cannot hot-swap an MDA. You must remove the 8672ATME, 8672ATMM, or 8683POSM Module, install the MDA, and then reinstall the module.


- 2 Using a Phillips screwdriver, remove the 2 screws securing the MDA slot cover to the module ([Figure 98](#)).
- 3 Lift the cover straight up. (Save the cover for possible future use.)

Figure 98 Removing the MDA slot cover

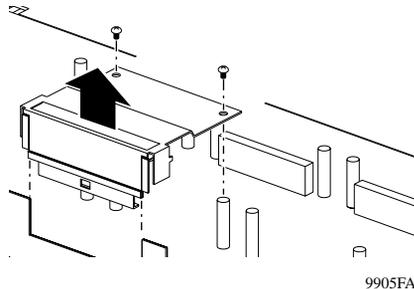


- 4 Align the front of the MDA with the front of the 8672ATME, 8672ATMM, or 8683POSM Module ([Figure 99](#)).

Figure 99 Aligning the MDA with the front of the module

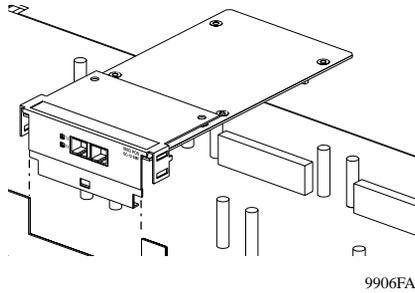


- 5 Align the four holes on the MDA with the mounting posts on the module (Figure 100).

Figure 100 Aligning the MDA with the mounting posts of the module

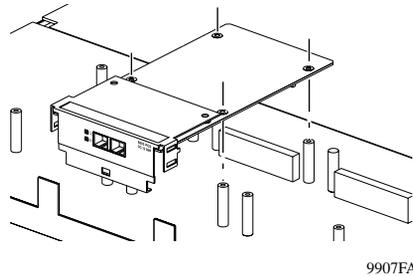

- 6 Press firmly on the MDA in the middle of the back to seat the MDA in the mounting posts on the module (Figure 101). Apply about 20 pounds of pressure.

Figure 101 Seating the MDA on the module

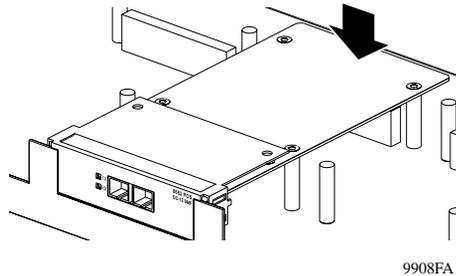


When the MDA is seated properly, the posts of the module are visible in the holes of the MDA.

- 7 Insert the Phillips screws through the holes. Use the Phillips screwdriver to tighten the screws (Figure 102).



Note: Tighten the rear screws before you tighten the front screws.

Figure 102 Tightening the screws on the MDA

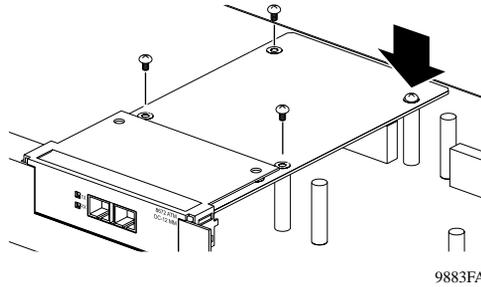

- 8 Attach the supplied laser product label to the front panel of the host module, directly below the MDA. Use the label that is printed in the appropriate language for the country where you are installing the equipment.
- 9 Reinstall the 8672ATME Module, 8672ATMM Module, or the 8683POSM Module in the chassis.

For instructions on installing a module, see [“Installing a module” on page 118](#).

Replacing an MDA on a 8600 module

To replace an MDA on a 8672ATME Module, 8672ATMM, or a 8683POSM Module:


- 1 Remove the module from the chassis and place it on a flat, static-free surface.
For instructions on removing a module, see [“Removing a module” on page 116](#).



Warning: You cannot hot-swap an MDA. You must power down the switch and remove the 8672ATME, 8672ATMM, or 8683POSM Module, replace the MDA, and then reinstall and power up the module.


- 2 Using a Phillips screwdriver, unscrew the 4 screws from the MDA that you want to replace ([Figure 103](#)).

Figure 103 Preparing an MDA for removal

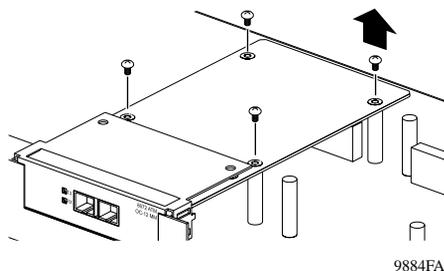


- 3 Place the palm of your hand on top of the MDA and cup your fingers around the back of the MDA. Lift the MDA enough to loosen it from the mounting posts ([Figure 104](#)).

Figure 104 Loosening the MDA from the mounting posts

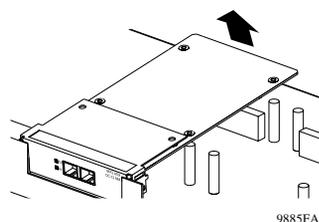

- 4 When the MDA is loosened from the mounting posts, hold the sheet metal by each side and lift the MDA straight up (Figure 105). Be careful not to catch the lip of the MDA on the module. Store the MDA in a static-free container.

Figure 105 Removing the MDA from the module

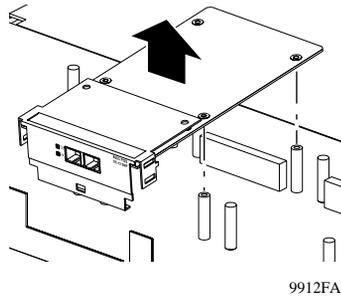


- 5 See “Installing an MDA on a 8600 module” on page 152 for instructions on installing the replacement MDA.

Connecting fiber cables to a 8600 module MDA


The OC-12c/STM-4 MDA uses duplex SC connectors (Figure 106).

Figure 106 OC-12c/STM-4 MDA duplex SC connector with dust cover

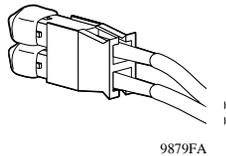

The OC-3c/STM-1 MDA uses MT-RJ connectors (Figure 107).

Figure 107 OC-3c/STM-1 MDA MT-RJ connector with dust cap

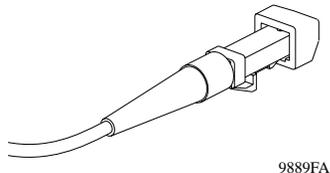

To connect a fiber cable to an MDA:

- 1 Remove the protective dust plug from the connector on the MDA (Figure 108 and Figure 109). Save the dust plug for future use.

Figure 108 Removing the dust plug from an OC-12c/STM-4 MDA (SC) connector


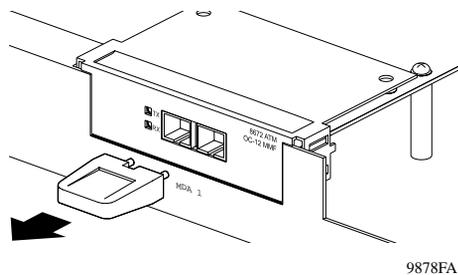


Figure 109 Removing the dust plug from an OC-3c/STM-1 MDA (MT-RJ) connector

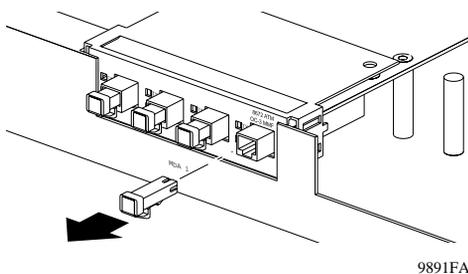

- 2 Remove the protective dust caps from the connector on the fiber cable. Save the dust caps for future use (Figure 110 and Figure 111).

Figure 110 Removing the dust cap from an SC fiber cable connector


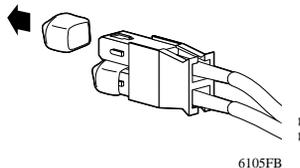


Figure 111 Removing the dust cap from an MT-RJ fiber cable connector

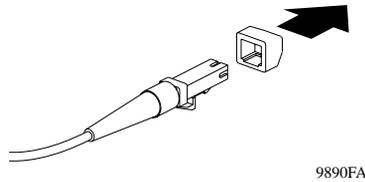

- 3 Hold the cable connector so that the keyed surface will insert easily into the MDA connector.
- 4 Carefully insert the cable connector into the MDA connector and push gently until you hear the cable connector snap into place (Figure 112, and Figure 113).

Figure 112 Inserting the SC cable connector into an OC-12c/STM-4 MDA


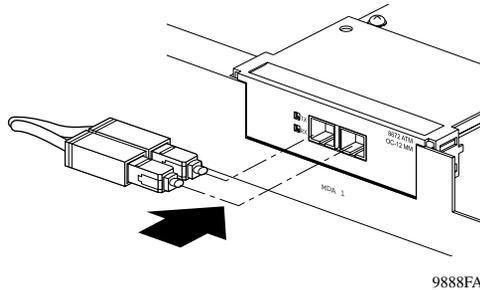


Figure 113 Inserting the MT-RJ cable connector into an OC-3c/STM-1 MDA

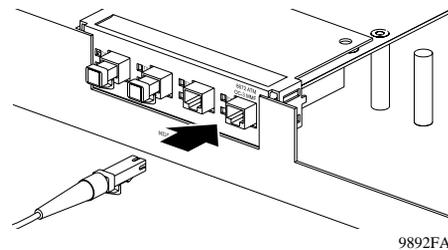


Connecting coaxial cables to a 8600 module MDA

The DS-3 MDA uses BNC connectors (Figure 114).

To connect a coaxial cable to a DS-3 MDA:

- 1 Push the coaxial cable onto the DS-3 connector (Figure 114).

Figure 114 Pushing the coaxial cable onto a DS-3 connector

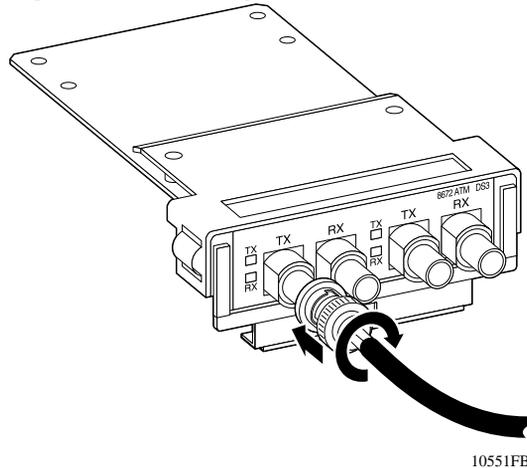

- 2 Turn the coaxial cable to the right until the key on the DS-3 connector clicks into the notch on the coaxial cable.


Chapter 10

Installing or removing the fan tray

This chapter describes how to replace a fan tray in the 8006 Chassis.

The 8006 Chassis uses a single fan tray that is installed on the right side of the chassis (Figure 115). The fan tray contains eight high-capacity, multiple-speed fans and a control/monitor circuit board.

Figure 115 Fan tray

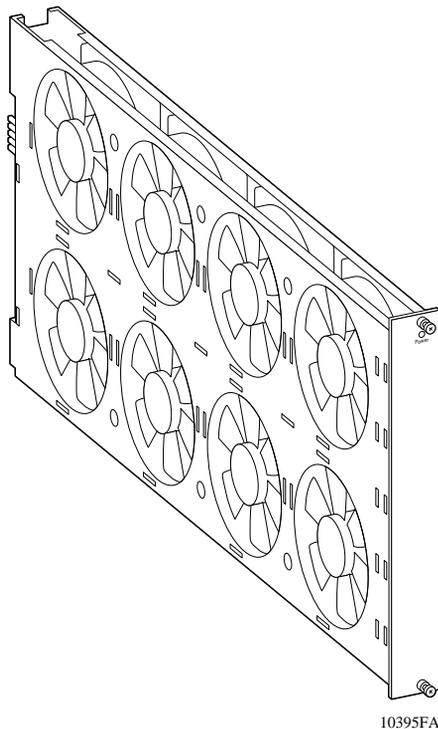

If one of the fans in the tray fails, the LED lights amber. In such a case, replace the fan tray as quickly as possible to maintain high-availability operation. Failure to replace the tray could cause the chassis to overheat.

Replacing the fan tray

You can replace the fan tray in the 8006 Chassis with the power on or off.


To replace the fan tray:

- 1 Loosen the 2 retaining screws that fasten the fan tray to the chassis (Figure 116).
- 2 Wait 10 seconds for the fans to stop turning, and then pull the fan tray out of the 8006 Chassis (Figure 116).



Warning: Grasp the fan tray at the middle of the front panel, and be careful to keep your fingers out of the fan blades.

Figure 116 Removing the fan tray

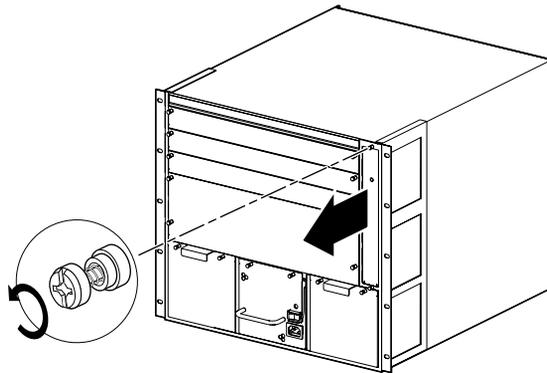


9590FA

- 3 Slide the new fan tray into the chassis until the connectors at the rear of the fan tray engage (Figure 117).

If the 8006 Chassis is on, the fans start turning when the fan tray connectors fully engage.


Figure 117 Installing the fan tray

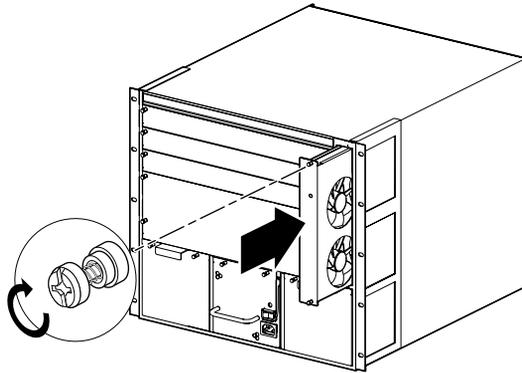

9591FA

- 4 Tighten the 2 captive screws to fasten the fan tray to the chassis ([Figure 117](#)).
- 5 With the chassis power on, verify that the green status LED is lit ([Figure 118](#)).

Figure 118 Fan tray LED

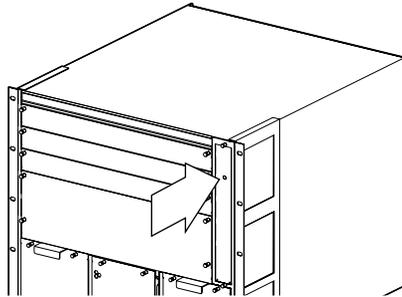

9592FA

Chapter 11

Operating the 8000 Series switch

This chapter describes some of the routine tasks of operating the 8000 Series switch. It includes the following topics:

Topic	Page
Turning the 8000 Series switch on and off	166
Verifying a successful installation	169
Initializing the 8672ATME, 8672ATMM, and 8683POSM Modules	170
Configuring the chassis to operate in 32K or 128K Mode	176
Resetting the 8000 Series switch	177
Removing flash memory cards	177
Installing flash memory cards	178
Protecting memory card files	179
Troubleshooting	180

Turning the 8000 Series switch on and off


If the 8006 Chassis has DC power supplies, go to the next section [“Turning DC power supplies on and off.”](#) If the 8006 Chassis has AC-DC power supplies, go to [“Turning AC power supplies on and off”](#) on page 168.

Turning DC power supplies on and off

To turn on a 8000 Series switch with a DC power source:

- 1 Make sure that the power cables are connected to the switch and that the DC power source is turned on.
- 2 Move the power switch on each DC power supply to the on position ([Figure 119](#)).

Figure 119 DC power switch

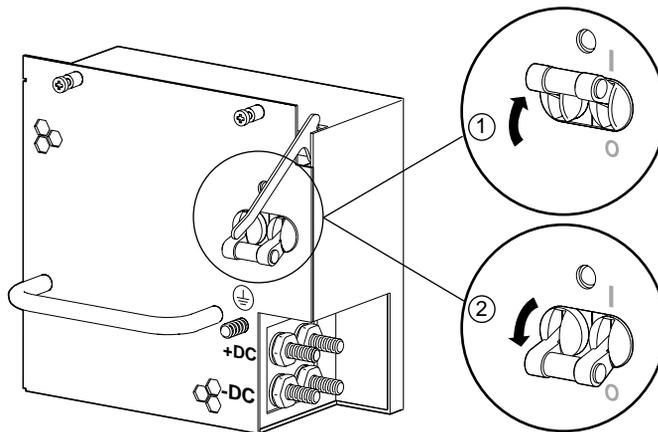

1 = On
2 = Off

10298FA

- 3 Verify that the power output LED for each power supply lights green.
- 4 Verify that air is flowing from the cooling fans out through the vents of the chassis.

If you cannot feel air flow from the chassis vents, or if the power output LED remains off, do the following:


- 1 Turn the power switch on each power supply to the off position.
- 2 Wait 1 minute.
- 3 Turn the power switch on each power supply to the on position.

If the problem persists, contact the Nortel Networks Technical Solutions Center.

After you turn on the 8000 Series switch, each module automatically initiates a diagnostic test to verify proper module function (see [“Verifying a successful installation” on page 169](#)).

To turn off a 8000 Series switch with a DC power source, move each power switch to the off position ([Figure 120](#)).

Figure 120 DC power switch

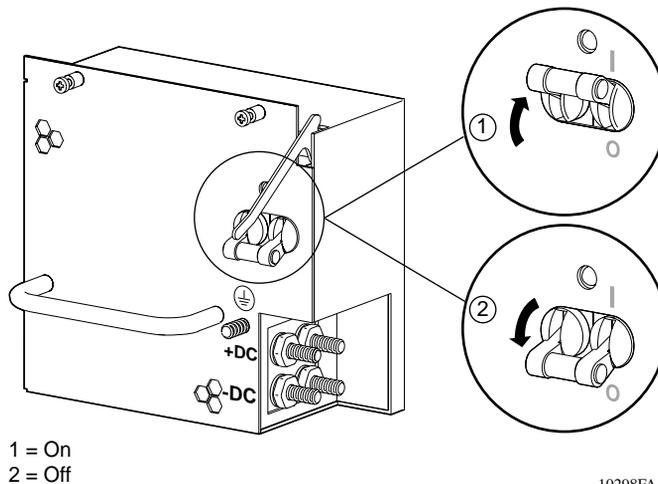


Turning AC power supplies on and off

To turn on a 8000 Series switch with an AC power supply:

- 1 Verify that the AC power cords are connected to AC power outlets.
- 2 Move the power switch on each AC power supply to the on position (Figure 121).

Figure 121 AC power switch in on position

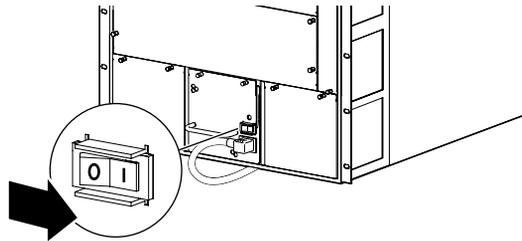

8964FA



Note: When you first install a 8006 Chassis that requires two power supplies, you must turn on both power supply units within 2 seconds of each other. If you wait longer to turn on the second power supply, both power supplies shut down. To correct this condition, turn off both power supplies, wait at least 30 seconds, and then turn on both power supplies again within 2 seconds.

- 3 Verify that the power output LED for each power supply lights green.
- 4 Verify that air is flowing from the cooling fans out through the vents of the chassis.

If you cannot feel air flow from the chassis vents, or if the power output LED remains off, do the following:


- 1 Turn the power switch on each power supply to the off position.
- 2 Wait 1 minute and then turn each power switch to the on position.

If the problem persists, contact the Nortel Networks Technical Solutions Center.

After you turn on the 8000 Series switch, each module automatically initiates a diagnostic test to verify proper module function (see [“Verifying a successful installation” on page 169](#)).

To turn off a 8000 Series switch with an AC power source, move each power switch to the off position ([Figure 122](#)).

Figure 122 AC power switch in off position

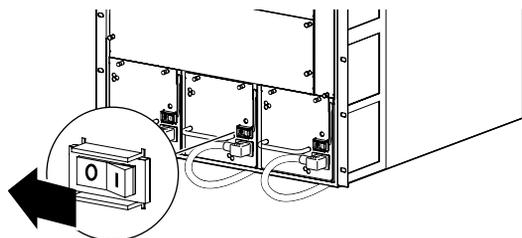

8972FA

Verifying a successful installation

In a normal power-up sequence, the LEDs light as follows:

- 1 When power is applied to the 8000 Series switch, the green LED on each power supply and the fan tray turns on within 5 seconds.
- 2 Each module initiates a self-test, during which the port and module LEDs display various patterns to indicate the progress of the self-test.
- 3 Upon successful completion of the self-test (within 10 seconds after power is applied), the Online LED lights on each module.

If the LEDs on the modules light in this sequence, your installation is successful. Contact your network administrator to verify that the 8000 Series switch is now connected to the network.

If the LEDs do not light in this sequence, contact your local Nortel Networks Technical Solutions Center.

Initializing the 8672ATME, 8672ATMM, and 8683POSM Modules

If you have installed a 8672ATME, 8672ATMM, or 8683POSM Module with at least one MDA into a 8006 chassis, the 8691SF Module retrieves the image file to download to these modules. Ensure that the installed 8691SF Module has a PCMCIA card inserted and that the PCMCIA card contains the correct image for the installed module. See [Table 47](#) for a list of image filenames.

Table 47 Image filenames for 8672ATME/8672ATMM/8683POSM

Module	Image filename
8672ATME	p80t3300.dld
8672ATMM	p80t3300.dld
8683POSM	p80p3300.dld

For more information about the PCMCIA slot and the 8691SF Module, refer to [“8691SF Module”](#) on [page 74](#).

The following sections describe the initialization process for the 8672ATME, 8672ATMM, and 8683POSM Modules.

Initializing the 8672ATME and 8672ATMM Modules

The 8691SF Module retrieves the image file to download to the 8672ATME or 8672ATMM Module. First, the 8691SF Module searches the host flash memory for the file, then the PCMCIA card. The 8691SF Module downloads the image file to the 8672ATME, or 8672ATMM and identifies which MDAs are installed. The screen displays a message similar to the following:

```
Using image = /slot/p80t3200.dld for ATM card download.
ATM card: Slot 4 MDA [OC-12c MM] [Quad OC-3c MM] Ver=2.2
```

If the image file is not found in either the flash memory or the PCMCIA, the system stops and the screen displays an error message such as:

```
ERROR Task=rcStart Couldn't find an ATM download image!
Aborting card initialization in Slot=4
```

or:

```
ERROR Task=rcStart portPresent:port=X/X, invalid port Type
```

The 8672ATME or 8672ATMM Module requests a redownload from the switch fabric module, and the screen displays the following message:

```
Redownload requested by ATM card in slot <number>.
```

If the image download is unsuccessful, the screen displays the following message:

```
ATM card in slot <number> not ready.
```

If there are three unsuccessful attempts to download, the screen displays the message shown in [Figure 123](#).

Figure 123 Unsuccessful download screen output

```
Copyright (c) 2002 Nortel Networks, Inc.
CPU Slot 5:   PPC 740 Map B
Version:     3.3.0.0/097
Creation Time: Aug 27 2002, 17:51:07
Hardware Time: SEP 05 2002, 13:58:01 UTC
Memory Size: 0x04000000
Start Type:  warm
CENTENNIAL  ATA
/flash/ - Volume is OK
Loaded boot configuration from file /flash/boot.cfg
Press <Return> to stop auto-boot...
/pcmcia/ - Volume is OK
4739529 to 15708054 (15708054)
Starting at 0x10000...
CENTENNIAL  ATA
/flash/ - Volume is OK
Passport 8600 System Software Release REL3.3.0.0_B097
Copyright (c) 1996-2002 Nortel Networks, Inc.
[09/05/02 14:58:20] System boot
/pcmcia/ - Volume is OK
[09/05/02 14:58:20] Passport System Software Release
REL3.3.0.0_B097
[09/05/02 14:58:21] Card inserted: Slot=1 Type=8672ATME
[09/05/02 14:58:21] Card inserted: Slot=2 Type=8683POS
[09/05/02 14:58:21] Card inserted: Slot=3 Type=8608SX
[09/05/02 14:58:21] Card inserted: Slot=4 Type=8608GT
[09/05/02 14:58:21] Card inserted: Slot=5 Type=8690SF
[09/05/02 14:58:21] Initializing 8690SF in slot #5 ...
[09/05/02 14:58:24] Initializing 8672ATME in slot #1 ...
[09/05/02 14:58:41] ERROR Task=rcStart Couldn't find an ATM download
image!
(File name: /flash/p80t3300.dld or /pcmcia/p80t3300.dld)
Slot 1 ATM card is put offline!
[09/05/02 14:58:41] Initialization of card failed for Slot 1 !
[09/05/02 14:58:41] Initializing 8683POS in slot #2 ...
[09/05/02 14:58:43] Initializing 8608SX in slot #3 ...
[09/05/02 14:58:46] Initializing 8608GT in slot #4 ...
[09/05/02 14:58:50] Loading configuration from /flash/config.cfg
[09/05/02 14:58:50] The system is ready
[09/05/02 14:58:50] Booted with PRIMARY boot image source - /pcm-
cia/p80a3300b097
```

After the image loads onto the 8672ATME or 8672ATMM Module, it performs a series of self-diagnostic tests. If the module fails the diagnostics, the screen displays the following message:

```
Fatal bring up error on ATM card in slot <number>.
```

If you see this message, contact a service representative. For information on contacting service representatives, refer to [“How to get help”](#) on [page 22](#).

When the image successfully loads onto the 8672ATME or 8672ATMM Module, the screen displays the following message:

```
ATM card in slot <number> is online.
```



Note: If you accidentally delete the image file, reset the 8691SF Module and redownload the file. For information on how to reset the 8691SF Module, see [“Resetting the 8000 Series switch”](#) on [page 177](#).

If you have one MDA installed, you can proceed to configure the 8672ATME or 8672ATMM Module as described in *Using the 8672ATME and 8672ATMM Modules*.



Note: You must save your configuration (using either the CLI or Device Manager) to preserve the configuration changes you made to the 8672ATME or 8672ATMM Module across reboots.

Initializing the 8683POSM Module

The 8691SF Module retrieves the image file to download to the 8683POSM Module. First, the 8691SF Module searches the host flash memory for the file, then the PCMCIA card. The 8691SF Module downloads the image file to the 8683POSM Module and identifies which MDAs are installed. The screen displays a message similar to the following:

```
Downloading POS image to slot <number> .....Done (file  
name and image size.)
```

If the image file is not found in either the flash memory or the PCMCIA, the screen displays this message:

POS image file name not found either in FLASH or PCMCIA.

If the image download is unsuccessful, the screen displays the following message:

Card is off line.

The 8683POSM Module requests a redownload from the 8691SF module, and the screen displays this message:

Redownload requested by POS card in slot <number>.

The 8683POSM Module attempts a redownload three times. If the download is still unsuccessful, the 8683POSM Module goes offline and the screen displays this message:

Redownload of POS card in slot <number> failed maximum 3 times; POS card is offline.

When the 8683POSM Module boots, the redownload count is reset to 0. After the image loads onto the 8683POSM Module, it performs a series of self-diagnostic tests. If the module fails the diagnostics, the screen displays the following message:

Port <number> for POS card in slot <number> failed diagnostics.

If you see this message, contact a service representative. For information on contacting service representatives, refer to [“How to get help”](#) on [page 22](#).

When the image successfully loads onto the 8683POSM Module, the screen displays the following message:

POS card in slot <number> is online.



Note: If you accidentally delete the image file, reset the 8691SF Module and redownload the file. For information on how to reset the 8691SF Module, see [“Resetting the 8000 Series switch”](#) on [page 177](#).

If you have one MDA installed, you can proceed to configure the 8683POSM Module as described in *Using the 8683POSM Module*.



Note: You must save your configuration (using either the CLI or Device Manager) to preserve the configuration changes you made to the 8683POSM Module across reboots.

If you have one MDA installed, you can proceed to configure the 8683POSM Module as described in *Using the 8683POSM Module*.



Note: You must save your configuration (using either the CLI or Device Manager) to preserve the configuration changes you made to the 8683POSM Module across reboots.

Configuring the chassis to operate in 32K or 128K Mode

You can configure the chassis to operate either in 32K or 128K extended memory mode (MMode) if you installed a 8691SF CPU Module.

When you configure a chassis you need to ensure that a system having both 128K and 32K modules will reboot in the desired mode. The boot mode is determined by the type of modules installed in the chassis and whether 128K mode is enabled (Table 48).

Table 48 Boot mode at startup

if configuration is:	And 128K mode status at startup is:	Then:
All 128K modules	Enabled	System starts in 128K mode
Mixed modules	Enabled	System starts in 128K mode. Non-128K modules are disabled.
All non-128K modules	Enabled	Non-128K modules are disabled.
All 128K modules	Disabled	System starts in 32K mode
Mixed modules	Disabled	System starts in 32K mode
All non-128K modules	Disabled	System starts in 32K mode

For information on using Device Manager or the CLI to configure 128K records, see *Platform and System Management*.

Resetting the 8000 Series switch

Figure 124 shows the location of the Reset button on the 8190SM Module.

Figure 124 Reset button on the 8190SM Module


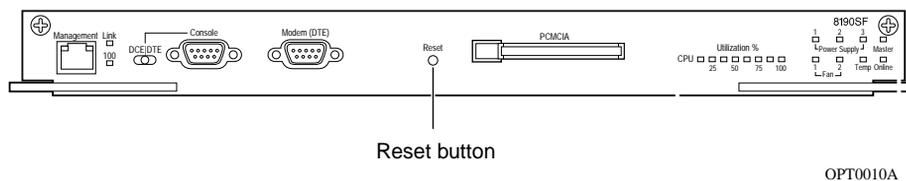


Figure 125 shows the location of the Reset button on the 8691SF Module.

Figure 125 Reset button on the 8691SF Module

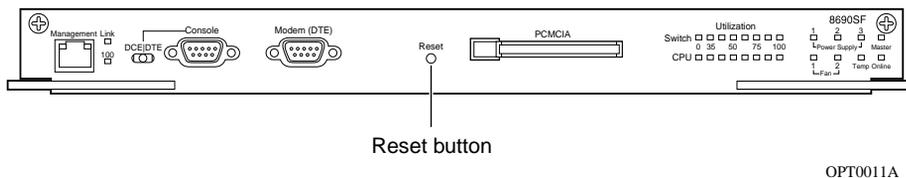

You can use the Reset button to reboot the 8000 Series switch hardware without cycling power. To *warm-start* the 8000 Series switch (no diagnostic tests run), press the Reset button for less than 5 seconds.


Removing flash memory cards

To remove flash memory cards from the 8190SM Module or the 8691SF Module:

- 1 Press the eject button to the right of the memory card receptacle on the 8190SM Module or the 8691SF Module (Figure 126).

The card pops out slightly.

Figure 126 Removing a flash memory card

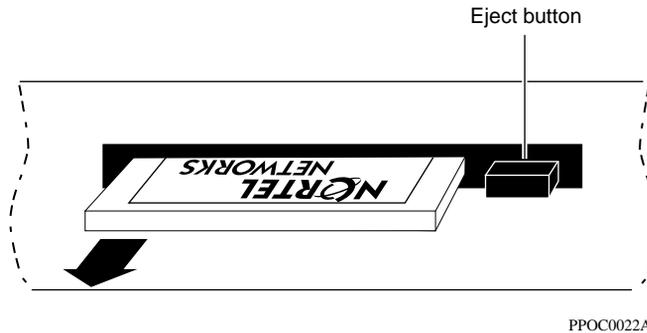

PPOC0022A

- 2 Pull the flash card out of the card receptacle.

Installing flash memory cards




Caution: You cannot use the Accelar 1200 PCMCIA card in 8000 Series equipment.

To install a flash memory card in a 8190SM Module or a 8691SF Module:

- 1 Position the card with the label facing up and the insert arrow pointing toward the card receptacle (Figure 127).
- 2 Insert the card into the card receptacle (Figure 127).

Figure 127 Inserting a flash memory card

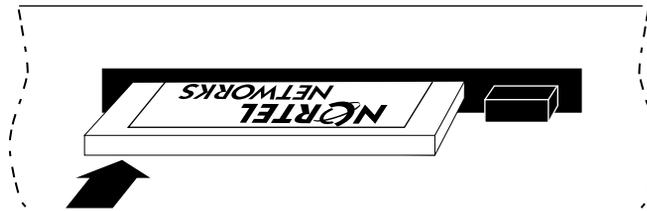

PPOC0021A

- 3 Gently push the card in until it fits snugly in place.

Protecting memory card files

Nortel Networks ships each memory card with its read-write protect switch in the unprotected position. After successfully loading the configuration file and saving your configuration, you might want to write-protect the memory card for backup purposes.



Note: You typically do not operate a 8000 Series switch with a write-protected memory card. You should make a copy of your configuration on another memory card, write-protect that card, and store it in a safe place.


To change memory card protection:

- 1 Remove the memory card from the 8006 Chassis.
 - a Press the eject button to the right of the memory card receptacle (see [Figure 126 on page 178](#)).
 - b Pull the card out of the card receptacle.



Caution: You must remove the card from the 8006 Chassis before changing the read-write protection. Failure to remove the card may result in improper write protection.

- 2 Locate the read-write protect switch on the edge opposite the arrow on the memory card ([Figure 128](#)).

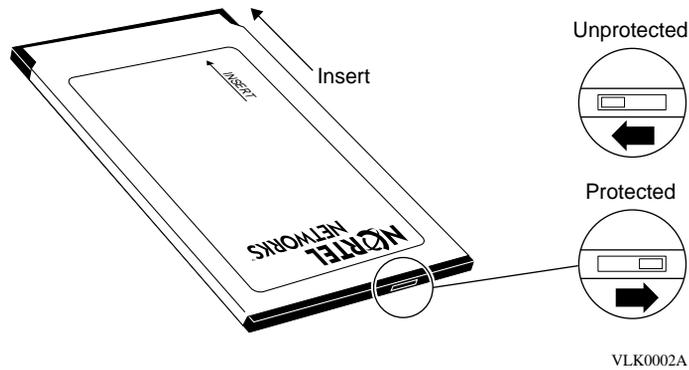Figure 128 Memory card read/write protect switch

- 3 Adjust the read/write protect switch.
- 4 Reinsert the memory card into the card receptacle (see [Figure 127 on page 178](#)).
 - a Position the card with the label facing up and the insert arrow pointing toward the card receptacle.
 - b Insert the card into the card receptacle.
 - c Gently push the card in until it fits snugly in place.

Troubleshooting

The following sections provide troubleshooting information for some of the more common problems that you may encounter with the 8000 Series switch.

Topic	Page
LED indications of problems	181
Apparent module failure	182
Failure to get a login prompt from the Console port	182
Cable connection problems	183
Autonegotiation mode problems for 8100 modules	184

LED indications of problems

Table 49 lists possible problems indicated by the LEDs on the switch modules and suggests corrective action.

Table 49 LED problem indicators

Symptom	Probable cause	Corrective action
Green AC power supply LEDs are off.	The switch is not receiving AC power.	Verify that each AC power cord is fastened securely at both ends and that power is available at each AC power outlet. Verify that each power supply is turned on.
The Link/Activity LED for a connected port is off or does not blink (and you believe that traffic is present).	The switch is experiencing a port connection problem, or the switch's link partner is not autonegotiating properly.	Verify that the cable connections to the link partner are correct. Verify port configuration parameters for both ends of the connection. Move the cable to another port to see whether the problem occurs on the new port.
The Link/Activity LED blinks continuously.	There may be a port configuration error.	Verify port configuration parameters for both ends of the connection.
The Online LED on an I/O module is amber.	Software incompatibility exists, or the module cannot communicate with the master module over the backplane.	Use the <code>show log</code> command to check the system log for indications of communication problems. Use the <code>boot</code> command to download a new software image.
The Master LED on a module in slot 1 or slot 2 is amber.	The module has detected a system clock generation failure on its own circuitry.	Replace the module; make sure that it is in the correct slot. Note: This LED has significance only for the module in slot 1 or slot 2 that provides the clock function for the switch.
The Fault LED is blinking amber.	A chassis failure has been detected.	From the console management station, use the <code>show log</code> command to check the system log for information about hardware failures. Check the fan tray in the chassis to make sure that both fans are running. Check the switch power supplies; one may have stopped functioning. The module may have failed to read the MAC address from the chassis backplane. If this is the case, arrange to replace the chassis.
The Fault LED is steady amber.	The module failed its power-on self-test. A diagnostic or hardware failure has been detected.	Replace the module.
No LEDs are lit.	A hardware failure has been detected.	Turn the switch power off and then turn it on again.

Apparent module failure

If a module failure occurs, check for possible backplane connection problems. Make sure that the module is correctly seated in the backplane connector and that the retaining screws are securely tightened.

If a module fails during module initialization and the replacement module is the same module type, in rare cases the new module may not initialize.

To workaroud this issue, follow the steps in either workaroud 1 or 2.

Module failure workaroud 1

- 1 Remove the faulty module.
- 2 Insert a module type that is different from the module type removed in Step 1 and wait for this replacement module to initialize.
- 3 Remove the module inserted in Step 2.
- 4 Insert a new module model in the same slot as the faulty module resided. This new module model must be identical to the module model removed in Step 1.


Module failure workaroud 2

- 1 Remove the faulty module.
- 2 Insert a new module.
- 3 Reboot the chassis.

If the module still fails to operate, contact the Nortel Networks Technical Solutions Center for assistance.

Failure to get a login prompt from the Console port

If you connect a terminal to the Console port of the Module 8190SM or the Module 8691SF and you fail to get a login prompt, the port may have an incorrect DCE/DTE setting. Try moving the DCE/DTE switch from its current setting to the other position ([Figure 129](#)).

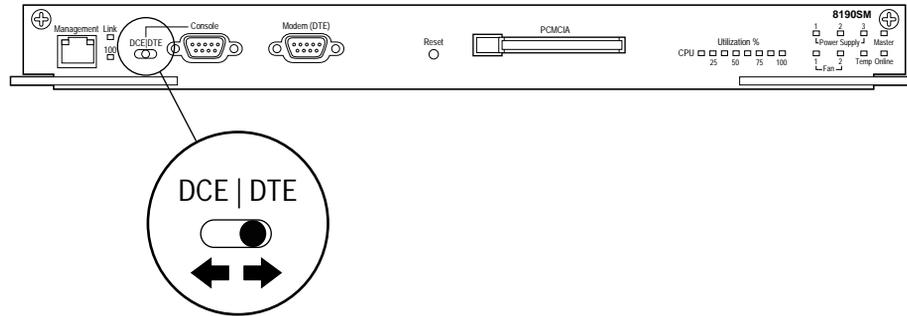Figure 129 DCE/DTE switch

10456EA

Cable connection problems

Port connection problems can usually be traced to a poor cable connection or to an improper connection of the port cables at either end of the link. To remedy such problems, make sure that the cable connections are secure and that the cables are connected to the correct ports at both ends of the link.



Note: Port connection problems can also be traced to the autonegotiation mode (see [“Autonegotiation mode problems for 8100 modules” on page 184](#)).

10BASE-T cables

Cabling for 10BASE-T networks can consist of two-pair Category 3, 4, or 5 unshielded twisted pair (UTP) wiring. However, to prepare for future upgrades to Fast Ethernet, Nortel Networks strongly recommends that you use all Category 5 cable in your network.

Ethernet 10BASE-T network installations use cables consisting of two pairs of twisted pair wires—one pair to send data and one to receive data. These wires must connect to another 10BASE-T station that has the sending pair attached to its receiving pair and vice versa. If the two nodes are wired alike, they both attempt to send data out on the same RJ-45 pins. In such a case, a straight-through cable would not work. However, a crossover cable would operate normally.

The 8100 modules are designed to have Ethernet network interface cards (NICs) connect directly to their RJ-45 ports using straight-through (MDI) cables. However, if a 8100 module must connect to a hub or another switch that follows usual conventions, a crossover cable (MDI-X) is required.

100BASE-T cables

The 100 Mb/s ports are designed to operate using Category 5 UTP cabling only. Category 5 UTP cable is a two-pair cable certified to handle up to 100 Mb/s bandwidth. To minimize crosstalk noise, maintain the twist ratio of the cable up to the point of termination; untwist at any termination should not exceed 0.5 in. (1.27 cm).

For best performance with respect to noise immunity and emissions, the unused pairs in the two-pair cable should be terminated at their characteristic impedance (that is, 100 ohms) in the equipment at each end of the cable. All Nortel Networks 100BASE-TX equipment includes such a Common Mode Termination (CMT).

8100 Series fiber MDA cables

The 8100 Series fiber MDAs use only multimode 62.5/125 μm fiber cable. The Nortel Networks 100BASE-FX MDA is not supported on single-mode fiber. SC connectors are used on 2-port 100BASE-FX MDAs, and MT-RJ connectors are used on 4-port 100BASE-FX MDAs.

GBIC cables

Cables for the GBICs vary depending on the specific GBIC type. For information about the cable requirements for GBICs, see [“GBICs” on page 195](#) (8100 modules) and [“GBICs” on page 211](#) (8600 modules).

Autonegotiation mode problems for 8100 modules

Port connection problems can occur when a port (or station) is connected to another port (or station) that is not operating in a compatible mode (for example, connecting a full-duplex port on one station to a half-duplex port on another station).

The 8100 modules negotiate port speeds according to the IEEE 802.3 1998 Clause 28 autonegotiating standard. The switch adjusts (autonegotiates) its port speed and duplex mode to match the best service provided by the connected station, up to 100 Mb/s in full-duplex mode.

The following autonegotiation problems can occur:

- If the connected station uses a form of autonegotiation that is not compatible with the IEEE 802.3 1998 Clause 28 autonegotiating standard, the 8100 module cannot negotiate a compatible mode for correct operation.
- If the autonegotiation feature is not present or is not enabled at the connected station, the 8100 module may not be able to determine the correct duplex mode.

In both situations, the 8100 module autosenses the speed of the connected station and, by default, reverts to half-duplex mode. If the connected station is operating in full-duplex mode, it cannot communicate with the switch.

To correct this mode mismatch problem:

- 1** Use the CLI to disable autonegotiation for the suspect port.

See *Configuring Network Management and Diagnostics* for the appropriate CLI commands.

- 2** Use the CLI to set the speed and duplex mode of the port to match the speed and duplex mode of the connected station.

You may need to try several settings before you find the correct speed/duplex mode for the connected station.

If the problem persists, follow these additional steps:

- 1** Using the CLI, disable the autonegotiation feature at the connected station.

- 2 Manually set the speed/duplex mode of the connected station to the same speed/duplex mode that you manually set for the 8100 module port.



Note: Nortel Networks recommends that you manually set the 8100 Module port to the desired speed/duplex mode when connecting to any of the following Nortel Networks products:

- Nortel Networks 28000 product family
 - Nortel Networks 58000 product family
 - BayStack* 302T switch (100 Mb/s port)
-

Appendix A

Chassis technical specifications

This appendix provides physical, environmental, and electrical specifications for the 8006 Chassis.

Physical specifications

Height:	15.8 in. (40.1 cm)
Width:	17.5 in. (44.5 cm)
Depth:	19.9 in. (50.5 cm)
Weight (empty):	49 lb (22 kg)
Weight (fully loaded):	140 lb (63 kg)
Cooling system:	
Fan tray:	1 per chassis
Fans:	8 per fan tray
Thermal sensors:	1 per fan tray

Environmental specifications

Operating temperature:	0°C to 40°C (32°F to 104°F)
Storage temperature:	-25°C to 70°C (-13°F to 158°F)
Operating humidity:	85% maximum relative humidity, noncondensing
Storage humidity:	95% maximum relative humidity, noncondensing
Operating altitude:	3048 m (10,000 ft) maximum
Storage altitude:	3048 m (10,000 ft) maximum
Free fall/drop:	ISO 4180-s, NSTA 1A
Vibration:	IEC 68-2-6/34
Shock/bump:	IEC 68-2-27-29

8004AC Power Supply specifications

Input voltage:	100 to 240 VAC
Input frequency:	47 to 63 Hz
Input current:	12- 6A
Input power:	1308 W
Input volt amperes:	1.3 kilovolt amperes (kVA)
Output power:	850 W maximum (110-240 VAC) derated to 780 W maximum (100 -109 VAC)
Thermal output:	4464 Btu/hr maximum

8004DC Power Supply specifications

Nominal input voltage:	-48 / -60 VDC
Input current:	29 - 23 A
Input power:	1308 W
Input volt amperes:	1.3 kVA
Output power:	850 W
Thermal output:	4464 Btu/hr maximum
Crimp lugs:	
Two-hole lug terminal:	Panduit LCD6-14A-L or equivalent
One-hole terminal:	Panduit LCA6-14H-L or equivalent

System power specifications

	8004AC	8004DC
Input voltage:	100-240 VAC	-48/-60 VDC
Input current:	3 x 12 - 6 A	3 x 29 -23 A
Output power	1700 W maximum Derated 1560 W maximum @ < 110 VAC	1700 W maximum
Thermal output	8928 Btu/hr maximum	8928 Btu/hr maximum

Electromagnetic emissions

Meets requirements of:

US:	FCC CFR47 Part 15, Subpart B, Class A
Canada:	ICES-003, Issue-2, Class A
Australia/New Zealand:	AS/NZS 3548:1995, Class A
Japan:	VCCI-V3/97.04, Class A
Taiwan:	CNS 13438, Class A
Europe:	EN 55022-1998 Class A; EN 61000-3-2/A14, EN 61000-3-3
Global:	CISPR 22-1997 Class A CE Mark

Electromagnetic susceptibility:

EN55024:1998/CISPR 24:1997

Safety agency approvals

US:	UL60950
Canada:	CSA 22.2 No. 60950
Australia/New Zealand:	AS/NZS 3260
Mexico:	NOM-019-SCFI-1998

Appendix B

8100 module technical specifications

This appendix provides technical specifications for the 8100 modules. The appendix includes the following information:

Topic	Page
General specifications	192
8108GBIC Module	194
8116FX Module	197
8132TX Module	198
8148TX Module	201
8190SM Module	202
MDI and MDI-X connections	205

General specifications

Standards supported

IEEE Std 802.3, 1998 Clause 4 Media Access Control CSMA/CD
IEEE Std 802.3, 1998 Clause 14 10Base T New
IEEE Std 802.3, 1998 Clause 21 100Base T
ANSI/IEEE Std 802.1D, 1998 Media Access Control (MAC) Bridges
IEEE 802.1Q Virtual Bridged Local Area Networks
IEEE Std 802.3, 1998 Clause 34-42
IEEE Std 802.3, 1998 Clause 31 (MAC Control)

Electromagnetic emissions

Meets requirements of:

US:	FCC CFR47 Part 15, Subpart B, Class A
Canada:	ICES-003, Issue-2, Class A
Australia/New Zealand:	AS/NZS 3548:1995, Class A
Japan:	VCCI-V3/97.04, Class A
Taiwan:	CNS 13438, Class A
Europe:	EN 55022-1998 Class A; EN 61000-3-2/A14, EN 61000-3-3
Global:	CISPR 22-1997 Class A CE Mark

Electromagnetic susceptibility:

EN55024:1998/CISPR 24:1997

Safety agency approvals

US:	UL60950
Canada:	CSA 22.2 No. 60950
Australia/New Zealand:	AS/NZS 3260
Mexico:	NOM-019-SCFI-1998

Data rate and encoding

10 Mb/s Manchester encoding

100 Mb/s 4B/5B encoding

1000 Mb/s 8B/10B encoding

Environmental specifications

Operating temperature:	5°C to 40°C (41°F to 104°F)
Storage temperature:	-25°C to 70°C (-13°F to 158°F)
Operating humidity:	85% maximum relative humidity, noncondensing
Storage humidity:	95% maximum relative humidity, noncondensing
Operating altitude:	3048 m (10,000 ft) maximum
Free fall/drop:	ISO 4180-s, NSTA 1A
Vibration:	IEC 68-2-6/34
Shock/bump:	IEC 68-2-27/29

Performance specifications (64-byte packets)

Aggregate throughput:	3,000,000 pps maximum
Switched forwarding rates:	For 10 Mb/s: 14,880 pps maximum For 100 Mb/s: 148,810 pps maximum For 1000 Mb/s: 1,488,100 pps maximum
Latency:	9 ms

Address database size

Addressing:	48-bit MAC address
Frame Length:	64 to 1518 bytes (IEEE 802.1Q Untagged) 64 to 1522 bytes (IEEE 802.1Q Tagged)



Note: The GBICs installed in the 8108GBIC Module must also meet these standards. In addition, the GBICs are certified to FDA requirement 21 CFR, Chapter 1, Subchapter J and the international requirements of IEC 60825 for Class 1 Laser.

8108GBIC Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8 lb (4 kg)

Electrical specifications

Input power:	65 W maximum
Thermal rating:	224 Btu/hr maximum

MTBF rating	93,284 hr
--------------------	-----------

Connector type	Duplex SC
-----------------------	-----------

GBICs

Physical specifications

Height:	12 mm
Width:	30 mm
Depth:	65 mm
Weight:	Varies with GBIC type

Connector type Duplex SC

1000BASE-SX GBIC

Cable specifications

Type:	62.5 μm or 50 μm multimode fiber
Maximum distance:	1804 ft (550 m)

Optical Specifications

Wavelength:	850 nm (VCSEL)
Average transmit output power:	-9.5 to -4 dBm
Average receiver sensitivity:	-17 dBm (minimum)

1000BASE-LX GBIC

Cable specifications

Type:	62.5 μm multimode fiber or 10 μm single-mode fiber Note: Multimode fiber may require a DMD patch cord.
Maximum distance:	Multimode fiber: 1804 ft (550 m) Single-mode fiber: 16,405 ft (5 km)

Optical specifications

Wavelength:	1300 nm (FP laser diode)
Average transmit output power:	-5.2 to 0 dBm
Average receiver sensitivity:	-22 dBm (minimum)

1000BASE-XD GBIC

Cable specifications

Type:	9 μ m single-mode fiber
Maximum distance:	31 mi (50 km)

Note: For a shorter link distance, you may need an in-line attenuator to prevent overloading the receiver.

Optical specifications

Wavelength:	1550 nm (DFB laser diode)
Average transmit output power:	-5.2 to 0 dBm
Average receiver sensitivity:	-24 dBm

1000BASE-ZX GBIC

Cable specifications

Type:	9 μ m single-mode fiber
Maximum distance:	43 mi (70 km)

Note: For a shorter link distance, you may need an in-line attenuator to prevent overloading the receiver.

Optical specifications

Wavelength:	1550 nm (DFB laser diode)
Average transmit output power:	0 to 5.2 dBm
Average receiver sensitivity:	-22 dBm (minimum)

8116FX Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8 lb (3.6 kg)

Electrical specifications

Input power:	76 W maximum
Thermal rating:	261 Btu/hr maximum

MTBF rating	102,814 hr
--------------------	------------

Connector type	MT-RJ
-----------------------	-------

Cable specifications

Type:	62.5 μm or 50 μm multimode fiber optic cable
Maximum distance:	1352 ft (412 m) for half-duplex links 6562 ft (2 km) for full-duplex links

Optical specifications

Wavelength:	1300 nm
Optical budget:	4 dB to 11 dB
Transmitter characteristics:	Minimum optical power: -20 dBm Maximum optical power: -14 dBm

8132TX Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.06 lb (4 kg approximate)

Electrical specifications

Input power:	75 W maximum
Thermal rating:	250 Btu/hr maximum

MTBF rating	244,700 hr
--------------------	------------

Connector types

10/100 Ethernet ports:	RJ-45 connector wired as MDI-X (Table 50)
------------------------	---


Cable specifications

Type:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Maximum distance:	328 ft (100 m)

Data port connectors

The data ports on the 8132TX Module are RJ-45 ports wired as MDI-X connectors ([Table 50](#)).

Table 50 8132TX Module port pin assignments

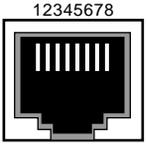Connector	Pin number	Signal
	1	Input receive data + (RX+)
	2	Input receive data - (RX-)
	3	Output transmit data + (TX+)
	6	Output transmit data - (TX-)
	4, 5, 7, 8	Not used

MDAs

450-1SR MDA, 450-1SX MDA

Required cable:	Multimode fiber optic
Maximum distance:	1804 ft (550 m)
Wavelength:	850 nm
Average transmit output power:	-9.5 to -4 dBm
Average receiver sensitivity:	-17 dBm (minimum)
Connector type:	SC

450-1LR MDA, 450-1LX MDA

Required cable:	Multimode or single-mode fiber optic
Maximum distance:	Multimode: 1804 ft (550 m) Single-mode: 9843 ft (3 km)
Wavelength:	1300 nm
Average transmit output power:	-5.2 to 0 dBm
Average receiver sensitivity:	-22 dBm (minimum)
Connector type:	SC

8100-4TX MDA

Required cable:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Connector type:	RJ-45

8100-2FX MDA

Required cable:	62.5/125 μ m multimode fiber optic
Maximum distance:	1804 ft (550 m)
Wavelength:	1300 nm
Average transmit output power:	-5.2 to 0 dBm
Average receiver sensitivity:	-22 dBm (minimum)
Connector type:	SC

8100-4FX MDA

Required cable:	62.5/125 μ m multimode fiber optic
Maximum distance:	1804 ft (550 m)
Wavelength:	1300 nm
Average transmit output power:	-5.2 to 0 dBm
Average receiver sensitivity:	-22 dBm (minimum)
Connector type:	MT-RJ

8148TX Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	9 lb (4 kg)

Electrical specifications

Input power:	75 W maximum
Thermal rating:	250 Btu/hr maximum

MTBF rating	72,213 hr
--------------------	-----------

Connector type	RJ-45 connector wired as MDI-X (Table 51)
-----------------------	---

Cable specifications

Type:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Maximum distance:	328 ft (100 m)

Port connectors

The ports on the 8148TX Module are RJ-45 ports wired as MDI-X connectors ([Table 51](#)).

Table 51 8148TX Module port pin assignments

Connector	Pin number	Signal
	1	Input receive data + (RX+)
	2	Input receive data - (RX-)
	3	Output transmit data + (TX+)
	6	Output transmit data - (TX-)
	4, 5, 7, 8	Not used

8190SM Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	7 lb (3.15 kg)

Electrical specifications

Input power:	75 W
Thermal rating:	250 Btu/hr maximum

MTBF rating 229,623 hr

Connector types

Ethernet Management port:	RJ-45 connector wired as MDI (Table 52)
Console port:	DB-9 connector (Table 53)
Modem port:	DB-9 connector (Table 54)


Required cables

Ethernet Management port:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Console port:	RS-232 cable
Modem port:	DTE-to-DCE cable (straight or transmit cable)

Management port

The Management port is a 10/100 Mb/s Ethernet port implemented on an RJ-45 connector wired as an MDI connection. [Table 52](#) shows the pin assignments for this connector.

Table 52 Pin assignments in the 8190SM Module Management port

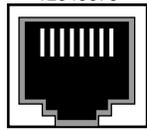Connector	Pin number	Signal
	1	Output transmit data + (TX+)
	2	Output transmit data - (TX-)
	3	Input receive data + (RX+)
	6	Input receive data - (RX-)
	4, 5, 7, 8	Not used


Console serial port

The Console serial port is implemented as a DB-9 connector. This port can operate as a data terminal equipment (DTE) or data communication equipment (DCE) device. Use the switch to the left of the port to set the port to DTE (left) or DCE (right). Default settings for this port are 9600 bits/s, 8 data bits, no parity, and one stop bit.

Because the Console port expects to receive data set ready (DSR) and clear to send (CTS) signals before transmitting, these control lines are required in the cabling. The Console port does not support any inbound flow control; that is, the port does not toggle control lines to indicate an input buffer full condition.

[Table 53](#) lists the pin assignments for the Console port for both the DTE and DCE settings.

Table 53 Pin assignments in the 8190SM Module console port

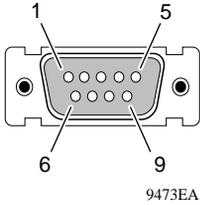Connector	Pin number	DCE signal	DTE signal
	2	RXD	TXD
	3	TXD	RXD
	4	DTR	DSR
	5	GND	GND
	6	DSR	DTR
	7	RTS	CTS
	9	CTS	RTS

Modem serial port

The Modem serial port is implemented on a DB-9 connector wired as a DTE connection.

To set up modem access, you need a DTE-to-DCE cable (straight or transmit cable) between the Modem port and a modem or terminal server. The cable should have the pin assignments listed in [Table 54](#).

Table 54 DTE-to-DCE pin assignments


Signal	Switch	Modem	
	Pin number	DCE DB-9 pin number	DCE DB-25 pin number
RXD	2	2	3
TXD	3	3	2
DTR	4	4	20
GND	5	5	7
DSR	6	6	6
RTS	7	7	4
CTS	8	8	5

MDI and MDI-X connections

For communication to take place between two devices, the transmitter of one device must connect to the receiver of the other device. The connection must be achieved through a crossover function, which could be a crossover cable or a port that implements the crossover function internally.

Ports that implement the crossover function internally are known as MDI-X ports (where “X” refers to the crossover function). The 8100 modules use MDI-X ports that allow you to connect directly to end stations without using crossover cables (Figure 130).


Figure 130 MDI-X to MDI cable connections

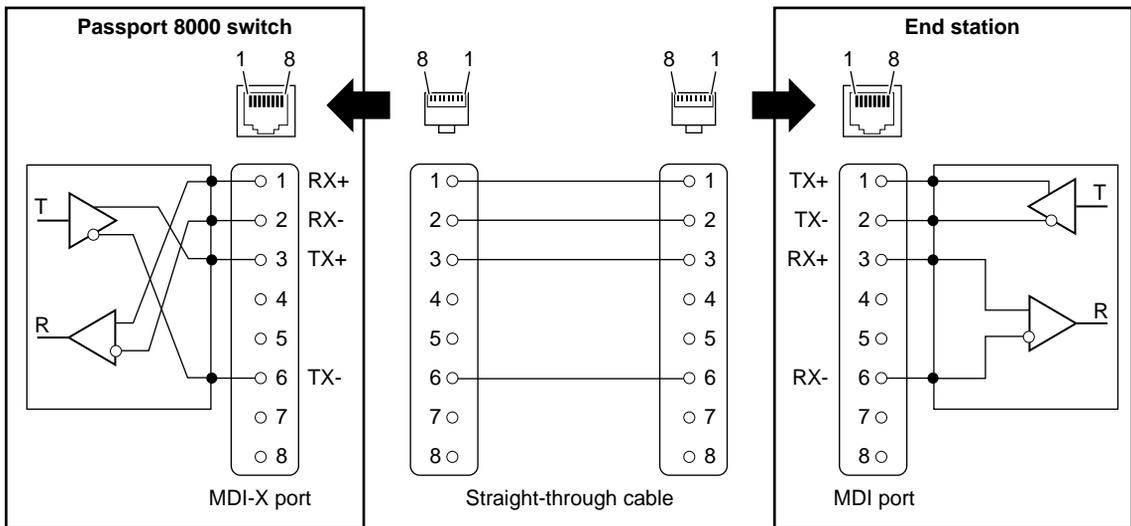

617EF

If you are connecting a device to the 8100 module that also implements MDI-X ports, use a crossover cable (Figure 131).

Figure 131 MDI-X to MDI-X cable connections

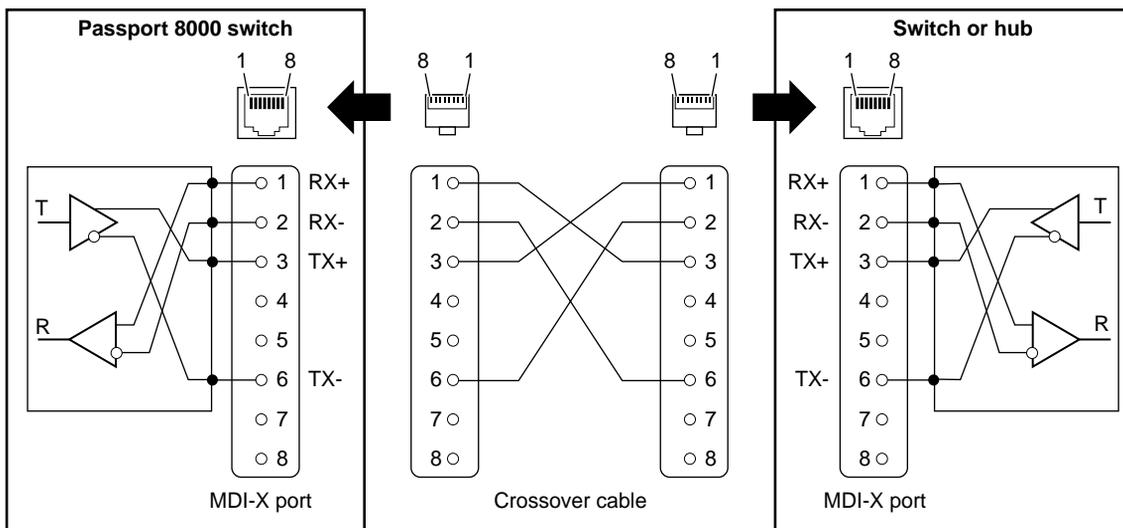

618EF

Appendix C

8600 module technical specifications

This appendix lists technical specifications for the 8600 modules. The appendix includes the following information:

Topic	Page
General specifications	208
8608GBE and 8608GBM Modules	210
8608GTE and 8608GTM Modules	214
8608SXE Module	216
8616GTE Module	217
8616SXE Module	218
8624FXE Module	219
8632TXE and 8632TXM Modules	220
8648TXE and 8648TXM Modules	221
8672ATME and 8672ATMM Modules	222
8681XLR Module	224
8681XLW Module	225
8683POSM Module	226
8691SF Module	227

General specifications

Standards supported

IEEE Std 802.3, Clause 4 Media Access Control CSMA/CD
IEEE Std 802.3, 1998 Clause 14 10Base T New
IEEE Std 802.3, 1998 Clause 21 100Base T
ANSI/IEEE Std 802.1D, 1998 Media Access Control (MAC) Bridges
IEEE 802.1Q Virtual Bridged Local Area Networks
IEEE Std 802.3, 1998 Clause 34-42
IEEE Std 802.3, 1998 Clause 31 (MAC Control)
IEEE Std 802.3ab
IEEE Std 802.3ae

Data rate and encoding

10 Mb/s Manchester encoding
100 Mb/s 4B/5B encoding
1000 Mb/s 8B/10B encoding
10 Gb/s 64/66B encoding

Environmental specifications

Operating temperature: 0°C to 40°C (32°F to 104°F)
Storage temperature: -25°C to 70°C (-13°F to 158°F)
Operating humidity: 85% maximum relative humidity, noncondensing
Storage humidity: 95% maximum relative humidity, noncondensing
Operating altitude: 3048 m (10,000 ft) maximum
Free fall/drop: ISO 4180-s, NSTA 1A
Vibration: IEC 68-2-6/34
Shock/bump: IEC 68-2-27/29

Performance specifications (64-byte packets)

Aggregate throughput: 10 Mb/s; 100 Mb/s; 1000 Mb/s: 100 million pps
10Gb/s: 8x488,100 pps

Routing and switching forwarding rates:

10 Mb/s: 14,880 pps maximum
100 Mb/s: 148,810 pps maximum
1000 Mb/s: 1,488,100 pps maximum
10 Gb/s: 8x1,488,100 pps maximum

Latency: 10 microseconds (LIFO)

Gigabit link power budget

1000BASE-SX:	7.5 dBm
1000BASE-SX SMF:	8.0 dBm
10GBASE-LR:	-6.0 dBm
10GBASE-LW:	-6.0 dBm

Address database size

Addressing:	48-bit MAC address
Frame length:	64 to 1518 bytes (IEEE 802.1Q Untagged) 64 to 1522 bytes (IEEE 802.1Q Tagged)

Electromagnetic emissions

Meets requirements of:

US:	FCC CFR47 Part 15, Subpart B, Class A
Canada:	ICES-003, Issue-2, Class A
Australia/New Zealand:	AS/NZS 3548:1995, Class A
Japan:	VCCI-V3/97.04, Class A
Taiwan:	CNS 13438, Class A
Europe:	EN 55022-1998 Class A; EN 61000-3-2/A14, EN 61000-3-3
Global:	CISPR 22-1997 Class A CE Mark

Electromagnetic susceptibility: EN55024:1998/CISPR 24:1997

Safety agency approvals

US:	UL60950
Canada:	CSA 22.2 No. 60950
Australia/New Zealand:	AS/NZS 3260
Mexico:	NOM-019-SCFI-1998



Note: The GBICs installed in the 8608GBE and 8608GBM Modules must also meet these standards. In addition, the GBICs are certified to FDA requirement 21 CFR, Chapter 1, Subchapter J and the international requirements of IEC 60825 for Class 1 Laser.

8608GBE and 8608GBM Modules

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	65 W maximum
Thermal rating:	224 Btu/hr maximum

MTBF rating 197,096 hr

Connector type Duplex SC

GBICs

Physical specifications

Height:	12 mm
Width:	30 mm
Depth:	65 mm
Weight:	Varies with GBIC type

Connector type Duplex SC

1000BASE-SX GBIC

Cable specifications

Type:	62.5 μm or 50 μm multimode fiber
Maximum distance:	1804 ft (550 m)

Optical specifications

Wavelength:	850 nm (VCSEL)
Average transmit output power:	-9.5 to -4 dBm
Average receiver sensitivity:	-17 dBm (minimum)

1000BASE-LX GBIC

Cable specifications

Type:	62.5 μm multimode fiber or 9 μm single-mode fiber
Maximum distance:	Single-mode fiber: 32,810 ft (10 km) Multimode fiber: 1804 ft (550 m)

Note: Multimode fiber may require a DMD patch cord.

Optical specifications

Wavelength:	1300 nm (FP laser diode)
Average transmit output power:	-5.2 to 0 dBm
Average receiver sensitivity:	-22 dBm (minimum)

1000BASE-XD GBIC

Cable specifications

Type: 9 μ m single-mode fiber

Maximum distance: 31 mi (50 km)

Note: For a shorter link distance, you may need an in-line attenuator to prevent overloading the receiver.

Optical specifications

Wavelength: 1550 nm (DFB laser diode)

Average transmit output power: -5.2 to 0 dBm

Average receiver sensitivity: -24 dBm

1000BASE-ZX GBIC

Cable specifications

Type: 9 μ m single-mode fiber

Maximum Distance: 43 mi (70 km)

Note: For a shorter link distance, you may need an in-line attenuator to prevent overloading the receiver.

Optical specifications

Wavelength: 1550 nm (DFB laser diode)

Average transmit output power: 0 to 5.2 dBm

Average receiver sensitivity: -22 dBm (minimum)

1000BASE-CWDM GBIC

Cable specifications

Type: 9 μ m single-mode fiber

Maximum distance: 74.5 mi (120 km)

Note: Given 30dB loss budget and 0.25 db/Km fiber loss, up to 120 Km in transmission distance is supported with no intermediate multiplexer.

Optical specifications

Wavelength: 1450 to 1620 nm

Average transmit
output power: +2.0 to 6 dBm

Receiver optical input power: -30 dBm (minimum at 60° case temperature)
-28 dBm (minimum at 70° case temperature)

8608GTE and 8608GTM Modules

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	100 W maximum
Thermal rating:	344 Btu/hr maximum

MTBF rating

180,449 hrs

Connector type

RJ-45 (see [Table 55](#))


Cable specifications

Type:	Category 5 or better UTP cable for 1000 Mb/s operation. Cables must use all four pairs. Wiring configuration and performance are defined by EIA/TIA Standard 568 and IEEE Standard 802.3 2000 edition.
Maximum distance:	328 ft (100 m)

Port connectors

The ports on the 8608GTE and 8608GTM Modules are RJ-45 ports wired as shown in [Table 55](#).

Table 55 8608GTE/8608GTM Module port pin assignments

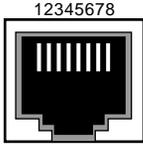Connector	Pin number	Signal
 <p>12345678</p> <p>8020EA</p>	1	Bidirectional Data A + (BI_DA+)
	2	Bidirectional Data A – (BI_DA–)
	3	Bidirectional Data B + (BI_DB+)
	4	Bidirectional Data C + (BI_DC+)
	5	Bidirectional Data C – (BI_DC–)
	6	Bidirectional Data B – (BI_DB–)
	7	Bidirectional Data D + (BI_DD+)
	8	Bidirectional Data D – (BI_DD–)

8608SXE Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	65 W maximum
Thermal rating:	224 Btu/hr maximum

MTBF rating

197,887 hr

Connector type

Duplex SC

Cable specifications

Types:	62.5 μ m multimode fiber optic cable 50 μ m multimode fiber optic cable
Distance:	62.5 μ m multimode fiber optic cable: 722 ft (220 m) @ 160 MHz/km bandwidth 902 ft (275 m) @ 200 MHz/km bandwidth 50 μ m multimode fiber optic cable: 1640 ft (500 m) @ 400 MHz/km bandwidth 1804 ft (550 m) @ 400 MHz/km bandwidth

Optical specifications

Wavelength:	850 nm
Optical budget:	7 dB
Laser transmitter characteristics:	Minimum launch power: -10 dBm Maximum launch power: -4 dBm
Receiver characteristics:	Minimum receiver sensitivity: -17 dBm Maximum input power: 0 dBm

8616GTE Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	102 W maximum
Thermal rating:	344 Btu/hr maximum

MTBF rating

147,602 hr

Connector type

RJ-45 (see [Table 56](#))

Cable specifications

Type:	Category 5 or better UTP cable for 1000 Mb/s operation. Cables must use all four pairs. Wiring configuration and performance are defined by EIA/TIA Standard 568 and IEEE Standard 802.3 2000 edition.
Maximum distance:	328 ft (100 m)

Port connectors

The ports on the 8616GTE Module are RJ-45 ports wired as shown in [Table 56](#).

Table 56 Pin assignments: 8616GTE Module port

Connector	Pin number	Signal
	1	Bidirectional Data A + (BI_DA+)
	2	Bidirectional Data A – (BI_DA–)
	3	Bidirectional Data B + (BI_DB+)
	4	Bidirectional Data C + (BI_DC+)
	5	Bidirectional Data C – (BI_DC–)
	6	Bidirectional Data B – (BI_DB–)
	7	Bidirectional Data D + (BI_DD+)
	8	Bidirectional Data D – (BI_DD–)

8616SXE Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	115 W
Thermal rating:	396 Btu/hr maximum

MTBF rating

178,403 hr

Connector type

MT-RJ

Cable specifications

Types:	62.5 μ m multimode fiber optic cable 50 μ m multimode fiber optic cable
Distance:	62.5 μ m multimode fiber optic cable: 722 ft (220 m) @ 160 MHz/km bandwidth 902 ft (275 m) @ 200 MHz/km bandwidth 50 μ m multimode fiber optic cable: 1640 ft (500 m) @ 400 MHz/km bandwidth 1804 ft (550 m) @ 400 MHz/km bandwidth

Optical specifications

Wavelength:	850 nm
Optical budget:	7 dB
Laser transmitter characteristics:	Minimum launch power: -10 dBm Maximum launch power: -4 dBm
Receiver characteristics:	Minimum receiver sensitivity: -17 dBm Maximum input power: 0 dBm

8624FXE Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	7.6 lb (3.4 kg)

Electrical specifications

Input power:	56 W maximum
Thermal rating:	193 Btu/hr maximum

MTBF rating

320,972 hr

Connector type

MT-RJ

Cable specifications

Type:	62.5 μ m multimode fiber optic cable
Distance:	6562 ft (2 km) for full-duplex links

Optical specifications

Wavelength:	1300 nm
Optical budget:	-20 dBm to -14 dBm
Transmitter characteristics:	Minimum optical power: -10 dBm Maximum optical power: -4 dBm

8632TXE and 8632TXM Modules

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	9 lb (4 kg)

Electrical specifications

Input power:	100 W maximum
Thermal rating:	193 Btu/hr maximum

MTBF rating

217,744 hr

Connector type

RJ-45 connector wired as MDI-X
SC duplex connectors on GBICs; see GBIC descriptions starting on [page 211](#).

Cable specifications

Type:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Maximum distance:	328 ft (100 m) 328 ft (100 m) for 10/100 Mb/s ports For GBIC ports, distance varies with the GBIC; see descriptions starting on page 211 .

8648TXE and 8648TXM Modules

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	76 W maximum
Thermal rating:	261 Btu/hr maximum

MTBF rating

244,708 hr

Connector type

RJ-45 connector wired as MDI-X ([Table 57](#))


Cable specifications

Type:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Maximum distance:	328 ft (100 m)

Port connectors

The ports on the 8648TXE and 8648TXM Modules are RJ-45 ports wired as MDI-X connectors ([Table 57](#)).

Table 57 8648TXE/8648TXM Module port pin assignments

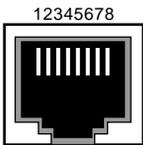Connector	Pin number	Signal
	1	Input receive data + (RX+)
	2	Input receive data - (RX-)
	3	Output transmit data + (TX+)
	6	Output transmit data - (TX-)
	4, 5, 7, 8	Not used

8672ATME and 8672ATMM Modules

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	OC-3c MDA 40 W maximum
	OC-12c MDA 40 W maximum
	DS-3 MDA: 40 W maximum
Thermal rating:	OC-3c MDA 138 Btu/hr maximum
	OC-12c MDA 138 Btu/hr maximum
	DS-3 MDA: 138 Btu/hr maximum

MTBF rating

222,103 hrs

Connector type

OC-3c MDA: MT-RJ
OC-12c MDA: Duplex SC
DS-3 MDA: BNC

Cable specifications

Types:	Multimode or single-mode fiber optic cable, coaxial cable
Distance:	Multimode fiber optic cable:
	1.24 mi (2 km) for OC-3c connection
	1640 ft (500 m) for OC-12c connection
	Single-mode fiber optic cable:
	9.3 mi (15 km) for OC-3c connection
9.3 mi (15 km) for OC-12c connection	
	Coaxial cable: 450 ft (137 m) for DS-3 connection

Optical specifications

Wavelength:	OC-3c MDA SMF: 1274 to 1356 nm
	OC-3c MDA MMF: 1274 to 1356 nm
	OC-12c MDA SMF: 1274 to 1356 nm
	OC-12c MDA MMF: 1260 to 1360 nm

Average transmit output power:	OC-3c and OC-12c MDAs SMF: -8 to -15 dBm OC-3c and OC-12c MDAs MMF: -14 to -29 dBm
Average receiver sensitivity:	OC-3c MDA SMF: -14 to -28 dBm OC-3c MDA MMF: -14 to -29 dBm OC-12c MDA SFM: -7 to -18 dBm OC-12c MDA MMF: -14 to -28 dBm
Pulse repetition rate:	OC-3c MDA SMF: 622.08 Mb/s OC-3c MDA MMF: 622.08 Mb/s OC-12c MDA SMF: 155.52 Mb/s OC-12c MDA MMF: 155.52 Mb/s

8681XLR Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	150 W maximum
Thermal rating:	512 BTU/hr maximum

MTBF rating

140,000 hr

Data Rate and encoding

64b/66b (IEEE 802.3ae specified)

Compatible with STM-64

No

Module Performance (64 byte packets)

Aggregate throughput	8x1,488,100 pps
Routing and Switch Forwarding Rates	8x1,488,100 pps

Connector type

SC Duplex

Port type

10GBASE-LR 1310nm serial PMD

Cable specifications

Type:	9/125 μ m single mode fiber optic cable
Distance:	6.2 miles (10 km)

Optical specifications

Wavelength:	1310 nm
Optical budget:	5 dB
Transmitter characteristics:	Minimum optical power: -6 dBm Maximum optical power: -1 dBm
Receiver characteristics:	Minimum receiver sensitivity: -12 dBm Maximum input power: -1 dBm

8681XLW Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	150 W maximum
Thermal rating:	512 BTU/hr maximum

MTBF rating

140,000 hr

Data Rate and encoding

64b/66b (IEEE 802.3ae specified)

Compatible with STM-64

Yes

Module Performance (64 byte packets)

Aggregate throughput	8x1,488,100 pps
Routing and Switch Forwarding Rates	8x1,488,100 pps

Connector type

SC Duplex

Port type

10GBASE-LW 1310nm serial PMD

Cable specifications

Type:	9/125 μ m single mode fiber optic cable
Distance:	6.2 miles (10 km)

Optical specifications

Wavelength:	1310 nm
Optical budget:	5 dB
Transmitter characteristics:	Minimum optical power: -6 dBm Maximum optical power: -1 dBm
Receiver characteristics:	Minimum receiver sensitivity: -12 dBm Maximum input power: -1 dBm

8683POSM Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	OC-3c MDA: 70W maximum OC-12c MDA: 90W maximum
Thermal rating:	OC-3c MDA: 241 Btu/hr maximum OC-12c MDA: 310 Btu/hr maximum

MTBF rating

255,693 hrs

Connector types

OC-3c MDA: MT-RJ
OC-12c MDA: Duplex SC

Cable specifications

Types:	Multimode or single-mode fiber optic cable
Distance:	Multimode fiber optic cable: 1.24 mi (2 km) for OC-3c connection 1640 ft (500 m) for OC-12c connection Single-mode fiber optic cable: 9.3 mi (15 km) for OC-3c connection 9.3 mi (15 km) for OC-12c connection

Optical specifications

Wavelength:	OC-3c MDA SMF: 1274 to 1356 nm OC-3c MDA MMF: 1274 to 1356 nm OC-12c MDA SMF: 1274 to 1356 nm OC-12c MDA MMF: 1260 to 1360 nm
-------------	--

Average transmit output power:	OC-3c and OC-12c MDAs SMF: -8 to -15 dBm OC-3c and OC-12c MDAs MMF: -14 to -29 dBm
Average receiver sensitivity:	OC-3c MDA SMF: -14 to -28 dBm OC-3c MDA MMF: -14 to -29 dBm OC-12c MDA SFM: -7 to -18 dBm OC-12c MDA MMF: -14 to -28 dBm

8691SF Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	7.2 lb (3.3 kg)

Electrical specifications

Input power:	70 W maximum
Thermal rating:	241 Btu/hr maximum

MTBF rating 213,454 hr

Connector types

Ethernet Management port:	RJ-45 connector wired as MDI (Table 58)
Console port:	DB-9 connector (Table 59)
Modem port:	DB-9 connector (Table 60)

Required cables

Ethernet Management port:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Console port:	RS-232 cable
Modem port:	DTE-to-DCE cable (straight or transmit cable)

Management port

The Management port is a 10/100 Mb/s Ethernet port implemented on an RJ-45 connector wired as an MDI connection. [Table 58](#) shows the pin assignments for this connector.

Table 58 Pin assignments in the 8691SF Module Management port

Connector	Pin number	Signal
 <p>12345678</p> <p>8020EA</p>	1	Output transmit data + (TX+)
	2	Output transmit data - (TX-)
	3	Input receive data + (RX+)
	6	Input receive data - (RX-)
	4, 5, 7, 8	Not used


Console serial port

The Console serial port is implemented as a DB-9 connector. This port can operate as a data terminal equipment (DTE) or data communication equipment (DCE) device. Use the switch to the left of the port to set the port to DTE (left) or DCE (right). Default settings for this port are 9600 bps, 8 data bits, no parity, and one stop bit.

Because the Console port expects to receive Data Set Ready (DSR) and Clear To Send (CTS) signals before transmitting, these control lines are required in the cabling. The Console port does not support any inbound flow control; that is, the port does not toggle control lines to indicate an input buffer full condition.

Table 59 lists the pin assignments for the Console port for both the DTE and DCE settings.

Table 59 Pin assignments in the 8691SF Module Console port

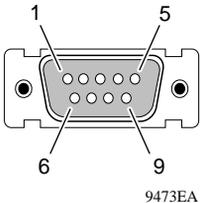Connector	Pin number	DCE signal	DTE signal
	2	RXD	TXD
	3	TXD	RXD
	4	DTR	DSR
	5	GND	GND
	6	DSR	DTR
	7	RTS	CTS
	9	CTS	RTS

Modem serial port

The Modem serial port is implemented on a DB-9 connector wired as a DTE connection.

To set up modem access, you need a DTE-to-DCE cable (straight or transmit cable) between the Modem port and a modem or terminal server.

Table 60 describes the required cable pin assignments.

Table 60 DTE-to-DCE pin assignments

Switch		Modem	
Signal	Pin number	DCE DB-9 pin number	DCE DB-25 pin number
RXD	2	2	3
TXD	3	3	2
DTR	4	4	20
GND	5	5	7
DSR	6	6	6
RTS	7	7	4
CTS	8	8	5

Index

Numbers

- 10/100 Mb/s ports 36, 59, 62
- 10/100BASE-T interface, connecting to 121
- 1000BASE-CWDM GBIC
 - description 130
 - installing and replacing 131
 - technical specifications 213
- 1000BASE-LX GBIC
 - description 130
 - installing and replacing 131
 - technical specifications 195, 211
- 1000BASE-LX MDA
 - description 136
 - installing and replacing 140
- 1000BASE-SX GBIC
 - description 130
 - installing and replacing 131
 - technical specifications 195, 211
- 1000BASE-SX MDA
 - description 136
 - installing and replacing 140
 - LEDs 137
- 1000BASE-SX ports 51
- 1000BASE-XD GBIC 212
 - description 130
 - installing and replacing 131
 - technical specifications 196
- 1000BASE-ZX GBIC
 - description 130
 - installing and replacing 131
 - technical specifications 196, 212
- 100BASE-FX MDA, troubleshooting 184
- 100BASE-FX ports 57
- 10GBASE LR port 67
- 10GBASE-LW port 70
- 450-series MDA
 - description 136
 - installing and replacing 140
 - LEDs 137
 - technical specifications 199
- 8100 modules
 - 8108GBIC 28
 - 8116FX 31
 - 8132TX 33
 - 8148TX 36
 - 8190SM 38
 - installing and replacing 115
 - MDAs 135
- 8100 series fiber MDA
 - description 139
 - installing and replacing 140
 - LEDs 139
- 8100-4TX MDA
 - description 138
 - installing and replacing 140
 - LEDs 138, 140
 - status LEDs 138
- 8108GBIC module
 - description 28
 - installing and replacing 115
 - LEDs 29
 - technical specifications 194
- 8116FX module 197
 - description 31
 - installing and replacing 115
 - status LEDs 32
 - technical specifications 197

- 8132TX module 198
 - description 33
 - installing and replacing 115
 - technical specifications 198
- 8148TX module 201
 - description 36
 - installing and replacing 115
 - status LEDs 38
 - technical specifications 201
- 8190SM module
 - connecting 10/100BASE-T cable 121
 - connecting modem to 122
 - description 38
 - installing and replacing 115
 - technical specifications 39, 202
- 8600 modules
 - 8608GBE 46
 - 8608GBM 46
 - 8608GTE 49
 - 8608GTM 49
 - 8608SXE 51
 - 8616GTE 53
 - 8616SXE 55
 - 8624FXE 57
 - 8632TXE 59
 - 8632TXM 59
 - 8648TXE 62
 - 8648TXM 62
 - 8672ATME 65
 - 8672ATMM 65
 - 8681XLR 67
 - 8681XLW 70
 - 8683POSM 72
 - 8691SF 74
 - installing and replacing 115
 - MDAs 144
- 8608GBE module
 - description 46
 - installing and replacing 115
 - status LEDs 47
 - technical specifications 210
- 8608GBM module
 - description 46
 - installing and replacing 115
 - status LEDs 47
 - technical specifications 210
- 8608GTE module
 - description 49
 - installing and replacing 115
 - status LEDs 50, 54
 - technical specifications 214
- 8608GTM module
 - description 49
 - installing and replacing 115
 - status LEDs 50
 - technical specifications 214
- 8608SXE module
 - description 51
 - installing and replacing 115
 - status LEDs 53
 - technical specifications 216
- 8616GTE module
 - description 53
 - installing and replacing 115
 - status LEDs 54
 - technical specifications 217
- 8616SXE module
 - description 55
 - installing and replacing 115
 - status LEDs 56
 - technical specifications 218
- 8624FXE module
 - description 57
 - installing and replacing 115
 - status LEDs 58
 - technical specifications 219
- 8632TXE module
 - description 59
 - installing and replacing 115
 - status LEDs 61
 - technical specifications 220
- 8632TXM module
 - description 59
 - installing and replacing 115
 - status LEDs 61

- technical specifications 220
- 8648TXE module
 - description 62
 - installing and replacing 115
 - status LEDs 64, 67, 70
 - technical specifications 221
- 8672ATME module
 - description 65
 - installing and replacing 115
 - MDA LEDs 145
 - status LED 66
 - technical specifications 222
- 8672ATMM module
 - description 65
 - installing and replacing 115
 - MDA LEDs 145
 - status LED 66
 - technical specifications 222
- 8681XLR module
 - description 67
 - installing and replacing 115
 - status LEDs 69
 - technical specifications 224
- 8681XLW module
 - description 70
 - installing and replacing 115
 - status LEDs 72
 - technical specifications 225
- 8683POSM module
 - description 73
 - installing and replacing 115
 - MDA LEDs 150
 - status LED 74
 - technical specifications 226
- 8691SF module
 - connecting modem to 122
 - description 74
 - installing and replacing 115
 - status LEDs 76
 - technical specifications 227

A

- AC power supply
 - description 91
 - installing 108
 - removing 110
 - status LEDs 91
- ATM module 65
- autonegotiation, troubleshooting 184

C

- cable
 - Category 5 184
 - crossover 183, 205
 - fiber 184
 - fiber optic 198
 - straight-through 124, 183, 204
 - troubleshooting 183
 - UTP 198, 201, 220
- cable lengths 123, 125
- cables
 - connecting
 - 10/100BASE-T 121
 - to modem 122
 - crossover 128
 - fiber optic
 - 8608SXE module 216
 - 8616SXE module 218
 - 8624FXE Module 219
 - 8632TXE module 220
 - 8632TXM module 220
 - 8672ATME module 222
 - 8672ATMM module 222
 - 8681XLR module 224
 - 8681XLW module 225
 - 8683POSM module 226
 - ordering 83
 - straight-through 128, 229
 - UTP 214, 217, 221
- chassis
 - components described 23
 - connecting communications cables 123

- installing 81
- installing and replacing CRUs 113, 129, 135, 143
- operating 165
- resetting 177
- technical specifications 187
- verifying a successful installation 169
- connecting
 - 10/100BASE-T cables 121
 - modem cables 122
- connections
 - MDI-X 34
 - MDI-X to MDI 205
 - MDI-X to MDI-X 206
- connectors
 - DB-9 203, 228
 - MDI-X 36, 63, 198, 201, 215, 217, 221
 - RJ-45 34, 36, 63, 203, 228
- Console port 203, 228
 - on 8190SM module 41
 - on 8691 module 78
- conventions, text 21
- CPU subsystem 74
- crossover cable 124, 128, 183, 206
- CRUs (customer-replaceable units)
 - 8108 GBIC module
 - description 28
 - installing and replacing 115
 - 8116FX module
 - description 31
 - installing and replacing 115
 - 8132TX module
 - description 33
 - installing and replacing 115
 - 8148TX module
 - description 36
 - installing and replacing 115
 - 8190SM Switch Management Module
 - description 38
 - installing and replacing 115
 - 8608GBE module
 - description 46
 - installing and replacing 115
 - 8608GBM module
 - description 46
 - installing and replacing 115
 - 8608GTE module
 - description 49
 - installing and replacing 118
 - 8608SXE module
 - description 51
 - installing and replacing 115
 - 8616GTE module
 - description 53
 - installing and replacing 115
 - 8616SXE module
 - description 55
 - installing and replacing 118
 - 8624FXE module
 - description 57
 - installing and replacing 115
 - 8632TXE module
 - description 59
 - installing and replacing 118
 - 8632TXM module
 - description 59
 - installing and replacing 115
 - 8648TXE module
 - description 62
 - installing and replacing 115
 - 8648TXM module
 - description 62
 - installing and replacing 115
 - 8672ATME module
 - description 65
 - installing and replacing 118
 - 8672ATMM module
 - description 65
 - installing and replacing 118
 - 8681XLR module
 - description 67
 - installing and replacing 115
 - 8681XLW module
 - description 70
 - installing and replacing 115
 - 8683POSM module

- description 72
- installing and replacing 118
- 8691SF module
 - description 74
 - installing and replacing 115
- MDAs for 8100 modules
 - description 136
 - installing 140
 - LEDs 137
- MDAs for 8600 modules
 - description 144
 - LEDs 145, 150
- power supplies
 - description 91
- customer support 22

D

- DC power supply
 - description 91
 - installing 95
 - removing 104
 - status LEDs 91
- downloading image 173, 174
- DTE/DCE switch
 - changing setting of 182
 - default settings 203, 228
 - on 8190SM module 41
 - on 8691SF module 78
- duplex mode, troubleshooting 185

E

- electrical specifications 84, 85
- environmental specifications 85, 187
 - 8100 modules 193
 - 8600 modules 208
- equipment rack, specifications 83
- Ethernet Management port 40, 78
 - pin assignments 203, 228

F

- failure
 - power source 93
- failure to display login prompt 182
- fan LED 77
- Fault LED 35
- fiber cable 184
- fiber optic equipment 116
- flash memory card 79
 - changing read-write protection 179
 - installing 178
 - removing 177

G

- GBICs (gigabit interface converters)
 - 8108GBIC types 28
 - 8608GBE types 47
 - 8608GBM types 47
 - installing 129
- Gigabit Ethernet modules 53
 - 8608GBE 46
 - 8608GBM 46
 - 8608GTE 49
 - 8608GTM 49
 - 8608SXE 51
 - 8616GTE 53
 - 8616SXE 55
 - 8681XLR 67
- gigabit Ethernet modules 49, 51
- gigabit interface converter. See GBIC

H

- hardware
 - requirements 83
 - shipped with the DC power supply 95
 - shipped with the switch 81
- heat dissipation, ensuring 84

I

installation

- 450 Series MDA 140
- 8100-4TX MDA 140
- AC power supply 108
- DC power supply 95
- GBICs (gigabit interface converters) 129
- MDAs on the Module 8132TX 140
- modules 118
- preparing for 81

installing

- flash memory card 178
- power filler panel 93

L

LEDs

- 8100 series fiber MDA 139
- 8100-4TX MDA 138
- 8116FX module 32
- 8132TX module 34
- 8148TX module 36
- 8190SM module 39
- 8608GBE module 48
- 8608GBM module 48
- 8608GTE module 50, 54
- 8608GTM module 50
- 8608SXE module 53
- 8616GTE module 54
- 8616SXE module 56
- 8624FXE module 57
- 8632TXE module 61
- 8632TXM module 61
- 8648TXE module 60, 63
- 8648TXM module 60
- 8672ATME module 66
- 8672ATMM module 66
- 8681XLR module 69
- 8681XLW module 72
- 8683POSM module 74
- 8691SF module 76
- MDA 137
 - location 136, 137, 138

- power supplies 181
- power supply 91
- problem indications 181

length, cable 123

length, cables 125

login prompt, failure to display 182

longwave gigabit MDAs 136

M

Management port 40, 78, 203, 228

management, out-of-band 40, 78

Master LED 35

maximum cable distances 125

MDAs

- gigabit Ethernet 136
- installing 140
- versions 34, 135

MDAs for 8600 modules

installing 152

MDI connections

- MDI-X to MDI 205
- MDI-X to MDI-X 206
- troubleshooting 205

MDI-X connections 34, 63, 128

- 8148TX 36
- cables 124
- troubleshooting 205

media-dependent interface-crossover. See MDI-X connections

memory

- output buffer 45
- PCMCIA 79

memory cards

- changing read-write protection 179
- removing 177

memory, PCMCIA 41

Modem port 41, 78

modem port 204, 229

modem, connecting to chassis 122

modules
 installing 118
 removing 116
 modules. See 8100 or 8600 modules
 MTBF rating. See individual module entries

O

optical specifications
 8608SX module 216
 8616SX module 218
 8624FX module 219
 8672ATME module 222
 8672ATMM module 222
 8681XLR module 224
 8681XLW module 225
 8683POSM module 226

P

PCMCIA card slot 41, 79
 pin assignments
 10/100 Mb/s ports 198, 201, 215, 217, 221
 Console port 204, 229
 Ethernet Management port 203, 228
 modem port 204, 229
 port connections, troubleshooting 183
 port densities 28, 44
 ports
 10/100 Mb/s 36, 59, 62, 198, 201, 215, 217, 221
 100BASE-SX 51
 100BASE-FX 57
 autosensing 33
 Console 203, 228
 Ethernet Management 40, 78, 203, 228
 MDI-X/MDI connections 205
 modem 204, 229
 serial 41, 78
 POS module 73
 power source failure 93
 power specifications 84, 85

power supplies
 description 91
 power-up sequence 169
 product support 22
 publications
 hard copy 22

R

redundancy
 CPUs 38, 75
 removing
 AC power supply 110
 DC power supply 104
 flash memory card 177
 modules 116
 option memory card 177
 power filler panel 93
 replacing
 modules 115
 reset button 41, 78
 restrictions
 PCMCIA card 79
 RJ-45 connectors 36, 63
 routing switch fabric module
 8691SF 74
 description 75

S

safety agency approvals 192, 209
 serial ports 41, 78
 shipment contents, verifying 81
 shortwave gigabit MDAs 136
 site requirements 84
 software incompatibility 181
 space requirements 84
 specifications
 450-series MDA 199
 8108GBIC module 194

- 8116FX module 197
- 8132TX module 198
- 8148TX module 201
- 8608GBE module 210
- 8608GBM module 210
- 8608GTE module 214, 217
- 8608GTM module 214
- 8608SXE module 216
- 8616SXE module 218
- 8624FXE module 219, 224, 225
- 8632TXE module 220
- 8632TXM module 220
- 8648TXE module 221
- 8672ATME module 222
- 8672ATMM module 222
- 8683POSM module 226
- 8691SF module 227
- electrical 84, 85
- environmental 85
- space 84

standards 192, 208

straight-through cable 124, 128, 183, 204, 229

support, Nortel Networks 22

switch description 27

system clock 32, 35, 37

system log 181

T

- technical publications 22
- technical specifications
 - 8100 modules 191
 - 8600 modules 207
- technical support 22
- text conventions 21
- troubleshooting
 - cables 183
 - downloading the image file 173
 - image download 174
 - LED indications 181
 - port interface 184
 - power-up sequence 169

- saving configuration changes 175
- saving your configuration 173
- troubleshooting, MDI and MDI-X connections 205

V

- voltage specifications 84, 85