

Part No. 314711-C Rev 00  
April 2004

600 Technology Park Drive  
Billerica, MA 01821-4130

# Installing the Contivity 1700



**NORTEL**  
**NETWORKS™**

## Copyright © 2004 Nortel Networks

All rights reserved. April 2004.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks Inc.

## Trademarks

Nortel Networks, the Nortel Networks logo, the Globemark, Unified Networks, and Contivity are trademarks of Nortel Networks.

Adobe and Acrobat Reader are trademarks of Adobe Systems Incorporated.

Hi/fn and LZS are trademarks of Hi/fn, Inc.

HyperTerminal is a trademark of Hilgraeve, Inc.

Microsoft, Windows, and Windows NT are trademarks of Microsoft Corporation.

Netscape and Netscape Navigator are trademarks of Netscape Communications Corporation.

Ethernet is a trademark of Xerox Corporation.

The asterisk after a name denotes a trademarked item.

## Statement of conditions

In the interest of improving internal design, operational function, and/or reliability, Nortel Networks Inc. reserves the right to make changes to the products described in this document without notice.

Nortel Networks Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

## USA requirements only

### Federal Communications Commission (FCC) Compliance Notice: Radio Frequency Notice

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy. If it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to take whatever measures may be necessary to correct the interference at their own expense.

## European requirements only

### EN 55 022 statement

This is to certify that the Nortel Networks Contivity 1700 is shielded against the generation of radio interference in accordance with the application of Council Directive 89/336/EEC, Article 4a. Conformity is declared by the application of EN 55 022 Class A (CISPR 22).

**Warning:** This is a Class A product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take appropriate measures.

---

**Achtung:** Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

**Attention:** Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

### **EC Declaration of Conformity**

This product conforms (or these products conform) to the provisions of the R&TTE Directive 1999/5/EC.

### **Japan/Nippon requirements only**

#### **Voluntary Control Council for Interference (VCCI) statement**

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

### **Taiwan requirements**

#### **Bureau of Standards, Metrology and Inspection (BSMI) statement**

##### **警告使用者:**

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

### **Canada requirements only**

#### **Canadian Department of Communications Radio Interference Regulations**

This digital apparatus (Contivity 1700) does not exceed the Class A limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

#### **Règlement sur le brouillage radioélectrique du ministère des Communications**

Cet appareil numérique (Contivity 1700) respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada.

---

## Nortel Networks Inc. software license agreement

This Software License Agreement (“License Agreement”) is between you, the end-user (“Customer”) and Nortel Networks Corporation and its subsidiaries and affiliates (“Nortel Networks”). PLEASE READ THE FOLLOWING CAREFULLY. YOU MUST ACCEPT THESE LICENSE TERMS IN ORDER TO DOWNLOAD AND/OR USE THE SOFTWARE. USE OF THE SOFTWARE CONSTITUTES YOUR ACCEPTANCE OF THIS LICENSE AGREEMENT. If you do not accept these terms and conditions, return the Software, unused and in the original shipping container, within 30 days of purchase to obtain a credit for the full purchase price.

“Software” is owned or licensed by Nortel Networks, its parent or one of its subsidiaries or affiliates, and is copyrighted and licensed, not sold. Software consists of machine-readable instructions, its components, data, audio-visual content (such as images, text, recordings or pictures) and related licensed materials including all whole or partial copies. Nortel Networks grants you a license to use the Software only in the country where you acquired the Software. You obtain no rights other than those granted to you under this License Agreement. You are responsible for the selection of the Software and for the installation of, use of, and results obtained from the Software.

**1. Licensed Use of Software.** Nortel Networks grants Customer a nonexclusive license to use a copy of the Software on only one machine at any one time or to the extent of the activation or authorized usage level, whichever is applicable. To the extent Software is furnished for use with designated hardware or Customer furnished equipment (“CFE”), Customer is granted a nonexclusive license to use Software only on such hardware or CFE, as applicable. Software contains trade secrets and Customer agrees to treat Software as confidential information using the same care and discretion Customer uses with its own similar information that it does not wish to disclose, publish or disseminate. Customer will ensure that anyone who uses the Software does so only in compliance with the terms of this Agreement. Customer shall not a) use, copy, modify, transfer or distribute the Software except as expressly authorized; b) reverse assemble, reverse compile, reverse engineer or otherwise translate the Software; c) create derivative works or modifications unless expressly authorized; or d) sublicense, rent or lease the Software. Licensors of intellectual property to Nortel Networks are beneficiaries of this provision. Upon termination or breach of the license by Customer or in the event designated hardware or CFE is no longer in use, Customer will promptly return the Software to Nortel Networks or certify its destruction. Nortel Networks may audit by remote polling or other reasonable means to determine Customer’s Software activation or usage levels. If suppliers of third party software included in Software require Nortel Networks to include additional or different terms, Customer agrees to abide by such terms provided by Nortel Networks with respect to such third party software.

**2. Warranty.** Except as may be otherwise expressly agreed to in writing between Nortel Networks and Customer, Software is provided “AS IS” without any warranties (conditions) of any kind. NORTEL NETWORKS DISCLAIMS ALL WARRANTIES (CONDITIONS) FOR THE SOFTWARE, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ANY WARRANTY OF NON-INFRINGEMENT. Nortel Networks is not obligated to provide support of any kind for the Software. Some jurisdictions do not allow exclusion of implied warranties, and, in such event, the above exclusions may not apply.

**3. Limitation of Remedies.** IN NO EVENT SHALL NORTEL NETWORKS OR ITS AGENTS OR SUPPLIERS BE LIABLE FOR ANY OF THE FOLLOWING: a) DAMAGES BASED ON ANY THIRD PARTY CLAIM; b) LOSS OF, OR DAMAGE TO, CUSTOMER’S RECORDS, FILES OR DATA; OR c) DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), WHETHER IN CONTRACT, TORT OR OTHERWISE (INCLUDING NEGLIGENCE) ARISING OUT OF YOUR USE OF THE SOFTWARE, EVEN IF NORTEL NETWORKS, ITS AGENTS OR SUPPLIERS HAVE BEEN ADVISED OF THEIR POSSIBILITY. The forgoing limitations of remedies also apply to any developer and/or supplier of the Software. Such developer and/or supplier is an intended beneficiary of this Section. Some jurisdictions do not allow these limitations or exclusions and, in such event, they may not apply.

---

#### 4. General

- a. If Customer is the United States Government, the following paragraph shall apply: All Nortel Networks Software available under this License Agreement is commercial computer software and commercial computer software documentation and, in the event Software is licensed for or on behalf of the United States Government, the respective rights to the software and software documentation are governed by Nortel Networks standard commercial license in accordance with U.S. Federal Regulations at 48 C.F.R. Sections 12.212 (for non-DoD entities) and 48 C.F.R. 227.7202 (for DoD entities).
- b. Customer may terminate the license at any time. Nortel Networks may terminate the license if Customer fails to comply with the terms and conditions of this license. In either event, upon termination, Customer must either return the Software to Nortel Networks or certify its destruction.
- c. Customer is responsible for payment of any taxes, including personal property taxes, resulting from Customer's use of the Software. Customer agrees to comply with all applicable laws including all applicable export and import laws and regulations.
- d. Neither party may bring an action, regardless of form, more than two years after the cause of the action arose.
- e. The terms and conditions of this License Agreement form the complete and exclusive agreement between Customer and Nortel Networks.
- f. This License Agreement is governed by the laws of the country in which Customer acquires the Software. If the Software is acquired in the United States, then this License Agreement is governed by the laws of the state of New York.



---

# Contents

---

<b>Preface</b> .....	<b>15</b>
Before you begin .....	15
Text conventions .....	16
Acronyms .....	16
Related publications .....	17
How to get help .....	18
<b>Chapter 1</b>	
<b>Installing the Contivity 1700 chassis</b> .....	<b>19</b>
Description of the Contivity 1700 .....	19
Preparing to install the Contivity 1700 .....	20
Shipment contents .....	21
Additional equipment .....	22
Cables .....	22
Hardware for mounting the chassis in an equipment rack .....	22
Site requirements .....	22
Installing the chassis .....	23
Installing the chassis on a flat surface .....	23
Installing the chassis in an equipment rack .....	24
Rack-mount recommendations .....	24
Attaching the shelf in the equipment rack .....	24
Mounting the chassis in the equipment rack .....	26
<b>Chapter 2</b>	
<b>Cabling the gateway and turning the power on</b> .....	<b>29</b>
Connecting communications cables .....	30
Connecting the power cord .....	32
Verifying a successful installation .....	33

Understanding the LEDs .....	34
Front panel LEDs .....	34
LEDs on the system 10/100BASE Ethernet port .....	35
10/100BASE Ethernet interface card LEDs .....	36
ADSL WAN interface card LEDs .....	37
T1/E1 CSU/DSU WAN interface card LEDs .....	38
Quad T1/E1 CSU/DSU WAN interface card LEDs .....	39
Single V.35/X.21 WAN interface card LEDs .....	40

### **Chapter 3**

#### **Configuring the management IP interface..... 41**

Required information .....	42
Using the IP address configuration utility .....	42
System requirements .....	42
Running the IP address configuration utility .....	43
Using the serial interface .....	45
Testing the configuration .....	49
Troubleshooting .....	51

### **Chapter 4**

#### **Installing option cards and DIMMs..... 53**

Shutting down the system to add or replace hardware .....	54
Removing the front bezel and top cover .....	55
Attaching the antistatic wrist strap .....	58
Installing and replacing option cards .....	59
Installing and replacing DIMMs .....	63

### **Appendix A**

#### **Technical specifications .....** 67

Chassis specifications .....	67
System ports .....	68
10/100BASE Ethernet LAN port .....	68
Serial port .....	69
Modem cable specifications .....	70

---

Hardware option cards .....	71
Hardware Accelerator card .....	71
10/100BASE Ethernet interface card .....	72
ADSL WAN interface card .....	72
ISDN BRI interface card .....	73
T1/E1 CSU/DSU WAN interface card .....	75
Quad T1/E1 CSU/DSU WAN interface card .....	77
Single V.35/X.21 WAN interface card .....	78
Dual V.35 WAN interface card .....	81
HSSI WAN interface card .....	83
V.90 modem interface card .....	85
<b>Index .....</b>	<b>87</b>



---

## Figures

---

Figure 1	Front view of the Contivity 1700	20
Figure 2	Placement of rubber feet on the bottom of the chassis	23
Figure 3	Attaching the cage nuts to the rack	25
Figure 4	Installing the shelf in the equipment rack	25
Figure 5	Removing the front bezel	26
Figure 6	Replacing the front bezel	27
Figure 7	Rear view of the Contivity 1700	31
Figure 8	Front panel LEDs	34
Figure 9	LEDs on the system 10/100BASE Ethernet port	35
Figure 10	LEDs on the 10/100BASE Ethernet interface card	36
Figure 11	LEDs on the ADSL WAN interface card	37
Figure 12	LEDs on the T1/E1 CSU/DSU WAN interface card	38
Figure 13	LEDs on the quad T1/E1 CSU/DSU WAN interface card	39
Figure 14	LEDs on the single V.35/X.21 WAN interface card	40
Figure 15	Icon for the IP address configuration utility	43
Figure 16	IP address configuration utility dialog box	44
Figure 17	Welcome screen	50
Figure 18	Removing the front bezel	55
Figure 19	Removing the top cover	56
Figure 20	Location of option card slots and DIMMs on the system board	57
Figure 21	Location of the grounding jack for the antistatic wrist strap	58
Figure 22	Removing an option card or a filler panel	60
Figure 23	Installing an option card	61
Figure 24	Replacing the front bezel	62
Figure 25	Installing and removing a DIMM	64
Figure 26	10/100BASE Ethernet connector	68
Figure 27	Modem cable (9-pin D-sub plug to RS-232-C modem plug)	70
Figure 28	10/100BASE Ethernet interface card	72
Figure 29	ADSL WAN interface card	72

## 12 Figures

---

Figure 30	ISDN BRI S/T interface card . . . . .	73
Figure 31	ISDN BRI U interface card . . . . .	73
Figure 32	T1/E1 CSU/DSU WAN interface card . . . . .	75
Figure 33	Quad T1/E1 CSU/DSU WAN interface card . . . . .	77
Figure 34	Single V.35/X.21 WAN interface card . . . . .	78
Figure 35	Dual V.35 WAN interface card . . . . .	81
Figure 36	HSSI WAN interface card . . . . .	83
Figure 37	V.90 modem interface card . . . . .	85

---

## Tables

---

Table 1	Items shipped with the Contivity 1700 .....	21
Table 2	Interfaces and cables for the Contivity 1700 .....	30
Table 3	Power cord requirements .....	32
Table 4	Front panel LED indicators .....	34
Table 5	LED indicators on the system 10/100BASE Ethernet port .....	35
Table 6	LED indicators on the 10/100BASE Ethernet interface card .....	36
Table 7	LED indicators on the ADSL WAN interface card .....	37
Table 8	LED indicators on the T1/E1 CSU/DSU WAN interface card .....	38
Table 9	LED indicators on the quad T1/E1 CSU/DSU WAN interface card .....	39
Table 10	LED indicators on the single V.35/X.21 WAN interface card .....	40
Table 11	Supported option cards for the Contivity 1700 .....	59
Table 12	Physical, electrical, and environmental specifications .....	67
Table 13	10/100BASE Ethernet port pinouts .....	69
Table 14	Multiple DB9 and DB25 connector pinouts .....	69
Table 15	Modem cable pinouts .....	70
Table 16	ADSL cable pinouts .....	73
Table 17	ISDN BRI S/T cable pinouts .....	74
Table 18	ISDN BRI U cable pinouts .....	74
Table 19	T1/E1 CSU/DSU cable pinouts for crossover connection .....	76
Table 20	T1/E1 CSU/DSU cable pinouts for straight-through connection .....	76
Table 21	V.35 cable pinouts .....	78
Table 22	X.21 cable pinouts .....	80
Table 23	DB26-to-V.35 cable pinouts .....	82
Table 24	T3 cable pinouts .....	83
Table 25	V.90 modem cable pinouts .....	85



---

## Preface

---

The Contivity\* 1700 is part of the Nortel Networks\* Contivity Secure IP Services Gateway product family. Contivity Secure IP Services Gateways support secure, reliable IP VPNs in a single, integrated hardware device. Throughout this guide, the Contivity 1700 is also referred to as *the gateway*.

This guide provides instructions on how to install the Contivity 1700 in an equipment rack and how to install and replace option cards and dual inline memory modules (DIMMs). This guide also provides some initial configuration information and includes technical specifications for the gateway.

For complete information about configuring and monitoring the Contivity 1700, see the documentation on the software CD. (For information about Contivity documentation, see [“Related publications” on page 17.](#))

## Before you begin

This guide is intended for qualified service personnel who are installing the Contivity 1700 for the first time or who need to install or replace any of the following field replaceable units (FRUs):

- LAN, WAN, and serial option cards
- Hardware Accelerator card
- Dual inline memory modules (DIMMs)

Before you install the Contivity 1700, make sure that all network wiring has been installed on the premises using standard cable system practices.

## Text conventions

This guide uses the following text conventions:

<b>bold Courier text</b>	Indicates command names and options and text that you need to enter. Example: Use the <b>show health</b> command. Example: Enter <b>terminal paging {off   on}</b> .
<i>italic text</i>	Indicates new terms and book titles.
plain Courier text	Indicates system output, for example, prompts and system messages. Example: File not found.
separator (>)	Shows menu paths. Example: Choose Status > Health Check.

## Acronyms

This guide uses the following acronyms:

ADSL	asymmetric digital subscriber line
AIS	alarm indication signal
CSU	channel service unit
DIMM	dual inline memory module
DSU	digital service unit
DTE	data terminal equipment
HSSI	High Speed Serial Interface
IP	Internet Protocol
IPsec	IP Security
LAN	local area network
LED	light emitting diode
LOS	loss of signal

OOF	out of frame
PCI	peripheral component interconnect
PDN	public data network
URL	uniform resource locator
VPN	virtual private network
WAN	wide area network

## Related publications

For complete information about configuring, monitoring, and managing the Contivity 1700, refer to the following publications (included on the software CD):

- Release notes provide the latest information, including brief descriptions of the new features, problems fixed in this release, and known problems and workarounds.
- *Configuring Basic Features for the Contivity Secure IP Services Gateway* introduces the product and provides information about initial setup and configuration.
- *Configuring Authentication and Certificates for the Contivity Secure IP Services Gateway* provides instructions for configuring authentication services and digital certificates.
- *Configuring Firewalls, Filters, NAT, and QoS for the Contivity Secure IP Services Gateway* provides instructions for configuring the Contivity Stateful Firewall, NAT, and Contivity interface and tunnel filters.
- *Configuring Advanced Features for the Contivity Secure IP Services Gateway* provides instructions for configuring the tunneling protocols IPsec, L2TP, PPTP, and L2F, as well as instructions for configuring physical interfaces, PPP, frame relay, PPPoE, and advanced WAN settings.
- *Configuring Routing for the Contivity Secure IP Services Gateway* provides instructions for configuring RIP, OSPF, and VRRP, as well as instructions for configuring ECMP, routing policy services, and client address redistribution (CAR).

- *Managing and Troubleshooting the Contivity Secure IP Services Gateway* provides information about system administrator tasks such as backup and recovery, file management, and upgrading software, and instructions for monitoring gateway status and performance. Also, provides troubleshooting information and interoperability considerations.
- *Reference for the Contivity Secure IP Services Gateway Command Line Interface* provides syntax, descriptions, and examples for the commands that you can use from the command line interface.

You can print selected technical manuals and release notes free, directly from the Internet. Go to the [www.nortelnetworks.com/documentation](http://www.nortelnetworks.com/documentation) URL. Find the product for which you need documentation. Then locate the specific category and model or version for your hardware or software product. Use Adobe\* Acrobat Reader\* to open the manuals and release notes, search for the sections you need, and print them on most standard printers. Go to Adobe Systems at the [www.adobe.com](http://www.adobe.com) URL to download a free copy of the Adobe Acrobat Reader.

## How to get help

If you purchased a service contract for your Nortel Networks product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance.

If you purchased a Nortel Networks service program, contact Nortel Networks Technical Support. To obtain contact information online, go to the [www.nortelnetworks.com/cgi-bin/comments/comments.cgi](http://www.nortelnetworks.com/cgi-bin/comments/comments.cgi) URL, then click on Technical Support.

From the Technical Support page, you can open a Customer Service Request online or find the telephone number for the nearest Technical Solutions Center. If you are not connected to the Internet, you can call 1-800-4NORTEL (1-800-466-7835) to learn the telephone number for the nearest Technical Solutions Center.

An Express Routing Code (ERC) is available for many Nortel Networks products and services. When you use an ERC, your call is routed to a technical support person who specializes in supporting that product or service. To locate an ERC for your product or service, go to the <http://www.nortelnetworks.com/help/contact/erc/index.html> URL.

---

# Chapter 1

## Installing the Contivity 1700 chassis

---

This chapter describes how to install the Contivity 1700 chassis.



**Note:** Before you install the chassis, make sure that all network wiring has been installed on the premises using standard cable system practices.

---

This chapter contains the following topics:

Topic	Page
<a href="#">Description of the Contivity 1700</a>	19
<a href="#">Preparing to install the Contivity 1700</a>	20
<a href="#">Installing the chassis</a>	23


## Description of the Contivity 1700

The Contivity 1700 enables scalable, secure, and robust IP VPNs across the public data network (PDN). The Contivity 1700 uses the infrastructure of the Internet to replace traditional remote access gear.

The Contivity 1700 provides routing, firewall, bandwidth management, encryption, authentication, and data integrity services to ensure secure tunneling across IP networks and the Internet. An individual user or group of users can be associated with a set of attributes that provide custom access to an extranet.

Figure 1 shows the front view of the Contivity 1700.

**Figure 1** Front view of the Contivity 1700

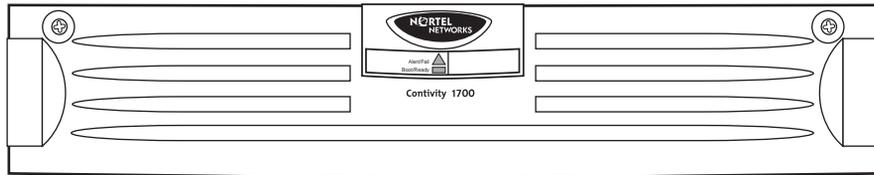

CS160001A

The Contivity 1700 chassis provides the following:

- One 10/100 Ethernet\* LAN port on the base system
- One serial port for out-of-band management of the Contivity 1700
- Two expansion PCI slots that can contain interface cards and one Hardware Accelerator card
- One 10/100 Ethernet interface card installed in PCI slot 1
- 128 MB memory upgradable to 256 MB total

## Preparing to install the Contivity 1700

Before you begin the installation, verify that:

- Your shipment is complete and undamaged.
- You have the cables, tools, and other equipment that you need.
- Your installation site meets the physical, electrical, and environmental requirements.

The sections that follow provide information to help you prepare for installation.

## Shipment contents

In addition to the gateway and this guide, the shipping container for the Contivity 1700 contains a number of hardware accessories and other items.



**Note:** Unless you specifically ordered a power cable, no power cable is shipped with the Contivity 1700.

[Table 1](#) lists the hardware accessories and other items shipped with the gateway.

**Table 1** Items shipped with the Contivity 1700

Quantity	Item	Description
1	Rack mount shelf	Used to support the chassis in an equipment rack
4	10-32 panhead screws	Secures the rack mount shelf to the equipment rack and the chassis to the shelf
4	10-32 panhead cage nuts	Used only if the equipment rack does not have threaded rail holes
4	Rubber feet	Used to install the chassis on a surface
1	Antistatic wrist strap	Used to direct the discharge of static electricity from your body to the chassis to prevent damage to sensitive electronic components
1	Molded serial cable DB9/DB25-to-DB9/DB25	Used to connect the Contivity 1700 to a PC or to a local terminal
1	<i>Installing the Contivity 1700</i> (this book)	Provides instructions for installing the chassis and hardware options
1	Recovery diskette	Used to restore the software image and file system
1	Contivity software kit	Contains Contivity Secure IP Services software and documentation on CD
1	Contivity client kit	Contains Contivity VPN Client software and documentation on CD

Inspect all items for shipping damage. If you detect any damage, do not install the Contivity 1700. Call the Nortel Networks Technical Solutions Center in your area (see [“How to get help” on page 18](#)).

## Additional equipment

You may need items that are not included in the Contivity 1700 shipping container. Before you begin the installation, make sure that you have all the cables, tools, and other equipment that you need.

### Cables

You will need cables that are not included in the Contivity 1700 shipping container. For information about which cables are shipped and which ones you can order, see [“Connecting communications cables” on page 30](#). If you do not have the proper cables, contact your network administrator.

### Hardware for mounting the chassis in an equipment rack

To install the Contivity 1700 in an equipment rack, you need a Phillips screwdriver and an equipment rack that meets the following specifications:

- Heavy-duty steel construction
- Width of 19 in. (48.26 cm) and depth of 24 in. (60.96 cm)
- Electronic Industries Association (EIA) standard hole-spacing

If the rack does not have threaded rail holes, you must use the cage nuts shipped with the Contivity 1700.

## Site requirements

The installation site must provide sufficient free space around the Contivity 1700 to ensure proper ventilation and access for servicing. For information about the physical, electrical, and environmental requirements for the Contivity 1700, see [“Chassis specifications” on page 67](#).

## Installing the chassis

To install the Contivity 1700, do one of the following:


- Position the chassis on a flat, sturdy, horizontal surface.
- Mount the chassis in a standard equipment rack (see [“Installing the chassis in an equipment rack”](#) on page 24).

### Installing the chassis on a flat surface

If you decide to place the Contivity 1700 on a flat surface, make sure that the surface is large enough for the gateway and sturdy enough to support the combined weight of the Contivity 1700 and the cables that you attach to it.

The Contivity 1700 accessory kit includes four rubber feet that can be attached to the bottom of the gateway. [Figure 2](#) shows the placement of these rubber feet.

**Figure 2** Placement of rubber feet on the bottom of the chassis

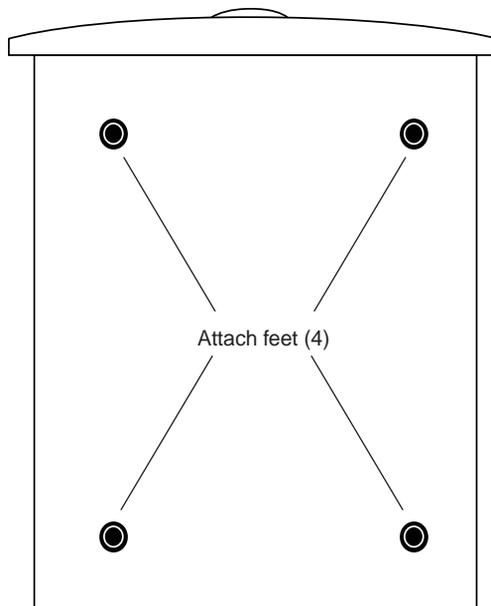

CS160016A

## Installing the chassis in an equipment rack

To mount the Contivity 1700 in an equipment rack, you need the following equipment:

- Standard 19-inch equipment rack
- 4 screws (supplied with the chassis)
- 4 cage nuts (supplied with the chassis) if the rack does not have threaded rail holes
- #2 Phillips screwdriver

### Rack-mount recommendations

When you mount the chassis in the rack, observe the following standard recommendations:


- The maximum recommended ambient temperature is 40°C (104°F). Make sure that the internal temperature of the rack does not exceed 40°C (104°F).
- Do not block the power supply vents or otherwise restrict air flow when installing the chassis in a rack.
- Stabilize your rack so that it does not tip over under the weight of the gateway and other devices.
- Make sure that the electrical branch circuits can handle the Contivity 1700 and other units in the rack before you install and turn on the gateway.
- Maintain a reliable earth-ground path in the rack system. The gateway is intended to connect to an earth ground.

### Attaching the shelf in the equipment rack

The Contivity 1700 ships with a rack-mount shelf to support the chassis in the equipment rack.


To attach the shelf to the inside of the equipment rack:

- 1 If the holes in the rack's vertical supports are not threaded, attach a cage nut in four locations at the front of the rack ([Figure 3](#)).

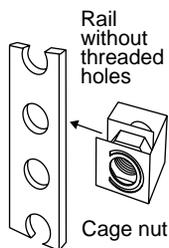**Figure 3** Attaching the cage nuts to the rack

CS260003A

- 2 Position the rack-mount shelf inside the rack as shown in [Figure 4](#).
- 3 Align the holes in the shelf with holes in the front of the rack.

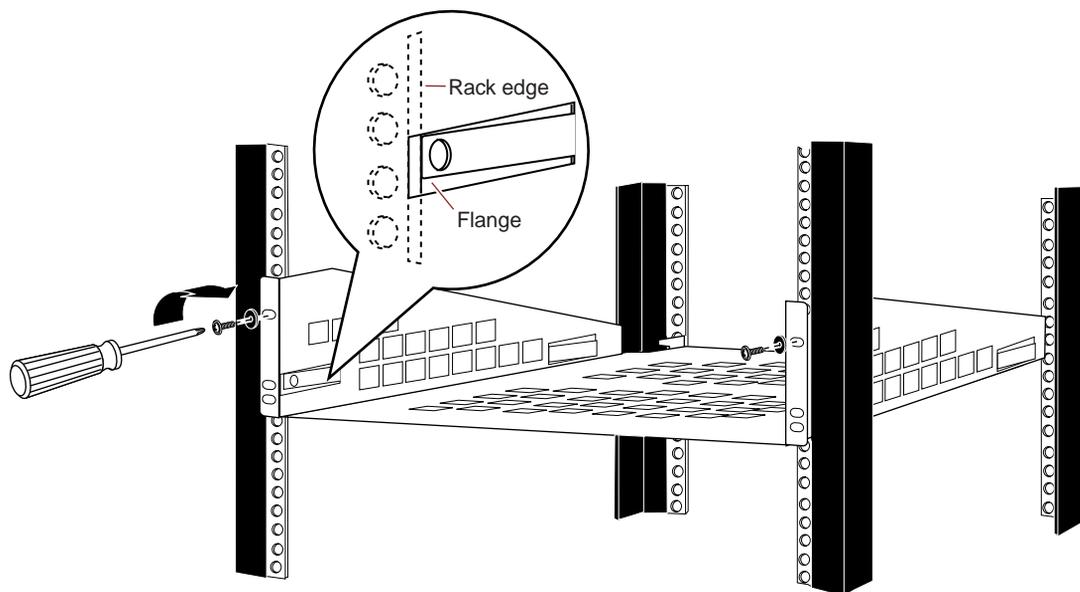**Figure 4** Installing the shelf in the equipment rack

CS260003A

- 4 Make sure that the support flange snaps into place ([Figure 4](#)).
- 5 Insert one of the supplied panhead screws through the top hole on each side of the shelf into the hole in the rack and tighten the screw ([Figure 4](#)).


## Mounting the chassis in the equipment rack

Nortel Networks recommends that two people install the chassis in the rack.

To install the Contivity 1700 in the equipment rack:

- 1 Set the Contivity 1700 on the rack-mount shelf.
- 2 Remove the front bezel from the Contivity 1700 (Figure 5).
  - a Using the Phillips screwdriver, turn each of the 2 screws on the front bezel a quarter turn counterclockwise.

**Figure 5** Removing the front bezel

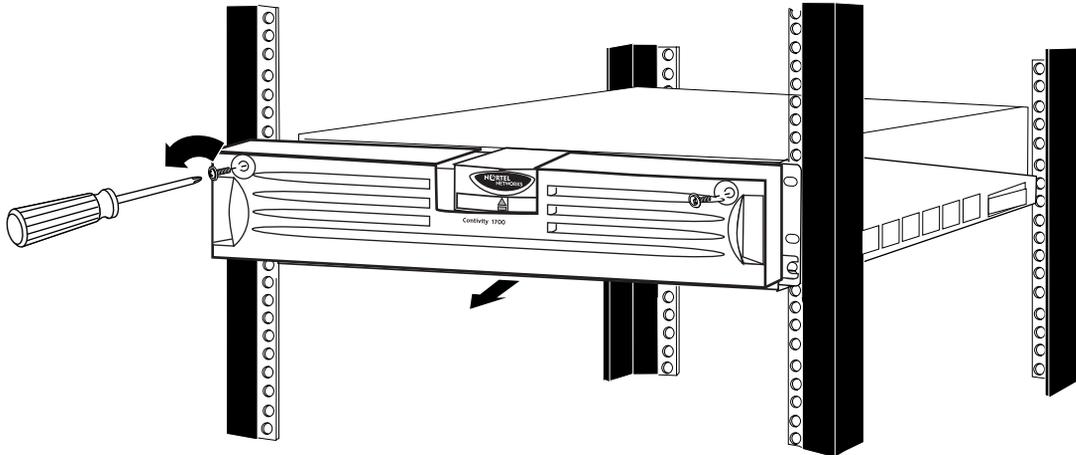

CS160014A

- b Grip the two handles and firmly pull the bezel toward you to unsnap it from the chassis.




**Caution:** Do not use the piece with the Nortel Networks logo and the LEDs as a handle.

---

The first few times that you remove the front bezel, it may be somewhat difficult to remove because the ball studs and socket clips are new.

- 3 Insert one of the supplied panhead screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws (see [Figure 4 on page 25](#)).
- 4 Replace the front bezel ([Figure 6](#)).
  - a Hold the two handles on the bezel and push it onto the chassis.
  - b Using the Phillips screwdriver, tighten the 2 screws to secure the bezel to the chassis.

**Figure 6** Replacing the front bezel

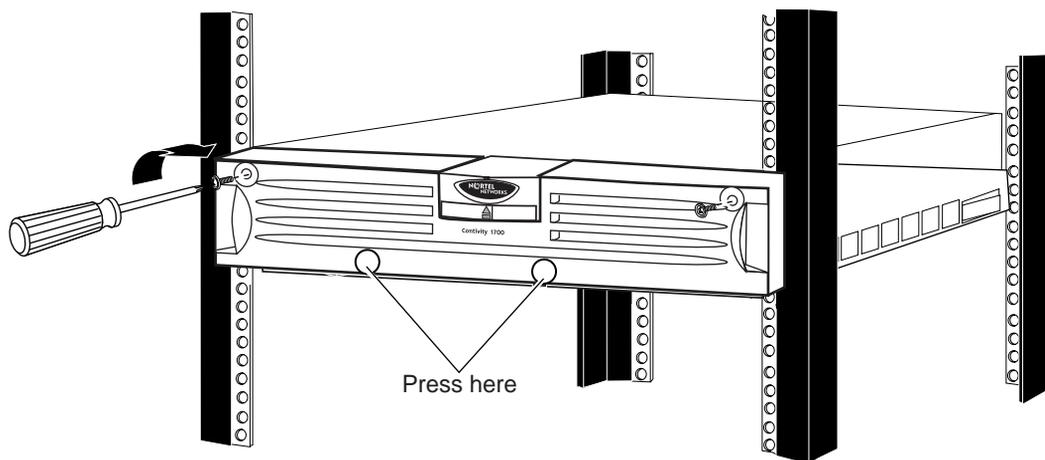

CS160015A



---

## Chapter 2

# Cabling the gateway and turning the power on

---

This chapter provides information about how to connect communications cables and the power cord to the Contivity 1700.



**Caution:** Connect the cables to the built-in Ethernet port and to the interfaces on the option cards installed in the Contivity 1700 before you plug the power cord into the outlet.

---

This chapter contains the following topics:

Topic	Page
<a href="#">Connecting communications cables</a>	30
<a href="#">Connecting the power cord</a>	32
<a href="#">Verifying a successful installation</a>	33
<a href="#">Understanding the LEDs</a>	34



**Caution:** Cabling for all WAN, LAN, and serial connections is not to be routed outside the building environment.

---

## Connecting communications cables

Gather the cables that you will attach to the Contivity 1700.

[Table 2](#) lists the system ports and the ports provided on the optional interface cards that you can install in the Contivity 1700. The table also indicates whether you can obtain cables for the ports from Nortel Networks.

**Table 2** Interfaces and cables for the Contivity 1700


Interface	Cable available from Nortel Networks		Contact supplier
	Included	Ordered separately	
10/100 Ethernet system port			X
Serial port	X		
10/100BASE Ethernet			X
ADSL WAN	X		
ISDN BRI			X
V.90 modem	X		
T1/E1 CSU/DSU WAN			X
Quad T1/E1 CSU/DSU WAN			X
Single V.35/X.21 WAN		X <sup>1</sup>	
Dual V.35 WAN	X		
HSSI WAN	X		

<sup>1</sup> Order either the V.35 cable or the X.21 cable.

For information about the connectors and cable pinouts, see [Appendix A](#), “[Technical specifications](#),” on page 67.

Figure 7 shows the back of the Contivity 1700. All interface cables and the power cord attach to the rear of the gateway.

**Figure 7** Rear view of the Contivity 1700

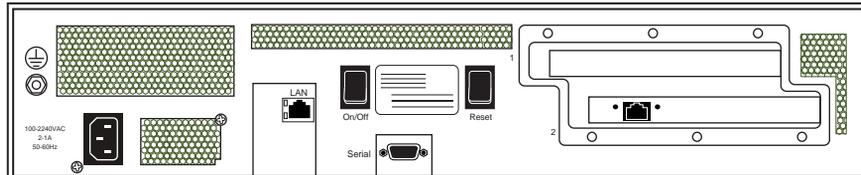

CS160002A

Connect the interface cables to the Contivity 1700 in this order:

- 1** Connect the 10/100BASE RJ-45 cable to the built-in 10/100BASE Ethernet LAN port on the gateway (see [Figure 7 on page 31](#)).
- 2** If you plan to connect a terminal or PC to the gateway, connect the serial cable shipped with the Contivity 1700 to the serial port (see [Figure 7 on page 31](#)).
- 3** Connect all other cables to the ports on the installed interface cards.

If you ordered optional interface cards, connect the cables for these interfaces to the ports.

## Connecting the power cord

You must order the power cord for the Contivity 1700 separately.



**Warning:** Do not modify or use the AC power cord if it is not the exact type that is required for your power outlet.

The power cord must meet the requirements described in [Table 3](#).

**Table 3** Power cord requirements

Requirement	Description
Current rating	The power cord must be rated for the available AC voltage and must have a current rating that is at least 125 percent of the gateway's current rating (2 A @ 100 VAC or 1A @ 220 VAC).
Certification	The power cord must have certification marks from an acceptable regional agency.
Cord length and flexibility	The power cord must be less than 4.5 meters (14.7 feet) long. It must be a flexible HAR (harmonized) cord or VDE-certified cordage to comply with the gateway's safety certifications.
Power supply connector	The connector that you plug into the AC receptacle on the gateway must be an IEC 320, Sheet C13 female.
Wall outlet connector	The power cord must terminate in a male plug with appropriate grounding.

To connect the power cord and turn on the system power:

- 1 Connect the power cord to the AC receptacle on the back of the gateway (see [Figure 7 on page 31](#)).
- 2 Connect the power cord to the power outlet.



**Caution:** You should protect the Contivity 1700 by plugging it into a surge suppressor.

- 3 Press and release the power switch on the rear of the Contivity 1700 (see [Figure 7 on page 31](#)) and wait for the gateway to boot.

See the next section, "[Verifying a successful installation.](#)"

## Verifying a successful installation

After you connect the gateway to the power outlet and turn it on, you can verify a successful installation by checking the LEDs on the front panel ([Figure 8](#)).

The following sequence of LEDs should occur:

- 1 The power LED (the Nortel Networks logo) lights blue.
- 2 As the gateway boots, the Boot/Ready LED lights yellow.
- 3 When the boot process completes successfully, the Boot/Ready LED lights green, indicating that the gateway is operational.
- 4 The Alert/Fail LED lights yellow because the gateway is not configured.

For a newly installed Contivity 1700, a yellow Alert/Fail LED does not indicate an alarm condition. After you configure the management IP address on the gateway, the Alert/Fail LED turns off. (See [Chapter 3, “Configuring the management IP interface,”](#) on page 41.)

If the LEDs on the front panel light in this sequence, your installation is successful. If the LEDs do not light in this sequence, check that the bezel is on the gateway and that the power cord is properly attached to the power supply (see [“Connecting the power cord”](#) on page 32).

If the Contivity 1700 still does not boot, contact your local Nortel Networks Technical Solutions Center (see [“How to get help”](#) on page 18).

## Understanding the LEDs

This section describes the LEDs on the front panel of the Contivity 1700 and on the interface cards that have LEDs. You can confirm that the LAN and WAN interfaces are cabled properly by examining the LEDs.

### Front panel LEDs

The front panel of the Contivity 1700 has a lighted Nortel Networks logo and two LEDs (Figure 8). These LEDs indicate the status of the Contivity 1700.

**Figure 8** Front panel LEDs

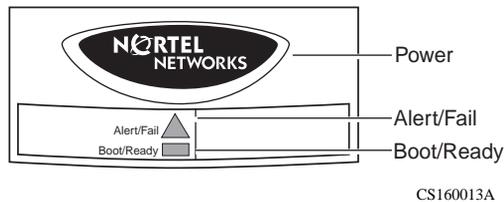


Table 4 describes the LEDs on the Contivity 1700 front panel.

**Table 4** Front panel LED indicators

LED	Indicator	Description
Power (Nortel Networks logo)	On	The gateway is receiving AC power.
	Off	The gateway is not receiving AC power.
Alert/Fail	Yellow	A non-fatal alarm condition exists. The yellow alert condition is described in the health check display.
	Red	A serious alarm condition exists that requires attention. A red alert usually indicates a hardware error. The red alert condition is described in the health check display.
Boot/Ready	Yellow	The gateway is booting and is in a non-ready state.
	Green	The boot process has completed successfully and the gateway has reached a state of readiness.

For complete information about the health check, event log, and system log, see *Managing and Troubleshooting the Contivity Secure IP Services Gateway*.

## LEDs on the system 10/100BASE Ethernet port

Figure 9 shows the LEDs for the 10/100BASE Ethernet port located on the rear of the Contivity 1700.

**Figure 9** LEDs on the system 10/100BASE Ethernet port

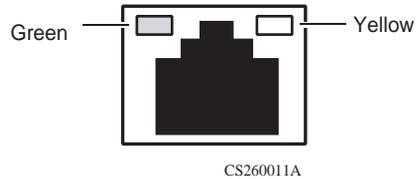


Table 5 describes the LEDs on the system 10/100BASE Ethernet port.

**Table 5** LED indicators on the system 10/100BASE Ethernet port

LED	Indicator	Description
Green	On	The LAN port is operating at 100 Mb/s.
	Off	The LAN port is operating at 10 Mb/s.
Yellow	On	The cable connections between the LAN port and the hub are good.
	Off	The cable connections between the LAN port and the hub are faulty.
	Flashing	The LAN port is sending or receiving network data. The frequency of the flashes increases with increased traffic.

## 10/100BASE Ethernet interface card LEDs

Figure 10 shows the LEDs on the 10/100BASE Ethernet interface card.

**Figure 10** LEDs on the 10/100BASE Ethernet interface card

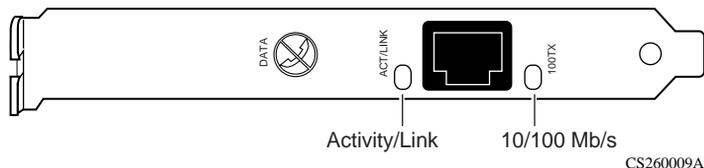


Table 6 describes the LEDs on the 10/100BASE Ethernet interface card.


**Table 6** LED indicators on the 10/100BASE Ethernet interface card

LED	Indicator	Description
ACT/LINK	Steady Green or Flashing Green	The card is sending or receiving network data. The frequency of the flashes increases with increased traffic.
	Off	The card is not sending or receiving data.
10/100TX	Green	The port is operating at 100 Mb/s.
	Off	The port is operating at 10 Mb/s.

## ADSL WAN interface card LEDs

Figure 11 shows the LEDs on the ADSL WAN interface card.

**Figure 11** LEDs on the ADSL WAN interface card

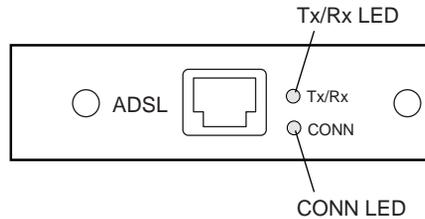

10972EA

Table 7 describes the LEDs on the ADSL WAN interface card.


**Table 7** LED indicators on the ADSL WAN interface card

CONN LED	Tx/Rx LED	Description
Steady green	Steady green	The ADSL interface card is not initialized; the software driver is not installed.
Off	Off	The ADSL interface card is initialized, but has not established a link with the ADSL network.
Flashing green	Off	The ADSL interface card is attempting to establish a link with the ADSL network.
Steady green	Off	The ADSL interface card has established a link with the ADSL network.
Steady green	Flashing green	The ADSL interface card is sending or receiving network data. (The LED may be dim.)

## T1/E1 CSU/DSU WAN interface card LEDs

Figure 12 shows the LEDs on the T1/E1 CSU/DSU WAN interface card.

**Figure 12** LEDs on the T1/E1 CSU/DSU WAN interface card

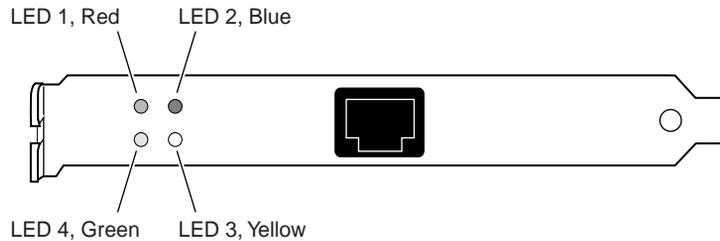

CS160012A

Table 8 describes the LEDs on the T1/E1 CSU/DSU WAN interface card.

**Table 8** LED indicators on the T1/E1 CSU/DSU WAN interface card

LED	Indicator	Description
LED 1	Red	Red alarm LED is lit when a loss-of-signal (LOS) or out-of-frame (OOF) condition is detected on the receive signal.
LED 2	Blue	Blue alarm LED is lit when receiving an upstream failure denoted by an alarm indication signal (AIS).
LED 3	Yellow	Yellow alarm LED is lit when the far-end equipment is in the red alarm condition.
LED 4	Green	Normal operation.

## Quad T1/E1 CSU/DSU WAN interface card LEDs

Figure 13 shows the LEDs on the quad T1/E1 CSU/DSU WAN interface card.

**Figure 13** LEDs on the quad T1/E1 CSU/DSU WAN interface card

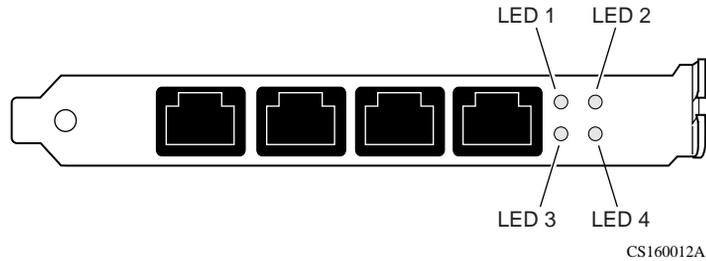


Table 9 describes the LEDs on the quad T1/E1 CSU/DSU WAN interface card.

**Table 9** LED indicators on the quad T1/E1 CSU/DSU WAN interface card

LED	Indicator	Description
LED 1	Off	Port 1 is disabled.
	On	Port 1 is enabled and operating normally.
	Flashing	Port 1 is enabled and in an alarm state (red, yellow, or blue).
LED 2	Off	Port 2 is disabled.
	On	Port 2 is enabled and operating normally.
	Flashing	Port 2 is enabled and in an alarm state (red, yellow, or blue).
LED 3	Off	Port 3 is disabled.
	On	Port 3 is enabled and operating normally.
	Flashing	Port 3 is enabled and in an alarm state (red, yellow, or blue).
LED 4	Off	Port 4 is disabled.
	On	Port 4 is enabled and operating normally.
	Flashing	Port 4 is enabled and in an alarm state (red, yellow, or blue).

## Single V.35/X.21 WAN interface card LEDs

Figure 14 shows the LEDs on the single V.35/X.21 WAN interface card.

**Figure 14** LEDs on the single V.35/X.21 WAN interface card

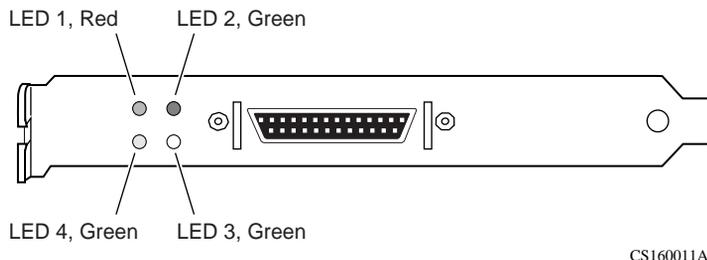


Table 10 describes the LEDs on the single V.35/X.21 WAN interface card.

**Table 10** LED indicators on the single V.35/X.21 WAN interface card

LED	Indicator	Description
LED 1	Red	No external transmit clock source is available.
LED 2	Green	The signals CDC and DSR are on between the DSU and the adapter. LED 2 detects receive link status.
LED 3	Green	Power to the adapter is on and the onboard microcode is loaded.
LED 4	Green	Cable is detected.

---

## Chapter 3

# Configuring the management IP interface

---

This chapter describes how to configure a management IP address, subnet mask, and default gateway address on a newly installed Contivity 1700. After you complete the procedures in this chapter, you will be able to configure and manage the Contivity 1700 using a Web browser from a PC.

You can create the management IP interface on the gateway in one of two ways:

- IP address configuration utility (recommended)

This utility is included on the Contivity software CD. You execute the utility from a PC running on the same subnet as the Contivity 1700.

- Serial interface configuration menu

If you cannot use the IP address configuration utility, you can use the serial interface configuration menu. You must connect a PC or terminal to the serial port on the Contivity 1700.

This chapter contains the following topics:

Topic	Page
<a href="#">Required information</a>	42
<a href="#">Using the IP address configuration utility</a>	42
<a href="#">Using the serial interface</a>	45
<a href="#">Testing the configuration</a>	49
<a href="#">Troubleshooting</a>	51

## Required information

Before you configure the management interface, collect this information:

- IP address for the management interface  
The management IP address must be accessible from one of the private physical interfaces on the Contivity 1700. For example, if you plan to assign IP address 10.2.3.3 with subnet mask 255.255.0.0 to the private physical interface, the management IP address must reside in the 10.2 network.
- Subnet mask  
The subnet mask specifies which IP addresses are directly reachable on the network and which ones must be routed through a gateway. For example, the IP address 10.2.3.3 with a subnet mask of 255.255.0.0 indicates that all hosts with addresses 10.2.*n.n* are directly reachable.
- Default gateway (optional)  
The default gateway routes packets to destinations for which there is no specific route in the routing table. You can configure a default gateway when you assign the management IP address, or you can configure it at a later time.



**Note:** Write down and save the management IP address. You will need it to configure the Contivity 1700.

---

## Using the IP address configuration utility

To create the initial IP interface on the Contivity Secure IP Services Gateway, Nortel Networks provides the IP address configuration utility on the Contivity server software CD.

### System requirements

To run the IP address configuration utility, your PC must meet the following requirements:

- Windows\* 95, Windows 98, Windows 2000, or Windows NT\*
- Microsoft\* TCP/IP protocol stack

- Located on the same subnet as the Contivity 1700 to be configured
- Operational network connection
- CD-ROM drive

To test the TCP/IP stack, send a ping command to any host.



**Note:** If your environment does not match these requirements, you can use the serial interface to configure the management IP address (see [“Using the serial interface” on page 45](#)).

---

## Running the IP address configuration utility

The IP address configuration utility searches for serial numbers of unconfigured gateways and prompts you to enter the management IP address, subnet mask, and default gateway (optional).

The ExtNetIP.exe program on the Contivity software CD starts the IP address configuration utility. You can copy the utility to your hard disk and execute it from there, or you can execute it from the CD drive.



**Note:** The IP address configuration utility has a Help file called ExtNetIP.hlp that you can display and copy to the hard drive.

---

To run the IP address configuration utility:


- 1 Insert the Contivity software CD into the CD-ROM drive.
- 2 Locate the Tools folder and then locate the ExtNetIP.exe file.  
If you want, copy the file to the hard drive on your system.
- 3 Double-click on the ExtNetIP.exe icon ([Figure 15](#)).

**Figure 15** Icon for the IP address configuration utility



When the IP address configuration utility finds an unconfigured gateway, it displays a dialog box where you assign the IP address, subnet mask, and default gateway (Figure 16).

**Figure 16** IP address configuration utility dialog box

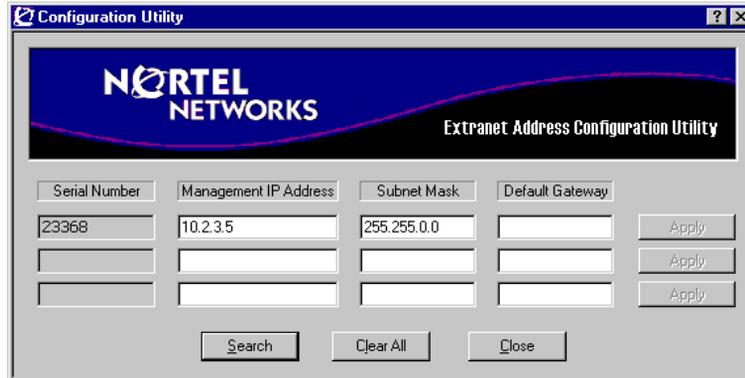

The utility automatically displays the serial number of the first unconfigured gateway in the dialog box.

- 4 Assign an appropriate management IP address and subnet mask to the Contivity 1700.

The default gateway address is optional; you can configure it later.

- 5 Click on Apply to configure the management IP address, subnet mask, and, if specified, the default gateway on the Contivity 1700.
- 6 Click on Close.

The IP configuration utility dialog box closes.

- 7 Go to [“Testing the configuration”](#) on page 49 to verify that you can access the Contivity 1700 from a Web browser.

For detailed information about configuring and managing the Contivity 1700, refer to the documentation on the Contivity software CD.

---

## Using the serial interface

You can use the serial interface to assign the Contivity 1700 a management IP address and subnet mask so that you can then use a Web browser for management.



**Note:** Nortel Networks recommends that you use the IP address configuration utility instead of the serial interface to assign the management IP address to the Contivity 1700 (see [“Using the IP address configuration utility” on page 42](#)).

---

To configure the management IP address using the serial interface:

- 1 Turn on the terminal or PC.

The terminal or PC should be configured as follows:

- 9600 baud
- 8 data bits
- 1 stop bit
- No parity
- No flow control

- 2 Connect the serial cable (supplied with the Contivity 1700) from the gateway’s serial port to a terminal or to the communications port on a PC.
- 3 On the PC, start HyperTerminal\* or another terminal emulation program and press Enter.

The Welcome screen appears.

```
Welcome to the Contivity Secure IP Services Gateway
Copyright (c) 1999-2004 Nortel Networks, Inc.
```

```
Version:           V04_90.230
Creation date:     July 27, 2004, 20:51:06
Date:             07/27/2004
Unit Serial Number: 317563
```

```
Please enter the administrator's user name:
```

**4** Enter the default user name and password for the administrator.

The factory default user name is *admin* and the default password is *setup*. The user name and password are case sensitive.

Please enter the administrator's user name: **admin**

Please enter the administrator's password: **\*\*\*\*\***

The serial main menu appears.

Main Menu: System is currently in NORMAL mode.

- 1) Interfaces
- 2) Administrator
- 3) Default Private Route Menu
- 4) Default Public Route Menu
- 5) Create A User Control Tunnel (IPsec) Profile
- 6) Restricted Management Mode           FALSE
- 7) Allow HTTP Management               TRUE
- 8) Firewall Options
- 9) Shutdown
- B) System Boot Options
- P) Configure Serial Port
- C) Controlled Crash
- L) Command Line Interface
- R) Reset System to Factory Defaults
- E) Exit, Save and Invoke Changes

Please select a menu choice (1 - 9,B,P,C,L,R,E):

**5** Type **1** and press Enter.

The Interface menu appears.

- Interface Menu

- 0) Slot 0, Port 1, Private LAN
  - Interface IP Address =
  - Subnet Mask = 0.0.0.0
  - Speed/Duplex = AutoNegotiate

```
1) Slot 1, Port 1, Public LAN
   IP Address =
   Subnet Mask = 0.0.0.0
   Speed/Duplex = AutoNegotiate
```

R) Return to the Main Menu.

Please select a menu choice:

- 6** Type **0** and press Enter to configure the management IP address.

The default settings appear, followed by the prompt for the management IP address. The old management IP address field is blank on a new gateway.

```
0) Slot 0, Port 1, Private LAN
   Interface IP Address =
   Subnet Mask = 0.0.0.0
   Speed/Duplex = AutoNegotiate
```

- \* Type 0.0.0.0 to delete.
- \* Just type <CR> to skip.

```
Old Management IP Address =
New Management IP Address* =
```

- 7** At the New Management IP Address prompt, type the management IP address and press Enter.

The prompt for the interface IP address appears.

```
Old Interface IP Address =
New Interface IP Address* =
```

- 8** Enter the IP address for the private LAN or press Enter to skip this prompt.

The subnet mask prompt appears.

```
Old Subnet Mask = 0.0.0.0
New Subnet Mask =
```

- 9** At the New Subnet Mask prompt, type the subnet mask for the management IP address and press Enter.

The Speed/Duplex prompt appears.

**10** Press Enter to leave the speed and duplex settings unchanged.

The Interface menu appears again with the changes you made.

- Interface Menu

```
0) Slot 0, Port 1, Private LAN
   Management IP Address = 47.33.245.66, (Subnet Mask =
   255.255.0.0)
   Interface IP Address = 47.33.245.64
   Subnet Mask = 255.255.0.0
   Speed/Duplex = AutoNegotiate
```

```
1) Slot 1, Port 1, Public LAN
   IP Address =
   Subnet Mask = 0.0.0.0
   Speed/Duplex = AutoNegotiate
```

```
R) Return to the Main Menu.
```

Please select a menu choice:

**11** Type **R** and press Enter to return to the serial main menu.

**12** From the serial main menu, type **E** and press Enter to save the new management IP address and mask and to exit the serial menu.

**13** Go to the next section, [“Testing the configuration,”](#) to verify that you can access the Contivity 1700 from a Web browser.

For detailed information about configuring and managing the Contivity 1700, refer to the documentation on the Contivity software CD.

## Testing the configuration

After you assign a management IP address to the Contivity 1700, start your Web browser to verify that you can access the gateway from the browser.

To manage the Contivity 1700 using the GUI, your PC must be running one of the following browsers:

- Internet Explorer Version 5.5 or later
- Netscape\* Navigator 4.79 or 6.2

To test the management IP address on the Contivity 1700:

- 1 Open a Web browser.
- 2 In the URL field, enter **http://** followed by the management IP address that you assigned to the Contivity 1700.

For example, if the management IP address is 10.2.3.2, enter **http://10.2.3.2**.

If the Welcome screen ([Figure 17](#)) appears, you correctly configured the management IP address for the Contivity 1700.




**Note:** If the Welcome screen does not appear, see [“Troubleshooting” on page 51](#).

---

- 3 Go to *Configuring Basic Features for the Contivity Secure IP Services Gateway* for information about configuring the Contivity 1700.

Figure 17 Welcome screen

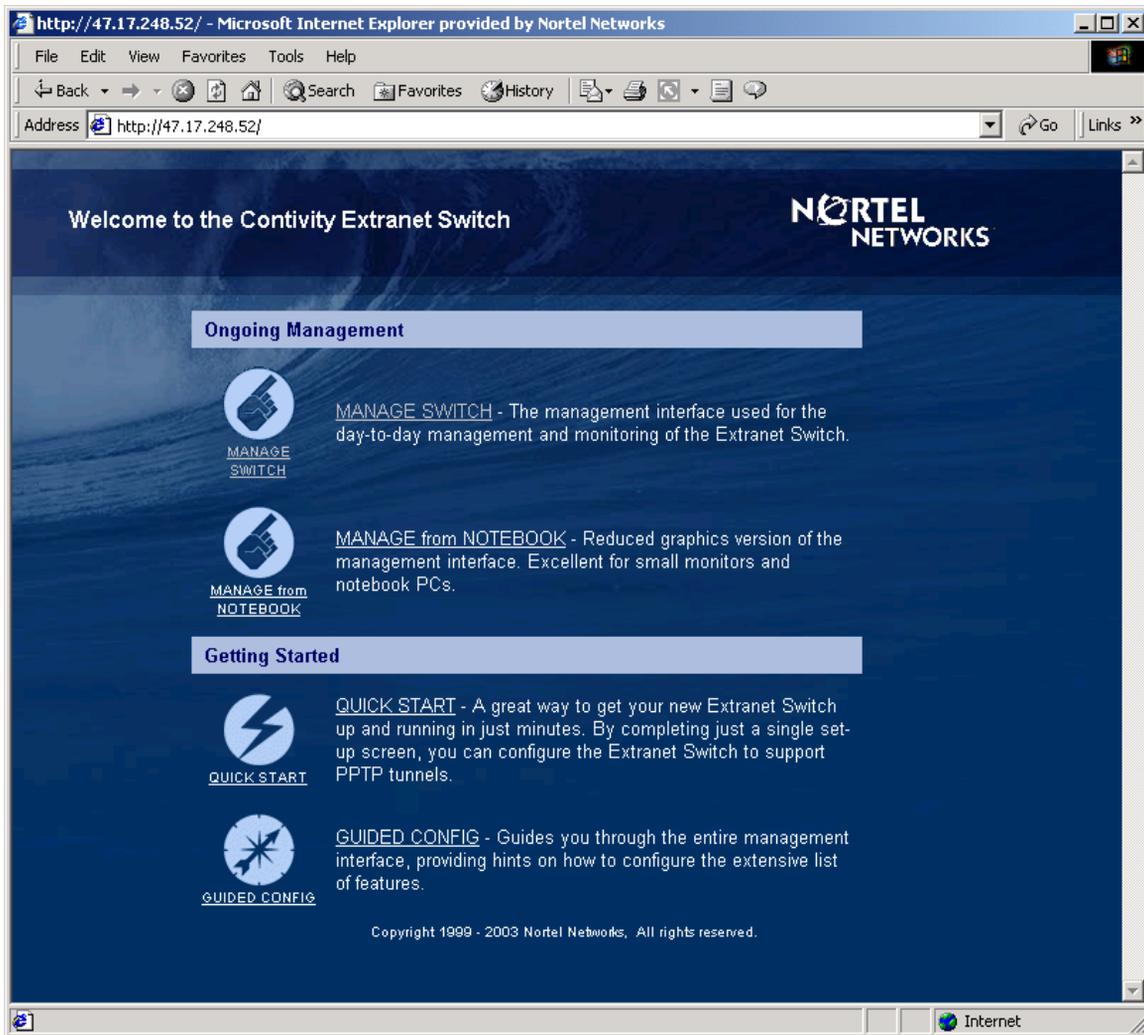

## Troubleshooting

If you cannot connect to the Contivity 1700 using your browser, check the following items:

- Make sure that you entered the correct IP address in the browser window.
- Type a known URL in the browser window to make sure that your network connection is good.
- Check that the management IP address that you configured is on the same subnet as the physical LAN attached to the gateway.
- Make sure that your PC is running a supported browser, either Internet Explorer Version 5.5 or later, or Netscape Navigator\* 4.79 or 6.2.
- Check the physical connections on the Contivity 1700, especially the LAN cable and the power cord.

If you still cannot connect to the Contivity 1700 using a browser, connect a terminal or PC to the gateway with the serial cable and check the management IP address listed in the serial menu (see [“Using the serial interface” on page 45](#)). Reconfigure the management IP address if necessary.

If you cannot resolve the problem, contact the Nortel Networks Technical Solutions Center closest to you (see [“How to get help” on page 18](#)).



---

## Chapter 4

# Installing option cards and DIMMs

---

This chapter provides instructions on how to install and replace the following field replaceable units (FRUs) in the Contivity 1700:

- LAN, WAN, and serial interface cards
- Hardware Accelerator card
- Dual inline memory modules (DIMMs)

This chapter contains the following topics:

Topic	Page
<a href="#">Shutting down the system to add or replace hardware</a>	54
<a href="#">Removing the front bezel and top cover</a>	55
<a href="#">Attaching the antistatic wrist strap</a>	58
<a href="#">Installing and replacing option cards</a>	59
<a href="#">Installing and replacing DIMMs</a>	63

To install any of these components, you must remove the front bezel and top cover from the Contivity 1700 and shut down the gateway.

## Shutting down the system to add or replace hardware

To install or replace an option card or a DIMM, you must first shut down the Contivity 1700 and unplug it.



**Caution:** Shut down the Contivity 1700 as described in this section before you attempt to add or replace an option card or DIMM.

---

To shut down the Contivity 1700:

- 1 Use the Web GUI or the command line interface to shut down the gateway.
  - Web GUI: Choose Admin > Shutdown. Select the option to power off the gateway after shutdown.
  - Command line interface: Use the `reload` command to shut down the system. For example, enter `reload power-off disable-logins "Upgrade hardware"`

For the complete syntax of the `reload` command, see the *Reference for the Contivity Secure IP Services Gateway Command Line Interface*.

- 2 Wait for the system to shut down.
- 3 Disconnect the power cord from the power outlet and then disconnect the cord from the Contivity 1700.

The power receptacle is located on the rear of the Contivity 1700 (see [Figure 7 on page 31](#)).



**Danger:** Make sure to turn off the Contivity 1700 and unplug the power cord before you attempt to remove or install an option card or DIMM.

---

## Removing the front bezel and top cover

To install option cards or DIMMs, you must remove the front bezel and the top cover from the gateway.

To remove the front bezel:

- 1 Shut down the Contivity 1700 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware”](#) on page 54.




**Danger:** Make sure to turn off the Contivity 1700 and unplug it before you attempt to install an option card or DIMM.

---

- 2 Using a screwdriver, turn each of the 2 screws on the front bezel a quarter turn counterclockwise ([Figure 18](#)).

**Figure 18** Removing the front bezel

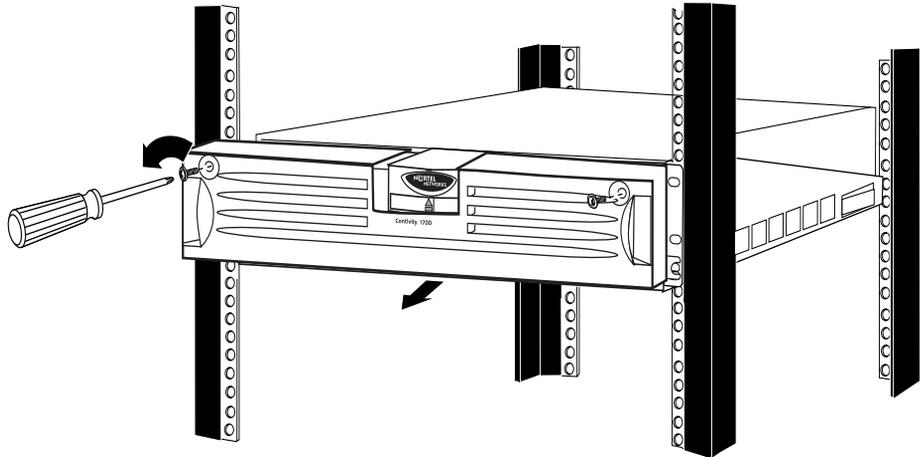

CS160014A

- 3 Grip the two handles and firmly pull the bezel toward you to unsnap it from the chassis.



**Caution:** Do not use the piece with the Nortel Networks logo and the LEDs as a handle.


---

The first few times that you remove the front bezel, it may be somewhat difficult to remove because the ball studs and socket clips are new.

To remove the top cover:

- 1 If the Contivity 1700 is installed in an equipment rack, remove it from the rack.
  - a At the front of the chassis, remove the 2 panhead screws that secure the bottom of the chassis to the equipment rack.
  - b Remove the Contivity 1700 from the rack-mount shelf and set it on a sturdy surface.
- 2 Using a Phillips screwdriver, remove the 4 screws that secure the cover to the chassis (Figure 19).

**Figure 19** Removing the top cover

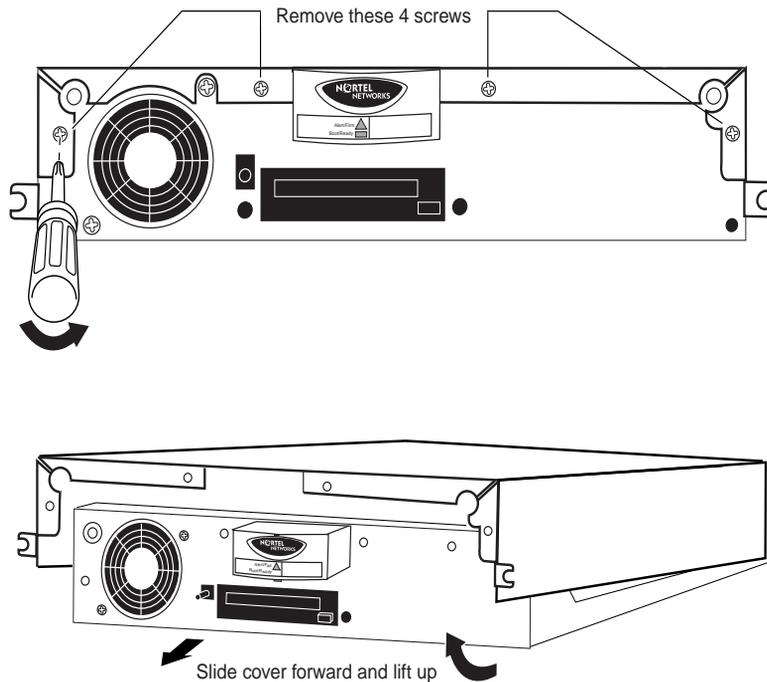


CS16003A

- 3 Slide the top cover forward approximately 1/4 inch.

- Lift the lid 2 or 3 inches and pull it off the chassis.

The Contivity 1700 system board is now exposed. [Figure 20](#) shows the location of the option card slots and the DIMMs on the system board.

**Figure 20** Location of option card slots and DIMMs on the system board

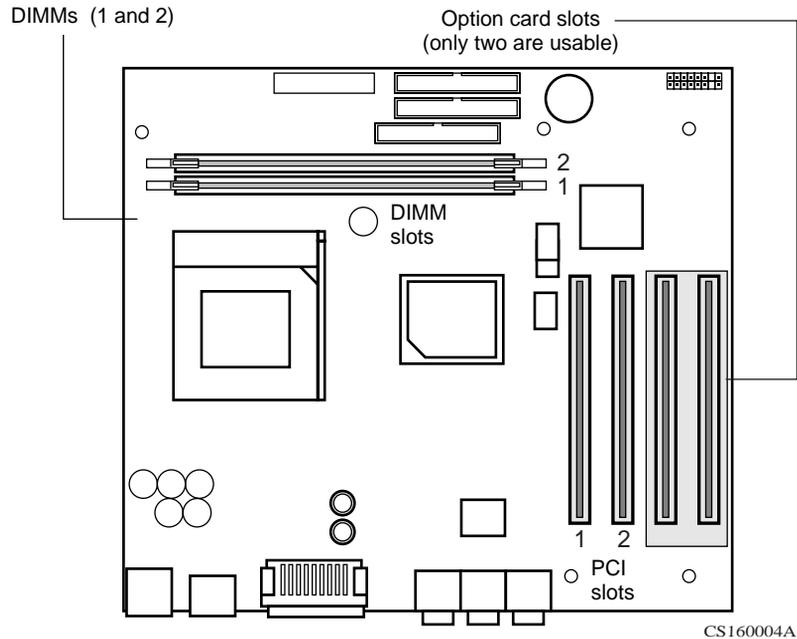

**Warning:** Beware of danger if battery is incorrectly replaced. Replace with the *same* or an *equivalent battery* only, as recommended by the manufacturer's instructions.



**Danger:** In spite of the above warning, which is mandated for regulatory approval, *you should not change the battery*. If you suspect a dead battery, contact Nortel Networks Customer Support.

## Attaching the antistatic wrist strap

Nortel Networks ships the Contivity 1700 with an antistatic wrist strap. The antistatic wrist strap directs the discharge of static electricity from your body to the chassis of the gateway to avoid damage to sensitive electronic components.

You must wear an antistatic wrist strap on your arm whenever you remove, install, or handle option cards and DIMMs.




**Caution:** Electrostatic discharge can damage hardware. Follow the procedure in this section to protect your equipment from damage.

To attach the antistatic wrist strap:

- 1 Locate the antistatic wrist strap and verify that the cable is attached to the wrist strap.
- 2 Place the strap around your wrist and adjust it to ensure that the metal buckle inside the strap touches your skin.
- 3 Insert the banana plug into the grounding jack at the rear of the chassis (Figure 21).

**Figure 21** Location of the grounding jack for the antistatic wrist strap

Grounding jack

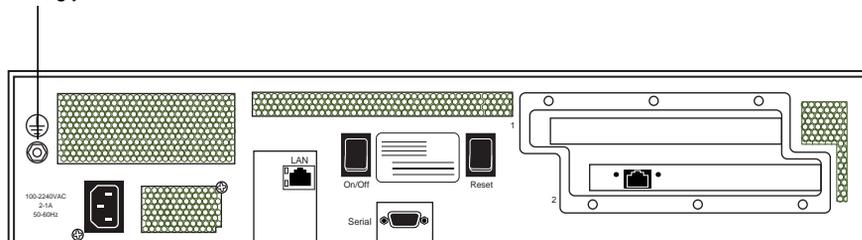

CS160002A

## Installing and replacing option cards

The Contivity 1700 has two slots for option cards (see [Figure 20 on page 57](#)). This section provides instructions on adding new option cards to the Contivity 1700 or, if necessary, replacing an existing card.

[Table 11](#) lists the option cards that you can install in the Contivity 1700.

**Table 11** Supported option cards for the Contivity 1700

Option card	Maximum number	Restrictions
Hardware Accelerator	1	The CSA card is not supported.
10/100 Ethernet LAN interface	2	
ADSL WAN interface <sup>1</sup>	2	
ISDN BRI S/T or U interface <sup>2</sup>	2	
T1/E1 CSU/DSU WAN interface	2	
Quad T1/E1 CSU/DSU WAN interface <sup>1</sup>	1	
V.90 modem interface <sup>2</sup>	2	
Single V.35/X.21 WAN interface	2	
Dual V.35 WAN interface <sup>3</sup>	1	Install in slot 1 only.
HSSI WAN interface <sup>4</sup>	1	Install in slot 1 only.

1 The Contivity 1700 must be running Version 4.90 or later.

2 The Contivity 1700 must be running Version 4.80 or later.

3 This option card is no longer available for purchase.

4 The gateway must be running Version 4.76 or later, or the hardware revision must be at least 03.

To install or replace an interface card or a hardware encryption accelerator card:


- 1 Shut down the Contivity 1700 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 54](#).



**Danger:** Turn off the Contivity 1700 and unplug it before you attempt to install an option card.

- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover” on page 55](#)).
- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover” on page 55](#)).
- 4 Attach the antistatic wrist strap that was shipped with the Contivity 1700 (see [“Attaching the antistatic wrist strap” on page 58](#)).
- 5 Locate the slot where you plan to install the new or replacement option card.
- 6 Remove the filler panel screw and pull out the filler panel (or the option card that you are replacing) from the slot ([Figure 22](#)).

**Figure 22** Removing an option card or a filler panel

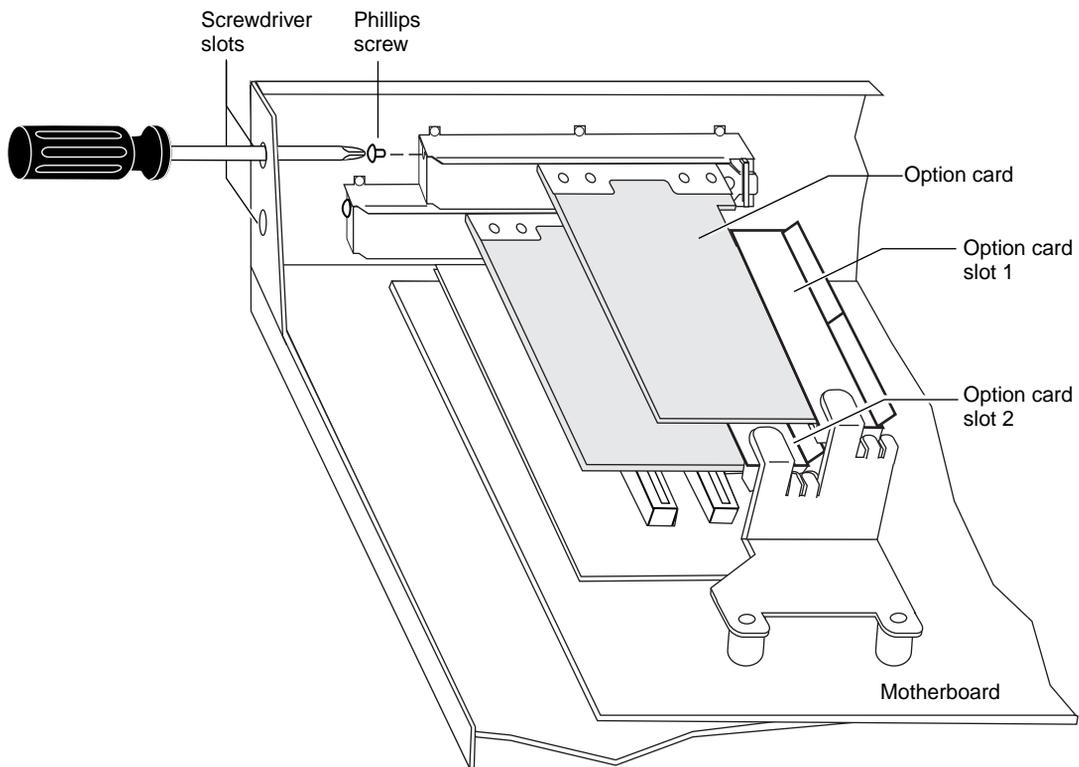


CS160020A

- 7 Slide the option card into the intended slot ([Figure 23](#)).

Make sure that the card is seated firmly in the slot. If the card is not seated properly, it will not work.

**Figure 23** Installing an option card

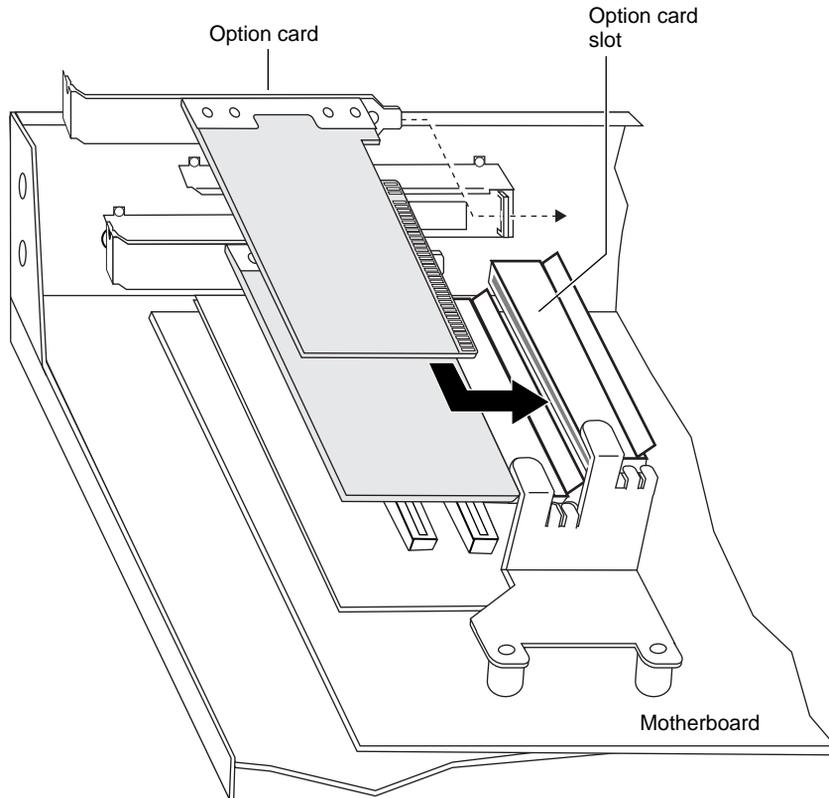


CS160019A

- 8 Replace the screw that secures the card to the slot (see [Figure 22 on page 60](#)).
- 9 Replace the top cover on the chassis (see [Figure 19 on page 56](#)).
  - a Hold the cover at an angle and slide it onto the chassis.
  - b Using a screwdriver, insert and tighten the 4 screws that secure the cover to the chassis.

- 10 If the Contivity 1700 is installed in an equipment rack, mount it in the rack.
  - a Set the Contivity 1700 on the rack-mount shelf in the rack.
  - b Insert one of the panhead screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.
- 11 Replace the front bezel (Figure 24).
  - a Hold the bezel by its two handles and push it onto the chassis.
  - b Using a screwdriver, tighten the 2 screws to secure the bezel to the chassis.

**Figure 24** Replacing the front bezel

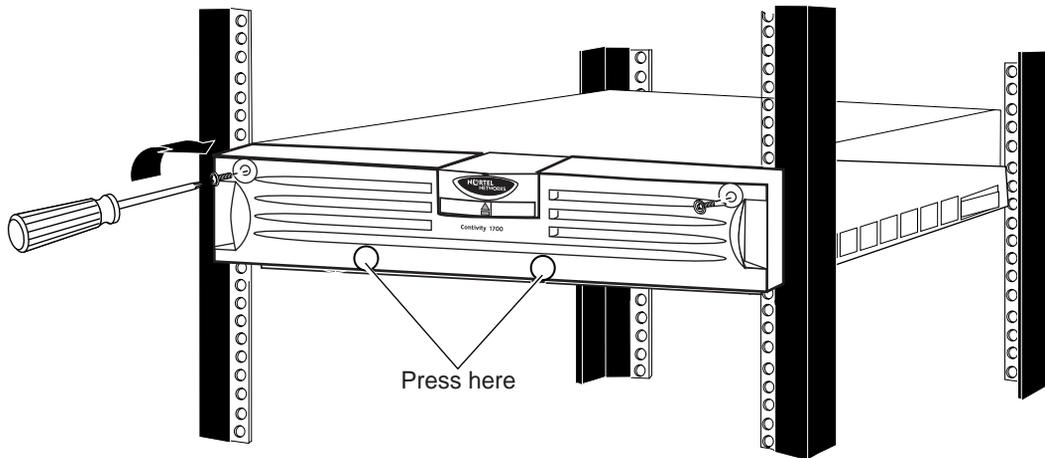

CS160015A

## Installing and replacing DIMMs

The Contivity 1700 has two slots for dual inline memory modules (DIMMs) (see [Figure 20 on page 57](#)). Unless you ordered additional memory, the Contivity 1700 is shipped with one 128 MB DIMM installed. You can upgrade memory in the gateway by installing a second 128 MB DIMM.

This section provides instructions on adding a second DIMM to the Contivity 1700 or, if necessary, replacing an existing DIMM.



**Caution:** Make sure to install the same type of DIMM that is already installed in your gateway. For example, do not install a 256 MB DIMM in the Contivity 1700.

---

To install or replace a DIMM:

- 1 Shut down the Contivity 1700 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 54](#).




**Danger:** Turn off the Contivity 1700 and unplug it before you attempt to install a DIMM.

---

- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover” on page 55](#)).
- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover” on page 55](#)).
- 4 Attach the antistatic wrist strap that was shipped with the Contivity 1700 (see [“Attaching the antistatic wrist strap” on page 58](#)).
- 5 If you are replacing a DIMM, remove the installed DIMM as follows:
  - a Press down the locking lever on either side of the DIMM ([Figure 25](#)).
  - b Pull the DIMM up to remove it from the slot.
- 6 Press down the locking lever on either side of the slot where you plan to install the DIMM ([Figure 25](#)).

- 7 Place the new or replacement DIMM in the slot ([Figure 25](#)).  
Use the alignment keys to properly position the DIMM in the slot.
- 8 Press the DIMM firmly into the socket.
- 9 Pull up the locking lever on either side of the DIMM to snap it into position.

**Figure 25** Installing and removing a DIMM

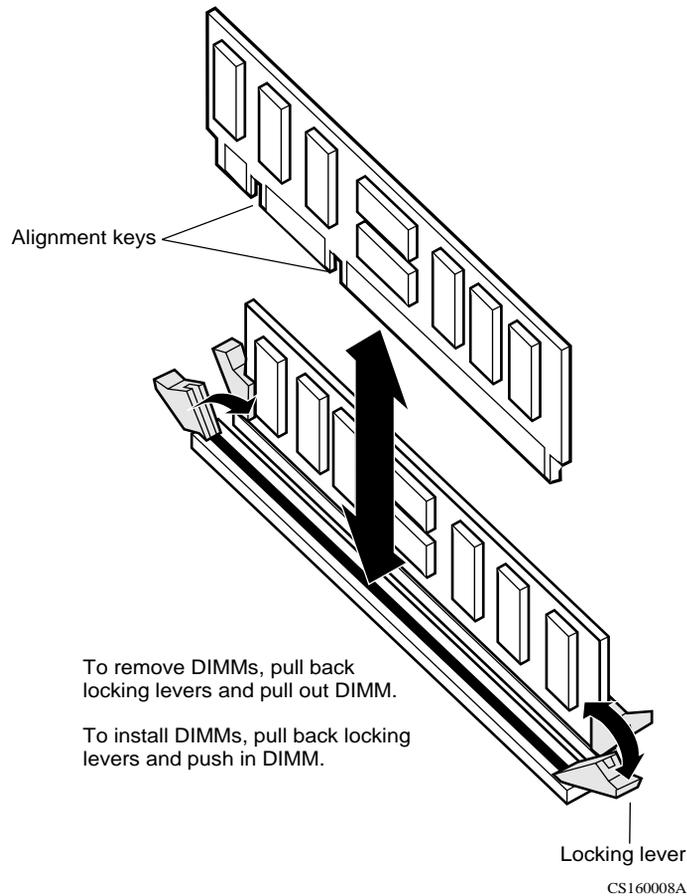

- 10 Replace the top cover on the chassis (see [Figure 19 on page 56](#)).
  - a Hold the cover at an angle and slide it onto the chassis.
  - b Using a screwdriver, insert and tighten the 4 screws to secure the cover to the chassis.

- 11** If the Contivity 1700 is installed in an equipment rack, mount it in the rack.
  - a** Set the Contivity 1700 on the rack-mount shelf in the rack.
  - b** Insert one of the panhead screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.
- 12** Replace the front bezel (see [Figure 24 on page 62](#)).
  - a** Hold the bezel by its two handles and push it onto the chassis.
  - b** Using the screwdriver, tighten the 2 screws to secure the bezel to the chassis.



# Appendix A

## Technical specifications

This appendix provides technical specifications for the Contivity 1700 chassis and its interfaces.

### Chassis specifications

[Table 12](#) lists physical, electrical, and environmental specifications for the chassis.

**Table 12** Physical, electrical, and environmental specifications

Specification	Description
Physical	
Height	3.5 in. (8.89 cm)
Width	17 in. (43.18 cm)
Depth	16 in. (40.64 cm)
Weight	26 lbs. (11.79 kg)
Electrical	
Voltage	100–120 VAC; 220–240 VAC
Current	2 A @ 100 VAC; 1 A @ 220 VAC
Frequency	50–60 Hz
Environmental	
Operating temperature	32–104°F (0–40°C)
Storage temperature	-40–185°F (-40–85°C)
Operating humidity	10–90% noncondensing
Storage humidity	10–95% noncondensing
Operating altitude	7000 ft (2133.6 m) maximum
Storage altitude	40,000 ft (12,192 m) maximum

## System ports

The Contivity 1700 system board provides the following built-in interfaces:

- 10/100BASE Ethernet LAN port
- Serial port

This section provides information about the 10/100BASE Ethernet LAN port and the serial port on the system board.

### 10/100BASE Ethernet LAN port

The system board provides one 10/100BASE Ethernet LAN interface on the rear of the chassis. This LAN interface, which accommodates an RJ-45 straight-through cable, is generally used for Web management. Depending on whether you will use the interface for 10BASE-T or 100BASE-TX operation, select cables for the interface as follows:

- 100BASE-TX connections require Category 5 twisted-pair wire. The 100BASE-TX specification supports 100 Mb/s transmission over two pairs of Category 5 twisted-pair Ethernet wiring: one pair each for transmit and receive operations.

The maximum recommended cable segment length is 100 meters between a 100BASE-TX repeater and a workstation (due to signal timing requirements). This wiring scheme complies with the EIA 568 wiring standard.

- 10BASE-T connections can use Category 3, 4 or 5 twisted-pair wiring.

[Figure 26](#) shows the 10/100BASE connector and its pinouts.

**Figure 26** 10/100BASE Ethernet connector

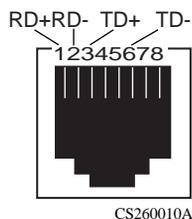


Table 13 provides the 10/100BASE Ethernet port pinouts.

**Table 13** 10/100BASE Ethernet port pinouts

Pin	Description
1	RD +
2	RD -
3	TD +
6	TD -

## Serial port

The system board provides a serial port on the rear of the chassis to enable out-of-band management. Using the serial port, you can assign the management IP address and subnet mask to the newly installed gateway (for more information, see [Chapter 3, “Configuring the management IP interface,”](#) on page 41).

The serial cable provided with the Contivity 1700 is a DB9/DB25-to-DB9/DB25 cable. This cable provides a crossover connection (transmit-to-receive and receive-to-transmit). The DB9 connector goes into the gateway and the other DB9 or DB25 connector goes into your workstation.

Table 14 provides the multiple DB9/DB25 serial interface cable pinouts.


**Table 14** Multiple DB9 and DB25 connector pinouts

Serial port DB9 connector		Serial port DB25 connector			Serial port DB25 connector		Serial port DB9 connector	
Pinout	Signal	Pinout	Signal		Pinout	Signal	Pinout	Signal
2	RXD	3	TXD	>	2	RXD	3	TXD
3	TXD	2	RXD	>	3	TXD	2	RXD
4	DTR	20	DSR	>	6	DTR	6	DSR
5	Ground	7	Ground	>	7	Ground	5	Ground
6	DSR	6	DTR	>	20	DSR	4	DTR
7	RTS	4	RTS	>	5	CTS	8	CTS
8	CTS	5	CTS	>	4	RTS	7	RTS

## Modem cable specifications

If you need to connect a modem to a Contivity 1700, you must obtain an appropriate modem cable. The modem cable must have a 9-pin D-sub plug that connects to the Contivity 1700 serial port and a 25-pin D-sub plug that connects to the RS-232-C modem port (Figure 27).

**Figure 27** Modem cable (9-pin D-sub plug to RS-232-C modem plug)

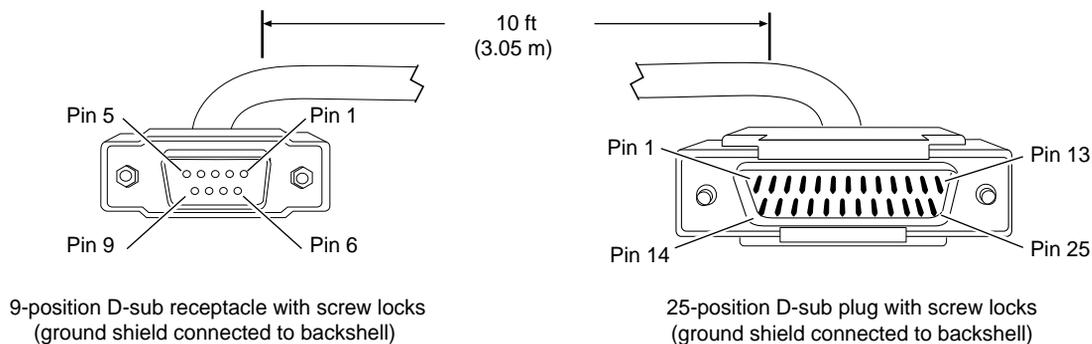

CAB0056A

Table 15 provides the modem cable pinouts.

**Table 15** Modem cable pinouts

Nortel Networks termination		Modem termination	
Signal	Pin # to Pin #	Pin # to Pin #	Signal
Data Carrier Detect	1	8	Data Carrier Detect
Transmit Data (TXD)	2	2	Transmit Data (TXD)
Receive Data (RXD)	3	3	Receive Data (RXD)
Data Set Ready	4	6	Data Set Ready
Data Terminal Ready	6	20	Data Terminal Ready
Clear to Send	7	5	Clear to Send
Request to Send	8	4	Request to Send

## Hardware option cards

The Contivity 1700 provides two PCI slots that support a combination of the following option cards:

- Hardware Accelerator card
- 10/100BASE Ethernet interface card
- ADSL WAN interface card
- ISDN BRI interface card
- T1/E1 CSU/DSU WAN interface card
- Quad T1/E1 CSU/DSU WAN interface card
- V.90 modem interface card
- Single V.35/X.21 WAN interface card
- Dual V.35 WAN interface card
- HSSI WAN interface card

This section provides information about the option cards, including the connector and the cable pinouts for each supported network interface card.

### Hardware Accelerator card

The Hardware Accelerator card performs bulk encryption and compression algorithms for IPsec tunnel traffic. The Hardware Accelerator card uses a single Hifn\* 7811 chip for encryption and compression. It performs triple DES and DES cryptography, LZS\* compression, and MD5 or SHA-1 authentication.


At startup, whenever a Hardware Accelerator card is manually enabled, or whenever the card recovers from a failure, the power-on self-test (POST) verifies the integrity of the hardware. This test includes validation of the accelerator card's encryption, MAC, and compression algorithms against their software counterparts. In the event POST fails, the Hardware Accelerator card is set offline.

For more information about the Hardware Accelerator card and instructions for configuring it, see the guide *Configuring Advanced Features for the Contivity Secure IP Services Gateway*.

## 10/100BASE Ethernet interface card

The 10/100BASE Ethernet interface card has a single RJ-45 connector that provides the signals needed to interface to 10BASE-T and 100BASE-TX Ethernet equipment. [Figure 28](#) shows the 10/100BASE Ethernet interface card.

**Figure 28** 10/100BASE Ethernet interface card

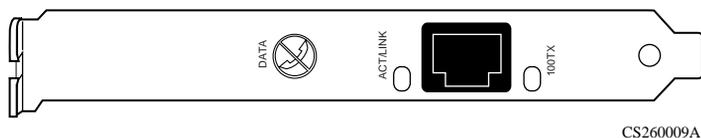

For information about the cables that you can connect to this interface and the cable pinouts, see [“10/100BASE Ethernet LAN port”](#) on page 68.

## ADSL WAN interface card


The ADSL Annex A and Annex B WAN interface cards have a single RJ-11 connector that provides the signals needed to interface to the digital subscriber line access multiplexer (DSLAM) and to telephone equipment.

[Figure 29](#) shows the ADSL WAN interface card.



**Note:** The ADSL Annex A and ADSL Annex B cards look identical.

 **Figure 29** ADSL WAN interface card



10972EA

Included in the accessory box is a 7-foot RJ-11 cable to attach to the DSLAM.

Table 16 provides the ADSL port pinouts.

**Table 16** ADSL cable pinouts


Pin	Function
1	N/C
2	Tip
3	Ring
4	N/C

## ISDN BRI interface card

The ISDN BRI S/T and ISDN BRI U interface cards have a single RJ-45 connector that provides the signals needed to interface to ISDN equipment. (To connect the ISDN S/T interface to the ISDN network, you must attach an external NT-1 device to the RJ-45 connector.)

Figure 30 shows the ISDN BRI S/T interface card.


**Figure 30** ISDN BRI S/T interface card

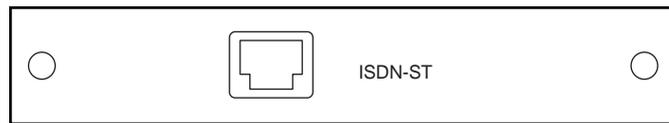

10972EA

Figure 31 shows the ISDN BRI U interface card.

**Figure 31** ISDN BRI U interface card

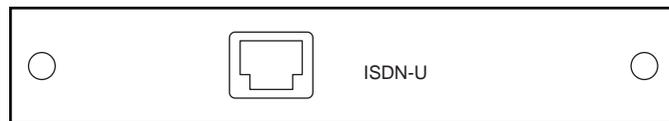

10972EB

The connector on the ISDN BRI S/T and ISDN BRI U interface cards accommodates an 8-pin RJ-45 modular patch cord. These cables are commonly sold as Category 5, or Ethernet, cables.



**Note:** Nortel Networks does not supply a cable with the ISDN BRI interface cards.

---

[Table 17](#) provides the ISDN BRI S/T cable pinouts.

**Table 17** ISDN BRI S/T cable pinouts

Pin	Function
1	N/C
2	N/C
3	Receive +
4	Transmit +
5	Transmit -
6	Receive -
7	N/C
8	N/C

[Table 18](#) provides the ISDN BRI U cable pinouts.


**Table 18** ISDN BRI U cable pinouts

Pin	Function
1	N/C
2	N/C
3	N/C
4	U interface network connection (tip)
5	U interface network connection (ring)
6	N/C
7	N/C
8	N/C

## T1/E1 CSU/DSU WAN interface card

The T1/E1 CSU/DSU WAN interface card has a single connector that provides the signals needed to interface to T1/E1 equipment. [Figure 32](#) shows the T1/E1 CSU/DSU WAN interface card.

 **Figure 32** T1/E1 CSU/DSU WAN interface card



CS160012A

The connector on the T1/E1 CSU/DSU WAN interface accommodates an 8-pin RJ-48 modular patch cord. These cables are commonly sold as Category 5, or Ethernet, cables.



**Note:** Nortel Networks does not supply the T1/E1 CSU/DSU WAN interface cable with the WAN interface card.

The cable you use should be wired in accordance with EIA-568-A wiring style. This wiring style ensures that the transmit signal (pins 4 and 5) and the receive signal (pins 1 and 2) are carried on a twisted pair inside the patch cord. The use of factory made patch cords is strongly recommended.

You connect the T1/E1 CSU/DSU WAN interface card to the service provider network using a straight-through cable or a crossover cable, depending on how the service provider wired its jack.

- For a straight-through connection, you can use a standard Category 5 (Ethernet) straight-through cable.
- For a crossover connection, you cannot use a standard Category 5 crossover cable. The T1/E1 CSU/DSU crossover cable and the Ethernet crossover cable are not interchangeable.

Table 19 provides the T1/E1 CSU/DSU cable pinouts for a crossover connection.

**Table 19** T1/E1 CSU/DSU cable pinouts for crossover connection

Standard-wired end 8-pin male	Signal name	Pair number and conductor	Special-wired end 8-pin male
1	RXDA<-TXDA	wht/org pair 2A	5
2	RXDB<-TXDB	orange pair 2B	4
3	not used	wht/grn pair 3A	3
4	TXDB->RXDB	blue pair 1B	2
5	TXDA->RXDA	wht/blu pair 1A	1
6	not used	green pair 3B	6
7	not used	wht/brn pair 4A	7
8	not used	brown pair 4B	8

The cable will operate properly if pins 3, 6, 7, and 8 are not connected.



**Caution:** For crossover connections, do not use Ethernet cable. The T1/E1 CSU/DSU will not work to specifications. Data may be corrupted.

Table 20 provides the T1/E1 CSU/DSU cable pinouts for a straight-through connection.


**Table 20** T1/E1 CSU/DSU cable pinouts for straight-through connection

Nortel Networks termination		Remote termination	
Signal	Pin # to	Pin #	Signal
Receive A (RXDA)	1	1	Receive A (RXDA)
Receive B (RXDB)	2	2	Receive B (RXDB)
not used	3	3	not used
Transmit B (TXDB)	4	4	Transmit B (TXDB)
Transmit A (TXDA)	5	5	Transmit A (TXDA)
not used	6	6	not used
not used	7	7	not used
not used	8	8	not used

## Quad T1/E1 CSU/DSU WAN interface card

The quad T1/E1 CSU/DSU WAN interface card has four connectors that provide the signals needed to interface to T1 or E1 equipment. [Figure 33](#) shows the quad T1/E1 CSU/DSU WAN interface card.

 **Figure 33** Quad T1/E1 CSU/DSU WAN interface card



CS160012A

Each connector on the quad T1/E1 CSU/DSU WAN interface card accommodates an 8-pin RJ-48 modular patch cord. These cables are commonly sold as Category 5, or Ethernet, cables.



**Note:** Nortel Networks does not supply cables with the quad T1/E1 CSU/DSU interface card.

The cables you use should be wired in accordance with EIA-568-A wiring style. This wiring style ensures that the transmit signal (pins 4 and 5) and the receive signal (pins 1 and 2) are carried on a twisted pair inside the patch cord. The use of factory-made patch cords is strongly recommended.

You connect the quad T1/E1 CSU/DSU WAN interface card to the service provider network using a straight-through cable or a crossover cable, depending on how the service provider wired its jack.


- For a straight-through connection, you can use a standard Category 5 (Ethernet) straight-through cable.
- For a crossover connection, you cannot use a standard Category 5 crossover cable. The T1/E1 CSU/DSU crossover cable and the Ethernet crossover cable are not interchangeable.

For information about the cable pinouts for a crossover connection, see [Table 19 on page 76](#). For information about the cable pinouts for a straight-through connection, see [Table 20 on page 76](#).

## Single V.35/X.21 WAN interface card

The single V.35/X.21 WAN interface card has a single DB28S connector that provides the signals needed to interface to V.35 and X.21 equipment. [Figure 34](#) shows the single V.35/X.21 WAN interface card.

 **Figure 34** Single V.35/X.21 WAN interface card



CS160011A

You need a DSU/CSU (digital service unit/channel service unit) between the WAN connection and the gateway. You can order a V.35 or X.21 cable to attach to the connector. This cable enables the WAN adapter to function as DTE (data terminal equipment).

[Table 21](#) provides the V.35 cable pinouts. [Table 22 on page 80](#) provides the X.21 cable pinouts. (The pair suffix A or B refers to an individual wire within a twisted pair.)

**Table 21** V.35 cable pinouts

Standard-wired end 28-pin male	Signal name	Pair number and conductor	Special-wired end 34-pin male	Notes
2	TXDA	pair 1A	P	
14	TXDB	pair 1B	S	
3	RXDA	pair 2A	R	
16	RXDB	pair 2B	T	
15	TXCA	pair 3A	Y	
12	TXCB	pair 3B	AA	
17	RXCA	pair 4A	V	
9	RXCB	pair 4B	X	
24	SCTEA	pair 5A	U	
11	SCTEB	pair 5B	W	
4	RTSA	pair 6A	C	
19	RTSB	pair 6B	no conn	Note 1

**Table 21** V.35 cable pinouts (continued)

Standard-wired end 28-pin male	Signal name	Pair number and conductor	Special-wired end 34-pin male	Notes
5	CTSA	pair 7A	D	
13	CTSB	pair 7B	no conn	Note 1
6	DSRA	pair 8A	E	
22	DSRB	pair 8B	J	
20	DTRA	pair 9A	H	
23	DTRB	pair 9B	no conn	Note 1
8	DCDA	pair 10A	F	
10	DCDB	pair 10B	no conn	Note 1
18	LL	pair 11A	L	
21	RL	pair 11B	N	
25	TM	pair 12A	NN	
26	M0<-SIGNAL GROUND	pair 12B	B	Note 2
27	M1<-SIGNAL GROUND	pair 13A	B	Note 2
28	M2	pair 13B	no conn	Note 1
1	SHIELD	pair 14A	A	Notes 3,4
7	SIGNAL GROUND	pair 14B	B	Notes 2,4

The following notes apply to the single V.35 DTE cable:

1. The term "no conn" means the wire is not connected to a pin in the 34-pin connector.
2. Wires 12B, 13A, and 14B connect to pin B in the 34-pin connector.
3. At each end, the cable shield and connector shell must connect respectively to pin A of the 34-pin connector and pin 1 of the standard 28-pin connector.
4. Do not connect Shield to Signal Ground because these are separate signals.

Table 22 provides the X.21 cable pinouts. (The pair suffix A or B refers to an individual wire within a twisted pair.)

**Table 22** X.21 cable pinouts

Standard-wired end 28-pin male	Signal name	Pair number and conductor	Standard-wired end 15-pin male	Notes
2	TXDA	pair 1A	2	
14	TXDB	pair 1B	9	
3	RXDA	pair 2A	4	
16	RXDB	pair 2B	11	
15	TXCA	pair 3A	6	
12	TXCB	pair 3B	13	
17	RXCA	pair 4A	pair 5A	Note 1
9	RXCB	pair 4B	pair 5B	Note 1
24	SCTEA	pair 5A	pair 4A	Note 1
11	SCTEB	pair 5B	pair 4B	Note 1
4	RTSA	pair 6A	3	
19	RTSB	pair 6B	10	
5	CTSA	pair 7A	5	
13	CTSB	pair 7B	12	
6	DSRA	pair 8A	no conn	Note 2
22	DSRB	pair 8B	no conn	Note 2
20	DTRA	pair 9A	no conn	Note 2
23	DTRB	pair 9B	no conn	Note 2
8	DCDA	pair 10A	no conn	Note 2
10	DCDB	pair 10B	no conn	Note 2
18	LL	pair 11A	no conn	Note 2
21	RL	pair 11B	no conn	Note 2
25	TM	pair 12A	no conn	Note 2
26	M0	pair 12B	no conn	Note 2
27	M1	pair 13A	no conn	Note 2
28	M2<-SIGNAL GROUND	pair 13B	8	Note 3

**Table 22** X.21 cable pinouts (continued)

Standard-wired end 28-pin male	Signal name	Pair number and conductor	Standard-wired end 15-pin male	Notes
1	SHIELD	pair 14A	1	Note 4,5
7	SIGNAL GROUND	pair 14B	8	Note 3,5


The following notes apply to the single X.21 cable:

1. Wires of pair 4 connect to wires of pair 5, but not to any pins in the DA-15.
2. The term “no conn” means the wire is not connected to a pin in the 15-pin connector.
3. Wires 13B and 14B connect to pin 8 in the 15-pin connector.
4. At each end, the cable shield and connector shell must connect to pin 1 of the connector.
5. Do not interconnect Shield to Signal Ground because these are separate signals.

## Dual V.35 WAN interface card

The dual V.35 WAN interface card has two DB26 connectors that provide the signals needed to interface to V.35 equipment. [Figure 35](#) shows the dual V.35 WAN interface card.

**Figure 35** Dual V.35 WAN interface card

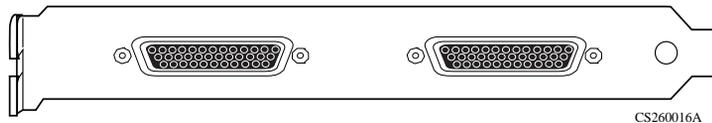

You need a DSU/CSU (digital service unit/channel service unit) between the WAN connection and the gateway. This section describes the connector and cables used with V.35 WAN synchronous adapters.

If you build your own V.35 DTE cables, observe the following guidelines:

- All connector hoods must be metal.
- Braid must enter and make contact inside the metal connector hood.
- V.35 conn strain relief must be conductive.

Included in the accessory box are two cables to attach to the V.35 connectors. These cables enable the WAN adapter to function as DTE (data terminal equipment). [Table 23](#) provides the DB26-to-V.35 cable pinouts.


**Table 23** DB26-to-V.35 cable pinouts

Standard-wired end 26-pin male	Signal name	Pair number and conductor	Special-wired end 34-pin male
2	TDA	pair 1A	P
14	TDB	pair 1B	S
3	RDA	pair 2A	R
16	RDB	pair 2B	T
24	ETA	pair 3A	U
11	ETB	pair 3B	W
17	RCA	pair 4A	V
9	RCB	pair 4B	X
15	TCA	pair 5A	Y
12	TCB	pair 5B	AA
4	RTS	pair 6A	C
		pair 6B	no conn
5	CTS	pair 7A	D
		pair 7B	no conn
6	DSR	pair 8A	E
		pair 8B	no conn
8	DCD	pair 9A	F
		pair 9B	no conn
20	DTR	pair 10A	H
		pair 10B	no conn
7	SGND	pair 11A	B
		pair 11B	no conn
1	CGND	pair 12A	A
		pair 12B	no conn

## HSSI WAN interface card

The HSSI WAN interface card has a 50-pin SCSI II female connector that provides the signals needed to interface to a T3 modem or modem eliminator. [Figure 36](#) shows the HSSI WAN interface card.

**Figure 36** HSSI WAN interface card

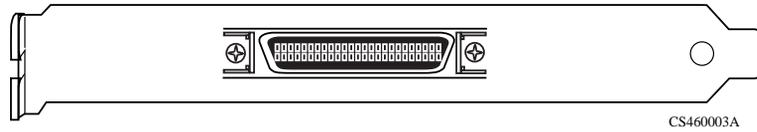

Included in the accessory box is a cable that maps the T3 signals out to a 50-pin SCSI II male connector.

[Table 24](#) provides the T3 cable pinouts.

**Table 24** T3 cable pinouts

50-pin SCSI male	Signal name	50-pin SCSI male
1	GND	1
2	RCB	2
3	CAB	3
4	RDB	4
5	LCB	5
6	STB	6
7	GND	7
8	TAB	8
9	TTB	9
10	LAB	10
11	TDB	11
12	LBB	12
13	GND	13
19	GND	19
24	TESTB	24
25	GND	25

**Table 24** T3 cable pinouts (continued)


50-pin SCSI male	Signal name	50-pin SCSI male
26	GND	26
27	RCA	27
28	CAA	28
29	RDA	29
30	LCA	30
31	STA	31
32	GND	32
33	TAA	33
34	TTA	34
35	LAA	35
36	TDA	36
37	LBA	37
38	GND	38
44	GND	44
49	TESTA	49
50	GND	50

## V.90 modem interface card

The V.90 modem interface card has two RJ-11 connectors that provide the signals needed to interface to an incoming telephone line and to telephone equipment.

[Figure 37](#) shows the V.90 modem interface card.

 **Figure 37** V.90 modem interface card



10973EA

Included in the accessory box is a 7-foot RJ-11 cable to attach to a telephone jack.

[Table 25](#) provides the V.90 modem port cable pinouts.

**Table 25** V.90 modem cable pinouts

Pin	Function
1	N/C
2	Tip
3	Ring
4	N/C



---

# Index

---

## Numbers

- 10/100BASE Ethernet interface card
  - cable specifications 68
  - connector 68
  - described 72
  - installing 59
  - LEDs 36
- 10/100BASE system LAN port
  - cable specifications 68
  - connector 68
  - LEDs 35

## A

- AC power cord
  - connecting 32
  - ordering 21
  - requirements 32
- accelerator card, hardware encryption
  - described 71
  - installing 59
- accessories, hardware, shipped with the gateway 21
- acronyms 16
- ADSL WAN interface card
  - cable pinouts 73
  - connector 72
  - described 72
  - installing 59
  - LEDs 37
- antistatic wrist strap, attaching 58

## B

- bezel, front
  - removing 26, 55
  - replacing 27, 62
- browsers, supported 49

## C

- cable, modem 70
- cables
  - available from Nortel Networks 30
  - connecting to the gateway 31
  - ordering 30
  - power. *See* AC power cord
  - technical specifications
    - 100BASE-TX connector 68
    - 10BASE-T connector 68
    - ADSL WAN interface 72
    - dual V.35 WAN interface 81
    - HSSI WAN interface 83
    - ISDN BRI interface 74
    - quad T1/E1 CSU/DSU WAN interface 77
    - serial interface 69
    - single V.35/X.21 WAN interface 78
    - T1/E1 CSU/DSU WAN interface 75
    - V.90 modem interface 85
- cage nuts, when used 22, 24
- Category 5 wiring requirements 68
- chassis
  - installing 23
  - removing
    - front bezel 26, 55
    - top cover 56

- chassis (*continued*)
  - replacing
    - front bezel 27, 62
    - top cover 61
  - specifications 67
- configuring the management IP address
  - using the IP address configuration utility 42
  - using the serial interface 45
- connecting
  - cables 31
  - power cord 32
  - serial cable to the gateway 45
  - to the gateway using a browser 49
- connectors
  - 10/100BASE LAN interface card 72
  - 10/100BASE system LAN port 68
  - ADSL WAN interface 72
  - dual V.35 WAN interface 81
  - HSSI WAN interface 83
  - ISDN BRI S/T interface 73
  - ISDN BRI U interface 73
  - quad T1/E1 CSU/DSU WAN interface 77
  - single V.35/X.21 WAN interface 78
  - T1/E1 CSU/DSU WAN interface 75
  - V.90 modem interface 85
- Contivity 1700
  - configuring management IP address for 41
  - connecting cables to 29
  - connecting power cord 32
  - description 19
  - installing option cards and DIMMs 53
  - installing the chassis 23
  - shipment contents 21
  - shutting down 54
  - technical specifications 67
  - verifying a successful installation 33
  - verifying connectivity 49
- conventions, text 16
- cover, top
  - removing 56
  - replacing 61

- customer support 18

## D

- default gateway, defined 42
- DIMMs (dual inline memory modules),
  - installing 63
- dual V.35 WAN interface card
  - connector 81
  - installing 59
  - pinouts 82

## E

- electrical specifications 67
- encryption accelerator card, hardware
  - described 71
  - installing 59
- environmental specifications 67
- equipment rack, specifications 22

## F

- field replaceable units (FRUs), installing 53
- front bezel
  - removing 26, 55
  - replacing 27, 62
- front panel LEDs 34

## G

- gateway, default, defined 42
- GUI, Web-based 49

## H

- Hardware Accelerator card
  - described 71
  - installing 59
- hardware accessories shipped with the gateway 21

hardware option cards  
installing 59  
*See also* 10/100BASE-TX Ethernet interface card, serial interface cards, WAN interface cards  
specifications 71

HSSI WAN interface card  
cable pinouts 83  
connector 83  
installing 59

## I

installing DIMMs 63  
installing option cards 59  
installing the chassis  
in an equipment rack 24  
on a flat surface 23  
prerequisites 20

interfaces, option card, technical specifications 71  
interfaces, system, technical specifications 68

Internet Explorer, supported versions 49

IP address configuration utility 42

IP address for managing the gateway. *See* management IP address

ISDN BRI S/T interface card  
cable pinouts 74  
connector 73  
installing 59

ISDN BRI U interface card  
cable pinouts 74  
connector 73  
installing 59

## L

LAN interface cards  
connector 68  
installing 59  
LEDs 36  
specifications 72

LAN port, system  
cable specifications 68  
connector 68  
LEDs 35

LEDs  
10/100BASE Ethernet interface card 36  
ADSL WAN interface card 37  
front panel 34  
quad T1/E1 CSU/DSU WAN interface card 39  
single V.35/X.21 WAN interface card 40  
system LAN port 35  
T1/E1 CSU/DSU WAN interface card 38  
used to verify correct installation 33

## M

main menu, serial interface 46

management IP address  
configuring  
using the IP configuration utility 42  
using the serial interface 45  
defined 42  
troubleshooting configuration of 51  
verifying 49

mask, subnet, defined 42

memory modules, adding and replacing 63

modem cable  
described 70  
pinouts 70

## N

Netscape Navigator, supported versions 49

NT-1 device, required for ISDN BRI S/T 73

## O

option cards  
installing 59  
*See also* 10/100BASE-TX Ethernet interface card, serial interface cards, WAN interface cards  
specifications 71

**P**

- physical specifications 67
- pinouts
  - 10/100BASE Ethernet connector 68
  - ADSL WAN interface 73
  - dual V.35 WAN interface 82
  - HSSI WAN interface 83
  - ISDN BRI S/T interface 74
  - ISDN BRI U interface 74
  - modem cable 70
  - serial interface cable 69
  - single V.35 WAN interface 78
  - single X.21 WAN interface 80
  - T1/E1 CSU/DSU WAN interface 76
  - V.90 modem interface 85
- plug, AC power, specifications 32
- power cord
  - connecting 32
  - ordering 21
  - requirements 32
- powering down the gateway 54
- product support 18
- publications
  - hard copy 18
  - related 17

**Q**

- quad T1/E1 CSU/DSU WAN interface card
  - connector 77
  - described 77
  - installing 59
  - LEDs 39

**R**

- rack, equipment, specifications 22
- rack-mount considerations 24
- rack-mount shelf 24
- requirements, site 22
- RJ-45, pinouts 68

**S**

- serial cable, connecting to the gateway 45
- serial interface
  - cable pinouts 69
  - connecting modem to 70
  - described 69
  - using to configure the management IP address 45
- serial interface cards
  - installing 59
  - specifications
    - ISDN BRI 73
    - V.90 modem 85
- serial main menu 46
- shelf for rack-mount installation 24
- shipment contents 21
- shutting down the gateway 54
- single V.35/X.21 WAN interface card
  - connector 78
  - installing 59
  - LEDs 40
  - V.35 pinouts 78
  - X.21 pinouts 80
- site requirements 22
- specifications
  - chassis 67
  - equipment rack 22
  - option cards 71
  - serial port 69
  - system ports 68
- subnet mask, defined 42
- support, Nortel Networks 18
- system LAN port
  - cable specifications 68
  - connector 68
  - LEDs 35
- system ports, specifications 68

**T**

- T1/E1 CSU/DSU WAN interface card
  - cable pinouts 76
  - connector 75
  - installing 59
  - LEDs 38
- T3 HSSI WAN interface card. *See* HSSI WAN interface card
- technical publications 18
- technical specifications 67
- technical support 18
- testing connectivity to the gateway 49
- text conventions 16
- top cover
  - removing 56
  - replacing 61
- troubleshooting the management IP address 51
- turning off the gateway 54

**U**

- user interface, Web 49

**V**

- V.35 WAN interface card. *See* dual V.35 WAN interface card
- V.35/X.21 WAN interface card. *See* single V.35/X.21 WAN interface card
- V.90 modem interface card
  - cable pinouts 85
  - connectors 85
  - installing 59
- verifying a successful installation 33
- verifying the management IP interface 49

**W**

- WAN interface cards
  - installing 59
  - LEDs
    - ADSL 37
    - quad T1/E1 CSU/DSU 39
    - single V.35/X.21 40
    - T1/E1 CSU/DSU 38
  - specifications
    - ADSL 72
    - dual V.35 81
    - HSSI 83
    - quad T1/E1 CSU/DSU 77
    - single V.35/X.21 78
    - T1/E1 CSU/DSU 75
- Web interface to the gateway 49
- Welcome screen 50
- wiring requirements, Category 5 68
- wrist strap, antistatic, attaching 58

**X**

- X.21 WAN interface card. *See* single V.35/X.21 WAN interface card

