



SLC[®]-2000 MSDT

AUA408 (RT) MSDT Server 12 or 24 DS0 — SAIUMB0

This data sheet describes the AUA408 MSDT Server (COMCODE 106275662) and is intended for the end-user of the unit. The AUA408 MSDT Server functions in the following modes:

- **Optical Unit (OU) Mode.** The AUA408 MSDT Server is designed to support the SLC[®]-2000 multi-services distant terminal (MSDT) used in SLC Carrier Systems configured for Fiber in the Loop (FITL). The AUA408 MSDT Server is always located in a remote terminal (RT) that interconnects to a TR-08 * switch interface in an integrated configuration, or to a central office terminal (COT) in a universal arrangement. The AUA408 MSDT Server provides either 12 or 24 channels of service at the 1.544 Mb/s rate to a single MSDT over a fiber optic loop. On the loop side, the AUA408 MSDT Server interfaces an optical unit (OU) using a balanced EIA-422 interface. On the system side, the AUA408 MSDT Server interfaces with the transmit/receive unit (TRU) and the bank control unit (BCU).
- **DSX-1 Mode.** The AUA408 MSDT Server provides between 6 and 24 channels of service at the 1.544 Mb/s rate to a single MSDT over a DSX-1 loop. On the system side, the AUA408 MSDT Server interfaces with the transmit/receive unit (TRU) and the bank control unit (BCU). In addition to providing the EIA-422 interface to support fiber optics transport to the MSDT, the AUA408 MSDT Server has an option switch for a DSX-1 interface. The DSX-1 option is intended for applications where the SLC-

* Bellcore Technical Reference TR-TSY-000008 Issue 2, August 1987, *Digital Interface Between the SLC 96 Digital Loop Carrier System and a Local Digital Switch.*

2000 MSDT is supported by means of a T1 carrier facility, or a higher rate multiplexer. In T1 carrier applications, the DSX-1 interface is wired to an external (Telco provided) T1 office repeater unit that provides the interface to the T1 facility.

This data sheet is reissued to clarify the 2 modes of operation: the OU mode and the DSX1 mode.

Figure 1 is a functional block diagram of the unit, and Figure 2 shows the faceplate.

The AUA408 MSDT Server is a triple-width unit comprised of two circuit boards joined together with one common faceplate. It occupies three adjacent channel unit slots in the RT shelf. In the transmit direction (toward the MSDT), the AUA408 MSDT Server accepts 12 or twenty-four 16-bit time slots from the backplane bus for either the universal or integrated configuration, and feeds them to the transceiver. The transceiver multiplexes this signal with framing bits into a 1.544 Mb/s bit stream and feeds it to the backplane interface logic (BPIL) circuit. The BPIL circuit scrambles the 1.544 Mb/s bit stream and feeds it to the OU using a balanced line driver.

The signal received from the OU is converted from a balanced to an unbalanced logic level signal and passed to the BPIL circuit where clock is recovered. The 1.544 Mb/s bit stream is descrambled by the BPIL circuit, demultiplexed by the transceiver, checked for faults, and passed to the BPIL circuit for buffering and rearrangement in the time slot interchange (TSI) and output to the backplane bus.

Per-channel trunk processing is performed in the upstream (toward switch or central office terminal) direction.

Unit Indicators

FAIL (Red LED): When lighted, indicates that a failure has been sectionalized to the AUA408.

CLF (Yellow LED): When lighted, indicates that a carrier line failure has been sectionalized to the fiber link or metallic link connecting the RT and MSDT.

DT (Yellow LED): When lighted, indicates an event at the MSDT that is not related to CATV.

CATV DT (Yellow LED): When lighted, indicates a CATV related event at the MSDT.

CONFIG (Yellow LED): When lighted, indicates a problem with an MSDT CU and/or AUA408 MSDT Server configuration.

Unit Options

TIMESLOT SELECTOR (Faceplate-mounted switch and seven segment LED display): The switch is a 10-position switch used to select the number of virtual slots that the AUA408 will occupy. For DSX-1 operation only, the minimum number of slots that is to be selected is 6 and the maximum number is 12. For OU operation, the number of slots is either 12 or 24. The seven segment LED display indicates the position setting of the TIMESLOT SELECTOR switch. The LED display also indicates the presence of certain conditions (initialization, lamp test, or failure detection) by lighting all segments, flashing all segments, displaying a zero, or blanking all segments. Details about interpreting the segment display indications are given in the Operations and Maintenance TOP chapter of the AT&T 363-205-004, *SLC-2000 MSDT, User/Service Manual*.

MJ (Option Strap): This strap changes the alarm severity for a subset of failures. When the strap is in the MJ=12 position, with 12 slots assigned to the AUA408 CU, or in the MJ=ANY position, a failure causes a major alarm to be transmitted. When the strap is in the MJ=12 position, with less than 12 slots assigned to the AUA408 CU, a failure causes a minor alarm to be transmitted.

OU/DSX (Board-mounted switch): This switch is placed in the OU position for fiber optic based applications requiring a balanced EIA-422 interface to the external AYB1B OU. The switch is placed in the DSX position for T1 carrier applications.


B8ZS/ZCS (Board-mounted switch): This switch (B/Z) selects between per-channel zero-code suppression (position Z) and the bipolar with 8 zero substitution (position B) line code. This switch should be set per applicable office records. This switch is functional only when the OU/DSX switch is in the DSX position.

Equalization (Board-mounted switch): These three switches (TRANS- 0, 1, 2) select the amount of pre-equalization based on the distance between the bank and the DSX-1 cross-connect (see Table 1). These switches are functional only when the OU/DSX switch is in the DSX position.

Table 1. Equalization Option Settings

<u>Trans- 2</u>	<u>1</u>	<u>0</u>	<u>Distance to DSX-1 (Feet) (Note)</u>
OFF	OFF	ON	0 to 132
OFF	ON	OFF	133 to 265
OFF	ON	ON	266 to 398
ON	OFF	OFF	399 to 532
<u>ON</u>	<u>OFF</u>	<u>ON</u>	<u>533 to 655</u>

Note: These distances are for ABAM cable used in the central office. Refer to AT&T 915-710-115 for calculations for other types of cable used for collocated RT and T1 extension applications.

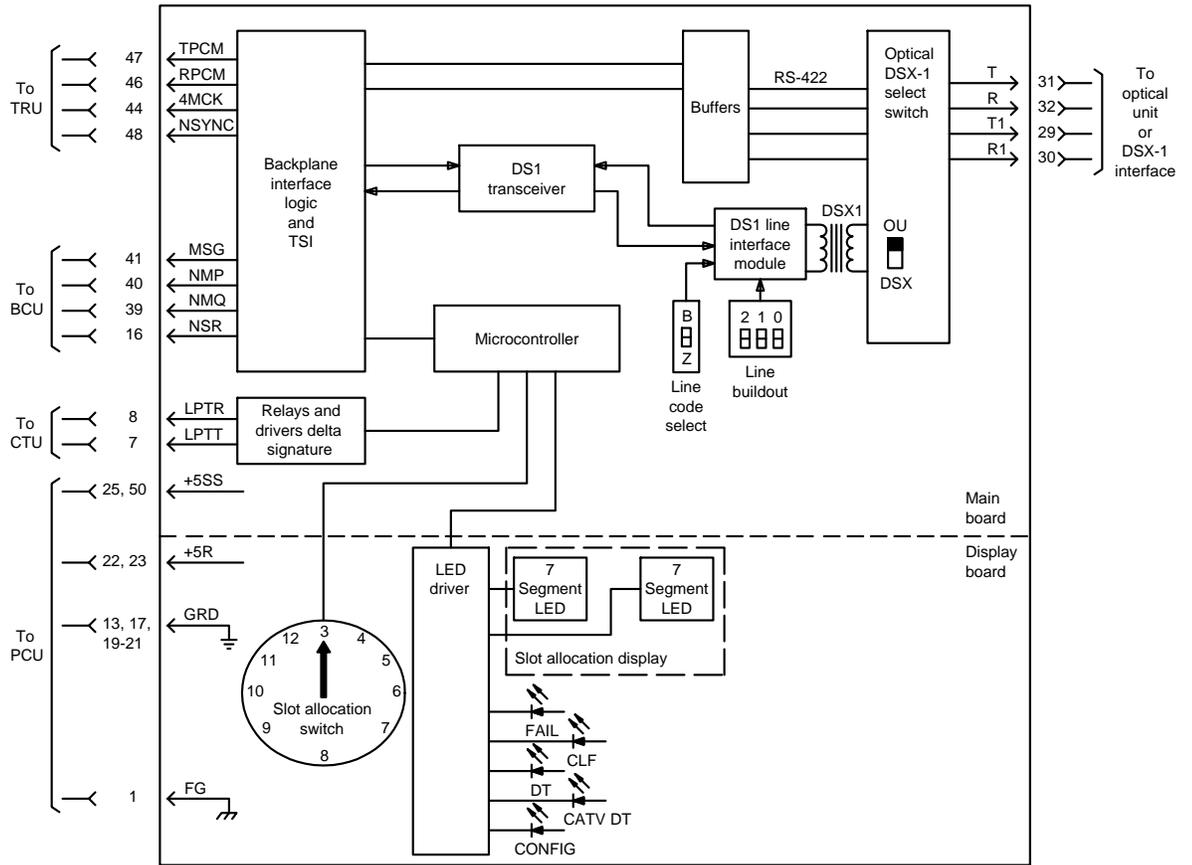

tpa 789752/01

Figure 1. AUA408 MSDT Server Block Diagram

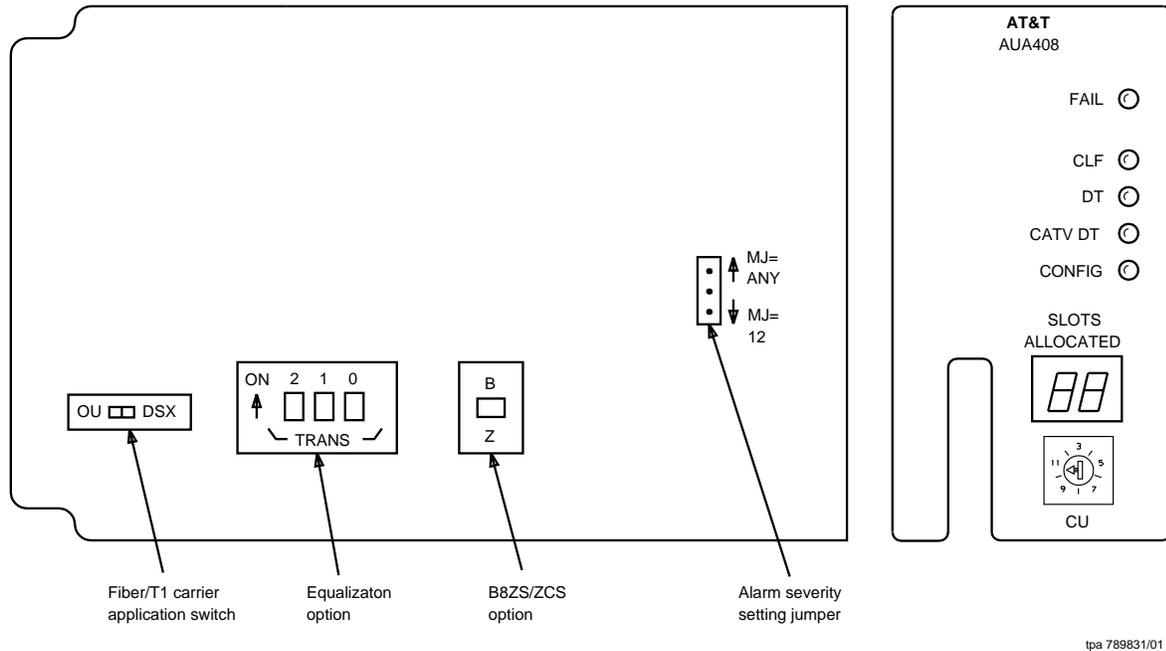


Figure 2. AUA408 MSDT Server Faceplate

Follow local procedures for obtaining technical assistance. AT&T also provides in-hours or emergency out-of-hours help for the SLC Series 5 Carrier System. Call the AT&T Regional Technical Assistance Center at **1-800-225-RTAC**.

Additional copies of this document (AT&T 363-005-274) are available from the Customer Information Center — call 1-800-432-6600.

Comments about this document can be directed to:

AT&T Customer Education and Training (CE&T) Organization
 Attention: Publishing Services Department
 2400 Reynolda Road
 Winston-Salem, NC 27106

Copyright © 1994 AT&T
 All Rights Reserved
 Printed in U.S.A.