



***Navis*[™] Optical Provisioning Manager (PM) - Network Provisioning (NP)**

Release 1.0

Getting Started Guide

365-314-104R1.0
Issue 1
April 2002



Copyright © 2002 Lucent Technologies. All Rights Reserved.

This material is protected by the copyright laws of the United States and other countries. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to Lucent Technologies), except in accordance with applicable agreements, contracts or licensing, without the express written consent of Lucent Technologies and the business management owner of the material.

Lucent Technologies at: 800-645-6759 (continental U.S.) or 317-322-6847 (outside of the U.S.).

Notice

Every effort was made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

Mandatory customer information

Warranty

Lucent Technologies provides a limited warranty for this product. For more information, consult your Lucent Technologies customer team representative.

Trademarks

LambdaRouter is a trademark of Lucent Technologies.

LambdaUnite is a trademark of Lucent Technologies.

Navis is a trademark of Lucent Technologies.

Metropolis is a trademark of Lucent Technologies.

WaveStar is a registered trademark of Lucent Technologies.

Ordering information

The ordering number for this document is 365-314-104R1.0. To order Navis[™] Optical PM - NP information products, contact your Lucent Technologies customer team representative or contact the Lucent Technologies at:

- From the United States, call 888-LUCENT8 (1-888-582-3688), prompt 1.
- From Canada, call 317-322-6619.
- From Europe, the Middle East, and Africa, call 317-322-6416.
- From Asia, the Pacific Region, China, the Caribbean, and Latin America, call 317-322-6411.

Support

Information product support

Lucent Technologies provides a referral telephone number for support. Use this number to report errors or to ask questions about the information in the information product. This is a non-technical number. The referral number is: 800-645-6759.

Technical support

In the continental United States, when you need additional technical assistance, the Lucent Technologies Global TSS Contact Center is your first point of contact. Technical assistance is available 24 hours a day, 7 days a week. Contact the Global TSS Contact Center at 866-LUCENT8 (866-582-3688).

Outside the continental United States, contact your Local Customer Support (LCS) or the support organization designated by your Lucent customer team representative. If you are unsure of who to call, contact the Global TSS Contact Center at 630-224-4672.



Contents

About this information product

<u>Purpose</u>	<u>vii</u>
<u>Reason for reissue</u>	<u>vii</u>
<u>Safety labels</u>	<u>vii</u>
<u>Intended audience</u>	<u>vii</u>
<u>How to use this information product</u>	<u>viii</u>
<u>Conventions used</u>	<u>viii</u>
<u>Related documentation</u>	<u>viii</u>
<u>How to comment</u>	<u>x</u>
<u>How to order</u>	<u>x</u>

1 The Network Map

<u>Overview</u>	<u>1-1</u>
<u>What is Navis™ Optical PM - NP?</u>	<u>1-2</u>
<u>Network Map initial appearance</u>	<u>1-3</u>
<u>Network Map standard appearance</u>	<u>1-6</u>
<u>Parts of the Network Map</u>	<u>1-8</u>
<u>Area icons</u>	<u>1-12</u>
<u>Network element icons</u>	<u>1-14</u>

Link icons	1-17
----------------------------	----------------------

2 The Network Controller Map

Overview	2-1
About the Network Controller Map	2-2
Parts of the Network Controller Map	2-3
Icons used on the Network Controller Map	2-5

3 Tasks

Overview	3-1
--------------------------	---------------------

Network Map Tasks

Overview	3-3
Display the Expanded Area Panel	3-4
Resize the sections of the Network Map	3-6
Moving around within a Network Map section	3-7
Using the zoom in feature	3-8
Using the zoom out feature	3-10
Magnify the map view	3-12
Expand an area in the Network Tree Panel	3-15
Display a Node menu	3-17
Specify icon label locations	3-18
Move an icon	3-19
Select/unselect multiple icons	3-20
View aggregates	3-21
View nodes by type	3-23
View nodes by name	3-24

Find a specific node	3-25
View links by type	3-26
Update the Network Map	3-28
Create a user-defined area map	3-29
Reset the map view	3-30
Display Route on Network Map	3-31
Specify members and non-members	3-32
Network Controller Map tasks	
Overview	3-34
Open the Network Controller Map	3-35
Reposition an EMS icon	3-36
View network elements controlled by a particular EMS	3-37
Start or stop communication between Navis™ Optical PM - NP and an EMS	3-38
Perform a database synchronization between Navis™ Optical PM - NP and an EMS	3-39
Cut-through to an EMS from Navis™ Optical PM - NP	3-40
Software feature tasks	
Overview	3-41
Access the on-line documentation	3-42
Access the screen help	3-43
View the software version	3-44
View the date format	3-45
View the Network Map legend	3-46

IN	Index	IN-1
-----------	------------------------------	-----------------------------



About this information product

.....

Purpose This preface provides an overview of this information product, which is the Navis[™] Optical PM - NP Release 1.0 Getting Started Guide.

The purpose of this guide is to introduce the Navis[™] Optical Provisioning Manager (PM) - Network Provisioning (NP) Release 1.0 software and to teach users how to use its Graphical User Interface (GUI).

Reason for reissue Issue 1 of this Getting Started Guide is a new document that supports Navis[™] Optical PM - NP, Release 1.0.

Safety labels This information product does not use safety labels.

Intended audience This information product is written primarily for network planners, engineers, and sales teams. It may be used by anyone who will be using the Navis[™] Optical PM - NP software.

How to use this information product

This information product contains:

- **Task** information (that is, step-by-step instructions)
- **Conceptual** information, which is specific data related to the tasks

Both types of information are presented within the chapters of this Getting Started Guide.

The following table describes the information contained in each chapter of this Getting Started Guide.

Section	Title	Description
Preface		Explains this document's purpose, its intended audience, and how to use the document
Chapter 1	Chapter 1, "The Network Map"	Describes the Network Map
Chapter 2	Chapter 2, "The Network Controller Map"	Describes the Network Controller Map
Chapter 3	Chapter 3, "Tasks"	Describes the tasks that can be performed from the Network Map and the Network Controller Map
Index	Index	Enables the user to quickly find information on specific topics

Conventions used

This Getting Started Guide uses the following typographical conventions to distinguish between computer input and output.

- When describing the Navis™ Optical PM - NP software, fields in windows and field entries are identified with **this font**.
- Text and numbers a user inputs to the computer are identified with boldface type.
- Text and numbers the computer outputs to a user are identified with monospace type.

Related documentation

This information product is part of a set of documents that supports Navis™ Optical PM - NP.

List of documents

The document set that supports Navis™ Optical PM - NP comprises:

1. *Navis™ Optical PM - NP Getting Started Guide*, (365-314-104R1.0) provides information useful to first-time users of the Navis™ Optical PM - NP software. It describes how to start and stop Navis™ Optical PM - NP, how to use the software, and how to interpret the graphical user interface. This document includes tasks and conceptual information.
2. *Navis™ Optical PM - NP Provisioning Guide*, (365-314-100R1.0) instructs users how to use Navis™ Optical PM - NP to provision and manage a network. This document contains tasks and conceptual information.
3. *Navis™ Optical PM - NP Maintenance Guide*, (365-314-101R1.0) instructs users on how to maintain Navis™ Optical PM - NP and the network. This document includes tasks and conceptual information.
4. *Navis™ Optical PM - NP Administration Guide*, (365-314-102R1.0) instructs users on how to administer Navis™ Optical PM - NP and the network. This document includes tasks and conceptual information.

Glossary

The *Navis™ Optical PM - NP Administration Guide* contains a glossary that will be helpful to users of Navis™ Optical PM - NP.

On-line documentation

On-line documentation for Navis™ Optical PM - NP is provided in two formats:

1. An on-line version, in HTML format, of this document set is provided as part of the Navis™ Optical PM - NP software.
2. An on-line version, in HTML format, of this document set is available on CD-ROM.
Navis™ Optical PM - NP User Documentation CD-ROM, (365-314-103R1.0) includes the full set of documents listed above.

Screen Help

The Navis™ Optical PM - NP software includes screen help for each window. Screen help describes the purpose of the form, each field, and each button.

How to comment To comment on this information product online, go to <http://www.lucent-info.com/comments> or email your comments to ctiphotline@lucent.com (<mailto:ctiphotline@lucent.com>).

Customer satisfaction is extremely important to Lucent Technologies. All users are encouraged to provide feedback on the Navis[™] Optical PM - NP information products.

How to order To order Navis[™] Optical PM - NP information products, contact Lucent Technologies at:

- From the United States, call 888-LUCENT8, prompt 1.
- From Canada, call 317-322-6619.
- From Europe, the Middle East, and Africa, call 317-322-6416.
- From Asia, the Pacific Region, China, the Caribbean, and Latin America, call 317-322-6411.

1 The Network Map

Overview

Purpose This chapter describes the features of the Navis™ Optical PM - NP Network Map.

Contents

What is Navis™ Optical PM - NP?	1-2
Network Map initial appearance	1-3
Network Map standard appearance	1-6
Parts of the Network Map	1-8
Area icons	1-12
Network element icons	1-14
Link icons	1-17



What is Navis[™] Optical PM - NP?


Introduction	This section provides an overview of the Navis [™] Optical PM - NP product.
Product description	Navis[™] Optical PM - NP is a software application that enables a user to perform the following network management activities: • Provisioning of connections such as optical links, optical channels, digital links, and circuits • Fault management • Performance management
User interface	Users interact with Navis [™] Optical PM - NP through a Graphical User Interface (GUI). The GUI is presented as a Network Map. The Network Map depicts the network that will be managed by Navis [™] Optical PM - NP.
For more information	For more comprehensive information about the features and functionality of Navis[™] Optical PM - NP, refer to the other documents in the Navis[™] Optical PM - NP documentation set. The preface of this guide provides a complete listing of the Navis[™] Optical PM - NP documents.



Network Map initial appearance

- Introduction** This section describes the appearance of the Network Map when Navis[™] Optical PM - NP is first brought up after installation.
- Description** After Navis[™] Optical PM - NP is installed and a user logs into the application, the Network Map displays the Area Map and the Tree Panel.
- If areas have not been created yet, only one area, UNASSIGNED, displays on the Network Map. In this case, the system automatically expands this area on the Expansion Panel to show all the network elements in the network.
- Note that the Network Map's view (what the user sees on the map itself) can be pre-determined by either the administrator or the user. Thus, during subsequent log in sessions, the user may see the Network Map pre-populated by several areas. Also, if the user is assigned the correct privileges, the user can subsequently group network elements into areas to make it easier to display and manage a large network.
- Note:** Users employing the ICA Citrix client support to run Navis[™] Optical PM - NP may toggle between the Navis[™] Optical PM - NP windows and the ICA Citrix windows through short-cut keys. Users may refer to the ICA Citrix documentation for complete information about the ICA Citrix client.

 
Diagram The following figure is an example of the Navis™ Optical PM - NP Network Map.

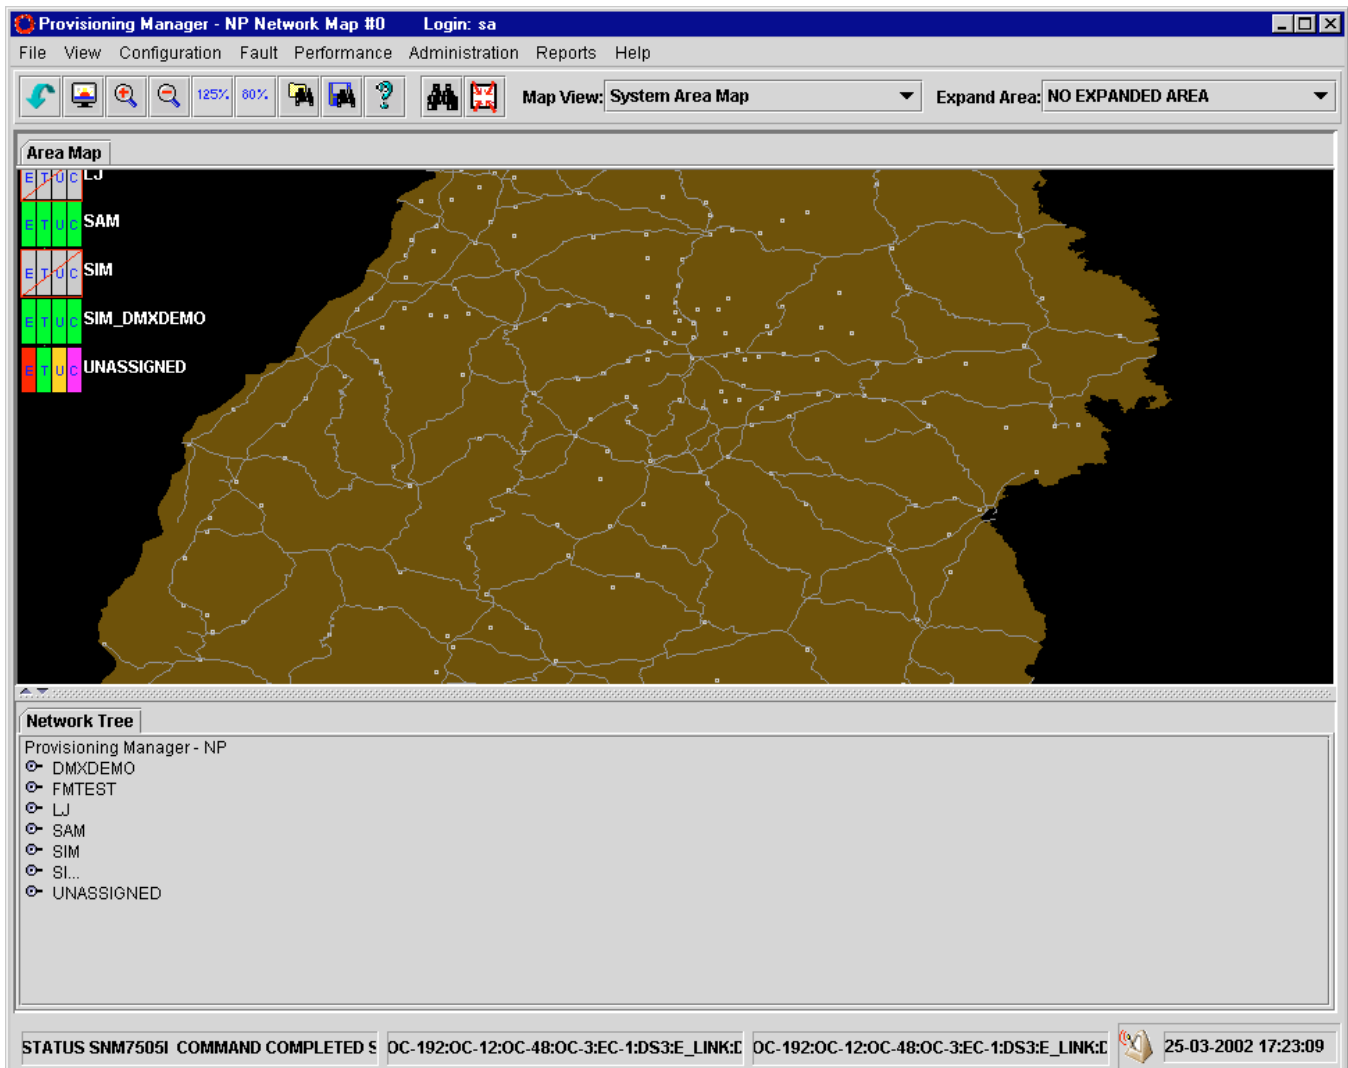


Two parts In its initial appearance, the Network Map displays two parts:

- Area Map
- Network Tree

 Area map The area map shows all the currently created areas. By default, the map will always show at least one area (UNASSIGNED). In the following example, there are two areas displayed by the system.

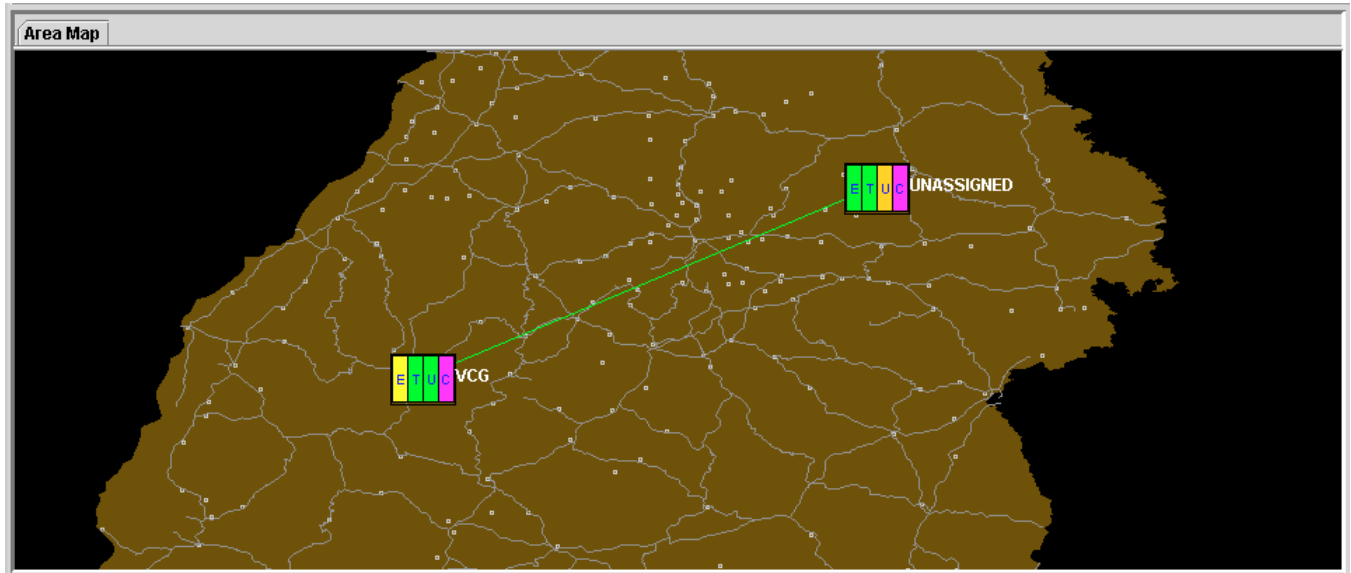

 Network Tree The Network Tree provides a hierarchical textual view of the Network Map's areas and network elements. Notice that the areas and networks listed in the Network Tree correspond to those shown on the Area Map.

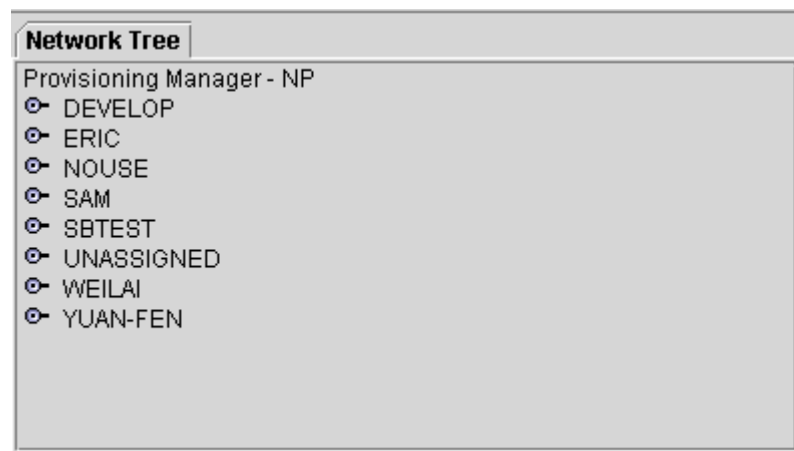

How to perform tasks See [Chapter 3, "Tasks"](#), for instructions on how to perform tasks that are performed on the Network Map.




Network Map standard appearance

Introduction This section describes the Navis™ Optical PM - NP Network Map. The Network Map allows administrators and users to view and manage different aspects of a network.

Functionality The Network Map:

- Displays areas, nodes, bridges, digital links, paths, and circuit/trails
- Provides access to forms, lists, and menus
- Allows users to provision areas, nodes, digital links, paths, circuit/trails, user-defined area maps, and user-defined submaps
- Performs subnet management, allowing the Navis™ Optical PM - NP to manage rings created with SONET multiplexers
- Allows the system administrator to perform their functions
- Provides the dynamic fault status of nodes, links, and circuit/trails in the network
- Allows users to perform performance monitoring
- Allows users to cut-through to the Element Management System (EMS) to manage network element-specific data

 Diagram The following figure shows the Network Map.

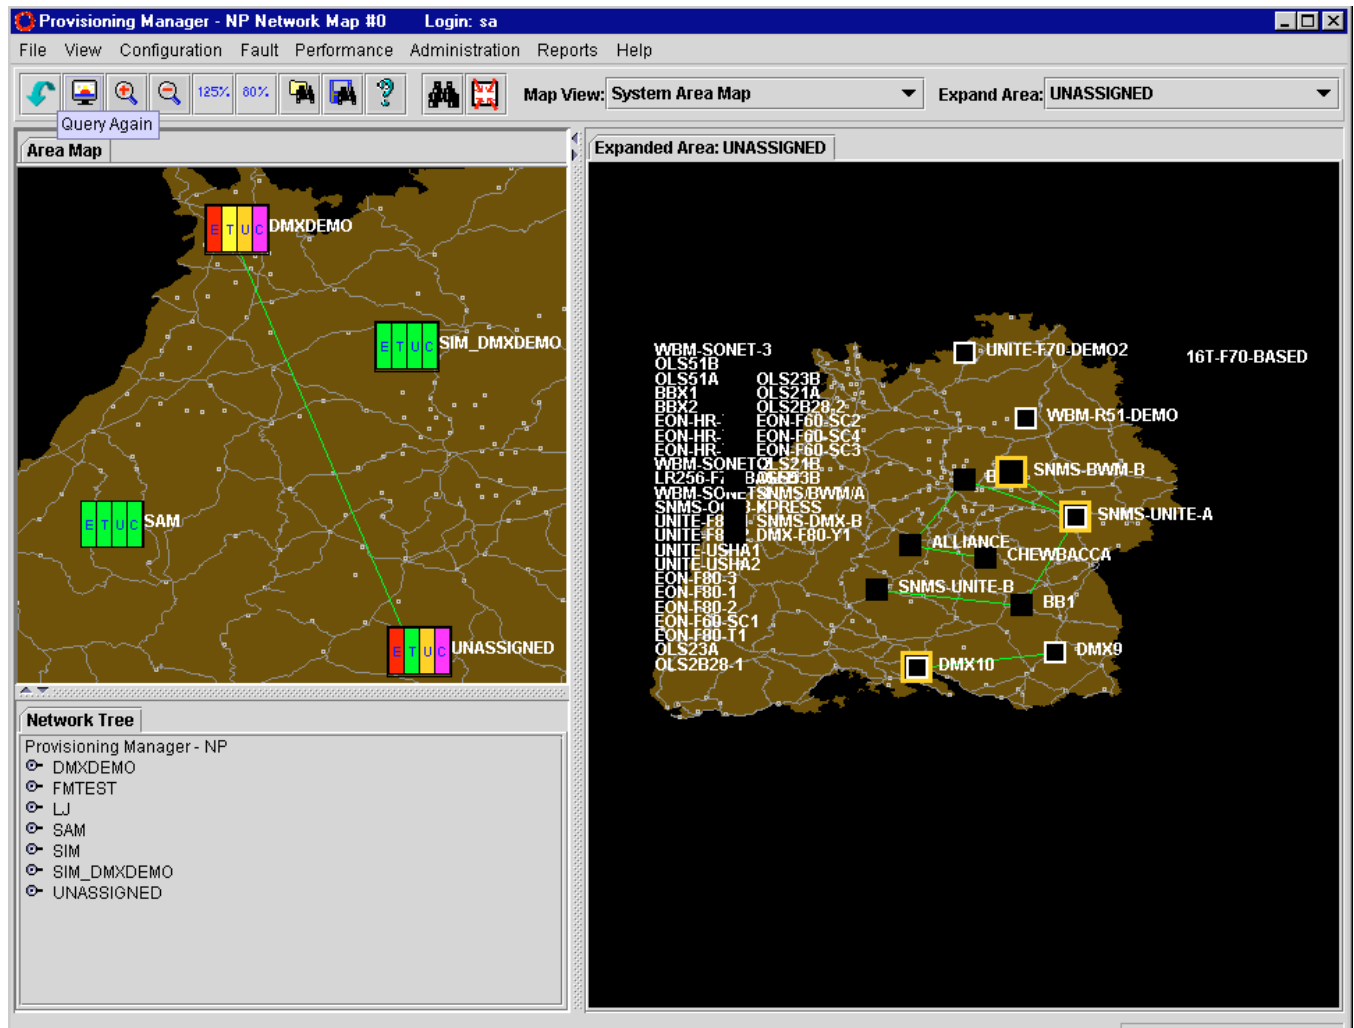

Three sections The Network Map contains three sections that represent different aspects of a network:

- **Area Map:** depicts existing areas on the network. In the previous figure, four areas exist.
- **Expanded Area Panel:** depicts the aggregates and network elements that comprise a single area. In the previous figure, area UNASSIGNED is shown expanded.
- **Network Tree Panel:** provides a hierarchical textual view of the Network Map's areas, aggregates, and network elements.



Parts of the Network Map

Overview This section describes the following parts of the Network Map:

- menu bar
- toolbar
- status line

Menu bar The Network Map has a menu bar that contains nine menus that allow users to perform a variety of tasks, including area administration, provisioning of digital links and circuits, fault management, and performance monitoring.

Figure

The following figure shows the Network Map's menu bar.



Menus

The menus are:

- **File:** which contains selections to display the Network Controller Map, make new node/label positions permanent, and refresh/close the Network Map.
- **View:** which contains selections to specify the view characteristics of any variation of the data displayed on the Network Map.
- **Configuration:** which provides selections that allow users to provision, configure, and display information about the network.
- **Fault:** which provides selections to that allow users to perform fault monitoring and fault management.
- **Performance:** which provides menu items related to performance monitoring, data collection, and reporting.
- **Administration:** which provides administration-related functions, such as creating users, creating user profiles, and administering areas and aggregates. It also manages the user defined views.
- **Accounting:** Not used in this release.

- **Reports:** which provides selections to print predefined summary reports.
- **Help:** which provides access to screen help, on-line documentation, date format, and version information.

Important! Not all menus are accessible to all users. Access to certain menus is controlled by the user profile assigned to your user ID by the system administrator.

Toolbar The toolbar, located directly underneath the menu bar, consists of a series of icons that provide text editing shortcuts and access to common forms. Detailed information on the toolbar is provided in the screen help for the Network Map.

Important! Users can toggle between displaying and hiding the Network Map toolbar by selecting **View > Toolbar**.

Buttons


The following button icons appear in the Network Map toolbar:

	Query Again: any changes to the data are updated on the Network Map by the server.
	Redraw the Map: refreshes the Network Map if the display has become corrupted. This button, however, does not update certain portions of the Network Map, particularly the tree panel because it does not access the server.
	Select a region for zooming: magnifies a user-specified portion of the Network Map using the cursor.
	Undo the previous zooming: reverts the user-specified zooming action of the Network Map.
	Zoom in at 125%: enlarges a specified map's view in 125% increments when the user clicks the left mouse button in the map view.
	Zoom out at 80%: shrinks a specified map's view in 80% increments when the user clicks the left mouse button in the map view.
	Load a predefined View (from system): loads the saved login view.

	Save the Current View (to disk): allows the user to save the login view onto the database of the server or to the hard disk of the computer or terminal. This option is also available through the Administration > Preferences selection.
	Help: accesses Screen Help files for the Network Map window. To access all on-line documentation, use Help > Help Contents .
	Find Node: displays the Find Node Query box, to display Node to Area association.
	All Nodes into Current View: displays all the areas within the Area Map window and all the expanded nodes within the Expansion Panel window.
	Map View (pull-down list): automatically displays system area maps and user-defined sub maps.
	Expand Area (pull-down list): automatically expands the area specified by this field.

Status line Located at the very bottom of the Network Map, the status line indicates certain logistics pertaining to the current system session.

 The following figure shows an example of the Network Map status line.



Features

The Status Line contains the following fields:

- **Status:** Displays the system's response message regarding the user's last request.
- **Displayed Channel Types:** An unlabeled field that displays the rate(s) of the signals carried by the lines displayed on the Area maps.
- **Carrier:** An unlabeled field that specifies the carriers for the selected rates.

 
- **Metronome icon:** specifies that the Network Map is updated automatically.
- **Date and Time:** Dynamically displays the time the information on this screen was last updated.



Area icons

Introduction Areas are groupings of network elements and aggregates. This section describes the area icon that appears on the Network Map. Area icons appear on the Area Map. When an area is expanded, its member network elements and aggregates can be viewed in the Expanded Area Panel.

Description The area icon is a square divided into four sections. The figure below shows three area icons on the Area Map.

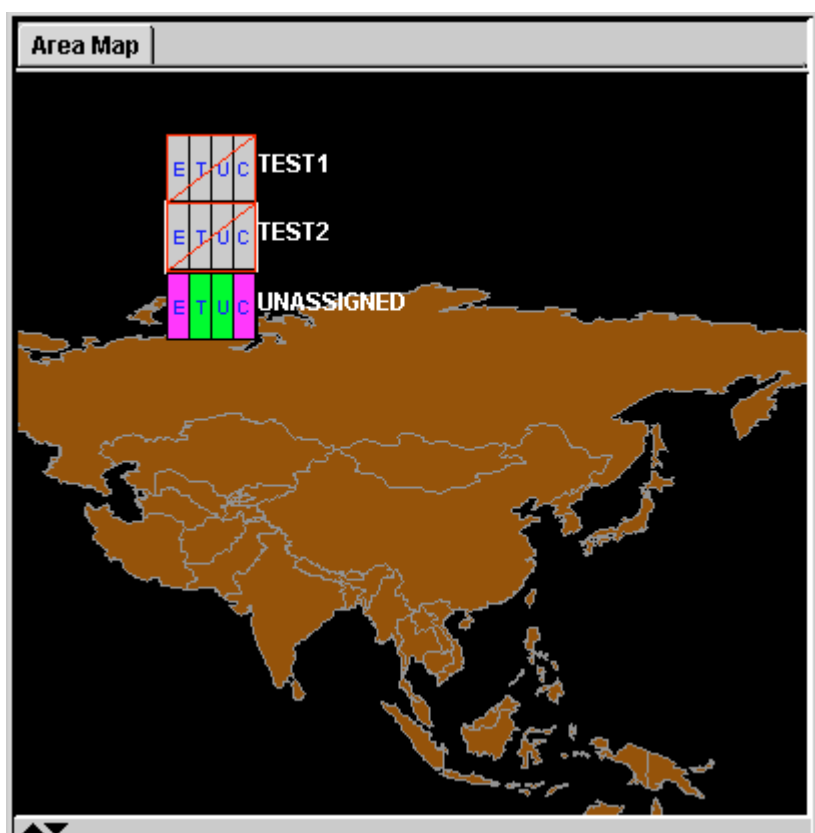

Four sections of the area icon Note that an area has four letters shown on it which specify alarm conditions. These letters will individually change color when such a

condition occurs. See [“Network element icon colors” \(1-15\)](#) for a complete description of the alarm colors. The letters are:

- **E** (equipment alarm): specifies the status of equipment alarms present on any of the nodes in that area.
- **T** (transmission alarm): specifies the status of transmission alarms present on any of the links in that area.
- **U** (uncorrelated cross-connect): is not applicable for this release. The color of this section will always be green in this release.
- **C** (communication alarm): indicates the status of communication of the nodes within the area to their EMSs.



Network element icons

Introduction This section describes the network element icons that appear on the Network Map. Network element icons appear in the Expanded Area Panel.

Description A network element includes a symbol and a network element name. Different icons represent different network elements. A legend showing all the network element icons can be accessed from the Network Map by executing **View > Legend View**.

The following figure shows network element icons on the Expanded Area Panel.

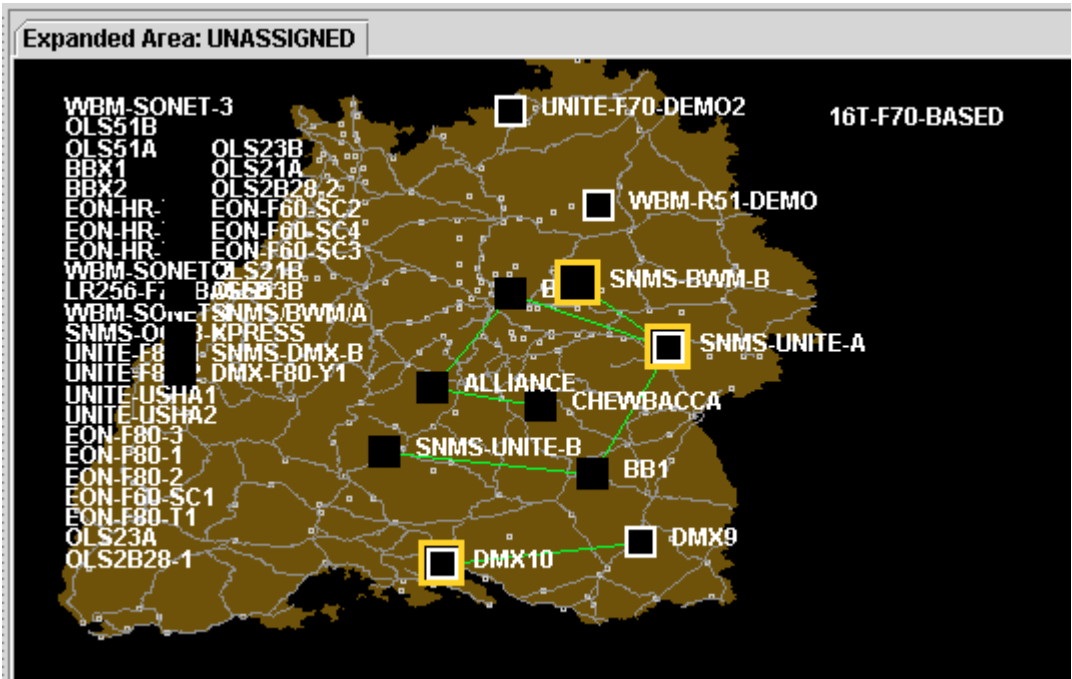 
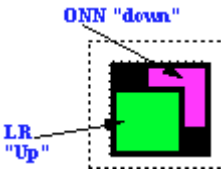 


Table of network element icons The following table describes the different network element icons used on the Network Map.

	Lambda Router 128; Lambda Router 256; WaveStar® BandWidth Manager; WaveStar TDM 2.5/10G, LambdaUnite™ MultiService Switch.
---	--

	<i>WaveStar</i> OLS 1.6T.
	<i>Metropolis</i> ® EON single-ended terminal.
	<i>Metropolis</i> DMXpress Access Multiplexer, <i>Metropolis</i> DMX Access Multiplexer, <i>Metropolis</i> EON dual-facing terminal.
	<i>LambdaRouter</i> ™ ONN.
	REGEN (all regenerators, repeaters and optical amplifiers); <i>WaveStar</i> OLS 1.6T Repeater; <i>WaveStar</i> OLS 1.6TL Repeater; <i>Metropolis</i> EON Repeater
	Black box.
	Aggregate.
	Customer equipment.

Network element icon colors

When a user first adds a node to Navis™ Optical PM - NP, the system always displays the network element as green, regardless of whether equipment or environment alarms exist. It is important that a manual database synchronization is performed after adding a network element, in order to display the new network element's true state.

Note that because network elements are added to the Network Map through their EMS, a database synchronization should first be performed for the EMS, and then for the individual network elements.

The color of a network element icon will dynamically alter to indicate if it has an equipment or communication alarm condition. The color is based upon the worst case existing on the network element.

- **Green:** The communication link between the EMS Controller and the network element is UP. Equipment alarms do not exist.
- **Gray:** The network element has been deleted, but digital links and circuits are still present. The network element cannot be used for further provisioning.
- **Magenta:** The communication link between the Navis™ Optical PM - NP controller and network element is down.
- **Red:** One or more service affecting equipment alarm condition(s) are on the network element.
- **Yellow:** One or more non-service affecting equipment or environment alarms are on the network element. Service affecting equipment alarms do not exist on the network element.

Positioning of network element icons

When the Network Map is first opened, in the Expanded Area Panel, all of the network element icons are stacked up on the left-hand side in columns. The system presents the Network Map with the network element icons stacked up in this “staging area.”

Only a system administrator can permanently move a network element icon. The network element icons remain in position in the staging area until a system administrator moves them to a new permanent location on the Network Map.

If a network element icon is permanently moved by a system administrator, the remaining items stacked in the staging area shift up to close up the space left by the moved network element icon. This behavior ensures that network element icons are displayed neatly without overlapping.

The previous figure shows some network element icons stacked up in the staging area, and some that have been permanently moved into the center of the map.



Link icons

Introduction This section describes the link icons that appear on the Network Map.

Description Depicted as lines on the Network Map, link icons represent fiber or electrical connections between two points.

SONET digital links are synonymous with multiplexer sections. They connect two SONET network elements, black boxes, or equipment.

The following figure shows link icons on the Network Map.



Link icon colors Link icons display alarm conditions dynamically by changing color. The color of a link icon represents the alarm status of a link.

The link icon colors have the following meanings:

- **Green:** Clear signal, no alarms.
- **Yellow:** Non-service signal affecting.
- **Red:** Service signal affecting.





2 The Network Controller Map

Overview

Purpose This chapter describes the Navis™ Optical PM - NP Network Controller Map.

Contents

About the Network Controller Map	2-2
Parts of the Network Controller Map	2-3
Icons used on the Network Controller Map	2-5



About the Network Controller Map

Introduction This section describes the purpose of the Network Controller Map.

Functionality The Network Controller Map provides information concerning Element Management System (EMS) status.

The Network Controller Map:

- Displays the Element Management Systems
- Provides information concerning EMS status
- Provides access to menus and forms from menu bar menus and the Node menus

Accessing the Network Controller Map The Network Controller Map is accessed from the Network Map by executing **File > Open Network Controller Map**.

How to perform tasks See [Chapter 3, “Tasks”](#), for instructions on how to perform tasks that are performed on the Network Controller Map.




Parts of the Network Controller Map

Introduction This section describes the following parts of the Network Controller Map:

- menu bar
- toolbar

 Diagram The following figure shows the Network Controller Map.

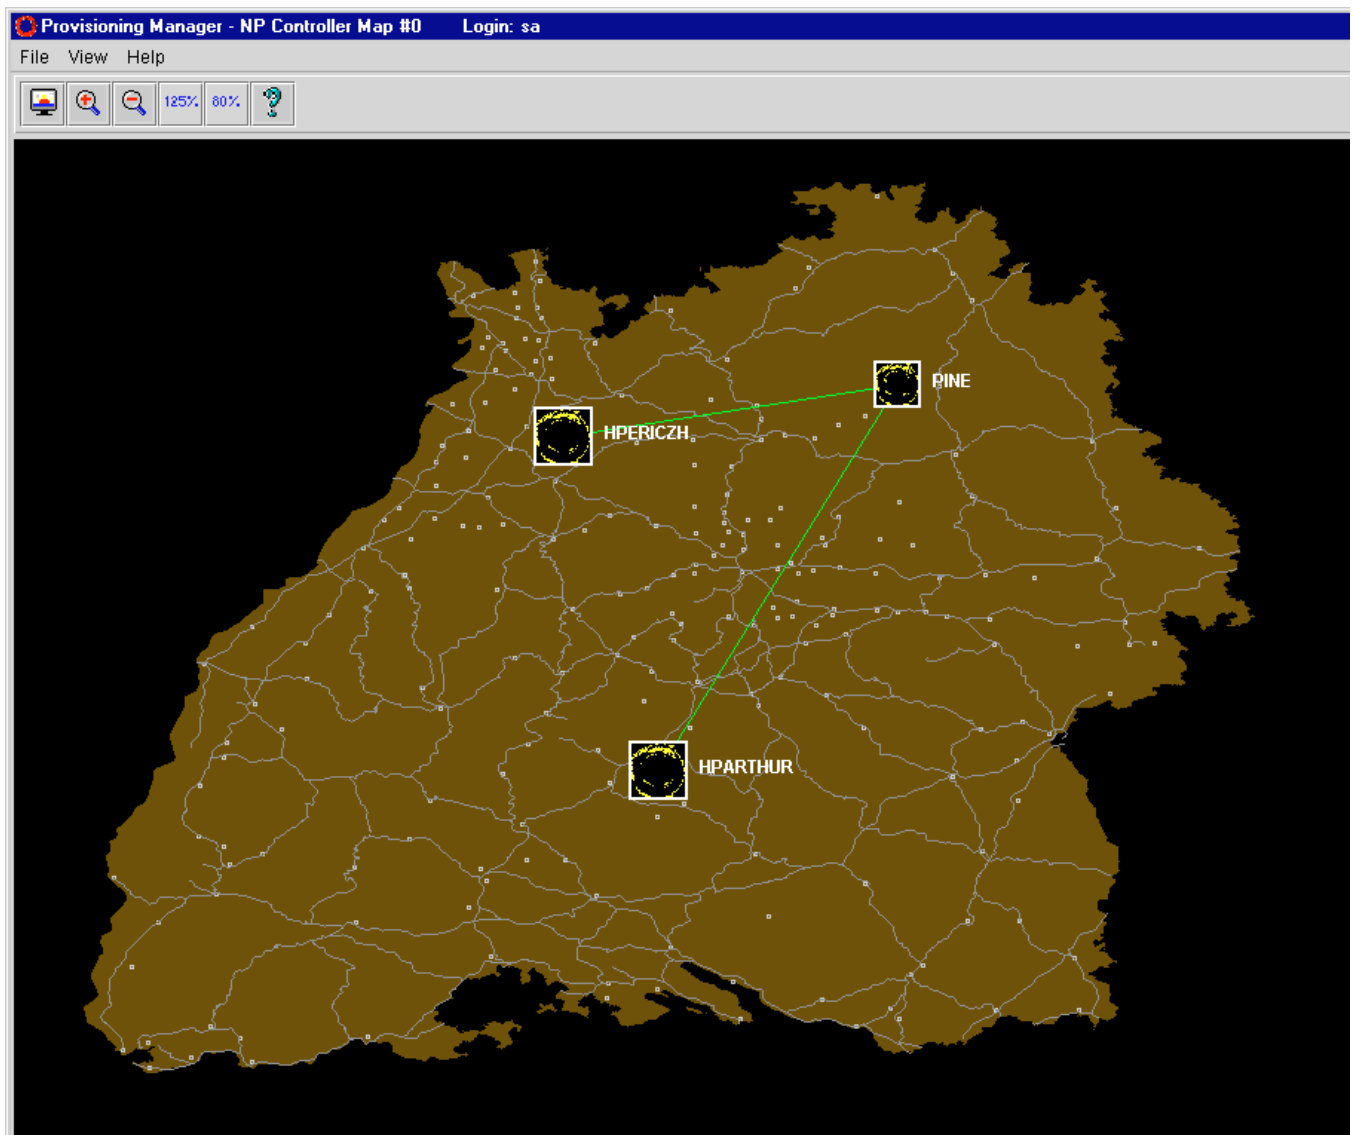

Menu bar The Network Controller map has a menu bar that has three menu that allow user to perform a variety of functions related to EMS management.

Toolbar The toolbar provides user access to commonly used functions. It is the same toolbar that displays on the Network Map. See [“Toolbar” \(1-9\)](#) for a description of the icons in the toolbar.



Icons used on the Network Controller Map

Purpose This section describes the EMS controller icons used on the Network Controller Map.

EMS Controller icons The EMS controller icons represent EMSs in the network that are being managed by Navis[™] Optical PM - NP.

The following figure shows an EMS Controller icon for a Lucent EMS.



EMS Controller icon colors The color of an EMS controller icon will dynamically alter to indicate the status of the EMS. The color is shown in the border of the icon.

If the EMS Controller icon is red or yellow, there is an alarm condition on one of the network elements managed by the EMS. In this case, return to the Network Map and access the Alarm List to begin troubleshooting the alarm.





3 Tasks

Overview

Purpose This chapter describes the tasks that can be performed from the Network Map.

Contents

<u>Network Map Tasks</u>	<u>3-3</u>
<u>Display the Expanded Area Panel</u>	<u>3-4</u>
<u>Resize the sections of the Network Map</u>	<u>3-6</u>
<u>Moving around within a Network Map section</u>	<u>3-7</u>
<u>Using the zoom in feature</u>	<u>3-8</u>
<u>Using the zoom out feature</u>	<u>3-10</u>
<u>Magnify the map view</u>	<u>3-12</u>
<u>Expand an area in the Network Tree Panel</u>	<u>3-15</u>
<u>Display a Node menu</u>	<u>3-17</u>
<u>Specify icon label locations</u>	<u>3-18</u>
<u>Move an icon</u>	<u>3-19</u>
<u>Select/unselect multiple icons</u>	<u>3-20</u>
<u>View aggregates</u>	<u>3-21</u>
<u>View nodes by type</u>	<u>3-23</u>
<u>View nodes by name</u>	<u>3-24</u>

Find a specific node	3-25
View links by type	3-26
Update the Network Map	3-28
Create a user-defined area map	3-29
Reset the map view	3-30
Display Route on Network Map	3-31
Specify members and non-members	3-32
Network Controller Map tasks	3-34
Open the Network Controller Map	3-35
Reposition an EMS icon	3-36
View network elements controlled by a particular EMS	3-37
Start or stop communication between Navis[™] Optical PM - NP and an EMS	3-38
Perform a database synchronization between Navis[™] Optical PM - NP and an EMS	3-39
Cut-through to an EMS from Navis[™] Optical PM - NP	3-40
Software feature tasks	3-41
Access the on-line documentation	3-42
Access the screen help	3-43
View the software version	3-44
View the date format	3-45
View the Network Map legend	3-46



Network Map Tasks

Overview

Purpose This chapter describes tasks related to the Navis™ Optical PM - NP Network Map.

Contents

Display the Expanded Area Panel	3-4
Resize the sections of the Network Map	3-6
Moving around within a Network Map section	3-7
Using the zoom in feature	3-8
Using the zoom out feature	3-10
Magnify the map view	3-12
Expand an area in the Network Tree Panel	3-15
Display a Node menu	3-17
Specify icon label locations	3-18
Move an icon	3-19
Select/unselect multiple icons	3-20
View aggregates	3-21
View nodes by type	3-23
View nodes by name	3-24
Find a specific node	3-25
View links by type	3-26
Update the Network Map	3-28
Create a user-defined area map	3-29
Reset the map view	3-30
Display Route on Network Map	3-31
Specify members and non-members	3-32



Display the Expanded Area Panel

Purpose An area can be selected and expanded so that its network elements can be viewed. This section describes how to expand an area and display the Expanded Area Panel on the Network Map.

Why your display may look different If areas have not been created yet, only one area, UNASSIGNED, initially displays on the Network Map. In this case, the system automatically expands this area to show all the network elements in the network, and the Expanded Area Panel is already displayed.

If a user has defined a view from their last session, Navis™ Optical PM - NP starts up using the user's predefined view.

Task Complete the following task to expand an area and display the Expanded Area Panel on the Network Map.

- 1 On the Network Map, right-click in the center of an area icon.

Result:

The Node menu for the area displays.



-
- 2 Select **Expand**.

Result:

The Expanded Area Panel appears on the Network Map and displays the network elements in the selected area. See the next section, [“Network Map standard appearance” \(1-6\)](#), for a

diagram of the Network Map with the Expanded Area Panel
displayed.

END OF STEPS



Resize the sections of the Network Map

Purpose This section describes how to resize the sections of the Network Map.

Task Complete the following task to resize the sections of the Network Map.

- 1 On the Network Map, place the mouse pointer directly upon one of the arrow icons on the window panes.

Result:

The mouse pointer changes to a resize arrow (with dual arrow heads).

- 2 While pressing and holding the left mouse button, drag the arrow icon.

Important! Users can totally collapse or expand a map view by clicking directly on the arrow icons.

Result:

The section of the Network Map resizes to the desired dimensions.

END OF STEPS



Moving around within a Network Map section

Purpose Users can move around within a Network Map section in order to locate and view hidden network icons. The act of moving around within a map is also referred to as *panning*.

Task Complete the following task to move around within a Network Map section.

1 On the Network Map, place the mouse pointer within either the Area Map or Expanded Area Panel.

2 Press and hold the right mouse button.

Result:

The mouse pointer changes to a resize arrow (with quadruple arrow heads).

3 Drag the mouse in the desired direction.

Result:

The map view will move with the mouse's movements.

4 Drag the view up, down, right, or left until the desired view of the map is achieved.

Result:

The desired map view displays within the Area map or Expanded Area Panel.

END OF STEPS



Using the zoom in feature

Purpose Users may increase the size of a section of the Network Map with the Network Map's 125% zoom tool. The 125% zoom tool increases the size of a map's entire viewable area. If the user repeatedly clicks on the mouse (after the 125% zoom button is pressed), there is a zoom in for each subsequent click.

About the Magnification tool The Network Map offers two different zoom tools for magnification:

- the 125% zoom tool
- the *magnification* tool

This section describes the zoom tool. The magnification tool is described later in this chapter.

Task Complete the following task to zoom in on the Network Map with the 125% zoom tool.

- 1 On the Network Map, press the 125% zoom tool with the left mouse button. The 125% zoom tool is shown in the following figure:



Result:

The cursor changes to a pointed index finger, and the 125% zoom tool button becomes indented.

- 2 Place the mouse pointer on the desired map and press the left mouse button once.

Result:

The system zooms in the entire map area by 125%.



-
- 3** To stop zooming, return to the 125% zoom tool and click the left mouse button.

Result:

The cursor's shape changes back to an arrow for normal operation, and the 125% zoom button becomes unindented.

END OF STEPS



Using the zoom out feature

Purpose Users may decrease the size of a section of the Network Map with the Network Map's 80% zoom tool. The 80% zoom tool decreases the size of a map's entire viewable area. If the user repeatedly clicks on the mouse (after the 80% zoom button is pressed), there is a zoom out for each subsequent click.

Task Complete the following task to zoom out on the Network Map with the 80% zoom tool.

- 1 On the Network Map, press the 80% zoom tool with the left mouse button. The 80% zoom tool is shown in the following figure:



 
Result:

The cursor changes to a pointed index finger, and the 80% zoom button becomes indented.

- 2 Place the mouse pointer on the desired map, and press the left mouse button once.

Result:

The system zooms out the entire map view by 80%.

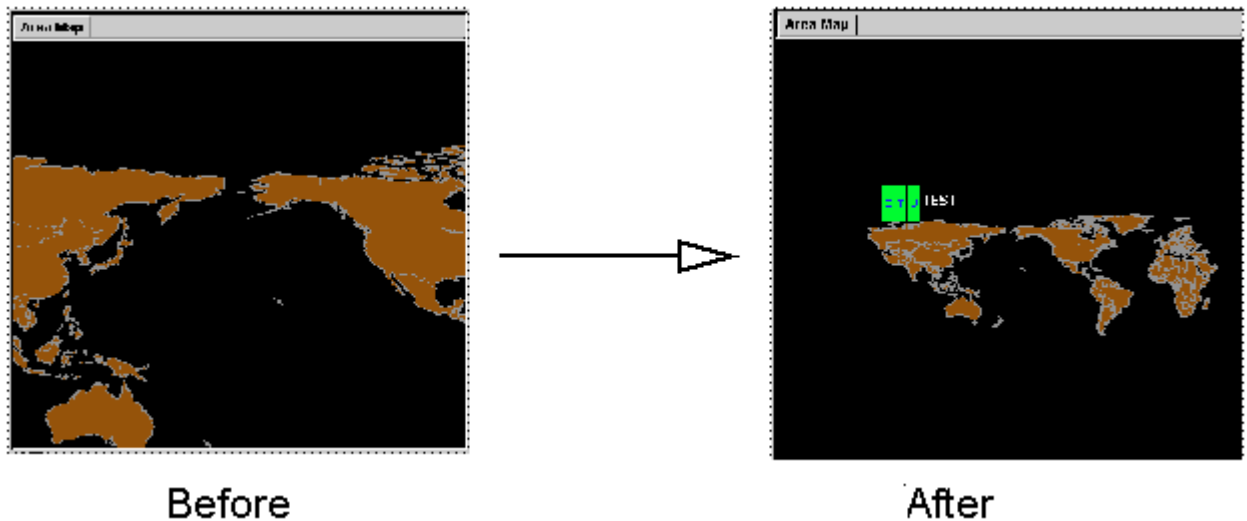

-
- 3** To stop zooming, return to the 80% zoom tool and click the left mouse button.

Result:

The cursor's shape changes back to an arrow for normal operation, and the 80% zoom button becomes unindented.

END OF STEPS



Magnify the map view

Purpose Users may magnify a portion of the Network Map with the Network Map's magnification feature.

Task Complete the following task to magnify an area on the Network Map.

- 1 On the Network Map, press the magnification tool with the left mouse button. The magnification tool is shown in the following figure:



Result:

When you place the mouse pointer on a map, the pointer displays as a cross.

- 2 After selecting an area on the map to magnify, press and hold the left mouse button at the top left corner of the desired area and enclose the area with the lightly flashing open box from the cursor-cross.



- 3 Release the mouse button.

Result:

The map dynamically alters to reflect the magnification.



END OF STEPS

To undo the magnification

To undo the magnification, press the undo previous zoom tool. The undo previous zoom tool is shown in the following figure:



A user must press the decrease magnification icon immediately after magnifying the window, otherwise the undo magnify will not work.

 


Expand an area in the Network Tree Panel

Purpose Users may quickly view the network elements associated with a particular area by expanding an area in the Network Tree Panel.

Task Complete the following task to expand an area in the Network Tree Panel.

- 1 On the Network Tree Panel, place the mouse pointer on the symbol to the left of the area you wish to expand.

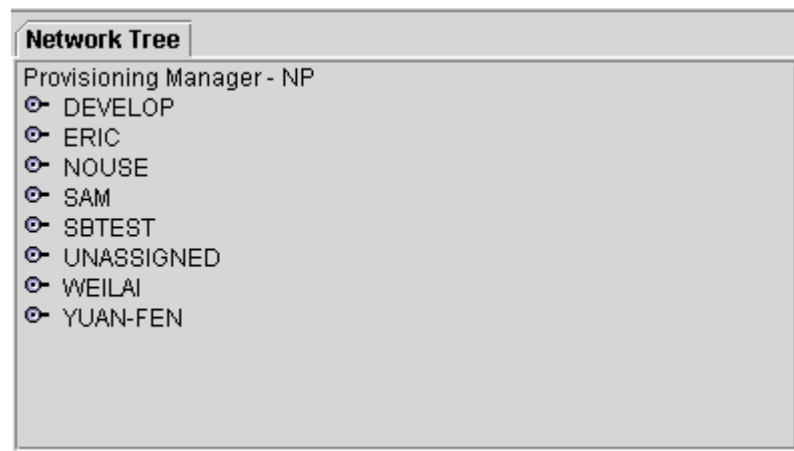

- 2 Click the mouse button.

Result:

The symbol turns, and the Network Tree Panel displays all the network elements and aggregates that are currently associated with the area. Use the scroll bar to scroll through the complete listing of network elements.

END OF STEPS

Note

To collapse an area, so that the network elements associated with it are hidden, click the symbol to the left of the area. The symbol turns and the area collapses.



Display a Node menu

Purpose The icons displayed on the Navis™ Optical PM - NP Network Map, which represent areas and network elements, have Node menus associated with them.

Task Use the following task to display the Node menu for an area or network element.

- 1 On the Network Map, place your mouse pointer directly in the center of the icon for an area or network element.
 - 2 Right-click and hold the mouse button.
-

Result:

A Node menu displays. The name of the node is displayed at the top of the Node menu, and the menu displays menu items specific to the associated area or network element.



END OF STEPS



Specify icon label locations

Purpose Users may specify the location of an icon label in relation to the icon itself. By default, labels are placed to the right of an icon. This task applies to area icons and network element icons.

Task Complete the following task to specify an icon label location.

- 1** On the Network Map, locate an icon whose label you wish to move.
-

- 2** While placing the mouse pointer directly on the icon's center, press and hold the right mouse button.

Result:

A Node menu for the area or network element displays.

- 3** Select **Move Label > Left** (for left) or **Bottom** (for bottom), **Top** (for top), etc.

Result:

The icon label moves to reflect the positioning choice.

- 4** To make the new position permanent, select **File > Save Node and Label Positions**.

Result:

The new position becomes part of the current user-defined map. Note that only system administrators can make the new position permanent.

END OF STEPS



Move an icon

Purpose Use the following procedure to move an icon's position on the Network Map.

Before you begin Before you move an icon's position, note the following:

- The placement of a moved icon is temporary, that is, it lasts for the duration of the user's session only. To permanently move an icon to a new position on the Network Map, you must have the appropriate privileges.

Task Complete the following task to permanently move an icon to a new position on the Network Map.

1 On the Network Map, select the icon to be repositioned.

2 Drag and drop the network element to a new location.

Result:

The icon and its connecting links are repositioned.

Note: This task only provides a temporary repositioning of a network element. In order to make the positioning permanent, a user must have administrator privileges. Refer to the *Navis™ Optical PM - NP Administration Guide* for details.

END OF STEPS



Select/unselect multiple icons

Purpose Navis[™] Optical PM - NP allows users to select multiple icons for repositioning or provisioning. Once selected, selected icons can be unselected.

Important! This task does not apply to area icons.

Task To select multiple icons and then unselect them all at once, perform the following steps.

- 1 From the Network Map, use the mouse to select an icon (for example, a network element).

Result:

The icon is highlighted.

- 2 While pressing and holding the **Shift** key, select multiple map icons in addition to the icon selected in Step 1.

Result:

The selected icons are highlighted.

- 3 While holding the **Shift** key, maneuver the multiple icons to a desired location.

Important! If at any time you wish to unselect the map icons, select **File > Unselect Objects**. This causes all currently selected objects, except areas, to become unselected. You may also unselect the selected icons by separately clicking on each icon.

- 4 Release the **Shift** key and mouse control.

Result:

The map icons reside in their new locations on the Network Map.

END OF STEPS



View aggregates

Purpose Use this task to view aggregates and their members. Note that Navis[™] Optical PM - NP allows two methods for viewing aggregates. One method is from the Network Map's View menu. The second method is by right-clicking on a node. The difference between the two methods is the first method affects only one aggregate family while the second method affects all the aggregates on the Network Map Expansion Panel.

Task: From the Node menu Complete the following task to view one aggregate family on the Network Map's Expanded Area map.

- 1** From the Network Map's Expanded Area map, right-click a network element.

Result:

A Node menu is displayed.

- 2** Select **Node Operations > Collapse One Level** (to view the next level of the aggregate family) **or Collapse Top Level** (to view the top level of the aggregate family).

Result:

The members of the aggregate family are displayed according to your selection.

END OF STEPS

Task: From the View menu Complete the following task to view all aggregates on the Network Map's Expanded Area map.

- 1 From the Network Map, select **View > Aggregate View**.

Result:

Four selections display.

- 2 Select one of the available options.

Result:

The selected aggregate view displays. For example, you may expand or collapse the aggregate view by one level or to the node level (similar to the method described above in the task). Note that, in contrast with the previous task, this method affects all aggregates on the Network Map Expanded Area map.

END OF STEPS



View nodes by type

Purpose In the event there are numerous nodes on the Network Map, you may use the following task to specify your node view by type.

Task Complete the following task to view specific nodes by type on the Network Map.

- 1 From the Network Map, select **View > Node View > Node Types**.

Result:

The Node Types Selection dialog box displays.

- 2 Specify a node by either selecting a node type from the selection list or entering a node type within the **Filter** field.

Result:

The node specification is made.

- 3 Press **OK**.

Result:

The Network Map's Expanded Area map dynamically alters to reflect the node specification so that only those nodes appear within the panel.

END OF STEPS



View nodes by name

Purpose In the event there are numerous nodes on the Network Map, you may use the following task to specify your node view by name.

Task Complete the following task to view specific nodes by name on the Network Map.

- 1 From the Network Map, select **View > Node View > Node Names**.

Result:

The Node Names Selection dialog box displays.

- 2 Specify a node by either selecting a node name (or multiple node names) from the selection list or entering a node name within the **Filter** field.

Result:

The node specification is made.

- 3 Press **OK**.

Result:

The Network Map's Expanded Area map dynamically alters to reflect the node specification so that only those nodes appear within the panel.

END OF STEPS



Find a specific node

Purpose Use this task to locate a specific node on the Network Map.

Task Complete the following task to find a specific node on the Network Map.

- 1 From the Network Map, select **View > Node View > Find Node**.

Result:

The **Find Node Query Box** form displays.

- 2 In the **Node ID** field, enter a valid node name. Enter * to get a complete listing of all existing nodes.
-

- 3 Press **OK**.

Result:

The **Find Node** form lists the node(s) according to the information made in Step 2.

END OF STEPS



View links by type

Purpose In the event there are numerous links on the Network Map, you may use the following task to specify your link view by type.

Task Complete the following task to view specific links on the Network Map.

- 1 From the Network Map, select **View > Link View**.

Result:

A menu displays.

- 2 From this menu, select one of the following:
 - **Channel Types** (to specify a rate)
 - **SONET DL** (to specify a SONET digital link)
 - **Optical Layer** (to specify an optical layer)
 - **ONN Switched Connection Spans** (to specify fixed connection spans and/or optical links allocated and unallocated to ONN, which terminate on a LambdaRouter, SDH network element, or black box)
 - **Regenerators/Optical Amplifiers** (when checked, causes the regenerator icons to display)
 - **SONET Connections** (to specify a connection type)
 - **Services** (to specify a service)
 - **Virtual Concatenation Groups** (to specify nodes and links that belong to virtual concatenation groups)
 - **All Physical Links** (to specify all physical links)

Result:

A menu displays and lists the specific choices according to the selection made.

- 3 Select a link type to view.

Result:

The Network Map's Expanded Area map dynamically alters so that only the specified links appear.

END OF STEPS



Update the Network Map

Purpose Whenever a user alters the Network Map, for example, (repositioning nodes or labels; modifying the association of nodes within an area or aggregate, or creating user-defined Area Maps and sub-maps, etc.), it is necessary to update the view of the Network Map.

Task Perform the following procedure whenever you need to view the most recent instance of the Network Map, which reflects any alterations that have been made.

- 1 From the Network Map, select **File > Query Again**.

Result:

The updated view is displayed.

END OF STEPS



Create a user-defined area map

Purpose Navis™ Optical PM - NP allows users to save a user-specific view of the Network Map that displays only the areas in which the user is interested. This saved view is called a user-defined area map. The following task explains how to create a user-defined area map.

Task Use the following procedure to create a user-defined area map.

- 1 On the Network Map, select **Administration > User Defined Area Map > Add**.

Result:

A query window displays for you to specify a name for the user-defined area map and member areas that will be part of the user-defined area map.

- 2 Specify a name for the user-defined area map.
-

- 3 Using the window's arrow icons, select areas from the **Non-Members List** and place them (by clicking on the left arrow) in the **Members** list.

Result:

The **Members** list becomes populated with names of areas.

- 4 Click **OK**.

Result:

The User Defined Area Map is saved.

END OF STEPS



Reset the map view

Purpose In the event you make a mistake with specifying a map view based upon a particular node or link, you may use the following task to reset the Network Map Expanded Area map and display a completely refreshed view of the expanded area. This task also clears route or connection displays resulting from the **Display Route on Map** selection.

Task Complete the following task to reset the Network Map view.

- 1 From the Network Map, select **View > Network View Reset**.

Result:

The Network Map's Expanded Area map dynamically displays a refreshed view of all nodes and links within the expanded area.

END OF STEPS



Display Route on Network Map

Purpose Use this task to display a connection or route on the Network Map's Expanded Area map. This selection can be made from the Circuit/Trail List, Client Trail List, and Assigned Ports List forms.

Task Complete the following task to display a connection on a Network Map.

- 1 From the **Configuration** menu on the network map, select **Connection > Display** then choose **Circuit/Trail List** or **Client Trail List**, or **Assigned Ports List**.

Result:

A dialog box displays corresponding to your selection.

- 2 Enter specific query information in the dialog box, then select **OK**.

Result:

The Circuit/Trail List form, Client Trail List form, or Assigned Ports List form displays.

- 3 Select a row in the form, then select **Actions > Display Route on Map**.

Result:

The Network Map's Expanded Area map displays the connection or route corresponding to the selected port or trail list.

- 4 To refresh the display, use the ["Reset the map view" \(3-30\)](#).

END OF STEPS



Specify members and non-members

- Purpose

Use this task to specify members and non-members in forms that use **Members/Non-Members** fields to define groupings such as aggregates, areas, etc.
- Example

An example of a form that contains **Members/Non-Members** fields is the Area Modify form, which is shown in the following figure.

Provisioning Manager - NP Area Modify #0

Area ID: NOUSE

Members:

E_DMx_01

E_DMx_02

E_DMx_03

E_DMx_04

E_DMx_05

P_2510_EC1

R_DMx_01

R_DMx_02

R_DMx_03

R_DMx_04

R_DMx_05

SZ_BWM4F_1

SZ_BWM4F_2

WB2_48_01

WB2_48_03

Non-Members:

Unassigned NEs:

Model:

DEV_BWM_02

DEV_DMx2

DEV_DMxPRESS2

EB2_48_1

EB2_48_2

ODILI_EON_01

RGD1

RGD2

BWM

BBOX

BBOX

BWM

BWM

EON_SE

BBOX

BBOX

OK

Apply

Reset

Close

Help

- Task

Important! This task assumes that you are working from a window with member/non-member fields.

Use this task to specify a member or a non-member when using a form that requires a member/non-member designation.
- 1

In the **Non-Members** column, select an item to be specified as a member by clicking on it.

Result:

The item becomes highlighted, and the left arrow button becomes enabled.

- 2 Press the left arrow button.

Result:

The system moves the selected item from the **Non-Members** list to the **Members** list, and the **Apply** button is enabled. Click **Apply** to store this change in the Navis[™] Optical PM - NP database and keep the window open for further modification. Or, click the **OK** button to store this change in the Navis[™] Optical PM - NP database and close the window.

- 3 To make the member item a non-member, in the **Members** column, select the item and press the right arrow button.

Result:

The system moves the selected item from the **Members** list to the **Non-Members** list, and the **Apply** button is enabled. Click **Apply** to store this change in the Navis[™] Optical PM - NP database and keep the window open for further modification. Or, click the **OK** button to store this change in the Navis[™] Optical PM - NP database and close the window.

END OF STEPS



Network Controller Map tasks

Overview

Purpose This section describes tasks that are performed from the Network Controller Map.

Contents

Open the Network Controller Map	3-35
Reposition an EMS icon	3-36
View network elements controlled by a particular EMS	3-37
Start or stop communication between Navis™ Optical PM - NP and an EMS	3-38
Perform a database synchronization between Navis™ Optical PM - NP and an EMS	3-39
Cut-through to an EMS from Navis™ Optical PM - NP	3-40



Open the Network Controller Map

Purpose The Network Controller Map displays the EMS controllers that are under Navis[™] Optical PM - NP management.

Task Complete the following task to display the Network Controller Map.

- 1 From the Network Map, select **File > Open Network Controller Map**.

Result:

The Network Controller Map displays.

END OF STEPS



Reposition an EMS icon

Purpose Use the following procedure to reposition an EMS icon on the Network Controller Map.

Before you begin Before you reposition an icon, note the following items:

- This task only provides a temporary repositioning of an icon. In order to make the positioning permanent, a user must have system administrator privileges. See the *Navis™ Optical PM - NP Administration Guide* for details.

Task Complete the following task to reposition an EMS icon on the Network Controller Map.

- 1 On the Network Controller Map, select the icon of the EMS you want to reposition.

Result:

A white square displays around the icon.

- 2 Drag and drop the icon to a new location.

Result:

The icon and its connecting links are repositioned.

END OF STEPS



View network elements controlled by a particular EMS

Purpose Use the following procedure to view the network elements controlled by a particular EMS.

Task Complete the following task to view the network elements controlled by a particular element management system.

- 1 On the Network Controller Map, right-click the icon for which you want to view the network elements.

Result:

A Node menu displays.

- 2 From the menu, select **Node Operation > Controlled NEs**.

Result:

The **Controlled Network Element List** form displays and lists all the original and currently assigned network elements.

- 3 Press **Close**.

Result:

The form closes.

END OF STEPS



Start or stop communication between Navis[™] Optical PM - NP and an EMS

Purpose Use the following procedure to start or stop communication between Navis[™] Optical PM - NP and an EMS.

Before you begin Before you start or stop communication between Navis[™] Optical PM - NP and an EMS, consider the following items:

- When communication has started, the EMS icon is green.
- When communication has been stopped, the EMS icon is magenta.

Task Complete the following task to start or stop communication between Navis[™] Optical PM - NP and an EMS.

- 1 On the Network Controller Map, right-click on the EMS icon with which you wish to start or stop communication.

Result:

A Node menu displays.

- 2 Select **Session > (Start or Stop) Communication**. Note that “Start” or “Stop” will depend if communication currently exists. If communication currently exists, users will have the option to “Stop” communication.

Result:

A confirmation window displays.

- 3 Press **OK**.

Result:

The window closes, and the management system icon changes color depending on whether communication was started or stopped.

END OF STEPS



Perform a database synchronization between NavisTM Optical PM - NP and an EMS

Purpose Use the following procedure to perform a database synchronization between NavisTM Optical PM - NP and an EMS.

Task Complete the following task to perform a database synchronization between NavisTM Optical PM - NP and an EMS.

- 1 On the Network Controller Map, right-click on the EMS icon with which you wish to synchronize.

Result:

A Node menu displays.

- 2 From the menu, select **Session > Start EMS Synchronization**.

Result:

The **Database Download/Synchronization** form displays.

- 3 Press **Apply**.

Result:

A confirmation message displays.

- 4 Press **Yes**.

Result:

The database synchronization is started. A window with a revolving globe displays. When the synchronization is done, the globe disappears and a message is displayed on both windows as to the success or failure of the synchronization.

END OF STEPS



Cut-through to an EMS from Navis[™] Optical PM - NP

Purpose Use the following procedure to cut-through to an EMS from Navis[™] Optical PM - NP.

Task Complete the following task to cut-through to an EMS from Navis[™] Optical PM - NP.

- 1 On the Network Controller Map, right-click on the EMS icon to which you wish to cut through.

Result:

A menu displays.

- 2 From the menu, select **Session > Login to EMS**.

Result:

The EMS display appears if the cut through is successful, otherwise a message displays if the cut through is unsuccessful.

END OF STEPS



Software feature tasks

Overview

Purpose This section describes tasks used to access features of the Navis™ Optical PM - NP software.

Contents

Access the on-line documentation	3-42
Access the screen help	3-43
View the software version	3-44
View the date format	3-45
View the Network Map legend	3-46



Access the on-line documentation

Purpose Navis[™] Optical PM - NP includes a library of on-line user documents.

The documentation library contains the following documents in HTML and PDF format:

- *Navis[™] Optical PM - NP Getting Started Guide*
- *Navis[™] Optical PM - NP Provisioning Guide*
- *Navis[™] Optical PM - NP Maintenance Guide*
- *Navis[™] Optical PM - NP Administration Guide*

HTML format is most appropriate for viewing a document on-line, and PDF format is most appropriate for printing out a paper copy of a document.

Task

- 1 From the Network Map, select **Help > Help Contents**.

Result:

The computer's web browser automatically launches and the online documentation library displays.

.....

- 2 From the on-line library, select the link for the desired document in the desired format (HTML or PDF).

Result:

The appropriate document automatically displays within your web browser.

END OF STEPS

.....



Access the screen help

Purpose Navis™ Optical PM - NP contains screen help for each of the Navis™ Optical PM - NP forms. The screen help is accessed from the form and displays in the computer's web browser.

Task

1 To access help for the Network Map form:

- From the Network Map, select **Help > This Window**.

Result:

A browser window opens and displays screen help for that form.

.....

2 To access help for any form:

- Click the **Help** button at the bottom of the form.

Result:

A browser window opens and displays screen help for that form.

END OF STEPS

.....



View the software version

Purpose Use the following procedure to view the version of the currently running Navis™ Optical PM - NP software. This is useful in cases where patches were loaded, and the user wishes to see if the patches have taken effect in the software.

Task Perform the following task to view the version of the currently running Navis™ Optical PM - NP software.

- 1 From the Network Map, select **Help > Version**.

Result:

A pop-up window displays the software version number of the currently running Navis™ Optical PM - NP software on the host computer.

END OF STEPS



View the date format

Purpose Use the following procedure to view the date format currently being used by Navis[™] Optical PM - NP.

Task Perform the following steps to verify the date format currently being used by Navis[™] Optical PM - NP.

- 1** From the Network Map, select **Help > Date Format**.

Result:

A pop-up window displays the current date format being used by Navis[™] Optical PM - NP.

END OF STEPS



View the Network Map legend

 
Purpose When first using Navis[™] Optical PM - NP, it is recommended that you view the Network Map legend, which shows which network elements are represented by which icons.

Task Perform the following task to view the Network Map Legend.

- 1 From the Network Map, select **View > Legend View**.

Result:

A window displays and lists all the icons and the network elements to which they are associated. Use the scrollbar to view the complete listing.

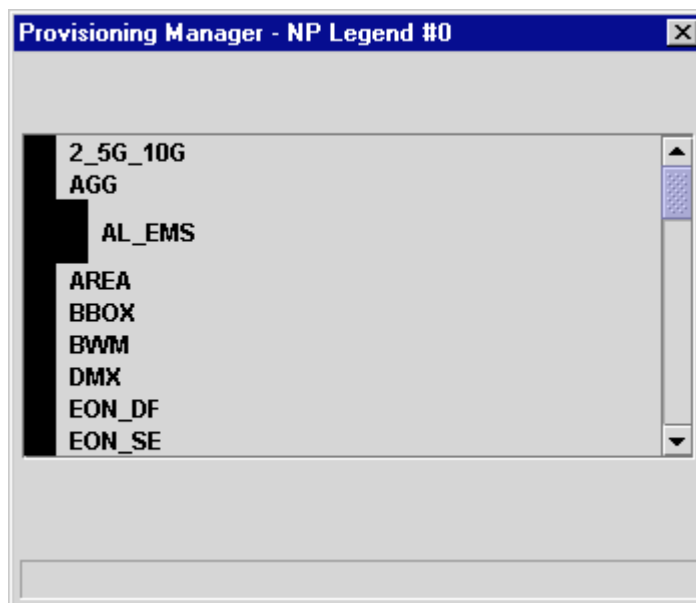

END OF STEPS





Index

- A** Aggregate
network element icon, [1-14](#)
Aggregates, [3-21](#)
Area Map, [1-5](#), [1-7](#)
Areas
area icons, [1-12](#)
displaying the network elements in an area, [3-4](#), [3-15](#)
expanding, [3-4](#)
expanding in the Network Tree Panel, [3-15](#)
-
- B** Black box
network element icon, [1-14](#)
-
- C** Colors
area icons, [1-12](#)
EMS controller icons, [2-5](#)
link icons, [1-17](#), [1-17](#)
network element icons, [1-15](#)
Commenting on user documents, [ix](#)
-
- Comments, [x](#)
Communication with EMSs
database synchronization, [3-39](#)
starting, [3-38](#)
stopping, [3-38](#)
Conventions
typographical, [viii](#)
Cut-throughs to EMSs, [3-40](#)
-
- D** Database synchronization, [3-39](#)
Date format
viewing, [3-45](#)
Display route, [3-31](#)
Documentation
font usage, [viii](#)
how to comment, [ix](#), [x](#)
list of, [ix](#)
on CD-ROM, [ix](#)
on-line version, [ix](#)
-
- E** Element Management Systems (EMSs)
cut-throughs, [3-40](#)
-
- database synchronization, [3-39](#)
starting or stopping communications with, [3-38](#)
viewing network elements controlled by an EMS, [3-37](#)
EMS Controller icons, [2-5](#), [2-5](#)
moving, [3-36](#)
EMSs
See: Element Management Systems (EMSs)
Equipment
network element icon, [1-14](#)
Expanded Area Panel, [1-7](#), [3-4](#)
-
- F** Font usage, [viii](#)
-
- H** Help, [3-43](#)
screen help, [ix](#)
-
- I** Icons
area icons, [1-12](#)

EMS controller icons, [2-5](#)
 link icons, [1-17](#)
 moving, [3-19](#)
 Network Controller Map, [2-5](#)
 network element icons, [1-14](#)
 selecting, [3-20](#)
 specifying location of label on network element icons, [3-18](#)
 unselecting, [3-20](#)
 Information products
 font usage, [viii](#)
 how to comment, [ix](#), [x](#)
 how to order, [x](#)
 list of, [ix](#)
 on CD-ROM, [ix](#)
 on-line version, [ix](#)

L LambdaRouter 128/256
 network element icon, [1-14](#)
 LambdaRouter ONN
 network element icon, [1-14](#)
 LambdaUnite MSS
 network element icon, [1-14](#)
 Link icons, [1-17](#)
 colors, [1-17](#)
 Links
 icons, [1-17](#)
 viewing by type, [3-26](#)

M Magnify the map view, [3-12](#)
 undo, [3-12](#)
 Maps
 magnify, [3-12](#)
 moving around within, [3-7](#)
 resizing, [3-6](#)
 zoom in, [3-8](#)
 zoom out, [3-10](#)
 Members
 moving to non-members, [3-32](#)
 Menu bar
 Network Controller Map, [2-4](#)
 Network Map, [1-8](#)
 Metropolis DMX
 network element icon, [1-14](#)
 Metropolis DMXpress
 network element icon, [1-14](#)
 Metropolis EON
 network element icon, [1-14](#)
 Move around the map, [3-7](#)

N Network Controller Map
 icons, [2-5](#)
 opening, [3-35](#)
 parts of, [2-3](#)
 Network element icons
 aggregate, [1-14](#)

black box, [1-14](#)
 colors, [1-15](#)
 equipment, [1-14](#)
 LambdaRouter 128/256, [1-14](#)
 LambdaRouter ONN, [1-14](#)
 LambdaUnite MSS, [1-14](#)
 Metropolis DMX, [1-14](#)
 Metropolis DMXpress, [1-14](#)
 Metropolis EON, [1-14](#)
 moving unexpectedly, [1-16](#)
 ONN, [1-14](#)
 regenerators, [1-14](#)
 repeaters, [1-14](#)
 stacked on left of map, [1-16](#)
 WaveStar BandWidth Manager, [1-14](#)
 WaveStar OLS 1.6T, [1-14](#)
 WaveStar TDM 2.5/10G, [1-14](#)
 Network elements
 finding a specific one, [3-25](#)
 icon, [1-14](#)
 listing per EMS, [3-37](#)
 viewing by name, [3-24](#)
 viewing by type, [3-23](#)
 Network Map
 display route, [3-31](#)
 initial appearance, [1-3](#)

overview, 1-6 parts of, 1-8 reset view, 3-30 status line, 1-10 toolbar, 1-9 updating, 3-28 viewing the legend, 3-46 Network Tree Panel, 1-5, 1-7, 3-15 Node menus, 3-17 Nodes - finding a specific one, 3-25 - viewing by name, 3-24 - viewing by type, 3-23 Non-members - moving to members, 3-32	Repeaters network element icon, 1-14 Resize the maps, 3-6	Z Zoom maps, 3-8, 3-10
O On-line documentation, ix, 3-42 On-line help See: Screen help ONN - network element icon, 1-14 Ordering - information products, x	S Screen help, ix, 3-43 Software version, 3-44 Status line - Network Map, 1-10 T Toolbar - Network Controller Map, 2-4 - Network Map, 1-9 Typographical conventions, viii	
Q Query Again, 3-28	U User-defined area maps, 3-29	
R Regenerators network element icon, 1-14	V Version number - viewing, 3-44 W WaveStar BandWidth Manager - network element icon, 1-14 WaveStar OLS 1.6T - network element icon, 1-14 WaveStar TDM 2.5/10G - network element icon, 1-14	

