



DACS II
Release 9.0, MML
2.048-Mb/s Interface
Operations and Maintenance
Volume I - Reference Material

365-353-291
Issue 1.0
October 1999

Copyright © 1999 Lucent Technologies

All Rights Reserved

Printed in U.S.A

This material is protected by the copyright and trade secret laws of the United States and other countries. It may not be reproduced, distributed or altered in any fashion by any entity (either internal or external to Lucent Technologies), except in accordance with applicable agreements, contracts, or licensing, without the express written consent of the Customer Training and Information Products organization and the business management owner of the material.

Notice

Every effort was made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

Mandatory Information

Security Statement

In rare instances, unauthorized individuals make connections to the telecommunications network through the use of remote access features. In such event, applicable tariffs require that the customer pay all network charges for traffic. Lucent Technologies cannot be responsible for such charges, and will not make any allowance or give any credit for charges that result from unauthorized access.

Trademarks

5ESS and *SLC*® is a registered trademark of Lucent Technologies.

COMMON LANGUAGE is a registered trademark and CLEI, CLLI, CLCI, and CLFI are trademarks of Bell Communications Research, Inc.

American Express is a registered trademark of American Express Company.

MasterCard is a registered trademark of mastercard International Inc.

Visa is a registered trademark of VISA International Service Association.

Documentation Ordering Information

The ordering number for this document is 365-365-291. To order this document, call the Lucent Technologies Customer Information Center in Indianapolis, Indiana, on 1-888-582-3688. For more ordering information, refer to "How to Order Documentation" in the section "About this Document."

Customer Assistance and Technical Support

Lucent Technologies provides technical assistance 24 hours a day, seven days a week. For technical assistance within the United States, call 1-800-225-RTAC. For technical assistance in Europe, call the Netherlands Technical Support Organization (TSO) at 31-3587-1555. For technical assistance in the Far East, call the Singapore TSO at 65-241-0880. If your country of origin provides local technical support, please contact them directly.

Documentation Support Telephone Number

Lucent Technologies provides a telephone number for you to report errors or to ask questions about the information in this document (i.e., for permission to reproduce or distribute). The support telephone numbers are:

Outside the United States - 1-317-322-6847

Inside the United States - 1-800-645-6759

Acknowledgements

This document was developed by the Lucent Technologies Customer Training and Information Products Organization.

How Are We Doing?

Title: DACS II Release 9.0, MML, 2.048-Mb/s, Operation and Maintenance
Volume I - Reference Material

Identification No.: 365-353-291 Issue No.: 1 Date: October 1999

Lucent Technologies welcomes your feedback on this Customer Information Product (CIP). Your comments can be of great value in helping us improve our CIPs.

1. Please rate the effectiveness of this CIP in the following areas:

	Excellent	Good	Fair	Poor	Not Applicable
Ease of Use					////////////////
Clarity					////////////////
Completeness					////////////////
Accuracy					////////////////
Organization					////////////////
Appearance					////////////////
Examples					
Illustrations					
Overall Satisfaction					////////////////

2. Please check the ways you feel we could improve this CIP.

☐ Improve the overview/introduction	☐ Make it more concise/brief
☐ Improve the table of contents	☐ Add more step-by-step procedures/tutorials
☐ Improve the organization	☐ Add more troubleshooting information
☐ Include more figures	☐ Make it less technical
☐ Add more examples	☐ Add more/better quick reference aids
☐ Add more detail	☐ Improve the index

Please provide details for the suggested improvement. _____

3. What did you like most about this CIP?

4. Feel free to write any comments below or on an attached sheet.

If we may contact you concerning your comments, please complete the following:

Name: _____ Telephone Number: _____

 
Company/Organization: _____ Date: _____

Address: _____


When you have completed this form, please fold, tape and return to address on back
or Fax to: 732 949 5000.

----- Do Not Cut — Fold Here And Tape -----

Lucent Technologies
Bell Labs Innovations



 NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES



BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 1999 GREENSBORO, NC

POSTAGE WILL BE PAID BY ADDRESSEE

DOCUMENTATION SERVICES
2400 Reynolda Road
Winston-Salem, NC 27199-2029



Contents

About This Manual	xxi
■ Background	xxi
■ New Features in This Release	xxii
■ How to Use This Manual	xxiii
■ Manual Contents	xxiv
■ Manual Conventions	xxx
■ Related Documentation	xxxii
■ How to Order Documentation	xxxv
■ How to Comment on This Manual	xxxviii
■ Electronic Documentation	xxxix

1 Introduction	1-1
■ Background	1-1
■ Interface Bays	1-30
■ Single Bay	1-37
■ Common Equipment Circuit Blocks	1-42
■ 2.048 Mb/s Facility Terminating Units	1-51
■ Cross-Connect Networks	1-54
■ Digital Signal Processing Units	1-58
■ Frame Alarm Indications	1-60
■ Status Panel Functions	1-65
■ Powering	1-66
■ DS3 Hybrid Termination Feature	1-70
■ DSP Platform Feature	1-79
■ Broadcast TSO Feature	1-84
■ NPC Addressing	1-114
■ On-Line Help Feature	1-115
■ Recommended Memory Card Backup Strategy	1-126

Contents

2	Acceptance	2-1
	■ Background	2-1
	■ Perform Visual Inspection	2-4
	■ Check Circuit Pack Installation	2-8
	■ Review Frame and Link Setup	2-38
	■ Initialize and Test Alarms	2-44
	■ Check and Set Time-Clock, Facility Report Utilities, and Auto Backup Memory	2-45
	■ Check and Change Impedance Setting	2-49
	■ Check NPC Timing Option Wiring	2-50
	■ Check Sync Switchover	2-51
	■ Check Cross-Connect Operation	2-52
	■ Check for Equipped, Out-Of-Service, or Cross-Connected Circuits	2-55
3	Provisioning	3-1
	■ Background	3-1
	■ Grow Frame ID	3-7
	■ Check NPC Timing Option Wiring	3-11
	■ Grow Sync Timebase, Configure Sync Mode, and Restore Sync	3-12
	■ Grow and Restore Sync TLIs	3-13
	■ Query Sync Status	3-16
	■ Add/Change Synchronizer Timing Link Interface	3-20
	■ Change Synchronizer Time Base Stratum	3-22
	■ Install Multibay CCN Circuit Packs	3-26
	■ Install Single-Bay CCN Circuit Packs	3-28
	■ Remove and Degrow ECCN/CCN	3-30
	■ Install Multibay Power Units and Fuses	3-43
	■ Install Single-Bay Power Units and Fuses	3-55
	■ Install Plug-Ins, Grow, and Restore FTU/IFTU	3-61

Contents

■ Remove and Degrow FTU/IFTU	3-70
■ Install Circuit Packs, Grow and Restore DSPU	3-71
■ Remove and Degrow DSPU	3-74
■ Install Circuit Packs, Grow and Restore IFTU2 NPC	3-80
■ Install, Grow Circuit Packs and Restore DSPU NPC	3-93
■ Change NPC Parameters	3-96
■ Remove and Degrow NPC	3-102
■ Initialize, Set Type and Rate Characteristics	3-113
■ Change Input Command Priority, Link Language, NPC Addressing, and Output Message Screening	3-116

4	Test Access	4-1
	■ Background	4-1
	■ Grow Test Ports	4-14
	■ Grow Test Groups	4-16
	■ DSP Application Test Access Connections	4-20
	■ Establish Test Group Connection (Nx64 Kbit/s)	4-22
	■ Clear-2 Mbit/s Test Access	4-24
	■ Loopback Test Access	4-37
	■ ITS Test Access	4-41
	■ Test Signal Generation	4-44
	■ Test Signal Monitoring	4-45

5	Cross-Connections and Disconnections	5-1
	■ Background	5-1
	■ Two-Point Gateway Circuit	5-8
	■ Two-Way Multipoint Circuit	5-11
	■ Broadcast Circuit	5-15

Contents

■ One-Way Multipoint Circuit	5-16
■ Change Cross-Connect	5-18
■ Disconnect Cross-Connected Circuit	5-19
■ Broadcast Circuit	5-21
■ Switch Return Leg of Broadcast Circuit	5-22
■ Change Termination State of Cross-Connection	5-23
■ Disconnect Broadcast Circuits	5-24
■ Re-Direct E1 Signals	5-27
■ Network Element	5-29
■ Non-Network Element	5-30
■ Two-Way Cross-Connections	5-32
■ Broadcast Circuit	5-33
■ Change Timeslot 0 Monitoring	5-34
■ Change Timeslot 0 Spare Bits	5-35
■ Change Non-Frame Word Bits	5-36
■ Disconnect Two-way TS0 Circuit	5-37
■ Disconnect Broadcast TS0 Circuit	5-38
■ DSP Platform Application-to-Application Cross-connections	5-40

6	Administration	6-1
	■ Background	6-1
	■ Frame Administrator Functions	6-4
	■ Log-On/Log-Off	6-12
	■ Alternate Maps	6-14
	■ Macros	6-19
	■ MML Message Logging	6-24
	■ Alarm Severity Setting	6-25
	■ Intervention Level Setting	6-29

Contents

7	Maintenance	7-1
	■ Background	7-1
	■ Software Installation	7-3
	■ Database Archiving	7-4
	■ Memory Card Failure Recovery	7-6
	■ Repair and Replacement	7-8
	■ Upgrade/Replacing Circuit Packs	7-9
8	Performance Monitoring	8-1
	■ Background	8-1
	■ Near-End 2.048-Mb/s Error Count	8-3
	■ Near-End 2.048-Mb/s Errored Intervals	8-4
	■ Near-End 2.048-Mb/s Error Ratio Parameters	8-6
	■ Far-End Performance Parameters for a 2.048-Mb/s Facility	8-7
	■ Performance Parameter Thresholds	8-8
	■ Performance Monitoring Report	8-11
	■ Performance Monitoring Data	8-12
	■ Performance Monitoring Counts	8-13
	■ Check and Operate 2.048-Mb/s Line Loopback	8-14
	■ E1 NPC Default Threshold Crossing Alarm Mode	8-15
	■ Facility Loopback for TE or TH Type NPC within a Hybrid DS3	8-16
9	C-Bit Processing	9-1
	■ Background	9-1
	■ C-Bit Processing Commands	9-3
	■ C-Bit Query Commands	9-4
	■ Disconnect from CPR Pack	9-5

Contents

A	Command Denials	A-1
	■ Background	A-1
	■ Clear Command Denials	A-2

GL	Glossary	GL-1

IN	Index	IN-1

Figures

Figure 1-1	DACS II Frame Arrangements	1-5
Figure 1-2	Single-Bay Frame Arrangement	1-15
Figure 1-3	Capacity Expansion Frame	1-17
Figure 1-4	Locations of Cross-Connect Network Circuit Pack	1-19
Figure 1-5	Original Switch Bay Synchronizer and MC Circuit Pack Locations	1-20
Figure 1-6	Original Switch Bay Cross-Connect Network Power Unit Circuit Pack Locations	1-21
Figure 1-7	Original Switch Bay Fuse and Alarm Panel	1-22
Figure 1-8	CEF Switch Bay	1-23
Figure 1-9	Location of Circuit Packs on ECCN Shelf	1-24
Figure 1-10	CEF Switch Bay Synchronizer Circuit Pack Locations	1-26
Figure 1-11	CEF Switch Bay Status Panel	1-28
Figure 1-12	CEF Switch Bay Fuse and Alarm Panel	1-29
Figure 1-13	Original Interface Bay Power and Control Unit Circuit Pack Locations	1-30
Figure 1-14	FTU Circuit Pack Positions	1-32
Figure 1-15	IFTU Circuit Pack Locations (Unit 1 Extended NPC Numbering Shown)	1-33
Figure 1-16	IFTU2 Circuit Pack Locations	1-34
Figure 1-17	DSPU Circuit Pack Locations	1-35
Figure 1-18	Single Bay Frame	1-38
Figure 1-19	Single-Bay Cross-Connect Network 2 (CCN2) Circuit Pack Locations	1-39
Figure 1-20	Single Bay Fuse and Alarm Panel	1-40
Figure 1-21	System Architecture Diagram	1-43
Figure 1-22	Synchronizer Block Diagram	1-47
Figure 1-23	Unit and Cross-Connect Network Block Diagram	1-51
Figure 1-24	ECCN Block Diagram	1-57
Figure 1-25	Gateway Signal Conversions	1-69
Figure 1-26	Simplified DS3U Block Diagram	1-71
Figure 1-27	Simplified MXR Block Diagram	1-73
Figure 1-28	Protection Switching Circuitry	1-77
Figure 1-29	Basic DSP Platform Hardware Architecture	1-79
Figure 2-1	Fully Equipped CEF	2-6
Figure 2-2	Main Controller	2-9

Figures

Figure 2-3	Original FTU	2-12
Figure 2-4	Integrated Facility Terminating Unit	2-13
Figure 2-5	Integrated Facility Terminating Unit 2	2-14
Figure 2-6	Switch Bay	2-18
Figure 2-7	Location of Circuit Packs on ECCN Shelf	2-19
Figure 2-8	Location of Circuit Packs on CCN Shelf	2-20
Figure 2-9	CCN2 Network	2-21
Figure 2-10	Original Interface Bay (Bay 1)	2-22
Figure 2-11	DSPU Shelf	2-36
Figure 2-12	Link Status Register	2-43
Figure 2-13	PRIM Hex-Word Construction for PB/PC NPCs	2-47
Figure 2-14	PRIM Hex-Word Construction for PA NPCs	2-48
Figure 2-15	Cross-Connection Using DATS	2-53
Figure 2-16	Cross-Connection Using Unassigned Voice Terminal	2-54
Figure 2-17	Common Equipment Readout	2-55
Figure 2-18	Maintenance Command Construction	2-56
Figure 3-1	Fully-Equipped CEF	3-8
Figure 3-2	Sync Status Register	3-18
Figure 3-3	Identification of Main Controller Slots in CEF	3-19
Figure 3-4	TLI Status Register	3-20
Figure 3-5	Sync Port Status Register	3-21
Figure 3-6	Fully-Equipped Capacity Expansion Frame	3-24
Figure 3-7	Location of Circuit Packs on ECCN Shelf	3-25
Figure 3-8	Duplicated Cross-Connect Network for Multibay Frame	3-26
Figure 3-9	Duplicated Cross-Connect Network for Single Bay Frame	3-28
Figure 3-10	Original Interface Bay (Bay 1)	3-31
Figure 3-11	Multibay Frame Layout	3-43
Figure 3-12	Single-Bay Frame Layout	3-55
Figure 3-13	Original FTU	3-62
Figure 3-14	Integrated Facility Terminating Unit ED9C004-30 G1 or G2	3-63
Figure 3-15	Integrated Facility Terminating Unit 2 ED9C004-30 G3	3-64
Figure 3-16	DSPU Shelf	3-71
Figure 3-17	Link Status Register	3-115
Figure 4-1	TG182, TG185, and TG187 Monitor Jack Layout	4-5

Figures

Figure 4-2	TG192 Monitor Jack Layout	4-6
Figure 4-3	Cross-Connect Schematic	4-7
Figure 4-4	Rear View of 3-Inch Panel	4-8
Figure 4-5	800-Series DSX Details	4-9
Figure 4-6	Test Port/Test Group Modes	4-12
Figure 4-7	MONE Mode	4-26
Figure 4-8	MONF Mode	4-26
Figure 4-9	MONEF Mode	4-27
Figure 4-10	SPLTA Mode	4-27
Figure 4-11	SPLTB Mode	4-28
Figure 4-12	SPLTAB Mode	4-28
Figure 4-13	SPLTE Mode	4-29
Figure 4-14	SPLTF Mode	4-29
Figure 4-15	SPLTEF Mode	4-30
Figure 4-16	LOOPE Mode	4-30
Figure 4-17	LOOPF Mode	4-31
Figure 4-18	HUB Mode	4-31
Figure 4-19	LPBKT Mode	4-32
Figure 4-20	TNR Mode	4-32
Figure 4-21	Hubbing Test Access for Test Ports (similar for Test Groups)	4-36
Figure 4-22	Loopback Test Access for Test Ports (similar for Test Groups)	4-37
Figure 4-23	Test Access in Monitor Mode	4-41
Figure 4-24	Test Access in Split Mode	4-42
Figure 4-25	Test Access in Hub Mode	4-42
Figure 4-26	Test Access in Looped Mode	4-43
Figure 4-27	Test Access in Release Mode	4-43
Figure 5-1	Trunk Conditioning and Signaling Conversion Diagrams	5-6
Figure 5-2	Construction of Trunk Conditioning Field	5-7
Figure 5-3	Trunk Conditioning and Signaling Conversion Diagrams	5-10
Figure 5-4	DMB Circuit Configurations	5-12
Figure 5-5	Virtual NPC Broadcast	5-13
Figure 5-6	Construction of TRSP Trunk Conditioning	5-14
Figure 5-7	Virtual NPC Broadcast	5-17
Figure 5-8	Construction of TRSP Trunk Conditioning	5-17

Figures

Figure 6-1	Memory Card Locations on CPU2	6-5
Figure 6-2	Example of Alternate Map	6-15
Figure 6-3	Example of an Alternate Map Using the Picture Option	6-15
Figure 6-4	Example of a Reference Map	6-16
Figure 6-5	Example of Macro (Extended NPC Numbering)	6-21
Figure 6-6	Example of Macro (Extended NPC Numbering)	6-22
Figure 7-1	Memory Card Locations on CPU2	7-5
Figure 9-1	Construction of Hexadecimal Word	9-3

Tables

Table 1-1	DACS II Frame/Bay/Unit Arrangements	1-6
Table 1-2	DACS II Circuit Pack Equipment	1-7
Table 1-3	Expanded MC Equipment	1-25
Table 1-4	Intervention Level Settings	1-64
Table 1-5	Verb/Keyword and/or Modifier(s)	1-95
Table 1-6	Additional Input Acknowledgements	1-103
Table 1-7	Priority of Action Levels	1-106
Table 1-8	Command Termination Status	1-107
Table 1-9	Alarm Code Severity	1-112
Table 1-10	Constructing Entire Command Using On-Line Help	1-117
Table 1-11	Obtaining Help at a Particular Point	1-120
Table 2-1	Sync Circuit Packs	2-10
Table 2-2	Sync Status Output	2-11
Table 2-3	NPC Location in Unit	2-15
Table 2-4	Power Unit Summary (CEF)	2-24
Table 2-5	Power Unit Summary (Single-Bay)	2-25
Table 2-6	48-Volt Power (CEF) Feed A Fuse	2-26
Table 2-7	48-Volt Power (CEF) - Feed B Fuse	2-27
Table 2-8	48-Volt Power (CEF) - Feed C Fuse	2-28
Table 2-9	48-Volt Power (CEF) - Feed D Fuse	2-29
Table 2-10	48-Volt Power (Single-Bay)	2-30
Table 2-11	Sync and Main Controller (CEF)	2-30
Table 2-12	Sync and Main Controller (Single-Bay)	2-31
Table 2-13	77-Type, FTU Fuses (Original Interface Bay)	2-32
Table 2-14	IFTU Fuse Assignment	2-33
Table 2-15	DSPU5 and DSPU6 Fuses (Original Interface Bay)	2-34
Table 2-16	DSPU Fuses (Flexible Bay)	2-35
Table 2-17	Power Unit Requirements	2-35
Table 2-18	DSPU Power Units and Fuses	2-37
Table 2-19	Configuration Meanings	2-38
Table 2-20	Command Grouping	2-40
Table 2-21	Screening Options	2-41
Table 2-22	NPC Positions	2-50
Table 2-23	Sync Status Output	2-51

Tables

Table 3-1	Sync Circuit Pack Cards	3-10
Table 3-2	TP-Type Growth Options	3-14
Table 3-3	TE-Type Growth Options	3-15
Table 3-4	Sync Status Output	3-16
Table 3-5	Circuit Packs Needed	3-27
Table 3-6	CEF Power Unit Summary	3-33
Table 3-7	48-Volt Power (CEF) Feed A Fuse	3-34
Table 3-8	48-Volt Power (CEF) - Feed B Fuse	3-35
Table 3-9	48-Volt Power (CEF) - Feed C Fuse	3-36
Table 3-10	48-Volt Power (CEF) - Feed D Fuse	3-37
Table 3-11	Secondary Power Distribution (Sync and Main Controller) (CEF)	3-38
Table 3-12	IFTU Fuse Assignment	3-38
Table 3-13	DSPU Fuses (Flexible Bay)	3-39
Table 3-14	DSPU5 and DSPU6 Fuses (Original Interface Bay)	3-40
Table 3-15	77-Type, FTU Fuses - Original Interface Bay	3-41
Table 3-16	Power Unit Requirements	3-42
Table 3-17	Power Unit Summary (Non-CEF)	3-45
Table 3-18	48-Volt Power (Non-CEF)	3-46
Table 3-19	Sync and Main Controller (Non-CEF)	3-49
Table 3-20	IFTU Fuse Assignment	3-49
Table 3-21	CCN Fuses (Original Interface Bay)	3-50
Table 3-22	77-Type, FTU Fuses (Original Interface Bay)	3-52
Table 3-23	DSPU5 and DSPU6 Fuses	3-53
Table 3-24	Power Unit Requirements	3-54
Table 3-25	Single-Bay 48-Volt Fuses	3-57
Table 3-26	77-Type, FTU Fuses - Single-Bay Frame	3-57
Table 3-27	DSPU5 Fuses	3-59
Table 3-28	Sync and Main Controller (Single-Bay)	3-60
Table 3-29	Power Unit Requirements	3-60
Table 3-30	NPC Location in Unit	3-65
Table 3-31	DS1 (1.544 Mb/s) Equalizer Settings	3-69
Table 3-32	19.2-kb/s Equalization Settings	3-73
Table 3-33	PB/PC Type Setup Options	3-75
Table 3-34	PA Type Setup Options	3-76

Tables

Table 3-35	DA/TA Type Setup Options	3-77
Table 3-36	Hexadecimal/Binary Numbers	3-82
Table 3-37	Facility Parameter	3-83
Table 3-38	Alarms Option	3-83
Table 3-39	PA-Type NPC x Options	3-84
Table 3-40	PA-Type NPC y Options	3-85
Table 3-41	PA-Type NPC z Options	3-85
Table 3-42	PA-Type NPC Facility Performance Parameters	3-86
Table 3-43	TH-Type NPC x Options	3-89
Table 3-44	TH-Type NPC y Options	3-90
Table 3-45	TH-Type NPC z Options	3-90
Table 3-46	TH-Type NPC Facility Performance Parameters	3-91
Table 3-47	DSP NPC Types and x and y Options	3-93
Table 3-48	DSP NPC z Options	3-94
Table 3-49	2.048-Mb/s Interface Alarm Parameters (PA/PB/PC Type NPCs)	3-98
Table 3-50	2.048-Mb/s Interface Option Selection	3-99
Table 3-51	TS0 Bit Meanings	3-100
Table 3-52	Hex and Binary Equivalents	3-106
Table 3-53	Hexadecimal (xyz) = Binary (abcd efgh jklm)	3-107
Table 3-54	NPC Status Keywords	3-108
Table 3-55	PA NPC Status Keywords	3-109
Table 3-56	Synchronous Link Level Parameters	3-114
Table 4-1	Test Port/Test Group Modes	4-12
Table 4-2	Test Access Channels	4-15
Table 4-3	Clear-2 Mbit/s Test Access Modes	4-25
Table 4-4	STxyz Type Card Slot Designations	4-40
Table 5-1	Cross-Connection Keywords.	5-1
Table 5-2	Multipoint NPC and Channel Numbers	5-14
Table 6-1	Command Groupings	6-7
Table 6-2	Screening Options	6-8
Table 7-1	Test Results and Action Items	7-7
Table 8-1	Default Performance Parameter Thresholds	8-8
Table 8-2	rr Parameter	8-9
Table 8-3	Valid Parameters	8-11

Tables

Table 8-4	Monitored Parameters	8-13
Table A-1	mmmm Condition Codes	A-5

About this Manual

Contents

■ Background	xxi
Purpose	xxi
Intended Audiences	xxi
■ New Features in This Release	xxii
Overview	xxii
Hybrid DS3 Threshold Support	xxii
ICI Circuit Pack	xxii
ITS	xxii
Non-CEF Information	xxii
■ How to Use This Manual	xxiii
Before Using the Procedures	xxiii
Accessing the Information	xxiii
Prerequisites	xxiii
Procedure Sequence	xxiii

(Continued on next page)

Contents

■ Manual Contents	xxiv
Volume Breakdown	xxiv
General Tasks and Supporting Elements	xxiv
Contents of Volume I	xxv
Contents of Volume II	xxvii
Contents of Volume III	xxix
■ Manual Conventions	xxxi
Special Font Used	xxxi
Notes	xxxi
Safety Label	xxxi
■ Related Documentation	xxxii
Related DACS II Documents	xxxii
■ How to Order Documentation	xxxv
Overview	xxxv
Ordering by Mail	xxxv
Ordering by Telephone	xxxv
Ordering by Fax	xxxvi
Ordering Via the World Wide Web	xxxvi
RBOC and BOC Orders	xxxvi
Commercial Customer Orders	xxxvi
Lucent Technologies Orders	xxxvii
Standing Order Customers	xxxvii
■ How to Comment on This Manual	xxxviii
Using the Feedback Form	xxxviii
Without the Feedback Form	xxxviii
■ Electronic Documentation	xxxix
Overview	xxxix
Ordering a CD-ROM	xxxix
Pricing Information	xxxix
Technical Information	xxxix

About This Manual

Background

Purpose

The purpose of this manual is to aid in acceptance and operation of the Digital Access and Cross-Connect System II (DACS II).

This document provides reference information required to support the craft personnel activities involved in the daily operation and maintenance of the DACS II. It also includes an overview that describes the physical and functional attributes of the DACS II.

Intended Audiences

This document is for individuals who are responsible for the acceptance, provisioning, operation, and maintenance of the DACS II, Release 9.0.

New Features in This Release

Overview

The new features associated with DACS II Release 9.0 are:

- Threshold support for the Hybrid DS3 circuits
 - The introduction of the Intelligent Communication Interface (ICI) circuit pack.
 - Integrated Test Set (ITS).
-

Hybrid DS3 Threshold Support

This feature adds threshold support to the performance monitoring feature for Hybrid DS3 circuits. Users can set up four separate threshold values including the default threshold value for each performance monitoring parameter. When a threshold is crossed, a threshold crossing message is issued. However, with this feature, threshold crossings and their associated alarm messages can be suppressed (turned off).

ICI Circuit Pack

The Intelligent Communication Interface (ICI) circuit pack (TM 782 card) provides the port connections for the seven administrative links:

- Four asynchronous links (links 1 through 4, SNIDER protocol)
- Two synchronous links (links 5 and 6, X.25 protocol)
- One TCP/IP link (link 7, telnet protocol).

The ICI circuit pack replaces the Main Controller's H/ECI circuit pack used prior to Release 9.0, and even plugs into the same slot used for the H/ECI circuit pack. The ICI pack will have all of the existing functionality of the H/ECI pack except the functionality available with the additional TCP/IP link connection.

ITS

The Integrated Test Set (ITS) feature provides the DACS II with a built-in Bit Error Ratio Tester (BERT) capability. The ITS was developed to replace expensive test sets for facility troubleshooting, providing the capability of generating, reading, and evaluating test signals from the DACS II.

Non-CEF Information

Release 9.0 does not support Non-CEF frames. However, the Non-CEF information is left in the documentation for reference purposes.

How to Use This Manual

Before Using the Procedures

Before you attempt to use the procedures in this manual, you should become familiar with the contents of each volume.

Accessing the Information

There are three ways to access the information in this document:

- Using the index in the back of each volume
 - Using the tabs and the table of contents in the front of each tab
 - Using the overall table of contents in the front of each volume.
-

Prerequisites

Before you use the procedures in this document, you should have completed the DACS II Operation and Maintenance course (TR3521 or TR3621).

If you were not able to take the training course, you should carefully study the information in Chapter 1 and the Command Denials located in Appendix A of Volumes I, II, and III.

Procedure Sequence

The procedures are arranged to be performed in the sequence in which they are presented. If you perform a procedure out of sequence, you may have trouble performing that procedure and the subsequent procedures.

Always start the trouble-clearing process by performing the procedures in the Trouble Identification section in Chapter 1 of Volume III. The sections in this volume are functional groupings of troubles. It is not always obvious from the message or alarm which of the trouble sections provides the procedure or procedures for clearing the trouble. If you begin with Chapter 1, you will be directed from procedure to procedure until the trouble is cleared.

Manual Contents

Volume Breakdown

This manual is divided into the following three volumes:

- Volume I - Operation and Maintenance Reference Material
- Volume II - Operation and Maintenance General Tasks
- Volume III - Trouble Clearing General Tasks.

The reference information in Volume I supports the General Tasks (procedures) documented in Volumes II and III.

General Tasks and Supporting Elements

The chapters in Volume II and III are divided into General Tasks (GT) and Supporting Elements (SE). GTs are the major tasks performed by users, and SEs are sub-tasks within a GT.

There is a correspondence between the chapter numbers in Volume I and the GTs in Volume II. For example, the general tasks related to reference Chapter 6: Cross-connections and Disconnections begin at GT 6.1. In Volume III, the GTs for a particular type of trouble are grouped together in one chapter.

SEs are associated with a GT and are usually located immediately after the GT. Some SEs are reusable in other GTs in that particular chapter and in the GTs of other chapters. When a GT step requires an SE, the SE will typically be found at the end of the GT. GTs and SEs follow a similar numbering scheme. For example, *SE 5.1.1* indicates the first SE in GT 5.1.

Manual Contents (Continued)

Contents of Volume I

The contents of *Volume I - Operation and Maintenance Reference Material* are listed below:

■ **Chapter 1 - Introduction**

This chapter provides an overview of the DACS II. It describes the DACS II hardware arrangements, functional operation, and command and message set. This chapter contains reference information required to operate and maintain the DACS II.

■ **Chapter 2 - Acceptance**

This chapter contains reference information which describes the acceptance of a DACS II frame after it has been installed.

■ **Chapter 3 - Provisioning**

This chapter contains reference information which describes circuit pack installation and the growing, restoring, removing, and degrowing of the common equipment (NPC, frame, synchronizer, and cross-connect network) and Units (FTU and DSPU).

■ **Chapter 4 - Test Access**

This chapter contains reference information which describes establishing test ports, making the DS0 and Clear-DS1 test connections, and establishing and testing subrate channels.

■ **Chapter 5 - Cross-Connections and Disconnections**

This chapter contains the reference information which describes making DS0, Clear-E1, Channelized-E1, Nx64 and Subrate cross-connections and to disconnect the cross-connections.

■ **Chapter 6 - Administration**

This chapter contains the reference information which describes logging on/off the DACS II; creating, changing, and deleting alternate maps; and creating, activating, and deleting macros.

(Continued on next page)

Manual Contents (Continued)

Contents of Volume I, Continued

■ Chapter 7 - Maintenance

This chapter contains the reference information which describes routine PMEM and SMEM memory card maintenance, PMEM and SMEM card removal, and plug-in removal and replacement.

■ Chapter 8 - Performance Monitoring

This chapter contains the reference information which describes scheduling and retrieving reports that monitor various DS1 performance parameters.

■ Chapter 9 - C-Bit Processing

This chapter contains the reference information which describes connecting/disconnecting facility channels to C-bit processor and selecting C-bit processing functions.

■ Appendix A - Command Denials

This chapter lists the command denial codes and their meanings. This information is useful in determining problems with the DACS II. You should be familiar with the contents of this chapter before you attempt any procedures.

Manual Contents (Continued)

Contents of Volume II

The contents of *Volume II - Operation and Maintenance General Tasks* are listed below:

- **Chapter 1 - (Left Intentionally Blank)**

- **Chapter 2 - Acceptance General Tasks**

This chapter contains the procedures to perform the acceptance of a DACS II frame after it has been installed.

- **Chapter 3 - Provisioning General Tasks**

This chapter contains the procedures to install circuit packs and to grow, restore, remove, and degrow the NPCs (FTU with or without *SLC*[®] Carrier, DSPU, Subrate, DMB, or DSP Applications).

Also included are the procedures to make the DSX connections and perform tests to establish DS1 facilities with or without *SLC*[®] Carrier and Subrate channels.

- **Chapter 4 - Test Access General Tasks**

This chapter contains the procedures to establish test ports, make the DS0 and Clear-DS1 test connections, and establish and testing subrate channels.

- **Chapter 5 - Cross-connections and Disconnections General Tasks**

This chapter contains the procedures to make DS0, Clear-E1, Channelized-E1, Nx64 and Subrate cross-connections and to disconnect the cross-connections.

- **Chapter 6 - Administration General Tasks**

This chapter contains the procedures to make DS0, Clear-E1, Channelized-E1, Nx64 and Subrate cross-connections and to disconnect the cross-connections.

(Continued on next page)

Manual Contents (Continued)

Contents of Volume II, Continued

- **Chapter 7 - Maintenance General Tasks**

This chapter contains the procedures to perform routine PMEM and SMEM memory card maintenance, PMEM and SMEM card removal, and plug-in removal and replacement.

- **Chapter 8 - Performance Monitoring General Tasks**

This chapter contains the procedures to schedule and retrieve reports that monitor various DS1 performance parameters.

- **Chapter 9 - C-Bit Processing General Tasks**

This chapter contains the procedures to connect/disconnect facility channels to C-bit processor and selecting C-bit processing functions.

- **Appendix A - Command Denials**

This chapter lists the command denial codes and their meanings. This information is useful in determining problems with the DACS II. You should be familiar with the contents of this chapter before you attempt any procedures.

Manual Contents (Continued)

Contents of Volume III

The contents of *Volume III - Trouble Clearing General Tasks* are listed below:

- **Chapter 1 - Trouble Identification**

This chapter contains the procedures for interpreting the alarms and messages that identify troubles.

All trouble clearing starts here. You are directed from here to a procedure in one of the following chapters. That procedure may direct you to a procedure in a chapter that follows it. The process continues until you isolate the fault.

- **Chapter 2 - Power Failures**

This chapter contains the procedures for isolating power troubles.

- **Chapter 3 - Facility Alarms**

This chapter contains the procedures for isolating troubles in the facilities that connect to DACS II.

- **Chapter 4 - Hardware Failures**

This chapter contains procedures for locating internal DACS II troubles. The messages associated with these troubles usually identify one or more possible faulty plug-ins.

- **Chapter 5 - Manual Diagnostic Failures**

This chapter contains the procedures for clearing troubles identified when you run manual diagnostics.

- **Chapter 6 - Controller and Link Troubles**

This chapter contains procedures for isolating troubles in the controller or the link connecting the controller to a terminal or operating system. These troubles are usually associated with a reset.

- **Chapter 7 - Data Base Troubles**

This chapter contains procedures for isolating a conditional reset or back-up memory trouble.

- **Chapter 8 - Frame Audits**

This chapter contains procedures for isolating faults detected when frame audits are run.

(Continued on next page)

Manual Contents (Continued)

Contents of Volume III, Continued

- **Chapter 9 - Software Error**

This chapter contains procedures for troubles indicated by a software trouble message.

- **Chapter 10 - TS0 and C-Bit Messages**

This chapter contains procedures which instruct you how to respond to messages that indicate changes in the status of TS0 or C-bit register or an overflow in the TS0 or C-bit buffers.

- **Appendix A - Command Denials**

This chapter lists the command denial codes and their meanings. This information is useful in determining problems with the DACS II.

Manual Conventions

Special Font Used This manual uses special fonts to differentiate computer input/output. The **constant width bold font** indicates message formats, keywords, letter representations of parameters, parameter values, and messages as they would appear on a DACS II terminal screen.

Notes Notes inform users of special considerations, situations, or items to remember. An example of a Note is shown below:

 **NOTE:**
Terminated connection for DMB concatenation is not allowed.

Safety Label Cautions indicate the presence of a hazard that will or can cause a frame alarm or property damage if hazard is not avoided. An example of a Caution is shown below:

 **CAUTION:**
The UMC is inserted towards the direction that is terminated, potentially causing a loss of service.

Related Documentation

Related DACS II Documents

The following documents support the DACS II:

- DACS II Installation Manual
 - IPH903 (DACS II CEF)
 - IPH903I (DACS II ESBF).

Audience: Customers planning to install the equipment

Content: Customer installation instructions.

- DACS II Release 7.0 Product Description Manuals:
 - 365-353-085 (24 Channel)
 - 365-353-086 (30 Channel).

Audience: Network planners, engineers, and others that need to know how the DACS II works and fits into the network

Content: Features, applications, and description and other reference information.

- DACS II Release 9.0 Operation and Maintenance Manuals:
 - 365-353-261 (PDS)
 - 365-353-271 (MML)
 - 365-353-281 (PDS 2.048-Mb/s Interface)
 - 365-353-291 (MML 2.048-Mb/s Interface).

Audience: End-user maintenance personnel

Contents: Procedures to operate and maintain the DACS II.

(Continued on next page)

Related Documentation (Continued)

Related DACS II Documents, Continued

- DACS II Release 9.0 Command and Message Manuals:

- 365-353-262 (PDS)
- 365-353-272 (MML)
- 365-353-282 (PDS 2.048-Mb/s Interface)
- 365-353-292 (MML 2.048-Mb/s Interface).

Audience: End-user maintenance personnel

Content: Description of each software input message and its response along with a description of each system output report.

- DACS II Release 9.0 Quick Reference Guides:

- 365-353-263 (PDS)
- 365-353-273 (MML)
- 365-353-283 (PDS 2.048-Mb/s)
- 365-353-293 (MML 2.048-Mb/s).

Audience: End-user maintenance personnel

Content: Abbreviated list of system commands and parameters.

- DACS II Release 8.2.3 Software Release Description:

- Comcode C108460080

Audience: End-user maintenance personnel

Content: Includes upgrade procedures for the new software release, status of problems fixed in previous releases, list of known problems, and operating issues for the specified software release.

(Continued on next page)

Related Documentation (Continued)

Related DACS II Documents, Continued

- X.50/X.57 Subrate Application
Release 1.0.3 for DACS II/Release 1.0.4 for DACS II ISX
MML 2.048 Mbit/s Interface User's Manual

— 365-350-101 (MML).

Audience: End-user maintenance personnel

Content: Complete manual describing how to install and operate the X.50/X.57 Subrate application on the DACS II or DACS II ISX. Commands and messages describing how to perform subrate cross-connects and subrate test access are included.

- DDS Subrate and MJU Application
Release 1.0.4 for DACS II/Release 1.0.5 for DACS II ISX
User's Manual

— 365-350-110 (PDS)

— 365-350-111 (MML).

Audience: End-user maintenance personnel

Content: Complete manual describing how to install and operate the DDS Subrate and MJU application on the DACS II or DACS II ISX. Commands and messages describing how to perform DDS subrate cross-connects, subrate test access, and subrate MJU operations are included.

- Digital Multipoint Bridge (DMB)
DSP Platform Application
Release 1.0.2 for DACS II/Release 1.0.3 for DACS II ISX
User's Manual

— 365-353-144 (PDS)

— 365-353-154 (MML).

Audience: End-user maintenance personnel

Content: Complete manual describing how to install and operate the DMB application on the DACS II or DACS II ISX. Commands and messages describing how to perform DMB cross-connects and DMB test access operations are included.

How to Order Documentation

Overview

To order additional copies of this document, orders can be placed:

- By Mail
 - By Telephone
 - By Fax
 - Via the World Wide Web.
-

Ordering by Mail

To order by mail, send a letter to:

Lucent Technologies
Customer Information Center (CIC)
Attention: Order Entry Section
2855 N. Franklin Road
P. O. Box 19901
Indianapolis, IN 46219

Ordering by Telephone

To order by Telephone (Monday through Friday), call:

- Within the United States of America:
1-888-LUCENT-8 (7:30 a.m. to 6:30 p.m. EST)
(1-888-582-3688)
 - North America (Outside of the U.S.)
317-322-6619
 - Australia, Europe, Middle East, and Africa:
Toll 317-322-6416
 - Asia-Pacific countries, China, Caribbean countries, and Latin America:
Toll 317-322-6411
-

How to Order Documentation (Continued)

Ordering by Fax

To order by Fax, fax a letter to:

- Within the United States of America:
1-317-322-6484
 - North America (Outside of the U.S.):
1-317-322-6359
 - All Other International countries:
Toll 317-322-6699.
-

Ordering Via the World Wide Web

The Lucent CIC maintains a website that can be used for ordering Lucent customer information products. The website address for the Lucent CIC homepage is:

<http://www.lucentdocs.com/>

Once you access the Lucent CIC homepage, clicking on the [Documents](#) selection will take you to the area through which numerous types of customer information products can be located, ordered, and/or downloaded.

RBOC and BOC Orders

Regional Bell Operating Companies (RBOC) and Bell Operating Companies (BOC) must process orders through their company documentation coordinator.

Commercial Customer Orders

For commercial customers, a check, money order, purchase order number, or charge card number (*VISA*^{*} bank card, *American Express*[†] credit card services, or *Master Card*[‡] bank card) is required with all orders.

Checks must be made payable to Lucent Technologies.

* Registered trademark of VISA International Service Association.

† Registered trademark of American Express Company.

‡ Registered trademark of Mastercard International Incorporated.

How to Order Documentation (Continued)

Lucent Technologies Orders

Lucent Technologies entities should use Form IND 1-80.80 FA, available through the Customer Information Center.

Standing Order Customers

One-time orders include a binder (if applicable) and the document contents for the current issue in effect at the time of order. After placing a one-time order, you can request a standing order for any document revisions *of that software release*.

Documents for new software releases do *not* go to standing-order customers. You will only get those documents if you order the new software release.

How to Comment on This Manual

Using the Feedback Form

A feedback form is located at the beginning of this publication, immediately after the title page. Please fill out the feedback form and return it (postage free) to the address on the back.

Without the Feedback Form

If the feedback form is missing, send comment on this publication to:

Lucent Technologies
DACS II Documentation Coordinator
Attn: Tabatha Wright
Room 1B-320
101 Crawfords Corner Road
Holmdel, NJ 07733-3030 USA

Electronic Documentation

Overview

Documentation for DACS II and DACS II ISX is now available in electronic form, on CD-ROM (compact disk, read-only memory). CD-ROM has many advantages over traditional paper documentation, including cost savings, search and retrieve capability, and the assurance of the most current documentation.

CD-ROM is available by annual subscription (on standing order).

Ordering a CD-ROM

To order a CD-ROM, call your Technical Information Resource Manager, your Lucent Technologies Account Executive, or the Lucent Technologies Customer Information Center (1-888-582-3688).

Pricing Information

For pricing information, contact your Lucent Technologies Network Systems Account Executive or the Lucent Technologies Customer Information Center (1-888-582-3688).

Technical Information

For technical information, call Lucent Technologies Documentation Support (1-800-334-0404).

Introduction

1

Contents

■ Background	1-1
Introduction	1-1
Objectives	1-1
DACS II Components	1-2
Cross-connect Capacity	1-2
DS0 Channels	1-2
Time Slot Interchange	1-3
2.048 Mb/s Interface Feature	1-3
DS0 Test Access	1-4
Facility Performance	1-4

(Continued on next page)

Contents

Physical Description	1-5
Overview	1-5
■ Frame Configurations	1-5
Multi-Frame Configurations	1-5
Multi-Frame Units	1-6
Unit Components	1-7
Single-Bay Frame Configuration	1-15
Capacity Expansion Frame Configuration	1-16
Description	1-18
Cross-Connect Network	1-19
Synchronizer and Main Controller	1-20
Status Panel	1-21
Cross-Connect Network Power Unit	1-21
Fuse and Alarm Panel	1-22
Description	1-23
Extended Cross-Connect Network	1-24
Extended Frame Controller	1-25
Synchronizer	1-26
Main Controller	1-27
Status Panel	1-28
Fuse and Alarm Panel	1-29
■ Interface Bays	1-30
Overview	1-30
Power and Control Unit	1-30
FTU and IFTU	1-31
FTU/IFTU Figures	1-32
Digital Signal Processing Unit	1-35

(Continued on next page)

Contents

■ Single Bay	1-37
Description	1-37
Cross-connect Network	1-39
Unit Numbering	1-39
Fuse and Alarm Panel	1-40
Functional Description	1-41
Overview	1-41
■ Basic Functionality	1-41
Cross-connection Function	1-41
Test Access Function	1-41
■ Common Equipment Circuit Blocks	1-42
Description	1-42
Redundancy	1-42
Protection	1-42
Expanded Circuit Blocks	1-42
System Architecture	1-43
Communication/Connections Between Blocks	1-44
Main and Secondary Controllers	1-44
Nonvolatile Memories	1-46
Internal Synchronization	1-47
■ 2.048 Mb/s Facility Terminating Units	1-51
Description	1-51
Communication and Control	1-52
Framing and Signaling Formats	1-52
NPCs on Dual Primary Circuit Cards (DPCs)	1-53
■ Cross-Connect Networks	1-54
Description	1-54
TSI/ETSI Operations	1-54
Cross-connection Types	1-54
Redundancy and Protection	1-55
CCN Types	1-55

(Continued on next page)

Contents

■ Digital Signal Processing Units	1-58
Description	1-58
DMB Circuits	1-58
Subrate Circuits	1-59
C-Bit Circuits	1-59
■ Frame Alarm Indications	1-60
Alarm Indication Types	1-60
Circuit Pack Failures	1-60
Carrier Failure Alarms	1-60
Alarm Severity Feature	1-63
Intervention Level Feature	1-64
■ Status Panel Functions	1-65
Description	1-65
Alarm Classifications	1-65
Switches	1-65
■ Powering	1-66
Power Distribution	1-66
Protection Mechanisms	1-66
Power LEDs	1-66
Redundancy and Protection	1-67
ECCN Power	1-67
Feature Functions	1-68
Overview	1-68
■ Gateway Feature	1-68
Description	1-68
Gateway IFTU2	1-68
A-Law and μ -Law Conversions	1-69
No A-Law and μ -Law Conversions	1-69

(Continued on next page)

Contents

■ DS3 Hybrid Termination Feature	1-70
Description	1-70
Capacity	1-70
Circuit Packs	1-71
Protection Switching	1-76
■ DSP Platform Feature	1-79
Description	1-79
Connections	1-79
DSP Processing	1-80
DSP Applications	1-80
Time Slots	1-81
Supported Cross-connection Types	1-81
DSP Application Card Error Recovery	1-82
Test Access	1-83
■ Broadcast TSO Feature	1-84
Broadcast TS0 Cross-connection	1-84
Broadcast TS0 Test Access	1-84
Understanding Commands and Messages	1-85
Overview	1-85
■ Commands and Messages	1-85
Overview	1-85
DACS II Administrative Links	1-86
Protocols	1-87
Formatting Conventions	1-87
Uppercase and Lowercase Characters	1-87
Delimiters	1-88
Using the Commands	1-88
Menu/Prompt Mode	1-89
Issuing Commands to a DSP Platform Application	1-90

(Continued on next page)

Contents

Aborting an Input Command or Output Message	1-91
Input Command Format	1-92
Keywords	1-93
Verbs	1-94
Addressing Levels	1-101
Input Command Control Characters	1-102
Input Command Acknowledgement	1-103
Output Messages	1-104
MML Message Logging	1-113
■ NPC Addressing	1-114
Overview	1-114
Extended Numbering	1-114
Hierarchical Numbering	1-114
■ On-Line Help Feature	1-115
Description	1-115
Using	1-116
Constructing an Entire Command Using Help	1-117
Obtaining Help at a Particular Point on a Command Line	1-120
Equipment Precautions and Backup Strategies	1-123
Overview	1-123
■ Equipment Precautions	1-123
Electrical Discharges	1-123
Removing and Installing Circuit Packs	1-124
■ Recommended Memory Card Backup Strategy	1-126
Memory Card Backups	1-126
Rotating Memory Cards	1-126
Off-Site Backup Storage	1-126
Memory Card Tolerations	1-126

Introduction

1

Background

Introduction

The DACS II is software-based equipment. The name Digital Access and Cross-connect System II (DACS II) describes the main function of DACS II. It accesses DS0 information channels in the digital signals connected to it. These digital signals are 2.048 Mb/s signals.

This access allows cross-connecting of DS0 channels without decoding them to analog and allows channels to be brought outside the DACS II for testing. These cross-connect and test-access operations are initiated by commands entered on an administrative link.

Objectives

This chapter provides information to perform the following:

1. Identify the different DACS II frame types,
 2. Identify the units/subassemblies of each frame
 3. Describe the functions of each unit/subassembly and its associated packs.
 4. Describe the main features of the DACS II
 5. Identify the parts of a DACS II command.
 6. Send a command to the DACS II.
-

Background (Continued)

DACS II Components

The DACS II has both main and secondary controllers, centralized and distributed memory, and single-stage, nonblocking timeslot interchange circuitry. Small and large frame complexes and modular equipment design allow the DACS II to be economically deployed in both large and small installations.

Cross-connect Capacity

When three bays are equipped to terminate 512 DS1 facilities (original interface bays), the DACS II can cross-connect all 15,360 DS0 channels in various cross-connect circuit configurations. If the capacity expansion frame (CEF) is equipped for 2,048 2.048 Mb/s facilities, the DACS II can cross-connect all 61,440 DS0 channels.

DS0 Channels

The DACS II is the current generation of equipment for access and cross-connection of DS0 (digital signal level 0) channels. DS0 channels are defined as 64-kb/s bandwidth channels produced by pulse code modulation (PCM).

Background (Continued)

Time Slot Interchange

DACS II uses a process called time slot interchange to electronically cross-connect single DS0 (64-kb/s) channels or any continuous range of up to 32 channels (2.048 Mb/s facility, NSA format) within the DACS II cross-connect network.

2.048 Mb/s Interface Feature

The 2.048 Mb/s interface feature offers additional network processing circuit (NPC) growth options and additional commands to control TS0 monitoring and supports the use of the C-bit processor (CPR) pack. The TS0 monitoring involves growing the NPC with the spare bits in TS0 designed to represent remote alarm information in alarm messages. The alarm assignments are compatible with those for connecting TRANSMIC 1G and 2G equipment used in some countries. Commands also allow monitoring other spare TS0 bits which can be used to carry miscellaneous alarm information and specify the normal state of the bits so that a change will produce an information message.

Background (Continued)

DS0 Test Access

Up to four facility interfaces per frame can be reserved for DS0 test access. DACS II allows test access of any channel within a facility without interfering with another channel. You can test with standard test equipment locally at the distributing frame or test from a remote location.

Facility Performance

DACS II also monitors the performance of connecting 2.048 Mb/s facilities, checking for loss of signal and transmission errors. Additional facility parameters are monitored using different error-checking schemes.

Facility performance is reported in a daily summary message and on demand by entering a command. If the errors or counted activities exceed prescribed thresholds, the DACS II initiates office and remote alarms and/or alarm messages over the administrative links.

Physical Description

Overview

The following section provides the physical description of the DACS II. This section is intended to provide the reader with a description of the various frame, bay, unit, and circuit pack configurations offered by DACS II.

Frame Configurations

Multi-Frame Configurations

Figure 1-1 shows the DACS II frame bay arrangement for a multi-bay system.

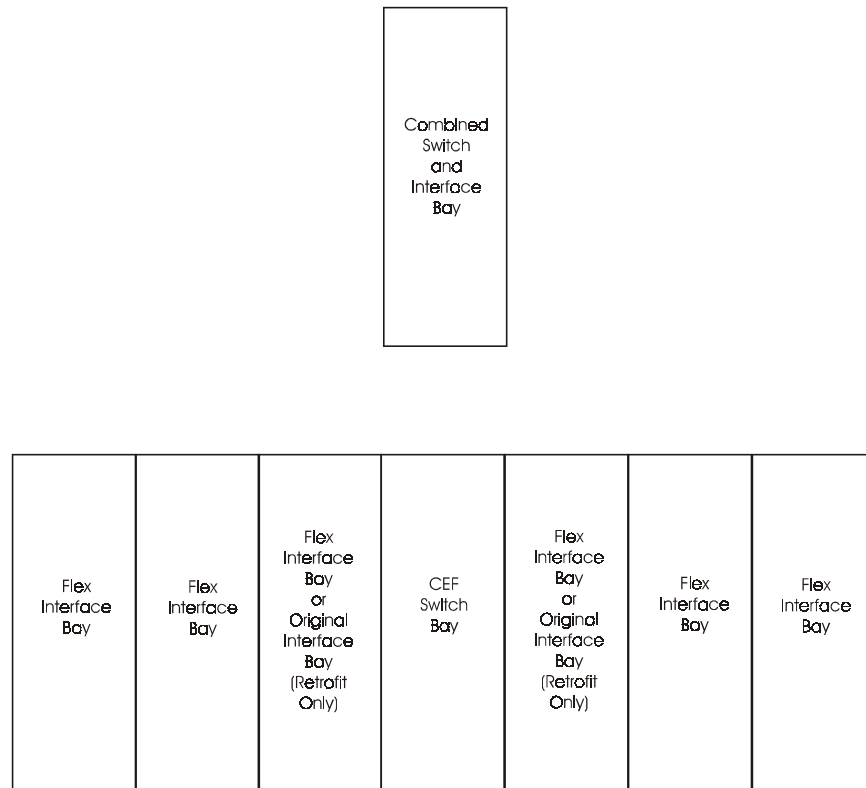


Figure 1-1. DACS II Frame Arrangements

With the exception of the single-bay frame, each frame is made up of one switch bay and one or more interface bays. The switch bay contains the cross-connect network(s), synchronizer, main controller and backup memories. There are two types of interface bay. They are the original interface bay and the flexible interface bay. The original interface bay refers to interface bays that were provided before the flexible interface bay was available.

Frame Configurations (Continued)

Multi-Frame Units Table 1-1 lists the units that make up the frames.

Table 1-1. DACS II Frame/Bay/Unit Arrangements

FRAME TYPES

Single-Bay Frame
Capacity Expansion Frame (CEF)

BAY TYPES

Switch Bays	Interface Bays	Single
Original (one in each double - and triple-bay frame)	Original (one in double-bay frames, two in triple-bay frames)	Combination Switch and Interface Bay
CEF (one in each CEF frame)	Flexible (up to six in CEF frame)	

SWITCH BAY UNITS

ORIGINAL SWITCH BAY	CEF SWITCH BAY
CCN (0 and 1)	ECCN (0 and 1)
Status Panel	Status Panel
Synchronizer	Synchronizer
MC (main controller)	MC (main controller)
CCN Power Unit (0 and 1)	
Fuse and Alarm	Fuse and Alarm

INTERFACE BAY UNITS

ORIGINAL SWITCH BAY	FLEXIBLE INTERFACE BAY (FLEX BAY)
FTU (Maximum 2 per bay)	IFTU (Maximum 3 per bay)
Power and Control	
DSPU (Maximum 1 per bay)	DSPU (Maximum 3 per bay)
DS3U (Maximum 1 per bay)	DS3U (Maximum 3 per bay)
HDS3U (Maximum 1 per bay)	HDS3U (Maximum 3 per bay)

SINGLE-BAY UNITS

Fuse and Alarm	Status Panel
FTU	MC and Sync
	FTU Power and Control
CCN (0 and 1)	DSPU/DS3U/HDS3U

Frame Configurations (Continued)

Unit Components Table 1-2 lists the circuit packs in each unit for single- and multi-frame bays.

Table 1-2. DACS II Circuit Pack Equipment

FUNCTION NAME				
FULL	ABB	CKT PACK	USED IN/WITH	NUMBER REQUIRED PER FRAME OR UNIT (U)
ORIGINAL SWITCH BAY				
<i>CCN (Cross-Connect Network)</i>				2 sides (0 and 1)
Time Slot Interchange	TSI	TM660	CCN	Up to 36 per side
Cross-Connect Buffer	CCB	UM26B	CCN	Up to 6 per side
Cross-Connect Network Interface	CCNI	UM30	CCN	1 per side
<i>Synchronizer</i>				1
(Time Base Slots)				
TB can be installed in TLI 3				
Time Bases-Stratum 3	TBS3	TG60	SYNC	2 or 3
Time Base CEPT Local	TBCL	TG61		of 1 code
Time Base CEPT Toll	TBCT	TG62		
(Timing Link Interface)	TLI		SYNC	Up to 8
Timing Extractor Function				Four 0 and 1 Pairs
Bipolar DS1	TXB1	TG64		Choose 2 of 1
Composite Clock 64 kb/s	TXCC	TG66		or more codes.
Unipolar Clock	TXUC	TG67B		Selection based
CEPT 75-ohm Coax	TP75			on the sync

Continued on Next Page

Table 1-2. DACS II Circuit Pack Equipment (Continued)

FUNCTION NAME				
FULL	ABB	CKT PACK	USED IN/WITH	NUMBER REQUIRED PER FRAME OR UNIT (U)
ORIGINAL SWITCH BAY (Cont)				
<i>Synchronizer, Cont</i>				
Timing Distributor Function				
Comp. Clock 64 kb/s out	TDCC	TG70		Choose 2 of 1 Code as required
Sine Wave 2.048 MHz out	TDS2	TG71B		
Digital Phase-Locked Loop	DPLL	TM590	SYNC	2 (0 and 1)
Synchronizer Power Unit	SPU	TG58 (5V)	SYNC	2 (0 and 1)
<i>Main Controller</i>				1
Main Controller Power	MCP	SM565 ($\pm 12V$)	MC	1 (U)
Central Processing Unit 2	CPU2	TM778*	MC	1
Intelligent Communication Interface	ICI	TM 782*	MC	1
Maintenance Circuit	MTC	UM24/UM24B	MC	1
Bus Extender	BX(2)	UM27/UM72*	MC	1
Power Unit	PU	411AA, (5V)	MC	1
<i>CCN Power Unit</i>				2 (0 and 1)
Power Unit	PU	485AB PWR UNIT (5V)	CCN Power	8
Fuse Board	DSR			
	FUSE			
	BD	ED-2C863-30 G3,ACCN	CCN Power	4

Continued on Next Page

Table 1-2. DACS II Circuit Pack Equipment (Continued)

FUNCTION NAME				
FULL	ABB	CKT PACK	USED IN/WITH	NUMBER REQUIRED PER FRAME OR UNIT (U)
CEF SWITCH BAY				
<i>ECCN</i> (Cross-Connect Network)				2 (0 and 1)
Bus Terminator	BT	BBR1	ECCN	4 Two 0 and 1 Pairs
Clock Control Interface	CCI	BBS1	ECCN	2 One 0 and 1 Pairs
Expanded TSI	ETSI	BBS2	ECCN	Up to 32 Sixteen 0 and 1 Pairs
<i>Synchronizer</i>				
The synchronizer in the CEF switch bay uses the same circuit packs as the synchronizer in the original switch bay shown previously.				
<i>Main Controller</i>				
Main Controller Power	MCP	SM565 ($\pm 12V$)	EMC	1
Central Processing Unit 2*	CPU2	TM778	EMC	1
Intelligent Communication Interface	ICI	TM 782	EMC	1
Maintenance Circuit*	EMTC	UM75	EMC	1
Bus Extender*	EBX	UM71	EMC	1
		(+12V), 411AA (+5V)	MC	1
Fuse Board				

Continued on Next Page

Table 1-2. DACS II Circuit Pack Equipment (Continued)

FUNCTION NAME				
FULL	ABB	CKT PACK	USED IN/WITH	NUMBER REQUIRED PER FRAME OR UNIT (U)
CEF SWITCH BAY (Cont)				
<i>Status Panel</i>				
Status Circuit Pack	STAT US	ED-9C017-30	EMC	1 (F)
INTERFACE BAYS				
<i>Power and Control Unit</i>				
Central Processing Unit	CPU	TM657/ TM657B	FTU	1
Unit Bus Extender	UBX	UM28	FTU	1
Power Unit	PU	411AA (5V)	FTU	3 per FTU
Fuse Board	DSR FUSE BD	ED-2C863-30 G1,A	FTU	2 (77-type)
Fuse Board	DSR FUSE BD	ED-2C863-30 G2,A	FTU	1

*New circuit pack CEF switch bay main controller.

Continued on Next Page

Table 1-2. DACS II Circuit Pack Equipment (Continued)

FUNCTION NAME				
FULL	ABB	CKT PACK	USED IN/WITH	NUMBER REQUIRED PER FRAME OR UNIT (U)
CEF SWITCH BAY (Cont)				
FTU				1 or 2 per bay
NPC				2 in each of the following circuit packs
Dual Primary Circuit (120-ohm termination)	DPC	TG182	FTU	Up to 64
Dual Primary Circuit (75-ohm termination)	DPC	TG185	FTU	Up to 64
Dual Primary Circuit (Minor BER)	DPC	TG187	FTU	Up to 64
Enhanced Dual Primary Circuit	EDPC	TG192	IFTU2	Up to 64
Format Converter	FC	TG79	FTU	Up to 8
Facility Terminating Module Interface	FTMI	TG81	FTU	Four 0 and 1 Pairs Up to 4

Continued on Next Page

Table 1-2. DACS II Circuit Pack Equipment (Continued)

FUNCTION NAME				
FULL	ABB	CKT PACK	USED IN/WITH	NUMBER REQUIRED PER FRAME OR UNIT (U)
CEF SWITCH BAY (Cont)				
<i>IFTU</i>				Up to 3 per bay
IFTU uses the same circuit packs as the FTU (shown above) plus the following circuit packs.				
Central Processing Unit	CPU	TM657B	IFTU	1
Unit Bus Extender	UBX	UM28	IFTU	1
Fuse Board	DSR FUSE BD	ED-9C011-30	IFTU	16 (80-type)
Fuse Board	DSR FUSE BD	ED-9C012-30	IFTU	1 (80-type)
Power Unit	PU	411AA	FTU	3
<i>IFTU</i>				Up to 3 per bay
IFTU2 uses the same circuit packs as the FTU (shown above) plus the following circuit packs.				
Central Processing Unit	CPU	TM657B	IFTU	1
Unit Bus Extender	UBX	UM28	IFTU	1

Continued on Next Page

Table 1-2. DACS II Circuit Pack Equipment (Continued)

FUNCTION NAME				
FULL	ABB	CKT PACK	USED IN/WITH	NUMBER REQUIRED PER FRAME OR UNIT (U)
CEF SWITCH BAY (Cont)				
<i>IFTU, Cont</i>				
Fuse Board	DSR FUSE BD	ED-9C011-30	IFTU	16 (80-type)
Fuse Board	DSR FUSE BD	ED-9C012-30	IFTU	1 (80-type)
Power Unit	PU	484AA	FTU	3
<i>DSPU</i>				
Digital Multipoint Bridge	DMB	TM665	DSPU	Up to 3 per bay
Central Processing Unit	CPU	TM657 or TM657B	DSPU	Up to 8 pairs 0 and 1
DSP Controller Power	DCP	SM566	DSPU	1
DSP Interface	DSPI	UM29	DSPU	1
Power Unit	PU	411AA	DSPU	2
Fuse Board	DSR FUSE BD	ED-2C863-30 G3, ACCN	DSPU	1

Continued on Next Page


Table 1-2. DACS II Circuit Pack Equipment (Continued)

FUNCTION NAME				
FULL	ABB	CKT PACK	USED IN/WITH	NUMBER REQUIRED PER FRAME OR UNIT (U)
CEF SWITCH BAY (Cont)				
<i>HDS3U</i>				Up to 3 per bay
HDS3 Multiplexer	MXR	KCR8	HDS3U	Up to 7
HDS3 Facility Line Interface	FLI	KCR4	HDS3U	2
Formatter	FMT	KER5	HDS3U	2
Unit Controller	UC	KER6-2	HDS3U	1
Power Unit	PU	563A PWR UNIT	HDS3U	3
Fuse Board	DSR FUSE BD	ED-2C980-30	HDS3U	1
Single Bay Frame				
CCN2 [Cross-Connect Network]	Use same circuit packs as original			
Synchronizer Master Controller	switch bay units			
FTU	Use same circuit packs as			
FTU Power and Control	original Interface			
(if core) DS3U	Bay units			
(if cept) DSPU	Bay units			

Frame Configurations (Continued)

Single-Bay Frame Configuration

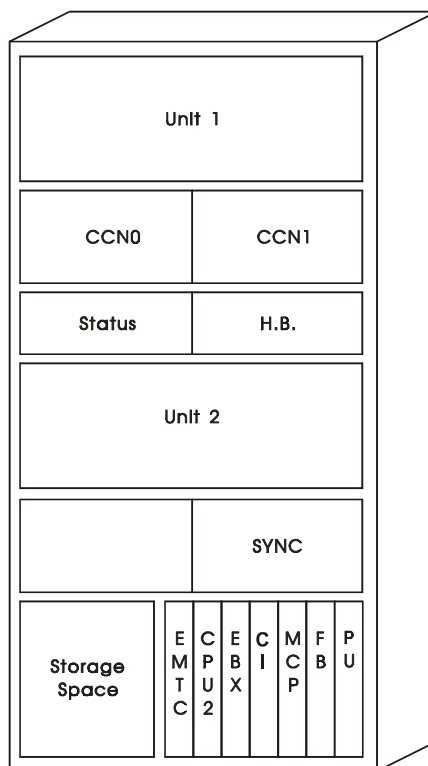The single-bay frame, Figure 1-2, provides both switch and interface functions in a single frame. The single-bay frame contains many of the same circuit packs that are used in multibay frames. Differences in the capacity, the cross-connect network (CCN), and location of circuit packs are accounted for in the software by the information contained in the data base configuration file.



Notes:

- CCN** = Cross-Connect Network
- EMTC** = Expanded Maintenance Circuit
- CPU2** = Central Processing Unit 2
- EBX** = Enhanced Bus Extender
- CI** = Communication Interface
- MCP** = Main Controller Processor
- FB** = Fuse Board
- PU** = Power Unit


Figure 1-2. Single-Bay Frame Arrangement

Frame Configurations (Continued)

Capacity Expansion Frame Configuration

The capacity expansion frame (CEF), Figure 1-3, consists of the CEF switch bay and up to six interface bays. The bays are always numbered as shown in Figure 1-3.

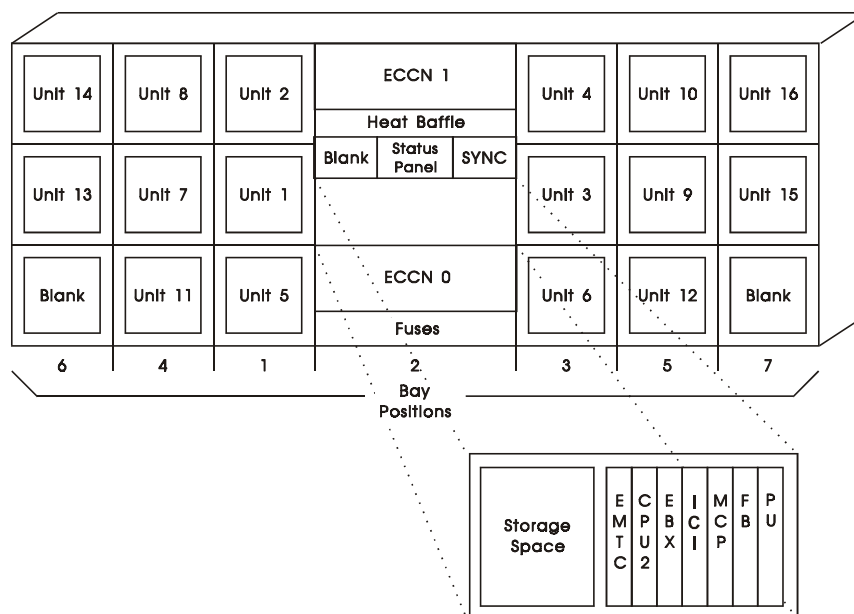The minimum starting configuration is the switch bay (bay 2) and one interface bay in the bay 1 position. It is not necessary to add the bays in numerical sequence. Bay 4 can be added before bay 3. There will never be more than 2 units (IFTU, DSPU, or HDS3U) in bays 6 and 7. Only flexible interface bays are used in new installations. In retrofit configurations, bays 1 and 3 could be original interface bays.



Notes:

- ECCN** = Enhanced Cross-Connect Network
- EMTC** = Expanded Maintenance Circuit
- CPU2** = Central Processing Unit 2
- EBX** = Enhanced Bus Extender
- ICI** = Intelligent Communication Interface
- MCP** = Main Controller Processor
- FB** = Fuse Board
- PU** = Power Unit

(Continued on next page)

Frame Configurations (Continued)

Capacity Expansion Frame Configuration, Continued

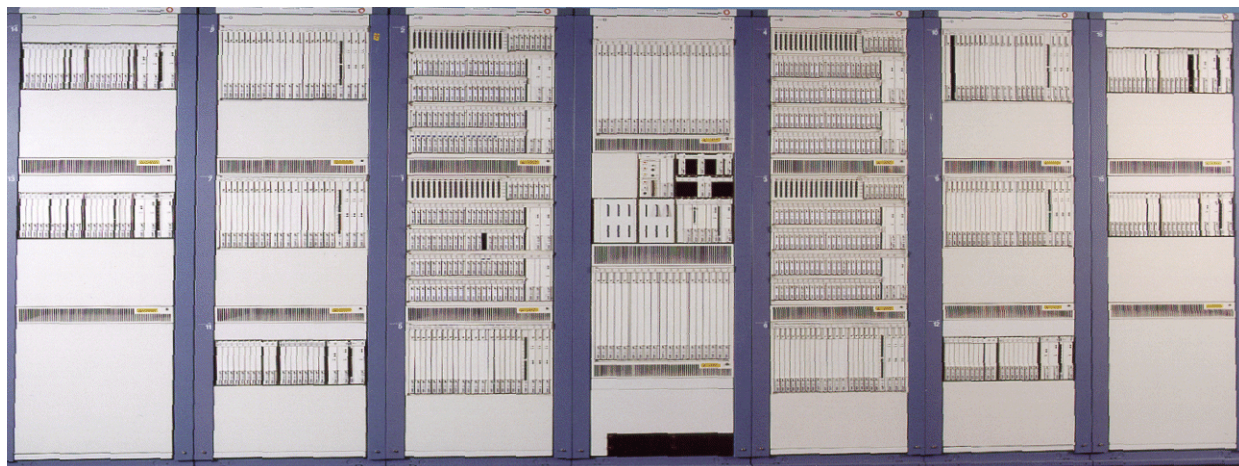


Figure 1-3. Capacity Expansion Frame

Original Switch Bay

Description

The original switch bay contains the following units:

- Cross-Connect Network (CCN) 0 and 1
- Synchronizer and Main Controller
- Status Panel
- Cross-Connect Network Power Unit
- Fuse and Alarm Panel.

The following paragraphs briefly describe each of these units.

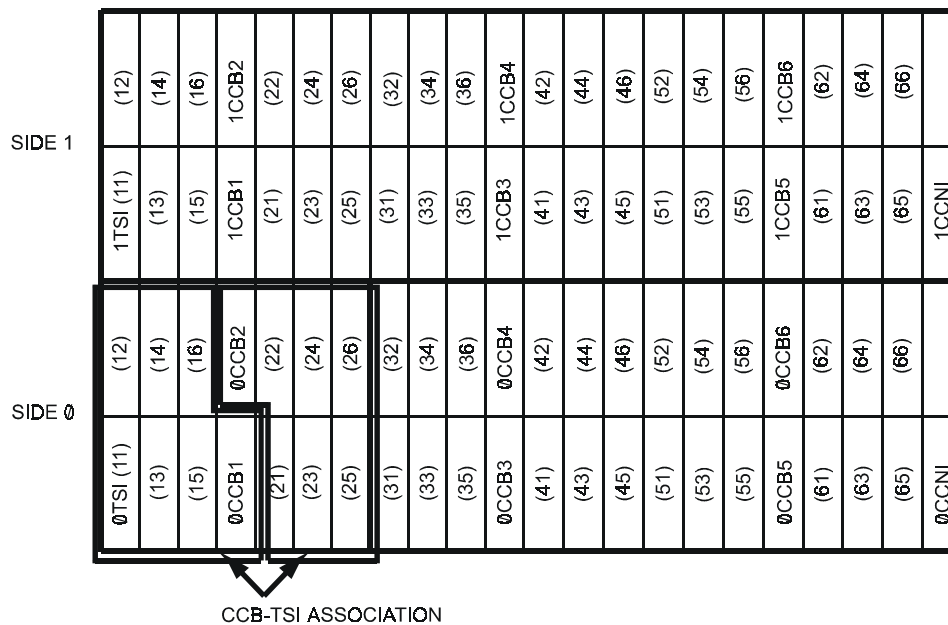
Original Switch Bay (Continued)

Cross-Connect Network

The cross-connect network (CCN), Figure 1-4, is duplicated (sides 0 and 1) to protect against loss of service. Both sides must be equipped exactly alike. The CCN contains the following circuit packs:

- Time Slot Interchange (TSI)
- Cross-Connect buffer (CCB)
- Cross-Connect Network Interface (CCNI).

The actual cross-connect function is performed in the TSI. Timing from the synchronizer and the control and status signals from the main controller are connected to the CCN through the CCNI.



tpa 744614/11

Figure 1-4. Locations of Cross-Connect Network Circuit Pack

Original Switch Bay (Continued)

Synchronizer and Main Controller

The synchronizer and main controller (Sync & MC) shelf, Figure 1-5, is mounted below Unit 2. The sync circuit packs are located in the left of the shelf and the MC circuit packs are located in the right of the shelf as shown in Figure 1-5.

The MC consists of the central processing unit 2 (CPU2), the communications interface (CI), which controls the communications between the internal and external links, the maintenance (MTC) circuit packs which control the interface between the MC and the alarm circuits and units, and the bus extender (BX). Power converters 411AA and MCP provide power for the MC.

The sync contains duplicated circuits and is equipped to configure for the mode (master or slaved) and stratum of operation. Timing source signals coming to the sync for timing extraction connect through TLI (timing link interface) circuit packs. The redundant TLI (0 and 1) circuit packs provide the interface for up to eight sources (4 TLI circuit packs). There are circuit pack slots for one redundant time base (TB). However, you may add two other redundant TB circuit pack pairs by using TLI3 (0 and 1) and TLI4 (0 and 1) slots. You can use the TLI slots because you will not need to interface to an external source if you use the internal TB source. The redundant synchronizer power units (SPU), provide power for the sync circuit packs. Timing from the TLI and TB circuit packs is connected to the CCN through digital phase-locked loop (DPLL), circuit packs.

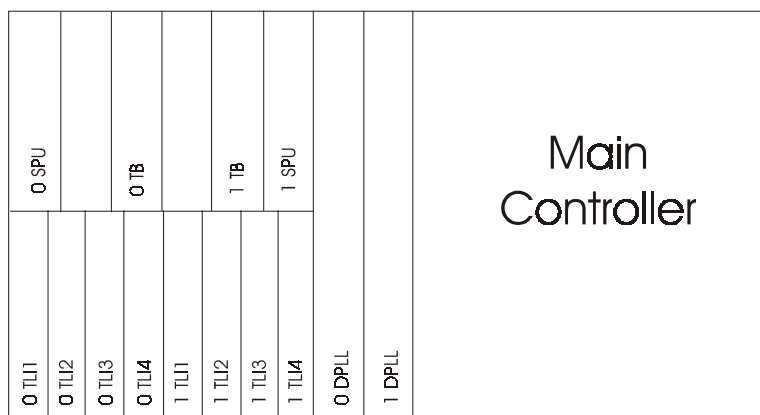


Figure 1-5. Original Switch Bay Synchronizer and MC Circuit Pack Locations

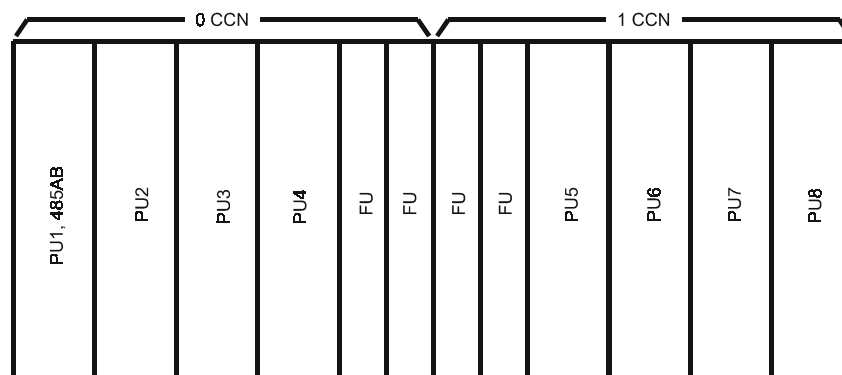
Original Switch Bay (Continued)

Status Panel

The status panel contains alarm indicators (CRITICAL, MAJOR, and MINOR) which light when there is a failure in the DACS II or one of the facilities that connects to the DACS II. The ACO Button and ACO LED, main controller FAILURE indicator, RESET ENABLE switch, and RESET button are also mounted on the alarm panel. A plug on the front of the panel is used to connect a portable TTY to link 1. This plug is in parallel with a plug on the rear of the bay.

Cross-Connect Network Power Unit

The cross-connect network power unit, Figure 1-6, has eight +5 volt power converters. Four provide the power for CCN0 and the other four provide the power for CCN1. Four fuse panel circuit packs provide protection for the power converter outputs to the CCNs.




tpa 814072/11

Figure 1-6. Original Switch Bay Cross-Connect Network Power Unit Circuit Pack Locations

Original Switch Bay (Continued)

Fuse and Alarm Panel

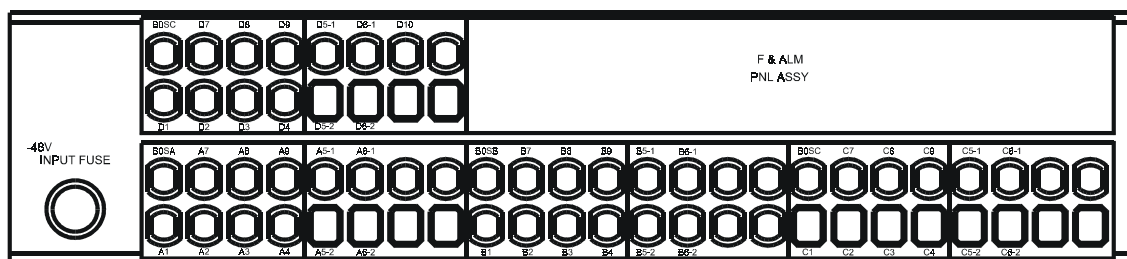The 48-volt power is distributed to the switch bay units through the fuse and alarm panel, as shown in Figure 1-7. The 48-volt power is distributed through indicator fuses.



tpe 814073/11

Figure 1-7. Original Switch Bay Fuse and Alarm Panel

CEF Switch Bay

Description

The CEF switch bay, Figure 1-8, contains the following units:

- Extended Cross-Connect Network (ECCN)
- Extended Frame Controller
- Status Panel
- Synchronizer
- Main Controller (MC)
- Fuse and Alarm Panel.

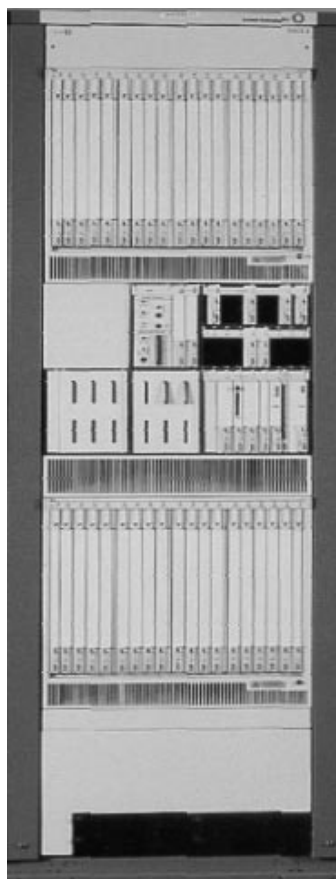


Figure 1-8. CEF Switch Bay

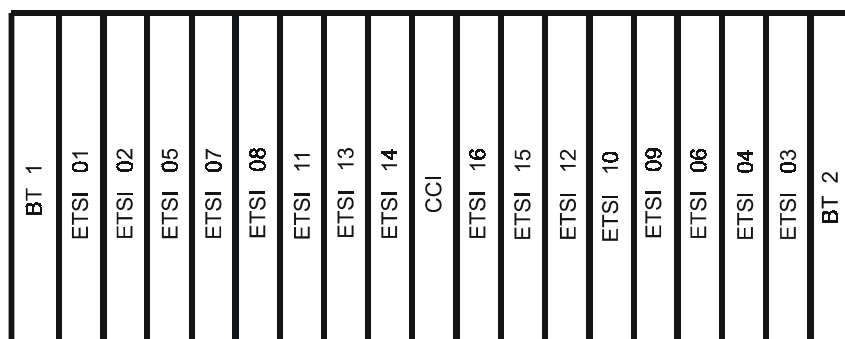
The following paragraphs briefly describe each of the units.

CEF Switch Bay (Continued)

Extended Cross-Connect Network

The Extended Cross-Connect Network (ECCN), Figure 1-9, contains the expanded time slot interface (ETSI), clock control interface (CCI), and bus terminator (BT) circuit packs. The cross-connect function is performed in the ETSI. There are two ETSI (0 and 1) circuit packs provided for each unit (IFTU or DSPU).

The CCI is the interface between the ECCN and synchronizer and main controller.



tpa 789631/11

Figure 1-9. Location of Circuit Packs on ECCN Shelf

CEF Switch Bay (Continued)

Extended Frame Controller

The extended frame controller (EFC) contains the status panel, synchronizer, and main controller. These units, which are mounted in a 2-shelf assembly, perform the same function as the comparable units in the original switch bay. Table 1-3 lists the codes for the main controller circuit packs that were updated in the CEF switch bay.

Table 1-3. Expanded MC Equipment

Circuit Pack	Equipment
CPU2	TM778
8-Mbyte EBX (Expanded Bus Extender)	UM71
EMTC (Expanded MTC)	UM75
32-Mbyte ICI	TM 782

Synchronizer

The redundant TLI (0 and 1) circuit packs provide for up to four sources. There are circuit pack slots for one redundant time base (TB) . However, you may add two other redundant TB circuit pack pairs by using TLI3 (0 and 1) and TLI4 (0 and 1) slots. You can use the TLI slots because you do not need to interface the external source if you use the internal TB source. The redundant synchronizer power unit (SPU) provides power for the synchronizer circuit packs. The TLI and TB circuit packs are connected to the ECCN through the digital phase-locked loop (DPLL) circuit pack.

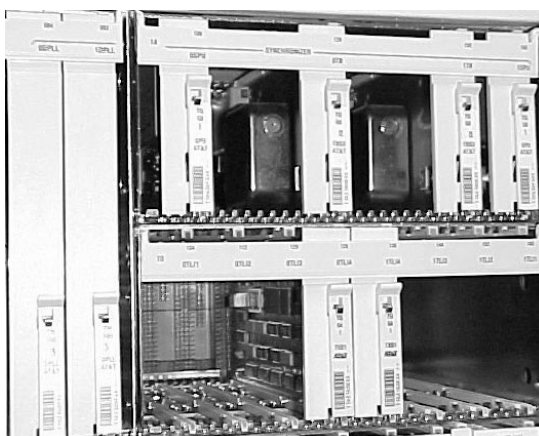
[illegible]

Figure 1-10. CEF Switch Bay Synchronizer Circuit Pack Locations

CEF Switch Bay (Continued)

Main Controller

The main controller contains the following units:

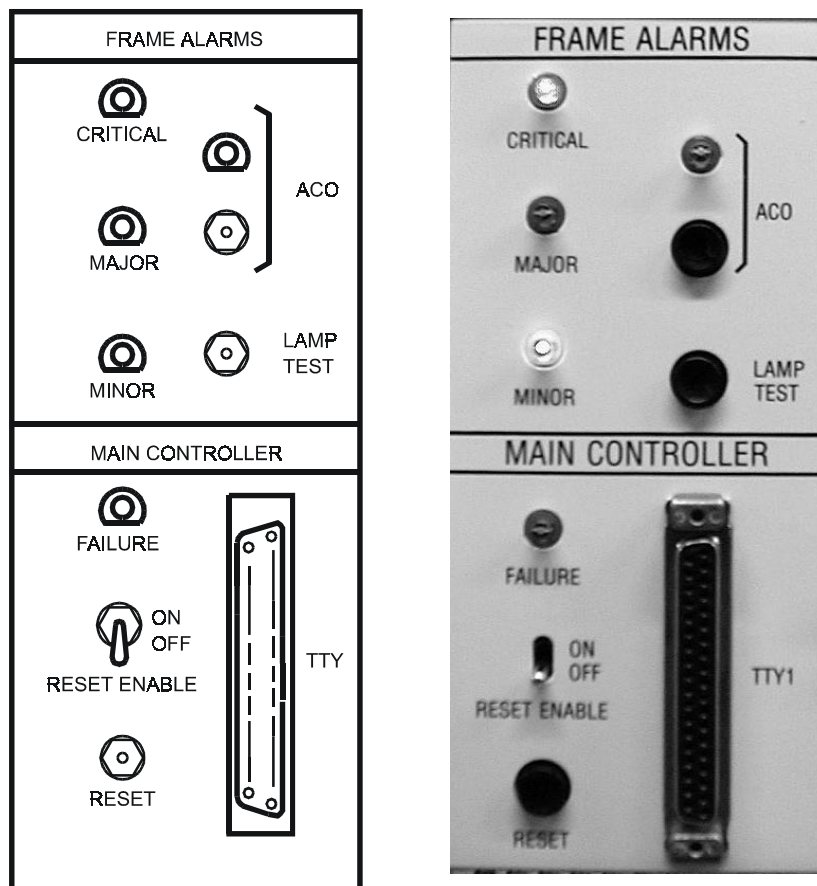
- Extended Maintenance (EMTC)
- Central Processor Unit 2 (CPU2)
- Extended Bus Extender (EBX)
- Intelligent Communication Interface (ICI)
- Main Controller Power (MCP)
- Fuse Board (FB)
- Power converters.

The EMTC controls the interface between the MC and the alarm circuits and units. The ICI manages the communications between the internal and external links. The EBX manages the communication between the MC and the ECCN. Two power converters and the MCP provide power for the MC.

CEF Switch Bay (Continued)

Status Panel

The status panel, Figure 1-11, contains the frame alarm (CRITICAL, MAJOR, and MINOR) indicators, the ACO (alarm cutoff) switch and indicator, and the main controller FAILURE indicator, RESET ENABLE switch, and RESET indicator. A plug on the front of this unit can be used to connect a portable TTY to Link 1.



tpa 814075/11

Figure 1-11. CEF Switch Bay Status Panel

CEF Switch Bay (Continued)

Fuse and Alarm Panel

The 48-volt input power is distributed through indicator fuses in this panel, Figure 1-12, to the other assemblies in the CEF switch bay.

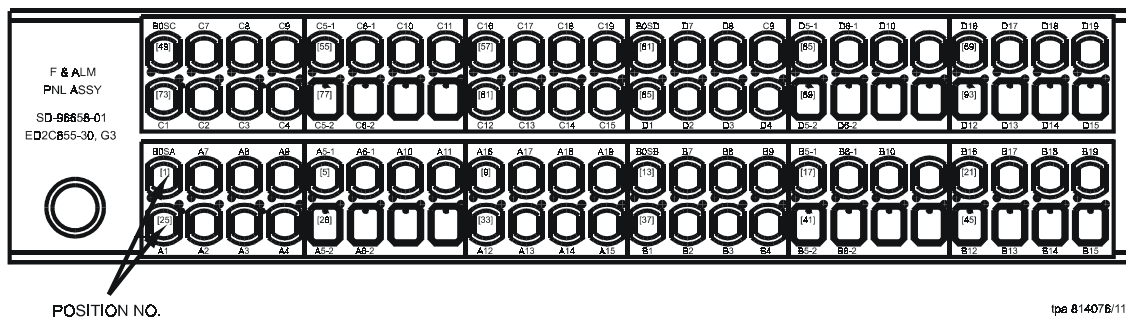


Figure 1-12. CEF Switch Bay Fuse and Alarm Panel

Interface Bays

Overview

As described previously, there are two types of interface bays:

- The original interface bay
- The flexible interface bay.

In the original interface bays, unit positions 1, 2, 3, and 4 were always facility terminating units (FTUs) and Unit positions 5 and 6 were always DSPUs.

Power and Control Unit

The power and control unit is mounted in the original interface bays that use FTUs. The power and control unit contains power converters, fuse board circuit packs, central processing unit (CPU) circuit packs, and unit bus extender (UBX) circuit packs, as shown in Figure 1-13. There is a power and control unit equipped for each equipped FTU.

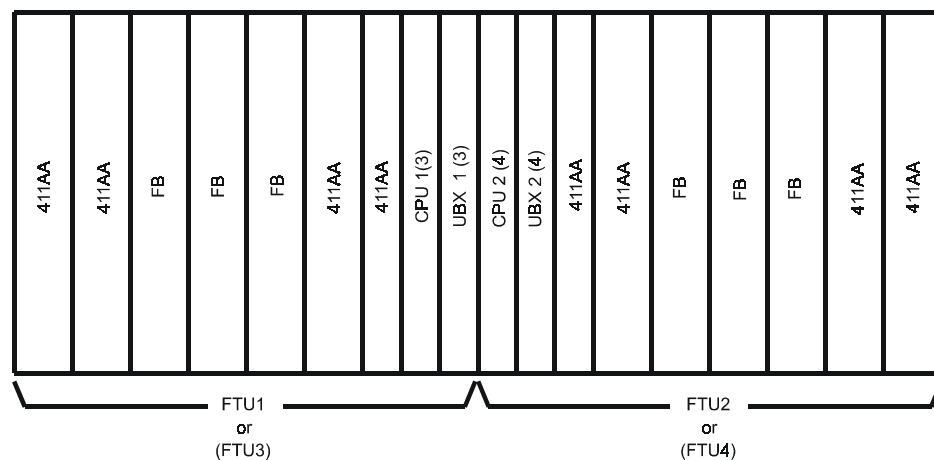


Figure 1-13. Original Interface Bay Power and Control Unit Circuit Pack Locations

Interface Bays (Continued)

FTU and IFTU

Description

The facility terminating unit (FTU) is the general name for the circuit block used to terminate digital line facilities; it is also the name for the facility hardware for the original interface bay.

Facility Terminating Modules (FTMs)

Within an FTU, the equipment is further divided into four FTMs (see Figure 1-14, Figure 1-15, and Figure 1-16). Each FTM occupies one shelf and contains one facility terminating module interface (FTMI), an format converter (FC) for each duplicated side, and up to 16 dual digroup circuit packs of the family of various network processing circuit (NPC) applications.

FTU/IFTU Circuit Packs

Each dual circuit pack contains the circuitry for two NPC positions. When equipped for 2.048-Mb/s service, each FTM has up to 16 dual primary block circuit packs installed. And each NPC processes up to 30 DS0 channels.

The common control circuit packs for the original FTU were mounted on the power and control unit described in the previous paragraph. These units are mounted on the FTM in the integrated facility terminating unit (IFTU). (See Figure 1-15.)

Interface Bays (Continued)

FTU/IFTU Figures FTU Circuit Pack Positions

Figure 1-14 displays the circuit pack positions for an FTU.

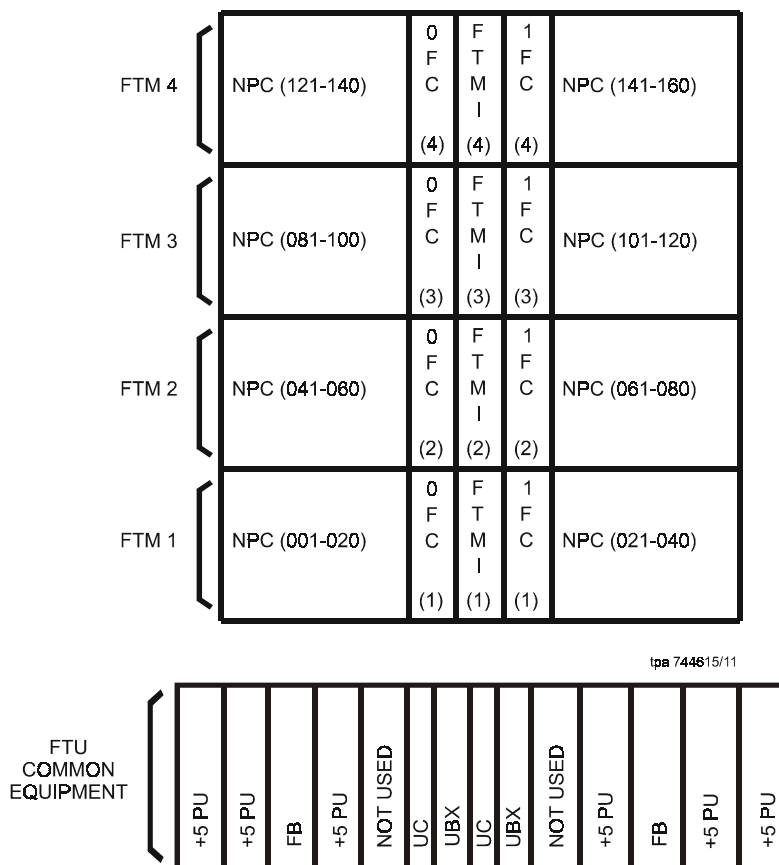



Figure 1-14. FTU Circuit Pack Positions

(Continued on next page)

Interface Bays (Continued)

FTU/IFTU Figures, Continued IFTU Circuit Pack Positions

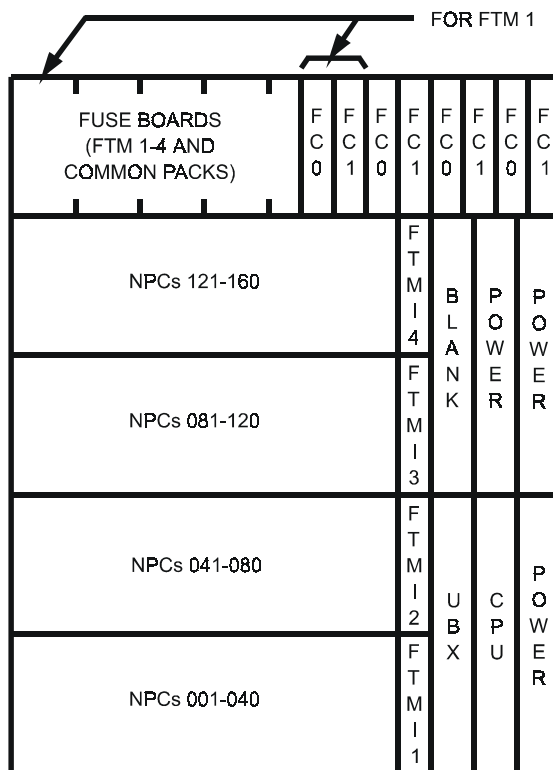Figure 1-15 displays the circuit pack positions for an IFTU.



tpa 789371/11

Figure 1-15. IFTU Circuit Pack Locations (Unit 1 Extended NPC Numbering Shown)

(Continued on next page)

Interface Bays (Continued)

FTU/IFTU Figures, IFTU2 Circuit Pack Positions Continued

Figure 1-16 displays the circuit pack positions for an IFTU2.

FUSE BOARDS 1-17					P O W E R 1	P O W E R 2	P O W E R 3
FTM 4	NPCs 121-140	F C 0	F T M I 4	F C 1	NPCs 141-160	BLANK	
FTM 3	NPCs 80-100	F C 0	F T M I 3	F C 1	NPCs 101-120		
FTM 2	NPCs 41-60	F C 0	F T M I 2	F C 1	NPCs 61-80	U B X	C P U
FTM 1	NPCs 1-20	F C 0	F T M I 1	F C 1	NPCs 21-40		


Figure 1-16. IFTU2 Circuit Pack Locations

Interface Bays (Continued)

Digital Signal Processing Unit

Description

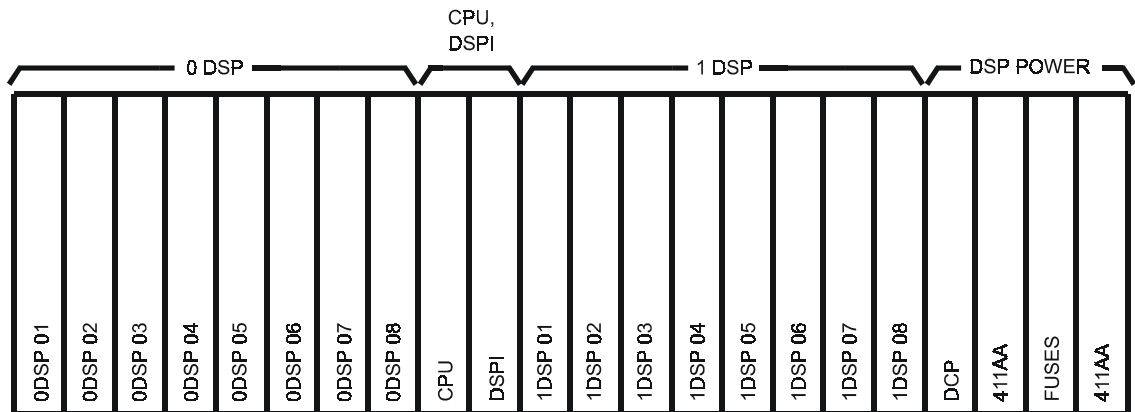The Digital Signal Processing Unit (DSPU), Figure 1-17, occupies one DACS II shelf and is equipped as needed by the customer to provide digital channel processing functions such as channel bridging. This processing is done on internal channels; no facilities terminate on the DSPUs.



tpe 813492/11



Figure 1-17. DSPU Circuit Pack Locations

(Continued on next page)

Interface Bays (Continued)

Digital Signal Processing Unit, Continued

DSPU Circuit Packs

Each DSPU consists of the common circuit packs, which are the digital signal processor interface (DSPI) and the unit controller, the specialized DSP circuit packs, and the power units for the DSPU. There are 8 DSP positions on the 0-side and 8 on the 1-side of the DSPU giving a total of 16 DSP positions. The DSP packs are duplicated on these two sides for redundancy to allow service switching in case a pack fails.

The specialized DSP packs for the DSPU are:

- Digital Multipoint Bridge (DMB) packs
- SubRate Multiplexer (SRM) packs
- Multipoint Junction Unit (MJU) packs.
- C-bit processor (CPR) packs for export applications.

Any combination of DMBs, SRMs, and MJUs can be used. The type (or combination of types) of signal processing depends on the customer's applications and services.

Single Bay

Description

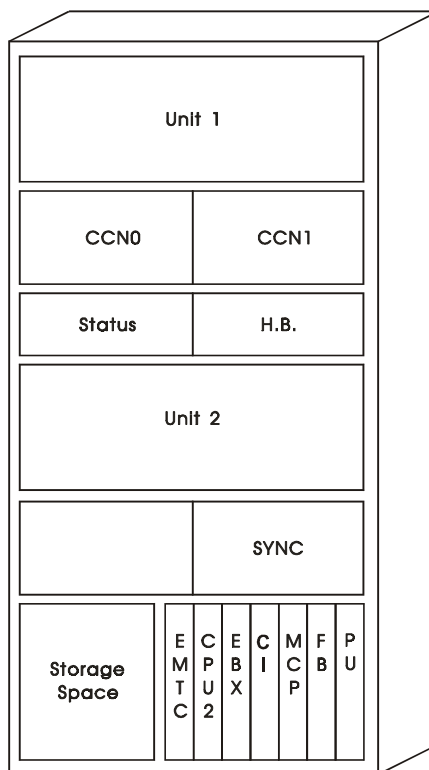
The single bay, Figure 1-18, combines all of the following into one bay:

- One FTU
- One optional DSPU
- Power converters
- Control and synchronization circuitry
- A cross-connect network.

(Continued on next page)

Single Bay (Continued)

Description, Continued



Notes:

- CCN** = Cross-Connect Network
- EMTC** = Expanded Maintenance Circuit
- CPU2** = Central Processing Unit 2
- EBX** = Enhanced Bus Extender
- CI** = Communication Interface
- MCP** = Main Controller Processor
- FB** = Fuse Board
- PU** = Power Unit

Figure 1-18. Single Bay Frame

Single Bay (Continued)

Cross-connect Network

It has a special cross-connect network, Figure 1-19, which is slimmed down to serve only two units of NPC. The cross-connect network is designated CCN2.

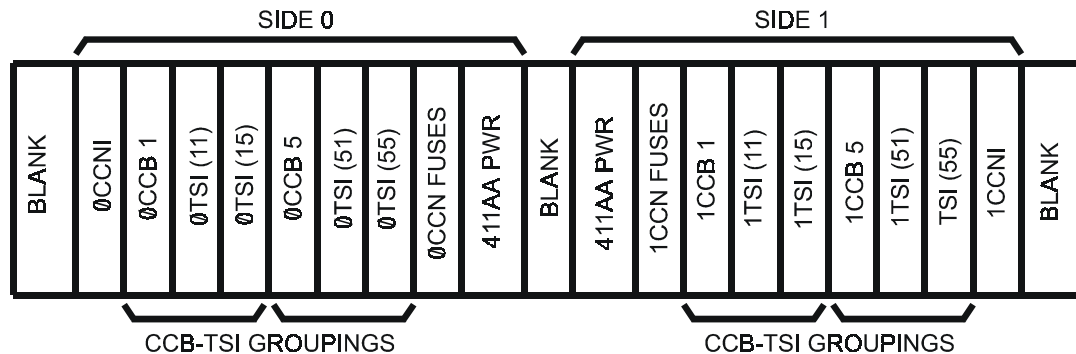


Figure 1-19. Single-Bay Cross-Connect Network 2 (CCN2) Circuit Pack Locations

Unit Numbering

An operational peculiarity of the single-bay frame is that the numbering of the unit positions in it is units 1 and 5 to match the designations in the original interface bay. The status panel, MC and Sync Unit (Figure 1-5), the FTU (Figure 1-14), the DSPU (Figure 1-17), and power and control unit (Figure 1-13) are the same as comparable units in the original switch and interface bays.

Single Bay (Continued)

Fuse and Alarm Panel

The single-bay fuse and alarm panel is shown in Figure 1-20.

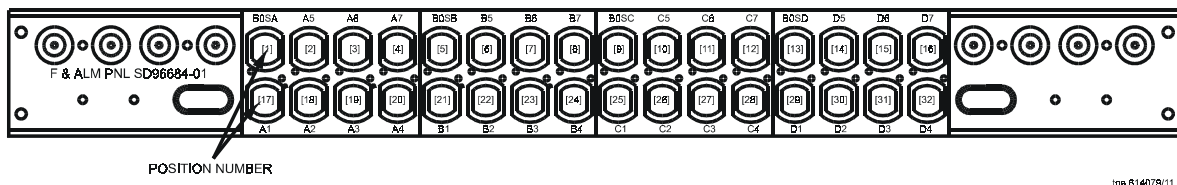


Figure 1-20. Single Bay Fuse and Alarm Panel

Functional Description

Overview

The following section provides a functional description of the DACS II. This section is intended to provide the reader with a general knowledge of the circuit pack functions and interworkings.

Basic Functionality

Cross-connection Function

The basic function of DACS II is to provide access to incoming digital signal bit streams to interchange and interconnect (cross-connect) DS0 channels. This is done electronically within the circuitry without making any digital-to-analog conversions. Access to the channels for testing is also done by cross-connections.

Interface circuit packs are provided for communications within the DACS II, with administrative links to external systems, and with the office frame alarms system.

Test Access Function

Using External Test Equipment

For test access, the time slots to be tested are cross-connected (mapped) to the time slots in the test access facility. DACS II allows test access of any channel within a facility without interfering with any other channel. Direct digital testing can be done by testing standard test equipment locally at the distributing frame or test from a remote location.

Using the Integrated Test Set (ITS)

The Integrated Test Set (ITS) feature provides the DACS II with a built-in Bit Error Ratio Tester (BERT) capability. ITS was developed to replace expensive test sets for facility troubleshooting, providing the capability of generating, reading, and evaluating test signals from the DACS II. ITS test access is available for Nx64 kbit/s circuits.

The ITS is implemented as an application on the Digital Signal Processing (DSP) circuit pack, TG193B. The TG193B pack generates and measures the test signals and provides a test access point. To support ITS, the NPCs on the circuit pack must be grown as ST-type NPCs.

Common Equipment Circuit Blocks

Description

The major circuit blocks of the DACS II are:

- Synchronization circuits that produce precise timing waveforms needed to maintain time slot alignment
 - The cross-connect network to accomplish the time slot connections
 - Microprocessors to manage internal and external operations.
-

Redundancy

Since multiplexing the signal time slots to form higher capacity bit streams is inherent in the cross-connect process, circuit redundancy is needed to protect against the loss of service should a failure occur in a high-channel-capacity pack. Accordingly, all circuit packs carrying more than 120 DS0 channels are duplicated. Similarly, because of their importance, the synchronizers and power supplies are duplicated.

Protection

The synchronizers also have the capability of temporarily operating in a stable, free-running mode. Nonvolatile memory is provided to protect against the loss of circuit memory if there is a power failure.

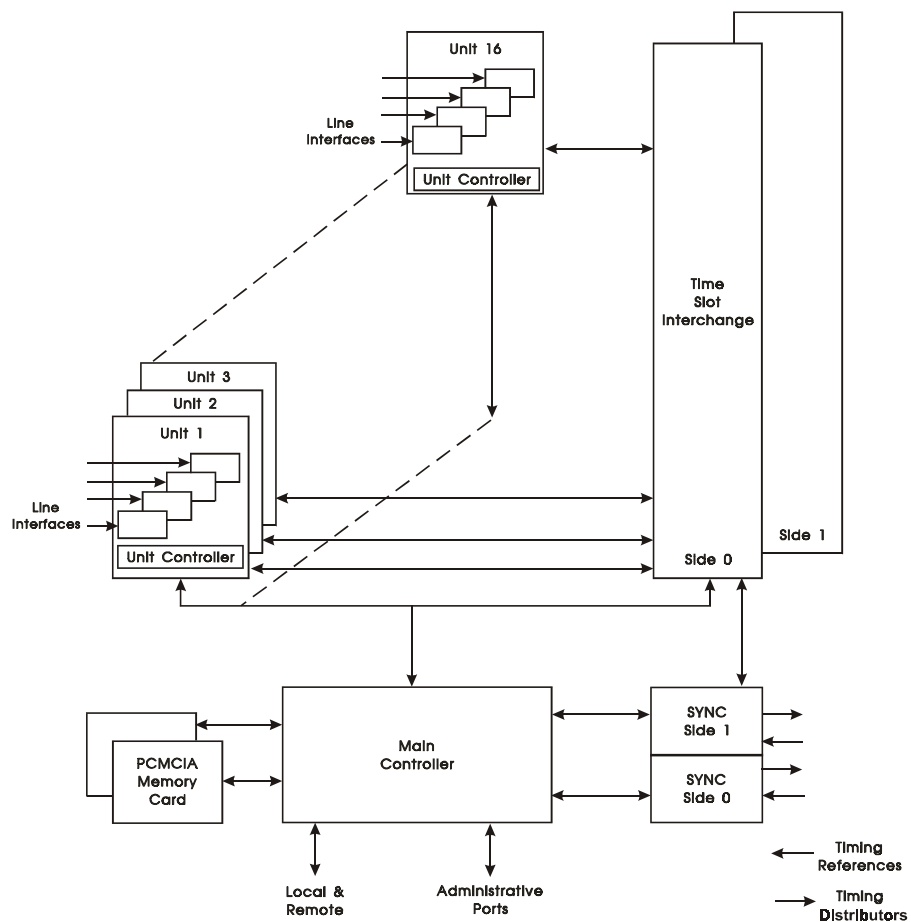
Expanded Circuit Blocks

To support the increased capacity of the DACS II capacity expansion frame (CEF), expanded versions of two of these circuit blocks are needed. The two expanded circuit blocks include the expanded frame controller (EFC) and the expanded CCN (ECCN); the sync remains unchanged.

Common Equipment Circuit Blocks (Continued)

System Architecture

The DACS II circuit blocks are illustrated in the system architecture block diagram in Figure 1-21 which shows the CEF. At the center of this diagram is the main controller with its connections to the other controllers and circuitry in the frame. The units of facility terminating and digital signal processing circuit packs and the duplex enhanced cross-connect network (ECCN), all of which carry the customer service, are shown across the top of the figure. Figure 1-21 shows the use of any type unit in the unit positions that require the fully flexible feature.



Note: Each Unit can be equipped as either IFTU2, DSPU, or DS3U.
Single Bay Frame Supports a Maximum of 2 Units

Figure 1-21. System Architecture Diagram

Common Equipment Circuit Blocks (Continued)

Communication/ Connections Between Blocks

Communication between the unit controller (UC) for each unit and the maintenance circuit (MTC) of the main controller is by means of a local area network (LAN). Communication between the CCN or ECCN and the main controller is by means of a control bus.

Connection of the syncs, nonvolatile memory devices, and the alarms and administrative ports to the main controller is as follows: the syncs and the PCMCIA Memory Cards connect to the main processor, the local terminal and outside links connect to the Intelligent Communications Interface (ICI), and the alarm connections go to the maintenance pack. These major blocks are described in the following information blocks.

Main and Secondary Controllers

Description

The heart of the DACS II microprocessor control system is the main controller (MC). The MC maintains the DACS II operating system, processes input commands and internal interrupt operations, and detects and responds to internal errors and alarms. It communicates with the other controllers to execute the time slot cross-connections, and it monitors the health of the frame. One result of this monitoring is the selection of one duplicated sync to supply timing to the frame and the selection of the associated CCN to carry service. Other results are initiating recovery routines if an error is detected and reporting alarms if a failure has occurred.

(Continued on next page)

Common Equipment Circuit Blocks (Continued)

Main and Secondary Controllers, Continued

MC Circuit Packs

The MC consists of the following circuit packs:

- Central Processing Unit 2 (CPU2)
- Intelligent Communications Interface (ICI)
- Maintenance Circuit Pack (MTC or EMTC)
- Bus Extender (BX or EBX).

The CPU2 contains the microprocessor circuitry and the associated circuit memory along with the primary and secondary memory cards. The ICI is the interface between DACS II and external administrative ports as well as a local terminal. The EMTC or MTC pack is the hub for the LAN and serves mainly as the alarm control point. The BX or EBX provides the dual bus control interface to the duplicated cross-connect network.

Unit Controllers

The unit controllers, which are the secondary controllers, manage the service provisioning information in the local unit memories. They also process commands from the main controller and send replies or requested information through the unit bus extender (UBX) to the main controller.

In the IFTU2, the facility terminating module interface (FTMI) provides communication between the UC and the network processing circuits in the modules of the unit.

In digital signal processing units, the digital signal processing interface (DSPI) serves as the interface between the processing circuit and its UC. For the CEF frame, the clock and control interface (CCI) contains the main controller interface circuitry.

Common Equipment Circuit Blocks (Continued)

Nonvolatile Memories

The MC maintains redundant copies of the system software and database on non-volatile memory. This storage space is provided via two removable circuit pack PCMCIA Memory Cards (PCMCIA is an acronym for Personal Computer Memory Card International Association). The system maintains fully duplicated memory and software backups on both Memory Cards. The two Memory Cards supported are referred to as primary memory (PMEM) and secondary memory (SMEM). To ensure database synchronization between working and backup memories, both Memory Cards are automatically updated when a backup is done from RAM to memory.

**NOTE:**

If PMEM is removed from service, the MC goes into MCOND, and the database is never booted from SMEM.


The Memory Cards are also used to download new software releases into the DACS II. This is accomplished by simply installing a Memory Card containing the new software and then executing the DACS II software upgrade procedure. The software upgrade procedure is non-service affecting.

Common Equipment Circuit Blocks (Continued)

Internal Synchronization

Description

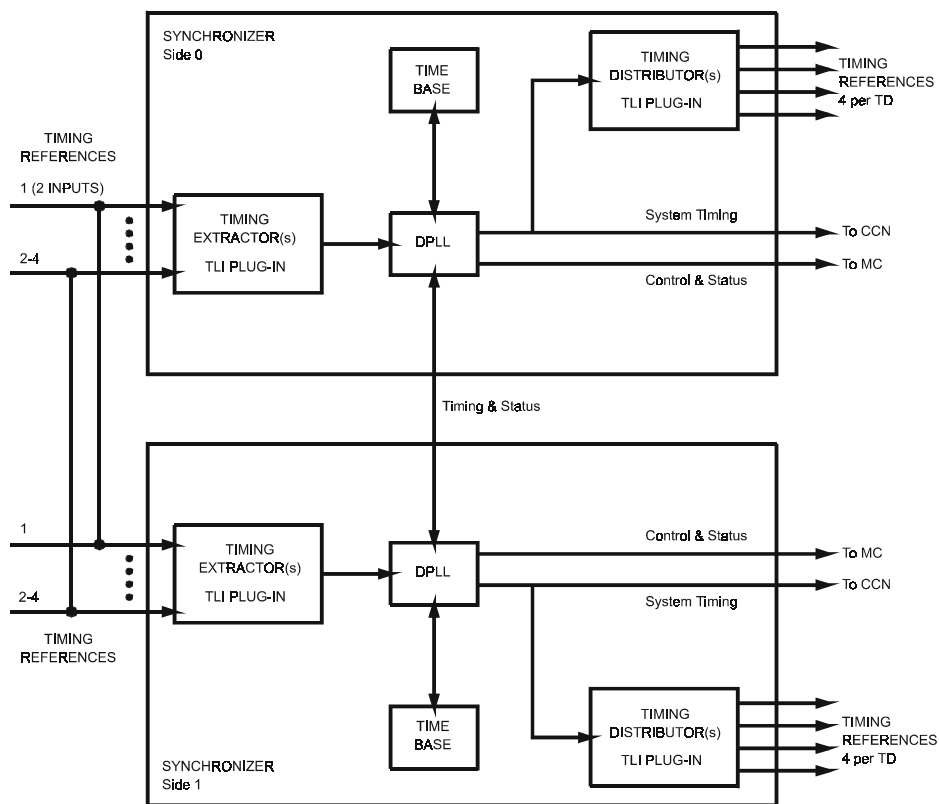Figure 1-22 is a block diagram of the DACS II synchronizer. The synchronizer has duplicated sides (sync 0 and sync 1). Each sync contains the following circuit packs: up to four timing link interfaces (TLI), one or two time bases (TB), and one digital phase-locked loop (DPLL). The TLIs are used as timing extractors or timing distributors.



lpe B1413D/11

Figure 1-22. Synchronizer Block Diagram

(Continued on next page)

Common Equipment Circuit Blocks (Continued)

Internal Synchronization, Continued

Timing Modes and Sources

The synchronizers operate in either the slaved or master timing mode. In the slaved mode, the TLIs are used as both timing extractors and timing distributors. In the master timing mode, they are used as timing distributors only. The TB is a source of stable timing for the DPLL. The DPLL is the source of the DACS II timing signals.

Synchronizer Control

Control of the DACS II synchronizer is accomplished through a pair of 2-way communications links to the main processor (MP). Syncs 0 and 1 are cross coupled so they run at the same frequency and phase during normal operation.

During normal operation, both sides are energized but only one side is in service (active). If the active side fails, service is automatically switched to the other sync. If both syncs fail, the synchronizer enters the "holdover" state. In the holdover state, the synchronizer retains the last good frequency.

Timing References

The stability of the synchronizer is dependent on the stability of the output of the TB circuit pack. There are TB circuit packs that can match the following references:

- 2.048-Mb/s CEPT Toll
- 2.048-Mb/s CEPT Local.

(Continued on next page)

Common Equipment Circuit Blocks (Continued)

Internal Synchronization, Continued

Timing Link Signals

In the slave timing mode, the timing extractor develops a timing reference from an incoming timing link signal. The timing extractor reference output in conjunction with the stable timing signal from the TB adjusts the output of the DPLL to match the incoming link signal.

Each timing extractor can accept two incoming timing link signals. Each incoming timing link signal is applied to the same timing extractor input terminal in syncs 0 and 1. You can use up to four TLIs as timing extractors. Therefore, there is a possibility of connecting up to eight incoming timing link signals to the synchronizer. Only one of the inputs controls the synchronizer output. The signals are prioritized so that if a signal of higher priority fails, the synchronizer switches to the signal of next highest priority.

Timing from 2.048 Mb/s Line Signals

Sync timing can be extracted from 2.048 Mb/s line signals. Eight NPC positions in units 1 and 2 (four NPCs per unit) can be used for the source signals. When used as timing sources, the NPCs are identified in the commands to grow the TLI ports.

Timing for Incoming Links

Different codes of TLIs are used as timing extractors depending on the nature of the incoming links. The timing extractor selected depends on the line rate and signal format of the incoming line signal of the external clock. The available timing extractors include circuit packs to accommodate the following incoming timing links:

- 2.048-MHz basic synchronization reference frequency (BSRF)
- CCITT CEPT 2.048-Mb/s transmission lines
- Sinusoidal/square waves of various frequencies

(Continued on next page)

Common Equipment Circuit Blocks (Continued)

Internal Synchronization, Continued

TD Signals

In the slave timing mode, each TLI slot that is not used as a timing extractor can be used as a TD. The TD output signals are derived from the DPLL output. The TD distributes timing signals to equipment outside the DACS II.

In the master timing mode, the DACS II is a timing island providing its own timing and timing for external equipment as required. In the master timing mode, a third TB is installed in sync 1 TLI slot 3. The third TB provides additional redundancy for reliability and maintenance purposes. In the master mode, the TDs distribute timing signals to external equipment the same as they do in the slave mode.

2.048 Mb/s Facility Terminating Units

Description

The IFTU2 is the peripheral unit type that is grown and equipped to terminate 2.048 Mb/s lines.

Common equipment in the FTU provide the control functions and signal processing for connection to the CCN or ECCN. The network processing circuits (NPCs) provide the line interface and signal processing. The family of NPC codes, each with its own array of software selectable line options, provides all the required line formats and zero code suppression modes for compatibility with other transmission equipment at the other end.

A fully equipped FTU consists of four facility terminating modules (FTMs). Figure 1-23 shows the signal rates and conversions that take place in the FTM.

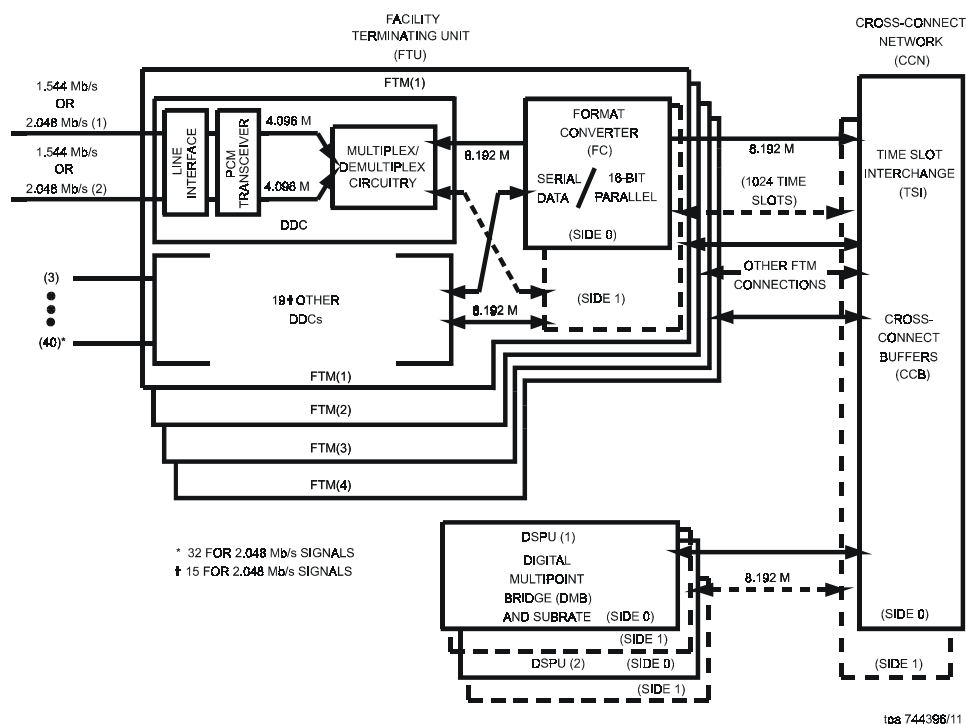


Figure 1-23. Unit and Cross-Connect Network Block Diagram

2.048 Mb/s Facility Terminating Units (Continued)

Communication and Control

Communication and control circuitry for the FTU is contained in the unit controller (UC), the unit bus extender (UBX), and the FTM interface (FTMI). The UC connects to the DACS II main controller over the LANs.

Within the FTU, the FTMI serves as the interface between the UC and the packs in the FTM, distributing information from the UC and sending replies from the FTM packs. Distributing information from the UC involves decoding the address data for the appropriate FTM. The UBX is needed with the UC to isolate and reclock the communications with the FTMI.

Timing and sync pulses from the synchronizer are delivered to the format converter (FC) packs in the FTM from the cross-connect buffer (CCB) or clock and control interface (CCI) packs of the cross-connect network. The FTMI is also timed from the FC packs.

Framing and Signaling Formats

The line interface of the NPC terminates the incoming line signals and provides the compatible framing and signaling format. Among these formats (for DS1) are:

- Superframe (Fs)
 - Extended superframe (Fe)
 - DDS data
 - D4 channel bank
 - *SLC*[®] 96
 - 1.544 Mb/s clear-channel lines.
-

2.048 Mb/s Facility Terminating Units Continued)

NPCs on Dual Primary Circuit Cards (DPCs)

Description

Circuitry for two NPC positions resides on a dual circuit dual primary circuit (DPC) circuit pack installed in the FTMs. The NPC also:

1. Provides facility performance monitoring
2. Sends and receives facility alarms
3. Sends carrier trunk conditioning to the other end.

The DPC has packs for terminating 120-ohm cable pairs and 75-ohm coaxial cables. Only 16 of the 20 DPC circuit pack slots can be used. The last four DPC positions (8 NPCs) in each of the four modules are left vacant.

In addition to the line interface circuitry, the DPC contains processing circuitry to change the signals to standard form for multiplexing into higher rate bit streams internal to the DACS II.

Pulse Code Modulation

A pulse code modulation (PCM) transceiver converts the two digroup signals to higher rate signals, and a multiplexer combines these into a single bit stream that is twice the rate of each input.

Redundancy and Protection

The multiplexer also produces a duplicate output signal for protection if one output (side) fails. These outputs are applied along with the same outputs from the other DPCs in the module to the respective format converters (FCs) of the module. In the FC for each side, these signals are converted from serial to parallel data forms and read out on multiple leads to the respective CCN. The FC for a side goes to the like side of the duplicated CCN, and these same conversions and connections occur for the other (up to three) FTMs in the unit.

Line Interface Equalizer

When the FTMI is grown in the software data base, the line interface equalizer is specified for the FTM shelf. For 2.048 Mb/s lines, the equalization for the left and right halves of the FTM shelf is specified; this equalization is applied to the outgoing (transmit side) path going to the DSX-1 bay.

Cross-Connect Networks

Description

The overall function of the cross-connect network is to accomplish channel cross-connections by the time slot interchanging operations in the time slot interchange (TSI) packs. These packs are called expanded TSIs (ETSIs) in the ECCN for CEF frames.

TSI/ETSI Operations

The TSI or ETSI operations are:

- Connecting unit channel data to network buses
- Switching time slots out of the network data buses to the unit buses
- Connecting the cross-connected data to the unit port.

Each TSI or ETSI has access to the network data from all the peripheral units. The switching of time slots into the unit buses is enabled by buffers in the TSIs that store the data so that it can be written into the unit buses in the correct channel sequence. Each facility or digital processing unit connects to the CCN or ECCN over four network buses or ports. These ports have a 4096 time-slot capacity. Each port contains 1024 time-slot data buses, timing, status and error information.

Cross-connection Types

Interconnection of information in the internal bit stream establishes a path through the DACS II that may be a:

- 1- or 2-Way cross-connection
- Broadcast connection
- Connections to the DSPUs for conference bridging.

The type of connection is controlled by the input command. This path (or map) is determined by the main controller based on the record of used and available paths in the controller memory. The maps are autonomously transferred to the memory cards for backup protection. The CCN and ECCN are single-stage, nonblocking, time division switches.

Cross-Connect Networks (Continued)

Redundancy and Protection

The CCN or ECCN is duplicated so that cross-connections can be reproduced in the other network by the main controller without any loss of service should a failure occur on the active side. If the main controller is also out of service when a failure occurs in the CCN, ECCN, or duplicated peripheral unit pack, other packs in the unit will cause the switchover to the other side of the cross-connect network. The switchover can also be manually forced to allow maintenance on the inactive side.

CCN Types

Overview

Three CCNs are available for the different size DACS II frames:

- The CCN for the original multibay frames (with up to six units)
- The CCN for the single-bay frame (with two units)
- The expanded CCN (ECCN) for the capacity expansion frame (with up to 16 units). These versions of the CCN are described in the following blocks.

CCNs for the Non-CEF (Original Multibay) Frame

When fully equipped, the CCN for the original multibay frame is a 24,576 X 24,576 time-slot switch because it handles 6 times the 4096 time slots (per unit). Each side of the CCN mounts up to 36 TSIs, one CCNI, and one CCB for each peripheral unit. In a fully equipped frame, six TSIs are required per unit to interconnect each unit with itself and the five other units.

The CCN interface (CCNI) communicates between the CCN and the MC and contains the error summary register for the CCN.

The CCB produces the timing and sync pulses from the synchronizer circuit block.

The TSI switches time slots from the network data buses from all the peripheral units to the CCB for conversion to the port going to the associated unit.

Power for the duplicated network is obtained from power units in a separate shelf.

(Continued on next page)

Cross-Connect Networks (Continued)

CCN Types, Continued

CCNs for the Single-Bay Frame

The CCN for the single-bay frame is a scaled down version of the above; it is an 8,192 X 8,192 time-slot switch because it serves up to two units. This network is distinguished in the software as the CCN2. Fully equipped, it contains four TSIs per side, one CCNI per side, and two CCBs per side.

Power is obtained from power units in a separate shelf.

ECCNs for the CEF

The ECCN for the CEF is a 65,536 x 65,536 time-slot switch because it handles 16 times the 4096 time slots (per unit). Each side of this duplicated network mounts one clock and control interface (CCI), one ETSI per unit (16 total), and two bus terminators (BT).

The CCI regenerates sync clock and timing from the sync, communicates between the expanded MC and the ETSIs including master resets from the MC, and provides error detection for the ECCN.

The ETSI converts the network data from the peripheral units to format required in the ECCN, connects time slots from the unit to the network receive data bus, switches time slots out of the network buses from all the ETSIs, and connects the time slots to the transmit data buses going to the associated unit.

The CCI contains the converter circuitry to produce 5-volt power for itself and the ETSIs on the same side of the network. Additional 3-volt power required by each ETSI is produced on the ETSI itself. There are no separate power units for the ECCN.


The BTs terminate both ends of the 16 network buses running between the ETSIs with a resistive termination. These packs also force desired states on these buses during inactive periods or when the CCI pack is disconnected.

(Continued on next page)

Cross-Connect Networks (Continued)

CCN Types, Continued

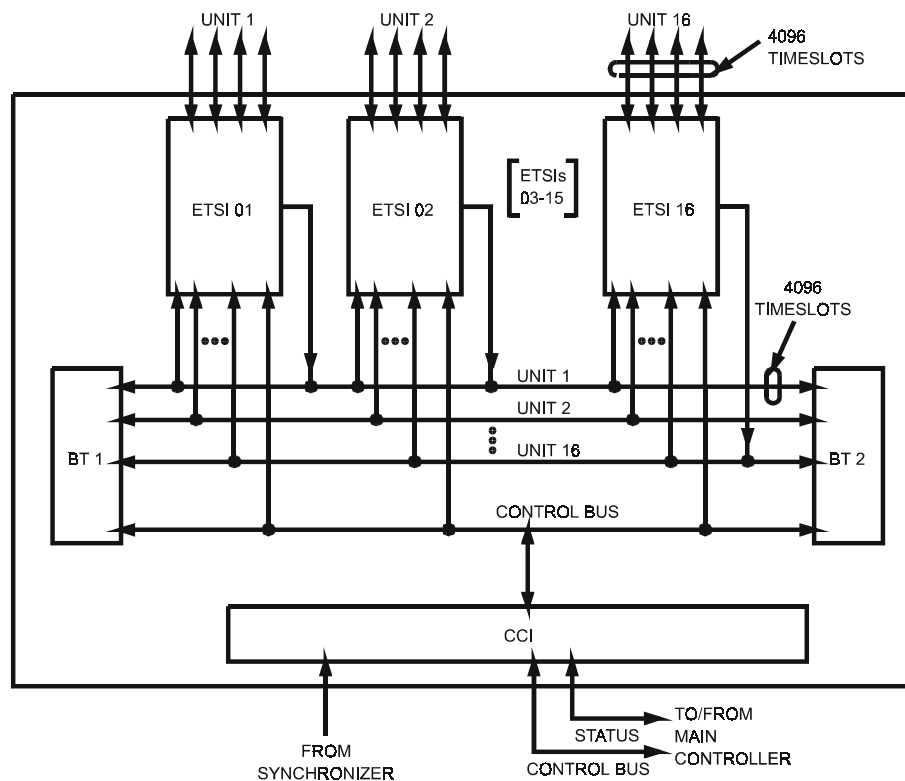Figure 1-24 shows a simplified block diagram of the ECCN; this diagram is drawn with the BTs on the sides which nicely resembles the circuit pack mounting in the ECCN shelf.



tpa 789632/11

Figure 1-24. ECCN Block Diagram

Digital Signal Processing Units

Description

Digital Signal Processing Units (DSPUs) are equipped with the appropriate duplicated DSP circuit packs to produce further time slot interconnections and custom arrangements such as DS0 channel bridging.

By being separate from the facility terminating units, the full time slot capacity of a unit is available at the DSPUs to allow almost any size or type connection without sacrificing any termination capacity in the facility units.

DMB Circuits

Description

DS0 channel bridging is enabled by installing digital multipoint bridge (DMB) circuit packs in the DSPU. Each DMB consists of a single circuit pack that serves both the input and output functions. Channels to be bridged are cross-connected in the CCN, bridged in the DMB, and returned to the CCN to be added to the data stream. This bridging is done digitally without decoding the channel information.

Capacity

Each DMB contains two conferencing devices, with each conferencer supporting 256 channels. Thus, each DMB pack can support 512 channels or up to 170 separate 3-leg conferences. As additional DMB packs are added, additional conferences can be supported. Each DSPU can support up to eight duplicated DMB packs.

Channel Associated Signaling

Channel associated signaling bits are not transmitted across the DMB.

Redundancy and Protection

The DMBs are duplicated for protection against service loss and connected to the respective sides of the CCN.

(Continued on next page)

Digital Signal Processing Units (Continued)

DMB Circuits, Continued

Bridge Configurations

The following bridge configurations can be supported on the DACS II:

- Symmetrical
- Polling
- Broadcast.

The symmetrical configuration is a 2-way communications circuit between all bridge legs.

The polling data network is a 2-way broadcast circuit where the broadcast direction is from the FTU NPCs through the CCN only. The return direction is summed and processed for gain, echo suppression, and noise guard through the DMBs in the DSPUs.

The broadcast network is a 1-way circuit with only one return path to the backbone. Broadcast connections are actually formed outside the DMB in the CCN.

Subrate Circuits

Other DSP circuit packs provide subrate channel data processing. Subrate processing includes those functions into the DACS II that are done by external DDS multijunction units and subrate multiplexers. These functions are described under the heading *Feature Functions*.

C-Bit Circuits

The CPR circuit pack is used to monitor or insert C-bit messages for circuits. Commands connect channels from facility terminating NPCs to the CPR pack and establish the director DACS II functions of monitoring and writing the channel C-bits. The DACS II frames in the circuit (liaison) are assigned director DACS II functions based on their locations on the circuit. The CPR pack is grown as type CB (for C-bit), and each CPR pack has the capacity for 128 connections from facility terminating NPCs.

Frame Alarm Indications

Alarm Indication Types

Extensive error detection and handling takes place in the DACS II. For example, for a hardware error, the DACS II evaluates all the error inputs including any from power units and reports the results in an ERR ANALYSIS message. These processes and those that check for software errors are not detailed in this manual. General descriptions of the following are provided here:

- Circuit pack failures
 - Carrier failure alarms
 - Facility performance alarms.
-

Circuit Pack Failures

Circuit pack communication and operations are continuously monitored by the main controller to check for errors. If errors are detected, the main controller institutes an error recovery routine which confirms that the error was not a transient and runs diagnostic tests on the suspect pack. The suspect pack is also removed from service, and service is switched to the other side if the circuit group is duplicated. If the tests fail, an office alarm is registered. If the tests pass, the CP (circuit pack) must be manually restored to service. In the DS3 unit, all the transmission packs are included in protection switching groups. This switching to a standby spare prevents the loss of service due to the failure of a single pack.

Carrier Failure Alarms

Description

Carrier Failure Alarms show a loss of incoming signal, framing, or high transmission errors or receipt of a remote alarm signal from the equipment at the other end of the line. Incoming failures are reported in an output message as a red alarm, and the receipt of the signal that indicates a local alarm at the other end is reported as a yellow alarm. Either condition also generates an office alarm.

Facility Protection Switching

Whenever a red alarm exists, DACS II sends a yellow alarm signal to the other end.

(Continued on next page)

Frame Alarm Indications (Continued)

Carrier Failure Alarms, Continued

Alarm Conditions

Additional carrier failure alarm conditions that are reported in output messages are:

- Simultaneous red and yellow DS1 alarms
- AIS (alarm indication signal), also referred to as the all 1s signal
- Local and remote alarms from a digital multiplex interface frame (DMI/BOS signaling format).

Alarm Indication Signal (AIS)

The AIS (all 1s signal) is a digital signal associated with a maintenance alarm detected on a defective maintenance span. DACS II transmits the AIS signal in the direction of the failure as a substitute for the normal signal. It is intended to show other equipment (downstream) that a failure has occurred elsewhere and to inhibit local alarms so that the defective section can be identified by the local alarm indication.

The programmable AIS alarm allows the user to select how the alarm indication signal from the far end will be reported. The DACS II user can select whether a major alarm, minor alarm, or informational alarm (default) is generated.

During Carrier Failure

During a carrier failure, the affected NPCs send trunk conditioning and trouble insertion words out on the channels. Trunk conditioning is used on channels with signaling to cause office switching equipment to discontinue calls and stop charges. Trouble insertion words are sent in the message part of the channel and are necessary to signal trouble on data circuits. The codes for these trunk conditioning or insertion words are entered as part of the cross-connect commands.

(Continued on next page)

Frame Alarm Indications (Continued)

Carrier Failure Alarms, Continued

Facility Performance Alarms

Microprocessor circuits in the NPCs detect and record various line error conditions. The results of this monitoring are used to provide status information on demand and to register office alarms when prescribed thresholds are exceeded.

The monitored parameters vary depending on the type of NPC, but the following lists some examples for DS1 lines:

1. Line bit errors
2. Errored seconds
3. Severely errored seconds
4. Cyclic redundancy check errors
5. Carrier reframing activity.

Current counts are available on demand by requesting the NPC status, and accumulated counts are obtained by requesting the count for a particular facility parameter or as provided in the daily (midnight) report.

The alarm thresholds for the facility parameters are set initially when the NPCs are provisioned for service. Unless specific alarm thresholds are entered, default values apply. Up to three additional values for each alarm can be loaded into the DACS II to serve as options that can be selected initially or by means of a change command.

Frame Alarm Indications (Continued)

Alarm Severity Feature

Description

Every alarm on a DACS II is assigned a default severity level which determines the alarm output messages, the front panel alarm LEDs, alarm relay outputs, and query results. The Alarm Severity Feature provides the ability to change the severity level of PA-, PB-, and PC-type NPC facility alarms and associated shelf alarms to:

- Prompt Maintenance Alarm, Critical (PMA-Critical)
- Prompt Maintenance Alarm, Major (PMA-Major)
- Deferred Maintenance Alarm, Minor (DMA-Minor)
- Maintenance Information.

This allows DACS II users the flexibility of customizing their alarm severities. However, this feature does not change the way the DACS II handles alarms.

Customizing Alarm Severity

The Alarm Severity feature can be turned ON or OFF. If the feature is ON, the reassignment of alarm severities will change output messages to indicate the new alarm severity assignments and, depending on the alarm severity assigned, alarms will be indicated on the front panel LEDs and through alarm relay outputs of the DACS II. When the feature is turned OFF, the alarm severities will revert to the standard default definitions until the feature is turned back ON.



NOTE:

Currently, there is no support for TH-type (Hybrid DS3 NPCs) available.

Frame Alarm Indications (Continued)

Intervention Level Feature

The Intervention Level Setting feature allows DACS II users to escalate or de-escalate the alarms for individual PA-, PB-, and PC-type NPCs, Timing Link Interface, Synchronizer or cross-connections to suit their current needs. The Intervention Level assigned determines the alarm level indicated in output messages, alarm indicating LEDs, and alarm relay outputs.

Three Intervention Levels are defined as follows:

- IMA - Immediate Maintenance Action
- DMA - Deferred Maintenance Action
- NI - No Intervention.

Table 1-4 shows the relationship between alarm severity and Intervention Level action for the six Intervention Level settings, where an intervention level of 1 will demand the highest level of attention (Immediate Maintenance Action), and an intervention level of 6 will require the lowest level of attention (No Intervention).

Table 1-4. Intervention Level Settings

Intervention Level Settings	Alarm Severity (as defined by Default Values or Alarm Severity Feature)			
	PMA Critical	PMA Major	DMA Minor	MI
1	IMA	IMA	IMA	DMA
2	IMA	IMA	DMA	DMA
3	IMA	DMA	DMA	NI
4	DMA	DMA	NI	NI
5	DMA	NI	NI	NI
6	NI	NI	NI	NI

Customizing the Intervention Level Setting

This feature can be turned ON or OFF. When the feature is turned ON, it controls the alarm level indicated in output messages, alarm indicating LEDs, and alarm relay outputs, superceding the Alarm Severity feature. When the feature is turned OFF, the control of the output messages, alarm indicating LEDs, and alarm relay outputs is defined by either the Alarm Severity feature (if that feature is turned ON) or by the standard alarm severity default definitions.



NOTE:

Currently, there is no support for TH-type (Hybrid DS3) NPCs available.

Status Panel Functions

Description

The status panel conveys status and alarm information regarding the DACS II and provides an administrative port (TTY1) for connection of a console terminal. This is a multiple of administrative link 1 and allows connection of a portable terminal while the regular terminal is disconnected from the back. The CEF status panel is mounted on a circuit pack.

Alarm Classifications

There are five LED indicators on the status panel. The classification of the alarms and the color of the LEDs vary on panels used outside the U.S.A., but the following gives the North American stampings:

- FRAME ALARM - CRITICAL: Indicates a service-affecting failure affecting more than 120 channels (red LED)
 - FRAME ALARM - MAJOR: Indicates a service-affecting failure affecting equal to or less than 120 channels (red LED)
 - FRAME ALARM - MINOR: Indicates a nonservice-affecting failure (yellow LED)
 - MAIN CONTROLLER - FAILURE: Indicates a failure of the main controller (red LED)
 - FRAME ALARM -ACO (ALARM CUTOFF): Indicator that is lighted when the alarm cutoff switch is operated (green LED).
-

Switches

There are four switches on the status panel that do the following functions:

- FRAME ALARM - ACO: Disables the audible alarm
 - FRAME ALARM - LAMP TEST: Checks for failed lamps by lighting all lamps on the status panel
 - MAIN CONTROLLER - RESET ENABLE: Switch that enables (ON position) or disables (OFF position) the main controller reset switch
 - MAIN CONTROLLER - RESET: Resets the main controller provided the RESET ENABLE switch is in the ON position.
-

Powering

Power Distribution

Power distribution and fusing for the frame are done on the main fuse and alarm panel and on shelf fuse blocks. Office battery is delivered over four feeders so that the loss of any input will not interrupt service. These feeders are fused at the fuse and alarm panel with 70-type fuses that provide a visual indication when blown and automatically activate office alarms.

Power units in the frame produce lower DC voltages derived from the -48 volt input. Secondary feeders distribute power to groups of converters for the major circuit blocks in the frame (controllers, syncs, CCNs, DSPUs, and FTUs). Each side of the sync and CCN has its own converter group.

Protection Mechanisms

Different codes of converters are used for the various output voltages needed in each group, but each one has common protection mechanisms. These mechanisms are:

- A power interlock - to turn the converter off whenever the latch is opened for removal
- Power shutdown circuits - to prevent overvoltage or overcurrent damage.

Power LEDs

A red LED on each converter lights when a shutdown circuit operates, when the output fails, or when the latch switch is turned off. A power converter failure causes an office alarm. The 563A converters for the DS3 unit also have a green LED that lights to show that the power is on.

Powering (Continued)

Redundancy and Protection

The power protection philosophy for circuit pack power units is based on the use of redundant power converters that supply the load in a converter group when a converter fails.

This is done by monitoring circuits and extra wiring that keeps the converter groups in a power sharing mode until a failure is detected. The number of standby power units needed in a power group is determined by the load requirements.

In the FTUs and in other groups where the circuit packs are added as service growth occurs, these requirements depend on the number of circuit packs installed.

ECCN Power

For the ECCN of the CEF frame, the CCI pack for each side contains the power converter circuitry to produce 5-volt power for itself and the ETSIs on the same side of the ECCN. Additional 3-volt power required by each TSI is produced on the ETSI itself.

Feature Functions

Overview The following section provides specific descriptions of DACS II feature functions. The section is intended to provide the reader with an overview of the feature and how it operates.

Gateway Feature

Description The DACS II gateway feature enables North American 1.544 Mb/s and international 2.048 Mb/s facilities to coexist within a DACS II system for translation and cross-connection between the two disjointed facilities.

Gateway IFTU2 When DACS II is used as a gateway between international and North American facilities, the international side of the IFTU2 is equipped with the appropriate dual primary circuit (DPC) circuit packs and the North American side is equipped with dual digroup circuit (DDC) circuit packs. Only 32 of the 40 NPC positions in an IFTU2 module can be equipped for the 2.048-Mb/s interface.

Gateway Feature (Continued)

A-Law and μ -Law Conversions

The DACS II performs several functions in providing the gateway feature. The DACS II does North American μ -law and international A-law pulse code modulation (PCM) translation, provides signaling conversion between North American robbed bit and the international abcd bit signaling, and performs point-to-point as well as point-to-multipoint DS0 cross-connections. In addition, the DACS II provides a host of performance monitoring and maintenance functions for efficient and effective facility translation and transmission.

The DPC performs the conversions between the 4-bit and 2-bit signaling and the A-law and μ -law voice encoding in the two signals, as shown in Figure 1-25.

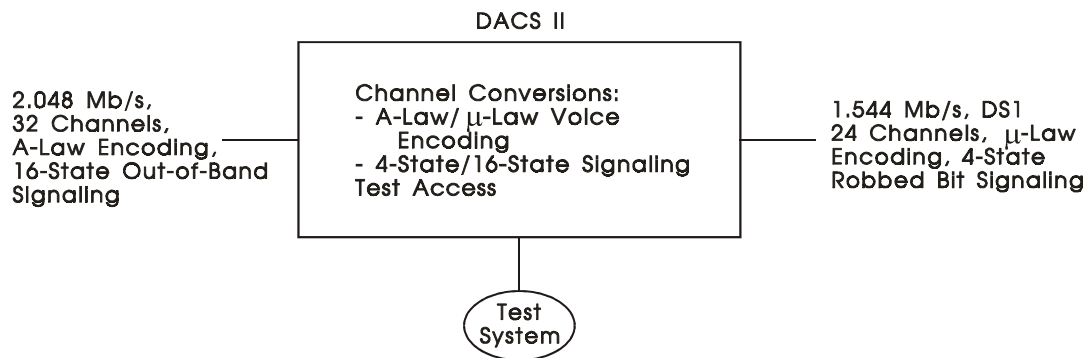


Figure 1-25. Gateway Signal Conversions

No A-Law and μ -Law Conversions

Cross-connect command fields NAM, <tc>, and <sc>, are applicable for a gateway connection. The NAM field (no A-law to μ -law conversion) disables the conversion for data signals that are already in digital form (no encoding). The <tc> field identifies the type of DS1 circuit to DACS II (signaling or transparent) and specifies trunk conditioning. The <sc> field (signaling conversion) allows setting signaling bits (abcd) to 0 or 1, inverting bits, or passing bits through unchanged. This field is used in gateway to dictate how signaling bits (c and d) which are not used on both sides are to be set.

DS3 Hybrid Termination Feature

Description

A Hybrid DS3U is very similar to the non-hybrid DS3U except that it is also able to demultiplex and multiplex E1 signals in addition to any DS1 signals that might be carried by the DS3 signal. The multiplexing standard for a DS3 signal is defined in Bellcore document TR-TSY-000009 entitled "Asynchronous Digital Multiplexes Requirements and Objectives." In that standard, it is shown that a DS3 signal carries seven DS2 signals, which have a transmission rate of 6.312 Megabits/second. Each DS2 signal may carry four DS1 signals of 1.544 Megabits/second rate. Therefore a DS3 signal may carry 28 DS1 signals.

Capacity

A DS2 signal may also carry three E1 signals of rate 2.048 Megabits/second. This is described in the ITU-T standard G-747. If each DS2 within a DS3 signal carries E1 signals, then a total of 21 E1 signals may be carried within a DS3. A DS3 signal may carry both DS1 and E1 signals within its multiplex; however, the embedded DS2 signals carry either four DS1 signals or three E1 signals, but not both.

Each Hybrid DS3U terminates up to six DS3 coaxial lines and contains the equipment to demultiplex the DS3 asynchronous signals into component DS1 and/or E1 signals. In turn the DS1 and E1 signals are demultiplexed into their component DS0 channels for connection to the existing CCN for cross-connection. DS0 channels from other facilities connected to the CCN are assembled into DS3 signals for connection to the DS3 lines in the other direction. Once derived, the DS0 channels can be cross-connected to other DS0 channels, to the DSPU, or to test access equipment for transmission and signaling tests.

DS3 Hybrid Termination Feature (Continued)

Circuit Packs

Overview

As for the non-hybrid DS3U, Figure 1-26 shows a simplified block diagram of the DS3U/HDS3U equipment. The facility line interface (FLI) pack forms the interface with the DS3 coaxial lines on the facility side of the unit, and the Hybrid formatter (HFMT, the figure shows only an FMT) forms the interface with the CCN on the DACS II side. At the heart of the MXR - MIU functional group (MMFG) is the Hybrid-multiplexer (HMXR, again the Figure shows only an MXR) which contains the muldems (multiplexer-demultiplexers) to make the signal conversions between the DS1/E1 and DS3 (M13 muldem) and between the DS1/E1 and DS0 (M10 muldem). (The Multiplexer Interface Unit (MIU) is not supported within the Hybrid DS3U at this time. However, the MMFG notation has been retained for consistency.) The functions of these packs are detailed in the following subheadings for those packs.

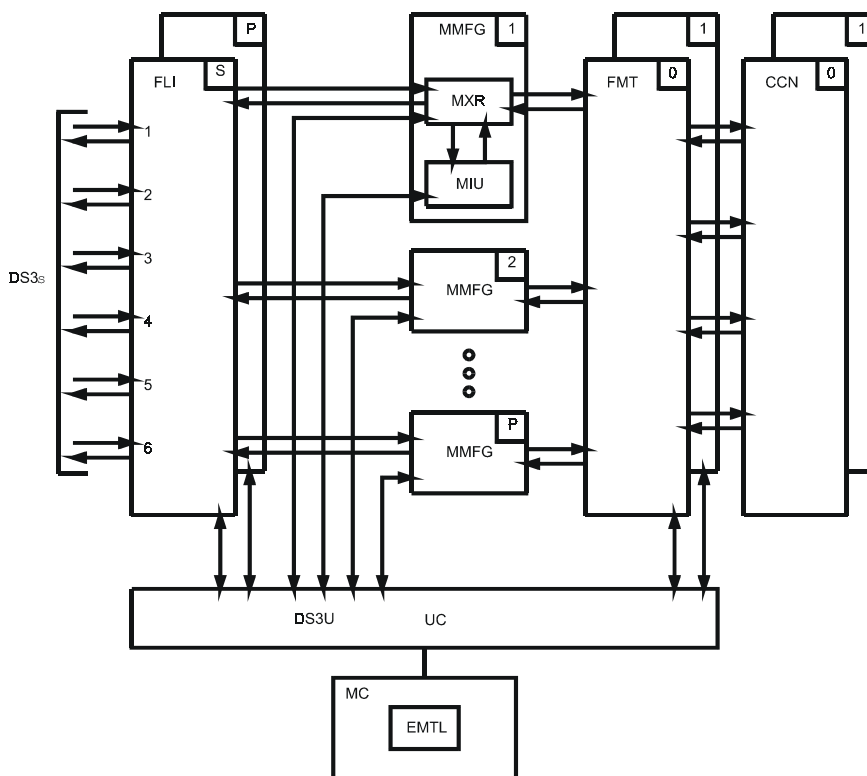


Figure 1-26. Simplified DS3U Block Diagram

(Continued on next page)

DS3 Hybrid Termination Feature (Continued)

Circuit Packs, Continued

FLI Pack

This pack terminates up to six DS3 coaxial lines for connection to the HMXR positions in the HDS3U. In addition to the signal termination that involves both impedance matching and signal level equalization, the FLI also:

- Performs bipolar/unipolar signal conversions
- Recovers DS3 line clock signal for HMXR demultiplexing functions
- Accomplishes DS3 signal loopback on an out-of-service HMXR when the pack is diagnosed.

Two FLI packs are provided in the HDS3U for protection switching. The line signals pass through relay contacts for the service and protection FLI packs in the unit so that the DS3 signals can be connected around the service FLI to the protection FLI if the service pack fails. The FLIs (working with the HFMT packs) also accomplish the HMXR protection switching on the line side of the MMFG packs. If any of the six MMFGs fails, the FLIs and HFMTs simultaneously switch DS3 data to the protection MMFG. Further details on the operation of the protection groups in the HDS3U are covered under a separate heading. Circuitry in the two FLIs maintains 75-ohm line impedance whether one or both of the unit FLIs are present.

(Continued on next page)

DS3 Hybrid Termination Feature (Continued)

Circuit Packs, Continued

HMXR Pack

Figure 1-27 shows an expanded block diagram of the data flow through the M13 and M10 muldemers in the MXR pack. The HMXR has an identical structure except that there are 21 E1 PCM transceivers in addition to the 28 DS1 PCM transceivers. At the FLI interface on the pack, the HMXR selects either the service or protection FLI to accomplish protection switching of the FLI on the DACS II side.

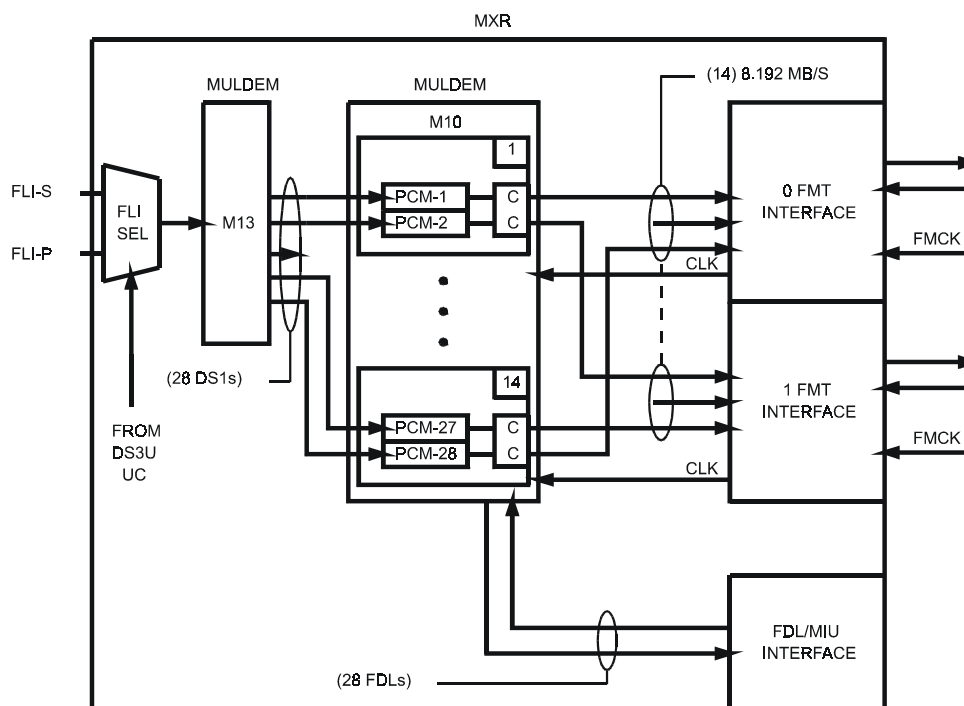


Figure 1-27. Simplified MXR Block Diagram

(Continued on next page)

DS3 Hybrid Termination Feature (Continued)

Circuit Packs, Continued

In the direction of transmission toward the CCN, the M13 muldem demultiplexes the DS3 signal into 28 DS1s, 21 E1s, or a combination thereof. The possible 28 DS1 signals are applied to the 28 DS1 PCM transceivers in the M10 muldem. The possible 21 E1 signals are applied to the 21 E1 PCM transceivers in the M10 muldem. Each DS1 transceiver reformats the 24-channel data and signaling into a 32-channel 4.096-Mb/s serial signal that is combined with the signal from the other transceiver for the pair in the channel controller circuit. Each E1 transceiver reformats the 32-channel data and signaling into a 32-channel 4.096-Mb/s serial signal that is also combined with the signal from the other transceiver for the pair in the channel controller circuit.

The channel controller multiplexes the two 4.096-Mb/s signals into a single 64-channel 8.192-Mb/s serial stream. The HFMT interface interleaves two pairs of these 8.192-Mb/s signals into a 16.384-Mb/s serial stream. Seven such signals are developed for the seven pairs of channel controller signals in this interface and are applied to both the 0 and 1 side HFMT packs. The 28 DS1 PCM transceivers and the 21 E1 PCM transceivers correspond to 28 or 21 NPC positions respectively in the HMXR that are provisioned by DACS II commands.

In the direction of transmission from the CCN, the HMXR performs the reverse functions to produce one DS3 signal from the DS0 channels delivered by the CCN. The DS0 channels received from the HFMT packs on the seven 16.384-Mb/s serial data streams are converted to fourteen 8.192-Mb/s signals that connect to the fourteen channel controllers of either the DS1 or E1 type. Signals are received from both HFMT packs, the channel controllers select the source based on the CCN status bus. The channel controllers further demultiplex those data signals into the 4.096-Mb/s signals and apply them to the respective PCM transceivers. The M13 muldem multiplexes the signals from the PCM transceivers into the 44.736-Mb/s unipolar stream that is applied to both the service and protection FLI packs. This M13 muldem contains the necessary DS1 or E1 buffers for storage and the circuitry for bit stuffing to accomplish the mux/demux functions.

(Continued on next page)

DS3 Hybrid Termination Feature (Continued)

Circuit Packs, Continued

HFMT Pack

The hybrid formatter pack contains HMXR interface circuitry, four receive formatters feeding the CCN, four transmit formatters from the CCN, a clock generator, and an HDS3U UC interface. In the direction of transmission toward the CCN, the interface produces fourteen 8.192-Mb/s streams from the seven 16.384-Mb/s signals from the HMXR. Circuitry for 2:1 selection of the 16.384-Mb/s signals from the service or protection HMXR packs accomplish protection switching of the HMXR pack on the CCN side. Each of the four receive formatters takes signals from the HMXR interface circuitry (of 1-1/2 HMXR packs) and applies them to one of the four receive ports to the CCN network. Each of these CCN ports is the standard interface provided for any of the IFTU or DSPU units in the frame. The four CCN ports are 1024 time-slot, 8.192-Mb/s ports.

In the direction of transmission from the CCN, each of the four transmit formatters receives a 1024 time-slot, 8.192-Mb/s signal from one of the four CCN ports. Signals from these hybrid formatter circuits are split into six signals that are connected to 2:1 selection circuitry for protection switching of this direction of transmission to the HMXRs. The selected signals are converted by the HMXR interface circuitry that produces the seven 16.384-Mb/s signals for the HMXR packs.

There are two HFMTs in the HDS3U, each one associated with one side of the CCN. These form a protection group to protect against the loss of service owing to the failure of a single HFMT pack. The HFMT is switched with the CCN side which means that its failure causes the CCN side to switch and that the HFMT switching follows the CCN switching (initiated by other causes). The clock generator in the HFMT produces a local frame sync and an 8.192-MHz clock. These signals are distributed from the HFMT on each CCN side to the six service HMXRs and one protection HMXR in the unit. The HMXR selects the timing signals from the active HFMT and in turn produces a 44.736-MHz clock that is used for timing the HMXR's DS3 output signal.

DS3 Hybrid Termination Feature (Continued)

Protection Switching

Description

Since one DS3 signal contains 28 DS1 signals, 21 E1 signals, or a combination thereof, protection switching is provided in the Hybrid DS3U to prevent the loss of service owing to the failure of any single circuit pack in the HDS3U. This switching is for a failure of any Multiplexer - Multiplexer Interface Unit pair.

The standby packs in the HDS3U protect against the loss of service owing to a failure of any single pack. The strategy is implemented by having the following protection groups:

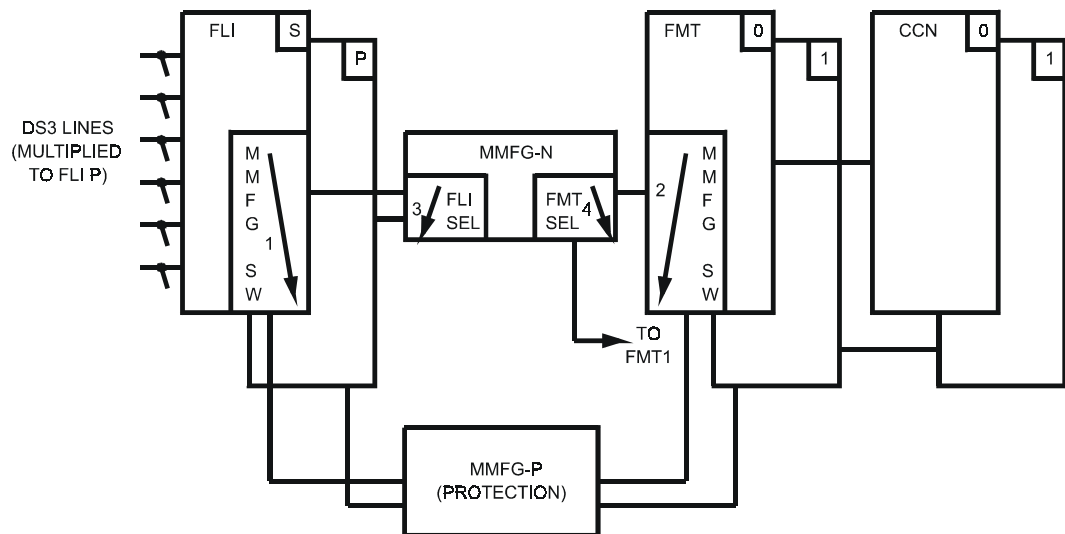
- The FLIs (1:1 protection)
- The MMFG (HMXR) group (1:6 protection)
- The HFMTs (1:1 protection)
- The power units.

(Continued on next page)

DS3 Hybrid Termination Feature (Continued)

Protection Switching, Continued

The first three failure groups are described in this section. Figure 1-28 shows how the protection circuitry is placed to accomplish switch around of service. The power protection is based on the availability of reserve power. Three power units in the HDS3U are diode OR'd together to supply the HDS3U although only two are required for the load.



NOTE: SWITCH CONNECTIONS 1 AND 2
REQUIRED FOR MMFG SWITCHING

Figure 1-28. Protection Switching Circuitry

FLI Protection Switching

The FLI protection switching maintains service if one of the FLI packs fails in the HDS3U. This switching is accomplished by relays in the FLI packs and switching circuitry in the HMXR packs. The switching is so fast that the transmission may only perceive a framing error. This switching is under control of the HDS3U UC, but if the UC is not present, the service FLI is automatically selected. If either FLI loses power or is physically disconnected, the select signal from the UC is overridden and the other FLI is automatically selected.

(Continued on next page)

DS3 Hybrid Termination Feature (Continued)

Protection Switching, Continued

MMFG Protection Switching

The MMFG protection switching maintains service if there is a failure of any single MMFG. There is one protection MMFG for the six service MMFGs. The MMFG includes the HMXR packs and will be switched out as a group if any pack in the group fails.

This switching is accomplished by circuitry on both sides of the HMXR in the FLI and HFMT packs. To accomplish this switching, the HDS3U UC coordinates the switching operations on these packs and loads provisioning into the protection HMXR to match that of the HMXR to be switched out. The overall operation is managed by a fail-safe, lock-and-key mechanism administered by the HDS3U UC. This mechanism is a step-by-step procedure in which the UC unlocks the involved packs and loads the provisioning information, but the switching can be locked again if any involved pack cannot be unlocked. Conversely, the UC can override locked conditions if one or more of the FLI and HFMT packs are failed. However, the procedure also prevents a failed UC from falsely initiating a switch. The HMXR switching is so fast that the transmission may only perceive a framing error.

The HFMT protection switching maintains service if one of the HFMT packs fails in the HDS3U. The 0-side and 1-side HFMT packs are part of the CCN failure group and are switched with the CCN side. The switching is controlled by the DACS II main controller that monitors the status of all CCN packs on both sides. If the MC is failed or out-of-service, the switching is automatically controlled by the error status of the CCN side (based on the status of all the packs on each side).

DSP Platform Feature

Description

The Digital Signal Processing (DSP) Platform is an operating system interface that allows particular features to be developed as applications. Software that runs on the DSP application circuit pack is called application software because it is treated by the DACS II as a separate and distinct application interacting with the DACS II generic software.

Connections

The DSP application runs on the TG193B circuit pack, which fits into any slot that an EDDC or EDCP card fits into. Channels on the DSP application card may be cross-connected to channels on facility terminating NPCs, as shown in Figure 1-29.

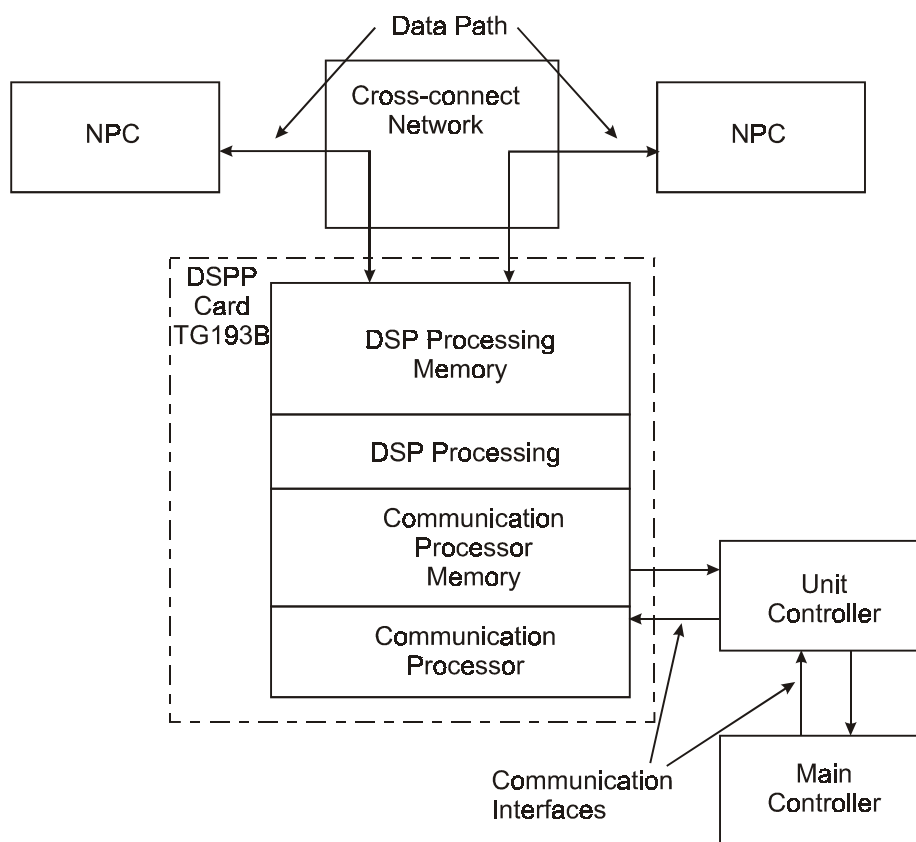


Figure 1-29. Basic DSP Platform Hardware Architecture

DSP Platform Feature (Continued)

DSP Processing

Data flows from the cross-connect network (CCN) into the DSP processing memory of the card. The DSP Processor, under control of the DSP memory, can manipulate the data. After manipulation, the data flows from the DSP processing memory back to the CCN.

The DSP Processing is controlled by a Communication Processor through the Communication Processor Memory. The Communication Processor communicates with the Unit Controller and the Main Controller of the DACS II through the Communication Interface (CI).

DSP Applications

Applications for the DSP application circuit packs are packaged and shipped as separately orderable software releases on PCMCIA cards. Documentation for the individual application is also separate from regular DACS II documentation and is shipped together with the PCMCIA cards containing that application.

The following three applications are currently supported:

- X.50/X.57 Subrate Application (international market)
 - Cross-connections and test access for Digital Data Networks (DDNs) that use the X.50/X.57 standard to support the following data rates: 1.2 kbit/s, 2.4 kbit/s, 4.8 kbit/s, 9.6 kbit/s, and 19.2 kbit/s. The 1.2 kbit/s rate is supported as a 2.4 kbit/s subrate circuit in "stuffed mode." The 19.2 kbit/s data rate is supported as two 9.6 kbit/s circuits.
 - DDS Subrate and Multipoint Junction Unit (MJU) Application (North American market), which introduces the following:
 - Subrate multiplexing and MJU capability at the 19.2 kbit/s data rate
 - An anti-streaming feature for MJU circuits.
 - Digital Multipoint Bridge (DMB) Application
 - Allows a limited number of DMB cross-connections on the DACS II without provisioning a DSPU.
-

DSP Platform Feature (Continued)

Time Slots

On a facility terminating module provisioned for international service, the time slot numbers are designated from 1-64. On a facility terminating module provisioned for North American service, the time slot numbers are designated from 1-63; excluding the time slots that are divisible by 4. Therefore, only 48 time slots are available for DSP application cards provisioned for North American service.

When input commands are passed through the DSP application, they must still adhere to the NPC addressing that is being used on the frame. The application retrieves the correct NPC addressing scheme from the DACS II.

Supported Cross-connection Types

All channels of facility terminating NPCs and application NPCs may be cross-connected to particular application NPCs except for the following:

1. SD111 (X.50/X.57 International Subrate application)
 - NPCs that carry clear unchannelized DS1 or E1 signals
 - Channels 0 and 31 on a 2 Mbit/s facility provisioned with CAS
 - Channel 0 on a 2 Mbit/s facility provisioned with NSA
 - Channel 24 of a DA type NPC grown with T1DM framing
 - Channel 24 of a DA type NPC grown with the DMI signaling option
 - Channels on an SP type NPC
 - Channels on an SD311 application.
2. SD311 (Digital Multipoint Bridge application)
 - NPCs that carry clear unchannelized DS1 or E1 signals
 - Channels 0 and 31 on a 2 Mbit/s facility provisioned with CAS
 - Channel 0 on a 2 Mbit/s facility provisioned with NSA
 - Channel 24 of a DA type NPC grown with T1DM framing
 - Channel 24 of a DA type NPC grown with the DMI signaling option
 - Channels on an SP type NPC
 - Channels on an SD111 application
 - Channels on an SD411 application.

(Continued on next page)

DSP Platform Feature (Continued)

Supported Cross-connection Types, Continued

3. SD411 (DDS Subrate and MJU application)
 - NPCs that carry clear unchannelized DS1 or E1 signals
 - Channels 0 and 31 on a 2 Mbit/s facility provisioned with CAS
 - Channel 0 on a 2 Mbit/s facility provisioned with NSA
 - Channel 24 of a DA type NPC grown with T1DM framing
 - Channel 24 of a DA type NPC grown with the DMI signaling option
 - Channels on an SP type NPC
 - Channels on an SD311 application.
-

DSP Application Card Error Recovery

The DACS II generic software analyzes the appropriate error summary registers of the DSP application card when interrupts are received from the card. After this analysis, if interrupts are received, the error recovery process initiates actions, such as:

- Alarm report
- Soft reset
- Card removal.

If an internal error is detected by the DSP application card, it can send a report to the error recovery service to request one of the following actions:

- Soft reset of the card (database re-download)
- Hard reset of the card (application card initialization and re-download)
- Removal of card
- Report of errors
- Log only.

The error recovery service maintains an audit trail for all application cards. If necessary, it will remove a card from service if repeated attempts of the same action do not resolve the problem on the card.

DSP Platform Feature (Continued)

Test Access

Test access does not monitor any connections inside a Digital Signal Processing (DSP) Platform application, such as the DDS Substrate an MJU application, the X.50/X.57 Substrate application, or the DMB application. However, test ports may be established to the DDS Substrate and MJU and DMB applications only via application commands to monitor or split circuits within the application.

If a test port has been established to an application, then that test port will always appear as a split connection in an invocation of the **RTRV-TACC-T1** command, regardless of whether that test port is in monitor, split, or release mode inside the application.

Broadcast TSO Feature

Broadcast TSO Cross-connection

This feature allows the ability to establish a broadcast cross-connection between TSO and non-TSO facilities. The source NPC must be provisioned as a PAxyz or THxyz type. The tributary NPCs must be grown as PAxyz, PBxyz, PCxyz, or THxyz types.

In an effort to prevent false framing resulting from this connection, the Frame Alignment Signal (FAS) is transformed by replacing it with the previous Non-Frame Word (NFW). This will keep the DACS II from detecting the start of a new frame in an incorrect time slot (non-TSO).

Broadcast TSO Test Access

Test access can be performed on any of the broadcast TSO to non-TSO connections. It is only allowed for the one-way connection of the TSO towards the non-TSO direction.

Broadcast TSO test access supports Monitor mode and test ports only.

Understanding Commands and Messages

Overview

This section is intended to provide the reader with the following information:

- Creating input messages
 - Decoding output messages
 - Description of NPC Addressing
 - Tips on using the On-Line help to create input messages.
-

Commands and Messages

Overview

DACS II is an interactive system controlled by software commands. There are two message languages that can be used by a user to communicate with DACS II. These are the PDS (Program Documentation Standards) and the MML (Man-Machine Language). Each language has a set of input commands and output messages that are used to communicate with DACS II. An *input command* is a communication between a user and DACS II. *Input commands* are sent from a user to DACS II. Output messages are originated by DACS II and sent to the user. This section gives an introduction to the format of the input commands and output messages.

Comprehensive discussions of input commands and output messages can be found in the PDS and MML versions of the DACS II command and message manuals. This section does not replace those documents, but it provides an overview to their information.

Commands and Messages (Continued)

DACS II Administrative Links

Local and Remote Link Connections

The DACS II can be administered (managed, operated) from a local terminal or remotely from an OS (operations system) connected via an administrative link. Six physical links can be connected to the DACS II frame. Links 1 through 4 are asynchronous, and links 5 and 6 can be asynchronous or synchronous depending on the communications interface. Sixteen virtual circuits may be established on a synchronous link.

Message Screening

A level of message screening can be assigned to each link. A user may choose to always receive responses to his/her commands, to receive selected messages, or to receive all messages from the other links. Autonomous messages may be blocked for a particular link to prevent other output messages from being interspersed among the user's messages.

Link Usages

Some examples of uses of an administrative link are:

- Common equipment and feature equipment provisioning and maintenance
- Equipment and channel status information
- Facility provisioning and maintenance
- Facility performance readings.

Output Messages

An output message is sent from the DACS II over one or more administrative links in response to one of the following occurrences:

- An input command

The output message reports that the input command was either completed successfully or denied; additionally, it may contain information requested by the input command. A *normal response* is an output message reporting a successful completion; an *error response* is an output message reporting a denial.

- An autonomous change in DACS II operation state

The output message reports the information on DACS II system operation state changes which includes alarms and other trouble indications. This output message is referred to as an *autonomous response*.

Commands and Messages (Continued)

Protocols

The link protocols used on the ICI (TM782) circuit pack are:

- SNIDER - used on Links 1, 2, 3, and 4
 - X.25 - used on Links 5 and 6
 - TCP/IP (TELNET) - used on Link 7.
-

Formatting Conventions

To interpret the commands presented in this document, you should be familiar with the formatting conventions presented in the following paragraphs. Each command is presented in actual input command format with accompanying explanations of keywords and variables providing sufficient information to fully understand the activity.

Uppercase and Lowercase Characters

In the command format of this manual, uppercase and lowercase letters distinguish between information that is constant (uppercase) and information that is variable (lowercase). Any character written in uppercase appears on the output device exactly as it is written.

Commands and Messages (Continued)

Delimiters

Delimiters are used to enclose a field in a command.

- [] Brackets indicate an optional field, one which may or may not be used in the input command or appear in the output message.
- { } Braces indicate a field containing alternate choices. For input commands, the user must select one of the choices. In output messages, braces indicate that only one of the fields within the braces will appear.
- < > The less than and greater than symbols enclose an abbreviation representing information too lengthy to display in the manual. These delimiters are never used in actual DACS II input commands or output messages but are used only in describing the command format in this manual.
- () Parentheses are part of the message text and must be entered where shown.

Using the Commands

Input Command

The input command requests an action to be performed; this command contains necessary information for DACS II to accomplish the requested action. The user has two basic modes for inputting commands: the command mode and the menu/prompt mode.

Command Mode

The command mode is for the experienced user or machine-machine operation. A command must be selected along with variables and entered within a single line. The user types a single-line command with the only carriage return occurring at the end. "Single-line" refers to the input *command*, not to the display of the command. *A long single-line command may extend for several lines on a display terminal.*

(Continued on next page)

Commands and Messages (Continued)

Using the Commands, Continued

Characters in an Input Command

DACS II accepts up to 250 characters of input per command. If an input command exceeds 80 characters (the standard width of most terminal screens), the input will continue on the next line of the display beginning with the 81st character. However, the command line can be broken at a convenient place by typing a backslash (\) followed by a carriage return. The display of the input command will continue on the next line, but the command will be interpreted as a single-line command. If 250 characters is not sufficient or if the user finds entering long commands error-prone, the single-line command can be broken up into several smaller commands.

Entering a carriage return without the backslash terminates the input and causes the line to be interrupted.

An exclamation point (!) A semicolon (;) also terminates the input command (i.e., DACS II interprets the carriage return and !; as the end of the command). If the carriage return is used, !; is echoed back to the terminal.

Menu/Prompt Mode

This optional on-line help mode assists the user in completing the input command. The menu/prompt mode aids the user by providing a list of alternative parameters or keywords.

The user starts the menu/prompt mode by entering a question mark (?) in the command line at the point in question. In response, DACS II presents a list of possible keywords. This list is presented to the user in menu or prompt form. At this point, the user may continue or return to the command line. If the user continues, he/she should refer to the detailed examples (menu form and prompt form) in the *On-Line Help Feature* section.

Commands and Messages (Continued)

Issuing Commands to a DSP Platform Application

Prefix Notation

Commands that are issued to a DSP application use a prefix notation that allows DACS II to:

- Recognize the command as an application command
- Transmit the command to the application.

Parsing of an application command is done by the application itself on the TG193B circuit pack. The following notation is used to issue an application command:

[I.14901] **EXC-DSPC::<npc No.>::<mml_application command>!**

where **<npc no.>** is the NPC number (non-hierarchical and hierarchical, respectively) of the application to be addressed.

Commands for Individual Applications

Commands for an individual application are documented separately for each application. The user should refer to this application documentation for a detailed description of individual application commands.

Utility commands for an individual application may be issued to all circuit packs in the frame that run that application by issuing the following variation of the previous command:

[I.14901] **EXC-DSPC::SDxyz::<mml_application command>!**

where **SDxyz** is the type designation for the particular application.

(Continued on next page)

Commands and Messages (Continued)

Issuing Commands to a DSP Platform Application, Continued

Supported Application Types

The following application types are currently supported:

- SD111 - X.50/X.57 International Subrate application (only MML is supported)
 - SD311 - Digital Multipoint Bridge (DMB) application
 - SD411 - DDS Subrate and Multipoint Junction Unit application.
-

Aborting an Input Command or Output Message

The **ABT-CMD** command is entered to interrupt a system response or abort an input command. If **ABT-CMD** is entered for a particular link, the output from this link will be interrupted just after **ABT-CMD** is entered or after one or two output lines. At other links, the output messages may or may not be interrupted. When the **ABT-CMD** option is used, the command generating the output will be completed unless the autonomous message, **CMD ERR ABT** appears.

For a nonabortable command, the output message will not be affected.

If a nonabortable message is being output but DACS II is executing an abortable command, **ABT-CMD** will stop the execution of the abortable command and **CMD ERR ABT** will be output on all links.

Commands and Messages (Continued)

Input Command Format

General Format

The general format of an input command is:

VERB [-MODIFIER] [-MODIFIER] : [xy] : [zz] : [ww] : [d] [, e] . . . [, z] ;

Explanation of Parameters and Delimiters

Brackets [] enclose modifiers, parameters, and optional information. Parameters give the specific information required by the command verb in order to execute that command. All parameters are positional within the command line.

: [xy] : [zz] : [ww] : [d] [, e] . . . [, z] ; represent the input parameters and are separated by colons, but if they are logically connected (also called group, block, field), they are separated by commas. The colon (:) is used as a parameter field delimiter.

Input commands are terminated with the semicolon (;) or a carriage return. If the carriage return is used, ; is echoed back to the terminal.

Parameter Rules

Input commands must be treated on a case-by-case basis. For example:

- If a parameter field has only a single value (letter or number), it is considered a keyword-defined parameter field.
- A keyword-defined parameter is not positioned inside the parameter field and the comma (,) is omitted. A double comma (,,) in any keyword-defined parameter field will be rejected.
- A value- (letter or number) defined parameter is positional inside a parameter block.

Example of an Input Command

RST-EQPT::05::12:NPC 097; PF

The above command asks DACS II to restore to service (**RST-EQPT**) network processing circuit number 97 (**NPC 097**) in DACS frame number 5 (**05**). The operator has arbitrarily assigned the sequence number 12 (**12**) to the command.

Commands and Messages (Continued)

Keywords

Description

Input commands consist of *keywords* combined with equipment and circuit identification.

A keyword is an alphanumeric string of characters representing:

- Verb (also called command or action verb)
- Entity identification
- Address specification
- Result of a command.

Command Verbs

Command verbs are keywords that tell the system to do something.

Entity Identification

Entity identification is a keyword that identifies a specific system or circuit pack within the system. For example, the keyword **NPC** refers to a network processing circuit pack.

Address Specification

Address specification is a keyword that refers to a specific address. **TP 03**, for example, refers to a specific test port (Test Port 03).

Commands and Messages (Continued)

Verbs

The general format of an input command is shown below with the various command keywords described in some detail:

VERB [-MODIFIER] [-MODIFIER] : [TID] : [EID] : [CTAG] : \
DATA PARAMETER BLOCKS ;

VERB is the command verb specifying what action the system is to perform: connect, audit, diagnose, etc. A *command verb* (also called an action verb) is sometimes in mnemonic form.

A verb can be followed by no **modifier**, one **-modifier**, or two **-modifiers** (each preceded by a hyphen). These modifiers represent the equipment and circuit identification and identify the physical entity within the frame or the data base entity upon which action is taken.

(Continued on next page)

Commands and Messages (Continued)

Verbs, Continued

Table 1-5 lists verbs, keywords, and modifiers.

Table 1-5. Verb/Keyword and/or Modifier(s)

Verb/Keyword	Meaning
ABT - CMD	Abort or terminate a previous input command that has not completed its execution.
ABT - PROC	Abort or terminate a currently active process or macro.
ALW - LPBK	Allow loopback or inhibit automatic switch protection.
ALW - SW	Allow switching or automatic switch protection.
CHG - LGN	Change password and/or user identification code.
CHG - RPATH - T0	Change the return path for the digroups and ranges beginning with the initial channels given in the TOX argument list.
CHG - TACC - T0	Change the modes of a test session under a specified test port.
CHG - TL - T0	Change the modes of a terminate and leave state of a circuit(s).
CONN - BDCST - T0	Connect a broadcast cross-connection (from source NPC) to a multiple number of other terminations in one direction of transmission.
CONN - CRS1 - T0	Connect a one-way cross-connect circuit or a range of one-way circuits.
CONN - CRS - T0	Connect a two-way cross-connect circuit or a range of two-way circuits.
CONN - HUB - T0	Connect a hubbing mode test access via test port kk with trunk conditioning to the T0 termination.
CONN - TACC - T0	Connect a monitor connection between a digroup (designated T0) and a test port (designated TP).
CPY - MEM	Copy data from one memory to another, such as PMEM to SMEM or RAM (WKG).
CRTE - CNFGRN	Create connectivity in the system data base.
CRTE - CRS	Create cross-connections in the cross-connect network.
CRTE - EQPT	Create equipment entities in the system data base.

Table 1-5. Verb/Keyword and/or Modifier(s) (Continued)

Verb/Keyword	Meaning
CRTE - LGN	Create or add a new user to the system.
DGN - EQPT	Diagnose equipment at the user's request and report details. Equipment such as cross-connect buffer (CCB), cross-connect network interface (CCNI), communications interface (CI/ICI), link number (LINK), main controller (MC), main processor (MP), network processing circuit (NPC), synchronizer (SYNC), time slot interchange (TSI), and FTU, DSPC, or DS3 unit.
DISC - BDCST - T0	Disconnect a broadcast connection (from source NPC) to a multiple number of other terminations in one direction of transmission.
DISC - CRS - T0	Disconnect a two-way cross-connect circuit or a range of two-way circuits.
DISC - CRS1 - T0	Disconnect a one-way cross-connect circuit or a range of one-way circuits.
DISC - EQPT	Disconnect (degrowth) equipment, multiple interface units, and/or multiplexers.
DISC - TACC - T0	Disconnect a test access session under a specified test port and restore the original cross-connection.
DLT - CRS	Delete a cross-connection from the system data base.
DLT - FPKG	Delete a feature package from the system data base.
DLT - LGN	Delete a password and user identification code. Only the superuser can invoke this command.
DLT - MACRO, MAP	Delete a macro or map.
DLT - PRMTR	Delete a parameter from the system data base.
ED - CNFGRN - EQPT	Edit the current connectivity and entity state of a specified equipment unit.
ED - CONN	Edit a connection.
ED - CRTE	Edit a create activity.
ED - DATE	Edit the system date and time clock.
ED - ADD - MAP	Enter NPCs into the map.
ED - DLT - MAP	Delete NPCs from the map.

Table 1-5. Verb/Keyword and/or Modifier(s) (Continued)

Verb/Keyword	Meaning
ED - OPT - T1	Edit the programmable thresholds for the facility performance parameters of an NPC.
ED - PRMTR - EQPT	Modify the provisioning information associated with equipment.
ED - PRMTR - LINK	Modify the provisioning information associated with user interface links.
ED - PRMTR - MAP , MACRO	Modify the existing map or macro with new information.
ED - PRMTR - NE	Modify the provisioning information associated with the DACS II network element.
ED - PRMTR - T0	Modify the provisioning information associated with digroup.
ED - STATE - EQPT	Edit the maintenance state of equipment in ways other than via a remove or restore function.
ENT - EQPT	Manually provision equipment entities (those that are not automatically provisioned).
ENT - MACRO , MAP	Manually create the open session of an alternate map or a macro.
EXC - MACRO , MAP	Execute the existing map or macro.
INH - LPBK	Inhibit an automatic loopback switch protection.
INH - SW	Inhibit an automatic switch protection.
INIT - LOG	Initialize the ERR log file.
INIT - REG	Initialize the DACS II registers.
INIT - SYS	Initialize the DACS II processor system.
LGN - USER	Allow the user to identify himself/herself to the system with his/her <id>.
LGT - USER	Allow the user to logoff from the system.
OPR - ACO - ALL	Cut off the office audible alarm indications without changing the local alarm indications. This function does not clear other alarm indicators and does not disable future alarms from sounding audibles (so a release ACO function is not needed).

Table 1-5. Verb/Keyword and/or Modifier(s) (Continued)

Verb/Keyword	Meaning
OPR - LPBK - T0	Request a loopback on a specified equipment unit or facility in the system.
RLS - LPBK - T1	Release the 1.544 Mb/s loopback.
REPT - ALM - EQPT	Report alarms associated with equipment failures.
REPT - ALMDET - EQPT	Supplement the information about the trouble generated by the REPT - ALM .
REPT - ALM - T0	Report alarms associated with DS0 facility failures.
REPT - CMPR - MEM	Report frame audit memory comparison mismatches.
REPT - DGN - EQPT	Report the results of diagnostic routines that have been initiated autonomously by the system.
REPT - EVT - EQPT	Report events which do not require alarm notifications but indicate the maintenance condition of the system.
REPT - RMV - EQPT	Report the autonomous removal of equipment from service.
REPT - RST - EQPT	Report the autonomous restoral of equipment to service.
REPT - SW - EQPT	Report the autonomous switch of an entity to protection (auto-removal) or to working (auto-restoration).
RMV - CNFGRN	Remove connectivity equipment from service.
RMV - EQPT	Remove equipment from service.
RMV - LINK	Remove a user interface link from service.
RST - CNFGRN	Restore connectivity equipment to service.
RST - EQPT	Restore equipment to service.
RST - PASSWD	Restore or recover the frame administrator password.
RST - LINK	Restore a user interface link to service.
RTRV - ALM - EQPT	Retrieve the current status of all automatically-reported equipment indicators (alarm or status).
RTRV - ALM - NE	Retrieve the current alarm state of the DACS II network element.
RTRV - ALM - T0	Retrieve the current status of all automatically-reported digroup indicators (alarm or status).
RTRV - BDCST - T0	Retrieve the cross-connect map for a single NPC or a range of NPCs.

Table 1-5. Verb/Keyword and/or Modifier(s) (Continued)

Verb/Keyword	Meaning
RTRV - BKUP - SCHED	Retrieve the scheduled autonomous backup from a primary memory to a local nonvolatile backup memory.
RTRV - COND - EQPT	Retrieve condition types associated with equipment indicators (alarm or status).
RTRV - COND - T0	Retrieve condition types associated with NPC indicators (alarm or status).
RTRV - CNFGRN - EQPT	Retrieve the current connectivity and entity state of a specified equipment unit.
RTRV - CRS - T1	Retrieve the cross-connect map information associated with NPCs.
RTRV - HDR	Retrieve the header information associated with the DACS II network element.
RTRV - LOC - EQPT	Retrieve a physical location of a circuit pack entity.
RTRV - LOG	Request to dump the contents of the log file.
RTRV - MAP - COM, EQPT	Query the map.
RTRV - MACRO - COM	Query the macro.
RTRV - OPT - T1	Retrieve the option (threshold) value for parameter.
RTRV - PRMTR - EQPT	Retrieve the provisioning information and service data associated with equipment.
RTRV - PRMTR - LINK	Retrieve provisioning information and service data associated with user interface links.
RTRV - PRMTR - MACRO, MAP	Retrieve information of the components associated with the macro or map.
RTRV - PRMTR - NE	Retrieve provisioning information and service data associated with the network element.
RTRV - PRMTR - T0	Retrieve the provisioning information and service data associated with NPC channels.
RTRV - PRVG - USER LINK	Retrieve privilege parameters associated with login users or link.
RTRV - RECOVY - EQPT	Retrieve information of the error source register (ESR) for a specific processor.

Table 1-5. Verb/Keyword and/or Modifier(s) (Continued)

Verb/Keyword	Meaning
RTRV-REG-EQPT	Retrieve information of the error source register (ESR) for the main processor.
RTRV-STATE-COM	Retrieve the common information associated with equipment (such as TLIs and SYNCs).
RTRV-STATE-EQPT	Retrieve the state information associated with equipment.
RTRV-STATE-T0	Retrieve the state information associated with NPCs.
RTRV-TACC-T1	Retrieve information about all test access activity of the test port.
RTRV-TACC-T0	Retrieve information about all test access activity in the system.
SCHED-BKUP-MEM	Schedule an autonomous backup from a primary memory to a local nonvolatile memory.
SCHED-PMREPT-ALL	Schedule an autonomous midnight performance monitoring report.
SET-ATTR-EQPT	Set the attributes that are associated with a specified event.
SET-PRVG-USER TERM	Assign user or link privilege for input prioritization and output screening.
STA-LOCL-RST	Transfer the database from PMEM to RAM or from SMEM to RAM.
SW-DX-EQPT	Request all digroup circuits to select data and clocks from cross-connect side A.

Commands and Messages (Continued)

Addressing Levels Overview

There are two different levels of addressing that occurs in commands:

- First level - The target identification (TID)
- Second level - The entity identification (EID).

Target Identification (TID)

The TID uniquely identifies the target as DACS II. An 11-character CLLI* code is the recommended value for the TID. If the CLLI code for a DACS II is not unique, the CLLI code can be augmented with additional characters (letters, digits, and hyphens) for a total of 20 characters. The TID is used only in applications of indirect routing. If direct routing exists between the user and the DACS II frame, the TID is not necessary. If a TID is incorrectly entered, whether it is required or not, the entire command will be denied.

Entity Identification (EID)

The EID identifies the particular entity within the DACS II frame and is composed of an equipment part and a facility part.

- Equipment

The format of the equipment part consists of PHYSICAL-{UNIT number}-{NUMBER}. The PHYSICAL description is a UNIT, MC, PWR, FTMI, etc., and, if necessary, a hierarchic logical address may be appended to it. Therefore, the equipment part may be a combination of the physical description and the logical address. UNIT number defines where the equipment (unit) exists. There can be up to six units in a 512 primary block circuit DACS II. NUMBER is the range or count of different entities that can exist in a unit. If the range is one for NUMBER, it will be "null" in the address.

- Facility

In this manual, the double and triple ampersand (&&,&&&) define a sequence of consecutive simple parameter arguments. It is possible to indicate the arguments by writing the lower and upper simple parameter arguments separated by && or &&&.

* COMMON LANGUAGE is a registered trademark and CLEI, CLLI, CLCI and CLFI are trademarks of Bell Communications Research, Inc.

Commands and Messages (Continued)

Input Command Control Characters

In addition to input commands, DACS II responds to the following input command control characters or symbols:

- **CONTROL-x** or **CTRL-x**. *Abandon message.* Depressing the CONTROL and the x keys simultaneously causes DACS II to abandon the message being entered and return the system prompt.
 - **CONTROL-h** or **CTRL-h**, **UNDERLINE**, **BACKSPACE**. *Erase last character.* Depressing the CONTROL and h keys simultaneously or depressing the UNDERLINE key or the BACKSPACE key causes DACS II to ignore the last character of a message and echo an underline (_). Entering *n* number of erase character symbols causes DACS II to ignore the last *n* characters of a message.
 - **BREAK**. *Interrupt output message.* The BREAK key interrupts an output message. The message continues after an allotted amount of time has passed or after the operator has finished entering an input command.
-

Commands and Messages (Continued)

Input Command Acknowledgement

After DACS II has received the execute character of the input command, an immediate reply will appear with one of the following acknowledgements:

- **PF** (Printout Follows). DACS II received the input command and processed it. An output message will soon be returned. The output message will report the results of the work initiated by the command. If the system cannot complete the command, the reason will be printed.
- **RL** (Retry Later). DACS II cannot execute the requested command now because it does not currently have system resources available.
 - The system could be temporarily overloaded.
 - The command queue could be excessively long.
 - The requested program may be busy, etc.

Wait, and enter the command later.

- **NG** (No Good). The basic format of the command is correct, but the system is in trouble. An example is when the MP is in the MCOND state.
- **NA** (No Acknowledgement). The command has been accepted by the parser, but processing control has been lost, thus making correct acknowledgement impossible. An example is when the communication interface (CI) has detected a local area network (LAN) failure.

If either NA or RL is sent as an input acknowledgement, a normal or error output message may not be sent. Also, if the input command itself is in error, the input acknowledgement will indicate this fact and either the normal or error message will not be sent. Additional Input Acknowledgements are listed in Table 1-6.

Table 1-6. Additional Input Acknowledgements

<i>Acknowledgement</i>	<i>Meaning</i>
?V<cr><lf>	Command code error
?D<cr><lf>	Parameter block error
?E<cr><lf>	Error in command, cannot be identified as either ?V or ?D
?P<cr><lf>	Parity error occurred in the input
?T<cr><lf>	The time between characters exceeded timeout threshold
?X<cr><lf>	Command aborted in response to a <cancel> or <break> from user.

Commands and Messages (Continued)

Output Messages

Description

There are three types of DACS II output messages:

- **Normal or Completion message**
Indicates the input command from the user has been executed and completed.
- **Error response or Denial message**
Indicates the input command has been denied and gives the reason or condition code for the denial.
- **Autonomous message**
Reports a change in the operational state of the DACS II.

An output message consists of one or more segments. Each message segment is in the following format: a *header line* followed by a *primary line* which may be followed by one or more *secondary lines*.

Commands and Messages (Continued)

Output Messages, Continued

Header Line

The header line contains the following information:

- Target identifier (TID)

The target identifier is the code for a DACS II frame and consists of up to 20 ASCII characters in length.

- Date

The date is the current date presented in the format of **yy-mm-dd** (that is, year-month-day), where **yy** is the last two digits of the year, **mm** is the month, and **dd** is the day of the month.

- Time

The time is the current time of day in the format of **hh:mm:ss** (that is, hour:minute:second), where **hh** ranges from 00 to 23, and **mm** and **ss** range from 00 to 59.

- Link number.

The link number is the administrative link/virtual circuit number in the format of **LINK-l[mm]** (that is, LINK-<administrative link number>[<virtual circuit number>]), where **l** ranges from 1 to 6 and **mm** ranges from 01 to 16. An autonomous response does not contain the link number.

(Continued on next page)

Commands and Messages (Continued)

Output Messages, Continued

Primary Line

The primary line contains the following information:

- Priority of action (PA)

The priority of action indicates the type of output message which could be either a response to an input command or an autonomous message generated by DACS II. The priority of action takes one of the following values in Table 1-7:

Table 1-7. Priority of Action Levels

Value	Meaning
*C	Immediate action, critical alarm (autonomous response)
**	Immediate action, major alarm (autonomous response)
*^	Action, minor alarm (autonomous response)
M^	Result of manual action (response to an input command)
A^	Autonomously generated message, not an alarm

Each caret (^) represents a space.

- Command code

The command code consists of the action verb and one or more possible modifiers.

- Entity identifier (EID)

- Correlation tag (CTAG)

In a normal or error response, the correlation tag is the same as that specified in the input command. The correlation tag in an autonomous response is generated by DACS II.

- Data parameters

The data parameters further specify the action performed on the entity.

(Continued on next page)

Commands and Messages (Continued)

Output Messages, Continued

- Termination report.

The termination report indicates whether the input command is successfully completed or denied, and it takes on one of the following values in Table 1-8:

Table 1-8. Command Termination Status

<i>Value</i>	<i>Meaning</i>
COMPLD	Input command completed successfully
DENY	Input command denied

Secondary Lines

The secondary lines contained in the output message are of two types:

- Free-format

The free-format secondary lines provide information for the user to understand the data contained in the fixed-format lines. The free-format secondary lines are enclosed by `"/**` and `"/.`

- Fixed-format.

The fixed-format secondary lines contain data generated by DACS II and are arranged in a format so as to be parsed by a machine. The fixed-format secondary lines are enclosed by double quotes (`"`).

Output Message Segment

The header line is the same for each message segment except for the time and possibly the date. The primary line is exactly the same for all message segments.

A multisegmented output message uses the greater-than sign (`>`) and the semicolon (`;`) to terminate the message segments. The greater-than sign is the terminating character (the last printable character) for the first and all intermediate message segments. The semicolon terminates the final message segment. A message segment should be no larger than 4096 bytes.

(Continued on next page)

Commands and Messages (Continued)

Output Messages, Continued

Normal Response

A normal response reports a successfully completed input command. The general formats of this type of output message are shown below. Each caret (^) represents a space. The brackets [] are not part of the actual output message, except for those surrounding the output message number.

Single-Segmented Normal Response Without Secondary Lines

```
^^^TID^yy-mm-dd^hh:mm:ss^LINK-l[mm]  
M^^VERB[^MODIFIER][^MODIFIER]::[b]:[CTAG]:[d][,e]...[,z]^COMPLD  
;
```

Single-Segmented Normal Response With Secondary Lines

```
^^^TID^yy-mm-dd^hh:mm:ss^LINK-l[mm]  
M^^VERB[^MODIFIER][^MODIFIER]::[b]:[CTAG]:[d][,e]...[,z]^COMPLD  
^^^/*^[output message number]^*/  
^^^/*^free-format secondary line^*/  
^^^"fixed-format secondary line"  
;
```

(Continued on next page)

Commands and Messages (Continued)

Output Messages, Continued *Multisegmented Normal Response*

```

^^^TID^yy-mm-dd^hh:mm:ss^LINK-l[mm]
M^^VERB[^MODIFIER][^MODIFIER]::[b]:[CTAG]:[d][,e]...[z]^COMPLD
^^^/*^[output message number]^*/
^^^/*^free-format secondary line^*/
^^^"fixed-format secondary line"
^^^"fixed-format secondary line "
      .....
      .....
^^^"fixed-format secondary line"
>
      .....
      .....
>
^^^TID^yy-mm-dd^hh:mm:ss^LINK-l[mm]
M^^VERB[^MODIFIER][^MODIFIER]::[b]:[CTAG]:[d][,e]...[z]\\
COMPLD
^^^/*^[output message number]^*/
^^^/*^free-format secondary line^*/
^^^"fixed-format secondary line"
^^^"fixed-format secondary line"
      .....
      .....
^^^"fixed-format secondary line"
;

```

The following example shows the normal response to a cross-connect command (Message No. I.11001) for cross-connecting channel 022 of the primary block circuit terminated on unit 01, module 1, NPC 01 with channel 015 of the primary block circuit terminated on unit 03, module 2, NPC 05. The output message (Message No. O.11001) does not contain secondary lines.

DACS2FRAME1 88-08-01 20:27:12 LINK-2

```

M  CONN CRS T0::01-1-01-022,03-2-05-015:CMDSEQ1:CUS::\\
NORM,NORM COMPLD
;

```

(Continued on next page)

Commands and Messages (Continued)

Output Messages, Continued

Error Response

An error response reports a denial to an input command. The general error response formats are similar to the normal response. The header line is exactly the same, and the primary line only differs in the termination report (DENY). The termination report DENY indicates that the input command was not executed. The first secondary line begins with a 4-character error code (mmmm). This error code describes the reason for the denial of the input command. A free-format secondary line can give more details about the error code.

Error Response Without Free-Format Secondary Line

```
^^^TID^yy-mm-dd^hh:mm:ss^LINK-l[mm]
M^^VERB[-MODIFIER][-MODIFIER]::[b]:[CTAG]:[d][,e]...[z]^DENY
^^mmmm
;
```

Error Response With Free-Format Secondary Line

```
^^^TID^yy-mm-dd^hh:mm:ss^LINK-l[mm]
M^^VERB[-MODIFIER][-MODIFIER]::[b]:[CTAG]:[d][,e]...[z]^DENY
^^mmmm
^^/*^[output message number]^*/
^^/*^free-format secondary line^*/
;
```

(Continued on next page)

Commands and Messages (Continued)

Output Messages, Continued

Autonomous Response

An autonomous response reports a change in the DACS II system state. The header line of the autonomous response contains the information of source identifier (SID), date, and time. The primary line contains an alarm code (ALMCDE), an autonomous message tag (ATAG), and a verb with modifiers. The verb is always REPT, indicating a report.

Single-Segmented Autonomous Response

```
^^^SID^yy-mm-dd^hh:mm:ss
ALMCDE^ATAG^REPT[-MODIFIER][-MODIFIER]
^^^/*^[output message number]^*/
^^^/*^free-format secondary line^*/
^^^"fixed-format secondary line"
;
```

Multisegmented Autonomous Response

```
^^^SID^yy-mm-dd^hh:mm:ss
ALMCDE^ATAG^REPT[-MODIFIER][-MODIFIER]
^^^/*^[output message number]^*/
^^^/*^free-format secondary line^*/
^^^"fixed-format secondary line"
^^^"fixed-format secondary line"
      .....
      .....
^^^"fixed-format secondary line"
>
      .....
      .....
>
^^^SID^yy-mm-dd^hh:mm:ss
ALMCDE^ATAG^REPT[-MODIFIER][-MODIFIER]
^^^/*^[output message number]^*/
^^^/*^free-format secondary line^*/
^^^"fixed-format secondary line"
^^^"fixed-format secondary line"
      .....
      .....
^^^"fixed-format secondary line"
;
```

(Continued on next page)

Commands and Messages (Continued)

Output Messages, Continued

The alarm code indicates an alarm for a trouble condition or a nonalarm condition for a DACS II system state change which does not trigger any alarms; it identifies the severity reported by DACS II and is shown in Table 1-9:

Table 1-9. Alarm Code Severity

<i>Value</i>	<i>Meaning</i>
*C	Critical alarm message
**	Major alarm message
*^	Minor alarm message
A^	Autonomous nonalarm message

The ATAG is used to check for a skipped output message and for correlation of previous autonomous messages. Some similarity exists with the correlation tag (CTAG) of an input command, but DACS II generates an autonomous message tag for all autonomous output messages. The form of this parameter is xxx[.yyy] where xxx is a 3-digit number and ranges from 050 to 099 ($050 \leq xxx \leq 099$). The yyy is optional; but if used, it may be used as a correlation tag with previous autonomous messages or for association with an action verb. For example, yyy can indicate the number of times that a particular REPT message has been issued ($001 \leq yyy \leq 999$). Value 000 is not used for xxx or yyy.

The free-format secondary line may assist the user in reading the data in the fixed-format secondary line. The message number above the line is used in referring to the manual for more detailed information.

The fixed-format secondary line contains actual message information. This information is described within the individual messages.

Commands and Messages (Continued)

MML Message Logging

Description

Output messages are reported over administrative links (via a terminal monitor). If a link goes down, output messages can be lost. The MML Message Logging feature allows the logging and storing of DACS II output messages for retrieval at a later time by an element management system (the I-2000 Controller for DACS II or the DACS II Network Director (DND)). Each message is stored with a sequence number which is reported with each message.



NOTE:

DACS II logs all autonomous messages and the output messages from commands that affect the system database. The output messages from commands that do not affect the system database (bad syntax messages and denial messages) are not logged.

When messages are retrieved from the Message Log, they can only be displayed in the MML language.

Customizing MML Message Logging

This feature can be turned ON or OFF. When the feature is turned ON, all appropriate output messages are logged and stored. When feature is turned OFF, no output messages will be logged or stored.

NPC Addressing

Overview

Two addressing or numbering schemes for network processing circuits are available:

- **Extended (nonhierarchical)**
- **Hierarchical.**

These numbering methods are used to provide a means of locating network processing circuits.

Extended Numbering

The **extended method** uses consecutive numbering to count through the units in the frame. Each unit has a fixed starting number (for example, 161 for unit 2; 321 for unit 3; 481 for unit 4). The starting number is the same for DS3U, FTU, or DSPU type units.

Within the nonhierarchical numbering scheme, there are 3-digit and 4-digit (extended) formats. The extended format is used for CEF frames. Therefore, NPC numbers represented by [s]abc in commands show both formats of the nonhierarchical numbering scheme (the [s] is used with a Capacity Expansion Frame).

Hierarchical Numbering

The **hierarchical method** uses a 3-part number: the unit number (uv), the module or group number within the unit (m), and the NPC number within the module (np) for a total of five digits (uv-m-np) with dashes separating the parts.

On-Line Help Feature

Description

The DACS II provides on-line assistance to the user when constructing commands at the terminal. This assistance is in the form of a menu-driven help routine. Different menus are displayed during the routine to provide the user with information on all the command fields. The menu items include:

- Verbs (Action or command)
- Applicable keywords for a command
- Possible choices or number range for a variable field
- Definitions of keywords.

An inappropriate selection will bring an error response.

The help routine can be used to the degree needed to complete the command: either through the entire command in every field or only for a particular part of the command. Using help to construct the entire command will probably not be applicable after some experience is gained at entering commands, since all the commands are documented and the direct entry of commands is so much faster.

There are two operators or keyboard controls used to invoke the different levels of the help routine. These operators are:

and .

The question mark is used to initiate the routine or to go into a deeper level (more explanation), and the is used to see the alternative choices at a given point. The dialogue can be terminated either by entering a CTRL-x or by completing the current command line when it is displayed.

On-Line Help Feature (Continued)

Using **SHIFT** **? /** By entering **SHIFT** **? /** , the user may ask DACS II for help at any time before or during the construction of an input command.

In the help mode, DACS II will offer the user menus for the selection of the message keywords and/or prompt for values of variable fields. Entering

SHIFT **? /**

provides a greater detail of information on the keywords or variables. If the list is long, DACS II prompts the user to enter **RETURN** to page through it.

When looking at a menu of choices for a command field, you can select an item and then either continue the process or return to the current position on the command line. To continue the process, use the question mark and the next menu will appear. To return to the command line, use the **RETURN** key. When looking at a prompt to enter a value, you can enter a value, look at the next choice, or request more information. To look at the next choice or to repeat the choices, use the **RETURN** key. To obtain more information in order to enter a value, use the question mark. You can continue this process using the question mark after each entry to complete and submit the command via the dialogue. Alternatively, you can use the **RETURN** key after an entry to obtain the current command line. Then, you can directly enter the remainder of the command line just as you would any DACS command.

On-Line Help Feature (Continued)

Constructing an Entire Command Using Help

Table 1-10 demonstrates how the menus in the help routine can be used for constructing a simple RTRV (retrieve) command. Only portions of the long menus are shown, but these examples serve to demonstrate how selections are made.

Table 1-10. Constructing Entire Command Using On-Line Help

Step	Action
1	To invoke the help routine at the start level, enter SHIFT ? / . Result: The DACS II responds with OK and the following menu: Select from: 1. ABT 2. ALW 3. CHG . . . 25. SW Selection?
2	To obtain more of an explanation, enter SHIFT ? / . Results: The DACS II responds with OK and the following list: Select from: 1. ABT (perform an abort) 2. ALW (perform an allow operation) 3. CHG (perform a change) 4. CONN (perform a cross-connection) . . . 21. RTRV (perform a retrieve information) Selection?

Table 1-10. Constructing Entire Command Using On-Line Help (Continued)

Step	Action
3	You may enter either 21 or RTRV followed by SHIFT <input <input="" type="button" value="I"/>. Result: The DACS II responds with this menu: Select from: 1. ALM 2. BDCST . . . 21. STATE 22. TACC Selection?
4	Again you select the desired verb modifier by entering either 21 or STATE. Result: The DACS responds with: Select from: 1. COM 2. EQPT 3. T3 4. TS
5	Select 2 and enter RETURN to see the command line developed so far. Result: The DACS II responds with: RTRV-STATE-EQPT
6	Enter SHIFT <input <input="" type="button" value="I"/> to see the next part of the command which is: 1-20 character Target Id (optional). Since the frame target ID is optional, it can be omitted which is confirmed by entering RETURN . This lists the alternative: go to address block (YES/NO)?

Table 1-10. Constructing Entire Command Using On-Line Help (Continued)

Step	Action
7	Answer Y and notice the double colons that are added to the end of the command line to close the target ID field. After this, enter a ? to obtain the next selection. Result: The DACS II responds with: units (YES/NO)? specify ftu unit number (YES/NO)? specify dspc unit number (YES/NO)? specify ds3u unit number (YES/NO)? timeslot interchange (YES/NO)?
8	Select 4, bringing the resultant command line. Result: Entering a question mark brings the response: 1-10 character Correlation Tag (optional) Again this is optional, and entering a RETURN requests that you go on to the next field EQPD block (YES/NO)?, which is the alternative to entering the Correlation Tag.
9	Answer Y and after the current command line is displayed, enter RETURN . Result: At this point, the DACS returns the command line as follows: RTRV-STATE-EQPT: :TSI: :EQPD; The command line is complete. EXECUTE (YES/NO)?
10	Now simply answer Y followed by RETURN and the command will be executed.
	Stop! End of Procedure.

On-Line Help Feature (Continued)

Obtaining Help at a Particular Point on a Command Line

DACS II's on-line help not only can be used to construct a command from scratch but it can also be used to obtain information on particular fields of a command. If the command format is not known or if the keywords or variables are not clear, the help dialogue, illustrated in Table 1-11, can be initiated at any point by entering

SHIFT **?** **/**.

Table 1-11. Obtaining Help at a Particular Point

Step	Action
1	Assume the following multipoint circuit CONN-CRS command was entered and denied because one of the NPCs named in the command must be an MB-type. The output message is: <pre> CONN-CRS-T0::01-1-01-01,01-1-02-03::TRSP::SYM,LEG::; ?D xy 90-10-15 13:12:10 LINK-4 M CMD ::::INERR,BAD_SYNTAX STOPPED /* [0.01131] */ /* CONN-CRS-T0::01-1-01-01,01-1-02-03::TRSP::=SYM=,LEG::; */ ; </pre> The equal signs around the word SYM indicate a problem because it is a multipoint bridge circuit.
2	Start over using the help command to obtain information. For example, enter the following: <pre>CONN-CRS-T0:: and ?</pre> Result: The DACS II responds with: <pre> ds3u unit number = OK ftu unit number = </pre> Since you are working with a DMB which is in a DSPU, if you enter only RETURN , the next option will be displayed, which turns out to be: <pre> dspu unit number = </pre>

Table 1-11. Obtaining Help at a Particular Point (Continued)

Step	Action
3	To get more information at this point, enter SHIFT ?. Result: The DACS II responds with: <pre>dspu unit number = OK /* decimal integer:, range 1 - 6 */</pre> This is where the trouble occurred; one of the NPCs in the range must be an MB-type.
4	Enter 05 after the equal sign. Result: The DACS II responds with: <pre>CONN-CRS-T0::05 dspu module number = OK /* decimal integer:, range 1 - 8 */</pre>
5	Enter 1 after the question mark. Result: The DACS II responds with: <pre>CONN-CRS-T0::05-1 dspu npc number = OK /* decimal integer:, range 1 - 2 */</pre>
6	Enter 1 after the question mark. Result: The DACS II responds with: <pre>dspu npc number = 1 OK CONN-CRS-T0::05-1-1 dmb conference number = OK /* decimal integer:, range 1 - 85 */</pre>
7	In response to dmb conference number =, enter the SHIFT ? to get more information. Result: The DACS II responds with: <pre>/*decimal integer, range 1 - 85 */ dmb conference number =</pre>
8	Enter your conference number (2 for example), and SHIFT ?.

Table 1-11. Obtaining Help at a Particular Point (Continued)

Step	Action
9	In response to ftu npc number = , enter a question mark to get more information. Result: The DACS II responds with: /* 3 digit decimal integer, range 01-10-1--04-4-32 */ ftu npc number =
10	Now that the difference between the NPC numbers for the DSPU and FTU sides of the circuit is clear, terminate the dialogue by entering the required ftu npc number followed by a RETURN . Result: This will cause the command line developed through the dialogue to be displayed. Enter the remaining information from the original command to complete the command.
	Stop! End of Procedure.

Equipment Precautions and Backup Strategies

Overview

This section is intended to provide the reader with equipment precautions and recommended memory card backup strategies.

Equipment Precautions

Electrical Discharges

The DACS II contains integrated circuits and other electronic equipment that are sensitive to static electrical discharges. Therefore, read the following caution BEFORE working on the system:



CAUTION:

Before touching any part of the frame including any circuit pack, reset switches, ACO, or LED TEST buttons, ALWAYS ground yourself to the frame with a WRIST STRAP provided with the equipment.

Equipment Precautions (Continued)

Removing and Installing Circuit Packs

Circuit Pack Damage

You can easily damage circuit packs and other hardware by improperly removing and installing them in the frame.

Removing/Installing 4-Inch and 8-Inch Circuit Packs

The following describes the correct method of physically removing and installing **4-inch** and **8-inch** high circuit packs with a single latch:

■ **To Remove a Circuit Pack:**

1. Unseat the circuit pack from the slot by carefully operating the latch.
2. Remove the circuit pack with one continuous motion. **DO NOT ROCK THE CIRCUIT PACK BACK AND FORTH.**

■ **To Install a Circuit Pack:**

1. Remove the plastic shipping protector from the contacts of new circuit packs.
2. Insert the circuit pack into the slot. **DO NOT ROCK THE CIRCUIT PACK BACK AND FORTH.**
3. Raise the latch.
4. Push on the bottom part of the circuit pack until the latch engages the slot. **DO NOT** push with the latch.

After the latch engages the slot, close the latch (push in) to seat the circuit pack. After closing the latch, with one thumb on the latch and the other thumb at the top of the circuit pack, press firmly to ensure that the circuit pack is fully seated.

(Continued on next page)

Equipment Precautions (Continued)

Removing and Installing Circuit Packs, Continued

Removing/Installing 12-Inch and 16-Inch Circuit Packs

The following describes the correct method of physically removing and installing **12-inch** high DS3U and **16-inch** high ECCN circuit packs:

■ **To Remove a Circuit Pack:**

1. Unseat the circuit pack from the slot by carefully operating both the top and bottom latch.
2. Remove the circuit pack with one continuous motion. **DO NOT ROCK THE CIRCUIT PACK BACK AND FORTH.**

■ **To Install a Circuit Pack:**

1. Remove the plastic shipping protector from the contacts of new circuit packs.
2. Insert the circuit pack into the slot and ensure that the latches are positioned to allow insertion. **DO NOT ROCK THE CIRCUIT PACK BACK AND FORTH.**
3. Open both latches.
4. Push on the lower part of the circuit pack until the latches engage the slot. **DO NOT** push with the latches.

After the latches engage the slot, close the latches (push down top latch, push up lower latch) to seat the circuit pack together. After closing the latches, with one thumb on the top latch and the other thumb on the bottom latch of the circuit pack, press firmly to ensure that the circuit pack is fully seated.

Circuit Pack Series Version

A suffixal number after a circuit pack indicates a series version. Higher series versions can be substituted in slots labeled for a lower series version but not the reverse.

Recommended Memory Card Backup Strategy

Memory Card Backups

Two memory cards should always be installed on the DACS II at all times except for short durations such as software installations and removing and restoring backed-up memory cards. The SMEM card should be removed on planned intervals for backup purposes and replaced with another memory card. In the event of a serious problem, the most recently backed-up memory card can then be used to restore the system to a known previous state.

For additional information, refer to GT 8.1 in Volume II.

Rotating Memory Cards

Lucent Technologies recommends that the customer maintains a procedure of rotating a set of memory cards such that a memory card is removed and then placed in a safe place at regular intervals. This interval should be daily if frequent changes are made on the system. This interval may be extended longer than a day, if changes to the system are infrequent and any changes could be re-created manually in case of a failure. The oldest backed-up memory card in the backup set should be recycled back into the system each time a new backup is done.

Off-Site Backup Storage

In addition to a regular backup process where the cards are stored in a safe place in a close physical proximity to the frame, it may be prudent to perform backups at less frequent intervals and store them in a safe "off-site" location to guard against a catastrophe such as a fire. This off-site strategy should follow the customer's internal standard operating procedures in guarding against such catastrophies.

Memory Card Tolerations

The life expectancy of PCMCIA memory cards is quite high. The memory cards used for DACS II have a Mean Time Between Failures (MTBF) of more than 30 years, if the number of write operations is modest. Write operations eventually wear the card out; the PCMCIA cards tolerate about 300,000 write operations before they wear out.

When estimating the life of the PCMCIA memory cards the user should consider that a single cross-connect command generates one write operation. A utility query only generates read operations, which do not wear the card out. Also, under normal conditions the cards should tolerate at least 10,000 physical removals and insertions before the contacts wear out. The customer should ensure that the contact area of the memory cards in particular is kept free of dust and chemical contamination while they are stored to guard against contact failure.

Contents

■ Background	2-1
Introduction	2-1
Objectives	2-2
Related Information	2-2
Related Tasks	2-3
■ Perform Visual Inspection	2-4
Overview	2-4
Inspect Front of Frame	2-4
Inspect Back of Frame	2-7
■ Check Circuit Pack Installation	2-8
Overview	2-8
Check Main Controller Installation	2-9
Check Sync Circuit Pack Installation	2-10
Check FTU Circuit Pack Installation	2-12
Check ECCN/CCN Circuit Pack Installation	2-18

(Continued on next page)

Contents

Check Power Units and Fuses	2-22
Check DSPU Circuit Pack Installation	2-36
■ Review Frame and Link Setup	2-38
Overview	2-38
Check Frame, Software, and Feature Setup	2-38
Check Link Setup	2-39
Check Status Register	2-43
■ Initialize and Test Alarms	2-44
Overview	2-44
Initialize Alarms	2-44
Test Alarm Operation	2-44
■ Check and Set Time-Clock, Facility Report Utilities, and Auto Backup Memory	2-45
Overview	2-45
Check and Set Time-Clock Utilities	2-45
Check and Set Facility Report Utilities and Auto Backup Memory	2-45
■ Check and Change Impedance Setting	2-49
Overview	2-49
Check 2.048-Mb/s Impedance Setting	2-49
Change 2.048-Mb/s Impedance Setting	2-49
■ Check NPC Timing Option Wiring	2-50
Overview	2-50
NPC Positions	2-50
■ Check Sync Switchover	2-51
Overview	2-51
Sync Status Output	2-51

(Continued on next page)

Contents

■ Check Cross-Connect Operation	2-52
Overview	2-52
Make Random Cross-Connect Tests Using A Digital Access Test Set	2-52
Make Random Cross-Connect Tests Using Unassigned Voice Terminal	2-53
■ Check for Equipped, Out-Of-Service, or Cross-Connected Circuits	2-55
Overview	2-55
Check for Equipped Circuit Packs	2-55
Check for Out-of-Service Circuit Packs	2-56
Check for Cross-Connect Circuits	2-57

Acceptance

2

Background

Introduction

Acceptance is the process that takes place after a DACS II has been physically installed. During acceptance, each portion of the DACS II frame, its wiring, its units/subassemblies and all associated circuit packs are installed and tested to verify whether the equipment is operational and conforming to system requirement and industry standards. This process is necessary to perform prior to making any attempts to provision service-carrying circuits.

When acceptance is completed, there should be no equipped circuits in the system.

Background (Continued)

Objectives

This chapter provides information to perform the following:

1. Check the installation of all unit circuit packs.
 2. Check the frame and administrative link setup.
 3. Initialize and test system alarms.
 4. Check the system clock, auto backup memory, and report facilities.
 5. Check the synchronizer switchover capability.
 6. Check the cross-connection operation.
-

Related Information

For related information, refer to:

- *DACS II Command and Message Manual*
 - *DACS II Installation Manual.*
-

Background (Continued)

Related Tasks

For related tasks, refer to the following General Tasks in Volume II:

■ Perform Visual Inspection	GT 2.1
■ Check Circuit Pack Installation	GT 2.2
■ Review Frame and Link Setup	GT 2.3
■ Initialize and Test Alarms	GT 2.4
■ Check and Set Time-Clock, Facility Report Utilities, and Auto Backup Memory	GT 2.5
■ Check NPC Timing Option Wiring	GT 2.6
■ Check Sync Switchover	GT 2.7
■ Check Cross-Connect Operation using a Digital Access Set	GT 2.8
■ Check Cross-Connect Operation using an Unassigned Voice Terminal	GT 2.9
■ Check for Equipped, Out-of-Service, or Cross-Connected Circuits	GT 2.10
-

Perform Visual Inspection

Overview

Prior to provisioning, an inspection of the frame should be done to check for obvious structural damage, such as dents, broken mountings, or broken/dented pins on the backplane panels. The following parts of the frame should be inspected thoroughly:

- Front of the Frame
 - Back of the Frame.
-

Inspect Front of Frame


Check front of frame for damage (such as dents or broken mountings) resulting from transporting and mounting of equipment.

(Continued on next page)

Perform Visual Inspection (Continued)

Inspect Front of Frame, Continued

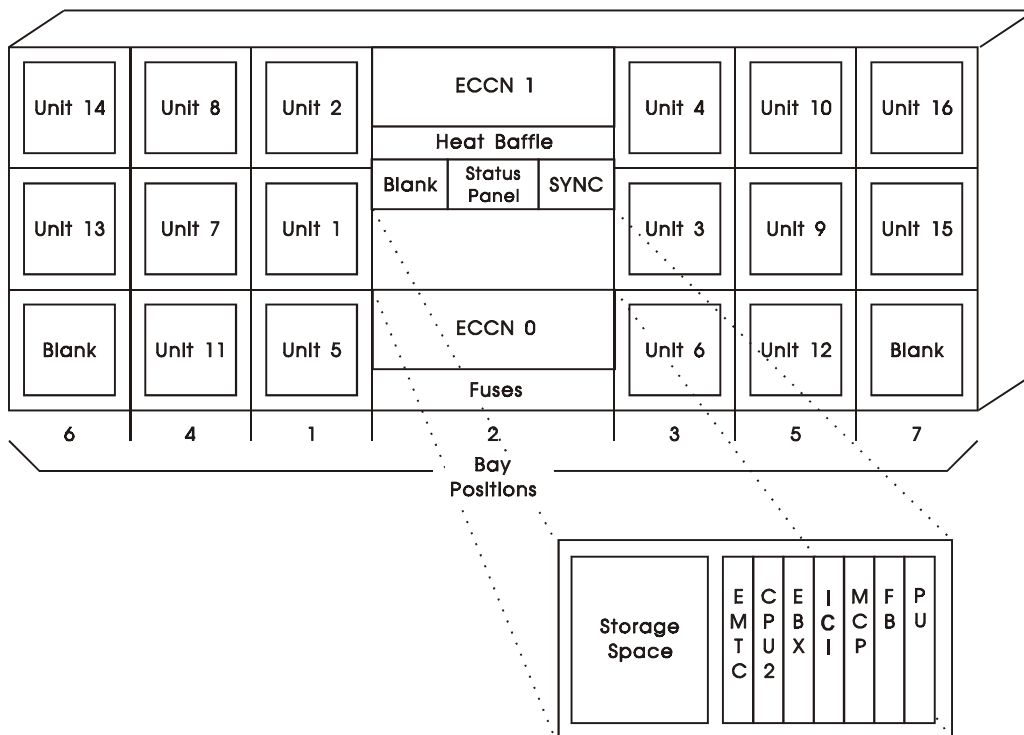Figure 2-1 shows the location of equipment in a fully equipped CEF (capacity expansion frame). Use this figure as a guide when looking over shelf mountings. The shelves must be properly aligned and securely mounted.



Notes:

- ECCN** = Enhanced Cross-Connect Network
- EMTC** = Expanded Maintenance Circuit
- CPU2** = Central Processing Unit 2
- EBX** = Enhanced Bus Extender
- ICI** = Intelligent Communication Interface
- MCP** = Main Controller Processor
- FB** = Fuse Board
- PU** = Power Unit

(Continued on next page)

Perform Visual Inspection (Continued)

Inspect Front of Frame, Continued

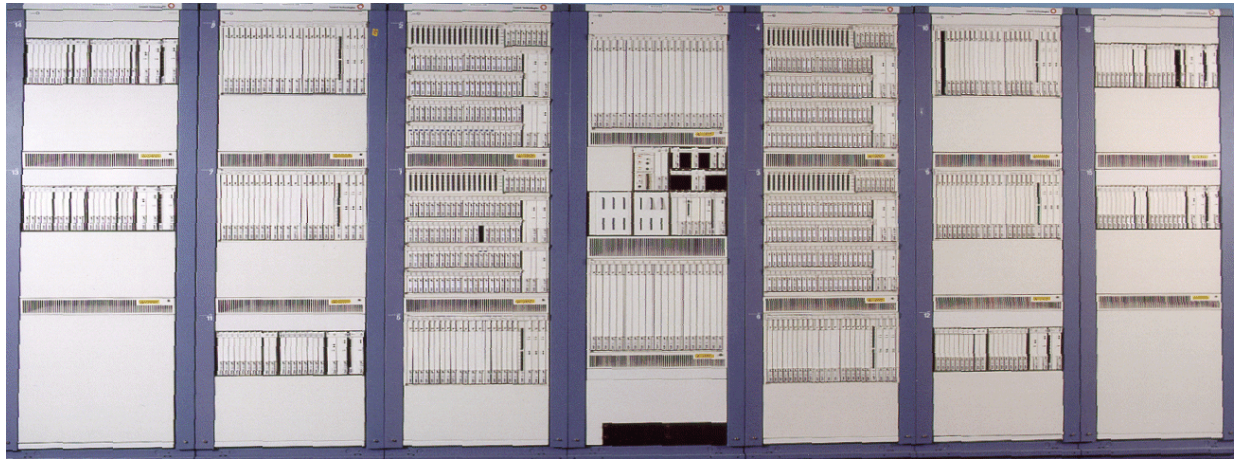


Figure 2-1. Fully Equipped CEF

Perform Visual Inspection (Continued)

Inspect Back of Frame

When inspecting the back of the frame, verify that the data link cable (for example, M25B) is connected to the TTY connector for the link (behind DACS II main controller). No adapter is required for RS-449 format, but ED-2C646-30 adapters are required for RS-232C format as follows:

- Use a G1 (group 1) or G14 adapter for any interface via data sets (asynchronous or synchronous).
- Use a G2 or G15 adapter for a direct TTY or CRT terminal (without data sets).
- Use a G3 or G8 adapter for local operations systems such as SARTS (Switched Access Remote Test System) or TABS (telemetry asynchronous block serial) protocol link (asynchronous 4-wire - data only without data sets).



NOTE:

The G1 and G2 adapters interoperate with RS232C per EIA Pub. 12 and give maximum receiver margin and minimum pulse distortion. The G14 and G15 adapters contain termination and biasing networks to detect disconnected or unpowered RS232C equipment. The G1 and G2 adapters are recommended for use in normal installations where the equipment remains powered up.

Check Circuit Pack Installation

Overview

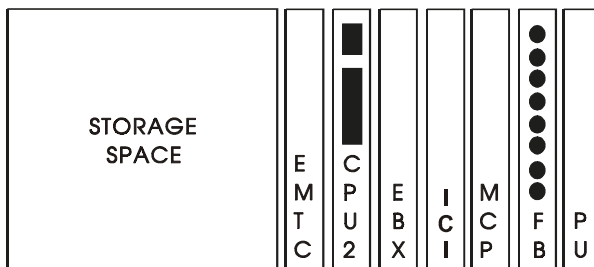
All circuit packs in the frame must be properly installed. Reports on the units can be retrieved to see how the circuit packs are configured. The different circuit packs in the frame that need checking are:

- Main Controller Circuit Pack
 - Synchronizer (Sync) Circuit Packs
 - FTU/IFTU/IFTU 2 Circuit Packs
 - ECCN/CCN Circuit Packs
 - Power Units and Fuses
 - DSPU Circuit Packs
 - DS3U/HDS3U Circuit Packs.
-

Check Circuit Pack Installation (Continued)

Check Main Controller Installation

Use Figure 2-2 to verify that the main controller installed properly.



Notes:

- ECCN** = Enhanced Cross-Connect Network
- EMTC** = Expanded Maintenance Circuit
- CPU2** = Central Processing Unit 2
- EBX** = Enhanced Bus Extender
- ICI** = Intelligent Communication Interface
- MCP** = Main Controller Processor
- FB** = Fuse Board
- PU** = Power Unit

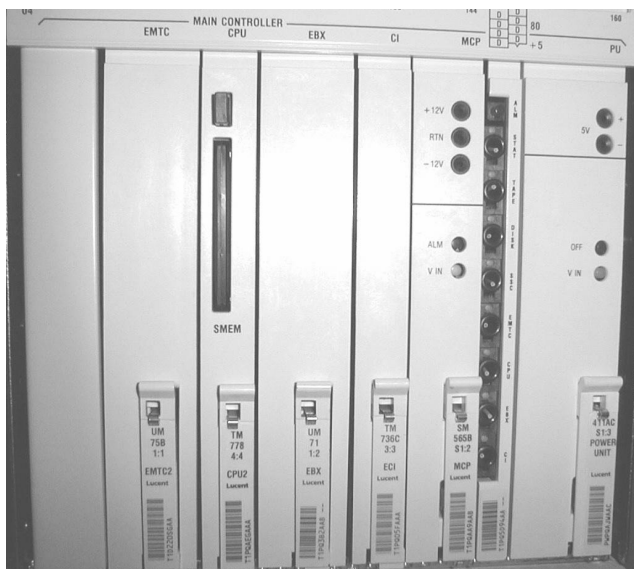


Figure 2-2. Main Controller

Check Circuit Pack Installation (Continued)

Check Sync Circuit Pack Installation

Sync Configuration and Type

When configuring the sync, determine the following information:

- The configuration, MASTER or SLAVED.
- The number and types (digital line, office clock, etc.) of incoming signals for slaved timing.
- Timing distribution, whether DACS II supplies timing to other equipment in the office.

This information can probably be retrieved from system layout information and installation records.

Sync Circuit Packs

Use Table 2-1 to verify time base (TB) and timing link interface (TLI) circuit pack equipment codes, growth types, and timing references.

Table 2-1. Sync Circuit Packs

Circuit Pack	Code	Growth Type	Description
TB	TG60	TB000	TBS3 (Time Base, Stratum 3) — Domestic Use
	TG61	TB100	TBCL (Time Base, CEPT Local Office)
	TG62	TB200	TBCT (Time Base, CEPT Toll Office)
	TG63	TB300	TBS2 (Time Base, Stratum 2) — Domestic Use
TLI	TG64	TExyz	TXB1 (DS1 Timing Extractor)
	TG65	TPxyz	TXB2 (2.048-Mb/s Primary Block Timing Extractor)
	TG66	TCxyz	TXCC (64 kb/s Composite Clock Timing Extractor)
	TG67	TUxyz	TXUC (Unipolar Clock Timing Extractor)
	TG68	TRxyz	TXRS (BSRF [Reference Frequency] Timing Extractor)
	TG70	TD1yz	TDCC (64 kb/s Composite Clock Timing Distributor)
	TG71	TD2yz	TDS2 (2.048-Mb/s Sine Wave Timing Distributor)
	TG75	TPxyz	TXBT (Primary Block Extractor, 75-Ohm)

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check Sync Circuit Pack Installation, Continued

Observe the following from Table 2-1:

- The TB types are TB000 for North American-stratum 3, TB100 for 2.048-Mb/s Interface - local office, TB200 for 2.048-Mb/s Interface - toll office, and TB300 for North American-stratum 2.
- The TLI types are given by the letter codes, and the signal formats are given by the associated number codes.

The SRC is the priority of TLI sources — from the highest (1) to the lowest (8).

Sync Configuration and Status

When retrieving information on sync circuit packs, use Table 2-2 while viewing the output report to determine the sync configuration and status.

Table 2-2. Sync Status Output

Message Field	Outputs and Meanings
CFR	MASTER or SLAVED sync configuration.
STRATUM	STR2, STR3, CEPT TOLL, or CEPT LOCAL.
MODE	HOLDOVER, FAST, or NORMAL for each DPLL.
SOURCE	Source for sync DPLL (HOLDOVER, TLI, or CRO; other side will be MATE).
IN SERVICE-DPLL	DPLL side 0 side 1, TB side 0 side 1, SOURCE side 0 side 1; presence of a 0 for side means out-of-service and a 1 means in-service.
ACTIVE-LINK	Gives TLI No. and its SSP (0, 1) which is active on each side (0 and 1).
PLL TIMING ERROR	Presence of 0 for side means no error and presence of 1 for side means error.

Check Circuit Pack Installation (Continued)

Check FTU Circuit Pack Installation

FTU Types

There are three types of FTUs:

- Facility Terminating Unit (Original FTU)
- Integrated Facility Terminating Unit (IFTU)
- Integrated Facility Terminating Unit 2 (IFTU2).

Use the illustrations of these units, Figure 2-3 through Figure 2-5, to verify that all FTU circuit packs are properly installed in the frame.

Figure 2-3 shows the FTUs used in the original side bays. Figure 2-4 and Figure 2-5 show the IFTUs used in flexible side bays.


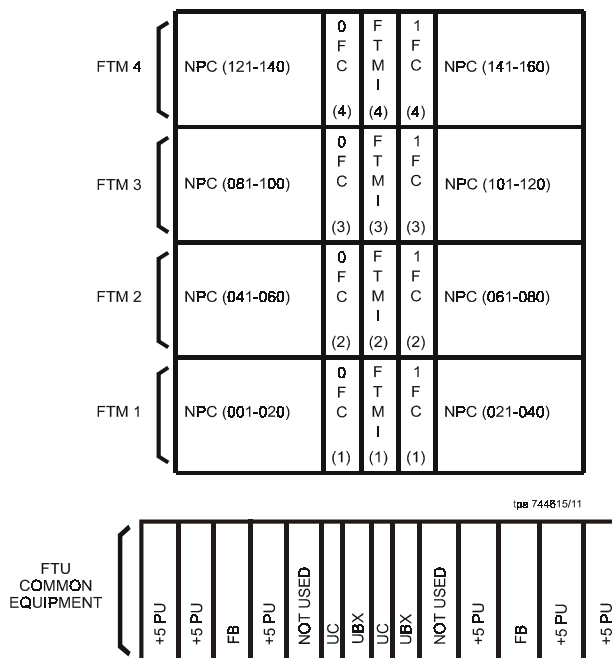


Figure 2-3. Original FTU

(Continued on next page)

Check Circuit Pack Installation (Continued)

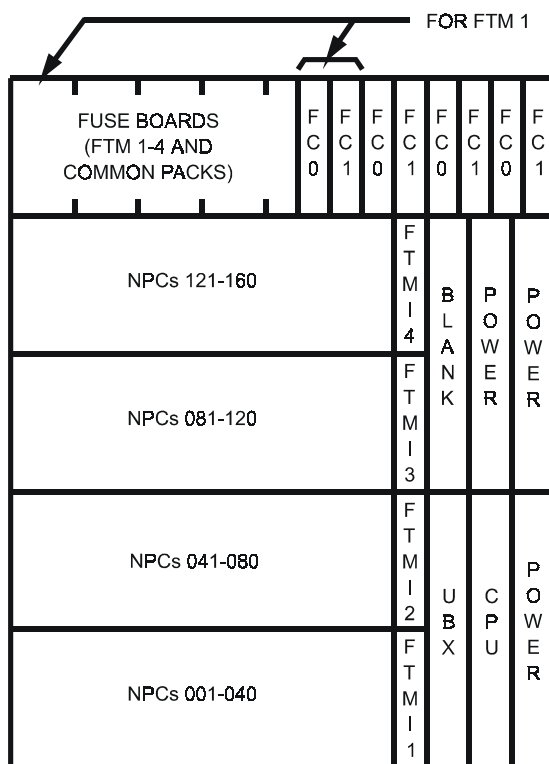Check FTU Circuit Pack Installation, Continued



tpa 789371/11

Figure 2-4. Integrated Facility Terminating Unit

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check FTU Circuit Pack Installation, Continued

FUSE BOARDS 1-17					P O W E R 1	P O W E R 2	P O W E R 3
FTM 4	NPCs 121-140	F C 0	F T M I 4	F C 1	NPCs 141-160	BLANK	
FTM 3	NPCs 80-100	F C 0	F T M I 3	F C 1	NPCs 101-120		
FTM 2	NPCs 41-60	F C 0	F T M I 2	F C 1	NPCs 61-80	U B X	C P U
FTM 1	NPCs 1-20	F C 0	F T M I 1	F C 1	NPCs 21-40		

Figure 2-5. Integrated Facility Terminating Unit 2

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check FTU Circuit Pack Installation, Continued

Unit and FTMI Numbering

The circuit pack dual primary cards (for example, DPC) for all equipped NPCs should be installed in the NPC slots. Each circuit pack card contains the circuitry for two NPCs.

For 2.048-Mb/s Interface and Enhanced 2.048-Mb/s Interface, the last eight NPCs (four DPCs) are not equipped.

Table 2-3 shows the unit and FTMI numbering in extended format only.

Table 2-3. NPC Location in Unit

Hierarchical NPC Number	Unit Number	FTMI Number
001-032	1	1
041-072	1	2
081-112	1	3
121-152	1	4
161-182	2	1
201-232	2	2
241-272	2	3
281-312	2	4
321-352	3	1
361-392	3	2
401-432	3	3
441-472	3	4
481-512	4	1
521-552	4	2
561-592	4	3
601-632	4	4
641-672	5	1
681-712	5	2
721-752	5	3
761-792	5	4
801-832	6	1

Table 2-3. NPC Location in Unit (Continued)

Hierarchical NPC Number	Unit Number	FTMI Number
841-872	6	2
881-912	6	3
921-952	6	4
961-992	7	1
1001-1032	7	2
1041-1072	7	3
1081-1112	7	4
1121-1152	8	1
1161-1192	8	2
1201-1232	8	3
1241-1272	8	4
1281-1312	9	1
1321-1352	9	2
1361-1392	9	3
1401-1432	9	4
1441-1472	10	1
1481-1512	10	2
1521-1552	10	3
1561-1592	10	4
1601-1632	11	1
1641-1672	11	2
1681-1712	11	3
1721-1752	11	4
1761-1792	12	1
1801-1832	12	2
1841-1872	12	3
1881-1912	12	4
1921-1952	13	1
1961-1992	13	2
2001-2032	13	3
2041-2072	13	4
2081-2112	14	1
2121-2152	14	2

Table 2-3. NPC Location in Unit (Continued)

Hierarchical NPC Number	Unit Number	FTMI Number
2161-2192	14	3
2201-2232	14	4
2241-2272	15	1
2281-2312	15	2
2321-2352	15	3
2361-2392	15	4
2401-2432	16	1
2441-2472	16	2
2481-2512	16	3
2521-2552	16	4

Check Circuit Pack Installation (Continued)

Check ECCN/CCN Circuit Pack Installation

Check Multibay Circuit Pack Installation

Use Figure 2-6 to locate the ECCN (expanded cross-connect network) in the switch bay. All multibay ECCN circuit packs in the frame must be properly installed. Procedures to install circuit packs are included in Volume II, Chapter 3, *Provisioning*.

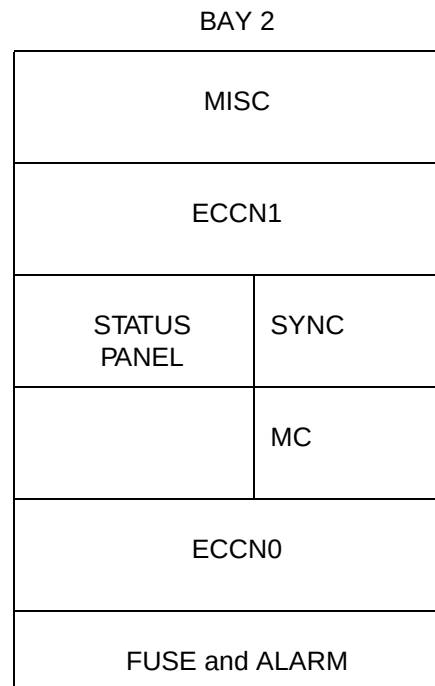


Figure 2-6. Switch Bay

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check ECCN/CCN Circuit Pack Installation, Continued

The BT (bus terminator, BBR1 code) packs must be securely installed in the designated far-left and far-right slots on each side of the network (ECCN0 and ECCN1). See Figure 2-7 for ECCN circuit pack location and Figure 2-8 for CCN circuit pack location.

BT 1	ETSI 01	ETSI 02	ETSI 05	ETSI 07	ETSI 08	ETSI 11	ETSI 13	ETSI 14	CCI	ETSI 16	ETSI 15	ETSI 12	ETSI 10	ETSI 09	ETSI 06	ETSI 04	ETSI 03	BT 2

tpa 789631/11

Figure 2-7. Location of Circuit Packs on ECCN Shelf

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check ECCN/CCN Circuit Pack Installation, Continued

Check Single-Bay Circuit Pack Installation

Use Figure 2-9 to check the location of circuit packs in the the CCN2 (cross-connect network).


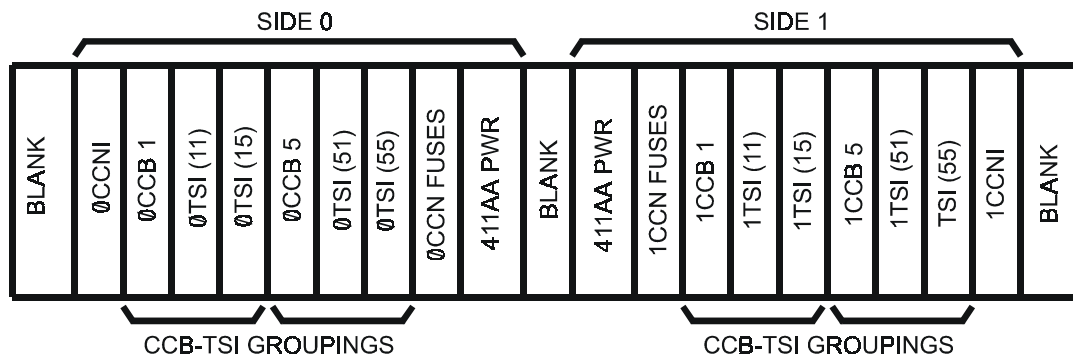


Figure 2-9. CCN2 Network

Check Circuit Pack Installation (Continued)

Check Power Units and Fuses

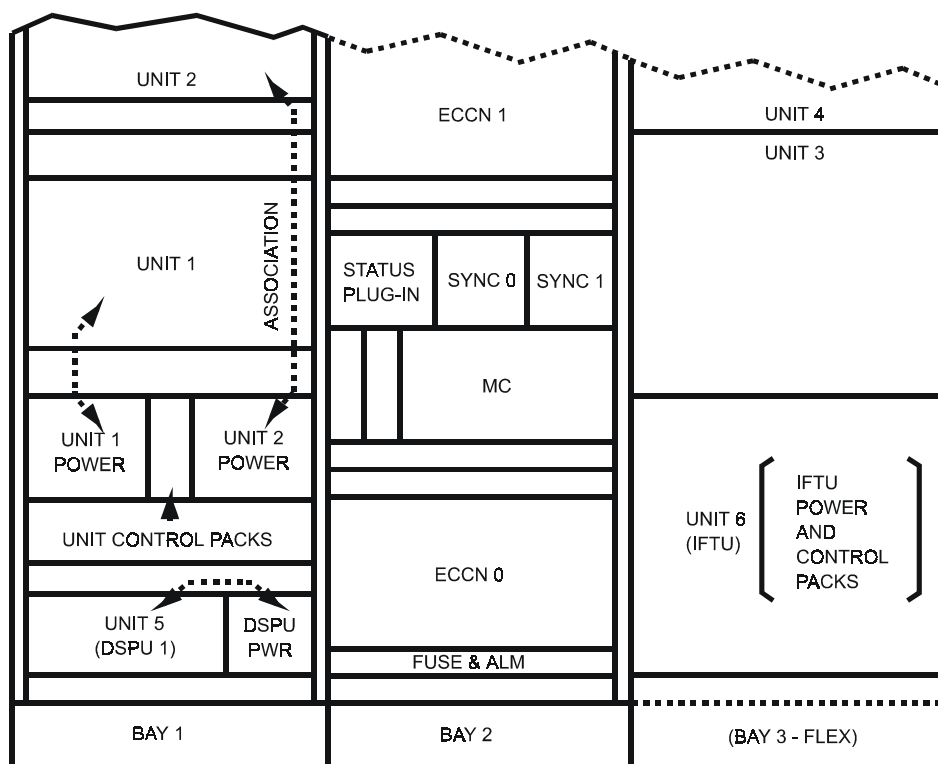All power units and fuses must be properly installed in the frame. Figure 2-10 illustrates power unit and fuse locations.



tpa 789728/11

Figure 2-10. Original Interface Bay (Bay 1)

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check Power Units and Fuses, Continued

Use the appropriate table from the following list to determine the required unit and fuses for the CEF or non-CEF frame.

Power Unit Summary (CEF)	Table 2-4
Power Unit Summary (Single-Bay)	Table 2-5
48-Volt Power (CEF)	Table 2-6 through Table 2-9
48-Volt Power (Single-Bay)	Table 2-10
Sync and Main Controller (CEF)	Table 2-11
Sync and Main Controller (Single-Bay)	Table 2-12
77-Type, FTU Fuses (Original Interface Bay)	Table 2-13
IFTU Fuse Assignment	Table 2-14
DSPU5 and DSPU6 Fuses (Original Interface Bay)	Table 2-15
DSPU Fuses (Flexible Bay)	Table 2-16
Power Unit Requirements	Table 2-17

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check Power Units and Fuses, Continued

Table 2-4. Power Unit Summary (CEF)

Circuit Block	CP Code	Designation/ Location	Equippage
EFC	SM565 411AA	MCP /04-144 PU /04-160	One. One.
SYNC	TG58 TG58	0SPU /14-106 1SPU /14-160	One. One.
ECCN 0	—	—	The CCI and ETSI packs have built-in power converters.
ECCN 1	—	—	The CCI and ETSI packs have built-in power converters.
IFTU (Flex Bay)	411AA 411AA 411AA	PU /x06-168 PU /x14-145 PU /x14-158	All PUs for unit supply a common bus; an extra PU is always provided for backup (for example, PUs 1 & 2 required for FTM 1).
IFTU 2	424AA	PU /16-132 PU /16-144 PU /16-156	Same as IFTU.
DSPU (Flex Bay)	SM566 411AA 411AA	DCP /x04-130 1PU /x04-142 0PU /x04-150	One. One. One.
FTU1/3	411AA 411AA 411AA	PU /x28-012 PU /x28-024 PU /x28-048	All PUs for unit supply a common bus; an extra PU is always provided for backup (for example, PUs 1 & 2 required for FTM 1). Location x = 1 for units 1 & 3 and x = 3 for units 2 & 4.
FTU2/4	411AA 411AA 411AA	PU /x28-124 PU /x28-148 PU /x28-160	Same as FTU 1.
DSPU5/6	SM566 411AA 411AA	DCP5/6 /X12-130 1PU /X12-142 0PU /X12-160	One. Location x = 1 for unit 5 and x = 3 for unit 6. One. One.
DS3U5/6 HDS3U	563A 563A 563A	1 PU/11-140 2 PU/11-148 3 PU/11-156	One. Location x = 1 for unit 5 and x = 3 for unit 6. One. One.

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check Power Units and Fuses, Continued

Table 2-5. Power Unit Summary (Single-Bay)

Circuit Block	CP Code	Designation/Location
MC	SM565	MCP/132-136
	411AA	PU/132-148
SYNC	TG58	0SPU/134-010
	TG58	1SPU/134-064
FTU1	411AA	PU/123-012
	411AA	PU/123-024
	411AA	PU/123-048
CCN0	411AA	0PU/149-078
CCN1	411AA	1PU/149-096
DSPU5	SM566	DCP5/109-130
	411AA	1PU/109-142
	411AA	0PU/109-160

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check Power Units and Fuses, Continued

Table 2-6. 48-Volt Power (CEF) Feed A Fuse

Feed A Fuse	Power Unit/CP			
	Type (Note)	Assignment	Size	Bead Color
A1	411A,SM566, 424AA, or 563A	Unit 1	70D,5A	Green
A2	411A,SM566, 424AA, or 563A	Unit 2	70D,5A	Green
A3	411A,SM566, 424AA, or 563A	Unit 3	70D,5A	Green
A4	411A,SM566, 424AA, or 563A	Unit 4	70D,5A	Green
A5-1	Indicator for A5-2	-	70G,0.5A	Red
A5-2	CCI,ETSIIs	ECCN 0	74J,7.5A	-
A6-1	-	-	-	-
A6-2	-	-	-	-
A7	411AA,SM566, 424AA, or 563A	Unit 5	70D,5A	Green
A8	TG58	0SPU (SYNC 0)	70D,5A	Green
A9	411AA,SM566, 424AA, or 563A	Unit 6	70D,5A	Green
A12	411AA,SM566, 424AA, or 563A	Unit 7 (0PU)	70D,5A	Green
A13	411AA,SM566, 424AA, or 563A	Unit 8 (0PU)	70D,5A	Green
A14	411AA,SM566, 424AA, or 563A	Unit 10	70D,5A	Green
A15	411AA,SM566, 424AA, or 563A	Unit 11 (0PU)	70D,5A	Green
A16	411AA,SM566, 424AA, or 563A	Unit 13 (0PU)	70D,5A	Green
A17	411AA,SM566, 424AA, or 563A	Unit 14 (0PU)	70D,5A	Green
A18	411AA,SM566, 424AA, or 563A	Unit 15	70D,5A	Green
A19	-	-	-	-

Note: The type depends on the type of unit (IFTU, DSPU, or HDS3U).

Table 2-7. 48-Volt Power (CEF) - Feed B Fuse

Feed B Fuse	Power Unit/CP			
	Type (Note)	Assignment	Size	Bead Color
B1	411A,SM566, 424AA, or 563A	Unit 1	70D,5A	Green
B2	411A,SM566, 424AA, or 563A	Unit 2	70D,5A	Green
B3	411A,SM566, 424AA, or 563A	Unit 3	70D,5A	Green
B4	411A,SM566, 424AA, or 563A	Unit 4	70D,5A	Green
B5-1	-	-	-	-
B5-2	-	-	-	-
B6-1	-	-	-	-
B6-2	-	-	-	-
B7	411AA,SM566, 424AA, or 563A	Unit 5	70D,5A	Green
B8	-	CRO	70D,5A	Green
B9	411AA,SM566, 424AA, or 563A	Unit 6	70D,5A	Green
B12	411AA,SM566, 424AA, or 563A	Unit 7	70D,5A	Green
B13	411AA,SM566, 424AA, or 563A	Unit 9 (OPU)	70D,5A	Green
B14	411AA,SM566, 424AA, or 563A	Unit 10 (OPU)	70D,5A	Green
B15	411AA,SM566, 424AA, or 563A	Unit 11	70D,5A	Green
B16	411AA,SM566, 424AA, or 563A	Unit 12 (OPU)	70D,5A	Green
B17	411AA,SM566, 424AA, or 563A	Unit 14	70D,5A	Green
B18	411AA,SM566, 424AA, or 563A	Unit 15 (OPU)	70D,5A	Green
B19	411AA,SM566, 424AA, or 563A	Unit 16 (OPU)	70D,5A	Green

Note: The type depends on the type of unit (IFTU, DSPU, or HDS3U).

Table 2-8. 48-Volt Power (CEF) - Feed C Fuse

Feed C Fuse	Power Unit/CP			
	Type (Note)	Assignment	Size	Bead Color
C1	411A,SM566, 424AA, or 563A	Unit 1 (1PU)	70D,5A	Green
C2	411A,SM566, 424AA, or 563A	Unit 2 (1PU)	70D,5A	Green
C3	411A,SM566, 424AA, or 563A	Unit 3 (1PU)	70D,5A	Green
C4	411A,SM566, 424AA, or 563A	Unit 4 (1PU)	70D,5A	Green
C5-1	Indicator for C5-2	-	70G,0.5A	Red
C5-2	CCI,ETSIIs	ECCN 1	74J,7.5A	-
C6-1	-	-	-	-
C6-2	-	-	-	-
C7	411AA,SM566, 424AA, or 563A	Unit 5	70D,5A	Green
C8	TG58	1SPU (SYNC 1)	70D,5A	Green
C9	411AA,SM566, 424AA, or 563A	Unit 6 (1PU)	70D,5A	Green
C12	411AA,SM566, 424AA, or 563A	Unit 7 (1PU)	70D,5A	Green
C13	411AA,SM566, 424AA, or 563A	Unit 8 (1PU)	70D,5A	Green
C14	411AA,SM566, 424AA, or 563A	Unit 9	70D,5A	Green
C15	411AA,SM566, 424AA, or 563A	Unit 11 (1PU)	70D,5A	Green
C16	411AA,SM566, 424AA, or 563A	Unit 12	70D,5A	Green
C17	411AA,SM566, 424AA, or 563A	Unit 13 (1PU)	70D,5A	Green
C18	411AA, SM566, 424AA, or 563A	Unit 16	70D,5A	Green
C19	-	-	-	-

Note: The type depends on the type of unit (IFTU, DSPU, or HDS3U).

Table 2-9. 48-Volt Power (CEF) - Feed D Fuse

Feed D Fuse	Power Unit/CP			
	Type (Note)	Assignment	Size	Bead Color
D1	-	-	-	-
D2	-	-	-	-
D3	-	-	-	-
D4	-	-	-	-
D5-1	-	-	-	-
D5-2	-	-	-	-
D6-1	-	-	-	-
D6-2	-	-	-	-
D7	411AA,424AA, or	+5 MC Power	70D,5A	Green
D9	SM565 (MCP)	MC Power	70B,2A	Orange
D10	-	MTC	70G,0.5A	Red
D12	411AA,SM566, 424AA, or 563A	Unit 8 (0PU)	70D,5A	Green
D13	411AA,SM566, 424AA, or 563A	Unit 9 (1PU)	70D,5A	Green
D14	411AA,SM566, 424AA, or 563A	Unit 10 (1PU)	70D,5A	Green
D15	411AA,SM566, 424AA, or 563A	Unit 12 (1PU)	70D,5A	Green
D16	411AA,SM566, 424AA, or 563A	Unit 13	70D,5A	Green
D17	411AA,SM566, 424AA, or 563A	Unit 14 (1PU)	70D,5A	Green
D18	411AA,SM566, 424AA, or 563A	Unit 15 (1PU)	70D,5A	Green
D19	411AA,SM566, 424AA, or 563A	Unit 16 (1PU)	70d,5A	Green

Note: The type depends on the type of unit (IFTU, DSPU, or HDS3U).

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check Power Units and Fuses, Continued

Table 2-10. 48-Volt Power (Single-Bay)

Fuse	Power Unit	
	Type	Designation/Location
A1	411AA	FTU1-First PU
A2	TG58	0SPU (Sync Power)
A3	411AA	0PU (DSPU Side 0 Power)
A4	411AA	CCN2 Side 0 Power Unit
B1	411AA	FTU1-Second PU
B2	TG58	1SPU (Sync Power)
B3	411AA	1PU (DSPU Side 1 Power)
B4	411AA	CCN2 Side 1 Power Unit
C1	411AA	FTU1-Third PU
C2	NONE	48 Volts to TLIs 1-4, Both Sides
C3	SM566	DCP (DSPU Power)
D2	411AA	+5 Controller Power
D4	SM565	MCP (Main Controller Power)
D5	NONE	48 Volts to MTC Pack

Table 2-11. Sync and Main Controller (CEF)

Power Unit/ Location	Associated Circuit Pack/Location	Power Unit/ Location	Associated Circuit Pack/Location
1SPU /14-160	0TLI2 /10-112		EBX /04-128
	0TLI3 /10-120		CPU2 /04-120
	0TLI4 /10-128		EMTC /04-112
	0DPLL /12-084		CI /04-136
	1TLI4 /10-136		EBX /04-128
	1TLI3 /10-144		CPU2 /04-120
	1TLI2 /10-152		EMTC /04-112
	1TLI1 /10-160		CI /04-136

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check Power Units and Fuses, Continued

Table 2-12. Sync and Main Controller (Single-Bay)

Synchronizer		Main Controller	
Power Unit/ Location	Associated Circuit Pack/Location	Power Unit/ Location	Associated Circuit Pack/Location
	0TLI2 /130-016		BX /132-100
	0TLI3 /130-024		CPU2 /132-108
	0TLI4 /130-032		MTC /132-120
	0DPLL /132-076		CI /132-128
	1TLI2 /130-056		BX /132-100
	1TLI3 /130-048		CPU2 /132-108
	1TLI4 /130-040		MTC /132-120
	1DPLL /132-084		CI /132-128

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check Power Units and Fuses, Continued

Table 2-13. 77-Type, FTU Fuses (Original Interface Bay)

Fuse (Note)	Associated NPCs			
	FTU 1	FTU 2	FTU 3	FTU 4
CA	1-8	161-168	321-328	481-488
CB	9-16	169-176	329-336	489-496
CC	17-24	177-184	337-344	497-504
CD	25-32	185-192	345-352	505-512
CE	33-40	193-200	353-360	513-520
CF	41-48	201-208	361-368	521-528
CG	49-56	209-216	369-376	529-536
CH	57-64	217-224	377-384	537-544
CI	65-72	225-232	385-392	345-552
CJ	73-80	233-240	393-400	553-560
CK	81-88	241-248	401-408	561-568
CL	89-96	249-256	409-416	569-576
CM	97-104	257-264	417-424	577-584
CN	105-112	265-272	425-432	585-592
CO	113-120	273-280	433-440	593-600
CP	121-128	281-288	441-448	601-608
CQ	129-136	289-296	449-456	609-616
CR	137-144	297-304	457-464	617-624
CS	145-152	305-312	465-472	625-632
CT	153-160	313-320	473-480	633-640
CU	(0)FC 1-4	(0)FC 1-4	(0)FC 1-4	(0)FC 1-4
CV	(1)FC 1-4	(1)FC 1-4	(1)FC 1-4	(1)FC 1-4
JW	FTMI 1-4	FTMI 1-4	FTMI 1-4	FTMI 1-4
JX	CPU, UBX	CPU, UBX	CPU, UBX	CPU, UBX

Note: The unit number that the fuses supply is identified on the fuse panel.

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check Power Units and Fuses, Continued

Table 2-14. IFTU Fuse Assignment

Fuse Boards	Designation (Note)	Associated Plug-Ins
ED-9C011-30 ED-9C011-30	+5A1 through +5A4 (1-4 through 17-20) +5A5	4 plug-ins (8 NPCs) per fuse (see +5A5 below)
ED-9C012-30 ED-9C011-30	+5A1 through +5A4 (1 through 20) +5A5, number 1 +5A5, number 2 +5A5, number 3 +5A5, number 4 +5A5, number 5	1 plug-in (2 NPCs) per fuse CPU UBX FTMI 0-Side FC 1-Side FC
Note: Designations +5A1 through +5A4 correspond to the modules (shelves) of the unit. The fuse numbers correspond to the plug-ins on the shelf (either 1 for 1 or 1 fuse per 4 plug-ins, depending on the fuse board).		

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check Power Units and Fuses, Continued

Table 2-15. DSPU5 and DSPU6 Fuses (Original Interface Bay)

DSPU5		DSPU6	
Fuse or PU/ Location	Associated Circuit Pack/Location	Fuse or PU/ Location	Associated Circuit Pack/Location
(SIDE 0) 0PU/112-160 JBH/112-148	NPC641 /112-006 NPC661 /112-012	(SIDE 0) 0PU/312-160 JBH/312-148	NPC801 /312-006 NPC821 /312-012
JBG	NPC681 /112-018 NPC701 /112-024	JBG	NPC841 /312-018 NPC861 /312-024
JBF	NPC721 /112-030 NPC741 /112-036	JBF	NPC881 /312-030 NPC901 /312-036
JBE	NPC761 /112-042 NPC781 /112-048	JBE	NPC921 /312-042 NPC941 /312-048
(SIDE 1) 1PU/112-142 JBD/112-148	NPC641 /112-074 NPC661 /112-080	(SIDE 1) 1PU/312-142 JBD/312-148	NPC801 /312-074 NPC821 /312-080
JBC	NPC681 /112-086 NPC701 /112-092	JBC	NPC841 /312-086 NPC861 /312-092
JBB	NPC721 /112-098 NPC741 /112-104	JBB	NPC881 /312-098 NPC901 /312-104
JBA	NPC761 /112-110 NPC781 /112-116	JBA	NPC921-310 NPC941 /312-116
DCP5 /112-130	CPU5 /112-056 DSPI5 /112-062	DCP6 /312-130	CPU6 /312-056 DSPI6 /312-062

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check Power Units and Fuses, Continued

Table 2-16. DSPU Fuses (Flexible Bay)

Fuse	Side	DSP Position (Note)
(Top)	0 DSPU	(Left Panel)
No. 1		First and second
No. 2		Third and fourth
No. 3		Fifth and sixth
No. 4		Seventh and eighth
(Bottom)	1 DSPU	(Right Panel)
No. 5		First and second
No. 6		Third and fourth
No. 7		Fifth and sixth
No. 8		Seventh and eighth

Note: Each fuse supplies two DSP circuit packs.

Table 2-17. Power Unit Requirements


Power Unit Code	Output Requirement (DC Volts)	Meter Connections	
		Positive Lead	Negative Lead
SM565	+11.75 to +12.25	+V2	RTN
	−11.75 to −12.25	−V2	RTN
411AA	+5.1 to +5.3	+	−
TG58	+4.75 to +5.25	+	−
	−4.95 to −5.45	+	−
424AA	+5.0 to +5.5	+	−
485AB	+5.1 to +5.4	+	−
SM566	+4.75 to +5.25	+	−
563A	+4.9 to +5.3	5.5V	GRD

Check Circuit Pack Installation (Continued)

Check DSPU Circuit Pack Installation

DSPU Shelf

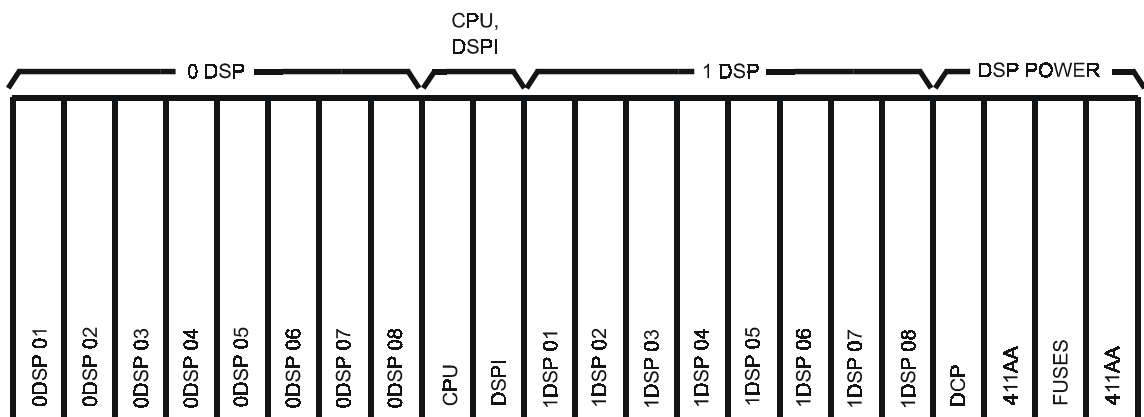Use Figure 2-11 to verify that all the DSPU circuit packs in the frame are properly installed.



tpa 813492/11



Figure 2-11. DSPU Shelf

(Continued on next page)

Check Circuit Pack Installation (Continued)

Check DSPU Circuit Pack Installation, Continued

DSPU Circuit Pack Positions

Use Table 2-18 to verify that all DSPU fuses are properly installed.

Table 2-18. DSPU Power Units and Fuses

Fuse	Side	DSP Position (Note)
(Top)	0 DSPU	(Left Panel)
No. 1		First and second
No. 2		Third and fourth
No. 3		Fifth and sixth
No. 4		Seventh and eighth
(Bottom)	1 DSPU	(Right Panel)
No. 5		First and second
No. 6		Third and fourth
No. 7		Fifth and sixth
No. 8		Seventh and eighth

Note: Each fuse supplies two DSP circuit packs.

Review Frame and Link Setup

Overview

Reports for the command prioritization and output message screening on administrative links are retrieved to check the frame and link configuration. A user can only query these settings on his or her link or login. Prioritizing and screening are assigned by the frame coordinator who can retrieve information for any or all user links; users can change their own output screening but not their input priority.

Prioritization determines which commands are available to the user and the priority (0, 1, 2, or 3) for processing different command groups. Screening allows reducing or increasing the number of output messages that appear on the link. Unless changed, all autonomous outputs and only the output messages for inputs on the same user link appear at that link.

Check Frame, Software, and Feature Setup

When retrieving a report on the frame configuration, use Table 2-19 to interpret the message fields.

Table 2-19. Configuration Meanings

Item	Meaning
FRAME <id>	Frame number recorded in software
UNIQUE IDENTIFIER	Unique frame identifier
SOFTWARE SERIAL NUMBER	Software serial number
TOTAL BAYS (aa)	Number of bays in frame configuration
BAY TYPE (f-ffff)	Bay type: 1 for original interface 2 for flexible, or dash for bay 2 and unequipped
TOTAL EQUIPPED (bb)	Total equipped units
CCN <id>	Type of cross-connect network: 1 for CCN-multibay, non-CEF, 2 for single bay, or E for ECCN
HEIGHT <id>	Height of bay: 0 for 7 feet (2133 mm) 1 for 11 feet 6 inches (3505 mm) 2 for 7 feet 2.6 inches (2200 mm)
UNIT:a,...	Unit designations: 1 for FTU Version 1, 2 for DSPU, 3 for DS3U, 4 for IFTU, or dash for not designated
NPCAD	NPC addressing: E for extended, H for hierarchical, or X for 4-digit extended

Review Frame and Link Setup (Continued)

Check Link Setup

Link Setup Options

The link setup options are:

- Priority Level (LEV)
- Screening (SCR)
- Restricted Maintenance
- Link Language (LANG)
- NPC Addressing (NPCAD)
- Macro Component
- Remove Link Privilege.

Priority Level

The priority level (LEV) determines which command group has priority in command completion over other command groups. The LEV options are:

- 0 - Excluded group
- 1 (lowest)
- 2
- 3 (highest).

The command groups are listed in Table 2-20 .

(Continued on next page)

Review Frame and Link Setup (Continued)

Check Link Setup, Continued

Table 2-20. Command Grouping

a Circuit Provisioning	b Equip Provisioning	c Maintenance
ALW-SW-T1	CRTE-CNFGRN-EQPT	DGN-EQPT
CONN-BDCST-T0	CRTE-EQPT	ED-PRMTR-EQPT
CONN-CRS-T0	CRTE-LGN	ENT-EQPT
CONN-CRS-TS	DLT-LGN	INIT-SYS
CONN-CRS1-T0	DLT-MACRO	RMV-CNFGRN-EQPT
CRTE-CRS-TS	DLT-MAP	RMV-EQPT
DLT-CRS-TS	DLT-PRMTR-EQPT	RST-CNFGRN-EQPT
DISC-BDCST-T0	ED-PRMTR-EQPT	RST-EQPT
DISC-CRS-T0	ED-PRMTR-LINK	SW-DX-EQPT
DISC-CRS-TS	ED-PRMTR-NE	-
DISC-CRS1-T0	DISC-EQPT	-
INH-SW-T1	SET-PRVG-TERM	
SW-TOPROTN-T1	SET-PRVG-USER	
SW-TOWKG-T1		
d Test Access	e Monitoring	f Common
ALW-LPBK-T1	CPY-MEM	CHG-LGN
CHG-TL-T0	ED-DATE	CHG-RPATH-T0
CHG-TL-TS	INIT-LOG	ED-CNFGRN-EQPT
CONN-HUB-T0	INIT-REG	ED-CONN-TS
CONN-TACC-T0	OPR-ACO-ALL	ED-CRTE-TS
CONN-TACC-TS	RST-PASSWD	ED-OPT-T1
DISC-TACC-T0	SCHED-PMREPT-ALL	ED-PRMTR-EQPT
DISC-TACC-TS	SET-ATTR-EQP	ED-PRMTR-MACRO/MAP
INH-LPBK-T1	STA-LOCL-RST	ED-PRMTR-NE
OPR-LPBK-T0	RTRV	ED-PRMTR-T0
OPR-LPBK-T1		ED-PRMTR-TS
RLS-LPBK-T1		ENT-MACRO/MAP
-	-	EXC-MACRO/MAP
-	-	SET-PRVG-TERM/USER
g Restricted Maintenance (RMON Option)		
RST-EQPT::MC::FRC; RST-EQPT::SMEM::CLR:FRC; DLT-FPKG; ED-PRMTR-ALMS::::{ON OFF}; ED-PRMTR-MSGLOG::::{ON OFF}; CPY-MEM::::PMEM,SMEM:PROG; INIT-MSGLOG::::RSTNUM; UPGRD-SYS; STA-LOCL-RST::::PMEM;		

(Continued on next page)

Review Frame and Link Setup (Continued)

Check Link Setup, Screening Options Continued

The screening option determines how the output from a command will be displayed. The screening options are listed in Table 2-21.

Table 2-21. Screening Options

Screening Option (n)	Definition
1	Only the responses to inputs entered on that particular link and by that user are output.
2	The responses to inputs entered on that particular link and by that user are output as well as all autonomous messages (default).
3	Responses to input messages on that particular link and by that user are output as well as responses from specified groups of action verbs from other links. The selection of message groups is made using the GR (a, b, c, d, e, f) field in the screening command.
4	Responses to input messages on that particular link and by that user, responses from specified groups of action verbs from other links (see above), and autonomous messages are output.
5	All responses to all input messages on all links are output as well as all autonomous messages.

Restricted Maintenance

Restricted maintenance option determines whether the user has permission to use commands in a particular category. The options are:

- RMON - Restricted Maintenance On
- RMOFF - Restricted Maintenance Off

(Continued on next page)

Review Frame and Link Setup (Continued)

Check Link Setup, Continued

Link Language

The language options for a link are:

- P - Program Documentation Standards (PDS)
- M - HuMan-Machine Language (MML)

NPC Addressing

The NPC addressing schemes are:

- E - 3-digit Extended Numbering (for example 001)
- X - 4-digit Extended Numbering (for example 0001)
- H - Hierarchical Numbering (for example 01101)

Macro Component Completion Messages

This option determines whether macro component completion messages are output. The options are:

- MCON - Macro Component On
- MCOFF - Macro Component Off

Remove Link Privilege

This option removes link privilege. The output options are:

- RLK A - Allowed
 - RLK I - Inhibited.
-

Review Frame and Link Setup (Continued)

Check Status Register

Use Figure 2-12 to see the bit definition (meaning of 1s) of the raw data field.

```
/*Protocol*/
"{S/X}"
/*Baud:Backspace:Alarm:Enq/Ack:Xon/Xoff:Mode,Software,Hardware status*/
"bb:e:k:q:x:m,p,hh"
```

Protocol	=	S for Snider (Async) or X for X.25 (Synchronous)
bb = <baud>	=	03,06,12,24,48,96
e = <backspace>	=	0 for true backspace, 1 for underscore backspace, or dash (—) for synchronous link.
k = <alarm>	=	1 (link alarm defined as minor) or 2 (defined as major)
q	=	ENQ/ACK protocol 0 disabled, 1 enabled (default)
x	=	Xon/Xoff protocol 0 disabled (default), 1 enabled.
m = <mode>	=	0 (idle), 1 (input message), or 2 (output message)
p = <software>	=	0 (protocol exchanges in-service) or 1 (protocol exchanges out-of-service, which slows down DACS II response time)
hh = <hardware>	=	03 (hardware in-service) or 04 (hardware out-of-service)

ADDITIONAL LINES FOR X.25:

```
/*Data Link Layer parameters: Frame address*/
"K-b,T1-eee,T3-ggg,N2-aa:{A/B}"
/*Packet Layer parameters*/
"W-c,P-ddd,T20-iii,T22-jjj,T23-kkk,T25-lll,T26-mmm,R20-nn,R22-p,R23-q,R25-r"
/*PVC and SVC range: PVC and SVC group number*/
"ppss:gghh"
```

TCP/IP FORMAT:

```
<xy> yy-mm-dd hh:mm:ss [LINK-<link number>]
M RTRV PRMTR LINK::j:[ww] COMPLD
/* [S/X] */
/* Protocol */
"I"
/* Baud:Backspace:Alarm:Enq/Ack:Xon/Xoff:Mode,Software,Hardware status
*/
":e:k::,xxxx,hh"
```

Figure 2-12. Link Status Register

Initialize and Test Alarms

Overview

Alarms must be initialized and tested to verify their performance during a failure, such as a loss of signal or framing.

Initialize Alarms

Alarms must be checked to insure that they have been set up to match your frame configuration. A command is used for this purpose.

If you experience a denial when sending the command to the DACS II and if the input command was entered correctly, refer trouble to the installer.

Test Alarm Operation

Alarms must be tested to insure that they are operational and will effectively indicate troubles when they occur on the DACS II.

The DACS II must be reset when testing the office alarm. If the office alarm still does not operate after the reset completes, refer trouble to installation group or clear trouble in office alarm wiring.

Check and Set Time-Clock, Facility Report Utilities, and Auto Backup Memory

Overview

The time-clock utilities, the facility report utilities, and the auto backup memory must be verified and, if necessary, set/reset prior to provisioning service on the DACS II.

Check and Set Time-Clock Utilities

The time-clock utilities are used to set the time and date on the DACS II frame.

Check and Set Facility Report Utilities and Auto Backup Memory

The facility report utilities are used to specify the items included in the daily report message, to set the time the daily report message will be issued, and to set up the backup memory report. For additional information on facility reports, refer to Volume I, Chapter 9, *Performance Monitoring*.

To select the DS1 facility reports, the FAC parameter is specified in the command. FAC is a hexadecimal word (abcdef) representing 24 bits that specify performance parameters.

To select the E1 facility reports, the PRIM parameter is specified in the command. PRIM is a hexadecimal word (abcd) representing 16 bits that specify performance parameters.

(Continued on next page)

Check and Set Time-Clock, Facility Report Utilities, and Auto Backup Memory (Continued)

Check and Set Facility Report Utilities and Auto Backup Memory, Continued

Study hexadecimal word construction per Figure 2-13 and Figure 2-14 for PRIM and the following examples. Whatever parameters are selected will show up in the AUD PBA command and the midnight report. Construct the hexadecimal word as follows:

- Decide which parameters are needed using Figure 2-13 and Figure 2-14. Each parameter is represented by a digit in the hexadecimal word.
- Work with each part of the hexadecimal word (a, b, c, d) individually.
- Construct a 4-digit binary number for each part by placing a 0 in each position representing an unwanted parameter and a 1 in each position representing a wanted parameter.

Remember that the bit positions read right-to-left, low-to-high (i.e., the bit positions for b are: 11 10 9 8).

For example, to select MER and FRER, the 4-digit binary number for part b is 0011.

Repeat this step for each part.

- Convert each 4-digit binary number to a hexadecimal character using the following chart:

0000 = 0	0100 = 4	1000 = 8	1100 = C
0001 = 1	0101 = 5	1001 = 9	1101 = D
0010 = 2	0110 = 6	1010 = A	1110 = E
0011 = 3	0111 = 7	1011 = B	1111 = F

- Put the 4 hexadecimal characters together in the proper order (a b c d) to create a 4-digit hexadecimal number.

EXAMPLE: To select PBA, ERS and DM for PB/PC NPCs, the 4-digit binary numbers would be: %a = 0000; %b = 0000; %c = 0101; %d = 0001. The resulting PRIM hexword is 0051.

**Check and Set Time-Clock, Facility
Report Utilities, and Auto Backup
Memory (Continued)**

**Check and Set
Facility Report
Utilities and Auto
Backup Memory,
Continued**

Hex Digit	Bit	Parameter
d	0	PBA
	1	LOFA
	2	SLIPS
	3	US (Unavailable Seconds)
c	4	ERS (Errored Seconds)
	5	SERS (Severely Errored Seconds)
	6	DM (Degraded Minute)
	7	CRC4
b	8	MER (Multiframe Error)
	9	FRER (Frame Bit Error)
	10	MBER (Minor Bit Error)
	11	Not Used
a	12	Not Used
	13	Not Used
	14	Not Used
	15	Not Used

Figure 2-13. PRIM Hex-Word Construction for PB/PC NPCs

(Continued on next page)

Check and Set Time-Clock, Facility Report Utilities, and Auto Backup Memory (Continued)

**Check and Set
Facility Report
Utilities and Auto
Backup Memory,
Continued**

Hex Digit	Bit	Parameter
d	0	PBA (Primary Block Alarm)
	1	OFS (Out-of-Frame Seconds)
	2	CSS (Controlled Slip Seconds)
	3	UAS (Unavailable Seconds)
c	4	ES (Errored Seconds)
	5	SES (Severely Errored Seconds)
	6	CV (Code Violations)
	7	CRC
b	8	MER (Multiframe Error)
	9	FRER (Frame Bit Error)
	10	BER (Minor Bit Error)
	11	UATC (Unavailable Time Count)
a	12	FUAS (Far End Unavailable Seconds)
	13	FSES (Far End Severely Errored Seconds)
	14	FES (Far End Errored Seconds)
	15	FEBE (Far End Block Error)

Figure 2-14. PRIM Hex-Word Construction for PA NPCs

Check and Change Impedance Setting

Overview

The impedance setting must be checked for each equipped unit (previously checked or unchecked). If the impedance setting is incorrect, it must be changed to the appropriate values.

If you do not want to change the settings yourself, refer all incorrect settings to the installation group.

Check 2.048-Mb/s Impedance Setting

For 2.048 Mb/s-shelf, check the impedance setting with the type of facility as follows: 075 ohms for coaxial cable, and 120 ohms for twisted wire cable.

This impedance check must be repeated for all other units (including different type units that have not been checked) in the frame.

Change 2.048-Mb/s Impedance Setting

To change the 2.048 impedance setting for an FTMI, you need to remove and degrow the unit, and then grow and restore the unit with different settings. The FCs will be autonomously removed when the FTMI is degrown.

Check NPC Timing Option Wiring

Overview

The NPC timing option is checked to determine which timing source will provide the timing for an NPC.

NPC Positions

Use Table 2-22 to find the NPC positions in the first two modules of units 1 and 2 that can be used as sources for the 2.048-Mb/s sync clocks.



NOTE:

Only the last NPC position on each of these DPCs is used to prevent losing two sources if the DPC fails.

Table 2-22. NPC Positions

Unit	Horizontal Location	Extended Numbering		Hierarchical Numbering	
		FTM 1	FTM 2	FTM 1	FTM 2
1	130	NPC 030	NPC 070	NPC 01-1-30	NPC 01-2-30
1	136	NPC 032	NPC 072	NPC 01-1-32	NPC 01-2-32
2	130	NPC 190	NPC 230	NPC 02-1-30	NPC 02-2-30
2	136	NPC 192	NPC 232	NPC 02-1-32	NPC 02-2-32

Check Sync Switchover

Overview

The sync units must have the ability to switch from the active to the inactive side and back.

Sync Status Output

Retrieve sync information to determine the active sync side which is given by SOURCE field (inactive side will show MATE). Use Table 2-23 to interpret the message field output and meanings.

Table 2-23. Sync Status Output

Message Field	Outputs and Meanings
CFR	MASTER or SLAVED sync configuration.
STRATUM	STR2, STR3, CEPT TOLL, or CEPT LOCAL.
MODE	HOLDOVER, FAST, or NORMAL for each DPLL.
SOURCE	Source for sync DPLL (HOLDOVER, TLI, or CRO; other side will be MATE).
IN SERVICE-DPLL	DPLL side 0 side 1, TB side 0 side 1, SOURCE side 0 side 1; presence of a 0 for side means out-of-service and a 1 means in-service.
ACTIVE-LINK	Gives TLI No. and its SSP (0, 1) which is active on each side (0 and 1).
PLL TIMING ERROR	Presence of 0 for side means no error and presence of 1 for side means error.

Check Cross-Connect Operation

Overview

The NPCs must either have the line signal connected or be looped at the line interface jacks .

Make Random Cross-Connect Tests Using A Digital Access Test Set

The operation of the cross-connect network must be checked to insure there are no problems establishing customer circuits. The cross-connect operation can be checked by sending a signal through randomly chosen cross-connect circuits. The preferred method of testing the cross-connect operation uses a J1C140A Digital Access Test Set (DATS). The DATS is used in this procedure to send tone over cross-connected channels and to detect the returned tone, thereby verifying the cross-connection. To enable this test, the DATS is connected to the line interface jacksof one NPC and the other NPC named in the command is looped at the line interface jacks.

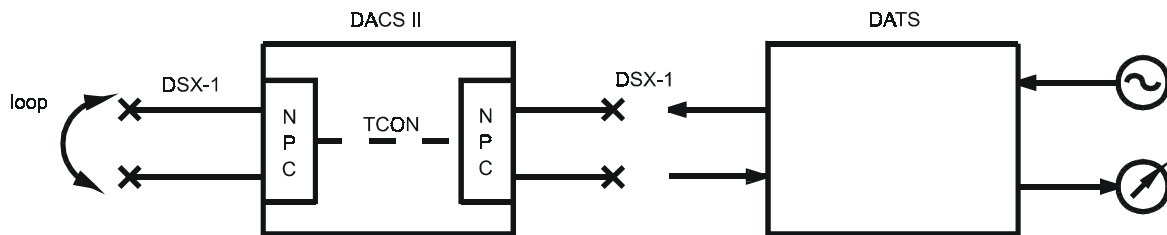
These NPCs must be ones that have been grown and restored, or NPCs can be moved to various slots in equipped units and grown as TYPE PB900 or other specification type and restored to service for the test. Additional cross-connections involving different units are entered at random to ensure that the frame is operational.

(Continued on next page)

Check Cross-Connect Operation (Continued)

Make Random Cross-Connect Tests Using A Digital Access Test Set, Continued

Use Figure 2-15 to connect the DATS to the first NPC to be tested.



tpa 813486/11

Figure 2-15. Cross-Connection Using DATS

Make Random Cross-Connect Tests Using Unassigned Voice Terminal

Another method of checking the cross-connect network is by using an unassigned voice terminal. The cross-connect operation is checked by sending a signal through randomly chosen cross-connect circuits. These NPCs must be ones that have been grown and restored, or NPCs can be moved to various slots in equipped units and grown as TYPE PB900 or other specification type and restored to service for the test. Additional cross-connections involving different units are entered at random to ensure that the frame is operational.

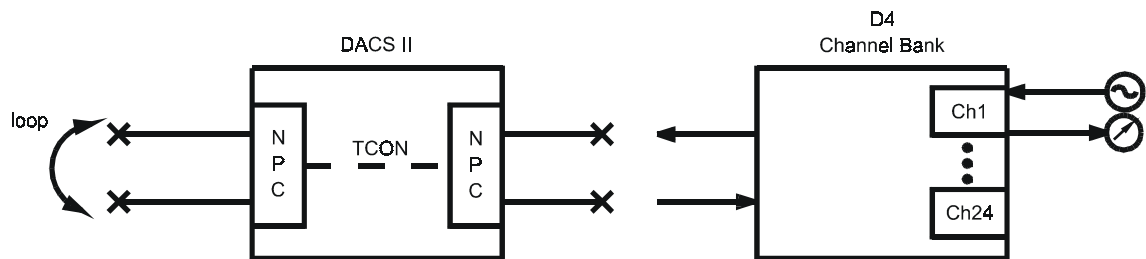
(Continued on next page)

Check Cross-Connect Operation (Continued)

Make Random Cross-Connect Tests Using Unassigned Voice Terminal, Continued

At line interface, use Figure 2-16 to do the following:

- Patch unassigned channel bank to one of the NPCs to be used for cross-connect tests.
- Verify that the other NPC for testing has the signal looped with looping cord between IN and OUT jacks.



tpa 813497/11

Figure 2-16. Cross-Connection Using Unassigned Voice Terminal

Check for Equipped, Out-Of-Service, or Cross-Connected Circuits

Overview

The units on the frame must be checked for equipped circuit packs, out-of-service circuit packs, and cross-connected circuits. When acceptance is complete, there should not be any equipped unit circuit packs.

Check for Equipped Circuit Packs

When retrieving a report on equipped circuit packs in the entire frame, use Figure 2-17 to determine the link and CCN/ECCN circuit packs from the message.

```
M RTRV STATE EQPT ... COMPLD
"<subject>:g,h,i,j,k,l,m,n,o,p"

g   =   Link 1
h   =   Link 2
i   =   Link 3
j   =   Link 4
k   =   Link 5
l   =   Link 6
t   =   Link 7
m   =   Cross-Connect Side 0
n   =   Cross-Connect Side 1
o   =   CCI 0 / CCNI 0
p   =   CCI 1 / CCNI 1
```

Figure 2-17. Common Equipment Readout

Check for Equipped, Out-Of-Service, or Cross-Connected Circuits (Continued)

Check for Out-of-Service Circuit Packs Use Figure 2-18 to help with maintenance command construction.

verb:[xy]:<CP identification>:[ww]{;} or {:<additional info.>};

{RMV-EQPT::	SYNC-a;	a =	0 or 1
/RST-EQPT::	SYNC-a:[ww]:TLI-n[:SSP-b];	n =	1-4; b = sync port (0 or 1)
/DISC-EQPT::	SYNC:[ww]:TB		
/DGN-EQPT::	CCI-s;	s =	side 0 or 1
	CCNI-s;	s =	side 0 or 1
	ETSI-sqq;	qq =	unit 01-16
	TSI-sft;	f =	unit (receiving from) (1-6)
	CCB-sf;	t =	unit (transmitting to) (1-6)
	ETSI-S,ECCN-s;		
	UNIT-[q]q:[ww]:UC;	[q]q =	unit 01-16
	UNIT-[q]q:[ww]:{FTMI-d DSPI};	d =	module interface 1-4
	UNIT-[q]q:[ww]:FC-sd;	sd =	FC side (0,1) and FC No. (1-4)
		s =	SIDE for DSPU
	LINK-j;	j =	link 1-6

Figure 2-18. Maintenance Command Construction

**Check for Equipped, Out-Of-Service,
or Cross-Connected Circuits
(Continued)**

**Check for Cross-
Connect Circuits**

Make sure to remove any test connections and remove service from and degrow any NPCs that were added for the cross-connection checking. Once this is completed, acceptance testing is completed.

Contents

■ Background	3-1
Introduction	3-1
Objectives	3-2
Related Information	3-2
Related Tasks	3-3
Frame	3-4
Overview	3-4
■ Configure Frame	3-4
Overview	3-4
User DAX	3-4
Main Menu Selections	3-5
NPC Addressing	3-5
Bay Numbering	3-6
Unit Types	3-6
■ Grow Frame ID	3-7
Overview	3-7

(Continued on next page)

Contents

Synchronizers	3-8
Overview	3-8
■ Install Synchronizer Circuit Packs	3-8
Overview	3-8
Sync Options	3-9
Time Base (TB)	3-9
Timing Link Interface (TLI)	3-10
■ Check NPC Timing Option Wiring	3-11
Overview	3-11
NPC Positions	3-11
■ Grow Sync Timebase, Configure Sync Mode, and Restore Sync	3-12
Overview	3-12
TB Oven	3-12
■ Grow and Restore Sync TLIs	3-13
Overview	3-13
TLI Uses	3-13
Rules	3-13
TLI Growth Options	3-14
■ Query Sync Status	3-16
Overview	3-16
Sync Status Output	3-16
Sync Status Register	3-17
TLI Slots	3-19
■ Add/Change Synchronizer Timing Link Interface	3-20
Overview	3-20
TLI Status Register	3-20
Sync Port (SSP) Status Register	3-21
■ Change Synchronizer Time Base Stratum	3-22
Overview	3-22

(Continued on next page)

Contents

Cross-Connect Network/Expanded Cross-Connect Network (CCN/ECCN)	3-23
Overview	3-23
■ Install ECCN Circuit Packs	3-23
Overview	3-23
ECCN Location on Frame	3-24
ECCN Circuit Pack Location	3-25
ETSI Cards	3-25
■ Install Multibay CCN Circuit Packs	3-26
CCN Circuit Pack Location	3-26
CCB and TSI Circuit Packs	3-27
■ Install Single-Bay CCN Circuit Packs	3-28
CCN Circuit Pack Location	3-28
CCB and TSI Circuit Packs	3-29
■ Remove and Degrow ECCN/CCN	3-30
Overview	3-30
Deprovisioning Tips	3-30
Alarm Indication	3-30
Units (IFTU and DSPU)	3-31
Overview	3-31
■ Install CEF Power Units and Fuses	3-31
Power Unit Locations	3-31
Power Unit and Fuse Codes and Quantities	3-32
■ Install Multibay Power Units and Fuses	3-43
Power Unit Locations	3-43
Power Unit and Fuse Codes and Quantities	3-44
■ Install Single-Bay Power Units and Fuses	3-55
Power Unit Locations	3-55
Power Unit and Fuse Codes and Quantities	3-56

(Continued on next page)

Contents

■ Install Plug-Ins, Grow, and Restore FTU/IFTU	3-61
Overview	3-61
Install FTM Circuit Packs (FTMIs and FCs)	3-61
Grow FTU/IFTU	3-68
Restore ECCN and CCN	3-68
Restore UC	3-68
Grow FTMI	3-69
Restore FTMI and FCs	3-69
■ Remove and Degrow FTU/IFTU	3-70
Overview	3-70
Deprovisioning Tips	3-70
■ Install Circuit Packs, Grow and Restore DSPU	3-71
Overview	3-71
Install DSPI and CPU Circuit Packs	3-71
Grow DSPU	3-72
Restore ECCN/CCN	3-72
Restore UC	3-72
Restore DSPI	3-72
Change DS1 Equalizer Value	3-72
Change DS1 Equalizer Value on 19.2-Kbit/s MJU Circuit Pack	3-73
■ Remove and Degrow DSPU	3-74
Overview	3-74
Deprovisioning Tips	3-74
NPC	3-75
Overview	3-75
■ Set Optional Alarm Threshold in Data Base	3-75
Overview	3-75
NPC Options	3-75

(Continued on next page)

Contents

■ Install Circuit Packs, Grow and Restore IFTU2 NPC	3-80
Overview	3-80
Install Circuit Packs and Grow Type PB/PC NPC	3-80
Install Circuit Packs and Grow Type PA NPC	3-84
Install Circuit Pack and Grow DSP Application NPC	3-88
Restore NPC	3-88
Overview	3-89
Install Circuit Packs and Grow Type TH NPC	3-89
Restore NPCs	3-92
■ Install, Grow Circuit Packs and Restore DSPU NPC	3-93
Overview	3-93
Install DSP NPC Circuit Packs	3-93
Grow DSP NPC (DMB or CPR)	3-93
Restore DSPU NPC	3-95
■ Change NPC Parameters	3-96
Overview	3-96
Change NPC Type, IW, or AIS	3-96
Change Alarm Threshold	3-97
Query or Change TS0 Bit Monitoring	3-100
Change NPC TS0 Alarm Indicator	3-101
■ Remove and Degrow NPC	3-102
Overview	3-102
Removing Cross-connected NPCs	3-102
Degrowing NPCs	3-102
Facilities	3-103
Overview	3-103
■ Establish 2.048-Mb/s Facility	3-103
Overview	3-103
Check Far-End Installation, Make Wiring Connections, and Remove Loops	3-104

(Continued on next page)

Contents

Perform End-to-End Alarm Tests	3-105
Check Facility Status and Perform End-to-End Tone Tests	3-105
Links	3-111
Overview	3-111
■ Check Link Connections	3-111
Data Sets	3-111
Link Adapters	3-111
Unused Links	3-112
■ Initialize, Set Type and Rate Characteristics	3-113
Overview	3-113
Changing/Viewing Link Parameters	3-114
■ Change Input Command Priority, Link Language, NPC Addressing, and Output Message Screening	3-116
Overview	3-116
Input Command Priority	3-116
Link Language	3-117
NPC Numbering Scheme	3-117
Output Message Screening	3-118

Background

Introduction

Provisioning is the preparatory action required before DACS II can perform its main functions, cross-connection and test access. Provisioning should be performed in order:

1. Provision the Main Controller
 - Establish the frame date and time.
 - Provision the frame ID and User ID.
 2. Provision the Synchronizer
 3. Provision the Clock and Control Interface (CCI)
 4. Provision the DACS II units and unit circuit packs
 5. Provision the NPCs.
-

Background (Continued)

Objectives

This chapter provides information to perform the following:

1. Grow the frame.
 2. Provision the timing sources used for cross-connections.
 3. Provision the frame's units and subassemblies.
 4. Provision the NPCs used for cross-connections.
 5. Provision the DS1, *SLC*[®], DS3, and Subrate facilities.
 6. Provision the links used to communicate with the DACS II.
-

Related Information

For related information, refer to the *DACS II Command and Message Manual*.

Background (Continued)

Related Tasks

For related tasks, refer to the following General Tasks in Volume II:

■ Provisioning a Frame	GT 3.1
■ Installing Synchronizers	GT 3.2
■ Query Sync Status	GT 3.3
■ Add/Change Synchronizer Timing Link Interface	GT 3.4
■ Change Synchronizer Timing Base Stratum	GT 3.5
■ Install ECCN Circuit Packs	GT 3.6
■ Install Multibay CCN Circuit Packs	GT 3.7
■ Install Single-Bay CCN Circuit Packs	GT 3.8
■ Install CEF Power Units and Fuses	GT 3.9
■ Install Multibay Power Units and Fuses	GT 3.10
■ Install Single-Bay Power Units and Fuses	GT 3.11
■ Install Plugs-Ins, Grow and Restore FTU/IFTU	GT 3.12
■ Provision DSPU	GT 3.13
■ Set Optional Alarm Threshold in Data Base	GT 3.14
■ Install Circuit Packs and Grow PB/PC NPC (IFTU2 NPC)	GT 3.15
■ Install Circuit Packs and Grow Type PA NPC (IFTU2 NPC)	GT 3.16
■ Install Circuit Packs and Grow Type TH NPC (IFTU2 NPC)	GT 3.17
■ Provision DSP Platform NPC	GT 3.18
■ Install, Grow Circuit Packs and Restore DSPU NPC	GT 3.19
■ Change NPC Type, IW, or AIS	GT 3.20
■ Change Alarm Threshold	GT 3.21
■ Query or Change TS0 Bit Monitoring	GT 3.22
■ Change NPC TS0 Alarm Indicator	GT 3.23
■ Establish 2.048-Mb/s Facility	GT 3.24
■ Provisioning Links	GT 3.25
■ Establish IP Address for the ICI Circuit Pack	GT 3.26
■ Query the IP and Ethernet Addresses for the ICI Circuit Pack	GT 3.27
■ Remove and Degrow NPC	GT 3.28
■ Remove and Degrow IFTU/FTU	GT 3.29
■ Remove and Degrow DSPU	GT 3.30
■ Remove and Degrow ECCN/CCN	GT 3.31

Frame

Overview

Frame growth is performed at the time of installation, and is usually not required again. However, if a trouble occurs on the frame, it is important for maintenance technicians to know frame growth information and procedures.

All equipment need not be grown and restored at the same time. Some equipment can be grown but restored at a later time.

Configure Frame

Overview

The menu driven INIT SYS FRAME routine is used to enter bay configuration information into the data base. The frame number and unique frame ID can be protected against change or existing protected numbers can be changed using this routine. The bay assignments are made by specifying the HT (height), the type of bay (original or flexible), the cross-connect network designation, and the unit types [IFTU2 (integrated facility terminating unit 2), DSPU (digital signal processing unit), DS3U (DS3 unit), HDS3U (Hybrid DS3 unit), NONE] in each bay. Separate growth commands must still be entered to equip units. The unit designations in the configuration define the use of the units and establish the location of circuit packs.

User DAX

Configuring the frame must be performed by user DAX on link 1, any attempt to configure the frame by any other user or on any other link will be denied.

Configure Frame (Continued)

Main Menu Selections

The following holds true for when making selections from the Configure Frame main menu:

- The initialize/reset configuration file includes the entries for the software serial number, protected frame numbers, the number of bays in the frame, the height of the bays, the allowable non-hierarchical NPCAD scheme, and the types of units to be equipped. These entries must be made and the configuration must be initialized in the data base before any of the other options on the menu can be performed.
- The add new bay(s) and unit(s) option will be denied if all bays have already been configured.
- The add unit(s) to existing bay(s) will be denied if no units were previously designated as unit type NONE.
- The change unit(s) type will be denied if selected unit(s) have already been grown via commands.
- The remove unit(s) or bay(s) and unit(s) option will be denied if all units were previously designated as NONE or if selected unit(s) have already been grown via commands.
- The recall option displays what has been entered or what currently exists in the data base configuration.
- The exit option executes the configure command and records what was entered on the primary memory card.

NPC Addressing

Four digits will be needed for extended NPC (network processing circuit) numbers starting in unit 7 (NPC 1000). The 3- or 4-digit option only applies when there are three bays or less.

Even if hierarchical numbering is to be used, the extended NPC option must be selected correctly in order to continue without an error message. An error message will also occur if the selected option conflicts with what was previously entered by the SET-PRVG-{USER/TERM} command.

Configure Frame (Continued)

Bay Numbering

An original interface bay has a fixed assignment of units (units 5 and 6 can only be DSPU or DS3U types), and the flexible interface bay allows varied assignment of unit types. Original interface bays will only be found in bays 1 and 3 of an older non-CEF frame, and only when the frame is a retrofit installation.

The bay numbering portion of the initialize/reset option begins with the lowest numbered bay which has not already been entered. The default order of numbering the bays is in consecutive order, but you can make selections to configure the bays in a different order.

Unit Types

The possible unit types which can be configured with the frame are:

- IFTU2
- DSPU
- DS3U.

The HDS3U is initially selected as a DS3U. The unit must first be configured as a DS3U and becomes an HDS3U once it is grown as an HDS3U with the type field HT100. An HDS3U should only be grown with hybrid formatters, a protection hybrid multiplexer, the FLI packs, and the UC physically in place.

Grow Frame ID

Overview

Growing the frame ID performs the following actions:

- Places a nonzero frame number and optional unique identifier into the database
- Enables the use of a 3-character frame field (if developed)
- Grows virtual NPCs [9]961 (and others) as TYPE VI100 for network broadcast connections.

If the frame number and any UID (unique identifier) were protected against change using the INIT-SYS routine, these numbers are fixed, and the same numbers must be entered. If the frame numbers were not protected, different frame and UID numbers can be entered. The UID distinguishes the frame from others having the same frame number; frequently, the COMMON LANGUAGE* code is used as the identifier.

* COMMON LANGUAGE is a registered trademark and CLEI, CLLI, CLCI, and CLFI are trademarks of Bell Communications Research, Inc.

Synchronizers

Overview

The synchronizer provides timing throughout the DACS II system.

Install Synchronizer Circuit Packs

Overview

The sync is always mounted with the main controller in bay 2 (switch bay) in an original interface frame. Figure 3-1 shows the location in the CEF (capacity expansion frame).

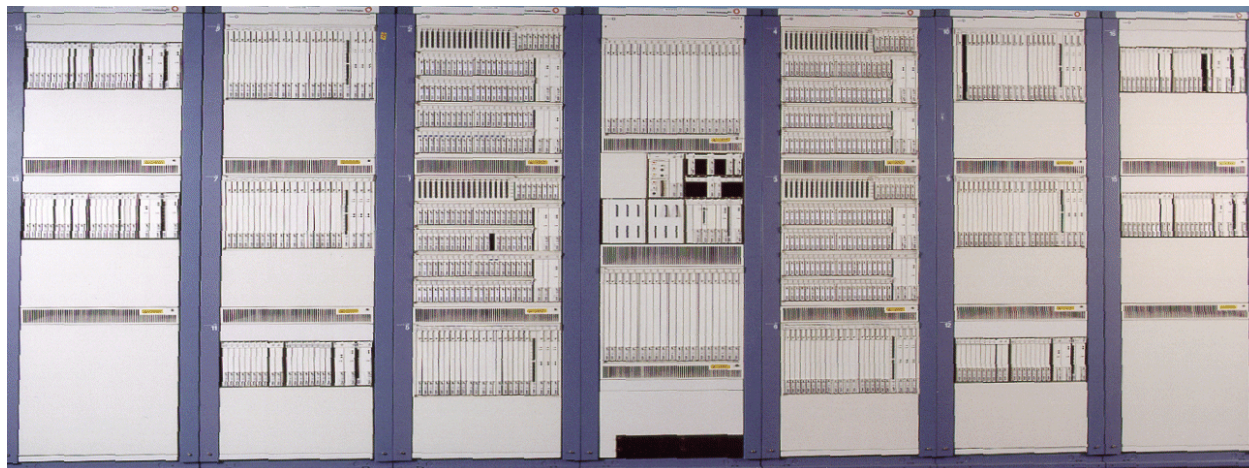
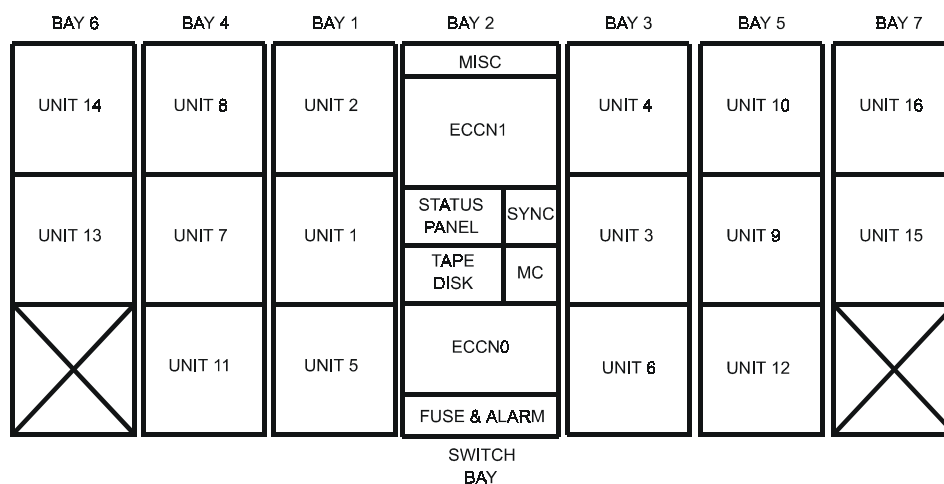


Figure 3-1. Fully-Equipped CEF

Install Synchronizer Circuit Packs (Continued)

Sync Options

When configuring the sync, determine the following options from system layout information and installation records:

- The configuration, MASTER or SLAVED
- The number and types (digital line, office clock, etc.) of incoming links for slaved timing
- Timing distribution, whether DACS II supplies timing to other equipment in the office.

Time Base (TB)

The Timing Base (TB) contains oscillators used by the Sync to synchronize the DACS II system timing signals at the frequency of the incoming timing reference.

The TB should be checked and installed using the TB portion of Table 3-1.

Install Synchronizer Circuit Packs (Continued)

Timing Link Interface (TLI)

The TLI provides the external timing interface for the Sync. It can be optionally equipped as timing extractors to derive timing or as timing distributors to distribute the timing signal to other network equipment, for example, other DACS II.

The TLI should be checked and installed using the TLI portion of Table 3-1

Table 3-1. Sync Circuit Pack Cards

Circuit Pack	Code	Growth Type	Description
TB	TG60	TB000	TBS3 (Time Base, Stratum 3) — Domestic Use
	TG61	TB100	TBCL (Time Base, CEPT Local Office)
	TG62	TB200	TBCT (Time Base, CEPT Toll Office)
	TG63	TB300	TBS2 (Time Base, Stratum 2) — Domestic Use
TLI	TG64	TExyz	TXB1 (DS1 Timing Extractor)
	TG65	TPxyz	TXB2 (2.048-Mb/s Primary Block Timing Extractor)
	TG66	TCxyz	TXCC (64 kb/s Composite Clock Timing Extractor)
	TG67	TUxyz	TXUC (Unipolar Clock Timing Extractor)
	TG68	TRxyz	TXRS (BSRF [Reference Frequency] Timing Extractor)
	TG70	TD1yz	TDCC (64 kb/s Composite Clock Timing Distributor)
	TG71	TD2yz	TDS2 (2.048-Mb/s Sine Wave Timing Distributor)
	TG75	TPxyz	TXBT (Primary Block Extractor, 75-Ohm)

Check NPC Timing Option Wiring

Overview

The NPC timing can come from either the built-in timing clock from a customer office site or from a E1 NPC source connected to a TLI pack. The wiring needs to be checked to determine if the timing is coming from the desired source.

NPC Positions

Use the list below to find the NPC positions in the first two modules of units 1 and 2 that can be used as sources for the 2.048-Mb/s sync clocks.

Hierarchical numbering	Extended numbering
01-1-30	030
01-1-32	032
01-2-30	070
01-2-32	072
02-1-30	190
02-1-32	192
02-2-30	230
02-2-32	232

Only the last NPC position on each of these DPCs is used to prevent losing two sources if the DPC fails.

Grow Sync Timebase, Configure Sync Mode, and Restore Sync

Overview One TLI must be grown for timing distribution in the MASTER Sync Mode.

TB Oven Always wait 30 minutes for TB oven to reach temperature before attempting to restore sync to service.

Grow and Restore Sync TLIs

Overview

The TLI packs must be grown and restored to perform the timing extraction function for the DACS II system. The TLI pack provides phase information for the timing references, and sends this information to the DPLL pack. The DPLL pack locks the TLI clock and provides the timing for the entire DACS II system.

TLI Uses

The TLI can be used as a:

- Timing Extractor
 - Timing Distributor.
-

Rules

Note the following information about growing and restoring sync TLIs:

- The sync ports (SSP 0 and SSP 1) on each TLI are grown separately; the type (TP versus TU) must be the same, but the parameters may be different.
 - The source priority for the two SSPs on a TLI must be different.
 - The optional NPC field is used when an NPC is used as a timing source for the TLI. In this case, the TLI is a TU type and the unipolar signal is wired through the miscellaneous terminal strip on the frame.
-

Grow and Restore Sync TLIs (Continued)

TLI Growth Options

The signal format specifications for the TP- and TE-type TLIs are listed in Table 3-2 and Table 3-3. The TC-, TU-, and TR-type TLIs can have any xyz value (000 to 999).

Table 3-2. TP-Type Growth Options

TP (Primary Block Timing Extractor)	
Option x	Frame Format
1 or 5	Common Channel Signaling
2 or 6	Channel Associated Signaling - Mode 0
3 or 7	Channel Associated Signaling - Mode 1
4 or 8	European Remote Switching Module (ERSM)
0 or 9	Invalid
Option y	Line Format
0 or 2	Alternate Mark Inversion
1 or 3	High Density Bipolar of Order 3 (HDB3)
4 or 9	Invalid
Option z	Channel Format
0 through 9	Unassigned

(Continued on next page)

Grow and Restore Sync TLIs (Continued)

TLI Growth Options, Continued

Table 3-3. TE-Type Growth Options

TE-Type TLI xyz Fields	
Option x	Frame Format
0	Invalid
1	D4 Format
2, 3	ESF Format
4	DDS (T1DM) Format
5-9	Invalid
Option y	Line Format
0, 1	Bipolar Line Coding
2	B8ZS Line Coding
3	Invalid
4, 5	Bipolar Line Coding
6	B8ZS Line Coding
7-9	Invalid
Option z	Channel Format
0 through 9	Unassigned

Query Sync Status

Overview

The report displayed from a sync status query indicates the operation status of each component in the sync.

Sync Status Output

Use Table 3-4 to review the sync status report.

Table 3-4. Sync Status Output

Message Field	Outputs and Meanings
CFR	MASTER or SLAVED sync configuration.
STRATUM	STR2, STR3, CEPT TOLL, or CEPT LOCAL.
MODE	HOLDOVER, FAST, or NORMAL for each DPLL.
SOURCE	Source for sync DPLL (HOLDOVER, TLI, or CRO; other side will be MATE).
IN SERVICE-DPLL	DPLL side 0 side 1, TB side 0 side 1, SOURCE side 0 side 1; presence of a 0 for side means out-of-service and a 1 means in-service.
ACTIVE-LINK	Gives TLI No. and its SSP (0, 1) which is active on each side (0 and 1).
PLL TIMING ERROR	Presence of 0 for side means no error and presence of 1 for side means error.

Query Sync Status (Continued)

Sync Status Register

Crosscouple is the normal running mode in which the sync sides are locked together (in-phase).

/*STR: b01, b02, b03, b04, b05, b06*/
"STR: byte1, byte2, byte3, byte4, byte5, byte6"

BYTE 1 (BITS abcdefgh)

a = spare	e = TLI 1 in service
b = sync hardware failed	f = TLI 2 in service
c = mate failed or OOS	g = TLI 3 in service
d = TB failed or OOS	h = TLI 4 in service

BYTE 3 (BITS abcdefgh)

a = sync reset, needs config.	e = crosscouple trouble
b = DPLL hardware error	f = CRO timing trouble
c = TB error	g = spare
d = PLL symmetry error	h = spare

BYTE 5 BIT POSITIONS: ab cde fgh

SOURCE (BITS ab)		ACTIVE PORT (BITS cde) (if BITS ab = 01)	
00	= holdover	000	= TLI 1, SSP 0
01	= timing link	001	= TLI 1, SSP 1
10	= cross-couple	010	= TLI 2, SSP 0
11	= CRO	011	= TLI 2, SSP 1
		100	= TLI 3, SSP 0
		101	= TLI 3, SSP 1
		110	= TLI 4, SSP 0
		111	= TLI 4, SSP 1
BITS fgh (unused)			

BYTE 9 (BITS abcdefgh)

a	=	loss of energy	d	=	TB oven still cold
b	=	TB command error	e	=	spare
c	=	TB oscillator drift	fgh	=	000 for stratum 3, 001 for 2-Mb/s local
		(master mode)			010 for 2-Mb/s toll, 011 for stratum 2

Figure 3-2. Sync Status Register

Query Sync Status (Continued)

TLI Slots

If the sync configuration = MASTER, then an additional TB circuit pack is installed in TLI 3, side 1 slot. This time base pack will also take up TLI 4 position.

Timing distributor packs must also be installed in duplicated TLI 1 or TLI 2 slots for this application.

Figure 3-3 displays the TLI locations.

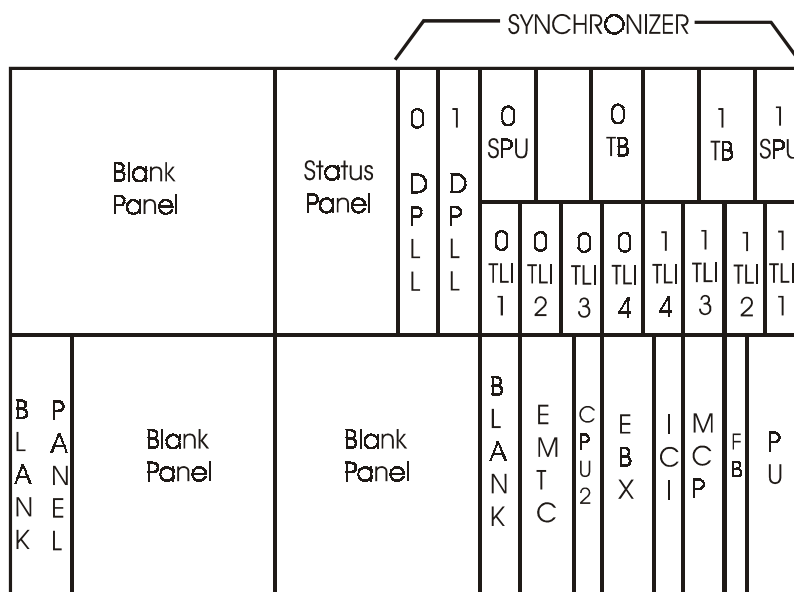


Figure 3-3. Identification of Main Controller Slots in CEF

Add/Change Synchronizer Timing Link Interface

Overview

With the command used for this procedure, the following actions can be performed:

- Connect additional TLIs (timing link interfaces) for timing extraction
- Change the existing TLI types, NPC source, or sync port priority.

Any NPC timing sources are entered in the data base. Additional links may be used to provide extra protection in case the other links fail or to provide different priority source signals.

Each TLI has two sync ports (SSP) and is duplicated on both sides of the sync. If an active SSP fails, the sync will switch to the other SSP on the TLI; if there are no more sources on the side, the sync will switch to the other side.



CAUTION:

Performing this procedure incorrectly can interrupt service. Perform each step of the procedure in the order given.

TLI Status Register Figure 3-4 lists the TLI status register output and the byte meanings.

```
/*STATUS: aa, bb, cc*/
"byte1, byte2, byte3"
```

BYTE 1 BIT POSITIONS: a b c d e f g h

0000	=	1.544 Mb/s	0100	=	BSRF	e	=	TLI grown
0001	=	2.048 Mb/s	0101	=	64 kb/s Clock Out	f	=	TLI out-of-service
0010	=	Composite Clock	0110	=	2.048 Mb/s Clock Out	g	=	TLI hardware error
0011	=	Unipolar Clock				h	=	spare

Figure 3-4. TLI Status Register

Add/Change Synchronizer Timing Link Interface (Continued)

Sync Port (SSP) Status Register

Figure 3-5 lists the sync port status register output and the byte meanings.

```
/*STATUS:aa,bb,cc,ee,ff*/
"byte1,byte2,byte3,byte4,byte5"
[/*SYNC SOURCE*/]
["NPC-<npc No.>"]
```

BYTE 2 SELECTION PRIORITY (01-08) FOR SSPs.

BYTE 3 BIT POSITIONS: abc de fgh

FRAME FORMAT (abc)			LINE FORMAT (de)			FREQ (fgh)		
000	=	NSA	00	=	AMI	000	=	512 KHz
001	=	ERSM	01	=	HDB3	001	=	1.0 MHz
010	=	CAS0				010	=	1.544 MHz
011	=	CAS1				011	=	2.048 MHz

BYTE 4 (BITS abcdefgh)

BIT a	=	Carrier Failure	BIT e	=	Jitter
BIT b	=	Energy Loss	BIT f	=	Phase Step
BIT c	=	Unipolar Clock Not Defined	BIT g	=	Spare
BIT d	=	Spare	BIT h	=	Spare

Figure 3-5. Sync Port Status Register

Change Synchronizer Time Base Stratum

Overview

The level (stratum) of the sync time base can be changed while the sync remains in operation. The procedure for changing the synchronizer time base stratum involves the following actions:

1. Remove one side of the TB
2. Degrow the TB and replace it
3. Regrow the sync at the new stratum
4. Configure the sync mode, and restore the side
5. Repeat the above actions for the TB on the other side.

For master timing, the third TB must be replaced before the TB on the other side. A higher stratum (2 versus 3 or toll versus local) provides a more precise timing signal for the network sync plan or office application.



CAUTION:

Performing this procedure incorrectly can interrupt service. Perform each step of the procedure in the order given. Clear any alarms or OOS conditions in the synchronizer before beginning this procedure.

Cross-Connect Network/ Expanded Cross-Connect Network (CCN/ECCN)

Overview All cross-connections between NPCs are connected via the CCN or ECCN.

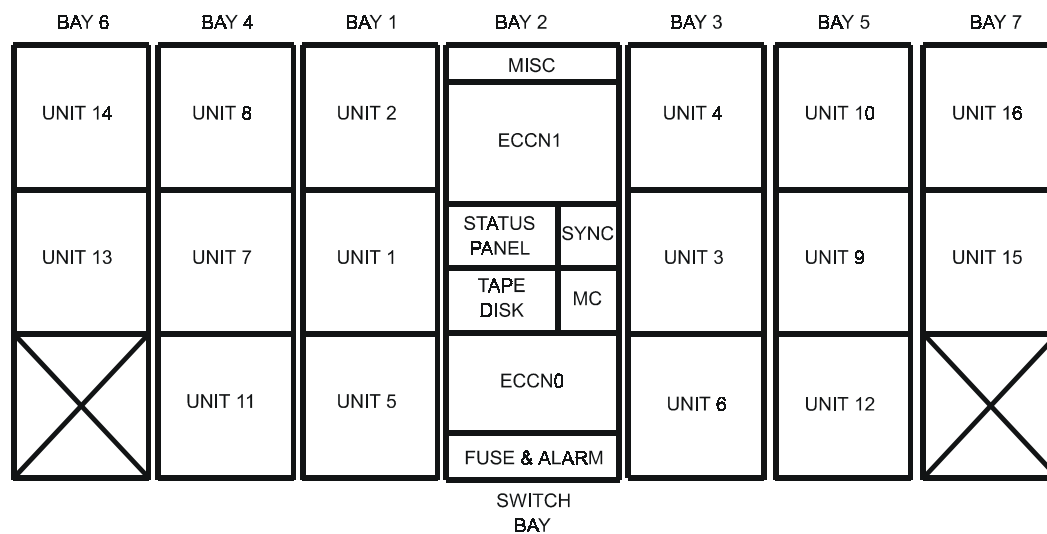
Install ECCN Circuit Packs

Overview If necessary, the installation of the power units for the CCN and CCN2 can be checked per *Install Power Units and Fuses* procedures found in Volume II, Chapter 3. The ECCN circuit packs have built-in power converters.

The TSI/CCB/CCN/CCNI entities are used in conjunction with the Non-CEF frames while the ETSI/CCI entities are used with the CEF frames.

Install ECCN Circuit Packs (Continued)

ECCN Location on Frame Figure 3-6 displays the location of the ECCN in bay 2 of the frame. Use this figure to help locate side 0 and side 1 shelves of the ECCN.



tpa 789630/11

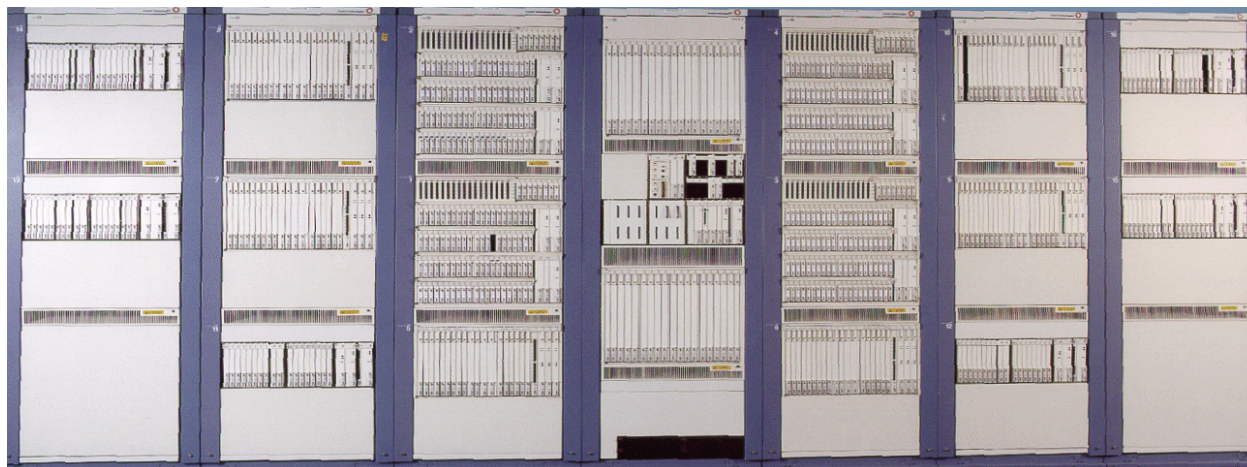



Figure 3-6. Fully-Equipped Capacity Expansion Frame

Install ECCN Circuit Packs (Continued)

ECCN Circuit Pack Location

Figure 3-7 displays the location of circuit packs on the ECCN shelf. Use this figure to help verify that the following circuit packs are installed in their appropriate slots:

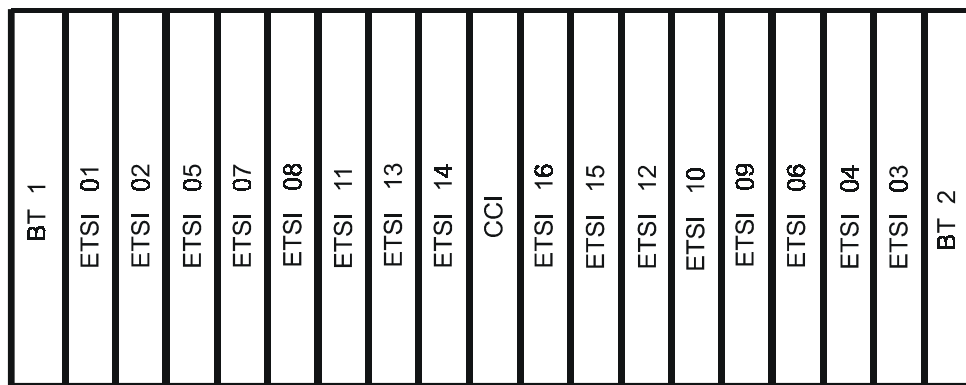- BT (bus terminator, BBR1 code)
- CCI (clock control interface, BBS1 code)
- ETSI (expanded time slot interface, BBS2 code).



tpa 789631/11

Figure 3-7. Location of Circuit Packs on ECCN Shelf

ETSI Cards

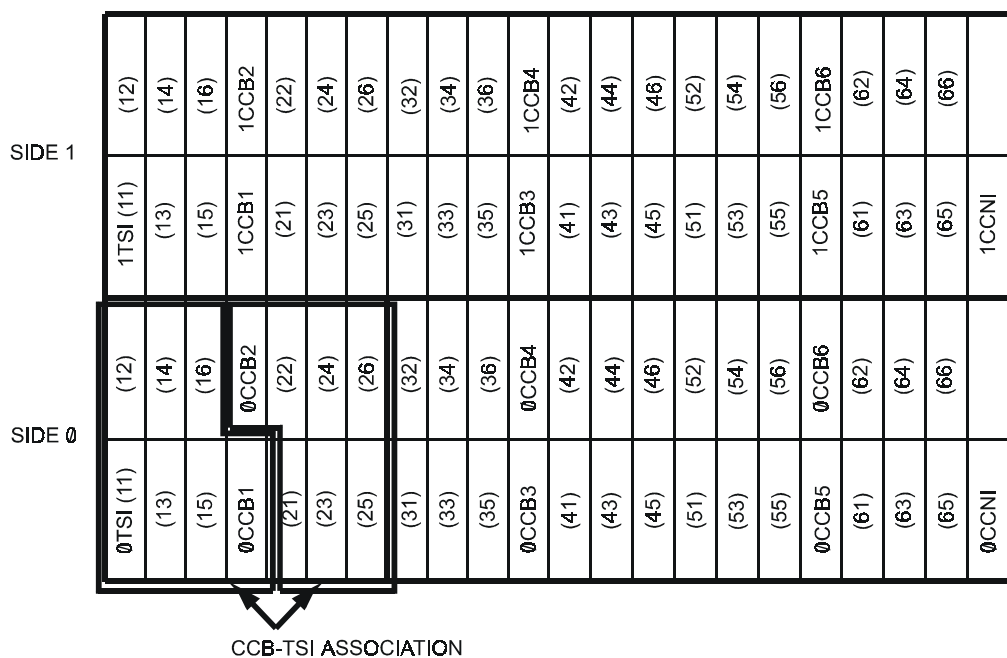
The ETSI slots are assigned on each side of the common CCI pack to roughly match the associated unit positions and ordering of the units in the CEF configuration.

Plugging into the out-of-service side prevents possible transmission hits and possible service removal of NPCs on the ETSI ports.

Install Multibay CCN Circuit Packs

CCN Circuit Pack Location

Use Figure 3-8 to locate the CCN in the frame. Figure 3-8 shows the organization of the circuit packs within the CCN. The CCNI (cross-connect interface) card (UM30) is installed in designated slots on both sides of the CCN.



tpa 744614/11

Figure 3-8. Duplicated Cross-Connect Network for Multibay Frame

Install Multibay CCN Circuit Packs (Continued)

CCB and TSI Circuit Packs

Use Table 3-5 to determine which CCB (cross-connect buffer) (UM26) and TSI (TM660) circuit pack slots are needed to support the DACS units which will be used (1 through 6).

Table 3-5. Circuit Packs Needed

Unit Number	TSI Number	CCB Number
1	11	1
1, 2	11, 12, 21, 22,	1, 2
1, 2, 3	11, 12, 13, 21, 22, 23, 31, 32, 33	1, 2, 3
1, 2, 3, 4	11, 12, 13, 14, 21, 22, 23, 24, 31, 32, 33, 34, 41, 42, 43, 44	1, 2, 3, 4
1, 2, 3, 4, 5	11, 12, 13, 14, 15, 21, 22, 23, 24, 25, 31, 32, 33, 34, 35, 41, 42, 43, 44, 45, 51, 52, 53, 54, 55	1, 2, 3, 4, 5
1, 2, 3, 4, 5, 6	11, 12, 13, 14, 15, 16, 21, 22, 23, 24, 25, 26, 31, 32, 33, 34, 35, 36, 41, 42, 43, 44, 45, 46, 51, 52, 53, 54, 55, 56, 61, 62, 63, 64, 65, 66	1, 2, 3, 4, 5, 6

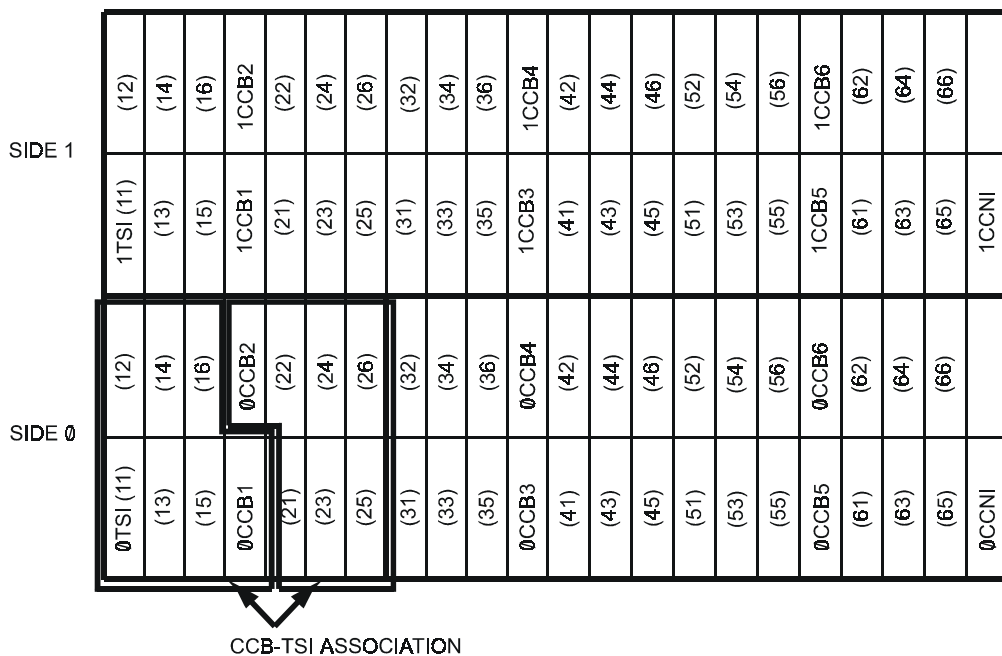
The TSI slot numbers show how the cards are connected; for example, TSI 21 connects data from unit 2 to unit 1.

Normally, as units are added, TSIs are installed to connect the new unit with every other one and the total number of TSIs equals the total number of units squared.

Install Single-Bay CCN Circuit Packs

CCN Circuit Pack Location

Use Figure 3-9 to locate the CCN in the frame. Figure 3-9 shows the organization of the circuit packs within the CCN. The CCNI (cross-connect interface) card (UM30) is installed in designated slots on both sides of the CCN.



tpa 744614/11

Figure 3-9. Duplicated Cross-Connect Network for Single Bay Frame

Install Single-Bay CCN Circuit Packs (Continued)

CCB and TSI Circuit Packs

Install the required CCBs (UM26) and TSIs (TM660) on the inactive side. Plugging into the inactive side prevents possible transmission hits.

The TSI designation numbers (11, 15, and 51) indicate how the cards are connected; for example, TSI 11 connects data from unit 1 back to unit 1.

Remove and Degrow ECCN/CCN

Overview

This section provides information to support procedures for removing ECCN (expanded cross-connect network) or CCN (cross-connect network) circuit packs. However, the UC must be in-service to use other commands. Therefore, the unit components must be removed and degrown in the following order:

1. The NPCs in the unit are removed and degrown

NPCs can be physically removed from the unit after they are removed from service. After degrowing a pack or group, it can be regrown with different specifications.

2. The UC is removed and degrown.

The associated and ETSI (or CCB and TSIs) and FMTs on both sides of the unit will **automatically** be removed and degrown.

There are also commands to remove all the ETSIs or TSIs per side to expedite troubleshooting.

Deprovisioning Tips

When removing and degrowing the ECCN/CCN:

- Allowable active-side removals are: ETSIs if no involved CONN maps; CCI if no associated ETSIs in-service; and FC if no associated NPCs in-service.
- When a pack in a duplicated circuit group is removed on the active side, service will automatically switch over to the other side (if in-service).
- Service cannot be removed from the remaining side if there are any in-service NPCs.
- When unit packs are removed from service and the unit UC is degrown, the ETSI will **automatically** be removed and degrown (disconnected). This occurs only if the associated packs are not supporting cross-connections or other packs (subentities).

Alarm Indication

A major alarm will be registered after the ECCN/CCN side has been out of service for more than two minutes.

Units (IFTU and DSPU)

Overview

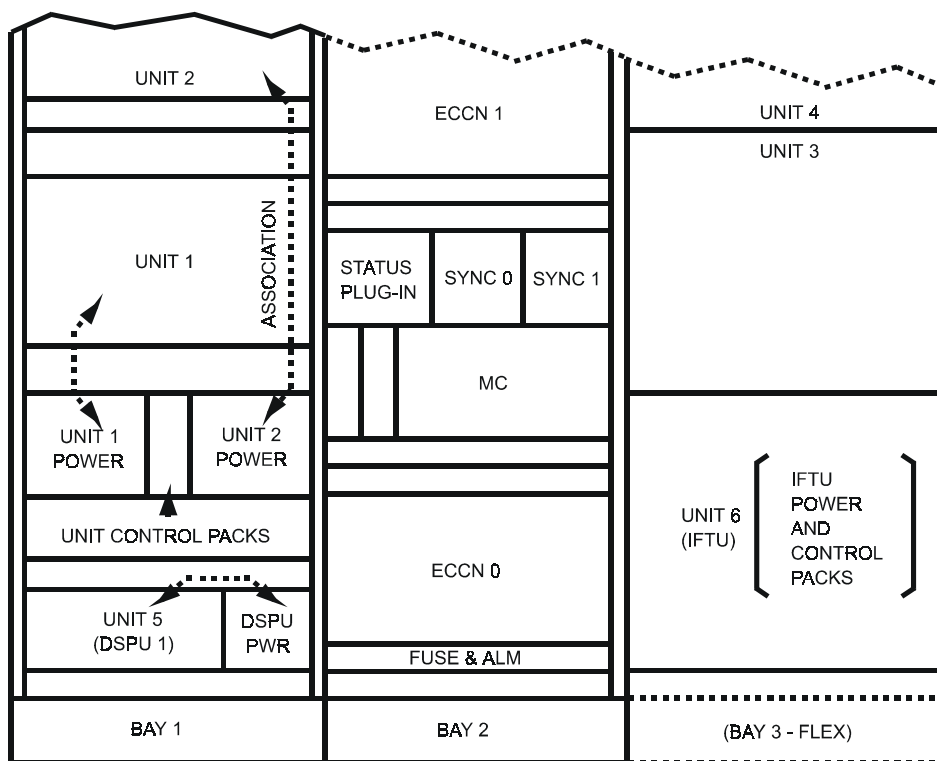
This section provides information on installing, growing, and restoring the various components of the IFTU and DSPU shelves.

The shelf power units and fuses must be installed prior to provisioning.

Install CEF Power Units and Fuses

Power Unit Locations

Use Figure 3-10 to locate the power unit slots for the section of the frame being equipped.



lpa 789728/11

Figure 3-10. Original Interface Bay (Bay 1)

Install CEF Power Units and Fuses (Continued)

Power Unit and Fuse Codes and Quantities

The list below indicates the appropriate tables to find information on various power units and fuses.

Description	Table
Required codes and quantities of power units	Table 3-6
Required 48-Volt Input fuses for the fuse and alarm panel (bottom frame)	Table 3-7 through Table 3-10
Fuse board designations for the sync and main controller	Table 3-11
Fuse board designations for the IFTU	Table 3-12
Fuse board designations for the DSPU	Table 3-13
Fuse board designations for the DSPUs 5 and 6 fuses in the original interface bay	Table 3-14
Fuse board designations for the FTU (77-Type fuses)	Table 3-15
Required output power of each power unit	Table 3-16

**NOTE:**

FTUs in original interface bays use two GRP 1 (5A) DFBs and one GRP 2 (7.5A & 5A) DFB; the GRP 2 board is for fuses CQ-JX. The DSPU and multibay CCN both use GRP 3 (7.5A) DFBs.

(Continued on next page)

Install CEF Power Units and Fuses (Continued)

Power Unit and Fuse Codes and Quantities, Continued

Table 3-6. CEF Power Unit Summary

Circuit Block	CP Code	Designation/ Location	Equipage
EFC	SM565	MCP /04-144	One.
	411AA	PU /04-160	One.
SYNC	TG58	0SPU /14-106	One.
	TG58	1SPU /14-160	One.
ECCN 0	—	—	The CCI and ETSI packs have built-in power converters.
ECCN 1	—	—	The CCI and ETSI packs have built-in power converters.
IFTU (Flex Bay)	411AA	PU /x06-168	All PUs for unit supply a common bus; an extra PU is always provided for backup (for example, PUs 1 & 2 required for FTM 1).
	411AA	PU /x14-145	
	411AA	PU /x14-158	
IFTU 2		PU /16-132	Same as IFTU.
	424AA	PU /16-144	
		PU /16-156	
DSPU (Flex Bay)	SM566	DCP /x04-130	One.
	411AA	1PU /x04-142	One.
	411AA	0PU /x04-150	One.
FTU1/3	411AA	PU /x28-012	All PUs for unit supply a common bus; an extra PU is always provided for backup (for example, PUs 1 & 2 required for FTM 1). Location x = 1 for units 1 & 3 and x = 3 for units 2 & 4.
	411AA	PU /x28-024	
	411AA	PU /x28-048	
FTU2/4	411AA	PU /x28-124	Same as FTU 1.
	411AA	PU /x28-148	
	411AA	PU /x28-160	
DSPU5/6	SM566	DCP5/6 /X12-130	One. Location x = 1 for unit 5 and x = 3 for unit 6.
	411AA	1PU /X12-142	One.
	411AA	0PU /X12-160	One.
DS3U5/6 HDS3U	563A	1 PU/11-140 for unit 6.	One. Location x = 1 for unit 5 and x = 3
	563A	2 PU/11-148	One.
	563A	3 PU/11-156	One.

Table 3-7. 48-Volt Power (CEF) Feed A Fuse

Feed A Fuse	Power Unit/CP			
	Type (Note)	Assignment	Size	Bead Color
A1	411A, SM566, 424AA, or 563A	Unit 1	70D, 5A	Green
A2	411A, SM566, 424AA, or 563A	Unit 2	70D, 5A	Green
A3	411A, SM566, 424AA, or 563A	Unit 3	70D, 5A	Green
A4	411A, SM566, 424AA, or 563A	Unit 4	70D, 5A	Green
A5-1	Indicator for A5-2	-	70G, 0.5A	Red
A5-2	CCI, ETSIs	ECCN 0	74J, 7.5A	-
A6-1	-	-	-	-
A6-2	-	-	-	-
A7	411AA, SM566, 424AA, or 563A	Unit 5	70D, 5A	Green
A8	TG58	0SPU (SYNC 0)	70D, 5A	Green
A9	411AA, SM566, 424AA, or 563A	Unit 6	70D, 5A	Green
A12	411AA, SM566, 424AA, or 563A	Unit 7 (0PU)	70D, 5A	Green
A13	411AA, SM566, 424AA, or 563A	Unit 8 (0PU)	70D, 5A	Green
A14	411AA, SM566, 424AA, or 563A	Unit 10	70D, 5A	Green
A15	411AA, SM566, 424AA, or 563A	Unit 11 (0PU)	70D, 5A	Green
A16	411AA, SM566, 424AA, or 563A	Unit 13 (0PU)	70D, 5A	Green
A17	411AA, SM566, 424AA, or 563A	Unit 14 (0PU)	70D, 5A	Green
A18	411AA, SM566, 424AA, or 563A	Unit 15	70D, 5A	Green
A19	-	-	-	-

Note: The type depends on the type of unit (IFTU, DSPU, or HDS3U).

Table 3-8. 48-Volt Power (CEF) - Feed B Fuse

Feed B Fuse	Power Unit/CP			
	Type (Note)	Assignment	Size	Bead Color
B1	411A, SM566, 424AA, or 563A	Unit 1	70D, 5A	Green
B2	411A, SM566, 424AA, or 563A	Unit 2	70D, 5A	Green
B3	411A, SM566, 424AA, or 563A	Unit 3	70D, 5A	Green
B4	411A, SM566, 424AA, or 563A	Unit 4	70D, 5A	Green
B5-1	-	-	-	-
B5-2	-	-	-	-
B6-1	-	-	-	-
B6-2	-	-	-	-
B7	411AA, SM566, 424AA, or 563A	Unit 5	70D, 5A	Green
B8	-	CRO	70D, 5A	Green
B9	411AA, SM566, 424AA, or 563A	Unit 6	70D, 5A	Green
B12	411AA, SM566, 424AA, or 563A	Unit 7	70D, 5A	Green
B13	411AA, SM566, 424AA, or 563A	Unit 9 (OPU)	70D, 5A	Green
B14	411AA, SM566, 424AA, or 563A	Unit 10 (OPU)	70D, 5A	Green
B15	411AA, SM566, 424AA, or 563A	Unit 11	70D, 5A	Green
B16	411AA, SM566, 424AA, or 563A	Unit 12 (OPU)	70D, 5A	Green
B17	411AA, SM566, 424AA, or 563A	Unit 14	70D, 5A	Green
B18	411AA, SM566, 424AA, or 563A	Unit 15 (OPU)	70D, 5A	Green
B19	411AA, SM566, 424AA, or 563A	Unit 16 (OPU)	70D, 5A	Green

Note: The type depends on the type of unit (IFTU, DSPU, or HDS3U).

Table 3-9. 48-Volt Power (CEF) - Feed C Fuse

Feed C Fuse	Power Unit/CP			
	Type (Note)	Assignment	Size	Bead Color
C1	411A,SM566, 424AA, or 563A	Unit 1 (1PU)	70D,5A	Green
C2	411A,SM566, 424AA, or 563A	Unit 2 (1PU)	70D,5A	Green
C3	411A,SM566, 424AA, or 563A	Unit 3 (1PU)	70D,5A	Green
C4	411A,SM566, 424AA, or 563A	Unit 4 (1PU)	70D,5A	Green
C5-1	Indicator for C5-2	-	70G,0.5A	Red
C5-2	CCI,ETSlS	ECCN 1	74J,7.5A	-
C6-1	-	-	-	-
C6-2	-	-	-	-
C7	411AA,SM566, 424AA, or 563A	Unit 5	70D,5A	Green
C8	TG58	1SPU (SYNC 1)	70D,5A	Green
C9	411AA,SM566, 424AA, or 563A	Unit 6 (1PU)	70D,5A	Green
C12	424AA, or 563A 411AA,SM566, 424AA, or 563A	Unit 7 (1PU)	70D,5A	Green
C13	411AA,SM566, 424AA, or 563A	Unit 8 (1PU)	70D,5A	Green
C14	411AA,SM566, 424AA, or 563A	Unit 9	70D,5A	Green
C15	411AA,SM566, 424AA, or 563A	Unit 11 (1PU)	70D,5A	Green
C16	411AA,SM566, 424AA, or 563A	Unit 12	70D,5A	Green
C17	411AA,SM566, 424AA, or 563A	Unit 13 (1PU)	70D,5A	Green
C18	411AA,SM566, 424AA, or 563A	Unit 16	70D,5A	Green
C19	-	-	-	-

Note: The type depends on the type of unit (IFTU, DSPU, or HDS3U).

Table 3-10. 48-Volt Power (CEF) - Feed D Fuse

Feed D Fuse	Power Unit/CP			
	Type (Note)	Assignment	Size	Bead Color
D1	-	-	-	-
D2	-	-	-	-
D3	-	-	-	-
D4	-	-	-	-
D5-1	-	-	-	-
D5-2	-	-	-	-
D6-1	-	-	-	-
D6-2	-	-	-	-
D7	411AA,424AA, or	+5 MC Power	70D,5A	Green
D9	SM565 (MCP)	MC Power	70B,2A	Orange
D10	-	MTC	70G,0.5A	Red
D12	411AA,SM566, 424AA, or 563A	Unit 8 (0PU)	70D,5A	Green
D13	411AA,SM566, 424AA, or 563A	Unit 9 (1PU)	70D,5A	Green
D14	411AA,SM566, 424AA, or 563A	Unit 10 (1PU)	70D,5A	Green
D15	411AA,SM566, 424AA, or 563A	Unit 12 (1PU)	70D,5A	Green
D16	411AA,SM566, 424AA, or 563A	Unit 13	70D,5A	Green
D17	411AA,SM566, 424AA, or 563A	Unit 14 (1PU)	70D,5A	Green
D18	411AA,SM566, 424AA, or 563A	Unit 15 (1PU)	70D,5A	Green
D19	411AA,SM566, 424AA, or 563A	Unit 16 (1PU)	70d,5A	Green

Note: The type depends on the type of unit (IFTU, DSPU, or HDS3U).

Table 3-11. Secondary Power Distribution (Sync and Main Controller) (CEF)

Power Unit/ Location	Associated Circuit Pack/Location	Power Unit/ Location	Associated Circuit Pack/Location
1SPU /14-160	OTLI2 /10-112		EBX /04-128
	OTLI3 /10-120		CPU2 /04-120
	OTLI4 /10-128		EMTC /04-112
	ODPLL /12-084		CI /04-136
	1TLI4 /10-136		EBX /04-128
	1TLI3 /10-144		CPU2 /04-120
	1TLI2 /10-152		EMTC /04-112
	1TLI1 /10-160		CI /04-136

Table 3-12. IFTU Fuse Assignment

Fuse Boards	Designation (Note)	Associated Plug-Ins
ED-9C011-30	+5A1 through +5A4	4 plug-ins (8 NPCs) per fuse (see +5A5 below)
ED-9C011-30	(1-4 through 17-20) +5A5	
ED-9C012-30	+5A1 through +5A4	1 plug-in (2 NPCs) per fuse CPU UBX FTMI 0-Side FC 1-Side FC
ED-9C011-30	(1 through 20)	
	+5A5, number 1	
	+5A5, number 2	
	+5A5, number 3	
	+5A5, number 4	
	+5A5, number 5	

Note: Designations +5A1 through +5A4 correspond to the modules (shelves) of the unit. The fuse numbers correspond to the plug-ins on the shelf (either 1 for 1 or 1 fuse per 4 plug-ins, depending on the fuse board).

Table 3-13. DSPU Fuses (Flexible Bay)

Fuse	Side	DSP Position (Note)
(Top)	0 DSPU	(Left Panel)
No. 1		First and second
No. 2		Third and fourth
No. 3		Fifth and sixth
No. 4		Seventh and eighth
(Bottom)	1 DSPU	(Right Panel)
No. 5		First and second
No. 6		Third and fourth
No. 7		Fifth and sixth
No. 8		Seventh and eighth
Note: Each fuse supplies two DSP circuit packs.		

Table 3-14. DSPU5 and DSPU6 Fuses (Original Interface Bay)

DSPU5		DSPU6	
Fuse or PU/ Location	Associated Circuit Pack/Location	Fuse or PU/ Location	Associated Circuit Pack/Location
(SIDE 0)		(SIDE 0)	
0PU/112-160		0PU/312-160	
JBH/112-148	NPC641 /112-006	JBH/312-148	NPC801 /312-006
	NPC661 /112-012		NPC821 /312-012
JBG	NPC681 /112-018	JBG	NPC841 /312-018
	NPC701 /112-024		NPC861 /312-024
JBF	NPC721 /112-030	JBF	NPC881 /312-030
	NPC741 /112-036		NPC901 /312-036
JBE	NPC761 /112-042	JBE	NPC921 /312-042
	NPC781 /112-048		NPC941 /312-048
(SIDE 1)		(SIDE 1)	
1PU/112-142		1PU/312-142	
JBD/112-148	NPC641 /112-074	JBD/312-148	NPC801 /312-074
	NPC661 /112-080		NPC821 /312-080
JBC	NPC681 /112-086	JBC	NPC841 /312-086
	NPC701 /112-092		NPC861 /312-092
JBB	NPC721 /112-098	JBB	NPC881 /312-098
	NPC741 /112-104		NPC901 /312-104
JBA	NPC761 /112-110	JBA	NPC921-310
	NPC781 /112-116		NPC941 /312-116
DCP5 /112-130	CPU5 /112-056	DCP6 /312-130	CPU6 /312-056
	DSPI5 /112-062		DSPI6 /312-062

Table 3-15. 77-Type, FTU Fuses - Original Interface Bay

Fuse (Note)	Associated NPCs			
	FTU 1	FTU 2	FTU 3	FTU 4
CA	1-8	161-168	321-328	481-488
CB	9-16	169-176	329-336	489-496
CC	17-24	177-184	337-344	497-504
CD	25-32	185-192	345-352	505-512
CE	33-40	193-200	353-360	513-520
CF	41-48	201-208	361-368	521-528
CG	49-56	209-216	369-376	529-536
CH	57-64	217-224	377-384	537-544
CI	65-72	225-232	385-392	545-552
CJ	73-80	233-240	393-400	553-560
CK	81-88	241-248	401-408	561-568
CL	89-96	249-256	409-416	569-576
CM	97-104	257-264	417-424	577-584
CN	105-112	265-272	425-432	585-592
CO	113-120	273-280	433-440	593-600
CP	121-128	281-288	441-448	601-608
CQ	129-136	289-296	449-456	609-616
CR	137-144	297-304	457-464	617-624
CS	145-152	305-312	465-472	625-632
CT	153-160	313-320	473-480	633-640
CU	(0)FC 1-4	(0)FC 1-4	(0)FC 1-4	(0)FC 1-4
CV	(1)FC 1-4	(1)FC 1-4	(1)FC 1-4	(1)FC 1-4
JW	FTMI 1-4	FTMI 1-4	FTMI 1-4	FTMI 1-4
JX	CPU,UBX	CPU,UBX	CPU,UBX	CPU,UBX

Note: The unit number that the fuses supply is identified on the fuse panel.


Table 3-16. Power Unit Requirements

		Meter Connections	
Power Unit Code	Output Requirement (DC Volts)	Positive Lead	Negative Lead
SM565	+11.75 to +12.25	+V2	RTN
	-11.75 to -12.25	-V2	RTN
411AA	+5.1 to +5.3	+	-
TG58	+4.75 to +5.25	+	-
	-4.95 to -5.45	+	-
424AA	+5.0 to +5.5	+	-
485AB	+5.1 to +5.4	+	-
SM566	+4.75 to +5.25	+	-
563A	+4.9 to +5.3	5.5V	GRD

Install Multibay Power Units and Fuses

Power Unit Locations

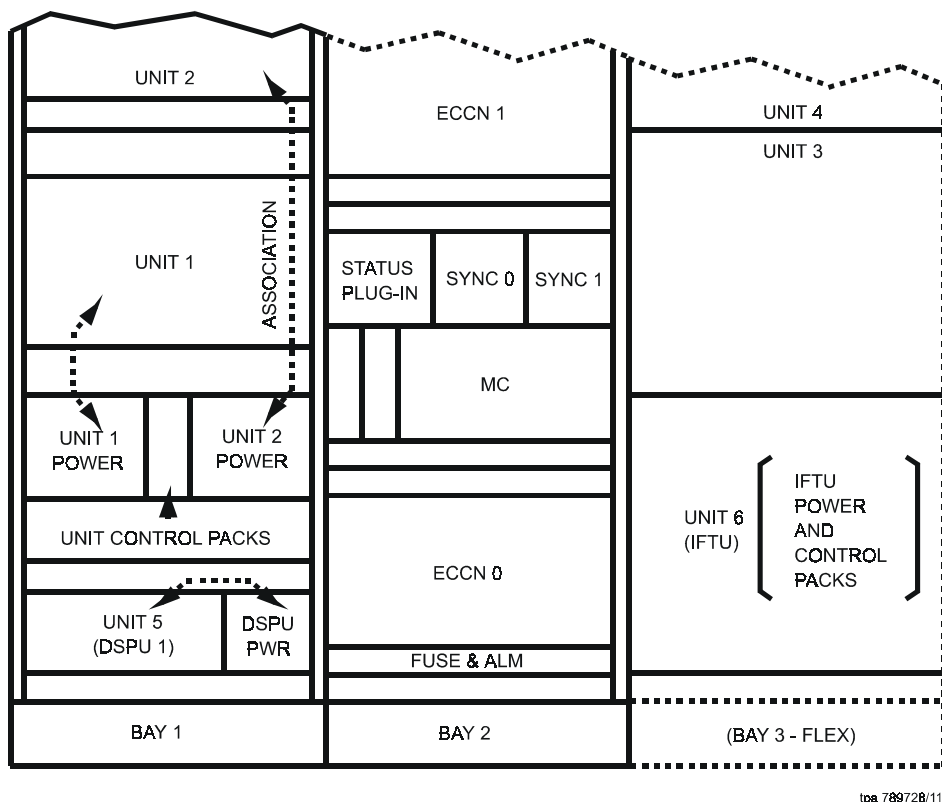Use Figure 3-11 to locate the power unit slots for the section of the frame being equipped. A DSPU is shown in unit 5; but with flexible side bays, DSPUs can be mounted in other unit positions.



tpa 789728/11

Figure 3-11. Multibay Frame Layout



NOTE:

Only three power units are needed in FTUs equipped with the codes of Series 5 (or later) TG80 DDCs (for DS1 lines). Because of the lower power requirements, three power units will supply the load and provide reserve power in case one fails.

Install Multibay Power Units and Fuses (Continued)

Power Unit and Fuse Codes and Quantities

The list below indicates the appropriate tables to find information on various power units and fuses.

Description	Table
Required codes and quantities of power units	Table 3-17
Required 48-Volt Input fuses for the fuse and alarm panel (bottom frame)	Table 3-18
Fuse board designations for the sync and main controller	Table 3-19
Fuse board designations for the IFTU	Table 3-20
Fuse board designations for the CCN	Table 3-21
Fuse board designations for the FTU (77-Type fuses) in the Original Interface Bay	Table 3-22
Fuse board designations for the DSPUs 5 and 6 fuses in the original interface bay	Table 3-23
Required output power of each power unit	Table 3-24

**NOTE:**

Version 1 FTUs use two GRP 1 (5A) DFBs and one GRP 2 (7.5A & 5A) DFB; the GRP 2 board is for fuses CQ-JX. The DSPU and multibay CCN both use GRP 3 (7.5A) DFBs.

(Continued on next page)

Install Multibay Power Units and Fuses (Continued)

Power Unit and Fuse Codes and Quantities, Continued

Table 3-17. Power Unit Summary (Non-CEF)

Circuit Block	CP Code	Designation/ Location	Equipage
MC	SM565	MCP /225-136	One
	411AA	PU /225-148	One
	484GA	PU /225-160	One
SYNC	TG58	0SPU /227-010	One
	TG58	1SPU /227-064	One
FTU1	411AA	PU /128-012	All PUs for unit supply a common bus; an extra PU is always provided for backup (for example, PUs 1 & 2 required for FTM 1).
	411AA	PU /128-024	
	411AA	PU /128-048	
FTU2	411AA	PU /128-064*	Same as unit 1.
	411AA	PU /128-108*	
	411AA	PU /128-124	
FTU3	411AA	PU /128-148	Same as unit 1.
	411AA	PU /128-160	
	411AA	PU /328-012	
FTU4	411AA	PU /328-024	Same as unit 1.
	411AA	PU /328-048	
	411AA	PU /328-064*	
CCN0	411AA	PU /328-108*	Same as unit 1.
	411AA	PU /328-124	
	411AA	PU /328-148	
CCN0	411AA	PU /328-160	Same as unit 1.
	485AB	PU1 /215-016	
	485AB	PU2 /215-032	
CCN1	485AB	PU3 /215-048	PU1 for CCNI, CCBs 1, 2, TSIs 11, 12, 13, 14, 15, 16, 21, 22
	485AB	PU4 /215-068	PU2 for CCB 3, TSIs 23, 24, 25, 26, 31, 32, 33, 34, 35, 36
	485AB	PU5 /215-108	PU3 for CCB 4, TSIs 41, 42, 43, 44, 45, 46, 51, 52, 53, 54
CCN1	485AB	PU6 /215-128	PU4 for CCBs 5, 6, TSIs 55, 56, 61, 62, 63, 64, 65, 66
	485AB	PU7 /215-144	PU5 Same assignment as Side 0
	485AB	PU8 /215-160	PU6
CCN1	485AB	PU7 /215-144	PU7
	485AB	PU8 /215-160	PU8

Table 3-17. Power Unit Summary (Non-CEF) (Continued)

Circuit Block	CP Code	Designation/ Location	Equipage
DSPU5	485AB		
	SM566	DCP5 /109-130	One
	411AA	1PU /109-142	One
DSPU6	411AA	0PU /109-160	One
	SM566	DCP6 /312-130	One
	411AA	0PU /312-142	One
	411AA	1PU /312-160	One

*These PUs are not required with Series 5 (or later) TG80 and new DDC codes; three PUs per unit will supply the load plus reserve in case one fails.

Table 3-18. 48-Volt Power (Non-CEF)

Fuse	Power Unit/CP			
	Type	Designation/ Location	Size	Bead Color
A1	411AA	128-012	70D,5A	Green
A2	411AA	128-108	70D,5A	Green
A3	411AA	328-012	70D,5A	Green
A4	411AA	328-108	70D,5A	Green
A5-1	-	(Indicating Fuse for A5-2)	70G,5A	Red
A5-2	485AB	PU1 (CCN 0)	70D,5A	Green
A6-1	-	(Indicating Fuse for A6-2)	70G,5A	Red
A6-2	485AB	PU2 (CCN 0)	70D,5A	Green
A7	411AA	1PU (Unit 5)	70D,5A	Green
A8	TG58	0SPU (SYNC 0)	70D,5A	Green
A8	-	0TB	70D,5A	Green
A9	411AA	1 PU (UNIT 6)	70D,5A	Green
B1	411AA	128-024	70D,5A	Green
B2	411AA	128-124	70D,5A	Green
B3	411AA	328-024	70D,5A	Green

Table 3-18. 48-Volt Power (Non-CEF) (Continued)

Fuse	Power Unit/CP			
	Type	Designation/ Location	Size	Bead Color
B4	411AA	328-124	70D,5A	Green
B5-1	-	(Indicating Fuse for B5-2)	70G,.5A	Red
B5-2	485AB	PU3 (CCN 0)	70D,5A	Green
B6-1	-	(Indicating Fuse for B6-2)	70G,.5A	Red
B6-2	485AB	PU4 (CCN 0)	70D,5A	Green
B7	411AA	0PU (UNIT 5)	70D,5A	Green
B8	TG58	1SPU (SYNC 1)	70D,5A	Green
B8	-	1TB	70D,5A	Green
B9	411AA	0PU (UNIT 6)	70D,5A	Green
C1	411AA	128-048 (Unit 1)	70D,5A	Green
C2	411AA	128-148 (Unit 2)	70D,5A	Green
C3	411AA*, 424AA, SM566, or 563A	328-048* (Unit 3)	70D,5A	Green
C4	411AA*, 424AA, SM566, or 563A	328-148* (Unit 4)	70D,5A	Green
C5-1	-	(Indicating Fuse for C5-2)	70G,.5A	Red
C5-2,	485AB	PU5 (1CCN)	70D,5A	Green
C6-1	-	(Indicating Fuse for C6-2)	70G,.5A	Red
C6-2,	485AB	PU6 (1CCN)	70D,5A	Green

Table 3-18. 48-Volt Power (Non-CEF) (Continued)

Fuse	Power Unit/CP			
	Type	Designation/ Location	Size	Bead Color
C7	411AA	(Unit 5)	70D,5A	Green
C8	-	TLIs	70D,5A	Green
C9	SM566*, 424AA, 411AA, or 563A	DCP6* (Unit 6)	70D,5A	Green
D1	411AA	128-064 (Unit 1)	70D,5A	Green
D2	411AA	128-160 (Unit 2)	70D,5A	Green
D3	411AA*, 424AA, SM566, or 563A	328-064* (Unit 3)	70D,5A	Green
D4	411AA*, 424AA, SM566, or 563A	326-160* (Unit 4)	70D,5A	Green
D5-1	-	(Indicating Fuse for D5-2)	70G,5A	Red
D5-2	485AB	PU7 (1CCN)	70D,5A	Green
D6-1	-	(Indicating Fuse for D5-2)	70G,5A	Red
D6-2,	485AB	PU8 (1CCN)	70D,5A	Green
D7	411AA	226-148	70D,5A	Green
D8	-	226-160	70D,5A	Green
D9	411AA	226-136 (MCP)	70,2A	Orange
D10	-	MTC	70G,5A	Red

Note: These are power units and locations for non-flex bay 3; An FTU in units 3 and 4, and a DSPU in unit 6.

Table 3-19. Sync and Main Controller (Non-CEF)

Synchronizer		Main Controller	
Power Unit/ Location	Associated Circuit Pack/Location	Power Unit/ Location	Associated Circuit Pack/Location
0SPU /227-010	0TLI1 /223-008	MCP /225-136	
	0TLI2 /223-016		BX /225-100
	0TLI3 /223-024		CPU2 /225-108
	0TLI4 /223-032		MTC /225-120
	0DPLL /225-076		CI /225-128
A8 FUSE	0TB /227-032	PU /225-148	
1SPU /227-064	1TLI1 /223-064		BX /225-100
	1TLI2 /223-056		CPU2 /225-108
	1TLI3 /223-048		MTC /225-120
	1TLI4 /223-040		CI /225-128

Table 3-20. IFTU Fuse Assignment

Fuse Boards	Designation (Note)	Associated Plug-Ins
ED-9C011-30	+5A1 through +5A4	4 plug-ins (8 NPCs) per fuse (see +5A5 below)
ED-9C011-30	(1-4 through 17-20) +5A5	
ED-9C012-30	+5A1 through +5A4	1 plug-in (2 NPCs) per fuse CPU UBX FTMI 0-Side FC 1-Side FC
ED-9C011-30	(1 through 20)	
	+5A5, number 1	
	+5A5, number 2	
	+5A5, number 3	
	+5A5, number 4	
	+5A5, number 5	

Note: Designations +5A1 through +5A4 correspond to the modules (shelves) of the unit. The fuse numbers correspond to the plug-ins on the shelf (either 1 for 1 or 1 fuse per 4 plug-ins, depending on the fuse board).

Table 3-21. CCN Fuses (Original Interface Bay)

CCN0		CCN1	
Fuse/ Location	Associated Circuit Pack/Location	Fuse/ Location	Associated Circuit Pack/Location
JA1 /215-072	0CCNI /246-150	JA1 /215-088	1CCNI /269-150
	0TSI11 /246-014		1TSI11 /269-014
	0TSI13 /246-020		1TSI13 /269-020
JA2	0CCB1 /246-032	JA2	1CCB1 /269-032
	0TSI15 /246-026		1TSI15 /269-026
	0TSI21 /246-038		1TSI21 /269-038
JA3	0TSI12 /254-014	JA3	1TSI12 /277-014
	0TSI14 /254-020		1TSI14 /277-020
	0TSI16 /254-026		1TSI16 /277-026
JA4	0CCB2 /254-032	JA4	1CCB2 /277-032
	0TSI22 /254-038		1TSI22 /277-038
JA5	0TSI23 /246-044	JA5	1TSI23 /269-044
	0TSI25 /246-050		1TSI25 /269-050
	0TSI31 /246-056		1TSI31 /269-056
JA6	0CCB3 /246-078	JA6	1CCB3 /269-078
	0TSI33 /246-066		1TSI33 /269-066
	0TSI35 /246-072		1TSI35 /269-072
JA7	0TSI24 /254-044	JA7	1TSI24 /277-044
	0TSI26 /254-050		1TSI26 /277-050
	0TSI32 /254-056		1TSI32 /277-056
JA8	0TSI34 /254-066	JA8	1TSI34 /277-066
	0TSI36 /254-072		1TSI36 /277-072
JB1 /215-076	0TSI41 /246-084	JB1 /215-092	1TSI41 /269-084
	0TSI43 /246-090		1TSI43 /269-090
	0TSI45 /246-096		1TSI45 /269-096

Table 3-21. CCN Fuses (Original Interface Bay) (Continued)

CCN0		CCN1	
Fuse/ Location	Associated Circuit Pack/Location	Fuse/ Location	Associated Circuit Pack/Location
JB2	0TSI51 /246-102	JB2	1TSI51 /269-102
	0TSI53 /246-108		1TSI53 /269-108
JB3	0CCB4 /254-078	JB3	1CCB4 /277-078
	0TSI42 /254-084		1TSI42 /277-084
	0TSI44 /254-090		1TSI44 /277-090
JB4	0TSI46 /254-096	JB4	1TSI46 /277-096
	0TSI52 /254-102		1TSI52 /277-102
	0TSI54 /254-108		1TSI54 /277-108
JB5	0CCB5 /246-124	JB5	1CCB5 /269-124
	0TSI55 /246-118		1TSI55 /269-118
	0TSI61 /246-130		1TSI61 /269-130
JB6	0TSI63 /246-136	JB6	1TSI63 /269-136
	0TSI65 /246-142		1TSI65 /269-142
JB7	0CCB6 /254-124	JB7	1CCB6 /277-124
	0TSI56 /254-118		1TSI56 /277-118
	0TSI62 /254-130		1TSI62 /277-130
JB8	0TSI64 /254-136	JB8	1TSI64 /277-136
	0TSI66 /254-142		1TSI66 /277-142

Table 3-22. 77-Type, FTU Fuses (Original Interface Bay)

Fuse (Note)	Associated NPCs			
	FTU 1	FTU 2	FTU 3	FTU 4
CA	1-8	161-168	321-328	481-488
CB	9-16	169-176	329-336	489-496
CC	17-24	177-184	337-344	497-504
CD	25-32	185-192	345-352	505-512
CE	33-40	193-200	353-360	513-520
CF	41-48	201-208	361-368	521-528
CG	49-56	209-216	369-376	529-536
CH	57-64	217-224	377-384	537-544
CI	65-72	225-232	385-392	545-552
CJ	73-80	233-240	393-400	553-560
CK	81-88	241-248	401-408	561-568
CL	89-96	249-256	409-416	569-576
CM	97-104	257-264	417-424	577-584
CN	105-112	265-272	425-432	585-592
CO	113-120	273-280	433-440	593-600
CP	121-128	281-288	441-448	601-608
CQ	129-136	289-296	449-456	609-616
CR	137-144	297-304	457-464	617-624
CS	145-152	305-312	465-472	625-632
CT	153-160	313-320	473-480	633-640
CU	(0)FC 1-4	(0)FC 1-4	(0)FC 1-4	(0)FC 1-4
CV	(1)FC 1-4	(1)FC 1-4	(1)FC 1-4	(1)FC 1-4
JW	FTMI 1-4	FTMI 1-4	FTMI 1-4	FTMI 1-4
JX	CPU, UBX	CPU, UBX	CPU, UBX	CPU, UBX
Note: The unit number that the fuses supply is identified on the fuse panel.				

Table 3-23. DSPU5 and DSPU6 Fuses

DSPU5		DSPU6	
Fuse or PU/ Location	Associated Circuit Pack/Location	Fuse or PU/ Location	Associated Circuit Pack/Location
(SIDE 0)		(SIDE 0)	
0PU/112-160		0PU/312-160	
JBH/112-148	NPC641 /112-006	JBH/312-148	NPC801 /312-006
	NPC661 /112-012		NPC821 /312-012
JBG	NPC681 /112-018	JBG	NPC841 /312-018
	NPC701 /112-024		NPC861 /312-024
JBF	NPC721 /112-030	JBF	NPC881 /312-030
	NPC741 /112-036		NPC901 /312-036
JBE	NPC761 /112-042	JBE	NPC921 /312-042
	NPC781 /112-048		NPC941 /312-048
(SIDE 1)		(SIDE 1)	
1PU/112-142		1PU/312-142	
JBD/112-148	NPC641 /112-074	JBD/312-148	NPC801 /312-074
	NPC661 /112-080		NPC821 /312-080
JBC	NPC681 /112-086	JBC	NPC841 /312-086
	NPC701 /112-092		NPC861 /312-092
JBB	NPC721 /112-098	JBB	NPC881 /312-098
	NPC741 /112-104		NPC901 /312-104
JBA	NPC761 /112-110	JBA	NPC921-310
	NPC781 /112-116		NPC941 /312-116
DCP5 /112-130	CPU5 /112-056	DCP6 /312-130	CPU6 /312-056
	DSPI5 /112-062		DSPI6 /312-062


Table 3-24. Power Unit Requirements

Power Unit Code	Output Requirement (DC Volts)	Meter Connections	
		Positive Lead	Negative Lead
SM565	+11.75 to +12.25	+V2	RTN
	-11.75 to -12.25	-V2	RTN
411AA	+5.1 to +5.3	+	-
TG58	+4.75 to +5.25	+	-
	-4.95 to -5.45	+	-
424AA	+5.0 to +5.5	+	-
485AB	+5.1 to +5.4	+	-
SM566	+4.75 to +5.25	+	-
563A	+4.9 to +5.3	5.5V	GRD

Install Single-Bay Power Units and Fuses

Power Unit Locations

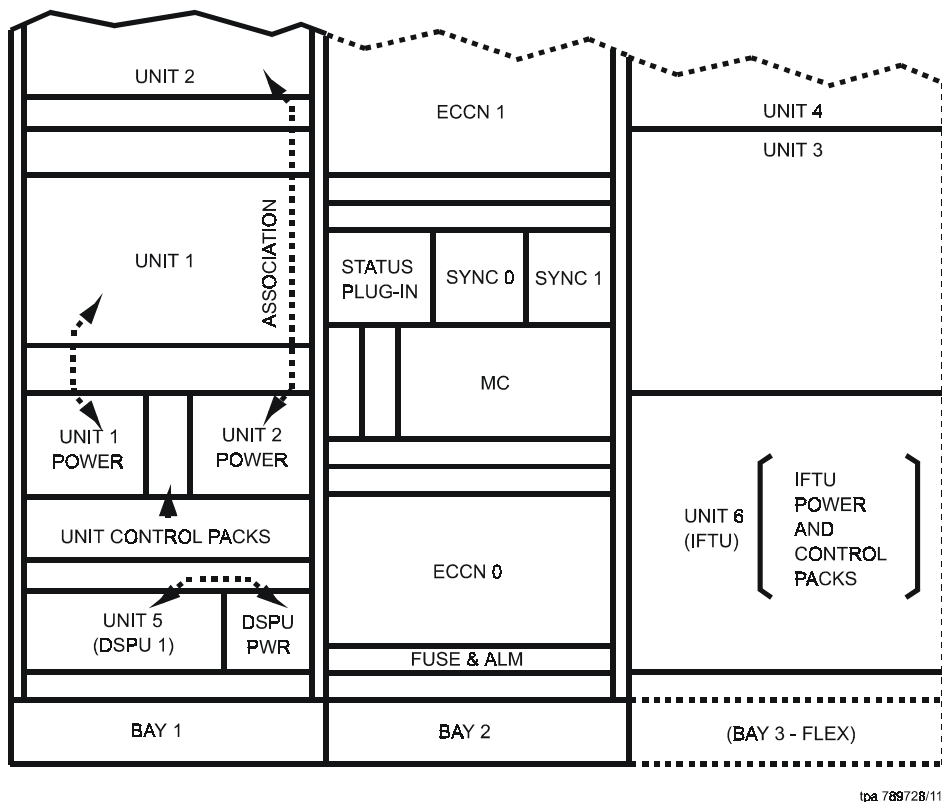Use Figure 3-12 to locate the power unit slots for the section of the frame being equipped.



tpa 789728/11

Figure 3-12. Single-Bay Frame Layout

The FTU power units should be equipped in left-to-right order even though they all feed a common bus. Low voltage can only be detected if one power unit is disconnected and the test is repeated for all combinations of the power units.

Install Single-Bay Power Units and Fuses (Continued)

Power Unit and Fuse Codes and Quantities

The list below indicates the appropriate tables to find information on various power units and fuses.

Description	Table
Required codes and quantities of power units	Table 3-17
Required 48-Volt Input fuses for the fuse and alarm panel (bottom frame)	Table 3-25
Fuse board designations for the FTU (77-Type fuses) in the Original Interface Bay (only FTU 1 applies to a single-bay frame)	Table 3-26
Fuse board designations for the DSPUs 5 fuses in the original interface bay	Table 3-27
Fuse board designations for the sync and main controller	Table 3-28
Required output power of each power unit	Table 3-29

**NOTE:**

The FTU uses two GRP 1 (5A) DFBs and one GRP 2 (7.5A & 5A) DFB; the GRP 2 board is for fuses CQ-JX. The DSPU uses a GRP 3 (7.5A) DFB, and the CCN2 uses a GRP 4 (5A) DFB.

(Continued on next page)

Table 3-25. Single-Bay 48-Volt Fuses

Fuse	Power Unit	
	Type	Designation/Location
A1	411AA	FTU1-First PU
A2	TG58	0SPU (Sync Power)
A3	411AA	0PU (DSPU Side 0 Power)
A4	411AA	CCN2 Side 0 Power Unit
B1	411AA	FTU1-Second PU
B2	TG58	1SPU (Sync Power)
B3	411AA	1PU (DSPU Side 1 Power)
B4	411AA	CCN2 Side 1 Power Unit
C1	411AA	FTU1-Third PU
C2	NONE	48 Volts to TLIs 1-4, Both Sides
C3	SM566	DCP (DSPU Power)
D2	411AA	+5 Controller Power
D4	SM565	MCP (Main Controller Power)
D5	NONE	48 Volts to MTC Pack

Table 3-26. 77-Type, FTU Fuses - Single-Bay Frame

Fuse (Note)	Associated NPCs FTU 1
CA	1-8
CB	9-16
CC	17-24
CD	25-32
CE	33-40
CF	41-48
CG	49-56

Table 3-26. 77-Type, FTU Fuses - Single-Bay Frame (Continued)

Fuse (Note)	Associated NPCs FTU 1
CA	1-8
CH	57-64
CI	65-72
CJ	73-80
CK	81-88
CL	89-96
CM	97-104
CN	105-112
CO	113-120
CP	121-128
CQ	129-136
CR	137-144
CS	145-152
CT	153-160
CU	(0)FC 1-4
CV	(1)FC 1-4
JW	FTMI 1-4
JX	CPU, UBX

Note: The unit number that the fuses supply is identified on the fuse panel.

Table 3-27. DSPU5 Fuses

DSPU5		DSPU6	
Fuse or PU/ Location	Associated Circuit Pack/Location	Fuse or PU/ Location	Associated Circuit Pack/Location
(SIDE 0)		(SIDE 0)	
0PU/109-160		0PU/312-160	
JBH/109-148	NPC641 /109-006	JBH/312-148	NPC801 /312-006
	NPC661 /109-012		NPC821 /312-012
JBG	NPC681 /109-018	JBG	NPC841 /312-018
	NPC701 /109-024		NPC861 /312-024
JBF	NPC721 /109-030	JBF	NPC881 /312-030
	NPC741 /109-036		NPC901 /312-036
JBE	NPC761 /109-042	JBE	NPC921 /312-042
	NPC781 /109-048		NPC941 /312-048
(SIDE 1)		(SIDE 1)	
1PU/109-142		1PU/312-142	
JBD/109-148	NPC641 /109-074	JBD/312-148	NPC801 /312-074
	NPC661 /109-080		NPC821 /312-080
JBC	NPC681 /109-086	JBC	NPC841 /312-086
	NPC701 /109-092		NPC861 /312-092
JBB	NPC721 /109-098	JBB	NPC881 /312-098
	NPC741 /109-104		NPC901 /312-104
JBA	NPC761 /109-110	JBA	NPC921-310
	NPC781 /109-116		NPC941 /312-116
DCP5 /109-130	CPU5 /109-056 DSPI5 /109-062	DCP6 /312-130	CPU6 /312-056 DSPI6 /312-062

Table 3-28. Sync and Main Controller (Single-Bay)

Synchronizer		Main Controller	
Power Unit/ Location	Associated Circuit Pack/Location	Power Unit/ Location	Associated Circuit Pack/Location
	OTLI2 /130-016		BX /132-100
	OTLI3 /130-024		CPU2 /132-108
	OTLI4 /130-032		MTC /132-120
	0DPLL /132-076		CI /132-128
	1TLI2 /130-056		BX /132-100
	1TLI3 /130-048		CPU2 /132-108
	1TLI4 /130-040		MTC /132-120
	1DPLL /132-084		CI /132-128

Table 3-29. Power Unit Requirements

Power Unit Code	Output Requirement (DC Volts)	Meter Connections	
		Positive Lead	Negative Lead
SM565	+11.75 to +12.25	+V2	RTN
	−11.75 to −12.25	−V2	RTN
411AA	+5.1 to +5.3	+	−
TG58	+4.75 to +5.25	+	−
	−4.95 to −5.45	+	−
424AA	+5.0 to +5.5	+	−
485AB	+5.1 to +5.4	+	−
SM566	+4.75 to +5.25	+	−
563A	+4.9 to +5.3	5.5V	GRD

Install Plug-Ins, Grow, and Restore FTU/IFTU

Overview

The following must be performed in order to bring the FTU/IFTU shelf In-Service:

1. Install FTM circuit packs
2. Grow the FTU/IFTU
3. Restore the ECCN/CCN
4. Restore the UC
5. Grow and restore the FTM circuit packs.

Install FTM Circuit Packs (FTMIs and FCs)

FTU Versions

The three versions of the FTU are:

- FTU
- IFTU
- IFTU2.

These units are illustrated in Figure 3-13, Figure 3-14, and Figure 3-15.

(Continued on next page)

Install Plug-Ins, Grow, and Restore FTU/IFTU (Continued)

Install FTM Circuit Packs (FTMIs and FCs), Continued


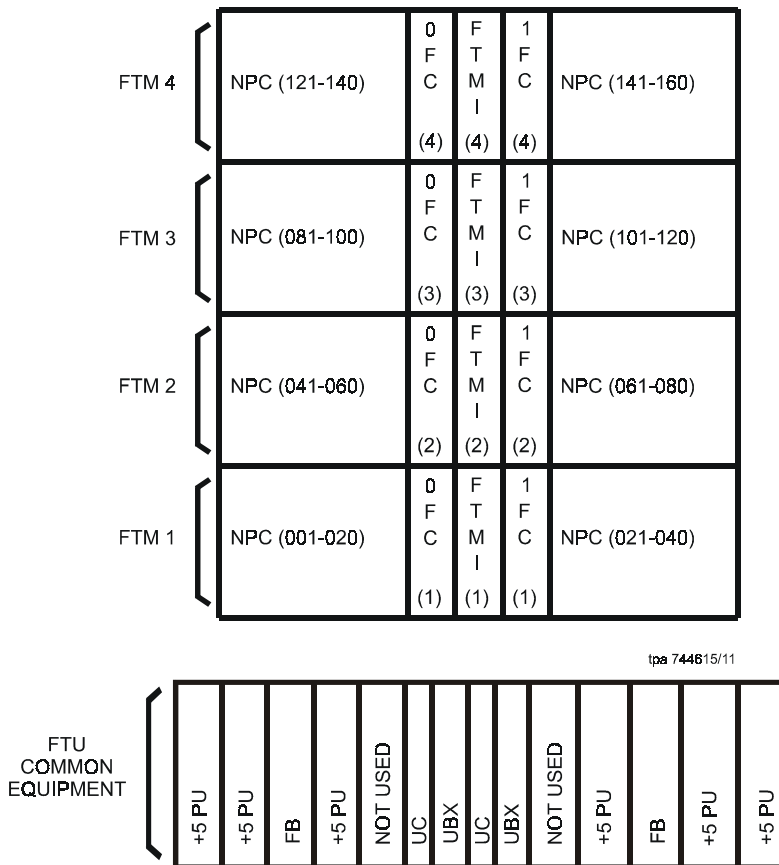


Figure 3-13. Original FTU

(Continued on next page)

Install Plug-Ins, Grow, and Restore FTU/IFTU (Continued)

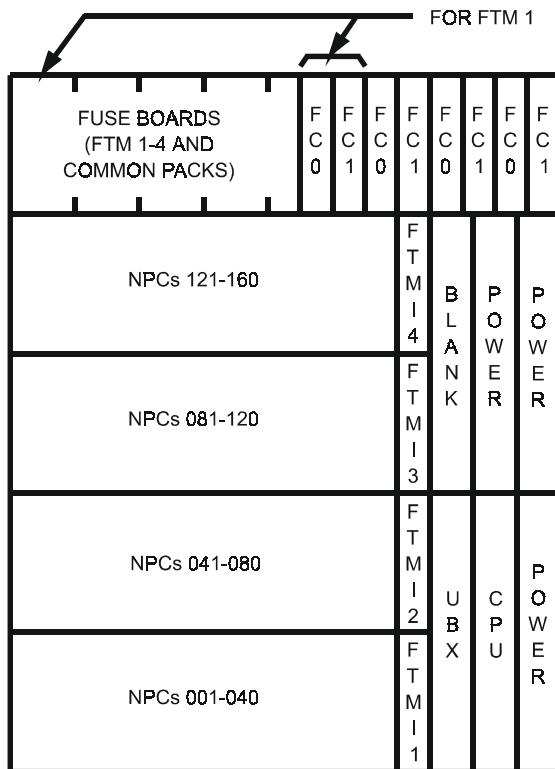Install FTM Circuit Packs (FTMIs and FCs), Continued



tpa 789371/11

Figure 3-14. Integrated Facility Terminating Unit ED9C004-30 G1 or G2

(Continued on next page)

Install Plug-Ins, Grow, and Restore FTU/IFTU (Continued)

Install FTM Circuit Packs (FTMIs and FCs), Continued

FUSE BOARDS 1-17					P O W E R 1	P O W E R 2	P O W E R 3
FTM 4	NPCs 121-140	F C 0	F T M I 4	F C 1	NPCs 141-160	BLANK	
FTM 3	NPCs 80-100	F C 0	F T M I 3	F C 1	NPCs 101-120		
FTM 2	NPCs 41-60	F C 0	F T M I 2	F C 1	NPCs 61-80	U B X	C P U
FTM 1	NPCs 1-20	F C 0	F T M I 1	F C 1	NPCs 21-40		

Figure 3-15. Integrated Facility Terminating Unit 2 ED9C004-30 G3

(Continued on next page)

Install Plug-Ins, Grow, and Restore FTU/IFTU (Continued)

Install FTM Circuit Packs (FTMIs and FCs), Continued

NPC Codes and Types

Each circuit pack contains the circuitry for two NPCs. Various NPC circuit packs and NPC types are available to provide a variety of required line interface and functions.

NPC Locations

Use Table 3-30 to determine the NPC numbers in each unit and facility terminating module (FTM).



NOTE:

For 2.048-Mb/s Interface and Enhanced 2.048-Mb/s Interface, the last eight NPCs (four DPCs) are not equipped.

Table 3-30. NPC Location in Unit

Hierarchical NPC Number	Unit Number	FTMI Number
001-032	1	1
041-072	1	2
081-112	1	3
121-152	1	4
161-182	2	1
201-232	2	2
241-272	2	3
281-312	2	4
321-352	3	1
361-392	3	2
401-432	3	3
441-472	3	4
481-512	4	1
521-552	4	2
561-592	4	3

Table 3-30. NPC Location in Unit (Continued)

Hierarchical NPC Number	Unit Number	FTMI Number
601-632	4	4
641-672	5	1
681-712	5	2
721-752	5	3
761-792	5	4
801-832	6	1
841-872	6	2
881-912	6	3
921-952	6	4
961-992	7	1
1001-1032	7	2
1041-1072	7	3
1081-1112	7	4
1121-1152	8	1
1161-1192	8	2
1201-1232	8	3
1241-1272	8	4
1281-1312	9	1
1321-1352	9	2
1361-1392	9	3
1401-1432	9	4
1441-1472	10	1
1481-1512	10	2
1521-1552	10	3
1561-1592	10	4
1601-1632	11	1
1641-1672	11	2
1681-1712	11	3
1721-1752	11	4

Table 3-30. NPC Location in Unit (Continued)

Hierarchical NPC Number	Unit Number	FTMI Number
1761-1792	12	1
1801-1832	12	2
1841-1872	12	3
1881-1912	12	4
1921-1952	13	1
1961-1992	13	2
2001-2032	13	3
2041-2072	13	4
2081-2112	14	1
2121-2152	14	2
2161-2192	14	3
2201-2232	14	4
2241-2272	15	1
2281-2312	15	2
2321-2352	15	3
2361-2392	15	4
2401-2432	16	1
2441-2472	16	2
2481-2512	16	3
2521-2552	16	4

Install Plug-Ins, Grow, and Restore FTU/IFTU (Continued)

Grow FTU/IFTU

Growing the FTU places the unit in the data base and defines the type of application (FTU/IFTU). The associated ETSI in the cross-connect network is automatically grown when the FTU is grown. This is indicated in the completion message. The ETSI will be restored in *Restore ECCN and CCN* in this section.

**NOTE:**

If the peripheral unit is not recorded in the software configuration file, the growth procedure will be denied (INERR BAD ARG).

Restore ECCN and CCN

The DACS II will either have an ECCN or a CCN to restore. When the ECCN/CCN is restored, it will establish communications within the network and enables the restoral of the next pack in the list.

When restoring the CCI pack on the ECCN/CCN, the two BTs (bus terminators) for the shelf will automatically be restored. This is indicated in the completion message.

Restore UC

For the CEF, the unit UC diagnostic for the restore operation runs wiring tests between the unit and the EMC.

Install Plug-Ins, Grow, and Restore FTU/IFTU (Continued)

Grow FTMI

When growing the FTMI, the FTMI is placed in the database and the line impedance of the DPCs to be used in the module is specified (either 120-ohm for twisted wire pairs or 75-ohm for coaxial cable). The associated FCs are grown automatically when the FTMI is grown.

The equalizer settings for the DACS II are based on the line cable length from the DACS II to the line-jack bay. These values are listed in Table 3-31.

Table 3-31. DS1 (1.544 Mb/s) Equalizer Settings

Setting	Cable Length (22 Gauge)	Cable Length (26 Gauge)
1	0 through 133 feet	0 through 90 feet
2	133 through 267 feet	90 through 180 feet
3	267 through 400 feet	180 through 270 feet
4	400 through 533 feet	270 through 360 feet
5	533 through 655 feet	360 through 450 feet

Restore FTMI and FCs

The FMTI and FCs must be restored in the correct order to establish communications with the unit and enable the restoral of the next pack in the list. After a higher level pack is restored, all the next lower packs can be restored which in turn allows restoral of any of the lower level packs.



NOTE:

The FTMI must also be restored to service after the impedance is changed and before NPCs can be added to service.

Remove and Degrow FTU/IFTU

Overview

This section provides information to support procedures for removing IFTU (integrated facility terminating unit) or FTU (facility terminating unit) circuit packs from service and to degrow the unit.

Deprovisioning Tips

When unit packs are removed from service and the unit UC is degrown, the associated and ETSIs (or CCBs) and TSIs, will **automatically** be removed and degrown (disconnected). This occurs only if the associated packs are not supporting cross-connections or other packs (subentities). However, the UC must be in-service to use other commands. Therefore, the unit components must be removed and degrown in the following order:

1. The NPCs in the unit are removed and degrown

NPCs can be physically removed from the unit after they are removed from service. After degrowing a pack or group, it can be regrown with different specifications.

2. FTMI is removed and degrown

The FCs on both sides will be removed with the FTMI degrowth command.

3. The UC is removed and degrown.

The associated and ETSIs (or CCBs) and TSIs on both sides of the unit will **automatically** be removed and degrown.

Install Circuit Packs, Grow and Restore DSPU

Overview

The following must be performed in order to bring the DSPU shelf In-Service:

1. Install DSPI and CPU circuit packs
2. Grow the DSPU
3. Restore the ECCN/CCN
4. Restore the UC
5. Restore the DSPI.

Install DSPI and CPU Circuit Packs

Figure 3-16 illustrates the designated positions on the DSPU shelf.



Figure 3-16. DSPU Shelf

Install Circuit Packs, Grow and Restore DSPU (Continued)

Grow DSPU

This growth operation grows the unit in the database and to define the type of application (DSPU). The associated ETSI, or the associated CCBs and TSIs, in the cross-connect network are grown when this command is executed. This is indicated in the completion message.

Restore ECCN/CCN

The DACS II will either have an ECCN or a CCN to restore. When the ECCN/CCN is restored, it will establish communications within the network and enables the restoral of the next pack in the list.

When restoring the CCI pack on the ECCN/CCN, the two BTs (bus terminators) for the shelf will automatically be restored.

Restore UC

For the CEF, the unit UC diagnostic for the restore operation runs wiring tests between the unit and the EMC.

Restore DSPI

The DSPI is the interface between the UC and te DSP circuit packs. Restoring the DSPI will enable the DSP operation.

Change DS1 Equalizer Value

This operation is used to change or correct the value of the equalizers for the facility terminating module. The equalization for each half of the shelf, which contains 10 dual digroup cards, can be set to different values. This operation can also be used to enter the value for the second half of the shelf if it was not entered initially. The FTMI must be in-service to change an equalizer value.

The equalization values are found in Table 3-31.

Install Circuit Packs, Grow and Restore DSPU (Continued)

Change DS1 Equalizer Value on 19.2-Kbit/s MJU Circuit Pack

The DS1 equalization is set on the 19.2-Kbit/s MJU circuit pack by adjusting the DIP switch rockers on the SW1 switch of the MJU circuit board. To set a switch to the on position, push the rocker to the 1 position. Table 3-32 lists the 19.2 Kbit/s equalization settings.

Table 3-32. 19.2-kb/s Equalization Settings

Cable Length (Feet)		Switch Setting		
Type 609 (22 GA.)	Type 1249 (26 GA.)	Rocker 1	Rocker 2	Rocker 3
0 through 50	0 through 90	on	on	on
51 through 267	91 through 180	on	on	off
268 through 400	181 through 270	on	off	on
401 through 533	271 through 360	on	off	off
534 through 655	361 through 450	off	on	on

The selected equalization will be effective when the circuit pack is inserted (with the reset that occurs when the MJU is powered up) and will be read again whenever the **RESET** button on the circuit pack is operated.

Remove and Degrow DSPU

Overview

This section provides information to support procedures for removing DSPU (digital signal processing unit) circuit packs from service and to degrow the unit. However, the UC must be in-service to use other commands. Therefore, the unit components must be removed and degrown in the following order:

1. The NPCs in the unit are removed and degrown.

NPCs can be physically removed from the unit after they are removed from service. After degrowing a pack or group, it can be regrown with different specifications.

2. The UC is removed and degrown.

The associated and ETSIs (or CCBs) and TSIs on both sides of the unit will **automatically** be removed and degrown.

There are also commands to remove all the ETSIs or TSIs per side to expedite troubleshooting.

Deprovisioning Tips

When removing and degrowing the DSPU:

- When a pack in a duplicated circuit group is removed on the active side, service will automatically switch over to the other side (if in-service).
 - To expedite degrowing DSPU NPCs, the DISCONNECT NPC command removes both NPC sides from service and degrows the NPC; the REMOVE command is not used.
-

NPC

Overview This section provides information for installing, growing, restoring, and changing the options or parameters for various NPC types.

Set Optional Alarm Threshold in Data Base

Overview This operation is used to enter (or change) values which are stored as options for facility NPC alarm thresholds. Up to three options can be entered for any of the NPC alarm parameters; these options can then be selected for an NPC via the CRTE or ED commands. If the alarm thresholds for an NPC are not specified, the internal default values apply. Different alarm types apply to the NPCs for 2.048-Mb/s Interface.

NPC Options Table 3-33, Table 3-34 and Table 3-35 list the setup options for various NPC types.

Table 3-33. PB/PC Type Setup Options

NPC Type	Option (rr)	Performance Parameter	Threshold Range	Default Value
PB/PC	31	DM, Degraded Minutes, 1 hour	1-60	60
	32	DM, Degraded Minutes, 24 hours	1-1440	1440
	33	SERS, Severely Errored Seconds, 15 minutes	1-900	900
	34	SERS, Severely Errored Seconds, 24 hours	1-65535	65535
	35	ERS, Errored Seconds, 15 minutes	1-900	900
	36	ERS, Errored Seconds, 24 hours	1-65535	65535
	37	US, Unavailable Seconds, 15 minutes	1-900	900

Table 3-33. PB/PC Type Setup Options (Continued)

NPC Type	Option (rr)	Performance Parameter	Threshold Range	Default Value
PB/PC	38	US, Unavailable Seconds, 24 hours	1-65535	65535
	39	SLIPS, 15 minutes	1-900	900
	40	SLIPS, 24 hours	1-65535	65535

Table 3-34. PA Type Setup Options

rr	Parameter	Interval	Threshold Value Range	Default Threshold Value
11	CRC Block Errors	DAILY	1 - 79056000	176947
12	Framing Errors	DAILY	1 - 345600000	176947
13	Out of Frame Seconds	DAILY	1 - 86400	4
14	Errored Seconds	DAILY	1 - 86400	4320
15	Severely Errored Seconds	DAILY	1 - 86400	90
16	Controlled Slip Seconds	DAILY	1 - 86400	4
17	Coding Violations	DAILY	1 - 176947200	176947
18	Unavailable Seconds	DAILY	1 - 86400	90
19	Unavailable Time Count	DAILY	1 - 4320	9
20	Multiframe Errors	DAILY	1 - 86400	4095
21	Far End Block Errors	DAILY	1 - 79056000	176947
22	Far End Errored Seconds	DAILY	1 - 86400	4320
23	Far End Severely Errored Seconds	DAILY	1 - 86400	90
24	Far End Unavailable Seconds	DAILY	1 - 86400	90
81	CRC Block Errors	15MIN	1 - 823500	18432
82	Framing Errors	15MIN	1 - 3600000	18432
83	Out of Frame Seconds	15MIN	1 - 900	4

Table 3-34. PA Type Setup Options (Continued)

rr	Parameter	Interval	Threshold Value Range	Default Threshold Value
84	Errored Seconds	15MIN	1 - 900	300
85	Severely Errored Seconds	15MIN	1 - 900	30
86	Controlled Slip Seconds	15MIN	1 - 900	1
87	Coding Violations	15MIN	1 - 1843200	18432
88	Unavailable Seconds	15MIN	1 - 900	30
89	Unavailable Time Count	15MIN	1 - 45	3
90	Multiframe Errors	15MIN	1 - 900	255
91	Far End Block Errors	15MIN	1 - 823500	18432
92	Far End Errored Seconds	15MIN	1 - 900	300
93	Far End Severely Errored Seconds	15MIN	1 - 900	30
94	Far End Unavailable Seconds	15MIN	1 - 900	30

Table 3-35. DA/TA Type Setup Options

rr	Parameter	Threshold Value Range	Default Threshold Value
41	Daily Near-end Path Coding Violations	000000000 to 134217727	132960†
42	Daily Near-end Path Errored Seconds	00000 to 86400	648
43	Daily Near-end Path Severely Errored Seconds	00000 to 86400	100
44	Daily Near-end Severely Errored Framing Seconds	00000 to 86400	17
45	Daily Near-end Controlled Slip Seconds	00000 to 86400	4

Table 3-35. DA/TA Type Setup Options (Continued)

rr	Parameter	Threshold Value Range	Default Threshold Value
46	Daily Near-end Unavailable Seconds	00000 to 86400	10
47	Daily Near-end Line Coding Violations	000000000 to 134217727	133400
48	Daily Near-end Line Errored Seconds	00000 to 86400	648
49	Daily Near-end Line Severely Errored Seconds	00000 to 86400	100
50	Daily Far-end Path Coding Violations	000000000 to 134217727	132960†
51	Daily Far-end Path Errored Seconds	00000 to 86400	648
52	Daily Far-end Path Severely Errored Seconds	00000 to 86400	100
53	Daily Far-end Severely Errored Framing Seconds	00000 to 86400	17
54	Daily Far-end Controlled Slip Seconds	00000 to 86400	4
55	Daily Far-end Unavailable Seconds	00000 to 86400	10
56	Daily Far-end Line Errored Seconds	00000 to 86400	648
57	15-Minute Near-end Path Coding Violations	0000000 to 2097151	13296‡
58	15-Minute Near-end Path Errored Seconds	000 to 900	65
59	15-Minute Near-end Path Severely Errored Seconds	000 to 900	10
60	15-Minute Near-end Severely Errored Framing Seconds	000 to 900	2
61	15-Minute Near-end Controlled Slip Seconds	000 to 900	1

Table 3-35. DA/TA Type Setup Options (Continued)

rr	Parameter	Threshold Value Range	Default Threshold Value
62	15-Minute Near-end Unavailable Seconds	000 to 900	10
63	15-Minute Near-end Line Coding Violations	0000000 to 2097151	13340
64	15-Minute Near-end Line Errored Seconds	000 to 900	65
65	15-Minute Near-end Line Severely Errored Seconds	000 to 900	10
66	15-Minute Far-end Path Coding Violations	0000000 to 2097151	13296†
67	15-Minute Far-end Path Errored Seconds	000 to 900	65
68	15-Minute Far-end Path Severely Errored Seconds	000 to 900	10
69	15-Minute Far-end Severely Errored Framing Seconds	000 to 900	2
70	15-Minute Far-end Controlled Slip Seconds	000 to 900	1
71	15-Minute Far-end Unavailable Seconds	000 to 900	10
72	15-Minute Far-end Line Errored Seconds	000 to 900	65

† The value shown applies to ESF framing and is a count of CRC errors. When the DS1 has D4 or T1DM framing, framing errors are counted and the default Daily value is 691.

‡ The value shown applies to ESF framing and is a count of CRC errors. When the DS1 has D4 or T1DM framing, framing errors are counted and the default 15-Minute value is 72.

Install Circuit Packs, Grow and Restore IFTU2 NPC

Overview

This process is used to:

- Enter information (grow) into the database
- Provision as IFTU2 NPCs
- Bring the NPCs into service.

Install Circuit Packs and Grow Type PB/PC NPC

DPC/EDPC cards are installed in the IFTU2 shelf and must be grown as either PB or PC type NPCs. When growing the NPCs, the following is entered into the command:

- Line interface impedance
- The mode NSA (nonsignaling associated) or CAS (channel associated signaling)
- Selection of line signal format options.

These line signal format options include assigning alarm meanings to transitions of bits 3, 4 and 5 of time slot 0 (TS0).



NOTE:

Only bits a through g (for xy values) can be used for NPC provisioning with the basic 2.048-Mb/s Interface software feature. The remaining bits are used with the Enhanced 2.048-Mb/s Interface feature to assign alarm meanings to TS0 bits. The TG187 pack is needed for growth option jkl = 011 or 101 to provide MBER (minor bit error rate) operation.

(Continued on next page)

Install Circuit Packs, Grow and Restore IFTU2 NPC (Continued)

Install Circuit Packs and Grow Type PB/PC NPC, Continued

Facility Parameters

The NPC monitors the following facility parameters:

- Slips
- Errored seconds
- Severely errored seconds
- Degraded minutes
- Unavailable seconds.

The alarm thresholds for any or all of these can be specified by listing the parameter and threshold option in the command. The IW (insertion word), which is sent by the NPC on any un-connected channels or on all channels when the NPC is removed from service, can be specified in this command.

PB/PC-Type NPC Information

The xyz field is a 3-digit hexadecimal number. Each digit corresponds to a 4-bit binary number (x = abcd, y = efgh, z = jklm). Bit c of "x" (xyz field) selects the use of the <tc> field and, for Enhanced 2.048-Mb/s Interface, determines the alarm network timer as follows: c = 0 for 144 ms and c = 1 for 480 ms for local alarms. The c = 1 selection is required to specify <tc> for a DS1 connection (gateway).

The list below indicates the appropriate tables to find NPC and alarm information.

Description	Table
PB/PC-Type NPC Options (only bits a through g are for Basic 2.048-Mb/s)	Table Table 3-36
PB/PC-Type NPC Facility Parameters	Table Table 3-37
PB/PC-Type NPC Alarm Threshold Values (Optional field)	Table Table 3-38

(Continued on next page)

Install Circuit Packs, Grow and Restore IFTU2 NPC (Continued)

Install Circuit Packs and Grow Type PB/PC NPC, Continued

Table 3-36. Hexadecimal/Binary Numbers

Hex	Bit	Value	Meaning
x	a	0	CRC-4 multiframe in TS0
		1	Non-CRC-4 framing in TS0
	b	0	NPC is not used as a synchronization source
		1	NPC is used as a synchronization source
y	c	0	CCITT G.732 Consequent AIS in signaling
		1	Specified consequent action; <tc> field in commands
	d	0	Nonsignaling associated (NSA)
		1	16-state channel associated signaling (CAS)
y	e	0	Telephone Channel Numbering
		1	Time Slot Channel Numbering (NSA)
	f	0	Convert the abcd bits of TS16 to 1111 if 0000
		1	Pass signaling bits through unchanged
z	g	0	AIS applied to receive TS16 upon RAI, RAIS, or R16
		1	AIS not applied to receive TS16 upon RAI, RAIS, or R16
	h	0	TS0 bit 5 = SFI unaffected by synchronizer holdover
		1	TS0 bit 5 = SFI inverted on synchronizer holdover
z	jkl	000	TS0 bit 3 = RAI indication within 2 ms.
		001	TS0 bit 3 = RAI indication in t^*
		010	TS0 bit 4 = RAIS in t^* and RAI within 2 ms.*
		011	TS0 bit 4 = Detect BER, enable RBER in t^* and RAI in 2 ms.
		100	TS0 bit 4 = RAIS and RAI in t^* (Transmic 2G)*
		101	TS0 bit 4 = Detect BER, disable RBER and RAI within 2 ms*
		110	Bits 3 through 8 in t^* (Transmic 1G)
		111	Unassigned
z	m	0	Unassigned, only m = 0 is valid

* When bit c=0, time t is 144 ms; when bit c=1, t is 144 ms for remote alarms, but t is 480 ms for local alarms except for jkl = 011 or 101 (MBER selected). With MBER, t is 2496 ms (SFDT).

Reference: HEX A=1010, B=1011, C=1100, D=1101, E=1110, F=1111.

Install Circuit Packs, Grow and Restore IFTU2 NPC (Continued)

Install Circuit Packs and Grow Type PB/PC NPC, Continued

Table 3-37. Facility Parameter

Type (rr,ss,tt)	Meaning
31	DM, 1 Hour
32	DM, 24 Hour
33	SERS, 15 Minute
34	SERS, 24 Hour
35	ERS, 15 Minute
36	ERS, 24 Hour
37	US, 15 Minute
38	US, 24 Hour
39	SLIPs, 15 Minute
40	SLIPs, 24 Hour

Table 3-38. Alarms Option

Alarm Class	Option 0 (Default)	Option 1	Option 2	Option 3*
MI (Info)	0	3	6	9
DMA (Deferred)	1	4	7	A
PMA (Prompt)	2	5	8	B

* Only valid option for PB/PC types.

Note: C - disables monitoring of a facility parameter

Install Circuit Packs, Grow and Restore IFTU2 NPC (Continued)

Install Circuit Packs and Grow Type PA NPC

This operation is used to enter information (grow) into the database to provision the NPC as a type PA. This allows the enhanced facility monitoring feature to be used (refer to *Performance Monitoring* in Volume I, Chapter 9.). The facility monitoring feature is also supported with type PA NPCs.

PA-Type NPC Information

The list below indicates the appropriate tables to find NPC and alarm information.

Description	Table
PA-Type NPC Options	Table 3-39 to Table 3-41
PA-Type NPC Facility Parameter Numbers	Table 3-42

A Y in a column of the NPC options table indicates that the particular feature is enabled by the corresponding x, y, or z provisioning value.

Table 3-39. PA-Type NPC x Options

x Value	CRC-4 Mode	Automatic CRC-4	Far-End PM	NPC Used as Sync Sourc	TS0 Bit 5 Used for SFI
0	Y				
1	Y		Y		Y
2	Y				Y
3	Y		Y		
4	Y			Y	
5	Y		Y	Y	Y
6	Y			Y	Y
7	Y		Y	Y	
8		Y	Y		
9		Y	Y		Y
A					Y
B					
C		Y	Y	Y	

Table 3-39. PA-Type NPC x Options (Continued)

x Value	CRC-4 Mode	Automatic CRC-4	Far-End PM	NPC Used as Sync Sourc	TS0 Bit 5 Used for SFI
D		Y	Y	Y	Y
E				Y	Y
F				Y	

NOTE: Although a value of B does not enable any of the features shown in the table, it is a valid value for x.

Table 3-40. PA-Type NPC y Options

y Value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

NOTE: Values 1, 3, 5, 7, A, B, E, and F are unassigned and not valid.

Table 3-41. PA-Type NPC z Options

z Value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	144ms	480ms	RAIS	RBER	144ms	480ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					

Table 3-41. PA-Type NPC z Options (Continued)

z Value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	144ms	480ms	RAIS	RBER	144ms	480ms	
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
8	Y			Y		Y		Y		
9		Y			Y	Y			Y	
A	Y		Y							Y
B		Y	Y							Y
C	Y									
NOTE: Values D, E, and F are unassigned and not valid.										

Table 3-42. PA-Type NPC Facility Performance Parameters

rr	Parameter
11	Daily CRC Block Errors
12	Daily Framing Errors
13	Daily Out-of-Frame Seconds
14	Daily Errored Seconds
15	Daily Severely Errored Seconds
16	Daily Controlled Slip Seconds
17	Daily Coding Violations
18	Daily Unavailable Seconds
19	Daily Unavailable Time Count
20	Daily Multiframe Errors
21	Daily Far-End Block Errors
22	Daily Far-End Errored Seconds
23	Daily Far-End Severely Errored Seconds

Table 3-42. PA-Type NPC Facility Performance Parameters (Continued)

rr	Parameter
24	Daily Far-End Unavailable Seconds
81	15-Minute CRC Block Errors
82	15-Minute Framing Errors
83	15-Minute Out-of-Frame Seconds
84	15-Minute Errored Seconds
85	15-Minute Severely Errored Seconds
86	15-Minute Controlled Slip Seconds
87	15-Minute Coding Violations
88	15-Minute Unavailable Seconds
89	15-Minute Unavailable Time Count
90	15-Minute Multiframe Errors
91	15-Minute Far-End Block Errors
92	15-Minute Far-End Errored Seconds
93	15-Minute Far-End Severely Errored Seconds
94	15-Minute Far-End Unavailable Seconds

Install Circuit Packs, Grow and Restore IFTU2 NPC (Continued)

Install Circuit Pack and Grow DSP Application NPC

DSP application NPCs reside on the TG 193B circuit pack. A single NPC or range of NPCs may be provisioned using one command.

Before growing a DSP Platform application NPC the user must install the application software on the DACS II system. The software installation procedure is documented in the appropriate DSP application manual. The DSP application manuals are:

- *DDS Subrate and MJU Appliucation Manual*
- *X.50/X.57 Subrate Application Manual*
- *DMB Application Manual.*

Restore NPC

Until NPCs are restored to service, facility alarms are not registered and DACS II sends trunk conditioning out over the facility. In the process of restoring, the DACS II runs both an out-of-service and in-service diagnostic and provisions the NPCs according to the NPC growth information. The looped tests that are included in the diagnostics test the transmission paths in the NPC (except line transformers) and test some of the facility checking circuitry. A hardware failure will cause a failed diagnostic and a restore denial. A facility problem will cause a PBA alarm.

**NOTE:**

Early TG80s (before Series 5) cannot be grown as clear-DS1.

Install, Grow, and Restore HDS3U NPC

Overview

This process is used to:

- Enter information (grow) into the database
- Provision the NPC as a type TH
- Bring the NPC into service.

Install Circuit Packs and Grow Type TH NPC

TH-Type NPC Information

The list below indicates the appropriate tables to find NPC and alarm information.

Description

TH-Type NPC Options

Table

Table 3-43 to
Table 3-45

TH-Type NPC Facility Parameter Numbers

Table 3-46

A Y in a column of the NPC options table indicates that the particular feature is enabled by the corresponding x, y, or z provisioning value.

Table 3-43. TH-Type NPC x Options

x Value	CRC-4 Mode	Automatic CRC-4
0	Y	
8		Y
B		



NOTE:

Although a value of B does not enable any of the features shown in the table, it is a valid value for x. The values 0, 8, and B are the only valid values for x.

(Continued on next page)

Table 3-44. TH-Type NPC y Options

y Value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

NOTE: Values 1, 3, 5, 7, A, B, E, and F are unassigned and not valid.

Table 3-45. TH-Type NPC z Options

z Value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	166ms	500ms	RAIS	RBER	166ms	500ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
A	Y		Y							Y
B		Y	Y							Y

NOTE: Values 8, 9, D, E, and F are unassigned and not valid.

Table 3-46. TH-Type NPC Facility Performance Parameters

rr	Parameter
11	Daily CRC Block Errors
12	Daily Framing Errors
13	Daily Out-of-Frame Seconds
14	Daily Errored Seconds
15	Daily Severely Errored Seconds
16	Daily Controlled Slip Seconds
18	Daily Unavailable Seconds
19	Daily Unavailable Time Count
20	Daily Multiframe Errors
81	15-Minute CRC Block Errors
82	15-Minute Framing Errors
83	15-Minute Out-of-Frame Seconds
84	15-Minute Errored Seconds
85	15-Minute Severely Errored Seconds
86	15-Minute Controlled Slip Seconds
88	15-Minute Unavailable Seconds
89	15-Minute Unavailable Time Count
90	15-Minute Multiframe Errors

Install, Grow, and Restore HDS3U NPC (Continued)

Restore NPCs

In the process of restoring, the DACS II runs both an out-of-service and in-service diagnostic and provisions the NPCs according to the NPC growth information. A hardware failure will cause a failed diagnostic and a restore denial.

Install, Grow Circuit Packs and Restore DSPU NPC

Overview

This process is used to:

- Enter information (grow) into the database
- Provision as DSPU NPCs
- Bring the NPC into service.

Install DSP NPC Circuit Packs

When installing DSPU circuit packs, remember to first remove the ECCN side in-service to prevent an alarm (and DSP removal) on other in-service DSPs on the same port.

Grow DSP NPC (DMB or CPR)

The NPCs grown are used for DMBs (digital multipoint bridges) or CPRs (C-bit processing).

DSP NPC Information

For DSP circuits, the pair of NPCs for each DSP card is grown simultaneously by naming the lower NPC number in the command.

Table 3-47 lists the various NPC circuit pack types and the x and y NPC option values. Table 3-48 lists the NPC z option.

Table 3-47. DSP NPC Types and x and y Options

NPC Type Pack	Description	NPC x and y Option
MB	Digital Multipoint Bridge	x = 1 for all applications y = 0 for all applications
CB	C-bit Processing	x = 1 for all applications y = 0 for all applications

(Continued on next page)

Install, Grow Circuit Packs and Restore DSPU NPC (Continued)

Grow DSP NPC (DMB or CPR), Continued

Table 3-48. DSP NPC z Options

Z Value	Characteristic
0	Type MB (all) and type CB with Network Timer of 600 to 750 ms (default).
1	Type CB with Network Timer of 1500 to 1650 ms.
2	Type CB with Network Timer of 2400 to 2550 ms.
3	Type CB with Network Timer of 4650 to 4800 ms.

Install, Grow Circuit Packs and Restore DSPU NPC (Continued)

Restore DSPU NPC

In the process of restoring, the DACS II runs both an out-of-service and in-service diagnostic and provisions the NPCs according to the NPC growth information. A hardware failure will cause a failed diagnostic and a restore denial.

With DMB circuit packs, both the NPCs on the circuit pack will be restored when the lower numbered NPC of the pair is entered in the command.

Change NPC Parameters

Overview

This operation allows changing an NPC's line format type, the NPC IW (insertion word), and the AIS alarm status for the following NPC types previously discussed:

- PA-Type NPCs
 - PB/PC-Type NPCs.
-

Change NPC Type, IW, or AIS

To change the IW and most NPC type specifications (xyz), the NPC must be removed from service. The insertion word is sent on any unassigned (not-connected) channels and all channels when the NPC is removed from service to indicate these conditions to the far-end equipment. When changing the IW alone, the NPC type specification must also be entered; however, the IW need not be reentered if only the NPC type is being changed. Whenever the NPC type is changed and the NPC is out-of-service, all the programmable alarm thresholds revert to default values and may also have to be changed.

Change NPC Parameters (Continued)

Change Alarm Threshold

This operation changes alarm thresholds for any or all 10 (28 for PA type NPCs) facility parameters. The basic parameters are:

PA Type NPCs:

- CRC block errors
- Framing errors
- Out-of-frame-seconds
- Errored seconds
- Severely errored seconds
- Controlled slip seconds
- Coding violations
- Unavailable seconds
- Unavailable time count
- Multiframe errors
- Far-end block errors
- Far-end errored seconds
- Far-end severely errored seconds
- Far-end unavailable seconds.

PB/PC Type NPCs:

- Errored seconds
- Severe errored seconds
- Degraded minutes
- Unavailable seconds
- Slips.

Thresholds can be set for the three alarm classes (maintenance information, deferred, or prompt). Command options allow changing the thresholds for only the subject NPC or all NPCs of the same type. To change alarm thresholds, the identifiers for the parameters are listed along with the desired threshold option for each. The threshold options must be previously established using the **ED-OPT-T1CHG** command (refer to *Set Optional Alarm Threshold in Data Base*).

When changing the alarm threshold values, refer to the alarm parameters and 2-Mbit/s options listed in Table 3-49 and Table 3-50.

(Continued on next page)

**Table 3-49. 2.048-Mb/s Interface Alarm Parameters
(PA/PB/PC Type NPCs)**

Facility Parameter (rr,ss,tt)	Meaning
11	Type PA CRC, 24 Hr.
12	Type PA FRER, 24 Hr.
13	Type PA OFS, 24 Hr.
14	Type PA ES, 24 Hr.
15	Type PA SES, 24 Hr.
16	Type PA CSS, 24 Hr.
17	Type PA CV, 24 Hr.
18	Type PA UAS, 24 Hr.
19	Type PA UATC, 24 Hr.
20	Type PA MER, 24 Hr.
21	Type PA FEBE, 24 Hr.
22	Type PA FES, 24 Hr.
23	Type PA FSES, 24 Hr.
24	Type PA FUAS, 24 Hr.
31	Type PB/PC DM, 1 Hr.
32	Type PB/PC DM, 24 Hr.
33	Type PB/PC SERS, 15 Min.
34	Type PB/PC SERS, 24 Hr.
35	Type PB/PC ERS, 15 Min.
36	Type PB/PC ERS, 24 Hr.
37	Type PB/PC US, 15 Min.
38	Type PB/PC US, 24 Hr.
39	Type PB/PC SLIPs, 15 Min.
40	Type PB/PC SLIPs, 24 Hr.
81	Type PA CRC, 15 Min.
82	Type PA FRER, 15 Min.

**Table 3-49. 2.048-Mb/s Interface Alarm Parameters
(PA/PB/PC Type NPCs) (Continued)**

Facility Parameter (rr,ss,tt)	Meaning
83	Type PA OFS, 15 Min.
84	Type PA ES, 15 Min.
85	Type PA SES, 15 Min.
86	Type PA CSS, 15 Min.
87	Type PA CV, 15 Min.
88	Type PA UAS, 15 Min.
89	Type PA UATC, 15 Min.
90	Type PA MER, 15 Min.
91	Type PA FEBE, 15 Min.
92	Type PA FES, 15 Min.
93	Type PA FSES, 15 Min.
94	Type PA FUAS, 15 Min.

Table 3-50. 2.048-Mb/s Interface Option Selection

Alarm Class	Option 0 (Default)	Option 1	Option 2	Option 3*
MI (Info)	0	3	6	9
DMA (Deferred)	1	4	7	A
PMA (Prompt)	2	5	8	B

* Only valid option for PB/PC types.

Note: C - disables monitoring of a facility parameter

Change NPC Parameters (Continued)

Query or Change TS0 Bit Monitoring

This operation can perform either one of the following:

- Display the spare bits in TS0 (time slot 0) which are monitored
- Set/change the monitoring.

Once initialized, the DACS II monitors the bits for a change of state and issues an information message when a change occurs.

This monitoring does not interfere with the signal framing at which time the TS0 bits (bits abcdefgh) are used to send the framing word. The normal state, 0 (no monitoring) or 1 (monitoring), of the monitored bits must have been previously set by the **ED-PRMTR-EQPT: :NPC-01-1-1: :TS0M-11011111;** command. When a change of state occurs, the DACS II issues a **REPT STATE . . .TS0-R BITS** information message. If bits 3, 4 or 5, was assigned an alarm meaning when the NPC was grown, it will generate **REPT STATE . . .AR01 MISC PBA** messages when the state changes. Those bits which were assigned when the NPC was grown cannot be selected for monitoring.

Table 3-51 identifies bits abcdefgh.

Table 3-51. TS0 Bit Meanings

Variable	Meaning
a and b	International Bit (Si) in Frame and Not Frame Words
	(Only frames 13 and 15 with CRC enabled)
c	Not Selectable - Remote Alarm Indication
defgh	National Bits (b4 through b8)

Change NPC Parameters (Continued)

Change NPC TS0 Alarm Indicator

This operation sets or changes the normal state of the spare bits in time slot 0 (TS0) so that a change of state can be used as an alarm indication. Except for bit 3, these bits can be set to 0, 1, or P (pass-through). A dash means that the bit will not be affected by this change, or in other words, the existing setting or default will be maintained.

The bits which are designated pass-through can be cross-connected to the same bits in TS0 of another NPC. Of course, the set or cross-connected bits are preempted during the signal framing period to send the framing word. Similarly, bits 2 and 3 which already have alarm meanings cannot be passed through for cross-connection. This operation can be performed while the NPC is in-service.

Remove and Degrow NPC

Overview

The process of deprovisioning NPCs involves two major steps:

- Remove a circuit pack
- Degrow a circuit pack.

Removing a circuit pack changes the state of the circuit pack from "EQUIPPED, IN SERVICE" to "EQUIPPED, OUT OF SERVICE". Degrowing a circuit pack changes the state of the circuit pack from "EQUIPPED, OUT OF SERVICE" to "UNEQUIPPED, OUT OF SERVICE".

In-service circuit packs must be removed before physically removing the circuit pack from the DACS II frame. After removing a pack from service, the pack can be removed from the frame. After degrowing a pack or group, it can be regrown with different specifications.

Removing Cross-connected NPCs

Before deprovisioning an NPC, all active cross-connections must be removed first. Any NPC with cross-connections should only be removed if warranted by trouble clearing because service on all channels of the NPC will be interrupted.

When the NPC is removed from service, no plug-in or facility alarms will be registered and a predefined insertion word will be sent out on all channels if the plug-in is in the frame.

Degrowing NPCs

To expedite degrowing DSPU NPCs, the DISCONNECT NPC command removes both NPC sides from service and degrows the NPC without needing to use the REMOVE command.

Facilities

Overview

This section provides information which illustrates the proper physical connections between the 2.048-Mb/s facility and other frame components. Also described here is the need to perform basic functionality tests, such as alarm verification and cross-connection capabilities.

Establish 2.048-Mb/s Facility

Overview

Proper verification of wiring connections and cross-connections is important in preventing facility failures.

Establish 2.048-Mb/s Facility (Continued)

Check Far-End Installation, Make Wiring Connections, and Remove Loops

To perform this operation, consider the following:

1. Far-end terminal equipment must be equipped and tested.
 2. Far-end voice terminal timing must be established.
 3. The DACS II and line interface jack appearances must be cross-connected.
 4. Facility alarms must be cleared on added NPCs after alarm time-out period.
-

Establish 2.048-Mb/s Facility (Continued)

Perform End-to-End Alarm Tests

In this test, the receive line signal is interrupted to cause a local alarm (PBA) at the DACS II and a remote alarm signal is sent to the other end. The alarms clear after a time-out period when the alarm condition is removed. As a final test, the receive signal is interrupted at the other end to check the local and remote alarm responses in the other direction.

Check Facility Status and Perform End-to-End Tone Tests

Convert the NPC type designation (xyz) to binary and read the meaning of the bits as follows:

- Work with each of the three digits following the PB or PC keyword individually.
- Write the 4-digit binary equivalent of each Hex digit. See Table 3-52.
- Match the 0s and 1s with the options in Table 3-53. Only bits a through g (for Hex digits xy) are used in the basic 2.048-Mb/s Interface feature.
- In the output message, notice the IW (insertion word). This code word is sent on the message channels that are not connected in cross-connections.

Use Table 3-54 to read the status and facility error counts from the fields of the output message. For PA type NPCs, refer to Table 3-55. If there are any out-of-service, failed, or pested NPCs, you may choose to perform channel tests.

(Continued on next page)

**Establish 2.048-Mb/s Facility
(Continued)****Check Facility
Status and Perform
End-to-End Tone
Tests, Continued****Table 3-52. Hex and Binary Equivalents**

Hex Number	Binary Number			
Digit x	Bit a	Bit b	Bit c	Bit d
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
8	1	0	0	0
9	1	0	0	1
A	1	0	1	0
B	1	0	1	1
C	1	1	0	0
D	1	1	0	1
E	1	1	1	0
F	1	1	1	1

(Continued on next page)

Establish 2.048-Mb/s Facility (Continued)

Check Facility Status and Perform End-to-End Tone Tests, Continued

Table 3-53. Hexadecimal (xyz) = Binary (abcd efgh jklm)

Hex	Bit	Value	Meaning
x	a	0	CRC-4 multiframe in TS0
		1	Non-CRC-4 framing in TS0
	b	0	NPC is not used as a synchronization source
		1	NPC is used as a synchronization source
y	c	0	CCITT G.732 Consequent AIS in signaling
		1	Specified consequent action; <tc> field in commands
	d	0	Nonsignaling associated (NSA)
		1	16-state channel associated signaling (CAS)
y	e	0	Telephone Channel Numbering
		1	Time Slot Channel Numbering (NSA)
	f	0	Convert the abcd bits of TS16 to 1111 if 0000
		1	Pass signaling bits through unchanged
z	g	0	AIS applied to receive TS16 upon RAI, RAIS, or R16
		1	AIS not applied to receive TS16 upon RAI, RAIS, or R16
	h	0	TS0 bit 5 = SFI unaffected by synchronizer holdover
		1	TS0 bit 5 = SFI inverted on synchronizer holdover
z	jkl	000	TS0 bit 3 = RAI indication within 2 ms.
		001	TS0 bit 3 = RAI indication in t^*
		010	TS0 bit 4 = RAIS in t^* and RAI within 2 ms.*
		011	TS0 bit 4 = Detect BER, enable RBER in t^* and RAI in 2 ms.
		100	TS0 bit 4 = RAIS and RAI in t^* (Transmic 2G)*
		101	TS0 bit 4 = Detect BER, disable RBER and RAI within 2 ms*
		110	Bits 3 through 8 in t^* (Transmic 1G)
		111	Unassigned
	m	0	Unassigned, only m = 0 is valid

* When bit c=0, time t is 144 ms; when bit c=1, t is 144 ms for remote alarms, but t is 480 ms for local alarms except for jkl = 011 or 101 (MBER selected). With MBER, t is 2496 ms (SFDT).

Reference: HEX A=1010, B=1011, C=1100, D=1101, E=1110, F=1111.

(Continued on next page)

Establish 2.048-Mb/s Facility (Continued)

Check Facility Status and Perform End-to-End Tone Tests, Continued

Table 3-54. NPC Status Keywords

Keyword	Meaning	Output Information
OOS/FAIL/	Out-of-Service/	1 = NPC out-of-service/failed/pested.
PEST	Failed/Pested	
PBA	Primary Block Alarm	R = red alarm, Y = yellow alarm, A = AIS, B = BER, E = REER, I = RAIS, L = LMA, M = R16, S = sync fail indication, V = A16, X = EER, 1 = PBA, or 0 = no PBA.
DM	Degraded Minutes	First line under header gives the number of occurrences. Second line gives the alarm threshold. Third line gives the selected option for alarm threshold 0 (default) or 1, 2, or 3 (defined options in data base).
SERS	Severe Errored Seconds	Same format as for DM.
ERS	Errored Seconds	Same format as for DM.
US	Unavailable Seconds	Same format as for DM.
SLIP	Timing Slip	Same format as for DM.
CRC	Cyclic Redundancy	Same format as for DM.
FRER	Frame Bit Error	Same format as for DM.
LOFA	Loss of Frame Alignment	Same format as for DM.
MER	Multiframe Alignment Error	Same format as for DM.
COFA	Change of Frame Alignment	Same format as for DM.

(Continued on next page)

Establish 2.048-Mb/s Facility (Continued)

Check Facility Status and Perform End-to-End Tone Tests, Continued

Table 3-55. PA NPC Status Keywords

Keyword	Meaning	Output Information
OOS/FAIL/	Out-of-Service/	1 = NPC out-of-service/failed/pested.
PEST	Failed/Pested	
PBA	Primary Block Alarm	0 = No PBA. 1 = PBA exists for one or more of the following: ■ LOS - loss of signal ■ LOF - loss of frame ■ AIS - alarm indication signal ■ EER - excessive error rate ■ RAI - remote alarm indication ■ LMA - loss of multiframe alignment ■ LCMA - loss of CRC4 multiframe alignment ■ BER - bit error rate ■ A16 - AIS received in time slot 16 ■ RAIS - remote AIS ■ RBER - remote bit error rate ■ RMA - remote multiframe alarm ■ SFI - synchronization failure indication ■ PFWOOF - pseudo frame word out-of-frame ■ FLCMA - far-end LCMA. A 1 under any of the headings listed above indicates that the condition exists.

Table 3-55. PA NPC Status Keywords (Continued)

Keyword	Meaning	Output Information
CRC	Cyclic Redundancy Code	First line under header gives the number of occurrences. Second line gives the alarm threshold. Third line gives the selected option for alarm threshold 0 (default) or 1, 2, or 3 (defined options in data base).
FRER	Framing Errors	Same format as for CRC.
OFS	Out-of-Frame Seconds	Same format as for CRC.
ES	Errored Seconds	Same format as for CRC.
SES	Severely Errored Seconds	Same format as for CRC.
CSS	Controlled Slip Seconds	Same format as for CRC.
CV	Coding Violations	Same format as for CRC.
UAS	Unavailable Seconds	Same format as for CRC.
UATC	Unavailable Time Count	Same format as for CRC.
MER	Multiframe Errors	Same format as for CRC.
FEBE	Far-End Block Errors	Same format as for CRC.
FES	Far-End ES	Same format as for CRC.
FSES	Far-End SES	Same format as for CRC.
FUAS	Far-End UAS	Same format as for CRC.

Links

Overview

Link connections are needed to establish communication with the DACS II.

Check Link Connections

Data Sets

If data sets are required (such as 202T) for remote connections, then they need to be installed.

Link Adapters

Data link cables (such as M25B) are connected to adapters before being connected to the TTY connector link (behind the DACS II). No adapters are needed for RS-449 cable format, but ED-2C646-30 adapters are required for the RS-232C format:

- Use a G1 (group 1) or G14 adapter for any interface via data sets (asynchronous or synchronous).
- Use a G2 or G15 adapter for a direct TTY or CRT terminal (without data sets), or for connecting to a SCAT.
- Use a G3 or G8 adapter for local operations systems such as SARTS (Switched Access Remote Test System) or TABS (telemetry asynchronous block serial) protocol link (asynchronous 4-wire - data only without data sets).
- Use a G9 adapter for a link to CIU (craft interface unit) for *SLC*® Series 5 carrier. This is for an asynchronous link.

**NOTE:**

The G1 and G2 adapters interoperate with RS232C per EIA Pub. 12 and give maximum receiver margin and minimum pulse distortion. The G14 and G15 adapters contain termination and biasing networks to detect disconnected or unpowered RS232C equipment. The G1 and G2 adapters are recommended for use in normal installations where the equipment remains powered up.

Check Link Connections (Continued)

Unused Links

Links that are in service but not in use are autonomously removed and restored. To avoid this, links that are not in use should be manually removed from service.

Initialize, Set Type and Rate Characteristics

Overview

This operation is used to prepare DACS II links for connections. There are seven links available for connection of terminal equipment and operations systems. With the ICI circuit pack, links 1 through 4 are provisionable as asynchronous SNIDER links, links 5 and 6 are synchronous links using X.25 protocol (through level 3) at rates up to 9.6 kb/s, and link 7 is used for a TCP/IP connection.

Before the TCP/IP connection can be used, the IP address for the link must be set up.

Up to 16 virtual circuits can be established on each synchronous link. The characteristics of each link can be changed from their default values.

Initialize, Set Type and Rate Characteristics (Continued)

Changing/Viewing Link Parameters The link must be removed from service to change parameters. Table 3-56 lists the default link parameter values.

Table 3-56. Synchronous Link Level Parameters

Parameter Designation	Meaning	Value Range	Default
Data Layer Values			
N2	Frame Transmission Attempts	2 through 16	7
K	Window Size	1 through 7	7
T1	Acknowledgment Timer	2 through 20 seconds	3
T3	Idle Channel Timer	4 through 120 seconds	26
Packet Layer Values			
W	Window Size	1 through 7	2
P	Packet Size	128 through 512 octets	128
R20	Restart Retries	1 through 10	1
R22	Reset Retries	1 through 3	1
R23	Clear Retries	1 through 10	1
R25	Data Retransmissions	0 through 3	0
T20	Restart Timer	10 through 180 seconds	180
T22	Reset Timer	10 through 180 seconds	180
T23	Clear Timer	10 through 180 seconds	180
T25	Data Acknowledgment Timer	10 through 200 seconds	200
T26	Interrupt Confirmation Timer	10 through 180 seconds	180

Note: The following timers are not supported by DACS II:

T2 - Built-in to the XPC-MC 68605 chip of the ECI, time is 0.3 seconds and cannot be changed with the software.

T4 - Inactive link timer.

T21 - Call request response timer for SVCs.

(Continued on next page)

Initialize, Set Type and Rate Characteristics (Continued)

Changing/Viewing Link Parameters, Continued

Use Figure 3-17 to interpret the link status registers from the link initialization output message.

```
/*Protocol*/
"{S/X}"
/*Baud:Backspace:Alarm:Enq/Ack:Xon/Xoff:Mode,Software,Hardware status*/
"bb:e:k:q:x:m,p,hh"
```

Protocol	=	S for Snider (Async) or X for X.25 (Synchronous)
bb = <baud>	=	03,06,12,24,48,96
e = <backspace>	=	0 for true backspace, 1 for underscore backspace, or dash (—) for synchronous link.
k = <alarm>	=	1 (link alarm defined as minor) or 2 (defined as major)
q	=	ENQ/ACK protocol 0 disabled, 1 enabled (default)
x	=	Xon/Xoff protocol 0 disabled (default), 1 enabled.
m = <mode>	=	0 (idle), 1 (input message), or 2 (output message)
p = <software>	=	0 (protocol exchanges in-service) or 1 (protocol exchanges out-of-service, which slows down DACS II response time)
hh = <hardware>	=	03 (hardware in-service) or 04 (hardware out-of-service)

ADDITIONAL LINES FOR X.25:

```
/*Data Link Layer parameters: Frame address*/
"K-b,T1-eee,T3-ggg,N2-aa:{A/B}"
/*Packet Layer parameters*/
"W-c,P-ddd,T20-iii,T22-jjj,T23-kkk,T25-lll,T26-mmm,R20-nn,R22-p,R23-q,R25-r"
/*PVC and SVC range: PVC and SVC group number*/
"ppss:gghh"
```

TCP/IP FORMAT:

```
<xy> yy-mm-dd hh:mm:ss [LINK-<link number>]
M RTRV PRMTR LINK::j:[ww] COMPLD
/* [S/X] */
/* Protocol */
"I"
/* Baud:Backspace:Alarm:Enq/Ack:Xon/Xoff:Mode,Software,Hardware status */
":e:k::,xxxx,hh"
;
```

Figure 3-17. Link Status Register

Change Input Command Priority, Link Language, NPC Addressing, and Output Message Screening

Overview

This operation changes the following settings:

- Input Command Priority
- Link Language
- NPC Addressing
- Output Message Screening.

The actual procedures for changing these settings can be found in Volume II, Chapter 6, *Administration*.

Input Command Priority

Commands from a single active link go into a queue and are executed in the order issued. Commands from different links go into separate waiting queues, and the *input command priorities* from these links control the order of execution; priority level 1 commands first, then priority 2, then priority 3. Commands from different links with the same priority are executed alternately.

To prevent long waits for all lower priority commands, those that have been waiting in the queue for 2 minutes will be executed while higher priority commands that require more processing, like diagnose SMEM, are underway. Until set otherwise, the system processes all user commands as level 3 by default, and all system administrator commands as level 1. By setting the priority of the command groups on all LINKS to zero (excluded), the administrator can establish the use of the login mode because each user will have to log in to access the command set defined for that USER.

Change Input Command Priority, Link Language, NPC Addressing, and Output Message Screening (Continued)

Link Language

DACS II SNIDER, X.25, and TCP/IP links will operate in either PDS or MML message languages. Unless previously changed, the message language for the links and users will default to what is defined in the software load. If necessary, the message language can be changed during a login session. The message language for your user id can also be changed. For example, if the link defaults to PDS but you work in MML, the link will switch to MML when you log in.

NPC Numbering Scheme

DACS II SNIDER and X.25 links will operate in one of the following NPC addressing schemes:

- Extended - This scheme uses 3 digits to number the NPCs consecutively (for example, 041). It can only be used on systems of three bays or less.
- 4-Digit Extended - This scheme uses 4 digits to number the NPCs consecutively (for example, 1041). The extra digit allows the system to accommodate additional bays.
- Hierarchical - This scheme uses a 5 digit number (uv-m-np). It assigns a number to each NPC according to the unit number (uv), module or group number (m), and the NPC number within the module (np).

Unless previously changed, NPC addressing for the links and users will default to what is defined in the software load. If you want to use a different addressing scheme during your login session, you can change the scheme for your user ID. For example, if the link defaults to *extended* but you work in *hierarchical*, the link will switch to hierarchical when you log in. Ensure that the addressing scheme for the link is allowable as defined in the configuration file.

Change Input Command Priority, Link Language, NPC Addressing, and Output Message Screening (Continued)

Output Message Screening

Output message screening allows you to block groups of messages or include messages associated with other links. Any user can change his/her own message screening.

Unless previously changed, output message screening for the links and users will default to what is defined in the software load. If you want to use a different screening option during your login session, you can change the option for your user ID. For example, if the link defaults to option 2 but your user ID is set to option 5, the link will switch to option 5 when you log in.

Contents

■ Background	4-1
Introduction	4-1
Objectives	4-2
Related Information	4-2
Related Tasks	4-3
Establish NPC Test Ports and Groups	4-4
Overview	4-4
■ Establish Test Access Facility	4-4
Overview	4-4
Dual Primary Card/Enhanced Dual Primary Card Monitor Jacks	4-5
Make Cross-connections at the Line Interface Bay	4-7
Install, Grow, and Restore NPCs as NPCTP or NPCTG	4-10
Designate an NPC as NPCTP	4-11
Designate an NPC as NPCTG	4-13

(Continued on next page)

Contents

■ Grow Test Ports	4-14
Overview	4-14
Trunk Conditioning	4-14
Test Port Numbering	4-15
■ Grow Test Groups	4-16
Overview	4-16
Trunk Conditioning	4-16
Test Group Ranges	4-16
Establish Test Connection	4-17
Overview	4-17
■ DS0 Test Access	4-17
Overview	4-17
Establish DS0 Test Access Connection	4-18
Mapped Test Access	4-18
Unmapped Test Access	4-18
Using Trunk Conditioning	4-19
Change Circuit Termination State (TERM/RLS)	4-19
Release Test Port	4-19
■ DSP Application Test Access Connections	4-20
Overview	4-20
Establishing Test Connections	4-20
Connecting Test Ports to DSP Application Channels/Circuits	4-21
■ Establish Test Group Connection (Nx64 Kbit/s)	4-22
Overview	4-22
Establish Nx64 Kbit/s Test Access Connection	4-22
Mapped Test Access	4-22
Unmapped Test Access	4-22

(Continued on next page)

Contents

Using Trunk Conditioning	4-22
Change Circuit Termination State (TERM/RLS)	4-23
Release Test Group	4-23
■ Clear-2 Mbit/s Test Access	4-24
Overview	4-24
Clear-2 Mbit/s Test Access Modes	4-25
Establish or Change Clear-2 Mbit/s Test Access	4-33
Unmapped Test Access	4-34
Mapped Test Access	4-34
Release Test Port	4-34
Hub and Loopback Test Access	4-35
Overview	4-35
■ Hub Test Access	4-35
Overview	4-35
Test Activity	4-36
Using Trunk Conditioning	4-36
■ Loopback Test Access	4-37
Overview	4-37
Test Activity	4-38
Using Trunk Conditioning	4-38
Integrated Test Set	4-39
Overview	4-39
■ ITS NPC Information	4-39
Overview	4-39
ITS Circuit Pack	4-39
Circuit Types Supported	4-39
Installing/Growing ITS NPCs	4-40
Test Groups	4-40

(Continued on next page)

Contents

■ ITS Test Access	4-41
Overview	4-41
Test Access Modes	4-41
■ Test Signal Generation	4-44
Overview	4-44
Test Patterns	4-44
Bit Errors	4-44
■ Test Signal Monitoring	4-45
Overview	4-45
Test Pattern Synchronization	4-45
Test Pattern Loss	4-45
Test Pattern Resynchronization	4-45
Error Performance Parameters	4-46
Test Monitoring Duration	4-46

Test Access

4

Background

Introduction

Test Access is one of the primary functions of the DACS II frame. It provides a connection to an active or unassigned cross-connection to test a line or isolate a trouble without interfering with any other DS0 circuit. The actual circuit testing is not performed by the DACS II, but by external test equipment. The DACS II provides the interface between the cross-connection and external test equipment.

Background (Continued)

Objectives

This chapter provides information to perform the following:

1. Establish NPC test ports and test groups.
 2. Determine the different types of test access connections.
 3. Perform various test access connections on the following circuit types:
 - DS0 (64-Kbit/s) circuits
 - Clear-2 Mbit/s circuits
 - Subrate circuits
 - DSP application circuits
 - Nx64 circuits.
 4. Releasing test access connections.
-

Related Information

For related information, refer to the:

- *DACS II Command and Message Manuals*
 - *DACS II/DACS II ISX DSP Application Manuals:*
 - *DMB Application Manual*
 - *X.50/X.57 Subrate Application Manual*
 - *DDS Subrate and MJU Application Manuals.*
-

Background (Continued)

Related Tasks

For related tasks, refer to the following General Tasks in Volume II:

- Make Cross-Connections at the Line Interface Bay GT 4.1
 - Install Plug-Ins, Grow and Restore NPC to Function as NPCTP or NPCTG GT 4.2
 - 64-kb/s Signals: Connect Hubbed Testport(s) to Local DACS II GT 4.3
 - 64-kb/s Signals: Looping Back a Test Port GT 4.4
 - 64-kb/s Signals: Connect Testport to Circuit GT 4.5
 - 64-kb/s Signals: Release Test Port GT 4.6
 - Nx64 Kbit/s: Connect Test Group to Circuit GT 4.7
 - Nx64 Kbit/s: Change Circuit Termination State GT 4.8
 - Nx64 Kbit/s: Connect Test Group in HUB Mode GT 4.9
 - Nx64 Kbit/s: Connect Test Group in LOOPED Mode GT 4.10
 - Nx64 Kbit/s: Release and Degrow Test Group GT 4.11
 - Clear-2 Mbit/s: Establish/Change Test Access GT 4.12
 - Clear-2 Mbit/s: Hub Mode GT 4.13
 - Clear-2 Mbit/s: Loopback Mode GT 4.14
 - Clear-2 Mbit/s: Release Test Port GT 4.15
 - Clear-2 Mbit/s: Change Circuit Termination State GT 4.16
 - Integrated Test Set: Initiate/Stop Test Signal Generation GT 4.17
 - Integrated Test Set: Insert Bit Error GT 4.18
 - Integrated Test Set: Start/Stop Test Signal Monitoring GT 4.19
 - Integrated Test Set: Query Error Performance Parameters GT 4.20
-

Establish NPC Test Ports and Groups

Overview

The following section provides the reader with reference information which describes:

- Establishing NPC test ports (NPCTPs)
 - Establishing NPC groups (NPCTGs)
 - How they are used in test access connections.
-

Establish Test Access Facility

Overview

Establishing the test access facility involves the following:

- Getting familiar with the Monitor Jacks for DPC/EDPC cards
 - Checking wiring and test set cross-connections at the line interface bay
 - Installing, growing, and restoring NPCs as NPCTPs or NPCTGs.
-

Establish Test Access Facility (Continued)

Dual Primary Card/Enhanced Dual Primary Card Monitor Jacks

TG182 Monitor Jacks

The TG182 provides two 120 Ohm E1 line terminations. The TG182 provides two transmit line monitor points; one monitor point for each NPC. The jack layout for the TG182 is shown in Figure 4-1. These monitor points are attenuated by 30 dB from the signal level at the interface.

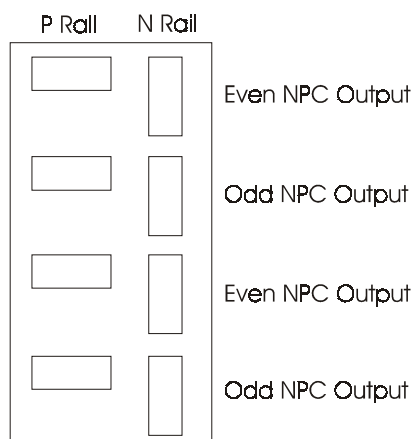


Figure 4-1. TG182, TG185, and TG187 Monitor Jack Layout

TG185 Monitor Jacks

The TG185 provides two 75 Ohm E1 line terminations. The TG185 provides two transmit line monitor points, one for each NPC. The jack layout for the TG185 is shown in Figure 4-1. These monitor points are attenuated by 26 dB from the signal level at the interface.

TG187 Monitor Jacks

The TG187 provides two 120 Ohm line terminations. The TG187 provides two transmit line monitor points, one for each NPC. The jack layout for the TG187 is shown in Figure 4-1. These monitor points are attenuated by 30 dB from the signal level at the interface.

Establish Test Access Facility (Continued)

Dual Primary Card/Enhanced Dual Primary Card Monitor Jacks, Continued

TG192 Monitor Jacks

The TG192 provides two software selectable 75 or 120 Ohm E1 line terminations. The TG192 provides monitor points for both the receive and transmit interfaces for both NPCs. The monitor jack layout for the TG192 is shown in Figure 4-2. These monitor points are attenuated by slightly different levels depending on the line impedance selected. These attenuation values are:

Selected Impedance	Attenuation
75 Ohms	23.75 dB
120 Ohms	20 dB

➡ **NOTE:**
Special test equipment must be used to compensate for the attenuation loss.

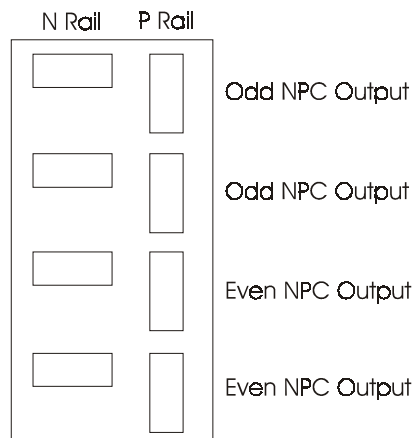


Figure 4-2. TG192 Monitor Jack Layout

Establish Test Access Facility (Continued)

Make Cross-connections at the Line Interface Bay

Cross-connect Schematic

The wiring between the DACS II and the DSX-1 equipment is important for successful test access. This wiring should be in accordance with the diagram in Figure 4-3.

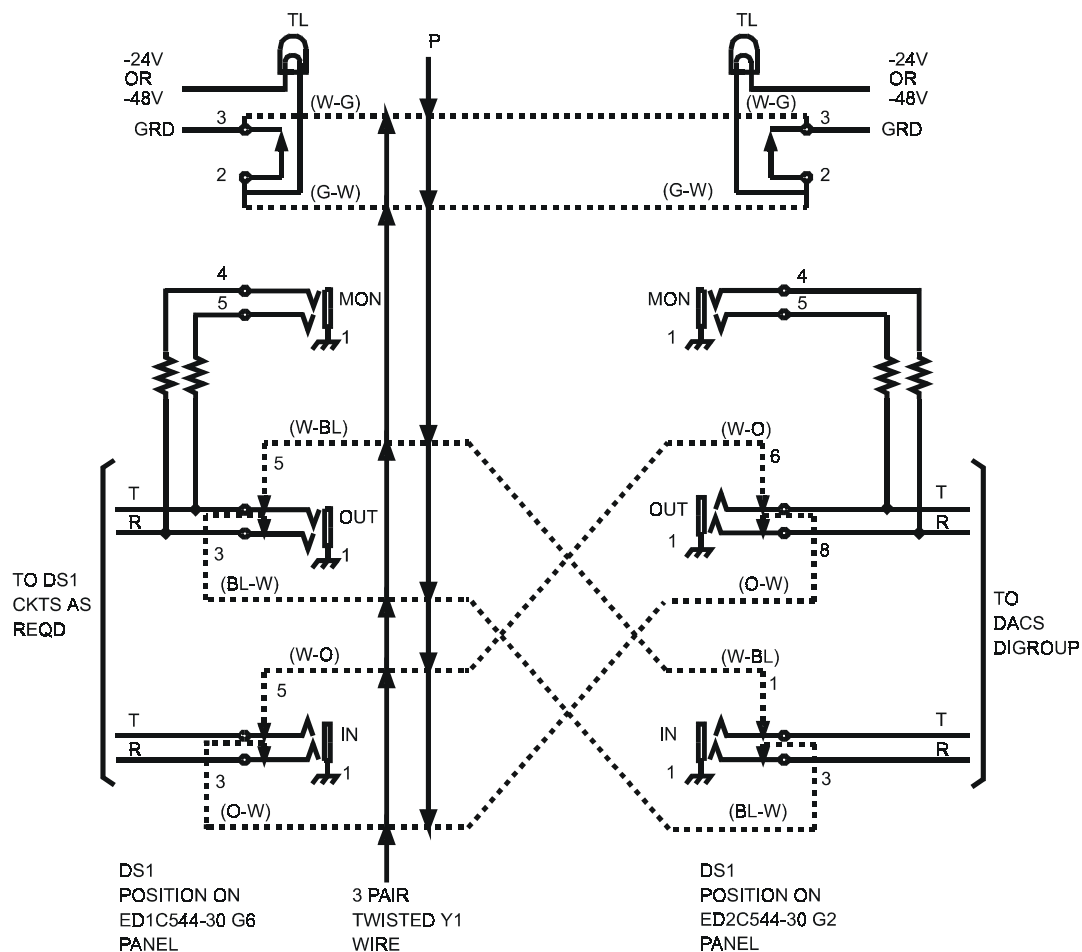


Figure 4-3. Cross-Connect Schematic

(Continued on next page)

Establish Test Access Facility (Continued)

Make Cross-connections at the Line Interface Bay, Continued

Cross-connections Between Subject Jack Sets

Use Figure 4-4 to make the cross-connections between subject jack sets using Y1-type wire.

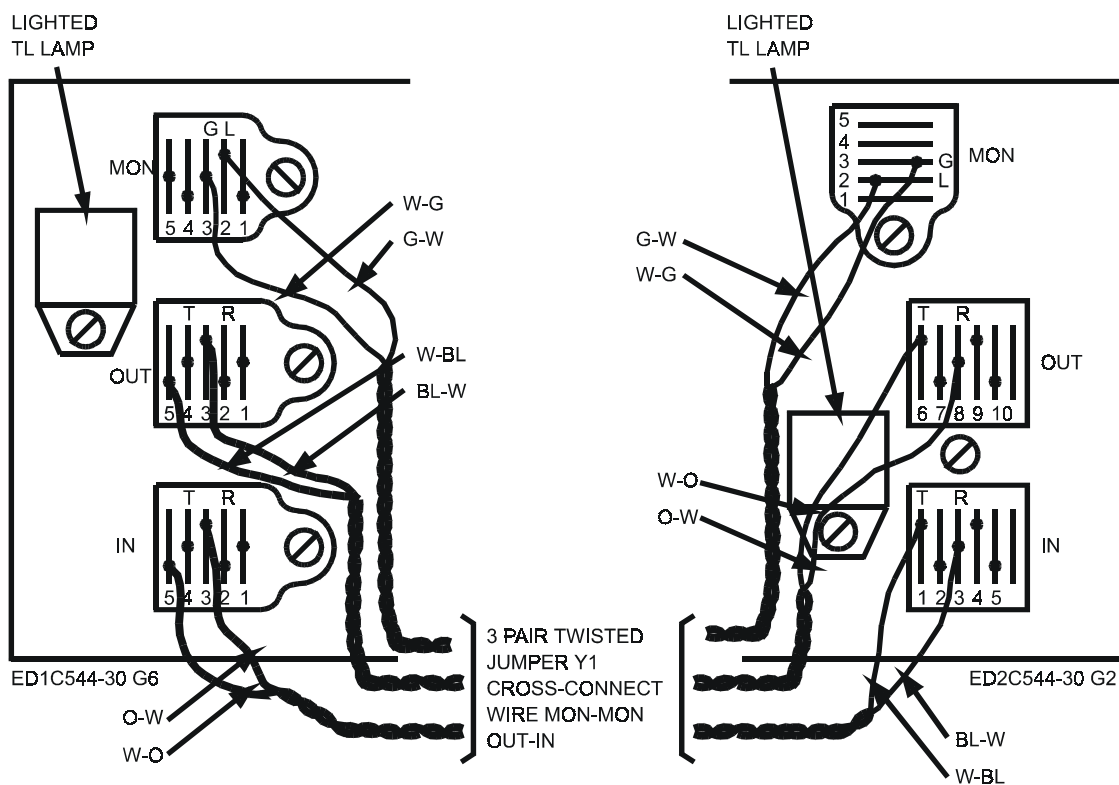


Figure 4-4. Rear View of 3-Inch Panel

(Continued on next page)

Establish Test Access Facility (Continued)

Make Cross-connections at the Line Interface Bay, Continued

800-Series DSX Bay

Use Figure 4-5 to make wire-wrap connections between jack sets using five conductors of the cross-connect wire.

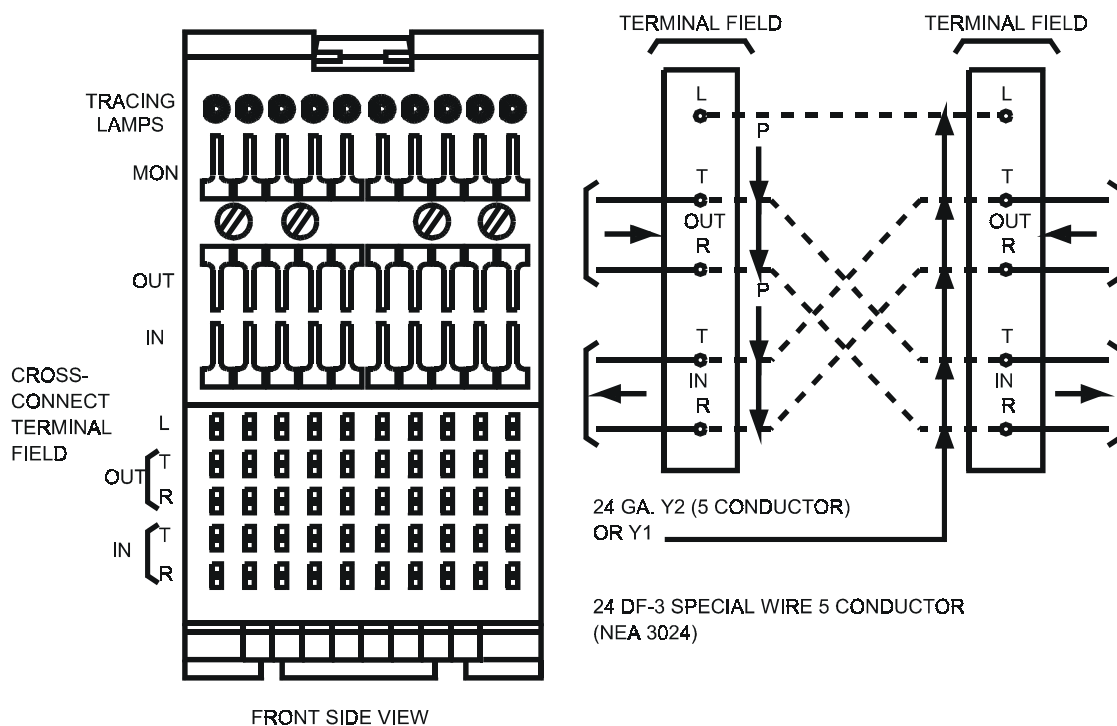


Figure 4-5. 800-Series DSX Details

Establish Test Access Facility (Continued)

Install, Grow, and Restore NPCs as NPCTP or NPCTG

Depending on the type of circuit which is under test, either NPC Test Ports (NPCTPs) or NPC Test Groups (NPCTGs) are connected to the circuit to make the test circuit. NPCTPs and NPCTGs must be defined prior to making any test access connections. The establishment of the NPCs in the NPCTP or NPCTG defines the operating characteristics of the NPCs in the database.

When the NPCs are subsequently restored to service, they will be provisioned per the growth specification. Included in the specification are:

- Line and channel formats
- Facility alarm thresholds
- The channel insertion word.

The line formats are given by the TYPE specification.
If used, alarm threshold options must already be defined in the data base.

Establish Test Access Facility (Continued)

Designate an NPC as NPCTP

Description

Test ports are used to perform test access on DS0 circuits. Up to eight NPCTPs can be designated for testing purposes. Each NPCTP has twelve test access ports, for a total 96 test ports available in the DACS II. Each NPCTP is assigned a designator, ranging from 1 to 8. The NPCTP designator determines the test ports to be provisioned on the NPCTP.

NPC-to-NPCTP Process

The process of provisioning test ports contains three steps:

1. PROVISIONING AN NPC (grow and restore) - provide a location for the DS0 channel test ports.
2. ASSIGNING DESIGNATOR NPCTP - establish an NPC for testing. An NPCTP designator number is assigned to the specified NPC. This number (1-8) is used to associate the NPCTP with its test ports.
3. PROVISION TEST PORTS - establish test ports. Each test port is provisioned individually in ascending order (lowest to highest). Each NPCTP supports a maximum of 12 test ports.

(Continued on next page)

Establish Test Access Facility (Continued)

Designate an NPC as NPCTP, Continued

Test Port Modes

The three test port modes are described in Table 4-1 and illustrated in [Figure 4-6](#).

Table 4-1. Test Port/Test Group Modes

Test Port Modes	Definition
MONITOR	Checks the customer circuit without interrupting service.
SPLIT	Interrupts the cross-connection to allow the monitoring, sending, and receiving of test signals.
RELEASE	Restores the cross-connection and test port to normal (released)

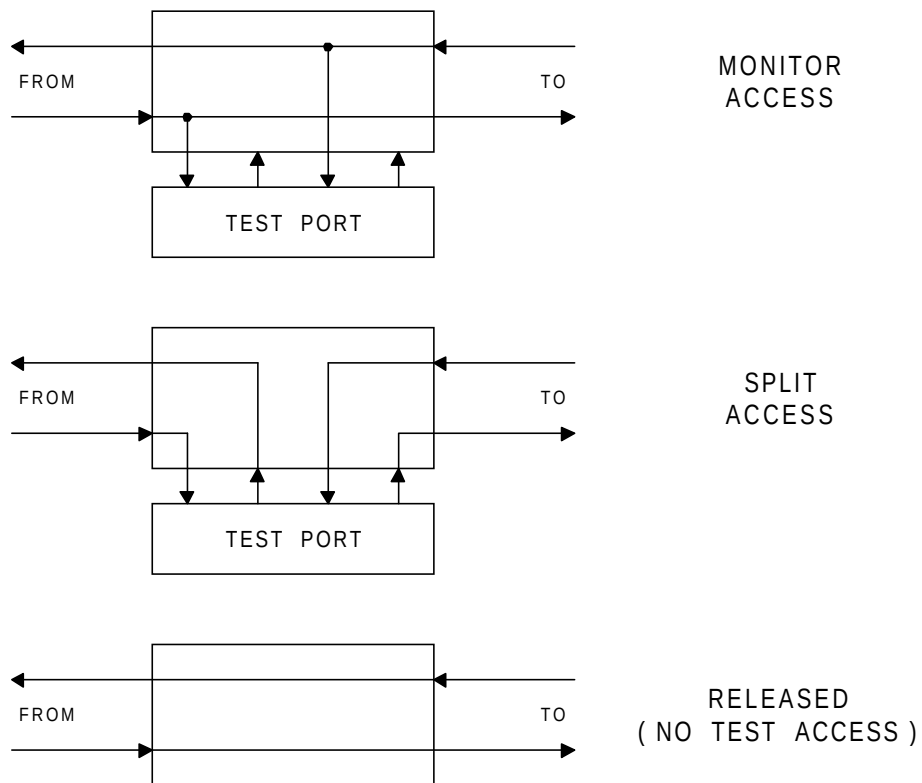


Figure 4-6. Test Port/Test Group Modes

Establish Test Access Facility (Continued)

Designate an NPC as NPCTG

Description

Test groups are used to perform test access on Nx64 kbps circuits. Each Test Group is assigned an NPCTG designator ranging from 1 to 400.

NPCTG-to-NPCTG Process

The process used to establish Nx64 kb/s test groups in the DACS II contains three steps:

1. PROVISIONING NPCs for the NPCTG (grow and restore) - provide a location for the test groups.
2. ASSIGNING DESIGNATOR NPCTG - designate an NPC for testing, an NPCTG designator number (1 through 400) is entered. This number is used to associate each NPCTG to an associated TG.
3. PROVISION TGs - establish Test Groups, TGs (numbered 1 through 400) can be provisioned on or between any of the 400 NPCTGs. Each TG can be any required bandwidth (Nx64). Unlike test ports, TGs can be grown out of numerical sequence.

NPCTG Modes

The test group modes are described in Table 4-1 and illustrated in [Figure 4-6](#).

Grow Test Ports

Overview

Test ports (TPs) are grown on a TAP (test access primary). Up to eight NPCs can be designated as TAPs on the frame, providing up to 96 test ports, 12 on each NPCTP. Test access NPCs must be grown with the CAS option. As each test port is grown, two more channels from the NPC are assigned a test port number. During subsequent test access, the channels of the test port are cross-connected to the channel under test.

Trunk Conditioning

When composing the trunk conditioning for an NPCTP, consider the following:

- The trunk conditioning (<tc>) is a combination of a signaling specification followed by an insertion word specification that is sent on the connecting carrier channel during a carrier failure.
- The <tc> specification is used when either:
 - The static <tc> is needed for an analog test system (SARTS/RTS-5A in the USA)
 - When accessing an unmapped circuit.

Otherwise, the <tc> will be dynamic (that is, match what was specified for the cross-connection).

- If trunk conditioning is required for static test ports, see the format of the <tc> field.
-

Grow Test Ports (Continued)

Test Port Numbering

Twelve test ports are available on each designated NPCTP and up to eight NPCTPs can be designated. The test port numbering is listed in Table 4-2.

Table 4-2. Test Access Channels

Test Access Port	Telephone Channel	
	From	To
01,13,25,37,49,61,73,85	5	6
02,14,26,38,50,62,74,86	7	8
03,15,27,39,51,63,75,87	9	10
04,16,28,40,52,64,76,88	11	12
05,17,29,41,53,65,77,89	13	14
06,18,30,42,54,66,78,90	16	17
07,19,31,43,55,67,79,91	18	19
08,20,32,44,56,68,80,92	20	21
09,21,33,45,57,69,81,93	22	23
10,22,34,46,58,70,82,94	24	25
11,23,35,47,59,71,83,95	26	27
12,24,36,48,60,72,84,96	28	29

Grow Test Groups

Overview

Test groups (TGs) are grown on a TAP (test access primary). Up to 400 test groups can be established on a frame. Each test group consists of two Nx64 Kbit/s bundles for testing both directions, where N is the channel width of the bundles and may be from 1 to 31. The bundles, designated as the east and west bundles, can be on separate NPCs or on the same NPC, if bandwidth permits. Test access NPCs must be grown with the CAS option. During subsequent test access, the channels of the test group are cross-connected to the channels under test.

Trunk Conditioning

When composing the trunk conditioning for an NPCTG, consider the following:

- The trunk conditioning (tc) is programmed signaling and a message insertion word that is sent on the connecting carrier channel during a carrier failure.
 - The <tc> specification is used when either:
 - The static <tc> is needed for an analog test system (SARTS/RTS-5A in the USA)
 - When accessing an unmapped circuit.
- Otherwise, the <tc> will be dynamic (that is, match what was specified for the cross-connection).
- If trunk conditioning is required for static test ports, see the format of the "tc" field.
-

Test Group Ranges

Each test group consists of two equal ranges having a width of up to 31 channels, for E1. The two ranges may belong to two NPCTGs, or the same NPCTG but not overlapping.

Establish Test Connection

Overview

The following section is intended to provide the reader with reference information which describes test access connections for the following types circuits: connections:

- DS0 circuits
 - Clear-2 Mbit/s circuits
 - Subrate (DS0A and DS0B) circuits
 - Nx64 circuits
 - DSP application (DDS Subrate and MJU, X.50/X.57 Subrate, and DMB) circuits.
-

DS0 Test Access

Overview

When initially establishing a DS0 cross-connection in test access, connection will be placed in the Monitor test access mode. This mode monitors signals from both directions of a cross-connection. If desired, the mode can be changed to the Split mode. The circuit termination can be changed for one or both sides of the circuit. When test access is completed, the connection is placed in the Released mode, which releases the circuit from test access.

DS0 Test Access (Continued)

Establish DS0 Test Access Connection

When initially establishing a DS0 test access connection, the connection is placed in the Monitor mode before it is split for testing. The NPC designated for test access must be provisioned for CAS. The test access NPC also performs the necessary signal conversions to allow testing DS1 circuits in a Gateway application.

Mapped Test Access

For mapped test access, the test connection adopts the characteristics of the accessed circuit. The following mapped circuits are supported:

- One-way circuits
 - Two-way circuits.
-

Unmapped Test Access

For unmapped terminations, the DACS II cannot determine the need for signal conversions because there is no connection. For these connections, the user must determine whether the NAM keyword is required in the command.

DS0 Test Access (Continued)

Using Trunk Conditioning

When composing the trunk conditioning for a DS0 test connection, consider the following:

- Table 4-2 gives the channel numbers associated with the test ports on the TAP. Channel time slots 15 and 16 (telephone channels 15 and 31) are not used for test access because of the possible interaction with CAS signaling (TS16).
 - When a mapped circuit is accessed, whatever <tc> is entered when the Monitor mode connection is established will be overwritten by the <tc> of the mapped circuit.
 - When an unmapped circuit is accessed, whatever <tc> is entered when the Monitor mode connection is established will overwrite the <tc> that was specified in the CRTE-EQPT TP command.
 - Access to an unmapped circuit will be denied if the <tc> is not entered when the Monitor mode connection is established or was not entered in the CRTE-EQPT TP command.
-

Change Circuit Termination State (TERM/RLS)

Via test access, the termination mode of the cross-connect under test can be changed to:

- Terminate and Leave Active (TERM) - terminate one direction of the test access connection
 - Terminate and Leave Release (RLS) - release the termination of the test access connection.
-

Release Test Port

When testing is complete, the test access connections should be released, and the circuit/unmapped channels will resume as normal.

DSP Application Test Access Connections

Overview

There are two ways to perform test access on DSP application NPCs:

- Via the generic (described in this section)
- Via application test access commands (the preferred method).

Test access in monitor and split mode may be applied to any cross-connection between a facility terminating NPC and a DSP application NPC. All connections that are internal to a particular application (for example, subrate cross-connections inside a DDS Subrate application or inside an X.50 Subrate application) may only have test access applied to them by the application itself.

Establishing Test Connections

To establish these types of test access connections, refer to the appropriate DSP application manual. The DSP application manuals are:

- *DDS Subrate and MJU Application Manual*
 - *X.50/X.57 Subrate Application Manual*
 - *DMB Application Manual.*
-

DSP Application Test Access Connections (Continued)

Connecting Test Ports to DSP Application Channels/Circuits

A test port established to an application will always appear as a test port in split mode when viewed external to the application using the **RTRV TACC T1** command. This is true even if internal to the application, the test port is in monitor mode.

External to an application, a test port established to an application is simply a cross-connect between two channels on the application that has been placed in split mode by the attached test port. It is important to understand this if it ever becomes necessary to disestablish such a test port external to the application.

**NOTE:**

For additional information on DSP test access, refer to the appropriate section in the application manual.

Establish Test Group Connection (Nx64 Kbit/s)

Overview	A test group connection establishes a test access connection for a range of 64 Kbit/s channels. The range is specified by N, which can be any number between 1 and 31.
Establish Nx64 Kbit/s Test Access Connection	When initially establishing an Nx64 Kbit/s test access connection, the connection is placed in the Monitor mode before it is split for testing.
Mapped Test Access	For mapped test access, the test connection adopts the characteristics of the accessed circuit. The following mapped circuits are supported: ■ One-way circuits ■ Two-way circuits ■ Broadcast circuits.
Unmapped Test Access	For unmapped terminations, the trunk conditioning option must be used in the command.
Using Trunk Conditioning	When composing the trunk conditioning for an Nx64 Kbit/s test connection, consider the following: ■ When a mapped circuit is accessed, whatever <tc> is entered when the Monitor mode connection is established will be overwritten by the <tc> of the mapped circuit. ■ When an unmapped circuit is accessed, whatever <tc> is entered when the Monitor mode connection is established will overwrite the <tc> that was specified in the CRTE-EQPT TG command. ■ Access to an unmapped circuit will be denied if the <tc> is not entered when the Monitor mode connection is established and was not entered in the CRTE-EQPT TG command.

Establish Test Group Connection (Nx64 Kbit/s) (Continued)

Change Circuit Termination State (TERM/RLS)

The terminate and leave active (TERM) and terminate and leave released (RLS) states are modifiable for one or both ends of a Nx64 Kbit/s cross-connection associated with a TG. In the terminated state, the normal transmitted data on the circuit is replaced by the signal pattern according to the circuit's trunk conditioning code, as specified when the cross-connection was set up. In the released state, a terminated circuit is released and normal data transmission is restored in the specified transmission.

**NOTE:**

The Nx64 Kbit/s circuit must be a mapped one-way or two-way circuit currently under monitor or split test modes, and unterminated to modify the TERM states or terminated to modify the RLS states.

Release Test Group

When test access is completed, the user should release one or a range of currently active TGs.

When a TG is released, any circuit under test is restored to its normal, terminated, or unmapped state.

Clear-2 Mbit/s Test Access

Overview

DACS II provides for testing clear-2 Mb/s digital lines. Each type of test access can test one or both directions, or one or both sides of a 2 Mbit/s circuit. NPCs provisioned as clear unchannelized can be used to provide access for testing. These NPCs, called Facility Access Digroups (FADs), can be located anywhere in the frame. The number of simultaneous FADs on a DACS II is limited to the number of provisioned clear-2 Mbit/s NPCs. These provisioned NPCs can be used for testing and then later used for cross-connected traffic.


Clear-2 Mbit/s Test Access (Continued)

Clear-2 Mbit/s Test Access Modes The modes of clear-2 Mbit/s test access are shown in Figure 4-7 through Figure 4-20 and briefly described in Table 4-3.


Table 4-3. Clear-2 Mbit/s Test Access Modes

Mode	Meaning	Illustration
MONE	Monitor Equip (E) End of Idle Port or Cross-Connection	Figure 4-7
MONF	Monitor Fac (F) End of Idle Port or Cross-Connection	Figure 4-8
MONEF	Monitor Both Ends	Figure 4-9
SPLTA	Splits E-to-F Connection To Test E-to-F Direction	Figure 4-10
SPLTB	Splits F-to-E Connection To Test F-to-E Direction	Figure 4-11
SPLTAB	Splits both connections To allow assignment of FADs	Figure 4-12
SPLTE	Splits E-to-F Connection To Test E End	Figure 4-13
SPLTF	Splits F-to-E Connection To Test F End	Figure 4-14
SPLTEF	Splits Both Directions To Test E and F Ends	Figure 4-15
LOOPE	Loops E End and Monitors Signal; on 2-Way Circuit, F End Is Disconnected	Figure 4-16
LOOPF	Loops F End and Monitors Signal; on 2-Way Circuit, F End Is Disconnected	Figure 4-17
HUB	Non-channelized connection between FAD and remote FAD	Figure 4-18
LPBKT	Terminally loopback non-channelized FAD	Figure 4-19
TNR	Release one or two FADs and restore circuit to original state	Figure 4-20

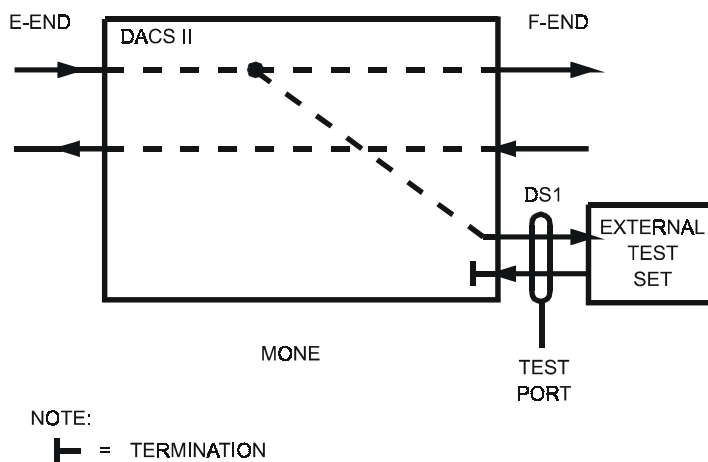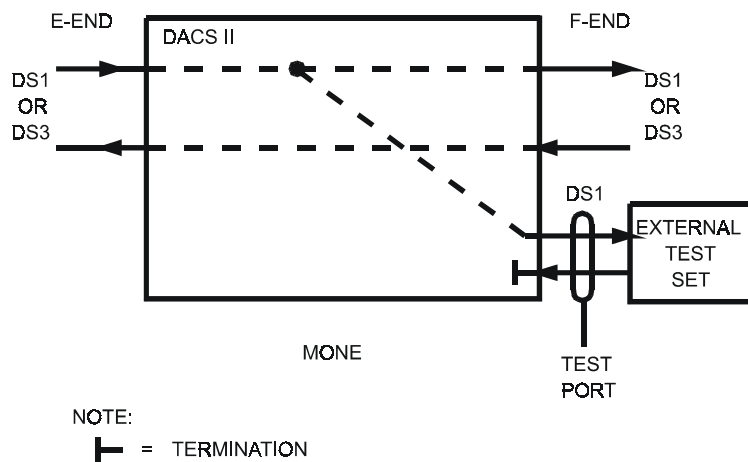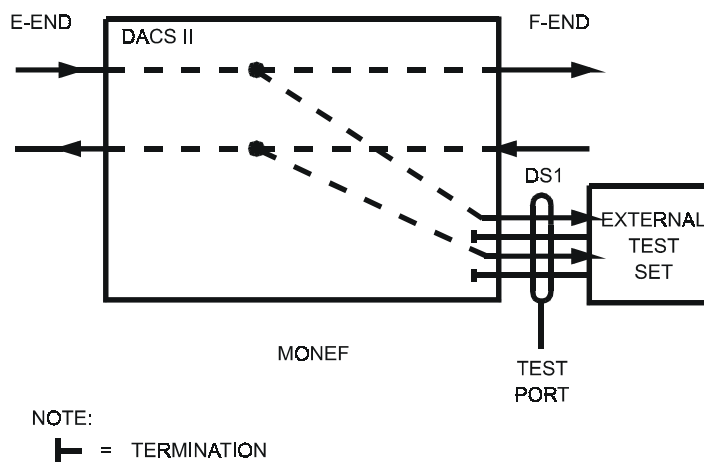
(Continued on next page)

Clear-2 Mbit/s Test Access (Continued)**Clear-2 Mbit/s Test
Access Modes,
Continued**

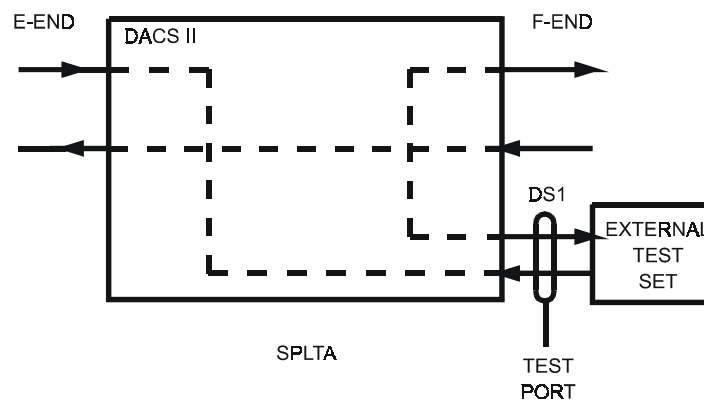
tpa 783614/01

Figure 4-7. MONE Mode**Figure 4-8. MONF Mode**

(Continued on next page)

Clear-2 Mbit/s Test Access (Continued)**Clear-2 Mbit/s Test
Access Modes,
Continued**

tpa 785189/01

Figure 4-9. MONEF Mode


tpa 785190/01

Figure 4-10. SPLTA Mode

(Continued on next page)

Clear-2 Mbit/s Test Access (Continued)

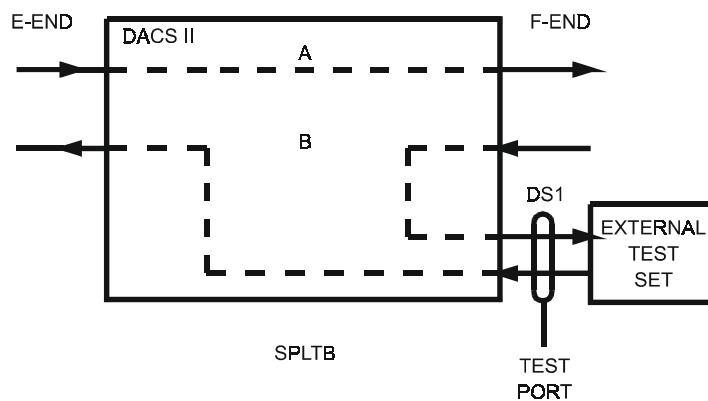Clear-2 Mbit/s Test Access Modes, Continued



ipa 785191/01

Figure 4-11. SPLTB Mode

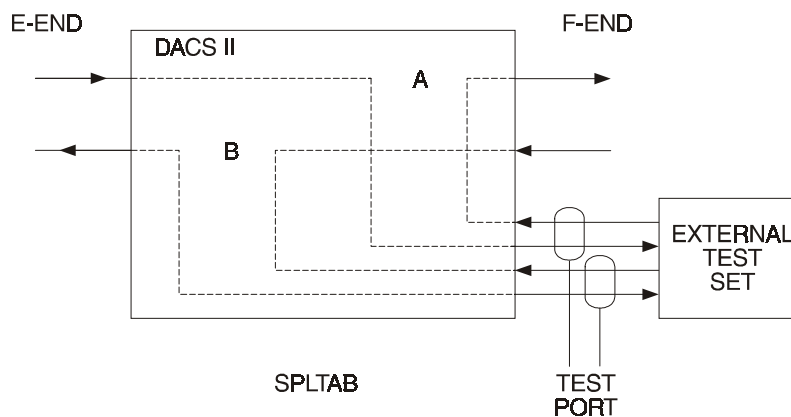
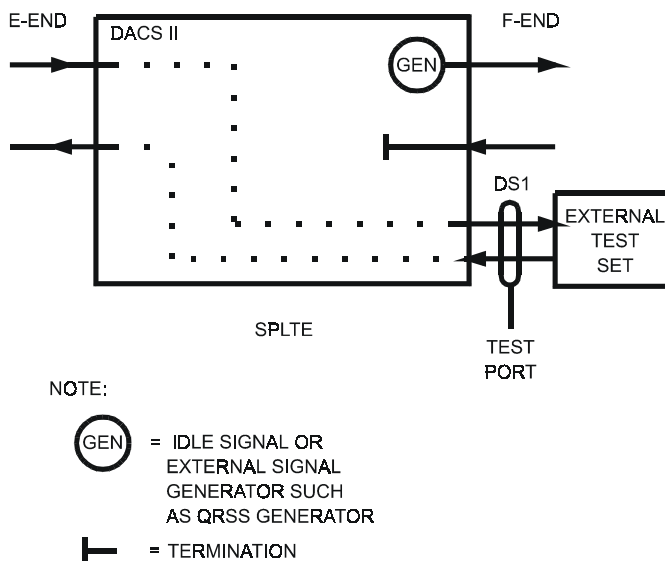
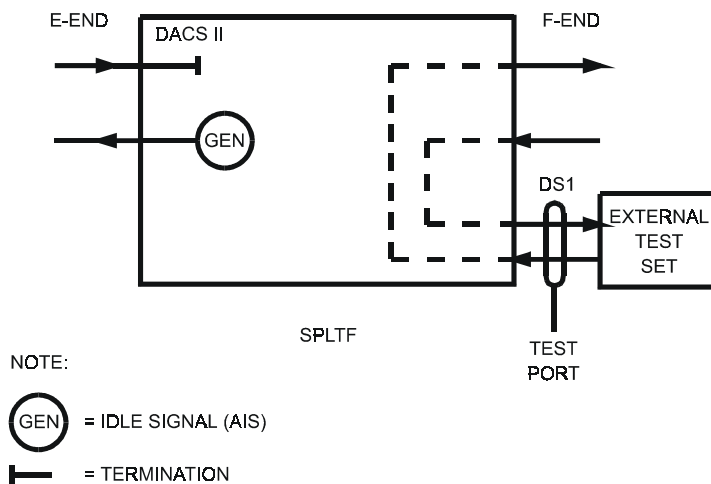


Figure 4-12. SPLTAB Mode

(Continued on next page)

Clear-2 Mbit/s Test Access (Continued)**Clear-2 Mbit/s Test
Access Modes,
Continued**

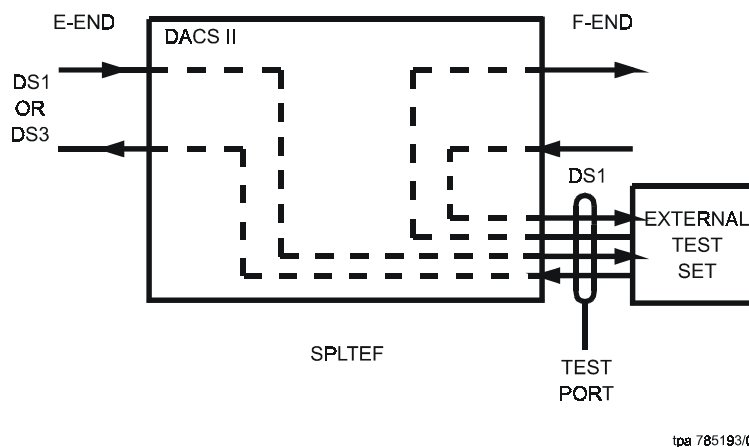
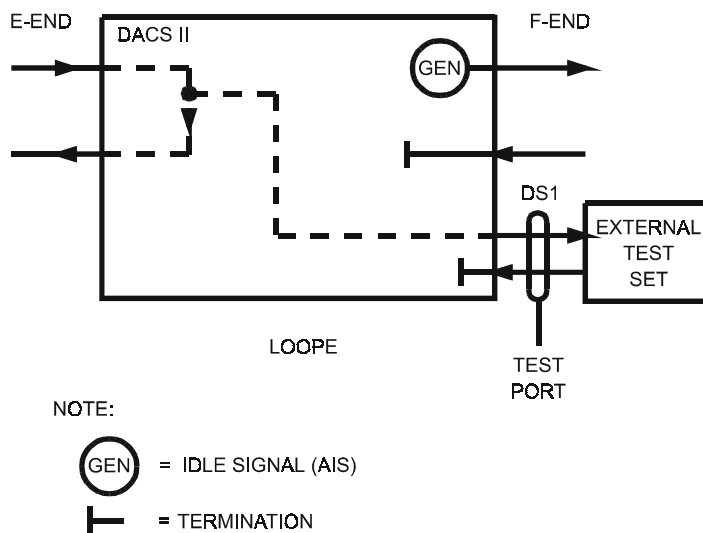
tpa 783615/01

Figure 4-13. SPLTE Mode

tpa 785192/01

Figure 4-14. SPLTF Mode

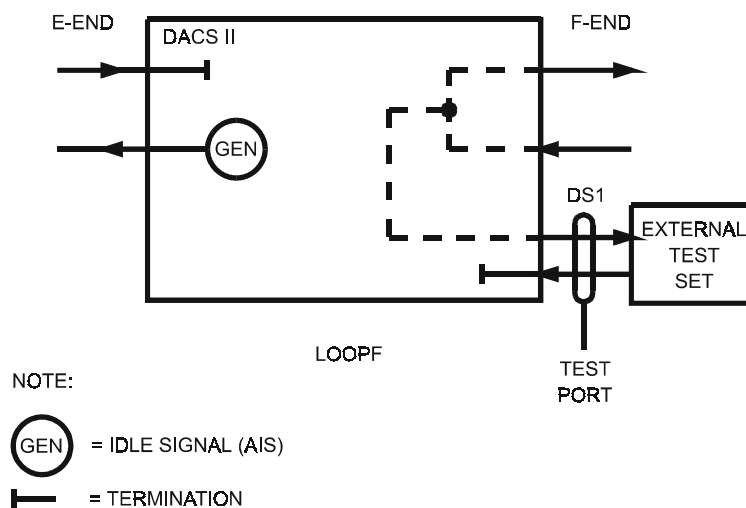
(Continued on next page)

Clear-2 Mbit/s Test Access (Continued)**Clear-2 Mbit/s Test
Access Modes,
Continued****Figure 4-15. SPLTEF Mode****Figure 4-16. LOOPE Mode**

(Continued on next page)

Clear-2 Mbit/s Test Access (Continued)

Clear-2 Mbit/s Test Access Modes, Continued



tpa 785184/01

Figure 4-17. LOOPF Mode

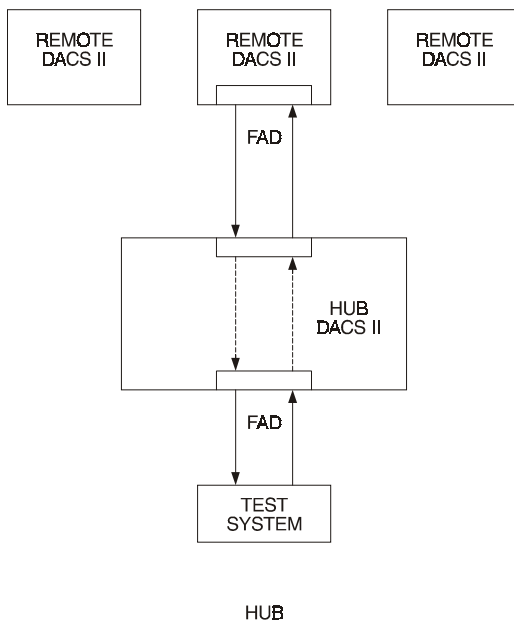


Figure 4-18. HUB Mode

(Continued on next page)

Clear-2 Mbit/s Test Access (Continued)

Clear-2 Mbit/s Test Access Modes, Continued

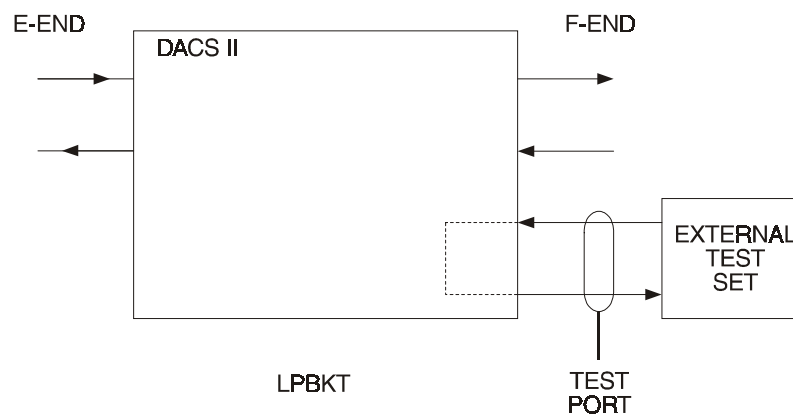


Figure 4-19. LPBKT Mode

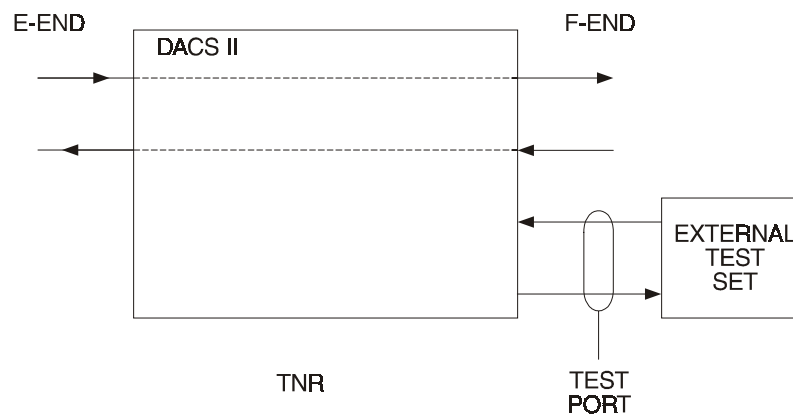


Figure 4-20. TNR Mode

Clear-2 Mbit/s Test Access (Continued)

Establish or Change Clear-2 Mbit/s Test Access

Clear-2 Mb/s test access connections are established and changed using the same command. The command establishes or changes unchannelized test access in the following connection types:

- Monitor
- Split
- Loop
- Hub
- Released.

For test modes MONEF, SPLTAB, and SPLTEF, two FADs must be entered. If the 2nd FAD is omitted, the FAD pair defaults to <npc No.1> and <npc No.1> + 1. If <npc No.1> is the highest NPC number on the DACS II frame, the 1st NPC on the frame is used in the FAD pair.

Clear-2 Mbit/s Test Access (Continued)

Unmapped Test Access

The following unmapped circuits are supported:

- One unmapped NPC
 - A pair of unmapped NPCs.
-

Mapped Test Access

The following mapped circuits are supported:

- One-way circuits
- Two-way circuits
- Broadcast circuits.

A one-way circuit can only be tested in the monitor E side (MONE) or split A circuit (SPLTA) modes. Only one test connection can exist at a time for any circuit.

Release Test Port

When a FAD has been released from testing, any circuit under test is restored to its original state and any termination on a circuit as a result of splitting or looping shall be released automatically. However, any actual termination change made by the user will remain unless released/terminated prior to ending the test session. If two FADs are being used in the test session, both FADs are released when the first one is specified in the command.

Hub and Loopback Test Access

Overview

The following section is intended to provide the reader with reference information which describes:

- Hub test access
- Loopback test access.

These test access modes are common to almost all test access connection types.

Hub Test Access

Overview

Hubbing is a specialized test access that allows a connection between a test system and an unmapped location that is connected to another remote DACS II frame. This connection serves as a path to test a cross-connection in the remote DACS II without a direct connection to the test system.

Hub test access is available for the following types of circuits:

- DS0 circuits

For a DS0Hub test access, a connection is established between a TAP and an unmapped NPC connected to another remote DACS II.

- Clear-2 Mb/s circuits

For clear-2 Mb/s Hub test access, a two-way connection is established between a FAD and an unmapped clear-2 Mbit/s NPC, which is connected to a FAD on a remote DACS II.

- Nx64 circuits.

For Nx64 Kbit/s HUB test access, a connection is established via a TG, to an Nx64 Kbit/s TO termination consisting of two Nx64 Kbit/s bundles connected to the TG's east and west bundles. The number of channels in each bundle, N, is the same as the TG's width, and the starting channels are indicated by the TO termination.

(Continued on next page)

Hub Test Access (Continued)

Overview, Continued

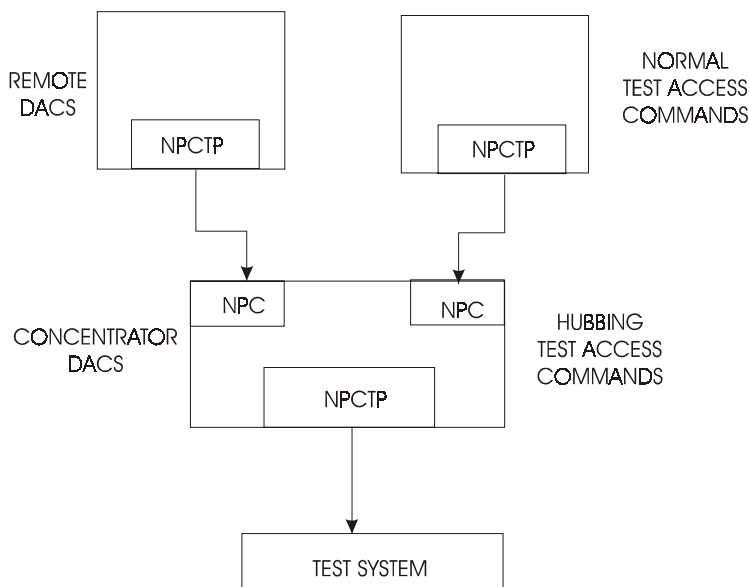


Figure 4-21. Hubbing Test Access for Test Ports (similar for Test Groups)

Test Activity

The Hub test activity includes:

1. Entering a hubbing test access command at the concentrator DACS II to connect the NPC associated with the test system to the dedicated NPC that is associated with the remote DACS.
2. Entering the appropriate test access commands at the remote DACS to perform the desired test.
3. Entering a release hubbing test access command in the concentrator DACS II when all test access is concluded and released at the remote DACS.

Using Trunk Conditioning

The trunk conditioning (<tc>) should not be specified for a 2.048 Mb/s TP or TG unless the NPC termination specified in the command belongs to a 1.544 Mb/s circuit. If both terminations are 2.048 Mb/s type framing, then the <tc> will default to 16-state signaling with all ones and an insertion word of all ones.

Loopback Test Access

Overview

Loopback is a specialized test access that allows each of the two sides of a test system to be individually looped back to itself. The signal received from the facility side is returned to the facility, as shown in Figure 4-22. Loopback is useful for testing the connection between the test system and the external test equipment.

Loopback test access is available for the following types of circuits:

- DS0 circuits

For DS0 loopback test access, the two channels of a specified TP are individually looped back to itself.

- Clear-2 Mb/s circuits

For clear-2 Mb/s loopback test access, the input port of the FAD is connected to the output port. The FAD must be unmapped or must have been released from test access first.

- Nx64 circuits

For Nx64 Kbit/s loopback test access, both bundles of a TG are individually looped back to itself.

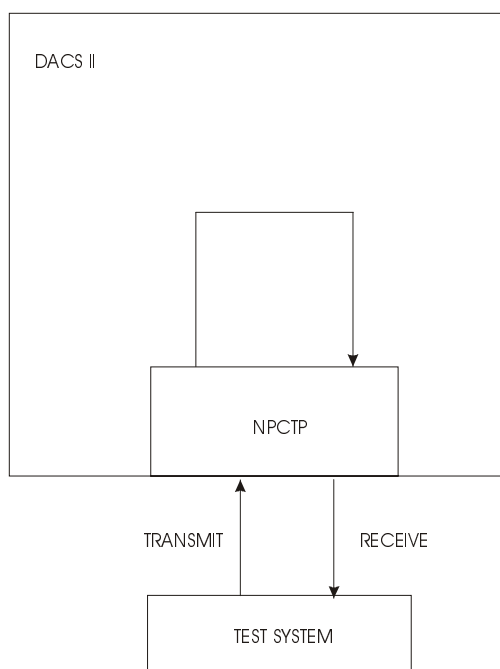


Figure 4-22. Loopback Test Access for Test Ports (similar for Test Groups)

Loopback Test Access (Continued)

Test Activity

Because loopback is a verification of the test access, it does not connect to any circuits. The loopback test activity includes:

1. Entering a command to place the test system into the loopback mode.
 2. The test system inserts a signal (level, frequency, or bit pattern) into the transmit direction.
 3. The test system takes measurements at the receive side to assure that the signal (level, frequency, or bit pattern) is correct.
 4. If a difference is noticed, adjustments are made to the interface equipment to compensate for the error.
-

Using Trunk Conditioning

The need to specify a <tc> value depends on the type of Test Port/Test Group (TP/TG) that is being looped back:

- Trunk conditioning must be specified only when looping back a dynamic TP/TG. A dynamic TP/TG is defined as a TP/TG in which trunk conditioning was not specified when the TP/TG was provisioned.
 - Although it is not required, trunk conditioning may be specified to loop a static TP/TG. A static TP/TG is defined as a TP/TG in which trunk conditioning was specified when the TP/TG was provisioned. If trunk conditioning is specified for the loopback connection, it will be used. If it is not specified, the TP/TG's trunk conditioning value will be used.
-

Integrated Test Set

Overview The Integrated Test Set (ITS) feature provides the DACS II with a built-in Bit Error Ratio Tester (BERT) capability. ITS was developed for facility troubleshooting, providing the capability of generating, reading, and evaluating test signals from the DACS II without the use of external test sets. ITS test access is available for Nx64 kbit/s circuits ($1 \leq N \leq 24$ for North American NPCs and $1 \leq N \leq 31$ for international NPCs).

ITS NPC Information

Overview This section describes the ITS circuit pack and NPC types.

ITS Circuit Pack The ITS is implemented on the Digital Signal Processing (DSP) circuit pack, TG193B. The DACS II TG193B pack generates and measures the test signals and provides a test access point.

Circuit Types Supported ITS can be used with test access for fractional DS1 and E1 (Nx64 kbit/s) circuit testing for the monitor, split, hub, and looped test access modes.

 **NOTE:**
The only type of connections allowed on a ST-type NPC are test access connections. All other cross-connections (for example, CONN-CRS-T1, CONN-CRS1-T0, etc.) are not permitted.

ITS NPC Information (Continued)

Installing/ Growing ITS NPCs

To support ITS, the NPCs must be grown as ST-type NPCs. The two STxyz types available are:

- ST100 - 32 channel FTM (International)
- ST110 - 24 channel FTM (North American).

Where the x value indicates the feature (x=1 indicates the ITS feature) and the y value indicates which FTM type the NPCs can be grown in (y=0 indicates the 32 channel FTM and y=1 indicates the 24 channel FTM).

Two NPCs can be grown on a TG193B card, providing a total of 64 channels (24 channels per NPC for the North American FTM and 32 channels per NPC for the International FTM).

The NPC type and possible card slot designations are illustrated in Table 4-4.

Table 4-4. STxyz Type Card Slot Designations

NPC Type	FTM Type	Possible FTM Card Slot Numbers
ST100	32 channel (International)	1 through 16
ST110	24 channel (North American)	1 through 20

Test Groups

ST-type NPCs must be provisioned as test groups. Test ports are not allowed for ST-type NPCs.

ITS Test Access

Overview This section illustrates the test access modes available with ITS NPCs.

Test Access Modes The following test access modes are supported for ITS NPCs:

- Monitor
- Split
- Hub
- Looped
- Release.

Figure 4-23 through Figure 4-27 illustrate each test access mode for Nx64 kbit/s circuits.

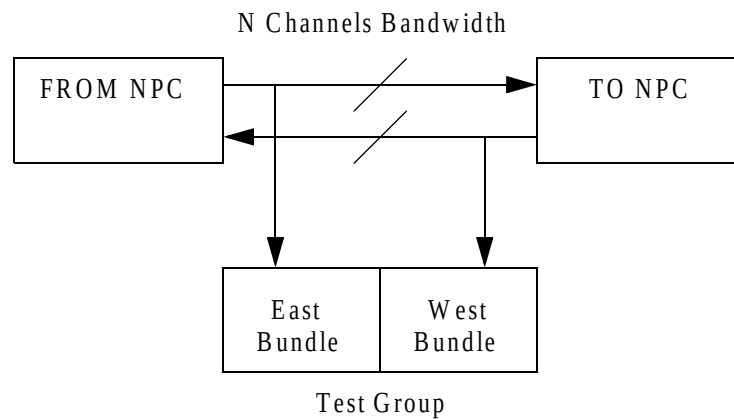


Figure 4-23. Test Access in Monitor Mode

(Continued on next page)

ITS Test Access (Continued)

Test Access Modes (Continued)

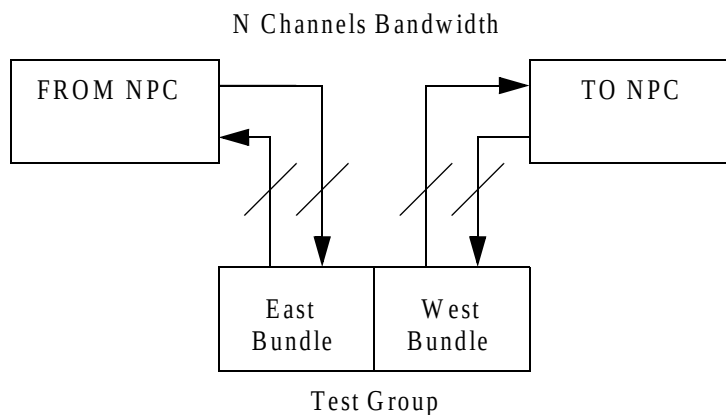


Figure 4-24. Test Access in Split Mode

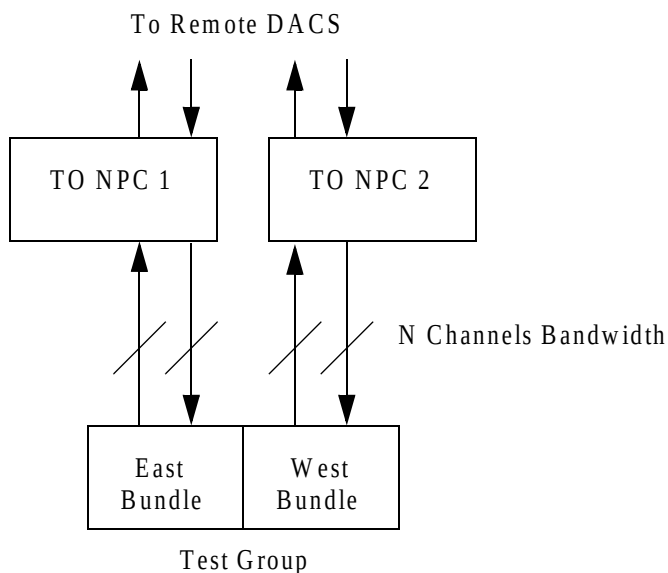


Figure 4-25. Test Access in Hub Mode



NOTE:

NPCs 1 and 2 could be the same NPC if the bandwidth is small enough.

(Continued on next page)

ITS Test Access (Continued)

Test Access Modes (Continued)

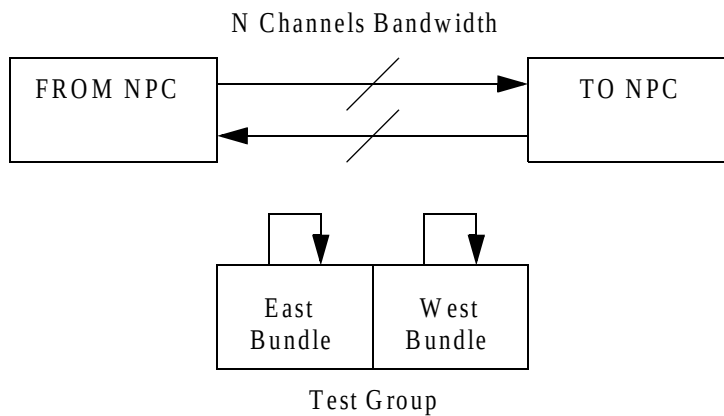


Figure 4-26. Test Access in Looped Mode

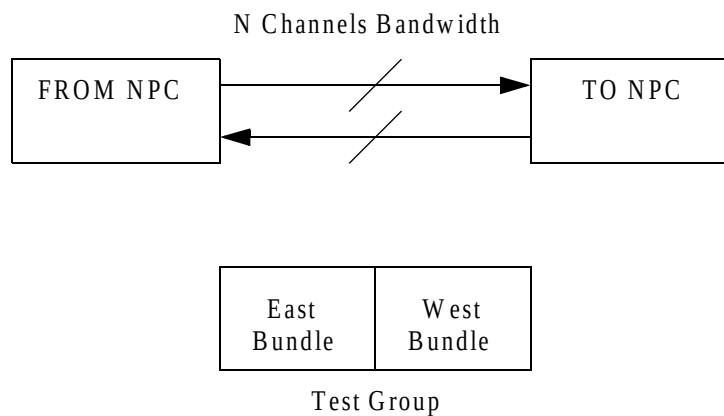


Figure 4-27. Test Access in Release Mode

Test Signal Generation

Overview

Test signal generation will only be allowed in the split, hub, and looped test access modes. While test signal generation is in progress, the test group will not be able to exit the split, hub, or looped test access modes.

Each test group is comprised of the following two bundles:

- The East bundle
- The West bundle.

Each bundle consists N channels for an Nx64 kbit/s test access connection. The bundle of the test group (East or West) must be specified to indicate which side to transmit the signal to. An all ones signal (11111111) will be transmitted to the unspecified bundle.

Test Patterns

The ITS NPCs can generate the following types of test pattern for the Nx64 kbit/s test access:

- 511 PRBS (Pseudo-Random Binary Sequence)
- 2047 PRBS
- An 8-bit user-defined code (where the user selects the test pattern).

The 511 PRBS and 2047 PRBS conform to ITU Recommendation G.821.

Bit Errors

The ITS NPCs are able to insert a single bit error into the generated test signal for measuring purposes. The single bit error is created by inverting the first bit in the transmitted pattern in the next frame.

Test Signal Monitoring

Overview

Like test signal generation, test signal monitoring will only be allowed in the split, hub, and looped test access modes. Additionally, the Test Group must be in Generation mode prior to entering Test Signal Monitoring mode. While test signal monitoring is in progress, the test group will not be able to exit the split, hub, or looped test access modes.

The ITS is able to recognize and synchronize to all test signal types that it is capable of generating. Additionally, the ITS should be able to recognize any received bits errors in the incoming channel.

Test Pattern Synchronization

The test pattern is considered in synchronization if there are 32 error-free clock cycles (frames with no errors).

Test Pattern Loss

The test pattern's synchronization is considered lost when the bit error ratio exceeds the following threshold for a period of 100 milliseconds:

- 20% for PRBS signals
 - 4% for user-specified 8-bit patterns.
-

Test Pattern Resynchronization

Once the test pattern is declared lost, a resynchronization is automatically attempted.

Test Signal Monitoring (Continued)

Error Performance Parameters

Error performance parameters are calculated by the ITS during test signal monitoring based on ITU Recommendation G.821. The following statistics are kept:

- Elapsed Time (S_{TOTAL}) - total time elapsed since entering the test signal monitoring mode.
- Out of Synchronization Seconds (S_{OOS}) - the number of seconds during which pattern synchronization was not maintained over the entire second.
- Unavailable Seconds ($S_{UNAVAIL}$) - a count of unavailable seconds.
- Available Seconds (S_{AVAIL}) - a count of available seconds.
$$S_{AVAIL} = S_{TOTAL} - (S_{UNAVAIL} + S_{OOS})$$

A period of unavailable time begins when the bit error rate (BER) is $\geq 1 \times 10^{-3}$ for a period of ten consecutive seconds. These ten seconds are all unavailable time. A separate criteria exists for the transition from unavailable time to available time. A new period of available time begins at the onset of a period of ten consecutive seconds each of which has a BER $< 1 \times 10^{-3}$. These ten seconds are all available time.

- Bit Errors (BE) - count of logical bit errors detected.
- Bit Error Ratio (BER) - $(\text{Total Bit Errors}) / (S_{AVAIL} \times \text{Data Rate})$.
- Errored Seconds (ES) - number of seconds in which one or more bits are in error.
- Severely Errored Seconds (SES) - number of seconds with BER $\geq 1 \times 10^{-3}$.
- Errored Seconds Ratio (ESR) - ES / S_{AVAIL} .
- Severely Errored Second Ratio (ESR) - SES / S_{AVAIL} .

Test Monitoring Duration

The test can be set to last a period from 1 to 120 minutes, although the user is allowed to stop the test at any point. Additionally, the test interval does not have to be specified. If no time period is specified by the user, the test duration is open ended, and the test will stop only upon request from the user.

When the test is completed, a full set of error performance parameters will be displayed.

Cross-Connections and Disconnections

5

Contents

■ Background	5-1
Introduction	5-1
Cross-Connection Keywords	5-1
Objectives	5-2
Related Information	5-2
Related Tasks	5-3
Cross-Connect, Change, Disconnect 64-kb/s Signals	5-4
Overview	5-4
■ Two-Point, Two-Way or One-Way Circuit	5-4
Overview	5-4
Channel Ranges	5-4
Trunk Conditioning	5-5
Signaling Conversion	5-5

(Continued on next page)

Contents

■ Two-Point Gateway Circuit	5-8
Overview	5-8
Channel Ranges	5-8
Trunk Conditioning	5-9
Signaling Conversion	5-9
■ Two-Way Multipoint Circuit	5-11
Overview	5-11
NAM Keyword	5-11
DMB Circuits	5-12
Virtual Circuits	5-13
Multipoint Channel Numbers	5-14
Trunk Conditioning	5-14
■ Broadcast Circuit	5-15
Overview	5-15
■ One-Way Multipoint Circuit	5-16
Overview	5-16
NAM Keyword	5-16
Virtual NPC Broadcast	5-17
Trunk Conditioning	5-17
■ Change Cross-Connect	5-18
Overview	5-18
Termination State	5-18
Conference Bridge Parameters	5-18
■ Disconnect Cross-Connected Circuit	5-19
Overview	5-19
Broadcast Disconnection	5-19

(Continued on next page)

Contents

Cross-Connect, Change, or Disconnect Clear-2 Mb/s Signals	5-20
Overview	5-20
■ Two-Point, Two-Way or One-Way Circuit	5-20
Overview	5-20
■ Broadcast Circuit	5-21
Overview	5-21
■ Switch Return Leg of Broadcast Circuit	5-22
Overview	5-22
■ Change Termination State of Cross-Connection	5-23
Overview	5-23
■ Disconnect Broadcast Circuits	5-24
Overview	5-24
Broadcast Disconnection Rules	5-24
Re-Direct Cross-Connections	5-25
Overview	5-25
■ Re-Direct DS0 Signals	5-25
Overview	5-25
DS0 Roll Steps	5-25
DS0 Cross-connection Types	5-26
Channel Range	5-26
■ Re-Direct E1 Signals	5-27
Overview	5-27
E1 Roll Steps	5-27
E1 Roll Cross-connection Types	5-27
Channels on DSP Cards	5-28
■ Network Element	5-29
Overview	5-29
■ Non-Network Element	5-30
Overview	5-30
Bridging Repeater	5-30

(Continued on next page)

Contents

Timeslot 0 Cross-Connections	5-31
Overview	5-31
■ Two-Way Cross-Connections	5-32
Overview	5-32
Frame Word and Non-Frame Word	5-32
■ Broadcast Circuit	5-33
Overview	5-33
Restrictions	5-33
■ Change Timeslot 0 Monitoring	5-34
Overview	5-34
TS0M Spare Bit Meanings	5-34
■ Change Timeslot 0 Spare Bits	5-35
Overview	5-35
TS0 Spare Bit Meanings	5-35
■ Change Non-Frame Word Bits	5-36
Overview	5-36
NFW Spare Bit Meanings	5-36
■ Disconnect Two-way TS0 Circuit	5-37
Overview	5-37
Channel Numbers	5-37
■ Disconnect Broadcast TS0 Circuit	5-38
Overview	5-38
Channel Numbers	5-38
DSP Application Connections	5-39
Overview	5-39
■ Cross-Connect, Change, or Disconnect DSP Application	
Connections	5-39
Overview	5-39
Channel Numbers	5-39

(Continued on next page)

Contents

■ DSP Platform Application-to-Application Cross-connections	5-40
Overview	5-40
Pseudo Channel Number	5-40
Application-to-Application Cross-connection Reports	5-40

Cross-Connections and Disconnections

5

Background

Introduction

The primary functions of the DACS II is to provide electronic cross-connections. There are either 30 channels plus signaling (CAS) or 31 channels (NSA), plus time slot 0, that may be cross-connected. There are two major types of cross-connections in the DACS II, two-point and multipoint with several variations of each.

Cross-Connection Keywords

Table 5-1 displays the first few keywords used in the cross-connection/disconnection commands. These keywords will help indicate the type of cross-connection.

Table 5-1. Cross-Connection Keywords.

Keyword	Description
CRS	2-way connection
CRS1	1-way connection
T0	DS0 circuit
T1	DS1 circuit
T3	DS3 circuit

Background (Continued)

Objectives

This chapter provides information to perform the following:

1. Establish Cross-Connections
 2. Change Terminations state of Cross-Connections
 3. Disconnect Cross-Connections.
-

Related Information

For related information, refer to the *DACS II Command and Message Manual*.

Background (Continued)

Related Tasks

For related tasks, refer to the following General Tasks in Volume II:

- 64-kb/s Signals: Two-point, Two-way or One-way Circuits GT 5.1
 - 64-kb/s Signals: Two-point Gateway Circuits GT 5.2
 - 64-kb/s Signals: Two-point Multi-point Circuits GT 5.3
 - 64-kb/s Signals: Broadcast Circuits GT 5.4
 - 64-kb/s Signals: One-Way Multipoint Circuit GT 5.5
 - 64-kb/s Signals: Enter Change Cross-Connect Command GT 5.6
 - 64-kb/s Signals: Disconnect Cross-Connected Circuit GT 5.7
 - Clear-2 Mb/s Signals: Two-Point, Two-Way or One-Way Circuit GT 5.8
 - Clear-2 Mb/s Signals: Broadcast Circuit GT 5.9
 - Clear-2 Mb/s Signals: Switch Return Leg of Broadcast Circuit GT 5.10
 - Clear-2 Mb/s Signals: Change Termination State
of Cross-Connection GT 5.11
 - Clear-2 Mb/s Signals: Disconnect Two-Point, Two-Way
or One-Way Circuits GT 5.12
 - Clear-2 Mb/s Signals: Disconnect Broadcast Circuits GT 5.13
 - Re-Direct DS0 Signals GT 5.14
 - Re-Direct E1 Signals: Network Element GT 5.15
 - Re-Direct E1 Signals: Non-Network Element GT 5.16
 - Timeslot 0: Two-Way Cross-Connections GT 5.17
 - Timeslot 0: Broadcast Circuit GT 5.18
 - Timeslot 0: Change Timeslot 0 GT 5.19
 - Timeslot 0: Disconnect Two-way TS0 Circuit GT 5.20
 - Timeslot 0: Disconnect Broadcast Circuit GT 5.21
 - DSP Application: Cross-Connect, Change or Disconnect
DSP Application Connections GT 5.22
 - DSP Platform: Application-to-Application Cross-Connections GT 5.23
-

Cross-Connect, Change, Disconnect 64-kb/s Signals

Overview	This section provides information required to cross-connect, change, or disconnect 64-kb/s: ■ Two-point, two-way or one-way circuits ■ Two-way gateway circuits ■ Two-way multipoint circuits ■ Broadcast circuits ■ One way multipoint circuits.

Two-Point, Two-Way or One-Way Circuit

Overview	This section provides information for 1-way or 2-way cross-connections between channels of NPCs. These channels will either be connected using CAS (channel associated signaling) or NSA (nonsignaling associated) mode. The 32 time slots in the 2.048 Mb/s signal are normally referred to by telephone channel number in the DACS II commands. With this numbering, channels 00 through 15 correspond to the like-numbered time slots and channels 16 through 30 correspond to time slots 17 through 31. DACS II channel 31 corresponds to time slot 16 which carries signaling in the CAS mode.

Channel Ranges	When entering a channel range in the cross-connection command, consider the following: ■ For pure 2.048-Mb/s Interface and CAS mode, the range is any continuous group of 30 channels or less (01 through 30). CAS channels 00 and 31 (TS16) and NSA channel 00 are not allowed in range connection. ■ For pure 2.048-Mb/s Interface and NSA mode, the range is any continuous group of 31 channels or less (01 through 31).

Two-Point, Two-Way or One-Way Circuit (Continued)

Trunk Conditioning

Trunk conditioning (TC) is used for alternate signaling bits to be sent during a failure (when required). The trunk conditioning field specifies how the DACS II should respond to either incoming digital signal failures or removal of NPCs from service (manually or autonomously). Consider the following information on trunk conditioning:

- The FROM and TO sides of the TC field correspond to the FROM and TO terminations entered in the command.
- If one or both sides are transparent (no signaling), the TRSP,IW-X-pq form must be used. The signaling pattern given by X-D is automatically sent on the CAS side.
- If specific <tc> is entered for 1-way circuits, dashes must be entered for the FROM side; for example, TC-X--,X-FF).

Use Part A of Figure 5-1 and Figure 5-2 to construct a value for trunk conditioning.

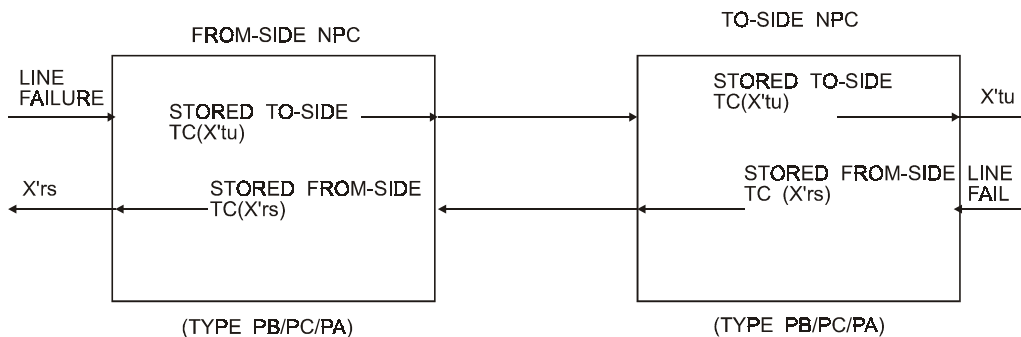
Signaling Conversion

Signaling Conversion is used when cross-connecting CAS to CAS channels. All for signaling bits (ABCD) will be cross-connected unchanged in each direction on time slot 16. This feature allows the cross-connection to adjust the state of each signaling bit if required.


Consider the following information on signaling conversion:

- The FROM and TO sides of the SC field correspond to the FROM and TO terminations entered in the command.
- SC is not recommended in a pure 2.048-Mb/s Interface to 2.048-Mb/s Interface connection; the SC is done on each end of the connection and the net result is to cancel it out.

Use Part B of Figure 5-1 to construct a value for signaling conversion.



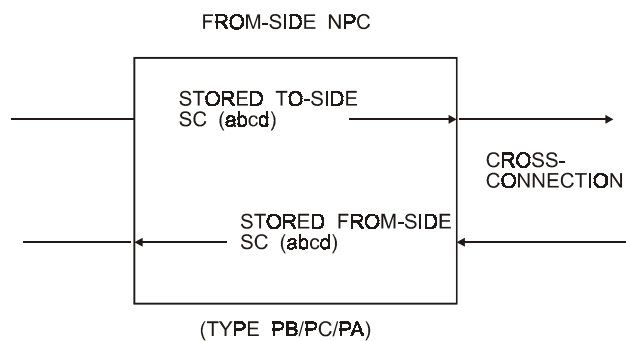A. TRUNK CONDITIONING



B. SIGNALING CONVERSION

Figure 5-1. Trunk Conditioning and Signaling Conversion Diagrams

(Continued on next page)

16-STATE SIGNALING;	NO SIGNALING/TRANSPARENT;
Hexadecimal: TC-X-rs,X-tu,IW-X-nn	TRSP,IW-X-nn
Binary: TC-efghijkl,mnopqrst,IW-X-nn	
Default = TC-X-FF,X-FF,IW-X-FF	Default = TRSP,IW-X-FF
X-rs = Hex word for 8-bit pattern to be sent on FROM side rs = binary abcdabcd	
X-tu = Hex word for 8-bit pattern to be sent on TO side tu = binary abcdabcd	

Figure 5-2. Construction of Trunk Conditioning Field

Two-Point Gateway Circuit

Overview

This section provides information for 1-way or 2-way cross-connections between channels of PBCs (primary block circuits). These channels will either be assembled using CAS (channel associated signaling) or NSA (nonsignaling associated) mode. The 32 time slots in the 2.048-Mb/s signal are normally referred to by telephone channel number in the DACS II commands. With this numbering, channels 00 through 15 correspond to the like-numbered time slots and channels 16 through 30 correspond to time slot 17 through 31. DACS II channel 31 corresponds to time slot 16 which carries signaling in the CAS mode.

Channel Ranges

When entering a channel range in the cross-connection command, consider the following:

- For 2.048-Mb/s Interface and CAS mode, the range is any continuous group of 30 channels or less (01 through 30). CAS channels 00 and 31 (TS16) and NSA channel 00 are not allowed in range connection.
 - For 2.048-Mb/s Interface and NSA mode, the range is any continuous group of 31 channels or less (01 through 31).
 - For connection to DS1, the range is any continuous group of 24 channels or less. These will fall into the 01 through 24 range on the DS1 side and 01 through 30/31 range on the 2.048-Mb/s Interface side.
-

Two-Point Gateway Circuit (Continued)

Trunk Conditioning

Consider the following information on trunk conditioning:

- The FROM and TO sides of the TC field correspond to the FROM and TO terminations entered in the command. With the 16-state TC format (for connection to type DE1yz NPC), bits abcd must be entered with ab=cd (for example, hex 5 = 0101) on both the DS1 and 2.048-Mb/s Interface sides.
- If one or both sides are transparent (no signaling), the TRSP,IW-X-pq form must be used. The signaling pattern given by X-D is automatically sent on the CAS side.
- If specific <tc> is entered for 1-way circuits, dashes must be entered for the FROM side; for example, TC-X--,X-FF).
- In a gateway application, when E1 channels are connected to T1 channels, the following rules apply to the transmittal of the Insertion Word (IW) towards the facility. If the Insertion Word needs to be transmitted towards the facility as a result of consequent action, then the Insertion Word transmitted by the T1 NPC towards its transmission facility is the Insertion Word specified in this command; however, the Insertion Word transmitted by the E1 NPC towards its facility is always X'FF.

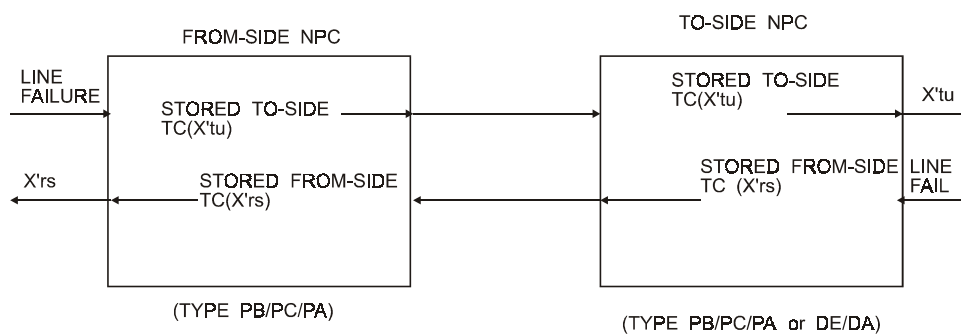
Part A of Figure 5-3 illustrates the data flow of the trunk conditioning.

Signaling Conversion


Consider the following information on trunk conditioning:

- The FROM and TO sides of the SC field correspond to the FROM and TO terminations entered in the command.
- The defaults for the <sc> field are: PP01 (Type DE1 NPC), PPPP (Type DE2 or DE3 NPC), and 1101 (with TRSP <tc>).

Part B of Figure 5-3 illustrates the data flow of the signaling conversion.



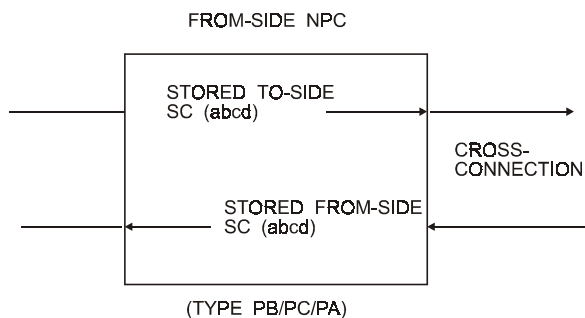A. TRUNK CONDITIONING



B. SIGNALING CONVERSION

Figure 5-3. Trunk Conditioning and Signaling Conversion Diagrams

Two-Way Multipoint Circuit

Overview

This section covers both symmetrical and broadcast multipoint configurations that are set up using the DSPU (DMB-type) NPC or virtual NPC. The virtual NPCs are 961 and 962 (99-1-01 and 99-1-02) for non-CEF frames, and [9]961 through [9]966 (99-1-01 through 99-1-06) for CEF frames. For broadcast circuits, the common leg or BBL (backbone leg) is established using the LEG,BBL combination of command keywords and each tributary is connected using the LEG,BRD combination of keywords. For a symmetrical (SYM) bridge, each leg is connected to the DMB bridge using the LEG,SYM combination of keywords. The FTU termination connected to a bridge is called a LEG.

NAM Keyword

When the NAM (No A-law to μ -law or μ -law to A-law) keyword is specified in a cross-connection command, the translators that convert E1 into DS1 or DS1 into E1 signals is disabled. It may be desirable to disable conversions in a pure E1 multipoint cross-connect since such a connection has more quantization noise than a pure E1 two-point cross-connect. This is due to the back to back A-law to μ -law and μ -law to A-law conversions which are taking place.

The NAM keyword can be specified for the following types of multipoint connections:


- E1-to-E1
- E1-to-DS1
- DS1-to-E1.

DACS II conferencing equipment provides μ -law companding for use with DS1 signals. The DPC card for 2.048-Mb/s Interface makes needed conversions unless a data conference (no encoding) is specified by the NAM keyword. The first 2.048-Mb/s Interface connection determines the conference type (μ -law or data).

Two-Way Multipoint Circuit (Continued)

DMB Circuits

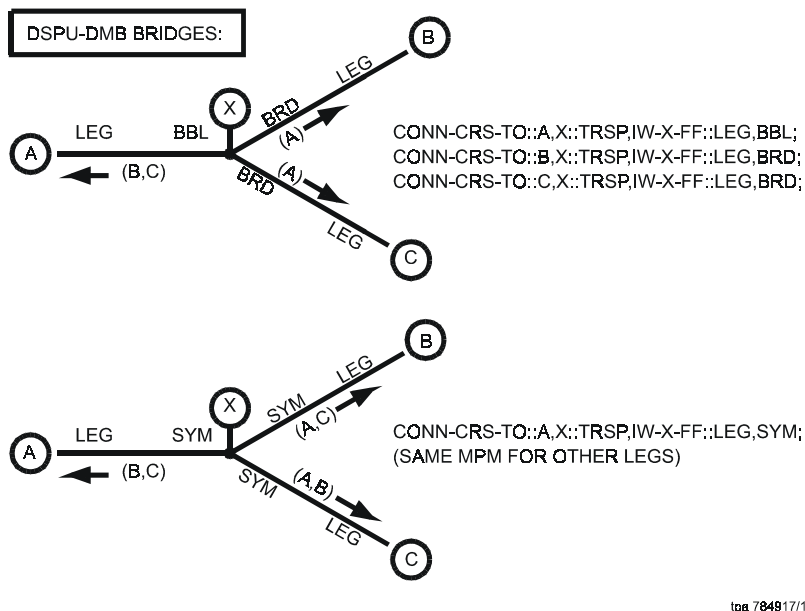Figure 5-4 displays models of multipoint circuits produced by DMB NPCs.




lpa 784917/11

Figure 5-4. DMB Circuit Configurations

Two-Way Multipoint Circuit (Continued)

Virtual Circuits

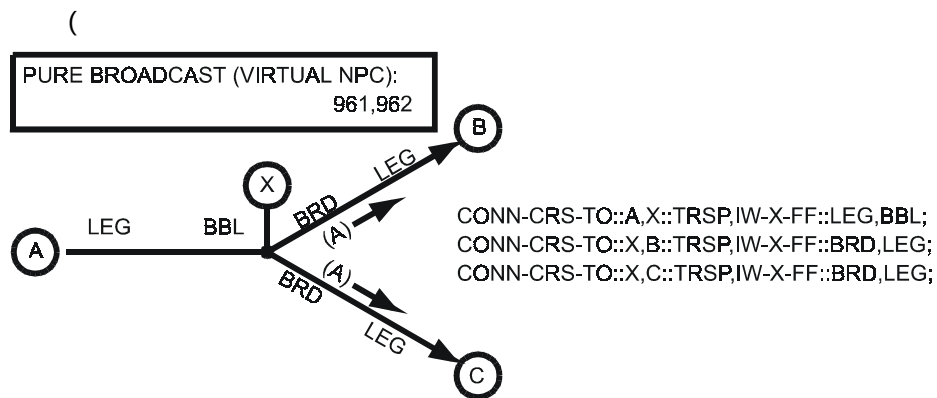Figure 5-5 displays models of multipoint circuits produced by specifying virtual NPCs.



spw 78491811

Figure 5-5. Virtual NPC Broadcast

Two-Way Multipoint Circuit (Continued)

Multipoint Channel Numbers

Table 5-2 lists the multipoint NPC type and its appropriate channel numbers.

Table 5-2. Multipoint NPC and Channel Numbers

Command Field	Leg-End NPC	Bridge-End DMB NPC	Bridge-End Virtual NPC
<npc No.>	Any facility NPC	DMB NPC (Type MB)	961,962 (or [9]961 - [9]966)
Channel No.	01 - 30 (or 31 with NSA)	01 - 85	001 - 500
Mode (fmd,tmd)	LEG	SYM,BBL,BRD	BBL,BRD

Trunk Conditioning

Use Figure 5-6 to construct a value for trunk conditioning.

<tc> = TRSP,IW-X-nn
(Default = TRSP,IW-X-FF)

Figure 5-6. Construction of TRSP Trunk Conditioning

Broadcast Circuit

Overview

This section presents the BDCST commands for establishing broadcast circuits through the cross-connect network. Up to eight tributaries can be connected to the broadcast leg at one time by listing them in the command with ampersands (&). Unless the looped or no return keywords are used, the DACS II will designate the first tributary that is entered as the full tributary which is the only one that returns transmission to the broadcast leg. This return path can be subsequently changed using the CHG RPATH command.

**NOTE:**

The Broadcast TS0 information can be found in the *Broadcast TS0 Connections* section in this chapter.

One-Way Multipoint Circuit

Overview

This section explains a method to establish one-way broadcast circuits using the CRS1 MPM command and virtual NPC [9]961 through [9]966 (or 99-1-01 through 99-1-06). To build such a circuit, you establish the backbone leg to the virtual NPC using the LEG,BBL combination of command keywords and connect each tributary to the backbone using the BRD,LEG combination of keywords. The FTU termination is always called a LEG. A range of channels can be broadcast using the channel range option for the backbone leg; this range is specified once and applies to the entire circuit. The broadcast circuit formed in the virtual NPC cannot be connected to another bridge circuit (concatenated) for further fanout.

NAM Keyword

When the NAM (No A-law to μ -law or μ -law to A-law) keyword is specified in a cross-connection command, the translators that convert E1 into DS1 or DS1 into E1 signals is disabled. It may be desirable to disable conversions in a pure E1 multipoint cross-connect since such a connection has more quantization noise than a pure E1 two-point cross-connect. This is due to the back to back A-law to μ -law and μ -law to A-law conversions which are taking place.

The NAM keyword can be specified for the following types of multipoint connections:

- E1-to-E1
- E1-to-DS1
- DS1-to-E1.

DACS II conferencing equipment provides μ -law companding for use with DS1 signals. The DPC card for 2.048-Mb/s Interface makes needed conversions unless a data conference (no encoding) is specified by the NAM keyword. The first 2.048-Mb/s Interface connection determines the conference type (μ -law or data).

One-Way Multipoint Circuit (Continued)

Virtual NPC Broadcast

Figure 5-7 displays a model of a pure broadcast network produced by specifying the first virtual NPC (9961). The commands shown are only examples.

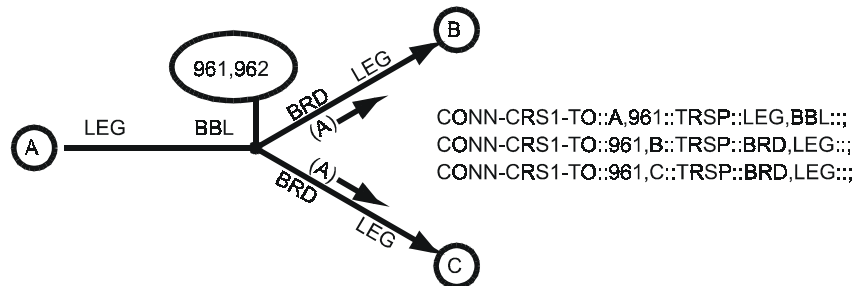


Figure 5-7. Virtual NPC Broadcast

Trunk Conditioning

Use Figure 5-8 to construct a value for trunk conditioning.

<tc> = TRSP,IW-X-nn
Default = TRSP,IW-X-FF

Figure 5-8. Construction of TRSP Trunk Conditioning

Change Cross-Connect

Overview

The following cross-connect settings can be changed:

- Termination State; terminated or released state on the circuit from:
 - TO side
 - FROM side
 - BOTH sides
 - All legs toward bridge
 - All legs toward facilities
 - All legs in both directions.
- Conference Bridge Parameters
 - Signal level (input and output levels, ranging from -9.0 to +8.8 dB in steps of 0.2 dB)
 - Noise guard (00, 06, 12, or 18 dB)
 - Echo suppression (00, 06, 12, or 18 dB).

Termination State

The termination state or TLP (transmission level point) of a conference bridge circuit cannot be changed if the TO or FROM side of the cross-connection was previously designated as NTR (no transmit).

Conference Bridge Parameters

To make conference bridge parameter changes, the DMB bridge side of the conference must be specified as <npc No.2> in the command.

Disconnect Cross-Connected Circuit

Overview

DACS II provides commands to disconnect two-way, two-point cross-connect circuits or a range of cross-connected circuits when required. The BDIS command disconnects up to eight non-channelized tributaries from a non-channelized source network processing circuit (NPC). The NPCs can be in different units. This message also disconnects tributaries and can convert a broadcast conference to a two-way, two-point circuit. When the circuit is disconnected, the idle code (AIS) is transmitted.

Broadcast Disconnection

If disconnecting a broadcast cross-connection, consider the following:

- To disconnect up to eight tributaries at one time, add a listing of the NPCs in the form "<npc No.3>-nnn<npc No.4>-ttt..." where each NPC and the first channel of range is listed with ampersand. The optional listing goes in the field after the "<npc No.2>-jjj" in the command.
 - When using individual DISC commands for each tributary, the full tributary (one with return path) must be disconnected last.
 - The CONV option causes the broadcast side and final tributary to be connected as a 2-way circuit.
 - When using the range and CONV options, the one tributary not included in the range becomes part of the 2-way circuit.
-

Cross-Connect, Change, or Disconnect Clear-2 Mb/s Signals

Overview DACS II is synchronous equipment. A clear, unframed connection maintains some delay so timing is not transparent.

Two-Point, Two-Way or One-Way Circuit

Overview To establish a clear 2 Mb/s cross-connection, TG192(s) must be provisioned as type PA NPCs with $y = C$ (framed clear) or D (unframed clear). Cross-connections may be set up between framed and unframed clear-2 Mb/s signals. If a framed, clear circuit is connected to an unframed, clear circuit, the TS0 spare bits will be passed through the DACS II untouched.

Broadcast Circuit

Overview

DACS II provides commands for establishing broadcast circuits through the cross-connect network. Up to eight tributaries can be connected to the broadcast leg at one time by listing them in the command. Unless the looped (LPD) or no transmit on return (NTR) keywords are used, the DACS II will designate the first tributary that is entered as the full tributary which is the only one that returns transmission to the broadcast leg. This return path can be changed using the appropriate command described later. Two-way circuits can be changed to broadcast circuits by using the convert (CONV) option. With no options, the circuit is set up as a two-way broadcast with a full tributary.

Switch Return Leg of Broadcast Circuit

Overview

The return path (full tributary) of the broadcast circuit can be switched to one of its one way tributaries. Up to eight two-way broadcast circuits can have their full tributaries switched with this command by specifying the respective full tributary NPCs, all of which are clear-2 Mb/s NPCs currently part of different broadcast circuits.

Change Termination State of Cross-Connection

Overview

This section describes the command used to change the termination state of a cross-connected, clear-2 Mb/s NPC. This command can be used with a 2-way, 1-way, or broadcast cross-connection. This command can change the termination state of all legs of a broadcast circuit with the use of the TERM option. However, an option can be used to exclude one of the legs from being changed.

Disconnect Broadcast Circuits

Overview

The disconnection of broadcast circuits can be done for up to eight tributaries. The NPCs can be in different units. Using the convert option (CONV), the broadcast circuit can also be converted to a two-point circuit by disconnecting all but the full tributary.

Broadcast Disconnection Rules

When disconnecting a broadcast connection, consider the following:

- When using individual DISC BDIS commands for each tributary, the full tributary (one with return path) must be disconnected last.
 - The CONV option causes the broadcast side and final tributary to be connected as a 2-way circuit.
 - When using the range and CONV options, the one tributary not included in the range becomes part of the TO side of a 2-way circuit.
-

Re-Direct Cross-Connections

Overview

This section provides the information required to redirect the following signals:

- DS0
 - E1
 - Network Element
 - Non-Network Element.
-

Re-Direct DS0 Signals

Overview

The DS0 "roll" capability allows cross-connected DS0 signals to be redirected onto other (unmapped) DS0 channels with minimal service interruption. This feature enables you to redirect one DS0 or a range of contiguous mapped DS0s within a DS1 signal.

**NOTE:**

The ROLL task will re-direct ALL cross-connections associated with the DS0 signal being rolled.

DS0 Roll Steps

The three steps involved in the roll process are:

- Bridge - Bridge the DS0 signals
- Roll - Redirect the DS0 signals
- Cut - Disconnect the bridged circuits.

Of the three steps, minimum service interrupts only occur during the *roll* step. The DS0 signal being redirected can be part of a circuit of any type.

Re-Direct DS0 Signals (Continued)

DS0 Cross-connection Types

The following types of cross-connections can be redirected:

- Two point (one-way, two-way)
- Broadcast
- DMB (BBL and BRD legs)
- Virtual.

Channels on facility terminating NPCs that connect to a DSP application can be rolled. Channels on DSP application cards cannot be rolled because the NPCs on the cards are not transmitting NPCs.

**NOTE:**

Circuits under test/testports cannot be re-directed.

Channel Range

The size of the range on the OLD and NEW NPC must match, but the starting channel numbers do not have to be identical. A range can not break up the channels in a BDCST or virtual circuit (that is, all the channels of a BDCST leg must be within the channel range of the ROLL command).

If the OLD NPC contains a 32-channel cross-connect with the AIS option, the ROLL command must have a 32-channel range.

Re-Direct E1 Signals

Overview

The E1 *roll* capability allows for redirection of all channels from an incoming facility from one E1 port to another. This feature enables you to redirect one DS0 or a range of contiguous mapped DS0s within a DS1 signal.

The following two types of E1 signals can be redirected:

- Channelized DS1
 - Clear DS1.
-

E1 Roll Steps

The three steps involved in the roll process are:

- Bridge - Bridge the E1 signals
- Roll - Redirect the E1 signals
- Cut - Disconnect the bridged circuits.

Of the three steps, minimum service interrupts only occur during the *roll* step. The DS0 signal being redirected can be part of a circuit of any type.

E1 Roll Cross-connection Types

Each channel within a channelized E1 can be of the following circuit types:

- Two-point (one-way or two-way)
- Virtual conference
- Broadcast circuit
- DMB leg
- Subrate channel.

A clear E1 can be of the following circuit types:

- Two-point (one-way or two-way)
- Broadcast circuit.

**NOTE:**

Circuits under test/testports cannot be re-directed.

Re-Direct E1 Signals (Continued)

Channels on DSP Cards

Channels on facility terminating NPCs that connect to a DSP application can be rolled. Channels on DSP application cards, of course, cannot be rolled because the NPCs on the cards are not facility terminating NPCs.

Network Element

Overview

A network element is a term used to specify the cross-connect system (such as the DACS II) in the network.

This feature allows the redirecting DS1 signals to a network element.

Non-Network Element

Overview

If a spare facility is not available to perform a coordinated roll with another network element, you can redirect an entire traffic carrying E1 signal from an NPC on one digroup card to an NPC on another digroup card using the DSX-1 patch panel. This capability allows replacement or upgrade of a service carrying digroup card with minimal service interruption.

Bridging Repeater

A bridging repeater is used in this process. A bridging repeater is a piece of external equipment that is attached to the DACS II to provide an alternate path for a signal without degrading the signal.

Timeslot 0 Cross-Connections

Overview

A Timeslot 0 cross-connection is used to request the connection of timeslot 0 (TS0) of one NPC to a timeslot other than TS0 on another NPC. A cross-connect mode must be chosen to prevent the TS0 Frame Alignment Signal from being transmitted in a non-TS0 timeslot.

The NPC containing the TS0 timeslot involved in the cross-connection must be of type PA, but not defined as a clear-2 Mbit/s port. The NPC containing the non-TS0 timeslot involved in the cross-connection can be of any 2 Mbit/s NPC type (for example, PA, PB, or PC), except a clear-2 Mbit/s port.

The cross-connection can be set up in one of two modes:

- Mode 1:** The frame word is converted to a Pseudo Frame Word (PFW) in both directions of the connection to eliminate the possibility of false framing.
 - Mode 2:** The frame word is not cross-connected at all. Instead, the content of the Non-Frame Word (NFW) is repeated in the frame word position.
-

Two-Way Cross-Connections

Overview

This feature establishes a two-way cross-connection between a TS0 timeslot and a non-TS0 timeslot. One of the channel numbers specified (<chan No.1> or <chan No.2>) must be channel 000 (TS0), while the other channel number must be a number other than 000 (non-TS0).

Frame Word and Non-Frame Word

Bit 2 of TS0 in a 2 Mbit/s signal is used to distinguish the frame word from the non-frame word. It must always be a '0' in the frame word and a '1' in the non-frame word. When defining the PFW, be sure it can be distinguished from the NFW.

**NOTE:**

If no mode is selected (PFW or NFW) in the command, the default shall be NFW (that is, the default mode of operation is Mode 2).

Broadcast Circuit

Overview

This feature allows the ability to establish a broadcast cross-connection between Time Slot 0 (TS0) and non-TS0 facilities. The FROM NPC containing the TS0 must be grown as a PA- or TH-type NPC. The TOX NPCs containing the non-TS0 tributaries must be grown as PA-, PB-, PC-, or TH-type NPCs.

This feature establishes a broadcast for a TS0 channel of a source (FROM) NPC to up to 8 non-TS0 tributary channels of the TO NPC. A conference may have any number of tributaries, depending on the frame configuration. Additional tributaries can be added to the broadcast by using subsequent commands.

Restrictions

Unlike normal broadcasts, there will be:

- No looped return or normal signal tributary return available
 - No A-law to μ -law conversion
 - No capability to specify the connection as a red circuit (RDC/RDLD) or a customer-controlled circuit (CUS)
 - No ability to specify trunk conditioning (default is TRSP)
 - No ability to specify insertion word (default is X'FF).
-

Change Timeslot 0 Monitoring

Overview

This feature changes the NPC provisioning to start or stop monitoring the national and international bits in TS0 (bits abcdefg) without removing the NPC from service. This provisioning may be specified for one NPC or a range of NPCs. If a bit is being monitored, a message is sent when that bit changes state.

TS0M Spare Bit Meanings

Timeslot 0 Monitor bits (abcdefgh) are:

- ab = spare international bits (Si)
- c = remote alarm indication
- defgh = spare national bits, S4 through S8 in NFW.

The following list indicates the possible values each bit (abcdefgh) can have:

- 0 = Do not monitor bit
 - 1 = Monitor bit.
-

Change Timeslot 0 Spare Bits

Overview

This feature changes the spare bits in the non-frame word of TS0. These bits may be forced to "0", "1", or pass-through states before they are transmitted. For PA type NPCs, these bits may be forced to the inverted state before transmission.

TS0 Spare Bit Meanings

Timeslot 0 bits (abcdefgh) are:

- ab = spare international bits (Si)
- c = remote alarm indication
- defgh = spare national bits, S4 through S8 in NFW.

The following list indicates the possible values each bit (abcdefgh) can have:

- 0 = Set bit to 0
 - 1 = Set bit to 1
 - P = Pass bit through unchanged
 - V = Pass bit through inverted (for PA-type NPCs only)
 - "-" = Do not change current setting.
-

Change Non-Frame Word Bits

Overview

This feature changes the TS0 bits that are not part of the Frame alignment Signal (bit 1 of the Frame Word and bits 1-8 of the Non-Frame word). These bits can be cross-connected transparently or be subject to modification.

NFW Spare Bit Meanings

The NFW bits (abcdefghi) are:

- a = Bit 1 of the Frame Word
- bc = Bits 2 and 3 of the NFW
- d = Remote alarm indication
- efghi = Bits 4 through 8 of the NFW.

The following list indicates the possible values each bit (abcdefghi) can have:

- 0 = Set bit to 0
 - 1 = Set bit to 1
 - P = Pass bit through unchanged
 - V = Pass bit through inverted (for PA-type NPCs only)
 - "-" = Do not change current setting.
-

Disconnect Two-way TS0 Circuit

Overview This feature disconnects a two-way, two-point TS0 cross-connect circuit.

Channel Numbers The channel numbers used in the broadcast connection are as follows:

- 000-023 for North American NPCs
- 000-030 for CEPT type NPCs grown as CAS
- 000-031 for CEPT type NPCs grown as NSA.

One of the channel numbers specified in the disconnection must be channel 000 (TS0), while the other channel number must be a number other than channel 000.

Disconnect Broadcast TS0 Circuit

Overview

This command disconnects up to eight tributary legs from the source of a broadcast TS0 cross-connection. The CONV (convert) keyword can be used to disconnect one-way tributaries from the broadcast circuit and convert the circuit to a two-way, two-point circuit.

Channel Numbers

The channel numbers used in the broadcast connection are as follows:

- 000-030 for CEPT type NPCs grown as CAS
 - 000-031 for CEPT type NPCs grown as NSA.
-

DSP Application Connections

Overview

This section provides information for the following:

- Cross-connect, change, or disconnect DSP application connections
 - DSP Platform application-to-application cross-connections.
-

Cross-Connect, Change, or Disconnect DSP Application Connections

Overview

For general tasks on provisioning DSP circuits, refer to the specific application manual. However, it is possible to remove DSP cross-connections only if the application is incapable of disconnecting a circuit or a range of circuits between:

- A DSP NPC and a facility terminating NPC
 - Two DSP NPCs.
-

Channel Numbers

The channels numbers available for disconnection are:

- 001-024 for DE-, DA-, TE-, and TA-type NPCs
 - 000-031 for PA-, PB-, PC-, and TH-type NPCs
 - 001-064 for SD-type NPCs (except channels with numbers divisible by 4).
-

DSP Platform Application-to-Application Cross-connections

Overview

Channels on Digital Signal Processing (DSP) Platform Applications may be cross-connected to/disconnected from each other through the DACS II cross-connect network. The commands for performing these functions are documented in the manual for each individual application. However, it is possible to query for the cross-connections established between applications through a DACS II utility command.

Pseudo Channel Number

Application-to-application cross-connections can only be established by entering complimentary commands on both applications that are to be cross-connected. A unique number, a so called pseudo channel, ties the two requests together. Cross-connections between two application cards are established by first using the NPC number of the second application card and the pseudo channel number in a cross-connect request to the first application card. Then a complimentary command is sent to the second application card referring to the NPC number of the first application card and the pseudo channel number. DACS II matches the requests from the two applications that have requested to be cross-connected by matching the pseudo channel numbers in both requests.

Application-to-Application Cross-connection Reports

The query output reports by pseudo channel number the actual application NPC numbers and associated channel numbers that are cross-connected to each other. If only one of the two required cross-connect requests has been received, then the second application channel number is shown as dashes. No actual cross-connect exists when the second channel number is not shown. For additional information, refer to command I.51201 in the *DACS II Command and Message Manual* for more detail.

Contents

■ Background	6-1
Introduction	6-1
Objectives	6-1
Related Information	6-1
Related Tasks	6-2
■ Frame Administrator Functions	6-4
Overview	6-4
Login and Password	6-4
Functions	6-4
Recover User DAX Password	6-6
Add/Delete User	6-6
User Priority Levels	6-6
Command Grouping and Screening Options	6-6
Reinstate a User That Has Forgotten the Password	6-9
Log Off Another User	6-9

(Continued on next page)

Contents

Change Input Command Priority	6-9
Restricted Maintenance Option	6-10
Change Message Language	6-10
Change NPC Addressing	6-10
Change Output Message Screening	6-11
Change User's Macro/Map Storage Space	6-11
Change Link Removal Permission Option	6-11
■ Log-On/Log-Off	6-12
Overview	6-12
Login Modes	6-12
Choosing a Password	6-12
Log Off the System	6-13
Change Password	6-13
■ Alternate Maps	6-14
Overview	6-14
Enhanced Alternate Map	6-14
Alternate Map Naming Rules	6-14
Creating Alternate Maps	6-15
Alternate Map Example	6-15
Create Alternate Map Using the Picture Option	6-15
Alternate Map Using Picture Option Example	6-15
Reference Map for Picture Option	6-16
Reference Map Example	6-16
Change New Map	6-16
Edit an Existing Alternate/Reference Map	6-17
Activate Alternate Map Package	6-17
Query User Map Information	6-18
Delete Alternate Map from System	6-18

(Continued on next page)

Contents

■ Macros	6-19
Overview	6-19
Universal Macros	6-19
Create/Edit Macro	6-19
Macro Naming Rules	6-20
Tips When Creating Macros	6-20
Macro Example 1	6-21
Macro Example 2	6-22
Execute Macro Package	6-23
Enter Command to Query User Macro Information	6-23
Delete Macro from System	6-23
■ MML Message Logging	6-24
Overview	6-24
Setting the Message Log Feature	6-24
Displaying Message Log Numbers	6-24
Retrieving Messages from the Message Log	6-24
Clearing the Message Log	6-24
■ Alarm Severity Setting	6-25
Overview	6-25
Setting the Alarm Severity	6-25
Changing Shelf Alarm Severity	6-26
Displaying Shelf Alarm Severity Setting	6-27
Changing Facility Alarm Severity	6-27
Displaying Facility Alarm Severity Setting	6-28
Displaying Alarm Severity Status	6-28
■ Intervention Level Setting	6-29
Overview	6-29
Setting the Intervention Level	6-29
Changing Intervention Levels	6-29
Displaying Intervention Level Values	6-30
Displaying Intervention Level Status	6-30

Background

Introduction

The Frame Administrator sets the database to recognize the user and to set limits on what functions and views the user can perform. System Administration can be performed by users directly or through links to the DACS II. A user is known to DACS II by a login and password. Links are known to DACS II by the physical port that is connected to the terminal. After a user is added, the user can log in on any designated in-service link.

Objectives

This chapter provides information to perform the following:

1. Perform Frame Administrative Functions
 2. Log-On/Log-Off the System
 3. Change Passwords
 4. Create/Edit Alternate Maps
 5. Create/Edit Macros.
-

Related Information

For related information, refer to the:

- *DACS II Command and Message Manual*
 - *DACS II Installation Manual.*
-

Background (Continued)

Related Tasks

For related tasks, refer to the following General Tasks in Volume II:

■ Add/Delete User	GT 6.1
■ Recover Password for User DAX	GT 6.2
■ Reinstate User with Forgotten Password	GT 6.3
■ Log Off Another User	GT 6.4
■ Change Input Command Priority and Restricted Maintenance Option	GT 6.5
■ Change Message Language	GT 6.6
■ Change NPC Addressing	GT 6.7
■ Change Output Message Screening	GT 6.8
■ Change Macro/Map Storage Space	GT 6.9
■ Change Link Removal Permission Option	GT 6.10
■ Log In to the System	GT 6.11
■ Log Off the System	GT 6.12
■ Change Password	GT 6.13
■ Create Alternate Map	GT 6.14
■ Create Alternate Map Using the Picture Option	GT 6.15
■ Edit an Existing Alternate/Reference Map	GT 6.16
■ Activate Alternate Map Package	GT 6.17
■ Query User Map Information	GT 6.18
■ Delete Alternate Map from System	GT 6.19
■ Create/Edit Macro	GT 6.20
■ Execute Macro Package	GT 6.21
■ Query User Macro Information	GT 6.22
■ Delete Macro from System	GT 6.23

(Continued on next page)

Background (Continued)

Related Tasks, Continued

■ Setting the Message Log Feature	GT 6.24
■ Displaying Message Log Numbers	GT 6.25
■ Retrieving Messages from the Message Log	GT 6.26
■ Clearing the Message Log	GT 6.27
■ Setting the Alarm Severity Feature	GT 6.28
■ Changing the Alarm Severity of a Shelf Alarm	GT 6.29
■ Displaying Shelf Alarm Severity Setting	GT 6.30
■ Changing Facility Alarm Severity	GT 6.31
■ Displaying Facility Alarm Severity	GT 6.32
■ Displaying Alarm Severity Status	GT 6.33
■ Setting the Intervention Level Feature	GT 6.34
■ Changing Intervention Levels	GT 6.35
■ Displaying Intervention Level Values	GT 6.36
■ Displaying Intervention Level Status	GT 6.37

Frame Administrator Functions

Overview

The Frame Administrator can establish and change various parameters in the frame. This ability is reserved only for operators logged in as the frame administrator and cannot be transferred to any other user. Machine responses (output messages) to commands that are unique to the frame administrator appear only at the terminal at which they were entered. The frame administrator also sets the system language of either PDS or MML.

Login and Password

DACS II only recognizes the person who logs in as User DAX as the frame administrator. DAX is the only user that does not have to be created because it is embedded in the system software. However, any operator on any link can become the frame administrator by logging in as DAX.

While it is not possible to change DAX as the frame administrator login, it is possible to change the password. The password associated with the login DAX is the only way to control access to frame administration features.

Functions

The following functions are controlled only by the Frame Administrator:

- Recover User DAX password
 - Add/Delete User
 - Reinstate a user who has forgotten their password
 - Log Off other users
 - Change input command priority and restricted maintenance option
 - Change message language
 - Change NPC addressing
 - Change output message screening
 - Change User's Macro/Map storage space
 - Change link removal permission option.
-

(Continued on next page)

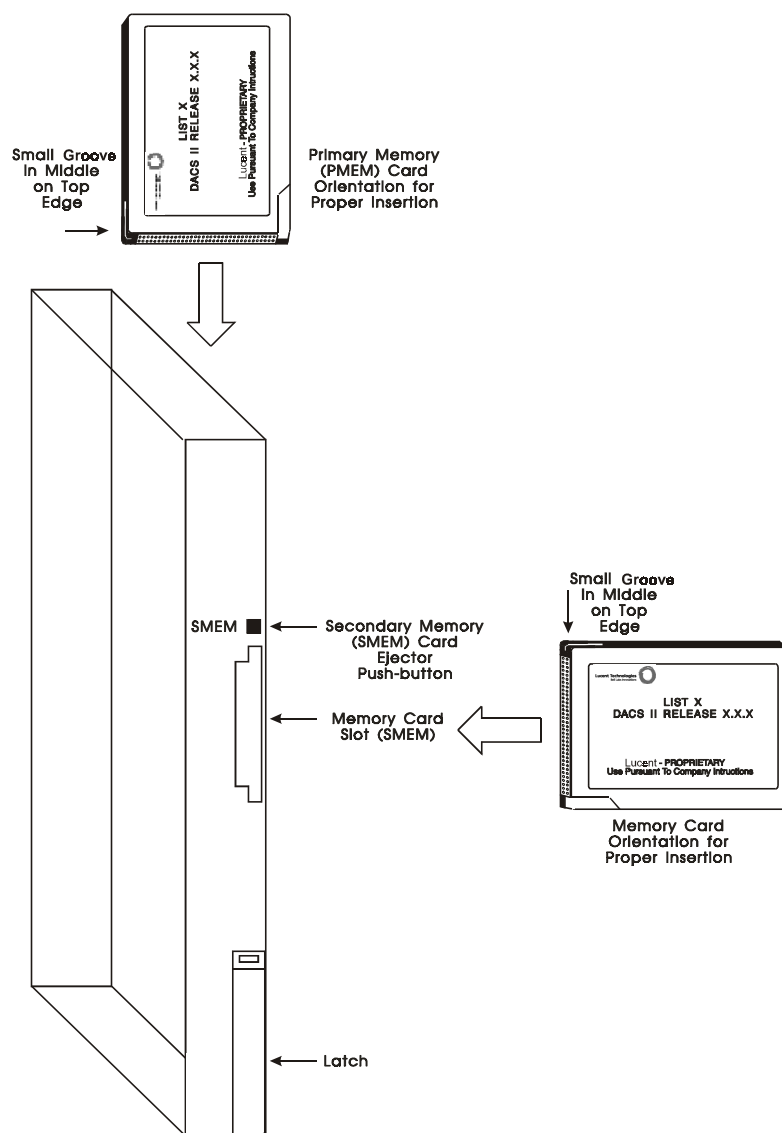


Figure 6-1. Memory Card Locations on CPU2

Frame Administrator Functions (Continued)

Recover User DAX Password

The DACS II "PASSWORD RECOVERY CARD (Version 1)" is used to recover the original (default) user DAX password. This card is a unique 1.8 Mb flash card that contains just enough information to move the default password to RAM memory. A specific general task is provided to assist in the use of the card for the recovery of the original (default) user DAX password (Table 6-1).

Add/Delete User

Only the frame administrator adds or deletes users from the database. The user id must be 2 to 8 alphabetic characters and the password must have 6 characters: at least 2 must be alphabetic and 1 must be numeric (except for temporary password given by the frame administrators new user, any special character can be used instead of a number. Command execution priority levels for the user are established during link provisioning.

User Priority Levels

Generally, priority level 1 commands are processed before level 2 commands, and level 2 commands, before level 3. However, if lower priority commands such as queries are received from a user while a higher priority command which requires more processing (for example, DGN SMEM) is underway, the easily completed commands will be executed first. Until set otherwise, all user commands are processed as level 3 by default, and all system administrator commands are processed as level 1. Prioritizing also allows excluding commands from the user.

Command Grouping and Screening Options

The frame administrator can set the parameters for a user or a link. These parameters will allow the user to use specific commands or view specific outputs. Screening also allows blocking groups of messages or including messages associated with other links. Table 6-1 lists the command groupings and Table 6-2 lists the screening options.

(Continued on next page)

Table 1-1. Command Groupings

a Circuit Provisioning	b Equip Provisioning	c Maintenance
ALW-SW-T1 CONN-BDCST-T0 CONN-CRS-T0 CONN-CRS-TS CONN-CRS1-T0 CRTE-CRS-TS DLT-CRS-TS DISC-BDCST-T0 DISC-CRS-T0 DISC-CRS-TS DISC-CRS1-T0 INH-SW-T1 SW-TOPROTN-T1 SW-TOWKG-T1	CRTE-CNFGRN-EQPT CRTE-EQPT CRTE-LGN DISC-EQPT DLT-LGN DLT-MACRO DLT-MAP DLT-PRMTR-EQPT ED-PRMTR-EQPT ED-PRMTR-LINK ED-PRMTR-NE SET-PRVG-TERM SET-PRVG-USER	DGN-EQPT ED-PRMTR-EQPT ENT-EQPT INIT-SYS RMV-CNFGRN-EQPT RMV-EQPT RST-CNFGRN-EQPT RST-EQPT SW-DX-EQPT - -
d Test Access	e Monitoring	f Common
ALW-LPBK-T1 CHG-TL-T0 CHG-TL-TS CONN-HUB-T0 CONN-TACC-T0 CONN-TACC-TS DISC-TACC-T0 DISC-TACC-TS INH-LPBK-T1 OPR-LPBK-T0 OPR-LPBK-T1 RLS-LPBK-T1 - -	CPY-MEM ED-DATE INIT-LOG INIT-REG OPR-ACO-ALL RST-PASSWD SCHED-PMREPT-ALL SET-ATTR-EQP STA-LOCL-RST RTRV - -	CHG-LGN CHG-RPATH-T0 ED-CNFGRN-EQPT ED-CONN-TS ED-CRTE-TS ED-OPT-T1 ED-PRMTR-EQPT ED-PRMTR-MACRO/MAP ED-PRMTR-NE ED-PRMTR-T0 ED-PRMTR-TS ENT-MACRO/MAP EXC-MACRO/MAP SET-PRVG-TERM/USER
g Restricted Maintenance (RMON Option)		
ED-PRMTR-INTV:::{ON OFF}; CPY-MEM:::PMEM,SMEM:PROG; DLT-FPKG; ED-PRMTR-ALMS:::{ON OFF}; ED-PRMTR-MSGLOG:::{ON OFF}; INIT-MSGLOG:::RSTNUM; RST-EQPT::MC::FRC; RST-EQPT::SMEM::CLR:FRC; UPGRD-SYS;		

(Continued on next page)

Table 1-2. Screening Options

Screening Option (n)	Definition
1	Only the responses to inputs entered on that particular link and by that user are output.
2	The responses to inputs entered on that particular link and by that user are output as well as all autonomous messages (default).
3	Responses to input messages on that particular link and by that user are output as well as responses from specified groups of action verbs from other links. The selection of message groups is made using the GR (a, b, c, d, e, f) field in the screening command.
4	Responses to input messages on that particular link and by that user, responses from specified groups of action verbs from other links (see above), and autonomous messages are output.
5	All responses to all input messages on all links are output as well as all autonomous messages.

Frame Administrator Functions (Continued)

Reinstate a User That Has Forgotten the Password

The frame administrator has the ability to reinstate a user that has forgotten the password by assigning a temporary password by entering the appropriate command. After the temporary password is set, the user can reassign his/her personal password.

Log Off Another User

To forcibly log off another user, you must be logged in as the frame administrator and logged in on a different link. When trying to log off other users, DACS II does security level checking first. If you are not logged in as frame administrator, you will get a "D7 cannot execute privileged command" denial message.

Change Input Command Priority

The frame administrator has the ability to change the input command priorities for the user or the link. Commands from a single active link go into a queue and are executed in the order issued. Commands from different links go into separate waiting queues, and the *input command priorities* from these links control the order of execution: priority level 1 commands first, then priority 2, then priority 3. Commands with the same priority from different links are executed alternately.

To prevent long waits for all lower priority commands, those that have been waiting in the queue for 2 minutes will be executed while higher priority commands that require more processing, like diagnose SMEM, are underway. Until set otherwise, the system processes all user commands as level 3 by default, and all system administrator commands as level 1. By setting the priority of the command groups on all LINKS to zero (excluded), the administrator can establish the use of the login mode because each user will have to log in to access the command set defined for that USER.

(Continued on next page)

Frame Administrator Functions (Continued)

Restricted Maintenance Option

The frame administrator can set the restricted maintenance option (RMON/RMOFF) which determines whether the user has permission to use commands in that category. When the RMON option is enabled, a link or a specified user can execute any of the restricted maintenance commands listed in Table 6-1.

Change Message Language

DACS II Snider and X.25 links will operate in either PDS or MML message languages. Unless previously changed, the message language for the links and users will default to what is defined in the software load. If you want to use a different message language during your login session, you can change the message language for your user id. For example, if the link defaults to PDS but you work in MML, the link will switch to MML when you log in.

Change NPC Addressing

DACS II Snider and X.25 links will operate in one of the following NPC addressing schemes:

- **Extended.** This scheme uses 3 digits to number the NPCs consecutively (for example, **041**). It can only be used on systems of three bays or less.
- **4-Digit Extended.** This scheme uses 4 digits to number the NPCs consecutively (for example, **1041**). The extra digit allows the system to accommodate additional bays.
- **Hierarchical.** This scheme uses a 5-digit number (**uvmnp**). It assigns a number to each NPC according to the unit number (**uv**), module or group number (**m**), and the NPC number within the module (**np**).

Unless previously changed, NPC addressing for the links and users will default to what is defined in the software load. If you want to use a different addressing scheme during your login session, you can change the scheme for your user id. For example, if the link defaults to *extended* but you work in *hierarchical*, the link will switch to hierarchical when you log in. Ensure that the link addressing scheme is allowable as defined in the configuration file.

(Continued on next page)

Frame Administrator Functions (Continued)

Change Output Message Screening

Output message screening (Table 6-2) allows you to block groups of messages or include messages associated with other links. Any user can change his/her own message screening. Unless previously changed, output message screening for the links and users will default to what is defined in the software load. If you want to use a different screening option during your login session, you can change the option for your user id.

For example, if the link defaults to option 2 but your user id is set to option 5, the link will switch to option 5 when you log in.

Change User's Macro/Map Storage Space

DACS II provides commands to check and change the user's current macro/map storage space. The space for macros and alternate maps applies to all users; that is, if set at 20 percent, then no user can use over 20 percent of space.

Change Link Removal Permission Option

The frame administrator can give both links and a specific user id permission to remove links from service. The administrator can also inhibit both links and specific users from removing links from service. Unless previously changed, link removal permission for both links and users will default to allow link removal. If the administrator wants to either allow or inhibit a specific user's link removal permission during their login session, the permission can be changed for that user id.

For example, if the link defaults to allow link removal permission but the administrator does not want a specific user to have removal permission, the link will be inhibited when the user logs in.

Log-On/Log-Off

Overview

This section provides the commands and explanation to enable a user to log on the frame and to log off the frame after a work session.

Login Modes

Each DACS II link can operate in two modes:

- **Login Security Mode.** This mode requires you to log in to the system with a *user id* and *passwd* before entering a specified set of commands. The frame administrator controls the specific commands that you can enter before you initially log on the system. He/she also sets the priority the system uses to execute your commands (or command groups). The administrator also sets other login characteristics such as output message screening, link language, and NPC numbering scheme. You will also be given a temporary password to use on your initial login. You should change your temporary password to a personal password (using the criteria below) during the initial login session.
 - **Nonlogin Mode.** This mode allows anyone to use a specified command set assigned to the link *without logging in*. The link is automatically in this mode when not in the *Login Security Mode*. The frame administrator specifies the command set that can be used when operating in this mode.
-

Choosing a Password

If this is your initial login, review the following information about selecting a personal password that you can easily remember:

- A password must contain six to eight characters, at least two of which must be letters and one a number. Think of one that is meaningful to you and can be remembered without writing it down.
 - To be effective, passwords should not be shared.
 - You can change your passwords when desired. If you forget your password, the frame administrator can enable you to log on by assigning you another temporary password.
-

(Continued on next page)

Log-On/Log-Off (Continued)

Log Off the System

When logging off the system, the user ID and link number must be specified. Only the frame administrator can log-off another user.

Change Password

When changing your password over a synchronous link, you can enter both the old and new passwords in the command; whereas, when changing your password over an asynchronous link, you must initiate a change routine and enter the old and new passwords when prompted.

Alternate Maps

Overview

The alternate map feature provides a way to quickly change customer cross-connections on the DACS II. The alternate map itself is a software file containing 2-way, 2-point cross-connections. When you activate an alternate map, the system simultaneously implements all the cross-connections defined by the map. This saves typing and speeds up the connections for quicker service switching.

Enhanced Alternate Map

The enhanced alternate map feature allows the establishing of alternate maps for clear NPCs for DS1/E1 facilities. Additionally, the mixing of channelized and clear NPCs is allowed. This feature applies to TH, PA, TE, TA, DE, and DA type NPCs.

Alternate Map Naming Rules

Users must assign names to alternate maps. These names are associated with the user so that the map can only be accessed by the user who created it. A user can edit, activate delete or query only their own alternate map. The rules for naming alternate maps are as follows:

- First character must be alphabetic
- Name can be alpha or alphanumeric
- All alpha characters must be capitalized
- Number of characters must not exceed seven
- Name must not be DACS Keywords.

**NOTE:**

Only users with USER IDs who access the system via a login can use the alternate map feature.

(Continued on next page)

Alternate Maps (Continued)

Creating Alternate Maps

The user will enter the command to create an alternate map and follow the rules for naming. DACS II cannot deny the end of a create session. Even if the map contains an error, a conditional completion message is generated. If there are no errors, the CONDitional code is 00. A conditional completion message other than 00 indicates that the map has a problem such as two connections to the same location in the map. The output message details the problem. The user must clear the problem, or the map is considered non-valid and will not work. Existing cross-connections that are not involved in the alternate map are not affected when the map is activated, but all involved terminations are overwritten by the new map.

Alternate Map Example

The following is an example of an alternate map:

```
ENT-MAP:[xy]::[ww]:NEWMAP;  
CONN-CRS-T0::01-1-01-01,01-1-02-01;  
CONN-CRS-T0::01-1-03-01,01-1-04-01;  
CONN-CRS-T0::01-1-05-01&&-24,01-1-06-01&&-24;  
END
```

Figure 6-2. Example of Alternate Map

Create Alternate Map Using the Picture Option

The PIC option of the command allows you to make an alternate map by "taking a picture" of a defined group or set of the cross-connections that are currently active on the frame without entering each individual cross-connect command into the map. The PIC option is now supported for clear, two-way cross-connections.

Once an alternate map is created, it does not matter whether the creation was manual or via the picture feature.

Alternate Map Using Picture Option Example

The following is an example of an alternate map using the PIC option:

```
ED-MAP::::DUBLIN1;  
ED-ADD-MAP::NPC 001&&-005;  
ED-ADD-MAP::NPC 007&-010;  
END;  
ED-PRMTR-MAP::::DUBLIN2,DUBLIN1;  
RTRV-MAP-COM::::DUBLIN2;  
EXC-MAP::::DUBLIN2;
```

Figure 6-3. Example of an Alternate Map Using the Picture Option

Alternate Maps (Continued)

Reference Map for Picture Option

To use the picture option, you must first create a *reference map*. This reference map identifies which of the active cross-connections on the frame are to be reproduced (pictured). These cross-connections are defined by using the provided command to list the NPCs in the reference map. After creating your reference map, create the new alternate map using the command with the PIC option.

**NOTE:**

Only users with USER IDs who access the system via a login can use the alternate map feature.

Reference Map Example

The following is an example of a reference map identifying the active cross-connections:

```
ENT-MAP:[xy]::[ww]:NEWMAP;  
ED-ADD-MAP::NPC-01-1-07&&&-01-1-12;  
END
```

Figure 6-4. Example of a Reference Map

Change New Map

Once the new map is created, it can be changed as described in the following section. The picture feature only picks up cross-connections defined by the reference map that are currently on the frame. It does not simply copy what is in the reference map. If you want two copies (one to keep unchanged and one to modify), you will have to use the picture option twice to create two different new maps.

(Continued on next page)

Alternate Maps (Continued)

Edit an Existing Alternate/Reference Map

When editing an existing map, you will not see the previous entries, the user must view the contents of the map by name. The user may perform the following changes/additions to the map:

- Add new cross-connections
- Remove cross-connections
- Add NPCs to a reference map
- Remove NPCs from a reference map.

**NOTE:**

Only users with USER IDs who access the system via a login can use the alternate map feature. User DAX can edit the maps owned by other users.

Activate Alternate Map Package

Description

The alternate map is a set of 2-way, 2-point cross-connections that are quickly implemented when the map is activated. Activating the alternate map will not affect the existing cross-connections that are not involved in the alternate map. However, activating the new map will overwrite the cross-connection of all involved terminations.

CLR Option

To make sure that only the cross-connections listed in the alternate map are established on the involved NPCs, you can activate the map with the CLR option. This option, specified in the Activate Alternate Map command, causes the system to disconnect existing connections on the involved NPCs before making the cross-connections listed in the map.

(Continued on next page)

Alternate Maps (Continued)

Activate Alternate Map Package, Continued

CLR Option Cautions

Care should be taken with the CLR option because it will cause all cross-connections on NPCs involved in the alternate map to be disconnected. Connections on NPCs not involved in the alternate map will not be affected (the whole frame will not be cleared). If the system returns a nonzero COND code in the completion message, a connection other than a 2-way type cross-connection exists on the involved NPCs, and this connection was not cleared. The named NPC is the first one that contains such connections.



CAUTION:

Performing this general task incorrectly can interrupt service. Perform each step in the order given. Also, read all supplementary information (such as Notes) before executing commands.

Query User Map Information

The user may retrieve the following alternate map information from the system:

- Filename List and Execution Attributes
- Contents of the Map
- Listing of NPCs in the Map
- Allotted Map File Storage Space.

Delete Alternate Map from System

If you have already activated the alternate map, the delete command will not disconnect the component connection; it only removes the map name and definition. Only the system administrator can delete maps created by other users. Users can only delete their packages; the command will not affect a map with the same name that belongs to another user.

Macros

Overview

A *macro* is a package of component commands that are executed in sequence when the macro command is executed. They save typing time because you can execute the same macro time and again. Also, the frame administrator can create public macros for the benefit of all users.

Universal Macros

You can also create *universal* macros. With the use of universal macros, the same macro can be used to perform similar jobs on different equipment without changing the macro itself. Universal macros use variables in the component commands within the macro. You then specify the values of the variables within the command that executes the macro. The system executes each component command within the macro according to its priority compared to commands from other users.

Create/Edit Macro

You must use login access to the frame to create or edit a macro because the ownership of the macro is established by user ID. Before editing the macro, wait for the message giving the number of lines; with large macros (around 8,000 lines), entries can be lost while the DACS II is verifying the number of existing lines.

The following types of editing are used to create or modify your macro package.

- Append - "append" new lines *after* the line specified. When beginning a new macro, append after line 0.
- Delete - delete the line specified
- Move - move a line (or group of lines) to a place after a specified line
- List - lists the lines or range of lines or lines specified.

**NOTE:**

After deleting a line, the remaining line numbers after the deleted line will change. For example, if you have 5 lines and delete line 4, line 5 will become line 4. Use the LIST command to see the contents of macro.

Macros (Continued)

Macro Naming Rules

The following rules apply for naming a macro:

- Names can have up to seven alphanumeric characters, the first of which must be a letter
 - All letters must be capitalized
 - For *public-use* macros, the first letter must be an upper-case "P" (Only the frame administrator—user DAX—can create a public macro)
-

Tips When Creating Macros

Consider the following when creating macros:

- SET PRVG commands can be included in a macro to shut off (MCOFF) macro component COMPLD messages.
 - A STOP keyword can be included in component RMV-EQPT/RST-EQPT, CONN, and DISC commands to stop the macro if a component command fails.
-

Macros (Continued)

Macro Example 1

This example shows how to create a macro. Figure 6-5 shows the component commands in the macro that do the following:

- **Line 1.** This command disconnects channel 01 of NPC 001 from channel 01 of NPC 003. If the command fails, the macro stops.
- **Line 2.** This command cross-connects channel 01 of NPC 001 to channel 01 of NPC 005.
- **Line 3.** This command cross-connects channel 02 of NPC 001 to channel 02 of NPC 005.
- **Line 4.** This command cross-connects channel 03 of NPC 001 to channel 03 of NPC 005.
- **Line 5.** This line outputs all connections on NPC 001.

```
DISC-CRS-T0::001-01,003-01:::STOP;OK  
CONN-CRS-T0::001-01,005-01;OK  
CONN-CRS-T0::001-02,005-02;OK  
CONN-CRS-T0::001-03,005-03;OK  
RTRV-CRS-T1::001::MAP;OK
```

Figure 6-5. Example of Macro (Extended NPC Numbering)

Macros (Continued)

Macro Example 2

Figure 6-6 shows a universal macro that, when executed with the variable values, does the same thing as the macro in Example 1. There may be as many as ten variables listed in one macro. The variables are entered as #01 through #10 in the message. Variables may be used for any parameter except action verbs and punctuation, and includes user ids, NPCs, channel numbers, trunk conditioning codes, etc. Variables are unique to a macro, that is, variable #01 may be used more than once in a macro to repeat the same value several times. Variable #01 may be used in another macro with an entirely different meaning.

**NOTE:**

To represent hierarchical NPC numbers, a variable must be used for each part of the number. For example, if variables #01, #02, and #03 were used to represent NPC , 01-1-01, the last line entered in the example would be:

RTRV-CRS-T1::#01-#02-#03::MAP;

The following command (with extended NPC number values 001 and 005) would be entered to execute the macro in the example:

EXC-MACRO:::QWKCON:(001&005);

DISC-CRS-T0::#01-#01-#01-#01,#01-#01-#02-#01:::STOP;

CONN-CRS-T0::#01-01,#02-01;OK

CONN-CRS-T0::#01-02,#02-02;OK

CONN-CRS-T0::#01-03,#02-03;OK

RTRV-CRS-T1::#01::MAP;OK

Figure 6-6. Example of Macro (Extended NPC Numbering)

Macros (Continued)

Execute Macro Package

If the frame administrator has established the priority of command execution, the component commands of the macro will determine when a macro is executed relative to other macros. The overall success of the macro execution is indicated by a final COMPLD or DENY message. Macros can include a STOP keyword on the component line to stop the macro if critical components fail. Macros can also be aborted by entering the STOP command after the macro is running.

Enter Command to Query User Macro Information

The following macro information can be retrieved from the system:

- Filename List
 - Contents of the Macro
 - Allotted Map/Macro File Storage Space.
-

Delete Macro from System

Only the system administrator can delete macros created by other users. Users can only delete their packages; the command will not affect a macro with the same name that belongs to another user.

MML Message Logging

Overview

The MML Message Logging feature allows the logging and storing of DACS II output messages for retrieval at a later time by an element management system (the I-2000 Controller for DACS II or the DACS II Network Director (DND)). Each message is stored with a sequence number which is reported with each message.

Messages from the Message Log can only be retrieved and displayed using the MML language.

Setting the Message Log Feature

This operation is performed to turn the Message Logging feature ON or OFF.

This operation can only be performed by DACS II frame administrators and users with restricted frame access.

Displaying Message Log Numbers

This operation is performed to display the range of the Message Log numbers and the total number of messages existing in the Message Log. The information contained in this Message Log is constantly changing.

This operation can only be performed by DACS II frame administrators and users with restricted frame access.

Retrieving Messages from the Message Log

This operation is performed to retrieve a message in the Message Log. The user can specify either one Message Log number or a range of Message Log numbers.

Clearing the Message Log

This operation is performed to clear the output Message Log. The Message Log can also be cleared if the DACS II frame is initialized (via a cold or warm boot).

The Message Log will not be cleared if the frame is placed in Maintenance Condition (MCOND).

This operation can only be performed by DACS II frame administrators and users with restricted frame access.

Alarm Severity Setting

Overview

The Alarm Severity feature allows users to change the severity level of PA-, PB-, and PC-type NPC facility and associated shelf alarms. This allows DACS II users the flexibility of customizing their alarm severities.

Setting the Alarm Severity

This operation is performed to turn the Alarm Severity feature ON or OFF.

This operation can only be performed by DACS II frame administrators and users with restricted frame access.

Alarm Severity Setting (Continued)

Changing Shelf Alarm Severity

This operation is performed to change the Alarm Severity of any single shelf alarm or all shelf alarms.

The shelf alarms are listed below:

Shelf Alarm	Explanation
PFF	Power Failure
SYNC	Failure of one SYNC
CCN	CCN autonomously removed
LTF	NPC Hardware Failure
TREF	Failure of one SSP
STREF	Failure of last SSP
TLI	TLI removed from service
CRO	Failure of Clock Reference Oscillator
SMEM	Failure of SMEM memory card
MCE	MC removed from service
CCNI	CCI/CCNI autonomously removed
TSI	TSI/ETSI autonomously removed
FC	FC autonomously removed
FTMI	FTMI autonomously removed
DSPI	DSPI autonomously removed
FTUC	FTU UC autonomously removed
CCB	CCB autonomously removed
DSPUC	DSP UC autonomously removed
SDT	System date and time not set
DSPC	DSP NPC autonomously removed
ALL	All Shelf Alarms

Alarm Severity Setting (Continued)

Displaying Shelf Alarm Severity Setting

This operation is performed to display the current alarm severity setting of a particular shelf alarm or of all facility alarms of the same NPC type.

Changing Facility Alarm Severity

This operation is performed to change the Alarm Severity of any single facility alarm or of all facility alarms.

The NPC types and their associated facility alarms are listed below:

Facility Alarm	Explanation	Valid NPC types
RPSFI	Remote Power Supply Failure Indicator	PA, PB, and PC
LOS	Loss of Signal	PA
LOF	Loss of Frame	PA
AIS	Alarm Indication Signal	PA, PB, and PC
EER	Excessive Error Rate	PA, PB, and PC
BER	Bit Error Rate	PA, PB, and PC
LCMA	Loss of CRC-4 Multiframe Alignment	PA
FLC	Far End Loss of CRC-4 Multiframe Alignment	PA
RAI	Remote Alarm Indication	PA, PB, and PC
RBER	Remote Bit Error Rate	PA, PB, and PC
SFI	Sync Failure Indication	PA, PB, and PC
POF	Pseudo Frame Word Out of Frame	PA
TAI	TS16 All Ones Alarm	PA, PB, and PC
RAIS	Remote AIS	PA, PB, and PC
LMA	Loss of Multiframe	PA, PB, and PC
RABS	Remote Alarm bit 6, TS16	PA, PB, and PC
PBF	Primary Block Failure	PA, PB, and PC
ALL	ALL above identified facility alarms	PA PB and PC (valid alarms only)

Alarm Severity Setting (Continued)

Displaying Facility Alarm Severity Setting	This operation is performed to display the current alarm severity setting of a particular facility alarm or of all facility alarms of the same NPC type.

Displaying Alarm Severity Status	This operation is performed to retrieve the status of the Alarm Severity feature - whether the feature is turned ON or OFF.

Intervention Level Setting

Overview

The Intervention Level Setting feature allows DACS II users to escalate or de-escalate the alarms for individual PA-, PB-, and PC-type NPCs, Timing Link Interface (TLI), or Synchronizer (sync), or cross-connections to suit their current needs.

**NOTE:**

The following operations can only be performed if the Intervention Level feature has been purchased as part of the DACS II software generic.

Setting the Intervention Level

This operation is performed to turn the Intervention Level feature ON or OFF.

This command can only be performed by DACS II frame administrators and users with restricted frame access.

Changing Intervention Levels

This operation is performed to change the Intervention Level of an NPC, TLI, or sync resource.

For NPCs, the Intervention Level setting will affect the Alarm Severity level reported for all NPC alarms including the facility and performance monitoring alarms. If the DACS II experiences more than 5 NPC alarms while the feature is ON, then the escalation mechanism associated with the NPCs will not occur.

For the sync and TLI resources, all alarms associated with these resources will be affected by Intervention Level, and the escalation mechanism associated with these resources will occur.

This operation can be executed while the feature is turned OFF.

Intervention Level Setting (Continued)

Displaying Intervention Level Values

This operation is performed to display the Intervention Levels of one of the following:

- An NPC
- A range of NPCs
- All NPCs
- A TLI
- Both CCNs
- Both Sync resources
- All resources.

Displaying Intervention Level Status

This operation is performed to retrieve the status of the Intervention Level feature - whether the feature is turned ON or OFF.

Contents

■ Background	7-1
Introduction	7-1
Objectives	7-1
Related Tasks	7-2
■ Software Installation	7-3
Software Installation for a New Release	7-3
Software Installation for DSP Applications	7-3
■ Database Archiving	7-4
Overview	7-4
Archiving Benefit	7-4
Archive Card	7-4
Mirroring Process	7-4
■ Memory Card Failure Recovery	7-6
Overview	7-6
Diagnostic Tests	7-6
Test Results and Action Items	7-7

(Continued on next page)

Contents

■ Repair and Replacement	7-8
Remove and Install Circuit Packs	7-8
Cautions	7-8
■ Upgrade/Replacing Circuit Packs	7-9
Overview	7-9
Upgrading from a CI to a ICI	7-9
Upgrading from an EMTC to an EMTC2	7-9

Background

Introduction

This chapter provides information required to upgrade software, database archiving, memory card recovery and to upgrade/replace circuit packs.

Objectives

This chapter provides information to perform the following:

1. Software Installation
 2. Database Archiving
 3. Recover from Memory Card Failure
 4. Repair and Replace Circuit Packs.
-

Background (Continued)

Related Tasks

For related tasks, refer to the following General Tasks in Volume II:

■ Archiving the Database	GT 7.1
■ Recovering after Memory Card Failure	GT 7.2
■ Removing a Single-Latch Circuit Pack	GT 7.3
■ Installing a Single-Latch Circuit Pack	GT 7.4
■ Removing a Double-Latch Circuit Pack	GT 7.5
■ Installing a Double-Latch Circuit Pack	GT 7.6
■ Upgrading to an ICI	GT 7.7
■ Upgrading From an EMTC to a EMTC2	GT 7.8
-

Software Installation

Software Installation for a New Release

To install a new software release, refer to the *DACS II Release 9.0 Software Release Description*.

Software Installation for DSP Applications

The DACS II INSTALL command performs installation services for application releases. These services are:

- Listing application releases currently installed
- Installation of a new application release
- Upgrading an older release of an application with a newer release of that application
- Removal of an application release.

For additional information on performing each of these services, refer to the specific DSP Platform application manual.

Database Archiving

Overview The need (and how often) to archive the DACS II database is determined by your local requirements (usually tied to the frequency of changes to the database). The archived copies (flash cards) should be stored in a safe place also determined by your local requirements. The copy should be labeled indicating the DACS II frame it backs up and the date and time the archive copy was retrieved from the frame.

Archiving Benefit The operation of archiving the database and executables allows you to recover from a failed PMEM and/or SMEM hardware, that may leave the database on either (or both) the SMEM and PMEM flash cards suspect.

Archive Card The archive card resulting from these operations is in effect the current SMEM card located in the DACS II frame. These procedures will remove and declare the SMEM flash card as the latest archive card. The remainder of the procedure involves inserting another flash card into the SMEM slot and mirroring PMEM to the new SMEM card.

Mirroring Process If inserting a new or blank flash card into the SMEM slot, the mirroring process (PMEM to SMEM) can take up to 10 or more minutes to complete (depending upon the size and configuration of your frame). The mirroring process is accomplished by restoring the SMEM card manually while the MC is in-service. During this process, the MC is available to process a subset of input commands if the BKGRND keyword was used as part of the command. **RST-EQPT : : SMEM** command.



NOTE:

The procedure assumes the MC, PMEM, and SMEM are functioning properly and the database in RAM and on PMEM are correct.

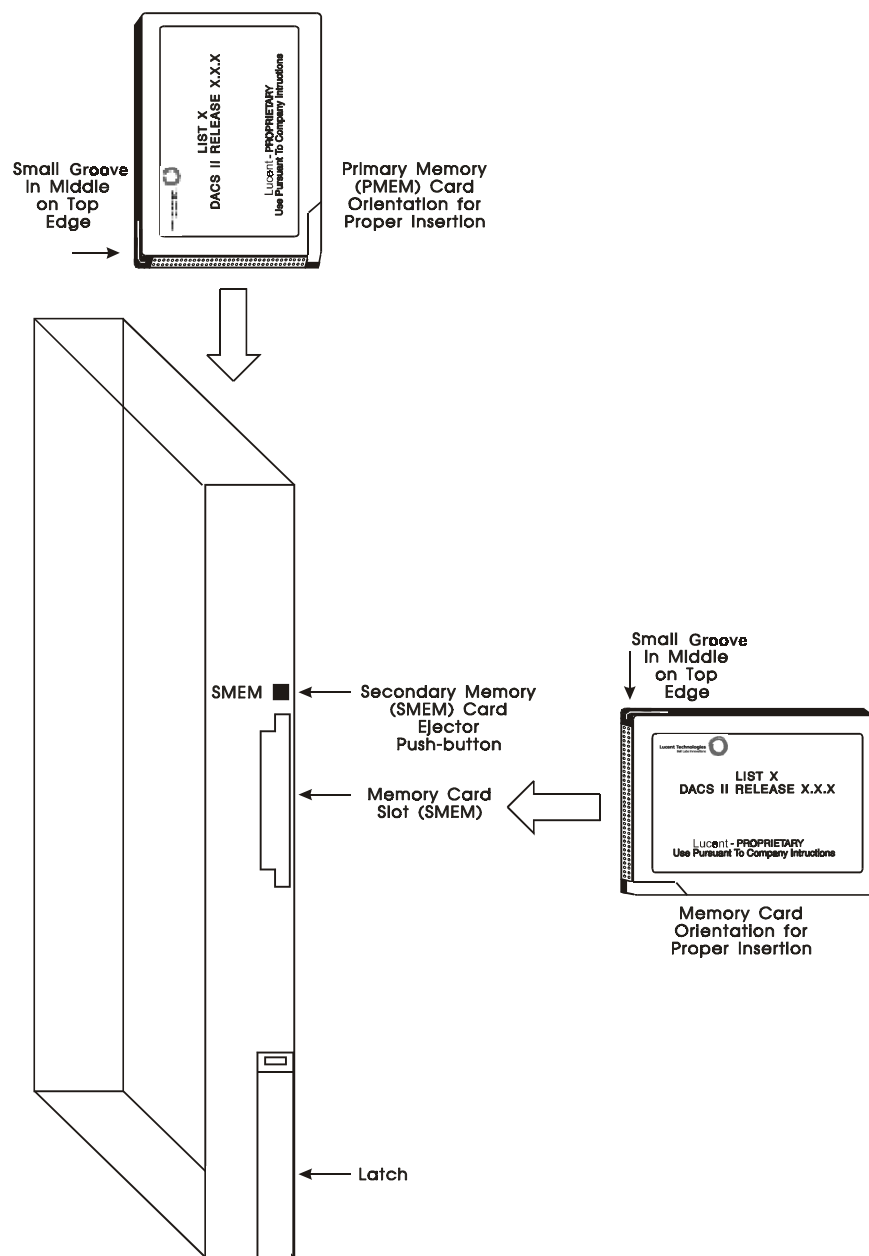


Figure 7-1. Memory Card Locations on CPU2

Memory Card Failure Recovery

Overview

The PMEM and SMEM cards (Figure 7-1) provide dual, non-volatile storage and protect the memory of the DACS II database in the event of a failure. The Memory cards are automatically updated after every ten minutes if the state of the frame has changed. When a second memory card is restored to service, the MC automatically attempts to duplicate the contents of the other card. Each card is then a “mirrored image” of the other.

Diagnostic Tests

DACS II provides the following diagnostic tests for both the PMEM and SMEM cards for failure recovery:

- Card diagnostic test, craft code X'0004
 - Validate data base test, craft code X'0010
 - Validate the boot block, craft code X'0020
 - Validate executable header, craft code X'0040
 - Validate executables, craft code X'0080.
-

Memory Card Failure Recovery (Continued)

Test Results and Action Items

Table 7-1 lists several possible cases which can result from performing the diagnostic tests along with actions items to resolve the problems:

Table 7-1. Test Results and Action Items

PMEM	SMEM	Action Item
Fail Diagnostics	Pass All	Replace the PMEM card with the card currently in the SMEM slot (PMEM card is suspected to be defective)
Pass diagnostic but fails any other tests	Pass All	Replace the PMEM card with the card currently in the SMEM slot (PMEM card is suspected to contain corrupted executables or database)
Pass diagnostic but fails any other tests	Pass diagnostic but fails any other tests	Replace the PMEM card with the most recently archived memory card (PMEM and SMEM cards are suspected to contain corrupted executables or database)
Pass All	Fail Diagnostics	Replace the SMEM card with a spare memory card or with an older archive card that may be recycled. (SMEM card is suspected to be defective.)
Pass All	Pass diagnostic but fails any other tests	The SMEM card is good but has bad information on it. Restore the SMEM card. (The PMEM contents are copied onto the SMEM card when SMEM is restored)

Repair and Replacement

Remove and Install Circuit Packs

The DACS II contains 4-, 8-, 12-, and 16-inch circuit packs. These circuit packs have the following design:

- **Single Latch:** These are the 4- and 8-inch circuit packs. Most of the circuit packs contained in the system are of this design.
- **Double Latch:** These are the 12-inch DS3U and 16-inch ECCN circuit packs. Each circuit pack has two latches; one on the top and one on the bottom.

**NOTE:**

Main controller packs should only be physically removed/replaced when the frame is either Out Of Service (OOS) or in Maintenance Condition (MCOND).

Cautions

You can easily damage circuit packs and other hardware by improperly removing and installing them in the frame.

**CAUTION:**

The following cautions apply:

1. Before touching any part of the equipment frame including the PMEM or SMEM cards, any circuit pack, reset switches, ACO or LED TEST buttons, ALWAYS ground yourself to the frame with a WRIST STRAP (tested per your company's ESD policy) provided with the equipment.
 2. Never install or remove more than one circuit pack at a time. This could cause irreparable damage to each circuit pack.
 3. Neither the circuit card nor the SMEM memory card should be physically removed from the frame or inserted into the frame while a frame reset or reboot is in progress.
-

Upgrade/Replacing Circuit Packs

Overview

This section provides information required to upgrade or replace circuit packs for the following:

- Upgrading From a CI to an ICI
- Upgrading From an EMTC to an EMTC2.

**NOTE:**

Reset may take up to 30 minutes.

Upgrading from a CI to a ICI

The upgrade involves changing from a Communication Interface (CI) circuit pack to an Intelligent Communications Interface (ICI) circuit pack. This requires a software upgrade to Release 9.0. Refer to the DACS II Software Release Description for the procedure.

The procedure assumes that ICI links 1 through 7 are all provisioned. For a CI circuit pack, links 1 through 6 can only be used with SNIDER protocol. For an ICI circuit pack, links 1 through 4 can be used for SNIDER protocol. Links 5 and 6 can be used for X.25 protocol. Link 7 is used for TELNET connectivity to the DACS II system.

Upgrading from an EMTC to an EMTC2

The upgrade involves changing from the UM56 Enhanced Maintenance (EMTC) circuit pack to the UM75 Enhanced Maintenance (EMTC2) circuit pack. The EMTC2 circuit pack has additional maintenance functionality.

Contents

■ Background	8-1
Introduction	8-1
Objectives	8-1
Related Tasks	8-2
■ Near-End 2.048-Mb/s Error Count	8-3
Overview	8-3
Code Violation Count	8-3
Framing Error Count	8-3
CRC Block Error Count	8-3
Unavailable Time Count	8-3
■ Near-End 2.048-Mb/s Errored Intervals	8-4
Overview	8-4
Controlled Slip Seconds	8-4
Out-of-Frame Second	8-4
Errored Seconds	8-4
Severely Errored Seconds	8-5

(Continued on next page)

Contents

Unavailable Seconds	8-5
TS16 Performance	8-5
■ Near-End 2.048-Mb/s Error Ratio Parameters	8-6
Overview	8-6
Errored Seconds Ratio	8-6
Severely Errored Seconds Ratio	8-6
Background Block Error Ratio	8-6
■ Far-End Performance Parameters for a 2.048-Mb/s Facility	8-7
Overview	8-7
Far-End Error Count	8-7
Far-End Errored Seconds	8-7
Far-End Severely Errored Seconds	8-7
Far-End Unavailable Seconds	8-7
■ Performance Parameter Thresholds	8-8
Overview	8-8
Performance Parameter Thresholds	8-8
rr Parameter	8-9
■ Performance Monitoring Report	8-11
Overview	8-11
■ Performance Monitoring Data	8-12
Overview	8-12
■ Performance Monitoring Counts	8-13
Overview	8-13
Monitored Parameter	8-13
■ Check and Operate 2.048-Mb/s Line Loopback	8-14
Overview	8-14
■ E1 NPC Default Threshold Crossing Alarm Mode	8-15
Overview	8-15
Provisioning Affect	8-15
Threshold Options	8-15

(Continued on next page)

Contents

■ Facility Loopback for TE or TH Type NPC within a Hybrid DS3	8-16
Overview	8-16
Activate/Deactivate a Facility Loopback	8-16

Background

Introduction

The following sections contain performance parameters applicable to 2.048-Mb/s facilities.

Objectives

This chapter provides information to perform the following:

1. Near and Far End Errored Count and Intervals Performance Parameters
 2. Change Performance Parameter Thresholds
 3. Schedule, Check, and Clear Performance Monitoring Data
 4. Setting Hybrid DS3 Daily Facility Alarm Reporting Time
 5. Check and Operate Line Loopback
 6. Change E1 NPC Default Threshold Crossing Alarm Mode.
-

Background (Continued)

Related Tasks

For related tasks, refer to the following General Tasks in Volume II:

■ Change Performance Parameter Thresholds	GT 8.1
■ Scheduling a Performance Monitoring Report	GT 8.2
■ Checking Performance Monitoring Data	GT 8.3
■ Clearing Performance Monitoring Data	GT 8.4
■ Check and Operate 2.048-Mb/s Line Loopback	GT 8.5
■ Change E1 NPC Default Threshold Crossing Alarm Mode	GT 8.6
-

Near-End 2.048-Mb/s Error Count

Overview

DACS II accumulates/calculates the following Near-End error count parameters for a PA type NPC:

- Code Violation Count (CV)
- Framing Error Count (FRER)
- CRC Block Error Count (CRC)
- Unavailable Time Count (UATC).

Code Violation Count

The Code Violation Count (CV) is incremented every time a code violation is detected. DACS II monitors and accumulates the CV in addition to converting it into an error rate estimate for alarm reporting purposes.

Framing Error Count

The Framing Error Count (FRER) is incremented every time a framing error is detected. DACS II monitors and accumulates the FRER in addition to converting it into an error rate estimate for alarm reporting purposes.

CRC Block Error Count

CRC Block Error Count (CRC) is incremented every time a CRC block error is detected. DACS II monitors and accumulates the CRC.

**NOTE:**

For type PA NPCs with automatic CRC-4 mode, the CRC count shall not be accumulated when an Loss of Multiframe Alignment (LMA) is declared.

Unavailable Time Count

Unavailable Time Count (UATC) is a period of Unavailable Time (UAT) begins when the bit error ratio in each second is worse than 1×10^{-3} for a period of ten consecutive seconds. These ten seconds are considered to be unavailable time. A new period of available time begins with the first second of a period of ten consecutive seconds each of which has a bit error ratio better than 1×10^{-3} . The UATC count is incremented every time an unavailable time period is entered.

Near-End 2.048-Mb/s Errored Intervals

Overview	DACS II accumulates/calculates the following Near-End Errored interval parameters for a type PA NPC: ■ Controlled Slip Seconds ■ Out-of-Frame Seconds ■ Errored Seconds ■ Severely Errored Seconds ■ Unavailable Seconds ■ TS16 Performance.
Controlled Slip Seconds	Controlled Slip Seconds (CSS) is incremented for every one-second interval with one or more slip defects.
Out-of-Frame Second	Out-of-Frame Second (OFS) is incremented for every one-second interval with one or more LOF defects. Continuous LOF defects are counted as one LOF defect.
Errored Seconds	Errored Seconds (ES) are incremented for every one-second interval with one or more of the following defects: ■ One or more code violations ■ One or more slips ■ One or more LOSs ■ One or more LOFs ■ One or more framing errors ■ One or more Errored CRC block.

(Continued on next page)

Near-End 2.048-Mb/s Errored Intervals (Continued)

Severely Errored Seconds

Severely Errored Seconds (SES) is incremented for every one-second interval with one or more of the following defects:

- 2048 or more code violations
 - One or more slips
 - One or more LOSs
 - One or more LOFs.
-

Unavailable Seconds

Unavailable Seconds (UAS) are incremented for every one-second interval in a UAT period.

TS16 Performance

DACS II continuously monitors and accumulates the Multiframe Alignment Error Count (MER) for a type PA NPC provisioned with CAS. The MER is incremented when one or more errors are detected in the "0000" signaling multiframe alignment signal of TS16.

Near-End 2.048-Mb/s Error Ratio Parameters

Overview	DACS II calculates the following error ratio parameters for framed type PA NPCs: ■ Errored Seconds Ratio ■ Severely Errored Seconds Ratio ■ Background Block Error Ratio.
Errored Seconds Ratio	Errored Seconds Ratio (ESR) is 100 times the number of ES divided by the total AS during a measurement interval.
Severely Errored Seconds Ratio	Severely Errored Seconds Ratio (SESR) is 100 times the number of SES divided by the total AS during a measurement interval.
Background Block Error Ratio	Background Block Error Ratio (BBER) is the number of BBEs divided by the total block count during a measurement interval excluding all blocks during SES and UAT.

Far-End Performance Parameters for a 2.048-Mb/s Facility

Overview	For framed 2.048-Mb/s facilities with far-end monitoring mode enabled, DACS II accumulates/calculates the following far-end performance parameters: ■ Far-End Block Error Count ■ Far-End Errored Seconds ■ Far-End Severely Errored Seconds ■ Far-End Unavailable Seconds.
Far-End Error Count	Far-End Block Error Count (FEBC) is an error count parameter that is incremented every time that an E bit is received with a binary value of "0".
Far-End Errored Seconds	Far-End Errored Seconds (FES) is incremented for every one-second interval with one or more far-end block error.
Far-End Severely Errored Seconds	Far-End Severely Errored Seconds (FSES) is incremented for every one-second interval with 100 or more far-end block errors.
Far-End Unavailable Seconds	If 10 consecutive Far-End Unavailable Seconds (FSES) are detected, the FE is declared as Unavailable, and these 10 FSESs are not counted as FSES. Instead, these 10 seconds are counted as FUAS, and any additional second is counted as FUAS until the Unavailable status is cleared.

Performance Parameter Thresholds

Overview

DACS II provides the user with the ability to change the following performance parameter threshold values:

- Default Threshold Values
- Threshold Values on an NPC
- Threshold Values on NPCs of a particular type
- Threshold Values on one or more NPCs of a particular type or *SLC*®.

Performance Parameter Thresholds

Table 8-1 lists the default performance parameter thresholds:

Table 8-1. Default Performance Parameter Thresholds

Parameter	Number/ 15 Minutes	Number/ Day
CV	18432	176947
FRER	18432	176947
CRC	18432	176947
UATC	3	9
CSS	1	4
OFS	4	4
ES	300	4320
SES	30	90
UAS	30	90
MER	255	4095
FEBE	18432	176947
FES	300	4320
FSES	30	90
FUAS	30	90

(Continued on next page)

Performance Parameter Thresholds (Continued)

rr Parameter Table 8-2 provides the facility performance parameter number when changing the threshold values:

Table 8-2. rr Parameter

rr	Parameter
11	Daily CRC Block Errors
12	Daily Framing Errors
13	Daily Out-of-Frame Seconds
14	Daily Errored seconds
15	Daily Severely Errored Seconds
16	Daily Controlled Slip Seconds
17	Daily Coding Violations
18	Daily Unavailable Seconds
19	Daily Unavailable Time Count
20	Daily Multiframe Errors
21	Daily Far-End Block Errors
22	Daily Far-End Errored Seconds
23	Daily Far-End Severely Errored Seconds
24	Daily Far-End Unavailable Seconds
31	Degraded Minutes, 1 hour
32	Degraded Minutes, 24 hours
33	Severely Errored Seconds, 15 minutes
34	Severely Errored Seconds, 24 hours
35	Errored Seconds, 15 minutes
36	Errored Seconds, 24 hours
37	Unavailable Seconds, 15 minutes
38	Unavailable Seconds, 24 hours
39	Slips, 15 minutes
40	Slips, 24 hours
81	15-minute CRC Block Errors
82	15-minute Framing Errors
83	15-minute Out-of-Frame Seconds
84	15-minute Errored Seconds
85	15-minute Severely Errored Seconds
86	15-minute Controlled Slip Seconds
87	15-minute Coding Violations
88	15-minute Unavailable Seconds
89	15-minute Unavailable Time Count
90	15-minute Multiframe Errors

Table 8-2. rr Parameter (Continued)

rr	Parameter
91	15-minute Far-End Block Errors
92	15-minute Far-End Errored Seconds
93	15-minute Far-End Severely Errored Seconds
94	15-minute Far-End Unavailable Seconds

**NOTE:**

Values 31 through 40 are for PB/PC type NPCs and values 11 through 24 and 81 through 94 are for PA type NPCs.

Performance Monitoring Report

Overview

A user may schedule a performance monitoring report on a single NPC or a range of NPCs. The starting time, the number of intervals over which performance monitoring is reported, and the parameter is set by the user. Table 8-3 lists the valid parameters and explanation:

Table 8-3. Valid Parameters

Parameter	Explanation
CRC	CRC Block Errors
FRER	Framing Errors
OFS	Out-of-Frame Seconds
ES	Errored Seconds
SES	Severely Errored Seconds
CSS	Controlled Slip Seconds
CV	Coding Violations
UAS	Unavailable Seconds
UATC	Unavailable Time Seconds
MER	Multiframe Errors
FEBE	Far-End Block Errors
FES	Far-End Errored Seconds
FSES	Far-End Severely Errored Seconds
FUAS	Far-End Unavailable Seconds
ALLLPM	All parameters listed above
ALLE	All near-end parameters listed above
ALLF	All far-end parameters listed above

Performance Monitoring Data

Overview

DACS II provides a command to check primary block performance monitoring data for PA type NPCs. When the user wants to view the parameter counts for all NPCs only one performance parameter may be queried. If the value ALLPM, ALLE, or ALLF is selected, a single NPC must be specified, the MONTIM and MONDAT parameters may not have a value of ALL, and the LV option cannot be used.

Performance Monitoring Counts

Overview

The user has the ability to clear facility performance monitoring parameters for PA type NPCs. Only counts that exceed current threshold levels cause threshold-crossing messages or alarms. Intervals before the previous interval may be queried using the ALL keyword, however, they cannot be cleared by manual command. Counts are cleared automatically as intervals pass, providing new errors are not counted.

Monitored Parameter

The monitored parameter accumulation register to be reset must be listed in Table 8-4:

Table 8-4. Monitored Parameters

Parameter	Explanation
CRC	CRC Block Errors
FRER	Framing Errors
OFS	Out-of-Frame Seconds
ES	Errored Seconds
SES	Severely Errored Seconds
CSS	Controlled Slip Seconds
CV	Coding Violations
UAS	Unavailable Seconds
UATC	Unavailable Time Seconds
MER	Multiframe Errors
FEBE	Far-End Block Errors
FES	Far-End Errored Seconds
FSES	Far-End Severely Errored Seconds
FUAS	Far-End Unavailable Seconds
ALLLPM	All parameters listed above
ALLE	All near-end parameters listed above
ALLF	All far-end parameters listed above

Check and Operate 2.048-Mb/s Line Loopback

Overview

DACS II provides commands to check the loopback status of NPC and to change/operate the loopback. This loopback is of the entire framed signal (256 bits). The loopback is toward the line side and can be used to check transmission and alarms at the far end. The DACS II NPC diagnostic command is used to verify the operation of the Dual Primary Card (DPC) at the DACS II.

E1 NPC Default Threshold Crossing Alarm Mode

Overview DACS II provides a operation to set the default for system-wide default threshold crossing alarm mode for all PA-type E1 NPCs. This operation can be programmed to allow or inhibit performance monitoring threshold crossing messages. If the command is not used, the default setting allows E1 NPCs to generate threshold crossing alert messages.

Provisioning Affect PA-type E1 NPCs that are already provisioned are not affected when changing the default setting, only the default setting that will be used in future E1 NPC provisioning commands. To inhibit or allow threshold crossing messages for PA-type NPCs that are already provisioned, use input commands 38221 and 38231. If the command is used to set the mode to the state that ready exists, it will complete sucessfully.

Threshold Options The INH option inhibits thresholding and threshold crossing alert messages for all parameters of the PA type NPCs that will be provisioned in the future. The ALW options ends the effect of the INH setting and causes all future PA-type NPCs provisioned on the system to perform parameter thresholding and generate threshold crossing messages when parameter counts meet or exceed their thresholds. The default thresholding option is ALW.

Even if the INH mode is selected and thresholding is inhibited, threshold values are stored in the database and will be output when manually queried. Threshold value option changes ale also still permitted if NPC threshold is inhibited.

Facility Loopback for TE or TH Type NPC within a Hybrid DS3

Overview

For TE or TH type NPCs that are associated with a Hybrid DS3 signal, DACS II executes a near-end (at the DACS II) line loopback by transmitting the received information bits of each frame back onto the embedded DS1 facility.

Activate/ Deactivate a Facility Loopback

The user may activate/deactivate a facility loopback. Only LINE is allowed for TE or TH type NPCs associated with a Hybrid DS3 signal when activating or deactivating.

Contents

■ Background	9-1
Introduction	9-1
Objectives	9-1
Related Tasks	9-2
■ C-Bit Processing Commands	9-3
Overview	9-3
Monitor NPCs	9-3
C-Bit Keywords	9-3
Hexadecimal Word	9-3
■ C-Bit Query Commands	9-4
Overview	9-4
Director Functions	9-4
State and Pattern	9-4
Output Message Guidelines	9-4
■ Disconnect from CPR Pack	9-5
Overview	9-5

Background

Introduction

DACS II provides a command to cross-connect signaling time slot 16 (telephone channel 31) from a facility NPC to a C-bit processor (CPR) pack in the DSPU. The DACS II software automatically assigns the next available CPR number and channel to the connection. The CPR pack will subsequently be provisioned to monitor and/or source C-bit patterns on the circuits (liaisons) on the facility NPC.

Objectives

This chapter provides information to perform the following:

1. Monitor NPCs
 2. Query Director Functions
 3. Disconnect from CPR Pack.
-

Background (Continued)

Related Tasks

For related tasks, refer to the following General Tasks in Volume II:

■ Enter Cross-Connection to CPR Pack	GT 9.1
■ Entering C-Bit Processing Commands	GT 9.2
■ Enter C-Bit Query Commands	GT 9.3
■ Enter Command to Disconnect from CPR Pack	GT 9.4
-

C-Bit Processing Commands

Overview	DACS II commands are used to initiate and change the C-bit processing for the circuit (liaison). The C-bit processing involves monitoring the C-bits for changed states and inserting C-bit patterns that dictate conditions (for example, signal looping) for the circuit. Frames are chosen as director DACS II frames because of their location in the circuit.
Monitor NPCs	An NPC can be set to monitor and/or insert C-bit patterns, and NPCs in different frames can be used for each direction of the liaison. The processing is done on circuits which are electrically cross-connected to the CPR pack in the DACS II.
C-Bit Keywords	DACS II provides three commands keywords which can be used independently and have the following functions: ■ DD keyword - initiates or changes the read or write capability for the director DACS II ■ BC keyword - used when the required C-bit pattern to be inserted using the hexadecimal notation ■ BCOFF - discontinues the C-bit insertion.
Hexadecimal Word	Hexadecimal notation for the 14-bit pattern to be sent on the addressed C-bits is identified within the command used. Except for digit-a which specifies 2 bits, each hex digit represents 4-bits of the pattern (Figure 9-1).

Hexadecimal word (X-abcd)

Digit a = bits 0,1,2,3 of C-bit pattern

(Note: Bits 0 and 1 cannot be set;
thus, valid values are a = 0,1,2, or 3)

Digit b = bits 4,5,6,7

Digit c = bits 8,9,10,11

Digit d = bits 12,13,14,15

Figure 9-1. Construction of Hexadecimal Word

C-Bit Query Commands

Overview	DACS II provides query commands to check director functions and state and pattern of C-bits. General Tasks are available to guide the user on obtaining the required information.
Director Functions	DACS II allows a user to query for information on the director functions of C-bit(s) for a channel or a range of continuous channels and director functions on an NPC or a range of NPCs.  NOTE: The command with the DDCT keyword includes C-bit patterns. This command may take up to 30 minutes to complete for a full 3-bay frame.
State and Pattern	C-bit state and pattern for a channel or an NPC/NPC range for a circuit (liaison) can be acquired also by entering a query command.
Output Message Guidelines	The following guidelines should be used when reading the information from the output message generated by DACS II C-bit query commands: ■ For the "Provisioning of C-BIT as DD" output for the RTRV ...DD query, "0" means not selected and "1" means selected. The output for each channel is in the form -mw for monitor, write; this format is repeated for all channels on NPC or range of NPCs as requested. ■ For the "STATUS OF C-BIT" output for the RTRV ...BC query, the status of the C-bits for each channel is given as one of the following: Z0 for all zeros (idle), NA for network alarm, UP for not provisioned, or UN for undetermined, or framed. ■ If the status of the C-bit is framed and the director DACS II function for the C-bit is to write, the C-bit pattern inserted by the CPR will be given for the channel or range of channels.

Disconnect from CPR Pack

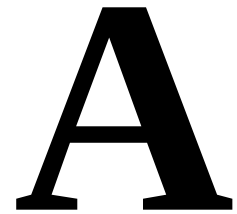
Overview

DACS II provides a command to disconnect signaling time slot 16 (telephone channel 31) connection from a facility NPC to a C-bit processor (CPR) pack in the DSPU. The DACS II software automatically finds the CPR number and channel of the connection. The disconnection would be required if the circuits were changed and the director DACS II functions were no longer needed for the same NPCs or if the NPCs were going to be degrown from the data base.

**NOTE:**

All director DACS II functions must be disabled (DD=0,0) and C-bit insertion must be turned off (BCOFF) before the circuit can be disconnected.


Command Denials



Contents

■ Background	A-1
Introduction	A-1
Objective	A-1
■ Clear Command Denials	A-2
Overview	A-2
Denial Message Command Strings	A-2
Common Causes	A-3
DENY Output Message	A-4

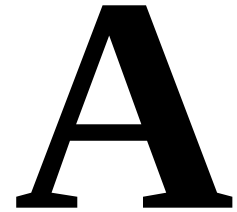Command Denials



Background

Introduction

DACS II will respond with a command denial message when an incorrect command is entered, there is trouble in the system (either software or hardware), or when an operator enters a command which has been restricted by the system administrator.

Objective

This chapter provides information to recognize clear command denials.

Clear Command Denials

Overview

When a user inputs an invalid command, the DACS II system denies the command and displays a denial message. The two types of denial messages are:

- Frame Denial Message
- Hexadecimal Condition Code Message.

Denial Message Command Strings

DACS II responds with a word strings in the denial message after a command is entered incorrectly or equipment is not operating properly. The following table provides the word string and the corrective action required to obtain command completion

Word String	Corrective Action
INACT	The INACT message indicates that the command is invalid with the feature package being used.
BAD SYNTAX	Determine the portion of the command that was in error from the designator (BAD VERB/FRM ERR/SEQ ERR) in the message and reenter the command with the correct information. If you do not understand how to correctly construct the command, you can get on-screen help using the help routine (initiated by entering a question mark, ?)  NOTE: The DACS II indicates where the input error occurred, by placing = signs around the word or portion in the echoed command.
ERR, ABT	Reenter the command; a transient frame condition may have caused the command to be aborted. If the command is aborted again, check the printout to find associated trouble messages
MC OOS	The MC (main controller) must be restored to service to execute the command
MCOND	The MC is in the maintenance condition, and only commands which are considered frame maintenance commands can be used
MC INSERVICE	The MC must be in the maintenance condition to execute certain PMEM and SMEM commands
MPDBASE	The main processor data base is not loaded
RESTRICTED, STOPPED	Only users who have been assigned the use of restricted maintenance commands can use the command. The use of this set of commands is enabled by the frame administrator who enters the SET-PRVG command with option RMON for the user

Clear Command Denials (Continued)

Common Causes

Command denials can be categorized under common causes. The following table provides the denial descriptions and corrective action required to obtain command completion:

Command Denial	Corrective Action
Input Error	Check each field of the command entry on the screen or printout against the documented command to find the error
Not Equipped, Not In-Service, or Failed	The named equipment is not grown (equipped) or in-service to support the execution of the command. The commands to create and restore the plug-in to service are covered in provisioning in Volume 1, and procedures to clear failed plug-in and trouble messages are in this trouble-clearing volume.
Incorrect NPC/ Channel Number	Check each side of the cross-connect command to find incorrect numbers that are already assigned or assigned differently. There are query commands in the cross-connect procedures to obtain information about existing connections on the frame
Invalid Parameters	Check each field of the command entry against the documented command to determine which keyword is incorrectly used
Boot Failed	This is a specific restore command denial. Reenter the restore plug-in command and subsequent diagnose command in an effort to get a DGN ...STF message for which there is trouble clearing in the respective trouble-clearing chapter. If no DGN ...STF message is obtained but the denial persists, replace the plug-in to be restored

Clear Command Denials (Continued)

DENY Output Message

The Deny output message provides a 4-digit error code which appears on a line by itself and the remaining lines which give the explanation of the error code. Table A-1 provides the error codes.

Error codes starting with the same letter are in the same general category; for example, I for input, E for equipage, S for service. The code is taken from letters of the key words that constitute the meaning of the code.

(Continued on next page)

Table A-1. mmmm Condition Codes

mmm	<i>Explanation</i>
ENEQ	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS CPR is not equipped Copy source NPC is not equipped DSPI not equipped, not in service, or failed DSPU is not equipped Database corrupt ETSI not equipped, not in service, or failed FC not eqd, not IS, or failed or inactive side FC not eqd or not IS FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS FTMI not equipped, not in service, or failed MIU is not equipped Mate NPC is not equipped NPC not equipped NPC not provisioned as DGA NPCTG not grown NPCTP is not grown No CBTYPE NPC equipped No DSP unit equipped Not enough DSPPs are equipped Protection MIU is not equipped Protection entity is unequipped Required FLI not equipped, not in service, or failed Required MIU not equipped, not in service, or failed Required MXR not equipped, not in service, or failed SYNC TB is not equipped Service MXR is not equipped Subject entity is not equipped Sync source NPC is not equipped TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS The MXR is not grown The pair MXR is not equipped Unit not equipped, not in service, or failed Test group unequipped Virtual SLC NPC not provisioned
ENFE	Cross-connect not consistent with feature package Software does not contain Enhanced CEPT feature Subject NPC does not support CEPT BER feature
ENIE	Option rr/m has not been set up on 2nd database Termination is not connected as indicated
ENRE	Two confs. were prev. connected or the concat. cause BRD-BBL loop Corresponding NPC for FROM virtual channel is not provisioned Corresponding NPC for TO virtual channel is not provisioned Corresponding NPC for virtual channel is not provisioned

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	FROM NPC is not provisioned as DGA
	Illegal connectivity specified
	NPC not provisioned for CAS
	NPC not provisioned for NSA
	PMEM type no longer supported
	SMEM is a normal SMEM
	SSC circuit pack is still equipped; pull-out/remove SSC
	Subject entity is equipped
	TO NPC is not provisioned as DGA
ERLC	Attempt to remove DGA w/o INCL keyword or prior prot. sw. request
	Customer control or red circuit exists
	DGA protected; use INCL to remove, or unswitch protection
ICNV	PM scheduling report is already allowed for this entity
	PM scheduling report is already inhibited for this entity
	TS0 is crossconnected to TS0
	Bit value not allowed for NPC type
	Current error corrector pack type specified in command
	Current Hub id specified in command
	not allowed for clear 2MB
IDMS	Both FAC and PRIM values(keywords) are required
	INCL keyword needed to perform this command
	INCL must be specified for SRDC ckts
	SIDE must be specified for substrate NPC
	Some priority values required
	Unspecified L2 address
IDNC	FDL selected with width not 1
	Inconsistent or invalid circuit type for Nx64Kbit TA
	Old or new is a non-channelized type in a DS0 command
	One NPC is a non-channelized type and the other is not
	Some priority values not required
	TG width incompatible with circuit
	The two FADS entered are not associated with one another.
	Incompatible HUB feature types
	Inconsistent BCON width for test access
	Inconsistent HUB width for specified TG
	Invalid channel designation for BCON
	Not all FROM channels on same NPC
IDNV	A locally switched channel is specified as BBL, LEG, or BRD
	A substrate circuit pack is specified in the command line
	AIS entered for MONE/MONF/MONEF/SPLTA/SPLTB/SPLTAB
	AIS invalid for cross-connection specified
	AIS keyword incompatible with NPC type
	Adding two digroups from one bank on same DDC

Table A-1. mmmm Condition Codes (Continued)

mmmm	<i>Explanation</i>
	Alarm option and bank mode don't match
	All NPC(s) are either not valid or not grown
	Attempt to broadcast a locally switched channel
	Attempt to one way cross-connect a locally switched channel
	BER must not be less than 4 for Clear DS1
	Bad PRIM X'efgh values
	Bank id number not found
	CPR circuit pack specified in the command
	Can't Use LCN 0/LGN 0 - designated as a supervisory channel only
	Can't delete because not all associated NPCs of the RT are entered
	Command not allowed
	Conference first channel doesn't match input
	Conference port cannot be dropped out of conference by switch command
	Conference port is not in conference circuit
	Connectivity can not be specified for CEF unit
	Counting sequence and operational mode don't match
	Cross-connect a non Mode I channel to DCLU
	Cross-connect a non SLC channel to DCLU
	DGA and DGB must be specified together in the command
	DGA with NDL option is not provisioned with D4 or ESF framing format
	DGA/DGP of RT/DL Mode I must be assigned to one DDC
	DGC and DGD must be specified together in the command
	DGP designated to bank without data link
	Digroup name and bank id don't match
	Digroups from same bank are added to two different FTUs
	Digroups from same bank have different counting sequence
	Digroups from same bank have different modes
	Duplicate L2 address
	Duplicate ports specified
	ENQ/ACK flow control is supported only on Snider link
	Error in input
	Framing format, digroup name & operational mode don't match
	INCL not specified and at least one NPC In Service
	IU type NPC(s) cannot be provisioned for Minor Alarm
	IW option is not allowed for new type of Clear-DS1 NPC
	Inconsistent Signaling on CEPT NPCTGs
	Inconsistent channel range width
	Invalid CEPT NPC
	Invalid CFT code
	Invalid FPI value
	Invalid FROM channel number

Table A-1. mmmm Condition Codes (Continued)

mmmm	<i>Explanation</i>
	Invalid MIU/MXR type specified
	Invalid NPC addressing scheme specified
	Invalid SLC Mode-III channel number
	Invalid TC specification
	Invalid TO channel number
	Invalid channel 000 cross-connection specified
	Invalid channel 031 cross-connection specified
	Invalid channel number
	Invalid circuit type
	Invalid keyword(s) combination specified
	Invalid line number
	Invalid link number specified
	Invalid poll time
	Invalid switch request for DCLU
	Leg type mismatch
	MUX or TRB invalid for cross-connection specified
	Mode I RT/DL IDs don't match for DGA/DGP on same DDC
	NAM invalid for cross-connection specified
	NDL option is specified for DGA
	NDL option is used without DGA
	NPC containing channel 000 is invalid type.
	NPC is a DGP
	NPC is channelized type
	NPC is not part of a one-way connection
	NPC number and bank id don't match
	NPC number and digroup name don't match
	NPC parameter only valid with TU type TLI
	NPC type is not DS type
	NPC type option Y is invalid for SLC-96 NPC
	NPC used as a timing reference
	NPC(s) actual type incompatible with TYPE keyword and/or alarm type
	No OOS keyword is given for out-of-service NPC
	No PM data available
	No mapped circuit under test; emode/fmode can't be changed.
	Number of transmitting ports does not match existing conference
	OLD and NEW Data and Parity channels partially overlap
	OLD and NEW channels cannot be the same
	OLD data channel cannot be parity channel type
	Old and new are the same NPC in a DS1 command
	One-way circuit under test; emode can't be changed.
	Operation mode and digroup name don't match
	Option not programmable for this NPC type

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	PWR/MISC alarm is specified to a digroup other than DGA
	Parameter only valid with PA, PB, or PC type NPCs
	RT-DCLU cross-connect with different channel number
	RT-DCLU cross-connect with different ids
	RTF keyword and the operation mode does not match
	RTF keyword is used without DGA
	Range entered without FRC keyword
	Range not allowed for circuit type
	SC invalid for cross-connection specified
	Selectable AIS not valid for specified NPC(s) type
	Side specified for non-duplicated NPC
	Signaling processing is not activated for the channel
	Superuser logged on
	TG East/West type inconsistent with each other or circuit
	TS0 specified with width not 1
	TS16 specified for CAS TG
	TS16 specified for test with width not 1
	The RT id entered is not a retrofit one
	The common bit(s) is(are) not set in both FAC & PRIM
	The facility parameter not programmable for specified x or z parameter
	The parameter specified does not match with the NPC type
	The specified parameter is not applicable to operation mode of the RT
	Trunk type is not allowed in the circuit specified
	Unmatched channel range
	Unmatched channel range involving SLC Mode III termination
	Unrunnable CFT code
	Using the 24th channel of a DMI NPC
	Using the 24th channel of a T1DM NPC
	Virtual circuit is not specified for X.25 link
	XON/XOFF flow control is supported only on Snider link
	ZBTSI option is only valid with the ESF mode
	Emode/fmode can't be changed under current test mode.
	x & z parameters on DSxyz are inconsistent
IDRG	Command did not execute for any entity specified in the command
	Ending channel is out of range
	First and Last NPCs are outside a module boundary
	First and Last NPCs are outside unit boundary
	Invalid FROM channel number range
	Invalid TO channel number range
	Invalid range for specified FROM NPC type
	Invalid range for specified NPC type
	Invalid range for specified TO NPC type

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	NPC range crosses unit boundary
	OFFSET range is invalid
	Old and New channel on same NPC and within the range
	Only up to 4 historical data registers are allowed
	TG width too large for single NPCTG
	Threshold value is out of range
	Unit type (xyz) not supported
	input channel out of range (SLC not supported)
IICM	Clear gateway test access disallowed.
	SRDC timeslots are allocated on this NPC
IIDT	AIS not entered for SPLTE/SPLTF/SPLTEF/LOOPE/LOOPF
	Database conference width does not match the range in input command
	Illegal BBL BBL combination
	Illegal BBL SYM combination
	Illegal BRD BRD combination
	Illegal BRD SYM combination
	Illegal LEG LEG combination
	Illegal SYM BBL combination
	Illegal SYM BRD combination
	Invalid change from previous mode
	Invalid change parameter combinations
	Invalid input BBL as fmd in ONE-WAY command
	Invalid input BBL in terminated TWOWAY/ONEWAY command
	Invalid input BRD as tmd in ONE-WAY command
	Invalid test mode for a one-way test session
	Invalid test mode for an unmapped test session
	Invalid use of CONV keyword
	NPC is a channelized NPC
	NPC is a non-channelized NPC
	NPC is not a F-end
	NPC is not a Facility Access Digroup
	NPC is not an E-end
	NPC type mismatch
	No NPC's out of service and OOS keyword used
	No RDLT or CUS circuits and INCL keyword used
	Report interval is not an integral number of accumulation interval
	TO side is not a DMB type NPC
	This NPC type does not allow unframed Clear-DS1
	Transmission parameters in command will not change existing settings
	Trunk conditioning is invalid
IIFM	Bad FAC value entered

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Exceeded depth limit of 6 on broadcast conference concatenation
	FMC cannot be cross-connected in this format
	Invalid FROM NPC type for AIS insertion
	Invalid NPC type for AIS insertion
	Invalid TO NPC type for AIS insertion
	Try to operate a ONE-WAY conference with a TWO-WAY input command
	Try to operate a TWO-WAY conference with an ONE-WAY input command
IPNV	Accumulation Interval field is missing
	Accumulation Interval field is not allowed
	FAC keyword is invalid for this feature
	Historical data can not be specified
	Interval is not valid/not available
	Invalid direction specified for NTST TLA/TLR
	Invalid parameter combination
	Invalid use of INCL keyword
	Level field is not allowed
	MONDAT keyword is invalid for this feature
	MONDAT set to ALL is not allowed
	MONTIM set to ALL is not allowed
	Mismatch between channel 0 crossconnect and keywords
	Monitored Date field is not allowed
	Monitored Time field is not allowed
	NPC is non-channelized
	NPC number out of range
	No PM data available
	Only 15MIN for accumulation interval is allowed
	Only DAILY for accumulation interval is allowed
	Only historical data can be specified
	Only one parameter is allowed
	PRIM keyword is invalid for this feature
	Scheduled reporting for this npc is inhibited
	Scheduling report could not be found
	The MONDAT and MONTIM parameters can not both be specified
	This NPC type does not allow Payload
NCON	No conditions
SAAL	Feature is active
	Manual Pending is Active
	PA NPC threshold already in allow mode
	Protection switching is already allowed
	The switch is allowed (not inhibited)
SAAS	All channels assigned, cannot be grown as NPCTG

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Another NPC is grown and added as this digroup
	BCON BBL has one or more legs under test
	Channel(s) is already registered
	Channels assigned, cannot be grown as test group
	Channels assigned, cannot be grown as test port
	Conference Port is currently registered to a different channel
	New bank id is an assigned one
	TG number previously assigned
	Termination is already assigned
	Termination is in process of being rolled
	The MIU is already equipped
	Channel already under test
	Channel part of a TP or TG
	Circuit contains mapped channels for HUB request
SAIN	Loop back inhibited for digroup
	No mapped slots on a tsi
	No unmapped slots on a bus
	PA NPC threshold already in inhibit mode
	Parity channel cannot be within the range of a DS0 command.
	Protection switching is already inhibited
	Subject entity is pested
	Termination is under test or is a test port or group
	The switch is already inhibited
	Can't change option, inhibition is active
SAIS	Both syncs are in-service
	CCN side s is in service
	CRO is still equipped
	Conference already exists
	DS3U NPC already In-Service
	DSPI is in service
	MIU is already in service
	Mate NPC (DGA/DGP) is in service
	NPC not IU/TI type
	Some TLIs are still equipped
	Some TSIs to degrow are in service
	Subject entity is in service
	TLI 3 or 4 still equipped
	Test group is not idle or frame is not In Service
	Test port is not idle or frame is not inservice
	The MMFG is already In-Service
	The MXR is in service
	The selected FLI is IS and Pested and at least 1 Service MXR is eqd
SAOP	RT's alarm exists

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
SAOS	This signal is already being sent
	A DMB on the Unit is OOS
	Both syncs are out-of-service
	CCB is out of service
	CCI is out of service
	CCN side s is out of service
	CCNI is out of service
	DSPI out-of-service
	ETSI is out of service
	FC out of service
	FLI is out of service
	FMT is out of service
	FTMI is out of service
	File has already been cleared
	Formatter (FMT) on active CCN side is Out-Of-Service
	IU/TI type NPC failed
	MIU is out of service
	MXR is out of service
	Mate CCN side is out of service
	Mate SYNC is out of service
	NPC out of service or failed
	Protection MIU is out of service
	Protection MXR is out of service
	Protection entity out of service or failed
	SYNC is out of service
	Service MIU is out of service
	Service MXR is out of service
	Subject entity is out of service
	Sync 0 is not in-service
	Sync 1 is not in-service
	The MMFG is Out Of Service
	The mate FLI is OOS and Protection MIU is equipped
	The mate FLI is OOS and Protection MXR is IS
	The mate FLI is OOS and at least one Service MXR is equipped
	The protection FLI is out of service or pested (TOPRTN option)
	The selected MIU associated with the NPC is Out-Of-Service
	The selected MXR associated with the NPC is Out-Of-Service
	The service FLI is out of service or pested (TOSRVC option)
	UC is out of service
SAPS	Frame ID is protected
	The Service MMFG is already under protection
	The protection FLI is already selected (TOPRTN option)
	Can't change option, protection switch is active

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
SAPV	Option LOCAL already exists Option REMOTE already exists
SARB	Exceeded limit of reports with accum. interval of 15 min. or less Exceeded maximum limit of PM reports
SARL	No FADs were activated by link n No test ports were activated by link n
SATF	Can't run test on active side
SAWS	An autonomous switch is in progress C-bit modify function is active C-bit operations are enabled Conference exists in a DMB Mapped slots exist on a tsi NPC already allocated as sync timing source NPC already grown as non-synchronization source NPC already has Equipment Loopback NPC is already grown and added as SLC digroup The Service MMFG is not under protection The service FLI is already selected (TOSRVC option)
SNAS	Connectivity contains unequipped units
SNIS	CPR is out of service Cannot clear journals for OOS unit DSPU unit controller is out of service NPC is OOS for a TGR command and OOS keyword not specified NPC unequipped, out of service or failed RT/DL has unrestored DGA Sync source NPC is not inservice TD on one(both) sync(s) is not equipped or not in-service Unit(s) OOS, and additional backup required
SNOS	In-service NPC change not allowed Subject PWR to be cleared is not failed
SNVS	(Timing Distributor) TLI is not equipped 1 hr >= 24 hr for DM opt 15 min >= 24 hr for ERS opt 15 min >= 24 hr for SERS opt 15 min >= 24 hr for SLIP opt 15 min >= 24 hr for US opt 3 Timing Distributor type TLIs are equipped A DMB mode was assigned to a FTU-type NPC on the input A loopback is active on the FROM termination A loopback is active on the TO termination A user is already logged in on the link/vc Active CCN side is out of service Adding DL DGP forbidden for SLC 96 MD 1

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Alarm bits cannot be passed through or inverted
	All digroups not out of service
	Another signal already active prevents this signal from being sent
	Assignment of single priority to multiple SSPs
	At least one UC is OOS or At least one UC is failed
	At least one UC is not the correct type
	Attempt to add to a null transmitting port
	Attempt to remove a Service MIU which is under protection
	Attention: preceding ccode 83 is an anomaly - see problem list
	Autonomous loopback is active on DGA
	Backup required before executing this command
	Bad sync mode
	Bad use of INCL, cannot override the current state of the conference
	Bad use of INCL, cannot use keyword on conf.-to-conf. connection
	Bit 3 provisioned for use as RAI3
	Bit 4 provisioned for use as RAIS
	Bit 4 provisioned for use as RBER
	Bit 5 provisioned for use as SFI
	Bit c not settable
	Bits 3 through 8 are provisioned for Transmic 1G
	Boot in progress, can't service request
	Both ITS TG bundles must be on same TG193B card
	Both sides of CCN are OOS
	Broadcast unassigned channel/NPC in QRY,TO
	C-bit modify function is disabled
	CATP due to skipping continuity test for FMT
	CCB is inservice but failed
	CCI is inservice but failed
	CCI is not present
	CCNI is inservice but failed
	CPR in buffer overflow condition
	CRO type TLI (SSP portion not required)
	CUS flag doesn't match that of conference
	Can not create any more users
	Can not execute privileged command
	Can not perform DMB CHG on input direction A
	Can not perform DMB CHG on input direction B
	Can not perform DMB CHG on input direction F
	Can not perform DMB CHG on input direction G
	Can not perform DMB CHG on input direction L
	Can not perform DMB CHG on input direction T
	Can not remove Frame administrator
	Can not remove own link

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Can not use 12-th TP when NPCTP is in the T1DM or DMI mode
	Can't disconnect return leg unless entire conference disconnected
	Can't mount or unmount BOTH_MEM
	Can't mount or unmount PMEM
	Can't mount or unmount SMEM
	Can't mount or unmount password recovery card
	Can't perform DMB CHG because NTR flag set on FROM side
	Can't perform DMB CHG because NTR flag set on TO side
	Can't RST MC CLR when a unit is equipped
	Can't start new session - previous session still verifying
	Change not valid
	Change to T1DM digroup with cross-connect that is not TRSP
	Change to non-ESF digroup with 16-state cross-connect
	Channel has a FAR, which is within the range
	Channel or NPC not bridged
	Channel out of bound in a BCON/v.c
	Channels and conference port do not match
	Clock absent for XPC to loop back
	Combination of bit g (b7) and h (b8) is invalid
	Command and protocol are inconsistent
	Command invalid while backup in progress
	Command is Frame administrator (DAX) only.
	Conference Port is already registered to the same group of channels
	Conference is LPD: has no switchable return leg
	Conference is NTR: has no switchable return leg
	Conference port is currently connected
	Conference port is not registered
	Conversion leg is terminated
	Cross-connect to CPR is required
	Customer controlled circuit, INCL not entered
	DB MP or units ram error
	DB retrofit fail
	DCTN conference channel cannot be rolled
	DGA is not added
	DGN on subject entity denied
	DGP is protecting a primary digroup
	DL ffff is used w/ operational mode other than Mode I
	DMI combined with T1DM
	DSPP not in service, or failed
	DSPP pack FTMI Failed or Out of Service
	DSPP pack NPC Failed or Out of Service
	DSPP pack UC Failed or Out of Service
	Database is empty

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Database is not empty
	Database not loaded
	Delete or change a leg from a conference that has no leg
	Deny Clear-2MB for Alternate Maps
	Deny SLC for Alternate maps
	Deny SP Type NPCs for Alternate Maps
	Deny non-channelized NPCs for Alternate Maps
	Designated TG or circuit to be tested in process of being rolled
	Different DSxyz types are used for DGA/DGP on same DDC for Mode I
	Digroup is protected
	Disable not allowed - supports another feature
	ETSI cannot be initialized when ECCN side is OOS or inservice but pested
	ETSI is inservice but failed
	ETSI is not present
	Entity can't be addressed in this configuration
	FC is inservice but failed
	FLI is inservice but failed
	FMT is in service but failed
	FPI on SMEM does not match one on PMEM
	FRC specified for protection, and service MMFG is In Service
	FROM is a two-way and no CONV specified
	FROM is not a backbone leg
	FTMI is PESTED
	FTMI is in service but failed
	FTMI type error
	Feature deactivation would leave system with core software
	Feature not enabled
	File already exists
	File doesn't exist/can't be accessed
	File is being accessed
	File is empty
	Firmware timing invalid for Transmic 1G NPC
	Flash Card is bad
	Flash Card is empty
	Flash Card is not present
	Frame is not in MCOND
	Frame time is not set
	Framed/Unframed clear 2Mbit/s NPC invalid for Automatic CRC-4
	Framed/Unframed clear 2Mbit/s NPC invalid for Firmware Timing
	Framed/Unframed clear 2Mbit/s NPC invalid for Transmic 1G, 2G
	G1 SMEM for SMEM->PMEM w/journals

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	G4 to G4.1 retrofit failed
	Gateway test access not supported
	Hardware mismatch or not present
	INCL keyword needed when restricted Insertion Word specified
	IW is UMUX (18) but NPC not type DE4yz
	IW not allowed to be specified in Clear 2Mbit/s
	Illegal SSP type (not same as other SSPs)
	Illegal priority value
	Illegal test access mode for TS0
	Illegal test access mode for TS16
	Improper roll command sequence
	Inactive side NPC out of service and inactive side in service
	Incompatible types of NPCs on a circuit pack
	Incorrect language/addressing mode
	Incorrect number of parameters
	Incorrect or missing password
	Incorrect pack type in slot
	Initialization of application in progress, retry command later
	Input BRD (BBL) has same NPC and channel as BBL (BRD)
	Insufficient data for setting up a conference
	Integrated Test Set is currently active on TG
	Invalid NPC number specified
	Invalid PWR/MISC alarm level
	Invalid combination of "x" and "y" values
	Invalid combination of "x" and "z" values
	Invalid executable on card
	Invalid option, mailbox or flag
	ITS NPC Hardware Error
	ITS TG Already Generating
	ITS TG Already Monitoring
	ITS TG is Idle
	ITS TG Not Generating
	ITS TG Not Monitoring
	LEG mode was assigned to a DSPU-type NPC on the input
	LLB not initiated
	LPD invalid since existing conference is not already LPD
	Language "F" provisioned for this channel
	Language is not allowed
	Last link in service
	Line Loop Back is active
	Line format types are incompatible
	Link being used is not Link 1
	Logical conflicts found in the map

Table A-1. mmmm Condition Codes (Continued)

mmmm	<i>Explanation</i>
	Looped Circuit Access not allowed
	MP database not consistent with Configuration file
	Major/Minor BER threshold value is invalid for SLC NPCs
	Maj Min BER threshold is 7, but not in T1DM or Fe mode
	Map/macro file write deferred until backup is completed
	Mapped parity channel(s) on new
	Mate RT/DL mode is different
	Mate sync pack denied command
	Maximum number of CPRs have already been grown for this unit
	Minor <= major for BER opt
	Minor >= major for COFA opt
	Minor >= major for SLIP opt
	Minor Slip threshold disabled before Major Slip threshold
	Mismatch between MXR and NPC types
	Mismatch between service MXR and protection MXR types
	New NPC already cross-connected or mapped channel(s) exist on New
	NPC addressing scheme selected is not allowed in the configuration file
	NPC as 12th test port can not change to DMI nor T1DM
	NPC has active circuit
	NPC has been designated as NPCTG
	NPC has been designated as NPCTP
	NPC invalid type
	NPC is NPCTG and chan 24 is used in a TG; Can't change to T1DM or DMI
	NPC is NPCTG, changing to CAS/NSA is not allowed
	NPC is a Facility Access Digroup
	NPC is a test port
	NPC is not a NPCTG
	NPC is not a NPCTP
	NPC is not added
	NPC is not designated for this NPCTP/NPCTG
	NPC is still provisioned to provide sync timing
	NPC not DA or TA type.
	NPC not deleted
	NPC not designated as sync timing source
	NPC providing timing to inservice SSP
	NPC type error
	NPC type is inconsistent with FTMI type
	NPC type option xyz is unassigned or invalid for feature package
	NTR invalid since existing conference is not already NTR
	New NPC same as existing one

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	New in CGA or PBA
	No CBTYPE NPC capacity remaining
	No DL digroups can be added until the associated RT bank is created
	No Facility Line Interface (FLI) is In Service
	No SAFE alarm for DGP
	No available timeslots on any inservice NPCS associated with FC/FMT
	No edit session active
	No equalization for CEPT FTMI
	No macro is currently executing
	No mapped channel on old
	No protection switch is currently active
	No signals active
	No unmapped time slot
	No user is logged in on the link/vc
	No user/link needs to be changed
	No zeros allowed for DAX privilege
	Not Timing Extractor type TLI (not SSP)
	Not a CRO TLI
	Not a DACS II compatible Flash Card
	Not enough DSPPs are in service
	Not enough TSIs for CCB test
	Not first channel in a BCON/virtual conf
	Not valid for frame administrator
	Number of DGPs on each unit is limited to 32
	Number of SLC RT's on each unit is limited to 80
	OLD termination is not mapped
	Obsolete circuit type
	Old and new channels have not been paired by a BCAST command.
	One of the FAR end channels is being rolled
	One of the far NPC(s) is SLC
	One or more FADs could not be released
	One or more test ports could not be released
	One way unassigned channel/NPC in QRY,TO
	Only one channel allowed to have this language
	Option NOT leg can not appear with F, T, or B
	Option NOT leg is not a FTU leg
	Option NOT leg is not in conference
	Other FLI is OOS
	Other NPC on this DDC not the same digroup for Mode I DGA/DGP
	PDI Version number mismatch
	PMEM and SMEM are different
	PMEM and SMEM synchronization fail

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	PMEM error, boot from SMEM
	PMEM not in service or not ready
	PMEM not restored
	Parity channel out of bound on new
	Password recovery card is not READ-only
	Point number mismatch
	Priority values are same
	Problem occurred while accessing BOTH_MEM
	Problem occurred while accessing PMEM
	Problem occurred while accessing SMEM or unformatted SMEM
	Protection switch existing is autonomous
	RCV continuity test won't be run: SYNC OOS or pested
	RCV continuity test won't be run: at least one timeslot in use
	RCV continuity test won't be run: no DMB timeslots available
	RCV continuity test won't be run: no available IS NPCS for FC/FMT
	RDLD flag doesn't match that of conference
	RTBC conference exists
	Range overlapping between FROM and TO or between two TOs
	Ranges of old and new do not match
	Reading Feature Package Id from PMEM failed
	Red circuit, INCL not entered
	Release number mismatch
	Report already exists
	SLC 96 MD 1 RT DGP requires mate NPC to be unequipped
	SMEM error, boot from PMEM
	SMEM is not present
	SMEM unit is not restored
	SR NPC was specified - not allowed
	SSC Diagnostic Failure
	SSP number is illegal
	SSP number required
	SSP type(options) same
	SSP with 0 priority present
	SSP with non 0 priority present
	SYNC is inservice but failed
	Signaling state of the trunk failed for the channel
	Skip error summary since adjacent pack not in service or pested
	Software Identification Block failed comparison
	Software Identification Block is not readable
	Some associated NPCs are equipped
	Some circuits not activated,cleared or pictured
	Source does not contain requested information
	Specified width does not match existing conference width

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Stratum not allowed
	Sync architecture different
	Sync architecture is same
	Sync mode is same
	Sync stratum is same
	Syncs are equipped
	System macro/map space is full
	T1DM or DMI mode and channel 24 is connected
	TB type in hardware mismatches DB
	Termination is a test port
	Termination is protected (RDLD)
	Termination is under customer control (CUS)
	Termination is under test
	Test ports must be on CAS
	Test session already exists
	Testport/testgroup channel cannot be rolled
	TG in TSM ON mode
	TG not in TSG ON mode
	TLA/TLR invalid with ITS test groups
	TO is a part of the same conference as a previous TO
	TO is already the return leg
	TO is not a leg of this/any conference
	TO is the backbone leg of a conference
	TO side of two-way to be converted is not an FTU NPC
	The INCL keyword is needed for DGA
	The MMFG is protected
	The NDL options are different for DGA's on the same DDC for Mode I
	The NPC of VC BBL leg doesn't match that in the input command
	The NPC to delete has not been previously added to map
	The OLD or NEW NPC is already being rolled.
	The associated MMFG is under protection (for Service MIUs)
	The associated MXR is In-Service but pested
	The conference does not exist
	The first channel of VC BBL leg doesn't match that in the input cmd
	The first channel of VC BRD leg doesn't match that in the input cmd
	The input BRD leg is not in VC
	The map is not valid
	The mode of the RT is not applicable
	The reference map does not exist
	The requested digroup is carrying service
	The selected MIU associated with the NPC is In-Service but failed
	The selected MXR associated with the NPC is In-Service but failed
	The session is terminated due to maintenance operation

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	The total number of receiving ports specified exceeds the max.
	There are no INS MXRs to run test on
	Timeslot channel numbering not allowed with CAS
	Timing Extractor type TLI (need SSP info)
	Timing Extractor type TLIs are present
	Transmic 1G NPC designated as SYNC source invalid
	Transmitting port cannot be dropped
	Tried to disconnect a nonexisting VC
	Trunk conditioning doesn't match that of conference
	Try to add a BBL to VC, but the VC already has backbone
	Try to delete a BBL leg from VC; however, VC has no BBL leg
	Try to delete a BRD leg from VC; however, VC has no BRD leg
	Trying to add a BBL leg to a conference set up as SYM
	Trying to add a BBL to a DMB conference that already has one
	Trying to add a SYM leg to conference set up as broadcast
	Trying to add a broadcast leg to a conference set up as SYM
	Trying to add or delete a leg when a conference is under test
	Trying to change in NTR direction
	Trying to change level in on BBL leg
	Trying to change level out on BRD leg
	TS0 connected to nonTS0 in Mode 2 - "a" should be "-" or "b"
	Two digroups from same bank added to different FTMIIs
	UC is in service but failed
	Unable to verify Configuration file since MP DB not loaded
	Unassigned operational mode
	Unframed clear 2Mbit/s NPC invalid for Bit 4 used as RA IS/RBER
	Unframed clear 2Mbit/s NPC invalid for TS0 processing
	Unit is not FTU type
	Unit type error
	Unmapped channel(s) on old
	Unpestering error registers for subj. entity failed
	Use of this NPC is RESERVED for SLC 96 MD 1
	User does not exist
	User has been created
	User has logged in somewhere
	User is not logged in
	User logged off during session
	User login-id is not DAX
	User macro/map space is full
	User quit the menu
	User still owns files
	Width of existing two way does not match conference width
	Write to CPR failed

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Writing Feature Package Id to PMEM failed
	Wrong SSP type(Timing Extractor type)
	Wrong TLI type
	Wrong TLI type (need CRO grow command)
	X option is illegal
	XMIT continuity test won't be run: CFT code specified
	XMIT continuity test won't be run: no XMIT timeslots available
	Y option is illegal
	Z option is illegal
	Channel is OCON in opposite direction
	Circuit already terminated
	Circuit not terminated
	Hub id not set when MJU pack grown
	Invalid mode for TLA/TLR
	Invalid test access mode
SOSF	All CBTYP NPCs out of service or failed
	DSPU unit controller is failed
SPFA	No protection is available for the Service MMFG
	Protection switch process failed
SPSW	The Protection MMFG is selected, and auto. switchback is unavailable
	The protection MMFG is serving another facility
SROF	(NPC) Hardware mismatch
	BOOT on subject entity failed
	CCN denied request
	Can't lock or unlock ram database
	Circuits TCONed itself cannot be UTST
	DB can't get the slave mail box
	DB can't send or receive mail
	DGN on subject entity failed
	Failed to boot CI
	Failed to boot CONF file
	Failed to boot DB
	Failed to boot journal--recurrence indicates database corruption
	Failed to boot subject CCN side
	Failed to boot unit
	Failed to switch SYNC side
	General boot failure (vanilla flavor)
	IU/TI type NPC
	MIU is failed
	MXR is failed
	Mismatch between MXR and MIU HDW types
	NPC Failed or Out of Service

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
mmm	No Memory Backup Has Been Scheduled
	None of the designated NPCTG(s) are equipped
	None of the designated TG(s) are equipped
	PMEM verification failed
	Read/write eeprom error
	RST failed to boot DB
	RST failed to boot program
	SSC software out of date
	Sync not completely reset
	Sync pack denied command
	Syncs failed to cross couple
	The MIU boot failed
	The MIU diagnostics failed
	The MXR boot failed
	The MXR diagnostics failed
	Unit 1 denied request
	Unit 2 denied request
	Unit 3 denied request
	Unit 4 denied request
	Unit 5 denied request
	Unit 6 denied request
	Wrong MXR type grown for this MIU
SRTN	Test Port release failed
	Test group release failed
SWFA	Active CCN side not IS or failed or pested or hardware OOS
	Boot TLI failed
	Checksums verification failed
	DB PMEM error OP-CL-RD-WR-SK
	DB SMEM error OP-CL-RD-WR-SK
	DSPI failed
	Data link failed
	Device failed to format
	Device failed to initialize
	Failed to lock sync to timing reference
	Far end failed to respond
	Hardware database mismatch
	MXR LOS with unselected FLI
	Selected FLI has LOC with at least one inservice MXR
	Sync is not configured yet
	Unselected FLI has LOS with at least one inservice MXR

Glossary

A

ABT

Abort.

ACO

Alarm Cutoff.

Active

For duplicated entities, the entity is providing service rather than operating in hot standby.

AI

Alarm Interface.

AIS

Alarm Indication Signal (also known as all 1s signal).

Alarm Delay

The alarm delay (in seconds) for software-detected alarm conditions. Initial value is 20 seconds.

Alarm Indication Signal (AIS)

A signal transmitted downstream to indicate that network transmission line failures were detected upstream.

All Ones Signal

Another name for DS1 Alarm Indication Signal (AIS). It is defined to contain all ones in the terminal-to-terminal mode.

ALM

Alarm.

Alphanumeric Characters

Letters and digits.

Alternate Mark Inversion (AMI)

A DS1 line code in which alternate one bits are positive and negative, but zero substitution is not used.

AMI

Alternate Mark Inversion.

ANSI

American National Standards Institute.

AS&C

Alarm Surveillance and Control.

ASCII Character

Letters, digits, and symbols used in the American Standard Code for Information Interchange.

ATAG

Autonomous Message Tag.

ATP

All Tests Passed.

Attribute

Alarm indication level: major, minor, or no alarm.

AUD

Audit.

Autolock

When the system autolocks an entity, it switches to protection and forbids return to the working entity even if the trouble clears. This is usually caused by multiple protection switches on that entity in a short time period.

Autolock Number of Switches

This parameter is the number of times that the system restores an entity to service (after intermittent failures) in a given autolock switching interval before the entity is autolocked.

Autolock Release Time

The number of hours between times when the system automatically releases autolock.

Autolock Switching Interval

An interval in minutes (see Autolock Number of Switches).

Autonomous

Done automatically by the system without any manual intervention from the user.

Autoprovisioned

Put in the provisioned state automatically by the system.

B**B3ZS**

Bipolar with 3-zero substitution, a DS3 line code.

B8ZS

Bipolar Eight Zero Substitution.

Baud Rate

Transmission data rate (bits per second) on an administrative link.

BBL

Backbone Leg.

BC

Bus Controller.

BCON

Broadcast Cross-Connect.

BDIS

Broadcast Disconnect.

BER

Bit Error Rate.

BER Metric

Specifies the metric for calculating bit error rate at a DS3 interface port. Options are bipolar variations (BPV) or parity (PTY). (Initial value is BPV).

BERT

Bit Error Ratio Tester.

Bipolar Violation

A violation of the alternating +1, -1 pattern in a 3-level code.

Bit Error Rate Threshold

3 stands for 0.001, 6 stands for 0.000001.

Blue Code

Same as AIS.

BMTR

Back-up Memory Transfer.

Boot

To transfer contents of a Memory Card into the system's working memory and system hardware. The contents of a Memory Card can include both system software and database.

BOS

Bit Oriented Signaling.

BPV

Bipolar Violation.

BRD

Broadcast Leg.

Broadcast

Form a bridge connection.

BSRF

Basic Synchronization Reference Facility.

BT

Bus Terminator.

BX

Bus Extender.

Byte

Usually refers to a group of eight consecutive binary digits, but sometimes used for bit groups of other sizes.

C**CAS**

Channel Associated Signaling.

CATP

Conditional All Tests Passed.

C-Bit

A DS3 line code in which parity checks on blocks of data are used to detect bits in error.

CCB

Cross-Connect Buffer.

CCI

Clock and Control Interface.

CCIS

Common Channel Interoffice Signaling.

CCITT

International Telephone and Telegraph Consultative Committee.

CCN

Cross-Connect Network.

CCNI

Cross-Connect Network Interface.

CEF

Capacity Expansion Frame.

CFA

Carrier Failure Alarm.

CFR

Synchronizer Configuration.

CGA

Carrier Group Alarm.

CHG

Change.

CI

Communications Interface.

CIU

Craft Interface Unit.

Clear (CL)

An alarm condition no longer exists.

CLF

Carrier Line Failure.

CMAP

Channel Map.

COFA

Change-Of-Frame-Alignment.

Condition

The type of alarm indication.

CP

Circuit Pack.

CPR

C-Bit Processor.

CPU

Central Processing Unit.

CR

Critical Alarm

CRC

Cyclic Redundancy Checking.

CRO

Clock Reference Oscillator.

Cross-Connect

A piece of hardware used to interconnect line-terminating equipment, multiplexers, and other equipment.

Cross-Connection

An interconnection between two specified NPC channels.

Crosstalk

A signal induced into one transmission line from another transmission line.

CRT

Cathode Ray Tube.

CSS

Controlled Slip Seconds.

CTAG

Correlation Tag.

Current Value

In the dialog mode, it indicates that the current value of a parameter is used by the system unless you direct otherwise.

CV

Coding Violations.

CVL

Coding Violations - Line.

CVP

Coding Violations - Path.

D**DACS**

Digital Access and Cross-Connect System.

Database

A record of the system configuration and status. It contains cross-connections, status of entities and transmission lines, performance monitoring threshold values and collected data.

DATS

Digital Access Test Set.

DC

Digroup Circuit or Direct Current.

DCC

Disconnect Code.

DCLU

Digital Carrier Line Unit.

DDC

Dual Digroup Circuit.

DDS

Digital Data System.

Default

A value the system automatically uses for a parameter if you do not specify a value.

Delimiter

A colon, comma, or space used to separate two parameters in a command or message.

Demultiplexer

A device used with a multiplexed signal for recovering signals contained within it and restoring the distinct individual channels of these signals.

DFB

Dual Fuse Board.

Diagnose

Test an entity.

DIF

DACS Interface Module.

DL

Data Link.

DLC

Digital Loop Carrier.

DM

Dual Multiplexer.

DMA

Deferred Maintenance Alarm.

DMAP

Digroup Map.

DMB

Digital Multipoint Bridge.

DMI

Digital Multiplex Interface.

DMM

Digital Multimeter.

DND

DACS II Network Director.

DOTS

Digital Office Timing Supply.

DPC

Dual Primary Circuit.

DPLL

Digital-Phase Locked Loop.

Driven

A driven port is being monitored, and a good signal is expected.

DS0

Digital Signal Level 0 (64-kb/s).

DS1

Digital Signal Level 1 (1.544-Mb/s).

DS1 Data Rate

The DS1 Data Rate is calculated as follows: $DS1 = (24 \text{ Channels} \times 8 \text{ bit/sample} + 1 \text{ frame bit}) \times 8000 \text{ samples/sec}$
 $DS1 = 193 \times 8000 = 1.544 \text{ Mb/s}$.

DS1 Port

A DS1 port in either a DS1 interface module or a DS3 interface module.

DS3

Digital Signal Level 3.

DS3U

DS3 Unit.

DSL

Digital Subscriber Line.

DSP

Digital Signal Processor.

DSPC

Digital Signal Processor Circuit.

DSPI

Digital Signal Processor Interface.

DSPU

Digital Signal Processor Unit.

DSU

Data Service Unit.

DSX

Digital Signal Cross-Connect.

DTAC

Digital Test Access Connector.

Duplex Entity

A pair of entities in which one is active and the other is in hot standby (clock generators).

Duplicated Entity

A pair of entities in which one is active and the other is in hot standby (for example, the Synchronizer Cross-Connect (SXC) circuit packs).

E**E1 Data Rate**

The E1 Data Rate is calculated as follows:

$$E1 = (32 \text{ Channels} \times 8 \text{ bit/sample}) \times 8000 \text{ samples/sec}$$

$$E1 = 256 \times 8000 = 2.048 \text{ Mb/s}$$

With this data rate, 30 channels carry traffic and two channels are reserved; one channel contains framing information and the other channel contains signaling information.

E2A

Type of Alarm Telemetry.

EBX

Expanded Bus Extender.

ECCN

Expanded Cross-Connect Network.

Echo

Display of keystrokes entered from a terminal (passwords are not echoed).

ECI

Enhanced Communications Interface.

EDDC

Enhanced Dual Digroup Circuit.

EDPC

Enhanced Dual Primary Circuit.

EER

Excessive Error Rate.

EFC

Extended Frame Controller.

EIA

Electronic Industries Association.

EID

Entity Identification.

EMC

Electromagnetic Compatibility.

EMIU

Expanded Multiple Interface Unit.

EMS

Element Management System.

EMTC

Expanded Maintenance Circuit.

Enter

Provision an entity by a command, not automatically by the system.

Entity

A specific piece of hardware (such as the Main Controller (MC) or Network Processing Circuit (NPC)) that has been assigned a name and is recognized by the system.

Entity Identifier

The name used by the system to refer to an entity.

Equalizer

A circuit adjustment used to maintain signal strength between desired limits.

Equipped

The entity is entered in the system database via a user provisioning command.

ER

Error Rate.

ERS

Errored Seconds.

ES

Errored Seconds.

ESD

Electrostatic Discharge.

ESF

Extended Superframe.

ESL

Errored Seconds for the DS3 Line.

ESP

Errored Seconds for the DS3 Path.

ESR

Error Source Register or Errored Seconds Ratio.

ESR1

Error Source Register 1.

ESR2

Error Source Register 2.

Ethernet

A local area network (LAN) technology that transmits information between computers at speeds of 10 to 100 Mbps.

ETSI

European Telecommunication Standardization Institute.

EXZ

Excessive Zeroes.

F**FAL**

Fuse Alarm Lamp.

FAS

Frame Alignment Signal.

FAW

Frame Alignment Word.

FC

Format Converter.

FDL

Facility Data Link.

Fe

Extended Superframe Format.

FEBE

Far-End Block Error.

FELP

Far End Loopback.

FES

Far-End Errored Seconds.

FLI

Far End Loss of CRC-4 Frame Alignment

FLI

Facility-Line Interface.

FMAC

Facility Maintenance and Administration Center.

FMP

F- and M-bit framing errors - Path.

FMT

Formatter.

Forced

A traffic-carrying entity (either service or protection) has been deliberately locked into a service providing state by manual command despite being bad.

FPA

Feature Package A.

FPB

Feature Package B.

FPC

Feature Package C.

FRADT

Frame Audit.

FRER

Framing Bit Error.

Fs

Fx Framing Format.

FSES

Far-End Severely Errored Seconds.

FSESP

Far-End Severely Errored Seconds - Path.

FTM

Facility Terminating Module.

FTU

Facility Terminating Unit.

FUAS

Far-End Unavailable Seconds.

FW

Framing Word.

G**Grooming**

Rearrangement of DS1 signals in DS3 signals.

GUI

Graphical User Interface.

H**HDB3**

High Density Bipolar 3 Zero Substitution.

HDS3U

Hybrid DS3 Unit.

Header

The first line of a message.

Header Date

Specifies the current date as YYMMDD, where YY is the last two digits of the year, MM is the month, and DD is the day of the month.

Header Time

Specifies the current time of day as HHMMSS, where HH is the hour (00 to 23), MM is the minutes, and SS is the seconds.

HECI

High-Speed Enhanced Communications Interface.

HFMT

Hybrid Formatter.

Hierarchy

An orderly ranking or sequence of elements, such as that of menus presented at a terminal.

Hit

A disruption of service that lasts for less than 1 second. See Outage.

HMXR

Hybrid Multiplexer.

Hot Standby

An entity ready for fast, automatic placement into operation to replace an active entity.

HUBID

Hub Identifier.

I**ICI**

Intelligent Communication Interface circuit pack (TM 782).

IDLD

Idled.

Idle

An output port is idle if it is not cross-connected to an input port.

Idle Channel

A channel on an NPC that has not been cross-connected.

IEEE

Institute of Electrical and Electronics Engineers.

IFTU

Integrated Facility Terminating Unit.

IITL

Interface Information Transfer Letter.

In Service

The entity is performing normal service functions, either active or standby.

IP

Internet Protocol, used to route data to its appropriate destination.

IS

See In-Service.

ITS

Integrated Test Set.

ITU-TSS

International Telecommunication Union-Telecommunication Standardization Sector.

J**Jitter**

Short term variations in the phase of a digital signal.

K**kb/s or kbit/s**

Kilobit Per Second.

kHz

Kilohertz.

L**LAN**

Local Area Network.

LBO

Line Build-Out.

LCMA

Loss of CRC-4 Multiframe Alignment.

LED

Light-Emitting Diode.

LFA

Loss of Frame Alignment.

LILB

Line Interface Loopback.

Link

A user interface connection into the DACS II system.

Link ID

The location and type of a user interface link.

LLB

Line Loopback.

LMA

Loss of Multiframe Alignment.

Location

The specific entity involved.

LOF

Loss of Frame.

Loopback

A circuit arrangement that causes a received signal to be returned to its source.

LOS

Loss of Signal.

M**M13**

A standard format used for DS3 signals.

Maintenance

The entity has been locked into a non-service providing state by a manual command.

Maintenance Condition (MCOND)

MCOND is a condition in which the Main Controller (MC) is isolated from system hardware in order for the user to perform memory transfer operations. Placing the MC in MCOND is non-service affecting. When the MC is in the MCOND service state, the system software and database are not transferred to the Memory Cards. The Maintenance Condition enables the user to transfer database and/or system software among the Memory Cards and the MC's Random Access Memory (RAM) in a controlled manner via user commands. The MCOND service state is also used to perform system software upgrades.

Mapped

Cross-connected.

Mb

Megabit

Mb/s or Mbit/s

Megabit Per Second.

MBER

Minor Bit Error Rate.

MC

Main Controller.

MCOND

Maintenance Condition.

MCP

Main Controller Peripheral.

MEMA

Memory Card Slot A

MEMB

Memory Card Slot B.

Memory Location

Specifies the equipment, DS1 interface port, or DS3 MUX port location associated with a memory type.

MER

Multiframe Error.

MFA

Multiframe Alignment.

MI

1. Maintenance Information. 2. Minor Alarm.

MIU

Multipoint Interface Unit.

MJ

Major Alarm.

MJU

Multipoint Junction Unit.

MMFG

Multiplexer-MIU Functional Group or HMXR-MIU Functional Group.

MML

HuMan-Machine Language (a language used by the DACS II).

MP

Main Processor.

MPDIS

Multipoint Disconnect

MPM

Multipoint Mode.

MTC

Maintenance Circuit.

MXR

Multiplexer.

N**NA**

No acknowledgement.

NAS

Non Associated Signaling.

NDL

No Data Link.

NEBS

Network Equipment Building Systems.

Network Element

An individual system in a network of other systems. A DACS II system is a network element.

NFW

Non Framing Word.

NG

No Good.

NOBBL

No Backbone Leg.

Notification Code

The notification code for alarm and status conditions, which include: MJ - major alarm; MN - minor alarm.

NPC

Network Processing Circuit.

NPCTG

Network Processing Circuit Test Group.

NPCTP

Network Processing Circuit Test Port.

NSA

Nonsignaling Associated.

NZCS

No Zero Code Suppression.

O**OA&M**

Operation, Administration and Maintenance.

OCON

One-Way Cross-Connect.

OCNT

One-Way Cross-Connect, Terminated.

ODIS

One-Way Disconnect.

OFS

Out-Of-Frame Seconds.

OOF

Out-of-Frame.

OOS

See Out-Of-Service.

OS

Operations System.

Out-Of-Service (OOS)

The entity is not providing its normal service function (removed from service) either because of a system problem or because it has been removed from service manually.

Outage

A disruption of service that lasts for more than one second. See Hit.

P**Parity Check**

To determine whether a block of digital data has been corrupted in transmission, you can use an even-parity format in which an extra bit is added to the block at the transmitter if necessary so that the block always contain an even number of one bits. A parity-checking circuit at the receiving end can determine whether an error has occurred in transmission. An odd-parity format can also be used for the same purpose.

PBA

Primary Block Alarm.

PBC	Primary Block Circuit.
PBF	Primary Block Failure.
PBX	Private Branch Exchange.
PCM	Pulse Code Modulation.
PCMCIA	Personal Computer Memory Card International Association.
PDS	Program Documentation Standards (a language used by the DACS II).
PF	Printout Follows.
PFW	Pseudo-Frame Word.
PLL	Phase-Locked Loop.
PM	Performance Monitoring.
PMA	Prompt Maintenance Alarm.
PMEM	Primary Memory flash card for the DACS II.
PNI	Packet Network Interface.
POF	Pseudo Frame Word Out of Frame.
POTS	Plain Old Telephone Service.
PRBS	Pseudo-Random Bit Sequence.
Primary Line	The second line in an output message.

Program

The software that directs the operation of the main controller and other frame elements.

Protocol

Detailed format and procedures used for transmitting digital data.

Protocol Type

Indicates the protocol supported on the interface link.

Provisioned

The entity has been configured by the user and entered into the system database and is ready to be restored to service.

PU

Power Unit.

Pulse Code Modulation (PCM)

The process by which analog signals are sampled, quantized, and coded into a digital bit stream.

PVC

Permanent Virtual Circuit.

R**R16**

Remote Alarm Indication in TS16.

RAI

Remote Alarm Indication.

RAIS

Remote Alarm Indication Signal.

RAM

Random Access Memory.

RBER

Remote Bit Error Rate.

RDC

Red Circuit.

Released

If an input port, it is not under test access; if an output port, it is not cross-connected to an input port under test access.

RL

Retry later.

RLS

Terminate and Leave Release (MML language).

RMS-D

Remote Measurement System - Digital.

RMS-I

Remote Measurement System - International.

Rollover

Operation used when the transmission facility between the system and an upstream system is to be replaced.

RT

Remote Terminal.

RTS

Remote Test System.

RTS-5A

Remote Test System 5a.

S**SAP**

Status and Alarm Panel.

SARTS

Switched Access Remote Test System.

SCC

Subrate Cross-Connect.

SCCSAI

Switching Control Center System Asynchronous Interface.

SECH

Subrate Establish Command.

SEF

Severely Errored Frame.

SERS

Severely Errored Seconds.

SESL

Severely Errored Seconds for the DS3 Line.

SESP

Severely Errored Seconds for the DS3 Path.

SESR

Severely Errored Seconds Ratio.

SFI

Synchronizer Failure Indication.

SID

Source Identifier.

SMEM

Secondary Memory flash card for the DACS II.

SNIDER

Protocol (message format) used on asynchronous administrative links.

SNMP

Simple Network Management Protocol, used for building a single management system to perform provisioning, cross-connections and test access for multiple DACS II, etc.

Software ID

Gives the software version information for a system: g - is a one-digit number giving the software release; i - is a two-digit number giving the issue; r - is a one-digit number giving the point release.

SPU

Synchronizer Power Unit.

SRM

Subrate Multiplexer.

SSC

Secondary Storage Controller.

SSP

Select Synchronization Port.

Standby

Entity is one of a duplicated pair, but not providing service. It is ready to be used to replace a similar entity either by protection or by duplex switching.

State/STATE

The state of an entity indicates whether it is defective or normal, whether it is ready for normal use, etc.

Subrate

In the digital data system, a data bit rate that is either 2.4, 4.8, or 9.6 kb/s.

SVC

Switched Virtual Circuit.

SYNC

Synchronizer

Synchronizer Cross Connect

A dual function circuit pack that performs both synchronization and cross-connect functions.

System Executables

The software that directs the operation of the Main Controller (MC) and other system entities.

T**T1DM**

T1 Data Multiplexer.

TABS

Telemetry Asynchronous Block Signal.

TAD

Test Access Digroup.

TA1

TS16 All Ones alarm.

TB

Time Base.

TC

Trunk Conditioning.

TCP

Transmission Control Protocol, used to transfer data from one terminal to another.

TCP/IP

Transmission Control Protocol/Internet Protocol, a suite of protocols developed to allow cooperating computers to share resources across a network.

TCNT

Two-Way Cross-Connection, Terminated.

TCON

Two-Way Cross-Connection.

TD

Timing Distributor.

TDIS

Two-Way Disconnection.

TDM

Time Division Multiplexed.

TELNET

Remote Terminal Protocol, allows a user at one location to access a remote server at another location.

TERM

Terminate and Leave Activate (MML language).

Test Access

A mode of operation that provides full access to the circuit under test but does not interfere with any other cross-connections that have been established.

Test Mode

Specifies the Test Access Mode.

TG

Test Group.

TID

Target Identifier.

TLA

Terminate and Leave Activate (PDS language).

TLI

Timing Link Interface.

TLP

Transmission Level Point.

TLR

Terminate and Leave Release (MML language).

TP

Test Port.

TPR

Test Port Release.

TSI

Time Slot Interchange.

TTY

Teletypewriter Terminal.

U

UAC

Unassigned Channel Code.

UAS

Unavailable Seconds.

UASP

Unavailable Seconds - Path.

UATC

Unavailable Time Count.

UBX

Unit Bus Extender.

UC

Unit Controller.

UMC

Unassigned Multiplexer Code.

V

VC

Virtual Circuit.

X

X.25

Protocol (message format) used on synchronous administrative links.

Z

ZBTSI

Zero Byte Time Slot Interchange.

ZCS

Zero Code Suppression.

Index

Numerics

2.048 Mb/s Facility Terminating Units, [1-51](#)
2.048-Mb/s Facility Far-End Performance Parameters, [8-7](#)
2.048-Mb/s Facility, Establish, [3-103](#)
64-kb/s Signals, [5-4](#)

A

Aborting a Command or Message, [1-91](#)

Acceptance

- Check and Set Facility Report Utilities and Auto Backup Memory, [2-45](#)
- Check and Set Time-Clock Utilities, [2-45](#)
- Check Circuit Pack Installation, [2-8](#)
- Check Cross-Connect Operation, [2-52](#)
- Check DSPU Circuit Pack Installation, [2-36](#)
- Check ECCN/CCN Circuit Pack Installation, [2-18](#)
- Check Feature Setup, [2-38](#)
- Check for Equipped, Out-Of-Service or Cross-Connected Circuits, [2-55](#)
- Check Frame Setup, [2-38](#)
- Check FTU Circuit Pack Installation, [2-12](#)
- Check Link Setup, [2-39](#)
- Check Main Controller Installation, [2-9](#)
- Check Multibay Circuit Pack Installation, [2-18](#)
- Check NPC Timing Option Wiring, [2-50](#)
- Check Power Units and Fuses, [2-22](#)
- Check Single-Bay Circuit Pack Installation, [2-21](#)
- Check Software Setup, [2-38](#)
- Check Status Register, [2-43](#)
- Check Sync Circuit Pack Installation, [2-10](#)
- Check Sync Switchover, [2-51](#)
- Initialize Alarms, [2-44](#)
- Initialize and Test Alarms, [2-44](#)
- Inspect Back of Frame, [2-7](#)
- Inspect Front of Frame, [2-4](#)
- Overview, [2-1](#)
- Perform Visual Inspection, [2-4](#)
- Review Frame and Link Setup, [2-38](#)
- Test Alarm Operation, [2-44](#)

Add/Delete User, [6-6](#)
Addressing Levels, [1-101](#)
Addressing

- Change NPC Addressing, [6-10](#)

Administration

- Add User, [6-4](#)
- Add/Delete User, [6-6](#)
- Alternate Maps, [6-14](#)
- Change Input Command Priority, [6-9](#)

- Change Link Removal Permission, [6-11](#)
- Change Message Language, [6-10](#)
- Change NPC Addressing, [6-10](#)
- Change Output Message Screening, [6-11](#)
- Change Password, [6-13](#)
- Change User Macro/Map Storage Space, [6-11](#)
- Choosing a Password, [6-12](#)
- Command Grouping, [6-6](#)
- Delete User, [6-4](#)
- Frame Administrator Functions, [6-4](#)
- Log Off Other User, [6-9](#)
- Log Off the System, [6-13](#)
- Log On and Log Off, [6-12](#)
- Login and Password, [6-4](#)
- Login Modes, [6-12](#)
- Macros, [6-19](#)
- MML Message Logging, [6-24](#)
- Recover User DAX Password, [6-6](#)
- Reinstate User with Forgotten Password, [6-9](#)
- Restricted Maintenance, [6-10](#)
- Screening Options, [6-6](#)
- User Priority Levels, [6-6](#)

Administrative Links, [1-86](#)

- Link Usages, [1-86](#)
- Local and Remote Link Connections, [1-86](#)
- Message Screening, [1-86](#)
- Output Messages, [1-86](#) [1-87](#)

Administration

- Alarm Severity, [6-25](#)
- Intervention Level, [6-29](#)

AIS, Change, [3-96](#)
Alarm Indication Signal, [1-61](#)
Alarm Indication Types, [1-60](#)
Alarm Indicator - TS0, Change NPC, [3-101](#)
Alarm Intervention Level, [1-64](#)
Alarm Operation, Test, [2-44](#)
Alarm Panel, CEF Switch Bay, [1-29](#)
Alarm Severity

- Change Facility Alarm Severity, [6-27](#)
- Change Shelf Alarm Severity, [6-26](#)
- Display Facility Alarm Severity, [6-28](#)
- Display Shelf Alarm Severity, [6-27](#)
- Set, [6-25](#)

Alarm Severity Level, [1-63](#)
Alarm Tests, Perform End-to-End Alarm Tests, [3-105](#)
Alarm Threshold in Data Base, Set Optional, [3-75](#)
Alarm Threshold, Change, [3-97](#)
Alarms, Carrier Failure, [1-60](#) [1-61](#)
Alarms, Facility Performance, [1-62](#)
Alarms, Initialize, [2-44](#)
A-Law and Mu-Law Conversions, [1-69](#)
Alternate Map

- Delete Alternate Map, [6-18](#)

Alternate Maps

- Activate Alternate Map, [6-17](#)
- Change New Map, [6-16](#)
- Create, [6-15](#)
- Create Using Picture Option, [6-15](#)
- Edit Alternate/Reference Map, [6-17](#)
- Enhanced, [6-14](#)

Naming Rules, [6-14](#)
 Query Alternate Map Information, [6-18](#)
 Reference Map for PIC Option, [6-16](#)
 Sample Map, [6-15](#)
 Sample Reference Map, [6-16](#)
 Application-to-Application Cross-connection Reports, [5-40](#)
 Auto Backup Memory, Check, [2-45](#)
 Auto Backup Memory, Check and Set, [2-45](#)
 Auto Backup Memory, Set, [2-45](#)
 Autonomous Message, [1-104](#) [1-111](#) [1-113](#)
 Autonomous Message Tag, [1-111](#)

B

Background Block Error Ratio (BBER), [8-6](#)
 Backup Memory, Check and Set Auto, [2-45](#)
 BBER, Background Block Error Ratio, [8-6](#)
 BERT capability, [1-41](#)
 Bridging Repeater, [5-30](#)
 Broadcast Bridge, [1-59](#)
 Broadcast Circuit, [5-15](#) [5-21](#)
 Switch Return Leg, [5-22](#)
 Broadcast Circuits
 Disconnect, [5-24](#)
 Broadcast Disconnection, [5-19](#)
 Broadcast Disconnection Rules, [5-24](#)
 Broadcast TS0, [5-33](#)

C

Carrier Failure Alarms, [1-60](#)
 Alarm Conditions, [1-61](#)
 C-Bit Processing
 Director Functions, [9-4](#)
 Disconnect from CPR Pack, [9-5](#)
 Entering Commands, [9-3](#)
 Entering Query Commands, [9-4](#)
 Keywords, [9-3](#)
 Monitor NPCs, [9-3](#)
 State and Pattern, [9-4](#)
 C-Bit Processing Commands, Enter, [9-3](#)
 C-Bit Processing, Overview, [9-3](#)
 C-Bit Query Commands, Enter, [9-4](#)
 CCN
 Multibay CCB and TSI Circuit Packs, [3-27](#)
 Multibay Circuit Pack Location, [3-26](#)
 Single-Bay CCB and TSI Circuit Packs, [3-29](#)
 Single-Bay Circuit Pack Location, [3-28](#)
 CCN Circuit Packs, Install Multibay, [3-26](#)
 CCN Circuit Packs, Install Single-Bay, [3-28](#)
 CCNs for Non-CEF Frames, [1-55](#)
 CCNs for Single-Bay Frames, [1-56](#)
 CEF Power Unit and Fuses
 Fuse Codes and Quantities, [3-32](#)
 CEF Power Units and Fuses, Install, [3-31](#)

CEF Switch Bay, [1-23](#)
 Bus Terminator, [1-24](#)
 Central Processor Unit 2, [1-27](#)
 Clock Control Interface, [1-24](#)
 Digital Phase-Locked Loop, [1-26](#)
 Expanded Time Slot Interface, [1-24](#)
 Extended Bus Extender, [1-27](#)
 Extended Cross-connect Network, [1-24](#)
 Extended Frame Controller, [1-19](#) [1-25](#)
 Extended Maintenance, [1-27](#)
 Fuse Board, [1-27](#)
 Fuse Panel, [1-29](#)
 Intelligent Communication Interface, [1-27](#)
 Main Controller, [1-27](#)
 Main Controller Power, [1-27](#)
 Power Converters, [1-27](#)
 Status Panel, [1-28](#)
 Synchronizer, [1-26](#)
 Synchronizer Power Unit, [1-26](#)
 Time Base, [1-26](#)
 CEF Switch Bay, Alarm Panel, [1-29](#)
 CEF Switch Bay, Extended Frame Controller, [1-20](#) [1-25](#)
 CEF Switch Bay, Main Controller, [1-27](#)
 CEF Switch Bay, Synchronizer, [1-26](#)
 Change 2.048 Mb/s Impedance Setting, [2-49](#)
 Change 64-kb/s Signals, [5-4](#)
 Change Clear-2 Mb/s Signals, [5-20](#)
 Change DSP Application Cross-connections, [5-39](#)
 Change Non-Frame Word Bits, [5-36](#)
 Change NPC Type, IW, or AIS, [3-96](#)
 Change Synchronizer Timing Link Interface, [3-20](#)
 Change Termination (TLA/TLR) or Conference Bridge
 Parameters, [5-18](#)
 Change Timeslot 0 Monitoring, [5-34](#)
 Change TS0 Bit Monitoring, [3-100](#)
 Check Facility Report Utilities, [2-45](#)
 Check Far-End Installation, [3-104](#)
 Check for Cross-connected Circuits, [2-57](#)
 Check for Equipped Circuit Packs, [2-55](#)
 Check for Out-of-Service Circuit Packs, [2-56](#)
 Check Impedance Setting, [2-49](#)
 Check Time-Clock Utilities, [2-45](#)
 Circuit Pack Failures, [1-60](#)
 Circuit Pack Installation, Check, [2-8](#)
 Circuit Pack, Check ECCN/CCN Circuit Pack Installation,
 [2-18](#)
 Circuit Packs, Install ECCN, [3-23](#)
 Circuit Packs, Install Multibay CCN, [3-26](#)
 Circuit Packs, Install Synchronizer, [3-8](#)
 Circuit Packs, Removing and Installing, [7-8](#)
 Circuit Packs, Single-Bay CCN Install, [3-28](#)
 Clear 2-Mbit/s Test Access
 Establish/Change Connection, [4-33](#)
 Mapped, [4-34](#)
 Modes, [4-25](#)
 Release Connection, [4-34](#)
 Unmapped, [4-34](#)
 Clear-2 Mb/s, Cross-Connect or Disconnect, [5-20](#)
 Clear-DS1 Test Access
 Change Termination State, [4-20](#)

- Establish Connection, 4-20
- Modes, 4-20
- Code Violation Count (CV), 8-3
- Command Denials, Clear, A-2
- Command Grouping, 6-6
- Command Groups, 2-39
- Command Prioritization, 2-38
- Command Priority, Change, 6-9
- Commands
 - Restricted Maintenance, 2-41
- Commands and Messages, 1-85
 - Aborting, 1-91
 - Addressing Levels, 1-101
 - Delimiters, 1-88
 - DSP Application Commands, 1-90
 - Input Command Acknowledgement, 1-103
 - Input Command Control Characters, 1-102
 - Input Command Format, 1-92
 - Keywords, 1-93
 - Menu/Prompt Mode, 1-89
 - MML Language, 1-85
 - Output Messages, 1-104 1-113
 - PDS Language, 1-85
 - Using the Commands, 1-88
 - Verbs, 1-94
- Common Equipment Circuit Blocks, 1-42
 - Block Communication, 1-44
 - Expanded Circuit Blocks, 1-42
 - Main and Secondary Controllers, 1-44
 - Protection, 1-42
 - Redundancy, 1-42
 - System Architecture, 1-43
- Completion Message, 1-104 1-108 1-113
 - Macro Component Completion Messages, 2-42
- Conference Bridge Parameters, 5-18
- Configure Sync Mode, 3-12
- Connections, Check Link, 3-111
- Controlled Slip Seconds (CSS), 8-4
- CPR Pack, Disconnect from, 9-5
- CPU Circuit Packs, Grow, 3-71
- CPU Circuit Packs, Install, 3-71
- CRC Block Error Count, 8-3
- Cross-Connect 64-kb/s Signals, 5-4
- Cross-Connect Clear-2 Mb/s Signals, 5-20
- Cross-Connect DS0 (Including SLC Carrier), 5-3
- Cross-connect Function, 1-41
- Cross-Connect Network
 - Types, 1-55
- Cross-Connect Networks, 1-54
- Cross-Connect Operation, Check, 2-52
- Cross-Connect Test Using Unassigned Voice Terminal, Random, 2-53
- Cross-Connect Tests Using DATS, Make Random, 2-52
- Cross-connected Circuits, Check, 2-57
- Cross-Connection
 - Change Termination State, 5-23
 - Channel Ranges, 5-4 5-8
 - DMB Circuits, 5-12
 - Multipoint Channel Numbers, 5-14
 - Signaling Conversion, 5-5 5-9

- Trunk Conditioning, 5-5 5-9 5-14 5-17
- Virtual Circuits, 5-13
- Cross-connection
 - Redundancy and Protection, 1-55
 - TSI/ETSI Operations, 1-54
 - Types, 1-54
- Cross-Connection Keywords, 5-1
- Cross-Connections
 - Re-Direct, 5-25
 - Timeslot 0, 5-31
- Cross-connections
 - DSP Application, 5-39
- CSS, Controlled Slip Seconds, 8-4
- Customizing Alarm Severities, 1-63
- Customizing Intervention Levels, 1-64
- CV, Code Violation Count, 8-3

D

- DACS II
 - Capacity Expansion Frame, 1-16
 - Commands and Messages, 1-85
 - Switch Bay, 1-18
- DACS II Background
 - 2.048 Mb/s Interface, 1-3
 - Clear-Channel DS1 Test Access, 1-4
 - Components, 1-2
 - Cross-connect Capacity, 1-2
 - DS0 Channels, 1-2
 - DS0 Test Access, 1-4
 - DS3 Feature, 1-3
 - DS3/DS1/DS0 Cross-connections, 1-3
 - Facility Performance, 1-4
 - Gateway, 1-4
 - Hybrid DS3 Feature, 1-3
 - SLC 96 Carrier Configuration, 1-4
 - SLC Feature, 1-4
 - SLC Series 5 Carrier Configuration, 1-4
 - Subrate Capacity, 1-3
 - Time Slot Interchange, 1-3
- DACS II Frame Configurations, 1-5
- DACS II Overview, 1-1
- DACS II Physical Description, 1-5
- Database Archiving
 - Archive Card, 7-4
 - Benefit, 7-4
 - Mirroring Process, 7-4
- Degrow DSPU, 3-74
- Degrow ECCN/CCN, 3-30
- Degrow FTU/IFTU, 3-70
- Degrow IFTU/FTU, 3-70
- Degrow NPC, 3-102
- Degrow NPC, Overview, 3-102
- Denial Message, 1-104 1-110 1-113
- Denials, Clear Command, A-2
- Digital Signal Processing Interface, 1-45
- Digital Signal Processing Unit, 1-35

- C-Bit Circuit Packs, [1-36](#)
- Circuit Packs, [1-36](#)
- DMB Circuit Packs, [1-36](#)
- MJU Circuit Packs, [1-36](#)
- SRM Circuit Packs, [1-36](#)
- Digital Signal Processing Units, [1-58](#)
 - C-Bit Circuits, [1-59](#)
 - DMB Circuits, [1-58](#)
 - Subrate Circuits, [1-59](#)
- Director Functions, [9-4](#)
- Disconnect 64-kb/s Signals, [5-4](#)
- Disconnect Broadcast Circuits, [5-24](#)
- Disconnect Broadcast TS0, [5-38](#)
- Disconnect Clear-2 Mb/s Signals, [5-20](#)
- Disconnect Cross-Connected Circuit, [5-19](#)
- Disconnect from CPR Pack, [9-5](#)
- Disconnect Two-way TS0 Circuit, [5-37](#)
- DMB Circuits
 - Bridge Configurations, [1-59](#)
- DPC/EDPC Monitor Jacks
 - TG182 Card, [4-5](#)
 - TG185 Card, [4-5](#)
 - TG187 Card, [4-5](#)
 - TG192 Card, [4-6](#)
- DS0 Signals
 - Re-Direct, [5-25](#)
- DS0 Test Access
 - Change Termination State, [4-19](#)
 - Establish Connection, [4-18](#)
 - Mapped, [4-18](#)
 - Release Connection, [4-19](#)
 - Trunk Condition Considerations, [4-19](#)
 - Unmapped, [4-18](#)
- DS1 Equalizer Value, Change, [3-72](#)
- DS1 signals
 - Redirecting to a Network Element, [5-29](#)
 - Redirecting to a Non-Network Element, [5-30](#)
- DS3U/HDS3U
 - Restore NPCs, [3-92](#)
- DSP
 - Application Card Error Recovery, [1-82](#)
 - Applications, [1-80](#)
 - Broadcast TS0, [1-84](#)
 - Broadcast TS0 Test Access, [1-84](#)
 - Connections, [1-79](#)
 - Processing, [1-80](#)
 - Supported Application Cross-connections, [1-81](#)
 - Test Access, [1-83](#)
 - Time Slots, [1-81](#)
- DSP Application
 - Cross-connections, [5-39](#)
- DSP Application Cross-connections, Change, [5-39](#)
- DSP Application Disconnections, [5-39](#)
- DSP Application Test Access, [4-20](#)
- DSP Applications Supported, [1-91](#)
- DSP NPC Circuit Packs (DMB or Subrate -- SRM, MJU),
 - Install, [3-93](#)
- DSP NPC, Grow, [3-93](#)
- DSP Platform, [1-79](#)
- DSP Platform Application-to-Application Cross-Connections,

- [5-40](#)
- DSPI Circuit Packs, Grow, [3-71](#)
- DSPI Circuit Packs, Install, [3-71](#)
- DSPU
 - Change DS1 Equalizer Value, [3-72](#)
 - Change DS1 Equalizer Value on 19.2-kb/s MJU Card, [3-73](#)
 - Circuit Pack Positions, [2-37](#)
 - Degrow, [3-74](#)
 - Grow, [3-72](#)
 - Install DSPI and CPU Circuit Packs, [3-71](#)
 - Remove, [3-74](#)
 - Restore DSPI, [3-72](#)
 - Restore ECCN/CCN, [3-72](#)
 - Restore UC, [3-72](#)
- DSPU Circuit Pack Installation, Check, [2-36](#) [2-37](#)
- DSPU, Grow, [3-72](#)
- DSPU, Remove and Degrow, [3-74](#)

E

- E1 Signals
 - Re-Direct, [5-27](#)
- ECCN
 - Circuit Pack Location, [3-25](#)
 - ETSI Cards, [3-25](#)
 - Install Circuit Packs, [3-23](#)
 - Location on Frame, [3-24](#)
- ECCN and CCN, Restore, [3-68](#)
- ECCN Circuit Packs, Install, [3-23](#)
- ECCN/CCN
 - Alarm Indication, [3-30](#)
 - Check Circuit Pack Installation, [2-18](#)
 - Degrow, [3-30](#)
 - Remove, [3-30](#)
- ECCN/CCN Circuit Pack Installation, Check, [2-18](#)
- ECCN/CCN, Remove and Degrow, [3-30](#)
- ECCNs for CEFs, [1-56](#)
- End-to-End Alarm Tests, Perform, [3-105](#)
- End-to-End Tone Tests, Perform, [3-105](#)
- Enter Change Cross-Connect Command, [5-18](#)
- Entity Identification, [1-101](#)
- Equalizer (DS1) Value on 19.2-kb/s MJU Plug-in, Change, [3-73](#)
- Equalizer Value, Change DS1, [3-72](#)
- Equipment Precautions, [1-123](#)
 - Circuit Pack Damage, [1-124](#)
 - Circuit Pack Series Version, [1-125](#)
 - Electrical Discharges, [1-123](#)
 - Removing and Installing Circuit Packs, [1-124](#)
- Equipped Circuit Packs, Check, [2-55](#)
- Errored Seconds (ES), [8-4](#)
- Errored Seconds Ratio (ESR), [8-6](#)
- ES, Errored Seconds, [8-4](#)
- ESR, Errored Seconds Ratio, [8-6](#)
- Establish
 - NPC Test Ports and Groups, [4-4](#)

Test Access Facility, [4-4](#)
 Establish 2.048-Mb/s Facility, [3-103](#)
 Establish DS1 Facility
 Check Status, [3-105](#)
 End-to-End Alarm Tests, [3-105](#)
 Expanded Time Slot Interchange, [1-54](#)

F

Facility Access Digroups, [1-31](#)
 Facility Access Digroups (FADs), [4-24](#)
 Facility Data Link Communications Protocol, [2-42](#)
 Facility Loopback for TE or TH Type NPC within a Hybrid DS3, [8-16](#)
 Facility Performance Alarms, [1-62](#)
 Facility Protection Switching, [1-60](#)
 Facility Report Utilities, Check and Set, [2-45](#)
 Facility Status, Check, [3-105](#)
 Failures, Circuit Pack, [1-60](#)
 Far, [8-7](#)
 Far-End Error Count (FEBE), [8-7](#)
 Far-End Errored Seconds (FES), [8-7](#)
 Far-End Severely Errored Seconds (FSSES), [8-7](#)
 Far-End Unavailable Seconds (FUAS), [8-7](#)
 FCs, Restore, [3-69](#)
 Feature Functions, [1-68](#)
 Feature Setup, Check, [2-38](#)
 FEBE, Far-End Error Count, [8-7](#)
 FER, Framing Error Count, [8-3](#)
 FES, Far-End Errored Seconds, [8-7](#)
 Frame, [5-32](#)
 Bay Numbering, [3-6](#)
 Configure, [3-4](#)
 Configure Main Menu, [3-5](#)
 Grow Frame ID, [3-7](#)
 NPC Addressing, [3-5](#)
 Review Setup, [2-38](#)
 Unit Types, [3-6](#)
 Frame Administrator Functions, [6-4](#)
 Frame Alarm Indications, [1-60](#)
 Frame Configurations
 Capacity Expansion Frame, [1-16](#)
 Multi-Frame, [1-5](#)
 Multi-Frame Units, [1-6](#)
 Single-Bay, [1-15](#)
 Unit Components, [1-7](#) [1-15](#)
 Frame ID, Grow, [3-7](#)
 Frame Setup, Check, [2-38](#)
 Frame Setup, Review, [2-38](#)
 Frame Word, [5-32](#)
 Frame, Configure, [3-4](#)
 Framing and Signaling Formats, [1-52](#)
 Framing Error Count (FER), [8-3](#)
 FSSES, Far-End Severely Errored Seconds, [8-7](#)
 FTM Circuit Packs (FTMIs and FCs), Install, [3-61](#)
 FTM Circuit Packs, Install (FTMIs and FCs), [3-61](#)
 FTMI, Grow, [3-69](#)

FTMI, Restore, [3-69](#)
 FTU
 Check Circuit Pack Installation, [2-12](#)
 Communication and Control, [1-52](#)
 Types, [2-12](#)
 Unit and FTMI Numbering, [2-15](#)
 FTU Circuit Pack Installation, Check, [2-12](#)
 FTU, Grow, [3-68](#)
 FTU/IFTU, [1-31](#)
 Degrow, [3-70](#)
 Facility Terminating Modules, [1-31](#)
 Grow, [3-68](#)
 Grow FTMI, [3-69](#)
 NPC Codes and Types, [3-65](#)
 NPC Locations, [3-65](#)
 Remove, [3-70](#)
 Restore ECCN and CCN, [3-68](#)
 Restore FTMI and FCs, [3-69](#)
 Restore UC, [3-68](#)
 Test Ports, [1-31](#)
 FUAS, Far-End Unavailable Seconds, [8-7](#)
 Functional Description, [1-41](#)
 Fuse Panel, CEF Switch Bay,, [1-29](#)
 Fuses
 Check Circuit Pack Installation, [2-22](#)
 Fuses, Check, [2-22](#)
 Fuses, Install Single-Bay, [3-55](#)
 Fuses, Multibay Install, [3-43](#)

G

Gateway, [1-69](#)
 Gateway Feature, [1-68](#)
 Gateway IFTU2, [1-68](#)
 Grow
 DSP NPCs (DMB or CPR), [3-93](#)
 Grow and Restore DSPU, Install, [3-71](#)
 Grow and Restore FTU/IFTU, Plugs-Ins Install, [3-61](#)
 Grow Circuit Packs and Restore DSPU NPC, Install, [3-93](#)
 Grow Sync Timebase, [3-12](#)

H

HDS3U
 Facility Loopback Activate, [8-16](#)
 TH-Type NPCs, [3-89](#)
 Hub Test Access
 Test Activity, [4-36](#)
 Trunk Conditioning Considerations, [4-36](#)
 HuMan-Machine Language (MML), [2-42](#)
 Hybrid DS3 Termination Feature, [1-70](#)
 Hybrid DS3U
 Capacity, [1-70](#)
 Circuit Packs, [1-71](#)
 FLI Pack, [1-72](#)

HFMT Pack, [1-75](#)
 HMXR Pack, [1-73](#)
 Protection Switching, [1-76](#)

I

ID, Grow Frame, [3-7](#)
 IFTU, Grow, [3-68](#)
 IFTU/FTU, Remove and Degrow, [3-70](#)
 Impedance Setting
 Check, [2-49](#)
 Impedance Setting, Change 2.048-Mb/s, [2-49](#)
 Impedance Setting, Check, [2-49](#)
 Initialize Alarms, [2-44](#)
 Input Command Priority, Change, [3-116](#) [6-9](#)
 Inspection, Visual, [2-4](#) [2-7](#)
 Install
 DSP NPC Circuit Packs, [3-93](#)
 DSP NPC Circuit Packs (DMB or Subrate -- SRM, MJU),
 [3-93](#)
 Install FTM Circuit Packs (FTMIs and FCs), [3-61](#)
 Install Multibay Power Units and Fuses, [3-43](#)
 Install Single-Bay Power Units and Fuses, [3-55](#)
 Installation
 Software Installation Procedure (New Frame), [7-3](#)
 Installation, Check Circuit Pack, [2-8](#)
 Installation, Check DSPU Circuit Pack, [2-36](#) [2-37](#)
 Installation, Check ECCN/CCN Circuit Pack, [2-18](#)
 Installation, Check FTU Circuit Pack, [2-12](#)
 Installation, Check Main Controller, [2-9](#)
 Installation, Check Sync Circuit Pack, [2-10](#) [2-11](#)
 Installing Circuit Packs, [7-8](#)
 Integrated Test Set, [1-41](#)
 Circuit Pack, [1-41](#)
 Integrated Test Set (ITS), [4-39](#)
 Bit Errors, [4-44](#)
 Circuit Pack, [4-39](#)
 Error Performance Parameters, [4-46](#)
 Installing/Growing NPCs, [4-40](#)
 Supported Circuit Types, [4-39](#)
 Test Access Modes, [4-41](#)
 Test Groups, [4-40](#)
 Test Monitoring Duration, [4-46](#)
 Test Pattern Loss, [4-45](#)
 Test Pattern Resynchronization, [4-45](#)
 Test Pattern Synchronization, [4-45](#)
 Test Patterns, [4-44](#)
 Test Signal Generation, [4-44](#)
 Test Signal Monitoring, [4-45](#)
 Interface Bay
 Facility Terminating Module Interface (FTMI), [1-31](#)
 Format Converter, [1-31](#)
 Interface Bay, Digital Signal Processing Unit, [1-35](#) [1-36](#)
 Interface Bays, [1-30](#)
 Power and Control Unit, [1-30](#)
 Internal Synchronization, [1-47](#)
 Intervention Level, [1-64](#)

Change, [6-29](#)
 Display Status, [6-30](#)
 Display Values, [6-30](#)
 Set, [6-29](#)
 IW, Change, [3-96](#)

L

Language, Change Message Language, [6-10](#)
 Link
 Review Setup, [2-38](#)
 Setup Options, [2-39](#)
 Link Connections, Check, [3-111](#)
 Link Language, [2-42](#)
 FDL, [2-42](#)
 MML, [2-42](#)
 PDS, [2-42](#)
 Link Language, Change, [3-116](#)
 Link Privilege, Remove, [2-42](#)
 Link Removal Permission, Change, [6-11](#)
 Link Setup, Check, [2-39](#)
 Link Setup, Review, [2-38](#)
 Links
 Adapters, [3-111](#)
 Changing/Viewing Parameters, [3-114](#)
 Data Sets, [3-111](#)
 Input Command Priority, [3-116](#)
 Language, [3-117](#)
 NPC Numbering Scheme, [3-117](#)
 Output Message Screening, [3-118](#)
 Unused Links, [3-112](#)
 Login and Password, [6-4](#)
 Loopback Test Access
 Test Activity, [4-38](#)
 Trunk Conditioning Considerations, [4-38](#)
 Loops, Remove, [3-104](#)

M

Macro
 Execute Macro Package, [6-22](#)
 Macro Storage Space
 Change, [6-11](#)
 Macros
 Create/Edit, [6-19](#)
 Creating Tips, [6-20](#)
 Delete Macro, [6-23](#)
 Execute, [6-23](#)
 Naming Rules, [6-20](#)
 Query Macro Information, [6-23](#)
 Sample 1, [6-21](#)
 Sample 2, [6-22](#)
 Universal, [6-19](#)
 Main Controller
 Circuit Packs, [1-45](#)

Main Controller Installation, Check, [2-9](#)
 Main Controller, Original Switch Bay, [1-20](#)
 Maintenance
 Circuit Pack Handling Cautions, [7-8](#)
 Database Archiving, [7-4](#)
 Memory Card Failure Recovery, [7-6](#)
 Remove and Install Circuit Packs, [7-8](#)
 Repair and Replacement, [7-8](#)
 Software Installation, [7-3](#)
 Upgrade CI to ICI, [7-9](#)
 Upgrade EMTC to EMTC2, [7-9](#)
 Upgrade/Replace Circuit Packs, [7-9](#)
 Make Random Cross-connect Tests
 Using a Digital Access Test Set, [2-52](#)
 Using Unassigned Voice Terminal, [2-53](#)
 Make Wiring Connections, [3-104](#)
 Map
 Create Alternate Map, [6-14](#) [6-15](#)
 Delete Alternate Map, [6-18](#)
 Edit Alternate/Reference Map, [6-17](#)
 Map Storage Space
 Change, [6-11](#)
 Memory Card
 Backups, [1-126](#)
 Off-Site Backup Storage, [1-126](#)
 Rotating, [1-126](#)
 Tolerations, [1-126](#)
 Memory Card Backup Strategy, [1-126](#)
 Memory Card Failure Recovery
 Diagnostic Tests, [7-6](#)
 Test Results and Action Items, [7-7](#)
 MER, Multiframe Alignment Error Count, [8-5](#)
 Message Language, Change, [6-10](#)
 Message Screening
 Change, [6-11](#)
 MML Message Logging, [6-24](#)
 Clear Log, [6-24](#)
 Display Log Numbers, [6-24](#)
 Retrieve Messages from Log, [6-24](#)
 Set Feature, [6-24](#)
 Monitoring, Change or Query TSO Bit, [3-100](#)
 Multibay CCN Circuit Packs, Install, [3-26](#)
 Multibay Circuit Pack Installation, Check, [2-18](#)
 Multibay Power Unit and Fuses
 Fuse Codes and Quantities, [3-44](#)
 Multibay Power Units and Fuses, Install, [3-43](#)
 Multiframe Alignment Error Count (MER), [8-5](#)

N

NAM Keyword, [5-11](#) [5-16](#)
 Near-End 2.048-Mb/s Error Count, [8-3](#)
 Near-End 2.048-Mb/s Error Ratio Parameters, [8-6](#)
 Near-End 2.048-Mb/s Errored Intervals, [8-4](#)
 Network Element
 Redirecting DS1 signals, [5-29](#)
 NFW Spare Bit Meanings, [5-36](#)

No A-Law and Mu-Law Conversions, [1-69](#)
 Non-Frame Word, [5-32](#)
 Non-Network Element
 Redirecting DS1 signals, [5-30](#)
 Nonvolatile Memories, [1-46](#)
 NPC
 Change Alarm Threshold, [3-97](#)
 Change Parameters, [3-96](#)
 Change TSO Alarm Indicator, [3-101](#)
 DSP Application NPCs, [3-88](#)
 Options, [3-75](#)
 PA-Type NPCs, [3-84](#)
 PB/PC-Type Facility Parameters, [3-81](#)
 PB/PC-Type NPC, [3-80](#)
 Query or Change TSO Bit Monitoring, [3-100](#)
 Remove Cross-connected, [3-102](#)
 Set Optional Alarm Threshold in Data Base, [3-75](#)
 NPC Addressing, [1-114](#) [2-42](#)
 Change, [6-10](#)
 NPC Addressing, Change, [3-116](#) [6-10](#)
 NPC Numbering
 Hierarchical, [1-114](#)
 Non-Hierarchical, [1-114](#)
 NPC Parameters, Change, [3-96](#)
 NPC TSO Alarm Indicator, Change, [3-101](#)
 NPC Type, Change, [3-96](#)
 NPC, Remove and Degrow, [3-102](#)
 NPC, Restore, [3-88](#)
 NPCs, [1-31](#)
 DDCs, [1-53](#)
 DPCs, [1-53](#)
 Line Interface Equalizer, [1-53](#)
 Pulse Code Modulation, [1-53](#)
 Redundancy and Protection, [1-53](#)
 NPCs, Restore, [3-92](#)
 NPCTPs, [1-31](#)
 Nx64 Kbit/s Test Access
 Change Termination State, [4-23](#)
 Establish Connection, [4-22](#)
 Mapped, [4-22](#)
 Release Connection, [4-23](#)
 Trunk Conditioning Considerations, [4-22](#)
 Unmapped, [4-22](#)

O

OFS, Out-of-Frame Second, [8-4](#)
 One-Way Multipoint Circuit, [5-16](#)
 On-Line Help, [1-115](#)
 Constructing an Entire Command, [1-117](#) [1-123](#)
 Obtaining Help in the Middle of Command Construction, [1-120](#) [1-123](#)
 Optional Alarm Threshold in Data Base, Set, [3-75](#)
 Original Switch Bay, [1-18](#)
 Communications Interface, [1-20](#)
 Cross-connect Buffer, [1-19](#)
 Cross-connect Network, [1-19](#)

- Cross-Connect Power Unit, [1-21](#)
- Digital Phase-Locked Loop, [1-20](#)
- Fuse and Alarm Panel, [1-22](#)
- Status Panel, [1-21](#)
- Synchronizer and Main Controller, [1-20](#)
- Synchronizer Power Units, [1-20](#)
- Time Base, [1-20](#)
- Original Switch Bay Cross-Connect Power Unit, [1-21](#)
- Original Switch Bay, Main Controller, [1-20](#)
- Out-of-Frame Second (OFS), [8-4](#)
- Out-of-Service Circuit Packs, Check, [2-56](#)
- Output Message Screening, [2-38](#)
 - Change, [6-11](#)
- Output Message Screening, Change, [3-116](#) [6-11](#)
- Output Messages, [1-104](#) [1-113](#)
 - Alarm Code Severity, [1-112](#)
 - Correlation Tag, [1-106](#)
 - Header Line, [1-105](#)
 - Primary Line, [1-106](#)
 - Priority of Action, [1-106](#) [1-113](#)
 - Secondary Lines, [1-107](#)
 - Segment, [1-107](#)

P

- Parameters, Change NPC, [3-96](#)
- Password
 - Change Password, [6-13](#)
 - Forgotten Password, [6-9](#)
- PCMCIA Cards, [1-46](#)
- Perform End-to-End Tone Tests, [3-105](#)
- Performance Monitoring Data, [8-12](#)
- Performance Monitoring Report
 - Scheduling, [8-11](#)
- Performance Parameter Thresholds
 - Change, [8-8](#)
- Performance Parameters
 - 2.048-Mb/s, [8-3](#)
- Physical Description, [1-5](#)
- Plugs-Ins, Grow and Restore FTU/IFTU, Install, [3-61](#)
- PMEM, [1-46](#)
- Polling Data Bridge, [1-59](#)
- Power
 - Distribution, [1-66](#)
 - ECCN, [1-67](#)
 - LEDs, [1-66](#)
 - Protection Mechanisms, [1-66](#)
 - Redundancy and Protection, [1-67](#)
- Power Unit Locations
 - CEF, [3-31](#)
 - Multibay, [3-43](#)
 - Single-Bay, [3-55](#)
- Power Units
 - Check Circuit Pack Installation, [2-22](#)
- Power Units and Fuses, Check, [2-22](#)
- Power Units, Check, [2-22](#)
- Power Units, Install Single-Bay, [3-55](#)

- Power Units, Multibay Install, [3-43](#)
- Powering, [1-66](#)
- Priority Level, [2-39](#)
- Priority, Change Input Command Priority, [6-9](#)
- Program Documentation Standards (PDS), [2-42](#)
- Provisioning
 - CCN/ECCN Unit, [3-23](#)
 - Change Input Command Priority, [3-116](#)
 - Change Link Language, [3-116](#)
 - Change NPC Addressing, [3-116](#)
 - Change Output Message Screening, [3-116](#)
 - Check Link Connections, [3-111](#)
 - Check NPC Timing Option Wiring, [3-11](#)
 - Frame, [3-4](#)
 - Grow DSP Platform Application NPC, [3-88](#)
 - Grow Synchronizer Timebase, [3-12](#)
 - Initialize, Set Type and Rate Characteristics, [3-113](#)
 - Install Circuit Packs, Grow and Restore DSPU, [3-71](#)
 - Install Circuit Packs, Grow and Restore IFTU2 NPC, [3-80](#)
 - Install Grow Circuit Packs and Restore DSPU NPC, [3-93](#)
 - Install Multibay CCN Circuit Packs, [3-26](#)
 - Install Plugs-Ins, Grow and Restore FTU/IFTU, [3-61](#)
 - Install Single-Bay CCN Circuit Packs, [3-28](#)
 - Order Performed, [3-1](#)
 - Synchronizer, [3-8](#)
 - Units, [3-31](#)
- Pseudo Channel Number, [5-40](#)

Q

- Query Commands, Enter C-Bit, [9-4](#)

R

- Recovery
 - Lost DAX Password, [6-6](#)
- Recovery Procedure
 - Memory Card Failure, [7-6](#) [7-8](#) [7-9](#)
- Register, Check Status, [2-43](#) [2-44](#)
- Remove and Degrow DSPU, [3-74](#)
- Remove and Degrow ECCN/CCN, [3-30](#)
- Remove and Degrow FTU/IFTU, [3-70](#)
- Remove and Degrow NPC, [3-102](#)
- Remove Cross-connected NPCs, [3-102](#)
- Remove DSPU, [3-74](#)
- Remove ECCN/CCN, [3-30](#)
- Remove Link Privilege, [2-42](#)
- Remove Loops, [3-104](#)
- Remove NPC, Overview, [3-102](#)
- Restore
 - DS3U/HDS3U NPCs, [3-92](#)
 - DSPU NPC, [3-95](#)
 - IFTU2 NPC, [3-88](#)
- Restore Sync, [3-12](#)
- Restricted Maintenance, [2-41](#) [6-10](#)

Retrieve Alternate Map Information, [6-18](#)
 Retrieve Macro Information, [6-23](#)
 rr Parameter, [8-9](#)

S

Screening
 Change Output Message Screening, [6-11](#)
 Options, [2-41](#)
 Screening Options, [6-6](#)
 Screening, Output Message, [2-38](#)
 SES, Severely Errored Seconds, [8-5](#)
 SESR, Severely Errored Seconds Ratio, [8-6](#)
 Set Facility Report Utilities, [2-45](#)
 Set Optional Alarm Threshold in Data Base, [3-75](#)
 Set Time-Clock Utilities, [2-45](#)
 Set Type and Rate Characteristics, [3-113](#)
 Setup, Review Frame and Link, [2-38](#)
 Severely Errored Seconds (SES), [8-5](#)
 Severely Errored Seconds Ratio (SESR), [8-6](#)
 Single Bay, [1-37](#), [1-39](#) [1-40](#)
 Cross-connect Network, [1-39](#)
 Fuse and Alarm Panel, [1-40](#)
 Unit Numbering, [1-39](#)
 Single-Bay CCN Circuit Packs, Install, [3-28](#)
 Single-Bay Circuit Pack Installation, [2-21](#)
 Single-Bay Frame, [1-15](#)
 Single-Bay Power Unit and Fuse Codes and Quantities, [3-56](#)
 Single-Bay Power Unit and Fuses
 Fuse Codes and Quantities, [3-56](#)
 Single-Bay Power Units and Fuses, Install, [3-55](#)
 SMEM, [1-46](#)
 Software Installation
 DSP Applications, [7-3](#)
 New Release, [7-3](#)
 Software Setup, Check, [2-38](#)
 Status Panel
 Alarm Classifications, [1-65](#)
 Switches, [1-65](#)
 Status Panel Functions, [1-65](#)
 Status Panel, CEF Switch Bay, [1-28](#)
 Status Panel, Original Switch Bay, [1-21](#)
 Status Register, Check, [2-43](#) [2-44](#)
 Storage Space
 Change Macro/Map Storage Space, [6-11](#)
 Stratum, Change Synchronizer Time Base, [3-22](#)
 Substrate Test Access
 Multipoint, Monitor Mode, [4-20](#)
 Multipoint, Split Mode, [4-20](#)
 Release Connection, [4-20](#)
 Two-Point, Monitor Mode, [4-20](#)
 Two-Point, Split Mode, [4-20](#)
 Switch Bay, [1-18](#)
 Switch Return Leg of Broadcast Circuit, [5-22](#)
 Symmetrical Bridge, [1-59](#)
 Sync Circuit Pack Installation, Check, [2-10](#) [2-11](#)

Sync Status, Query, [3-16](#)
 Sync TLIs, Grow and Restore, [3-13](#)
 Synchronization, Internal, [1-47](#)
 Synchronizer
 Add/Change Timing Link Interface, [3-20](#)
 Change Time Base Stratum, [3-22](#)
 Check NPC Timing Option Wiring, [3-11](#)
 Circuit Packs, [2-10](#) [2-11](#)
 Grow and Restore Sync TLIs, [3-13](#)
 Grow Sync Timebase, Configure Sync Mode, and Restore Sync, [3-12](#)
 Install Circuit Packs, [3-8](#)
 Options, [3-9](#)
 Query Status, [3-16](#)
 Status Output, [2-51](#) [3-16](#)
 Status Register, [3-17](#)
 Sync Port (SSP) Status Register, [3-21](#)
 Time Base, [3-9](#)
 Timing Link Interface (TLI), [3-10](#)
 TLI Growth Options, [3-14](#)
 TLI Slots, [3-19](#)
 TLI Status Register, [3-20](#)
 Synchronizer Circuit Packs, Install, [3-8](#)
 Synchronizer Control, [1-48](#)
 Synchronizer Timing Link Interface, Add/Change, [3-20](#)
 Synchronizer, Change Time Base Stratum, [3-22](#)
 Synchronizer, Original Switch Bay, [1-20](#)

T

Target Identification, [1-101](#)
 Termination Level Point, [5-18](#)
 Termination or Conference Bridge Parameters, Change, [5-18](#)
 Termination State, [5-18](#)
 Test Access
 800-Series DSX Bay, [4-9](#)
 Cross-connections Between Subject Jack Sets, [4-8](#)
 DPC/EDPC Monitor Jacks, [4-5](#)
 DSP Application, [1-83](#)
 DSP Application Connections, [4-20](#)
 Establishing an NPCTP or NPCTG, [4-10](#)
 Introduction, [4-1](#)
 Make Cross-connections at the Line Interface Bay, [4-7](#)
 Make DSX-1 Cross-connections, [4-7](#)
 Test Port Provisioning, [4-11](#)
 Test Port/Test Group Modes, [4-12](#)
 Test Access Digroup (TAD), [4-16](#)
 Test Access Facility, [4-4](#)
 Test Access Function, [1-41](#)
 Using External Test Equipment, [1-41](#)
 Using the Integrated Test Set, [1-41](#)
 Test Access Primary (TAP), [4-16](#)
 Test Alarm Operation, [2-44](#)
 Test Connections
 Clear 2-Mbit/s, [4-24](#)
 Clear-DS1, [4-20](#)

DS0, [4-17](#)
 Hub Test Access, [4-35](#)
 Loopback Test Access, [4-37](#)
 Subrate DS0A or DS0B, [4-20](#)
 Test Group (Nx64 Kbit/s), [4-22](#)
 Test Group
 Provisioning, [4-13](#)
 Test Groups
 Growth, [4-16](#)
 Trunk Conditioning Considerations, [4-16](#)
 Test Ports
 Growth, [4-14](#)
 Numbering, [4-15](#)
 Trunk Conditioning Considerations, [4-14](#)
 Time Base Stratum, Change Synchronizer, [3-22](#)
 Time-Clock Utilities, Check and Set, [2-45](#)
 Timeslot 0, [5-31](#)
 Change Monitoring, [5-34](#)
 Change NFW Bits, [5-36](#)
 Change Spare Bits, [5-35](#)
 Timeslot 0 Cross-Connections, [5-31](#)
 Timeslot 0 Monitoring, [5-34](#)
 Timeslot 0 Spare Bits, [5-35](#)
 Timing
 for Incoming Signals, [1-49](#)
 from 2.048 Mb/s Line Signals, [1-49](#)
 Timing Distributor, [1-50](#)
 Timing Link Interface, Add/Change Synchronizer, [3-20](#)
 Timing Link Signals, [1-49](#)
 Timing Modes
 Master, [1-48](#)
 Slaved, [1-48](#)
 Timing Option Wiring, Check NPC, [2-50](#) [3-11](#)
 Timing References, [1-48](#)
 TLIs, Grow and Restore Sync, [3-13](#)
 TS0, [5-31](#)
 Disconnect Broadcast Circuit, [5-38](#)
 Disconnect Two-way Circuit, [5-37](#)
 TS0 (Time Slot 0), [3-100](#)
 TS0 Alarm Indicator, Change NPC, [3-101](#)
 TS0 Bit Monitoring, Change or Query, [3-100](#)
 TS0 Spare Bit Meanings, [5-35](#)
 TS0 Timeslot
 Two-Way Cross-Connections, [5-32](#)
 TS0M Spare Bit Meanings, [5-34](#)
 TS16 Performance, [8-5](#)
 Two-Point Gateway Circuit, [5-8](#)
 Two-Point Two-Way or One-Way Circuit, [5-4](#)
 Two-Point, One-Way Circuit, [5-20](#)
 Two-Point, Two-Way Circuit, [5-20](#)
 Two-Way Multipoint Circuit, [5-11](#)

Unavailable Seconds (UAS), [8-5](#)
 Unavailable Time Count, [8-3](#)
 Unit Bus Extender, [1-45](#)
 Unit Controller, [1-45](#)
 Units
 Install CEF (Capacity Expansion Frame) Power Units and
 Fuses, [3-31](#)
 Units and Fuses, Check Power, [2-22](#)
 User Priority Levels, [6-6](#)
 Using a Digital Access Test Set, [2-52](#)
 Using Unassigned Voice Terminal, [2-53](#)
 Utilities, Check and Set Facility Report, [2-45](#)
 Utilities, Check and Set Time-Clock, [2-45](#)

V

Virtual NPC Broadcast, [5-17](#)
 Visual Inspection, Perform, [2-4](#) [2-7](#)

W

Wiring Connections, Make, [3-104](#)
 Wiring, Check NPC Timing Option, [2-50](#)

U

UAS, Unavailable Seconds, [8-5](#)
 Unassigned Voice Terminal, Cross-Connect Test Using
 Random, [2-53](#)



DACS II
Release 9.0, MML
2.048-Mb/s Interface
Operations and Maintenance
Volume II - General Tasks

365-353-291
Issue 1.0
October 1999

Copyright © 1999 Lucent Technologies

All Rights Reserved

Printed in U.S.A

This material is protected by the copyright and trade secret laws of the United States and other countries. It may not be reproduced, distributed or altered in any fashion by any entity (either internal or external to Lucent Technologies), except in accordance with applicable agreements, contracts, or licensing, without the express written consent of the Customer Training and Information Products organization and the business management owner of the material.

Notice

Every effort was made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

Mandatory Information

Security Statement

In rare instances, unauthorized individuals make connections to the telecommunications network through the use of remote access features. In such event, applicable tariffs require that the customer pay all network charges for traffic. Lucent Technologies cannot be responsible for such charges, and will not make any allowance or give any credit for charges that result from unauthorized access.

Trademarks

5ESS and *SLC*® is a registered trademark of Lucent Technologies.

COMMON LANGUAGE is a registered trademark and CLEI, CLLI, CLCI, and CLFI are trademarks of Bell Communications Research, Inc.

American Express is a registered trademark of American Express Company.

MasterCard is a registered trademark of mastercard International Inc.

Visa is a registered trademark of VISA International Service Association.

Documentation Ordering Information

The ordering number for this document is 365-353-291. To order this document, call the Lucent Technologies Customer Information Center in Indianapolis, Indiana, on 1-888-582-3688. For more ordering information, refer to "How to Order Documentation" in the section "About this Document."

Customer Assistance and Technical Support

Lucent Technologies provides technical assistance 24 hours a day, seven days a week. For technical assistance within the United States, call 1-800-225-RTAC. For technical assistance in Europe, call the Netherlands Technical Support Organization (TSO) at 31-3587-1555. For technical assistance in the Far East, call the Singapore TSO at 65-241-0880. If your country of origin provides local technical support, please contact them directly.

Documentation Support Telephone Number

Lucent Technologies provides a telephone number for you to report errors or to ask questions about the information in this document (i.e., for permission to reproduce or distribute). The support telephone numbers are:

Outside the United States - 1-317-322-6847

Inside the United States - 1-800-645-6759

Acknowledgements

This document was developed by the Lucent Technologies Customer Training and Information Products Organization.

How Are We Doing?

Title: DACS II Release 9.0, MML, 2.048-Mb/s, Operation and Maintenance
Volume II - General Tasks

Identification No.: 365-353-291 Issue No.: 1 Date: October 1999

Lucent Technologies welcomes your feedback on this Customer Information Product (CIP). Your comments can be of great value in helping us improve our CIPs.

1. Please rate the effectiveness of this CIP in the following areas:

	Excellent	Good	Fair	Poor	Not Applicable
Ease of Use					////////////////
Clarity					////////////////
Completeness					////////////////
Accuracy					////////////////
Organization					////////////////
Appearance					////////////////
Examples					
Illustrations					
Overall Satisfaction					////////////////

2. Please check the ways you feel we could improve this CIP.

☐ Improve the overview/introduction	☐ Make it more concise/brief
☐ Improve the table of contents	☐ Add more step-by-step procedures/tutorials
☐ Improve the organization	☐ Add more troubleshooting information
☐ Include more figures	☐ Make it less technical
☐ Add more examples	☐ Add more/better quick reference aids
☐ Add more detail	☐ Improve the index

Please provide details for the suggested improvement. _____

3. What did you like most about this CIP?

4. Feel free to write any comments below or on an attached sheet.

If we may contact you concerning your comments, please complete the following:

Name: _____ Telephone Number: _____

 
Company/Organization: _____ Date: _____

Address: _____


When you have completed this form, please fold, tape and return to address on back
or Fax to: 910 727-3043.

----- Do Not Cut — Fold Here And Tape -----

Lucent Technologies
Bell Labs Innovations



 NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES



BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 1999 GREENSBORO, NC

POSTAGE WILL BE PAID BY ADDRESSEE

DOCUMENTATION SERVICES
2400 Reynolda Road
Winston-Salem, NC 27199-2029



Contents

About This Guide

■ Background	xiii
■ New Features in This Release	xiv
■ How to Use This Manual	xv
■ Manual Contents	xvi
■ Manual Conventions	xxiii
■ Related Documentation	xxiv
■ How to Order Documentation	xxvii
■ How to Comment on This Manual	xxx
■ Electronic Documentation	xxxi

1	[This section intentionally left blank.]	1-i

2	Acceptance General Tasks	2-i
	■ Perform Visual Inspection	GT 2.1-1
	■ Check Circuit Pack Installation	GT 2.2-1
	■ Review Frame and Link Setup	GT 2.3-1
	■ Initialize and Test Alarms	GT 2.4-1
	■ Check and Set Time-Clock, Facility Report Utilities, and Auto Backup Memory	GT 2.5-1
	■ Check NPC Timing Option Wiring	GT 2.6-1
	■ Check Sync Switchover	GT 2.7-1
	■ Check Cross-Connect Operation using a Digital Access Test Set	GT 2.8-1
	■ Check Cross-Connect Operation using an Unassigned Voice Terminal	GT 2.9-1
	■ Check for Equipped, Out-of-Service, or Cross-Connected Circuits	GT 2.10-1

Contents

3	Provisioning General Tasks	3-i
	■ Provisioning a Frame	GT 3.1-1
	■ Installing Synchronizers	GT 3.2-1
	■ Query Sync Status	GT 3.3-1
	■ Add/Change Synchronizer Timing Link Interface	GT 3.4-1
	■ Change Synchronizer Timing Base Stratum	GT 3.5-1
	■ Install ECCN Circuit Packs	GT 3.6-1
	■ Install Multibay CCN Circuit Packs	GT 3.7-1
	■ Install Single-Bay CCN Circuit Packs	GT 3.8-1
	■ Install CEF Power Units and Fuses	GT 3.9-1
	■ Install Multibay Power Units and Fuses	GT 3.10-1
	■ Install Single-Bay Power Units and Fuses	GT 3.11-1
	■ Remove and Degrow ECCN/CCN	GT 3.12-1
	■ Install Plugs-Ins, Grow and Restore FTU/IFTU	GT 3.13-1
	■ Remove and Degrow IFTU/FTU	GT 3.14-1
	■ Provision DSPU	GT 3.15-1
	■ Remove and Degrow DSPU	GT 3.16-1
	■ Set Optional Alarm Threshold in Data Base	GT 3.17-1
	■ Install Circuit Packs and Grow PB/PC NPC (IFTU2 NPC)	GT 3.18-1
	■ Install Circuit Packs and Grow Type PA NPC (IFTU2 NPC)	GT 3.19-1
	■ Install Circuit Packs and Grow Type TH NPC (IFTU2 NPC)	GT 3.20-1
	■ Provision DSP Platform NPC	GT 3.21-1
	■ Install, Grow Circuit Packs and Restore DSPU NPC	GT 3.22-1
	■ Change NPC Type, IW, or AIS	GT 3.23-1
	■ Change Alarm Threshold	GT 3.24-1
	■ Query or Change TS0 Bit Monitoring	GT 3.25-1
	■ Remove and Degrow NPC	GT 3.26-1
	■ Change NPC TS0 Alarm Indicator	GT 3.27-1
	■ Establish 2.048-Mb/s Facility	GT 3.28-1
	■ Provisioning Links	GT 3.29-1

Contents

- Establish IP Address for the ICI Circuit Pack GT [3.30-1](#)
- Establish Telnet Session to the TCP/IP Link on the ICI Circuit Pack GT [3.31-1](#)

4	Test Access General Tasks	4-i
	■ Make Cross-Connections at the Line Interface Bay	GT 4.1-1
	■ Install Plug-Ins, Grow and Restore NPC to Function as NPCTP or NPCTG	GT 4.2-1
	■ 64-kb/s Signals: Connect Hubbed Testport(s) to Local DACS II	GT 4.3-1
	■ 64-kb/s Signals: Looping Back a Test Port	GT 4.4-1
	■ 64-kb/s Signals: Connect Testport to Circuit	GT 4.5-1
	■ 64-kb/s Signals: Release Test Port	GT 4.6-1
	■ Nx64 Kbit/s: Connect Test Group to Circuit	GT 4.7-1
	■ Nx64 Kbit/s: Change Circuit Termination State	GT 4.8-1
	■ Nx64 Kbit/s: Connect Test Group in HUB Mode	GT 4.9-1
	■ Nx64 Kbit/s: Connect Test Group in LOOPED Mode	GT 4.10-1
	■ Nx64 Kbit/s: Release and Degrow Test Group	GT 4.11-1
	■ Clear-2 Mbit/s: Establish/Change Test Access	GT 4.12-1
	■ Clear-2 Mbit/s: Hub Mode	GT 4.13-1
	■ Clear-2 Mbit/s: Loopback Mode	GT 4.14-1
	■ Clear-2 Mbit/s: Release Test Port	GT 4.15-1
	■ Clear-2 Mbit/s: Change Circuit Termination State	GT 4.16-1
	■ Integrated Test Set: Initiate/Stop Test Signal Generation	GT 4.17-1
	■ Integrated Test Set: Insert Bit Error	GT 4.18-1
	■ Integrated Test Set: Start/Stop Test Signal Monitoring	GT 4.19-1
	■ Integrated Test Set: Query Error Performance Parameters	GT 4.20-1

Contents

5	Cross-Connections and Disconnections General Tasks	5-i
	■ 64-kb/s Signals: Two-point, Two-way or One-way Circuits	GT 5.1-1
	■ 64-kb/s Signals: Two-point Gateway Circuits	GT 5.2-1
	■ 64-kb/s Signals: Two-point Multi-point Circuits	GT 5.3-1
	■ 64-kb/s Signals: Broadcast Circuits	GT 5.4-1
	■ 64-kb/s Signals: One-Way Multipoint Circuit	GT 5.5-1
	■ 64-kb/s Signals: Enter Change Cross-Connect Command	GT 5.6-1
	■ 64-kb/s Signals: Disconnect Cross-Connected Circuit	GT 5.7-1
	■ Clear-2 Mb/s Signals: Two-Point, Two-Way or One-Way Circuit	GT 5.8-1
	■ Clear-2 Mb/s Signals: Broadcast Circuit	GT 5.9-1
	■ Clear-2 Mb/s Signals: Switch Return Leg of Broadcast Circuit	GT 5.10-1
	■ Clear-2 Mb/s Signals: Change Termination State of Cross-Connection	GT 5.11-1
	■ Clear-2 Mb/s Signals: Disconnect Two-Point, Two-Way or One-Way Circuits	GT 5.12-1
	■ Clear-2 Mb/s Signals: Disconnect Broadcast Circuits	GT 5.13-1
	■ Re-Direct DS0 Signals	GT 5.14-1
	■ Re-Direct E1 Signals: Network Element	GT 5.15-1
	■ Re-Direct E1 Signals: Non-Network Element	GT 5.16-1
	■ Timeslot 0: Two-Way Cross-Connections	GT 5.17-1
	■ Timeslot 0: Broadcast Circuit	GT 5.18-1
	■ Timeslot 0: Change Timeslot 0	GT 5.19-1
	■ Timeslot 0: Disconnect Two-way TS0 Circuit	GT 5.20-1
	■ Timeslot 0: Disconnect Broadcast Circuit	GT 5.21-1
	■ DSP Application: Cross-Connect, Change or Disconnect DSP Application Connections	GT 5.22-1
	■ DSP Platform: Application-to-Application Cross-Connections	GT 5.23-1

Contents

6	Administration General Tasks	6-i
	■ Add/Delete User	GT 6.1-1
	■ Recover Password for User DAX	GT 6.2-1
	■ Reinstate User with Forgotten Password	GT 6.3-1
	■ Log Off Another User	GT 6.4-1
	■ Change Input Command Priority and Restricted Maintenance Option	GT 6.5-1
	■ Change Message Language	GT 6.6-1
	■ Change NPC Addressing	GT 6.7-1
	■ Change Output Message Screening	GT 6.8-1
	■ Change Macro/Map Storage Space	GT 6.9-1
	■ Change Link Removal Permission Option	GT 6.10-1
	■ Log In to the System	GT 6.11-1
	■ Log Off the System	GT 6.12-1
	■ Change Password	GT 6.13-1
	■ Create Alternate Map	GT 6.14-1
	■ Create Alternate Map Using the Picture Option	GT 6.15-1
	■ Edit an Existing Alternate/Reference Map	GT 6.16-1
	■ Activate Alternate Map Package	GT 6.17-1
	■ Query User Map Information	GT 6.18-1
	■ Delete Alternate Map from System	GT 6.19-1
	■ Create/Edit Macro	GT 6.20-1
	■ Execute Macro Package	GT 6.21-1
	■ Query User Macro Information	GT 6.22-1
	■ Delete Macro from System	GT 6.23-1
	■ Setting the Message Log Feature	GT 6.24-1
	■ Displaying Message Log Numbers	GT 6.25-1
	■ Retrieving Messages from the Message Log	GT 6.26-1
	■ Clearing the Message Log	GT 6.27-1
	■ Setting the Alarm Severity Feature	GT 6.28-1
	■ Changing the Alarm Severity of a Shelf Alarm	GT 6.29-1

Contents

■ Displaying Shelf Alarm Severity Setting	GT 6.30-1
■ Changing Facility Alarm Severity	GT 6.31-1
■ Displaying Facility Alarm Severity	GT 6.32-1
■ Displaying Alarm Severity Status	GT 6.33-1
■ Setting the Intervention Level Feature	GT 6.34-1
■ Changing Intervention Levels	GT 6.35-1
■ Displaying Intervention Level Values	GT 6.36-1
■ Displaying Intervention Level Status	GT 6.37-1

7	Maintenance General Tasks	7-i
	■ Archiving the Database	GT 7.1-1
	■ Recovering after Memory Card Failure	GT 7.2-1
	■ Removing a Single-Latch Circuit Pack	GT 7.3-1
	■ Installing a Single-Latch Circuit Pack	GT 7.4-1
	■ Removing a Double-Latch Circuit Pack	GT 7.5-1
	■ Installing a Double-Latch Circuit Pack	GT 7.6-1
	■ Upgrading From an EMTC to a EMTC2	GT 7.7-1

8	Performance Monitoring General Tasks	8-i
	■ Change Performance Parameter Thresholds	GT 8.1-1
	■ Scheduling a Performance Monitoring Report	GT 8.2-1
	■ Checking Performance Monitoring Data	GT 8.3-1
	■ Clearing Performance Monitoring Data	GT 8.4-1
	■ Check and Operate 2.048-Mb/s Line Loopback	GT 8.5-1
	■ Change E1 NPC Default Threshold Crossing Alarm Mode	GT 8.6-1

Contents

9	C-bit Processing General Tasks	<u>9-i</u>
	■ Enter Cross-Connection to CPR Pack	GT <u>9.1-1</u>
	■ Entering C-Bit Processing Commands	GT <u>9.2-1</u>
	■ Enter C-Bit Query Commands	GT <u>9.3-1</u>
	■ Enter Command to Disconnect from CPR Pack	GT <u>9.4-1</u>

A	Command Denials	<u>A-i</u>
	■ Background	<u>A-1</u>
	■ Clear Command Denials	<u>A-2</u>

Contents

About This Manual

Contents

■ Background	xiii
Purpose	xiii
Intended Audiences	xiii
■ New Features in This Release	xiv
Overview	xiv
Hybrid DS3 Threshold Support	xiv
ICI Circuit Pack	xiv
ITS	xiv
Non-CEF Information	xiv
■ How to Use This Manual	xv
Before Using the Procedures	xv
Accessing the Information	xv
Prerequisites	xv
Procedure Sequence	xv

(Continued on next page)

Contents (Continued)

■ Manual Contents	xvi
Volume Breakdown	xvi
General Tasks and Supporting Elements	xvi
Contents of Volume I	xvii
Contents of Volume II	xix
Contents of Volume III	xxi
■ Manual Conventions	xxiii
Special Font Used	xxiii
Notes	xxiii
Safety Label	xxiii
■ Related Documentation	xxiv
Related DACS II Documents	xxiv
■ How to Order Documentation	xxvii
Overview	xxvii
Ordering by Mail	xxvii
Ordering by Telephone	xxvii
Ordering by Fax	xxviii
Ordering Via the World Wide Web	xxviii
RBOC and BOC Orders	xxviii
Commercial Customer Orders	xxviii
Lucent Technologies Orders	xxix
Standing Order Customers	xxix
■ How to Comment on This Manual	xxx
Using the Feedback Form	xxx
Without the Feedback Form	xxx
■ Electronic Documentation	xxxi
Overview	xxxi
Ordering a CD-ROM	xxxi
Pricing Information	xxxi
Technical Information	xxxi

Background

Purpose

The purpose of this manual is to aid in acceptance and operation of the Digital Access and Cross-Connect System II (DACS II).

This document provides reference information required to support the craft personnel activities involved in the daily operation and maintenance of the DACS II. It also includes an overview that describes the physical and functional attributes of the DACS II.

Intended Audiences

This document is for individuals who are responsible for the acceptance, provisioning, operation, and maintenance of the DACS II, Release 9.0.

New Features in This Release

Overview

The new features associated with DACS II Release 9.0 are:

- Threshold support for the Hybrid DS3 circuits
 - The introduction of the Intelligent Communication Interface (ICI) circuit pack.
 - Integrated Test Set (ITS).
-

Hybrid DS3 Threshold Support

This feature adds threshold support to the performance monitoring feature for Hybrid DS3 circuits. Users can set up four separate threshold values including the default threshold value for each performance monitoring parameter. When a threshold is crossed, a threshold crossing message is issued. However, with this feature, threshold crossings and their associated alarm messages can be suppressed (turned off).

ICI Circuit Pack

The Intelligent Communication Interface (ICI) circuit pack (TM 782 card) provides the port connections for the seven administrative links:

- Four asynchronous links (links 1 through 4, SNIDER protocol)
- Two synchronous links (links 5 and 6, X.25 protocol)
- One TCP/IP link (link 7, telnet protocol).

The ICI circuit pack replaces the Main Controller's H/ECI circuit pack used prior to Release 9.0, and even plugs into the same slot used for the H/ECI circuit pack. The ICI pack will have all of the existing functionality of the H/ECI pack except the functionality available with the additional TCP/IP link connection.

ITS

The Integrated Test Set (ITS) feature provides the DACS II with a built-in Bit Error Ratio Tester (BERT) capability. The ITS was developed to replace expensive test sets for facility troubleshooting, providing the capability of generating, reading, and evaluating test signals from the DACS II.

Non-CEF Information

Release 9.0 does not support Non-CEF frames. However, the Non-CEF information is left in the documentation for reference purposes.

How to Use This Manual

Before Using the Procedures

Before you attempt to use the procedures in this manual, you should become familiar with the contents of each volume.

Accessing the Information

There are three ways to access the information in this document:

- Using the index in the back of each volume
 - Using the tabs and the table of contents in the front of each tab
 - Using the overall table of contents in the front of each volume.
-

Prerequisites

Before you use the procedures in this document, you should have completed the DACS II Operation and Maintenance course (TR3521 or TR3621).

If you were not able to take the training course, you should carefully study the information in Chapter 1 and the Command Denials located in Appendix A of Volumes I, II, and III.

Procedure Sequence

The procedures are arranged to be performed in the sequence in which they are presented. If you perform a procedure out of sequence, you may have trouble performing that procedure and the subsequent procedures.

Always start the trouble-clearing process by performing the procedures in the Trouble Identification section in Chapter 1 of Volume III. The sections in this volume are functional groupings of troubles. It is not always obvious from the message or alarm which of the trouble sections provides the procedure or procedures for clearing the trouble. If you begin with Chapter 1, you will be directed from procedure to procedure until the trouble is cleared.

Manual Contents

Volume Breakdown

This manual is divided into the following three volumes:

- Volume I - Operation and Maintenance Reference Material
- Volume II - Operation and Maintenance General Tasks
- Volume III - Trouble Clearing General Tasks.

The reference information in Volume I supports the General Tasks (procedures) documented in Volumes II and III.

General Tasks and Supporting Elements

The chapters in Volume II and III are divided into General Tasks (GT) and Supporting Elements (SE). GTs are the major tasks performed by users, and SEs are sub-tasks within a GT.

There is a correspondence between the chapter numbers in Volume I and the GTs in Volume II. For example, the general tasks related to reference Chapter 6: Cross-connections and Disconnections begin at GT 6.1. In Volume III, the GTs for a particular type of trouble are grouped together in one chapter.

SEs are associated with a GT and are usually located immediately after the GT. Some SEs are reusable in other GTs in that particular chapter and in the GTs of other chapters. When a GT step requires an SE, the SE will typically be found at the end of the GT. GTs and SEs follow a similar numbering scheme. For example, *SE 5.1.1* indicates the first SE in GT 5.1.

Manual Contents (Continued)

Contents of Volume I

The contents of *Volume I - Operation and Maintenance Reference Material* are listed below:

■ **Chapter 1 - Introduction**

This chapter provides an overview of the DACS II. It describes the DACS II hardware arrangements, functional operation, and command and message set. This chapter contains reference information required to operate and maintain the DACS II.

■ **Chapter 2 - Acceptance**

This chapter contains reference information which describes the acceptance of a DACS II frame after it has been installed.

■ **Chapter 3 - Provisioning**

This chapter contains reference information which describes circuit pack installation and the growing, restoring, removing, and degrowing of the common equipment (NPC, frame, synchronizer, and cross-connect network) and Units (FTU and DSPU).

■ **Chapter 4 - Test Access**

This chapter contains reference information which describes establishing test ports, making the DS0 and Clear-DS1 test connections, and establishing and testing subrate channels.

■ **Chapter 5 - Cross-Connections and Disconnections**

This chapter contains the reference information which describes making DS0, Clear-E1, Channelized-E1, Nx64 and Subrate cross-connections and to disconnect the cross-connections.

■ **Chapter 6 - Administration**

This chapter contains the reference information which describes logging on/off the DACS II; creating, changing, and deleting alternate maps; and creating, activating, and deleting macros.

(Continued on next page)

Manual Contents (Continued)

Contents of Volume I, Continued

■ Chapter 7 - Maintenance

This chapter contains the reference information which describes routine PMEM and SMEM memory card maintenance, PMEM and SMEM card removal, and plug-in removal and replacement.

■ Chapter 8 - Performance Monitoring

This chapter contains the reference information which describes scheduling and retrieving reports that monitor various DS1 performance parameters.

■ Chapter 9 - C-Bit Processing

This chapter contains the reference information which describes connecting/disconnecting facility channels to C-bit processor and selecting C-bit processing functions.

■ Appendix A - Command Denials

This chapter lists the command denial codes and their meanings. This information is useful in determining problems with the DACS II. You should be familiar with the contents of this chapter before you attempt any procedures.

Manual Contents (Continued)

Contents of Volume II

The contents of *Volume II - Operation and Maintenance General Tasks* are listed below:

- **Chapter 1 - (Left Intentionally Blank)**

- **Chapter 2 - Acceptance General Tasks**

This chapter contains the procedures to perform the acceptance of a DACS II frame after it has been installed.

- **Chapter 3 - Provisioning General Tasks**

This chapter contains the procedures to install circuit packs and to grow, restore, remove, and degrow the NPCs (FTU with or without *SLC*[®] Carrier, DSPU, Subrate, DMB, or DSP Applications).

Also included are the procedures to make the DSX connections and perform tests to establish DS1 facilities with or without *SLC*[®] Carrier and Subrate channels.

- **Chapter 4 - Test Access General Tasks**

This chapter contains the procedures to establish test ports, make the DS0 and Clear-DS1 test connections, and establish and testing subrate channels.

- **Chapter 5 - Cross-connections and Disconnections General Tasks**

This chapter contains the procedures to make DS0, Clear-E1, Channelized-E1, Nx64 and Subrate cross-connections and to disconnect the cross-connections.

- **Chapter 6 - Administration General Tasks**

This chapter contains the procedures to make DS0, Clear-E1, Channelized-E1, Nx64 and Subrate cross-connections and to disconnect the cross-connections.

(Continued on next page)

Manual Contents (Continued)

Contents of Volume II, Continued

- **Chapter 7 - Maintenance General Tasks**

This chapter contains the procedures to perform routine PMEM and SMEM memory card maintenance, PMEM and SMEM card removal, and plug-in removal and replacement.

- **Chapter 8 - Performance Monitoring General Tasks**

This chapter contains the procedures to schedule and retrieve reports that monitor various DS1 performance parameters.

- **Chapter 9 - C-Bit Processing General Tasks**

This chapter contains the procedures to connect/disconnect facility channels to C-bit processor and selecting C-bit processing functions.

- **Appendix A - Command Denials**

This chapter lists the command denial codes and their meanings. This information is useful in determining problems with the DACS II. You should be familiar with the contents of this chapter before you attempt any procedures.

Manual Contents (Continued)

Contents of Volume III

The contents of *Volume III - Trouble Clearing General Tasks* are listed below:

- **Chapter 1 - Trouble Identification**

This chapter contains the procedures for interpreting the alarms and messages that identify troubles.

All trouble clearing starts here. You are directed from here to a procedure in one of the following chapters. That procedure may direct you to a procedure in a chapter that follows it. The process continues until you isolate the fault.

- **Chapter 2 - Power Failures**

This chapter contains the procedures for isolating power troubles.

- **Chapter 3 - Facility Alarms**

This chapter contains the procedures for isolating troubles in the facilities that connect to DACS II.

- **Chapter 4 - Hardware Failures**

This chapter contains procedures for locating internal DACS II troubles. The messages associated with these troubles usually identify one or more possible faulty plug-ins.

- **Chapter 5 - Manual Diagnostic Failures**

This chapter contains the procedures for clearing troubles identified when you run manual diagnostics.

- **Chapter 6 - Controller and Link Troubles**

This chapter contains procedures for isolating troubles in the controller or the link connecting the controller to a terminal or operating system. These troubles are usually associated with a reset.

- **Chapter 7 - Data Base Troubles**

This chapter contains procedures for isolating a conditional reset or back-up memory trouble.

- **Chapter 8 - Frame Audits**

This chapter contains procedures for isolating faults detected when frame audits are run.

(Continued on next page)

Manual Contents (Continued)

Contents of Volume III, Continued

- **Chapter 9 - Software Error**

This chapter contains procedures for troubles indicated by a software trouble message.

- **Chapter 10 - TS0 and C-Bit Messages**

This chapter contains procedures which instruct you how to respond to messages that indicate changes in the status of TS0 or C-bit register or an overflow in the TS0 or C-bit buffers.

- **Appendix A - Command Denials**

This chapter lists the command denial codes and their meanings. This information is useful in determining problems with the DACS II.

Manual Conventions

Special Font Used This manual uses special fonts to differentiate computer input/output. The **constant width bold font** indicates message formats, keywords, letter representations of parameters, parameter values, and messages as they would appear on a DACS II terminal screen.

Notes Notes inform users of special considerations, situations, or items to remember. An example of a Note is shown below:

 **NOTE:**
Terminated connection for DMB concatenation is not allowed.

Safety Label Cautions indicate the presence of a hazard that will or can cause a frame alarm or property damage if hazard is not avoided. An example of a Caution is shown below:

 **CAUTION:**
The UMC is inserted towards the direction that is terminated, potentially causing a loss of service.

Related Documentation

Related DACS II Documents

The following documents support the DACS II:

- DACS II Installation Manual
 - IPH903 (DACS II CEF)
 - IPH903I (DACS II ESBF).

Audience: Customers planning to install the equipment

Content: Customer installation instructions.

- DACS II Release 7.0 Product Description Manuals:
 - 365-353-085 (24 Channel)
 - 365-353-086 (30 Channel).

Audience: Network planners, engineers, and others that need to know how the DACS II works and fits into the network

Content: Features, applications, and description and other reference information.

- DACS II Release 9.0 Operation and Maintenance Manuals:
 - 365-353-261 (PDS)
 - 365-353-271 (MML)
 - 365-353-281 (PDS 2.048-Mb/s Interface)
 - 365-353-291 (MML 2.048-Mb/s Interface).

Audience: End-user maintenance personnel

Contents: Procedures to operate and maintain the DACS II.

(Continued on next page)

Related Documentation (Continued)

Related DACS II Documents, Continued

- DACS II Release 9.0 Command and Message Manuals:

- 365-353-262 (PDS)
- 365-353-272 (MML)
- 365-353-282 (PDS 2.048-Mb/s Interface)
- 365-353-292 (MML 2.048-Mb/s Interface).

Audience: End-user maintenance personnel

Content: Description of each software input message and its response along with a description of each system output report.

- DACS II Release 9.0 Quick Reference Guides:

- 365-353-263 (PDS)
- 365-353-273 (MML)
- 365-353-283 (PDS 2.048-Mb/s)
- 365-353-293 (MML 2.048-Mb/s).

Audience: End-user maintenance personnel

Content: Abbreviated list of system commands and parameters.

- DACS II Release 9.0 Software Release Description:

- Comcode C108460080

Audience: End-user maintenance personnel

Content: Includes upgrade procedures for the new software release, status of problems fixed in previous releases, list of known problems, and operating issues for the specified software release.

(Continued on next page)

Related Documentation (Continued)

Related DACS II Documents, Continued

- X.50/X.57 Subrate Application
Release 1.0.3 for DACS II/Release 1.0.4 for DACS II ISX
MML 2.048 Mbit/s Interface User's Manual

— 365-350-101 (MML).

Audience: End-user maintenance personnel

Content: Complete manual describing how to install and operate the X.50/X.57 Subrate application on the DACS II or DACS II ISX. Commands and messages describing how to perform subrate cross-connects and subrate test access are included.

- DDS Subrate and MJU Application
Release 1.0.4 for DACS II/Release 1.0.5 for DACS II ISX
User's Manual

— 365-350-110 (PDS)

— 365-350-111 (MML).

Audience: End-user maintenance personnel

Content: Complete manual describing how to install and operate the DDS Subrate and MJU application on the DACS II or DACS II ISX. Commands and messages describing how to perform DDS subrate cross-connects, subrate test access, and subrate MJU operations are included.

- Digital Multipoint Bridge (DMB)
DSP Platform Application
Release 1.0.2 for DACS II/Release 1.0.3 for DACS II ISX
User's Manual

— 365-353-144 (PDS)

— 365-353-154 (MML).

Audience: End-user maintenance personnel

Content: Complete manual describing how to install and operate the DMB application on the DACS II or DACS II ISX. Commands and messages describing how to perform DMB cross-connects and DMB test access operations are included.

How to Order Documentation

Overview

To order additional copies of this document, orders can be placed:

- By Mail
 - By Telephone
 - By Fax
 - Via the World Wide Web.
-

Ordering by Mail

To order by mail, send a letter to:

Lucent Technologies
Customer Information Center (CIC)
Attention: Order Entry Section
2855 N. Franklin Road
P. O. Box 19901
Indianapolis, IN 46219

Ordering by Telephone

To order by Telephone (Monday through Friday), call:

- Within the United States of America:
1-888-LUCENT-8 (7:30 a.m. to 6:30 p.m. EST)
(1-888-582-3688)
 - North America (Outside of the U.S.)
317-322-6619
 - Australia, Europe, Middle East, and Africa:
Toll 317-322-6416
 - Asia-Pacific countries, China, Caribbean countries, and Latin America:
Toll 317-322-6411
-

How to Order Documentation (Continued)

Ordering by Fax

To order by Fax, fax a letter to:

- Within the United States of America:
1-317-322-6484
 - North America (Outside of the U.S.):
1-317-322-6359
 - All Other International countries:
Toll 317-322-6699
-

Ordering Via the World Wide Web

The Lucent CIC maintains a website that can be used for ordering Lucent customer information products. The website address for the Lucent CIC homepage is:

<http://www.lucentdocs.com/>

Once you access the Lucent CIC homepage, clicking on the [Documents](#) selection will take you to the area through which numerous types of customer information products can be located, ordered, and/or downloaded.

RBOC and BOC Orders

Regional Bell Operating Companies (RBOC) and Bell Operating Companies (BOC) must process orders through their company documentation coordinator.

Commercial Customer Orders

For commercial customers, a check, money order, purchase order number, or charge card number (*VISA*^{*} bank card, *American Express*[†] credit card services, or *Master Card*[‡] bank card) is required with all orders.

Checks must be made payable to Lucent Technologies.

* Registered trademark of VISA International Service Association.

† Registered trademark of American Express Company.

‡ Registered trademark of Mastercard International Incorporated.

How to Order Documentation (Continued)

Lucent Technologies Orders

Lucent Technologies entities should use Form IND 1-80.80 FA, available through the Customer Information Center.

Standing Order Customers

One-time orders include a binder (if applicable) and the document contents for the current issue in effect at the time of order. After placing a one-time order, you can request a standing order for any document revisions *of that software release*.

Documents for new software releases do *not* go to standing-order customers. You will only get those documents if you order the new software release.

How to Comment on This Manual

Using the Feedback Form

A feedback form is located at the beginning of this publication, immediately after the title page. Please fill out the feedback form and return it (postage free) to the address on the back.

Without the Feedback Form

If the feedback form is missing, send comment on this publication to:

Lucent Technologies
DACS II Documentation Coordinator
Attn: Tabatha Wright
Room 1B-320
101 Crawfords Corner Road
Holmdel, NJ 07733-3030 USA

Electronic Documentation

Overview

Documentation for DACS II and DACS II ISX is now available in electronic form, on CD-ROM (compact disk, read-only memory). CD-ROM has many advantages over traditional paper documentation, including cost savings, search and retrieve capability, and the assurance of the most current documentation.

CD-ROM is available by annual subscription (on standing order).

Ordering a CD-ROM

To order a CD-ROM, call your Technical Information Resource Manager, your Lucent Technologies Account Executive, or the Lucent Technologies Customer Information Center (1-888-582-3688).

Pricing Information

For pricing information, contact your Lucent Technologies Network Systems Account Executive or the Lucent Technologies Customer Information Center (1-888-582-3688).

Technical Information

For technical information, call Lucent Technologies Documentation Support (1-800-334-0404).

Acceptance General Tasks

2

Contents

■ Perform Visual Inspection	GT 2.1-1
■ Check Circuit Pack Installation	GT 2.2-1
■ Review Frame and Link Setup	GT 2.3-1
■ Initialize and Test Alarms	GT 2.4-1
■ Check and Set Time-Clock, Facility Report Utilities, and Auto Backup Memory	GT 2.5-1
■ Check NPC Timing Option Wiring	GT 2.6-1
■ Check Sync Switchover	GT 2.7-1
■ Check Cross-Connect Operation using a Digital Access Test Set	GT 2.8-1
■ Check Cross-Connect Operation using an Unassigned Voice Terminal	GT 2.9-1
■ Check for Equipped, Out-of-Service, or Cross-Connected Circuits	GT 2.10-1

Perform Visual Inspection

2.1

When to Use

Use this set of procedures to inspect the front and back of the frame for obvious structural damage.

Related Information

For related information, refer to Volume I, Chapter 2, *Acceptance*.

Instructions

Task

Step	Action	Reference
1	Inspect front of frame.	SE 2.1.1 page 2.1-3
2	Inspect back of frame.	SE 2.1.2 page 2.1-4

SE 2.1.1: Inspect Front of Frame

Procedure

Use this procedure to inspect the front of the frame for obvious structural damage.

1. Check front of frame for damage (such as dents or broken mountings) resulting from transporting and mounting of equipment.
 2. At front, look over shelf mountings to verify that shelves are properly aligned and securely mounted.
 3. Verify that shelf designation labels are installed in front over shelf slots.
-

SE 2.1.2: Inspect Back of Frame

Procedure

Use this procedure to inspect the back of the frame for obvious structural damage.

1. Check back of frame for damage such as dents or broken mountings.
2. Look for broken or bent pins near the edges of each printed backplane panel; these pins can be damaged even with the covers installed.
3. Verify that the metal covers are securely mounted over the backplane panels. Ribbon cables are used for connections between the shelves, and these connections are not likely to give trouble.
4. For DSPUs (digital signal processing units), check that the wiring from these units to the main controller is neat and that no pins were damaged during wire wrapping. When these units are added to an existing frame, this wiring will be done by the installer.
5. Verify that local TTY (teletypewriter terminal) is connected to TTY connector for Link 1 behind the main controller using an ED-2C646-30, G2 adaptor.
6. If data sets (such as 202T) are required for remote connections or for equipment more than 50 feet (RS-232C specification) or 2,000 feet (RS-449 specification, 1200 baud) away, verify that data sets have been installed. Data set specifications are given with the information notes in SD-96662-01.
7. Connect data link cable (for example, M25B) to the TTY connector for the link (behind DACS II main controller). No adapter is required for RS-449 format, but ED-2C646-30 adapters are required for RS-232C format as follows:
 - Use a G1 (group 1) or G14 adapter for any interface via data sets (asynchronous or synchronous).
 - Use a G2 or G15 adapter for a direct TTY or CRT terminal (without data sets).
 - Use a G3 or G8 adapter for local operations systems such as SARTS (Switched Access Remote Test System) or TABS (telemetry asynchronous block serial) protocol link (asynchronous 4-wire - data only without data sets).



NOTE:

The G1 and G2 adapters interoperate with RS232C per EIA Pub. 12 and give maximum receiver margin and minimum pulse distortion. The G14 and G15 adapters contain termination and biasing networks to detect disconnected or unpowered RS232C equipment. The G1 and G2 adapters are recommended for use in normal installations where the equipment remains powered up.

8. Verify that cable adapter are securely mated at back of each facility terminating unit. Also verify that shield is grounded at DACS II frame or at line interface bay.
 9. Talk with an installation representative to verify that cabling to line interface bay has been tested for continuity (buzzed and CGAs [carrier group alarms] registered when lines were opened).
 10. Verify that DACS II and line interface bays have been stamped with office relay rack identification per office drawings.
-

When to Use

Use this set of procedures to check circuit pack installation in the frame.

**Related
Information**

For related information, refer to Volume I, Chapter 2, *Acceptance*.

Instructions

Tasks

Complete the following steps to make sure the circuit packs in the frame are properly installed:

Step	Action	Reference
1	Check main controller installation and sync circuit pack installation.	SE 2.2.1 page 2.2-3
2	Check FTU circuit pack installation.	SE 2.2.2 page 2.2-4
3	Check ECCN/CCN multibay circuit pack installation.	SE 2.2.3 page 2.2-5
4	Check ECCN/CCN single-bay circuit pack installation.	SE 2.2.4 page 2.2-6
5	Check power units and fuses.	SE 2.2.5 page 2.2-7
6	Check DSPU circuit pack installation.	SE 2.2.6 page 2.2-8

SE 2.2.1: Check Main Controller Installation and Check Sync Circuit Pack Installation

Procedure

Use this procedure to verify that the main controller has been installed and to verify that sync circuit packs in the frame are properly installed and to query the units to see how they are configured.

1. Verify that the main controller has been installed.
 2. From system layout information and installation records, determine the following on the sync:
 - The configuration, MASTER or SLAVED.
 - The number and types (digital line, office clock, etc.) of incoming signals for slaved timing.
 - Timing distribution, whether DACS II supplies timing to other equipment in the office.
 3. Enter **RTRV-STATE-EQPT: :SYNC:EQPD;** to see the TB (time base) and TLI (timing link interface) type designations.
 4. Check the query output, then read the following:
 - The TB types are TB000 for North American-stratum 3, TB100 for 2.048-Mb/s Interface - local office, TB200 for 2.048-Mb/s Interface - toll office, and TB300 for North American-stratum 2.
 - The TLI types are given by the letter codes, and the signal formats are given by the associated number codes.
 - The SRC is the priority of TLI sources — from the highest (1) to the lowest (8).
 5. Enter **RTRV-STATE-EQPT: :SYNC;**.
 6. If CFR (sync configuration) = MASTER, verify that a TB card is installed in the designated slots.
 7. Verify that there are duplicate TLI cards (on sides 0 and 1) for each incoming and timing distribution link.
 8. If TG68 or TG75 TLIs are used, verify that the packs are installed in the TLI 2 positions of the sync where terminations are provided for connection of coaxial cable.
 9. If timing signals are to be distributed from the DACS II, verify that the correct code of TLI is installed and check connection of timing cables behind shelf slots. Both the TG70 and TG71 packs provide four multiplied outputs.
-

SE 2.2.2: Check FTU Circuit Pack Installation

Procedure

Use this procedure to verify that all FTU circuit packs in the frame are properly installed.

1. Determine which unit and FTMs (facility terminating modules) are to be equipped.
2. Verify the **TG81** code FTMI and the **TG79** code of FCs (format converters) are installed for the equipped FTMs.
3. Verify the circuit pack dual digroup cards (for example, DPC) for the equipped NPCs are installed in the NPC slots.



NOTE:

Each circuit pack card contains the circuitry for two NPCs. For 2.048-Mb/s Interface and Enhanced 2.048-Mb/s Interface, the last eight NPCs (four DPCs) are not equipped.

SE 2.2.3: Check ECCN/CCN Circuit Pack Installation - Multibay

Instructions

Use this procedure to verify that all the multibay circuit packs in the frame are properly installed. Procedures to install circuit packs are included in the *Provisioning* section.

1. Locate ECCN (expanded cross-connect network) in the switch bay.
2. Verify that the BT (bus terminator, BBR1 code) packs are securely installed in the designated far-left and far-right slots on each side of the network (ECCN0 and ECCN1).
3. Verify that the CCI (clock control interface, BBS1 code) pack is securely installed in the designated slot on each side of the network (ECCN0 and ECCN1).
4. Verify both active and inactive ETSI (expanded time slot interface) circuit packs are installed for each equipped unit.

**NOTE:**

The ETSI slots are assigned on each side of the common CCI pack to roughly match the associated unit positions and ordering of the units in the CEF configuration.

SE 2.2.4: Check ECCN/CCN Circuit Pack Installation - Single-Bay Circuit

Procedure

Use this procedure to verify that all single-bay circuit packs in the frame are properly installed.

1. Locate the CCN2 (cross-connect network) in the frame and notice the organization within the network.
2. Verify that the CCNI (cross-connect interface) card (UM30 code) is installed in the designated slots on both sides of CCN2.
3. Verify that the circuit packs for CCB 1 and TSI 11 are installed on both sides of CCN2 to allow cross-connections within unit 1. The code of the CCB cards is UM26 and the code of the TSI cards is TM660.



NOTE:

The TSI designation numbers indicate how the cards are connected; for example, TSI 11 connects data from unit 1 back to unit 1.

4. If unit 5 (bottom shelf) is also to be equipped, verify that the circuit packs for slots CCB 5 and TSI 55 are installed on both sides of CCN2 to allow cross-connections within unit 5.
5. If unit 5 was install, verify that the circuit packs for slots TSI 15 and TSI 51 is installed on both sides of CCN2 to allow cross-connections between unit 1 and unit 5. The code of the TSI card is TM660.

SE 2.2.5: Check Power Units and Fuses

Procedure

Use this procedure to verify that all power units and fuses are properly installed.

1. Locate the power unit slots for the section of the frame being equipped using shelf designation strips.
2. Verify the required codes and quantities of power units are installed.
3. Verify the required 48-volt input fuses are installed in the fuse and alarm panel (bottom frame).
4. Verify the LED output fuses are installed in fuse boards per designation strips and appropriate tables for sync and main controller, IFTU, and units in original interface bays.

**NOTE:**

FTUs in original interface bays use two GRP 1 (5A) DFBs and one GRP 2 (7.5A & 5A) DFB; the GRP 2 board is for fuses CQ-JX. The DSPU uses GRP 3 (7.5A) DFBs.

5. Verify the required 48-volt fuses are installed.
6. Verify the required LED fuses are installed.
7. If any of the required responses did not occur, replace the power unit and confirm the operation of the faceplate LED.
8. Get digital multimeter (such as KS-20599 DMM) and set it to read DC "" range.
9. Measure each power unit output between the + and – V1 jacks (or between each V jack and RTN). The SPU (sync power unit) does not have test jacks to make this test.

**NOTE:**

The FTU power units feed a common bus, and low voltage can only be detected if one power unit is disconnected and the test is repeated for all combinations of the power units.

- If the power requirements are met, disconnect the meter.
- If the power requirements are not met, replace the power unit.

SE 2.2.6: Check DSPU Circuit Pack Installation

Procedure

Use this procedure to verify that all the DSPU circuit packs in the frame are properly installed.

1. Familiarize yourself with the DSPU shelf.
2. Verify that all DSPUs are properly installed. See Table 2.2-1.

Table 2.2-1. DSPU Power Units and Fuses

Fuse	Side	DSP Position (Note)
(Top)	0 DSPU	(Left Panel)
No. 1		First and second
No. 2		Third and fourth
No. 3		Fifth and sixth
No. 4		Seventh and eighth
(Bottom)	1 DSPU	(Right Panel)
No. 5		First and second
No. 6		Third and fourth
No. 7		Fifth and sixth
No. 8		Seventh and eighth
Note: Each fuse supplies two DSP circuit packs.		

When to Use

Use this procedure to review the frame and link configuration.

**Related
Information**

For related information, refer to Volume I, Chapter 2, *Acceptance*.

Instructions

Task

Complete the following steps to review the frame and link configuration:

Step	Action	Reference
1	Check frame, software, and feature setup.	SE 2.3.1 page 2.3-3
2	Check link setup.	SE 2.3.2 page 2.3-4
3	Check status register.	SE 2.3.3 page 2.3-7

SE 2.3.1: Check Frame, Software, and Feature Setup

Procedure

Use this procedure to check the frame, software, and feature setup.

1. If command has not already been entered to see the configuration, enter **RTRV-PRMTR-NE;**.
 2. To see the frame ID and the version of software, enter **RTRV-HDR-NE;**.
 3. To see which features are enabled, enter **RTRV-FPKG-NE;**.
-

SE 2.3.2: Check Link Setup

Procedure

Use this procedure to review the link configuration.

1. Enter

```
RTRV-PRVG-{USER|TERM}::::{<user id>|<link No.>|ALL};
```

Where:

USER|TERM = Selects whether user or link identification will be used in the command.

user id = Particular user ID

<link No.> = Identification of user link(s) to be queried; either given physical link (1 through 6) and virtual circuit (for synchronous, 01 through 16).

ALL = All users (frame administrator command).

2. Familiarize yourself with the following link setup options.
 - To read the priority level (LEV) for different commands, relate the level — 0 (excluded group), 1 (lowest), 2, and 3 (highest), given after LEV word in the output message to the command groups per Table 2.3-1.
 - To read the screening, find the SCR number (1 through 5) in the output corresponding to the position under the SCR category heading in the explanation line and refer to Table 2.3-2. For numbers 3 and 4, use Table 2.3-1 to determine the command groups indicated by 1s and 0s in the GR field of the output.
 - The restricted maintenance option (RMON/RMOFF) determines whether the user has permission to use commands in that category.
 - The link language (LANG) is given as either P (Program Documentation Standards), M (huMan-Machine Language), or F (Facility Data Link Communication Protocol Language).
 - The NPC addressing (NPCAD) scheme for messages is given as either E for extended (for example, 001), X for 4-digit extended (for example, 0001), or H for hierarchical (for example, 01101).
 - The MCON/MCOFF option determines if macro component completion messages are output.
 - The RLK option removes link privilege, output will be either RLK A (allowed) or RLK I (inhibited).

Table 2.3-1. Command Grouping

a Circuit Provisioning	b Equip Provisioning	c Maintenance
ALW-SW-T1 CONN-BDCST-T0 CONN-CRS-T0 CONN-CRS-TS CONN-CRS1-T0 CRTE-CRS-TS DLT-CRS-TS DISC-BDCST-T0 DISC-CRS-T0 DISC-CRS-TS DISC-CRS1-T0 INH-SW-T1 SW-TOPROTN-T1 SW-TOWKG-T1	CRTE-CNFGRN-EQPT CRTE-EQPT CRTE-LGN DLT-LGN DLT-MACRO DLT-MAP DLT-PRMTR-EQPT ED-PRMTR-EQPT ED-PRMTR-LINK ED-PRMTR-NE DISC-EQPT SET-PRVG-TERM SET-PRVG-USER	DGN-EQPT ED-PRMTR-EQPT ENT-EQPT INIT-SYS RMV-CNFGRN-EQPT RMV-EQPT RST-CNFGRN-EQPT RST-EQPT SW-DX-EQPT - -
d Test Access	e Monitoring	f Common
ALW-LPBK-T1 CHG-TL-T0 CHG-TL-TS CONN-HUB-T0 CONN-TACC-T0 CONN-TACC-TS DISC-TACC-T0 DISC-TACC-TS INH-LPBK-T1 OPR-LPBK-T0 OPR-LPBK-T1 RLS-LPBK-T1 - -	CPY-MEM ED-DATE INIT-LOG INIT-REG OPR-ACO-ALL RST-PASSWD SCHED-PMREPT-ALL SET-ATTR-EQP STA-LOCL-RST RTRV - -	CHG-LGN CHG-RPATH-T0 ED-CNFGRN-EQPT ED-CONN-TS ED-CRTE-TS ED-OPT-T1 ED-PRMTR-EQPT ED-PRMTR-MACRO/MAP ED-PRMTR-NE ED-PRMTR-T0 ED-PRMTR-TS ENT-MACRO/MAP EXC-MACRO/MAP SET-PRVG-TERM/USER
g Restricted Maintenance (RMON Option)		
RST-EQPT::MC::FRC; RST-EQPT::SMEM::CLR:FRC; DLT-FPKG; ED-PRMTR-ALMS::::{ON OFF}; ED-PRMTR-MSGLOG::::{ON OFF}; CPY-MEM::::PMEM,SMEM:PROG; INIT-MSGLOG:::RSTNUM; UPGRD-SYS; STA-LOCL-RST::::PMEM;		

Table 2.3-2. Screening Options

Screening Option (n)	Definition
1	Only the responses to inputs entered on that particular link and by that user are output.
2	The responses to inputs entered on that particular link and by that user are output as well as all autonomous messages (default).
3	Responses to input messages on that particular link and by that user are output as well as responses from specified groups of action verbs from other links. The selection of message groups is made using the GR (a, b, c, d, e, f) field in the screening command.
4	Responses to input messages on that particular link and by that user, responses from specified groups of action verbs from other links (see above), and autonomous messages are output.
5	All responses to all input messages on all links are output as well as all autonomous messages.

SE 2.3.3: Check Status Register

Procedure

1. Enter **RTRV-PRMTR-LINK: : j [mm]** ; to familiarize yourself with the output.

Where:

j = Link number

mm = Virtual circuit number.

2. Refer to Figure 2.3-1 to see the bit definition (meaning of 1s) of the raw data field.

Protocol/

"{S/X}"

/*Baud:Backspace:Alarm:Enq/Ack:Xon/Xoff:Mode,Software,Hardware status*/

"bb:e:k:q:x:m,p,hh"

Protocol = S for Snider (Async) or X for X.25 (Synchronous)
 bb = <baud> = 03,06,12,24,48,96
 e = <backspace> = 0 for true backspace, 1 for underscore backspace, or dash (—) for synchronous link.
 k = <alarm> = 1 (link alarm defined as minor) or 2 (defined as major)
 q = ENQ/ACK protocol 0 disabled, 1 enabled (default)
 x = Xon/Xoff protocol 0 disabled (default), 1 enabled.
 m = <mode> = 0 (idle), 1 (input message), or 2 (output message)
 p = <software> = 0 (protocol exchanges in-service) or 1 (protocol exchanges out-of-service, which slows down DACS II response time)
 hh = <hardware> = 03 (hardware in-service) or 04 (hardware out-of-service)

ADDITIONAL LINES FOR X.25:

/*Data Link Layer parameters: Frame address*/

"K-b,T1-eee,T3-ggg,N2-aa:{A/B}"

/*Packet Layer parameters*/

"W-c,P-ddd,T20-iii,T22-jjj,T23-kkk,T25-lll,T26-mmm,R20-nn,R22-p,R23-q,R25-r"

/*PVC and SVC range: PVC and SVC group number*/

"ppss:gghh"

TCP/IP Format:

<xy> yy-mm-dd hh:mm:ss [LINK-<link number>]

M RTRV PRMTR LINK::j:[ww] COMPLD

/* [S/X] */

/* Protocol */

"I"

/* Baud:Backspace:Alarm:Enq/Ack:Xon/Xoff:Mode,Software,Hardware status */

"e:k::,xxxx,hh"

Figure 2.3-1. Link Status Register

When to Use

Use this set of procedures to verify that alarms have been set up to match your frame configuration and to test the alarm(s) operation.

**Related
Information**

For related information, refer to Volume I, Chapter 2, *Acceptance*.

Instructions

Tasks

Step	Action	Reference
1	Initialize alarms.	SE 2.4.1 page 2.4-3
2	Test alarms.	SE 2.4.2 page 2.4-4

SE 2.4.1: Initialize Alarms

Procedure

Use this procedure to verify alarms have been set up to match your frame configuration.

1. Enter **SET-ATTR-EQPT:::ALM-a;**.

Where:

a = 3 for both local and remote alarm indications, or 2 for remote alarm indications alarms.

- If the command is denied and the input message was entered correctly, refer trouble to the installer.
-

SE 2.4.2: Test Alarm Operation

Procedure

Use this procedure to test the alarm(s) operation.

1. In the first facility terminating unit (bay 1), locate the FTMI pack for one of the four modules of NPCs.
2. Disengage that FTMI pack.
3. If the **MINOR** (or **DMA MINOR** for 2.048-Mb/s line) LED is lighted on the status panel and the office alarm is operating, press the **ACO** button on the status panel.
 - If LED does not light and the alarm is operating, proceed to Step **11**.
4. Push the FTMI back into the slot and enter
RST-EQPT: :UNIT-[q]q: :FTMI-d;
 Where:
 - [q]q = Unit number (1 through 16).
 - d = FTMI number (1 through 4).
5. Disengage one of the DPC packs (two NPCs) in the same module.
6. If the **MAJOR** (or **PMA MAJOR** for 2.048-Mb/s line) LED is lighted on the status panel and the office alarm is operating, press the **ACO** button on the status panel.
 - If LED does not light and the alarm is operating, proceed to Step **11**.
7. Disengage two more DPCs.
8. If the **CRITICAL** (or **PMA CRITICAL** for 2.048-Mb/s line) LED is lighted on the status panel, continue with Step **9**.
 - If LED does not light and the alarm is operating, proceed to Step **11**.
9. Push the DPCs back into the slots and enter
RST-EQPT: :NPC-<npc No.>[[&]&-<range>]; to restore each NPC (two per each card) to service.
 Where:
 - <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
 - <range> = Last NPC in a continuous range. Extra ampersand [&] needed for hierarchical.
10. Verify that all the alarms clear.

- If the alarms are clear, proceed to *Check and Set Time-Clock, Facility Report Utilities, and Auto Backup Memory* to check and set the time-clock and facility report utilities.
 - If the alarms are not clear, replace the EMTC pack in the main controller as outlined in subsequent steps for the ICI.
11. If office alarm operates but LED does not light, press the **LAMP TEST** button on the status panel to determine if the LED is burned out.
 - If the LED is burned out, replace it and start again with Step 3.
 - If the LED is not burned out, enter **RMV-EQPT: :MC;** to remove the MC from service.
 12. Replace the ICI pack.
 13. On the status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - If the office alarm still does not operate after the reset completes, refer trouble to installation group or clear trouble in office alarm wiring.
-

**Check and Set Time-Clock, Facility
Report Utilities, and Auto Backup
Memory**

2.5

When to Use

Use this set of procedures to review and if required, set the time-clock utilities and the facility report utilities.

**Related
Information**

For related information, refer to Volume I, Chapter 2, *Acceptance*.

Instructions

Tasks

Complete the following steps to review/set the time-clock utilities and the facility report utilities.

Step	Action	Reference
1	Check and set time-clock utilities.	SE 2.5.1 page 2.5-3
2	Check and set facility report utilities and auto backup memory.	SE 2.5.2 page 2.5-4

SE 2.5.1: Check and Set Time-Clock Utilities

Procedure

Use this procedure to review and, if required, to set the time-clock utilities.

1. If current time needs to be set in DACS II, enter correct time using
ED-DATE: : : , hr-mn-sc ;.
 - If time does not need to be set, continue with Step 2.

Where:

hr = Hour (00 through 23).
mn = Minutes (00 through 59).
sc = Seconds (00 through 59).

2. Enter correct date using

ED-DATE: : : [ce]yr-mo-da: [INT-bb] ;

Where:

yr = Last 2 digits of year (00 through 99).
mo = Month (01 through 12).
[ce] = Century.
da = Day (01 through 31).
INT-bb = Optional, to set period (bb=01,02,04,06,08,12, or 24 hours).

SE 2.5.2: Check and Set Facility Report Utilities and Auto Backup Memory

Procedure

Use this procedure to review and, if required, to set the facility report utilities. The facility report utilities are used to specify the items included in the daily report message, to set the time the daily report message will be issued, and to set up the backup memory report. (Refer to *Performance Monitoring* for detailed information regarding facility reports.)



NOTE:

To set the daily facility report time for PA type NPCs, use the **MONDAT** keyword. The time of the report (**hrmnsc**) can only be set to the 00, 15, 30, or 45 minute of the hour.

1. Which of the following facility parameters do you want to be included in the daily report message?
 - If **PBAs** and **Errored Seconds**, continue with Step 2.
 - If **selected parameters**, proceed to Step 3.
 - If **only PBAs** (no entry required), proceed to Step 6.



NOTE:

To see what facility reports are scheduled to occur enter **RTRV-PMREPT-SCHED:::CFA;**.

2. To set the time for the facility report enter **SCHED-PMREPT-ALL:::hr-mn-sc,CFA;**. Proceed to Step 6.
3. Familiarize yourself with the command (shown below) to set the time for facility report and select parameters.

SCHED-PMREPT-ALL:::hr-mn-sc,PRIM-X-abcd;

Where:

PRIM-X-abcd = Field to select 2.048 Mb/s facility reports; "abcd" is hexadecimal word for 16 bits that specify parameters.

4. Construct the hexadecimal word.
 5. Enter the required command for facility reporting. The selected parameters will show up in the AUD CGA command and the midnight report.
-

When to Use Use this set of procedures to check and change the NPC timing option wiring.

Related Information For related information, refer to Volume I, Chapter 2, *Acceptance*.

Instructions

Use this procedure to check the NPC timing option wiring.

1. Locate the NPC positions in the first two modules of units 1 and 2 that can be used as sources for the 2.048-Mb/s sync clocks.



NOTE:

Only the last NPC position on each of these DPCs is used to prevent losing two sources if the DPC fails.



NOTE:

Locate miscellaneous terminal strip A at the top rear of bay 2.

2. Verify that the two twisted pair leads (sync clock and ground) of these NPCs that are used go to the top-bay miscellaneous terminal strip A.
 3. Verify that the 0SYNC TP and TN (ground) leads (SD-96699-01 or SD-96648-01) from those NPCs at TSA are wired to the corresponding leads at TSB going to sync port 0 of a TLI. Verify that the same is true for the 1SYNC TP and TN leads and sync port 1.
-

When to Use

Use this procedure to verify that sync units have the ability to switch from the active to the inactive side and back.

**Related
Information**

For related information, refer to Volume I, Chapter 2, *Acceptance*.

Instructions

Procedure

Use this procedure to verify that sync units have the ability to switch from the active to the inactive side and back.

1. Enter **RTRV-STATE-EQPT: :SYNC;** to determine the active sync side which is given by SOURCE field (inactive side will show MATE).
 2. To switch over, remove the active side from service.
Enter **RMV-EQPT: :SYNC-a;**.
 3. Repeat step 1 to obtain STATE SYNC again and check SOURCE field. The other sync unit should be active.
 4. Enter **RST-EQPT: :SYNC-a;** to restore the side removed from service.
 5. To switch back to the original sync unit, repeat step 1 to obtain STATE SYNC again and check SOURCE field. The active sync side is given by the SOURCE field.
 6. To switch over, remove the active side from service.
Enter **RMV-EQPT: :SYNC-a;**.
 7. Repeat step 1 to obtain STATE SYNC again and check SOURCE field. The original sync unit should be active.
 8. Enter **RST-EQPT: :SYNC-a;** to restore the side removed from service.
-

Check Cross-Connect Operation using a Digital Access Test Set

2.8

When to Use	Use this procedure to check the operation of the cross-connect network using a Digital Access Test Set (DATS).

Related Information	For related information, refer to Volume I, Chapter 2, <i>Acceptance</i> .

Diagram of Cross-Connection Using DATS

Use Figure 2.8-1 to connect the DATS to the first NPC to be tested.

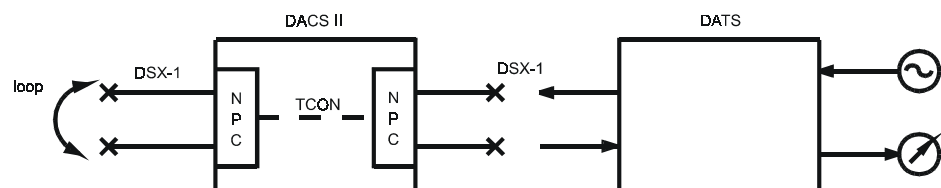


Figure 2.8-1. Cross-Connection Using DATS

Instructions

Use this procedure to check the operation of the cross-connect network using a Digital Access Test Set.

1. Enter commands as follows to grow two NPCs, one which will have signal looped at line interface and one to terminal DATS:
CRTE-EQPT::NPC-<npc No.>::PB900;
2. Verify that TG182 or TG185 plug-ins are installed in the test NPC positions.
3. Enter **RST-EQPT::NPC-<npc No.>;** to restore the test NPCs.

Where:

<npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).



NOTE:

The restore operation causes diagnostics to be run and places the NPC in an in-service state. The NPCs must either have the line signal connected or be looped at the line interface jacks.

4. At line interface, do Steps 5 through 8.
5. Obtain a DATS and turn the power on.
6. Connect the DATS to the first NPC to be tested.
7. Verify that other NPC to be entered in cross-connect command has cord between IN and OUT jacks to loop the NPC signal.
8. Enter **CONN-CRS-T0::<npc No.1>-ddd,<npc No.2>-jjj;** at DACS II to cross-connect channel of one NPC to channel of other NPC.

Where:

<npc No.1> = One test NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
Channel 1 of NPC is selected for test.

<npc No.2> = Other (different) test NPC number; channel 1 of NPC is selected.

- If tone is heard at DATS (note tone level adjustment) and completion message is received, proceed to Step 10.
- If tone is not heard at DATS, verify test connections and DATS settings.
- If the command is denied, find the reason for denial in the output message and perform corrective action to obtain completion.

9. Remove cross-connection as follows:
DISC-CRS-T0::<npc No.1>-ddd,<npc No.2>-jjj;.
 10. Repeat test as necessary to include different DACS II units by moving connections to different NPCs (grown and restored). Enter the CONN CRS T0 command to make the cross-connection.
 11. When tests are finished, remove the test connections. Remove service from and degrow any NPCs that were added for the tests. (Refer to *Test Access General Tasks*.)
-

Check Cross-Connect Operation using an Unassigned Voice Terminal

2.9

When to Use

Use this set of procedures to check the operation of the cross-connect network using an unassigned voice terminal.

Related Information

For related information, refer to Volume I, Chapter 2, *Acceptance*.

Diagram of Cross-Connection Using an Unassigned Voice Terminal

Figure 2.9-1 shows cross-connection using an unassigned voice terminal.

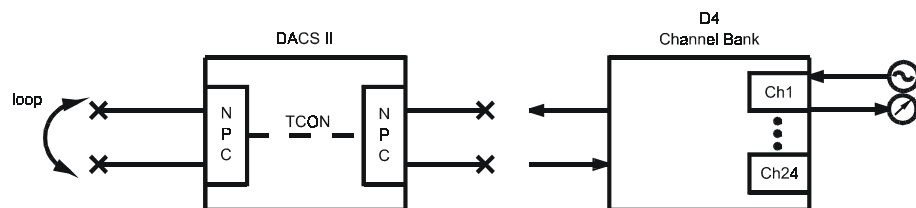


Figure 2.9-1. Cross-Connection Using Unassigned Voice Terminal

Instructions

Use this procedure to check the operation of the cross-connect network using an unassigned voice terminal.

1. Enter commands as follows to grow two NPCs, one which will have signal looped at line interface bay and one to an unassigned voice terminal:
CRTE-EQPT::NPC-<npc No.>:PA900;
2. Verify that TG182 or TG185 plug-ins are installed in the test NPC positions.
3. Enter **RST-EQPT::NPC-<npc No.>;** to restore the test NPCs.

Where:

<npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).



NOTE:

The restore operation causes diagnostics to be run and places the NPC in an in-service state. The NPCs must either have line signal connected or be looped at the line interface jacks.

4. At line interface, do the following:
 - Patch unassigned channel bank to one of the NPCs to be used for cross-connect tests.
 - Verify that other NPC for tests has the signal looped with looping cord between IN and OUT jacks.
5. At unassigned voice terminal, connect transmission test set to transmit signal on selected channel for test and to receive signal on same channel.
6. Enter **CONN-CRS-T0::<npc No.1>-ddd,<npc No.2>-jjj;** at DACS II to cross-connect any channel from one test NPC to the other looped NPC.

Where:

ddd = Test channel (for example, channel 1) on first NPC for test.

jjj = Test channel (for example, channel 1) on second NPC for test.

- If tone is detected at transmission test set and a completion message is received, continue with Step 7.
 - If tone is not detected, verify test connections and signal settings on the unassigned voice terminal.
7. To remove cross-connection, enter
DISC-CRS-T0::<npc No.1>-ddd,<npc No.2>-jjj;

8. Repeat test as necessary to include different DACS II units by moving connections to different NPCs (grown and restored). Enter the CONN CRS T0 command to make the cross-connection.
 9. When tests are finished, remove the test connections. Remove service from and degrow any NPCs that were added for the tests. (Refer to *Test Access*.)
-

**Check for Equipped, Out-of-Service,
or Cross-Connected Circuits**

2.10

When to Use

Use this set of procedures to check the operation of the cross-connect network using a digital access test set and an unassigned voice terminal.

**Related
Information**

For related information, refer to Volume I, Chapter 2, *Acceptance*.

Instructions

Use this procedure to check for equipped circuit packs, out-of-service circuits packs, and cross-connected circuits. When acceptance is complete, there should not be any equipped Unit circuit packs.

Check for Equipped Circuit Packs

1. Enter

RTRV-STATE-EQPT::[{UNIT-[q]q|UNIT|ETSI| TSI|NPC}]::EQPD;

Where:

UNIT-[q]q, UNITS,	=	Optional, to request the equipage
ETSI, TSIs, NPCs		in specific unit or of specific entity
		instead of entire frame.

See Figure 2.10-1 for link and CCN/ECCN circuit packs if entire frame is checked.



NOTE:

Equipped CPs are indicated by a "1" alongside the CP or by the CP number in the sequence. For duplicated entities (FC, ETSIs/TSIs), there will be listings for both the zero and one sides for each duplicated circuit packs.

M RTRV STATE EQPT ... COMPLD

"<subject>:g,h,i,j,k,l,m,n,o,p"

g = Link 1
h = Link 2
i = Link 3
j = Link 4
k = Link 5
l = Link 6
f = Link 7
m = Cross-Connect Side 0
n = Cross-Connect Side 1
o = CCI 0 / CCNI 0
p = CCI 1 / CCNI 1

Figure 2.10-1. Common Equipment Readout

Check for Out-of-Service Circuit Packs

2. Check for out-of-service circuit packs by entering

RTRV-STATE-EQPT : : [UNIT - [q]q] : : OOS;

Where: [q]q = Unit number (1 through 16).



NOTE:

Enter OOS if you do not expect any out of service circuits during acceptance. However, ALL is used most frequently to show all (OOS, FAIL, PEST) conditions. If XON was used when the link was provisioned, CTRL-s or CTRL-q can be used to temporarily stop or start long output messages.



NOTE:

The conditions are indicated by the presence of a "1" after the entity in the printout. For duplicated entities (FC, CCN/ECCN), there will be listings for both the zero and one sides for the duplicated plug-in. Unequipped NPCs are indicated by dashes.

3. If any circuit packs are equipped but out-of-service, enter:

- the **RST-EQPT** (restore) command for the pack if it should be in-service, or
- the **DISC-EQPT** (degrow) command for the pack if acceptance testing is complete.

Check for Cross-Connect Circuits

4. If you need information on what cross-connect circuits are up on the frame, continue with Step 5.
 - If you do not need information on what cross-connect circuits are up on the frame, proceed to Step 6.
5. Use the following commands as needed to see any cross-connections:

- **RTRV-CRS-T1 : : <npc No.>[&&[-]<range>] : : MAP;** shows the connections on a single NPC or range of NPCs.

Where: <range> = Optional, last NPC of a continuous range. Extra ampersand and dash [&-] is needed if hierarchical.

- **RTRV-CRS-T1::NPC::MAP;** gives a long listing of connections on all NPCs. To abort listing while in progress, enter CTRL x and carriage return to gain access to the link; then enter ABT. If XON was used when the link was provisioned, CTRL-s or CTRL-q can be used to temporarily stop or start long output messages.



NOTE:

If any cross-connections remain, remove any test connections and remove service from and degrow any NPCs that were added for the cross-connections.

6. When acceptance is complete, there should not be any equipped Unit circuit packs. If all procedures in this chapter have been successfully completed, acceptance testing is completed.
-

■ Provisioning a Frame	GT 3.1-1
■ Installing Synchronizers	GT 3.2-1
■ Query Sync Status	GT 3.3-1
■ Add/Change Synchronizer Timing Link Interface	GT 3.4-1
■ Change Synchronizer Timing Base Stratum	GT 3.5-1
■ Install ECCN Circuit Packs	GT 3.6-1
■ Install Multibay CCN Circuit Packs	GT 3.7-1
■ Install Single-Bay CCN Circuit Packs	GT 3.8-1
■ Install CEF Power Units and Fuses	GT 3.9-1
■ Install Multibay Power Units and Fuses	GT 3.10-1
■ Install Single-Bay Power Units and Fuses	GT 3.11-1
■ Remove and Degrow ECCN/CCN	GT 3.12-1
■ Install Plugs-Ins, Grow and Restore FTU/IFTU	GT 3.13-1
■ Remove and Degrow IFTU/FTU	GT 3.14-1
■ Provision DSPU	GT 3.15-1
■ Remove and Degrow DSPU	GT 3.16-1

(Continued on next page)

■ Set Optional Alarm Threshold in Data Base	GT 3.17-1
■ Install Circuit Packs and Grow PB/PC NPC (IFTU2 NPC)	GT 3.18-1
■ Install Circuit Packs and Grow Type PA NPC (IFTU2 NPC)	GT 3.19-1
■ Install Circuit Packs and Grow Type TH NPC (IFTU2 NPC)	GT 3.20-1
■ Provision DSP Platform NPC	GT 3.21-1
■ Install, Grow Circuit Packs and Restore DSPU NPC	GT 3.22-1
■ Change NPC Type, IW, or AIS	GT 3.23-1
■ Change Alarm Threshold	GT 3.24-1
■ Query or Change TS0 Bit Monitoring	GT 3.25-1
■ Remove and Degrow NPC	GT 3.26-1
■ Change NPC TS0 Alarm Indicator	GT 3.27-1
■ Establish 2.048-Mb/s Facility	GT 3.28-1
■ Provisioning Links	GT 3.29-1
■ Establish IP Address for the ICI Circuit Pack	GT 3.30-1
■ Establish Telnet Session to the TCP/IP Link on the ICI Circuit Pack	GT 3.31-1

When to Use

Use this procedure to do the following:

- Configure the frame by entering bay configuration information into the database.
- Grow a Frame ID.

Before You Begin

When configuring the frame, note the following:

- A timeout can occur if entries are delayed during any part of the session; so you may want to read through the procedure first to help prevent a timeout and the need to reenter the information.
- The configure session is started from the Main Menu and is concluded from the Main Menu, but you can abort the session and return to this menu (all entries discarded) by entering CTRL D and carriage return.

Related Information

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Tasks

Step	Action	Reference
1	Configure frame.	SE 3.1.1 <i>Configure Frame</i>
2	Grow Frame ID.	SE 3.1.2 <i>Grow Frame ID</i>

SE 3.1.1: Configure Frame

Procedure

Use this procedure to configure the frame:

1. Log in on link 1 as user DAX (refer to Chapter 6, *Administration*).



NOTE:

Configuring the frame must be performed by user DAX on link 1, any attempt to configure the frame by any other user or on any other link will be denied.

2. If you are using the configure routine to expand the CEF bay configuration beyond three bays, enter **RTRV-PRVG-{USER|TERM}:::ALL;** to verify that all users and in-service links have the NPCAD (network processing circuit addressing) option set for either 4-digit extended (X) or hierarchical (H).



NOTE:

If any users or links are provisioned with NPCAD = E, enter **SET-PRVG-TERM:::ALL::NPCAD-H;** to temporarily change all users and links to the hierarchical addressing scheme.

3. Enter **CPY-MEM:::WKG, MEM;** to ensure that any recent frame activities are recorded on the primary memory card.
4. At link 1, enter **RST-EQPT::MC::MCOND;** to place the frame in the maintenance condition which limits the frame activity to maintenance commands.
5. To initiate the routine, enter **INIT-SYS::FRAME;**.
6. Notice the Main Menu selections and consider the following:
 - The initialize/reset configuration file includes the entries for the software serial number, protected frame numbers, the number of bays in the frame, the height of the bays, the allowable non-hierarchical NPCAD scheme, and the types of units to be equipped. These entries must be made and the configuration must be initialized in the data base before any of the other options on the menu can be performed.
 - The add new bay(s) and unit(s) option will be denied if all bays have already been configured.
 - The add unit(s) to existing bay(s) will be denied if no units were previously designated as unit type NONE.

- The change unit(s) type will be denied if selected unit(s) have already been grown via commands.
 - The remove unit(s) or bay(s) and unit(s) option will be denied if all units were previously designated as NONE or if selected unit(s) have already been grown via commands.
 - The recall option displays what has been entered or what currently exists in the data base configuration.
 - The exit option executes the configure command and records what was entered on the primary memory card.
7. Consider the following items that have to do with making selections within any of the Main Menu routines:
 - To make a selection from a submenu listing, enter the item number for the selection and enter RETURN. To select the default item, simply enter RETURN.
 - If entered information is incompatible with the rest of the configuration, an error explanation will appear and the previous question will be displayed again.
 8. Select the Main Menu item followed by RETURN for the part of the configure routine you want to do.
 - If initialize/reset was selected, continue with Step 9.
 - If initialize/reset was not selected, proceed through the session making the choices to all submenus and after all parts have been completed, proceed to Step 17.
 9. If you do not want to enter a unique software serial number, simply press RETURN. This is how existing or default values are maintained; the system responds with OK, NO CHANGE, or DEFAULT ACCEPTED.

**NOTE:**

The software serial number identifies the frame so that the data bases transferred to SMEM are restricted for use in that frame.

10. If a unique software serial number is to be entered or the number is to be changed to accommodate a memory card from another frame, enter the number and RETURN.
11. Enter information on bay height, the CCN (cross-connect network) type (type is fixed as ECCN), and the option for the number of digits needed for extended NPC numbering.
12. Answer the question about the number of bays and answer the question about bay 1.
13. Continue with the questions to number all the bays in the frame.

14. Continue with the questions to select the unit types in the bays. The possible unit types are IFTU2, DSPU, DS3U, or NONE; Please note the HDS3U is initially selected as a DS3U. The unit must first be configured as a DS3U and becomes an HDS3U once it is grown as an HDS3U with the type field HT100. An HDS3U should only be grown with hybrid formatters, a protection hybrid multiplexer, the FLI packs, and the UC physically in place.
15. When asked whether the frame number and unique identifier are to be unprotected, answer accordingly. If they are not to be protected, which means they can be subsequently changed using **ED-PRMTR-NE**, answer YES and enter the numbers when requested. Otherwise, answer NO.
16. After you have completed the menu portion, examine the configuration that is displayed. If not displayed, enter the recall configuration data.
 - To keep the entries and go to the Main Menu to exit, enter RETURN.
 - To discard the entries, enter CTRL D and return.
17. When back at the Main Menu, either select another menu item to make changes or select Exit to incorporate the entries in the data base and update the primary memory card.
18. If **CFR COMPLD** message is received, enter **RST-EQPT : :MC**; to exit the MCOND state. (See Note.) The procedure to configure the frame has been completed.
 - If denial message is received, continue with Step 19.

**NOTE:**

When you exit, there will be a delay before getting the completion message.

**NOTE:**

The user can now re-establish specific users and links to the 4 digit extended addressing scheme by entering the following command
SET-PRVG-{USER|TERM}:::{<user id>|j[mm]}:NPCAD-X;

19. Which denial explanation is received?
 - If **PMEM error** proceed to Step 21.
 - If **cannot lock/unlock database**, proceed to Step 22.
 - If **entity cannot be addressed**, continue with Step 20.
 - If **checksum verification**, proceed to Step 23.
20. The configuration routine was aborted before the entire routine was completed. Enter **RTRV-PRMTR-NE**;

- If pertinent information was not included, repeat the procedure from Step 5.
 - If pertinent information has been entered, enter **RST-EQPT : :MC**; to exit the MCOND state. The procedure to configure the frame has been completed.
21. Enter **RST-EQPT : :PMEM**; to clear the buffers and ensure that the primary memory card is powered.
- If you are now able to repeat the configure frame routine and write to PMEM, enter **RST-EQPT : :MC**; to exit the MCOND state. The procedure to configure the frame has been completed.
 - If trouble persists, continue with Step 22.
22. Enter **DGN-EQPT : :PMEM**;
- If DGN ...STF message is received, refer to *Manual Diagnostic Failures* in Volume II.
 - If message was not received and trouble persists, do not continue with this procedure. Contact a technical consultant.
23. At the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
- If **RESET . . .COMPLD** (with no COND) is received, repeat the procedure to configure the frame.
 - If **RESET . . .COMPLD** (with COND) is received, refer to *Data Base Troubles* in Volume II to clear reset trouble.
-

SE 3.1.2: Grow Frame ID

Procedure

Use this procedure to grow a unique Frame ID for the frame.

The frame growth command performs the following:

- Places a nonzero frame number and optional unique identifier into the data base
- Enables the use of a 3-character frame field (if developed)
- Grows virtual NPCs [9]961 (and others) as TYPE VI100 for network broadcast connections.

1. Enter the frame growth command as follows:

ED-PRMTR-NE:::abc123...[, FRAME-fg]:[CHAR-n];

Where:

abc123... = Unique Frame ID (UID); up to 20 alphanumeric characters.

fg = Two-digit, alphanumeric frame number (00 through ZZ).
This number is not used in MML, but it can be entered for alternative PDS use.

n = Optional, 3 for 3-character frame field in command (n = 2 is default).

- If command COMPLD message is received, the procedure to grow the frame ID has been completed.
 - If "frame number is protected" explanation is received, you must grow the frame with the same numbers contained in the software configuration file; the numbers can only be changed using the **INIT-SYS::FRAME;** command per *SE 3.1.1 Configure Frame*.
-

When to Use

Use this set of procedures to do the following:

- Install synchronizer circuit packs.
- Check NPC timing option wiring.
- Grow sync timebase, configure sync mode, and restore sync.
- Grow and restore TLIs.

**Related
Information**

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Task

Step	Action	Reference
1	Install synchronizer circuit packs.	SE 3.2.1, <i>Install Synchronizer Circuit Packs</i>
2	Check NPC timing option wiring.	SE 3.2.2, <i>Check NPC Timing Option Wiring</i>
3	Grow sync timebase, configure sync mode, and restore sync.	SE 3.2.3, <i>Grow Sync Timebase, Configure Sync Mode, and Restore Sync</i>
4	Grow and restore sync TLIs.	SE 3.2.4, <i>Grow and Restore Sync TLIs</i>

SE 3.2.1: Install Synchronizer Circuit Packs

Procedure

Use this procedure to install synchronizer circuit packs.

**NOTE:**

The only way to switch SYNC sides is to issue a **RMV-EQPT : : SYNC** command followed by a **RST-EQPT : : SYNC** command. When the SYNC switches sides, the (E)CCN also switches. Switching SYNC sides is not necessary for normal operation.

1. Familiarize yourself with the layout of the equipment in the frame.
2. From system layout information and installation records, determine the following on the sync:
 - The configuration, MASTER or SLAVED.
 - The number and types (digital line, office clock, etc.) of incoming links for slaved timing.
 - Timing distribution, whether DACS II supplies timing to other equipment in the office.
3. Check and install the TB (time base).
4. Install the OSPU and SPU (synchronizer power unit) (TG58).
5. Check and install TLI (timing link interface) type designations.
6. Verify that there are duplicate TLI cards (on sides 0 and 1) for each incoming and timing distribution link.
7. If TG68 or TG75 TLIs are used, verify that the packs are installed in the TLI 2 positions of the sync; four inputs for coaxial cable are provided at the top of the frame.
8. If timing signals are to be distributed from the DACS II, verify that the correct code of TLI is installed and check connection of timing cables. Both the TG70 and TG71 packs provide 4 multiplied outputs.

**NOTE:**

Unused ports do not need terminations.

SE 3.2.2: Check NPC Timing Option Wiring

Procedure

Use this procedure to check the NPC timing option wiring.

1. Refer to the following lists to find the NPC positions in the first two modules of units 1 and 2 that can be used as sources for the 2.048-Mb/s sync clocks.

Hierarchical numbering	Extended numbering
01-1-30	030
01-1-32	032
01-2-30	070
01-2-32	072
02-1-30	190
02-1-32	192
02-2-30	230
02-2-32	232

**NOTE:**

Only the last NPC position on each of these DPCs is used to prevent losing two sources if the DPC fails.

2. Locate miscellaneous terminal strip A at the top rear of bay 2.
3. Verify that the two twisted pair leads (sync clock and ground) of the NPCs that are used go to the top-bay miscellaneous terminal strip A.
4. Verify that the 0SYNC TP and TN (ground) leads (SD-96699-01 or SD-96648-01) from those NPCs at TSA are wired to the corresponding leads at TSB going to sync port 0 of a TLI. Verify that the same is true for the 1SYNC TP and TN leads and sync port 1.

SE 3.2.3: Grow Sync Timebase, Configure Sync Mode, and Restore Sync

Procedure

Since one TLI must be grown for timing distribution in the MASTER Sync Mode; it is covered in this procedure. Additional TLIs are grown in *SE 3.2.4, Grow and Restore Sync TLIs*.

1. Enter **CRTE-EQPT::SYNC::TBpqr**; to grow the sync time base.
 Where: pqr = 000 for North American Stratum 3.
 100 for CEPT, local office.
 200 for CEPT, toll office.
 300 for North American Stratum 2.
2. Verify that circuit pack cards for the TBs and TLIs are installed to enable restoring sync and to enable hardware matchup when TLIs are grown. Always wait 30 minutes for TB oven to reach temperature before attempting to restore sync to service. The TG68 and TG75 cards can only be installed in TLI 2 position because of the 75-ohm coaxial connections.
3. Which sync configuration is required?
 - If **MASTER**, continue with Step 4.
 - If **SLAVED**, proceed to Step 10.
4. Enter **ED-PRMTR-EQPT::SYNC::MASTER**;
5. Enter **RST-EQPT::SYNC-0**; and then **RST-EQPT::SYNC-1**;
6. Enter **CRTE-EQPT::SYNC::TLI-1:TDpqr**; to grow TLI 1 for timing distribution.
 Where: pqr = Format specification; 100 for composite clock (TG70 pack) or 200 for sine wave 2.048 MHz (TG71 pack).
7. Verify TB circuit pack is installed in TLI-3 side 1 position before entering **CRTE-EQPT::SYNC::TBpqr:TLI-3**; to grow additional TB (same stratum as others) for use as clock reference oscillator.
8. Enter **RST-EQPT::SYNC-0::TLI-1**; and **RST-EQPT::SYNC-1::TLI-1**; to restore TLI 1 on both sides.
9. Wait 30 minutes for the timebase to warm up, then enter **RST-EQPT::TLI-3::CRO**; to restore TLI 3.
 The procedure to configure the sync for MASTER mode has been completed.
10. Enter **ED-PRMTR-EQPT::SYNC::SLAVED**;

11. Enter **RST-EQPT::SYNC-0;** and then **RST-EQPT::SYNC-1;**.
-

SE 3.2.4: Grow and Restore Sync TLIs

Procedure

Use this procedure to grow and restore the sync TLIs.

1. How will the TLI pack be used?
 - If **TIMING EXTRACTOR**, continue with Step 2.
 - If **TIMING DISTRIBUTOR**, proceed to Step 7.
2. Note the following comments about the command fields:
 - The sync ports (SSP 0 and SSP 1) on each TLI are grown separately; the type (TP versus TU) must be the same, but the parameters may be different.
 - The source priority for the two SSPs on a TLI must be different.
 - The optional NPC field is used when an NPC is used as a timing source for the TLI. In this case, the TLI is a TU type and the unipolar signal is wired through the miscellaneous terminal strip on the frame.
3. To grow SSP 0 for the TLI, enter
**CRTE-EQPT::SYNC::TLI-n:tez,SSP-0,SRC-p\
 [,NPC-<npc No.>];**
 Where:
 - n = TLI number (1 through 4).
 - te = TP for code TG65 or TG75 cards; TC for code TG66 card; TU for code TG67 card; or TR for code TG68 card.
 - xyz = Signal format specification.
 - a = Sync port (0 or 1).
 - p = Priority for sync port, p=1 (highest) to p=8 (lowest).
 - <npc No.> = Optional, to name NPC supplying timing from incoming line; This field only appropriate with TLI type TU.
4. To restore the same SSP on both sides, enter
RST-EQPT::SYNC-0::TLI-n:SSP-0; and then
RST-EQPT::SYNC-1::TLI-n:SSP-0;.
5. Repeat Steps 3 and 4 to grow SSP 1 and restore it on both sides (substitute SSP 1 for SSP 0 in commands).
6. Repeat Steps 3, 4, and 5 as required to grow and restore remaining timing extractor TLIs. The procedure to provision TLIs has been completed. If additional TDs (timing distributors) are needed, continue with Step 7.

Where:

n = TLI number (1, 3 or 4).
pqr = Signal format specification;
100 for composite clock (TG70 pack)
200 for sine wave (TG71 pack).

7. Enter **RST-EQPT::SYNC-0::TLI-n**; and then
RST-EQPT::SYNC-1::TLI-n;
8. Repeat Steps 7 and 8 as needed to grow and restore other timing distributor TLIs.
9. Enter **RTRV-STATE-COM:::ALL**; to check the source priority.
10. Enter **RTRV-STATE-EQPT::SYNC**; and notice the status of the new links as shown in the message.



NOTE:

Sync 0 occurs before (left of) sync 1 in the status listings and the presence of a 1 alongside a condition indicates that the condition exists.

When to Use

Use this procedure to query the sync status.

**Related
Information**

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to query the sync status.

1. Enter **RTRV-STATE-EQPT::SYNC;** and read the sync configuration and status.
2. Enter **RTRV-REG-EQPT::SYNC-a::STR;** and read the output.

Where: a = Sync side (0 or 1) to get the equivalent information.

Crosscouple is the normal running mode in which the sync sides are locked together (in-phase).

3. If the sync configuration = MASTER, verify that additional TB circuit pack is installed in TLI 3, side 1 slot. This time base pack will also take up TLI 4 position. Timing distributor packs must also be installed in duplicated TLI 1 or TLI 2 slots for this application.
-

```
/*STR:b01,b02,b03,b04,b05,b06*/
"STR:byte1,byte2,byte3,byte4,byte5,byte6"
```

BYTE 1 (BITS abcdefgh)

a	=	spare	e	=	TLI 1 in service
b	=	sync hardware failed	f	=	TLI 2 in service
c	=	mate failed or OOS	g	=	TLI 3 in service
d	=	TB failed or OOS	h	=	TLI 4 in service

BYTE 3 (BITS abcdefgh)

a	=	sync reset, needs config.	e	=	crosscouple trouble
b	=	DPLL hardware error	f	=	CRO timing trouble
c	=	TB error	g	=	spare
d	=	PLL symmetry error	h	=	spare

BYTE 5 BIT POSITIONS: ab cde fgh

SOURCE (BITS ab)		ACTIVE PORT (BITS cde) (if BITS ab = 01)	
00	=	holdover	000 = TLI 1, SSP 0
01	=	timing link	001 = TLI 1, SSP 1
10	=	cross-couple	010 = TLI 2, SSP 0
11	=	CRO	011 = TLI 2, SSP 1
			100 = TLI 3, SSP 0
			101 = TLI 3, SSP 1
			110 = TLI 4, SSP 0
			111 = TLI 4, SSP 1
BITS fgh (unused)			

BYTE 9 (BITS abcdefgh)

a	=	loss of energy	d	=	TB oven still cold
b	=	TB command error	e	=	spare
c	=	TB oscillator drift	fgh	=	000 for stratum 3, 001 for 2-Mb/s local
		(master mode)			010 for 2-Mb/s toll, 011 for stratum 2

Figure 3.3-1. Sync Status Register

Add/Change Synchronizer Timing Link Interface

3.4

When to Use

This procedure allows: (1) connecting additional TLIs (timing link interfaces) for timing extraction or (2) changing the existing TLI types, NPC source, or sync port priority. Any NPC timing sources are entered in the data base in this procedure. Additional links may be used to provide extra protection in case the other links fail or to provide different priority source signals. Each TLI has two sync ports (SSP) and is duplicated on both sides of the sync. If an active SSP fails, the sync will switch to the other SSP on the TLI; if there are no more sources on the side, the sync will switch to the other side.

Before You Begin



CAUTION:

Performing this procedure incorrectly can interrupt service. Perform each step of the procedure in the order given.

Related Information

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to add or change the synchronizer timing link interface.

1. If office timing source is to be connected to DACS II, verify that timing signals have been wired to miscellaneous terminal strip on DACS II frame. Each DACS II sync TLI circuit pack has two ports.
2. Verify that correct code(s) of timing extractor packs were installed for the additional timing links. The same code must be installed in the corresponding TLI slots of both syncs. The TG68 and TG75 packs can only be installed in the TLI 2 position because of the 75-ohm coaxial connections.
3. If timing for added link is to be extracted from 2.048 Mb/s line, the involved NPC must be named in the data base so that sync failures will be related to NPC source failures. Only one of the eight allowable NPCs can be used per TLI SSP. These NPCs are the last NPCs on the designated cards in units 1 and 2 as follows:

Hierarchical numbering

01-1-30, 01-1-32, 01-2-30, 01-2-32, 02-1-30, 02-1-32, 02-2-30, and 02-2-32.

Extended numbering

030, 032, 070, 072, 190, 192, 230, and 232

4. Do you need to add timing links or change existing TLIs?
 - If **add links**, continue with Step 5.
 - If **change TLIs**, proceed to Step 12.
5. To grow SSP 0 on the next TLI, enter **CRTE-EQPT::SYNC::\ TLI-n: tepqr, SSP-a, SRC-p[, NPC-<npc No.>]**;

Where:

- n = TLI number (1 through 4).
- tepqr = Input signal type, pqr is not defined (000 through 999).
- a = Sync port 0 or 1.
- p = Sets the priority, p=1 (highest) to p=8 (lowest).
- <npc No.> = Optional, to name NPC supplying timing from incoming line; either extended (for example, [0]030) or hierarchical (for example, 01-1-30). Only appropriate with TLI type TU.

6. To restore sync port 0 in the TLIs in both syncs, enter

RST-EQPT::SYNC-0::TLI-n:SSP-0; and
RST-EQPT::SYNC-1::TLI-n:SSP-0;

7. Repeat Step 5 to grow the other sync port (substituting SSP 1) on the same TLI.
8. Repeat Step 6 (substituting SSP 1) to restore sync port 1 on the same TLIs and in both syncs.
9. If more TLIs are to be added at this time, repeat Steps 5 through 8 for the next TLI.
 - If no more TLIs are to be added, continue with Step 10.
10. Enter **RTRV-STATE-EQPT: :SYNC;** and notice the status of the new links as shown in the message.

**NOTE:**

Sync 0 occurs before (left of) sync 1 in the status listings and the presence of a 1 alongside a condition indicates that the condition exists.

11. For additional sync information, enter the appropriate command and read the registers:
 - For SYNC: **RTRV-REG-EQPT: :SYNC-a: :STR;**
 - For TLI: **RTRV-REG-EQPT: :SYNC-a: :TLI-n:STR;**
 - For SSP: **RTRV-REG-EQPT: :SYNC-a: :TLI-n:SSP-s:STR;**

The procedure to add the synchronizer timing link interface has been completed.
12. Enter the **RTRV** commands given in Steps 10 and 11 to check the existing status and characteristics of the TLIs to be changed.
13. To remove sync port 0 on the subject TLI in both syncs, enter **RMV-EQPT: :SYNC-0: :TLI-n:SSP-0;** and **RMV-EQPT: :SYNC-1: :TLI-n:SSP-0;**.

Table 3.4-1. Sync Status Output

Message Field	Outputs and Meanings
CFR	MASTER or SLAVED sync configuration.
STRATUM	STR2, STR3, CEPT TOLL, or CEPT LOCAL.
MODE	HOLDOVER, FAST, or NORMAL for each DPLL.
SOURCE	Source for sync DPLL (HOLDOVER, TLI, or CRO; other side will be MATE).

Table 3.4-1. Sync Status Output (Continued)

Message Field	Outputs and Meanings
IN SERVICE-DPLL	DPLL side 0 side 1, TB side 0 side 1, SOURCE side 0 side 1; presence of a 0 for side means out-of-service and a 1 means in-service.
ACTIVE-LINK	Gives TLI No. and its SSP (0, 1) which is active on each side (0 and 1).
PLL TIMING ERROR	Presence of 0 for side means no error and presence of 1 for side means error.

14. Repeat Step **13** (substituting SSP 1) to remove sync port 1 on the same TLIs in both syncs.
15. Which change do you need to make?
 - If **TLI type** or **NPC source**, continue with Step **16**.
 - If **sync port priority**, proceed to Step **17**.
16. Enter
ED-PRMTR-EQPT::SYNC::TLI-n:SSP-b:
{tepqr|NPC-<npc No.>};
17. Enter **ED-PRMTR-EQPT::SYNC::SRC-i/a,b[&j/c,d ...&l/g,h];**.
 You will also have to change the NPC growth specifications to remove/add the sync source option.
 Where:
 i,j ...l = Subject TLI (1 through 4)
 a,b ...g,h = Priorities (8 through 1, low to high) for the sync ports (0,1) on the subject TLI.
18. To restore sync port 0 on the subject TLI in both syncs, enter
RST-EQPT::SYNC-0::TLI-n:SSP-0; and
RST-EQPT::SYNC-1::TLI-n:SSP-0;
19. Repeat Step **18** (substituting SSP 1) to restore sync port 1 on the same TLIs in both syncs.
20. Repeat procedure from Step **10**.

Change Synchronizer Timing Base Stratum

3.5

When to Use

This procedure allows changing the level (stratum) of the sync time base while the sync remains in operation. The procedure is to remove one side, degrow the TB and replace it, regrow the sync at the new stratum, configure the sync mode, and restore the side; then repeat the procedure for the TB on the other side. For master timing, the third TB must be replaced before the TB on the other side. A higher stratum (2 versus 3 or toll versus local) provides a more precise timing signal for the network sync plan or office application.

Before You Begin

**CAUTION:**

Performing this procedure incorrectly can interrupt service. Perform each step of the procedure in the order given.

Related Information

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to change the synchronizer timing base stratum.

1. Enter the following commands to see the status of each side of sync and to determine which is supplying timing (active). The active side is indicated in the SOURCE field of the STATE message by one of the following: TLI, CRO, or HOLDOVER. The other side will show MATE.

RTRV-STATE-EQPT::SYNC; and **RTRV-REG-EQPT::SYNC-a::STR;**

Where: a = Side 0 or 1.

2. Enter **RMV-EQPT::SYNC-a;** to remove the inactive sync side.
3. Enter **RMV-EQPT::UNIT-[q]q::FC-sb;** to remove all FCs (format converters) *on the same side* for all FTU units and modules in each unit.

Where:

[q]q = Unit number (1 through 16).

sb = FC side and module number.



NOTE:

The FCs (same side as inactive sync) are being removed and disconnected to prevent noise on circuits, but this precaution will not be necessary after a change notice is implemented to add a wiring termination to the ECCN.

4. Unplug the same FCs that were previously removed from service.



CAUTION:

Unplugging FC packs on the active side of the sync will cause loss of service in the unit.

5. Enter **DISC-EQPT::SYNC::TB;** to degrow sync time base.
6. Replace TB pack for same side with code (TG60-TG63) for required stratum.
7. Enter **CRTE-EQPT::SYNC::TBpqr;** to grow new time base.

Where: pqr = 000 for North American stratum 3.
 = 100 for international local.
 = 200 for international toll.
 = 300 for North American stratum 2.

**NOTE:**

The completion of this command causes the stratum of the time base in the DACS II data base to differ from the actual in-service sync. DGNDT messages (test number 312) will occur because of this difference, but the situation will be corrected and the DGNDT will cease when this procedure is completed.

8. Enter **ED-PRMTR-EQPT::SYNC::{MASTER|SLAVED}**; to configure the sync for the mode that existed previously.
9. If the sync is to be operated at a lower stratum (than it was equipped for above, see Note), enter **ED-PRMTR-EQPT::SYNC::<level>**;

Where: <level> = STR2 or STR3 for TB TG63; TOLL, or LOCAL for TB TG62.

**NOTE:**

This step is provided in case the stratum must be changed for a trouble situation, but it is not likely that the sync would be operated at the lower stratum.

10. Wait 30 minutes for TB oven to reach temperature and then enter **RST-EQPT::SYNC-a**; to restore sync side.

**NOTE:**

A conditional command completion will be received because the other side must still be changed.

11. How was sync configured?
 - If configured as MASTER, continue with Step 12.
 - If configured as SLAVED, proceed to Step 17.
12. Enter **RMV-EQPT::TLI-3::CRO**; to remove additional TB pack from service.
13. Replace additional TB pack (located in center TLI slots) with new code for stratum.
14. Enter **DISC-EQPT::SYNC::TLI-3**; to degrow the additional TB.
15. Enter **CRTE-EQPT::SYNC::TBpqr:TLI-3**; to regrow same TB with same type field as the TBs on the sides.
16. Wait 30 minutes for TB oven to reach temperature and then enter **RST-EQPT::SYNC::TLI-3::CRO**;

17. Reinstall the FC packs in their slots and enter **RST-EQPT::UNIT-[q]q::FC-sb;** to restore each one.
18. Verify that each one restored correctly.
19. Enter **RMV-EQPT::SYNC-a;** to remove other sync side.
20. Enter **RMV-EQPT::UNIT-[q]q::FC-sb;** to remove all FCs *on the same side* for all FTU units and modules in each unit.
21. Unplug the same FCs that were previously removed from service.

**NOTE:**

Unplugging FC packs on the active side of the sync will cause loss of service in the unit.

22. Replace TB pack for same side.
 23. Wait 30 minutes for TB oven to reach temperature and then enter **RST-EQPT::SYNC-a;**.
 24. Reinstall the FC packs in their slots and enter **RST-EQPT::UNIT-[q]q::FC-sb;** to restore each one.
 25. Enter **RTRV-STATE-EQPT::SYNC;** to check status of sync.
 26. If additional timing links are to be added in SLAVED configuration, proceed to add the links (see *Grow and Restore Sync TLIs*).
 27. For stratum 2 operation, it may take 2 hours to reach the rated operating precision.
-

When to Use Use this set of procedures to install circuit packs in an ECCN.

Before You Begin Before installing circuit packs, review these guidelines:

- Unpack the circuit packs at the frame location where they will be used.
- Use the wrist strap and observe ESD (electrostatic discharge) precautions when handling the pack.
- While holding the plug-in by the front piece, bring it up and place it into the slot. Also support the bottom edge if necessary.
- Gently push the card in the slot to the point where the top and bottom latches can be used to pull the card evenly into the slot.

Related Information For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to install ECCN circuit packs.

**NOTE:**

If necessary, the installation of the power units for the CCN and CCN2 can be checked per *Install Power Units and Fuses*. The ECCN circuit packs have built-in power converters.

**NOTE:**

If this procedure is being used to check the installation of the ECCN circuit packs, you can simply read through the procedure and check the location of the circuit packs.

**NOTE:**

The TSI/CCB/CCN/CCNI entities are used in conjunction with the Non-CEF frames while the ETSI/CCI entities are used the CEF frames.

1. Locate the side 0 and side 1 shelves of the ECCN in bay 2 of the frame.
2. Verify that the BT (bus terminator, BBR1 code) circuit packs are securely installed in the designated far-left and far-right slots on each side of the network (ECCN0 and ECCN1).
3. Verify that the CCI (clock control interface, BBS1 code) circuit pack is securely installed in the designated slot on each side of the network (ECCN0 and ECCN1).
4. Enter **RTRV-REG-EQPT::XC-a::STR**; and determine the active and inactive sides. The active side is indicated when the right most data byte equals 05.
Where: a = Either side (0 or 1).
5. Enter **RMV-EQPT::CCI-s**; to remove the *inactive* side from service.
6. Working in the network shelf for the inactive side, install the ETSI (expanded time slot interface) (BBS2) for each unit to be equipped. Push at top and bottom of circuit pack to evenly seat it; then use the latches to secure it in the slot.
7. Enter **RST-EQPT::CCI-s**; to restore the CCI for the inactive side to service.
Where: s = Same side.
8. Enter **SW-DX-EQPT::XC-a**;

Where a = Inactive side to cause side switch (change active side).

**NOTE:**

Switching (E)CCN sides does not cause the SYNCs to switch sides.

9. Enter **RMV-EQPT : :CCI-s**; to remove the side (*that was made inactive by the side switch*) from service.

Where: s = New inactive side.

10. Install the required ETSIs on the shelf for the remaining side (now inactive). The equipage is duplicated on both sides of the network so that service can be switched to the duplicated side if the active side fails.

11. Enter **RST-EQPT : :CCI-s**; to restore the CCI for the inactive side to service.

Where: s = Same side.

When to Use Use this set of procedures to install circuit packs in a multibay CCN.

Before you begin Before installing circuit packs, review these guidelines:

- Unpack the circuit packs at the frame location where they will be used.
- Use the wrist strap and observe ESD (electrostatic discharge) precautions when handling the pack.
- While holding the plug-in by the front piece, bring it up and place it into the slot. Also support the bottom edge if necessary.
- Gently push the card in the slot to the point where the top and bottom latches can be used to pull the card evenly into the slot.

Related Information For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to install multibay CCN circuit packs.

1. Locate CCN (cross-connect network) in the frame and notice the organization within the CCN.
2. Verify that the CCNI (cross-connect interface) card (UM30) is installed in designated slots on both sides of the CCN.
3. Determine which CCB (cross-connect buffer) (UM26) and TSI (TM660) circuit pack slots must be equipped to support the DACS units which will be used (1 through 6).

**NOTE:**

The TSI slot numbers show how the cards are connected; for example, TSI 21 connects data from unit 2 to unit 1.

**NOTE:**

Normally, as units are added, TSIs are installed to connect the new unit with every other one and the total number of TSIs equals the total number of units squared.

4. Enter **RTRV-REG-EQPT::XC-a::STR**; and determine the active and inactive sides. The active side is indicated when the rightmost data byte equals 05.

Where a = Either side (0 or 1).

5. Install the required CCBs (UM26) and TSIs (TM660) on the inactive side. Plugging into the inactive side prevents possible transmission hits.
 6. Enter **RTRV-STATE-COM:::ALL**; and verify that the inactive side is not failed because switching to a failed side will cause loss of service.
 7. Enter **SW-DX-EQPT::XC-a**;
Where a = Inactive side to cause side switch.
 8. Install the required CCBs and TSIs on the remaining side (now inactive).
-

When to Use	Use this procedure to install circuit packs in a single-bay CCN.

Related Information	For related information, refer to Volume I, Chapter 3, <i>Provisioning</i> .

Instructions

Use this procedure to install single-bay CCN circuit packs. (This procedure contains core pds gen4 information only.)

1. Locate the CCN (cross-connect network) in the frame and notice the organization within the network.
2. Verify that the CCNI (cross-connect interface) card (UM30 code) is installed in the designated slots on both sides of CCN.
3. Enter **RTRV-REG-EQPT::XC-a::STR;** and determine the active and inactive sides. The active side is indicated when the rightmost data byte equals 05.

Where a = Either side (0 or 1).

4. Install the required CCBs (UM26) and TSIs (TM660) on the inactive side. Plugging into the inactive side prevents possible transmission hits.



NOTE:

The TSI designation numbers (11, 15, and 51) indicate how the cards are connected; for example, TSI 11 connects data from unit 1 back to unit 1. If unit 5 is not to be equipped, the procedure to install single-bay CCN circuit packs has been completed.

5. Enter **RTRV-STATE-COM:::ALL;** and verify that the inactive side is not failed because switching to a failed side will cause loss of service.
6. Enter **SW-DX-EQPT::XC-a;**
Where a = Inactive side to cause side switch.
7. Install the required CCBs and TSIs on the remaining side (now inactive).

Install CEF Power Units and Fuses

3.9

When to Use

Use this procedure to install CEF power units and fuses.

Related Information

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to install CEF power units and fuses.

1. Locate the power unit slots for the section of the frame being equipped using shelf designation strips.
2. Determine whether the required codes and quantities of power units are installed.
3. Determine whether the required 48-volt input fuses are installed in the fuse and alarm panel (bottom frame).
4. Determine whether the fuses are installed in fuse boards per designation strips.
 - If the proper power units and fuses have already been installed, the procedure to install CEF power units and fuses has been completed.
 - If power units and fuses have not been installed, continue with Step 5.
5. Install the required 48-volt fuses.
6. Install the required LED fuses.
7. Install the required power units. As you move the latch/switch on each to the closed position, notice the LED on the power unit.

Response: The red LED on the power unit is lighted while the latch/switch is open and goes off and remains off when the latch is closed.
8. If any of the required responses did not occur, replace the power unit and confirm the operation of the faceplate LED.
9. Get digital multimeter (such as KS-20599 DMM) and set it to read DC "" range.
10. Measure each power unit output between the + and – V1 jacks (or between each V jack and RTN). The SPU (sync power unit) does not have test jacks to perform this test.
 - If the requirement is met, disconnect the meter.
 - If the requirement is not met, replace the power unit.



NOTE:

The FTU power units feed a common bus, and low voltage can only be detected if one power unit is disconnected and the test is repeated for all combinations of the power units.

Install Multibay Power Units and Fuses

3.10

When to Use

Use this procedure to install multibay power units and fuses.

Related Information

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to install multibay power units and fuses.

1. Locate the power unit slots for the section of the frame being equipped and the shelf designation strips.
2. Determine whether the required codes and quantities of power units are installed.
3. Determine whether the required 48-volt input fuses are installed in the fuse and alarm panel (bottom frame).
4. Determine whether the LED output fuses are installed in ED-2C863-30 DFBs (dual fuse boards).



NOTE:

Version 1 FTUs use two GRP 1 (5A) DFBs and one GRP 2 (7.5A & 5A) DFB; the GRP 2 board is for fuses CQ-JX. The DSPU and multibay CCN both use GRP 3 (7.5A) DFBs.

- If the proper power units and fuses already have been installed, the procedure to install multibay power units and fuses has been completed.
 - If proper units and fuses have not been installed, continue with Step 5.
5. Install the required 48-volt fuses.
 6. Install the required LED fuses.
 7. Install the required power units. As you move the latch/switch on each to the closed position, notice the LED on the power unit.
Response: The red LED on the power unit is lighted while the latch/switch is open and goes off and remains off when the latch is closed.
 8. If any of the required responses did not occur, replace the power unit and confirm the operation of the faceplate LED.
 9. Get digital multimeter (such as KS-20599 DMM) and set it to read DC voltage range.
 10. Measure each power unit output between the + and – V1 jacks (or between each V jack and RTN. The SPU (sync power unit) does not have test jacks to perform this test.
 - If the requirement is met, disconnect the meter.
 - If the requirement is not met, replace the power unit.
-

Install Single-Bay Power Units and Fuses

3.11

When to Use

Use this procedure to install single-bay power units and fuses.

Related Information

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to install single-bay power units and fuses.

1. Locate the power unit slots for the section of the frame being equipped and the shelf designation strips.
2. Determine whether the required codes and quantities of power units.
3. Determine whether the required 48 V input fuses are installed in the fuse and alarm panel (top-frame).
4. Determine whether the LED output fuses are installed in the ED-2C863-30 DFBs (dual fuse boards) per designation strips. The FTU uses two GRP 1 (5A) DFBs and one GRP 2 (7.5A & 5A) DFB; the GRP 2 board is for fuses CQ-JX. The DSPU uses a GRP 3 (7.5A) DFB, and the CCN2 uses a GRP 4 (5A) DFB.
 - If the proper power units and fuses have already been installed, the procedure to install single-bay power units and fuses has been completed.
 - If power units and fuses have not been installed, continue with Step 5.
5. Install the required 48 V fuses.
6. Install the required LED fuses.
7. Install the required power units. The FTU power units should be equipped in left-to-right order even though they all feed a common bus.

Response: The red LED on the power unit lights and remains lighted with the power unit latch/switch open.
8. Close the power unit latch/switch.

Response: The red LED on the power unit goes off and remains off.
9. If any of the responses did not occur, replace the power unit, turn the replacement on, and confirm the operation of the power unit LED.
10. Get digital multimeter (such as KS-20599 DMM) and set it to read DC voltage range.
11. Measure each power unit output between the + and – V1 jacks (or between each V jack and RTN). The SPU (sync power unit) does not have test jacks to perform this test.
 - If the requirement is met, disconnect the meter.
 - If the requirement is not met, replace the power unit.

**NOTE:**

The FTU power units feed a common bus, and low voltage can only be detected if one power unit is disconnected and the test is repeated for all combinations of the power units.

When to Use

Use this procedure to remove ECCN (expanded cross-connect network) or CCN (cross-connect network) plug-ins. The ECCN/CCN plug-ins are degrown when the units are degrown. After removing a pack from service, the pack can be removed from the frame. After degrowing a pack or group, it can be regrown with different specifications. This is the main reason for degrowing a unit, and, to expedite this, the associated ETSIs or CCB and TSIs are automatically degrown with the unit UC. There are also commands to remove all the ETSIs or TSIs per side to expedite troubleshooting.

Related Information

For additional information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to remove and degrow ECCN/CCN.

1. To list all plug-ins enter:

RTRV-STATE-EQPT : : [UNIT - [q]q] : : EQPD ;

To list common plug-ins (no NPCs) enter:

RTRV-STATE-COM : : : EQPD ;

After response enter **RTRV-STATE-EQPT : : [UNIT - [q]q] : : OOS ;**

Where: [q]q = Unit number (1 through 16).



NOTE:

If XON option is selected for link, you can use CTRL-s and CTRL-q to stop and start the output.

2. Check the output messages to determine which ECCN/CCN packs are grown and still in-service. The presence of a "1" or the presence of the CP number itself in the listing indicates that the condition (equipped, out-of-service) exists.
3. Consider the following comments relating to removing service and degrowth:
 - Allowable active-side removals are: ETSIs if no involved CONN maps; CCI if no associated ETSIs in-service; and FC if no associated NPCs in-service.
 - When a pack in a duplicated circuit group is removed on the active side, service will automatically switch over to the other side (if in-service).
 - Service cannot be removed from the remaining side if there are any in-service NPCs.
 - When unit packs are removed from service and the unit UC is degrown, the ETSI will **automatically** be removed and degrown (disconnected). This occurs only if the associated packs are not supporting cross-connections or other packs (subentities).
4. Enter the following command to remove ECCN or CCN plug-ins (see Note).



NOTE:

When UNIT is to be degrown, the ETSI (or CCB and TSIs) on both sides will be removed.

For ECCN:**RMV-EQPT : : ETSIS, ECCN-s;** (for all ETSIs on Side s)**RMV-EQPT : : ETSI-sqq;** (for individual ETSI)**RMV-EQPT : : CCI-s;**

Where: qq = Unit Number 1 through 16.

For CCN:**RMV-EQPT : : TSIS, CCN-s;** (for all TSIs on Side s)**RMV-EQPT : : CCB-sf;****RMV-EQPT : : TSI-sft;** (for individual TSI)**RMV-EQPT : : CCNI-s;**

Where:

s = Side 0 or 1.

f = CCB number 1 through 6.

sft = TSI number consisting of sides (0 or 1) FROM unit (1 through 6) and TO unit (1 through 6); for example, TSI 013 is on Side 0 and receives data FROM unit 1 and connects TO unit 3.

**NOTE:**

A major alarm will be registered after the ECCN/CCN side has been out of service for more than two minutes.

5. Enter the following commands to degrow the UNIT.

DISC-EQPT : : UNIT-[q]q;

Where: [q]q = Unit number 1 through 16.

**NOTE:**

The ETSI (or CCB and TSIs) and the FMTs on both sides of the unit will be removed and degrown when the unit is degrown.

Install Plugs-Ins, Grow and Restore FTU/IFTU

3.13

When to Use

Use this set of procedures to install plug-ins, and grow and restore the FTU/IFTU.

Related Information

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Task

Step	Action	Reference
1	Install FTM circuit packs (FTMIs and FCs).	SE 3.13.1, <i>Install FTM Circuit Packs (FTMIs and FCs)</i>
2	Grow FTU/IFTU.	SE 3.13.2, <i>Grow FTU/IFTU</i>
3	Restore ECCN/CCN.	SE 3.13.3, <i>Restore ECCN</i> or SE 3.13.4, <i>Restore CCN</i>
4	Restore UC.	SE 3.13.5, <i>Restore UC</i>
5	Grow FTMI.	SE 3.13.6, <i>Grow FTMI</i>
6	Restore FTMI and FCs	SE 3.13.7, <i>Restore FTMI and FCs</i>

SE 3.13.1: Install FTM Circuit Packs (FTMIs and FCs)

1. Determine which unit and FTMs (facility terminating modules) need to be equipped to support the added service.
2. If not already installed, install the **TG81** code FTM and the **TG79** code of FCs (format converters) for the FTMs to be equipped.
3. If the circuit pack dual cards (for example, DPC) for the NPCs to be equipped are provided, install them in the NPC slots.

**NOTE:**

Each circuit pack card contains the circuitry for two NPCs.

**NOTE:**

Various codes of circuit packs for the NPCs are available to provide the required line interface and functions. If you do not know the NPC requirement, wait until the facility is established to install NPC circuit packs.

SE 3.13.2: Grow FTU/IFTU

Procedure

This procedure is used to grow the unit in the data base and to define the type of application (FTU/IFTU). The associated ETSI in the cross-connect network is grown when this command is executed as indicated in the completion message. The ETSI will be restored in *SE 3.13.3, Restore ECCN* and *SE 3.13.4, Restore CCN* in this section.

**NOTE:**

If the peripheral unit is not recorded in the software configuration file, the growth command in this procedure will be denied (INERR BAD ARG).

1. If you need to see the unit assignments that have been entered in the software configuration file, enter **RTRV-PRMTR-NE**; (see Note). This configuration was set during the equipment installation and acceptance, but it can still be changed with the INIT-SYS FRAME program.

**NOTE:**

Unit designations (1 through 16, left to right) are 1 for FTU Version 1, 2 for DSPU, 3 for DS3U, 4 for FTU Version 2, or dash for not designated.

2. Familiarize yourself with the following command:
CRTE-CNFGRN-EQPT: :UNIT-[q]q:
[:a[,b[,c[,d[,e[,f]]]]]] :[mnxyz];

Where:

[q]q = Unit number (1 through 16).

3. Enter the command with the required information.
 4. Repeat the procedure for any other units to be grown.
-

SE 3.13.3: Restore ECCN

1. If the CCI pack was just installed in a previous procedure, enter
RST-EQPT : :CCI-s ;

Where:



NOTE:

The two BTs (bus terminators) for the shelf are also restored with the CCI circuit pack.

2. Use one of the following commands to restore the ETSIs:

Restore all ETSIs - **RST-EQPT : :ETSI, ECCN-s ;**

Restore ETSIs individually - **RST-EQPT : :ETSI-sqq ;**

Where: sqq = ETSI number consisting of Side (0 or 1) and peripheral unit number (01 through 16).

If the DACS II has a CCN, then proceed to the next section, *Restore CCN*. Otherwise, proceed to the section, *Restore UC*.

SE 3.13.4: Restore CCN

Procedure

The restore commands in this procedure are given in the order which establishes communications within the network and enables the restoral of the next pack in the list. The CCB and TSI packs that need to be restored after a new unit is grown are listed in the growth completion message.

1. If the network interface pack (CCNI) was just installed in a previous procedure, enter **RST-EQPT::CCNI-s;**

Where:

2. If a CCB was just installed in a previous procedure, enter **RST-EQPT::CCB-sf;**

Where: sf = CCB number consisting of the Side (0 or 1) and position (1 through 6); for example, CCB 12 is on side 1 and is associated with Unit 2 TSIs.

3. Use one of the following commands to restore the TSIs:

Restore all TSIs in a unit

**RST-CNFRN-EQPT::UNIT-q::CCN-s
[:a[,b[,c[,d[,e[,f]]]]]];**

Restore all the TSIs on a side (see Note)

RST-EQPT::CCN-s,TSIS;

Restore TSIs individually

RST-EQPT::TSI-sft;;



NOTE:

Each of the 72 TSIs is listed in the output by the From-, To-Unit ID along with results (DGN A, C, S, D and RST C or D).

A = ATP (all tests passed)

C = Completed

D = Denied

S = STF (same test failed)

Where:

- q = Unit number (1 through 6).
 - s = Side (0 or 1).
 - (a[,b[,c[,d[,e[,f]]]]]) = Optional, to specify the limited unit connectivity (thereby the associated TSIs).
 - sft = for example, TSI 013 is on Side 0 and receives data FROM unit 1 and connects TO unit 3.
-

SE 3.13.5: Restore UC

Procedure

Use this procedure to restore the UC.

1. Enter **RST-EQPT::UNIT-[q]q:UC;** to restore unit controller.

Where [q]q = Unit number (1 through 16).

**NOTE:**

For the CEF, the unit UC diagnostic for the restore operation runs wiring tests between the unit and the EMC.

SE 3.13.6: Grow FTMI

Procedure

This procedure contains the use of the command to grow the FTMI in the data base and to specify the line impedance of the DPCs to be used in the module, either 120-ohm for twisted wire pairs or 75-ohm for coaxial cable. This growth operation results in the associated FCs being grown also.

1. Enter **CRTE-EQPT: :UNIT-[q]q: :FTMI-d:IMP-zzz;**

Where:

2. Repeat the procedure for other FTMs to be grown.
-

SE 3.13.7: Restore FTMI and FCs

Procedure

The following restore commands are given in the order which establishes communications with the unit and enables the restoral of the next pack in the list. After a higher level pack is restored, all the next lower packs can be restored which in turn allows restoral of any of the lower level packs.

1. Enter **RST-EQPT::UNIT-[q]q::FTMI-b;**

Where: b = FTM interface number (1 through 4).

2. Enter **RST-EQPT::UNIT-[q]q::FC-sf;** to restore the FCs (format converters) associated with the FTMI.

Where: sf = FC number consisting of side (0 or 1) and position in FTU (1 through 4).

When to Use

Use this procedure to remove IFTU (integrated facility terminating unit) or FTU (facility terminating unit) plug-ins from service and to degrow the unit. After removing a pack from service, the pack can be removed from the frame. After degrowing a pack or group, it can be regrown with different specifications. To expedite degrowing a unit, the associated ETSIs (expanded time slot interchangers), or CCBs (cross-connect buffers) and TSIs (time slot interchangers) are automatically degrown with the unit UC (unit controller). There are also commands to remove all the ETSIs or TSIs per side to expedite troubleclearing.

Related Information

For additional information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to remove and degrow IFTU or FTU plug-ins from service and degrow the unit.

1. To list all plug-ins enter:

RTRV-STATE-EQPT : : [UNIT - [q]q] : : EQPD;

To list common plug-ins (no NPCs) enter:

RTRV-STATE-COM : : : EQPD;

After response enter **RTRV-STATE-EQPT : : [UNIT - [q]q] : : OOS;**

Where: [q]q = Unit number (1 through 16).



NOTE:

If XON option is selected for link, you can use CTRL-s and CTRL-q to stop and start the output.

2. Check the output messages to determine which UNIT packs are grown and still in-service. The presence of the CP number itself or the presence of a "1" in the listing indicates that the condition (equipped, out-of-service) exists.
3. Consider the following comments relating to removing service and degrowth:

- When unit packs are removed from service and the unit UC is degrown, the associated and ETSIs, or CCBs and TSIs, will **automatically** be removed and degrown (disconnected). This occurs only if the associated packs are not supporting cross-connections or other packs (subentities).

4. Enter the following commands to remove the UNIT.

RMV-EQPT : : UNIT - [q]q : : FC-sb; (See Note 1.)

RMV-EQPT : : UNIT - [q]q : : FTMI-d;

RMV-EQPT : : UNIT - [q]q : : UC; (See Note 2.)

Where:

[q]q = Unit number (1-16).

sb = side and format converter (FC) number (1-4).

d = FTMI (facility terminating module interface) number (1-4).

NOTE 1:

If the FTMI is to be degrown, this command does not need to be entered because FCs on both sides will be removed with FTMI degrowth command.

NOTE 2:

If the FTMI is to be degrown, do not enter this command now because the unit UC must be in-service to use other commands. This command will be entered after the FTMI is degrown in the next step.

5. If the UNIT is to be degrown, enter the following commands. The DISC FTMI command will have to be entered for each FTMI (1-4) that is grown.

DISC-EQPT : :UNIT - [q]q : :FTMI -d ;

RMV-EQPT : :UNIT - [q]q : :UC ;

DISC-EQPT : :UNIT - [q]q ;

**NOTE:**

The ETSIs, or CCBs and TSIs on both sides of the unit will be removed and degrown when the unit is degrown.

When to Use

Use this set of procedures to provision the DSPU.

**Related
Information**

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Task

Step	Action	Reference
1	Install DSPI and CPU circuit packs and grow DSPU.	SE 3.15.1 page 3.15-3
2	Restore ECCN/CCN.	SE 3.15.2 page 3.15-5 or SE 3.15.3 page 3.15-6
3	Restore UC and DSPI.	SE 3.15.4 page 3.15-7

SE 3.15.1: Grow DSPU

Overview

This command is used to grow the unit in the data base and to define the type of application (DSPU). The associated ETSI, or the associated CCBs and TSIs, in the cross-connect network are grown when this command is executed as indicated in the completion message.

**NOTE:**

If the peripheral unit is not recorded in the software configuration file, the growth command in this procedure will be denied.

If you need to see the unit assignments that have been entered in the software configuration file, enter **RTRV-PRMTR-NE**; (see Note). This configuration was set during the equipment installation and acceptance, but it can still be changed with the INIT-SYS FRAME program.

**NOTE:**

Unit designations (1 through 16, left to right) are 1 for FTU Version 1, 2 for DSPU, 3 for DS3U, 4 for FTU Version 2 (IFTU), or dash for not designated.

Before You Begin

Install DSPI Card (UM29 Code) and CPU2 Card (TM778) in designated slots.

Procedure

1. Familiarize yourself with the command:

```
CRTE - CNFGRN - EQPT : : UNIT - [q]q : \  
[ : (a[, b[, c[, d[, e[, f]]]])] : DP100 ;
```

Where:

[q]q = Unit number (1 through 16).

a[,b[,c[,d[,e[,f]]]]] = Optional, to limit unit connectivity to itself (a) or certain other units (b,c, etc.).

2. Enter the command with the required information.
 3. Repeat the procedure for any other units to be grown.
-

SE 3.15.2: Restore ECCN

Procedure

Use this procedure to restore an ECCN frame (for CCN see the next section).

1. If the CCI pack was just installed in a previous procedure, enter
RST-EQPT::CCI-s;

Where:

s = Network side (0 or 1).



NOTE:

The two BTs (bus terminators) for the shelf are also restored with the CCI circuit pack.

2. Use one of the following commands to restore the ETSIs:

Restore all ETSIs:

RST-EQPT::ETSI, ECCN-s;

Restore individually:

RST-EQPT::ETSI-sqq;

Where: sqq = ETSI number consisting of Side (0 or 1) and peripheral unit number (01 through 16).

Proceed to *Restore UC and DSPI* to restore the UC and DSPI.

SE 3.15.3: Restore CCN

Procedure

The restore commands in this procedure are given in the order which establishes communications within the network and enables the restoral of the next pack in the list. The CCB and TSI packs that need to be restored after a new unit is grown are listed in the growth completion message.

1. If the network interface pack (CCNI) was just installed in a previous procedure, enter **RST-EQPT::CCNI-s;**
Where s = Network side (0 or 1).
2. If a CCB was just installed (for a DSPU) in a previous procedure, enter **RST-EQPT::CCB-sf;**

Where: sf = CCB number consisting of the Side (0 or 1) and position (1 through 6); for example, CCB 12 is on side 1 and is associated with Unit 2 TSIs.

3. Use one of the following commands to restore the TSIs:

Restore all TSIs in a unit:

**RST-CNFRN-EQPT::UNIT-q::CCN-s\
[:a[,b[,c[,d[,e[,f]]]]]]];**

Restore all the TSIs on a side (see Note):

RST-EQPT::CCN-s,TSIS;

Restore TSIs individually:

RST-EQPT::TSI-sft;;

Where:

q = Unit number (1 through 6).

s = Side (0 or 1).

a[,b[,c[,d[,e[,f]]]]] = Optional, to specify the limited unit connectivity (thereby the associated TSIs).

sft = TSI number consisting of Side (0 or 1), FROM-unit (1 through 6), and TO-unit (1 through 6); for example, TSI 013 is on Side 0 and receives data FROM unit 1 and connects TO unit 3.

**NOTE:**

Each of the 72 TSIs is listed in the output by the From-, To-Unit ID along with results (DGN A, C, S, D and RST C or D).

SE 3.15.4: Restore UC and DSPI

Procedure

1. Enter **RST-EQPT::UNIT-[q]q::UC**; to restore unit controller

Where [q]q = Unit number (1 through 16).

**NOTE:**

For the CEF, the unit UC diagnostic for the restore operation runs wiring tests between the unit and the EMC.

2. Enter **RST-EQPT::UNIT-[q]q::DSPI**; to restore DSPI.
-

When to Use

Use this procedure to remove DSPU (digital signal processing unit) plug-ins from service and to degrow the unit. After removing a pack from service, the pack can be removed from the frame. After degrowing a pack or group, it can be regrown with different specifications. To expedite degrowing a unit, the associated ETSIs, or CCBs and TSIs, are automatically degrown with the unit UC. There are also commands to remove all the ETSIs or TSIs per side to expedite troubleshooting.

Related Information

For additional information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to remove DSPU plug-ins from service and to degrow the unit.

1. To list all plug-ins enter:

RTRV-STATE-EQPT : : [UNIT- [q]q] : : EQPD;

To list common plug-ins (no NPCs) enter:

RTRV-STATE-COM : : : EQPD;

After response enter **RTRV-STATE-EQPT : : [UNIT- [q]q] : : OOS;**

Where: [q]q = Unit number (1 through 16).



NOTE:

If XON option is selected for link, you can use CTRL-s and CTRL-q to stop and start the output.

2. Check the output messages to determine which UNIT packs are grown and still in-service. The presence of the CP number itself or the presence of a "1" in the listing indicates that the condition (equipped, out-of-service) exists.
3. Consider the following comments relating to removing service and degrowth:
 - When a pack in a duplicated circuit group is removed on the active side, service will automatically switch over to the other side (if in-service).
 - To expedite degrowing DSPU NPCs, the disconnect NPC command removes both NPC sides from service and degrows the NPC; the RMV-EQPT command is not used.
4. Enter the following commands to remove the DSPU.

RMV-EQPT : : UNIT- [q]q : : DSPI;

RMV-EQPT : : UNIT- [q]q : : UC;

Where: [q]q = Unit number (1-16).

5. If the UNIT is to be degrown, enter the following command.

DISC-EQPT : : UNIT- [q]q;



NOTE:

The ETSIs, or CCBs and TSIs on both sides of the unit will be degrown when the unit is degrown.

Set Optional Alarm Threshold in Data Base

3.17

When to Use

Use this procedure to enter (or change) values which are stored as options for facility NPC alarm thresholds. Up to three options can be entered for any of the NPC alarm parameters; these options can then be selected for an NPC via the CRTE or ED commands. If the alarm thresholds for an NPC are not specified, the internal default values apply. Different alarm types apply to the NPCs for 2.048-M/bs Interface.

Related Information

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to enter (or change) values which are stored as options for facility NPC alarm thresholds.

1. To see if other options have been established, enter **RTRV-*OPT-T1*: :NPC: :[{mn|ALL}]** ;
where the options for one type or all types can be displayed. The default values are listed in the first column and any options, to the right; dashes appear if no options have been set.

2. Familiarize yourself with the command as follows.

ED-*OPT-T1*: :NPC: :{ALL|TYPE-mn}:rr:set1,set2,set3;

Where:

TYPE mn|ALL = Selects all NPCs in frame or only those of specified type.

rr = Identifier for parameter to be changed.

set1,set2,set3 = Any of three values to be stored for the parameter.

3. See the following example which shows two values being added as options for degraded minutes (1 hour) alarm threshold.

EXAMPLE: **ED-*OPT-T1*: :NPC: :TYPE-PB:31:5,4,-** ;

4. Enter command to set any one or all three of the options; use a dash when additional options for a parameter are not required. Remember that a minor alarm threshold must be lower than a major alarm option for the same facility parameter.
 5. Check completion message to verify changes.
 6. Enter **STA-*LOCL-RST*: :PRI** ; to boot in new values and prevent FRADTS messages.
-

Install Circuit Packs and Grow PB/PC NPC (IFTU2 NPC)

3.18

When to Use

Use this procedure to enter information (grow) into the data base and to provision the PBC (primary block circuit). Entered are the line interface impedance, the mode NSA (nonsignaling associated) or CAS (channel associated signaling), and selection of line signal format options. These format options include assigning alarm meanings to transitions of bits 3, 4 and 5 of time slot 0 (TS0). The NPC also monitors the following facility parameters: slips, errored seconds, severely errored seconds, degraded minutes, and unavailable seconds. The alarm thresholds for any or all of these can be specified by listing the parameter and threshold option in the command. The IW (insertion word), which is sent by the NPC on any not-connected channels or on all channels when the NPC is removed from service, can be specified in this command.



NOTE:

Only bits a through g (for xy values) can be used for NPC provisioning with the basic 2.048-Mb/s Interface software feature. The remaining bits are used with the Enhanced 2.048-Mb/s Interface feature to assign alarm meanings to TS0 bits. The TG187 pack is needed for growth option jkl = 011 or 101 to provide MBER (minor bit error rate) operation.

Related Information

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Procedure

Use this procedure to enter information (grow) into the data base and to provision the PBC (primary block circuit).

1. Install the appropriate circuit pack cards in the NPC slots to be equipped from the following list: TG182 - 120 ohms, TG185 - 75 ohms, TG187 - 120 ohms, or TG192 - 75/120 ohms for minor error rate.
2. Familiarize yourself with the command as follows:

CRTE-EQPT:[xy]:NPC-<npc No.>[&&[&]-<range>]:[ww]:[mnxyz]:[rr/l[&ss/m...&tt/n]:[IW-X-pw[r]][:AIS-{MI|PMA|DMA}];

Where:

- <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, last NPC of continuous range of NPCs. Three ampersands (&s) required for hierarchical.
- mn = NPC type, **PB** for 120-ohm line interface or **PC** for 75-ohm coaxial line interface.
- xyz = 3-digit hexadecimal number; each digit corresponds to a 4-bit binary number, the bits of which represent NPC options. Only bits a through g are for Basic 2.048-Mb/s Interface. The default type specification for 2.048-Mb/s Interface frame is PB100.
- rr/l ...&tt/n = Optional, to list any one or all facility parameters (31-40) and predefined number (0 through C) which selects alarm threshold. See examples in Step 3.
- AIS field = Optional, to specify class of output message issued when AIS is received: MI (information, default), PMA (prompt maintenance), or DMA (deferred maintenance).
- IW-X-pw[r] = Insertion word given as hexadecimal code; each digit specifies 4 bits. The r-digit is for disconnect channel signaling. Default for 2.048-Mb/s Interface is X-D5D.

3. Notice the following examples which show the command to select TYPE options, no CRC-4, no sync source, consequent AIS, CAS, and telephone channel numbering, and specifies different deferred alarm threshold for 1-hour DM and 15-minute SLIP.

EXAMPLE 1: CRTE-EQPT::NPC-01-1-12::PB900:31/3&39/3;

EXAMPLE 2: CRTE-EQPT::NPC-02-1-32::PB87C; (for TRANSMIC 1G)

**NOTE:**

Bit c of "x" (xyz field) selects the use of the <tc> field and, for Enhanced 2.048-Mb/s Interface, determines the alarm network timer as follows: c = 0 for 144 ms and c = 1 for 480 ms for local alarms. The c = 1 selection is required to specify <tc> for a DS1 connection (gateway).

4. Enter command with required TYPE options. If default alarm thresholds are appropriate for the NPC application, the OPTS field can be omitted from the command. To disable any facility alarms, enter "C" for the value of "m" in the "rr/l ...&tt/n" field.
 5. Check output message to verify type and option selections. Also notice the TS0 and TS0M output fields which give the default values for the spare TS0 bits and bits monitored.
-

Install Circuit Packs and Grow Type PA NPC (IFTU2 NPC)

3.19

When to Use

Use this procedure to enter information (grow) into the database and to provision the NPC as a type PA. This allows the enhanced facility monitoring feature to be used (refer to *Performance Monitoring*). The facility monitoring feature is also supported with type PA NPCs.

Related Information

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Procedure

Use this procedure to enter information (grow) into the database and to provision the NPC as a type PA.

1. Install the TG192 circuit pack in the NPC slot.
2. Familiarize yourself with the command as follows:

```
CRTE-EQPT::NPC <npc No.>:[ww]:mnxyz:[rr/m][&rr/  
m][...]:\  
[IW-X-pq[,INCL]][,AIS-{MI|DMA|PMA}]
```

Where:

<npc No.> = NPC number.
<range> = Optional, last NPC of continuous range of NPCs.
mn = NPC type PA.
xyz = NPC type identifier. The following tables contain identifier definitions. A Y in a column of the table indicates that the feature at the top of the column is enabled by the corresponding x, y, or z provisioning value.
rr = Facility performance parameter number.
m = Facility performance threshold index (0 through 3).
IW = Insertion word.
INCL = Inclusive.
AIS = Alarm Indication Signal.
MI = Maintenance information.
DMA = Deferred action.
PMA = Prompt action.
PL = Payload loopback
ENA = Enabled
DSA = Disabled

3. Enter command with required TYPE options. If default alarm thresholds are appropriate, the OPTS field can be omitted from the command.
 4. Check the output message to verify type and option selections.
 5. When the PL field is not specified, the default is payload loopback enabled.
-

**Install Circuit Packs and Grow Type
TH NPC (IFTU2 NPC)**

3.20

When to Use

Use this procedure to enter information (grow) into the database to provision the NPC as a type TH.

**Related
Information**

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Procedure

Use this procedure to enter information (grow) into the database to provision the NPC as a type TH.

1. Familiarize yourself with the command as follows:

```
CRTE-EQPT::NPC <npc No.>:[ww]:mnxyz:[rr/m][&rr/  
m][...]:\  
[IW-X-pq[,INCL]][,AIS-{MI|DMA|PMA}]
```

Where:

<npc No.>	=	NPC number.
<range>	=	Optional, last NPC of continuous range of NPCs.
mn	=	NPC type TH.
xyz	=	NPC type identifier.
rr	=	Facility performance parameter number.
m	=	Facility performance threshold index (0 through 3).
IW	=	Insertion word.
INCL	=	Inclusive.
AIS	=	Alarm Indication Signal.
MI	=	Maintenance information.
DMA	=	Deferred action.
PMA	=	Prompt action.
PL	=	Payload loopback
ENA	=	Enabled
DSA	=	Disabled

2. Enter command with required TYPE options. If default alarm thresholds are appropriate, the OPTS field can be omitted from the command.
3. Check the output message to verify type and option selections.

When the PL field is not specified, the default is payload loopback enabled.

When to Use Use this set of procedures to provision a DSP platform NPC and restore the NPC.

**Related
Information** For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Task

Step	Action	Reference
1	Install circuit pack and grow DSP platform application NPC.	SE 3.21.1 page 3.21-3
2	Restore NPC.	SE 3.21.2 page 3.21-4

SE 3.21.1: Install Circuit Pack and Grow DSP Platform Application NPC

Procedure

This procedure provisions a DSP Platform application Network Processing Circuit (NPC). A single NPC or range of NPCs may be provisioned using the command that is described in this procedure.

1. Ground yourself to the shelf by using a wrist strap.
2. Install a TG193B circuit pack in the desired slot.
3. Enter the following command line to provision a DSP Platform application NPC:

CRTE-EQPT::NPC-<npc No. 1>[&&-<npc No. 2>]::SDxyz;

Where:

- NPC = Network processing circuit.
- <npc No. 1> = The NPC number that is either a single NPC or the first NPC of a range specification; in either extended (for example, [0]001) or hierarchical (for example, 01101). This NPC number must be odd.
- <npc No. 2> = The optional NPC number that is the last NPC of a range specification; in either extended (for example, [0]001) or hierarchical (for example, 01101). This NPC number must be odd.
- xyz = The argument xyz is a 3-digit hexadecimal number. The 3 digits in xyz indicate the particular type of application to be provisioned.

Before growing a DSP Platform application NPC the user must install the application software on the DACS II ISX system. The software installation procedure is documented in the individual application manual.

SE 3.21.2: Restore NPC

Procedure

Until NPCs are restored to service, facility alarms are not registered and DACS II sends trunk conditioning out over the facility. In the process of restoring, the DACS II runs both an out-of-service and in-service diagnostic and provisions the NPCs according to the NPC growth information. The looped tests that are included in the diagnostics test the transmission paths in the NPC (except line transformers) and test some of the facility checking circuitry. A hardware failure will cause a failed diagnostic and a restore denial. A facility problem will cause a PBA alarm.

**NOTE:**

Early TG80s (before Series 5) cannot be grown as clear-DS1.

1. Enter **RST-EQPT::NPC-<npc No.>[&&[&]-<range>];;**

Where:

- <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, to name the final NPC when it is desired to restore a continuous range of IFTU2-NPCs. Three ampersand (&s) are required for hierarchical.

2. Repeat the procedure as needed to restore other NPCs (or groups of NPCs).

If an NPC is restored but its FTMI is OOS the **RTRV-STATE-EQPT;** command will not show the alarm counts and alarms will not be displayed.

Install, Grow Circuit Packs and Restore DSPU NPC

3.22

When to Use

Use this procedure to install, grow circuit packs and restore DSPU NPCs.

Related Information

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Task

Step	Action	Reference
1	Install DSP NPC circuit packs.	SE 3.22.1 page 3.22-3
2	Grow DSP NPC.	SE 3.22.2 page 3.22-4
3	Restore DSPU NPCs.	SE 3.22.3 page 3.22-5

SE 3.22.1: Install DSP NPC Circuit Packs

1. Working on either DSPU side, enter **RMV-EQPT : : {CCNI|CCI}-s ;**

Where:

CCNI = CCN for non-CEF.
CCI = ECCN for CEF.
s = DSPU side (0 or 1).



NOTE:

The ECCN side is removed here to prevent an alarm (and DSP removal) on other in-service DSPs on the same port.

2. Install required processing CPs (for example, TM655 DMBs) in assigned NPC/DSP slots.
 3. Enter **RST-EQPT : : {CCNI|CCI}-s ;** for the same side, and then enter **RMV-EQPT : : {CCNI|CCI}-s ;** for the other side of the DSPU.
 4. Install required processing CPs (for example, TM655 DMBs) in assigned NPC/DSP slots. The NPCs are duplicated in both the 0DSPU and 1DSPU sides; cards must be installed in the same NPC slots on both sides.
 5. Enter **RST-EQPT : : {CCNI|CCI}-s ;** to restore the corresponding network side to service.
-

SE 3.22.2: Grow DSP NPC (DMB or CPR)

Procedure

Use this procedure to grow the DSP NPC.

1. Check circuit order information and office records to determine the next NPC to be grown for use for DMBs (digital multipoint bridges) or CPRs (c-bit processing).

**NOTE:**

For DMB circuits, the pair of NPCs for each DMB is grown simultaneously by naming the lower NPC number in the command.

2. Enter **CRTE-EQPT::NPC-<npc No.>::mnxyz;**
to grow the next NPC.

**NOTE:**

For the type MB pack, the command completion message will name both NPCs of the pair that have been grown.

Where:

- <npc No.> = Next addressable NPC in DSPU (lower NPC of each pair), either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
 - mn = Type pack; MB for DMB pack (TM665), or CB for CPR pack (TM747).
 - xyz = Characteristics of the DSP-NPC for the application.
-

SE 3.22.3: Restore DSPU NPC

Procedure

Use this procedure to restore the DSPU NPC.

**NOTE:**

In the process of restoring, the DACS II runs both an out-of-service and in-service diagnostic and provisions the NPCs according to the NPC growth information. A hardware failure will cause a failed diagnostic and a restore denial.

1. Enter **RST-EQPT::NPC-<npc No.>::SIDE-s;**

Where:

<npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01) .
s = DSPU side (0 or 1).

**NOTE:**

With DMB circuit packs, both the NPCs on the circuit pack will be restored when the lower numbered NPC of the pair is entered in the command.

2. Repeat the procedure as needed to restore NPC on the other side and any other NPCs, as required.
-

When to Use Use this procedure to change an NPC's line format type, the NPC IW (insertion word), and the AIS alarm status.

Before you Begin The insertion word is sent on any unassigned (not-connected) channels and all channels when the NPC is removed from service to indicate these conditions to the far-end equipment.

When changing the IW alone, the NPC type specification must also be entered; however, the IW need not be reentered if only the NPC type is being changed.

Whenever the NPC type is changed and the NPC is out-of-service, all the programmable alarm thresholds revert to default values and may also have to be changed.

Related Information For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to change the NPC type, insertion word, or AIS alarm status.

1. To change the IW and most NPC type specifications (xyz), the NPC must be removed from service. The only exception is changing bits b. Which change do you wish to make?
 - To change the AIS, proceed to Step 3.
 - To change the IW, continue with Step 2.
 - To change bit b (NPC synchronization source), continue with Step 3.



NOTE:

To change all other bits (for NPC type) the NPC must be removed from service, degrown (refer to *Remove and Degrow Equipment*), regrown with the new specifications, and restored to service.

2. If the NPC must be removed from service, enter
RMV-EQPT:[xy]:NPC-<npc No.>:[ww]:[INCL];

Where:

<npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01)..

INCL = Optional, needed to remove NPC with service circuits.

3. Familiarize yourself with the following commands:

- If IW:

ED-PRMTR-EQPT::NPC-<npc No.>::mnxyz[:IW-X-pw[r]];

- If ALMOPT AIS:

ED-PRMTR-EQPT::NPC-<npc No.>::mnxyz:ALMOPT:AIS-{MI|PMA|DMA};

Where:

mn = Desired NPC type given by appropriate designation: PB for 2.048-Mb/s 120-ohm line, PC for 2.048-Mb/s 75-ohm line, or PA for 2.048-Mb/s enhanced facility monitoring (120-ohm or 75-ohm line).

xyz Specification for NPC type.

IW-X-pw[r] = Insertion word given as hexadecimal code; each digit specifies 4 bits. The r-digit is for disconnected channel signaling. The default when growing a type PB/PC NPC is D5D.

AIS field = Allows changing the option for receipt of AIS (alarm indication signal) to MI (maintenance information), PMA (prompt action), or DMA (deferred action).

4. Enter command to make the desired change. The NPC type must be reentered even if only the not-connected insertion word is being changed.
5. Check completion message to verify changes.
6. If the NPC was removed from service, enter command
RST-EQPT::NPC-<npc No.>; to restore it to service.

When to Use	Use this procedure to change alarm thresholds for any or all 10 (28 for PA type NPCs) facility parameters.

Before You Begin	The threshold values must be previously established using the ED-OPT-T1 command (refer to <i>Set Optional Alarm Threshold in Data Base</i>).

Related Information	For related information, refer to Volume I, Chapter 3, <i>Provisioning</i> .

Instructions

Use this procedure to change the alarm threshold.

1. Familiarize yourself with the command as follows.

```
ED-PRMTR-EQPT:: {NPC-<npc No.>|  
TYPE-mnxyz}::rr/l&ss/m...&tt/n;
```

Where:

NPC or TYPE field = Selects number of NPCs to be changed:

NPC given as extended (for example, [0]001),
hierarchical (for example, 01-1-01), or all NPCs
with the same type specification (mnxyz).

rr/l,ss/m = Listing of any of the associated alarm types (31
through 40) and predefined number (0 through b)
which selects alarm threshold. Monitoring of a
parameter can be disabled by entering a "c" for
the alarm threshold.

2. See the following example of the command in which new major alarm options are being selected for ERS and SLIPS.

EXAMPLE: **ED-PRMTR-EQPT::NPC-01-1-32::35/4&39/4;**

3. Obtain or determine information needed for command. You can enter **RTRV-OPT-T1::NPC::[{mn|ALL}]**; to see the actual option values that have been established in the data base for all the NPCs.
 4. Enter command with required information.
 5. Check the output message to confirm that the information was entered correctly.
-

When to Use	Use this procedure to display the spare bits in TS0 (time slot 0) which are monitored and to set/change the monitoring.

Before you Begin	The normal state (0 or 1) of the monitored bits must have been previously set by the ED-PRMTR-EQPT : :NPC-01-1-1 : :TS0M-11011111; command. When a change of state occurs, the DACS II issues a REPT STATE ...TS0-R BITS information. If bits 3, 4 or 5, was assigned an alarm meaning when the NPC was grown, it will generate REPT STATE ...AR01 MISC PBA messages when the state changes. Those bits which were assigned when the NPC was grown cannot be selected for monitoring in this procedure.

Related Information	For related information, refer to Volume I, Chapter 3, <i>Provisioning</i> .

Instructions

Use this procedure to query or change TS0 bit monitoring.

1. What procedure do you want to perform?
 - If you want to see which bits are currently being monitored, continue with Step 2.
 - If you want to change the TS0 monitoring, proceed to Step 4.

2. Enter the command to retrieve the monitoring as follows:

RTRV-STATE-EQPT::NPC-<npc No.>[&&[&]-<range>]::TS0M;

Where:

- <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, last NPC of continuous range of NPCs. Extra ampersand (&) needed for hierarchical.

3. Read the bit monitoring of TS0 bits designated abcdefgh as follows: 0 for no monitoring and 1 for monitoring. This information appears under the TS0M caption line in the message.



NOTE:

The defaults are 00000000 (for all types except TRANSMIC 1G) and 00111111 (for TRANSMIC 1G).

4. To change the monitoring, enter the command as follows:

**ED-PRMTR-EQPT::NPC-<npc No.>[&&[&]-<range>]::TS0M-
abcdefgh;**

Where:

- abcdefgh = Represents 8 TS0 bits. Make entry for each bit as follows: 0 for no monitoring, 1 for monitoring, and dash (-) for no change.

A dash or the value assigned during the NPC growth procedure must be entered for bits 3, 4 and 5 if these bits were assigned alarm meanings.

5. Check the OLD and NEW fields in the output message to verify that the information was entered correctly.
-

When to Use

Use this procedure to remove NPC(s) (network processing circuits) from service and to degrow the NPC(s) from the data base. After removing a pack from service, the pack can be removed from the frame. After degrowing a pack or group, it can be regrown with different specifications.

**Related
Information**

For additional information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to remove and degrow an NPC.

1. To list all plug-ins enter:

RTRV-STATE-EQPT : : [UNIT- [q]q] : : EQPD ;

To list common plug-ins (no NPCs) enter:

RTRV-STATE-COM : : : EQPD ; .

After response enter **RTRV-STATE-EQPT : : [UNIT- [q]q] : : OOS ; .**

Where: [q]q = Unit number (1 through 16).



NOTE:

If XON option is selected for link, you can use CTRL-s and CTRL-q to stop and start the output.

2. Check the output messages to determine which NPC packs are grown and still in-service. The presence of the CP (circuit pack) number itself or the presence of a "1" in the listing indicates that the condition (equipped, out-of-service) exists.
3. See CAUTION. Enter **RMV-EQPT : : NPC- <npc No.> [&& [&] - <range>] : : [SIDE- s] [: INCL] ;**



CAUTION:

Any NPC with cross-connections should only be removed if warranted by trouble clearing because service on all channels of the NPC will be interrupted.

Where:

<npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

<range> = Use only for FTU (facility terminating unit). Three ampersand (&s) are required for hierarchical.

SIDE s = Use for DSPU (digital signal processing unit) NPC.

INCL = Use if special service CONNs exist.

4. If the NPC is going to be degrown, continue with Step 5.
 - If not, this procedure is completed.
5. Enter **RTRV-CRS-T1 : : <npc No.> [&& [& -] <range>] : : MAP ;**

Where:

<npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

<range> = Optional; to specify last NPC of continuous range. Three ampersand (&s) and a dash (-) are required for hierarchical.

- If there are any cross-connections on the NPCs, refer to *Cross-Connections and Disconnections General Tasks* to disconnect the DS0 channels or clear-DS1s and then continue with this procedure.
 - If there are any test access cross-connections, enter **DISC-TACC-T0:::kk[:00S]**; for test access to make disconnections.
6. If subject NPC is the test port digroup (NPCTP designation), enter **DISC-EQPT::NPC-<npc No.>:NPCTP-n[:TPR]**; to remove the TP designation (TPR word releases and degrows any test ports).
 7. Enter **DISC-EQPT::NPC-<npc No.>[&&[&]-<range>];**.
-

When to Use

Use this procedure to set or change the normal state of the spare bits in time slot 0 (TS0) so that a change of state can be used as an alarm indication. Except for bit 3, these bits can be set to 0, 1, or P (pass-through). The bits which are designated pass-through can be cross-connected to the same bits in TS0 of another NPC. Of course, the set or cross-connected bits are preempted during the signal framing period to send the framing word. Similarly, bits 2 and 3 which already have alarm meanings cannot be passed through for cross-connection.

Before you Begin

This command can be entered while the NPC is in-service.

Related Information

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Use this procedure to query or change TS0 bit monitoring.

1. If the international bits (referred to as Si) must be set, these bits will only be affected in frames 13 and 15 if the NPC is provisioned for CRC error detection. If you need to check whether the CRC is enabled and to see the TS0 bit defaults, enter **RTRV-STATE-EQPT: :NPC-<npc No.>;** and interpret the line type options (see *Check Facility Status and Perform End-to-end Alarm Tests*).

Where: <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

2. Familiarize yourself with the command as follows:
**ED-PRMTR-EQPT: [xy] :NPC-<npc No.>[&&[&]-<range>] :
[ww] :TS0-abcdefgh;**

Where:

<range> = Optional, last NPC of continuous range of NPCs. Extra ampersand (&) needed for hierarchical.

TS0 Field = Variables a through h. The values for the bits are: 0, 1, P, or dash (-). P is for passed-through (unchanged), and a dash is for not affected.

3. Enter the command to set the bits as follows. To set the state, enter the required state (0, 1, P) or a dash for the variable in the command. To maintain a bit altered, enter a dash (-) for the variable in the command.



NOTE:

The dash means that the bit will not be affected by this change. In other words, the existing setting or default will be maintained.



NOTE:

The defaults for the TS0 bit settings are: 11011111 (for all types except TRANSMIC 1G) and 11000000 (for TRANSMIC 1G).

4. Check the OLD and NEW fields in the output message to verify that the information was entered correctly.
5. If the state of the TS0 bits are to be monitored in order to produce DACS II information messages, refer to *Query or Change TS0 Bit Monitoring*.

When to use

Use this procedure to do the following:

- Check far-end installation.
- Make wiring connections.
- Remove loops.
- Perform alarm tests and end-to-end tone tests.

**Related
Information**

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Tasks

Step	Action	Reference
1	Check far-end installation, make wiring connections, and remove loops.	SE 3.24.1 page 3.28-3
2	Perform end-to-end alarm tests.	SE 3.24.2 page 3.28-4
3	Check facility status and perform end-to-end tone tests.	SE 3.24.3 page 3.28-6

**SE 3.24.1: Check Far-End Installation,
Make Wiring Connections, and
Remove Loops**

1. Verify that far-end terminal equipment has been equipped and tested and verify that digital line has been established and tested.
 2. Verify that far-end voice terminal has been optioned for looped timing (from DACS II) or external timing from office clock.
 3. Use office records to determine the DACS II and line interface jack appearances to be cross-connected.
 4. Make wiring cross-connections at line interface bay.
 5. At the line interface bay, remove line feed signal and termination on line side jacks and remove looping cords from DACS II side jacks.
 6. Verify that facility alarms clear on added NPCs after alarm time-out period (approximately 15 seconds).
-

SE 3.24.2: Perform End-to-End Alarm Tests

Procedure

Use this procedure to perform an end-to-end test. In this test, the receive line signal is interrupted to cause a local alarm (PBA) at the DACS II and to send a remote alarm signal to the other end. The alarms clear after a time-out period when the alarm condition is removed. As a final test, the receive signal is interrupted at the other end to check the local and remote alarm responses in the other direction.

1. Contact the far-end office to arrange for the test.
2. At line interface jacks, place a dummy plug (or loose cord end) into the **OUT** jack of digital line coming to the DACS II.
3. Press **ACO** button on DACS II status panel.
 - If the PMA (prompt) alarm is registered on status panel and by AR01, MISC ALM output message, proceed to Step 6.
 - If neither alarm indication occurs, verify that the dummy plug is installed in the correct jack and that the alarm is not appearing on another facility due to a wiring error, proceed to Step 4.
4. If neither indication occurred and there is no connection problem, install cord (loop) between IN and OUT jacks for the DACS II and wait for alarm to clear. Then enter **RMV-EQPT : NPC-<npc No.> : [: INCL]**; replace NPC pack, enter **RST-EQPT : NPC-<npc No.>**; and remove looping cord.

Where:

<npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01)
INCL = Optional, to remove NPC with special services (CUS or RDLD).

5. If status panel indication does not occur, check status panel lamp test. If lamp is good, enter **RMV-EQPT : MC**; , replace the MTC pack, and reset the DACS II at the status panel by holding **RESET ENABLE** to **ON** and momentarily pressing the **RESET** button.
6. If far end has an RMA or Y remote alarm indication, proceed to Step 8.
 - If far end does not have a remote alarm indication, have far end check that alarm is not appearing on another facility. If it does occur elsewhere, have far end correct wiring error.
7. If no alarm occurs at far end, proceed as follows for type of far-end equipment. For voice terminal, have far end perform looped alarm test per documentation. For DACS II, have far end replace NPC per method in Step 4.

8. Remove dummy plug installed at beginning of this test.

Response: The alarms will clear after the time-out period of approximately 20 seconds.

9. Have far end place the terminal in a local alarm condition either by inserting a plug into the line jack or by disconnecting or failing the receive unit at the voice terminal.
 10. If local alarm is obtained at far end and if RAI remote alarm is received at near-end DACS II, continue with Step **11**.
 - Perform corrective action for the particular alarm not occurring as outlined for the first direction of testing in this procedure.
 11. Have far end remove local alarm condition and verify that the alarms clear after the time-out period of approximately 20 seconds.
-

SE 3.24.3: Check Facility Status and Perform End-to-End Tone Tests

Procedure

Use this procedure to check facility status and perform end-to-end tone tests.

1. Enter **RTRV-STATE-EQPT: :NPC-<npc No.>[&&[&]-<range>];**

Where:

- <npc No.> = NPC number, given either as extended (for example, [0]001) or hierarchical (for example, 01-1-01)
- <range> = Optional, for facility NPCs to name last NPC of range. Three ampersand (&s) are required for hierarchical.

2. Convert the NPC type designation (xyz) to binary and read the meaning of the bits as follows:
 - Work with each of the three digits following the PB or PC keyword individually.
 - Write the 4-digit binary equivalent of each Hex digit.
 - Match the 0s and 1s with options. Only bits a through g (for Hex digits xy) are used in the basic 2.048-Mb/s Interface feature.
3. In the output message, notice the IW (insertion word). This code word is sent on the message channels that are not connected in cross-connections.
4. Read the status and facility error counts from the fields of the output message.

**NOTE:**

There are separate registers for 24-hour accumulated counts, previous short interval counts, and the current short interval (1 hour) counts. Counts are moved to different registers either after the interval expires or when the number of errors exceeds the alarm threshold for the register.

5. If any NPC type, insertion word, or alarm thresholds must be changed, refer to the appropriate procedure (*Grow NPCs (Part of MXRs)* or *Restore NPCs*) to make the change.
 6. If channel tests are to be performed on facility channels, notify test personnel that circuit can be tested.
-

When to Use

Use this procedure to check the link connections, initialize characteristics of the link, and select input command priority, link language, NPC addressing, and output message screening options.

**Related
Information**

For related information, refer to Volume I, Chapter 3, *Provisioning*.

Instructions

Task

Step	Action	Reference
1	Check link connections.	SE 3.29.1 page 3.29-3
2	Initialize, set type and rate characteristics.	SE 3.29.2 page 3.29-5
3	Change input command priority, link language, NPC addressing, and output message screening.	Volume II, Chapter 6, GT 6.5 through GT 6.8

SE 3.29.1: Check Link Connections

Use this procedure to check link connections.

1. If data sets (such as 202T) are required for remote connections or for equipment more than 50 feet (RS-232C specification) or 2,000 feet (RS-449 specification, 1200 baud) away, verify that data sets have been installed. Data set specifications are given with the information notes in SD-96662-01.
2. Connect data link cable (for example, M25B) to the TTY connector for the link (behind DACS II main controller). No adapter is required for RS-449 format, but ED-2C646-30 adapters are required for RS-232C format as follows:
 - Use a G1 (group 1) or G14 adapter for any interface via data sets (asynchronous or synchronous).
 - Use a G2 or G15 adapter for a direct TTY or CRT terminal (without data sets), or for connecting to a SCAT. To establish communication between the SCAT and the DACS II Administration Link, do the following:
 1. Provision one of the DACS II synchronous administration links for Modified Synder Protocol and restore the link into service.
 2. Load the SCAT software into the PC and configure the software to direct the interface through the PC's serial interface.
 3. Connect a standard RS-232 cable to the PC's serial port.
 4. Connect the opposite end of the RS-232 cable to a DACS II ED2C646-30 G2 (25 pin to 37 pin) adaptor.
 5. Connect the G2 adaptor to the selected DACS II administration link.
 - Use a G3 or G8 adapter for local operations systems such as SARTS (Switched Access Remote Test System) or TABS (telemetry asynchronous block serial) protocol link (asynchronous 4-wire - data only without data sets).
 - Use a G9 adapter for a link to CIU (craft interface unit) for *SLC* Series 5 carrier. This is for an asynchronous link.

**NOTE:**

The G1 and G2 adapters interoperate with RS232C per EIA Pub. 12 and give maximum receiver margin and minimum pulse distortion. The G14 and G15 adapters contain termination and biasing networks to detect disconnected or unpowered RS232C equipment. The G1 and G2 adapters are recommended for use in normal installations where the equipment remains powered up.

3. Links that are in service but not in use are autonomously removed and restored with SOFT ERR hardware messages. The TCP/IP link (link 7) must be manually removed from service.

To avoid the SOFT ERR hardware message, links that are not in use should be manually removed from service.

SE 3.29.2: Initialize, Set Type and Rate Characteristics

Use this procedure to prepare DACS II links for connections. There are seven links available for connection of terminal equipment and operations systems. With the ICI (TM782), links 5 and 6 are synchronous links using X.25 protocol (through level 3) at rates up to 56 kb/s. Link 7 is a TCP/IP link using telnet protocol.

Up to 16 virtual circuits or 16 sessions can be established on each synchronous link or TCP/IP link. The characteristics of each link can be changed from the defaults provided by DACS II using the ED PRMTR LINK commands.

1. What type of link is being established?
 - If **ASYNCHRONOUS**, continue with Step 2.
 - If **TABS**, proceed to Step 3.
 - If **SYNCHRONOUS**, proceed to Step 4.
 - If **TCP/IP**, proceed to Step 5.
2. Enter the appropriate command to initialize link or make changes:

```
ED-PRMTR-LINK::j::PTCOL-S[,BAUD-bb] \
[,ALM-k][,BS-e][,ENQ-q][,XON x][:INIT]; or
ED-PRMTR-LINK::j::PTCOL-M[,ALM-k][:INIT];.
```

Where:

- j = Physical link number (1 through 7).
- S|M = Asynchronous Snider (S) protocol or Modified (M) Snider for *SLC* Series 5 Carrier System; only one of the 6 links can be set for modified Snider.
- bb = Baud rate; 03, 06, 12, 24, 48, or 96 for rate of 300, 600, 1200, 2400, 4800, or 9600; default is 1200.
- k = Alarm class; k = 2 for major alarm for link hardware failure, or k = 1 for minor alarm (default).
- e = Backspace; e = 1 for backspace indicated by underscore or e = 0 to actually move cursor backward for backspace (default).

- j = Physical link number (1 through 7).
- ENQ-q = To enable/disable ENQ/ACK acknowledgment protocol to match terminal requirement; q = 0 to disable or q = 1 to enable (default).
- XON-x = To allow use of CTRL s and CTRL q commands to temporarily stop and start long output messages; x = 0 to disable (default) or x = 1 to enable. [See Note.]
- INIT = Optional, to initialize all parameters to default values except for those parameters entered in command.

**NOTE:**

If the output on a Snider link provisioned with the XON feature is suppressed by a DTE sending an XOFF character, the link is periodically removed from service by the error recovery.

3. Enter the following commands to make required settings:

```
ED-PRMTR-LINK: :j::PTCOL-T,BAUD-bb;\  
ED-PRMTR-LINK: :j::APPL-{ASCS|ASCD|PM}\  
[,L2AD-aa][,POLL-ttt];
```

Where:

- j = Physical link number (3 or 4).
- T = TABS protocol.
- bb = Baud rate (24 for 2400).
- ASCS, ASCD, = Selects application as follows:
or PM alarm surveillance and control summary or detailed, or performance monitoring.
- ttt = Optional, to specify polling time as follows: 001 through 255 for ASCS or ASCD applications.
- aa = Optional, to specify Layer 2 address (00 through 31).

4. To initialize the link or change alarm class, enter

```
ED-PRMTR-LINK: :j::PTCOL-X[,ALM-k][:INIT];
```

Where:

- j = Physical link number (5 or 6).
- PTCOL X = X.25 synchronous link protocol.
- k = Alarm class; 2 for major alarm for link hardware failure or 1 for minor alarm (default).
- INIT = Optional, to initialize all parameters to default values except for those parameters entered in the command.

5. To initialize the link or change alarm class, enter
ED-PRMTR-LINK::j::PTCOL-I[,ALM-k][:INIT];

Where:

j = Physical link number (5 or 6).
 PTCOL I = TCP/IP link protocol.
 k = Alarm class; 2 for major alarm for link hardware failure or 1 for minor alarm (default).
 INIT = Optional, to initialize all parameters to default values except for those parameters entered in the command.

6. Enter **RTRV-PRMTR-LINK::j[mm]:;** to see the existing (or default) link parameter values. The link must be removed from service to change parameters. If using the TCP/IP link, proceed to Step 9.

7. To enter different **data layer** values, list the subject parameter followed by the value (for example, K-5). Enter the command as follows:

ED-PRMTR-LINK::j::[K-b][,T1-eee][,T3-ggg]
[,N2-aa][,FRMAD-{A|B}];

Where:

j = Physical link number (5 or 6).
 FRMAD {A|B} = Frame address in X.25 layer; default is A.

8. To enter different **packet layer** values, list the subject parameter followed by the value (for example, R20-nn) and use commas to separate parameter entries. Enter the command as follows:

ED-PRMTR-LINK::j[mm]::
[<param>-<value>,...<param>-<value>]
[,VC-ppss&-gghh][,DBIT v];

Where: ‘

j = Physical link number (5 or 6).
 mm = Permanent virtual circuit (01 through 16) on same link.
 <param> = One of the **packet layer** parameters for which different values are to be specified; identified by designation (for example, T20).
 <value> = Value of named parameter.
 ppss = Number of virtual circuits (01 through 16) for permanent (pp) and switched (ss) VCs; defaults are pp = 08 and ss = 08.
 gghh = Virtual circuit groups (00 through 15) for above ranges; defaults are gg = 00 and hh = 00.
 v = X.25 d-bit setting (0 or 1); 0 is default.
 0 = off (unset) (acknowledgement done from local DTE).
 1 = on (set) (acknowledgement done from remote DTE).

9. If DENY message with explanation that link is out-of-service is received, enter **RST-EQPT: :LINK-j ;** and reenter ED LINK command. Enter **RMV-EQPT: :LINK-j ;** if link is in-service.

Where: j = Link number.
If using the TCP/IP link, proceed to Step 11.
 10. Verify that any administrative terminal to be connected to the link is set to the following major characteristics: full duplex, 7/8-bit ASCII, even parity, answerback (if ENQ/ACK protocol is used) and same baud rate as the link. Complete terminal specifications are found in the information notes of SD-96658-01.
 11. If you are restoring the link to service, enter **RST-EQPT: :LINK-j [mm] ;**.
-

Establish IP Address for the ICI Circuit Pack

3.30

When to Use

Use this procedure to set up the Internet Protocol (IP) address of the ICI circuit pack.

Related Information

For related information, see:

- Volume I, Chapter 1, *Introduction*
 - Volume I, Chapter 3, *Provisioning*
 - GT 3.55
-

Instructions

Task

Enter the command below to set up the IP address for the ICI circuit pack:

**SET-IP-ADDR:::x.x.x.x;SET-IP-
ADDR:::{x.x.x.x:{IP|GATEWAY|IPMASK}|TCPDB};**

Where:

INIT = Initialize.

IP = Internet Address.

GATEWAY = Gateway Identifier.

IPMASK = Subnetwork Mask.

x = The valid value is from 0 through 255.

TCPDB = Retrieve the network information from the data base.

**NOTE:**

After the successful implementation of SET ADDR, the user should enter the command prior to initiating a hard reset. Any address modifications become operative only after a frame reset.

CPY-MEM:::WKG, MEM;

**NOTE:**

Establish Telnet Session to the TCP/IP Link on the ICI Circuit Pack

3.31

When to Use

Use this General Task to establish a telnet session on the TCP/IP administrative link (Link 7). You must establish a telnet session in order to use Link 7.

Related Information

For related information, see:

- Volume I, Chapter 1, *Introduction*
 - Volume I, Chapter 3, *Provisioning*
 - GT 3.30
-

Instructions

Use the following procedure to establish a telnet session on the TCP/IP administrative link.

1. Enter the following command to find out the IP address:

RTRV-NET-ADDR[, RAM|DB]:::;

Where:

NET-ADDR = Displays the IP and Ethernet addresses that will be active after a reboot.

RAM = Displays the IP address that is currently active for the TCP/IP link.

DB = Displays the IP and Ethernet addresses in the database. These addresses will be active after a reboot.

Output example:

INTERNET ADDR - 135.185.169.89

INTERNET MASK - 255.255.248.0

GATEWAY ADDR - 135.185.175.254

ETHERNET ADDR - 00:60:1D:05:00:45

2. Enter the **ADD::USER** command to add a new user.

Example:

ADD::USER GREEN, NEW;

3. At the **PASSWD:** prompt, enter a password. At the **REENTER PASSWD** prompt, enter the password again.

When you have successfully added a new user, a completion message appears.

Output example:

M 09:15:15 30,00 1 ADD USER GREEN NEW COMPL

4. From a different window or different terminal, telnet into link 7 using the INTERNET ADDR output in Step 1:

Example:

GR >telnet 135.185.169.89

Output example:

Trying 135.185.169.89...

Connected to 135.185.169.89.

Escape character is '^]'.

WARNING! THIS IS A RESTRICTED SYSTEM!

5. At the 'Login:' prompt, log in as the user created in Step 2 and enter the password. Enter the Login and Password in UPPER CASE.

Output example:

Login: GREEN

Password:

DO NOT PROCEED UNLESS YOU ARE AUTHORIZED!

6. At the 'dacs2>' prompt, type **link**.

Output example:

dacs2> link

WARNING MESSAGE

THIS SYSTEM IS RESTRICTED TO AT&T AUTHORIZED USERS

FOR BUSINESS PURPOSES. UNAUTHORIZED ACCESS IS A

**VIOLATION OF THE LAW. THIS SERVICE MAY BE MONITORED FOR
ADMINISTRATIVE AND SECURITY REASONS. BY PROCEEDING, YOU
CONSENT TO THIS MONITORING.**

7. Enter normal DACS commands.
-

- Make Cross-Connections at the Line Interface Bay GT [4.1-1](#)
- Install Plug-Ins, Grow and Restore NPC to Function as NPCTP or NPCTG GT [4.2-1](#)
- 64-kb/s Signals: Connect Hubbed Testport(s) to Local DACS II GT [4.3-1](#)
- 64-kb/s Signals: Looping Back a Test Port GT [4.4-1](#)
- 64-kb/s Signals: Connect Testport to Circuit GT [4.5-1](#)
- 64-kb/s Signals: Release Test Port GT [4.6-1](#)
- Nx64 Kbit/s: Connect Test Group to Circuit GT [4.7-1](#)
- Nx64 Kbit/s: Change Circuit Termination State GT [4.8-1](#)
- Nx64 Kbit/s: Connect Test Group in HUB Mode GT [4.9-1](#)
- Nx64 Kbit/s: Connect Test Group in LOOPED Mode GT [4.10-1](#)
- Nx64 Kbit/s: Release and Degrow Test Group GT [4.11-1](#)
- Clear-2 Mbit/s: Establish/Change Test Access GT [4.12-1](#)
- Clear-2 Mbit/s: Hub Mode GT [4.13-1](#)
- Clear-2 Mbit/s: Loopback Mode GT [4.14-1](#)
- Clear-2 Mbit/s: Release Test Port GT [4.15-1](#)
- Clear-2 Mbit/s: Change Circuit Termination State GT [4.16-1](#)

■ Integrated Test Set: Initiate/Stop Test Signal Generation	GT 4.17-1
■ Integrated Test Set: Insert Bit Error	GT 4.18-1
■ Integrated Test Set: Start/Stop Test Signal Monitoring	GT 4.19-1
■ Integrated Test Set: Query Error Performance Parameters	GT 4.20-1

Make Cross-Connections at the Line Interface Bay

4.1

When to Use	Use this procedure to make cross-connections at the line interface bay.

Related Information	For related information, refer to Volume I, Chapter 4, <i>Test Access</i> .

Instructions

Use this procedure to make cross-connections at the line interface bay.

1. . Verify that connecting equipment (voice channel bank or digital test) has been tested.
 2. Use office records to determine the DACS II and line interface jack appearances to be cross-connected.
 3. Make wiring cross-connections at line interface bay.
-

Install Plug-Ins, Grow and Restore NPC to Function as NPCTP or NPCTG

4.2

When to Use

Use this set of procedures to do the following:

- Install plug-ins
- Grow and restore NPC to function as an NPC test port (NPCTP)
- Grow and restore NPC to function as an NPC test group (NPCTG)

Related Information

For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

Tasks

Complete the following steps install plug-ins, grow and restore an NPC test port or grow and restore an NPC test group.

Step	Action	Reference
1	Install plug-ins.	SE 4.2.1 page 4.2-3
2	Designate NPC as an NPC test port.	SE 4.2.2 page 4.2-4
3	Grow test ports.	SE 4.2.3 page 4.2-5
4	Designate NPC as an NPC test group.	SE 4.2.4 page 4.2-6
5	Grow test groups.	SE 4.2.5 page 4.2-7

SE 4.2.1: Install Plug-Ins

Procedure

This procedure defines the operating characteristics of the NPC in the data base. When the NPC is subsequently restored to service, it will be provisioned per the growth specification. Included in the specification are: line and channel formats, facility alarm thresholds, and the channel insertion word. The line formats are given by the TYPE specification; TYPE PB100 is the default. If used, alarm threshold options must already be defined in the data base.

1. Install a TG182 for 120 ohm application or TG185 for 75 ohm application, or TG192 for 75/120 ohm application. Each Dual Primary Card will support two NPCs to be used as TAPs (test access primaries).
2. Before you enter the command, familiarize yourself with command as follows:

CRTE-EQPT::NPC-<npc No.>[&&[&]-<range>]::TYPE PBxyz!

Where:

- <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, last NPC of continuous range of NPCs. Three ampersand (&s) are required for hierarchical.
- xyz = Line and channel format specification; PB100 (default).

In the TYPE field, making x=1 sets the CAS option which is required to test CAS primaries.

3. Check output message to verify type and option selections.

Enter **RST-EQPT::NPC-<npc No.>[&&[&]-<range>]:;** Where:

- <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, to name the final NPC when it is desired to restore a continuous range of FTU-NPCs. Three ampersand (&s) are required for hierarchical.

SE 4.2.2: Designate NPC as NPCTP

Procedure

1. Enter : **CRTE-EQPT::NPC-<npc No.>::NPCTP-n;**
Where: n = 1 through 8.
 2. Notice the associated TPs that can now be grown.
-

SE 4.2.3: Grow Test Ports

Procedure

This procedure is used to grow test ports on a TAP (test access primary). Up to eight NPCs can be so designated on the frame, providing up to 96 test ports, 12 on each NPCTP. Test access NPCs must be grown with the CAS option to access circuits with signaling. As each test port is grown, two more channels from the NPC are assigned a test port number. During subsequent test access, the channels of the test port are cross-connected to the channel under test. Splitting access is achieved by having two channels per test port.

1. Consider the following information concerning the variables used in the command:
 - The trunk conditioning (tc) is programmed signaling and a message insertion word that is sent on the connecting carrier channel during a carrier failure.
 - The <tc> specification is used when static "tc" is needed for an analog test system (SARTS/RTS-5A in the USA); otherwise, the "tc" will be dynamic (that is, match what was specified for the cross-connection).
 - Twelve test ports are available on each designated NPCTP and up to eight NPCTPs can be designated. The test port numbering is kk = 01-12 on NPCTP 1, 13-24 on NPCTP 2, 25-36 on NPCTP 3, 37-48 on NPCTP 4, 49-60 on NPCTP 5, 61-72 on NPCTP 6, 72-84 on NPCTP 7, and 85-96 on NPCTP 8.
 - If trunk conditioning is required for static test ports, see the format of the "tc" field.
2. Enter **CRTE-EQPT::TP-kk[:<tc>];**

Where:

- kk = Test port number (01 through 96) on test access primary.
 - tc = Optional, used for Static Trunk Conditioning.
-

SE 4.2.4: Designate NPC as NPCTG

Procedure

1. Enter : **CRTE-EQPT::NPC-<npc No.>::NPCTG-rrr;**
Where: rrr = 1 through 400.
-

SE 4.2.5: Grow Test Groups

Procedure

This procedure is used to grow test groups on a TAP (test access primary). Up to 400 test groups can be established. Each test group consists of two Nx64 Kbit/s bundles for testing both directions, where N is the width of the bundles and may be from 1 to 31. The bundles, called east and west, can be on separate NPCs or on the same NPC, if bandwidth permits. Test access NPCs must be grown with the CAS option to access circuits with signaling. During subsequent test access, the channels of the test group are cross-connected to the channels under test.

1. Consider the following information concerning the variables used in the command:
 - The trunk conditioning (tc) is programmed signaling and a message insertion word that is sent on the connecting carrier channel during a carrier failure.
 - The <tc> specification is used when static "tc" is needed for an analog test system (SARTS/RTS-5A in the USA) when testing unmapped channel(s). Otherwise, the "tc" will be dynamic (that is, match what was specified for the cross-connection).
 - Each test group consists of two equal ranges having a width of up to 31 channels, for DS1. The two ranges may belong to two NPCTGs, or the same NPCTG but not overlapping.
 - If trunk conditioning is required for static test ports, see the format of the "tc" field.
2. Enter **CRTE-EQPT: :TG-mmm: :**
rrr-eee[&&-fff], sss-www[&&-xxx] [:<tc>] ;

Where:

mmm = Test group number.
rrr = NPCTG number.
eee[-fff] = [Range of] channels of east bundle on NPCTG rrr.
sss = NPCTG number.
www[-xxx] = [Range of] channels of west bundle on NPCTG sss.
tc = Optional, used for Static Trunk Conditioning.

64-kb/s Signals: Connect Hubbed Testport(s) to Local DACS II

4.3

When to Use

The HUB command in this procedure is used at a DACS II frame which serves as the interface between a mechanized test system and the other DACS II frames in the complex. The HUB command connects a pair of test port channels from the interface (concentrator DACS II frame) to test port channels on one of the other frames in the complex.

Related Information

For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

Use this procedure to connect a pair of test port channels from the interface (concentrator DACS II frame) to test port channels on one of the other frames in the complex.

1. To establish a test port-to-test port connection, enter

CONN-HUB-T0::<npc No.>-jjj::kk:[<tc>;

Where:

<npc No.> = NPC number on concentrator frame that terminates line to other frame. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

jjj = Lower channel of pair going to test port group on another frame. The connecting test port group NPC must be the same type.

kk = Testport number (01 through 96) on concentrator DACS II.

<tc> = Trunk conditioning. This field should not be specified for a 2.048 Mb/s Test Port unless the NPC termination specified in the command belongs to a 1.544 Mb/s circuit.



NOTE:

If both terminations are 2.048 Mb/s type framing, <tc> will default to 16-state signaling with all ones and an insertion word of all ones.

2. Check completion message for additional information. The presence of T or P in the first explanation line of the output message indicates a facility failure on that side or on the test port (P) NPC; zeros in the PBA field indicate no such failure.
3. To release a test port-to-test port connection, enter:

DISC-TACC-T0:::kk[:OOS];

Where:

OOS = Optional, to allow releasing connection when any of the involved NPCs are out-of-service.

64-kb/s Signals: Looping Back a Test Port

4.4

When to Use

Use this procedure to loop back the two channels of a specified Test Port. Looping back a Test Port is useful for testing the connection between the DACS II Test Port and the external test equipment. When a loopback test access command is executed, each of the two 64 kbit/s channels of the Test Port is individually looped back on itself so that the signal received from the facility side is returned to the facility.

Related Information

For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

Use this procedure to loop back the two channels of a specified Test Port.

To loop back a DS0 Test Port, enter the following command:

OPR-LPBK-T0:::kk[:<tc>]

Where:

- kk = Test Port number (01 through 96) to loop back.
- tc = Trunk Conditioning. The need to specify a value depends on the type of Test Port that is being looped back.

Trunk conditioning must be specified in this command only when looping back a dynamic Test Port. If it is not specified for a dynamic Test Port, the command will be denied. A dynamic Test Port is defined as a Test Port in which trunk conditioning was not specified when the Test Port was provisioned.

Although it is not required, trunk conditioning may be specified in this command to loop a static Test Port. A static Test Port is defined as a Test Port in which trunk conditioning was specified when the Test Port was provisioned. If trunk conditioning is specified in this command, it will be used. If it is not specified for a static Test Port in this command, the Test Port's trunk conditioning value will be used.

64-kb/s Signals: Connect Testport to Circuit

4.5

When to Use

In order to test channels with signaling, the NPC designated for test access must be provisioned for CAS. The test access NPC also performs the necessary signal conversions to allow testing DS1 circuits in a Gateway application. Generally, DACS II test access adopts the characteristics of the accessed circuit; but for unmapped terminations, the DACS II cannot determine the need for signal conversions either because there is no connection or existing conversion. For these connections, the user must determine whether the NAM keyword is required in the command.

Related Information

For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

1. Enter **RTRV** to see which test ports are grown and available (TPR alongside test port number in output message).

2. Familiarize yourself with the monitor command as follows:

CONN-TACC-T0::<npc No.2>-jjj::kkk:[<tc>][,NAM]:MON;

Where:

<npc No.> = NPC number of termination to be tested. Conference legs must be accessed by entering one of the FTU/DS3U legs in the command. For 1-way circuits, the TO-side entered in the CONN-CRS1 must be entered here.

jjj = Channel to be accessed; can be part of cross-connected circuit or unmapped termination.

tc = Allows entering <tc> for test access to unmapped termination; if not entered, the <tc> of GRTH TP command will be used for access to unmapped termination.

kk = Testport number (01 through 96).

NAM = Optional for gateway to disable A-law to μ -law signal conversion at test access NPC. Needed to test digital data circuits (where there is no encoding) at unmapped terminations.

3. If you are going to use the <tc> field in the command, consider the following:
 - Channel numbers associated with the test ports on the test access primary are listed in Volume I, Chapter 4. Channel time slots 15 and 16 (telephone channels 15 and 31) are not used for test access because of the possible interaction with CAS signaling (TS16).
 - When a mapped circuit is accessed, whatever <tc> is entered here will be overwritten by the <tc> of the mapped circuit.
 - When an unmapped circuit is accessed, whatever <tc> is entered here will overwrite the <tc> that was specified in the GRTH TP command.
 - Access to an unmapped circuit will be denied if the <tc> is not entered here or was not entered in the GRTH TP command.
4. Enter the command with the required information. For 1-way circuits, the TO side entered in the CONN-CRS1 must be entered here.
 - If the CONN ...COMPLD message is not received, find the reason for denial in the output message and perform corrective action to obtain command completion.

5. Note the meanings of the following possible output message keywords:
 - Signaling (SG) type field - T for transparent, R for robbed bit, and C for CAS.
 - The next three positions are for primary block alarms, either the alarmed side (F, T, or P for test port NPC) or 0s for no alarms.
 - The next field is the termination state of the circuit, either the terminated side (F, T, or Both) or R (released/not terminated).
 - RDLD indicates red, special service circuit.
 - CUS indicates customer control of channel.
 - ONEWAY indicates one-way circuit accessed.
 6. To split the circuit for transmission or signaling tests, enter:
CHG-TACC-T0:::kk:SPLT;
At this point, you can run tests from the local test panel or test position.
-

When to Use

Use this procedure to release the test port.

**Related
Information**

For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

Use this procedure to release a test port.

1. When testing is completed, release test access by entering, **DISC-TACC-T0:::kk;**.
-

Nx64 Kbit/s: Connect Test Group to Circuit

4.7

When to Use

Use this procedure to establish test access to a range of 64 Kbit/s channels. This initial access is a bridged connection to allow monitoring the circuit for service before it is split for testing. Generally, DACS II test access adopts the characteristics of the accessed circuit, but, for unmapped terminations, there is a trunk conditioning option in the command.

Related Information

For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

Use this procedure to establish test access to a range of 64 Kbit/s channels.

1. Enter **RTRV-TACC-T0::TG-mmm[&&-nnn]**; to see information on a TG or a range of TGs. For each TG queried, the NPCTG/NPC number and starting channel number for the east and west bundles are provided along with the TG width and mode.

Due to the potentially large number of NPCTGs and TGs, enter **RTRV-TACC-T0::NPCTG-rrr[&&-sss];** to query an NPCTG or a range of NPCTGs.

2. Familiarize yourself with the monitor command as follows:

**CONN-TACC-T0::<npc No.>-jjj[&&-kkk]\
[&-lll&...]:TG-mmm:[<tc>]:MON;**

Where:

- mmm = Test group number .
- <npc No.> = NPC number of termination to be tested. Conference legs must be accessed by entering one of the FTU/DS3U legs in the command. For 1-way circuits, the TO-side entered in the CONN-CRS1 must be entered here.
- jjj, kkk, lll = List or range of channels (Number of channels must match width of TG).
- tc = Allows entering <tc> for test access to unmapped termination; if not entered, the <tc> of GRTH TG command will be used for access to unmapped termination.

3. If you are going to use the <tc> field in the command, consider the following:
 - When a mapped circuit is accessed, whatever <tc> is entered here will be overwritten by the <tc> of the mapped circuit.
 - When an unmapped circuit is accessed, whatever <tc> is entered here will overwrite the <tc> that was specified in the GRTH TG command.
 - Access to an unmapped circuit will be denied if the <tc> is not entered here and was not entered in the GRTH TG command.
4. Enter the command with the required information. For 1-way circuits, the TO side entered in the CONN-CRS1 must be entered here.
 - If the CONN ...COMPLD message is not received, find the reason for denial in the output message and perform corrective action to obtain command completion.

5. Note the meanings of the following possible output message keywords:
 - Signaling (SG) type field - T for transparent, R for robbed bit, and C for CAS.
 - The next three positions are for carrier group alarms, either the alarmed side (F, T, or P for test group NPC) or 0s for no alarms.
 - The next field is the termination state of the circuit, either the terminated side (F, T, or Both) or R (released/not terminated).
 - RDLD indicates red, special service circuit.
 - CUS indicates customer control of channel.
 - ONEWAY indicates one-way circuit accessed.
 - BCAST indicates BCON circuit accessed.
 - UMPD indicates unmapped circuit accessed.

6. To split the circuit for transmission or signaling tests, enter:

CHG-TACC-T0:::TG-mmm:SPLT;



NOTE:

If the TG is connected to an unmapped Nx64 Kbit/s termination, this command connects both directions of the unmapped termination to the TG's west bundle.

At this point, you can run tests from the local test panel or test position.

7. To change the mode of a TG currently in split mode to monitor mode, enter
CHG-TACC-T0:::TG-mmm:MON;

Nx64 Kbit/s: Change Circuit Termination State

4.8

When to Use	Use this procedure to to modify the terminate and leave active (TERM) and terminate and leave released (RLS) states of one or both ends of a Nx64 Kbit/s cross-connection associated with a TG.

Before You Begin	The Nx64 Kbit/s circuit must be a mapped one-way or two-way circuit currently under monitor or split test modes, and unterminated to modify the TLA states or terminated to modify the TLR states.

Related Information	For related information, refer to Volume I, Chapter 4, <i>Test Access</i> .

Instructions

.Use the following procedure to change the circuit termination state.

1. To modify the terminate and leave active states, enter:

CHG-TL-T0:::TG-mmm:TERM{F|T|B}

Where:

mmm = TG number.

F|T|B = Direction of circuit to be terminated:
F = terminated toward the FROM side.
T = terminated toward the TO side.
B = BOTH sides are terminated.

2. To modify the terminate and leave release states, enter:

DISC-TACC-T0:::TG-mmm:RLS{F|T|B}

Where:

mmm = TG number.

F|T|B = Direction of circuit to be released:
F = released toward the FROM side.
T = released toward the TO side.
B = BOTH sides are released.

Nx64 Kbit/s: Connect Test Group in HUB Mode

4.9

When to Use

Use this procedure to set up an Nx64 Kbit/s HUB test access connection via a TG, to a Nx64 Kbit/s TO termination consisting of two Nx64 Kbit/s bundles connected to the TG's east and west bundles.

The number of channels in each bundle is the same as the TG's width; and the starting channels are indicated by the TO termination.

Related Information

For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

Use this procedure to set up an Nx64 Kbit/s HUB test access connection via a test group.

1. Enter **CONN-HUB-T0::uv-m-np-ddd,wx-k-qr-jjj::\
TG-mmm[:<tc>];**

Where:

uvmnp = 1st TO NPC number.

wxkqr = 2nd TO NPC number.

ddd = Starting channel number of 1st TO NPC.

jjj = Starting channel number of 2nd TO NPC.

Nx64 Kbit/s: Connect Test Group in LOOPED Mode

4.10

When to Use

Use this loopback test access command to place both bundles of a test-access group (TG) in the looped mode.

The loopback is released using a Test Port release command.

Related Information

For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

Use this loopback test access command to place both bundles of a test-access group (TG) in the looped mode.

1. To loop back a bundles of a TG, enter the following command:

OPR-LPBK-T0::mmm[:<tc>]

Where:

- mmm = Test Group number (001 through 400) to loop back.
 - tc = Trunk Conditioning. If the static trunk conditioning was not furnished in the growth TG command, it must be dynamically specified in this command or the test access will be denied. A dynamic tc will override any static tc.
-

Nx64 Kbit/s: Release and Degrow Test Group

4.11

When to Use

Use this procedure to release one or a range of currently active TGs, degrow a TG, and degrow an NPCTG. When a TG is released, any circuit under test is restored to its normal, terminated, or unmapped state.

Related Information

For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

Use this procedure to release one or a range of currently active TGs, degrow a TG, and degrow an NPCTG. When a TG is released, any circuit under test is restored to its normal, terminated, or unmapped state.

1. If testing is complete, release the test group(s) by entering:

DISC-TACC-T0 : : : TG-mmm[&&-nnn] [: OOS] ;

The OOS keyword must be used if any NPC involved is out of service. This TG is now available to test other circuits or may be degrown.

2. To degrow a TG or a range of TGs, enter:

DISC-EQPT : : TG-mmm[&&-nnn] : ;

If the range mmm-nnn includes some undesignated TG numbers, these numbers will be skipped. The output message will indicate degrown and skipped TGs appropriately.

3. To degrow an NPCTG, enter:

DISC-EQPT : : NPC-uv-m-np : : NPCTG-rr [: TGR] ;

It is required that all TGs associated with this NPCTG be released before the NPCTG can be degrown. If TGR is specified, all active TGs will be released and degrown before the NPCTG is degrown; and any out-of-service (OOS) condition will be bypassed (i.e., TG will be released as if the OOS keyword was entered above).

Clear-2 Mbit/s: Establish/Change Test Access

4.12

When to Use Use this procedure to set up or change non-channelized test access in the monitor mode, split mode, loop mode, hub mode, or test-NPC release mode.

Before You Begin These conditions apply:

- The circuit under test can be one unmapped NPC or a pair of unmapped NPCs. The mapped circuit may be a one-way, two-way, or broadcast circuit.
- A one-way circuit can only be tested in the monitor E side (MONE) or split A circuit (SPLTA) modes.
- Only one test connection can exist at a time for any circuit.
- This procedure excludes the HUB, LPBKT, and TNR modes.

Related Information For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

Use this procedure to set up or change non-channelized test access in the monitor mode, split mode, loop mode, hub mode, or test-NPC release mode.

1. Familiarize yourself with the following command:

```
CONN-TACC-T1::<npc No.1>[&<npc No.2>]:\  
[ww]:[<npc No.3>][,<npc No.4>]:<tmode>;
```

Where:

- <tmode> = Test access mode.
- <npc No.1> = NPC number of the FAD or the 1st NPC number of the FAD pair for MONEF, SPLTEF, and SPLTAB. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <npc No.2> = Optional. 2nd NPC number of the FAD pair for MONEF, SPLTEF, and SPLTAB.
- <npc No.3> = Reference NPC, E-end NPC, or backbone of BCON.
- <npc No.4> = Optional.

2. To establish the test connection, enter the command with the appropriate information.



NOTE:

For test modes MONEF, SPLTAB, and SPLTEF, two FADs must be entered. If the 2nd FAD is omitted, the FAD pair defaults to <npc No.1> and <npc No.1> + 1. (If <npc No.1> is the highest NPC number on the DACS II frame, the 1st NPC on the frame is used.)

3. To change the test access mode, enter the following command:

```
CHG-ACCMD-T1::<npc No.1>[&<npc No.2>]:[ww]:<tmode>;
```

Where:

- <tmode> = New test mode.
- <npc No.1> = NPC number of the FAD or the 1st NPC number of the FAD pair for MONEF, SPLTEF, and SPLTAB. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <npc No.2> = Optional. 2nd NPC number of the FAD pair for MONEF, SPLTEF, and SPLTAB.

**NOTE:**

For test modes MONEF, SPLTAB, and SPLTEF, two FADs must be entered. If the 2nd FAD is omitted, the FAD pair defaults to <npc No.1> and <npc No.1> + 1.

When to Use

Use this procedure to use hub mode to form a two-way connection between a FAD and an unmapped clear-2 Mbit/s NPC, which is connected to a FAD on a remote DACS II. This connection serves as a connection to the remote FAD, which can test access a circuit on that DACS II without a direct connection to a test system.

**Related
Information**

For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

Use the following command to establish a hub mode test connection.

1. Familiarize yourself with the following command:

CONN-HUB-T1::<npc No.1>,<npc No.2>[:ww];

Where:

<npc No.1> = NPC number of the FAD.

<npc No.2> = Number of NPC connected to the remote FAD.

2. Enter the command with the appropriate information.
-

When to Use

Use this procedure to use loopback mode. In loopback mode, the input port of the FAD is connected to the output port. The FAD must be unmapped or must have been released from test access first.

**Related
Information**

For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

Use the following command to use loopback mode.

1. Familiarize yourself with the following command:

OPR-LPBK-T1:<npc No.1>[:ww];

Where:

<npc No.1> = NPC number of the FAD to be looped back.

2. Enter the command with the appropriate information.
-

When to Use

When a FAD has been released from testing, any circuit under test is restored to its original state and any termination on a circuit as a result of splitting or looping shall be released automatically. However, any actual termination change made by the user will remain unless released/terminated prior to ending the test session. If two FADs are being used in the test session, both FADs are released when the first one is specified in the command.

Related Information

For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

Use this procedure to release the test port.

1. Familiarize yourself with the following command:

**DISC-TACC-T1:: [<npc No.1> [&<npc
No.2>]] : [ww] : [ALL] [:OOS];**

Where:

<npc No.1>	=	NPC number of the FAD or the 1st NPC number of the FAD pair for MONEF, SPLTEF, and SPLTAB. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
<npc No.2>	=	Optional. 2nd NPC number of the FAD pair for MONEF, SPLTEF, and SPLTAB.
ALL	=	Release all FADs.
OOS	=	Used for out-of-service circuits.

2. Enter the command with the appropriate information.
-

**Clear-2 Mbit/s: Change Circuit
Termination State**

4.16

When to Use Use this procedure to change the termination mode of any circuit under test.

**Related
Information** For related information, refer to Volume I, Chapter 4, *Test Access*.

Instructions

The termination mode of any circuit under test, can be changed with the following procedure.

1. Familiarize yourself with the following command:

```
CHG-TACC-T1::<npc No.1>[&<npc No.2>]:[ww]:[<npc  
No.3>]:\  
[{NORM|TERM}][,{NORM|TERM}];
```

Where:

- <npc No.1> = NPC number of the FAD or the 1st NPC number of the FAD pair for MONEF, SPLTEF, and SPLTAB. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <npc No.2> = Optional. 2nd NPC number of the FAD pair for MONEF, SPLTEF, and SPLTAB.
- <npc No.3> = Optional. To name new F-end NPC of a BCON; if omitted, the test session retains the same F-end NPC.
- NORM/TERM = Optional. To select termination mode for E-end and/or F-end. The first entry refers to the E-end. NORM = normal data of the cross-connection. TERM = terminate side with default termination signal.

2. Enter the command with the appropriate information.
-

Integrated Test Set: Initiate/Stop Test Signal Generation

4.17

When to Use	Use this procedure to turn on or turn off test signal generation on one bundle of a test access group (TG) currently in split, looped, or hub test access modes.

Before You Begin	Before you begin this task, a test group must be grown using NPC test groups that are provisioned as ITS (ST-type) NPCs.

Related Information	For related information, see Volume I, Chapter 4, <i>Test Access</i> .

Instructions

Enter the command below to initiate or stop test signal generation:

```
CHG-TACC-T0:::TG-mmm:\  
TSG-{ON|OFF}[:<pattern>:{EAST|WEST}[SIG-abcd]];
```

Where:

- TG = Test-access group.
 - mmm = Test-access group number (001 through 400).
(The test-access group is designated as in command I.31421.)
 - TSG = Test Signal Generation.
 - ON = Initiate test signal generation.
 - OFF = Stop test signal generation.
 - <pattern> = Test pattern to be transmitted. Test patterns supported:
 - PATT X'ef
8 bit user-defined pattern (in hexadecimal notation)
 - 511PRBS
511 bit pseudo-random bit sequence
 - 2047PRBS
2047 bit pseudo-random bit sequence.
 - EAST = Generated signal to be transmitted on East bundle of TG.
 - WEST = Generated signal to be transmitted on West bundle of TG.
 - abcd = 4 bit signaling word to be transmitted with pattern. If not specified, the signaling word defaults to 0101.
-

When to Use Use this procedure to insert a bit error into the generated test signal.

Before You Begin Before you begin this task, the TG used for the ITS must be:

- Grown using NPC test groups that are provisioned as ITS (ST-type) NPCs.
- In test signal generation mode.

Related Information For related information, see Volume I, Chapter 4, *Test Access*.

Instructions

Enter the command below to insert bit error in the test signal:

CHG-TACC-T0:::TG-mmm:INS;

Where:

- TG = Test-access group.
 - mmm = Test-access group number (001 through 400). (The test-access group is designated as in command I.31421.)
 - INS = Insert a bit error into the generated test signal.
-

Integrated Test Set: Start/Stop Test Signal Monitoring

4.19

When to Use	Use this procedure to turn on or turn off test signal monitoring on one bundle of a test access group (TG) currently in test signal generation mode. Only one TG bundle per TG193B circuit pack can be in test signal monitor mode at a time.
Before You Begin	Before you begin this task, a test group must be grown using NPC test groups that are provisioned as ITS (ST-type) NPCs. The ITS must have test signal generation turned on.
Related Information	For related information, see Volume I, Chapter 4, <i>Test Access</i> .

Instructions

Enter the command below to start or stop test signal monitoring:

CHG-TACC-T0 : : : TG-mmm:TSM-{ON|OFF}[:{EAST|WEST}[:TINT-nnn]];

Where:

- TG = Test-access group.
 - mmm = Test-access group number (001 through 400).
(The test-access group is designated as in command I.31421.)
 - TSM = Test Signal Monitor.
 - ON = Initiate test signal monitoring.
 - OFF = Stop test signal monitoring.
 - EAST = Monitor the signal received on East bundle of TG.
 - WEST = Monitor the signal received on West bundle of TG.
 - TINT = Test interval.
 - nnn = Duration of test in minutes (acceptable range 1-120). If not specified, the test interval is open-ended.
-

Integrated Test Set: Query Error Performance Parameters

4.20

When to Use	Use this procedure to query the status of the Integrated Test Set (ITS) and to retrieve the error performance parameter results from a test signal monitoring session of the ITS.
Before You Begin	Before you begin this task, a test group must be grown using NPC test groups that are provisioned as ITS (ST-type) NPCs.
Related Information	For related information, see Volume I, Chapter 4, <i>Test Access</i> .

Instructions

Enter the command below to retrieve the BERT error performance parameters:

RTRV-TACC-T0::TG-mmm::TSM;

Where:

TSM = Test Signal Monitor.

TG = Test-access group.

mmm = Test-access group number (001 through 400).
(The test-access group is designated as in
command I.31421.)

Cross-Connections and Disconnections General Tasks

5

-
■ 64-kb/s Signals: Two-point, Two-way or One-way Circuits	GT 5.1-1
■ 64-kb/s Signals: Two-point Gateway Circuits	GT 5.2-1
■ 64-kb/s Signals: Two-point Multi-point Circuits	GT 5.3-1
■ 64-kb/s Signals: Broadcast Circuits	GT 5.4-1
■ 64-kb/s Signals: One-Way Multipoint Circuit	GT 5.5-1
■ 64-kb/s Signals: Enter Change Cross-Connect Command	GT 5.6-1
■ 64-kb/s Signals: Disconnect Cross-Connected Circuit	GT 5.7-1
■ Clear-2 Mb/s Signals: Two-Point, Two-Way or One-Way Circuit	GT 5.8-1
■ Clear-2 Mb/s Signals: Broadcast Circuit	GT 5.9-1
■ Clear-2 Mb/s Signals: Switch Return Leg of Broadcast Circuit	GT 5.10-1
■ Clear-2 Mb/s Signals: Change Termination State of Cross-Connection	GT 5.11-1
■ Clear-2 Mb/s Signals: Disconnect Two-Point, Two-Way or One-Way Circuits	GT 5.12-1
■ Clear-2 Mb/s Signals: Disconnect Broadcast Circuits	GT 5.13-1

(Continued on next page)

■ Re-Direct DS0 Signals	GT 5.14-1
■ Re-Direct E1 Signals: Network Element	GT 5.15-1
■ Re-Direct E1 Signals: Non-Network Element	GT 5.16-1
■ Timeslot 0: Two-Way Cross-Connections	GT 5.17-1
■ Timeslot 0: Broadcast Circuit	GT 5.18-1
■ Timeslot 0: Change Timeslot 0	GT 5.19-1
■ Timeslot 0: Disconnect Two-way TS0 Circuit	GT 5.20-1
■ Timeslot 0: Disconnect Broadcast Circuit	GT 5.21-1
■ DSP Application: Cross-Connect, Change or Disconnect DSP Application Connections	GT 5.22-1
■ DSP Platform: Application-to-Application Cross-Connections	GT 5.23-1

64-kb/s Signals: Two-point, Two-way or One-way Circuits

5.1

When to Use

Use this procedure to cross-connect, change, or disconnect 64-kb/s signals. This procedure covers two-point two-way circuits and two-point one-way circuits.

This procedure covers 1-way or 2-way cross-connections between channels of NPCs. These channels will either be connected using CAS (channel associated signaling) or NSA (nonsignaling associated) mode. The 32 time slots in the 2.048 Mb/s signal are normally referred to by telephone channel number in the DACS II commands. With this numbering, channels 00 through 15 correspond to the like-numbered time slots and channels 16 through 30 correspond to time slots 17 through 31. DACS II channel 31 corresponds to time slot 16 which carries signaling in the CAS mode.

Related information

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

1. Before you enter the command, familiarize yourself with the command fields and variations which follow. The order of entering the channel terminations in the command is only meaningful for 1-way circuits, test access, and <tc> and SC command fields.

Two-Way:

```
CONN-CRS-T0::<npc No.1>-ddd[&&-eee],<npc No.2>-jjj\
[&&-kkk]::[<tc>][,SC-abcd,abcd][,NAM]:[RDLD]\
[, {CUS|INCL}]:[AIS]:[NORM,NORM|TERM,TERM]:[PRIOUT];
```

One-Way:

```
CONN-CRS1-T0::<npc No.1>-ddd[&&-eee],<npc No.2>-jjj\
[&&-kk]::[<tc>][,SC-----,abcd][,NAM]:[RDLD]\
[, {CUS|INCL}]:[NORM|TERM]:[PRIOUT];
```

2. If you are going to enter a channel range connection, consider the following:
 - For pure 2.048-Mb/s interface and CAS mode, the range is any continuous group of 30 channels or less (01 through 30). CAS channels 00 and 31 (TS16) and NSA channel 00 are not allowed in range connection.
 - For pure 2.048-Mb/s interface and NSA mode, the range is any continuous group of 31 channels or less (01 through 31).
3. If you need information on the TC (trunk conditioning) field, consider the following:
 - The FROM and TO sides of the TC field correspond to the FROM and TO terminations entered in the command.
 - If one or both sides are transparent (no signaling), the TRSP, IW-X-pq form must be used. The signaling pattern given by X-D is automatically sent on the CAS side.
 - If specific <tc> is entered for 1-way circuits, dashes must be entered for the FROM side; for example, TC-X--,X-FF).
4. If you need information on the SC (signaling conversion) field, consider the following:
 - The FROM and TO sides of the SC field correspond to the FROM and TO terminations entered in the command.
 - SC is not recommended in a pure 2.048-Mb/s interface to 2.048-Mb/s interface connection. The SC is done on each end of the connection and the net result is to cancel it out.
5. Enter the appropriate command for type of circuit required:

Two-Way:

```
CONN-CRS-T0:<npc No.1>-ddd[&&-eee],<npc No.2>-jjj\
[&&-kkk]::<tc>[, SC-abcd,abcd][, NAM]:[RDLD\]
[, {CUS|INCL}]:[AIS]:[NORM,NORM|TERM,TERM]:[PRIOUT];
```

One-Way:

```
CONN-CRS1-T0:<npc No.1>-ddd[&&-eee],<npc No.2>-jjj\
[&&-kk]::<tc>[, SC-----,abcd][, NAM]:[RDLD\]
[, {CUS|INCL}]:[NORM|TERM]:[PRIOUT];
```

Where:

- <npc No.1> = NPC number of one side (FROM), either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- ddd = Channel number; 01 through 30/31 (00 is TS0).
- eee = Optional, to give the last channel of continuous range of channels to be connected.
- <npc No.2> = NPC number of other side (TO); see <npc No.1>.
- jjj = Channel number; 01 through 30/31 (00 is TS0).
- kkk = Optional, to give the last channel of same width range as other side.
- <tc> = Optional trunk conditioning.
- SC(abcd,abcd) = Optional, dictates the use of signaling bits (abcd) in Ts16 on the FROM and TO sides. The possibilities for the bits are: 0, 1, P (for pass through), and V (inverted).
- NAM = Only used for digital data (no analog encoding) to disable A-law (2.048-Mb/s interface) to μ -law encoding conversions.
- RDLD = Optional, designates special service.
- CUS = Optional, customer controlled circuit.
- INCL = To remove previous CUS channel designation.
- AIS = **Not applicable for primary block circuits.** Only for pure DS1 24-channel connection to supply all 1s downstream when incoming CGA or AIS is received.
- NORM|TERM = To specify unterminated, normal connection (default) or terminated, preservice connection.
- PRIOUT = Optional; to give priority to associated output message by placing it on the top of the output message queue.

6. Familiarize yourself with connection query outputs:

- To obtain the other end of a connection and to see trunk conditioning, enter:
RTRV-PRMTR-T0:<npc No.>-jjj[&&-kkk]::T0;

Where:

- <npc No.2> = NPC number and channel number of specific termination.
kkk = Optional, last channel of a range of channel terminations.

- For all connections on NPC, enter
RTRV-CRS-T1::<npc No.>[-<range>]::MAP;

Where:

- <npc No.> = NPC number of one side of the connection.
<range> = NPC number of last NPC in the range.

 NOTE:

- For 1-way circuits, you can query the connection (if any) in the other direction of the same NPC by entering
RTRV-PRMTR-T0::<npc No.1>-ddd::FROM;.

64-kb/s Signals: Two-point Gateway Circuits

5.2

When to Use

Use this procedure to create 1-way or 2-way cross-connections between channels of PBCs (primary block circuits). These channels will either be assembled using CAS (channel associated signaling) or NSA (nonsignaling associated) mode. The 32 time slots in the 2.048-Mb/s signal are normally referred to by telephone channel number in the DACS II commands. With this numbering, channels 00 through 15 correspond to the like-numbered time slots and channels 16 through 30 correspond to time slot 17 through 31. DACS II channel 31 corresponds to time slot 16 which carries signaling in the CAS mode.

Related Information

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure to create 1-way or 2-way cross-connections between channels of PBCs (primary block circuits).

1. Before you enter the command, familiarize yourself with the command fields and variations which follow. The order of entering the channel terminations in the command is only meaningful for 1-way circuits, test access, and <tc> and SC command fields.

Two-Way:

```
CONN-CRS-T0::<npc No.1>-ddd[&&-eee],<npc No.2>-jjj\
[&&-kkk]::<tc>[, SC-abcd,abcd][,NAM]:[RDLD]\
[, {CUS|INCL}]:[AIS]:[NORM,NORM|TERM,TERM]:[PRIOUT];
```

One-Way:

```
CONN-CRS1-T0::<npc No.1>-ddd[&&-eee],<npc No.2>-jjj\
[&&-kk]::<tc>[, SC-----,abcd][,NAM]:[RDLD]\
[, {CUS|INCL}]:[NORM|TERM]:[PRIOUT];
```

2. Enter the appropriate command for type of circuit required:

Two-Way:

```
CONN-CRS-T0::<npc No.1>-ddd[&&-eee],<npc No.2>-jjj\
[&&-kkk]::<tc>[, SC-abcd,abcd][,NAM]:[RDLD]\
[, {CUS|INCL}]:[AIS]:[NORM,NORM|TERM,TERM]:[PRIOUT];
```

One-Way:

```
CONN-CRS1-T0::<npc No.1>-ddd[&&-eee],<npc No.2>-jjj\
[&&-kk]::<tc>[, SC-----,abcd][,NAM]:[RDLD]\
[, {CUS|INCL}]:[NORM|TERM]:[PRIOUT];
```

Where:

- <npc No.1> = NPC number of one side (FROM), either extended (for example, [0]001) or hierarchical (for example, 01-1-01). (for example, [0]001) or hierarchical (for example, 01101).
- ddd = Channel number; 01 through 24 (00 is data link) for DS1 NPC, 01 through 30/31 (00 is TS0) for type PB/PC NPC.
- eee = Optional, to give the last channel of continuous range of channels to be connected.
- <npc No.2> = NPC number of other side (TO); see <npc No.1>.
- jjj = Channel number; 01 through 24 (00 is data link) for DS1 NPC, 01 through 30/31 (00 is TS0) for type PB/PC NPC.
- kkk = Optional, to give the last channel of same width range as other side.

<tc>	=	Trunk conditioning; required for DS1 channel connection (gateway).
SC(abcd,abcd)	=	Optional, dictates the use of signaling bits (abcd) in TS16 on the FROM and TO sides. The possibilities for the bits are: 0, 1, P (for pass through), and V (inverted).
NAM	=	Only used for digital data (no analog encoding) to disable A-law (2.048-Mb/s Interface) to μ -law encoding conversions.
RDLD	=	Optional, designates special service.
CUS	=	Optional, customer controlled circuit.
INCL	=	To remove previous CUS channel designation.
AIS	=	Only for pure DS1 24-channel connection to supply all 1s downstream when incoming CGA or AIS is received.
NORM TERM	=	To specify unterminated, normal connection (default) or terminated, preservice connection.
PRIOUT	=	Optional; to give priority to associated output message by placing it on the top of the output message queue.

3. Familiarize yourself with connection query outputs:

- To obtain the other end of a connection and to see trunk conditioning, enter:

RTRV-PRMTR-T0::<npc No.>-jjj[&&-kkk]::T0;

Where:

<npc No.2> = NPC number and channel number of specific termination.

kkk = Optional, last channel of a range of channel terminations.

- For all connections on NPC, enter:

RTRV-CRS-T1::<npc No.>[-<range>]::MAP;

Where:

<npc No.> = NPC number of one side of the connection.

<range> = NPC number of last NPC in the range.

- For 1-way circuits, you can query the connection (if any) in the other direction of the same NPC by entering

RTRV-PRMTR-T0::<npc No.1>-ddd::FROM;

- For cross-connect information between individual DSP application cards, enter:

RTRV-CRS-APPL:::{<npc No.>|ALL};

Use the **ALL** keyword to retrieve information on this type of cross-connection for the entire frame.

64-kb/s Signals:
Two-point Multi-point Circuits

5.3

When to Use	This section covers both symmetrical and broadcast multipoint configurations that are set up using the DSPU (DMB-type) NPC or virtual NPC.

Related Information	For additional information, see Volume I, Chapter 5, <i>Cross-Connections and Disconnections</i> .

Instructions

This section covers both symmetrical and broadcast multipoint configurations that are set up using the DSPU (DMB-type) NPC or virtual NPCs. DACS II conferencing equipment provides μ -law companding for use with DS1 signals. The DPC card for 2.048-Mb/s interface makes needed conversions unless a data conference (no encoding) is specified by the NAM command word. The first 2.048-Mb/s interface connection determines the conference type (μ -law or data).

1. Study the following command and obtain needed information:

```
CONN-CRS-T0: :<npc No.1>-ddd[&&-eee],<npc No.2>-jjj\  
[&&-kkk] : : [<tc>] [, NAM] : [RDLD] [, {CUS|INCL}] : fmd, tmd\  
[ : NTR-m] [ : {NORM, NORM|TERM, TERM}] : [PRIOUT];
```

Where:

- <npc No.1> = NPC number for FROM side.
- CRS = CRS is for 2-way,
- <npc No.1> = NPC number for FROM side.
- ddd/jjj = Conference number if bridging end or channel number if facility leg end.
The channel numbers run 01 through 30 or -31 (NSA) for type PB/PC NPCs or 01 through 24 for DS1 NPCs.
- eee/kkk = Optional, last channel of continuous range to be connected.
- <npc No.2> = NPC number for TO side; see <npc No. 1>.
- <tc> = Optional, trunk conditioning. If entered, does not have to be same for each leg but must be of form: TRSP,IW-X-*nn*[*n*]. If omitted, the default of TRSP,IW-X-FF applies.
- NAM = No A-law to μ -law.
The A-law to μ -law and μ -law to A-law code translators on the E1 type NPC are disabled. This keyword is valid in the following types of cross-connects:
Multipoint:

E1 to E1: Multipoint cross-connects have A-law to μ -law and μ -law to A-law set as a default. This conversion is performed on pure E1 multipoint connections in case a DS1 leg is ever added to the broadcast connection. The **NAM** keyword is used to disable the conversions. It may be desirable to disable conversions in a pure E1 multipoint cross-connect since such a connection has more quantization noise than a pure E1 two-point cross-connect. This is due to the back to back A-law to μ -law and μ -law to A-law conversions which are taking place.

E1 to DS1 or DS1 to E1: Same explanation as E1 to E1.

DS1 to DS1: Not applicable.

fmd,tmd = Designators for FROM and TO side modes.

Enter appropriate one for each side: SYM for DMB end of symmetrical, BBL for backbone, bridge end; BRD for nonbackbone, bridge end; or LEG for FTU NPC end. This field determines the direction of data flow of broadcast circuit.

NTR m = Optional, shuts off transmission toward FROM (m=F) or TO (m=T) side.

RDLD = Optional, designates red special service (RDLD).

CUS = Optional, designates customer control (CUS).

INCL = Optional, removes previous channel CUS designation.

NORM|TERM = To specify normal, unterminated connection (default) or terminated, preservice connection.

PRIOUT = Optional; to give priority to associated output message by placing it on the top of the output message queue.



NOTE:

TERM,TERM can be used in commands to establish preservice terminated state.

2. Enter cross-connect command for a segment of the multipoint circuit.



NOTE:

If command line runs over line length for your screen, you can break the line with a backslash and continue the command on the next line.

3. Repeat the procedure to connect remaining segments to the bridge; the same trunk conditioning and any special service designations must be entered for each segment.
4. To see all the conference legs, enter
RTRV-PRMTR-T0::<npc No.>-ddd::T0;

Where:

<npc No.> = NPC number of bridging (DMB) or virtual NPC.
ddd = Conference or channel number.



NOTE:

Notice that the NTR directions in the output are in terms of what was entered for the TO-side in the query.

When to Use

This section presents the BDCST commands for establishing broadcast circuits through the cross-connect network. Up to eight tributaries can be connected to the broadcast leg at one time by listing them in the command with ampersands (&). Unless the looped or no return keywords are used, the DACS II will designate the first tributary that is entered as the full tributary which is the only one that returns transmission to the broadcast leg. This return path can be subsequently changed using the CHG RPATH command.

Related Information

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

The Broadcast TS0 information can be found in GT 5.13.

Instructions

1. Familiarize yourself with the commands as follows:

Multiple tributaries (up to 8):

```
CONN-BDCST-T0::<npc No.1>-ddd&&[-eee],<npc No.2>-jjj\
[&<npc No.3>-nnn][&<npc No.4>-ppp]::\
[<tc>][,NAM][,<sc>]:[RDLD][,{CUS|INCL}]\
[:{NTR|LPD|CONV}];
```

Single Tributary:

```
CONN-BDCST-T0::<npc No.1>-ddd&&[-eee],<npc No.2>-jjj\
::<tc>[,NAM][,<sc>]:[RDLD][,{CUS|INCL}]\
[:{NTR|LPD|CONV}];
```

Where:

- <npc No.1> = Broadcast NPC number, either extended (for example [0]001) or hierarchical (for example, 01-1-01).
- ddd-eee = Range of channels to be broadcast (for example, 01 through 24). eee is optional.
- TOX = Up to 8 tributaries can be connected to the broadcast leg at one time.
- jjj/nnn/ppp = connected to; the channel range is set by broadcast leg.
- <npc No.2> = NPC number of first tributary; see <npc No.1>.
- <npc No.3> = NPC number of second tributary; see <npc No.1>.
- <npc No.4> = NPC number of third tributary; see <npc No.1>.
- <tc> = Trunk conditioning; can be either the TC format (signaling) or TRSP,IW-X-mn format. Different values can be used on legs, but same type format required.
- <sc> = Optional for gateway to dictate the use of signaling bits (abcd) on FROM and TO sides. The general form is "SC(abcd,abcd)" and the values are: 0, 1, P (pass through), and V (inverted).
- NAM = No A-law to μ -law.
The A-law to μ -law and μ -law to A-law code translators on the E1 type NPC are disabled. This keyword is valid in the following types of cross-connects:

Multipoint:

E1 to E1:

Multipoint cross-connects have A-law to μ -law and μ -law to A-law set as a default. This conversion is performed on pure E1 multipoint connections in case a DS1 leg is ever added to the broadcast connection. The **NAM** keyword is used to disable the conversions. It may be desirable to disable conversions in a pure E1 multipoint cross-connect since such a connection has more quantization noise than a pure E1 two-point cross-connect. This is due to the back to back A-law to μ -law and μ -law to A-law conversions which are taking place.

E1 to DS1 or DS1 to E1:

Same explanation as E1 to E1.

DS1 to DS1:

Not applicable.

NTR,LPD or CONV = Optional, to designate no return transmission (NTR), to loop the broadcast (LPD), or to convert (CONV) existing 2-way, 2-point connection to BDCST.

RDLD = Optional, to designate red special service.

CUS = Optional, to designate customer control service.

INCL = Needed to remove CUS or special service.

2. Enter the command with the required information.

**NOTE:**

If the command runs over line length for your screen, you can break the line with a backslash and continue the command on the second line.

3. Repeat this procedure if additional tributaries must be added to complete the broadcast circuit.

64-kb/s Signals: One-Way Multipoint Circuit

5.5

When to Use

This section describes a method for establishing one-way broadcast circuits using the CRS1 MPM command and virtual NPC [9]961 through [9]966 (or 99-1-01 through 99-1-06). To build this circuit, establish the backbone leg to the virtual NPC using the LEG,BBL combination of command keywords and connect each tributary to the backbone using the BRD,LEG combination of keywords. The FTU termination is always called a LEG. A range of channels can be broadcast using the channel range option for the backbone leg; this range is specified once and applies to the entire circuit. The broadcast circuit formed in the virtual NPC cannot be connected to another bridge circuit (concatenated) for further fanout.

Related Information

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure to establish a one-way broadcast circuit.

1. Study the following command and obtain needed information.

```
CONN-CRS1-T0::<npc No.1>-ddd[&&-eee],<npc No.2>-jjj\  
[&&-kkk]::[<tc>][,NAM]:[RDLD][,{CUS|INCL}]:fmd,tmd\  
[:{NORM|TERM}]:[PRIOUT];
```

Where:

- <npc No.1> = NPC number for FROM side. For bridging end, use virtual NPC. For leg end, use facility NPC.
- ddd/jjj = Conference number (001 through 500) if bridging end or channel number 01 through 30 or -31 (NSA) for type PB/PC NPCs if facility leg end.
- eee/kkk = Optional, last channel of continuous range to be connected.
- <npc No.2> = TO-side identification; <npc No. 1>.
- fmd,tmd = Designators for the FROM- and TO-side modes; use BBL for bridge end of backbone, BRD for bridge end of tributary, and LEG for FTU NPC end.
- <tc> = Optional, trunk conditioning. If entered, does not have to be same for each leg, but TRSP,IW-X-nn form must be used. If omitted, the default TRSP,IW-X-FF applies.
- NAM = No A-law to μ -law.
The A-law to μ -law and μ -law to A-law code translators on the E1 type NPC are disabled.
- RDLD = Optional, designates special service.
- CUS = Optional, designates customer control circuit.
- INCL = Optional, removes previous CUS channel designation.
- NORM|TERM = Selects either normal (NORM), unterminated (default) connections or preservice, terminated (TERM) connections.
- PRIOUT = Optional; to give priority to associated output message by placing it on the top of the output message queue.

2. Enter cross-connect command for segment of multipoint circuit. If <tc> field is required for DS1 connection, see Figure 5.5-1 for details.

⇒ NOTE:
TERM can be added to the command to provide preservice terminated state.

⇒ NOTE:
If command line runs over line length for your screen, you can break the line with a backslash and continue the command on the next line.

⇒ NOTE:
If NOBBL appears in completion message, it indicates that the broadcast backbone connection has not yet been entered.

<tc> = TRSP,IW-X-nn
Default = TRSP,IW-X-FF

Figure 5.5-1. Construction of TRSP Trunk Conditioning

3. Repeat the procedure to connect remaining segments to the bridge.
4. To see all conference legs, enter:

RTRV-CRS-T0::<npc No.>-ddd::T0;

Where: <npc No.>ddd = NPC number of virtual NPC and "ddd" is conference number.

**64-kb/s Signals: Enter Change Cross-Connect
Command**

5.6

When to Use

Use this procedure to change the termination state. Command options allow changing the state of all the bridge terminations or all except the one named in the NOT field.

**Related
Information**

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure to change the termination state.

1. Enter the following command:

```
ED-PRMTR-T0:[xy]:<npc No.1>-ddd[&&-eee],<npc No.2>-jjj[&&-  
kkk]:[ww]:[INCL]:{TERM|RLS}{F/T/B/L/G/A}[:NOT-<npc No.3>-vvv];  
CHG-TL-T0:[xy]::[ww]:kk:TERM{F/T/B/L/G/A}[:NOT-<npc  
No.3>-vvv];
```

Where:

- <npc No.1> = NPC number on FROM side, extended (for example, 001) or hierarchical (for example, 01-1-01).
- <npc No.2> = NPC number on TO side. See <npc No.1>.
- ddd/jjj = Channel number on NPC.
- eee/kkk = Optional, last channel of range.
- TERM|RLS = Desired state, (TERM) terminated or released on circuit as follows:
 - F (FROM side)
 - T (TO side)
 - B (Both)
 - G (all legs toward bridge)
 - L (all legs toward facilities)
 - A (all legs in both directions)also see "NOT-<npc No.3>-vvv" below.
- NOT-<npc No.3>-vvv = One leg specified that is NOT to be changed with all others.
- kk = Testport number (01-96).
- INCL = Optional, needed if channel in command is red special service circuit or a CUS circuit.



NOTE:

The termination state or TLP (transmission level point) of a conference bridge circuit cannot be changed using the above command if the T or F side was previously designated as NTR (no transmit) in TLA command.

2. To change to conference bridge parameters, enter the following command:

```
ED-PRMTR-T0:[:<npc No.1>-ddd,<npc No.2>-jjj]::[INCL]:  
[TLP-snn-smm,NG-nn,ES-ee];
```


Where:

- <npc No.1> = NPC number on FROM side, extended (for example, 001) or hierarchical (for example, 01-1-01).
- <npc No.2> = NPC number on TO side. See <npc No.1>.
- ddd/jjj = Channel number on NPC.
- INCL = Optional, needed if channel in command is red special service circuit or a CUS circuit.
- TLP (snn,smm) = Signal level adjustment, "snn" is the input level and "smm" is output level; s = the sign (+ or -). Range for both is -9.0 to +8.8 in 0.2 dB steps (entered as whole No. -90 to +88).
- NG nn = Noise Guard Adjustment in dB (00, 06, 12, or 18).
- ES ee = Echo Suppression in dB (00, 06, 12, or 18).



NOTE:

To make a change, the DMB bridge side of the conference must be entered in the <npc No.2> field of the command.

3. Check completion message for required changes; note the NEW STATE field in the message. The presence of RNG in the termination change message indicates that the states in the range of circuits changed may differ. The RDLD/CUS word will occur if special service circuits were changed.
-

64-kb/s Signals: Disconnect Cross-Connected Circuit

5.7

When to Use

Use this procedure to disconnect a cross-connected DS0 circuit.

Related Information

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure to disconnect a cross-connected circuit.

1. Familiarize yourself with the disconnect circuit command as follows:

```
{DISC-CRS|CRS1|BDCST}-T0:<npc No.1>-ddd[&&-eee],\
<npc No.2>-jjj [&&-kkk][&<npc No.3>-nnn...]::\
[INCL]:[OOS][,DCC][,CONV]:[PRIOUT];
```

Where:

CRS	=	To disconnect 2-way CONN CRS circuit;
CRS1	=	To disconnect 1-way CONN CRS1 circuit; and
BDCST	=	To disconnect broadcast circuit.
<npc No.1>	=	NPC number on one side (FROM); either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
ddd	=	Channel number (1 through 30 for PB-type NPC.)
eee	=	Optional, to name last channel of range.
<npc No.2>	=	NPC number on other side (TO); see FROM side.
jjj[kkk]	=	Channel number or optional range of channels on NPC.
<npc No.3>-nnn	=	NPC number and first channel on other (up to 8 total) tributaries to be disconnected.
CONV	=	Optional for BDCST only; entered with next-to-last disconnection to convert the remaining circuit to 2-way CONN circuit.
INCL	=	Optional, to allow disconnection of circuit with RDLD or CUS designation. The CUS stays with the circuit and NPC and requires use of INCL when reassigned.
OOS	=	Optional, to disconnect circuits when NPC is out-of-service.
DCC	=	Optional, to retain previous connection <tc> code instead of NPC not-connected code; not for broadcast.
PRIOUT	=	Optional; to give priority to associated output message by placing it on the top of the output message queue.

2. If you are going to use the BDCST command, consider the following comments:

- To disconnect up to eight tributaries at one time, add a listing of the NPCs in the form "<npc No.3>-nnn<npc No.4>-ttt..." where each NPC and the first channel of range is listed with ampersand. The optional listing goes in the field after the "<npc No.2>-jjj" in the command.
 - When using individual DISC commands for each tributary, the full tributary (one with return path) must be disconnected last.
 - The CONV option causes the broadcast side and final tributary to be connected as a 2-way circuit.
 - When using the range and CONV options, the one tributary not included in the range becomes part of the 2-way circuit.
3. If you need to check for RDLD or CUS channel designations, enter one of the following commands:
- For specific channel(s):
- RTRV-PRMTR-T0: :<npc No.>-ddd[&&-eee] : :MARK;**
- For NPC numbers:
- RTRV-PRMTR-T1: :<npc No.>[&&[&]-<range>] : :MARK;**
4. Enter the appropriate disconnect command. For 1-way circuits, the sides must be entered like the CONN-CRS1 or NOMTH (no match) denial will result; you may need to use **RTRV-PRMTR-T0: : **
<npc No. 1>-ddd : :FROM; to find the sides of a 1-way connection.

**NOTE:**

If CUS appears in the completion message, it indicates that the CUS designation remains with the circuit and NPC until INCL keyword is used in subsequent cross-connect or remove command.

5. If a multipoint circuit (conference or broadcast) was disconnected, check the output message for additional information given as follows: MPDIS indicates that bridge has been fully disconnected; NOBBL indicates that there is no backbone leg now; and BRDIS indicates that the BDCST has been fully disconnected, last tributary disconnected.
6. If additional legs of a multipoint circuit must be disconnected, repeat the procedure as needed.

**Clear-2 Mb/s Signals: Two-Point,
Two-Way or One-Way Circuit**

5.8

When to Use

Use this procedure to cross-connect a clear-channel, two-point, two-way or one-way circuit.

**Related
Information**

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure to cross-connect a two-point, two-way or one-way circuit.

1. Familiarize yourself with the commands shown below; the **CRS** is for a 2-way connection and the **CRS1** is for a 1-way connection.

```
CONN-CRS-T1::<npc No.1>,<npc No.2>:[RDLD]\  
[, {CUS|INCL}][:{NORM|TERM},{NORM|TERM}];\  
CONN-CRS1-T1:[xy]:<npc No.1>,<npc No.2>:[ww]:[RDLD]\  
[, {CUS|INCL}][:TERM];
```

Where:

- CRS/CRS1 = **CRS** for 2-way; **CRS1** for 1-way.
- <npc No.1> = NPC number of one side (FROM), either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <npc No.2> = NPC number of one side (TO), either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- RDLD = Optional; to designate red special service circuit.
- CUS = Optional; to designate customer controlled channels.
- INCL = Optional; to remove previous CUS channel designation.
- NORM|TERM = To specify unterminated, normal (NORM, default) or terminated (TERM), preservice connection.

2. Obtain information needed for command from circuit layout information.
 3. Enter cross-connect command. If command line runs over line length for your screen, you can break the line with a backslash and continue the command on the next line.
-

Clear-2 Mb/s Signals: Broadcast Circuit

5.9

When to Use

This section shows the commands for establishing clear-channel, broadcast circuits through the cross-connect network. Up to eight tributaries can be connected to the broadcast leg at one time by listing them in the command. Unless the looped (LPD) or no transmit on return (NTR) keywords are used, the DACS II will designate the first tributary that is entered as the full tributary which is the only one that returns transmission to the broadcast leg. This return path can be changed using the appropriate command described later. Two-way circuits can be changed to broadcast circuits by using the convert (CONV) option. With no options, the circuit is set up as a two-way broadcast with a full tributary.

Related Information

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure to establish a broadcast circuit.

1. Familiarize yourself with the following commands. They can be used to set up the broadcast circuit or add one or more tributaries to an existing circuit.

Single Tributary:

```
CONN-BDCST-T1::<npc No.1>,<npc No.2>::\  
[RDLD][,{CUS|INCL}][:{NTR|LPD|CONV}];
```

Multiple Tributaries (up to 8):

```
CONN-BDCST-T1::<npc No.1>,<npc No.2>[&<npc No.3>]\  
[&<npc No.4>][&... ]::[RDLD][,{CUS|INCL}]\  
[:{NTR|LPD|CONV}];
```

Where:

<npc No.1>	=	Broadcast NPC number, either extended (for example [0]001) or hierarchical (for example, 01101).
<npc No.2>	=	NPC number of first tributary; see <npc No.1> .
<npc No.3>	=	NPC number of second tributary; see <npc No.1> .
<npc No.4>	=	NPC number of third tributary; see <npc No.1> .
NTR,LPD or CONV	=	Optional, to designate no return transmission (NTR), to loop the broadcast (LPD), or to convert (CONV) existing 2-way, 2-point connection to BDCST.
RDLD	=	Optional, to designate red special service.
CUS	=	Optional, to designate customer control service.
INCL	=	Needed to remove CUS or special service.

2. Enter the command with the required information.



NOTE:

If the command runs over length for your screen, you can break the line with a backslash and continue the command on the second line.

3. Repeat this procedure to include all tributaries in the broadcast circuit.
-

**Clear-2 Mb/s Signals: Switch Return
Leg of Broadcast Circuit**

5.10

When to Use Use this procedure to switch the return leg of a clear-channel, broadcast circuit.

Related Information For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure to switch the return leg of a broadcast circuit.

1. Familiarize yourself with the following command:

**CHG-RPATH-T1::<npc No.1>[&<npc
No.2>][&...]:[ww]:[:INCL];**

Where:

- <npc No.1> = New full tributary, either extended (for example [0]001) or hierarchical (for example, 01101).
- <npc No.2> = Full tributary to be switched; see <npc No.1>.
- INCL = Needed to switch a full tributary of a special service or customer controlled broadcast cross-connection.

2. Enter the command with the required information. If the command line runs over length for your screen, you can break the line with a backslash and continue the command on the second line.
-

Clear-2 Mb/s Signals: Change Termination State of Cross-Connection

5.11

When to Use

This section describes the command used to change the termination state of a cross-connected, clear-2 Mb/s NPC. This command can be used with a 2-way, 1-way, or broadcast cross-connection. This command can change the termination state of all legs of a broadcast circuit with the use of the TLA option. However, an option can be used to exclude one of the legs from being changed.

Related Information

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

This section describes the command used to change the termination state of a cross-connected, clear-2 Mb/s NPC.

1. Familiarize yourself with the following command:

```
ED-PRMTR-T1::<npc No.1>,<npc No.2>:[ww]:[INCL]:\  
{TERM|RLS}{F|T|B|A}[:NOT-<ncp No.3>];=
```

Where:

- <npc No.1> = FROM termination NPC, either extended (for example [0]001) or hierarchical (for example, 01101).
- <npc No.2> = TO termination NPC; see <npc No.1>.
- NOT = Used with the A option. Indicates which NPC of a broadcast circuit is not affected by the command.
- <npc No.3> = NPC not affected by this command (used with broadcast circuits); see <npc No.1>.
- INCL = Needed to change termination of a special service or customer controlled cross-connection.
- TERM or RLS = Desired state; terminated (TERM) or released (RLS) on circuit as follows:
 - F - towards the FROM side
 - T - towards the TO side
 - B - Both sides
 - A - All directions of a broadcast circuit
- INCL = Needed to change termination of a special service or customer controlled cross-connection.

2. Enter the command with the required information.



NOTE:

If the command runs over length for your screen, you can break the line with a backslash and continue the command on the second line.

**Clear-2 Mb/s Signals: Disconnect
Two-Point, Two-Way or One-Way
Circuits**

5.12

When to Use

This section describes the command used to disconnect two-point, two-way or one-way circuits.

**Related
Information**

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

This section describes the command used to disconnect two-point, two-way or one-way circuits.

1. Familiarize yourself with the command(s) as follows:

```
{DISC-CRS|CRS1}-T1::<npc No.1>,<npc No.2>::  
[INCL]:[OOS]:[PRIOUT];
```

Where:

CRS,CRS1	=	CRS to disconnect 2-way CONN CRS circuit; = CRS1 to disconnect 1-way CONN CRS1 circuit.
<npc No.1>	=	NPC number on one side (FROM); either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
<npc No.2>	=	NPC number on other side (TO); see FROM side.
INCL	=	Optional, to allow disconnect of circuit with RDLD or CUS designation. The CUS stays with the NPC even after the customer controlled circuit is disconnected. The NPC requires the use of INCL when reassigned, thus eliminating the CUS marking from the NPC
OOS	=	Optional, to disconnect circuits when NPC is out-of-service.
PRIOUT	=	Optional; to give priority to associated output message by placing it on the top of the output message queue.

2. To check for RDLD or CUS designations, enter the following command:

```
RTRV-PRMTR-T1::<npc No.>[&&[&]-<range>]::MARK;
```

3. Enter the appropriate disconnect command from Step 1.



NOTE:

For 1-way circuits, the sides must be entered like the CONN-CRS1 or NOMTH (no match) denial will result; you may need to use **RTRV-PRMTR-T0:[xyz]:<npc No.>-ddd:[ww]:FROM;** to find the sides of a 1-way connection.

Clear-2 Mb/s Signals: Disconnect Broadcast Circuits

5.13

When to Use	The disconnection of broadcast circuits can be done for up to eight tributaries. The NPCs can be in different units. Using the convert option (CONV), the broadcast circuit can also be converted to a two-point circuit by disconnecting all but the full tributary.
Before You Begin	To see a listing of the tributaries associated with a source NPC, enter RTRV-BDCST-T1::<npc No.1>:[ww]:FROM; , where <npc No.1> is the source NPC.
Related Information	For additional information, see Volume I, Chapter 5, <i>Cross-Connections and Disconnections</i> .

Instructions

This section describes the command used to disconnect broadcast circuits.

1. Familiarize yourself with the following commands:

Single Tributary:

DISC-BCAST-T1::<npc No.1>,<npc No.2>:
[ww]:[INCL]:[OOS][,CONV]; Multiple Tributaries:

DISC-BCAST-T1::<npc No.1>,<npc No.2>[&<npc No.3>]
[&...]:[ww]:[INCL]:[OOS][,CONV];

Where:

- <npc No.1> = Source (backbone) NPC, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <npc No.2> = Tributary to be disconnected; see <npc No.1>.
- <npc No.3> = Tributary to be disconnected; see <npc No.1>.
- OOS = Optional, to disconnect circuits when NPC is out-of-service.
- INCL = Optional, to allow disconnect of circuit with RDLD or CUS designation. The CUS stays with the NPC even after the customer controlled circuit is disconnected. The NPC requires the use of INCL when reassigned, thus eliminating the CUS marking from the NPC
- CONV = Optional, converts the circuit to a 2-way, 2-point circuit by disconnecting the indicated tributaries. This option will be denied if there are more than two tributaries remaining or no return path exists.



NOTE:

If the indicated tributary is a full tributary, it can be disconnected only when there are no other tributaries.

2. Before using the BDCST command, consider the following:
 - When using individual DISC commands for each tributary, the full tributary (one with return path) must be disconnected last.
 - The CONV option causes the broadcast side and final tributary to be connected as a 2-way circuit.
 - When using the range and CONV options, the one tributary not included in the range becomes part of the TO side of a 2-way circuit.
3. To check for RDLD or CUS designations, enter the following command:

RTRV-PRMTR-T0::<npc No.>[&&[&]-<range>]::MARK;

4. Enter the appropriate disconnect command from Step 1.



NOTE:

If CUS appears in the completion message, it indicates that the CUS designation remains with the circuit and NPC until INCL keyword is used in subsequent cross-connect or remove command.

5. If additional legs of a multipoint circuit must be disconnected, repeat the procedure as needed.
-

When to Use

Use this procedure to re-direct DS0 signals. The DS0 "roll" capability allows cross-connected DS0 signals to be redirected onto other (unmapped) DS0 channels with minimal service interruption. The ROLL command enables you to redirect one DS0 or a range of contiguous mapped DS0s within a E1 signal. The ROLL procedure will re-direct ALL cross-connections associated with the DS0 signal being rolled.

Before You Begin

These restrictions apply:

- Cross-connections and disconnections of facility terminating channels involved in a roll (between the Bridge and Cut steps) are denied.
 - Circuits under test/testports cannot be re-directed.
-

Related Information

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

The following procedure is for redirecting DS0 signals.

1. Bridge the DS0 signals using the command:

```
SW-BDCST-T0:[xy]:<npc No.1>ddd[&&-eee],<npc  
No.2>jjj[&&-kkk]:[ww]:[INCL];
```

Where:

- <npc No.1> = Old NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- ddd, jjj = Channel numbers for the beginning of a channel range.
- eee, kkk = Optional, channel numbers for the end of a channel range. (Three ampersands (&s) are required for hierarchical.)
- <npc No.2> = New NPC number. (See <npc No.1>.)
- INCL = Optional, used to force bridging of RDC or CUS channels

2. Redirect the DS0 signal using the command:

```
SW-ROLL-T0:[xy]:<npc No.1>ddd[&&-eee],<npc  
No.2>jjj[&&-kkk]:\  
[ww]:[INCL][:FRC][:OOS];
```

Where:

- <npc No.1> = Old NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- ddd, jjj = Channel numbers for the beginning of a channel range.
- eee, kkk = Optional, channel numbers for the end of a channel range. (Three ampersands (&s) are required for hierarchical.)
- <npc No.2> = New NPC number. (See <npc No.1>.)
- INCL = Optional, used to force roll of RDC or CUS channels (required for subrate).
- FRC = Optional, used to force a roll **TO** an NPC which is in PBA.
- OOS = Optional, used to force a roll **FROM** an NPC which is OOS.

**NOTE:**

The size of the range on the OLD and NEW NPC must match, but the starting channel numbers do not have to be identical. A range can not break up the channels in a BDCST or virtual circuit (i.e., all the channels of a BDCST leg must be within the channel range of the ROLL command).

**NOTE:**

If the OLD NPC contains a 32-channel cross-connect with the AIS option, the ROLL command must have a 32-channel range.

3. Disconnect the bridged circuits using the following command:

SW-DISC-T0:[xy]:<npc No.1>-ddd][&&-eee]:[ww]:[OOS];

Where:

<npc No.1> = Old NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

ddd = Channel numbers for the beginning of channel range.

eee = Optional, channel numbers for the end of channel range. (Three ampersands (&s) are required for hierarchical.)

OOS = Optional, used to disconnect an NPC that is OOS.

4. Verify that the redirection of DS0 signals has been successful using the following commands:

RTRV-ROLL-T0:[<xy>]:{NPC-<npc No.1>[&&-<range> |

ALL[,UNIT-[q]q]}[:ww];

RTRV-CRS-T1::<npc No.>[-<range>]::MAP;

**Re-Direct E1 Signals: Network
Element**

5.15

When to Use

Use this procedure for redirecting E1 signals to a network element.

**Related
Information**

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure for redirecting E1 signals to a network element:

1. Bridge the E1 signals using the command:

```
SW-BDCST-T1:[xy]:<npc No.1>ddd[&&-eee],<npc  
No.2>jjj[&&-kkk]:[ww]:[INCL];
```

Where:

- <npc No.1> = Old NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- ddd, jjj = Channel numbers for the beginning of a channel range.
- eee, kkk = Optional, channel numbers for the end of a channel range. (Three ampersands (&s) are required for hierarchical.)
- <npc No.2> = New NPC number. (See <npc No.1>.)
- INCL = Optional, used to force bridging of RDC or CUS channels.

2. Redirect the E1 signal using the command:

```
SW-ROLL-T1:[xy]:<npc No.1>ddd[&&-eee],<npc No.2>jjj[&&-  
kkk]:\  
[ww]:[INCL]:[FRC]:[OOS]:[TWAY];
```

Where:

- <npc No.1> = Old NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- ddd, jjj = Channel numbers for the beginning of a channel range.
- eee, kkk = Optional, channel numbers for the end of a channel range. (Three ampersands (&s) are required for hierarchical.)
- <npc No.2> = New NPC number. (See <npc No.1>.)
- TWAY = Optional, used for a two-way roll (bridge and roll combined).
- INCL = Optional, used to force roll of RDC or CUS channels.
- FRC = Optional, used to force a roll **TO** an NPC which is in PBA.
- OOS = Optional, used to force a roll **FROM** an NPC which is OOS.

3. Remove the bridged circuits using the following command:

SW-DISC-T1:[xy]:<npc No.1>:[ww]:[OOS];

Where:

<npc No.1> = Old NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

OOS = Optional, used to disconnect an NPC that is OOS.

4. Verify that the redirection of E1 signals has been successful using the following commands:

**RTRV-ROLL-T1:[<xy>]:{NPC-<npc No.1>[&&-<range> |
ALL[,UNIT-[q]q]}[:w];
RTRV-CRS-T1::MAP;**

Re-Direct E1 Signals: Non-Network Element

5.16

When to Use Use this procedure to redirect an E1 signal using the DSX-1 patch panel.

**Related
Information** For additional information, see Volume I, Chapter 5, *Cross-Connections and
Disconnections*.

Instructions

Use this procedure to redirect an E1 signal using the DSX-1 patch panel.

1. Patch the bridging repeater from the incoming facility monitor jack to <npc No.2>.
2. Provision the alternate NPC using the following commands:

```
COPY-T1:[<xy>]:<npc No.1>,<npc No.2>[&&-<range>]:[ww];  
RST-EQPT:[<xy>]:NPC-<npc No.2>[&&-<range>]:[ww]:[SIDE-  
s];
```

Where:

<npc No.1> = Source NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
 <npc No.2> = Destination NPC number. (See <npc No.1>.)
 <range> = Optional, NPC range. (See <npc No.1>.)

3. Redirect the E1 signal using the following command:

```
SW-ROLL-T1:[xy]:<npc No.1>ddd[&&-eee],<npc No.2>jjj[&&-  
kkk]:[ww]:\  
[INCL]:[FRC]:[OOS]:[TWAY];
```

Where:

<npc No.1> = Old NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
 ddd, jjj = Channel numbers for the beginning of a channel range.
 eee, kkk = Optional, channel numbers for the end of a channel range. (Three ampersands (&s) are required for hierarchical.)
 <npc No.2> = New NPC number. (See <npc No.1>.)
 TWAY = Optional, used for two-way roll (bridge and roll combined).
 INCL = Optional, used to force roll of RDC or CUS channels.
 FRC = Optional, used to force roll **TO** an NPC that is in PBA.
 OOS = Optional, used to force roll **FROM** an NPC that is OOS.

4. Patch <npc No.2> XMIT to facility input.
5. Remove <npc No.1> from service so it's digroup card can be removed without alarming using the following command:

RMV-EQPT:[<xy>]:NPC-<npc No.1>[&&-<range>]:[ww]:[SIDE-s]:[INCL];

Where:

- <npc No.1> = Old NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, NPC range. (See <npc No.1>.)
- SIDE s = Optional, side of duplicated DSPU circuit to be removed;
s = 0 or 1.
- INCL = Optional, used to remove RDC or CUS channels (required for substrate).

6. Insert terminator plug into <npc No.1> facility OUT jack.
7. Replace the digroup card and remove the terminator plug from <npc No.1> jack.
8. Restore <npc No.1> to service using the following command:

RST-EQPT:[<xy>]:NPC-<npc No.1>[&&-<range>]:[ww]:[SIDE-s];

Where:

- <npc No.1> = Old NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, NPC range. (See <npc No.1>.)
- SIDE s = Optional, side of duplicated DSPU circuit to be restored;
s = 0 or 1.

9. Redirect service back to the original NPC using the following command:

SW-ROLL-T1:[xy]:<npc No.2>ddd[&&-eee],<npc No.1>jjj[&&-kkk]:\ [ww]:[INCL]:[FRC]:[OOS]:[TWAY];

Where:

- <npc No.2> = Old NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- ddd, jjj = Channel numbers for the beginning of a channel range.
- eee, kkk = Optional, channel numbers for the end of a channel range. (Three ampersands (&s) are required for hierarchical.)
- <npc No.1> = New NPC number. (See <npc No.2>.)

- <npc No.2> = Old NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- TWAY = Optional, used for two-way roll (bridge and roll combined).
- INCL = Optional, used to force roll of RDC or CUS channels.
- FRC = Optional, used to force roll **TO** an NPC that is in PBA.
- OOS = Optional, used to force roll **FROM** an NPC that is OOS.

10. Disconnect <npc No.2> using the following command:

SW-DISC-T1:[xy]:[s]abc:[ww]:[OOS];

Where:

- <npc No.2> = NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- OOS = Optional, used to disconnect an NPC that is OOS.

11. Remove <npc No.2> from service using the following command:

RMV-EQPT:[<xy>]:NPC-<npc No.2>[&&-<range>]:[ww]:[SIDE-s]:[INCL];

Where:

- <npc No.2> = NPC number. Can be either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, NPC range. (See <npc No.2>.)
- SIDE s = Optional, side of duplicated DSPU circuit to be removed; s = 0 or 1.
- INCL = Optional, used to remove RDC or CUS channels (required for substrate).

12. Remove the bridging repeater.
-

Timeslot 0: Two-Way Cross-Connections

5.17

When to Use

Use this procedure to establish a two-way cross-connection between a TS0 timeslot and a non-TS0 timeslot.

The cross-connection can be set up in one of two modes:

- Mode 1:** The frame word is converted to a Pseudo Frame Word (PFW) in both directions of the connection to eliminate the possibility of false framing.
- Mode 2:** The frame word is not cross-connected at all. Instead, the content of the Non-Frame Word (NFW) is repeated in the frame word position.

Related Information

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure to establish a two-way cross-connection between a TS0 timeslot and a non-TS0 timeslot.

1. Familiarize yourself with the following command:

```
CONN-CRS-T0::<npc No.1>-<chan No.1>,  
<npc No.2>-<chan No.2>:[ww]:\  
[, {PFW-<frame word 1>&<frame word 2>|NFW}]!
```

Where:

- <npc No.1> = NPC number of one side (FROM), either extended (for example, [0]001) or hierarchical (for example, 01-1-01)
- <npc No.2> = NPC number of the other side (TO); see <npc No.1>.
- <chan No.1> = Channel number of <npc No.1>; 000-030 for CAS type, 000-031 for NSA type.
- <chan No.2> = Channel number of <npc No.2>; 000-030 for CAS type, 000-031 for NSA type.
- PFW = Pseudo Frame Word; used to select Mode 1 of TS0 cross-connection.
- <frame word 1> = Value of PFW; replaces bits 2-8 of the Frame Alignment Signal of the frame word being transmitted from <npc No.2> to <npc No.1>.
- <frame word 2> = Value of PFW; replaces bits 2-8 of the Frame Alignment Signal of the frame word being transmitted from <npc No.1> to <npc No.2>.
- NFW = Non-Frame Word; used to select Mode 2 of TS0 cross-connection



NOTE:

Bit 2 of TS0 in a 2 Mbit/s signal is used to distinguish the frame word from the non-frame word. It must always be a '0' in the frame word and a '1' in the non-frame word. When defining the PFW, be sure it can be distinguished from the NFW.

If no mode is selected (PFW or NFW) in the command, the mode defaults to NFW.

**NOTE:**

One of the channel numbers specified (<chan No.1> or <chan No.2>) must be channel 000 (TS0), while the other channel number must be a number other than 000 (non-TS0).

2. Enter the command with the appropriate information.
-

When to Use	Use this procedure to establish a broadcast cross-connection between Time Slot 0 (TS0) and non-TS0 facilities.
Before You Begin	The FROM NPC containing the TS0 must be grown as a PAxyz or THxyz NPC type. The TOX NPCs containing the non-TS0 tributaries must be grown as PAxyz, PBxyz, PCxyz, or THxyz NPC types.
Related Information	For additional information, see Volume I, Chapter 5, <i>Cross-Connections and Disconnections</i> .

Instructions

Use this procedure to establish a broadcast cross-connection between Time Slot 0 (TS0) and non-TS0 facilities. This command establishes a broadcast for a TS0 channel of a source (FROM) NPC to up to 8 non-TS0 tributary channels of the TO NPC. A conference may have any number of tributaries, depending on the frame configuration. Additional tributaries can be added to the broadcast by using subsequent CONN-BDCST-T0 commands.

1. Enter the following command:

CONN-BDCST-T0::<npc No. 1>,<npc No. 2>-jjj [&<npc No. 3>-nnn&..];

Where:

<npc No.1> = FROM NPC (source) number, either extended (for example, [0]001) or hierarchical (for example, 01101).

000 = TS0; Channel 000

<npc No.2> = TO NPC (tributary) number, either extended (for example, [0]001) or hierarchical (for example, 01101).

jjj = TO channel number

001-030 for CEPT type NPCs grown as CAS

001-031 for CEPT type NPCs grown as NSA

<npc No.3> = TO NPC (tributary) number, either extended (for example, [0]001) or hierarchical (for example, 01101).

nnn = TO channel number

001-030 for CEPT type NPCs grown as CAS

001-031 for CEPT type NPCs grown as NSA

When to Use

Use this procedure to do any of the following:

- To enable or disable monitoring of the national and international bits in TS0
- To change the spare bits in the non-frame word of TS0. These bits may be forced to "0", "1", or pass-through states before they are transmitted. For PA type NPCs, these bits may be forced to the inverted state before transmission
- To change the TSO bits that are not part of the Frame Alignment Signal. These bits can be cross-connected transparently or be subject to modification.

Related Information

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure to change timeslot 0.

1. To start or stop monitoring of the national and international bits in TS0 without removing the NPC from service, follow these steps:

- a. Familiarize yourself with the following command:

**ED-PRMTR-EQPT::NPC-<npc No.1>[&&<npv
No.n>]:[ww]:TS0M-abcdefgh;**

Where:

<npc No.1> = number of NPC to monitor, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

<npc No.n> = number of last NPC in range; see <npc No.1>.

abcdefgh = Timeslot 0 monitor bits; ab = spare international bits
Si, c = remote alarm indication, defgh = spare national bits, S4 through S8 in NFW. Input values are:
0: do not monitor
1: monitor

- b. To view the TS0 bit provisioned for monitoring on an NPC or range of NPCs, enter the following command:

**RTRV-STATE-EQPT::NPC-<npc No.1>[&&-<npc
No.n>]:[ww]:TS0M;**

Where:

<npc No.1> = number of NPC to view, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

<npc No.n> = number of last NPC in range; see <npc No.1>.

- c. Enter the command with the appropriate information.

2. To change the spare bits in the non-frame word of TS0, follow these steps:
 - a. Familiarize yourself with the following command:

ED-PRMTR-EQPT::NPC-<npc No.1>[&&<npc No.n>]:[ww]:TS0-abcdefgh;

Where:

- <npc No.1> = number of NPC containing TS0, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <npc No.n> = number of last NPC in range; see <npc No.1>.
- abcdefgh = Spare bits in TS0; ab=spare international bits (Si);
c=remote alarm indication, defgh=spare national bits, S4 through S8 in NFW. Input values are:
0: set bit to "0"
1: set bit to "1"
P: pass bit through unchanged
V: pass bit through inverted (PA type only)
-: do not change current setting

- b. To request a display of the provisioned transmit or of the actual received spare international, national, and remote alarm indication (A) bits in TS0 of an NPC or range of NPCs, enter the following command:

RTRV-STATE-EQPT::NPC-<npc No.1>[&&-<npc No.n>]:[ww]:TS0-s;

Where:

- <npc No.1> = number of NPC to view, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <npc No.n> = number of last NPC in range; see <npc No.1>.
- s = Direction of transmission for TS0 bits:
T: provisioned TS0 values
R: received TS0 values

- c. Enter the command with the appropriate information.

3. To change the TS0 bits that are not part of the Frame alignment Signal (bit 1 of the Frame Word and bits 1-8 of the Non-Frame word). These bits can be cross-connected transparently or be subject to modification.

- a. Familiarize yourself with the following command:

**ED-PRMTR-EQPT::NPC-<npc No.1>[&&<npc
No.n>]:[ww]:NFS-abcdefghi;**

Where:

<npc No.1> = number of NPC containing TS0, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

<npc No.n> = number of last NPC in range; see <npc No.1>.

abcdefghi = Spare bits in TS0; a=bit 1 of Frame Word; bc=bits 1 and 2 of Non-Frame Word, d=remote alarm indication, efghi=bits 4 through 8 of Non-Frame Word. Input values are:

0: set bit to "0"

1: set bit to "1"

P: pass bit through unchanged

V: pass bit through inverted (PA type only)

-: do not change current setting

- b. To view the current Non-Frame Word settings, enter the following command:

**RTRV-STATE-EQPT::NPC-<npc No.1>[&&-<npc
No.n>]:[ww]:NFS;**

Where:

<npc No.1> = number of NPC to view, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

<npc No.n> = number of last NPC in range; see <npc No.1>.

- c. Enter the command with the appropriate information.
-

**Timeslot 0: Disconnect Two-way
TS0 Circuit**

5.20

When to Use Use this procedure to disconnect a two-way two-point TS0 cross-connection.

Related Information For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

This command disconnects a two-way, two-point TS0 cross-connect circuit.

1. Enter:

```
DISC-CRS-T0::<npc No. 1>-ddd,<npc No. 2>-jjj::  
[INCL]:[OOS][,DCC]:[PRIOUT];
```

Where:

<npc No.1> = FROM NPC number, either extended (for example, [0]001) or hierarchical (for example, 01101).

ddd = Channel number for FROM NPC.

<npc No.2> = TO NPC number, either extended (for example, [0]001) or hierarchical (for example, 01101).

jjj = Channel number for TO NPC.

000-023 for North American NPCs

000-030 for CEPT type NPCs grown as CAS

000-031 for CEPT type NPCs grown as NSA

One of the channel numbers specified (ddd or jjj) must be channel 000 (TS0), while the other channel number (jjj or ddd) must be a number other than channel 000 (non-TS0).

OOS = Out-of-Service.

DCC = Disconnect code.

INCL = Inclusive.

PRIOUT = Priority Output.

**Timeslot 0: Disconnect Broadcast
Circuit**

5.21

When to Use

Use this procedure to disconnect up to eight tributary legs from the source of a broadcast TS0 cross-connection.

**Related
Information**

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure to disconnect up to eight tributary legs from the source of a broadcast TS0 cross-connection.

1. Enter

**DISC-BDCST-T0::<npc No. 1>-ddd[&&-eee],<npc No. 2>-
jjj\\ [&<npc No. 3>-nnn&..]::[INCL]:[OOS][,DCC][,CONV];**
Where:

<npc No.1> = FROM NPC (source) number, either extended (for example, [0]001) or hierarchical (for example, 01101).
000 = TS0; Channel 000
eee = Optional; the width of the conference backbone (if any).
<npc No.2> = TO NPC (tributary) number, either extended (for example, [0]001) or hierarchical (for example, 01101).
jjj = TO channel number

000-030 for CEPT type NPCs grown as CAS
000-031 for CEPT type NPCs grown as NSA

<npc No.3> = TO NPC (tributary) number, either extended (for example, [0]001) or hierarchical (for example, 01101).
nnn = TO channel number

000-030 for CEPT type NPCs grown as CAS
000-031 for CEPT type NPCs grown as NSA

CONV = Convert; given to disconnect the one-way tributaries from the broadcast circuit and convert the circuit to a two-way, two-point circuit.
OOS = Out-of-Service.
DCC = Disconnect code.
INCL = Inclusive.

**DSP Application: Cross-Connect,
Change or Disconnect DSP
Application Connections**

5.22

When to Use

Use this procedure if the application can not disconnect a circuit or a range of circuits between:

- A DSP NPC and a facility terminating NPC
- Two DSP NPCs

**Related
Information**

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure if the application can not disconnect a circuit or a range of circuits between:

- A DSP NPC and a facility terminating NPC
- Two DSP NPCs

1. Enter

DISC-DSP-T0::<npc No.>-ddd[&&-eee],[v]ghi-jjj[&&-kkk]:;

Where:

<npc No.> = FROM NPC number, either extended (for example, [0]001) or hierarchical (for example, 01101).

[v]ghi = TO NPC number, either extended (for example, [0]001) or hierarchical (for example, 01101).

ddd, jjj = Channel numbers.

eee, kkk = Channel numbers, denoting the end of a range

001-024 - DE, DA, TE, and TA NPC types

000-031 - PA, PB, PC, and TH NPC types

001-064 - SD NPC types (except numbers divisible by 4).

When to Use

Use this procedure to report on the application-to-application cross-connections for either:

- An individual application NPC.
- All application NPCs on the frame.

**Related
information**

For additional information, see Volume I, Chapter 5, *Cross-Connections and Disconnections*.

Instructions

Use this procedure to report on the application-to-application cross-connects for either:

- an individual application NPC
- all application NPCs on the frame

1. Enter the following command:

RTVR-CRS-APPL::::{<npc No.>|ALL};

Where:

<npc No.> =	The NPC number of an application; either extended (for example, [0]001) or hierarchical (for example, 01101). This limits the output to only those application-to-application cross-connections that include the application with this NPC number.
ALL =	The command reports on all application-to-application cross-connection in the frame.

The output command reports by pseudo channel number the actual application NPC numbers and associated channel numbers that are cross-connected to each other. If only one of the two required cross-connect requests has been received, then the second application channel number is shown as dashes. No actual cross-connect exists when the second channel number is not shown. See command I.51201 in the Command and Message manual for more detail.

Contents

■ Add/Delete User	GT 6.1-1
■ Recover Password for User DAX	GT 6.2-1
■ Reinstate User with Forgotten Password	GT 6.3-1
■ Log Off Another User	GT 6.4-1
■ Change Input Command Priority and Restricted Maintenance Option	GT 6.5-1
■ Change Message Language	GT 6.6-1
■ Change NPC Addressing	GT 6.7-1
■ Change Output Message Screening	GT 6.8-1
■ Change Macro/Map Storage Space	GT 6.9-1
■ Change Link Removal Permission Option	GT 6.10-1
■ Log In to the System	GT 6.11-1
■ Log Off the System	GT 6.12-1
■ Change Password	GT 6.13-1

(Continued on next page)

■ Create Alternate Map	GT 6.14-1
■ Create Alternate Map Using the Picture Option	GT 6.15-1
■ Edit an Existing Alternate/Reference Map	GT 6.16-1
■ Activate Alternate Map Package	GT 6.17-1
■ Query User Map Information	GT 6.18-1
■ Delete Alternate Map from System	GT 6.19-1
■ Create/Edit Macro	GT 6.20-1
■ Execute Macro Package	GT 6.21-1
■ Query User Macro Information	GT 6.22-1
■ Delete Macro from System	GT 6.23-1
■ Setting the Message Log Feature	GT 6.24-1
■ Displaying Message Log Numbers	GT 6.25-1
■ Retrieving Messages from the Message Log	GT 6.26-1
■ Clearing the Message Log	GT 6.27-1
■ Setting the Alarm Severity Feature	GT 6.28-1
■ Changing the Alarm Severity of a Shelf Alarm	GT 6.29-1
■ Displaying Shelf Alarm Severity Setting	GT 6.30-1
■ Changing Facility Alarm Severity	GT 6.31-1
■ Displaying Facility Alarm Severity	GT 6.32-1
■ Displaying Alarm Severity Status	GT 6.33-1
■ Setting the Intervention Level Feature	GT 6.34-1
■ Changing Intervention Levels	GT 6.35-1
■ Displaying Intervention Level Values	GT 6.36-1
■ Displaying Intervention Level Status	GT 6.37-1

When to Use	Use this procedure to add or delete users. After a user is added to the data base, the user can log in on any designated in-service link.

Before You Begin	You must be logged in as frame administrator (user DAX) to perform this task.

Related Information	For related information, refer to Volume I, Chapter 6, <i>Administration</i> .

Instructions

Use the following procedure to add or delete a user.

1. Which system administration activity are you going to perform?
 - If **ADD NEW USER**, then continue with Step 2.
 - If **DELETE USER/LINK**, then proceed to Step 7.
2. Note the following considerations concerning the assignment of initial user passwords. A password must have 6 characters: 2 must be alphabetic and 1 must be a number (except for temporary password for new user, any special character can be used instead of a number).
3. Enter the appropriate command to add the user:
 - To add a new user on an asynchronous link, enter:
CRTE-LGN::::<user id>,NEW;
Where: <user id> = User identification of 2 to 8 alphabetic characters.

When **PASSWD** prompt is received, enter a temporary password.
Reenter as instructed; the password will not be echoed.

Synchronous Link:

To add a new user on a synchronous link, enter:

CRTE-LGN:::<user id>,<pswd>,NEW;

Where: <pswd> = Temporary password for user.

4. Check to see if the output screening options need to be changed.
 - If the output screening options need to be changed for the link, continue with Step 5.
 - If the output screening options do not need to be changed, check the output message to verify that the correct information was entered. Notify the user that he/she can now log in and change the temporary password to a personal one. You have completed the procedure to add a user.
5. Enter the following command:

**SET-PRVG-{USER|TERM}:::<user id>|<link No.>
:SCR-n[,GR-a&-b&-c&-d&-e&-f][:MCOFF|MCON];**

Where:

USER/TERM = Selects either user or link identification. Include <user id> (2 to 8 alphabetic characters) for USER option or include link No. (1 through 6) and virtual circuit (01 through 16) for synchronous link.

n = Screening option 1 through 5.

GR = Optional; field used with SCR 3 or 4 to specify the command groups; enter a "1" for each group to be enabled and a "0" for each group to be disabled.

MCOFF|MCON = Optional to disable (MCOFF) component command completion messages or to enable (MCON) completion outputs again. DENY messages cannot be disabled.

6. Check the output message to verify that the correct information was entered. Notify the user that he/she can now log in and change the temporary password to a personal one. You have completed the procedure to add a user.
7. From office records, determine the user identification for the user to be deleted. If needed, enter the following to determine if the user owns any macros and/or maps:

RTRV-PRMTR-{MACRO|MAP}:::ATTR:[{<user id>|ALL}]

Where: <user id> = User identification (2 to 8 alphabetic characters).

**NOTE:**

Any macro or map files that the user has must also be removed before the user can be deleted from the system (see *Delete Alternate Map From System* and *Delete Macro From System*).

8. Enter **DLT-LGN:::<user id>;** to prevent user identified by **id** (2 to 8 alphabetic characters) from having login access to the frame. Check the output message to verify that the correct information was entered.
-

When to Use

Use this procedure to recover the default password for user DAX.

**Related
Information**

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

Use the following procedure to recover the original (default) user DAX password:

1. Locate and obtain the DACS II PASSWORD RECOVERY CARD (Version 1).

**NOTE:**

This card is a unique flash card that contains just enough information to move the default password to RAM memory.

2. If SMEM is in service, enter the following command:

RMV-EQPT::SMEM::;

3. Test the ESD grounding strap at an ESD station.
4. At the frame, place the ESD grounding strap on your wrist and physically remove the SMEM card from the CPU2.
5. Insert the PASSWORD RECOVERY CARD into the SMEM slot.
6. At the DACS II terminal, enter the following command to move the default password into the frame's RAM memory.

RST-PASSWD;

7. Enter the following command:

RMV-EQPT::SMEM::;

8. After the command completes successfully, at the frame place the ESD grounding strap on your wrist and remove the PASSWORD RECOVERY CARD.
9. Reinsert the SMEM card (removed earlier) into the SMEM slot and enter the following command:

RST-EQPT::SMEM:::BKGRND;

10. Return the PASSWORD RECOVERY CARD to its proper location.
 11. Change the default password to the desired password or leave the default in and have the administrator (or responsible person) change it.
-

Reinstate User with Forgotten Password

6.3

When to Use

Use this procedure to assign a temporary password to a user who has forgotten their password.

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

To reinstate a user that has forgotten their password, do the following:

1. Assign a temporary password by entering the appropriate command:

Asynchronous Links (Snider Protocol):

CRTE-LGN::::<user id>;

Message prompts will instruct you to enter the temporary password.

Synchronous Links (X.25 Protocol):

CRTE-LGN::::<user id>[,<user pswd>];

Where:

<user pswd>	=	Only for synchronous links, to enter temporary password in the command. Passwords must have 6 characters: 2 are alphabetic and 1 is a number or special character.
<user id>	=	User Identification (2 to 8 alphabetic characters).

2. After assigning the temporary password, the user can assign his/her personal password.
-

When to Use	Use this procedure to log off another user.
Before you Begin	To forcibly log off another user, you must be logged in as the frame administrator and logged in on a different link.
Related Information	For related information, refer to Volume I, Chapter 6, <i>Administration</i> .

Instructions

1. Enter the following command to log off another user from the system:

LGT-{USER|TERM}::::{<user id>|<link No.>};

Where:

USER/TERM = Selects whether user ID or link number will be specified. Only the frame administrator can use the LINK option to log off a user from another link.

<user id> = User identification (2 to 8 alphabetic characters).

<link No.> = Physical link number (1 through 6) and virtual circuit (mm = 01 through 16) for synchronous link.



NOTE:

When trying to log off other users, DACS II does security level checking first. If you are not logged in as frame administrator, you will get a "D7 cannot execute privileged command" denial message.

Change Input Command Priority and Restricted Maintenance Option

6.5

When to Use	Use this procedure to change input command priorities for the user or the link.

Related Information	For related information, refer to Volume I, Chapter 6, <i>Administration</i> .

Instructions

To change the input command priority for a user or a link, follow these steps:

1. To see the present parameters for any or all links or users, enter the following command and read the **LEV** numbers and the restricted maintenance option from the output:

RTRV-PRVG-{USER|TERM}:::{<user id>|j[mm][&&p[nn]]|ALL}

2. Enter the following command to change input command priorities and/or the restricted maintenance option:

SET-PRVG-{USER|TERM}:::{<user id>|<link No.>[, INCL]}:\n::[LEV-a&-b&-c&-d&-e&-f][:{RMON|RMOFF}];

Where:

USER TERM	=	Selects whether user or link identification will be used in command.
<user id>	=	User identification (2 to 8 alphabetic characters).
<link No.>	=	Physical link number (1 through 6) and virtual circuit (mm = 01 through 16) for synchronous link (links 5 and 6).
p[nn]	=	Range of links or synchronous virtual circuits.
INCL	=	Optional, for links 5 and 6. Specifies that all provisioning data (including RLK) of the command is applied to all virtual circuits; an individual virtual circuit (mm) cannot be entered when INCL is used.
LEV Field	=	To change the priority of the command groupings; enter priority level 0 (excluded), 1 (highest), 2, or 3 (lowest) for all command groups.
{RMON RMOFF}	=	Restricted Maintenance Option RMON allows the use of certain commands.

When to Use

This procedure describes how to change the following:

- The message language of the link
- The message language for a user.

Background

DACS II Snider and X.25 links will operate in either PDS or MML message languages. Unless previously changed, the message language for the links and users will default to what is defined in the software load. If you want to use a different message language during your login session, you can change the message language for your user id. For example, if the link defaults to PDS but you work in MML, the link will switch to MML when you log in.

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

To change the message language for a link or user, follow these steps:

1. To see the present parameters for any or all links or users, enter the following command and read the **LANG** type from the output:

```
RTRV-PRVG-{USER|TERM}:::\  
{<user id>|j[mm][&&p[nn]]|ALL}
```

2. Enter one of the following commands for the appropriate language change:

Change Message Language of the Link:

```
SET-PRVG-TERM:::<link No.>[, INCL]:LANG-{P|M|T};
```

Change Message Language for a Specific User:

```
SET-PRVG-USER:::<user id>:LANG-{P|M|T};
```

Where:

<user id>	=	User identification (2 to 8 alphabetic characters).
<link No.>	=	Physical link number (1 through 6) and virtual circuit (mm = 01 through 16) for synchronous link (links 5 and 6).
INCL	=	Optional, for links 5 and 6. Specifies that all provisioning data (including RLK) of the command is applied to all virtual circuits; an individual virtual circuit (mm) cannot be entered when INCL is used.
p[nn]	=	Range of links or synchronous virtual circuits.
LANG-{P M T}	=	To change link language as follows: P for PDS, M for MML, or T for TABS (Telemetry Async Block Serial).

When to Use

Use this procedure to change the following:

- The NPC addressing of the link
- The NPC addressing for a user.

Background

Unless previously changed, NPC addressing for the links and users will default to what is defined in the software load. If you want to use a different addressing scheme during your login session, you can change the scheme for your user id. For example, if the link defaults to *extended* but you work in *hierarchical*, the link will switch to hierarchical when you log in. Ensure that the link addressing scheme is allowable as defined in the configuration file.

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. To see the present parameters for any or all links or users, enter the following command and read the **NPCAD** type from the output:

```
RTRV-PRVG-{USER|TERM}::::\  
{<user id>|j[mm][&&p[nn]]|ALL};
```

2. Enter one of the following commands for the appropriate NPC addressing change:

Change NPC Addressing of the Link:

```
SET-PRVG-{TERM|ALL}::::<link No.>[, INCL]\  
::NPCAD-{E|X|H};
```

Change NPC Addressing for a Specific User:

```
SET-PRVG-{USER|ALL}::::<user id>\  
::NPCAD-{E|X|H}
```

Where:

ALL	=	Optional, for links 5 and 6. Specifies that the NPCAD option applies to all users, links and virtual circuits.
INCL	=	Optional, for links 5 and 6. Specifies that all provisioning data (including RLK) of the command is applied to all virtual circuits; an individual virtual circuit (mm) cannot be entered when INCL is used.
<user id>	=	User identification (2 to 8 alphabetic characters).
<link No.>	=	Physical link number (1 through 6) and virtual circuit (mm = 01 through 16) for synchronous link (links 5 and 6).
p[nn]	=	Range of links or synchronous virtual circuits.
NPCAD-{E X H}	=	NPC addressing scheme, either E (default) extended, or H for hierarchical (for example, 01-1-01).

When to Use

Use this procedure to change the following:

- The output message screen option of the link
- The output message screen option for a user.

Background

Output message screening allows you to block groups of messages or include messages associated with other links. Any user can change his/her own message screening.

Unless previously changed, output message screening for the links and users will default to what is defined in the software load. If you want to use a different screening option during your login session, you can change the option for your user id. For example, if the link defaults to option 2 but your user id is set to option 5, the link will switch to option 5 when you log in.

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. To see the present parameters for any or all links or users, enter the following command and read the **SCR** field from the output:

```
RTRV-PRVG-{USER|TERM}::::{<user id>| \  
j[mm][&&p[nn]]|ALL}
```

2. Enter one of the following commands for the appropriate output message screening option change:

Change Message Screening Option of the Link:

```
SET-PRVG-TERM::::<link No.>:\  
SCR-n[, GR-a&-b&-c&-d&-e&-f][:{MCOFF|MCON}];
```

Change Message Screening Option for a Specific User:

```
SET-PRVG-USER::::<user id>:\  
SCR-n[, GR-a&-b&-c&-d&-e&-f][:{MCOFF|MCON}]
```

Where:

<user id>	=	User identification (2 to 8 alphabetic characters).
link No.	=	Physical link number (1 through 6) and virtual circuit (mm = 01 through 16) for synchronous link (links 5 and 6).
n	=	Screening option 1 through 5.
GR	=	Optional field used with SCR 3 or 4 to specify the command groups; enter a 1 for each group to be enabled and a 0 for each group to be disabled.
MCOFF MCON	=	Optional, to disable (MCOFF) intermediate completion outputs of macro commands or to enable completion outputs again (MCON - default or users). DENY messages are not disable

When to Use

Use this procedure to check and change the current macro/map storage space setting for all users.

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. If you want to check the current storage space assigned to user, either for macro files or alternate maps, enter:

RTRV-PRMTR-{MACRO|MAP}::::SPACE:{<user id>|ALL};.

Where:

<user id> = User identification (2 to 8 alphabetic characters).



NOTE:

The space for macros and alternate maps applies to all users; that is, if set at 20 percent, then no user can use over 20 percent of space.

2. To change the space allotted to all the users, enter:

ED-PRMTR-{MACRO|MAP}::::<space>;

Change Link Removal Permission Option

6.10

When to Use

The administrator can use this procedure to change the following:

- The link removal permission of the link
 - The link removal permission for a user
-

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. To see the present parameters for any or all links or users, enter the following command and read the **RLK** type from the output:

```
RTRV-PRVG-{USER|TERM}::::{<user id>|  
j[mm][&&p[nn]]|ALL};
```

2. Enter one of the following commands for the appropriate link removal permission change:

Change Link Removal Permission of the Link:

```
SET-PRVG-TERM::::<link No.>[, INCL]:::RLK-{A|I};
```

Change Link Removal Permission for a Specific User:

```
SET-PRVG-USER::::<user id>:::RLK-{A|I};
```

- If the command is denied, find the reason for the denial in the output message and perform corrective action to obtain command completion.

Where:

- <user id> = User identification (2 to 8 alphabetical characters).
 - <link No.> = Physical link number (1 through 6) and virtual circuit (mm = 01 through 16) for synchronous link (links 5 and 6).
 - p[nn] = Range of links or synchronous virtual circuits.
 - INCL = Optional, for links 5 and 6. Specifies that all provisioning data (including RLK) of the command is applied to all virtual circuits; an individual virtual circuit (mm) cannot be entered when INCL is used.
 - RLK-{A|I} = To specify whether users (other than user DAX) and links (for nonlogin mode) are permitted to remove links from service. **A** is to allow and **I** is to inhibit removal.
-

When to Use

Use this procedure to log on to the frame.

**Related
Information**

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command to log in to the system:

LGN-USER:::<user id>[,<pswd>];

Where:

<user id> = User identification (2 to 8 alphabetic characters).

<pswd> = Required for synchronous link to enter password. For asynchronous link, the login routine will prompt you for your password.

2. If you want to see who is currently logged on, enter:

RTRV-PRVG-USER::LOG::[ALL];

The ALL option allows the frame administrator to see all users on the frame.

When to Use Use this procedure to log off the frame.

Related Tasks To log off another user from the frame, refer to GT 6.4.

Related Information For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command to log off the system:

LGT-{USER|TERM}::::{<user id>|<link No.>};

Where:

USER/TERM = Selects whether user ID or link number will be specified. Only the frame administrator can use the LINK option to log off a user from another link.

<user id> = User identification (2 to 8 alphabetic characters).

<link No.> = Physical link number (1 through 6) and virtual circuit (mm = 01 through 16) for synchronous link.

When to Use Use this procedure to change your own password.

Background If this is your initial login, review the following information about selecting a personal password that you can easily remember:

- A password must contain six to eight characters, at least two of which must be letters and one a number. Think of one that is meaningful to you and can be remembered without writing it down.
- To be effective, passwords should not be shared.
- You can change your passwords when desired. If you forget your password, the frame administrator can enable you to log on by assigning you another temporary password.

Related Tasks To reinstate a user who has forgotten their password, refer to GT 6.3.

 To recover the default password for user DAX, refer to GT 6.2.

Related Information For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. After determining the type of link you are connected to, enter one of the following commands to change the password on that link:

Synchronous Link (X.25 Protocol):

If you are on a synchronous link (X.25 protocol), enter:

CHG-LGN:::<old pswd>:<new pswd>;

giving the old and new passwords in the command.

Asynchronous Link (Snider Protocol):

If you are on an asynchronous link (Snider protocol), enter:

CHG-LGN::;

and respond to system prompts to enter old and new passwords.

When to Use	Use this procedure to create an alternate map.

Before You Begin	The alternate map feature can only be used by users with USER IDs who access the system with a login.

Related Information	For related information, refer to Volume I, Chapter 6, <i>Administration</i> .

Instructions

1. If you want to check link message screening to determine whether it needs to be changed temporarily to reduce interruption during the session, enter the following command and read the screening (SCR) option:

RTRV-PRVG-{USER|TERM}::::<user id>|<link No.>;

Where:

USER|TERM = Selects whether user or link identification will be used in the command.
<user id> = User identification (2 to 8 alphabetic characters).
<link No.> = Physical link number (1 through 6) and virtual circuit (mm = 01 through 16) for synchronous link.

- If you want to change output screening, see *Change Output Message Screening* and enter the SET PRVG command.

2. Decide on a name for the alternate map. It can have up to seven alphanumeric characters, the first of which must be a letter; all letters must be capitalized.
3. Enter the following command to begin the alternate map session:

ED-MAP::::<map name>;

Where: <name> = Name of new alternate map, consisting of up to seven alphanumeric characters starting with a letter.

4. Enter CONN-CRS commands.

You will receive an OK acknowledgment for each allowable entry. See Figure 6.14-1 for an example of map construction.

- If NOT ALLOWED is received, the command is not allowed as an entry in an alternate map.



NOTE:

If you recognize an input error, you can delete the line (explained later) and enter another CONN CRS. Similarly, if an error is indicated by the condition code after you end the session, you can open the file for editing and then delete and add CONNs.

**NOTE:**

When editing an existing map, you will not see previous entries.

```
ENT-MAP:[xy]::[ww]:NEWMAP;  
CONN-CRS-T0::01-1-01-01,01-1-02-01;  
CONN-CRS-T0::01-1-03-01,01-1-04-01;  
CONN-CRS-T0::01-1-05-01&&-24,01-1-06-01&&-24;  
END
```

Figure 6.14-1. Example of Alternate Map

5. To terminate the create session, enter **END**. To abort the creation of the map, enter **QTEND**.
 - If you do not receive a COND 00 response to the END command, study the conflicting CONN messages that accompany the completion message to determine what changes are needed and refer to *Edit an Existing Alternate/Reference Map* to make changes. The terminations for those CONNs may already be involved in other connections.
 - If you want to see the contents of the alternate map, enter the appropriate command:

For CONNs:

```
RTRV-MAP-COM::::<name>[:<user id>];
```

For NPCs:

```
RTRV-MAP-EQPT::NPC::<name>[:<user id>];
```

Create Alternate Map Using the Picture Option

6.15

When to Use	Use this procedure to create an alternate map using the picture option.

Before you Begin	Only users with USER IDs who access the system via a login can use the alternate map feature.

Related Tasks	To edit an existing map, refer to GT 6.16.

Related Information	For related information, refer to Volume I, Chapter 6, <i>Administration</i> .

Instructions

1. If you want to check link message screening to determine whether it needs to be changed temporarily to reduce interruption during the session, enter the following command and read the screening (SCR) option:

RTRV-PRVG-{USER|TERM}::::<user id>|<link No.>;

Where:

USER|TERM = Selects whether user or link identification will be used in command.

<user id> = User identification (2 to 8 alphabetic characters).

<link No.> = Physical link number (1 through 6) and virtual circuit (mm = 01 through 16) for synchronous link.

- If you want to change output screening, see *GT 6.8 Change Output Message Screening* and enter the SET PRVG command.

2. Decide on a name for the reference map. It can have up to seven alphanumeric characters, the first of which must be a letter; all letters must be capitalized.
3. Enter the following command to begin the reference map creation session:

ED-MAP::::<map name>;

Where: <name> = Name of new reference map, consisting of up to seven alphanumeric characters starting with a letter.

4. Enter the NPCs into the reference map using the following command:

ED ADD NPC

See Figure 6.15-1 for an example of map construction. When "OK" is received, enter the next component command (if any).

If you recognize an input error, you can delete the line (explained later) and enter another ED-ADD-MAP command. Similarly, if an error is indicated by the condition code after you end the session, you can open the file for editing and then delete and add ED-ADD-MAP command.

**ENT-MAP:[xy]::[ww]:NEWMAP;
ED-ADD-MAP::NPC-01-1-07&&&-01-1-12;
END**

Figure 6.15-1. Example of a Reference Map

5. To terminate the create session, enter **END**. To abort the creation of the reference map, enter **QTEND**.
 - If you do not receive a COND 00 response to the END command, study the conflicting ED-ADD-MAP commands that accompany the completion message to determine what changes are needed and refer to the EDIT-MAP part of this chapter to make changes. The NPC for the other side of the connection may not have been added.
6. Enter the following command to create the new alternate map from the reference map:

ED-PRMTR-MAP::::<new name>,<refmap>;

- If the command is denied, find the reason for the denial in the output message and perform corrective action to obtain command completion.
 - If the system returns **COMPLD with no conditions**, the new map contains all circuits that are currently in place in the system for the NPCs in the reference map.
 - If the system returns **COMPLD with condition**, some of the circuits could not be included in the new map (for example, could be multipoint).
7. If you want to see the contents of the alternate map, enter the appropriate command:

For CONNs:

RTRV-MAP-COM::::<name>[:<user id>];

For NPCs:

RTRV-MAP-EQPT::NPC::<name>[:<user id>];

Edit an Existing Alternate/Reference Map

6.16

When to Use Use this procedure to edit an existing alternate map or reference map.

Before you Begin Only users with USER IDs who access the system via a login can use the alternate map feature. User DAX can edit the maps owned by other users.

 **NOTE:**
When editing an existing map, you will not see the previous entries.
To view the contents of a map, use the command
UTL : : QRY, LIST, MAP <name>!, where <name> is the name of
the map.

Related Information For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

Use this procedure to edit an existing alternate/reference map.

1. If you want to check link message screening to determine whether it needs to be changed temporarily to reduce interruption during the session, enter the following command and read the screening (SCR) option:

RTRV-PRVG-{USER|TERM}:::<user id>|<link No.>;

Where:

USER TERM	=	Selects whether user or link identification will be used in command.
<user id>	=	User identification (2 to 8 alphabetic characters).
<link No.>	=	Physical link number (1 through 6) and virtual circuit (mm = 01 through 16) for synchronous link.



NOTE:

If you want to change output screening, see *Change Output Message Screening* and enter the SET PRVG command.

2. Enter the following command to begin the editing session:

ED-MAP:::<map name>;

Where: <name> = Name of map to be edited; the map must already exist (must have been created).



NOTE:

If the command is denied, find the reason for the denial in the output message and perform corrective action to obtain command completion.

3. Use the following items to change the alternate map as required:

- **Add New Cross-Connections.** Enter the complete CONN CRS commands (which are appended to the map).
- **Remove Cross-Connections.** Enter the following to remove CONNs from an alternate map:

**CONN-CRS-T0::<npc No.1>-ddd[&&-eee], **
<npc No.2>-jjj [&&-kkk]::::DEL;

Where:

- <npc No.1> = NPC number on the FROM side of connection to be deleted.
- <npc No.2> = NPC number on the TO side of connection to be deleted.
- ddd/jjj = Channel number.
- eee/kkk = Optional, last channel number in a range of channels.

- **Add NPCs to Reference Map.** Enter the ED ADD NPC command to add NPCs to a reference map.
- **Remove NPCs from a Reference Map.** Enter the following command to remove NPCs from a reference map:

ED-DLT-MAP::NPC-{<npc No.>&&[&]-<range>|<npc No.1>&-<npc No.2>};

Where:

- range = Continuous range of NPCs entered with ampersands (&&) and a dash or a listing of up to 10 NPCs with a &- separating each one. Three ampersands are required for hierarchical range.



NOTE:

Only NPCs that were explicitly added via the ED ADD NPC can be deleted via the ED DLT NPC. If the subject map is currently active on the frame, the changes will not be implemented in the network until the map is activated again.

4. To terminate the edit session, either enter **END** to write the changes into the map or enter **QTEND** to disregard all the changes and quit the edit mode. The QTEND occurs automatically if the link fails or if you are forced off the system.
 - If you do not receive a COND 00 response to the END command, study the conflicting CONN messages that accompany the completion message to determine what changes are needed. The terminations for those CONNs may already be involved in other connections or the NPC for the other side of the connection may not have been added.

- Enter the appropriate command to see the contents of the alternate map:

For CONNs:

RTRV-MAP-COM:::<name>[:<user id>];

For NPCs:

RTRV-MAP-EQPT::NPC::<name>[:<user id>];

When to Use Use this procedure to activate an alternate map.

Before You Begin



CAUTION:

*Performing this procedure incorrectly can interrupt service.
Perform each step of the procedure in the order given. Also, read all
supplementary information (such as Notes) before executing commands.*

**Related
Information**

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command if you want to see the contents of the alternate map first:

RTRV-MAP-COM:::<name>:[user id];

or enter the following to list NPCs:

RTRV-MAP-EQPT::NPC::<name>:[user id];

Where:

<name> = Map name.
<user id> = Optional, to allow frame administrator to see another user's (given by user ID) map.

2. Enter the following command to activate the map (see note before using the CLR option):

EXC-MAP:::<name>:[CLR][, INCL];

Where:

<name> = Alternate map name.
CLR = Optional, to cause all connections associated with the NPCs of the named map to be disconnected before the map is implemented (see Note).
INCL = Optional, to overwrite CUS or RDLD circuits along with the other connections.



NOTE:

Note the following considerations concerning the CLR option for the activate map command:

The CLR (and the map itself) only affects 2-way, 2-point cross-connections (CONN); other types of connections will not be disconnected.

Care should be taken with the CLR option because it will cause all cross-connections on NPCs involved in the alternate map to be disconnected. Connections on NPCs not involved in the alternate map will not be affected (the whole frame will not be cleared).

- If the command is denied, find the reason for the denial in the output message and perform corrective action to obtain command completion.

- If the system returns a nonzero COND code in the completion message, a connection other than a 2-way type cross-connection exists on the involved NPCs, and this connection was not cleared. The named NPC is the first one that contains such connections.
3. Watch for DENY messages while the map is being executed. You can reenter the denied connections using the cross-connect command. After the cause of the denial is found, you can edit the alternate map to correct the cross-connections for the next time the map is activated.
 4. Enter the following command to see the alternate map connections for the involved NPCs:

RTRV-CRS-T1::<npc No.>[&&[&]-<range>]::MAP;

Where:

- <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
 - <range> = Optional, last NPC of a continuous range. Three ampersands (&s) are required for hierarchical range.
-

When to Use	Use this procedure to retrieve alternate map information from the system.

Related Information	For related information, refer to Volume I, Chapter 6, <i>Administration</i> .

Instructions

1. Enter the appropriate command for the information you are looking for:

- **Filename List and Execution Attributes:**

RTRV-PRMTR-MAP:::ATTR:[{<user id>|ALL|<name>}];

- **Contents of the Map:**

RTRV-MAP-COM:::<name>[:<user id>];

- **Listing of NPCs in the Map:**

RTRV-MAP-EQPT::NPC[:<user id>];

- **Allotted Map File Storage Space:**

RTRV-PRMTR-MAP:::SPACE:[{<user id>|ALL|SYSTEM}];

Where:

- <user id> = User identification (2 to 8 alphabetic characters).
 - <name> = Name of the map file.
 - ALL = Allows the frame administrator to see all files on the frame.
-

When to Use	Use this procedure to delete an alternate map package from the system.

Background	If you have already activated the alternate map, the delete command will not disconnect the component connection; it only removes the map name and definition. Only the system administrator can delete maps created by other users. Users can only delete their packages; the command will not affect a map with the same name that belongs to another user.

Related Information	For related information, refer to Volume I, Chapter 6, <i>Administration</i> .

Instructions

1. Enter the following command if you want to examine the alternate map before deleting:

RTRV-MAP-COM::::<name>:[user id];Where:

<name> = Name of the map file.

<user id> = Optional, to allow frame administrator to address other users (given by user ID) package.

2. Enter the following command to delete the file:

DLT-MAP::::<name>[:user id];.

When to Use Use this procedure to create a macro and edit a macro.

Before You Begin You must use login access to the frame to create or edit a macro because the ownership of the macro is established by user ID.

Related Information For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. If you want to check link message screening to determine whether it needs to be changed temporarily to reduce interruption during the session, enter the following command and read the screening (SCR) option:

RTRV-PRVG-{USER|TERM}:::<user id>|<link No.>;

Where:

USER TERM	=	Selects whether user or link identification will be used in command.
<user id>	=	User identification (2 to 8 alphabetic characters).
<link No.>	=	Physical link number (1 through 6) and virtual circuit (mm = 01 through 16) for synchronous link.

- If you want to change output screening, see *Change Output Message Screening*. Users can change their own message screening. Messages entered during the macro session do not appear on other links.
 - If you want to change message language, see *Change Message Language*.
 - If you want to change NPC addressing, see *Change NPC Addressing*.
2. If you are editing an existing macro, go to Step 4.
 3. Decide on a name for the macro using the following rules:
 - Names can have up to seven alphanumeric characters, the first of which must be a letter.
 - All letters must be capitalized.
 - For *public-use* macros, the first letter must be an upper-case "P". (Only the frame administrator—user DAX—can create a public macro.)
 4. Enter the following command to begin creating or editing a macro:

ED-MACRO:::<name>;

where: <name> is the macro name.



NOTE:

Before editing the macro, wait for the message giving the number of lines; with large macros (around 8,000 lines), entries can be lost while the DACS II is verifying the number of existing lines.

5. Use the following *macro package editing commands* to create or modify your macro package. See Example 1 at the end of this procedure for help. Example 2 shows how to create a *universal macro*. (For new macros, you can simply enter the required command lines.)

- **APPEND Command.** This command allows you to "append" new lines *after* the line specified. When beginning a new macro, append after line 0.

APPEND::<line number>;

- **DELETE Command.** This command allows you to delete the line specified.

DELETE::<line number>;



NOTE:

After deleting a line, the remaining line numbers after the deleted line will change. For example, if you have 5 lines and delete line 4, line 5 will become line 4. Use the **LIST** command to see the contents of macro.

- **MOVE Command.** This command allows you to move a line (or group of lines) to a place *after* a specified line.

**MOVE::{<starting line>|END}[-{<ending line>|END}],
{<destination line>|END};**

<starting line> - Starting component command line number indicating the beginning of a component command line range to be moved. This can also be a single line number for moving single lines.

<ending line> - Ending component command line number indicating the end of a component command line range to be moved.

END - Last line in the macro file. End cannot be used in both parts of the command (starting line and the ending line or destination line).

<destination line> - Component command line after which the component commands are moved. Use 0 to move lines *before* line 1.

- **LIST Command.** This command lists the lines or range or lines specified. To list all the lines in the macro, enter **LIST**;

**NOTE:**

LIST:{<starting line>|END}[-{<ending line>|END}]; Consider the following when constructing macros:

SET PRVG commands can be included in a macro to shut off (MCOFF) macro component COMPLD messages.

A STOP keyword can be included in component RMV/RST, CONN, and DISC commands to stop the macro if a component command fails.

- If BAD SYNTAX or other denial is received, reenter corrected command. If NOT ALLOWED is received, the command is not allowed either because it has to do with macros itself (for example, ED, EXC), or users (for example, LGT), or link/user authorization.
- When "OK" is received, make next addition or move to different line and make any other changes. The system appends ;OK to each valid command line in the macro.
- To store changes without quitting the session, enter **SAVE**; . To abort the macro session without storing changes, enter **QTEND**; .

**NOTE:**

As usual, the on-line help can be invoked while entering a component line to the macro using the "?".

6. After all components have been entered, enter **END**; to terminate the session. The DACS II should respond with MACRO ...COMPLD message with COND 00 exceptions.

Example 1: This example shows how to create a macro. Figure 6.20-1 shows the component commands in the macro that do the following:

- **Line 1.** This command disconnects channel 01 of NPC 001 from channel 01 of NPC 003. If the command fails, the macro stops.
- **Line 2.** This command cross-connects channel 01 of NPC 001 to channel 01 of NPC 005.
- **Line 3.** This command cross-connects channel 02 of NPC 001 to channel 02 of NPC 005.
- **Line 4.** This command cross-connects channel 03 of NPC 001 to channel 03 of NPC 005.

- **Line 5.** This line outputs all connections on NPC 001.

```
DISC-CRS-T0::001-01,003-01:::STOP;OK
CONN-CRS-T0::001-01,005-01;OK
CONN-CRS-T0::001-02,005-02;OK
CONN-CRS-T0::001-03,005-03;OK
RTRV-CRS-T1::001::MAP;OK
```

Figure 6.20-1. Example of Macro (Extended NPC Numbering)

Example 2: Figure 6.20-2 shows a universal macro that, when executed with the variable values, does the same thing as the macro in Example 1. There may be as many as ten variables listed in one macro. The variables are entered as #01 through #10 in the message. Variables may be used for any parameter except action verbs and punctuation, and includes user ids, NPCs, channel numbers, trunk conditioning codes, etc. Variables are unique to a macro, that is, variable #01 may be used more than once in a macro to repeat the same value several times. Variable #01 may be used in another macro with an entirely different meaning.



NOTE:

To represent hierarchical NPC numbers, a variable must be used for each part of the number. For example, if variables #01, #02, and #03 were used to represent NPC 01-1-01, the last line entered in the example would be: **RTRV-CRS-T1::#01-#02-#03::MAP;**

The following command (with extended NPC number values 001 and 005) would be entered to execute the macro in the example:

```
EXC-MACRO:::QWKCON:(001&005);
DISC-CRS-T0::#01-#01-#01-#01,#01-#01-#02-
#01:::STOP;OK
CONN-CRS-T0::#01-01,#02-01;OK
CONN-CRS-T0::#01-02,#02-02;OK
CONN-CRS-T0::#01-03,#02-03;OK
RTRV-CRS-T1::#01::MAP;OK
```

Figure 6.20-2. Example of Macro (Extended NPC Numbering)

When to Use Use this procedure to execute a macro package.

Background If the frame administrator has established the priority of command execution, the component commands of the macro will determine when a macro is executed relative to other macros. The overall success of the macro execution is indicated by a final COMPLD or DENY message. Macros can include a STOP keyword on the component line to stop the macro if critical components fail. Macros can also be aborted by entering the STOP command after the macro is running.

Related Information For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command if you want to see the contents of the macro before executing:

RTRV-MACRO-COM:::<name>:[<user id>];

Where:

<name> = Macro name.

<user id> = Optional, to allow frame administrator to see another user's macro.

- If SET MCOFF and SET MCON commands are not included in the macro and you want to shut off component command completion messages, enter:

SET-PRVG-{USER|TERM}:::\<user id>|<link No.>::MCOFF;

Where:

USER|TERM = Selects whether user or link identification will be used in command.

<user id> = User identification (2 to 8 alphabetic characters).

<link No.> = Physical link number (1 through 6) and virtual circuit (mm = 01 through 16) for synchronous link.

- If you want to stop the execution of the macro after it has started (in the next step), enter:

ABT-PROC:::<link No.>;

Where:

<link No.> = Required by user to stop execution on link being used. Frame administrator can stop the execution of the macro on any link.

2. Enter the following command to execute the macro:

EXC-MACRO:::<name>:[p1&p2&p3, ...&10];

Where:

p1,p2,p3 = Values for variables identified by numbers in the component commands; can also include special keyword "NULL" for variable and "STOP" at end of line.

The following example shows how NPC numbers (extended numbering) and the STOP keyword would be entered for variables used in the macros:

EXC-MACRO: : : QWKCON2: 641, 001, 002, 003, STOP;

- If SET MCOFF was entered before executing the macro, enter:
SET-PRVG-{USER|LINK}: : : <user id>|
<link No.>: : MCON; to allow completion messages again.
-

When to Use

Use this procedure to retrieve macro information from the system.

**Related
Information**

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the appropriate command for the information you are looking for:

- **Filename List:**

RTRV-PRMTR-MACRO:::ATTR:[{<user id>|ALL}];

- **Contents of the Macro:**

RTRV-MACRO-COM:::<name>[:<user id>];

- **Allotted Map/Macro File Storage Space:**

RTRV-PRMTR-MACRO:::SPACE[:{<user id>|ALL|SYSTEM}];

Where:

<user id> = User identification (2 to 8 alphabetic characters).
<name> = Name of the macro file.
ALL = Allows the frame administrator to see all files on the frame.

When to Use	Use this procedure to delete a macro package from the system.

Before You Begin	Only the system administrator can delete macros created by other users. Users can only delete their packages; the command will not affect a macro with the same name that belongs to another user.

Related Information	For related information, refer to Volume I, Chapter 6, <i>Administration</i> .

Instructions

1. Enter the following command if you want to examine the macro file before deleting it:

RTRV-MACRO-COM:::<name>:[user id];

Where:

<name> = Name of the macro file.

<user id> = Optional, to allow frame administrator to address other users (given by user ID) package.

2. Enter the following command to delete the file:

DLT-MACRO:::<name>[:user id];

When to Use	Use this procedure to turn the Message Logging feature ON or OFF.

Before You Begin	This command is can only be used by DACS II frame administrators or users with restricted frame access.

Related Information	For related information, refer to Volume I, Chapter 6, <i>Administration</i> .

Instructions

1. Enter the following command to turn the Message Logging feature ON or OFF:

ED-PRMTR-MSGLOG:::{ON|OFF};

Where:

ED-PRMTR-MSGLOG = Change the Message Logging feature.

ON = Turn the feature ON.

OFF = Turn the feature OFF (default).

When to Use	Use this procedure to display the range of the Message Log numbers and the total number of messages existing in the Message Log. The information contained in this Message Log is constantly changing.

Before You Begin	This command can only be used by DACS II frame administrators or users with restricted frame access.

Related Information	For related information, refer to Volume I, Chapter 6, <i>Administration</i> .

Instructions

Use this procedure to display log numbers:

1. Enter the following command to display the range of Message Log numbers:

RTRV-MSG-RNG: : : ;

Where:

RTRV-MSG-RNG = Retrieve the range of messages stored in the Message Log.

Retrieving Messages from the Message Log

6.26

When to Use

Use this procedure to retrieve a message from the Message Log. The user can specify either one Message Log number or a range of Message Log numbers.

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command to retrieve messages from the Message Log:

RTRV-MSG: : : NUM-<a>[&&-];

Where:

- RTRV-MSG = Retrieve a message in the Message Log.
 - NUM = Number of the logged message(s) to be retrieved.
 - a = The Message Log number, or the first number in a range of messages to be retrieved.
 - b = The last number in a range of messages to be retrieved.
-

When to Use	Use this procedure to clear the output Message Log. The Message Log can also be cleared if the DACS II frame is initialized (via a cold or warm boot).

The Message Log will not be cleared if the frame is placed in Maintenance Condition (MCOND).

Before You Begin	This command can only be used by DACS II frame administrators and users with restricted frame access.

Related Information	For related information, refer to Volume I, Chapter 6, <i>Administration</i> .

Instructions

1. Enter the following command to clear the Message Log:

INIT-MSGLOG:::[RSTNUM];

Where:

INIT-MSGLOG = Clear the Message Log.

RSTNUM = Reset the Message Log counter to 1.

When to Use

The Alarm Severity Feature allows users to change the severity level of PA-, PB-, and PC-type NPC facility alarms and associated shelf alarms. This allows DACS II users the flexibility of customizing their alarm severities.

Use this procedure to turn the Alarm Severity feature ON or OFF.

Before you begin

This command can only be used by DACS II frame administrators and users with restricted frame access.

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command to turn the Alarm Severity feature ON or OFF:

ED-PRMTR-ALMS:::{ON|OFF};

Where:

ED-PRMTR-ALMS = Turn Alarm Severity Feature
ON = Turn the feature ON.
OFF = Turn the feature OFF (default).

Changing the Alarm Severity of a Shelf Alarm

6.29

When to Use

Use this procedure to change the Alarm Severity of any single shelf alarm or all shelf alarms.

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command to change the Alarm Severity of a shelf alarm:

ED-PRMTR-SALMS: : : : salm, {PMACR | PMAMJ | DMAMN | MI | RESET};

Where:

ED-PRMTR-SALMS = Change Shelf Alarm

salm	Explanation
PFF	Power Failure
SYNC	Failure of one SYNC
CCN	CCN autonomously removed
LTF	NPC Hardware Failure
TREF	Failure of one SSP
STREF	Failure of last SSP
TLI	TLI removed from service
CRO	Failure of Clock Reference Oscillator
SMEM	Failure of SMEM memory card
MCE	MC removed from service
CCNI	CCI/CCNI autonomously removed
TSI	TSI/ETSI autonomously removed
FC	FC autonomously removed
FTMI	FTMI autonomously removed
DSPI	DSPI autonomously removed
FTUC	FTU UC autonomously removed
CCB	CCB autonomously removed
DSPUC	DSP UC autonomously removed
SDT	System date and time not set
DSPC	DSP NPC autonomously removed
ALL	All Shelf Alarms

PMACR = CRITICAL Alarm Severity
PMAMJ = MAJOR Alarm Severity
DMAMN = MINOR Alarm Severity
MI = MESSAGE INFORMATION Alarm
Severity
RESET = Reset Alarm Severity to default value

Displaying Shelf Alarm Severity Setting

6.30

When to Use

Use this procedure to display the current Alarm Severity setting of a particular shelf alarm or the setting for all shelf alarms of an NPC type.

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command to display the shelf Alarm Severity setting(s):

RTRV-SALM-SEV:::{salm|ALL};

Where:

RTRV-SALM-SEV = Retrieve shelf Alarm Severity.

salm = Shelf Alarms (enter a particular shelf alarm)

ALL = All shelf alarm types

When to Use

Use this procedure to change the Alarm Severity of any single facility alarm or all facility alarms.

**Related
Information**

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command to change the alarm severity of a facility alarm:

ED-PRMTR-

FALMS: :mn[xyz] : :fal m, {PMACR|PMAMJ|DMAMN|MI|RESET};

Where:

ED-PRMTR-FALMS = Change facility alarms

mn = NPC type (PA, PB, or PC)

xyz = Provisioning values (see I.38375 in the *DACS II Command and Message Manual* for complete X, Y, and Z tables.)

falm = Facility Alarms

For PA type NPCs, valid values are:

falm	Explanation
RPSFI	Remote Power Supply Failure Indicator
LOS	Loss of Signal
LOF	Loss of Frame
AIS	Alarm Indication Signal
EER	Excessive Error Rate
BER	Bit Error Rate
LCMA	Loss of CRC-4 Multiframe Alignment
FLC	Far End Loss of CRC-4 Multiframe Alignment
RAI	Remote Alarm Indication
RBER	Remote Bit Error Rate
SFI	Sync failure Indication
POF	Psuedo Frame Word Out of Frame
TAI	TS-16 All Ones Alarm
RAIS	Remote AIS
LMA	Loss of Multiframe
RABS	Remote Alarm bit 6, TS16
PBF	Primary Block Failure
ALL	ALL above identified facility alarms

For PB and PC type NPCs, valid values are:

falm	Explanation
RPSFI	Remote Power Supply Failure Indicator
AIS	Alarm Indication Signal
EER	Excessive Error Rate
BER	Bit Error Rate
RAI	Remote Alarm Indication
RBER	Remote Bit Error Rate
SFI	Sync failure Indication
TAI	TS-16All Ones Alarm
RAIS	Remote AIS
LMA	Loss of Multiframe
RABS	Remote Alarm bit 6,TS16
PBF	Primary Block Failure
ALL	ALL above identified facility alarms

**NOTE:**

The command does not check for valid facility alarm/NPC type combinations.

PMACR = Prompt Maintenance Action CRITICAL Alarm Severity
PMAMJ = Prompt Maintenance Action MAJOR Alarm Severity
DMAMN = Deferred Maintenance Action MINOR Alarm Severity
MI = MESSAGE INFORMATION Alarm Severity
RESET = Reset Alarm Severity to default value.

When to Use

Use this procedure is used to display the current alarm severity setting of a particular facility alarm or of all facility alarms of an NPC type.

**Related
Information**

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command to display the facility Alarm Severity setting(s):

BRTRV-FALM-SEV : : {mnxyz | ALL} : : {fal^m | ALL};

Where:

RTRV-FALM-SEV = Retrieve facility Alarm Severity
mn = NPC type (PA, PB, or PC)
xyz = Provisioning values (see I.53311 in the *DACS II Command and Message Manual* for complete X, Y, and Z tables.)
ALL = All NPC types (PA, PB, and PC)
fal^m = Facility Alarms (enter a particular facility alarm)
ALL = All facility alarm types

When to Use

Use this procedure to retrieve the status of the Alarm Severity feature - whether it is turned on or off.

**Related
Information**

For related information, refer to Volume I, Chapter 7, *Administration*.

Instructions

1. Enter the following command to determine the Alarm Severity feature status:

RTRV-ALM:::SEV;

Where:

RTRV-ALM = Retrieve Alarm
SEV = Severity Level Status

When to Use

The Intervention Level Setting feature allows DACS II users to escalate or de-escalate the alarms for individual PA-, PB-, and PC-type NPCs, Timing Link Interface, Synchronizer or cross-connections to suit their current needs. Use this procedure to turn the Intervention Level feature ON or OFF.

Before You Begin

This command can only be used by DACS II frame administrators and users with restricted frame access.

This procedure can only be used if the Intervention Level feature has been purchased as part of the DACS II software generic.

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command to turn the Intervention Level feature ON or OFF:

ED-PRMTR-INTV:::{ON|OFF};

Where:

ED-PRMTR-INTV	=	Turn Intervention Level Feature
ON	=	Turn the feature ON.
OFF	=	Turn the feature OFF (default).

When to Use

This procedure is used to change the Intervention Level of an NPC, TLI, or SYNC resource.

For NPCs, the Intervention Level setting will affect the Alarm Severity level reported for all NPC alarms including the facility and performance monitoring alarms.

If the DACS II experiences more than 5 NPC alarms while the feature is ON, then the escalation mechanism associated with the NPCs will not occur.

For the SYNC and TLI resources, all alarms associated with these resources will be affected by Intervention Level and the escalation mechanism associated with these resources will occur.

This command can be executed while the feature is turned OFF.

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command to change the Intervention Level of a resource:

```
ED-PRMTR-INTV:: {NPC- {<npc No. 1> [&&-<npc No. 2>] | ALL} |  
TLI | SYNC | ECCN | ALL} :: LEV-r;
```

Where:

ED-PRMTR-INTV	=	Change Intervention Level
NPC	=	Network Processing Circuit
<npc No. 1>	=	An NPC number, or the first NPC number in a range of NPCs.
<npc. No. 2>	=	The last NPC number in a range of NPCs.
ALL	=	(NPCs) All NPCs on the DACS II
TLI	=	Timing Link Interface (including TLI1-TLI4)
SYNC	=	Synchronizer (side 0 and 1)
CCN/ECCN	=	Cross-connect (side 0 and 1)
ALL	=	All resources
LEV	=	Intervention Level
r	=	Intervention Level number (1-6)

When to Use

Use this procedure to display the Intervention Levels for an NPC, a range of NPCs, all NPCs, a TLI, both CCNs, both SYNCs, or all resources.

**Related
Information**

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command to display Intervention Levels of resources:

```
RTRV-INTV:: {NPC- {<npc No. 1> [&&-<npc No. 2>] | ALL} | \  
TLI-m | SYNC | ECCN | ALL} :: ;
```

Where:

RTRV-INTV = Retrieve Intervention Level

Displaying Intervention Level Status

6.37

When to Use

Use this procedure to retrieve the status of the Intervention Level feature - whether it is turned on or off.

Related Information

For related information, refer to Volume I, Chapter 6, *Administration*.

Instructions

1. Enter the following command to determine the Intervention Level feature status:

RTRV-ALM:::INTV;

Where:

RTRV-ALM = Retrieve alarm

INTV = Intervention Level Status

When to Use

Use this procedure if you are looking for a procedure to use the Delete Feature Package command. This command is used to reduce the feature package set by a prior single feature.



NOTE:

The execution of this command requires DACS II superuser privileges. The frame must be in the **MCOND** (maintenance condition) state at execution.



NOTE:

Because of the impact of this command on the available features, the following dialogue will be displayed by DACS II.

ARE YOU SURE?

The user must respond with an affirmative (Y) for the command to be executed.

Instructions

1. Log in on DACS II as user DAX (refer to Administration)

LGN-USER:::DAX;

2. Perform a manual backup from RAM to MEM (PMEM and SMEM together)

CPY-MEM:::WKG, MEM;

3. Place the frame in Maintenance Condition

RST-EQPT::MC::MCOND;

4. Check the Feature Package running on the frame and identify the one you want to delete :

RTRV-FPKG-NE;

00000001 Basic DS1 Terminations

00000002 Basic CEPT Terminations

00000004 Subate Data

00000008 DIRECT SLC 96 and Series 5 Carrier Interface

00000010 DS3 Terminations

00000020 Enhanced CEPT, C-Bit, C-Bit Filtering, RPSFI

00000040 Switched Teleconferencing

00000080 Capacity Expansion Frame

00000100 Enhanced DS1 Performance Monitoring

00000200 DS0/DS1 Service Roll Feature

00000400 AT&T Security Warning Message

00000800 Nx64kbit Test Access

00001000 Clear 2 Mbit/s Interface

00002000 TS0 to Non TS0 Cross-connection

00004000 2 MB/S Roll Feature

00008000 Spare

00010000 TRT/FT Features Intervention Level

00020000 DS3 Hybrid

5. Delete the identified Feature Package :

[I.37301]

DLT-FPKG:[<xy>]::[ww]:nnnnnnnn;

The completion message will indicate the old Feature Package and the new one :

[O.37301]

```
<xy> yy-mm-dd hh:mm:ss LINK-n[vv]
M DLT FPKG:::[ww]:nnnnnnnn COMPLD
/* [O.37301] */
/* Old FPI:New FPI */
"aabbccdd:kkttuuvv"
;
```

6. Restore the MC

RST-EQPT::MC;

Contents

■ Archiving the Database	GT 7.1-1
■ Recovering after Memory Card Failure	GT 7.2-1
■ Removing a Single-Latch Circuit Pack	GT 7.3-1
■ Installing a Single-Latch Circuit Pack	GT 7.4-1
■ Removing a Double-Latch Circuit Pack	GT 7.5-1
■ Installing a Double-Latch Circuit Pack	GT 7.6-1
■ Upgrading From an EMTC to a EMTC2	GT 7.7-1

When to Use	Use this procedure to archive the DACS II database and executables.

Before You Begin	This procedure assumes the MC, PMEM, and SMEM are functioning properly and the database in RAM and on PMEM are correct.

Related Information	For related information, refer to Volume I, Chapter 7, <i>Maintenance</i> .

Instructions

Use this procedure to obtain an archive copy when the MC is in the IS state.

1. At the archive storage location—
Retrieve the oldest archive copy (flash card) that you want to reuse.

**NOTE:**

If an archive flash card is not available or does not exist, find a new or blank card that is DACS II compatible.

2. Verify that the MC and SMEM are in-service by entering the following command:

RTRV-MEMSTAT;

- If the MC and SMEM are in service—
Go to Step 4.
- If the MC is out-of-service (RAM state field in MEMSTAT output)—
Enter the following command:

RST-EQPT::MC;

- Reissue the command **RTRV-MEMSTAT**.
If the SMEM is in-service proceed to Step 4.
3. If the SMEM is out-of-service—
First copy the journal files to PMEM:
CPY-MEM:::WKG, MEM;
Then restore SMEM in the background:
RST-EQPT::SMEM:::BKGRND;
When this command completes, SMEM is a mirror image of PMEM, suitable for archiving. Proceed to the next step.
 4. Ensure that any previously entered **RST** command for SMEM has completed.
 5. Remove the SMEM card logically by issuing the command:
RMV-EQPT::SMEM;
 6. Make sure the ESD grounding strap has been tested according to your company's ESD testing policy. When the command above completes, place the ESD grounding strap on your wrist and physically remove the SMEM card from the CPU2.
 7. Label the just removed SMEM card as the latest archive card (with the frame information, date/time, when it was removed) and store it in the proper place for archive cards.

**NOTE:**

This is now the latest "archive" card.

8. Insert the card retrieved in Step 1 (the "oldest archive" card), into the SMEM slot. Use a blank card if the oldest archive card is not available.
9. Enter the following command to restore the SMEM card to service:

RST-EQPT::SMEM::::BKGRND;

**NOTE:**

The system executables and the database on the PMEM card will be copied onto the SMEM card such that each card is a mirrored image of the other.

Recovering after Memory Card Failure

7.2

When to Use

Use this procedure to recover after a PMEM or SMEM card failure occurs.

Related Information

For related information, refer to Volume I, Chapter 7, *Maintenance*.

Instructions

Use this recovery procedure when a PMEM or SMEM card failure occurs.

1. Perform the following diagnostic tests on both the PMEM and SMEM cards:
 - a. Do the card diagnostic test, craft code X'0004.
 - b. Do the validate data base test, craft code X'0010.
 - c. Validate the boot block, craft code X'0020.
 - d. Validate executable header, craft code X'0040.
 - e. Validate executables, craft code X'0080.

Several possible cases can result from this set of tests that lead to different actions to resolve the problems:

- If the PMEM card fails card diagnostics and the SMEM card passes all tests, then go to Step 2.
 - If the PMEM card succeeds on the card diagnostic test, but fails any of the other tests, while the SMEM card succeeds on all tests, then go to Step 3.
 - If the PMEM and SMEM card both succeed on the card diagnostic tests, but both fail on one of the other diagnostic tests, then go to Step 4.
 - If the SMEM card fails card diagnostics and the PMEM card passes all tests, then go to Step 5.
 - If the SMEM card passes card diagnostics, but fails any of the other tests, while the PMEM card succeeds on all tests, then go to Step 6.
2. Replace the PMEM card with the card currently in the SMEM slot by doing the following (PMEM card is suspected to be defective):
 - a. Place the frame into MCOND before physically removing the CPU2 pack by entering the following command:
RST-EQPT : :MC : :MCOND ;
The frame will deny this command if it is already in MCOND.
 - b. After testing the ESD grounding strap at the ESD station, place the ESD grounding strap on your wrist and physically remove the CPU2 circuit pack while the MC is out-of-service.
 - c. Replace the PMEM card with the card currently in the SMEM slot.
 - d. Insert a spare memory card into the SMEM slot.
 - e. Physically insert the CPU2 pack into the frame.

**CAUTION:**

Replacing the CPU2 pack will cause a power reset. DO NOT interrupt this reset by pressing the FRAME RESET button.

- f. The system should be brought into service with the correct version of the executables and database. If the boot completes successfully and the database is correct, discard the bad PMEM card and continue with Step 7.

If PMEM fails to boot, run diagnostics on the PMEM card. The card diagnostic tests (craft code X'0004) will most likely fail, because the problem is most likely a PMEM card connector problem and the CPU2 board itself should be replaced. The system should be rebooted with the PMEM and SMEM cards in their original slots but with a new CPU2 pack.

3. Replace the PMEM card with the card currently in the SMEM slot by doing the following (PMEM card is suspected to contain corrupted executables or database):

- a. Place the frame into MCOND before physically removing the CPU2 pack by entering the following command:

RST-EQPT : :MC : :MCOND ;

The frame will deny this command if it is already in MCOND.

- b. After testing the ESD grounding strap at the ESD station, place the ESD grounding strap on your wrist and physically remove the CPU2 circuit pack while the MC is out-of-service.
- c. Replace the PMEM card with the card currently in the SMEM slot.
- d. Insert a spare memory card into the SMEM slot.
- e. Physically insert the CPU2 pack into the frame.

**CAUTION:**

Replacing the CPU2 pack will cause a power reset. DO NOT interrupt this reset by pressing the FRAME RESET button.

- f. The system should be brought into service with the correct version of the executables and database. If the boot completes successfully and the database is correct, continue with Step 7. (The old PMEM card may be recycled as a future SMEM card.)
4. Replace the PMEM card with the most recently archived memory card by doing the following (PMEM and SMEM cards are suspected to contain corrupted executables or database):

- a. Place the frame into MCOND before physically removing the CPU2 pack by entering the following command:

RST-EQPT::MC::MCOND;

The frame will deny this command if it is already in MCOND.

- b. After testing the ESD grounding strap at the ESD station, place the ESD grounding strap on your wrist and physically remove the CPU2 circuit pack while the MC is out-of-service.
- c. Replace the PMEM card with the most recently archived memory card.
- d. Insert a spare memory card into the SMEM slot.
- e. Physically insert the CPU2 pack into the frame.



CAUTION:

Replacing the CPU2 pack will cause a power reset. DO NOT interrupt this reset by pressing the FRAME RESET button.

- f. The System should be brought into service with the correct version of the executables and a valid but most likely not current database. If the boot completes successfully, continue with Step 7. (The PMEM card and the SMEM card may be recycled as future SMEM cards.)
5. If the SMEM card is suspected to be defective, replace the SMEM card with a spare memory card or with an older archive card that may be recycled. Do the following:
 - a. Remove the SMEM card physically from the CPU2 card. (Since the card has been found to be defective by the system, it must already be logically removed from the system.)
 - b. Insert the spare memory card physically into the SMEM slot.
 - c. Discard the bad SMEM card and continue with Step 7.
 6. The SMEM card is good but has bad information on it. Restore the SMEM card:



NOTE:

The PMEM contents are copied onto the SMEM card when SMEM is restored. Each card is then a "mirrored image" of the other.

RST-EQPT::SMEM:::BKGRND;

If the command is denied because of bad or mismatching information on the SMEM card with the message:

Warning: The SMEM Card being restored has the following problems! <message describing the problem>

If YOU STILL WISH TO PROCEED, USE FRC OPTION

Then use the command with the **FRC** option:

RST-EQPT::SMEM:::FRC:BKGRND;

You will get a response:

ARE YOU SURE? (YES/NO)

Answer YES and the restore operation should complete. Then go to Step 8.

7. To restore the SMEM card, enter the following command:



NOTE:

The PMEM contents are copied onto the SMEM card when SMEM is restored. Each card is then a “mirrored image” of the other.

RST-EQPT::SMEM:::BKGRND;

8. If there is now a replacement card in the PMEM slot, then the PMEM may not contain the latest db changes, depending on which replacement card was used. Any changes not present need to be re-done.
9. Create a new archive copy if needed (archived copy was used to replace the PMEM). Refer to GT 7.1, *Archiving the Database*.

Removing a Single-Latch Circuit Pack

7.3

When to Use Use this procedure to remove 4- and 8-inch circuit packs with a single latch.

Before You Begin You can easily damage circuit packs and other hardware by improperly removing them from the frame. Read these notes before beginning the procedure.

 **CAUTION:**
Before touching any part of the equipment frame including the PMEM or SMEM cards, any circuit pack, reset switches, ACO or LED TEST buttons, ALWAYS ground yourself to the frame with a WRIST STRAP provided with the equipment.

 **CAUTION:**
Never install or remove more than one circuit pack at a time. This could cause irreparable damage to each circuit pack.

 **CAUTION:**
No circuit card nor the SMEM memory card should be physically removed from the frame or inserted into the frame while a frame reset or reboot is in progress.

(Continued on next page)

**Before You Begin
(Continued)****NOTE:**

Main controller packs should only be physically removed/replaced when the frame is either Out Of Service (OOS) or in Maintenance Condition (MCOND).

**Related
Information**

For related information, refer to Volume I, Chapter 7, *Maintenance*.

Instructions

Use this procedure to remove a single latch circuit pack.

1. Unseat the circuit pack from the slot by carefully operating the latch.
 2. Then remove the circuit pack with one continuous motion. DO NOT ROCK THE CIRCUIT PACK BACK AND FORTH.
-

When to Use Use this procedure to install 4- and 8-inch circuit packs with a single latch.

Before You Begin You can easily damage circuit packs and other hardware by improper installation. Read these notes before beginning the procedure.

 **CAUTION:**
Before touching any part of the equipment frame including the PMEM or SMEM cards, any circuit pack, reset switches, ACO or LED TEST buttons, ALWAYS ground yourself to the frame with a WRIST STRAP provided with the equipment.

 **CAUTION:**
Never install or remove more than one circuit pack at a time. This could cause irreparable damage to each circuit pack.

 **CAUTION:**
No circuit card nor the SMEM memory card should be physically removed from the frame or inserted into the frame while a frame reset or reboot is in progress.

(Continued on next page)

**Before You Begin
(Continued)****NOTE:**

Main controller packs should only be physically removed/replaced when the frame is either Out Of Service (OOS) or in Maintenance Condition (MCOND).

**Related
Information**

For related information, refer to Volume I, Chapter 7, *Maintenance*.

Instructions

Use this procedure to install a single-latch circuit pack.

1. Remove the plastic shipping protector from the contacts of new circuit packs.
2. Insert the circuit pack into the slot. DO NOT ROCK THE CIRCUIT PACK BACK AND FORTH.
3. Raise the latch. Push on the bottom part of the circuit pack until the latch engages the slot. DO NOT push with the latch.
4. After the latch engages the slot, close the latch (pull up) to seat the circuit pack.
5. After closing the latch, with one thumb on the latch and the other thumb at the top of the circuit pack, press firmly to ensure that the circuit pack is fully seated.

Removing a Double-Latch Circuit Pack

7.5

When to Use	Use this procedure to correctly remove 12-inch DS3U and 16-inch ECCN circuit packs with double latches.

Before You Begin	You can easily damage circuit packs and other hardware by improperly removing them from the frame. Read these notes before beginning the procedure.

 **CAUTION:**
Before touching any part of the equipment frame including the PMEM or SMEM cards, any circuit pack, reset switches, ACO or LED TEST buttons, ALWAYS ground yourself to the frame with a WRIST STRAP provided with the equipment.

 **CAUTION:**
Never install or remove more than one circuit pack at a time. This could cause irreparable damage to each circuit pack.

 **CAUTION:**
No circuit card nor the SMEM memory card should be physically removed from the frame or inserted into the frame while a frame reset or reboot is in progress.

(Continued on next page)

**Before you Begin
(Continued)****NOTE:**

Main controller packs should only be physically removed/replaced when the frame is either Out Of Service (OOS) or in Maintenance Condition (MCOND).

**Related
Information**

For related information, refer to Volume I, Chapter 7, *Maintenance*.

Instructions

Use this procedure to remove a 12-inch DS3U and 16-inch ECCN circuit pack with double latches:

1. Unseat the circuit pack from the slot by carefully operating both the top and bottom latch together.
 2. Then remove the circuit pack with one continuous motion. DO NOT ROCK THE CIRCUIT PACK BACK AND FORTH.
-

Installing a Double-Latch Circuit Pack

7.6

When to Use	Use this procedure to correctly install a 12-inch DS3U and 16-inch ECCN circuit packs with double latches.

Before You Begin	You can easily damage circuit packs and other hardware by improper installation. Read these notes before beginning the procedure.

 **CAUTION:**
Before touching any part of the equipment frame including the PMEM or SMEM cards, any circuit pack, reset switches, ACO or LED TEST buttons, ALWAYS ground yourself to the frame with a WRIST STRAP provided with the equipment.

 **CAUTION:**
Never install or remove more than one circuit pack at a time. This could cause irreparable damage to each circuit pack.

 **CAUTION:**
No circuit card nor the SMEM memory card should be physically removed from the frame or inserted into the frame while a frame reset or reboot is in progress.

(Continued on next page)

**Before You Begin
(Continued)****NOTE:**

Main controller packs should only be physically removed/replaced when the frame is either Out Of Service (OOS) or in Maintenance Condition (MCOND).

**Related
Information**

For related information, refer to Volume I, Chapter 7, *Maintenance*.

Instructions

Use this procedure to install a 12-inch DS3U and 16-inch ECCN circuit pack with double latches:

1. Remove the plastic shipping protector from the contacts of new circuit packs.
 2. Insert the circuit pack into the slot and ensure that the latches are positioned to allow insertion. **DO NOT ROCK THE CIRCUIT PACK BACK AND FORTH.** Open both latches (Top - push up, Bottom - push down).
 3. Push on the bottom part of the circuit pack until both latches engage the slot. **DO NOT** push with the latches.
 4. After the latches engage the slot, close the latches (pull up top latch, push up lower latch) together to seat the circuit pack.
 5. After closing the latches, with one thumb on the top latch and the other thumb at the bottom latch, press firmly to ensure that the circuit pack is fully seated.
-

Upgrading From an EMTC to a EMTC2

7.7

When to Use

Use this procedure to replace the UM56 Enhanced Maintenance (EMTC) circuit pack with a UM75 Enhanced Maintenance (EMTC2) circuit pack.

Related Information

For related information, refer to Volume I, Chapter 7, *Maintenance*.

Instructions

Use this procedure to replace the UM56 Enhanced Maintenance (EMTC) circuit pack to a UM75 Enhanced Maintenance (EMTC2) circuit pack.

1. Enter **RST-EQPT::MC::MCOND**; to place the main controller in maintenance condition.
 2. After testing the ESD grounding strap at the ESD station, place the ESD strap on your wrist.
 3. Replace the UM56 circuit pack with a UM75 circuit pack.
 4. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
-

Upgrade KCR1 Circuit Pack With a KCR5

7.8

When to Use

Use this procedure if you are looking for a procedure to upgrade a KCR1 circuit pack with a KCR5 circuit pack.

The KCR1 MXR circuit pack is discontinued. The KCR5 EMXR circuit pack is a direct replacement for and provides all the functionality of the KCR1 pack. Enhanced ANSI DS1 Performance Monitoring Feature is additionally supported by the KCR5.



NOTE:

Lucent recommends that you upgrade at least the MXR protection pack KCR1 to KCR5 in all DS3U Units. Otherwise, in case of failure, the customer may experience a loss of service (depending on the configuration and the failure).



NOTE:

Swapping directly from a KCR1 to KCR5 circuit pack will cause a failed Software diagnostic **Hardware Mismatch** when entering the RST MMFG command.



NOTE:

The protection pack needs to be swapped first; no re-provisioning is required for it.

Instructions

1. Check the protection state

```
RTRV-STATE-EQPT::UNIT-yy::PROTN;
```

Make sure the protection pack is not protecting any service unit (refer to message 56511 in the Command and Message Manual).

The Protection State of the left-most column (MMFG P) should be USLT, not SLT.

2. Remove the protection pack

```
RMV-EQPT::UNIT-yy::MMFG-P;
```

3. Physically swap the MXR, KCR1 circuit pack with an EMXR, KCR5 circuit pack

4. Restore the protection pack

```
RST-EQPT::UNIT-yy::MMFG-P;
```

Upgrade the MXR 1 circuit pack :

5. Remove the MXR 1 circuit pack

```
RMV-EQPT::UNIT-yy::MMFG-1;
```

Note the MXR type in the output completion message **MXx00**



NOTE:

Removing the MMFG will cause an autonomous switch from the service pack to the protection pack.

6. Physically swap the MXR 1, KCR1 circuit pack with an EMXR, KCR5 circuit pack

7. Change the MXR type from MXx00 to EXx00

```
ED-PRMTR-T3::UNIT-yy::DS3-1:TYPE-EXx00;
```

8. Restore the EMXR 1 circuit pack

```
RST-EQPT::UNIT-yy::MMFG-1;
```

**NOTE:**

Restoring the EMXR 1 circuit pack will cause an autonomous switch from the protection pack to the service pack.

9. Proceed from step 5 to 8 for all the MXR circuit pack you need to upgrade from KCR1 to KCR5

Performance Monitoring General Tasks

8

Contents

■ Change Performance Parameter Thresholds	GT 8.1-1
■ Scheduling a Performance Monitoring Report	GT 8.2-1
■ Checking Performance Monitoring Data	GT 8.3-1
■ Clearing Performance Monitoring Data	GT 8.4-1
■ Check and Operate 2.048-Mb/s Line Loopback	GT 8.5-1
■ Change E1 NPC Default Threshold Crossing Alarm Mode	GT 8.6-1

Change Performance Parameter Thresholds

8.1

When to Use

Use this procedure to change performance monitoring thresholds.

Related Information

For additional information, see Volume I, Chapter 8, *Performance Monitoring*.

Instructions

To change performance parameter thresholds, follow these steps.

1. To change the default values for performance parameter thresholds, use the following command:

ED-OPT-T1::NPC:: {TYPE-mn|ALL}:rr:a,b,c;

Where:

rr = Designates the parameter to be changed
(see the following table for valid values).
set1,set2,set3 = User-programmable threshold values for the
parameter.

2. To change the facility performance parameter threshold values on a specified NPC without disconnecting and reconnecting provisioned circuits, enter the following command:

ED-PRMTR-EQPT::NPC-<NPC no.>:[ww]:rr/m[&rr/m][...]!

Where:

rr = Facility performance parameter number.
m = Facility performance parameter threshold index (0 through 3).

3. To change the threshold values for facility performance parameters on all NPCs of a particular type, enter the following command:

ED-PRMTR-EQPT::TYPE-mnxyz:[ww]:rr/<m>[&rr/<m>][...]!

Where:

mnxyz = NPC type.
rr = Facility performance parameter number.
m = Facility performance parameter threshold index (0 to 3).

4. To change facility threshold values for one or more NPCs of a particular type or *SLC*[®] bank without disconnecting and reconnecting provisioned circuits, enter the following command:

```
ED-PRMTR-EQPT: :\  
{NPC-<NPC no.>|RT-ffff|DL-ffff|TYPE-mnxyz}:  
[ww]:rr/m[&rr/m... ]!
```

Where:

- RT = Remote terminal.
 - DL = Digital Carrier Line Unit (DCLU).
 - mnxyz = NPC type.
 - rr = facility performance parameter number.
 - m = facility performance parameter threshold index (0 through 3).
 - ffff = bank identification number (0000 through 9999).
-

Scheduling a Performance Monitoring Report

8.2

When to Use

Use this procedure to schedule a performance monitoring report.

Related Information

For additional information, see Volume I, Chapter 8, *Performance Monitoring*.

Instructions

To schedule a performance monitoring report, issue the following command:

```
SCHED-PMREPT-T1::NPC-<npc No.1>[&&-<range>]:\  
:rrrrr,ssss,nn,mm1 <parameter>,llllllllll,locn,\  
aaaaa,ttttt[&&-ooooo][:p[vv][&q[vv]]];
```

Where:

- <npc No.1> = The 3- or 4-digit nonhierarchical starting NPC number.
- <range> = The 3- or 4-digit nonhierarchical ending NPC number.
- rrrrr = The interval between performance monitoring reports.
The following table lists valid intervals.

rrrrr	Explanation
{0001-1440}M	Report interval in minutes
{0001-0024}H	Report interval in hours
{0001-0007}D	Report interval in days

- ssss = The starting time for the performance monitoring reporting schedule. {00-23}{00-59} is the Hour of day/Minute of Hour Format, while CURT is the value for the current time of day.
- nn = The number of intervals over which performance monitoring is reported.
- <parameter> = The parameter for which reporting is being scheduled.
The following table lists valid parameters.

Parameter	Explanation
CRC	CRC Block Errors
FRER	Framing Errors
OFS	Out-of-Frame Seconds
ES	Errored Seconds
SES	Severely Errored Seconds
CSS	Controlled Slip Seconds
CV	Coding Violations
UAS	Unavailable Seconds
UATC	Unavailable Time Count
MER	Multiframe Errors
FEBE	Far-End Block Errors
FES	Far-End Errored Seconds
FSES	Far-End Severely Errored Seconds

Parameter	Explanation
FUAS	Far-end Unavailable Seconds
ALLPM	All parameters listed above
ALLE	All near-end parameters listed above
ALLF	All far-end parameters listed above

LV = Level
 llllllllll = The discriminating level for the requested parameter. This parameter is used to restrict report output to include only values that are above/below a defined level. The following table illustrates examples.

llllllllll	Explanation
{000000000-134217728}U	Discriminating Level-Up Direction
{000000000-134217728}D	Discriminating Level-Down Direction

Up = Parameters with values equal to or greater than the specified level.
 Down = Parameters with values equal to or less than the specified level.
 locn = The location being performance monitored. Either NEND for Near-end or FEND for Far-end.
 aaaaa = The accumulation time period for the specified parameter. The following table shows examples.

aaaaa	Explanation
15MIN	15 minute accumulator
DAILY	Daily accumulator

tttt = The age of the requested data registers at the reporting time.

oooo = This parameter may be entered as a range to specify up to four historical data registers. The following scenario shows a valid example.

If:

start time = 1205
report interval = 0001H
Number of intervals = 03
accumulation interval = 15MIN

Then:

time offset = 00015-00060

LK = Link

p[vv] = Up to two administrative links to which the scheduled report output will be transmitted. These parameters take the form of a physical administrative link number followed by a virtual circuit number, if applicable. The user may omit these optional parameters, specify a single link, or specify two links which will both receive all output generated by this scheduled report. If these optional parameters are omitted, the scheduled report output will by default be transmitted only to the link that the schedule command was received on. At the time of report, no PM report shall be sent to a link if it is out of service, or has screening option 1 and the schedule command was not received on that link

q[vv]

Checking Performance Monitoring Data

8.3

When to Use

Use this procedure to check primary block performance monitoring data for PA type NPCs.

Related Information

For additional information, see Volume I, Chapter 8, *Performance Monitoring*.

Instructions

1. To check performance monitoring data, enter the following command:


NOTE:

When the ALL option is used with this command, only the data of one performance parameter may be queried.

RTRV-PM-T1:: {NPC-<npc No.1>[&&-<range>] | ALL}::\<parameter>,aaaaa,[llllllllll],[locn],[dddd],[tttt];

Where:

<npc No.1> =	The 3- or 4-digit nonhierarchical starting NPC number.
<range> =	Optional, the 3- or 4-digit nonhierarchical ending NPC number.
ALL =	Used to request parameter counts for all NPCs of type PA. If this option is selected, only one performance parameter may be queried.
<parameter> =	The performance parameter requested.
aaaaa =	The accumulation time period for the specified parameter: either 15MIN for parameter count from a 15-minute accumulator, or DAILY for parameter count from a daily accumulator.
llllllllll =	Optional, the discriminating level for the requested parameter: 0000000000 - 345600000 followed by "U" (parameters with values equal to or greater than the discriminating level are reported) or "D" (parameters with values equal to or less than the discriminating value are reported). If not specified, default is 1U. Cannot be specified when the ALL option is selected; then the default is 0U.
locn =	The location being performance monitored: FEND for far-end or NEND for near-end (default).

- <npc No.1> = The 3- or 4-digit nonhierarchical starting NPC number.
- dddd = The requested 24-hour performance monitoring period: HIST for the previous 24-hour accumulators, CURD for the current 24-hour accumulators (default), or ALL for all current and previous daily accumulators.

**NOTE:**

If the value ALL is selected, only one NPC can be specified in the command, aaaaa must equal DAILY, MONTIM cannot be selected, and ALLPM, ALLE, or ALLF cannot be selected for <parameter>.

- tttt = The requested 15-minute performance monitoring period: HIST for the previous 15-minute accumulators, CURT for the current 15-minute accumulators (default), or ALL for all current and previous 15-minute accumulators.

2. The output of this command is handled as follows:

- If a single NPC is specified, the data requested is output for that NPC.
- If a range of NPCs is specified, the NPCs within the range that do not support the requested <parameter> will be skipped.
- If the ALL option is requested, the data for all NPCs that support the requested <parameter> is output and NPCs that do not support the requested <parameter> are skipped.

Clearing Performance Monitoring Data

8.4

When to Use

Use this procedure to clear facility performance monitoring parameters for PA type NPCs.

Only counts that exceed current threshold levels cause threshold-crossing messages or alarms.

Intervals before the previous interval may be queried using the ALL keyword, however, they cannot be cleared by manual command. Counts are cleared automatically as intervals pass, providing new errors are not counted.

Related Information

For additional information, see Volume I, Chapter 8, *Performance Monitoring*.

Instructions

Use this procedure to clear performance monitoring parameters.

1. To clear performance monitoring parameters, enter the following command:

**NOTE:**

When the ALL option is used with this command, only a single facility parameter may be cleared.

```
INIT-REG-T1:: {NPC-<npc No.1>[&&-<range>] | ALL}:: \  
<parameter>,[aaaa],[locn],[dddd],[tttt];
```

Where:

<npc No.1>	=	The 3- or 4-digit nonhierarchical starting NPC number.
<range>	=	Optional, the 3- or 4-digit nonhierarchical ending NPC number.
ALL	=	Used to clear a single parameter for all NPCs of type PA. If this option is selected, only one facility parameter may be cleared.
<parameter>	=	The monitored parameter accumulation register to be reset.
aaaaa	=	The accumulation time period for the specified parameter: either 15MIN to clear a 15-minute accumulator, DAILY to clear a daily accumulator, or ALLAI to clear both daily and 15-minute accumulators.

- locl = The facility location corresponding to the set of performance monitor registers to be reset: FEND for far-end, NEND for near-end (default), or ALL for both far-end and near-end.
- dddd = The 24-hour performance monitoring period to be reset: HIST for the previous 24-hour period or CURD for the current 24-hour period. If aaaaa = DAILY and this option is not specified, all current and previous daily counts will be reset. This option cannot be specified if aaaaa = 15MIN or ALLAI.
- tttt = The requested 15-minute performance monitoring period to reset: HIST for the previous 15-minute period or CURT for the current 15-minute period. If aaaaa = 15MIN and this option is not specified, all current and previous 15-minute counts will be reset. This option cannot be specified if aaaaa = DAILY or ALLAI.

2. The output of this command is handled as follows:

- If a single NPC is specified, the count for the requested parameter for that NPC is cleared.
 - If a range of NPCs is specified, the NPCs within the range that do not support the requested <parameter> will be skipped.
 - If the ALL option is requested, the counts for all NPCs that support the requested <parameter> are cleared and NPCs that do not support the requested <parameter> are skipped.
-

Check and Operate 2.048-Mb/s Line Loopback

8.5

When to Use

Use this procedure to check the loopback status of NPC and to change/operate the loopback. This loopback is of the entire framed signal (256 bits). The loopback is toward the line side and can be used to check transmission and alarms at the far end. The diagnostic NPC command at DACS II is used to verify the operation of the DPC (dual primary card) at the DACS II.

Related Information

For additional information, see Volume I, Chapter 8, *Performance Monitoring*.

Instructions

Use this procedure to check the loopback status of NPC and to change/operate the loopback.

1. If you want to check the current loopback status, continue with Step 2.
 - If you want to operate (or change) the line loopback, proceed to Step 4.

2. Enter the command to check the loopback status as follows:
RTRV-STATE-EQPT:[xy]:NPC-<npc No.>[&&[&]-<range>]:
[ww]:LPBK;

Where:

- xy = Optional, DACS II target ID.
- ww = Command correlation tag.
- <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, last NPC of continuous range of NPCs. Extra ampersand (&) required with hierarchical.

- If RTRV ...DENY message is received, find the reason for the denial in the output message and perform corrective action to obtain command completion.
3. Read the loopback state of the NPC from the output message and note the following about accompanying message keywords. An AIS means all 1s signal is sent downstream, and an fpa-off means that the NPC monitoring (facility performance alarms) of facility errors is disabled.
 4. To change the loopback state, enter

ED-PRMTR-EQPT:[xy]:NPC-<npc No.>[&&[&]-
<range>]:[ww]:LPBK-t;
ED-PRMTR-EQPT:[xy]:NPC-<npc No.>[&&[&]-
<range>]:[ww]:LPBK-[d]t;

Where:

- d = Loopback direction specifier. Required for PA type NPCs when initiating or stopping loopback. Optional if changing value of performance monitoring specifier (t). Not allowed for PB/PC type NPCs. One of the following:
 - E** Equipment Loopback. Loops the outgoing 2.048 Mb/s signal back to the DACS II equipment.
 - F** Facility Loopback. Loops the incoming 2.048 Mb/s bipolar signal back to the facility.
 - N** Stop Loopback.
 - t = Loopback signal transmission performance monitoring specifier. One of the following:
 - A** Initiate loopback and send AIS (all 1s) downstream, reset all facility alarms/error counts, and disable facility performance monitoring.
 - B** For PA type NPCs only. Initiate loopback, send AIS (all 1s) downstream/upstream and perform performance monitoring and alarm processing as usual.
 - C** For PA type NPCs only. Initiate loopback with transparent pass-through of the received signal, turn off performance monitoring, and freeze the alarm and parameter counts for the NPC.
 - T** Initiate loopback with transparent pass-through of the received signal.
 - N** Terminate loopback.
 - <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
 - <range> = Optional, last NPC of continuous range of NPCs. Extra ampersand required for hierarchical.
- If ED ...COMPLD message is received, find the reason for the denial in the output message and perform corrective action to obtain command completion.

5. Check the output message to verify the loopback state.
-

Change E1 NPC Default Threshold Crossing Alarm Mode

8.6

When to Use

Use this procedure to set the system-wide default threshold crossing alarm mode for all PA-type E1 NPCs. The default setting can be programmed to either allow or inhibit performance monitoring threshold crossing messages for PA-type E1 NPCs. If this procedure is not used, the default setting allows E1 NPCs to generate threshold crossing alert messages.

Use of this procedure does not affect PA-type E1 NPCs that are already provisioned; it only changes the default setting that will be used in future E1 NPC provisioning commands. To inhibit or allow threshold crossing messages for PA-type NPCs that are already provisioned, use input commands I.38221 and I.38231.

Related Information

For additional information, see Volume I, Chapter 8, *Performance Monitoring*.

Instructions

Enter the following command line:

ED-PRMTR-EQPT: :TYPE-mn: :hhh;

Where:

TYPE	=	Type of NPC
mn	=	NPC-type identifier where mm = PA for E1 NPCs.
THMODE	=	Thresholding mode
hhh	=	Thresholding mode option, set to one of the following:
hhh		Explanation
INH		Inhibit thresholding
ALW		Allow thresholding

C-bit Processing General Tasks

Contents

■ Enter Cross-Connection to CPR Pack	GT 9.1-1
■ Entering C-Bit Processing Commands	GT 9.2-1
■ Enter C-Bit Query Commands	GT 9.3-1
■ Enter Command to Disconnect from CPR Pack	GT 9.4-1

When to Use

Use this procedure to cross-connect signaling time slot 16 (telephone channel 31) from a facility NPC to a c-bit processor (CPR) pack in the DSPU. The DACS II software automatically assigns the next available CPR number and channel to the connection. The CPR pack will subsequently be provisioned to monitor and/or source c-bit patterns on the circuits (liaisons) on the facility NPC.

**Related
Information**

For additional information, see Volume I, Chapter 9, *C-Bit Processing*.

Instructions

1. Enter the cross-connect command as follows:

CONN-CRS-T0:[xy]:<npc No.>,CB:[ww]:[RDLD][,{CUS|INCL}];

Where:

xy	=	Unique ID (target ID); up to 20 characters
ww	=	Command correlation tag; up to 10 characters
<npc No.>	=	NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
CUS RDLD	=	Optional, to mark the channel (or cross-connection)
INCL	=	Required to address same NPC in command again if the NPC was marked with CUS keyword.

 NOTE:

If the CPR cross-connect capacity is exhausted, refer to the procedure to establish another CPR pack.

2. Check the output message to confirm that correct information was entered.
 3. To familiarize yourself with the use of the MAP query output for the CPR pack, enter **RTRV-CRS-T1:[xy]:<npc No.>:[ww]:MAP;** where the NPC number is for one of the CPR packs in the DSPU.
-

Entering C-Bit Processing Commands

9.2

When to Use

Use this procedure to initiate and change the c-bit processing for the circuit (liaison). The c-bit processing involves monitoring the c-bits for changed states and inserting c-bit patterns that dictate conditions (for example, signal looping) for the circuit. An NPC can be set to monitor and/or insert c-bit patterns, and NPCs in different frames can be used for each direction of the liaison. The processing is done on circuits which are electrically cross-connected to the CPR pack in the DACS II. Frames are chosen as director DACS II frames because of their location in the circuit. The three commands in this procedure can be used independently and have the following functions: one (with DD keyword) selects the read or write capability for the director DACS II, another (with BC field) selects the required c-bit pattern to be inserted, and the other one (BCOFF) discontinues the c-bit insertion.

Related Information

For additional information, see Volume I, Chapter 9, *C-Bit Processing*.

Instructions

1. Which director DACS II activity do you want to perform?
 - If **INITIATE OR CHANGE READ/WRITE CAPABILITY**, continue with Step 2.
 - If **ENTER C-BIT PATTERN TO BE INSERTED**, proceed to Step 4.
 - If **DISCONTINUE C-BIT INSERTION**, proceed to Step 6.
2. Enter the following command to specify the director DACS II function for the circuit or range of circuits connected to the CPR pack:

ED-PRMTR-EQPT:[xy]:<npc No.>-ddd[&&-eee]:[ww]:DD-m,w;

Where:

xy =	Unique ID (target ID); up to 20 characters
ww =	Command correlation tag; up to 10 characters
<npc No.> =	NPC number of facility termination on the director DACS II, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
ddd =	Channel number (01 through 30) on same NPC for subject circuit.
eee =	Optional, to name last channel of range of circuits associated with same CAS signal; up to 30 channels.
m,w =	Specifies monitoring (m) and/or writing (w) the c-bit pattern at the CPR pack. Enter one of the following for each: 1 to enable, 0 to disable, and a dash (-) for no change from existing. However, both (m) and (w) cannot be set to a dash (-) at the same time.

3. Check the output message to confirm that correct information was entered.
4. Enter the required c-bit pattern for the circuit(s) using the hexadecimal notation in the command as follows:

**ED-PRMTR-EQPT:[xy]:<npc No.>-ddd[&&-eee]:
[ww]:BC-X-abcd:[INCL][,RDLD];**

Where:

- xy = Unique ID (target ID); up to 20 characters
- ww = Command correlation tag; up to 10 characters
- <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- ddd = Channel number (01 through 30) on same NPC for subject circuit.
- eee = Optional, to name last channel of range of circuits.
- abcd = Hexadecimal notation for the 14-bit pattern to be sent on the addressed c-bits. Except for digit-a which only specifies 2 bits, each Hex digit represents 4-bits of the pattern.
- INCL = Required to change pattern that was previously entered with the RDLD designation added to indicate special circuit.
- RDLD = Optional, to designate a special service circuit.

5. Check the output message to confirm that correct information was entered.
6. Enter the following command to discontinue inserting prescribed c-bit pattern on circuit(s):

**ED-PRMTR-EQPT:[xy]:<npc No.>-ddd
[&&-eee]:[ww]:BCOFF[:INCL];**

Where:

- xy = Unique ID (target ID); up to 20 characters
- ww = Command correlation tag; up to 10 characters
- <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- ddd = Channel number (01 through 30) on same NPC for subject circuit.
- eee = Optional, to name last channel of range of circuits.

7. Check the output message to confirm that correct information was entered.

Enter C-Bit Query Commands

9.3

When to Use

Use this procedure to enter c-bit query commands.

Related Information

For additional information, see Volume I, Chapter 9, *C-Bit Processing*.

Instructions

1. Which information are you looking for?
 - If **DIRECTOR FUNCTIONS OF C-BIT(S) FOR CHANNEL/ CHANNEL RANGE**, continue with Step 2.
 - If **DIRECTOR FUNCTIONS ON NPC/NPC RANGE**, proceed to Step 4.
 - If **C-BIT STATE AND PATTERN FOR CHANNEL**, proceed to Step 6.
 - If **C-BIT STATE AND PATTERN FOR NPC/NPC RANGE**, proceed to Step 8.

2. Enter the following command for the desired channel or range of continuous channels:

RTRV-STATE-EQPT:[xy]:<npc No.>-ddd[&&-eee]:[ww]:DD;

Where:

- xy = Optional, DACS II unique ID (target ID); up to 20 characters.
- ww = Optional, command correlation number; up to 10 characters.
- <npc No.> = NPC number of facility or bridging NPC, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- ddd = Channel number of circuit (liaison); 01 through 30.
- eee = Optional, last channel of range of channels on same NPC; maximum range 30.

3. Check the output message to confirm that correct information was entered; proceed to Step 10.

4. Enter the following command for the desired NPC or range of NPCs:

RTRV-STATE-EQPT:[xy]:NPC-<npc No.>[&&&-<range>]:[ww]:DD;

or to see all transmit Director DACS II c-bits enter

RTRV-STATE-EQPT:[xy]::[ww]:ALL:DDCT;

⇒ NOTE:

The command with DDCT includes c-bit patterns. This command may take up to 30 minutes to complete for a full 3-bay frame.

Where:

- xy = Optional, DACS II unique ID (target ID); up to 20 characters.
- ww = Optional, command correlation number; up to 10 characters.
- <npc No.> = NPC number of facility or bridging NPC, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, last NPC number of range of NPCs.

5. Check the output message to confirm that correct information was entered; proceed to Step 10.
6. Enter the following command for the desired circuit (liaison):

RTRV-STATE-EQPT:[xy]:<npc No.>-ddd:[ww]:BC-s;

Where:

- xy = Optional, DACS II unique ID (target ID); up to 20 characters.
- ww = Optional, command correlation number; up to 10 characters.
- <npc No.> = NPC number of facility or bridging NPC, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- ddd = Channel number of circuit (liaison); 01 through 30.
- s = Selects c-bit information (state and pattern) for either c-bits received by CPR (s = R) or transmitted from CPR (s = T).

7. Check the output message to confirm that correct information was entered; proceed to Step 10.
8. Enter the following command for the desired NPC or range of NPCs:

**(RTRV-STATE-EQPT:[xy]:NPC-<npc No.>[&&[&] -
<range>]:[ww]:BC-s;**

or to see all c-bit patterns enter:

RTRV-STATE-EQPT:[xy]::[ww]:BC-D:ALL;

Where:

- xy = Optional, DACS II unique ID (target ID); up to 20 characters.
- ww = Optional, command correlation number; up to 10 characters.
- <npc No.> = NPC number of facility or bridging NPC, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, last NPC number of range of NPCs. Extra (&) ampersand needed for hierarchical.
- s = Selects c-bit information (state and pattern) for either c-bits received by CPR (s = R or D) or transmitted from CPR (s = T). Option D gives a condensed format; ALL command can only be used with s = D.

9. Check the output message to confirm that correct information was entered.
10. Read the information from the output message using the following guidelines:
 - For the "Provisioning of C-BIT as DD" output for the **RTRV . . . DD** query, "0" means not selected and "1" means selected. The output for each channel is in the form -mw for monitor, write; this format is repeated for all channels on NPC or range of NPCs as requested.
 - For the "STATUS OF C-BIT" output for the **RTRV . . . BC** query, the status of the c-bits for each channel is given as one of the following: Z0 for all zeros (idle), NA for network alarm, UP for not provisioned, or UN for undetermined, or framed.
 - If the status of the c-bit is framed and the director DACS II function for the c-bit is to write, the c-bit pattern inserted by the CPR will be given for the channel or range of channels.

Enter Command to Disconnect from CPR Pack

9.4

When to Use

Use this procedure disconnect signaling time slot 16 (telephone channel 31) connection from a facility NPC to a c-bit processor (CPR) pack in the DSPU. The DACS II software automatically finds the CPR number and channel of the connection. The disconnection would be required if the circuits were changed and the director DACS II functions were no longer needed for the same NPCs or if the NPCs were going to be degrown from the data base.

NOTE:

All director DACS II functions must be disabled (DD=0,0) and c-bit insertion must be turned off (BCOFF) before the circuit can be disconnected.

Related Information

For additional information, see Volume I, Chapter 9, *C-Bit Processing*.

Instructions

1. Enter the disconnect command as follows:

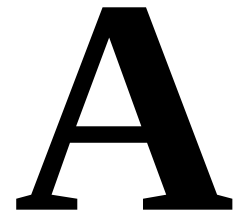
DISC-CRS-T0:[xy]:<npc No.>,CB:[ww]:[INCL][,OOS];

Where:

- <npc No.> = NPC number of facility termination; either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- INCL = Required to disconnect from CPR if connection was made with the special service designation (RDLD) or (CUS).
- OOS = Required to disconnect the facility NPC from the CPR if the facility NPC is out-of-service. The OOS word is not needed if the CPR is out-of-service.

2. Check the output message to confirm that correct information was entered.
-


Command Denials



Contents

■ Background	A-1
Introduction	A-1
Objective	A-1
■ Clear Command Denials	A-2
Overview	A-2
Denial Message Command Strings	A-2
Common Causes	A-3
DENY Output Message	A-4

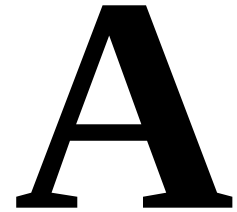Command Denials



Background

Introduction

DACS II will respond with a command denial message when an incorrect command is entered, there is trouble in the system (either software or hardware), or when an operator enters a command which has been restricted by the system administrator.

Objective

This chapter provides information to recognize clear command denials.

Clear Command Denials

Overview

When a user inputs an invalid command, the DACS II system denies the command and displays a denial message. The two types of denial messages are:

- Frame Denial Message
- Hexadecimal Condition Code Message.

Denial Message Command Strings

DACS II responds with a word strings in the denial message after a command is entered incorrectly or equipment is not operating properly. The following table provides the word string and the corrective action required to obtain command completion

Word String	Corrective Action
INACT	The INACT message indicates that the command is invalid with the feature package being used.
BAD SYNTAX	Determine the portion of the command that was in error from the designator (BAD VERB/FRM ERR/SEQ ERR) in the message and reenter the command with the correct information. If you do not understand how to correctly construct the command, you can get on-screen help using the help routine (initiated by entering a question mark, ?)  NOTE: The DACS II indicates where the input error occurred, by placing = signs around the word or portion in the echoed command.
ERR, ABT	Reenter the command; a transient frame condition may have caused the command to be aborted. If the command is aborted again, check the printout to find associated trouble messages
MC OOS	The MC (main controller) must be restored to service to execute the command
MCOND	The MC is in the maintenance condition, and only commands which are considered frame maintenance commands can be used
MC INSERVICE	The MC must be in the maintenance condition to execute certain PMEM and SMEM commands
MPDBASE	The main processor data base is not loaded
RESTRICTED, STOPPED	Only users who have been assigned the use of restricted maintenance commands can use the command. The use of this set of commands is enabled by the frame administrator who enters the SET-PRVG command with option RMON for the user

Clear Command Denials (Continued)

Common Causes

Command denials can be categorized under common causes. The following table provides the denial descriptions and corrective action required to obtain command completion:

Command Denial	Corrective Action
Input Error	Check each field of the command entry on the screen or printout against the documented command to find the error
Not Equipped, Not In-Service, or Failed	The named equipment is not grown (equipped) or in-service to support the execution of the command. The commands to create and restore the plug-in to service are covered in provisioning in Volume 1, and procedures to clear failed plug-in and trouble messages are in this trouble-clearing volume.
Incorrect NPC/Channel Number	Check each side of the cross-connect command to find incorrect numbers that are already assigned or assigned differently. There are query commands in the cross-connect procedures to obtain information about existing connections on the frame
Invalid Parameters	Check each field of the command entry against the documented command to determine which keyword is incorrectly used
Boot Failed	This is a specific restore command denial. Reenter the restore plug-in command and subsequent diagnose command in an effort to get a DGN ...STF message for which there is trouble clearing in the respective trouble-clearing chapter. If no DGN ...STF message is obtained but the denial persists, replace the plug-in to be restored

Clear Command Denials (Continued)

DENY Output Message

The Deny output message provides a 4-digit error code which appears on a line by itself and the remaining lines which give the explanation of the error code. Table A-1 provides the error codes.

Error codes starting with the same letter are in the same general category; for example, I for input, E for equipage, S for service. The code is taken from letters of the key words that constitute the meaning of the code.

(Continued on next page)

Table A-1. mmmm Condition Codes

mmm	<i>Explanation</i>
ENEQ	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS CPR is not equipped Copy source NPC is not equipped DSPI not equipped, not in service, or failed DSPU is not equipped Database corrupt ETSI not equipped, not in service, or failed FC not eqd, not IS, or failed or inactive side FC not eqd or not IS FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS FTMI not equipped, not in service, or failed MIU is not equipped Mate NPC is not equipped NPC not equipped NPC not provisioned as DGA NPCTG not grown NPCTP is not grown No CBTYPE NPC equipped No DSP unit equipped Not enough DSPPs are equipped Protection MIU is not equipped Protection entity is unequipped Required FLI not equipped, not in service, or failed Required MIU not equipped, not in service, or failed Required MXR not equipped, not in service, or failed SYNC TB is not equipped Service MXR is not equipped Subject entity is not equipped Sync source NPC is not equipped TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS The MXR is not grown The pair MXR is not equipped Unit not equipped, not in service, or failed Test group unequipped Virtual SLC NPC not provisioned
ENFE	Cross-connect not consistent with feature package Software does not contain Enhanced CEPT feature Subject NPC does not support CEPT BER feature
ENIE	Option rr/m has not been set up on 2nd database Termination is not connected as indicated
ENRE	Two confs. were prev. connected or the concat. cause BRD-BBL loop Corresponding NPC for FROM virtual channel is not provisioned Corresponding NPC for TO virtual channel is not provisioned Corresponding NPC for virtual channel is not provisioned

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	FROM NPC is not provisioned as DGA
	Illegal connectivity specified
	NPC not provisioned for CAS
	NPC not provisioned for NSA
	PMEM type no longer supported
	SMEM is a normal SMEM
	SSC circuit pack is still equipped; pull-out/remove SSC
	Subject entity is equipped
	TO NPC is not provisioned as DGA
ERLC	Attempt to remove DGA w/o INCL keyword or prior prot. sw. request
	Customer control or red circuit exists
	DGA protected; use INCL to remove, or unswitch protection
ICNV	PM scheduling report is already allowed for this entity
	PM scheduling report is already inhibited for this entity
	TS0 is crossconnected to TS0
	Bit value not allowed for NPC type
	Current error corrector pack type specified in command
	Current Hub id specified in command
	not allowed for clear 2MB
IDMS	Both FAC and PRIM values(keywords) are required
	INCL keyword needed to perform this command
	INCL must be specified for SRDC ckts
	SIDE must be specified for substrate NPC
	Some priority values required
	Unspecified L2 address
IDNC	FDL selected with width not 1
	Inconsistent or invalid circuit type for Nx64Kbit TA
	Old or new is a non-channelized type in a DS0 command
	One NPC is a non-channelized type and the other is not
	Some priority values not required
	TG width incompatible with circuit
	The two FADS entered are not associated with one another.
	Incompatible HUB feature types
	Inconsistent BCON width for test access
	Inconsistent HUB width for specified TG
	Invalid channel designation for BCON
	Not all FROM channels on same NPC
IDNV	A locally switched channel is specified as BBL, LEG, or BRD
	A substrate circuit pack is specified in the command line
	AIS entered for MONE/MONF/MONEF/SPLTA/SPLTB/SPLTAB
	AIS invalid for cross-connection specified
	AIS keyword incompatible with NPC type
	Adding two digroups from one bank on same DDC

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Alarm option and bank mode don't match
	All NPC(s) are either not valid or not grown
	Attempt to broadcast a locally switched channel
	Attempt to one way cross-connect a locally switched channel
	BER must not be less than 4 for Clear DS1
	Bad PRIM X'efgh values
	Bank id number not found
	CPR circuit pack specified in the command
	Can't Use LCN 0/LGN 0 - designated as a supervisory channel only
	Can't delete because not all associated NPCs of the RT are entered
	Command not allowed
	Conference first channel doesn't match input
	Conference port cannot be dropped out of conference by switch command
	Conference port is not in conference circuit
	Connectivity can not be specified for CEF unit
	Counting sequence and operational mode don't match
	Cross-connect a non Mode I channel to DCLU
	Cross-connect a non SLC channel to DCLU
	DGA and DGB must be specified together in the command
	DGA with NDL option is not provisioned with D4 or ESF framing format
	DGA/DGP of RT/DL Mode I must be assigned to one DDC
	DGC and DGD must be specified together in the command
	DGP designated to bank without data link
	Digroup name and bank id don't match
	Digroups from same bank are added to two different FTUs
	Digroups from same bank have different counting sequence
	Digroups from same bank have different modes
	Duplicate L2 address
	Duplicate ports specified
	ENQ/ACK flow control is supported only on Snider link
	Error in input
	Framing format, digroup name & operational mode don't match
	INCL not specified and at least one NPC In Service
	IU type NPC(s) cannot be provisioned for Minor Alarm
	IW option is not allowed for new type of Clear-DS1 NPC
	Inconsistent Signaling on CEPT NPCTGs
	Inconsistent channel range width
	Invalid CEPT NPC
	Invalid CFT code
	Invalid FPI value
	Invalid FROM channel number

Table A-1. mmmm Condition Codes (Continued)

mmmm	<i>Explanation</i>
	Invalid MIU/MXR type specified
	Invalid NPC addressing scheme specified
	Invalid SLC Mode-III channel number
	Invalid TC specification
	Invalid TO channel number
	Invalid channel 000 cross-connection specified
	Invalid channel 031 cross-connection specified
	Invalid channel number
	Invalid circuit type
	Invalid keyword(s) combination specified
	Invalid line number
	Invalid link number specified
	Invalid poll time
	Invalid switch request for DCLU
	Leg type mismatch
	MUX or TRB invalid for cross-connection specified
	Mode I RT/DL IDs don't match for DGA/DGP on same DDC
	NAM invalid for cross-connection specified
	NDL option is specified for DGA
	NDL option is used without DGA
	NPC containing channel 000 is invalid type.
	NPC is a DGP
	NPC is channelized type
	NPC is not part of a one-way connection
	NPC number and bank id don't match
	NPC number and digroup name don't match
	NPC parameter only valid with TU type TLI
	NPC type is not DS type
	NPC type option Y is invalid for SLC-96 NPC
	NPC used as a timing reference
	NPC(s) actual type incompatible with TYPE keyword and/or alarm type
	No OOS keyword is given for out-of-service NPC
	No PM data available
	No mapped circuit under test; emode/fmode can't be changed.
	Number of transmitting ports does not match existing conference
	OLD and NEW Data and Parity channels partially overlap
	OLD and NEW channels cannot be the same
	OLD data channel cannot be parity channel type
	Old and new are the same NPC in a DS1 command
	One-way circuit under test; emode can't be changed.
	Operation mode and digroup name don't match
	Option not programmable for this NPC type

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	PWR/MISC alarm is specified to a digroup other than DGA
	Parameter only valid with PA, PB, or PC type NPCs
	RT-DCLU cross-connect with different channel number
	RT-DCLU cross-connect with different ids
	RTF keyword and the operation mode does not match
	RTF keyword is used without DGA
	Range entered without FRC keyword
	Range not allowed for circuit type
	SC invalid for cross-connection specified
	Selectable AIS not valid for specified NPC(s) type
	Side specified for non-duplicated NPC
	Signaling processing is not activated for the channel
	Superuser logged on
	TG East/West type inconsistent with each other or circuit
	TS0 specified with width not 1
	TS16 specified for CAS TG
	TS16 specified for test with width not 1
	The RT id entered is not a retrofit one
	The common bit(s) is(are) not set in both FAC & PRIM
	The facility parameter not programmable for specified x or z parameter
	The parameter specified does not match with the NPC type
	The specified parameter is not applicable to operation mode of the RT
	Trunk type is not allowed in the circuit specified
	Unmatched channel range
	Unmatched channel range involving SLC Mode III termination
	Unrunnable CFT code
	Using the 24th channel of a DMI NPC
	Using the 24th channel of a T1DM NPC
	Virtual circuit is not specified for X.25 link
	XON/XOFF flow control is supported only on Snider link
	ZBTSI option is only valid with the ESF mode
	Emode/fmode can't be changed under current test mode.
	x & z parameters on DSxyz are inconsistent
IDRG	Command did not execute for any entity specified in the command
	Ending channel is out of range
	First and Last NPCs are outside a module boundary
	First and Last NPCs are outside unit boundary
	Invalid FROM channel number range
	Invalid TO channel number range
	Invalid range for specified FROM NPC type
	Invalid range for specified NPC type
	Invalid range for specified TO NPC type

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	NPC range crosses unit boundary
	OFFSET range is invalid
	Old and New channel on same NPC and within the range
	Only up to 4 historical data registers are allowed
	TG width too large for single NPCTG
	Threshold value is out of range
	Unit type (xyz) not supported
	input channel out of range (SLC not supported)
IICM	Clear gateway test access disallowed.
	SRDC timeslots are allocated on this NPC
IIDT	AIS not entered for SPLTE/SPLTF/SPLTEF/LOOPE/LOOPF
	Database conference width does not match the range in input command
	Illegal BBL BBL combination
	Illegal BBL SYM combination
	Illegal BRD BRD combination
	Illegal BRD SYM combination
	Illegal LEG LEG combination
	Illegal SYM BBL combination
	Illegal SYM BRD combination
	Invalid change from previous mode
	Invalid change parameter combinations
	Invalid input BBL as fmd in ONE-WAY command
	Invalid input BBL in terminated TWOWAY/ONEWAY command
	Invalid input BRD as tmd in ONE-WAY command
	Invalid test mode for a one-way test session
	Invalid test mode for an unmapped test session
	Invalid use of CONV keyword
	NPC is a channelized NPC
	NPC is a non-channelized NPC
	NPC is not a F-end
	NPC is not a Facility Access Digroup
	NPC is not an E-end
	NPC type mismatch
	No NPC's out of service and OOS keyword used
	No RDLT or CUS circuits and INCL keyword used
	Report interval is not an integral number of accumulation interval
	TO side is not a DMB type NPC
	This NPC type does not allow unframed Clear-DS1
	Transmission parameters in command will not change existing settings
	Trunk conditioning is invalid
IIFM	Bad FAC value entered

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Exceeded depth limit of 6 on broadcast conference concatenation
	FMC cannot be cross-connected in this format
	Invalid FROM NPC type for AIS insertion
	Invalid NPC type for AIS insertion
	Invalid TO NPC type for AIS insertion
	Try to operate a ONE-WAY conference with a TWO-WAY input command
	Try to operate a TWO-WAY conference with an ONE-WAY input command
IPNV	Accumulation Interval field is missing
	Accumulation Interval field is not allowed
	FAC keyword is invalid for this feature
	Historical data can not be specified
	Interval is not valid/not available
	Invalid direction specified for NTST TLA/TLR
	Invalid parameter combination
	Invalid use of INCL keyword
	Level field is not allowed
	MONDAT keyword is invalid for this feature
	MONDAT set to ALL is not allowed
	MONTIM set to ALL is not allowed
	Mismatch between channel 0 crossconnect and keywords
	Monitored Date field is not allowed
	Monitored Time field is not allowed
	NPC is non-channelized
	NPC number out of range
	No PM data available
	Only 15MIN for accumulation interval is allowed
	Only DAILY for accumulation interval is allowed
	Only historical data can be specified
	Only one parameter is allowed
	PRIM keyword is invalid for this feature
	Scheduled reporting for this npc is inhibited
	Scheduling report could not be found
	The MONDAT and MONTIM parameters can not both be specified
	This NPC type does not allow Payload
NCON	No conditions
SAAL	Feature is active
	Manual Pending is Active
	PA NPC threshold already in allow mode
	Protection switching is already allowed
	The switch is allowed (not inhibited)
SAAS	All channels assigned, cannot be grown as NPCTG

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Another NPC is grown and added as this digroup
	BCON BBL has one or more legs under test
	Channel(s) is already registered
	Channels assigned, cannot be grown as test group
	Channels assigned, cannot be grown as test port
	Conference Port is currently registered to a different channel
	New bank id is an assigned one
	TG number previously assigned
	Termination is already assigned
	Termination is in process of being rolled
	The MIU is already equipped
	Channel already under test
	Channel part of a TP or TG
	Circuit contains mapped channels for HUB request
SAIN	Loop back inhibited for digroup
	No mapped slots on a tsi
	No unmapped slots on a bus
	PA NPC threshold already in inhibit mode
	Parity channel cannot be within the range of a DS0 command.
	Protection switching is already inhibited
	Subject entity is pested
	Termination is under test or is a test port or group
	The switch is already inhibited
	Can't change option, inhibition is active
SAIS	Both syncs are in-service
	CCN side s is in service
	CRO is still equipped
	Conference already exists
	DS3U NPC already In-Service
	DSPI is in service
	MIU is already in service
	Mate NPC (DGA/DGP) is in service
	NPC not IU/TI type
	Some TLIs are still equipped
	Some TSIs to degrow are in service
	Subject entity is in service
	TLI 3 or 4 still equipped
	Test group is not idle or frame is not In Service
	Test port is not idle or frame is not inservice
	The MMFG is already In-Service
	The MXR is in service
	The selected FLI is IS and Pested and at least 1 Service MXR is eqd
SAOP	RT's alarm exists

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
SAOS	This signal is already being sent
	A DMB on the Unit is OOS
	Both syncs are out-of-service
	CCB is out of service
	CCI is out of service
	CCN side s is out of service
	CCNI is out of service
	DSPI out-of-service
	ETSI is out of service
	FC out of service
	FLI is out of service
	FMT is out of service
	FTMI is out of service
	File has already been cleared
	Formatter (FMT) on active CCN side is Out-Of-Service
	IU/TI type NPC failed
	MIU is out of service
	MXR is out of service
	Mate CCN side is out of service
	Mate SYNC is out of service
	NPC out of service or failed
	Protection MIU is out of service
	Protection MXR is out of service
	Protection entity out of service or failed
	SYNC is out of service
	Service MIU is out of service
	Service MXR is out of service
	Subject entity is out of service
	Sync 0 is not in-service
	Sync 1 is not in-service
	The MMFG is Out Of Service
	The mate FLI is OOS and Protection MIU is equipped
	The mate FLI is OOS and Protection MXR is IS
	The mate FLI is OOS and at least one Service MXR is equipped
	The protection FLI is out of service or pested (TOPRTN option)
	The selected MIU associated with the NPC is Out-Of-Service
	The selected MXR associated with the NPC is Out-Of-Service
	The service FLI is out of service or pested (TOSRVC option)
	UC is out of service
SAPS	Frame ID is protected
	The Service MMFG is already under protection
	The protection FLI is already selected (TOPRTN option)
	Can't change option, protection switch is active

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
SAPV	Option LOCAL already exists Option REMOTE already exists
SARB	Exceeded limit of reports with accum. interval of 15 min. or less Exceeded maximum limit of PM reports
SARL	No FADs were activated by link n No test ports were activated by link n
SATF	Can't run test on active side
SAWS	An autonomous switch is in progress C-bit modify function is active C-bit operations are enabled Conference exists in a DMB Mapped slots exist on a tsi NPC already allocated as sync timing source NPC already grown as non-synchronization source NPC already has Equipment Loopback NPC is already grown and added as SLC digroup The Service MMFG is not under protection The service FLI is already selected (TOSRVC option)
SNAS	Connectivity contains unequipped units
SNIS	CPR is out of service Cannot clear journals for OOS unit DSPU unit controller is out of service NPC is OOS for a TGR command and OOS keyword not specified NPC unequipped, out of service or failed RT/DL has unrestored DGA Sync source NPC is not inservice TD on one(both) sync(s) is not equipped or not in-service Unit(s) OOS, and additional backup required
SNOS	In-service NPC change not allowed Subject PWR to be cleared is not failed
SNVS	(Timing Distributor) TLI is not equipped 1 hr >= 24 hr for DM opt 15 min >= 24 hr for ERS opt 15 min >= 24 hr for SERS opt 15 min >= 24 hr for SLIP opt 15 min >= 24 hr for US opt 3 Timing Distributor type TLIs are equipped A DMB mode was assigned to a FTU-type NPC on the input A loopback is active on the FROM termination A loopback is active on the TO termination A user is already logged in on the link/vc Active CCN side is out of service Adding DL DGP forbidden for SLC 96 MD 1

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Alarm bits cannot be passed through or inverted
	All digroups not out of service
	Another signal already active prevents this signal from being sent
	Assignment of single priority to multiple SSPs
	At least one UC is OOS or At least one UC is failed
	At least one UC is not the correct type
	Attempt to add to a null transmitting port
	Attempt to remove a Service MIU which is under protection
	Attention: preceding ccode 83 is an anomaly - see problem list
	Autonomous loopback is active on DGA
	Backup required before executing this command
	Bad sync mode
	Bad use of INCL, cannot override the current state of the conference
	Bad use of INCL, cannot use keyword on conf.-to-conf. connection
	Bit 3 provisioned for use as RAI3
	Bit 4 provisioned for use as RAIS
	Bit 4 provisioned for use as RBER
	Bit 5 provisioned for use as SFI
	Bit c not settable
	Bits 3 through 8 are provisioned for Transmic 1G
	Boot in progress, can't service request
	Both ITS TG bundles must be on same TG193B card
	Both sides of CCN are OOS
	Broadcast unassigned channel/NPC in QRY,TO
	C-bit modify function is disabled
	CATP due to skipping continuity test for FMT
	CCB is inservice but failed
	CCI is inservice but failed
	CCI is not present
	CCNI is inservice but failed
	CPR in buffer overflow condition
	CRO type TLI (SSP portion not required)
	CUS flag doesn't match that of conference
	Can not create any more users
	Can not execute privileged command
	Can not perform DMB CHG on input direction A
	Can not perform DMB CHG on input direction B
	Can not perform DMB CHG on input direction F
	Can not perform DMB CHG on input direction G
	Can not perform DMB CHG on input direction L
	Can not perform DMB CHG on input direction T
	Can not remove Frame administrator
	Can not remove own link

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Can not use 12-th TP when NPCTP is in the T1DM or DMI mode
	Can't disconnect return leg unless entire conference disconnected
	Can't mount or unmount BOTH_MEM
	Can't mount or unmount PMEM
	Can't mount or unmount SMEM
	Can't mount or unmount password recovery card
	Can't perform DMB CHG because NTR flag set on FROM side
	Can't perform DMB CHG because NTR flag set on TO side
	Can't RST MC CLR when a unit is equipped
	Can't start new session - previous session still verifying
	Change not valid
	Change to T1DM digroup with cross-connect that is not TRSP
	Change to non-ESF digroup with 16-state cross-connect
	Channel has a FAR, which is within the range
	Channel or NPC not bridged
	Channel out of bound in a BCON/v.c
	Channels and conference port do not match
	Clock absent for XPC to loop back
	Combination of bit g (b7) and h (b8) is invalid
	Command and protocol are inconsistent
	Command invalid while backup in progress
	Command is Frame administrator (DAX) only.
	Conference Port is already registered to the same group of channels
	Conference is LPD: has no switchable return leg
	Conference is NTR: has no switchable return leg
	Conference port is currently connected
	Conference port is not registered
	Conversion leg is terminated
	Cross-connect to CPR is required
	Customer controlled circuit, INCL not entered
	DB MP or units ram error
	DB retrofit fail
	DCTN conference channel cannot be rolled
	DGA is not added
	DGN on subject entity denied
	DGP is protecting a primary digroup
	DL ffff is used w/ operational mode other than Mode I
	DMI combined with T1DM
	DSPP not in service, or failed
	DSPP pack FTMI Failed or Out of Service
	DSPP pack NPC Failed or Out of Service
	DSPP pack UC Failed or Out of Service
	Database is empty

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Database is not empty
	Database not loaded
	Delete or change a leg from a conference that has no leg
	Deny Clear-2MB for Alternate Maps
	Deny SLC for Alternate maps
	Deny SP Type NPCs for Alternate Maps
	Deny non-channelized NPCs for Alternate Maps
	Designated TG or circuit to be tested in process of being rolled
	Different DSxyz types are used for DGA/DGP on same DDC for Mode I
	Digroup is protected
	Disable not allowed - supports another feature
	ETSI cannot be initialized when ECCN side is OOS or inservice but pested
	ETSI is inservice but failed
	ETSI is not present
	Entity can't be addressed in this configuration
	FC is inservice but failed
	FLI is inservice but failed
	FMT is in service but failed
	FPI on SMEM does not match one on PMEM
	FRC specified for protection, and service MMFG is In Service
	FROM is a two-way and no CONV specified
	FROM is not a backbone leg
	FTMI is PESTED
	FTMI is in service but failed
	FTMI type error
	Feature deactivation would leave system with core software
	Feature not enabled
	File already exists
	File doesn't exist/can't be accessed
	File is being accessed
	File is empty
	Firmware timing invalid for Transmic 1G NPC
	Flash Card is bad
	Flash Card is empty
	Flash Card is not present
	Frame is not in MCOND
	Frame time is not set
	Framed/Unframed clear 2Mbit/s NPC invalid for Automatic CRC-4
	Framed/Unframed clear 2Mbit/s NPC invalid for Firmware Timing
	Framed/Unframed clear 2Mbit/s NPC invalid for Transmic 1G, 2G
	G1 SMEM for SMEM->PMEM w/journals

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	G4 to G4.1 retrofit failed
	Gateway test access not supported
	Hardware mismatch or not present
	INCL keyword needed when restricted Insertion Word specified
	IW is UMUX (18) but NPC not type DE4yz
	IW not allowed to be specified in Clear 2Mbit/s
	Illegal SSP type (not same as other SSPs)
	Illegal priority value
	Illegal test access mode for TS0
	Illegal test access mode for TS16
	Improper roll command sequence
	Inactive side NPC out of service and inactive side in service
	Incompatible types of NPCs on a circuit pack
	Incorrect language/addressing mode
	Incorrect number of parameters
	Incorrect or missing password
	Incorrect pack type in slot
	Initialization of application in progress, retry command later
	Input BRD (BBL) has same NPC and channel as BBL (BRD)
	Insufficient data for setting up a conference
	Integrated Test Set is currently active on TG
	Invalid NPC number specified
	Invalid PWR/MISC alarm level
	Invalid combination of "x" and "y" values
	Invalid combination of "x" and "z" values
	Invalid executable on card
	Invalid option, mailbox or flag
	ITS NPC Hardware Error
	ITS TG Already Generating
	ITS TG Already Monitoring
	ITS TG is Idle
	ITS TG Not Generating
	ITS TG Not Monitoring
	LEG mode was assigned to a DSPU-type NPC on the input
	LLB not initiated
	LPD invalid since existing conference is not already LPD
	Language "F" provisioned for this channel
	Language is not allowed
	Last link in service
	Line Loop Back is active
	Line format types are incompatible
	Link being used is not Link 1
	Logical conflicts found in the map

Table A-1. mmmm Condition Codes (Continued)

mmmm	<i>Explanation</i>
	Looped Circuit Access not allowed
	MP database not consistent with Configuration file
	Major/Minor BER threshold value is invalid for SLC NPCs
	Maj Min BER threshold is 7, but not in T1DM or Fe mode
	Map/macro file write deferred until backup is completed
	Mapped parity channel(s) on new
	Mate RT/DL mode is different
	Mate sync pack denied command
	Maximum number of CPRs have already been grown for this unit
	Minor <= major for BER opt
	Minor >= major for COFA opt
	Minor >= major for SLIP opt
	Minor Slip threshold disabled before Major Slip threshold
	Mismatch between MXR and NPC types
	Mismatch between service MXR and protection MXR types
	New NPC already cross-connected or mapped channel(s) exist on New
	NPC addressing scheme selected is not allowed in the configuration file
	NPC as 12th test port can not change to DMI nor T1DM
	NPC has active circuit
	NPC has been designated as NPCTG
	NPC has been designated as NPCTP
	NPC invalid type
	NPC is NPCTG and chan 24 is used in a TG; Can't change to T1DM or DMI
	NPC is NPCTG, changing to CAS/NSA is not allowed
	NPC is a Facility Access Digroup
	NPC is a test port
	NPC is not a NPCTG
	NPC is not a NPCTP
	NPC is not added
	NPC is not designated for this NPCTP/NPCTG
	NPC is still provisioned to provide sync timing
	NPC not DA or TA type.
	NPC not deleted
	NPC not designated as sync timing source
	NPC providing timing to inservice SSP
	NPC type error
	NPC type is inconsistent with FTMI type
	NPC type option xyz is unassigned or invalid for feature package
	NTR invalid since existing conference is not already NTR
	New NPC same as existing one

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	New in CGA or PBA
	No CBTYPE NPC capacity remaining
	No DL digroups can be added until the associated RT bank is created
	No Facility Line Interface (FLI) is In Service
	No SAFE alarm for DGP
	No available timeslots on any inservice NPCS associated with FC/FMT
	No edit session active
	No equalization for CEPT FTMI
	No macro is currently executing
	No mapped channel on old
	No protection switch is currently active
	No signals active
	No unmapped time slot
	No user is logged in on the link/vc
	No user/link needs to be changed
	No zeros allowed for DAX privilege
	Not Timing Extractor type TLI (not SSP)
	Not a CRO TLI
	Not a DACS II compatible Flash Card
	Not enough DSPPs are in service
	Not enough TSIs for CCB test
	Not first channel in a BCON/virtual conf
	Not valid for frame administrator
	Number of DGPs on each unit is limited to 32
	Number of SLC RT's on each unit is limited to 80
	OLD termination is not mapped
	Obsolete circuit type
	Old and new channels have not been paired by a BCAST command.
	One of the FAR end channels is being rolled
	One of the far NPC(s) is SLC
	One or more FADs could not be released
	One or more test ports could not be released
	One way unassigned channel/NPC in QRY,TO
	Only one channel allowed to have this language
	Option NOT leg can not appear with F, T, or B
	Option NOT leg is not a FTU leg
	Option NOT leg is not in conference
	Other FLI is OOS
	Other NPC on this DDC not the same digroup for Mode I DGA/DGP
	PDI Version number mismatch
	PMEM and SMEM are different
	PMEM and SMEM synchronization fail

Table A-1. mmmm Condition Codes (Continued)

mmmm	<i>Explanation</i>
	PMEM error, boot from SMEM
	PMEM not in service or not ready
	PMEM not restored
	Parity channel out of bound on new
	Password recovery card is not READ-only
	Point number mismatch
	Priority values are same
	Problem occurred while accessing BOTH_MEM
	Problem occurred while accessing PMEM
	Problem occurred while accessing SMEM or unformatted SMEM
	Protection switch existing is autonomous
	RCV continuity test won't be run: SYNC OOS or pested
	RCV continuity test won't be run: at least one timeslot in use
	RCV continuity test won't be run: no DMB timeslots available
	RCV continuity test won't be run: no available IS NPCS for FC/FMT
	RDLD flag doesn't match that of conference
	RTBC conference exists
	Range overlapping between FROM and TO or between two TOs
	Ranges of old and new do not match
	Reading Feature Package Id from PMEM failed
	Red circuit, INCL not entered
	Release number mismatch
	Report already exists
	SLC 96 MD 1 RT DGP requires mate NPC to be unequipped
	SMEM error, boot from PMEM
	SMEM is not present
	SMEM unit is not restored
	SR NPC was specified - not allowed
	SSC Diagnostic Failure
	SSP number is illegal
	SSP number required
	SSP type(options) same
	SSP with 0 priority present
	SSP with non 0 priority present
	SYNC is inservice but failed
	Signaling state of the trunk failed for the channel
	Skip error summary since adjacent pack not in service or pested
	Software Identification Block failed comparison
	Software Identification Block is not readable
	Some associated NPCs are equipped
	Some circuits not activated,cleared or pictured
	Source does not contain requested information
	Specified width does not match existing conference width

Table A-1. mmmm Condition Codes (Continued)

mmmm	<i>Explanation</i>
	Stratum not allowed
	Sync architecture different
	Sync architecture is same
	Sync mode is same
	Sync stratum is same
	Syncs are equipped
	System macro/map space is full
	T1DM or DMI mode and channel 24 is connected
	TB type in hardware mismatches DB
	Termination is a test port
	Termination is protected (RDLD)
	Termination is under customer control (CUS)
	Termination is under test
	Test ports must be on CAS
	Test session already exists
	Testport/testgroup channel cannot be rolled
	TG in TSM ON mode
	TG not in TSG ON mode
	TLA/TLR invalid with ITS test groups
	TO is a part of the same conference as a previous TO
	TO is already the return leg
	TO is not a leg of this/any conference
	TO is the backbone leg of a conference
	TO side of two-way to be converted is not an FTU NPC
	The INCL keyword is needed for DGA
	The MMFG is protected
	The NDL options are different for DGA's on the same DDC for Mode I
	The NPC of VC BBL leg doesn't match that in the input command
	The NPC to delete has not been previously added to map
	The OLD or NEW NPC is already being rolled.
	The associated MMFG is under protection (for Service MIUs)
	The associated MXR is In-Service but pested
	The conference does not exist
	The first channel of VC BBL leg doesn't match that in the input cmd
	The first channel of VC BRD leg doesn't match that in the input cmd
	The input BRD leg is not in VC
	The map is not valid
	The mode of the RT is not applicable
	The reference map does not exist
	The requested digroup is carrying service
	The selected MIU associated with the NPC is In-Service but failed
	The selected MXR associated with the NPC is In-Service but failed
	The session is terminated due to maintenance operation

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	The total number of receiving ports specified exceeds the max.
	There are no INS MXRs to run test on
	Timeslot channel numbering not allowed with CAS
	Timing Extractor type TLI (need SSP info)
	Timing Extractor type TLIs are present
	Transmic 1G NPC designated as SYNC source invalid
	Transmitting port cannot be dropped
	Tried to disconnect a nonexisting VC
	Trunk conditioning doesn't match that of conference
	Try to add a BBL to VC, but the VC already has backbone
	Try to delete a BBL leg from VC; however, VC has no BBL leg
	Try to delete a BRD leg from VC; however, VC has no BRD leg
	Trying to add a BBL leg to a conference set up as SYM
	Trying to add a BBL to a DMB conference that already has one
	Trying to add a SYM leg to conference set up as broadcast
	Trying to add a broadcast leg to a conference set up as SYM
	Trying to add or delete a leg when a conference is under test
	Trying to change in NTR direction
	Trying to change level in on BBL leg
	Trying to change level out on BRD leg
	TS0 connected to nonTS0 in Mode 2 - "a" should be "-" or "b"
	Two digroups from same bank added to different FTMI
	UC is in service but failed
	Unable to verify Configuration file since MP DB not loaded
	Unassigned operational mode
	Unframed clear 2Mbit/s NPC invalid for Bit 4 used as RA IS/RBER
	Unframed clear 2Mbit/s NPC invalid for TS0 processing
	Unit is not FTU type
	Unit type error
	Unmapped channel(s) on old
	Unpestering error registers for subj. entity failed
	Use of this NPC is RESERVED for SLC 96 MD 1
	User does not exist
	User has been created
	User has logged in somewhere
	User is not logged in
	User logged off during session
	User login-id is not DAX
	User macro/map space is full
	User quit the menu
	User still owns files
	Width of existing two way does not match conference width
	Write to CPR failed

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Writing Feature Package Id to PMEM failed
	Wrong SSP type(Timing Extractor type)
	Wrong TLI type
	Wrong TLI type (need CRO grow command)
	X option is illegal
	XMIT continuity test won't be run: CFT code specified
	XMIT continuity test won't be run: no XMIT timeslots available
	Y option is illegal
	Z option is illegal
	Channel is OCON in opposite direction
	Circuit already terminated
	Circuit not terminated
	Hub id not set when MJU pack grown
	Invalid mode for TLA/TLR
	Invalid test access mode
SOSF	All CBTYP NPCs out of service or failed
	DSPU unit controller is failed
SPFA	No protection is available for the Service MMFG
	Protection switch process failed
SPSW	The Protection MMFG is selected, and auto. switchback is unavailable
	The protection MMFG is serving another facility
SROF	(NPC) Hardware mismatch
	BOOT on subject entity failed
	CCN denied request
	Can't lock or unlock ram database
	Circuits TCONed itself cannot be UTST
	DB can't get the slave mail box
	DB can't send or receive mail
	DGN on subject entity failed
	Failed to boot CI
	Failed to boot CONF file
	Failed to boot DB
	Failed to boot journal--recurrence indicates database corruption
	Failed to boot subject CCN side
	Failed to boot unit
	Failed to switch SYNC side
	General boot failure (vanilla flavor)
	IU/TI type NPC
	MIU is failed
	MXR is failed
	Mismatch between MXR and MIU HDW types
	NPC Failed or Out of Service

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
mmm	No Memory Backup Has Been Scheduled
	None of the designated NPCTG(s) are equipped
	None of the designated TG(s) are equipped
	PMEM verification failed
	Read/write eeprom error
	RST failed to boot DB
	RST failed to boot program
	SSC software out of date
	Sync not completely reset
	Sync pack denied command
	Syncs failed to cross couple
	The MIU boot failed
	The MIU diagnostics failed
	The MXR boot failed
	The MXR diagnostics failed
	Unit 1 denied request
	Unit 2 denied request
	Unit 3 denied request
	Unit 4 denied request
	Unit 5 denied request
	Unit 6 denied request
	Wrong MXR type grown for this MIU
SRTN	Test Port release failed
	Test group release failed
SWFA	Active CCN side not IS or failed or pested or hardware OOS
	Boot TLI failed
	Checksums verification failed
	DB PMEM error OP-CL-RD-WR-SK
	DB SMEM error OP-CL-RD-WR-SK
	DSPI failed
	Data link failed
	Device failed to format
	Device failed to initialize
	Failed to lock sync to timing reference
	Far end failed to respond
	Hardware database mismatch
	MXR LOS with unselected FLI
	Selected FLI has LOC with at least one inservice MXR
	Sync is not configured yet
	Unselected FLI has LOS with at least one inservice MXR



DACS II
Release 9.0, MML
2.048-Mb/s Interface
Operations and Maintenance
Volume III - Trouble Clearing

365-353-291
Issue 1.0
October 1999

Copyright © 1999 Lucent Technologies

All Rights Reserved

Printed in U.S.A

This material is protected by the copyright and trade secret laws of the United States and other countries. It may not be reproduced, distributed or altered in any fashion by any entity (either internal or external to Lucent Technologies), except in accordance with applicable agreements, contracts, or licensing, without the express written consent of the Customer Training and Information Products organization and the business management owner of the material.

Notice

Every effort was made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

Mandatory Information

Security Statement

In rare instances, unauthorized individuals make connections to the telecommunications network through the use of remote access features. In such event, applicable tariffs require that the customer pay all network charges for traffic. Lucent Technologies cannot be responsible for such charges, and will not make any allowance or give any credit for charges that result from unauthorized access.

Trademarks

5ESS and *SLC*® is a registered trademark of Lucent Technologies.

COMMON LANGUAGE is a registered trademark and CLEI, CLLI, CLCI, and CLFI are trademarks of Bell Communications Research, Inc.

American Express is a registered trademark of American Express Company.

MasterCard is a registered trademark of mastercard International Inc.

Visa is a registered trademark of VISA International Service Association.

Documentation Ordering Information

The ordering number for this document is 365-353-291. To order this document, call the Lucent Technologies Customer Information Center in Indianapolis, Indiana, on 1-888-582-3688. For more ordering information, refer to "How to Order Documentation" in the section "About this Document."

Customer Assistance and Technical Support

Lucent Technologies provides technical assistance 24 hours a day, seven days a week. For technical assistance within the United States, call 1-800-225-RTAC. For technical assistance in Europe, call the Netherlands Technical Support Organization (TSO) at 31-3587-1555. For technical assistance in the Far East, call the Singapore TSO at 65-241-0880. If your country of origin provides local technical support, please contact them directly.

Documentation Support Telephone Number

Lucent Technologies provides a telephone number for you to report errors or to ask questions about the information in this document (i.e., for permission to reproduce or distribute). The support telephone numbers are:

Outside the United States - 1-317-322-6847

Inside the United States - 1-800-645-6759

Acknowledgements

This document was developed by the Lucent Technologies Customer Training and Information Products Organization.

How Are We Doing?

Title: DACS II Release 9.0, MML, 2.048-Mb/s, Operation and Maintenance
Volume III - Trouble Clearing

Identification No.: 365-353-291 Issue No.: 1 Date: October 1999

Lucent Technologies welcomes your feedback on this Customer Information Product (CIP). Your comments can be of great value in helping us improve our CIPs.

1. Please rate the effectiveness of this CIP in the following areas:

	Excellent	Good	Fair	Poor	Not Applicable
Ease of Use					////////////////
Clarity					////////////////
Completeness					////////////////
Accuracy					////////////////
Organization					////////////////
Appearance					////////////////
Examples					
Illustrations					
Overall Satisfaction					////////////////

2. Please check the ways you feel we could improve this CIP.

☐ Improve the overview/introduction	☐ Make it more concise/brief
☐ Improve the table of contents	☐ Add more step-by-step procedures/tutorials
☐ Improve the organization	☐ Add more troubleshooting information
☐ Include more figures	☐ Make it less technical
☐ Add more examples	☐ Add more/better quick reference aids
☐ Add more detail	☐ Improve the index

Please provide details for the suggested improvement. _____

3. What did you like most about this CIP?

4. Feel free to write any comments below or on an attached sheet.

If we may contact you concerning your comments, please complete the following:

Name: _____ Telephone Number: _____

 
Company/Organization: _____ Date: _____

Address: _____


When you have completed this form, please fold, tape and return to address on back
or Fax to: 910 727-3043.

----- Do Not Cut — Fold Here And Tape -----

Lucent Technologies
Bell Labs Innovations



 NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES



BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 1999 GREENSBORO, NC

POSTAGE WILL BE PAID BY ADDRESSEE

DOCUMENTATION SERVICES
2400 Reynolda Road
Winston-Salem, NC 27199-2029



Contents

About This Guide

■ Background	xv
■ New Features in This Release	xvi
■ How to Use This Manual	xvii
■ Manual Contents	xviii
■ Manual Conventions	xxv
■ Related Documentation	xxvi
■ How to Order Documentation	xxix
■ How to Comment on This Manual	xxxii
■ Electronic Documentation	xxxiii

1	Trouble Identification General Tasks	1-i
	■ Select Trouble-Clearing Procedure	GT 1.1-1
	■ Isolate Frame Troubles	GT 1.2-1
	■ Check REPT ALM IDLD or INFO Message	GT 1.3-1
	■ Check Autonomous Action or Command In-Progress Messages	GT 1.4-1

2	Power Failures General Tasks	2-i
	■ Clear Blown Fuse Trouble	GT 2.1-1
	■ Clear Power Unit Trouble	GT 2.2-1
	■ Recover From Loss of Input Power	GT 2.3-1

Contents

3	Facility Alarms General Tasks	3-i
	■ Clear 2.048-Mb/s Facility AR01 MISC ALM Message	GT 3.1-1
	■ Clear 2.048-Mb/s Facility Error Messages	GT 3.2-1
	■ Enter Commands to Check 2.048-Mb/s Line Loopback and Operate Line Loopback	GT 3.3-1
	■ Clear DS1 Facility CGA (Except <i>SLC</i> , Carrier System)	GT 3.4-1
4	Hardware Failures General Tasks	4-i
	■ Clear ALM ECCN OOS Message	GT 4.1-1
	■ Clear ALM CCN OOS Message	GT 4.2-1
	■ Clear ERR ESR ANALYSIS REPORT Message	GT 4.3-1
	■ Clear ERR [ESR] <entity> Messages	GT 4.4-1
	■ Clear ERR SYNC Message	GT 4.5-1
	■ Respond to Failed Status for Plug-In	GT 4.6-1
	■ Clear Transient Trouble Using ERROR LOG Message	GT 4.7-1
	■ Isolate Trouble with ERR COND Code Meanings	GT 4.8-1
	■ Clear ERR HARDWARE Message	GT 4.9-1
	■ Clear DS3 Equipment Critical Alarm	GT 4.10-1
5	Manual Diagnostic Failures General Tasks	5-i
	■ Clear Failed MC Diagnostic	GT 5.1-1
	■ Clear Failed MP Diagnostic	GT 5.2-1
	■ Clear Failed CI Diagnostic	GT 5.3-1
	■ Clear Failed SYNC Diagnostic	GT 5.4-1
	■ Clear Failed CRO Diagnostic	GT 5.5-1
	■ Clear Failed TLI Diagnostic	GT 5.6-1
	■ Clear Failed UNIT UC Diagnostic	GT 5.7-1

Contents

■ Clear Failed FTMI Diagnostic	GT 5.8-1
■ Clear Failed DSPI Diagnostic	GT 5.9-1
■ Clear Failed FC Diagnostic	GT 5.10-1
■ Clear Failed CCI Diagnostic	GT 5.11-1
■ Clear Failed CCNI Diagnostic	GT 5.12-1
■ Clear Failed ETSI Diagnostic	GT 5.13-1
■ Clear Failed TSI Diagnostic	GT 5.14-1
■ Clear Failed NPC (FTU) Diagnostic	GT 5.15-1
■ Clear Failed DSPU NPC Diagnostic	GT 5.16-1
■ Primary Memory (PMEM) Card Failure Recovery Procedure	GT 5.17-1
■ Clear Failed Link Diagnostic	GT 5.18-1
■ Clear Failed CCB Diagnostic	GT 5.19-1
■ Check Type PB/PC NPC Status	GT 5.20-1
■ Check Type PA NPC Status	GT 5.21-1

6	Controller and Link Troubles General Tasks	6-i
■	Clear Processor Failure Alarm	GT 6.1-1
■	Clear Frame Startup Trouble	GT 6.2-1
■	Clear RESET TOD/DATE Message	GT 6-31
■	Clear Overload Message	GT 6.4-1
■	Clear Inoperative Terminal (System Hung)	GT 6.5-1
■	Clear Repeated RL Command Response	GT 6.6-1
■	Establish Administrative Link at DACS II	GT 6.7-1

Contents

7	Data Base Troubles General Tasks	7-i
	■ Clear BMTR DNY Trouble	GT 7.1-1
	■ Clear Reset, Boot, RST MC Conditional Completion	GT 7.2-1

8	Frame Audits General Tasks	8-i
	■ Clear DGNDDET Message 82002	GT 8.1-1
	■ Clear DGNDDET Message 82001 or AUD 82004 Trouble	GT 8.2-1
	■ Clear DGNDDET Message 82003	GT 8.3-1

9	Software Error General Task	9-i
	■ Clear REPT ERR SOFTWARE Message	GT 9.1-1

10	TS0 and C-Bit Messages General Tasks	10-i
	■ Clear TS0 R OLD, NEW Message	GT 10.1-1
	■ Clear TS0MBOFL Message	GT 10.2-1
	■ Clear CBOFL Message	GT 10.3-1
	■ Check Status of C-Bits Message	GT 10.4-1
	■ Enter C-Bit Query Commands	GT 10.5-1

Contents

A	Command Denials	A-i
	■ Background	A-1
	■ Clear Command Denials	A-2

IN	Index	IN-1

Contents

Figures

Figure 1.1-1	Trouble Clearing Flowchart	GT 1.1-2
Figure 1.2-1	Common Equipment Alarms	GT 1.2-3
Figure 1.2-2	Error Analysis Report	GT 1.2-4
Figure 1.2-3	Maintenance Command Construction	GT 1.2-5
Figure 2.1-1	Maintenance Command Construction	GT 2.1-12
Figure 2.3-1	Maintenance Command Construction	GT 2.3-6
Figure 3.1-1	TG182, TG185, and TG187 Monitor Jack Layout	GT 3.1-4
Figure 3.1-2	TG192 Monitor Jack Layout	GT 3.1-4
Figure 4.1-1	Maintenance Command Construction	GT 4.1-3
Figure 4.2-1	Maintenance Command Construction	GT 4.2-3
Figure 4.3-1	Error Analysis Report	GT 4.3-3
Figure 4.3-2	Maintenance Command Construction	GT 4.3-5
Figure 4.4-1	Maintenance Command Construction	GT 4.4-4
Figure 4.6-1	Common Equipment Readout	GT 4.6-3
Figure 4.6-2	Maintenance Command Construction	GT 4.6-6
Figure 4.7-1	General Error History Message Format	GT 4.7-2
Figure 4.7-2	Hexadecimal-to-Decimal Conversion Example	GT 4.7-5
Figure 4.7-3	Maintenance Command Construction	GT 4.7-7
Figure 4.9-1	Maintenance Command Construction	GT 4.9-4
Figure 4.10-1	Maintenance Command Construction	GT 4.10-5
Figure 5.4-1	Maintenance Command Construction	GT 5.4-5
Figure 5.10-1	Sync Status Register	GT 5.10-3
Figure 5.10-2	Cable Connectors on ECCN Panel	GT 5.10-6
Figure 5.13-1	Maintenance Command Construction	GT 5.13-5
Figure 5.16-1	Cable Connectors on ECCN Panel	GT 5.16-5
Figure 5.17-1	Memory Card Locations on CPU2	GT 5.17-3
Figure 6.5-1	Link Status Register	GT 6.5-3
Figure 6.7-1	Link Status Register	GT 6.7-6
Figure 8.1-1	Hexadecimal-to-Decimal Conversion Example	GT 8.1-14
Figure 9.1-1	Commands to Restore Plug-Ins	GT 9.1-4
Figure 10.3-1	Construction of Hexadecimal Word	GT 10.3-2
Figure 10.4-1	Construction of Hexadecimal Word	GT 10.4-2
Figure 10.5-1	Construction of Hexadecimal Word	GT 10.5-3

Figures

Tables

Table 1.1-1	Trouble Summary and Chapter References	GT 1.1-3
Table 1.2-1	Facility Alarm Messages	GT 1.2-4
Table 1.2-2	Autonomous Messages	GT 1.2-8
Table 1.3-1	Keyword Meanings	GT 1.3-2
Table 1.3-2	PBA Alarm Types	GT 1.3-3
Table 2.1-1	48-Volt Power (CEF) Feed A Fuse	GT 2.1-3
Table 2.1-2	48-Volt Power (CEF) - Feed B Fuse	GT 2.1-4
Table 2.1-3	48-Volt Power (CEF) - Feed C Fuse	GT 2.1-5
Table 2.1-4	48-Volt Power (CEF) - Feed D Fuse	GT 2.1-6
Table 2.1-5	Multibay Power (Non-CEF)	GT 2.1-7
Table 2.1-6	Single-Bay Power (Non-CEF)	GT 2.1-10
Table 2.1-7	Power Unit Requirements	GT 2.1-11
Table 2.1-8	Sync and Controller Fuses (CEF)	GT 2.1-13
Table 2.1-9	Sync and Controller Fuses (non-CEF)	GT 2.1-14
Table 2.1-10	IFTU Fuse Assignment	GT 2.1-14
Table 2.1-11	DSPU Fuses (Flexible Bay)	GT 2.1-15
Table 2.1-12	DSPU Fuses - Original Interface Bay	GT 2.1-16
Table 2.1-12	DS3U Fuses	GT 2.1-17
Table 2.1-14	CCN Fuses - Original Interface Bay	GT 2.1-17
Table 2.1-15	77-Type, FTU Fuses - Original Interface Bay	GT 2.1-19
Table 2.2-1	Power Unit Requirements	GT 2.2-2
Table 3.1-1	Alarm Priorities	GT 3.1-2
Table 3.2-1	2.048-Mb/s Interface Alarm Parameters (PA/PB/PC Type NPCs)	GT 3.2-4
Table 3.2-2	2.048-Mb/s Interface Option Selection	GT 3.2-5
Table 3.4-1	19.2-kb/s Alarms Registered at DACS II	GT 3.4-2
Table 3.4-2	Alarm Designations	GT 3.4-3
Table 4.1-1	ESR Condition Codes - CCI, ETSI	GT 4.1-5
Table 4.2-1	ESR Condition Codes - CCNI, CCB, TSI	GT 4.2-5
Table 4.7-1	Host ID and Entity	GT 4.7-2
Table 4.7-2	Error Class Meanings	GT 4.7-3
Table 4.7-3	Hexadecimal Numbers	GT 4.7-6
Table 4.8-1	ESR Condition Codes - CCNI, CCB, TSI	GT 4.8-2
Table 4.8-2	ESR Condition Codes	GT 4.8-4
Table 4.9-1	Error Hardware Explanations	GT 4.9-5

Tables

Table 4.9-2	Error Hardware Explanations	GT 4.9-6
Table 4.10-1	Maintenance and Protection Keywords	GT 4.10-3
Table 5.1-1	Implicated MC Plug-Ins	GT 5.1-2
Table 5.4-1	SYNC Status Outputs	GT 5.4-3
Table 5.13-1	Implicated Plug-Ins	GT 5.13-7
Table 5.19-1	TSI Ports on CCB	GT 5.19-3
Table 5.20-1	Hex and Binary Equivalents	GT 5.20-2
Table 5.20-2	PB/PC NPC Type Specifications	GT 5.20-3
Table 5.20-3	Facility Status Keywords (PB/PC NPCs)	GT 5.20-4
Table 5.21-1	x Values for PA Type NPCs	GT 5.21-2
Table 5.21-2	y Values for PA Type NPCs	GT 5.21-2
Table 5.21-3	z Values for PA Type NPCs	GT 5.21-3
Table 5.21-4	Facility Status Keywords for PA Type NPCs	GT 5.21-4
Table 6.2-1	Software ID Condition Codes	GT 6.2-3
Table 6.7-1	Synchronous Link Level Parameters	GT 6.7-6
Table 8.1-1	Equipage/Provisioning	GT 8.1-8
Table 8.1-2	Facility Error Thesholds	GT 8.1-10
Table 8.1-3	Subscriber Carrier and Subrate Data	GT 8.1-10
Table 8.1-4	DS3 Feature	GT 8.1-10
Table 8.1-5	Performance Monitoring	GT 8.1-12
Table 8.1-1	Hexadecimal Numbers	GT 8.1-14
Table 8.2-1	Circuit Pack Identification	GT 8.2-2
Table 8.2-2	Diagnostic Commands	GT 8.2-3
Table 9.1-1	Software Error Explanation	GT 9.1-7
Table 10.1-1	Bit Identification	GT 10.1-2
Table 10.2-1	TS0 Bit Identification	GT 10.2-2
Table 10.2-2	Facility Status Keywords	GT 10.2-2
Table 10.2-3	Facility Status Keywords (PA Type NPCs)	GT 10.2-4
Table 10.3-1	Facility Status Keywords	GT 10.3-4
Table 10.3-2	Facility Status Keywords (PA Type NPCs)	GT 10.3-5
Table A-1	mmmm Condition Codes	A-5

About This Manual

Contents

■ Background	xv
Purpose	xv
Intended Audiences	xv
■ New Features in This Release	xvi
Overview	xvi
Hybrid DS3 Threshold Support	xvi
ICI Circuit Pack	xvi
ITS	xvi
Non-CEF Information	xvi
■ How to Use This Manual	xvii
Before Using the Procedures	xvii
Accessing the Information	xvii
Prerequisites	xvii
Procedure Sequence	xvii

(Continued on next page)

Contents (Continued)

■ Manual Contents	xviii
Volume Breakdown	xviii
General Tasks and Supporting Elements	xviii
Contents of Volume I	xix
Contents of Volume II	xxi
Contents of Volume III	xxiii
■ Manual Conventions	xxv
Special Font Used	xxv
Notes	xxv
Safety Label	xxv
■ Related Documentation	xxvi
Related DACS II Documents	xxvi
■ How to Order Documentation	xxix
Overview	xxix
Ordering by Mail	xxix
Ordering by Telephone	xxix
Ordering by Fax	xxx
Ordering Via the World Wide Web	xxx
RBOC and BOC Orders	xxx
Commercial Customer Orders	xxx
Lucent Technologies Orders	xxxi
Standing Order Customers	xxxi
■ How to Comment on This Manual	xxxii
Using the Feedback Form	xxxii
Without the Feedback Form	xxxii
■ Electronic Documentation	xxxiii
Overview	xxxiii
Ordering a CD-ROM	xxxiii
Pricing Information	xxxiii
Technical Information	xxxiii

Background

Purpose

The purpose of this manual is to aid in acceptance and operation of the Digital Access and Cross-Connect System II (DACS II).

This document provides reference information required to support the craft personnel activities involved in the daily operation and maintenance of the DACS II. It also includes an overview that describes the physical and functional attributes of the DACS II.

Intended Audiences

This document is for individuals who are responsible for the acceptance, provisioning, operation, and maintenance of the DACS II, Release 9.0.

New Features in This Release

Overview

The new features associated with DACS II Release 9.0 are:

- Threshold support for the Hybrid DS3 circuits
 - The introduction of the Intelligent Communication Interface (ICI) circuit pack.
 - Integrated Test Set (ITS).
-

Hybrid DS3 Threshold Support

This feature adds threshold support to the performance monitoring feature for Hybrid DS3 circuits. Users can set up four separate threshold values including the default threshold value for each performance monitoring parameter. When a threshold is crossed, a threshold crossing message is issued. However, with this feature, threshold crossings and their associated alarm messages can be suppressed (turned off).

ICI Circuit Pack

The Intelligent Communication Interface (ICI) circuit pack (TM 782 card) provides the port connections for the seven administrative links:

- Four asynchronous links (links 1 through 4, SNIDER protocol)
- Two synchronous links (links 5 and 6, X.25 protocol)
- One TCP/IP link (link 7, telnet protocol).

The ICI circuit pack replaces the Main Controller's H/ECI circuit pack used prior to Release 9.0, and even plugs into the same slot used for the H/ECI circuit pack. The ICI pack will have all of the existing functionality of the H/ECI pack except the functionality available with the additional TCP/IP link connection.

ITS

The Integrated Test Set (ITS) feature provides the DACS II with a built-in Bit Error Ratio Tester (BERT) capability. The ITS was developed to replace expensive test sets for facility troubleshooting, providing the capability of generating, reading, and evaluating test signals from the DACS II.

Non-CEF Information

Release 9.0 does not support Non-CEF frames. However, the Non-CEF information is left in the documentation for reference purposes.

How to Use This Manual

Before Using the Procedures

Before you attempt to use the procedures in this manual, you should become familiar with the contents of each volume.

Accessing the Information

There are three ways to access the information in this document:

- Using the index in the back of each volume
 - Using the tabs and the table of contents in the front of each tab
 - Using the overall table of contents in the front of each volume.
-

Prerequisites

Before you use the procedures in this document, you should have completed the DACS II Operation and Maintenance course (TR3521 or TR3621).

If you were not able to take the training course, you should carefully study the information in Chapter 1 and the Command Denials located in Appendix A of Volumes I, II, and III.

Procedure Sequence

The procedures are arranged to be performed in the sequence in which they are presented. If you perform a procedure out of sequence, you may have trouble performing that procedure and the subsequent procedures.

Always start the trouble-clearing process by performing the procedures in the Trouble Identification section in Chapter 1 of Volume III. The sections in this volume are functional groupings of troubles. It is not always obvious from the message or alarm which of the trouble sections provides the procedure or procedures for clearing the trouble. If you begin with Chapter 1, you will be directed from procedure to procedure until the trouble is cleared.

Manual Contents

Volume Breakdown

This manual is divided into the following three volumes:

- Volume I - Operation and Maintenance Reference Material
- Volume II - Operation and Maintenance General Tasks
- Volume III - Trouble Clearing General Tasks.

The reference information in Volume I supports the General Tasks (procedures) documented in Volumes II and III.

General Tasks and Supporting Elements

The chapters in Volume II and III are divided into General Tasks (GT) and Supporting Elements (SE). GTs are the major tasks performed by users, and SEs are sub-tasks within a GT.

There is a correspondence between the chapter numbers in Volume I and the GTs in Volume II. For example, the general tasks related to reference Chapter 6: Cross-connections and Disconnections begin at GT 6.1. In Volume III, the GTs for a particular type of trouble are grouped together in one chapter.

SEs are associated with a GT and are usually located immediately after the GT. Some SEs are reusable in other GTs in that particular chapter and in the GTs of other chapters. When a GT step requires an SE, the SE will typically be found at the end of the GT. GTs and SEs follow a similar numbering scheme. For example, *SE 5.1.1* indicates the first SE in GT 5.1.

Manual Contents (Continued)

Contents of Volume I

The contents of *Volume I - Operation and Maintenance Reference Material* are listed below:

■ **Chapter 1 - Introduction**

This chapter provides an overview of the DACS II. It describes the DACS II hardware arrangements, functional operation, and command and message set. This chapter contains reference information required to operate and maintain the DACS II.

■ **Chapter 2 - Acceptance**

This chapter contains reference information which describes the acceptance of a DACS II frame after it has been installed.

■ **Chapter 3 - Provisioning**

This chapter contains reference information which describes circuit pack installation and the growing, restoring, removing, and degrowing of the common equipment (NPC, frame, synchronizer, and cross-connect network) and Units (FTU and DSPU).

■ **Chapter 4 - Test Access**

This chapter contains reference information which describes establishing test ports, making the DS0 and Clear-DS1 test connections, and establishing and testing subrate channels.

■ **Chapter 5 - Cross-Connections and Disconnections**

This chapter contains the reference information which describes making DS0, Clear-E1, Channelized-E1, Nx64 and Subrate cross-connections and to disconnect the cross-connections.

■ **Chapter 6 - Administration**

This chapter contains the reference information which describes logging on/off the DACS II; creating, changing, and deleting alternate maps; and creating, activating, and deleting macros.

(Continued on next page)

Manual Contents (Continued)

Contents of Volume I, Continued

■ Chapter 7 - Maintenance

This chapter contains the reference information which describes routine PMEM and SMEM memory card maintenance, PMEM and SMEM card removal, and plug-in removal and replacement.

■ Chapter 8 - Performance Monitoring

This chapter contains the reference information which describes scheduling and retrieving reports that monitor various DS1 performance parameters.

■ Chapter 9 - C-Bit Processing

This chapter contains the reference information which describes connecting/disconnecting facility channels to C-bit processor and selecting C-bit processing functions.

■ Appendix A - Command Denials

This chapter lists the command denial codes and their meanings. This information is useful in determining problems with the DACS II. You should be familiar with the contents of this chapter before you attempt any procedures.

Manual Contents (Continued)

Contents of Volume II

The contents of *Volume II - Operation and Maintenance General Tasks* are listed below:

- **Chapter 1 - (Left Intentionally Blank)**

- **Chapter 2 - Acceptance General Tasks**

This chapter contains the procedures to perform the acceptance of a DACS II frame after it has been installed.

- **Chapter 3 - Provisioning General Tasks**

This chapter contains the procedures to install circuit packs and to grow, restore, remove, and degrow the NPCs (FTU with or without *SLC*[®] Carrier, DSPU, Subrate, DMB, or DSP Applications).

Also included are the procedures to make the DSX connections and perform tests to establish DS1 facilities with or without *SLC*[®] Carrier and Subrate channels.

- **Chapter 4 - Test Access General Tasks**

This chapter contains the procedures to establish test ports, make the DS0 and Clear-DS1 test connections, and establish and testing subrate channels.

- **Chapter 5 - Cross-connections and Disconnections General Tasks**

This chapter contains the procedures to make DS0, Clear-E1, Channelized-E1, Nx64 and Subrate cross-connections and to disconnect the cross-connections.

- **Chapter 6 - Administration General Tasks**

This chapter contains the procedures to make DS0, Clear-E1, Channelized-E1, Nx64 and Subrate cross-connections and to disconnect the cross-connections.

(Continued on next page)

Manual Contents (Continued)

Contents of Volume II, Continued

- **Chapter 7 - Maintenance General Tasks**

This chapter contains the procedures to perform routine PMEM and SMEM memory card maintenance, PMEM and SMEM card removal, and plug-in removal and replacement.

- **Chapter 8 - Performance Monitoring General Tasks**

This chapter contains the procedures to schedule and retrieve reports that monitor various DS1 performance parameters.

- **Chapter 9 - C-Bit Processing General Tasks**

This chapter contains the procedures to connect/disconnect facility channels to C-bit processor and selecting C-bit processing functions.

- **Appendix A - Command Denials**

This chapter lists the command denial codes and their meanings. This information is useful in determining problems with the DACS II. You should be familiar with the contents of this chapter before you attempt any procedures.

Manual Contents (Continued)

Contents of Volume III

The contents of *Volume III - Trouble Clearing General Tasks* are listed below:

- **Chapter 1 - Trouble Identification**

This chapter contains the procedures for interpreting the alarms and messages that identify troubles.

All trouble clearing starts here. You are directed from here to a procedure in one of the following chapters. That procedure may direct you to a procedure in a chapter that follows it. The process continues until you isolate the fault.

- **Chapter 2 - Power Failures**

This chapter contains the procedures for isolating power troubles.

- **Chapter 3 - Facility Alarms**

This chapter contains the procedures for isolating troubles in the facilities that connect to DACS II.

- **Chapter 4 - Hardware Failures**

This chapter contains procedures for locating internal DACS II troubles. The messages associated with these troubles usually identify one or more possible faulty plug-ins.

- **Chapter 5 - Manual Diagnostic Failures**

This chapter contains the procedures for clearing troubles identified when you run manual diagnostics.

- **Chapter 6 - Controller and Link Troubles**

This chapter contains procedures for isolating troubles in the controller or the link connecting the controller to a terminal or operating system. These troubles are usually associated with a reset.

- **Chapter 7 - Data Base Troubles**

This chapter contains procedures for isolating a conditional reset or back-up memory trouble.

- **Chapter 8 - Frame Audits**

This chapter contains procedures for isolating faults detected when frame audits are run.

(Continued on next page)

Manual Contents (Continued)

Contents of Volume III, Continued

- **Chapter 9 - Software Error**

This chapter contains procedures for troubles indicated by a software trouble message.

- **Chapter 10 - TS0 and C-Bit Messages**

This chapter contains procedures which instruct you how to respond to messages that indicate changes in the status of TS0 or C-bit register or an overflow in the TS0 or C-bit buffers.

- **Appendix A - Command Denials**

This chapter lists the command denial codes and their meanings. This information is useful in determining problems with the DACS II.

Manual Conventions

Special Font Used This manual uses special fonts to differentiate computer input/output. The **constant width bold font** indicates message formats, keywords, letter representations of parameters, parameter values, and messages as they would appear on a DACS II terminal screen.

Notes Notes inform users of special considerations, situations, or items to remember. An example of a Note is shown below:

 **NOTE:**
Terminated connection for DMB concatenation is not allowed.

Safety Label Cautions indicate the presence of a hazard that will or can cause a frame alarm or property damage if hazard is not avoided. An example of a Caution is shown below:

 **CAUTION:**
The UMC is inserted towards the direction that is terminated, potentially causing a loss of service.

Related Documentation

Related DACS II Documents

The following documents support the DACS II:

- DACS II Installation Manual
 - IPH903 (DACS II CEF)
 - IPH903I (DACS II ESBF).

Audience: Customers planning to install the equipment

Content: Customer installation instructions.

- DACS II Release 7.0 Product Description Manuals:
 - 365-353-085 (24 Channel)
 - 365-353-086 (30 Channel).

Audience: Network planners, engineers, and others that need to know how the DACS II works and fits into the network

Content: Features, applications, and description and other reference information.

- DACS II Release 9.0 Operation and Maintenance Manuals:
 - 365-353-261 (PDS)
 - 365-353-271 (MML)
 - 365-353-281 (PDS 2.048-Mb/s Interface)
 - 365-353-291 (MML 2.048-Mb/s Interface).

Audience: End-user maintenance personnel

Contents: Procedures to operate and maintain the DACS II.

(Continued on next page)

Related Documentation (Continued)

Related DACS II Documents, Continued

■ DACS II Release 9.0 Command and Message Manuals:

- 365-353-262 (PDS)
- 365-353-272 (MML)
- 365-353-282 (PDS 2.048-Mb/s Interface)
- 365-353-292 (MML 2.048-Mb/s Interface).

Audience: End-user maintenance personnel

Content: Description of each software input message and its response along with a description of each system output report.

■ DACS II Release 9.0 Quick Reference Guides:

- 365-353-263 (PDS)
- 365-353-273 (MML)
- 365-353-283 (PDS 2.048-Mb/s)
- 365-353-293 (MML 2.048-Mb/s).

Audience: End-user maintenance personnel

Content: Abbreviated list of system commands and parameters.

■ DACS II Release 9.0 Software Release Description:

- Comcode C108460080

Audience: End-user maintenance personnel

Content: Includes upgrade procedures for the new software release, status of problems fixed in previous releases, list of known problems, and operating issues for the specified software release.

(Continued on next page)

Related Documentation (Continued)

Related DACS II Documents, Continued

- X.50/X.57 Subrate Application
Release 1.0.3 for DACS II/Release 1.0.4 for DACS II ISX
MML 2.048 Mbit/s Interface User's Manual

— 365-350-101 (MML).

Audience: End-user maintenance personnel

Content: Complete manual describing how to install and operate the X.50/X.57 Subrate application on the DACS II or DACS II ISX. Commands and messages describing how to perform subrate cross-connects and subrate test access are included.

- DDS Subrate and MJU Application
Release 1.0.4 for DACS II/Release 1.0.5 for DACS II ISX
User's Manual

— 365-350-110 (PDS)

— 365-350-111 (MML).

Audience: End-user maintenance personnel

Content: Complete manual describing how to install and operate the DDS Subrate and MJU application on the DACS II or DACS II ISX. Commands and messages describing how to perform DDS subrate cross-connects, subrate test access, and subrate MJU operations are included.

- Digital Multipoint Bridge (DMB)
DSP Platform Application
Release 1.0.2 for DACS II/Release 1.0.3 for DACS II ISX
User's Manual

— 365-353-144 (PDS)

— 365-353-154 (MML).

Audience: End-user maintenance personnel

Content: Complete manual describing how to install and operate the DMB application on the DACS II or DACS II ISX. Commands and messages describing how to perform DMB cross-connects and DMB test access operations are included.

How to Order Documentation

Overview

To order additional copies of this document, orders can be placed:

- By Mail
 - By Telephone
 - By Fax
 - Via the World Wide Web.
-

Ordering by Mail

To order by mail, send a letter to:

Lucent Technologies
Customer Information Center (CIC)
Attention: Order Entry Section
2855 N. Franklin Road
P. O. Box 19901
Indianapolis, IN 46219

Ordering by Telephone

To order by Telephone (Monday through Friday), call:

- Within the United States of America:
1-888-LUCENT-8 (7:30 a.m. to 6:30 p.m. EST)
(1-888-582-3688)
 - North America (Outside of the U.S.)
317-322-6619
 - Australia, Europe, Middle East, and Africa:
Toll 317-322-6416
 - Asia-Pacific countries, China, Caribbean countries, and Latin America:
Toll 317-322-6411
-

How to Order Documentation (Continued)

Ordering by Fax

To order by Fax, fax a letter to:

- Within the United States of America:
1-317-322-6484
 - North America (Outside of the U.S.):
1-317-322-6359
 - All Other International countries:
Toll 317-322-6699
-

Ordering Via the World Wide Web

The Lucent CIC maintains a website that can be used for ordering Lucent customer information products. The website address for the Lucent CIC homepage is:

<http://www.lucentdocs.com/>

Once you access the Lucent CIC homepage, clicking on the [Documents](#) selection will take you to the area through which numerous types of customer information products can be located, ordered, and/or downloaded.

RBOC and BOC Orders

Regional Bell Operating Companies (RBOC) and Bell Operating Companies (BOC) must process orders through their company documentation coordinator.

Commercial Customer Orders

For commercial customers, a check, money order, purchase order number, or charge card number (*VISA*^{*} bank card, *American Express*[†] credit card services, or *Master Card*[‡] bank card) is required with all orders.

Checks must be made payable to Lucent Technologies.

* Registered trademark of VISA International Service Association.

† Registered trademark of American Express Company.

‡ Registered trademark of Mastercard International Incorporated.

How to Order Documentation (Continued)

Lucent Technologies Orders

Lucent Technologies entities should use Form IND 1-80.80 FA, available through the Customer Information Center.

Standing Order Customers

One-time orders include a binder (if applicable) and the document contents for the current issue in effect at the time of order. After placing a one-time order, you can request a standing order for any document revisions *of that software release*.

Documents for new software releases do *not* go to standing-order customers. You will only get those documents if you order the new software release.

How to Comment on This Manual

Using the Feedback Form

A feedback form is located at the beginning of this publication, immediately after the title page. Please fill out the feedback form and return it (postage free) to the address on the back.

Without the Feedback Form

If the feedback form is missing, send comment on this publication to:

Lucent Technologies
DACS II Documentation Coordinator
Attn: Tabatha Wright
Room 1B-320
101 Crawfords Corner Road
Holmdel, NJ 07733-3030 USA

Electronic Documentation

Overview

Documentation for DACS II and DACS II ISX is now available in electronic form, on CD-ROM (compact disk, read-only memory). CD-ROM has many advantages over traditional paper documentation, including cost savings, search and retrieve capability, and the assurance of the most current documentation.

CD-ROM is available by annual subscription (on standing order).

Ordering a CD-ROM

To order a CD-ROM, call your Technical Information Resource Manager, your Lucent Technologies Account Executive, or the Lucent Technologies Customer Information Center (1-888-582-3688).

Pricing Information

For pricing information, contact your Lucent Technologies Network Systems Account Executive or the Lucent Technologies Customer Information Center (1-888-582-3688).

Technical Information

For technical information, call Lucent Technologies Documentation Support (1-800-334-0404).

Trouble Identification

General Tasks

1

Contents

■ Select Trouble-Clearing Procedure	GT 1.1-1
■ Isolate Frame Troubles	GT 1.2-1
■ Check REPT ALM IDLD or INFO Message	GT 1.3-1
■ Check Autonomous Action or Command In-Progress Messages	GT 1.4-1

Select Trouble-Clearing Procedure

1.1

When to Use

Use this procedure if you are looking for a procedure to direct you through the evaluation of troubles in the trouble printout.

Instructions

1. The actions involved with isolating and clearing troubles are typically performed as illustrated in the flowchart in Figure 1.1-1.
2. If you are looking for a summary of trouble types and indications so that you can isolate the trouble yourself, refer to Table 1.1-1 to find the appropriate chapter in this volume. This path should be used if you have some experience with the DACS II and you know the priority of handling multiple trouble messages.

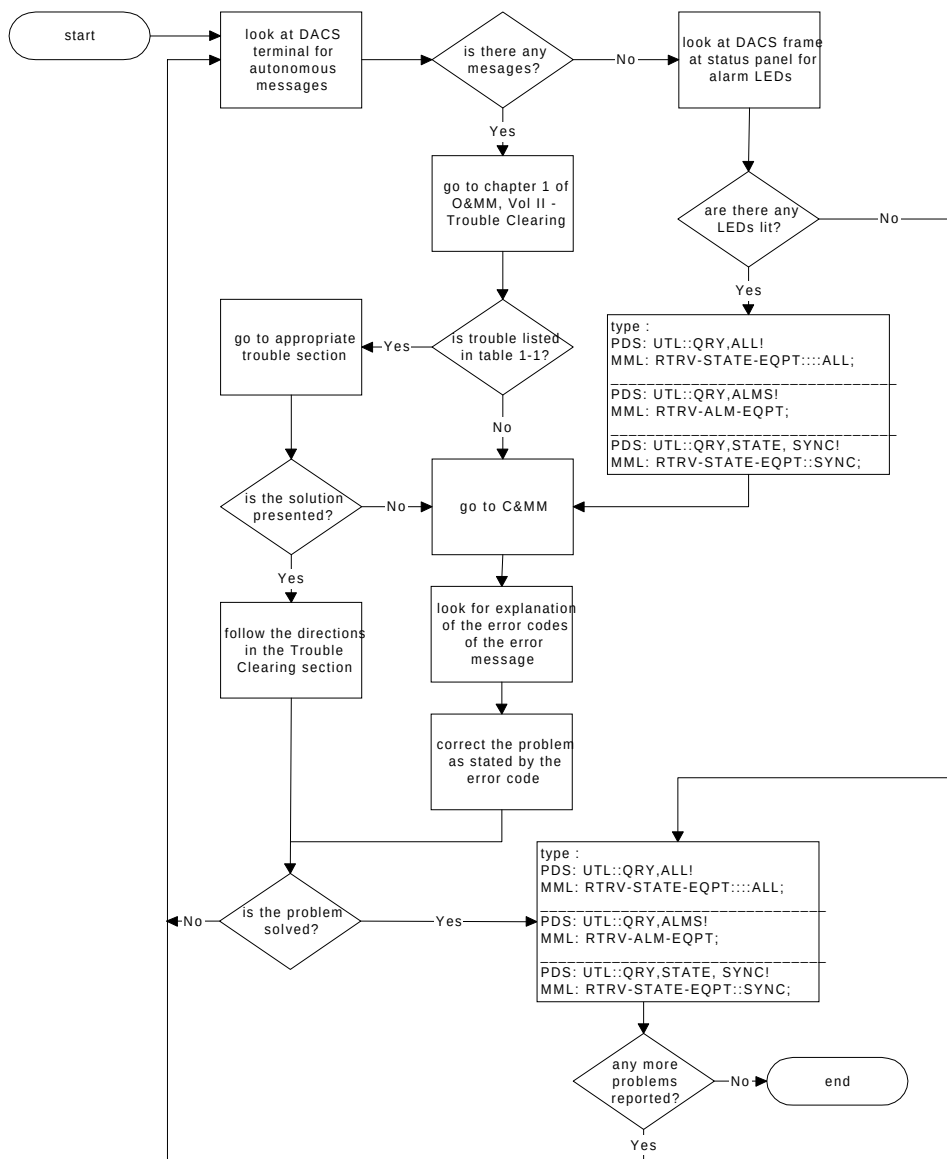


Figure 1.1-1. Trouble Clearing Flowchart

Table 1.1-1. Trouble Summary and Chapter References

Trouble Indication/ Trouble Messages	Consequence Action	Trouble Cause	Trouble Section
Fuse bead extended (48V fuse & alarm panel) LED lighted on fuse board	Plug-ins removed from service	Blown fuse: (1) Aged fuse failed, (2) Shorted backplane or plug-in.	2.1
PWR:TN-X-dddd,ERR	Major alarm: backup supplies the load Critical alarm: plug-ins removed from service	(1) Power unit failed, (2) Short on load	2.2
AR01,MISC ALM ...MJ, PBA	Service interruption; trunk conditioning	(1) Failed 2-Mb/s line, (2) Transmit/receive plug-in	3.3
ALM ...<npc>:{DMA PMA}, <parameter>	Service interruption (with PMA alarm); trunk conditioning	(1) Line degradation, (2) Transmit-end equipment	3.5
ALM ...<npc>:{15ME 24HR} <parameter>	Transmission impaired	(1) Line degradation, (2) Transmit equipment	3.5
REPT EVT <entity> ESR ANALYSIS REPORT ESR REPT RMV EQPT	Plug-in service removed; service switched to other side or protection	(1) Failed plug-in, (2) Wiring problem	4.2
REPT EVT <entity> ERR RMV <entity> DENY	Critical alarm: service interruption	(1) Multiple plug-ins failed.	4.3
ALM EQPT ...<side> OOS	Side failed; no duplex switching	Failed plug-in	4.1
RTRV-ALM-EQPT; (input)	Frame alarm	Power failed, plug-in failed, CCN/ECCN plug-in removed, etc.	1.2
DGN <entity> STF	Diagnostic failed; Restore command denied	Failed plug-in	5.0
FAILURE lighted on status panel	Frame controller inoperative or in MCOND	(1) Reset needed, 2) Failed plug-in	6.1
RESET-STOPPED	Frame controller inoperative	(1) Incorrect MC plug-in code, (2) Failed plug-in	6.2
BOOT FAILED:BAD BOOT DEVICE	Frame controller inoperative	(1) Incorrect MC plug-in code, (2) Failed plug-in	6.4

Trouble Indication/ Trouble Messages	Consequence Action	Trouble Cause	Trouble Section
Inoperative terminal (Frame Hung)	Can't enter commands	(1) Terminal setup, (2) Incorrect link provisioning, (3) Failed CI plug-in, (4) Link adapter or connections.	6.6
{MP CI},OVERLOAD	Frame controller can't process commands; reset operated.	Failed controller plug-in	6.5
UNIT-qq UC, OVERLOAD	Unit controller can't process commands; UC restored.	Failed controller plug-in	6.5
CP MEM ...DENY	Backup transfer failed; SMEM will not be current	(1) Tape problem, (2) Frame controller trouble	7.1
MC:RESET (COND cc) COMPLD	Frame controller inoperative or in MCOND	(1) Can't access PMEM/SMEM, (2) Failed plug-in	7.2
DGNDET Message O.82002	Frame audit messages	Equipage/provisioning disagreement in memories.	8.1
DGNDET Message O.82001	Plug-in removed from service	Failed plug-in	8.2
DGNDET Message O.82003	Frame audit messages	Disagreement in RAM and PMEM	8.3
ERR MSGS TO LOG DISCARDED	Transient errors being recorded	Errors detected at plug-in	4.6
ERR,HARDWARE	Plug-in removed from service or identified for maintenance	Error detected at plug-in	4.8
ERR,SOFTWARE	Command aborted; autonomous maintenance action		9.1

When to Use Use this General Task to isolate frame troubles.

Instructions

To isolate frame troubles, follow these steps.

1. If alarm cutoff is needed, enter **OPR-ACO-ALL**. If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. Check for blown fuses (see Note). If whole units of packs have failed, check the fuse and alarm panel for lighted **FA** lamp and a blown 48-volt feeder fuse. In the unit and other circuit groups, check for lighted LED indicator on or above fuse boards.



NOTE:

Depending on the type of fuse, a blown fuse is indicated by one of the following: (1) extended color bead on indicator fuse, (2) lighted LED on LED-fuse, or (3) lighted LED for group of fuses on fuse block.

- If there is a blown fuse at the frame, go to GT 2.1 to clear blown fuse trouble.
3. Check printout for ERR PWR message.

- If ERR PWR message occurs in printout, go to GT 2.2 to clear power unit failure.
4. Enter **RTRV-ALM-EQPT : [xy] : : [ww]** ; for an alarm summary and use the following to interpret the output:
- The frame and power alarm summaries occur early in the printout. The left-to-right assignment for the PWR line is: 1-6 for peripheral units, 7 and 8 for sync sides 0 and 1, 9 and 10 for CCN/ECCN sides 0 and 1, and 11-20 for other peripheral units.
 - Pack alarms are indicated by an "a" (for auto removal) or M (for major) in the message where the pack is listed. Unequipped packs are shown by dashes.
 - Alarms on 2.048-Mb/s terminations are indicated by an M (major), * (minor), I (INFO for type PB/PC NPC), or dash (no alarm) for the NPC.
 - DS3 AlarmNPC-xxxx, MXR r of UnitFigure 1.2-1 shows how to read the common equipment line in the output. Alarms are indicated by M (for major).
- If the DACS II does not execute the command, refer to Step 16.

"ALMS:a,b,c,d,e,f,g,h,i,j,k,l,m,n,o,p,q,r,s"

a	=	MC (Main Controller)
b	=	MP (Main Processor)
c	=	CI (Communications Interface)
d	=	SSC (Secondary Storage Controller)
e	=	PMEM
f	=	SMEM
g	=	Link 1
h	=	Link 2
i	=	Link 3
j	=	Link 4
k	=	Link 5
l	=	Link 6
t	=	Link 7
m	=	Cross-connect Side 0
n	=	Cross-connect Side 1
o	=	CCI 0 /CCNI 0
p	=	CCI 1 /CCNI 1
q	=	TOD Reset
r	=	DATE Reset
s	=	SMEM OOS

Figure 1.2-1. Common Equipment Alarms

5. Check printout for any of the messages in Table 1.2-1.
 - If you have any of the messages in Table 1.2-1, go to the reference listed for the message.

Table 1.2-1. Facility Alarm Messages

Message Keywords	Reference
REPT ALM AR01 -AR01 MISC ALM MJ,PBA (2.048 Mb/s line)	GT 3.1
REPT ALM EQPT -<npc No.>:{MJ/MN},<parameter>	GT 3.2
REPT ALM EQPT -<npc No.>:{15ME/24HR},<parameter>	GT 3.2

6. Check the printout for an ERR ESR ANALYSIS REPORT message. See Figure 1.2-2 for the typical sequence of messages.

- If you have the ERR ESR ANALYSIS REPORT message, go to GT 4.2 to clear that message.

```

A ff REPT EVT EQPT
  "<entity>,TN-X-dddd,EVENT-eeee,ESR,ERR"
  "<error data bytes>"

A ff REPT ALMDET EQPT
/* [0.01391] */
"ANALYSIS, REPORT,EVENT-eeee,ESR,ERR"
"<action>,<suspect plug-in No.1>"
"<action>,<suspect plug-in No.2>"
"<action>,<suspect plug-in No.3>"
"<action>,<suspect plug-in No.4>"

A ff REPT RMV EQPT
/* [0.33xxx] */
"<entity>:<state>"

A ff REPT DGNDDET EQPT
/* [0.41xxx] */
"<entity>:{ATP|CATP-cc|STF-ppqq},<data bytes>"

```

Figure 1.2-2. Error Analysis Report

7. Check the printout for REPT RMV EQPT and REPT DGNDDET EQPT sequence of messages.
 - If you have the RMV and DGN sequence of messages, go to GT 4.3 to clear the ERR <entity> message.
8. Enter **RTRV-STATE-EQPT : [UNIT - [q]q] : :ALL**; for the whole frame or unit (of the frame) and check output for failed and out-of-service plug-ins and compare results with the ALMs query entered previously.

Out-of-service, failed, and pested plug-ins are indicated by the presence of a "1" in the respective columns (out-of-service, failed, pested) of the output for each plug-in; unequipped NPCs are indicated by dashes.

9. If any circuits have failed status (shown in previous queries), Diagnose them with the DGN command. If they still have failed status, enter RMV command for plug-in, replace it, and enter RST command per Figure 1.2-3.
10. If any circuits are out-of-service but not failed, enter the RST command per Figure 1.2-3.

verb:[xy]:<CP identification>:[ww]{} or {:<additional info.>}			
{RMV-EQPT::	SYNC-a;	a	= 0 or 1
/RST-EQPT::	SYNC-a:[ww]:TLI-n[:SSP-b];	n	= 1-4; b = sync port (0 or 1)
/DISC-EQPT::	SYNC:[ww]:TB		
/DGN-EQPT:: }	CCI-s;	s	= side 0 or 1
	CCNI-s;	s	= side 0 or 1
	ETSI-sqq;	qq	= unit 01-16
	TSI-sft;	f	= unit (receiving from) (1-6)
	CCB-sf;	t	= unit (transmitting to) (1-6)
	ETSI, ECCN-s;		
	UNIT-[q]q:[ww]:UC;	[q]q	= unit 01-16
	UNIT-[q]q:[ww]:{FTMI-d DSPI};	d	= module interface 1-4
	UNIT-[q]q:[ww]:FC-sd;	sd	= FC side (0,1) and FC No. (1-4)
	UNIT-[q]q:[ww]:MIU-c;	c	= DS3 group (1-6, P)
DGN-EQPT::	NPC-<npc No.>:[ww]:[SIDE-s];	<npc No.>	= NPC No.
		s	= SIDE for DSPU
	LINK-j;	j	= link 1-6
	UNIT-[q]q:[ww]:MXR-c;	c	= DS3 group (1-6, P)

Figure 1.2-3. Maintenance Command Construction

11. Check printout for any messages that start with an A (for autonomous) or I (information) prefix.
 - If you have an REPT EVT EQPT "LINK ...STATUS" message, check if the terminal has been disconnected from any link (first data byte after word STATUS will be 00 or 01 if this is the case).
 - If you have any of the autonomous messages, refer to Table 1.2-1 for trouble procedure reference.
 - If the alarm has cleared, the trouble was either intermittent or the preceding activity cleared the alarm condition. The status panel alarm will clear and an IDLD message will be issued in most cases.
12. If the alarm is still present, reenter the following commands:
RTRV-ALM-EQPT;
RTRV-STATE-EQPT::[UNIT-[q]q]::ALL;
RTRV-STATE-COM:::ALL;
 - If any CPs have failed status, enter the RMV command, replace the plug-in, and enter the RST command per Figure 1.2-2.
13. To make a record of the error history on the PMEM (for use by technical consultant), enter one of the following commands (see Note):

Time of Day/Time Interval:

**RTRV-LOG:[xy]::[ww]:ERR:HWER,{INT-mn|
[DATE-mm-dd-yy,]TOD-hh-mm-ss}};**

Suspect Entity:

RTRV-LOG:[xy]::[ww]:ERR:HWER,ENTY-eee;

Where:

- INT = Interval of time (past 59 minutes)
- TOD = Time of day consisting of hour (hh=00 through 23), minutes (mm=00 through 60), seconds (ss=00 through 60). Date (month, day, year) is optional.
- eee = Plug-in designation, for example: BX, CCB, CCI, CCNI, CI, CPR, CRO, PMEM, DMB, DSPI, EBX, EMTC, ETSI, FC, FTMI, LINK, MC, MP, MTC, NPC, SYNC, SMEM, TLI, TSI, UBX, UC.

**NOTE:**

If you do not know how full the error log is (not recently cleared), you will want to use a short interval, perhaps the past 5 minutes, to avoid overloading the link with old errors.

- If you do have trouble messages (from printout or error log) to work with, refer to Table 1.2-2 to clear the trouble.

**NOTE:**

Steps **14** and **15** deal with an MC problem causing false alarms to be reported. To avoid unnecessary plug-in replacements in the MC, it is important to be sure there are no other trouble messages.

14. Replace the EMTC or MTC plug-in in the MC.
15. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - If the alarm clears, this procedure is completed.
 - If the alarm does not clear, there is an obscure trouble; contact technical consultant.

(Continue Here If DACS II Is Not Responding to Commands)

16. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - If STARTUP ...STF message is received, go to GT 6 to clear reset stopped (startup diagnostic failed).
 - If the DACS II is now executing commands, this procedure is completed.
 - If the DACS II is still not executing commands, continue with Step **17**.
17. At the back of the frame, disconnect the administrative link cables (except link 1) from the main controller and tag them for correct installation after the trouble is cleared.
18. Replace the appropriate pack as follows:
 - For RL response, replace the CPU2 in the main controller.
 - For no response (no character echo), replace the ICI (Intelligent Communication Interface) in the main controller.
19. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.

- If RESET ...COMPLD (with no error explanations) message is received, this procedure is completed. Reconnect the administrative links.
- If conditional completion is received, go to GT 7.2 to clear reset conditional completion.

Table 1.2-2. Autonomous Messages

Autonomous Message	Reference
ALM IDLD <parameter> NPC <npc No.> COMPL <parameter> = BER, SLIP, or other facility error	GT 1.3
ALM IDLD ECCN s OOS COMPL	GT 1.3
ALM MJ ECCN s OOS COMPL	GT 4.1
ALM MN SMEM COMPL	GT 7.1
ALM RESET {DATE/TOD/TOD DATE} ...COMPL	GT 6.3
ALM [LOS/LEN/EXJ/PHS/OOF/MAJ/MIN] CLR ...COND Eccc COMPL	GT 1.3
ALM [LOS/LEN/EXJ/PHS/OOF/MAJ/MIN] SET ...COND Eccc COMPL	GT 4.3
ALM {15ME/24HR} <parameter> NPC <npc No.> COMPL	GT 3.2
ALM {MJ/MN} <parameter> NPC <npc No.> COMPL <parameter> = BER, SLIP, or other facility error	GT 3.2
AR01 MISC ALM IDLD PBA <npc No.> {A/B/E/I/L/M/R/S/V/X/Y} COMPL	GT 1.3
AR01 MISC ALM {PMA/DMA/MI} PBA <npc No.> <alarm type > COMPL	GT 3.1
AUD QRY BER ALL NPCS TOT xxxx COMPL	GT 3.5
{BADVERB/FRMERR/SEQERR} BAD SYNTAX ...STOPPED	GT 11.1
BMTR ...DNY	GT 7.1
BOOT FAILED - BAD BOOT DEVICE	GT 6.4
ICI RESET	GT 1.4
ICI STARTUP STF	GT 6.2
CMD MC {OOS/MCOND/INSERVICE/MPDBASE} ...STOPPED	GT 11.1

Autonomous Message	Reference
C BIT BUFFER OVERFLOW	GT 10.3
DGN <entity> IN PROGRESS	GT 1.4
DGN CCB sq STF ppqq COMPL	GT 5.21
DGN CCI s STF ppqq COMPL	GT 5.13
DGN CCNI STF ppqq COMPL	GT 5.13
DGN ICI STF ppqq COMPL	GT 5.3
DGN PMEM STF ppqq COMPL	GT 5.4
DGN ETSI sqq STF ppqq COMPL	GT 5.14
DGN LINK a STF ppqq COMPL	GT 5.18
DGN MC STF ppqq COMPL	GT 5.1
DGN MP STF ppqq COMPL	GT 5.2
DGN SYNC STF ppqq COMPL	GT 5.5
DGN SYNC a,TLI m STF ppqq COMPL	GT 5.7
DGN SYNC,TLI 3,CRO STF ppqq COMPL	GT 5.6
DGN TSI STF ppqq COMPL	GT 5.13
DGN SMEM STF ppqq COMPL	GT 5.16
DGN UNIT qq,DSPI STF ppqq COMPL	GT 5.10
DGN UNIT qq,FC sb STF ppqq COMPL	GT 5.11
DGN UNIT qq,FTMI d STF ppqq COMPL	GT 5.9
DGN UNIT qq,UC STF ppqq COMPL	GT 5.8
EBX STARTUP STF	GT 6.2
EMTC STARTUP STF	GT 6.2
ERR ANALYSIS REPORT ...COMPL	GT 4.2
ERR CMD ABT ...STOPPED	GT 11.1
ERR ESR CCI s TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR ETSI sqq TN dddd EVENT eeee ...COMPL	GT 4.3

Autonomous Message	Reference
ERR ESR LINK a TN dddd STATUS a0 a1 a2 COMPL	GT 4.3
ERR ESR MC ICI TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR MC EBX TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR MC EMTC TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR MC MP TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR MC SSC TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR NPC <npc No.>[-<range>] SIDE s TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR NPC <npc No.>[-<range>] TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR SYNC a TLI m SSP b TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR SYNC a TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR UNIT qq DSPI TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR UNIT qq FC sb TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR UNIT qq FLI k TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR UNIT qq FMT s TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR UNIT qq FTMI b TN dddd EVENT eeee ...COMPL	GT 4.3
ERR ESR UNIT qq {UC/UBX} TN dddd EVENT eeee ...COMPL	GT 4.3
ERR HARDWARE COMPL	GT 4.8
ERR MSGS TO LOG DISCARDED COMPL	GT 4.6
ERR PWR ...COMPL	GT 2.2
ERR SOFTWARE ...COMPL	GT 9.1
ERR SYNC a MODE {FAST/HOLDOVER/NORMAL} ...COND Eccc COMPL	GT 4.3
ERR SYNC a TLI m SSP b [NPC <npc No.>]	GT 4.3
FRADTS <nnppqq> CYCLE STARTED	GT 1.4
FRADTS BMCMP ...COMPL	GT 8.3
FRADTS DGN ...COMPL	GT 8.2
FRADTS FRCMP ...COMPL	GT 8.1

Autonomous Message	Reference
FRADTS MC DGN tttt COMPL	GT 8.2
MC RESET ...COND cc COMPL	GT 7.2
RMV <entity> COMPL	GT 4.5
MP STARTUP STF	GT 6.2
MTC STARTUP STF	GT 6.2
OVERLOAD {MP/ICI/UNIT qq UC} ...COMPL	GT 6.5
RESET {DATE/TOD/TOD DATE} ...COMPL	GT 6.3
RESET STOPPED	GT 6.2
RL (After Each Entry)	GT 6.7
TS0 R NPC OLD ,NEW ...COMPL	GT 10.1
TS0MBOFL <npc No.> COMPL	GT 10.2
UTL RCY <entity> <action> COND cc COMPL	GT 1.4
UTL RCY <entity> <action> COND cc DNY	GT 9.1
UTL RCY IN PROGRESS	GT 1.4
Autonomous Message (Numerical Order)	Reference
[O.01101]	
M {BADVERB/FRMERR/SEQERR/CMD}:::[ww]:BAD-SYNTAX STOPPED	GT 11.1
[O.01111]	
M CMD::MC:[ww]:{OOS/MCOND/INSERVICE/MPDBASE} STOPPED	GT 11.1
[O.01121]	
A ff REPT EVT EQPT	
"CMD:ERR,ABT[,TN-X-abcd]"	GT 11.1
[O.01131.01]	
M [<error field>/<act verb>]:::[ww]:[<category>,<reason> {STOPPED DENY}	GT 11.1

Autonomous Message (Numerical Order)	Reference
[O.01201] ** ff REPT ALM EQPT "{CI/ICI}:RESET"	GT 1.4
[O.01211] A ff REPT DGN EQPT "{CI/ICI}:STARTUP,{STF}"	GT 6.2
[O.01221] A ff REPT DGN EQPT "MP:STARTUP,{STF}"	GT 6.2
[O.01241] A ff REPT EVT EQPT "BOOT:FROM-{PMEM/SMEM}"	GT 1.4
[O.01241.01] A ff REPT EVT EQPT "BOOT:IN_PROGRESS"	GT 1.4
[O.01251] A ff REPT EVT EQPT ":RESET-STOPPED"	GT 6.2
[O.01261] A ff REPT EVT EQPT "MC:RESET-COMPLD,DACSII:gg,pp,r,kkttuuvv"	GT 1.4
[O.01271] BX {STF}	GT 6.2
[O.01272] EBX STARTUP {STF}	GT 6.2
[O.01281] MTC {STF}	GT 6.2
[O.01282] EMTC STARTUP {STF}	GT 6.2
[O.01291]	

Autonomous Message (Numerical Order)	Reference
A ff REPT INVID SFW [O.01301]	GT 6.2
A ff REPT EVT EQPT "PWR:TN-X-dddd,ERR" [O.01311]	GT 2.2
A ff REPT EVT EQPT "MC:[MP],TN-X-dddd[,EVENT-eeee][,ESR],ERR" [O.01311]	GT 4.3
A ff REPT EVT EQPT "MC:[EMTC],TN-X-dddd[,EVENT-eeee][,ESR],ERR" [O.01312]	GT 4.3
A ff REPT EVT EQPT "MC:[{MP/CI/SSC}],TN-X-dddd[,ESR],ERR" [O.01321]	GT 4.3
A ff REPT EVT EQPT "LINK-a:TN-X-dddd,ERR" "STATUS:a0,a1,a2" [O.01331]	GT 4.3
A ff REPT EVT EQPT "SYNC-a:TN-X-dddd,EVENT-eeee[,ESR],ERR" [O.01333]	GT 4.3
A ff REPT EVT EQPT "SYNC-a:TLI-m,SSP-b[,NPC-abc],TN-X-dddd,ERR" /* ALARM SET */ "[LOS][,LEN][,EXJ][,PHS][,OOF][,MAJ][,MIN]" [O.01335]	GT 4.3
A ff REPT EVT EQPT "SYNC-a:TLI-m,SSP-b[,NPC-abc],TN-X-dddd,ERR" /* ALARM CLEAR */ "[LOS][,LEN][,EXJ][,PHS][,OOF][,MAJ][,MIN]"	GT 4.3

Autonomous Message (Numerical Order)	Reference
[O.01341] A ff REPT EVT EQPT "SYNC-a:TLI-m,SSP-b,TN-X-dddd[,NPC-[s]abc],EVENT-eeee[,ESR],ERR"	GT 4.3
[O.01342] A ff REPT EVT EQPT "SYNC-a:TLI-m,TN-X-dddd,EVENT-eeee[,ESR],ERR"	GT 4.3
[O.01351] A ff REPT EVT EQPT "CCB-sf:TN-X-dddd,EVENT-eeee[,ESR],ERR"	GT 4.3
[O.01352] A ff REPT EVT EQPT "CCNI-s:TN-X-dddd,EVENT-eeee,ESR,ERR"	GT 4.3
[O.01353] A ff REPT EVT EQPT "TSI-sft:TN-X-dddd,EVENT-eeee[,ESR],ERR"	GT 4.3
[O.01354] A ff REPT EVT EQPT "CCI-s:TN-X-dddd,EVENT-eeee[,ESR],ERR"	GT 4.3
[O.01355] A ff REPT EVT EQPT "ETSI-sqq:TN-X-dddd,EVENT-eeee[,ESR],ERR"	GT 4.3
[O.01361] A ff REPT EVT EQPT "UNIT-qq:{UC/UBX},TN-X-dddd,EVENT-eeee[,ESR],ERR"	GT 4.3
[O.01362] A ff REPT EVT EQPT "ERR-SOFTWARE"	GT 11.1
[O.01363] A ff REPT EVT EQPT "UNIT-qq:FTMI-b,TN-X-dddd,EVENT-eeee[,ESR],ERR"	GT 4.3

Autonomous Message (Numerical Order)	Reference
[O.01364] A ff REPT EVT EQPT "UNIT-qq:FC-sb,TN-X-dddd,EVENT-eeee[,ESR],ERR"	GT 4.3
[O.01366] A ff REPT EVT EQPT "SYNC-a,MODE-{FAST/HOLDOVER/NORMAL/MATE}[TLI-m,SSP-c],	GT 4.3
[O.01371] A ff REPT EVT EQPT "NPC-:SIDE-s,TN-X-dddd,EVENT-eeee [,ESR],ERR"	GT 4.3
[O.01372] A ff REPT EVT EQPT "NPC-:TN-X-dddd,EVENT-eeee[,ESR],ERR"	GT 4.3
[O.01381] A ff REPT EVT EQPT "{UNIT-qq,UC/MC[,CI/MP]},{OVERLOAD}"	GT 6.5
[O.01391] A ff REPT ALMDDET EQPT "ANALYSIS,REPORT,EVENT-eeee,ESR,ERR"	GT 4.2
[O.01392] A ff REPT ALMDDET EQPT "<circuit ID>:TN-dddd,ERR,HARDWARE"	GT 4.8
[O.01393] A ff REPT EVT EQPT ":RESET,{DATE/TOD/DATE,TOD}"	GT 6.3
[O.01401] A ff REPT EVT EQPT "UNIT-qq-FLI-k:TN-X-dddd,EVENT-eeee[,ESR],ERR"	GT 4.3
[O.01402] A ff REPT EVT EQPT "UNIT-qq-FMT-s:TN-X-dddd,EVENT-eeee[,ESR],ERR"	GT 4.3

Autonomous Message (Numerical Order)	Reference
[O.01403] A ff REPT EVT EQPT "UNIT-qq-MXR-c[-DEV-<devc>]:TN-X-dddd,EVENT-eeee[ESR],ERR"	GT 4.3
[O.01404] A ff REPT EVT EQPT "UNIT-qq-MIU-c:TN-X-dddd,EVENT-eeee[ESR],ERR"	GT 4.3
[O.33xxx] A ff REPT EVT EQPT "<entity>:<state>"	GT 1.4
[O.41004] M DGN EQPT::<entity>:[ww] IN_PROGRESS	GT 1.4
[O.55703] M <verb>[<modifier>][<modifier>]::[ww] IN_PROGRESS	GT 1.4
[O.58011] A ff REPT EVT EQPT "MC:MCOND"	GT 7
[O.65011] pa ff REPT ALM EQPT "AR01,MISC ALM" "<npc No.>:{PMA/DMA/MI},PBA,{A/B/E/I/L/M/R/S/V/X/Y}"	GT 3.1
[O.65021] A ff REPT ALM EQPT "AR01,MISC ALM" "<npc No.>:IDLD,PBA,<alarm type>"	GT 1.3
[O.65031] pa ff REPT ALM EQPT "<npc No.>:{MJ/MN},<parameter>"	GT 3.2
[O.65035] pa ff REPT ALM EQPT "<npc No.>,{15ME/24HE},<parameter>"	GT 3.2

Autonomous Message (Numerical Order)	Reference
[O.65041] A ff REPT ALM EQPT " <npc No.>:IDLD,<parameter>"	GT 1.3
[O.65045] A ff REPT ALM EQPT " <npc No.>:IDLD,{15ME/24HR},<parameter>"	GT 1.3
[O.65051] pa ff REPT ALM EQPT "ALM,RESET,{DATE/TOD/DATE,TOD}"	GT 6.3
[O.65053] ** ff REPT ALM EQPT "BOOT FAILED:BAD BOOT DEVICE"	GT 6.4
[O.65054] ** ff REPT ALM EQPT "s:OOS"	GT 4.1
[O.65055] pa ff REPT ALM EQPT "s:{MJ IDLD}:OOS"	GT 4.1
[O.65056] pa ff REPT ALM EQPT "BMTR:SMEM:{MN IDLD}"	GT 7.1
[O.65071] A ff REPT OPR ACO ALL	GT 1.4
[O.65201] A ff REPT STATE EQPT /* TS0-R BITS ...OLD:NEW */	GT 10.1
[O.65221] A ff REPT EVT EQPT "C BIT BUFFER OVERFLOW"	GT 10.3
[O.65231]	

Autonomous Message (Numerical Order)	Reference
A ff REPT ALM EQPT "TS0M BUFFER OVERFLOW" [O.82001]	GT 10.2
A ff REPT DGNDDET EQPT "ttt:eeee[-DEV-devc],d0" [O.82002]	GT 8.3
A ff REPT DGNDDET EQPT "ttt:d5,d4,d3,d2,d1,d0" [O.82003]	GT 8.1
A ff REPT DGNDDET EQPT "tt:d8,d7,d6,d5,d4,d3,d2,d1" [O.82004]	GT 8.2
A ff REPT AUD EQPT "MC:tttt" [O.82005]	GT 8.3
A ff REPT EVT EQPT "FRAME:AUD,nnppqq"	GT 1.4

Check REPT ALM IDLD or INFO Message

1.3

When to Use

Use this General Task to deal with alarm IDLD (idled) and INFO (information) messages. Facility alarm idled messages are received after the line signal is restored on a facility that previously had a PBA (primary block alarm). Alarm information messages are received on 2.048-Mb/s lines when an alarm condition designated as maintenance information occurs. Alarm idled messages do not occur after maintenance information alarms due to facility error (for example, for SLIP or BER) are cleared. The error counts for these parameters are checked and the counts are cleared using utility commands.

Instructions

To check alarms or information messages, do the following.

1. Which one of the following keywords appears in the message?
 - If **IDLD**, continue with Step 2.
 - If **INFO**, proceed to Step 4
2. This message reports that an alarm has cleared. For facility alarms, the NPC and the type of alarm are given in the message; for example, PBA (primary block alarm) and facility parameter BER (bit error rate).
3. If the message is the PBA type, you can relate the IDLD message to the alarm onset message by the NPC number. Table 1.3-2 gives the meanings of the alarm types that appear in the alarm onset message for reference.

4. If the message is for a timing link failure (ERR SYNC messages), refer to Table 1.1-2 for the meaning of the alarm type.

Table 1.3-1. Keyword Meanings

Alarm Keyword	Meaning
AIS	Alarm indication signal (DS3)
BER	Bit error rate high (DS3)
LOS	Loss of signal
LEN	Loss of energy
EXJ	Excessive jitter
PHS	Phase shift
OOF	Out of frame
PMA	Prompt maintenance alarm
DMA	Deferred maintenance alarm

Table 1.3-2. PBA Alarm Types

Indicator	Meaning
A	All 1s signal (AIS) received from far end.
B	Incoming high bit error rate (BER).
C	Loss of CRC4 multiframe alignment in TS0 (LCMA). [Note 3]
E	Excessive errors received at far end (REER).
F	Loss of frame (LOF). [Note 3]
G	Far-end loss of CRC4 multiframe alignment in TS0 (FLCMA).
I	Remote all 1s indication (RAIS).
L	Loss of multiframe alignment (LMA). [Note 1]
M	Remote loss of alignment sent on TS16 (R16). [Note 1]
P	TS0 pseudo-frame word out-of-frame (PFWOOF).
R	Loss of signal primary block failure (LOS PBF); loss of frame primary block failure (LOF PBF). [Note 2]
R	Incoming signal failure (PBF).
S	Far end sync has gone into holdover (Sync Fail Indication).
V	All 1s indication on TS16 (A16). [Note 1]
X	Incoming excessive error rate (EER).
Y	Remote alarm indication (RAI).

Note 1: These only occur with CAS line format.

Note 2: R can be either LOF PBF or LOS PBF for PB/PC NPCs;
but R is LOS PBF for PA NPCs.

Note 3: PA type NPCs only.

5. An "A" after the PBA word and NPC number reports the receipt of an AIS (alarm indication signal, all 1s, blue signal) from the far end.



NOTE:

AIS alarms may be programmed to deferred maintenance alarm (DMA), prompt maintenance alarm (PMA), or information (MI) levels.

Check Autonomous Action or Command In-Progress Messages

1.4

When to Use

Use this General Task to check autonomous action or command-in-progress messages.

Instruction

To check check autonomous action or command-in-progress messages, do the following:

**NOTE:**

Action messages indicate that some action has been initiated; frequently, an autonomous action brought by a trouble condition. In-progress messages are issued every 20 seconds while commands with longer execution times are underway. Other commands will be ignored while a command is in-progress.

1. See Table 1.4-1 for an explanation of the message. The message may not require any action, but associated messages may require action. Messages that do not require action are: ACO ACTIVE and CI/ICI RESET.

Message Explanations

Message Keywords	Explanation
DGN EQPT <entity> IN PROGRESS	Autonomous or manually requested diagnostic is being run.
RMV EQPT <entity> IN PROGRESS	Autonomous or manually requested remove from service is being executed; this operation takes up to 3 minutes for the tape drive.
ACO State -Active	Alarm cutoff has been activated using the status panel control.
REPT EVT ...FRAME:AUD	Frame audit routine was autonomously initiated to compare values values stored in different memory locations.
REPT RECOVY EQPT	Autonomous trouble recovery action is being executed.
REPT ALM ...{CI ECI ICI} RESET	Notification to operation systems on links that the main controller has been reset.

2. Which type message do you have?
 - If FRADTS ...STARTED, continue with Step 3.
 - If DGN, RMV, or UTL ...IN PROGRESS, proceed to Step 4.
 - If UTL RCY ...IN PROGRESS, proceed to Step 5.
3. When resulting frame audit messages are received, refer to the appropriate trouble-clearing procedure as follows:
 - If DGNDDET Message No. O.82002, go to GT 8.1.
 - If DGNDDET Message No. O.82001, go to GT 8.2.
 - If DGNDDET Message No. O.82003, go to GT 8.3.
4. If the IN PROGRESS message was received in response to entry of a manual command, wait to see if command completion is received after 20 seconds. See Note.
 - If command completion message is received after 20 minutes, this procedure is completed.



NOTE:

Operations may be delayed because higher priority commands are being processed. Some commands take longer to complete.

5. If IN PROGRESS messages are still being received after an hour, hold the **RESET ENABLE** switch on and press the **RESET** button on the DACS II status panel.

- If the trouble persists, contact technical consultant.



NOTE:

At this point the system is "hung" and the only way to establish communication with the frame is by performing the RESET mentioned above. However, you may run the risk of a service interruption by performing this RESET.

6. Check the printout for ERR ESR MC messages and other trouble messages and check if the **FAILURE** LED is lighted on the status panel. Also enter the following commands: **RTRV-ALM-EQPT**; and **RTRV-STATE-EQPT: : : ALL**; and refer to the appropriate part (listed in order of importance) as follows:
 - If ERR ESR message, go to GT 4.3.
 - If FAILURE lighted on status panel, go to GT 6.1.
 - If retry later (RL) responses, go to GT 6.7.
 - If ERR SOFTWARE message, go to GT 9.1.
 - If frame alarm, go to GT 1.2.
 - If failed or out-of-service plug-ins, go to GT 2.1, 4.2, or 4.3.
 - If other trouble message, find the message in Table 1.2-2 at the end of GT 1.2 and go to that reference.
-

Power Failures

General Tasks

2

Contents

■ Clear Blown Fuse Trouble	GT 2.1-1
■ Clear Power Unit Trouble	GT 2.2-1
■ Recover From Loss of Input Power	GT 2.3-1

When to Use

There is no backup power for a blown fuse. However, fusing is designed so that a single failure will only affect one side of any duplicated network and a minimum of plug-ins. The indications of a blown fuse are the lighted indicator on the panel or fuse board and the output messages indicating that groups of plug-ins have failed.

Instructions

1. Locate blown fuse by lighted LED fuse or extended fuse bead. An **FAL** indicator on the fuse and alarm panel will be lighted for a 48-volt fuse. The fuse and alarm panel is at the bottom of the multibay frame and at the top of single-bay frame.
2. Replace blown fuse. For LED-type fuses, use extractor or long-nose pliers. If separate 1/2 A indicator fuses are provided, replace the higher amperage fuses before the indicator fuses.



CAUTION:

Using a replacement fuse of higher amperage rating can cause equipment damage.

The color of the bead indicator fuses denotes the amperage. Red is for 1/2 A (70G), orange is for 2A (70B), and green with black stripe is for 5A (70D) fuse.

On older fuse panels, which do not use a 5A indicator fuse for positions A5-1, A6-1, B5-1, B6-1, etc., the fuses for those positions are 1/2 A indicator fuses and the associated 7.5A fuses.

- If the fuse holds, proceed to Step **13**.
- If the fuse does not hold, continue with Step **3**.
- 3. If the blown fuse is on the 48-volt fuse and alarm panel, continue with Step **4**.
 - If the blown fuse is not on that panel, proceed to Step **7**.
- 4. Replace associated power unit or CP (circuit pack) listed in the appropriate table:
 - Table 2.1-1 to Table 2.1-4 for the CEF
 - Table 2.1-5 for the non-CEF multibay frame
 - Table 2.1-6 for the single-bay frame.
- 5. Replace fuses.
- 6. If the fuse holds, verify that power unit output voltage is within limits (see Note 1) per Table 2.1-7 using a digital multimeter (such as KS-20599).

The FTU power units feed a common bus. To test the replacement for low voltage, one of the other units in the group must be temporarily disconnected.

- If output is out of limits, replace the power unit with one that meets requirements.
- If the fuse does not hold, refer to the appropriate schematic from the list below to locate the wiring trouble between feeder fuse and the power unit.
 - SD-96699-01 for CEF
 - SD-96658-01 for non-CEF multibay frame
 - SD-96684-01 for single-bay frame.

After the wiring trouble is corrected, you will have to use the commands of Figure 2.1-1 to restore all plug-ins that were removed from service (see trouble printout).

Table 2.1-1. 48-Volt Power (CEF) Feed A Fuse

Feed A Fuse	Power Unit/CP			
	Type (Note)	Assignment	Size	Bead Color
A1	411A,SM566, 424AA, or 563A	Unit 1	70D,5A	Green
A2	411A,SM566, 424AA, or 563A	Unit 2	70D,5A	Green
A3	411A,SM566, 424AA, or 563A	Unit 3	70D,5A	Green
A4	411A,SM566, 424AA, or 563A	Unit 4	70D,5A	Green
A5-1	Indicator for A5-2	-	70G,0.5A	Red
A5-2	CCI,ETSIs	ECCN 0	74J,7.5A	-
A6-1	-	-	-	-
A6-2	-	-	-	-
A7	411AA,SM566, 424AA, or 563A	Unit 5	70D,5A	Green
A8	TG58	0SPU (SYNC 0)	70D,5A	Green
A9	411AA,SM566, 424AA, or 563A	Unit 6	70D,5A	Green
A12	411AA,SM566, 424AA, or 563A	Unit 7 (0PU)	70D,5A	Green
A13	411AA,SM566, 424AA, or 563A	Unit 8 (0PU)	70D,5A	Green
A14	411AA,SM566, 424AA, or 563A	Unit 10	70D,5A	Green
A15	411AA,SM566, 424AA, or 563A	Unit 11 (0PU)	70D,5A	Green
A16	411AA,SM566, 424AA, or 563A	Unit 13 (0PU)	70D,5A	Green
A17	411AA,SM566, 424AA, or 563A	Unit 14 (0PU)	70D,5A	Green
A18	411AA,SM566, 424AA, or 563A	Unit 15	70D,5A	Green
A19	-	-	-	-

Note: The type depends on the type of unit (IFTU, DSPU, or HDS3U).

Table 2.1-2. 48-Volt Power (CEF) - Feed B Fuse

Feed B Fuse	Power Unit/CP			
	Type (Note)	Assignment	Size	Bead Color
B1	411A, SM566, 424AA, or 563A	Unit 1	70D, 5A	Green
B2	411A, SM566, 424AA, or 563A	Unit 2	70D, 5A	Green
B3	411A, SM566, 424AA, or 563A	Unit 3	70D, 5A	Green
B4	411A, SM566, 424AA, or 563A	Unit 4	70D, 5A	Green
B5-1	-	-	-	-
B5-2	-	-	-	-
B6-1	-	-	-	-
B6-2	-	-	-	-
B7	411AA, SM566, 424AA, or 563A	Unit 5	70D, 5A	Green
B8	-	CRO	70D, 5A	Green
B9	411AA, SM566, 424AA, or 563A	Unit 6	70D, 5A	Green
B12	411AA, SM566, 424AA, or 563A	Unit 7	70D, 5A	Green
B13	411AA, SM566, 424AA, or 563A	Unit 9 (OPU)	70D, 5A	Green
B14	411AA, SM566, 424AA, or 563A	Unit 10 (OPU)	70D, 5A	Green
B15	411AA, SM566, 424AA, or 563A	Unit 11	70D, 5A	Green
B16	411AA, SM566, 424AA, or 563A	Unit 12 (OPU)	70D, 5A	Green
B17	411AA, SM566, 424AA, or 563A	Unit 14	70D, 5A	Green
B18	411AA, SM566, 424AA, or 563A	Unit 15 (OPU)	70D, 5A	Green
B19	411AA, SM566, 424AA, or 563A	Unit 16 (OPU)	70D, 5A	Green

Note: The type depends on the type of unit (IFTU, DSPU, or HDS3U).

Table 2.1-3. 48-Volt Power (CEF) - Feed C Fuse

Feed C Fuse	Power Unit/CP			
	Type (Note)	Assignment	Size	Bead Color
C1	411A,SM566, 424AA, or 563A	Unit 1 (1PU)	70D,5A	Green
C2	411A,SM566, 424AA, or 563A	Unit 2 (1PU)	70D,5A	Green
C3	411A,SM566, 424AA, or 563A	Unit 3 (1PU)	70D,5A	Green
C4	411A,SM566, 424AA, or 563A	Unit 4 (1PU)	70D,5A	Green
C5-1	Indicator for C5-2	-	70G,0.5A	Red
C5-2	CCI,ETSIs	ECCN 1	74J,7.5A	-
C6-1	-	-	-	-
C6-2	-	-	-	-
C7	411AA,SM566, 424AA, or 563A	Unit 5	70D,5A	Green
C8	TG58	1SPU (SYNC 1)	70D,5A	Green
C9	411AA,SM566, 424AA, or 563A	Unit 6 (1PU)	70D,5A	Green
C12	411AA,SM566, 424AA, or 563A	Unit 7 (1PU)	70D,5A	Green
C13	411AA,SM566, 424AA, or 563A	Unit 8 (1PU)	70D,5A	Green
C14	411AA,SM566, 424AA, or 563A	Unit 9	70D,5A	Green
C15	411AA,SM566, 424AA, or 563A	Unit 11 (1PU)	70D,5A	Green
C16	411AA,SM566, 424AA, or 563A	Unit 12	70D,5A	Green
C17	411AA,SM566, 424AA, or 563A	Unit 13 (1PU)	70D,5A	Green
C18	411AA,SM566, 424AA, or 563A	Unit 16	70D,5A	Green
C19	-	-	-	-

Note: The type depends on the type of unit (IFTU, DSPU, or HDS3U).

Table 2.1-4. 48-Volt Power (CEF) - Feed D Fuse

Feed D Fuse	Power Unit/CP			
	Type (Note)	Assignment	Size	Bead Color
D1	-	-	-	-
D2	-	-	-	-
D3	-	-	-	-
D4	-	-	-	-
D5-1	-	-	-	-
D5-2	-	-	-	-
D6-1	-	-	-	-
D6-2	-	-	-	-
D7	411AA,424AA, or	+5 MC Power	70D,5A	Green
D9	SM565 (MCP)	MC Power	70B,2A	Orange
D10	-	MTC	70G,0.5A	Red
D12	411AA,SM566, 424AA, or 563A	Unit 8 (0PU)	70D,5A	Green
D13	411AA,SM566, 424AA, or 563A	Unit 9 (1PU)	70D,5A	Green
D14	411AA,SM566, 424AA, or 563A	Unit 10 (1PU)	70D,5A	Green
D15	411AA,SM566, 424AA, or 563A	Unit 12 (1PU)	70D,5A	Green
D16	411AA,SM566, 424AA, or 563A	Unit 13	70D,5A	Green
D17	411AA,SM566, 424AA, or 563A	Unit 14 (1PU)	70D,5A	Green
D18	411AA,SM566, 424AA, or 563A	Unit 15 (1PU)	70D,5A	Green
D19	411AA,SM566, 424AA, or 563A	Unit 16 (1PU)	70d,5A	Green

Note: The type depends on the type of unit (IFTU, DSPU, or HDS3U).

Table 2.1-5. Multibay Power (Non-CEF)

Fuse	Power Unit/CP			
	Type	Designation/Location	Size	Bead Color
A1	411AA	128-012	70D,5A	Green
A2	411AA	128-108	70D,5A	Green
A3	411AA	328-012	70D,5A	Green
A4	411AA	328-108	70D,5A	Green
A5-1	-	(Indicating Fuse for A5-2)	70G,.5A	Red
A5-2	485AB	PU1 (CCN 0)	70D,5A	Green
A6-1	-	(Indicating Fuse for A6-2)	70G,.5A	Red
A6-2	485AB	PU2 (CCN 0)	70D,5A	Green
A7	411AA	1PU (Unit 5)	70D,5A	Green
A8	TG58	0SPU (SYNC 0)	70D,5A	Green
A8	-	0TB	70D,5A	Green
A9	411AA	1 PU (UNIT 6)	70D,5A	Green
B1	411AA	128-024	70D,5A	Green
B2	411AA	128-124	70D,5A	Green
B3	411AA	328-024	70D,5A	Green
B4	411AA	328-124	70D,5A	Green
B5-1	-	(Indicating Fuse for B5-2)	70G,.5A	Red
B5-2	485AB	PU3 (CCN 0)	70D,5A	Green
B6-1	-	(Indicating Fuse for B6-2)	70G,.5A	Red
B6-2	485AB	PU4 (CCN 0)	70D,5A	Green
B7	411AA	0PU (UNIT 5)	70D,5A	Green
B8	TG58	1SPU (SYNC 1)	70D,5A	Green
B8	-	1TB	70D,5A	Green

Table 2.1-5. Multibay Power (Non-CEF) (Continued)

Fuse	Power Unit/CP			
	Type	Designation/Location	Size	Bead Color
B9	411AA	0PU (UNIT 6)	70D,5A	Green
C1	411AA	128-048 (Unit 1)	70D,5A	Green
C2	411AA	128-148 (Unit 2)	70D,5A	Green
C3	411AA*, 424AA, SM566, or 563A	328-048* (Unit 3)	70D,5A	Green
C4	411AA*, 424AA, SM566, or 563A	328-148* (Unit 4)	70D,5A	Green
C5-1	-	(Indicating Fuse for C5-2)	70G,.5A	Red
C5-2,	485AB	PU5 (1CCN)	70D,5A	Green
C6-1	-	(Indicating Fuse for C6-2)	70G,.5A	Red
C6-2,	485AB	PU6 (1CCN)	70D,5A	Green
C7	411AA	(Unit 5)	70D,5A	Green
C8	-	TLIs	70D,5A	Green
C9	SM566*, 424AA, 411AA, or 563A	DCP6* (Unit 6)	70D,5A	Green
D1	411AA	128-064 (Unit 1)	70D,5A	Green
D2	411AA	128-160 (Unit 2)	70D,5A	Green
D3	411AA*, 424AA,	328-064*	70D,5A	Green

Table 2.1-5. Multibay Power (Non-CEF) (Continued)

Fuse	Power Unit/CP			
	Type	Designation/Location	Size	Bead Color
D4	SM566, or 563A	(Unit 3)		
	411AA*, 424AA,	326-160*	70D,5A	Green
D5-1	SM566, or 563A	(Unit 4)		
	-	(Indicating Fuse for D5-2)	70G,.5A	Red
D5-2	485AB	PU7 (1CCN)	70D,5A	Green

Table 2.1-6. Single-Bay Power (Non-CEF)

Fuse	Power Unit	
	Type	Designation/Location
A1	411AA	FTU1-First PU
A2	TG58	0SPU (Sync Power)
A3	411AA	0PU (DSPU Side 0 Power)
A4	411AA	CCN2 Side 0 Power Unit
B1	411AA	FTU1-Second PU
B2	TG58	1SPU (Sync Power)
B3	411AA	1PU (DSPU Side 1 Power)
B4	411AA	CCN2 Side 1 Power Unit
C1	411AA	FTU1-Third PU
C2	NONE	48 Volts to TLIs 1-4, Both Sides
C3	SM566	DCP (DSPU Power)
D2	411AA	+5 Controller Power
D4	SM565	MCP (Main Controller Power)
D5	NONE	48 Volts to MTC Pack

7. If the fuse holds, verify that power unit output voltage is within limits (see Note 1) per Table 2.1-7 using a digital multimeter (such as KS-20599).

Table 2.1-7. Power Unit Requirements

		Meter Connections	
Power Unit Code	Output Requirement (DC Volts)	Positive Lead	Negative Lead
SM565	+11.75 to +12.25	+V2	RTN
	–11.75 to –12.25	–V2	RTN
411AA	+5.1 to +5.3	+	–
TG58	+4.75 to +5.25	+	–
	–4.95 to –5.45	+	–
424AA	+5.0 to +5.5	+	–
485AB	+5.1 to +5.4	+	–

8. Refer to the appropriate table(s) that follows and the trouble printout to see the associated packs.
 - Table 2.1-8 for controller and sync fuses (CEF)
 - Table 2.1-9 for controller and sync fuses (non-CEF)
 - Table 2.1-10 for IFTU fuses
 - Table 2.1-11 for DSPU fuses (flexible bay)
 - Table 2.1-12 for DSPU fuses (original interface bay)
 - Table 2.1-14 for CCN fuses (original interface bay)
 - Table 2.1-15 for FTUs (original interface bay). See Note.

**NOTE:**

For LED-type fuses, the designation strips which have the right half offset up are read as follows: the lower left designation is for the bottom fuse on the fuse board, and the upper right one is for the top fuse (for example, CA at bottom and CH at top on ED-2C863-30, G1 dual fuse board).

9. Use RMV-EQPT commands per Figure 2.1-1 to remove any affected packs from service that were not removed as part of error recover RMV ...COMPLD in printout).

NOTE: Removing the NPC is service affecting.

Figure 2.1-1. Maintenance Command Construction

10. If the fuse holds, continue with Step 11.
 - If the fuse does not hold, refer to appropriate schematic listed below to clear wiring problem (see Note). After trouble is cleared, reinsert CPs; the packs affected by the power loss will also have to be restored to service per Figure 2.1-1.
 - SD-96699-01 for CEF

- SD-96658-01 for non-CEF multibay frame
- SD-96684-01 for single-bay frame.

**NOTE:**

You can use the coordinate location stamped over the plug-in position on the front panel to locate the slot wiring on the backplane.

11. Reinsert CPs one by one while watching fuse to find defective CP which blows fuse.
12. Replace CP that blows fuse and replace blown fuses.
13. Use RST-EQPT commands per Figure 2.1-1 to restore affected packs (RMV ...COMPLD in printout). The commands are listed according to the hierarchy of the packs in the frame.
 - If the CCI cannot be restored, enter **STA-LOCL-RST : :PMEM**; and, after the boot completes, restore the CCI to service.
 - If RST ...DENY message is received, find the reason for denial in the output message and perform corrective action to obtain command completion.

Table 2.1-8. Sync and Controller Fuses (CEF)

Power Unit/ Location	Associated Circuit Pack/Location	Power Unit/ Location	Associated Circuit Pack/Location
1SPU /14-160	0TLI2 /10-112		EBX /04-128
	0TLI3 /10-120		CPU2 /04-120
	0TLI4 /10-128		EMTC /04-112
	0DPLL /12-084		CI /04-136
	1TLI4 /10-136		EBX /04-128
	1TLI3 /10-144		CPU2 /04-120
	1TLI2 /10-152		EMTC /04-112
	1TLI1 /10-160		CI /04-136

Table 2.1-9. Sync and Controller Fuses (non-CEF)

Synchronizer		Main Controller	
Power Unit/ Location	Associated Circuit Pack/Location	Power Unit/ Location	Associated Circuit Pack/Location
0SPU /227-010 A8 FUSE 1SPU /227-064	0TLI1 /223-008	MCP /225-136	
	0TLI2 /223-016		BX /225-100
	0TLI3 /223-024		CPU2 /225-108
	0TLI4 /223-032		MTC /225-120
	0DPLL /225-076		CI /225-128
	0TB /227-032	PU /225-148	
	1TLI1 /223-064		BX /225-100
	1TLI2 /223-056		CPU2 /225-108
	1TLI3 /223-048		MTC /225-120
	1TLI4 /223-040		CI /225-128

Table 2.1-10. IFTU Fuse Assignment

Fuse Boards	Designation (Note)	Associated Plug-Ins
ED-9C011-30	+5A1 through +5A4	4 plug-ins (8 NPCs) per fuse (see +5A5 below)
ED-9C011-30	(1-4 through 17-20) +5A5	
ED-9C012-30	+5A1 through +5A4	1 plug-in (2 NPCs) per fuse
ED-9C011-30	(1 through 20)	
	+5A5, number 1	
	+5A5, number 2	
	+5A5, number 3	FTMI

Table 2.1-10. IFTU Fuse Assignment

Fuse Boards	Designation (Note)	Associated Plug-Ins
	+5A5, number 4	0-Side FC
	+5A5, number 5	1-Side FC
Note: Designations +5A1 through +5A4 correspond to the modules (shelves) of the unit. The fuse numbers correspond to the plug-ins on the shelf (either 1 for 1 or 1 fuse per 4 plug-ins, depending on the fuse board).		

Table 2.1-11. DSPU Fuses (Flexible Bay)

Fuse	Side	DSP Position (Note)
(Top)	0 DSPU	(Left Panel)
No. 1		First and second
No. 2		Third and fourth
No. 3		Fifth and sixth
No. 4		Seventh and eighth
(Bottom)	1 DSPU	(Right Panel)
No. 5		First and second
No. 6		Third and fourth
No. 7		Fifth and sixth
No. 8		Seventh and eighth

Note: Each fuse supplies two DSP circuit packs.

Table 2.1-12. DSPU Fuses - Original Interface Bay

DSPU5		DSPU6	
Fuse or PU/ Location	Associated Circuit Pack/Location	Fuse or PU/ Location	Associated Circuit Pack/Location
(SIDE 0)		(SIDE 0)	
0PU/109-160		0PU/312-160	
JBH/109-148	NPC641 /109-006	JBH/312-148	NPC801 /312-006
	NPC661 /109-012		NPC821 /312-012
JBG	NPC681 /109-018	JBG	NPC841 /312-018
	NPC701 /109-024		NPC861 /312-024
JBF	NPC721 /109-030	JBF	NPC881 /312-030
	NPC741 /109-036		NPC901 /312-036
JBE	NPC761 /109-042	JBE	NPC921 /312-042
	NPC781 /109-048		NPC941 /312-048
(SIDE 1)		(SIDE 1)	
1PU/109-142		1PU/312-142	
JBD/109-148	NPC641 /109-074	JBD/312-148	NPC801 /312-074
	NPC661 /109-080		NPC821 /312-080
JBC	NPC681 /109-086	JBC	NPC841 /312-086
	NPC701 /109-092		NPC861 /312-092
JBB	NPC721 /109-098	JBB	NPC881 /312-098
	NPC741 /109-104		NPC901 /312-104
JBA	NPC761 /109-110	JBA	NPC921-310
	NPC781 /109-116		NPC941 /312-116
DCP5 /109-130	CPU5 /109-056 DSPI5 /109-062	DCP6 /312-130	CPU6 /312-056 DSPI6 /312-062

Table 2.1-13. DS3U Fuses

Fuse Designation	Associated CPs
L	P MXR (HMXR)
K	1 MXR (HMXR)
J	2 MXR (HMXR)
I	3 MXR (HMXR)
H	0 FMT (HFMT)
G	UC
F	1 FMT (HFMT)
E	S FLI
D	P FLI
C	4 MXR (HMXR)
B	5 MXR (HMXR)
A	6 MXR (HMXR)

Table 2.1-14. CCN Fuses - Original Interface Bay

CCN0		CCN1	
Fuse/ Location	Associated Circuit Pack/Location	Fuse/ Location	Associated Circuit Pack/Location
JA1 /215-072	0CCNI /246-150	JA1 /215-088	1CCNI /269-150
	0TSI11 /246-014		1TSI11 /269-014
	0TSI13 /246-020		1TSI13 /269-020
JA2	0CCB1 /246-032	JA2	1CCB1 /269-032
	0TSI15 /246-026		1TSI15 /269-026
	0TSI21 /246-038		1TSI21 /269-038
JA3	0TSI12 /254-014	JA3	1TSI12 /277-014
	0TSI14 /254-020		1TSI14 /277-020
	0TSI16 /254-026		1TSI16 /277-026

Table 2.1-14. CCN Fuses - Original Interface Bay

CCN0		CCN1	
Fuse/ Location	Associated Circuit Pack/Location	Fuse/ Location	Associated Circuit Pack/Location
JA4	0CCB2 /254-032	JA4	1CCB2 /277-032
	0TSI22 /254-038		1TSI22 /277-038
JA5	0TSI23 /246-044	JA5	1TSI23 /269-044
	0TSI25 /246-050		1TSI25 /269-050
	0TSI31 /246-056		1TSI31 /269-056
JA6	0CCB3 /246-078	JA6	1CCB3 /269-078
	0TSI33 /246-066		1TSI33 /269-066
	0TSI35 /246-072		1TSI35 /269-072
JA7	0TSI24 /254-044	JA7	1TSI24 /277-044
	0TSI26 /254-050		1TSI26 /277-050
	0TSI32 /254-056		1TSI32 /277-056
JA8	0TSI34 /254-066	JA8	1TSI34 /277-066
	0TSI36 /254-072		1TSI36 /277-072
JB1 /215-076	0TSI41 /246-084	JB1 /215-092	1TSI41 /269-084
	0TSI43 /246-090		1TSI43 /269-090
	0TSI45 /246-096		1TSI45 /269-096
JB2	0TSI51 /246-102	JB2	1TSI51 /269-102
	0TSI53 /246-108		1TSI53 /269-108
JB3	0CCB4 /254-078	JB3	1CCB4 /277-078
	0TSI42 /254-084		1TSI42 /277-084
	0TSI44 /254-090		1TSI44 /277-090
JB4	0TSI46 /254-096	JB4	1TSI46 /277-096
	0TSI52 /254-102		1TSI52 /277-102
	0TSI54 /254-108		1TSI54 /277-108
JB5	0CCB5 /246-124	JB5	1CCB5 /269-124
	0TSI55 /246-118		1TSI55 /269-118

Table 2.1-14. CCN Fuses - Original Interface Bay

CCN0		CCN1	
Fuse/ Location	Associated Circuit Pack/Location	Fuse/ Location	Associated Circuit Pack/Location
JB6	0TSI61 /246-130	JB6	1TSI61 /269-130
	0TSI63 /246-136		1TSI63 /269-136
	0TSI65 /246-142		1TSI65 /269-142
JB7	0CCB6 /254-124	JB7	1CCB6 /277-124
	0TSI56 /254-118		1TSI56 /277-118
	0TSI62 /254-130		1TSI62 /277-130
JB8	0TSI64 /254-136	JB8	1TSI64 /277-136
	0TSI66 /254-142		1TSI66 /277-142

Table 2.1-15. 77-Type, FTU Fuses - Original Interface Bay

Fuse (Note)	Associated NPCs			
	FTU 1	FTU 2	FTU 3	FTU 4
CA	1-8	161-168	321-328	481-488
CB	9-16	169-176	329-336	489-496
CC	17-24	177-184	337-344	497-504
CD	25-32	185-192	345-352	505-512
CE	33-40	193-200	353-360	513-520
CF	41-48	201-208	361-368	521-528
CG	49-56	209-216	369-376	529-536
CH	57-64	217-224	377-384	537-544
CI	65-72	225-232	385-392	545-552
CJ	73-80	233-240	393-400	553-560
CK	81-88	241-248	401-408	561-568
CL	89-96	249-256	409-416	569-576
CM	97-104	257-264	417-424	577-584
CN	105-112	265-272	425-432	585-592

Table 2.1-15. 77-Type, FTU Fuses - Original Interface Bay

Fuse (Note)	Associated NPCs			
	FTU 1	FTU 2	FTU 3	FTU 4
CO	113-120	273-280	433-440	593-600
CP	121-128	281-288	441-448	601-608
CQ	129-136	289-296	449-456	609-616
CR	137-144	297-304	457-464	617-624
CS	145-152	305-312	465-472	625-632
CT	153-160	313-320	473-480	633-640
CU	(0)FC 1-4	(0)FC 1-4	(0)FC 1-4	(0)FC 1-4
CV	(1)FC 1-4	(1)FC 1-4	(1)FC 1-4	(1)FC 1-4
JW	FTMI 1-4	FTMI 1-4	FTMI 1-4	FTMI 1-4
JX	CPU, UBX	CPU, UBX	CPU, UBX	CPU, UBX

Note: The unit number that the fuses supply is identified on the fuse panel.

When to Use Use this procedure to clear power unit trouble.

Instructions

1. To see which power unit has failed, enter **RTRV-ALM-EQPT**;



NOTE:

The failed power unit is indicated by an "M" in the PWR line of the message. The left-to-right assignment on the PWR line is: positions 1 through 6 for units 1 through 6, 7 and 8 for syncs 0 and 1, 9 and 10 for ECCN sides 0 and 1, and 11 through 20 for units 7 through 16.

2. At the frame, locate the power unit with the lighted **ALM** LED.
3. If the **ALM** indicator is lighted on any power unit, then proceed to Step 6.
 - If no **ALM** indicator is lighted, then continue with Step 4.
4. See Note. With digital multimeter (such as KS-20599), check the outputs of the power units identified by the ALMS message. Measure between + and -V (and V2) jacks Table 2.2-1.

**NOTE:**

The FTU power units feed a common bus, and low voltage can only be detected if one power unit is failed or disconnected.

Table 2.2-1. Power Unit Requirements

Power Unit Code	Output Requirement (DC Volts)	Meter Connections	
		Positive Lead	Negative Lead
SM565	+11.75 to +12.25 –11.75 to –12.25	+V2 –V2	RTN RTN
411AA	+5.1 to +5.3	+	–
TG58	+4.75 to +5.25 –4.95 to –5.45	+	–
424AA	+5.0 to +5.5	+	–
485AB	+5.1 to +5.4	+	–
SM566	+4.75 to +5.25	+	–
563A	+4.9 to +5.3	5.5V	GRD

5. If the requirement of Table 2.2-1 is met, re-install any power unit that was removed and proceed to Step **11**.
 - If the requirement of Table 2.2-1 is not met, continue with Step **6**.
6. Reseat the suspect power unit by moving the latch switch to open and then back to closed.

**NOTE:**

To find a failed FTU power unit (when LED is not lighted), use the process of elimination. Remove one power unit for that FTU and check for low voltage; reinstall that unit, remove a different one, and measure again. Repeat until you can determine which one causes the low voltage.

7. If the **ALM** indicator on the replacement goes off and remains off, proceed to Step **11**.
 - If the **ALM** indicator does not go off and remain off, continue with Step **8**.

8. See Notes 1 and 2; enter **RMV-EQPT::UNIT-[q]q:UC;** to avoid possible ESR COND 31 message. Replace the suspect power unit with one that has the same equipment code.

To find a failed FTU power unit (when LED is not lighted), use the process of elimination. Remove one power unit for that FTU and check for low voltage; reinstall that unit, remove a different one, and measure again. Repeat until you can determine which one causes the low voltage.

**NOTE:**

Insertion of a power unit into a unit can produce an ESR COND 31 message and result in the unit UC being taken out of service. The unit UC can be manually removed before inserting the power unit to avoid the trouble message.

9. If the **ALM** indicator goes off and remains off, continue with Step 10.
 - If the **ALM** indicator does not go off and remain off, clear wiring trouble between power unit and unit fuses using the appropriate schematic listed below. After the trouble is cleared, the circuit packs affected by the power loss will still have to be restored to service per Figure 2.2-1.
 - SD-96699-01 for CEF
 - SD-96658-01 for non-CEF multibay frame
 - SD-96684-01 for single-bay frame.
10. If the unit UC was removed from service, enter **RST-EQPT::UNIT-[q]q:UC;**.
11. To allow future alarms from subject power unit, enter **INIT-REG::PWR-pp;**.

Where: pp = 00 for all power units, 01 through 06 for corresponding unit, 07 or 08 for sync 0 or 1, 09 for ECCN0, and 10 for ECCN1, and 11 through 20 for corresponding power unit.

12. Enter **RTRV-STATE-EQPT:::OOS;** to see which packs have been autonomously removed from service.

The out-of-service status is indicated by the presence of a "1" in the out-of-service column for each pack. Unequipped NPCs are indicated by dashes.

13. Use the RST-EQPT commands in Figure 2-2-1 to restore affected packs to service; MC and sync packs will be reset/restored (and sync will go to fast start) when power is reapplied.
- If ETSIs (expanded time slot interchange) cannot be restored after a DSPU failure, do the following and retry the ETSI restoral after each corrective action. First, remove and restore the subject unit UC.
 - If the ETSIs still cannot be restored, remove any DMBs for those units from service, reseal them in the slots, and restore them.
 - If the ETSIs do restore, this procedure is completed.

verb:[xy]:<CP identification>:[ww]{;} or {:<additional info.>}

{RMV-EQPT::	SYNC-a;	a	=	0 or 1
/RST-EQPT::	SYNC-a:[ww].TLI-n[:SSP-b];	n	=	1-4; b = sync port (0 or 1)
/DISC-EQPT::	SYNC:[ww].TB			
/DGN-EQPT::	CCI-s;	s	=	side 0 or 1
	CCNI-s;	s	=	side 0 or 1
	ETSI-sqq;	qq	=	unit 01-16
	TSI-sft;	f	=	unit (receiving from) (1-6)
	CCB-sf;	t	=	unit (transmitting to) (1-6)
	ETSIS,ECCN-s;			
	UNIT-[q]q:[ww].UC;	[q]q	=	unit 01-16
	UNIT-[q]q:[ww].{FTMI-d DSP1};	d	=	module interface 1-4
	UNIT-[q]q:[ww].FC-sd;	sd	=	FC side (0,1) and FC No. (1-4)
	UNIT-[q]q:[ww].FLI-k;	k	=	service (S) or protection (P)
	UNIT-[q]q:[ww].FMT-s;	s	=	side (0,1)
	UNIT-[q]q:[ww].MMFG-c;	c	=	DS3 group (1-6, P)
	[FRC][,INCL];	FRC	=	forces RMV with no prot. switch
		INCL	=	removes/restores MXR NPCs
	UNIT-[q]q:[ww].MIU-c;	c	=	DS3 group (1-6, P)
	NPC-<npc No.>:[ww].[SIDE-s];	<npc No.>	=	NPC No.
		s	=	SIDE for DSPU
	LINK-j;	j	=	link 1-6
DGN-EQPT::	UNIT-[q]q:[ww].MXR-c;	c	=	DS3 group (1-6, P)

Recover From Loss of Input Power

2.3

When to Use

The arrangement of the four input power feeders is as follows: feeders A and B supply side 0 circuit groups, and feeders C and D supply side 1 circuit groups. This arrangement prevents the loss of service if one feeder fails. The procedure to recover from loss of all input power is to reset the frame controller after the power is connected. This will cause the MC and sync packs to be reset and restored. Cross-connect network and peripheral unit plug-ins must be restored using manual input commands.

Instructions

The most direct approach to recovering from a total input power loss is to simply reset the frame after the 48 V power is restored. The MC and sync packs will be reset/restored (and the sync will go to fast start). Unit and ECCN packs that are out-of-service must be restored using manual input commands. One factor that changes the reset operation is that if the DACS II cannot boot from the PMEM. This would only apply if the PMEM was corrupted because it was being written to at the time of the power loss. In this case, the PMEM card must be replaced with the most recent backup copy. If SMEM was in service at the time, it will also be corrupted and the archived memory card should be used. This archived copy should be placed in the PMEM slot.

**NOTE:**

The database in the circuit pack memories is lost after a power failure, but the database can be restored from the flash cards, if they have not been corrupted.

**CAUTION:**

To prevent damage to the power converters from a power surge, disconnect converters before restoring power.

1. After the power is restored, reinsert the power units. Wait 30 minutes (not necessary if power is off only momentarily) for the sync TB ovens to heat up and, on the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
2. Watch the output messages. The reset will go through CI and MP STARTUP to the point where the system will attempt to use the PMEM to boot the frame.
 - If any STARTUP STF message is received, go to *Controller and Link Troubles* to clear startup trouble.
 - If REPT EVT BOOT FROM PMEM message was not received, continue with Step 3.
 - If the reset sequence proceeds to the receipt of RESET COMPLD (with no error explanation) message, proceed to Step 16.
 - If the reset sequence proceeds to the receipt of RESET COMPLD (with error explanation) message, go to *Data Base Troubles* to clear conditional reset.
3. Place the ESD grounding strap on your wrist and physically remove the CPU2 circuit pack.
4. Replace the failed PMEM memory card with the most recent SMEM memory card (this may be the one currently installed in the SMEM slot on the CPU2 or it may be the most recent archived copy).
5. Insert a spare memory card in the SMEM slot.
6. Physically insert the CPU2 back into the slot.
7. On the Status Panel, hold the RESET ENABLE switch to ON and momentarily press the RESET button.
8. The System should be brought into service with the correct version of the executables and database. If the boot completes successfully and the database is correct, continue with step 16.

9. If the boot does not complete or the original problem persists, then the replacement card is also corrupted, continue with the next step. This is most likely to occur when the replacement card for PMEM was the SMEM card currently being used in the system. If the cards are mirror images of each other, i.e., both PMEM and SMEM are IS at the time the problem occurred, it is likely that both cards will contain the problem.
10. Place the ESD grounding strap on your wrist and physically remove the CPU2 circuit pack.
11. Replace the failed PMEM memory card with the most recent archived memory card.
12. Physically insert a spare memory card in the SMEM slot.
13. Physically insert the CPU2 back into the slot.
14. On the Status Panel, hold the RESET ENABLE switch to ON and momentarily press the RESET button.
15. The system should be brought into service with the correct version of the executables and database.
16. To restore the SMEM card, enter the following command:

RST-EQPT : : SMEM, BKGRND !



NOTE:

This command will overwrite the SMEM card with the contents of the PMEM card.



NOTE:

Any database changes made since the last archived copy was made, must be redone.

17. If early codes of NPCs (Series 2 DMBs) are installed, these codes will have to be disconnected from the frame and reinserted (reset by power up) in order for the packs to be restored to service.
18. Enter **RTRV-STATE-EQPT : : : ALL ;**
to obtain listing of out-of-service, failed, and pested plug-ins.



NOTE:

Out-of-service, failed, and pested plug-ins are indicated by the presence of a "1" in the respective columns of the output message for each plug-in; unequipped NPCs are indicated by dashes.

19. To check only common equipment, enter the following command and read the output per Figure 2.3-1:

RTRV-STATE-COM: : : {00S | FAIL | PEST | ALL};

M RTRV STATE EQPT ... COMPLD

"<subject>:g,h,i,j,k,l,m,n,o,p"

g = Link 1
h = Link 2
i = Link 3
j = Link 4
k = Link 5
l = Link 6
m = Cross-Connect Side 0
n = Cross-Connect Side 1
o = CCI 0 / CCNI 0
p = CCI 1 / CCNI 1

20. See Note. If any CPs are equipped but out-of-service, enter the RST (restore) command per Figure 2.3-1 for the pack.
- If command denial occurs, find the reason for denial in the output message and perform corrective action to obtain command completion.



NOTE:

When a CP in a duplex/protected network (ECCN, DSPU, DS3U) fails, service is switched and all the CPs on the failed side/group are removed from service and pested. To correct the problem, the failure must be cleared so the side (or all CPs) can be restored. If both sides/groups are failed, trouble must be cleared on the out-of-service side/group first; removal of the other side will be denied.

21. If any CPs are failed, enter the DGN (diagnose) command per Figure 2.3-1 for the pack.
- If DGN ...STF message is received, go to *Manual Diagnostic Failures* to clear failed diagnostic.
 - If diagnostic passes, enter RST command.

verb:[xy]:<CP identification>:[ww]{;} or {:<additional info.>};			
{RMV-EQPT::	SYNC-a;	a	= 0 or 1
/RST-EQPT::	SYNC-a:[ww]:TLI- n[:SSP-b];	n	= 1-4; b = sync port (0 or 1)
/DISC-EQPT::	SYNC:[ww]:TB		
/DGN-EQPT::	CCI-s;	s	= side 0 or 1
	CCNI-s;	s	= side 0 or 1
	ETSI-sqq;	qq	= unit 01-16
	TSI-sft;	f	= unit (receiving from) (1-6)
	CCB-sf;	t	= unit (transmitting to) (1-6)
	ETSI,S,ECCN-s;		
	UNIT-[q]q:[ww]:UC;	[q]q	= unit 01-16
	UNIT-[q]q:[ww]:{FTMI- d DSPI};	d	= module interface 1-4
	UNIT-[q]q:[ww]:FC-sd;	sd	= FC side (0,1) and FC No. (1-4)
	UNIT-[q]q:[ww]:FLI-k;	k	= service (S) or protection (P)
	UNIT-[q]q:[ww]:FMT-s;	s	= side (0,1)
	UNIT-[q]q:[ww]:MMFG-c:	c	= DS3 group (1-6, P)
	[FRC][,INCL];	FRC	= forces RMV with no prot. switch
		INCL	= removes/restores MXR NPCs
	UNIT-[q]q:[ww]:MIU-c;	c	= DS3 group (1-6, P)
	NPC-<npc No.>:[ww]:[SIDE-s];	<npc No.>	= NPC No.
		s	= SIDE for DSPU
	LINK-j;	j	= link 1-6
DGN-EQPT::	UNIT-[q]q:[ww]:MXR-c;	c	= DS3 group (1-6, P)

NOTE: Removing the NPC is service affecting.

Figure 2.3-1. Maintenance Command Construction

22. To check for out-of-service, failed, and pested CPs, enter
RTRV-STATE-EQPT::[UNIT-[q]q]::ALL;.
23. If any CPs are still pested, enter the commands to first remove and then restore the CPs per Figure 2.3-1.

- If command denial occurs, find the reason for denial in the output message and perform corrective action to obtain command completion.
 - If there are no pested CPs or command denials did not occur, this procedure is completed.
-

Facility Alarms

General Tasks

3

Contents

■ Clear 2.048-Mb/s Facility AR01 MISC ALM Message	GT 3.1-1
■ Clear 2.048-Mb/s Facility Error Messages	GT 3.2-1
■ Enter Commands to Check 2.048-Mb/s Line Loopback and Operate Line Loopback	GT 3.3-1
■ Clear DS1 Facility CGA (Except <i>SLC</i> , Carrier System)	GT 3.4-1

Clear 2.048-Mb/s Facility AR01 MISC ALM Message

3.1

When to Use Use this procedure to clear a REPT ALM T3 (Unit DS3) message

Instructions

This procedure isolates the cause of an incoming or outgoing signal problem to either the facility or the DACS II equipment and provides the interpretation of received alarm signals. The alarm message also indicates the alarm status: PMA for prompt maintenance, DMA for deferred maintenance, or MI for information. When a receive failure occurs, the DACS II sends a remote alarm signal over the facility to produce a remote alarm indication (RAI, REER, or R16) at the other end. Failure of a facility that serves as a timing link for the DACS II sync brings sync error messages.

1. If alarm cutoff is needed, enter **OPR-ACO-ALL;**.
2. To list all current primary block alarms, enter **RTRV-ALM-EQPT: :NPC: :CFA;** and if associated facilities are alarmed, check records and far-end conditions to determine if trouble is due to cable problem or maintenance activity. For PA type NPCs, the first character in a block can be an 'A' or an 'I', indicating that threshold crossing alarms are allowed or inhibited, respectively. For PB/PC NPCs, the first character will be a dash ('-').
 - If the alarms on other facilities are not related, continue with procedure to clear trouble on one facility and repeat for others.

**NOTE:**

A critical alarm indication on the status panel or a "C" at the beginning of the alarm message means six or more channel groups have failed. Failure of a facility that serves as a timing link for the DACS II sync will also cause sync error recovery messages.

3. When more than one alarm indication is received on the same facility, refer to Table 3.1-1 to determine the priority of the alarm types.

Table 3.1-1. Alarm Priorities

Priority	Alarm Type	Class	Prefix
1	R (LOS)[1]	PMA	** or *C
	P (PFWOOF)[2]	I	
2	A (AIS)	MI,DMA,or PMA	I, *, **, or *C
3	F (LOF)[2]	PMA	** or *C
4	C (LCMA)[2]	MI	I
	X (EER)	PMA	** or *C
5	V (A16)[3]	MI	I
	Y (RAI)	MI	I
	S (SFI)	MI	I
	I (RAIS)	MI	I
	B (BER)	DMA	*
6	L (LMA)[3]	PMA	** or *C
	G (FLCMA)[2]	MI	I
	E (RBER)	MI	I
7	M (RMA)[3]	MI	I

[1] R can be either LOF PBF or LOS PBF for PB/PC NPCs; but R is LOS PBF for PA type NPCs.

[2] PA type NPCs only.

[3] These only occur with CAS line format.

4. Which alarm type appears in the MISC ALM message?
 - If **Y** or **E (Remote Alarm)**, continue with Step 5.
 - If **B, R, L, or X (Local Alarm)**, proceed with Step 8.

- If other (**A, V, M, I, S, C, F, G, P**), proceed to Step 12.
5. At jack on DPC pack or at line interface jacks (if provided), use office test set to check signal at the MON jack for the transmit line (from DACS II).
- If good clock signal with no alarms was detected, continue with Step 6.
 - If good clock signal with no alarms was not detected, proceed to Step 15 and replace the plug-in for the NPCs.

**NOTE:**

The TG182 provides two 120 Ohm E1 line terminations. The TG182 provides two transmit line monitor points, one for each NPC. The jack layout for the TG182 is shown in Figure 3.1-2. These monitor points are attenuated by 30 dB from the signal level at the interface.

The TG185 provides two 75 Ohm E1 line terminations. The TG185 provides two transmit line monitor points, one for each NPC. The jack layout for the TG185 is shown in Figure 3.1-2. These monitor points are attenuated by 26 dB from the signal level at the interface.

The TG187 provides two 120 Ohm line terminations. The TG187 provides two transmit line monitor points, one for each facility. The jack layout for the TG187 is shown in Figure 3.1-2. These monitor points are attenuated by 30 dB from the signal level at the interface.

The TG192 provides two software selectable 75 or 120 Ohm E1 line terminations. The TG192 provides monitor points for both the receive and transmit interfaces for both NPCs. The monitor jack layout for the TG192 is shown in Figure 3.1-2. These monitor points are attenuated by slightly different levels depending on the line impedance selected. These attenuation values are:

Selected Impedance	Attenuation
75 Ohms	23.75 dB
120 Ohms	20 dB

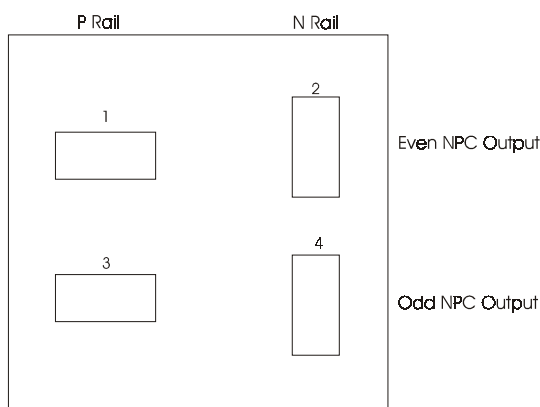


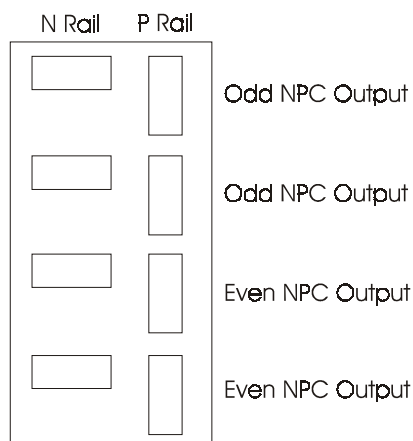
Figure 3.1-1. TG182, TG185, and TG187 Monitor Jack Layout


Figure 3.1-2. TG192 Monitor Jack Layout
**NOTE:**

The Y alarm type (TS0 bit 3) indicates loss of signal, excessive errors, or loss of frame alignment at the far end. The E alarm type (TS0 bit 4) indicates excessive error rate at the far end.

6. If the trouble is in the line going to the far end or in the alarm detection equipment at the far end, have far-end personnel check for pulses without errors with an external test set. If the line is at fault, have facility maintenance crew isolate trouble by testing for signal at intermediate offices. If the office equipment is at fault, replace receive pack.

7. If 2.048-Mb/s signal loopback (toward the line side) is requested at DACS II to allow testing from the far end, enter the following command:

**ED-PRMTR-EQPT:[xy]:NPC-<npc No.>[&&[&]-
<range>]:[ww]:LPBK-[d]t;**

Where:

- d = Loopback direction specifier. Required for PA type NPCs when initiating or stopping loopback. Optional if changing value of performance monitoring specifier (t). Not allowed for PB/PC type NPCs. One of the following:
- E** Equipment Loopback. Loops the outgoing 2.048 Mb/s signal back to the DACS II equipment.
 - F** Facility Loopback. Loops the incoming 2.048 Mb/s bipolar signal back to the facility.
 - N** Stop Loopback.
- t = Loopback signal transmission performance monitoring specifier. One of following:
- A** Initiate loopback and send AIS (all 1s) downstream, reset all facility alarms/error counts, and disable facility performance monitoring.
 - B** For PA type NPCs only. Initiate loopback, send AIS (all 1s) downstream/upstream and perform performance monitoring and alarm processing as usual.
 - C** For PA type NPCs only. Initiate loopback with transparent pass-through of the received signal, turn off performance monitoring, and freeze the alarm and parameter counts for the NPC.
 - T** Initiate loopback with transparent pass-through of the received signal.
 - N** Terminate loopback.

- <npc No.> = NPC number, either extended (for example, [0]001)
or hierarchical (for example, 01-1-01).
- <range> = Optional, last NPC of continuous range of NPCs.
Extra ampersand required for hierarchical.

For Local Alarm Indicator, Continue Here

8. The type L (LMA) indication means that there is a loss of multiframe alignment for the CAS signaling sent on time slot 16 for all service channels. Enter
RTRV-STATE-EQPT::NPC-<npc No.>;
for alarmed facility and verify that the NPC is provisioned for CAS (see Note).

Where: <npc No.> = NPC number, either extended (for example, [0]001)
or hierarchical (for example, 01-1-01).

**NOTE:**

The first digit of the NPC growth specification will be an odd number when the CAS option is selected.

9. If line interface jacks are provided, use the office test set to test signal at the MON jack for the receive line (to DACS II). The incoming line failure may be due to signal loss, loss of framing, or bit error rate greater than 10u-3d .
- If good clock with no alarms is detected, then proceed to Step **15** and replace the plug-in for the NPC.
 - If good clock was not detected, then continue with Step **10**.
10. If the trouble is on the incoming facility or at far-end equipment, have far-end personnel check the signal with external test set. If the line is at fault, have maintenance crew isolate trouble by testing for signal at intermediate offices.

**NOTE:**

The type L alarm is not likely to be caused by the line; the far-end transmission equipment is suspected.

11. If 2.048-Mb/s line signal loopback (toward line-side) is requested to allow testing from the far end, enter the following command:
ED-PRMTR-EQPT:[xy]:NPC-<npc No.>[&&[&]-<range>]:[ww]:LPBK-t;

Where:

- t = One of following: t=A to initiate loopback and send AIS (all 1s) downstream, reset all facility alarms/error counts, and disable facility performance monitoring; t=T to initiate loopback with transparent pass-through of received signal; t=N to terminate loopback.
- <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, last NPC of continuous range of NPCs. Extra ampersand required for hierarchical.

For Alarm Type A, V, M, I, S, C, F, G, P Continue Here

12. Which alarm type appears in the MISC ALM message?
- If **M**, proceed to Step 13.
 - If **S**, notify the connecting DACS II tester to use ERR ESR SYNC to isolate the trouble. The type S (sync failure indication) means that the far-end DACS II frame timing has gone into the holdover mode. During holdover, the internal clock is supplying the signal without receiving timing from external timing links.
 - If **A, V, or I**, an alarm indication signal is being received from the far-end equipment, either on all channels (type A-AIS), on TS16 (type V-A16), or on TS0 bit 4 (I-type RAIS - remote AIS). This alarm is sent to indicate trouble upstream without registering a PBF; consequently, the trouble is isolated to the section with the PBF and RAI alarms. The alarm will clear when the trouble is cleared in the upstream equipment.
 - The **C, F, G, and P** alarms apply to PA type NPCs and indicate trouble upstream. For **F** and **P**, the unframed "All Ones" 2-Mb/s signal is sent downstream by DACS II. All of these alarms will clear when the trouble is cleared in the upstream equipment.

13. The type M (R16) indication appears when signaled from the far end equipment over time slot 16. This indicates that the far-end has lost multiframe alignment for CAS signaling in time slot 16 and consequently, has an LMA alarm.
14. Enter **RTRV-STATE-EQPT::NPC-<npc No.>;**
for alarmed facility to verify that the NPC is provisioned for CAS format (see Notes 1 and 2).

**NOTE:**

The first digit of the NPC growth specification will be an odd number when the CAS option is selected.

**NOTE:**

If the far end clears the trouble, the type M (R16) alarm will clear; otherwise, you may have to assist in troubleshooting.

To Replace Plug-In for NPC, Continue Here

15. Verify that NPC for alarmed facility is out-of-service (RMV NPC ...COMPL in printout) to allow more complete diagnostic testing; if necessary, enter **RMV-EQPT:[xy]:NPC-<npc No.>:[ww]:[:INCL];**

Where: INCL = Optional, needed to remove NPC with special circuits.

16. Enter **DGN-EQPT::NPC-<npc No.>;**
 - If DGN ...STF message is received, continue with Step 17.
 - If DGN ...STF message is not received, the trouble is in cabling to the line interface jacks. Repair or replace the cabling; after trouble is cleared, enter **RST-EQPT::NPC-<npc No.>;**
for each of the removed NPCs.

**NOTE:**

The diagnostic tests the NPC transmission paths except for the line transformers. So, if cabling is not at fault, the NPC could still be causing the trouble.

17. Arrange a time when both NPCs on the dual DPC card can be removed from service; enter **RMV-EQPT::NPC-<npc No.>:[ww]:[:INCL];**
for other NPC, and replace the dual pack.

18. Enter **RST-EQPT: :NPC-<npc No.>**;
for each of the removed NPCs.

Clear 2.048-Mb/s Facility Error Messages

3.2

When to Use

Use this procedure to clear alarms that are registered when any facility errors reach alarm threshold levels. The parameters that the DACS II monitors are: bit error rate (BER), errored seconds (ERS), severe ERS (SERS), slips (SLIP), out-of-frame (OOF), framing error (FRER), cyclic redundancy (CRC), change of frame alignment (COFA), degraded minutes (DM), loss of frame alignment (LOFA), minor error rate (MER), and unavailable seconds (US).

Instructions

This procedure is used to clear alarms that are registered when any facility errors reach alarm threshold levels. The parameters that the DACS II monitors are: bit error rate (BER), errored seconds (ERS), severe ERS (SERS), slips (SLIP), out-of-frame (OOF), framing error (FRER), cyclic redundancy (CRC), change of frame alignment (COFA), degraded minutes (DM), loss of frame alignment (LOFA), minor error rate (MER), and unavailable seconds (US).

For PA type NPCs, the threshold alarms are: code violations (CV), framing errors (FRER), CRC block errors (CRC), unavailable time count (UATC), controlled slip seconds (CSS), out-of-frame seconds (OOF), errored seconds (ES), severely errored seconds (SES), unavailable seconds (UAS), multiframe errors (MER), far-end block errors (FEBE), far-end errored seconds (FES), far-end severely errored seconds (FSSES), and far-end unavailable seconds (FUAS).

The troubleshooting strategy is to first verify that correct NPC alarm options are selected, have the far end check for errors in the transmit direction, and then use signal loopback to check the digital line.

**CAUTION:**

The line looping in this procedure interrupts service on all channels of the line, so service will have to be removed or patched to another facility. For minor alarms (not service affecting), you may want to postpone testing until nonbusy hours.

**NOTE:**

The type of error (SLIP or ERS) and whether on a new facility often indicates the source of the trouble. Timing SLIPS are usually caused by not having the far end optioned for loop timing or by a loop timing pack not functioning. This is more likely to occur on a new facility as incorrect NPC provisioning. The other parameters indicate facility problems.

**NOTE:**

If threshold crossing alarms need to be temporarily disabled while performing this procedure for PA type NPCs, use the **ED-PRMTR-EQPT::NPC-<npc No.>::<mode>;** command, where **<mode>** is **INH** (inhibit).. In this mode, no threshold crossing messages are output. To exit this mode, enter the same command with **<mode>** set to **ALW** (allow). The previously programmed threshold values are re-applied unless they were changed while in the inhibit mode.

1. If alarm cutoff is not already operated, enter **OPR-ACO-ALL;**.
2. Enter **RTRV-STATE-EQPT::NPC-<npc No.>;**
for NPC on alarmed facility.

Where: **<npc No.>** = NPC number, either extended (for example, [0]001)
or hierarchical (for example, 01-1-01).

3. Read the selected alarm threshold for the facility parameter from the output message and compare to office records or other (same type) NPCs.
 - If the alarm threshold for the parameter is incorrect, enter the following command with the required parameter identifiers:
**ED-PRMTR-EQPT::{NPC-<npc No.>|TYPE-mnxyz}::rr/
l&ss/m...&tt/n;**

Where:

NPC or TYPE field	=	Selects number of NPCs to be changed: one NPC given as extended (for example, [0]001), hierarchical (for example, 01-1-01), or all NPCs with the same type specification (mnxyz).
rr,ss,tt	=	Listing of any of the associated alarm types. See Table 3.2-1.
l,m,n	=	Predefined number (0 through b) per Table 3.2-2 which selects alarm threshold. Monitoring of a parameter can be disabled by entering "c" for the alarm threshold.

Table 3.2-1. 2.048-Mb/s Interface Alarm Parameters (PA/PB/PC Type NPCs)

Facility Parameter (rr,ss,tt)	Meaning
11	Type PA CRC, 24 Hr.
12	Type PA FRER, 24 Hr.
13	Type PA OFS, 24 Hr.
14	Type PA ES, 24 Hr.
15	Type PA SES, 24 Hr.
16	Type PA CSS, 24 Hr.
17	Type PA CV, 24 Hr.
18	Type PA UAS, 24 Hr.
19	Type PA UATC, 24 Hr.
20	Type PA MER, 24 Hr.
21	Type PA FEBE, 24 Hr.
22	Type PA FES, 24 Hr.
23	Type PA FSES, 24 Hr.
24	Type PA FUAS, 24 Hr.
31	Type PB/PC DM, 1 Hr.
32	Type PB/PC DM, 24 Hr.
33	Type PB/PC SERS, 15 Min.
34	Type PB/PC SERS, 24 Hr.
35	Type PB/PC ERS, 15 Min.
36	Type PB/PC ERS, 24 Hr.
37	Type PB/PC US, 15 Min.
38	Type PB/PC US, 24 Hr.
39	Type PB/PC SLIPs, 15 Min.
40	Type PB/PC SLIPs, 24 Hr.
81	Type PA CRC, 15 Min.
82	Type PA FRER, 15 Min.
83	Type PA OFS, 15 Min.

Table 3.2-1. 2.048-Mb/s Interface Alarm Parameters (PA/PB/PC Type NPCs)

Facility Parameter (rr,ss,tt)	Meaning
84	Type PA ES, 15 Min.
85	Type PA SES, 15 Min.
86	Type PA CSS, 15 Min.
87	Type PA CV, 15 Min.
88	Type PA UAS, 15 Min.
89	Type PA UATC, 15 Min.
90	Type PA MER, 15 Min.
91	Type PA FEBE, 15 Min.
92	Type PA FES, 15 Min.
93	Type PA FSES, 15 Min.
94	Type PA FUAS, 15 Min.

Table 3.2-2. 2.048-Mb/s Interface Option Selection

Alarm Class	Option 0 (Default)	Option 1	Option 2	Option 3*
MI (Info)	0	3	6	9
DMA (Deferred)	1	4	7	A
PMA (Prompt)	2	5	8	B

* Only valid option for PB/PC types.

Note: C - disables monitoring of a facility parameter

- Enter **INIT-REG::NPC-<npc No.>[&&[&]-<range>]::**
<parameter>;, and after recording period, enter **RTRV-PRMTR-**
EQPT::NPC-<npc No.>[&&[&]-<range>]::<parameter>;.

Where:

<parameter> = For 2.048-Mb/s facility:

PB/PC types: CRC, DM, ERS, FRER, MER,
SERS, SLIP, or US. Use PM to clear DM, ERS,
SERS, SLIP and US.

PA types: CRC, FRER, MER, ES, SES, UAS.

<range> = Optional, last NPC of continuous range.

Three ampersands (&s) are needed for hierarchical.

5. If an alarm is received on facility or error count is still near alarm threshold, continue with Step 6.
 - If there is no alarm or high error counts, there is no trouble at this time; either return facility to service and watch for further trouble or test the facility for a longer period.
6. At far end, have tester connect external test set to MON jack at line interface bay for transmit direction and check for errors.
 - If errors were registered (and far end has DACS II), have far-end tester refer to Step 13.
 - If errors were registered (and far end does not have DACS II), refer trouble to tester at far-end terminal equipment.
 - If errors were not registered at far end, continue with Step 7.



NOTE:

Signal looping in the following portion will interrupt service on all channels of the line; service must be patched to another facility or customers notified of loss of service.

7. In the following portion, a signal loopback will be established at line interface bay at one end so that the other end can check the entire line (both directions) for errors.
8. Either patch service to another facility or arrange for facility to be taken out-of-service.
9. Have the far-end tester place a loop on the line side at line interface bay to loop the signal toward you.

10. At end receiving looped signal, either check errors again with test set, or with DACS II, enter
INIT-REG::NPC-<npc No.>::<parameter>;,
and, after recording period, enter
RTRV-PRMTR-EQPT::NPC-<npc No.>::<parameter>;.
 - If alarm is received or high error count is still received, continue with Step 11.
 - If alarm or high error count is not received, there is an intermittent line trouble or the far-end terminal was causing errors. Either return the facility to service and watch for further trouble or test the facility (or far terminal) for a longer period.
11. At end receiving looped signal, place looping cord on equipment side jacks on line interface bay to test local cabling and receive equipment. Have far-end personnel remove any line-side signal loop.
12. Either check errors again with test set or enter
INIT-REG::NPC-<npc No.>::<parameter>;,
and, after recording period, enter
RTRV-PRMTR-EQPT::NPC-<npc No.>::<parameter>;.
 - If alarm is received or high error count is still received, continue with Step 13.
 - If alarm or high error count is not received, there is trouble on the facility. Remove signal loopback and isolate defective span line by placing signal loops (or testing) at intermediate offices. After trouble is cleared, remove all line-interface bay signal loops.
13. Enter **RMV-EQPT::NPC-<npc No.>::[:INCL];**
to remove the involved NPC from service in order to run complete diagnostics.

Where: INCL = Optional, needed to remove NPC with special circuits.

**NOTE:**

The NPC itself is not a likely source of errors. The out-of-service diagnostic checks some transmit and receive error detecting and clearing circuits. The NPC line transformers are not included in internal loop during the diagnostics.

14. Enter **DGN-EQPT::NPC-<npc No.>;**.
15. If DGN ...STF message is received, continue with Step 16.
 - If DGN ...STF message is not received, there is trouble in cabling to line-interface bay; repair or replace cabling.

16. Arrange a time when both NPCs can be removed from service. Enter **RMV-EQPT::NPC-<npc No.>::[:INCL];** for that NPC and replace the card.
17. Enter **RST-EQPT::NPC-<npc No.>;** for each NPC. Remove all line interface bay signal loops.

**NOTE:**

The parameter counts are cleared during restore operation.

Enter Commands to Check 2.048-Mb/s Line Loopback and Operate Line Loopback

3.3

When to Use

Use this procedure to check the loopback status of NPC and to change/operate the loopback. This loopback is of the entire framed signal (256 bits). The loopback is toward the line side and can be used to check transmission and alarms at the far end. The diagnostic NPC command at DACS II is used to verify the operation of the DPC (dual primary card) at the DACS II.

Instructions

This procedure contains the commands to check the loopback status of NPC and to change/operate the loopback. This loopback is of the entire framed signal (256 bits). The loopback is toward the line side and can be used to check transmission and alarms at the far end. The diagnostic NPC command at DACS II is used to verify the operation of the DPC (dual primary card) at the DACS II.

1. If you want to check the current loopback status, continue with Step 2.
 - If you want to operate (or change) the line loopback, proceed to Step 4.
2. Enter the command to check the loopback status as follows:
RTRV-STATE-EQPT:[xy]:NPC-<npc No.>[&&[&]-<range>]:
[ww]:LPBK;

Where:

- xy = Optional, DACS II target ID.
- ww = Command correlation tag.
- <npcNo.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- <range> = Optional, last NPC of continuous range of NPCs.
Extra ampersand (&) required with hierarchical.

- If RTRV ...DENY message is received, find the reason for the denial in the output message and perform corrective action to obtain command completion.

3. Read the loopback state of the NPC from the output message and note the following about accompanying message keywords. An AIS means all 1s signal is sent downstream, and an fpa-off means that the NPC monitoring (facility performance alarms) of facility errors is disabled.
4. To change the loopback state, enter

ED-PRMTR-EQPT:[xy]:NPC-<npc No.>[&&[&]-<range>]:[ww]:LPBK-[d]t;

Where:

- d = Loopback direction specifier. Required for PA type NPCs when initiating or stopping loopback. Optional if changing value of performance monitoring specifier (t). Not allowed for PB/PC type NPCs. One of the following:
 - E** Equipment Loopback. Loops the outgoing 2.048 Mb/s signal back to the DACS II equipment.
 - F** Facility Loopback. Loops the incoming 2.048 Mb/s bipolar signal back to the facility.
 - N** Stop Loopback.
- t = Loopback signal transmission performance monitoring specifier. One of the following:
 - A** Initiate loopback and send AIS (all 1s) downstream, reset all facility alarms/error counts, and disable facility performance monitoring.
 - B** For PA type NPCs only. Initiate loopback, send AIS (all 1s) downstream/upstream and perform performance monitoring and alarm processing as usual.

C For PA type NPCs only. Initiate loopback with transparent pass-through of the received signal, turn off performance monitoring, and freeze the alarm and parameter counts for the NPC.

T Initiate loopback with transparent pass-through of the received signal.

N Terminate loopback.

<npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

<range> = Optional, last NPC of continuous range of NPCs.

- If ED ...COMPLD message is received, find the reason for the denial in the output message and perform corrective action to obtain command completion.

5. Check the output message to verify the loopback state.

Clear DS1 Facility CGA (Except SLC[®] Carrier System)

3.3

When to Use

Use this procedure to clear alarms caused by facility failures and NPC hardware failures. Alarms can also be caused by maintenance activity or by incompatible NPC growth specifications. If an obscure alarm occurs on a new facility or one in which the IW (insertion word) was recently changed, the line formats and IW specifications for the NPCs may not be end-to-end compatible.

Instructions

This procedure deals with alarms caused by facility failures and NPC hardware failures. Alarms can also be caused by maintenance activity or by incompatible NPC growth specifications. If an obscure alarm occurs on a new facility or one in which the IW (insertion word) was recently changed, the line formats and IW specifications for the NPCs may not be end-to-end compatible.

1. If alarm cutoff is not already operated, enter **OPR-ACO-ALL** ;.
2. Enter **RTRV-ALM-EQPT : : NPC : : CGA** ; to list current CGAs and check far-end conditions to determine if the troubles are associated.
 - If DS1 line connects to 19.2-kb/s MJU shelf, see Table 3.3-1 for summary of how MJU alarms are reported to DACS II. Refer to the *DACS II DS1 Multipoint Junction Unit (MJU) Shelf - Description, Operation, and Maintenance* manual (365-352-007) for information on how to clear these alarms.

- If multiple NPCs are alarmed and the NPCs are in the same FTU, check printout for equipment failures. See *Chapter 1*.
- If multiple NPCs are alarmed and the alarms are not related (on same cable or due to maintenance activity), select one CGA to proceed with and, after isolating that trouble, repeat for the next one.

**NOTE:**

A critical alarm indication on the status panel and a "C" at the beginning of the alarm message means six or more in-service digroups have failed.

Table 3.3-1. 19.2-kb/s Alarms Registered at DACS II

MJU Alarm	DACS II Alarm	Meaning
HDW	CGA R	MJU hardware failure. Flashing light means can't initialize circuits on CP. Steady light means power or microprocessor failure.
LOS	CGA AIS	Incoming line signal loss detected at MJU.
LOF	CGA Y	Incoming loss of DS1 framing detected at MJU.
RFA	CGA R	Remote frame alarm (DACS II detected incoming signal loss and sent RFA to MJU).

3. Find the alarm designation in the message (located after the NPC number) and check Table 3.3-2 for the meaning of the alarm (see the following Notes).

**NOTE:**

Trunk conditioning (AIS for clear-DS1; AIS for 24-channel range connections if specified in the cross-connections) is sent downstream from the equipment that registers a red (incoming) alarm. By sending the trunk conditioning downstream, other equipment is alarmed as required to make circuits unavailable, but only one terminal has a red alarm to show the failed section of the route.

**NOTE:**

A red alarm supersedes an AIS; if the DACS II has a red alarm and an AIS is subsequently received in the incoming bit stream (as part of testing), the red alarm will remain instead of changing to AIS.

When good transmission is restored (no alarm signal), the red alarm will clear.

Table 3.3-2. Alarm Designations

Indicator	Meaning
C	Combination of RAI and A16
A	Alarm Indication Signal
B	Both red and yellow (not registered with TG80/TG80B NPC)
F	Frame format error rate (TG180 NPC)
L	Local multiframe alarm (DMI equipment)
M	Remote multiframe alarm (DMI equipment)
R	Red; incoming line failure
V	Line format violation (TG180 NPC)
X	Multiple alarms (TG180 NPC)
Y	Yellow; outgoing line failure

4. Which alarm did you start with when you came to this procedure? See Note.
- If **Y, B, or M (Remote Alarm)**, continue with Step 5.
 - If **R or L (Local Alarm)**, proceed to Step 6.
 - If **A**, no action is necessary. This signal (blue signal) originates upstream at an alarmed terminal and is forwarded along the route to prevent multiple red alarms. The trouble can be isolated to a single span with only one red alarm in the route. The far-end NPC can also be grown to send an all 1s signal when it is removed from service.



NOTE:

With the CGA present, the NPC sends trunk conditioning toward the connected facility to make far-end equipment unavailable for service. Consequently, even though the NPC could be quickly checked by looping at DSX-1 bay to see if the alarm clears or changes, the following tests should be used unless service has been patched off at the ends of the facility.

5. At DSX-1 bay, use DS1 signal test to check for pulses with no errors at the MON jack for the transmit of the DACS II. Be sure the test set controls are set for the correct line format (D4, ESF, T1DM, etc.).
 - If pulses without errors were detected, the trouble is either in the line going to the far end or in the alarm detection equipment at the far end. Have the far end perform looped D-bank test or check for pulses with an external test set. If the line is at fault, have facility maintenance crew isolate trouble.
 - If no pulses or if errors were detected, proceed to Step 7.

**NOTE:**

The trouble is isolated by testing the signal at intermediate offices with a test set to determine where the trouble first appears along the line. Document 365-800-003 details the isolation procedure for T1 lines.

6. At DSX-1 bay, use test set such as J98725A to test for pulses without errors at the MON jack for the receive line (to DACS II).
 - If pulses without errors were detected, continue with Step 7.
 - If no pulses or pulses with errors were detected, the trouble is on incoming facility or at far-end equipment. Have the far end perform looped D-bank test or check for pulses with external test set. If the line is at fault, have maintenance crew isolate trouble.

**NOTE:**

The trouble is isolated by testing the signal at intermediate offices with a test set to determine where the trouble first appears along the line. Document 365-800-003 details the isolation procedure for T1 lines.

7. Verify that NPC for alarmed facility is out-of-service (RMV NPC ...COMPL in printout) to allow more complete diagnostic testing; if necessary, enter **RMV-EQPT::NPC-<npc No.>::[:INCL];**

Where: <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

INCL = Optional, to enable the removal of which is designated as carrying special service circuits.

**NOTE:**

Enter **DGN-EQPT::NPC-<npc No.>;**.

The diagnostic tests the NPC transmission paths except for the line transformers. So, if the cabling is not at fault, the NPC could still be causing the trouble.

8. If DGN ...STF message is received, replace the plug-in for the NPC as follows and restore the NPC(s) to service.
 - Arrange a time when both NPCs on the DDC plug-in can be removed from service, and enter
RMV-EQPT::NPC-<npc No.>::[:INCL];
for each NPC; then replace the plug-in (for example, DDC).
 - Enter
RST-EQPT::NPC-<npc No.>;
for EACH of the removed NPCs.
 9. If the DGN ...STF message is not received, then the trouble is in cabling to DSX-1 bay. Repair or replace cabling using local procedures; after trouble is cleared, enter **RST-EQPT::NPC-<npc No>;** for EACH of the removed NPCs.
-

Hardware Failures

General Tasks

4

Contents

■ Clear ALM ECCN OOS Message	GT 4.1-1
■ Clear ALM CCN OOS Message	GT 4.2-1
■ Clear ERR ESR ANALYSIS REPORT Message	GT 4.3-1
■ Clear ERR [ESR] <entity> Messages	GT 4.4-1
■ Clear ERR SYNC Message	GT 4.5-1
■ Respond to Failed Status for Plug-In	GT 4.6-1
■ Clear Transient Trouble Using ERROR LOG Message	GT 4.7-1
■ Isolate Trouble with ERR COND Code Meanings	GT 4.8-1
■ Clear ERR HARDWARE Message	GT 4.9-1
■ Clear DS3 Equipment Critical Alarm	GT 4.10-1

When to Use

Use this procedure to clear an ALM ECCN OOS message.

Instructions

This alarm indicates that one side of the ECCN is out-of-service and troubleshooting is required to return the side to service. The alarm must be cleared because a failure on the other side or inadvertent maintenance activity on the other side could cause loss of customer service. To force this maintenance effort, the DACS II goes to a major alarm if the initial minor alarm indication is pested for more than 2 minutes because of other alarms. The DACS II does not remove a failed pack when its mate on the other side is already out-of-service; the alarms on the active side are pested.



CAUTION:

Never replace packs or take packs from the active side of a duplicated group (for example, ECCN) when the other side is failed. The in-service side is carrying service; it is not a source of spare plug-ins.



NOTE:

If you have not checked for power troubles (per the *Trouble Identification* section), do so before proceeding.

1. If REPT ALMDet ...ANALYSIS REPORT message occurs in the printout, notice the listing of implicated plug-ins (see Note) in the message and proceed to Step 3; otherwise, continue with Step 2.

**NOTE:**

The plug-ins are listed in the order of likelihood of causing the trouble, and the first plug-in will already be removed from service.

2. If the pack has been autonomously removed from service (with no failed DGN), try restoring the pack to service per Figure 4.1-1 and proceed to Step 11.
 - If pack has not been removed, notice the pack named in the DGN ...STF message and continue with Step 3.
3. Replace the first pack named in the ANALYSIS REPORT message or the pack named in the DGN ...STF message if no ANALYSIS REPORT.
4. Enter command to restore the replacement to service per Figure 4.1-1. If associated ETSIs on mate NPC were removed, enter command to restore those packs to service.
 - If DGN ...STF message is received, continue with Step 5.
 - If RST ...DENY message is received, find the reason for the denial in the output message and perform corrective action to obtain command completion.
 - If RST ...COMPLD message is received, proceed to Step 8.

NOTE: Removing the NPC is service affecting.

Figure 4.1-1. Maintenance Command Construction

5. If the single pack (or all packs) listed in the ANALYSIS REPORT has been replaced, proceed to Step **10**.
 - If all the packs have not been replaced, continue with Step **6**.
6. The previous pack was not the cause of trouble. Enter the command to remove the next pack from service per Figure 4.1-1. Replace the pack and repeat from Step **4**.
7. If trouble persists or same trouble recurs, repeat the procedure, but this time work with the next pack listed in the ANALYSIS REPORT.
8. If another pack was autonomously removed (on other side or other protection group) after the original trouble cleared, repeat the procedure to clear next trouble.
 - If another pack was not removed, continue with Step **9**.

9. Enter **RTRV-STATE-EQPT:::ALL**; to find packs which are still failed, pested, or out-of-service, and perform the necessary corrective action to place all equipped packs in service.

**NOTE:**

The conditions are indicated by the presence of a "1" in the respective columns (out-of-service, failed, and pested) for each pack. Unequipped NPCs are indicated by dashes.

10. From Table 4.1-1, find the explanation of the COND code which appears in the ERR,ESR message for the subject pack.
11. If you were able to clear the trouble using the meaning of the ESR code, go to Step 9.
 - If you were not, continue with Step 12.
12. If there are any other ERR ESR messages involving packs in other circuit groups, go to Section 4.3.
 - If there are no other ERR ESR messages, continue with Step 13.
13. To make a record of the error history on the PMEM (for use by technical consultant), enter one of the following commands (see Note):

Time of Day/Time Interval:

RTRV-LOG:[xy]::[ww]:ERR:HWER,{INT-mn|[DATE-mo-da-yr,]TOD-hr-mn-sc};

Suspect Entity:

RTRV-LOG:[xy]::[ww]:ERR:HWER,ENTY-eee;

Where: INT = Interval of time (past 59 minutes)

TOD = Time of day consisting of hour (hh=00 through 23), minutes (mm=00 through 60), seconds (ss=00 through 60).

Date (month, day, year) is optional.

eee = Plug-in designation for example: CCI, DMB, EBX, ETSI, FC, SYNC, or TLI.

**NOTE:**

All error events are logged on PMEM; however, the file is overwritten when the file capacity is reached. If you do not know how full the error log is (not recently cleared), you will want to use a short

interval, perhaps the past 5 minutes, to avoid overloading the link with old errors.

14. Contact technical consultant.

Table 4.1-1. ESR Condition Codes - CCI, ETSI

COND 01	Software could not access CCI; pack does not acknowledge. Corrective Action: (1) verify that CCI is securely seated; (2) look for loss of sync to CCI and replace CCI; (3) look for MC, EBX, or CPU interface trouble.
02	Incorrect version number on CCI.
03	Summary bit set, but no other errors.
04	CCI ERR bit set in system status register.
05	ETSI ERR bit set in system status register.
06	Peripheral unit bit set in system status register.
07	Bus terminator pack absent.
08	32-MHz clock out of phase lock.
09	240 frame sync misaligned.
0A	Loss of 240 frame sync.
0B	Loss of 8-kHz frame sync.
0C	CCI detected address parity error.
0D	CCI detected low byte data parity error.
0E	CCI detected high byte data parity error.
0F	CCI -5.2 power supply failure.
10	CCI detected bus status parity error.
11	Peripheral unit alarm.
12	Sync summary bit set on CCI pack.
20	Software could not access ETSI; pack does not acknowledge. Corrective Action: see CCI action and substitute ETSI for CCI in wording.
21	Incorrect version number on ETSI pack.
22	Summary bit set, but no other errors.
23	Loss of 32.768-MHz clock.

Table 4.1-1. ESR Condition Codes - CCI, ETSI

24	Loss of 240 frame sync.
25	Receive MDX summary bit set.
26	Control RAM summary bit set.
27	Transmit MDX summary bit set.
28	Loss of 3.3-volt power from CCI pack.
29	Peripheral unit port alarm (receive MDX).
2A	Receive MDX data source time-slot parity error.
2B	Receive MDX sync error.
2C	Receive MDX address parity error.
2D	Receive MDX write data parity error.
2F	Receive cannot be accessed; incorrect chip ID.
30	Transmit MDX data parity error.
31	Transmit MDX data source time-slot parity error.
32	Transmit MDX sync error.
33	Transmit MDX address parity error.
34	Transmit MDX write data parity error.
35	Transmit MDX cannot be accessed; incorrect chip ID.
37	Control RAM parity error.
38	Control RAM sync alarm.
39	Control RAM port alarm.
3A	Control RAM BIST flag is set.
3B	Data RAM BIST flag is set.
3C	Control RAM address parity error.
3D	Control RAM write data parity error.
3E	Control RAM device cannot be accessed; incorrect chip ID.
3F	Control RAM circuit pack parity.
40	Control RAM device is in reset state.
41	Control RAM port alarm summary bit set.
42	TRD3 status exercise bit is set.

Table 4.1-1. ESR Condition Codes - CCI, ETSI

43	Ready high error detected from CCI.
44	Ready timeout error from CCI; CCI cannot access ETSI.
45	Control RAM stuck bit error.

When to Use

Use this procedure to clear an ALM CCN OOS message

Instructions

This alarm indicates that one side of the CCN is out-of-service and troubleshooting is required to return the side to service. The alarm must be cleared because a failure on the other side or inadvertent maintenance activity on the other side could cause loss of customer service. To force this maintenance effort, the DACS II goes to a major alarm if the initial minor alarm indication is pested for more than 2 minutes because of other alarms. The DACS II does not remove a failed pack when its mate on the other side is already out-of-service; the alarms on the active side are pested.



CAUTION:

Never replace packs or take packs from the active side of a duplicated group (for example, CCN) when the other side is failed. The in-service side is carrying service; it is not a source of spare plug-ins.



NOTE:

If you have not checked for power troubles (per the *Trouble Identification* section), do so before proceeding.

1. If REPT ALMDDET ...ANALYSIS REPORT message occurs in the printout, notice the listing of implicated plug-ins (see Note) in the message and proceed to Step 3: otherwise, continue with Step 2.

**NOTE:**

The plug-ins are listed in the order of likelihood of causing the trouble, and the first plug-in will already be removed from service.

2. If the pack has been autonomously removed from service (with no failed DGN), try restoring the pack to service per Figure 4.2-1 and proceed to Step 11.
 - If pack has not been removed, notice the pack named in the DGN ...STF message and continue with Step 3.
3. Replace the first pack named in the REPT ...ANALYSIS REPORT or the pack named in the DGN ...STF message if no ANALYSIS REPORT.
4. Enter command to restore the replacement to service per Figure 4.2-1. If associated TSIs on mate NPC were removed, enter command to restore those packs to service.
 - If DGN ...STF message is received, continue with Step 5.
 - If RST ...DENY message is received, find the reason for the denial in the output message and perform corrective action to obtain command completion.
 - If RST ...COMPLD message is received, proceed to Step 8.

NOTE: Removing the NPC is service affecting.

Figure 4.2-1. Maintenance Command Construction

5. If the single pack (or all packs) listed in the ANALYSIS REPORT has been replaced, proceed to Step **10**.
 - If all the packs have not been replaced, continue with Step **6**.

6. The previous pack was not the cause of trouble. Enter the command to remove the next pack from service per Figure 4.2-1. Replace the pack and repeat from Step 4.
7. If trouble persists or same trouble recurs, repeat the procedure, but this time work with the next pack listed in the ANALYSIS REPORT.
8. If another pack was autonomously removed (on other side or other protection group) after the original trouble cleared, repeat the procedure to clear next trouble.
 - If another pack was not removed, continue with Step 9.
9. Enter **RTRV-STATE-EQPT:::ALL**; to find packs which are still failed, pested, or out-of-service, and perform the necessary corrective action to place all equipped packs in service.

**NOTE:**

The conditions are indicated by the presence of a "1" in the respective columns (out-of-service, failed, and pested) for each pack. Unequipped NPCs are indicated by dashes.

10. From Table 4.2-1, find the explanation of the COND code which appears in the ERR,ESR message for the subject pack.
 - If you were able to clear the trouble using the meaning of the ESR code, go to Step 9.
11. If there are any other ERR ESR messages involving packs in other circuit groups, go to Section 4.3.
 - If there are no other ERR ESR messages, continue with Step 12.
12. To make a record of the error history on the PMEM (for use by technical consultant), enter one of the following commands (see Note):

Time of Day/Time Interval:
RTRV-LOG:[xy]::[ww]:ERR:HWER,{INT-mn|[DATE-mo-da-yr,]TOD-hr-mn-sc};

Suspect Entity:
RTRV-LOG:[xy]::[ww]:ERR:HWER,ENTY-eee;

Where: INT = Interval of time (past 59 minutes)

TOD = Time of day consisting of hour (hr=00 through 23), minutes (mn=00 through 60), seconds (sc=00 through 60).
Date (month, day, year) is optional.

eee = Plug-in designation for example: CCB, CCNI, DMB, DSPI, EBX, FC, SYNC, TLI, TSI.

**NOTE:**

All error events are logged on PMEM; however, the file is overwritten when the file capacity is reached. If you do not know how full the error log is (not recently cleared), you will want to use a short interval, perhaps the past 5 minutes, to avoid overloading the link with old errors.

13. Contact technical consultant.

Table 4.2-1. ESR Condition Codes - CCNI, CCB, TSI

CCNI Pack	
COND 90	Software could not access CCNI; pack does not acknowledge. Corrective Action: (1) verify that CCNI is securely seated; (2) look for loss of sync to CCNI and replace CCNI; (3) look for MC, BX or CPU interface trouble.
91	RAM error in high data byte on MC-MP. Trouble in MC (BX or CPU), or CCNI.
92	RAM error in low data byte on MC-MP. See COND 91.
93	Address parity error. Corrective Action: enter command to restore CCNI.
94	Autonomous switch error. Circuit in CCNI for side switch independent of MP disagrees with mate CCNI.
95	Bus status error. Circuit cannot determine active side. Corrective Action: (1) replace CCNI; (2) if persists, report possible software error.
96	Stuck summary bit. Error leads from CCB or TSI stuck high, but no trouble can be found. Subject CCB and TSI packs are identified in messages.
CCB Pack	

Table 4.2-1. ESR Condition Codes - CCNI, CCB, TSI

COND A0	Software could not access CCB; pack does not acknowledge. Corrective Action: (1) verify that CCB is securely seated; (2) look for loss of sync to CCB and replace CCB; (3) look for MC, BX or CPU interface trouble.
A1	Loss of sync pulse signal for approx. 100 ms. Trouble in CCB or SYNC or sync interface between.
A2	Loss of 8 MHz clock. See COND A1.
A3	Bad data from TSI ports. If most ports are reported in ESR, probably the CCB is bad. If only a few ports are reported, probably the TSIs are bad.
A4,A5	Zero bit stuck at 1 in CCB (A4) or CCNI (A5).
TSI Pack	
B0	Software could not access TSI; pack does not acknowledge. Corrective Action: (1) verify that TSI is securely seated; (2) look for loss of sync through CCB and replace TSI; (3) look for MC, BX or CPU interface trouble.
B1	Stuck summary bit that indicates troubles from TSI devices, but no actual trouble can be found.
B2	TSI device error that clears during recovery; transient error.
B3	Software could not access TSI device; device failed or lost sync clock.
B4	Diagnostic exercise bits set on TSI device. Replace TSI.
B5	Error on address bus to TSI device. Trouble in TSI, CCNI, or MC-BX pack.
B6	TSI device not receiving good sync clock. Trouble in TSI, related CCB, or SYNC.
B7	Error on TSI control RAM which defines maps. Replace TSI.
B8	Parity error on port from FC or DSPU-DMB. If most all TSI ports are reported in ESR message, replace TSI. If isolated ports are reported, the FCs or DMBs are probably bad. Adjacent NPCs that share the DBM ports will be reported although only one is bad.
B9	Parity error from CCNI.

Clear ERR ESR ANALYSIS REPORT Message

4.3

When to Use Use this procedure to clear an ALM CCN OOS message

Instructions

1. If a CRITICAL alarm is being registered (CRITICAL lighted on status panel LED and "*C" message prefix), continue with Step 2.
 - If a CRITICAL alarm is not registered, go to Step 5.
2. Which of the following conditions caused the CRITICAL alarm?
 - If multiple NPCs removed, continue with Step 3.
 - If both duplex sides alarmed, proceed to Step 4.
3. (no protection deny) Check the frame for blown fuses or failed power units. A blown fuse feeding NPCs or two failed power units for a unit would cause multiple NPC failures.
4. From the trouble printout, determine which side of the ECCN/CCN (0 or 1) has been removed from service; that will be the side on which the failed plug-in has been autonomously removed. Proceed to Step 5 and clear the trouble **on the out-of-service side**.

**NOTE:**

For duplex (both sides) failures, clearing out-of-service side will enable side switch and work on the other side. The alarm status will also change from critical to major.

**NOTE:**

The DACS II does not remove a duplicated pack when its mate is already out-of-service; instead, the DACS II pests alarms on the active side.

5. See Figure 4.3-1 for the general format and sequence of messages of the error recovery operation with a REPT ALMDDET ...ANALYSIS REPORT . The plug-in which is most suspect will be removed from service and the diagnostic results given. Other likely causes of the trouble will also be listed

in the report.

```
A ff REPT EVT EQPT
"<entity>,TN-X-dddd,EVENT-eeee,ESR,ERR"
"<error data bytes>"

A ff REPT ALMDET EQPT
/* [0.01391] */
"ANALYSIS, REPORT,EVENT-eeee,ESR,ERR"
"<action>,<suspect plug-in No.1>"
"<action>,<suspect plug-in No.2>"
"<action>,<suspect plug-in No.3>"
"<action>,<suspect plug-in No.4>"

A ff REPT RMV EQPT
/* [0.33xxx] */
"<entity>:<state>"

A ff REPT DGNDET EQPT
/* [0.41xxx] */
"<entity>:{ATP|CATP-cc|STF-ppqq},<data bytes>"
```

Figure 4.3-1. Error Analysis Report

6. Replace the first pack named in the ESR ...ANALYSIS REPORT.
7. Enter command to restore the replacement to service per Figure 4.3-2. If associated ETSIs or TSIs on mate NPC were removed, enter command to restore those packs to service.
 - If DGN ...STF message is received, continue with Step 8.
 - If RST ...DENY message is received, find the reason for the denial in the output message and perform corrective action to obtain command completion.
 - If RST ...COMPLD message is received, proceed to Step 11.

verb:[xy]:<CP identification>:[ww]{;} or {:<additional info.>}

{RMV-EQPT::	SYNC-a;	a	=	0 or 1
/RST-EQPT::	SYNC-a:[ww]:TLI-n[:SSP-b];	n	=	1-4; b = sync port (0 or 1)
/DISC-EQPT::	SYNC:[ww]:TB			
/DGN-EQPT::	CCI-s;	s	=	side 0 or 1
	CCNI-s;	s	=	side 0 or 1
	ETSI-sqq;	qq	=	unit 01-16
	TSI-sft;	f	=	unit (receiving from) (1-6)
	CCB-sf;	t	=	unit (transmitting to) (1-6)
	ETSI,S,ECCN-s;			
	UNIT-[q]q:[ww]:UC;	[q]q	=	unit 01-16
	UNIT-[q]q:[ww]:{FTMI-d DSP1};	d	=	module interface 1-4
	UNIT-[q]q:[ww]:FC-sd;	sd	=	FC side (0,1) and FC No. (1-4)
	NPC-<npc No.>:[ww]:[SIDE-s];	<npc No.>	=	NPC No.
		s	=	SIDE for DSPU
	LINK-j;	j	=	link 1-6

NOTE: Removing the NPC is service affecting.

verb::<CP identification>[,option]

{RMV::	SYNC a!	a	=	0 or 1
/RST::	SYNC a,TLI n[:SSP b]!	n	=	1-4; b = sync port (0 or 1)
/DGRTH::	CCI s!	s	=	side 0 or 1
/DGN::}	CCNI s!	s	=	side 0 or 1
	ETSI sqq!	qq	=	unit 1-16
	TSI sft!	f	=	unit (receiving from) (1-6)
	CCB sf!	t	=	unit (transmitting to) (1-6)
	ETSI,S,ECCN s,ALL!			For all ETSSs on the side
	TSIS,CCN s,ALL!			For all TSIs on the side
	UNIT [q]q,UC!	[q]q	=	unit (1-16)
	UNIT [q]q,{FTMI d DSP1}!	d	=	module interface for units 1-4
	UNIT [q]q,FC sd!	sd	=	FC side (0,1) and FC No. (1-4)

verb::<CP identification>[,option]

{RMV::	SYNC a!	a	=	0 or 1
	NPC <npc No.>[,SIDE s]!	<npc No.>	=	NPC number
		s	=	SIDE for DSPU
	LINK j!	j	=	link 1-6

Figure 4.3-2. Maintenance Command Construction

8. If all the plug-ins listed in the ERR ANALYSIS REPORT have been replaced, proceed to Step **10**.
 - If all the listed plug-ins have not been replaced, enter the command to remove the next pack from service per Figure 4.3-2 (see Note) and replace that plug-in. The previous pack was not the cause of trouble.



NOTE:

When facility NPCs are removed from service, the service on all channels is interrupted. Arrangements must be made to patch service or notify data customers.

9. Enter command to restore the replacement to service per Figure 4.3-2. If associated ETSIs or TSIs on mate NPC were removed, enter command to restore those packs to service.
 - If DGN ...STF message is received, continue with Step **10**.
 - If RST ...DENY message is received, find the reason for the denial in the output message and perform corrective action to obtain command completion.
 - If RST ...COMPLD message is received, proceed to Step **11**.
10. If you are clearing ERR SYNC messages, go to Section 4.5.
 - If you are not clearing ERR SYNC messages, go to Section 4.7.
11. If another pack was autonomously removed on the other side (or other protection group) after the original trouble was cleared, then repeat the procedure to clear the next trouble.
12. Enter **RTRV-STATE-EQPT:::ALL**; to find packs which are still failed, pested, or out-of-service and perform the necessary corrective action to place all equipped packs in service.

**NOTE:**

Out-of-service, failed, and pested plug-ins are indicated by the presence of a "1" in respective columns (out-of-service, failed, and pested) of the output for each plug-in; unequipped NPCs are indicated by dashes.

Clear ERR [ESR] <entity> Messages

4.4

When to Use

Use this procedure to clear an ERR [ESR] <entity> message.

Instructions

1. Check for a blown fuse (see Note) and failed power units (which give ERR PWR message). Loss of power causes removal of transmission plug-ins.

- If power trouble is present, go to *Power Failures* to clear power trouble.

**NOTE:**

Blown fuses are indicated by one of the following: (1) for a 48 V fuse, lighted FAL indicator and extended color bead on 48 V fuse and alarm panel, or (2) lighted LED fuse or LED indicator on unit fuse board.

2. If sync error messages occur in the printout, check if there are any timing link troubles or if timing link trouble has cleared (COND E800 series messages). See Table 4.4-1 for meaning of alarm keywords in ERR [ESR] SYNC TLI SSP messages.

**NOTE:**

If the timing link for the highest priority sync port fails and the DACS II switches to the port on the other side, it can take up to 35 minutes for the DACS II to switch back to the higher priority port.

- To force the switch back to the higher port after the timing link trouble is cleared, enter the commands to remove and restore the higher priority port as follows (the query output shows the priorities):
RTRV-STATE-COM:::ALL;
RMV-EQPT::SYNC-a::TLI-n:SSP-s;
RST-EQPT::SYNC-a::TLI-n:SSP-s;

Alarm Keyword	Meaning
LOS	Loss of signal
LEN	Loss of energy
EXJ	Excessive jitter
PHS	Phase shift

Alarm Keyword	Meaning
OOF	Out of frame
MAJ	Error rate, major alarm
MIN	Error rate, minor alarm

3. If the plug-in named in the [ESR] ERR message was autonomously removed but there was no failed diagnostic (DGN ...STF) for that plug-in, enter the RST command for that plug-in.

**NOTE:**

If hardware mismatch condition (COND 43) accompanies the removal of the plug-in, it indicates that the plug-in code is not correct for the type that was grown.

4. If there is a failed diagnostic (DGN ...STF), enter the command to remove the plug-in (if not already removed) per Figure 4.4-1, and replace the failed plug-in.

**NOTE:**

When facility NPCs are removed from service, the service on all channels is interrupted. Arrangements must be made to patch service or notify data customers.

verb:[xy]:<CP identification>:[ww]{} or {:<additional info.>}

{RMV-EQPT::	SYNC-a;	a	=	0 or 1
/RST-EQPT::	SYNC-a:[ww]:TLI-n[:SSP-b];	n	=	1-4; b = sync port (0 or 1)
/DISC-EQPT::	SYNC:[ww]:TB			
/DGN-EQPT::	CCI-s;	s	=	side 0 or 1
	CCNI-s;	s	=	side 0 or 1
	ETSI-sqq;	qq	=	unit 01-16
	TSI-sft;	f	=	unit (receiving from) (1-6)
	CCB-sf;	t	=	unit (transmitting to) (1-6)
	ETSI,ECCN-s;			
	UNIT-[q]q:[ww]:UC;	[q]q	=	unit 01-16
	UNIT-[q]q:[ww]:{FTMI-d DSPI};	d	=	module interface 1-4
	UNIT-[q]q:[ww]:FC-sd;	sd	=	FC side (0,1) and FC No. (1-4)

verb:[xy]:<CP identification>:[ww]{} or {}<additional info.>}

NPC-<npc No.>:[ww]:[SIDE-s];	<npc No.>	=	NPC No.
	s	=	SIDE for DSPU
LINK-j;	j	=	link 1-6

NOTE: Removing the NPC is service affecting.

Figure 4.4-1. Maintenance Command Construction

5. Enter command to restore the replacement to service per Figure 4.4-1. If associated ETSIs or TSIs on mate NPC were removed, enter command to restore those packs to service.
 - If DGN ...STF message is received, continue with Step 6.
 - If RST ...DENY message is received, find the reason for the denial in the output message and perform corrective action.
 - If RST ...COMPLD message is received, proceed to Step 7.
6. If you are clearing ERR [ESR] SYNC messages, go to Section 4.4.
 - If you are not clearing ERR [ESR] SYNC messages, go to Section 4.7.
7. If another pack was autonomously removed on the other side (or other protection group) after the original trouble was cleared, repeat this procedure to clear next trouble.
8. Enter **RTRV-STATE-EQPT:::ALL;** to find packs which are still failed, pested, or out-of-service and perform the necessary corrective action to place all equipped packs in service.



NOTE:

Out-of-service, failed, and pested plug-ins are indicated by the presence of a "1" in the respective columns (out-of-service, failed, and pested) of the output for each plug-in; unequipped NPCs are indicated by dashes.

When to Use Use this procedure to clear an ERR SYNC message.

Instructions

This procedure is used for sync troubles after completing Section 4.2 or 4.3 which deals with the error messages on sync plug-ins. The corrective action is based primarily on the ERR SYNC COND code. The series of codes beginning with E0 implicate the DPLL pack, the interface with the controller MP, or the SPU power. The E1 series indicates an internal DPLL problem; the E2 series implicates the DPLL and the TB; the E3 series indicates a phase-locked loop problem or input timing problem; and the E4 series indicates a cross-couple problem in which the two syncs are not locked together in phase.



NOTE:

Never attempt to troubleshoot and replace packs on the in-service side and never take packs from the in-service side for use as replacements for the failed side.

1. Check the printout for RMV ...SYNC message to verify that the failed SYNC was removed from service.

2. If the trouble is found before you reach the end of this procedure, ignore "if trouble persists" steps and go to the end of the portion to restore the sync to service.
3. Which series of COND codes does your ERR SYNC message fall into?
 - If **E2 SERIES**, continue with Step 4.
 - If **E0** or **E1 SERIES**, proceed to Step 9.
 - If **E3** or **E4 SERIES**, proceed to Step 14.

COND E2-- CODES

4. For COND E205, the TB (time base) oven has not reached operating temperature. Wait at least 30 minutes and enter **RST-EQPT : :SYNC-a ;** (a = failed sync side). Although the sync can be restored after 30 minutes, it can take up to 2 hours for a stratum 2 sync to reach rated precision.
5. For other COND code or if E205 persists, replace the TB pack and wait for oven to reach operating temperature. Then, enter **RST-EQPT : :SYNC-a ;**.
6. If sync failure persists, unplug TB pack and check the slot for broken pins or damaged backplane. Reinstall TB after inspection and allow for warmup time.
7. If no wiring problem is found, replace the DPLL pack and enter **DGN-EQPT : :SYNC-a ;** for the subject sync side.
8. After the TB ovens have reached temperature (30 minutes), enter **RST-EQPT : :SYNC-a ;**.

COND E0-- OR E1-- CODES

9. Unplug and reseat the DPLL pack and enter **DGN-EQPT : :SYNC-a ;**.
10. If failure persists (for original E0-- code trouble), unplug DPLL and check plug-in position for bent pins or damaged backplane. Reinstall DPLL after inspection.
11. If sync failure persists, replace DPLL pack and reenter sync diagnostic.
12. If ERR SYNC ...COND E004 message is received with the failed diagnostic, continue with Step 13.
 - If the COND E004 message is not received, replace the TB pack for the sync and reenter the sync diagnostic. If the trouble cleared, allow time for the TB ovens to reach temperature (30 minutes) and enter **RST-EQPT : :SYNC-a ;**.
13. Replace SPU pack for failed sync side and reenter sync diagnostic command.
 - If DGN ...ATP (or CATP) is received, enter **RST-EQPT : :SYNC-a ;** for the subject sync side (0 or 1) and to clear all power alarms, enter **INIT-REG : :PWR-00 !**.

- If sync failure persists, enter **RMV-EQPT : :MC ;**, unplug the same CPU2, and check plug-in position for bent pins or damaged backplane. Reinstall CPU2, enter **RST-EQPT : :MC ;** and reenter sync diagnostic.
- If trouble persists, remove the MC from service, replace the CPU2 in the main controller, and enter restore MC to service.

COND E3-- OR E4-- CODES

14. Replace the DPLL pack and enter **DGN-EQPT : :SYNC-a ;**
15. If DGN ...STF message is received, continue with Step 16.
 - If the message is not received, proceed to Step 22.
16. Which ERR SYNC ...COND code message do you have?
 - If **COND E3--**, continue with Step 17.
 - If **COND E4--**, proceed to Step 19.
17. Enter **RTRV-STATE-EQPT : :SYNC ;** to determine the active SSP. Remove the active SSP on the failed side as follows:
RMV-EQPT : :SYNC-a : :TLI-n:SSP-s ;.
Enter command to remove the same SSP on the other side.
18. Reenter the sync diagnostic command and watch for the reoccurrence of the sync error.
 - If the trouble was found, enter **RST-EQPT : :SYNC-a ;**.
 - If the trouble was not found, there is an obscure trouble; contact technical consultant.
19. Unplug the DPLL and check the plug-in position for bent pins or backplane damage. Reinstall DPLL after inspection.
20. If no wiring problem is found, the other sync side may be causing the problem. During nonbusy hours, make attempts to restore the failing sync by entering **RST-EQPT : :SYNC-a ;**. If the sync will remain in service even for a brief time, enter **DGN-EQPT : :SYNC-a ;** for the other sync, and repeat this portion of troubleshooting if other side fails.
21. If the trouble was found (or diagnostic passed), continue with Step 22.
 - If the trouble was not found, there is an obscure trouble; contact technical consultant.
22. Enter **RST-EQPT : :SYNC-a ;**.
23. If TLI-SSP was removed from service (in Step 17), the timing link was probably causing the trouble. Either check or replace the timing link. Enter **RST-EQPT : :SYNC-a : :TLI-n:SSP-s ;** for both removed SSPs.

When to Use

Use this procedure to respond to a failed status for a plug-in.

Instructions

1. To obtain listing of equipped CPs (circuit packs), enter
**RTRV-STATE-EQPT : : [{UNIT - [q]q | UNIT | ETSI |
TSI | NPC }] : : EQPD ;**
See Figure 4.6-1 for link and CCN/ECCN plug-ins if entire frame is checked.

Where:

UNIT-[q]q, UNITS,	= Optional, to request the equipage
UNIT-[q]q, UNITS,	= Optional, to request the equipage
UNIT [q]q, UNITS,	= Optional, to request the equipage
ETSI, TSIs, NPC	in specific unit or of specific plug-ins instead of entire frame.



NOTE:

Equipped CPs are indicated by a "1" alongside the CP or by the CP number in the sequence. For duplicated entities (FC, ETSIs/TSIs),

there will be listings for both the zero and one sides for each duplicated plug-ins.

2. To obtain a listing of out-of-service, failed, and pested CPs (see Notes), enter **RTRV-STATE-EQPT : : [UNIT - [q]q] : : ALL**; where: [q]q = Unit number (1 through 16).

**NOTE:**

The conditions are indicated by the presence of a "1" in the respective columns (out-of-service, failed, and pested) for each pack. For duplicated entities (FC, ETSIs/TSIs), there will be listings for both the zero and one sides for each duplicated plug-ins. Unequipped NPCs are indicated by dashes.

**NOTE:**

If XON option is selected, you can use CTRL-S and CTRL-Q to stop and start the output.

3. To check only common equipment, enter **RTRV-STATE-COM : : : {OOS | FAIL | PEST | ALL}**; and see Figure 4.6-1 to read the link and ECCN/CCN output.

Figure 4.6-1.

M RTRV STATE EQPT ... COMPLD
"<subject>:g,h,i,j,k,l,m,n,o,p"

g = Link 1
h = Link 2
i = Link 3
j = Link 4
k = Link 5
l = Link 6
t = Link 7
m = Cross-Connect Side 0
n = Cross-Connect Side 1
o = CCI 0 / CCNI 0
p = CCI 1 / CCNI 1

Common Equipment Readout

4. See Note. If any CPs are equipped but out-of-service, enter the RST (restore) command per Figure 4.6-2 for the pack.
 - If command denial occurs, find the reason for denial in the output message and perform corrective action to obtain command completion.

**NOTE:**

When a CP in a duplex/protected network (ECCN/CCN, DSPU, DS3U, HDS3U) fails, service is switched and all the CPs on the failed side/group are removed from service and pested. To correct the problem, the failure must be cleared and the side (or all CPs) can be restored. If both sides/groups are failed, trouble must be cleared on the out-of-service side/group first; removal of the other side will be denied.

5. If any CPs are failed, enter the DGN (diagnose) command per Figure 4.6-2 for the pack.
 - If DGN ...STF message is received, go to *Manual Diagnostic Failures* to clear failed diagnostic.

- If diagnostic passes (ATP or CATP), enter RST command.
- 6. To check for out-of-service, failed, and pested CPs, enter **RTRV-STATE-EQPT::[UNIT-[q]q]::ALL;**.
- 7. If any CPs are still pested, enter the commands to first remove and then restore the CPs per Figure 4.6-2.
 - If command denial occurs, find the reason for denial in the output message and perform corrective action to obtain command completion.

verb:[xy]:<CP identification>:[ww]{;} or {:<additional info.>};

{RMV-EQPT::	SYNC-a;	a	=	0 or 1
/RST-EQPT::	SYNC-a:[ww]:TLI-n[:SSP-b];	n	=	1-4; b = sync port (0 or 1)
/DISC-EQPT::	SYNC:[ww]:TB			
/DGN-EQPT::	CCI-s;	s	=	side 0 or 1
	CCNI-s;	s	=	side 0 or 1
	ETSI-sqq;	qq	=	unit 01-16
	TSI-sft;	f	=	unit (receiving from) (1-6)
	CCB-sf;	t	=	unit (transmitting to) (1-6)
	ETSI,S,ECCN-s;			
	UNIT-[q]q:[ww]:UC;	[q]q	=	unit 01-16
	UNIT-[q]q:[ww]:{FTMI-d DSPi};	d	=	module interface 1-4
	UNIT-[q]q:[ww]:FC-sd;	sd	=	FC side (0,1) and FC No. (1-4)
	NPC-<npc No.>:[ww]:[SIDE-s];	<npc No.>	=	NPC No.
		s	=	SIDE for DSPU
	LINK-j;	j	=	link 1-6

NOTE: Removing the NPC is service affecting.

verb::<CP identification>[,option]!

{RMV::	SYNC a!	a	=	0 or 1
/RST::	SYNC a,TLI n[,SSP b]!	n	=	1-4; b = sync port (0 or 1)
/DGRTH::	CCI s!	s	=	side 0 or 1
/DGN::}	CCNI s!	s	=	side 0 or 1
	ETSI sqq!	qq	=	unit 1-16
	TSI sft!	f	=	unit (receiving from) (1-6)
	CCB sf!	t	=	unit (transmitting to) (1-6)
	ETSI,S,ECCN s,ALL!			For all ETSSs on the side
	TSIS,CCN s,ALL!			For all TSIs on the side
	UNIT [q]q,UC!	[q]q	=	unit (1-16)
	UNIT [q]q,{FTMI d DSPi}!	d	=	module interface for units 1-4
	UNIT [q]q,FC sd!	sd	=	FC side (0,1) and FC No. (1-4)

verb::<CP identification>[,option]!

{RMV::	SYNC a!	a	=	0 or 1
	NPC <npc No.>[,SIDE s]!	<npc No.>	=	NPC number
		s	=	SIDE for DSPU
	LINK j!	j	=	link 1-6

Figure 4.6-2. Maintenance Command Construction

Clear Transient Trouble Using ERROR LOG Message

4.7

When to Use Use this procedure to clear transient trouble using the ERROR LOG message

Instructions

All error messages are recorded on the PMEM and can be read on command; transient errors for which the DACS II does not produce autonomous output messages are also recorded. When there is an overload of messages, the frame may report a lot of ERR MSGS messages. DGNDT messages and the autonomous removal of units with a COND D1 (unknown error) may also occur.

1. To get the history of hardware errors, enter **RTRV-LOG:[xy]::[ww]:ERR:HWER,INT-tt**; where tt is interval up to 59 minutes ago. It is advisable to start with a small interval (say 1 minute) because a dump of the whole contents could take hours.
2. Familiarize yourself with the ERR message output per Figure 4.7-1.

HOST00xx	ENTT00xx	ERRC00xxxx	ERRTxxxx	TRANxxxx	EVENxxxx
<data7>	<spare>	<spare>	<data10>	<data11>	<data12>
<data13>	<data14>	<data15>	<data16>	<data17>	<data18>

Figure 4.7-1. General Error History Message Format

- Refer to Table 4.7-1 for the meaning of the first 2 data bytes (HOST - host ID and ENT - entity) and to Table 4.7-2 for the meaning of data 3 (ERRC - error class).

Table 4.7-1. Host ID and Entity

Host	Meaning	ENTT	Meaning
0000	UC1 error	1	unit UC
0001	UC2 error	2	UBX
0002	UC3 error	3	EBX
0003	UC4 error	4	FTMI
0004	UC5 error	5	FC
0005	UC6 error	6	DDC
0006	UC7 error	7	DSPI
0007	UC8 error	8	DMB
0008	UC9 error	9	CCNI
0009	UC10 error	a	CCB
000A	UC11 error	b	TSI
000C	UC13 error	d	EMTC
000D	UC14 error	e	Sync
000E	UC15 error	f	TLI
000F	UC16 error	10	Timing Link
0010	CI error	11	PMEM
0011	MP error	12	SMEM

Table 4.7-1. Host ID and Entity (Continued)

Host	Meaning	ENTT	Meaning
0012	CCN error	13	MP
0013	Frame error	14	CI
0014	Local error	15	LINK
0015	Unknown error	16	NPC
0016	MC error	17	MC
0017	PMEM error	18	MJU
0018	SMEM error	19	SRM
		1a	DS3U MXR
		1b	DS3U FLI
		1c	DS3U FMT
		1d	DS3U MIU
		1e	PR
		1f	EMTC
		20	EBX
		21	CCI
		22	ETSI

Table 4.7-2. Error Class Meanings

Code	Meaning
1	Hardware error
2	Transient error
3	Power error
4	Sanity bit error
5	CI link errors
6	Sync mode switch
7	Software error recovery
8	Error not found

Table 4.7-2. Error Class Meanings

Code	Meaning
9	Sync booted
A	Sync timing link errors
B	Background audits
C	Facility errors
D	Hardware error detected by application software

4. Use data 10 (or data 13 for DSPU NPC) to identify the hardware entity as follows:
- For a duplicated unit entity, the left half (4 digits) of data 10 gives the unit number (0 through 5 for units 1 through 6) and the right half gives the module (0 through 3 for FTM 1 through 4).
 - For an ETSI entity, the left half (4 digits) of data 10 gives the side (0, 1) and the right half gives the unit (0 through F for units 1 through 16).
 - For an FTU NPC entity, the left half (4 digits) of data 10 gives the unit number (0-5 for units 1 through 6) and the right half gives the NPC number in HEX. To get the NPC number, convert the HEX number to decimal and add 1 (see Figure 4.7-2 and Table 4.7-3).
 - For a DSPU NPC entity, the left half (4 digits) of data 13 gives the side (0, 1) and the right half gives the NPC number in HEX. To get the NPC number, convert the HEX number to decimal and add 1 (see Figure 4.7-2).
 - If ERRC=d then data 10 will correspond to an ASCII text file name. For Example:
ENTT0016 - npc
ERRC000d
Byte 10 BYTE11 BYTE12
55434650 706274 72 65732E63
UCFP pbtr eb.L

Powers of 16 = 16ud 16ud 16ud 16ud

Example: Hex = 005A

Decimal Number = (0 x 16ud)
+ (0 x 16ud)
+ (5 x 16ud)
+ (A x 16ud), where 16ud = 1

0s = (0 x 0) = 0

5 = (5 x 16) = 80

A = + (A x 1) = 10, where A = 10

Decimal Number = 90

(NPC Number = 90 + 1 because internal count started with 0)

Hex Characters: = A = 10, B = 11, C = 12, D = 13, E = 14, F = 15

Figure 4.7-2. Hexadecimal-to-Decimal Conversion Example

Table 4.7-3. Hexadecimal Numbers

(1) 01	(21) 15	(41) 29	(61) 3D	(81) 51	(101) 65	(121) 79	(141) 8D
02	16	2A	3E	52	66	7A	8E
03	17	2B	3F	53	67	7B	8F
04	18	2C	40	54	68	7C	90
05	19	2D	41	55	69	7D	91
06	1A	2E	42	56	6A	7E	92
07	1B	2F	43	57	6B	7F	93
08	1C	30	44	58	6C	80	94
09	1D	31	45	59	6D	81	95
(10) 0A	(30) 1E	(50) 32	(70) 46	(90) 5A	(110) 6E	(130) 82	(150) 96
0B	1F	33	47	5B	6F	83	97
0C	20	34	48	5C	70	84	98
0D	21	35	49	5D	71	85	99
0E	22	36	4A	5E	72	86	9A
0F	23	37	4B	5F	73	87	9B
10	24	38	4C	60	74	88	9C
11	25	39	4D	61	75	89	9D
12	26	3A	4E	62	76	8A	9E
13	27	3B	4F	63	77	8B	9F
(20) 14	(40) 28	(60) 3C	(80) 50	(100) 64	(120) 78	(140) 8C	(160) A0

- Find the meaning of the condition code given in data 4 (ERRT) from Table 4.8-1 or Table 4.8-2 in GT 4.8.

**NOTE:**

The CCI and ETSI errors are interactive; errors on one will affect the other. If most of the ETSIs for a unit are reporting errors, the common CCI for the unit has probably failed. If a CCI is reporting errors, one of the connecting ETSIs may have failed.

- Enter command to remove the entity from service per Figure 4.7-3.

7. Enter command to diagnose same pack per Figure 4.7-3.

**NOTE:**

Attempt to clear pested packs on the same side before working on the other side. Only, if both sides are pested, you will need to bring the entire side up to service before attempting restoral of any failed or pested packs on the other side.

8. If DGN ...STF message is received, then go to *Manual Diagnostic Failures* to clear failed diagnostic.
 - If the message is not received, continue with Step 9.
9. Replace the plug-in for the subject entity (or other replacements per GT 4.8) and enter commands to restore replacement packs to service per Figure 4.7-3.
10. If same transient messages are recorded again in error history on PMEM, contact technical consultant.

verb:[xy]:<CP identification>:[ww]{;} or {:<additional info.>};

{RMV-EQPT::	SYNC-a;	a	=	0 or 1
/RST-EQPT::	SYNC-a:[ww]:TLI-n[:SSP-b];	n	=	1-4; b = sync port (0 or 1)
/DISC-EQPT::	SYNC:[ww]:TB			
/DGN-EQPT::	CCI-s;	s	=	side 0 or 1
	CCNI-s;	s	=	side 0 or 1
	ETSI-sqq;	qq	=	unit 01-16
	TSI-sft;	f	=	unit (receiving from) (1-6)
	CCB-sf;	t	=	unit (transmitting to) (1-6)
	ETSI,ECCN-s;			
	UNIT-[q]q:[ww]:UC;	[q]q	=	unit 01-16
	UNIT-[q]q:[ww]:{FTMI-d[DSPI];	d	=	module interface 1-4
	UNIT-[q]q:[ww]:FC-sd;	sd	=	FC side (0,1) and FC No. (1-4)
	NPC-<npc No.>:[ww]:[SIDE-s];	<npc No.>	=	NPC No.
		s	=	SIDE for DSPU
	LINK-j;	j	=	link 1-6

Figure 4.7-3. Maintenance Command Construction

Isolate Trouble with ERR COND Code Meanings

4.8

When to Use Use this procedure to isolate trouble with ERR COND Code meanings

Instructions

1. From Table 4.8-1 or Table 4.8-2 find the explanation of the COND code which appears in the ERR,ESR message for the subject pack.
2. If you were able to clear the trouble using the meaning of the ERR code, go to Step 4.
 - If you were not, continue with Step 3.
3. Check printout for ERR SOFTWARE message.
 - If ERR SOFTWARE message also occurs in printout, go to *Software Error*.
4. To make a record of the error history on the PMEM (for use by technical consultant), enter one of the following commands (see Note):

Time of Day/Time Interval:

**RTRV-LOG: [xy] : : [ww] : ERR:HWER, {INT-mn |
[DATE-mm-dd-yy,]TOD-hh-mm-ss}];**

Suspect Entity:

RTRV-LOG: [xy] : : [ww] : ERR:HWER, ENTY-eee;

Where:

INT = Interval of time (past 59 minutes)

TOD = Time of day consisting of hour (hh=00 through 23),
minutes (mm=00 through 60), seconds (ss=00 through 60).
Date (month, day, year) is optional.

eee = Plug-in designation, for example: BX, CCB, CCI, CCNI,
CI, CPR, CRO, DMB, DSPI, EBX, EMTC, ETSI,
FC, FTMI, LINK, MC, MP, MTC, NPC,
SYNC, TLI, TSI, UBX, UC.



NOTE:

All error events are logged on PMEM; however, the file is overwritten when the file capacity is reached. If you do not know how full the error log is (not recently cleared), you will want to use a short interval, perhaps the past 5 minutes, to avoid overloading the link with old errors.

5. Contact technical consultant.

Table 4.8-1. ESR Condition Codes - CCNI, CCB, TSI

CCNI Pack	
COND 90	Software could not access CCNI; pack does not acknowledge. Corrective Action: (1) verify that CCNI is securely seated; (2) look for loss of sync to CCNI and replace CCNI; (3) look for MC, BX or CPU interface trouble.
91	RAM error in high data byte on MC-MP. Trouble in MC (BX or CPU), or CCNI.
92	RAM error in low data byte on MC-MP. See COND 91.
93	Address parity error. Corrective Action: enter command to restore CCNI.
94	Autonomous switch error. Circuit in CCNI for side switch independent of MP disagrees with mate CCNI.

Table 4.8-1. ESR Condition Codes - CCNI, CCB, TSI (Continued)

95	Bus status error. Circuit cannot determine active side. Corrective Action: (1) replace CCNI; (2) if persists, report possible software error.
96	Stuck summary bit. Error leads from CCB or TSI stuck high, but no trouble can be found. Subject CCB and TSI packs are identified in messages.
CCB Pack	
COND A0	Software could not access CCB; pack does not acknowledge. Corrective Action: (1) verify that CCB is securely seated; (2) look for loss of sync to CCB and replace CCB; (3) look for MC, BX or CPU interface trouble.
A1	Loss of sync pulse signal for approx. 100 ms. Trouble in CCB or SYNC or sync interface between.
A2	Loss of 8 MHz clock. See COND A1.
A3	Bad data from TSI ports. If most ports are reported in ESR, probably the CCB is bad. If only a few ports are reported, probably the TSIs are bad.
A4,A5	Zero bit stuck at 1 in CCB (A4) or CCNI (A5).
TSI Pack	
B0	Software could not access TSI; pack does not acknowledge. Corrective Action: (1) verify that TSI is securely seated; (2) look for loss of sync through CCB and replace TSI; (3) look for MC, BX or CPU interface trouble.
B1	Stuck summary bit that indicates troubles from TSI devices, but no actual trouble can be found.
B2	TSI device error that clears during recovery; transient error.
B3	Software could not access TSI device; device failed or lost sync clock.
B4	Diagnostic exercise bits set on TSI device. Replace TSI.
B5	Error on address bus to TSI device. Trouble in TSI, CCNI, or MC-BX pack.
B6	TSI device not receiving good sync clock. Trouble in TSI, related CCB, or SYNC.

Table 4.8-1. ESR Condition Codes - CCNI, CCB, TSI (Continued)

B7	Error on TSI control RAM which defines maps. Replace TSI.
B8	Parity error on port from FC or DSPU-DMB. If most all TSI ports are reported in ESR message, replace TSI. If isolated ports are reported, the FCs or DMBs are probably bad. Adjacent NPCs that share the DBM ports will be reported although only one is bad.
B9	Parity error from CCNI.

Table 4.8-2. ESR Condition Codes

MC-CI Pack	
COND D0	RAM parity error.
D5	Illegal/unknown condition code.
MC-MP Pack	
COND D0	RAM parity error.
D5	Illegal/unknown condition code.
2E	Unused bit error.
2F	Unknown error source.
30	Power failure.
31	Processor not sane. Corrective Action: verify that MP pack is securely seated.
MC-MTC Pack	
COND D5	Illegal/unknown condition code.
2B	Unknown interrupt from MTC.
2C	Stuck summary bit.
2D	Unused bit error.
30	Power failure.
31	Pack no same.
MC-EBX Pack	
COND D5	Illegal/unknown condition code.
16	Write RAM parity error, low byte.
17	Write RAM parity error, low byte.

Table 4.8-2. ESR Condition Codes (Continued)

18	RAM parity, CPU-EBX.
19	D9 bit error.
1A	D10 bit error.
1B	D11 bit error.
20	Access error. Corrective Action: (1) verify that EBX is securely seated; (2) replace EBX pack.
21	RAM parity error, low byte.
22	RAM parity error, high byte.
23	Fan Bank 0 error flag.
24	D5 spare bit error.
25	Fan Bank 1 error flag.
26	D5 spare bit error.
27	Stuck summary bit.
28	Unknown interrupt.
29	Error from side 0 bus extension.
2A	Error from side 1 bus extension.
Unit-UC or UBX Pack (Types UA, UD, UC)	
COND 10	CPU parallel bus parity error.
11	CPU serial bus parity error.
0F	CPU internal bus error.
31	Unit UC is not sane. Corrective Action: verify that unit CPU is securely seated.
D0	Unit UC has RAM parity error. Corrective Action: replace unit CPU.
D1	Unknown error.
D2	Error source not found.
D3	Stuck bit in register on the pack.
D4	Failed UBX pack. Corrective Action: replace UBX pack.
D5	Invalid condition code.

Table 4.8-2. ESR Condition Codes (Continued)

30	Power failure.
FTMI Pack	
COND D5	Illegal/unknown condition code.
40	Error detected on bus from FTMI. Trouble either in FTMI, UBX, or MC-CPU.
41	Communications device (CIA) error.
42	Communications device (CIB) error.
43	Communications device (CIC) error.
44	Software could not access FTMI; pack does not acknowledge. Corrective Action: (1) verify that the FTMI is securely seated; (2) verify that FCs are securely seated and not failed; (3) verify that CCIs and ETSIs for unit are securely seated and not failed.
45	Loss of sync clock from UBX.
46	Device ID disagreement.
47	Data strobe signal.
48	Address parity error. Corrective Action: enter command to restore FTMI.
49	Stuck bit on port from FC. If most of the ports are listed in ESR, the FTMI is probably bad. If isolated ports are reported, an FC is probably bad.
4A	Stuck bit on port from NPC. If most of the ports are listed in ESR, the FTMI is probably bad. If isolated ports are reported, an FC is probably bad.
4B	All FTMIs have lost sync clock. Trouble on related CCB or SYNC.
FC Pack	
COND D5	Illegal/unknown condition code.
4C	Software could not access FC; pack does not acknowledge. Corrective Action: (1) verify that FC is securely seated; (2) look for loss of sync from CCIs and ETSIs and replace FC; (3) look for unit UBX or UC trouble.
4D	Pack timer error.

Table 4.8-2. ESR Condition Codes (Continued)

4E	Circuit ID error.
4F	Transmit formatter error on ports from NPCs. If most of the ports are listed in ESR, the FC is probably bad.
50	Receive formatter error on ports from NPCs. Corrective action: (1) Restore FC; if restore denies, replace pack. (2) If FC is removed again and NPC is implicated in message, replace NPC.
51	Sanity timer interrupt.
52	RF bus error.

DS3U MXR Pack

COND 14	DS3 loss of signal.
15	Unknown error.
34	M23 summary register stuck bit.
97	Communications link error.
A6	Chan controller transmit data error.
A7	Chan controller receiver data error.
A8	Chan controller exercise error.
A9	Chan controller register stuck bit.
AA	Transceiver framer error.
AB	Transceiver receive sync error.
AC	Transceiver transmitter error.
AD	M23 device error.
AE	M12 device error.
AF	M12 summary stuck error.
D5	Illegal/unknown condition.
D8	MXR ROM error.
D9	MXR LCA error.
DA	MXR queue overflow.
DB	Chan controller loss of clock.
DC	Chan controller frame sync error.

Table 4.8-2. ESR Condition Codes (Continued)

DD	Chan controller config register error.
DE	Chan controller instruction RAM error.
DF	Chan controller parity error.
COND E1	MXR access error.
E2	Hard error stuck bit.
E3	Facility error stuck bit.
E4	MXR is in reset state.
E5	PIF bus parity error.
E6	Loss of clock from unselected FLI.
E7	45 MHz not phase locked to system clock.
E8	Firmware error.
E9	HSCC device error.
EA	PIF I/O device error.
EB	M13 summary register stuck bit.
EC	Transceiver summary stuck bit error.
ED	Program error.
EF	RAM error.
DS3U MIU Pack	
COND 01	CEC bit (on HSCC) not cleared.
02	Firmware error.
03	Excessive transmit data underruns.
04	Invalid acknowledge from MXR.
05	No acknowledge from MXR.
06	RAM data error.
07	Invalid code checksum.
08	FDL (on HSCC) register error.
09	MXR (on HSCC) register error.
0A	EPROM checksum error.
0B	Timer 1 error.

Table 4.8-2. ESR Condition Codes (Continued)

0C	Timer 2 error.
0D	DUART error.
0E	MIU access error.
D5	Illegal/unknown condition.
D6	Communication error.
FTU-NPCs (Common for DPCs and DDCs)	
COND 53	DDC bus error.
54	Software could not access NPC; pack does not acknowledge. Corrective Action: (1) verify that NPC is securely seated; (2) check loss of sync from FC; (3) check unit UBX or UC trouble; (4) if persists, replace NPC.
55	NPC is sending a port alarm to the FC.
56	Facility processor on NPC is not sane.
57	SYNC error on FC.
58	Loss of sync clock to channel controller.
59	Loss of frame sync error to channel controller.
5A	Channel controller configuration error.
5B	Channel controller RAM error. Corrective Action: enter command to restore NPC.
5C	Channel controller parity error. Corrective Action: enter command to restore NPC.
5D,5E	Channel controller transmit (5D) or receive (5E) error.
5F	Channel controller exercise error.
60	Channel controller summary bit error.
61	Hard RAM error.
62	Hard ROM check error.
63	Hard error stuck bit.
64,67	Transceiver A (64) or B (67) stuck bit.
65,68	Transceiver A (65) or B (68) transmit slip.

Table 4.8-2. ESR Condition Codes (Continued)

66,69	Transceiver A (66) or B (69) error.
6A	Circuit ID error.
6B	Facility errors.
6C	DDC address parity error.
6D	Invalid FPA state.
6E	Invalid DDC pack ID.
D5	Illegal/unknown condition.
DSPU NPC - MJU	
	Corrective Action for COND BF-C7: replace MJU (subject side).
COND BF	Serial access error.
C0	Clock error.
C1	Processor interface error.
C2	Input data interface error.
C3	Error correction circuitry failure.
C4	Control memory failure.
C5	Output block failure.
C6	Sampling circuitry failure.
C7	Control memory or state machine failure.
DSPU NPC - SRM	
	Corrective Action for COND C8-CF: replace SRM (subject side).
COND C8	Serial access error.
C9	Clock error.
CA	Processor interface failure.
CB	Input data interface failure.
CC	Error correction block failure.
CD	Control memory failure.
CE	Multiplexer block failure.

Table 4.8-2. ESR Condition Codes (Continued)

CF	Output block failure.
FTU NPC - CEPT DPC	
COND 3D	ROM error.
3C	TS0 monitoring overflow.
3E	Loss of timing.
3F	OOS test ran while pack was in service.
DSPU-DSPI	
COND 6D	Software could not access DSPI; pack does not acknowledge. Corrective Action: (1) verify that DSPI is securely seated; (2) look for loss of sync from UBX and replace DSPI; (3) look for unit CPU trouble.
6E	Bus parity error. Trouble either on unit CPU or DSPI.
6F	Bus address parity error. Corrective Action: enter command to restore DSPI.
D3	Stuck bit on unit CPU, but no ESR bits set on DSPI.
CPR Packs	
COND 98	CPR serial access error.
99	CPR clock error.
9A	CPR processor interface failure.
9B	CPR input data interface failure.
9C	CPR D-bit interface parity error.
9D	CPR control memory failure.
9E	CPR control memory or state machine failure.
9F	CPR FIFO FRDY/FFULL stuck bit.
DSPU NPC - DMB	
COND 70	Software could not access DMB. Corrective Action: (1) verify that DMB is securely seated; (2) check clock loss from DSPI; (3) replace DMB; and (4) replace DSPI.

Table 4.8-2. ESR Condition Codes (Continued)

71	No reply on serial interface bus to NPC pair.
72	No reply on parallel interface bus to NPC pair.
73	Diagnostic exercise bits for DMB set on DSPI. If error persists after DSPI replacement, report possible software trouble.
74	DMB data processing error.
75	Multiple data parity error; however, check bit in DMB not set. Corrective Action: replace associated unit ETSI pack.
76	Sync clock error. Trouble in NPC or associated unit ETSI.
77	Sync clock error on multiple DMBs. Trouble in associated unit ETSI or the SYNC.
78	DMB FIFO error.
79	Power failure on DSPU side.
7A,7B	Transient error on control memory 0 (7A) or mem 1 (7B).
7C,7D	RAM parity error on control memory 0 (7C) or mem 1 (7D).
7E,7F	Interface error on control memory 0 (7E) or mem 1 (7F).
80,81	Loss of sync on control memory 0 (80) or mem 1 (81).
82,83	Input data parity error on control memory 0 (82) or mem 1 (83).
84,85	Transient on conferencer 0 (84) or conferencer 1 (85).
86,87	Control interface error on conferencer 0 (86) and 1 (87).
88,89	Control RAM parity error in control data or configuration field for conferencer 0 (88) or conferencer 1 (89).
8A,8B	Input data parity error on conferencer 0 (8A) or 1 (8B).
8C,8D	Parity, configuration, or reset error on conferencer 0 (8C) or conferencer 1 (8D).
8E,8F	Bit alarms on control memory 0 (8E) or mem 1 (8F).
D5	Illegal/unknown condition.
CCI Pack	
COND 01	Software could not access CCI. Corrective action: (1) verify that CCI is securely seated; (2) look for loss of clock (3) replace CCI; and (4) check MC, EBX, or CPU interface trouble.

Table 4.8-2. ESR Condition Codes (Continued)

02	Incorrect version number on CCI.
03	Summary bit set, but no other errors.
04	CCI ERR bit set in system status register.
05	ETSI ERR bit set in system status register.
06	Peripheral unit bit set in system status register.
07	Bus terminator pack absent.
08	2-MHz clock out of phase-lock.
09	240 frame sync misaligned.
0A	Loss of 240 frame sync.
0B	Loss of 8-kHz frame sync.
0C	CCI detected address parity error.
0D	CCI detected low byte data parity error.
0E	CCI detected high byte data parity error.
0F	CCI -5.2 power supply failure.
10	CCI detected bus status parity error.
11	Peripheral unit alarm.
12	Sync summary bit set on CCI pack.
ETSI Pack	
COND 20	Software could not access ETSI; pack does not acknowledge. Corrective Action: (1) verify that ETSI is securely seated; (2) look for loss of sync to ETSI and replace ETSI; (3) look for MC, EBX, or CPU interface trouble.
21	Incorrect version number on ETSI pack.
22	Summary bit set, but no other errors.
23	Loss of 32.768-MHz clock.
24	Loss of 240 frame sync.
25	Receive MDX summary bit set.
26	Control RAM summary bit set.
27	Transmit MDX summary bit set.

Table 4.8-2. ESR Condition Codes (Continued)

28	Loss of 3.3-volt power from CCI pack.
29	Peripheral unit port alarm (receive MDX).
2A	Receive MDX data source time-slot parity error.
2B	Receive MDX sync error.
2C	Receive MDX address parity error.
2D	Receive MDX write data parity error.
2F	Receive cannot be accessed; incorrect chip ID.
30	Transmit MDX data parity error.
31	Transmit MDX data source time-slot parity error.
32	Transmit MDX sync error.
33	Transmit MDX address parity error.
34	Transmit MDX write data parity error.
35	Transmit MDX cannot be accessed; incorrect chip ID.
37	Control RAM parity error.
38	Control RAM sync alarm.
39	Control RAM port alarm.
3A	Control RAM BIST flag is set.
3B	Data RAM BIST flag is set.
3C	Control RAM address parity error.
3D	Control RAM write data parity error.
3E	Control RAM device cannot be accessed; incorrect chip ID.
3F	Control RAM circuit pack parity.
40	Control RAM device is in reset state.
41	Control RAM port alarm summary bit set.
42	TRD3 status exercise bit is set.
43	Ready high error detected from CCI.
44	Ready timeout error from CCI; CCI cannot access ETSI.
45	Control RAM stuck bit error.

Table 4.8-2. ESR Condition Codes (Continued)

SYNC Packs	
COND 96	Transient error on sync pack.
D5	Illegal/unknown condition.
E000	Gross SYNC error registered at CCI. Communications with SYNC failed. Corrective Action: check if SYNC plug-ins have been disconnected.
E001	SYNC reports bad DPLL pack to error recovery.
E002	SYNC reports bad TB pack to error recovery.
E003	SYNC restarted itself autonomously.
E004	Software could not communicate with SYNC. Trouble with SYNC or in MC-MP.
E100	Transient caused by MP to SYNC communications failure. This error also brings E004 and remove SYNC.
E101	SYNC ROM checksum failure.
E102	SYNC RAM data or address error.
E103	SYNC has phase/freq. output latch error.
E104	Loss of 2.048 MHz output from frequency synthesizer.
E105	Loss of 2.048 MHz output from phase shift circuit.
E106	Loss of generated sync pulse output.
E107	Loss of time base strobe pulse.
E108	SYNC interrupt controller error.
E109	SYNC interrupt holding register error.
E10A	SYNC UART error.
E10B	SYNC control data output latch error.
E200	Unknown TB transient error; brings E004 message and RMV SYNC.
E201	Loss of output from TB.
E202	SYNC could not read TB pack ID or oven temperature.
E203	For MASTER timing, SYNC finds its TB has drifted out of limits.

Table 4.8-2. ESR Condition Codes (Continued)

E204	Ovens in both SYNC TBs are cold.
E205	New TB pack oven has not reached temperature. For Stratum 3, message appears once, though subsequent restorals will fail until temperature is reached. For Stratum 2, the message is repeated.
E300	Unknown PLL transient error; also brings E004 and RMV SYNC.
E301	One or both SYNCs report that PLL remains at end of range for 1 minute. If both SYNCs report the TLI is removed. If one reports, that SYNC is removed.
E302	Reporting SYNC finds excessive phase error (125 μ out of phase).
E303	Reporting SYNC found PLL violations.
E304	Noise on timing link caused PLL to go from fast start to normal mode.
E305	Accompanies E301 to declare timing link (SSP) failure.
E400	Unknown mate SYNC transient; also brings E004 and RMV SYNC.
E401	Reporting SYNC found bad mate. Mate declared out-of-service; ESR bits are from reporting SYNC.
E402	One SYNC communicated failure to reporting SYNC. ESR bits are from reporting SYNC.
E403	One SYNC communicated loss of cross-coupling for 1 millisecond to reporting SYNC. ESR bits are from reporting SYNC.
COND E404	One SYNC communicated loss of cross-coupling for 30 msec. See E403.
E405	Communication link with mate is down. ESR bits are from reporting SYNC.
E406	Cross-coupling violation that indicates trouble with mate rather than DPLL. ESR bits are from reporting SYNC.
E407	Cross-couple fast lock circuit failed to align phase of two syncs.
E408	For MASTER timing, the TB in the mate SYNC has drifted out of limits.

Table 4.8-2. ESR Condition Codes (Continued)

E409	One SYNC communicated loss of cross-couple lock to reporting SYNC.
E500	Transient TLI error; no further communication. Brings E004 message and RMV SYNC.
E501	TLI hardware error as defined by the ESR message bits. For TE type, one or both SSPs may be effected.
E600	Unknown SSP error; no further communication. Brings E004 message and RMV SYNC.
E601	Subject SSP has errors and cannot be used as timing source. Error brings diagnostic on SSP. Trouble either on incoming link or in TLI-SSP.
E602	Subject TLI-SSP was found to be cause of errors and was removed from service.
E603	Incoming unipolar clock does not match frequency field requirements defined in ESR message bits.
E700	Unknown CRO error; no further communication. Error brings E004 message and RMV SYNC.
E701	Loss of CRO clock signal.
E702	Loss of CRO clock signal. If one SYNC declares error, trouble is probably TB or DPLL. If both declare error, trouble is probably CRO which will be removed.
E703	SYNCs report that CRO has drifted out of limits.
E704	SYNC declared that CRO is out-of-service.
E800	Unknown clear message.
E801	Mate error cleared.
E802	PLL error cleared.
E803	TB error cleared.
E804	CRO error cleared.
E805	Timing link error cleared; link can once again be used as source. Error brings diagnostic and updated link status.
E806	TLI error cleared.
EF00	Transient unknown SYNC side switch error. Error brings E004 message and RMV SYNC.

Table 4.8-2. ESR Condition Codes (Continued)

EF01	SYNC changed to NORMAL mode and is on named SSP source.
EF02	SYNC changed to HOLDOVER mode and is on internal osc.
EF03	SYNC changed to FAST START and is on named SSP source.
EF04	SYNC switched to different TLI for timing source.
EF05	SYNC changed to CROSS-COUPLE and derives timing from mate.

Clear ERR HARDWARE Message

4.9

When to Use

Use this procedure to clear an ERR HARDWARE message.

Instructions

1. Notice which plug-in is named in the last line of the REPT ALMD ET EQPT "ERR,HARDWARE" message. Also check for error code or further explanation in the message.
2. Study the associated messages to determine if the subject plug-in has been removed and diagnosed.
3. Check for a blown fuse on the 48-volt fuse and alarm panel and on the frame fuse boards. Also check for ERR PWR message (for failed power unit) in printout.
 - If there is a blown fuse, go to *Power Failures* to clear the blown fuse trouble.
 - If there is a failed power unit, go to *Power Failures* to clear the failed power unit.
4. Which of the following codes/explanations are given in the ERR message?
 - If **hardware database mismatch**, then continue with Step 5.
 - If **can't access link**, then proceed to Step 8.
 - If **hardware boot failed**, then proceed to Step 10.

- If **other code**, then proceed to Step **12**.
 - If **no code or explanation**, check trouble printout for associated trouble messages. If you cannot identify the trouble using printout and the *Trouble Identification* section, contact technical consultant.
5. Hardware does not match inventory in data base or there is a hardware failure. Enter following command and check if correct equipment code plug-ins are installed for sync or NPC plug-ins that have growth specifications.
RTRV-STATE-EQPT : : [UNIT - [q]q] : : ALL ;
where UNIT field limits NPC information to one unit.

**NOTE:**

The conditions are indicated in the output message by the presence of a "1" in the out-of-service, failed, and pested columns for each pack. Unequipped NPCs are indicated by dashes.

- If incorrect plug-in installation was found and if the plug-in named in message was removed from service, enter RST-EQPT command for CP per Figure 4.9-1. This procedure is completed.

verb:[xy]:<CP identification>:[ww]{} or {}:<additional info.>;

{RMV-EQPT:: SYNC-a;	a	=	0 or 1
/RST-EQPT:: SYNC-a:[ww]:TLI-n[:SSP-b];	n	=	1-4; b = sync port (0 or 1)
/DISC-EQPT:: SYNC:[ww]:TB			
/DGN-EQPT:: CCI-s;	s	=	side 0 or 1
CCNI-s;	s	=	side 0 or 1
ETSI-sqq;	qq	=	unit 01-16
TSI-sft;	f	=	unit (receiving from) (1-6)
CCB-sf;	t	=	unit (transmitting to) (1-6)
ETSI,S,ECCN-s;			
UNIT-[q]q:[ww]:UC;	[q]q	=	unit 01-16
UNIT-[q]q:[ww]:{FTMI-d DSP!};	d	=	module interface 1-4
UNIT-[q]q:[ww]:FC-sd;	sd	=	FC side (0,1) and FC No. (1-4)
NPC-<npc No.>:[ww]:[SIDE-s];	<npc No.>	=	NPC No.
	s	=	SIDE for DSPU
LINK-j;	j	=	link 1-6

NOTE: Removing the NPC is service affecting.

verb::<CP identification>[,option]!

{RMV:: SYNC a!	a	=	0 or 1
/RST:: SYNC a,TLI n[,SSP b]!	n	=	1-4; b = sync port (0 or 1)
/DGRTH:: CCI s!	s	=	side 0 or 1
/DGN::} CCNI s!	s	=	side 0 or 1
ETSI sqq!	qq	=	unit 1-16
TSI sft!	f	=	unit (receiving from) (1-6)
CCB sf!	t	=	unit (transmitting to) (1-6)
ETSI,S,ECCN s,ALL!			For all ETSSs on the side
TSIS,CCN s,ALL!			For all TSIs on the side
UNIT [q]q,UC!	[q]q	=	unit (1-16)
UNIT [q]q,{FTMI d DSP!}!	d	=	module interface for units 1-4
UNIT [q]q,FC sd!	sd	=	FC side (0,1) and FC No. (1-4)

verb::<CP identification>[,option]!

{RMV::	SYNC a!	a	=	0 or 1
	NPC <npc No.>[,SIDE s]!	<npc No.>	=	NPC number
		s	=	SIDE for DSPU
	LINK j!	j	=	link 1-6

Figure 4.9-1. Maintenance Command Construction

6. If plug-in named in message was not removed from service and diagnosed, enter the **RMV-EQPT** and **DGN-EQPT** commands for the CP per Figure 4.9-1.

- If DGN ...STF message is received, go to *Manual Diagnostic Failures* to clear the failed diagnostic.

7. Enter RST-EQPT command for plug-in.

- If trouble persists, contact technical consultant.

For Can't Access Link, Continue Here

8. Software could not access subject pack. Verify that the pack is installed.

9. If the subject pack has not been diagnosed, enter DGN command to diagnose pack per Figure 4.9-1.

- If DGN ...STF message is received, go to *Manual Diagnostic Failures* to clear the failed diagnostic.

For Hardware Boot Failed, Continue Here

10. Hardware boot failed. If the subject pack has not been removed from service, enter RMV command to remove pack per Figure 4.9-1.

11. Enter RST command to restore same pack to service per Figure 4.9-1.

12. Find expanded explanation in Table 4.9-1 and perform corrective action. Refer to Figure 4.9-1 for command construction. Remember to enter commands to remove pack before replacing, and restore after replacing.

- If you were not able to find the trouble, check trouble printout for associated trouble messages. If you cannot identify the trouble using printout and the *Trouble Identification* section, contact technical consultant.

Table 4.9-1 Error Hardware Explanations

Code	Explanation/Corrective Action
Hardware database mismatched	Hardware code and data base do not agree.
Hardware failure	Attempt to write to named pack failed.
Hardware boot failed	Attempt to boot (reset or restore) pack failed.
Can't access link	X.25 layer 3 protocol failure; far-end is not transmitting or responding. Check far-end equipment or software failure.
Transmit time-out	For X.25 link, there is a layer 1 (clear-to-send) failure; check link cabling and connections. For Snider link, there is a possible CI (DUART circuit) failure; enter DGN-EQPT : : LINK-j ; and replace CI to clear failure.
Receive time-out	X.25 layer 1 or 2 protocol failure; far-end is not transmitting or responding. Check far-end equipment or software failure.
Software failure... link removal	Software failure forced link out-of-service. Enter RST-EQPT : : LINK-j ; .
Unit could not be reset	Unit could not be reset for boot. Enter appropriate RMV command (UNIT-[q]q, UC or MC), replace CPU (in UNIT) and EMTC (in MC), and restore pack. Check unit to MC cabling.
Unit failed sanity check	Unit failed sanity check for boot. Enter RMV-EQPT : : UNIT-[q]q::UC; , replace CPU in unit, and restore pack.
Failure to insert TCC	NPC failed to insert trunk conditioning. Enter DGN-EQPT : : NPC ; . Remove and replace if necessary.

Table 4.9-1 Error Hardware Explanations (Continued)

Code	Explanation/Corrective Action
Failure to remove TCC	NPC failed to remove trunk conditioning. Remove and replace NPC.
Failure to switch CNN sides	Failure to verify ECCN side switch. Enter DGN-EQPT : :CCI-s ; for each side. If no failure is found, enter commands to remove and restore each CCI to reestablish active side.
NPCs facility queue overflow	NPCs/facilities hardware error overflow. Check for DS3 or multiple facility failure or all NPCs in unit failing because of common equipment.

Table 4.9-2 Error Hardware Explanations

Code	Explanation/Corrective Action
E0	Hardware and data base do not agree. Check associated ERR ESR message for named plug-in (hardware).
E1	Attempt to write to named pack failed.
E2	Attempt to boot (reset or restore) pack failed.
E3	X.25 layer 3 protocol failure; far end is not transmitting or responding. Check on far-end equipment or software failure.
E4	For X.25 link, there is a layer 1 (clear-to-send) failure; check link cabling and connections. For Snider link, there is a possible CI (DUART circuit) failure; enter DGN : :LINK! and replace CI to clear failure.
E5	X.25 layer 1 or 2 protocol failure; far-end is not transmitting or responding. Check far-end equipment or software failure.
E6	Software failure forced link out-of-service. Enter RST : :LINK j!
E7	Unit could not be reset for boot. Enter appropriate RMV command (UNIT [q]q, UC or MC), replace CPU (in UNIT) and MTC (in MC), and restore pack. Check unit to MC cabling.
E8	Unit failed sanity check for boot. Enter remove UNIT UC , replace CPU in unit, and restore pack.
E9	NPC failed to insert trunk conditioning. Enter DGN : :NPC! Remove and replace if necessary.
EA	NPC failed to remove trunk conditioning. Remove and replace NPC.

Table 4.9-2 Error Hardware Explanations (Continued)

Code	Explanation/Corrective Action
EB	Failure to verify ECCN side switch. Enter DGN : : CCI s! for each side. If no failure is found, enter commands to remove and restore each CCI to reestablish active side.
EC	NPCs/facilities hardware error overflow. Check for DS3 or multiple facility failures or all NPCs in unit failing because of common equipment.
ED	Duplex entity failed. On side (for plug-in) that was autonomously removed from service, replace failed plug-in, and enter restore command.
EE	Lost clear-to-send signal on X.25 links.
EF	Frame audit reboot DDC failure.

Clear DS3 Equipment Critical Alarm

4.10

When to Use

Use this procedure to clear a DS3 Equipment Critical Alarm.

Instructions

**NOTE:**

One thing to remember about DS3 protection switching is that a failed MMFG that cannot be automatically switched to protection will be marked ISF (in-service, failed). An MMFG with ISF status cannot be removed because the protection switch is in use, and the MMFG cannot be restored (after plug-in replacement) because it is already in-service. After one MMFG failure is cleared, another failed MMFG will switch to protection.

1. If alarm cutoff is needed, enter **OPR-ACO-ALL**.
2. Consider the following possible causes of the critical alarm:
 - The DS3 facility has failed. The DS3U (HDS3U) protection switching only protects against loss of service due to DS3U (HDS3U) plug-in failures.
 - More than one MXR (HMXR) function group has failed. Only one protection MXR (HMXR) function group is provided for backup protection.

- An MXR (HMXR) function group has failed and the protection switching for that group is inhibited.
- 3. Study printout to find the trouble message(s). Look for REPT ALMDET ...ANALYSIS REPORT messages. The DACS II analyzes all the error inputs and reports packs that have failed diagnostics and related packs that can also cause the failure.
- 4. Check for blown fuses. If whole units of packs have failed, check the fuse and alarm panel for lighted **FA** lamp and a blown 48-volt feeder fuse. In the unit and other circuit groups, check for lighted LED indicator on fuse boards or 80-type LED fuses.
 - If there is a blown fuse at the frame, go to *Power Failures*.
- 5. If there is an REPT ALM T3 ...UNIT DS3 message, go to *Facility Alarms* to clear UNIT DS3 alarm.
 - If there is no unit DS3 alarm message, continue with Step 6.
- 6. There are two vital retrieve commands for the DS3 equipment:
 - **RTRV-STATE-T3::UNIT-[q]q::DS3-c[&&-d];**
which shows the protection state (PSTATE) and status of the MXR function group and the facility (or continuous range of MMFGs and facilities).
 - **TRV-STATE-EQPT::UNIT-[q]q::PROTN;**
which shows the MXR and MIU maintenance and the protection states for each MMFG and FLI circuit pack.
- 7. Enter the query commands from above and study the output information using the following:
 - Facility failures are indicated by the presence of OOF (out-of-frame), LOS (loss of signal), or HBER (high BER) in the DS3 query.
 - Table 4.10-1 gives the meanings of the various codes in the PSTATE output. The message is as follows: (1) the protection MMFG is listed first on the left, and (2) for each MMFG, the top code is the MXR maintenance status, next down the MIU (if any) status, next the MMFG protection status, and lastly, the protection availability.
- 8. Which problem is indicated by the outputs of the query commands?
 - If **More Than One MMFG Has Failed**, proceed to Step 15.
 - If **Protection Switching Inhibited**, continue with Step 13.
 - If **Undetermined**, continue with Step 9.
- 9. Enter command to switch FLI to protection as follows:
SW-TOPROTN-EQPT:[xy]:UNIT-[q]q:[ww]:FLI;
- 10. If critical alarm clears, continue with Step 11.

- If alarm does not clear, enter following command to switch back to service FLI and go to Section 4.3 to *clear ERR <entity> messages*.
SW-TOWRG-EQPT:[xy]:UNIT-[q]q:[ww]:FLI;
11. Enter command to remove FLI per Figure 4.10-1 and replace service FLI plug-in (FLI S).
 12. Enter command to restore replacement per Figure 4.10-1.
 - If RST ...DENY message is received, find the reason for denial in the output message and perform corrective action to obtain command completion.
 - If RST ...COMPLD message is received, enter following command to switch back to service FLI; this procedure is completed.
SW-TOWKG-EQPT:[xy]:UNIT-[q]q:FLI;
 13. Enter **ALW-SW-EQPT::UNIT-[q]q::MMFG-c:PROTN;** for the MMFG for which switching is inhibited.
 14. If alarm status changes from critical to major, then proceed to Step 17.
 - If the status does not change, repeat from Step 8.

Table 4.10-1. Maintenance and Protection Keywords

Keyword	Meaning
Maintenance Status	
IS	In-Service
ISF	In-Service, but Failed and Pested
OOS	Out-Of-Service
UEQD	Unequipped
Protection Status	
SLT	Protection MMFG/FLI Selected
USLT	Protection MMFG/FLI Unselected
SALW	MMFG Is Carrying Service and Switching Is Allowed
SINH	MMFG Is Carrying Service and Switching Is Inhibited
MPALW	Manual Protection Switch Active and Auto Switchback Allowed
APALW	Auto Protection Switch Active and Auto Switchback Allowed

Table 4.10-1. Maintenance and Protection Keywords

Keyword	Meaning
MPINH	Manual Protection Switch Active and Auto Switchback Inhibited
APINH	Auto Protection Switch Active and Auto Switchback Inhibited
(dashes)	Service MMFG Not Equipped
Protection Availability	
AVL	Available for Switching
NVL	Not Available for Switching
(dashes)	MMFG Not Selected for Service

15. From the query information and the trouble printout, determine which MMFG is switched to protection.

**NOTE:**

The first MMFG to fail will be served by the protection MMFG, and the other failed MMFGs are marked ISF (in-service and failed). If all the MMFGs in the unit have failed, MMFG 1 will probably be the one that is switched to protection.

16. If you need to cause the protection switch to move to another failed MMFG, enter **SW-TOPROTN-EQPT : :UNIT - [q]q : :MMFG - c : FRC ;** for the MMFG which you want to place on protection to maintain service or to enable maintenance (see Note).

**NOTE:**

If an MMFG is in-service and failed (because another MMFG was being served by protection), plug-ins cannot be replaced and restored to service. When switched to protection, the same MMFG will be removed from service (OOS) allowing maintenance.

17. Use the ERR ESR messages for the DS3U (HDS3U) plug-ins to determine which MMFG plug-in(s) are implicated and replace the named pack(s). The implicated circuit packs have either an OOS (out-of-service) or ISF (in-service and failed) status.
18. Enter command to restore the replacement plug-in to service per Figure 4.10-1.

verb:[xy]:<CP identification>:[ww]{;} or {:<additional info.>};}

{RMV-EQPT::	SYNC-a;	a	=	0 or 1
/RST-EQPT::	SYNC-a:[ww]:TLI-n[:SSP-b];	n	=	1-4; b = sync port (0 or 1)
/DISC-EQPT::	SYNC:[ww]:TB			
/DGN-EQPT::	CCI-s;	s	=	side 0 or 1
	CCNI-s;	s	=	side 0 or 1
	ETSI-sqq;	qq	=	unit 01-16
	TSI-sft;	f	=	unit (receiving from) (1-6)
	CCB-sf;	t	=	unit (transmitting to) (1-6)
	ETSI, ECCN-s;			
	UNIT-[q]q:[ww]:UC;	[q]q	=	unit 01-16
	UNIT-[q]q:[ww]:{FTMI-d DSPi};	d	=	module interface 1-4
	UNIT-[q]q:[ww]:FC-sd;	sd	=	FC side (0,1) and FC No. (1-4)
	NPC-<npc No.>:[ww]:[SIDE-s];	<npc No.>	=	NPC No.
		s	=	SIDE for DSPU
	LINK-j;	j	=	link 1-6

Figure 4.10-1. Maintenance Command Construction

19. If you were able to clear the trouble, then continue with Step 20.

- If you were not, then go to Section 4.3.



NOTE:

When the service MMFG is restored to service, the next failed MMFG will switch to protection. If only two MMFGs failed, the alarm status will change from critical to major.



NOTE:

If a failed MMFG cannot be switched to protection, it will be marked ISF (in-service, failed). An MMFG with ISF status cannot be removed because the protection switch is in use, and the MMFG cannot be restored (after plug-in replacement) because it is already in-service.

20. Repeat Steps 15 through 19 to clear remaining DS3 alarms.
21. Enter **RTRV-STATE-EQPT::UNIT-[q]q::PROTN;** to check the maintenance and protection status of each of the MMFGs.
22. If the protection switch was operated (or inhibited) manually to enable maintenance, enter the command to reverse the operation as follows:

Release Protection
SW-TOWKG-EQPT::UNIT-[q]q::MMFG-c;

Allow Switching
ALW-SW-EQPT::UNIT-[q]q::MMFG-c:PROTN;
23. Enter **RTRV-STATE-EQPT::UNIT-[q]q::ALL;** to check for failed or out-of-service plug-ins. Clear failures as follows:
 - For failed plug-ins, enter RMV command for plug-in, replace it, and enter RST command per Figure 4.10-1.

For failed facilities, check facility errors and clear counts. If NPC was removed from service, enter RST command for NPC per Figure 4.10-1.

Manual Diagnostic Failures

General Tasks

5

Contents

■ Clear Failed MC Diagnostic	GT 5.1-1
■ Clear Failed MP Diagnostic	GT 5.2-1
■ Clear Failed CI Diagnostic	GT 5.3-1
■ Clear Failed SYNC Diagnostic	GT 5.4-1
■ Clear Failed CRO Diagnostic	GT 5.5-1
■ Clear Failed TLI Diagnostic	GT 5.6-1
■ Clear Failed UNIT UC Diagnostic	GT 5.7-1
■ Clear Failed FTMI Diagnostic	GT 5.8-1
■ Clear Failed DSPI Diagnostic	GT 5.9-1
■ Clear Failed FC Diagnostic	GT 5.10-1
■ Clear Failed CCI Diagnostic	GT 5.11-1
■ Clear Failed CCNI Diagnostic	GT 5.12-1
■ Clear Failed ETSI Diagnostic	GT 5.13-1
■ Clear Failed TSI Diagnostic	GT 5.14-1
■ Clear Failed NPC (FTU) Diagnostic	GT 5.15-1
■ Clear Failed DSPU NPC Diagnostic	GT 5.16-1

(Continued on next page)

■ Primary Memory (PMEM) Card Failure Recovery Procedure	GT 5.17-1
■ Clear Failed Link Diagnostic	GT 5.18-1
■ Clear Failed CCB Diagnostic	GT 5.19-1
■ Check Type PB/PC NPC Status	GT 5.20-1
■ Check Type PA NPC Status	GT 5.21-1

When to Use Use this procedure to clear a failed MC diagnostic.

Instructions

1. If alarm cutoff is needed, enter **OPR-ACO-ALL**; . If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. Locate the diagnostic trouble number that appears immediately after the STF word in the output message.
3. On CEF frame, if the trouble number is 0C00, check if the CCI packs are installed in both sides of the network.
 - If the packs are not installed, clear the trouble by installing and restoring the CCI packs, using the command **RST-EQPT : :CCI-s**; (s = Side 0 or 1).
 - If the MC (main controller) was removed from service (REPT RMV EQPT ...MC), proceed to Step 7.
4. If trouble number is in the range from 0100 to 0500, enter the diagnostic command for the implicated plug-in per Table 5.1-1 and refer to the trouble procedure for the failed diagnostic.
5. If an REPT RMV EQPT ...MC message did not accompany the DGN MC ...STF message, enter **RMV-EQPT : :MC**; to remove the MC from service.

6. If the trouble number is greater than 0500, replace the pack implicated by the diagnostic trouble number per Table 5.1-1.

Table 5.1-1. Implicated MC Plug-Ins

Trouble Number	Implicated CP	Diagnostic	Reference
0100	MP	DGN-EQPT::MP;	GT 5.2
0200	CI	DGN-EQPT::CI;	GT 5.3
0400	PMEM	DGN-EQPT::PMEM;	GT 5.15
0500	SMEM	DGN-EQPT::SMEM;	GT 5.16
0600, 0700, 0800, or 0900	EMTC/MTC	None	None
0A01, 0A02, 0A03, 0A04, 0A05, or 0C00	EBX/BX2	None	None
0B00, 1000	EBX/BX2 or CCI (active side)	None	None

7. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.

**NOTE:**

The terminal must be set to the default baud rate (1200 baud) to see the information as it scrolls on the screen.

**NOTE:**

The RESET activity in this step initializes the components in the MC and boots the unit controllers and frame memories with data from the PMEM (or from SMEM if the PMEM cannot be used). The reset sequence begins with the startup diagnostics of the CI, MP, and continues with the boot. It may take several minutes for the reset to complete depending on the size of the frame; a BOOT IN PROGRESS message will be output every 20 seconds during the boot routine.

**NOTE:**

If the unit controllers and frame memories are booted with data from the SMEM, the MC will be in MCOND and no database will be present. The SMEM only supplies executables when the PMEM cannot be used for booting.

- If RESET...COMPLD (with no error explanation) message is received, this procedure is completed.
 - If RESET...COMPLD (with error explanation) message is received, go to *Data Base Troubles* to clear conditional reset completion.
8. Enter **DGN-EQPT : :MC;**
- If DGN MC ...STF message is received, contact technical consultant.
-

When to Use Use this procedure to clear a failed MP diagnostic.

Instructions

1. If the alarm cutoff is needed, enter **OPR-ACO-ALL**; .If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. Find the diagnostic trouble number that is located immediately after STF in the message.
3. If the MC (main controller) has not been removed from service (as shown by previous RMV MC COMPLD or RST MC DENY in printout), enter **RMV-EQPT : :MC**;



NOTE:

If the remove command is entered and the MC is already out of service, the entity out of service deny message will be received.

4. Replace the CPU2 (code TM778) located in the MC.



CAUTION:

Replacing the CPU2 will cause a power-up reset. DO NOT interrupt this reset by pressing the RESET button.

**NOTE:**

The terminal must be set to the default baud rate (1200 baud) to see the information as it scrolls on the screen.

**NOTE:**

The RESET activity in this step initializes the components in the MC and boots the unit controllers and frame memories with data from the PMEM (or from SMEM if the PMEM cannot be used). The reset sequence begins with the startup diagnostics of the CI, MP, and continues with the boot. It may take several minutes for the reset to complete depending on the size of the frame; a BOOT IN PROGRESS message will be output every 20 seconds during the boot routine.

**NOTE:**

If the unit controllers and frame memories are booted with data from the SMEM, the MC will be in MCOND and no database will be present. The SMEM only supplies executables when the PMEM cannot be used for booting.

- If STARTUP STF message is received in the reset sequence, follow the same sequence to replace the CPU2.
- If RESET ...COMPLD (with no error explanation) message is received, you have completed this procedure.
- If RESET ...COMPLD (with error explanation) message is received, refer to *Data Base Troubles* to clear conditional reset completion.

5. If trouble persists, contact technical consultant for assistance.
-

When to Use Use this procedure to clear a failed CI diagnostic.

Instructions

1. If the alarm cutoff is not already operated, enter **OPR-ACO-ALL**; . If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. If the MC (Main Controller) has not been removed from service, enter **RMV-EQPT : : MC**; .



NOTE:

If the remove command is entered and the MC is already out of service, the entity out of service deny message will be received.

3. Replace the CI or ICI, whichever is installed, circuit pack with the same circuit pack.
4. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.



NOTE:

The terminal must be set to the default baud rate (9600 baud) to see the information as it scrolls on the screen.

**NOTE:**

The RESET activity in this step initializes the components in the MC and boots the unit controllers and frame memories with data from the PMEM (or from SMEM if the PMEM cannot be used). The reset sequence begins with the startup diagnostics of the CI, MP, and continues with the boot. It may take several minutes for the reset to complete depending on the size of the frame; a BOOT IN PROGRESS message will be output every 20 seconds during the boot routine.

**NOTE:**

If the unit controllers and frame memories are booted with data from the SMEM, the MC will be in MCOND and no database will be present. The SMEM only supplies executables when the PMEM cannot be used for booting.

5. Early in the reset sequence, if CI STARTUP ATP message is received, continue with the Step 6.
 - If CI STARTUP ATP message is not received, check CI/ECI slot and backplane for damage. If no wiring problem is found, contact technical consultant for assistance.
 6. During the sequence, if STARTUP STF is received for MP, refer to GT 5.2.
 - If STARTUP STF is not received, continue with Step 7.
 7. If MC RESET COMPLD (with no error explanation) is received, you have completed this procedure.
 - If MC RESET COMPLD (with error explanation) is received, refer to *Data Base Troubles* to clear reset completed conditionally.
-

When to Use Use this procedure to clear a failed SYNC diagnostic.

Instructions

1. If the alarm cutoff is not already operated, enter **OPR-ACO-ALL**; . If the command is ineffective, press the **ACO** button on the DACS II status panel.



CAUTION:

Never attempt to troubleshoot and replace packs on the in-service side and never take packs from the in-service side for use as replacements for the failed side.

2. If the SYNC has not been removed from service (RMV SYNC COMPLD or RST SYNC DENY in printout), enter **RMV-EQPT : : SYNC-a**;

Where: a = Sync side (0 or 1).

3. If SYNC ESR ...E001 message is found in connection with failed sync, disengage and reinsert the DPLL pack (on the same side as failed sync) for the sync and proceed to Step **17**.
 - If ESR ...E001 message does not occur, continue with Step **4**.

4. If required to prevent circuit noise (see Note), enter commands to remove all unit FCs **on the same side** as follows: **RMV-EQPT : :UNIT- [q]q : :FC-sb ;** for all units (q) and modules (1through 4) in each unit. The FC number (sb) consists of the side and the unit module.

**NOTE:**

If a series G2 backplane (printed wiring) is used for the FTU or if CN 00118.1mv has been implemented on the G1 backplane (hard wiring), it is not necessary to remove the FCs before replacing sync packs. The CN (change notice) involved adding a wiring termination board to the FTU backplane.

**CAUTION:**

Be sure to unplug packs from the inactive side because unplugging FC packs on the active side of the network will cause loss of service in the unit.

5. Unplug the same FCs that were previously removed from service.
6. Replace DPLL pack (TM590 code) for the sync side named in failed sync message. The TLIs are not implicated by this failure; separate messages occur for the TLI and CRO.
7. Enter **DGN-EQPT : :SYNC-a ;**.
 - If DGN ...STF 0100 message is received, continue with Step 8.
 - If DGN ...STF 0200 message is received, proceed to Step 14.
8. If failed diagnostic is accompanied with the ESR SYNC COND E004 message, replace SPU pack for failed sync side and reenter sync diagnostic command.
 - If ESR ...E004 does not occur, proceed to Step 14.
9. If trouble persists, enter **RMV-EQPT : :MC ;**.
10. Replace the CPU2 (TM778) located in the main controller.
11. On the status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
12. Reenter **DGN-EQPT : :SYNC-a ;** for subject sync side.
13. If trouble persists, enter **RMV-EQPT : :MC ;**. Unplug the same CPU2 pack and check plug-in position for bent pins or damaged backplane. The connections between the CPU2 and the sync are suspect. Reinstall CPU2 after inspection and perform frame reset.
 - If trouble is found, proceed to Step 17.

- If trouble is not found, check backplane for damage. If no wiring trouble is found, contact technical consultant for assistance.
14. Replace the TB pack and wait at least 30 minutes for the TB oven to warm up. The TB can be restored; but, for stratum 2 operation, it may take up to 2 hours to reach rated precision.
 15. Reenter **DGN-EQPT : :SYNC-a**; for subject side.
 16. If trouble persists, unplug the DPLL and TB and check positions for bent pins or damaged backplane. The connections between the two positions are suspect. Reinstall packs after inspection.
 - If trouble is cleared, continue with Step 17.
 - If trouble is not cleared, check backplane for damage. If no wiring trouble is found, contact technical consultant for assistance.
 17. Enter **RST-EQPT : :SYNC-a**; to restore the sync.
 18. Enter **ENT-EQPT : :SYNC-a : :FPLL**; to initiate sync fast start.
 19. After approximately 5 minutes, enter **RTRV-STATE-EQPT : :SYNC**; to verify that the MODE for the subject side is NORMAL. Table 5.4-1 lists the outputs for each field of the query.

Table 5.4-1. SYNC Status Outputs

Message Field	Outputs and Meanings
CFR	MASTER or SLAVED sync configuration.
STRATUM	STR2, STR3, CEPT TOLL, or CEPT LOCAL.
MODE	HOLDOVER, FAST, or NORMAL for each DPLL.
SOURCE	Source for sync DPLL (HOLDOVER, TLI, or CRO; other side will be MATE).
IN SERVICE-DPLL	DPLL side 0 side 1, TB side 0 side 1, SOURCE side 0 side 1; presence of a 0 for side means out-of-service and a 1 means in-service.
ACTIVE-LINK	Gives TLI No. and its SSP (0, 1) which is active on each side (0 and 1).
PLL TIMING ERROR	Presence of 0 for side means no error and presence of 1 for side means error.

20. Reinstall FC packs in their slots and enter the command(s) to restore each one as follows: **RST-EQPT : :UNIT-[q]q : :FC-sb**;
Where: sb = FC number which consists of side (s) and unit module (b).
21. Enter **RTRV-STATE-EQPT : : :ALL**; to find any packs that are failed or out-of-service and perform corrective action.

**NOTE:**

The conditions are indicated by the presence of a "1" in the out-of-service, failed, and pested columns for each pack. Unequipped NPCs are indicated by dashes.

22. See Note. If any CPs are equipped but out-of-service, enter the RST (restore) command per Figure 5.4-1 for the pack.
 - If command denial occurs, find the reason for denial in the output message.

**NOTE:**

When a CP fails in the sync, ECCN/CCN or DSPU, service is switched and all the CPs on the failed side/group are removed from service and pested. To correct the problem, the failure must be cleared and the side (or all CPs) can be restored. If both sides/groups are failed, trouble must be cleared on the out-of-service side/group first; removal of the other side will be denied.

23. If any CPs are failed, enter the DGN (diagnose) command per Figure 5.4-1 for the pack.
 - If DGN ...STF message is received, refer to appropriate procedure in this chapter to clear the failed diagnostic.
 - If diagnostic passes (ATP or CATP), enter RST command.
24. To check for out-of-service, failed, and pested CPs, enter **RTRV - STATE - EQPT : : [UNIT - [q]q] : : ALL ;**.
25. If any CPs are still pested, enter the commands to first remove and then restore the CPs per Figure 5.4-1.

If command denial occurs, find the reason for denial in the output message.

verb:[xy]:<CP identification>:[ww]{;} or {:<additional info.>};

{RMV-EQPT::	SYNC-a;	a	=	0 or 1
/RST-EQPT::	SYNC-a:[ww]:TLI-n[:SSP-b];	n	=	1-4; b = sync port (0 or 1)
/DISC-EQPT::	SYNC:[ww]:TB			
/DGN-EQPT::	CCI-s;	s	=	side 0 or 1
	CCNI-s;	s	=	side 0 or 1

ETSI-sqq;	qq	=	unit 01-16
TSI-sft;	f	=	unit (receiving from) (1-6)
CCB-sf;	t	=	unit (transmitting to) (1-6)
ETSI,S,ECCN-s;			
UNIT-[q]q:[ww]:UC;	[q]q	=	unit 01-16
UNIT-[q]q:[ww]:{FTMI-d DSPI};	d	=	module interface 1-4
UNIT-[q]q:[ww]:FC-sd;	sd	=	FC side (0,1) and FC No. (1-4)
NPC-<npc No.>:[ww]:[SIDE-s];	<npc No.>	=	NPC No.
	s	=	SIDE for DSPU
LINK-j;	j	=	link 1-6

Figure 5.4-1. Maintenance Command Construction

verb::<CP identification>[,option]!			
{RMV:: SYNC a!	a	=	0 or 1
/RST:: SYNC a,TLI n[,SSP b]!	n	=	1-4; b = sync port (0 or 1)
/DGRTH:: CCI s!	s	=	side 0 or 1
/DGN::} CCNI s!	s	=	side 0 or 1
ETSI sqq!	qq	=	unit 1-16
TSI sft!	f	=	unit (receiving from) (1-6)
CCB sf!	t	=	unit (transmitting to) (1-6)
ETSI,S,ECCN s,ALL!			For all ETISs on the side
TSIS,CCN s,ALL!			For all TSIs on the side
UNIT [q]q,UC!	[q]q	=	unit (1-16)
UNIT [q]q,{FTMI d DSPI}!	d	=	module interface for units 1-4
UNIT [q]q,FC sd!	sd	=	FC side (0,1) and FC No. (1-4)
NPC <npc No.>[,SIDE s]!	<npc No.>	=	NPC number
	s	=	SIDE for DSPU
LINK j!	j	=	link 1-6

Clear Failed CRO Diagnostic

5.5

When to Use Use this procedure to clear a failed CRO diagnostic.

Instructions

1. If the alarm cutoff is not already operated, enter **OPR-ACO-ALL**; . If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. If TLI 3 has not been removed from service (RMV COMPLD in printout), enter **RMV-EQPT : : TLI-3 : : CRO**; .
3. Replace the CRO (clock reference oscillator) (that is, the additional TB pack on lower shelf) with the same code as the original one.
4. Enter **DGN-EQPT : : SYNC : : TLI-3 : CRO**; .
 - If DGN ...STF message is received, continue with Step 5.
 - If DGN ...STF message is not received, wait 30 minutes for TB oven to reach temperature and then enter **RST-EQPT : : TLI-3 : : CRO**; to restore the CRO and to complete this procedure.
5. Locate diagnostic trouble number which appears immediately after STF in the diagnostic message.
 - If trouble number is 0600, continue with Step 6.

- If the trouble number is not 0600, check CRO slot and backplane for damage. If no wiring trouble is found, contact technical consultant for assistance.
6. Verify that the same code of TB is used for all the sync TBs and determine if the sync configuration was changed subsequent to installation. The CRO (TLI 3 CRO) must be grown with the same TYPE designation as the other TBs in the sync.
- If the CRO was equipped incorrectly, enter create command as follows:

RMV-EQPT::TLI-3::CRO; to remove additional TB pack from service.
DISC-EQPT::SYNC::TLI-3; to degrow the additional TB.
Enter command to regrow same TB with same type field as the TBs on the sides, **CRTE-EQPT::SYNC::TBpqr:TLI-3;**
Wait 30 minutes for TB oven to reach temperature and then enter **RST-EQPT::TLI-3::CRO;**

■ If the CRO was equipped correctly, contact technical consultant for assistance.
-

When to Use Use this procedure to clear a failed TLI diagnostic.

Instructions

1. If the alarm cutoff is not already operated, enter **OPR-ACO-ALL**; . If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. Locate the trouble number which appears immediately after STF in the failed diagnostic message.
 - If trouble number is 0400, continue with Step 3.
 - If trouble number is not 0400, proceed to Step 4.
3. Check for ESR,ERR SYNC ...COND E601 message which indicates the T1 timing link connecting to the failed TLI has failed or has errors.
 - If you could determine there is trouble on the associated facility timing link, proceed to Step 8.
 - If not, continue with Step 4.
4. If the failed TLI has not been removed from service (as shown by previous RMV TLI COMPLD or RST TLI DENY in printout), enter **RMV-EQPT::SYNC-a::TLI-m[:SSP-b]**;

Where:

- a = Subject sync side (0 or 1)
- m = TLI number (1 through 4)
- b = SSP number (0 or 1); required for all TLI types except type TD.



NOTE:

If the remove command is entered and the TLI is already out of service, the entity out of service denial message will be received.

5. Replace the subject TLI pack with the same code as the original.
6. Enter **DGN-EQPT::SYNC-a::TLI-m[:SSP-b];**.
 - If DGN ...STF message is received, continue with Step 7.
 - If DGN ...STF message is not received, enter **RST-EQPT::SYNC-a::TLI-m[:SSP-b];** to restore the sync and to complete this procedure.
7. If the trouble number in the failed diagnostic is 0400, continue with Step 8.
 - If the trouble number in the failed diagnostic is not 0400, check TLI slot and backplane for damage. If no wiring problem is found, contact technical consultant.
8. Trouble is on facility timing link. Isolate trouble on timing link or contact network timing coordinator about using another facility. The TLI must be restored after the timing link is operating; the command is **RST-EQPT::SYNC-a::TLI-m[:SSP-b];**

Where:

- a = Sync side
- m = Subject TLI number.
- b = SSP number (0 or 1); required for all TLI types except type TD.

Clear Failed UNIT UC Diagnostic

5.7

When to Use

Use this procedure to clear a failed UNIT UC diagnostic.

Instructions

1. If the alarm cutoff is not already operated, enter **OPR-ACO-ALL**; . If the command is ineffective, press the **ACO** button on the DACS II status panel.
- 2.
3. If the UC (unit controller) has not been removed from service (as shown by previous RMV UC COMPLD or RST UC DENY in printout), enter **RMV-EQPT::UNIT-[q]q::UC**;

**NOTE:**

If the remove command is entered and the unit UC is already out of service, the entity out of service denial message will be received.

4. Find the diagnostic trouble number that appears immediately after STF in the diagnostic message.
 - If trouble number 0A00 or 0B00 is received, then replace the UBX (UM28 code) and proceed to Step 5.
 - If other trouble number is received, continue with Step 4.

5. Replace the UC for the unit.
 6. Enter **RST-EQPT: :UNIT-[q]q: :UC;**
Where: [q]q = Unit number (1 through 16).
 - If DGN ...STF message is received, check UC slot and backplane for damage. The diagnostic includes continuity tests:
 - STF 0700 indicates LAN wiring (two twisted pairs)
 - STF 0900 indicates CPU error wiring (one wire with ground)
 - STF 0600 indicates CPU reset wiring (one wire with ground)
 - If no wiring problem is found, contact technical consultant.
 - If RST ...DNY is received, find the reason for denial in the output message.
-

When to Use Use this procedure to clear a failed FTMI diagnostic.

Instructions

1. If the alarm cutoff is not already operated, enter **OPR-ACO-ALL**; . If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. Check if the UBX pack (UM28 code) associated with the unit is installed. If it is not, install the pack and enter respective restore commands.
3. Enter **DGN-EQPT::UNIT-[q]q::FTMI-d**;

Where:

[q]q = Unit number (1 through 16)
d = FTMI number (1 through 4).

- If DGN ...STF message is received, continue with Step 4.
 - If DGN ...STF message is not received, proceed to Step 12.
4. If the FTMI (facility terminating module interface) has not been removed from service (RMV FTMI COMPLD or RST FTMI DENY in printout), enter **RMV-EQPT::UNIT-[q]q::FTMI-d**;
 5. Replace the FTMI (TG81 code) for the unit. This pack is implicated by any of the DGN FTMI ...STF trouble numbers.

6. Enter **DGN-EQPT : :UNIT - [q]q : FTMI-d ;** to diagnose the FTMI.
 - If DGN ...STF message is received, continue with Step 7.
 - If DGN ...STF message is not received, proceed to Step 12.
 7. Locate the data bytes on the line below the STF number in the failed diagnostic message. These are referred to as data 5 through data 0, going from left to right.
 - If data 5 byte is equal to FF, continue with Step 8.
 - If not, proceed to Step 9.
 8. The FTMI is not functioning, possibly because it is not receiving timing which is delivered through the associated FC. Verify that these packs are in-service and check printout for string of failure messages; also check the backplane for obvious damage to pins at the involved plug-in positions.
 - If the trouble is found and corrected, proceed to Step 12.
 - If not, contact technical consultant for assistance.
 9. Enter **RMV-EQPT : :UNIT - [q]q : UC ;**
Where: [q]q = Unit number (1 through 16).
 10. Replace UBX (UM28 code).
 11. Enter **RST-EQPT : :UNIT - [q]q : UC ;**.
 12. Enter **RST-EQPT : :UNIT - [q]q : FTMI-d ;**.
 - If DGN ...STF message is received, contact technical consultant for assistance.
 - If not, this procedure is completed.
-

Clear Failed DSPI Diagnostic

5.9

When to Use

Use this procedure to clear a failed DSPI diagnostic.

Instructions

1. If the alarm cutoff is not already operated, enter **OPR-ACO-ALL;**. If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. Notice which DSPU is named in the failed diagnostic message.
3. Enter **RTRV-STATE-COM:::ALL;** to determine if the ETSI on one side for the unit is in-service and not failed. Ones in the 3-digit field for each ETSI indicate out-of-service, failed, or pested conditions.
 - If the ETSIs on both sides for the unit are failed, refer to Section 5.13 to clear the CCI failure which is causing the DSPI failure.
4. If the DSPI has not been removed from service (RMV DSPI COMPLD or RST DSPI DENY in printout), enter **RMV-EQPT::UNIT-[q]q::DSPI;**.

Where: [q]q = Unit number (1 through 16).
5. Replace the DSPI pack (UM29 code) for that DSPU. There is only one DSPI in the unit and it is the interface between the unit UC and the other DSP packs; it does not carry service channels.
6. Enter **RST-EQPT::UNIT-[q]q::DSPI;**.

- If DGN ...STF message is received, check connector pins at DSPI slot and check backplane for damage. If no wiring trouble is found, contact technical consultant.
 - If RST ...COMPLD message is received, this procedure is completed.
 - If RST ...DENY message is received, find the reason for denial in the output message and perform corrective action to obtain command completion.
-

When to Use Use this procedure to clear a failed FC diagnostic.

Instructions



NOTE:

The FC diagnostic runs continuity tests between the FC and the ECCN. These tests actually involve accessing time slots on an NPC in the unit and checking the connection through the cables and the ECCN. Similarly, when the ETSI for the unit was diagnosed, the interconnection between it and the other ETSIs was tested.

1. If the alarm cutoff is not already operated, enter **OPR-ACO-ALL**; . If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. Check if the UBX (UM28 code) and the network CCI/CCNI and ETSI/TSI packs associated with the unit are installed and/or restored. If they are not, install the pack(s) and enter the respective restore commands.
3. If all the FCs on the inactive side have failed, check for SYNC ...ERR,ESR messages (see Note). To check for change from cross-couple timing, enter **RTRV-REG-EQPT: :SYNC-a: :STR**; (a = Side 0 or 1), and see Figure 5.10-1.

**NOTE:**

A sync error can cause the mate sync to lose cross-couple timing which will cause loss of timing to the FCs. If there are no cross-connections on the frame, this condition will not be reported.

4. Enter **DGN-EQPT : :UNIT - [q]q : :FC - sb ;**

Where:

[q]q = Unit number (01 through 16)
sb = FC number consisting of side (0 or 1)
and FC in module (1 through 4).

- If DGN ...STF message is received, continue with Step 5.
 - If DGN ...STF message is not received, proceed to Step 16.
5. If the FC has not been removed (RMV FC COMPLD or RST FC DENY), enter **RMV-EQPT : :UNIT - [q]q : :FC - sb ;**.
6. Replace subject FC pack (TG79 code). The FC itself is always implicated by any of the DGN FC ...STF trouble numbers.
7. Enter **DGN-EQPT : :UNIT - [q]q : :FC - sb ;** for the same unit and FC numbers.
- If DGN ...STF message is received, continue with Step 8.
 - If DGN ...STF message is not received, proceed to Step 16.
 - If message has one of the following trouble numbers: STF 0F03 through 0F06 and optional second line giving UPN and XPN numbers, proceed to Step 10.

/*STR:b01,b02,b03,b04,b05,b06*/

"STR:byte1,byte2,byte3,byte4,byte5,byte6"

BYTE 1 (BITS abcdefgh)

a = spare	e = TLI 1 in service
b = sync hardware failed	f = TLI 2 in service
c = mate failed or OOS	g = TLI 3 in service
d = TB failed or OOS	h = TLI 4 in service

BYTE 3 (BITS abcdefgh)

a = sync reset, needs config.	e = crosscouple trouble
b = DPLL hardware error	f = CRO timing trouble
c = TB error	g = spare
d = PLL symmetry error	h = spare

BYTE 5 BIT POSITIONS: ab cde fgh			
SOURCE (BITS ab)		ACTIVE PORT (BITS cde)	
		(if BITS ab = 01)	
00	= holdover	000	= TLI 1, SSP 0
01	= timing link	001	= TLI 1, SSP 1
10	= cross-couple	010	= TLI 2, SSP 0
11	= CRO	011	= TLI 2, SSP 1
		100	= TLI 3, SSP 0
		101	= TLI 3, SSP 1
		110	= TLI 4, SSP 0
		111	= TLI 4, SSP 1
BITS fgh (unused)			

BYTE 9 (BITS abcdefgh)			
a	= loss of energy	d	= TB oven still cold
b	= TB command error	e	= spare
c	= TB oscillator drift (master mode)	fgh	= 000 for stratum 3, 001 for 2-Mb/s local 010 for 2-Mb/s toll, 011 for stratum 2

Figure 5.10-1. Sync Status Register

8. Convert the first data byte after the STF number in the diagnostic message to binary. The right HEX-digit gives bits 4,3,2,1. If bit 2 equals 1, a network ETSI or CCB could be causing the diagnostic failure; check the printout for ETSI or SYNC ...ERR,ESR messages.
9. If you found an ETSI or CCB related failure, continue with Step 10.
 - If you did not find an ETSI or CCB related failure, proceed to Step 13.
10. If the ETSI or CCB for the same unit and side as the failed FC is not out-of-service, enter appropriate command as follows:

RMV-EQPT : :ETSI-sqq;.
RMV-EQPT : :CCB-sf;.

Where: s = Side
 qq = Unit number
 f = CCB number (1 through 6).
11. Replace that ETSI or CCB and enter appropriate command as follows:

RST-EQPT : :ETSI-sqq;.
RST-EQPT : :CCB-sf;.
12. Enter **DGN-EQPT : :UNIT-[q]q : :FC-sb;** for the subject unit and FC.
 - If DGN ...STF message is received, continue with Step 13.

- If DGN ...STF message is not received, proceed to Step **16**.
 - If message has one of the following trouble numbers: STF 0F03 through 0F06 and optional second line giving UPN and XPN numbers, proceed to Step **17**.
13. Enter **RMV-EQPT: :UNIT- [q]q: :UC; .**
 14. Replace the UBX (UM28 code) for the subject unit.
 15. Enter **RST-EQPT: :UNIT- [q]q: :UC;** for the subject unit.
 16. Enter **RST-EQPT: :UNIT- [q]q: :UC;** for the subject unit and FC.
 - If DGN ...STF message is received, obscure problem; contact technical consultant.
 - If DGN ...STF message is not received, this procedure is completed.
 17. From Table 5.10-1, identify the faulty cable connecting to the subject FC pack by the UPN (unit plug number) and XPN (ECCN plug number) named in the message. Notice that there are different listings for the flexible interface and original interface bays and that the ECCN plug number includes the unit number.
 18. Replace (or have repaired) the cable identified above. The unit and ECCN plug numbers are stamped alongside the connectors on the ECCN panel; see Figure 5.10-2.
 19. Enter **RST-EQPT: :UNIT- [q]q: :UC; !** for the subject unit and FC.

**NOTE:**

The diagnostic reports one cable problem at a time; so if different UPN and XPN numbers occur, clear that trouble before contacting the technical consultant.

- If DGN ...STF message is received, obscure problem; contact technical consultant.

Table 5.10-1. Cable Identification

Unit Plug (Flex Bay)	Unit Plug (Orig. Bay)	ECCN Plug	Direction	Involved FC
P1	P2	P<unit>A	Receive	FC 01
P2	P1	P<unit>E	Transmit	FC 01
P3	P7	P<unit>B	Receive	FC 02
P4	P6	P<unit>F	Transmit	FC 02
P5	P12	P<unit>C	Receive	FC 03
P6	P11	P<unit>G	Transmit	FC 03
P7	P17	P<unit>D	Receive	FC 04
P8	P16	P<unit>H	Transmit	FC 04
P10	P5	P<unit>A	Receive	FC 11
P11	P4	P<unit>E	Transmit	FC 11
P12	P10	P<unit>B	Receive	FC 12
P13	P9	P<unit>F	Transmit	FC 12
P14	P15	P<unit>C	Receive	FC 13
P15	P14	P<unit>G	Transmit	FC 13
P16	P20	P<unit>D	Receive	FC 14
P17	P19	P<unit>H	Transmit	FC 14

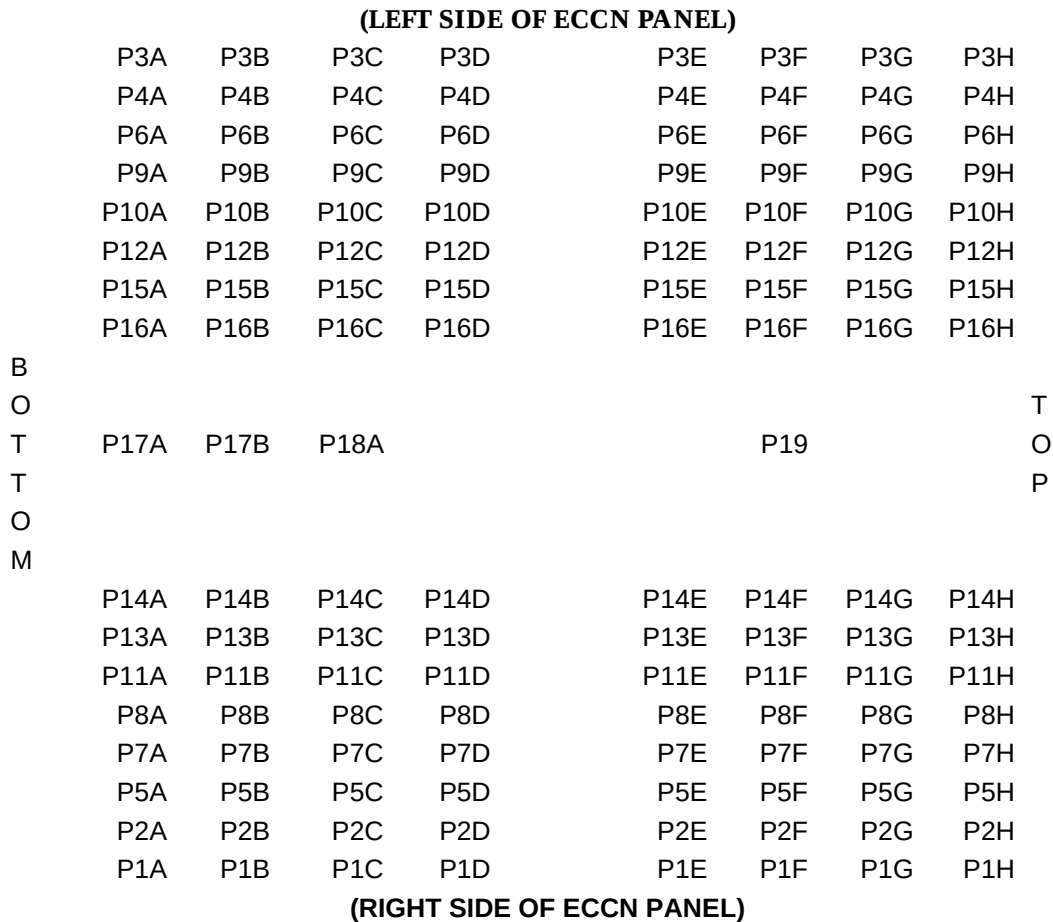
B
O
T
T
O
MT
O
P

Figure 5.10-2. Cable Connectors on ECCN Panel

When to Use Use this procedure to clear a failed CCI diagnostic.

Instructions

This procedure deals with a failed CCI (clock control interface) diagnostic. If the trouble is not the CCI pack itself, it can be caused by circuit packs associated with ECCN, MC, or SYNC depending on the diagnostic trouble code. For an associated ETSI (trouble code 0800), the raw data bytes in the DGN CCI STF message are used to identify the particular ETSI.

1. If the alarm cutoff is not already operated, enter **OPR-ACO-ALL**; . If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. If the CCI has not been removed from service (RMV CCI COMPLD or RST CCI DENY in printout), enter **RMV-EQPT : : CCI - s**; for the side (0 or 1) that failed.
3. Locate the trouble number which appears immediately after STF in the diagnostic message.
4. If trouble number 0080 appears in the message, then check CCI slot and backplane for damage. For associated sync trouble, the suspect wiring is in the two small 6-wire cables going between the top of P19 and P37 for ECCN1 and the bottom of P19 and P36 for ECCN0. If no wiring problem is found, contact technical consultant.

- If trouble number 0080 does not appear, proceed to Step 7.
- 5. Unseat the CCI pack for the side of the network named in the message and reinsert the pack to reset it.
- 6. Enter **DGN-EQPT: :CCI-S**; for the same CCI pack.
 - If DGN ...STF message is received, continue with Step 7.
 - If DGN ...STF message is not received, proceed to Step 27.
- 7. Replace CCI pack (BBS1 code) named in the diagnostic message.
- 8. Enter **DGN-EQPT: :CCI-S**; for same pack.
 - If DGN ...STF message is received, continue with Step 9.
 - If DGN ...STF message is not received, proceed to Step 27.
- 9. Which trouble number appears in the diagnostic message?
 - If **0000**, proceed to Step 12.
 - If **0100**, continue with Step 10.
 - If **0001** or **0010**, proceed to Step 12.
 - If **0004**, **0040**, or **0200**, check CCI slot and backplane for damage. For associated sync trouble, the suspect wiring is in the two small 6-wire cables going between P20, P36, and P37. If no wiring problem is found, contact technical consultant.
 - If **0020**, proceed to Step 12.
 - If **0002** or **0008**, proceed to Step 18.
 - If **0800**, proceed to Step 20.
 - If **8000**, proceed to Step 10.
- 10. Verify that the BT on each side of the ECCN shelf is securely installed.

**NOTE:**

The bus terminators contain only passive components and are not likely to fail. However, if the same diagnostic trouble number persists after all suspect packs have been replaced, you may want to try replacing the BTs, one at a time.

- 11. If DGN ...STF message is received after BTs are reseated (or replaced) and diagnostic is reentered, continue with Step 12.
 - If DGN ...STF message is not received, proceed to Step 27.
- Continue for Trouble No. 0000, 0001, 0010, 0020, 0100, or 8000**
- 12. Enter **RMV-EQPT: :MC**;

13. Disconnect and reseal appropriate pack in the MC for trouble number as follows:
 - For 0020, replace the EMTC (UM75 code).
 - For others, replace the EBX (UM71 code).
14. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.

**NOTE:**

It is important to remember that after this RESET is complete, the frame will be in simplex mode. Resetting the frame does not automatically restore the side containing the new CCI circuit pack.

15. Enter **DGN-EQPT: :CCI-s;**.
 - If DGN ...STF message is received, continue with Step 16.
 - If DGN ...STF message is not received, proceed to Step 27.
16. Replace the plug-in that was previously reseated.
17. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button and proceed to Step 26.

Continue for Trouble No. 0002 or 0008

18. Enter **RMV-EQPT: :SYNC-s;** for the sync on the same side as the failed CCI.
19. Replace the DPLL (TM590 code) in the same side of the sync and enter **RST-EQPT: :SYNC-s;** to restore the same sync.
 - If DGN ...STF message is received, go to Section 5.6.
 - If DGN ...STF message is not received, proceed to Step 27.

Continue for Trouble No. 0800

20. Notice the data bytes starting on the second line of the failed CCI diagnostic message. These bytes are referred to as data 21 through data 00, starting on the second line and running to the end of the third line.
21. If data 19 (third from the left in the top row of data) equals 07, continue with Step 22.
 - If data 19 (third from the left in the top row of data) does not equal 07, then check CCI slot and backplane for damage. For associated sync trouble, the suspect wiring is in the two small 6-wire cables going between P20, P36, and P37. If no wiring problem is found, contact technical consultant.
22. Convert data 21 and 20 (first two data bytes in the top row of data) from hexadecimal to binary as follows:

- Work with each digit of a data byte individually.
 - Convert each hexadecimal digit to the 4-place binary equivalent. Hex numbers run from 1 through 9 and a through f (for 10 through 16); for example, hex 5 = 0101 binary.
23. Combine the patterns of the binary numbers for data 21 and 20 and locate the bit position where the value is a 1. For example, if data 21 equals 00000000 binary and data 20 equals 10000000 binary, the combined pattern would be 0000000010000000, and the value 1 is located in position 8 (counting from right to left).
24. Enter **RMV-EQPT : :ETSI-sqq;** for the ETSI of the unit number that matches the bit position with the value 1. (In the above example, that would be unit 08.)

Where:

s = Side 0 or 1
qq = Unit number (01 through 16).

25. Replace the same ETSI (BBS2 code) and enter **RST-EQPT : :ETSI-sqq;** for that pack.
26. Enter **DGN-EQPT : :CCI-s;**
- If DGN ...STF message is received, check CCI slot and backplane for damage. For associated sync trouble, the suspect wiring is in the two small 6-wire cables going between P20, P36, and P37. If no wiring problem is found, contact technical consultant.
 - If DGN ...STF message is not received, continue with Step 27.
27. Enter **RST-EQPT : :CCI-s;** to restore CCI to service.
28. If DGN ...STF message is received, check CCI slot and backplane for damage. For associated sync trouble, the suspect wiring is in the two small 6-wire cables going between P20, P36, and P37. If no wiring problem is found, contact technical consultant.
29. If DGN ...STF message is not received, enter **RTRV-STATE-EQPT : : :ALL;** to find any packs that are failed or out-of-service and perform corrective action.



NOTE:

The conditions are indicated by the presence of a "1" in the out-of-service, failed, and pested columns for each pack. Unequipped NPCs are indicated by dashes.

When to Use Use this procedure to clear a failed CCNI diagnostic.

Instructions

This procedure deals with a failed CCNI (cross-connect network interface) diagnostic. If the trouble is not caused by a failed CCNI or BX in the MC, it may be caused by an error from a unit FTMI, a network CCB, or a TSI connected to the CCNI. When the failed diagnostic is caused by an error from an associated pack, that pack is identified by the raw data fields of the DGN CCNI STF message.

1. If the alarm cutoff is not already operated, enter **OPR-ACO-ALL**; . If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. If the CCNI has not been removed from service (RMV CCNI COMPLD or RST CCNI DENY in printout), enter **RMV-EQPT : :CCNI-s**; for the side (0 or 1) that failed.
3. Replace CCNI pack (UM30 code) for the side of the CCN network named in the diagnostic message.
4. Enter **DGN-EQPT : :CCNI-s** ;
 - If DGN ...STF message is received, continue with Step **5**.
 - If DGN ...STF message is not received, proceed to Step **12**.

5. Locate trouble number which appears immediately after STF in the diagnostic message.
 - If the trouble number does NOT start with 074 or 07B, proceed to Step 9.
6. Enter . **RMV-EQPT : MC ;** .
7. Replace BX pack in the MC.
8. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button, and proceed to Step 12.
9. Locate the data bytes to the right of the STF number in the failed diagnostic message. These bytes are referred to as data 5 through data 0, going from left to right.
 - If any of the these bytes (data 5 through data 1) have nonzero characters, then continue with Step 10.
 - If not, check CCNI slot and backplane for damage. If no wiring problem is found, contact technical consultant.
10. From Table 5.12-1 determine the pack which is sending an error to the CCNI. The value of the character (8,4,2,1) and its position in the 4-place data byte indicates the associated pack. For example, if data byte d2 = 0040 (row "cccc" in table), the 4 in the column implicates TSI s54. The side (s) is the same as the subject CCNI.
11. Enter command to remove the same pack from service and replace the pack. For FTMI, enter **RST-EQPT : UNIT-q : FTMI-b ;** to restore it to service.

Where: q = Unit number

b = FTMI number (1 through 4) in the unit.

12. Enter **RST-EQPT : CCNI-s ;** .
 - If DGN ...STF message is received in restore sequence, check CCNI slot and backplane for damage. If no wiring problem is found, contact technical consultant.
13. If an associated TSI or CCB was removed from service, enter command to restore it using the appropriate command, **ST-EQPT : TSI-sft ;** or **RST-EQPT : CCB-sf ;** .

Where:

sf = CCB number consisting of side (0 or 1) and unit number.

sft = TSI number consisting of side (0 or 1), from-side unit number, and to-side number.

14. Enter **RTRV-STATE-EQPT : : [UNIT-q] : : ALL**; to find any packs that are failed or out-of-service and perform corrective action.

**NOTE:**

The conditions are indicated by the presence of a "1" in the out-of-service, failed, and pested columns for each pack. Unequipped NPCs are indicated by dashes.

SINGLE CHARACTER	DATA 1 (ESR1, TSI FROM, TO UNIT ID)			
VALUE	b	b	b	b
8	43	63	22	41
4	33	52	12	31
2	23	42	61	21
1	13	32	51	11
	DATA 2 (ESR2, TSI FROM, TO UNIT ID)			
	c	c	c	c
8	26	45	64	24
4	16	35	54	14
2	65	25	44	63
1	55	15	34	53
	DATA 3 (ESR3, FTM NO. OR TSI FROM, TO UNIT ID)			
	d	d	d	d
8	Unit 3,FTMI 4	Unit 2,FTMI 4	Unit 1,FTMI 4	66
4	Unit 3,FTMI 3	Unit 2,FTMI 3	Unit 1,FTMI 3	56
2	Unit 3,FTMI 2	Unit 2,FTMI 2	Unit 1,FTMI 2	46
1	Unit 3,FTMI 1	Unit 2,FTMI 1	Unit 1,FTMI 1	36
	DATA 4 (ESR4, FTM NO. OR CCB NO.)			
	e	e	e	e
8	CCB4	Unit 6,DSPI	Unit 5,DSPI	Unit 4,FTMI 4
4	CCB3	Unit 6,DSPI	Unit 5,DSPI	Unit 4,FTMI 3
2	CCB2	Unit 6,DSPI	Unit 5,DSPI	Unit 4,FTMI 2
1	CCB1	Unit 6,DSPI	Unit 5,DSPI	Unit 4,FTMI 1
	DATA 5 (ESR5, CCB NO.)			
	f	f	f	f
8	-	-	-	-
4	-	-	-	-
2	-	-	-	CCB 6
1	-	-	-	CCB 5

Clear Failed ETSI Diagnostic

5.13

When to Use

Use this procedure to clear a failed ETSI diagnostic.

Instructions

This procedure deals with the failed ETSI (expanded time slot interchange) diagnostic. If the trouble is not the ETSI pack itself, it can be caused by other ECCN packs or an associated MC or Sync pack depending on the diagnostic trouble number. The data bytes in the diagnostic message in some cases identify another suspect ETSI pack; otherwise, the other ETSI is determined by trial and error. *Multiple ETSI failures are usually caused by a failed CCI pack; autonomous error recovery operations may have already removed the CCI to allow replacement.*

1. If the alarm cutoff is not already operated, enter **OPR-ACO-ALL**; . If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. If the subject ETSI has not been removed from service (RMV ETSI COMPLD or RST ETSI DENY in printout), enter **RMV-EQPT: :ETSI-sqq**;

Where: sqq = Failed ETSI number consisting of the side (s) and unit number (qq) that it serves.

- To avoid the possibility of alarms on ETSI ports, enter command to remove service from side with failed ETSI, **RMV-EQPT::CCI-s_i** (s = side).

4. Replace the subject ETSI pack (BBS2 code) named in the failed diagnostic message. If a second ETSI pack is named in the message, that ETSI pack will be addressed (as an additional suspect pack) in subsequent steps.
5. Enter command to restore side to service, **RST-EQPT : CCI-s**; (s = side).
6. Enter **DGN-EQPT : ETSI-sqq**;
 - If DGN ...STF message is received, continue with Step 7.
 - If DGN ...STF message is not received, enter **RST-EQPT : ETSI-sqq;RST : ETSI sqq!** for the subject ETSI pack. This procedure is completed.
7. Locate the trouble number which appears immediately after STF in the diagnostic message. Also notice the data bytes starting on the second line of the failed ETSI diagnostic message. These bytes are referred to as data 15 through data 00, starting on the second line and running to the end of the third line.
8. Which trouble number (or keyword) appears in the message?
 - If **additional ETSI named in message**, proceed to Step 22.
 - If **0080**, continue with Step 9.
 - If **0100**, continue with Step 9.
 - If **0008**, proceed to Step 14.
 - If **0020, 0040, 0800, or 1000**, proceed to Step 27.
 - If **8000**, proceed to Step 15.
 - If **other number**, proceed to Step 15.
9. Locate data 1; the data bytes occur in left-to-right order from d15 to data 00. Convert the 2 lower digits (right half) to binary as follows:
 - Work with each digit of the data byte individually.
 - Convert each hexadecimal digit to the 4-place binary number equivalent. Hex numbers run 1 through 9 and a through f (for 10 through 16); for example, hex 5 = 0101 binary.
10. The resulting 8-bit binary number represents the connecting ports from the FC (in FTU), FMT (in DS3U or HDS3U), or NPC (in DSPU), as applicable; a 1 in the port position indicates a trouble. Identify the suspect pack as follows:
 - For FCs, each pair of bits (in the 8-bit number) represents the FC for the module as follows: pair 8-7 is module 4, pair 6-5 is module 3, pair 4-3 is module 2, and pair 2-1 is module 1.

11. If any ports are alarmed, enter the RMV-EQPT command for the suspect pack per Figure 5.13-1 and reseal the same pack. Enter commands to restore the subject ETSI (for timing to unit) and the suspect pack.

If DSPU NPC is to be replaced, remove the side from service before doing replacement (**RMV-EQPT : :CCI-s;**). Restore side to service after replacement (**RST-EQPT : :CCI-s;**).

verb:[xy]:<CP identification>:[ww]{}; or {:<additional info.>;}

{RMV-EQPT::	SYNC-a;	a	=	0 or 1
/RST-EQPT::	SYNC-a:[ww]:TLI-n[:SSP-b];	n	=	1-4; b = sync port (0 or 1)
/DISC-EQPT::	SYNC:[ww]:TB			
/DGN-EQPT::	CCI-s;	s	=	side 0 or 1
	CCNI-s;	s	=	side 0 or 1
	ETSI-sqq;	qq	=	unit 01-16
	TSI-sft;	f	=	unit (receiving from) (1-6)
	CCB-sf;	t	=	unit (transmitting to) (1-6)
	ETSI-s,ECCN-s;			
	UNIT-[q]q:[ww]:UC;	[q]q	=	unit 01-16
	UNIT-[q]q:[ww]:{FTMI-d DSPI};	d	=	module interface 1-4
	UNIT-[q]q:[ww]:FC-sd;	sd	=	FC side (0,1) and FC No. (1-4)
	NPC-<npc No.>:[ww]:[SIDE-s];	<npc No.>	=	NPC No.
		s	=	SIDE for DSPU
	LINK-j;	j	=	link 1-6

NOTE: Removing the NPC is service affecting.

Figure 5.13-1. Maintenance Command Construction

12. If either a DGN ...STF or RST ...DENY message is received, enter command to remove the suspect pack, replace it, and enter the command to restore it to service.
13. Enter **DGN-EQPT : :ETSI-sqq;** for the subject ETSI pack.
 - If DGN ...STF message is received, proceed to Step 15.
 - If DGN ...STF message is not received, enter **RST-EQPT : :ETSI-sqq;** for the subject ETSI pack.
14. Check for any 48-volt fuse feeding the ECCN on the ED-2C945-30 fuse panel blown (indicator fuse bead extended).

- If there is a blown fuse, go to *Power Failures*.
- 15. If not already removed from service, enter **RMV-EQPT : :CCI-s ;** to remove the CCI for the failed side.
Where: s = Side (0 or 1).
- 16. Replace CCI pack (BBS1 code) for failed side.
- 17. Enter **RST-EQPT : :CCI-s ; . .**
- 18. Enter **DGN-EQPT : :ETSI-sqq ;** for subject ETSI pack.
 - If DGN ...STF message is received, continue with Step **19**.
 - If DGN ...STF message is not received, enter **RST-EQPT : :ETSI-sqq ;** for the subject ETSI pack.
- 19. If there is another pack listed in Table 5.13-1 for the trouble number, continue with Step **20**.
 - If there is not another pack, proceed to Step **21**.
- 20. Enter command to remove next pack listed in Table 5.13-1, replace the pack, and enter command to restore the pack to service considering the following:
 - For DPLL, work on same side of Sync as failed ETSI.

**CAUTION:**

No circuit card nor the SMEM memory card should be physically removed from the frame or inserted into the frame while a frame reset or reboot is in progress.

- To restore EBX or CPU, reset frame using RESET controls on the status panel.
- The BTs contain passive components for resistive termination. If suspect, check if they are securely inserted and enter ETSI diagnostic; if secure, replace one at time and reenter diagnostic each time.

**NOTE:**

To prevent alarms, remove the side before replacing an ECCN plug-in (**RMV-EQPT : :CCI-s ;**). Restore the side after the replacement (**RST-EQPT : :CCI-s ;**).

Repeat from Step **18**.

Table 5.13-1. Implicated Plug-Ins

Trouble No.	Plug-Ins	Commands
0001	ETSI CCI DPLL (in sync)	{RMV RST}-EQPT::ETSI-sqq; {RMV RST}-EQPT::CCI-s; {RMV RST}-EQPT::SYNC-a;
0002, 0010, 0020, 0040, 0100, 0200, or 0800	ETSI	{RMV RST}-EQPT::ETSI-sqq;
0004	ETSI CCI EBX (in MC) BTs	{RMV RST}-EQPT::ETSI-sqq; {RMV RST}-EQPT::CCI-s; RMV-EQPT::MC;
0008, 0400, or 8000	ETSI CCI	{RMV RST}-EQPT::ETSI-sqq; {RMV RST}-EQPT::CCI-s;
0080 or 1000	ETSI BTs	{RMV RST}-EQPT::ETSI-sqq;

Trouble number 0800 may also indicate a ribbon cable problem.

21. If you are clearing trouble number 0004, proceed to Step 27.
 - If you are not clearing trouble number 0004, check ETSI slot and backplane for damage. If no wiring problem is found, contact technical consultant.

For STF 0100, the port alarm pack identification also identifies the suspect wiring.

Continue for Additional ETSI in Message

22. Notice the suspect ETSI identified by the optional SNN designation in the failed ETSI diagnostic.
23. Enter **RMV-EQPT::ETSI-sqq;**.
24. Enter **RMV-EQPT::CCI-s;** to remove the side from service. Replace the ETSI.
25. Enter **RST-EQPT::CCI-s;** to restore the side to service.
26. Enter **DGN-EQPT::ETSI-sqq;** for the ETSI that originally failed.
 - If DGN ...STF message is received, check ETSI slot and check backplane for damage. If no wiring problem is found, contact technical consultant.
 - If DGN ...STF message is not received, enter **RST-EQPT::ETSI-sqq;** commands to restore the ETSI packs.

Continue for Trouble No. 0020, 0040, 0800, or 1000

27. If diagnostic trouble 0020 or 0040 is received, continue with Step **28**.
 - If diagnostic trouble 0020 or 0040 is not received, proceed to Step **30**.
28. Locate data byte 04 and convert it to binary as follows:
 - Work with each digit of the data byte individually.
 - Convert each hexadecimal digit to the 4-place binary number equivalent. Hex numbers run 1 through 9 and a through f (for 10 through 16); for example, hex 5 = 0101 binary.
29. The resulting 16-bit binary number represents the ETSIs in the frame, with ETSI 16 on the left and 1 on the right. Identify each suspect ETSI which is indicated by a 1 in the 16-bit binary number.
30. See Notes 1 and 2. Select one of the implicated plug-ins and enter command to remove that ETSI and unplug it. Enter **DGN-EQPT : :ETSI-sqq**; for the original ETSI. Repeat as necessary for each of the suspect ETSIs.

**NOTE:**

To prevent alarms, remove the side before replacing ETSI (**RMV-EQPT : :CCI-s**;). After replacement, restore the side to enable ETSI diagnostic and restoral (**RST-EQPT : :CCI-s**;).

**NOTE:**

The implicated ETSIs are either the ones identified by data 04 in Step 28 or all the remaining ones if none were identified by data 04.

31. If DGN ...ATP (or CATP) was received when one of the implicated ETSIs was unplugged, replace ETSI found to be causing the failure and install ETSIs that were unplugged. Enter **RST-EQPT : :ETSI-sqq**; commands to restore ETSI packs.
 - If the DGN ...ATP (or CATP) was not received, continue with Step **32**.
32. If there is another pack listed in Table 5.13-1 for the trouble number, continue with Step **33**.
 - If there is not another pack, contact technical consultant.
33. Enter command to remove next pack listed in Table 5.13-1, replace the pack, and enter command to restore the pack to service considering the following:
 - For DPLL, work on same side of sync as failed ETSI.
 - To restore EBX or CPU, reset frame using RESET controls on the status panel.

- The BTs contain passive components for resistive termination. If suspect, check to see if they are securely inserted and enter ETSI diagnostic; if secure, replace one at a time and reenter diagnostic each time.

To prevent alarms, remove the side before replacing an ECCN plug-in (**RMV-EQPT : :CCI-s ;**). Restore the side after the replacement (**RST-EQPT : :CCI-s ;**).

34. Enter **DGN-EQPT : :ETSI-sqq ;**.
- If DGN ...STF message is received, repeat from Step 32.
 - If DGN ...STF message is not received, enter **RST-EQPT : :ETSI-sqq ;** for the subject ETSI pack.
-

When to Use Use this procedure to clear a failed TSI diagnostic.

Instructions

1. If the alarm cutoff is not already operated, enter **OPR-ACO-ALL**.
2. If the subject TSI (time slot interchange) has not been removed from service (RMV TSI COMPLD or RST TSI DENY in printout), enter **RMV-EQPT::TSI-sft;**

Where: sft = Failed TSI number.

3. Replace the TSI pack (TM660 code) named in the failed diagnostic message.
4. Enter **DGN-EQPT::TSI-sft;**
Where: sft = Failed TSI number which consists of Side (0 or 1),
From-unit (1 through 6), and To-unit (1 through 6).
For example, TSI 013 is on side 0 and receives
data from unit 1 and connects to unit 3.

- If DGN ...STF message is not received, proceed to Step **10**.

5. Locate the trouble number which appears immediately after STF in the diagnostic message.
 - If none of the following trouble numbers are received (01B0, 0540, 05B0, or any starting with 014), check connector pins at failed TSI slot and check backplane for damage. If no wiring trouble is found, contact technical consultant.
 6. Enter command to remove the CCNI for the failed side as follows:

RMV-EQPT : : CCNI - s ;
where: s = Side (0 or 1).
 7. Replace that CCNI pack (UM30 code).
 8. Enter **RST-EQPT : : CCNI - s ;**.
 9. Enter **DGN-EQPT : : TSI - sft ;**
to diagnose TSI that originally failed.
 - If DGN ...STF message is received, check connector pins at failed TSI slot and check backplane for damage. If no wiring trouble is found, contact technical consultant.
 10. Enter command to restore subject TSI pack to service as follows:
RST-EQPT : : TSI - sft ;
 - If trouble persists, contact technical consultant.
-

Clear Failed NPC (FTU) Diagnostic

5.15

When to Use

Use this procedure to clear a failed NPC (FTU) diagnostic.

Instructions

1. If the alarm cutoff is needed, enter **OPR-ACO-ALL;**. If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. Enter **DGN-EQPT: :NPC-<npc No.>;**, where the NPC number is the same one given in the failed diagnostic message.
 - If DGN ...STF message is received, continue with Step **3**.
 - If DGN ...STF message is not received, proceed to Step **12**.



NOTE:

The diagnostic includes looped tests that check the NPC transmission paths and tests that check the facility performance monitoring.

3. In order to see if the ECCN packs are affecting the failure, configure the ECCN to the other side as follows:
 - Enter **RTRV-REG-EQPT: :XC-a: :STR;** for each side (a = 0,1) and determine the active side from output (rightmost data byte equals 05 for in-service and active).

- Enter **RTRV-STATE-COM:[xy]::[ww]:ALL;**
to verify that packs on the inactive side are not failed because switching to a failed side could cause loss of service.
 - If the inactive side is not failed, enter **SW-DX-EQPT: :XC-a;** (for inactive side) to switch ECCN sides.
4. Enter **DGN-EQPT: :NPC-<npc No.>;** where the NPC number is the same one given in the failed diagnostic message.
 - If DGN ...STF message is received, proceed to Step 10.
 - If DGN ...STF message is not received, continue with Step 5.
 5. Enter **RMV-EQPT: :UNIT-[q]q: :FC-sb;** for the same unit ([q]q), inactive side, and module (b) in the unit, replace that FC pack, and enter **RST-EQPT: :UNIT-[q]q: :FC-sb;**.
 6. At low traffic time, enter **SW-DX-EQPT: :XC-a;** (for inactive side) to switch to other ECCN side.
 7. Enter **DGN-EQPT: :NPC-<npc No.>;**
where the NPC number is the same one given in the failed diagnostic message.
 - If DGN ...STF message is received, continue with Step 8.
 - If DGN ...STF message is not received, proceed to Step 12.
 8. Perform the appropriate action as follows:
 - If the original failure occurred immediately after a cross-connection was entered, find the implicated ETSI. The ETSI number (sqq) consists of side (opposite - original side) and the unit number associated with the FROM and TO sides of the cross-connection. Enter **RMV-EQPT: :ETSI-sqq;** replace the ETSI pack, and enter **RST-EQPT: :ETSI-sqq;**.
 - If failure cannot be related to cross-connection, enter commands to individually remove and restore the ETSIs on the inactive side and look for failed diagnostics.
 9. Enter **DGN-EQPT: :NPC-<npc No.>;** where the NPC number is the same one given in the failed diagnostic message.
 - If DGN ...STF message is received, continue with Step 10.
 - If DGN ...STF message is not received, proceed to Step 12.

**CAUTION:**

When an NPC is removed, service is interrupted on all the cross-connected circuits of that NPC and trunk conditioning is sent on the channels. Contact special service customers and replace plug-ins quickly.

10. When the other NPC on the affected dual card (for example, DPC) can be removed from service, enter command to remove the other NPC as follows:
RMV-EQPT::NPC-<npc No.>::[:INCL];.

Where:

<npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

INCL = Optional, needed to remove NPC with red circuits and CUS circuits. Enter

PTRV-PRMTR-T1::<npc No.>::MARK;
to see if the NPC has red or CUS circuits.

11. Replace the pack for the two affected NPCs.
12. If needed (see Note), enter **RST-EQPT::NPC-<npc No.>[&&[&]-<range>];** for the subject NPC and for the other NPC on the pack if that NPC was also removed.



NOTE:

The NPC restoral is needed if the NPC was removed from service (manually or autonomously as part of error recovery) or if a previous restore command was denied because of a failed diagnostic.

- If DGN ...STF message is received, check connector pins at plug-in slot and check backplane for damage. If no wiring problem is found, contact technical consultant.
- If RST ...COMPLD message is received, this procedure is completed.
- If RST ...DENY message is received, find the reason for denial in the output message and perform corrective action to obtain command completion.

When to Use

Use this procedure to clear a failed DSPU NPC diagnostic.

Instructions



NOTE:

The DSPU NPC diagnostic runs continuity tests between the DSPU and the ECCN. These tests actually involve accessing timeslots on an NPC in the unit and checking the connection through the cables and the ECCN. Similarly, when the ETSI for the unit was diagnosed, the interconnection between it and the other ETSIs was tested.

1. If the alarm cutoff is needed, enter **OPR-ACO-ALL**; .If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. Notice which NPC number and side (0 or 1) are named in the failed diagnostic message.



NOTE:

The plug-in for the DMB function contains two NPCs, but the CPR plug-in only has circuitry for one NPC. The DSP positions are duplicated on the sides of the DSPU so that service will be switched to the mate when an NPC fails or is removed.

3. If the subject NPC has not been removed from service RMV COMPLD or RST DENY in printout), enter
RMV-EQPT::NPC-<npc No.>::SIDE-s[:INCL];
 Where:

<npc No.>	=	NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
s	=	Side (0 or 1).
INCL	=	Optional, needed to remove NPC with cross-connected red circuits, and substrate circuits with established channels.
4. Enter **DGN-EQPT::NPC-<npc No.>::SIDE-s;** for subject NPC number and side.
 - If DGN ...STF message is received, continue with Step 5.
 - If DGN ...STF message is not received, proceed to Step 15.
5. Enter **RMV-EQPT::CCI-s;** or **RMV-EQPT::CCNI-s;** (whichever is appropriate) for the same side as the failed DSP NPC. This prevents an alarm (and DSP removal) on other DSPs. Even though the ECCN side is not active, if it is in-service, a glitch on the bus can trigger the alarm.
6. Replace the DSP plug-in for the NPCs (for example, DMB) on the side.
7. Enter **RST-EQPT::CCI-s;** or **RST-EQPT::CCNI-s;** (whichever is appropriate) to restore the network side to service.
8. Enter **DGN-EQPT::NPC-<npc No.>::SIDE-s;** for subject NPC number and side.
 - If DGN ...STF message is received, continue with Step 9.
 - If DGN ...STF message is not received, proceed to Step 15.
 - If message gives a trouble number in the range STF 0F03 through 0F06 and optional second line with UPN and XPN numbers, proceed to Step 13.
9. Enter **RMV-EQPT::UNIT-[q]q::DSPI;**, replace DSPI, and enter **RST-EQPT::UNIT-[q]q::DSPI;**.
10. Enter **DGN-EQPT::NPC-<npc No.>::SIDE-s;** for subject NPC number and side.
 - If DGN ...STF message is received, continue with Step 11.
 - If DGN ...STF message is not received, proceed to Step 15.
11. Enter **RMV-EQPT::UNIT-[q]q::UC;**, replace CPU, and enter **RST-EQPT::UNIT-[q]q::UC;**.
12. Enter **DGN-EQPT::NPC-<npc No.>::SIDE-s;** for subject NPC number and side.

- If DGN ...STF message is received, continue with Step 13.
 - If DGN ...STF message is not received, proceed to Step 15.
13. Perform one of the following (use appropriate commands for the type of frame):
- If the original failure occurred immediately after a cross-connection was entered, try replacing the involved ETSIs/TSIs. Enter **RMV-EQPT::ETSI-sqq**; or **RMV-EQPT::TSI-sft**; ,replace the ETSI/TSI pack, and enter **RST-EQPT::ETSI-sqq**; or **RST-EQPT::TSI-sft**; .
The involved ETSI(s)/TSI(s) are those on the same side as the NPC and the unit(s) containing the NPC(s) in the cross-connection.
 - If failure cannot be related to cross-connection, enter commands to individually remove and restore the ETSIs/TSIs on the inactive side and look for failed diagnostics.
14. Enter **DGN-EQPT::NPC-<npc No.>::SIDE-s**; for subject NPC number and side.
- If DGN ...STF message is received, obscure problem; contact technical consultant. After trouble is cleared, enter command to restore NPCs to service.
 - If DGN ...STF message is not received, continue with Step 15.
 - If message gives a trouble number in the range STF 0F03 through 0F06 and optional second line with UPN and XPN numbers, proceed to Step 16.
15. Enter **RST-EQPT::NPC-<npc No.>::SIDE-s**; for the first NPC (if NPC pair) and side.
- If RST ...COMPLD message is received, this procedure is completed.
 - If RST ...DENY message is received, find the reason for denial in the output message and perform corrective action.
16. From Table 5.16-1, identify the faulty cable connecting to the subject NPC by the UPN (unit plug number) and XPN (ECCN plug number) named in the message. Notice that the ECCN plug number includes the unit number.

Table 4-1. Cable Identification

Unit Plug	ECCN Plug	Side	Direction	Involved DSP Plug-In
P1	P<unit>A	0	Receive	1st & 2nd DSP
P2	P<unit>E	0	Transmit	1st & 2nd DSP
P3	P<unit>B	0	Receive	3rd & 4th DSP

Table 4-1. Cable Identification

Unit Plug	ECCN Plug	Side	Direction	Involved DSP Plug-In
P4	P<unit>F	0	Transmit	3rd & 4th DSP
P5	P<unit>C	0	Receive	5th & 6th DSP
P6	P<unit>G	0	Transmit	5th & 6th DSP
P7	P<unit>D	0	Receive	7th & 8th DSP
P8	P<unit>H	0	Transmit	7th & 8th DSP
P10	P<unit>A	1	Receive	1st & 2nd DSP
P11	P<unit>E	1	Transmit	1st & 2nd DSP
P12	P<unit>B	1	Receive	3rd & 4th DSP
P13	P<unit>F	1	Transmit	3rd & 4th DSP
P14	P<unit>C	1	Receive	5th & 6th DSP
P15	P<unit>G	1	Transmit	5th & 6th DSP
P16	P<unit>D	1	Receive	7th & 8th DSP
P17	P<unit>H	1	Transmit	7th & 8th DSP

17. Replace (or have repaired) the cable identified above. The unit and ECCN plug numbers are stamped alongside the connectors on the ECCN panel; see Figure 5.16-1
18. Enter **RST-EQPT::NPC-<npc No.>::SIDE-s**; for the first NPC (if NPC pair) and side.
 - If DGN ...STF message is received (see Note), obscure problem; contact technical consultant. After trouble is cleared, enter command to restore NPCs to service.

**NOTE:**

The diagnostic reports one cable problem at a time; so if different UPN and XPN numbers occur, clear that trouble before contacting the technical consultant.

- If RST ...COMPLD message is received, this procedure is completed.

If RST ...DENY message is received, find the reason for denial in the output message and perform corrective action.

(LEFT SIDE OF ECCN PANEL)							
P3A	P3B	P3C	P3D	P3E	P3F	P3G	P3H
P4A	P4B	P4C	P4D	P4E	P4F	P4G	P4H
P6A	P6B	P6C	P6D	P6E	P6F	P6G	P6H
P9A	P9B	P9C	P9D	P9E	P9F	P9G	P9H
P10A	P10B	P10C	P10D	P10E	P10F	P10G	P10H
P12A	P12B	P12C	P12D	P12E	P12F	P12G	P12H
P15A	P15B	P15C	P15D	P15E	P15F	P15G	P15H
P16A	P16B	P16C	P16D	P16E	P16F	P16G	P16H
P17A	P17B	P18A			P19		
P14A	P14B	P14C	P14D	P14E	P14F	P14G	P14H
P13A	P13B	P13C	P13D	P13E	P13F	P13G	P13H
P11A	P11B	P11C	P11D	P11E	P11F	P11G	P11H
P8A	P8B	P8C	P8D	P8E	P8F	P8G	P8H
P7A	P7B	P7C	P7D	P7E	P7F	P7G	P7H
P5A	P5B	P5C	P5D	P5E	P5F	P5G	P5H
P2A	P2B	P2C	P2D	P2E	P2F	P2G	P2H
P1A	P1B	P1C	P1D	P1E	P1F	P1G	P1H
(RIGHT SIDE OF ECCN PANEL)							

B
O
T
T
O
MT
O
P

Figure 5.16-1. Cable Connectors on ECCN Panel

Primary Memory (PMEM) Card Failure Recovery Procedure

5.17

When to Use Use this procedure to recover from a primary memory (PMEM) card failure.

Instructions

The recovery procedure when a PMEM card failure occurs is as follows:

1. Perform the following diagnostic tests on both the PMEM and SMEM cards:
 - a. Do the card diagnostic test, craft code X'0004.
 - b. Do the validate data base test, craft code X'0010.
 - c. Validate the boot block, craft code X'0020.
 - d. Validate executable header, craft code X'0040.
 - e. Validate executables, craft code X'0080.

Several possible cases can result from this set of tests that lead to different actions to resolve the problems:

- a. If the PMEM card fails card diagnostics and the SMEM card passes all tests, then go to Step 2.
- b. If the PMEM card succeeds on the card diagnostic test, but fails any of the other tests, while the SMEM card succeeds on all tests, then go to Step 3.

- c. If the PMEM and SMEM card both succeed on the card diagnostic tests, but both fail on one of the other diagnostic tests, then go to Step 4.
 - d. If the SMEM card fails card diagnostics and the PMEM card passes all tests, then go to Step 5.
 - e. If the SMEM card passes card diagnostics, but fails any of the other tests, while the PMEM card succeeds on all tests, then go to Step 6.
2. Replace the PMEM card (Figure 5.17-1 with the card currently in the SMEM slot by doing the following (PMEM card is suspected to be defective):
 - a. Place the frame into MCOND before physically removing the the CPU2 pack by entering the following command:
RST-EQPT: :MC: :MCOND;
The frame will deny this command if it is already in MCOND.
 - b. Place the ESD grounding strap on your wrist and physically remove the CPU2 circuit pack while the MC is out-of-service..
 - c. Replace the PMEM card with the card currently in the SMEM slot.
 - d. Insert a spare memory card into the SMEM slot.
 - e. Physically insert the CPU2 pack into the frame.



CAUTION:

Replacing the CPU2 will cause a power-up reset. DO NOT interrupt this reset by pressing the RESET button.

- f. The System should be brought into service with the correct version of the executables and database. If the boot completes successfully and the database is correct, discard the bad PMEM card and continue with Step 7.

If PMEM fails to boot, run diagnostics on the PMEM card. The card diagnostic tests (craft code X'0004) will most likely fail, because the problem is most likely a PMEM card connector problem and the CPU2 board itself should be replaced. The system should be rebooted with the PMEM and SMEM cards in their original slots but with a new CPU2 pack.

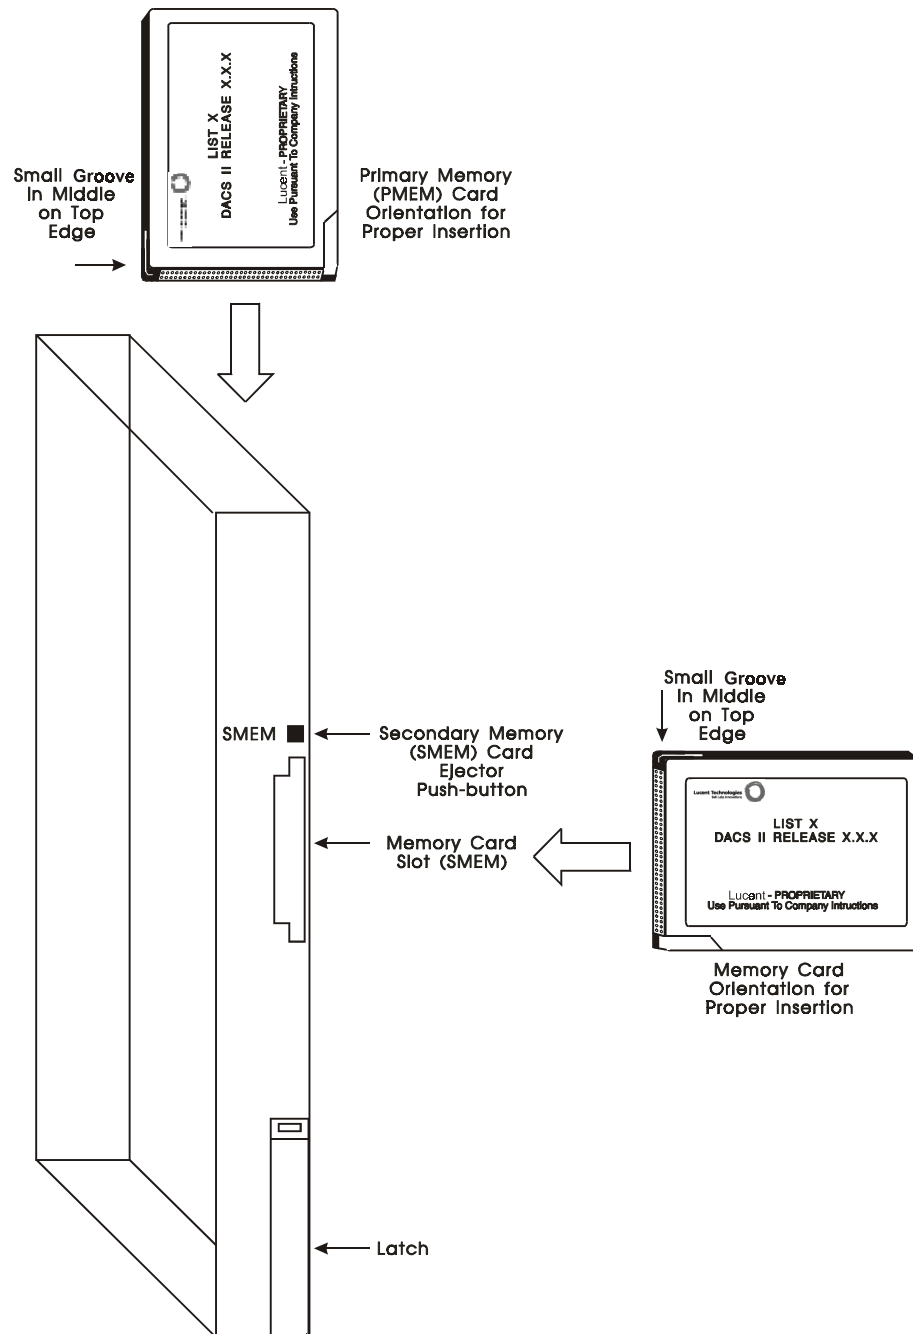


Figure 5.17-1. Memory Card Locations on CPU2

3. Replace the PMEM card (Figure 5.17-1) with the card currently in the SMEM slot by doing the following (PMEM card is suspected to contain corrupted executables or database):
 - a. Place the frame into MCOND before physically removing the the CPU2 pack by entering the following command:
RST-EQPT : :MC : MCOND ;
The frame will deny this command if it is already in MCOND.
 - b. Place the ESD grounding strap on your wrist and physically remove the CPU2 circuit pack while the MC is out-of-service.
 - c. Replace the PMEM card with the card currently in the SMEM slot.
 - d. Insert a spare memory card into the SMEM slot.
 - e. Physically insert the CPU2 pack into the frame.



CAUTION:

Replacing the CPU2 will cause a power-up reset. DO NOT interrupt this reset by pressing the RESET button.

- f. The system should be brought into service with the correct version of the executables and database. If the boot completes successfully and the database is correct, continue with Step 7. (The old PMEM card may be recycled as a future SMEM card.)
4. Replace the PMEM card (Figure 5.17-1) with the most recently archived memory card by doing the following (PMEM and SMEM cards are suspected to contain corrupted executables or database):
 - a. Place the frame into MCOND before physically removing the the CPU2 pack by entering the following command:
RST-EQPT : :MC : MCOND ;
The frame will deny this command if it is already in MCOND.
 - b. Place the ESD grounding strap on your wrist and physically remove the CPU2 circuit pack while the MC is out-of-service.
 - c. Replace the PMEM card with the most recently archived memory card.
 - d. Insert a spare memory card into the SMEM slot.
 - e. Physically insert the CPU2 pack into the frame.



CAUTION:

Replacing the CPU2 will cause a power-up reset. DO NOT interrupt this reset by pressing the RESET button.

- f. The System should be brought into service with the correct version of the executables and a valid but most likely not current database. If the boot completes successfully, continue with Step 7. (The PMEM card and the SMEM card may be recycled as future SMEM cards.)
5. Replace the SMEM card (Figure 8-3) with a spare memory card or with an older archive card that may be recycled. (SMEM card is suspected to be defective.):
 - a. Remove the SMEM card physically from the CPU2 card. (Since the card has been found to be defective by the system, it must already be logically removed from the system.)
 - b. Insert the spare memory card physically into the SMEM slot.
 - c. Discard the bad SMEM card and continue with Step 7.
6. The SMEM card is good but has bad information on it.
Restore the SMEM card:



NOTE:

The PMEM contents are copied onto the SMEM card when SMEM is restored. Each card is then a “mirrored image” of the other.

RST-EQPT::SMEM::::BKGRND;

If the command is denied because of bad or mismatching information on the SMEM card with the message:

Warning: The SMEM Card being restored has the following problems!

<message describing the problem>

If YOU STILL WISH TO PROCEED, USE FRC OPTION

Then use the command with the **FRC** option:

RST-EQPT::SMEM::::FRC:BKGRND;

You will get a response:

ARE YOU SURE? (YES/NO)

Answer YES and the restore operation should complete. Then go to Step 8.

7. To restore the SMEM card, enter the following command:



NOTE:

The PMEM contents are copied onto the SMEM card when SMEM is restored. Each card is then a “mirrored image” of the other.

RST-EQPT::SMEM::::BKGRND;

8. If there is now a replacement card in the PMEM slot, then the PMEM may not contain the latest db changes, depending on which replacement card was used. Any changes not present need to be re-done.

9. Create a new archive copy if needed (archived copy was used to replace the PMEM). Refer to the "Database Archive Procedure" (Volume 1).
-

When to Use Use this procedure to clear a failed link diagnostic.

Instructions

1. If the alarm cutoff is needed, enter **OPR-ACO-ALL**; .If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. Repeat the diagnostic for the failed link (which is named in the original failed DGN message). Enter the command from another link as follows:
DGN-EQPT : : LINK-j ;
Where: j = Link number (1 through 6).
3. If DGN LINK ...STF 0300 message is received, it means that the clock signal is not received on the synchronous link. So, verify wiring connections to the link at the back of the frame.
 - If DGN LINK ...STF message is not received, there is no problem at this time. If intermittent trouble recurs and another DACS II link is available, move the data link connections to the next link and set the link parameters.
4. Enter the diagnostic command for other links to determine if CI or ICI must be replaced.

5. If DGN LINK ...STF message is received for any other link, enter **RMV-EQPT::MC;**.
 - If DGN LINK ...STF message is not received for any other link, proceed to Step 8.
 6. Replace the CI or ICI pack, whichever is installed in the MC, with the same type.
 7. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 8. If another DACS II link is available, move the data link connections from the failed link to the next available link and set the link parameters.
 9. Make a record of the failed link stating that the CI or ICI pack in the main controller must be replaced (using the method in this procedure) if the failed link will be needed or at the time of the next reset of the MC.
-

When to Use Use this procedure to clear a failed CCB diagnostic.

Instructions

This procedure deals with a failed CCB (cross-connect buffer) diagnostic. When a CCB pack fails, the associated unit FC packs and network TSI packs may also be taken out-of-service autonomously; so, utility queries are used to check for associated packs that must be restored to service. Conversely, a failure of a TSI on one of the CCB ports can cause the CCB to fail its diagnostic. When that happens, the accompanying ERR, ESR ...CCB message is used to identify the failed TSI.

1. If the alarm cutoff is needed, enter **OPR-ACO-ALL**; .If the command is ineffective, press the **ACO** button on the DACS II status panel.
2. If the CCB has not been removed from service (RMV CCB COMPLD or RST CCB DENY in printout), enter **RMV-EQPT : :CCB-sf**;

Where:

s = Side (0 or 1)
f = CCB number (1 through 6).

3. Enter **RMV-CNFGRN-EQPT : :UNIT-q : :CCN-s, TSIS**; with the same unit and side as the failed CCB.

4. Locate trouble number that appears after the DGN ...STF keyword in the trouble printout.
 - If trouble number 0200 or 0300 is received, continue with Step 5.
 - If other trouble number is received, proceed to Step 7.

**NOTE:**

The STF 0200 and 0300 failures indicate a port alarm received from an associated TSI which can be failed or just unplugged.

5. Enter **RST-EQPT: :CCB-sf;** for the subject CCB.
6. Enter **RST-EQPT: :TSI-sft;** for each TSI associated with the subject CCB. If any diagnostic fails, replace that TSI pack and restore the replacement.

Proceed to Step 15.
7. Replace CCB pack (UM26 code) identified in the failed diagnostic message. There are six CCB slots on each side of the cross-connect network, one for each DACS II unit.
8. Enter **DGN-EQPT: :CCB-sf;**
 - If DGN ...STF message is not received, proceed to Step 15.
9. Enter **RMV-EQPT: :CCNI-s;** where: s = failed side (0 or 1).
10. Replace the CCNI pack (UM30 code) for the same CCN side.
11. Enter **RST-EQPT: :CCNI-s;** where: s = side 0 or 1.
12. Enter **DGN-EQPT: :CCB-sf;**
 - If DGN ...STF message is NOT received, proceed to Step 15.
13. Locate the ERR ESR CCB message that appears in the original trouble printout and the eight raw data bytes in that message. The data bytes are located under the error analysis heading in the output message.
 - If none of the first 3 data bytes have nonzero characters, check CCB slot and backplane for damage. If no wiring problem is found, contact technical consultant.
 - If any of the first 3 data bytes equal 0100 or 0200, there is a timing signal loss or clock error at the CCB. Check the backplane wiring for bent pins or broken leads at the CCB. If no wiring problem exists, check trouble printout for SYNC messages.
 - If any of the first 3 data bytes have some other nonzero value, use Table 5.19-1 to determine the related TSI From-Unit identification from one of the first 3 data bytes (referred to as data1, data2, and data3).

**NOTE:**

The To-Unit identification and side for the complete TSI "stf" number are already known from the failed CCB. The bus numbers refer to the connections to the 4 FTMs or DSPU ports.

Table 5.19-1. TSI Ports on CCB

Byte	Specific Position Value	TSI From-Unit ID
ESR0 (data 1)	xx8x	2 (bus 1)
	xx4x	1 (bus 1)
	xx2x	6 (bus 0)
	xx1x	5 (bus 0)
	xxx8	4 (bus 0)
	xxx4	3 (bus 0)
	xxx2	2 (bus 0)
	xxx1	1 (bus 0)
ESR1 (data 2)	xx8x	4 (bus 2)
	xx4x	3 (bus 2)
	xx2x	2 (bus 2)
	xx1x	1 (bus 2)
	xxx8	6 (bus 1)
	xxx4	5 (bus 1)
	xxx2	4 (bus 1)
	xxx1	3 (bus 1)
ESR2 (data 3)	xx8x	6 (bus 3)
	xx4x	5 (bus 3)
	xx2x	4 (bus 3)
	xx1x	3 (bus 3)
	xxx8	2 (bus 3)
	xxx4	1 (bus 3)
	xxx2	6 (bus 2)
	xxx1	5 (bus 2)

14. Enter **RMV-EQPT::TSI-sft**; for that TSI, replace it, and enter **RST-EQPT::TSI-sft**;
15. Enter **RST-EQPT::CCB-sf**; for the subject CCB.

16. Enter **RTRV-STATE-EQPT::UNIT-q::OOS;** and **RTRV-STATE-COM:::OOS;** and check the unit FC and network TSI portions to determine if any are removed from service.

Where: q = Involved DACS II unit (1 through 6).

17. If any FCs are out-of-service, enter command to restore each one as follows:

RST-EQPT::UNIT-q::FC-sf;.

Where:

q = Unit number (1 through 6)

sf = FC number consisting of side (0 or 1) and
FC number in unit.

18. If entire network side is out-of-service, enter the command **RST-CNFG-RN-EQPT:[xy]:UNIT-q:[ww]:CCN-s, TSIS;** for the subject side and unit; otherwise, enter command to restore each TSI as follows, **RST-EQPT::TSI-sft;.**
-

When to Use

Use this procedure to check type PB/PC NPC status.

Instructions

1. Enter **RTRV-STATE-EQPT::NPC-<npc No.>[&&&]-<range>];**
Where:
 - <npc No.> = NPC number, given either as extended (for example, [0]001)
or hierarchical (for example, 01-1-01).
 - <range> = Optional, for facility NPCs to name last NPC of range.
Three ampersands (&) are required for hierarchical.
2. Convert the NPC type designation (xyz) to binary and read the meaning of the bits as follows:
 - Work with each of the three digits following the PB or PC keyword individually.
 - Write the 4-digit binary equivalent of each Hex digit.
See Table 5.20-1.
 - Match the 0s and 1s with the options in Table 5.20-2. Only bits a through g (for Hex digits xy) are used in the basic 2.048-Mb/s feature.

3. In the output message, notice the IW (insertion word). This code word is sent on the message channels that are not connected in cross-connections.

Table 5.20-1. Hex and Binary Equivalents

Hex Number	Binary Number			
Digit x	Bit a	Bit b	Bit c	Bit d
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
8	1	0	0	0
9	1	0	0	1
A	1	0	1	0
B	1	0	1	1
C	1	1	0	0
D	1	1	0	1
E	1	1	1	0
F	1	1	1	1

Table 5.20-2. PB/PC NPC Type Specifications

Hex	Bit	Value	Meaning
x	a	0	CRC-4 multiframe in TS0
		1	Non-CRC-4 framing in TS0
	b	0	NPC is not used as a synchronization source
		1	NPC is used as a synchronization source
y	c	0	CCITT G.732 Consequent AIS in signaling
		1	Specified consequent action; <tc> field in commands
	d	0	Nonsignaling associated (NSA)
		1	16-state channel associated signaling (CAS)
z	e	0	Telephone Channel Numbering
		1	Time Slot Channel Numbering (NSA)
	f	0	Convert the abcd bits of TS16 to 1111 if 0000
		1	Pass signaling bits through unchanged
z	jkl	0	AIS applied to receive TS16 upon RAI, RAIS, or R16
		1	AIS not applied to receive TS16 upon RAI, RAIS, or R16
		0	TS0 bit 5 = SFI unaffected by synchronizer holdover
		1	TS0 bit 5 = SFI inverted on synchronizer holdover
		000	TS0 bit 3 = RAI indication within 2 ms.
		001	TS0 bit 3 = RAI indication in t^*
		010	TS0 bit 4 = RAIS in t^* and RAI within 2 ms.*
		011	TS0 bit 4 = Detect BER, enable RBER in t^* and RAI in 2 ms.
z	m	100	TS0 bit 4 = RAIS and RAI in t^* (Transmic 2G)*
		101	TS0 bit 4 = Detect BER, disable RBER and RAI within 2 ms*
		110	Bits 3 through 8 in t^* (Transmic 1G)
		111	Unassigned
		0	Unassigned, only m = 0 is valid

* When bit c=0, time t is 144 ms; when bit c=1, t is 144 ms

for remote alarms, but t is 480 ms for local alarms except for

jkl = 011 or 101 (MBER selected). With MBER, t is 2496 ms (SFDT).

Reference: HEX A=1010, B=1011, C=1100, D=1101, E=1110, F=1111.

4. Read the status and facility error counts from the fields of the output message using Table 5.20-3.

**NOTE:**

There are separate registers for 24-hour accumulated counts, previous short interval counts, and the current short interval (1 hour) counts. Counts are moved to different registers either after the interval expires or when the number of errors exceeds the alarm threshold for the register.

Table 5.20-3. Facility Status Keywords (PB/PC NPCs)

Keyword	Meaning	Output Information
OOS/FAIL/ PEST	Out-of-Service/ Failed/Pested	1 = NPC out-of-service/failed/pested.
PBA	Primary Block Alarm	R = red alarm, Y = yellow alarm, A = AIS, B = BER, E = REER, I = RAIS, L = LMA, M = R16, S = sync fail indication, V = A16, X = EER, 1 = PBA, or 0 = no PBA.
DM	Degraded Minutes	First line under header gives the number of occurrences. Second line gives the alarm threshold. Third line gives the selected option for alarm threshold 0 (default) or 1, 2, or 3 (defined options in data base).
SERS	Severe Errored Seconds	Same format as for DM.
ERS	Errored Seconds	Same format as for DM.
US	Unavailable Seconds	Same format as for DM.
SLIP	Timing Slip	Same format as for DM.
CRC	Cyclic Redundancy	Same format as for DM.
FRER	Frame Bit Error	Same format as for DM.
LOFA	Loss of Frame Alignment	Same format as for DM.
MER	Multiframe Alignment Error	Same format as for DM.
COFA	Change of Frame Alignment	Same format as for DM.

When to Use

Use this procedure to check the status of PA type NPCs.

Instructions

1. Enter **RTRV-STATE-EQPT::NPC-<npc No.>[&&&]-<range>];**
Where:
<npc No.> = NPC number, given either as extended (for example, [0]001)
or hierarchical (for example, 01-1-01).
<range> = Optional, for facility NPCs to name last NPC of range.
Three ampersands (&) are required for hierarchical.
2. Separate the NPC type designation (xyz) into its individual members (x, y, and z) and compare the value of each with Table 5.21-2 through Table 5.21-3. A 'Y' in a column indicates that the feature at the top of the column is enabled by the corresponding x, y, or z provisioning value.

Table 5.21-1. x Values for PA Type NPCs

x Value	CRC-4 Mode	Automatic CRC-4	Far-End PM	NPC Used as Sync Sourc	TS0 Bit 5 Used for SFI
0	Y				
1	Y		Y		Y
2	Y				Y
3	Y		Y		
4	Y			Y	
5	Y		Y	Y	Y
6	Y			Y	Y
7	Y		Y	Y	
8		Y	Y		
9		Y	Y		Y
A					Y
B					
C		Y	Y	Y	
D		Y	Y	Y	Y
E				Y	Y
F				Y	

NOTE: Although a value of B does not enable any of the features shown in the table, it is a valid value for x.

Table 5.21-2. y Values for PA Type NPCs

y Value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

NOTE: Values 1, 3, 5, 7, A, B, E, and F are unassigned and not valid.

Table 5.21-3. z Values for PA Type NPCs

z Value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	144ms	480ms	RAIS	RBER	144ms	480ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
8	Y			Y		Y		Y		
9		Y			Y	Y			Y	
A	Y		Y							Y
B		Y	Y							Y
C	Y									

NOTE: Values D, E, and F are unassigned and not valid.

3. Read the status and facility error counts from the fields of the output message using Table 5.21-4



NOTE:

There are separate registers for 24-hour accumulated counts, previous short interval counts, and the current short interval (1 hour) counts. Counts are moved to different registers either after the interval expires or when the number of errors exceeds the alarm threshold for the register.

Table 5.21-4. Facility Status Keywords for PA Type NPCs

Keyword	Meaning	Output Information
OOS/FAIL/ PEST	Out-of-Service/ Failed/Pested	1 = NPC out-of-service/failed/pested.
PBA	Primary Block Alarm	0 = No PBA. 1 = PBA exists for one or more of the following: LOS - loss of signal LOF - loss of frame AIS - alarm indication signal EER - excessive error rate RAI - remote alarm indication LMA - loss of multiframe alignment LCMA - loss of CRC4 multiframe alignment BER - bit error rate A16 - AIS received in time slot 16 RAIS - remote AIS RBER - remote bit error rate RMA - remote multiframe alarm SFI - synchronization failure indication PFWOOF - pseudo frame word out-of-frame FLCMA - far-end LCMA. A 1 under any of the headings listed above indicates that the condition exists.
CRC	Cyclic Redundancy Code	First line under header gives the number of occurrences. Second line gives the alarm threshold. Third line gives the selected option for alarm threshold 0 (default) or 1, 2, or 3 (defined options in data base).
FRER	Framing Errors	Same format as for CRC.
OFS	Out-of-Frame Seconds	Same format as for CRC.
ES	Errored Seconds	Same format as for CRC.
SES	Severely Errored Seconds	Same format as for CRC.
CSS	Controlled Slip Seconds	Same format as for CRC.
CV	Coding Violations	Same format as for CRC.
UAS	Unavailable Seconds	Same format as for CRC.
UATC	Unavailable Time Count	Same format as for CRC.
MER	Multiframe Errors	Same format as for CRC.
FEBE	Far-End Block Errors	Same format as for CRC.
FES	Far-End ES	Same format as for CRC.
FSES	Far-End SES	Same format as for CRC.
FUAS	Far-End UAS	Same format as for CRC.

Controller and Link Troubles

General Tasks

6

Contents

■ Clear Processor Failure Alarm	GT 6.1-1
■ Clear Frame Startup Trouble	GT 6.2-1
■ Clear RESET TOD/DATE Message	GT 6-31
■ Clear Overload Message	GT 6.4-1
■ Clear Inoperative Terminal (System Hung)	GT 6.5-1
■ Clear Repeated RL Command Response	GT 6.6-1
■ Establish Administrative Link at DACS II	GT 6.7-1

Clear Processor Failure Alarm

6.1

When to Use Use this procedure to clear a Processor Failure Alarm.

Instructions

1. If a reset is in progress, wait to see if the LED goes off after the reset completes. If the LED remains lighted, this trouble procedure is applicable. The processor failure is lighted during the frame reset sequence.
2. If the alarm cutoff is not operated, try pressing the **ACO** button on the DACS II status panel.
3. Check the power units located in the MC (main controller) for a lighted failure LED on any power unit.
 - If an LED is lighted, replace the power unit and close the latch/switch.
 - If an LED is not lighted, proceed to Step 6.
4. If the LED on the replacement lights, clear wiring trouble between the associated 48-volt fuse and the power unit per SD-96699-01.
5. On the status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - If the reset completes and the LED goes out, you have completed this procedure.

- If the LED is lighted, contact technical consultant for assistance in clearing the trouble.
- 6. Check printout for recent ERR SOFTWARE message.
 - If recent ERR SOFTWARE message occurred, refer to *Software Error* to clear the error.
 - If recent ERR SOFTWARE message did not occur, continue with Step 7.
- 7. Check to see if MC is in maintenance condition (MCOND ...COMPLD in printout).
 - If MC is in MCOND state, continue with Step 8.
 - If MC is not in MCOND state, proceed to Step 10.
- 8. Check printout to locate ERR message for MC, PMEM, or SMEM.
- 9. Enter DGN command for that entity (for example, DGN-EQPT::MC;).
 - If DGN ...STF message is received, go to Section 5.1 to clear the failed diagnostic.
- 10. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - If the FAILURE alarm goes off after the reset sequence completes, you have completed this procedure.
 - If the FAILURE alarm does not go off, check printout for MC packs named (**CPU2**, **CI**, **EBX**, and the **EMTC**) in an output error message.
- 11. If any MC pack is named, replace that pack.
 - If MC pack is not implicated, contact technical consultant for assistance.

**CAUTION:**

If the CPU2 is named, replacing the CPU2 will cause a power-up reset. DO NOT interrupt this reset by pressing the RESET button. Do not perform the RESET in STEP 12.

- 12. On the status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - If processor LED goes off after the reset completes, you have completed this procedure.
 - If processor LED does not go off, repeat the sequence to replace the next MC pack in an output message until all the MC packs have been replaced.

13. If the trouble persists after all the MC packs have been replaced, check for backplane wiring or plug-in connector trouble.
 - If no pack or wiring trouble is found, contact technical consultant for assistance in clearing the trouble.
-

When to Use Use this procedure to clear Frame startup trouble.

Instructions

This procedure is used when the DACS II reset operation fails. During the reset, the controller packs (CI, MP, and MTC) and the frame unit UCs are initialized, internal communication networks are established, and programs are transferred from the PMEM or SMEM to the respective packs. Depending on the degree to which the frame is equipped, the reset can take up to 30 minutes (from memory card) to complete. The RST MC command initiates the same operations as the frame reset except that the unit UCs are not rebooted.



NOTE:

The terminal must be set at 9600 baud rate to read the information as it scrolls on the screen.

1. If there has been recent installation or maintenance activity on the backplane, check behind the MC to verify that wiring loops are installed at connectors CPU2 and CI. Be careful when removing the metal shield so as not to damage other wiring. The wiring loops (green wires) are on plugs at the CPU2 and CI connectors which are at the bottom center of the MC backplane (on the CEF).

2. At back of frame, disconnect the administrative link cables (except link 1) from the main controller and tag them for correct installation after the trouble is cleared.
3. Retry the reset as follows. On the DACS II status panel, hold **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - If reset does not proceed beyond CI/ICI startup, replace the CI or ICI, whichever is installed in the MC, with the same type and reset the frame again.
 - If any STARTUP STF message is received, replace the implicated pack as follows:
 - For MP, replace CPU2 (TM778) in main controller.

**CAUTION:**

Replacing the CPU2 will cause a power-up reset. DO NOT interrupt this reset by pressing the RESET button.

- For CI/ICI, replace CI or ICI.
 - For EBX, replace EBX (UM71) or BX2 for non-CEF (UM72).
 - For EMTC or MTC, replace EMTC (UM75) or MTC plug-in.
 - If the reset completes with no conditions (COND), you have completed this procedure. Reconnect link cables.
 - If the reset completes with conditions (COND), go to Section 7.2 to clear reset completed conditionally.
 - If **BOOT FAILED; BAD BOOT DEVICE** message is received, refer to Section 6.4 to clear the trouble.
 - If **SOFTWARE ID BLOCK CHECK FAILED** message is received, proceed to Step 6.
 - If **BOOT IN PROGRESS (continues for more than 45 minutes)** message is received, continue with Step 4.
 - If **other** message is received, check the trouble printout for other messages. If there are no other messages or trouble indications to work with, contact technical consultant.
4. Attempt to clear the trouble by replacing the circuit packs listed below (which have not already been replaced) one at a time and by checking the reset sequence. If software is being loaded from SMEM, try using the other source memory card and resetting the frame.

- For MP, replace CPU2 (TM778) in main controller.

**CAUTION:**

Replacing the CPU2 will cause a power-up reset. DO NOT interrupt this reset by pressing the RESET button.

- For CI/ICI, replace CI (TM658C) or ICI.
 - For EBX, replace EBX (UM71) or BX2 for non-CEF (UM72).
 - For EMTC or MTC, replace EMTC (UM75) or MTC plug-in.
5. If trouble persists or other trouble messages are received, contact regional technical consultant for assistance in clearing the trouble.
 6. From Table 6.2-1, determine the meaning of the condition (COND) code in the trouble message.

Table 6.2-1. Software ID Condition Codes

Code	Meaning
20	Software ID block cannot be read
21	Software ID block failed comparison

7. If you suspect that the wrong memory card was installed, install the correct memory card as shown in the following steps.
 - a. Place the ESD grounding strap on your wrist and physically remove the CPU2 circuit pack.
 - b. Replace the failed PMEM memory card with the most recent SMEM memory card (this may be the one currently installed in the SMEM slot on the CPU2).
 - c. Insert a spare memory card in the SMEM slot.
 - d. Physically insert the CPU2 back into the slot.

**CAUTION:**

Replacing the CPU2 will cause a power-up reset. DO NOT interrupt this reset by pressing the RESET button.

- e. To restore the SMEM card, enter the following command:

RST -EQPT : : SMEM, BKGRND !

Clear RESET TOD/DATE Message

6.3

When to Use Use this procedure to clear a RESET TOD/DATE message.

Instructions

This procedure deals with clearing ALM RESET TOD/DATE messages which indicate that the TOD (time of day) or date or both have been adjusted after a frame reset or MC restoral. The date is recovered from the SMEM and the time is obtained from the real-time clock in the CI or ICI pack. When these RESET messages are accompanied by a minor alarm, it indicates that the recovered values are suspect and must be set manually. The date must always be set because the SMEM may not be up-to-date.

1. If the alarm cutoff is needed because of the ALM RESET message, enter **OPR-ACO-ALL;**.
2. Locate the system time and date that appear on the line following the <Date ...year> <Time ...day> explanatory line. The format of the date is modayr and the format of the time is hrmsnc.
3. Check these times against the actual times.

 **NOTE:**
Enter **RTRV-HDR;** to display the time again.

4. Does either time or date need to be reset?

- If the time needs to be reset, enter **ED-DATE:[xy]::[ww]:hh-mm-ss**; to set the correct time.

Where:

hh	=	Hour (00 through 23)
mm	=	Minutes (00 through 59)
ss	=	Seconds (00 through 59).

- If the date needs to be reset, enter **ED-DATE:[xy]::[ww]:[ce]yy-mm-dd:[INT-bb]**; to set the correct date.

Where:

dd	=	Day (01 through 31)
mm	=	Month (01 through 12)
ce	=	Optional, for different century
yy	=	Last 2 digits of year (00 through 99, default is 86)
INT bb	=	Optional, to set interval at which the date will be printed, 01, 02, 04, 06, 08, 12, or 24 hours (default).

When to Use Use this procedure to clear an OVERLOAD Message.

Instructions

1. If UNIT-[q]q,UC OVERLOAD wording appears in the message,verify that the UBX pack is installed in the unit.
 - If UNIT-[q]q,UC OVERLOAD wording does not appear in the message, proceed to Step 4.
2. Enter **RST-EQPT::UNIT-[q]q::UC;** to restore subject unit.

Where: [q]q = Unit number (1 through 16) named in OVERLOAD message.

 - If DGN ...STF message is received, refer to *Manual Diagnostic Failures* to clear the trouble.
 - If OVERLOAD UNIT or RL response is obtained again when frame is used, replace UBX plug-in, and enter **RST-EQPT::UNIT-[q]q::UC;**.
 - If OVERLOAD UNIT or RL response is not obtained again when frame is used, you have completed this procedure.
3. If trouble persists, check unit backplane and pins, and contact technical consultant if no wiring trouble is found.

4. If MJ and processor FAILURE LEDs are lighted on the DACS II status panel, refer to Section 6.1.
 - If those LEDs are not lighted, continue with Step 5.
5. Determine which pack is implicated from the MP or CI designation in the OVERLOAD message. The MP designation means the CPU2 in the main controller and the CI means the CI in the main controller. The status panel FAILURE LED (which has its own trouble-shooting procedure) will be lighted with the OVERLOAD MC message.
6. Enter **RMV-EQPT: :MC;**. If command cannot be completed, continue with Step 7.
7. Replace the MC pack implicated from the OVERLOAD message.

**CAUTION:**

If the CPU2 is named, replacing the CPU2 will cause a power-up reset. DO NOT interrupt this reset by pressing the RESET button. Do not perform the RESET in STEP 8.

8. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - If the trouble is cleared, this procedure is completed.
 - If the trouble persists, contact technical consultant for assistance.

Clear Inoperative Terminal (System Hung)

6.5

When to Use Use this procedure to clear inoperative terminal (system hung).

Instructions



NOTE:

If trouble is found in any of the preliminary checks, discontinue the procedure.

1. Make the following checks:
 - Terminal connected to power outlet and power switch on.
 - Terminal connected to TTY connector at DACS II, either directly or via data sets.
 - Terminal passes its own self-tests.
 - Terminal is properly optioned and set to the proper baud rate for the link to which it is connected.
2. Verify that the correct ED-2C646-30 adapter is used to connect the data link to the DACS II.
 - Use a G1 (group 1) or G14 adapter for any interface via data sets (asynchronous or synchronous).

- Use a G2 or G15 adapter for a direct TTY or CRT terminal (without data sets).
- Use a G3 or G8 adapter for local operations systems such as SARTS (Switched Access Remote Test System) or TABS (telemetry asynchronous block serial) protocol link (asynchronous 4-wire - data only without data sets).

**NOTE:**

The G1 and G2 adapters interoperate with RS232C per EIA Pub. 12 and give maximum receiver margin and minimum pulse distortion. The G14 and G15 adapters contain termination and biasing networks to detect disconnected or unpowered RS232C equipment. The G1 and G2 adapters are recommended for use in normal installations where the equipment remains powered up.

3. Determine if the terminal will work with the printer shut off (failed printer can hang up the terminal); also, reset the terminal by turning it off, then on again.
4. If other links to DACS II are working, from another link, enter **RTRV-PRMTR-LINK: [xy] : j [mm] : [ww] ;**

Where:

j = Suspected link
mm = Optional virtual circuit (synchronous).

- If other links to DACS II are not working, proceed to Step 10.
5. Read the output message per Figure 6.5-1 to verify that the link baud rate matches the terminal and to check other link status. Mismatched baud rates cause garbled characters to be printed.
 - If the link baud rate does not match the terminal baud rate, enter **ED-PRMTR-LINK: : j : : PTCOL - {S|T}, BAUD-bb [, ALM-k] [, BS-e] [: INIT] ;** and you have completed this procedure. (Refer to Section 6.8 for the procedure to establish the link.)

/*Protocol*/

"{S/X}"

/*Baud:Backspace:Alarm:Enq/Ack:Xon/Xoff:Mode,Software,Hardware status*/

"bb:e:k:q:x:m,p,hh"

Protocol = S for Snider (Async) or X for X.25 (Synchronous)
bb = <baud> = 03,06,12,24,48,96
e = <backspace> = 0 for true backspace, 1 for underscore backspace, or dash (—) for synchronous link.

Protocol = S for Snider (Async) or X for X.25 (Synchronous)
 k = <alarm> = 1 (link alarm defined as minor) or 2 (defined as major)
 q = ENQ/ACK protocol 0 disabled, 1 enabled (default)
 x = Xon/Xoff protocol 0 disabled (default), 1 enabled.
 m = <mode> = 0 (idle), 1 (input message), or 2 (output message)
 p = <software> = 0 (protocol exchanges in-service) or 1 (protocol exchanges out-of-service, which slows down DACS II response time)
 hh = <hardware> = 03 (hardware in-service) or 04 (hardware out-of-service)

ADDITIONAL LINES FOR X.25:

```

/*Data Link Layer parameters: Frame address*/
"K-b,T1-eee,T3-ggg,N2-aa:{A/B}"
/*Packet Layer parameters*/
"W-c,P-ddd,T20-iii,T22-jjj,T23-kkk,T25-lll,T26-mmm,R20-nn,R22-p,R23-q,R25-r"
/*PVC and SVC range: PVC and SVC group number*/
"ppss:gghh"
  
```

Figure 6.5-1. Link Status Register

6. Enter **DGN-EQPT::LINK-j;** (where **j** is the original link that failed).
 - If DGN LINK ...STF message is received, refer to *Manual Diagnostic Failures* to clear link diagnostic failure.
7. If other links are working, try removing the inoperative link and restoring it to service again as follows:
RMV-EQPT::LINK-j; and **RST-EQPT::LINK-j;**
8. On suspect link, try entering **RTRV-HDR-NE;** to see if DACS II can now execute commands.
 - If DACS II can execute commands, this procedure is completed.
9. If the inoperative link uses data sets, check data sets by connecting to a different link (if one is available and correctly provisioned in the data base). Alternatively, you can try replacing the data set. Data set specifications are found in the information notes of SD-96699-01.
10. At back of the frame, disconnect the administrative link cables (except link 1) from the main controller and tag them for correct installation after the trouble is cleared.

11. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button. Watch for messages to see if the reset completes.
 - If the link is now operative, this procedure is completed.
12. Proceed as follows:
 - If DACS II is responding with **RL**, go to Section 6.7.
 - If DACS II is not responding at all (no character echo), replace the CI or ICI pack in the MC.
 - If trouble persists, replace each of the following plug-ins one at a time and check if the link is operative after the reset completes.
 - For MP, replace CPU2 (TM778) in main controller.

**CAUTION:**

Replacing the CPU2 will cause a power-up reset. DO NOT interrupt this reset by pressing the RESET button.

- For EBX, replace EBX (UM71) or BX2 (UM72).
- For EMTC or MTC, replace EMTC (UM75) or MTC plug-in.
- If trouble persists, contact technical consultant for assistance.

Clear Repeated RL Command Response

6.6

When to Use Use this procedure to clear repeated RL command response.

Instructions

1. If **RL** appears on the command line after the command is entered, reenter the command. If RL is received again, enter **RTRV-HDR-NE**; to see if trouble persists with different command.
 - If RL persists, continue with Step 2.
 - If the trouble goes away, you have completed this procedure.
2. Check processor FAILURE LEDs status.
 - If MJ and processor FAILURE LEDs are lighted on the DACS II status panel, refer to Section 6.1.
3. Check printout for OVERLOAD message.
 - If OVERLOAD message is present on the printout, refer to GT 6.5.

4. On DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - After the reset completes, if DACS II can execute commands, this procedure is completed.
 - After the reset completes, if DACS II cannot execute commands, contact technical consultant for assistance.
-

Establish Administrative Link at DACS II

6.7

When to Use

Use this procedure to establish an Administrative Link at the DACS II.

Instructions

This procedure is used to prepare DACS II links for connections. There are six links available for connection of terminal equipment and operations systems. The characteristics of each link can be changed from the defaults provided by DACS II using the ED PRMTR LINK commands herein. The ICI is required for TABS (telemetry asynchronous block serial) links.

1. If data sets (such as 202T) are required for remote connections or for equipment more than 50 feet (RS-232C specification) or 2000 feet (RS-449 specification, 1200 baud) away, verify that data sets have been installed. Data set specifications are given with the information notes in SD-96662-01.
2. Connect data link cable (for example, M25B) to the TTY connector for the link (behind DACS II main controller). No adapter is required for RS-449 format, but ED-2C646-30 adapters are required for RS-232C format as follows:
 - Use a G1 (group 1) or G14 adapter for any interface via data sets (asynchronous or synchronous).
 - Use a G2 or G15 adapter for a direct TTY or CRT terminal (without data sets).

- Use a G3 or G8 adapter for local operations systems such as SARTS (Switched Access Remote Test System) or TABS (telemetry asynchronous block serial) protocol link (asynchronous 4-wire - data only without data sets).

**NOTE:**

The G1 and G2 adapters interoperate with RS232C per EIA Pub. 12 and give maximum receiver margin and minimum pulse distortion. The G14 and G15 adapters contain termination and biasing networks to detect disconnected or unpowered RS232C equipment. The G1 and G2 adapters are recommended for use in normal installations where the equipment remains powered up.

3. What type of link is being established?
 - If **ASYNCHRONOUS**, continue with Step 4.
 - If **TABS**, proceed to Step 5.
 - If **SYNCHRONOUS**, proceed to Step 6.
4. Enter the appropriate command to initialize the link or make changes:
ED-PRMTR-LINK: [xy]: j : [ww] : PTCOL-S[, BAUD-bb]
[, ALM-k][, BS-e][, ENQ-q][, XON-x][: INIT]; or
ED-PRMTR-LINK: [xy]: j : [ww] : PTCOL-M[, ALM-k][: INIT];
ADD::LINK j, PTCOL S[, BAUD bb][, ALM k][, BS e]
[, ENQ q][, XON][, INIT]!
 or **ADD::LINK j, PTCOL {S|M}[, ALM k][, INIT]!**

Where:

- j = Physical link number (1 through 6)
- S|M = Asynchronous Snider (S) protocol or Modified (M) Snider for SLC Series 5 carrier system; only one of the 6 links can be set for modified Snider.
- bb = Baud rate; 03, 06, 12, 24, 48, or 96 for rate of 300, 600, 1200, 2400, 4800, or 9600; default is 1200
- k = Alarm class; k = 2 for major alarm for link hardware failure,
or k = 1 for minor alarm (default)
- e = Backspace; e = 1 for backspace indicated by underscore
or
e = 0 to actually move cursor backward for backspace (default)
- ENQ q = To enable/disable ENQ/ACK acknowledgement protocol to

- j = Physical link number (1 through 6)
match terminal requirement; q = 0 to disable
or x = 1 enable (default).
- XON x = To allow use of CTRL S and CTRL Q commands to
temporarily
stop and start long output messages; x = 0 to disable
(default) or x = 1 to enable.
- ENQ-q = To enable/disable ENQ/ACK acknowledgement protocol
to
match terminal requirement; q = 0 to disable
or x = 1 enable (default).
- XON-x = To allow use of CTRL S and CTRL Q commands to
temporarily
stop and start long output messages; x = 0 to disable
(default) or x = 1 to enable.
- INIT = Optional, to initialize all parameters to default values
except for those parameters entered in the command.

Proceed to Step 10.

5. Enter the following commands to make required settings:

```
ED-PRMTR-LINK: :j: :PTCOL-T,BAUD-bb;
ED-PRMTR-LINK: [<xy>]:j:[ww]:APPL-{ASCS|ASCD|PM}
[,L2AD-aa][,POLL-ttt];ADD::LINK j,PTCOL T,BAUD bb!
ADD::LINK j,APPL {ASCS|ASCD|PM}[,L2AD aa][,POLL ttt]!
```

Where:

- j = Physical link number (3 or 4)
- T = TABS protocol
- bb = Baud rate (24 for 2400)
- ASCS, ASCD,
or PM = Selects application as follows:
alarm surveillance and control summary or
detailed, or performance monitoring.
- ttt = Optional, to specify polling time as follows:
001 through 255 for ASCS or ASCD applications.
- aa = Optional, to specify Layer 2 address (00 through 31).

Proceed to Step 10.

6. To initialize the link or change alarm class, enter
ED-PRMTR-LINK: [xy]: j : [ww] : PTCOL-X[, ALM-k] [: INIT]; ADD: : LINK j, PTCOL X[, ALM k] [, INIT]!
 Where:
 - j = Physical link number (5 or 6)
 - PTCOL X = X.25 synchronous link protocol
 - k = Alarm class; 2 for major alarm for link hardware failure or 1 for minor alarm (default)
 - INIT = Optional, to initialize all parameters to default values except for those parameters entered in the command.
7. Enter **RTRV-PRMTR-LINK: [xy]: j [mm] : [ww] ; UTL: : QRY, STR, LINK j [mm] !** to see the existing (or default) link parameter values (see Table 6.7-1. The link must be removed from service to change parameters. See Figure 6.7-1.
8. To enter different **data layer** values, list the subject parameter followed by the value (for example, K-5). Enter the command as follows:
ED-PRMTR-LINK: [xy]: j : [ww] : [K-b] [, T1-eee] [, T3-ggg] [, N2-aa] [, FRMAD-{A|B}];
 Where:
 - j = Physical link number (5 or 6)
 - mm = Permanent virtual circuit (01 through 16) on same link
 - <param> <value> = **Data layer** parameter (K, T1, T3, N2) and value obtained from associated portion of Table 6.7-1
 - FRMAD {A|B} = Frame address in X.25 layer; default is A.
9. To enter different **packet layer** values, list the subject parameter followed by the value (for example, R20-nn) and use commas to separate parameter entries. Enter the command as follows:
ED-PRMTR-LINK: [xy]: j [mm] : [ww] : [<param>-<value>, ... <param>-<value>] [, VC-ppss&-gghh];

Where:

j = Physical link number (5 or 6)
 mm = Permanent virtual circuit (01 through 16) on same link
 <param> = One of the **packet layer** parameters of Table 6.7-1 for which different values are to be specified; identified by designation (for example, T20)
 <value> = Value of named parameter
 ppss = Virtual circuit ranges (00 through 16) for permanent (pp) and switched (ss) VCs; defaults are pp = 08 and ss = 08
 gghh = Virtual circuit groups (00 through 15) for above ranges; defaults are gg = 00 and hh = 00.

10. If DENY message with explanation that link is out-of-service is received, enter **RST-EQPT : : LINK - l**; and reenter ED LINK command. Conversely, for synchronous link, enter **RMV-EQPT : : LINK - l**; if link is in-service.
11. Verify that any administrative terminal to be connected to the link is set to the following major characteristics: Full Duplex, 7/8-Bit ASCII, Even Parity, Answerback (if link is provisioned for ENQ/ACK) and same Baud Rate. Complete terminal specifications are found in the information notes of SD-96658-01.
12. If you are adding the link to service, enter **RST-EQPT : : LINK - j [mm]**; to complete this procedure. Procedures to change the link language, NPC addressing, and output message screening are contained in *Provisioning*, Volume I.

/*Protocol*/

"{S/X}"

/*Baud:Backspace:Alarm:Enq/Ack:Xon/Xoff:Mode,Software,Hardware status*/

"bb:e:k:q:x:m,p,hh"

Protocol = S for Snider (Async) or X for X.25 (Synchronous)
 bb = <baud> = 03,06,12,24,48,96
 e = <backspace> = 0 for true backspace, 1 for underscore backspace, or dash (—) for synchronous link.
 k = <alarm> = 1 (link alarm defined as minor) or 2 (defined as major)
 q = ENQ/ACK protocol 0 disabled, 1 enabled (default)
 x = Xon/Xoff protocol 0 disabled (default), 1 enabled.
 m = <mode> = 0 (idle), 1 (input message), or 2 (output message)

Protocol = S for Snider (Async) or X for X.25 (Synchronous)
 p = <software> = 0 (protocol exchanges in-service) or 1 (protocol exchanges out-of-service, which slows down DACS II response time)
 hh = <hardware> = 03 (hardware in-service) or 04 (hardware out-of-service)

ADDITIONAL LINES FOR X.25:

/*Data Link Layer parameters: Frame address*/
 "K-b,T1-eee,T3-ggg,N2-aa:{A/B}"
 /*Packet Layer parameters*/
 "W-c,P-ddd,T20-iii,T22-jjj,T23-kkk,T25-lll,T26-mmm,R20-nn,R22-p,R23-q,R25-r"
 /*PVC and SVC range: PVC and SVC group number*/
 "ppss:gghh"

Figure 6.7-1. Link Status Register

Table 6.7-1. Synchronous Link Level Parameters

Parameter Designation	Meaning	Value Range	Default
Data Layer Values			
N2	Frame Transmission Attempts	2 through 16	7
K	Window Size	1 through 7	7
T1	Acknowledgment Timer	2 through 20 seconds	3
T3	Idle Channel Timer	4 through 120 seconds	26
Packet Layer Values			
W	Window Size	1 through 7	2
P	Packet Size	128 through 512 octets	128
R20	Restart Retries	1 through 10	1
R22	Reset Retries	1 through 3	1
R23	Clear Retries	1 through 10	1
R25	Data Retransmissions	0 through 3	0
T20	Restart Timer	10 through 180 seconds	180
T22	Reset Timer	10 through 180 seconds	180
T23	Clear Timer	10 through 180 seconds	180
T25	Data Acknowledgment Timer	10 through 200 seconds	200
T26	Interrupt Confirmation Timer	10 through 180 seconds	180

Note: The following timers are not supported by DACS II:

Table 6.7-1. Synchronous Link Level Parameters

Parameter Designation	Meaning	Value Range	Default
T2	Built-in to the XPC-MC 68605 chip of the ECI, time is 0.3 seconds and cannot be changed with the software.		
T4	Inactive link timer.		
T21	Call request response timer for SVCs.		

Data Base Troubles

General Tasks

7

Contents

■ Clear BMTR DNY Trouble	GT 7.1-1
■ Clear Reset, Boot, RST MC Conditional Completion	GT 7.2-1
-

When to Use Use this procedure to clear BMTR DNY trouble.

Instructions

1. To transfer the database or executables between the memory cards via the CPY command, the frame must be in maintenance condition (MCOND); PMEM and SMEM must be in-service. When transferring information from SMEM to PMEM, the user must have restricted maintenance (RMON) privileges. For **CPY** from WKG to MEM the frame must be in-service.
If necessary—
Enter **RST-EQPT::MC::MCOND**; to go to MCOND and log on as user DAX or user with RMON enabled.
2. Reenter the CPY MEM command that was denied.
3. If CPY ...DENY message is received again, proceed to Step 4.
 - If denial message is not received, then take no further action; trouble or DACS II condition that prevented first transfer attempt is not present at this time. If the MC is in MCOND, enter RST-EQPT::MC to exit maintenance condition.
4. Locate the denial error explanation in the output message.

**NOTE:**

Anytime the CPY MEM command is reentered and a different denial is received in the procedure, return here to clear the new denial.

5. Which denial explanation appears in the CPY output message?
 - If **Frame not in service**, proceed to Step 6.
 - If **MP or unit RAM error**, proceed to Step 8.
 - If **unit out-of-service**, proceed to Step 8.
 - If **problem occurred while accessing PMEM**, then proceed to Step 14.
 - If **source does not contain requested information**, then proceed to Step 14.
 - If **DB PMEM error OP-CL-RD-WR-SK**, proceed to Step 14.
 - If **DB can't send or receive mail**, proceed to Step 23.
 - If **can't lock or unlock RAM data base**, proceed to Step 23.
 - If **DB can't get slave mailbox**, proceed to Step 23.
 - If **invalid option, mailbox, or flag**, then proceed to Step 23.
 - If **SMEM not present**, then proceed to Step 28.
 - If **problem occurred while accessing SMEM**, then proceed to Step 28.
 - If **SMEM is not restored**, proceed to Step 28.
 - If **entity can't be addressed in this configuration**, then proceed to Step 32.
 - If **software identification block not readable**, then proceed to Step 35.
 - If **software identification block failed comparison**, then proceed to Step 35.
 - If **checksums verification failed**, proceed to Step 35.
 - If **memory card contains previous software journal files**, proceed to Step 37.
 - If **FPI on SMEM does not match one on PMEM**, proceed to Step 37.
 - If **can't mount/unmount PMEM**, proceed to Step 40.
 - If **PMEM not restored**, proceed to Step 40.
6. Enter the following:

RST-EQPT : :MC;

7. Reenter the **CPY** command.
 - If the command completes successfully, this procedure is completed.
 - If the same denial is received, contact technical consultant.

For RAM Error or Unit Out-of-Service, Continue:

8. Attempt to locate failed pack or out-of-service unit using the following commands:

DGN-EQPT : :MP;

DGN-EQPT : :UNIT- [q]q : :UC; (where [q]q = unit number 1 through 16)

- If commands are denied because MC is out-of-service, enter **RST-EQPT : :MC;**.
9. Enter **RTRV-STATE-EQPT : : :ALL;** and check for failed and out-of-service MC packs and UCs.



NOTE:

The conditions are indicated by the presence of a "1" in the out-of-service, failed, and pested columns for each pack. nUnequipped NPCs are indicated by dashes.

10. If you are clearing "unit out-of-service ..." and have units out-of-service, enter command(s) to restore service as follows:
RST-EQPT : :UNIT- [q]q : :UC;.
11. If you received DGN ...STF message for MP or UNIT UC, refer to *Manual Diagnostic Failures* to clear the particular failed diagnostic.
12. If the MC is in-service, enter **STA-LOCL-RST : :PMEM;**. If the MC is out-of-service, operate the reset on the status panel as follows: hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.



NOTE:

The boot updates all the frame memories from the PMEM; this operation can take as long as 15 minutes to complete.

13. If reset was just performed and the copy is between PMEM and SMEM—Enter the following commands:

RST-EQPT : :MC : :MCOND

RST-EQPT : :SMEM

- Reenter the **CPY** command.
- If the same denial is received, contact technical consultant.

For Problem-Accessing PMEM, Source Does Not Contain, or DB PMEM Error, Continue:

14. Enter **RST-EQPT : PMEM**; to ensure the PMEM is restored.
 - If RST ...DENY message is received, find the reason for the denial in the output message and perform corrective action to obtain command completion (Supplemental Information - Replace PMEM Card).
15. Reenter the CPY command that was originally denied.
 - If "problem-accessing PMEM" or "PMEM error" is received again, proceed to "Supplemental Information - Replace PMEM Card."
 - If "source does not contain ..." is received again, proceed to "Supplemental Information - Replace PMEM Card."
 - If the **CPY** command completes successfully—
Enter **RST-EQPT : MC**; to exit the maintenance condition. This procedure is completed.
16. If SMEM is the source for the CPY command and "source does not contain requested information" is received—
Place the ESD grounding strap on your wrist and replace the SMEM card with the most recent archived copy.
17. Reenter the **CPY** command that was originally denied.
 - If problem persists contact technical consultant.
 - If **CPY** command completes, proceed with next step.
18. Enter the following command:
RMV-EQPT : SMEM
19. Place the ESD grounding strap on your wrist and physically remove the archived card from the SMEM slot.
20. Insert spare card into the SMEM slot.
21. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
22. Any DB changes that were not present on the archived memory card, must be redone.

For DB Can't Send ..., Can't Lock/Unlock DB, DB Can't Get Mailbox, or Invalid Mailbox ..., Continue:

23. Check printout for ERR SOFTWARE messages that name the SMEM or PMEM.
24. Enter **DGN-EQPT : MC**;

25. If you have any failed diagnostics, go to *Manual Diagnostic Failures* to clear the particular failed diagnostic.
26. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - If RESET COMPLD (with no error explanation) is received, continue with next step.
 - If RESET COMPLD (with error explanation) is received, go to Section 7.2.
27. Reenter the CPY command that was denied.
 - If the command completes, this procedure is completed. Enter **RST-EQPT : :MC**; to exit the maintenance condition.
 - If the same denial is received, contact technical consultant.

For Problem -While Accessing SMEM or -SMEM Not Restored, Continue:

28. Perform the following to ensure that the SMEM is installed and powered up:
 - Verify that the SMEM is installed.
 - Enter **RST-EQPT : :SMEM** to power up SMEM and place it in-service.
29. Reenter the original **CPY** command that was denied.
 - If the command is denied again, continue with the next step:
 - If CPY ...DENY message is not received when original CPY command is reentered,
Enter **RST-EQPT : :MC** to restore equipment.
30. The craft person should run the following diagnostic tests on the SMEM card:
 - a. Do the card diagnostic test, craft code X'0004.
 - b. Do the validate data base test, craft code X'0010.
 - c. Validate the boot block, craft code X'0020.
 - d. Validate executable header, craft code X'0040.
 - e. Validate executables, craft code X'0080.
 - a. If the SMEM card fails card diagnostics, place the ESD grounding strap on your wrist and replace the the SMEM card and discard the original SMEM card.
 - b. If the SMEM card succeeds on the card diagnostics tests, but failed any other test, place the ESD grounding strap on your wrist and replace the SMEM card (this card can be recycled for future use).
31. Reenter the CPY command that was denied.

- If the command is completed, this procedure is completed. Enter **RST-EQPT : :MC;** to exit the maintenance condition.
- If the same denial is received, contact technical consultant.

For Entity Can't Be Addressed, Continue:

32. The configuration information on the SMEM does not match the frame configuration. Enter **RTRV-PRMTR-NE;** and check the software serial number in the configuration file. This is the number in the SS column of the output message.

**NOTE:**

The software serial number in the configuration information designates the data bases on SMEM for use in a particular frame. A SMEM from storage may have the default (arbitrary) serial number.

33. If the correct SMEM is not installed, place the ESD grounding strap on your wrist and install it.
34. Reenter the CPY command that was denied.
 - If the command completes, this procedure is completed. Enter **RST-EQPT : :MC;** to exit the maintenance condition.
 - If the same denial is received, contact technical consultant.

For Software - Not Readable, Software - Failed Comparison, or Checksums Verification Failed, Continue:

35. If the correct SMEM is not installed, place the ESD grounding strap on your wrist and install it.
36. Reenter the CPY command that was denied.
 - If the same denial is received, contact technical consultant.
 - If the denial message is not received, this procedure is completed.

For Memory Card Contains Previous Software or FPI On SMEM Does Not Match, Continue:

37. The wrong memory card is installed in the SMEM slot. The "memory card contains previous software" explanation indicates that it is an old memory card that contains previous software information, and "FPI on SMEM does not match" explanation indicates that the SMEM card contains a different feature package.
38. Place the ESD grounding strap on your wrist and install the correct SMEM card.
39. Reenter the CPY command that was denied.
 - If the command completes, this procedure is completed. Enter **RST-EQPT : :MC;** to exit the maintenance condition.

- If the same denial is received, contact technical consultant.
40. Enter command to restore PMEM to service, **RST-EQPT : :PMEM;**.
- If RST ...DENY message is received, find the reason for the denial in the output message and perform corrective action to obtain command completion.
41. Reenter CPY command that was denied.
- If the same denial is received, contact technical consultant.
 - If the denial message is not received, enter **RST-EQPT : :MC;** to exit the maintenance condition, this procedure is completed.
-

Clear Reset, Boot, RST MC Conditional Completion

7.2

When to Use Use this procedure to clear Reset, Boot, RST MC Conditional Completion.

Instructions

This procedure is used to respond to a conditional (with errors) completion of a frame reset, STA-LOCL-RST command (boot), or the RST MC command. Frequently, the conditional completion will put the MC in MCOND for entry of maintenance commands only; full command capability is returned when the trouble is cleared and the RST MC completes. During a reset, the controller packs (CI and MP) and the frame unit UCs are initialized, internal communications are established, the PMEM and SMEM cards are powered up, and programs are transferred from the PMEM or SMEM to respective packs. The RST MC command performs the same operations as the reset except that the main controller plug-ins are not initialized.

1. Locate the error explanation in the RESET, STA-LOCL-RST, or RST MC message.



NOTE:

The message shows one trouble at a time (the first one found). If other troubles exist, a different condition code will occur after the reset or restore is repeated. **If a different code occurs, go to Step 2 to clear that code.**

2. Which error explanation is given in the RESET, RST MC, or BOOT message?
 - If **Failed to Boot CONF file**, contact technical consultant. This condition code can be caused by the interaction of trouble-clearing operations with the existing trouble conditions; the technical consultant will need to reconstruct the sequence that led to the trouble.
 - If **Failed to Boot DB**, proceed with Step 4.
 - If **Failed to Boot Journal**, continue with Step 3.
 - If **Failed to Boot Unit**, proceed to Step 9.
 - If **PMEM Failed, SMEM Used**, proceed to Step 11.
 - If **PMEM Error, Boot from SMEM**, proceed to Step 11.
 - If **Failed to boot CI**, proceed to Step 13.

Failed To Boot Journal, Continue

3. If conditional completion was received as part of doing INIT SYS FRAME or using the DLT FPKG command, there is a discrepancy between the journal files in the working RAM and the PMEM.
 - Enter **RST-EQPT : :MC : :NOJRNL ;** to clear the problem.
If command completed successfully the procedure is complete.
Otherwise continue with next step.

**NOTE:**

A database problem on PMEM is suspected.

Failed To Boot DB, Continue

4. **Comment:** This step and the next step are an attempt to restore the PMEM database from the SMEM database that currently resides in the frame.
 - a. If the MC is not in MCOND—
Enter the following:
RST-EQPT : :MC : :MCOND
 - b. If SMEM and/or PMEM is not in service—
Enter the following command(s):
RST-EQPT : :PMEM
RST-EQPT : :SMEM
 - c. Logon as user DAX or user with RMON enabled—

- d. Enter **CPY-MEM:[xy]::[ww]:SMEM,PMEM;** to copy the data base information onto the PMEM.
 - If CPY ...DENY message is received from the transfer, go to GT 7.1.
5. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - If RESET ...COMPLD (with no error explanation) message is received, this procedure is completed.
 - If RESET ...COMPLD (with same error) message is received, continue with the next step.
 - Comment:*** The SMEM card also contains the suspected database problem.
 - If the RESET completed with different error message return to Step 2.
6. Obtain the archived flash card (containing the database)—
Place the ESD grounding strap on your wrist and install it in the SMEM slot.
7. ***Comment:*** This step and the next step are an attempt to restore the PMEM database from the archived SMEM database.
 - a. If the MC is not in MCOND—
Enter the following:
RST-EQPT::MC::MCOND
 - b. If SMEM and/or PMEM is not in service—
Enter the following command(s):
RST-EQPT::PMEM
RST-EQPT::SMEM
 - c. Logon as user DAX or user with RMON enabled—
 - d. Enter **CPY-MEM:[xy]::[ww]:SMEM,PMEM;** to copy the data base information onto the PMEM.
 - If CPY ...DENY message is received, go to Section 7.1.
 - If CPY command completes successfully—
Place the ESD grounding strap on your wrist and replace the "archive" SMEM card with a spare SMEM card. (Return the archive flash card to it's storage location.)
8. On the DACS II status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - If RESET ...COMPLD (with no error explanation) message is received,

**NOTE:**

Any DB changes that were not present on the archived memory card, must be redone.

- If the RESET completed with different error message return to Step 2.
- (if mml) message is received, contact technical consultant.

For Failed To Boot Unit, Continue

9. Enter **RTRV-STATE-EQPT : [UNIT - [q]q] : ALL**; to find the unit UC which is out-of-service. The subject unit may have been removed by error recovery.
10. Enter **RST-EQPT : UNIT - [q]q : UC**; to restore the same unit.
 - If DGN ...STF message is received, go to Section 5.9 to clear failed unit UC diagnostic.
 - If the command is completed, this procedure is completed.

For PMEM Failed-SMEM Used for Boot, Continue

11. The error condition indicates that the boot from the PMEM failed and that the SMEM was used as the source for the boot.
12. Replace the DACS II PMEM (Refer to "Supplemental Information - Replace PMEM Card").

For Failed to boot CI, Continue

13. Replace the CI or ICI plug-in whichever is installed in the main controller.
14. On the status panel, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button.
 - If RESET ...COMPLD (with no error explanation) message is received, this procedure is completed.
 - If RESET ...COMPLD (with error explanation) message is received, contact technical consultant.

Frame Audits

General Tasks

8

Contents

■ Clear DGNDDET Message 82002	GT 8.1-1
■ Clear DGNDDET Message 82001 or AUD 82004 Trouble	GT 8.2-1
■ Clear DGNDDET Message 82003	GT 8.3-1
-

When to Use Use this procedure to clear a DGNDDET message 82002.

Instructions

This procedure deals with frame comparison type frame audit messages. These messages result when there is a difference in the data contained in the UC or pack memory and the MP memory. The DGNDDET test number identifies what data is in question, and the message data bytes give which pack and what values are in the data bases. The boot operation (the entire frame, the unit UC restore, or pack restore) is used to bring the UC or pack memory into agreement with the PMEM. When doing corrective action, remember that booting the frame can take as long as 30 minutes to complete, and removing an NPC causes all of its channels to be taken out of service.



NOTE:

Although you will want to take notice of all DGNDDET messages, you generally do not need to perform corrective action unless the same message recurs. **Provisioning commands that are not followed by a boot can cause DGNDDET messages with test numbers in the 220 to 237 range.**

1. Locate the following in the trouble message: the test number which appears after the DGNDDET keyword and the data bytes after the test number. These data bytes are referred to as dn through d0 in left-to-right order.

The following lists the frame audits in numerical ascending order along with the table the corrective action appears in:

Frame Audit	Table #
002	8-1
003	8-1
004	8-1
005	8-1
006	8-1
007	8-1
008	8-1
011	8-1
012	8-1
013	8-1
014	8-1
015	8-1
016	8-1
017	8-1
018	8-1
019	8-2
01A	8-2
01B	8-2
01C	8-2
01D	8-2
021	8-1
022	8-1
023	8-1
024	8-1
025	8-1
026	8-1
027	8-1
028	8-1
029	8-1
102	8-1
103	8-1
104	8-1

Frame Audit	Table #
105	8-1
106	8-1
112	8-1
113	8-1
114	8-1
115	8-1
116	8-1
121	8-1
122	8-1
123	8-1
125	8-1
126	8-1
127	8-1
128	8-1
131	8-1
132	8-1
133	8-1
135	8-1
136	8-1
150	8-1
151	8-1
152	8-1
154	8-1
155	8-1
156	8-1
157	8-1
160	8-1
161	8-1
162	8-1
163	8-1
164	8-1
165	8-1
166	8-1
167	8-1
168	8-1
171	8-2
172	8-2
173	8-2

Frame Audit	Table #
174	8-2
205	8-1
207	8-1
208	8-1
209	8-1
210	8-1
211	8-1
215	8-1
216	8-1
217	8-1
218	8-1
220	8-2
221	8-2
222	8-2
223	8-2
224	8-2
225	8-2
226	8-2
227	8-2
228	8-2
229	8-2
230	8-2
231	8-2
232	8-2
233	8-2
234	8-2
235	8-2
236	8-2
237	8-2
238	8-2
239	8-2
270	8-3
271	8-3
272	8-3
273	8-3
274	8-3
275	8-3
276	8-3

Frame Audit	Table #
277	8-3
278	8-3
279	8-3
27A	8-3
27B	8-3
27C	8-3
27D	8-3
27E	8-3
27F	8-3
280	8-3
281	8-3
282	8-3
283	8-3
284	8-3
285	8-3
286	8-3
287	8-3
288	8-3
289	8-3
28A	8-3
28B	8-3
28C	8-3
28D	8-3
28E	8-3
28F	8-3
290	8-3
291	8-3
292	8-3
293	8-3
294	8-3
295	8-3
296	8-3
297	8-3
298	8-3
299	8-3
29A	8-3
29B	8-3
29C	8-3

Frame Audit	Table #
29D	8-3
29E	8-3
29F	8-3
2A0	8-3
2A1	8-3
2A2	8-3
2A3	8-3
2A4	8-3
2A5	8-3
2A6	8-3
2A7	8-3
2A8	8-3
2A9	8-3
2AA	8-3
2AB	8-3
301	8-1
302	8-1
303	8-1
305	8-1
306	8-1
307	8-1
308	8-1
310	8-1
311	8-1
312	8-1
313	8-1
314	8-1
315	8-1
316	8-1
317	8-1

2. Refer to Table 8.1-1, 8.1-2, 8.1-3, or 8.1-4 to perform corrective action and consider the following:
 - If a facility NPC must be removed from service, all channels on that NPC will be out-of-service until the NPC is restored to service (restore operation completes).

- For a DGNDT on an NPC or facility, the NPC number is determined by converting the HEX pack value to decimal. See Figure 8.1-1 for an example and Table 8.1-4 for hexadecimal numbers from 1 to 160. To get the NPC number in other units, add 160 for each preceding unit.
- 3. If the DGNDT recurs and the unit controller has not already been removed and restored, enter **RMV-EQPT::UNIT-[q]q::UC;** and **RST-EQPT::UNIT-[q]q::UC;**
- 4. If the DGNDT message recurs and the frame has not already been booted, enter **STA-LOCL-RST::PRI;**
- 5. If any DGNDT number recurs, contact technical consultant for assistance.

**WARNING:**

When performing the prescribed corrective actions, remember that removing an NPC from service causes all of its channels to be taken out of service. This action should only be performed during non-peak traffic hours.

Table 8.1-1. Equipage/Provisioning

ttt =	Pack	Data Bytes*	Corrective Action
002	FTMI	d5=unit No.	Enter RMV-EQPT::UNIT-[q]q::UC; and RST-EQPT::UNIT-[q]q::UC;
003	FC	d4=pack No.	
007	UNIT	(NPCs - HEX No.)†	
032	DSPI		
008	ECCN	d4=ECCN side (0, 1)	Enter RMV-EQPT::CCI-s; and RST-EQPT::CCI-s;
011	NPC	d5=unit No. d4=NPC No. (HEX No.)†	Enter RMV-EQPT::NPC-<npc No.>; and RST-EQPT::NPC-<npc No.>;
021	CCN	d5=side (00 or 01)	(1) Remove and restore any Pack on subject side (2) Enter STA-LOCL-RST::PRI;
022	CCNI	d4=pack No.	
023	CCB		
024	TSI	TSI=d5,d4,d3	
025	CCN	d5=side (00 or 1)	Enter STA-LOCL-RST::PRI;
205	FTMI	d5=unit No.	(1) Enter RMV-EQPT and RST-EQPT commands for subject pack (2) Look for DGN-STF (3) If recurs, enter RMV-EQPT::UNIT-[q]q::UC; and RST-EQPT::UNIT-[q]q::UC;
207	FC	d4=pack No. (01-04)	
208	NPC	(NPCs=HEX No.)†	
209	NPC		
210	FC	d3=side, d4=FTMI d5=unit No.	Enter RMV-EQPT::UNIT-[q]q::FC-sf; and RST-EQPT::UNIT-[q]q::FC-sf;
301	CCN Group	d5=side	Remove and restore any pack on side. If side is active, go to other side first (SW-DX-EQPT::XC-a;)
302	TSI	TSI=d5,d4,d3	Enter commands to RMV-EQPT
303	CCB	d5=side, d4=CCB No.	and RST-EQPT subject pack
308	LINK	d5=link No. (01-06)	Enter commands to
* The data bytes occur in the following left-to-right order: d5 d4 d3 d2 d1 d0.			
† To obtain NPC number, convert HEX digits to decimal.			

ttt =	Data Bytes*	Corrective Action
004,005,006	d5=Unit No. d4=FTMI No. (01-04)	(1) Enter RMV : :UNIT [q]q, UC! and RST : :UNIT [q]q, UC! (2) If recurs, enter UTL : :BOOT, FRAME!
012,013,014,	d5=Unit No.	(1) Enter RMV : :UNIT [q]q, UC!

ttt =	Data Bytes*	Corrective Action
015,016,017 018	d4=NPC No. (HEX 01-A0)†	and RST::UNIT [q]q,UC! (2) Enter RMV::NPC <npc No.>! and RST::NPC <npc No.>!
026-029	d5=ECCN side (0,1)	Enter RMV::ETSI sqq! and RST::ETSI sqq!
211,215, 216,217, 218	d5=Unit No. d4=NPC No.	(1) Enter RMV::NPC <npc No.>! and RST::NPC <npc No.>! (2) If recurs, remove 2 NPCs, reseat pack, and restore
102,103,104, 105,106,112, 113,114,115, 116,125,126, 127,128,135, 136,154,155 156,157		Enter UTL::BOOT,FRAME!
121,122,123, 131,132,133, 150,151,152, 160,161,162, 163,164,165, 166,167,168	d5=Unit No. d4=NPC No.	Enter RMV::UNIT [q]q,UC! and RST::UNIT [q]q,UC!
305,306,307, 310,311,312, 313,314,315	d5=SYNC side (0,1) d4=TLI No. (01-04) (except for ttt=305, 312, 313, 314)	(1) If TLI is named, remove and restore SYNC TLI (2) Enter ULT::QRY,STATE,SYNC! and look for SOURCE TLI,MATE (3) Enter RMV::SYNC a! and RST::SYNC a! (byte d5=sync side)
316,317	d5=ECCN side (0,1)	Enter RMV::CCI s! and RST::CCI s!

* The data bytes occur in the following left-to-right order: d5 d4 d3 d2 d1 d0.

† To obtain NPC number, convert HEX digits to decimal.

Table 8.1-2. Facility Error Thesholds

ttt =	Data Bytes*	Corrective Action
171,172,173 174	d5=Unit No. d4=NPC No.	RMV-EQPT::NPC-<npc No.>; and RST-EQPT::NPC-<npc No.>;
019,01A,01B 01C,01D	d5=Unit No. d4=NPC No.†	RMV-EQPT::UNIT-[q]q::UC; and RST-EQPT::UNIT-[q]q::UC;
220,221,222,223,224, 225,226,227,228,229, 230,231,232,233,234, 235,236,237,238,239	d5=Unit No. d4=NPC No.†	RMV-EQPT::NPC-<npc No.>; and RST-EQPT::NPC-<npc No.>;
* The data bytes occur in the following left-to-right order: d5 d4 d3 d2 d1 d0.		
† To obtain NPC number, convert HEX digits to decimal.		

)

Table 8.1-3. Subscriber Carrier and Subrate Data

ttt =	Data Bytes*	Corrective Action
033,034,035,036, 037,038,039,042,	d5=Unit No. d4=NPC (for 251)	RMV-EQPT::UNIT-[q]q::UC; and RST-EQPT::UNIT-[q]q::UC;
050,052,250,251, 055,056,057,058, 059,060,061,062 063,064,065,066, 086,089-091,093, 095	d5=Unit No. d4=RT/DL (coded - internal number)	RMV-EQPT::UNIT-[q]q::UC; and RST-EQPT::UNIT-[q]q::UC;
05A	d0=Unit No.	RMV-EQPT::UNIT-[q]q::UC; and RST-EQPT::UNIT-[q]q::UC;
05B	d0=1(frame), 2(unit), 3(channel) or 4(time slot) d3=NPC No. (if applicable) d4=Unit No. (if applicable)	RMV-EQPT::UNIT-[q]q::UC; and RST-EQPT::UNIT[q]q::UC;
05C	d0-d5=not used	STA-LOC-RST::PRI;
069-074,076-081, 084	d4=MJU/SRM/chan. No. d1=NPC No.	RMV-EQPT::NPC-<npc No.>::SIDE-s; and RST-EQPT::NPC-<npc No.>::SIDE-s;
240,241,242	d4=Unit No. d5=NPC No.	RMV-EQPT::NPC-<npc No.>; and RST-EQPT::NPC-<npc No.>;
* The data bytes occur in the following left-to-right order: d5 d4 d3 d2 d1 d0.		

ttt =	Data Bytes*	Corrective Action
009,00A,	d4=Entity No.	RMV-EQPT::UNIT-[q]q::UC;
00B,00C	d5=Unit No.	RST-EQPT::UNIT-[q]q::UC;
03B,03C,03D,	d4=Entity No.	RMV-EQPT::UNIT-[q]q::UC;
03E,03F	d5=Unit No.	RST-EQPT::UNIT-[q]q::UC;
040,041,042,	d4=Entity No.	RMV-EQPT::UNIT-[q]q::UC;
043,044,045	d5=Unit No.	RST-EQPT::UNIT-[q]q::UC;
046,047		
253,254,255,	d4=Entity No.	RMV-EQPT::UNIT-[q]q::UC;
256,257,258,	d5=Unit No.	RST-EQPT::UNIT-[q]q::UC;
259,25A,25B,		
25C,25D,25E,		
25F		
048,049,04A,	d5=Unit No.	RMV-EQPT::UNIT-[q]q::UC;
04B,04C,04D		RST-EQPT::UNIT-[q]q::UC;
260,261,262		
263,264,265		
323,324,325,	d4=MXR No.	RMV-EQPT::UNIT-[q]q::UC;
326,327,328,	d5=Unit No.	RST-EQPT::UNIT-[q]q::UC;
329,32A		
320,321,322	d4=NPC No.	RMV-EQPT::UNIT-[q]q::UC;
32B,32C,32D,	d5=Unit No.	RST-EQPT::UNIT-[q]q::UC;
32E,32F,330,		
331,332,333,		
334,335,336		
* The data bytes occur in the following left-to-right order: d5 d4 d3 d2 d1 d0.		

ttt=	Data Bytes*	Corrective Action
270,271,272,273,	d0 Long ANSI threshold value in hardware	(1) Verify the threshold value
274,275,276,277,	d1 Long ANSI threshold value in hardware	in the database is correct.
278,279,27A,27B,	d2 Long ANSI threshold value in hardware	(2) Enter STA-LOCL-RST::PRI
27C,27D,27E,27F,	d3 Long ANSI threshold value in hardware	
280,281,282,283,	d4 Long ANSI threshold value in database	
284,285,286,287,	d5 Long ANSI threshold value in database	
288,289,28A,28B,	d6 Long ANSI threshold value in database	
28C,28D,28E,28F,	d7 Long ANSI threshold value in database	
	d8 NPC number	

ttt=	Data Bytes*	Corrective Action
	d9 UNIT number	
290,291,292,293,	d0 Long 30-channel threshold value	(1) Verify the threshold value in the database is correct. (2) Enter STA-LOCL-RST::PRI
294, 295,296,297,	d1 Long 30-channel threshold value	
298,299,29A,29B,	d2 Long 30-channel threshold value	
29C, 29D,29E,29F,	d3 Long 30-channel threshold value	
2A0, 2A1,2A2,2A3,	d4 Long 30-channel threshold value	
2A4, 2A5,2A6,2A7,	d5 Long 30-channel threshold value	
2A8, 2A9,2AA,2AB	d6 Long 30-channel threshold value	
	d7 Long 30-channel threshold value	
	d8 NPC number	
	d9 UNIT number	

Powers of 16 = $16^3 16^2 16^1 16^0$
Example: Hex = 005A
Decimal Number = (0×16^3)
 $+ (0 \times 16^2)$
 $+ (5 \times 16^1)$
 $+ (A \times 16^0)$, where $16^0 = 1$
0s = $(0 \times 0) = 0$
5 = $(5 \times 16) = 80$
A = $+ (A \times 1) = 10$, where $A = 10$
Decimal Number = 90
(NPC Number = 90 + 1 because internal count started with 0)
Hex Characters: = A = 10, B = 11, C = 12, D = 13, E = 14, F = 15

Figure 8.1-1. Hexadecimal-to-Decimal Conversion Example

Table 8.1-2. Hexadecimal Numbers

(1) 01	(21) 15	(41) 29	(61) 3D	(81) 51	(101) 65	(121) 79	(141) 8D
02	16	2A	3E	52	66	7A	8E
03	17	2B	3F	53	67	7B	8F
04	18	2C	40	54	68	7C	90
05	19	2D	41	55	69	7D	91
06	1A	2E	42	56	6A	7E	92
07	1B	2F	43	57	6B	7F	93
08	1C	30	44	58	6C	80	94

Table 8.1-2. Hexadecimal Numbers

09	1D	31	45	59	6D	81	95
(10) 0A	(30) 1E	(50) 32	(70) 46	(90) 5A	(110) 6E	(130) 82	(150) 96
0B	1F	33	47	5B	6F	83	97
0C	20	34	48	5C	70	84	98
0D	21	35	49	5D	71	85	99
0E	22	36	4A	5E	72	86	9A
0F	23	37	4B	5F	73	87	9B
10	24	38	4C	60	74	88	9C
11	25	39	4D	61	75	89	9D
12	26	3A	4E	62	76	8A	9E
13	27	3B	4F	63	77	8B	9F
(20) 14	(40) 28	(60) 3C	(80) 50	(100) 64	(120) 78	(140) 8C	(160) A0

Clear DGNDT Message 82001 or AUD 82004 Trouble

8.2

When to Use Use this procedure to clear DGNDT Message 82001 or AUD 82004 trouble.

Instructions

1. Are you clearing message 82004?
 - If MC keyword is in the message, continue with Step 2.
 - If not, from Table 8.2-1 determine which circuit failed the DGNDT diagnostic using the circuit abbreviation and data in the output message.
2. Enter the diagnostic command from Table 8.2-2 for the circuit named in the DGNDT message. The abbreviations for the circuits in the table match the message keywords.
3. If DGN-EQPT ...STF message is received, refer to the procedure in *Manual Diagnostic Failures* to clear the trouble.
 - If the message is not received, there is no hardware trouble at this time; the autonomous diagnostic may have resulted from an error situation that cleared up.

Table 8.2-1. Circuit Pack Identification

Circuit	3-Digit Field (eee)	Data Byte (d0)
ETSI	eee = side (000.001)	d0 = left,right=from,to
SYN (SYNC)	= side	= 00
UFC (FC)	= unit (001-016)	= 00
FTM (FTMI)	= unit	= FTMI No. (01-04)
ECCN (CCI)	= CCI (000/001)	= 00
NPC	= NPC (001-640)	= 00
LNK (LINK)	= link (001-006)	= 00
TLI	= sync side (00/001)	= TLI No. (01-04)
CRO	= sync side	= TLI No. (03)
UNI (UNIT)	= unit (001-016)	= 00
DSP (DSPI)	= DSPU	= not used
FMT 0qs	= unit (q) and side (s)	= not used
CCB	= side	= CCB No. (01-06)
CCN(CCNI)	= CCNI (000/001)	= 00
FLI 0qk	= unit (q) and side (k)	= not used
MXR 0qc	= unit (q) and MXR (c)	= not used
MIU 0qc	= unit (q) and MIU (c)	= not used

Table 8.2-2. Diagnostic Commands

Circuit (Abbrev.)	Command
EBX	DGN-EQPT::MC;
MTC (MT)	DGN-EQPT::MC;
CI	DGN-EQPT::CI;
PMEM	DGN-EQPT::PMEM;
SYNC	DGN-EQPT::SYNC-a;
CRO	DGN-EQPT::SYNC::TLI-3:CRO;
TLI	DGN-EQPT::SYNC-a::TLI-n;
UC	DGN-EQPT::UNIT-[q]q::UC;
FTMI	DGN-EQPT::UNIT-[q]q::FTMI-d;
DSPI	DGN-EQPT::UNIT-[q]q::DSPI;
FC	DGN-EQPT::UNIT-[q]q::FC-sb;
CCI	DGN-EQPT::CCI-s;
ETSI	DGN-EQPT::ETSI-sqq;
CCNI	DGN-EQPT::CCNI-s;
CCB	DGN-EQPT::CCB;
TSI	DGN-EQPT::TSI-sft;
NPC	DGN-EQPT::NPC-<npc No.>::[SIDE-s][:INCL];
SMEM	DGN-EQPT::SMEM;
LINK	DGN-EQPT::LINK-j;
FMT	DGN-EQPT::UNIT-[q]q::FMT-s;
FLI	DGN-EQPT::UNIT-[q]q::FLI-{S P};
MXR	DGN-EQPT::UNIT-[q]q::MXR-c
MIU	DGN-EQPT::UNIT-[q]q::MIU-c;

When to Use Use this procedure to clear DGNDT Message 82003.

Instructions

LOOK AT STEPS 1 AND 2 BEFORE READING THIS OVERVIEW. This procedure deals with the frame audit which results because there is a difference between the MP memory data base and the PMEM data base. If the message data bytes show that the RAM is not corrupted, the discrepancy will be cleared with the next automatic transfer from RAM to PMEM. However, if the RAM data is invalid, either an immediate BOOT is needed or, if an automatic transfer has already placed the data onto the PMEM, the corrupted PMEM trouble will have to be cleared.

1. Look at the value of data bytes d5 through d1 which are the five bytes just after the test number on the last line of the DGNDT message.
2. If these bytes equal FF, immediately enter **STA-LOCL-RST : :PRI ;**.



NOTE:

The FF bytes indicate that the RAM data is invalid. Entering the BOOT will update the RAM data base from the PMEM and will resolve the problem provided the automatic transfer from RAM to PMEM has not already occurred. This automatic transfer occurs approximately every 15 minutes, and if it occurred, the PMEM has

been corrupted which will result in another trouble message and error recovery (ERR message).

- If these bytes do not equal FF, the discrepancy may be temporary until the next automatic transfer (unless it can be done manually by a command). If the message recurs, there may be a problem; contact technical consultant for assistance.
-

Software Error
General Task

9

Contents

- Clear REPT ERR SOFTWARE Message

GT 9.1-1

Clear REPT ERR SOFTWARE Message

9.1

When to Use Use this procedure to clear REPT ERR SOFTWARE message.

Instructions

This procedure checks the results of the software error recovery action and gives the meanings of the error types. Unless the message indicates that it is only a REPORT, the recovery action will occur autonomously and will correct the problem via a command abort, a boot, a processor removal, the MC going to MCOND, or the processor being "parked" in the inoperative state. The only manual operations required are to: respond to MP, CI, or UC removals/parking, reset/boot failures, and reenter commands that were aborted. If error recurs, the DACS II may escalate the recovery operation. For example, if entry of a command reveals the error and brings a boot, the next occurrence may bring a circuit removal.

1. In the message lines of the REPT EVT ...ERR SOFTWARE message, ERR SOFTWARE message, note the ACTION that was autonomously initiated. The PROC (process) named in the message is the one that found the error. Table 9.1-1 gives the meaning of the ERROR TYPE that is named in the message.
2. Check the output message to see which autonomous recovery action is reported.
 - If **PARK MC/CI** or **PARK UC**, continue with Step 3.

- If **CDBOOT**, proceed to Step 4.
 - If **MCOND**, proceed to Step 5.
 - If some **other action**, proceed to Step 6.
3. For PARK MC/CI, hold the **RESET ENABLE** switch to **ON** and momentarily press the **RESET** button on the DACS II status panel. For PARK UC, enter **RST-EQPT: :UNIT- [q]q: :UC;** for the unit number (1 through 16).
 4. If MC RESET COMPLD message (with no error explanations) or RST-COMPLD message is received, proceed to Step 11.
 - If MC RESET COMPL message (with COND code) is received, refer to *Data Base Troubles* to clear the trouble.
 - If MC RESET stopped is received, refer to *Controller and Link Troubles* to clear the trouble.
 - If DGN ...STF message is received for restore UC, refer to *Manual Diagnostic Failures* to clear the diagnostic trouble.
 - If other denial message is received for restore UC, find the reason for denial in the output message and perform corrective action to obtain command completion.
 5. Enter **DGN-EQPT: :MC;** or separately diagnose the MP.

**NOTE:**

The MC MCOND message in the printout shows that the MC is in the maintenance condition. Commands that were aborted when the software error was detected must be reentered after the trouble is cleared.

- If DGN ...STF message is received, refer to *Manual Diagnostic Failures* to clear the failed diagnostic.
 - If DGN ...STF message is not received, proceed to Step 12.
6. Check associated messages in printout to determine whether initial autonomous action was completed or denied. If denied, check if some other action resulted.
 - If MP was removed (RCY REMOVE MP) or parked, continue with Step 7.
 - If not, proceed to Step 8.
 7. If MC was removed, enter **RST-EQPT: :MC;**.. If MC was parked, reset frame using the **RESET ENABLE** switch and the **RESET** button on DACS II status panel. Then proceed as follows:
 - If **RST MC error explanation occurs**, refer to *Data Base Troubles* to clear the trouble.

- If **reset startup diagnostic or boot fails**, refer to *Controller and Link Troubles* to clear the trouble.
 - If **other response**, proceed to Step 10.
8. Check for DGN ...STF messages in the recovery sequence, enter **RTRV-STATE-COM: : : :ALL;**, and check the output for failed plug-ins (indicated by 1s in the failed position of the out-of-service, failed, pested groupings for the plug-ins).
 9. If the recovery ACTION from the ERR SOFTWARE message is listed below, perform the corrective action:
 - REMOVE - Replace failed plug-in and enter command to restore plug-in to service per Figure 9.1-1.
 - WMBOOT - If the action was denied, enter **STA-LOCL-RST: :PMEM;**.
 - HWBOOT - If the action was denied, enter the command to restore the plug-in to service per Figure 9.1-1
 - REPORT - Respond to the COND completion or denial of the command that brought the ERR SOFTWARE message.

verb:[xy]:<CP identification>:[ww]{} or {}:<additional info.>;

{RMV-EQPT:: SYNC-a; a = 0 or 1
 /RST-EQPT:: SYNC-a:[ww]:TLI-n[:SSP-b]; n = 1-4; b = sync port (0 or 1)
 /DISC-EQPT:: SYNC:[ww]:TB
 /DGN-EQPT:: CCI-s; s = side 0 or 1
 CCNI-s; s = side 0 or 1
 ETSI-sqq; qq = unit 01-16
 TSI-sft; f = unit (receiving from) (1-6)
 CCB-sf; t = unit (transmitting to) (1-6)
 ETSIS,ECCN-s;
 UNIT-[q]q:[ww]:UC; [q]q = unit 01-16
 UNIT-[q]q:[ww]:{FTMI-d|DSPi}; d = module interface 1-4
 UNIT-[q]q:[ww]:FC-sd; sd = FC side (0,1) and FC No. (1-4)

NPC-<npc No.>:[ww]:[SIDE-s]; <npc No.> = NPC No.
 s = SIDE for DSPU
 LINK-j; j = link 1-6

Figure 9.1-1. Commands to Restore Plug-Ins

10. If the corrective action is completed, proceed to Step **13**.
 - If not, continue with Step **11**.
11. If the ERROR TYPE is listed below, perform the additional corrective action (if not already done autonomously) as follows:
 - CHECKSUM/DBCHECKSUM - Repeated errors on same processor indicate a failure or PMEM corruption.
 - HARDWARE - Look for ERR HARDWARE messages or other pack failure messages.
 - EXCESSIVE INT - If trouble recurs (processor parked), notify technical consultant.
 - RAMTEST - If trouble recurs (processor removed), replace the associated pack (MP, EBX, BX, CI, or UC) and enter command to restore MC or UC processor.
12. If the additional corrective action is completed, continue with Step **13**.
 - If not, refer trouble to technical consultant who will use the raw data bytes to further analyze the trouble.

13. Reenter the command that brought the ERR SOFTWARE message. This command will have either been aborted, denied, or have a conditional completion.

**NOTE:**

REPT DGNDT messages may also occur because of discrepancies that result if CPY MEM ...WKG,PMEM (RAM to PMEM) preceded a boot.

14. If the command is completed, you have completed this procedure.

- If the command is not completed, refer trouble to technical consultant who will use the raw data bytes to further analyze the trouble.

Table 9.1-1. Software Error Explanation

Error Type	Explanation
JOURNAL	Failure to record command on PMEM journal.
DATABASE	Failure of software to access data base.
PMEM	Failure of software to access PMEM.
SMEM	Failure of software to access SMEM.
COMMUNICATIONS	Process-to-process communications failure.
CPUDGN	Failure of CPU diagnostic.
MACHINE	Operating system error.
PROGRAM	Internal program failure or error.
CHECKSUM	Memory failure/corruption.
RECOVERY	Recovery-to-recovery problem.
REMOTE PROGRAM	Program error encountered on other processor local process report.
EXCESSIVE INT	Internal problem was causing repeated error handling; so, MC or UC was parked.
RAMTEST	Processor RAM failed test and was removed.
HARDWARE	Hardware write failed; possible hardware failure.
Action	Explanation
RSCOLDBT	Super cold boot.
REPORT	Report only; no action taken.
HWBOOT	Hardware boot from existing data base.
WMBOOT	Boot of data base from PMEM and boot hardware (warm boot).
CDBOOT	Boot entire processor data base and executables and boot processor hardware.
REMOVE	Remove named processor from service.
MCOND	Place MC in maintenance condition.
PARK	Park named processor in inoperative state.

TS0 and C-Bit Messages

General Tasks

10

Contents

■ Clear TS0 R OLD, NEW Message	GT 10.1-1
■ Clear TS0MBOFL Message	GT 10.2-1
■ Clear CBOFL Message	GT 10.3-1
■ Check Status of C-Bits Message	GT 10.4-1
■ Enter C-Bit Query Commands	GT 10.5-1

When to Use Use this procedure to clear a TS0 R OLD, NEW message.

Instructions

This message reports a change of state of TS0 (time slot 0) bits which have been designated for monitoring by the ED TS0M command. These spare bits include bits 3, 4, and 5 if those bits have not been designated to send alarms during NPC growth and all the other spare bits in TS0. The normal state of these monitored bits is set by the change command, and the changed state is used to indicate some miscellaneous alarm condition.

1. Compare the NEW field with the OLD field in the message to determine which bit changed state; the NPC number also appears in the message. A dash (-) means the bit is not designated for monitoring.
2. The eight bits are represented as "abcdefgh" in the command and message manuals and are identified in Table 10.1-1.

Table 10.1-1. Bit Identification

Variable	Meaning
a and b	International Bit (Si) in Frame and Not Frame Words (Only frames 13 and 15 with CRC enabled)
c	Not Selectable - Remote Alarm Indication
defgh	National Bits (b4 through b8)

3. If there is not a centralized maintenance center that monitors alarms, notify far-end personnel that the bit has changed state and determine which alarm condition is indicated by the change.

When to Use Use this procedure to clear a TS0MBOFL message.

Instructions

This buffer overflow message is registered for an NPC when the number of change occurrences for the monitored time slot 0 bits exceeds the capacity of the NPC buffer. Once an overflow occurs, the NPC stops monitoring TS0 bits until the restore TS0M command is entered at the DACS II.

1. To quickly check which TS0 bits are being monitored on the NPC, enter **RTRV-STATE-EQPT::NPC-<npc No.>[&&[&]-<range>]::TS0-s;**
The presence of 1s in the output word indicates which bits are monitored; the buffer overflow will also be indicated in the output. Table 10.2-1 identifies the bit positions in TS0.

Where:

- <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
<range> = Last NPC in a continuous range.
 Third ampersand is for hierarchical.

Table 10.2-1. TS0 Bit Identification

Variable	Meaning
a and b	International Bit (Si) in Frame and Not Frame Words (Only frames 13 and 15 with CRC enabled)
c	Not Selectable - Remote Alarm Indication
defgh	National Bits (b4 through b8)

2. Enter **RTRV-STATE-EQPT::NPC-<npc No.>**; to check for high error counts for the facility parameters See Table 10.2-2. For PA type NPCs, refer to Table 10.2-3.
 - If high facility errors are found, you may need to clear the facility error problem per *Facility Alarms*.
 - If high facility errors were NOT found, either the alarm condition being indicated by the spare TS0 bits exists or the equipment has not been provisioned correctly to do the monitoring.

Table 10.2-2. Facility Status Keywords

Keyword	Meaning	Output Information
OOS/FAIL/ PEST PBA	Out-of-Service/ Failed/Pested Primary Block Alarm	1 = NPC out-of-service/failed/pested. R = red alarm, Y = yellow alarm, A = AIS, B = BER, E = REER, I = RAIS, L = LMA, M = R16, S = sync fail indication, V = A16, X = EER, 1 = PBA, or 0 = no PBA.
DM	Degraded Minutes	First line under header gives the number of occurrences. Second line gives the alarm threshold. Third line gives the selected option for alarm threshold 0 (default) or 1, 2, or 3 (defined options in data base).
SERS	Severe Errored Seconds	Same format as for DM.
ERS	Errored Seconds	Same format as for DM.
US	Unavailable Seconds	Same format as for DM.
SLIP	Timing Slip	Same format as for DM.
CRC	Cyclic Redundancy	Same format as for DM.
FRER	Frame Bit Error	Same format as for DM.

Table 10.2-2. Facility Status Keywords

Keyword	Meaning	Output Information
LOFA	Loss of Frame Alignment	Same format as for DM.
MER	Multiframe Alignment Error	Same format as for DM.
COFA	Change of Frame Alignment	Same format as for DM.

Table 10.2-3. Facility Status Keywords (PA Type NPCs)

Keyword	Meaning	Output Information
OOS/FAIL/ PEST	Out-of-Service/ Failed/Pested	1 = NPC out-of-service/failed/pested.
PBA	Primary Block Alarm	0 = No PBA. 1 = PBA exists for one or more of the following: LOS - loss of signal LOF - loss of frame AIS - alarm indication signal EER - excessive error rate RAI - remote alarm indication LMA - loss of multiframe alignment LCMA - loss of CRC4 multiframe alignment BER - bit error rate A16 - AIS received in time slot 16 RAIS - remote AIS RBER - remote bit error rate RMA - remote multiframe alarm SFI - synchronization failure indication PFWOOF - pseudo frame word out-of-frame FLCMA - far-end LCMA. A 1 under any of the headings listed above indicates that the condition exists.
CRC	Cyclic Redundancy Code	First line under header gives the number of occurrences. Second line gives the alarm threshold. Third line gives the selected option for alarm threshold 0 (default) or 1, 2, or 3 (defined options in data base).
FRER	Framing Errors	Same format as for CRC.
OFS	Out-of-Frame Seconds	Same format as for CRC.
ES	Errored Seconds	Same format as for CRC.
SES	Severely Errored Seconds	Same format as for CRC.
CSS	Controlled Slip Seconds	Same format as for CRC.
CV	Coding Violations	Same format as for CRC.
UAS	Unavailable Seconds	Same format as for CRC.
UATC	Unavailable Time Count	Same format as for CRC.
MER	Multiframe Errors	Same format as for CRC.
FEBE	Far-End Block Errors	Same format as for CRC.
FES	Far-End ES	Same format as for CRC.
FSES	Far-End SES	Same format as for CRC.
FUAS	Far-End UAS	Same format as for CRC.

3. If you want to change (or disable) the TS0 monitoring for the NPC, enter **ED-PRMTR-EQPT:[xy]:NPC-<npc No.>[&&[&]-<range>]:[ww]:TS0-abcdefgh;**

Where:

- <npc No.> = NPC number to be changed.
- <range> = Optional, last NPC of continuous range of NPCs.
Extra ampersand (&) needed for hierarchical.
- TS0 Field = Variables a through h represent bits per Table 10.2-1.
The values for the bits are: 0, 1, P, or dash (-). P is for
passed-through (unchanged), and a dash is for not
affected.

The dash means that the bit will not be affected by this change. In other words, the existing setting or default will be maintained.

The defaults for the TS0 bit settings are: 11011111 (for all types except TRANSMIC 1G) and 11000000 (for TRANSMIC 1G).

- If the command is denied, find the explanation for the denial in the output message and perform corrective action to obtain command completion.
4. Check the OLD and NEW fields in the output message to verify that the information was entered correctly.
 5. To restore monitoring on the NPC after the overflow condition is cleared, enter **ED-PRMTR-EQPT:[xy]:NPV-<npc No.>[[&]&-<range>]:[ww];**

When to Use Use this procedure to clear a CBOFL message.

Instructions

A buffer overflow message is registered for a CPR pack when the number of C-bit change reports exceeds the capacity of the buffer (approximately 1024). Once an overflow occurs, the CPR stops monitoring C-bits until a restore MON command is entered at the DACS II. The buffer overflow message names the involved CPR pack and the facility NPCs with messages in the CPR and the C-bit activity for the 30 channels on those facility NPCs.

1. Notice the reporting CPR number and notice whether particular facility NPCs are reporting larger numbers of C-bit changes than the others. Each of the 15 digits after the facility NPC number represents two channels. See Figure 10.3-1.

Hexadecimal word (X-abcdefghijklmno):

Digit a = represents channels 1 and 2

Digit b = represents channels 3 and 4

Digits c-n = represents channels 5 to 28

Digit o = represents channels 29 and 30

Each Hex Digit Decodes into Four

Binary Bits (for Two Channels)

Which Have Following Meaning:

00 = no activity

01 = one change

10 = 2 to 5 changes

11 = more than 5 changes

HEX A=1010, B=1011, C=1100, D=1101,

E=1110, F=1111

Figure 10.3-1. Construction of Hexadecimal Word

2. If particular facility NPCs have higher C-bit change counts, check for error messages on those facilities and enter **RTRV-STATE-EQPT: :NPC-<npc No.>**; for the NPCs to check for high error counts for the facility parameters See Table 10.3-1. For PA type NPCs, refer to Table 10.3-2.

Where <npc No.> = NPC number, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

**NOTE:**

To avoid tying up the link with changed state messages from all the channels being monitored, you will have to find the cause of the overflow before you restore monitoring.

- If high facility errors are found, you may need to clear the facility error problem per *Facility Alarms*.
- If high facility errors were NOT found, either the excessive C-bit changes are occurring because of conditions on the circuits or the equipment has not been provisioned correctly to do the monitoring.

3. To stop the C-bit pattern insertion to channels connected to the CPR pack, enter the following for the circuit or range: **ED-PRMTR-EQPT:[xy]:<npc No.>-ddd[&&-eee]:[ww]:BCOFF[:INCL];**

Where:

- <npc No.> = NPC number of facility termination, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).
- ddd = Channel number (01 through 30) on same NPC for subject circuit.
- eee = Optional, to name last channel of range of circuits associated with same CAS signal; up to 30 channels.
- INCL = Required to change C-bit pattern designated as red special circuit.

- If the command is denied, find the reason for the denial and perform corrective action to obtain command completion.

4. If you want to change (or disable) monitoring the C-bits for channels of particular facilities, enter for the circuit or range of circuits connected to the CPR pack:

ED-PRMTR-EQPT:[xy]:<npc No.>-ddd[&&-eee]:[ww]:DD-m,w;

Where:

- m,w = Specifies monitoring (m) and/or writing (w) the c-bit pattern at the CPR pack. Enter one of the following for each: 1 to enable, 0 to disable, and a dash (-) for no change from existing.

- If command is denied, find the reason for the denial and perform corrective action to obtain command completion.

5. To restore monitoring after an overflow, enter the following command for the CPR pack named in the overflow message: **RST-EQPT:[xy]:NPC-<npc No.>:[ww]:MON;.**



NOTE:

After the completion message, there will be accompanying information messages showing that monitoring of c-bits has been restored on the connecting NPCs.

Table 10.3-1. Facility Status Keywords

Keyword	Meaning	Output Information
OOS/FAIL/ PEST PBA	Out-of-Service/ Failed/Pested Primary Block Alarm	1 = NPC out-of-service/failed/pested. R = red alarm, Y = yellow alarm, A = AIS, B = BER, E = REER, I = RAIS, L = LMA, M = R16, S = sync fail indication, V = A16, X = EER, 1 = PBA, or 0 = no PBA.
DM	Degraded Minutes	First line under header gives the number of occurrences. Second line gives the alarm threshold. Third line gives the selected option for alarm threshold 0 (default) or 1, 2, or 3 (defined options in data base).
SERS	Severe Errored Seconds	Same format as for DM.
ERS	Errored Seconds	Same format as for DM.
US	Unavailable Seconds	Same format as for DM.
SLIP	Timing Slip	Same format as for DM.
CRC	Cyclic Redundancy	Same format as for DM.
FRER	Frame Bit Error	Same format as for DM.
LOFA	Loss of Frame Alignment	Same format as for DM.
MER	Multiframe Alignment Error	Same format as for DM.
COFA	Change of Frame Alignment	Same format as for DM.

Table 10.3-2. Facility Status Keywords (PA Type NPCs)

Keyword	Meaning	Output Information
OOS/FAIL/ PEST	Out-of-Service/ Failed/Pested	1 = NPC out-of-service/failed/pested.
PBA	Primary Block Alarm	0 = No PBA. 1 = PBA exists for one or more of the following: LOS - loss of signal LOF - loss of frame AIS - alarm indication signal EER - excessive error rate RAI - remote alarm indication LMA - loss of multiframe alignment LCMA - loss of CRC4 multiframe alignment BER - bit error rate A16 - AIS received in time slot 16 RAIS - remote AIS RBER - remote bit error rate RMA - remote multiframe alarm SFI - synchronization failure indication PFWOOF - pseudo frame word out-of-frame FLCMA - far-end LCMA. A 1 under any of the headings listed above indicates that the condition exists.
CRC	Cyclic Redundancy Code	First line under header gives the number of occurrences. Second line gives the alarm threshold. Third line gives the selected option for alarm threshold 0 (default) or 1, 2, or 3 (defined options in data base).
FRER	Framing Errors	Same format as for CRC.
OFS	Out-of-Frame Seconds	Same format as for CRC.
ES	Errored Seconds	Same format as for CRC.
SES	Severely Errored Seconds	Same format as for CRC.
CSS	Controlled Slip Seconds	Same format as for CRC.
CV	Coding Violations	Same format as for CRC.
UAS	Unavailable Seconds	Same format as for CRC.
UATC	Unavailable Time Count	Same format as for CRC.
MER	Multiframe Errors	Same format as for CRC.
FEBE	Far-End Block Errors	Same format as for CRC.
FES	Far-End ES	Same format as for CRC.
FSES	Far-End SES	Same format as for CRC.
FUAS	Far-End UAS	Same format as for CRC.

When to Use

Use this procedure to check the status of C-bit messages.

Instructions

Receipt of this message shows that either the c-bit pattern on a facility has changed or the status of the c-bits has changed to idle (all 0s) or network alarm. If the pattern changed, the new pattern will be given so that it can be decoded to see which bits changed. The facility NPC number in the message relates the c-bits to the circuits (liaisons).

1. Read what is given under the STATUS OF C-BITS part of the message. It will be one of the following:
 - “ZO” which means that there is an all 0 (idle) pattern of C-bits
 - “NA” which means that the normal or prescribed pattern of C-bits has been interrupted because of a network alarm
 - The 4-digit hexadecimal word of the form X-abcd which gives the new C-bit pattern. See Figure 10.4-1 to decode the bits.

Hexadecimal word (X-abcd):

Digit a = bits 0,1,2,3 of C-bit pattern

(Note: Bits 0 and 1 cannot be set;
thus, valid values are a=0,1,2, or 3)

Digit b = bits 4,5,6,7

Digit c = bits 8,9,10,11

Digit d = bits 12,13,14,15

Figure 10.4-1. Construction of Hexadecimal Word

2. Notice the NPC number which relates the message to a facility and circuit (liaison).
-

Enter C-Bit Query Commands

10.5

When to Use

Use this procedure to Enter C-Bit Query Commands.

Instructions

1. Proceed as follows for the type of information that is required:
 - If **DIRECTOR FUNCTIONS OF C-BIT(S) FOR CHANNEL/ CHANNEL RANGE**, continue with Step 2.
 - If **DIRECTOR FUNCTIONS ON NPC/NPC RANGE**, proceed to Step 3.
 - If **C-BIT STATE AND PATTERN FOR CHANNEL**, proceed to Step 4.
 - If **C-BIT STATE AND PATTERN FOR NPC/NPC RANGE**, proceed to Step 5.
2. Enter the following command for the desired channel or range of continuous channels: **RTRV-STATE-EQPT:[xy]:<npc No.>-ddd[&&-fff]:[ww]:DD;**

Where:

- xy = Optional, DACS II unique ID (target ID); up to 20 characters.
- ww = Optional, command correlation number; up to 10 characters.
- <npc No.> = NPC number of facility or bridging NPC, either

extended (for example, [0]001) or hierarchical (for example, 01-1-01).

ddd = Channel number of circuit (liaison); 01 through 30.

fff = Optional, last channel of range of channels on same NPC; maximum range 30.

- If command is denied, find the reason for the denial in the output message and perform corrective action to obtain command completion.

Proceed to Step 6.

3. Enter the following command for the desired NPC or range of NPCs:

RTRV-STATE-EQPT:[xy]:NPC-<npc No.>[&&[&]-<range>]:[ww]:DD;

or to see all transmit director DACS II c-bits enter

RTRV-STATE-EQPT:[xy]::[ww]:ALL:DDCT};

Where:

<npc No.> = NPC number of facility or bridging NPC, either extended (for example, [0]001) or hierarchical (for example, 01-1-01).

<range> = Optional, last NPC number of range of NPCs.

{DD | DDCT} = Either DD for director DACS II or DDCT for director DACS II with data base coherence feature.

- If the command is denied, find the reason for the denial in the output message and perform corrective action to obtain command completion.

Proceed to Step 6.

4. Enter the following command for the desired circuit (liaison):

RTRV-STATE-EQPT:[xy]:<npc No.>-ddd:[ww]:BC-s;

Where : s = Selects C-bit information (state and pattern) for either C-bits received by CPR (s = R) or transmitted from CPR (s = T).

- If the command is denied, find the reason for denial in the output message and perform corrective action to obtain command completion.

Proceed to Step 6.

5. Enter the following command for the desired NPC or range of NPCs:

RTRV-STATE-EQPT:[xy]:NPC-<npc No.>[&&[&]-<range>]:[ww]:BC-s;

or to see all C-bit patterns enter **RTRV-STATE-EQPT:[xy]::[ww]:BC-**

D:ALL;

Where: s = Selects C-bit information (state and pattern) for either C-bits received by CPR (s = R or D) or transmitted from CPR (s = T). Option D gives a condensed format; ALL command can only be used with s = D.

- If the command is denied, find the reason for denial in the output message and perform corrective action to obtain command completion.
6. Read the information from the output message using the following guidelines:
- For the "Provisioning of C-BIT as DD" output for the RTRV ...DD query, "0" means not selected and "1" means selected. The output for each channel is in the form -mw for monitor, write; this format is repeated for all channels on NPC or range of NPCs as requested.
 - For the "STATUS OF C-BIT" output for the RTRV ...BC query, the status of the c-bits for each channel is given as one of the following: ZO for all zeros (idle), NA for network alarm, UP for not provisioned, or UN for undetermined, or framed.
 - If the status of the C-bit is framed and the director DACS II function for the C-bit is to write, the C-bit pattern inserted by the CPR will be given for the channel or range of channels. The construction of the hexadecimal word giving the insertion pattern for each channel is given in Figure 10.5-1.

Hexadecimal word (X-abcd):

Digit a = Bits 0,1,2,3 of c-bit pattern
(Note: Bits 0 and 1 cannot be set;
thus, Valid Values Are a=0,1,2,or 3)


Digit b = Bits 4,5,6,7

Digit c = Bits 8,9,10,11

Digit d = Bits 12,13,14,15

Figure 10.5-1. Construction of Hexadecimal Word

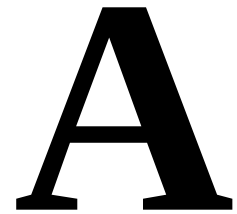
Command Denials



Contents

■ Background	A-1
Introduction	A-1
Objective	A-1
■ Clear Command Denials	A-2
Overview	A-2
Denial Message Command Strings	A-2
Common Causes	A-3
COND cc/COND cccc DNY Message	A-4

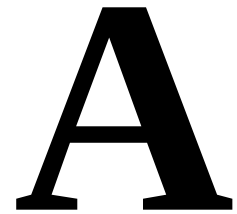Command Denials



Background

Introduction

DACS II will respond with a command denial message when an incorrect command is entered, there is trouble in the system (either software or hardware), or when an operator enters a command which has been restricted by the system administrator.

Objective

This chapter provides information to recognize clear command denials.

Clear Command Denials

Overview

When a user inputs an invalid command, the DACS II system denies the command and displays a denial message. The two types of denial messages are:

- Frame Denial Message
- Hexadecimal Condition Code Message.

Denial Message Command Strings

DACS II responds with a word strings in the denial message after a command is entered incorrectly or equipment is not operating properly. The following table provides the word string and the corrective action required to obtain command completion

Word String	Corrective Action
INACT	The INACT message indicates that the command is invalid with the feature package being used.
BAD SYNTAX	Determine the portion of the command that was in error from the designator (BAD VERB/FRM ERR/SEQ ERR) in the message and reenter the command with the correct information. If you do not understand how to correctly construct the command, you can get on-screen help using the help routine (initiated by entering a question mark, ?)  NOTE: The DACS II indicates where the input error occurred, by placing = signs around the word or portion in the echoed command.
ERR, ABT	Reenter the command; a transient frame condition may have caused the command to be aborted. If the command is aborted again, check the printout to find associated trouble messages
MC OOS	The MC (main controller) must be restored to service to execute the command
MCOND	The MC is in the maintenance condition, and only commands which are considered frame maintenance commands can be used
MC INSERVICE	The MC must be in the maintenance condition to execute certain PMEM and SMEM commands
MPDBASE	The main processor data base is not loaded
RESTRICTED, STOPPED	Only users who have been assigned the use of restricted maintenance commands can use the command. The use of this set of commands is enabled by the frame administrator who enters the SET-PRVG command with option RMON for the user

Clear Command Denials (Continued)

Common Causes

Command denials can be categorized under common causes. The following table provides the denial descriptions and corrective action required to obtain command completion:

Command Denial	Corrective Action
Input Error	Check each field of the command entry on the screen or printout against the documented command to find the error
Not Equipped, Not In-Service, or Failed	The named equipment is not grown (equipped) or in-service to support the execution of the command. The commands to create and restore the plug-in to service are covered in provisioning in Volume 1, and procedures to clear failed plug-in and trouble messages are in this trouble-clearing volume.
Incorrect NPC/ Channel Number	Check each side of the cross-connect command to find incorrect numbers that are already assigned or assigned differently. There are query commands in the cross-connect procedures to obtain information about existing connections on the frame
Invalid Parameters	Check each field of the command entry against the documented command to determine which keyword is incorrectly used
Boot Failed	This is a specific restore command denial. Reenter the restore plug-in command and subsequent diagnose command in an effort to get a DGN ...STF message for which there is trouble clearing in the respective trouble-clearing chapter. If no DGN ...STF message is obtained but the denial persists, replace the plug-in to be restored

Clear Command Denials (Continued)

DENY Output Message

The Deny output message provides a 4-digit error code which appears on a line by itself and the remaining lines which give the explanation of the error code. Table A-1 provides the error codes.

Error codes starting with the same letter are in the same general category; for example, I for input, E for equipage, S for service. The code is taken from letters of the key words that constitute the meaning of the code.

(Continued on next page)

Table A-1. mmmm Condition Codes

mmm	<i>Explanation</i>
ENEQ	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS CPR is not equipped Copy source NPC is not equipped DSPI not equipped, not in service, or failed DSPU is not equipped Database corrupt ETSI not equipped, not in service, or failed FC not eqd, not IS, or failed or inactive side FC not eqd or not IS FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS FTMI not equipped, not in service, or failed MIU is not equipped Mate NPC is not equipped NPC not equipped NPC not provisioned as DGA NPCTG not grown NPCTP is not grown No CBTYPE NPC equipped No DSP unit equipped Not enough DSPPs are equipped Protection MIU is not equipped Protection entity is unequipped Required FLI not equipped, not in service, or failed Required MIU not equipped, not in service, or failed Required MXR not equipped, not in service, or failed SYNC TB is not equipped Service MXR is not equipped Subject entity is not equipped Sync source NPC is not equipped TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS The MXR is not grown The pair MXR is not equipped Unit not equipped, not in service, or failed Test group unequipped Virtual SLC NPC not provisioned
ENFE	Cross-connect not consistent with feature package Software does not contain Enhanced CEPT feature Subject NPC does not support CEPT BER feature
ENIE	Option rr/m has not been set up on 2nd database Termination is not connected as indicated
ENRE	Two confs. were prev. connected or the concat. cause BRD-BBL loop Corresponding NPC for FROM virtual channel is not provisioned Corresponding NPC for TO virtual channel is not provisioned Corresponding NPC for virtual channel is not provisioned

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	FROM NPC is not provisioned as DGA
	Illegal connectivity specified
	NPC not provisioned for CAS
	NPC not provisioned for NSA
	PMEM type no longer supported
	SMEM is a normal SMEM
	SSC circuit pack is still equipped; pull-out/remove SSC
	Subject entity is equipped
	TO NPC is not provisioned as DGA
ERLC	Attempt to remove DGA w/o INCL keyword or prior prot. sw. request
	Customer control or red circuit exists
	DGA protected; use INCL to remove, or unswitch protection
ICNV	PM scheduling report is already allowed for this entity
	PM scheduling report is already inhibited for this entity
	TS0 is crossconnected to TS0
	Bit value not allowed for NPC type
	Current error corrector pack type specified in command
	Current Hub id specified in command
	not allowed for clear 2MB
IDMS	Both FAC and PRIM values(keywords) are required
	INCL keyword needed to perform this command
	INCL must be specified for SRDC ckts
	SIDE must be specified for substrate NPC
	Some priority values required
	Unspecified L2 address
IDNC	FDL selected with width not 1
	Inconsistent or invalid circuit type for Nx64Kbit TA
	Old or new is a non-channelized type in a DS0 command
	One NPC is a non-channelized type and the other is not
	Some priority values not required
	TG width incompatible with circuit
	The two FADS entered are not associated with one another.
	Incompatible HUB feature types
	Inconsistent BCON width for test access
	Inconsistent HUB width for specified TG
	Invalid channel designation for BCON
	Not all FROM channels on same NPC
IDNV	A locally switched channel is specified as BBL, LEG, or BRD
	A substrate circuit pack is specified in the command line
	AIS entered for MONE/MONF/MONEF/SPLTA/SPLTB/SPLTAB
	AIS invalid for cross-connection specified
	AIS keyword incompatible with NPC type
	Adding two digroups from one bank on same DDC

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Alarm option and bank mode don't match
	All NPC(s) are either not valid or not grown
	Attempt to broadcast a locally switched channel
	Attempt to one way cross-connect a locally switched channel
	BER must not be less than 4 for Clear DS1
	Bad PRIM X'efgh values
	Bank id number not found
	CPR circuit pack specified in the command
	Can't Use LCN 0/LGN 0 - designated as a supervisory channel only
	Can't delete because not all associated NPCs of the RT are entered
	Command not allowed
	Conference first channel doesn't match input
	Conference port cannot be dropped out of conference by switch command
	Conference port is not in conference circuit
	Connectivity can not be specified for CEF unit
	Counting sequence and operational mode don't match
	Cross-connect a non Mode I channel to DCLU
	Cross-connect a non SLC channel to DCLU
	DGA and DGB must be specified together in the command
	DGA with NDL option is not provisioned with D4 or ESF framing format
	DGA/DGP of RT/DL Mode I must be assigned to one DDC
	DGC and DGD must be specified together in the command
	DGP designated to bank without data link
	Digroup name and bank id don't match
	Digroups from same bank are added to two different FTUs
	Digroups from same bank have different counting sequence
	Digroups from same bank have different modes
	Duplicate L2 address
	Duplicate ports specified
	ENQ/ACK flow control is supported only on Snider link
	Error in input
	Framing format, digroup name & operational mode don't match
	INCL not specified and at least one NPC In Service
	IU type NPC(s) cannot be provisioned for Minor Alarm
	IW option is not allowed for new type of Clear-DS1 NPC
	Inconsistent Signaling on CEPT NPCTGs
	Inconsistent channel range width
	Invalid CEPT NPC
	Invalid CFT code
	Invalid FPI value
	Invalid FROM channel number

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Invalid MIU/MXR type specified
	Invalid NPC addressing scheme specified
	Invalid SLC Mode-III channel number
	Invalid TC specification
	Invalid TO channel number
	Invalid channel 000 cross-connection specified
	Invalid channel 031 cross-connection specified
	Invalid channel number
	Invalid circuit type
	Invalid keyword(s) combination specified
	Invalid line number
	Invalid link number specified
	Invalid poll time
	Invalid switch request for DCLU
	Leg type mismatch
	MUX or TRB invalid for cross-connection specified
	Mode I RT/DL IDs don't match for DGA/DGP on same DDC
	NAM invalid for cross-connection specified
	NDL option is specified for DGA
	NDL option is used without DGA
	NPC containing channel 000 is invalid type.
	NPC is a DGP
	NPC is channelized type
	NPC is not part of a one-way connection
	NPC number and bank id don't match
	NPC number and digroup name don't match
	NPC parameter only valid with TU type TLI
	NPC type is not DS type
	NPC type option Y is invalid for SLC-96 NPC
	NPC used as a timing reference
	NPC(s) actual type incompatible with TYPE keyword and/or alarm type
	No OOS keyword is given for out-of-service NPC
	No PM data available
	No mapped circuit under test; emode/fmode can't be changed.
	Number of transmitting ports does not match existing conference
	OLD and NEW Data and Parity channels partially overlap
	OLD and NEW channels cannot be the same
	OLD data channel cannot be parity channel type
	Old and new are the same NPC in a DS1 command
	One-way circuit under test; emode can't be changed.
	Operation mode and digroup name don't match
	Option not programmable for this NPC type

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	PWR/MISC alarm is specified to a digroup other than DGA
	Parameter only valid with PA, PB, or PC type NPCs
	RT-DCLU cross-connect with different channel number
	RT-DCLU cross-connect with different ids
	RTF keyword and the operation mode does not match
	RTF keyword is used without DGA
	Range entered without FRC keyword
	Range not allowed for circuit type
	SC invalid for cross-connection specified
	Selectable AIS not valid for specified NPC(s) type
	Side specified for non-duplicated NPC
	Signaling processing is not activated for the channel
	Superuser logged on
	TG East/West type inconsistent with each other or circuit
	TS0 specified with width not 1
	TS16 specified for CAS TG
	TS16 specified for test with width not 1
	The RT id entered is not a retrofit one
	The common bit(s) is(are) not set in both FAC & PRIM
	The facility parameter not programmable for specified x or z parameter
	The parameter specified does not match with the NPC type
	The specified parameter is not applicable to operation mode of the RT
	Trunk type is not allowed in the circuit specified
	Unmatched channel range
	Unmatched channel range involving SLC Mode III termination
	Unrunnable CFT code
	Using the 24th channel of a DMI NPC
	Using the 24th channel of a T1DM NPC
	Virtual circuit is not specified for X.25 link
	XON/XOFF flow control is supported only on Snider link
	ZBTSI option is only valid with the ESF mode
	Emode/fmode can't be changed under current test mode.
	x & z parameters on DSxyz are inconsistent
IDRG	Command did not execute for any entity specified in the command
	Ending channel is out of range
	First and Last NPCs are outside a module boundary
	First and Last NPCs are outside unit boundary
	Invalid FROM channel number range
	Invalid TO channel number range
	Invalid range for specified FROM NPC type
	Invalid range for specified NPC type
	Invalid range for specified TO NPC type

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	NPC range crosses unit boundary
	OFFSET range is invalid
	Old and New channel on same NPC and within the range
	Only up to 4 historical data registers are allowed
	TG width too large for single NPCTG
	Threshold value is out of range
	Unit type (xyz) not supported
	input channel out of range (SLC not supported)
IICM	Clear gateway test access disallowed.
	SRDC timeslots are allocated on this NPC
IIDT	AIS not entered for SPLTE/SPLTF/SPLTEF/LOOPE/LOOPF
	Database conference width does not match the range in input command
	Illegal BBL BBL combination
	Illegal BBL SYM combination
	Illegal BRD BRD combination
	Illegal BRD SYM combination
	Illegal LEG LEG combination
	Illegal SYM BBL combination
	Illegal SYM BRD combination
	Invalid change from previous mode
	Invalid change parameter combinations
	Invalid input BBL as fmd in ONE-WAY command
	Invalid input BBL in terminated TWOWAY/ONEWAY command
	Invalid input BRD as tmd in ONE-WAY command
	Invalid test mode for a one-way test session
	Invalid test mode for an unmapped test session
	Invalid use of CONV keyword
	NPC is a channelized NPC
	NPC is a non-channelized NPC
	NPC is not a F-end
	NPC is not a Facility Access Digroup
	NPC is not an E-end
	NPC type mismatch
	No NPC's out of service and OOS keyword used
	No RDLT or CUS circuits and INCL keyword used
	Report interval is not an integral number of accumulation interval
	TO side is not a DMB type NPC
	This NPC type does not allow unframed Clear-DS1
	Transmission parameters in command will not change existing settings
	Trunk conditioning is invalid
IIFM	Bad FAC value entered

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Exceeded depth limit of 6 on broadcast conference concatenation
	FMC cannot be cross-connected in this format
	Invalid FROM NPC type for AIS insertion
	Invalid NPC type for AIS insertion
	Invalid TO NPC type for AIS insertion
	Try to operate a ONE-WAY conference with a TWO-WAY input command
	Try to operate a TWO-WAY conference with an ONE-WAY input command
IPNV	Accumulation Interval field is missing
	Accumulation Interval field is not allowed
	FAC keyword is invalid for this feature
	Historical data can not be specified
	Interval is not valid/not available
	Invalid direction specified for NTST TLA/TLR
	Invalid parameter combination
	Invalid use of INCL keyword
	Level field is not allowed
	MONDAT keyword is invalid for this feature
	MONDAT set to ALL is not allowed
	MONTIM set to ALL is not allowed
	Mismatch between channel 0 crossconnect and keywords
	Monitored Date field is not allowed
	Monitored Time field is not allowed
	NPC is non-channelized
	NPC number out of range
	No PM data available
	Only 15MIN for accumulation interval is allowed
	Only DAILY for accumulation interval is allowed
	Only historical data can be specified
	Only one parameter is allowed
	PRIM keyword is invalid for this feature
	Scheduled reporting for this npc is inhibited
	Scheduling report could not be found
	The MONDAT and MONTIM parameters can not both be specified
	This NPC type does not allow Payload
NCON	No conditions
SAAL	Feature is active
	Manual Pending is Active
	PA NPC threshold already in allow mode
	Protection switching is already allowed
	The switch is allowed (not inhibited)
SAAS	All channels assigned, cannot be grown as NPCTG

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Another NPC is grown and added as this digroup
	BCON BBL has one or more legs under test
	Channel(s) is already registered
	Channels assigned, cannot be grown as test group
	Channels assigned, cannot be grown as test port
	Conference Port is currently registered to a different channel
	New bank id is an assigned one
	TG number previously assigned
	Termination is already assigned
	Termination is in process of being rolled
	The MIU is already equipped
	Channel already under test
	Channel part of a TP or TG
	Circuit contains mapped channels for HUB request
SAIN	Loop back inhibited for digroup
	No mapped slots on a tsi
	No unmapped slots on a bus
	PA NPC threshold already in inhibit mode
	Parity channel cannot be within the range of a DS0 command.
	Protection switching is already inhibited
	Subject entity is pested
	Termination is under test or is a test port or group
	The switch is already inhibited
	Can't change option, inhibition is active
SAIS	Both syncs are in-service
	CCN side s is in service
	CRO is still equipped
	Conference already exists
	DS3U NPC already In-Service
	DSPI is in service
	MIU is already in service
	Mate NPC (DGA/DGP) is in service
	NPC not IU/TI type
	Some TLIs are still equipped
	Some TSIs to degrow are in service
	Subject entity is in service
	TLI 3 or 4 still equipped
	Test group is not idle or frame is not In Service
	Test port is not idle or frame is not inservice
	The MMFG is already In-Service
	The MXR is in service
	The selected FLI is IS and Pested and at least 1 Service MXR is eqd
SAOP	RT's alarm exists

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
SAOS	This signal is already being sent
	A DMB on the Unit is OOS
	Both syncs are out-of-service
	CCB is out of service
	CCI is out of service
	CCN side s is out of service
	CCNI is out of service
	DSPI out-of-service
	ETSI is out of service
	FC out of service
	FLI is out of service
	FMT is out of service
	FTMI is out of service
	File has already been cleared
	Formatter (FMT) on active CCN side is Out-Of-Service
	IU/TI type NPC failed
	MIU is out of service
	MXR is out of service
	Mate CCN side is out of service
	Mate SYNC is out of service
	NPC out of service or failed
	Protection MIU is out of service
	Protection MXR is out of service
	Protection entity out of service or failed
	SYNC is out of service
	Service MIU is out of service
	Service MXR is out of service
	Subject entity is out of service
	Sync 0 is not in-service
	Sync 1 is not in-service
	The MMFG is Out Of Service
	The mate FLI is OOS and Protection MIU is equipped
	The mate FLI is OOS and Protection MXR is IS
	The mate FLI is OOS and at least one Service MXR is equipped
	The protection FLI is out of service or pested (TOPRTN option)
	The selected MIU associated with the NPC is Out-Of-Service
	The selected MXR associated with the NPC is Out-Of-Service
	The service FLI is out of service or pested (TOSRVC option)
	UC is out of service
SAPS	Frame ID is protected
	The Service MMFG is already under protection
	The protection FLI is already selected (TOPRTN option)
	Can't change option, protection switch is active

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
SAPV	Option LOCAL already exists Option REMOTE already exists
SARB	Exceeded limit of reports with accum. interval of 15 min. or less Exceeded maximum limit of PM reports
SARL	No FADs were activated by link n No test ports were activated by link n
SATF	Can't run test on active side
SAWS	An autonomous switch is in progress C-bit modify function is active C-bit operations are enabled Conference exists in a DMB Mapped slots exist on a tsi NPC already allocated as sync timing source NPC already grown as non-synchronization source NPC already has Equipment Loopback NPC is already grown and added as SLC digroup The Service MMFG is not under protection The service FLI is already selected (TOSRVC option)
SNAS	Connectivity contains unequipped units
SNIS	CPR is out of service Cannot clear journals for OOS unit DSPU unit controller is out of service NPC is OOS for a TGR command and OOS keyword not specified NPC unequipped, out of service or failed RT/DL has unrestored DGA Sync source NPC is not inservice TD on one(both) sync(s) is not equipped or not in-service Unit(s) OOS, and additional backup required
SNOS	In-service NPC change not allowed Subject PWR to be cleared is not failed
SNVS	(Timing Distributor) TLI is not equipped 1 hr >= 24 hr for DM opt 15 min >= 24 hr for ERS opt 15 min >= 24 hr for SERS opt 15 min >= 24 hr for SLIP opt 15 min >= 24 hr for US opt 3 Timing Distributor type TLIs are equipped A DMB mode was assigned to a FTU-type NPC on the input A loopback is active on the FROM termination A loopback is active on the TO termination A user is already logged in on the link/vc Active CCN side is out of service Adding DL DGP forbidden for SLC 96 MD 1

Table A-1. mmmm Condition Codes (Continued)

mmmm	<i>Explanation</i>
	Alarm bits cannot be passed through or inverted
	All digroups not out of service
	Another signal already active prevents this signal from being sent
	Assignment of single priority to multiple SSPs
	At least one UC is OOS or At least one UC is failed
	At least one UC is not the correct type
	Attempt to add to a null transmitting port
	Attempt to remove a Service MIU which is under protection
	Attention: preceding ccode 83 is an anomaly - see problem list
	Autonomous loopback is active on DGA
	Backup required before executing this command
	Bad sync mode
	Bad use of INCL, cannot override the current state of the conference
	Bad use of INCL, cannot use keyword on conf.-to-conf. connection
	Bit 3 provisioned for use as RAI3
	Bit 4 provisioned for use as RAIS
	Bit 4 provisioned for use as RBER
	Bit 5 provisioned for use as SFI
	Bit c not settable
	Bits 3 through 8 are provisioned for Transmic 1G
	Boot in progress, can't service request
	Both ITS TG bundles must be on same TG193B card
	Both sides of CCN are OOS
	Broadcast unassigned channel/NPC in QRY,TO
	C-bit modify function is disabled
	CATP due to skipping continuity test for FMT
	CCB is inservice but failed
	CCI is inservice but failed
	CCI is not present
	CCNI is inservice but failed
	CPR in buffer overflow condition
	CRO type TLI (SSP portion not required)
	CUS flag doesn't match that of conference
	Can not create any more users
	Can not execute privileged command
	Can not perform DMB CHG on input direction A
	Can not perform DMB CHG on input direction B
	Can not perform DMB CHG on input direction F
	Can not perform DMB CHG on input direction G
	Can not perform DMB CHG on input direction L
	Can not perform DMB CHG on input direction T
	Can not remove Frame administrator
	Can not remove own link

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Can not use 12-th TP when NPCTP is in the T1DM or DMI mode
	Can't disconnect return leg unless entire conference disconnected
	Can't mount or unmount BOTH_MEM
	Can't mount or unmount PMEM
	Can't mount or unmount SMEM
	Can't mount or unmount password recovery card
	Can't perform DMB CHG because NTR flag set on FROM side
	Can't perform DMB CHG because NTR flag set on TO side
	Can't RST MC CLR when a unit is equipped
	Can't start new session - previous session still verifying
	Change not valid
	Change to T1DM digroup with cross-connect that is not TRSP
	Change to non-ESF digroup with 16-state cross-connect
	Channel has a FAR, which is within the range
	Channel or NPC not bridged
	Channel out of bound in a BCON/v.c
	Channels and conference port do not match
	Clock absent for XPC to loop back
	Combination of bit g (b7) and h (b8) is invalid
	Command and protocol are inconsistent
	Command invalid while backup in progress
	Command is Frame administrator (DAX) only.
	Conference Port is already registered to the same group of channels
	Conference is LPD: has no switchable return leg
	Conference is NTR: has no switchable return leg
	Conference port is currently connected
	Conference port is not registered
	Conversion leg is terminated
	Cross-connect to CPR is required
	Customer controlled circuit, INCL not entered
	DB MP or units ram error
	DB retrofit fail
	DCTN conference channel cannot be rolled
	DGA is not added
	DGN on subject entity denied
	DGP is protecting a primary digroup
	DL ffff is used w/ operational mode other than Mode I
	DMI combined with T1DM
	DSPP not in service, or failed
	DSPP pack FTMI Failed or Out of Service
	DSPP pack NPC Failed or Out of Service
	DSPP pack UC Failed or Out of Service
	Database is empty

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Database is not empty
	Database not loaded
	Delete or change a leg from a conference that has no leg
	Deny Clear-2MB for Alternate Maps
	Deny SLC for Alternate maps
	Deny SP Type NPCs for Alternate Maps
	Deny non-channelized NPCs for Alternate Maps
	Designated TG or circuit to be tested in process of being rolled
	Different DSxyz types are used for DGA/DGP on same DDC for Mode I
	Digroup is protected
	Disable not allowed - supports another feature
	ETSI cannot be initialized when ECCN side is OOS or inservice but pested
	ETSI is inservice but failed
	ETSI is not present
	Entity can't be addressed in this configuration
	FC is inservice but failed
	FLI is inservice but failed
	FMT is in service but failed
	FPI on SMEM does not match one on PMEM
	FRC specified for protection, and service MMFG is In Service
	FROM is a two-way and no CONV specified
	FROM is not a backbone leg
	FTMI is PESTED
	FTMI is in service but failed
	FTMI type error
	Feature deactivation would leave system with core software
	Feature not enabled
	File already exists
	File doesn't exist/can't be accessed
	File is being accessed
	File is empty
	Firmware timing invalid for Transmic 1G NPC
	Flash Card is bad
	Flash Card is empty
	Flash Card is not present
	Frame is not in MCOND
	Frame time is not set
	Framed/Unframed clear 2Mbit/s NPC invalid for Automatic CRC-4
	Framed/Unframed clear 2Mbit/s NPC invalid for Firmware Timing
	Framed/Unframed clear 2Mbit/s NPC invalid for Transmic 1G, 2G G1 SMEM for SMEM->PMEM w/journals

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	G4 to G4.1 retrofit failed
	Gateway test access not supported
	Hardware mismatch or not present
	INCL keyword needed when restricted Insertion Word specified
	IW is UMUX (18) but NPC not type DE4yz
	IW not allowed to be specified in Clear 2Mbit/s
	Illegal SSP type (not same as other SSPs)
	Illegal priority value
	Illegal test access mode for TS0
	Illegal test access mode for TS16
	Improper roll command sequence
	Inactive side NPC out of service and inactive side in service
	Incompatible types of NPCs on a circuit pack
	Incorrect language/addressing mode
	Incorrect number of parameters
	Incorrect or missing password
	Incorrect pack type in slot
	Initialization of application in progress, retry command later
	Input BRD (BBL) has same NPC and channel as BBL (BRD)
	Insufficient data for setting up a conference
	Integrated Test Set is currently active on TG
	Invalid NPC number specified
	Invalid PWR/MISC alarm level
	Invalid combination of "x" and "y" values
	Invalid combination of "x" and "z" values
	Invalid executable on card
	Invalid option, mailbox or flag
	ITS NPC Hardware Error
	ITS TG Already Generating
	ITS TG Already Monitoring
	ITS TG is Idle
	ITS TG Not Generating
	ITS TG Not Monitoring
	LEG mode was assigned to a DSPU-type NPC on the input
	LLB not initiated
	LPD invalid since existing conference is not already LPD
	Language "F" provisioned for this channel
	Language is not allowed
	Last link in service
	Line Loop Back is active
	Line format types are incompatible
	Link being used is not Link 1
	Logical conflicts found in the map

Table A-1. mmmm Condition Codes (Continued)

mmmm	<i>Explanation</i>
	Looped Circuit Access not allowed
	MP database not consistent with Configuration file
	Major/Minor BER threshold value is invalid for SLC NPCs
	Maj Min BER threshold is 7, but not in T1DM or Fe mode
	Map/macro file write deferred until backup is completed
	Mapped parity channel(s) on new
	Mate RT/DL mode is different
	Mate sync pack denied command
	Maximum number of CPRs have already been grown for this unit
	Minor <= major for BER opt
	Minor >= major for COFA opt
	Minor >= major for SLIP opt
	Minor Slip threshold disabled before Major Slip threshold
	Mismatch between MXR and NPC types
	Mismatch between service MXR and protection MXR types
	New NPC already cross-connected or mapped channel(s) exist on New
	NPC addressing scheme selected is not allowed in the configuration file
	NPC as 12th test port can not change to DMI nor T1DM
	NPC has active circuit
	NPC has been designated as NPCTG
	NPC has been designated as NPCTP
	NPC invalid type
	NPC is NPCTG and chan 24 is used in a TG; Can't change to T1DM or DMI
	NPC is NPCTG, changing to CAS/NSA is not allowed
	NPC is a Facility Access Digroup
	NPC is a test port
	NPC is not a NPCTG
	NPC is not a NPCTP
	NPC is not added
	NPC is not designated for this NPCTP/NPCTG
	NPC is still provisioned to provide sync timing
	NPC not DA or TA type.
	NPC not deleted
	NPC not designated as sync timing source
	NPC providing timing to inservice SSP
	NPC type error
	NPC type is inconsistent with FTMI type
	NPC type option xyz is unassigned or invalid for feature package
	NTR invalid since existing conference is not already NTR
	New NPC same as existing one

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	New in CGA or PBA
	No CBTYP NPC capacity remaining
	No DL digroups can be added until the associated RT bank is created
	No Facility Line Interface (FLI) is In Service
	No SAFE alarm for DGP
	No available timeslots on any inservice NPCS associated with FC/FMT
	No edit session active
	No equalization for CEPT FTMI
	No macro is currently executing
	No mapped channel on old
	No protection switch is currently active
	No signals active
	No unmapped time slot
	No user is logged in on the link/vc
	No user/link needs to be changed
	No zeros allowed for DAX privilege
	Not Timing Extractor type TLI (not SSP)
	Not a CRO TLI
	Not a DACS II compatible Flash Card
	Not enough DSPPs are in service
	Not enough TSIs for CCB test
	Not first channel in a BCON/virtual conf
	Not valid for frame administrator
	Number of DGPs on each unit is limited to 32
	Number of SLC RT's on each unit is limited to 80
	OLD termination is not mapped
	Obsolete circuit type
	Old and new channels have not been paired by a BCAST command.
	One of the FAR end channels is being rolled
	One of the far NPC(s) is SLC
	One or more FADs could not be released
	One or more test ports could not be released
	One way unassigned channel/NPC in QRY,TO
	Only one channel allowed to have this language
	Option NOT leg can not appear with F, T, or B
	Option NOT leg is not a FTU leg
	Option NOT leg is not in conference
	Other FLI is OOS
	Other NPC on this DDC not the same digroup for Mode I DGA/DGP
	PDI Version number mismatch
	PMEM and SMEM are different
	PMEM and SMEM synchronization fail

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	PMEM error, boot from SMEM
	PMEM not in service or not ready
	PMEM not restored
	Parity channel out of bound on new
	Password recovery card is not READ-only
	Point number mismatch
	Priority values are same
	Problem occurred while accessing BOTH_MEM
	Problem occurred while accessing PMEM
	Problem occurred while accessing SMEM or unformatted SMEM
	Protection switch existing is autonomous
	RCV continuity test won't be run: SYNC OOS or pested
	RCV continuity test won't be run: at least one timeslot in use
	RCV continuity test won't be run: no DMB timeslots available
	RCV continuity test won't be run: no available IS NPCS for FC/FMT
	RDLD flag doesn't match that of conference
	RTBC conference exists
	Range overlapping between FROM and TO or between two TOs
	Ranges of old and new do not match
	Reading Feature Package Id from PMEM failed
	Red circuit, INCL not entered
	Release number mismatch
	Report already exists
	SLC 96 MD 1 RT DGP requires mate NPC to be unequipped
	SMEM error, boot from PMEM
	SMEM is not present
	SMEM unit is not restored
	SR NPC was specified - not allowed
	SSC Diagnostic Failure
	SSP number is illegal
	SSP number required
	SSP type(options) same
	SSP with 0 priority present
	SSP with non 0 priority present
	SYNC is inservice but failed
	Signaling state of the trunk failed for the channel
	Skip error summary since adjacent pack not in service or pested
	Software Identification Block failed comparison
	Software Identification Block is not readable
	Some associated NPCs are equipped
	Some circuits not activated,cleared or pictured
	Source does not contain requested information
	Specified width does not match existing conference width

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Stratum not allowed
	Sync architecture different
	Sync architecture is same
	Sync mode is same
	Sync stratum is same
	Syncs are equipped
	System macro/map space is full
	T1DM or DMI mode and channel 24 is connected
	TB type in hardware mismatches DB
	Termination is a test port
	Termination is protected (RDLD)
	Termination is under customer control (CUS)
	Termination is under test
	Test ports must be on CAS
	Test session already exists
	Testport/testgroup channel cannot be rolled
	TG in TSM ON mode
	TG not in TSG ON mode
	TLA/TLR invalid with ITS test groups
	TO is a part of the same conference as a previous TO
	TO is already the return leg
	TO is not a leg of this/any conference
	TO is the backbone leg of a conference
	TO side of two-way to be converted is not an FTU NPC
	The INCL keyword is needed for DGA
	The MMFG is protected
	The NDL options are different for DGA's on the same DDC for Mode I
	The NPC of VC BBL leg doesn't match that in the input command
	The NPC to delete has not been previously added to map
	The OLD or NEW NPC is already being rolled.
	The associated MMFG is under protection (for Service MIUs)
	The associated MXR is In-Service but pested
	The conference does not exist
	The first channel of VC BBL leg doesn't match that in the input cmd
	The first channel of VC BRD leg doesn't match that in the input cmd
	The input BRD leg is not in VC
	The map is not valid
	The mode of the RT is not applicable
	The reference map does not exist
	The requested digroup is carrying service
	The selected MIU associated with the NPC is In-Service but failed
	The selected MXR associated with the NPC is In-Service but failed
	The session is terminated due to maintenance operation

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	The total number of receiving ports specified exceeds the max.
	There are no INS MXRs to run test on
	Timeslot channel numbering not allowed with CAS
	Timing Extractor type TLI (need SSP info)
	Timing Extractor type TLIs are present
	Transmic 1G NPC designated as SYNC source invalid
	Transmitting port cannot be dropped
	Tried to disconnect a nonexisting VC
	Trunk conditioning doesn't match that of conference
	Try to add a BBL to VC, but the VC already has backbone
	Try to delete a BBL leg from VC; however, VC has no BBL leg
	Try to delete a BRD leg from VC; however, VC has no BRD leg
	Trying to add a BBL leg to a conference set up as SYM
	Trying to add a BBL to a DMB conference that already has one
	Trying to add a SYM leg to conference set up as broadcast
	Trying to add a broadcast leg to a conference set up as SYM
	Trying to add or delete a leg when a conference is under test
	Trying to change in NTR direction
	Trying to change level in on BBL leg
	Trying to change level out on BRD leg
	TS0 connected to nonTS0 in Mode 2 - "a" should be "-" or "b"
	Two digroups from same bank added to different FTMI
	UC is in service but failed
	Unable to verify Configuration file since MP DB not loaded
	Unassigned operational mode
	Unframed clear 2Mbit/s NPC invalid for Bit 4 used as RA IS/RBER
	Unframed clear 2Mbit/s NPC invalid for TS0 processing
	Unit is not FTU type
	Unit type error
	Unmapped channel(s) on old
	Unpestering error registers for subj. entity failed
	Use of this NPC is RESERVED for SLC 96 MD 1
	User does not exist
	User has been created
	User has logged in somewhere
	User is not logged in
	User logged off during session
	User login-id is not DAX
	User macro/map space is full
	User quit the menu
	User still owns files
	Width of existing two way does not match conference width
	Write to CPR failed

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
	Writing Feature Package Id to PMEM failed
	Wrong SSP type(Timing Extractor type)
	Wrong TLI type
	Wrong TLI type (need CRO grow command)
	X option is illegal
	XMIT continuity test won't be run: CFT code specified
	XMIT continuity test won't be run: no XMIT timeslots available
	Y option is illegal
	Z option is illegal
	Channel is OCON in opposite direction
	Circuit already terminated
	Circuit not terminated
	Hub id not set when MJU pack grown
	Invalid mode for TLA/TLR
	Invalid test access mode
SOSF	All CBTYP NPCs out of service or failed
	DSPU unit controller is failed
SPFA	No protection is available for the Service MMFG
	Protection switch process failed
SPSW	The Protection MMFG is selected, and auto. switchback is unavailable
	The protection MMFG is serving another facility
SROF	(NPC) Hardware mismatch
	BOOT on subject entity failed
	CCN denied request
	Can't lock or unlock ram database
	Circuits TCONed itself cannot be UTST
	DB can't get the slave mail box
	DB can't send or receive mail
	DGN on subject entity failed
	Failed to boot CI
	Failed to boot CONF file
	Failed to boot DB
	Failed to boot journal--recurrence indicates database corruption
	Failed to boot subject CCN side
	Failed to boot unit
	Failed to switch SYNC side
	General boot failure (vanilla flavor)
	IU/TI type NPC
	MIU is failed
	MXR is failed
	Mismatch between MXR and MIU HDW types
	NPC Failed or Out of Service

Table A-1. mmmm Condition Codes (Continued)

mmm	<i>Explanation</i>
mmm	No Memory Backup Has Been Scheduled
	None of the designated NPCTG(s) are equipped
	None of the designated TG(s) are equipped
	PMEM verification failed
	Read/write eeprom error
	RST failed to boot DB
	RST failed to boot program
	SSC software out of date
	Sync not completely reset
	Sync pack denied command
	Syncs failed to cross couple
	The MIU boot failed
	The MIU diagnostics failed
	The MXR boot failed
	The MXR diagnostics failed
	Unit 1 denied request
	Unit 2 denied request
	Unit 3 denied request
	Unit 4 denied request
	Unit 5 denied request
	Unit 6 denied request
	Wrong MXR type grown for this MIU
SRTN	Test Port release failed
	Test group release failed
SWFA	Active CCN side not IS or failed or pested or hardware OOS
	Boot TLI failed
	Checksums verification failed
	DB PMEM error OP-CL-RD-WR-SK
	DB SMEM error OP-CL-RD-WR-SK
	DSPI failed
	Data link failed
	Device failed to format
	Device failed to initialize
	Failed to lock sync to timing reference
	Far end failed to respond
	Hardware database mismatch
	MXR LOS with unselected FLI
	Selected FLI has LOC with at least one inservice MXR
	Sync is not configured yet
	Unselected FLI has LOS with at least one inservice MXR

Index

A

Administrative Link
 Establish, GT 6.7-1
Alarm information messages, GT 1.3-1
ALM, GT 4.1-1
ALM ECCN OOS message, clear, GT 4.1-1
ALM RESET TOD/DATE messages, GT 6-31
ANALYSIS REPORT, Clear, GT 4.3-1
Autonomous Action Message, Check, GT 1.4-1
Autonomous Action Messages, GT 1.4-1

B

Blown Fuse
 Clear Trouble, GT 2.1-1
Blown Fuses, GT 1.2-1
BMTR DNY trouble, GT 7.1-1

C

C-bit messages, GT 10.4-1
C-Bit Query Commands, GT 10.5-1
CCB diagnostic, GT 5.19-1
CCI diagnostic, GT 5.11-1
CCI Diagnostic Failed, Clear, GT 5.12-1, GT 5.13-1
CCNI diagnostic, GT 5.12-1
Check Autonomous Action or Command In-Progress Messages, GT 1.4-1
CI diagnostic, GT 5.3-1
Circuit Packs
 failed, GT 4.6-1
Command Denials, Clear, A-2
Command-in-Progress Messages, GT 1.4-1
COND D1 (unknown error), GT 4.7-1
CRO diagnostic, GT 5.5-1
Cross-Connect Buffer diagnostic, GT 5.19-1

D

Denials, Clear Command, A-2
DGNDT messages, GT 4.7-1
Diagnostic
 Failed CCI, Clear, GT 5.12-1, GT 5.13-1
 Failed MC, Clear, GT 5.1-1

DSPI diagnostic, GT 5.9-1
DSPU NPC diagnostic, GT 5.16-1

E

ECCN out-of-service, GT 4.1-1
ERR COND Code meanings, GT 4.8-1
ERR ESR ANALYSIS REPORT Message, Clear, GT 4.3-1
ERR PWR message, GT 1.2-1
ERR, HARDWARE Message, Clear, GT 4.9-1
ERROR LOG message, GT 4.7-1
ERR, GT 4.4-2
ETSI diagnostic, GT 5.13-1

F

Facility Alarm Idled messages, GT 1.3-1
Failed Status for Plug-In, Respond to, GT 4.6-1
FC diagnostic, GT 5.10-1
Frame Comparison Message, Clear, GT 8.3-2
Frame startup trouble, GT 6.2-1
Frame Troubles
 Isolating, GT 1.2-1
FTMI diagnostic, GT 5.8-1
Fuse, blown, GT 2.1-1
Fuses, GT 1.2-1

I

Inoperative Terminal (System Hung), GT 6.5-1
In-Progress Message, Check, GT 1.4-1

L

Link diagnostic, GT 5.18-1
Loss of Power
 Recovery, GT 2.3-1

M

MC Diagnostic Failed, Clear, GT 5.1-1
MP diagnostic, GT 5.2-1

N

NPC (FTU) diagnostic, GT 5.15-1

O

OVERLOAD Message, GT 6.4-1

P

PB/PC NPC status, GT 5.20-1

Performance Parameter Thresholds

Change, GT 3.1-1, GT 3.2-1, GT 3.3-1, GT 3.4-1

PMEM card failure, GT 5.17-1

Power Loss

Recovery, GT 2.3-1

Power Unit

Clear Trouble, GT 2.2-1

Primary Memory (PMEM) card failure, GT 5.17-1

Processor Failure Alarm, GT 6.1-1

R

Repeated RL Command Response, Clear, GT 6.6-1

S

SYNC diagnostic, GT 5.4-1

System Hung, GT 6.5-1

T

TLI diagnostic, GT 5.6-1

Trouble-Clearing

Selecting Procedure, GT 1.1-1

Troubles

Isolating, GT 1.1-1

TS0 R OLD, NEW Message, Clear, GT 5.20-1, GT 5.21-1,
GT 10.1-1, GT 10.2-1, GT 10.3-1, GT 10.4-1, GT
10.5-1

TSI diagnostic, GT 5.14-1

U

UNIT UC diagnostic, GT 5.7-1