



**DR 6/11-135A and 135EC  
1×N Frequency Diversity  
Operation and Maintenance  
End Here**

<b>Contents</b>		<b>Page</b>
<b>1</b>	<b>General</b>	<b>2</b>
<b>2</b>	<b>End Here</b>	<b>2</b>
<b>Flowcharts</b>		
<b>1</b>	<b>End Here (Sheet 1 of 2)</b>	<b>3</b>

**AT&T— PROPRIETARY**

This document contains proprietary information of AT&T and is not to be disclosed or used except in accordance with applicable agreements

Copyright © 1996 AT&T  
Unpublished and Not for Publication  
All Rights Reserved  
Printed in U. S. A.

## **1 General**

---


This section is used to end our maintenance on the DR 6/11 radio system. We will do the following:

- a. Remove test connections.
- b. Return equipment to normal operation.
- c. Verify that:
  - Equipment repair is complete.
  - No alarms are present.
  - System performance meets requirements.
- d. Return system back to Transport Servicing Center (TSC) control.


## **2 End Here**

---

Use Flowchart 1 to end your maintenance on the system. If a trouble exists, you will be instructed to return or go to the **START HERE** tab.

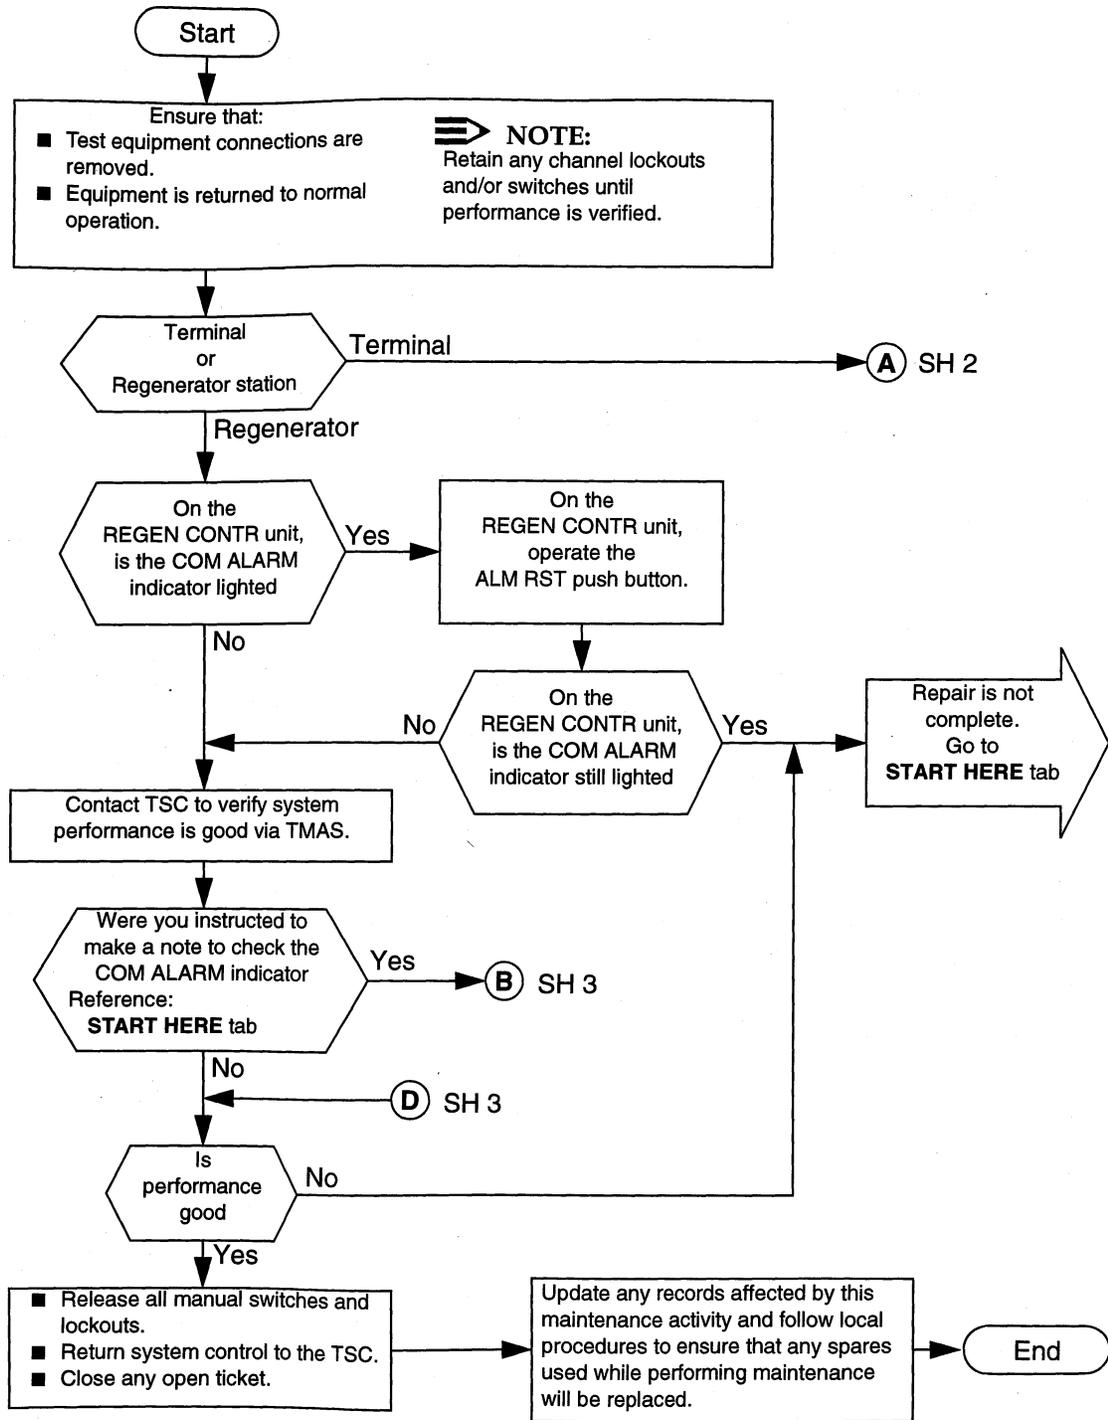


Flowchart 1. End Here (Sheet 1 of 3)

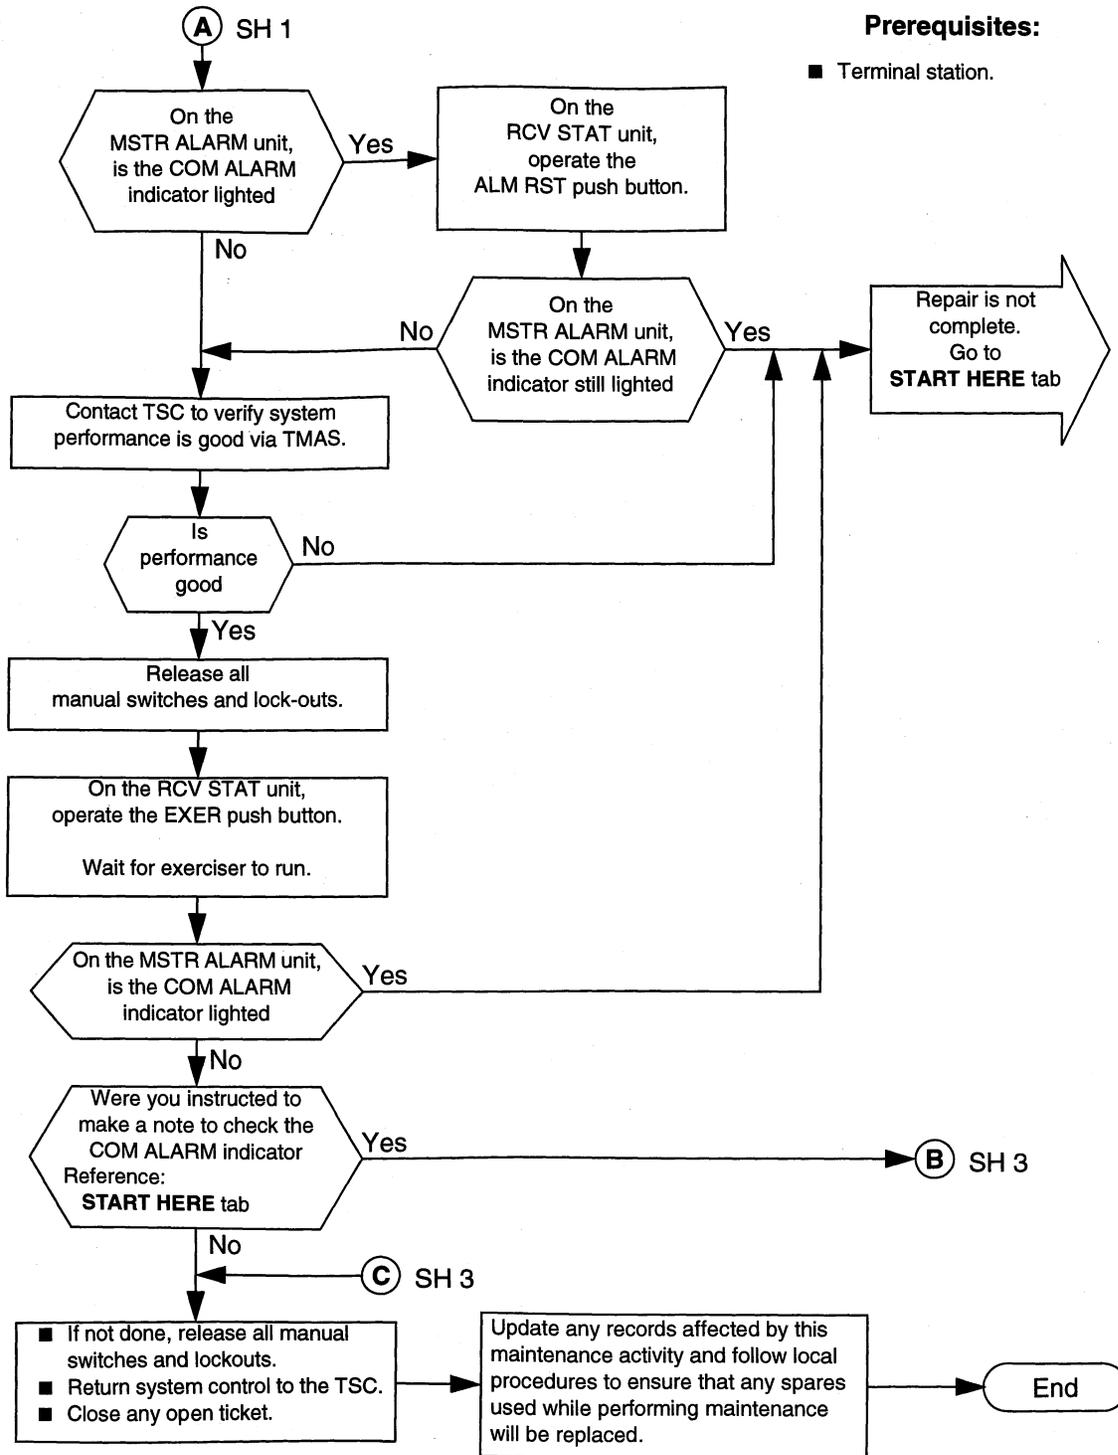

Flowchart 1. End Here (Sheet 2 of 3)

AT&T— PROPRIETARY  
 See notice on first page

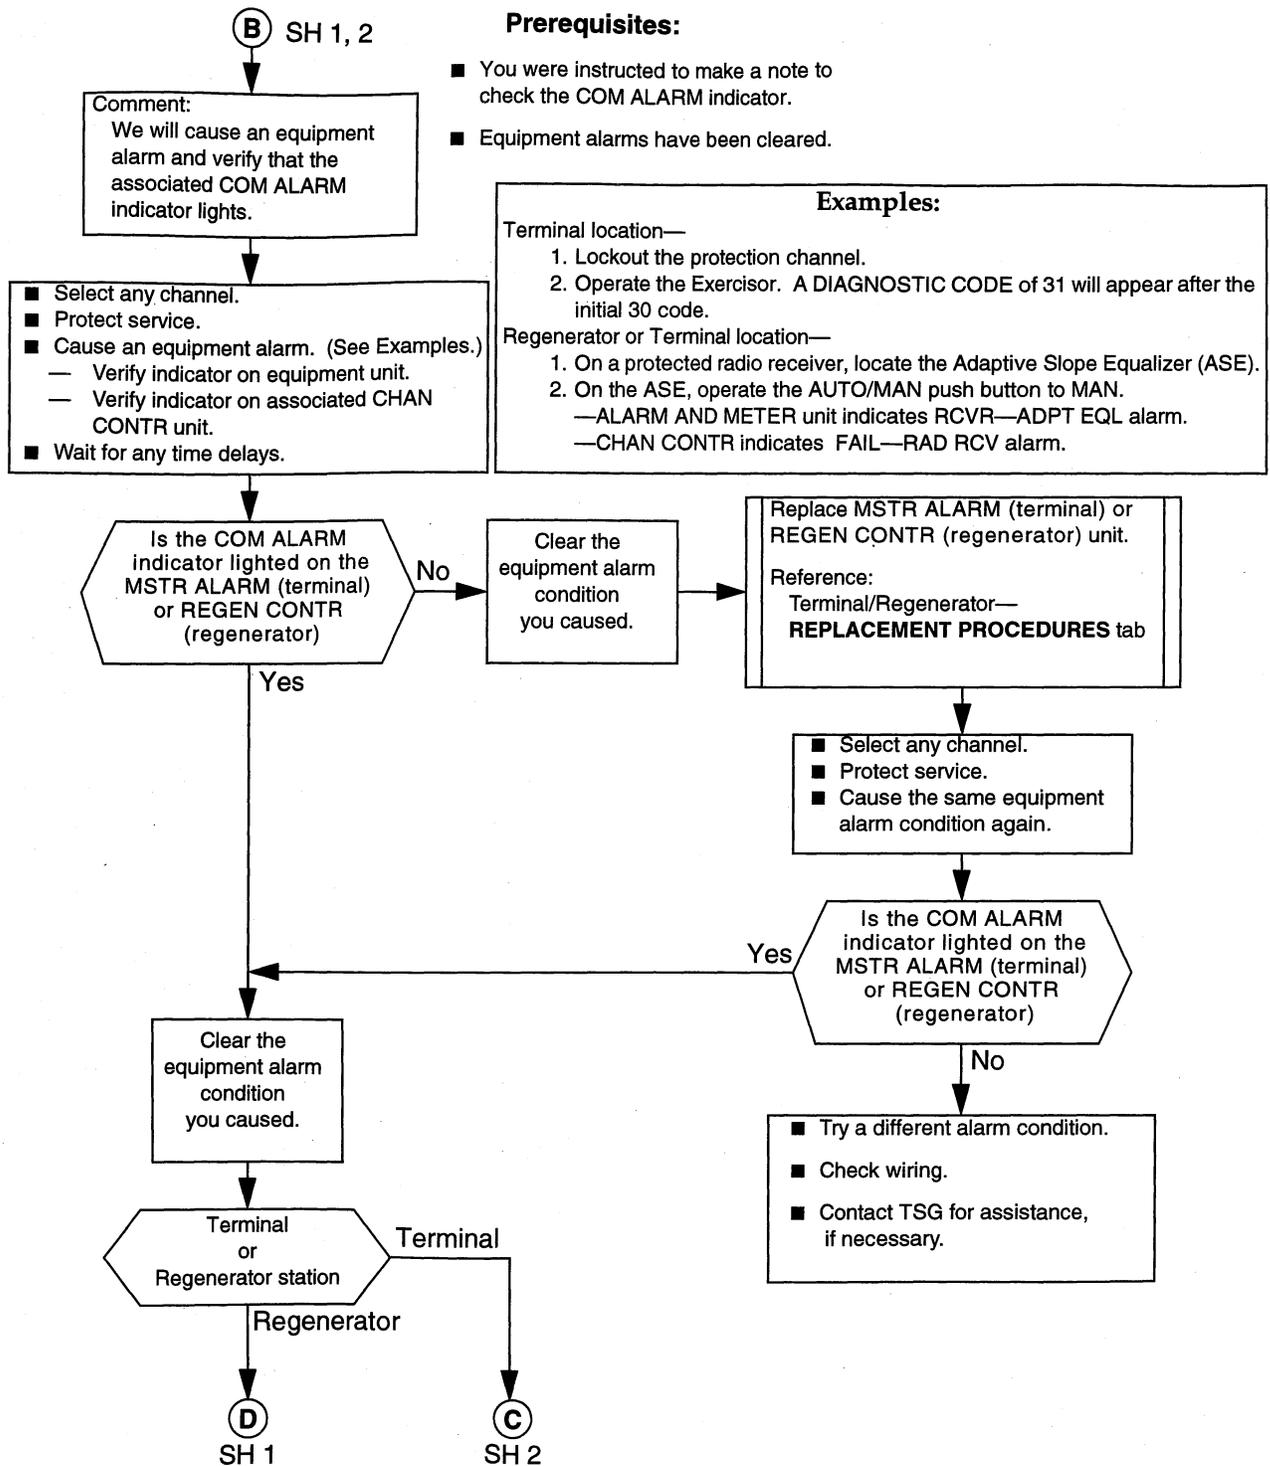

Flowchart 1. End Here (Sheet 3 of 3)

This page has been intentionally left blank.