


TELEPHONE SET  
558-30 CONNECTIONS

1. GENERAL

- 1.01 This practice provides the connecting information necessary in the installation of the type 558-30 telephone set.
- 1.02 Figure 1 shows the 558-30 type telephone while Figure 2 shows an exploded view of the set's components, Figures 3 and 4 are the wiring diagrams.

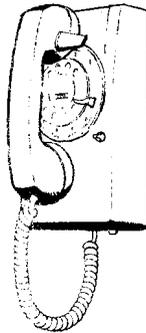

558 Wall Phone with 2-line  
Pickup Feature

FIGURE 1

Item	Description
1	Base Assembly
2	Network Assembly
3	Hook Switch Assembly
4	Bind. Hd. Mach. Screw
5	Spring Washer
6	Hex. Nut
7	Ringer Assy. Biased
8	Dial Assembly
9	Handset and Cord Assembly
10	Housing Assembly
11	Fastener Stud
12	Turn and Push Key Assembly
13	Special Screw
14	Terminal Board Assembly
15	Mounting Plate
16	Bind. Hd. Mach. Screw
17	Bracket (Turn and Push Key)

NOTE: Ringer, Dial and Dummy Plug Assemblies are all supplied complete with mounting screws.


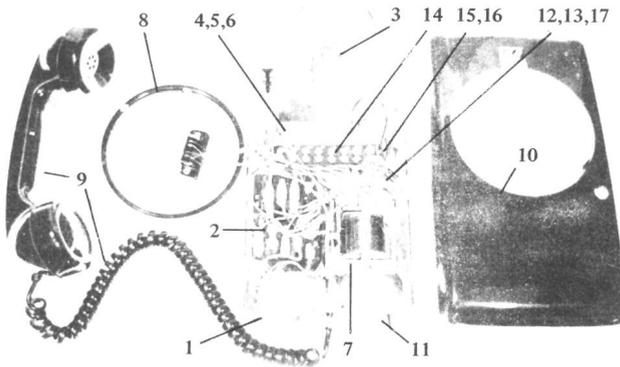


FIGURE 2. TOP VIEW - HOUSING REMOVED

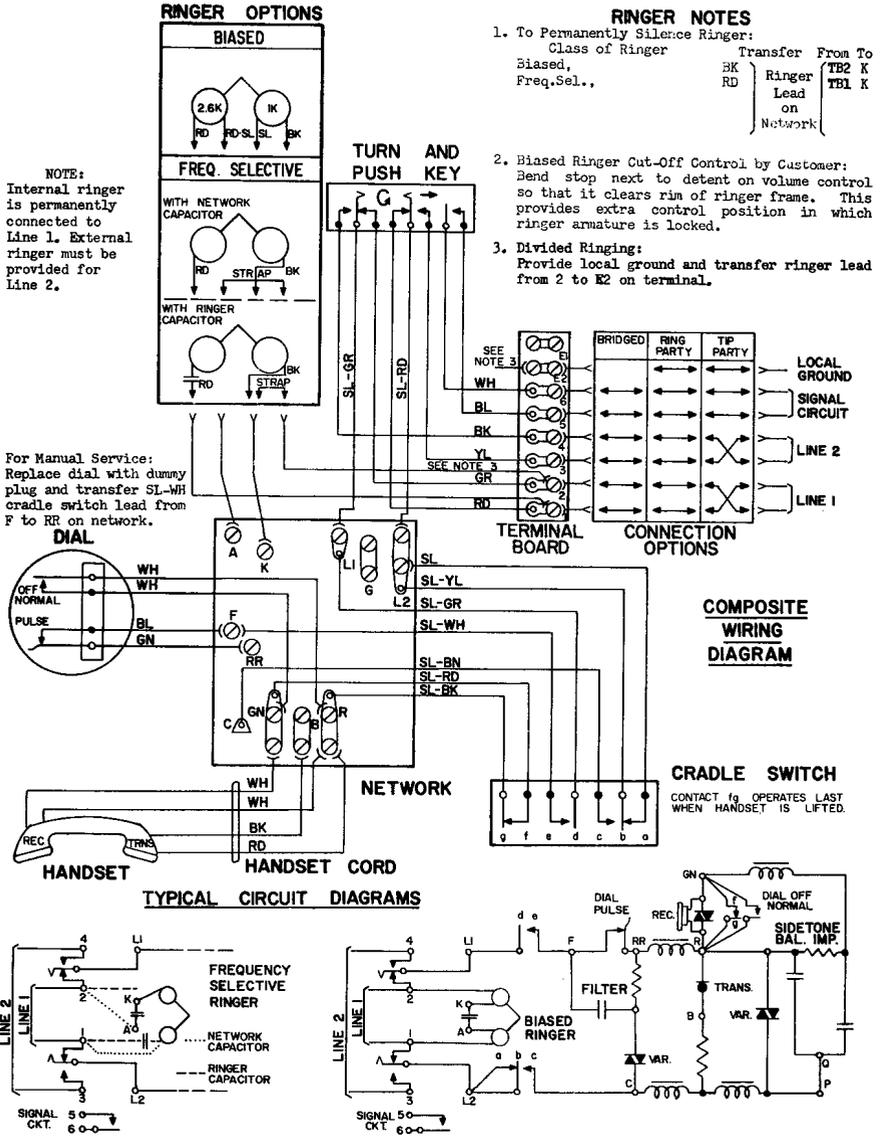

**NOTE:**  
 Internal ringer is permanently connected to Line 1. External ringer must be provided for Line 2.

**For Manual Service:**  
 Replace dial with dummy plug and transfer SL-WH cradle switch lead from F to RR on network.

- RINGER NOTES**
- To Permanently Silence Ringer:  
 Class of Ringer: Biased, Freq.Sel., Transfer From To BK RD Ringer Lead on Network TB2 K TB1 K
  - Biased Ringer Cut-Off Control by Customer:  
 Bend stop next to detent on volume control so that it clears rim of ringer frame. This provides extra control position in which ringer armature is locked.
  - Divided Ringing:  
 Provide local ground and transfer ringer lead from 2 to E2 on terminal.

FIGURE 3. DIAGRAMS 558-30 TELEPHONE

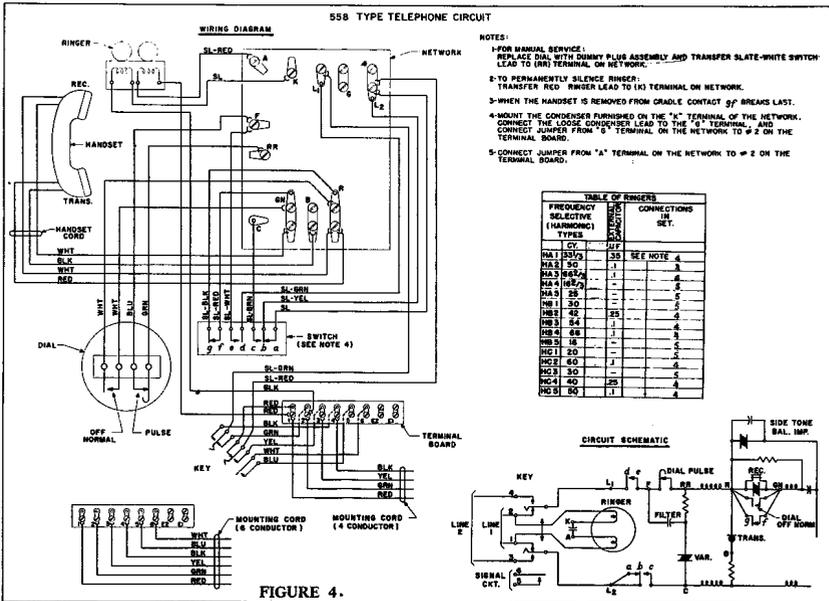


FIGURE 4.