

**TELEPHONE SET**  
**TYPE 703-(LR) 37 AND 38**  
**CONNECTIONS**


**1. GENERAL**

- 1.01 This practice provides the connecting information necessary in the installation of the 703-LR37 and LR38 type telephone sets.
- 1.02 The installed telephone must be provided with a separately mounted external ringer. See Figure 1.

**2. INSTALLATION REQUIREMENTS**


- 2.01 When a ringer is installed any ringer including the specially designed ringers for this series of telephones may be used. See Figure 1 for ringer wiring options.

**RINGER OPTIONS**

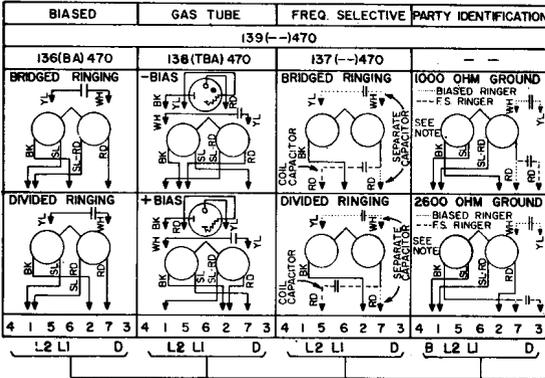


**RINGER NOTES**

1. Party Identification: Connect yellow mounting cord lead as shown by dashed lines. Mounting cord connections shown for ring party. For tip party reverse red and green cord conductors on ringer terminal board and use ring party station wiring.
2. 6-Conductor Mounting Cord: Yellow and black leads connected in parallel except for party identification

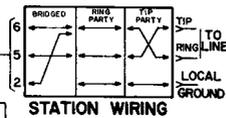

For Manual Service:  
 Replace dial with dummy plug and transfer WH-SL cradle switch lead from F to RR on network.

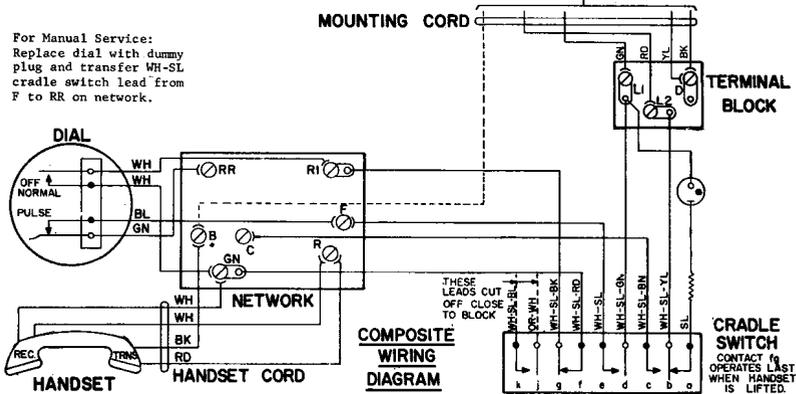

**CIRCUIT DIAGRAM**  
 (INSTRUMENT ONLY)

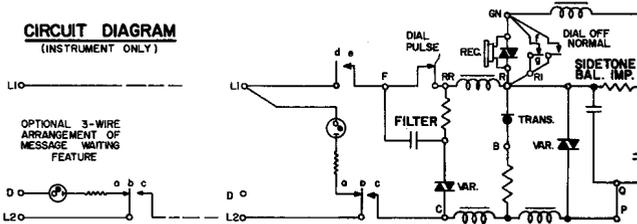


FIGURE 1. DIAGRAMS 703--(L)37- TELEPHONE AND 703--(L)38- TELEPHONE