

## TRIBUTE SERIES, SINGLE-LINE, PUSHBUTTON DIAL, DESK TELEPHONES REPLACEMENT PARTS

### 1. GENERAL

**1.01** This document covers the Tribute Series, single-line, pushbutton dial, desk telephones. (See Figure 1.) An exploded-view drawing of the telephone with major assembly groups (see Figure 2) and a replacement parts list (see Table A) are included.

**1.02** Whenever this section is reissued, reason for reissue will be listed in this paragraph.

**1.03** For additional information on description and installation of the telephones, refer to Section 50-010-100. Circuit labels are not provided for the

telephones. Related documents of the CORTELCO Telephone Apparatus Practices Manual provide information on components.


**1.04** The Tribute Series telephones are single-line, pushbutton dial, anti-sidetone units that operate efficiently over a wide range of loop resistances and line impedances.

**1.05** The Tribute Series telephones are identified by a coded label affixed to the bottom of the telephone. Refer to Section 50-010-100 of the CORTELCO Telephone Apparatus Practices Manual for ordering information of complete telephones and for an explanation of each code number.



AW86-337

Figure 1: Tribute Series, Single-Line, Pushbutton Dial, Desk Telephone

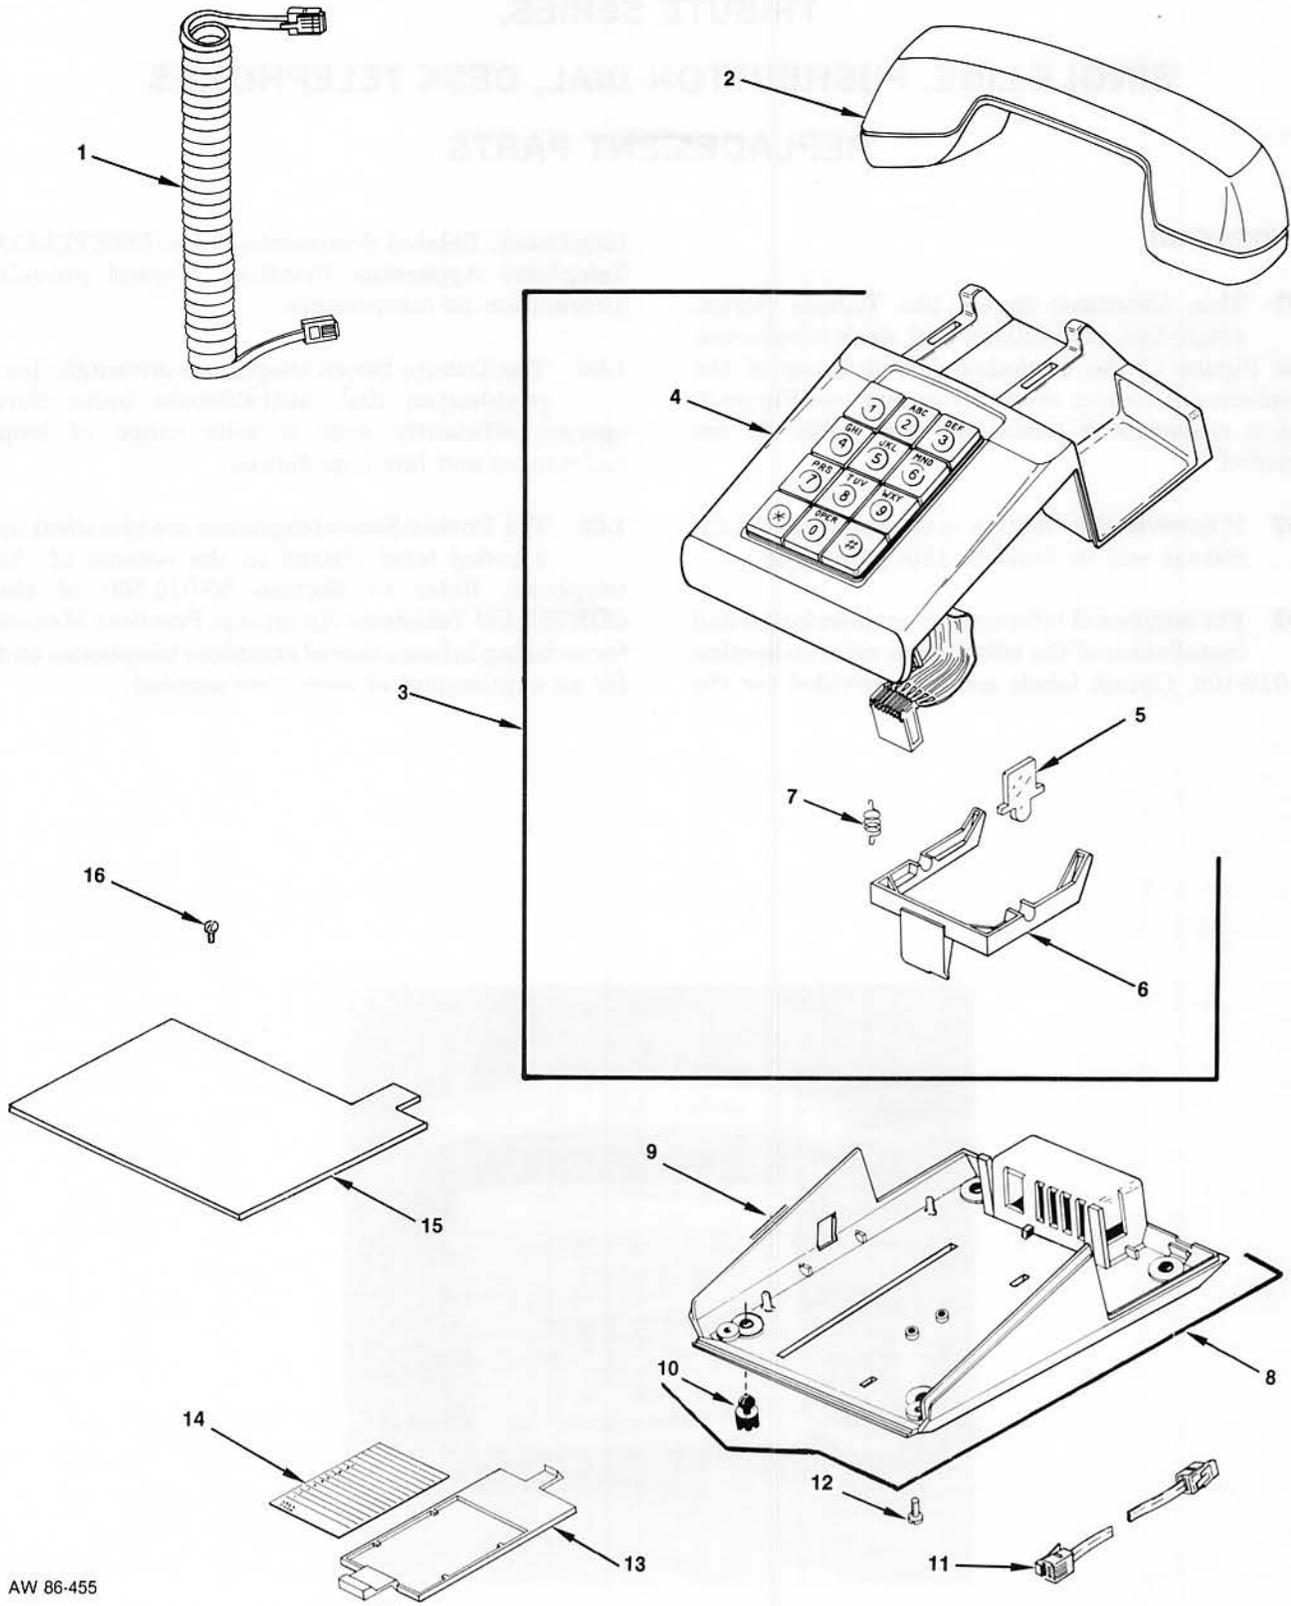

AW 86-455

Figure 2: Tribute Series, Single-Line, Pushbutton Dial, Desk Telephone, Exploded View

TABLE A  
REPLACEMENT PARTS LIST

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED						
			2010/20	2010/27	2010/44	2011/20	2011/27	2012/20	2015/20
		<b>Tribute Series, Single-Line, Pushbutton Dial, Desk Telephone</b>							
1	9018**-072	Cord, Handset	1	1	1	1	1	1	1
2	187402-1**	Handset Assembly <sup>1</sup>	1	1	1	1	1	1	1
2	187863-1**	Handset Assembly <sup>1</sup>	1	1	1	1	1	1	1
3	187317-1**	Cover Assembly	1	—	1	—	—	—	—
3	187317-2**	Cover Assembly	—	—	—	1	—	—	—
3	187317-3**	Cover Assembly	—	—	—	—	—	1	—
3	187317-4**	Cover Assembly	—	1	—	—	—	—	—
3	187317-5**	Cover Assembly	—	—	—	—	1	—	—
3	187317-6**	Cover Assembly	—	—	—	—	—	—	1
4	187318-1**	Cover	1	—	1	1	—	1	1
4	187318-2**	Cover	—	1	—	—	1	—	—
5	600045-619-001	Plunger, Hookswitch	2	2	2	2	2	2	2
6	600046-619-001	Actuator, Hookswitch	1	1	1	1	1	1	1
7	600048-619-001	Spring, Hookswitch	1	1	1	1	1	1	1
	187315-101	Lamp, Message Waiting (Not Shown)	—	1	—	—	1	—	—
8	187405-1**	Base Assembly	1	1	1	1	1	—	—
8	187405-2**	Base Assembly	—	—	—	—	—	1	1
9	604464-602-1**	Base	1	1	1	1	1	—	—
9	604464-602-2**	Base	—	—	—	—	—	1	1
10	184403-101	Foot, Rubber	4	4	4	4	4	4	4
11	182827-084	Cord, Line (Modular)	—	—	1	—	—	—	—
11	600989-540-084	Cord, Line (Modular)	1	1	—	1	1	1	1
12	181145-103	Screw, Pan-Head Type B	2	2	2	2	2	2	2
13	187131-0**	Frame, Directory	—	1	—	1	1	1	—
14	601339-626-001	Card, Directory	—	1	—	1	1	1	—
15	602108-536-101	PCB Assembly <sup>1</sup>	1	—	—	—	—	—	—
15	602108-536-102	PCB Assembly <sup>1</sup>	—	1	1	—	—	—	—
15	602109-536-101	PCB Assembly <sup>1</sup>	—	—	—	—	—	1	—
15	602109-536-102	PCB Assembly <sup>1</sup>	—	—	—	—	—	—	1
15	602110-536-101	PCB Assembly <sup>1</sup>	—	—	—	1	1	—	—
16	600017-204-026	Screw, PCB Mounting	1	1	1	1	1	1	1

AW88-117

## NOTES:

\*\*Substitute 2-Digit Color Code When Ordering.

<sup>1</sup> Refer To Component Parts Section Of This Manual For Assembly Parts List.