

## 3-LINE, PUSHBUTTON DIAL, DESK TELEPHONES

### REPLACEMENT PARTS

#### 1. GENERAL

**1.01** This document covers the 3-line, pushbutton dial, desk telephone. (See Figure 1.) An exploded-view drawing of the telephone with the major assembly groups (see Figure 2) and a replacement parts list (see Table A) are included.

**1.02** This section is reissued to reflect changes in the 3-line, pushbutton dial, desk telephone and to incorporate the changes listed in the Telephone Apparatus Practices Change Notice, Section 11-510-100. Whenever this section is reissued, reason for reissue will be listed in this paragraph.

**1.03** For additional information on description and installation of the telephones, refer to Section 50-576-103. The circuit labels appear in Section 50-576-105. Related documents of the ITT Telephone Apparatus Practices Manual provide information on components.


**1.04** The Models 2576 and 2577 desk telephones are 3-line, pushbutton dial, desk telephones that are designed to provide access to three lines without the use of external switching equipment. Each line has its own hold key. The Models 2576 and 2577 desk telephones are similar except for an exclusion feature included in the Model 2577 telephone. These desk telephones are anti-sidetone type units that operate efficiently over a wide range of loop resistances and line impedances.

**1.05** The Models 2576 and 2577 desk telephones are identified by a code number stamped in ink on the bottom of the base plate. Refer to Section 50-576-103 of the ITT Telephone Apparatus Practices Manual for ordering information of complete telephones and for an explanation of each code number.



AW 82-355

Figure 1: 3-Line, Pushbutton Dial, Desk Telephone

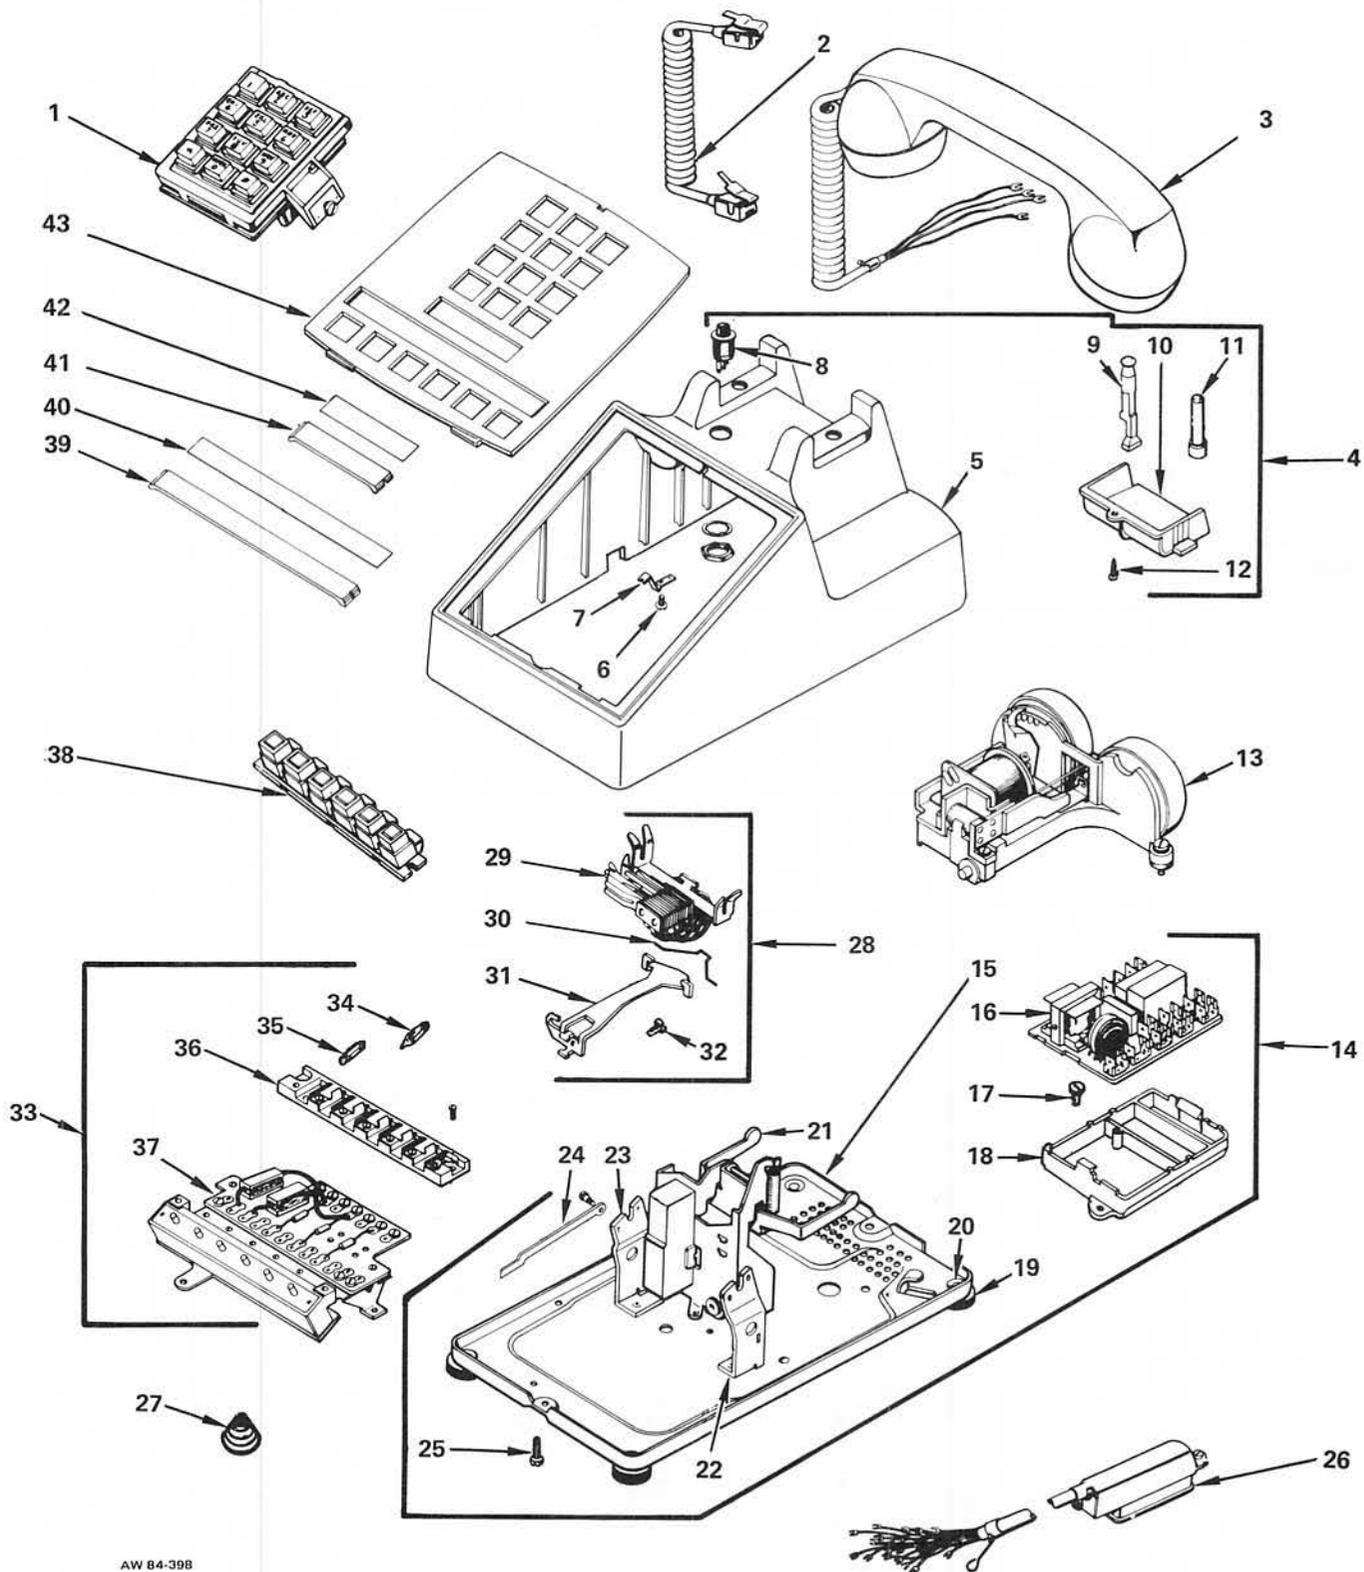

AW 84-398

Figure 2: 3-Line, Pushbutton Dial, Desk Telephone, Exploded View

TABLE A  
REPLACEMENT PARTS LIST

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED		
			2576/40	2576/41	2577/40
		<b>3-Line, Pushbutton Dial, Desk Telephone</b>			
1	004200-0PG	Dial Assembly, Pushbutton Digital, Metropolitan (Letters And Numerals) <sup>1</sup>	1	1	1
1	004200-0PD	Dial Assembly, Pushbutton Digital, Regular (Numerals Only) <sup>1, 2</sup>	1	1	1
1	003200-0PD	Dial Assembly, Pushbutton Tel-Touch, Regular (Numerals Only) <sup>1, 3</sup>	1	1	1
1	006300-0PG	Dial Assembly, Tel-Pulse, Metropolitan (Letters And Numerals) <sup>1, 3</sup>	1	—	—
2	9018**-072	Cord, Handset, Modular	1	1	1
	600152-611-002	Jack Assembly, Handset Cord, Modular (Not Shown)	1	1	1
	182990-105	Insulator Assembly, Modular (Not Shown)	1	1	1
3	0065**-0C2	Handset Assembly, Nonmodular <sup>1</sup>	1	1	1
3	0065**-0M2	Handset Assembly, Modular <sup>1</sup>	1	1	1
4	180158-0**	Housing And Plunger Assembly	1	1	—
4	180607-0**	Housing And Plunger Assembly	—	—	1
4	187901-0**	Housing And Plunger Assembly, Full-Modular	1	1	—
4	187905-0**	Housing And Plunger Assembly, Full-Modular	—	—	1
5	180156-0**	Housing	1	1	1
5	187900-0**	Housing, Full-Modular	1	1	1
6	181289-101	Screw, Faceplate Clip	1	1	1
7	086143-101	Clip, Faceplate	1	1	1
8	181973-101	Pushbutton, Operator Recall	1	1	1
9	079982-102	Plunger, Exclusion	—	—	1
10	079097-0**	Plunger, Retainer	1	1	1
11	079101-102	Plunger, Cradle Switch	2	2	1
12	075407-102	Screw, Plunger Retainer	1	1	1
13	000130-0BA	Ringer <sup>1</sup>	1	1	1
14	079525-110	Base Assembly	1	1	1
15	079411-101	Plate, Base	1	1	1
16	181427-102	PC Network (#183070-102) <sup>1</sup>	1	1	1
17	096407-103	Screw, Network Mounting	1	1	1
18	182175-101	Spacer, Network	1	1	1
19	182337-101	Foot	4	4	4
20	082486-102	Rivet, Foot	4	4	4
21	079489-102	Cradle Switch Assembly <sup>1</sup>	1	1	1
	079490-101	Spring Nest Assembly (Not Shown)	1	1	1
22	087511-101	Bracket, Dial (R.H.)	1	1	1
23	087511-102	Bracket, Dial (L.H.)	1	1	1
24	190167-101	Link, Operating	1	1	1
25	075486-101	Screw, Cabinet Locking	1	1	1
26	184369-072	Cord, Mounting	1	1	1
27	086374-101	Spring, Helical	1	1	1

TABLE A  
REPLACEMENT PARTS LIST (Cont)

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED		
			2576/40	2576/41	2577/40
		3-Line, Pushbutton Dial, Desk Telephone			
28	079613-101	Exclusion Switch Assembly	—	—	1
29	079614-101	Switch, Exclusion	—	—	1
30	079624-101	Retainer	—	—	1
31	079605-101	Bracket	—	—	1
32	069020-103	Screw, B.H.M.	—	—	1
33	184434-101	Key And Lamp Assembly	1	1	1
34	190191-101	Lamp, Neon	3	3	3
35	000051-00A	Lamp, Incandescent	3	3	3
36	190196-101	Lamp Strip Assembly	1	1	1
37	000508-101	Key Assembly	1	1	1
38	087472-103	Key Strip Assembly	1	1	1
	087471-101	Strip, Retainer	1	1	1
	087470-101	Button, Clear	3	3	3
	087470-102	Button, Red	3	3	3
	087469-101	Plunger, Retainer	1	1	1
39	088522-101	Retainer, Designation Card	1	1	1
40	082028-101	Card, Designation	1	1	1
41	087514-101	Retainer, Number Card	1	1	1
42	087513-101	Card, Number	1	1	1
42	087513-102	Card, Number, Strip Of 6 (Not Shown) <sup>4</sup>	—	—	—
43	180148-0**	Faceplate	1	—	1
43	180622-0**	Faceplate	—	1	—
	181971-102	Pushbutton, Grounding (Not Shown)	—	1	—
	000144-0CA	Common Audible Signal Unit (Not Shown)			
	000041-101	Transformer (Not Shown)			

## NOTES:

- <sup>1</sup> Refer to Component Parts Section of this manual for Assembly Parts List.
  - <sup>2</sup> The 004200-OPD dial replaces the 003200-OPD dial.
  - <sup>3</sup> These products have been discontinued, but are included to provide a source of information for telephones still in service.
  - <sup>4</sup> These parts must be ordered separately.
- \*\* Substitute 2-digit color code when ordering.