

SINGLE-LINE, PUSHBUTTON DIAL, HANDSFREE TELEPHONES

REPLACEMENT PARTS


1. GENERAL

- 1.01** This document covers the single-line, pushbutton dial, handsfree telephone. (See Figure 1.) An exploded-view drawing of the telephone with major assembly groups (see Figure 2) and a replacement parts list (see Table A) are included.
- 1.02** This section is reissued to reflect changes in the single-line, pushbutton dial, handsfree telephone and to incorporate the changes listed in the Telephone Apparatus Practices Change Notice, Section 11-510-100. Whenever this section is reissued, reason for reissue will be listed in this paragraph.
- 1.03** For additional information on description and installation of the telephones, refer to Section 50-844-103. The circuit labels appear in Section 50-844-105. Related documents of the ITT Telephone Apparatus Practices Manual provide information on components.
- 1.04** The Model 2844 handsfree telephones are single-line, pushbutton dial, anti-sidetone type units that operate efficiently over a wide range of loop resistances and line impedances.
- 1.05** Handsfree telephones are equipped with a microphone and loudspeaker that combine with the telephone circuitry to permit their use without having to hold the handset. This feature may be switched ON or OFF. When OFF, the telephone is used in the normal manner. When ON, a user may converse on the telephone from any direction at a distance of several feet.
- 1.06** The Model 2844 handsfree telephones are identified by a code number stamped in ink on the bottom of the base plate. Refer to Section 50-844-103 of the ITT Telephone Apparatus Practices Manual for ordering information and for an explanation of each code number.



AW 82-463

Figure 1: Single-Line, Pushbutton Dial, Handsfree Telephone

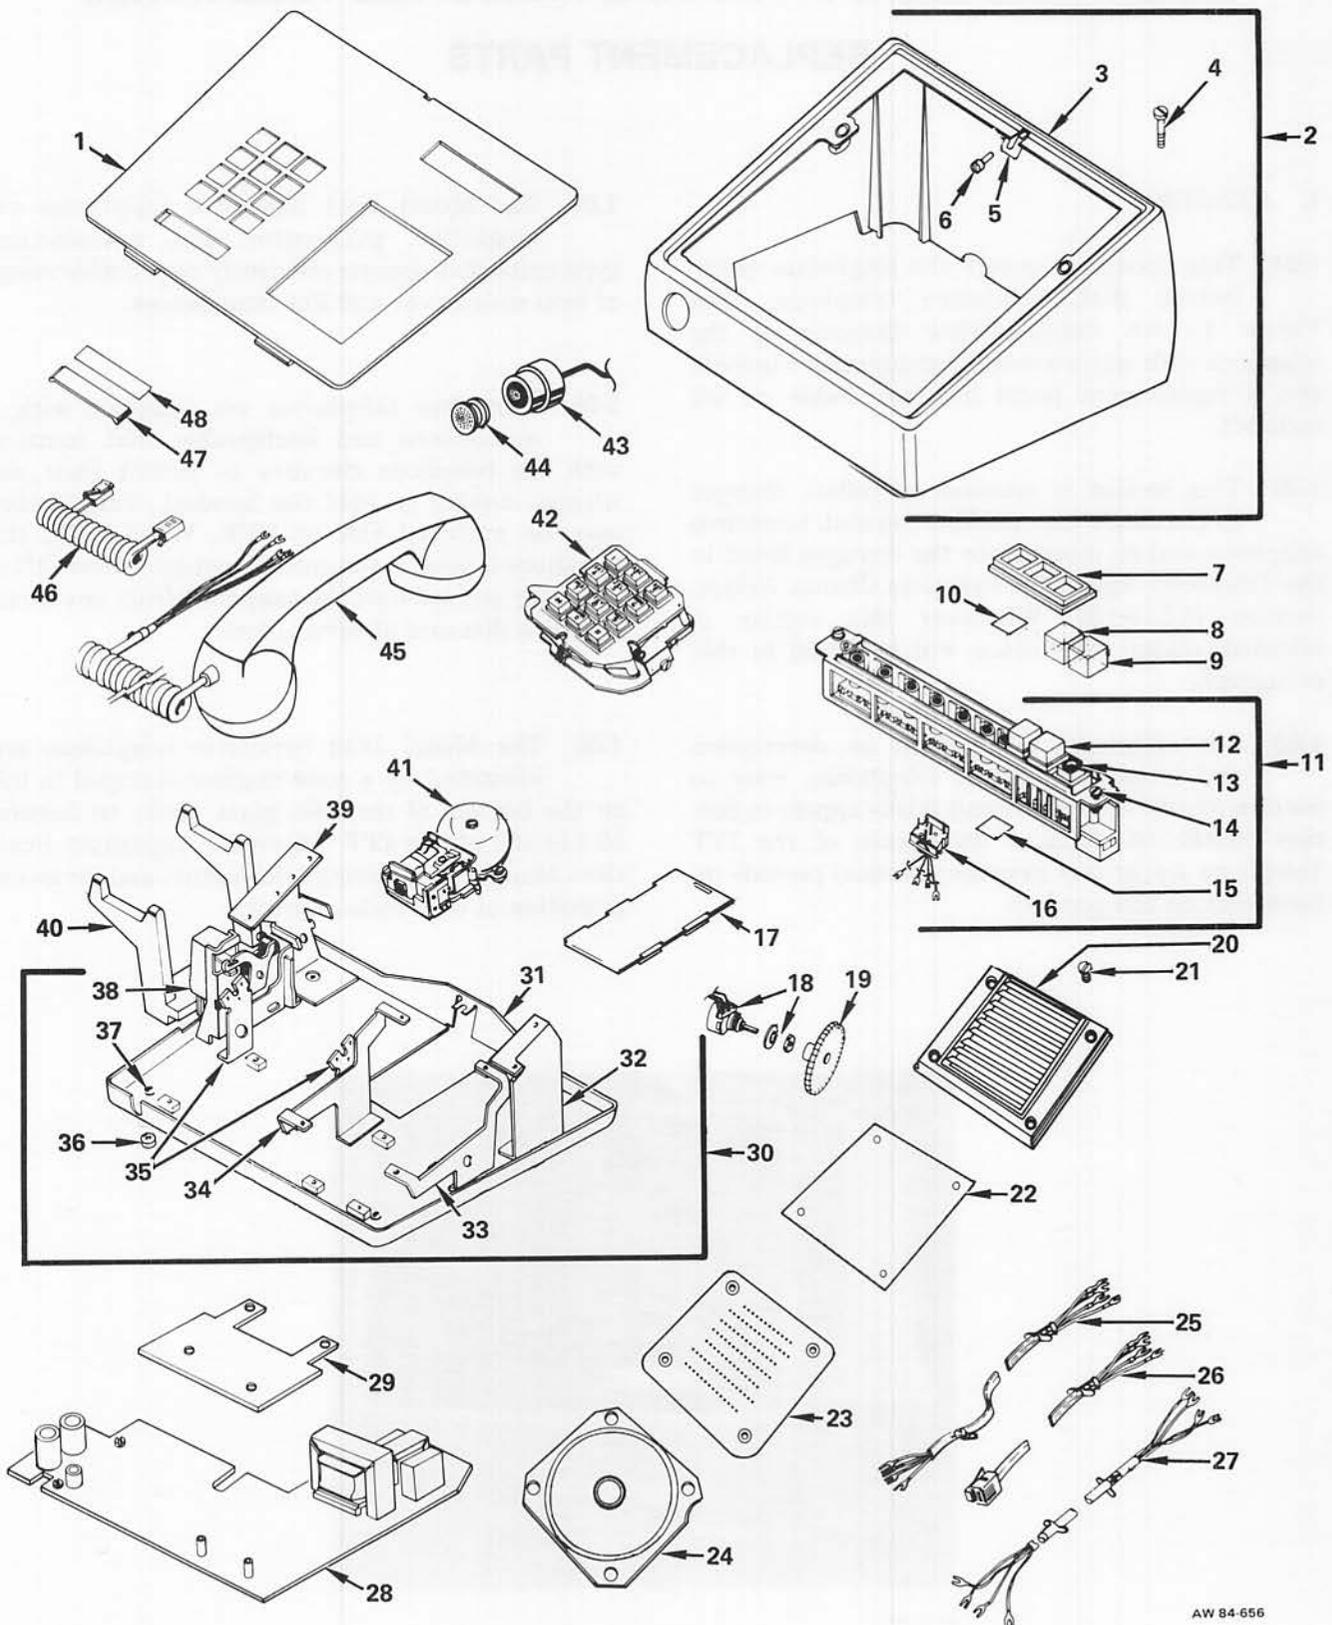

AW 84-656

Figure 2: Single-Line, Pushbutton Dial, Handsfree Telephone, Exploded View

TABLE A
REPLACEMENT PARTS LIST

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED	
			2844/29	2844/39
		Single-Line, Handsfree, Pushbutton Dial, Desk Telephone	2844/29	2844/39
1	181876-***	Faceplate	1	1
2	186080-0**	Housing Assembly	1	1
2	187916-0**	Housing Assembly, Full-Modular	1	1
3	186079-0**	Housing	1	1
3	187915-0**	Housing, Full-Modular	1	1
4	095992-102	Screw, Housing	2	2
5	181100-101	Spring, Latch	1	1
6	181289-101	Screw, Latch Spring	1	1
7	181906-101	Collar, Key Strip	1	1
8	181131-101	Cap, Clear	1	1
9	181131-103	Cap, Yellow	2	2
10	181281-101	Tab, Designation Key (Strip Of 12)	1	1
11	181901-102	Key Assembly	1	1
12	181122-101	Button	3	3
13	000051-00A	Lamp	2	2
14	095992-102	Screw	2	2
15	181900-101	Tab, Key (ON/OFF)	1	1
16	181908-101	Plug And Wire Assembly (Black)	1	1
16	181909-101	Plug And Wire Assembly (Red)	1	1
16	181910-101	Plug And Wire Assembly (Yellow)	1	1
17	181290-101	Slide	1	1
18	181809-102	Control, Volume	1	1
19	181808-101	Knob, Volume Control	1	1
20	181795-201	Grill, Speaker	1	1
21	181892-101	Screw, Speaker Grill	4	4
22	181899-101	Cloth, Speaker Grill	1	1
23	181794-101	Plate, Speaker ³	1	1
24	181898-101	Speaker Assembly	1	1
25	184377-102	Cord, Desk Stand (Nonmodular)	—	1
26	182957-084	Cord, Desk Stand (Quarter-Modular)	1	—
27	182930-101	Cord, Transformer	1	1

TABLE A
REPLACEMENT PARTS LIST (Cont)

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED	
			2844/29	2844/39
		Single-Line, Handsfree, Pushbutton Dial, Desk Telephone	2844/29	2844/39
28	185889-101	PC Board Assembly	1	1
29	181907-101	Terminal Board Assembly	1	1
30	181811-103	Base Assembly	1	1
31	181811-101	Plate, Base	1	1
32	181251-101	Bracket, Key Right	1	1
33	181800-101	Bracket, Speaker Right	1	1
34	181801-101	Bracket, Speaker Left	1	1
35	181254-102	Bracket, Dial	2	2
36	182337-101	Foot	4	4
37	082486-102	Rivet, Foot	4	4
38	181810-101	Cradle Switch Assembly ¹	1	1
39	181252-101	Bracket, Key Left	1	1
40	183105-101	Switch Hook Assembly	1	1
	182900-101	Cradle, Switch Hook	1	1
	181145-101	Screw, Switch Hook Cradle	3	3
	181297-102	Arm, Operating	1	1
	184198-101	Kit, Plastic Cradle (Replacement For Metal Cradle)	1	1
	183105-101	Switch Hook Assembly	1	1
	075307-104	Spring, Cradle Return	1	1
	181282-101	Shaft, Pivot	1	1
	073538-110	Ring, Retainer	1	1
	075307-104	Spring, Cradle Return	1	1
41	000148-DBA	Ringer ¹	1	1
42	004600-OPG	Dial Assembly, Pushbutton Digital, Metropolitan (Letters And Numerals) ^{1, 2}	1	1
42	003600-OPG	Dial Assembly, Pushbutton Tel-Touch, Metropolitan (Letters And Numerals) ^{1, 3}	1	1
43	186088-101	Microphone Assembly	1	1
44	185893-0**	Grill, Microphone	1	1
45	0065**-OC2	Handset Assembly, Nonmodular ¹	1	1
45	0065**-OM2	Handset Assembly, Modular ¹	1	1
46	9018**-022	Cord, Handset, Modular	1	1
47	087514-101	Retainer, Number Card	1	1
48	087513-101	Card, Number	1	1
48	087513-102	Card, Number, Strip Of 6 (Not Shown) ⁴	—	—

TABLE A
REPLACEMENT PARTS LIST (Cont)

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED	
			2844/29	2844/39
		Single-Line, Handsfree, Pushbutton Dial, Desk Telephone	2844/29	2844/39
	600152-611 -001	Jack Assembly, Handset Cord, Modular (Not Shown)	1	1
	182990-105	Insulator Assembly, Modular (Not Shown)	1	1
	181768-101	Transformer (Not Shown)	1	1
	187944-101	Nameplate, ITT (Not Shown)	1	1

AW 84-830

NOTES:

- ¹ Refer to Component Parts Section of this manual for Assembly Parts List.
² The 004600-OPG dial replaces the 003600-OPG dial.
³ These products have been discontinued, but are included to provide a source of information for telephones still in service.
⁴ These products must be ordered separately.
 ** Substitute 2-digit color code when ordering.
 *** Substitute 3-digit color code when ordering faceplate.

CODE	COLOR	CODE	COLOR	CODE	COLOR	CODE	COLOR
101	Charcoal	104	Light Gray	107	Cocoa Brown	110	Clear
102	Light Green	105	Burnt Orange	108	Harvest Gold	111	Woodgrain
103	Muted Beige	106	Light Ash	109	Cherry Red		