

10-BUTTON, PUSHBUTTON DIAL, WALL TELEPHONES REPLACEMENT PARTS

1. GENERAL

1.01 This document covers the 10-button, pushbutton dial, wall telephone. (See Figure 1.) An exploded-view drawing of the telephone with major assembly groups (see Figure 2) and a replacement parts list (see Table A) are included.


1.02 This section is reissued to reflect changes in the 10-button, pushbutton dial, wall telephone and to incorporate the changes listed in the Telephone Apparatus Practices Change Notice, Section 11-510-100. Whenever this section is reissued, reason for reissue will be listed in this paragraph.

1.03 For additional information on description and installation of the telephones, refer to Section 50-854-103. The circuit labels appear in Section

50-854-105. Related documents of the ITT Telephone Apparatus Practices Manual provide information on components.


1.04 The Model 2854 wall telephones are 10-button, pushbutton dial, anti-sidetone type units that operate efficiently over a wide range of loop resistances and line impedances. These telephones are designed for use with key telephone systems, such as the ITT 1A2 System, where several telephones have access to the same lines, CO trunks, or intercom lines.

1.05 The Model 2854 wall telephones are identified by a code number stamped in ink on the bottom of the base plate. Refer to Section 50-854-103 of the ITT Telephone Apparatus Practices Manual for ordering information and for an explanation of each code number.

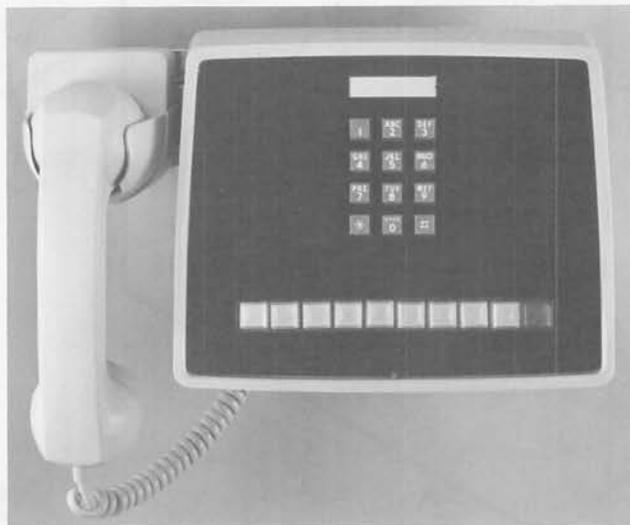

AW 82-363

Figure 1: 10-Button, Pushbutton Dial, Wall Telephone

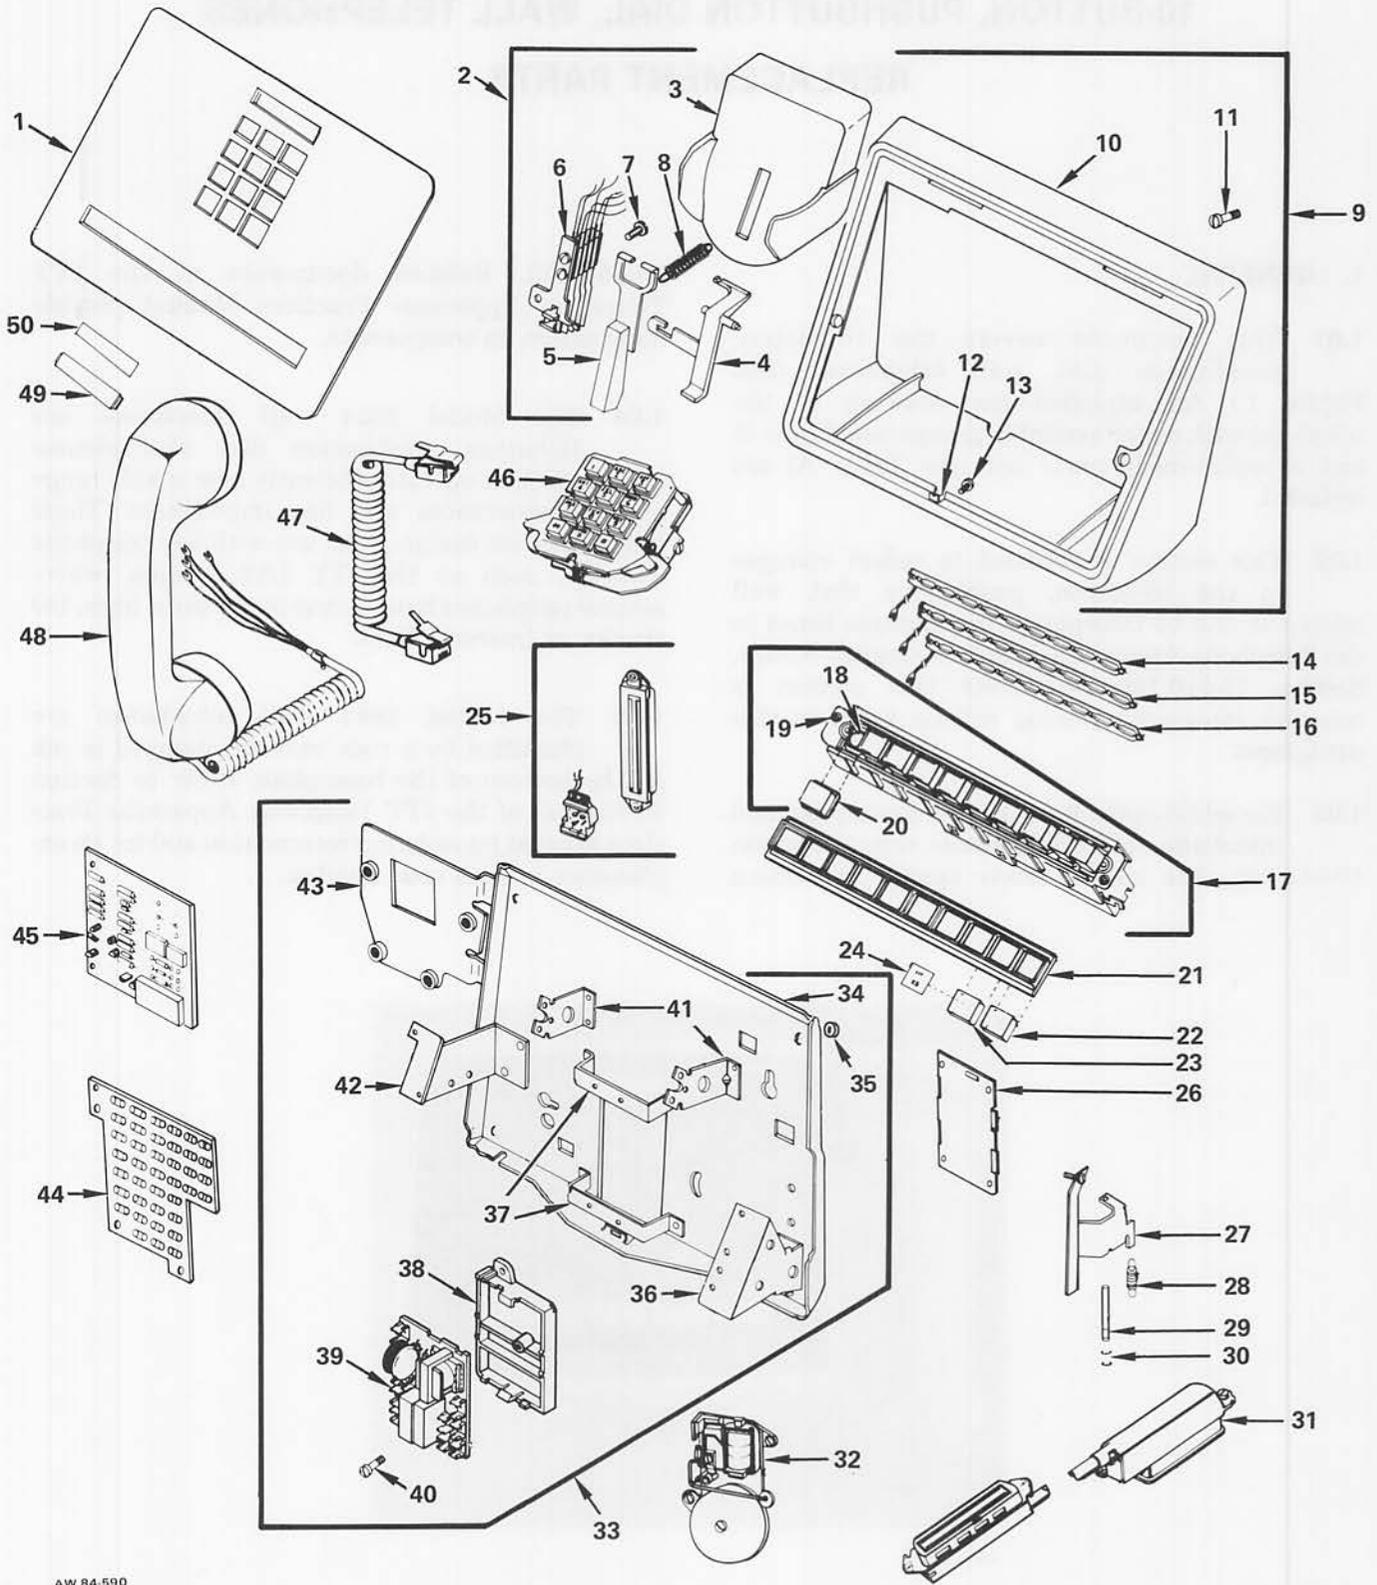

AW 84-590

Figure 2: 10-Button, Pushbutton Dial, Wall Telephone, Exploded View

TABLE A
REPLACEMENT PARTS LIST

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED	
			2854/42	2854/76
		10-Button, Pushbutton Dial, Wall Telephone	2854/42	2854/76
1	181142-***	Faceplate	1	—
1	181687-***	Faceplate	—	1
2	186177-0**	Hookswitch Cradle Assembly	1	1
3	186174-0**	Cradle, Hookswitch	1	1
4	186175-101	Arm, Pivot	1	1
5	088773-101	Plunger	1	1
6	186178-101	Cradle Switch Assembly ¹	1	1
7	096407-102	Screw	1	1
8	075307-102	Spring	1	1
9	181246-0**	Housing Assembly	1	1
9	187907-0**	Housing Assembly, Full-Modular	1	1
10	181106-0**	Housing	1	1
10	187921-0**	Housing, Full-Modular	1	1
11	095992-102	Screw, Housing	2	2
12	181100-101	Spring, Latch	1	1
13	181289-101	Screw, Latch Spring	1	1
14	181292-105	Strip, Contact (SL Wire)	1	1
15	181292-102	Strip, Contact (RD Wire)	1	1
16	181292-101	Strip, Contact (GN Wire)	1	1
17	181137-104	Key Assembly	1	—
17	182552-102	Key Assembly	—	1
18	000051-00A	Lamp	9	9
19	181108-101	Screw	2	2
20	181122-101	Button	10	10
21	181287-101	Collar, Key Strip	1	1
22	181131-102	Cap, Red	1	1
23	181131-101	Cap, Clear	9	9
24	181281-101	Tab, Key Designation (Strip Of 12)	1	1
25	181154-101	Cord, Internal	1	—
25	182546-101	Cord, Internal	—	1
26	181290-101	Slide	1	1
27	185488-101	Arm, Latch	1	1
28	181151-101	Spring, Latch Arm	1	1
29	181152-101	Pin, Pivot	1	1
30	073538-110	Ring, Retainer	2	2
31	184371-102	Cord, Mounting (50-Conductor)	1	1
32	000148-DBA	Ringer ¹	1	1

SECTION 50-854-104, ISS 2

TABLE A
REPLACEMENT PARTS LIST (Cont)

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED	
			2854/42	2854/76
		10-Button, Pushbutton Dial, Wall Telephone	2854/42	2854/76
33	181249-101	Base Assembly	1	1
34	181141-102	Plate, Base	1	1
35	075303-101	Grommet	4	4
36	181150-103	Key Bracket Assembly	1	1
	181252-101	Bracket, Key	1	1
37	181255-102	Bracket, Plug	2	2
38	182175-101	Spacer, Network	1	1
39	181427-102	PC Network (#183070-102) ¹	1	1
40	096407-103	Screw, Network Mounting	1	1
41	181258-101	Bracket, Dial	2	2
42	181251-101	Bracket, Key	1	1
43	181278-101	Bracket, Hookswitch Cradle	1	1
44	181298-101	Terminal Board	1	1
45	182691-101	PC Board (Exclusion)	—	1
46	004600-0PG	Dial Assembly, Pushbutton Digital, Metropolitan (Letters And Numerals) ^{1, 2}	1	1
46	003600-0PG	Dial Assembly, Pushbutton Tel-Touch, Metropolitan (Letters And Numerals) ^{1, 4}	1	1
46	004600-0PD	Dial Assembly, Pushbutton Digital, Regular (Numerals Only) ^{1, 3}	1	1
46	003600-0PD	Dial Assembly, Pushbutton Tel-Touch, Regular (Numerals Only) ^{1, 4}	1	1
47	9018**-072	Cord, Handset, Modular	1	1
48	0065**-0C2	Handset Assembly, Nonmodular ¹	1	1
48	0065**-0M2	Handset Assembly, Modular ¹	1	1
49	087514-101	Retainer, Number Card	1	1
50	087513-101	Card, Number	1	1
50	087513-102	Card, Number, Strip Of 6 (Not Shown) ⁵	—	—

TABLE A
REPLACEMENT PARTS LIST (Cont)

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED	
			2854/42	2854/76
		10-Button, Pushbutton Dial, Wall Telephone		
	600152-611-001	Jack Assembly, Handset Cord, Modular (Not Shown)	1	1
	182990-105	Insulator Assembly, Modular (Not Shown)	1	1
	181971-101	Pushbutton, Exclusion Release (Not Shown)	—	1
	187944-101	Nameplate, ITT (Not Shown)	1	1

AW 84-873

NOTES:

- ¹ Refer to Component Parts Section of this manual for Assembly Parts List.
 - ² The 004600-OPG dial replaces the 003600-OPG dial.
 - ³ The 004600-OPD dial replaces the 003600-OPD dial.
 - ⁴ These products have been discontinued, but are included to provide a source of information for telephones still in service.
 - ⁵ These products must be ordered separately.
- ** Substitute 2-digit color code when ordering.
*** Substitute 3-digit color code when ordering faceplate.

CODE	COLOR	CODE	COLOR	CODE	COLOR	CODE	COLOR
101	Charcoal	104	Light Gray	107	Cocoa Brown	110	Clear
102	Light Green	105	Burnt Orange	108	Harvest Gold	111	Woodgrain
103	Muted Beige	106	Light Ash	109	Cherry Red		