

30-BUTTON, ROTARY DIAL, DESK TELEPHONES

REPLACEMENT PARTS

1. GENERAL

1.01 This document covers the 30-button, rotary dial, desk telephone. (See Figure 1.) An exploded-view drawing of the telephone with major assembly groups (see Figure 2) and a replacement parts list (see Table A) are included.


1.02 This section is reissued to reflect changes in the 30-button, rotary dial, desk telephone and to incorporate the changes listed in the Telephone Apparatus Practices Change Notice, Section 11-510-100. Whenever this section is reissued, reason for reissue will be listed in this paragraph.

1.03 For additional information on description and installation of the telephones refer to Section 50-861-100. The circuit labels appear in Section

50-861-102. Related documents of the ITT Telephone Apparatus Practices Manual provide information on components.


1.04 The Model 861 desk telephones are 30-button, rotary dial, anti-sidetone type units that operate efficiently over a wide range of loop resistances and line impedances. These telephones are designed for use with key telephone systems, such as the ITT 1A2 System, where several telephones have access to the same lines, CO trunks, or intercom lines.

1.05 The Model 861 desk telephones are identified by a code number stamped in ink on the bottom of the base plate. Refer to Section 50-861-100 of the ITT Telephone Apparatus Practices Manual for ordering information and for an explanation of each code number.

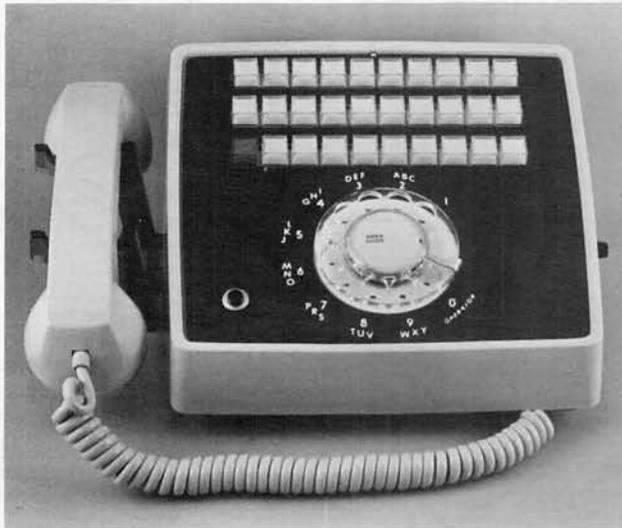

AW 82-468

Figure 1: 30-Button, Rotary Dial, Desk Telephone

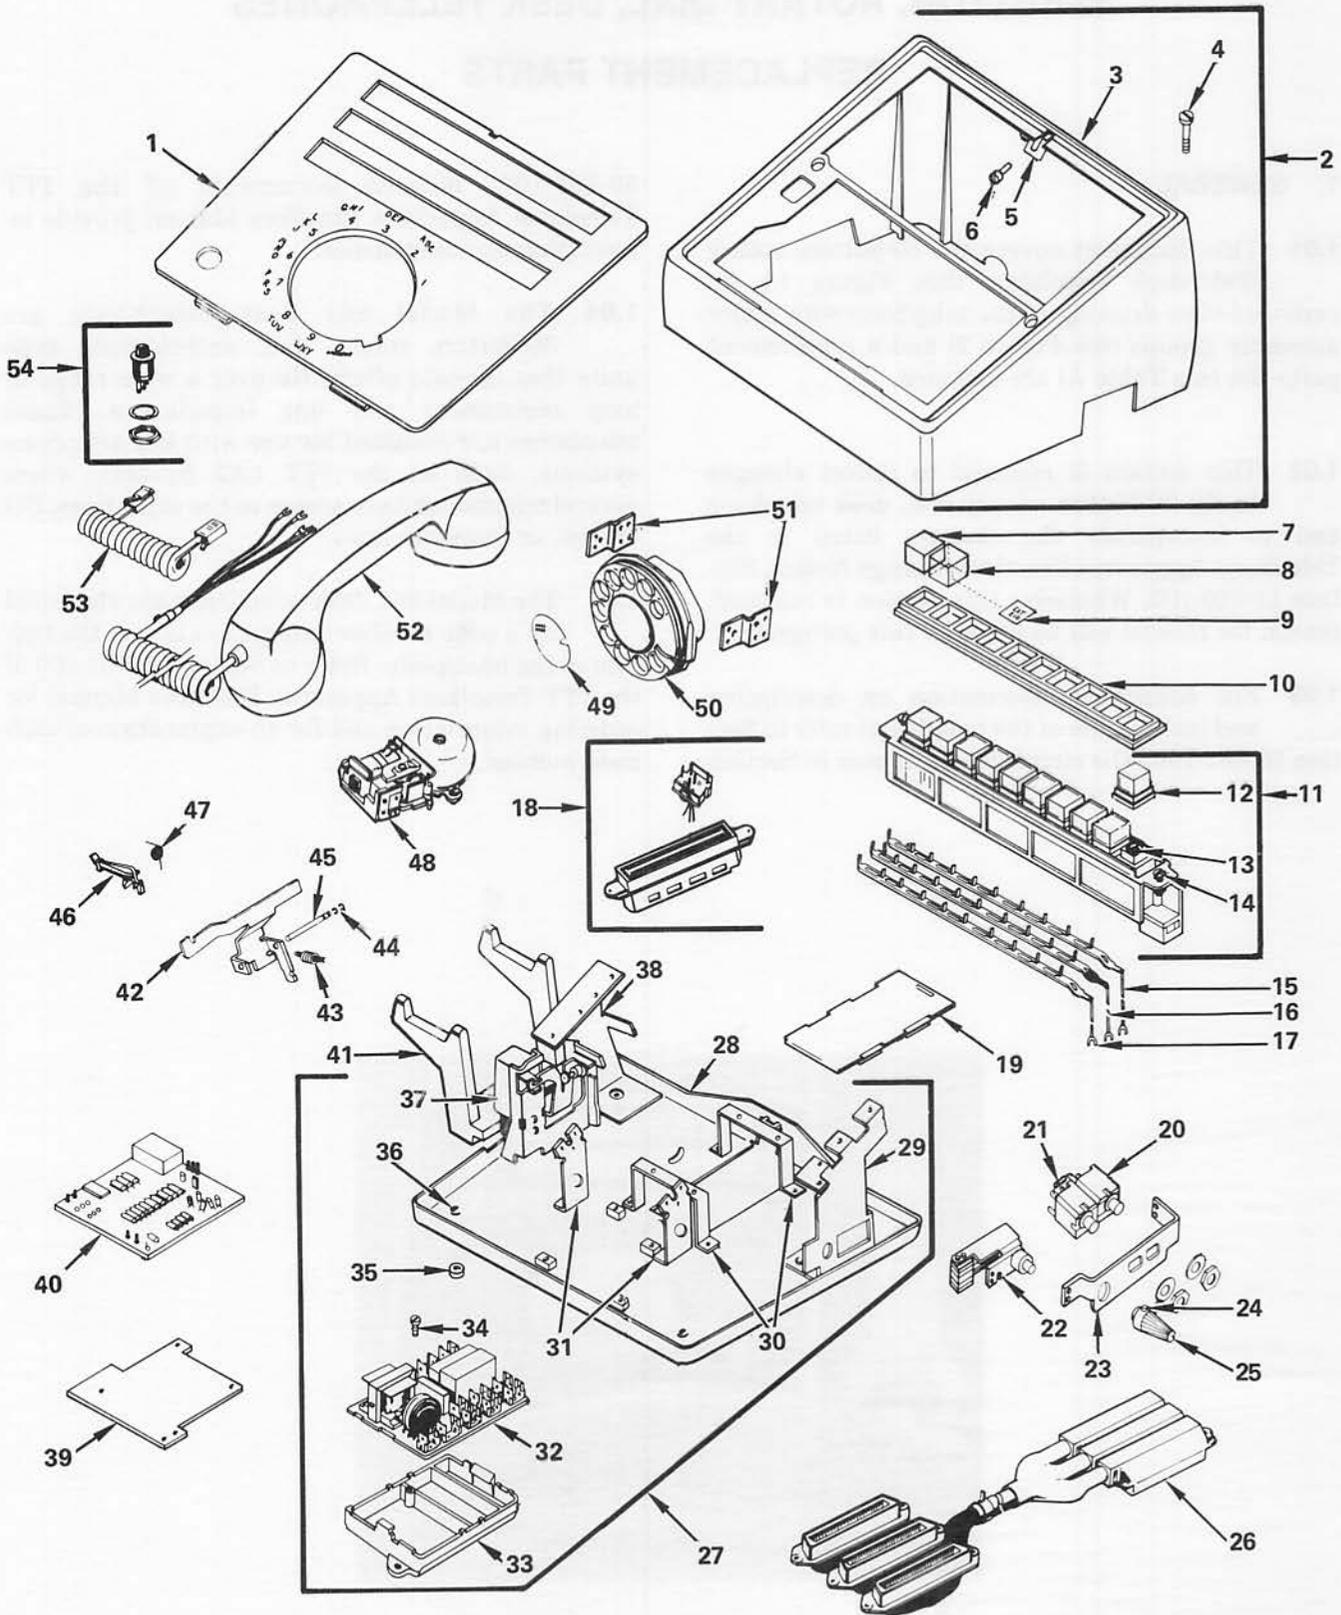

AW 84-619

Figure 2: 30-Button, Rotary Dial, Desk Telephone, Exploded View

TABLE A
REPLACEMENT PARTS LIST

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED	
			861/56	861/76
		30-Button, Rotary Dial, Desk Telephone	861/56	861/76
1	182154-***	Faceplate	1	1
2	182153-0**	Housing Assembly	1	1
2	187914-0**	Housing Assembly, Full-Modular	1	1
3	182152-0**	Housing	1	1
3	187923-0**	Housing, Full-Modular	1	1
4	095992-102	Screw, Housing	2	2
5	181100-101	Spring, Latch	1	1
6	181289-101	Screw, Latch Spring	1	1
7	181131-102	Cap, Red	1	1
8	181131-101	Cap, Clear	29	29
9	181281-101	Tab, Designation (Strip Of 12)	3	3
10	181287-101	Collar, Key Strip	3	3
11	181137-101	Key Assembly (9 Lines With Hold)	1	1
11	181137-102	Key Assembly (10 Lines)	1	—
11	181137-103	Key Assembly (10 Lines)	1	1
11	182661-101	Key Assembly (10 Lines)	—	1
12	181122-101	Button	30	30
13	000051-00A	Lamp	29	29
14	095992-102	Screw	6	6
15	181292-101	Strip, Contact (GN Wire)	3	3
16	181292-102	Strip, Contact (RD Wire)	3	3
17	181292-105	Strip, Contact (SL Wire)	1	1
18	181154-101	Cord, Internal	1	1
18	181155-101	Cord, Internal	2	1
18	182662-101	Cord, Internal	—	1
19	181997-101	Slide	1	1
20	181996-102	Jack, Headset	2	2
21	095655-101	Varistor	1	1
22	182144-101	Switch, Headset/Handset	1	1
23	181979-101	Bracket, Headset Jack	1	1
24	077046-102	Set Screw, Knob	1	1
25	084774-103	Knob, Headset/Handset Switch	1	1
26	184356-102	Cord, Mounting (150-Conductor)	1	1

TABLE A
REPLACEMENT PARTS LIST (Cont)

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED	
			861/56	861/76
		30-Button, Rotary Dial, Desk Telephone	861/56	861/76
27	182146-102	Base Assembly	1	1
28	181991-101	Plate, Base	1	1
29	181993-101	Bracket, Key Right	1	1
30	181989-101	Bracket, Plug	2	2
31	181254-102	Bracket, Dial	2	2
32	181427-101	PC Network (#183070-101) ¹	1	1
33	182175-101	Spacer, Network	1	1
34	096407-103	Screw, Network Mounting	1	1
35	182337-101	Foot	4	4
36	082486-102	Rivet, Foot	4	4
37	181260-101	Cradle Switch Assembly ¹	1	1
38	186212-101	Left Bracket Assembly	1	1
	181992-101	Bracket, Key Left	1	1
	185618-101	Bracket, Trip	1	1
39	181986-101	Terminal Board	1	1
40	182691-101	PC Board (Exclusion)	—	1
41	183105-102	Switch Hook Assembly	1	1
	182900-101	Cradle, Switch Hook	1	1
	181145-101	Screw, Switch Hook Cradle	3	3
	185494-101	Operating Arm Assembly	1	1
	185487-101	Arm, Operating	1	1
	075307-104	Spring, Cradle Return	1	1
	181282-101	Shaft, Pivot	1	1
	073538-110	Ring, Retainer	1	1
42	186213-101	Arm, Latch	1	1
43	181151-102	Spring, Latch Arm	1	1
44	073538-110	Ring, Retainer	2	2
45	181995-101	Pin, Pivot	1	1
46	185486-101	Arm, Trip	1	1
47	185485-101	Spring, Torsion	1	1
48	000148-DBA	Ringer ¹	1	1
49	075415-101	Card, Number	1	1

TABLE A
REPLACEMENT PARTS LIST (Cont)

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED	
			861/56	861/76
		30-Button, Rotary Dial, Desk Telephone		
			861/56	861/76
50	003800-00H	Dial Assembly, Metropolitan (Letters And Numerals) ¹	1	1
51	181146-101	Bracket, Dial Adapter	2	2
52	0065**-0C2	Handset Assembly, Nonmodular ¹	1	1
52	0065**-0M2	Handset Assembly, Modular ¹	1	1
53	9018**-072	Cord, Handset, Modular	1	1
54	181973-101	Pushbutton, Operator Recall	1	—
54	181971-101	Pushbutton, Exclusion Release	—	1
	182794-101	Nameplate, Headset/Handset Switch (Not Shown)	1	1
	600152-611 -001	Jack Assembly, Handset Cord, Modular (Not Shown)	1	1
	182990-105	Insulator Assembly, Modular (Not Shown)	1	1
	187944-101	Nameplate, ITT (Not Shown)	1	1

NOTES:

¹ Refer to Component Parts Section of this manual for Assembly Parts List.

** Substitute 2-digit color code when ordering.

*** Substitute 3-digit color code when ordering faceplate.

CODE	COLOR	CODE	COLOR	CODE	COLOR	CODE	COLOR
101	Charcoal	104	Light Gray	107	Cocoa Brown	110	Clear
102	Light Green	105	Burnt Orange	108	Harvest Gold	111	Woodgrain
103	Muted Beige	106	Light Ash	109	Cherry Red		

AW 84-791