



Figure 2: 10-Button, Rotary Dial, Desk Telephone With Built-In Call Announcer, Exploded View

TABLE A  
REPLACEMENT PARTS LIST

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED		
			870/42	870/46	870/76
		10-Button, Rotary Dial, Desk Telephone With Built-In Call Announcer	870/42	870/46	870/76
1	181790-***	Faceplate	1	—	—
1	182782-***	Faceplate	—	1	1
2	181102-0**	Housing Assembly	1	1	1
2	187906-0**	Housing Assembly, Full-Modular	1	1	1
3	181104-0**	Housing	1	1	1
3	187922-0**	Housing, Full-Modular	1	1	1
4	095992-102	Screw, Housing	2	2	2
5	181100-101	Spring, Latch	1	1	1
6	181289-101	Screw, Spring Latch	1	1	1
7	181131-102	Cap, Red	1	1	1
8	181131-101	Cap, Clear	9	9	9
9	181281-101	Tab, Key Designation (Strip Of 12)	1	1	1
10	181287-101	Collar, Key Strip	1	1	1
11	181137-104	Key Assembly	1	1	—
11	182552-102	Key Assembly	—	—	1
12	181122-101	Button	10	10	10
13	000051-00A	Lamp	9	9	9
14	095992-102	Screw	2	2	2
15	181292-101	Strip, Contact (GN Wire)	1	1	1
16	181292-102	Strip, Contact (RD Wire)	1	1	1
17	181292-105	Strip, Contact (SL Wire)	1	1	1
18	181154-101	Cord, Internal	1	1	—
18	182546-101	Cord, Internal	—	—	1
19	181290-101	Slide	1	1	1
20	184061-101	Control, Volume	1	1	1
21	181808-101	Knob, Volume Control	1	1	1
22	184054-201	Speaker Grill Assembly	1	1	1
23	184050-201	Grill, Speaker	1	1	1
24	181892-101	Screw, Speaker Grill	4	4	4
25	184052-101	Switch, Slide	1	1	1
26	184053-101	LED	1	1	1
27	181899-101	Cloth, Grill	1	1	1
28	181794-101	Plate, Speaker Baffle <sup>3</sup>	1	1	1
29	184060-101	Speaker Assembly	1	1	1
30	184371-102	Cord, Mounting (50-Conductor)	1	1	1

TABLE A  
REPLACEMENT PARTS LIST (Cont)

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED		
			870/42	870/46	870/76
		<b>10-Button, Rotary Dial, Desk Telephone With Built-In Call Announcer</b>	<b>870/42</b>	<b>870/46</b>	<b>870/76</b>
31	184055-103	Base Assembly	1	1	1
32	181141-105	Plate, Base <sup>2</sup>	1	1	1
33	181251-101	Bracket, Key Right	1	1	1
34	181255-101	Bracket, Plug	2	2	2
35	082486-102	Rivet, Foot	4	4	4
36	182337-101	Foot	4	4	4
37	181427-101	PC Network (#183070-101) <sup>1</sup>	1	1	1
38	182175-101	Spacer, Network	1	1	1
39	096407-103	Screw, Network Mounting	1	1	1
40	181801-101	Bracket, Speaker Right	1	1	1
41	181800-101	Bracket, Speaker Left	1	1	1
42	181254-102	Bracket, Dial	2	2	2
43	181260-101	Cradle Switch Assembly <sup>1</sup>	1	1	1
44	181150-102	Left Bracket Assembly	1	1	1
	185619-101	Left Trip Bracket Assembly	1	1	1
	181252-101	Bracket, Key Left	1	1	1
	185618-101	Bracket, Trip	1	1	1
45	184059-101	PC Board (Call Announcer)	1	1	1
46	184056-101	Terminal Board	1	1	1
47	182691-101	PC Board (Exclusion)	—	—	1
48	183105-102	Switch Hook Assembly	1	1	1
	182900-101	Cradle, Switch Hook	1	1	1
	181145-101	Screw, Switch Hook Cradle	3	3	3
	185494-101	Operating Arm Assembly	1	1	1
	185487-101	Arm, Operating	1	1	1
	075307-104	Spring, Cradle Return	1	1	1
	181282-101	Shaft, Pivot	1	1	1
	073538-110	Ring, Retainer	1	1	1
49	185488-101	Arm, Latch	1	1	1
50	181151-101	Spring, Latch Arm	1	1	1
51	073538-110	Ring, Retainer	2	2	2
52	181152-101	Pin, Pivot	1	1	1

TABLE A  
REPLACEMENT PARTS LIST (Cont)

INDEX NO	PART NUMBER	DESCRIPTION	QUANTITY USED		
			870/42	870/46	870/76
		10-Button, Rotary Dial, Desk Telephone With Built-In Call Announcer	870/42	870/46	870/76
53	185486-101	Arm, Trip	1	1	1
54	185485-101	Spring, Torsion	1	1	1
55	000148-DBA	Ringer <sup>1</sup>	1	1	1
56	075415-101	Card, Number	1	1	1
57	003800-00H	Dial Assembly, Metropolitan (Letters And Numerals) <sup>1</sup>	1	1	1
58	181146-101	Bracket, Dial Adapter	2	2	2
59	9018**-072	Cord, Handset, Modular	1	1	1
60	0065**-0C2	Handset Assembly, Nonmodular <sup>1</sup>	1	1	1
60	0065**-0M2	Handset Assembly, Modular <sup>1</sup>	1	1	1
	600152-611-001	Jack Assembly, Handset Cord, Modular (Not Shown)	1	1	1
	182990-105	Insulator Assembly, Modular (Not Shown)	1	1	1
	181973-101	Pushbutton, Operator Recall (Not Shown)	—	1	—
	181971-101	Pushbutton, Exclusion Release (Not Shown)	—	—	1
	187944-101	Nameplate, ITT (Not Shown)	1	1	1

AW 84-811

NOTES:

- <sup>1</sup> Refer to Component Parts Section of this manual for Assembly Parts List.
- <sup>2</sup> This is an NSS item (not serviced separately).
- <sup>3</sup> These products have been discontinued, but are included to provide a source of information for telephones still in service.
- \*\* Substitute 2-digit color code when ordering.
- \*\*\* Substitute 3-digit color code when ordering faceplate.

CODE	COLOR	CODE	COLOR	CODE	COLOR	CODE	COLOR
101	Charcoal	104	Light Gray	107	Cocoa Brown	110	Clear
102	Light Green	105	Burnt Orange	108	Harvest Gold	111	Woodgrain
103	Muted Beige	106	Light Ash	109	Cherry Red		