

SERVICE

203A, B, C, D, E, AND F HAND TELEPHONE SETS

1. GENERAL

1.01 This section contains connection information for 203-type hand telephone set formerly found in Sections 502-311-400 and 502-311-401 which are hereby canceled.

1.02 The 203A, B, and C types differ from the 203D, E, and F types only in the internal wiring arrangements as furnished.

1.03 The 203A and C differ from the 203B, and the 203D and F differ from the 203E, only in the type of dial number plate.

TABLE A
LINE AND RINGER CONNECTIONS
685A OR 686A SUBSET USED WITH
203A, B, C, D, E, OR F HAND TELEPHONE SETS

WIRE OR LEAD	COLOR	RING PARTY	TIP PARTY (NOTE 1)	NEGATIVE	POSITIVE
				RING STATION (NOTE 1)	
				1 AND 5	3 AND 6
Ringer Leads (Note 2)	R BK S S-R	L2 G K* 1	L2 G K* 1	G G A* K*	L2 L2 A* K*
426A Tube Leads (3 elements) (686A only)	BK Y R			K* L2 G	K* G L2

* Terminal on network.

Notes:

1. Reverse tip and ring for tip party service.
2. To silence ringer permanently, connect (R) and (BK) ringer leads to K on the terminal strip.

TABLE D
COMBINATION OF APPARATUS

HAND TEL SET CODE	COMPONENTS				
	HANDSET	HANDSET MOUNTING	DIAL OR APPARATUS BLANK	TYPE MOUNTING CORD	TYPE HANDSET CORD
MODIFIED					
203B-3E 203E-3E	E1E-3	D6-3	50J-3 94A-3	D6	H-3
203B-3F 203E-3F	F1A-3 F1G-3				
203B-3F 203E 3F	F4A-3				
203B-3E 203E-3E	E1E-3		4H or 5H	D6 D9	
203B-3F 203E-3F	F1A-3 F1G-3		5H or 6A		
203B-3F 203E-3F	F4A-3		6A		