


TELEPHONE SETS — 354A, C  
CONNECTIONS

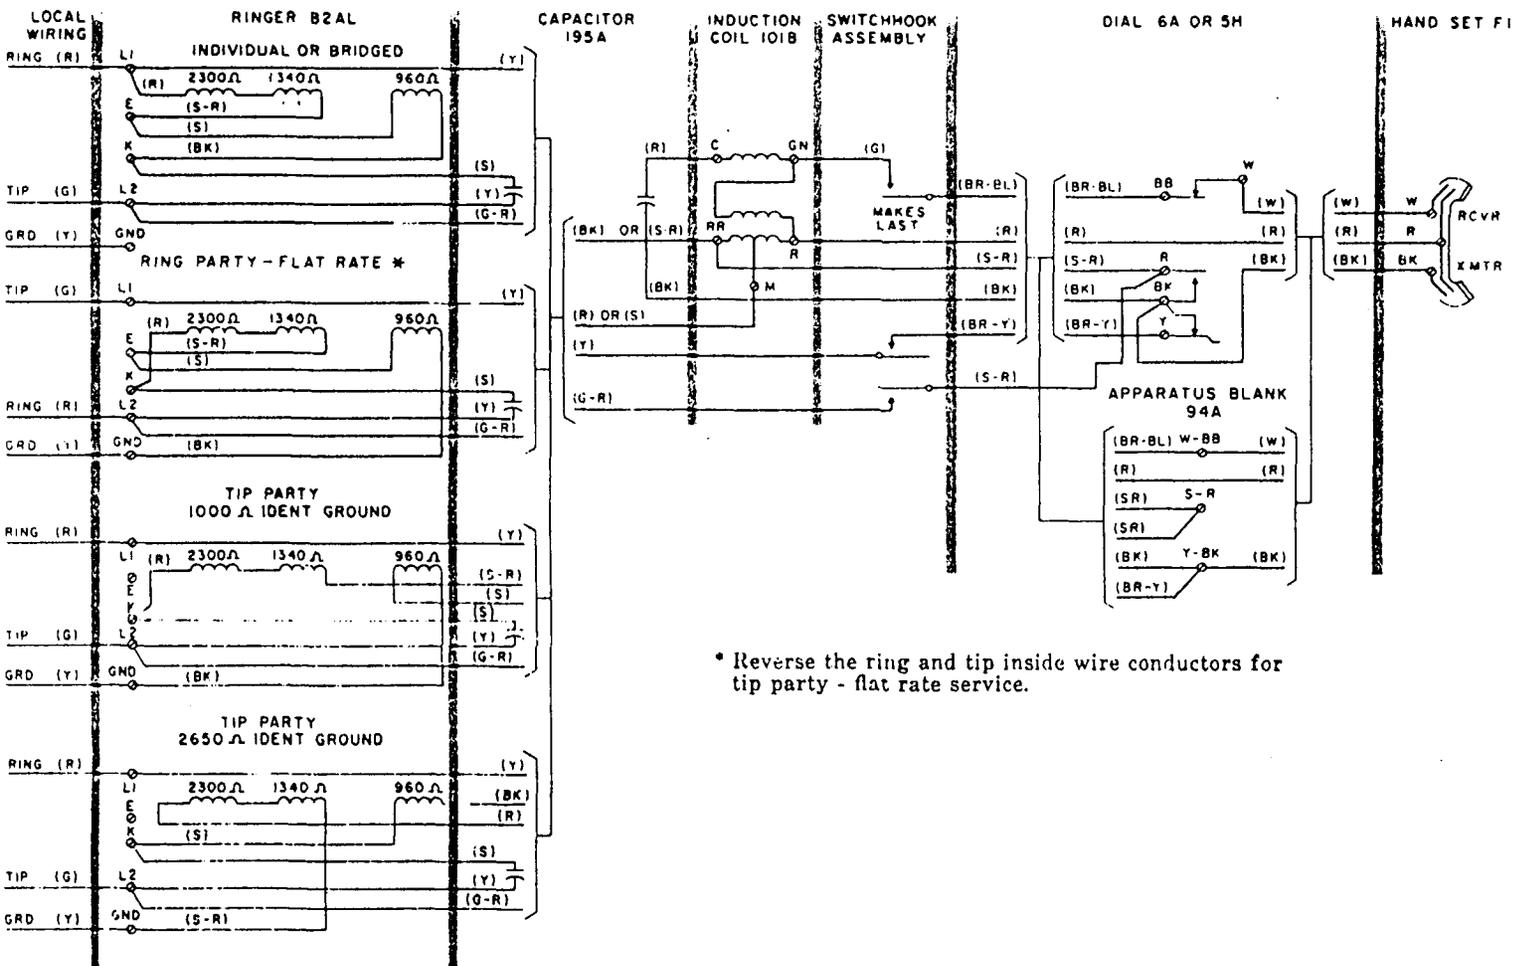

\* Reverse the ring and tip inside wire conductors for tip party - flat rate service.

Fig. 1 — 354A and C Telephone Sets, Connections

AT&T CUSTOMER INFORMATION CENTER  
Quality Engineering Organization  
ARCHIVE STATUS DOCUMENT  
Signed: *[Signature]*  
Date: 9-85

**TABLE A**  
**LINE AND RINGER CONNECTIONS**

| Wire or Lead       | Indiv or Bridged* | Ring Party† | Tip Party Identification Ground |        |                               |        |  |        |     |
|--------------------|-------------------|-------------|---------------------------------|--------|-------------------------------|--------|--|--------|-----|
|                    |                   |             | Normal Connections              |        | To Silence Ringer Permanently |        | Ringer Reversal When Connected To Long Line Equipment‡ |        |     |
|                    |                   |             | 1000 Ω                          | 2650 Ω | 1000 Ω                        | 2650 Ω | 1000 Ω   | 2650 Ω |     |
| Inside Wire In Set | R                 | L1          | L2                              | L1     | L1                            | L1     | L1   | L1     | L1  |
|                    | G                 | L2          | L1                              | L2     | L2                            | L2     | L2   | L2     | L2  |
|                    | Y                 | Grd         | Grd                             | Grd    | Grd                           | Grd    | Grd  | Grd    | Grd |
| Ringer Lead        | R                 | L1          | K                               | K      | M                             | K      | M  | RR     | M   |
|                    | BK                | K           | Grd                             | Grd    | RR                            | Grd    | K  | Grd    | K   |
|                    | S                 | E           | E                               | M      | K                             | M      | K  | M      | RR  |
|                    | S-R               | E           | E                               | RR     | Grd                           | K      | Grd  | K      | Grd |

\* To silence ringer for all classes of service except tip party identified, connect both R and BL ringer leads to K terminal.

† Reverse the ring and tip inside wire conductors for tip party-flat rate service.

‡ Use normal connections on tip party ground stations. If bell taps on stations connected to long line equipment, use ringer reversal column in Table A to retain tip party identification.

**TABLE B**  
**FILTER (Optional)**

| Type Filter      | Filter Leads | Filter Lead Termination   |
|------------------|--------------|---|
| 61E<br>or<br>61G | BK           | BK of Dial  |
|                  | Y            | Y of Dial   |
|                  | R            | Filter Bracket Terminal;<br>also, disconnect BR-Y lead from Y of dial and reconnect to filter bracket terminal. |