


TABLE A
P-90D052 GUARD ASSEMBLY CONNECTIONS

WIRE OR LEAD	REMOVE FROM		CONNECT TO	
	NETWORK	GUARD ASSEMBLY	NETWORK	
Dial	(BK)	RR	T	
	(G-W)	C	S	
Line Switch	(W)	C	S	
Guard Assembly	(G)			RR
	(W)			C

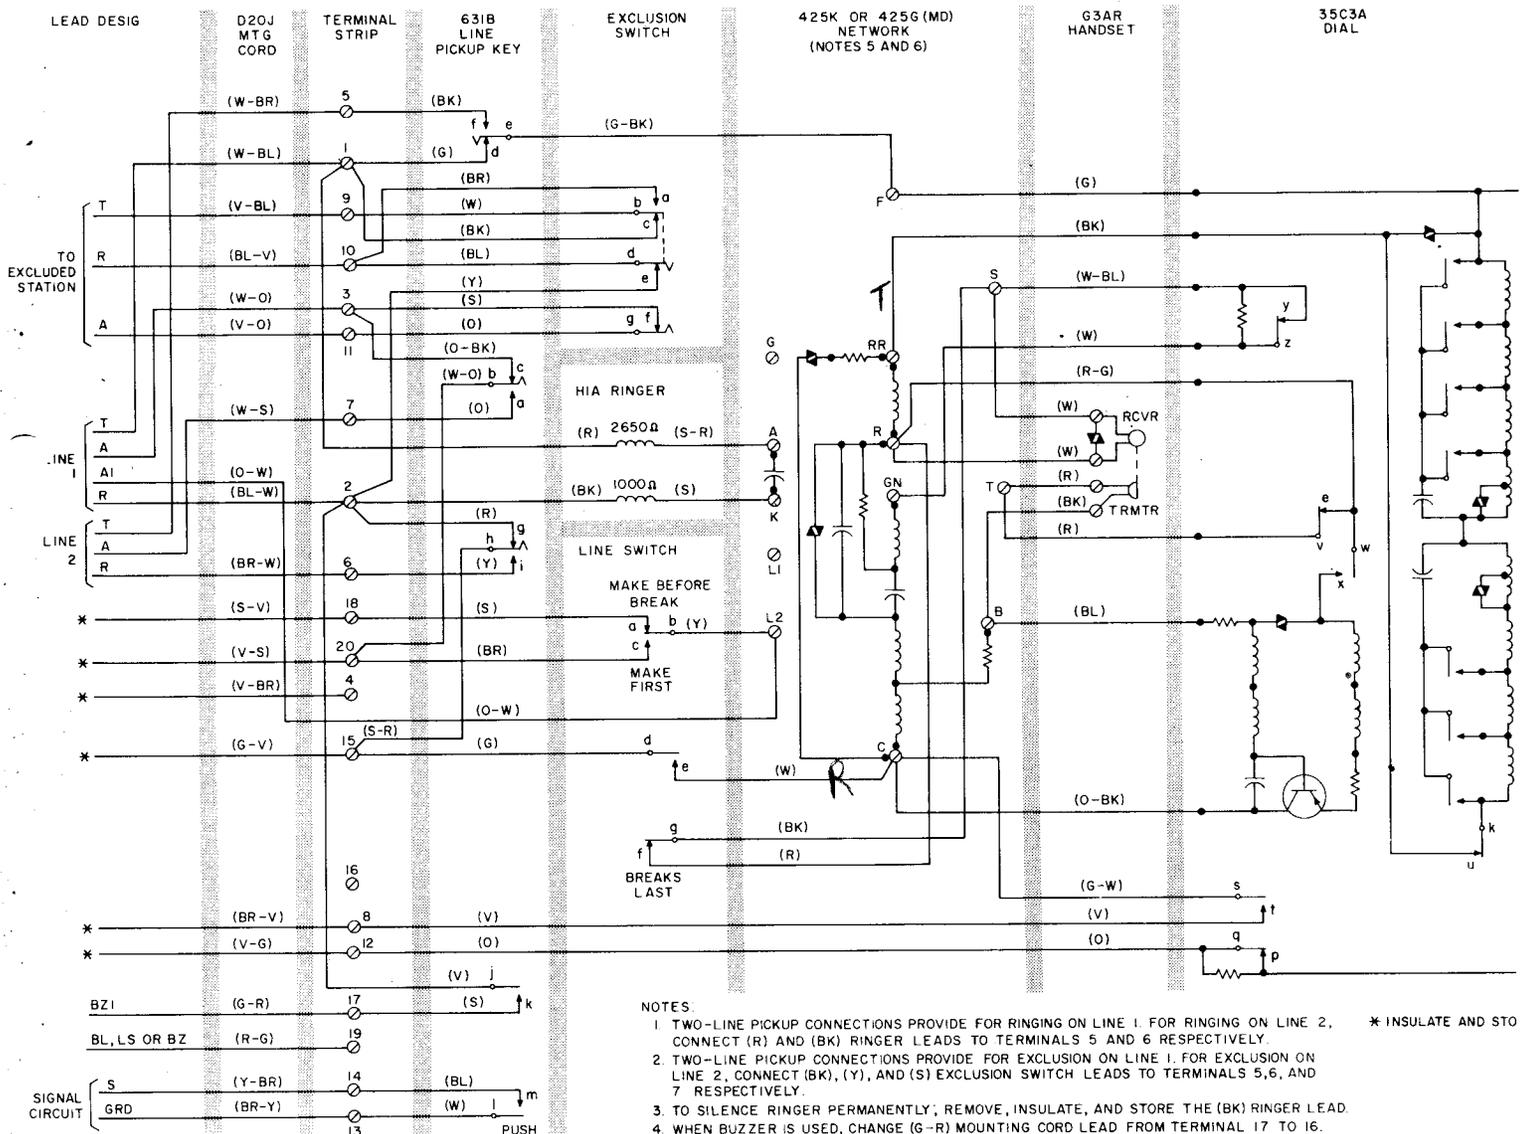

- NOTES:
- TWO-LINE PICKUP CONNECTIONS PROVIDE FOR RINGING ON LINE 1. FOR RINGING ON LINE 2, CONNECT (R) AND (BK) RINGER LEADS TO TERMINALS 5 AND 6 RESPECTIVELY. * INSULATE AND STO
 - TWO-LINE PICKUP CONNECTIONS PROVIDE FOR EXCLUSION ON LINE 1. FOR EXCLUSION ON LINE 2, CONNECT (BK), (Y), AND (S) EXCLUSION SWITCH LEADS TO TERMINALS 5, 6, AND 7 RESPECTIVELY.
 - TO SILENCE RINGER PERMANENTLY, REMOVE, INSULATE, AND STORE THE (BK) RINGER LEAD.
 - WHEN BUZZER IS USED, CHANGE (G-R) MOUNTING CORD LEAD FROM TERMINAL 17 TO 16. CONNECT BUZZER BETWEEN TERMINALS 16 AND 19.
 - EARLY PRODUCTION SETS HAVE 425G (MD) NETWORKS, CURRENT PRODUCTION SETS HAVE 425K NETWORKS.
 - LEADS SHOWN CONNECTED AT TERMINALS S AND T ON 425K NETWORK ARE CONNECTED AT TERMINALS L1 AND G RESPECTIVELY, IN SETS EQUIPPED WITH 425G (MD) NETWORKS.

Fig. 2—2511F Telephone Set Connections, 2-Line Pickup With Exclusion on Line 1, Signaling Wired for 1A1 and 1A2 Key Telephone Systems

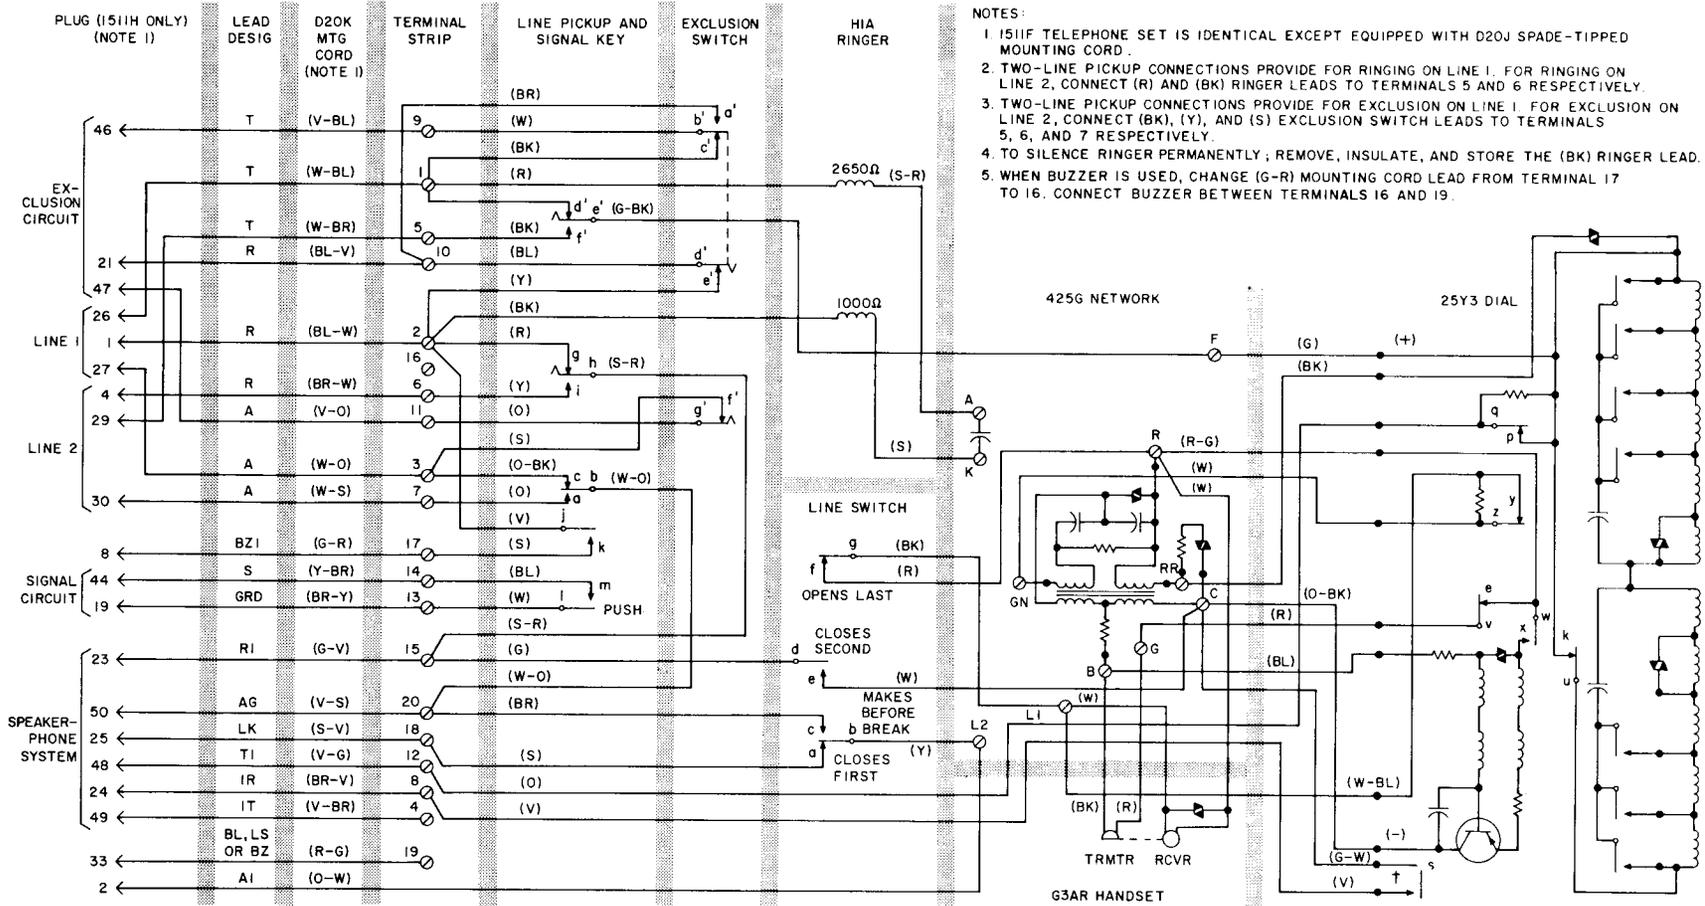


Fig. 3 — 1511F/H — 2-Line Pickup With Exclusion on Line 1, Signaling, and Speakerphone (Factory Wired With 25Y3 Dial)

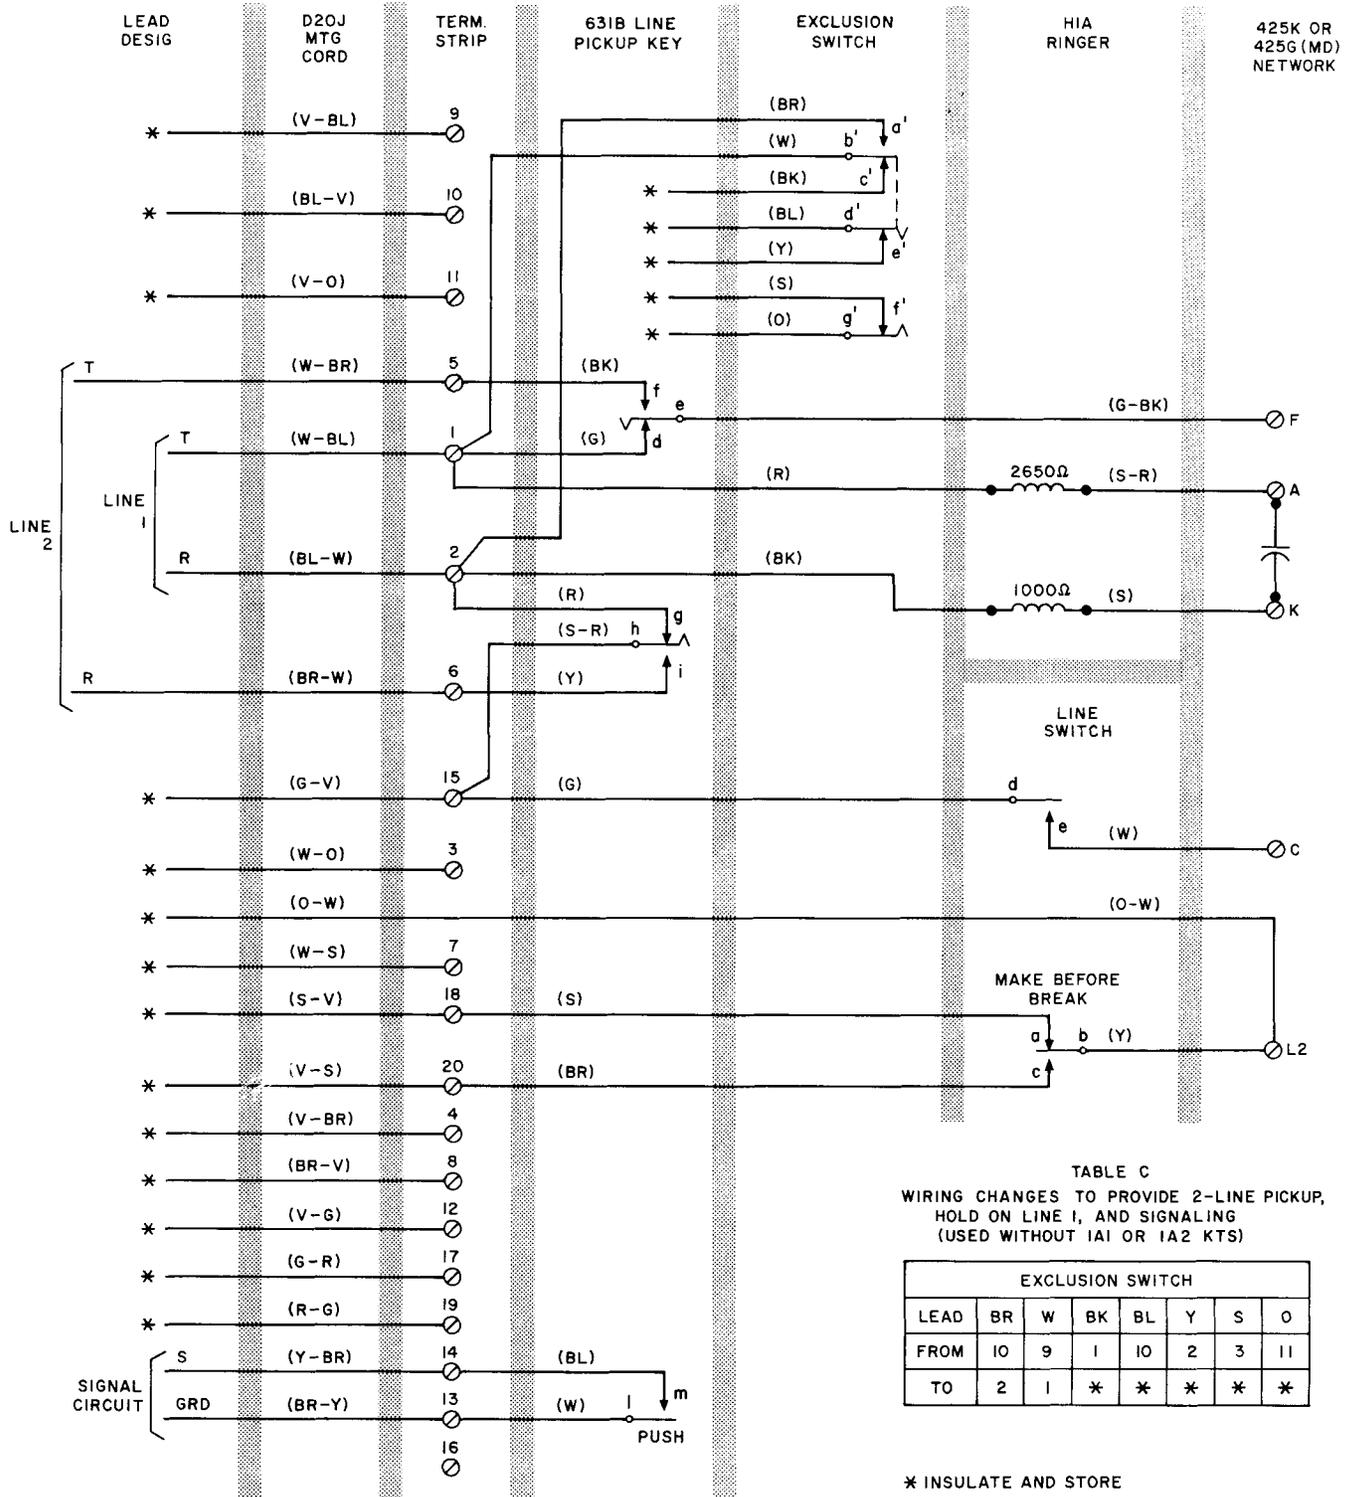


Fig. 4—2511F Telephone Set Connections, 2-Line Pickup, Hold on Line 1, and Signaling (Used Without 1A1 or 1A2 KTS)