

## SERVICE

### 556A/B TELEPHONE SETS

### CONNECTIONS

**1. GENERAL**

◆ TABLE A ◆

**1.01** This section contains information on the 556A/B telephone sets.

**1.02** This section is reissued to:

- Delete information on the 556AM/BM and 556AMP/BMP modular telephone sets which were never manufactured
- Revise Table A
- Show 556A/B telephone set (MD).

**TELEPHONE SET – LINE, RINGER,  
AND TUBE CONNECTIONS (NOTES 2 AND 3)**

WIRE OR LEAD		COLOR	(-) NEGATIVE RING	(+) POSITIVE RING
Ringer Leads (Note 1)		R BK S S-R	G G A K	L2 L2 A K
426A Tube (3 Element)		R BK Y	G K L2	L2 K G
Line Wire in Set	Ring Tip Grd	R G Y	L2 L1 G	L2 L1 G


*Note 1:* To adjust and/or cutoff ringer, refer to Section 501-250-303.

*Note 2:* Reverse tip and ring for tip party service.

*Note 3:* For information concerning inductive interference, or Radio Frequency interference, refer to Section 500-112-100 or 500-150-100.

**NOTICE**

Not for use or disclosure outside the  
Bell System except under written agreement

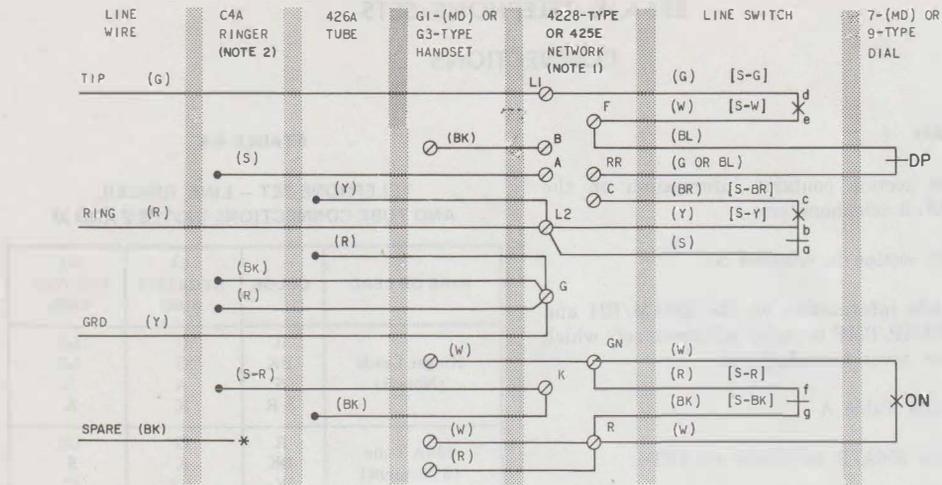

NOTES:  
 1. FOR MANUAL SERVICE, MOVE (W) [S-W] LEAD FROM F TO RR TERMINAL.  
 2. WIRED FOR (-) RING PARTY, REFER TO TABLE A FOR ALL OTHER CLASSES OF SERVICE.

\* INSULATED AND STORED  
 ( ) CURRENT COLOR CODE  
 [ ] MD COLOR CODE  
 DP DIAL PULSE  
 ON OFF NORMAL

Fig. 1—556A/B (MD) Telephone Set, Connections