

**SERVICE**  
**755A AND 755AM TELEPHONE SETS**

**1. GENERAL**

**1.01** This section contains connection information for the 755A (MD) and 755AM telephone set which is a manual panel-type telephone set.

**1.02** Reissued to:

- Add 755AM (modular) telephone set, Fig. 1
- Show 755A telephone set MD

**2. CONNECTIONS**

**2.01** Connect the central office tip and ring to the proper designated terminals, Fig. 1 and 2.

**2.02** Due to the length of cord terminated on the plug, the door has to be partially closed before plug (P1) can be connected to jack (J1).

*Caution: When making service calls on a 755A and 755AM telephone set, exercise caution in opening the door. Disconnect the plug from the jack before attempting to open the door to its fullest extent.*

**2.03** A ringer is not part of the factory supplied set. Should a ringer be required, provisions have been made to permit field installation of C4A or C4B ringer. Refer to Tables A or B for connections.

**TABLE A**

**CONNECTIONS FOR (OPTIONAL) C4A RINGER  
(SEE NOTE)**

WIRE OR LEAD		REMOVE FROM TB1	CONNECT TO TB1
C4A Ringer	BK		T
	S		SL
	R		R
	S-R		SR
Strap	BK	R	SR
Resistor		T ↔ SL	

*Note:* Connections are for individual or bridged service.

**TABLE B**


**CONNECTIONS FOR (OPTIONAL) C4B RINGER  
(SEE NOTE)**

WIRE OR LEAD		REMOVE FROM TB1	CONNECT TO TB1
C4B Ringer	BK		T
	R		SL
Resistor		T ↔ SL	

*Note:* Connections are for individual or bridged service.

**NOTICE**


Not for use or disclosure outside the Bell System except under written agreement

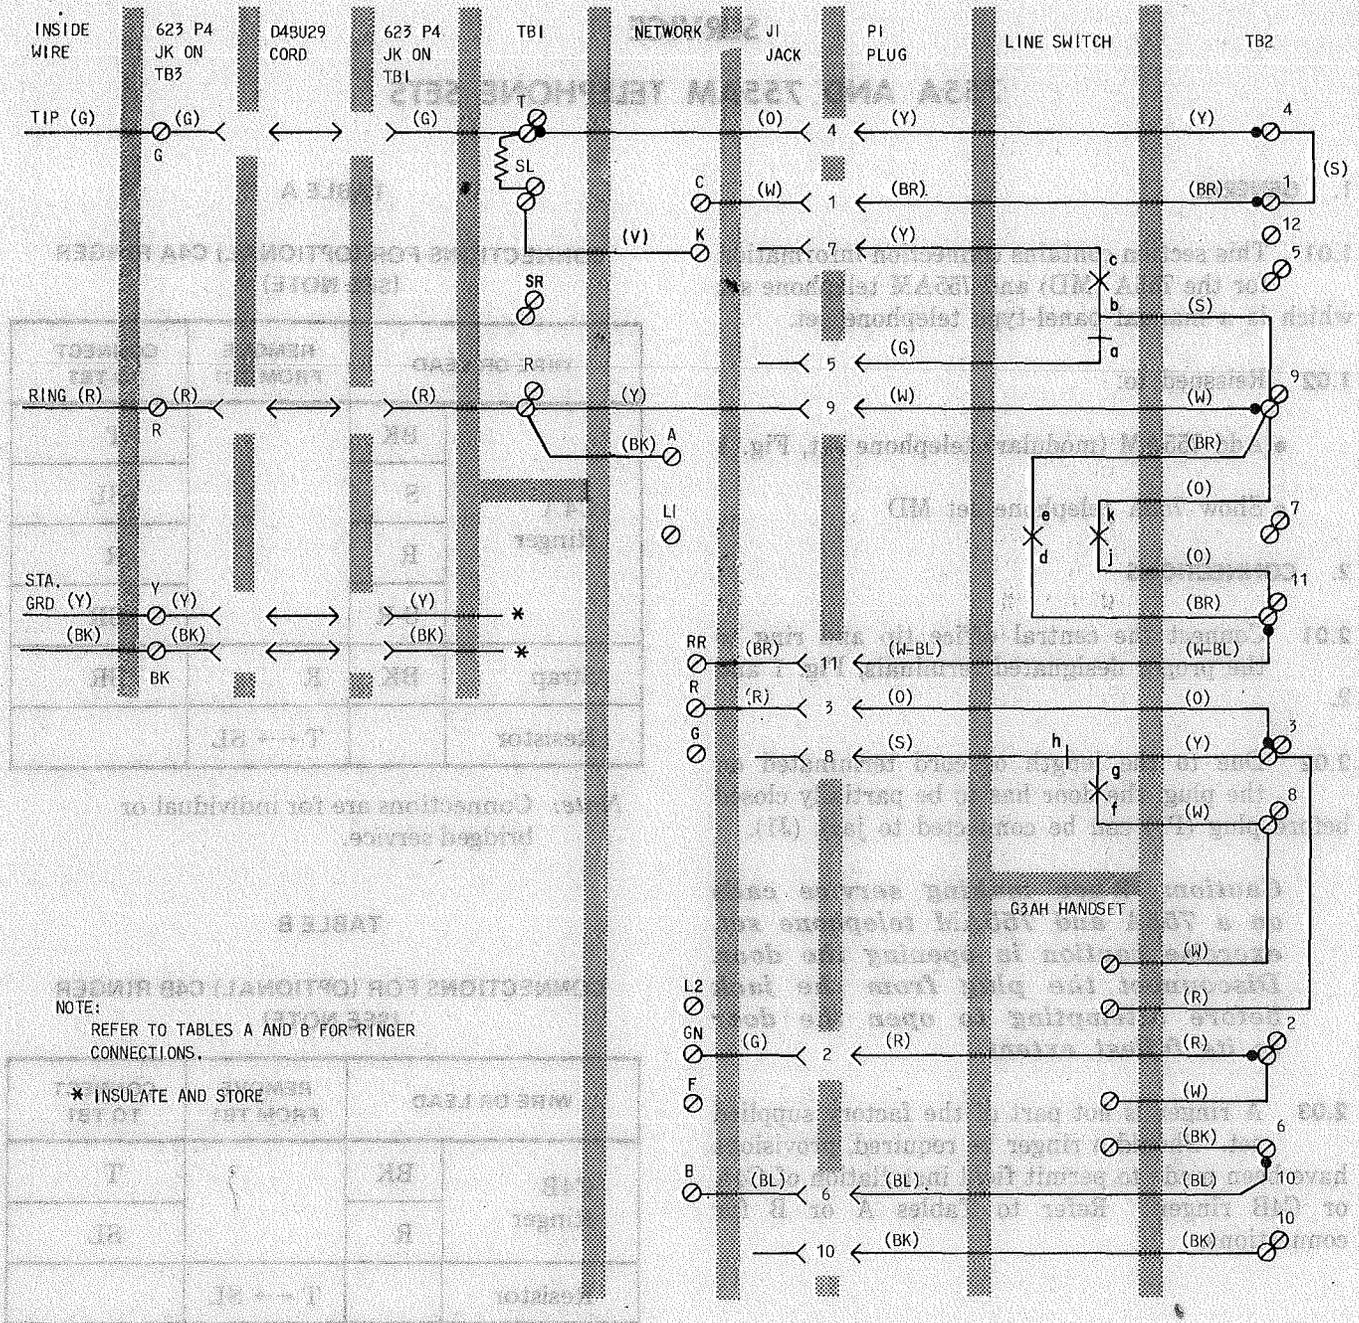

NOTE:  
REFER TO TABLES A AND B FOR RINGER CONNECTIONS.

\* INSULATE AND STORE

Fig. 1—755AM Telephone Set, Connections

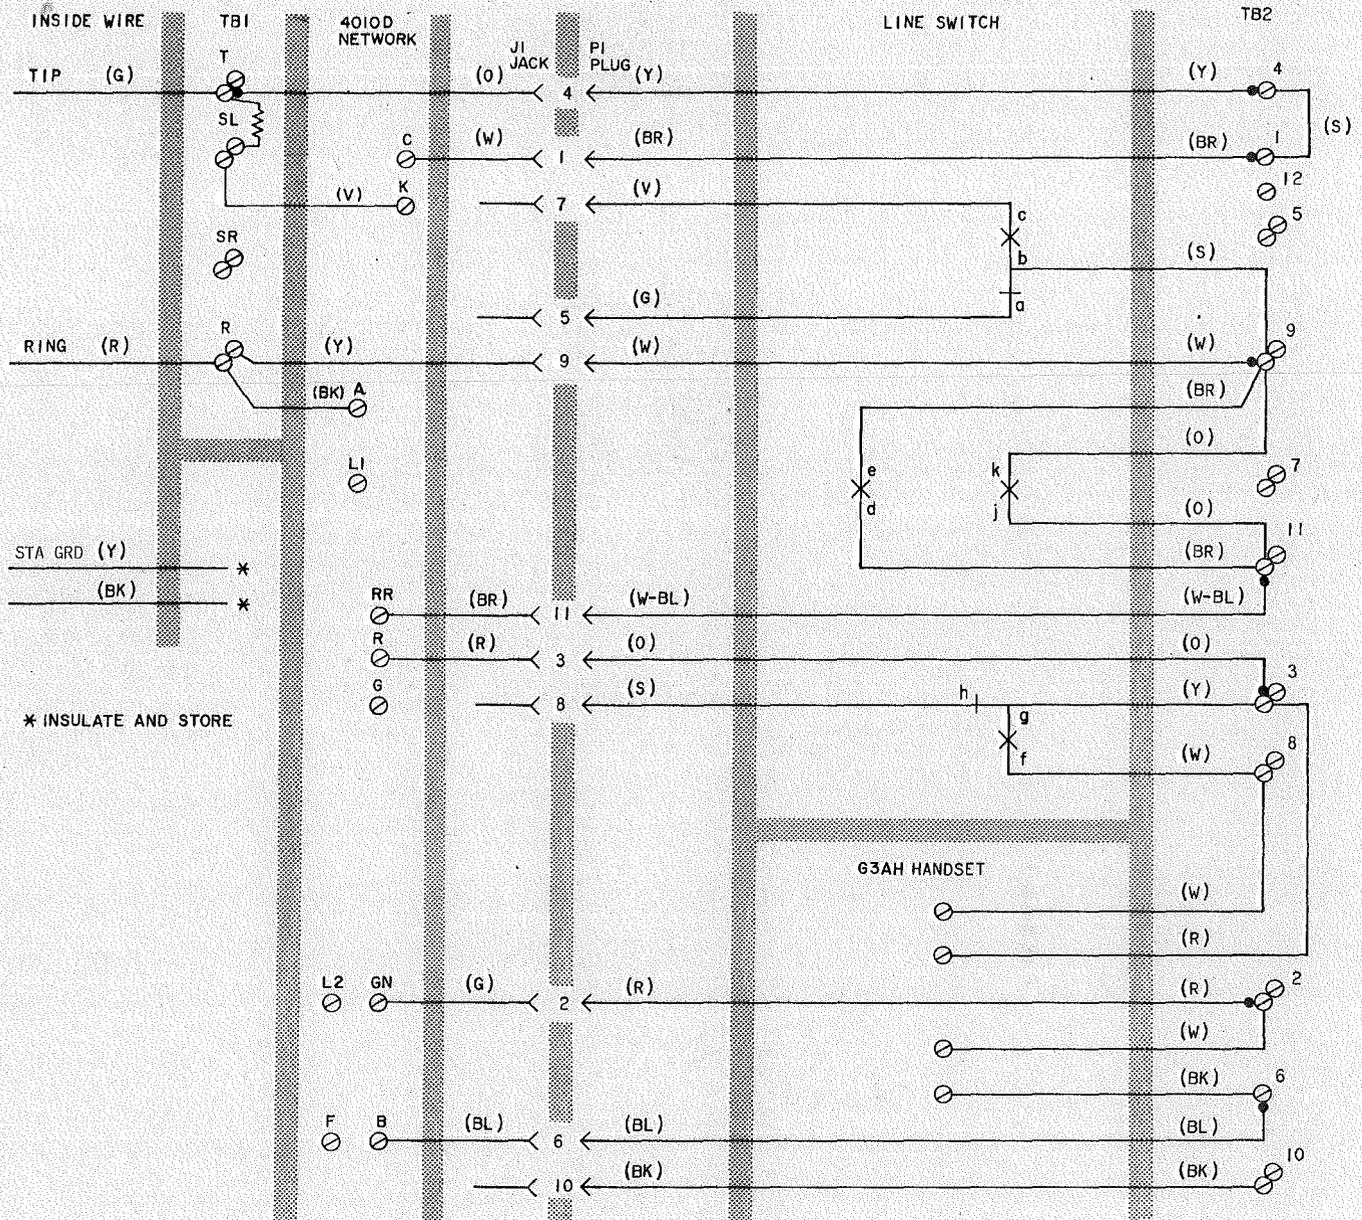

STA GRD (Y) \*  
 (BK) \*  
 \* INSULATE AND STORE

NOTE:  
 REFER TO TABLES A AND B FOR RINGER CONNECTIONS.

Fig. 2—755A (MD) Telephone Set, Connections