

# AT&T MDW 9010 Wireless Telephone Quick Reference

## Handset Controls

### Headset On/Off Button

Press to turn the headset on. **ON** appears in handset display. To turn off, press again. Turn on to make or answer a call, and turn off to "hang up."

### Handset Display

Displays status of lines and range. For detailed description, see "Handset Display" on next page.

### Volume Control

Press +/- to adjust volume of earpiece or ringer.

### Mute

Press to turn the microphone off for privacy of internal communications.

### On/Off

Press to turn the handset on. **ON** appears in handset display. To turn off, press again. Turn on to make or answer a call, and turn off to "hang up."

### Conf (Conference)

Press to conference in (add) another party to your call.

### Headset Jack

Insert headset cord when using headset.

### Antenna

### Battery Charging Contacts

Handset battery charges through these contacts.

### Outside Line/ Programmable/ Intercom/Drop Buttons (6)

See "MDW 9010 Compatibility" in the MDW 9010 Wireless Telephone Installation and Use guide.

### Hold

Press to put a call on hold.

### Feat (Feature)


Press to enter programming mode or to use dial-code features. Not used on System 25, System 75, System 85, or DEFINITY® system.

### Trans (Transfer)


Press to transfer a call to another extension.

### Extension Label

Write the extension number on this label using a pencil or ballpoint pen only.

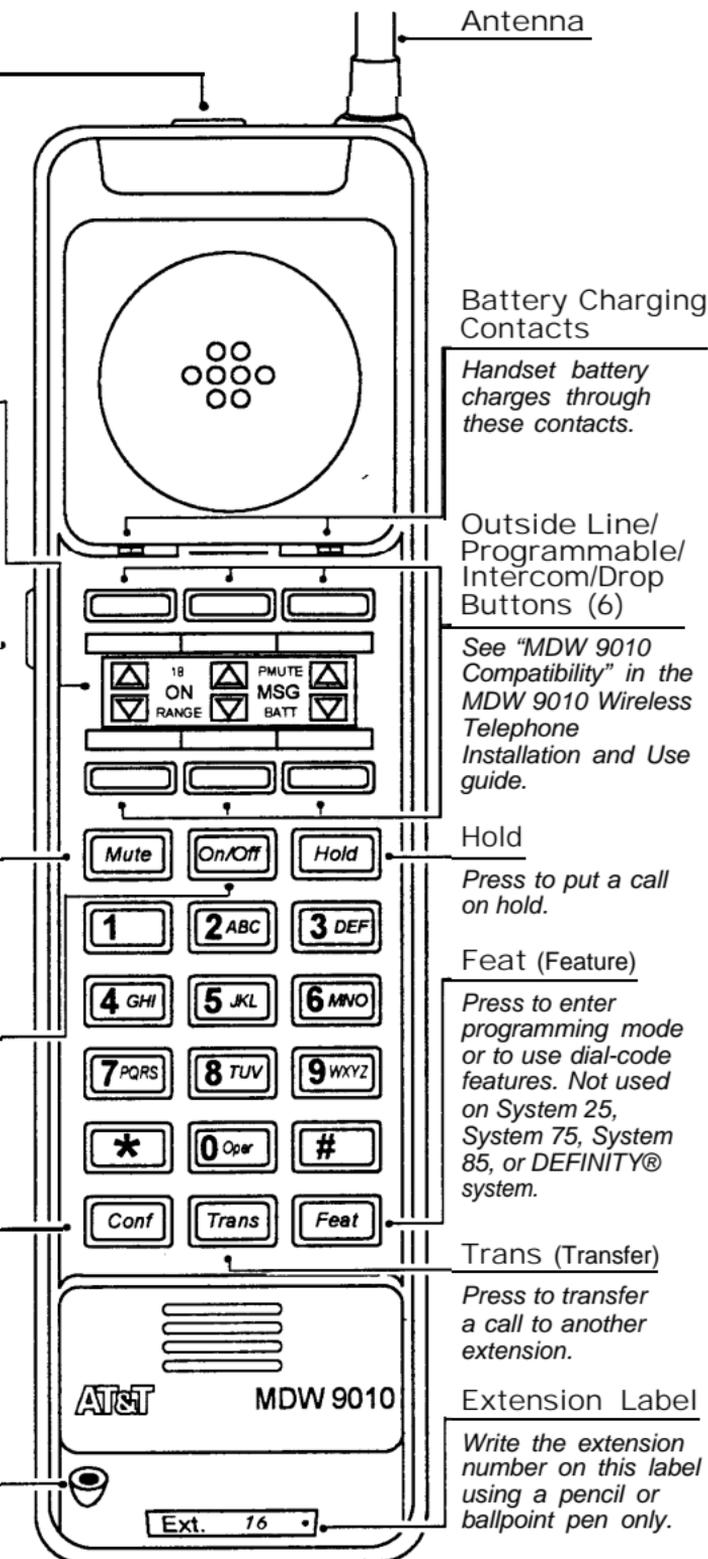

## Handset Display

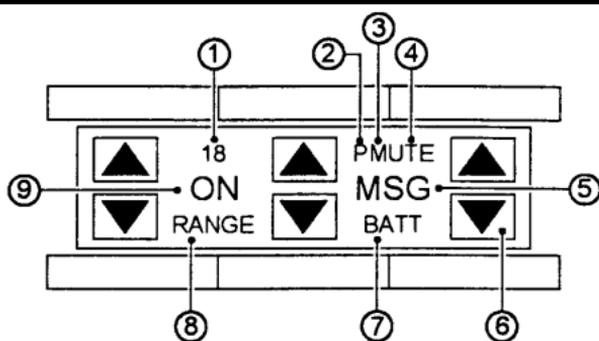

- ① 18 indicates Local Test Mode; 1 through 10 are used in Wireless Test Mode.
- ② P indicates programming mode.
- ③ MUTE indicates handset microphone is turned off after pressing [ *Mute* ].
- ④ T indicates handset is in Wireless Test Mode.
- ⑤ MSG indicates a message has been deposited in your voice mailbox.
- ⑥ Line Status Indicators. See below.
- ⑦ BATT indicates low battery voltage. Handset also emits 2 beeps.
- ⑧ RANGE indicates handset is out of range or almost out of range. Handset also beeps.
- ⑨ ON indicates handset has been turned on after pressing [ *On/Off* ].

## Line Status Indicators

There are six line status indicators; each one corresponds to a specific outside line/programmable/intercom/drop button. The indicators show either a triangle or a rectangle, signifying activity as follows:

### **PARTNER® Systems**

A triangle ( ▲ or ▼ ) is the equivalent of a green LED on a wired phone and indicates activity at YOUR extension.

A rectangle ( □ ) is the equivalent of a red LED on a wired phone and indicates activity at ANOTHER extension.

### **All Other Systems**


A triangle ( ▼ or ▲ ) is the equivalent of a red LED on a wired phone and indicates either the line you are currently using or the line you will use once you start to dial or accept an incoming call.

A rectangle ( □ ) is the equivalent of a green LED on a wired phone and indicates the status of a line, such as whether the line is idle, ringing, or busy.

## Call Alerter

If a call comes in while the phone is idle, the handset rings.  
If you are already on a call, the handset chirps.

# Battery Charger Controls

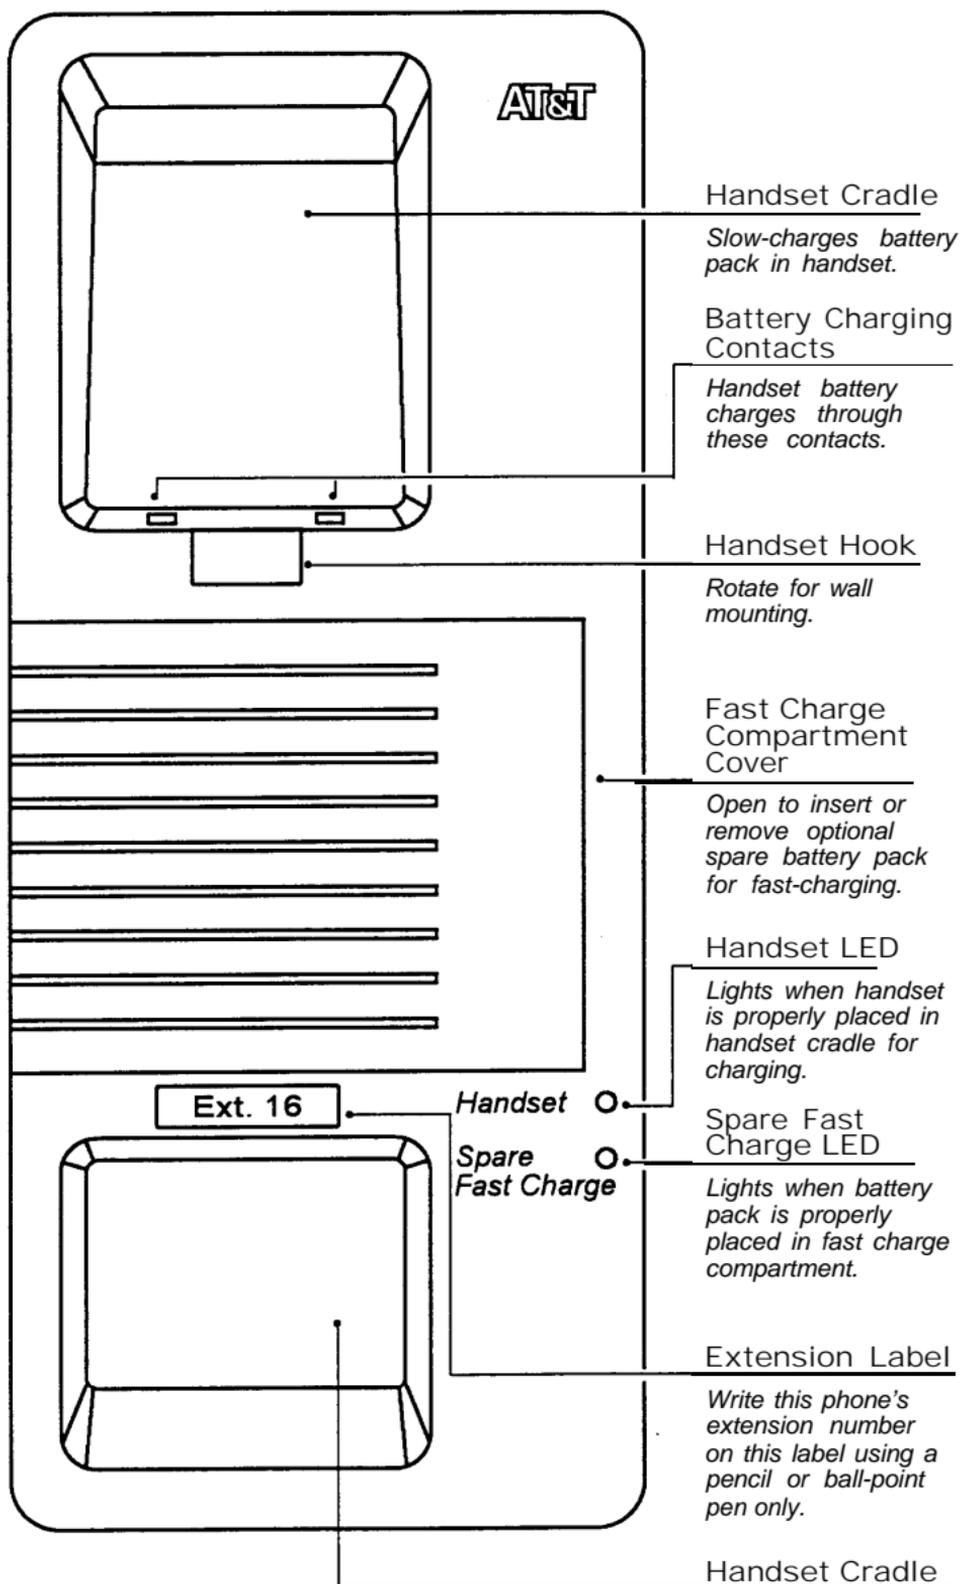

## Battery Charger LEDs

- The Handset LED, when lit, indicates that the handset battery pack is in charge mode (battery pack in handset on battery charger).
- The Spare Fast Charge LED, when lit, indicates that a battery pack is in the battery charger's fast charge compartment:

When the Spare Fast Charge LED...	The battery pack inside the fast charge compartment is...
Is steady red	being discharged.
Is steady orange	being fast-charged.
Is steady green	fully charged.
Flashes orange	defective; replace the battery pack.

The battery charger will charge the handset's battery pack and the fast charge compartment's battery pack at the same time. Refer to the illustration of the battery charger, on the previous page, for the location of these LEDs.

## Help!

If you need assistance when using your wireless phone with a PARTNER®, MERLIN, or MERLIN LEGEND® system in the continental U.S., call 1 800 628-2888. For all other systems, follow the procedure you normally use to get support for your communications system. Outside the continental U.S., contact your AT&T Representative or local Authorized Dealer.

DEFINITY, PARTNER, MERLIN, and MERLIN LEGEND are registered trademarks of AT&T.

AT&T 503-801-142  
Comcode 107723702  
Issue 1, January 1996

Copyright © 1996 AT&T

