

TELEPHONE CONSOLES

16-TYPE

IDENTIFICATION

1. GENERAL

1.01 The 16-type telephone consoles are desk type consoles equipped with 6-button plug-in type keys, a dial and an 80-button direct station selection (DSS) field (Fig. 1, 2 and 3).

1.02 This section is reissued to:

- Revise Tables A, B and C.

2. IDENTIFICATION

PURPOSE

- Provides a means of originating and completing telephone calls by a PBX attendant.

APPLICATION

- 800A PBX (SD-1E055-01).

ORDERING GUIDE

Console, Telephone, 16-Type (See Table A.)

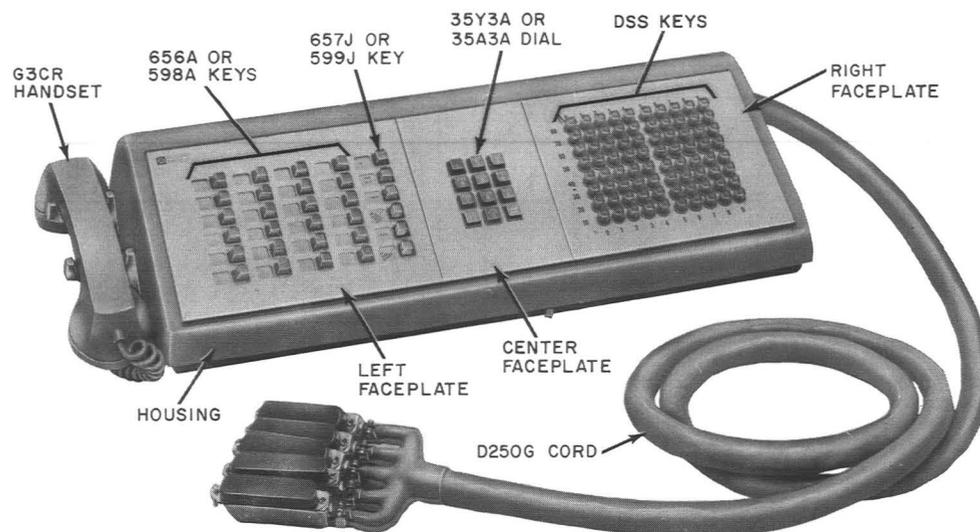


Fig. 1—16C2 Telephone Console

TABLE A

| REPLACEABLE COMPONENTS | | USED ON CONSOLES | | | | | | | | | | | | | | |
|------------------------------|----------------|------------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|---------------|---------------|---------------|-----------|-----------|---|
| | | 16A1 (MD) | 16A2 (MD) | 16A3 (MD) | 16A4 (MD) | 16A5 (MD) | 16A6 (MD) | 16A7 (MD) | 16A8 (MD) | 16A9 (MD) | 16A10 (MD) | 16A11 (MD) | 16A12 (MD) | 16C1 † | 16C2 † | |
| BEZEL, P-40J645 | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| BLANK, APPARATUS, 105B | | | | • | • | • | • | • | | | • | • | • | | | |
| BLOCK, KEY ASSEMBLY P-94M006 | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| CORD, D250G-* | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| DIAL † | 8P-58 | • | | • | | • | | • | | | | | | | | |
| | 25A3 (MD) | | • | | • | | • | | • | | | | | | | |
| | 35A3A OR 35Y3A | | | | | | | | | • | • | • | • | • | • | |
| FACEPLATE | CENTER | P-40J614 | • | | • | | • | | • | | | | | | | |
| | | P-40J615 | | • | | • | | • | | • | | | | | | |
| | | P-40V912 | | | | | | | | | • | • | • | • | • | • |
| | LEFT | P-40J616 | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| | RIGHT | P-40J617 | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| HOUSING, P-40J7-* | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| KEY | 598A OR 656A | | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| | 599J OR 657J | | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| MAT | SILVER | P-40J631 | • | | • | | • | | • | | | | | | | |
| | | P-40J636 | | • | | • | | • | | • | | | | | | |
| | | P-40V913 | | | | | | | | | • | • | • | • | • | • |
| | GOLD | P-40J632 | • | | • | | • | | • | | | | | | | |
| | | P-40J637 | | • | | • | | • | | • | | | | | | |
| | | P-40V914 | | | | | | | | | • | • | • | • | • | • |
| | MUTED BLUE | P-40J633 | • | | • | | • | | • | | | | | | | |
| | | P-40J638 | | • | | • | | • | | • | | | | | | |
| | | P-40V915 | | | | | | | | | • | • | • | • | • | • |

TABLE A (CONT)

| REPLACEABLE COMPONENTS | | | USED ON CONSOLES | | | | | | | | | | | | | |
|--------------------------|-------------|----------------------|------------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|---------------|---------------|---------------|-----------|-----------|
| | | | 16A1 (MD) | 16A2 (MD) | 16A3 (MD) | 16A4 (MD) | 16A5 (MD) | 16A6 (MD) | 16A7 (MD) | 16A8 (MD) | 16A9 (MD) | 16A10 (MD) | 16A11 (MD) | 16A12 (MD) | 16C1 † | 16C2 † |
| MAT | LIGHT GREEN | P-40J634 | • | | • | | • | | • | | | | | | | |
| | | P-40J639 | | • | | • | | • | | • | | | | | | |
| | | P-40V916 | | | | | | | | | • | • | • | • | • | • |
| | CREAM WHITE | P-40J635 | • | | • | | • | | • | | | | | | | |
| | | P-40J640 | | • | | • | | • | | • | | | | | | |
| | | P-40V917 | | | | | | | | | • | • | • | • | • | • |
| RING, BLOCKING, P-12A858 | | | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| RINGER, M1A | | | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| SET, HAND, G3CR-* | | | • | • | • | • | • | • | • | • | • | • | • | • | • | |
| STRIP DESIGNATION § | | P-44E129 P-40J641 | • | • | • | • | • | • | • | • | • | • | • | • | • | |

* Add color suffix from Table B.

† 16C1 console replaces 16A1, 16A3, 16A5 and 16A7 consoles and the 16C2 console replaces 16A2, 16A4, 16A6, 16A8, 16A9, 16A10, 16A11 and 16A12 consoles.

‡ To convert from rotary dial to TOUCH-TONE® dial, order a P-40J643 dial mounting bracket. To convert from TOUCH-TONE dial to rotary dial order a P-40J642 dial mounting bracket.

§ P-44E129 is a blank strip and P-40J641 is a printed strip.

COLOR

TABLE B
COLOR ORDERING GUIDE

| APPARATUS | COLOR | SUFFIX |
|----------------------------------------------------|----------|--------|
| Telephone Console, Handset, Housing, Cord | Green | -51 |
| | White | -58 |
| | Lt Beige | -60 |
| | Lt Gray | -61 |

DESIGN FEATURES (See Table C for arrangement of keys, apparatus blanks and trunk capabilities.)

- Pickup keys to answer, originate, and transfer calls to either central office or to the PBX.
- Night service key (NITE) arranges central office trunks so that night connections may be established.
- Position release key (POS-RLS) disconnects the attendant from a connection.
- Transfer key (TRF) which transfers the PBX party from the attendant trunk to the inward end of the central office trunk.
- Release destination key (RLS DES) for attendant to release the called party from a call originating outside the PBX.

TABLE C
16-TYPE CONSOLES

KEY AND APPARATUS BLANK ARRANGEMENTS AND TRUNK CAPABILITIES

| CONSOLE CODE | PICKUP KEYS * | | | | | CONTROL KEYS | NO. OF EQUIPPED TRUNK KEYS |
|--------------|---------------|---------|---------|--------------|--------------|--------------|----------------------------|
| | 5TH POS | 4TH POS | 3RD POS | 2ND POS | 1ST POS | | |
| 16A1 (MD) | 598A | 598A | 598A | 598A | 599J | | 24 |
| 16A2 (MD) | | | | | | | |
| 16A3 (MD) | | | | | | | |
| 16A4 (MD) | 105B† | | | | | | |
| 16A5 (MD) | | | | | | | |
| 16A6 (MD) | 105B† | 598A | | | | | |
| 16A7 (MD) | | | | | | | |
| 16A8 (MD) | 105B† | 598A | 598A | | | | |
| 16A9 (MD) | | | | | | | |
| 16A10 (MD) | | 105B† | 598A | | | | |
| 16A11 (MD) | | | | | | | |
| 16A12 (MD) | 105B† | 598A | 598A | | | | |
| 16C1 | | | | 598A or 656A | 598A or 656A | 598A or 656A | 598A or 656A |
| 16C2 | 656A | 656A | 656A | 656A | 657J | | |

* 656A and 657J keys are direct replacements for 598A and 599J keys, respectively.

† Apparatus blank.

- HOLD key to hold trunk or PBX calls.
- START key automatically places an incoming call on hold, and seizes a register for an attendant to make and extend calls.
- Minor alarm lamp adjacent to the hold key to indicate fuse alarms, etc.
- Major alarm lamp adjacent to the start key to indicate complete PBX failure.

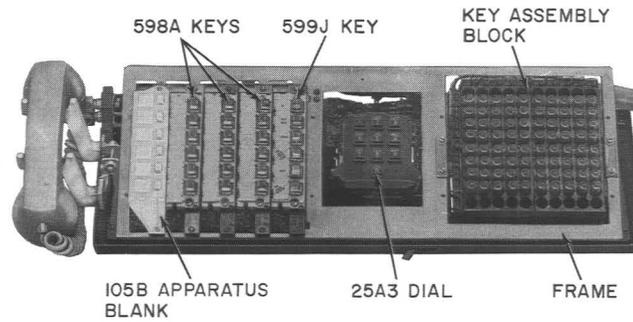


Fig. 2—16A4(MD) Telephone Console With Bezel Faceplate, Mat and Housing Removed

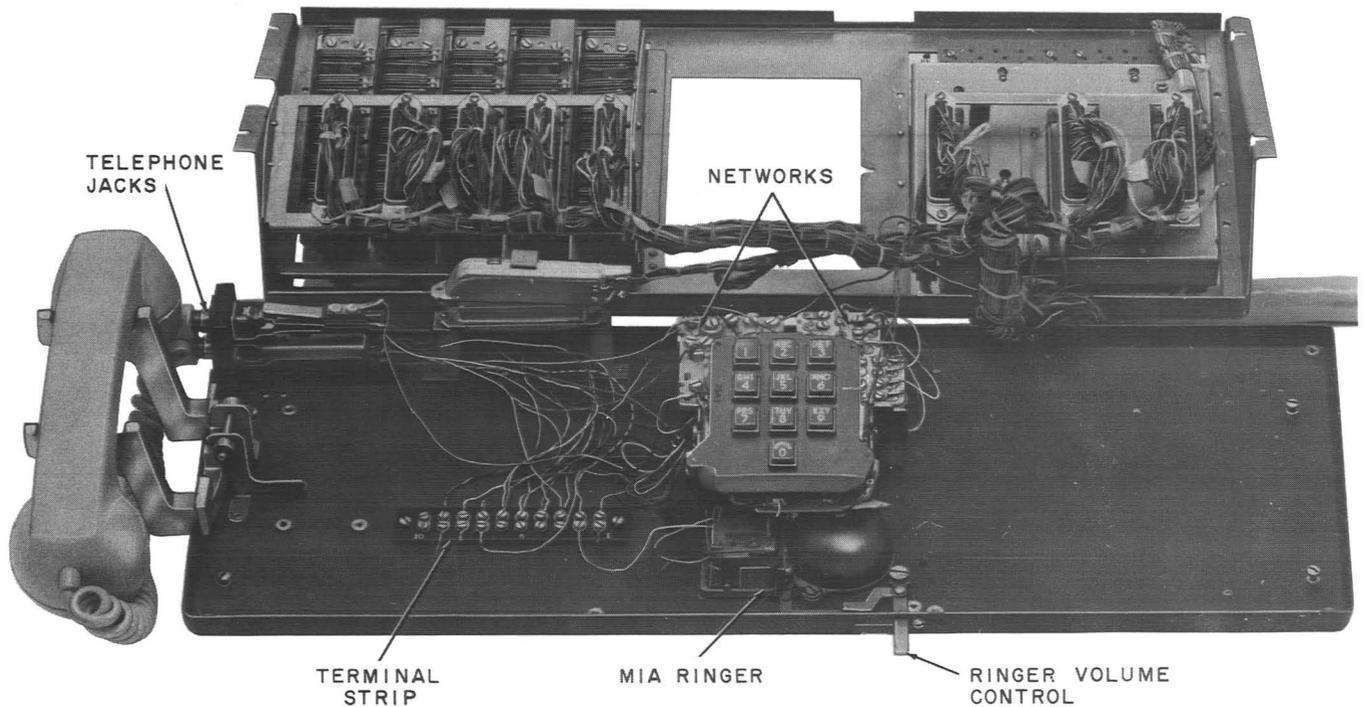


Fig. 3—16-Type Console, Interior View