

SPEAKERPHONE SYSTEM—3-TYPE
558-TYPE TELEPHONE SETS
CONNECTIONS AND MAINTENANCE

1. GENERAL

1.01 These sets are supplied factory-wired for use with 3-type speakerphone. See Section 502-515-401 for set wiring and ringer connections.

1.02 This section contains speakerphone connection information formerly found in Section 512-620-401, Issue 3.

2. CONNECTION INDEX

Fig. 1—558C/D Telephone Set Wired for 3-Type Speakerphone

Fig. 2—558F Telephone Set Wired for 3-Type Speakerphone

Fig. 3—558C/D Telephone Set, Connections to 3-Type Speakerphone System

Fig. 4—558F Telephone Set, Connections to 3-Type Speakerphone System

3. MAINTENANCE

3.01 Refer to the appropriate section for maintenance information for the 558-type telephone set. See Section 512-620-200 for maintenance of speakerphone components used with this set.

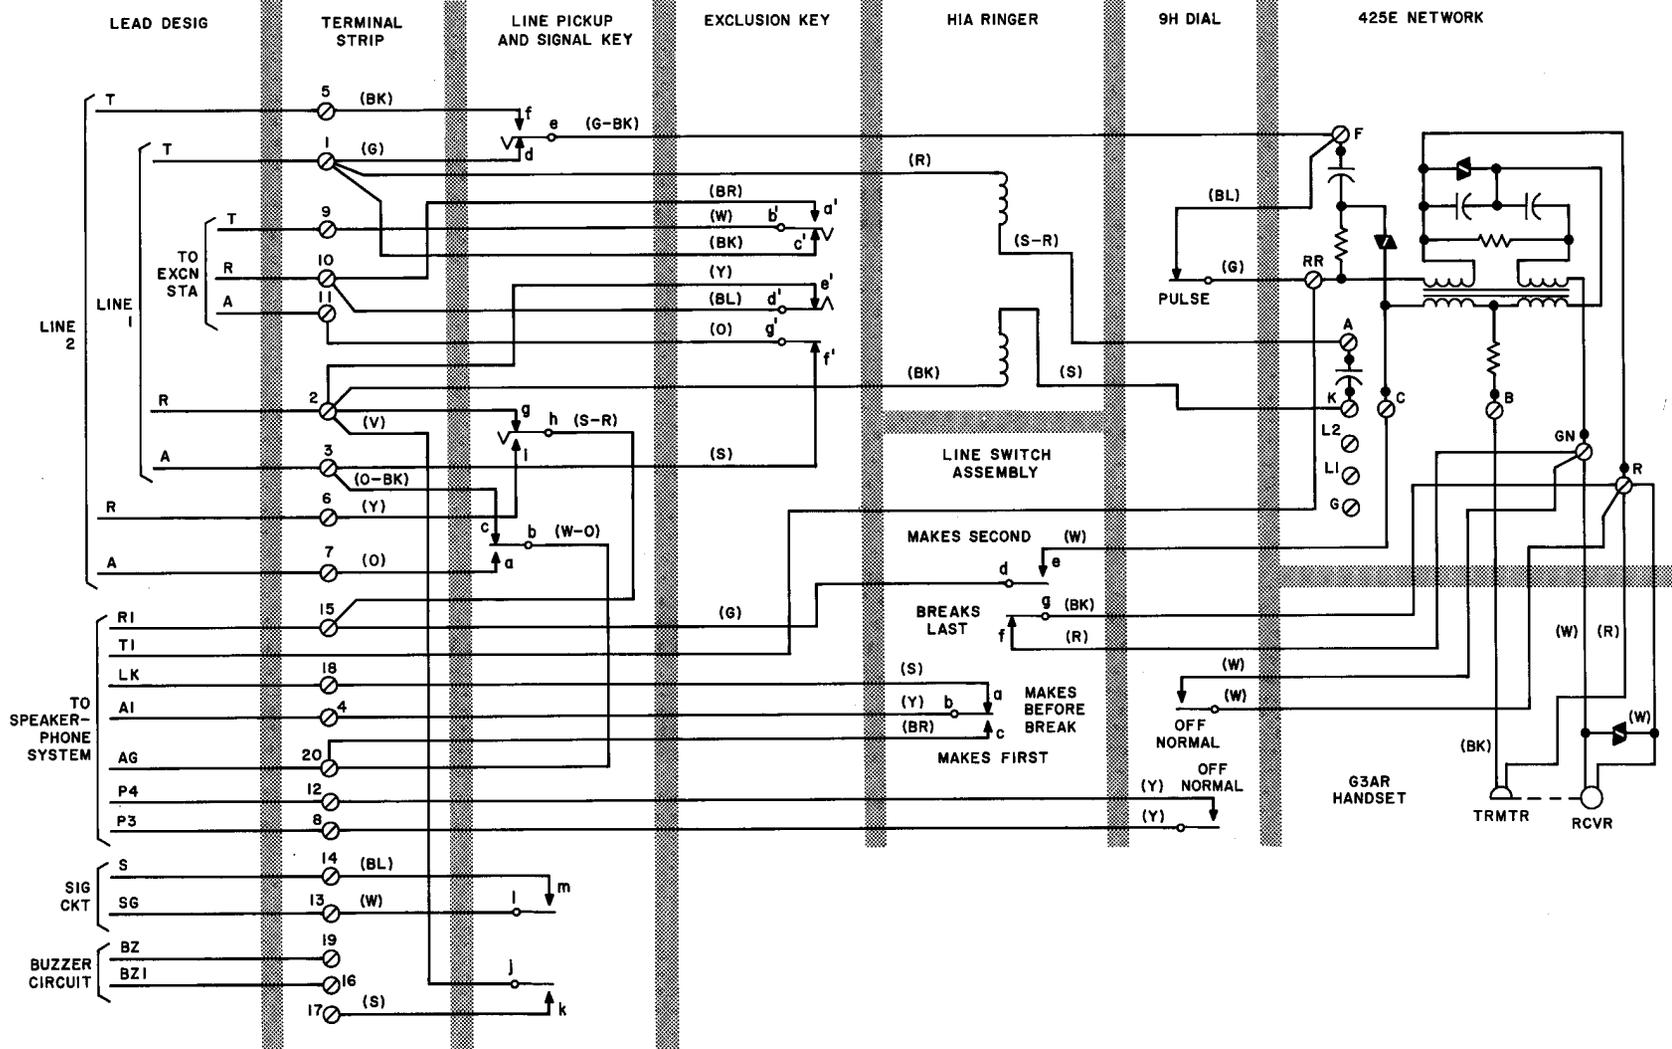


Fig. 2—558F Telephone Set Wired for 3-Type Speakerphone

SECTION 512-620-418

NOTES:

1. CONNECT TO LOCAL GROUND OR TO A1 FOR KTS USE.
2. INSULATE AND STORE UNUSED LEADS OF T11A CORD.
3. CONNECT BL LEAD FOR STATION BUSY LAMP CONTROLLED BY 55-TYPE CONTROL UNIT ONLY. ADD STRAP AS SHOWN.
4. FOR REDUCED LOUDSPEAKER VOLUME, CONNECT SP2 LEAD TO TERMINAL 24 (55A) OR 30 (55B).

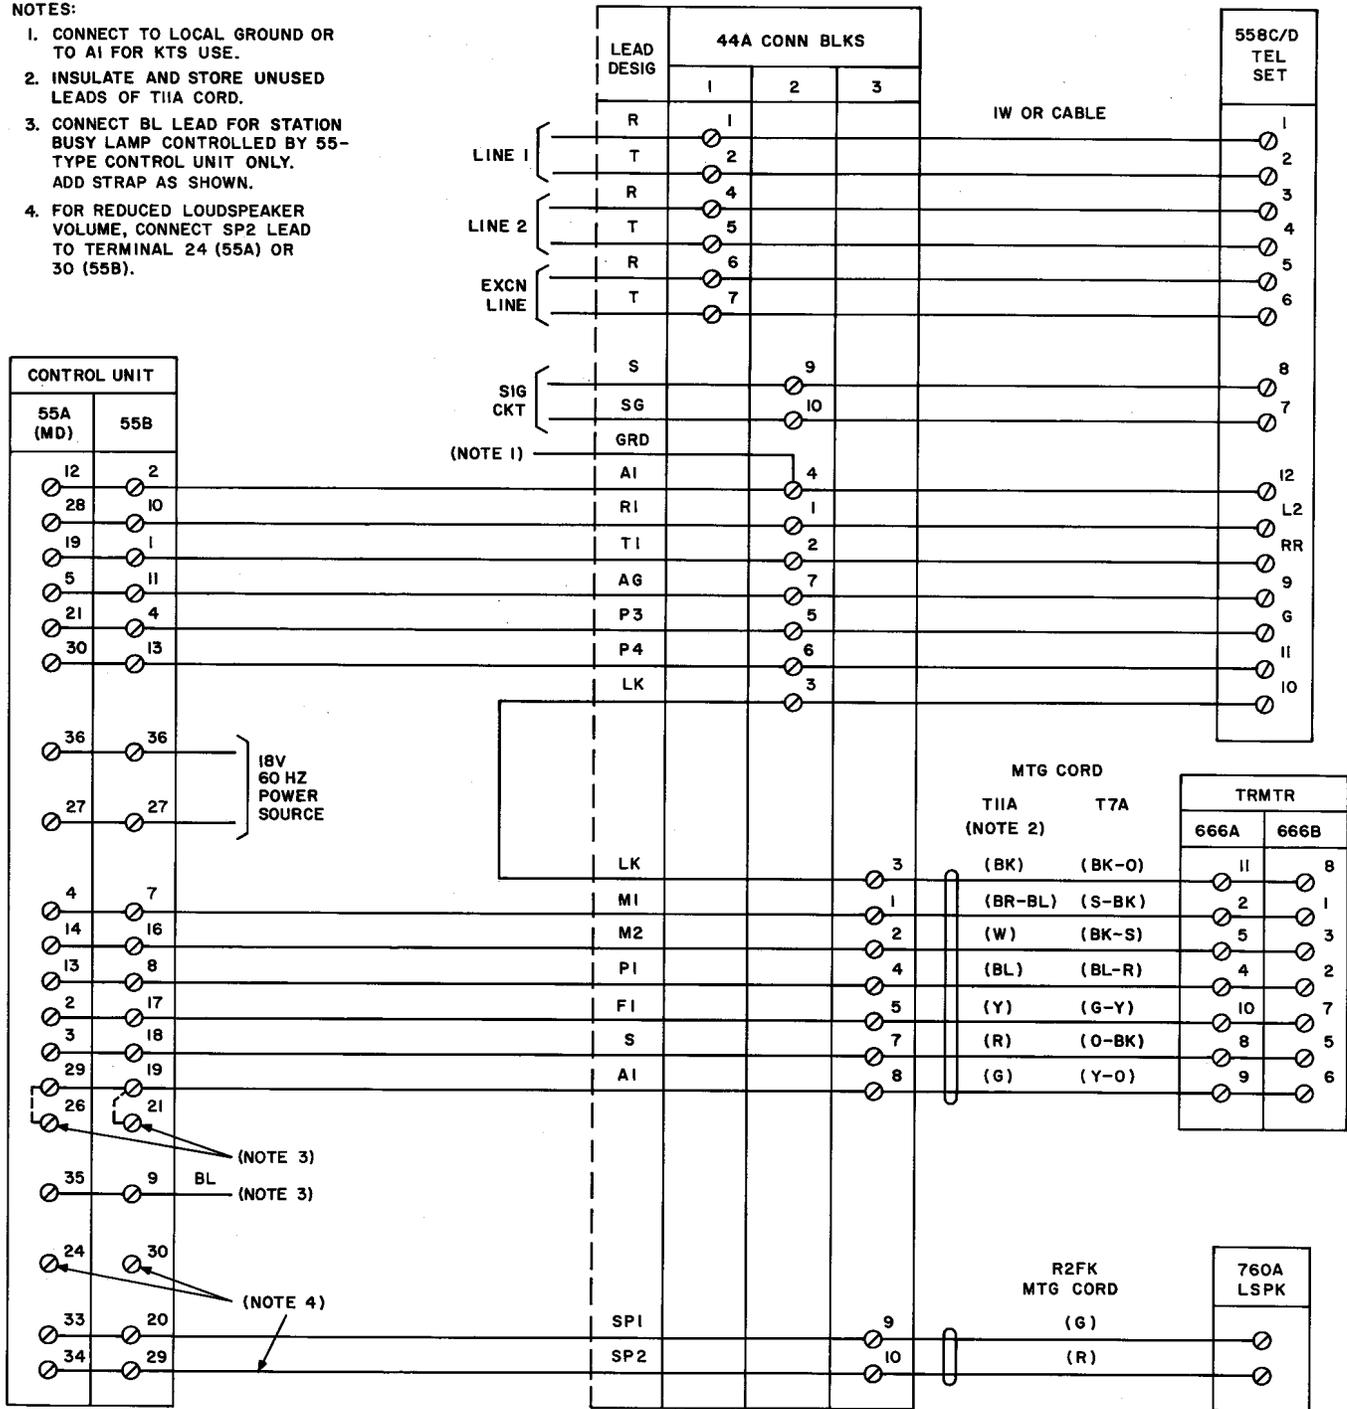


Fig. 3—558C/D Telephone Set, Connections to 3-Type Speakerphone System

NOTES:

1. CONNECT TO LOCAL GROUND OR TO AI FOR KTS USE.
2. INSULATE AND STORE UNUSED LEADS OF TIIA CORD.
3. CONNECT BL LEAD FOR STATION BUSY LAMP CONTROLLED BY 55-TYPE CONTROL UNIT ONLY. ADD STRAP AS SHOWN.
4. FOR REDUCED LOUDSPEAKER VOLUME, CONNECT SP2 LEAD TO TERMINAL 24 (55A) OR 30 (55B)

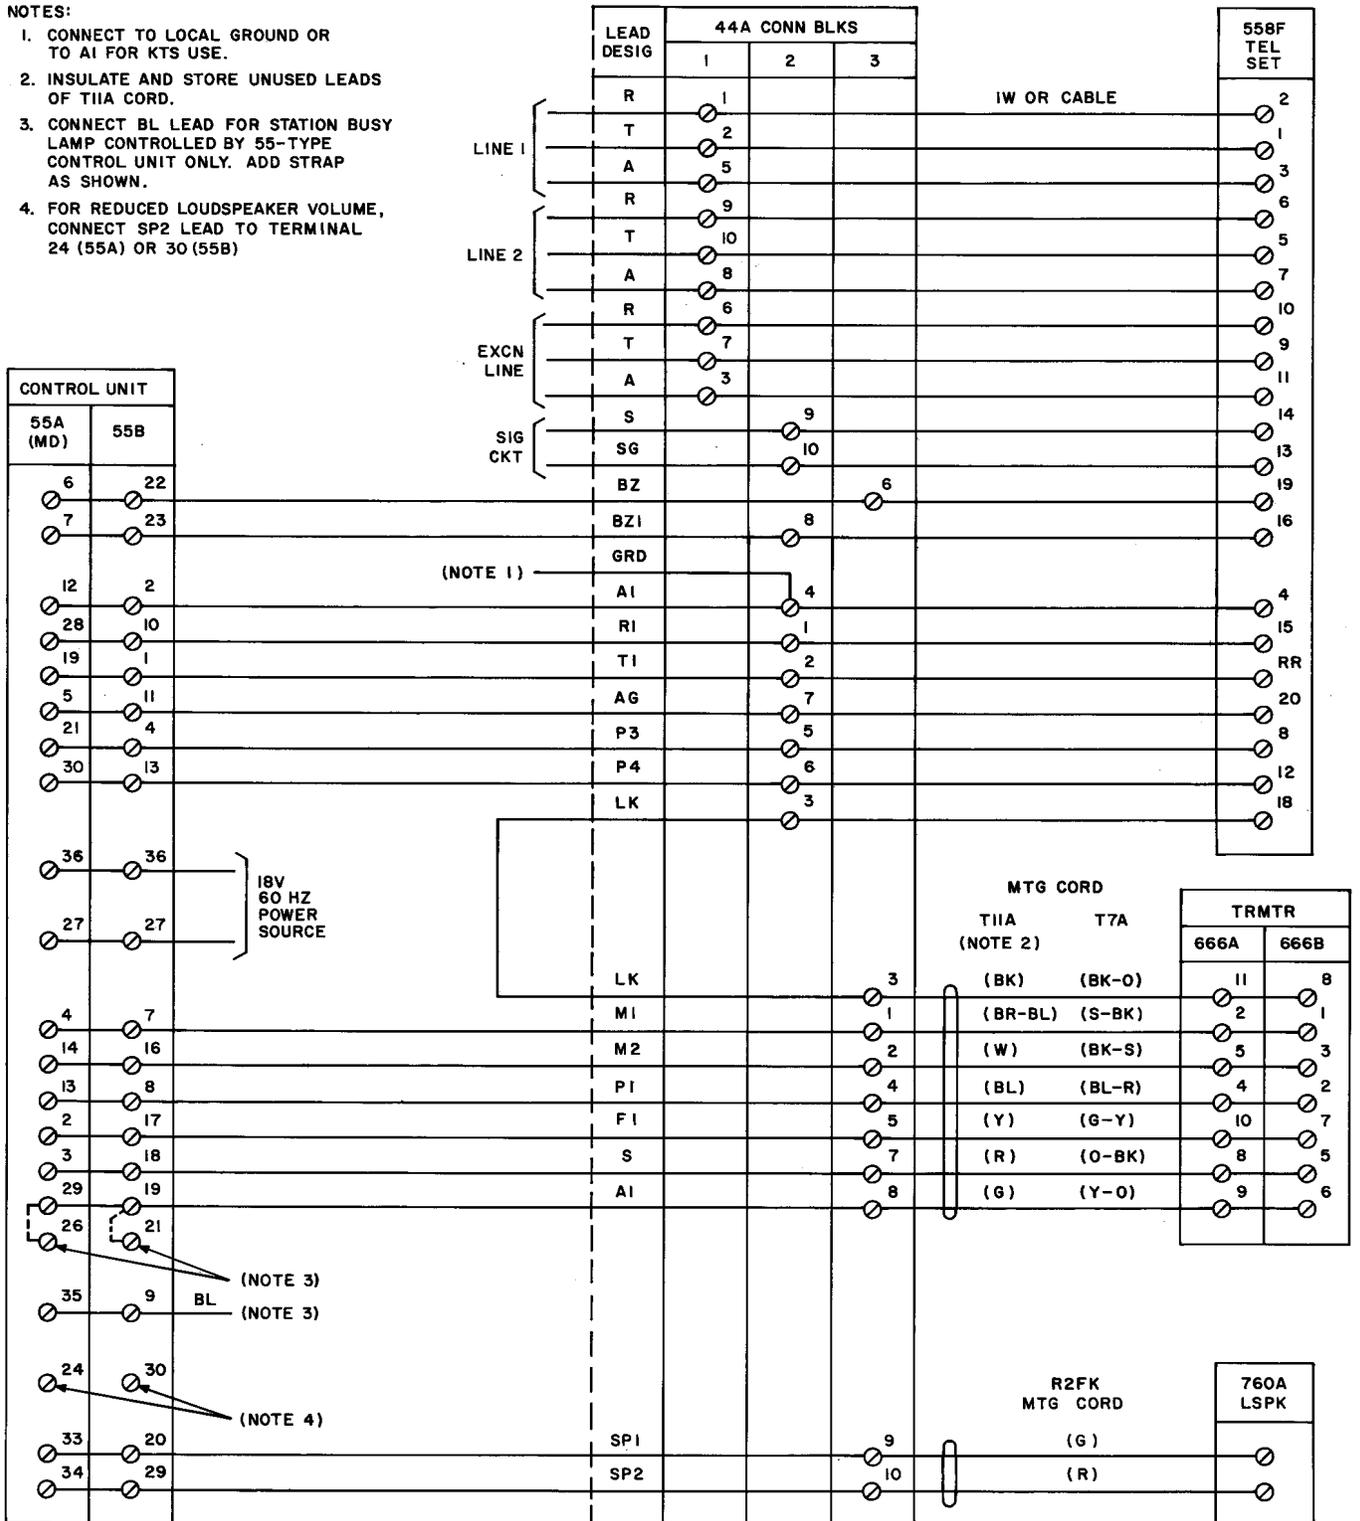


Fig. 4—558F Telephone Set, Connections to 3-Type Speakerphone System