

SPEAKERPHONE SYSTEM—3-TYPE 558-TYPE TELEPHONE SETS CONNECTIONS AND MAINTENANCE

1. GENERAL

1.01 These sets are supplied factory-wired for use with 3-type speakerphone. Refer to Division 502 for set wiring and ringer connections.

1.02 This section is reissued to:

- Change section reference in 1.01, 3.01, and Fig. 2.
- Show 666A transmitter MD, Fig. 1 and 2.

2. CONNECTION INDEX

Fig. 1 —558C/D Telephone Set, Connections To 3-Type Speakerphone System

Fig. 2—558F Telephone Set, Connections To 3-Type Speakerphone System

3. MAINTENANCE

3.01 Refer to the appropriate section for maintenance information for the 558-type telephone set. Refer to Division 512 for maintenance of speakerphone components used with this set.

NOTES:

1. CONNECT TO LOCAL GROUND OR TO AI FOR KTS USE.
 2. INSULATE AND STORE UNUSED LEADS OF T1A CORD.
 3. CONNECT BL LEAD FOR STATION BUSY LAMP CONTROLLED BY 55-TYPE CONTROL UNIT ONLY. ADD STRAP AS SHOWN.
 4. FOR REDUCED LOUDSPEAKER VOLUME, CONNECT SP2 LEAD TO TERMINAL 24 (55A) OR 30 (55B).
 5. (Y) [S-W] LINE SWITCH LEAD IS FACTORY WIRED TO TERM. 9 OF TEL SET. TRANSFER THIS LEAD FROM TERM. 9 TO TERM. 12.
- * 55A CONTROL UNIT MODIFIED BY WESTERN ELECTRIC COMPANY.

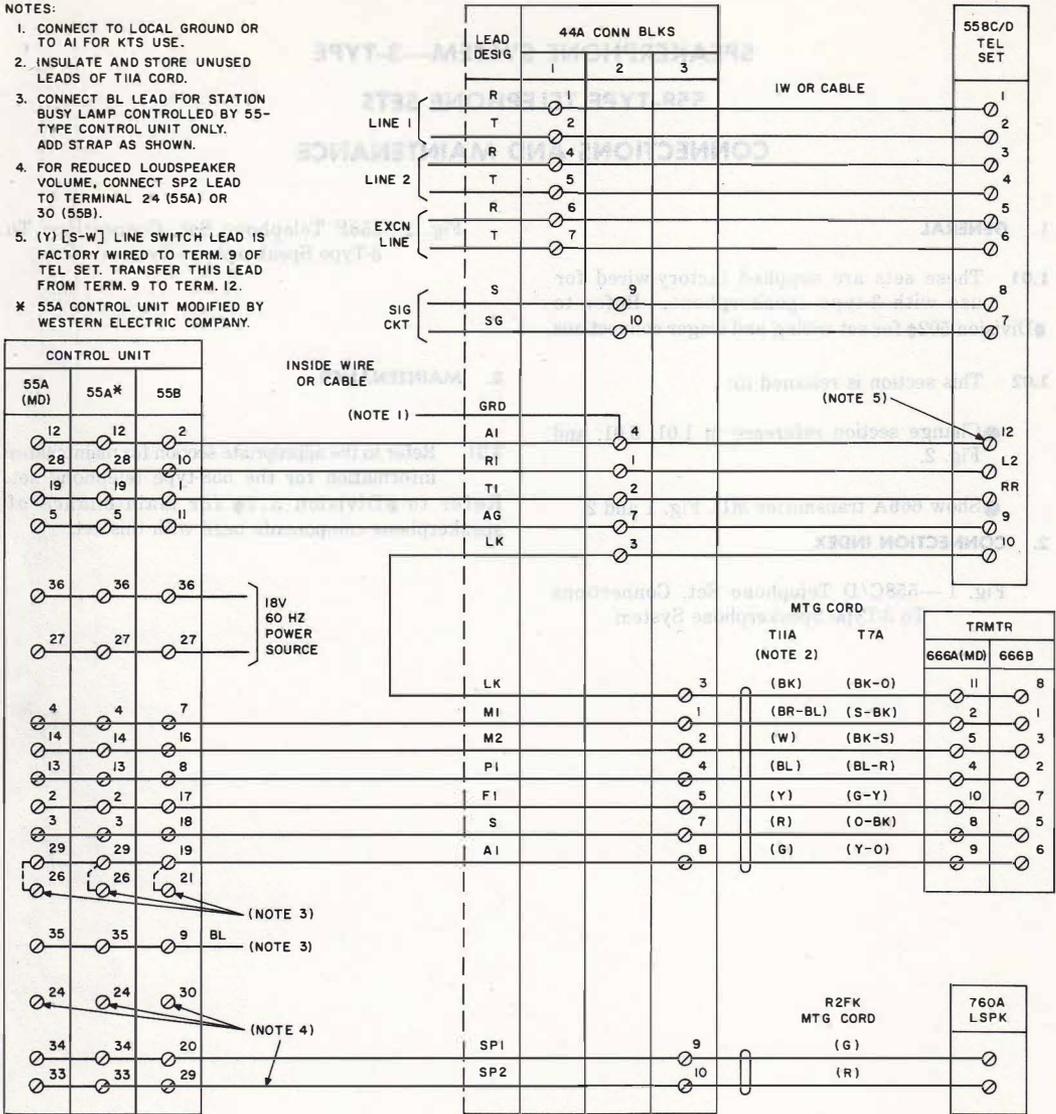


Fig. 1—558C/D Telephone Set, Connections To 3-Type Speakerphone System

NOTES:

1. CONNECT TO LOCAL GROUND OR TO AI FOR KTS USE.
 2. INSULATE AND STORE UNUSED LEADS OF T11A CORD.
 3. CONNECT BL LEAD FOR STATION BUSY LAMP CONTROLLED BY 55-TYPE CONTROL UNIT ONLY. ADD STRAP AS SHOWN.
 4. FOR REDUCED LOUDSPEAKER VOLUME, CONNECT SP2 LEAD TO TERMINAL 24 (55A) OR 30 (55B)
- * 55A CONTROL UNIT MODIFIED BY WESTERN ELECTRIC COMPANY.

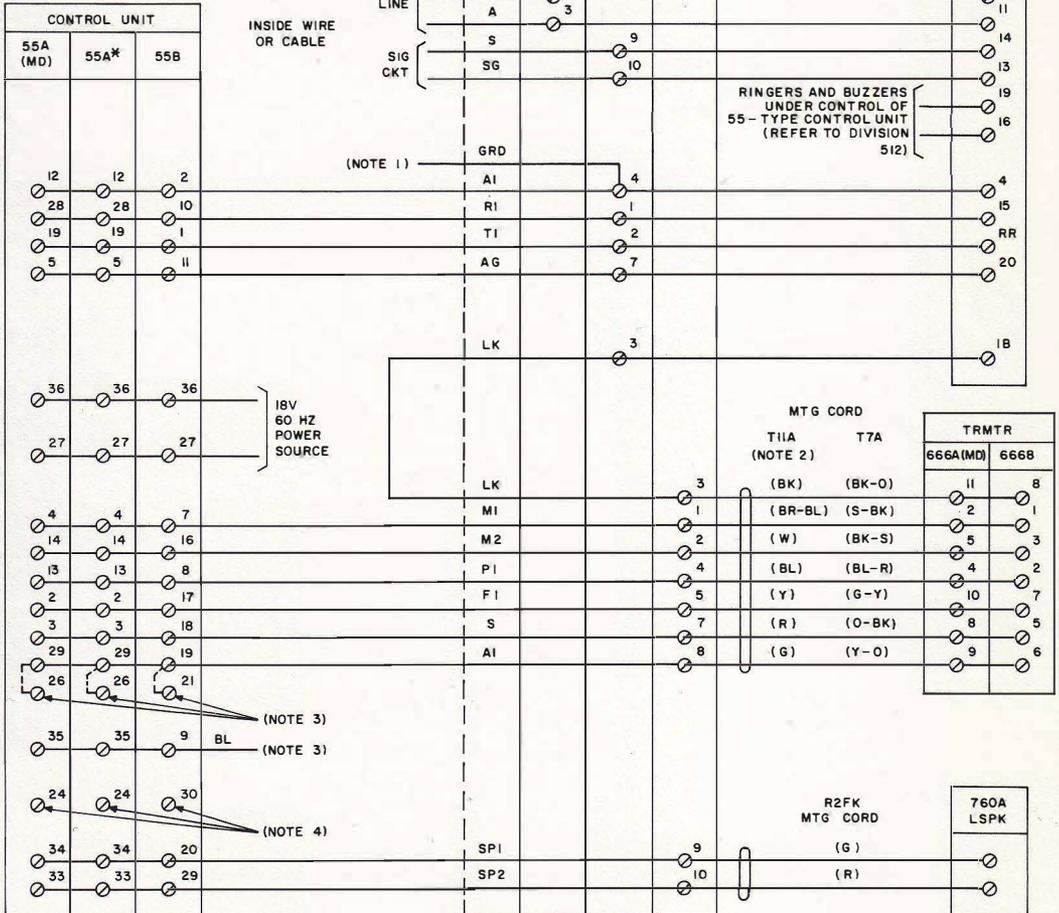


Fig. 2—558F Telephone Set, Connections To 3-Type Speakerphone System