

SPEAKERPHONE SYSTEM—3 TYPE
2511F TELEPHONE SETS
CONNECTIONS AND MAINTENANCE

1. CONNECTION INDEX


Fig. 1—2511F Telephone Set—Speakerphone
Connections

(b) Refer to Section 512-620-200 for maintenance
of speakerphone components.

2. MAINTENANCE

(a) Maintenance of the 2511F telephone set is
similar to that of the 1511-type telephone
sets.

SECTION 512-622-410

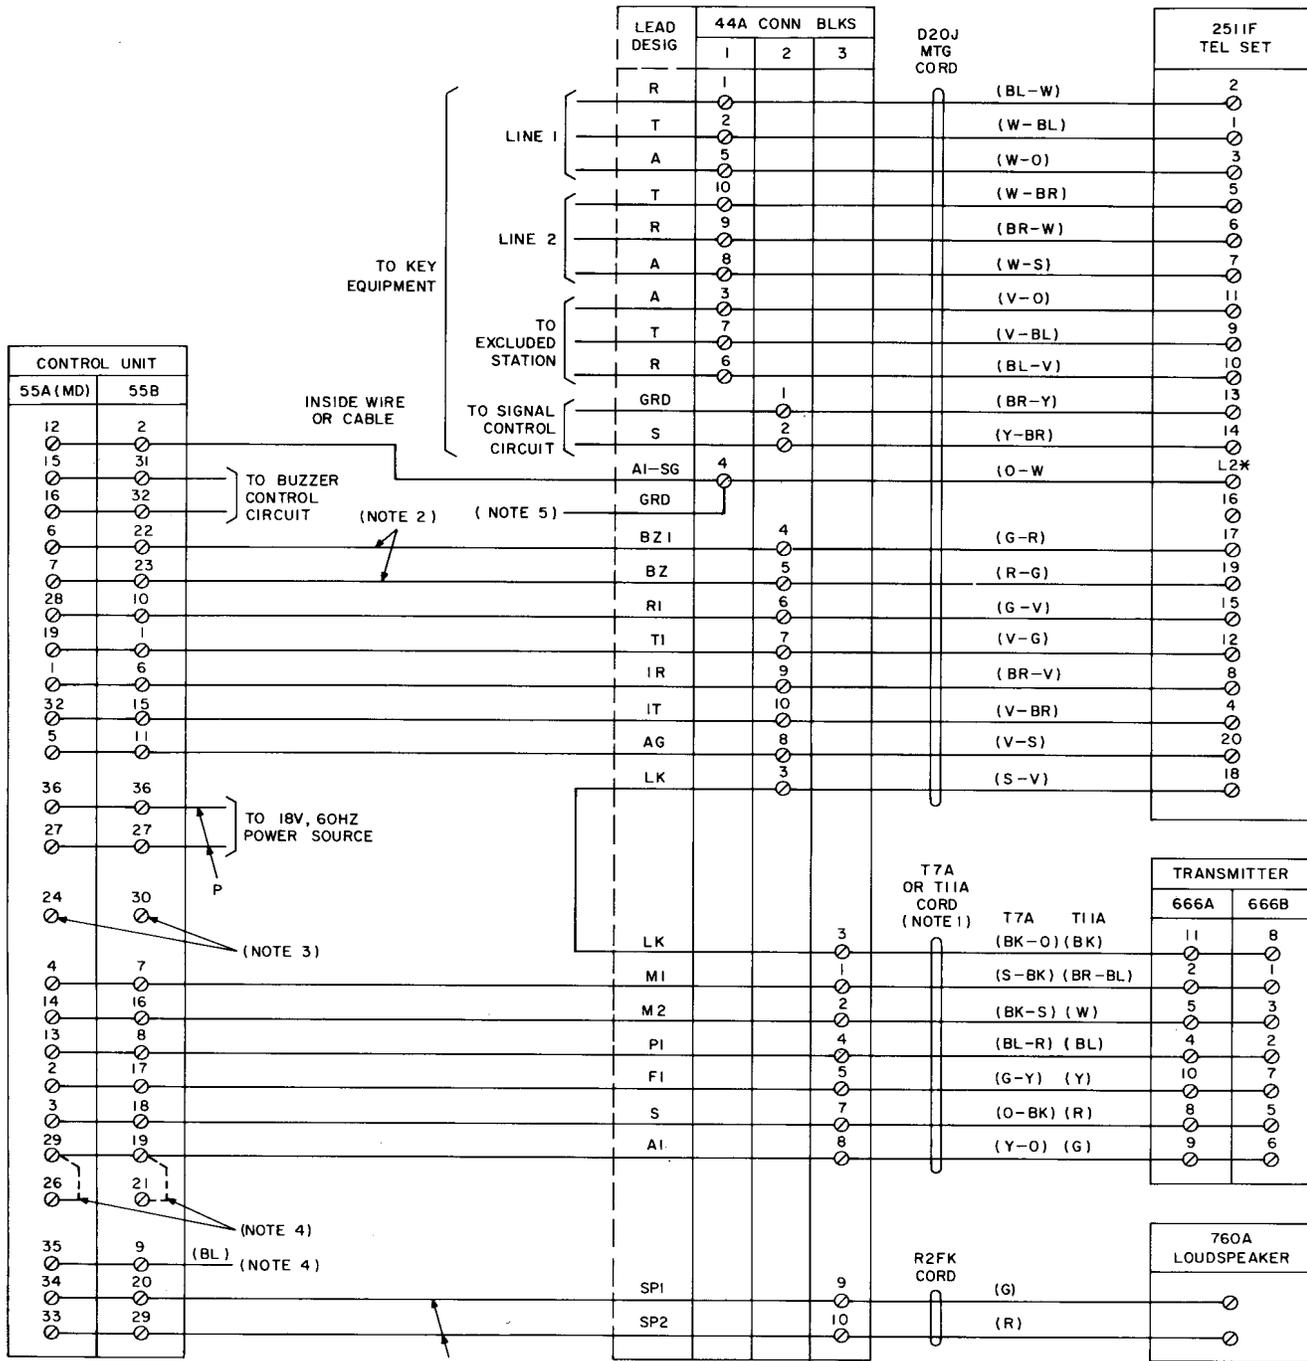

- NOTES:
1. INSULATE AND STORE UNUSED LEADS OF T11A CORD.
 2. CONNECT AS SHOWN TO SILENCE BUZZER WITH SPEAKERPHONE ON, IF NOT REQUIRED BUZZER LEADS MAY BE RUN DIRECT TO BUZZER CONTROL CIRCUIT.
 3. IF REDUCED LOUDSPEAKER VOLUME IS DESIRED, CONNECT SP2 LEAD TO TERMINAL 24 (55A) OR 30 (55B).
 4. CONNECT BL LEAD FOR STATION BUSY LAMP CONTROLLED BY 55-TYPE CONTROL UNIT ONLY. ADD STRAP AS SHOWN.
 5. CONNECT TO LOCAL GROUND OR TO AI FOR KTS USE.
- * TERMINAL ON NETWORK

Fig. 1—2511F Telephone Set—Speakerphone Connections