

## SPEAKERPHONE SYSTEM—3-TYPE

### 2660-TYPE TELEPHONE SETS

### CONNECTIONS AND MAINTENANCE

#### 1. GENERAL

1.01 This section is reissued to:

- Change section reference in 3.01.
- Show 666A transmitter MD, Fig. 2.

1.02 This section covers information necessary to modify and connect the 2660A1 telephone set to provide speakerphone service.

1.03 Replace the D3BN mounting cord furnished with this telephone set with a D10R mounting cord (ordered separately). Connect leads and modify set wiring in accordance with Table A and Fig. 1.

#### 2. CONNECTION INDEX

Table A—2660A1 Telephone Set Modification For Speakerphone

Fig. 1—2660-Type Telephone Set Wired For 3-Type Speakerphone and 1A1 or 1A2 KTS

Fig. 2—2660-Type Telephone Set, Connections To 3-Type Speakerphone

#### 3. MAINTENANCE

3.01 Refer to ♦Division 502♦ for maintenance information for the 2660-type telephone sets and to ♦Division 512♦ for maintenance of 3-type speakerphone components. Also refer to Fig. 1.

**TABLE A**  
**2660A1 TELEPHONE SET—MODIFICATION FOR SPEAKERPHONE (NOTE 1)**

WIRE OR LEAD	1A1 OR 1A2 KEY TEL SYS	INDIVIDUAL OR BRIDGED	RING PARTY	TIP PARTY	
Line Switch	(BR)	F	*	*	
	(Y)	G	G	A	
	(S)	Connect to mounting cord (S-W) lead†			
	(G)	L2	L2	L2	
	(W)	C	C	C	
Dial	(G)	A	A	G	
Ringer Strap	(G)	TB1-7 to L2	TB1-7 to L2	TB1-7 to L2	
D10R Mounting Cord (Note 2)	R (BL-W)	L2	L2	L2	
	T (W-BL)	A	A	G	
	A1 (O-W)	G	G	A	
	AG (W-O)	F	*	*	
	R1 (G-W)	L2	L2	L2	
	T1 (W-G)		Connect to dial (O) lead†		
	IR (BR-W)		Connect to dial (V) lead†		
	IT (W-BR)	*	*	*	
	LK (S-W)		Connect to line switch (S) lead†		
	A (W-S)	F	*	*	

\* Insulate and store.

† Use D-161488 connector (3 required).

**Notes 1:** Terminals on network unless otherwise noted.

**2:** Replace D3BN cord with D10R (ordered separately).

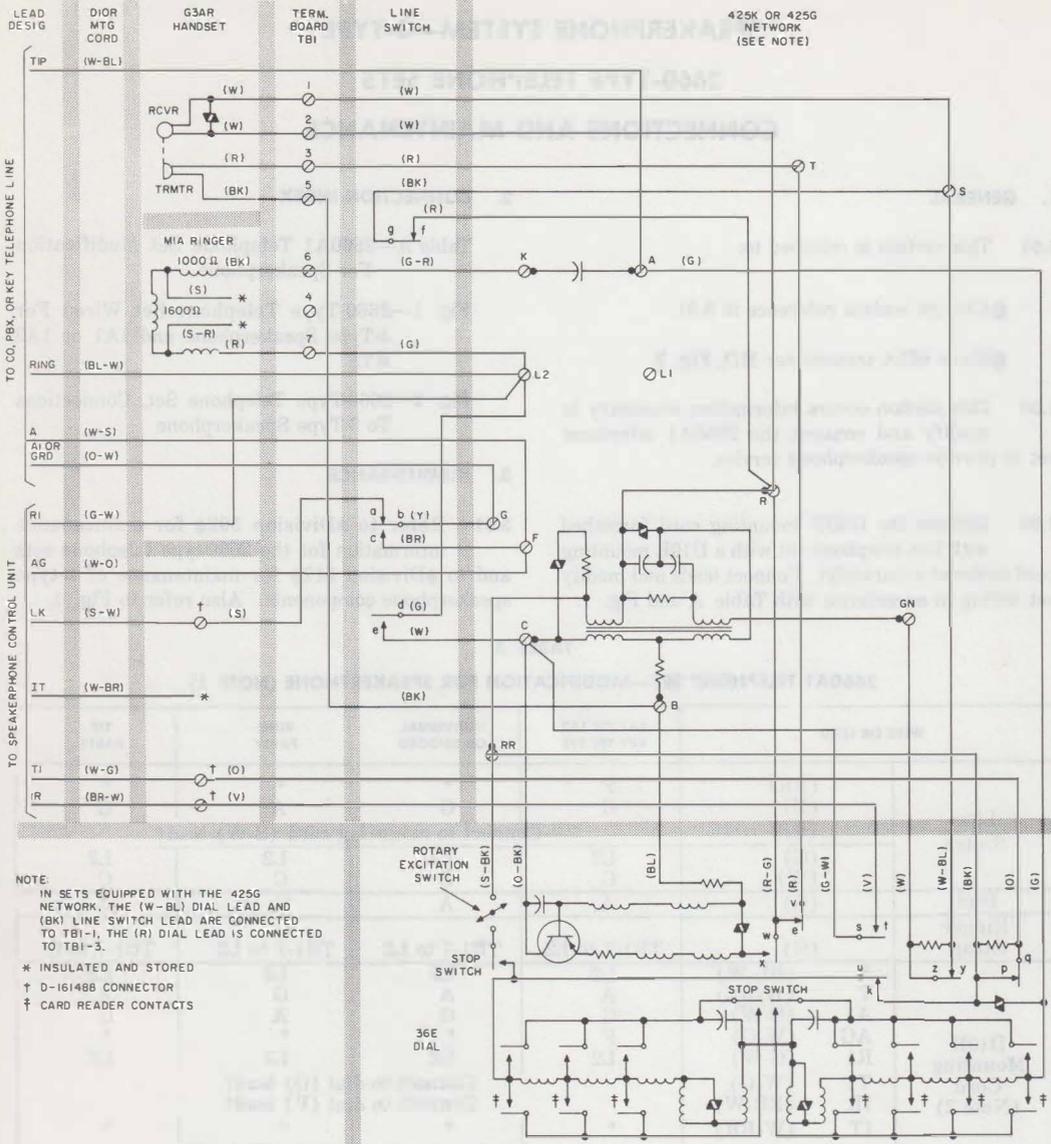


Fig. 1—2660-Type Telephone Set Wired For 3-Type Speakerphone and 1A1 or 1A2 KTS

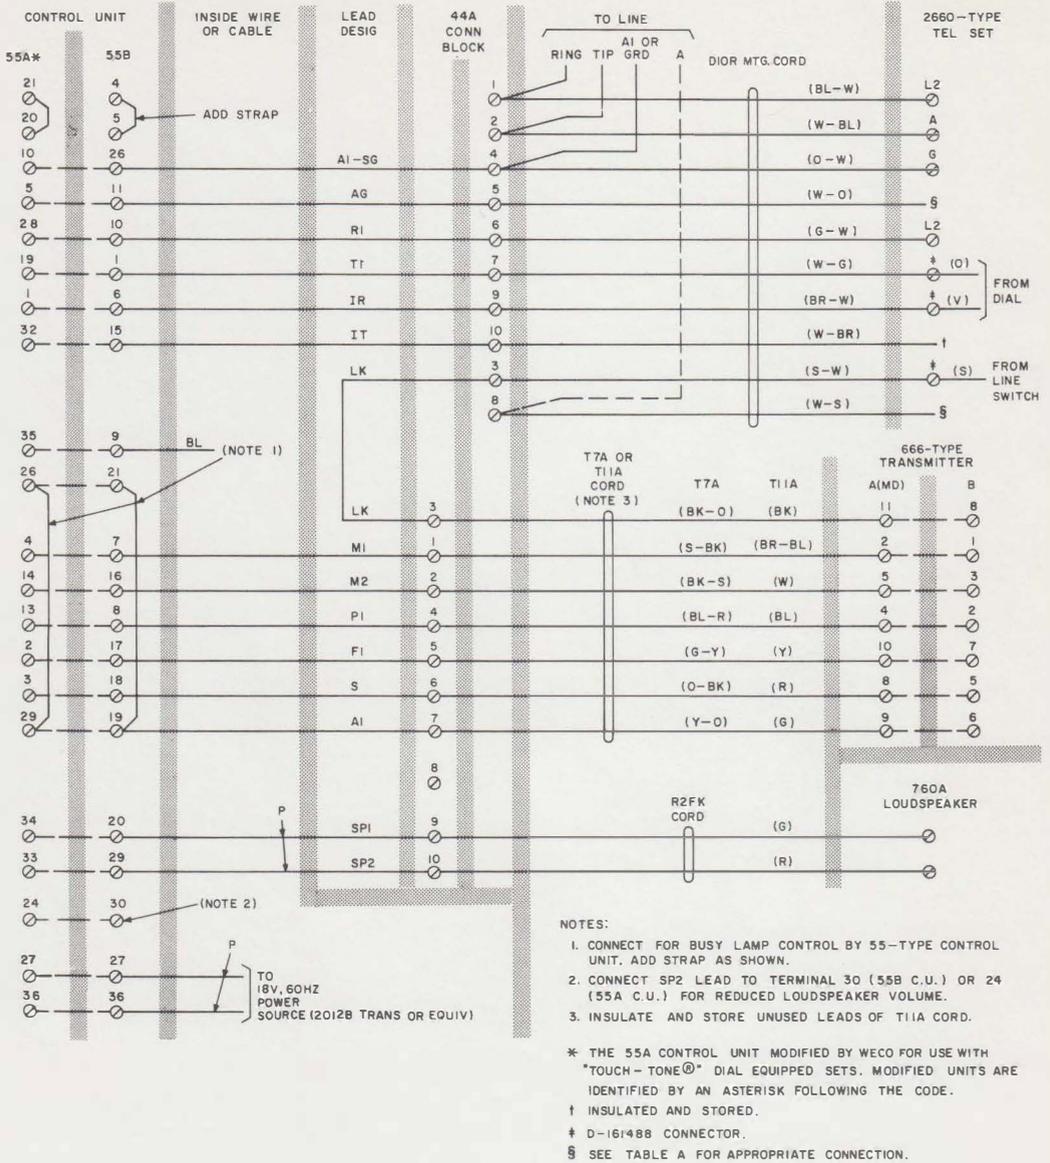


Fig. 2—2660-Type Telephone Set, Connections To 3-Type Speakerphone