

SPEAKERPHONE SYSTEM—3-TYPE

2662-TYPE TELEPHONE SET

CONNECTIONS AND MAINTENANCE

1. GENERAL

1.01 This section covers connection of the 2662-type telephone set when used with the 3-type speakerphone system.

1.02 This section is reissued to:

- Change section reference in 2.01 and 3.01.
- Show 666A transmitter MD, Fig. 1.

2. CONNECTIONS



For proper operation of the 3-type speakerphone system, ground must be present on the A1-lead. Connect A1 ground to the appropriate terminal

on the telephone set or at the 55-type control unit for 1A1 and 1A2 KTS. Connect SG ground for 1A KTS.

2.01 Services such as interrupted buzzer or ringer and station busy lamp control can be connected through relay contacts of the 55-type control unit. For connections of these and other services, refer to Division 512. †

3. MAINTENANCE

3.01 † Maintenance of the 2662-type telephone set is found in Division 502. Division 512 covers maintenance of speakerphone components. †

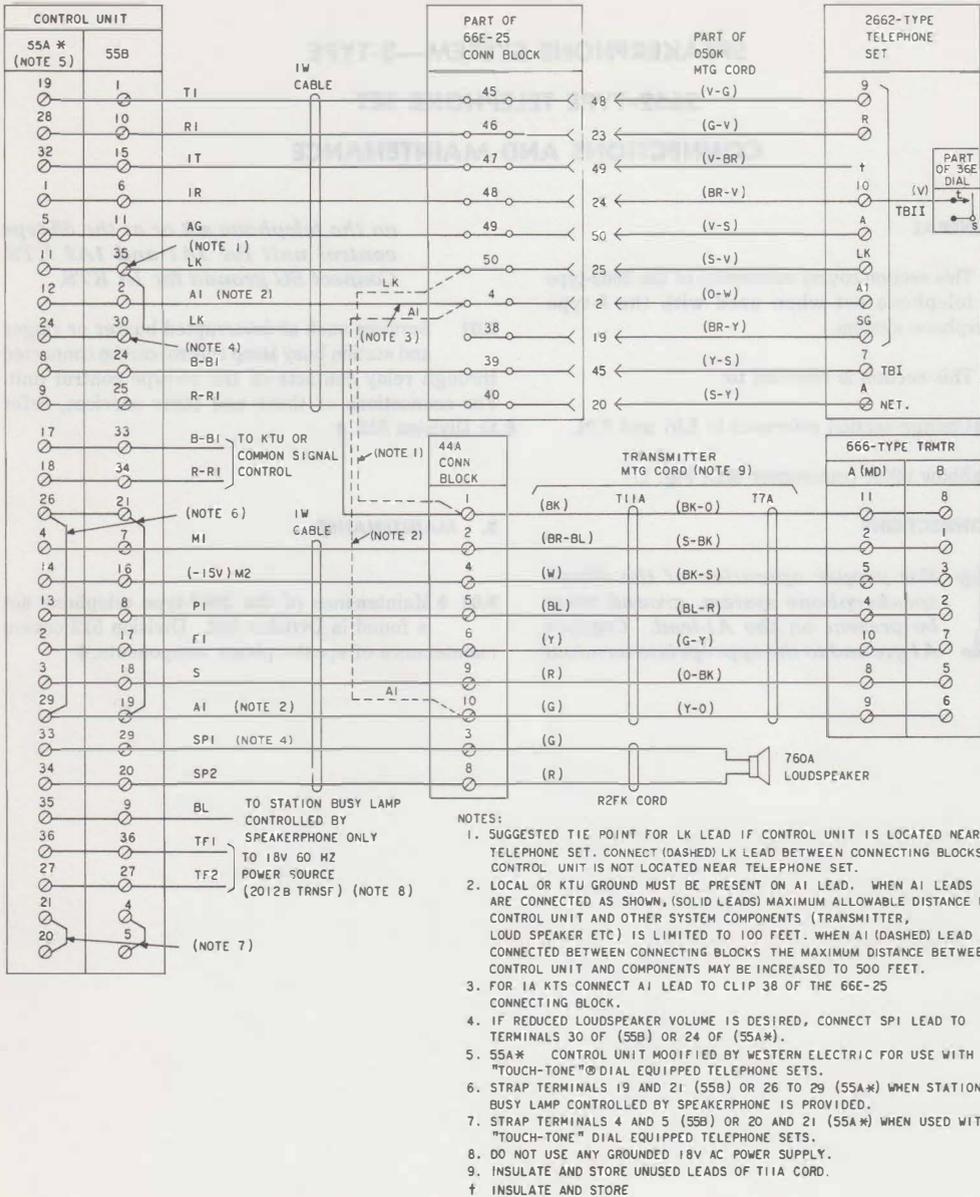


Fig. 1—2662-Type Telephone Set, Connections to 3-Type Speakerphone