

SPEAKERPHONE SYSTEM—3-TYPE 2851A1M TELEPHONE SETS CONNECTIONS AND MAINTENANCE

1. GENERAL

1.01 These sets are supplied factory-wired for use with 3-type speakerphone. Refer to Division 503 for wiring and ringer connections.

1.02 This section is reissued to change section reference in 1.01 and 3.01.


2. CONNECTION INDEX

Fig. 1—2851A1M Telephone Set, Connections to 3-Type Speakerphone System

Fig. 2—2851A1M Telephone Set, Connections to 3-Type Speakerphone System When Control Unit is Located at the KTS Equipment

3. MAINTENANCE

3.01 For maintenance information refer to Division 503 for the 2851A1M telephone set and Division 512 for the speakerphone components used with this set.

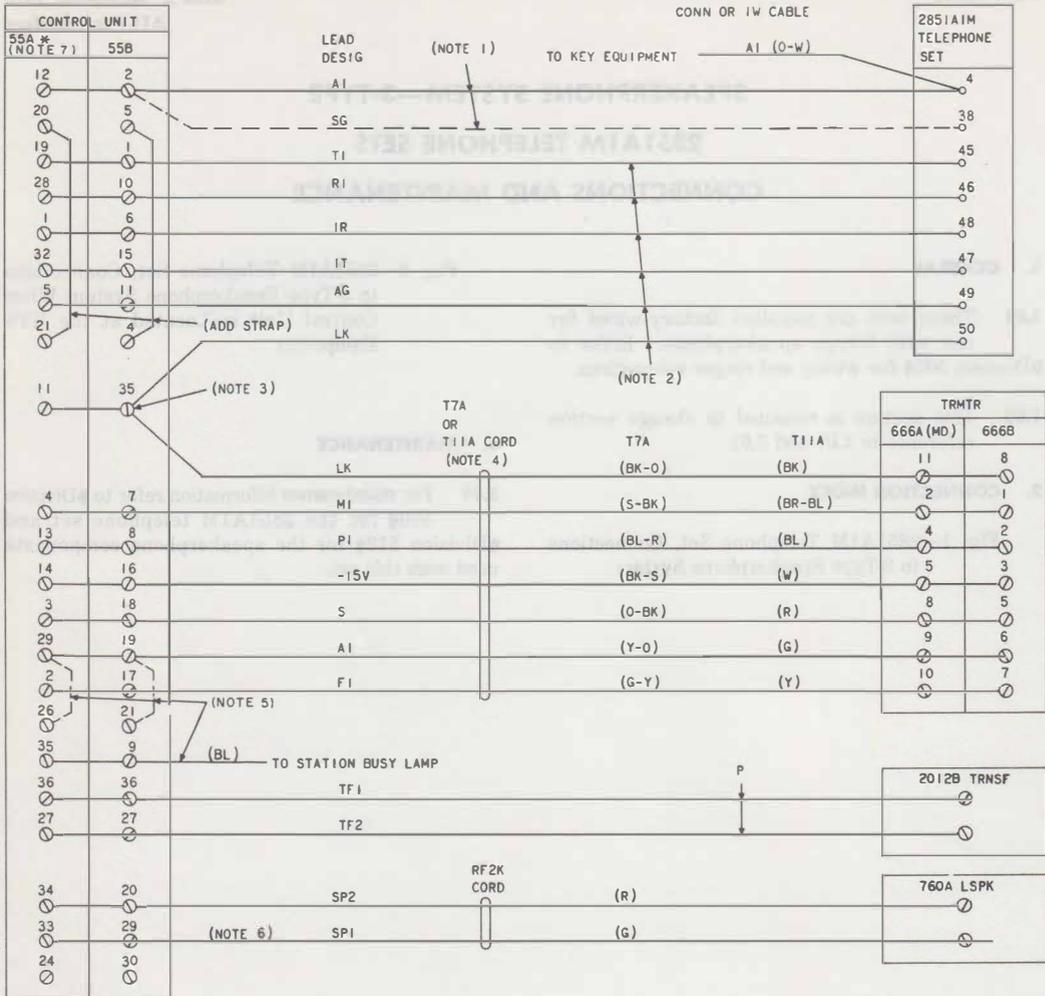

NOTES:

1. FOR 1A1, 1A2 AND 6A KEY TELEPHONE SYSTEMS, CONNECT AI LEAD TO TERMINAL 4 ON CLIP-TYPE CONNECTING BLOCK, FOR 1A KEY TELEPHONE SYSTEM CONNECT SG LEAD TO TERMINAL 38 ON CLIP-TYPE CONNECTING BLOCK AND MOVE (Y) LINE SWITCH LEAD FROM 4 TO 11 OF SCREW TERMINAL FIELD.
2. DO NOT CONNECT TI, RI, IR, IT, AG AND LK LEADS IN CABLE TO KEY EQUIPMENT.
3. TIE POINT FOR LK LEADS BETWEEN TELEPHONE SET AND TRANSMITTER WHEN CONTROL UNIT IS LOCATED NEAR TELEPHONE SET.
4. INSULATE AND STORE UNUSED LEADS OF T11A CORD.
5. STRAP AS INDICATED AND CONNECT (BL) LEAD WHEN STATION BUSY LAMP IS CONTROLLED BY SPEAKERPHONE.
6. TO REDUCE LOUDSPEAKER VOLUME, CONNECT SPI LEAD TO TERMINAL 24 (55A) OR 30 (55B).
7. 55A* CONTROL UNIT MODIFIED BY WESTERN ELECTRIC CO. FOR USE WITH "TOUCH-TONE" ® TELEPHONE SETS.

Fig. 1—2851A1M Telephone Set, Connections to 3-Type Speakerphone System

