



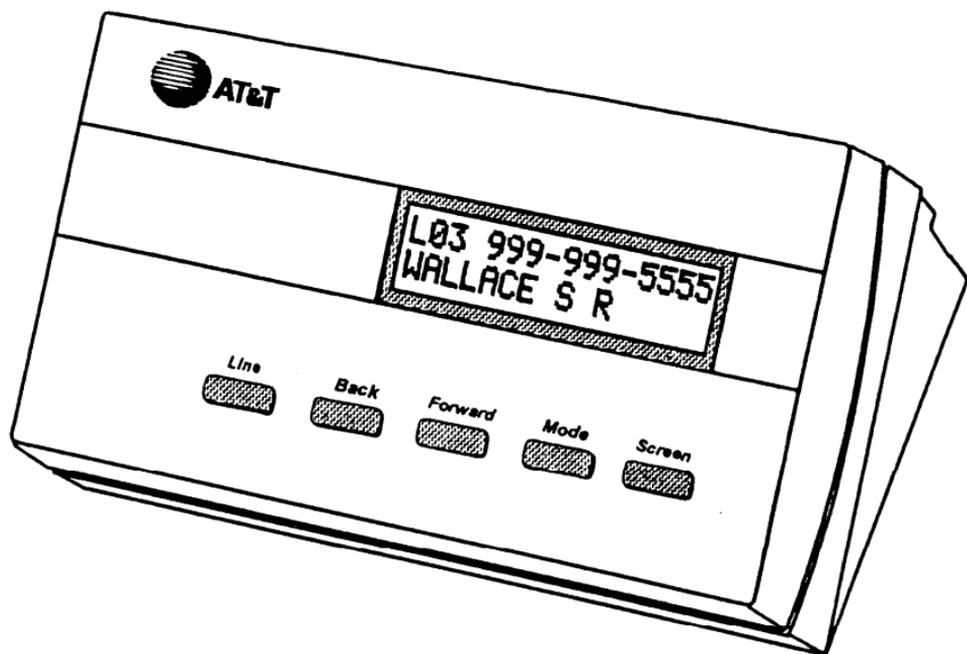


MERLIN[®] Identifier User's Quick Reference

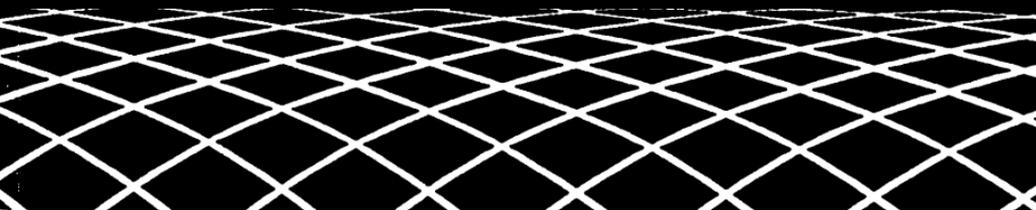

MERLIN Identifier Display Unit


The MERLIN Identifier Display Unit displays caller information for calls received from telephone exchanges supporting Caller ID service. For each such call, the Display Unit displays the caller's telephone number in its Primary Screen as the call is received. If the telephone number matches caller information in the MERLIN Identifier database, or if a name is sent from the Central Office and there is no caller information in the MERLIN Identifier database, the caller name is displayed as well.

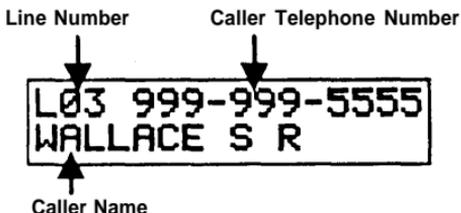

MERLIN Identifier Display Unit—Primary Screen

If the incoming call's telephone number does not match a record in the database, question marks (?) are displayed instead of the caller name. The words NOT RECEIVED are displayed instead of the caller name and zeros are displayed instead of the telephone number if the call is from an exchange that does not support Caller ID.

The MERLIN Identifier Display Unit lets you display caller information for the last 18 calls received on each of four MERLIN telephone lines. Individual call's sequence number, and time and date of the call can be displayed in the MERLIN Identifier Display Unit's Alternate Screen.

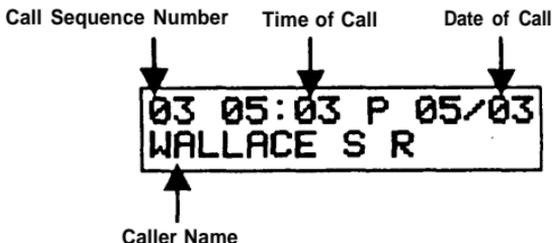

MERLIN Identifier Display Unit—Alternate Screen

Changing the Displayed Telephone Line

- Press [Line] Selects the next line and displays its most recent call. Only the last two digits of the line number are displayed.

Scrolling between the Last 18 Calls

- Press [Back] Displays the call received prior to the one that is currently displayed. Press and hold this button to continuously scroll backwards through previously received calls. **BEGINNING** is displayed if you attempt to scroll past the oldest call.
- Press [Forward] Displays a more recent call than the one that is currently displayed. Press and hold this button to continuously scroll forward to the most recent call. **END** is displayed if you attempt to scroll past the most recent call.

Switching between Screens

- Press [Screen] Switches between the MERLIN Identifier's Primary and Alternate Screens.

Changing Display Unit Modes

The MERLIN Identifier Display unit supports three modes that determine whether an audible beep accompanies each incoming call.

Normal Mode: change to this mode to display caller information without beeping.

Burst-Through Mode: change to this mode to beep every time incoming calls are displayed.

Priority Mode: change to this mode to beep only when incoming calls match database records identifying priority callers.

Press [Mode]

Displays a status screen showing the current mode of the MERLIN Identifier Display Unit. Pressing any other button while the status screen is displayed toggles between the **Normal**, **Burst-Through**, and **Priority** modes. Press this button again to exit the status screen.