
Meridian 1

Message Registration

Description and operation

Document Number: 553-2701-101

Document Release: Standard 4.00

Date: August 1996

© 1990, 1996

All rights reserved

Printed in the United States of America

Information is subject to change without notice. Northern Telecom reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules, and the radio interference regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

SL-1 and Meridian 1 are trademarks of Northern Telecom.

Revision history

August 1996

Standard, Release 4.00. This document is reissued for X11 Release 22.0x.

December 1994

Standard, Release 3.00. This document is reissued to include editorial changes and indexing. Due to the extent of the changes, revision bars are not used.

December 1991

Standard, Release 2.00. This document is reissued to include technical content updates. Due to the extent of the changes, revision bars are not used.

August 1990

Standard, Release 1.00. This document is reissued for compliance with Northern Telecom standard 164.0.

Contents

Description	1
Feature interactions	3
Multiple Appearance Directory Numbers	3
Call Transfer	3
Call Forward	3
Conference	3
Trunk-to-trunk calls	3
Attendants	3
Operating parameters	4
Feature administration	4
Hardware description	4
Trunk circuit packs	4
Reverse Battery operation	5
Operation	9
Background terminal command summary	9
Setting room meters	10
Selecting a single DN	10
Selecting Multiple Appearance DNs	11
Access to meters	12

List of figures

Figure 1	
Trunk connections	7

List of tables

Table 1	
QPC330 and QPC331 trunk option switch settings	5
Table 2	
QPC219, QPC295 CO/FX/WATS trunk cards	6
Table 3	
MR commands	10
Table 4	
MR set commands	12

::553-4151.eps 7

Description

Message Registration (MR) is an optional software package that meters local calls over designated central office (CO) trunks. The Message Registration (MR) feature counts Reverse Battery (RVB) pulses from outgoing loop start or ground start CO trunks. Pulses received are stored in software meters. Each meter is assigned to a Directory Number (DN) or trunk access code that requires metering.

The Message Registration feature allows each customer within the system to keep an accurate record of CO calls for billing and administration purposes.

- Each Directory Number (DN) of three or more digits, including the attendant DN, can be assigned a software meter. For multiple appearance DNs, only one meter is assigned to meter all calls to the Prime DN (PDN). Stations with multiple DN keys have a meter allocated for each DN key.
- Meters can also be assigned to TIE trunk routes. A TIE route meter can be assigned to the route access code of each TIE route in the customer group. An access code for a metered route must be at least three digits long.
- The system automatically assigns one customer meter for each customer within the system. This customer meter is used to store pulses that cannot be added to particular DN or trunk meters assigned in the customer group.

Software meters are assigned in LDs 10 and 11. Each meter number corresponds to the DN or Trunk Access Code to which it is assigned. Meters can be either ON or OFF. When a meter is turned off, pulses received are not stored. The customer meter is always on and cannot be turned off. Meters can also be turned on or off individually or in groups, using a background terminal (BGD).

Each software meter can store up to 32,766 pulse counts before automatically resetting to 0. When a meter is reset, a message is printed on the system maintenance terminal, the BGD, or both, indicating that a reset occurred. Overflow messages display information on meter contents for any DN or Trunk Access Code requested:

- Station or trunk TN
- Station DN or the Trunk Access Code
- Trunk TN (outgoing CO trunk used for the call)
- Customer number for their station or trunk
- Meter count before reset (32766)

The message for a customer meter overflow appears as follows:

CUST MTR xx OVF 32766

When equipped with the MR feature, the system is capable of the following provisions:

- Attendants are able to meter outgoing local calls over CO routes.
- Meter contents are accessible from SL-1 and digital telephones equipped with digit display and a Message Registration key/lamp pair.
- Meter contents are also accessible from BGDs.

The system uses class of service (CLS) to distinguish between room phones and administrative phones. Room phones have Controlled Class of Service Allowed (CCSA), while administrative phones have Controlled Class of Service Denied (CCSD). Call charges and meter data provided to the attendants appear on the BGD and are classified into five categories:

ROOM	guest room DN (CCSA)
ADMN	administrative phones (CCSD)
ATTN	attendant consoles
TRK	outgoing CO trunks
CUST	customer DNs

Feature interactions

Multiple Appearance Directory Numbers

Multiple Appearance DN (MADN) are charged on the meter assigned to the Prime DN (PDN). Data calls are charged to the originating telephone. Maintenance tests on metered trunks do not affect the metered values.

Call Transfer

Only the party originating the Call Transfer is metered.

Call Forward

On calls where the Call Forward feature is used, the last party to forward the call is metered. This applies to cases where a CO call originates from a Call Forward station, and to cases where an established CO call is transferred to a station that is forwarded to another internal station.

Conference

Only the party originating the Conference Call is metered.

Trunk-to-trunk calls

Metering of trunk-to-trunk calls using an outgoing CO trunk is not supported if the Trunk Access Code is a one- or two-digit access code. Otherwise, a meter corresponding to the Trunk Access Code of the metered trunk route is incremented. Only three- and four-digit codes are supported for DN or Trunk Access Codes.

Attendants

For attendant-originated calls to CO trunks, the attendant meter is incremented. When the call is extended, the attendant is metered until a telephone within the Meridian 1 is added to the conference. When the attendant uses a loop key, the call is metered to the Room DN connected through that key; otherwise, the attendant meter is incremented.

Operating parameters

The MR package must be supported by a BGD with Controlled Class of Service Allowed (CCSA). The feature is not supported by attendant administration.

MR is mutually exclusive with AUTOVON, Coordinated Dialing Plans (CDPs), and Centralized Attendant Services (CAS).

One- or two-digit DNs or access codes cannot be metered.

Feature administration

Each CO route must be declared as metered or nonmetered in LD16, trunk route data block. Calls should not be allowed to overflow from metered to nonmetered routes.

A software meter must be assigned in the Customer Numbering Plan to each DN or Trunk Access Code for which metering is desired.

Hardware description

MR is supported on the following machine types:

- MS, S, XN, and N
- ST, NT, RT, and XT
- System options 21, 51, 61, and 71

Trunk circuit packs

One of the following trunk circuit packs must be used for trunks where metering is required. The choice of pack depends on two factors: whether the trunks involved are loop or ground start, and whether system operation is A-law or μ -law.

Trunk cards QPC219, QPC330, or QPC450 must be used for the CO trunk routes receiving Reverse Battery (RVB) signals. The QPC330 card must have its signaling set up like the QPC219. Note that QPC330 has an internal counter to accumulate pulses and lessen the number of CPU interrupts, but the QPC219 does not. ([Tables 1](#) and [2](#))

Reverse Battery operation

When the CO trunk returns a Reverse Battery (RVB) signal, only one pulse is received for each outgoing call. This pulse is passed to the software meter for storage. The meter is incremented once for each metered local call regardless of duration. Reversals received within 2 seconds of digit outpulsing completion are ignored.


Table 1
QPC330 and QPC331 trunk option switch settings

Application	Switch settings											
	Unit 0 E35 switch						Unit 1 E5 switch					
	1	2	3	4	5	6	1	2	3	4	5	6
Loop start (accumulated pulsing)												
Third wire battery on M	off	off	off	off	on	off	off	off	off	off	on	off
Third wire ground on M	off	off	off	off	off	on	off	off	off	off	off	on
Second pair (M & MM)	off	off	off	off	off	off	off	off	off	off	off	off
Ground start (accumulated pulsing)												
Third wire battery on M	on	off	on	off	on	off	on	off	on	off	on	off
Third wire ground on M	on	off	on	off	off	on	on	off	on	off	off	on
Second pair (M & MM)	on	off	on	off	off	on	on	off	on	off	off	on
Regular CO trunk operation (same as QPC219/QPC295)	off	on	off	on	off	off	off	on	off	on	off	off

Table 2
QPC219, QPC295 CO/FX/WATS trunk cards

Application	Switch settings																
	Unit 0 E35 switch								Unit 1 E5 switch								
	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	
Loop start (accumulated pulsing)																	
Third wire battery on M	off	off	off	off	on	off			off	off	off	off	on	off			
Third wire ground on M	off	off	off	off	off	on			off	off	off	off	off	on			
Second pair (M & MM)	off	off	off	off	off	off			off	off	off	off	off	off			
Automatic guard detection	off	off	on						off	off	on						
Ground start (accumulated pulsing)																	
Third wire battery on M	on	off	on	off	on	off			on	off	on	off	on	off			
Third wire ground on M	on	off	on	off	off	on			on	off	on	off	off	on			
Second pair (M & MM)	on	off	on	off	off	off			on	off	on	off	off	off			
900 Ω termination								on	on							on	on
600 Ω termination								off	off							off	off
Note: 900 and 600 Ω termination is for QPC219 and later vintages.																	

Figure 1
Trunk connections

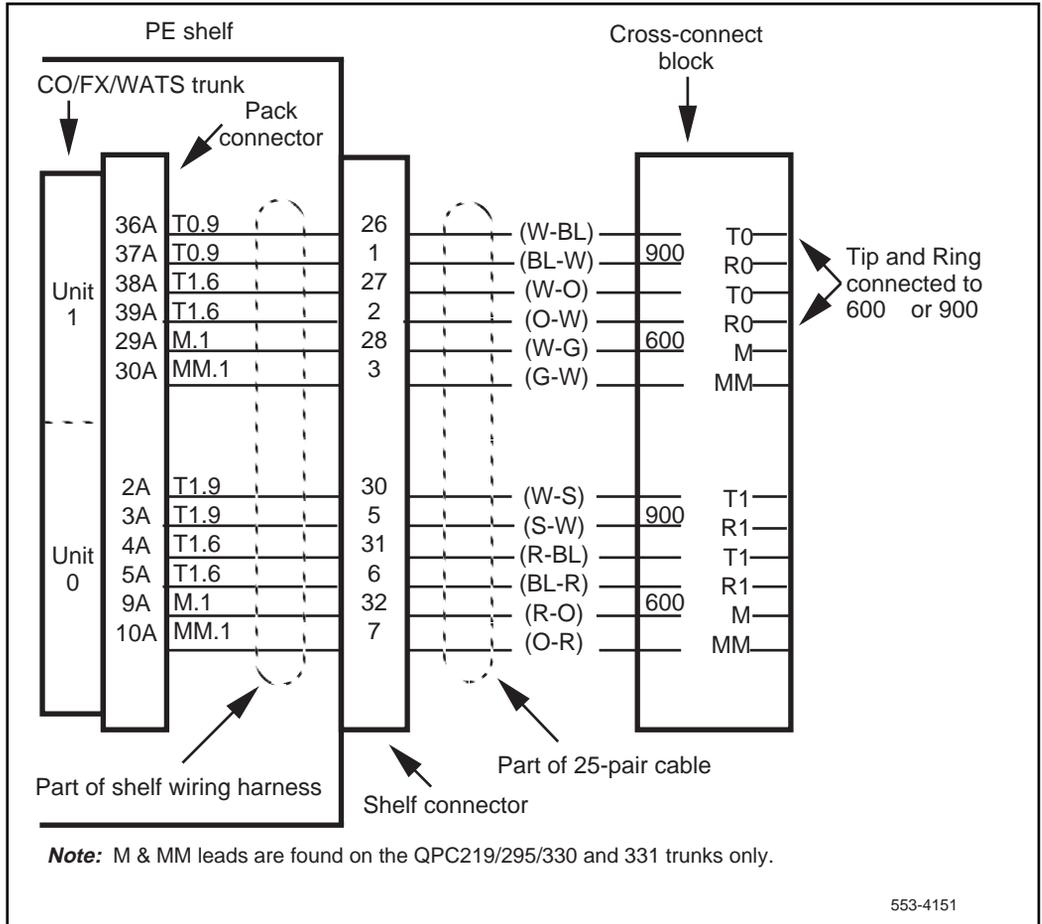

Operation

Metering is applied on a route basis. When setting up a customer for the feature, CO routes that are to be metered should only have access to routes that are metered. Calls should not be allowed to overflow to a nonmetered route. The BGD and the SL-1 or Meridian digital telephones can show the accumulated number of calls for each DN meter assigned.

Background terminal command summary

The following four MR options can be set from a BGD:

- | | |
|----------|--|
| AL1 | Value set for all Room DNs in the customer data block |
| X | Represents all possible values for a digit in a DN, so that nonsequential DN groups can all be set to the same value |
| RAngE | Sequential range of DNs can be set by entering the first and last DNs for the group |
| COncfirm | Response to the SEt command for verification |

For a complete and detailed description of all the BGD commands, refer to the *Background Terminal Facility Description*.

The general command format for the BGD appears as follows:

```
SEt OPTion <opt> ON
SEt OPTion <opt> OFF

<opt> = any combination of AL1, X, RA, and CO
```

All of the commands for the BGD/MR can be turned on or off with the following commands:

```
SEt OPTion ON
SEt OPTion OFF
```

MR commands are described in [Table 4](#). The following examples demonstrate some MR operations.

Setting room meters

When setting room meters for a group of consecutive DNs, the second DN entered must be greater than the first DN entered. The value set for each meter must be between 0 and 32766. The confirm option must be set to get a response for input commands.

Selecting a single DN

Enter the following command to set meter 1246 to a value of 9:

```
SE ME 1246 VA 9
```

If the global COnfirm command is switched on, the following response appears (if the meter had previously been switched off):

```
ME 1246 OFF TO 9
```

Enter the following command to set meter 1246 to a value of 0 (either ZERo or VAlue 0):

```
SE ME 1246 ZE or SE ME 1246 VA 0
```

Enter the following command to switch meter 1246 off:

```
SE ME 1246 OFF
```

Once a meter has been set, a series of command lines consisting of only DN and meter values can be entered as shown in [Table 3](#):

Table 3
MR commands

Command Line	Typical Response
SE ME 1246 VA 10	METER 1246 OFF TO 10
1248	METER 1248 OFF TO 10
1257 20	METER 1257 9 TO 20
1259 0	METER 1259 64 TO ZERO

This mode stays in effect until a nonnumeric entry is typed.

Note: In a list, the number 0 is used, instead of ZE.

The customer meter can be accessed using similar commands, but it cannot be turned off as other meters can. CUsomer can be added to the end of a command accessing other meters, as shown in the following sample commands:

```
SE ME CU VA 9
```

```
(PR) ME CU
```

```
(PR) ME 1200 1205 CU
```

Selecting Multiple Appearance DNs

Enter the following command to set meters 1240 to 1249 to a value 9 using the inclusive range (dn1 dn2) method:

```
SE ME 1240 1249 VA 9
```

Enter the following command to set meters 1240 to 1249 to a value of 9 using the “X substitution” method:

```
SE ME 124X VA 9
```

Enter the following command to set all meters to a value of 9:

```
SE ME AL VA 9
```

Table 4 summarizes the MR set commands.

Access to meters

Meters are accessed from a standard data terminal (TTY) or an SL-1 Display Telephone equipped with a Message Registration key/lamp pair. The TTY must be defined in the configuration record as a BGD. The BGD can be used exclusively for meter access of the two background features Automatic Wake Up (AWU) and room status information (RMS), or it can be shared with other functions:

- Erase the pulse count units stored on a meter.
- Change the pulse count units stored on a meter.
- Search for nonzero meters (TTY only).
- Read the pulse count units stored on a meter.
- Print the pulse count units stored on meters (TTY only).

Table 4
MR set commands

Command line					
(AU hhmm)	(PR)	MEter	dn	VALue	nnnnn (SEt command only)
	FInd		dn1 dn2	ZERo	
	SEt		dnX	ON	
	"port ID"		ALI	OFF	
			CUstomer		
				Display	(ON)
					OFF
				ALI	(see Note)
Note: In all conditions including zero; but not after SEt command.					

Note: Access to the customer's meter is allowed from the BGD only.

Meridian 1

Message Registration

Description and operation

© 1990,1996 Northern Telecom

All rights reserved

Information is subject to change without notice.

Northern Telecom reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules, and the radio interference regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

SL-1 and Meridian 1 are trademarks of Northern Telecom.

Publication number: 553-2701-101

Document release: Standard 4.00

Date: August 1996

Printed in the United States of America

NORTEL
NORTHERN TELECOM