




# DEFINITY<sup>®</sup> Wireless Business System 9630 Series Wireless Terminal (WT) Quick Reference

555-232-702  
Comcode 108468554  
Issue 1  
April 1999

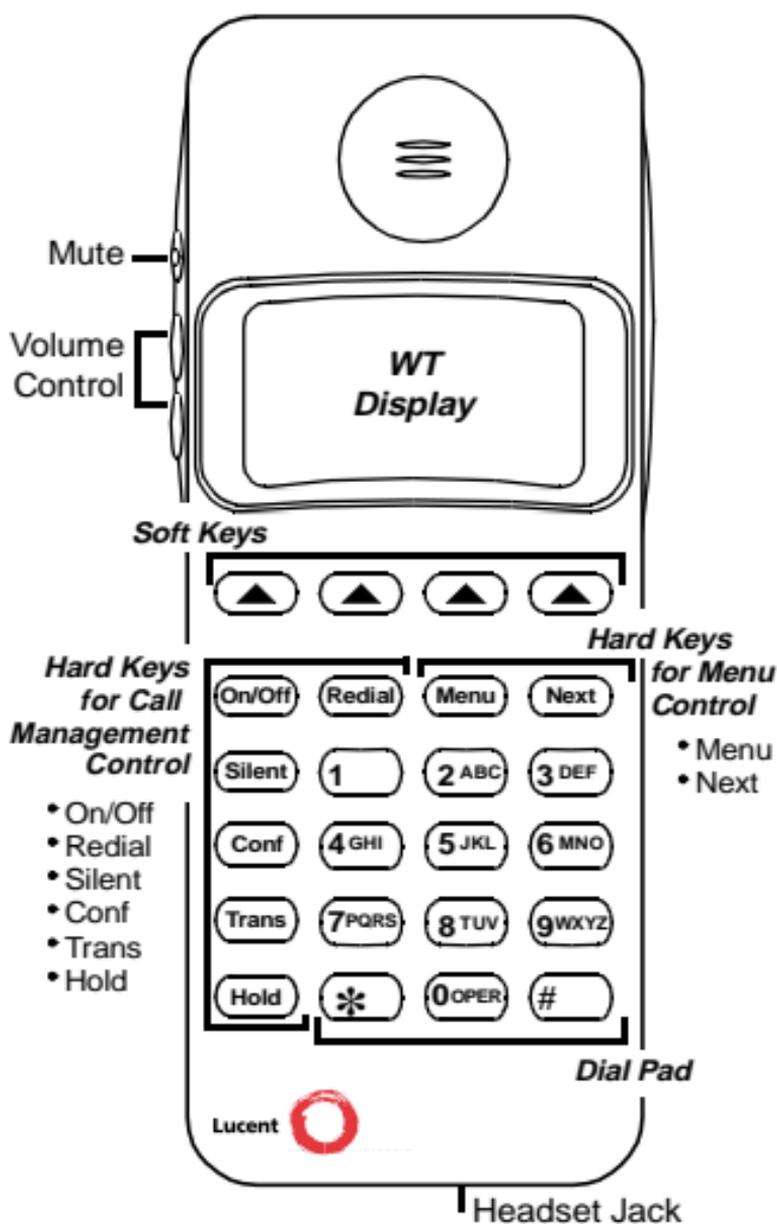

# Operating the DWBS 9630 Series Wireless Terminal

## *How To:*

- Mute the WT
  - Press **Mute** on the side of the WT while on a call.
- Unmute the WT
  1. Ensure that the mute icon is displayed.
  2. Press **Mute** (or hang up).
- Adjust the Earpiece Volume
  1. Press **On/Off** or, while on a call, press and hold either the up-volume control button or down-volume control button to get the desired volume level.
  2. Press **On/Off** to end the call.
- Adjust the Ringer and Warning/Notification Tones
  - While not on a call, press and hold either the up-volume control button or the down-volume control to get the desired volume level.
- Activate/Deactivate the Backlight
  1. From the calling screen, press **Menu**.
  2. Press **Next** twice.
  3. Press the **On** (or **Off**) soft key.
  4. Press either **Menu** or the **Exit** soft key to return to the calling screen.

- **Make a Call Using Post-Origination Dialing**
  1. Press a call appearance soft key or **On/Off**.
  2. Wait for the dial tone.
  3. Enter the telephone number of the party you are calling.
- **Make A Call Using Pre-Origination Dialing**
  1. Enter the telephone number of the party you are calling on the key pad.
  2. Press a call appearance soft key or **On/Off**.
- **Erase Digits in Pre-Origination Dialing**
  - Press the **Bksp** soft key to erase the most recent pre-origination dialing digit entered.
  - Press the **Bksp** soft key for two seconds to erase all of the pre-origination digits entered.
- **Answer a Call**
  - Press **On/Off** or the alerting call appearance when the call arrives.
- **Answering a Second Incoming Call**
  1. Listen for the tone.
  2. Press the alerting call appearance.
- **Activate/Deactivate the Vibrator**
  1. From the calling screen, press **Menu**.


2. Press the **On** (or **Off**) soft key.
  3. Press either **Menu** or the **Exit** soft key to return to the calling screen.
- **Activate/Deactivate Silent Mode to Turn the Ringer On or Off**
    - Press **Silent** for one second.
  - **Transfer a Call**
    1. While on a call, press **Trans**.
    2. Dial the telephone number of the next party.
    3. Press **Trans** to complete the transfer.
  - **Conference a Call**
    1. While on a call, press **Conf**.
    2. Dial the telephone number of the next party.
    3. Press **Conf** again to conference the two calls together.
  - **Hold a Call**
    1. Press **Hold**.
    2. Press the soft key below the flashing indicator to return to the call.
  - **End a Call**
    - Press **On/Off**.
  - **Drop a Call**
    - Press the **Drop** soft key.
  - **Redial a Call**
    - Press **Redial**.

**NOTE:** Please refer to the User Guide for more information on how to use the WT.

## Wireless Terminal Icons

Icon	Indicates .....
Message 	Message has been left in voice mail.
Battery 	Talk time and standby time that are available on the WT.
Signal Strength 	Signal strength of the WT.
Silent 	Silent Mode is activated for the WT. (Ringer and tones are turned off.)
Lock 	WT is locked.
Mute  or 	WT's microphone is muted while on an active call.
Vibrator  or 	WT's vibrator is on.
Next 	Additional features are available on the next WT screen.

## Fastening the Belt Clip

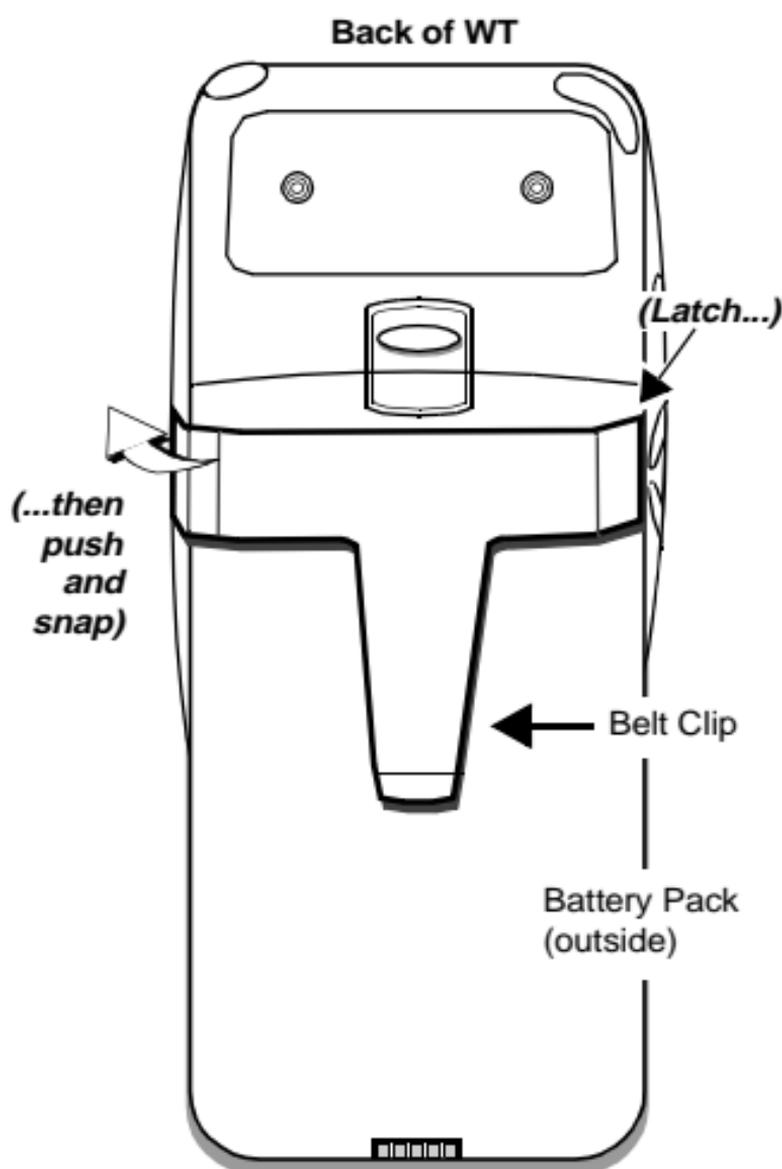


To fasten the belt clip to the WT (or battery pack), do the following:

1. Hold the WT (or battery pack) so that the back of the WT (or battery pack) is facing you.
2. Hold the belt clip so that it looks like the letter "T."
3. Latch the right edge of the belt clip into the corresponding groove on the inner side of the battery pack. (The groove is about 1/4 inch from the top of the battery pack.)

4. Push the left edge of the belt clip and snap it into the corresponding groove on the inner side of the battery pack.

## Removing the Belt Clip

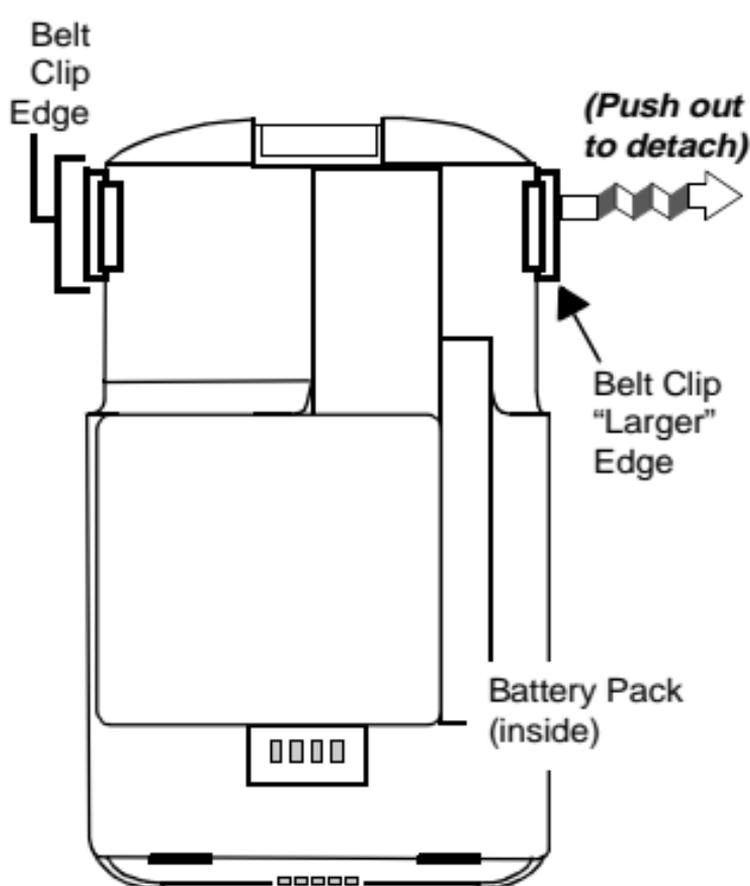

To remove the belt clip from the battery pack, do the following:

1. Remove the battery pack from the WT.
2. Hold the battery pack so that the inside of the pack is facing you.
3. Find the "larger" edge of the belt clip that is fastened to the battery pack.
4. Push the "larger" edge of the belt clip out and away from the battery pack until you free the clip from the pack.

# IMPORTANT SAFETY GUIDELINES FOR USERS



## ELECTROMAGNETIC COMPATIBILITY WARNING

For safe and efficient operation of your Wireless Business System Pocket Phone (wireless telephone), observe these guidelines. Your WT is a radio transmitter and receiver. When the battery is installed, the WT is on and it receives and also sends out radio frequency (RF) energy. The WT operates in the frequency range of 1920-1930 MHz. Your handheld WT uses the digital Time Division Multiple Access (TDMA) mode; the power is transmitted in bursts at a 100 Hz-pulsed repetition rate. The peak envelope transmit power is 100 mW or less.

### **Exposure to Radio Frequency Energy**

The design of your WT complies with the latest safety levels from the Institute of Electrical and Electronic Engineers (IEEE) and the American National Standards Institute (ANSI) with respect to human exposure to RF energy. Of course, if you would like to limit RF exposure even further, you may choose to control the duration of your calls.

Most electronic equipment, such as equipment in hospitals, is shielded from RF energy. However, RF energy from wireless telephones may affect some electronic equipment.

## **Cardiac Pacemakers**

The Health Industry Manufacturers Association recommends that a minimum separation distance of six inches be maintained between a handheld WT and a pacemaker to avoid potential interference with the pacemaker. Also, the following guidelines are recommended.

- Always keep the WT more than six inches from the pacemaker whenever the battery is in the WT.
- Do not carry the WT in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.

If you suspect that interference is taking place, take the battery out of your WT immediately.

## **Hearing Aid Compatibility**

Although the DWBS WT is compatible with inductively coupled hearing aids, you should consult your physician or hearing aid manufacturer to determine if your hearing aid is adequately shielded from external RF energy. The operation of inadequately shielded medical devices may be adversely affected when a portable WT is operating in close proximity.

Prepared by  
GLS Information Development Organization  
Lucent Technologies  
Middletown, NJ 07748-9972



**Lucent Technologies**  
Bell Labs Innovations