

**Lucent Technologies**  
Bell Labs Innovations



**DEFINITY<sup>®</sup>**  
**Enterprise Communications Server**  
Release 7  
Administration for Network Connectivity

555-233-501  
Comcode 108343088  
Issue 1  
June 1999

## Notice

Every effort was made to ensure that the information in this book was complete and accurate at the time of printing. However, information is subject to change.

## Your Responsibility for Your System's Security

Toll fraud is the unauthorized use of your telecommunications system by an unauthorized party, for example, persons other than your company's employees, agents, subcontractors, or persons working on your company's behalf. Note that there may be a risk of toll fraud associated with your telecommunications system and, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

You and your system manager are responsible for the security of your system, such as programming and configuring your equipment to prevent unauthorized use. The system manager is also responsible for reading all installation, instruction, and system administration documents provided with this product in order to fully understand the features that can introduce risk of toll fraud and the steps that can be taken to reduce that risk. Lucent Technologies does not warrant that this product is immune from or will prevent unauthorized use of common-carrier telecommunication services or facilities accessed through or connected to it. Lucent Technologies will not be responsible for any charges that result from such unauthorized use.

## Lucent Technologies Fraud Intervention

If you *suspect that you are being victimized* by toll fraud and you need technical support or assistance, call Technical Service Center Toll Fraud Intervention Hotline at 1 800 643-2353.

## Federal Communications Commission Statement

**Part 15: Class A Statement.** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

**Part 68: Network Registration Number.** This equipment is registered with the FCC in accordance with Part 68 of the FCC Rules. It is identified by FCC registration number AS593M-13283-MF-E.

**Part 68: Answer-Supervision Signaling.** Allowing this equipment to be operated in a manner that does not provide proper answer-supervision signaling is in violation of Part 68 Rules. This equipment returns answer-supervision signals to the public switched network when:

- Answered by the called station
- Answered by the attendant
- Routed to a recorded announcement that can be administered by the CPE user

This equipment returns answer-supervision signals on all DID calls forwarded back to the public switched telephone network. Permissible exceptions are:

- A call is unanswered
- A busy tone is received
- A reorder tone is received

noise emissions set out in the radio interference regulations of the Canadian Department of Communications.

Le Présent Appareil Numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le reglement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

## Trademarks

See the preface of this document.

## Ordering Information

**Call:** Lucent Technologies BCS Publications Center  
Voice 1 800 457-1235 International Voice 317 322-6416  
Fax 1 800 457-1764 International Fax 317 322-6699

**Write:** Lucent Technologies BCS Publications Center  
2855 N. Franklin Road  
Indianapolis, IN 46219

**Order:** Document No. 555-233-501  
Comcode 108343088  
Issue 1, June 1999

For additional documents, refer to the section in "About This Document" entitled "Related Resources."

You can be placed on a standing order list for this and other documents you may need. Standing order will enable you to automatically receive updated versions of individual documents or document sets, billed to account information that you provide. For more information on standing orders, or to be put on a list to receive future issues of this document, contact the Lucent Technologies Publications Center.

## European Union Declaration of Conformity

The "CE" mark affixed to the DEFINITY® equipment described in this book indicates that the equipment conforms to the following European Union (EU) Directives:

- Electromagnetic Compatibility (89/336/EEC)
- Low Voltage (73/23/EEC)
- Telecommunications Terminal Equipment (TTE) i-CTR3 BRI and i-CTR4 PRI

For more information on standards compliance, contact your local distributor.

## Comments

To comment on this document, return the comment card at the front of the document.

## Acknowledgment

This document was prepared by Product Documentation Development, Lucent Technologies, Denver, CO.

# Contents

<b>Preface</b>	<b>xi</b>
Purpose . . . . .	xi
Audience . . . . .	xi
Issue Status . . . . .	xi
Organization . . . . .	xii
Terminology . . . . .	xiii
How to access this book from the web . . . . .	xiii
How to order more copies . . . . .	xiv
Tell us what you think . . . . .	xiv
How to Order Books . . . . .	xiv
How to Comment on This Book . . . . .	xv
Where to Call for Technical Support . . . . .	xv
Trademarks . . . . .	xv
<b>1 Networking Overview</b>	<b>1</b>
DEFINITY Switch Connectivity . . . . .	1
NOTE about “node” . . . . .	1
Connectivity Overview . . . . .	1
R7 Hardware Requirements . . . . .	6
R7 Administration . . . . .	8
Intuity AUDIX LAN Setup Summary . . . . .	11
CMS LAN Setup Summary . . . . .	11
When to use IP routes . . . . .	12
DEFINITY Connection types and capacities . . . . .	19
IP Addressing . . . . .	21
Physical Addressing . . . . .	21
Logical Addressing . . . . .	21
Subnetting . . . . .	23
References . . . . .	29
Standards Organizations . . . . .	29
RFCs . . . . .	30
<b>2 DCS Administration</b>	<b>31</b>
Overview . . . . .	31
Organization of this chapter . . . . .	32
Supported Switches and Adjuncts . . . . .	33
Checklist for Prerequisite Administration . . . . .	34
Configurations . . . . .	37
Configuration 1: R7r <—ppp—> R7si . . . . .	38
Task Summary . . . . .	38

Prerequisite Administration . . . . .	38
Switch 1 Task — Assign Node Names . . . . .	40
Switch 1 Task — Assign Link via ppp Data Module to Switch 2 . . . . .	41
Switch 1 Task — Assign Processor Channels . . . . .	43
Switch 2 Task — Assign Node Names . . . . .	45
Switch 2 Task — Assign Link via ppp Data Module to Switch 1 . . . . .	46
Switch 2 Task — Assign Processor Channels . . . . .	48
Enable links and processor channels . . . . .	50
Configuration 2: R7r (+ CMS) <—ethernet—> R7csi . . . . .	51
Task Summary . . . . .	51
Prerequisite Administration . . . . .	52
Switch 1 Task — Assign Node Names . . . . .	54
Switch 1 Task — Assign Link via ethernet Data Module to the LAN . . . . .	55
Switch 1 Task — Assign IP Route (to the router) . . . . .	57
Switch 1 Task — Assign IP Route (to Switch 2) . . . . .	58
Switch 1 Task — Assign Processor Channels . . . . .	59
Switch 2 Task — Enable Bus Bridge Connectivity . . . . .	61
Switch 2 Task — Assign Node Names . . . . .	62
Switch 2 Task— Assign Link via ethernet Data Module to the LAN . . . . .	63
Switch 2 Task — Assign IP Route (to the router) . . . . .	65
Switch 2 Task — Assign IP Route (to Switch 1) . . . . .	66
Switch 2 Task — Assign IP Route (to the CMS) . . . . .	67
Switch 2 Task— Assign Processor Channels . . . . .	68
Enable links and processor channels. . . . .	70
Configuration 3: R7si<—x.25 —> R7r Gateway <—ethernet—> R7si . . . . .	71
Task Summary . . . . .	71
Prerequisite Administration . . . . .	72
Switch 1 Task — Assign Node Names . . . . .	74
Switch 1 Task — Assign pdm Data Module . . . . .	75
Switch 1 Task — Assign Link via x.25 Data Module to Switch 2 . . . . .	77
Switch 1 Task — Assign Link via ethernet Data Module to the LAN . . . . .	79
Switch 1 Task — Assign Processor Channels . . . . .	81
Switch 2 Task — Assign Link via procr-intf Data Module to Switch 1 . . . . .	84
Switch 2 Task — Assign Processor Channels . . . . .	86
Switch 3 Task — Assign Node Names . . . . .	88
Switch 3 Task — Assign Link via ethernet Data Module to the LAN . . . . .	89
Switch 3 Task — Assign Processor Channels . . . . .	91
Enable links and processor channels. . . . .	93
Configuration 4: R7csi <—ISDN—> R7si Gateway <—ppp—> R7csi . . . . .	94
Task Summary . . . . .	94
Prerequisite Administration . . . . .	95
Switch 1 Task — Assign Node Names . . . . .	97
Switch 1 Task — Assign Link via ppp Data Module to Switch 3 . . . . .	98
Switch 1 Task — Assign Processor Channels . . . . .	100
Switch 1 Task — Assign Signaling Group and administered NCA TSC . . . . .	102
Switch 1 Task — Assign ISDN-TSC Gateway . . . . .	105
Switch 2 Task — Assign Signaling Group and administered NCA TSC . . . . .	106
Switch 3 Task — Enable Bus Bridge Connectivity . . . . .	109
Switch 3 Task — Assign Node Names . . . . .	110

Switch 3 Task — Assign Link via ppp Data Module to Switch 1 . . . . .	111
Switch 3 Task — Assign Processor Channels . . . . .	113
Enable links and processor channels . . . . .	115
Configuration 5A: R7csi <—ppp—> R7r (one C-LAN) <—ethernet—> R7si . . . . .	116
Task Summary . . . . .	116
Prerequisite Administration . . . . .	117
Switch 1 Task — Assign Node Names . . . . .	119
Switch 1 Task — Assign Link via ppp Data Module to Switch 2 . . . . .	120
Switch 1 Task — Assign Link via ethernet Data Module to Ethernet . . . . .	122
Switch 1 Task — Assign Processor Channels . . . . .	124
Switch 1 Task — Assign IP Route to node-3 . . . . .	126
Switch 2 Task — Enable Bus Bridge Connectivity . . . . .	127
Switch 2 Task — Assign Node Names . . . . .	128
Switch 2 Task — Assign Link via ppp Data Module to Switch 1 . . . . .	129
Switch 2 Task — Assign Processor Channels . . . . .	131
Switch 2 Task — Assign IP Route to node-3 . . . . .	133
Switch 3 Task — Assign Node Names . . . . .	134
Switch 3 Task — Assign Link via ethernet Data Module to the LAN . . . . .	135
Switch 3 Task — Assign Processor Channels . . . . .	137
Switch 3 Task — Assign IP Route to node-2 . . . . .	139
Enable links and processor channels . . . . .	140
Configuration 5B: R7csi <—ppp—> R7r (2 C-LANs) <—ethernet—> R7si . . . . .	141
Task Summary . . . . .	141
Prerequisite Administration . . . . .	142
Switch 1 Task — Assign Node Names . . . . .	144
Switch 1 Task — Assign Link via ppp Data Module to Switch 2 . . . . .	145
Switch 1 Task — Assign Link via ethernet Data Module to the LAN . . . . .	147
Switch 1 Task — Assign Link via ppp Data Module to C-LAN(a) . . . . .	149
Switch 1 Task — Assign Link via ppp Data Module to C-LAN(b) . . . . .	151
Switch 1 Task — Assign Processor Channels . . . . .	153
Switch 1 Task — Assign IP Route: C-LAN(a) to node-3 . . . . .	155
Switch 1 Task — Assign IP Route: C-LAN(b) to node-3 . . . . .	156
Switch 1 Task — Assign IP Route: C-LAN(b) to node-2 . . . . .	157
Switch 2 Task — Enable Bus Bridge Connectivity . . . . .	158
Switch 2 Task — Assign Node Names . . . . .	159
Switch 2 Task — Assign Link via ppp Data Module to Switch 1 . . . . .	160
Switch 2 Task — Assign Processor Channels . . . . .	162
Switch 2 Task — Assign IP Route to node-3 . . . . .	164
Switch 3 Task — Assign Node Names . . . . .	165
Switch 3 Task — Assign Link via ethernet Data Module to the LAN . . . . .	166
Switch 3 Task — Assign Processor Channels . . . . .	168
Switch 3 Task — Assign IP Route to node-2 . . . . .	170
Enable links and processor channels . . . . .	171

### 3 Networking Example 173

Overview . . . . .	173
Network Diagram . . . . .	174
Task Summary . . . . .	175

Link/Channel/TSC Map . . . . .	176
Network Map . . . . .	177
Switch-Node 1 Administration . . . . .	178
DS1 Circuit Packs . . . . .	178
Dial Plan . . . . .	179
Signaling Group . . . . .	180
Synchronization Plan . . . . .	180
Trunk Groups . . . . .	181
Uniform Dialing Plan . . . . .	186
AAR Digit Analysis . . . . .	186
ISDN TSC Gateway Channel Assignment . . . . .	187
Routing Patterns . . . . .	187
Node Names . . . . .	188
Data Modules . . . . .	189
Processor Channel Assignments . . . . .	191
IP Routing . . . . .	192
Switch-Node 2 Administration . . . . .	193
DS1 Circuit Packs . . . . .	193
Dial Plan . . . . .	193
Synchronization Plan . . . . .	194
Trunk Goups . . . . .	194
Uniform Dialing Paln . . . . .	195
AAR Digit Analysis . . . . .	196
Routing Patterns . . . . .	196
Data Modules . . . . .	196
Processor Channel Assignments . . . . .	197
Hunt Group . . . . .	197
Switch-Node 3 Administration . . . . .	199
DS1 Circuit Packs . . . . .	199
Dial Plan . . . . .	199
Synchronization Plan . . . . .	200
Signaling Group . . . . .	200
Trunk Groups . . . . .	201
Uniform Dialing Paln . . . . .	202
AAR Digit Analysis . . . . .	202
Routing Patterns . . . . .	203
Hunt Group . . . . .	203
Switch-Node 4 Administration . . . . .	204
Bus Bridge . . . . .	204
DS1 Circuit Packs . . . . .	204
Dial Plan . . . . .	205
Synchronization Plan . . . . .	205
Trunk Groups . . . . .	206
Uniform Dialing Paln . . . . .	208
AAR Digit Analysis . . . . .	208
Routing Patterns . . . . .	208
Node Names . . . . .	209
Data Modules . . . . .	209

Processor Channel Assignments . . . . .	210
IP Routing . . . . .	211
IP Routing . . . . .	211
Hunt Group . . . . .	211
Intuity Translations for DCS AUDIX . . . . .	213
CMS Administration . . . . .	213

## **Appendix A: Screens Reference** **215**

Networking Screens. . . . .	215
Other DEFINITY Screens . . . . .	215
Screens for TCP/IP Connections . . . . .	216
Node Names . . . . .	216
page 1 . . . . .	216
Pages 2 – 6 . . . . .	217
Data Module Screens . . . . .	218
Common Data Module Fields . . . . .	218
Data Module — Type <i>ppp</i> . . . . .	225
Data Module — Type <i>ethernet</i> . . . . .	227
Data Module — Type <i>procr-intf</i> (used for BX.25 connections with the <i>si</i> model) . . . . .	230
Data Module - type <i>X.25</i> (used for BX.25 connections with the <i>r</i> model) . . . . .	233
Data Module - type <i>pdm</i> (used for BX.25 connections with the <i>r</i> model) . . . . .	236
Communication-Interface Processor Channel . . . . .	237
IP Routing . . . . .	241
Screens for Prerequisite Administration . . . . .	244
Signaling Group . . . . .	244
ISDN TSC Gateway Channel Assignments . . . . .	251
Node Number Routing . . . . .	252
Uniform Dial Plan . . . . .	253
Hop Channel Assignments Screen . . . . .	256
Circuit Packs . . . . .	257
Implementation notes . . . . .	260
Synchronization Plan . . . . .	260
Pages 1–X of the screen . . . . .	261
Communication Interface Links . . . . .	262
Other DEFINITY Screens . . . . .	265
Data Module - type <i>netcon</i> . . . . .	265
Data Module - type <i>analog-dm</i> . . . . .	267
Extended Trunk Access Call Screening. . . . .	268
Extension Number Portability Numbering Plan . . . . .	269
Message Waiting Indication Subscriber Number Prefixes . . . . .	270

## **Appendix B: Private Networking** **271**

Distributed Communications System . . . . .	271
Description of DCS . . . . .	271
DCS Features. . . . .	272
Italian DCS Protocol . . . . .	278
ISDN/X.25 gateway . . . . .	279
DCS Over ISDN-PRI D-channel . . . . .	279

DCS feature considerations . . . . .	282
DCS Interactions . . . . .	283
Example DCS configurations . . . . .	288
Centralized Attendant Service . . . . .	296
Extended Trunk Access. . . . .	302
Extension Number Portability . . . . .	304
Inter-PBX Attendant Service . . . . .	305
ISDN Feature Plus . . . . .	306
Private Network Access . . . . .	310
Uniform Dial Plan . . . . .	312
<b>QSIG . . . . .</b>	<b>317</b>
QSIG Basic Call Setup . . . . .	317
QSIG Basic Supplementary Services. . . . .	317
Supplementary Services with Rerouting . . . . .	322
VALU Called/Busy Number . . . . .	323
QSIG Protocols . . . . .	323
Temporary Signaling Connection (TSCs). . . . .	323
Setting Up QSIG . . . . .	325
QSIG Interactions. . . . .	329
<b>Appendix C: Security Issues . . . . .</b>	<b>337</b>
Network Security Issues . . . . .	337
Overview . . . . .	337
<b>Appendix D: Capacities Issues . . . . .</b>	<b>341</b>
Capacities and Performance . . . . .	341
C-LAN Circuit Pack . . . . .	341
<b>Appendix E: C-LAN Installation . . . . .</b>	<b>343</b>
Overview . . . . .	343
Install the C-LAN Circuit Pack . . . . .	343
Other Hardware Upgrades . . . . .	346
<b>Appendix F: IP Trunk Installation and Administration . . . . .</b>	<b>347</b>
DCS over IP Trunk . . . . .	347
IP Trunk Installation . . . . .	348
Preparation checklist . . . . .	348
Install an interface . . . . .	350
Install the TN802 IP Trunk circuit pack . . . . .	350
External connections . . . . .	351
Administer the software. . . . .	352
Acceptance testing . . . . .	355
IP Trunk Administration . . . . .	357
Administration overview . . . . .	357
Plan call routing. . . . .	357
DEFINITY administration procedures . . . . .	359
NT administration procedures . . . . .	363

Procedures for Extension Dialing Between Sites . . . . .	370
Non-DCS Configuration . . . . .	370
DCS or Dedicated Trunks to Specific Locations Configurations . . . . .	372
<b>Appendix G: References</b>	<b>377</b>
Administration . . . . .	377
Installation and maintenance . . . . .	379
Intuity documents . . . . .	380
Call center documents . . . . .	380
Application-specific documents . . . . .	381
Non-U.S. audiences. . . . .	383
<b>Glossary</b>	<b>385</b>
<b>Index</b>	<b>411</b>





This book describes how to administer connections between DEFINITY<sup>®</sup> ECS switches (csi, si, and r models) for DCS messaging. The main focus is on TCP/IP connectivity introduced with DEFINITY Release 7.1.

---

## Purpose

This document is designed to provide the information needed to understand and administer the connections between DEFINITY ECS systems in a network using TCP/IP (PPP or Ethernet) connections for DCS signaling.

This document does not cover the installation or upgrade procedures for establishing physical connectivity. This information is contained in the upgrades and installation documents listed in the References section.

This document does not cover installation, upgrade, or administration procedures for connecting the CMS and Intuity AUDIX adjuncts to a DEFINITY ECS. This information is contained in the separate adjunct documents listed in Appendix G.

## Audience


This document is intended for anyone involved in planning, designing, or administering DEFINITY ECS systems as part of DCS networks using TCP/IP connectivity. It is expected that this will include Lucent Design Engineers, Design Specialists, Software Specialists, Software Associates, and Services personnel as well as customer system administrators.

## Issue Status

This document is new for DEFINITY ECS Release 7. It was created to describe the new TCP/IP switch connectivity made available with this release.

# Organization

This document is organized into three chapters and eight appendixes. Chapter 2 gives the essential information needed to administer network connections. The other chapters and appendixes provide supporting information for Chapter 2.

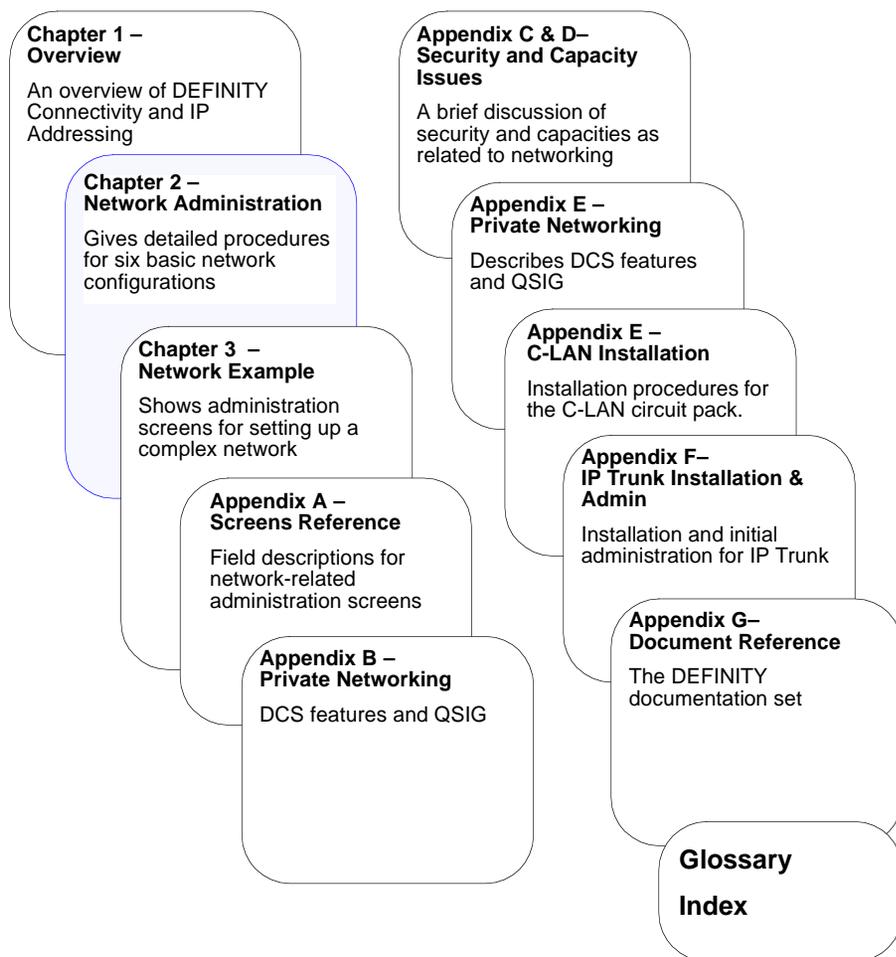

## Terminology

The terms *form*, *screen* and *node* are used in this book with somewhat different meanings than in previous documents.

### Screen

The term “screen” is used in this book to mean what used to be called “form” — the set of switch-administration interface pictures that contain the fields that hold the switch-translations values. For example, the “Data Module screen.” Each screen can have one or more pages.

In some parts of this book, the terms “screen” and “form” are used interchangeably.

### Node

The term “node” has two meanings for DEFINITY ECS switches connected in a network. In a DCS network, *node* means a switch or adjunct. This is how the term is used on the Dial Plan screen for the field name, “Local Node Number.”

With TCP/IP connectivity, *node* has a different meaning — it refers to an interface to a network. For example, each of the 17 ports on the C-LAN board is a node in this sense. This is how the term is used on the Node Names, Data Module, Processor Channel, and IP Routing screens. This is also the common usage in a data networking environment. With these definitions, a “DCS node” (a switch) can have many “IP nodes,” (network interfaces).

In this book, *node* is used in the second sense, as a network interface. A “DCS node” is referred to as a *switch* or, in Chapter 3, as a *switch node*.

## How to access this book from the web

If you have internet access, you can view and download the latest version of *DEFINITY ECS Administration for Network Connectivity*. To view the book, you must have a copy of Adobe Acrobat Reader ([www.adobe.com](http://www.adobe.com)).

To access the latest version:

- 1 Access the Customer Self-Service Center web site at <http://www.lucent.com/enterprise/selfservice>
- 2 Click **Information Resources**.
- 3 Click **ELMO**
- 4 Enter your IL to access the library.
- 5 Enter **555-233-501** (the document number) to view the latest version of the book.

To access this book from within the Lucent intranet, go to [www.prodpubs.lucent.com](http://www.prodpubs.lucent.com).

## How to order more copies

Call: Lucent Technologies Publications Center  
Voice 1-800-457-1235  
Fax 1-800-457-1764  
International Voice 317-322-6416  
International Fax 317-322-6699

Write: Lucent Technologies Publications Center  
2855 N. Franklin Road, Indianapolis, IN 46219

Order: Document No. 555-233-501  
Comcode 108343088, Issue 1, June 1999

We can place you on a standing order list so that you will automatically receive updated versions of this book. For more information on standing orders, or to be put on a list to receive future issues of this book, please contact the Lucent Technologies Publications Center.

## Tell us what you think

Let us know what you like or don't like about this book. Although we can't respond personally to all your feedback, we promise we will read each response we receive. You can use the comment card at the back of the book or send us your feedback in your own format.

Write to us at: Lucent Technologies  
Product Documentation Group  
Room 22-2H15  
11900 North Pecos Street  
Denver, CO 80234 USA

Fax to: 303-538-1741

Send email to: [document@drmail.lucent.com](mailto:document@drmail.lucent.com)

## How to Order Books

In addition to this book, other description, installation and test, maintenance, and administration books are available. A complete list of DEFINITY books can be found in the *Business Communications System Publications Catalog*, 555-000-010.

This book and any other DEFINITY books can be ordered directly from the Lucent Technologies Business Communications System Publications Fulfillment Center at 1-317-322-6791 or toll free at 1-800-457-1235.

## How to Comment on This Book

Lucent Technologies welcomes your feedback. Please fill out the reader comment card found at the front of this manual and return it. Your comments are of great value and help improve our documentation.

If the reader comment card is missing, FAX your comments to 1-303-538-1741 or to your Lucent Technologies representative, and mention this book's name and number, *DEFINITY ECS Administration for Network Connectivity*, 555-233-501.

## Where to Call for Technical Support

Use the telephone numbers in the following table for technical support.

	Telephone Number
Streamlined Implementation (for missing equipment)	1-800-772-5409
USA/Canada Technical Service Center	1-800-248-1234
Technical Service Center (INADS Database Administration)	1-800-248-1111
Asia/Pacific Regional Support Center	65-872-8686
Western Europe/South Africa/Middle East	441-252-774-800
Business Communications Europe	441-252-391-789
Eastern/Central Europe	361-345-4334
International Technical Assistance Center (ITAC)	1-303-804-3777
Latin/Central America & Caribbean	1-303-804-3778
DEFINITY Helpline	1-800-225-7585
Lucent Technologies Toll Fraud Intervention	1-800-643-2353
Lucent Technologies Technical Service Center	1-800-242-2121
Lucent Technologies Corporate Security	1-800-822-9009

## Trademarks

The following are trademarks or registered trademarks of Lucent Technologies:

- 5ESS™, 4ESS™
- AUDIX®
- Callvisor®
- Callmaster®
- CentreVu™
- CONVERSANT®

- DEFINITY<sup>®</sup>
- DIMENSION<sup>®</sup>
- INTUITY<sup>™</sup>
- MERLIN<sup>®</sup>
- VOICE POWER<sup>®</sup>

The following are trademarks or registered trademarks of AT&T:

- ACCUNET<sup>®</sup>
- DATAPHONE<sup>®</sup>
- MEGACOM<sup>®</sup>
- MULTIQUEST<sup>®</sup>
- TELESEER<sup>®</sup>

The following are trademarks or registered trademarks of other companies:

- Acrobat<sup>®</sup> is a registered trademark of Adobe Systems Incorporated
- MS-DOS<sup>®</sup> (registered trademark of the Microsoft Corporation)
- MULTIQUEST<sup>®</sup> (registered trademark of Telecommunications Service)
- ProShare<sup>®</sup> (registered trademark of Intel Corporation)
- UNIX<sup>®</sup> (trademark of the Novell Corporation)

# 1 Networking Overview

This chapter provides background information that will help you understand and use the information in the remainder of the book. There are two major sections in this chapter. The first section describes how DEFINITY ECS switches can be connected, with a focus on TCP/IP connectivity for DCS networking. The second section describes IP addressing and subnetting, which is used for TCP/IP connectivity starting with DEFINITY ECS Release 7.

---

## DEFINITY Switch Connectivity

This section describes the basic components of a DCS network and how voice and signaling data are transmitted between switches for the different types of switch connections. It also provides a summary of the administration procedures for connecting switches via TCP/IP.

### NOTE about “node”

The term “node” has two meanings for DEFINITY ECS switches connected in a network. In a DCS network, node means a switch or adjunct. This is how the term is used on the Dial Plan screen for the field name, “Local Node Number.”

With TCP/IP connectivity, node has a different meaning — it refers to an interface to a network. For example, each of the 17 ports on the C-LAN board is a node in this sense. This is how the term is used on the Node Names, Data Module, Processor Channel, and IP Routing screens. This is also the common usage in a data networking environment. With these definitions, a “DCS node” (a switch) can have many “IP nodes,” (network interfaces).

In this book, node is used in the second sense, as a network interface. A “DCS node” is referred to as a switch or, in Chapter 3, as a switch node.

## Connectivity Overview

**Why connect switches?** DEFINITY switches can be connected in various ways for various reasons. The main motivation for connecting switches is to enable people within an enterprise to easily communicate with one another, regardless of their physical location or the particular communications server they are assigned to. Inter-switch connections also enable the sharing of communications resources such as messaging and Call Center services.

### What kinds of connections are possible?

#### Trunks

Switches communicate with each other over *trunk* connections. There are several kinds of trunks — each kind provides a different set of services for the connection. Commonly used trunk types are (Central Office) *CO trunks*, which provide connections to the public telephone network through a central office, and *Tie trunks*, which provide connections between switches in a private network.

These and other common trunk types are described in *DEFINITY ECS Administrator's Guide*, 555-233-502.

DEFINITY ECS Release 7 introduces the Internet Protocol (IP) trunk, which allows voice and fax data to be transmitted over the Internet to another DEFINITY with IP Trunk capability or to Lucent's Internet Telephony Server-Enterprise (ITS-E).

## Networks

When two or more switches are connected via tie trunks, they form a private network. There are two basic types of networks for Lucent switches:

- Main-satellite/tributary (MS/T) — A network of switches in which a *main* switch is fully functional and provides attendants and CO trunks for connected *satellite* switches. *Tributary* switches are connected to the main and may have their own attendant and CO trunks. The main switch may be connected to one or more Electronic tandem networks (ETNs).
- Electronic tandem network (ETN) — A wide-area network of switches in which a call can tandem through one or more switches on its way from the originating switch to the destination switch. ETNs have a uniform numbering plan (UNP), automatic alternate routing (AAR), and automatic route selection (ARS).

For example, AT&T provides a service called *software-defined network* (SDN) that allows you to build a private network through the AT&T public network facilities. An ETN can be combined with an SDN to form a hybrid (ETN/SDN) network.

The switches in MS/T or ETN networks need to be provisioned with special networking software packages.

## DCS

Distributed communications system (DCS) is a messaging overlay for ETN or MS/T networks. The overlay provides signaling connections between network nodes that enable certain call features to operate transparently across the network. That is, the transparent features appear to operate as if the switches in the DCS network were a single switch. For example, the DCS Call Coverage feature enables calls to an extension on one switch to be covered by extensions on a remote switch in the network.

Switches in a DCS network require special DCS software in addition to the ETN or MS/T software packages.

Although DCS is actually a messaging overlay for an existing network, it is commonly thought of as a type of network itself. In this document, we will refer to DCS in this way — *DCS network* will refer to a cluster of switches that are part of an existing ETN or MS/T network and are also administered for DCS.

In addition to the normal tie-trunk connections for the transmission of voice and call-control data, DCS requires a special signaling connection to carry the information needed to make the DCS features work. This signaling connection, or link, between two switches in a DCS network can be implemented in one of three ways:

- over a processor interface (PI) channel (on the si model) or a packet gateway (PGATE) channel (r model) using the X.25 protocol

- over an ISDN-PRI D-channel (csi, si, or r models)
- over a TCP/IP (either PPP or 10Base-T Ethernet) connection (csi, si, or r models)

**Note:** The csi model does not support X.25 connections.

The TCP/IP signaling connections are new with DEFINITY Release 7. Starting with R7, X.25 will no longer be sold with new systems. New systems will ship with only TCP/IP connections or ISDN-PRI for DCS signaling. However, existing systems with X.25 and/or ISDN-PRI DCS signaling can be upgraded to R7 and keep those signaling links, or a new R7 system can be added to an existing DCS network. Connections to the CMS Call Center and Intuity AUDIX adjuncts can use either X.25 or 10Base-T DCS signaling.

When a DCS network uses a mixture of two or three of the different DCS signaling types, one or more switches in the network must act as a *gateway*. A gateway switch is connected between two switches using different signaling protocols and the gateway enables the two end switches to communicate by converting the signaling messages between the two protocols. A gateway switch can provide conversion between two or all three of the signaling protocols, but only one protocol can be used for DCS signaling between any two switches.

### What is transmitted between connected switches?

A telephone call consists of voice (bearer) data and call-signaling data. If the call is over a DCS network, DCS signaling data is also required. The DCS signaling data is sent over a separate path from the voice and call-signaling data.

#### Call-signaling data

The call-signaling data includes messages necessary to set up the call connection, maintain the connection during the call, and remove the connection when the call is finished.


#### DCS-signaling data

The DCS-signaling data is separate from the call-signaling data. How it gets transmitted depends on the connection type, which determines the type of signaling protocol used.

### How does the data move between switches?

**Figure 1** shows some of the major components of switch connections. Before R7, a call from switch 1 to switch 2, which consists of voice and signaling data, is sent through a trunk circuit pack across a TDM transmission facilities to a trunk circuit pack in switch 2. Release 7 adds alternate pathways for the call data. The C-LAN circuit pack enables signaling data to be packetized and sent over a LAN, WAN, or the Internet. The IP Trunk circuit pack enables voice data and non-DCS signaling data to be sent over a IP facilities.

Figure 1. Components of Switch Connectivity

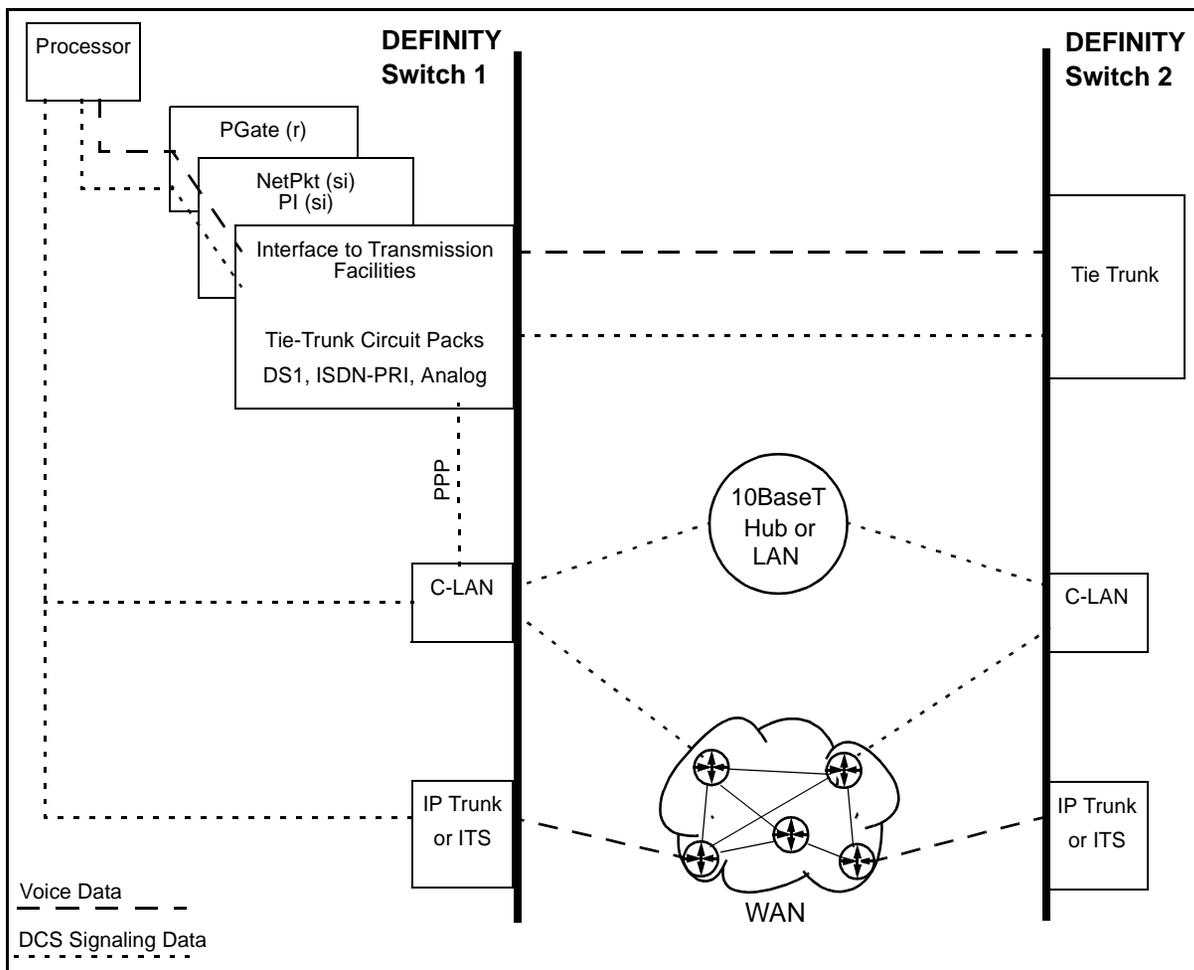

### What do the components do?

The function of each circuit pack shown in [Figure 1](#) is described below.

#### Processor

The processor board is the main control element in handling the call. This is the UN332B for the r model, the TN 790B for the si model, and the TN798B for the csi model.

#### PGATE (r only)

On the r model, the PGATE board (TN577) connects the processor to the packet bus and terminates X.25 signaling.

#### NetPkt (si only)

The Network control/Packet Interface (NetPkt) board (TN794) replaces the NETCON (TN777B) and the PACCON (TN778) circuit packs in the R7si model. It also replaces the LAPD portion of the PI (TN765) circuit pack.

### C-LAN

The C-LAN circuit pack (TN802) enables signaling data — for DCS networking or for connections to adjuncts — to be transmitted via the TCP/IP protocols across a LAN or WAN.

The C-LAN circuit pack (TN799) provides the data link interface between the switch processor and the transmission facilities. C-LAN prepares the signaling information for TCP/IP transmission over one of two pathways — either via an Ethernet LAN or a point to point protocol (PPP) connection — depending on how the data link is administered. If the link is administered for an ethernet connection, the signaling data is sent out on a 10Base-T network, which is connected directly to the C-LAN ethernet port. If the link is administered for a PPP connection, C-LAN inserts the signaling data on the TDM bus for subsequent inclusion (via the switching fabric) in the same DS1 bit stream as the voice transmissions.

The C-LAN board can be inserted in any available port slot. Up to two C-LAN boards can be used in any of the three DEFINITY ECS R7 models — csi, si, or r. Each C-LAN board has 17 ports; port 17 is used for the LAN interface and the other 16 can be used for PPP connections.

### IP-Trunk

The IP Trunk circuit pack (TN802) enables two switches to transmit voice data between them across the Internet. In a DCS network, DCS signaling data, which is on a separate path from the voice data, can use either TCP/IP or X.25 protocols.

### Tie-Trunk Circuit Packs

The tie-trunk circuit packs provide an interface between the switch and the transmission facilities for voice data, call-signaling data and data. See *System Description*, 555-230-211 for descriptions of tie-trunk (and other) circuit packs.

## Pre-R7 circuit packs

### PI (si only)

The PRI functionality of the Processor Interface (PI) board (TN765) is replaced by the NetPkt board (TN794) in R7. The PI board will no longer be shipped with new systems starting with R7. The PI board is needed in switches upgraded to R7 and later releases only if existing X.25 connections are retained. The PI board has 4 data links that can connect to DS1 tie trunks over the TDM bus for interface to DCS or ISDN applications. The PI board terminates BX.25 and ISDN-PRI link access procedure on the D-Channel (LAPD).

### NETCON (si only)

The network controller (NETCON) board (TN77B) is replaced by the NetPkt board (TN794) starting in R7.

For pre-R7 systems, NETCON provides an interface to the processor for the port circuit packs on the TDM bus.

### PACCON (si only)

The Packet Controller (PACCON) board (TN778) is replaced by the NetPkt board (TN794) starting in R7.

For pre-R7 systems, PACCON provides an interface to the processor for D-Channel signaling over the packet bus.

The following table gives a summary of the different types of call connections and how the voice and signaling data are transmitted between switches.

Connection Type	Tie Trunk		LAN or WAN	
	Voice & Call Signaling	DCS Signaling	Voice & Call Signaling	DCS Signaling
<b>DCS+</b>	T1/E1 facilities using ISDN-PRI or DS1 B-Channel	TSC on the ISDN-PRI D-Channel		
<b>X.25</b>	T1/E1 facilities using ISDN-PRI or DS1 B-Channel OR Analog trunk	Packet PVC		
<b>C-LAN PPP</b>	T1/E1 facilities using ISDN-PRI or DS1 B-Channel OR Analog trunk	Packet PVC		
<b>C-LAN Ethernet</b>	T1/E1 facilities using ISDN-PRI or DS1 B-Channel OR Analog trunk			Packet - Datagram
<b>IP Trunk</b>		Packet PVC (X.25)	Packet - Datagram (MAPD w/ TN802)	Packet - Datagram (C-LAN)

For all connection types except IP Trunk, the call signaling and voice data are sent together over tie-trunk facilities as TDM-multiplexed frames. For all connection types except C-LAN Ethernet, the DCS signaling data is sent as packets over a permanent virtual circuit (PVC) on tie-trunk facilities.

For IP Trunk, the voice data is sent over TCP/IP facilities as datagram packets — each packet can potentially take a different route through the network. The DCS signaling can be sent either way — over tie-trunk PVCs or TCP/IP facilities.

## R7 Hardware Requirements

This sections summarizes the hardware changes needed for an upgrade to R7 for each type of connectivity.

**R7r model**

The following table shows the hardware required for an upgrade to an R7r.

Connection Type	Hardware Required
BX.25 (Existing systems only)	PGATE (TN577)
TCP/IP (ethernet and ppp)	C-LAN (TN799)
ISDN-PRI	No hardware changes required

**R7si model**

The following table shows the hardware required for an upgrade to an R7si.

Connection Type	Hardware Required
BX.25 (Existing systems only)	<ul style="list-style-type: none"> <li>• PI (TN765)</li> <li>• NetPkt (TN794) — replaces the NetCon (TN777B) and the PACCON (TN778) circuit packs</li> <li>• Upgraded processor (TN790B)</li> <li>• In duplicated systems, a second NetPkt Control Assembly and a new DUPINT (TN792)</li> </ul>
TCP/IP (ethernet and ppp)	<ul style="list-style-type: none"> <li>• C-LAN (TN799)</li> <li>• NetPkt (TN794) — replaces the NetCon (TN777B) and the PACCON (TN778) circuit packs</li> <li>• Upgraded processor (TN790B)</li> <li>• In duplicated systems, a second NetPkt Control Assembly and a new DUPINT (TN792)</li> <li>• Expansion Interface (TN570) if there is an EPN and there are packet-based applications (such as TCP/IP over the C-LAN or ISDN-PRI over the TN464). The TN776 EI can be used only when the switch has no packet-based applications.</li> </ul>
ISDN-PRI	<ul style="list-style-type: none"> <li>• NetPkt (TN794) — replaces the NetCon (TN777B) and the PACCON (TN778) circuit packs</li> <li>• Upgraded processor (TN790B)</li> <li>• In duplicated systems, a second NetPkt Control Assembly and a new DUPINT (TN792)</li> <li>• Expansion Interface (TN570) if there is an EPN.</li> </ul> <p>ISDN-PRI capabilities formerly provided by the PI and PACCON circuit packs are now provided by the NetPkt. Note that you <i>do not</i> need to replace the TN767 with the TN464 since NetPkt supports D-channel signaling over the TDM bus.</p>

**R7csi model**

The following table shows the hardware required for an upgrade to an R7csi.

Connection Type	Hardware Required
BX.25 (Existing systems only)	The csi model does not support BX.25 connectivity.
TCP/IP (ethernet and ppp)	<ul style="list-style-type: none"> <li>• C-LAN (TN799)</li> <li>• Upgraded processor (TN798B)</li> </ul>
ISDN-PRI	<ul style="list-style-type: none"> <li>• Upgraded processor (TN798B)</li> </ul>

**R7 Administration**

This section summarizes the procedures required to administer switch connections for R7. This information is presented in detail in Chapter 2 and Appendix A.

**How are TCP/IP connections set up?**

TCP/IP switch connections are set up by filling in the fields of the four administration screens (forms) described below. These four screens must be administered for each connection on the switches at *both* ends of the connection.

The five screens are shown below with their fields filled in for PPP and Ethernet connections.

**Node Names Screen**

This screen associates a node name with an IP address for each network node in the network. A node is an interface to the IP network. This can be an endpoint such as a C-LAN port, a CMS server, or an Intuity system; or it can be a network device such as a bridge or router.

The term node is used in two somewhat different ways. In the context of a DCS network, a node means a switch. But for a DCS network with TCP/IP connections, each switch can have many nodes — each connected port on the C-LAN board is a node.

**Data Module Screen**

This screen defines a link and associates the link number with the following parameters:

- Data module type
- Port Location
- Node name
- Destination Node Name (ppp connections only)

These are the essential parameters that need to be specified for a switch-to-switch connection to work. The other fields are described in Appendix A.

**Processor Channel Assignment Screen**

This screen associates a processor channel number with:

- Link number

- Interface Channel number

It associates these numbers on the local switch with Destination identifiers:

- Node Name
- Remote Interface Channel (or port) number
- Machine (switch)ID (from the Dial Plan).

### IP Routing Screen

This screen associates a local C-LAN board location with:

- Destination node
- Gateway Node

The gateway node is the next intermediate node in the path to the destination node. The gateway node could be the local C-LAN port if there are no intermediate nodes between the local port and destination.

IP routes are needed for PPP connections when there are intermediate nodes between the local and destination nodes. They are needed for Ethernet connections when the local and destination nodes have IP addresses on different networks or subnetworks.

IP routing and subnets are described later in this chapter. See [IP Routing \(page 241\)](#) in Appendix A for a description of the IP Routing Metric field.

### Interface Link Screen

Starting with Release 7, this screen is no longer needed to set up switch connections. However, it is available as a display-only screen. It was previously used to administer the links, which are now administered on the Data Module screens. This screen is useful as display-only because it shows a combination of information not shown elsewhere — the link and associated extension, data module type, destination number, connected data module, and dte/dce.

If you are upgrading a pre-Release 7 switch and need to remove links, you will need to use this screen. It will be an administrable screen until you upgrade the switch software to Release 7.

**Example administration screens** Examples of the five administration screens needed to setup TCP/IP connections are shown below. The fields are populated with sample values.

**Note:** These screens, their fields, and how to use them are described in detail in the examples in Chapter 2 and in Appendix A, Screens Reference.

**Node Names:**

Associates node names with IP addresses for all nodes that the local switch needs to communicate with. Note that AUDIX and MSA nodes are entered on page 1. All other nodes are entered on pages 2–6.

```
change node-names Page 2 of 6
```

NODE NAMES			
Name	IP Address	Name	IP Address
<u>default</u>	<u>0 . 0 . 0 . 0</u>	_____	_____
<u>node-1</u>	<u>192.168.35.10</u>	_____	_____
<u>node-2</u>	<u>192.168.35.20</u>	_____	_____
<u>node-3</u>	<u>192.168.35.30</u>	_____	_____
<u>node-5</u>	<u>192.168.35.121</u>	_____	_____
_____	_____	_____	_____

**Data Module – PPP:**

Provides an interface to the TDM bus for a signaling connection to a specific end-point. The Data Module screen associates a link number with a C-LAN port location and node name for this port on the local switch and a node name for the C-LAN port on the remote switch.

```
add data-module next Page 1 of x
```

DATA MODULE

Data Extension: 2010                      Name: ppp on link 1 to node-2      BCC: 2  
                   Type: ppp                      COS: 1  
                   Port: 01b0115                    COR: 1  
                   Link: 1                            TN: 1  
   Enable Link? n

                  Node Name: node-1 \_\_\_\_\_

Establish Connection: y

DESTINATION

                  Digits: 6113020 \_\_\_\_\_  
                   Node Name: node-2 \_\_\_\_\_  
                   CHAP? n

Since the node names are associated with IP addresses on the Node Names screen, the link number and port location are indirectly associated with the IP addresses for this connection.

**Data Module – ethernet:**

Provides an interface to the LAN for a signaling connection to an unspecified end-point. The Data Module screen associates a link number with a C-LAN port location and node name for this port on the local switch.

```
add data module next Page 1 of x
```

DATA MODULE

Data Extension: 3391                      Name: ethernet on link 3      BCC: 2  
                   Type: ethernet  
                   Port: 01b0117  
                   Link: 3  
   Enable Link? n

                  Node Name: node-1 \_\_\_\_\_  
                   Subnet Mask: 255.255.255.0 \_\_\_\_\_  
                   Broadcast Address: 192.168.35.255 \_\_\_\_\_  
                   Automatic Subnet Routing: y

Since the node name is associated with an IP address on the Node Names screen, the link number and port location are indirectly associated with an IP address.

**Processor Channel**

**Assignment:** associates a processor channel number with link and interface channel numbers on the local switch and node name, port number, and machine ID on the remote switch.

```
change communications-interface processor-channels
```

Page 1 of X

PROCESSOR CHANNEL ASSIGNMENT											
Proc Chan	Enable	Appl.	Gtwy		Interface		Destination		Session		Mach ID
			To	Mode	Link/Chan	Node	Port	Local/Remote			
1:	<u>n</u>						<u>0</u>				
2:	<u>n</u>						<u>0</u>				
:											
12:	<u>n</u>	<u>dc</u> <u>s</u>		<u>s</u>	<u>1</u>	<u>5003</u>	<u>node-2</u>	<u>0</u>	<u>12</u>	<u>21</u>	<u>2</u>
:											
64:	<u>n</u>						<u>0</u>				

**IP Routing:** associates a route number with a destination node, a gateway node, and a C-LAN board location.

```
add ip-route next
```

Page 1 of 1

IP ROUTING	
Route Number:	<u>1</u>
Destination Node:	<u>node-5</u>
Gateway:	<u>node-3</u>
C-LAN Board:	<u>1b01</u>
Metric:	<u>1</u>

**Intuity AUDIX LAN Setup Summary**

The following list summarizes the steps for setting up an Intuity AUDIX on a LAN.

- 1 Assign node name and IP address
- 2 Assign UNIX machine name, IP address, configure LAN card.  
“Networking Administration, TCP/IP Administration”
- 3 Assign country and switch type  
“Switch Interface Administration, Switch Selection”
- 4 Assign extension length, Host Switch Number (switch node from dial plan), Audix Number, Switch Number IP address of the switch, and TCP Port.  
“Switch Interface Administration, Call Data Interface Administration, Switch Link Administration.”
- 5 Reboot the Intuity AUDIX  
“Customer/Services Administration, System management, System Control, Shutdown System.”
- 6 Set up the DCS Network Time Zones
- 7 “Audix Administration, change switch-time-zone.”

**CMS LAN Setup Summary**

The following list summarizes the steps for setting up a CMS server.

- 1 Edit the /etc/hosts file to add switch names and IP addresses
- 2 Set up a second NIC
- 3 Add a default router

- 4 Set up the local/remote port
- 5 Choose between x.25 and TCP/IP signaling
- 6 For X.25, define which physical port is used on CMS
- 7 For TCP/IP, assign the switch host name or IP address and TCP port number

## When to use IP routes

You need to set up IP routes between endpoints for TCP/IP connections in the following cases:

Connection Type	Need an IP Route When:	Don't need an IP Route When:
Ethernet	Endpoints are on different subnets.	Endpoints are on the same subnet <i>and</i> Automatic Subnet Routing? is set to <b>y</b> (enabled) on the Data Module screen.
	Endpoints are on the same subnet, but Automatic Subnet Routing? is set to <b>n</b> (disabled) on the Data Module screen.	
PPP	There are one or more intermediate nodes between endpoints.	Endpoints are directly connected (as defined on the Data Module screen) with no intermediate nodes. PPP is not affected by subnetting.

**Note:** The endpoint nodes are on the same subnet if the following three conditions are met:


- the endpoints are on the same physical subnetwork
- the Subnet Mask field is assigned the same value on the Data Module screens for the two endpoint nodes
- the network + subnet portions of the IP addresses (as determined by the subnet mask) are the same

See [Subnetting \(page 23\)](#) for more information about subnet masks.

## IP Route Examples

### PPP Connections

The diagram below shows three switches in a DCS network with PPP signaling connections between switches A & B and between switches A & C. All nodes in this diagram are C-LAN ports. PPP data modules are administered between nodes 1 & 2 on switches A & B, and between nodes 3 & 4 on switches A & C. With these connections, switch A can communicate with switches B and C without using the IP Routing screen to administer explicit IP routes. However, switches B and C need IP routes to communicate with each other because they are not directly connected.

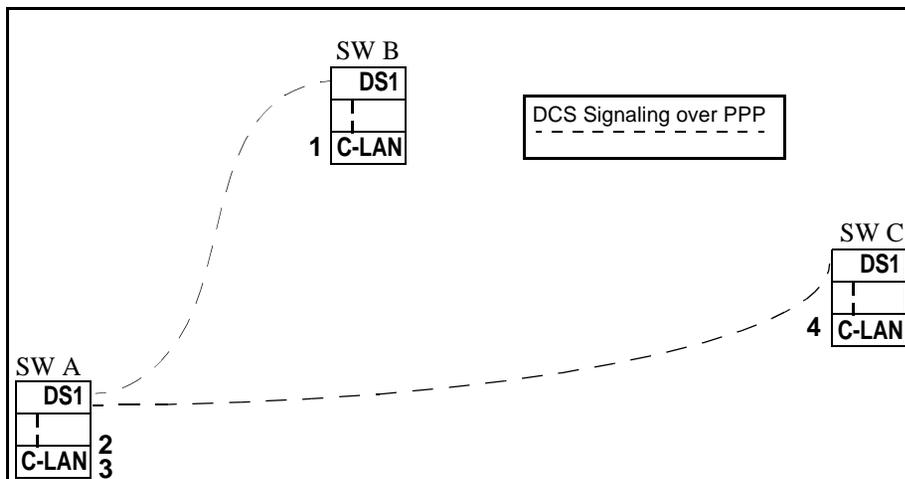

The IP routes needed between nodes for this example are listed in the following table. The Destination Node and Gateway Node columns in the table show the nodes that you would be entered on the IP Routing screen to administer an IP route. On the IP Routing screen, you would enter the node names assigned on the Node Names screen for these nodes.

Switch	Node Connections	Destination Node	Gateway Node	Comments
A	2 → 1			IP route not needed
	3 → 4			IP route not needed
B	1 → 4	4	2	IP route needed because there is an intermediate node between nodes 1 & 4.
C	4 → 1	1	3	IP route needed because there is an intermediate node between nodes 4 & 1.

**Note:** (1) The PPP data modules on switches B and C for the connections to A must be enabled before the IP routes can be administered.


**Note:** (2) Nodes 2 and 3 in this example are two ports on the same C-LAN board. Messages from node 1 destined for node 4 arrive at node 2; the C-LAN ARP software routes the messages to node 4 through node 3.

### Ethernet Connections

The diagram below shows three switches in a DCS network with Ethernet signaling connections between them. Switches A & B and the adjunct are on one subnetwork and switch C is on another subnetwork. The two subnetworks (LANs) are connected by devices that can route messages between subnets — this could be a pair of C-LAN boards in a DEFINITY ECS, a single router, multiple routers, a WAN. Nodes 1, 2, and 6 are C-LAN ports. Node 3 is the adjunct interface port to the LAN. Nodes 4 & 5 are interfaces to the WAN/Internet cloud and have IP addresses that are on different networks or subnetworks.

Ethernet data modules are administered for the C-LAN ethernet port on each switch.

With these connections, switches A and B can communicate with each other and with the adjunct without using the IP Routing screen to explicitly administer IP routes as long as automatic subnet routing is enabled on their data module screens. However, switches A and B need IP routes to communicate with switch C because switch C is on a different subnet.

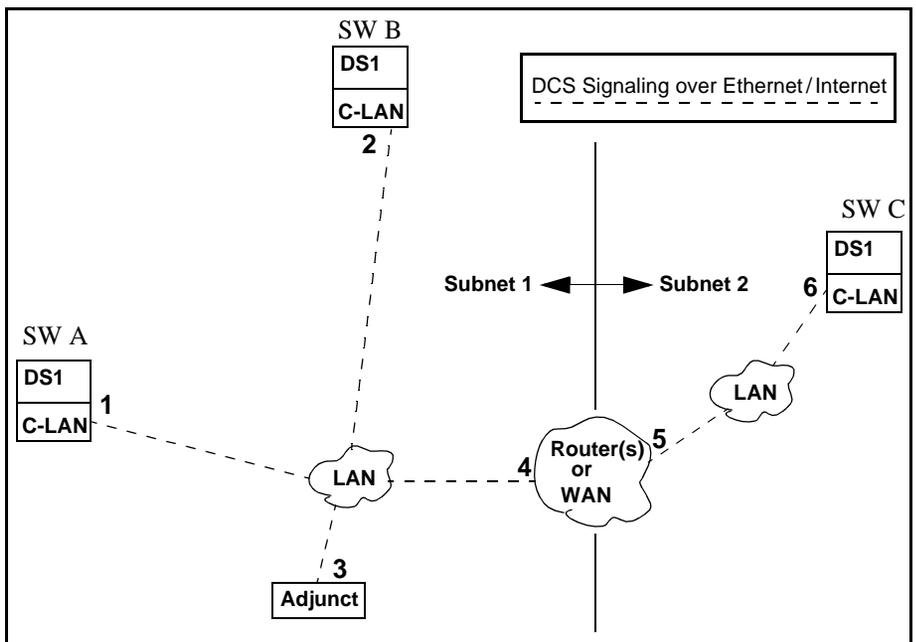

The IP routes needed between nodes for this example are listed in the following table.


Switch	Node Connections	IP Route Destination Node	IP Route Gateway Node	Comments
A	1 → 2 Automatic Subnet Routing enabled			IP route not needed.
	1 → 2 Automatic Subnet Routing disabled	2	1	IP route needed because automatic subnet routing is disabled on the Switch A Data Module screen.
	1 → 3			IP route not needed as long as automatic subnet routing is enabled on the Switch A Data Module screen.
	1 → 4	4	1	IP route needed because node 4 is used as a gateway for the 1 → 6 route.
	1 → 6	6	4	IP route needed because nodes 1 & 6 are on different subnets. This route requires a 1 → 4 route.
B	2 → 1			IP route not needed as long as automatic subnet routing is enabled on the Switch B Data Module screen.
	2 → 3			IP route not needed as long as automatic subnet routing is enabled on the Switch B Data Module screen.
	2 → 4	4	2	IP route needed because node 4 is used as a gateway for the 2 → 6 route.
	2 → 6	6	4	IP route needed because nodes 2 & 6 are on different subnets. This route requires a 2 → 4 route.

Switch	Node Connections	IP Route Destination Node	IP Route Gateway Node	Comments
C	6 → 5	5	6	IP route needed because node 5 is used as a gateway for the 6 → 1, 2, 3 routes.
	6 → 1	1	5	IP route needed because nodes 1 & 6 are on different subnets. This route requires a 6 → 5 route.
	6 → 2	2	5	IP route needed because nodes 2 & 6 are on different subnets. This route requires a 6 → 5 route.
	6 → 3	3	5	IP route needed because nodes 3 & 6 are on different subnets. This route requires a 6 → 5 route.

**PPP with Ethernet Connections**

The diagram below shows the same configuration as the previous example, except that the DCS signaling between switch A and switch B is via PPP rather than Ethernet. Switch A acts as a gateway to convert between the two signaling protocols. PPP data modules are administered between nodes 1 & 3 on switches A & B and ethernet data modules, with automatic subnet routing enabled, are administered on switches A & C for the C-LAN ethernet port interfaces to their LANs.

With these connections, switch A can communicate with switch B and with the adjunct without using the IP Routing screen to administer explicit IP routes. However, switch A needs an IP route to communicate with switch C because these switches are on different subnets. And switch B needs an IP route to communicate with switch C because there are intermediate nodes between B & C.

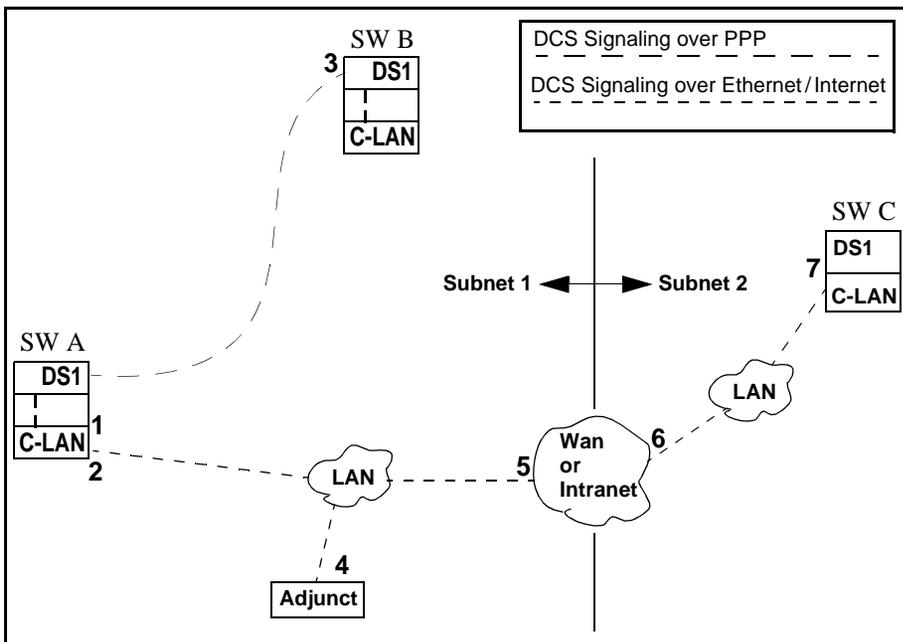

The IP routes needed between nodes for this example are listed in the following table.

Switch	Node Connections	IP Route Destination Node	IP Route Gateway Node	Comments
A	1 → 3			IP route not needed.
	2 → 4			IP route not needed.
	2 → 5	5	2	IP route needed because node 5 is used as a gateway for the 2 → 7 route.
	2 → 7	7	5	IP route needed because nodes 2 & 7 are on different subnets.

Switch	Node Connections	IP Route Destination Node	IP Route Gateway Node	Comments
B	3 → 1			IP route not needed.
	3 → 4	4	1	IP route needed because there are intermediate nodes between 3 & 4. The data module for the ppp connection between nodes 3 and 1 must be enabled before administering this route.
	3 → 7	7	1	IP route needed to because there are intermediate nodes between 3 & 7. The data module for the ppp connection between nodes 3 and 1 must be enabled before administering this route.
C	7 → 6	6	7	IP route needed because node 6 is used as a gateway for the routes from switch C.
	7 → 4	4	6	IP route needed because nodes 4 & 7 are on different subnets
	7 → 3	3	6	IP route needed because nodes 3 & 7 are on different subnets
	7 → 2	2	6	IP route needed because nodes 2 & 7 are on different subnets

### Default Gateway

On LANs that connect to other networks or subnetworks, it is convenient to define a router port as a *default gateway* node. Any messages addressed to a different subnet, and for which no explicit IP route is defined, are sent to this node. The gateway node either knows the message address or knows of another router that may know the message address.

For example, assume you have a LAN with a C-LAN node and other nodes, including a router that is also connected to a wider network. You wish to be able to send messages to nodes on the wider network through the router without building explicit IP routes for addresses not on the LAN. You can do this by setting up an IP route with the *default* node as the destination and the router as the gateway. The default node is a display-only entry on the Node Names screen with IP address 0.0.0.0. It acts as a variable that takes on unknown addresses as values. When the “default” IP route is set up, any address not know by C-LAN is substituted for the default address in the default IP route, which uses the router as the “default” gateway. Thus, unknown

addresses are automatically assigned an IP route without using the IP Routing screen to set up the route explicitly.



### SECURITY ALERT:

**A default gateway could allow unauthorized access to your network if it is not properly administered and maintained.**

## DEFINITY Connection types and capacities

This subsection gives an overview of the types of connections that can be set up with DEFINITY switches and adjuncts and capacities for some connectivity parameters.

### Types of Links

This table lists the types of connections possible with each DEFINITY model and adjunct.

DEFINITY ECS R7 Model	Connection Type	Endpoint
R7csi	Ethernet	DCS, CMS, Intuity AUDIX
	Synchronous PPP	DCS
	ISDN-PRI	DCS+
R7si	Ethernet	DCS, CMS, Intuity AUDIX
	Synchronous PPP	DCS
	ISDN-PRI	DCS+
	BX.25	DCS, CMS, Intuity AUDIX, DEFINITY AUDIX
R7r	Ethernet	DCS, CMS, Intuity AUDIX
	Synchronous PPP	DCS
	ISDN-PRI	DCS+
	BX.25	DCS, CMS, Intuity AUDIX, DEFINITY AUDIX
Pre R7 Switches: vs, si, r vs, si, r, csi	BX.25	DCS, CMS, Intuity AUDIX, DEFINITY AUDIX
	ISDN-PRI	DCS+

If an R7 switch is connected to two endpoints by different connection types, it acts as a gateway (protocol converter) between the endpoints.

**DEFINITY Capacities** The following table shows maximum allowable values and ranges for several connectivity parameters for DEFINITY ECS Release 7. Note that some or all maxima may not be achievable, depending on specific switch/traffic configurations.

	<b>csi</b>	<b>si</b>	<b>r</b>
Circuit Packs	2 C-LAN	2 C-LAN 2 PI	2 C-LAN 4 PGATE
Processor Channels: X.25 ethernet/ppp	na 1–128	1–64 1–256	1–128 1–384
Interface Channels (listen ports): X.25 ethernet/ppp	na 5000–64,500	1–64 5000–64,500	1–64 5000–64,500
ISDN-TSC Gateway Channels	na	128	256
Links per System	25	25	33
Links per Circuit Pack: PI PGATE C-LAN	na na 1 ethernet, 16 ppp	4 na 1 ethernet, 16 ppp	na 4 1 ethernet, 16 ppp
IP Routes	270	400	650
Hop Channels (X.25 only)	na	128	256

## IP Addressing

This section describes IP addressing and subnetting.


### Physical Addressing

The Address Resolution Protocol (ARP) software on the C-LAN circuit pack relates the 32-bit logical IP address, which is configured in software, with the 48-bit physical address of the C-LAN circuit pack, which is burned into the board at the factory. The C-LAN board has an ARP table that associates the IP addresses with the hardware addresses, which are used to route messages across the network. Each C-LAN board has one physical address and up to 17 assigned IP addresses (one for each port).

### Logical Addressing


An IP address is a software-defined 32-bit binary number that identifies a network node. The IP address has two main parts -- the first  $n$  bits specify a "network ID" and the remaining  $32 - n$  bits specify a "host ID."

#### Format

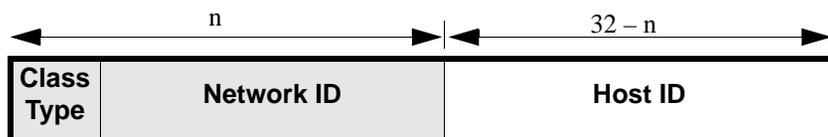

#### Dotted Decimal notation

The 32-bit binary IP address is what the computer understands. For human use, the address is typically expressed in dotted decimal notation. The 32 bits are grouped into four 8-bit octets (bytes) and converted to decimal numbers separated by decimal points, as in the example below.

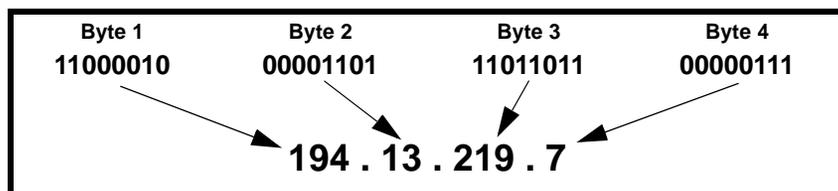

The eight binary bits in each octet can be combined to represent decimal numbers ranging from 0 to 255.

**Conversion between binary and decimal**

Conversion from binary to decimal notation is accomplished by adding the powers of 2 corresponding to the 1's positions in each byte:


	$2^7 =$ 128	$2^6 =$ 64	$2^5 =$ 32	$2^4 =$ 16	$2^3 =$ 8	$2^2 =$ 4	$2^1 =$ 2	$2^0 =$ 1
194 =	1	1	0	0	0	0	1	0
13 =	0	0	0	0	1	1	0	1
219 =	1	1	0	1	1	0	1	1
7 =	0	0	0	0	0	1	1	1

**IP Address Classes**

The IP address space ( $2^{32}$  or about 4.3 billion addresses) has been divided into five groups, Classes A–E, to accommodate the need for different network sizes. Each class has a different allocation of bits between the network and host IDs. The classes are identified by a fixed pattern of leading bits.

In Class A addresses, the first (leftmost) bit is always 0. So Class A IP addresses have 7 bits to define network IDs; 7 bits can define a total of 128 (0-->127) Class A networks. The remaining 24 bits of a Class A IP address are used to define host IDs. So for each of the 126 networks, there are  $2^{24}$  or 16,777,216 possible hosts.

The following table shows how IP addresses are allocated among the five classes.

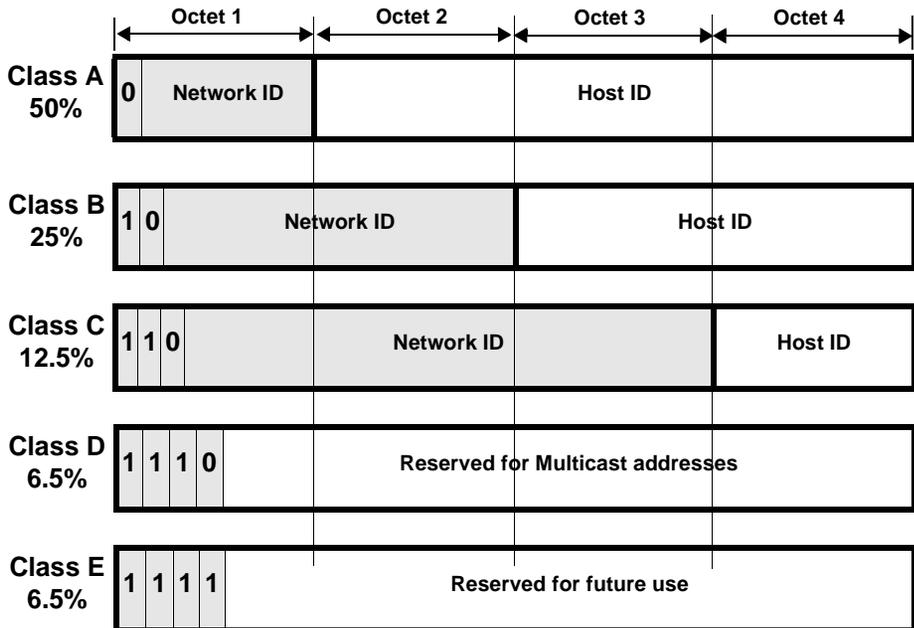

Address classes A, B, and C cover 87.5% of the address space. These addresses are assigned by the ISP or the Internet Assigned Number Authority (IANA) to organizations for their exclusive use. The remaining 12.5% of addresses, designated classes D and E, are reserved for special purposes.

The IANA assigns a network address to an organization and a network administrator in the organization assigns the Host IDs associated with that Network ID to nodes within the organization's network.

The following table shows the ranges of network and host IDs, and the total number of IP addresses (# network IDs times # host IDs), for each class.

	Network ID Range	Host ID Range	Total IP Addresses
Class A	7 bits 126 Networks: <b>1 to 126</b>	24 bits 16.8 Million Hosts per network: <b>0.0.1 to 255.255.254</b>	2.1 Billion 50%
Class B	14 bits, 16,382 Networks: <b>128.0 to 191.255</b>	16 bits 65,534 Hosts per network <b>0.1 to 255.254</b>	1.1 Billion 25%
Class C	21 bits, 2.1 Million Networks: <b>192.0.0 to 233.255.255</b>	8 bits 254 Hosts per network: <b>1 to 254</b>	0.5 Billion 12.5%
Classes D&E			0.5 Billion 12.5%

You can tell the class of an IP address by the first octet. For example, 191.221.30.101 is a Class B address and 192.221.30.101 is a Class C address.

### Private IP Address

Addresses on the Internet need to be unique to avoid ambiguity in message routing over the Internet. To insure uniqueness, the Internet Assigned Number Authority (IANA) controls the use of IP addresses. Organizations that maintain private networks that never communicate with the Internet can use arbitrary IP addresses as long as they are unique within the private network. To help prevent the duplication of IP addresses on the Internet, the IANA has reserved the following ranges of IP addresses for private networks:

1 Class A networks: 16.6 Million addresses: 10.0.0.0 --> 10.255.255.255

16 Class B networks: 1 Million addresses: 172.16.0.0 --> 172.31.255.255

256 Class C networks: 65,000 addresses: 192.168.0.0 --> 192.168.255.255

These IP addresses can be used repeatedly in separate private networks, which are not connected to the Internet. Routing tables prohibit the propagation of these addresses over the Internet. (See RFC 1918). All other IP addresses are unique and must be assigned by the IANA or ISP.

### Subnetting

Subnetting is the grouping of IP addresses associated with a network ID into two or more subnetworks.

**Reasons for subnetting** Subnetting is desirable because it enables a more efficient allocation and management of IP addresses.

The three-class hierarchy of IP addresses results in an inefficient allocation of addresses in many cases because addresses are assigned and managed in blocks by network ID. For example, a company that needs 10,000 IP addresses in each of two locations might be assigned two Class B network IDs, each of which provides 65,534 IP addresses. Even though one Class B network ID would provide more than enough addresses for both locations, having a separate network ID for each location is easier to manage. If the company uses only 20,000 of these addresses, about 100,000 go unused.

In this case, subnetting would enable the company to use one Class B network ID and subdivide the addresses into two subnets, one for each location. Each subnet would have a unique “extended network ID” that would enable them to be managed as if they had unique network IDs.

Typically, organizations need to manage IP addresses in separate groups based on several criteria in addition to location:

- different types of LANs
- different server applications
- different work projects
- security

The grouping of IP addresses provided by the three-Class structure does not allow nearly enough flexibility to meet the needs of most organizations. Subnetting allows the  $N$  IP addresses associated with a network ID to be divided into as few as 2 groups, each with  $N/2$  addresses, or into as many as  $N/2$  groups, each with 2 addresses, if desired.


#### **How subnets are created**

RFC 950 defines a standard procedure to divide a Class A, B, or C network ID into subnets. The subnetting adds a third level of hierarchy to the two-level hierarchy of the Class A, B, and C network ID number. An “extended network prefix” is formed by using two or more bits of the Host ID as a subnet number, and appending this subnet number to the network ID.

Two-level classful hierarchy



Three-level subnet hierarchy

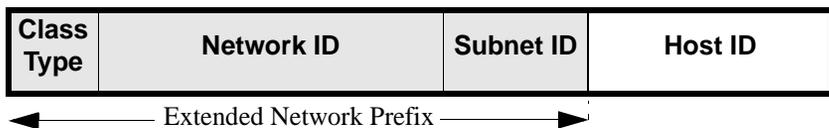

Subnet mask



The extended network prefix is then treated as a normal network ID. The remaining host ID bits define the host IDs within each subnet. For example, a block of IP addresses could be subdivided into four subnets by using 2 host bits to “extend” the network ID. Now there are 4 times as many (extended) networks and 1/4 as many hosts per network.

**Note:** In adding up the number of network and host IDs, certain addresses cannot be counted. In general, addresses with all ones or all zeros in either the network portion or the host portion of the address are not usable. These are reserved for special uses, such as broadcasting or loopback.

**Subnet Masks**

Routing protocols use a *subnet mask* to determine the boundary between the extended network ID and the host ID in an IP address. The subnet mask is a 32-bit binary number consisting of a string of contiguous 1’s followed by a string of contiguous 0’s. The 1’s part corresponds to the extended network prefix and the 0’s part corresponds to the host ID of the address.

Each of the three classes of addresses has a default subnet mask that specifies the end of the 1st, 2nd, and 3rd octet as the boundary between the extended network prefix and the host ID. The default subnet mask in each case means “no subnetting.”

	Default Subnet Mask
Class A	<b>11111111.00000000.00000000.00000000</b> <b>255.0.0.0</b>
Class B	<b>11111111.11111111.00000000.00000000</b> <b>255.255.0.0</b>
Class C	<b>11111111.11111111.11111111.00000000</b> <b>255.255.255.0</b>

In addition to the default subnet masks, which divide the network and host IDs at the octet boundaries in the IP address, subnets can be formed by using 2 or more bits from the host octets to define the subnet ID.

**Class-C subnets**

The following table shows that Class-C IP addresses can have 5 subnetting schemes, each with a different number of subnets per network. The first and last subnet, formed by using 1 and 7 bits respectively, are unusable because they result in either the subnet ID or the host ID having all zeros or all ones.

# Sub-net bits	# of Usable Subnets per NW	# of Hosts per Subnet	# of Usable IP Addresses	Binary Subnet ID (4th Octet)	Decimal Subnet ID	Class C Subnet Masks
1	0	126	0	10000000	128	255.255.255.128
2	2	62	124	11000000	192	255.255.255.192
3	6	30	180	11100000	224	255.255.255.224
4	14	14	196	11110000	240	225.225.225.240
5	30	6	180	11111000	248	255.255.255.248
6	62	2	124	11111100	252	255.255.255.252
7	126	0	0	11111110	254	255.255.255.254

**3-bit subnets**

As an example, the third row of the table shows the results of using 3 bits for the subnet ID. Three bits are “borrowed” from the host ID leaving 5 bits for the host IDs. The number of subnets that can be defined with three bits is  $2^3 = 8$  (000, 001, 010, 011, 100, 101, 110, 111). Of these, only 6 are usable (all ones and all zeros are not usable). The remaining 5 bits are used for the host IDs. Of these,  $2^5 - 2 = 30$  are usable. As shown in columns 2–4 (row 3), by using 3 bits for subnetting, a Class C network can be divided into 6 subnets with 30 host IDs in each subnet for a total of  $6 \times 30 = 180$  usable IP addresses.

**Subnet mask**

The subnet mask is defined as follows. The subnet bits “borrowed” from the host ID are the highest-order bits in the octet of the host ID. The 5th and 6th columns of the table show the binary and decimal subnet IDs, formed by using the subnet bits as the highest-order bits in an octet. For example, in the third row of the table, the binary bit pattern is 11100000, which is decimal 224. This is the highest number that can be formed with the 3 high-order bits in the octet. The subnet mask is formed by putting this number in the 4th octet of the default subnet mask (shown in the last column of the table).

The mask, 255.255.255.224, corresponds to a bit pattern of 27 ones followed by 5 zeros. This mask would be used to check that two IP addresses are on the same or different subnets by comparing the first 27 binary digits of the two addresses. If the first 27 binary digits are the same, the two addresses are on the same subnet.

**Example**

To continue the example using a 3-bit subnet ID, assume a Class C network ID of 192.168.50.xxx. This network ID can provide 254 usable IP addresses, all on the

same network — from 192.168.50.1 to 192.168.50.254. If we divide this network into 3-bit subnets, we will have 6 usable subnets with 30 usable IP addresses in each subnet. Note that we have lost 74 usable IP addresses in the process because we had to discard the all-ones and all-zeros subnet IDs (62 addresses) and host IDs (12 addresses). There is always a loss of usable IP addresses with subnetting.

The following table shows the subnet boundaries for the six subnets formed with 3 bits. The boundaries are the numbers formed by using all combinations of 3 bits as the highest-order bits in an octet (Columns 1 and 2) and then using these numbers in the 4th octet for the host IDs.

Binary Subnet Boundaries (for 3 bits)	Decimal Subnet Boundaries	Range of usable IP Addresses in the Subnet
00000000	0	not usable
00100000	32	192.168.50. <b>33</b> to 192.168.50. <b>62</b>
01000000	64	192.168.50. <b>65</b> to 192.168.50. <b>94</b>
01100000	96	192.168.50. <b>97</b> to 192.168.50. <b>126</b>
10000000	128	192.168.50. <b>129</b> to 192.168.50. <b>158</b>
10100000	160	192.168.50. <b>161</b> to 192.168.50. <b>190</b>
11000000	192	192.168.50. <b>193</b> to 192.168.50. <b>222</b>
11100000	224	not usable

For example, the IP addresses 192.168.50.75 and 192.168.50.91 are on the same subnet but 192.168.50.100 is on a different subnet. This is illustrated in the following diagram where the subnet mask, 255.255.255.244 is used to compare the first 27 binary digits of each address.

<b>192</b>	<b>168</b>	<b>50</b>	<b>75</b>
<b>11000000</b>	<b>10101000</b>	<b>00110010</b>	<b>01001011</b>
<b>192</b>	<b>168</b>	<b>50</b>	<b>91</b>
<b>11000000</b>	<b>10101000</b>	<b>00110010</b>	<b>01011011</b>
<b>192</b>	<b>168</b>	<b>50</b>	<b>100</b>
<b>11000000</b>	<b>10101000</b>	<b>00110010</b>	<b>01100100</b>
Subnet mask <b>255</b>			<b>224</b>
<b>11111111</b>	<b>11111111</b>	<b>11111111</b>	<b>11100000</b>

The other four possible subnetting schemes for Class C addresses, using 2, 4, 5, and 6 subnet bits, are formed in the same way. Which of the 5 subnetting schemes to use depends on the requirements for the number of subnets and the number of hosts per subnet.

**Class-A and Class-B subnets**

For Class A and Class B IP addresses, subnets can be formed in the same way as for Class C addresses. The only difference is that many more subnets per network can be formed. For Class B networks, subnets can be formed using from 2 to 14 bits from the 3rd and 4th octets. For Class A networks, subnets can be formed using from 2 to 22 bits from the 2nd, 3rd and 4th octets.

The subnets of a network ID are visible only within the organization that owns the network ID; Internet routers route messages based on the network ID and the routers within the private organization differentiate between the individual subnets.

## References

### Standards Organizations

The following is a partial list of organizations that are involved with setting standards for the Internet.

#### **IAB**

The Internet Architecture Board (IAB) is a technical advisory group of the Internet Society.

<http://www.iab.org/iab/>

#### **IANA**

Internet Assigned Number Authority

<http://www.iana.org/>

#### **ICANN**

The Internet Corporation for Assigned Names and Numbers is the new non-profit corporation that was formed to take over responsibility for the IP address space allocation, protocol parameter assignment, domain name system management, and root server system management functions now performed under U.S. Government contract by IANA and other entities.

#### **IETF The Internet Engineering Task Force**

The Internet Engineering Task Force (IETF) is a large open international community of network designers, operators, vendors, and researchers concerned with the evolution of the Internet architecture and the smooth operation of the Internet. It is open to any interested individual.

#### **Internet Society**

The Internet Society is a non-profit, non-governmental, international, professional membership organization. It focuses on: standards, education, and policy issues.

112020 Sunrise Valley Drive  
Suite 210  
Reston, VA 20191-3429 USA

Tel: +1 703 648 9888

Fax: +1 703 648 9887

<http://www.isoc.org/IAB>

#### **ITU**

The ITU, headquartered in Geneva, Switzerland is an international organization within which governments and the private sector coordinate global telecom networks and services.

## RFCs

The development of Internet standards proceeds via a Request for Comments (RFC) process. RFCs are descriptions of proposed changes to existing standards or proposals for new standards. They are posted on the Web for a period of time, during which they are discussed, debated, and modified, before they are adopted by the standards organizations.

### Web sites for RFCs

The following web sites have RFC archives:

<http://www.faqs.org/rfcs/>

<ftp://ds.internic.net/rfc/>

[ems.web.lucent.com/docs/RFC/rfc-index.html](http://ems.web.lucent.com/docs/RFC/rfc-index.html)

[http://dir.yahoo.com/computers\\_and\\_internet/standards/rfcs/](http://dir.yahoo.com/computers_and_internet/standards/rfcs/)

<http://www.cis.ohio-state.edu:80/hypertext/information/rfc.html>

# 2 DCS Administration

This chapter describes how to set up and perform initial administration of data connections between DEFINITY ECS switches in a DCS network.

---

## Overview

This chapter gives step-by-step procedures needed to administer switch-to-switch data connections allowed between an R7 DEFINITY ECS and another DEFINITY switch. The allowable data-connection types are: X.25, ISDN, and two types of TCP/IP connectivity — ethernet and synchronous point-to-point protocol (PPP).

The task descriptions are presented in six relatively simple configurations. Each configuration describes how to administer either a 2-switch connection or a 3-switch gateway connection. The goal of this chapter is to enable you to assemble a complex network by following the procedures for a combination of the building-block configurations.

The following table lists the configurations described in this chapter. The procedures for administering these configurations can be used either individually or in groups as “building blocks” for constructing most networks involving DEFINITY ECS R7 and pre-R7 switches.

The first 2 configurations are simple 2-switch networks. The next two are 3-switch networks with Switch 1 serving as a gateway between different signaling types for connection 1 and connection 2. The last two configurations are ppp–ethernet networks; 5B, is the same as 5A except the Switch 1 has two C-LAN boards instead of one.

Config-uration	Switch 2	Connection 1	Switch 1	Connection 2	Switch 3	Page
1	R7si	ppp	R7r			<a href="#">page 38</a>
2	R7csi	ethernet	R7r (+CMS)			<a href="#">page 51</a>
3	si	bx.25	R7r	ethernet	R7si	<a href="#">page 71</a>
4	csi	isdn	R7si	ppp	R7csi	<a href="#">page 94</a>
5A	R7csi	ppp	R7r	ethernet	R7si	<a href="#">page 116</a>
5B	R7csi	ppp	R7r (2 C-LAN boards)	ethernet	R7si	<a href="#">page 141</a>

TCP/IP connections (ppp or ethernet) require DEFINITY ECS Release 7 or later hardware and software. ISDN and BX.25 connections are supported on switches upgrading to R7 and pre-R7 switches can be connected to R7 switches via ISDN or BX.25. However, new systems will not be sold with X.25 connections. Therefore, all switches in the five configurations are assumed to be upgraded to release R7 or later except the si connected via BX.25 and the csi connected via ISDN in configurations 3 and 4 — these 2 switches could be either R7 or pre-R7 versions.

## Organization of this chapter

The descriptions of the configurations have a common format. Each configuration section has the following subsections:

- Configuration overview
- Task summary
- Checklist of prerequisite tasks
- Configuration diagram
- Administration tasks

The subsections are described below.

**Configuration Overview** Each of the configuration sections begins with a brief description of the network represented by the configuration. This section includes a high-level diagram and a description of the switches and their connections for each node in the network.

**Task Summary** Lists the tasks that need to be performed to administer this configuration.

- 1 Review checklist
- 2 Assign node names
- 3 Assign links
- 4 Assign processor channels

Procedures for completing each of these tasks are described in detail following this summary.

**Configuration Diagram** A detailed diagram of the configuration is shown after the task summary. The diagram is in two parts — one part showing the software-defined connections and the other part showing the hardware connections. The diagram shows many of the parameters that are entered on the administration screens

In the hardware part of the diagram, the paths for voice and signaling data are shown by dashed or dotted lines. The data for voice and call-setup signaling usually takes a different path through the switch hardware from the path for DCS and ISDN signaling data. These two types of data are distinguished in the hardware part of the diagram by the following convention.

A dashed line, " - \_ \_ \_ \_ \_ - ", indicates voice and call-setup data.

A dotted line, " . . . . . ", indicates DCS signaling data.

In the software part of the diagram, the virtual path from processor to processor between two nodes is traced by dashed lines. The path starts at a processor channel on one node, through the link/interface-channels on each node, to the processor channel on the connected node.

### Administration tasks

This section gives the detailed steps for administering the connections between switches. For each configuration, there are several tasks and each task consists of several steps. All of the tasks needed to administer all the nodes in the network are included in each configuration.

The administration task sections list the steps for completing a screen (or "form") and show a representation of the filled-in screen. Many of the field values shown in the screens are examples — you will use different values that are appropriate for your system. Information about the fields and their values — when and why different values are used — is given for each screen. More detailed information about the screens and their fields is given in Appendix A.

## Supported Switches and Adjuncts

Csi-model switches cannot have X.25 connections. New R7si and R7r switches cannot have new X.25 connections but pre-R7 switches with X.25 connections can be upgraded to R7 and keep the X.25 connections.

The vs model of DEFINITY ECS cannot be upgraded to R7 — R6.3 is the last release supported for the vs model. However, pre-R7 releases of the vs model will be supported (via X.25 and ISDN, not TCP/IP) in customer networks that include R7 versions of the csi, si, and r models.

The call management system (CMS) and Intuity adjuncts can be connected to the DEFINITY ECS R7csi with an ethernet connection and to the si and r models with either an ethernet or Bx.25 connection. Procedures for administering these connections are not covered in this book. They are documented in *CentreVu CMS Switch Connections and Administration* (585-215-876) for CMS and in *Intuity Messaging Solutions, LAN Integration with DEFINITY ECS* (585-313-602) for Intuity. CMS administration is covered in *Centre CMS Software Installation and Setup*, 585-215-866.

## Checklist for Prerequisite Administration

This is a checklist of things that need to be completed before you can proceed with the network administration tasks. Review this checklist before starting the administration tasks in each of the five configurations.

# ✓	Checklist Item
<p><b>UPGRADES ONLY:</b> The following items apply only to systems being upgraded to R7 from a previous release. For new systems, skip to step 8 in this table. For more information about the checklist items, refer to Appendix A or the appropriate upgrades book in "References", <a href="#">page 37</a>.</p>	
	<p><b>1</b> Save translations on customer flash card or tape (G3r).</p>
	<p><b>2</b> This step is for the <i>si model only</i>. It preserves ISDN-PRI connections, which (for R7 and later) are carried on the NetPkt circuit pack instead of the PI or PACCON circuit packs. ISDN-PRI connections are preserved transparently on the <i>csi</i> and <i>r</i> models.</p> <p><b>If:</b></p> <p>the <i>si</i> switch has existing ISDN-PRI connections that the customer wants to keep, complete the following steps:</p> <ul style="list-style-type: none"> <li>~ De-administer the ISDN-PRI connections: <ul style="list-style-type: none"> <li>• busy the ISDN links</li> <li>• change Enable on the comm-interface screen to <b>n</b></li> <li>• remove comm-interface processor channels that use ISDN links</li> <li>• change Prot on the comm-interface screen from <b>isdn</b> to <b>bx.25</b></li> <li>• change Est Conn on the comm-interface screen to <b>n</b></li> <li>• remove comm-interface links of type ISDN</li> <li>• remove data modules using those links</li> </ul> </li> <li>~ Save translations on a “working” flash card</li> </ul> <p><b>Otherwise:</b></p> <p>skip to step 4.</p>
<p>1 of 3</p>	

# ✓	Checklist Item
	<p><b>3</b> Remove old circuit packs:</p> <ul style="list-style-type: none"> <li>~ Turn off the power.</li> <li>~ For the <i>csi model</i>, remove the Processor (TN798) circuit pack (<i>Don't</i> remove the processor circuit pack if it is a TN798B).</li> <li>~ For the <i>si model</i>, remove the Processor (TN790), PACCON (TN778), and NETCON (TN777) circuit packs. If there are X.25 connections that the customer wants to keep, leave the PI (TN765) circuit pack in the switch; otherwise remove it.</li> <li>~ For the <i>r model</i>, if there are X.25 connections that the customer wants to keep, leave the PGATE (TN755) circuit pack in the switch; otherwise, remove it.</li> </ul>
	<p><b>4</b> Install new circuit packs on all switches upgrading to R7.1:</p> <ul style="list-style-type: none"> <li>~ For <i>csi models</i>: install the TN798B (processor) and TN799 (C-LAN) circuit packs.</li> <li>~ For <i>si models</i>: install the TN790B (processor), TN794 (NetPkt), and TN799 (C-LAN) circuit packs. For any PPN or EPN that will be carrying packet data, replace the TN776 (Expansion Interface) with the TN570B or TN570C circuit pack.</li> <li>~ For <i>r models</i>: install TN799 (C-LAN.)</li> </ul> <p>In all cases, the R7 software will run without the TN799 (C-LAN) circuit pack; all other new circuit packs are required for R7. The C-LAN circuit pack is required for TCP/IP (ppp and ethernet) connections.</p>
	<p><b>5</b> Install the R7.1 Software on all switches upgrading to R7.1</p>
	<p><b>6</b> Copy translations from translations flash card or tape (G3r). Use the "working" flash card if step <b>3</b> was performed.</p>
<p>NEW and UPGRADE Systems — the following items apply to both new systems and systems being upgraded to R7 from a previous release. For more information about the checklist item, refer to the appropriate installation book in "References", <a href="#">page 37</a>.</p>	
	<p><b>7</b> Established physical connections at each node.</p>
	<p><b>8</b> Set software version on the System Parameters Customer Options form.</p>
<p>General Administration for new installations — the following translations should already be in place for existing systems and usually should not need to be changed for an upgrade to R7 unless new nodes are being added to the network. Refer to appendix A for more information about these tasks.</p>	
	<p><b>9</b> DS1 circuit packs administered</p>
<p><b>2 of 3</b></p>	

# ✓	Checklist Item
	<b>10</b> Signaling group administered ~ page 1 — Trunk board address and Interface ID ~ Page 2 — Administered NCA TSC assignment
	<b>11</b> Synchronization plan administered
	<b>12</b> Trunk groups assigned
	<b>13</b> Dial plan administered
	<b>14</b> Uniform dial plan administered
	<b>15</b> AAR analysis administered
	<b>16</b> Route pattern administered
	<b>17</b> Hunt groups assigned
<b>3 of 3</b>	


## Configurations

This section describes the connectivity administration procedures for the five building block configurations.

Configuration 1	R7r <—ppp—> R7si	<a href="#">page 38</a>
Configuration 2	R7r (+CMS) <—ethernet—> R7csi	<a href="#">page 51</a>
Configuration 3	si <—x.25—> R7r Gateway <—ethernet—> R7si	<a href="#">page 71</a>
Configuration 4	csi <—ISDN—> R7si Gateway <—ppp—> R7csi	<a href="#">page 94</a>
Configuration 5A	R7csi <—ppp—> R7r <—ethernet—> R7si	<a href="#">page 116</a>
Configuration 5B	R7csi <—ppp—> R7r <—ethernet—> R7si with 2 C-LAN circuit packs in the R7r	<a href="#">page 141</a>

## Configuration 1: R7r <—ppp—> R7si

Configuration 1 is a ppp connection between a DEFINITY ECS R7r and a DEFINITY ECS R7si switch in a DCS network.

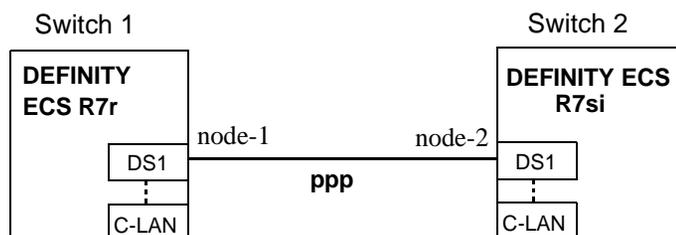

### Task Summary

Complete the following tasks for Switch 1 and Switch 2:

- 1 Review prerequisite administration checklist
- 2 NODE 1 administration
  - a Assign node names
  - b Assign link (via a data module) to node-2
  - c Assign processor channels
- 3 NODE 2 administration
  - a Assign node names
  - b Assign link to (via a data module) node-1
  - c Assign processor channels
- 4 Enable links and processor channels

### Prerequisite Administration


There are some system administration tasks that need to be completed before you can proceed with the connectivity administration described in this section.

Review the checklist of prerequisite administration tasks in [Checklist for Prerequisite Administration \(page 34\)](#), before proceeding with the connectivity administration in this section.

Configuration 1

SWITCH 1

SWITCH 2

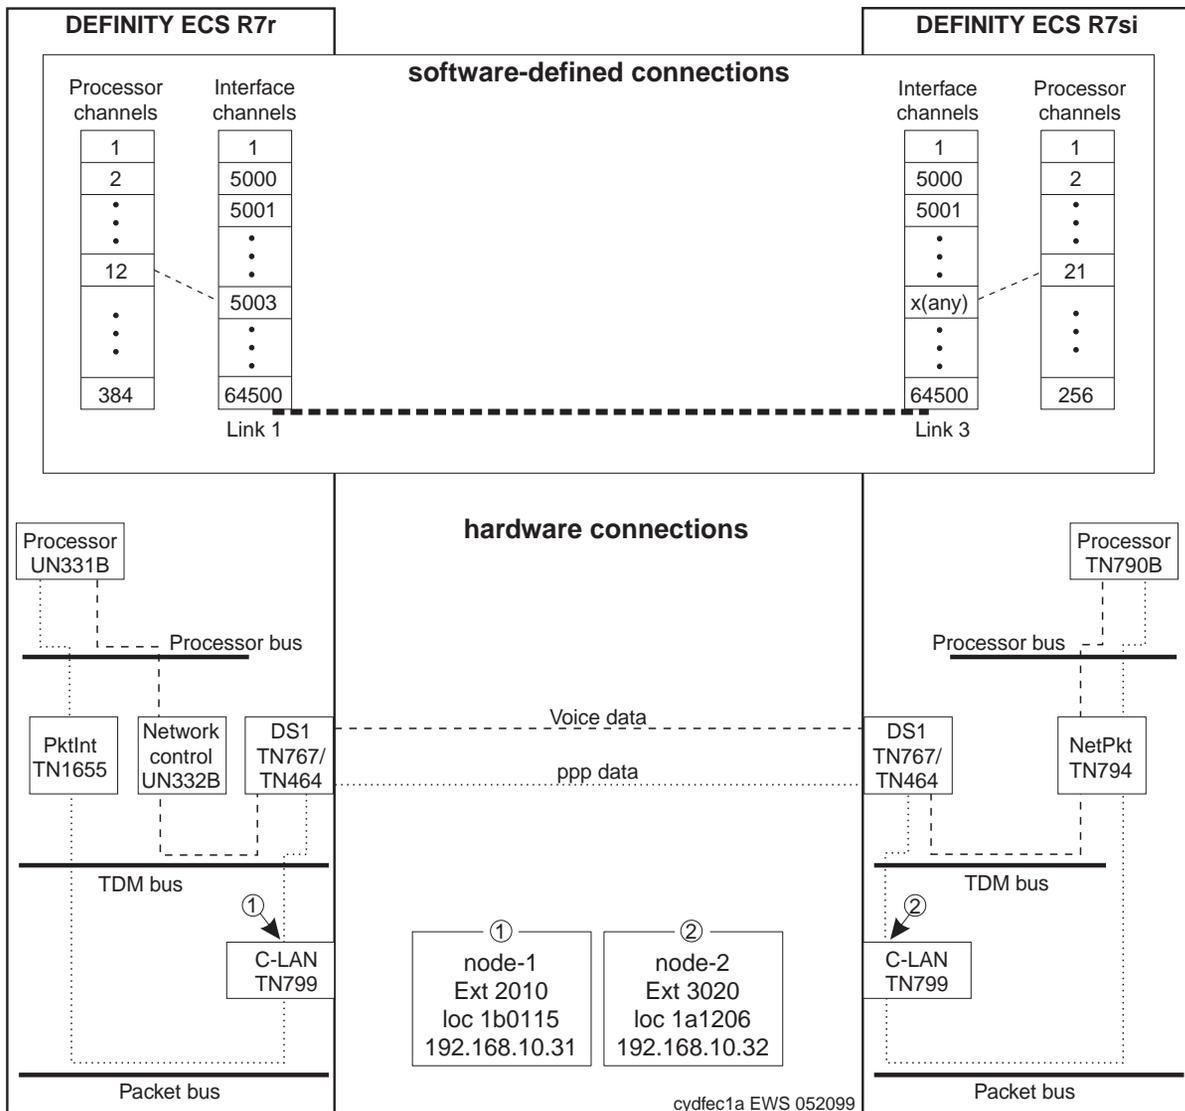

cydfec1a EWS 052099

## Switch 1 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 1. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The AUDIX and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names screen — enter **ch node-n**
- > Go to page 2 of the screen

change node-names		NODE NAMES		Page	2 of 6
Name	IP Address	Name	IP Address		
<u>default</u>	<u>0 . 0 . 0 . 0</u>	_____	_____		
<u>node-1</u>	<u>192 . 168 . 10 . 31</u>	_____	_____		
<u>node-2</u>	<u>192 . 168 . 10 . 32</u>	_____	_____		
_____	_____	_____	_____		

- > Enter values.

Field	Conditions/Comments
Name	Enter unique node names for the following 2 nodes: <ul style="list-style-type: none"> <li>• C-LAN PPP port on Switch 1</li> <li>• C-LAN PPP port on Switch 2.</li> </ul>
IP Address	The unique IP addresses of the nodes named in the previous field.

- > Submit the screen

#### End

## Switch 1 Task — Assign Link via ppp Data Module to Switch 2

This task administers a ppp data module on Switch 1 for the ppp connection to Switch 2. The data module defines a network interface — it associates a link number with a port address and node name for the C-LAN port on Switch 1. It also specifies the node name for the destination node, which is a C-LAN port on Switch 2.

### Steps

#### Begin

> Open Data Module form — enter **ad da n**

```

add data-module next
                                                    Page 1 of x

                DATA MODULE

Data Extension: 2010                Name: ppp on link 1 to node-2    BCC: 2
      Type: ppp                      COS: 1
      Port: 01b0115                  COR: 1
      Link: 1                          TN: 1
Enable Link? n

      Node Name: node-1

Establish Connection: y

DESTINATION
      Digits: 6113020
      Node Name: node-2
      CHAP? n
    
```

[The system assigns the extension 2010 to this data module. Instead of **n** (next) in the command line, you could specify any unused extension in the dial plan.]

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection (ppp).
Port:	In this example, the C-LAN circuit pack is in slot 01b01; the ppp connection is through port 15.
Link:	For G3r, the link number must be in the range 1 – 33, not previously assigned on this switch.
Enable Link?	If you need to add an IP route that uses this node as a gateway, this field must be set to <b>y</b> <i>before</i> adding the IP route. Otherwise leave this field set to <b>n</b> until the link administration is complete; that is, until after all data modules and the processor channels are assigned, then set to <b>y</b> .
Name:	Information-only; appears in list generated by the "list data module" command.

**1 of 2**

Field	Conditions/Comments
COS	The values for these fields will be specified by the system administrator.
COR:	
TN:	
BCC:	Bearer Capability Class. This is a display-only field.
Node Name:	The node name for the interface (C-LAN port) defined by this data module. This must be a name previously entered on the Node Names screen.
Establish Connection?	<b>y</b> means that this switch will be responsible for the call setup for this connection. Enter <b>n</b> when administering the data module for Switch 2.
Destination Digits:	Trunk access code (611) plus extension of data module on node 2 (3020). If you use just the extension, then you must administer UDP and AAR route patterns to access the correct trunk group.
Destination Node Name:	Name of the node at the far end (Switch 2) of this connection. This must be a name entered on the Node Names screen (on both switches).
CHAP?	This field enables/disables the Challenge Handshake Authentication Protocol security mechanism on this link. If you enter <b>y</b> , another field will appear prompting for a CHAP secret (password).
<b>2 of 2</b>	

> Submit the screen

**End**

## Switch 1 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on Switch 1 and specifies the destination node and machine ID.

### Steps

#### Begin

> Open the Processor Channel Assignment form — enter **ch com p**

```
change communications-interface processor-channels
```

Page 1 of X

PROCESSOR CHANNEL ASSIGNMENT

Proc Chan	Enable	Appl.	Gtwy To	Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	<u>n</u>	_____		—	—	_____	<u>0</u>	—	—
2:	<u>n</u>	_____		—	—	_____	<u>0</u>	—	—
:									
12:	<u>y</u>	<u>dc</u> <u>s</u>		<u>s</u>	<u>1</u> <u>5003</u>	<u>node-2</u>	<u>0</u>	<u>12</u> <u>21</u>	<u>2</u>
:									
64:	<u>n</u>	_____		—	—	_____	<u>0</u>	—	—

> Enter values for processor channel 12

Field	Conditions/Comments
Enable	Set to <b>y</b> .
Appl.	Set to <b>dc</b> <b>s</b> for DCS signaling.
Mode	node-1 is the "server" for this session. Set node-2 to "client" ( <b>c</b> ).
Interface Link	This must match the link number assigned on the node-1 data module screen in the previous task.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500. The value 5003 is recommended for the DCS connections.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.
Destination Port	A value of <b>0</b> allows any available interface channel on the destination node to be used for this connection. The Interface Channel number for this connection on the Switch-2 Processor Channel screen must also be set to <b>0</b> .

Field	Conditions/Comments
Session - Local	<p>The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.</p> <p>It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.</p>
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch (in the Local Node Number field).

>Submit the screen

**End**

---

## Switch 2 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 2. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. (A hub is never a node). The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names form — enter **ch node-n**
- > Go to page 2 of the screen

```

change node names
                                                    Page 2 of 6

                        NODE NAMES

Name      IP Address      Name      IP Address
default   0 . 0 . 0 . 0      _____  _____
node-1    192.168.10 .31    _____  _____
node-2    192.168.10 .32    _____  _____
_____   _____     _____  _____
_____   _____     _____  _____

```

- > Enter values.

Field	Conditions/Comments
Name	Enter unique node names for the following 2 nodes: <ul style="list-style-type: none"> <li>• C-LAN PPP port on Switch 2</li> <li>• C-LAN PPP port on Switch 1.</li> </ul>
IP Address	The unique IP addresses of the nodes named in the previous field.

- > Submit the screen

#### End

## Switch 2 Task — Assign Link via ppp Data Module to Switch 1

This task administers a ppp data module on Switch 2 for the ppp connection to Switch 1. The data module defines a network interface — it associates a link number with a port address and node name for the C-LAN port on Switch 2. It also specifies the node name for the destination node, which is a C-LAN port on Switch 1.

### Steps

#### Begin

>Open Data Module form — enter **ad da n**

```

add data-module next
                                                    Page 1 of x
                                DATA MODULE
Data Extension: 3020                                Name: ppp on link 3 to node-1   BCC: 2
    Type: ppp                                        COS: 1
    Port: 01a1206                                    COR: 1
    Link: 3                                          TN: 1
Enable Link? n

    Node Name: node-2

Establish Connection: n

DESTINATION
    Digits: _____
    Node Name: node-1
    CHAP? n
    
```

[This data module is assigned the next available extension, 3020.]

>Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this link.
Port:	In this example, the C-LAN circuit pack is in slot 01a12; the ppp connection is through port 06.
Link:	The link number must be in the range 1 – 25, not previously assigned on this switch.
Enable Link?	If you need to add an IP route that uses this node as a gateway, this field must be set to <b>y</b> before adding the IP route. Otherwise leave this field set to <b>n</b> until the link administration is complete; that is, until after all data modules and the processor channels are assigned, then set to <b>y</b> .
Name:	Information-only; appears in list generated by the “list data module” command.

1 of 2

Field	Conditions/Comments
COS	The values for these fields will be specified by the system administrator.
COR:	
TN:	
BCC:	This is a display-only field.
Node Name:	The node name for the interface (C-LAN port) defined by this data module. This must be a name entered on the Node Names screen.
Establish Connection?	<b>n</b> means that the switch at the remote end of this connection (Switch 1 in this case) will be responsible for the call setup. Enter <b>y</b> when administering the data module for Switch 1.
Destination Digits:	Not needed if the “Establish Connection?” field is set to <b>n</b>
Destination Node Name:	Name of the node at the far end (Switch 1) of this connection. Must be a name entered on the Node Names screen.
CHAP?	This field enables/disables the Challenge Handshake Authentication Protocol security mechanism on this link. If you enter <b>y</b> , the system will prompt for a CHAP secret (password).
<b>2 of 2</b>	

>Press the ENTER/SAVE key to save and exit

**End**

## Switch 2 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on Switch 2.

### Steps

#### Begin

> Open the Processor Channel Assignment form — enter **ch comp**

```
change communications-interface processor-channels
                                                    Page 1 of X
                PROCESSOR CHANNEL ASSIGNMENT

Proc          Gtwy          Interface          Destination          Session          Mach
Chan Enable  Appl.  To Mode  Link/Chan  Node          Port  Local/Remote  ID
  1:   n      _____  -   -   -   -   -   -   -   -
  2:   n      _____  -   -   -   -   -   -   -   -
  :
 21:   y      dcs          c   3 0   node-1   5003 21 12 1
  :
 64:   n      _____  -   -   -   -   -   -   -   -
```

> Enter values

Field	Conditions/Comments
<b>Processor Channel 21:</b> (ppp connection to Switch 1)	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dcs</b> for DCS signaling.
Mode	Node-2 is the “client” for this session. Set node-1 to “server” ( <b>s</b> ).
Interface Link	This must match the link number on the node-2 data module screen in the previous task.
Interface Chan	A value of <b>0</b> allows any available interface channel to be used for this connection. The Destination Port number on the Switch-1 Processor Channel screen must also be set to <b>0</b> .
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.
Destination Port	This number must match the Interface Channel number assigned on the Switch-1 Processor Channel screen.

Field	Conditions/Comments
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.

> Submit the screen

**End**

---

## Enable links and processor channels

You must enable links and processor channels before the connections can be used.

To enable a link, open its data module screen (**ch da [ext]**) and set the Enable Link? field to **y**.

[note: to view a list of assigned data modules and their extensions, enter the “list data-module” command (**l da**)]

To enable the processor channels, open the processor channel screen (**ch com p**) and set the Enable field to **y** for each assigned processor channel.


**Note:** 1. You must disable a link or processor channel before you can change its parameters.

**Note:** 2. The **busy-out** command overrules the data module Enable Link? field.

**Note:** 3. On the C-LAN boards, low-level connectivity can remain intact when higher-level applications such as DCS are not functioning. For example, an external ping to a C-LAN’s ethernet port could be successful even when the board is busied-out. When debugging connectivity problems, pinging only checks low-level connectivity.

## Configuration 2: R7r (+ CMS) ←—ethernet—→ R7csi

Configuration 2 is an 10BaseT ethernet connection between a DEFINITY ECS R7r and a DEFINITY ECS R7csi switch in a DCS network, which includes a router between the switches. The R7r is connected to a CMS adjunct (the DEFINITY administration for Intuity AUDIX would be similar) via the LAN.

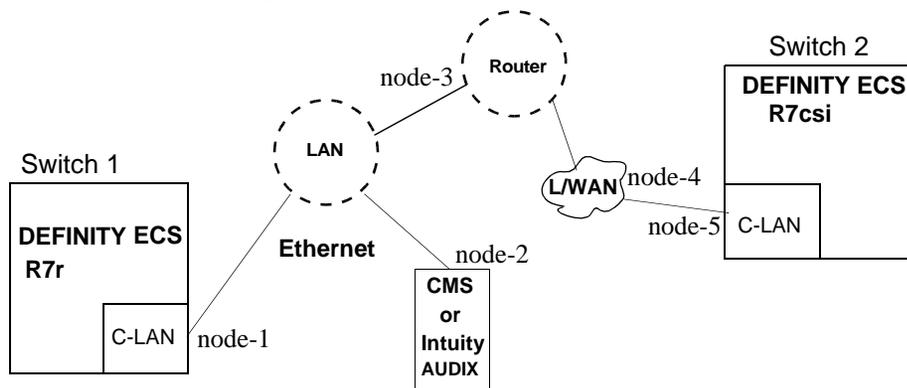

**Note:** This network has 5 IP nodes: 2 DCS nodes, 2 nodes on the router and one adjunct node. The router separates two subnets, so IP routes are needed from each switch to the nodes on the other side of the network.

## Task Summary

The following tasks need to be completed for Switch 1 and Switch 2:

- 1 Review prerequisite administration checklist
- 2 Switch 1 administration
  - a Assign node names
  - b Assign link (via a data module) to the LAN
  - c Assign IP routes
  - d Assign processor channels
- 3 Switch 2 administration
  - a Enable bus bridge connectivity
  - b Assign node names
  - c Assign link (via a data module) to the LAN
  - d Assign IP routes
  - e Assign processor channels
- 4 CMS Administration.


See *CentreVu CMS Software Installation and Setup*, 585-215-866 and *CentreVu CMS Switch Connections and Administration*, 585-215-876 for details of CMS setup and administration. (For Intuity AUDIX connections, see *Intuity Messaging Solutions LAN Integration with DEFINITY ECS*, 585-313-602.)

- 5 Enable links and processor channels

## Prerequisite Administration

There are some system administration tasks that need to be completed before you can proceed with the connectivity administration described in this section.

Review the checklist of prerequisite administration tasks in [Checklist for Prerequisite Administration \(page 34\)](#), before proceeding with the connectivity administration in this section.

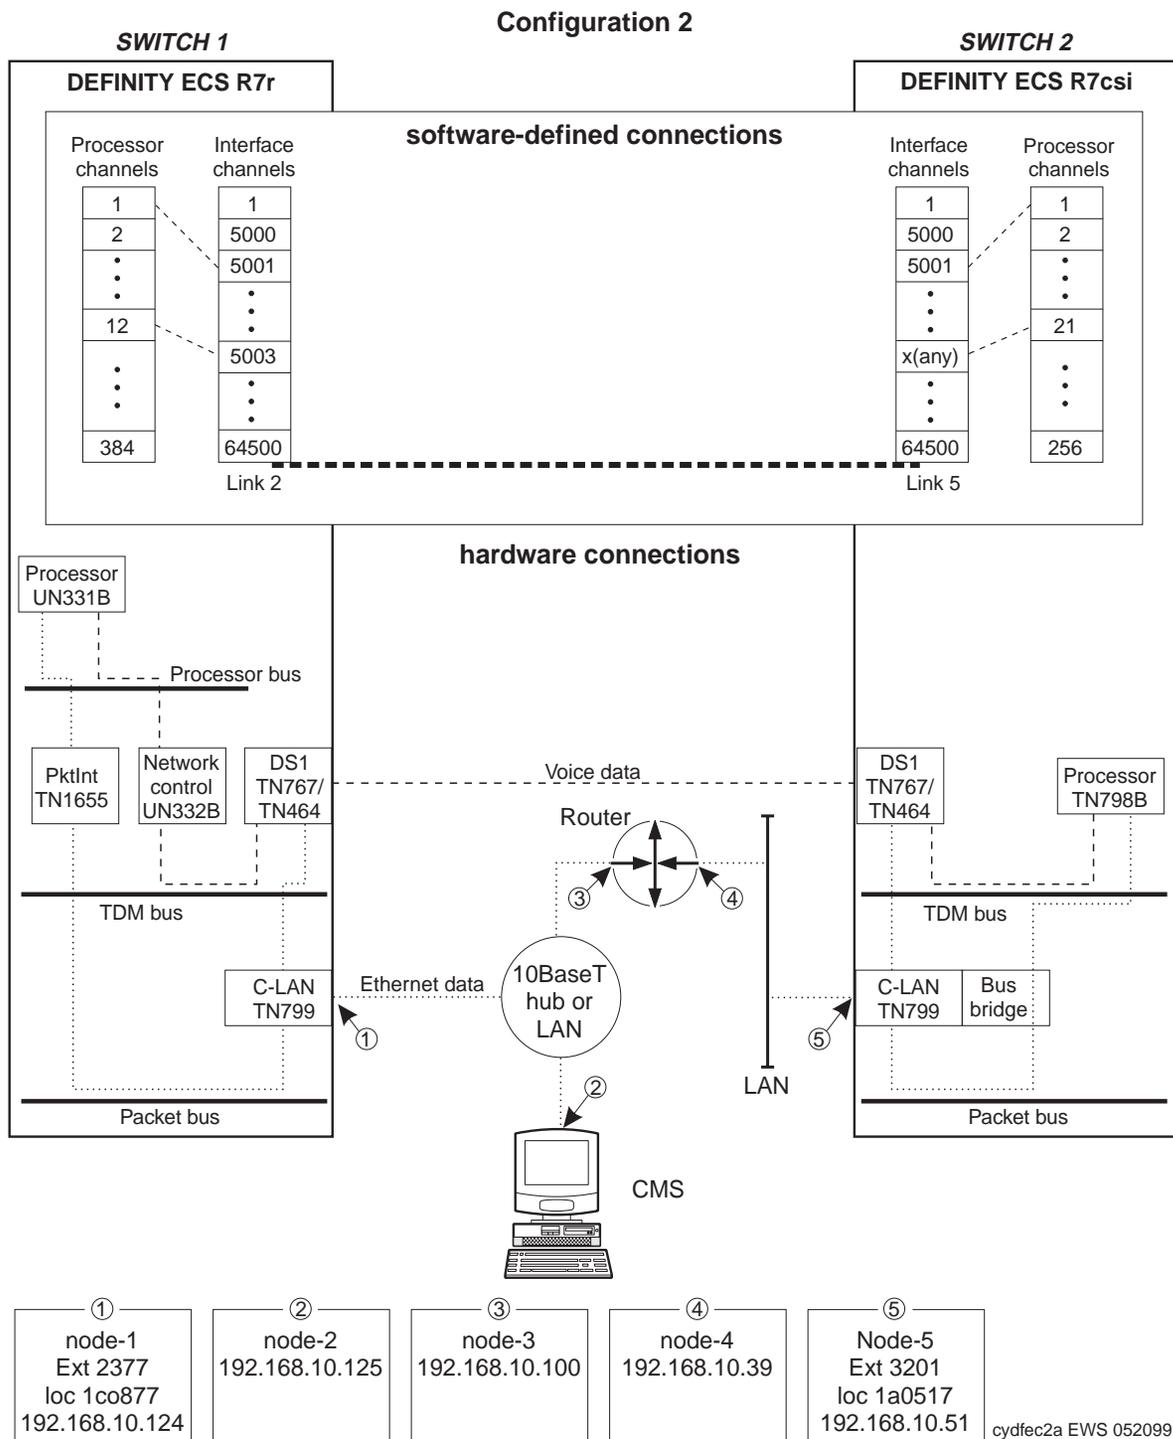

## Switch 1 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 1. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names form — enter `ch node-n`
- > Go to page 2

change node names		Page 2 of 6	
NODE NAMES			
Name	IP Address	Name	IP Address
<u>default</u>	<u>0 . 0 . 0 . 0</u>	_____	____.____.____.____
<u>node-1</u>	<u>192.168.10 . 124</u>	_____	____.____.____.____
<u>node-2</u>	<u>192.168.10 . 125</u>	_____	____.____.____.____
<u>node-3</u>	<u>192.168.10 . 100</u>	_____	____.____.____.____
<u>node-5</u>	<u>192.168.10 . 51</u>	_____	____.____.____.____

- > Enter values.

Field	Conditions/Comments
Name:	Enter node names for the following 4 nodes: <ul style="list-style-type: none"> <li>C-LAN Ethernet port on Switch 1</li> <li>CMS node (for consistency, use the host name of the CMS computer assigned during the CMS setup procedure — see <i>CentreVu CMS Software Installation and Setup</i>, 585-215-866)</li> <li>Interface on the router to the subnet of Switch 1.</li> <li>C-LAN Ethernet port on Switch 2.</li> </ul>
IP Address:	The unique IP addresses of the nodes named in the previous field.

- > Submit the screen

#### End

## Switch 1 Task — Assign Link via ethernet Data Module to the LAN

This task administers an ethernet data module for the ethernet connection to the CMS adjunct and to Switch 2. The data module defines a network interface — it associates a link number with a port address and node name for the C-LAN port used for this connection.

### Steps

#### Begin

> Open Data Module form — enter **a da n**

```
add data-module next
```

Page 1 of X

DATA MODULE

Data Extension: 2377                      Name: ethernet on link 2                      BCC: 2  
 Type: ethernet  
 Port: 01c0817  
 Link: 2  
 Enable Link? n

Node Name: node-1

Subnet Mask: 255.255.255.224  
 Broadcast Address: 192.168.10.127  
 Automatic Subnet Routing? y

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this link.
Port:	Ethernet connections must be assigned to port 17 on the C-LAN circuit pack.
Link:	The link number must be in the range 1 – 33 (for G3r), not previously assigned on this switch.
Enable Link?	Set to <b>y</b> after the processor channels have been assigned.
Name:	Information-only; appears in list generated by the “list data module” command.
Node Name:	The node name for the interface (C-LAN port) defined by this data module. This must be a name entered on the Node Names screen and must be unique on Switch 1.

**1 of 2**

Field	Conditions/Comments
Subnet Mask:	<p>The subnet mask defines the network and host parts of the IP address.</p> <p>The IP address for “node-1”, specified on the Node Names form for this data module is 192.168.10.124 — this is a 32-bit number written as four 8-bit octets in “dotted decimal” notation. The 192 in the first octet puts this address in the range of “Class C” addresses, which means the first 3 octets are used for the network ID and the fourth octet is used for host IDs.</p> <p>In the Subnet Mask for this example (192.168.10.224), the 224 in the fourth octet indicates that 3 high-order bits from the fourth octet are used to define subnets on the network 192.168.10 (224 = 128+64+32 = 11100000). Eight subnets can be defined with 3 bits and each subnet can have a maximum of 32 hosts, defined with the remaining 5 bits. Of these, only 6 subnets with 30 hosts each are usable. The usable IP addresses have the following ranges of values of the fourth octet within the 6 usable subnets: .33–.62, .65–.94, .97–.126, .129–.158, .161–.190, and .193–.222.</p> <p>The address for this data module, 192.168.10.124, is in the third subnet because .124 lies in the range .97–.126.</p> <p>See Chapter 1 for more information on IP addresses and subnetting.</p>
Broadcast Address:	<p>The Broadcast Address is used to broadcast messages to all hosts (nodes) on a given network or subnetwork. It is usually the IP address with the host portion set to all ones. In this example, the network portion of the IP address is 192.168.10, which is divided into 6 subnets. The broadcast address 192.168.10.127 broadcasts messages to all hosts on node-1’s subnetwork — i.e., all addresses in the range from 192.168.10.97 to 192.168.10.126. See <a href="#">Broadcast Address (page 228)</a> in Appendix A for more information on broadcast addresses.</p>
Automatic Subnet Routing?	<p>A <b>y</b> enables automatic routing among all IP addresses on the subnet to which the administered IP address belongs.</p> <p><b>n</b> disables automatic routing — in this case, you must administer IP routes (using the IP Routing screen) between IP addresses on the subnet. If network security is a concern, disabling automatic subnet routing limits internode access to paths that are explicitly administered.</p> <p>You must administer IP routes for any connections between nodes that are on different networks or subnetworks.</p>

2 of 2

&gt; Submit the screen

**End**

## Switch 1 Task — Assign IP Route (to the router)

This task specifies a route for messages handled by the ethernet port on the switch-1 C-LAN board (node 1). An IP route is required to send messages to Switch 2 because the nodes on that switch are on a different subnetwork from the node-1 subnetwork. Two IP routes are needed — one between node-1 and node-3 (the router port) and another between node-1 and node-5 (the destination node). The first IP route is needed in order to use node-3 as an IP-route gateway in the second IP route.

This task administers the first route — to the router.

### Steps

#### Begin

> Open the IP Routing form — enter **a ip n**

add ip-route next	Page 1 of 1
IP ROUTING	
Route Number: 1	
Destination Node: <u>node-3</u>	
Gateway: <u>node-1</u>	
C-LAN Board: <u>1c08</u>	
Metric: <u>0</u>	

[The system assigns the route number 1.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the final destination of this route.
Gateway:	Node name of the (IP-route) gateway by which the destination node is reached for this route. In this case, it is the node name of the ethernet port on the local C-LAN board.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route. For simple routes (that is, no intermediate nodes), the gateway node is on this circuit pack.
Metric:	Enter 0.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

#### End

## Switch 1 Task — Assign IP Route (to Switch 2)

This task specifies a route for messages handled by the ethernet port on the switch-1 C-LAN board (node 1). An IP route is required to send messages to Switch 2 because the nodes on that switch are on a different subnetwork from the node-1 subnetwork. Two IP routes are needed — one between node-1 and node-3 (the router port) and another between node-1 and node-5 (the destination node). The first IP route is needed in order to use node-3 as an IP-route gateway in the second IP route.

This task administers the second route.

### Steps

#### Begin

> Open the IP Routing form — enter **a ip n**

add ip-route next	Page 1 of 1
IP ROUTING	
Route Number: 2	
Destination Node: <u>node-5</u>	
Gateway: <u>node-3</u>	
C-LAN Board: <u>1c08</u>	
Metric: <u>0</u>	

[The system assigns the route number 2.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the final destination of this route.
Gateway:	Node name of the IP-route gateway by which the destination node is reached for this route. In this case, it is the node name of the router port.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route.
Metric:	Enter 0.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

#### End

**Note:** An IP route from node-1 to node-2, the CMS, is not necessary because these two nodes are on the same subnet and Automatic Subnet Routing is enabled (on the Data Module screen).

## Switch 1 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on the node 1 switch.

### Steps

#### Begin

> Open the Processor Channel Assignment form — enter **ch comp**

```
change communications-interface processor-channels
                                                    Page 1 of X
PROCESSOR CHANNEL ASSIGNMENT
```

Proc Chan	Enable	Appl.	Gtwy To	Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	y	mis		s	2 5001	node-2	0	1 1	
2:	n						0		
3:	n						0		
4:	n						0		
:									
12:	y	dcs		s	2 5003	node-5	0	12 21	2
:									
64:	n						0		

> Enter values

Field	Conditions/Comments
<b>Processor Channel 1:</b> (connection to CMS)	
Enable	Set to <b>y</b> .
Appl.	Enter <b>mis</b> for the CMS connection on Processor Channel 1.
Mode	Set the Mode to <b>s</b> (“server”) on both switches for connections to CMS.
Interface Link	This must match the link number assigned on the node-1 data module screen.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500. The value 5001 is recommended for CMS and 5003 is recommended for the DCS connections.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	A value of <b>0</b> allows any available interface channel on the destination node to be used for this connection. The Interface Channel number on the Switch-2 Processor Channel screen must also be set to <b>0</b> .

Field	Conditions/Comments
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	This field is not used for CMS.
<b>Processor Channel 12:</b> (ethernet connection to Switch 2)	
Enable	Set to <b>y</b> .
Appl.	Enter <b>dcs</b> for the DCS connection on Processor Channel 12.
Mode	Set the node-5 Mode field to <b>c</b> (“client”) on the Processor Channel Assignment screen on Switch 2.
Interface Link	This must match the link number assigned on the node-1 data module screen.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500. The value 5001 is recommended for CMS and 5003 is recommended for the DCS connections.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	A value of <b>0</b> allows any available interface channel on the destination node to be used for this connection. The Interface Channel number on the Switch-2 Processor Channel screen must also be set to <b>0</b> .
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID. This is the Local Node Number on the dial plan of the destination switch.

> Submit the screen

**End**

## Switch 2 Task — Enable Bus Bridge Connectivity

This task enables the bus bridge functionality on the C-LAN circuit pack to provide a path between the packet bus and the processor.

**Note:** Bus Bridge Connectivity is used on the csi model only. This task may have been completed when the C-LAN circuit pack was installed.

### Steps

#### *Begin*

- > Open the Maintenance-Related System Parameters form — enter **ch sys ma**
- > Go to page 2 and skip to the Packet Intf2? field near the bottom of the screen.

```
change system-parameters maintenance Page 2 of 3

      MAINTENANCE-RELATED SYSTEM PARAMETERS

MINIMUM MAINTENANCE THRESHOLDS ( Before Notification )
      TTRs: 4          CPTRs: 1          Call Classifier Ports: 0
      MMIs: 0          VCs: 0

TERMINATING TRUNK TRANSMISSION TEST ( Extension )
      Test Type 100:          Test Type 102:          Test Type 105:

ISDN MAINTENANCE
      ISDN-PRI Test Call Extension:          ISDN-BRI Service SPID:

DS1 MAINTENANCE
      DS0 Loop-Around Test Call Extension:

LOSS PLAN ( Leave Blank if no Extra Loss is Required )
      Minimum Number of Parties in a Conference Before Adding Extra Loss:

SPE OPTIONAL BOARDS
      Packet Intf1? y          Packet Intf2? y
      Bus Bridge: 01a05      Inter-Board Link Timeslots Pt0: 6 Pt1: 1 Pt2: 1
```

> Enter values

Field	Conditions/Comments
Packet Intf2?	Enables the bus bridge.
Bus Bridge:	Location of the C-LAN circuit pack. If the system has two C-LANs, only one is administered for bus bridge.
Inter-Board Link Timeslots: Pt0, Pt1, Pt2	Specifies the bandwidth used on the 3 ports of the Inter-Board Link. The total number of timeslots assigned cannot exceed 11. Pt0 carries PPP traffic and can have 1–9 timeslots. Pt1 carries maintenance messages and can have 1–3 timeslots. Pt2 carries broadcast messages and can have 1–3 timeslots.

> Submit the screen

#### *End*

## Switch 2 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network on the Node Names screen. This screen is administered on Switch 2. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in a network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names form — enter `ch node-n`
- > Go to page 2

change node names		Page 2 of 6	
NODE NAMES			
Name	IP Address	Name	IP Address
<u>default</u>	<u>0 .0 .0 .0</u>	_____	____.____.____.____
<u>node-1</u>	<u>192.168.10 .124</u>	_____	____.____.____.____
<u>node-2</u>	<u>192.168.10 .125</u>	_____	____.____.____.____
<u>node-4</u>	<u>192.168.10 .39</u>	_____	____.____.____.____
<u>node-5</u>	<u>192.168.10 .51</u>	_____	____.____.____.____

- > Enter values.

Field	Conditions/Comments
Name:	Enter node names for the following 4 nodes: <ul style="list-style-type: none"> <li>• C-LAN Ethernet port on Switch 1</li> <li>• CMS node (for consistency, use the host name of the CMS computer assigned during the CMS setup procedure — see <i>CentreVu CMS Software Installation and Setup</i>, 585-215-866)</li> <li>• Interface on the router to the subnet of Switch 2.</li> <li>• C-LAN Ethernet port on Switch 2.</li> </ul>
IP Address:	The unique IP addresses of the nodes named in the previous field.

- > Submit the screen

#### End

## Switch 2 Task— Assign Link via ethernet Data Module to the LAN

This task administers an ethernet data module on Switch 2 for the ethernet connection to Switch 1. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

### Steps

#### Begin

> Open Data Module form — enter **ad da n**

```

add data next
                                                    Page 1 of X
                                DATA MODULE

Data Extension: 3201                                Name: ethernet on link 5      BCC: 2
    Type: ethernet
    Port: 01a0517
    Link: 5
    Enable Link? n

    Node Name: node-5

    Subnet Mask: 255.255.255.224
Broadcast Address: 192.168.10.63
Automatic Subnet Routing? y
    
```

[This data module is assigned the next available extension, 3020.]

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this link.
Port:	Ethernet connections must be assigned to port 17 on the C-LAN circuit pack. In this example, the C-LAN circuit pack is in slot 1a05.
Link:	The link number must be in the range 1 – 25 (R7csi), not previously assigned on this switch.
Enable Link?	Set to <b>y</b> after the processor channels have been assigned.
Name:	Information-only; appears in list generated by the “list data module” command.
Node Name:	The node name for the interface (C-LAN port) defined by this data module. This must be a name entered on the Node Names screen.

**1 of 2**

Field	Conditions/Comments
Subnet Mask:	<p>Defines the network and host parts of the IP address. This must match the subnet mask assigned on the Switch-1 data module.</p> <p>In this example, the subnet mask 255.255.255.224 divides the network 192.168.10 into 6 (usable) subnets. See <a href="#">Switch 1 Task — Assign Link via ethernet Data Module to the LAN (page 55)</a> for an explanation of this subnet. See <a href="#">Subnetting (page 23)</a> in Chapter 1 for a detailed description of subnetting.</p>
Broadcast Address:	<p>The Broadcast Address is used to broadcast messages to all hosts (nodes) on a given network or subnetwork. It is usually the IP address with the host portion set to all ones. In this example, node-5's IP address is 192.168.10.51, which is in the range of the first of the six subnets (defined by the subnet mask above). This subnet is defined by the IP address, 192.158.10.63. (which corresponds to all ones in the host portion). To broadcast to all addresses on this subnet, the broadcast address is set equal to this subnet defining address. This will cause broadcast messages to go to all addresses in the range from 192.168.10.32 to 192.168.10.63. See <a href="#">Broadcast Address (page 228)</a> in Appendix A for more information on broadcast addresses.</p>
Automatic Subnet Routing?	<p><b>y</b> allows automatic routing of all IP addresses on the subnet of the administered Ethernet IP address. If set to <b>n</b>, you must manually administer explicit IP Routes to addresses on the subnet.</p>

2 of 2

&gt; Submit the screen

**End**

## Switch 2 Task — Assign IP Route (to the router)

This task specifies a route for messages handled by the ethernet port on the switch-2 C-LAN board (node 5). An IP route is required to send messages to Switch 1 because the nodes on that switch are on a different subnetwork from the node-5 subnetwork. Three IP routes are needed — one between node-5 and node-4 (the router port) and two others between node-5 and the destination nodes, node-1 and node-2. The first IP route is needed in order to use node-4 as an IP-route gateway in the other IP routes.

This task administers the first route to the router.

### Steps

#### Begin

> Open the IP Routing form — enter **a ip n**

add ip-route next	Page 1 of 1
IP ROUTING	
Route Number: 1	
Destination Node: <u>node-4</u>	
Gateway: <u>node-5</u>	
C-LAN Board: <u>1c05</u>	
Metric: <u>0</u>	

[The system assigns the route number 1.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the final destination of this route.
Gateway:	Node name of the (IP-route) gateway by which the destination node is reached for this route. In this case, it is the node name of the ethernet port on the local C-LAN board.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route.
Metric:	Enter 0.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

#### End

## Switch 2 Task — Assign IP Route (to Switch 1)

This task specifies a route for messages handled by the ethernet port on the switch-2 C-LAN board (node 5). An IP route is required to send messages to Switch 1 because the nodes on that switch are on a different subnetwork from the node-5 subnetwork. Three IP routes are needed — one between node-5 and node-4 (the router port) and two others between node-5 and the destination nodes, node-1 and node-2. The first IP route is needed in order to use node-4 as an IP-route gateway in the other IP routes.

This task administers the route to Switch 1.

### Steps

#### Begin

> Open the IP Routing form — enter **a ip n**

add ip-route next	Page 1 of 1
IP ROUTING	
Route Number: 2	
Destination Node: <u>node-1</u>	
Gateway: <u>node-4</u>	
C-LAN Board: <u>1c05</u>	
Metric: <u>0</u>	

[The system assigns the route number 2.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the final destination of this route.
Gateway:	Node name of the IP-route gateway by which the destination node is reached for this route. In this case, it is the node name of the router port.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route.
Metric:	Enter 0.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

#### End

## Switch 2 Task — Assign IP Route (to the CMS)

This task specifies a route for messages handled by the ethernet port on the switch-2 C-LAN board (node 5). An IP route is required to send messages to Switch-1 and the CMS because the nodes on that switch are on a different subnetwork from the node-5 subnetwork. Three IP routes are needed — one between node-5 and node-4 (the router port) and two others between node-5 and the destination nodes, node-1 and node-2. The first IP route is needed in order to use node-4 as an IP-route gateway in the other IP routes.

This task administers the route to the CMS.

### Steps

#### Begin

> Open the IP Routing form — enter **a ip n**

```

add ip-route next                               Page 1 of 1
                                               IP ROUTING

Route Number: 3
Destination Node: node-2
Gateway: node-4
C-LAN Board: 1c05
Metric: 0

```

[The system assigns the route number 3.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the final destination of this route.
Gateway:	Node name of the IP-route gateway by which the destination node is reached for this route. In this case, it is the node name of the router port.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route.
Metric:	Enter 0.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

#### End

## Switch 2 Task— Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on Switch 2.

### Steps

#### Begin

> Open the Processor Channel Assignment form — enter **ch comp**

```
change communications-interface processor-channels
```

Page 1 of X

PROCESSOR CHANNEL ASSIGNMENT

Proc Chan	Enable	Appl.	Gtwy To	Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	y	mis		s	5 5001	node-2	0	1 1	
2:	n			-			0		
3:	n			-			0		
4:	n			-			0		
:									
21:	y	dcs		c	5 0	node-1	5003	21 12	1
:									
64:	n			-			0		

> Enter values

Field	Conditions/Comments
<b>Processor Channel 1:</b> (connection to CMS)	
Enable	Set to <b>y</b> .
Appl.	Enter <b>mis</b> for the CMS connection on Processor Channel 1.
Mode	Set the Mode to <b>s</b> (“server”) on both switches for connections to CMS.
Interface Link	This must match the link number assigned on the node-5 data module screen on this switch.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500. The value 5001 is recommended for CMS and 5003 is recommended for the DCS connections.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	A value of <b>0</b> allows any available interface channel on the destination node to be used for this connection. The Interface Channel number on the Switch-2 Processor Channel screen must also be set to <b>0</b> .

Field	Conditions/Comments
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	This field is not used for CMS.
<b>Processor Channel 21:</b> (ethernet connection to Switch 1)	
Enable	Set to <b>y</b> .
Appl.	<b>dcS</b> indicates that this connection will carry DCS data.
Mode	Node-5 will be the “client” on this session. Set node-1 (on Switch 1) to “server” ( <b>s</b> ).
Interface Link	This must match the link number assigned on the node-5 data module screen.
Interface Chan	A value of <b>0</b> allows any available interface channel to be used for this connection. The Destination Port number on the Switch-1 Processor Channel screen must also be set to <b>0</b> .
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	This number must match the Interface Channel number assigned on the Switch-1 Processor Channel screen.
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID. This is the Local Node Number on the dial plan of the destination switch.

> Submit the screen

**End**

## Enable links and processor channels

You must enable links and processor channels before the connections can be used.

To enable a link, open its data module screen (**ch da [ext]**) and set the Enable Link? field to **y**.

[note: to view a list of assigned data modules and their extensions, enter the “list data-module” command (**l da**)]

To enable the processor channels, open the processor channel screen (**ch com p**) and set the Enable field to **y** for each assigned processor channel.


**Note:** 1. You must disable a link or processor channel before you can change its parameters.

**Note:** 2. The **busy-out** command overrules the data module Enable Link? field.

**Note:** 3. On the C-LAN boards, low-level connectivity can remain intact when higher-level applications such as DCS are not functioning. For example, an external ping to a C-LAN’s ethernet port could be successful even when the board is busied-out. When debugging connectivity problems, pinging only checks low-level connectivity.

## Configuration 3: R7si←—x.25 —→ R7r Gateway ←—ethernet—→ R7si

In this configuration, a DEFINITY ECS R7r acts as a gateway between two other nodes — one connected via X.25 to an R7si and the other via ethernet to another R7si.

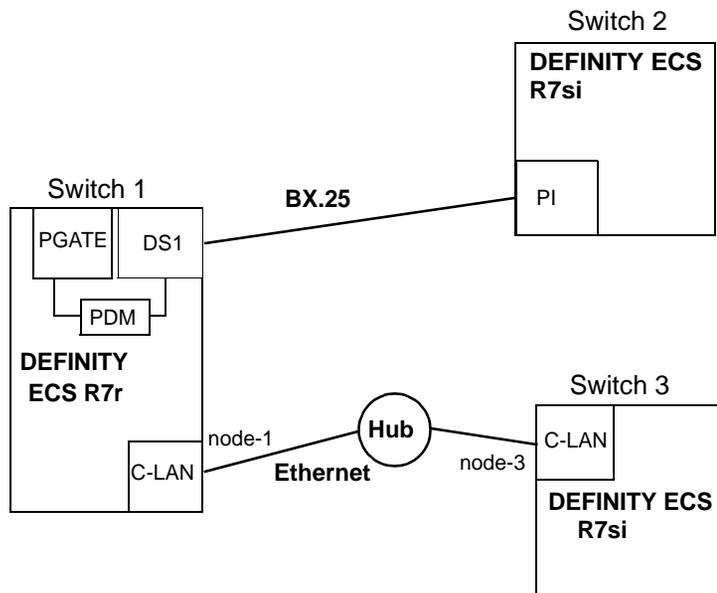

### Task Summary

The following tasks need to be completed for Switch 1, Switch 2, and Switch 3:


- 1 Review checklist
- 2 Switch 1 administration
  - a Assign node names
  - b Assign pdm data module
  - c Assign link (via a data module) to Switch 2
  - d Assign link (via a data module) to the LAN
  - e Assign processor channels
- 3 Switch 2 administration
  - a Assign link (via a data module) to node 1
  - b Assign processor channels
- 4 Switch 3 administration
  - a Assign node names
  - b Assign link (via a data module) to the LAN
  - c Assign processor channels
- 5 Enable links and processor channels

## Prerequisite Administration

There are some system administration tasks that need to be completed before you can proceed with the connectivity administration described in this section.

Review the checklist of prerequisite administration tasks in [Checklist for Prerequisite Administration \(page 34\)](#), before proceeding with the connectivity administration in this section.

Configuration 3

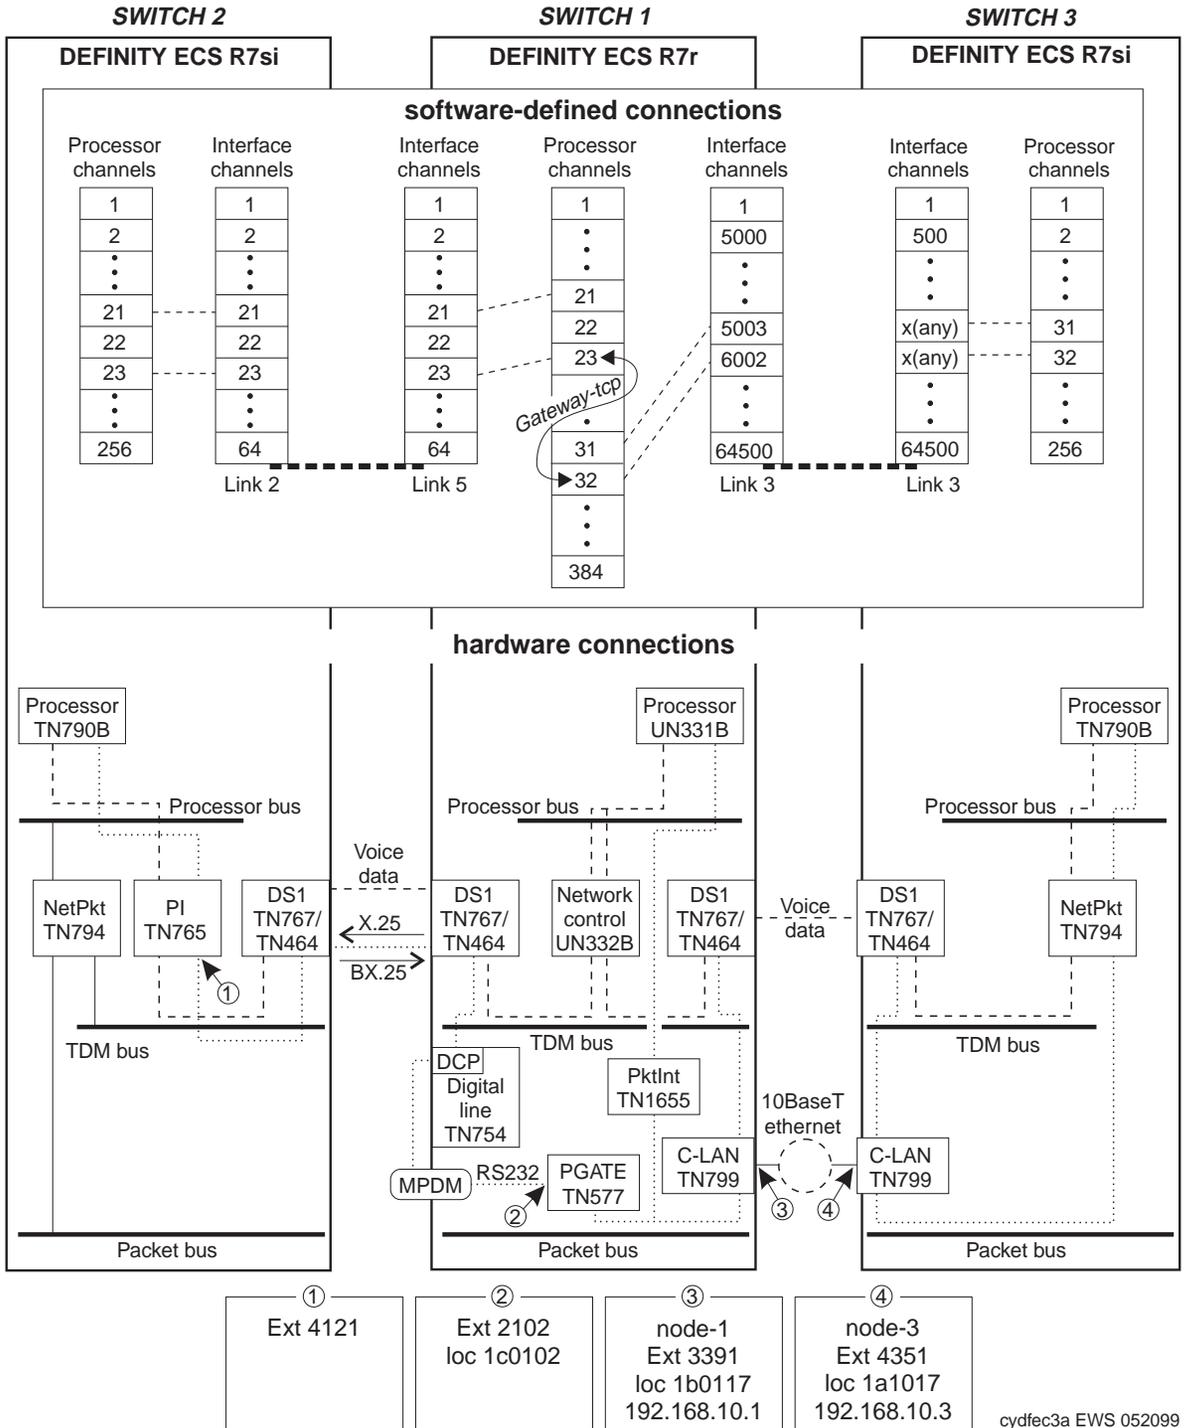

## Switch 1 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 1. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names form — enter `ch node-n`
- > Go to page 2.

```

change node-names
                                                    Page 2 of 6

                                NODE NAMES

Name          IP Address      Name          IP Address
default       0 .0 .0 .0          _____  _____.____.____.____
node-1        192.168.10 .1       _____  _____.____.____.____
node-3        192.168.10 .3       _____  _____.____.____.____
_____      _____.____.____.____  _____  _____.____.____.____
    
```

- > Enter values.

Field	Conditions/Comments
Name	Enter unique node names for the following 2 nodes: <ul style="list-style-type: none"> <li>• C-LAN Ethernet port on Switch 1</li> <li>• C-LAN Ethernet port on Switch 3.</li> </ul>
IP Address	The unique IP addresses of the nodes named in the previous field.

- > Submit the screen

#### End

## Switch 1 Task — Assign pdm Data Module

This task administers a pdm data module for the connection between the PGATE board and the DS1 board for the connection to node-2. The data module associates a link number with a port address and extension number for the PGATE port used for this connection.

### Steps

#### Begin

> Open the Data Module form — enter **a da n**

```

add data-module next                                     Page 1 of 2

                                Data Module

Data Extension: 30           Name: pdm on port 1c0102           BCC:
Type: pdm                   COS: 1           Remote Loop-Around Test? n
Port: 01C0102               COR: 1           Secondary data module? n
ITC: restricted           TN: 1           Connected to: dte

ABBREVIATED DIALING
List1: ___

SPECIAL DIALING OPTION:

ASSIGNED MEMBER (Station with a data extension button for this data module)
      Ext      Name
1: 1002     station name
    
```

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Port:	This example means that the PGATE circuit pack is in slot 01c01 and link 5 uses port 02.
ITC:	Enter <b>restricted</b> . ( <b>unrestricted</b> is used only for wideband transmission.)
Name:	Information-only; appears in list generated by the “list data module” command.
COS:	The values for these fields will be specified by the system administrator.
COR:	
TN:	
Remote Loop-Around Test?	Set to <b>n</b> unless testing.
	<b>1 of 2</b>

Field	Conditions/Comments
Secondary data modules?	Enter <b>n</b> .
Connected To	Enter <b>dte</b> .
Keep the default values for the rest of the fields.	
	<b>2 of 2</b>

## Switch 1 Task — Assign Link via x.25 Data Module to Switch 2

This task administers an x.25 data module for the connection to node 2. The data module associates a link number with a port address and extension number for the PGATE port used for this connection.

### Steps

#### Begin

> If a PGATE circuit pack is not already administered in slot 1c01, insert the circuit pack in the slot and enter **add pgate 1c01**, then fill in the PGATE screen.

>Open the Data Module form — enter **a da n**

```

add data-module next
                                                    Page 1 of 2
                        DATA MODULE
Data Extension: 2102                Name: x.25 on link 5 to sw-2
  Type: x.25                        COS: 1                Remote Loop-Around Test? n
  Port: 01C0102                    COR: 1                Destination Number: external
  Baud Rate: 9600                    TN: 1                Establish Connection? y
Endpoint Type: adjunct            DTE/DCE: dte        Connected Data Module: 4121
  Link: 5                            Enable Link? n                Error Logging? n

Permanent Virtual Circuit? y        Highest PVC Logical Channel: 64
Switched Virtual Circuit? n
    
```

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Port:	This example means that the PGATE circuit pack is in slot 01c01 and link 5 uses port 02.
Baud Rate:	Set to <b>9600</b> for DCS connections to vs or si models, or to an r model with an external 9600 baud data line.  Set to <b>switched</b> for r-to-r connections with common channel signaling on DS1 trunks.  Set to 9600 for connections to Intuity AUDIX.  Set to either <b>9600</b> or <b>19200</b> for CMS, depending on the physical connectivity.
Endpoint Type:	For DCS, CMS, or Intuity AUDIX, set this field to <b>adjunct</b> .
Link:	The link number must be in the range 1 – 33 (for R7r), not previously assigned on this switch.
<i>1 of 2</i>	

Field	Conditions/Comments
Name:	Information-only; appears in list generated by the “list data module” command.
COS:	The values for these fields will be specified by the system administrator.
COR:	
TN:	
DTE/DCE:	The DTE/DCE assignments must be opposites on the two ends of the connection. Use <b>dce</b> for node 2.
Enable Link?	Set to <b>y</b> after the processor channels have been assigned.
Remote Loop-Around Test?	Set to <b>n</b> unless testing.
Destination Number:	<b>external</b> is used when connecting an r-model to an si-model. For an r-to-r connection, enter the TAC+extension.
Establish Connection?	<b>y</b> means that this switch will be responsible for the call setup for this connection. Enter <b>n</b> when administering the data module for Switch 2.
Connected Data Module	Extension of node-2 data module.
Error Logging?	Set to <b>n</b> for normal operations. Set to <b>y</b> for testing — logs all data module errors.
Permanent Virtual Circuit?	Always <b>y</b> for DCS, CMS, and Intuity AUDIX.
Switched Virtual Circuit?	Always <b>n</b> for DCS, CMS, and Intuity AUDIX.
Highest PVC Logical Channel:	Set to 64 (the default) for normal operations.
	<b>2 of 2</b>

> Submit the screen

**End**

## Switch 1 Task — Assign Link via ethernet Data Module to the LAN

This task administers an ethernet data module for ethernet connections. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

### Steps

#### *Begin*

> Open Data Module form — enter **a da n**

```
add data module next                                     Page 1 of x
                                     DATA MODULE
Data Extension: 3391                                     Name: ethernet on link 3   BCC: 2
  Type: ethernet
  Port: 01b0117
  Link: 3
  Enable Link? n

  Node Name: node-1
  Subnet Mask: 255.255.255.0
  Broadcast Address: 192.168.10.255
  Automatic Subnet Routing: y
```

> Enter values.

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Port:	In this example, the C-LAN circuit pack is in slot 01b01; the ethernet connection is through port 17.
Link:	The link number must be in the range 1 – 33 (for R7r).
Enable Link?	Set to <b>y</b> after the processor channels have been assigned.
Name:	Information-only; appears in list generated by the “list data module” command.
Node Name:	The node name for the interface defined by this data module. This must be a name entered on the Node Names screen.
Subnet Mask	Defines the network and host parts of the IP address. This example mask is the default for a Class-C IP address. It indicates no subnetting on this network (192.168.10).
Broadcast Address	Specifies that all IP addresses on the network 192.168.10 are targets for broadcast messages. See <a href="#">Broadcast Address (page 228)</a> in Appendix A for more information on broadcast addresses
Automatic Subnet Routing:	<b>y</b> allows automatic routing of all IP addresses on the subnet of the administered Ethernet IP address. If set to <b>n</b> , you must manually administer explicit IP Routes to addresses on the subnet.

> Submit the screen

**End**

## Switch 1 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on the node-1 switch.

### Steps>

#### Begin

> Open Processor Channel Assignment form — enter **ch com p**

```
change communications-interface processor-channels
```

Page 1 of X

PROCESSOR CHANNEL ASSIGNMENT

Proc Chan	Enable	Appl.	Gtwy To Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	<u>n</u>	_____	—	—	_____	<u>0</u>	—	—
2:	<u>n</u>	_____	—	—	_____	<u>0</u>	—	—
:								
21:	<u>y</u>	<u>dcs</u>	—	<u>5</u> <u>21</u>	_____	<u>0</u>	<u>21</u> <u>21</u>	<u>2</u>
:								
23:	<u>y</u>	<u>gtwy-tcp</u>	<u>32</u>	<u>5</u> <u>23</u>	_____	<u>0</u>	<u>23</u> <u>23</u>	—
:								
31:	<u>y</u>	<u>dcs</u>	<u>s</u>	<u>3</u> <u>5003</u>	<u>node-3</u>	<u>0</u>	<u>31</u> <u>31</u>	<u>3</u>
:								
32:	<u>y</u>	<u>gtwy-tcp</u>	<u>23</u>	<u>3</u> <u>6002</u>	<u>node-3</u>	<u>0</u>	<u>32</u> <u>32</u>	—
:								
256:	<u>n</u>	_____	—	—	_____	<u>0</u>	—	—

**Note:** The Processor Channel number, the Interface Channel number, and the Local and Remote Session numbers do not need to be the same number but they should be made the same whenever possible to simplify network “bookkeeping” and diagnostics.

> Enter values

Field	Conditions/Comments
<b>Processor Channel 21:</b> (X.25 connection to Switch 2)	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dcs</b> for DCS signaling.
Mode	Used for TCP/IP connections only.
Interface Link	This must match the link number assigned on the x.25 data module screen.
Interface Chan	The interface channel number must be in the range 1 – 64 for an X.25 link.
Destination Node	Used for TCP/IP connections only.
Destination Port	Used for TCP/IP connections only.
<b>1 of 3</b>	

Field	Conditions/Comments
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.
<b>Processor Channel 23:</b> (The X.25 side of the gateway)	
Enable	Set to <b>y</b> .
Appl.	Use <b>gtwy-tcp</b> for conversion between X.25 and TCP/IP.
Gateway To	Indicates a software connection between processor channels 23 and 32.
Mode	Used for TCP/IP connections only.
Interface Link	This must match the link number assigned on the x.25 data module screen.
Interface Chan	The interface channel number must be in the range 1 – 64 for an X.25 link.
Destination Node	Used for TCP/IP connections only.
Destination Port	Used for TCP/IP connections only.
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Leave blank for <b>gtwy-tcp</b> .
<b>Processor Channel 31:</b> (ethernet connection to Switch 3)	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dcs</b> for DCS signaling.
Mode	Node-1 is the “server” for this session. Set node-3 to “client” ( <b>c</b> ).
Interface Link	This must match the link number assigned on the node-1 data module screen.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500. The value 5003 is recommended for the DCS connections.
<b>2 of 3</b>	

Field	Conditions/Comments
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	A value of 0 allows any available interface channel on the destination node to be used for this connection. The Interface Channel number on the Switch-3 Processor Channel screen must also be set to 0.
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.
<b>Processor Channel 32:</b> (The Ethernet side of the gateway)	
Enable	Set to <b>y</b> .
Appl.	Use <b>gtwy-tcp</b> for conversion between X.25 and TCP/IP.
Gateway To	Indicates a software connection between processor channels 32 and 23.
Mode	Node-1 is the "server" for this session. Set node-3 to "client" ( <b>c</b> ).
Interface Link	This must match the link number assigned on the data module screen.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	A value of 0 allows any available interface channel on the destination node to be used for this connection. The Interface Channel number on the Switch-3 Processor Channel screen must also be set to 0.
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Leave blank for <b>gtwy-tcp</b> .
<b>3 of 3</b>	

> Submit the screen

**End**

## Switch 2 Task — Assign Link via procr-intf Data Module to Switch 1

This task administers a processor-interface data module for the x.25 connection to node 1. The data module associates a link number with a physical channel number and extension number for the PI port used for this connection.

### Steps

#### Begin

> Open Data Module form — enter **a da n**

```
add data-module next
Page 1 of 1

                                DATA MODULE

Data Extension: 4121                Name: x.25 on link 2 to node-1
      Type: procr-intf              COS: 1           Maintenance Extension: 4191
Physical Channel: 02                COR: 1           Destination Number: 8122102
      ITC: Restricted                TN: 1           Establish Connection? n
      Link: 2                        DTE/DCE: dce    Connected Data Module: _____
                                Enable Link: n

ABBREVIATED DIALING
List1: _____

SPECIAL DIALING OPTION: _____

ASSIGNED MEMBER (Station with a data extension button for this data module)

      Ext                Name
1.
```

> Enter values.

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Physical Channel:	This must be the same as the link number.
ITC:	Enter <b>restricted</b> . ( <b>unrestricted</b> is used only for wideband transmission.)
Link:	The link number must be in the range 1 –25 (for R7si), not previously assigned on this switch.
Name:	Information-only; appears in list generated by the “list data module” command.
COS:	The values for these fields will be specified by the system administrator.
COR:	
TN:	
DTE/DCE:	The DTE/DCE assignments must be opposites on the two ends of the connection. Use <b>dte</b> for node 1.

1 of 2

Field	Conditions/Comments
Enable Link?:	Set to <b>y</b> after the processor channels have been assigned.
Maintenance Extension:	Specified on dial plan.
Destination Number:	TAC (812) + extension (2102) of the data module on the far end that will establish the connection.
Establish Connection?	<b>n</b> means that the switch at the remote end of this connection (Switch 1 in this case) will be responsible for the call setup. Enter <b>y</b> when administering the data module for Switch 1.
Connected Data Module:	This is an information-only field.
Keep the default values for the rest of the fields.	
<b>2 of 2</b>	

## Switch 2 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on Switch 2.

### Steps

#### Begin

> Open Processor Channel Assignment form — enter **ch com p**

```
change communications-interface processor-channels
```

Page 1 of X

PROCESSOR CHANNEL ASSIGNMENT

Proc Chan	Enable	Appl.	Gtwy To Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	<u>n</u>	_____	—	—	_____	<u>0</u>	—	—
2:	<u>n</u>	_____	—	—	_____	<u>0</u>	—	—
:								
21:	<u>y</u>	<u>dc</u> <u>s</u>	—	<u>2</u> <u>21</u>	_____	<u>0</u>	<u>21</u> <u>21</u>	<u>1</u>
23:	<u>y</u>	<u>dc</u> <u>s</u>	—	<u>2</u> <u>23</u>	_____	<u>0</u>	<u>23</u> <u>23</u>	<u>3</u>
:								
256:	<u>n</u>	_____	—	—	_____	<u>0</u>	—	—

**Note:** The Processor Channel number, the Interface Channel number, and the Local and Remote Session numbers do not need to be the same number but they should be made the same whenever possible to simplify network “bookkeeping” and diagnostics.

> Enter values

Field	Conditions/Comments
<b>Processor Channel 21:</b> (X.25 connection to Switch 1)	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dc</b> <b>s</b> for DCS signaling.
Mode	Used for TCP/IP connections only.
Interface Link	This must match the link number assigned on the procr-intf data module screen.
Interface Chan	The interface channel number must be in the range 1 – 64 for an X.25 link.
Destination Node	Used for TCP/IP connections only.
Destination Port	Used for TCP/IP connections only.

**1 of 2**

Field	Conditions/Comments
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch. This is usually called the "node number."
<b>Processor Channel 23:</b> (connection to Switch 1 for gateway to Switch 3)	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dcS</b> for DCS signaling.
Mode	Used for TCP/IP connections only.
Interface Link	This must match the link number assigned on the procr-intf data module screen.
Interface Chan	The interface channel number must be in the range 1 – 64 for an X.25 link.
Destination Node	Used for TCP/IP connections only.
Destination Port	Used for TCP/IP connections only.
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.

2 of 2

> Submit the screen

**End**

## Switch 3 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 3. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names form — enter `ch node-n`
- > Go to page 2.

```
change node-names Page 2 of 6
```

NODE NAMES			
Name	IP Address	Name	IP Address
<u>default</u>	<u>0 .0 .0 .0</u>	_____	____.____.____.____
<u>node-1</u>	<u>192.168.10 .1</u>	_____	____.____.____.____
<u>node-3</u>	<u>192.168.10 .3</u>	_____	____.____.____.____
_____	____.____.____.____	_____	____.____.____.____

- > Enter values.

Field	Conditions/Comments
Name	Enter unique node names for the following 2 nodes: <ul style="list-style-type: none"> <li>C-LAN Ethernet port on Switch 3</li> <li>C-LAN Ethernet port on Switch 1.</li> </ul>
IP Address	The unique IP addresses of the nodes named in the previous field.

- > Submit the screen

#### End

## Switch 3 Task — Assign Link via ethernet Data Module to the LAN

This task administers an ethernet data module on Switch 3 for the ethernet connection to Switch 1. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

### Steps

#### *Begin*

> Open Data Module form — enter **a da n**

```
add data module next                               Page 1 of x
                                         DATA MODULE
Data Extension: 4531                               Name: ethernet on link 3   BCC: 2
      Type: ethernet
      Port: 01a1017
      Link: 3
Enable Link? n

      Node Name: node-3
      Subnet Mask: 255.255.255.0
Broadcast Address: 192.168.10.255

Automatic Subnet Routing? y
```

> Enter values.

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Port:	In this example, the C-LAN circuit pack is in slot 01a10; the ethernet connection is through port 17.
Link:	The link number must be in the range 1 – 25 (for R7si), not previously assigned on this switch.
Enable Link?	Set to <b>y</b> after the processor channels have been assigned.
Name:	Information-only; appears in the “list data module” command list.
Node Name:	The node name for the interface defined by this data module. This must be a name entered on the Node Names screen.
Subnet Mask	Defines the network and host parts of the IP address. This example mask is the default for a Class-C IP address. It indicates no subnetting on this network (192.168.10).
Broadcast Address	Specifies that all IP addresses on the network 192.168.10 are targets for broadcast messages. See <a href="#">Broadcast Address (page 228)</a> in Appendix A for more information on broadcast addresses.
Automatic Subnet Routing:	<b>y</b> allows automatic routing of all IP addresses on the subnet of the administered Ethernet IP address. If set to <b>n</b> , you must manually administer explicit IP Routes to addresses on the subnet.

> Submit the screen

**End**

### Switch 3 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on Switch 3.

#### Steps

##### Begin

> Open Processor Channel Assignment form — enter **ch com p**

```
change communications-interface processor-channels
```

Page 1 of X

PROCESSOR CHANNEL ASSIGNMENT

Proc Chan	Enable	Appl.	Gtwy To	Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	<u>n</u>	_____		—	—	_____	<u>0</u>	—	—
2:	<u>n</u>	_____		—	—	_____	<u>0</u>	—	—
:									
31:	<u>y</u>	<u>dc</u> <u>s</u>		<u>c</u>	<u>3</u> <u>0</u>	<u>node-1</u>	<u>5003</u>	<u>31</u> <u>31</u>	<u>1</u>
:									
32:	<u>y</u>	<u>dc</u> <u>s</u>		<u>c</u>	<u>3</u> <u>0</u>	<u>node-1</u>	<u>6002</u>	<u>32</u> <u>32</u>	<u>2</u>
:									
256:	<u>n</u>	_____		—	—	_____	<u>0</u>	—	—

**Note:** The Processor Channel number, the Interface Channel number, and the Local and Remote Session numbers do not need to be the same number but they should be made the same whenever possible to simplify network “bookkeeping” and diagnostics.

> Enter values

Field	Conditions/Comments
<b>For Processor Channel 31:</b> (ethernet connection to Switch 1)	
Enable	Set to <b>y</b> .
Appl.	Indicates that this connection will carry DCS data.
Mode	Node-3 is the “client” for this session. Set node-1 to “server” ( <b>s</b> ).
Interface Link	This must match the link number assigned on the node-3 data module screen.
Interface Chan	A value of <b>0</b> allows any available interface channel to be used for this connection. This number must match the Destination Port number on the Switch-1 Processor Channel screen.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.

**1 of 2**

Field	Conditions/Comments
Destination Port	The Destination Port number must match the Interface Channel number for this connection on the Switch-1 Processor Channel screen.
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.
<b>Processor Channel 32:</b> (connection to Switch 1 for gateway to Switch 2)	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dcs</b> for DCS signaling.
Mode	Node-3 is the “client” for this session. Set node-1 to “server” ( <b>s</b> ).
Interface Link	This must match the link number assigned on the node-3 data module screen.
Interface Chan	A value of <b>0</b> allows any available interface channel to be used for this connection. This number must match the Destination Port number on the Switch-1 Processor Channel screen.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	The Destination Port number must match the Interface Channel number for this connection on the Switch-1 Processor Channel screen.
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.

2 of 2

> Submit the screen the screen

**End**

## Enable links and processor channels

You must enable links and processor channels before the connections can be used.

To enable a link, open its data module screen (**ch da [ext]**) and set the Enable Link? field to **y**.

[note: to view a list of assigned data modules and their extensions, enter the “list data-module” command (**l da**)]

To enable the processor channels, open the processor channel screen (**ch com p**) and set the Enable field to **y** for each assigned processor channel.


**Note:** 1. You must disable a link or processor channel before you can change its parameters.

**Note:** 2. The **busy-out** command overrules the data module Enable Link? field.

**Note:** 3. On the C-LAN boards, low-level connectivity can remain intact when higher-level applications such as DCS are not functioning. For example, an external ping to a C-LAN’s ethernet port could be successful even when the board is busied-out. When debugging connectivity problems, pinging only checks low-level connectivity.

## Configuration 4: R7csi ←—ISDN—→ R7si Gateway ←—ppp—→ R7csi

In this configuration, a DEFINITY ECS R7r provides gateway conversion between ISDN and TCP/IP.

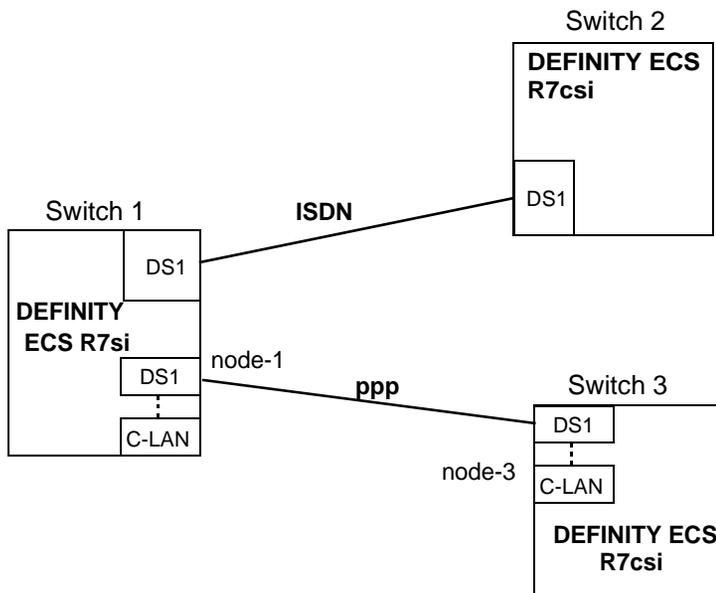

### Task Summary

The following tasks need to be completed for Switch 1, Switch 2, and Switch 3:

- 1 Review checklist
- 2 Switch 1 administration
  - a Assign node names
  - b Assign signaling group and administered NCA TSC
  - c Assign ISDN-TSC Gateway Channel
  - d Assign link (via a data module) to node 3
  - e Assign processor channels
- 3 Switch 2 administration
  - a Assign signaling group and administered NCA TSC
- 4 Switch 3 administration
  - a Enable bus bridge connectivity
  - b Assign node names
  - c Assign link (via a data module) to node 1
  - d Assign processor channels
- 5 Enable links and processor channels

## Prerequisite Administration

There are some system administration tasks that need to be completed before you can proceed with the connectivity administration described in this section.


Review the checklist of prerequisite administration tasks in [Checklist for Prerequisite Administration \(page 34\)](#), before proceeding with the connectivity administration in this section.

Configuration 4

SWITCH 2

SWITCH 1

SWITCH 3

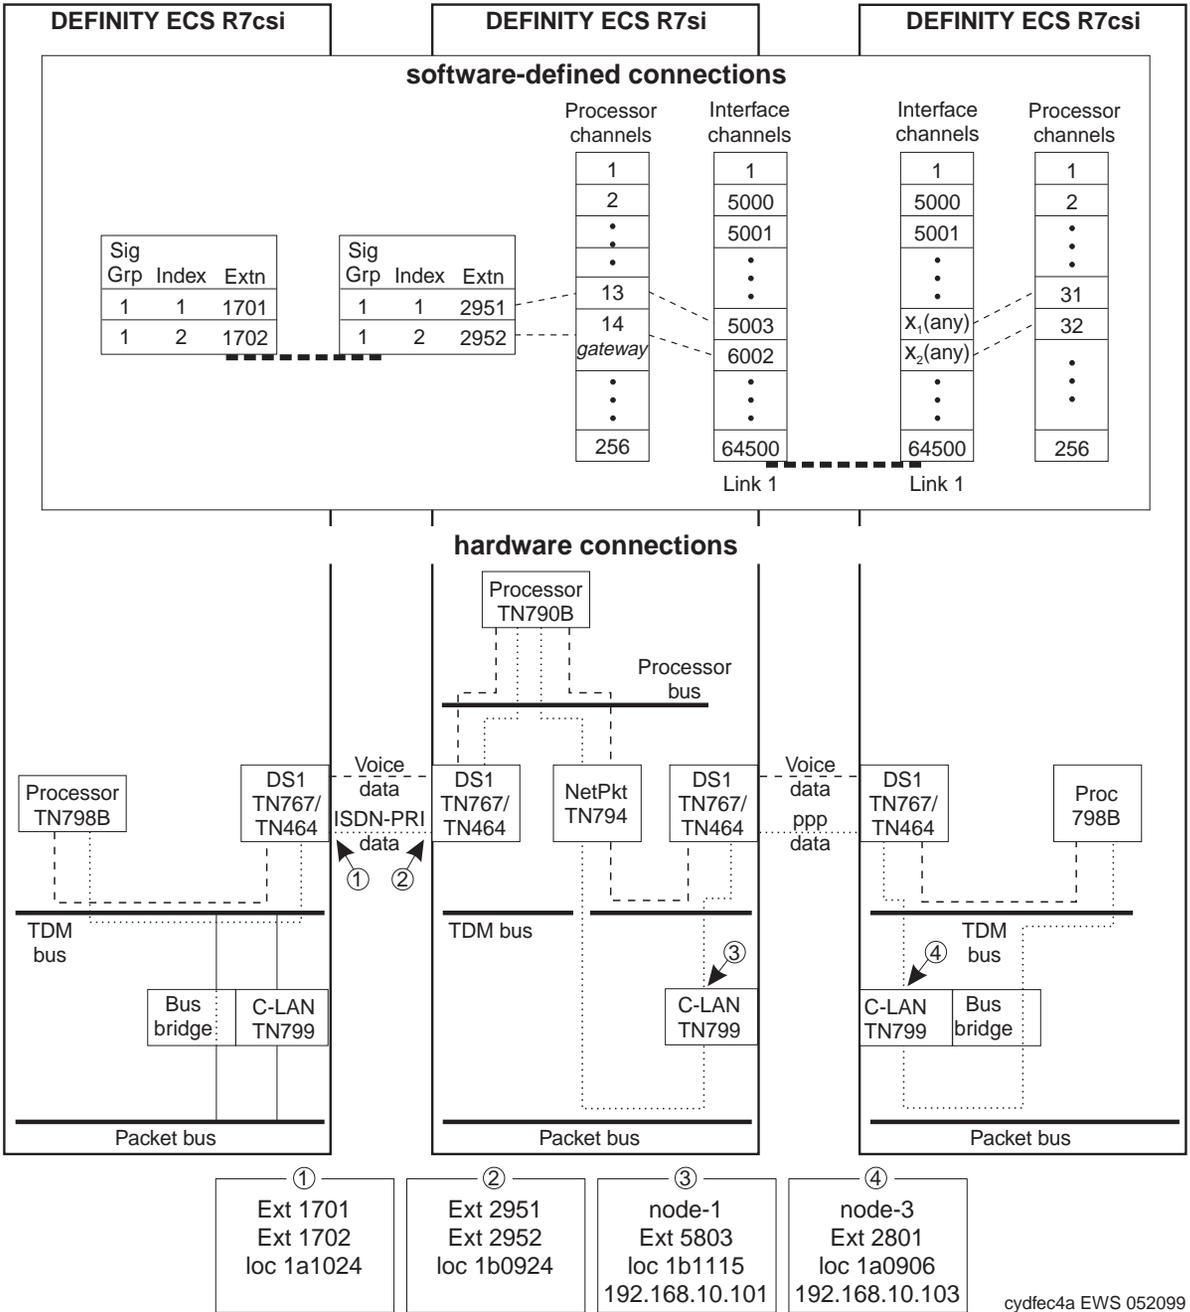

cydfec4a EWS 052099

## Switch 1 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 1. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names form — enter `ch node-n`
- > Go to page 2.

```

change node-names
                                                    Page 2 of 6

                                NODE NAMES

Name          IP Address          Name          IP Address
default       0 .0 .0 .0           _____   _____._____.____
node-1        192.168.10 .101      _____   _____._____.____
node-3        192.168.10 .103      _____   _____._____.____
_____       _____._____.____   _____   _____._____.____
    
```

- > Enter values.

Field	Conditions/Comments
Name	Enter unique node names for the following 2 nodes: <ul style="list-style-type: none"> <li>• C-LAN PPP port on Switch 1</li> <li>• C-LAN PPP port on Switch 3.</li> </ul>
IP Address	The unique IP addresses of the nodes named in the previous field.

- > Submit the screen

#### End

### Switch 1 Task — Assign Link via ppp Data Module to Switch 3

This task administers a ppp data module for the ppp connection to node 3. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

#### Steps

##### Begin

> Open Data Module form — enter **ad da 5803**

```

add data-module 5803
                                     Page 1 of x
                                     DATA MODULE
Data Extension: 5803                 Name: ppp on link 1 to node-3   BCC: 2
   Type: ppp                         COS: 1
   Port: 01b1115                     COR: 1
   Link: 1                             TN: 1
Enable Link? n

   Node Name: node-1

Establish Connection: y

DESTINATION
   Digits: 792801
   Node Name: node-3
   CHAP? n
  
```

[This data module is assigned the extension 5803; you can assign any unused extension in the dial plan]

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Port:	In this example, the C-LAN circuit pack is in slot 01b11; the ppp connection is through port 15.
Link:	The link number must be in the range 1 – 25 (for R7si), not previously assigned on this switch.
Enable Link?	If you need to add an IP route that uses this node as a gateway, this field must be set to <b>y</b> before adding the IP route. Otherwise leave this field set to <b>n</b> until the link administration is complete; that is, until after all data modules and the processor channels are assigned, then set to <b>y</b> .
Name:	Information-only; appears in list generated by the “list data module” command.
BCC:	Bearer Capability Class. This is a display-only field.

Field	Conditions/Comments
COS	The values for these fields will be specified by the system administrator.
COR:	
TN:	
Node Name:	The node name for the interface defined by this data module. This must be a name entered on the Node Names screen.
Establish Connection?	<b>y</b> means that this switch will be responsible for call setup for this connection. Enter <b>n</b> when administering the data module for Switch 3.
Destination Digits:	Trunk access code (79) plus extension of data module on node-3 (2801).
Destination Node Name:	Name of the node at the far end of this connection. This must be a name entered on the Node Names screen
CHAP?	This field enables/disables the Challenge Handshake Authentication Protocol security mechanism on this link. If you enter <b>y</b> , the system will prompt for a CHAP secret (password).

> Submit the screen

**End**

## Switch 1 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on the node 1 switch.

### Steps

#### Begin

> Open the Processor Channel Assignment form — enter **ch com p**

```
change communications-interface processor-channels
```

Page 1 of X

PROCESSOR CHANNEL ASSIGNMENT

Proc Chan	Enable	Appl.	Gtwy To Mode	Interface Link/Chan	Destination Node	Session Port	Local/Remote	Mach ID
1:	<u>n</u>	_____	—	—	_____	<u>0</u>	—	—
2:	<u>n</u>	_____	—	—	_____	<u>0</u>	—	—
:								
13:	<u>y</u>	<u>dcs</u>	<u>s</u>	<u>1</u> <u>5003</u>	<u>node-3</u>	<u>0</u>	<u>13</u> <u>31</u>	<u>3</u>
14:	<u>y</u>	<u>gateway</u>	<u>s</u>	<u>1</u> <u>6002</u>	<u>node-3</u>	<u>0</u>	<u>14</u> <u>32</u>	—
:								
64:	<u>n</u>	_____	—	—	_____	<u>0</u>	—	—

> Enter values

Field	Conditions/Comments
<b>Processor Channel 13:</b> (ppp connection to Switch 3)	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dcs</b> for DCS signaling.
Mode	Node-1 is the “server” for this session. Set node-3 to “client” ( <b>c</b> ).
Interface Link	This must match the link number assigned on the node-1 data module screen.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500. The value 5003 is recommended for the DCS connections. This number must match the Destination Port number on the node-3 Processor Channel screen.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.
Destination Port	A value of <b>0</b> allows any available interface channel on the destination node to be used for this connection. The Interface Channel number for this connection on the Switch-3 Processor Channel screen must also be set to <b>0</b> .

Field	Conditions/Comments
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.
<b>Processor Channel 14:</b> (Gateway between Switch 2 and Switch 3)	
Enable	Set to <b>y</b> .
Appl.	Set to <b>gateway</b> for conversion between ISDN and TCP/IP.
Mode	Node-1 is the “server” for this session. Set node-3 to “client” ( <b>c</b> ).
Interface Link	This must match the link number assigned on the node- 1 data module screen.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500. This number must match the Destination Port number on the node-3 Processor Channel screen.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.
Destination Port	A value of <b>0</b> allows any available interface channel on the destination node to be used for this connection. The Interface Channel number for this connection on the Switch-2 Processor Channel screen must also be set to <b>0</b> .
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Leave blank for gateway applications.

> Submit the screen

**End**

## Switch 1 Task — Assign Signaling Group and administered NCA TSC

This task assigns a signaling group and an administered NCA TSC for the ISDN connection to Switch 2.

### Steps>

#### Begin

> Open the Signaling Groups form — enter **ch sig n**

```
change signaling-group next
                                     Page 1 of 5
                                     SIGNALING GROUP
Group Number: 1
Associated Signaling? y           Max number of NCA TSC: 5
Primary D-Channel: 01b0924       Max number of CA TSC: 23
                                     Trunk Group for NCA TSC: 12
Trunk Group for Channel Selection: 12
Supplementary Service Protocol: a
```

> Enter values

Field	Conditions/Comments
Associated Signaling?	Specifies Facility-Associated Signaling (FAS) — the D-channel carries signaling only for the B-channels on the same DS1 interface.
Primary D-Channel	Specifies D-Channel signaling on port 24 of the DS1 circuit pack located at 01b09.
Max number of NCA TSC	Maximum number of simultaneous non-call-associated Temporary Signaling Connections. The TSCs carry signaling for features not associated with a specific call; for example, signals to turn on Leave Word Calling.
Max number of CA TSC	Maximum number of simultaneous call-associated TSCs that can exist in the signaling group. Typically, this is the number of ISDN-PRI trunk group members controlled by this signaling group.
Trunk Group for NCA TSC	The ISDN-PRI trunk group number whose incoming call-handling table will be used to handle incoming NCA-TSCs through this signaling group.
Trunk Group for Channel Selection	
Supplementary Service Protocol	<b>a</b> indicates AT&T protocol; <b>b</b> indicates QSIG protocol.

> Press the Next Page key

ADMINISTERED NCA TSC ASSIGNMENT

Service/Feature: \_\_\_\_\_ As-needed Inactivity Time-out (min): \_\_\_\_

TSC Index	Local Ext.	Enabled	Established	Dest. Digits	Appl.	Mach. ID
1:	<u>2951</u>	<u>y</u>	<u>permanent</u>	<u>1701</u>	<u>dcs</u>	<u>2</u>
2:	<u>2952</u>	<u>y</u>	<u>permanent</u>	<u>1702</u>	<u>gateway</u>	—
3:	—	—	—	—	—	—
:	—	—	—	—	—	—

> Enter values

Field	Conditions/Comments
<b>TSC Index 1:</b> (for DCS connection to Switch 2)	
Local Ext.	Extension number of the ISDN interface on the Switch-1DS1 circuit pack.
Enabled	<b>y</b> enables the administered NCA-TSC.
Established	Used to indicate the strategy for establishing this administered NCA-TSC.  <b>permanent</b> means that the administered NCA-TSC can be established by either the near end or the far end.  <b>as-needed</b> means the administered NCA-TSC will be established the first time the administered NCA-TSC is needed; it can be set up either by the near end or far end switch.
Dest. Digits	Extension number of the ISDN interface on the Switch-2 DS1 circuit pack.
Appl. 1	TSC #1 carries the DCS signaling between node 1 and node 2.
Mach ID 1	Destination is node 2.
<b>TSC Index 2:</b> (for connection to Switch 2 for gateway to Switch 3)	
Local Ext.	Extension number of the ISDN interface on the Switch-1 DS1 circuit pack.
Enabled	<b>y</b> enables the administered NCA-TSC.
Established	Used to indicate the strategy for establishing this administered NCA-TSC.  <b>permanent</b> means that the administered NCA-TSC can be established by either the near end or the far end.  <b>as-needed</b> means the administered NCA-TSC will be established the first time the administered NCA-TSC is needed; it can be set up either by the near end or far end switch.

Field	Conditions/Comments
Dest. Digits	Extension number of the ISDN interface on the Switch-2 DS1 circuit pack.
Appl.	Specifies that TSC #2 will carry signaling that will be converted in Switch-1 to another protocol (TCP/IP), which will then be forwarded to Switch-3.
Mach ID	Leave blank for gateway

> Submit the screen

**End**

---

## Switch 1 Task — Assign ISDN-TSC Gateway

This task assigns the ISDN TSC gateway channels needed for ISDN signaling between node 1 and node2

### Steps

#### Begin

> Open the ISDN TSC Gateway Channel Assignment form — enter `ch isdn tsc`

```
change isdn tsc-gateway                                     Page 1 of 2
ISDN TSC GATEWAY CHANNEL ASSIGNMENT

  Sig   Adm'd NCA  Processor  Appli-   Sig   Adm'd NCA  Processor  Appli-
  Group TSC Index  Channel    cation   Group TSC Index  Channel    cation
1:  1    2        14        dcs     17:  ___    ___    ___    ___
2:  ___    ___    ___    ___     18:  ___    ___    ___    ___
3:  ___    ___    ___    ___     19:  ___    ___    ___    ___
4:  ___    ___    ___    ___     20:  ___    ___    ___    ___
5:  ___    ___    ___    ___     21:  ___    ___    ___    ___
6:  ___    ___    ___    ___     22:  ___    ___    ___    ___
:
```

> Enter values

Field	Conditions/Comments
<b>For Gateway Channel 1:</b> (ISDN connection to Switch 2)	
Sig Group	Signaling group number assigned on the Signaling Group screen.
Adm'd NCA TSC Index	TSC Index assigned on page 2 of the Signaling Group screen (Administered NCA TSC Assignment).
Processor Channel	This is the Processor Channel number specified as a <b>gateway</b> application on the Processor Channel Assignment screen.
Application	The application that this TSC is used for.

> Submit the screen

#### End

## Switch 2 Task — Assign Signaling Group and administered NCA TSC

This task assigns a signaling group and an administered NCA TSC for the ISDN connection to Switch 1.

### Steps

#### Begin

> Open the Signaling Groups form — enter **ch sig n**

```
change signaling-group next
```

Page 1 of 5

**SIGNALING GROUP**

Group Number: 1

Associated Signaling? y                      Max number of NCA TSC: 5

Primary D-Channel: 01a1024                      Max number of CA TSC: 23

Trunk Group for NCA TSC: 12

Trunk Group for Channel Selection: 21

Supplementary Service Protocol: a

> Enter values

Field	Conditions/Comments
Associated Signaling?	Specifies Facility-Associated Signaling (FAS) — the D-channel carries signaling only for the B-channels on the same DS1 interface.
Primary D-Channel	Specifies D-Channel signaling on port 24 of the DS1 circuit pack located at 1a10.
Max number of NCA TSC	Maximum number of simultaneous non-call-associated Temporary Signaling Connections that can exist in the signaling group. This number includes all NCA-TSCs that are administered on this screen and those that tandem through the switch in-route to another switch in the network. The TSCs carry signaling for features not associated with a specific call; for example, signals to turn on Leave Word Calling.
Max number of CA TSC	Maximum number of simultaneous call-associated TSCs that can exist in the signaling group. Typically, this is the number of ISDN-PRI trunk group members controlled by this signaling group. If the connection is using the public network (SDN), the total NCA + CA TSCs cannot exceed the number ordered.
Trunk Group for NCA TSC	The trunk group used by the NCA-TSCs.
Trunk Group for Channel Selection	Leave blank — this field is currently not used.
Supplementary Service Protocol	<b>a</b> indicates AT&T protocol; <b>b</b> indicates QSIG protocol.

> Press the Next Page key

ADMINISTERED NCA TSC ASSIGNMENT						Page 2 of 5
Service/Feature: _____			As-needed Inactivity Time-out (min): ____			
TSC Index	Local Ext.	Enabled	Established	Dest. Digits	Appl.	Mach. ID
1:	<u>1701</u>	<u>y</u>	<u>permanent</u>	<u>2951</u>	<u>dc</u>	<u>1</u>
2:	<u>1702</u>	<u>y</u>	<u>permanent</u>	<u>2952</u>	<u>dc</u>	<u>3</u>
3:	_____	—	_____	_____	_____	_____
:	_____	—	_____	_____	_____	_____

> Enter values

Field	Conditions/Comments
<b>TSC Index 1:</b> (for DC S connection to Switch 1)	
Local Ext.	Extension number of the ISDN interface for TSC #1 on the Switch-2 DS1 circuit pack.
Enabled	<b>y</b> enables the administered NCA-TSC.
Established	Used to indicate the strategy for establishing this administered NCA-TSC.  <b>permanent</b> means that the administered NCA-TSC can be established by either the near end or the far end.  <b>as-needed</b> means the administered NCA-TSC will be established the first time the administered NCA-TSC is needed; it can be set up either by the near end or far end switch.
Dest. Digits	Extension number of the ISDN interface for TSC #1 on the Switch-1 DS1 circuit pack.
Appl.	TSC #1 carries DCS signaling between node 2 and node 1.
Mach ID	Destination is node 1.
<b>TSC Index 2:</b> (for DCS connection to Switch 1)	
Local Ext.	Extension number of the ISDN interface for TSC #2 on the Switch-2 DS1 circuit pack.
Enabled	<b>y</b> enables the administered NCA-TSC.
Established	Used to indicate the strategy for establishing this administered NCA-TSC.  <b>permanent</b> means that the administered NCA-TSC can be established by either the near end or the far end.  <b>as-needed</b> means the administered NCA-TSC will be established the first time the administered NCA-TSC is needed; it can be set up either by the near end or far end switch.

Field	Conditions/Comments
Dest. Digits	Extension number of the ISDN interface for TSC #2 on the Switch-1 DS1 circuit pack.
Appl.	TSC #2 carries DCS signaling between Switch 2 and Switch 1. As specified on the Switch-1 NCA TSC Assignment screen, TSC #2 is administered as a gateway on Switch 1, where the ISDN signals are converted to TCP/IP.
Mach ID	Destination is node 3.

> Submit the screen

**End**

---

## Switch 3 Task — Enable Bus Bridge Connectivity

This task enables the bus bridge functionality on the C-LAN circuit pack to provide a path between the packet bus and the processor.

**Note:** Bus Bridge Connectivity is used on the csi model only. This task may have been complete when the C-LAN circuit pack was installed.

### Steps

#### Begin

- > Open the Maintenance-Related System Parameters form — enter **ch sys ma**
- > Go to page 2 and skip to the Packet Intf2? field near the bottom of the screen

```

change system-parameters maintenance                                     Page 2 of 3

                                MAINTENANCE-RELATED SYSTEM PARAMETERS

MINIMUM MAINTENANCE THRESHOLDS ( Before Notification )
    TTRs: 4          CPTRs: 1          Call Classifier Ports: 0
    MMIs: 0          VCs: 0

TERMINATING TRUNK TRANSMISSION TEST ( Extension )
    Test Type 100:          Test Type 102:          Test Type 105:

ISDN MAINTENANCE
    ISDN-PRI Test Call Extension:          ISDN-BRI Service SPID:

DS1 MAINTENANCE
    DS0 Loop-Around Test Call Extension:

LOSS PLAN ( Leave Blank if no Extra Loss is Required )
    Minimum Number of Parties in a Conference Before Adding Extra Loss:

SPE OPTIONAL BOARDS
    Packet Intf1? y          Packet Intf2? y
    Bus Bridge: 01a09__Inter-Board Link Timeslots Pt0: 6 Pt1: 1 Pt2: 1
    
```

> Enter values

Field	Conditions/Comments
Packet Intf2?	Enables the bus bridge.
Bus Bridge:	Location of the C-LAN circuit pack. If the system has two C-LANs, only one is administered for bus bridge.
Inter-Board Link Timeslots: Pt0, Pt1, Pt2	Specifies the bandwidth used on the 3 ports of the Inter-Board Link. The total number of timeslots assigned cannot exceed 11. Pt0 carries PPP traffic and can have 1–9 timeslots. Pt1 carries maintenance messages and can have 1–3 timeslots. Pt2 carries broadcast messages and can have 1–3 timeslots.

> Submit the screen

#### End

## Switch 3 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 3. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names form — enter `ch node-n`
- > Go to page 2.

```
change node-names Page 2 of 6
```

NODE NAMES			
Name	IP Address	Name	IP Address
<u>default</u>	<u>0 .0 .0 .0</u>	_____	____.____.____.____
<u>node-1</u>	<u>192.168.10 .101</u>	_____	____.____.____.____
<u>node-3</u>	<u>192.168.10 .103</u>	_____	____.____.____.____
_____	____.____.____.____	_____	____.____.____.____

- > Enter values.

Field	Conditions/Comments
Name	Enter unique node names for the following 2 nodes: <ul style="list-style-type: none"> <li>C-LAN PPP port on Switch 3</li> <li>C-LAN PPP port on Switch 1.</li> </ul>
IP Address	The unique IP addresses of the nodes named in the previous field.

- > Submit the screen

#### End

### Switch 3 Task — Assign Link via ppp Data Module to Switch 1

This task administers a ppp data module on Switch 3 for the ppp connection to Switch 1. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

#### Steps

##### Begin

> Open Data Module form — enter **ad da n**

```

add data-module next
                                                    Page 1 of x

                DATA MODULE

Data Extension: 2801                Name: ppp on link 1 to node-1    BCC: 2
      Type: ppp                    COS: 1
      Port: 01a0906                COR: 1
      Link: 1                       TN: 1
Enable Link? n

      Node Name: node-3

Establish Connection: n

DESTINATION
      Digits: _____
      Node Name: node-1
      CHAP? n
    
```

[This data module is assigned the extension 2801; you can assign any unused extension in the dial plan.]

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Port:	In this example, the C-LAN circuit pack is in slot 01a09; the ppp connection is through port 06.
Link:	The link number must be in the range 1 – 25 (for R7csi), not previously assigned on this switch.
Enable Link?	If you need to add an IP route that uses this node as a gateway, this field must be set to <b>y</b> before adding the IP route. Otherwise leave this field set to <b>n</b> until the link administration is complete; that is, until after all data modules and the processor channels are assigned, then set to <b>y</b> .
Name:	Information-only; appears in list generated by the “list data module” command.
BCC:	Bearer Capability Class. This is a display-only field.

Field	Conditions/Comments
COS	The values for these fields will be specified by the system administrator.
COR:	
TN:	
Node Name:	The node name for the interface defined by this data module. This must be a name entered on the Node Names screen.
Establish Connection?	<b>n</b> means that the switch at the remote end of this connection (Switch 1 in this case) will be responsible for the call setup. Enter <b>y</b> when administering the data module for Switch 1.
Destination Digits:	Not needed if the “Establish Connection?” field is set to <b>n</b>
Destination Node Name:	Name of the node at the far end of this connection. This must be a name entered on the Node Names screen.
CHAP?	This field enables/disables the Challenge Handshake Authentication Protocol security mechanism on this link. If you enter <b>y</b> , the system will prompt for a CHAP secret (password).
<b>2 of 2</b>	

> Submit the screen

**End**

### Switch 3 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on Switch 3.

#### Steps

##### Begin

> Open the Processor Channel Assignment form — enter **ch comp**.

```
change communications-interface processor-channels
```

Page 1 of X

PROCESSOR CHANNEL ASSIGNMENT

Proc Chan	Enable	Appl.	Gtwy To Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	<u>n</u>	_____	—	—	_____	<u>0</u>	—	—
2:	<u>n</u>	_____	—	—	_____	<u>0</u>	—	—
:								
31:	<u>y</u>	<u>dcs</u>	<u>c</u>	<u>1</u> <u>0</u>	<u>node-1</u>	<u>5003</u>	<u>31</u> <u>13</u>	<u>1</u>
32:	<u>y</u>	<u>dcs</u>	<u>c</u>	<u>1</u> <u>0</u>	<u>node-1</u>	<u>6002</u>	<u>32</u> <u>14</u>	<u>2</u>
:								
64:	<u>n</u>	_____	—	—	_____	<u>0</u>	—	—

> Enter values

Field	Conditions/Comments
<b>Processor Channel 31:</b> (ppp connection to Switch 1)	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dcs</b> for DCS signaling.
Mode	Node-3 is the “client” for this session. Set node-1 to “server” ( <b>s</b> ).
Interface Link	This must match the link number assigned on the node-3 data module screen.
Interface Chan	A value of <b>0</b> allows any available interface channel to be used for this connection. This number must match the Destination Port number on the Switch-1 Processor Channel screen.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.
Destination Port	This must match the Interface Channel number assigned on the Switch-1 Processor Channel screen.

Field	Conditions/Comments
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.
<b>Processor Channel 32:</b> (connection to Switch 1 for gateway to Switch 2)	
Enable	Set to <b>y</b> .
Appl.:	Set to <b>dcs</b> for DCS signaling.
Mode	Node-3 is the “client” for this session. Set node-1 to “server” ( <b>s</b> ).
Interface Link	This must match the link number assigned on the data module screen.
Interface Chan	A value of <b>0</b> allows any available interface channel to be used for this connection. This number must match the Destination Port number on the Switch-1 Processor Channel screen.
Destination Node	Node name for the gateway through which the destination is reached. This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.
Destination Port	This must match the Interface Channel number assigned on the Switch-1 Processor Channel screen.
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.

> Submit the screen

**End**

## Enable links and processor channels

You must enable links and processor channels before the connections can be used.

To enable a link, open its data module screen (**ch da [ext]**) and set the Enable Link? field to **y**.

[note: to view a list of assigned data modules and their extensions, enter the “list data-module” command (**l da**)]

To enable the processor channels, open the processor channel screen (**ch com p**) and set the Enable field to **y** for each assigned processor channel.


**Note:** 1. You must disable a link or processor channel before you can change its parameters.

**Note:** 2. The **busy-out** command overrules the data module Enable Link? field.

**Note:** 3. On the C-LAN boards, low-level connectivity can remain intact when higher-level applications such as DCS are not functioning. For example, an external ping to a C-LAN’s ethernet port could be successful even when the board is busied-out. When debugging connectivity problems, pinging only checks low-level connectivity.

## Configuration 5A: R7csi ←ppp→ R7r (one C-LAN) ←ethernet→ R7si

In this configuration, a DEFINITY ECS R7r acts as a gateway between two other nodes — one connected via ppp to an R7csi and the other via ethernet to another R7si.

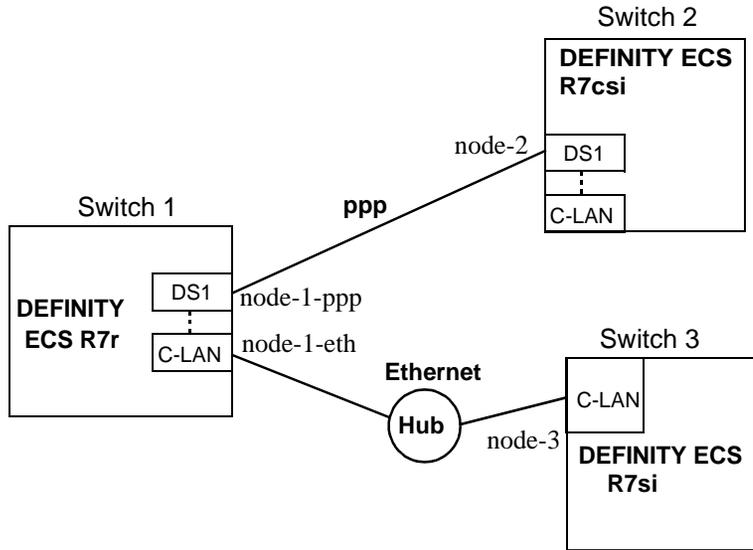

### Task Summary

The following tasks need to be completed for Switch 1, Switch 2, and Switch 3:


- 1 Review checklist
- 2 Switch 1 administration
  - a Assign node names
  - b Assign link (via a data module) to Switch 2
  - c Assign link (via a data module) to the LAN
  - d Assign processor channels
  - e Assign IP Route
- 3 Switch 2 administration
  - a Enable bus bridge connectivity
  - b Assign node names
  - c Assign link (via a data module) to Switch 1
  - d Assign processor channels
  - e Assign IP Route
- 4 Switch 3 administration
  - a Assign node names
  - b Assign link (via a data module) to Switch 1
  - c Assign processor channels
  - d Assign IP Route
- 5 Enable links and processor channels

## Prerequisite Administration

There are some system administration tasks that need to be completed before you can proceed with the connectivity administration described in this section.

Review the checklist of prerequisite administration tasks in the [Checklist for Prerequisite Administration](#) (page 34), before proceeding with the connectivity administration in this section.

Configuration 5A

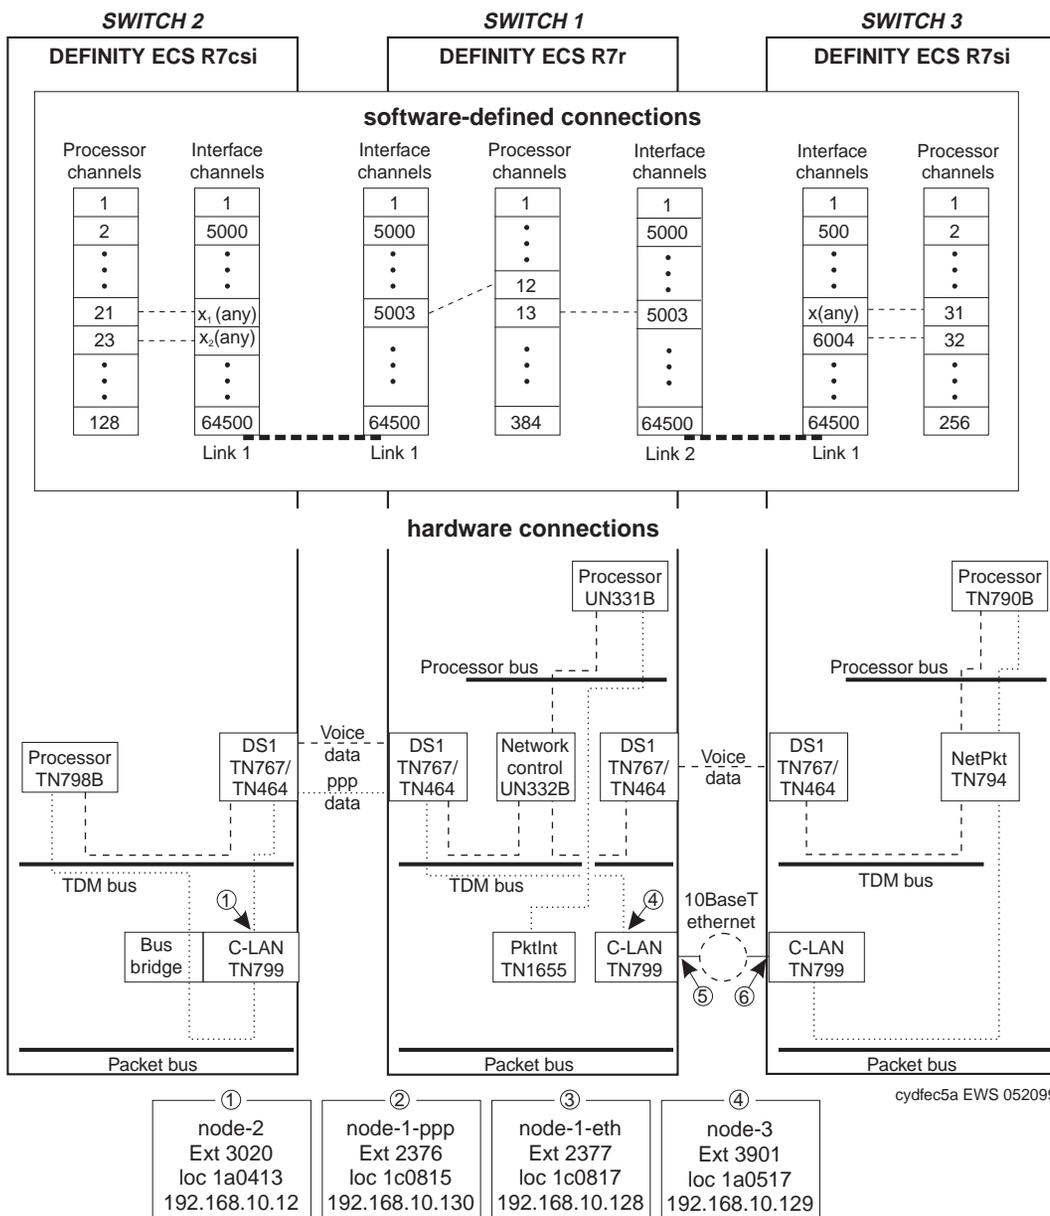

## Switch 1 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 1. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names form — enter `ch node-n`
- > Go to page 2

```
change node-names
                                                    Page 2 of 6

                        NODE NAMES

Name      IP Address      Name      IP Address
default   0 .0 .0 .0         _____ . . . .
node-1-ppp 192.168.10 .130    _____ . . . .
node-1-eth 192.168.10 .128    _____ . . . .
node-2     192.168.10 .12     _____ . . . .
node-3     192.168.10 .129    _____ . . . .
```

- > Enter values.

Field	Conditions/Comments
Name	Enter unique node names for the following 4 nodes: <ul style="list-style-type: none"> <li>• C-LAN PPP port on Switch 1</li> <li>• C-LAN Ethernet port on Switch 1.</li> <li>• C-LAN PPP port on Switch 2</li> <li>• C-LAN Ethernet port on Switch 3</li> </ul>
IP Address	The unique IP addresses of the nodes named in the previous field.

- > Submit the screen

#### End

## Switch 1 Task — Assign Link via ppp Data Module to Switch 2

This task administers a ppp data module on Switch 1 for the ppp connection to Switch 2. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

### Steps

#### Begin

> Open Data Module form — enter **ad da 2376**

```

add data-module 2376

```

Page 1 of x

DATA MODULE

Data Extension: 2376                      Name: ppp on link 1 to node-2      BCC: 2  
                   Type: ppp                      COS: 1  
                   Port: 01c0815                  COR: 1  
                   Link: 1                              TN: 1  
                   Enable Link? n

                  Node Name: node-1-ppp

Establish Connection: y

DESTINATION

                  Digits: 8993020  
                   Node Name: node-2  
                   CHAP? n

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Port:	In this example, the C-LAN circuit pack is in slot 01c08; the ppp connection is through port 15.
Link:	The link number must be in the range 1 – 33 (for R7r), not previously assigned on this switch.
Enable Link?	If you need to add an IP route that uses this node as a gateway, this field must be set to <b>y</b> <i>before</i> adding the IP route. Otherwise leave this field set to <b>n</b> until the link administration is complete; that is, until after all data modules and the processor channels are assigned, then set to <b>y</b> .
Name:	Information-only; appears in list generated by the “list data module” command.
BCC:	Bearer Capability Class. This is a display-only field.

**1 of 2**

Field	Conditions/Comments
COS	The values for these fields will be specified by the system administrator.
COR:	
TN:	
Node Name:	The node name for the interface defined by this data module. This must be a name entered on the Node Names screen.
Establish Connection?	<b>y</b> means that this switch will be responsible for call setup for this connection. Enter <b>n</b> when administering the data module for Switch 2.
Destination Digits:	Trunk access code (899) plus extension of data module on node-2 (3020).
Destination Node Name:	Name of the node at the far end of this connection. This must be a name entered on the Node Names screen.
CHAP?	This field enables/disables the Challenge Handshake Authentication Protocol security mechanism on this link. If you enter <b>y</b> , the system will prompt for a CHAP secret (password).
<b>2 of 2</b>	

> Submit the screen

**End**

## Switch 1 Task — Assign Link via ethernet Data Module to Ethernet

This task administers an ethernet data module for the ethernet connection to node 3. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

### Steps

#### Begin

> Open Data Module form — enter **a da n**

```

add data next
                                                    Page 1 of X
                DATA MODULE

Data Extension: 2377                Name: ethernet on link 2      BCC: 2
      Type: ethernet
      Port: 01c0817
      Link: 2
  Enable Link? n

      Node Name: node-1-eth

      Subnet Mask: 255.255.255.0
Broadcast Address: 192.168.10.255
Automatic Subnet Routing? n
    
```

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Port:	Ethernet connections must be assigned to port 17 on the C-LAN circuit pack.
Link:	The link number must be in the range 1 – 33 (for R7r), not previously assigned on this switch.
Enable Link?	This field must be set to <b>y</b> after the link administration is complete.
Name:	Information-only; appears in list generated by the “list data module” command.
Node Name:	The node name for the interface defined by this data module. This must be a name entered on the Node Names screen.

**1 of 2**

Field	Conditions/Comments
Subnet Mask:	Defines the network and host parts of the IP address. This example mask is the default for a Class-C IP address. It indicates no subnetting on this network (192.168.10).
Broadcast Address:	Specifies that broadcast messages will go to all IP addresses on this network (192.168.10). See <a href="#">Broadcast Address (page 228)</a> in Appendix A for more information on broadcast addresses.
Automatic Subnet Routing?	<b>n</b> disables automatic routing — you must manually administer explicit IP Routes to addresses on the subnet. A <b>y</b> allows automatic routing of all IP addresses on the subnet of the administered Ethernet IP address
<b>2 of 2</b>	

> Submit the screen

**End**

## Switch 1 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on the Switch 1.

### Steps

#### Begin

> Open the Processor Channel Assignment form — enter **ch comp**.

```
change communications-interface processor-channels
```

Page 1 of X

PROCESSOR CHANNEL ASSIGNMENT

Proc Chan	Enable	Appl.	Gtwy To	Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	<u>n</u>	_____	—	—	_____	_____	<u>0</u>	_____	_____
2:	<u>n</u>	_____	—	—	_____	_____	<u>0</u>	_____	_____
3:	<u>n</u>	_____	—	—	_____	_____	<u>0</u>	_____	_____
:									
12:	<u>y</u>	<u>dc</u> <u>s</u>		<u>s</u>	<u>1</u> <u>5003</u>	<u>node-2</u>	<u>0</u>	<u>12</u> <u>21</u>	<u>2</u>
13:	<u>y</u>	<u>dc</u> <u>s</u>		<u>s</u>	<u>2</u> <u>5003</u>	<u>node-3</u>	<u>0</u>	<u>13</u> <u>31</u>	<u>3</u>
:									
384:	<u>n</u>	_____	—	—	_____	_____	<u>0</u>	_____	_____

> Enter values

Field	Conditions/Comments
<b>Processor Channel 12: (ppp connection to Switch 2)</b>	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dc</b> s for DCS signaling.
Mode	Node-1-ppp is the “server” for this session. Set node-2 to “client” ( <b>c</b> ).
Interface Link	This must match the link number assigned on the node-1a data module screen.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500. The value 5003 is recommended for the DCS connections. This number must match the Destination Port number on the Switch-2 Processor Channel screen.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.
Destination Port	A value of <b>0</b> allows any available interface channel on the destination node to be used for this connection. The Interface Channel number for this connection on the Switch-2 Processor Channel screen must also be set to <b>0</b> .

**1 of 2**

Field	Conditions/Comments
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.
<b>Processor Channel 13: (ethernet connection to Switch 3)</b>	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dcs</b> for DCS signaling.
Mode	Node-1-eth is the “server” for this session. Set node-3 to “client” ( <b>c</b> ).
Interface Link	This must match the link number assigned on the node-1b data module screen.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500. The value 5003 is recommended for the DCS connections. This number must match the Destination Port number on the Switch-2 Processor Channel screen. (Note that <b>5003</b> can be used for the connections to both Switch 2 and 3 because they are on different links).
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.
Destination Port	A value of <b>0</b> allows any available interface channel on the destination node to be used for this connection. The Interface Channel number on the Switch-3 Processor Channel screen must also be set to <b>0</b> .
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.

2 of 2

> Submit the screen

**End**

### Switch 1 Task — Assign IP Route to node-3

This task specifies an initial route for messages handled by the “ethernet on link 2” data module destined for node-3. An IP route is required for this data module because n (no) was entered in the “Automatic Subnet Routing?” field on the data module screen.

#### Steps

##### Begin

> Open the IP Routing form — enter **a ip n**

```

add ip-route next                                     Page 1 of 1
                                                    IP ROUTING

Route Number: 1
Destination Node: node-3
Gateway: node-1-eth
C-LAN Board: 1c08
Metric: 0
    
```

[The system assigns the route number 1.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the destination of this route.
Gateway:	Node name of the gateway by which the destination node is reached for this route.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route. For simple routes, the gateway node is on this circuit pack.
Metric:	Enter 0.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

##### End

## Switch 2 Task — Enable Bus Bridge Connectivity

This task enables the bus bridge functionality on the C-LAN circuit pack to provide a path between the packet bus and the processor.

**Note:** Bus Bridge Connectivity is used on the csi model only. This task may have been complete when the C-LAN circuit pack was installed.

### Steps

#### Begin

- > Open the Maintenance-Related System Parameters form — enter **ch sys ma**
- > Go to page 2 and skip to the Packet Intf2? field near the bottom of the screen

```
change system-parameters maintenance Page 2 of 3

      MAINTENANCE-RELATED SYSTEM PARAMETERS

MINIMUM MAINTENANCE THRESHOLDS ( Before Notification )
      TTRs: 4          CPTRs: 1          Call Classifier Ports: 0
      MMIs: 0          VCs: 0

TERMINATING TRUNK TRANSMISSION TEST ( Extension )
      Test Type 100:          Test Type 102:          Test Type 105:

ISDN MAINTENANCE
      ISDN-PRI Test Call Extension:          ISDN-BRI Service SPID:

DS1 MAINTENANCE
      DS0 Loop-Around Test Call Extension:

LOSS PLAN ( Leave Blank if no Extra Loss is Required )
      Minimum Number of Parties in a Conference Before Adding Extra Loss:

SPE OPTIONAL BOARDS
      Packet Intf1? y          Packet Intf2? y
      Bus Bridge: 01a04 Inter-Board Link Timeslots Pt0: 6 Pt1: 1 Pt2: 1
```

> Enter values

Field	Conditions/Comments
Packet Intf2?	Enables the bus bridge.
Bus Bridge:	Location of the C-LAN circuit pack. If the system has two C-LANs, only one is administered for bus bridge.
Inter-Board Link Timeslots: Pt0, Pt1, Pt2	Specifies the bandwidth used on the 3 ports of the Inter-Board Link. The total number of timeslots assigned cannot exceed 11. Pt0 carries PPP traffic and can have 1–9 timeslots. Pt1 carries maintenance messages and can have 1–3 timeslots. Pt2 carries broadcast messages and can have 1–3 timeslots.

> Submit the screen

#### End

## Switch 2 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 2. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names form — enter `ch node-n`
- > Go to page 2

```

change node-names
                                                    Page 2 of 6

                                NODE NAMES

Name          IP Address          Name          IP Address
default       0 .0 .0 .0           _____    _____._____.____
node-1-ppp    192.168.10 .130       _____    _____._____.____
node-2        192.168.10 .112       _____    _____._____.____
node-3        192.168.10 .129       _____    _____._____.____
_____       _____._____.____    _____    _____._____.____
    
```

- > Enter values.

Field	Conditions/Comments
Name	Enter unique node names for the following 3 nodes: <ul style="list-style-type: none"> <li>• C-LAN PPP port on Switch 2</li> <li>• C-LAN PPP port on Switch 1.</li> <li>• C-LAN Ethernet port on Switch 3</li> </ul>
IP Address	The unique IP addresses of the nodes named in the previous field.

- > Submit the screen

#### End

## Switch 2 Task — Assign Link via ppp Data Module to Switch 1

This task administers a ppp data module on Switch 2 for the ppp connection to Switch 1. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

### Steps

#### Begin

> Open Data Module form — enter **ad da 3020**

```

add data-module 3020

```

Page 1 of x

DATA MODULE

Data Extension: 3020	Name: <u>ppp on link 1 to node-1-ppp</u>	BCC: 2
Type: <u>ppp</u>	COS: <u>1</u>	
Port: <u>01a0413</u>	COR: <u>1</u>	
Link: <u>1</u>	TN: <u>1</u>	
Enable Link? <u>n</u>		
Node Name: <u>node-2</u>		
Establish Connection: <u>n</u>		
DESTINATION		
Digits: _____		
Node Name: <u>node-1-ppp</u>		
CHAP? <u>n</u>		

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Port:	In this example, the C-LAN circuit pack is in slot 01a04; the ppp connection is through port 13.
Link:	The link number must be in the range 1 – 25 (for R7csi), not previously assigned on this switch
Enable Link?	If you need to add an IP route that uses this node as a gateway, this field must be set to <b>y</b> before adding the IP route. Otherwise leave this field set to <b>n</b> until the link administration is complete; that is, until after all data modules and the processor channels are assigned, then set to <b>y</b> .
Name:	Information-only; appears in list generated by the “list data module” command.
BCC:	Bearer Capability Class. This is a display-only field.

Field	Conditions/Comments
COS:	The values for these fields will be specified by the system administrator.
COR:	
TN:	
Node Name:	The node name for the interface defined by this data module. This must be a name
Establish Connection?	<b>n</b> means that the switch at the remote end of this connection (Switch 1 in this case) will be responsible for the call setup. Enter <b>y</b> when administering the data module for Switch 1.
Destination Digits:	Not needed if the “Establish Connection?” field is set to <b>n</b>
Destination Node Name:	Name of the node at the far end of this connection. This must be a name entered on the Node Names screen.
CHAP?	This field enables/disables the Challenge Handshake Authentication Protocol security mechanism on this link. If you enter <b>y</b> , the system will prompt for a CHAP secret (password).

> Submit the screen

**End**

## Switch 2 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on the Switch 2.

### Steps

#### Begin

> Open the Processor Channel Assignment form — enter **ch comp**

```
change communications-interface processor-channels
```

Page 1 of X

PROCESSOR CHANNEL ASSIGNMENT

Proc Chan	Enable	Appl.	Gtwy To	Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	<u>n</u>	_____	_____	—	_____	_____	<u>0</u>	_____	_____
2:	<u>n</u>	_____	_____	—	_____	_____	<u>0</u>	_____	_____
3:	<u>n</u>	_____	_____	—	_____	_____	<u>0</u>	_____	_____
4:	<u>n</u>	_____	_____	—	_____	_____	<u>0</u>	_____	_____
:									
21:	<u>y</u>	<u>dc</u> s	_____	<u>c</u>	<u>1</u> <u>0</u>	<u>node-1-ppp</u>	<u>5003</u>	<u>21</u> <u>12</u>	<u>1</u>
23:	<u>y</u>	<u>dc</u> s	_____	<u>c</u>	<u>1</u> <u>0</u>	<u>node-3</u>	<u>6004</u>	<u>23</u> <u>32</u>	<u>3</u>
:									
64:	<u>n</u>	_____	_____	—	_____	_____	<u>0</u>	_____	_____

> Enter values

Field	Conditions/Comments
<b>For Processor Channel 21:</b> (ppp connection to Switch 1)	
Enable	Set to <b>y</b> after the link administration is complete.
Appl.	Set to <b>dc</b> s for DCS signaling.
Mode	Node-2 is the “client” for this session. Set node-1-ppp on Switch 1 to “server” ( <b>s</b> ).
Interface Link	This must match the link number assigned on the node-2 data module screen.
Interface Chan	A value of <b>0</b> allows any available interface channel to be used for this connection. The Destination Port number on the Switch-1 Processor Channel screen must also be set to <b>0</b> .
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.
Destination Port	This number must match the Interface Channel number assigned on the Switch-1 Processor Channel screen

Field	Conditions/Comments
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.
<b>For Processor Channel 23:</b> (connection to Switch 3 through Switch 1)	
Enable	Set to <b>y</b> after the link administration is complete.
Appl.	Set to <b>dcs</b> for DCS signaling.
Mode	Node-2 is the “client” for this session. Set node-3 to “server” ( <b>s</b> ).
Interface Link	This must match the link number assigned on the node-2 data module screen.
Interface Chan	A value of <b>0</b> allows any available interface channel to be used for this connection. The Destination Port number on the Switch-1 Processor Channel screen must also be set to <b>0</b> .
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.
Destination Port	This number must match the Interface Channel number assigned on the Switch-1 Processor Channel screen
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.

> Submit the screen

**End**

## Switch 2 Task — Assign IP Route to node-3

This task specifies an initial route for messages handled by the “ppp on link 1 to node-1a” data module that are destined for node-3. An IP route is required for this route because node-2 is not directly or LAN-connected to node-3.

### Steps

#### Begin

> Enable the ppp link on the node-2 data module screen:

**ch da 3020**, set Enable Link? to **y**.

>Open the IP Routing form — enter **a ip n**

```

add ip-route next                                     Page 1 of 1
                                                    IP ROUTING

Route Number: 1
Destination Node: node-3
Gateway: node-1-ppp
C-LAN Board: 1a04
Metric: 0
    
```

[The system assigns the route number 1.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the destination of this route.
Gateway:	Node name of the gateway by which the destination node is reached for this route.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route.
Metric:	Enter 0.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

#### End

### Switch 3 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 3. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

#### Steps

##### Begin

- > Open Node Names form — enter `ch node-n`
- > Go to page 2

```

change node-names
                                                    Page 2 of 6

                        NODE NAMES

Name                IP Address                Name                IP Address
default            0 .0 .0 .0                _____          _____._____._____.____.
node-1-eth         192.168.10 .128             _____          _____._____._____.____.
node-2             192.168.10 .12             _____          _____._____._____.____.
node-3             192.168.10 .129             _____          _____._____._____.____.
_____            _____._____._____.____.         _____          _____._____._____.____.
    
```

> Enter values.

Field	Conditions/Comments
Name	Enter unique node names for the following 3 nodes: <ul style="list-style-type: none"> <li>• C-LAN Ethernet port on Switch 3</li> <li>• C-LAN Ethernet port on Switch 1.</li> <li>• C-LAN PPP port on Switch 2</li> </ul>
IP Address	The unique IP addresses of the nodes named in the previous field.

> Submit the screen

##### End

## Switch 3 Task — Assign Link via ethernet Data Module to the LAN

This task administers an ethernet data module on Switch 3 for the ethernet connection. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

### Steps

#### *Begin*

> Open Data Module form — enter **a da n**

```
add data next                                     Page 1 of X
                                         DATA MODULE
Data Extension: 3901                            Name: ethernet on link 1          BCC: 2
      Type: ethernet
      Port: 01a0517
      Link: 1
Enable Link? n
      Node Name: node-3

      Subnet Mask: 255.255.255.0
Broadcast Address: 192.168.10.255
Automatic Subnet Routing: y
```

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this link.
Port:	Ethernet connections must be assigned to port 17 on the C-LAN circuit pack.
Link:	The link number must be in the range 1 – 25, not previously assigned on this switch.
Enable Link?	Set to <b>y</b> after the link administration is complete.
Name:	Information-only; appears in “list data module” list.
Node Name:	The node name for the interface defined by this data module. This must be a name on the Node Names screen.
Subnet Mask:	Defines the network and host parts of the IP address. This example mask is the default for a Class-C IP address. It indicates no subnetting on this network (192.168.10).
Broadcast Address:	Specifies that all IP addresses on the network 192.168.10 are targets for broadcast messages. See <a href="#">Broadcast Address (page 228)</a> in Appendix A for more information on broadcast addresses.
Automatic Subnet Routing?	<b>y</b> allows automatic routing of all IP addresses on the subnet of the administered Ethernet IP address. If set to <b>n</b> , you must manually administer explicit IP Routes to addresses on the subnet.

> Submit the screen

**End**

### Switch 3 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on Switch 3.

#### Steps

##### Begin

> Open the Processor Channel Assignment form — enter **ch comp**

```
change communications-interface processor-channels
                                                    Page 1 of X
                PROCESSOR CHANNEL ASSIGNMENT
```

Proc Chan	Enable	Appl.	Gtwy To	Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	<u>n</u>	_____	—	—	—	—	<u>0</u>	—	—
2:	<u>n</u>	_____	—	—	—	—	<u>0</u>	—	—
:									
31:	<u>y</u>	<u>dc</u> s	<u>c</u>	<u>1</u>	<u>0</u>	<u>node-1-eth</u>	<u>5003</u>	<u>31</u> <u>13</u>	<u>1</u>
32:	<u>y</u>	<u>dc</u> s	<u>s</u>	<u>1</u>	<u>6004</u>	<u>node-2</u>	<u>0</u>	<u>32</u> <u>23</u>	<u>2</u>
64:	<u>n</u>	_____	—	—	—	—	<u>0</u>	—	—

> Enter values

Field	Conditions/Comments
<b>Processor Channel 31:</b> (ethernet connection to Switch 1)	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dc</b> s for DCS signaling.
Mode	Node-3 is the “client” for this session. Set node-1-eth to “server” ( <b>s</b> ).
Interface Link	This must match the link number assigned on the node-3 data module screen.
Interface Chan	A value of <b>0</b> allows any available interface channel to be used for this connection. The Destination Port number on the Switch-1 Processor Channel screen must also be set to <b>0</b> .
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	This number must match the Interface Channel number assigned on the Switch-1 Processor Channel screen.

Field	Conditions/Comments
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.
<b>For Processor Channel 32: (connection to Switch 2 through Switch 1)</b>	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dcs</b> for DCS signaling.
Mode	Node-3 is the “server” for this session. Set node-2 to “client” ( <b>c</b> ).
Interface Link	This must match the link number assigned on the node-3 data module screen.
Interface Chan	This must match the Destination Port number on the Switch-1 Processor Channels screen.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	A value of <b>0</b> allows any available interface channel on the destination node to be used for this connection. The Interface Channel number for this connection on the Switch-2 Processor Channel screen must also be set to <b>0</b> .
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.

2 of 2

> Submit the screen

**End**

### Switch 3 Task — Assign IP Route to node-2

This task specifies an initial route for messages handled by the “ethernet on link 1” data module that are destined for node-2. An IP route is required for this route because node-2 is not directly or LAN-connected to node-3.

#### Steps

##### Begin

0> Open the IP Routing form — enter **a ip n**

```

add ip-route next                                     Page 1 of 1
                                     IP ROUTING

Route Number: 4
Destination Node: node-2
Gateway: node-1-eth
C-LAN Board: 1a05
Metric: 0
    
```

[The system assigns the route number 4.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the destination of this route.
Gateway:	Node name of the gateway by which the destination node is reached for this route.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route.
Metric:	Enter 0.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

##### End

## Enable links and processor channels

You must enable links and processor channels before the connections can be used.

To enable a link, open its data module screen (**ch da [ext]**) and set the Enable Link? field to **y**.

[note: to view a list of assigned data modules and their extensions, enter the “list data-module” command (**l da**)]

To enable the processor channels, open the processor channel screen (**ch com p**) and set the Enable field to **y** for each assigned processor channel.


**Note:** 1. You must disable a link or processor channel before you can change its parameters.

**Note:** 2. The **busy-out** command overrules the data module Enable Link? field.

**Note:** 3. On the C-LAN boards, low-level connectivity can remain intact when higher-level applications such as DCS are not functioning. For example, an external ping to a C-LAN’s ethernet port could be successful even when the board is busied-out. When debugging connectivity problems, pinging only checks low-level connectivity.

## Configuration 5B: R7csi ←ppp→ R7r (2 C-LANs) ←ethernet→ R7si

In this configuration, a DEFINITY ECS R7r acts as a gateway between two other nodes — one connected via ppp to an R7csi and the other via ethernet to another R7si. This configuration is the same as configuration 5A except that Switch 1 has two C-LAN circuit packs instead of one. One C-LAN handles the ppp connection and the other handles the ethernet connection.

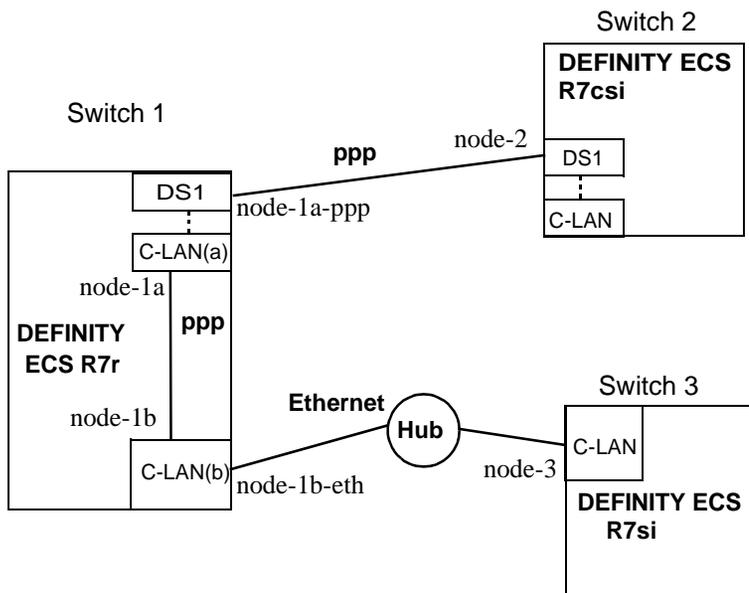

### Task Summary

The following tasks need to be completed for Switch 1, Switch 2, and Switch 3:

- 1 Review checklist
- 2 Switch 1 administration
  - a Assign node names
  - b Assign link to (via a data module) to node-2
  - c Assign link to (via a data module) to the LAN
  - d Assign link (via a data module) from C-LAN(a) to C-LAN(b)
  - e Assign link (via a data module) from C-LAN(b) to C-LAN(a)
  - f Assign processor channels
  - g Assign IP Route: C-LAN(a) to node-3
  - h Assign IP Route: C-LAN(b) to node-3
  - i Assign IP Route: C-LAN(b) to node-2
- 3 Switch 2 administration
  - a Enable bus bridge connectivity
  - b Assign node names
  - c Assign link (via a data module) to node-1a-ppp
  - d Assign processor channels
  - e Assign IP Route to node-3


- 4 Switch 3 administration
  - a Assign node names
  - b Assign link (via a data module) to the LAN
  - c Assign processor channels
  - d Assign IP Route to node-2
- 5 Enable links and processor channels

## Prerequisite Administration

There are some system administration tasks that need to be completed before you can proceed with the connectivity administration described in this section.

Review the checklist of prerequisite administration tasks in the [Checklist for Prerequisite Administration \(page 34\)](#), before proceeding with the connectivity administration in this section.

Configuration 5B

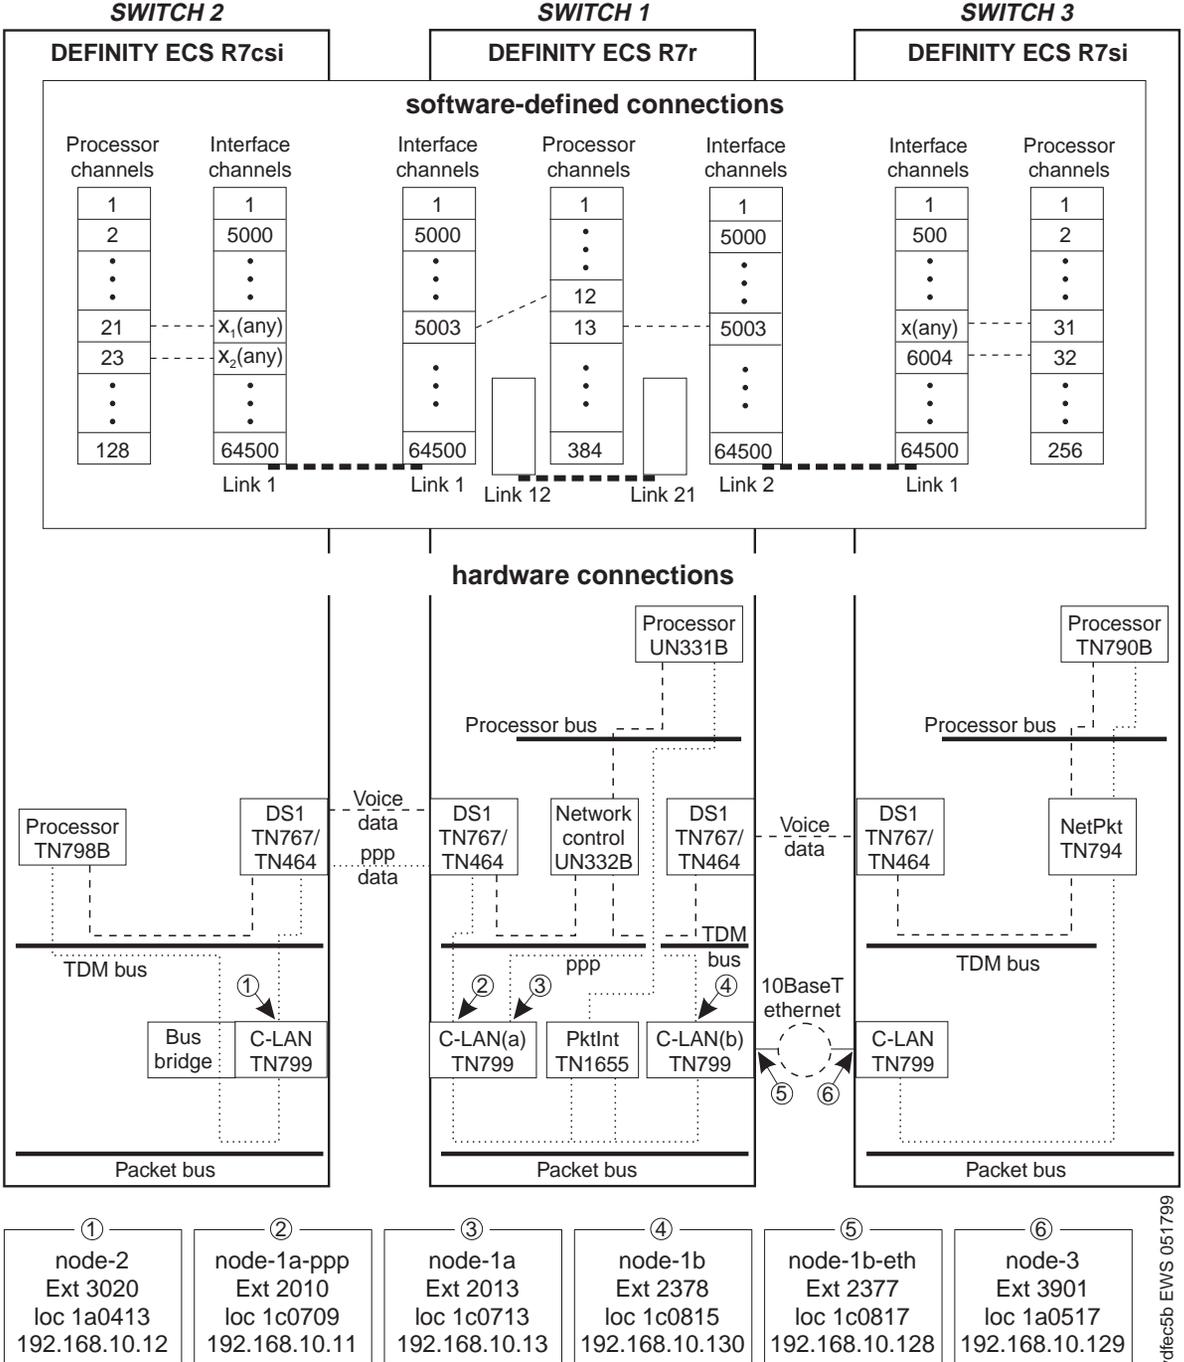

cydic5b EWS 051799

## Switch 1 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 1. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names form — enter `ch node-n`
- > Go to page 2

change node-names		Page 2 of 6	
		NODE NAMES	
Name	IP Address	Name	IP Address
<u>default</u>	<u>0 . 0 . 0 . 0</u>	_____	____.____.____.____
<u>node-1a-ppp</u>	<u>192.168.10 . 11</u>	_____	____.____.____.____
<u>node-1a</u>	<u>192.168.10 . 13</u>	_____	____.____.____.____
<u>node-1b</u>	<u>192.168.10 . 130</u>	_____	____.____.____.____
<u>node-1b-eth</u>	<u>192.168.10 . 128</u>	_____	____.____.____.____
<u>node-2</u>	<u>192.168.10 . 12</u>	_____	____.____.____.____
<u>node-3</u>	<u>192.168.10 . 129</u>	_____	____.____.____.____

> Enter values.

Field	Conditions/Comments
Name	Enter unique node names for the following 6 nodes: <ul style="list-style-type: none"> <li>• C-LAN(a) PPP port on Switch 1 for the connection to Switch 2</li> <li>• C-LAN(a) PPP port on Switch 1 for the connection to C-LAN(b)</li> <li>• C-LAN(b) PPP port on Switch 1 for the connection to C-LAN(a)</li> <li>• C-LAN(b) Ethernet port on Switch 1</li> <li>• C-LAN PPP port on Switch 2.</li> <li>• C-LAN Ethernet port on Switch 3</li> </ul>
IP Address	The unique IP addresses of the nodes named in the previous field.

> Submit the screen

#### End

## Switch 1 Task — Assign Link via ppp Data Module to Switch 2

This task administers a ppp data module on Switch 1 for the ppp connection to Switch 2. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

### Steps

#### Begin

> Open Data Module form — enter **ad da 2010**

```

add data-module 2010

```

Page 1 of x

DATA MODULE

Data Extension: 2010                      Name: ppp on link 1 to node 2      BCC: 2  
 Type: ppp                                  COS: 1  
 Port: 01c0709                              COR: 1  
 Link: 1                                      TN: 1  
 Enable Link? n

Node Name: node-1a-ppp

Establish Connection: y

DESTINATION

    Digits: 8993020  
 Node Name: node-2  
 CHAP? n

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this link.
Port:	In this example, the C-LAN(a) circuit pack is in slot 01c07; the ppp connection is through port 09.
Link:	The link number must be in the range 1 – 33 (for R7r), not previously assigned on this switch.
Enable Link?	If you need to add an IP route that uses this node as a gateway, this field must be set to <b>y</b> <i>before</i> adding the IP route. Otherwise leave this field set to <b>n</b> until the link administration is complete; that is, until after all data modules and the processor channels are assigned, then set to <b>y</b> .
Name:	Information-only; appears in list generated by the “list data module” command.
BCC:	Bearer Capability Class. This is a display-only field.

1 of 2

Field	Conditions/Comments
COS	The values for these fields will be specified by the system administrator.
COR:	
TN:	
Node Name:	The node name for the interface defined by this data module. This must be a name entered on the Node Names screen.
Establish Connection?	<b>y</b> means that this switch will be responsible for the call setup. Enter <b>n</b> when administering the data module for Switch 2.
Destination Digits:	Trunk access code (899) plus extension of data module on node-2 (3020).
Destination Node Name:	Name of the node at the far end of this connection. Must be a name entered on the Node Names screen
CHAP?	This field enables/disables the Challenge Handshake Authentication Protocol security mechanism on this link. If you enter <b>y</b> , the system will prompt for a CHAP secret (password).
<b>2 of 2</b>	

> Submit the screen

**End**

## Switch 1 Task — Assign Link via ethernet Data Module to the LAN

This task administers an ethernet data module on Switch 1 for the ethernet connection. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

### Steps

#### Begin

> Open Data Module form — enter **a da n**

```

add data next
                                                    Page 1 of X
                DATA MODULE

Data Extension: 2377                Name: ethernet on link 2      BCC: 2
      Type: ethernet
      Port: 01c0817
      Link: 2
      Enable Link? n

      Node Name: node-1b-eth

      Subnet Mask: 255.255.255.0
      Broadcast Address: 192.168.10.255
      Automatic Subnet Routing? n
    
```

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Port:	Ethernet connections must be assigned to port 17 on the C-LAN(b) circuit pack.
Link:	The link number must be in the range 1 – 33 (for R7r), not previously assigned on this switch.
Enable Link?	Set to <b>y</b> after the link administration is complete.
Name:	Information-only; appears in list generated by the “list data module” command.
Node Name:	The node name for the interface defined by this data module. This must be a name entered on the Node Names screen.

**1 of 2**

Field	Conditions/Comments
Subnet Mask:	Defines the network and host parts of the IP address. This example mask is the default for a Class-C IP address. It indicates no subnetting on this network (192.168.10).
Broadcast Address:	Specifies that all IP addresses on the network 192.168.10 are targets for broadcast messages. See <a href="#">Broadcast Address (page 228)</a> in Appendix A for more information on broadcast addresses.
Automatic Subnet Routing?	<b>n</b> disables automatic routing — you must manually administer explicit IP Routes to addresses on the subnet. A <b>y</b> allows automatic routing of all IP addresses on the subnet of the administered Ethernet IP address.
<b>2 of 2</b>	

> Submit the screen

**End**

## Switch 1 Task — Assign Link via ppp Data Module to C-LAN(a)

This task administers a ppp data module on Switch 1 for the ppp connection from the C-LAN(b) circuit pack to the C-LAN(a) circuit pack.

### Steps

#### Begin

> Open Data Module form — enter **ad da 2378**

```

add data-module 2378
                                                    Page 1 of x

                                DATA MODULE

Data Extension: 2378                                Name: ppp on link 21 to clan(a) BCC: 2
    Type: ppp                                        COS: 1
    Port: 01c0815                                    COR: 1
    Link: 21                                         TN: 1
    Enable Link? n

    Node Name: node-1b

Establish Connection: n

DESTINATION
    Digits: _____
    Node Name: node-1a
    CHAP? n
    
```

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this link.
Port:	In this example, the C-LAN(b) circuit pack is in slot 01c08; the ppp connection is through port 15.
Link:	The link number must be in the range 1 – 33 (for R7r), not previously assigned on this switch
Enable Link?	If you need to add an IP route that uses this node as a gateway, this field must be set to <b>y</b> <i>before</i> adding the IP route. Otherwise leave this field set to <b>n</b> until the link administration is complete; that is, until after all data modules and the processor channels are assigned, then set to <b>y</b> .
Name:	Information-only; appears in list generated by the “list data module” command.
BCC:	Bearer Capability Class. This is a display-only field.

**1 of 2**

Field	Conditions/Comments
COS	The values for these fields will be specified by the system administrator.
COR:	
TN:	
Node Name:	The node name for the interface defined by this data module. This must be a name entered on the Node Names screen.
Establish Connection?	<b>n</b> means that the node at the remote end of this connection (node-1b in this case) will be responsible for the call setup. Enter <b>y</b> when administering the data module for node-1b.
Destination Digits:	Not needed if the “Establish Connection?” field is set to <b>n</b>
Destination Node Name:	Name of the node at the far end of this connection. Must be a name entered on the Node Names screen.
CHAP?	This field enables/disables the Challenge Handshake Authentication Protocol security mechanism on this link. If you enter <b>y</b> , the system will prompt for a CHAP secret (password).
<b>2 of 2</b>	

> Submit the screen

**End**

## Switch 1 Task — Assign Link via ppp Data Module to C-LAN(b)

This task administers a ppp data module on Switch 1 for the ppp connection from the C-LAN(a) circuit pack to the C-LAN(b) circuit pack.

### Steps

#### Begin

> Open Data Module form — enter **ad da 2013**

```

add data-module 2013
                                     Page 1 of x

                                DATA MODULE

Data Extension: 2013                Name: ppp on link 12 to clan(b) BCC: 2
    Type: ppp                        COS: 1
    Port: 01c0713                   COR: 1
    Link: 12                          TN: 1
    Enable Link? n

    Node Name: node-1a

Establish Connection: y

DESTINATION
    Digits: 2378
    Node Name: node-1b
    CHAP? n
    
```

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this link.
Port:	In this example, the C-LAN(a) circuit pack is in slot 01a07; the ppp connection is through port 13.
Link:	The link number must be in the range 1 – 33 (for R7r), not previously assigned on this switch.
Enable Link?	If you need to add an IP route that uses this node as a gateway, this field must be set to <b>y</b> <i>before</i> adding the IP route. Otherwise leave this field set to <b>n</b> until the link administration is complete; that is, until after all data modules and the processor channels are assigned, then set to <b>y</b> .
Name:	Information-only; appears in list generated by the “list data module” command.
BCC:	Bearer Capability Class. This is a display-only field.

**1 of 2**

Field	Conditions/Comments
COS	The values for these fields will be specified by the system administrator.
COR:	
TN:	
Node Name:	The node name for the interface defined by this data module. This must be a name entered on the Node Names screen.
Establish Connection?	<b>y</b> means that this node is responsible for the call setup for the link to node-1c. Enter <b>n</b> when administering the data module for node-1c.
Destination Digits:	Extension (2378) of data module on node-1c.
Destination Node Name:	Name of the node at the far end of this connection. Must be a name entered on the Node Names screen.
CHAP?	This field enables/disables the Challenge Handshake Authentication Protocol security mechanism on this link. If you enter <b>y</b> , the system will prompt for a CHAP secret (password).
<b>2 of 2</b>	

> Submit the screen

**End**

## Switch 1 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on Switch 1. Note that there are no processor channels or interface channels associated with the ppp connection between the two C-LAN circuit packs.

### Steps

#### Begin

> Open the Processor Channel Assignment form — enter **ch comp**.

```
change communications-interface processor-channels
                                                    Page 1 of X
                PROCESSOR CHANNEL ASSIGNMENT
```

Proc Chan	Enable	Appl.	Gtwy To	Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	<u>n</u>	_____	—	—	_____	_____	<u>0</u>	—	—
2:	<u>n</u>	_____	—	—	_____	_____	<u>0</u>	—	—
3:	<u>n</u>	_____	—	—	_____	_____	<u>0</u>	—	—
:									
12:	<u>y</u>	<u>dc</u> s	<u>s</u>	<u>1</u>	<u>5003</u>	<u>node-2</u>	<u>0</u>	<u>12</u>	<u>21</u>
13:	<u>y</u>	<u>dc</u> s	<u>s</u>	<u>2</u>	<u>5003</u>	<u>node-3</u>	<u>0</u>	<u>13</u>	<u>31</u>
:									
384:	<u>n</u>	_____	—	—	_____	_____	<u>0</u>	—	—

> Enter values

Field	Conditions/Comments
<b>Processor Channel 12: (ppp connection to Switch 2)</b>	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dc</b> s for DCS signaling.
Mode	Node-1a is the “server” for this session. Set node-2 to “client” ( <b>c</b> ).
Interface Link	This must match the link number assigned on the node-1a data module screen.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500. The value 5003 is recommended for the DCS connection. This number must match the Destination Port number on the Switch-2 Processor Channel screen
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.

1 of 2

Field	Conditions/Comments
Destination Port	A value of 0 allows any available interface channel on the destination node to be used for this connection. The Interface Channel number on the Switch-2 Processor Channel screen must also be set to 0.
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.
<b>Processor Channel 13:</b> (ethernet connection to Switch 3)	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dcS</b> for DCS signaling.
Mode	Node-1d is the “server” for this session. Set to node-3 to “client” ( <b>c</b> ).
Interface Link	This must match the link number assigned on the node -1d data module screen.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500. The value 5003 is recommended for the DCS connections. This number must match the Destination Port number on the Switch-3 Processor Channel screen
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	A value of 0 allows any available interface channel on the destination node to be used for this connection. The Interface Channel number on the Switch-3 Processor Channel screen must also be set to 0.
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.

2 of 2

> Submit the screen

**End**

### Switch 1 Task — Assign IP Route: C-LAN(a) to node-3

This task specifies an initial route for messages handled by C-LAN(a) destined for node-3.

#### Steps

##### Begin

> Enable the ppp link on the node-1a data module screen:

**ch da 2013**, set Enable Link? to **y**.

> Open the IP Routing form — enter **a ip n**

```

add ip-route next                                     Page 1 of 1
                                                    IP ROUTING

Route Number: 1
Destination Node: node-3
Gateway: node-1b
C-LAN Board: 1c07
Metric: 1
    
```

[The system assigns the route number 1.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the destination of this route.
Gateway:	Node name of the gateway by which the destination node is reached for this route.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route.
Metric:	Enter <b>1</b> , which indicates a complex route involving two C-LAN boards.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

##### End

### Switch 1 Task — Assign IP Route: C-LAN(b) to node-3

This task specifies an initial route for messages handled by C-LAN(b) that are destined for node-3. An IP route is required for this data module because **n** (no) was entered in the “Automatic Subnet Routing?” field on the data module screen.

#### Steps

##### Begin

> Open the IP Routing form — enter **a ip n**

```

add ip-route next                                     Page 1 of 1
                                                    IP ROUTING

Route Number: 2
Destination Node: node-3
Gateway: node-1b-eth
C-LAN Board: 1c08
Metric: 0
    
```

[The system assigns the route number 2.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the destination of this route.
Gateway:	Node name of the gateway by which the destination node is reached for this route.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route. For simple routes, the gateway node is on this circuit pack.
Metric:	Enter 0.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

##### End

## Switch 1 Task — Assign IP Route: C-LAN(b) to node-2

This task specifies an initial route for messages handled by C-LAN(b) destined for node-2.

### Steps

#### Begin

> Enable the ppp link on the node-1b data module screen:

**ch da 2378**, set Enable Link? to **y**.

> Open the IP Routing form — enter **a ip n**

```

add ip-route next                                     Page 1 of 1
                                                    IP ROUTING

Route Number: 3
Destination Node: node-2
Gateway: node-1a
C-LAN Board: 1c08
Metric: 1
    
```

[The system assigns the route number 3.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the destination of this route.
Gateway:	Node name of the gateway by which the destination node is reached for this route.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route.
Metric:	Enter <b>1</b> , which indicates a complex route involving two C-LAN boards.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

#### End

## Switch 2 Task — Enable Bus Bridge Connectivity

This task enables the bus bridge functionality on the C-LAN circuit pack to provide a path between the packet bus and the processor.

**Note:** Bus Bridge Connectivity is used on the csi model only. This task may have been complete when the C-LAN circuit pack was installed.

### Steps

#### Begin

- > Open the Maintenance-Related System Parameters form — enter **ch sys ma**
- > Go to page 2 and skip to the Packet Intf2? field near the bottom of the screen

```
change system-parameters maintenance                               Page 2 of 3

                MAINTENANCE-RELATED SYSTEM PARAMETERS

MINIMUM MAINTENANCE THRESHOLDS ( Before Notification )
    TTRs: 4          CPTRs: 1          Call Classifier Ports: 0
    MMIs: 0          VCs: 0

TERMINATING TRUNK TRANSMISSION TEST ( Extension )
    Test Type 100:          Test Type 102:          Test Type 105:

ISDN MAINTENANCE
    ISDN-PRI Test Call Extension:          ISDN-BRI Service SPID:

DS1 MAINTENANCE
    DS0 Loop-Around Test Call Extension:

LOSS PLAN ( Leave Blank if no Extra Loss is Required )
    Minimum Number of Parties in a Conference Before Adding Extra Loss:

SPE OPTIONAL BOARDS
    Packet Intf1? y          Packet Intf2? y
    Bus Bridge: 01a04__Inter-Board Link Timeslots Pt0: 6 Pt1: 1 Pt2: 1
```

> Enter values

Field	Conditions/Comments
Packet Intf2?	Enables the bus bridge.
Bus Bridge:	Location of the C-LAN circuit pack. If the system has two C-LANs, only one is administered for bus bridge.
Inter-Board Link Timeslots: Pt0, Pt1, Pt2	Specifies the bandwidth used on the 3 ports of the Inter-Board Link. The total number of timeslots assigned cannot exceed 11. Pt0 carries PPP traffic and can have 1–9 timeslots. Pt1 carries maintenance messages and can have 1–3 timeslots. Pt2 carries broadcast messages and can have 1–3 timeslots.

> Submit the screen

#### End

## Switch 2 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 2. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names form — enter `ch node-n`
- > Go to page 2

```
change node-names                                     Page 2 of 6
                                     NODE NAMES
Name      IP Address      Name      IP Address
default   0 .0 .0 .0         _____ . . . .
node-1a   192.168.10 .11     _____ . . . .
node-2    192.168.10 .12     _____ . . . .
node-3    192.168.10 .129   _____ . . . .
_____   . . . .         _____   . . . .
```

> Enter values.

Field	Conditions/Comments
Name	Enter unique node names for the following 3 nodes: <ul style="list-style-type: none"> <li>• C-LAN(a) PPP port on Switch 1 for the connection to Switch 2</li> <li>• C-LAN PPP port on Switch 2</li> <li>• C-LAN Ethernet port on Switch 3</li> </ul>
IP Address	The unique IP addresses of the nodes named in the previous field.

> Submit the screen

#### End

## Switch 2 Task — Assign Link via ppp Data Module to Switch 1

This task administers a ppp data module on Switch 2 for the ppp connection to Switch 1. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

### Steps

#### Begin

> Open Data Module form — enter **ad da 3020**

```
add data-module 3020
```

Page 1 of x

#### DATA MODULE

```
Data Extension: 3020          Name: ppp on link 1 to node-1a-ppp BCC: 2
      Type: ppp              COS: 1
      Port: 01a0413         COR: 1
      Link: 1              TN: 1
      Enable Link? n

      Node Name: node-2
```

```
Establish Connection: n
```

#### DESTINATION

```
      Digits: _____
      Node Name: node-1a-ppp
      CHAP? n
```

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Port:	In this example, the C-LAN circuit pack is in slot 01a04; the ppp connection is through port 13.
Link:	The link number must be in the range 1 – 25 (for R7csi), not previously assigned on this switch
Enable Link?	If you need to add an IP route that uses this node as a gateway, this field must be set to <b>y</b> <i>before</i> adding the IP route. Otherwise leave this field set to <b>n</b> until the link administration is complete; that is, until after all data modules and the processor channels are assigned, then set to <b>y</b> .
Name:	Information-only; appears in list generated by the “list data module” command.
BCC:	Bearer Capability Class. This is a display-only field.

Field	Conditions/Comments
COS:	The values for these fields will be specified by the system administrator.
COR:	
TN:	
Node Name:	The node name for the interface defined by this data module. This must be a name entered on the Node Names screen.
Establish Connection?	<b>n</b> means that the switch at the remote end of this connection (Switch 1 in this case) will be responsible for the call setup. Enter <b>y</b> when administering the data module for Switch 1.
Destination Digits:	Not needed if the “Establish Connection?” field is set to <b>n</b>
Destination Node Name:	Name of the node at the far end of this connection. This must be a name entered on the Node Names screen.
CHAP?	This field enables/disables the Challenge Handshake Authentication Protocol security mechanism on this link. If you enter <b>y</b> , the system will prompt for a CHAP secret (password).

> Submit the screen

**End**

## Switch 2 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on Switch 1.

### Steps

#### Begin

> Open the Processor Channel Assignment form — enter **ch comp**

```
change communications-interface processor-channels
```

Page 1 of X

PROCESSOR CHANNEL ASSIGNMENT

Proc Chan	Enable	Appl.	Gtwy To	Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	<u>n</u>	_____	—	—	—	_____	<u>0</u>	—	—
2:	<u>n</u>	_____	—	—	—	_____	<u>0</u>	—	—
3:	<u>n</u>	_____	—	—	—	_____	<u>0</u>	—	—
4:	<u>n</u>	_____	—	—	—	_____	<u>0</u>	—	—
:									
21:	<u>y</u>	<u>dc</u> s	<u>c</u>	<u>1</u>	<u>0</u>	<u>node-1a-ppp</u>	<u>5003</u>	<u>21</u>	<u>12</u>
23:	<u>y</u>	<u>dc</u> s	<u>c</u>	<u>1</u>	<u>0</u>	<u>node-3</u>	<u>6004</u>	<u>23</u>	<u>32</u>
:									
64:	<u>n</u>	_____	—	—	—	_____	<u>0</u>	—	—

> Enter values

Field	Conditions/Comments
<b>For Processor Channel 21:</b> (ppp connection to Switch 1)	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dc</b> s for DCS signaling.
Mode	Node-2 is the “client” for this session. Set node-1a to “server” ( <b>s</b> ).
Interface Link	Must match the link number assigned on the node-2 data module screen.
Interface Chan	A value of <b>0</b> allows any available interface channel to be used for this connection. The Destination Port number on the Switch-1 Processor Channel screen must also be set to <b>0</b> .
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.
Destination Port	This number must match the Interface Channel number assigned on the Switch-1 Processor Channel screen.

Field	Conditions/Comments
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.
<b>For Processor Channel 23: (connection to Switch 3 through Switch 1)</b>	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dcs</b> for DCS signaling.
Mode	Node-2 is the “client” for this session. Set node-3 to “server” ( <b>s</b> ).
Interface Link	This must match the link number assigned on the node-2 data module screen.
Interface Chan	A value of <b>0</b> allows any available interface channel to be used for this connection. The Destination Port number on the Switch-3 Processor Channel screen must also be set to <b>0</b> .
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	This number must match the Interface Channel number assigned on the Switch-3 Processor Channel screen.
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.

> Submit the screen

**End**

## Switch 2 Task — Assign IP Route to node-3

This task specifies an initial route for messages handled by the “ppp on link 1 to node-1” data module that are destined for node-3. An IP route is required for this route because node-3 is not directly or LAN-connected to node-2.

### Steps

#### Begin

> Enable the ppp link on the node-2 data module screen:

**ch da 3020**, set Enable Link? to **y**.

> Open the IP Routing form — enter **a ip n**

```

add ip-route next                                     Page 1 of 1
                                                    IP ROUTING

Route Number: 4
Destination Node: node-3
Gateway: node-1a-ppp
C-LAN Board: 1a04
Metric: 0
    
```

[The system assigns the route number 4.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the destination of this route.
Gateway:	Node name of the gateway by which the destination node is reached for this route.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route. For simple routes, the gateway node is on this circuit pack.
Metric:	Enter 0.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

#### End

## Switch 3 Task — Assign Node Names

This task assigns node names and IP addresses to each node in the network. This screen is administered on Switch 3. A Node Names screen must be administered on each switch in the network.

A *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX or other MSA network interface card. The Audix and MSA node name and IP address must be entered on page 1 of the screen. The data for all other node types must be entered on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from a Lucent representative.

**Note:** Enter node names for Intuity AUDIX and MSA adjuncts on *page 1*. Enter node names for switches, routers, and CMS starting on *page 2*.

### Steps

#### Begin

- > Open Node Names form — enter `ch node-n`
- > Go to page 2

```
change node-names                                     Page 2 of 6
                                         NODE NAMES
Name          IP Address          Name          IP Address
default       0 .0 .0 .0           _____   _____._____.____
node-1b       192.168.10 .128      _____   _____._____.____
node-2       192.168.10 .12       _____   _____._____.____
node-3       192.168.10 .129      _____   _____._____.____
_____       _____._____.____     _____   _____._____.____
```

- > Enter values.

Field	Conditions/Comments
Name	Enter unique node names for the following 3 nodes: <ul style="list-style-type: none"> <li>• C-LAN(b) Ethernet port on Switch 1</li> <li>• C-LAN PPP port on Switch 2</li> <li>• C-LAN Ethernet port on Switch 3</li> </ul>
IP Address	The unique IP addresses of the nodes named in the previous field

- > Submit the screen

#### End

### Switch 3 Task — Assign Link via ethernet Data Module to the LAN

This task administers an ethernet data module on Switch 3 for the ethernet connection to Switch 1. The data module associates a link number with a port address, extension number, and node name for the C-LAN port used for this connection.

#### Steps

##### Begin

> Open Data Module form — enter **a da n**

```

add data next
                                                    Page 1 of X
                        DATA MODULE

Data Extension: 3901           Name: ethernet on link 1      BCC: 2
      Type: ethernet
      Port: 01a0517
      Link: 1
      Enable Link? n

      Node Name: node-3

      Subnet Mask: 255.255.255.0
      Broadcast Address: 192.168.10.255
      Automatic Subnet Routing: y
    
```

> Enter values

Field	Conditions/Comments
Type:	This indicates the data-module type for this connection.
Port:	Ethernet connections must be assigned to port 17 on the C-LAN circuit pack.
Link:	The link number must be in the range 1 – 25 (for R7si), not previously assigned on this switch.
Enable Link?	This field must be set to <b>y</b> after the link administration is complete.
Name:	Information-only; appears in list generated by the "list data module" command.
Node Name:	The node name for the interface defined by this data module. This must be a name entered on the Node Names screen.

Field	Conditions/Comments
Subnet Mask:	Defines the network and host parts of the IP address. This example mask is the default for a Class-C IP address. It indicates no subnetting on this network (192.168.10).
Broadcast Address:	Specifies that all IP addresses on the network 192.168.10 are targets for broadcast messages. See <a href="#">Broadcast Address (page 228)</a> in Appendix A for more information on broadcast addresses.
Automatic Subnet Routing?	<b>y</b> allows automatic routing of all IP addresses on the subnet of the administered Ethernet IP address. If set to <b>n</b> , you must manually administer explicit IP Routes to addresses on the subnet.

> Submit the screen

**End**

### Switch 3 Task — Assign Processor Channels

This task associates data links (hardware) with processor channels (software) on Switch 3.

#### Steps

##### Begin

> Open the Processor Channel Assignment form — enter **ch comp**

```
change communications-interface processor-channels
                                                    Page 1 of X
                PROCESSOR CHANNEL ASSIGNMENT

Proc      Gtwy      Interface      Destination      Session      Mach
Chan  Enable  Appl.  To  Mode  Link/Chan  Node      Port  Local/Remote  ID
  1:    n          _____  -  -  -  -  -  -  -  -
  2:    n          _____  -  -  -  -  -  -  -  -
  3:    n          _____  -  -  -  -  -  -  -  -
  4:    n          _____  -  -  -  -  -  -  -  -
  :
 31:    y     dcs            c      1   0      node-1b-eth   5003   31   13   1 
 32:    y     dcs            s      1   6004   node-2      0      32   23   2 
  :
 64:    n          _____  -  -  -  -  -  -  -  -
```

> Enter values

Field	Conditions/Comments
<b>Processor Channel 31:</b> (ethernet connection to Switch 1)	
Enable	Set to <b>y</b> .
Appl.	Set to <b> dcs </b> for DCS signaling.
Mode	Node-3 is the "client" for this session. Set node-1 to "server" ( <b>s</b> ).
Interface Link	This must match the link number assigned on the node-3 data module screen.
Interface Chan	A value of <b>0</b> allows any available interface channel to be used for this connection. The Destination Port number on the Switch-1 Processor Channel screen must also be set to <b>0</b> .
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	This number must match the Interface Channel number assigned on the Switch-1 Processor Channel screen.

Field	Conditions/Comments
Session - Local	The Local and Remote Session numbers can be any value between 1 and 256 (si model) or 384 (r model), but they must be consistent between endpoints. For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.  It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. It is allowed, but not recommended, to use the same Session numbers for two or more connections.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.
<b>For Processor Channel 32: (connection to Switch 2 through Switch 1)</b>	
Enable	Set to <b>y</b> .
Appl.	Set to <b>dcs</b> for DCS signaling.
Mode	Node-3 is the "server" for this session. Set node-2 to "client" ( <b>c</b> ).
Interface Link	This must match the link number assigned on the node-3 data module screen.
Interface Chan	For TCP/IP, interface channel numbers are in the range 5000 – 64500. This number must match the Destination Port number on the Switch-3 Processor Channel screen.
Destination Node	Name of the far-end node for this channel. This must be a name entered on the Node Names screen.
Destination Port	A value of <b>0</b> allows any available interface channel on the destination node to be used for this connection. The Interface Channel number on the Switch-2 Processor Channel screen must also be set to <b>0</b> .
Session - Local	For each connection, the Local Session number on this switch must equal the Remote Session number on the remote switch and vice versa.
Session - Remote	
Mach ID	Destination switch ID identified on the dial plan of the destination switch.

2 of 2

> Submit the screen

**End**

### Switch 3 Task — Assign IP Route to node-2

This task specifies an initial route for messages handled by the "ethernet on link 1" data module that are destined for node-2. An IP route is required for this route because node-2 is not directly or LAN-connected to node-3.

#### Steps

##### Begin

> Open the IP Routing form — enter **a ip n**

```

add ip-route next                                     Page 1 of 1
                                                    IP ROUTING

Route Number: 1
Destination Node: node-2
Gateway: node-1b-eth
C-LAN Board: 1a05
Metric: 0
    
```

[The system assigns the route number 1.]

> Enter values

Field	Conditions/Comments
Destination Node:	The name of the node at the destination of this route.
Gateway:	Node name of the gateway by which the destination node is reached for this route.
C-LAN Board:	The location of the C-LAN circuit pack that provides the interface for this route. For simple routes, the gateway node is on this circuit pack.
Metric:	Enter 0.  See <a href="#">IP Routing (page 241)</a> in Appendix A for more information on the use of the Metric field.

> Submit the screen

##### End

## Enable links and processor channels

You must enable links and processor channels before the connections can be used.

To enable a link, open its data module screen (**ch da [ext]**) and set the Enable Link? field to **y**.

[note: to view a list of assigned data modules and their extensions, enter the “list data-module” command (**l da**)]

To enable the processor channels, open the processor channel screen (**ch com p**) and set the Enable field to **y** for each assigned processor channel.

**Note:** 1. You must disable a link or processor channel before you can change its parameters.

**Note:** 2. The **busy-out** command overrules the data module Enable Link? field.

**Note:** 3. On the C-LAN boards, low-level connectivity can remain intact when higher-level applications such as DCS are not functioning. For example, an external ping to a C-LAN’s ethernet port could be successful even when the board is busied-out. When debugging connectivity problems, pinging only checks low-level connectivity.



# 3 Networking Example



This chapter provides an example of a complex network. It describes procedures for administering trunk groups, dial plans, signaling groups, and data links for a four-switch network with an Intuity AUDIX and a CMS.

---

## Overview

This section shows a high-level diagram of the example network and lists the administration tasks that need to be completed for each node to set up the network.

### NOTE:


The term *node* is used in this chapter, as in the other chapters, to mean a network interface such as a port on the C-LAN board. Traditionally, in a DCS network of DEFINITY switches, *node* has been used to refer to a switch.

In this chapter a “DCS node” is referred to as a “Switch Node.” Thus, a Switch Node (a switch) can have many nodes (network interfaces).

The Dial Plan and AAR Digit Analysis Table screens both have fields that still use *node* to refer to a switch.

## Network Diagram

The following diagram shows a high-level view of the example network.

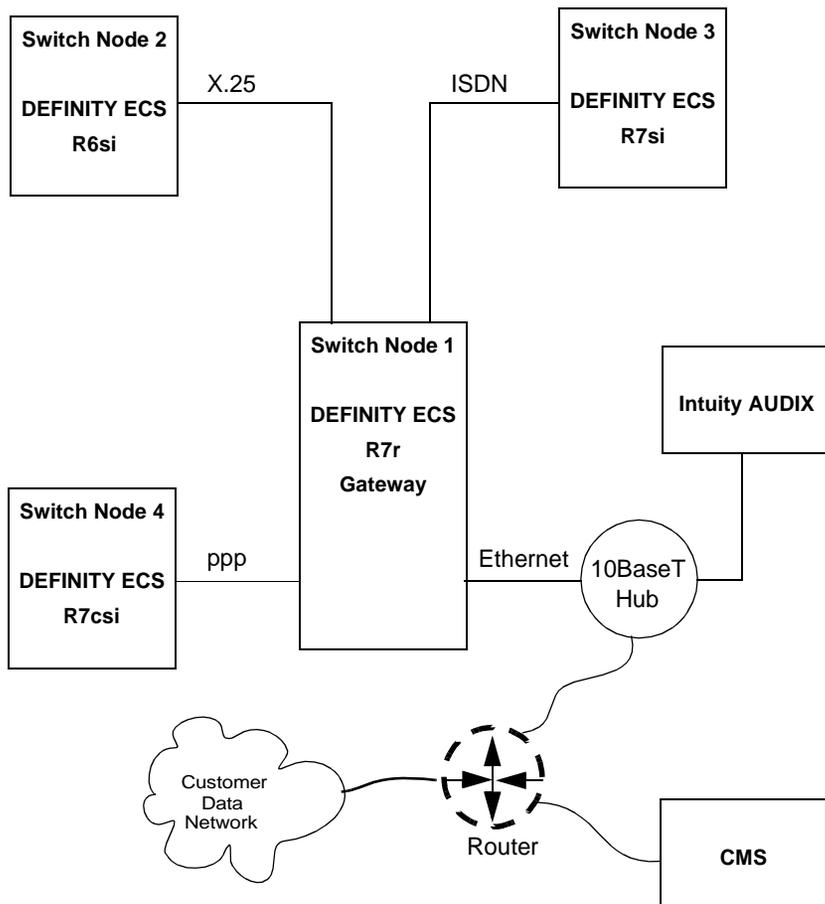


## Task Summary

The following matrix summarizes the administration tasks required to set up this network.

Administration Task	Switch Node 1 R7r	Switch Node 2 R6si	Switch Node 3 R7csi	Switch Node 4 R7si	CMS	Intuity AUDIX
DS1 Circuit Pack	X	X	X	X		
Synchronization Plan	X	X	X	X		
Trunk Groups	X	X	X	X		
Dial Plan	X	X	X	X		
Uniform Dialing Plan	X	X	X	X		
AAR Digit Analysis	X	X	X	X		
Signaling Group	X		X			
Hunt Group		X	X	X		
ISDN TSC Gateway Channel Assignment	X					
Interface Links		X				
Node Names	X			X	X	X
IP Route	X			X	X	X
Data Modules	X	X	X	X		
Processor Channel Assignments	X	X	X	X	X	X
Routing Patterns	X	X	X	X		
Bus Bridge			X			
Intuity Translations for DCS Audix						X
CMS Server Translations					X	


# Link/Channel/TSC Map

The link/channel/TSC map shows the link, processor channel, and temporary signaling connection numbers, and the connection types for each Switch Node in the network.

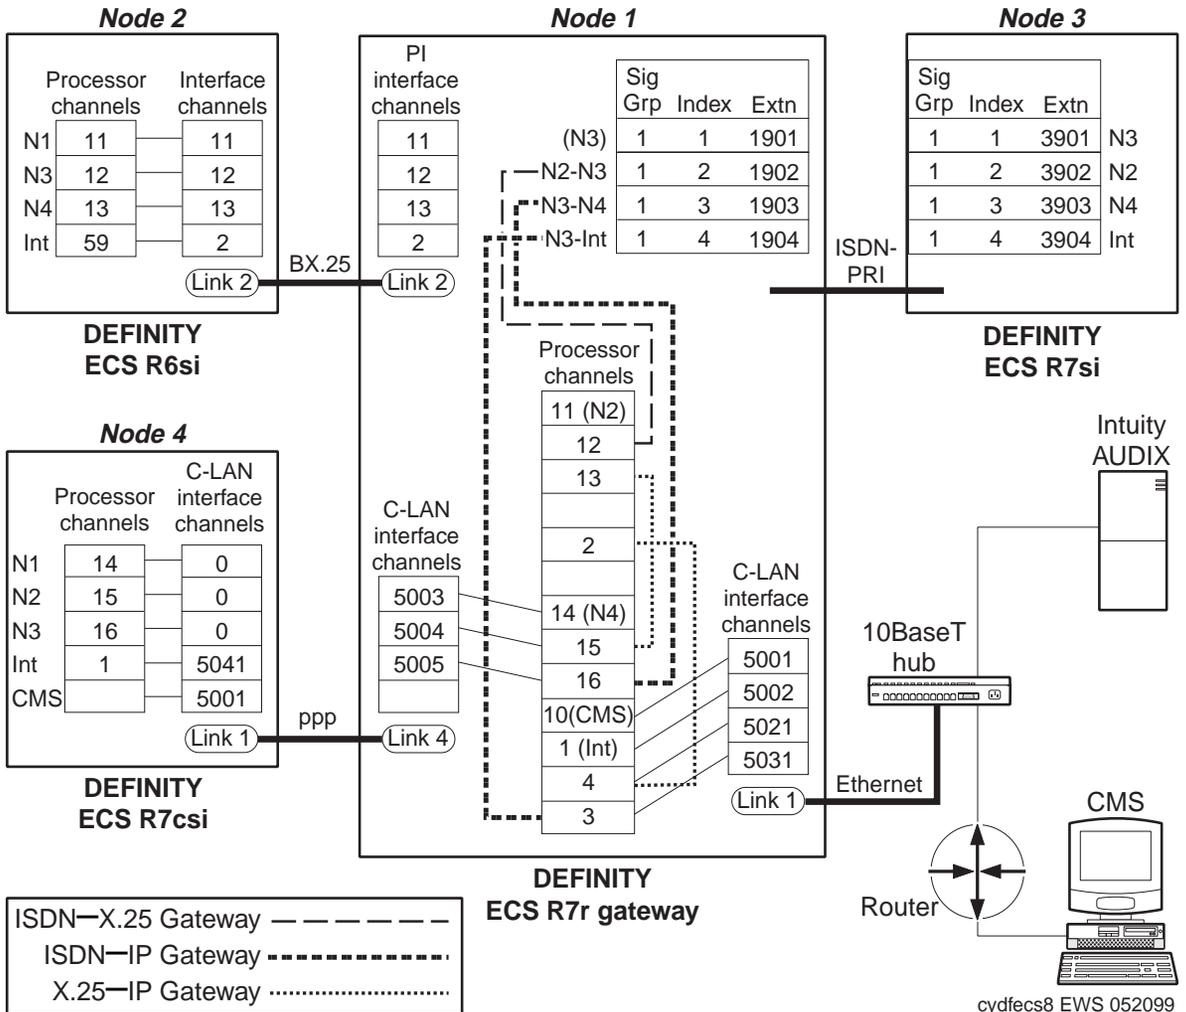

# Network Map

The network map shows the RNX, trunk group, hunt group numbers, data module type, and extension for each Switch Node in the network. For TCP/IP connections, the node name and IP address is shown for each node.

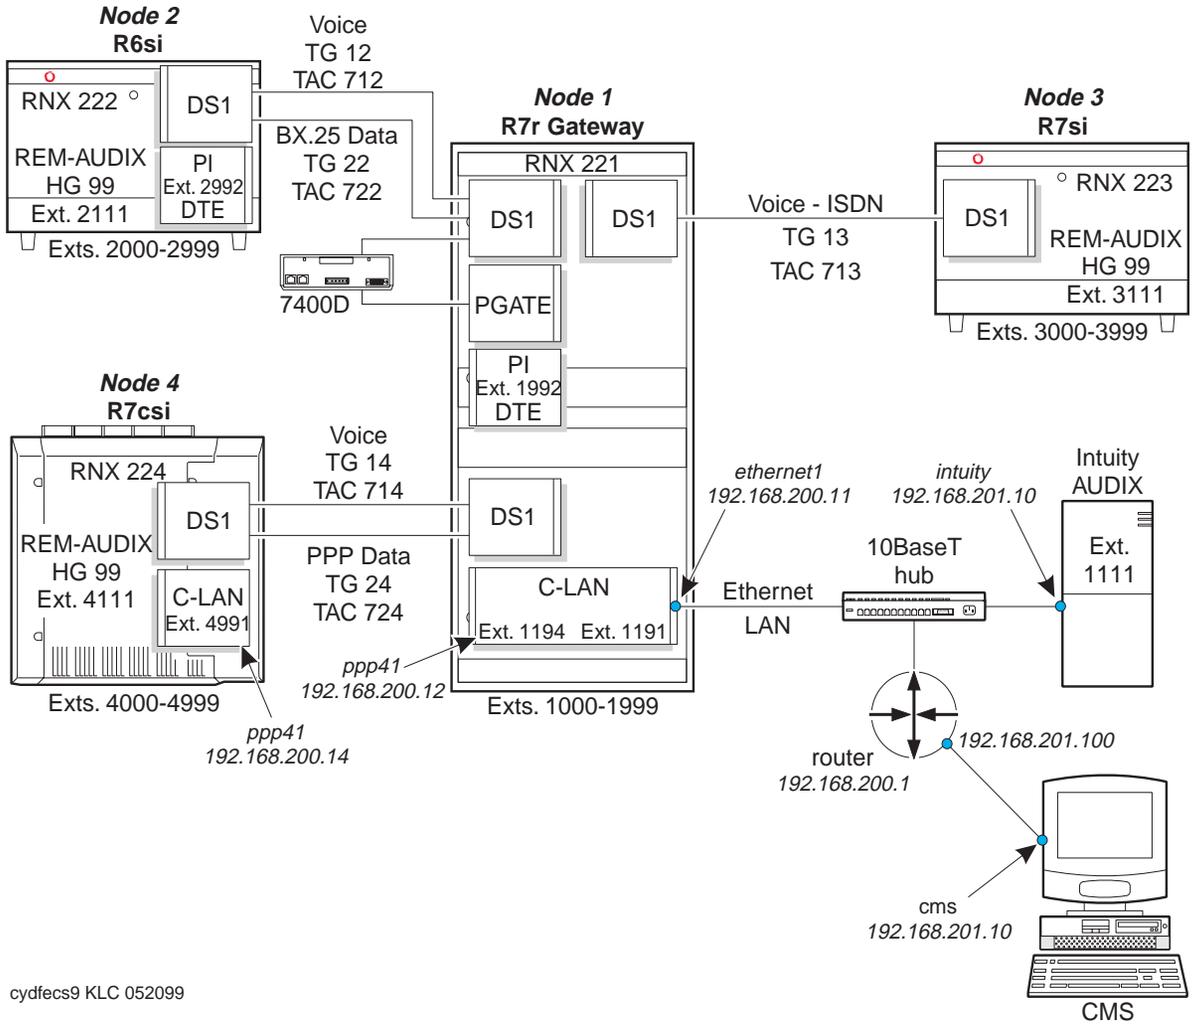

cydfecs9 KLC 052099

# Switch-Node 1 Administration

This section displays the filled-in screens for the administration of Switch Node 1.

## DS1 Circuit Packs

### Connection to Switch Node 2

```

add ds1 1c19                                     Page 1 of 2
                                         DS1 CIRCUIT PACK

      Location: 01c19                               Name: Switch 1 to Switch 2
      Bit Rate: 1.544                               Line Coding: b8zs
Line Compensation: 1                               Framing Mode: esf
      Signaling Mode: common-chan

Interface Companding: mulaw
      Idle Code: 11111111
      DMI-BOS? n

Slip Detection? n                               Near-end CSU Type: other

```

### Connection to Switch Node 3

```

add ds1 1c18                                     Page 1 of 2
                                         DS1 CIRCUIT PACK

      Location: 01c18                               Name: Switch 1 to Switch 3
      Bit Rate: 1.544                               Line Coding: b8zs
Line Compensation: 1                               Framing Mode: esf
      Signaling Mode: isdn-pri
      Connect: pbx                               Interface: network
      Country Protocol: 1
      Protocol Version: a
Interface Companding: mulaw                       CRC? n
      Idle Code: 11111111
      DCP/Analog Bearer Capability: 3.1kHz

Slip Detection? n                               Near-end CSU Type: other

```

### Connection to Switch Node 4

```

add ds1 1c17
                                     Page 1 of 2
                                     DS1 CIRCUIT PACK

      Location: 01C17                      Name: Switch 1 to Switch 4
      Bit Rate: 1.544                      Line Coding: b8zs
Line Compensation: 1                      Framing Mode: esf
      Signaling Mode: robbed bit

Interface Companding: mulaw
      Idle Code: 11111111
      DMI-BOS? n

Slip Detection? n                      Near-end CSU Type: other

```

### Dial Plan

```

display dialplan
                                     DIAL PLAN RECORD

                                     Local Node Number: 1
                                     ETA Node Number:
Uniform Dialing Plan: 4-digit          ETA Routing Pattern:
UDP Extension Search Order: local-extensions-first
FIRST DIGIT TABLE
First                               Length
Digit - 1 -      - 2 -      - 3 -      - 4 -      - 5 -      - 6 -
1:                               extension
2:                               extension
3:                               extension
4:                               extension
5:
6:
7:                               dac
8: fac
9: fac
0: attd
*:                               dac
#:                               dac

```

## Signaling Group

Page 1

```

change signaling group next                               Page 1 of 5
                SIGNALING GROUP
Group Number: 1                Group Type:
Associated Signaling? y                Max number of NCA TSC: 5
Primary D-Channel: 01c1824                Max number of CA TSC: 23
                                                Trunk Group for NCA TSC: 13
Trunk Group for Channel Selection:     
Supplementary Service Protocol: a

```

Page 2 – Administered  
NCA TSC Assignment

```

                ADMINISTERED NCA TSC ASSIGNMENT                Page 2 of 5
Service/Feature: _____ As-needed Inactivity Time-out (min): __
TSC   Local
Index  Ext.  Enabled Established Dest. Digits Appl.   Adj.   Mach.
      :    :    :    :    :    :    :    :    :
  1:  1901  y   permanent 3901    dc      _____ 3
  2:  1902  y   permanent 3902    gateway _____
  3:  1903  y   permanent 3903    gateway _____
  4:  1904  y   permanent 3904    gateway _____
  5:
  :
 16:

```

## Synchronization Plan

```

                SYNCHRONIZATION PLAN                Page 1 of X
SYNCHRONIZATION SOURCE (circuit pack location)
Stratum: 4
Port Network: 1
Primary: 01c20                Secondary: _____

Location  Name          Slip  Type      Location  Name          Slip  Type
01c17  DCS Node 4      n    UDS1-BD   _____
01c18  DCS Node 3      n    TBRI-BD   _____
01c19  DCS Node 2      n    _____
01c20  AT&T            y    _____
_____  _____        _____
_____  _____        _____
_____  _____        _____
_____  _____        _____
_____  _____        _____
NOTE: TN722B & TN464B DS1 sources result in stratum 4, type II synchronization

```

## Trunk Groups

### Group 12 (tie to Switch Node 2) — page 1

```

add trunk-group 12                                     Page 1 of 10
                                                    TRUNK GROUP
Group Number: 12          Group Type: tie          CDR Reports: y
Group Name: Switch 1 to Switch 2 tg12  COR: 1          TN: 1          TAC: 712
Direction: two-way      Outgoing Display? n      Trunk Signaling Type:
Dial Access? y          Busy Threshold: 99        Night Service:
Queue Length: 0          Comm Type: avd          Auth Code? n      Incoming Destination:
                        Trunk Flash? n
                        BCC: 0
TRUNK PARAMETERS
Trunk Type (in/out): wink/wink      Incoming Rotary Timeout(sec): 5
Outgoing Dial Type: tone            Incoming Dial Type: tone
Wink Timer(msec): 300              Disconnect Timing(msec): 500
Digit Treatment:                   Digits:
Connected to Toll? n              STT Loss: normal      DTT to DCO Loss: normal
Incoming Dial Tone? y
Bit Rate: 1200                    Synchronization: async Duplex: full
Disconnect Supervision - In? y Out? n
Answer Supervision Timeout: 0      Receive Answer Supervision? y

```

### Group 12 — Page 2

```

display trunk-group 12                               Page 2 of 10
TRUNK FEATURES
ACA Assignment? n          Measured: none
Internal Alert? n          Maintenance Tests? y
Data Restriction? n       Glare Handling: none
Used for DCS? y          PBX ID: 2
Suppress # Outpulsing? n
Seize When Maintenance Busy: neither-end

Incoming Tone (DTMF) ANI: no      Per Call CPN Blocking Code:
Connected to CO? n              Per Call CPN Unblocking Code:

```

### Group 12 — member assignments

```

                                                    TRUNK GROUP
Administered Members (min/max): 1/3
GROUP MEMBER ASSIGNMENTS      Total Administered Members: 3
Port   Code Sfx Name      Night      Mode      Type      Ans Delay
1: 01c1901 TN767 F                    20
2: 01c1902 TN767 F                    20
3: 01c1903 TN767 F                    20
4:
5:

```

Group 22 (data to  
Switch Node 2)— page1

```

add trunk-group 22                                     Page 1 of 10
                                     TRUNK GROUP
Group Number: 22           Group Type: tie           CDR Reports: y
Group Name: DCS data to node 2 - TG22  COR: 1       TN: 1       TAC: 722
Direction: two-way       Outgoing Display? n       Trunk Signaling Type:
Dial Access? y           Busy Threshold: 99       Night Service:
Queue Length: 0           Auth Code? n           Incoming Destination:
Comm Type: data           Trunk Flash? n
BCC: 0
TRUNK PARAMETERS
Trunk Type (in/out): wink/wink       Incoming Rotary Timeout(sec): 5
Outgoing Dial Type: tone             Incoming Dial Type: tone
Wink Timer(msec): 300               Disconnect Timing(msec): 500
Digit Treatment:                    Digits:
Connected to Toll? n               STT Loss: normal           Sig Bit Inversion: none
Incoming Dial Tone? y             DTT to DCO Loss: normal
Bit Rate: 1200                   Synchronization: async    Duplex: full
Disconnect Supervision - In? y Out? n
Answer Supervision Timeout: 0       Receive Answer Supervision? y

```

## Group 22 — Page 2

```

add trunk-group 22                                     Page 2 of 10
TRUNK FEATURES
ACA Assignment? n           Measured: none
Internal Alert? n           Maintenance Tests? y
Data Restriction? n        Glare Handling: none
Used for DCS? n
Suppress # Outpulsing? n    Seize When Maintenance Busy: neither-end
Incoming Tone (DTMF) ANI: no       Per Call CPN Blocking Code:
Connected to CO? n             Per Call CPN Unblocking Code:

```

Group 22 — Group  
member assignments

```

                                     TRUNK GROUP
Administered Members (min/max): 1/3
GROUP MEMBER ASSIGNMENTS           Total Administered Members: 3
Port   Code Sfx Name           Night           Mode           Type           Ans Delay
1: 01c1923 TN767 F
2:
3:
4:
5:
6:
7:
8:
9:
10:

```

Group 13 (ISDN-PRI to  
Switch Node 3) —  
page 1

```

add trunk-group 13                                     Page 1 of 10
                                     TRUNK GROUP

Group Number: 13                               Group Type: isdn           CDR Reports: y
Group Name: ISDN TG 13 to Switch 3           COR: 1                 TN: 1                 TAC: 713
Direction: two-way                         Outgoing Display? n       ATM? -
Dial Access? n                               Busy Threshold: 99       Night Service: _____
Queue Length: 0
Service Type: tie                             Auth Code? n           TestCall ITC: rest
                                     Far End Test Line No:

TestCall BCC: 4
TRUNK PARAMETERS
  Codeset to Send Display: 6                 Codeset to Send TCM,Lookahead: 6
  Max Message Size to Send: 260             Charge Advice: none
  Supplementary Service Protocol: a         Digit Handling (in/out): enbloc/enbloc

  Trunk Hunt: cyclical
  Connected to Toll? n                       STT Loss: normal       DTT to DCO Loss: normal
Calling Number - Delete: _____           Insert: _____         Numbering Format: _____
  Bit Rate: 1200                             Synchronization: async   Duplex: full
Disconnect Supervision - In? y Out? n
Answer Supervision Timeout: 0

```

Group 13 — page 2

```

display trunk-group 13                               Page 2 of 10
TRUNK FEATURES
  ACA Assignment? n                             Measured: none         Wideband Support? n
                                     Internal Alert? n       Maintenance Tests? y
  Data Restriction? n                         NCA-TSC Trunk Member: 1
  Send Name: n                                 Send Calling Number: n

  Used for DCS? y   PBX ID: 3
  Suppress # Outpulsing? n                   DCS Signaling: d-chan
Outgoing Channel ID Encoding: preferred     UII IE Treatment: service-provider

                                     Send Connected Number: n

  Send UCID? n
Send Codeset 6/7 LAI IE? y

```

Group 13 — member  
assignments

```

add trunk-group 13                                     Page 4 of 10
                                     TRUNK GROUP
                                     Administered Members (min/max): 0/0
GROUP MEMBER ASSIGNMENTS                             Total Administered Members: 0

  Port    Code Sfx Name      Night      Sig Grp
1: 01c1801 TN464 E          1
2: 01c1802 TN464 E          1
3: 01c1803 TN464 E          1
4: 01c1804 TN464 E          1
5:
6:
7:

```

## Group 14 (tie to Switch Node 4) — page 1

```

add trunk-group 14                                     Page 1 of 10
                                     TRUNK GROUP
Group Number: 14                                     Group Type: tie                                     CDR Reports: y
Group Name: Switch 1 to Switch 4 tg14                COR: 1                                     TN: 1                                     TAC: 714
Direction: two-way                                   Outgoing Display? n                         Trunk Signaling Type:
Dial Access? y                                       Busy Threshold: 99                           Night Service:
Queue Length: 0                                       Incoming Destination:
Comm Type: voice                                       Auth Code? n
                                                    Trunk Flash? n
BCC: 0
TRUNK PARAMETERS
Trunk Type (in/out): wink/wink                       Incoming Rotary Timeout(sec): 5
Outgoing Dial Type: tone                               Incoming Dial Type: tone
Wink Timer(msec): 300                                 Disconnect Timing(msec): 500
Digit Treatment:                                       Digits:
                                                    Sig Bit Inversion: none
Connected to Toll? n                                   STT Loss: normal                             DTT to DCO Loss: normal
Incoming Dial Tone? y
Bit Rate: 1200                                        Synchronization: async                       Duplex: full
Disconnect Supervision - In? y Out? n
Answer Supervision Timeout: 0                         Receive Answer Supervision? y

```

## Group 14 — Page 2

```

add trunk-group 14                                     Page 2 of 10
TRUNK FEATURES
ACA Assignment? n                                     Measured: none
                                                    Internal Alert? n                               Maintenance Tests? y
Data Restriction? n
Glare Handling: none
Used for DCS? y   PBX ID: 4
Suppress # Outpulsing? n
Seize When Maintenance Busy: neither-end

Incoming Tone (DTMF) ANI: no                         Per Call CPN Blocking Code:
Connected to CO? n                                   Per Call CPN Unblocking Code:

```

## Group 14 — member assignments

```

                                     TRUNK GROUP
Administered Members (min/max): 1/3
GROUP MEMBER ASSIGNMENTS                       Total Administered Members: 3

Port   Code Sfx Name      Night      Mode      Type      Ans Delay
1: 01c1701 TN767 F
2: 01c1702 TN767 F
4: 01c1703 TN767 F
5:
6:
7:
8:
9:
10:

```

Group 24 (data to  
Switch Node 4) —  
page1

```

add trunk-group 24                                     Page 1 of 10
                                     TRUNK GROUP

Group Number: 24           Group Type: tie           CDR Reports: y
Group Name: DCS data to node 4-TG24   COR: 1           TN: 1           TAC: 724
Direction: two-way         Outgoing Display? n   Trunk Signaling Type:
Dial Access? y             Busy Threshold: 99     Night Service:
Queue Length: 0             Incoming Destination:
Comm Type: rbavd           Auth Code? n
                             Trunk Flash? n

BCC: 0
TRUNK PARAMETERS
Trunk Type (in/out): wink/wink           Incoming Rotary Timeout(sec): 5
Outgoing Dial Type: tone                 Incoming Dial Type: tone
Wink Timer(msec): 300                   Disconnect Timing(msec): 500
Digit Treatment:                         Digits:
Connected to Toll? n                     STT Loss: normal           DTT to DCO Loss: normal
Incoming Dial Tone? y
Bit Rate: 1200                           Synchronization: async    Duplex: full
Disconnect Supervision - In? y Out? n
Answer Supervision Timeout: 0             Receive Answer Supervision? y

```

## Group 24 — Page 2

```

add trunk-group 24                                     Page 2 of 10
TRUNK FEATURES
ACA Assignment? n           Measured: none
Internal Alert? n           Maintenance Tests? y
Data Restriction? n        Glare Handling: none
Used for DCS? n
Suppress # Outpulsing? n
Seize When Maintenance Busy: neither-end

Incoming Tone (DTMF) ANI: no           Per Call CPN Blocking Code:
Connected to CO? n                   Per Call CPN Unblocking Code:

```

Group 24 — member  
assignments

```

                                     TRUNK GROUP
Administered Members (min/max): 1/3
GROUP MEMBER ASSIGNMENTS           Total Administered Members: 3

Port   Code Sfx Name           Night           Mode           Type           Ans Delay
1: 01c1723 TN767 F
2:
3:
4:
5:
6:
7:
8:
9:
10:

```

## Uniform Dialing Plan

```
display udp 2
```

Page 1 of 2

UNIFORM DIALING PLAN  
Ext Codes: ddxx

Ext Code: \_\_\_\_\_ Type: \_\_\_\_\_

dd	Type	dd	Type	dd	Type	dd	Type	dd	Type
0x: _____		1x: <u>local</u>		2x: <u>udpcode 222</u>		3x: <u>udpcode 223</u>		4x: <u>udpcode 224</u>	
00: _____		10: _____		20: _____		30: _____		40: _____	
01: _____		11: _____		21: _____		31: _____		41: _____	
02: _____		12: _____		22: _____		32: _____		42: _____	
03: _____		13: _____		23: _____		33: _____		43: _____	
04: _____		14: _____		24: _____		34: _____		44: _____	
05: _____		15: _____		25: _____		35: _____		45: _____	
06: _____		16: _____		26: _____		36: _____		46: _____	
07: _____		17: _____		27: _____		37: _____		47: _____	
08: _____		18: _____		28: _____		38: _____		48: _____	
09: _____		19: _____		29: _____		39: _____		49: _____	

## AAR Digit Analysis

```
display aar analysis 1
```

Page 1 of 2

AAR DIGIT ANALYSIS TABLE

Percent Full: 6

Dialed String	Total		Route Pattern	Call Type	Node Num	ANI Reqd
	Min	Max				
222	7	7	102	aar	2	n
223	7	7	103	aar	3	n
224	7	7	104	aar	4	n

## ISDN TSC Gateway Channel Assignment

```
change isdn tsc-gateway
```

Page 1 of 2

ISDN TSC GATEWAY CHANNEL ASSIGNMENT									
Sig Group	Adm'd TSC	NCA Index	Processor Channel	Appli-cation	Sig Group	Adm'd TSC	NCA Index	Processor Channel	Appli-cation
1: <u>1</u>		<u>2</u>	<u>12</u>	<u>dc</u> s	17: —		—	—	—
2: <u>1</u>		<u>3</u>	<u>16</u>	<u>dc</u> s	18: —		—	—	—
3: <u>1</u>		<u>4</u>	<u>3</u>	<u>audix</u>	19: —		—	—	—
4: —		—	—	—	20: —		—	—	—
:									

## Routing Patterns

## Pattern 102

```
display route-pattern 102
```

Pattern Number: 102

Grp. No.	FRL	NPA	Pfx	Hop	Toll	No. Del	Inserted	IXC
			Mrk	Lmt	List	Digits	Digits	
1:12		0				3		user
2:								user
3:								user
4:								user
5:								user
6:								user

	BCC	VALUE	TSC	CA-TSC	ITC	BCIE	Service/Feature	Numbering	LAR	
	0	1	2	3	4	W	Request	Format		
1:	y	y	y	y	y	n	n	both	ept	none
2:	y	y	y	y	y	n	n	rest		none
3:	y	y	y	y	y	n	n	rest		none
4:	y	y	y	y	y	n	n	rest		none
5:	y	y	y	y	y	n	n	rest		none
6:	y	y	y	y	y	n	n	rest		none

## Pattern 103

add route-pattern 103

Pattern Number: 103

Grp. No.	FRL	NPA	Pfx Mrk	Hop Lmt	Toll List	No. Del Digits	Inserted Digits	IXC
1:13		0				3		user
2:								user
3:								user
4:								user
5:								user
6:								user

BCC	VALUE	TSC	CA-TSC	ITC	BCIE	Service/Feature	Numbering Format	LAR	
0	1	2	3	4	W	Request			
1:	y	y	y	y	y	n	y as needed	both ept	
2:	y	y	y	y	y	n		rest	none
3:	y	y	y	y	y	n		rest	none
4:	y	y	y	y	y	n		rest	none
5:	y	y	y	y	y	n		rest	none
6:	y	y	y	y	y	n		rest	none

## Pattern 104

display route-pattern 104

Pattern Number: 104

Grp. No.	FRL	NPA	Pfx Mrk	Hop Lmt	Toll List	No. Del Digits	Inserted Digits	IXC
1:14		0				3		user
2:								user
3:								user
4:								user
5:								user
6:								user

BCC	VALUE	TSC	CA-TSC	ITC	BCIE	Service/Feature	Numbering Format	LAR	
0	1	2	3	4	W	Request			
1:	y	y	y	y	y	n		both ept	
2:	y	y	y	y	y	n		rest	none
3:	y	y	y	y	y	n		rest	none
4:	y	y	y	y	y	n		rest	none
5:	y	y	y	y	y	n		rest	none
6:	y	y	y	y	y	n		rest	none

## Node Names

page 1

change node-names

Page 1 of 6

## NODE NAMES

Audix Names	IP Address	MSA Names	IP Address
<u>intuity</u>	<u>192.168.200.10</u>	<u>msa</u>	<u>____.____.____.____</u>

page 2

change node names

Page 2 of 6

## NODE NAMES

Name	IP Address	Name	IP Address
1. <u>ppp14</u>	<u>192.168.200.12</u>	17. _____	____.____.____.____
2. <u>ppp41</u>	<u>192.168.200.14</u>	18. _____	____.____.____.____
3. <u>CMS</u>	<u>192.168.201.10</u>	19. _____	____.____.____.____
4. <u>router</u>	<u>192.168.200.1</u>	20. _____	____.____.____.____
5. <u>ethernet1</u>	<u>192.168.200.11</u>		
:			
16.			

## Data Modules

x.25 data module

add data-module 1992

Page 1 of 2

## DATA MODULE

```

Data Extension: 1992                Name: x.25 on link 2 to node 2
      Type: x.25                    Remote Loop-Around Test? n
      Port: 01C0101                COR: 1                    Destination Number: external
      Baud Rate: 9600                TN: 1                      Establish Connection? n
      Endpoint Type: adjunct        Connected Data Module: 1900
      Link: 2                        DTE/DCE: dte            Error Logging? n
      Enable Link: n

Permanent Virtual Circuit? y        Highest PVC Logical Channel: 64
Switched Virtual Circuit? n

```

## pdm data module

```

add data-module 1900                                     Page 1 of 1

                                DATA MODULE

Data Extension: 1900          Name:                               BCC: 2
      Type: pdm              COS: 1          Remote Loop-Around Test? n
      Port: 01c2001          COR: 1          Secondary data module? n
      ITC: restricted        TN: 1           Connected To: dte

```

## ABBREVIATED DIALING

```
List1:
```

## SPECIAL DIALING OPTION:

```
ASSIGNED MEMBER ( Station with a data extension button for this data module )
```

```
Ext      Name
```

```
1:
```

## ppp data module

```

add data-module 1994                                     Page 1 of x

                                DATA MODULE

Data Extension: 1994          Name: ppp on link 4 to node 4    BCC: 2
      Type: ppp              COS: 1
      Port: 01c1502          COR: 1
      Link: 4                TN: 1
      Enable Link? n

      Node Name: ppp14

IP Address Negotiation: n
  Establish Connection: y

DESTINATION
  Digits: 7241991
  Node Name: ppp41
  CHAP? n

```

## ethernet data module

add data 1191

Page 1 of X

## DATA MODULE

Data Extension: 1191 Name: ethernet on link 1 BCC: 2  
 Type: ethernet  
 Port: 01c1517  
 Link: 1  
 Enable Link? n

Node Name: ethernet1  
 Subnet Mask: 255.255.255.0  
 Broadcast Address: 192.168.200.255  
 Automatic Subnet Routing: y

## Processor Channel Assignments

change communications-interface processor-channels

Page 1 of X

## PROCESSOR CHANNEL ASSIGNMENT

Proc	Chan	Enable	Appl.	Gtwy	To	Mode	Link/Chan	Interface	Destination	Port	Session	Mach
									Node		Local/Remote	ID
	1:	<u>y</u>	<u>audix</u>			<u>s</u>	<u>1</u>	<u>5002</u>	<u>intuity</u>	<u>0</u>	<u>1</u>	<u>1</u>
	2:	<u>y</u>	<u>gtwy-tcp</u>	<u>4</u>		<u>-</u>	<u>2</u>	<u>2</u>			<u>2</u>	<u>59</u>
	3:	<u>y</u>	<u>gateway</u>			<u>s</u>	<u>1</u>	<u>5031</u>	<u>intuity</u>	<u>0</u>	<u>3</u>	<u>3</u>
	4:	<u>y</u>	<u>gtwy-tcp</u>	<u>2</u>		<u>s</u>	<u>1</u>	<u>5021</u>	<u>intuity</u>	<u>0</u>	<u>2</u>	<u>2</u>
	:											
	:											
	10:	<u>y</u>	<u>mis</u>			<u>s</u>	<u>1</u>	<u>5001</u>	<u>cms</u>	<u>0</u>	<u>1</u>	<u>1</u>
	11:	<u>y</u>	<u>dcs</u>			<u>-</u>	<u>2</u>	<u>11</u>			<u>11</u>	<u>11</u>
	12:	<u>y</u>	<u>gateway</u>			<u>-</u>	<u>2</u>	<u>12</u>			<u>12</u>	<u>12</u>
	13:	<u>y</u>	<u>gtwy-tcp</u>	<u>15</u>		<u>-</u>	<u>2</u>	<u>13</u>			<u>13</u>	<u>13</u>
	14:	<u>y</u>	<u>dcs</u>			<u>s</u>	<u>4</u>	<u>5003</u>	<u>ppp41</u>	<u>0</u>	<u>14</u>	<u>14</u>
	15:	<u>y</u>	<u>gtwy-tcp</u>	<u>13</u>		<u>s</u>	<u>4</u>	<u>5004</u>	<u>ppp41</u>	<u>0</u>	<u>15</u>	<u>15</u>
	16:	<u>y</u>	<u>gateway</u>			<u>s</u>	<u>4</u>	<u>5005</u>	<u>ppp41</u>	<u>0</u>	<u>16</u>	<u>16</u>
	:											
	64:	<u>-</u>				<u>-</u>				<u>0</u>		

## IP Routing

### IP route 1

```
add ip-route next                                     Page 1 of 1
                                                    IP ROUTING

Route Number: 1
Destination Node: router
Gateway: ethernet1
C-LAN Board: lc15
Metric: 0
```

### IP route 2

```
add ip-route next                                     Page 1 of 1
                                                    IP ROUTING

Route Number: 2
Destination Node: cms
Gateway: router
C-LAN Board: lc15
Metric: 0
```

## Switch-Node 2 Administration

This section displays the filled-in screens for the administration of Switch Node 2.

### DS1 Circuit Packs

```
add ds1 1a10
                                DS1 CIRCUIT PACK

                                Location: 01a10
                                Bit Rate: 1.544
                                Line Compensation: 1
                                Signaling Mode: common-chan

                                Name: sw 2 to sw 1
                                Line Coding: b8zs
                                Framing Mode: esf

                                Idle Code: 11111111
                                DMI-BOS? n

                                Slip Detection? n
```

### Dial Plan

```
change dialplan
                                DIAL PLAN RECORD

                                Local Node Number: 2
                                ETA Node Number:
                                Uniform Dialing Plan: 4-digit
                                ETA Routing Pattern:
                                UDP Extension Search Order: local-extensions-first

FIRST DIGIT TABLE
First                               Length
Digit - 1 -           - 2 -           - 3 -           - 4 -           - 5 -           - 6 -
1:                               extension
2:                               extension
3:                               extension
4:                               extension
5:
6:
7:                               dac
8: fac
9: fac
0: attd
*:                               dac
#:                               dac
```



Group 12 — Page 2

```

display trunk-group 12                                     Page 2 of 10
TRUNK FEATURES
  ACA Assignment? n                                     Measured: none
                                                    Internal Alert? n       Maintenance Tests? y
  Data Restriction? n
  Glare Handling: none
  Used for DCS? y   PBX ID: 1
  Suppress # Outpulsing? n
  Seize When Maintenance Busy: neither-end

Incoming Tone (DTMF) ANI: no                               Per Call CPN Blocking Code:
  Connected to CO? n                                       Per Call CPN Unblocking Code:
    
```

Group 12 — member assignments

```

TRUNK GROUP
  Administered Members (min/max): 1/3
  Total Administered Members: 3
GROUP MEMBER ASSIGNMENTS

  Port   Code Sfx Name      Night      Mode      Type      Ans Delay
1: 01a1001 TN767 E
2: 01a1002 TN767 E
3: 01a1003 TN767 E
4:
5:
6:
    
```

Uniform Dialing Plan

```

change udp x                                             Page 1 of 2
UNIFORM DIALING PLAN
  Ext Codes: dxxx

dd   Type      dd   Type      dd   Type      dd   Type      dd   Type
0x:  _____ 1x: udpcode 221 2x: local      3x: udpcode 223 4x: udpcode 224
00:  _____ 10:  _____ 20:  _____ 30:  _____ 40:  _____
01:  _____ 11:  _____ 21:  _____ 31:  _____ 41:  _____
02:  _____ 12:  _____ 22:  _____ 32:  _____ 42:  _____
03:  _____ 13:  _____ 23:  _____ 33:  _____ 43:  _____
04:  _____ 14:  _____ 24:  _____ 34:  _____ 44:  _____
05:  _____ 15:  _____ 25:  _____ 35:  _____ 45:  _____
06:  _____ 16:  _____ 26:  _____ 36:  _____ 46:  _____
07:  _____ 17:  _____ 27:  _____ 37:  _____ 47:  _____
08:  _____ 18:  _____ 28:  _____ 38:  _____ 48:  _____
09:  _____ 19:  _____ 29:  _____ 39:  _____ 49:  _____
7
    
```

## AAR Digit Analysis

```
change aar analysis 1
```

AAR DIGIT ANALYSIS TABLE							
							Page 1 of 2
							Percent Full: 6
Dialed String	Total Min	Total Max	Route Pattern	Call Type	Node Num	ANI Reqd	
221	7	7	101	aar	1	n	
223	7	7	101	aar	3	n	
224	7	7	101	aar	4	n	

## Routing Patterns

```
display route-pattern 101
```

Pattern Number: 101									
Grp. No.	FRL	NPA	Pfx Mrk	Hop Lmt	Toll List	No. Digits	Del Digits	Inserted	IXC
1:12	0					3			user
2:									user
3:									user
4:									user
5:									user
6:									user

## Data Modules

## procr-intf data module

```
add data-module 2992
```

DATA MODULE				Page 1 of 1
Data Extension:	<u>2992</u>	Name:	<u>x.25 on link 2 to node 1</u>	
Type:	<u>procr-intf</u>	COS:	1	Maintenance Extension: <u>2002</u>
Physical Channel:	<u>02</u>	COR:	1	Destination Number: <u>7221993</u>
ITC:	<u>Restricted</u>	TN:	1	Establish Connection? <u>y</u>
Link:	<u>2</u>	DTE/DCE:	<u>dce</u>	Connected Data Module:
		Enable Link:	<u>n</u>	
ABBREVIATED DIALING				
List1:	_____			
SPECIAL DIALING OPTION: _____				
ASSIGNED MEMBER (Station with a data extension button for this data module)				
	Ext	Name		
1.				

## Processor Channel Assignments

Release 6 Processor  
Channel Assignment  
screen

```
change communications-interface processor-channels Page 1 of 4
```

PROCESSOR CHANNEL ASSIGNMENT							
Proc	Interface			Remote			
Chan	Appl.	Link	Chan	Priority	Proc	Chan	Machine-ID
1:	_____	-	___	_____	___	___	___
:							
11:	dcs__	2	11	_____	11		1
12:	dcs__	2	12	_____	12		3_
13:	dcs__	2	13	_____	13		4_
:							
59:	audix_	2	2_	_____	___		___

Release 6 Interface  
Links screen

```
change communications-interface links Page 1 of 1
```

INTERFACE LINKS								
Link	Enable	Est Conn	PI Ext	Port	Destination Digits	DTE/ Brd	DCE	Identification
1:	-	-	_____	_____	_____	_____	_____	_____
2:	y	y	2992_	1a1004	1992 _____	_____	dce	_____
3:	-	-	_____	_____	_____	_____	_____	_____

Link 1 [eia] - Connected to : \_\_\_ Clocking : \_\_\_\_\_

## Hunt Group

page 1

```
add hunt-group 99 Page 1 of 10
```

HUNT GROUP	
Group Number: 99	ACD? n
Group Name: Intuity 1	Queue? n
Group Extension: 2111	Vector? n
Group Type: ucd-mia	Coverage Path:
TN: 1	Night Service Destination:
COR: 1	MM Early Answer? n
Security Code:	
ISDN Caller Display:	

page 2

add hunt-group 1

Page 2 of 10

HUNT GROUP

Message Center: rem-audix  
AUDIX Extension: 1111

Calling Party Number to INTUITY AUDIX? n  
LWC Reception: none

## Switch-Node 3 Administration

This section displays the filled-in screens for the administration of Switch Node 3.

### DS1 Circuit Packs

```

add ds1 1a11                                     Page 1 of 2
                                         DS1 CIRCUIT PACK

      Location: 01a11                               Name: Switch 3 to Switch 1
      Bit Rate: 1.544                               Line Coding: b8zs
Line Compensation: 1                               Framing Mode: esf
      Signaling Mode: isdn-pri

Interface Companding: mulaw
      Idle Code: 11111111
      DMI-BOS? n

Slip Detection? n                               Near-end CSU Type: other

```

### Dial Plan

```

change dialplan                                     DIAL PLAN RECORD

                                         Local Node Number: 3
                                         ETA Node Number:
Uniform Dialing Plan: 4-digit                 ETA Routing Pattern:
UDP Extension Search Order: local-extensions-first

FIRST DIGIT TABLE
First                                         Length
Digit  - 1 -           - 2 -           - 3 -           - 4 -           - 5 -           - 6 -
1:                                           extension
2:                                           extension
3:                                           extension
4:                                           extension
5:
6:
7:                                           dac
8: fac
9: fac
0: attd
*:                                           dac
#:                                           dac

```

### Synchronization Plan

```

change synch
                                                    Page 1 of X
                SYNCHRONIZATION PLAN
        SYNCHRONIZATION SOURCE (circuit pack location)
                Stratum: 4
        Port Network: 1
                Primary: 1a11           Secondary:     

Location  Name      Slip  Type  Location  Name      Slip  Type
01a11 DCS SW1    Y   UDS1-BD  _____ _____ -    _____
_____ _____ -    _____
_____ _____ -    _____
_____ _____ -    _____
_____ _____ -    _____
_____ _____ -    _____
_____ _____ -    _____
_____ _____ -    _____
_____ _____ -    _____
_____ _____ -    _____
NOTE: TN722B & TN464B DS1 sources result in stratum 4, type II synchronization
    
```

### Signaling Group

```

Page 1
add signaling group next
                                                    Page 1 of 5
                SIGNALING GROUP
Group Number: 1
                Associated Signaling? Y           Max number of NCA TSC: 5
                Primary D-Channel: 01a1124       Max number of CA TSC: 23
                                                    Trunk Group for NCA TSC: 13

Trunk Group for Channel Selection:     
Supplementary Service Protocol: a
    
```

### Page 2 – Administered NCA TSC Assignment

```

                                                    Page 2 of 5
                ADMINISTERED NCA TSC ASSIGNMENT
Service/Feature: _____ As-needed Inactivity Time-out (min):     

TSC   Local
Index  Ext.  Enabled Established  Dest. Digits  Appl.  Adj.  Mach.
_____ _____ Y    permanent  1901        dc      _____ 1
1:    3901  Y    permanent  1902        dc      _____ 2
2:    3902  Y    permanent  1903        dc      _____ 4
3:    3903  Y    permanent  1904        audix   _____ 1
4:    3904  Y    permanent  _____        _____ _____ _____
    
```

## Trunk Groups

### Group 13 (ISDN-PRI) — page 1

```

add trunk-group 13                                     Page 1 of 10
                                     TRUNK GROUP
Group Number: 13                                     Group Type: isdn-pri       CDR Reports: y
  Group Name: ISDN TG 13 to sw 1                     COR: 1                   TN: 1           TAC: 713
  Direction: two-way                                 Outgoing Display? n
  Dial Access? n                                     Busy Threshold: 99       Night Service:
Queue Length: 0
Service Type: tie                                   Auth Code? n            TestCall ITC: rest
                                     Far End Test Line No:
TestCall BCC: 4
TRUNK PARAMETERS
  Codeset to Send Display: 6                       Codeset to Send TCM,Lookahead: 6
  Max Message Size to Send: 260                   Charge Advice: none
  Supplementary Service Protocol: a                Digit Handling (in/out): enbloc/enbloc
                                     Trunk Hunt: cyclical
  Connected to Toll? n                               STT Loss: normal        DTT to DCO Loss: normal
Calling Number - Delete:                            Insert:                  Numbering Format:
  Bit Rate: 1200                                    Synchronization: async Duplex: full
Disconnect Supervision - In? y Out? n
Answer Supervision Timeout: 0

```

### Group 13 — page 2

```

add trunk-group 13                                     Page 2 of 10
TRUNK FEATURES
  ACA Assignment? n                                 Measured: none          Wideband Support? n
                                     Internal Alert? n        Maintenance Tests? y
  Data Restriction? n                               NCA-TSC Trunk Member: 1
                                     Send Name: n            Send Calling Number: n
  Used for DCS? y PBX ID: 1
  Suppress # Outpulsing? n                           DCS Signaling: d-chan
Outgoing Channel ID Encoding: exclusive             UII IE Treatment: service-provider
                                     Send Connected Number: n
                                     Send UCID? n
Send Codeset 6/7 LAI IE? y

```

## Group 13 — member assignments

```

display trunk-group 13                                     Page 4 of 10
                                     TRUNK GROUP
                                     Administered Members (min/max): 0/0
GROUP MEMBER ASSIGNMENTS                               Total Administered Members: 0

   Port   Code Sfx Name           Night           Sig Grp
1: 01a1101 TN464 e                Night           1
2: 01a1102 TN464 e                Night           1
3: 01a1103 TN464 e                Night           1
4: 01a1104 TN464 e                Night           1
5:
6:

```

## Uniform Dialing Plan

```

change udp x                                             Page 1 of 2
                                     UNIFORM DIALING PLAN
                                     Ext Codes: ddxx

dd   Type           dd   Type           dd   Type           dd   Type           dd   Type
0x:  _____  1x: udpcode 221  2x: udpcode 222  3x: local _____  4x: udpcode 224
00:  _____  10: _____  20: _____  30: _____  40: _____
01:  _____  11: _____  21: _____  31: _____  41: _____
02:  _____  12: _____  22: _____  32: _____  42: _____
03:  _____  13: _____  23: _____  33: _____  43: _____
04:  _____  14: _____  24: _____  34: _____  44: _____
05:  _____  15: _____  25: _____  35: _____  45: _____
06:  _____  16: _____  26: _____  36: _____  46: _____
07:  _____  17: _____  27: _____  37: _____  47: _____
08:  _____  18: _____  28: _____  38: _____  48: _____
09:  _____  19: _____  29: _____  39: _____  49: _____

```

## AAR Digit Analysis

```

display aar analysis 1                                   Page 1 of 2
                                     AAR DIGIT ANALYSIS TABLE
                                     Percent Full: 6

   Dialed           Total           Route           Call           Node           ANI
   String           Min Max           Pattern           Type           Num           Reqd
   221              7 7           101              aar           1            n
   222              7 7           101              aar           2            n
   224              7 7           101              aar           4            n

```

## Routing Patterns

```

add route-pattern 101
                                Pattern Number: 101

  Grp.  FRL NPA Pfx Hop Toll No. Del Inserted          IXC
  No.           Mrk Lmt List Digits Digits          

1:13    0                               3                user
2:                                     user
3:                                     user
4:                                     user
5:                                     user
6:                                     user

  BCC VALUE  TSC CA-TSC   ITC  BCIE Service/Feature          Numbering LAR
  0 1 2 3 4 W      Request          Format

1: y y y y y n  y  as needed both ept                none
2: y y y y y n  n           rest                    none
3: y y y y y n  n           rest                    none
4: y y y y y n  n           rest                    none
5: y y y y y n  n           rest                    none
6: y y y y y n  n           rest                    none

```

## Hunt Group

page 1

```

add hunt-group 99
                                HUNT GROUP
                                Page 1 of 10

  Group Number: 99                ACD? n
  Group Name: Intuity 1           Queue? n
  Group Extension: 3111          Vector? n
  Group Type: ucd-mia            Coverage Path:
  TN: 1                          Night Service Destination:
  COR: 1                          MM Early Answer? n
  Security Code:
  ISDN Caller Display:

```

page 2

```

add hunt-group 99
                                HUNT GROUP
                                Page 2 of 10

  Message Center: rem-audix
  AUDIX Extension: 1111

  Calling Party Number to INTUITY AUDIX? n
  LWC Reception: none

```

## Switch-Node 4 Administration

This section displays the filled-in screens for the administration of Switch Node 4.

### Bus Bridge

```

change system-parameters maintenance                               Page 2 of 3

                                MAINTENANCE-RELATED SYSTEM PARAMETERS

MINIMUM MAINTENANCE THRESHOLDS ( Before Notification )
  TTRs: 4          CPTRs: 1          Call Classifier Ports: 0
  MMIs: 0          VCs: 0

TERMINATING TRUNK TRANSMISSION TEST ( Extension )
  Test Type 100:          Test Type 102:          Test Type 105:

ISDN MAINTENANCE
  ISDN-PRI Test Call Extension:          ISDN-BRI Service SPID:

DS1 MAINTENANCE
  DS0 Loop-Around Test Call Extension:

LOSS PLAN ( Leave Blank if no Extra Loss is Required )
  Minimum Number of Parties in a Conference Before Adding Extra Loss:

SPE OPTIONAL BOARDS
  Packet Intf1? y          Packet Intf2? y
  Bus Bridge: 01a05      Inter-Board Link Timeslots Pt0: 6 Pt1: 1 Pt2: 1

```

### DS1 Circuit Packs

page 1

```

add ds1 1a10                                                    Page 1 of 2

                                DS1 CIRCUIT PACK

  Location: 01a10                      Name: Switch 4 to Switch 1
  Bit Rate: 1.544                      Line Coding: b8zs
  Line Compensation: 1                  Framing Mode: esf
  Signaling Mode: robbed-bit

Interface Companding: mulaw
  Idle Code: 11111111

  Slip Detection? n                      Near-end CSU Type: other

```

## Dial Plan

```

changew dialplan
                                DIAL PLAN RECORD

                                Local Node Number: 4
                                ETA Node Number:
Uniform Dialing Plan: 4-digit   ETA Routing Pattern:
UDP Extension Search Order: local-extensions-first
FIRST DIGIT TABLE
First      Length
Digit  - 1 -      - 2 -      - 3 -      - 4 -      - 5 -      - 6 -
1:      extension
2:      extension
3:      extension
4:      extension
5:
6:
7:      dac
8: fac
9: fac
0: attd
*:      dac
#:      dac
    
```

## Synchronization Plan

```

                                Page 1 of X
                                SYNCHRONIZATION PLAN
SYNCHRONIZATION SOURCE (circuit pack location)
Stratum: 4
Port Network: 1
Primary: 01a10      Secondary: ___

Location  Name      Slip  Type      Location  Name      Slip  Type
01a10    _____  y   UDS1-BD   _____  _____  -    -
_____  _____  -    -    _____  _____  -    -
_____  _____  -    -    _____  _____  -    -
_____  _____  -    -    _____  _____  -    -
_____  _____  -    -    _____  _____  -    -
_____  _____  -    -    _____  _____  -    -
_____  _____  -    -    _____  _____  -    -
_____  _____  -    -    _____  _____  -    -
_____  _____  -    -    _____  _____  -    -
_____  _____  -    -    _____  _____  -    -
NOTE: TN722B & TN464B DS1 sources result in stratum 4, type II synchronization
    
```

## Trunk Groups

## Group 14 — page 1

```

display trunk-group 14                                     Page 1 of 10
                                     TRUNK GROUP

Group Number: 14          Group Type: tie          CDR Reports: y
Group Name: Node 4 to Node 1 - TG14  COR: 1          TN: 1          TAC: 714
Direction: two-way       Outgoing Display? n       Trunk Signaling Type:
Dial Access? y           Busy Threshold: 99          Night Service:
Queue Length: 0          Incoming Destination:
Comm Type: voice         Auth Code? n
                           Trunk Flash? n
                           BCC: 0

TRUNK PARAMETERS
Trunk Type (in/out): wink/wink          Incoming Rotary Timeout(sec): 5
Outgoing Dial Type: tone                Incoming Dial Type: tone
Wink Timer(msec): 300                   Disconnect Timing(msec): 500
Digit Treatment:                        Digits:
Connected to Toll? n                    STT Loss: normal          DTT to DCO Loss: normal
Incoming Dial Tone? y
Bit Rate: 1200                          Synchronization: async   Duplex: full
Disconnect Supervision - In? y Out? n
Answer Supervision Timeout: 0            Receive Answer Supervision? y

```

## Group 14 — Page 2

```

display trunk-group 14                                     Page 2 of 10
TRUNK FEATURES
ACA Assignment? n          Measured: none
                           Internal Alert? n          Maintenance Tests? y
                           Data Restriction? n
                           Glare Handling: none
Used for DCS? y          PBX ID: 1
Suppress # Outpulsing? n
Seize When Maintenance Busy: neither-end

Incoming Tone (DTMF) ANI: no
Connected to CO? n          Per Call CPN Blocking Code:
                           Per Call CPN Unblocking Code:

```

## Group 14 — member assignments

```

                                     TRUNK GROUP
Administered Members (min/max): 1/3
GROUP MEMBER ASSIGNMENTS          Total Administered Members: 3

Port    Code Sfx Name          Night          Mode          Type          Ans Delay
1: 01a1001 TN767 e                    Night          Mode          Type          20
2: 01a1002 TN767 e                    Night          Mode          Type          20
3: 01a1003 TN767 e                    Night          Mode          Type          20
4:
5:
6:

```

Group 24 (data to  
Switch Node 1) —  
page1

```

add trunk-group 24                                     Page 1 of 10
                                     TRUNK GROUP

Group Number: 24                                     Group Type: tie                                     CDR Reports: y
Group Name: dcs data to Switch 1                     COR: 1                                             TN: 1       TAC: 124
Direction: two-way                                   Outgoing Display? n                               Trunk Signaling Type:
Dial Access? y                                       Busy Threshold: 99                                 Night Service:
Queue Length: 0                                       Incoming Destination:
Comm Type: rbavd                                       Auth Code? n
                                     Trunk Flash? n
                                     BCC: 0

TRUNK PARAMETERS
Trunk Type (in/out): wink/wink                       Incoming Rotary Timeout(sec): 5
Outgoing Dial Type: tone                               Incoming Dial Type: tone
Wink Timer(msec): 300                                 Disconnect Timing(msec): 500
Digit Treatment:                                       Digits:
                                     Sig Bit Inversion: none
Connected to Toll? n                                   STT Loss: normal                                   DTT to DCO Loss: normal
Incoming Dial Tone? y
Bit Rate: 1200                                         Synchronization: async                             Duplex: full
Disconnect Supervision - In? y Out? n
Answer Supervision Timeout: 0                           Receive Answer Supervision? y

```

Group 24 — page 2

```

add trunk-group 24                                     Page 2 of 10
TRUNK FEATURES
ACA Assignment? n                                     Measured: none
Internal Alert? n                                     Maintenance Tests? y
Data Restriction? n
Glare Handling: none
Used for DCS? n
Suppress # Outpulsing? n
Seize When Maintenance Busy: neither-end

Incoming Tone (DTMF) ANI: no                           Per Call CPN Blocking Code:
Connected to CO? n                                     Per Call CPN Unblocking Code:

```

Group 14 — member  
assignments

```

                                     TRUNK GROUP
Administered Members (min/max): 1/3
GROUP MEMBER ASSIGNMENTS                               Total Administered Members: 3

Port   Code Sfx Name      Night      Mode      Type      Ans Delay
1: 01a1023 TN767 f
2:
3:
4:

```

## Uniform Dialing Plan

```
change udp x Page 1 of 2
                UNIFORM DIALING PLAN
                Ext Codes: ddxx

dd  Type      dd  Type      dd  Type      dd  Type      dd  Type
0x: _____ 1x: udpcode 221 2x: udpcode 222 3x: udpcode 223 4x: local _____
00: _____ 10: _____ 20: _____ 30: _____ 40: _____
01: _____ 11: _____ 21: _____ 31: _____ 41: _____
02: _____ 12: _____ 22: _____ 32: _____ 42: _____
03: _____ 13: _____ 23: _____ 33: _____ 43: _____
04: _____ 14: _____ 24: _____ 34: _____ 44: _____
05: _____ 15: _____ 25: _____ 35: _____ 45: _____
06: _____ 16: _____ 26: _____ 36: _____ 46: _____
07: _____ 17: _____ 27: _____ 37: _____ 47: _____
08: _____ 18: _____ 28: _____ 38: _____ 48: _____
09: _____ 19: _____ 29: _____ 39: _____ 49: _____
```

## AAR Digit Analysis

```
display aar analysis 1 Page 1 of 2
                AAR DIGIT ANALYSIS TABLE
                Percent Full: 6

Dialed      Total      Route      Call      Node      ANI
String      Min Max    Pattern    Type      Num      Reqd
  221         7   7     101      aar       1        n
  222         7   7     101      aar       2        n
  223         7   7     101      aar       3        n
```

## Routing Patterns

```
display route-pattern 101
                Pattern Number: 101

Grp.  FRL NPA Pfx Hop Toll No. Del Inserted      IXC
No.   Mrk Lmt List Digits Digits
1:14  0          3
2:
3:
4:
5:
6:
                user
                user
                user
                user
                user
                user
```

## Node Names

page 1

```
change node-names                                     Page 1 of 6
                                         NODE NAMES
Audix Names   IP Address   MSA Names   IP Address
intuity1    192.168.200.10   msa       _____.____.____.____
```

page 2

```
change node names                                     Page 2 of 6
                                         NODE NAMES
Name          IP Address   Name          IP Address
1. ppp41      192.168.200.14  17. _____  _____.____.____.____
2. ppp14      192.168.200.12  18. _____  _____.____.____.____
3. CMS        192.168.201.10  19. _____  _____.____.____.____
4. router     192.168.200.1   20. _____  _____.____.____.____
5. ethernet1 192.168.200.11  21. _____  _____.____.____.____
:
16.
```

## Data Modules

ppp data module

```
add data-module 4991                                     Page 1 of x
                                         DATA MODULE
Data Extension: 4991      Name: ppp on link 1 to switch 1   BCC: 2
      Type: ppp           COS: 1
      Port: 01a0515     COR: 1
      Link: 1           TN: 1
Enable Link? n

      Node Name: ppp41

Establish Connection: n

DESTINATION
      Digits: 7241994
      Node Name: ppp14
      CHAP? n
```

## Processor Channel Assignments

change communications-interface processor-channels

Page 1 of X

## PROCESSOR CHANNEL ASSIGNMENT

Proc Chan	Enable	Appl.	Gtwy To	Mode	Interface Link/Chan	Destination Node	Port	Session Local/Remote	Mach ID
1:	n	audix		s	1_ 5041_	intuity	0__	4_ 4_	1_
:									
10:	n	mis		s	1_ 5001_	cms	0__	1_ 1_	
:									
14:	n	dcs		c	1_ 0__	ppp14	5003	14_ 14_	1_
15:	n	dcs		c	1_ 0__	ppp14	5004	15_ 15_	2_
16:	n	dcs		c	1_ 0__	ppp14	5005	16_ 16_	3_
:									

## IP Routing

```

add ip-route next                                     Page 1 of 1
                                                    IP ROUTING

Route Number: 1
Destination Node: audix
Gateway: ppp14
C-LAN Board: 1a05
Metric: 0

```

## IP Routing

```

add ip-route next                                     Page 1 of 1
                                                    IP ROUTING

Route Number: 2
Destination Node: cms
Gateway: ppp14
C-LAN Board: 1a05
Metric: 0

```

## Hunt Group

page 1

```

add hunt-group 99                                     Page 1 of 10
                                                    HUNT GROUP

Group Number: 99                                     ACD? n
Group Name: Intuity 1                               Queue? n
Group Extension: 4111                               Vector? n
Group Type: ucd-mia                                Coverage Path:
TN: 1                                               Night Service Destination:
COR: 1                                             MM Early Answer? n
Security Code:
ISDN Caller Display:

```

page 2

```
add hunt-group 1
```

```
Page 2 of 10
```

```
HUNT GROUP
```

```
Message Center: rem-audix  
AUDIX Extension: 1111
```

```
Calling Party Number to INTUITY AUDIX? n  
LWC Reception: none
```

## Intuity Translations for DCS AUDIX

This screen is administered on Intuity, not on the DEFINITY ECS.

Switch Interface Administration						
Switch Link Type: <u>LAN</u>			Switch: <u>Definity</u>			
Extension Length: <u>4</u>			Country: <u>United States</u>			
Host Switch Number: <u>1</u>						
Audix Number: <u>1</u>						
Switch Number	IP Address/Host Name	TCP Port	Switch Number	IP Address/Host Name	TCP Port	
<u>1</u>	<u>192.168.200.11</u>	<u>5002</u>	<u>11</u>	<u>. . . .</u>	<u></u>	
<u>2</u>	<u>192.168.200.11</u>	<u>5021</u>	<u>12</u>	<u>. . . .</u>	<u></u>	
<u>3</u>	<u>192.168.200.11</u>	<u>5031</u>	<u>13</u>	<u>. . . .</u>	<u></u>	
<u>4</u>	<u>192.168.200.14</u>	<u>5041</u>	<u>14</u>	<u>. . . .</u>	<u></u>	
<u>5</u>	<u></u>	<u></u>	<u>15</u>	<u>. . . .</u>	<u></u>	
<u>:</u>	<u></u>	<u></u>				
<u>10</u>	<u></u>	<u></u>	<u>20</u>	<u>. . . .</u>	<u></u>	

## CMS Administration

See *CentreVu® Call Management System, Software Installation and Setup*, 585-215-866 for administration procedures for the CMS server.



# A Screens Reference

This appendix gives detailed field descriptions for a selection of DEFINITY administration screens (forms). The screen descriptions are divided into two groups — a) Networking Screens, which are needed for network administration and are used in other chapters of this document, and b) Other DEFINITY Screens, which are related to network administration but not referred to elsewhere in this document.

---

## Networking Screens

### Screens for TCP/IP connections

- Node Names, [page 216](#)
- Data Modules, [page 218](#):
  - ppp, [page 225](#)
  - ethernet, [page 227](#)
  - proc-intf, [page 230](#)
  - x.25, [page 233](#)
  - pdm, [page 236](#)
- Processor Channel Assignment, [page 237](#)
- IP Routing, [page 241](#)

### Screens for prerequisite administration

- Signaling Group and Administered NCA TSC Assignment, [page 244](#)
- ISDN TSC Gateway Channel Assignments, [page 251](#)
- Node Number Routing, [page 252](#)
- Uniform Dialing Plan, [page 253](#)
- Hop Channel Assignments, [page 256](#)
- Circuit Packs, [page 257](#)
- Synchronization Plan, [page 260](#)
- Communication Interface Links, [page 262](#)

## Other DEFINITY Screens

- Data Modules: netcon, analog-dm, [page 265](#)
- Extended Trunk Access (ETA) Call Screening, [page 268](#)
- Extension Number Portability Numbering Plan, [page 269](#)
- Message Waiting Indication Subscriber Number Prefixes, [page 270](#)

# Screens for TCP/IP Connections

## Node Names

In this context, a *node* is defined as any of the following — a C-LAN port, a bridge or router, a CMS ethernet port, or an Intuity AUDIX, or other MSA (Message Server Adjunct) network interface card. The AUDIX and MSA node name and IP address must be entered on *page 1* of the screen. The data for all other node types, including CMS, must be entered on *pages 2–6*.

The Node Names form holds up to 8 Audix node names with up to 7 characters each, up to 7 MSA node names (up to 7 characters each) on page 1. It holds up to 160 non-specific node names (up to 15 characters each) for DCS, CMS, or bridge/router nodes, on pages 2–6.

The node names and IP addresses in any network should be assigned in a logical and consistent manner from the point of view of the whole network. These names and addresses should be assigned in the planning stages of the network and should be available from the customer system administrator or from a Lucent representative.

### NOTE:

**Enter node names for Intuity AUDIX and MSA adjuncts on page 1.**

**Enter node names for CMS, switches, and routers starting on page 2.**

## page 1

NODE NAMES			
Audix Name	IP address	MSA Names	IP Address
1. <u>audix</u>	___ . ___ . ___ . ___	1. <u>msa</u>	___ . ___ . ___ . ___
2. _____	___ . ___ . ___ . ___	2. _____	___ . ___ . ___ . ___
3. _____	___ . ___ . ___ . ___	3. _____	___ . ___ . ___ . ___
4. _____	___ . ___ . ___ . ___	4. _____	___ . ___ . ___ . ___
5. _____	___ . ___ . ___ . ___	5. _____	___ . ___ . ___ . ___
6. _____	___ . ___ . ___ . ___	6. _____	___ . ___ . ___ . ___
7. _____	___ . ___ . ___ . ___	7. _____	___ . ___ . ___ . ___
8. _____	___ . ___ . ___ . ___		

**Audix or MSA Name** Identifies the name of the AUDIX or Message Server Adjunct (MSA) node.

Valid entries	Usage
1-7 alphanumeric characters with no embedded spaces. Defaults: <b>audix</b> , <b>msa</b> (csi, si) blank (r)	Used as a label for the associated IP address. The node names must be unique on each switch.

**IP Address** The IP address associated with the node name. (Not needed for X.25 connections).

## Pages 2 – 6

NODE NAMES			
Name	IP Address	Name	IP Address
1. <u>Default</u>	<u>0. 0. 0. 0.</u>	17. _____	____.____.____.____
2. _____	____.____.____.____	18. _____	____.____.____.____
3. _____	____.____.____.____	19. _____	____.____.____.____
4. _____	____.____.____.____	20. _____	____.____.____.____
5. _____	____.____.____.____	21. _____	____.____.____.____
6. _____	____.____.____.____	22. _____	____.____.____.____
7. _____	____.____.____.____	23. _____	____.____.____.____
8. _____	____.____.____.____	24. _____	____.____.____.____
9. _____	____.____.____.____	25. _____	____.____.____.____
10. _____	____.____.____.____	26. _____	____.____.____.____
11. _____	____.____.____.____	27. _____	____.____.____.____
12. _____	____.____.____.____	28. _____	____.____.____.____
13. _____	____.____.____.____	29. _____	____.____.____.____
14. _____	____.____.____.____	30. _____	____.____.____.____
15. _____	____.____.____.____	31. _____	____.____.____.____
16. _____	____.____.____.____	32. _____	____.____.____.____

Page 2 of 6

**Name** The name of the adjunct or switch node. Valid entries are alpha-numeric and/or special characters for identification. Default is blank.

Valid entries	Usage
1-15 alphanumeric characters with no embedded spaces.	Used as a label for the associated IP address. The node names must be unique on each switch.

**IP Address** The IP address for the node named in the previous field.

Valid entries	Usage
32-bit address expressed in dotted-decimal notation — four decimal numbers each in the range 1–255 separated by a decimal point.	<p>A unique IP address is assigned to each port on the C-LAN circuit pack that is used for a connection.</p> <p>Each node name is associated with a unique IP address except in the following circumstance: If the network includes a gateway switch that connects to non-IP nodes (via X.25 or ISDN), then switches on the IP side of the gateway would list all nodes on the non-IP side of the gateway with the (same) IP address of the gateway; that is, several nodes could be listed on the Node Names screen with the same IP address.</p> <p>See Chapter 1 for more information about IP addresses.</p>

## Data Module Screens

The Data Module screen must be administered at both ends of a DCS connection, except for ISDN connections. There are two types of data modules used with TCP/IP connections — *ppp* and *ethernet*. There are two types of data modules used with BX.25 connections — the *proc-intf* data module is used for the *csi* and *si* models, and the *x.25* data module is used with the *r* model. The *pdm* data module is needed when the *r* model is connected to an *si* model via *x.25*.

The fields that are common to two or more of the data module types are described first, followed by the screen pictures and descriptions of the fields that are unique for a given data module type.

## Common Data Module Fields

The following fields are common to two or more of data module types.

### Data Extension

Extension number for this data module.

Valid Entries	Data Module Types	Usage
A 1- to 5-digit number consistent with the Dial Plan	ppp ethernet proc-intf x.25 pdm	The data extension is entered on the command line. If <i>next</i> is entered on the command instead of an extension number, the system assigns the next available extension number.

### Type

The data module type, which determines the connection type.

Valid Entries	Data Module Types	Usage
For TCP/IP connections: <b>ppp</b> and <b>ethernet</b> .  For X.25 connections: <b>proc-intf</b> (for the <i>csi</i> and <i>si</i> models) <b>x.25</b> and <b>pdm</b> (for the <i>r</i> -model).	ppp ethernet proc-intf x.25 pdm	Enter the data module type that is appropriate type for the connection type and switch model.  For an <i>r</i> -model connected to an <i>si</i> -model via X.25, a <b>pdm</b> data module needs to be administered in addition to the <b>x.25</b> data module.

**Port** Seven characters to specify the port location for this data module in the format NNCSSPP.

Valid Entries	Data Module Types	Usage
NN = cabinet number: <ul style="list-style-type: none"> <li>• 01 – 44 (r model)</li> <li>• 01 – 03 (si model)</li> <li>• 01 (csi model)</li> </ul> C = carrier position: a – e SS = slot number: 00 – 20 PP = port number: 01 – 16	ppp ethernet x.25 pdm	You can enter x in the Port field to indicate that there is no hardware associated with the port assignment (Administration Without Hardware).

**Link** The communication interface link number associated to this data module.

Valid Entries	Data Module Types	Usage
<ul style="list-style-type: none"> <li>• 1–33 r model</li> <li>• 1–25 si model</li> <li>• 1–25 csi model</li> </ul>	ppp ethernet procr-intf x.25	Indicates the interface link number that connects to another node in a DCS network, a Message Server, CMS, SDN Gateway, or AUDIX.

**Enable Link?** Used to enable or disable the link defined by this data module.

Valid Entries	Data Module Types	Usage
y/n	ppp ethernet procr-intf x.25	The link must be enabled ( <b>y</b> ) before it can be used. The link must be disabled ( <b>n</b> ) before changes can be made to the data module.  For ppp links (data module type = ppp), the link must be enabled ( <b>y</b> ) before you can establish an IP route that uses the port associated with this link as a gateway node.  The <b>busy-out</b> command overrules the Enable Link? field.

**Name** Descriptive label for the data module.

Valid Entries	Data Module Types	Usage
0-27 alphanumeric characters. Default is blank.	ppp ethernet procr-intf x.25 pdm	This field is not used by the system software. Enter a descriptive name for ease in identifying the data module. The contents of this field are displayed when the <i>list data module</i> command is used.

**COS** Class of service. COS specifies a group of feature-access permissions of a group of telephones.

Valid Entries	Data Module Types	Usage
0-15 Default is 1	ppp procr-intf pdm	The value for this fields will be specified by the system administrator.

**COR** Class of restriction. COR identifies caller and called-party privileges for telephones, telephone groups, data modules, and trunk groups.

Valid Entries	Data Module Types	Usage
0-95 Default is 1	ppp procr-intf x.25 pdm	The values for these fields will be specified by the system administrator.  Administer the COR so that account codes are not required. Forced entry of account codes is turned off for wideband endpoints.

**TN** Tenant partition number. Enables a single DEFINITY ECS to appear to users as several small independent switches.

Valid Entries	Data Module Types	Usage
1-20 (csi, si) 1-100 (r) Default is 1	ppp procr-intf x.25 pdm	Partitioning could be useful when 2 or more user groups (tenants) have different switch-usage patterns.  For R6 and later configurations, all MASI trunks are associated with Tenant 1.

**BCC**

Bearer capability class. *This field is not administrable on the ppp data module screen.* BCC is used with ISDN connections to identify the types of traffic that can be supported by a given trunk.

Valid Entries	Data Module Types	Usage
1-4	ppp ethernet pdm	For non-ISDN connections, leave the default (2). For ISDN connections, 1 = Mode 1 data — allows restricted circuit-switched data on a B-channel; 56Kbps 2 = Mode 2 data — 64 Kbps data packaged in an inverted HDLC protocol and limited to user data rates between 300bps and 19.2Kbps. 3 = Mode 3 data — when circuit switched, 64Kbps digital data packaged in LAPD protocol. 4 = Mode 0 data — a data bearer capability that allows full 64Kbps unrestricted circuit switched data on a B-channel. Also referred to as <i>clear channel</i> .

**Node Name**

The node name for the interface (C-LAN port) defined by this data module.

Valid Entries	Data Module Types	Usage
A name administered on the Node Names Screen.	ppp ethernet	This name is associated with an IP address of the port on the Node Names screen.

**Destination Number** This field specifies the destination of the link.

Valid Entries	Data Module Types	Usage
Extension number or TAC + extension number or <b>eia</b> or <b>external</b>  Leave blank if Establish Connection? is set to <b>n</b> .	procr-intf x.25	<p>Used to enable access to the correct trunk group at the far end of the connection. This is typically the trunk access code (TAC) plus the extension of data module on the far end. If you use just the extension, then you must administer UDP and AAR route patterns to access the correct trunk group.</p> <p>If a trunk access code (TAC) is used, prepend the TAC to the extension.</p> <p>Enter <b>eia</b> (simplex system only) for ...</p> <p>The Link field must be set to <b>1</b> for <b>eia</b>.</p> <p>For the x.25 data module, to connect the Adjunct via the cable on the back of the PGATE circuit pack, enter <b>external</b>. If a value other than <b>external</b> is used, the associated X.25 data module must have a baud rate of <b>switched</b>.</p> <p>This field can be left blank assuming the other side will call it; however, it is preferable to put in the actual digits of the other side and set the Establish Connection field to <b>n</b>. This enables you to identify which X.25 data module on the remote switch is expected to call this data module.</p>

Used to enable access to the correct trunk group at the far end of the connection. This is typically the trunk access code (TAC) plus the extension of data module on the far end. If you use just the extension, then you must administer UDP and AAR route patterns to access the correct trunk group.

**Establish Connection?** Specifies whether this switch will be responsible for the call setup for this connection.

Valid Entries	Data Module Types	Usage
<b>y/n</b> Default is <b>n</b> .	procr-intf x.25	Enter <b>y</b> if the System is responsible for any part of the call setup for the link defined by this data module.  If the physical link is through a pair of MPDMs or MTDMs, then each switch terminating the link must set up a connection between its Processor Interface Data Module and MPDM/MTDM.  Enter the opposite value when administering the data module for switch at the other end of the connection.  If the link is to be used for ISDN signaling, enter <b>y</b> .

**Connected Data Module** This is an information-only field. This field displays when the Destination Number field is other than **eia**.

Valid Entries	Data Module Types	Usage
no entries — information only	procr-intf x.25	

**Connected To** Specifies whether the connected device is **dte** or **isn**.

Valid entries	Data Module Types	Usage
<b>dte, isn</b>	pdm	Displays only when Type is <b>pdm</b> and the Destination Number is set to <b>eia</b> . Enter <b>dte</b> if the data module is connected to Data Terminal Equipment (DTE) or enter <b>isn</b> if connected to an Information Systems Network (ISN).

**ITC** Information Transfer Capability. This field is used to determine the type of transmission facilities to be used for ISDN calls originating from this endpoint. Displays when Communication Type is **56k-data**, **64k-data**, or **Wideband**.

Enter **restricted** (default) or **unrestricted** to indicate the type of transmission facilities to be used for ISDN calls originated from this endpoint. The field does not display for voice-only or BRI stations.

When adding an access endpoint with the ITC administered as unrestricted, its associated port must be a channel of a DS1 circuit pack with zero code suppression administered as **b8zs**. If the port is not a channel of a DS1 circuit pack with its zero

code suppression administered as b8zs, the end validation fails and the form submission is rejected.

When adding an access endpoint with the ITC administered as restricted, its associated port can be a channel from a DS1 circuit pack with Zero Code Suppression administered as zcs or b8zs.

For an existing access endpoint, ITC can only be changed from restricted to unrestricted if its associated port is a channel of a DS1 circuit pack with its Zero Code Suppression field administered as b8zs. If the port is on a channel of a DS1 circuit pack with its Zero Code Suppression administered as zcs or b8zs, the end validation fails and the form submission is rejected. Without this end validation, a user could administer an access endpoint as unrestricted when in fact it is restricted, that is its associated port is a member of a DS1 circuit pack that uses ZCS data transmission.

Valid Entries	Data Module Types	Usage
<b>restricted</b> <b>unrestricted</b>	procr-intf pdm netcon analog-dm	Use <b>restricted</b> except for wideband endpoints.  For <b>unrestricted</b> , only unrestricted transmission facilities (b8zs and hdb3) will be used to complete the call. An unrestricted facility is a transmission facility that does not enforce 1's density digital transmission (that is, digital information is sent exactly as is).  For <b>restricted</b> , either restricted (ami-zcs or ami-basic) or unrestricted transmission facilities is used to complete the call. A restricted facility is a transmission facility that enforces 1's density digital transmission (that is, a sequence of eight digital zeros is converted to a sequence of seven zeros and a digital one) via zcs coding on DS1 circuit pack.

## DTE/DCE

Designates the interface defined by this data module as data terminal equipment or data communications equipment.

Valid Entries	Data Module Types	Usage
<b>dte/dce</b>	procr-intf x.25	The DTE/DCE assignments must be opposites on the two ends of the connection.

**Remote Loop-Around Test?** Activates/deactivates remote loop-around testing.

Valid Entries	Data Module Types	Usage
y/n	procr-intf pdm	Set to n unless testing.

## Data Module — Type *ppp*

Use the *ppp* data module for direct point to point TCP/IP connections between DCS nodes. This data module associates a link number and destination node with the port address and node name for the local node.

The fields on this form can be changed only when the corresponding port on the C-lan circuit pack has been busied-out.

```
add data-module next
```

Page 1 of x

### DATA MODULE

```
Data Extension: _____ Name: _____ BCC: 2
Type: ppp          COS: 1
Port: _____   COR: 1
Link: _____   TN: 1
Enable Link? n
```

```
Node Name: _____
```

```
Establish Connection: _
```

### DESTINATION

```
Digits: _____
Node Name: _____
CHAP? y
Chap Secret: _____
```

## Common Fields

See [Common Data Module Fields \(218\)](#) for descriptions of fields on this screen that are not listed below.

## Destination Digits

Used to enable access to the correct trunk group at the far end of the connection. This is typically the trunk access code (TAC) plus the extension of data module on the far

end. If you use just the extension, then you must administer UDP and AAR route patterns to access the correct trunk group.

Valid Value	Usage
The extension or TAC + extension of the destination data module.	If a trunk access code (TAC) is used, prepend the TAC to the extension.  If the <code>Establish Connection</code> field is <b>n</b> , this field should be left blank.

**Destination Node Name** Name of the node at the far end of this connection.

Valid Value	Usage
A name administered on the Node Names Screen.	

**Chap?**

Challenge Handshake Authentication Protocol.

Valid Value	Usage
<b>y/n</b>	Identifies whether the Challenge Handshake Authentication Protocol is used over this link. If you enter <b>y</b> , the system will prompt for a CHAP secret (password).

**Chap Secret**

Password for the Challenge Handshake Authentication Protocol.

Valid Value	Usage
1–30 alphanumeric characters, but cannot begin with the “at” sign (@).  Default is blank.	This field displays only if the CHAP field is <b>y</b> . This field displays the data being entered or changed. It displays an asterisk (*) when the form is brought up initially if the field already contains some data.  This field displays the actual contents rather than asterisks if the form is brought up by the init login.

## Data Module — Type *ethernet*

Use the ethernet data module type to define an interface between port 17 on the C-LAN board and the 10BaseT LAN. This data module associates a link number with a port address and node name

```
add data-module next
```

Page 1 of X

### DATA MODULE

```
Data Extension: 2377          Name: ethernet on link 2          BCC: 2
      Type: ethernet
      Port: 01c0817
      Link: 2
      Enable Link? n

      Node Name: node-1

      Subnet Mask: 255.255.255.224
      Broadcast Address: 255.255.255.255
      Automatic Subnet Routing? n
```

### Common Fields

See [Common Data Module Fields \(218\)](#) for descriptions of fields on this screen that are not listed below.

### Subnet Mask

Determines which part of an IP address is a network identifier and which part is a host identifier.

See Chapter 1 for more information on IP addresses and subnetting.

Valid Value	Usage
<p>The valid values of the subnet mask depend on the IP address that the subnet mask is applied to — in this case, the IP address on the Node Names screen that is associated with the name entered in the Node Name field.</p> <p>In general, each octet value must be one of the following numbers: 255 or 0, corresponding to the network and host portions of an IP address; or 192, 224, 240, 248, or 252, corresponding to using 2, 3, 4, 5, or 6 bits for the subnet ID.</p>	<p>This field can be used to subdivide a network into 2 or more subnetworks.</p> <p>The subnet mask consist of a string of n contiguous 1's followed by a string of 32-n contiguous 0's. When applied to a 32-bit IP address, the subnet mask indicates that the first n bits of the address form the network ID and the next 32-n bits form the host ID portion of the address.</p> <p>The following default values for the subnet mask are used for no subnetting:</p> <p>Class A addresses: 255.0.0.0</p> <p>Class B addresses: 255.255.0.0</p> <p>Class C addresses: 255.255.255.0</p>

**Broadcast Address**

The Broadcast Address is used to broadcast messages to all hosts (nodes) on a given network or subnetwork. It is usually the IP address with the host portion set to all ones (255 decimal).

In this example, the network portion of the IP address is 192.168.10. The broadcast address 192.168.10.127 broadcasts messages to all hosts on node-1's subnetwork — i.e., all addresses in the range from 192.168.10.97 to 192.168.10.127. See Chapter 1 for more information on broadcast addresses.

Valid Value	Usage
<p>Any IP address can be entered except 255.255.255.255. However, the broadcast address will typically be formed to restrict broadcast messages to the network or subnetwork of the data module's IP address.</p>	<p>The broadcast address will typically be the network ID portion of the IP address followed by either 255 (broadcast to all) or 0 (broadcast to none) in the octets for the host ID portion of the IP address. For example, the IP address 192.168.19.200 would use 192.168.19.255 to broadcast to all nodes on its network (192.168.19), or it would use 182.168.19.0 to suppress broadcast messages on its network.</p> <p>If subnetting is used, the broadcast address is formed in the same way as for non-subnetted networks. However, instead of 255 or 0 (corresponding to all 1's or all 0's in the host ID portion of the IP address), values of the subnet boundaries are entered. The subnet boundary values correspond to all 1's or all 0's of the host ID.</p> <p>For example, the 3-bit subnet mask, 192.168.19.224 divides the 192.168.19 network into 6 usable subnets. The following addresses are the boundaries of these 6 subnets:</p> <p>192.168.19.32 (host all 0's) and 192.168.19.63 (host all 1's)  192.168.19.64 (host all 0's) and 192.168.19.95 (host all 1's)  192.168.19.96 (host all 0's) and 192.168.19.127 (host all 1's)  192.168.19.128 (host all 0's) and 192.168.19.159 (host all 1's)  192.168.19.160 (host all 0's) and 192.168.19.191 (host all 1's)  192.168.19.192 (host all 0's) and 192.168.19.223 (host all 1's)</p> <p>These values would be entered as the broadcast addresses to broadcast to none or all of the IP addresses within the subnets.</p>

**Automatic Subnet Routing?**

Valid Value	Usage
y/n	<p data-bbox="583 220 1222 407"><b>n</b> disables automatic routing — in this case, you must administer IP routes (using the IP Routing screen) between IP addresses on the subnet. If network security is a concern, such as when the switch is connected to a public network, disabling automatic subnet routing limits internode access to paths that are explicitly administered.</p> <p data-bbox="583 430 1222 556"><b>y</b> allows automatic routing of all IP addresses on the subnet of the administered Ethernet IP address. This option can increase the efficiency of message routing when security is not a concern, as in a closed private network.</p> <p data-bbox="583 575 1222 635">You must administer IP routes for any connections between nodes that are on different networks or subnetworks.</p>

**Data Module — Type *procr-intf* (used for BX.25 connections with the si model)**

Use the procr-intf data module type to define an interface between the Processor Interface circuit pack and the DS1 facilities carrying the X.25 data for the connection to far end switch. This data module associates a link number with a physical channel number and extension number for the PI port used for the connection.

This form applies when the Destination Number field is *not* set to eia.

add data-module next	Page 1 of 1
DATA MODULE	
Data Extension: <u>3456</u>	Name: _____
Type: <u>procr-intf</u>	Maintenance Extension: _____
Physical Channel: _____	COS: <u>1</u>
ITC: _____	COR: <u>1</u>
Link: _____	TN: <u>1</u>
	DTE/DCE: DTE
	Enable Link: n
	Destination Number: _____
	Establish Connection? n
	Connected Data Module: _____
ABBREVIATED DIALING	
List1: _____	
SPECIAL DIALING OPTION: hot-line	
HOT LINE DESTINATION	
Abbreviated Dialing Dial Code (From above list): _	
ASSIGNED MEMBER (Station with a data extension button for this data module)	
Ext	Name
1.	

This form applies when the Destination Number field is set to eia (and Link = 1).

add data-module next	Page 1 of 1
DATA MODULE	
Data Extension: <u>3456</u>	Name: _____
Type: <u>procr-intf</u>	Maintenance Extension: _____
Physical Channel: _____	COS: <u>1</u>
ITC: _____	COR: <u>1</u>
Link: <u>1</u>	TN: <u>1</u>
	DTE/DCE: DTE
	Enable Link: n
	Destination Number: eia_____
	Establish Connection? n
	Connected To: _____
	Clocking: _____
ABBREVIATED DIALING	
List1: _____	
SPECIAL DIALING OPTION: _____	
HOT LINE DESTINATION	
Abbreviated Dialing Dial Code (From above list): _	
ASSIGNED MEMBER (Station with a data extension button for this data module)	
Ext	Name
1.	

**Common Fields** See [Common Data Module Fields \(218\)](#) for descriptions of fields on this screen that are not listed below.

**Physical Channel** A number used by the switch software to identify the physical channel.

Valid Value	Usage
A 2-digit number equal to the link number entered on this screen.	A multi-carrier cabinet system supports the use of two Processor Interface circuit packs, the first circuit pack (mounted in Control Carrier A) supports physical channels or links 01 through 04; the second (mounted in Control Carrier A) supports physical channels or links 05 through 08. A single-carrier cabinet system supports one Processor Interface circuit pack and physical channels or links 01 through 04 only.

**Maintenance Extension** The extension used to perform maintenance functions on the standby physical channel in a duplicated system. This is the extension specified on the dial plan. The standby remote loop around tests fail if this field is not administered.

**Abbreviated Dialing List 1** Specifies the type of abbreviated dialing list.

Valid Value	Usage
s (system) g (group) p (personal) e (enhanced) blank	If <b>g</b> or <b>p</b> is entered, a group number or personal list number also is required. Entry in this field supports Data Hot Line. This field can be left blank.

**Note:** See *Administrator's Guide*, 555-233-502, for detailed information on abbreviated dialing.

**Special Dialing Option** Identifies the type of dialing when this data module originates calls.

Valid Value	Usage
hot-line, default, or blank.	Leave blank for regular (normal) keyboard dialing.

**Assigned Member Ext and Name** Display only. Extension and name of a previously administered user who has an associated Data Extension button and who will share the use of the module.

**Clocking**

Displays only when the Destination Number field is set to **eia** (and Link = 1). This field sets the clocking for the physical layer of the protocol.

<b>Valid Value</b>	<b>Usage</b>
<b>internal, external</b>	Entering <b>internal</b> specifies that the clocking is provided by the eia port, and <b>external</b> (default) specifies that clocking is provided by the other end of the link. One end of the link should be set to <b>internal</b> and the other end should be set to <b>external</b> .

## Data Module - type X.25 (used for BX.25 connections with the r model)

This form applies only to the r model.

DATA MODULE		Page 1 of 2
Data Extension: _____	Name: _____	
Type: x.25		Remote Loop-Around Test? n
Port: _____	COR: 1	Destination Number: _____
Baud Rate: _____	TN: 1	Establish Connection? n
Endpoint Type: _____		Connected Data Module: _____
Link: 1_	DTE/DCE: _____	Error Logging? _
	Enable Link? n	
Permanent Virtual Circuit? _		Highest PVC Logical Channel: _
Switched Virtual Circuit? _		

### Common Fields

See [Common Data Module Fields \(218\)](#) for descriptions of fields on this screen that are not listed below.

### Baud Rate

Specifies the data transmission rate for this connection.

Valid entries	Usage
9600, 19200, switched	Set to <b>9600</b> for DCS connections to the si model, or to an r model with an external 9600 baud data line.  Set to <b>switched</b> for r-to-r connections with common-channel signaling on DS1 trunks.  Set to <b>9600</b> for connections to Intuity.  Set to either <b>9600</b> or <b>19200</b> for CMS, depending on the physical connectivity.

### Endpoint Type

Must be assigned as **adjunct**. An endpoint type is a type of packet switched data endpoint that uses X.25 call control procedures. The X.25 Endpoint connects to external ports on the PGATE board and to the TDM bus via a DS1 trunk. Ports connected to the adjunct endpoint can be either DTEs or DCEs.

Valid entries	Usage
<b>adjunct</b>	Set to <b>adjunct</b> for DCS, CMS, or Intuity AUDIX.

**Error Logging?**

Used to record X.25 protocol errors in the hardware error log.

Valid Value	Usage
y/n	Set to <b>n</b> for normal operations. Set to <b>y</b> for testing.

**Permanent Virtual Circuit?**Indicates that the logical channels for PVC are allowed for this port; default is **y** (cannot be changed).

Valid Value	Usage
y/n	
Default is <b>y</b> .	

**Switched Virtual Circuit?**Indicates that the Switched Virtual Circuit is not allowed for this port; default is **n** (cannot be changed).

Valid Value	Usage
y/n	
Default is <b>n</b> .	

**Highest PVC Logical Channel**

Indicates that 1 to 64 Logical Channels are allowed on this port.

Valid Value	Usage
1-64	Leave at 64 for normal operations.
default is <b>64</b>	

**Data Module - type x.25 (Page 2)**

DATA MODULE		Page 2 of 2
<b>LAYER 2 PARAMETERS</b>		
Number of Outstanding Frames (w):	4	
Retry Attempt Counter (N2):	2	
Frame Size (N1):	135	
Retransmission (T1) Timer (1/10 seconds):	10	
Idle (T4) Timer (1/10 seconds):	30	
<b>LAYER 3 PARAMETERS</b>		
Number of Outstanding Packets:	2	
Restart (T20) Timer (seconds):	8	
Reset (T22) Timer (seconds):	10	

**Number of Outstanding Frames (w)**Specifies layer 2 window size (**1-7** frames). If the value is **2**, up to 2 frames can be sent without confirmation. Default is **4**.

<b>Retry Attempt Counter (N2)</b>	Specifies the number of times ( <b>0–7</b> ) to send one frame when this frame is not confirmed for a period of time. Default is <b>2</b> .
<b>Frame Size (N1)</b>	Specifies the number of bytes ( <b>135–263</b> ) in a frame. Default is <b>135</b> . If the value is <b>135</b> , there can be up to 1080 bits within a frame. This value is suitable for all adjuncts and for DCS.
<b>Retransmission (T1) Timer (1/10 seconds)</b>	The T1 timer is started at the beginning or the end of the transmission of a frame. At the end of this timer ( <b>0–250</b> ), retransmission of a frame is initiated according to the procedures for link set-up and disconnection or information transfer. Default is <b>10</b> .
<b>Idle (T4) Timer (1/10 seconds)</b>	The T4 timer is a system parameter that represents the time a DTE allows without frames being exchanged on the data link ( <b>0–250</b> ). Default is <b>30</b> .
<b>Number of Outstanding Packets</b>	Specifies the number of packets ( <b>2–7</b> ) that can be sent without confirmation. Default is <b>2</b> .
<b>Restart (T20) Timer (seconds)</b>	The T20 timer is a DTE time-limit ( <b>0–500</b> ) started when DTE issues a restart indication and terminated when the restart request is received or confirmed. Default is <b>8</b> .
<b>Reset (T22) Timer (seconds)</b>	The T22 timer is a DTE time-limit ( <b>0–500</b> ) started when DTE issues a reset indication and terminated when the reset request is received or confirmed. Default is <b>10</b> .

**Data Module - type *pdm* (used for BX.25 connections with the r model)**

This form applies only to the r model.

This form assigns a Modular Processor Data Module (MPDM) data module (700D, 7400B, 7400D or 8400B). The MPDM is an external hardware device that provides a Data Communications Equipment (DCE) interface for connection to equipment such as data terminals, CDR output devices, on-premises administration terminal, Message Server, Property Management System (PMS), AUDIX, and host computers. It also provides a Digital Communications Protocol (DCP) interface to the digital switch.

Use the *tdm* data module type to assign an MTDM, which provides an EIA Data Terminal Equipment (DTE) interface for connection to off-premises private line trunk facilities or a switched telecommunications network and a DCP interface for connection to the digital switch.

DATA MODULE		Page 1 of 1
Data Extension: 30	Name: 27	BCC:
Type: <i>pdm</i> _____	COS: 1	Remote Loop-Around Test? n
Port: _____	COR: 1	Secondary data module? n
ITC: <i>restricted</i> __	TN: 1	Connected to: <i>dte</i>
ABBREVIATED DIALING		
List1:		
SPECIAL DIALING OPTION:		
ASSIGNED MEMBER (Station with a data extension button for this data module)		
Ext	Name	
1: 1002	27 character station name	

**Common Fields**

See [Common Data Module Fields \(218\)](#) for descriptions of fields on this screen that are not listed below.

**Secondary data module** Specifies whether this PDM is the primary or secondary data module.

Valid Value	Usage
<b>y/n</b>	Enter <b>y</b> if this PDM is the secondary data module used for Dual I-channel AUDIX networking. Enter <b>n</b> if this is the primary PDM, or if this data module is not used for AUDIX networking. The primary data module must be administered before the secondary data module may be added. If Port is <b>X</b> , this field must be set to <b>n</b> .

## Communication-Interface Processor Channel

PROCESSOR CHANNEL ASSIGNMENT											
Proc Chan	Enable	Appl.	Gtwy		Interface		Destination		Session		Mach ID
			To	Mode	Link/Chan	Node	Port	Local/Remote			
1:	-	_____		-	_____	_____	_____	0	_____	_____	_____
2:	-	_____		-	_____	_____	_____	0	_____	_____	_____
3:	-	_____		-	_____	_____	_____	0	_____	_____	_____
4:	-	_____		-	_____	_____	_____	0	_____	_____	_____
5:	-	_____		-	_____	_____	_____	0	_____	_____	_____
6:	-	_____		-	_____	_____	_____	0	_____	_____	_____
7:	-	_____		-	_____	_____	_____	0	_____	_____	_____
8:	-	_____		-	_____	_____	_____	0	_____	_____	_____
9:	-	_____		-	_____	_____	_____	0	_____	_____	_____
10:	-	_____		-	_____	_____	_____	0	_____	_____	_____
11:	-	_____		-	_____	_____	_____	0	_____	_____	_____
12:	-	_____		-	_____	_____	_____	0	_____	_____	_____
13:	-	_____		-	_____	_____	_____	0	_____	_____	_____
14:	-	_____		-	_____	_____	_____	0	_____	_____	_____
15:	-	_____		-	_____	_____	_____	0	_____	_____	_____
16:	-	_____		-	_____	_____	_____	0	_____	_____	_____

### Proc Chan

Displays the BX.25 virtual channel number or the TCP/IP listen port channel to carry this processor (virtual) channel.

Valid entries	Usage
<b>1-128</b> (csi model) <b>1-256</b> (si model) <b>1-384</b> (r model)	<p>Enter information about the processor channel in the row corresponding to the processor channel number you want to use. Any Processor Channel number can be used in the range appropriate for the switch model.</p> <p>For connections to adjuncts, processor channel numbers 1, 2, 3, etc. are typically used. For connections between switches, it may be convenient to use processor channel numbers that are indicative of the endpoints of the connection. For example, processor channel 13 for a connection between switch 1 and switch 3.</p>

### Enable

Type **y** to enable a processor channel. Type **n** (default) to disable a processor channel.

Valid entries	Usage
<b>y/n</b>	Enter <b>y</b> when assigning the processor channel. This field must be set to <b>n</b> before you can change any of the processor channel parameters.

**Appl.** Identifies the switch application used on this link.

Valid entries	Usage
<b>audix, dcs, fp-mwi, gateway, gtwy-tcp, mis, msaamwl, msackl, msahlwc, msallwc, msamcs, qsig-mwi,</b> and blank	<p>The <b>gateway</b> application is used for conversion between ISDN and either TCP/IP or BX.25.</p> <p>The <b>gtwy-tcp</b> application is used for conversion between BX.25 and TCP/IP.</p> <p>These application types are used on the gateway switch only.</p>

**Gtwy To** Used for **gtwy-tcp** applications only. Identifies the processor channel that this processor channel is serving as a gateway to.

Valid entries	Usage
<b>1-128</b> (csi model) <b>1-256</b> (si model) <b>1-384</b> (r model)	<p>Two processor channels on the gateway switch are needed to set up a <b>gtwy-tcp</b> gateway, which converts between X.25 and TCP/IP protocols. For each of the two <b>gtwy-tcp</b> processor channels, the Gtwy To field points to the other <b>gtwy-tcp</b> processor channel.</p> <p>For example, if processor channels 5 and 17 are used for a <b>gtwy-tcp</b> gateway, Gtwy To for processor channel 5 would be set to 17 and Gtwy To for processor channel 17 would be set to 5.</p>

**Mode** Identifies whether the IP session is passive (client) or active (server).

Valid entries	Usage
<b>c</b> (client) <b>s</b> (server) blank	<p>This field must be blank if the type of interface link is x.25 (r model) or procr-intf (si model). This field cannot be blank if the type of interface link is ethernet or ppp.</p> <p>Set the Mode to <b>s</b> for ppp or ethernet connections to CMS. Set opposite values (<b>c</b>&lt;--&gt;<b>s</b>) on the endpoints for ppp or ethernet connections between switches or between a switch and Intuity AUDIX.</p>

**Interface Link**

Identifies the physical link carrying this processor (virtual) channel.

Valid entries	Usage
1-25 (csi, si)	For the <i>csi model</i> , all links (up to 25) must be used for tcp/ip connections.
1-33 (r)	For the <i>si model</i> , links numbered 1 through (4 times the number of PI circuit packs) can be either x.25 or tcp/ip. The rest of the links (up to 25) must be tcp/ip.  For the <i>r model</i> , links numbered 1 through (4 times the number of PGATE circuit packs) can be either x.25 or tcp/ip. The rest of the links (up to 33) must be tcp/ip.

**Interface Chan**

Identifies the BX.25 virtual channel number or the TCP/IP listen port channel to carry this processor (virtual) channel.

Valid entries	Usage
1-64 (x.25)	The channel number 0 means any available port can be used (which will be automatically selected by the system).
0, 5000-64500 (ethernet or ppp)	For TCP/IP connections, the following values are recommended: <ul style="list-style-type: none"> <li>• 5001 CMS (Appl. = <b>mis</b>)</li> <li>• 5002 Intuity AUDIX (Appl. = <b>audix</b>)</li> <li>• 5003 DCS (Appl. = <b>dcs</b>)</li> <li>• 6000 + (Appl. = <b>gtwy-tcp</b>)</li> </ul> <p>The Interface Channel number must be unique for the <b>gtwy-tcp</b> and <b>gateway</b> application types.</p> <p>Interface Channel numbers can be repeated on the same switch for the <b>audix</b>, <b>mis</b>, and <b>dcs</b> application types.</p>

**Destination Node**

Identifies the switch or adjunct at the far end of this link.

Valid entries	Usage
A node name previously entered on the Node Names screen or blank.	This must be a name entered on the Node Names screen. For ppp connections, it must match the Destination Node Name entered on the ppp Data Module screen.

**Destination Port**

Identifies the port number of the destination.

Valid entries	Usage
0, 5000-64500	The channel number 0 means any available port can be used (which will be automatically selected by the system).

**Session Local**

A number used by the system to identify one end of a connection.

Valid entries	Usage
<b>1-128 (csi)</b> <b>1-256 (si)</b> <b>1-384 (r)</b>	<p>The Local and Remote Session numbers can be any value between 1 and 256, but they must be consistent between endpoints. For each connection, the Local Session number on the local switch must equal the Remote Session number on the remote switch and vice versa.</p> <p>It is allowed, and sometimes convenient, to use the same number for the Local and Remote Session numbers. For example, it is frequently convenient (but not necessary) to use the processor channel number for both the session numbers.</p> <p>For the <b>qsig-mwi</b> and <b>fp-mwi</b> applications, the Local Session numbers must be unique on the switch. For other applications, it is allowed, but not recommended, to use the same Session numbers for two or more connections.</p>

**Session Remote**

See Session Local, above.

**Mach ID**

The machine identification number.

Valid entries	Usage
<b>1-63 (si model)</b>	<p>For switches and Intuity AUDIX, the Machine ID is the Local Node Number on the dial plan. For the <b>qsig-mwi</b> and <b>fp-mwi</b> applications, the Machine ID is the index used on the Message Waiting Indication Subscriber Number Prefixes screen. Machine ID is not used for the CMS adjunct.</p>

## IP Routing

```
add ip-route 3
```

Page 1 of 1

### IP ROUTING

```
Route Number: 3
Destination Node:
Gateway:
C-LAN Board:
Metric:
```

### General Description

When using the C-LAN circuit pack for TCP/IP connectivity between switches in a DCS network or between switches and adjuncts, IP routes must be administered for most connections. There are two cases when you *do not* need IP routes:

- 1 With a PPP connection between two nodes without any intermediate nodes.
- 2 With an Ethernet connection between nodes on the same subnetwork *and* the Automatic Subnet Routing? field on the Data Module screen is set to **Y** (automatic subnet routing enabled).

In all other cases — PPP with intermediate connections or Ethernet between nodes on different subnets or Ethernet between nodes on the same subnet with Automatic Subnet Routing disabled — you need to administer an IP route between endpoint nodes.

In a LAN environment, if network security is a concern, disabling automatic subnet routing limits internode access to paths that are explicitly administered. You would then need to administer IP routes between every pair of nodes that you want to communicate, even though they are on the same subnet.

**Note:** 1. If you set up an IP route from a node that is connected via a ppp link to the node you are using for the Gateway, you must *first enable the link* on the ppp data module.

**Note:** 2. If an entry in the Destination Node or Gateway field is rejected, check that the name has been entered on the Node Names screen. In particular, check that names are entered on the correct page of the Node Names screen — page 1 for AUDIX and MSA, *pages 2–6 for a CMS server*, a node in a switch, and router nodes.

### Route Number

A number that identifies this IP route.

Valid Value	Usage
1–400	Command-line entry. Enter a specific number or <b>n</b> for the next available number.

**Destination Node** The node name of the final destination for this connection.

Valid Value	Usage
A name previously entered on the Node Names screen.	This is the final destination of the IP route for this connection.

**Gateway** The node name of the first intermediate node.

Valid Value	Usage
A name previously entered on the Node Names screen and is either a port on the C-LAN board or identified as a Destination Node on another IP route.	<p>If there are no intermediate nodes between the local and remote C-LAN ports for this connection, the Gateway is the local C-LAN port. If there are one or more intermediate nodes, the first intermediate node is the Gateway.</p> <p>For example, consider a connection between two switches (two C-LAN ports) that goes through a WAN with multiple routers. Each router is an intermediate node but the first router is the Gateway for the IP route between the C-LAN ports. This router is defined as <i>first</i> by setting up another IP route between the local C-LAN port and the router. In this IP route, the local C-LAN port is the Gateway and the router is the Destination.</p>

**C-LAN Board** The slot location of the local C-LAN board.

Valid Value	Usage
A slot location occupied by a C-LAN board.	Enter MMCSS, where MM is a 2-digit machine number, C is the carrier letter, and SS is a 2-digit slot number.


**Metric** The metric value indicates the desirability of the IP route in terms of the efficiency of the data transmission between two nodes.

Valid Values	Usage
0 or 1	<p>A metric value of <b>1</b> is used only on a switch that has more than one C-LAN board installed.</p> <p>You can always enter either <b>0</b> or <b>1</b> in the Metric field but the choice should be guided by the information below.</p>

If there are two routes to the same destination, one with metric **0** and one with metric **1**, the switch software will choose the route with metric **0** because it is (if properly administered) the more efficient route of the two. On the other hand, if both routes are administered with metric **0**, the switch will choose whichever it sees first, not necessarily the most efficient one.

By entering **1** in the Metric field, you are telling the switch, “this is a complex route; if you know of a simpler route (metric **0**) to this destination, use that instead.” In other words, metric **1** diverts usage of the route to a metric-**0** route, if available.

The following diagram illustrates the use of the Metric field. Switches A and C are connected via switch B over two LANs. Switch B has two C-LAN boards, which are connected via a ppp link. The network nodes are numbered 1 through 6.

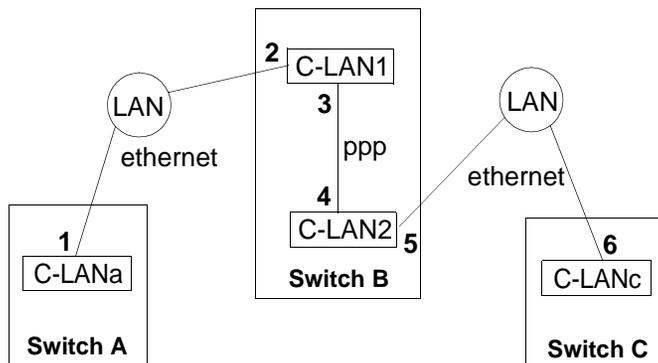

The following IP routes are required for communications between switches A and C:

Route	Administered on	Board Loc.	Destination Node	Gateway Node	Metric
1	Switch A	C-LANa	6	2	0
2	Switch B	C-LAN1	6	4	1
3	Switch B	C-LAN2	1	3	1
4	Switch C	C-LANc	1	5	0
<i>Implied</i>	<i>Switch B</i>	<i>C-LAN2</i>	<i>6</i>	<i>5</i>	<i>0</i>

The implied route from C-LAN2 to node 6 via node 5 is not administered on the IP Routing screen but is a built-in part of the C-LAN firmware and the automatic subnet routing feature. (We are assuming that automatic subnet routing is enabled for node 5 on the Data Module screen.) Therefore, on Switch B there are two routes to destination 6 — route 2 and the implied route.

A message originating on Switch B destined for node 6 can use either route 2 or the implied route. The switch will choose the implied route because it has metric **0** while route 2 has metric **1**. By using the implied route, the message goes directly from the source to C-LAN2, without passing through C-LAN1. If route 2 had been administered with metric **0**, the switch may have used route 2, which goes through C-LAN1 to C-LAN2. In this case, if traffic volume were high, the PPP connection between C-LAN1 and C-LAN2 could be unnecessarily overloaded. Of course, any destination-6 message already being handled by C-LAN1, such as a message from Switch A, would have to use route 2.

The same description applies to route 3 and destination 1. There is an implied metric-**0** route with destination 1 and gateway 2.

# Screens for Prerequisite Administration

## Signaling Group

This screen identifies groups of ISDN-PRI DS1 interface B-channels for which a given D-channel or D-channel pair carries associated signaling information. The Non-Facility Associated Signaling (NFAS) feature allows a D-channel to convey signaling information for B-channels that are located on DS1 facilities other than the one containing the D-channel. With NFAS, a signaling group does not necessarily correspond to a single DS1 interface. The Signaling Group screen is administered to show how B-channels and D-channels are related.

The Signaling Group screen also supports Facility Associated Signaling (FAS). The screen establishes the fact that a D-channel carries signaling information for all B-channels on its associated DS1 interface, and for no others.

In addition, the screen administers Temporary Signaling Connections (TSC) used in support of DCS Over ISDN-PRI D-channel (includes ISDN-PRI D-channel DCS AUDIX).

SIGNALING GROUP				Page 1 of 5	
Group Number: _					
Associated Signaling? n				Max number of NCA TSC: __	
Primary D-Channel: _____				Max number of CA TSC: __	
Secondary D-Channel: _____				Trunk Group for NCA TSC: __	
Trunk Group for Channel Selection: __					
Supplementary Service Protocol: a					
Trunk Brd	Interface ID	Trunk Brd	Interface ID		
1: _____	_____	11: _____	_____		
2: _____	_____	12: _____	_____		
3: _____	_____	13: _____	_____		
4: _____	_____	14: _____	_____		
5: _____	_____	15: _____	_____		
6: _____	_____	16: _____	_____		
7: _____	_____	17: _____	_____		
8: _____	_____	18: _____	_____		
9: _____	_____	19: _____	_____		
10: _____	_____	20: _____	_____		

**Group Number** Display-only field when the screen is accessed using an administration command such as **display** or **change**.

Valid entries	Usage
Display-only field	

**Associated Signaling** For FAS the D-channel, can only carry signaling information for B-channels located on the same DS1 circuit pack.

Valid entries	Usage
<b>y</b>	Indicates Facility Associated Signaling
<b>n</b>	Indicates Non-Facility Associated Signaling.

**Primary D-channel** Enter a 6- to 7-character port number associated with the DS1 Interface circuit pack port. The port number assigns the primary D-channel in the Signaling Group. For 24-channel facilities, the 24th port is assigned as the D-channel. For 32-channel facilities, the 16th port is assigned as the D-channel.

Valid entries	Usage
<b>01</b> through <b>44</b> (G3r)	First and second characters are the cabinet number
<b>01</b> through <b>03</b> (G3si)	
<b>A</b> through <b>E</b>	Third character is the carrier.
<b>01</b> through <b>20</b>	Fourth and fifth characters are the slot number
<b>16</b> or <b>24</b>	Sixth and seventh characters are the port
blank	

**Secondary D-channel** Enter a 6- to 7-character port number associated with the DS1 Interface circuit pack port used for secondary D-channel signaling. Displays when the Associated Signaling field is **n** (indicates NFAS). The port number assigns the secondary D-channel in the Signaling Group. For 24-channel facilities, the 24th port is assigned as the D-channel. For 32-channel facilities, the 16th port is assigned as the D-channel.

Valid entries	Usage
<b>01</b> through <b>44</b> (G3r)	First and second characters are the cabinet number
<b>01</b> through <b>03</b> (G3si)	
<b>A</b> through <b>E</b>	Third character is the carrier
<b>01</b> through <b>20</b>	Fourth and fifth characters are the slot number
<b>16</b> or <b>24</b>	Sixth and seventh characters are the port
blank	

**Max Number of NCA TSC**

The maximum number of simultaneous Non-Call Associated Temporary Signaling Connections (NCA-TSCs) that can exist in the Signaling Group. This number includes all NCA-TSCs that are administered on this screen and those NCA-TSCs that tandem through the switch in-route to another switch in the network.

Valid entries	Usage
0 to 256.	

**Max number of CA TSC**

The maximum number of simultaneous Call Associated Temporary Signaling Connections (CA-TSCs) that can exist in the Signaling Group. Typically, the number of ISDN-PRI trunk group members controlled by the Signaling Group.

Valid entries	Usage
0 to 400.	

**Trunk Group For NCA TSC**

The ISDN-PRI trunk group number whose incoming call handling table will be used to handle incoming NCA-TSCs through the Signaling Group. Enter the assigned ISDN-PRI trunk group number whose call handling table will be used to route the incoming NCA TSCs. (An ISDN-BRI trunk group may not be used.)

Valid entries	Usage
1 to 99.	
blank	

**Trunk Group for Channel Selection**

Enter the assigned trunk group number. (An ISDN-BRI trunk group may not be used.)

Valid entries	Usage
1 to 99.	
blank	

**Supplementary Service Protocol**

Determines whether AT&T NCA TSCs or QSIG NCA TSCs are sent over the interface. To change this field from **a** to **b**, first check the Adm'd NCA TSC Index field on the [“ISDN TSC Gateway Channel Assignments”](#) on page -251. Make sure no NCA TSC on the Signaling Group screen is administered as a Gateway Channel. If

they are, you must remove the NCA TSC Gateway assignment first before this field can be changed to **b**.

Valid entries	Usage
<b>a</b>	AT&T protocol
<b>b</b>	QSIG protocol. This field may be set to <b>b</b> only if the Basic Supplementary Services field on the System-Parameters Customer-Options screen is <b>y</b> . If this field is <b>b</b> , pages 2 through 5 do not appear.

### Trunk Brd

Enter a 5-character DS1 Interface circuit pack number that has trunk members belonging to this Signaling Group. Displays when the Associated Signaling field is **n** (indicates NFAS).

Valid entries	Usage
<b>01</b> through <b>44</b> (G3r)	First and second characters are the cabinet number
<b>01</b> through <b>03</b> (G3si)	
<b>A</b> through <b>E</b>	Third character is the carrier
<b>01</b> through <b>20</b>	Fourth and fifth characters are the slot number
blank	

### Interface ID

In an NFAS Signaling Group, an Interface ID must be assigned to each DS1 facility so that it can be referenced by both interfacing switches. When a call is established between switches, the Interface ID at each end is used to determine which B-channel is to be used to establish the call. The Interface ID numbers on both ends must be the same. Displays when the Associated Signaling field is **n** (indicates NFAS). Enter an interface ID for the corresponding DS1 Interface circuit pack. Pages 2 through 5 of the screen.

ADMINISTERED NCA TSC ASSIGNMENT						Page 2 of 5	
Service/Feature: _____		As-needed Inactivity Time-out (min): _____					
TSC	Local	Enabled	Established	Dest. Digits	Appl.	Adj. Name	Mach. ID
Index	Ext.						
1:	_____	—	_____	_____	_____	_____	_____
2:	_____	—	_____	_____	_____	_____	_____
3:	_____	—	_____	_____	_____	_____	_____
4:	_____	—	_____	_____	_____	_____	_____
5:	_____	—	_____	_____	_____	_____	_____
6:	_____	—	_____	_____	_____	_____	_____
7:	_____	—	_____	_____	_____	_____	_____
8:	_____	—	_____	_____	_____	_____	_____
9:	_____	—	_____	_____	_____	_____	_____
10:	_____	—	_____	_____	_____	_____	_____
11:	_____	—	_____	_____	_____	_____	_____
12:	_____	—	_____	_____	_____	_____	_____
13:	_____	—	_____	_____	_____	_____	_____
14:	_____	—	_____	_____	_____	_____	_____
15:	_____	—	_____	_____	_____	_____	_____
16:	_____	—	_____	_____	_____	_____	_____

**Service/Feature**

The service type for all administered NCA-TSCs assigned in this Signaling Group.

Valid entries	Usage
accunet	
i800	
inwats	
lds	
mega800	
megacom	
multiquest	
operator	
sdn	
sub-operator	
wats-max-bnd	
Facility Type 0 and 1 user-defined services.	
blank	

**As-needed Inactivity Time-out (min)**

The inactivity time-out for as-needed NCA-TSCs assigned in the Signaling Group. An as-needed administered NCA-TSC staying inactive in this time period will be removed from service.

Valid entries	Usage
10 to 90	
blank	

**TSC Index**

Specifies the administered NCA-TSCs assigned.

Valid entries	Usage
Display-only field.	The administered NCA TSC index represents one DCS or DCS AUDIX logical channel connecting any two switches. The Index number ranges from 1–64.

**Local Ext**

Used to assign an extension on the switch to the administered NCA-TSC.

The extension cannot be previously assigned to another administered NCA-TSC, station, or data module, and so on.

Valid entries	Usage
An unassigned extension number.	
blank	

**Enabled**

Enables or disables the administered NCA-TSC.

Valid entries	Usage
<b>y</b>	Enter <b>y</b> to enable the administered NCA-TSC.
<b>n</b>	

**Establish**

Used to indicate the strategy for establishing this administered NCA-TSC.

Valid entries	Usage
<b>permanent</b>	An entry of <b>permanent</b> means that the administered NCA-TSC can be established by either the near end or the far end.
<b>as-needed</b>	An entry of <b>as-needed</b> means the administered NCA-TSC will be established the first time the administered NCA-TSC is needed. It can be set up either by the near end or far end switch.
blank	

**Dest. Digits**

Used to route the administered NCA-TSC to the far end switch.

These digits are sent as entered to the destination switch; no routing or other digit manipulation is performed.

Valid entries	Usage
0 through 9	Can include up to 15 digits.
+	
*	
#	
blank	

**Appl.**

Specifies the application this administered NCA-TSC is going to be used for.

Valid entries	Usage
<b>audix</b>	Used for ISDN-PRI D-channel DCS AUDIX feature.
<b>dcs</b>	Used for the DCS Over ISDN-PRI D-channel feature.
<b>gateway</b>	Used when the administered NCA-TSC will be used as one end in the gateway channel connecting to a BX.25 link. If <b>gateway</b> is entered, then the ISDN TSC Gateway Channel Assignments screen must be completed.
<b>masi</b>	
blank	

**Adjunct Name**

Only displays for G3r configurations. Displays when the Appl field is **audix**.

Valid entries	Usage
Enter the name of the AUDIX as it appears on the "Adjunct Names" screen.	

**Machine ID**

Used to indicate the far-end PBX or the AUDIX machine to which this administered NCA-TSC will be connected. This number is the Local Node Number administered on the Dial Plan Record screen.

Valid entries	Usage
<b>1-63</b>	For DCS
<b>1-99</b>	For AUDIX
<b>1-12</b>	For MASI
blank	

## ISDN TSC Gateway Channel Assignments

This screen is required when the switch is to act as a gateway between a switch that supports the Temporary Signaling Connections (TSC) feature and a non-TSC-compatible switch. The gateway provides interface protocols necessary for communications to exist between a switch administered with Non-Call Associated TSCs in a Signaling Group on the ISDN side and a processor channel (BX.25) on the non-ISDN side. A NCA-TSC is a type of virtual connection established for exchanging user information messages on ISDN-PRI D-channels. There is no B-channel related to the connection.

ISDN TSC GATEWAY CHANNEL ASSIGNMENT								Page 1 of 2	
Sig Group	Adm'd TSC	NCA Index	Processor Channel	Appli-cation	Sig Group	Adm'd TSC	NCA Index	Processor Channel	Appli-cation
1:	—	—	—	—	17:	—	—	—	—
2:	—	—	—	—	18:	—	—	—	—
3:	—	—	—	—	19:	—	—	—	—
4:	—	—	—	—	20:	—	—	—	—
5:	—	—	—	—	21:	—	—	—	—
6:	—	—	—	—	22:	—	—	—	—
7:	—	—	—	—	23:	—	—	—	—
8:	—	—	—	—	24:	—	—	—	—
9:	—	—	—	—	25:	—	—	—	—
10:	—	—	—	—	26:	—	—	—	—
11:	—	—	—	—	27:	—	—	—	—
12:	—	—	—	—	28:	—	—	—	—
13:	—	—	—	—	29:	—	—	—	—
14:	—	—	—	—	30:	—	—	—	—
15:	—	—	—	—	31:	—	—	—	—
16:	—	—	—	—	32:	—	—	—	—

### Sig Group

Used to indicate the Signaling Group to which the NCA-TSC belongs.

Valid entries	Usage
1 to 30.	
blank	

### Adm'd NCA TSC Index

Used to indicate the administered NCA-TSC that acts as one endpoint of the gateway.

Valid entries	Usage
1 to 64.	
blank	

**Processor Channel**

Used to indicate the processor channel to which the administered NCA-TSC index will be mapped. This processor channel is used as another endpoint of the connection in this gateway assignment.

Valid entries	Usage
1 to 64	
blank	

**Application**

Used to indicate the feature this gateway is used for. Gateway channels can be used for DCS+ or ISDN-PRI DCS AUDIX feature.

Valid entries	Usage
audix	
dcs	
blank	

**Node Number Routing**

This screen specifies the routing pattern associated with each node in a public or private network. NNR is a required capability for Extension Number Portability (ENP) and is associated with the Uniform Dial Plan (UDP).

change node-routing 87 partition 2

Page 1 of 2

## NODE NUMBER ROUTING

Partitioned Group Number: 2

| Route Pat |
|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| 1: ___    | 15: ___   | 30: ___   | 45: ___   | 60: ___   | 75: ___   | 90: ___   |
| 2: ___    | 16: ___   | 31: ___   | 46: ___   | 61: ___   | 76: ___   | 91: ___   |
| 3: ___    | 17: ___   | 32: ___   | 47: ___   | 62: ___   | 77: ___   | 92: ___   |
| 4: ___    | 18: ___   | 33: ___   | 48: ___   | 63: ___   | 78: ___   | 93: ___   |
| 5: ___    | 19: ___   | 34: ___   | 49: ___   | 64: ___   | 79: ___   | 94: ___   |
| 6: ___    | 20: ___   | 35: ___   | 50: ___   | 65: ___   | 80: ___   | 95: ___   |
| 7: ___    | 21: ___   | 36: ___   | 51: ___   | 66: ___   | 81: ___   | 96: ___   |
| 8: ___    | 22: ___   | 37: ___   | 52: ___   | 67: ___   | 82: ___   | 97: ___   |
| 9: ___    | 23: ___   | 38: ___   | 53: ___   | 68: ___   | 83: ___   | 98: ___   |
| 10: ___   | 24: ___   | 39: ___   | 54: ___   | 69: ___   | 84: ___   | 99: ___   |
| 11: ___   | 25: ___   | 40: ___   | 55: ___   | 70: ___   | 85: ___   |           |
| 12: ___   | 26: ___   | 41: ___   | 56: ___   | 71: ___   | 86: ___   |           |
| 13: ___   | 27: ___   | 42: ___   | 57: ___   | 72: ___   | 87: ___   |           |
| 14: ___   | 28: ___   | 43: ___   | 58: ___   | 73: ___   | 88: ___   |           |
|           | 29: ___   | 44: ___   | 59: ___   | 74: ___   | 89: ___   |           |

**Partitioned Group Number**

This read-only field displays the partitioned group number associated with the node numbers being administered.

Valid entries	Usage
Read-only field	The partitioned group number is either specified on the command line or defaults to partitioned group number 1.

**Node Number**

This display-only field lists the node number to be changed.

Valid entries	Usage
Display-only field	Two pages display simultaneously for a total of 200 nodes (100 per page). For example, entering <b>change node-routing 87</b> displays nodes 1 through 199, and entering <b>change node-routing 151</b> displays nodes 100 through 299. However, entering <b>change node-routing 999</b> displays nodes 900 through 999 on one page.

**Route Pattern**

Enter the routing pattern associated with the corresponding node number. This field repeats the same number of times as there are node numbers on the page.

Valid entries	Usage
1 to 254	
blank	

**Uniform Dial Plan**

This screen administers the Uniform Dial Plan (UDP).

Page 1 of 2

**UNIFORM DIALING PLAN**

Ext Codes: \_\_\_\_\_

Ext Code: \_\_\_\_\_ Type: \_\_\_\_\_

dd	Type								
0x:	_____	1x:	_____	2x:	_____	3x:	_____	4x:	_____
00:	_____	10:	_____	20:	_____	30:	_____	40:	_____
01:	_____	11:	_____	21:	_____	31:	_____	41:	_____
02:	_____	12:	_____	22:	_____	32:	_____	42:	_____
03:	_____	13:	_____	23:	_____	33:	_____	43:	_____
04:	_____	14:	_____	24:	_____	34:	_____	44:	_____
05:	_____	15:	_____	25:	_____	35:	_____	45:	_____
06:	_____	16:	_____	26:	_____	36:	_____	46:	_____
07:	_____	17:	_____	27:	_____	37:	_____	47:	_____
08:	_____	18:	_____	28:	_____	38:	_____	48:	_____
09:	_____	19:	_____	29:	_____	39:	_____	49:	_____

## UNIFORM DIALING PLAN

Ext Codes: \_\_\_\_\_

Ext Code: \_\_\_\_\_ Type: \_\_\_\_\_

dd	Type								
5x:	_____	6x:	_____	7x:	_____	8x:	_____	9x:	_____
50:	_____	60:	_____	70:	_____	80:	_____	90:	_____
51:	_____	61:	_____	71:	_____	81:	_____	91:	_____
52:	_____	62:	_____	72:	_____	82:	_____	92:	_____
53:	_____	63:	_____	73:	_____	83:	_____	93:	_____
54:	_____	64:	_____	74:	_____	84:	_____	94:	_____
55:	_____	65:	_____	75:	_____	85:	_____	95:	_____
56:	_____	66:	_____	76:	_____	86:	_____	96:	_____
57:	_____	67:	_____	77:	_____	87:	_____	97:	_____
58:	_____	68:	_____	78:	_____	88:	_____	98:	_____
59:	_____	69:	_____	79:	_____	89:	_____	99:	_____

**Ext Codes**

Displays a string of digits, "x", and "dd." The position of the dd shows which digit positions of the Ext Codes are being administered. For example, **512dd** means that the last two digits of the Ext Codes, for the leading digits 512, are being administered on the screen. The string, **5ddxx**, shows that the second and third digits of the Ext Codes, for the leading digit 5, are being administered on the screen (these entries would all be wildcard entries).

**Ext Code, Type (and associated data)**

Displays what rules apply if the entries on the screen are not administered. For example, shows a screen for Ext Codes starting with 512. If these entries are not administered, the entry for Ext Code 51xxx applies to these entries, and if Ext Code 51xxx is not administered, the entry for Ext Code 5xxxx applies to these entries. In a 5-digit UDP, these read-only fields display only if at least 3 digits are specified in the command-line key, although one set (the set on the left) of these fields would still display if 2 digits are specified in the command-line key. If only 1 digit is specified or if 'x' or 'X' is specified in the command-line key, then neither of these sets of fields display, since there is no Ext Code more general than those listed on the screen.

Valid entries	Usage
AARCode	
ENPNode	
Local	
TempOOS	
UDPCode	
blank	

**dd** Displays the two digits (or x's) representing the extension or group of extensions to be administered. For this field, "xx:" is repeated on both pages, since it is the default for all other entries on both pages. Changing the type associated with this field on one page changes it on both pages.

**Type** Specify the type of treatment for the extension. That is, specify whether the extension should receive intercept treatment, be converted to AAR, or be converted via ENP. The difference between AAR Location Codes and UDP Location Codes is that 7-digit AAR Numbers created from AAR Location Codes may be changed during AAR analysis by AAR digit conversion before being routed. Seven-digit AAR Numbers created from UDP Location Codes are not subject to digit conversion before being routed with AAR digit analysis. When an extension code that is displayed on the UDP screen is not administrable because it conflicts with the translations in the first and/or second digit tables, then the type field for that extension code displays "NotInDP."

Valid entries	Usage
AARCode	
ENPNode	
Local	
TempOOS	The entry <b>TempOOS</b> indicates an extension is temporarily out-of-service. Calls to these extensions receive reorder.
UDPCode	
blank	A blank entry indicates this Ext code is not administered. If no matching code can be found, then the call receives intercept treatment.

**Location Code** Specify the 3-digit location code for Ext Codes administered with a type of AARCode or UDPCode. This field displays if AARCode or UDPCode is entered as the type.

**Node Number** Specify the node number for Ext Codes administered with a type of ENPNode. This field pops up if ENPNode is entered as the type.

**Note:** Note: This node number must not be the same as the local node number on the dial plan screen.



**Link** Enter an interface link number in each field.

Valid entries	Usage
1 to 8	
blank	

**Chan(nel)** Enter a channel number in each field. This field is labeled "Channel" for G3r and "Chan" for G3si.

Valid entries	Usage
1 to 64	
blank	

**Priority** Indicates whether the hop channel has high or low priority. Priorities should be assigned based on the operational speed of the links and the number of hops in the network channel. Displays for G3si only.

Valid entries	Usage
high	
low	
blank	

## Circuit Packs

This screen administers circuit packs to carrier slots before the circuit packs are actually installed in the carrier or cabinet. This allows the system to be configured (administered) when the circuit packs have not yet been physically inserted in their appropriate slots. Before any voice terminals, attendant consoles, or trunks can be administered in the system, the correct type of circuit pack must be installed in the appropriate slot, or using the Circuit Pack screen, a circuit pack must be assigned to the slot.

The Circuit Pack Administration screens do not have to be completed if the system cabinet is equipped with the circuit packs at the time of administration. However, for switch node carriers, these screens must be administered.

See *DEFINITY Communications System Generic 3 Planning and Configuration*, 555-230-601, for additional information on circuit pack administration and Port Assignment Records. (The DS1 circuit pack and associated translation coverage is provided in later in this book).

**Note:** For initial installation procedures, circuit packs should only be assigned slots per the hardware Configuration Layout record (obtained from the factory or Customer Services Support Organization). Arbitrarily assigning circuit packs to slots should not be attempted because this eventually requires (at the time of installation and test) realignment of the circuit packs and reworking associated wiring to agree with the software translations or new software translations to agree with the shipped hardware configuration.

## Page 1 of the screen

Page 1 of X

CIRCUIT PACKS

Cabinet: \_\_\_ Carrier: \_\_\_

Cabinet Layout: \_\_\_\_\_ Carrier Type: \_\_\_\_\_

Slot Code	Sfx	Name	Slot Code	Sfx	Name
00:	___	_____	11:	___	_____
01:	___	_____	12:	___	_____
02:	___	_____	13:	___	_____
03:	___	_____	14:	___	_____
04:	___	_____	15:	___	_____
05:	___	_____	16:	___	_____
06:	___	_____	17:	___	_____
07:	___	_____	18:	___	_____
08:	___	_____	19:	___	_____
09:	___	_____	20:	___	_____
10:	___	_____	21:	___	_____

'#' indicates circuit pack conflict.

**Note:** Each page of the screen represents one carrier within the cabinet specified on the command line. For G3si, all carriers and slots appear even if they are not included in the actual hardware. This supports reconfiguration.

**Cabinet** This field shows the cabinet number as entered on the command line.

Valid entries	Usage
Display-only field.	

**Carrier** This field shows the letter of the carrier (A through E) circuit packs are being administered on.

Valid entries	Usage
Display-only field.	

**Cabinet Layout** This field is only displayed for G3r. This field describes the physical layout of the cabinet.

Valid entries	Usage
Display-only field.	Values that may display are <b>five-carrier</b> and <b>single-carrier-stack</b> .

**Carrier Type** This field shows the type of carrier.

**Note:** Note: For G3r, if the Carrier Type (as administered through the Cabinet Administration screen) does not match the physical hardware, the Code fields may display question marks.

Valid entries	Usage
Display-only field.	Values that may display are <b>dup-switch-node</b> , <b>expansion-control</b> , <b>not-used</b> , <b>port</b> , <b>processor</b> , and <b>switch-node</b> .

**Slot**

The slot equates to the physical slot of the given carrier; the number of slots displayed depends on the system being configured.

- For G3r, the number of slots represent all administrable slots available for the given carrier type.
- For G3si, all slots that could possibly be administered are displayed, even if they do not apply to the current configuration of the system. This is to accommodate the situation when a system is being reconfigured.

Valid entries	Usage
Display-only field.	

**Code**

Enter the circuit pack code. If there is a physical circuit pack installed in the slot, the entry must match that of the circuit pack. If there is equipment administered on a slot, the equipment must be removed from the circuit pack before the circuit pack can be changed or removed.

Valid entries	Usage
<b>TN</b> followed by a 3- or 4-digit number	
MAPD	For IP trunk reserved slots

**Sfx**

Enter the circuit pack suffix, if applicable.

Valid entries	Usage
<b>B to Z</b>	
blank	

**Name**

This field shows the alphanumeric name of the circuit pack (such as Digital Line).

**Note:** Note: When the circuit pack physically inserted in the slot differs from what has been administered on this screen, a "#" displays between the Sfx and Name fields.

Valid entries	Usage
Display-only field.	

## Implementation notes

The fields that appear on a particular screen will vary depending upon the system configuration (Cabinet Layout and Carrier Type) being administered.

The number of Slot fields displayed will vary depending on the system being configured. For G3r, the number of Slot fields displayed will represent all administrable slots available for the given Carrier Type. For G3si, all possible Slots will display.

## Synchronization Plan

This screen assigns primary and secondary external synchronization sources. This provides synchronization between the switch and digital facilities that the switch is connected to. When the switch is connected to digital facilities, the switch (both Processor Cabinets and Expansion Cabinets) must be synchronized to the incoming data rate of 8,000 frames-per-second. This timing information reference may be derived from DS1 facilities or from a Stratum 3 external clock. Loss of the reference signal, excessive phase changes, and variation in timing frequency can cause loss of data or dropped data connections. When no external digital facilities, including Stratum 3 external clocks, are present or when a switch is the "master" node of a network providing timing to the rest of the network, the timing can come from an oscillator on the switch's tone/clock circuit pack.

The Synchronization Plan may not be required for some digital connections. The switch's internal clock may suffice.

### Page 1 of the screen

SYNCHRONIZATION PLAN							
SYNCHRONIZATION SOURCE (circuit pack location)							
Stratum: _							
Port Network: _							
Primary: ____				Secondary: ____			
Location	Name	Slip	Type	Location	Name	Slip	Type
01C17	_____	D	UDS1-BD	_____	_____	-	_____
01C18	_____	Y	TBRI-BD	_____	_____	-	_____
_____	_____	-	_____	_____	_____	-	_____
_____	_____	-	_____	_____	_____	-	_____
_____	_____	-	_____	_____	_____	-	_____
_____	_____	-	_____	_____	_____	-	_____
_____	_____	-	_____	_____	_____	-	_____
_____	_____	-	_____	_____	_____	-	_____

NOTE: TN722B & TN464B DS1 sources result in stratum 4, type II synchronization

### Stratum

Enter the stratum level to be used for synchronization.

Valid entries	Usage
3, 4	Stratum 3 capability is only possible when using a TN780 Tone Clock circuit pack.

**Port Network**

Only displays when the Stratum field is **3**.

Valid entries	Usage
Display-only field.	

**Primary**

Enter the 5-character circuit pack location number for the circuit pack that will function as the primary synchronization source. The clock circuit pack's internal source is the implicit last choice. Only one switch in the network can function as the primary synchronization source. Only displays when the Stratum field is **4**.

The Primary and Secondary synchronization sources (DS1 or BRI trunk facilities) must be on the same Port Cabinet (that is, PPN, EPN1, or EPN3).

Valid entries	Usage
<b>01</b> through <b>44</b> (G3r)	First and second characters are the cabinet number
<b>01</b> through <b>03</b> (G3si)	
<b>A</b> through <b>E</b>	Third character is the carrier
<b>01</b> through <b>20</b>	Fourth and fifth characters are the slot number
blank	A blank entry means no external source.

**Secondary**

The system will select automatically the secondary circuit pack if the primary circuit has a failure. Only displays when the Stratum field is **4**.

The Primary and Secondary synchronization sources (DS1 or BRI trunk facilities) must be on the same Port Cabinet (that is, PPN, EPN1, or EPN3).

Valid entries	Usage
<b>01</b> through <b>44</b> (G3r)	First and second characters are the cabinet number
<b>01</b> through <b>03</b> (G3si)	
<b>A</b> through <b>E</b>	Third character is the carrier
<b>01</b> through <b>20</b>	Fourth and fifth characters are the slot number
blank	A blank entry means no external source.

**Pages 1–X of the screen****Location/Name**

Identifies the location and name for each DS1 or BRI trunk circuit pack administered via the DS1 or BRI Trunk Circuit Pack screen. Only displays if the Stratum field is **4**.

Valid entries	Usage
Display-only field.	

**Slip** Displays as **y** if the Slip Detection field has been enabled for any of the 8 ports on the DS1 Circuit Pack screen.

Valid entries	Usage
Display-only field.	

**Type** Contains a value for each displayed circuit pack that indicates the circuit pack's maintenance name. For example, UDS1-BD appears for a TN464 circuit pack, and TBR1-BD appears for a TN2185 circuit pack.

Valid entries	Usage
Display-only field.	

## Communication Interface Links

This screen is display-only starting with Release 7. The fields are now administered on the Data Module screens associated with the link. There is one Interface Link screen per System. Interface Links provide a physical interface between the system and the other nodes in a DCS, ISDN, a Message Server Adjunct, a CMS, an ISDN Gateway adjunct (supports CPN/BN), or AUDIX.

INTERFACE LINKS								Page 1 of x
Link	Enable	Est Conn	Extn	Type	Destination Number	DTE DCE	Conn Mod.	Name
1:	n	n						
2:	n	n						
3:	n	n						
4:	n	n						
:								
:								
17:								

**Link** Indicates the interface link number that connects to another node in a DCS network, a Message Server, CMS, ISDN Gateway, or AUDIX. Interface links always terminate on a port in a PGATE circuit pack for G3r or on the NetPkt (or PI for X.25) circuit pack for G3si.

Valid entries	Usage
Display-only field.	

**Enable** The link is enabled on the Data Module screen.

Valid entries	Usage
<b>y</b>	<b>y</b> – link is enabled.
<b>n</b>	<b>n</b> – link is not enabled. Message flow over the link is suppressed.

**Est Conn** If the physical link is over a DS1 interface, it is possible (except for ISDN signaling links) for one switch to set up the entire connection (see Destination below). In this case, the other switch will not initiate any part of the connection between the two endpoints. Typically, when using a DS1 interface, the Enable field is **y** on both the originating and terminating switches but only one link between the two switches will have Est Conn set to **y**. The originating switch is defined as having Est Conn set to **y**.

Valid entries	Usage
<b>y</b>	The System is responsible for any part of the call setup required for the link between the System and the far-end data module. Should be <b>y</b> if the link is to be used for ISDN signaling.
<b>n</b>	The System is not responsible for any part of the call setup.

**Ext** The extension of the associated local data module for this link. This field is similar to the pre-R7 PI Ext field for the si model and the X.25 Extension field for the r model.

**Type** The type of connection — x.25, ethernet, or ppp. This field replaces the pre-R7 Protocol field. The type of connection — x.25, ethernet, or ppp.

**Destination Number** This field is similar to the pre-R7 Destination Digits field for the si model and the Destination Number field for the r model. Displays the destination of the link. It does not apply to Ethernet links.

**DTE/DCE** Applies to si-models only. It is administered on the Data Module screen — type proc-intf for the si model and type x.25 for the r-mode. If one endpoint of a link is DTE, then the other must be DCE, and vice versa. The assignments must be coordinated on a network-wide level. Endpoint Switch Links are generally DTE and Tandem links are generally DCE. If both endpoints are of the same type (that is, endpoints or tandem), then the assignment of which is DTE and which is DCE is arbitrary. Typically, when using a DS1 interface, the originating switch should be administered as **DTE** and the terminating switch as **DCE**.

---

**Conn Mod.** This field is similar to the pre-R7 Connected Data Module field. It is administered on the Data Module screen — type proc-intf for the si model and type x.25 for the r model.

**Name** Used for identification purposes only. It is administered on the Data Module screen. This field is similar to the pre-R7 Identification field.

## Other DEFINITY Screens

### Data Module - type netcon

DATA MODULE		Page 1 of 1
Data Extension: _____	Name: _____	BCC: _
Type: netcon	COS: _	Maintenance Extension: _____
Physical Channel: ___	COR: _	
Name: _____	TN: _	Maximum Bit Rate: _____
ITC: restricted		
ABBREVIATED DIALING		
List1: _____		
SPECIAL DIALING OPTION: _____		
HOT LINE DESTINATION		
Abbreviated Dialing Dial Code (From above list): _		
ASSIGNED MEMBER (Station with a data extension button for this data module)		
Ext Name		
1.		

#### Common Fields

See [Common Data Module Fields \(218\)](#) for descriptions of fields on this screen that are not listed below.

#### Physical Channel

Identifies the number of the Network Control/Packet Interface data channel (identified as a netcon data channel). This field appears only the si models.

Valid Value	Usage
1 to 8	

#### Maintenance Extension

The extension used to perform maintenance functions on the standby physical channel in a duplicated system. This is the extension specified on the dial plan. The standby remote loop around tests fail if this field is not administered.

**Maximum Bit Rate** Identifies the maximum allowable bit rate for the modem. Displays only if the Modem field is **y**.

Valid entries	Usage
300, 1200, 2400, 4800, 9600, 14400, 19200, and 28800	
default is 9600	

**Abbreviated Dialing List 1** Specifies the type of abbreviated dialing list.

Valid Value	Usage
s (system) g (group) p (personal) e (enhanced) blank	If <b>g</b> or <b>p</b> is entered, a group number or personal list number also is required. Entry in this field supports Data Hot Line. This field can be left blank.

**Note:** See *Administrator's Guide*, 555-233-502, for detailed information on abbreviated dialing.

**Special Dialing Option** Identifies the type of dialing when this data module originates calls.

Valid Value	Usage
hot-line, default, or blank.	Leave blank for regular (normal) keyboard dialing.

**Assigned Member Ext and Name** Display only. Extension and name of a previously administered user who has an associated Data Extension button and who will share the use of the module.

## Data Module - type analog-dm

This type of data module behaves identically to a 2500 set, but it accepts rotary dial pulses.

Page 1 of 1								
<b>DATA MODULE</b>								
<table style="width: 100%;"> <tr> <td style="width: 50%;">Data Extension: ____</td> <td style="width: 50%;">Name:</td> </tr> <tr> <td>    Type: analog-dm</td> <td>COS:</td> </tr> <tr> <td>    Port: ____</td> <td>COR:</td> </tr> <tr> <td>    ITC: restricted</td> <td>TN:</td> </tr> </table>	Data Extension: ____	Name:	Type: analog-dm	COS:	Port: ____	COR:	ITC: restricted	TN:
Data Extension: ____	Name:							
Type: analog-dm	COS:							
Port: ____	COR:							
ITC: restricted	TN:							
<p>ABBREVIATED DIALING</p> <p>List1: _____</p>								
<p>SPECIAL DIALING OPTION: ____</p> <p>HOT LINE DESTINATION</p> <p>    Abbreviated Dialing Dial Code (From above list): _</p> <p>ASSIGNED MEMBER (Station with a data extension button for this data module)</p> <p>    Ext Name</p> <p>    1.</p>								

### Common Fields

See [Common Data Module Fields \(218\)](#) for descriptions of fields on this screen that are not listed below.

### Abbreviated Dialing List 1

Specifies the type of abbreviated dialing list.

Valid Value	Usage
s (system)	If <b>g</b> or <b>p</b> is entered, a group number or personal list number also is required. Entry in this field supports Data Hot Line. This field can be left blank.
g (group)	
p (personal)	
e (enhanced)	
blank	

### Special Dialing Option

Identifies the type of dialing when this data module originates calls.

Valid Value	Usage
hot-line, default, or blank.	Leave blank for regular (normal) keyboard dialing.

### Assigned Member Ext and Name

Display only. Extension and name of a previously administered user who has an associated Data Extension button and who will share the use of the module.

## Extended Trunk Access Call Screening

This screen allows a set of digit strings to be identified that should not be routed via ETA. This screen can also block the routing of certain FACs or TACs. For example, if the system administrator were to notice a digit string being mistakenly dialed repeatedly that ended up being routed via ETA to a remote PBX only to have the remote PBX return intercept treatment, then that digit string would be a candidate for the entry into the ETA call screening table. Entry into this table would have the effect of return intercept treatment to the caller without first attempting to route the digits to the remote PBX for interpretation via ETA.

Page 1 of 1

## ETA CALL SCREENING TABLE

Entry

No. Call Screening Entry

0: \_\_\_\_\_

1: \_\_\_\_\_

2: \_\_\_\_\_

3: \_\_\_\_\_

4: \_\_\_\_\_

5: \_\_\_\_\_

6: \_\_\_\_\_

7: \_\_\_\_\_

8: \_\_\_\_\_

9: \_\_\_\_\_

### Call Screening Entry

Assign those digit strings (up to 10) that should be blocked for this RNX. Each string can have up to 6 digits and/or special or wildcard characters.

Valid entries	Usage
Digits 0 through 9	
x	
X	
*	
#	The # character may only be used as the first character.
blank	

## Extension Number Portability Numbering Plan

Page 1 of 1

### EXTENSION NUMBER PORTABILITY NUMBERING PLAN

| ENP Code |
|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| 0x: ___  | 1x: ___  | 2x: ___  | 3x: ___  | 4x: ___  | 5x: ___  | 6x: ___  | 7x: ___  | 8x: ___  | 9x: ___  |          |
| 00: ___  | 10: ___  | 20: ___  | 30: ___  | 40: ___  | 50: ___  | 60: ___  | 70: ___  | 80: ___  | 90: ___  |          |
| 01: ___  | 11: ___  | 21: ___  | 31: ___  | 41: ___  | 51: ___  | 61: ___  | 71: ___  | 81: ___  | 91: ___  |          |
| 02: ___  | 12: ___  | 22: ___  | 32: ___  | 42: ___  | 52: ___  | 62: ___  | 72: ___  | 82: ___  | 92: ___  |          |
| 03: ___  | 13: ___  | 23: ___  | 33: ___  | 43: ___  | 53: ___  | 63: ___  | 73: ___  | 83: ___  | 93: ___  |          |
| 04: ___  | 14: ___  | 24: ___  | 34: ___  | 44: ___  | 54: ___  | 64: ___  | 74: ___  | 84: ___  | 94: ___  |          |
| 05: ___  | 15: ___  | 25: ___  | 35: ___  | 45: ___  | 55: ___  | 65: ___  | 75: ___  | 85: ___  | 95: ___  |          |
| 06: ___  | 16: ___  | 26: ___  | 36: ___  | 46: ___  | 56: ___  | 66: ___  | 76: ___  | 86: ___  | 96: ___  |          |
| 07: ___  | 17: ___  | 27: ___  | 37: ___  | 47: ___  | 57: ___  | 67: ___  | 77: ___  | 87: ___  | 97: ___  |          |
| 08: ___  | 18: ___  | 28: ___  | 38: ___  | 48: ___  | 58: ___  | 68: ___  | 78: ___  | 88: ___  | 98: ___  |          |
| 09: ___  | 19: ___  | 29: ___  | 39: ___  | 49: ___  | 59: ___  | 69: ___  | 79: ___  | 89: ___  | 99: ___  |          |

### EPN Code

Assign a 3-digit code to translate each 4- or 5-digit UDP extension that is node number routed to a 7 digit, AAR-like number used for outpulsing a call within an ENP sub network. This field maps each leading digit of a UDP extension to an ENP Code or blank.

Valid entries	Usage
000 to 999	Enter 3-digit ENP code
blank	

## Message Waiting Indication Subscriber Number Prefixes

The information entered on this screen enables MWI messages to be routed to the subscriber's switch in a QSIG network.

MESSAGE WAITING INDICATION SUBSCRIBER NUMBER PREFIXES							
Machine ID	Inserted Digits	Routing Digits	AUDIX Mach ID	Machine ID	Inserted Digits	Routing Digits	AUDIX Mach ID
1:	_____	___	___	11:	_____	___	___
2:	_____	___	___	12:	_____	___	___
3:	_____	___	___	13:	_____	___	___
4:	_____	___	___	14:	_____	___	___
5:	_____	___	___	15:	_____	___	___
6:	_____	___	___	16:	_____	___	___
7:	_____	___	___	17:	_____	___	___
8:	_____	___	___	18:	_____	___	___
9:	_____	___	___	19:	_____	___	___
10:	_____	___	___	20:	_____	___	___

Page 1 of 1

### Inserted Digits to form Complete Number

Displays only if this machine-ID is assigned to the qsig-mwi application in the Change Communication-Interface Processor-Channels form.

Valid entries	Usage
up to 12 digits (0-9)	The entered digits are those needed in front of the Intuity AUDIX subscriber number which allows the Message Center PBX to obtain a complete number for the subscriber. This digit string has a valid entry in the AAR or ARS analysis tables enabling a route to the Remote PBX associated with a particular process channel.
blank	

**Note:** Both of the following two fields must be filled in. If either one is filled in and the other is left blank, an error displays.

### Routing Digits (e.g. AAR/ARS Access Code)

Enter the desired numbers (up to 4 digits).

Valid entries	Usage
up to 4 digits (0-9, *, #)	These digits comprise the AAR or ARS access code. Blank is not a valid entry.

### AUDIX Mach ID

This field value corresponds to the AUDIX number serving that switch as translated in the AUDIX number field of the Switch Interface Administration Screen on the AUDIX platform.

Valid entries	Usage
(1-99) blank	

# B Private Networking

---

This appendix contains two main sections: (1) a brief description of Distributed Communications System (DCS) and the features that can be used transparently on a DCS network, and (2) a description of QSIG and its features.

---

**Note:** The DCS section of this appendix was not updated for Release 7. It will be updated for the next release.

## Distributed Communications System

Distributed Communications System (DCS) allows you to configure 2 or more switches as if they were a single, large DEFINITY ECS. DCS provides attendant and voice-terminal features between these switch locations. DCS simplifies dialing procedures and allows transparent use of some of the DEFINITY ECS features. (Feature transparency means that features are available to all users on DCS regardless of the switch location.)

Configuring a DCS network is a complex process that involves 4 major steps:

- Planning your DCS network
- Connecting the physical equipment in the network
- Administering the physical layer (hardware connections)
- Administering the link layer to create a DCS

## Description of DCS

DCS network configurations can be:

- TCP/IP DCS network — A DCS network configured with 2 or more switches using TCP/IP (PPP or 10Base-T Ethernet) signaling for transporting DCS feature transparency information.
- Traditional DCS network — A DCS network configured with 2 or more switches using BX.25 signaling for transporting DCS feature transparency information.
- D-channel DCS network (private network only) — A DCS network that includes DEFINITY ECS using the ISDN-PRI D-channel DCS transparency information (D-channel signaling). ISDN-PRI facilities with this type of network use only private-line facilities.
- D-channel DCS network (public network access/egress) — A DCS network that includes DEFINITY ECS using D-channel signaling. At least one of these ISDN-PRI facilities uses a public network ISDN-PRI.

- Integrated DCS network (private network only) — A DCS network that contains a variety of switches using TCP/IP, BX.25, or D-channel signaling methods. At least one DEFINITY ECS serves as an ISDN-PRI DCS Gateway node. This node can interwork DCS transparency information between the three signaling protocols.

An ISDN-PRI DCS Gateway node provides backward compatibility to existing traditional DCS networks.

- Integrated DCS network (public network access) — The same as D-channel DCS Network (Private Network Only), but the D-channel of at least one ISDN- PRI facility uses a public network ISDN-PRI.

## DCS Features

Once you have connected and set up your DCS network, you can provide the following features across the network:

### Alphanumeric Display for Terminals

This feature allows calling-name display, called-name display, and miscellaneous identifiers to be transferred from a terminal on one node to a terminal on another node.

### Attendant Control of Trunk Group Access

DCS Attendant Control of Trunk Group Access allows an attendant at any node in the DCS to control an outgoing trunk group at an adjacent node in the cluster. The attendant uses a remote-tgs feature button on the console for this purpose.

To use this feature, you must have a DCS Trunk Group between the local and remote switches, and the trunks in that trunk group cannot insert digits on incoming calls. If you need digit insertion on these trunks, it should be added on the outgoing trunk based on the dialed string.

**Note:** DCS Attendant Control of Trunk Group Access is not available if you are using D-channel DCS.

### Attendant Direct Trunk Group Selection

DCS Attendant Direct Trunk Group Selection allows attendants at one node to have direct access to an idle outgoing trunk at a different node in the DCS. This feature functions the same as regular Direct Trunk Group Selection. However, the attendant uses a remote-tgs feature button on the console for this purpose.

**Note:** DCS Attendant Direct Trunk Group Selection is not available if you are using D-channel DCS.

To use this feature, you must have a DCS Trunk Group between the local and remote switches, and the trunks in that trunk group cannot insert digits on incoming calls. If you need digit insertion on these trunks, it should be added on the outgoing trunk based on the dialed digits.

You can assign a Trunk Hundreds Select button to access a trunk group at the local node or a trunk group at a remote node. A Trunk Group Select button

assigned to access a remote node is referred to as a remote Trunk Hundreds Select button. Pressing a remote Trunk Group Select button is the same as dialing the tie trunk group access code for the remote node and the trunk access code of the selected trunk.

### Attendant Display

The DCS attendant console displays calling-party ID and called-party ID information for calls to and from remote switches in the network.

### Automatic Callback

DCS Automatic Callback allows a user at one node to make an automatic callback call to a user at another node in the DCS.

A DCS Automatic Callback call can be initiated from a terminal at one node to a terminal at another node in the same way as if at a local node under the following conditions.

- ~ If the called party is at a System 85, Generic 2, or Enhanced DIMENSION PBX node, the callback call can only be activated if the called node is returning busy tone or special audible ringback.
- ~ If the called party is at a Generic 3, Generic 1 or System 75 node, the callback call can be activated if the called node is returning busy tone, Call Waiting ringback tone, or ringback tone.
- ~ The calling party must disconnect within 6 seconds after hearing the confirmation tone for Automatic Callback activation.

**Note:** If the calling party is on a System 85, Generic 2, or Enhanced DIMENSION PBX node and is unable to receive the callback call (for example, a busy single-line voice terminal without Call Waiting), Automatic Callback is reactivated by the calling party's node. If the calling party is on a Generic 3, Generic 1, or System 75 node and is unable to receive the callback call, the callback call is canceled.

### Automatic Circuit Assurance

DCS Automatic Circuit Assurance (ACA) allows a voice-terminal user or attendant at a node to activate and deactivate ACA referral calls for the entire DCS network. This transparency allows the referral calls to originate at a node other than the node that detects the problem.

If referral calls are generated at a node for one or more remote nodes, the remote nodes are notified when ACA referral is activated or deactivated.

### Busy Verification of Terminals and Trunks

DCS Busy Verification of Terminals and Trunks allows attendants and multiappearance voice-terminal users to make test calls to voice terminals and trunk groups that are located at other nodes in the DCS.

To use this feature, you must have a DCS Trunk Group between the local and remote switches, and the trunks in that trunk group cannot insert digits on incoming calls. If you need digit insertion on these trunks, it should be added on the outgoing trunk based on the dialed digits.


Multiappearance voice terminal users can busy-verify an adjunct at a remote location by pressing Verify and dialing the TAC of the tie trunk group to the remote node. Then they must press Verify a second time and dial the desired TAC and the trunk group member number to be verified. Verification of the trunk then continues as if the trunk is on the same node.

### Call Coverage

DCS Call Coverage provides DCS messaging required for calls to be covered on remote systems when there is a DCS signaling link (BX.25, PPP, or ISDN-PRI) for the trunk groups. Calls to an extension on one system are covered by extensions on remote systems that are administered as coverage points.

Figure 2 shows an example of DCS Call Coverage.

Figure 2. DCS Call Coverage

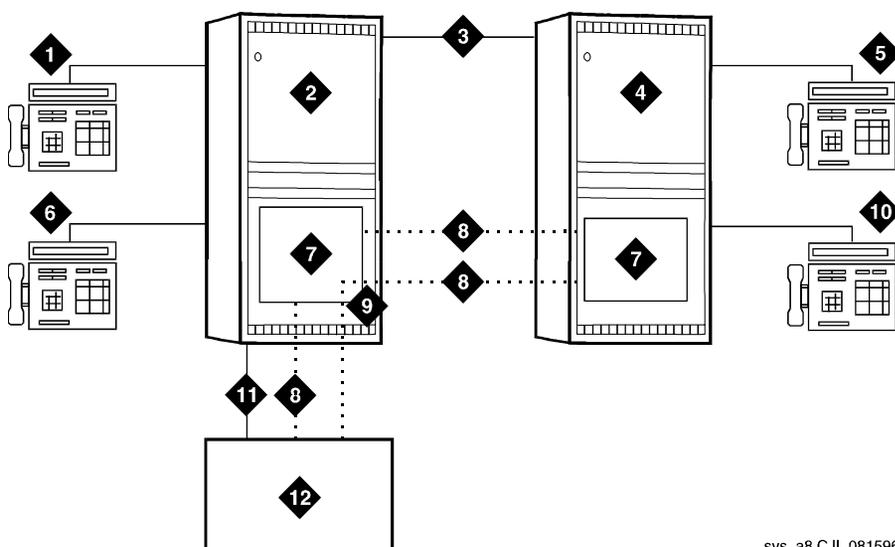

sys\_a8 C.JL 081596

- |                            |  |
|----------------------------|--|
| 1. Station A               | 7. PGATE or PI Board                   |
| 2. System A - DEFINITY ECS | 8. X.25 or ISDN PRI DCS Signaling Link |
| 3. DCS Tie Trunk Groups    | 9. Hop or ISDN TSC Gateway             |
| 4. System B - DEFINITY ECS | 10. Station D                          |
| 5. Station C               | 11. AUDIX Voice Lines                  |
| 6. Station B               | 12. AUDIX - x34000                     |

In Figure 2, calls to Station A can be covered first by Station B, then by Station C or D, and finally by the AUDIX on system A. Alternatively, calls could be covered by Station C, then Station B, then Station D, and so on.

If the called party answers after the call goes to coverage and the coverage point has answered, then the called party, calling party, and coverage point are all conferenced together.

If the called party answers and the coverage point has not answered, the call to the coverage point drops and the called party connects to the calling party.

## Exceptions to DCS Call Coverage

DCS Call Coverage is similar to Call Coverage, with the following exceptions:

- ~ Coverage Answer Groups across nodes are not supported.
- ~ Under the following error conditions, a call follows the coverage point's coverage path.

Error Condition	Action
DCS link not up. or DCS trunk is not available. or DCS Call Coverage feature is not activated on the remote system.	The call is routed to the remote coverage point. If the call is answered, it is treated as Call Coverage Off Premises (also called Remote Call Coverage). If the call is redirected at the remote coverage point before the DCS SRI expires, the remote point's path is followed. If the call is not answered within the DCS SRI time-out period, the next coverage point is tried with DCS Call Coverage from the local system.
All trunks to the remote system, DCS or otherwise, are busy	The next coverage point is tried with DCS Call Coverage from the local system.

- ~ When the DCS link is down, call consult operates differently. If Station A calls Station B but the call covers to Station C, then Station C consults back to Station B and Station B receives the consult call on the next call appearance.
- ~ DCS Call Coverage does not support Coverage Call Back from a remote node.

Additionally, in some DCS Call Coverage situations, call coverage operation may deviate, including:

- ~ A call to the principal redirects to the remote coverage point, which is unavailable. The coverage point is considered unavailable when:
  - The coverage point is not a valid extension, QDN, or VDN.
  - The coverage point is busy with no hunting, forwarded, or has send all calls activated, or activates send all calls after ringing.
  - The coverage point has no staffed agents or an invalid vector.

When the coverage point is unavailable, the local system determines the availability status from a time-out or from a message from the remote system. When the local system discovers that the coverage point is unavailable, it tries the next coverage point. If the last coverage point is unavailable, the previous coverage point rings until it is answered or until the caller hangs up. If only one coverage point exists in the path and it is unavailable, the principal's station rings until it is answered or until the caller hangs up.

- ~ A call to the principal is forwarded and the forwarded-to extension is not available. In this case, the first coverage point in the principal's path is tried. Note that the coverage does not follow the forwarded-to extension's coverage path.

- ~ A call to the principal redirects to the remote coverage point, which answers. Subsequently, the principal goes off hook. In this case, the local system bridges the principal onto the call between the calling party and coverage point creating a conference among the three. The principal receives the call on the same call appearance as the original call.
- ~ A call to the principal redirects to the remote coverage point. While the remote coverage point is ringing, the principal answers the call. In this case the call is not cut through to the coverage point. Instead, ringing and ringback is removed from the coverage point and the call is cut through to the principal.

### Call Forwarding

DCS Call Forwarding allows all calls to an extension to be forwarded to a selected extension in the DCS network or to an external (off-premises) number.

If the Call Forwarding and DCS Call Forwarding are both active, and if a call is forwarded between extensions on the same node, the Call Forwarding coverage path is used. If the nodes are different, the DCS Call Forwarding coverage path is used.

Voice-terminal users in the DCS can activate/deactivate this feature with a dial access code or with a Call Forwarding button.

**Note:** Calls can be forwarded to a Vector Directory Number (VDN) anywhere in the DCS network. An attendant cannot activate/deactivate Call Forwarding for a VDN.

### Call Waiting

DCS Call Waiting allows calls from one node to busy single-line voice terminals at another node to wait until the called party is available to accept the call. With DCS Call Waiting, a single-line voice terminal user, by knowing a call is waiting, can quickly process calls from locations within the DCS. DCS Call Waiting functions the same as normal Call Waiting.

DCS Call Waiting includes the following features:

- ~ Attendant Call Waiting
- ~ Call Waiting — Termination
- ~ Priority Calling

DCS priority calling from the attendant station is *not* available.

### Distinctive Ringing

DCS Distinctive Ringing activates the called-terminal alerting or ringing device to indicate the type of incoming call to the user before they answer it. Distinctive Alerting functions in a DCS environment the same as it does within a single system.

By default, internal calls are identified by a 1-burst ringing pattern, external calls by a 2-burst ringing pattern, and priority calls by a 3-burst ringing pattern. However, you can administer these patterns.

### Leave Word Calling

LWC transparency in a DCS configuration allows messages from a DEFINITY switch to another node, depending on the storage capability of the remote node.

### Multiappearance Conference/ Transfer

DCS Multiappearance Conference/Transfer provides transparency for transferring calls and conferencing calls within a DCS network. A user in the DCS can initiate conference calls among or transfer calls originated from extensions in the DCS network to another extension within the DCS by dialing the UDP extension. (For transferred calls, the destination need not be within the DCS.)

In a DCS, if a party in a conference hangs up or completes a transfer leaving only outgoing trunks on the call, the system attempts to preserve the connection if any of the remaining parties on the call is a DCS tie trunk.

### Trunk Group Busy/Warning Indication

DCS Trunk Group Busy/Warning Indication provides attendants with a visual indication that the number of busy trunks in a remote group reached an administered level. A visual indication is also provided when all trunks in a trunk group are busy.

**Note:** DCS Trunk Group Busy/Warning Indication is not available if you are using DCS over ISDN-PRI.

To use this feature, you must have a DCS Trunk Group between the local and remote switches, and the trunks in that trunk group cannot insert digits on incoming calls. If you need digit insertion on these trunks, it should be added on the outgoing trunk based on the dialed digits.

Except for System 75, System 85, and DEFINITY G2 switches, you can administer DCS Trunk Group Busy/Warning Indication only for remote trunk groups that are directly connected to the local switch. Trunk group access codes for these trunk groups must be 3 digits or less and cannot include trunk members 100 through 999.

### DCS with Rerouting

DCS with Rerouting allows a call's connection between two DEFINITY systems to be replaced by a new connection. All of the trunks used in the original path must be DCS and the new path utilizes only DCS trunks. DCS with Rerouting provides the following capabilities:

- ~ Attempts to obtain a better (generally less expensive) connection.
- ~ May replace the current path of a call with a route that is better in terms of Automatic Alternate Routing/Automatic Route Selection (AAR/ARS) routing preferences administered on a DEFINITY ECS.
- ~ Frees up resources being used unnecessarily.

DCS with Rerouting primarily provides you with the ability to attempt to be more effective with the usage of Trunk groups administered for Supplementary Services Protocol Option E (SSE) during the existence of an active call. This

means using a more preferred route (in terms of UDP/AAR/ARS routing preferences administered on the PBX) between the PBXs involved.

Your users invoke DCS with Rerouting by Call Transfer, Transfer out of Audix, and dial 0 out of Audix. DCS with Rerouting must be enabled on a switch-wide basis and the trunk groups involved must be administered as SSE.

#### Interactions

- When interworking with non-ISDN trunks or non-Supplementary Service Option E ISDN trunks, DEFINITY acts as a gateway in the following sense:
  - ~ When a call is tandeming through a DEFINITY system from a non-ISDN trunk to an SSE trunk or from a non-Option E to an SSE trunk, the system acts as an incoming gateway.
  - ~ When a call is tandeming through a DEFINITY system from an SSE trunk to a non-ISDN trunk or from an SSE trunk to a non-Option E trunk, the system acts as an outgoing gateway.

As an example, when calls come in from the public network to the DCS network and then are transferred to another extension within the private network, DEFINITY functions as an incoming gateway and rerouting occurs.
- If a conference call is transferred, rerouting will not occur.

## Italian DCS Protocol

Italian DCS Protocol (also known as Enhanced DCS) adds features to the existing DCS capabilities. EDCS is used primarily in Italy. EDCS adds the following features:

- ~ Exchanging information to provide class of restriction (COR) checking between switches in the EDCS network
- ~ Providing call-progress information for the attendant
- ~ Allowing attendant intrusion between a main and a satellite
- ~ Allowing a main PBX to provide DID/CO intercept treatment rather than the satellite PBX.

**Note:** EDCS is not compatible with DCS Over/Under ISDN-PRI. With EDCS, all nodes must use EDCS. If used with ISDN-PRI, configure the switch as a DCS node. Also, DCS-ISDN display enhancements are not currently available in EDCS.

### How to administer Enhanced DCS

**Table 1. Required forms**

Form	Field
Feature-Related System Parameters	<ul style="list-style-type: none"> <li>• Enhanced DCS Enabled?</li> <li>• Apply Intercept Locally?</li> <li>• Enforce PNT-to-PNT Restrictions?</li> </ul>

## ISDN/X.25 gateway

DEFINITY ECS can serve as an interface between PBXs that support the D-channel signaling feature and those that do not support this feature. The switch providing this interface is known as the ISDN-DCS Gateway node and provides backward compatibility to existing traditional DCS networks.

It maintains a mapping between processor channels and Administered NCA-TSCs. When a DCS D-channel message arrives on an Administered NCA-TSC acting as a gateway, it is converted to a traditional DCS message and sent out through the processor channel that has been administered to map to this Administered NCA-TSC. Likewise, when a traditional DCS message arrives at the gateway node on a processor channel acting as a gateway, it is converted to a DCS D-channel message and sent out through the Administered NCA-TSC that has been associated with this processor channel on the ISDN Gateway Channel form.

In summary, a gateway is required whenever a transition is being made from BX.25 signaling to D-channel signaling. When the transition takes place at a switch that sits between that part of the network that supports D-channel DCS and that part that does not, that switch is an ISDN-DCS Gateway. A DCS network consisting entirely of switches that support D-channel DCS never requires an ISDN-DCS Gateway because none of the switches require “translation” to/from BX.25.

## DCS Over ISDN-PRI D-channel

DCS Over ISDN-PRI D-channel (DCS+) enhances DCS by allowing access to the public network for DCS connectivity between DCS switch nodes. With this feature, DCS features are no longer restricted to private facilities.

The ISDN-PRI B-channel is used for voice communications, and the ISDN-PRI D-channel transports DCS control information. DCS Over ISDN-PRI utilizes the Message-Associated User-to-User Information (MA-UUI) and Temporary Signaling Connections (TSC) to transport certain DCS control information. MA-UUI allows additional user-specific information to be transported along with certain ISDN call-control messages.

**Note:** Use this feature only over DS1/E1 or T1 circuit packs that are administered to Country Protocol Option 1, Protocol Version A (even in a private network environment) independent of what country the system is in.

## How to administer DCS Over ISDN-PRI D- channel

**Table 2. Required forms**

Form	Field
Signaling Group	<ul style="list-style-type: none"> <li>• Max number of NCA TSC</li> <li>• Max number of CA TSC</li> <li>• Trunk Group for NCA TSC</li> <li>• Administered NCA TSC Assignment fields</li> <li>• Service/Feature</li> <li>• Inactivity Time-out (min)</li> </ul>
ISDN TSC Gateway Channel Assignments	<ul style="list-style-type: none"> <li>• All</li> </ul>
Trunk Group (ISDN-PRI)	<ul style="list-style-type: none"> <li>• Used for DCS Node Number DCS Signaling</li> <li>• NCA TSC Trunk Member</li> </ul>
Route Pattern	<ul style="list-style-type: none"> <li>• TSC</li> <li>• CA TSC Request</li> </ul>
Processor Channel Assignment	<ul style="list-style-type: none"> <li>• Application</li> </ul>
Feature-Related System Parameters	<ul style="list-style-type: none"> <li>• Record TSCs for CDR</li> </ul>

**Note:** There are several differences in administration between switches. For example, PRI is translated a little differently in G3r when traditional DCS and this feature are used in combination. On systems with AUDIX in a DCS environment, an additional column has been added to the Signaling Group form so you can specify which AUDIX and switch to use. When traditional DCS and DCS over ISDN are used in combination, translations are also different.

### Detailed description

A TSC provides a temporary signaling path through ISDN switches for exchanging supplementary service information on ISDN-PRI D-channels. There is no B-channel related to the connection; no data or voice transmissions take place.

There are two types of temporary signaling connections:

- Call Associated (CA-TSC)
- Non-Call Associated (NCA-TSC)

### CA-TSC

A CA-TSC refers to a service for exchanging USER INFORMATION messages associated with an ISDN B-channel connection by the call reference value of the call control data packets. On DEFINITY ECS, this type of TSC is used only for DCS

features on ISDN-PRI Signaling Groups administered with Supplementary Service Protocol *a*.

### NCA-TSC

An NCA-TSC is a connection not related with any ISDN B-channel connections. DECINITY ECS supports two types of NCA-TSC that conform to two different protocol standards:

- The QSIG type of NCA-TSC is used for certain QSIG features such as Call Completion (Automatic Call Back). This type of NCA-TSC is referred to in the QSIG protocol standards as a Call-Independent Signaling Connection (CISC). Only ISDN-PRI Signaling Groups administered with Supplementary Service Protocol *b* support QSIG NCA-TSCs. For further information, see [NCA-TSC \(page 324\)](#).
- The AT&T type of NCA-TSC is used for the DCS Over ISDN-PRI D-channel and DCS AUDIX applications. Only ISDN-PRI Signaling Groups administered with Supplementary Service Protocol *a* support AT&T NCA-TSCs.

An AT&T NCA-TSC is an administered virtual connection established for exchanging USER INFORMATION messages on the ISDN D-channel. Once an AT&T NCA-TSC has been administered and enabled, it is active for an extended period of time. There are two types of administered NCA-TSCs depending on their setup mechanism:

- ~ Permanent (can be established by Near-end or Far-end)
- ~ As-needed

Once enabled, a permanent NCA-TSC remains established while the system is running. If the permanent NCA-TSC drops for any reason, the system attempts to reestablish the connection. An as-needed administered NCA-TSC is established based on user request and the availability of TSC facilities. The connection drops after an administered period of inactivity.

The system can transport DCS or DCS AUDIX messages over an ISDN-PRI D-channel and over BX.25 data links when functioning as a gateway between a switch equipped with DCS Over ISDN-PRI D-channel and a switch equipped with traditional DCS using BX.25 data links. In this situation, the messages travel from the gateway through the NCA-TSCs or CA-TSCs to TSC-capable switches and from the gateway to switches that support only traditional DCS via a BX.25 logical channel.

At least one switch must be configured as an ISDN DCS Gateway node in a DCS network that consists of switches that support DCS Over ISDN-PRI D-channel and PBXs that do not support the feature. Switches directly connected to AUDIX serve as Gateway nodes.

## DCS feature considerations

### Attendant

- If you call an attendant on another switch in the DCS network, your display shows the attendant's name, but does not show the attendant's extension, instead you see a zero where the extension should be.

### Alphanumeric Display considerations

- On outgoing DCS calls, display of the called name may be delayed for a few seconds until the required information arrives from the distant node. The called name display only works between DEFINITY ECS, DEFINITY Generic 1 and Generic 3 Systems, and System 75s.

### Attendant Control of Trunk Group Access considerations

- This feature is not available for trunk groups with 4-digit trunk access codes or for trunk members 100 through 999.
- If the remote node (where the trunk group to be controlled resides) is a System 75, Generic 1, or Generic 3, it is not necessary for that node to have an attendant console with corresponding three-lamp Trunk Hundreds Select button. However, if the remote node is a System 85, Generic 2.1, or Enhanced DIMENSION PBX, control of the trunk group is not allowed unless an attendant at that node has a corresponding three-lamp Trunk Group Select button.
- The attendant must use the Remote Trunk Hundreds Select button to directly access the controlled remote trunk group. If an attendant controls a remote trunk group, and that attendant dials the trunk access codes of the DCS tie trunk and the controlled remote trunk group, the call is routed to the attendant at the node where the trunk group resides.
- If Attendant Control of Trunk Group Access is activated, and no attendant is assigned, or the attendant is later removed, calls to a controlled trunk group route to the attendant queue.

### Attendant Direct Trunk Group Selection considerations

- This feature is not available for trunk groups with 4-digit trunk access codes or for trunk members 100 through 999.

### Attendant Display considerations

- CORs for a DEFINITY switch may not correspond to those used by an Enhanced DIMENSION PBX, System 85, or DEFINITY system Generic 2.1. Therefore, if the DCS network contains nodes other than Generic 1 or Generic 3, the display CORs may be misinterpreted. If it is important that certain CORs between various systems correspond with each other, those CORs should be administered accordingly.
- On outgoing calls, the display of called party information may be delayed a few seconds until the required information arrives from the remote node. The called party information is displayed only if both nodes are Generic 1 or System 75.
- DCS tie trunks between nodes must be administered with the Outgoing Display enabled. This enables the called party's name to be displayed at the calling attendant's display.

### Automatic Callback considerations

- An Automatic Callback request is canceled automatically if the called party does not become available within 40 minutes, or if the calling party does not hang up within six seconds after activating Automatic Callback.

**DCS Over ISDN-PRI D-channel considerations**

- The gateway node serves as the terminating node to the D-channel DCS network as well as the terminating node to the traditional DCS network.

A PBX serving as an ISDN DCS Gateway node introduces some interesting situations when administering processor channels in an associated traditional DCS PBX. In a traditional DCS network, (BX.25 processor channel links)

**Remote Port** in the “Processor Channel Assignments” form refers to the processor channel of the destination PBX. In an Integrated DCS network, **Remote Proc Chan** in the “Processor Channel Assignments” form refers to the processor channel of the Gateway PBX (if the destination PBX is an ISDN DCS PBX), *not* the destination PBX.

On the contrary, **Machine-ID** in the “Processor Channel Assignments” form refers to the destination PBX, either an ISDN DCS PBX or a traditional DCS PBX. The Gateway PBX number must not be used in this field if the destination PBX is an ISDN DCS PBX.

**Enhanced DCS considerations**

- If the DCS link fails, the administrator can choose to allow calls to continue without class of restriction checking or to block all DCS calls to inward-restricted stations.

**LWC considerations**

- LWC cannot be successfully activated toward any system that is not capable of storing the messages, either internally or in an associated adjunct.
- Messages from one node, through an intermediate node, to a remote node do not require storage capability at the intermediate node.
- LWC transparency is supported for all DCS configurations except for cases when either the activating node or the remote node is either an ENHANCED DIMENSION PBX or a System 85 R2V1.
- Retrieval of LWC messages is permitted only from a terminal at the node where the messages are stored.
- DCS LWC cannot be activated from an attendant console.

**Trunk Group Busy/Warning Indication considerations**

- Trunk Group Busy and Trunk Group Warning Indication is particularly useful with the Attendant Control of Trunk Group Access feature. The indicators alert the attendant when control of access to local and remote trunk groups is necessary.

**DCS Interactions****Alphanumeric Display**

The following features allow transparency with respect to Calling or Called Name Display and miscellaneous ID.

- Call Coverage
  - At the calling terminal, the miscellaneous id “cover” is not displayed.
- Call Forwarding

When a system user calls a party on a different node in the DCS and the call is forwarded, the miscellaneous ID “forward” is not displayed. At the covering

(forwarded-to) user's terminal, only the calling party's name is shown; the called party's name is not displayed.

- Call Park

When a DCS call between a local system user and a user on another node is parked by the remote user, the miscellaneous ID "park" is not displayed at the local terminal.

- Call Pickup

When a DCS call from a system user to another node is answered by way of Call Pickup, the miscellaneous ID "cover" is not displayed at the caller's terminal.

- Call Waiting

When a DCS call from a system user to another node is waiting at the called terminal, the miscellaneous ID "wait" is not displayed at the caller's terminal.

- CAS

When a user dials the extension for CAS, a RLT is seized or the caller is queued for an RLT. The caller's terminal displays the trunk group identifier, such as OPERATOR.

- ISDN-PRI

If both DCS and ISDN-PRI features are provided with a system, the ISDN-PRI display information displays in DCS format.

### DCS Attendant Control of Trunk Group Access

- DCS Attendant Display

When a user attempts to access a controlled trunk group and is routed to the local attendant, the display shows the reason the call was redirected. If the call is routed via CAS or the Inter-PBX Attendant Calls feature, the display does not show the reason the call was redirected.

- UDP

DCS tie trunks should not be attendant controlled. This would result in all UDP calls on the controlled tie trunk being routed to the controlling attendant instead of to the desired destination.

### Attendant Display

- When both ISDN and DCS display information, or only DCS display information, is received, the switch displays the DCS display information in the DCS format. If ISDN display information is received, and no DCS display information is received, then the ISDN display information displays in the ISDN formats.

### Automatic Callback

- Attendant Control of Trunk Group Access and DCS Attendant Control of Trunk Group Access

Automatic Callback cannot be activated if the call uses a controlled trunk group.

### Busy Verification

- If the Trunk Identification by Attendant feature is used during busy verification of a trunk (Trunk ID button is pressed), the trunk access code and trunk group member number of the DCS tie trunk being used is displayed.

- DCS Busy Verification of Terminals and Trunks transparency is lost if the routing pattern is administered to not delete the RNX and the AAR prefix is inserted on the terminating switch trunk group. The voice terminal display at the terminating switch displays only **a=station name. Extension** is left blank.

## Call Coverage

DCS Call Coverage has the same interactions as Call Coverage plus the following additional interactions.

- Call Coverage Off Premises

If the coverage point is a non-UDP number in the remote call coverage table, Call Coverage Off Premises is applied to the call rather than DCS Call Coverage, even if a DCS link exists to the remote system.

- Coverage Answer Groups

DCS Call Coverage to Coverage Answer Groups on remote systems are not supported by DCS Call Coverage. Coverage answer groups cannot be administered on a system other than the principal's system.

- Coverage Call Back

DCS Call Coverage does not support Coverage Call Back from a remote node.

- Displays

The displays on the DCS Call Coverage point's terminal may be different than those associated with the Call Coverage feature in the following situations:

- ~ When the call from the calling party to the principal or the redirected call to the coverage point travel over ISDN-PRI trunk groups.
- ~ When the calling party is on a System 85 or Generic 2.
- ~ When the DCS name message is not received by the remote (coverage point's) system.

- Go to Cover

Go to Cover is not supported over DCS and therefore is not supported with DCS Call Coverage.

- Leave Word Calling Back to Principal

With DCS Call Coverage, a covering user on a different node cannot press their LWC button to leave a message for the principal to call the covering user.

- Queuing

DCS Call Coverage interacts with queuing in the following way. If a call is queued to a coverage point, such as a queue to a hunt group or an ACD split, and the queue is not full, the call remains in the queue without subsequent redirection until answered or until the caller hangs up.

## Call Forwarding

- If the forwarding extension and the designated extension are at different nodes, and the designated extension's coverage criteria are met on a forwarded call, the call is redirected to a point in the designated extension's coverage path.
- If the forwarding extension and the designated extension are at different nodes, LWC and Coverage Callback cannot be activated at the designated extension for a forwarded call.

- There is a 30-second interval during which calls forwarded from the DEFINITY switch to another DCS node is denied. This prevents forwarded incoming trunk calls from being forwarded ad infinitum between two extensions.

### Call Waiting

- DCS Call Waiting is denied when the following features are activated at the single-line voice terminal:
  - ~ Automatic Callback (to or from the voice terminal)
  - ~ Data Privacy
  - ~ Data Restriction
- On incoming trunk calls to the attendant extended over DCS trunks, Attendant Call Waiting interacts with the EDCS feature.

### DCS Over ISDN-PRI D-channel

- ASAI
 

For incoming calls on DCS over ISDN-PRI, ASAI applications receive the ISDN-PRI Calling Party Information, not the DCS Calling Party Information.
- Attendant DXS with Busy Lamp Field
 

An attempt by the attendant to directly select an extension that has been previously administered as belonging to a administered NCA-TSC results in intercept tone being received.
- CDR
 

CDR records both the status and the utilization of TSCs. Both CA-TSCs and NCA-TSCs can be recorded. For more information, consult the CDR description in this manual or the CDR manual.
- D-channel Backup
 

In the event of a D-channel switchover (primary to secondary or secondary back to primary) in a private network, administered NCA-TSCs that were active are assumed to have remained active. Any unacknowledged user-user service requests are assumed to be rejected, and administered NCA-TSCs which were in the process of being established at the time of the switchover are dropped when the switchover occurs. Those administered NCA-TSCs that were dropped are reattempted again.

If a D-channel switchover occurs on a D-channel going to the public network then all TSCs are dropped. A maintenance-provided “heartbeat” message periodically is sent over each permanent administered NCA-TSC to ensure that such a situation is detected and recovered from.
- Distributed Communications System AUDIX (DCS AUDIX)
 

The DCS over ISDN-PRI D-channel feature can be used to support DCS AUDIX. (The connection between G3si and AUDIX should be BX.25.)
- GRS
 

GRS selects TSC compatible facilities when routing NCA-TSCs. In other words, a NCA-TSC request can only select a routing preference that supports TSCs.

In a tandem node, GRS first selects facilities that support TSCs if the call falls into any one of the following two conditions:

- ~ It requests a CA-TSC explicitly
- ~ It contains a DCS information element in the SETUP message

Once a trunk group with available members is selected, the call proceeds even if all the TSCs belonging to the associated signaling group are active. In other words, the completion of a call is given priority over DCS transparency.

- SDN

The DCS over ISDN-PRI D-channel feature allows the system to access public networks such as SDN. SDN supports all DCS features except for the following:

- ~ DCS Attendant Control of Trunk Group Access
- ~ DCS Attendant Direct Trunk Group Selection
- ~ DCS Busy Verification of Terminals and Trunks

- Voice Terminals

An attempt to dial an extension that has been previously administered as belonging to an administered NCA-TSC results in intercept tone being received.

### Distinctive Ringing

- Distinctive Ringing

Distinctive Ringing treats a call from another switch in a DCS arrangement as external; DCS Distinctive Ringing treats such calls as internal. If both features are administered, DCS Distinctive Ringing takes precedence. If EDCS is activated, DID treatment may be different. See [Example DCS configurations \(page 288\)](#).

### Enhanced DCS

- Class of Restriction

When a call goes to coverage, it is the called party's (not the covering party's) restrictions that are used.

### LWC

- DCS Multi-appearance Conference/Transfer

Activation of LWC is denied after a DCS call has been conferenced or transferred.

### Multiappearance Conference/Transfer

- Voice Terminal Display

No display transparency is provided for DCS Multi-Appearance Conference/Transfer.

- EDCS

On calls to or from Public Network Trunks, calling/called party restrictions are checked when EDCS is active.

### Trunk Group Busy/Warning Indication

- Loudspeaker Paging Access

If Trunk Hundreds Select buttons are assigned for Loudspeaker Paging Access zones, Trunk Group Busy Indicators provide a visual indication of the busy or idle status of the zones at the remote location as well as at the local node.

## Example DCS configurations

The following two examples provide details for setting up two basic DCS networks. The first is a two-node network and the second is a three-node network. These examples use BX.25 and D-Channel signaling connections. For examples of TCP/IP signaling for DCS, see Chapters 2 and 3 in this book.


### 2-Node private network with AUDIX

Figure 3 shows a 2-node DCS/AUDIX D-channel network. In this configuration, DCS feature transparency is achieved exclusively through the exchange of user-to-user information on the D-channel using one of the three methods discussed earlier — MA-UUI, CA-TSCs or NCA-TSCs. Although NCA-TSCs are nothing more than virtual connections on the D-channel, they are shown as independent entities in the diagram for the purposes of clarity. Administered TSC 2/1 (that is, the first Administered NCA-TSC of signaling group 2) of Switch A is connected to TSC 4/1 of Switch B. This virtual connection is used in the exchange of user-to-user information for DCS features not associated with any current B-channel connection.

Notice that for AUDIX, a BX.25 data link is no longer required between the host switch and the remote switch(es). AUDIX messages between the AUDIX and the remote switch will use the AUDIX Gateway functionality of the host switch and will be transported to the remote switch via an NCA-TSC. Specifically, AUDIX messages destined for Switch B will arrive at Switch A on Link 1, Channel 2 (processor channel 57), be converted to ISDN-PRI Q.931 format and sent out via Administered NCA-TSC 2/2.

This is accomplished by administering processor channel 57 as a gateway and mapping it on the gateway form to Administered NCA-TSC 2 of signaling group 2 that is also administered as a gateway.

**Figure 3. 2-Node private network**

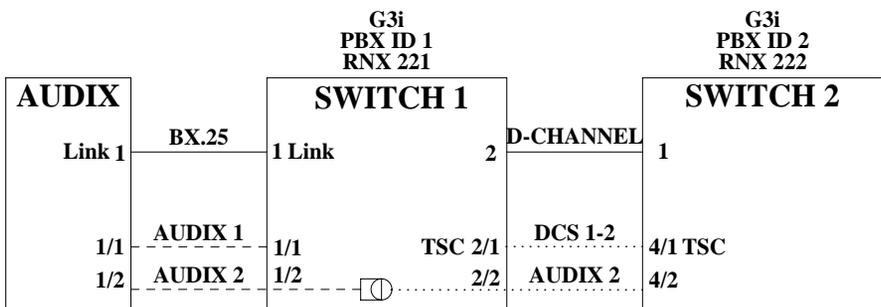

The following tables show you how you would complete each of the necessary forms.

**AUDIX administration**

- AUDIX Translations form

Switch Number	AUDIX Port	Switch Port*	Logical Channel	Data Link
1	1	59	1	1
2	2	57	2	1

\* Switch Port refers to the processor channel that is used for AUDIX in the PBX.

**Administration for switch 1**

- Dial Plan form

Start Dig.	Len	Usage
4	4	ext
5	4	ext

- Uniform Dial Plan form

Ext Code	Type	Location Code
5xxx	UDPcode	222

- AAR Digit Conversion form

Matching Pattern	Min	Max	Del	Replacement String	Net	Conv
221	7	7	3	-	ext	n

- AAR Analysis Table

Dialed String	Min	Max	Rte Pat	Call Type	Node Num
222	7	7	2	aar	2

- Signaling Group form (signaling group 2)

TSC	Local	Enabled	Establish	Dest.	Far-end	Appl.
Index	Ext.			Ext.	PBX-ID	
1	4900	y	permanent	5900	2	dcs
2	4901	y	permanent	5901	-	gateway

- Trunk Group form

Group #	Grp Type	Used for DCS?	DCS Sig. Method	PBX ID
2	isdn-pri	y	d-chan	2

- Routing Pattern form

Routing Pattern #	Trunk Group #	FRL	Del	TSC	CA-TSC Request
2	2	0	3	y	at-setup

- Gateway Channel form

Signaling Group	TSC Index	Processor Channel	Application
2	2	57	audix

- Processor Channel form

Proc Channel	Application	Inter. Link	Channel	Remote Proc. Channel	PBX ID
57	gateway	1	2	2	-
59	audix	1	1	1	1

#### Administration for switch 2

- Dial Plan form

Start Dig.	Len	Usage
4	4	ext
5	4	ext

- Uniform Dial Plan form

Ext Code	Type	Location Code
4xxx	UDPcode	221

- AAR Digit Conversion form

Matching Pattern	Min	Max	Del	Replacement String	Net	Conv
222	7	7	3	-	ext	n

- AAR Analysis Table

Dialed String	Min	Max	Rte Pat	Call Type	Node Num
221	7	7	1	aar	1

- Signaling Group form (signaling group 4)

TSC Index	Local Ext.	Enabled	Establish	Dest.	Far-endExt.	Appl PBX-ID
1	5900	y	permanent	4900	1	dcs
2	5901	y	permanent	4901	-	audix

- Trunk Group form

Group #	Grp Type	Used for DCS?	DCS Sig. Method	PBX ID
1	isdn-pri	y	d-chan	1


- Routing Pattern form

Routing Pattern #	Trunk Group #	FRL	Del	TSC	CA-TSC Request
1	1	0	3	y	at-setup

### 3-Node public/private network with AUDIX

The D-channel signaling feature expands the domain of DCS networks by supporting configurations that include public network ISDN facilities utilizing network services including Software Defined Network (SDN). By eliminating the need for dedicated private line facilities, this feature allows geographically dispersed DCS networks to be cost effective. [Figure 4](#) shows a 3-node network.

Figure 4. 3-Node public/private network

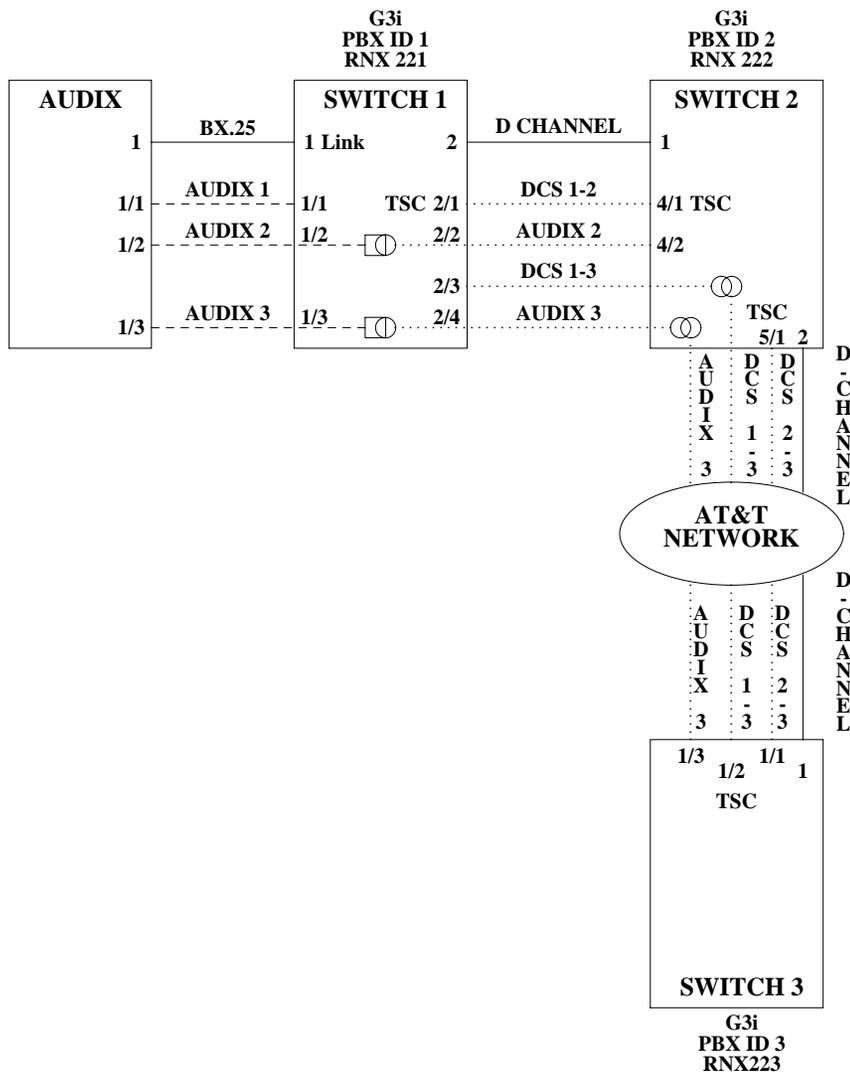

The following tables show you how you would complete each of the necessary forms.

**AUDIX administration**

- AUDIX Translations form

Switch Number	AUDIX Port	Switch Port*	Logical Channel	Data Link
1	1	59	1	1
2	2	57	2	1
3	3	58	3	1

\* Switch Port refers to the processor channel that is used for AUDIX in the PBX.

## Administration for switch 1

- Dial Plan form

Start Dig.	Len	Usage
4	4	ext
5	4	ext
6	4	ext

- Uniform Dial Plan form

Ext Code	Type	Location Code
5xxx	UDPcode	222
6xxx	UDPcode	223

- AAR Digit Conversion form

Matching Pattern	Min	Max	Del	Replacement String	Net	Conv
221	7	7	3	-	ext	n

- AAR Analysis Table

Dialed String	Min	Max	Rte Pat	Call Type	Node Num
222	7	7	2	aar	2
223	7	7	3	aar	3

- Signaling Group form (signaling group 2)

TSC Index	Local Ext.	Enabled	Establish	Dest. Ext.	Far-endPBX-ID	Appl
1	4900	y	permanent	5900	2	dcs
2	4901	y	permanent	5901	-	gateway
3	4902	y	permanent	6902	3	dcs
4	4903	y	permanent	6903	-	gateway

- Trunk Group form

Group #	Grp Type	Used for DCS?	DCS Sig. Method	PBX ID
2	isdn-pri	y	d-chan	2
3	isdn-pri	y	d-chan	3

- Routing Pattern form

Routing Pattern #	Trunk Group #	FRL	Del	TSC	CA-TSC Request
2	2	0	3	y	at-setup
3	3	0	3	y	at-setup

- Gateway Channel form

Signaling Group	TSC Index	Processor Channel	Application
2	2	60	audix
2	4	61	audix

- Processor Channel form

Proc Channel	Application	Inter. Link	Channel	Remote Proc. Channel	PBX ID
59	audix	1	1	1	1
57	gateway	1	2	2	-
58	gateway	1	3	3	-

#### Administration for switch 2

- Dial Plan form

Start Dig.	Len	Usage
4	4	ext
5	4	ext
6	4	ext

- Uniform Dial Plan form

Ext Code	Type	Location Code
4xxx	UDPcode	221
6xxx	UDPcode	223

- AAR Digit Conversion form

Matching Pattern	Min	Max	Del	Replacement String	Net	Conv
222	7	7	3	-	ext	n

- AAR Analysis Table

Dialed String	Min	Max	Rte Pat	Call Type	Node Num
221	7	7	1	aar	1
223	7	7	3	aar	3

- Signaling Group form

Signaling group 4

TSC	Local	Enabled	Establish	Dest.	Far-end	Appl.
Index	Ext.			Ext.	PBX-ID	
1	5900	y	permanent	4900	1	dcx
2	5901	y	permanent	4901	-	audix

Signaling group 5

TSC	Local	Enabled	Establish	Dest.	Far-end	Appl.
Index	Ext.			Ext.	PBX-ID	
1	5905	y	permanent	6905	3	dcx

- Trunk Group form

Group #	Grp Type	Used for DCS?	DCS Sig. Method	PBX ID	NCA-TSC Sig. Group*
1	isdn-pri	y	d-chan	1	-
3	isdn-pri	y	d-chan		5

\* This field is only used for tandeming.

- Routing Pattern form

Routing Pattern #	Trunk Group #	FRL	Del	TSC	CA-TSC Request
1	1	0	3	y	at-setup
3	3	0	3	y	at-setup

### Administration for switch 3

- Dial Plan form

Start Dig.	Len	Usage
4	4	ext
5	4	ext
6	4	ext

- Uniform Dial Plan form

Ext Code	Type	Location Code
4xxx	UDPcode	221
5xxx	UDPcode	222

- AAR Digit Conversion form

Matching Pattern	Min	Max	Del	Replacement String	Net	Conv
223	7	7	3	-	ext	n

- AAR Analysis Table

Dialed String	Min	Max	Rte Pat	Call Type	Node Num
221	7	7	1	aar	1
222	7	7	2	aar	2

- Signaling Group form (signaling group 4)

TSC Index	Local Ext.	Enabled	Establish	Dest. Ext.	Far-end PBX-ID	Appl.
1	6905	y	permanent	5905	2	dcs
2	6902	y	permanent	4902	1	dcs
3	6903	y	permanent	4903	-	audix

- Trunk Group form

Group #	Grp Type	Used for DCS?	DCS Sig. Method	PBX ID
1	isdn-pri	y	d-chan	

- Routing Pattern form

Routing Pattern #	Trunk Group #	FRL	Del	TSC	CA-TSC Request
1	1	0	3*	y	at-setup

\* Should be blank if SDN network routing requires 7 digits.

## Centralized Attendant Service

Centralized Attendant Service (CAS) allows attendants in a private network of switching systems to be concentrated at a central or main location. Thus, CAS reduces the number of attendants required at a branch. For example, a chain of department stores can have a centralized attendant location at the main store to handle calls for the branch stores.

**Table 3. Required forms**

Form	Field	Page
System-Parameters Customer-Options	Async. Transfer Mode (ATM) PNC?	5-289
Synchronization Plan	Synchronization Source Synchronization Reference Stratum	
Duplication-Related System Parameters	Enable Operation of PNC Duplication	5-106
Fiber Link Administration		
ATM-PNC	All	
Circuit Packs		
Cabinet		

**How to administer CAS****Table 4. Required forms**

Form	Field	Page
Attendant Console	<ul style="list-style-type: none"> <li>Feature Button Assignments — cas-backup -trunk-name</li> </ul>	5-38
Console-Parameters	<ul style="list-style-type: none"> <li>CAS</li> <li>RLT Trunk Group Number</li> <li>CAS Back-Up Ext</li> <li>Timed Reminder on Hold</li> <li>Return Call Timeout (sec)</li> </ul>	5-90
Station (multi-appearance)	<ul style="list-style-type: none"> <li>Feature Button Assignments — cas-backup — flash — trunk name — night serv</li> </ul>	6-30
Trunk Group (RLT)	<ul style="list-style-type: none"> <li>All</li> </ul>	7-238
Feature Access Code (FAC)	<ul style="list-style-type: none"> <li>CAS Remote Hold Access Code</li> </ul>	5-120

**Detailed description**

Each branch in a CAS has its own LDN or other type of access from the public network. Incoming trunk calls to the branch, as well as attendant-seeking voice terminal calls, route to the centralized attendants over release link trunks (RLT).

The CAS attendants are at the main location. The main location can be a DEFINITY ECS, a DEFINITY System Generic 1 or 3, a DEFINITY System Generic 2.1, a System 85, a DIMENSION PBX, or a System 75 (V3).

The CAS main switch operates independently of the CAS branch switches. Operation for CAS main-switch traffic is identical to operation of a stand-alone switch.

Each branch in a CAS network connects to the main by way of RLTs. These trunks provide paths for:

- Sending incoming attendant-seeking trunk calls at the branch to the main for processing and extending them back to the branch (both parts of a call use the same trunk)
- Returning timed-out waiting and held calls from the branch to the main
- Routing calls from the branch to the main

A branch can connect to only one main.

### **CAS Queues**

Two queues are associated with CAS calls: one at the main and one at the branch. If idle RLTs are available from the branch to the main, RLTs are seized and CAS calls are queued at the main along with other attendant-seeking calls. If all RLTs are in use, CAS calls to the attendant are queued at the branch in a RLT queue. The length of the queue can vary from 1 to 100, as set during administration of the RLT group.

### **CAS Backup Service**

Backup service sends all CAS calls to a backup extension in the branch if all RLTs are maintenance-busy or out of service, or if the attendant presses a backup button that is not lighted.

- To activate the feature and provide notification that backup service is in effect, assign the backup extension to a Backup button and associated status lamp.
- The status lamp remains lighted as long as backup service is in effect.
- To deactivate the feature, the attendant presses the Backup button while the status lamp is lighted.

Calls are not sent to the backup extension unless all RLTs are maintenance-busy or out of service.

### **CAS Remote Hold**

The attendant can put a CAS call from a branch on Remote Hold. The branch holds the call and drops the RLT. After a time-out (same as the timed reminder for an attendant-held call), the branch automatically attempts to route the call back to the attendant. The returning call can queue for the RLT. Attendants should use Remote Hold when they have to put a call on hold to keep RLTs from being tied up unnecessarily.

### **Branch-generated call-identification tones**

The branch in a CAS network generates call-identification tones and transmits them to the CAS attendant by way of the RLT. These tones indicate the type of call coming from the branch or the status of a call extended to or held at the branch. The attendant hears these tones in the console handset before being connected to the caller. The tones may vary by country. See *DEFINITY ECS Console Operations* for information on these tones.

### CAS Outgoing Call Routing

The centralized attendant at the main has access, through RLTs, to all outgoing trunk facilities at the branches in a CAS network. The attendant can extend an incoming LDN call to an outgoing trunk at a branch by dialing the access code and allowing the caller to dial the rest of the number or by dialing the complete outgoing number.

### CAS Incoming Call Routing

Calls extended to busy single-line voice terminals at the branch wait automatically. If there is a call in queue, the user hears a busy signal. When station hunting and send all calls is administered, the call routes along the administered path. Not answering any waiting extended call within an administered interval causes the branch switch to return the call to the attendant. Call Waiting does not apply to multiappearance terminals; if no appearances are available, busy tone is sent to the attendant, who tells the caller that the line is busy.

Calls from voice terminals at the branch to an attendant also route over RLTs seized by the branch switch. A branch caller reaches the attendant by dialing the attendant-group access code. The access code is administrable; the default is **0**. The conversation between the branch caller and the attendant ties up the seized RLT, but calls of this type are usually short.

If an extended call returns to the main attendant unanswered, the called party at the branch does not drop but continues to be alerted until the caller releases. This allows the attendant to talk to the caller, then extend the call again, if the caller wishes, without redialing the number.

## Considerations

### Branch Attendants

- A branch can have an attendant. Access to the branch attendant must be by way of an individual attendant extension. Incoming trunk calls in a CAS network can bypass branch attendants but can be routed back to them by the centralized attendant.
- Branch calls terminate on the CAS main switch based on the incoming RLT trunk-group day-destination or night-service destination. An attendant console is not always answering or extending incoming CAS calls. If someone other than an attendant answers a CAS call, that person can extend the call back to the branch by pressing the FLASH button on a multiappearance voice terminal or flashing the switchhook on a single-line voice terminal. The branch reaction to Flash Signals and the branch application of tones is the same whether an attendant or someone other than an attendant answers or extends the call.
- When an analog-station call goes to coverage, the station drops from the call. This is the exception to the branch leaving the extended-to party ringing. If the main attendant extends a call to an analog station and that call goes to coverage and later returns to the main attendant, the call is treated as an incoming LDN call and the attendant must re-extend the call, if requested by the user.
- On an incoming CAS call to the main attendant, the Name field from the trunk-group form for that RLT displays to the attendant. Therefore, you should administer the field to provide meaningful branch identification information.
- Music-on-Hold feature at branch applies to two stages of LDN calls: during call extension and Remote Hold.

**Interactions**

- **Abbreviated Dialing**

The main attendant can use an Abbreviated Dialing button to extend CAS calls after obtaining branch dial tone.
- **Attendant Auto-Manual Splitting**

The SPLIT lamp and button do not function on CAS main calls extended via the RLT trunk. Attendant conference does not function on CAS calls.
- **Attendant Control of Trunk-Group Access**

If a branch attendant has control of an outgoing RLT trunk group, new attendant-seeking calls route to the branch attendant.
- **Attendant Override of Diversion**

Use Attendant Override of Diversion with CAS.
- **Attendant Serial Calling**

Attendant Serial Calling does not work for CAS calls.
- **Automatic Alternate Routing and Automatic Route Selection**

CAS calls can be routed using AAR and ARS.
- **Busy-Indicator Buttons**

Busy indicators can identify incoming calls over an RLT. You can also use Busy indicators to dial after the attendant starts to extend a call.
- **Call Coverage**

Redirect calls to a centralized attendant by Call Coverage. Do not redirect calls to a CAS backup extension for backup service via Send All Calls to the backup extension's coverage path.
- **Call Detail Recording**

If the CAS main RLT trunk has the CDR option selected, CDR records generate for incoming CAS calls.
- **Call Forwarding**

Do not forward calls to a CAS extension.
- **DCS Operation**

If an RLT trunk group is administered as a DCS trunk, the following interaction applies: On an incoming CAS call to the attendant, the DCS message displays instead of the name of the incoming RLT trunk group. Upon answering the call, the attendant hears call-identification tones, indicating that the call is a CAS call. Use a TRUNK-NAME button to obtain the name of the RLT trunk group.
- **DXS and DTGS Buttons**

DXS and DTGS buttons at the main attendant console can be used with CAS. However, with DXS buttons, it takes a few seconds before the attendant hears ringback tone.

- **Emergency Access to the Attendant**

CAS Branch Emergency Access calls generated by a Feature Access Code route Off-Hook Alert to the branch attendant group. If there is no attendant in the branch, the call routes to the branch's administered Emergency Access Redirection Extension. When the branch switch is in CAS Backup Service, the calls route to the backup station and the call is treated as a normal call.
- **Hunt Groups**

If an incoming CAS call directs to a hunt group, the call does not redirect to the hunt group's coverage path. Depending on the circumstances, the attendant can get a busy tone or ringing.
- **Leave Word Calling**

If a message is left for a branch user and the attendant at the CAS switch tries to retrieve the message by using LWC message retrieval, permission is denied.
- **Night Service — Night Console Service**

When the CAS main enters night service, CAS calls terminate at the CAS main night-service destination. When the branch enters Night Service, CAS calls route to the branch night console, the LDN night station, or the TAAS.
- **Night Service — Trunk Answer from Any Station**

In a multiswitch DCS environment with CAS, the result of transferring incoming trunk calls via Night Service Extension or Trunk Answer from Any Station varies depending on the home switch of the transferred-to station, the home switch of the connected trunk, and the type of night-service function chosen (Night Service Extension, Trunk Answer From Any Station, or both).
- **Nonattendant Console Handling of CAS Calls**

The CAS branch calls terminate at the CAS main based on the incoming RLT trunk-group day destination or night-service destination. You can also answer a CAS call by the Trunk Answer Any Station feature.

## Emergency (911) Calls

The Enhanced 911 (E911) systems installed in many jurisdictions in the U.S. are equipped so that by dialing a service code (911 in the U.S.) a victim of a fire, accident, crime, or medical emergency may quickly access a public safety agency that will dispatch the appropriate response. The public E911 system maintains a database that stores location and background information to aid public safety agencies in responding quickly with the appropriate assistance. Information about the calling party can be triggered by the transmission of a Caller's Emergency Service Identification (CESID) number over Centralized Automatic Message Accounting (CAMA) trunks when the call originates from behind a PBX. 911 calls from a station on a PBX not equipped with CAMA trunks (or an adjunct computer system associated with CAMA trunks) will not provide the E911 system with the information required to identify the location of the person placing the call. Instead, the E911 system will only be able to identify the location of the trunk termination at the PBX.

This feature allows transmission of identifying information in the form of the CESID over CAMA trunks as to the extension number of a DID station associated with the calling party. The calling party may be at or near a station on a remote port network, or may be at a remote location served by an off-premises station.

## How to administer Emergency (911) Calls

**Table 5. Required forms**

Form	Field
ARS Digit Analysis Table	<ul style="list-style-type: none"> <li>All</li> </ul>
CAMA Numbering Format	<ul style="list-style-type: none"> <li>All</li> </ul>
Class of Restriction	<ul style="list-style-type: none"> <li>Calling Party Restriction</li> </ul>
Feature Access Code	<ul style="list-style-type: none"> <li>ARS Access Code1</li> <li>ARS Access Code2</li> </ul>
Route Pattern	<ul style="list-style-type: none"> <li>All</li> </ul>
Trunk Group (CAMA)	<ul style="list-style-type: none"> <li>All</li> </ul>

**Interactions**            None.

## Extended Trunk Access

Use Extended Trunk Access (ETA) in conjunction with Uniform Dial Plan (UDP) to allow DEFINITY ECS to send any unrecognized number (such as an extension not administered locally) to another switch for analysis and routing. Such unrecognized numbers can be Facility Access Codes, Trunk Access Codes, or extensions that are not in the UDP table. Non-UDP numbers are administered on either the First Digit Table (on the Dial Plan Record form) or the Second Digit Table. They also are not administered on the ETA Call Screening Table. ETA helps you make full use of automatic routing and UDP.

## How to administer ETA

**Table 6. Required forms**

Form	Field
Dial Plan Record (First Digit and Second Digit Tables)	<ul style="list-style-type: none"> <li>ETA Routing Pattern</li> <li>ETA Node Number</li> </ul>
ETA Call Screening Table	<ul style="list-style-type: none"> <li>Call Screening Entry</li> </ul>

### CAUTION:

Switches can be chained together using ETA. However, you must ensure that switches do not route in a circular ETA call setup. Switch A can route to switch B, and switch B can route to switch C. But, if switch A routes to switch B and switch B routes to switch A, you create a circular ETA call setup.

**Detailed description** Historically, ETA has been used by satellite switches to access stations, trunks, and features at the main switch. ETA frees you from having to enumerate the entire dial plan for the main or satellite complex. Calls that would get intercept treatment without ETA are routed to a remote switch to be reprocessed. The following processing takes place when ETA is administered:

- ETA call is identified because it fails all other routing possibilities.
- The dialed string is not in the ETA Call Screening Table.
- An available route pattern is selected based on the Dial Plan form ETA Routing Pattern or ETA Node Number entries.
- The dialed string is sent to the remote switch.

### Examples of ETA administration

#### CASE #1

- ETA Route Pattern — Not administered
- ETA Node Number — Not administered

In this case, ETA is not active. It is not used to route undefined dialed strings.

#### CASE #2

- ETA Route Pattern — Administered
- ETA Node Number — Not administered

In this case, the ETA Route Pattern routes undefined dialed strings. However, since an ETA Node Number is not specified, non-call-related DCS messages are not routed.

#### CASE #3

- ETA Route Pattern — Not administered
- ETA Node Number — Administered

In this case, the ETA Node Number provides the route pattern. Non-call-related DCS messages also can route since a node number is supplied.

#### CASE #4

- ETA Route Pattern — Administered
- ETA Node Number — Administered

In this case, the ETA Route Pattern routes undefined dialed strings while the ETA Node Number routes DCS messages. Nodes themselves do not have to be administered for ETA. ETA should not be used over tandem-tie trunks.

### Interactions

- Abbreviated Dialing  
Abbreviated Dialing calls are routed via ETA.
- Attendant  
Attendants calls are routed via ETA.
- Data-Call Setup

Analog and digital endpoints can access ETA. The digit string goes to the remote switch like any other digit string is sent. The remote switch handles the data-call setup from that point forward.

- Facility Restriction Levels

It is possible to restrict trunks that are being used in conjunction with ETA by assigning FRLs.

- Last Number Dialed

If a number is routed via ETA to a remote switch and you want to reaccess that number, then reaccess uses ETA.

- Modem Pooling

Modems in Modem Pools are treated like all other trunks.

- Remote Access

Remote-access trunks are able to access the ETA feature just as any other trunk or station does.

## Extension Number Portability

Extension Number Portability (ENP) gives you the ability to assign any extension to any switch in an ENP subnetwork. Stations can be moved across switches while retaining the original extension number, as long as the switches are part of the ENP subnetwork. ENP is used in conjunction with Automatic Alternate Routing (AAR) and Uniform Dial Plan (UDP).

### How to administer ENP

**Table 7. Required forms**

Form	Field
AAR and ARS Digit Conversion Table	• All
Extension Number Portability Numbering Plan	• All
Node Number Routing	• All
Uniform Dialing Plan	• Ext Code

- *AAR Digit Conversion form* — Assign all 3-digit ENP codes as home, and if using a 5-digit UDP, associate the ENP codes with the leading, or 10 thousands, digit (that is, the fifth digit of the extension). For example, for extension number 73446, “7” is the 10 thousands digit.
- *ENP Numbering Plan form* — Associate the leading one or two digits of extensions in the ENP subnetwork with a 3-digit ENP code, used to construct a 7-digit AAR-like ENP number.
- *Node Number Routing form* — Associate a route pattern with each node in the ENP subnetwork.
- *Uniform Dialing Plan form* — Enter the number of digits in the plan (4 or 5) and the Extension Codes for non-home extensions in the ENP subnetwork as ENPNode (node number routed).

**Detailed description**

The ENP Numbering Plan allows you to set 4- or 5-digit extensions in the ENP subnetwork to a 7-digit AAR-like number that is sent to other nodes in the network. Only the first 1 or 2 leading digits of the extension are significant.

ENP Codes are distinguished from AAR location codes because ENP Codes are home on every node within the ENP subnetwork, and ENP Codes are administered in the ENP Numbering Plan table as well as in the AAR Analysis table. Since ENP Codes are home on every node, they cannot be used as AAR location codes.

UDP extensions are converted to ENP numbers if node number routing is specified for the extensions in the UDP table.

**Note:** One ENP code is required for a 4-digit ENP subnetwork. A 5-digit UDP requires one ENP code for each leading digit of extensions used within the ENP subnetwork.

DCS message signaling links are not required to support ENP. As a result, many multiple switch configurations are possible with ENP. Typically the ENP network will be a subnetwork of a UDP or Electronic Tandem Network (ETN).

**Interactions**

- Distributed Communications System

If you use DCS, the ENP node numbers must correspond to DCS node numbers.

**Inter-PBX Attendant Service**

Inter-PBX Attendant Service (IAS) allows attendants for multiple branches to be concentrated at a main location. Incoming trunk calls to the branch, as well as attendant-seeking voice-terminal calls, route over tie trunks to the main location.

**How to administer Inter-PBX Attendant Service****Table 8. Required forms**

Form	Field
Tie Trunk Group (Main)	<ul style="list-style-type: none"> <li>• Incoming Destination</li> </ul>
Console Parameters (Branch)	<ul style="list-style-type: none"> <li>• IAS (Branch)</li> <li>• IAS Tie Trunk Group No.</li> <li>• IAS Att. Access Code</li> </ul>
Tie trunk group (Branch)	<ul style="list-style-type: none"> <li>• All</li> </ul>

**Detailed description**

Inter-PBX Attendant Service calls are incoming tie-trunk calls from a branch location to the main-location attendant group. If no attendant in the group is immediately available, the calls are queued. When an attendant becomes available, the call routes to that attendant. Extended calls are treated as incoming calls to the main location.

DEFINITY ECS can be a branch or main location. Users at each branch can access other branch locations through the main location. A branch can have local attendants. Users access these local attendants normally.

## Interactions

- **Attendant Control of Trunk-Group Access**

If a call at a branch attempts to access a controlled trunk group, the call routes to a branch attendant, if there is one. If there is no branch attendant, the call routes to the attendant group at the main location.
- **Attendant Display and DCS Attendant Display**

In a DCS environment, an incoming call from a branch displays at the attendant console at the main location as a local call.

In a non-DCS environment, an incoming call displays at the attendant console at the main location as an incoming tie-trunk call.
- **Attendant Recall**

If an attendant at the main location holds a call, the calling parties at the branch cannot recall the attendant.
- **Call Coverage**

A call redirected to a coverage path with the attendant group as a coverage point skips that coverage point. It goes to the next coverage point at the branch, if administered, or continues to ring at the previous coverage point. If the attendant group 0 is the only coverage point, it continues to ring at the principal's extension.
- **Centralized Attendant Service**

CAS and Inter-PBX attendant calling cannot be used at the same time.
- **Dial Access to Attendant**

Administer Dial Access to Attendant via the dial platform to the same digit on both the IAS main switch and the IAS branch switch. On the branch switch, administer the PBX attendant access code (Console Parameters form) to match the main PBX attendant-group dial access code.
- **Night Service**

Inter-PBX Attendant Calls deactivates when a branch goes into night service, and reactivates when the branch comes out of night service.

## ISDN Feature Plus

This feature allows you to have basic feature transparency over public networks without having a dedicated leased line. This provides a lower cost option for using the switched public network.

### How to administer ISDN Feature Plus

**Note:** Only Lucent representatives perform step 1.

- 1 On the System-Parameters Customer-Options form, set the:
  - ~ **G3 Version** field to **V7**.
  - ~ **ISDN Feature Plus** field to **y**.
- 2 On the same form, set either or both of the following:
  - ~ **ISDN-PRI** field to **y**, or
  - ~ **ISDN-BRI Trunks** field to **y**.

- 3 Set either or both of the following:
  - ~ ISDN-BRI Trunk Group — Set the **Supplementary Service Protocol** field to **f**
  - ~ ISDN-PRI Trunk Group — Set the **Supplementary Service Protocol** field to **f**.
- 4 On the Feature Related System Parameters form, set the **Feature Plus Ext** field to the local extension used to terminate Feature Plus signaling for ISDN Feature Plus.
- 5 On the Hunt Group form, to add a centralized AUDIX, set the **Message Center** field to **fp-mwi**.

To start administration for Message Waiting Indication at the Message Center PBX:

- 1 On the Feature Related System Parameters form, set the **MWI - Number of Digits per AUDIX Subscriber** field to the desired number.
- 2 On the Processor Channel Assignment, set the **Application** field to **fp-mwi**.
- 3 Administer the Message Waiting Indication Subscriber Number Prefixes form. To start the Calling Name feature:
- 4 On the ISDN-BRI or ISDN-PRI trunk group form (whichever you are using), set the **Send Name** field to **y**.

## Description

ISDN Feature Plus uses a DEFINITY ECS proprietary signaling protocol. The features do not function in the same way as their QSIG or DCS counterparts.

To use Feature Plus, Phase I, you need DID extensions. In addition to the general Feature Plus call handling, Feature Plus includes the following features:

- Centralized AUDIX — A simple, one step “coverage” to voice mail. If voice mail is unavailable for any reason, the call does not cover elsewhere.
- Call Diversion — You can divert (or forward) calls unconditionally, upon busy or no reply, to another extension including forwarding voice mail.
- Calling Number ID — You can display the calling party’s number to the called party during alerting and after answer.
- Calling Name — You can assign the Calling Name Feature Plus identifier with a maximum size of 15 bytes or the maximum network subaddress size, whichever is lower.
- Connected Line Identification Presentation (COLP) — You can assign display forwarded-to party information to the calling user’s display.
- Call Transfer - Basic — You can assign transfer calls between parties across the public network is supported. Display updates at the time of transfer or upon completion of transfer, however, are not supported.
- Served User PBX for Centralized AUDIX — Determines where to send messages destined for the AUDIX hunt group.
- Message Waiting Indication — You can assign display a message waiting indication on a user’s voice terminal.

**Differences in Inserted Digits field**

There is a difference in how the **Inserted Digits to form Complete Number** field on the Message Waiting Indication Subscriber Number Prefixes form is used for QSIG and Feature Plus. This difference is due to the difference in how the Feature Plus and QSIG-TSC platforms operate.

For Feature Plus, the Feature Plus extension must be included in the **Inserted Digits to form Complete Number** field, while for QSIG, only the higher order digits need to be included. (In QSIG MWI, the subscriber number is appended to the inserted digits and the resulting number is used to route over a QSIG TSC.) For example, Dallas is a Message Center PBX and Chicago is a remote PBX:

- If Feature Plus is running between Dallas and Chicago and the Feature Plus extension in Chicago is 82000, the **Inserted Digits to form Complete Number** field administered in Dallas to get to Chicago must be 3035382000. The **Routing Digits (AAR/ARS Access Code)** field also needs to be filled in appropriately.
- If QSIG is running between Chicago and Dallas, the **Inserted Digits to form Complete Number** field must contain 30353. The **Routing Digits (AAR/ARS Access Code)** field also must be filled in appropriately.)

**Interrogation**

When performing an audit, the Served User PBX sends a request towards the Message Center PBX. As a Message Center PBX, the DEFINITY ECS receives the request message, maps it into a MW STATUS REQUEST - SINGLE STATION message, and sends it to AUDIX on the BX.25 link. When AUDIX replies to the DEFINITY on the BX.25 link with a MW STATUS UPDATE, the Message Center PBX sends the information on to the appropriate Served User PBX.

- If it is a Message Center PBX, the MW STATUS UPDATE indicates whether there are any messages waiting, not how many messages are waiting or what media types are these messages. If the MW STATUS UPDATE indicates that there are new messages, then the Message Center PBX sends a message telling the Served User PBX to activate the message waiting indication. Similarly, if the MW STATUS UPDATE indicates that there are no new messages, then the Message Center PBX sends a message telling the Served User PBX to deactivate the message waiting indication.
- If it is a Served User PBX, when the Served User PBX receives the result, it makes sure that the result received from the Message Center matches the state of the Served User's light.

**Interactions**

- Automatic Circuit Assurance

Automatic Circuit Assurance (including Referrals) is not activated for calls terminating at the Feature Plus extension.

- Distributed Communication System (DCS)

Feature Plus signaling links do not support DCS.

- Feature Plus Centralized AUDIX

~ Calling Line Identification Presentation (CLIP)

If the public network supports CLIP and the called user has subscribed to the service, calling party information is available to the called user when messages are retrieved.

- ~ Feature Plus Diversion

Feature Plus Centralized AUDIX relies upon Feature Plus Diversion. When a call covers to AUDIX, it must invoke Feature Plus Diversion to identify the called party to AUDIX.

- ~ Feature Plus Message Waiting

When a calling party leaves a message using Feature Plus Centralized AUDIX, Feature Plus Message Waiting engages and turns on that subscriber's message waiting indicator.

- Feature Plus Forwarding (Diversion)

- ~ Calling Line Identification Presentation (CLIP)

If the public network supports CLIP and the forwarded-to user has subscribed to the service, then calling party information is available to the forwarded-to user's display.

- ~ Connection Line Identification Presentation (COLP)

If the public network supports COLP and the calling user has subscribed to the service, then forwarded-to party information is available to the calling user's display.

- ~ Feature Plus Centralized AUDIX

Feature Plus Centralized AUDIX relies upon Feature Plus Diversion. Invoke Feature Plus Diversion first to enable the Centralized AUDIX feature.

- ~ Call Coverage

- Terminating call has coverage active

If a call is forwarded off-switch, and the terminating switch has call coverage activated and the criteria is met, the call will not go to the forwarding coverage path. It goes to the terminating coverage path.

- Forwarding and Coverage

If the last coverage point in the coverage path is a number that routes over an ISDN SSF trunk, no Feature Plus Diversion information passes to the coverage PBX.

- ~ Automatic Callback

If automatic callback was activated before the called voice terminal user activated Call Forwarding over an ISDN SSF trunk, the callback call attempt is redirected to the forwarded-to party over the SSF trunk.

- ~ Call Park

If a forwarded-to (diverted-to) extension user parks a call that has been forwarded from an ISDN SSF trunk, the call normally is parked on the forwarded-to extension, not on the forwarded-from (called user) of the ISDN SSF trunk.

- Feature Plus Message Waiting Indication

- ~ Audio Information Exchange (AUDIX)

Feature Plus MWI depends on the presence of a Message Center. Whenever DEFINITY ECS acts as a Message Center switch, there is an interaction between DEFINITY ECS and AUDIX. DEFINITY ECS must be able to receive messages from AUDIX then, if applicable, send the appropriate Feature Plus MWI message to the network. Similarly, if DEFINITY ECS receives a Feature Plus MWI message, DEFINITY ECS translates the Feature Plus message into the appropriate AUDIX message and passes it to AUDIX.

The only messages that DEFINITY ECS handles are AUDIX messages along the BX.25 link. Feature Plus MWI can interwork with Basic AUDIX, including INTUITY AUDIX, and with DEFINITY AUDIX with the DCIU control link. Feature Plus MWI does not work with the DEFINITY AUDIX that emulates a DCP voice terminal or with versions of AUDIX that communicate to DEFINITY ECS mode codes.

DEFINITY ECS implementation requires that all users on a Served User PBX use the same Feature Plus Message Center. Some of the served users can use a Feature Plus Message Center, while others use a local message center and/or a DCS Remote Message Center and/or a QSIG Message Center. However, some served users on a PBX cannot use one Feature Plus Message Center while other served users on the same PBX use a different Feature Plus Message Center.

~ Off-Premise Station

Feature Plus MWI does not work with an off-premise station implemented with a DS1 circuit pack.

- QSIG

Feature Plus signaling links do not support QSIG.

## Private Network Access

Use Private Network Access to allow calls to other switching systems in a private network. These calls do not use the public network. They are routed over customer-dedicated facilities.

## How to administer Private Network Access

**Table 9. Required forms**

Form	Field
Trunk Groups Access APLT ISDN-BRI ISDN-PRI Tandem	<ul style="list-style-type: none"> <li>All</li> </ul>
Class of Restriction	<ul style="list-style-type: none"> <li>Advanced Private Line Termination</li> </ul>
Feature Access Code (FAC)	<ul style="list-style-type: none"> <li>Automatic Alternate Routing Access Code</li> </ul>
AAR and ARS Digit Analysis Table	<ul style="list-style-type: none"> <li>All</li> </ul>
AAR and ARS Digit Conversion Table	<ul style="list-style-type: none"> <li>All</li> </ul>
Node Number Routing	<ul style="list-style-type: none"> <li>All</li> </ul>
Station	<ul style="list-style-type: none"> <li>COR</li> </ul>

- Trunk Group Forms — Set the **Group Type** field to **access**, **aplt**, **tandem**, **tie**, or **isdn** and the **Service Type** field to **access**, **tie**, or **tandem**. Complete COR digit treatment and common type fields for tie trunk groups associated with a private network.

### Detailed description

Private networks can include:

- Common-control switching arrangement (CCSA)
- Distributed Communications Systems (DCS) and Enhanced DCS (EDCS)
- Electronic tandem network (ETN)
- Enhanced private-switched communications service (EPSCS)
- Tandem-tie-trunk network (TTTN)
- Italian Traslatore Giunzione Uscente/Entrante/Interno (TGU/TGE/TGI) trunks

Unless prohibited by the COR, all incoming private network trunks, except CCSA, can access outgoing trunks without attendant or terminal-user assistance. All incoming CCSA calls must route to an attendant or a terminal user.

When off-network calling is part of the CCSA and EPSCS, long-distance calls route as far as possible over these networks before terminating on the public network. Thus, charges for toll calls are reduced. The COR you administer to individual system users determines whether access to this capability is allowed or denied.

In Italy, TGU/TGE/TGI trunks provide private network access between 2 switching systems. They also provide some feature transparency for COR (Inward Restriction), DID (when reaching busy stations), and Intrusion.

**Interactions**

- Attendant Call Waiting

Call Waiting is provided via Italian TGU/TGE (main and satellite) trunks. Call Waiting also is provided in Italy and all other countries through DCS.

- Attendant Intrusion

Attendant Intrusion is provided on satellite switches via TGU/TGE trunks. Attendant Intrusion also is provided through DCS.

**Uniform Dial Plan**

Uniform Dial Plan (UDP) provides a common 4- or 5-digit dial plan (specified in the Dial Plan Record) that can be shared among a group of switches. Interswitch dialing and intraswitch dialing both require 4- or 5-digit dialing. UDP is used with an electronic tandem network (ETN); main, satellite, and tributary switches; and Distributed Communications Systems (DCS). In addition, UDP can provide uniform 4- or 5-digit dialing between 2 or more private-switching systems without ETN, main, satellite, and tributary switches, or DCS.

**How to administer UDP****Table 10. Required forms**

Form	Field
Dial Plan Record Second Digit Table	<ul style="list-style-type: none"> <li>• Uniform Dial Plan</li> <li>• UDP Extension Search Order</li> </ul>
Uniform Dial Plan	<ul style="list-style-type: none"> <li>• All</li> </ul>
AAR and ARS Digit Analysis Table	<ul style="list-style-type: none"> <li>• All</li> </ul>
AAR and ARS Digit Conversion Table	<ul style="list-style-type: none"> <li>• All</li> </ul>
Node Number Routing	<ul style="list-style-type: none"> <li>• Route Pat</li> </ul>
Extension Number Portability Numbering Plan	<ul style="list-style-type: none"> <li>• All</li> </ul>
Route Pattern	<ul style="list-style-type: none"> <li>• All</li> </ul>

**Note:** On the Uniform Dialing Plan form, if you change the **Ext Code** and **Type** fields from a 4-digit or 5-digit extension number to **none**, a warning message informs you that all UDP extension codes will be lost. The same warning message displays when you change the **Ext Code** and **Type** extension numbers from 4-digits to 5-digits or from 5-digits to 4-digits.

**Detailed description**

UDP routes calls off the local switch by converting the extension number into a private-network number with 7 digits. This number is formed by prepending a 3-digit code (of the form XXX) to the (last) 4 digits of the extension number. 3 types of conversion are supported: UDPCode, AACode, and ENPNode.

- For UDPCode and AARCode, XXX is a 3-digit private-network location code, and the result is analyzed and routed via Automatic Alternate Routing (AAR). UDPCode conversion prohibits digit conversion via AAR; AARCode conversion permits it, just as if you dialed the AAR number instead of the extension.
- For ENPCode, XXX is called an Extension Number Portability (ENP) code. It is not used for routing; node-number routing is used instead. The ENP code is chosen based on the first 1 or 2 digits of the dialed string. Because it is not used for routing, the ENPCode can be independent of location.

UDP conversion is specified for individual extensions or groups of extensions sharing the same leading digits, via the UDP form and extension codes. An extension code is the desired leading digits of an extension followed by an “x” (wildcard). For example, “123xx” “12345” is the extension code for all 100 possible extensions beginning with “123” plus two wild cards. “12345” is an extension code specifying one extension.

Each extension code can be assigned to 1 of 6 possible treatments.

- UDPCode — Conversion to AAR with given location code, further conversion suppressed
- AARCode — Conversion to AAR with given location code, further conversion allowed
- ENPCode — Conversion to private network number (via ENP form), route to given node number routing
- TempOOS — Temporarily out of service, give reorder
- Local — Local range of extensions
- blank — Similar to local, however, this extension is not chosen when the system is asked to “add a station”

When a user at a switch that is included in a UDP dials an extension, DEFINITY ECS first checks to see if the extension is assigned to a local station on that switch. If so, the call is routed to the station, and UDP is not invoked. If the extension is not found locally, the system checks to see if the extension matches an assigned extension code. If the extension matches an assigned extension code, the system performs the specified conversion into a private network number and routes the call as specified. If more than one extension code matches, the “best” match (most explicit digits) is used. For example, 1234x is chosen over 123xx if 12345 is dialed. However, 123xx is chosen if 12355 is dialed. If no matching extension code is found, the user receives intercept treatment. Or, if Extended Trunk Access (ETA) is enabled, the call routes via ETA.

### Example of how UDP works

To administer, assign each UDP code:

- To a private network location code (RNX) or node number. (The RNX is equivalent to an office code of a central office in a public network. This RNX determines how a UDP call is routed.)
- Assign each UDP code as either local or remote to the switch.

To understand the function of a UDP, review the following example.


A given station is called using the same 5-digit extension regardless of where in the ETN the call originates. Three switches are included in [Table 11 on page 314](#). Each

has been assigned a list of RNX and UDP codes. See [Table 11 on page 314](#) and [Figure 5](#).

**Table 11. Switch/RMX/UDP Codes**

SWITCH	RNX	UDP CODE
A	224	41
C	223	51
C	223	52
B	222	60
B	222	61

**Figure 5. UDP Example**

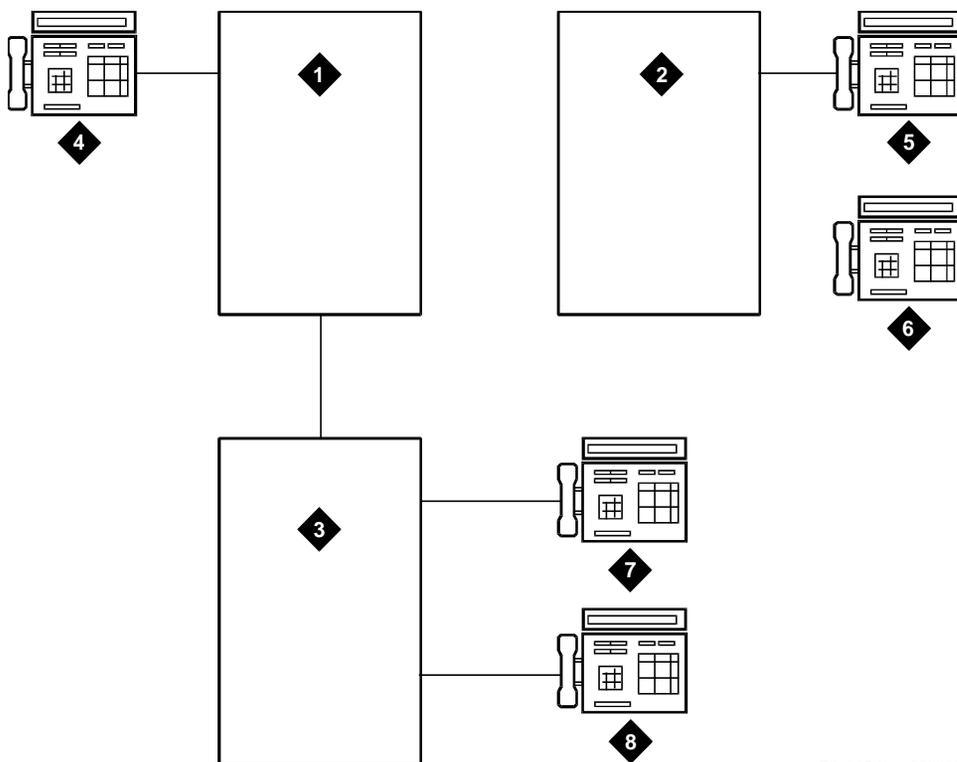

r764905 CJL 062296

- |  |  |
|--|--|
| <ol style="list-style-type: none"> <li>1. <b>Switch A</b><br/>Dial Plan for extensions is 41XXX<br/>RNX=224</li> <li>2. <b>Switch B:</b><br/>Dial Plan for Extensions is 60XXX and 61XXX<br/>RNX=222</li> <li>3. <b>Switch C:</b><br/>Dial Plan for extensions is 51XXX and 52XXX<br/>RNX=223</li> </ol> | <ol style="list-style-type: none"> <li>4. <b>Extension 41000</b></li> <li>5. <b>Extension 61234</b></li> <li>6. <b>Extension 60123</b></li> <li>7. <b>Extension 51234</b></li> <li>8. <b>Extension 5200</b></li> </ol> |
|--|--|

If a user at extension 41000 wants to call extension 61234, there are two choices:

- Dial 61234
- Dial the AAR access code followed by 222-1234

If 61234 is dialed, the system recognizes 61 as a remote UDP, determines the associated RNX (222), and uses AAR to route the call to 222-1234.

If the AAR access code and 222-1234 are dialed, the system finds the route pattern for RNX 222 and routes the call to the switch associated with that RNX.

Whenever UDP is used to route a call to another switch, the correct digit deletion and insertion must be specified within the route pattern so that the receiving switch gets digits in the format it expects. DEFINITY ECS can be configured in several different ways.

- If AAR is available on the receiving switch, Subnet Trunking can be used to insert the AAR feature access code on the originating switch or digit insertion may be used to insert it on the receiving switch. The receiving switch then uses AAR digit conversion to convert 222 with 7 digits to an extension by deleting 3 digits and inserting a 6.
- If AAR is not available on the receiving switch, Subnet Trunking must be used on the originating switch to delete the 222 and insert the digit 6 at the beginning of the extension number so that the receiving switch can continue to route correctly.

If the user at extension 51234 on Switch C dials extension 61234, the call must first go through Switch A before proceeding to Switch B. When 61234 is dialed, the system recognizes 61 as a UDP code, determines the associated RNX (222), and uses AAR to route the call. The AAR feature access code plus 222-1234 are outpulsed to Switch A. Switch A then recognizes the RNX 222 as a remote switch and routes the call to Switch B and extension 61234. This same type of call routing occurs when an extension at Switch B calls an extension at Switch C.

If extension 61234 on Switch B calls extension 61235, the system recognizes 61 as a local UDP code and routes the call directly to extension 61235.

## Considerations

- In North American network environments, extensions beginning with 0 may route to an attendant. You are encouraged to use another number as the leading digit when assigning extensions.
- When you call an extension on another switch, there may be a slight delay before call-progress tones are applied. This delay is due to the trunk signaling necessary to complete the call to the remote switch.
- When you select the option to look at the UDP table first, calls that might otherwise terminate at a local extension route over the network. This is easily reversed. When you remove the extensions from the UDP table, the local extension can be dialed again.
- If AAR is active, FRLs and Traveling Class Marks (TCMs) can be sent along with the private network number. UDPCode and AARCode conversions use the FRL assigned to the caller. ENPNode conversion always raises the FRL to the maximum (7).

If an FRL is insufficient to access the facility, access is denied. There is no prompt for an authorization code even if authorization codes are enabled and administered.

- If AAR is not active, tandem-tie trunks should not be used to transport UDP numbers. The TCM is not recognized at the terminating switch.

**Note:** Never use tandem-tie trunks to transport UDP numbers (the TCM and Hop count will not be recognized as such following the extension received at the receiving switch).

## Interactions

- Automatic Alternate Routing

AAR routes UDP calls. (Included with UDP is the required AAR subset.) If AAR is enabled in addition to UDP, then the 7-digit AAR number provides the same routing as UDP.

- Dial Plan

~ All of the extension numbers on a switch are not necessarily part of UDP. Any that do not belong to UDP are handled by a regular, non-UDP Dial Plan associated with the switch.

~ When administering the Dial Plan form and designating a group of extensions as UDP non-local, you can specify whether you want to search for local extensions first or last. This allows flexibility to change extensions from local to non-local and vice-versa.

- DID Trunk Group

DID calls to 5-digit UDP extension numbers require that the DID trunk group insert enough digits to make a 5-digit extension number.

- Distributed Communications System

UDP is required when DCS is provided. The necessary UDP software is provided with the DCS software.

- Extension Number Portability

If an extension code is administered to use ENP node routing, ENP routes the call to the correct switch. If AAR is enabled in addition to UDP, the 7-digit AAR number provides the same routing as UDP (that is, via ENP).

## QSIG

QSIG complies with the International Organization for Standardization (ISO) Integrated Services Digital Network (ISDN) private-networking specifications. QSIG is defined by ISO as the worldwide standard for private networks.

QSIG is the generic name for a family of signaling protocols. The Q reference point or interface is the logical point where signaling is passed between two switches in a private network. QSIG signaling allows certain features to work in a single-vendor or multi-vendor network.

DEFINITY ECS provides four levels of QSIG functionality:

- Basic Call Setup — Supports basic call setup and number transport
- Basic Supplementary Services — Supports Name Identification Services, Call Forwarding (Diversion), Call Transfer, Call Offer, and Call Completion (Automatic Callback)
- Supplementary Services with Rerouting — Supports Call Forwarding (Diversion) with Reroute (using Path Replacement) and Call Transfer with Reroute (using Path Replacement)
- VALU Called/Busy Number — Supports displays of called party number to the calling party when the called number is ringing or busy.

QSIG uses ISO standard protocols as well as non-call-associated temporary signal (TSCs). See the description later in this section.

### QSIG Basic Call Setup

#### Transit Counter (ANF-TC)

DEFINITY ECS provides QSIG ANF-TC as defined in ISO/IEC 6B032 and 6B033. It prevents indefinite looping, connections giving poor transmission performance, and inefficient use of network resources.

ANF-TC is invoked automatically for ISDN basic calls and the Route Pattern form indicates the number of switches through which a call may be routed.

#### Calling Number/Connected Number

DEFINITY ECS allows the display of the calling party number to the called party. DEFINITY ECS also displays the connected number to the calling party after the call connects to the called number or another destination.

See also the description of restricted number administration and character display length described in QSIG Name and Number Identification.

### QSIG Basic Supplementary Services

#### Called/Busy Name

Enables the calling party to see the name of the called party at the following times:

- while the call is ringing at the called party's terminal.
- while listening to a busy tone because the called party's terminal was busy.

Called/Busy Name is similar to the display provided for local on-switch calls, as well as for the DCS calls, with the following exceptions:

- Names longer than 15 characters are truncated; only the first 15 characters display.
- The number does not display unless QSIG VALU is enabled.

### **QSIG Name and Number Identification**

QSIG Name and Number Identification allows a switch to send and receive the calling number, calling name, connected number, and connected name.

You can administer “yes”, “no”, or “restricted.” Restricted means that DEFINITY ECS sends the information but sends it “presentation restricted,” which indicates to the receiving switch that the information should not be displayed. A received restricted name or number is included on the Call Detail Record (CDR). Due to current networking limitations, a received Restricted Calling Party Number displays. However, a received Restricted Connected Party Number or Calling/Connected Name is *not* displayed.

QSIG Name and Number Identification displays up to 15 characters for the calling and connected name and up to 15 digits for the calling and connected number across ISDN interfaces.

### **Transit switch information**

When DEFINITY ECS acts as a transit switch, the QSIG standards require it to pass on all supplementary service information that is not addressed to it. This includes name information. (A “transit” switch is a switch that routes an incoming call administered for Supplementary Services Protocol B to a trunk also administered for Supplementary Services Protocol B.) However, Basic Call Setup and number information is subject to modification by the transit switch. This means that trunk group administration on a transit switch does not override incoming name information, but may override incoming number information (as long as this does not lower the restriction on the information).

### **Example**

If a non-restricted calling name and number are received by a DEFINITY ECS acting as a transit switch, and if the outgoing trunk is administered for presentation restricted for both name and number, the number is passed on as “restricted” and name is passed on as “unrestricted.”

### **Tandem switch information**

However, in the case of tandemed calls (calls involving two ISDN trunks that are not both administered for Supplementary Service Protocol B), trunk group administration may override both incoming name and number information, as long as doing so does not lower the restriction on the information. For example, a tandemed call that comes in with restricted name information is sent out with restricted name information even if the outgoing trunk is administered for presentation unrestricted. However, non-restricted data is sent restricted if the trunk group administration is set for “presentation restricted.”

### ISDN numbering formats

Numbering is specified on the ISDN Public-Unknown-Numbering and/or ISDN Private-Numbering forms. The numbering form you use depends on how you administer the ISDN trunk group Numbering Format field.

However, if you format the Called Party Number with public numbering, the Calling/Connected Party Number is created in the public format even if you specify “private” on the ISDN trunk group form. This provides the caller or called party a number that can be used to reach the other party. Since the call routes through the public network, the public Calling/Connected Party Number is a more accurate address.

### Call Forwarding (Diversion)

Call Forwarding works over a QSIG network.

When a call has already been forwarded 3 times over a QSIG trunk, it is not forwarded again but instead terminates at the final forwarded-to terminal. Remote activation and deactivation of this feature are not supported.

### Call Offer

This feature is the QSIG equivalent of Call Waiting.

A Private Telecommunication Network (PTN) offers up to four ways of invoking QSIG Supplementary Service - Call Offer (SS-CO) (listed below). *DEFINITY ECS uses only the first way.*

- Network invocation (immediate) — the PTN automatically invokes SS-CO whenever the calling user makes a call to a user that is busy, if required by the service profile of the calling user.
- Consultation — the calling user, on being informed that a call has failed because it is busy at the destination and that SS-CO may be possible, is able, within a defined time period (consultation timer), to request invocation of SS-CO.
- Immediate invocation — the calling user is able to request invocation of SS-CO as part of the initial call set-up.
- Network invocation (delayed) — the network, having informed the calling user that a call has failed because it is busy at the destination, invokes SS-CO automatically unless the calling user initiates call clearing within a defined time period (automatic call offer invocation timer).

**DEFINITY ECS** The effect of QSIG SS-CO on the terminating end is similar to the DCS Call Waiting feature with the exception that for Call Waiting, the calling side (user or PBX) does not have to convey any special message to invoke the feature. The Call Waiting Termination feature is driven based on the terminating user (for instance, single line analog set user with Call Waiting enabled).

For QSIG Call Offer, DEFINITY takes advantage of the additional information available from the far end, if QSIG Call Offer invokes successfully, and provides similar information to the calling user as the Call Waiting feature provides for on internal calls, with the exception that the display update will be “offered” instead of “wait” to reflect invocation of QSIG Call Offer service.

On successful invocation of the QSIG Call Offer service, DEFINITY provides the following:

- To the busy analog set user, the same tone as Call Waiting Termination feature, or

- To the busy Multi call-appearance set (for instance, at least one call-appearance is busy for an active call and at least one call-appearance is available for incoming calls) user, the available appearance rings normally.

For incoming QSIG calls, the QSIG Call Offer service may use path retention which is a generic mechanism to retain the signaling connection so that the originating party can decide whether to invoke the supplementary service. The network connection can be retained for more than one of the supplementary services for which path retention has been invoked.

### Call Completion

Use this feature to provide QSIG Supplementary Service - Call Completion (SS-CC).

The Supplementary Service - Completion of Calls to Busy Subscribers (SS-CCBS) and Supplementary Service - Completion of Calls on No Reply (SS-CCNR) are the equivalent QSIG features of Automatic Callback On Busy and Automatic Callback on No Answer, respectively.

An analog voice terminal user activates SS-CCBS or SS-CCNR by pressing the Recall button or flashing the switchhook and then dialing the Automatic Callback (ACB) Activation feature access code. An analog user can activate only one ACB call at any given time.

A multiappearance voice terminal user can activate SS-CCBS or SS-CCNR for the number of ACB buttons assigned to the terminal.

### Call Transfer

QSIG Call Transfer is based on the current DEFINITY ECS Transfer and Trunk-to-Trunk Transfer features. QSIG Transfer signaling occurs as long as one of the calls involves a QSIG trunk between the two switches.

Once a call is transferred, the transferring switch is unnecessary. Additional Network Feature-Path Replacement (ANF-PR) is invoked automatically to connect the transferred call more efficiently in the private network. QSIG Call Transfer attempts to connect the two parties more efficiently and drops the unnecessary switches.

When you use this feature, you see no difference between QSIG Call Transfer and the standard DEFINITY ECS Transfer or Trunk-to-Trunk Transfer features.

QSIG Call Transfer differs from DCS Call Transfer in that additional call information is available for the connected parties after the transfer completes.

Depending upon QSIG Identification Services administration, the connected parties' displays show each other's name and/or number. If the name and number are not available, the display of a connected party updates with the name of the involved trunk group.

### QSIG Centralized AUDIX

QSIG allows users on a remote node to "cover" to an AUDIX on another node. The original calling and called party information is provided to AUDIX so that each is identified properly during message recording/retrieval.

To use centralized AUDIX, you must use QSIG Diversion. On a remote switch, the call covers using Diversion to the hunt group assigned to AUDIX on the host switch. Then the host switch sends all the appropriate information to AUDIX so that AUDIX correctly answers the call.

### Other QSIG Centralized Messaging

With a QSIG centralized messaging system, the remote switch is called a served user switch. When an AUDIX system supports a QSIG network, the served user switch does not need to be a DEFINITY ECS, but the host, or message center, switch must be.

QSIG allows a DEFINITY switch to be a served user switch of a non-DEFINITY message center switch. Therefore, the messaging system connected to the message center switch can serve the DEFINITY switch if that messaging system has a QSIG interface. Octel Serenade is such a messaging system.

The users on a served user switch in a QSIG messaging network may use only one message center. However, the message center switch may served multiple served user switches, via DCS as well as QSIG.

### What you get with QSIG Centralized AUDIX

- Calls to users on a remote PBX cover or forward correctly and are answered by AUDIX.
  - ~ With a personalized greeting
  - ~ With appropriate busy or not available greeting, depending upon the reason the call was redirected
  - ~ Caller can leave a message for the called party
- Once a subscriber logs into AUDIX (by dialing the AUDIX number and entering the extension and password), the subscriber can perform the following activities:
  - ~ Listen to or delete messages (voice, fax, or text)
  - ~ Leave a message for other subscribers on the same AUDIX without calling them
  - ~ Forward a message to another subscriber on the same AUDIX
  - ~ Access the AUDIX directory to address a message (\*A)
  - ~ Access the AUDIX directory to find a subscriber's extension (\*\*N)
  - ~ Record or change your greeting
  - ~ Transfer out of AUDIX (\*T or 0)
- Message Waiting Indication (typically a lamp, but may be a stutter dial tone or display) indicates the presence of new messages. |

If another vendor's switch, acting as a served user switch, does not provide this functionality, the call will not cover properly to a DEFINITY ECS message center switch complex.

- When a remote subscriber logs in to AUDIX from the subscriber's phone, the subscriber does not need to enter his or her extension. Instead of entering the extension, \*, the password, and \*, the subscriber can enter \*, the password, and then #.

### What you *do not* get

- Leave Word Calling does not work between served user switches, though users on the same switch can use it.
- Transfer into AUDIX does not work from a served user switch.

**Path Retention**

Path Retention is a generic mechanism that can be used by supplementary services during call establishment.

The Originating PBX invokes path retention for one supplementary service or for several simultaneous supplementary services. Invoking a particular supplementary service means retaining the network connection if the Terminating PBX encounters the appropriate conditions. The Originating PBX is informed of the reason for retaining the connection. It then decides (for example, by consulting the calling user) whether to invoke the supplementary service. Under some circumstances in which the network connection is retained, more than one of the supplementary services for which path retention has been invoked may be applicable.

Successive retentions of the network connection by the Terminating PBX following a single path-retention invocation by the Originating PBX are possible. This is a result of different conditions being encountered at the Terminating PBX. When an attempt is made to invoke a supplementary service for which the network connection has been retained, a further condition can be encountered that can cause the network connection to be retained again for the same or a different supplementary service.

Path retention is specified in terms of a Path Retention entity existing within the Coordination Function at the Originating PBX and at the Terminating PBX.

**Supplementary Services with Rerouting****QSIG Path Replacement**

DEFINITY ECS provides QSIG Additional Network Feature Path Replacement (ANF-PR) as defined in ISO/IEC 13863 and 13874. With this feature, a call's connections between switches in a private network can be replaced with new connections while the call is active.

ANF-PR is invoked when a call is transferred and improvements may be made in the routes. For example, after a call is transferred, the two parties on the transferred call can be connected directly and the unnecessary trunks are dropped off the call. The routing administered at the endpoints allows for a more efficient route connection.

ANF-PR selects the best route based on the preference assigned to routes in the Route Pattern form. Least cost Supplementary Service B (SSB) routes must be first, followed by more expensive routes.

**Note:** When routes to SSB trunks are included with routes to non-SSB trunks, SSB trunks must appear first on the Route Pattern form. This is because as soon as ANF-PR encounters a non-SSB trunk in the route pattern, it stops looking.

Class of Restriction (COR) and Facility Restriction Levels (FRL) are adhered to in routing calls. ANF-PR is not invoked on data calls because there is a period of time when information can be lost.

**QSIG Call Forwarding (Diversion with Rerouting)**

This feature allows a forwarded call can be rerouted in a private network to find a more cost-effective or resource-efficient path.

## VALU Called/Busy Number

VALU (Value-Added LUcent) sends and displays the called party's number to the calling party during alerting. It updates the display to "connected number" when the called party answers the call. It also sends and displays a busy party's number. This serves to confirm to the caller that he or she dialed the correct number.

The Called/Busy Number feature is an extension to QSIG Called/Busy Name. For additional information, see [QSIG Name and Number Identification](#) (page 318).

The Called/Busy Number never displays alone; it displays only if the Called/Busy Name is available (for instance, received from the far end and marked "presentation allowed"). In contrast, upon receipt of a Calling Number without a Calling Name, the number displays with the words "CALL FROM."

## QSIG Protocols

QSIG signaling protocols are based on ITU-T (formerly CCITT) Q.931 access protocols across the Q reference point. QSIG standards are also supported by the ISDN Private Networking Specification (IPNS) Forum. DEFINITY ECS QSIG complies with a number of international regulations. For example, QSIG:

- Complies with ISO standard 11572 for layer 3 to support private-network connectivity.
- Meets requirements for the ISO Private Network Generic Functional Procedures (ISO standard 11582) for call-related supplementary services.
- Supports call-related supplementary service transport, Abstract Syntax Notation 1 (ASN.1)/Basic Encoding Rules (BER), and Remote Operation Service Element (ROSE) services/protocols.
- Provides the Name and Number Identification supplementary service as defined by ISO Standards 13864, 13868, and 11572.
- Provides Call Forwarding (Diversion) as defined by ISO Standards 13872 and 13873.
- Provides Call Transfer as defined by ISO Standards 13865 and 13869.

## Temporary Signaling Connection (TSCs)

A Temporary Signaling Connection (TSC) provides a temporary signaling path through ISDN switches for exchanging supplementary service information (for example, exchange Facility Information Elements in call control messages, FACILITY messages, or a combination of both on ISDN D-channels. There is no B-channel related to the connection; no data or voice transmissions take place.

There are two types of temporary signaling connections:

- Call Associated (CA-TSC)
- Non-Call Associated (NCA-TSC)

### CA-TSC (DCS only)

A CA-TSC refers to a service for exchanging USER INFORMATION messages associated with an ISDN B-channel connection by the call reference value of the call

control data packets. On DEFINITY ECS, this type of TSC is used only for DCS features on ISDN-PRI Signaling Groups administered with Supplementary Service Protocol *a*.

### NCA-TSC

An NCA-TSC is a connection not related with any ISDN B-channel connections. DEFINITY ECS supports two types of NCA-TSC that conform to two different protocol standards:

- The *non-QSIG* AT&T type of NCA-TSC is used for the DCS over ISDN-PRI D-channel and DCS AUDIX applications. Only ISDN-PRI Signaling Groups administered with Supplementary Service Protocol *a* support AT&T NCA-TSCs. For further information, see [page 281](#).
- The *QSIG* type of NCA-TSC is used for certain QSIG features such as Call Completion (Automatic Call Back). This type of NCA-TSC is referred to in the QSIG protocol standards as a Call-Independent Signaling Connection (CISC). Only ISDN-PRI Signaling Groups administered with Supplementary Service Protocol *b* support QSIG NCA-TSCs. In addition, BRI trunk D-channels support QSIG NCA-TSCs.

### QSIG NCA-TSC

An NCA-TSC is not administered ahead of time, but is invoked dynamically by the QSIG feature that needs it. Some QSIG features remove the NCA-TSC when it is no longer needed; others leave the NCA-TSC active for a longer period of time.

DEFINITY ECS does not provide gateway functionality between a QSIG NCA-TSC and an AT&T NCA-TSC. For example, although a call can be routed from a DCS network into a QSIG network, it is not possible for the caller in this case to invoke an automatic callback.

## Setting Up QSIG

### Steps

#### Begin

- 1 Verify with your sales representative or project manager what QSIG capabilities the system should have. The following capabilities apply:

**Table 12. QSIG capabilities**

<i>Capability</i>	<i>Cross-Networking Features</i>
QSIG Basic	<ul style="list-style-type: none"> <li>• Calling/Connected Number</li> <li>• Calling Number Identification</li> <li>• Transit Counter</li> </ul>
QSIG Supplementary Service	<ul style="list-style-type: none"> <li>• Called/Busy Name</li> <li>• Call Completion</li> <li>• Call Forwarding (Diversion)</li> <li>• Calling Name Identification</li> <li>• Call Offer</li> <li>• Call Transfer</li> <li>• Message Waiting Indication</li> </ul>
QSIG Supplementary Service with Rerouting	<ul style="list-style-type: none"> <li>• Call Forwarding (Diversion) with Rerouting</li> <li>• Path Replacement</li> </ul>
VALU Called/Busy Number	<ul style="list-style-type: none"> <li>• Called/Busy Number Display</li> </ul>

- 2 Determine whether the system is using ISDN-PRI, ISDN-BRI, or ATM for the QSIG network connections. Your sales representative or project manager should know this. (If the system is using ATM trunking for QSIG, see *DEFINITY ECS R7 - ATM Installation, Upgrades, and Administration*, 555-233-106.)
- 3 Enter **change system-parameters customer-options** on the command line of your system administration screen.
- 4 On page 1, verify fields as follows:
  - ~ **G3 Version** field is **V6** or later.
- 5 On page 2, verify fields as follows:
  - If the system is using ISDN-BRI for QSIG:
    - ~ **ISDN-BRI Trunks** field is **y**.
  - If the system is using ISDN-PRI for QSIG:
    - ~ **ISDN-PRI** field is **y**.

If the system is using ATM for QSIG:

~ **Async. Transfer Mode (ATM) Trunking** field is **y**.

If the system is using QSIG Supplementary Services with or without Rerouting:

~ **Restrict Call Forward Off Net** field is **n**.

6 On page 4, verify fields as follows:

~ **Basic Call Setup** field is **y**.

If the system is using QSIG Supplementary Services:

~ **Basic Supplementary Services** field is **y**.

If the system is using QSIG Supplementary Services with Rerouting:

~ **Supplementary Services with Rerouting** field is **y**.

7 (For ISDN-PRI only). Administer or check the QSIG DS-1 circuit pack (see Appendix A). Check for the following field entries:

- Connect field - **pbx**
- Interface - **peer-master** or **peer-slave**
- Peer protocol - **q-sig**
- Signaling mode - **isdn-pri** or **isdn-ext**
- Channel Numbering - **sequential** or **timeslot** (This item must match between the local switch and receiving switch.)

8 (For ISDN-BRI only). Administer or check the QSIG ISDN-BRI circuit pack (see Appendix A).

9 Administer or check the QSIG ISDN trunk group(s) (PRI or BRI) connected to the DS-1 or BRI circuit pack (see Appendix A). Check for the following field entries on Page 1:

- Group type - **isdn**
- Supplementary service protocol- **b** or **d** where:

b	ISO QSIG standards (including the ETSI Version 2 and European Computer Manufacturer's Association (ECMA) standards aligned with the ISO standards)
d	European Computer Manufacturer's Association (ECMA) QSIG private network (supports only Name Identification and Additional Network Feature Transit Counter (ANF-TC))

(For Supplementary Services with or without Rerouting)

- Outgoing Display? - **y**
- QSIG Value-Added Lucent - **y**

On Page 2 (Also for Supplementary Services with or without Rerouting):

- Hop Dgt - **y**

- Disconnect Supervision - **y**
- Numbering Format - **public, private, unknown, unk-pvt**
- NCA - TSC Trunk Member - The trunk member whose D-channel routes tandem NCA-TSCs.
- Send Called/Busy/Connected Number - **y**
- Send Calling Number - **y**
- Send Name - **y**

*End*

---

### Setting Up QSIG Supplementary Services

#### Steps

---

##### *Begin*

- 1 Administer or check the ISDN Numbering - Public/Unknown screen (see Appendix A).
- 2 Administer or check the ISDN Numbering - Private screen (see Appendix A).
- 3 Administer or check the Signaling Group screen (see Appendix A). Check for the following field entries to ensure proper operation of Call Completion:
  - Supplementary Service Protocol - **b**
  - Max Number of NCA TSC - greater than 0
- 4 Administer or check the Route Pattern screen. Check for the following field entries to ensure proper operation of Call Completion and Transit Counter:
  - TSC - **y** (necessary if switch is a transit node for TSC)
  - Hop Lmt - between 1 and 32
- 5 Administer or check the Feature-Related System Parameters screen. Check for the following field entries to ensure proper operation of Call Completion and Call Transfer:
  - Trunk-to-Trunk Transfer - **y**
  - QSIG TSC Extension - valid extension number to serve as TSC for both incoming and outgoing QSIG network calls.
  - Automatic Callback - No Answer Timeout Interval (rings) - enter the number of times, 2 to 9, a callback call should ring at the caller's phone before the callback is cancelled
  - (For AUDIX/Octel Serenade support only) MWI - Number of Digits per AUDIX Subscriber - enter the number of digits in messaging subscriber extensions, if any. The value in this field must match the value of the **Extension Length** field on the Switch Interface Administration form of AUDIX.
  - (For AUDIX/Octel Serenade support only) Unknown numbers internal for AUDIX - **y** if, when the switch cannot identify a calling number as internal or external, the switch should treat it as internal for AUDIX use.

6 Administer or check the Class of Service (COS) screen for each COS that may be using the QSIG network. Check for the following field entries to ensure proper operation of Call Completion, Call Offer, and Call Forward:

- Restrict Call Forward Off-Net - **y**
- Auto Callback- **y**
- QSIG Call Offer Originations - **y**

*End*

---

#### Related Phone Administration

As you set up each user's phone, QSIG networking features allow the following.

- QSIG displays the user's name as entered in the Name field on the Station screen, both on the display of another networked phone when called by that user or when calling that user.
- QSIG allows call waiting from networked phone calls if you set the Call Waiting Indication field to **y**.
- QSIG allows auto callback from networked phones if you create an auto callback button for the user.

#### Related Hunt Group Administration

As you set up each hunt group, you must enter either **grp-name** or **mbr-name** in the ISDN Caller Disp field. This entry determines which of the following the system displays on a QSIG networked phone that calls the hunt group:

- The hunt group name/extension
- The hunt group member's name/extension

#### Related Administration of Terminating Extension Groups

As you set up each terminating extension group, you must enter either **grp-name** or **mbr-name** in the ISDN Caller Disp field. This entry determines which of the following the system displays on a QSIG networked phone that calls the terminating extension group:

- The group name/extension
- The group member's name/extension

#### Related Administration of AUDIX/Message Centers

For AUDIX administration generally, see one of the following:

- *Installation and Switch Administration for the DEFINITY AUDIX System R4.0*, 585-300-122, which appears on the CD-ROM entitled *DEFINITY AUDIX System R4.0 Documents*, 585-300-803.
- *Intuity Messaging Solutions LAN Integration with DEFINITY ECS*, 585-313-602.
- Switch integration section of the CD-ROM entitled *Intuity Messaging Solutions Release 5 Documentation*, 585-313-803

**Note:** Set up QSIG TSCs before you administer messaging. See [Call Completion](#) (page 320).

For Octel Serenade administration generally, see the Octel Serenade documentation:

## Steps

---

### *Begin*

- 1 (Local node message center switch only) Complete the Processor Channel Assignment screen (see Appendix A).
- 2 (Local node message center switch only) Complete the Message Waiting Indication Subscriber Number Prefixes screen (see Appendix A).
- 3 (Local node message center switch only) Complete the Station screen as specified in the Intuity or DEFINITY AUDIX documentation. Ensure that Page 2 of the screen has the following field entry:
  - MWI Served User Type - **qsig-mwi**
- 4 (Served user switch only) On the Hunt Group screen, set the following fields for the AUDIX hunt group:
  - Message Center - **qsig-mwi**
  - AUDIX Number - the desired number
  - Routing Digits (for example, AAR/ARS Access Code) - the desired number.

Digits entered in these fields should be selected so that the processing of these digits by the served user switch results in a call being redirected to the message center switch by an ISDN-PRI supplementary service protocol “b” facility. For example, if the message center switch is a DEFINITY ECS, the digits entered should reroute the call to the AUDIX hunt group on the message center DEFINITY ECS switch.

- Calling Party Number to AUDIX?- **y**

### *End*

---

## QSIG Interactions

### Call Forwarding (Diversion)

The interactions that apply to the standard DEFINITY ECS Call Forwarding features also apply to Call Forwarding (Diversion) with QSIG. The following are additional interactions.

- Alternate Facilities Restriction Levels

The AFRL of the original call is the AFRL used for Call Forwarding with Reroute.

- Authorization Codes

Call Forwarding with Reroute is denied to calls that require an Authorization Code.

- Automatic Alternate Routing and Automatic Route Selection  
Call Forwarding with Reroute uses AAR and ARS to reroute the original call.
- Call Detail Recording  
Call Forwarding with Reroute is denied to calls that require Forced Entry of Account Codes.
- Call Transfer  
When a forwarded call transfers, the forwarding indication displays to the caller until the call is answered. This display includes the trunk group name and word “forward.” When the call is answered, the word “forward” is removed and the name and number of the answering party displays.
- Distributed Communications Systems  
Call Forwarding feature transparency does not exist on calls tandemed between a QSIG (Supplementary Service protocol b) network and a traditional DCS network. However, the basic call continues.
- Facility Restriction Levels and Traveling Class Marks  
The FRL (and TCM) of the original call is the FRL used for Call Forwarding with Reroute.
- Forwarding and Coverage  
If a coverage point is a number that routes over an ISDN (Supplementary Service protocol b) trunk, QSIG diversion information is not passed to the coverage switch.
- QSIG Name and Number Identification  
Availability of name and/or number display at the originating and diverted-to users depends upon how QSIG Name and Number Identification has been administered for the switches involved.
- Terminating Call has Coverage Active  
If a call is forwarded off switch, the terminating switch has call coverage activated, and the criteria are met, the call does not route to the forwarding party’s coverage path. It routes to the terminating station’s coverage path.

## Call Transfer

- Call Forwarding (Diversion)  
When a call is forwarded and transferred or transferred and forwarded, the forwarding indication displays to the caller until the call is answered. This display includes the trunk group name and word “forward.” When the call is answered, the word “forward” is removed and the name and number of the answering party displays.
- Distributed Communications Systems  
The only DCS transparency that exists when a call is transferred in a DCS network and passed over a QSIG administered trunk is calling name.
- QSIG Path Replacement  
ANF-PR is invoked whenever a QSIG transferred call is answered.

- QSIG Name and Number Identification

Availability of name and/or number display at the connected parties depends upon how QSIG Name and Number Identification has been administered for the switches involved.

**QSIG Name and Number Identification interactions**

- Distributed Communications Systems (DCS)

DEFINITY ECS can display DCS called name/number information or ISDN connected name/number information in a DCS (ISDN) network.

When an incoming ISDN call is routed back out over a non-ISDN trunk group, DEFINITY ECS can send the name of the non-ISDN trunk group as the connected name if the **Send Non-ISDN Trunk Group Name as Connected Name** field is **y** on the Feature-Related System-Parameters form.

**Path Replacement**

- Basic Call Management System

If the old connection is monitored by a BCMS entity, ANF-PR is blocked due to BCMS measurements.

- Call Detail Recording

Codes for recording the new connections of ANF-PR calls are code J for incoming trunk calls and code K for outgoing trunk calls. When a path is replaced, you also may receive records for short-duration calls that are not directly linked to the J and K records.

- Call Management System

If the old connection is monitored by a CMS entity, ANF-PR is blocked due to CMS measurements.

- Call Vectoring

- A transferred call that terminates at a vector and is answered cannot have its path replaced.

- Data-Call Setup

A data call is denied ANF-PR.

- Data Privacy

If Data Privacy is active, ANF-PR is denied.

- Data Restriction

If Data Restriction is active, ANF-PR is denied.

- Malicious Call Trace

If MCT is active, ANF-PR is denied.

- Recorded Announcement

A call that is receiving a recorded announcement cannot have its path replaced.

- Trunk Access Code

The paths of outgoing calls made using a TAC are not replaced.

- Voice Terminals

Voice terminal displays that show trunk group name should update with new trunk group information after ANF-PR occurs. Calling and connected party displays are not disturbed when ANF-PR takes place if the original display shows the connected party name, number, or both.

### Transit Counter

- Call Forwarding (Diversion)

When call forwarding (Diversion) occurs and the ANF-TC feature is enabled, the transit counter is set to zero.

- ISDN Trunk Group Administration

If all of the conditions are satisfied for both the Tandem Hop Limitation and ANF-TC, ANF-TC takes precedence. In situations where DEFINITY ECS is an Incoming or Outgoing Gateway, either makes use of the hop count/transit count information provided by the other.

- Trunk Access Code

ANF-TC does not apply to TAC calls.

### Call Completion

- Adjunct Switch Applications Interface (ASAI)

ASAI cannot invoke/initiate QSIG-CC.

- Attendant Calling Waiting and Call Waiting Termination

If you activate QSIG SS-CC to a single line voice terminal, the Attendant Call Waiting and Call Waiting Termination features are denied.

- Attendant Console Group

You cannot activate QSIG SS-CC toward the attendant console group or towards the individual attendant.

- Attendant Control of Trunk Group Access

You cannot activate QSIG SS-CC if the call uses a controlled trunk group.

- AUDIX

You cannot activate QSIG SS-CC towards AUDIX. SS-CC to any transferred-to station is not allowed.

- Automatic Call Distribution (ACD)

You cannot activate QSIG SS-CC towards a voice terminal after dialing the ACD group extension. It is possible to invoke SS-CC towards a station when dialing the individual's extension number. You can activate SS-CC from any ACD agent.

- Bridged Call Appearance

You cannot activate QSIG SS-CC from a bridged call appearance. When a call originates from a primary extension number, the return call notification rings at all bridged call appearances.

- **Call Coverage**

QSIG SS-CC requests are always activated at the principal user and not coverage points. Similar to ACB, QSIG SS-CC Call Completion calls to the called user can redirect to coverage.
- **Call Forwarding**

You cannot activate SS-CCBS or SS-CCNR towards a called station that has Call Forwarding enabled.
- **Call Pickup**

On recall at the originating side, a group member cannot answer a QSIG SS-CC call for another group member.
- **Call Waiting**

Call Waiting is denied when QSIG SS-CC is activated to the single-line voice terminal.
- **Conference and Transfer**

You cannot activate QSIG SS-CC towards a transferred-to party.
- **Hold**

A single-line voice terminal cannot receive a QSIG SS-CC call while it has a call on hold.
- **Hotline Service**

A hotline service cannot request SS-CC.
- **Internal Automatic Answer (IAA)**

If the IAA feature is enabled, QSIG SS-CC calls are not answered automatically.
- **Manual Originating Line Service**

A manual originating service cannot request QSIG SS-CC.
- **Multimedia Endpoints**

You cannot activate QSIG-CC towards multimedia data endpoints.
- **Outgoing Trunk Queueing**

Outgoing Trunk Queueing cannot be invoked after the calling party answers the priority call back call and no trunks are available. The SS-CCBS and SS-CCNR request cancels at both PBXs.
- **Termination Extension Group (TEG)**

You cannot activate QSIG SS-CC towards a TEG extension, but QSIG-CC requests can be activated towards a single member in the group.
- **Uniform Call Distribution and Direct Department Calling**

You cannot activate QSIG SS-CC towards a uniform call distribution group or a direct department calling group extension, but you can activate towards a single member in the group.

**Message Waiting Indications**

- Vector Directory Number (VDN)  
You cannot activate SS-CC towards a VDN extension.
- AAR/ARS Partitioning  
All QSIG MWI messages use Partition Group 1 for routing.
- Alternate Facilities Restriction Levels  
QSIG MWI messages have unrestricted COR.
- DCP and Mode Code links to AUDIX  
QSIG MWI does not work with the DEFINITY AUDIX that emulates a DCP phone. A Prologix that communicates with AUDIX by using mode codes cannot be a QSIG message center switch complex.
- Authorization Codes  
The authorization codes do not block routing because the routing of TSCs used for QSIG MWI uses FRL 7.
- Automatic Alternate Routing (AAR)  
AAR may be used to route the QSIG TSCs.
- Automatic Route Selection (ARS)  
ARS may be used to route the QSIG TSCs.
- Call Coverage Features  
The served user switch uses call coverage paths to route calls to users in the served user switch to the AUDIX hunt group on the Message Center switch.
- Class of Restriction  
QSIG MWI messages use the default COR of unrestricted.
- Class of Service  
QSIG MWI messages use the default COS of unrestricted.
- Facility Restriction Levels and Traveling Class Marks  
A QSIG MWI TSC always uses FRL 7 (unrestricted).
- Generalized Route Selection  
GRS uses the “TSC” column on the Route Pattern form to select a preference for carrying QSIG MWI TSCs.
- ISDN - QSIG - BRI  
QSIG MWI is dependent on QSIG TSCs. QSIG MWI is possible over QSIG BRI lines.
- Message Sequence Tracer  
MST traces QSIG MWI messages.

- Off-Premises Station

If a DS1 is used to implement an off-premises station, QSIG MWI does not work with the off-premises station. DS1 off-premise stations do not receive system message waiting indicators.

- Uniform Dial Plan (UDP)

It is possible to route QSIG MWI messages by using UDP.

#### **Called/Busy Name**

- Adjunct Switch Applications Interface (ASAI)

A Connected Number is sent in the Connected Event to ASAI adjuncts.

Therefore, upon receipt of a Called/Busy Number, it is stored in such a way that it is not be sent accidentally as a Connected Number if no actual Connected Number is received in the CONNECT message when the call is answered.

- ISDN - QSIG

Call Diversion (including Reroute)

Both the Called Name and Called Number are sent to the ringing/busy extension.

Call Transfer

As is done for the Called Name, the Called Number of a ringing party is sent to the transferred-to party in the QSIG "Call Transfer Complete" message.

- Message Sequence Tracer (MST)

MST records facility IEs containing Manufacturer Specific Information (MSI), but is not yet able to decode this information.



This Appendix briefly discusses issues related to system security for DEFINITY ECS in a TCP/IP network environment.

---

## Network Security Issues

This section describes a strategy to ensure the security of an intranet that is connected to DEFINITY ECS R7 systems.

### Overview

The TCP/IP connectivity available with Release 7 of DEFINITY ECS makes it possible to connect one or more DEFINITY ECS systems in a network that includes connections to a company's existing data network (LAN or intranet). This integration of networks introduces the possibility of unauthorized access — to the DEFINITY network through the LAN/intranet and to the LAN/intranet through the DEFINITY network.

#### Security concerns

Security can mean many different things. The strategy described here focuses on three key concerns from a customer perspective:

- 1 How can a customer network be protected from unauthorized outside access through a DEFINITY ECS? That is, how can a hacker be prevented from dialing into a DEFINITY ECS and getting on the customer LAN?
- 2 How can a customer network be protected from unauthorized access by Lucent services personnel?
- 3 How can a DEFINITY ECS be protected from unauthorized access through the customer LAN?

#### Security solutions

The first and most important line of defense in any security strategy is *access control*. Damage to the network or theft of proprietary information by hackers can be prevented by completely denying access to unauthorized users.

Access control can be provided by three means:

- network topology
- network administration
- authentication

A second line of defense can be thought of as *damage control* — how to limit the amount of damage that can be done if someone does gain unauthorized access to the system? Damage control can be provided by application restrictions.

Each of these control methods is described below.

### Access control — network topology

Network topology refers to how the DEFINITY ECS network is connected to the customer's network.

#### Private network

One option to restrict access is to make sure that the DEFINITY ECS network is not connected to any other network; that is, the DEFINITY ECS network is private. This topology clearly solves all three access security concerns mentioned above. However, a private network is not an option for all customers.

#### Private segment

Another topology is to put the DEFINITY ECS network on a private segment, behind a router or a firewall. This approach can also solve all three concerns above by implementing packet filtering in the router/firewall such that only legitimate traffic can pass through.

#### Open network

One other topology that may be chosen is a completely open network, where DEFINITY ECS nodes are placed on the customer network just like any other piece of data networking equipment. An open network topology addresses none of the three security concerns above, and other methods of access control must be used for these installations.

### Access control — network administration

Network administration refers to how a DEFINITY ECS (specifically, the C-LAN circuit pack) is administered in terms of dial-up PPP ports and routing information. A carefully administered system has only dialup ports in service for DCS and adjunct sessions that will be established at boot time. This means that normally there will not be any ports available for a hacker to dial into. Additionally, the C-LAN circuit pack should be administered only with routes specific to the DCS and adjunct nodes. This ensures that anyone getting into a DEFINITY ECS can only get to other DCS or adjunct nodes, not anywhere else on the customer network. Careful administration will address concerns #1 and #2 above.

Note that no new access to the system access terminal (SAT), such as network-based SAT, is introduced in Release 7. As in earlier releases of DEFINITY ECS, all port and route administration can be done only via the SAT, and all changes are logged.

### Access control — authentication

Authentication also plays a role in providing access control to dial-up PPP ports. All of these ports can be protected by Challenge Handshake Authentication Protocol (CHAP). This provides an extra level of assurance that no unauthorized user will be able to connect to a PPP port on C-LAN.

### Damage control — application restrictions

Release 7 provides damage control by what can be termed *application restrictions*. This simply means that DEFINITY ECS R7 has been designed to support only specific applications; that is, DCS and adjuncts. Other applications that could present

security risks have been deliberately disabled. Specifically, there is no support for *telnet* or *rlogin* into or out of a DEFINITY ECS, making it difficult for anyone to maneuver between the DEFINITY ECS network and the customer network.

Additionally, because of the application restrictions, little damage can be done by someone attempting to hack into a DEFINITY ECS from the customer network (concern #3). It would be very difficult, via the network, to modify administration or perpetrate toll fraud. At worst, a hacker could cause a temporary interruption of DCS, CMS, or Intuity connections.

### In Summary

All three security concerns presented above can be addressed by a combination of one or more of the security methods described here. Probably the two most important methods to prevent unauthorized access to a network are:

- 1 Choose a network topology for the DEFINITY ECS network that satisfies security needs.
- 2 Carefully administer the DEFINITY ECS network to minimize the possibility of the LAN or intranet being accessed by unauthorized personnel.



# D Capacities Issues

This Appendix briefly discusses issues related system capacities and performance for DEFINITY ECS in a TCP/IP network environment.

---

## Capacities and Performance

This section provides performance and traffic configuration guidelines for DEFINITY ECS Release 7 in a LAN/WAN environment. It describes how to measure the limits necessary to configure R7 DEFINITY systems to meet customers' requirements.

Performance and traffic limits are described for the new C-LAN (TN799) circuit pack, which provides interswitch and switch-to-adjunct communication via TCP/IP, and for the new NetPkt (TN794) circuit pack. These are the only two system elements considered in this chapter. Performance and traffic limits for other DEFINITY elements apply in addition to the limits imposed by these new elements. See *DEFINITY ECS System Description*, 555-230-211, for more information about performance and traffic limits.

### C-LAN Circuit Pack

The C-LAN (TN799) circuit pack provides TCP/IP connectivity via point to point (ppp) or 10BaseT ethernet LAN connections. This section describes a method for determining the number of C-LAN circuit packs required to handle a given amount of traffic over a connection. It also gives guidelines for occupancy limits to prevent network delays.

#### Data rates

The Call Management System (CMS) provides Automatic Call Distribution (ACD) customers with realtime and historical reports of activities within the ACD. Intuity AUDIX provides voice mail and related services as an adjunct to the DEFINITY ECS. The Distributed Communications System (DCS) provides feature transparency for selected features among switches connected in a network.

Interswitch DCS connections and connections to CMS and Intuity AUDIX adjuncts all carry a certain amount of data to support each call. These data transmissions have traditionally passed over an X.25 link between the switches or between the switch and the adjunct. C-LAN enables this information exchange to take place over a TCP/IP link.

The following table gives worst-case data rates in packets per call and in packets per second per 1000 busy-hour calls (BHC) — assuming 250 bytes per packet — experienced for DCS, CMS, and Intuity AUDIX.

<b>Worst Case Data Rates</b>	<b>Packets per Call</b>	<b>Packets per second per 1000BHC</b>
CMS	3.5	1
Intuity AUDIX	1.9	0.5
DCS	11	3

**C-LAN Capacity and Latency**

C-LAN has been tested to have a capacity of about 255 packets per second. Queueing theory suggests that in order to minimize delay or latency, these kinds of devices should not be run at more than about 85% occupancy. This means that the capacity of the C-LAN should be limited to about *200 packet per second*.

**C-LAN Capacity Worksheet**

The following worksheet should be used to determine the number of C-LAN circuit packs that should be used in a DEFINITY ECS.

<b>Col 1 Connection Type</b>	<b>Col 2 Calls/hr (in thousands)</b>	<b>Col 3 Pkts/sec/ 1000 BHC</b>	<b>Col 2 X Col 3 (Pkts/sec)</b>
CMS		1	
Intuity		0.5	
DCS		3	
SUM			

For example, at the maximal call rate of 20,000 calls per hour for smaller switches, one C-LAN circuit pack is easily sufficient:  $[20 \times (1 + 0.5 + 3)] = 90$  packets per second.

**C-LAN Network Delay**

For ethernet LAN connections there is a potential for queueing delays with heavy traffic in switches, routers, bridges, and hubs. For shared LANS, ethernet occupancy must be limited to about 0.35 to meet DEFINITY design criteria. For switched LANs, occupancy can usually be significantly higher.

For either shared or switched LANs, network occupancy should be kept at a level such that the end-to-end delay does not exceed 500 ms.

# E C-LAN Installation

This chapter provides instructions for installing and making the physical connections to the circuit packs that are new for R7 — the C-LAN (TN799) and the NetPkt (TN794) circuit packs. The C-LAN circuit pack is optional for R7 but required for TCP/IP connectivity in all switch models. The NetPkt circuit pack is required for R7 in the si model only.

These instructions are also included in the upgrades and installation documents for each switch model. They are duplicated here for convenience and completeness.

---

## Overview

Systems in a DCS network are interconnected by both tie trunks (for voice communications) and data links (for control and transparent feature information). Various DS1 interface circuit packs (including TN464C, TN767C, TN722, and TN760) provide the voice-communications interface. For TCP/IP connectivity, the data-link interface is provided by a TN799 C-LAN circuit pack.

The C-LAN handles the data-link signaling information in one of two configurations; either 10BaseT ethernet or point-to-point (ppp).

- In the ethernet configuration, the C-LAN passes the signaling information over a separate 10BaseT TCP/IP network, usually via a hub. For this configuration, install the C-LAN circuit pack and connect the appropriate pins of the C-LAN I/O field to the hub as described below.
- In the ppp configuration, the C-LAN passes the data-link signaling to the DS1 for inclusion in the same DS1 bit stream as the DCS voice transmissions. For this configuration, install the C-LAN circuit pack; no other connections are needed.

In both configurations, the appropriate DS1 circuit packs must be installed if they are not already present.

## Install the C-LAN Circuit Pack

The following sections describe the steps for installing the C-LAN circuit pack.

**Insert C-LAN Circuit Packs**

TCP/IP connections (10BaseT ethernet or ppp) require a TN799 C-LAN circuit pack. Complete the following steps to install these circuit packs.

- 1 Determine the carrier/slot assignments of the circuit packs to be added. Both types of circuit pack can go into any port slot with the following exceptions —  
The C-LAN circuit pack cannot be installed in the A carrier for
  - ~ the r model
  - ~ a duplicated si model
- 2 Insert the circuit packs into the slots specified in step 1. You do not need to power down the cabinet to install a C-LAN circuit pack.

**Administer the C-LAN Bus Bridge for csi models**

For the *csi model only*, complete the following steps to administer the Bus Bridge for the new C-LAN circuit pack.

**Note:** If there are 2 C-LAN circuit packs installed in this csi switch, administer the Bus Bridge for *only one* of them.

- 1 Enter **change system-parameters maintenance**.
- 2 At the bottom of Page 2, enter **y** in the Packet Intf2 field.
- 3 Enter the location of the C-LAN circuit pack in the Bus Bridge field (for example, 01a08 for cabinet 1, carrier A, and slot 8).
- 4 Enter the port bandwidths or use the defaults in the Pt0, Pt1, and Pt2 Inter-Board Link Timeslots fields.
- 5 Submit the form.
- 6 Verify that the bus bridge LED is lit on the C-LAN circuit pack. This indicates that the packet bus is enabled.

**Test the Packet Bus and C-LAN Circuit Pack**

To test the packet bus and the TN799 C-LAN circuit pack, the cabinet needs a TN771D Maintenance/Test circuit pack.


- 1 If there is no TN771D circuit pack in the cabinet, place one in a port slot.
- 2 Enter **test pkt port-network 1 long**. For more information about these tests, refer to the “test pkt command” section in the maintenance book.
- 3 If the TN771D circuit pack was already in the cabinet, leave it there.
- 4 If you added the TN771D circuit pack to the cabinet in order to test the TN799 circuit pack, remove it from the cabinet.

**Install C-LAN Cables****Hub connection**

Install a cable from the backplane peripheral connector to a hub or wall field as required. See [Figure 6](#).

- 1 Connect the 259A connector to the backplane connector of the port slot containing the C-LAN circuit pack. For a pinout of the TN799 connector, see [Table 13](#).
- 2 Connect the D8W cable between the 259A connector and a 10BaseT hub.

**Figure 6. Cable Connection for C-LAN 10BaseT Connectivity**

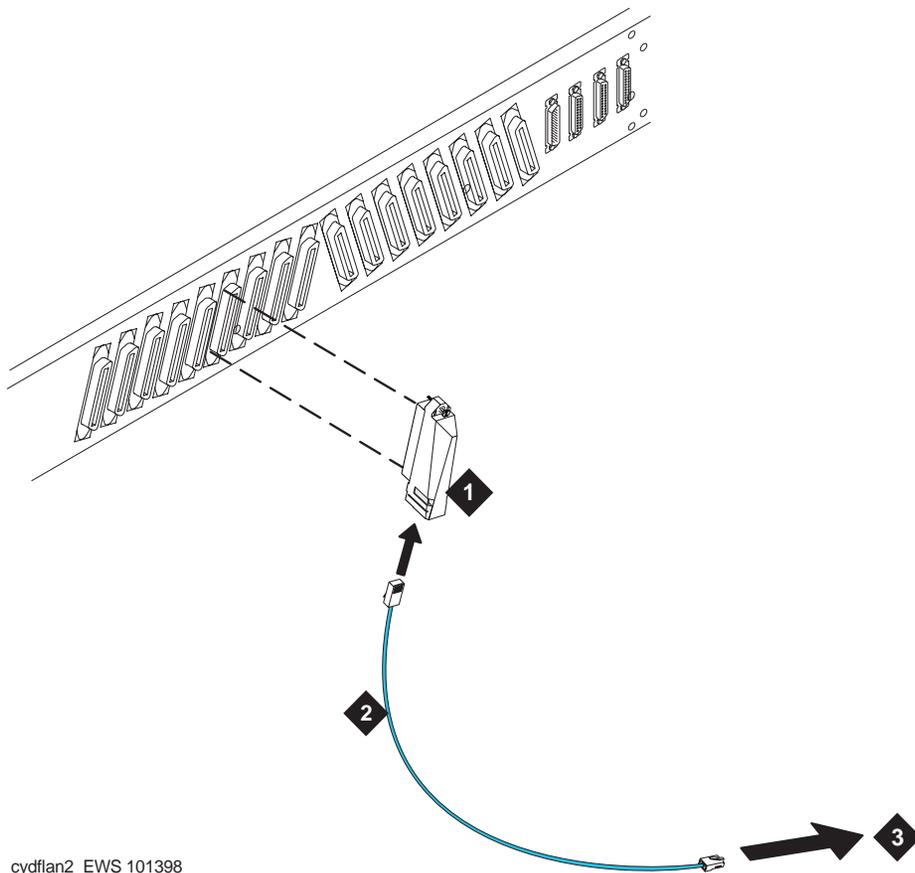

cydfflan2 EWS 101398

**Figure Notes**

1. 259A Connector
2. D8W Cable (max length 100m)
3. 10BaseT Hub or 110 (purple) wall field

This connects port 17 on the C-LAN circuit pack to the LAN.

The following table shows the relationship between the backplane and the peripheral (Amphenol) pinouts, and the RJ45 pinouts on the D8W cable, for the C-LAN circuit pack in any port slot.

**Table 13. TN799 Pinout**

Backplane Pin	25-Pair Wire Color	Lead Name	Peripheral Connector Pin	RJ45 Pin on the 259A Connector
103	White/Orange	TD+	27	1
003	Orange/White	TD-	2	2
104	White/Green	RD+	28	3
004	Green/White	RD-	3	6

#### Wall field connection

Instead of connecting a D8W cable to a hub, you could connect a standard Amphenol cable between the peripheral connector and the wall field. In this case, you would need to reverse the transmit and receive pairs. The transmit/receive reversal is done automatically by a hub.

## Other Hardware Upgrades

Upgrades to DEFINITY ECS Release 7 require new processor circuit packs for the csi and si models (TN798B and TN790B, respectively) and the NetPkt (TN794) circuit pack for the si model.

For the si model upgrading to R7, the NETCON (TN777) and the PACCON (TN778) circuit packs must be removed and the NetPkt circuit pack assembly must be installed. The NetPkt circuit pack is attached to a TN2400 circuit pack as a double circuit pack assembly that is inserted in the NetCon/PacCon slots. The connections built into this assembly provide the necessary jumpers between the NETCON and PACCON slots.

Refer to the appropriate upgrades document for the procedures to install these circuit packs and upgrade the software.

# F IP Trunk Installation and Administration


This appendix summarizes the procedures for installing and administering an IP Trunk circuit pack.

DEFINITY ECS with Internet Protocol (IP) Trunk allows you to route voice and fax calls over IP networks to other DEFINITY ECSs that also have this feature, or to other PBXs (Lucent or non-Lucent) equipped with the Internet Telephony Server–Enterprise (ITS-E). The IP Trunk service enables you to reduce long-distance charges and gives you added flexibility in routing traffic between sites. IP Trunk is implemented using the TN802 circuit pack.

## DCS over IP Trunk

IP Trunk supports most of the DCS features. DCS signaling with IP Trunk can be either X.25 or TCP/IP. For X.25 DCS signaling, the signaling data path is over a tie trunk connection between the switches. For TCP/IP DCS signaling, the signaling data is handled by the C-LAN circuit pack and can be either point-to-point (ppp) across a tie trunk facility or over the IP network. [Figure 7](#) shows the voice and signaling data path options for IP Trunk with DCS.

**Figure 7. IP Trunk with DCS**

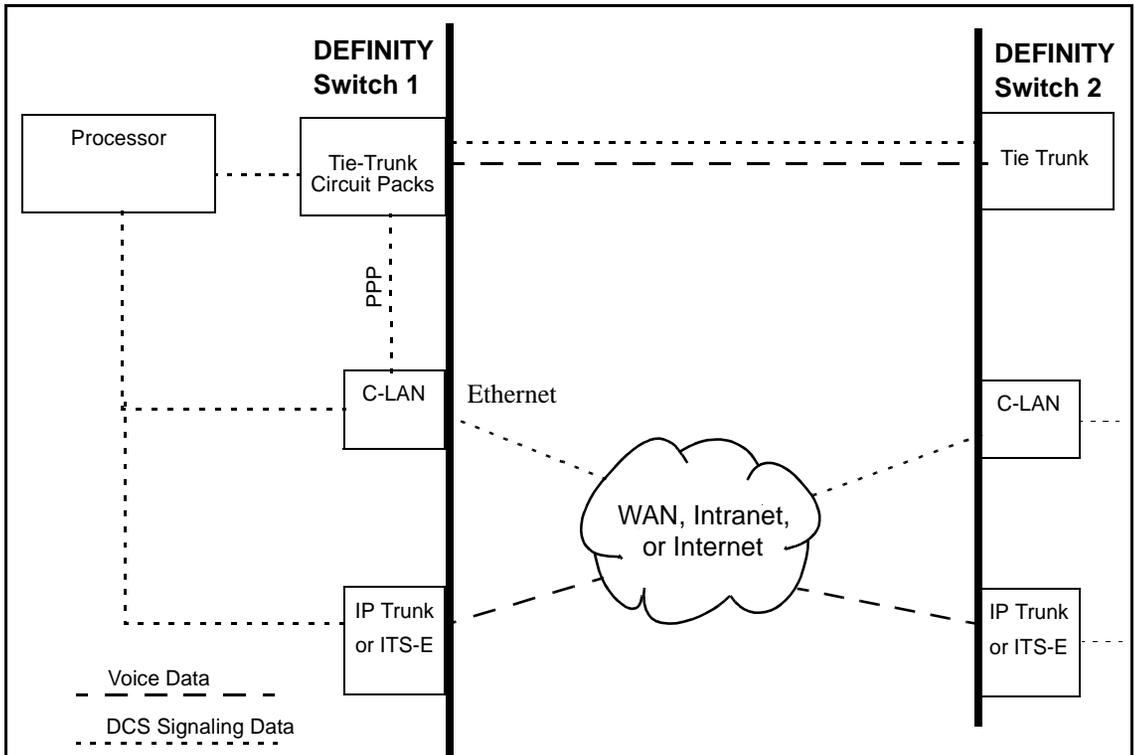

**DCS Administration** The administration of DCS with IP Trunk is the same as for DCS without IP Trunk.

### X.25 signaling

For X.25 DCS signaling, you administer the connection on the Data Module screen and the Processor Channel Assignment screen. The type of data module is **proc-intf** for an R7si or **x.25** for an R7r. Signaling via X.25 is not supported on the csi model.

### TCP/IP signaling

For TCP/IP signaling, you administer the connection on the Data Module screen and the Processor Channel Assignment screen. The data module type is **ppp** for a point-to-point signaling connection or **ethernet** for signaling over an IP network.

In addition, TCP/IP signaling requires administration of the Node Names screen and, in some cases, the IP Routing screen.

Details of the administration procedures for signaling connections are given in Chapter 2 of this book.

## IP Trunk Installation

This section is a summary of the more detailed installation procedures found in the upgrades or installation document for this switch. See *DEFINITY ECS R7 Documentation CD-ROM*, 555-230-833.

### Preparation checklist

#### Have ready:

- One of the following:
  - ~ A mouse (with a PS/2 connector), keyboard, and VGA monitor for use during the installation of the server. You also need A/C power outlets for the modem and monitor.
  - ~ A laptop with Symantec pcANYWHERE<sup>®</sup> Client software

This third-party application lets Lucent support personnel control the IP Trunk processor remotely, via the modem or ethernet LAN connection or COM2, during maintenance and troubleshooting.

If using a laptop, you also need cable(s) that connect between the COM2 connector on the TN802 external cable assembly and the laptop. The cable connector that terminates on the COM2 connector must be 25-pin female and there must be a null modem between the IP Trunk circuit pack and the laptop.

- Three adjoining, unoccupied slots in the DEFINITY ECS
- A 10/100 BaseT Ethernet connection into your local area network
- A valid, unused IP address on your network that can be assigned to the IP Trunk server. You also need the subnet mask, default gateway, domain name, type of network (10Base-T, 100BaseT, etc.) from the customer network administrator.

- An analog telephone line reserved for the IP Trunk diagnostic modem
- A valid telephone number reserved for the IP Trunk diagnostic modem

**Note:** It is recommended that your cabinet be protected by an uninterruptible power system (UPS).


#### Check Shipment:

- 1 Before you open the shipping carton, inspect it for damage. If the box is damaged, *do not open it*. Inform the shipping company, and ask for instructions on filing a claim.
- 2 If the box is undamaged, check the contents against the packing slip. Check the condition of each component, and note any damage or shortages on the packing slip. The carton should contain the following for each IP Trunk ordered:
  - ~ TN802 IP Trunk circuit pack
  - ~ U.S. Robotics Inc. Sportster 33.6K external modem
  - ~ TN802 external cable assembly

The TN802 external cable assembly is a bundle of cables with an amphenol connector at the end of the bundle and various PC-type connectors at the ends of the individual cables. See [Figure 8](#).

  - ~ Cable from modem to TN802 external cable assembly
- 3 Read and follow any directions inserted into the package by the factory.

**Figure 8. TN802 External Cable Assembly**

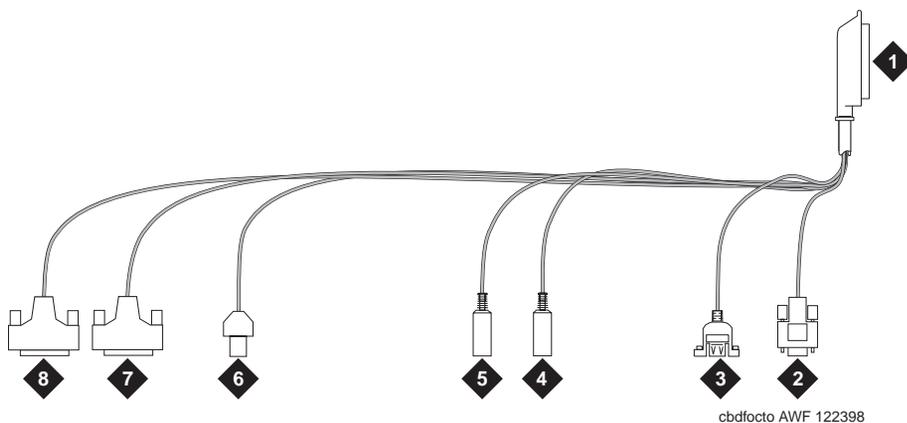

#### Figure Notes

- |                               |                                   |
|-------------------------------|-----------------------------------|
| 1. To P1 on cabinet backplane | 5. To PS2 Mouse                   |
| 2. To VGA monitor             | 6. To Ethernet                    |
| 3. To USB (not used)          | 7. 25-pin male connector to Modem |
| 4. To PS2 Keyboard            | 8. 25-pin male connector to COM2  |

## Install an interface

You need either a laptop or a monitor with keyboard and mouse to log onto the IP Trunk Windows NT server. Do *one* of the following two procedures.

### Connect a monitor, keyboard, and mouse

Skip to the next procedure, “Connect a laptop,” if you are using a laptop PC instead of a monitor with keyboard and mouse.

- 1 Attach a VGA monitor to the VGA connector of the TN802 external cable assembly.
- 2 Attach the keyboard to the KEYBOARD connector of the TN802 external cable assembly.
- 3 Attach the mouse to the MOUSE connector of the TN802 external cable assembly.
- 4 Plug the monitor into an AC power receptacle, and turn it on.
- 5 Skip to “Install the TN802 IP Trunk circuit pack.”

### Connect a laptop

If using a laptop with Smantec pcANYWHERE<sup>®</sup>, follow this procedure.


- 1 Attach the 25-pin COM2 connector of the TN802 external cable assembly to the laptop through a null modem.
- 2 Click Add Remote Control Item in the pcANYWHERE window.
- 3 Choose a communication port in the Properties window.
- 4 Click Details and note the default settings:
  - ~ Speed: 38,400
  - ~ Parity: <None>
  - ~ Flow Control: RTS/CTS
  - ~ Started by: Carrier detect (DCD)
  - ~ Ended by: Carrier detect (DCD)
- 5 Click on the new item icon and laptop connects to IP Trunk Host Software pcANYWHERE.

## Install the TN802 IP Trunk circuit pack

The TN802 circuit pack is hot-swappable, so you do not need to power down the carrier. If you need to remove the TN802 circuit pack from the carrier at a later time, shut down NT first.

- 1 Make sure that there is room to install the TN802 circuit pack. To accommodate the width of the circuit pack, you must have at least 3 adjacent slots free.
- 2 Insert the TN802 circuit pack in the rightmost (when viewing from the front of the carrier) of the three slots you reserved for IP trunking. See [Figure 9](#).

Figure 9. TN802 IP Trunk Circuit Pack

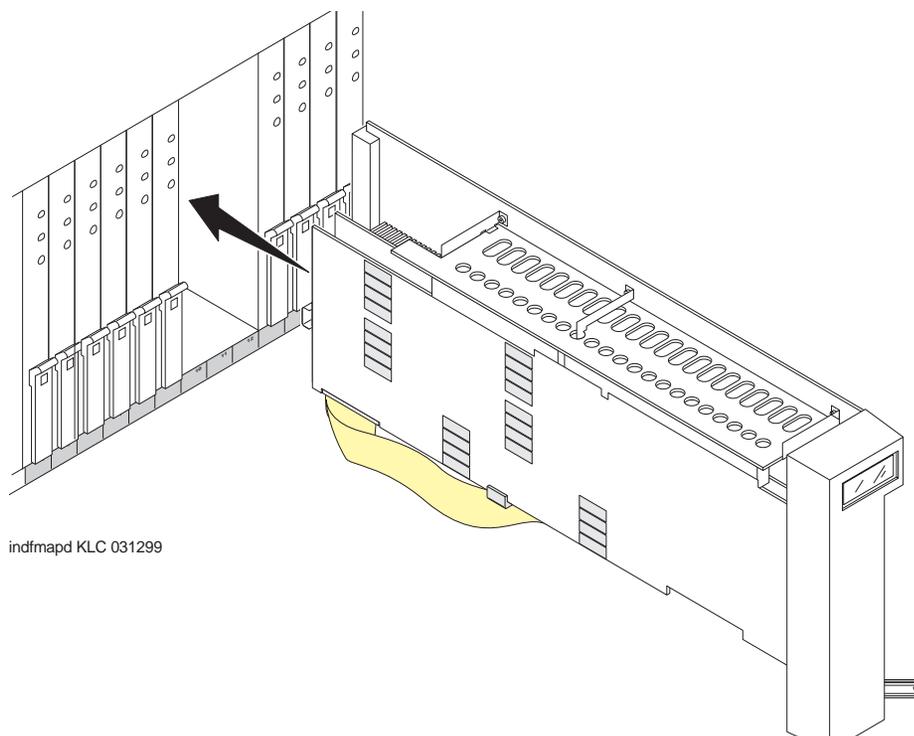

- 3 From the rear of the cabinet, connect the P1 amphenol connector on the TN802 external cable to the leftmost (highest-numbered) connector of the 3 slots used for the TN802.


When you plug in the TN802 circuit pack and connect the cable, the IP Trunk circuit pack starts to boot and the LCD reads “PC Boot.”

## External connections

### Connect the Modem

- 1 Connect the RS232 port of the modem to the MODEM connector of the TN802 external cable assembly.
- 2 Connect an analog telephone line to the leftmost analog-line port on the modem.
- 3 Make sure that the modem’s DIP switches are set as indicated in [Figure .](#)
- 4 Plug the modem into an A/C power outlet.
- 5 Turn on the modem using the switch on the front of the modem.

Figure 10. External Modem Connections

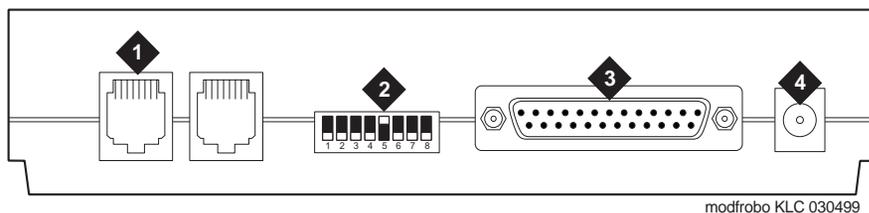**Figure Notes**

1. Connect analog line here.
2. DIP switch rocker 5 must be up.
3. Connect MODEM connector here.
4. Connect power connector here.

**Connect to the Ethernet**

- 1 Connect the network cable to the ETHERNET connector on the TN802 external cable assembly.

**Administer the software****Log onto the IP Trunk server**

- 1 Choose from the following:
  - ~ If using a laptop with pcANYWHERE® Client software, click the CAD button on the tools menu bar.
  - ~ If using a monitor, keyboard, and mouse, press the CTRL, ALT, and DELETE keys simultaneously.
- 2 Type **administrator** in the User Name field.
- 3 Leave the Password field blank, and click OK.
- 4 After logging on for the first time, change the administrator password and, if desired, the user name, to ensure security. See your Windows NT Server documentation for details.

**Connect the Modem to NT**

- 1 Click Start.
- 2 Click Settings, then Control Panel.
- 3 Click Modems.
- 4 Place a check mark in the Don't detect my modem; I will select it from a list field.
- 5 Click Next.
- 6 Choose U.S. Robotics Inc. in the Manufacturer field.
- 7 Choose Sportster 28800-33600 External Modem in the Models field.

**Assign a server name and domain name**

Windows NT Server identifies servers using a server name plus a domain name that locates the named server in a particular part of the network. The TN802 circuit pack is shipped with a generic server name and domain name. You should assign replacement names that are meaningful within your network.

- 1 Select My Computer >> Control Panel >> Network >> Identification tab.
- 2 Select Change and type the new name in the Computer Name box.
- 3 Type the name you chose for the IP-trunk domain in the Domain box.
- 4 Click OK twice.
- 5 Click Close.
- 6 When prompted to reboot the computer, choose one of the following options:
  - ~ If you have not assigned IP addresses, click No.
  - ~ If you have assigned IP addresses, click Yes to restart Windows NT so that the new names take effect.

**Assign an IP-address**


There are two Ethernet adapters. The first is an internal adapter with a fixed IP address. The second is the network adapter on the NIC card. In this procedure, you will assign an IP address to the adapter labeled [2].

**▲ CAUTION:**

Do not change the IP Address or any other settings for the Ethernet controller labeled [1] in the Adapter list. This is an internal adapter that has a fixed IP address.


- 1 Select the My Computer >> Control Panel >> Network >> Protocols tab.
- 2 Select TCP/IP Protocol from the list.
- 3 Click the Properties option in the Network window.

- 4 In the Adapter drop-down menu, click on the Digital Semiconductor 10/100 Mbps Ethernet Adapter option — that is, the adapter labeled [2].

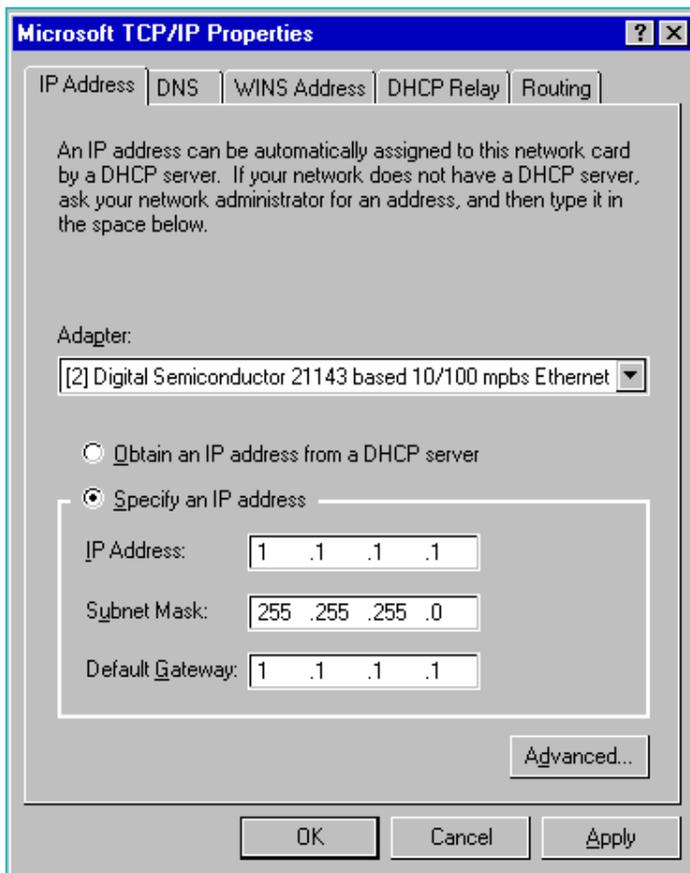

- 5 Click the Specify an IP address option.
- 6 Type a valid IP address for the IP Trunk server in the IP Address : field.
- 7 Type the appropriate subnet mask in the Subnet Mask : field.
- 8 If you use gateways, type the IP address of the default gateway for the IP Trunk server in the Default Gateway : field.
- 9 Click OK.
- 10 If Windows NT responds with the “At least one of the adapter cards has an empty primary WINS address. Do you want to continue?” message, click Yes.
- 11 Click the Bindings tab to make the changes.  
NetBIOS Interface, Server, and Workstation should now be enabled. If any are disabled (marked a red circle with a line through it), review the network-configuration steps above for omissions or errors.
- 12 Click Close.
- 13 Click Start in the lower left corner of the monitor, then click Restart.

**Note:** The internal adapter is listed in the Adapter drop-down menu with the label [1]. Do not change any settings for this adapter.

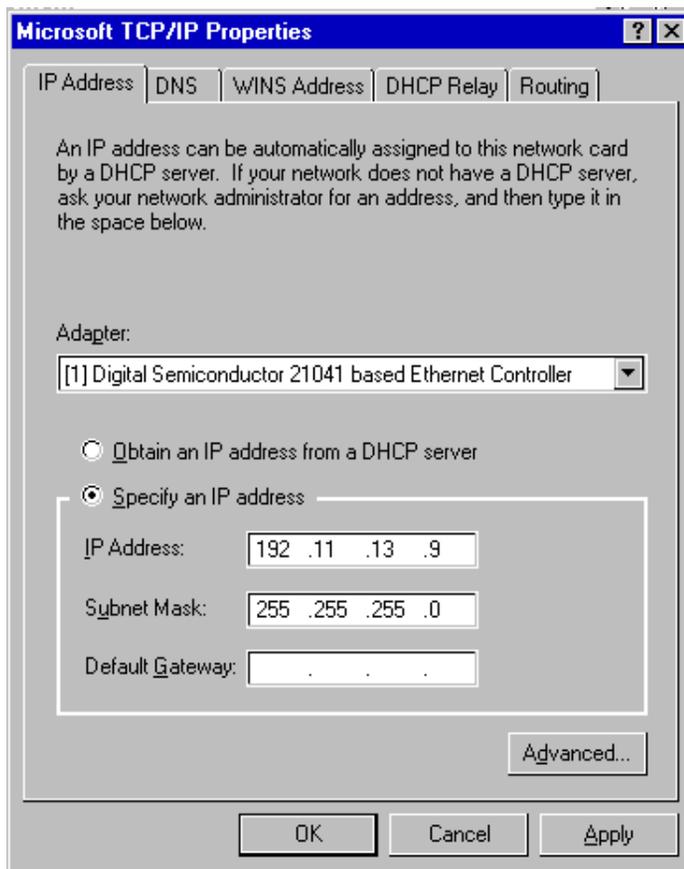

**▲ CAUTION:**

Do not change the IP Address or any other settings for the Ethernet controller labeled [1] in the Adapter list. This is an internal adapter that has a fixed IP address.

## Acceptance testing

**Check network services** When the server restarts, make sure that the required network services have started correctly. If the network services do not start correctly, an error box appears. Also, check the NT Event Log.

- 1 Select My Computer >> Control Panel >> Network >> Services.
- 2 Make sure that the following services are listed:
  - ~ Computer Browser
  - ~ Microsoft Internet Information Server 2.0
  - ~ NetBIOS Interface
  - ~ RPC Configuration

- ~ Server
- ~ Workstation

- 3 Click the Protocols tab, and examine the Network Protocols. TCP/IP protocol should be the only one listed.
- 4 Click OK.

### Test LAN connections and modem

#### External connection

You can test external IP connections by pinging the IP Trunk server and pinging a known computer connected to your network.

#### Internal connection

You test internal IP connections by pinging the internal addresses of the IP Trunk server and pinging the processor on the TN802 circuit pack.

#### Modem

- 1 Check for dial tone.
- 2 Contact Lucent Technologies Customer Support, and ask a representative to dial into your MMCX server.

### Set up network-trust relationships

After all MMCX servers are in their own domain, establish trust relationships between domains to allow for remote administration. To establish trust relationships, refer to your Windows NT Server 4.0 documentation.

### Configure IP Trunk service

- 1 Click Start >> Settings >> Control Panel >> Services.
- 2 Highlight IP Trunk Service and click the Startup... button.
- 3 Click the Automatic button in the Startup Type field.
- 4 Click OK.
- 5 Click the Start button and the LCD on the TN802 circuit pack reads "IP TRK\*."

### Administer the IP Trunk

The TN802 circuit pack is now installed in the DEFINITY carrier and connected to the IP network. You can now use the Configuration Manager software (preinstalled on the TN802 hard disk) and DEFINITY ECS switch administration software to prepare the IP Trunk for use. Administration procedures are summarized in the next section. Refer to the *DEFINITY ECS Administrator's Guide* for more detailed information.

# IP Trunk Administration

This section tells you how to administer the IP Trunk service after all installation procedures are complete. This is a summary of the more detailed administration procedures given in the “Managing IP Trunks” section of *DEFINITY ECS R7 Administrator’s Guide*, 555-233-502.

## Administration overview

To administer IP trunks on DEFINITY ECS, you must complete the following tasks:

- Plan routes and dialing permissions for IP calls by completing the Dial/Routing Plan Worksheets for remote off-premise dialing scenarios or by following the Procedures for Extension Dialing Between Sites, [page 370](#).

### On DEFINITY

- Administer the IP Trunk circuit pack by completing the DS1 circuit pack screen (the IP Trunk emulates a T1 or E1 connection)
- Create a trunk group for the IP trunks and assign trunk group members to ports on the IP Trunk circuit pack
- Administer the AAR and ARS Digit Analysis Table using the information from the Switch Admin tables on the worksheets

### On NT

- Log on to Windows NT and start the IP Trunk service
- Use the Configuration Manager to administer the routes and dialing permissions you defined on the Dial/Routing Plan worksheets or the procedures for extension dialing between sites.
- Use the Configuration Manager to set the IP Trunk service parameters

## Plan call routing

Use the IP Trunk worksheets (shown at the end of this appendix) and/or the Procedures for Extension Dialing Between Sites to plan and coordinate your IP Trunk administration in Configuration Manager and DEFINITY ECS switch administration software.

You will create a dialing and routing plan, then use the information to administer DEFINITY ECS and the IP Trunk application. Read and follow these instructions carefully.

### Using the Procedures for Extension Dialing Between Sites

Follow these procedures for administering extension dialing between several sites. This section includes the steps for administration as well as examples using three sites that show DCS and non-DCS scenarios.

### Using the Dial/Routing Plan Worksheets

The worksheets are used for any two-site configuration allowing off-premise dialing. Worksheet 1 is used to capture general information about your site.

Worksheets 2–8 are used for different levels of off-premise dialing restrictions at the remote site, as listed in the following table.

Off-Premise Dialing at Remote Site:	
	Worksheet 2: No off-premise dialing at remote site.
Same Area Code	Worksheet 3: any exchange Worksheet 4: only exchange X
Same Country	Worksheet 5: any area code Worksheet 6: only area code X
	Worksheet 7: any different country Worksheet 8: only different country X

For any two-site configuration, you would fill out Worksheet 1 and one of the worksheets 2–8. Use the worksheets as follows:

- 1 Fill out the general information about your sites using Worksheet 1.

The Field Codes on Worksheet 1 consist of a number (1 or 2) that indicates the site, and a letter (A–J) that indicates a field on an administration screen. For each code, the *Field Value* column holds the specific value for that field for your switches. The field codes are used on all the other worksheets to indicate the values to enter from Worksheet 1.

For example, field code 1A corresponds to the field International Access code for site 1. You would enter the value in the *Field Value* column for the International Access code for your site-1 switch. Then, when 1A appears on a subsequent worksheet, you would enter the value corresponding to 1A from Worksheet 1.

- 2 Use the second and subsequent worksheets to plan switch and IP Trunk administration.

On each worksheet, in the *Fill in with your actual values* column, replace the indicated field codes with the corresponding values you entered on Worksheet 1.

For example, on Worksheet 2 there is a field called Different Country for each site. Its field code is 1A2B2D2E, which means that you would enter the values from Worksheet 1 as follows:

```
<Site-1 International Access Code><Site-2 Country Code><Site-2 Area Code><Site-2 Exchange>
```

Once you've done this, the result is the exact phone number that you'll enter in the matching field in the administration software.

**Note:** The IP Trunk application only recognizes digits. Don't use characters such as ~w, ~p, + and so on in dialed digit formats that will be sent to IP trunks: the application won't recognize these characters.

- 3 Use these worksheets to administer all your sites using IP Trunk. You can permit a different level of off-premise dialing for each site. For example, Site 1 may allow limited off-premise dialing, but Site 2 may not, and so on.

## DEFINITY administration procedures

The following procedures must be performed on the DEFINITY ECS to administer IP Trunks.

### ▲ CAUTION:

The fields described in the following procedure must be completed as shown. If they are not, the IP Trunk service may not work properly. Other fields may be completed as appropriate for your system.

### DS1 Circuit Pack

As an example, administer the IP Trunk circuit pack at 01A09 to emulate T1 service for 24 channels. (See the table below for the settings to emulate E1 service for 30 channels). Note that you are administering the IP Trunk circuit pack in this procedure, not an actual DS1 circuit pack.

- 1 Type **add ds1 01A09** and press ENTER.

**01A09** is the address of the IP Trunk circuit pack. The DS1 Circuit Pack screen appears.

```

add ds1 1a09
                                DS1 CIRCUIT PACK

                                Location: 01A09
                                Bit Rate: 1.544
                                Line Compensation: 3
                                Signaling Mode: robbed-bit

                                Name: T1-RB to ITS1
                                Line Coding: ami-zcs
                                Framing Mode: d4

Interface Companding: mulaw
Idle Code: 11111111

MAINTENANCE PARAMETERS

Slip Detection? n
  
```

- 2 Enter the field values as shown in the screen diagram above.
- 3 Press ENTER to save your changes.

### More information

The table below summarizes field settings on the DS1 screen for the T1 and E1 service emulated for IP Trunk service.

Field	Setting for T1	Setting for E1
Bit Rate	<b>1.544</b>	<b>2.048</b>
Line Coding	<b>ami-zcs</b>	<b>ami-basic</b> or <b>hdb3</b>
Line Compensation	<b>3</b>	<b>3</b>
Framing Mode	<b>d4</b>	

Field	Setting for T1	Setting for E1
Signaling Mode	<b>robbed-bit</b>	<b>cas</b>
Interface Companding	<b>mulaw</b>	<b>mulaw</b>
Idle Code	<b>11111111</b>	<b>11111111</b>
Slip Detection	<b>n</b>	<b>n</b>
Near End CSU type		<b>other</b>
Interconnect		<b>pbx</b>
Country Protocol		<b>1</b>

### Creating an IP trunk group

Use this procedure to add a trunk group for IP trunks. You can administer multiple trunk groups on one IP Trunk circuit pack. Each trunk group is assigned to virtual ports, or channels, on the IP Trunk circuit pack, and your routing plan directs calls to certain trunks.

#### ▲ CAUTION:

The fields described in the following procedure must be completed as shown. If they are not, the IP Trunk service may not work properly. Other fields may be completed as appropriate for your system.

As an example, add trunk group 5 and assign 12 ports for a virtual connection to the IP Trunk circuit pack:

- 1 Type **add trunk-group 5** and press ENTER.

The Trunk Group screen appears.

```

                                TRUNK GROUP

Group Number: 5__                Group Type: tie                CDR Reports: y
Group Name: IP Trunk 01A09        COR: 85__                TN: 1__                TAC: 105__
Direction: two-way__            Outgoing Display? y      Trunk Signaling Type: ___
Dial Access? n                  Busy Threshold: 99__      Night Service: ___
Queue Length: 0__                Incoming Destination: ___
Comm Type: voice                  Auth Code? n

TRUNK PARAMETERS
Trunk Type (in/out): wink/wink__ Incoming Rotary Timeout(sec): 5__
Outgoing Dial Type: tone_____ Incoming Dial Type: tone_____
Wink Timer (msec): 300           Disconnect Timing(msec): 500__
Digit Treatment: insertion_____ Digits: 9__
Connected to Toll? n             STT Loss: low            Sig Bit Inversion: none
Incoming Dial Tone? y           DTT to DCO Loss: normal

Disconnect Supervision - In? y   Out? n
Answer Supervision Timeout: 0__  Receive Answer Supervision? y

```

**Note:** Depending on how the routing between sites is administered, inserting digits may be required. The example shows a "9" being inserted in front of any digits received from the IP Trunk. In most DEFINITY ECS switches, this is the access code for ARS and will allow the digits received on the trunk to be analyzed and rerouted based on ARS analysis table entries.

2 Enter the field values as shown in the screen diagram above.

**Note:** All IP trunk groups are administered as DS1 tie trunks (Group Type = tie).

3 Move to the Trunk Features page and type **n** in the Maintenance Tests field.

4 In the Suppress # Outpulsing field, type **y**.

**Note:** You may need to fill in other fields for your system.

5 Move to the Group Member Assignments page and add the ports (channels) you've purchased.

You're assigning virtual ports, or channels, to the IP Trunk circuit pack. Each channel can carry one call at a time. The number of ports you can use is limited to the maximum number specified in your license.

```

                                TRUNK GROUP
                                Administered Members(min/max): 1/12
                                Total Administered Members: 12
GROUP MEMBER ASSIGNMENTS
  Port      Code   Sfx  Name      Night  Mode   Type  Ans  Delay
1: 01A0901  _____
2: 01A0902  _____
3: 01A0903  _____
4: 01A0904  _____
5: 01A0905  _____
6: 01A0906  _____
7: 01A0907  _____
8: 01A0908  _____
9: 01A0909  _____
10: 01A0910 _____
11: 01A0911 _____
12: 01A0912 _____
13: _____
14: _____
15: _____
    
```

6 Press ENTER to save your changes.

**Administer AAR/ARS**

You can use Automatic Alternate Routing (AAR) and Automatic Route Selection (ARS) to route calls over an IP trunk group just like any other trunk group. Unlike other trunk groups, however, *you must administer both the DEFINITY ECS switch software and Configuration Manager to route calls over IP trunks.* DEFINITY ECS uses the dialed digit string to select a route pattern — and thus a trunk group — for each call. The IP Trunk software matches each trunk line or each dialed string to a specific IP address.

The following administration needs to be performed on both the origin and destination switches — if you can't administer the remote switch, coordinate this

work with the administrator at the other site. The following general instructions assume that you know how to use Automatic Alternate Routing (AAR) and Automatic Route Selection (ARS) to route conventional calls.

To administer IP call routing on DEFINITY ECS:

- 1 Administer the AAR and ARS Digit Analysis Table on DEFINITY ECS with the information you entered in the Switch Admin tables on the worksheet.
- 2 After you've assigned a route pattern in the AAR or ARS Digit Analysis Table, add the IP trunk group to that route pattern if you haven't already done so
- 3 Make the IP trunk group the first preference in the route pattern and perform any other administration required on the Route Pattern screen.

**Note:** If you want to route calls over the normal telephone network when transmission quality over the IP network is unacceptable, assign one or more conventional trunk groups to the route pattern as backups.

DEFINITY ECS will route appropriate calls to the IP trunk group. Now you need to administer Configuration Manager to route outgoing and incoming calls appropriately.

## NT administration procedures

The following procedures must be performed on the NT server to administer IP Trunks.

### Administer call routing parameters on Configuration Manager

#### Outgoing calls

To administer routing for outgoing (originating) calls, start at the Windows NT desktop:

- 1 Double-click the **Configuration Manager** icon.  
IP Trunk Configuration Manager appears.
- 2 Click the **Telephony** tab.  
The Telephony property page appears.
- 3 In the Maximum Digits to be collected box, type the number of digits that the switch will forward to the IP Trunk software.


The Maximum Digits to be collected field entry will be determined by the type of dialing, or types of dialing that will be performed using IP Trunking. Refer to the Dial/Routing Plan Worksheets, or if extension dialing is used, this field would be the extension length in the DEFINITY private network.

#### CAUTION:


Set this field no higher than the maximum length of the digit string the switch sends. Otherwise, the IP Trunk application waits several seconds for additional digits and users experience delays.

- 4 Click the **Dial/Routing Plan** tab.

The Dial/Routing Plan window appears.

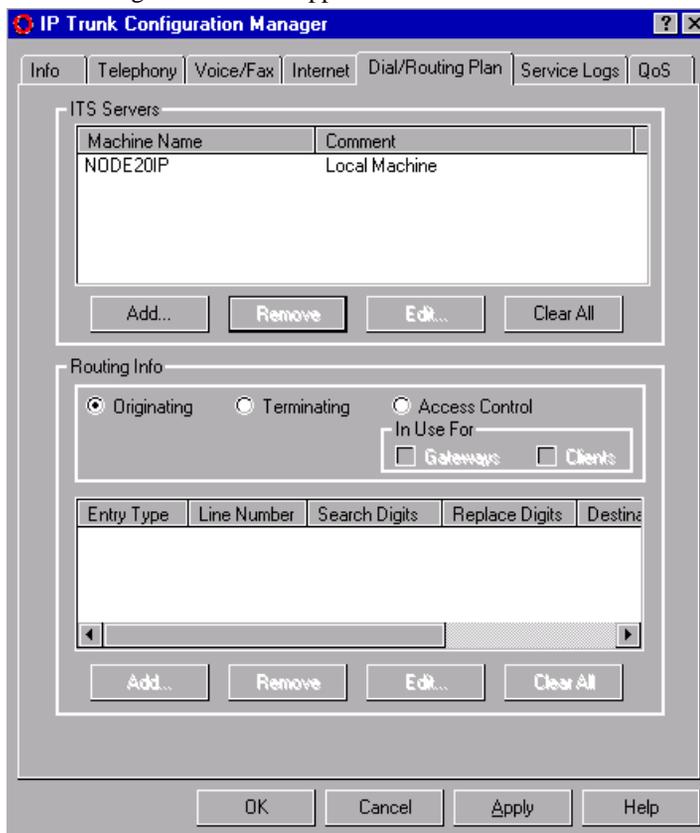

- 5 In the Machine Name list, select the machine name of the local IP Trunk server.
- 6 Select **Originating** and click **Add** (under Routing Info). The Add Originating Entry dialog box appears.

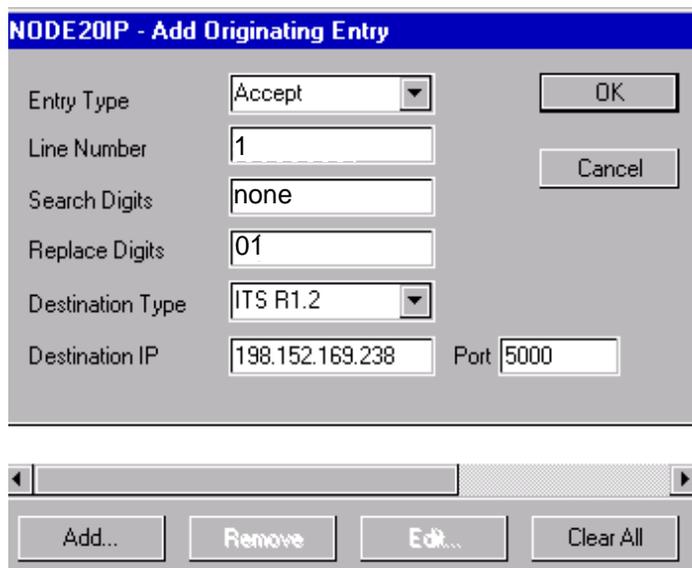

- 7 In the Add Originating Entry dialog box, you enter information that routes the call data between originating and terminating locations. You need to enter information that allows the IP Trunk to route calls based on dialed digits or on the line (port) that a call arrives on.

**Note:** It is not possible to mix dialing strategies in the IP Trunk software. Once line numbers are used to route calls, line numbers must be used on ALL entries in a routing table.

Routing information entered will be based on information that has been entered on the Dial/Routing Plan Worksheets, or on information collected based on the Procedures for Extension Dialing Between Sites.

### Routing based on Dialed String

If routing will be based on dialed string, enter **any** in the Line Number field, then enter the information from the worksheets or a unique identifier for an extension range from the Procedures for Extension Dialing.

### Routing based on Line Numbers

If routing will be based on line numbers that are dedicated to a specific location, you need to make sure that the same line number is used on both the originating and destination switches. This is done by prepending a string of digits unique to a line and associating it with that line number at both the originating and terminating IP Trunks. This code will be discarded at the terminating end.

For example, in the display above, the code number 01 is entered in the Replace Digits field as a unique digit string that will be associated with line number 1. If **none** is entered in the Search Digits field, no digits will be searched for. We don't need to search for dialed digits because the line numbers, which are associated with port numbers on the circuit pack, are dedicated in a DEFINITY trunk group to a particular location. Any digits received on these lines will always be routed to the same location. The only requirement is to prepend digits in the replace digits field to ensure that a call placed on a line (port) at the originating end can be terminated on the same line at the destination end. The digits prepended at the originating end and searched for at the terminating end must be the same.

**Note:** Any digits searched for must also be replaced if they are used to complete the routing of a call. If digit substitution will be needed, it may be necessary to put a digit string in the Search Digits field, and substitute those with new digits in the Replace Digits field.

- 8 For Entry Type, enter **accept** to allow incoming calls.
- 9 In the Search Digits field, type the digits entered in the Originating Search string box for this site in the Dial/Routing Plan Worksheets, or follow the Procedures for Extension Dialing Between Sites.
- 10 In the Replace Digits field, type the digits entered in the Originating Replace string box for this site in the Dial/Routing Plan Worksheets, or follow the Procedures for Extension Dialing Between Sites.
- 11 In the Destination Type field, select the appropriate value for the remote switch.  
Select **ITS R1.2** if the other switch uses IP Trunk.

- 12 In the Destination Address (IP) field, type the Internet Protocol (IP) address of the destination IP Trunk on the remote switch.
- 13 In the Port field, type the port number to be used for this connection. The port number used in all IP Trunk servers is "5000".
- 14 Click **OK**.

The Add Originating Entry dialog box closes and the Dial/Routing Plan dialog box appears showing the information you entered.

Repeat the above steps for each originating entry (line or dialed string) specified in the Dial/Routing Plan Worksheets and/or the Procedures for Extension Dialing Between Sites.


### Incoming calls

To administer routing for incoming (terminating) calls, start at the Windows NT desktop:

- 1 Click the **Dial/Routing Plan** tab.

The Dial/Routing Plan dialog box appears.

- 2 In the Machine Name box, select the local machine name for the local IP Trunk server.
- 3 Select **Terminating**.

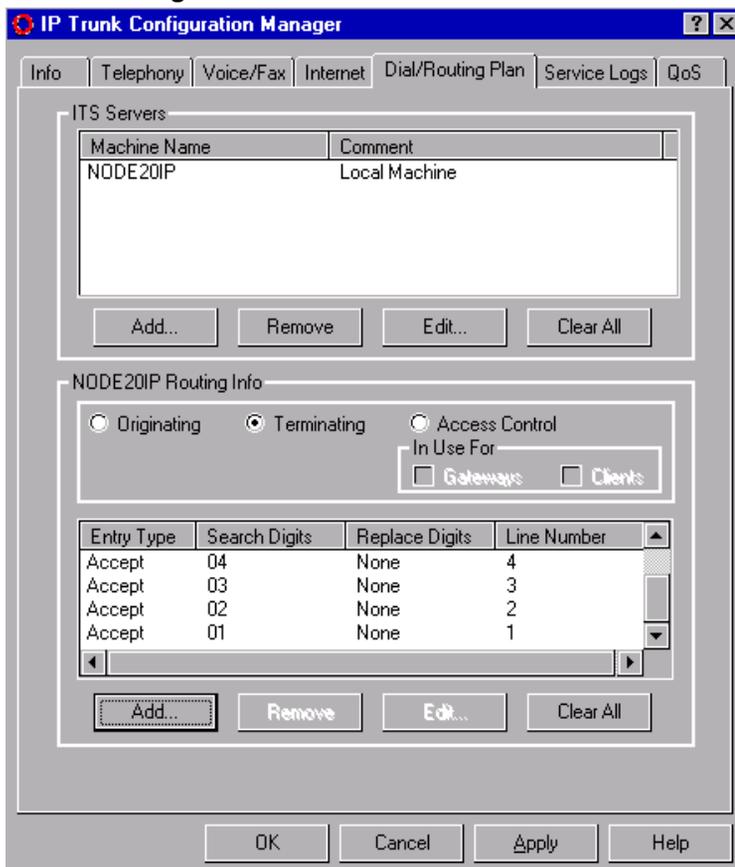

- 4 Click **Add** (under Routing Info).

The Add Terminating Entry dialog box appears.

- 5 In the Add Terminating Entry dialog box, you enter information that routes the incoming call to a terminating location. You need to enter information that allows the IP Trunk to route calls based on dialed digits or on the line (port) that a call arrives on.

**Note:** It is not possible to mix dialing strategies in the IP Trunk software. Once line numbers are used to route calls, line numbers must be used on ALL entries in a routing table.

Routing information entered will be based on information that has been entered on the Dial/Routing Plan Worksheets, or on information collected based on the Procedures for Extension Dialing Between Sites.

#### Routing based on Dialed String

If routing will be based on dialed string, enter **any** in the Line Number field, then enter the information from the worksheets or a unique identifier for an extension range from the Procedures for Extension Dialing.

#### Routing based on Line Numbers

If routing will be based on line numbers that are dedicated to a specific location, you need to make sure that the same line number is used on both the originating and destination switches. This is done by prepending a string of digits unique to a line and associating it with that line number at both the originating and terminating IP Trunks. This code will be discarded at the terminating end.

For example, the code numbers 01, 02, ..., were prepended to the dialed string in the originating switch. For each line number, the code number is entered in the Search Digits field (as in the display above) as a unique digit string associated with the line number. Since the code number is not intended to be routed to the DEFINITY to complete the call, **none** is entered in the Replace Digits field to prevent digit replacement. Remember, the digits prepended at the originating end and searched for at the terminating end must be the same.

**Note:** Any digits searched for must also be replaced if they are used to complete the routing of a call. If digit substitution will be needed, it may be necessary to put a digit string in the Search Digits field, and substitute those with new digits in the Replace Digits field.

- 6 For Entry Type, enter **accept** to allow incoming calls.
- 7 In the Search Digits field, type the digits entered in the Terminating Search string box for this site in the Dial/Routing Plan Worksheets, or follow the Procedures for Extension Dialing Between Sites.
- 8 In the Replace Digits field, type the digits entered in the Terminating Replace string box for this site in the Dial/Routing Plan Worksheets, or follow the Procedures for Extension Dialing Between Sites.
- 9 Click **OK**.  
The Add Terminating Entry dialog box closes, and the Dial/Routing Plan property page appears showing the information you entered.
- 10 Click **OK** to save your changes and close Configuration Manager.

Repeat the above steps for each terminating entry (line or dialed string) specified in the Dial/Routing Plan Worksheets and/or the Procedures for Extension Dialing Between Sites.

The Dial/Routing Plan on the remote switch must be administered for the Originating and Terminating Routing Info in a similar manner.

The IP Trunk software is now configured without restrictions on remote access.

### Stopping IP Trunk service

**Note:** Before you stop IP Trunk service, you must busy out the IP trunk group on the DEFINITY ECS; then, after you restart IP Trunk service, release the IP trunk group.

To stop IP Trunk service:

- 1 Busy out the IP trunk group on DEFINITY ECS.
- 2 Open the Windows NT Control Panel.
- 3 Double-click **Services**.

The Services dialog box appears.

- 4 In the Service column, select **IP Trunk Service**.
- 5 Click **Stop**.

Started disappears and the Status column does not show an entry beside Internet Telephony Server.

- 6 Click **Close**.

### Starting IP Trunk service

Use this procedure only if you have manually stopped your IP Trunk service.

To start IP Trunk service:

- 1 Log onto the NT server.
- 2 Open the Windows NT Control Panel.
- 3 Double-click **Services**.

The Services dialog box appears.

- 4 In the Service column, select **IP Trunk Service**.

**5** Click **Start**.

Started appears in the Status column.

**6** Click **Close**.**7** Release the IP trunk group on DEFINITY ECS.**Placing a test telephone call**

After starting the IP Trunk service, place a test telephone call to the remote switch.

**Setting up alerts on IP trunks**

Whenever something happens on IP trunks that might affect service quality, Windows NT™ displays an alert in a popup window. You can select the IP address for the alert messages and notify a computer other than the IP Trunk display screen. NT alerts allow you to monitor IP Trunk service on one or more switches.

**Viewing error messages**

The IP Trunk application logs Error Messages and will store the error messages and warnings in the Windows NT Event Viewer.

**Note:** Log settings for the NT Event Viewer should be set to *Overwrite Events as Needed* for both the System and the Application logs.

**Troubleshooting IP Trunk**


If IP calls are not going through, try these basic procedures before contacting an authorized Lucent Technologies Service Center for assistance.

- Check the IP Trunk service
- Check physical connections
- Check LAN functions

## Procedures for Extension Dialing Between Sites

These procedures outline two different extension dialing configurations that may be used from a particular site to other IP Trunk sites. The first configuration is non-DCS, one trunk group would exist in the DEFINITY and be routed through the IP Trunk server to many different IP Trunk locations. The second configuration is DCS or dedicated trunks to specific locations in which users would be routed to different trunk group, i.e. different trunk ports, within the DEFINITY, based on the digits dialed. The IP Trunk server would route calls based on the ports or lines the call was placed on. Each of these configurations is outlined below and examples are provided.

### Non-DCS Configuration

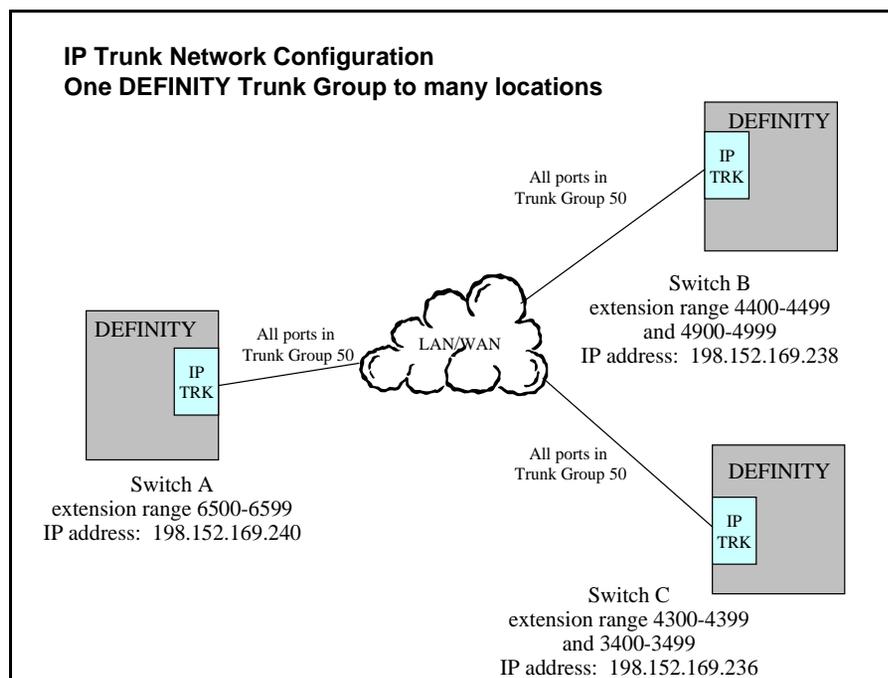

In the configuration above, each DEFINITY switch has all of the IP Trunk ports in one trunk group, trunk group 50. Extension calls to the other DEFINITY switches in the network are routed to this trunk group and the IP Trunk server's administration evaluates the dialed strings it receives and routes the calls to the appropriate IP address based on that dialed string.

To arrange a network in this configuration, an administrator will need to know each IP Trunk server's IP address and the range of extensions in the DEFINITY at that location.

In Switch A above, the IP Trunk server's originating entries will be as follows, in order for calls through that IP Trunk server to be routed to Switch B and Switch C appropriately.

**Table 14. Dial/Routing Plan for Switch A, Originating Entries**

Line	Search String	Replace String	IP Address
Any	44	44	198.152.169.238 (Switch B)
Any	49	49	198.152.169.238 (Switch B)
Any	43	43	198.152.169.236 (Switch C)
Any	34	34	198.152.169.236 (Switch C)

These entries allow any line/port on the IP Trunk server to carry calls to the other two locations. It also allows each unique string (extension range) destined for one of the other two locations to be evaluated and routed to the appropriate location. There would need to be terminating entries in Switches B and C that correspond to the entries above, allowing the appropriate dialed strings to be terminated at those locations.


For example, in order for calls to be received at Switch A, from Switch B and C, the terminating entry in the IP Trunk would be as follows:

**Table 15. Switch A Terminating Entries**

Line	Search String	Replace String
Any	6	6 (From any switch to Switch A)

Only one digit is required to uniquely identify calls to this location, no other location has extensions that begin with “6,” and since this encompasses the entire range of extension numbers, only this entry is required.

## DCS or Dedicated Trunks to Specific Locations Configurations

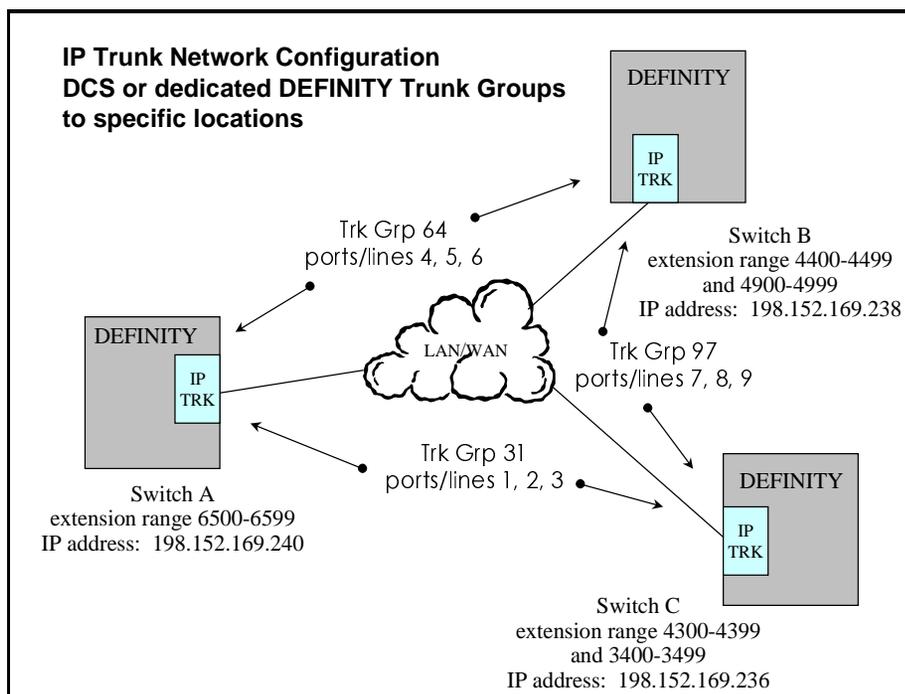

In the configuration above, each DEFINITY switch has a separate trunk group that is dedicated to being linked to another site, each of these trunk groups has a specified group of ports/lines that is coordinated at the other end. Extension calls to the other DEFINITY switches in the network are routed to unique trunk groups based on ARS/AAR digit analysis within the DEFINITY, the IP Trunk server’s administration routes the calls to the appropriate IP address based on the port/line that the call arrives on. This configuration works whether DCS is administered between these locations, or if users simply dial extensions numbers to be routed to the appropriate switch and do not wish to receive DCS features. To arrange a network in this configuration, an administrator will need to know each IP Trunk server’s IP address, and the ports/lines that are dedicated to that particular address

**Table 16. Dial/Routing Plan for Switch A, Originating Entries:**

Line	Search String	Replace String	IP Address
1	None	01	198.152.169.236 (Switch C)
2	None	02	198.152.169.236 (Switch C)
3	None	03	198.152.169.236 (Switch C)
4	None	04	198.152.169.238 (Switch B)
5	None	05	198.152.169.238 (Switch B)
6	None	06	198.152.169.238 (Switch B)

Table 17. Dial/Routing Plan for Switch B, Originating Entries

Line	Search String	Replace String	IP Address
4	None	04	198.152.169.240 (Switch A)
5	None	05	198.152.169.240 (Switch A)
6	None	06	198.152.169.240 (Switch A)
7	None	07	198.152.169.236 (Switch C)
8	None	08	198.152.169.236 (Switch C)
9	None	09	198.152.169.236 (Switch C)

Table 18. Dial/Routing Plan for Switch C, Originating Entries

Line	Search String	Replace String	IP Address
1	None	01	198.152.169.240 (Switch A)
2	None	02	198.152.169.240 (Switch A)
3	None	03	198.152.169.240 (Switch A)
7	None	07	198.152.169.238 (Switch B)
8	None	08	198.152.169.238 (Switch B)
9	None	09	198.152.169.238 (Switch B)

These entries allow a specific line/port on the IP Trunk server to carry calls to a specific other location. No digits are searched for, as we already know that the DEFINITY has done the appropriate digit analysis. A unique string is applied in front of each dialed string by adding a replace string; each replace string is unique to that line/port, allowing for the terminating end to associate a call to the same line it left on at the originating end.

Table 19. Switch A Terminating Entries

Line	Search String	Replace String
1	01	None (From Switch C)
2	02	None (From Switch C)
3	03	None (From Switch C)
4	04	None (From Switch B)
5	05	None (From Switch B)
6	06	None (From Switch B)

Table 20. Switch B terminating entries

Line	Search String	Replace String
7	07	None (From Switch C)
8	08	None (From Switch C)
9	09	None (From Switch C)
4	04	None (From Switch A)
5	05	None (From Switch A)
6	06	None (From Switch A)

Table 21. Switch C terminating entries

Line	Search String	Replace String
1	01	None (From Switch A)
2	02	None (From Switch A)
3	03	None (From Switch A)
7	07	None (From Switch B)
8	08	None (From Switch B)
9	09	None (From Switch B)

When a call terminates on a line, we search for the unique string associated with that line, but we do not replace it. This reforms the digit string back to the way it left the originating DEFINITY, and passes the appropriate digits to the DEFINITY at the terminating end.



This Appendix lists the complete set of current DEFINITY ECS user documentation and selected related documents.

---

This chapter contains a list of user documents for the DEFINITY Enterprise Communications Server (ECS) Release 7. (Most of these documents are backward compatible with, and can be used with, the DEFINITY ECS Release 6 systems.)

To order these or other DEFINITY documents, contact the Lucent Technologies Publications Center at the address and phone number on the back of the title page of this document. A complete catalog of Business Communications Systems (BCS) documents, including previous issues of the documents listed here, is available on the World Wide Web. Ask your account team for the web address.

## Administration

The primary audience for these documents consists of customer administrators.

### **DEFINITY ECS Release 7 — Overview, 555-230-024, Issue 7**

Provides a brief description of the features available with DEFINITY ECS R7. This book does not provide a general overview of the switch nor of basic telephony. This book is available in the following languages: English, German (DE), Dutch (NL), Brazilian Portuguese (PTB), European French (FR), Latin Spanish (SPL), Italian (IT), Russian (RU), and Japanese (JA). To order, append the language suffix to the document number; for example, 555-230-024DE for German. No suffix is needed for the English version.

### **DEFINITY ECS Release 7 — Administrator's Guide, 555-233-502, Issue 1**

A task-based document that provides step-by-step procedures for administering the switch. This book contains information previously found in *DEFINITY ECS Administration and Feature Description, 555-230-522*, as well as new information for this release and procedural sections added in Release 7.

### **DEFINITY ECS Release 7 — Administration for Network Connectivity, 555-233-501, Issue 1**

Describes how to administer connections between DEFINITY ECS switches (csi, si, and r models) for DCS messaging. The main focus is on TCP/IP connectivity introduced with DEFINITY Release 7.1.

**DEFINITY ECS Release 7.1 — Change Description, 555-230-405, Issue 1**

Provides a high-level overview of what is new in DEFINITY ECS R7.1. Describes the hardware and software enhancements and lists the problem corrections for this release. It also includes any last-minute changes that come in after the remaining books have gone to production.

**DEFINITY ECS Release 7 — System Description, 555-230-211, Issue 4**

Provides hardware descriptions, system parameters, listing of hardware required to use features, system configurations, and environmental requirements.

**DEFINITY System's Little Instruction Book for basic administration, 555-230-727, Issue 5**

Provides step-by-step procedures for performing basic switch administration tasks. Includes managing phones, managing features, routing outgoing calls, and enhancing system security.

**DEFINITY System's Little Instruction Book for advanced administration, 555-233-712, Issue 2**

Provides step-by-step procedures for managing trunks, managing hunt groups, setting up night service, writing vectors, recording announcements, using reports, and understanding call centers.

**DEFINITY System's Little Instruction Book for basic diagnostics, 555-230-713, Issue 2**

Provides step-by-step procedures for baselining your system, solving common problems, reading alarms and errors, using features to troubleshoot your system, and contacting Lucent.

**DEFINITY ECS Release 7 — Reports, 555-230-511, Issue 5**

Provides detailed descriptions of the measurement, status, security, and recent change history reports available in the system and is intended for administrators who validate traffic reports and evaluation system performance. Includes corrective actions for potential problems. Previously known as *DEFINITY ECS System Monitoring and Reporting*.

**BCS Products Security Handbook, 555-025-600, Issue 6**

Provides information about the risks of telecommunications fraud and measures for addressing those risks and preventing unauthorized use of BCS products. This document is intended for telecommunications managers, console operators, and security organizations within companies.

**DEFINITY ECS Release 7 — System 75 and System 85 Terminals and Adjuncts Reference, 555-015-201, Issue 10**

Provides drawings and full descriptions for all phones, phone adjuncts, and data terminals that can be used with System 75, System 85, DEFINITY Communications System, and DEFINITY ECS. This document is intended for customers and Lucent Technologies account teams for selecting the correct equipment.

**Guide Builder™ Software for DEFINITY® Telephones, 555-230-755**

Provides the ability to produce laser-printed documentation for specific telephones. A comprehensive user's guide and on-line help support the software. This information applies to Release 7 as well as earlier DEFINITY systems. All customers receive this software.

## Installation and maintenance

**DEFINITY ECS Release 7 — Installation and Test for Single-Carrier Cabinets, 555-230-894, Issue 4**

Provides procedures and information for hardware installation and initial testing of single-carrier cabinets. This book is available in the following languages: English, German (DE), Dutch (NL), Brazilian Portuguese (PTB), European French (FR), Latin Spanish (SPL), Italian (IT), Russian (RU), and Japanese (JA). To order, append the language suffix to the document number; for example, 555-230-894DE for German. No suffix is needed for the English version.

**DEFINITY ECS Release 7 — Installation and Test for Multi-Carrier Cabinets, 555-230-112, Issue 6**

Provides procedures and information for hardware installation and initial testing of multi-carrier cabinets.

**DEFINITY ECS Release 7 — Installation for Adjuncts and Peripherals, 555-230-125, Issue 5**

Provides procedures and information for hardware installation and initial testing of ECS adjunct and peripheral systems and equipment.

**DEFINITY ECS Release 7 — Installation, Upgrades and Additions for Compact Modular Cabinets, 555-230-128, Issue 4**

Provides procedures and information for hardware installation and initial testing of compact modular cabinets.

**DEFINITY ECS Release 7 — ATM Installation, Upgrades, and Administration, 555-233-106, Issue 1**

Provides step-by-step instructions for how to install, upgrade, and administer ATM switches.

**DEFINITY ECS Release 7 — Installation and Maintenance for Survivable Remote EPN, 555-233-102, Issue 2**

Describes how to install, cable, test, and perform maintenance on a Survivable Remote Expansion Port Network (SREPN). Provides power, ground, and fiber connections.

**DEFINITY ECS Release 7 — Upgrades and Additions for R7r, 555-230-121, Issue 5**

Provides procedures for an installation technician to upgrade an existing DEFINITY Communications System or DEFINITY ECS to DEFINITY ECS Release 7.

Includes upgrade considerations, lists of required hardware, and step-by-step upgrade procedures. Also includes procedures to add control carriers, switch node carriers, port carriers, circuit packs, auxiliary cabinets, and other equipment.

**DEFINITY ECS Release 7 — Upgrades and Additions for R7si, 555-233-104, Issue 1**

Provides procedures for an installation technician to upgrade an existing DEFINITY Communications System or DEFINITY ECS to DEFINITY ECS Release 7.

Includes upgrade considerations, lists of required hardware, and step-by-step upgrade procedures. Also includes procedures to add control carriers, switch node carriers, port carriers, circuit packs, auxiliary cabinets, and other equipment.

**DEFINITY ECS Release 7 — Maintenance for R7r, 555-230-126, Issue 4**

Provides detailed descriptions of the procedures for monitoring, testing, troubleshooting, and maintaining the R7r ECS. Included are maintenance architecture, craft commands, step-by-step trouble-clearing procedures, the procedures for using all tests, and explanations of the system's error codes.

**DEFINITY ECS Release 7 — Maintenance for R7si, 555-233-105, Issue 1**

Provides detailed descriptions of the procedures for monitoring, testing, troubleshooting, and maintaining the R7si ECS. Included are maintenance architecture, craft commands, step-by-step trouble-clearing procedures, the procedures for using all tests, and explanations of the system's error codes.

**DEFINITY ECS Release 7 — Maintenance for R7csi, 555-230-129, Issue 4**

Provides detailed descriptions of the procedures for monitoring, testing, troubleshooting, and maintaining the R7csi (Compact Modular Cabinet) ECS. Included are maintenance architecture, craft commands, step-by-step trouble-clearing procedures, the procedures for using all tests, and explanations of the system's error codes.

## Intuity documents

**Intuity Messaging Solutions LAN Integration with DEFINITY ECS, 585-313-602**

Provides detailed descriptions of the administration procedures for connecting Intuity products to DEFINITY ECS systems via the LAN.

## Call center documents

These documents are issued for DEFINITY ECS Call Center applications. The intended audience is DEFINITY ECS administrators.

### DEFINITY

#### **DEFINITY ECS Release 7 — Guide to ACD Call Centers, 555-233-503, Issue 1**

This module contains information about the call center-specific features of the DEFINITY ECS. This information was previously contained in DEFINITY ECS Administration and Feature Description.

#### **DEFINITY ECS Release 7 — Call Vectoring/EAS Guide, 555-230-521, Issue 2**

Provides information on how to write, use, and troubleshoot vectors, which are command sequences that process telephone calls in an Automatic Call Distribution (ACD) environment.

It is provided in two parts: tutorial and reference. The tutorial provides step-by-step procedures for writing and implementing basic vectors. The reference includes detailed descriptions of the call vectoring features, vector management, vector administration, adjunct routing, troubleshooting, and interactions with management information systems (including the Call Management System).

#### **DEFINITY ECS Release 7 — Basic Call Management System (BCMS) Operations, 555-230-706, Issue 1**

Provides detailed instructions on how to generate reports and manage the system. It is intended for telecommunications managers who wish to use Basic Call Management System (BCMS) reports and for system managers responsible for maintaining the system. This documentation applies to Release 7 as well as earlier DEFINITY systems.

### CentreVu CMS

The following documents provide information about administration and use of the CentreVu Call Management System (CMS).

#### **CentreVu CMS Release 3 Version 6— Administration, Issue 1, 585-215-850**

#### **CentreVu Supervisor Version 6 — Reports, 585-215-851, Issue 1**

#### **CentreVu CMS Release 3 Version 5 — Custom Reports, 585-215-822, Issue 1**

#### **CentreVu CMS Release 3 Version 6 — Upgrades and Migrations, 585-215-856, Issue 1**

#### **CentreVu CMS Release 3 Version 6 — External Call History Interface, 585-215-854, Issue 1**

#### **CentreVu CMS Release 3 Version 5 — Forecast, 585-215-825, Issue 1**

#### **CentreVu CMS Software Installation and Setup, 585-215-866**

#### **CentreVu CMS Switch Connections and Administration, 585-215-876**

#### **CentreVu CMS R3V6 — Planning, Configuration, and Implementation, 585-215-879, Issue 1**

## Application-specific documents

These documents support specific DEFINITY documents.

### ASAI

#### **DEFINITY Communications System G3 — CallVisor ASAI Planning Guide, 555-230-222, Issue 4**

Provides procedures and directions for the account team and customer personnel for effectively planning and implementing the CallVisor Adjunct/Switch Application Interface (ASAI) PBX-Host environment. The CallVisor ASAI is a communications interface that allows adjunct processors to access switch features and to control switch calls. It is implemented using an Integrated Services Digital Network (ISDN) Basic Rate Interface (BRI). Hardware and software requirements are included.

#### **DEFINITY ECS Release 7 — CallVisor ASAI Protocol Reference, 555-230-221, Issue 8**

Provides detailed layer 3 protocol information regarding the CallVisor Adjunct/Switch Application Interface (ASAI) for the systems and is intended for the library or driver programmer of an adjunct processor to create the library of commands used by the applications programmers. Describes the ISDN message, facility information elements, and information elements.

#### **DEFINITY ECS Release 7— CallVisor ASAI Technical Reference, 555-230-220, Issue 8**

Provides detailed information regarding the CallVisor Adjunct/Switch Application Interface (ASAI) for the systems and is intended for the application designer responsible for building and/or programming custom applications and features.

#### **DEFINITY ECS — CallVisor ASAI DEFINITY LAN Gateway over MAP-D Installation, Administration, and Maintenance of, 555-230-113, Issue 2**

Provides procedures for installation, administration, and maintenance of the CallVisor Adjunct/Switch Application Interface (ASAI) Ethernet application over the DEFINITY LAN Gateway and is intended for system administrators, telecommunications managers, Management Information System (MIS) managers, LAN managers, and Lucent personnel. The ASAI-Ethernet application provides ASAI functionality using 10Base-T Ethernet rather than BRI as a transport media.

#### **DEFINITY ECS — CallVisor ASAI PC LAN over MAP-D Installation, Administration, and Maintenance of, 555-230-114, Issue 1**

Provides procedures for installation, administration, and maintenance of the CallVisor Adjunct/Switch Application Interface (ASAI) Ethernet application over the PC LAN and is intended for system administrators, telecommunications managers, Management Information System (MIS) managers, LAN managers, and Lucent personnel. The ASAI-Ethernet application provides ASAI functionality using 10Base-T Ethernet rather than BRI as a transport media.

**DEFINITY ECS — CallVisor ASAI Overview, 555-230-225, Issue 2**

Provides a general description of Call Visor ASAI.

This document is available in the following languages: English, German (DE), Dutch (NL), Brazilian Portuguese (PTB), European French (FR), Colombian Spanish (SPL), and Japanese (JA). To order, append the language suffix to the document number; for example, 555-230-894DE for German. No suffix is needed for the English version.

**DEFINITY ECS — CallVisor PC ASAI Installation and Reference, 555-230-227, Issue 3**

Provides procedural and reference information for installers, Tier 3 support personnel, and application designers.

**ACD****DEFINITY Communications Systems G3 — Automatic Call Distribution (ACD) Agent Instructions, 555-230-722, Issue 5**

Provides information for use by agents after they have completed ACD training. Includes descriptions of ACD features and the procedures for using them.

**DEFINITY Communications Systems G3 — Automatic Call Distribution (ACD) Supervisor Instructions, 555-230-724, Issue 4**

Provides information for use by supervisors after they have completed ACD training. Includes descriptions of ACD features and the procedures for using them.

**Console operations**

The primary audience for these documents consists of attendant console users.

**DEFINITY ECS Console Operations, 555-230-700, Issue 4**

Provides operating instructions for the attendant console. Included are descriptions of the console control keys and functions, call-handling procedures, basic system troubleshooting information, and routine maintenance procedures.

**DEFINITY ECS Release 7 — Console Operations Quick Reference, 555-230-890, Issue 3**

Provides operating instructions for the attendant console. Included are descriptions of the console control keys and functions, call-handling procedures, basic system troubleshooting information, and routine maintenance procedures. This book is available in the following languages: English, German (DE), Dutch (NL), Brazilian Portuguese (PTB), European French (FR), Latin Spanish (SPL), Italian (IT), Russian (RU), and Japanese (JA). To order, append the language suffix to the document number; for example, 555-230-890DE for German. No suffix is needed for the English version.

**Hospitality**

The primary audience for these documents consists of hotel and health care administrators, and telephone operators at these locations.

**DEFINITY ECS Release 7 — Hospitality Operations, 555-230-723, Issue 5**

Provides step-by-step procedures for using the features available for the lodging and health industries to improve their property management and to provide assistance to their employees and clients. Includes detailed descriptions of reports.

## Non-U.S. audiences

### **DEFINITY ECS Release 7 — Application Notes for Type Approval**

Describes specific hardware and administration required to operate the DEFINITY ECS in countries outside the United States. Available on the DEFINITY ECS Release 7 Library CD only.

## A

### AAR

See [Automatic Alternate Routing \(AAR\)](#).

### Abbreviated Dialing (AD)

A feature that allows callers to place calls by dialing just one or two digits.

### AD

See [Abbreviated Dialing \(AD\)](#)

### ADU

See [Asynchronous data unit \(ADU\)](#).

### adjunct

A processor that does one or more tasks for another processor and that is optional in the configuration of the other processor. Intuity AUDIX and CentreVu CMS are considered adjuncts to the DEFINITY ECS.

### Administration Without Hardware (AWOH)

A feature that allows administration of ports without associated terminals or other hardware.

### ANSI

American National Standards Institute. A United States professional/technical association supporting a variety of standards.

### APLT

Advanced Private-Line Termination.

### ARP

Address Resolution Protocol.

### ARS

See [Automatic Route Selection \(ARS\)](#).

### ASCII

American Standard Code for Information Interchange. The standard code for representing characters in digital form. Each character is represented by an 8-bit code (including parity bit).

**asynchronous data transmission**

A method of transmitting data in which each character is preceded by a start bit and followed by a stop bit, thus permitting data characters to be transmitted at irregular intervals. This type transmission is advantageous when transmission is not regular (characters typed at a keyboard). Also called asynchronous transmission.

**Asynchronous data unit (ADU)**

A device that allows direct connection between RS-232C equipment and a digital switch.

**Asynchronous Transfer Mode (ATM)**

A connection-oriented, digital service optimized for fiber-optic lines at speeds up to 622.08 mbps. ATM networks set up a [virtual circuit \(virtual connection\)](#) between the transmitter and the receiver before sending any data. Data is then sent in a continuous stream of fixed-length, 58-byte cells, each of which contains a 48-byte payload and a 5-byte header. The header contains the [virtual circuit number](#) that identifies the pre-negotiated path through the network.

**ATM**

See [Asynchronous Transfer Mode \(ATM\)](#)

**Audio Information Exchange (AUDIX)**

A fully integrated voice-mail system. Can be used with a variety of communications systems to provide call-history data, such as subscriber identification and reason for redirection.

**Automatic Alternate Routing (AAR)**

A feature that routes calls to other than the first-choice route when facilities are unavailable.

**Automatic Route Selection (ARS)**

A system for automatically routing telephone calls by the least costly route. A feature of the Lucent DEFINITY Enterprise Communications Server.

**auxiliary trunk**

A trunk used to connect auxiliary equipment, such as radio-paging equipment, to a communications system.

**AWOH**

See [Administration Without Hardware \(AWOH\)](#).

**B****B8ZS**

See [Bipolar 8 Zero Substitution \(B8ZS\)](#).

**Basic Rate Interface (BRI)**

A standard ISDN frame format that specifies the protocol used between two or more communications systems. As used in North America, BRI provides 23 64-kbps B-channels (voice or data) and one 64-kbps D-channel (signaling). The D-channel is the 24th channel of the interface and contains multiplexed signaling information for the other 23 channels.

**bandwidth**

The amount of data that a given [channel](#) can transmit in a given period of time, measured in bits per second (not bytes per second) on digital networks or in Hertz (cycles per second) on analog networks. For analog transmission, the band width can be measured as the difference, expressed in hertz, between the highest and lowest frequencies transmitted.

**baud**

A unit of transmission rate equal to the number of signal events per second. See also [bit rate](#).

**BCC**

See [bearer capability class \(BCC\)](#)

**bearer capability class (BCC)**

Code that identifies the type of a call (for example, voice and different types of data). Determination of BCC is based on the caller's characteristics for non-ISDN endpoints and on the Bearer Capability and Low-Layer Compatibility Information Elements of an ISDN endpoint. Current BCCs are 0 (voice-grade data and voice), 1 (DMI mode 1, 56 kbps data transmission), 2 (DMI mode 2, synchronous/asynchronous data transmission up to 19.2 kbps) 3 (DMI mode 3, 64 kbps circuit/packet data transmission), 4 (DMI mode 0, 64 kbps synchronous data), 5 (temporary signaling connection, and 6 (wideband call, 128–1984 kbps synchronous data).

**BER**

Bit error rate.

**Bipolar 8 Zero Substitution (B8ZS)**

B8ZS line coding substitutes a mix of 1s and 0s for every group of eight consecutive 0s in a stream of AMI-encoded data (see [line coding](#)). The encoded string contains consecutive ones with the same polarity. These intentional, bipolar violations of the AMI coding scheme let the receiving end identify, decode, and restore the long zero strings in the original message. B8ZS line coding does not corrupt digital data, so it is commonly used with [T-1](#) lines.

**bit (binary digit)**

One unit of information in binary notation, having two possible values: 0 or 1.

**bit rate**

The speed at which bits are transmitted, usually expressed in bits per second. Also called *data rate*.

**bps**

Bits per second.

**BOS**

Bit-oriented signaling.

**BRI**

See [Basic Rate Interface \(BRI\)](#)

**bridge**

A device that connects two or more packet-switched networks and directs packets sent from one to the other. See [router](#).

**bus bridge**

A connection between the TDM bus and the packet bus built into the C-LAN circuit pack for use with DEFINITY ECS R7csi. Bus bridge connectivity is not used with any other DEFINITY switch model.

**BX.25**

A version of the CCITT X.25 protocol for data communications. BX.25 adds a fourth level to the standard X.25 interface. This uppermost level combines levels 4, 5, and 6 of the ISO reference model.

**byte**

A sequence of (usually eight) bits processed together.

**C****Call Detail Recording (CDR)**

A feature that uses software and hardware to record call data. (Same as station message detail recording — SMDR).

**Call Detail Recording utility (CDRU)**

Software that collects, stores, optionally filters, and outputs call-detail records.

**Call Management System (CMS)**

An application, running on an adjunct processor, that collects information from an ACD unit. CMS enables customers to monitor and manage telemarketing centers by generating reports on the status of agents, splits, trunks, trunk groups, vectors, and VDNs, and enables customers to partially administer the ACD feature for a communications system.

**call redirection**

See [restricted facilities](#).

**CALLED Party Number IE**

The ISDN information element containing the digits sent to the called party.

**capture rate**

The number of frames contained in a one-second video sample, used as a measure of video quality.

**CA-TSC**

Call-Associated Temporary Signaling Connection.

**CCIS**

Common-Channel Interoffice Signaling

**CCITT**

Comite Consultatif International Telephonique et Telegraphique. Now called *International Telecommunications Union (ITU)*.

**CCMS**

Control-Channel Message Set.

**CDR**

See [Call Detail Recording \(CDR\)](#). (Same as SMDR and CMDR).

**CDRU**

Call Detail Record Unit.

**CDRP**

Call Detail Record Poller.

**CEPT**

European Conference of Postal and Telecommunications Rate 1.

## channel

A communication path linking two points for transmitting voice and data. Also:

1. A circuit-switched call.
2. In wideband, all of the time slots (contiguous or noncontiguous) necessary to support a call. Example: an H0-channel uses six 64-kbps time slots.
3. A DS0 on a T1 or E1 facility not specifically associated with a logical circuit-switched call; analogous to a single trunk.

## circuit

1. An arrangement of electrical elements through which electric current flows.
2. A channel or transmission path between two or more points.

## circuit pack

A card on which electrical circuits are printed, and IC chips and electrical components are installed. A circuit pack is installed in a switch carrier.

## Class of Restriction (COR)

A feature that allows up to 64 classes of call-origination and call-termination restrictions for voice terminals, voice-terminal groups, data modules, and trunk groups.

## Class of Service (COS)

A feature that uses a number to specify if voice-terminal users can activate the Automatic Callback, Call Forwarding All Calls, Data Privacy, or Priority Calling features.

## circuit-switched network

A network that sets up and maintains a connection for the exclusive use of two or more communicating parties for the duration of their call. The familiar, voice telephone network is circuit-switched. See [packet switching](#).

## clear-channel facility

A digital circuit that requires no in-channel framing or control bits. The whole bandwidth is thus available for data transmission.

## client

An application that runs on one processor while drawing on data or other resources that are on a [server](#) located elsewhere. **MMCX client:** a workstation capable of making MMCX calls. Such a workstation is a client of one or more MMCX servers. See [dial-plan table](#).

## CMDR

Centralized Message Detail Recording. (Same as CDR and SMDR).

## CMS

Call Management System.

**COR**

See [Class of Restriction \(COR\)](#).

**COS**

See [Class of Service \(COS\)](#).

**CP**

Circuit pack.

**CSN**

See [circuit-switched network](#).

**CSU**

Channel service unit.

**cyclic redundancy checking (CRC)**

A method for detecting read, transmit, and write errors in data. At the transmission end, the system treats a block of data as a single binary number, divides it by some specified binary number, and appends the remainder (called the CRC character) to the data. At the receiving end, the system recalculates the remainder and compares the result to the CRC character. If the two agree, there are no errors.

**D****data channel**

A communications path between two points used to transmit digital signals.

**data-communications equipment (DCE)**

The equipment (usually a modem, data module, or packet assembler/disassembler) on the network side of a communications link that makes the binary serial data from the source or transmitter compatible with the communications channel.

**data link**

The configuration of physical facilities enabling end terminals to communicate directly with each other.

**data path**

The end-to-end connection used for a data communications link. A data path is the combination of all elements of an interprocessor communication in a DCS.

**data port**

A point of access to a computer that uses trunks or lines for transmitting or receiving data.

**data service unit (DSU)**

A device that transmits digital data on transmission facilities.

**data terminal equipment (DTE)**

Equipment consisting of the endpoints in a connection over a data circuit. In a connection between a data terminal and host, the terminal, the host, and their associated modems or data modules make up the DTE.

**DCE**

Data-communications equipment.

**D-channel backup**

Type of backup used with Non-Facility Associated Signaling (NFAS). A primary D-channel provides signaling for an NFAS D-channel group (two or more PRI facilities). A second D-channel, on a separate PRI facility of the NFAS D-channel group, is designated as backup for the D-channel. Failure of the primary D-channel causes automatic transfer of call-control signaling to the backup D-channel. The backup becomes the primary D-channel. When the failed channel returns to service, it becomes the backup D-channel.

**DCIU**

Data communications interface unit.

**DCP**

Digital Communications Protocol.

**DCS**

Distributed Communications System.

**dial-plan table**

A data structure that defines how a switch or server (such as MMCX) interprets dialed digits and routes calls. The dial-plan table performs two tasks. First, it identifies a dial plan rule that applies to the kind of input it has received. Then it applies the rule and translates the dialed input into a corresponding extension or public-network telephone number. (MMCX interserver calls are handled differently; see [interserver routing table](#).)

**DID**

Direct Inward Dialing.

**digital communications protocol (DCP)**

A proprietary protocol used to transmit both digitized voice and digitized data over the same communications link. A DCP link is made up of two 64-kbps information (I-) channels and one 8-kbps signaling (S-) channel. The DCP protocol supports 2 information-bearing channels, and thus two telephones/data modules.

**digital signal level 0 (DS0)**

A single 64-kbps voice channel. A DS0 is a single 64-kbps channel in a T1 or E1 facility and consists of eight bits in a T1 or E1 frame every 125 microseconds.

**digital signal level 1 (DS1)**

A single 1.544-Mbps (United States) or 2.048-Mbps (outside the United States) digital signal carried on a T1 transmission facility. A DS1 converter complex consists of a pair, one at each end, of DS1 converter circuit packs and the associated T1/E1 facilities.

**digital terminal data module (DTDM)**

An integrated or adjunct data module that shares with a digital telephone the same physical port for connection to a communications system. The function of a DTDM is similar to that of a PDM and MPDM in that it converts RS-232C signals to DCP signals.

**distributed application**

A computer application that runs on one or more [clients](#) and uses shared resources, such as databases. These resources reside on a common [server](#). Distributed design lets multiple users run programs using common, centrally maintained files.

**domain**

An addressable location on a network, such as a group of computers, single computer, or subdirectory. See [Domain Name Server \(DNS\)](#).

**Domain Name Server (DNS)**

An Internet computer that maintains a database of [domain](#) names.

Provides a mapping of alphanumeric names to IP addresses; for example, xxx.xxx.xxx.xxx --> www.lucent.com.

**DNS**

See [Domain Name Server \(DNS\)](#).

**DSU**

Data service unit.

**DTDM**

Digital-terminal data module.

**DTE**

Data-terminal equipment.

**E****E-1**

A digital transmission link with a capacity of 2.048 Mbps (2,048,000 bits per second). The European equivalent of the [T-1](#). It can support 30 multiplexed 64-Kbps voice and data channels plus separate 64-Kbps channels for signalling and framing (synchronization). Also spelled **E1**.

**EIA**

See [Electronics Industries Association \(EIA\)](#).

**EIA-232**

A physical interface specified by the EIA. EIA-232 transmits and receives asynchronous data at speeds of up to 19.2 kbps over cable distances of up to 50 feet. EIA-232 replaces RS-232 protocol in some DEFINITY applications.

**electronic tandem network (ETN)**

A tandem tie-trunk network that has automatic call-routing capabilities based on the number dialed and the most preferred route available. Each switch in the network is assigned a unique private network office code (RNX), and each voice terminal is assigned a unique extension.

**Electronics Industries Association (EIA)**

A trade association of the electronics industry that establishes electrical and functional standards.

**Ethernet**

A [local area network](#) (LAN) that works over short distances on twisted-pairs or coaxial cables at speeds up to 10 mbps or 100 mbps. One of the two LAN protocols MMCX supports. See [ATM](#), [LAN emulation \(LANE\)](#).

**Ethernet Source Address**

A 48-bit physical address of the NIC; also called the MAC address.

**ETN**

Electronic tandem network

**F****facility**

A telecommunications transmission pathway and associated equipment.

**facility-associated signaling (FAS)**

Signaling for which a D-channel carries signaling only for those channels on the same physical interface.

## FAS

Facility-associated signaling

## framing

The data-formatting conventions that allow a receiver to synchronize with the transmitting end of a circuit. For example, T-1 frames contain an 8-bit sample from each of the 24 channels on the interface (192 bits total) plus a framing bit (for a total of 193 bits). Each framing bit marks the end of a timed sample the input at the transmission end.

## FRL

Facilities Restriction Level.

## FX

Foreign exchange.

## G

### Gateway

(1) protocol converter (2) a node between network segments.

## H

### H.320

The most common standard for videoconferencing over ISDN BRI circuits. H.320-compatible systems can communicate with each other even when they rely on dissimilar hardware and software.

### H.323

A specification that sets standards for multimedia communications between LANs and telephony networks, such as ISDN.

### HDB3

See [High Density Bipolar 3-Bit Substitution \(HDB3\)](#).

### High Density Bipolar 3-Bit Substitution (HDB3)

HDB3 line coding is similar to [Bipolar 8 Zero Substitution \(B8ZS\)](#) in some ways. It replaces every 4 consecutive zero in a stream of AMI-encoded data (see [line coding](#)) with either of two sequences. If there has been an even number of 1s since the last substitution, it substitutes the pattern **1 0 0 *BipolarViolation***, where ***BipolarViolation*** is a 3-volt pulse (a **1**) of the same polarity as the preceding 3-volt pulse. If there has been an odd number of 1s since the last substitution, HDB3 coding substitutes the pattern **0 0 0 *BipolarViolation*** for the 4-zero string. This system does not corrupt binary data, and is commonly used with [E-1](#) lines.

**host**

A [server](#).

**host name**

See [server name](#).

**I**  
**IANA**

Internet Assigned Number Authority.

**INADS**

Initialization and Administration System

**Information element (IE)**

The data fields in ISDN messages.

**in-service state**

The condition or state of an MMCX server that is ready to handle calls.

**International Standards Organization (ISO)**

A body that defines and/or adopts protocols widely used in the computer and telecommunications industries.

**International Telecommunications Union (ITU)**

Formerly known as International Telegraph and Telephone Consultative Committee (CCITT), ITU is an international organization that sets universal standards for data communications, including ISDN. ITU members are from telecommunications companies and organizations around the world.

**Internet**

The decentralized network of networks that grew from ARPAnet and supported by TCP/IP.

**interserver routing table**

A database that keeps track of the [interserver routing tables](#) on a multiserver MMCX network. When a server sets up a [Point-to-Point Protocol](#) connection with a remote server, the local server looks up the dialed-digit sequences in the interserver routing table. (Calls that involve only one MMCX server are routed using the [dial-plan table](#).)

**I/O base address**

The place in memory where a given computer peripheral places and picks up messages that travel over a computer's system bus.

## IP

Internet Protocol.

### IP (Internet Protocol) address

A 32-bit number that uniquely identifies endpoints on the Internet, commonly specified in the form ***n1.n2.n3.n4*** where each  $n_n$  is a decimal number between **0** and **255**. Part of the IP address represents the address of a local network's gateway to the Internet and part represents the host-machine address within that local network. The available bits are apportioned to the network address or local address using a system of classes. The Class A addresses used by the largest organizations on the Internet reserve the first 8 bits for the network portion of the address and remaining 24 for the host machine. Class B addresses, the most common class, assign 16 bits to the network and 16 to the host machine. The Class C addresses used by small networks reserve the first 24 bits for the network and the remaining 8 bits for the host.

### IP user

An [H.323](#) endpoint on an MMCX network. Such users do not have log ins, so the MMCX server identifies them using an extension number and an IP address.

## ISDN

Integrated Services Digital Network, a digital, voice and data service. You get ISDN in either of two forms. Primary Rate Interface (PRI) service has a capacity of 1.544 mbps, divided into 23 or 29 B-channels (23 on a North American T-1 connection, 29 on a European E-1) and 1 D-channel, each with a capacity of 64 kbps. Basic Rate Interface (BRI) service has a capacity of 144 kbps, divided into 2 B-channels at 64 kbps each and 1 D-channel at 16 kbps.

### ISDN trunk

A trunk administered for use with ISDN-PRI. Also called ISDN facility.

## L

### LAN

See [local area network](#).

### LAN emulation (LANE)

A technique that lets [ATM](#) networks communicate with [Ethernet](#) LAN cards. ATM service is not widely available at the desktop and ATM interface cards are expensive, so ATM networks usually emulate LANs when communicating with user terminals. Typically, a **LAN-emulation configuration server (LECS)** keeps track of the relationships between ATM-network addresses and IP addresses on the LAN. Each ATM card is then treated as a client of a **LAN-emulation server**, which connects the ATM cards to the LAN cards on the user terminals.

**LAP-D**

See [link-access procedure on the D-channel \(LAPD\)](#).

**LECS (LAN-emulation configuration server)**

See [LAN emulation \(LANE\)](#).

**LES (LAN-emulation server)**

See [LAN emulation \(LANE\)](#).

**line coding**

Line coding is the data format that lets either end of a communications channel correctly interpret messages from the other. Line coding systems specify the voltage levels and patterns that represent binary digits (1s and 0s), based on the requirements of the transmission network. The AT&T network has two: it demands that the net voltage on the line equal 0 volts DC and it demands a minimum [Open System Interconnect \(OSI\) Model](#). The T-carrier system meets the first requirement by using a bipolar line-coding scheme called Alternate Mark Inversion (AMI). It meets the second with one of several supplementary coding schemes, including [ZCS](#), [Bipolar 8 Zero Substitution \(B8ZS\)](#), and [High Density Bipolar 3-Bit Substitution \(HDB3\)](#).

**line compensation**

An allowance for pulse distortions in the cable that connects the MMCX server to the first channel service unit (CSU) on the PRI span. It is proportional to the length of the cable. T1 circuit packs adjust the outgoing signal so that it arrives at the far end without distortion.

**link**

A transmitter-receiver channel that connects two systems.

**link-access procedure on the D-channel (LAPD)**

A link-layer protocol on the ISDN-BRI and ISDN-PRI data-link layer (level 2). LAPD provides data transfer between two devices, and error and flow control on multiple logical links. LAPD is used for signaling and low-speed packet data (X.25 and mode 3) on the signaling (D-) channel and for mode-3 data communications on a bearer (B-) channel.

**local area network**

A short-range data communication network providing high-speed carrier service with low error rates. Generally, a LAN is limited in range to a maximum of 6.2 miles. Ethernet and Token-Ring are common LAN architectures. See [wide area network](#), [Ethernet](#).

**looparound testing**

Checking an interface by sending a signal through the output, across a medium (the loop), and back through the input. Internal looparound tests run against the internal circuitry of the card. External looparound tests check the connectors at the edge of the card using a fiber or wire loop. PRI, Ethernet, and ATM cards are tested this way.

**M****MAC**

Media Access Control; a sublayer of the OSI Data Link layer, provides an interface with the network adapter.

**main-satellite-tributary**

A private network configuration that can either stand alone or access an ETN. A main switch provides interconnection, via tie trunks, with one or more subtending switches, called satellites; all attendant positions for the main/satellite configuration; and access to and from the public network. To a user outside the complex, a main/satellite configuration appears as one switch, with one listed directory number (LDN). A tributary switch is connected to the main switch via tie trunks, but has its own attendant positions and LDN.

**Management Information Base (MIB)**

A virtual database used by the [Simple Network Management Protocol \(SNMP\)](#).

**MAPD**

Multiapplication platform for DEFINITY.

**MA-UUI**

Message-Associated User-to-User Signaling.

**M-Bus**

Memory bus.

**MDR**

Message detail record.

**MIB**

See [Management Information Base \(MIB\)](#).

**MMCH**

Multimedia call handling.

**MSA**

Message Server Adjunct.

**multicasting**

A transmission method that promotes efficient bandwidth utilization on a multimedia data network when several parties are transmitting and receiving simultaneously. Normally, each party sends a separate video stream to each of the other parties and receives a separate video stream from each in return (this is called unicasting). Multicasting substitutes a single broadcast transmission (addressed to all parties) for the separate transmissions addressed to each. Each party then continues to receive multiple data streams while sending only one. For best results, multicast messages should be restricted to one or more [subnet](#).

**N****National Television Standards Committee (NTSC) standard**

The standard format and transmission method for television signals in North America, Central America, and Japan. The NTSC is a division of the Electronic Industries Association (EIA). MMCX video transmissions conform with NTSC requirements.

**national number**

The full dialed number minus the country code. The national number is composed of office code plus subscriber code. In North America, this means area code plus seven digits. For example, 303-538-1234 is a national number.

**NCA/TSC**

Noncall-associated/temporary-signaling connection.

**NCOSS**

Network Control Operations Support Center.

**NCSO**

National Customer Support Organization.

**NEC**

National Engineering Center.

**NEMA**

National Electrical Manufacturer's Association.

**NETCON**

Network-control circuit pack.

**Network**

A collection of computer-like devices ("nodes") that are connected by, and can communicate across, a common transmission medium.

## Network Adapter

The interface between a node and the network; has a unique physical address.

## Network Interface Card (NIC)

A circuit board that can be fitted to a personal computer (PC) to allow the PC to communicate with other machines on a network. MMCX works with Ethernet cards and with asynchronous transfer mode (ATM) cards running Ethernet emulation. Also called a network adapter.

## NFAS

See [Nonfacility-associated signaling \(NFAS\)](#).

## NIC

See [Network Interface Card \(NIC\)](#).

## Node

1. A point on a network that provides an interface to a communications device.
2. A switch or adjunct in a Lucent DCS network.

## Nonfacility-associated signaling (NFAS)

A method that allows multiple T1 and/or E1 facilities to share a single D-channel to form an ISDN-PRI. If D-channel backup is not used, one facility is configured with a D-channel, and the other facilities that share the D-channel are configured without D-channels. If D-channel backup is used, two facilities are configured to have D-channels (one D-channel on each facility), and the other facilities that share the D-channels are configured without D-channels.

## NTSC

See [National Television Standards Committee \(NTSC\) standard](#).

# O

## Open System Interconnect (OSI) Model

An International Standards Organization (ISO) interoperability specification. OSI defines standard services that compliant communications networks and equipment must provide, rather than specific implementations. It divides network operations into 7 steps, called layers, and arranges them hierarchically, in a protocol stack. The rules (protocols) in each layer of the stack specify a service that other parts of a communications system can always get, as long as they make their requests in a standard way. This approach leaves designers free to implement the internal details of the service in whatever way seems best to them. The OSI layers are **1 Physical** (transmission medium), **2 Datalink** (link-level signaling and error control), **3 Network** (computer-to-computer signaling, routing, etc.), **4 Transport** (delivery, end-to-end error control, and flow control), **5 Session** (dialog management), **6 Presentation** (data-format compatibility), and **7 Application** (file-transfer services, virtual terminals, etc.).

**OSI**

See [Open System Interconnect \(OSI\) Model](#).

**out-of-service state (OOS)**

The condition or state of an MMCX server that is operating but not ready to accept or place calls.

**P****PACCON**

Packet controller.

**packet**

A group of bits (including a message element, which is the data, and a control information element (IE), which is the header) used in packet switching and transmitted as a discrete unit. In each packet, the message element and control IE are arranged in a specified format.

**packet bus**

A wide-bandwidth bus that transmits packets.

**packet switching**

A data-transmission technique whereby user information is segmented and routed in discrete data envelopes called packets, each with its own appended control information, for routing, sequencing, and error checking. The packets can travel to their destinations by varying routes. For data transmissions, a packet switched network can make more efficient use of available bandwidth than a [circuit-switched network](#), because it does not dedicate a channel for the duration of a call. Instead, packets are queued and sent on a standby basis, as channel capacity becomes available. The Internet is a good example of a packet-switching network.

**PBX**

Private Branch Exchange: a customer-owned telephone switch that connects a company's internal telephone network with the local telephone service provider's central office. Lucent's DEFINITY PBX is a good example.

**PDM**

See [processor data module \(PDM\)](#).

**PGATE**

Packet gateway.

**Point-to-Point Protocol**

A [TCP/IP](#) implementation tailored for use over telephone lines. It supports router-to-router and host-to-network connections over both synchronous and asynchronous circuits. PPP replaces SLIP, the older Serial Line Interface Protocol.

**Port**

(1) Interface between an application and the TCP/IP network. A port is a predefined internal address (port number) that serves as a pathway from the application to the Transport layer (or from T to A). (2) circuit-pack port.

**PPP**

See [Point-to-Point Protocol](#).

**PRI**

Primary Rate Interface. See [ISDN](#).

**Primary Rate Interface**

See [ISDN](#).

**private network**

A network used exclusively for the telecommunications needs of a particular customer.

**private network office code (RNX)**

The first three digits of a 7-digit private network number.

**processor data module (PDM)**

A device that provides an RS-232C DCE interface for connecting to data terminals, applications processors (APs), and host computers, and provides a DCP interface for connection to a communications system.

**protocol**

A set of conventions or rules governing the format and timing of message exchanges to control data movement and correction of errors.

**PSDN**

Packet-switch public data network.

**PSTN**

See [Public Switched Telephone Network \(PSTN\)](#).

**PSN**

Packet-switched network.

**Public Switched Telephone Network (PSTN)**

The worldwide voice telephone system.

**Q****QPPCN**

Quality Protection Plan Change Notice.

**QSIG**

A set of open standards for Enterprise Networking. QSIG is a protocol defining message exchanges (signalling) at the “Q” reference point between two PBXs.

**R****RBS**

Robbed-bit signaling.

**RFC**

Request for comment.

**restricted facilities**

PRI spans that use ZCS [line coding](#), the opposite of [unrestricted facilities](#).

**RNX**

Route-number index (private network office code)

**router**

An interface between different networks. Routers support network management, including load balancing, route optimization, prioritizing of calls, and troubleshooting. They are thus more capable than [bridges](#).

**routing plan**

Routing plans direct outgoing voice-interworking and interserver calls to the first available PRI trunk group in a list. This arrangement lets you allow for trunk groups that are busy, out of service, or out of bandwidth. Each routing plan is identified by a routing-plan number in the range **1-32**.

**RPN**

Routing-plan number.

## S

**Socket**

An address formed by concatenating the IP address and the port number.

**server**

1. Any system that maintains and administers files that are used by independent, [client](#) applications. 2. the MMCX server, the computer that sets up, maintains, and administers MMCX network communications. See [dial-plan table](#).

**server name**

The name that identifies the MMCX server on your [local area network](#). You enter the server name in the boot-time administration menu. See [server number](#).

**server number**

The ISDN international number that uniquely identifies your MMCX server on the PBX and/or the public telephone network. See [server name](#), [interserver routing table](#).

**signaling**

The control information that a network uses to set up and maintain connections. On-hook and off-hook are, for instance, the familiar voice-telephone signals that tell the central office that you have picked up the telephone handset or hung up at the end of a call.

In-channel signalling reserves part of the available data -communication bandwidth for control information (see [restricted facilities](#)). Out-of-channel signalling schemes use a separate channel for signals, so that data transmissions can use all of the bandwidth available to them (see [clear-channel facility](#)).

**Simple Network Management Protocol (SNMP)**

An International Standards Organization (ISO) protocol that sets standards for communications between network components and network management stations. SNMP handles network resources using the information contained in a management information base (MIB), a virtual database resident on the various parts of the network. SNMP supports security, configuration, performance, fault management, and accounting management. SNMP is part of the ISO [Open System Interconnect \(OSI\) Model](#) specification.

**SMDR**

Station Message Detail Recording. (Same as call detail recording — CDR).

**SNMP**

See [Simple Network Management Protocol \(SNMP\)](#).

**SPE**

Switch Processing Element

**subnet**

A network within a larger network. Subdividing a network into subnets improves the efficiency of routing and makes the best use of the limited number of addresses available with any given addressing scheme. Subnetworks are defined by using part of the host-machine portion of the [IP \(Internet Protocol\) address](#) as an additional layer of network information. Routers can then distinguish between a networking part that is significant for internet/intranet routing and a host-machine part, which is significant only within the local subnet.

**subnet mask**

A bit pattern that lets a network administrator define subnets using the host-machine portion of the [IP \(Internet Protocol\) address](#). The subnet mask has binary ones in positions corresponding to the network and subnet parts of the address and zeros in the remaining, host-address positions. During IP-address resolution, zero fields in the mask hide corresponding host-address fields in the address, causing the router to ignore them. The router resolves only the networking part of the address, leaving the host part for the local subnet to resolve. This increases speed and makes [multicasting](#) more efficient. Subnet masks are usually written in the decimal notation used for IP addresses.

**T****T-1**

A 4-wire (2 twisted pair), digital communications link with a capacity of 1.544 Mbps (1,544,000 bits per second). A T-1 provides 24 separate 64-Kbps channels. These can support up to 23 concurrent voice and data channels plus a separate channel for signalling and framing (synchronization). T-1 is the standard for data communications in North America and Japan. Also spelled **T1**. See [E-1](#).

**T-carrier**

A hierarchy of digital voice- and data-transmission systems used in North America and based on multiples of the capacity of the [T-1](#) line.

**tandem switch**

A switch within an electronic tandem network (ETN) that provides the logic to determine the best route for a network call, possibly modifies the digits outpulsed, and allows or denies certain calls to certain users.

**tandem-through**

The switched connection of an incoming trunk to an outgoing trunk without human intervention.

**tandem tie-trunk network (TTTN)**

A private network that interconnects several customer switching systems.

**TCP**

Transmission Control Protocol — Transport layer; Connection oriented, reliable

**TCP/IP**

Transmission Control Protocol/Internet Protocol. A standard that lets different computer hardware and different operating systems (such as PCs, Apple computers, UNIX workstations, and mainframes) communicate with each other over a network. TCP/IP is the most complete, most widely accepted network protocol currently available.

**TDM**

See [time-division multiplexing](#).

**tie trunk**

A telecommunications channel that directly connects two private switching systems.

**time-division multiplexing**

A way of interleaving digitized voice, video, and/or data so that several calls can be sent concurrently over the same spread of frequencies. TDM systems distribute the available bandwidth across a series of time slots and divide each input stream into a set of samples. They then assign successive time slots to the first sample in each input stream. They repeat the process until all time slots have been assigned or all inputs sent. At the far end, the receiver demultiplexes the transmission and reconstructs the original sequence of samples. Time-division multiplexing is typically used on [circuit-switched networks](#).

**time slot**

64 kbps of digital information structured as eight bits every 125 microseconds. In the switch, a time slot refers to either a DS0 on a T1 or E1 facility or a 64-kbps unit on the TDM bus or fiber connection between port networks.

**trunk**

A communication line linking two switches (public-network, PBX, or MMCX-server).

**trunk group**

A collection of trunks that all terminate at the same public switch, PBX, or MMCX server.

**U****UDP**

1. User Datagram Protocol — Transport layer; Connectionless, unreliable, fast.
2. Uniform Dial Plan.

**UNP**

Uniform numbering plan

**unrestricted data**

Data that has to travel over an [unrestricted facilities](#), because it can be corrupted by [Zero Code Suppression \(ZCS\) line coding](#). Digital data is unrestricted data.

**unrestricted facilities**

PRI spans that use non-ZCS [line coding](#), such as [B8ZS](#) or [HDB3](#), end-to-end. See [Zero Code Suppression \(ZCS\)](#).

**V****VCI**

The [ATM](#) virtual channel identifier. ATM is a connection-oriented service that sets up a virtual circuit between the transmitter and the receiver. The two endpoints negotiate an agreed route through the network before sending any data. VCI and VPI together constitute the virtual circuit number that identifies this route.

**virtual channel identifier**

See [VCI](#).

**virtual circuit (virtual connection)**

The pre-arranged route through the [ATM](#) network that all cells in an ATM transmission follow.

**virtual circuit number**

The route identifier contained in an [ATM](#) cell header. A [VCI](#) and a [VPI](#) together constitute the virtual circuit number.

**virtual path identifier**

See [VPI](#).

**VPI**

The [ATM](#) virtual path identifier. ATM is a connection-oriented service that sets up a virtual circuit between the transmitter and the receiver. The two endpoints negotiate an agreed route through the network before sending any data. VCI and VPI together constitute the virtual circuit number that identifies this route. The VPI is analogous in some ways to an [ISDN](#) trunk group.

## W

**WAN**

See [wide area network](#).

**well-known address**

The default network address for a given type of network component, as specified by a communications protocol or standards body. For example, the ATM Forum defines well-known addresses for LAN-emulation servers and LAN-emulation configuration servers.

**well-known port**

port numbers that are assigned to specific applications by IANA. For example, 21 for FTP, 23 for Telnet, 110 for pop3.

**wide area network**

A data network that connects [local area networks](#) (LANs) using common-carrier telephone lines, [bridges](#), and [routers](#).

**wideband**

A circuit-switched call at a data rate greater than 64 kbps. A circuit-switched call on a single T1 or E1 facility with a bandwidth between 128 and 1536 (T1) or 1984 (E1) kbps in multiples of 64 kbps. H0, H11, H12, and N x DS0 calls are wideband.

## Z

**ZCS**

See [Zero Code Suppression \(ZCS\)](#).

**Zero Code Suppression (ZCS)**

ZCS line coding substitutes a 1 for the second least-significant bit of every all-zero byte in AMI-encoded data (see [line coding](#)). ZCS encoding has no effect on voice communications, but it corrupts digital data (see [restricted facilities](#)). In MMCX communications, ZCS corrupts the ISDN D-channel.



## A

- AAR and ARS features
  - interactions
    - Centralized Attendant Service (CAS) [300](#)
    - QSIG Call Forwarding (Diversion) [330](#)
    - QSIG Message Waiting Indication [334](#)
    - Uniform Dial Plan (UDP) [316](#)
- AAR and ARS Partitioning feature
  - interactions
    - QSIG Message Waiting Indication [334](#)
- AAR digit analysis
  - example [186](#), [196](#), [202](#)
- AAR/ARS administration, IP Trunk [361](#)
- Abbreviated Dialing (AD) feature
  - interactions
    - Centralized Attendant Service (CAS) [300](#)
    - Extended Trunk Access (ETA) [303](#)
- abstract syntax notation 1 (ASN-1) [323](#)
- additional network features (ANF) [323](#)
- administration
  - overview [8](#)
- Alternate Facility Restriction Levels (AFRL) feature
  - interactions
    - QSIG Call Forwarding (Diversion) [329](#)
- Alternate Facility Restriction Levels feature
  - interactions
    - QSIG Message Waiting Indication [334](#)
- Alternate Mark Inversion (AMI) coding [398](#)
- analog-dm data module screen [267](#)
- ation [260](#)
- Attendant Auto Manual Splitting feature
  - interactions
    - Centralized Attendant Service (CAS) [300](#)
- Attendant Call Waiting feature
  - interactions
    - DCS Alphanumeric Display for Terminals [284](#)
    - Private Network Access [312](#)
    - QSIG Supplementary Service - Call Completion [332](#), [333](#)
- Attendant Console feature
  - interactions
    - QSIG Supplementary Service - Call Completion [332](#)
- Attendant Control of Trunk Group Access feature
  - interactions
    - Centralized Attendant Service (CAS) [300](#)
    - DCS Automatic Callback (ACB) [284](#)
    - Inter-PBX Attendant Service (IAS) [306](#)
    - QSIG Supplementary Service - Call Completion [332](#)
- Attendant Direct Extension Selection (DXS) with Busy Light Field feature
  - interactions
    - DCS Over ISDN-PRI D-Channel (DCS+) [286](#)
- Attendant Display feature
  - interactions
    - Inter-PBX Attendant Service (IAS) [306](#)
- Attendant Intrusion (Call Offer) feature
  - interactions
    - Private Network Access [312](#)
- Attendant Override of Diversion Features feature
  - interactions
    - Centralized Attendant Service (CAS) [300](#)
- Attendant Recall feature
  - interactions
    - Inter-PBX Attendant Service (IAS) [306](#)
- Attendant Serial Calling feature
  - interactions
    - Centralized Attendant Service (CAS) [300](#)
- AUDIX
  - forms
    - Interface Links [262](#)
  - interactions
    - QSIG Message Waiting Indication [334](#)
    - QSIG Supplementary Service - Call Completion [332](#)
    - LAN Setup Summary [11](#)
- Authorization Codes feature
  - interactions
    - QSIG Call Forwarding (Diversion) [329](#)
    - QSIG Message Waiting Indication [334](#)
- Automatic Call Distribution (ACD) feature
  - interactions
    - QSIG Supplementary Service - Call Completion [332](#)
- Automatic Callback (ACB) feature
  - interactions
    - DCS Call Waiting [286](#)
- Automatic Callback feature
  - interactions
    - ISDN Feature Plus [309](#)
- Automatic Circuit Assurance feature
  - interactions
    - ISDN Feature Plus [308](#)

## B

- B8ZS. See Bipolar 8 Zero Substitution
- Backup buttons [298](#)

Basic Call Management System (BCMS) feature interactions

    QSIG Additional Network Feature Path Replacement (ANF-PR) [331](#)

basic encoding rules (BER) [323](#)

binary/decimal conversion [22](#)

books

    how to order [xiv](#)

Bridged Call Appearance feature

    interactions

        QSIG Supplementary Service - Call Completion [332](#)

broadcast address

    example [56, 64](#)

bus bridge [344](#)

    example [204](#)

Busy Indicator buttons [300](#)

Busy name [317](#)

Busy Verification of Terminals and Trunks (Verify) feature

    Verify buttons [274](#)

## C

cables, C-LAN [345](#)

call associated-temporary signaling connections (CA-TSC) [280, 323](#)

Call Coverage feature

    interactions

        Centralized Attendant Service (CAS) [300](#)

        DCS Alphanumeric Display for Terminals [283](#)

        DCS Call Coverage [285](#)

        Inter-PBX Attendant Service (IAS) [306](#)

        ISDN Feature Plus [309](#)

        QSIG Call Forwarding (Diversion) [330](#)

        QSIG Message Waiting Indication [334](#)

        QSIG Supplementary Service - Call Completion [333](#)

Call Detail Recording (CDR) feature

    interactions

        Centralized Attendant Service (CAS) [300](#)

        DCS Over ISDN-PRI D-Channel (DCS+) [286](#)

        QSIG Additional Network Feature Path

            Replacement (ANF-PR) [331](#)

        QSIG Call Forwarding (Diversion) [330](#)

Call Forwarding feature

    interactions

        Centralized Attendant Service (CAS) [300](#)

        DCS Alphanumeric Display for Terminals [283](#)

        QSIG Additional Network Feature-Transit Counter (ANF-TC) [332](#)

        QSIG Call Forwarding (Diversion) [330](#)

        QSIG Call Transfer [330](#)

        QSIG Supplementary Service - Call Completion [333](#)

call identification tones [298](#)

Call Management System (CMS) feature interactions

    QSIG Additional Network Feature Path Replacement (ANF-PR) [331](#)

Call Park feature

    interactions

        DCS Alphanumeric Display for Terminals [284](#)

        ISDN Feature Plus [309](#)

Call Pickup feature

    interactions

        DCS Alphanumeric Display for Terminals [284](#)

        QSIG Supplementary Service - Call Completion [333](#)

Call Vectoring feature

    interactions

        QSIG Additional Network Feature Path

            Replacement (ANF-PR) [331](#)

Call Waiting Termination feature

    interactions

        QSIG Supplementary Service - Call Completion [332](#)

Called name [317](#)

CallVisor ASAI feature

    interactions

        DCS Over ISDN-PRI D-Channel (DCS+) [286](#)

        QSIG Supplementary Service - Call Completion [332](#)

capacities

    C-LAN [341](#)

    DEFINITY [20, 341](#)

Centralized Attendant Service (CAS) feature [296](#)

    backup service [298](#)

    branch generated call identification tones [298](#)

    considerations [299](#)

    interactions

        AAR and ARS [300](#)

        Abbreviated Dialing (AD) [300](#)

        Attendant Auto Manual Splitting [300](#)

        Attendant Control of Trunk Group Access [300](#)

        Attendant Override of Diversion Features [300](#)

        Attendant Serial Calling [300](#)

        Busy Indicator buttons [300](#)

        Call Coverage [300](#)

        Call Detail Recording (CDR) [300](#)

        Call Forwarding [300](#)

        DCS Alphanumeric Display for Terminals [284](#)

        Distributed Communications System (DCS) [300](#)

        DTGS buttons [300](#)

        DXS buttons [300](#)

        Emergency Access to Attendant [301](#)

        Hunt Groups [301](#)

        Inter-PBX Attendant Service (IAS) [306](#)

        Leave Word Calling (LWC) [301](#)

        Night Service [301](#)

        nonattendant consoles [301](#)

- Centralized Attendant Service (CAS) feature, (continued)
  - queues [298](#)
  - release link trunks (RLT) [297](#)
  - remote hold [298](#)
- channel service unit (CSU) [398](#)
- circuit pack screen [257](#)
- circuit packs [4](#)
  - C-LAN [5](#), [341](#)
  - DS1 [178](#), [199](#), [204](#)
  - per system [20](#)
- Circuit Packs form [257–260](#)
  - implementation notes [260](#)
  - instructions [258](#)
- C-LAN [5](#)
  - cables [345](#)
  - capacities [341](#)
  - installation [343](#)
  - pinouts [346](#)
  - testing [344](#)
- C-LAN circuit pack [343](#)
- Class of Restriction (COR) feature
  - interactions
    - Enhanced DCS (EDCS) [287](#)
    - QSIG Message Waiting Indication [334](#)
- Class of Service (COS) feature
  - interactions
    - QSIG Message Waiting Indication [334](#)
- CMS
  - LAN Setup Summary [11](#)
- common control switching arrangements (CCSA) [311](#)
- communications-interface processor channel screen [237](#)
- communications interface links screen [262](#)
- Configuration Manager, IP Trunk [363](#)
- connecting switches [1](#)
- connection types [1](#), [6](#), [19](#)
- connections
  - IP trunk
    - network [352](#)
- connectivity
  - switch [4](#)
- country protocol options [279](#)
- coverage answer groups [285](#)
- Coverage Callback feature
  - interactions
    - DCS Call Coverage [285](#)
    - DCS Call Forwarding [285](#)
- DCS Over ISDN–PRI D-Channel (DCS+) [286](#)
- Data Call Setup feature
  - interactions
    - Extended Trunk Access (ETA) [303](#)
    - QSIG Additional Network Feature Path Replacement (ANF–PR) [331](#)
- data module
  - example [189](#), [196](#)
- Data Module screen [8](#), [10](#)
- data module screen [218](#)
- Data Privacy feature
  - interactions
    - DCS Call Waiting [286](#)
    - QSIG Additional Network Feature Path Replacement (ANF–PR) [331](#)
- Data Restriction feature
  - interactions
    - DCS Call Waiting [286](#)
    - QSIG Additional Network Feature Path Replacement (ANF–PR) [331](#)
- DCS [2](#)
  - IP Trunk [372](#)
- DCS Alphanumeric Display for Terminals feature [272](#), [282](#)
  - interactions
    - Attendant Call Waiting [284](#)
    - Call Coverage [283](#)
    - Call Forwarding [283](#)
    - Call Park [284](#)
    - Call Pickup [284](#)
    - Centralized Attendant Service (CAS) [284](#)
    - ISDN–PRI [284](#)
- DCS Attendant Control of Trunk Group Access feature [272](#), [282](#)
  - interactions
    - DCS Attendant Display [284](#)
    - DCS Automatic Callback (ACB) [284](#)
    - Uniform Dial Plan (UDP) [284](#)
- DCS Attendant Direct Trunk Group Selection feature [272](#), [282](#)
- DCS Attendant Display feature [273](#), [282](#)
  - interactions
    - DCS Attendant Control of Trunk Group Access [284](#)
    - Inter-PBX Attendant Service (IAS) [306](#)
- DCS Automatic Callback (ACB) feature [273](#), [282](#)
  - interactions
    - Attendant Control of Trunk Group Access [284](#)
    - DCS Attendant Control of Trunk Group Access [284](#)
- DCS Automatic Circuit Assurance (ACA) feature [273](#)
- DCS Busy Verification of Terminals and Trunks feature [273](#)
  - interactions
    - routing patterns [285](#)

## D

- D channel [409](#)
- D-channel backups

- DCS Call Coverage feature [274–275](#)
  - interactions
    - Call Coverage off premises [285](#)
    - coverage answer groups [285](#)
    - Coverage Callback [285](#)
    - displays [285](#)
    - Go to Cover [285](#)
    - Leave Word Calling (LWC) [285](#)
    - queuing [285](#)
  - operation under normal conditions [275](#)
- DCS Call Forwarding feature [276](#)
  - interactions
    - Coverage Callback [285](#)
    - DCS nodes [286](#)
    - Leave Word Calling (LWC) [285](#)
- DCS Call Waiting feature [276](#)
  - interactions
    - Automatic Callback (ACB) [286](#)
    - Data Privacy [286](#)
    - Data Restriction [286](#)
    - Enhanced DCS (EDCS) [286](#)
- DCS Distinctive Ringing feature [276](#)
  - interactions
    - Distinctive Ringing [287](#)
  - ringing patterns [276](#)
- DCS Leave Word Calling (LWC) feature [277, 283](#)
  - interactions
    - DCS Multiappearance Conference/Transfer [287](#)
- DCS Multiappearance Conference/Transfer feature [277](#)
  - interactions
    - DCS Leave Word Calling (LWC) [287](#)
    - Enhanced DCS (EDCS) [287](#)
    - Voice Terminal Display [287](#)
- DCS Over ISDN–PRI D-Channel (DCS+) feature [279](#)
  - call associated–temporary signaling connections (CA–TSC) [280](#)
  - considerations [283](#)
  - gateway nodes [281](#)
  - interactions
    - Attendant Direct Extension Selection (DXS) with Busy Light Field [286](#)
    - Call Detail Recording (CDR) [286](#)
    - CallVisor ASAI [286](#)
    - D-channel backup [286](#)
    - DCS AUDIX [286](#)
    - Generalized Route Selection (GRS) [286](#)
    - software defined networks (SDN) [287](#)
    - voice terminals [287](#)
  - noncall associated–temporary signaling connections (NCA–TSC) [280](#)
- DCS Trunk Group Busy/Warning Indication feature [277, 283](#)
  - interactions
    - Loudspeaker Paging Access [287](#)
- DCS with Rerouting feature
  - description [277](#)
  - interactions [278](#)
- decimail/binary conversion [22](#)
- default gateway [18](#)
- default node [18](#)
- DEFINITY
  - capacities and performance [341](#)
- DEFINITY ECS
  - configuring
    - T1 support [359](#)
- Dial Access to Attendant feature
  - interactions
    - Inter-PBX Attendant Service (IAS) [306](#)
- dial plan
  - example [179, 193, 199, 205](#)
- Dial Plan feature
  - interactions
    - Uniform Dial Plan (UDP) [316](#)
- direct department calling (DDC)
  - QSIG Supplementary Service - Call Completion [333](#)
- direct extension selection
  - DXS buttons [300](#)
- direct inward dialing (DID)
  - trunk groups [316](#)
- Distinctive Ringing feature
  - interactions
    - DCS Distinctive Ringing [287](#)
- Distributed Communication System (DCS) feature
  - interactions
    - ISDN Feature Plus feature [308](#)
- Distributed Communications System (DCS) feature [271](#)
  - see also* specific DCS features
  - 2-Node private network with AUDIX [288](#)
  - 3-Node public/private network with AUDIX [291](#)
  - administration for switch 1 [289, 293](#)
  - administration for switch 2 [290, 294](#)
  - administration for switch 3 [295](#)
  - AUDIX administration [289, 292](#)
  - AUDIX configuration examples [288](#)
  - configuring DCS networks [271](#)
  - DCS features [272](#)
  - feature considerations [282](#)
  - forms [262](#)
  - interactions
    - Centralized Attendant Service (CAS) [300](#)
    - Extension Number Portability (ENP) [305](#)
    - QSIG Call Forwarding (Diversion) [330](#)
    - QSIG Call Transfer [330](#)
    - QSIG Name and Number Identification [331](#)
    - Uniform Dial Plan (UDP) [316](#)
  - network configurations [271](#)
- documents
  - how to order [xiv](#)
- dotted decimal notation [21](#)

DS1 circuit pack  
 example [178](#), [199](#), [204](#)  
 IP Trunk [359](#)  
 DTGS buttons [300](#)

## E

E1 [395](#)  
 electronic tandem networks (ETN)  
 Private Network Access [311](#)  
 ELMO [xiii](#)  
 Emergency Access to Attendant feature  
 interactions  
 Centralized Attendant Service (CAS) [301](#)  
 enable  
 links [50](#)  
 processor channels [50](#)  
 Enhanced DCS (EDCS) feature [278](#), [283](#)  
 interactions  
 Class of Restriction (COR) [287](#)  
 DCS Call Waiting [286](#)  
 DCS Multiappearance Conference/Transfer [287](#)  
 enhanced private switched communications service (EPSCS) [311](#)  
 ETA call screening table screen  
 screens  
 ETA call screenin table [268](#)  
 Extended Trunk Access (ETA) feature [302–304](#)  
 cautions [302](#)  
 forms [302](#)  
 interactions  
 Abbreviated Dialing (AD) [303](#)  
 attendant calls [303](#)  
 Data Call Setup [303](#)  
 Facility Restriction Levels (FRL) and Traveling Class Marks (TCM) [304](#)  
 Last Number Dialed [304](#)  
 Modem Pooling [304](#)  
 Remote Access [304](#)  
 Extension Number Portability (ENP) feature [304–305](#)  
 ENP codes [305](#)  
 ENP numbering plans [305](#)  
 interactions  
 Distributed Communications System (DCS) [305](#)  
 Uniform Dial Plan (UDP) [316](#)  
 extension number portability numbering plan screen [269](#)

## F

Facility Restriction Levels (FRL) and Traveling Class Marks (TCM) features  
 interactions  
 Extended Trunk Access (ETA) [304](#)  
 QSIG Call Forwarding (Diversion) [330](#)  
 QSIG Message Waiting Indication [334](#)

feature transparency [317](#)

## G

Gateway  
 default [18](#)  
 gateway  
 IP routing [242](#)  
 gateway nodes [281](#)  
 Generalized Route Selection (GRS) feature  
 interactions  
 DCS Over ISDN–PRI D-Channel (DCS+) [286](#)  
 QSIG Message Waiting Indication [334](#)  
 Go to Cover feature  
 interactions  
 DCS Call Coverage [285](#)

## H

hardware  
 R7 [6](#)  
 High Density Bipolar 3-Bit Substitution (HDB3) [399](#)  
 Hold feature  
 interactions  
 QSIG Supplementary Service - Call Completion [333](#)  
 hop channel assignment screen [256](#)  
 hop channels  
 per system [20](#)  
 Hotline Service feature  
 interactions  
 QSIG Supplementary Service - Call Completion [333](#)  
 hunt group  
 example [197](#), [203](#), [211](#)  
 Hunt Groups feature  
 interactions  
 Centralized Attendant Service (CAS) [301](#)

## I

installation  
 C-LAN [343](#)  
 integration process  
 configuring  
 DEFINITY ECS [359](#)  
 connecting  
 IP trunk to the network [352](#)  
 ITS components [351](#)

- Inter-PBX Attendant Service (IAS) feature [305](#)
    - interactions
      - Attendant Control of Trunk Group Access [306](#)
      - Attendant Display [306](#)
      - Attendant Recall [306](#)
      - Call Coverage [306](#)
      - Centralized Attendant Service (CAS) [306](#)
      - DCS Attendant Display [306](#)
      - Dial Access to Attendant [306](#)
      - Night Service [306](#)
  - interface channels
    - per system [20](#)
  - Interface Link screen [9](#)
  - Internal Automatic Answer (IAA) feature
    - interactions
      - QSIG Supplementary Service - Call Completion [333](#)
  - International Organization for Standardization (ISO)
    - ISDN–PRI private networking specifications [317](#)
    - QSIG signaling protocols [323](#)
  - Internet Telephony Server
    - connecting components [351](#)
    - logging on [352](#)
    - network services, changing [355](#)
  - Intuity AUDIX
    - LAN Setup Summary [11](#)
  - Intuity translations for DCS AUDIX
    - example [213](#)
  - IP address
    - classes [22](#)
    - private ranges [23](#)
  - IP addressing [21](#)
  - IP routes
    - per system [20](#)
    - when to use [12](#)
  - IP routing
    - example [192](#), [200](#), [211](#)
    - gateway [242](#)
    - metric [242](#)
  - IP Routing screen [9](#), [11](#)
  - IP routing screen
    - IP routing [241](#)
  - IP Trunk
    - AAR/ARS administration [361](#)
    - administration [357](#)
    - Configuration Manager [363](#)
    - DEFINITY administration procedures [359](#)
    - DS1 circuit pack [359](#)
    - extension dialing between sites [370](#)
    - extension dialing between sites -- DCS configuration [372](#)
    - extension dialing between sites -- non-DCS configuration [370](#)
    - NT administration [363](#)
    - routing based on dialed string -- originating [365](#)
  - IP Trunk, (continued)
    - routing based on dialed string -- terminating [367](#)
    - routing based on line numbers -- originating [365](#)
    - routing based on line numbers -- terminating [367](#)
  - IP Trunk group [360](#)
  - ISDN feature
    - forms [262](#)
  - ISDN Feature Plus feature [306–310](#)
    - description [307](#)
    - differences in Inserted Digits field [308](#)
    - how to administer [306](#)
    - interactions
      - Automatic Circuit Assurance [308](#)
      - Distributed Communication System (DCS) [308](#)
      - Feature Plus Centralized AUDIX
        - Calling Line Identification Presentation (CLIP) [308](#)
        - Feature Plus Diversion [309](#)
        - Feature Plus Message Waiting [309](#)
      - Feature Plus Forwarding (Diversion)
        - Automatic Callback [309](#)
        - Call Coverage [309](#)
        - Call Park [309](#)
        - Calling Line Identification Presentation (CLIP) [309](#)
        - Connection Line Identification Presentation (COLP) [309](#)
        - Feature Plus Centralized AUDIX [309](#)
        - Feature Plus Message Waiting Indication
          - Audio Information Exchange (AUDIX) [309](#)
          - Off-Premise Station [310](#)
        - QSIG [310](#)
  - ISDN Private Networking Specification (IPNS) forum [323](#)
  - ISDN TSC gateway channel assignments screen [251](#)
  - ISDN–PRI
    - interactions
      - DCS Alphanumeric Display for Terminals [284](#)
      - QSIG Additional Network Feature–Transit Counter (ANF–TC) [332](#)
  - ISDN-TSC gateway channels
    - per system [20](#)
  - Italian DCS Protocol [278](#)
  - Italy
    - Enhanced DCS (EDCS) [278](#)
    - traslatore giunzione uscente/entrante/interno (TGU/TGE/TGI) trunks [311](#)
  - ITU-T access protocols [323](#)
- L**
- Last Number Dialed feature
    - interactions
      - Extended Trunk Access (ETA) [304](#)

- Leave Word Calling (LWC) feature
  - interactions
    - Centralized Attendant Service (CAS) [301](#)
    - DCS Call Coverage [285](#)
    - DCS Call Forwarding [285](#)
  - link
    - enable [50](#)
    - types [19](#)
  - link/channel map
    - example [176](#)
  - links
    - per circuit pack [20](#)
    - per system [20](#)
  - Listed Directory Numbers (LDN) feature
    - see also* Centralized Attendant Service (CAS)
  - logging on to the ITS [352](#)
  - Loudspeaker Paging Access feature
    - interactions
      - DCS Trunk Group Busy/Warning Indication [287](#)

## M

- Malicious Call Trace (MCT) feature
  - interactions
    - QSIG Additional Network Feature Path Replacement (ANF-PR) [331](#)
- Manual Originating Line Service feature
  - interactions
    - QSIG Supplementary Service - Call Completion [333](#)
- MAPD
  - circuit pack [350](#)
- message associated–user to user information (MA–UUI) [279](#)
- Message Waiting Indication
  - how to start administration [307](#)
- Messaging Server (MS) Interface feature
  - forms [262](#)
- metric
  - IP routing [242](#)
- Modem Pooling feature
  - interactions
    - Extended Trunk Access (ETA) [304](#)
  - multimedia endpoints [333](#)
  - MWI Subscriber Number Prefixes screen [270](#)

## N

- n [253](#)
- netcon data module screen [265](#)
- network
  - configuration
    - changing network services [355](#)
    - logging on [352](#)

- network, (continued)
  - IP trunk
    - connecting [352](#)
  - network diagram
    - example [174](#)
  - network map
    - example [177](#)
  - network security [337](#)
  - Networks
    - DEFINITY [2](#)
  - Night Service features
    - interactions
      - Inter-PBX Attendant Service (IAS) [306](#)
    - night console service
      - Centralized Attendant Service (CAS) [301](#)
    - trunk answer from any station (TAAS)
      - Centralized Attendant Service (CAS) [301](#)
  - Node [xiii](#)
  - node [1](#), [173](#)
    - DCS [1](#)
    - default [18](#)
  - node names
    - example [188](#), [209](#)
  - Node Names screen [8](#), [10](#)
  - node names screen [216](#)
  - node number routing screen [252](#)
  - nodes
    - IP [1](#)
  - nonattendant consoles [301](#)
  - noncall associated–temporary signaling connections (NCA–TSC) [280](#), [323](#)
  - NT administration, IP Trunk [363](#)

## O

- Off-Premises Station feature
  - interactions
    - QSIG Message Waiting Indication [335](#)
  - ones density [398](#)
  - outgoing trunk queueing [333](#)

## P

- PBX [407](#)
  - configuring
    - DEFINITY ECS [359](#)
  - performance
    - C-LAN [341](#)
    - DEFINITY [341](#)
  - pinouts, C-LAN [346](#)
  - prerequisite administration, checklist [34](#)

- Private Network Access feature [310–311](#)
  - forms [311](#)
  - interactions
    - Attendant Call Waiting [312](#)
    - Attendant Intrusion (Call Offer) [312](#)
- Private Networking features
  - Centralized Attendant Service (CAS) [296](#)
  - DCS Alphanumeric Display for Terminals [272](#)
  - DCS Attendant Control of Trunk Group Access [272](#)
  - DCS Attendant Direct Trunk Group Selection [272](#)
  - DCS Attendant Display [273](#)
  - DCS Automatic Callback (ACB) [273](#)
  - DCS Automatic Circuit Assurance (ACA) [273](#)
  - DCS Busy Verification of Terminals and Trunks [273](#)
  - DCS Call Coverage [274](#)
  - DCS Call Forwarding [276](#)
  - DCS Call Waiting [276](#)
  - DCS Distinctive Ringing [276](#)
  - DCS Leave Word Calling (LWC) [277](#)
  - DCS Multiappearance Conference/Transfer [277](#)
  - DCS Over ISDN–PRI D-Channel (DCS+) [279](#)
  - DCS Trunk Group Busy/Warning Indication [277](#)
  - Distributed Communications System (DCS) [271](#)
  - Enhanced DCS (EDCS) [278](#)
  - Extended Trunk Access (ETA) [302](#)
  - Extension Number Portability (ENP) [304](#)
  - Inter-PBX Attendant Service (IAS) [305](#)
  - Italian DCS Protocol DCS [278](#)
  - Private Network Access [310](#)
  - QSIG [317](#), [319](#)
  - QSIG Additional Network Feature Path Replacement (ANF-PR) [322](#)
  - QSIG Additional Network Feature–Transit Counter (ANF-TC) [319](#)
  - QSIG Call Forwarding (Diversion) [319](#), [322](#)
  - QSIG Call Transfer [320](#)
  - QSIG Name and Number Identification [318](#)
  - Uniform Dial Plan (UDP) [312](#)
- processor channel Assignment
  - example [210](#)
- processor channel assignment
  - example [191](#), [197](#)
- Processor Channel Assignment screen [8](#), [11](#)
- processor channels
  - enable [50](#)
  - per system [20](#)

## Q

- Q-reference points [317](#)
- QSIG – CO. See QSIG Supplementary Service – Call Offer feature

- QSIG Additional Network Feature Path Replacement (ANF-PR) feature [322](#)
  - interactions
    - Basic Call Management System (BCMS) [331](#)
    - Call Detail Recording (CDR) [331](#)
    - Call Management System (CMS) [331](#)
    - Call Vectoring [331](#)
    - Data Call Setup [331](#)
    - Data Privacy [331](#)
    - Data Restriction [331](#)
    - Malicious Call Trace (MCT) [331](#)
    - QSIG Call Transfer [330](#)
    - Recorded Announcement [331](#)
    - trunk access codes (TAC) [331](#)
    - Voice Terminal Display [332](#)
- QSIG Additional Network Feature–Transit Counter (ANF-TC) feature [317](#), [332](#)
- QSIG Call Forwarding (Diversion) feature
  - interactions
    - AAR and ARS [330](#)
    - Alternate Facility Restriction Levels (AFRL) [329](#)
    - Authorization Codes [329](#)
    - Call Coverage [330](#)
    - Call Detail Recording (CDR) [330](#)
    - Call Forwarding [330](#)
    - Distributed Communications System (DCS) [330](#)
    - Facility Restriction Levels (FRL) and Traveling Class Marks (TCM) [330](#)
    - QSIG Name and Number Identification [330](#)
    - terminating call has coverage active [330](#)
    - Transfer [330](#)
- QSIG Call Transfer feature [320](#)
  - interactions
    - Call Forwarding [330](#)
    - Distributed Communications System (DCS) [330](#)
  - QSIG Additional Network Feature Path Replacement (ANF-PR) [330](#)
  - QSIG Name and Number Identification [331](#)
- QSIG Centralized AUDIX [320](#)
  - what you get with QSIG Centralized AUDIX [321](#)
- QSIG feature
  - call associated–temporary signaling connections (CA-TSC) [323](#)
  - interactions
    - ISDN Feature Plus [310](#)
- QSIG Features
  - QSIG NCA-TSC [324](#)
- QSIG features [317–322](#)
  - additional network features (ANF) [323](#)
  - Busy name [317](#)
  - Called name [317](#)
  - detailed description [323](#)
  - interactions [329](#)
  - noncall associated–temporary signaling connections (NCA-TSC) [323](#)

QSIG features, (continued)  
   QSIG Path Retention [322](#)  
   QSIG signaling protocols [323](#)  
 QSIG Message Waiting Indication [321](#)  
   QSIG Centralized AUDIX [320](#)  
   what you get with QSIG Centralized AUDIX [321](#)  
 QSIG Message Waiting Indication feature [321](#)  
   interactions  
     AAR/ARS Partitioning [334](#)  
     Alternate Facilities Restriction Levels [334](#)  
     Audio Information Exchange (AUDIX) [334](#)  
     Authorization Codes [334](#)  
     Automatic Alternate Routing (AAR) [334](#)  
     Automatic Route Selection (ARS) [334](#)  
     Call Coverage Features [334](#)  
     Class of Restriction [334](#)  
     Class of Service [334](#)  
     Facility Restriction Levels (FRL) and Traveling  
       Class Marks (TCM) [334](#)  
     Generalized Route Selection [334](#)  
     ISDN-QSIG-BRI [334](#)  
     Message Sequence Tracer [334](#)  
     Off-Premises Station [335](#)  
     Uniform Dial Plan (UDP) [335](#)  
 QSIG Name and Number Identification feature [318–??](#)  
   interactions  
     Distributed Communications System (DCS) [331](#)  
     QSIG Call Forwarding (Diversion) [330](#)  
     QSIG Call Transfer [331](#)  
   ISDN numbering formats [319](#)  
   tandem switch information [318](#)  
   transit switch information [318](#)  
 QSIG NCA-TSC [324](#)  
 QSIG Path Retention [322](#)  
 QSIG Supplementary Service - Call Completion feature  
[320–334](#)  
   detailed description [320](#)  
   interactions  
     Adjunct Switch Applications Interface (ASAI) [332](#)  
     Attendant Call Waiting [332](#)  
     Attendant Console Group [332](#)  
     Attendant Control of Trunk Group Access [332](#)  
     AUDIX [332](#)  
     Automatic Call Distribution (ACD) [332](#)  
     Bridged Call Appearance [332](#)  
     Call Coverage [333](#)  
     Call Forwarding [333](#)  
     Call Pickup [333](#)  
     Call Waiting [333](#)  
     Call Waiting Termination [332](#)  
     Direct Department Calling [333](#)  
     Hold [333](#)  
     Hotline Service [333](#)  
     Internal Automatic Answer (IAA) [333](#)  
     Manual Originating Line Service [333](#)

QSIG Supplementary Service - Call Completion feature,  
 interactions, (continued)  
   Multimedia Endpoints [333](#)  
   Outgoing Trunk Queueing [333](#)  
   Termination Extension Group (TEG) [333](#)  
   Transfer [333](#)  
   Uniform Call Distribution [333](#)  
   Vector Directory Numbers [334](#)  
 QSIG Supplementary Service – Call Offer feature [319](#)  
   invoking [319](#)  
 queues  
   Centralized Attendant Service (CAS) [298](#)  
   DCS Call Coverage [285](#)

## R

Recorded Announcement feature  
   interactions  
     QSIG Additional Network Feature Path  
       Replacement (ANF-PR) [331](#)  
 release link trunks (RLT) [297](#)  
 Remote Access feature  
   interactions  
     Extended Trunk Access (ETA) [304](#)  
 remote hold [298](#)  
 remote operation service element (ROSE)  
   services/protocols [323](#)  
 RFCs [30](#)  
 routing pattern  
   example [196, 203](#)  
 routing patterns  
   example [187](#)

## S

satellite switches [303](#)  
 Screen [xiii](#)  
 screen  
   Data Module [8](#)  
   Interface Link [9](#)  
   IP Routing [9](#)  
   Node Names [8](#)  
   Processor Channel Assignment [8](#)  
 screens  
   analog-dm data module [267](#)  
   circuit pack [257](#)  
   communications interface links [262](#)  
   communications-interface processor channel [237](#)  
   data module [218](#)  
   extension number portability numbering plan [269](#)  
   hop channel assignment [256](#)  
   ISDN TSC gateway channel assignment [251](#)  
   mwi subscriber number prefixes [270](#)  
   netcon data module [265](#)

- screens, (continued)
  - node names [216](#)
  - node number routing [252](#)
  - signaling group [244](#)
  - synchronization plan [260](#)
  - uniform dialing plan [253](#)
- security
  - issues [337](#)
- security alert
  - default gateway [19](#)
- signaling [3](#)
- signaling group
  - example [180](#)
- signaling group screen [244](#)
- software defined networks (SDN) [287](#)
- standards
  - organizations [29](#)
- subnet mask
  - default [25](#)
  - defined [25](#)
  - example [26](#), [56](#), [64](#)
- subnetting [23](#)
- supplementary service B (SSB) routes [322](#)
- supported switches and adjuncts [33](#)
- switch components [4](#)
- synchronization plan
  - example [180](#), [200](#), [205](#)
- synchronization plan screen [260](#)

## T

- T1 [398](#)
- T1 support
  - configuring
    - DEFINITY ECS [359](#)
- tandem tie trunk networks (TTTN) [311](#)
- task
  - assign IP route [57](#), [58](#), [65](#), [66](#), [67](#), [126](#), [133](#), [139](#), [155](#), [156](#), [157](#), [164](#), [170](#)
  - assign ISDN-TSC gateway [102](#), [105](#)
  - assign link via ethernet data module [55](#), [63](#), [79](#), [89](#), [122](#), [135](#), [147](#), [166](#)
  - assign link via ppp data module [41](#), [46](#), [98](#), [111](#), [120](#), [129](#), [145](#), [149](#), [151](#), [160](#)
  - assign link via procr-intf data module [84](#)
  - assign link via x.25 data module [77](#)
  - assign node names [40](#), [45](#), [54](#), [62](#), [74](#), [88](#), [97](#), [110](#), [119](#), [128](#), [134](#), [144](#), [159](#), [165](#)
  - assign pdm data module [75](#)
  - assign processor channels [43](#), [48](#), [59](#), [68](#), [81](#), [86](#), [91](#), [100](#), [113](#), [124](#), [131](#), [137](#), [153](#), [162](#), [168](#)
  - assign signaling group and administer NCA TSCs [102](#), [106](#)
  - enable bus bridge connectivity [109](#), [127](#), [158](#)
- Technical Support [xv](#)

- telephone calls
  - placing test telephone calls [369](#)
- temporary signaling connections (TSC) [251](#), [279](#)
- Termination Extension Group (TEG) feature
  - interactions
    - QSIG Supplementary Service - Call Completion [333](#)
- TN802 circuit pack [350](#)
- tones
  - call identification [298](#)
- Transfer feature
  - interactions
    - QSIG Call Forwarding (Diversion) [330](#)
    - QSIG Supplementary Service - Call Completion [333](#)
- trunk access codes (TAC)
  - QSIG Additional Network Feature Path Replacement (ANF-PR) [331](#)
  - QSIG Additional Network Feature-Transit Counter (ANF-TC) [332](#)
- trunk group
  - example [181](#), [194](#), [201](#), [206](#)
  - IP Trunk [360](#)
- Trunk Group Select buttons [273](#)
- Trunk Identification by Attendant feature
  - interactions
    - DCS Busy Verification of Terminals and Trunks [284](#)
    - Trunk ID buttons [284](#)
- trunks [1](#)

## U

- unicasting [400](#)
- uniform call distribution (UCD)
  - QSIG Supplementary Service - Call Completion [333](#)
- Uniform Dial Plan (UDP) feature [312–316](#)
  - considerations [315](#)
  - detailed description [312](#)
  - examples [314](#)
  - forms [312](#)
  - interactions
    - AAR and ARS [316](#)
    - DCS Attendant Control of Trunk Group Access [284](#)
    - Dial Plan [316](#)
    - DID trunk groups [316](#)
    - Distributed Communications System (DCS) [316](#)
    - Extension Number Portability (ENP) [316](#)
    - QSIG Message Waiting Indication [335](#)
  - UDP codes [313](#)
- uniform dialing plan
  - example [186](#), [195](#), [202](#)
- uniform dialing plan screen [253](#)
- uting [252](#)

## V

- vectory directory numbers (VDN)
  - QSIG Supplementary Service - Call Completion [334](#)
- Voice Terminal Display feature
  - interactions
    - DCS Multiappearance Conference/Transfer [287](#)
    - QSIG Additional Network Feature Path Replacement (ANF-PR) [332](#)

## W

- web sites
  - documents [xiii](#)
  - RFCs [30](#)

## Z

- Zero Code Suppression (ZCS) [409](#)

