



Feature Description and Implementation for Avaya Communication Manager

555-245-205
Issue 3
June 2005

**Copyright 2005, Avaya Inc.
All Rights Reserved**

This document contains information related to Avaya Communication Manager software (as defined below) and Documentation ("Product"). "Documentation" means this document and Avaya's information manuals in printed or electronic form containing operating instructions and performance specifications that Avaya or its suppliers generally make available to users of its products, and which Avaya delivers to End User with the Products. "End User" means any customer of Avaya or its authorized resellers, or any end user of the Product. See the Software and Documentation DVD/CD inserts for additional legal and licensing information.

Notice

Changes and corrections to the information in this document may be incorporated in future releases.

Disclaimer

Avaya, its affiliates or subsidiaries ("Avaya") are not responsible for any modifications, additions or deletions to the original published version of the Documentation unless such modifications, additions or deletions were performed by Avaya. End User agrees to indemnify and hold harmless Avaya, Avaya's agents, servants, directors, officers, and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to the Documentation to the extent made by the End User.

Warranty

Avaya provides a limited warranty on the Product. Refer to your customer sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language as well as information regarding support for the Product, while under warranty, is available through the following web site: <http://www.avaya.com/support>.

License

USE OR INSTALLATION OF THE PRODUCT INDICATES THE END USER'S ACCEPTANCE OF THE GENERAL LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE AT: <http://www.avaya.com/support> ("GENERAL LICENSE TERMS"). DO NOT USE THE PRODUCT IF YOU DO NOT WISH TO BE BOUND BY THE GENERAL LICENSE TERMS. IN ADDITION TO THE GENERAL LICENSE TERMS, THE FOLLOWING LICENSE TERMS AND RESTRICTIONS WILL APPLY TO THE PRODUCT.

Avaya grants End User a license within the scope of the license types described below. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the Documentation or other materials available to End User. "Designated Processor" means a single stand-alone computing device. "Server" means a Designated Processor that hosts a software application to be accessed by multiple users. "Software" means the computer programs in object code, originally licensed by Avaya and ultimately utilized by End User, whether as stand-alone products or pre-installed on Hardware. "Hardware" means the standard hardware products, originally sold by Avaya and ultimately utilized by End User.

If your system is running in a TDM environment, the following license restriction applies:

Designated System(s) License (DS). End User may install and use each copy of the Software on only one Designated Processor, unless a different number of Designated Processors is indicated in the Documentation or other materials available to End User. Avaya may require the Designated Processor(s) to be identified by type, serial number, feature key, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.

If your system is running in an IP environment, the following license restriction applies:

Concurrent User License (CU). End User may install and use the Software on multiple Designated Processors or one or more Servers, so long as only the licensed number of Units are accessing and using the Software at any given time. A "Unit" means the unit on which Avaya, at its sole discretion, bases the pricing of its licenses and can be, without limitation, an agent, port or user, an e-mail or voice mail account in the name of a person or corporate function (e.g., webmaster or helpdesk), or a directory entry in the administrative database utilized by the Product that permits one user to interface with the Software. Units may be linked to a specific, identified Server.

For all systems, the following license restriction applies:

Shrinkwrap License (SR). With respect to Software that contains elements provided by third party suppliers, End User may install and use the Software in accordance with the terms and conditions of the "shrinkwrap" or "clickwrap" license accompanying the Software ("Shrinkwrap License"). The text of the Shrinkwrap License will be available from Avaya upon End User's request (see "Copyright" below for more information).

Copyright

Except where expressly stated otherwise, the Product is protected by copyright and other laws respecting proprietary rights. Unauthorized reproduction, transfer, and or use can be a criminal, as well as a civil, offense under the applicable law.

Certain Software programs or portions thereof included in the Product may contain software distributed under third party agreements ("Third Party Components"), which may contain terms that expand or limit rights to use certain portions of the Product ("Third Party Terms"). Information identifying Third Party Components and the Third Party Terms that apply to them is available on Avaya's web site at <http://support.avaya.com/ThirdPartyLicense/>.

The disclaimers of warranties and limitations of liability set forth in the Third Party Terms do not affect any express warranty or limitation of liability that may be provided to you by Avaya pursuant to the license terms covering the Product contained in a separate written agreement between you and Avaya. To the extent there is a conflict between the General License Terms or your customer sales agreement and any Third Party Terms, the Third Party Terms shall prevail solely for such Third Party Components.

Security and virus disclaimer

End User's decision to acquire products from third parties is End User's sole responsibility, even if Avaya helps End User identify, evaluate or select them. Avaya is not responsible for, and will not be liable for, the quality or performance of such third party products or their suppliers.

ALL INFORMATION IS BELIEVED TO BE CORRECT AT THE TIME OF PUBLICATION AND IS PROVIDED "AS IS". AVAYA DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND FURTHERMORE, AVAYA MAKES NO REPRESENTATIONS OR WARRANTIES THAT THE STEPS RECOMMENDED WILL ELIMINATE SECURITY OR VIRUS THREATS TO END USER' SYSTEMS. IN NO EVENT SHALL AVAYA BE LIABLE FOR ANY DAMAGES WHATSOEVER ARISING OUT OF OR IN CONNECTION WITH THE INFORMATION OR RECOMMENDED ACTIONS PROVIDED HEREIN, INCLUDING DIRECT, INDIRECT, CONSEQUENTIAL DAMAGES, LOSS OF BUSINESS PROFITS OR SPECIAL DAMAGES, EVEN IF AVAYA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Avaya does not warrant that this Product is immune from or will prevent unauthorized use of telecommunication services or facilities accessed through or connected to it. Avaya is not responsible for any damages or charges that result from either unauthorized uses or from incorrect installations of the security patches that are made available from time to time.

Suspected security vulnerabilities with Avaya products should be reported to Avaya by sending mail to securityalerts@avaya.com.

Trademarks

All trademarks identified by ® and ™ are registered trademarks or trademarks of Avaya Inc. All other trademarks are the property of their respective owners.

Contents

About this document	55
Overview	55
Intended audience	55
How to use this book	55
Organization	56
Summary	56
Detail Description	56
Administering	56
End-User Procedures	57
Reports	57
Considerations	57
Interactions	57
Troubleshooting	57
Related Sources	58
Conventions	59
Admonishments	60
Trademarks	61
How to obtain Avaya books on the Web	61
How to order more copies	62
How to comment on this book	62
How to get help	63
Abbreviated Dialing	65
Abbreviated Dialing labeling	65
Abbreviated Dialing on-hook programming	66
Detailed description of Abbreviated Dialing	66
Administering Abbreviated Dialing	67
Prerequisites for Abbreviated Dialing	67
Screens for administering Abbreviated Dialing	68
Adding Abbreviated Dialing lists	68
Assigning telephones for group lists	69
End-user procedures for Abbreviated Dialing	70
Programming the Abbreviated Dialing feature	70
Reports for Abbreviated Dialing	71
Considerations for Abbreviated Dialing	71
Interactions for Abbreviated Dialing	71
Troubleshooting Abbreviated Dialing	72

Access Security Gateway	75
Detailed description of Access Security Gateway	75
Administering Access Security Gateway	75
Prerequisites for administering Access Security Gateway	76
Screens for administering Access Security Gateway	76
Setting up Access Security Gateway	77
Disabling Access Security Gateway	78
Restarting Access Security Gateway	79
Modifying Access Security Gateway for a lost key	79
Monitoring the Access Security Gateway history log	80
Reports for Access Security Gateway	81
Considerations for Access Security Gateway	81
Interactions for Access Security Gateway	82
Administered Connections	83
Detailed description of Administered Connections	83
Access endpoints	84
Typical applications	84
Establishing Administered Connections	84
Dropping Administered Connections	85
Autorestitution and fast retry	86
Administering Administered Connections	86
Prerequisites for administering Administered Connections	86
Screens for administering Administered Connections	87
Setting up Administered Connections	87
Reports for Administered Connections	88
Considerations for Administered Connections	88
Interactions for Administered Connections	89
Administrable Language Displays	91
Detailed description of Administrable Language Displays	91
Administering Language Displays	92
Prerequisites for administering Administrable Language Displays	92
Screens for administering Administrable Language Displays	93
Setting the display language	93
Entering translations for a user-defined language	94
Administering Unicode display	95
Reports for Administrable Language Displays	96
Considerations for Administrable Language Displays	96

Interactions for Administrable Language Displays	97
Troubleshooting Administrable Language Displays	97
Administration Change Notification	99
Detailed description of Administration Change Notification	99
Administering Administration Change Notification	99
Prerequisites for administering Administration Change Notification	100
Screens for administering Administration Change Notification	100
Initiating Administration Change Notification	100
Reports for Administration Change Notification	101
Considerations for Administration Change Notification	101
Interactions for Administration Change Notification	101
Administration Without Hardware	103
Detailed description of Administration Without Hardware	103
Physical characteristics of an AWOH telephone	103
User-activated features	103
Association and disassociation	104
Phantom extensions	104
Administering Administration Without Hardware	104
Prerequisites for administering Administration Without Hardware	105
Screens for administering Administration Without Hardware	105
Assigning AWOH for a hunt group queue	105
Assigning AWOH to a telephone	107
Assigning AWOH to an attendant console	107
Assigning AWOH to a data module	108
Reports for Administration Without Hardware.	109
Considerations for Administration Without Hardware	109
Interactions for Administration Without Hardware	110
Alphanumeric Dialing	119
Detailed description of Alphanumeric Dialing	119
Administering Alphanumeric Dialing	119
Prerequisites for administering Alphanumeric Dialing	120
Screens for administering Alphanumeric Dialing	120
Reports for Alphanumeric Dialing	120
Considerations for Alphanumeric Dialing	120
Interactions for Alphanumeric Dialing	121

Announcements	123
Detailed description of Announcements	123
Voice Announcements over LAN	124
VAL Manager	125
Local announcements on the G700 Media Gateway	125
Integrated announcements	125
Barging-in on announcements	126
Announcement sources for the Avaya G700 Media Gateway	127
Single integrated announcement circuit packs	127
Multiple integrated announcement circuit packs	127
Backing up circuit packs	127
Compression rates	128
Administering Announcements	129
Prerequisites for administering Announcements	129
Screens for administering Announcements	130
Displaying all announcements	131
Adding announcement data modules	132
Adding announcement extensions	133
Recording and changing announcements	134
Saving announcements	136
Copying announcements	136
Restoring announcements	136
Deleting and erasing announcements	137
Setting up continuous-play announcements	138
Recording VAL announcements	138
Prerequisites	139
Announcement file format requirements	139
Converting announcement files to VAL format	140
Converting announcements for Interactive Voice Response	141
Deleting VAL announcements	142
Using the SAT to delete individual VAL announcement files	142
Using the SAT to delete all VAL announcements on a circuit pack	142
Using FTP to Manage VAL announcements	143
Setting up an FTP session	144
Performing tasks in an FTP session	145
Recording announcements for TTY callers	149
Reports for Announcements	149
Considerations for Announcements	150
Interactions for Announcements	150
Troubleshooting announcements	151

Attendant Auto Start and Don't Split	153
Detailed description of Attendant Auto Start and Don't Split	153
Auto Start.	153
Don't Split	153
Administering Attendant Auto Start and Don't Split	154
Prerequisites for administering Attendant Auto Start and Don't Split	154
Screens for administering Attendant Auto Start and Don't Split	154
Assigning a Don't Split button	155
Reports for Attendant Auto Start and Don't Split	155
Considerations for Attendant Auto Start and Don't Split	156
Interactions for Attendant Auto Start and Don't Split	156
Attendant Auto-Manual Splitting	157
Detailed description of Attendant Auto-Manual Splitting	157
Administering Attendant Auto-Manual Splitting	157
Prerequisites for administering Attendant Auto-Manual Splitting	158
Screens for administering Attendant Auto-Manual Splitting	158
Reports for Attendant Auto-Manual Splitting	158
Considerations for Attendant Auto-Manual Splitting	158
Interactions for Attendant Auto-Manual Splitting	158
Attendant Backup	159
Detailed description of Attendant Backup	159
Attendant Backup Alerting	160
Administering Attendant Backup	160
Prerequisites for administering Attendant Backup	161
Screens for administering Attendant Backup	161
Setting up Attendant Backup telephones	162
Configuring your system	162
Defining Class of Service console permissions	163
Assigning console permissions to backup telephones	164
Training designated users	166
End-user procedures for Attendant Backup	166
Reports for Attendant Backup	167
Considerations for Attendant Backup	167
Interactions for Attendant Backup	168

Attendant Call Waiting	169
Detailed description of Attendant Call Waiting	169
Administering Attendant Call Waiting	170
Prerequisites for administering Attendant Call Waiting	170
Screens for administering Attendant Call Waiting	170
Setting up single-line telephones	171
Changing the call-waiting signal	172
Modifying timed intervals	173
Reports for Attendant Call Waiting	174
Considerations for Attendant Call Waiting	174
Interactions for Attendant Call Waiting	175
Attendant Calling of Inward Restricted Stations	177
Detailed description of Attendant Calling of Inward Restricted Stations	177
Administering Attendant Calling of Inward Restricted Stations	177
Prerequisites for administering Attendant Calling of Inward Restricted Stations	178
Screens for administering Attendant Calling of Inward Restricted Stations	178
Setting up Class of Restriction override	178
Reports for Attendant Calling of Inward Restricted Stations	178
Considerations for Attendant Calling of Inward Restricted Stations	179
Interactions for Attendant Calling of Inward Restricted Stations	179
Attendant Conference	181
Detailed description of Attendant Conference	181
Administering Attendant Conference	181
Prerequisites for administering Attendant Conference	181
Screens for administering Attendant Conference	182
Setting up Attendant Conference	182
Reports for Attendant Conference	184
Considerations for Attendant Conference	184
Interactions for Attendant Conference	184
Attendant Control of Trunk Group Access	187
Detailed description of Attendant Control of Trunk Group Access	187
Administering Attendant Control of Trunk Group Access	188
Prerequisites for administering Attendant Control of Trunk Group Access	188
Screens for administering Attendant Control of Trunk Group Access	189

Setting the trunk group threshold	189
Assigning Attendant Control of Trunk Group Access buttons	190
Reports for Attendant Control of Trunk Group Access	191
Considerations for Attendant Control of Trunk Group Access.	191
Interactions for Attendant Control of Trunk Group Access	192
Attendant Direct Extension Selection	193
Detailed description of Attendant Direct Extension Selection	193
Standard DXS Tracking	194
Enhanced DXS Tracking	194
Group Display button	194
Administering Attendant Direct Extension Selection	195
Prerequisites for administering Attendant Direct Extension Selection	195
Screens for administering Attendant Direct Extension Selection	195
Reports for Attendant Direct Extension Selection	195
Considerations for Attendant Direct Extension Selection	196
Interactions for Attendant Direct Extension Selection	196
Attendant Direct Trunk Group Selection	197
Detailed description of Attendant Direct Trunk Group Selection	197
Administering Attendant Direct Trunk Group Selection	198
Prerequisites for administering Attendant Direct Trunk Group Selection	198
Screens for administering Attendant Direct Extension Selection	198
Reports for Attendant Direct Trunk Group Selection	198
Considerations for Attendant Direct Trunk Group Selection	199
Interactions for Attendant Direct Trunk Group Selection	199
Attendant Intrusion	201
Detailed description of Attendant Intrusion	201
Administering Attendant Intrusion	201
Prerequisites for administering Attendant Intrusion	202
Screens for administering Attendant Intrusion	202
Assigning an intrusion button	202
Reports for Attendant Intrusion	203
Considerations for Attendant Intrusion	203
Interactions for Attendant Intrusion	204

Attendant Lockout - Privacy	205
Detailed description of Attendant Lockout - Privacy	205
Administering Attendant Lockout - Privacy	205
Prerequisites for administering Attendant Lockout - Privacy	205
Screens for administering Attendant Lockout - Privacy	206
Activating or deactivating the Attendant Lockout - Privacy feature	206
Reports for Attendant Lockout - Privacy	207
Considerations for Attendant Lockout - Privacy	207
Interactions for Attendant Lockout - Privacy	208
Attendant Override of Diversion Features	209
Detailed description of Attendant Override of Diversion Features	209
Administering Attendant Override of Diversion Features	209
Prerequisites for administering Attendant Override of Diversion Features	209
Screens for administering Attendant Override of Diversion Features	210
Reports for Attendant Override of Diversion Features	210
Considerations for Attendant Override of Diversion Features	210
Interactions for Attendant Override of Diversion Features	210
Attendant Priority Queue	211
Detailed description of Attendant Priority Queue	211
Priority by Call Category	211
Priority by Call Type	213
Administering Attendant Priority Queue	213
Prerequisites for administering Attendant Priority Queue	214
Screens for administering Attendant Priority Queue	214
Setting category priorities	214
Setting the number of calls in the queue	215
Assigning a Call Type button	216
Translating the Call Type button into a user-defined language	217
Reports for Attendant Priority Queue	217
Considerations for Attendant Priority Queue	218
Interactions for Attendant Priority Queue	218

Attendant Recall	219
Detailed description of Attendant Recall	219
Administering Attendant Recall	219
Prerequisites for administering Attendant Recall	220
Screens for administering Attendant Recall	220
End-user procedures for Attendant Recall	220
Reports for Attendant Recall	220
Considerations for Attendant Recall	221
Interactions for Attendant Recall	221
Attendant Serial Calling	223
Detailed description of Attendant Serial Calling	223
Administering Attendant Serial Calling	223
Prerequisites for administering Attendant Serial Calling	223
Screens for administering Attendant Serial Calling	224
Reports for Attendant Serial Calling	224
Considerations for Attendant Serial Calling	224
Interactions for Attendant Serial Calling	224
Attendant Split Swap	225
Detailed description of Attendant Split Swap	225
Administering Attendant Split Swap	225
Prerequisites for administering Attendant Split Swap	225
Screens for administering Attendant Split Swap	226
Assigning a split-swap button	226
Reports for Attendant Split Swap	227
Considerations for Attendant Split Swap	227
Interactions for Attendant Split Swap	227
Attendant Timers	229
Detailed description of Attendant Timers	229
Administering Attendant Timers	230
Prerequisites for administering Attendant Timers	230
Screens for administering Attendant Timers	231
Setting up Attendant Timers	231
Reports for Attendant Timers	232
Considerations for Attendant Timers	233
Interactions for Attendant Timers	233

Attendant Trunk Identification	235
Detailed description of Attendant Trunk Identification	235
Administering Attendant Trunk Identification	235
Prerequisites for administering Attendant Trunk Identification	235
Screens for administering Attendant Trunk Identification	236
Reports for Attendant Trunk Identification.	236
Considerations for Attendant Trunk Identification	236
Interactions for Attendant Trunk Identification	236
Attendant Vectoring	237
Detailed description of Attendant Vectoring	237
Administering Attendant Vectoring	237
Prerequisites for administering Attendant Vectoring	238
Screens for administering Attendant Vectoring	239
Creating a VDN extension for Attendant Vectoring	239
Assigning the VDN extension for Attendant Vectoring to a console	240
Assigning the VDN extension for Attendant Vectoring to a tenant	241
Reports for Attendant Vectoring	242
Considerations for Attendant Vectoring	243
Interactions for Attendant Vectoring	243
Audible Message Waiting	245
Detailed description of Audible Message Waiting	245
Administering Audible Message Waiting	246
Prerequisites for administering Audible Message Waiting	246
Screens for administering Audible Message Waiting	246
Administering Audible Message Waiting for a user.	247
Reports for Audible Message Waiting	248
Considerations for Audible Message Waiting	248
Interactions for Audible Message Waiting	248
AUDIX One-Step Recording	249
Detailed description of AUDIX One-Step Recording	249
Feature button	249
Language options	250
Periodic alerting tone	250
Ready indication tone	250
Recording delay timer	251

Administering AUDIX One-Step Recording	251
Prerequisites for administering AUDIX One-Step Recording	251
Screens for administering AUDIX One-Step Recording	252
Assigning AUDIX One-Step Recording Parameters	252
Translating telephone feature buttons and labels.	254
Translating the AUDIX One-Step Recording text that appears on a telephone display to a user-defined language	254
Translating the AUDIX One-Step Recording button label to a user-defined language	255
Assigning the feature button to a telephone	256
Changing the characteristics of the zip tone	257
End-user procedures for AUDIX One-Step Recording	260
Recording a conversation	260
Reports for AUDIX One-Step Recording	261
Considerations for AUDIX One-Step Recording	261
Interactions for AUDIX One-Step Recording	262
Troubleshooting AUDIX One-Step Recording	265
Authorization Codes	267
Detailed description of Authorization Codes	267
Length of authorization codes	267
Using authorization codes	268
AAR and ARS calls	268
Administering Authorization Codes	269
Prerequisites for administering Authorization Codes	269
Screens for administering Authorization Codes	270
Setting up Authorization Codes	270
Creating Authorization Codes with a specific Class of Restriction (COR)	273
Reports for Authorization Codes	274
Considerations for Authorization Codes	274
Interactions for Authorization Codes	275
Automated Attendant	277
Detailed description of Automated Attendant	277
Administering Automated Attendant	277
Prerequisites for administering Automated Attendant	278
Screens for administering Automated Attendant	278
Setting the prompting timeout	279
Administering a vector directory number	280

Contents

Administering announcements	280
Controlling hunt groups by vector	280
Administering call vectors	281
Assigning a caller information button on a multiappearance telephone . . .	281
Assigning a caller information button on an attendant console	282
Reports for Automated Attendant	283
Considerations for Automated Attendant	283
Interactions for Automated Attendant	284
Automatic Callback	285
Detailed description of Automatic Callback	285
Ringback Queing	286
Analog Busy Automatic Callback Without Flash	287
Administering Automatic Callback	287
Prerequisites for administering Automatic Callback	287
Screens for administering Automatic Callback	288
Assigning a FAC for Automatic Callback	288
Setting the no-answer timeout interval	290
Assigning a feature button for Automatic Callback	291
Setting the queue length for Ringback Queing	292
Reports for Automatic Callback	293
Considerations for Automatic Callback	293
Interactions for Automatic Callback	294
Automatic Circuit Assurance	297
Detailed description of Automatic Circuit Assurance	297
The referral call	297
The audit trail	298
Administering Automatic Circuit Assurance	298
Screens for administering Automatic Circuit Assurance	298
Reports for Automatic Circuit Assurance	299
Considerations for Automatic Circuit Assurance	299
Interactions for Automatic Circuit Assurance	300
Automatic Number Identification	303
Detailed description of Automatic Number Identification	303
Incoming Automatic Number Identification	303
Outgoing Automatic Number Identification	304
Administering Automatic Number Identification	304

Prerequisites for Automatic Number Identification	304
Screens for administering Automatic Number Identification	305
Setting up ANI on a multifrequency trunk	305
Displaying incoming ANI calling party information	306
Setting up outgoing ANI	308
Prerequisites	308
ANI Req'd	309
Setting up an ANI request button	310
Reports for Automatic Number Identification	311
Considerations for Automatic Number Identification	311
Interactions for Automatic Number Identification	312
Bridged Call Appearance	313
Detailed description of Bridged Call Appearance	313
Sample uses	314
Administrable buttons and lamps for multiappearance telephones	314
Administering Bridged Call Appearance	315
Prerequisites for administering Bridged Call Appearance	315
Screens for administering Bridged Call Appearance	316
Creating a bridged call appearance on a single-line telephone	316
Creating a bridged call appearance on a multiappearance telephone	317
Reports for Bridged Call Appearance	319
Considerations for Bridged Call Appearance	320
Interactions for Bridged Call Appearance	321
Bulletin Board	331
Detailed description of Bulletin Board	331
Administering Bulletin Board	331
Prerequisites for administering Bulletin Board	332
Screens for administering Bulletin Board	332
Setting user permissions	332
Changing bulletin board information	333
Reports for Bulletin Board	336
Considerations for Bulletin Board	337
Interactions for Bulletin Board	337

Busy Indicator	339
Detailed description of Busy Indicator	339
Busy Tone Disconnect	339
Reports for Busy Indicator	340
Considerations for Busy Indicator	340
Interactions for Busy Indicator	340
Busy Verification	341
Detailed description of Busy Verification	341
Administering Busy Verification	343
Prerequisites for administering Busy Verification	343
Screens for administering Busy Verification	344
Using Busy Verification	344
Reports for Busy Verification	345
Considerations for Busy Verification	345
Interactions for Busy Verification	345
Call Charge Information	347
Detailed description of Call Charge Information	347
Advice of Charge	347
Periodic Pulse Metering	347
Charge Display	348
Charge Display at a user telephone	348
Charge Display on a CDR report	349
Administering Call Charge Information	349
Prerequisites for administering Call Charge Information	350
Defining CDR to support Call Charge Information	350
Specifying the frequency of the call charge displays	351
Translating the text "Call Charge"	352
Assigning a COR for charge displays	353
Screens for administering Call Charge Information	354
Administering the charge display	355
Administering a trunk group for call charge displays	355
Assigning a call charge display button for a user	357
Assigning a call charge display feature button for an attendant	359
Administering AOC for ISDN trunks	361
Administering PPM for non-ISDN trunks	364
Administering PPM for DS1 circuit packs	366

End-user procedures for Call Charge Information	369
Displaying call charge information	369
Reports for Call Charge Information	370
Considerations for Call Charge Information	370
Interactions for Call Charge Information	371
Call Coverage	375
Detailed description of Call Coverage	375
What is a Call Coverage Path?	376
Multiple coverage paths	376
Time-of-Day Coverage	377
Off-network Call Coverage	379
Call Coverage changeable coverage paths	380
Extended User Administration of Redirected Calls	380
Call coverage criteria	381
VDN in a call coverage path (VICP)	382
Coverage answer groups	382
Announcement in a coverage path	382
Hunt group in a coverage path	383
Subsequent redirection interval	383
Notifying users when the calls are redirected	383
Caller response interval	383
Consult	384
Features that override Call Coverage	385
Conditions that override Call Coverage	385
Administering Call Coverage	387
Prerequisites for administering Call Coverage	387
Screens for administering Call Coverage	388
Creating a coverage path	390
Prerequisites	390
Assigning a coverage path to a user	393
Prerequisites	393
Assigning a Consult button for a user	396
Defining coverage redirected off-network calls	396
Prerequisites	396
Assigning the telephone numbers for the off-network coverage points	397
Administering the coverage path for redirected off-network calls	398
Assigning time-of-day coverage	399
Prerequisites	399

Contents

Creating a coverage answer group	401
Assigning Internal Alerting	401
Reports for Call Coverage	402
Considerations for Call Coverage	403
Interactions for Call Coverage	403
Troubleshooting Call Coverage	407
Call Detail Recording	409
Detailed description of Call Detail Recording	409
Monitoring call detail records	410
Answer Detection	410
Call classification	410
Network answer supervision	410
Answer supervision by timeout	411
Account Code Dialing	411
Forced Entry of Account Codes	411
Call Splitting	412
Incoming trunk call splitting	413
Examples	413
Outgoing trunk call splitting	415
Examples	416
ITCS, OTCS, and attendant call recording	417
Examples	417
Intraswitch CDR	419
CDR Privacy	420
CDR output	420
CDR record formats	421
Customized CDR call record formats.	423
Standard CDR call record formats	423
Call detail record field descriptions	453
Administering Call Detail Recording	470
Prerequisites for administering Call Detail Recording	471
Screens for administering Call Detail Recording	472
Assigning Forced Entry of Account Codes	473
Prerequisites	473
Assigning FEAC for all calls	473
Assigning FEAC to a COR.	474
Assigning FEAC to a user.	475
Assigning privacy digits for a user.	477
Prerequisites	477

Administering the CDR system parameters	479
Administering CDR for a trunk group	489
Administering CDR for a data module	492
Identifying the Inter Exchange Carrier	501
Administering CDR for the paging ports	503
Administering the Intra-Switch CDR	504
End-user procedures for Call Detail Recording	505
Reports for Call Detail Recording.	505
Considerations for Call Detail Recording	505
Interactions for Call Detail Recording	506
Call Forwarding	519
Detailed description of Call Forwarding	519
Call Forwarding All Calls	519
Call Forwarding and FAC	520
Call Forwarding and attendants	520
Call Forward Busy/Don't Answer	520
Call Forwarding Off-Net	521
Call Forwarding Override	521
Notifying users when their calls are redirected	522
Coverage for unanswered forwarded calls	522
Security	522
Administering Call Forwarding	522
Prerequisites for administering the Call Forwarding feature	523
Screens for administering Call Forwarding	524
Viewing user extensions that have the Call Forwarding capabilities active	525
Assigning the Call Forwarding All Calls capability to a user	525
Removing the Call Forwarding All Calls capability for a user	526
Assigning the Call Forward Busy/Don't Answer capability to a user	526
Prerequisites	526
Removing the Call Forward Busy/Don't Answer capability for a user	528
Assigning the Call Forwarding Off-Net capability to a user	528
Prerequisites	528
Removing the Call Forwarding Off-Net capability for a user	530
Enabling the Call Forwarding Override capability for your system	530
Disabling the Call Forwarding Override capability for your system	531
End-user procedures for Call Forwarding	532
Changing the Call Forwarding All Calls destination from an internal telephone	532

Contents

Changing the Call Forward Busy/Don't Answer destination from an internal telephone	532
Changing the forwarding destination when a user is at an off-network location	533
Changing the Call Forward Busy/Don't Answer destination when a user is at an off-network location	533
Reports for Call Forwarding	534
Considerations	534
Interactions	535
Call Park	539
Detailed description of Call Park	539
Administering Call Park	540
Prerequisites for administering the Call Park feature	540
Screens for administering Call Park	545
Assigning a call park button to a multiple-call appearance telephone	545
End-user procedures for Call Park	546
Using Call Park from a single-line telephone	547
Using Call Park from a multiple-call appearance telephone	547
Using Call Park from an attendant console	547
Retrieving a parked call	547
Reports for Call Park	548
Considerations for Call Park	548
Interactions for Call Park	549
Call Pickup	551
Detailed Description	551
Call ringing and status lamp flashing	551
Directed Call Pickup	552
Extended Group Pickup	553
Administering Call Pickup	553
Screens for administering Call Pickup	554
Assigning a call pickup button to a user telephone	554
Prerequisites	554
Changing a call pickup button on a user telephone	556
Removing a call pickup button from a user telephone	557
Assigning a user to a call pickup group	557
Removing a user from a call pickup group	559
Assigning the Directed Call Pickup capability to a user	560
Prerequisites	560

Removing the Directed Call Pickup capability from a user	562
Assigning a pickup group to an extended pickup group	563
Prerequisites	563
Removing a pickup group from an extended pickup group	565
Assigning extended pickup groups to another extended pickup group	566
Prerequisites	566
Removing an extended pickup group from an extended pickup group	568
End-user procedures for Call Pickup	569
Reports for Call Pickup	569
Considerations for Call Pickup	570
Interactions for Call Pickup	570
Call Waiting Termination	573
Detailed description of Call Waiting Termination	573
Call Waiting tones	573
Administering Call Waiting Termination	574
Prerequisites for administering Call Waiting Termination	574
Screens for administering Call Waiting Termination	575
Assigning Call Waiting Termination	576
Reports for Call Waiting Termination.	577
Considerations for Call Waiting Termination	578
Interactions for Call Waiting Termination	578
Call-by-Call Service Selection	579
Detailed description of Call-by-Call Service Selection	579
ISDN messages and information elements for usage allocation	581
Usage Allocation Plans	581
Incoming call-handling treatment.	582
Call Detail Recording	583
Administering Call-by-Call Service Selection	583
Prerequisites for administering Call-by-Call Service Selection	584
Screens for administering Call-by-Call Service Selection	584
Setting up a trunk group for CBC.	585
Administering incoming call handling treatment	588
Administering route patterns for the CBC trunk group	589
Administering network facilities	590
Reports for Call-by-Call Service Selection.	591
Considerations for Call-by-Call Service Selection	591
Interactions for Call-by-Call Service Selection	592

Caller ID	593
Detailed description of Caller ID	593
Caller ID on analog trunks	594
Caller ID on digital trunks	594
Administering Caller ID	594
Prerequisites for administering Caller ID	595
Screens for administering Caller ID	595
Displaying Caller ID information	595
Reports for Caller ID	597
Considerations for Caller ID	597
Interactions for Caller ID	598
Centralized Attendant Service	601
Detailed description of Centralized Attendant Service	601
Branch-generated call identification tones	602
Administering Centralized Attendant Service	603
Prerequisites for administering Centralized Attendant Service	603
Screens for administering Centralized Attendant Service	604
Reports for Centralized Attendant Service	604
Considerations for Centralized Attendant Service	604
Interactions for Centralized Attendant Service	605
Class of Restriction	609
Detailed description of Class of Restriction	609
Strategy for assigning CORs	610
Types of restrictions	611
Calling party restrictions	611
Called party restrictions	612
Fully restricted service	613
COR-to-COR restrictions	613
Administering Class of Restriction	614
Prerequisites for administering Class of Restriction	614
Screens for administering Class of Restriction	614
Displaying administered CORs	615
Setting up a COR	616
Allowing users to change their own COR	619
Assigning a FAC	619
Assigning a password	620
End-user procedures for Class of Restriction	621

Reports for Class of Restriction	621
Considerations for Class of Restriction	622
Interactions for Class of Restriction	622
Class of Service	625
Detailed description of Class of Service	625
Administering Class of Service.	625
Prerequisites for administering Class of Service	626
Screens for administering Class of Service	626
Defining COS for your system	626
Descriptions of the COS features.	627
Assigning a COS.	630
Reports for Class of Service	630
Considerations for Class of Service	630
Interactions for Class of Service	631
Conference.	633
Detailed description of Conference	633
Conference and DCP, hybrid, IP, wireless, and ISDN-BRI telephones	633
Meet-me Conference.	634
Conference/Transfer Toggle/Swap	634
No Dial Tone Conferencing	634
No Hold Conference	634
Select Line Appearance Conferencing	635
Selective Conference Party Display, Drop, and Mute	635
Administering Conference	636
Prerequisites for administering the Conference feature	636
Screens for administering Conference.	639
Assigning the toggle-mute feature button	640
Assigning feature buttons	641
Prerequisites	641
Assigning feature buttons to a user	642
Assigning feature buttons to an attendant	643
End-user procedures for Conference	644
Displaying the participants on a conference call	645
Reports for Conference	645
Considerations for Conference	646
Interactions for Conference	646

Co-resident DEFINITY LAN Gateway	649
Detailed description of Co-resident DEFINITY LAN Gateway	649
Administering Co-resident DEFINITY LAN Gateway	650
Prerequisites for administering Co-resident DEFINITY LAN Gateway	650
With the TN799 C-LAN circuit pack as the Ethernet Interface	650
With the TN2314 circuit pack as the Ethernet Interface	651
Screens for administering Co-resident DEFINITY LAN Gateway	651
Reports for Co-resident DEFINITY LAN Gateway	652
Considerations for Co-resident DEFINITY LAN Gateway	653
Interactions for Co-resident DEFINITY LAN Gateway	653
Data Call Setup	655
Detailed description of Data Call Setup	655
Administering Data Call Setup	659
Prerequisites	659
Screens for administering Data Call Setup	661
Defining a data module	661
Specifying the port location	673
Assigning the data extension feature button	673
End-user procedures for Data Call Setup	674
Setting up and disconnecting data calls from a DCP data terminal	675
Setting up data calls from a DCP telephone	675
Setting up and disconnecting data calls from an ISDN-BRI data terminal.	676
Setting up data calls from an ISDN-BRI telephone	676
Reports for Data Call Setup	677
Considerations for Data Call Setup	677
Interactions for Data Call Setup	678
Default Dialing	681
Detailed description of Default Dialing	681
Administering Default Dialing	681
Screens for administering Default Dialing	682
Reports for Default Dialing	682
Considerations for Default Dialing	682
Interactions for Default Dialing	682

Demand Print	683
Detailed description of Demand Print	683
Administering Demand Print	683
Screens for administering Demand Print	683
Reports for Demand Print	684
Considerations for Demand Print.	684
Interactions for Demand Print	684
Dial Access to Attendant	685
Detailed description of Dial Access to Attendant	685
Administering Dial Access to Attendant	685
Prerequisites for administering Dial Access to Attendant	685
Screens for administering Dial Access to Attendant	686
Changing the attendant access code	686
Reports for Dial Access to Attendant	687
Considerations for Dial Access to Attendant	688
Interactions for Dial Access to Attendant	688
Dial Plan	689
Detailed Description of Dial Plan	689
Dial plan information	689
Multilocation dial plan	690
Location prefix	690
Location prefix example.	690
Other options for the dial plan	690
6-Digit Extension Display Format.	691
7-Digit Extension Display Format.	691
AAR/ARS Internal Call Prefix	692
AAR/ARS Internal Call Total Length	692
ETA Node Number	692
ETA Routing Pattern.	693
Local Node Number	693
UDP Extension Search Order	693
Dial Plan Analysis Table	694
Dial Plan Parameters	695
Multi-Location Dial Plan	696
Other options for Dial Plan	696

Contents

Administering Dial Plan	696
Prerequisites for administering Dial Plan	697
Screens for administering Dial Plan	697
Defining your dial plan	698
Adding extension ranges	702
Defining a multilocation dial plan.	702
Prerequisites	702
Reports for Dial Plan	703
Considerations for Dial Plan	703
Interactions for Dial Plan	704
Distinctive Ringing	707
Detailed description of Distinctive Ringing	707
Administering Distinctive Ringing	707
Prerequisites for administering Distinctive Ringing	708
Screens for administering Distinctive Ringing	708
Defining Distinctive Ringing	708
Reports for Distinctive Ringing	710
Considerations for Distinctive Ringing	711
Interactions for Distinctive Ringing	711
Enhanced 911	713
Detailed description of Enhanced 911	713
Configurations with media gateways in different locations	715
Location Specific Routing	715
E911 for wired IP telephones	717
Emergency Extension Forwarding	718
Call Forwarding of dropped emergency calls	718
Crisis Alert	719
Cancelling an alert.	720
Administering Enhanced 911	720
Prerequisites for administering Enhanced 911	721
Screens for administering Enhanced 911	721
Setting up Crisis Alert to an attendant or a display telephone	722
Setting up the emergency number	723
Setting up the attendant console to receive emergency notification	724
Setting up digital telephones to receive emergency notification.	725
Setting which users must acknowledge the emergency alert	726

Setting up Crisis Alert to notify a digital pager	727
Prerequisites	727
Setting up emergency extension forwarding	729
Setting up CAMA numbering	731
Reports for Enhanced 911	733
Considerations for Enhanced 911	733
Interactions for Enhanced 911	734
Emergency Calls from Unnamed IP Endpoints	737
Detailed description of Emergency Calls from Unnamed IP Endpoints	737
Changed screens	739
Feature-Related System Parameters screen.	739
Port Information screen	740
System Capacity screen.	740
Changed commands.	741
reset ip-stations command	741
Administering Emergency Calls from Unnamed IP Endpoints	741
Prerequisites for administering Emergency Calls from Unnamed IP Endpoints	742
Screens for administering Emergency Calls from Unnamed IP Endpoints . .	743
Reports for Emergency Calls from Unnamed IP Endpoints	744
Considerations for Emergency Calls from Unnamed IP Endpoints	745
Interactions for Emergency Calls from Unnamed IP Endpoints	746
Expanded Meet-me Conferencing	747
Detailed description of Expanded Meet-me Conferencing	747
Highlights of Expanded Meet-me Conferencing	747
Expanded Meet-me Conferencing vectors and VDNs	748
Expanded Meet-me Conferencing display updates	749
Status screens for Expanded Meet-me Conferencing.	750
Administering Expanded Meet-me Conferencing	750
Prerequisites for administering Expanded Meet-me Conferencing	750
Screens for administering Expanded Meet-me Conferencing	751
Setting the maximum number of parties for each conference	752
Changing or creating a VDN for Expanded Meet-me Conferencing	753
Setting language translations.	755
End-user procedures for Expanded Meet-me Conferencing	755
Reports for Expanded Meet-me Conferencing.	756
Considerations for Expanded Meet-me Conferencing	756
Interactions for Expanded Meet-me Conferencing	756

Extended User Administration of Redirected Calls	757
Detailed description of Extended User Administration of Redirected Calls	757
Disabling the telecommuting access extension	758
Extended User Administration of Redirected Calls and DCS	758
Extended User Administration of Redirected Calls and Class of Service (COS)	758
Extended User Administration of Redirected Calls and COR	759
Extended User Administration of Redirected Calls from an off-site telephone	759
Administering Extended User Administration of Redirected Calls	759
Prerequisites for administering Extended User Administration of	
Redirected Calls	760
Screens for administering Extended User Administration of Redirected Calls	765
Assigning a station security code to a user	765
End-user procedures for Extended User Administration of Redirected Calls . .	766
Changing Call Coverage or activating Call Forwarding from an	
on-site telephone that is not assigned to the user	767
Deactivating Call Forwarding from an on-site telephone that is	
not assigned to the user	768
Reports for Extended User Administration of Redirected Calls	768
Considerations for Extended User Administration of Redirected Calls	769
Interactions for Extended User Administration of Redirected Calls	769
Facility and Non-Facility Associated Signaling	771
Detailed description of Facility and Non-Facility Associated Signaling	771
D-channel backup with NFAS	771
D-channel backup activation	773
Administering Facility and Non-Facility Associated Signaling	773
Prerequisites for administering Facility and Non-Facility	
Associated Signaling.	773
Screens for administering Facility and Non-Facility Associated Signaling . .	774
Reviewing the guidelines for FAS and NFAS	774
Implementing FAS and NFAS	775
Administering the DS1 Circuit Pack screen	775
Administering the Interface Links and Processor Channels screens . . .	776
Administering the ISDN-PRI Trunk Group, Signaling Group, and	
Trunk Group Members screens	776
Reports for Facility and Non-Facility Associated Signaling	778
Considerations for Facility and Non-Facility Associated Signaling	779
Interactions for Facility and Non-Facility Associated Signaling	779

Facility Restriction Levels	781
Detailed description of Facility Restriction Levels	781
AAR and ARS calls	781
Originators of AAR and ARS calls	781
Call termination points for AAR and ARS calls	782
AFRL	783
Alt-frl feature button	783
Authorization codes	783
Administering Facility Restriction Levels	784
Screens for administering Facility Restriction Levels	784
End-user procedures for Facility Restriction Levels	785
Reports for Facility Restriction Levels	785
Considerations for Facility Restriction Levels	786
Interactions for Facility Restriction Levels	786
Facility Test Calls	787
Detailed description of Facility Test Calls	787
Security.	788
Administering Facility Test Calls	788
Screens for administering Facility Test Calls	788
Reports for Facility Test Calls.	789
Considerations for Facility Test Calls	789
Interactions for Facility Test Calls	789
Feature Access Codes	791
Detailed description of Feature Access Codes	791
Administering Feature Access Codes	792
Prerequisites for administering Feature Access Codes	792
Screens for administering Feature Access Codes	792
Assigning Feature Access Codes	793
Changing or deleting Feature Access Codes	794
Reports for Feature Access Codes.	795
Considerations for Feature Access Codes	795
Interactions for Feature Access Codes	795
Troubleshooting Feature Access Codes	796

Group Paging	797
Detailed Description of Group Paging	797
Restrictions	797
Controlling access to paging groups.	797
Administering Group Paging	798
Prerequisites for administering Group Paging	798
Screens for administering Group Paging	798
Creating a paging group	798
Changing a paging group	800
Viewing all paging groups	800
Reports for Group Paging.	801
Considerations for Group Paging	801
Interactions for Group Paging	801
Troubleshooting Group Paging	803
Hold	805
Detailed description of Hold	805
Soft hold	805
Hard hold	805
Automatic Hold	806
Administering Hold	806
Prerequisites for administering Hold	806
Screens for administering Hold	807
Enabling Automatic Hold	807
Assigning a FAC for CAS remote hold and answer	808
Reports for Hold	809
Considerations for Hold	810
Interactions for Hold	810
Hot Line Service	813
Detailed description of Hot Line Service	813
Administering Hot Line Service	814
Screens for administering Hot Line Service	814
Reports for Hot Line Service	814
Considerations for Hot Line Service	815
Interactions for Hot Line Service	815

Hunt Groups	817
Detailed description of Hunt Groups	817
Announcements for hunt groups	818
Delay announcement intervals for hunt groups	818
Analog, aux-trunk, or integrated delay announcements for hunt groups	819
Call Coverage for hunt groups	819
Call Distribution methods for hunt group types	820
Hunt group extension unavailability	821
Hunt Group Busy option	822
Using Send All Calls with hunt groups	822
Using Call Forwarding All Calls with hunt groups	822
Queues for hunt groups	823
TTY hunt groups	823
Administering Hunt Groups	824
Prerequisites for administering Hunt Groups	824
Screens for administering Hunt Groups	824
Setting up hunt groups	825
Changing hunt groups	827
Setting up queues for hunt groups	828
Adding hunt group announcements	828
Setting up night service for hunt groups	829
Reports for Hunt Groups	830
Considerations for Hunt Groups	831
Interactions for Hunt Groups	832
Individual Attendant Access	835
Detailed description of Individual Attendant Access	835
Administering Individual Attendant Access	835
Prerequisites for administering Individual Attendant Access	835
Screens for administering Individual Attendant Access	836
Assigning an extension to an attendant console	836
Reports for Attendant Individual Attendant Access.	837
Considerations for Individual Attendant Access	837
Interactions for Individual Attendant Access	837
Intercom	839
Detailed description of Intercom	839
Intercom groups	839
Telephones	840

Contents

Administering Intercom	840
Screens for administering Intercom	840
Reports for Intercom	840
Considerations for Intercom	841
Interactions for Intercom	841
Internal Automatic Answer	843
Detailed description of Internal Automatic Answer	843
Administering Internal Automatic Answer	844
Screens for administering Internal Automatic Answer	844
Reports for Internal Automatic Answer	844
Considerations for Internal Automatic Answer	845
Interactions for Internal Automatic Answer	845
Inter-PBX Attendant Service	849
Detailed description of Inter-PBX Attendant Service	849
Administering Inter-PBX Attendant Service	849
Prerequisites for administering Inter-PBX Attendant Service	850
Screens for administering Inter-PBX Attendant Service	850
Enabling Inter-PBX Attendant Service	850
Reports for Inter-PBX Attendant Service.	851
Considerations for Inter-PBX Attendant Service	852
Interactions for Inter-PBX Attendant Service	852
ISDN Service	853
Detailed description of ISDN Service	853
Transmission rate and protocols	854
AT&T Switched Network protocol	855
Private network services	857
ETN services	857
DCS services	858
QSIG services	858
Wideband Switching (ISDN-PRI only)	858
Call-by-Call Service Selection.	858
Access to Software Defined Data Network.	858
Access to Switched Digital International.	858
National ISDN-2 services	859
Calling Line Identification	859
Non-Facility Associated Signaling (ISDN-PRI only)	859

D-Channel Backup (ISDN-PRI only)	859
Wideband Switching (ISDN-PRI only)	859
Call-by-Call Service Selection.	859
ISDN interworking	860
Call Identification Display	861
Displays for redirected calls	862
Displays for conference calls	863
Displays for calls to hunt groups	863
Displays for calls to Terminating Extension Groups (TEG).	863
Caller Information Forwarding	863
Facility Restriction Level (FRL) and Traveling Class Mark (TCM)	863
Information Indicator Digits (II-digits)	863
Malicious Call Trace (MCT)	863
Multiple Subscriber Number (MSN) - Limited	864
Overlap Sending	864
Interworking between TGU/TGE trunks and ISDN (Italy)	864
Administering ISDN Service	864
Screens for administering ISDN Service	864
Reports for ISDN Service	865
Considerations for ISDN Service	865
Interactions for ISDN Service	865
Last Number Dialed	867
Detailed description of Last Number Dialed	867
Administering Last Number Dialed	867
Screens for administering Last Number Dialed	867
Reports for Last Number Dialed	868
Considerations for Last Number Dialed	868
Interactions for Last Number Dialed	868
Leave Word Calling	871
Detailed description of Leave Word Calling	871
Voice synthesis	872
Administering Leave Word Calling	872
End-user procedures for Leave Word Calling	872
Considerations for Leave Word Calling	873
Interactions for Leave Word Calling	873

Line Lockout	875
Detailed description of Line Lockout	875
Administering Line Lockout	875
Screens for administering Line Lockout	876
Reports for Line Lockout	876
Considerations for Line Lockout	877
Interactions for Line Lockout	877
Listed Directory Number	879
Detailed description of Listed Directory Number	879
Incoming DID trunk calls to the attendant group	879
Incoming FX and CO trunk calls to the attendant group	879
Administering Listed Directory Number	880
Prerequisites for administering Listed Directory Number	880
Screens for administering Listed Directory Number	880
Assigning listed directory numbers	881
Assigning an incoming destination to a trunk	882
Reports for Listed Directory Number	883
Considerations for Listed Directory Number	883
Interactions for Listed Directory Number	884
Locally Sourced Announcements and Music	885
Detailed description of Locally Sourced Announcements and Music	885
Administering Locally Sourced Announcements and Music	886
Prerequisites for administering Locally Sourced Announcements and Music	887
Screens for administering Locally Sourced Announcements and Music	887
Adding an audio group	888
Listing all audio groups	889
Changing audio group extensions	889
Listing audio group extensions	891
Adding a music-on-hold group	892
Listing music-on-hold groups	892
Changing music-on-hold source type	893
Adding music sources to a tenant partition	894
Displaying VAL board or vVAL group descriptions	896
Displaying system capacities	896
Reports for Locally Sourced Announcements and Music	897
Considerations for Locally Sourced Announcements and Music	897
Interactions for Locally Sourced Announcements and Music	898

Loss Plans	899
Detailed description of Loss Plans	899
Administering Loss Plans.	900
Prerequisites for administering Loss Plans	900
Screens for administering Loss Plans	900
Reports for Loss Plans	901
Considerations for Loss Plans	901
Interactions for Loss Plans	901
Loudspeaker Paging	903
Detailed description of Loudspeaker Paging	903
Types of Paging	903
Deluxe paging	903
Chime paging	904
Auxiliary paging systems	905
Restrictions on loudspeaker paging	905
Administering Loudspeaker Paging	906
Prerequisites for administering Loudspeaker Paging	906
Screens for administering Loudspeaker Paging	907
Setting up Voice Paging over loudspeakers	907
Setting up Chime Paging over Loudspeakers	909
Assigning a chime page code to an individual extension	911
Reports for Loudspeaker Paging	912
Considerations for Loudspeaker Paging.	912
Interactions for Loudspeaker Paging	912
Troubleshooting Loudspeaker Paging	914
Malicious Call Trace	915
Detailed description of Malicious Call Trace	915
Activation	915
Control	915
Deactivation	916
MCT voice recorder	916
Administering Malicious Call Trace	917
Prerequisites for administering Malicious Call Trace	917
Screens for administering Malicious Call Trace	918
Defining Malicious Call Trace on your system	918
Assigning an MCT feature button for an attendant	921

Contents

Assigning an MCT feature button for a user	921
Administering MCT for ISDN notification	922
End-User Procedures for Malicious Call Trace	924
Activating MCT with a feature button when you receive a malicious call . . .	925
Activating MCT with a FAC when you are active on a call	925
Activating MCT with a FAC when you are not active on a call	925
Requesting that an MCT controller on a tandemed server continue the trace	926
Displaying MCT information	926
Deactivating MCT	926
Reports for Malicious Call Trace	927
Considerations for Malicious Call Trace	927
Interactions for Malicious Call Trace	928
Manual Message Waiting	931
Detailed description of Manual Message Waiting	931
Administering Manual Message Waiting	931
Prerequisites for administering Manual Message Waiting	932
Screens for administering Manual Message Waiting	932
Assigning the Manual Message Waiting feature button	932
Reports for Manual Message Waiting	933
Considerations for Manual Message Waiting	933
Interactions for Manual Message Waiting	934
Manual Signaling	935
Detailed description of Manual Signaling	935
Administering Manual Signaling	935
Screens for administering Manual Signaling	936
Assigning a manual signaling button for a multiple-call appearance telephone user	936
End-user procedures for Manual Signaling	937
Reports for Manual Signaling	937
Considerations for Manual Signaling	937
Interactions for Manual Signaling	938
Meet-me Conference	939
Detailed description of Meet-me Conference	939
Administering Meet-me Conference	939
Prerequisites for administering Meet-me Conference	940
Screens for administering Meet-me Conference	940

Creating or changing a Meet-me Conference vector	941
Options for creating vector steps	943
How the vector processes a call	944
Creating a Meet-me Conference VDN	944
End-user procedures for Meet-me Conference	946
Accessing a Meet-me Conference as an attendee	947
Changing a Meet-me Conference access code	947
Using Selective Conference Party Display, Drop, and Mute	947
Reports for Meet-me Conference	948
Considerations for Meet-me Conference	949
Interactions for Meet-me Conference	952
Troubleshooting Meet-me Conference	953
Modem Pooling	955
Detailed description of Modem Pooling	955
Administering Modem Pooling	956
Screens for administering Modem Pooling	956
Reports for Modem Pooling.	957
Considerations for Modem Pooling	957
Interactions for Modem Pooling	958
Multifrequency Signaling	959
Detailed description of Multifrequency Signaling	959
MFE	960
MF Shuttle	960
R2-MFC	960
Guidelines for administering Multifrequency Signaling	960
Administering Multifrequency Signaling.	962
Screens for administering Multifrequency Signaling	962
Reports for Multifrequency Signaling	962
Considerations for Multifrequency Signaling	962
Interactions for Multifrequency Signaling	963
Multi-Location Dial Plan	967
Detailed description of Multi-Location Dial Plan	968
Location prefix	968
Feature Access Codes	969
Announcements	970

Invalid announcements	970
Maintenance	971
Administering Multi-Location Dial Plan	971
Prerequisites for administering Multi-Location Dial Plan	971
Screens for administering Multi-Location Dial Plan	972
Changing extensions	972
Function	973
Exceptions	974
Audits	974
Prepending numbers to the dialed string	974
Setting up announcements	976
Setting up a local centralized answering point	977
Setting up multiple feature access codes for attendants	977
Setting up multiple feature access codes for ARS	977
Reports for Multi-Location Dial Plan	978
Considerations for Multi-Location Dial Plan	978
Interactions for Multi-Location Dial Plan	978
Multiple Level Precedence and Preemption	981
Detailed description of Multiple Level Precedence and Preemption	981
Precedence Calling	982
Precedence levels	982
Format for dialed digits	983
Access digits	983
Address digits	984
Precedence Calling diversion scenarios	984
How service domains influence preemption and precedence	987
Station-to-station calls on the same server	987
Precedence calls to destinations over ISDN-PRI trunks	989
Precedence calls to destinations over non-ISDN-PRI trunks	990
Announcements for Precedence Calling	991
Precedence Call Waiting	992
Precedence Routing	992
Dual Homing	993
End Office Access Line Hunting	993
Preemption	994
Line Load Control	994

Worldwide Numbering and Dialing Plan	996
Feature Access Code	996
Route Code.	997
Address Digits	997
Administering Multiple Level Precedence and Preemption	998
Prerequisites for administering Multiple Level Precedence and Preemption .	1000
Screens for administering Multiple Level Precedence and Preemption . . .	1000
Precedence Calling	1002
Assigning an MLPP Feature Access Code	1002
Assigning Precedence Calling system parameters	1003
Assigning a maximum precedence level	1004
Assigning trunks	1005
Assigning a hot line number	1006
Assigning attendant queue priorities	1009
Announcements for Precedence Calling	1010
Adding extensions	1010
Assigning announcement types	1011
Recording announcements	1011
Deleting announcements	1012
Saving announcements	1012
Precedence Call Waiting	1013
Enabling Precedence Call Waiting for a telephone	1013
Setting the Precedence Call timeout	1014
Assigning Feature Access Codes	1014
Precedence Routing	1015
Assigning digit analysis	1016
Assigning route patterns	1018
Assigning digit conversion	1019
Dual Homing	1020
End Office Access Line Hunting	1021
Preemption	1021
Assigning Preemption to a COR	1021
Assigning trunks for Preemption	1022
Setting the Precedence Call timeout	1022
Line Load Control	1022
Worldwide Numbering and Dialing Plan	1023
Assigning WNDP system parameters	1023
Assigning WNDP Feature Access Codes	1024
Assigning a hot line number	1024
Assigning attendant queue priorities	1025

Reports for Multiple Level Precedence and Preemption	1026
Considerations for Multiple Level Precedence and Preemption	1026
Precedence Calling	1026
Announcements for Precedence Calling	1026
Precedence Call Waiting	1027
Precedence Routing	1027
Preemption	1027
Line Load Control	1027
Worldwide Numbering and Dialing Plan	1028
Interactions for Multiple Level Precedence and Preemption	1028
Precedence Calling	1028
Precedence Call Waiting	1031
Precedence Routing	1032
Preemption	1033
Line Load Control	1036
Worldwide Numbering and Dialing Plan (WNDP)	1037
Music-on-Hold	1039
Detailed description of Music-on-Hold	1039
Administering Music-on-Hold	1040
Prerequisites for administering Music-on-Hold	1040
Screens for administering Music-on-Hold	1040
Assigning music tones, music ports, and music for transferred trunks	1041
Defining a Class of Restriction for Music-on-Hold	1043
Connecting a music source to the server	1044
Assigning a source of music to a port	1044
Reports for Music-on-Hold	1045
Considerations for Music-on-Hold	1045
Interactions for Music-on-Hold	1046
Night Service	1047
Detailed description of Night Service	1047
Hunt Group Night Service	1047
Night Console Service	1047
Night Station Service	1048
Trunk Answer from Any Station	1048
Trunk Group Night Service	1049
Hardware requirements for Night Service	1049

Administering Night Service	1049
Screens for administering Night Service	1050
Setting up night station service to voice mail	1051
Setting up Night Console Service	1053
Setting up Night Station Service	1054
Setting up Trunk Answer from Any Station	1056
Setting up external alerting	1057
Setting up external alerting Night Service	1057
Setting up Night Service for trunk groups	1059
Setting up Night Service for hunt groups	1060
Reports for Night Service	1061
Considerations for Night Service	1061
Considerations for Hunt Group Night Service.	1062
Considerations for Night Console Service.	1062
Considerations for Night Station Service	1062
Considerations for TAAS	1063
Considerations for Trunk Group Night Service	1063
Interactions for Night Service	1064
Interactions for Hunt Group Night Service.	1064
Interactions for Night Console Service.	1064
Interactions for Night Station Service	1065
Interactions for TAAS	1066
Interactions for Trunk Group Night Service	1066
Off-Premises Station	1069
Detailed description of Off-Premises Station	1069
Administering Off-Premises Station	1070
Prerequisites for administering Off-Premises Station	1070
Screens for administering Off-Premises Station	1070
Activating Off-Premises Station for a user	1070
Reports for Off-Premises Station	1072
Considerations for Off-Premises Station.	1072
Interactions for Off-Premises Station	1072
Personal Station Access	1073
Detailed description of Personal Station Access	1073
Telecommuting	1073
Invalid attempts to use PSA	1073
Preferences and permissions	1074

Contents

Button mapping	1074
Unanswered calls	1074
Dissociated telephones	1074
Security	1075
Administering Personal Station Access	1075
Prerequisites for administering Personal Station Access	1076
Screens for administering Personal Station Access	1078
End-user procedures for Personal Station Access	1078
Using the PSA associate command	1079
Interrupting the PSA associate command sequence	1081
Using the PSA dissociate command	1081
Reports for Personal Station Access.	1081
Considerations for Personal Station Access	1081
Interactions for Personal Station Access	1082
Personalized Ringing	1085
Detailed description of Personalized Ringing	1085
Ringing patterns	1085
Power failures	1085
Administering Personalized Ringing	1086
Prerequisites for administering Personalized Ringing	1086
Screens for administering Personalized Ringing	1086
Assigning Personalized Ringing to a user telephone	1086
Reports for Personalized Ringing	1088
Considerations for Personalized Ringing	1088
Interactions for Personalized Ringing	1088
Posted Messages	1089
Detailed description of Posted Messages	1089
Language options	1089
Messages.	1090
Fixed messages	1090
Custom messages	1091
QSIG support	1091
Administering Posted Messages	1092
Prerequisites for administering Posted Messages	1092
Screens for administering Posted Messages	1093
Defining a Feature Access Code	1094
Requiring a security code.	1095

Setting up a security code for the telephone of a user	1096
Activating the Posted Messages security code	1096
Activating QSIG to send custom messages	1097
Translating Posted Messages	1098
Translating fixed messages to a user-defined language	1099
Creating custom messages	1100
Translating telephone feature buttons and labels	1101
Translating the Posted Messages feature display to a user-defined language	1102
Translating the Posted Messages softkey button label to a user-defined language	1102
Translating the Posted Messages button label to a user-defined language	1103
End-user procedures for Posted Messages	1104
Activating the Posted Messages feature	1105
Using a Feature Access Code.	1105
Examples	1106
Using the Posted Messages feature button	1106
Deactivating the Posted Messages feature	1107
Using a feature access code (FAC).	1107
Examples	1107
Using the Posted Messages feature button	1108
Reports for Posted Messages	1108
Considerations for Posted Messages	1108
Interactions for Posted Messages	1109
Priority Calling	1113
Detailed description of Priority Calling	1113
Administering Priority Calling	1113
Prerequisites for administering Priority Calling	1114
Screens for administering Priority Calling	1116
Assigning a priority feature button to an attendant console	1117
Assigning a priority feature button to a telephone	1118
End-user procedures for Priority Calling	1119
Reports for Priority Calling	1119
Considerations for Priority Calling	1119
Interactions for Priority Calling	1120

Privacy	1121
Detailed description of Privacy	1121
Data Privacy	1121
Data Restriction	1121
Privacy - Automatic Exclusion	1122
Privacy - Manual Exclusion	1122
Administering Privacy	1122
Prerequisites for administering Privacy	1122
Screens for administering Privacy	1123
Administering Privacy for a user	1124
Activating Data Restriction for a trunk group	1127
End-user procedures for Privacy	1128
Reports for Privacy	1128
Considerations for Privacy	1128
Interactions for Privacy	1129
Public Network Call Priority	1131
Detailed description of Public Network Call Priority	1131
China	1131
Forced disconnect	1131
Mode-of-release control	1132
Russia	1133
Intrusion	1133
Re-ring	1133
Spain	1133
Call retention	1133
Re-ring	1133
Administering Public Network Call Priority	1133
Screens for administering Public Network Call Priority	1134
Screens for China	1134
Screens for Russia	1134
Screens for Spain	1135
Reports for Public Network Call Priority	1135
Considerations for Public Network Call Priority	1135
Interactions for Public Network Call Priority	1135
China	1136
Forced disconnect	1136
Mode-of-release control	1136
Re-ring	1137
Russia	1137

Recorded Telephone Dictation Access	1141
Detailed description of Recorded Telephone Dictation Access	1141
Administering Recorded Telephone Dictation Access	1141
Screens for administering Recorded Telephone Dictation Access	1142
Assigning manual signaling button to a multiple-call appearance telephone user	1142
Reports for Recorded Telephone Dictation Access	1143
Considerations for Recorded Telephone Dictation Access.	1143
Interactions for Recorded Telephone Dictation Access	1143
Remote Access	1145
Detailed description of Remote Access	1145
Night Service	1146
Security	1146
Status remote-access	1146
Barrier codes	1147
Authorization codes	1148
Alternate Facility Restriction Levels (AFRLs)	1148
Class of Restriction	1148
Logoff Notification	1149
Administering Remote Access	1149
Prerequisites for administering Remote Access	1149
Screens for administering Remote Access	1149
Administering the Remote Access screen	1150
Enabling Remote Access	1150
Disabling Remote Access	1153
Assigning authorization codes	1153
Prerequisites	1153
Administering Remote Access for Night Service	1157
End-user procedures for Remote Access	1158
Reports for Remote Access.	1158
Considerations for Remote Access	1158
Interactions for Remote Access	1159
Restriction - Controlled	1161
Detailed description of Restriction - Controlled	1161
Administering Restriction - Controlled	1162
Screens for administering Restriction - Controlled	1162

Contents

End-user procedures for Restriction - Controlled	1162
Activating Restriction - Controlled	1163
Reports for Restriction - Controlled	1163
Considerations for Restriction - Controlled	1163
Interactions for Restriction - Controlled	1164
Ringling - Abbreviated and Delayed	1165
Detailed description of Ringling - Abbreviated and Delayed	1165
Administering Ringling - Abbreviated and Delayed	1166
Prerequisites for administering Ringling - Abbreviated and Delayed	1166
Screens for administering Ringling - Abbreviated and Delayed	1167
Assigning ring control to a user	1168
Assigning an abbreviated ringling button to a user	1169
Reports for Ringling - Abbreviated and Delayed	1170
Considerations for Ringling - Abbreviated and Delayed	1171
Interactions for Ringling - Abbreviated and Delayed	1171
Security Violation Notification	1173
Detailed description of Security Violation Notification	1173
Security violation thresholds and notification	1174
Sequence of events	1174
Reporting	1174
SVN - halt buttons	1175
SVN Referral Call with Announcement	1175
Dealing with Security Violations	1175
Disabling a login ID	1176
Enabling a login ID	1176
Enabling remote access	1176
Disabling remote access	1176
Administering Security Violation Notification	1176
Prerequisites for administering Security Violation Notification	1177
Screens for administering Security Violation Notification	1177
Setting up Security Violation Notification	1177
Reports for Security Violation Notification	1182
Considerations for Security Violation Notification	1182
Interactions for Security Violation Notification	1183

Separation of Bearer and Signaling	1185
Detailed description of Separation of Bearer and Signaling	1185
Administering Separation of Bearer and Signaling	1185
Screens for administering Separation of Bearer and Signaling	1186
Reports for Separation of Bearer and Signaling.	1186
Considerations for Separation of Bearer and Signaling	1186
Interactions for Separation of Bearer and Signaling	1188
Overview	1188
Understanding potential interactions	1189
General system features	1190
Attendant	1191
Attendant features that do not work with SBS.	1191
Attendant features that work with SBS.	1191
Adjunct Switch Applications Interface (ASAI)	1192
Intuity AUDIX and Octel voice mail adjuncts	1192
Call Center	1193
Automatic Call Distribution (ACD)	1193
Best Service Routing	1194
Vectors	1194
Networking Related Interactions	1194
Networking features or capabilities that do not work	1194
Networking features or capabilities that work	1196
Service Observing	1199
Detailed description of Service Observing	1199
Listen and talk modes	1200
Restrictions	1200
Telephone displays	1200
Trunk calls	1201
Warning and conference tones	1201
Administering Service Observing	1202
Screens for administering Service Observing	1202
End-user procedures for Service Observing	1203
Reports for Service Observing	1203
Considerations for Service Observing	1203
Interactions for Service Observing	1204

Station Hunting	1207
Detailed description of Station Hunting	1207
Station Hunting and Call Coverage	1208
Removing a station from a Station Hunting chain	1209
Duplicating a station in a Station Hunt chain	1209
Administering Station Hunting	1209
Prerequisites for administering Station Hunting	1209
Screens for administering Station Hunting	1210
Assigning station hunting after coverage	1210
Assigning a hunt-to station to an extension	1212
Administering Station Hunting before Coverage	1213
Reports for Station Hunting	1214
Considerations for Station Hunting	1214
Interactions for Station Hunting	1214
Station Lock	1219
Detailed description of Station Lock	1219
Administering Station Lock	1220
Screens for administering Station Lock	1220
End-user procedures for Station Lock	1220
Activating or deactivating Station Lock from a remote telephone	1221
Reports for Station Lock	1221
Considerations for Station Lock	1221
Interactions for Station Lock	1222
Station Security Code	1223
Detailed description of Station Security Code	1223
Administering Station Security Code	1223
Screens for administering Station Security Code	1224
Creating a station security code	1224
Reports for Station Security Code	1225
Considerations for Station Security Code	1226
Interactions for Station Security Code	1226
Supporting TTY Callers	1227
Detailed description of Supporting TTY Callers	1227
Setting up announcements for TTY callers	1228
Setting up hunt groups for TTY callers	1229
Handling TTY calls with vectors	1229

Administering Supporting TTY Callers	1230
Screens for administering Supporting TTY Callers	1230
Reports for Supporting TTY Callers	1230
Considerations for Supporting TTY Callers	1231
Interactions for Supporting TTY Callers	1231
Telephone Display	1233
Detailed description of Telephone Display	1233
Button display modes	1234
Call-related information display	1235
Message retrieval	1238
Feature information displays	1238
Unicode "Native Name" support	1238
Enhanced telephone display	1239
Mapping enhanced display characters	1257
US English to Russian characters	1258
US English to Japanese characters	1259
US English to European characters	1261
US English to Ukrainian characters	1263
Administering Telephone Display	1263
Screens for administering Telephone Display	1264
Reports for Telephone Display	1264
Considerations for Telephone Display	1264
Interactions for Telephone Display	1265
Temporary Bridged Appearance	1267
Detailed description of Temporary Bridged Appearance	1267
Administering Temporary Bridged Appearance	1267
Screens for administering Temporary Bridged Appearance	1268
Reports for Temporary Bridged Appearance	1268
Considerations for Temporary Bridged Appearance	1268
Interactions for Temporary Bridged Appearance	1269
Tenant Partitioning	1271
Detailed description of Tenant Partitioning	1271
Partitioning tenants	1272
Access control	1273
Attendant services	1273
Network route selection	1274

Contents

Tenant Partitioning examples	1274
Multiple Music-on-Hold	1275
Administering Tenant Partitioning	1276
Prerequisites for administering Tenant Partitioning	1277
Screens for administering Tenant Partitioning	1277
Defining a tenant partition	1278
Assigning a tenant partition number to an access telephone	1281
Assigning a tenant partition number to an agent login ID	1282
Assigning a tenant partition number to an announcement	1283
Assigning a tenant partition number to an attendant	1284
Assigning a tenant partition number to a data module	1285
Assigning a tenant partition number to a hunt group	1286
Assigning a tenant partition number to a loudspeaker paging zone	1287
Assigning a tenant partition number to the remote access extension	1288
Assigning a tenant partition number to a user extension	1289
Assigning a tenant partition number to a terminating extension group	1290
Assigning a tenant partition number to a trunk group	1291
Assigning a tenant partition number to a vector directory number	1292
Assigning the sources of music for the tenant partitions	1292
Reports for Tenant Partitioning	1294
Considerations for Tenant Partitioning	1294
Interactions for Tenant Partitioning	1294
Terminal Translation Initialization	1299
Detailed description of Terminal Translation Initialization	1299
Attendant consoles	1299
Data modules	1300
Voice and data telephones	1300
ISDN-BRI telephones	1300
Analog queue warning ports and external alert ports	1301
Security	1301
Administering Terminal Translation Initialization	1301
Screens for administering Terminal Translation Initialization	1302
Reports for Terminal Translation Initialization	1302
Considerations for Terminal Translation Initialization	1302
Interactions for Terminal Translation Initialization	1303

Terminating Extension Group	1305
Detailed description of Terminating Extension Group	1305
Administering Terminating Extension Group	1305
Screens for administering Terminating Extension Group	1305
Reports for Terminating Extension Group	1306
Considerations for Terminating Extension Group	1306
Interactions for Terminating Extension Group	1306
Transfer	1309
Detailed description of Transfer	1309
Pull Transfer	1309
Abort Transfer	1310
Transfer Recall	1310
Transfer Upon Hangup	1310
Trunk-to-Trunk Transfer	1310
Outgoing Trunk to Outgoing Trunk Transfer	1311
Emergency Transfer	1311
Administering Transfer	1312
Screens for administering Transfer	1312
Reports for Transfer	1312
Considerations for Transfer	1312
Interactions for Transfer	1314
Trunk Flash	1317
Detailed description of Trunk Flash	1317
Administering Trunk Flash	1318
Screens for administering Trunk Flash	1318
End-user procedures for Trunk Flash	1318
Reports for Trunk Flash	1319
Considerations for Trunk Flash	1319
Interactions for Trunk Flash.	1320
Uniform Dial Plan	1321
Detailed description of Uniform Dial Plan	1321
Uniform Dial Plan example	1324
Administering Uniform Dial Plan	1327
Prerequisites for administering Uniform Dial Plan	1327
Screens for administering Uniform Dial Plan	1329

Contents

Administering the Uniform Dial Plan table	1330
Administering the Node Number Routing Table.	1332
Administering the AAR Digit Conversion Table	1333
Administering the ARS Digit Conversion Table	1335
Administering the AAR Digit Analysis Table	1337
Administering the ARS Digit Analysis Table	1340
Administering the extension number portability numbering plan	1344
Reports for Uniform Dial Plan	1344
Considerations for Uniform Dial Plan	1345
Interactions for Uniform Dial Plan	1346
Visually Impaired Attendant Service	1347
Detailed description of Visually Impaired Attendant Service	1347
Administering Visually Impaired Attendant Service	1348
Prerequisites for administering Visually Impaired Attendant Service	1348
Screens for administering Visually Impaired Attendant Service	1348
Reports for Visually Impaired Attendant Service	1349
Considerations for Visually Impaired Attendant Service	1349
Interactions for Visually Impaired Attendant Service	1349
Voice Message Retrieval	1351
Detailed description of Voice Message Retrieval	1351
Administering Voice Message Retrieval	1351
Screens for administering Voice Message Retrieval	1352
Reports for Voice Message Retrieval.	1352
Considerations for Voice Message Retrieval	1352
Interactions for Voice Message Retrieval	1353
Whisper Paging	1355
Detailed description of Whisper Paging	1355
Call redirection overrides	1355
Group answering environments	1356
Network restrictions	1356
Speakerphones	1356
Administering Whisper Paging	1356
Prerequisites for administering Whisper Paging	1356
Screens for administering Whisper Paging	1357
Making a whisper page	1357
Allowing users to answer whisper pages quickly	1357

Allowing users to block whisper pages	1358
End-user procedures for Whisper Paging	1358
Reports for Whisper Paging	1358
Considerations for Whisper Paging	1358
Interactions for Whisper Paging	1359
Wideband Switching	1361
Detailed description of Wideband Switching	1361
Channel allocation	1362
Typical uses	1362
Endpoint applications with signaling	1363
ISDN-PRI terminal adapters	1363
Line-side T1 or E1 ISDN-PRI facilities	1364
PRI endpoints	1364
Universal digital signal level 1 board	1364
Nonsignaling endpoint applications	1365
Data service unit/channel service unit	1365
Line-side T1 or E1 facility	1365
Wideband access endpoint	1365
Guidelines and examples	1366
High-speed video conferencing	1366
Data backup connection	1366
Scheduled batch processing	1366
Primary data connectivity	1367
Networking	1367
ISDN-PRI trunk groups and channel allocation	1367
Facility lists	1367
Direction of trunk hunting within facilities	1368
H11 channels	1368
H12 channels	1369
H0 channels	1370
N x DS0 channels	1370
Glare prevention and resolution	1371
Blocking prevention	1373
Administering Wideband Switching	1374
Screens for administering Wideband Switching	1374
Reports for Wideband Switching	1375
Considerations for Wideband Switching	1375
Interactions for Wideband Switching	1375

World Class Routing	1377
Detailed description of World Class Routing	1377
Overview of automatic routing	1378
Understanding ARS analysis	1379
Examples of digit conversion	1379
ARS dialing without a FAC	1380
Extensions	1382
AAR and ARS partitioning	1382
Administering World Class Routing	1383
Prerequisites for administering World Class Routing	1384
Screens for administering World Class Routing	1384
Using COR and FRL to manage calling privileges	1385
Assigning a FAC for ARS	1388
Setting up a location ARS FAC	1389
Prerequisites	1389
Displaying ARS analysis information	1391
Administering the route pattern	1392
Defining call types	1402
Defining operator-assisted calls	1402
Defining interexchange carrier calls	1403
Using restricted area codes and prefixes	1404
Using wildcards	1406
Defining local information calls	1406
Modifying call routing	1407
Adding a new area code	1408
Adding a new prefix	1409
Using ARS to restrict outgoing calls	1410
Defining ARS partitions	1411
Prerequisites	1411
Setting up partition groups	1412
Assigning a telephone to a partition group	1414
Setting up Time of Day Routing	1416
Prerequisites	1416
Reports for World Class Routing	1419
Considerations for World Class Routing	1419
Interactions for World Class Routing	1419
Index	1421

About this document

Overview

The *Feature Description and Implementation for Avaya Communication Manager* document is a new document with the April 2005 release of Avaya Communication Manager. The document describes the features that can be administered with the April 2005 release of Avaya Communication Manager.

You might also want to see the *Highlights of Avaya Communication Manager* document to see what is new in a particular release.

Intended audience

This document is a useful reference for a large audience. However, this document is intended for the following audience:

- Communication Manager administrators and technical managers
- Users who want information about how to administer or use specific features
- Avaya personnel who plan, design, configure, sell, or support Avaya's converged solutions

How to use this book

Use this document both as a guide to administer and troubleshoot features, and as a reference document. If you are interested in information about a particular feature, use the index or table of contents to locate the page number where the document describes the information. To help you more easily locate a feature, this document presents the features in alphabetical order.

Organization

This document uses a consistent framework to describe each feature. This framework includes the following sections:

- [Summary](#)
- [Detail Description](#)
- [Administering](#)
- [End-User Procedures](#)
- [Reports](#)
- [Considerations](#)
- [Interactions](#)
- [Troubleshooting](#)

Summary

The Summary section provides a high-level description of the feature. For simple features, the Summary might be only one sentence. For more complex features, the Summary might be one or two paragraphs.

Detail Description

The Detail Description section provides detailed information about the feature. Some features have more than one function. This document refers to these functions as capabilities. The Detailed Description lists these capabilities and provides a brief description of each of the capabilities.

Although the Detailed Description section provides a complete description of the feature, the section does not include procedural or administration information. The procedural and administration information is in the Administering section.

Administering

The Administering section provides the information that you need to administer and implement the feature. This section includes the following information:

Any prerequisites that you must complete before you administer the feature

- The screens that you use to administer the feature
- Complete administration procedures for the feature

End-User Procedures

The End-User Procedures section describes any procedures that might exist for a user to activate, deactivate, or otherwise modify administration of the feature, or a capability of the feature.

If a feature does not have end-user procedures, the feature description does not contain this section.

Reports

The Reports section lists the reports that provide information about the feature.

Considerations

The Considerations section provides any useful miscellaneous information about the operation of the feature.

If a feature does not have considerations, the feature description does not contain this section.

Interactions

The Interactions section describes how the feature interacts with other features. For example, certain features must always be used in conjunction with other features. Some features cannot coexist with other features. In some cases, the normal operation of a certain feature modifies the normal operation of another feature. Some features also enhance each other, and when combined, provide improved service to the user. The features are listed in alphabetical order.

Troubleshooting

The Troubleshooting section provides a table that lists the following information:

- Known or common problems that users might experience with the operation of the feature
- Possible causes of the problems
- Actions that an administrator can take to solve the problems

If a feature does not have troubleshooting tips, the feature description does not contain this section.

Related Sources

The following documents provide additional information:

Administration for Network Connectivity for Avaya Communication Manager, 555-233-504

Administrator's Guide for Avaya Communication Manager, 555-233-506

ATM Installation, Upgrades, and Administration using Avaya Communication Manager, 555-233-124

Avaya Application Solutions - IP Telephony Deployment Guide, 555-245-600

Avaya Communication Manager Basic Administration Quick Reference, 03-300363

Avaya Communication Manager Advanced Administration Quick Reference, 03-300364

Avaya Communication Manager Basic Diagnostics Quick Reference, 03-300365

Avaya Remote Feature Activation (RFA) Users Guide, 03-300149

Avaya Enterprise Survivable Servers (ESS) Users Guide, 03-300428

Avaya Toll Fraud and Security Handbook, 555-025-600

Converged Communications Server Installation and Administration, 555-245-705

DEFINITY® Communications Systems Generic 2.2 and Generic 3 Version 2 DS1/CEPT1/ISDN PRI Reference, 555-025-107

DEFINITY® Enterprise Communications Server Release 1.1 Getting Started with the Avaya R300 Remote Office Communicator, 555-233-769

Hardware Guide for Avaya Communication Manager, 555-245-207

Highlights of Avaya Communication Manager, 555-245-704

Installation, Upgrades and Additions for Avaya CMC1 Media Gateways, 555-233-118

Maintenance Alarms for Avaya Communication Manager 2.1, Media Gateways and Servers, 03-300190

Maintenance for Avaya DEFINITY® Server R, 555-233-117

Maintenance for Avaya MultiVantage and DEFINITY Server CSI, 555-233-119

Maintenance for Avaya DEFINITY® Server SI, 555-233-123

Maintenance Commands for Avaya Communication Manager 2.1, Media Gateways and Servers, 03-300191

Maintenance Procedures for Avaya Communication Manager 2.1, Media Gateways and Servers, 03-300192

Overview for Avaya Communication Manager, 555-233-767

System Capacities Table for Avaya Communication Manager on Avaya Media Servers, 555-245-601

Upgrades and Additions for Avaya DEFINITY® Server R, 555-233-115

Reports for Avaya Communication Manager, 555-233-505

For information on Fax, Modem, Clear Channel over IP, see *Administration for Network Connectivity for Avaya Communication Manager*, 555-233-504, Issue 10, April 2005

For information on IGAR, see *Administration for Network Connectivity for Avaya Communication Manager*, 555-233-504, Issue 10, April 2005

For information on H.248 Gateways, see *Administration for Network Connectivity for Avaya Communication Manager*, 555-233-504, Issue 10, April 2005

For documents not listed here, go to <http://www.avaya.com>. Select **Support** and then **Product Documentation**.

Conventions

Become familiar with the following terms and conventions. They help you use this book with Communication Manager.

- A "screen" is the display of fields and prompts that appear on a terminal monitor.
- We use the term "telephone" in this book. Other Avaya books might refer to telephones as voice terminals, stations, or endpoints.
- Keys and buttons are printed in a bold font: **Key**.
- Titles of screens are printed in a bold font: **Screen Name**.
- Names of fields are printed in a bold font: **Field Name**.
- Text (other than commands) that you need to type into a field are printed in a bold font: **text**.
- Commands are printed in a bold constant width font: **command**.
- Variables are printed in a bold constant width italic font: ***variable***.
- We show complete commands in this book, but you can always use an abbreviated version of the command. For example, instead of typing **list configuration station**, you can type **list config sta**.
- If you need help constructing a command or completing a field, remember to use **Help**.
 - When you press **Help** at any point on the command line, the system displays a list of available commands.
 - When you press **Help** with your cursor in a field on a screen, the system displays a list of valid entries for that field.
- Messages that the system displays are printed in a constant width font: **system message**.
- To move to a certain field on a screen, you can use the **Tab** key, directional arrows, or the **Enter** key on your keyboard.

- If you use terminal emulation software, you need to determine what keys correspond to **Enter**, **Return**, **Cancel**, **Help**, and **Next Page** keys.
- We show commands and screens from the newest release of Communication Manager and see the most current books. Substitute the appropriate commands for your system and see the manuals you have available.
- The status line or message line can be found near the bottom of your monitor. This is where the system displays messages for you. Check the message line to see how the system responds to your input. Write down the message if you need to call the helpline.
- When a procedure requires you to press **Enter** to save your changes, the screen clears. The cursor returns to the command prompt. The message line shows "**command successfully completed**" to indicate that the system accepted your changes.

Admonishments

Admonishments that might appear in this book have the following meanings:

Note:

A note calls attention to neutral information or positive information that supplements the main text. A note also calls attention to valuable information that is independent of the main text.



Important:

An important note calls attention to situations that can cause serious inconvenience.



Tip:

A tip calls attention to information that helps you apply the techniques and the procedures that the text describes. A tip can include keyboard shortcuts, or alternative methods that might not be obvious.



CAUTION:

A caution statement calls attention to situations that can result in harm to software, loss of data, or an interruption of service.



WARNING:

A warning statement calls attention to situations that can result in harm to hardware or equipment.



DANGER:

A danger statement calls attention to situations that can result in physical injury to yourself or to other people.

**SECURITY ALERT:**

A security alert calls attention to situations that can increase the potential for toll fraud or other unauthorized use of your telecommunications system.

**ELECTROSTATIC ALERT:**

An electrostatic alert calls attention to situations that can result in damage to electronic components from electrostatic discharge (ESD).

Trademarks

All trademarks identified by ® or ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners.

How to obtain Avaya books on the Web

If you have internet access, you can view and download the latest version of the *Feature Description and Implementation for Avaya Communication Manager*. To view this book, you must have a copy of Adobe Acrobat or Acrobat Reader.

Note:

If you do not have Acrobat Reader, you can get a free copy at <http://www.adobe.com>.

To get the latest version of this book:

1. Go to the Avaya Web site at <http://www.avaya.com/>.
2. In the **Go To:** column, click the **Product Documentation** link.
3. In the **Search Support** text box on the **Technical Database/Product Documentation** screen, type **555-245-205** (the document number). Click **Go**.
4. In the list that appears, select the version of the document that you want. Click the title of the book.

How to order more copies

Call: Avaya Publications Center
Voice: 1-800-457-1235 or 1-207-866-6701
Fax: 1-800-457-1764 or 1-207-626-7269

Write: Globalware Solutions
Attn: Avaya Account Management
200 Ward Hill Ave
Haverhill, MA 01835 USA

E-mail: totalware@gwsmail.com

Order: Document No. 555-245-205, Issue 3, June 2005

We can put your name on an order list so you will automatically receive updated versions of this book. For more information and to receive future issues of this book, contact the Avaya Publications Center.

How to comment on this book

Avaya always welcomes your feedback. Contact us through:

- e-mail: document@avaya.com
- fax: 1-303-538-1741
- Your Avaya representative

Mention this document name and number, *Feature Description and Implementation for Avaya Communication Manager*, 555-245-205.

Your comments are of great value, and help us to improve our documentation.

How to get help

If you need additional help, go to the Avaya support Web site at <http://www.avaya.com/support/>.

If you are:

- Within the United States, click the **Escalation Contacts** link. Then click the appropriate link for the type of support you need.
- Outside the United States, click the **Escalation Contacts** link. Then click the **International Services** link, which includes telephone numbers for the international Centers of Excellence.

You can also access the following services in the USA. You might need to purchase an extended service agreement to use some of these services. Contact your Avaya representative for more information.

Avaya Communication Manager Helpline (for help with feature administration and system applications)	1 800 225 7585
Avaya National Customer Care Center Support Line (for help with maintenance and repair)	1 800 242 2121
Avaya Toll Fraud Intervention	1 800 643 2353
Avaya Corporate Security	1 877 993 8442

Abbreviated Dialing

Use the Abbreviated Dialing (AD) feature to reduce the number of digits that you must dial to place a call. Instead of dialing the entire number, you dial a short code to access the number. The system then dials the stored number automatically. You can also assign abbreviated dialing buttons to telephones, so that you press a single button to dial frequently called numbers.

Abbreviated Dialing is sometimes called speed dialing.

You can store telephone numbers in four different types of abbreviated dialing lists:

- Personal
- Group
- System
- Enhanced

You can also assign privileged numbers to abbreviated dialing lists. Users can use privileged numbers to place calls to numbers that might otherwise be restricted.

Privileged group-number, system-number, and enhanced-number lists provide access to numbers that usually might be restricted.

The switch type and the version determine which lists are available and how many entries you can have on each list. You can assign up to three AD lists to each user or extension. You can assign any combination of a system list, an enhanced list, and as many as three personal lists or three group lists. The list can also have three group lists. Each entry on an abbreviated dialing list can have as many as 24 characters.

Abbreviated Dialing labeling

Users can administer labels for the AD buttons that appear as softkeys on the following telephones:

- 2420 DCP
- 4600 series
- 6400 series
- 8400 series

These personalized labels appear on the menu display of these telephones.

Abbreviated Dialing on-hook programming

With on-hook programming, users can access the programming mode of the telephone without going off-hook. On-hook programming works with the following telephones:

- 2420 DCP
- 4600 series
- 6400 series
- 8400 series, with enabled speakers

With on-hook programming, signaling changes from dual-tone multifrequency (DTMF) to the S-channel. This change allows a longer 60-second timeout period. For nondisplay telephones, signaling remains DTMF, and the timeout period is 10-seconds.

Detailed description of Abbreviated Dialing

This section provides a detailed description of the Abbreviated Dialing feature.

Abbreviated Dialing supports the following types of lists:

- **Personal lists**

Use personal lists for users who need their own set of stored numbers. You determine which users have access to a personal list and the size of each list. Either you or the user can assign telephone numbers to personal lists. A personal list is created automatically when you assign the list to an individual telephone. Each user can have as many as three personal lists. You cannot assign a personal list to the attendant.

- **Group lists**

You can define group lists for groups or departments where members of the group must frequently dial the same numbers. You determine which users have access to group lists. Each user can have access to three group lists. You can program the list or you can designate a user in each group to program the list. Specify this designated user on the **Abbreviated Dialing Group List** screen.

- **System lists**

You can define one system list for the entire organization. Most administrators assign this list to each telephone, and allow everyone in the organization to use the list. If you allow everyone to use the system list, include only numbers that anyone in your organization has permission to call. For example, you might want to add an emergency telephone number or telephone numbers for other office locations to this list.

The system list can contain up to 100 entries, and can be changed by a system administrator. An administrator can also customize the button labels displayed on Avaya 2420 and Avaya 4620 telephone sets for these system-list entries.

- Enhanced lists

You can use enhanced lists for telephone users, data-terminal users, and attendants who need more list entries than the number of entries allowed in group-number and system-number lists. Two enhanced-number lists are allowed per system, in addition to the system-number list. The enhanced list can contain any number or dial-access code. You administer the enhanced lists and determine which users can access the lists.

Administering Abbreviated Dialing

The following steps are part of the administration process for the Abbreviated Dialing feature:

- [Adding Abbreviated Dialing lists](#)
- [Assigning telephones for group lists](#)

This section describes:

- Any prerequisites for administering the Abbreviated Dialing feature
- The screens that you use to administer the Abbreviated Dialing feature
- Complete administration procedures for the Abbreviated Dialing feature

Prerequisites for Abbreviated Dialing

You must complete the following actions before you can administer the Abbreviated Dialing feature:

- View the **Optional Features** screen, and ensure that the **Abbreviated Dialing Enhanced List** field is set to y. If the **Abbreviated Dialing Enhanced List** field is set to n, your system is not enabled for the Abbreviated Dialing feature.

Contact your Avaya representative before you continue with these procedures.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

For a complete description of the **Optional Features** screens, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Abbreviated Dialing

Screen name	Purpose	Fields
Optional Features	Ensure that the Abbreviated Dialing feature is enabled.	Abbreviated Dialing Enhanced List
Abbreviated Dialing List	Add Abbreviated Dialing lists.	• Size • Program Ext
Station	Define extensions for group lists.	Group

Adding Abbreviated Dialing lists

To add an Abbreviated Dialing group list:

1. Type **add abbreviated-dialing group next**. Press **Enter**.

The system displays the **Abbreviated Dialing List** screen ([Figure 1: Abbreviated Dialing List screen](#) on page 68). In this example, the next available group list is group 3.

Figure 1: Abbreviated Dialing List screen

add abbreviated-dialing group next		Page 1 of 1
Abbreviated Dialing List		
Group List: 3		Group Name: _____
Size (multiple of 5): ____		Program Ext: _____ Privileged? n
DIAL CODE		
01:	_____	
02:	_____	
03:	_____	
04:	_____	
05:	_____	

2. In the **Group Name** field, type a name for this list.
3. In the **Size** field, type a number in multiples of 5. This number defines the number of entries on the dialing list.

For example, if you want to store eight telephone numbers in the list, type **10** in the **Size** field.

4. In the **Program Ext** field, type the extension.

5. Type the telephone numbers that you want to store. Type one number for each dial code.
Each telephone number can be up to 24 digits long.
6. Press **Enter** to save your changes.

You can display the new abbreviated dialing list to ensure that the information is correct. You can also print a copy of the list.

Assigning telephones for group lists

To assign a telephone access to a group list:

1. Type **change station *n***, where *n* is the extension that you want to assign to the group list. Press **Enter**.
The system displays the **Station** screen.
2. Click **Next** until you see the **Abbreviated Dialing** area ([Figure 2: Station screen](#) on page 69).

Figure 2: Station screen

change station 9876543		Page 3 of 3
Station		
SITE DATA Room: _____ Jack: _____ Cable: _____ Floor: _____ Building: _____ Headset? n Speaker? n Mounting? d Cord Length: 0 Set Color: _____		
ABBREVIATED DIALING List1: group 3 List2: _____ List3: _____		
BUTTON ASSIGNMENTS 1: call-appr 2: call-appr 3: call-appr 4: _____ 5: _____ 6: _____		

3. Type **group** in any of the three **List** fields. Press **Enter**.
The system displays a blank list number field.
4. Type **3** in the list number field.
When you assign a group list or a personal list, you must also specify the personal list number or the group list number.
5. Press **Enter** to save your changes.

To use this list, the user at extension 987-6543 dials the Feature Access Code (FAC) for the list and the dial code for the number that the user wants to dial. You can also assign an abbreviated dialing button to this extension. The user can then press one button to dial a specific number on one of the three assigned abbreviated lists of the user.

End-user procedures for Abbreviated Dialing

End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Abbreviated Dialing:

- [Programming the Abbreviated Dialing feature](#)

Programming the Abbreviated Dialing feature

These instructions apply to most Avaya telephones with display screens, and work with DEFINITY® software release 6.3 or later.

1. On your telephone, press the button labeled **Prog** to enter programming mode. If your telephone does not have the **Prog** softkey, press the **Menu** softkey and navigate to the **Prog** option.
The telephone goes off hook and enters the speaker phone mode.
2. Select the softkey/feature button you want to program until you see the label of the softkey you want to display. You will see the message **Change number? Yes = 1 No = 2**.
3. Pick the option you want. You will see a message **Enter number:** on the display. Enter the number you want that button to call.
4. Press the # key to save your changes.
5. You will see **Enter label** on the display. Use the dial pad to enter the label you want. The label can be up to five characters in length.
6. To exit from the **Prog** mode, hang up your telephone. Pressing the **Exit** button does not exit you from programming mode.

Note:

If the number you are entering for an Abbreviated Dialing button is an outside number, you must include 9 or any other applicable trunk code. Numbers programmed on softkeys can be up to 24 digits in length.

Reports for Abbreviated Dialing

The following reports provide information about the Abbreviated Dialing feature:

- None

Considerations for Abbreviated Dialing

This section provides information about how the Abbreviated Dialing feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Abbreviated Dialing feature under all conditions.

- You cannot remove a telephone or attendant if it is designated as the extension that is allowed to program a group-number list.
- When using an AD button to access a messaging system, the user's login and password should not be assigned to the button. The system ignores button entries after the messaging access number.
- You can use an abbreviated dialing list at any time during incoming or outgoing calls.

Interactions for Abbreviated Dialing

This section provides information about how the Abbreviated Dialing feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Abbreviated Dialing in any feature configuration.

- Last Number Dialed

The Last Number Dialed feature redials the same number a user just dialed. This happens even if the user accessed an abbreviated dialing list for the previous call. However, if the last dialed string includes any special characters, these characters are ignored by last-number-dialed call. Examples of special characters might be indefinite wait, mark, pause, suppress, wait and so on.

If the previously-called number was in an AD privileged list, and if the user is not usually allowed to dial the number because of his or her class of restriction, they cannot redial the number using Last Number Dialed. To redial the number, the user must again access the AD privileged list.

Troubleshooting Abbreviated Dialing

Problem	Possible causes	Action
A user cannot access a abbreviated dial list.	The specific list might not be assigned to the user's telephone.	- Type display station <i>n</i>, where <i>n</i> is the extension of the user. Press Enter. - Review the current settings of the List1, List2, and List3 fields to determine if the list is assigned to the telephone of the user.
	If the user attempted to use a feature access code to access the list, they may have dialed the incorrect feature access code.	- Type display feature-access-codes. Press Enter - Verify that the user is dialing the appropriate feature access code.
	If the user attempted to press a feature button, they might have pressed the incorrect feature button.	- Type display station <i>n</i>, where <i>n</i> is the extension of the user. Press Enter. - Review the current feature button assignments to determine if the user pressed the assigned button.
	If the user attempted to press the correct feature button, the button may not be set up correctly.	- Type display station <i>n</i>, where <i>n</i> is the extension of the user. Press Enter. - Review the current feature button assignments to ensure if the list number and dial code are correct.

Problem	Possible causes	Action
A user states that an abbreviated dialing list dials the wrong number.	● The user is using the wrong dial code. ● The dial code is defined incorrectly. ● ARS digit conversion was not administered correctly.	● Ask the user the number that was dialed or the button that he or she pressed to determine which list and dial code the user attempted to call. ● Access the dialing list and verify that the number stored for the specific dial code corresponds to the number the user wanted to dial. ● For example, to access a group list, type display abbreviated-dialing group n, where n is a group list number. Press Enter. ● If the user dialed the wrong code, give them the correct code. ● If the dial code is wrong, press Cancel and use the appropriate change command to access the abbreviated dialing list again. Type the number. Press Enter.

Access Security Gateway

Use the Access Security Gateway (ASG) feature to require the use of an ASG Key to log in to the system, and thus prevent unauthorized access. ASG is an authentication interface that secures the system administration and maintenance ports, as well as the logins on the system. ASG uses a challenge-and-response protocol to confirm the validity of a user. This process reduces the opportunity for unauthorized access.

Detailed description of Access Security Gateway

Use the Access Security Gateway (ASG) feature to authenticate authorized users as users attempt to access Communication Manager. Successful authentication is accomplished when the ASG feature communicates with a compatible key. The challenge-and-response negotiation starts once the system establishes an RS-232 session. The user must type a valid system login ID. Communication Manager then issues a challenge based on the login ID that the user types. The user must provide the expected response.

The core of this transaction is a secret key, which is information that both the lock (ASG) and the key possess. The relevance of the authentication token that is used to perform the challenge-and-response negotiation is limited to the current session.

The supported key consists of a hand-held encryption-generating device called the ASG key. The key is preprogrammed with the appropriate secret key to communicate with corresponding ASG-protected login IDs on Communication Manager.

Administering Access Security Gateway

The following steps are part of the administration process for the Access Security Gateway feature:

- [Setting up Access Security Gateway](#)
- [Disabling Access Security Gateway](#)
- [Restarting Access Security Gateway](#)
- [Modifying Access Security Gateway for a lost key](#)
- [Monitoring the Access Security Gateway history log](#)

This section describes:

- Any prerequisites for administering the Access Security Gateway feature
- The screens that are required to administer the Access Security Gateway feature
- Complete administration procedures for the Access Security Gateway feature

Prerequisites for administering Access Security Gateway

You must complete the following actions before you can administer the Access Security Gateway (ASG) feature:

- You must have a *superuser* login ID.
- View the **Optional Features** screen, and ensure that the **Access Security Gateway** field is set to **y**. If the **Access Security Gateway** field is set to **n**, your system is not enabled for the Access Security Gateway feature. Contact your Avaya representative before you continue with this procedure.

To access the **Optional Features** screen, type **change system-parameters customer-options**. Press **Enter**.

Screens for administering Access Security Gateway

Screen Name	Purpose	Fields
Optional Features	Ensure that the Access Security Gateway (ASG) feature is enabled.	Access Security Gateway
Login Administration	Set up the ASG secret key.	• System Generated Secret Key or Secret Key • Other optional fields as desired
Security-Related System Parameters	Set security-related parameter preferences.	All
Access Security Gateway Session History	View events that are related to ASG session establishment and session rejection.	All

Setting up Access Security Gateway

To set up Access Security Gateway:

1. Type **change login *n***, where *n* is the alphanumeric *superuser* login ID. Press **Enter**.

The system displays the **Login Administration** screen ([Figure 3: Login Administration screen](#) on page 77).

Figure 3: Login Administration screen

```

change login 1234

                                LOGIN ADMINISTRATION

                                Password of Login Making Change:

                                LOGIN BEING ADMINISTERED
                                    Login's Name:xxxxxxx
                                    Login Type:
                                    Service Level:
                                Disable Following a Security Violation?

                                                                 Access to INADS Port? _

                                LOGIN'S PASSWORD INFORMATION
                                    Login's Password:
                                    Reenter Login's Password:
                                Password Aging Cycle Length (Days):

                                LOGOFF NOTIFICATION
                                    Facility Test Call Notification? y      Acknowledgment Required? y
                                    Remote Access Notification? y          Acknowledgment Required? y

ACCESS SECURITY GATEWAY PARAMETERS
Access Security Gateway? n
  
```

2. In the **Password of Login Making Change** field, type your password.
3. In the **Access Security Gateway** field, type **y**.

When you type **y**, the system automatically displays the **Access Security Gateway Login Administration** screen (page 2).

4. Perform one of the following actions:
 - In the **System Generated Secret Key** field, type **y** for a system-generated secret key.
 - In the **Secret Key** field, type your secret key.
5. Complete any of the remaining, optional fields on page 2 that you want to administer.
6. Press **Enter** to save your changes.

7. Type **change system-parameters security**. Press **Enter**.

The system displays the **Security-Related System Parameters** screen ([Figure 4: Security-Related System Parameters screen](#) on page 78).

Figure 4: Security-Related System Parameters screen

change system-parameters security
Page 2 of 2

SECURITY-RELATED SYSTEM PARAMETERS

SECURITY VIOLATION NOTIFICATION PARAMETERS

SVN Station Security Code Violation Notification Enabled? y
 Originating Extension: _____ Referral Destination: _____
 _____ Station Security Code Threshold: 10 Time Interval: 0:03
 Announcement Extension: _____

STATION SECURITY CODE VERIFICATION PARAMETERS

Minimum Station Security Code Length: 4
 Security Code for Terminal Self Administration Required? y

ACCESS SECURITY GATEWAY PARAMETERS

SYSAM-LCL? n SYSAM-RMT? y
 MAINT? n SYS-PORT? n

8. In the **Access Security Gateway Parameters** section, determine which of the listed port type fields to set to **y**. In this example, the **SYSAM-RMT** field is set to **y**.

Note:

Avaya recommends that you protect the SYSAM-RMT port since the SYSAM-RMT port is a dial-up port, and therefore more susceptible to compromise.

9. Press **Enter** to save your changes.

Disabling Access Security Gateway

To temporarily disable ASG:

1. Type **change login n**, where **n** is the alphanumeric login ID.

The system displays the **Login Administration** screen ([Figure 3: Login Administration screen](#) on page 77).

2. Click **Next** until you see the **Access Security Gateway Login Administration** screen.

3. On the **Access Security Gateway Login Administration** screen, set the **Blocked** field to **y**.

When you set the **Blocked** field to **y**, you do not remove the login from the system. You temporarily disable the login.

4. Press **Enter** to save your changes.

Note:

A superuser can disable and restart access for another superuser.

Restarting Access Security Gateway

To restart a temporarily disabled ASG access for login:

1. Type **change login n**, where **n** is the alphanumeric login ID. Press **Enter**.
The system displays the **Login Administration** screen ([Figure 3: Login Administration screen](#) on page 77).
2. Click **Next** until you see the **Access Security Gateway Login Administration** screen.
3. On the **Access Security Gateway Login Administration** page, set the **Blocked** field to **n**.
4. Press **Enter** to save your changes.

Modifying Access Security Gateway for a lost key

To modify ASG if the user loses an ASG Key:

1. Modify any logins that are associated with the lost Access Security Gateway Key. See the *Access Security Gateway (ASG) Key Release 1.0 User's Guide* for more information on how to change your Personal Identification Number (PIN).
2. If the login is no longer valid, type **remove login n**, where **n** is the alphanumeric login ID, to remove the invalid login from the system. Press **Enter**.
3. To keep the same login, change the secret key that is associated with the login to a new value.
4. Using the new secret key value, rekey the devices that generate responses and interact with the login.

Monitoring the Access Security Gateway history log

The Access Security Gateway Session History Log records all events that are associated with ASG session establishment and rejection, except when the **Access to INADS Port** field on the **Login Administration** screen is set to **y**. You must be a superuser to use the **list asg-history** command.

To access the log:

1. Type **list asg-history**. Press **Enter**.

The system displays the **Access Security Gateway** screen ([Figure 5: Access Security Gateway Session History screen](#) on page 80).

Figure 5: Access Security Gateway Session History screen

ACCESS SECURITY GATEWAY SESSION HISTORY					
Date	Time	Port	Login	Status	
01/06	12:45	SYSAM-RMT	csand	AUTHENTICATED	
01/05	01:32	SYSAM-LCL	jsmith	REJECT-BLOCK	
01/05	12:33	SYSAM-RMT	ajones	REJECT-EXPIRE	
01/03	15:10	SYSAM-RMT	swrigh	REJECT-PASSWORD	
01/02	08:32	SYSAM-LCL	jsmith	REJECT-INVALID	
01/02	07:45	SYSAM-RMT	mehrda	REJECT-RESPONSE	

This screen displays the following fields:

- **Date.** Contains the date of the session establishment or rejection in the mm/dd format, where
mm = month and dd = day.
- **Time.** Contains the time of the session establishment or rejection in the hh/mm format, where
hh = hour and mm = minute.
- **Port.** Contains the mnemonic that is associated with the port on which the session was established or rejected. The port mnemonics for G3r systems are:
 - SYSAM-LCL
 - SYSAM-RMT
 - MAINT
 - SYS-PORT

The port mnemonics for G3si systems are:

- MRG1
- INADS
- NET
- EPN
- **Login.** Contains the alphanumeric login string that the user entered and that is associated with the session establishment or rejection.
- **Status.** Contains a code that indicates whether the session was established or rejected and, if rejected, the reason for the rejection.

Reports for Access Security Gateway

The following reports provide information about the Access Security Gateway feature:

- None

Considerations for Access Security Gateway

This section provides information about how the Access Security Gateway feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Access Security Gateway feature under all conditions.

- None

Interactions for Access Security Gateway

This section provides information about how the Access Security Gateway feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of the Access Security Gateway feature in any feature configuration.

- Customer Access to Initialization and Administration System (INADS) Port

If access to the INADS port is disabled on a system-wide basis, administering access to the SYSAM-RMT or INADS port through ASG does not override the INADS port restriction. Administration does not prohibit assignment of ASG to the SYSAM-RMT or INADS port. However, in a configuration where this method of access is blocked, you are denied access to the system through the SYSAM-RMT or INADS port, even if you use a valid ASG login ID.

If access to the INADS port is disabled for login, administering access to the SYSAM-RMT or INADS port by way of ASG does not override the INADS port restriction.

- Login Administration

ASG does not modify the standard user interface for Communication Manager login administration. Also, the standard Communication Manager login user interface is maintained in cases where ASG parameters are not administered for the login or the port.

- Security Violation Notification (SVN)

ASG does not support an interface to SVN. Session rejection events do not appear in the monitor security violations login report. Referral calls are not spawned if the number of rejected ASG sessions exceeds the threshold or the time interval criteria that SVN imposes.

- Security Measurements

Events that are related to ASG session establishment or rejection do not increment the Successful Logins, Invalid Attempts, Invalid IDs, Forced Disconnects, Login Security Violations, or Trivial Attempts counters that are maintained for the list measurements security-violations detail report. Additionally, ASG-related data is not included in login-specific information that is maintained by the measurements security-violations summary report.

Administered Connections

Use the Administered Connections (AC) feature to establish an end-to-end connection between two access or data endpoints. Avaya Communication Manager automatically establishes the connection based on the attributes that you administer. The Administered Connections feature provides the following abilities:

- Support of both permanent and scheduled connections
- Autorestitution (preserving the active session) for connections that are routed over Software Defined Data Network (SDDN) trunks
- An administrable retry interval from 1 to 60 minutes for each AC
- An administrable alarm strategy for each AC
- An establish, retry, autorestitution order that is based on administered priority

Detailed description of Administered Connections

Use the Administered Connections (AC) feature to administer virtual private-line connectivity over the AT&T Switched Network. Access is over an ISDN trunk group for which the **Service Type** field on the **ISDN Trunk Group** screen is set to **SDDN** (Software Defined Data Network). The system uses the **Destination** field on the **Administered Connection** screen to route calls when AC is active, based on associated authorized time-of-day fields.

You can establish an AC between:

- Two endpoints on the same server
- Two endpoints in the same private network, but on different servers
- One endpoint on the controlling server, and another endpoint off the private network

In all configurations, administer the AC on the server that has the originating endpoint. For an AC in a private network, if the two endpoints are on two different servers, Automatic Alternate Routing (AAR) through ISDN, DS1, or analog tie trunks and intermediate servers are usually used to route the connection. If required, you can also use Automatic Route Selection (ARS) and Generalized Route Selection (GRS) through the public network. The system routes the call over associated ISDN trunks. When the far-end answers, a connection occurs between the far-end and the near-end extension that is administered in the **Originator** field on the **Administered Connection** screen.

Access endpoints

Access endpoints are nonsignaling trunk ports. Access endpoints neither generate signaling to the far-end of the trunk nor respond to signaling from the far-end. You designate an access endpoint as the originating endpoint or the destination endpoint in an AC.

Typical applications

The following examples are typical AC applications:

- A local data endpoint that connects to a local or a remote access endpoint, such as:
 - A modular processor data model (MPDM) ACCUNET digital service that connects to SDDN over an ISDN trunk-group DS1 port; an MPDM
 - An MPDM ACCUNET digital service that connects to an ACCUNET Switched 56 Service over a DS1 port
- A local-access endpoint that connects to a local or a remote access endpoint, such as a DSO cross-connect and a 4-wire leased-line modem to a 4-wire modem connection over an analog tie trunk
- A local data endpoint that connects to a local or a remote data endpoint such as a connection between two 3270 data modules

Establishing Administered Connections

The originating server attempts to establish an AC only if one of the following conditions exist:

- AC is active.
- AC is due to be active. That is, the AC is a permanent AC, or it is the administered time-of-day for a scheduled AC.
- The originating endpoint is in the in-service or idle state.

If the originating endpoint is not in service or is idle, no activity takes place for the AC until the endpoint transitions to the necessary state. The originating server uses the destination address to route the call to the desired endpoint. When the server establishes two or more ACs at the same time, the server arranges the connections in order of priority.

AC attempts can fail because:

- Resources are unavailable to route to the destination.
- A required conversion resource is unavailable.
- Access is denied by Class of Restriction (COR), facilities restriction level (FRL), Bearer Capability Class (BCC), or an attempt is made to route voice-band data over SDDN trunks in the public switched network.

- The destination address is incorrect.
- The destination endpoint is busy.
- Other network or signaling failures occur.

In the event of a failure, an error is entered into the error log. This error generates an alarm, if your alarming strategy warrants an alarm. You can display AC failures with the **display status-administered connection** command. The originating server continues to try to establish an AC as long as an AC is scheduled to be active, unless the attempt fails because of an administrative error (for example, a wrong number) or a service-blocking condition, such as outgoing calls are barred).

- The administered retry interval of 1 to 60 minutes for each AC determines the frequency with which failed attempts are retried.
- Retries are made after the retry interval elapses, regardless of the restorable attribute of the AC.
- ACs are retried in priority order.
- When you change the time of day on the server, an attempt is made to establish all ACs in the waiting-for-retry state.

Dropping Administered Connections

An AC remains active until one of the following scenarios occurs:

- The AC is changed, disabled, or removed.
- The time-of-day requirements of a scheduled AC are no longer satisfied.
- One of the endpoints drops the connection. An endpoint might drop a connection because of user action (in the case of a data endpoint), maintenance activity that results from an endpoint failure, busying out of the endpoint, or handshake failure. If the endpoints are incompatible, the connection is successful until handshake failure occurs.

Note:

An AC between access endpoints remains connected even if the attached access equipment fails to handshake.

- An interruption, such as a facility failure, occurs between the endpoints. If an AC drops because the AC was disabled, removed, or is no longer due to be active, no action is taken. If an AC drops because of changed AC attributes, the system makes an immediate attempt to establish the connection with the changed attributes, if the AC is still scheduled to be active. Existing entries in the error or alarm log are resolved if the entries no longer apply. If an AC involves at least one data endpoint, and handshake failure causes the connection to be dropped, no action is taken for that AC until you run the **change administered-connection** command.

Autorestoration and fast retry

When an active AC drops prematurely, you must invoke either autorestoration or fast retry for autorestoration to be attempted for an active AC. If you administer an AC for autorestoration and the connection was routed over SDDN trunks, auto restoration is attempted. During restoration, connections are maintained between the server and both endpoints. In addition to maintaining the active session, AC also provides a high level of security by prohibiting other connections from intervening in active sessions. Autorestoration is usually complete before the 60-second endpoint holdover interval. If autorestoration is successful, the call might be maintained, but this is not guaranteed. The restoration is transparent to the user, with the exception of a temporary disruption of service while restoration is in progress. A successful restoration is indicated by the **restored** value in the **Connection State** field on the **Administered-Connection Status** screen. Although a restoration is successful, the data session might not be preserved.

If autorestoration is not active, or if the AC is not routed over SDDN trunks, the server immediately attempts a fast retry to reestablish the connection. The server also attempts a retry if the originating endpoint caused the drop. With fast retry, connections are not maintained on both ends. Fast retry is not attempted for an AC that was last established with fast retry, unless that AC is active for at least 2 minutes. If autorestoration or fast retry fails to restore or reestablish the connection, the call drops, and the AC goes into retry mode. Retry attempts continue, at the administered retry interval, as long as the AC is scheduled to be active.

Administering Administered Connections

The following steps are part of the administration process for the Administered Connections feature:

- [Setting up Administered Connections](#)

This section describes:

- Any prerequisites for administering the Administered Connections feature
- The screens that are required to administer the Administered Connections feature
- Complete administration procedures for the Administered Connections feature

Prerequisites for administering Administered Connections

You must complete the following actions before you can administer the Administered Connections feature:

- None

Screens for administering Administered Connections

Screen Name	Purpose	Fields
Data Modules		All
DS1 Circuit Pack		All
Access Endpoint		All
Trunk Group		All
Class of Restriction		All
Class of Service		All
Dial Plan Record		Local Node Number
Administered Connection		All
Station	assign one button as ac-alarm	Feature Button Assignments area
Attendant Console	assign one button as ac-alarm	Feature Button Assignments area

Setting up Administered Connections

Note:

For detailed information about the screens that you use in the following procedure, see the appropriate Feature Description, or the Screen Reference chapter of the *Administrator's Guide for Avaya Communication Manager*.

To set up an Administered Connection:

1. In the **Types** field on the **Data Modules** screen, choose one of the following data module Types. Administer all fields that the screen displays for that data module type.
 - Data Line Data Module. Use with Data Line circuit pack.
 - Processor/Trunk Data Module. Use with:
 - MPDMs, 700D, 7400B, 7400D, or 8400B
 - MTDMs, 700B, 700C, 700E, or 7400A
 - Processor Interface Data Module. See *Administration for Network Connectivity for Avaya Communication Manager* for more information.

Administered Connections

- X.25 Data Module. See *Administration for Network Connectivity for Avaya Communication Manager* for more information.
 - 7500 Data Module. Use with an ISDN Line 12-BRI-S-NT or ISDN Line 12-BRI-U-NT circuit pack.
 - World Class Core BRI Data Module. Use with wcbri.
2. On the **DS1 Circuit Pack** screen, administer all fields. Use with server node carriers.
 3. On the **Access Endpoint** screen, administer all fields.
 4. In the **Group Type** field on the **Trunk Group** screen, choose one of the following Group Types. Administer all fields that the screen displays for that group type.
 - ISDN-BRI
 - ISDN-PRI
 - Tie
 5. On the **Class of Restriction** screen, administer all fields.
 6. On the **Class of Service** screen, administer all fields.
 7. On the **Dial Plan Record** screen, administer the **Local Node Number** field with a number that matches the distributed communications system (DCS) server node number and the Call Detail Recording (CDR) node number. Valid values are 1 to 63.
 8. On the **Administered Connection** screen, administer all fields.
 9. On the **Station** screen, assign one button as **ac-alarm**.
 10. On the **Attendant Console** screen, assign one button as **ac-alarm**.

Reports for Administered Connections

The following reports provide information about the Administered Connections feature:

- None

Considerations for Administered Connections

This section provides information about how the Administered Connections feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Administered Connections feature under all conditions.

- None

Interactions for Administered Connections

This section provides information about how the Administered Connections feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of the Administered Connections feature in any feature configuration.

- Automatic Alternate Routing (AAR), Automatic Route Selection (ARS), Generalized Route Selection (GRS)

- Abbreviated Dialing

Use Abbreviated Dialing entries in the **Destination** field on the **Administered Connections** screen. Entries must comply with restrictions.

- Busy Verification of stations and trunks

This feature does not apply to access endpoints because access endpoints are used only for data.

- Call Detail Recording (CDR)

For an AC that uses a trunk when CDR is active, the origination extension is the originator of the call. CDR is not available for access endpoints.

- Class of Restriction (COR)

Reserve a COR for AC endpoints and SDDN trunks to restrict endpoints that are not involved in AC from connecting to SDDN trunks or endpoints that are involved in AC.

- Class of Service (COS) and Call Forwarding

Assign a COS that blocks Call Forwarding activation at the AC endpoint.

- Data Call Setup

Do not assign a default dialing destination to a data module when the data module is used in an AC.

- Data Hotline

Do not assign a hotline destination to a data module when the data module is used in an AC.

- Digital Multiplexed Interface (DMI)

Use DMI endpoints as the destination in an AC. DMI endpoints do not have associated extensions, so do not use DMI endpoints as the originator in an AC.

- Facility Test Calls

The feature does not apply to access endpoints, because an access endpoint acts as an endpoint, rather than as a trunk.

- Hunting

Do not use a hunt group extension as the originating endpoint of an AC.

Administered Connections

- Modem Pooling

If you require a modem in an AC, a modem is inserted automatically. If no modem is available, the connection is dropped.

- Non-Facility Associated Signaling (NFAS) and D-Channel Backup

Auto restoration for an AC that is initially routed over an NFAS facility might fail if the only backup route is over the facility on which the backup D-channel is administered. The backup D-channel might not come into service in time to handle the restoration attempt.

- Set Time Command

When you use the **set time** command to change the system time, all scheduled ACs are examined. If the time change causes an active AC to be outside its scheduled period, the AC is dropped. If the time change causes an inactive AC to be within its scheduled period, the server attempts to establish the AC.

If any AC, scheduled or continuous, is in retry mode and the system time changes, the server attempts to establish the AC.

- System Measurements

Access endpoints are not measured. All other trunks in an AC are measured as usual.

- Terminal Dialing

Turn off terminal dialing for data modules that are used in an AC to prevent display of call-processing messages, such as INCOMING CALL, on the terminal.

- Trunk Groups

To invoke autorestitution, route an AC over SDDN trunks. Because a successful restoration depends on an SDDN path, keep some SDDN trunks idle.

Administrable Language Displays

Use the Administrable Language Displays feature to display telephone messages in the language of the user. Messages are available in English (the default), French, Italian, Spanish, or one user-defined language that the administrator sets up. To view messages, this feature requires user telephones with a 40-character display.

Detailed description of Administrable Language Displays

With the Administrable Language Displays feature, you can select one language for the static messages that telephones and attendant consoles display. The system includes approximately 900 static display messages, such as "Transfer complete." You can select from English, French, Italian, Spanish, a user-defined language, or Unicode.

The following types of information are pre-translated for display in English, French, Italian, and Spanish. If you select **user-defined**, you must enter a translation for each message.

- Automatic Wakeup
- Adjunct Switch Applications Interface (ASAI)
- Busy Verification of Terminals and Trunks
- Call Appearance buttons
- Call Detail Recording (CDR)
- Call Progress Feedback Displays
- Class of Restriction (COR)
- Date-Time Mode
- Days of the Week
- Months of the Year
- Do Not Disturb
- Enhanced Abbreviated Dialing
- Integrated Directory
- ISDN
- Leave Word Calling
- Malicious Call Trace
- Emergency Access to Attendant

- Queue Status
- Miscellaneous Call Identifiers
- Party Identifiers
- Property Management Interface
- Security Violation Notification (SVN)
- Stored numbers
- Station hunting
- Time-of-Day Routing
- Transfer messages

Administering Language Displays

The following steps are part of the administration process for the Administrable Language Displays feature:

- [Setting the display language](#)
- [Entering translations for a user-defined language](#)
- [Administering Unicode display](#)

This section describes:

- Any prerequisites for administering the Administrable Language Displays feature
- The screens that are required to administer the Administrable Language Displays feature
- Complete administration procedures for the Administrable Language Displays feature

Prerequisites for administering Administrable Language Displays

You must complete the following actions before you can administer the Administrable Language Displays feature:

- Ensure that the **Display Character Set** field on the **System Parameters Country-Options** screen is set to the character type that you want to display. Avaya sets this field. If the **Display Character Set** field is not set to the character type that you want to display, contact your Avaya representative.
- Ensure that the type of telephone that your company uses has a 40-character display, and supports the characters that you want to display. Each character set requires specific telephones. Contact your Avaya representative for details.

- For Unicode display, ensure that the Communication Manager telephone messages for the Unicode display language are loaded. The file *avaya_unicode.txt* contains Communication Manager telephone messages. The file *custom_unicode.txt* contains Communication Manager posted messages and system labels. You can load these files when you upgrade or install the system. You can also download these files at any time from the Avaya support Web site <http://www.avaya.com/support>.

The Avaya Excel Translation Editor for creating Unicode translations requires Microsoft Excel 2000 or above.

- To support Unicode on the 4620SW IP telephone, you must:
 - Install the appropriate version of firmware on the telephone
 - Set the language that you desire

For more information on administering telephones, see the *4600 Series IP Telephone R2.0 LAN Administrator's Guide* (555-233-507), and the *4620/4620SW IP Telephone R2.0 User's Guide* (555-233-781).

Screens for administering Administrable Language Displays

Screen Name	Purpose	Fields
System Parameters - Country Options	Ensure that the appropriate character set is enabled for the language that you want to use.	Display Character Set
Attendant Console	Set the display language.	Display Language
Language Translations	Enter user-defined translations of messages.	Translation

Setting the display language

To set the display language:

1. Type **change attendant *n***, where *n* is the number of the attendant console that you want to change. Press **Enter**.

The system displays the **Attendant Console** screen ([Figure 6: Attendant Console screen](#) on page 94).

Figure 6: Attendant Console screen

change attendant 1
Page 1 of 3

ATTENDANT CONSOLE 1

Type: console	Name: Gunther	
Extension: 1000	Group: 1	Auto Answer: none
Console Type: principal	TN: 1	Data Module? n
Port: 01C1106	COR: 1	Disp Client Redir? n
	COS: 1	Display Language: english

DIRECT TRUNK GROUP SELECT BUTTON ASSIGNMENTS (Trunk Access Codes)

Local Remote	Local Remote	Local Remote
1: 9	5:	9:
2: 82	6:	10:
3:	7:	11:
4:	8:	12:

HUNDREDS SELECT BUTTON ASSIGNMENTS

1:	5:	9:	13:	17:
2:	6:	10:	14:	18:
3:	7:	11:	15:	19:
4:	8:	12:	16:	20:

2. In the **Display Language** field, type the name of the display language that you want to use.

Note:

The Display Language value **unicode** is available only for station type 4620SW or 4610SW.

3. Press **Enter** to save your changes.

Entering translations for a user-defined language

To enter translations for a user-defined language:

1. Type **change attendant *n***, where *n* is the number of the attendant console that you want to change. Press **Enter**.

The system displays the **Attendant Console** screen ([Figure 6: Attendant Console screen](#) on page 94).

2. In the **Display Language** field, type **user-defined**.
3. Press **Enter** to save your changes.

4. Type **change display-messages *n***, where *n* is the message for which you want to translate the display language. Click **help** to view the messages that you can choose to translate. Press **Enter**.

The system displays the **Language Translations** screen for the type of message that you want to translate. ([Figure 7: Language Translations screen](#) on page 95). This example shows the screen for message type "Transfer-conference."

Figure 7: Language Translations screen

change display-messages transfer-conference	Page 1 of 3
Language Translations	
1. English: Transfer completed. Translation: abtretung abgeschlossen	

5. In the **Translation** field, type the translation of the message in the user-defined language. In this example, the translation to the German language is **abtretung abgeschlossen**.
6. Press **Enter** to save your changes.

For more information on telephone displays, see the *Administrator's Guide for Avaya Communication Manager*.

Administering Unicode display

To use Unicode display languages, you must have the appropriate Avaya Unicode Message files loaded on Communication Manager. These files are named *avaya_unicode.txt* and *custom_unicode.txt*. The English, Japanese, Chinese, Russian, and German languages are available in the November 2003 2.0 release of Communication Manager. You can download the Unicode Message files for each of these languages from the Avaya support Web site <http://www.avaya.com/support>.

Note:

Message files for each of these languages are contained in a downloadable ZIP file that also contains the documents *CM2.0WhitePaper.pdf* and *UnicodeMessageFileWhitePaper.pdf*. Refer to these documents for details on the following procedures.

To administer Unicode display:

1. Download the appropriate Unicode message file to your personal computer. For an existing translation, download the desired language. To create a new translation, download the English version.

2. If necessary, create a new translation, or modify an existing translation. Use the Avaya Excel Translation Editor to create or modify translations.
3. Use the AvayaL10n Tool to prepare the Unicode Message file for installation. This tool is included in the Unicode Message file ZIP file. You cannot install the Unicode Message file if you do not first process the file with this tool.
4. Transfer the Unicode Message file to an Avaya media server that is running Communication Manager 2.0 or later. You can use the Avaya Web pages, the Avaya Installation Wizard, or ftp to transfer the Unicode Message file.
5. Install the Unicode message file. You can install Unicode Message files from either the Installation Web page or the Avaya Installation Wizard. Note that the Installation Wizard is the same wizard that you use to transfer Unicode Message files to an Avaya media server that is running Communication Manager.
6. Load the Unicode message files. After you install the Unicode Message files, you must perform a reset 4 to load the Unicode Message files in the Avaya media server that is running Communication Manager 2.0 or later. Starting with Communication Manager 2.1, a reset 4 is no longer required to load the Unicode Message file *custom_unicode.txt*.
7. Type **change attendant *n***, where *n* is the number of the attendant console you want to change. Press **Enter**.

The system displays the **Attendant Console** screen ([Figure 6: Attendant Console screen](#) on page 94).
8. In the **Display Language** field, type **unicode**.
9. Press **Enter** to save your changes.

Reports for Administrable Language Displays

The following reports provide information about the Administrable Language Displays feature:

- None

Considerations for Administrable Language Displays

This section provides information about how the Administrable Language Displays feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Administrable Language Displays feature under all conditions.

- None

Interactions for Administrable Language Displays

This section provides information about how the Administrable Language Displays feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of the Administrable Language Displays feature in any feature configuration.

- None

Troubleshooting Administrable Language Displays

This section lists the known or common problems that users might experience with the Administrable Language Displays feature.

Problem	Possible cause	Action
The characters that appear on the display are not what you entered.	This feature is case sensitive.	Check the table to ensure that you entered the characters in the correct case.
You entered a lowercase "c", but an asterisk (*) appears on the display instead.	Lowercase c has a specific meaning in Communication Manager. Therefore you cannot map c to any other character. An asterisk (*) appears in its place.	Use a different letter for this character mapping.
You entered ~-> or ~<- but nothing appears on the display.	These characters do not exist as single keys on the standard US English keyboard. Therefore the system is not programmed to handle these characters.	Check the model of the keyboard that you are using.
Enhanced display characters appear in fields that you did not update.	If an existing display field contains a tilde (~) that is followed by Roman characters, and you update and submit that screen, that field displays the enhanced character set.	Remove the existing tilde before you submit the screen.

Administrable Language Displays

Problem	Possible cause	Action
The terminal displays nothing at all.	Some unsupported terminals do not display anything if a special character is presented.	Check the model of the display terminal that you are using.
You entered a character with a descender and part of the descender appears cut off in the display.	Some of the unused characters in Group2a have descenders that do not appear entirely within the display area. These characters are not included in the character map.	Use Group1 equivalents for the letters g, j, p, q, and y.

Administration Change Notification

Use the Administration Change Notification feature to notify adjunct systems when administration data on Avaya Communication Manager is changed. These notifications keep a client application that is running on an adjunct, such as Enterprise Directory Gateway, synchronized with Communication Manager.

Administration Change Notification allows Communication Manager to communicate with the Avaya Directory Enabled Management (DEM) client. This feature provides you with real-time, integrated, directory-based, read-write access to Communication Manager administration data. This access is based on rules that you define. With Administration Change Notification, you can subscribe to notifications whenever the administration data changes in Communication Manager. This feature also provides real-time updates whenever the administration data changes in a particular object, such as a telephone.

Detailed description of Administration Change Notification

Use the Administration Change Notification feature to track changes that are made through the System Access Terminal (SAT), INADS port, a Property Management System (PMS), a Call Management System (CMS), Avaya Site Administration, Avaya Network Administration, or Avaya Directory Gateway. The Administration Change Notification feature also tracks any changes that are made through a telephone interface, such as Terminal Translation Initialization (TTI), Personal Station Access (PSA), and Terminal Self Administration.

Communication Manager only notifies the adjunct about a change to a data object. To obtain details about the change, the adjunct must request this information from the server over a separate link.

Administering Administration Change Notification

The following steps are part of the administration process for the Administration Change Notification feature:

- [Initiating Administration Change Notification](#)

This section describes:

- Any prerequisites for administering the Administration Change Notification feature
- The screens that are required to administer the Administration Change Notification feature
- Complete administration procedures for the Administration Change Notification feature

Prerequisites for administering Administration Change Notification

You must complete the following actions before you can administer the Administration Change Notification feature:

- None

Screens for administering Administration Change Notification

Screen Name	Purpose	Fields
Administration Changes	View changes to administration data in Communication Manager.	All

Initiating Administration Change Notification

To initiate Administration Change Notification:

1. From the client application, type **notify history**. Press **Enter**.

The system displays the **Administration Changes** screen ([Figure 8: Administration Changes screen](#) on page 100).

Figure 8: Administration Changes screen

notify history					
ADMINISTRATION CHANGES					
Date	Time	Login	Actn	Object	Qualifier
3/16	14:21	Craft	Logn		

Communication Manager continues to send change notification over the Operations Support System Interface (OSSI) link until you cancel the command.

Reports for Administration Change Notification

The following reports provide information about the Administration Change Notification feature:

- None

Considerations for Administration Change Notification

This section provides information about how the Administration Change Notification feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Administration Change Notification feature under all conditions.

- None

Interactions for Administration Change Notification

This section provides information about how the Administration Change Notification feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of the Administration Change Notification feature in any feature configuration.

- None

Administration Without Hardware

Use the Administration Without Hardware (AWOH) feature to administer telephones that are not yet physically on the system. Like administration with hardware, the system preserves all features that the user has activated, such as Call Forwarding and Send All Calls, when you move a telephone. This greatly speeds the process of setting up and making changes to telephones on your system.

Detailed description of Administration Without Hardware

This section provides a detailed description of the Administration Without Hardware (AWOH) feature.

With AWOH you can enter telephone translations without assigning ports. Therefore, AWOH streamlines system initialization, major additions, and rearrangements or changes. You can add or change a **Station** screen, and you can store duplicated telephones without specifying a port location.

Physical characteristics of an AWOH telephone

AWOH telephones cannot generate alarms or errors, because the physical telephones or data terminals are not associated with a **Station** screen. Neither the system nor other telephones or data terminals can affect the lamp or the alerting tones of an AWOH telephone. If a user presses a button on telephone or a data terminal that does not have an associated **Station** screen, the action has no effect on system operation.

User-activated features

When someone moves a telephone or a data terminal, the user-activated features, such as Call Forwarding and Send All Calls, remain active. Any action that changes the lamps or the status of the telephone is reflected when the telephone or the data terminal is again associated with a **Station** screen.

Association and disassociation

Telephone users, data-terminal users, and technicians can disassociate telephone translations from the current terminal port, and then associate the telephone translations with another terminal port. Users use the Personal Station Access (PSA) feature to disassociate and associate telephones. Technicians use the Terminal Translation Initialization (TTI) feature to disassociate and associate telephones.

An AWOH telephone is considered to be disassociated when no hardware port is assigned to the telephone. To indicate that no hardware is associated with a telephone, type **x** in the Port field of the appropriate screen. When the port is assigned later, the AWOH telephone is considered to be associated.

Phantom extensions

You can use phantom extensions to provide call coverage, including Avaya INTUITY AUDIX coverage, for users who do not have telephones or data terminals that are physically associated on the server.

You can also use phantom extensions for the automatic call distribution (ACD) Dialed Number Identification Service (DNIS). With ACD DNIS, you can administer a phantom extension on the switch for each type of call that ACD agents need to identify.

To use ACD DNIS, either a user with console permissions forwards the phantom extension to an ACD split, or the coverage path of the phantom extension includes an ACD split. The **Name** field for the phantom extension identifies the service that the caller wants. The agent then uses this information to address the caller properly.

Administering Administration Without Hardware

The following steps are part of the administration process for the Administration Without Hardware (AWOH) feature:

- [Assigning AWOH for a hunt group queue](#)
- [Assigning AWOH to a telephone](#)
- [Assigning AWOH to an attendant console](#)
- [Assigning AWOH to a data module](#)

This section describes:

- Any prerequisites for administering the Administration Without Hardware feature
- The screens that you use to administer the Administration Without Hardware feature
- Complete administration procedures for the Administration Without Hardware feature

Prerequisites for administering Administration Without Hardware

You must complete the following actions before you can administer the Administration Without Hardware feature:

- None

Screens for administering Administration Without Hardware

Screen name	Purpose	Fields
Attendant Console	Assign a port to the attendant console.	Port
Data Module	Assign a port to the data module.	Port
Hunt Group	Assign port information for a queue.	• Calls Warning Port • Time Warning Port
Station	Assign a port to a telephone.	Port

Assigning AWOH for a hunt group queue

To assign AWOH for a hunt group queue:

1. Type **change hunt -group *n***, where *n* is the number of the hunt group to which you want to assign AWOH. Press **Enter**.

The system displays the **Hunt Group** screen ([Figure 9: Hunt Group screen](#) on page 106).

Figure 9: Hunt Group screen

change hunt-group 1		HUNT GROUP		Page 1 of X
Group Number: ____				ACD? n
Group Name: _____				Queue? y
Group Extension: ____				Vector? y
Group Type: ____				
TN: ____				
COR: ____				MM Early Answer?
Security Code: ____				
ISDN Caller Display: _____				
Queue Length: ____				
Calls Warning Threshold: ____	Port: x	Extension: ____		
Time Warning Threshold: ____	Port: x	Extension: ____		

2. In the **Calls Warning Port** field, type **x**.

Note that the system displays the **Calls Warning Port** field if the **Queue** field is set to **y**.

3. When you type **x** in the In the **Calls Warning Port** field, the system displays an **Extension** field.

In the **Extension** field, type an extension that a technician can use, along with TTI, to assign a port number from the actual port. When a technician or an administrator assigns a port number, the system removes the extension, and the extension becomes unassigned. An administrator uses the **change hunt-group** command to assign the port number.

4. In the **Time Warning Port** field, type **x**.

Note that the system displays the **Time Warning Port** field if the **Queue** field is set to **y**.

5. When you type **x** in the In the **Time Warning Port** field, the system displays an **Extension** field.

In the **Extension** field, type an extension that a technician can use, with TTI, to assign a port number from the actual port. When a technician or an administrator assigns a port number, the system removes the extension, and the extension becomes unassigned. An administrator uses the **change hunt-group** command to assign the port number.

6. Press **Enter** to save your changes.

Assigning AWOH to a telephone

To assign AWOH to a telephone:

1. Type **change station *n***, where *n* is the number of the extension to which you want to assign AWOH. Press **Enter**.

The system displays the **Station** screen ([Figure 10: Station screen](#) on page 107).

Figure 10: Station screen

change station 1014		Page 1 of X
STATION		
Extension: 1014	Lock Messages? n	BCC: 0
Type:	Security Code:	TN: 1
Port:	Coverage Path 1:	COR: 1
Name:	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Personalized Ringing Pattern: 3	
Data Module? n	Message Lamp Ext: 1014	
Speakerphone: 2-way	Mute button enabled? y	
Display Language? English	Expansion Module?	
Model:		
	Media Complex Ext:	
	IP Softphone? y	
	Remote Office Phone? y	

2. In the **Port** field, type **x**.
3. Press **Enter** to save your changes.

Assigning AWOH to an attendant console

To assign AWOH to an attendant console:

1. Type **change attendant *n***, where *n* is the number of the attendant console to which you want to assign AWOH. Press **Enter**.

The system displays the **Attendant Console** screen ([Figure 11: Attendant Console screen](#) on page 108).

Figure 11: Attendant Console screen

change attendant 1

ATTENDANT CONSOLE 1

Page 1 of 3

Type: consoleName: 27 character attd cons name

Extension: 1000Group: 1Auto Answer: none

Console Type: principalTN: 1Data Module? y

Port: 01C1106COR: 1Disp Client Redir? n

Security Code: COS: 1Display Language: english

H.320 Conversion? n

DIRECT TRUNK GROUP SELECT BUTTON ASSIGNMENTS (Trunk Access Codes)

Local Remote

Local Remote

Local Remote

1: 95: 99:

2: 826: 10:

3: 7: 11:

4: 8: 12:

HUNDREDS SELECT BUTTON ASSIGNMENTS

1: 5: 9: 13: 17:

2: 6: 10: 14: 18:

3: 7: 11: 15: 19:

4: 8: 12: 16: 20:

2. In the **Port** field, type **x**.
3. Press **Enter** to save your changes.

Assigning AWOH to a data module

To assign AWOH to a data module:

1. Type **change data-module *n***, where *n* is the number of the data module to which you want to assign AWOH. Press **Enter**.

The system displays the **Data Module** screen ([Figure 12: Data Module screen](#) on page 109).

Figure 12: Data Module screen

add data-module next
Page 1 of 1

DATA MODULE

Data Extension: 502	Name:	BCC: 2
Type: pdm	COS: 1	Remote Loop-Around Test? n
Port:	COR: 1	Secondary data module? n
ITC: restricted	TN: 1	Connected To: dte

ABBREVIATED DIALING
 List1:

SPECIAL DIALING OPTION:

ASSIGNED MEMBER (Station with a data extension button for this data module)

Ext	Name (first 26 characters)
1:	

2. In the **Port** field, type **x**.
3. Press **Enter** to save your changes.

Reports for Administration Without Hardware

The following reports provide information about the Administration Without Hardware feature:

- None

Considerations for Administration Without Hardware

This section provides information about how the Administration Without Hardware feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Administration Without Hardware under all conditions. The following considerations apply to Administration Without Hardware:

- None

Interactions for Administration Without Hardware

This section provides information about how the Administration Without Hardware (AWOH) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of AWOH in any feature configuration.

- Association and disassociation interactions

- Attendant

An attendant cannot disassociate the attendant telephone if the attendant has a call in a queue, a call on hold, or a call that is active. An attendant cannot dissociate the attendant telephone under those conditions, even if the attendant is in Position Available mode.

- Attendant Night Service

A night service telephone cannot be removed while the telephone is in night service. See the "Night Service" feature for more information.

- Attendant Release Loop Operation

The system reclassifies calls as attendant group calls if the attendant holds the calls with the release loop operation, and if the attendant disassociates the attendant telephone before the attendant timed-reminder interval expires.

- Automatic Callback

If a telephone becomes disassociated while another telephone has automatic callback active for the disassociated telephone, the automatic callback light turns off. The callback sequence does not occur for the telephone that has automatic callback active.

- Bridged Call Appearance

If a telephone has a bridged call appearance of an off-hook telephone, the first telephone can disassociate at any time, and not disrupt a call that is in progress on the bridge.

If a telephone with a bridged call appearance associates itself while the extension for the bridged appearance is on a call, the associated telephone can join the call.

You cannot disassociate a telephone from a bridged call appearance. You must disassociate a telephone from the port on which the telephone resides.

- Call Coverage

If an AWOH telephone disassociates while Send All Calls or Go to Coverage is active, both features remain active.

- Call Coverage Answer Group

If a technician or an administrator associates a telephone, the telephone cannot join calls that are in progress at the call-coverage answer group. The telephone can join subsequent calls.

- Call Forward

A telephone can disassociate while Call Forwarding is active.

If a Call Forwarding destination disassociates, Call Forwarding to that extension remains active.

- Call Park

If a line appearance is available, a user can disassociate while a call to that telephone is parked. The user can then retrieve the call from another telephone.

- Call Pickup

If a line appearance is available, a member of a Call Pickup group can disassociate a telephone at any time.

If a call is in progress to any extension in a pickup group, any member of the group can disassociate or associate a telephone. The pickup group member who dissociates or associates a telephone does not join the group for the call in progress. The member can participate in subsequent calls.

- Customer-premises equipment (CPE) Alarm

If a telephone that is administered with a CPE alarm becomes associated with a port while an alarm is active, the telephone receives the alarm when the telephone is associated.

- Hunt Group with Uniform Call Distribution (UCD) and Direct Department Calling (DDC)

If a technician or an administrator associates a telephone, the telephone cannot join calls that are in progress at the hunt group. The telephone can join subsequent calls.

- Hold

A telephone user can place a call on hold. The user can then disassociate the telephone, associate the telephone, and retrieve the call that the user placed on hold.

- Intercom Group - Auto/Dial

See the "Data Call Setup" feature for more information.

- Message Light

You do not need to delete messages before you dissociate a telephone. If a telephone receives messages while the telephone is disassociated, the system updates the message light when someone associates the telephone.

- Send All Calls

Send All Calls remains active when a telephone is disassociated.

- Station-to-Station Call

You cannot disassociate a telephone while someone is active on a call at the telephone.

Administration Without Hardware

- Terminating Extension Group (TEG)

If a technician or an administrator associates a telephone, the telephone cannot join calls that are in progress at the TEG. The telephone can join subsequent calls.

- Transfer

After user A successfully uses the Transfer feature to connect a caller with user B, user A can dissociate the telephone. The system processes the call between the caller and the transferred-to user as a station-to-station call.

- Trunk Group Night Service

You disassociate a night service destination that is a telephone the same way that you disassociate a telephone that is not a night service destination. See the "Data Call Setup" feature for more information.

You disassociate a night service destination that is an attendant the same way that you disassociate an attendant that is not a night service destination. See the "Attendant" feature for more information.

- Attendant interactions

- Attendant Group

If all attendants of a group use AWOH consoles, internal callers receive ringback tone indefinitely. Attendant AWOH consoles operate the same way as AWOH telephones in group interactions.

- Attendant Override

When an attendant activates Attendant Override, the attendant hears a busy signal for calls to AWOH extensions, and the attendant bypasses Call Coverage for the extensions.

- Attendant Return Call

If the attendant extends a call to a telephone, and then the attendant dissociates the attendant telephone before the system returns the call to the attendant, the system reclassifies the call. The system reclassifies the call as an attendant group call, and routes the call to an attendant group.

- Emergency Access to Attendant

A caller receives a busy signal if:

- The Emergency Access feature to the attendant is active.
- All attendants use AWOH consoles.
- No backup extension is administered.
- The backup extension is also an AWOH extension.

- Interposition Calling, Attendant to Attendant

A caller receives the intercept tone for a call to an attendant who has an AWOH console.

- Night Station Service

A caller receives a busy signal if the attendant activates Night Station Service, and the night service endpoint in an AWOH extension.

- Serial Calling

With a serial call, the attendant is not in a busy state after the attendant releases a call. Because the attendant is not in a busy state, the attendant can disassociate the attendant telephone.

If the attendant extends a call to a telephone, and then the attendant dissociates before the system returns the call to the attendant, the system reclassifies the call. The system reclassifies the call as an attendant group call, and routes the call to an attendant group.

When an attendant attempts to extend a call to an AWOH extension, the attendant hears a busy signal.

- Data Modules

Users can use the following methods to associate and disassociate data modules:

- Data-terminal dialing
- Telephone dialing
- Other devices

The devices include the use of a default set type to associate, and then remove the default set type, and replace the default set type with the proper data endpoint.

Because digital-terminal data modules (DTDMs) reside on some telephone types, the port is automatically inherited from the host telephone. The DTDM receives a port identification when the telephone associates or disassociates.

- Administered Connections

If you administer a connection without hardware translation, the system attempts to establish a connection only when both endpoints are associated with hardware translation.

You disassociate an administered connection when you type **x** in the **Port** field on the **Data Module** screen. A technician uses Terminal Translation Initialization (TTI) to disassociate an administered connection.

- Hunt Group - Uniform Call Distribution (UCD) and Direct Departmental Calling (DDC)

See the "Call Coverage" feature for more information.

- Terminal-to-Data Module Call

See the "Data Call Setup" feature for more information.

- Transfer

See the "Transfer" feature for more information.

Administration Without Hardware

- Data-terminal interactions
 - Administered Connections

An administered connection endpoint can be an AWOH extension.
 - Data Call Setup
 - Data Terminal Dialing

A keyboard-dialed call that terminates to a data endpoint that is an AWOH telephone, causes a BUSY message on the screen. A busy signal indicates that the terminal is in use, out of service, or AWOH.
 - Telephone Dialing

See the "Data Call Setup" feature for more information.
 - Hunt-Group (UCD and DDC)

See the "Call Coverage" feature for more information.
 - Incoming Destination

If the incoming destination is an AWOH extension, the caller hears ringback tone from the central office (CO). The system routes incoming calls based on features that are active for the extension. These features include, for example, Call Forwarding and Call Coverage.
 - Terminal-to-Data Module Call

If a data endpoint is an AWOH telephone, the caller either sees a BUSY message on the screen or hears a busy signal, depending on the originating hardware. See the "Data Call Setup" feature for more information.
- Telephone interactions
 - Abbreviated Dialing

AWOH does not change any aspect of the Abbreviated Dialing feature.

A telephone that has Abbreviated Dialing active, and then becomes disassociated, retains the abbreviated dialing list entries.
 - Automatic Call Distribution

A user cannot log an AWOH telephone into an Automatic Call Distribution (ACD) split. The user can log on directly or use a Bridged Call Appearance.
 - Automatic Callback

A user cannot activate the Automatic Callback feature for a call to an AWOH extension. If a user attempts to use the Automatic Callback feature for a call to an AWOH extension, the system sends the reorder tone to the user.

- Bridged Call Appearance

A user can use a bridged call appearance of an AWOH extension to place a call.

A user can use a bridged call appearance of an AWOH extension to answer a call to the AWOH telephone.

An AWOH extension can contain a bridged call appearance, but a user cannot use the bridged call appearance on the AWOH telephone to place a call.

- Busy Verification of Terminals and Trunks

When you use busy verification of terminals and trunks on an AWOH extension, the telephone appears to you as an out-of-service telephone.

- Call Coverage

AWOH telephones interact with Call Coverage as if all call appearances are busy.

Call Coverage can be active at a disassociated telephone.

- Call Forward

Call Forwarding can be active at an AWOH telephone, while the telephone is in a disassociated state. When the extension is associated, Call Forwarding is active.

- Call Park

A call to an AWOH extension can be parked only if the primary extension has a bridged call appearance on a non-AWOH telephone. A call that is parked from a bridged call appearance is parked on the primary extension.

- Call Waiting Termination

Call Waiting Termination can be administered on a single-line AWOH extension, but the caller receives a busy signal if the extension is disassociated.

- Conference

Users cannot include an AWOH extension in a conference call.

- Customer-Provided Equipment (CPE) Alarm

If a CPE alarm is active for an AWOH extension, no equipment is available to ring or light.

- Data Buttons

Data buttons are not lit for AWOH data modules.

- Display

The AWOH feature does not change the display for calls that originate or terminate from a bridged call appearance for an AWOH extension.

- Facility Busy Indication

A telephone can have a busy indicator light for an AWOH extension, but the light is not lit. The light is not lit because Facility Busy Indication indicates whether an extension is off-hook or on-hook, even if you assign bridged appearances. An AWOH extension is always on-hook.

You can administer a busy indicator light on AWOH extensions. When an administrator or a technician assigns a port to the extension, the busy indicator light functions as usual.

- Incoming Destination

If the incoming destination is an AWOH extension, the caller hears ringback tone from the central office (CO). The system routes incoming calls based on features that are active for the extension, such as Call Forward and Call Coverage.

- ISDN-BRI voice terminals

If TTI is enabled, you cannot use the SAT to enter x in the Port field of a BRI telephone Station record that is already connected to the switch. Instead, you must dial the TTI disassociate code from the telephone. For more information, see the "Terminal Translations Initialization (TTI)" feature.

- Leave Word Calling

You can leave a leave-word-calling message at an AWOH extension.

- Manual Message Waiting

When a user activates Manual Message Waiting toward an AWOH extension, no telephone exists on which to light the message waiting lamp. However, once the AWOH extension is associated with a port or telephone, the message waiting lamp lights.

- Manual Signaling

Manual Signaling to an AWOH extension has no effect on system operation, because no terminal exists to signal.

The system does not send a message to the originator of the call to inform the caller that the extension is an AWOH extension, and therefore cannot receive the signal.

- Personal Central Office Line (PCOL)

You can administer AWOH extensions with PCOL. If a call terminates at an AWOH extension that does not have Call Coverage active, the caller receives the ringback tone. The ringback tone indicates that the call is unanswered. If the AWOH extension has Call Coverage active, the system routes the call to coverage.

- Priority Calling

A user who sends a priority call to an AWOH extension hears a busy signal.

- Send All Calls

Send All Calls remains active on AWOH extensions.

- **Station Hunting**

You can assign an AWOH extension to a telephone hunting chain.

- **Station-to-Station Call**

The system processes a call to an AWOH extension in the same way that the system processes a call to a telephone for which all call appearances are busy.

- **Transfer**

The system processes a transfer to an AWOH telephone in the same way that the system processes a call to a telephone that is busy.

Alphanumeric Dialing

Use the Alphanumeric Dialing feature to allow users to enter a alphanumeric name to place data calls instead of a numeric string.

Detailed description of Alphanumeric Dialing

This section provides a detailed description of the Alphanumeric Dialing feature.

With Alphanumeric Dialing, a user can place a data call with Data Call Setup and an alphanumeric string or alpha-name for the call-destination address. For example, a user can type 9+1-800-telefon instead of 9+1-800-835-3366 to place a call. Users need to remember only the alpha-name of the far-end terminating point.

With Alphanumeric Dialing, you can change a mapped string (digit-dialing address) without having to inform all users of a changed dial address. Users dial the alpha name.

When a user enters an alphanumeric name, the system converts the name to a sequence of digits according to an alphanumeric-dialing table. If the name that the users enters is not in the table, the system denies the call attempt. The user receives either an Invalid Address message (DCP) or a Wrong Address message (ISDN-BRI).

Because data terminals use DCP or ISDN-BRI data modules to access the switch, dialing procedures vary:

- For DCP, at the DIAL prompt, users type the alphanumeric name and then press **Enter**.
- For ISDN-BRI, at the CMD prompt, users type **d**, a space, the alphanumeric name, and then press **Enter**.

Administering Alphanumeric Dialing

This section describes:

- Any prerequisites for administering the Alphanumeric Dialing feature
- The screens that you use to administer the Alphanumeric Dialing feature
- Complete administration procedures for the Alphanumeric Dialing feature

Prerequisites for administering Alphanumeric Dialing

You must complete the following actions before you can administer the Alphanumeric Dialing feature:

- None

Screens for administering Alphanumeric Dialing

Screen name	Purpose	Fields
Alphanumeric Dial Table	Map alphanumeric names to strings	• Alpha-name • Mapped String

Reports for Alphanumeric Dialing

The following reports provide information about the Alphanumeric Dialing feature:

- None

Considerations for Alphanumeric Dialing

This section provides information about how the Alphanumeric Dialing feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Alphanumeric Dialing under all conditions. The following considerations apply to Alphanumeric Dialing:

- You cannot use Alphanumeric Dialing on telephones that have Hayes modems.
- More than one alphanumeric name can refer to the same digit string.

Interactions for Alphanumeric Dialing

This section provides information about how the Alphanumeric Dialing feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Alphanumeric Dialing in any feature configuration.

- None

Announcements

Use the Announcements feature to administer announcements that play for callers to your business. For example, you can inform callers that the call cannot be completed as dialed, the call is in a queue, or that all lines are busy. An announcement is often used in conjunction with music.

Announcements can be *integrated* or *external*. Integrated announcements reside on a circuit pack in the carrier. External announcements are stored on an adjunct, and played back from the adjunct equipment.

Detailed description of Announcements

Use the Announcements feature to administer announcements for callers to hear. For example, you can inform callers that the call cannot be completed as dialed, that the call is in a queue, or that all lines are busy. An announcement is often used in conjunction with music.

Announcements can be integrated or external. Integrated announcements reside on a circuit pack in the carrier. External announcements are stored and played back from adjunct equipment. Audio files on the circuit pack or the adjunct equipment can be grouped based on the Locally Sourced Announcements and Music-on-Hold feature.

For software release 11 or later of Avaya Communication Manager, multiple telephone sessions are allowed. One session is associated with each active integrated announcement circuit pack. Any announcement that is stored on a circuit pack can play through any port on the circuit pack. Any announcement, except those announcements that are administered for "barge-in," can play simultaneously through multiple ports. All ports can play the same announcement at the same time, and the system can connect multiple users to each of these announcements.

The Announcements feature supports three general types of announcements:

- Delay announcement. Explains the reason for the delay and encourages the caller to wait.
- Forced announcement. Explains an emergency or a service problem. Use when you anticipate numerous calls about a specific issue.
- Information announcement. Gives the caller instructions on how to proceed, information about the number called, or information that the caller wants.

Use the Announcements feature for:

- A Vector Directory Number (VDN) of origin announcement.
- A security violation notification

Announcements

- When:
 - Direct Inward Dialing (DID) calls cannot be completed as dialed.
 - Incoming private-network-access calls cannot be completed as dialed.
 - Calls enter a split or a skill.
 - DDC, UCD, or direct-agent calls are in queue for an assigned interval.
 - ACD and Call Vectoring calls are in queue for an assigned interval.
 - The destination of a call is a recorded announcement extension.
 - The system routes a call to a vector that contains an announcement step.
 - An announcement extension is specified as a coverage point.
 - An announcement is the incoming destination of a trunk group.
 - The Hospitality Automatic Wakeup feature is in use.

The Announcements feature supports the following capabilities:

- [Voice Announcements over LAN](#)
- [VAL Manager](#)
- [Local announcements on the G700 Media Gateway](#)
- [Integrated announcements](#)
- [Barging-in on announcements](#)

Voice Announcements over LAN

Avaya Voice Announcements over LAN (VAL) incorporates the TN2501AP, an integrated announcement circuit pack that:

- Plays announcements over the time-division multiplexing (TDM) bus, similar to the TN750C
- Has up to 1 hour of announcement storage time per circuit pack
- Has 33 ports (31 playback, 1 record, and 1 Ethernet)
- Supports a 10/100 MB Ethernet interface, to allow announcement and firmware file portability over a LAN, using file transfer protocol (FTP) server functions
- Supports generated .wav announcement files

VAL Manager

Avaya VAL Manager is a stand-alone application that you can use to copy announcement files and Communication Manager announcement information to and from Communication Manager over a LAN connection. VAL Manager is part of the Avaya Integrated Management suite of products.

VAL Manager provides:

- Simplified administration for adding, changing, and removing Communication Manager announcement information
- The ability to back up and restore announcement files and information to and from Communication Manager
- The ability to view the status of announcements on the VAL circuit pack in any Communication Manager

Announcements can be stored in .wav files, which can be sent to a voice announcement over a LAN circuit pack without conversion. VAL Manager also provides a repository to back up and restore announcement files, and simplifies administration. Over your LAN with VAL Manager, you can:

- View the current status of announcements
- Add, change, and remove announcements
- Copy and back up announcement files from Avaya media servers to VAL Manager, and back again.

Local announcements on the G700 Media Gateway

G700 local announcements, which are also known as Virtual Voice Announcements over LAN (Virtual VAL or VVAL), provide twenty minutes total announcement time with fifteen playback channels. Use VAL Manager to manage local announcements on the G700 Media Gateway.

Note:

Local announcements are also available on the G350 and G250 media gateways. G350 and G250 media gateways have six playback ports.

Integrated announcements

With the Announcements feature, you can administer either integrated announcements or announcements that are recorded on external devices. The external devices connect to the server by means of analog-line circuit packs or auxiliary trunk interfaces, such as a TN2183 or a TN763.

Announcements

The system stores integrated announcements on a TN750 integrated-announcement circuit pack. The system can store multiple announcements on each circuit pack up to the system capacity. Each Integrated Announcement circuit pack has 16 ports, and can play up to 16 simultaneous announcements. The system can connect multiple users to each of these announcements.

Integrated type - The integrated announcement type is stored on TN750, TN2501AP, VAL sources, or co-resident announcement circuit packs. This announcement type is used for general, ACD, vectoring announcements, and for VDN of Origin announcements.

Integrated-repeating - The integrated-repeating (integ-rep) announcement type can provide integrated repeating automatic announcements.

Integrated-music - The integrated-music (integ-mus) announcement type is identical to the integ-rep type except that the **Q** field is set to **b** to provide a continuous repeating barge-in operation. This type is typically used to provide music-on-hold or music-on-delay.

Any announcement that is stored on a circuit pack can play through any port on the circuit pack. Any announcement, except those announcements that are administered for "barge-in," can play simultaneously through multiple ports. All 16 ports can play the same announcement at the same time.

You must set the **Q** field to **y** on the **Announcements/Audio Sources** screen for each extension that you want to queue for integrated announcements. Integrated announcements queue only when all 16 ports on the circuit pack that contains the announcement are busy. The same queuing pool is used for all circuit packs. The system controls the announcement queue length for integrated announcements, but you must set the queue length for analog or aux-trunk announcements.

Barging-in on announcements

The system usually connects multiple callers to the beginning of an announcement, regardless of announcement type. However, you can also administer auxiliary trunk announcements, DS1 announcements, and integrated announcements to allow callers to begin listening to an announcement after the system starts to play the message. This capability is called "barge-in."

When you administer barge-in, only one port plays the announcement at any one time. When the system routes a call to that announcement, the call immediately connects to the port, and the caller hears the announcement that is playing. Most administrators administer "barge-in" announcements to repeat continually while callers are connected to the port. In this way, the caller can listen until the system plays the entire announcement.

When barge-in is not enabled, and an announcement port is available when a call arrives, the system connects the call to the announcement. If no announcement port is available, and the announcement is administered with **no** as the queue option, the caller hears a busy signal or other feedback, depending on how the announcement was accessed.

If no announcement port is available and the announcement is administered with **yes** as the queue option, the call enters the announcement queue. When a port becomes available, the server connects the calls that wait in the queue to the beginning of the announcement. The system first connects the call that has been waiting in the queue the longest, and then connects as many calls as it can.

Announcement sources for the Avaya G700 Media Gateway

The Announcements feature provides an announcement source for each G700 Media Gateway that is registered to either an Avaya S8300 or an Avaya S8700 Media Server. The S8700 supports 10 integrated TN750, TN2501, CWY1 announcement circuit packs, plus an additional 250 G700 announcement sources, for a total of 260. The S8300 supports 50 G700 announcement sources.

Note:

The S8300 does not support standard port networks or TN-type circuit packs. Also, the software resources for integrated circuit packs and G700 sources are separated. The G700 announcement sources are counted separately towards the limit of 50 on the S8300, and 250 on the S8700.

Single integrated announcement circuit packs

When your server has only one integrated announcement circuit pack, the circuit pack can be either a TN750, a TN750B, or a TN750C.

Multiple integrated announcement circuit packs

Multiple Integrated Announcement circuit packs can be installed in G3si and G3r servers. However, only one of these circuit packs can be a TN750 or a TN750B. Any additional circuit packs must be TN750C circuit packs.



CAUTION:

Do not copy announcements from a TN750C to a TN750 or TN750B. This action might corrupt the announcement data.

Backing up circuit packs

You must back up a TN750 or TN750B before you:

- Remove a TN750 or TN750B from the server
- Shut off power to the server

In both situations, the system loses any announcements that are stored on the circuit pack. Therefore, you must back up announcements that are stored on the TN750 or TN750B circuit packs to the Mass Storage System (MSS). When you insert or reset a circuit pack, or turn on the system, the system checks the circuit pack for announcements. If the system determines that the circuit pack contains no announcements, the system automatically restores the announcements from the MSS.



CAUTION:

The announcements from the MSS that are automatically restored are the last announcements that were saved to the MSS. If multiple circuit packs are used, MSS might not contain the announcement for the B circuit pack or the A circuit pack.

You do not need to back up a TN750C circuit pack. The TN750C has on-board Flash memory backup. This on-board backup substantially reduces the time that is required for power-up restore, and eliminates the need for a manual save of the circuit pack contents. The system retains announcements on the TN750C circuit packs, even when someone removes the circuit pack, or when the system loses power. Therefore, the TN750C does not require the save-and-restore procedure. However, you can still use the save-and-restore procedure to copy the contents of a TN750C to another circuit pack.

Compression rates

The system stores integrated announcements on a TN750A at a compression rate of 32 Kbps. The system can store integrated announcements at one of three compression rates on the TN750B and the TN750C circuit packs. You administer the compression rate separately for each announcement extension. In this way, the system can store announcements with different compression rates on the same circuit pack. During playback, the server sets the port to the correct compression rate for the announcement that is playing.

- A 64-Kbps compression rate allows for 128 seconds of recorded announcement time per circuit pack.
- A 32-Kbps compression rate allows for 256 seconds of recorded announcement time per circuit pack. This rate is the default compression rate.
- A 16-Kbps compression rate allows for 512 seconds of recorded announcement time per circuit pack. The 16-Kbps rate does not provide a high-quality recording. This rate is adequate for VDN of Origin announcements, but Avaya does not recommend a 16-Kbps rate for customer announcements.
- The TN2501AP/VVAL circuit pack only supports 64Kbps compression rate.

Administering Announcements

The following steps are part of the administration process for the Announcements feature:

- [Displaying all announcements](#)
- [Adding announcement data modules](#)
- [Adding announcement extensions](#)
- [Recording and changing announcements](#)
- [Saving announcements](#)
- [Copying announcements](#)
- [Restoring announcements](#)
- [Deleting and erasing announcements](#)
- [Setting up continuous-play announcements](#)
- [Recording VAL announcements](#)
- [Converting announcement files to VAL format](#)
- [Using FTP to Manage VAL announcements](#)
- [Recording announcements for TTY callers](#)

This section describes:

- Any prerequisites for administering the Announcements feature
- The screens that you use to administer the Announcements feature
- Complete administration procedures for the Announcements feature

Prerequisites for administering Announcements

You must complete the following actions before you can administer the Announcements feature:

- None

Screens for administering Announcements

Screen name	Purpose	Fields
Announcements/Audio Sources (including Integrated Announcement Translations)	Add, change, or delete individual announcements and the properties of the announcements.	All
Feature Access Code (FAC)	Set up a feature access code (FAC) to use to activate the Announcements feature.	Announcement Access Code
Station	Set the Class of Service (COS) for the Announcements feature.	COS
Data Modules • Netcon Data Module • System Port Data Module (SAP) • Announcement Data module	Administer the Save, Restore, and Copy parameters.	All
Circuit Packs	Administer this screen if you administer the Board Location on the Announcements/Audio Sources screen or the Data Module screen, and do not have the circuit pack plugged in.	All
Feature-Related System Parameters	Administer this screen if you plan to use Announcements with the feature that is associated with each field shown in the Fields column at right.	• DID/Tie/ISDN Intercept Treatment • Controlled Outward Restriction Intercept Treatment • Controlled Termination Restriction (Do Not Disturb) • Controlled Station-to-Station Restriction

Screen name	Purpose	Fields
Hospitality	Administer this screen if you plan to use Announcements with the Hospitality feature.	● Announcement Type ● Length of Time to Remain Connected to Announcement
Trunk Group	Administer this screen if you plan to use Announcements with the Hospitality feature.	Incoming Destination
Coverage Path	Administer this screen if you plan to use Announcements with the Call Coverage feature.	Coverage Points
Hunt Group	Administer this screen if you plan to use Announcements with the Hunt Groups feature.	● First Announcement Extension ● Second Announcement Extension
Call Vector	Administer this screen if you plan to use Announcements with the Call Vector feature.	All fields that require announcements

Displaying all announcements

To display all existing administered announcement circuit packs:

1. Type **list integrated-annc-boards**. Press **Enter**.

The system displays the **Integrated Announcements** screen ([Figure 13: Integrated Announcements screen](#) on page 132).

Figure 13: Integrated Announcements screen

list integrated-annc-boards						Page 1
INTEGRATED ANNOUNCEMENTS/AUDIO						
Board Location: 08A05			Time Remaining at 64 Kbps: 255			
Annc. Number	Internal Number	Group Number	Announcement Extension	Name	Rate	Length in Seconds
1:	NA	6	658001	Collect_1_digit	64	4
2:	NA	31	658002	No_digits_coll_Goodbye	64	5
3:	NA	11	658003	Collect_5_digits	64	5
4:	NA	10	658004	voa1	64	6
5:	NA	9	658005	Music4	32	60

Adding announcement data modules

To add an announcement data module:

1. Type **add data-module next**. Press **Enter**.

The system displays the **Data Modules** screen ([Figure 14: Data Modules screen](#) on page 132).

Figure 14: Data Modules screen

DATA MODULE	
Data Extension: 2002	Name: announcement data module
Type: announcement	COS: 1
Board: 01B18	COR: 1
ITC: restricted__	TN: 1
ASSIGNED MEMBER (Station with a data extension button for this data module)	
Ext	Name
1: _____	_____

2. In the **Name** field, type **announcement data module**.
3. In the **Type** field, type **announcement**. Press **Enter**.

The **Port** field automatically changes to **Board**.

4. In the **Board** field, type the address of the announcement circuit pack. In this example, the address is **01B18**.
5. Press **Enter** to save your changes.

Adding announcement extensions

To add announcement extensions:

1. Type **change announcements**. Press **Enter**.

The system displays the Announcements/Audio Sources screen screen
([Figure 15: Announcements/Audio Sources screen](#) on page 133).

Figure 15: Announcements/Audio Sources screen

change announcements											Page 1
ANNOUNCEMENTS/AUDIO SOURCES											
Ext.	Type	COR	TN	Name	Q	QLen	Pro	Rate	Group/		
									Port		
1: 1234	integrated	1	1	business-hours	n	N/A	n	32	01B18		
2: 5678	integ-mus	1	1	Music4Queue	y			32	G1		
3:		1	1		n						
4:		1	1		n						
5:		1	1		n						

2. In the **Ext** field, type the extension that you want to assign to this announcement.
3. In the **Type** field, type the announcement type.
4. In the **Name** field, type a name for this announcement.

Note:

If you use the TN2501AP or the G700 Media Gateway VVAL, you must type a name in the **Name** field. This name becomes the name for the announcement file.

5. In the **Q** field, perform one of the following actions:
 - If you want calls to wait to hear an announcement if all the ports on the announcement circuit pack are busy, type **y**. If the announcement is assigned to an audio group (see the Locally Sourced Announcements and Music-on-Hold feature), the closest announcement group is selected and played.
 - If you do not want calls to wait to hear an announcement if all the ports on the announcement circuit pack are busy, type **n**. If you type **n** in this field, a queue is not created, and the caller hears a busy signal or other feedback, depending on how the announcement was accessed.

Announcements

6. The system displays **N/A** in the **QLen** (queue length) field. You cannot change this field for integrated announcements. The length of the queue for integrated announcements is preset.
7. In the **Pro** (protected) field, perform one of the following actions:
 - If you want to allow users with console permissions to change the announcement, type **n**.
 - If you do not want to allow users with console permissions to change the announcement, type **y**. If you type **y** in this field, the announcement is protected and cannot be changed.

Note:

The **Pro** field appears only if the **Type** field is integrated.

8. In the **Port** field, type one of the following values:
 - The location of the TN2501AP or the TN750 announcement circuit pack. In this example, the location is **01B18**.
 - **ggv9** for G700 VVAL, where **gg** is the gateway number of the G700 Media Gateway.
9. Repeat steps 2 through 8 with the correct information for each announcement you want to record.
10. Press **Enter** to save your changes.

Note:

These steps only create the administered name for the announcement file. You fill the file space when you record an announcement or transfer an announcement file to the circuit pack through a file transfer protocol (FTP) session.

11. To ensure that the announcement administration is correct, type **list integrated-annc-boards**. Press **Enter**. The system displays the Integrated Announcements screen ([Figure 13: Integrated Announcements screen](#) on page 132), where you can review announcement settings.

Recording and changing announcements

You can use a system telephone or an attendant console to record a new announcement for callers to hear when callers dial a specific extension. Use the same procedure to change an existing announcement.

Prerequisites

You must complete the following actions before you can record announcements:

- Ensure that you have a telephone or an attendant console with a class of service (COS) that provides console permissions to record announcements. For more information on Class of Service, see the "Class of Service" feature.

To record or change an announcement:

1. Dial ***xx** from a telephone or console, where **xx** is the Announcement Feature Access Code (FAC). For more information on FACs, see the "Feature Access Code" feature.
 - If you hear dial tone, continue with Step 2.
 - If you hear a fast busy signal, hang up. Redial the FAC and the extension every 45 seconds until you hear dial tone.
2. Dial the announcement extension.
3. When you hear dial tone, dial **1** to begin recording.
 - If you hear a beep or a stutter tone, begin recording. If the circuit pack memory becomes full while you are recording, the system drops your connection and does not retain the announcement.
 - If you hear intercept tone, hang up. Record your announcement on another extension that is assigned to a different circuit pack.
4. To end the recording:
 - If you are using a digital telephone, press the pound key (**#**). You hear a dial tone again, and you can continue your session.
 - If you are using an analog telephone, hang up. If your analog telephone is not connected through lineside DS1, the system records an electrical click at the end of the recording. You must redial the Announcement FAC to continue your session.
5. If you are using a digital telephone, and you want to listen to the announcement that you just recorded, dial **2**. The recording plays back through the handset.
6. If you are not satisfied with the announcement, press
 - **1** to rerecord the announcement
 - **3** to delete the announcement, and to end the recording session
7. To listen to the announcement after you hang up, dial the announcement extension from any telephone or attendant console. The announcement plays through the handset.

When you directly dial an announcement extension, for which an announcement has not been recorded, you hear:

- A busy tone with TN750 circuit packs
- Silence instead of a busy tone with the VAL-type sources, such as the TN2501 circuit pack or the G700 Media Gateway.

Note:

You must wait 15 seconds after you record an announcement before you can dial the extension to hear the announcement replay. During this 15-second window, you cannot record a new announcement, and no one can play this announcement. However, you can rerecord the announcement during this 15-second period. To rerecord the announcement, dial the Announcement FAC, dial the extension, and then press **1** before the 15-second timer expires.

Saving announcements

You can save and back up announcements from an announcement circuit pack to system memory. Your system memory is a tape, a hard disk, or a memory card, depending on your system. Use this procedure primarily for announcement circuit packs without built-in memory. VAL and VVAL announcements are backed up internally to nonvolatile Flash memory.

To save or back up announcements when you have only one announcement circuit pack:

- Type **save announcements**. Press **Enter**. The system saves the announcements that are on the circuit pack. This process can take up to 40 minutes. You cannot administer your system while the system is saving announcements.

To save or back up announcements when you have more than one announcement circuit pack:

- Type **save announcements from *n***, where *n* is the address of the circuit pack for which you want to save announcements. For example, **save announcements from 01B18** saves announcements on the circuit pack that is located at address 01B18.

Copying announcements

You can copy recorded announcements between back-up disks and tapes when you want to store your recorded announcements in more than one place.

Note:

The following task applies only if you use a TN750-series announcement circuit pack. If you use the TN2501AP (VAL) announcement circuit pack or VVAL announcements, do not perform this task. Instead, see [Recording VAL announcements](#).

To copy announcements between your back-up disk and tape:

1. Type **copy announcements**. Press **Enter**.

Restoring announcements

You can restore announcements from system memory to an announcement circuit pack. Your system memory is a tape, hard disk, or a memory card, depending on your system.

If you have a duplicated system, your system always restores the announcements that are located on the active processor.

To restore announcements from system memory to the integrated announcement circuit pack:

1. Type **restore announcements disk**. Press **Enter** to restore announcements.

To restore announcements from system memory to an announcement circuit pack that has built-in memory:

1. Type **restore announcements from *n***, where *n* is the address of the circuit pack for which you want to restore announcements. For example, **restore announcements from 01B18** restores announcements on the circuit pack that is located at address 01B18.
2. Press **Enter** to restore announcements.

Deleting and erasing announcements

You can use a system telephone or an attendant console to delete recorded announcements from an announcement circuit pack that does not have stored memory. When you delete an announcement from the circuit pack, you do not delete the announcement from your system backup tape or hard disk.

You can also erase the announcements that are stored on an integrated announcement circuit pack that has stored memory.

Note:

The system denies any attempt to delete an announcement while the announcement is playing, being transferred, or being backed up to Flash memory.

To delete or erase an announcement:

1. Dial ***xx** from a telephone or an attendant console, where **xx** is the Announcement FAC. For more information on FACs, see the "Feature Access Code" feature.
2. When you hear dial tone, dial ***n***, where *n* is the announcement extension.
3. When you hear dial tone, dial **3** to delete the announcement from the announcement circuit pack. You hear a confirmation tone. If the announcement is protected or is playing at the time of the command, you hear a fast busy signal (the reorder tone), and the system does not delete the announcement.
4. Hang up the telephone.
5. To ensure that an announcement was deleted, dial ***n***, where *n* is the extension of the deleted announcement. You hear a busy signal if the announcement was deleted.
6. Repeat Steps 1 through 5 for each announcement that you want to delete. You can delete only one announcement at a time.

You might also want to remove the announcement extension from the system. To remove the announcement extension:

1. Type **change announcements**. Press **Enter**.

The system displays the **Announcements/Audio Sources** screen ([Figure 15: Announcements/Audio Sources screen](#) on page 133).

2. Delete the information in the **Ext** and **Type** fields.

3. Press **Enter** to save your changes.

Finally, to erase announcements on the announcement circuit pack:

1. Type **erase announcements n**, where **n** is the address of the circuit pack that contains the announcements that you want to erase.

The system displays a warning message that confirms the deletion.

2. Press **Enter** to erase the announcements on the circuit pack.

Setting up continuous-play announcements

You can set up announcements to continuously repeat while callers are connected to the announcement, so that a caller can listen until the system plays the entire announcement. With a "barge-in" queue, you do not need a separate port for each announcement.

For example, you can set up an Automatic Wakeup announcement to repeat, and use a barge-in queue. When guests pick up the telephone to hear an announcement at a particular time, they use only one port. The message repeats on that port until the last guest goes off-hook and the message ends.

To set up a continuous-play announcement:

1. Type **change announcements**. Press **Enter**.

The system displays the Announcements/Audio Sources screen ([Figure 15: Announcements/Audio Sources screen](#) on page 133).

2. Type **b** in the **Q** field on the same line as the extension for the announcement.
3. Leave the name that is in the **Name** field, or enter a new description for the announcement.
4. Press **Enter** to save your changes.

Recording VAL announcements

You can record an announcement for callers to hear when the callers dial a specific extension, or as part of call vectoring. Use the same steps to change an existing announcement.

You can record announcements at a:

- Professional recording studio
- Computer
- System telephone

Prerequisites

You must complete the following actions before you can record VAL announcements:

- Ensure that the announcement administration is complete. You must assign a name before you can record an announcement. For more information, see [Adding announcement extensions](#).
- If you replace a TN750C announcement circuit pack with the TN2501AP:
 - Get a list and a description of the announcements that are stored on the TN750C circuit pack.
 - Rerecord the announcements on a computer or at a professional recording studio as .wav files (CCITT m-Law or A-Law, 8-KHz, 8-bit mono), so that the files are ready to transfer to the new announcement circuit pack after the circuit pack is installed and administered.
- If you replace an old announcement circuit pack with the new TN2501AP circuit pack:
 - Remove previous announcement administration.
 - Record new announcements for the TN2501AP.
 - Rerecord any announcements that currently reside on the TN750 circuit packs that you are replacing. You cannot transfer or restore TN750 announcements from a Flash card, tape, or optical disk to the TN2501AP.



CAUTION:

When you change a VAL announcement, the TN2501AP is activated to perform a Flash auto-save backup 5 minutes later. If you try to record a new announcement during this backup process, the new recording fails, and a denial event is logged to the **Event Report** screen.

Announcement file format requirements

To be compatible with the TN2501AP circuit pack and Communication Manager, announcement recordings must have the following parameters:

- CCITT A-Law or CCITT m-Law companding format (do not use PCM)
- 8-KHz sample rate
- 8-bit resolution (bits per sample)
- Mono (channels = 1)
- The m-Law (Mu-Law) companding is used in the United States, and A-Law is used internationally. Use the companding format that is specified on the **Location Parameters** screen.

Announcements

- Filenames for the TN2501 (VAL) circuit packs cannot contain blank spaces, nor any of the following characters:
 - Period (.)
 - Comma (,)
 - Forward slash (/)
 - Colon (:)
 - Asterisk (*)
 - Question mark (?)
 - Less than (<)
 - Greater than (>)
 - Backward slash (\)

The filename itself is case sensitive, but the file extension .wav must be lowercase. Announcements that are recorded in this format occupy 8-KB per second of file space for each second of recorded speech. For example, a 10-second announcement creates an 80-K .wav file.

To record a VAL announcement at a computer:

1. At the computer, open the application that you use to record .wav files.
2. Set the recording parameters.
3. Speak into a microphone that is connected to the computer and record the announcement.
4. Play the announcement back at the computer before you transfer the file to the VAL circuit pack.

To use a system telephone to record an announcement, see [Recording and changing announcements](#).

Converting announcement files to VAL format

If you share recordings in a multisite environment with Communication Manager and Avaya Interactive Voice Response (IVR) systems, you must convert announcement files for use on either system. If you must convert an announcement file to the required format, you can use a sound recording utility application to do so.

To convert a previously recorded announcement, or a file that is compatible with an Avaya Interactive Voice Response system, to a format that is compatible with Communication Manager:

1. Open the sound recording application on your computer. For example, you might use Microsoft Windows Sound Recorder.
2. Open the file that you want to convert.

3. Check the file properties to determine if you must change the parameters.
4. If you must change the recording parameters, look for a conversion tool. Some tools have a **Convert Now** option. Other tools use **Save As**.
5. Change the file parameters to parameters that are listed in [Announcement file format requirements](#).

Note:

In some applications, assigning the format (for example, CCITT m-Law) sets the remainder of the default parameters. Check each parameter carefully, and change the default setting to match the required parameters if necessary. Note that CCITT m-Law or A-Law can be referred to as ITU G.711 m-Law or ITU G.711 A-Law, respectively.

Converting announcements for Interactive Voice Response

The Interactive Voice Response (IVR) system has a recording conversion utility that supports file formats that are similar to the formats that VAL requires. However, the conversion utility can read only PCM-format announcement files.

To convert an announcement file for use on an IVR system:

1. If the companding format of the file is already PCM, go to Step 5.
If you are unsure what the file format is, continue with Step 2.
2. At a computer, open the sound recording application.
3. Open the file that you want to convert.
4. Save the announcement (**Convert Now** or **Save As**) with these parameters:
 - Format: PCM
 - Bits/Sample: 8
 - Sample Rate: 8-KHz
 - Mono (channels = 1)

Note:

The recording conversion utility requires that announcement files be in PCM format. VAL files must be in CCIT A-Law or m-Law format.

5. Open the file in the recording conversion utility.
6. Convert the file to SSP format.

Deleting VAL announcements

Prerequisites

You must complete the following actions before you can delete VAL announcements:

- Look up the announcement information. Type **list directory board**. Press **Enter**.
- Determine which announcements that you want to delete, either by extension or file name.
- Decide whether you are:
 - [Using the SAT to delete individual VAL announcement files](#)
 - [Using the SAT to delete all VAL announcements on a circuit pack](#)
 - [Deleting and erasing announcements](#)

Note:

The system denies any attempt to delete an announcement while the announcement is playing, being transferred, or backed up to Flash memory.

Using the SAT to delete individual VAL announcement files

To use the System Administration Terminal (SAT) to delete an announcement:

1. Type **remove file board board-location /annc/filename.wav**, where **filename.wav** is the name of the file that you want to delete. Press **Enter**.

Note:

File names are case sensitive, and require the .wav file extension.

The **/annc** portion of the command directs the system to the announcement subdirectory on the VAL circuit pack. The **/Closed.wav** portion indicates to delete the file **Closed.wav**.

Using the SAT to delete all VAL announcements on a circuit pack

To use the System Administration Terminal (SAT) to delete all announcement files on a VAL circuit pack:

1. Type **busyout board board-location**, where **board-location** is the 5-character number that is assigned to the circuit pack. Press **Enter**.

Note:

When the VAL circuit pack is busied out,

- Both the RSCL and the Ethernet ports are busied out.
- The firmware takes down the Ethernet link.

- FTP is disabled because the Ethernet link is not functioning.
 - Announcements on that circuit pack cannot play.
2. Type **erase announcements board board-location**, where **board-location** is the 5-character number that is assigned to the circuit pack. Press **Enter**.

**CAUTION:**

This command deletes the specified announcement file in both RAM and Flash memory. The circuit pack firmware ignores the protect flag (**Pro** field) when you erase the announcement files.

3. Type **list directory board**. Press **Enter**.
4. Verify that no files are listed.

Note:

The announcement directory on the TN2501AP or the G700 Media Gateway is **/annc**.

5. Type **list integrated-annc-boards**. Press **Enter**.

Check the list. The **Length in Seconds** field shows **0** if the announcement was deleted.

To use a system telephone to delete VAL announcements, see [Deleting and erasing announcements](#).

Using FTP to Manage VAL announcements

This section includes information on how to set up and terminate a file transfer protocol (FTP) session, and outlines announcement tasks that you can perform in an FTP session.

An FTP session has three basic components:

- [Setting up an FTP session](#)
- [Performing tasks in an FTP session](#)
- [Ending an FTP session](#)

**SECURITY ALERT:**

Read and observe all Security Alerts regarding enabling and disabling the VAL (TN2501AP or embedded G700 Gateway circuit packs) file system and FTP sessions.

Setting up an FTP session

To set up an FTP session into the VAL circuit pack, you must:

- Prepare the VAL circuit pack for the FTP session. This action:
 - Allows an FTP session on an individual VAL circuit pack
 - Creates an ftp-login and ftp-password for that session
- Start an FTP session from a computer or a network management terminal. Before you can start the FTP session, you must know the:
 - IP address of the VAL circuit pack.
 - ftp-login and ftp-password of the VAL circuit pack.

Preparing the VAL circuit pack for the FTP session

To prepare the VAL circuit pack for the FTP session, including setting the user name and the password:

1. Type **enable filesystem board board-location login ftp-username ftp-password**, where **ftp-username** is a string of 3 to 6 alphanumeric characters, and **ftp-password** is a string of 7 to 11 alphanumeric characters. Press **Enter**.

For example, the command **enable filesystem board 01A11 login romeo shakespeare** enables an FTP session into the VAL circuit pack in Cabinet 1, carrier A, slot 11. The ftp-username (3 to 6 characters) for this session is **romeo**, and the ftp-password (7 to 11 characters) is **shakespeare**.

When the FTP session on the circuit pack is enabled, the announcement and the firmware files are available to anyone who knows the IP address of the VAL circuit pack, the ftp-username, and the ftp-password.



SECURITY ALERT:

Avaya recommends that you use a unique ftp-login and ftp-password for each FTP session.

If you are unfamiliar with FTP client application software, contact your network administrator for information about access to an FTP session.

The following points apply to FTP sessions into the VAL circuit pack:

- In FTP sessions, file names are case sensitive, and require the .wav file extension.
- Only one FTP session can be active at a time. If an FTP session is already active for a particular VAL circuit pack, the system denies a second attempt to establish an FTP session from another remote host.

- The VAL circuit pack has two user-accessible directories:
 - /annc for playable announcements.
 - / (root) for temporary storage of embedded software updates. Use this directory only for software updates.
- FTP sessions time out after 10 minutes of inactivity.

Starting an FTP session

To start an FTP session:

1. At the FTP client, type **ftp val-ip-address**, where **val-ip-address** matches the VAL IP address that is administered on the **IP Node Names** screen. Press **Enter**.
2. At the username prompt, type the ftp-username. Press **Enter**.
3. At the password prompt, type the ftp-password. Press **Enter**.

The system displays the message **User logged in**.

Note:

Once you are logged in, you are in the announcements directory (/annc).

4. If you are moving files to or from the VAL circuit pack, you must set the system to binary mode. To set the system to binary mode, at the FTP client, type **bin**. Press **Enter**.

The system sets the **Types** field to **I**, binary mode.



CAUTION:

If you do not transfer announcement files in binary mode, the files can be corrupted, and the FTP session can fail.

Performing tasks in an FTP session

Once the FTP session is established, you can perform any of these announcement tasks:

- [Moving announcements from the VAL circuit pack](#)
- [Using FTP to delete VAL announcements](#)
- [Moving announcements to a VAL circuit pack or another LAN device](#)
- [Combining copy and move tasks](#)

Moving announcements from the VAL circuit pack - When you move a file from the VAL circuit pack, you are either:

- Backing up (archiving) an announcement file
- Copying an announcement to another VAL circuit pack (restoring)

Moving a file in an FTP session means that you copy the file from the VAL circuit pack to the default directory of the FTP client computer.

Announcements

To back up or save an announcement from the VAL circuit pack to the client computer through an FTP session:

1. At the FTP client computer, type **get filename.wav**, where **filename.wav** is the name of the announcement file. Press **Enter**.

The system writes the announcement file to the directory from which you started the FTP session.

Note:

FTP upload or download of announcement files does not preserve the created time stamp. The file receives the current date and time when the file is written to the circuit pack or to the computer.

2. List the contents of the FTP client directory and ensure that the announcement file is listed.
3. End the FTP session. See [Ending an FTP session](#) for the procedure.

Using FTP to delete VAL announcements - You can use FTP to delete an announcement from a TN2501AP circuit pack or from a LAN device.

Note:

The system denies any attempt to delete an announcement while the announcement is playing, being transferred, or backed up to Flash memory.

To delete an announcement on a TN2501AP circuit pack through an FTP session:

1. Ensure that you complete the steps in [Setting up an FTP session](#).
2. At the computer client, type **delete filename.wav**, where **filename.wav** is the name of the announcement file. Press **Enter**.

Note:

The system immediately removes the announcement file from volatile RAM memory. Approximately 5 minutes later, the system removes the announcement file from nonvolatile ROM Flash memory.

3. List the contents of the announcement directory, and ensure that the file is not listed.

Note:

The .wav file extension on the announcement files is visible when you view the announcement directory from the FTP client.

4. End the FTP session. See [Ending an FTP session](#) for the procedure.
5. At the SAT, type **change announcements**. Press **Enter**.

The system displays the **Announcements/Audio Sources** screen ([Figure 15: Announcements/Audio Sources screen](#) on page 133).

6. Delete the entire line that is associated with the announcement.
7. Press **Enter** to save your changes.

Moving announcements to a VAL circuit pack or another LAN device - You can copy an announcement file on the VAL circuit pack to another LAN device. Ensure that you *did not just administer* the announcement on the **Announcements/Audio Sources** screen. If announcement administration precedes the file transfer:

- The announcement appears with a zero (0) length on the **Integrated Announcements** screen.
- The **Time Remaining** field on the **Integrated Announcements** screen does not refresh to reflect the presence of the new announcement file on the circuit pack.

Use the following procedure to ensure that the announcement length is accurate:

1. Administer the announcement on Communication Manager with the **change announcements** command. Use the identical file name in the **Name** field *without* spaces or the .wav file extension.
2. Try to play the announcement that was administered first and transferred second. The system returns a busy signal at the first play attempt.
3. Try to play the announcement that was administered first and transferred second in a telephone access session. Again, the system returns a busy signal at the first play attempt.
4. Rerecord this announcement with the same filename at a system telephone. See [Recording and changing announcements](#) for the procedure.

To copy an announcement to a VAL circuit pack or another LAN device:

1. At the FTP client, type **put filename.wav**, where **filename.wav** is the name of the announcement file. Press **Enter**.
2. List the contents of the VAL announcement directory or the LAN device, and ensure that the announcement file is listed.

Note:

FTP upload or download of announcement files does not preserve the created time stamp. The file receives the current date and time when the file is written to the circuit pack or to a computer.

3. After you ensure that the announcement is on the VAL circuit pack, administer the announcement on Communication Manager with the **change announcements** command. Use the identical file name in the **Name** field *without* spaces or the .wav file extension.
4. End the FTP session. See [Ending an FTP session](#) for the procedure.

Combining copy and move tasks - When you combine copy (the **get** command) and move (the **put** command) announcement files, you can rearrange VAL announcements.

Note:

To move an announcement to a VAL circuit pack from another VAL circuit pack in an FTP session, you must first establish an FTP session into the circuit pack from which you are restoring an announcement.

1. List the directory contents of the circuit pack that contains the announcement that you want to copy. Ensure that the announcement file is listed.
2. At the FTP client, type **get filename.wav**, where **filename.wav** is the name of the announcement file. Press **Enter**.
The system writes a copy of the file to the directory from which you started the FTP session.
3. List the contents of the FTP client directory, and ensure that the announcement is listed.
4. End the FTP session to the circuit pack *from which you copied the announcement file*. See [Ending an FTP session](#) for the procedure.
5. Set up a new FTP session into the destination VAL circuit pack. See [Setting up an FTP session](#) for the procedure.
6. At the FTP client, type **put filename.wav**, where **filename.wav** is the name of the announcement file. Press **Enter**.
7. List the contents of the VAL announcement directory, and ensure that the announcement is listed.
8. End the FTP session to the circuit pack *to which you copied the announcement file*. See [Ending an FTP session](#) for the procedure.

Ending an FTP session - FTP sessions to a VAL circuit pack originate at the FTP client end.

To end an FTP session, you can:

1. Type **bye** or **quit** to log out from the FTP client. Press **Enter**
2. Type **disable filesystem board board-location**, where **board-location** is the 5-character number that is assigned to the circuit pack. Press **Enter**. This command clears the ftp-username and the ftp-password.
3. Allow the system to time out after 10 minutes of inactivity.



SECURITY ALERT:

A higher degree of system security is provided if you both log out of the FTP session and disable the VAL circuit pack.

Note:

If you only disable the circuit pack file system, you can continue your FTP session. However, new FTP session logins are not allowed.

Recording announcements for TTY callers

Record announcements for Teletypewriter device (TTY) callers in the same way as you record voice announcements. However, instead of recording from the handset of your telephone, you record from a TTY device. You can use an acoustic coupler into which you place the telephone handset to attach the device to your telephone, or plug the TTY device directly into the back of a digital telephone. After you call the announcement extension, and press **1** to record, you type the announcement into the TTY device.

If you use an acoustic coupler to connect your telephone for recording, you can record TTY and voice into a single announcement. In this case, after you press **1** to record, you can type the TTY message, and then immediately pick up the handset to record the voice message. For this type of recording, digital telephones also offer the option to press the pound key (#) to complete the recording, which eliminates any extraneous noise at the end of the recording. Unfortunately, this method for combined TTY and voice recordings is likely to create extraneous noise in the middle of your announcements.

A better alternative to recording with your telephone is to create .wav files on other recording applications, and then copy and save the .wav files to your announcement circuit pack. See [Moving announcements to a VAL circuit pack or another LAN device](#) for the procedure. In this case, the announcement files must meet the same criteria as voice recordings. See [Announcement file format requirements](#) for more information.

Reports for Announcements

The following reports provide information about the Announcements feature:

- Denial Events Log

If a working VAL announcement file is deleted over FTP, the next attempt to play the announcement fails, and the system adds a software event to the Denial Events Log. You can view the Denial Events log to see if the announcement was deleted, and to see if other events occurred that are related to announcements. To access this report, type **display events** and select **denial** in the **Category** field.

- Announcement Measurements

You can view a report of announcement measurements. This report includes how many times an announcement was queued to play, how many callers dropped while in the queue, and how many times all announcement ports were busy during the report period.

For detailed information on these reports and the associated commands, , or see *Reports for Avaya Communication Manager*.

Considerations for Announcements

This section provides information about how the Announcements feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Announcements under all conditions. The following considerations apply to Announcements:

- Announcements that are recorded on announcement circuit packs without built-in memory are lost if the announcements are not saved to system memory before power is shut down, or the circuit pack is reset or removed.

Interactions for Announcements

This section provides information about how the Announcements feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Announcements in any feature configuration.

- Automatic Call Distribution (ACD)

Recorded announcements are used extensively for ACD, Call Vectoring, Call Prompting, Expert Agent Selection (EAS), Vector Directory Number (VDN) of Origin Announcement, Direct Department Calling, and Uniform Call distribution (UCD) features. See the individual features for interaction details.

- Automatic Wakeup

Recorded Announcement allows Automatic Wakeup to use the built-in TN750B or later-suffix announcement circuit pack, in place of the Audichron adjunct.

If you use an integrated, multiple-integrated, or external type of announcement for Automatic Wakeup, you can also administer the announcement to repeat and to allow "barge-in" as a queue type. The benefit of repeating announcements and "barge-in" queues is that you do not need a separate port for each wakeup announcement. When guests go off-hook to receive an announcement at a particular time, the guests use only one port. The message repeats on the port until the last guest goes off-hook, and the message ends.

Troubleshooting announcements

This section lists the known or common problems that users might experience with the Announcements feature.

Problem	Possible cause	Action
Poor sound quality.	Bad file format.	Ensure that the file formats are compatible. A good announcement file format must have the following parameters: ● 8-Kbps sample rate ● 8-bit resolution (bits per sample) ● A-law or Mu-law companding format ● Mono (channels = 1)
	Incorrect companding mode.	Ensure that the same companding mode is administered on page 1 of the Location Parameters screen (type change location-parameters) for both environments.
An announcement does not play.	If a working VAL announcement file is deleted over FTP, the next attempt to play the announcement fails, and the system adds a software event to the Denial Events Log.	View the Denial Events log to determine if the announcement was deleted. If the announcement was deleted, restore or rerecord the announcement.
The system displays error code E28 when you attempt to restore announcements.	An integrated announcement circuit pack is not installed in the system.	Install an integrated announcement circuit pack.
The system displays error code E31 when you attempt to restore announcements.	A call is connected to the announcement on the circuit pack and the port is busy.	Wait for the call to disconnect, and try to restore announcements again.

Attendant Auto Start and Don't Split

Use the Attendant Auto Start and Don't Split features to allow an attendant to press any key on the keypad to start a call without the need to first press the **Start** button. If the attendant is on an active call and presses digits on the keypad, the system automatically splits the call and dials the second call.

The Don't Split feature deactivates the Auto Start feature, and allows the system to send touch tones over the line.

Detailed description of Attendant Auto Start and Don't Split

This section provides a detailed description of the Attendant Auto Start and Don't Split features.

Auto Start and Don't Split are two features that work together. These two features reduce the number of buttons that attendants must press to handle calls.

Auto Start

If the attendant is on a call and presses any key on the keypad, the system automatically splits the current call, places the call on hold, and dials the next call. The system disables the **Start** button, and does not allow end-to-end signaling.

To extend a current call to another extension, the attendant dials the extension. The system automatically places the current call on hold. Once the called party answers, the attendant presses the **Release** button to extend the call.

Don't Split

To deactivate the Auto Start feature and not split a current call, the attendant presses the **Don't Split** button. One use of the Don't Split feature is to send touchtones to pick up answering machine messages. When the Don't Split feature is active, parties on the call hear the keys that the attendant presses.

To reactivate the Auto Start feature and allow end-to-end signaling, the attendant can:

- Press the **Don't Split** button again
- Press Cancel
- Allow the current call to terminate

Administering Attendant Auto Start and Don't Split

The following steps are part of the administration process for the Attendant Auto Start and Don't Split features:

- [Assigning a Don't Split button](#)

This section describes:

- Any prerequisites for administering the Attendant Auto Start and Don't Split features
- The screens that you use to administer the Attendant Auto Start and Don't Split features
- Complete administration procedures for the Attendant Auto Start and Don't Split features

Prerequisites for administering Attendant Auto Start and Don't Split

You must complete the following actions before you can administer the Attendant Auto Start and Don't Split features:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Auto Start and Don't Split

Screen name	Purpose	Fields
Attendant Console	Assign a Don't Split button.	Any unassigned button in the Feature Button Assignments area

Assigning a Don't Split button

To assign a **Don't Split** button:

1. Type **change attendant *n***, where *n* is the number of the attendant console. Press **Enter**.

The system displays the **Attendant Console** screen.

2. Click **Next** until you see the **Feature Button Assignments** area ([Figure 16: Attendant Console screen](#) on page 155).

Figure 16: Attendant Console screen

change attendant 1
Page 3 of 4

ATTENDANT CONSOLE

FEATURE BUTTON ASSIGNMENTS

1: split_____

2: dont-split

3: act-tr-grp

4: deact-tr-g

5: _____

6: hold _____ *

7: _____

8: aux-work RC: Grp:

9: _____

10: _____

11: _____

12: _____

13: _____

14: _____

15: _____

16: _____

17: _____

18: _____

19: forced-rel

20: _____

21: _____

22: _____

23: night-serv *

24: pos-busy__ *

3. In the **Feature Button Assignments** area, assign **dont-split** to an available button.

In this example, we assign **dont-split** to button **2**.

4. Press **Enter** to save your changes.

Reports for Attendant Auto Start and Don't Split

The following reports provide information about the Attendant Auto Start and Don't Split features:

- None

Considerations for Attendant Auto Start and Don't Split

This section provides information about how the Attendant Auto Start and Don't Split features behave in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Auto Start and Don't Split under all conditions. The following considerations apply to Attendant Auto Start and Don't Split:

- If an attendant enables Auto Start, and then dials an Automatic Alternate Routing (AAR) number where the values in the **min** and the **max** fields in the **AAR Analysis Table** are not equal, the attendant must press the pound key (#) after the digit string. If the attendant does not press the pound key, the system does not process the call.

Interactions for Attendant Auto Start and Don't Split

This section provides information about how the Attendant Auto Start and Don't Split features interact with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Auto Start and Don't Split in any feature configuration.

- Call Detail Recording (CDR) Account Code Dialing
If the system is using Call Detail Recording Account Code Dialing, the Auto Start and the Don't Split features are not activated.
- Visually Impaired Service (VIS)
If VIS is activated or deactivated while Don't Split is active, the system automatically deactivates the Don't Split feature.

Attendant Auto-Manual Splitting

Use the Attendant Auto-Manual Splitting feature to allow the attendant to announce an incoming call to a user without being heard by the calling party. The attendant can also use the Attendant Auto-Manual Splitting feature to consult privately with the called party without being heard by the calling party.

Detailed description of Attendant Auto-Manual Splitting

This section provides a detailed description of the Attendant Auto-Manual Splitting feature.

The Attendant Auto-Manual Splitting feature allows the attendant to split the calling party away from a conversation. The attendant can then confidentially determine if the called party wants to accept the call.

The system automatically activates the Attendant Auto-Manual Splitting feature when the attendant, who is active on a call, presses any of the following buttons:

- Start
- An extension
- Any Hundreds Select button plus an extension
- Trunk Group Select

Administering Attendant Auto-Manual Splitting

The following steps are part of the administration process for the Attendant Auto-Manual Splitting feature:

- The system activates the Attendant Auto-Manual Splitting feature when you set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

This section describes:

- Any prerequisites for administering the Attendant Auto-Manual Splitting feature
- The screens that you use to administer the Attendant Auto-Manual Splitting feature
- Complete administration procedures for the Attendant Auto-Manual Splitting feature

Prerequisites for administering Attendant Auto-Manual Splitting

You must complete the following actions before you can administer the Attendant Auto-Manual Splitting feature:

- None

Screens for administering Attendant Auto-Manual Splitting

Screen name	Purpose	Fields
Attendant Console	Set up an attendant console.	All

Reports for Attendant Auto-Manual Splitting

The following reports provide information about the Attendant Auto-Manual Splitting feature:

- None

Considerations for Attendant Auto-Manual Splitting

This section provides information about how the Attendant Auto-Manual Splitting feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Auto-Manual Splitting under all conditions. The following considerations apply to Attendant Auto-Manual Splitting:

- None

Interactions for Attendant Auto-Manual Splitting

This section provides information about how the Attendant Auto-Manual Splitting feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Auto-Manual Splitting in any feature configuration.

- None

Attendant Backup

Use the Attendant Backup feature to give access to most attendant console features from specially administered backup telephones. This allows you to answer calls more promptly, thus providing better service to your callers.

When the attendant console is busy, you can answer overflow calls from the backup telephones by pressing a button or dialing a Feature Access Code (FAC). You can then process the calls as if you are at the attendant console.

You can assign the Attendant Backup feature to only multiappearance telephones. Avaya recommends the following multiappearance telephone models as a backup for the attendant:

- 6408
- 6416
- 6424

Detailed description of Attendant Backup

This section provides a detailed description of the Attendant Backup feature.

You can configure your system to have backup telephones for the attendant. With the Attendant Backup feature, designated users can answer calls that the attendant cannot immediately answer. These designated users can also provide some of the services that the attendant usually provides.

Designated users can access some attendant console features from the backup telephones when the:

- Queue of received calls reaches one of the following administered warning levels:
 - Number of calls in the queue
 - Time that a particular call has been in the queue
- Attendant console is in Night Service

A user with console permissions can:

- Activate Automatic Wakeup for another extension
- Activate and deactivate controlled restrictions for another extension, or a group of extensions
- Activate and deactivate Do Not Disturb for another extension, or a group of extensions
- Activate Call Forwarding for another extension

Attendant Backup

- Add and remove agent skills
- Record integrated announcements

To assign the Attendant Backup capabilities, you use **Console Permissions** field on the **Class of Service** screen.

Attendant Backup supports the following capabilities:

- [Attendant Backup Alerting](#)

Attendant Backup Alerting

The Attendant Backup Alerting feature notifies the backup telephones that the attendant needs assistance to handle calls. The system provides both audible and visual alerting to backup telephones when the calls in the attendant queue reach the administered warning levels. When the queue drops below the administered warning level, alerting stops.

Audible alerting also occurs when the attendant console is in Night Service, regardless of the size of the attendant queue.

Once the system alerts the backup telephones, designated users can answer an attendant call by:

- Pressing the **atd-qcalls** button
- Dialing the feature access code (FAC) for Trunk Answer Any Station (TAAS) feature.

Administering Attendant Backup

The following steps are part of the administration process for the Attendant Backup feature:

- [Setting up Attendant Backup telephones](#)

This section describes:

- Any prerequisites for administering the Attendant Backup feature
- The screens that you use to administer the Attendant Backup feature
- Complete administration procedures for the Attendant Backup feature

Prerequisites for administering Attendant Backup

You must complete the following actions before you can administer the Attendant Backup feature:

- Assign a Class of Service (COS) value to the multiappearance telephones that you use for Attendant Backup. On the **Class of Service** screen, you must set the **Client Room** field to **n**, and the **Console Permissions** field to **y**.

For more information, see the Considerations for Attendant Backup, as well as the "Class of Service" feature.

- On the **Feature Access Code (FAC)** screen, type a FAC in the **Trunk Answer Any Station** field. Then share the FAC with each of the attendant backup users. For more information, see the "Feature Access Code" feature.
- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Backup

Screen name	Purpose	Fields
Class of Service	Ensure that the Attendant Backup feature is set up correctly.	Client Room
	Assign console permissions to the backup telephones.	Console Permissions
Console Parameters	Administer the Attendant Backup Alerting feature.	Backup Alerting
	Set the queue warning parameters.	● Calls in Queue Warning ● Time in Queue Warning (sec)
Feature Access Code (FAC)	Assign a FAC for backup telephone users.	Trunk Answer Any Station
Station	Assign an atd-qcalls feature button for backup telephone users.	Any available button field in the Feature Button Assignments area.

Setting up Attendant Backup telephones

To allow your system to alert the backup telephones, perform the following procedures:

- [Configuring your system](#)
- [Defining Class of Service console permissions](#)
- [Assigning console permissions to backup telephones](#)
- [Training designated users](#)

Configuring your system

To configure the system for the Attendant Backup feature:

1. Type **change console-parameters**. Press **Enter**.

The system displays the **Console Parameters** screen ([Figure 17: Console Parameters screen](#) on page 162).

Figure 17: Console Parameters screen

change console-parameters		Page 1 of 5
CONSOLE PARAMETERS		
Attendant Group Name: OPERATOR		
COS: 0	COR: 0	
Calls in Queue Warning: 5	Attendant Lockout? y	
Ext Alert Port (TAAS):		
CAS: none		
IAS (Branch)? n	Night Service Act. Ext.:	
IAS Att. Access Code:	IAS Tie Trunk Group No.:	
Backup Alerting? y	Alternate FRL Station:	
Attendant Vectoring VDN:	DID-LDN Only to LDN Night Ext? n	

2. In the **Backup Alerting** field, type **y**.

The system can now notify any telephone that has an **atd-qcalls** feature button when the:

- Attendant queue reaches the warning level
- Console is in night service

3. In the **Calls in Queue Warning** field, type the maximum number of calls that can be in the attendant queue before the system alerts the backup telephones.

In this example, we limit the number to five calls.

4. Click **Next** until you see the **Time in Queue Warning (sec)** field ([Figure 18: Console Parameters screen](#) on page 163).

Figure 18: Console Parameters screen

change console-parameters	Page 2 of 5	
CONSOLE PARAMETERS		
TIMING		
Time Reminder on Hold (sec): 10	Return Call Timeout (sec): 10	
Time in Queue Warning (sec): 120		
INCOMING CALL REMINDERS		
No Answer Timeout (sec): 20	Alerting (sec): 40	
Secondary Alert on Held Reminder Calls? y		
ABBREVIATED DIALING		
List1: group 1	List2:	List3:
SAC Notification? n		
COMMON SHARED EXTENSIONS		
Starting Extension:		Count:

5. In the **Time in Queue Warning (sec)** field, type the maximum number of seconds that a caller can be in the attendant queue before the system alerts the backup telephones.

In this example, we assign a limit of 120 seconds.

6. Press **Enter** to save your changes.

Defining Class of Service console permissions

To define Class of Service (COS) console permissions for the backup telephones:

1. Type **change cos**. Press **Enter**.

The system displays the **Class of Service** screen ([Figure 19: Class of Service screen](#) on page 164).

Figure 19: Class of Service screen

change cos	CLASS OF SERVICE																Page 1 of 1
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
Auto Callback	n	y	y	n	y	n	y	n	y	n	y	n	y	n	y	n	
Call Fwd-All Calls	n	y	n	y	y	n	n	y	y	n	n	y	y	n	n	y	
Data Privacy	n	y	n	n	n	y	y	y	y	n	n	n	n	y	y	y	
Priority Calling	n	y	n	n	n	n	n	n	n	y	y	y	y	y	y	y	
Console Permissions	n	n	n	n	n	n	n	y	n	n	n	n	n	n	n	n	
Off-hook Alert	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Client Room	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Restrict Call Fwd-Off Net	n	y	y	y	y	y	y	y	y	y	y	y	y	y	y	y	
Call Forward Busy/DA	n	n	n	n	n	n	n	y	n	n	n	n	n	n	n	n	
Personal Station Access (PSA)	n	n	n	n	n	n	n	y	n	n	n	n	n	n	n	n	
Extended Forwarding All	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Extended Forwarding B/DA	n	n	n	n	n	n	n	y	n	n	n	n	n	n	n	n	
Trk-to-Trk Restriction Override	n	n	n	n	n	n	n	y	n	n	n	n	n	n	n	n	
QSIG Call Offer Originations	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	

2. In the **Console Permissions** row, change **n** to **y** in a numbered column.

Each column is a COS identification number. Sixteen classes of service (COS) are available. In this example, we assign **Console Permissions** to COS 7.

3. To assign any other permissions for this COS, change **n** to **y** in the corresponding column.
4. Press **Enter** to save your changes.

Assigning console permissions to backup telephones

To assign console permissions to backup telephones:

1. Type **change station *n***, where ***n*** is the extension of the backup telephone. Press **Enter**.

In this example, we change extension 4345. The system displays the **Station** screen ([Figure 20: Station screen](#) on page 165).

Figure 20: Station screen

change station 4345		Page 1 of 5
STATION		
Extension: 4345	Lock Messages? n	BCC: 0
Type:	Security Code:	TN: 1
Port:	Coverage Path 1:	COR: 1
Name:	Coverage Path 2:	COS: 7
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Personalized Ringing Pattern: 3	
Data Module? n	Message Lamp Ext: 1014	
Speakerphone: 2-way	Mute button enabled? y	
Display Language? English	Expansion Module?	
Model:		
	Media Complex Ext:	
	IP Softphone? y	

- In the **COS** field, assign the COS that you created for the console permissions.

In this example, we assign COS **7** to this telephone.

- Click **Next** until you see the **Feature Button Assignments** area ([Figure 21: Station screen](#) on page 165).

Figure 21: Station screen

change station 4345		Page 3 of 5
STATION		
FEATURE BUTTON ASSIGNMENTS		
9: crss-alert		
10: atd-qcalls		
11:		
12:		
13:		
14:		
15:		
16:		

4. In the **Feature Button Assignments** area, assign **atd-qcalls** to an available button.

In this example, we assigned **atd-qcalls** to button 10. The **atd-qcalls** button provides visual alerting for this telephone. When the **atd-qcalls** button:

- Is dark, the attendant queue contains no calls
- Shows a steady light, the attendant queue contains calls.
- Shows a flashing light, the number of calls in the attendant queue exceeds the limit that you set for the queue. At this point, the backup telephone user also hears an alert signal every 10 seconds.

5. Press **Enter** to save your changes.
6. Repeat this process for each backup telephone.

Training designated users

Finally, you must train the backup users. The backup users must know:

- How to interpret the **atd-qcalls** button lights
- If the telephones of the backup users do not have an **atd-qcalls** button, the FAC for the TAAS feature
- Your procedure for how to answer attendant calls
- Your procedure for how to transfer attendant calls

End-user procedures for Attendant Backup

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Attendant Backup:

- If the **atd-qcalls** button on your telephone is flashing, the number of calls in the attendant queue exceeds the maximum limit. You also hear an alert signal every 10 seconds. To answer the call, either:
 - Press the **atd-qcalls** button on your telephone
 - Dial the FAC for the TASS feature

Reports for Attendant Backup

The following reports provide information about the Attendant Backup feature:

- None

Considerations for Attendant Backup

This section provides information about how the Attendant Backup feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Backup under all conditions. The following considerations apply to Attendant Backup:

- Backup telephone users must meet the following criteria to answer alerting calls in the attendant queue:
 - Have a multiappearance telephone
 - Have an **atd-qcalls** feature button assigned to the telephone
 - Be assigned a Class of Service (COS) that has the **Client Room** COS field set to **n**. Classes of Service are defined on the **Class of Service** screen.

If the **Client Room** COS field is set to **y**, the user receives intercept treatment when the user tries to use the Attendant Backup feature.

- When the attendant console is in day mode and the Attendant Backup feature is disabled, backup telephone users do not hear the audible alert signal. Backup telephone users also cannot dial the Feature Access Code (FAC) for Trunk Answer Any Station (TAAS) to answer attendant calls.

Interactions for Attendant Backup

This section provides information about how the Attendant Backup feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Backup in any feature configuration.

- Ringer Cutoff

Activating the Ringer Cutoff feature disables the audible alerting signal. If a backup telephone has Ringer Cutoff activated, the system audibly alerts the telephone only when the attendant queue exceeds the queue warning level.

If Ringer Cutoff is not activated, the system audibly alerts the backup telephone every 10 seconds until the attendant queue falls below the queue warning level.

- Trunk Answer Any Station (TAAS)

If the system is in night mode and a TAAS port is not assigned, backup telephone users must dial the Feature Access Code (FAC) for Trunk Answer Any Station (TAAS) to answer queued calls.

- Tenant Partitioning

You cannot use the Attendant Backup feature if Tenant Partitioning is enabled.

Attendant Call Waiting

Use the Attendant Call Waiting feature to allow an attendant to notify a single-line telephone user, who is on an existing call, that another call is waiting. Once the attendant notifies the user, the attendant can answer other calls.

Detailed description of Attendant Call Waiting

This section provides a detailed description of the Attendant Call Waiting feature.

The system automatically activates the Attendant Call Waiting feature whenever an attendant originates or extends a call to a single-line telephone user who is on an existing call. When the system activates Attendant Call Waiting, the:

- Attendant hears a call waiting ringback tone
- Telephone user hears a call waiting tone
- Calling party does not hear a tone

The attendant can place a call in progress on hold. After the attendant answers the held call, the attendant can use the Hold button to return to the held call. The attendant can alternate between the two calls.

For example, assume that extension 123, a single-line telephone, is busy. An attendant extends an incoming call to extension 123. The attendant hears the call waiting ringback tone, which indicates that Attendant Call Waiting is activated. The attendant can:

- Announce the call-waiting condition to the calling party
- Cancel the Attendant Call Waiting feature, and ask the calling party to call again later
- Release the caller, or place the call on hold at the console

Releasing an attendant-originated call drops the call completely.

The user at extension 123 hears a call-waiting tone, and knows that a call is waiting. The user can:

- Terminate the existing call
- Place the existing call on hold, and answer the waiting call

If the user does not answer the waiting call before a preassigned time interval, the system returns the call to the attendant.

Administering Attendant Call Waiting

The following steps are part of the administration process for the Attendant Call Waiting feature:

- [Setting up single-line telephones](#)
- [Changing the call-waiting signal](#)
- [Modifying timed intervals](#)

This section describes:

- Any prerequisites for administering the Attendant Call Waiting feature
- The screens that you use to administer the Attendant Call Waiting feature
- Complete administration procedures for the Attendant Call Waiting feature

Prerequisites for administering Attendant Call Waiting

You must complete the following actions before you can administer the Attendant Call Waiting feature:

- The system activates the Attendant Call Waiting feature when you set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Call Waiting

Screen name	Purpose	Fields
Station	Allow the attendant to send calls to busy single-line telephones.	Att. Call Waiting Indication
Feature-Related System Parameters	Change the call-waiting signal.	Attendant Originated Calls
Console Parameters	Indicate the maximum number of seconds that a call can remain on hold before the system alerts the attendant.	Timed Reminder on Hold
	Indicate the maximum number of seconds that a call can remain on hold before the call returns to the attendant.	Return Call Timeout

Setting up single-line telephones

To allow the attendant to send calls to busy single-line telephones:

1. Type **change station *n***, where *n* is the single-line extension that you want to change. Press **Enter**.

The system displays the **Station** screen.

2. Click **Next** until you see the **Att. Call Waiting Indication** field ([Figure 22: Station screen](#) on page 171).

Figure 22: Station screen

change station 35001		Page 2 of 3
STATION		
FEATURE OPTIONS		
LWC Reception? audix	Coverage Msg Retrieval? y	
LWC Activation? y	Auto Answer: none	
LWC Log External Calls? n	Data Restriction? n	
CDR Privacy? n	Call Waiting Indication? n	
Redirect Notification? y	Att. Call Waiting Indication? y	
Per Button Ring Control? n	Distinctive Audible Alert? y	
Bridged Call Alerting? n	Adjunct Supervision? y	
Switchhook Flash? y		
Ignore Rotary Digits? y		
H.320 Conversion? n	Per Station CPN - Send Calling Number? _	
Service Link Mode: as-needed		
Multimedia Mode: basic	Audible Message Waiting? y	
MWI Served User Type:		
AUDIX Name: srl-aud		
	Coverage After Forwarding? _	
	Multimedia Early Answer? n	
	Direct IP-IP Audio Connections? n	
	IP Audio Hairpinning? n	
Emergency Location Ext: 75001		

3. Set the **Att. Call Waiting Indication** field to **y**.
4. Press **Enter** to save your changes.
5. Repeat this process for each single-line telephone on your system.

Changing the call-waiting signal


You can change the number of alerting tones (1, 2, or 3 beeps) that the user hears when the attendant extends a call. You can set the number of tones to indicate an internal call, an external call, and a priority call. The system defaults are:

- Internal: 1
- External: 2
- Priority: 3

To change the call-waiting signal:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen.
2. Click **Next** until you see the **Distinctive Audible Alerting** area
([Figure 23: Feature-Related System Parameters screen](#) on page 172).

 Figure 23: Feature-Related System Parameters screen

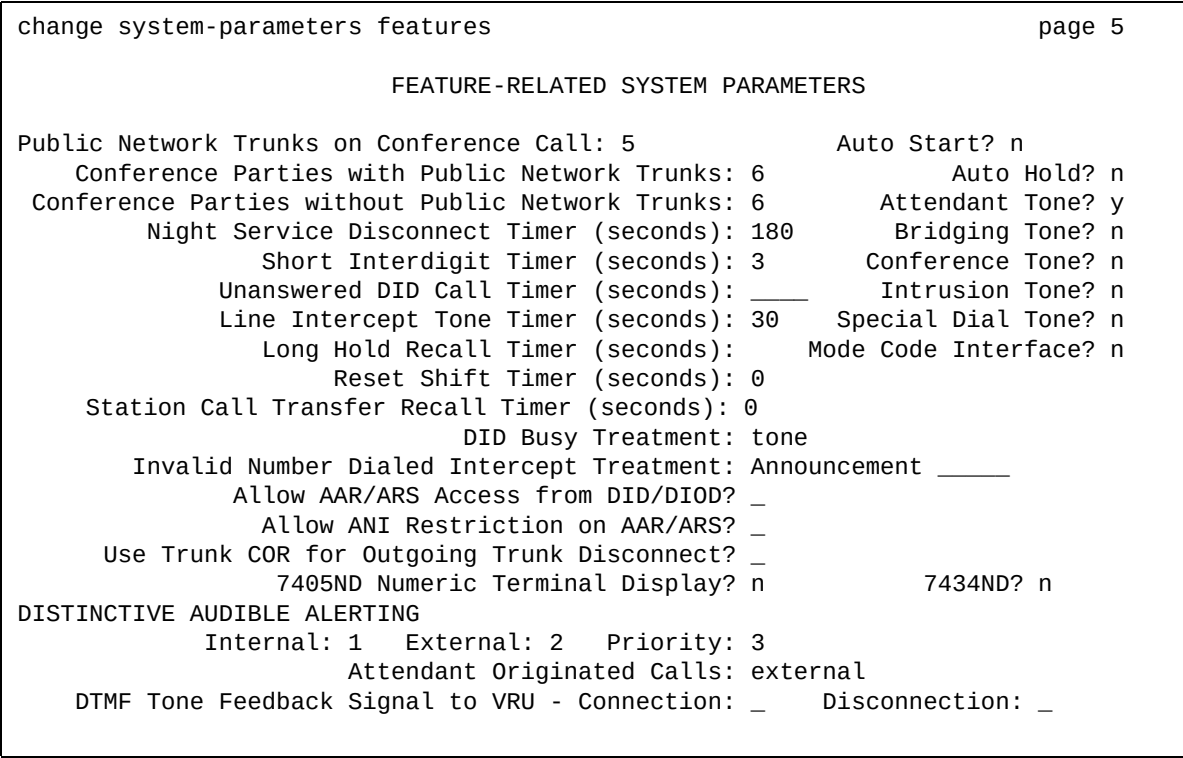

3. Change the number of tones (1, 2, or 3 beeps) that a user hears when the system activates the Attendant Call Waiting feature.

If you change one field, **Internal**, **External**, or **Priority**, Avaya recommends that you change all fields. A user then knows what kind of call the attendant is extending.

4. Press **Enter** to save your changes.

Modifying timed intervals

If either the Timed Reminder on Hold interval, or the Return Call Timeout interval, expires before the call is answered, the call returns to the attendant console.

To modify the timed intervals:

1. Type **change console-parameters**. Press **Enter**.

The system displays the **Console Parameters** screen.

2. Click **Next** until you see the **Timed Reminder on Hold** field and the **Return Call Timeout** field ([Figure 24: Console Parameters screen](#) on page 173).

Figure 24: Console Parameters screen

change console-parameters	Page 2 of 4	
CONSOLE PARAMETERS		
TIMING		
Time Reminder on Hold (sec): 30	Return Call Timeout (sec): 60	
Time in Queue Warning (sec): 30		
INCOMING CALL REMINDERS		
No Answer Timeout (sec): 20	Alerting (sec): 40	
Secondary Alert on Held Reminder Calls? y		
ABBREVIATED DIALING		
List1: group 1	List2:	List3:
SAC Notification? n		
COMMON SHARED EXTENSIONS		
Starting Extension:	Count:	

3. In the **Timed Reminder on Hold** field, type the maximum number of seconds that a call can remain on hold before the system alerts the attendant.

In this example, we set the interval to 30 seconds.

4. In the **Return Call Timeout** field, type the maximum number of seconds that a call can remain on hold before the call returns to the attendant.

In this example, we set the interval to 60 seconds.

Note:

You must allow at least 5 seconds for each ring at all points in a coverage path. This amount of time ensures that the entire calling path is completed before the system returns the call to the console.

5. Press **Enter** to save your changes.

Reports for Attendant Call Waiting

The following reports provide information about the Attendant Call Waiting feature:

- None

Considerations for Attendant Call Waiting

This section provides information about how the Attendant Call Waiting feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Call Waiting under all conditions. The following considerations apply to Attendant Call Waiting:

- Attendant Call Waiting applies only to calls that are made to single-line telephones within the system.
- Only one call can wait at a time.

Interactions for Attendant Call Waiting

This section provides information about how the Attendant Call Waiting feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Call Waiting in any feature configuration.

- Automatic Callback

Activating Automatic Callback at the called telephone denies Attendant Call Waiting.

- Call Coverage

The system redirects Attendant Call Waiting calls to coverage if the called telephone has Data Privacy or Data Restriction activated. The system redirects the call to coverage if all three of the following conditions are met:

- The Data Privacy or Data Restriction feature is activated
 - You assign call coverage to a telephone
 - The user activates Send All Calls, or coverage criteria is met
- The Coverage Don't Answer interval specifies how long that call remains directed to the called telephone before the system redirects the call to coverage. If Attendant Call Waiting is applicable on the call, the feature is active for the duration of the Don't Answer interval only. At the end of this interval, the system redirects the call to coverage.
 - If the Return Call Timeout (Timed Reminder) interval expires before the Don't Answer interval expires, the call does not go to coverage, but returns to the attendant console. If the Don't Answer interval expires first, the system redirects the call to coverage. The system can still return the call to the attendant console if a coverage point does not answer the call before the Return Call Timeout expires.
 - If the **Station Hunting** field is assigned, and the called telephone is busy, the system redirects the call to the **Hunt To Station Assignment** value.
 - If Send All Calls is active, or if the redirection criterion is Cover All Calls, the system immediately redirects the call to coverage instead of to Attendant Call Waiting.
 - An attendant can release an extended call at any point during the call with no affect on the preceding operations.

- Data Privacy and Data Restriction

Activating Data Privacy or Data Restriction at the called telephone denies Attendant Call Waiting.

- Direct Department Calling (DDC) and Uniform Call Distribution (UCD)

Calls to a DDC group or to a UCD group do not wait. However, calls can enter the group queue, if a queue is provided.

Attendant Call Waiting

- **Loudspeaker Paging**

Activating Loudspeaker Paging at the called telephone denies Attendant Call Waiting.

- **Music-on-Hold Access**

If the call is a trunk-transferred call that is administered to receive Music-on-Hold, the calling party hears music. Otherwise, the calling party hears ringing.

- **Recorded Telephone Dictation Access**

Activating Recorded Telephone Dictation Access at the called telephone denies Attendant Call Waiting.

Attendant Calling of Inward Restricted Stations

Use the Attendant Calling of Inward Restricted Stations feature to allow an attendant to override an inward restriction Class of Restriction (COR).

Detailed description of Attendant Calling of Inward Restricted Stations

This section provides a detailed description of the Attendant Calling of Inward Restricted Stations feature.

A telephone that is restricted from receiving inbound calls cannot receive public network, attendant-originated, or attendant-extended calls. The Attendant Calling of Inward Restricted Stations feature allows the attendant to override this restriction.

Administering Attendant Calling of Inward Restricted Stations

The following steps are part of the administration process for the Attendant Calling of Inward Restricted Stations feature:

- [Setting up Class of Restriction override](#)

This section describes:

- Any prerequisites for administering the Attendant Calling of Inward Restricted Stations feature
- The screens that you use to administer the Attendant Calling of Inward Restricted Stations feature
- Complete administration procedures for the Attendant Calling of Inward Restricted Stations feature

Prerequisites for administering Attendant Calling of Inward Restricted Stations

You must complete the following actions before you can administer the Attendant Calling of Inward Restricted Stations feature:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Calling of Inward Restricted Stations

Screen name	Purpose	Fields
Class of Restriction	Allow an attendant to override any Class of Restriction that is assigned to a telephone.	Restriction Override

Setting up Class of Restriction override

To set up Class of Restriction override:

1. In the **Class of Restriction** screen, set the **Restriction Override** field to **attendant**.

For more information, see the "Class of Restriction" feature.

Reports for Attendant Calling of Inward Restricted Stations

The following reports provide information about the Attendant Calling of Inward Restricted Stations feature:

- None

Considerations for Attendant Calling of Inward Restricted Stations

This section provides information about how the Attendant Calling of Inward Restricted Stations feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Calling of Inward Restricted Stations under all conditions. The following considerations apply to Attendant Calling of Inward Restricted Stations:

- None

Interactions for Attendant Calling of Inward Restricted Stations

This section provides information about how the Attendant Calling of Inward Restricted Stations feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Calling of Inward Restricted Stations in any feature configuration.

- None

Attendant Conference

Use the Attendant Conference feature to allow an attendant to set up a conference call for as many as six conferees, including the attendant. The attendant can add parties to the conference call from both inside and outside the system.

Detailed description of Attendant Conference

This section provides a detailed description of the Attendant Conference feature.

The Attendant Conference feature allows an attendant to set up a conference call for as many as six conferees, including the attendant. The conference call is held at the attendant console.

To set up a conference, the attendant dials the number of a conferee, and then presses the Split button to add the party.

Administering Attendant Conference

The following steps are part of the administration process for the Attendant Conference feature:

- [Setting up Attendant Conference](#)

This section describes:

- Any prerequisites for administering the Attendant Conference feature
- The screens that you use to administer the Attendant Conference feature
- Complete administration procedures for the Attendant Conference feature

Prerequisites for administering Attendant Conference

You must complete the following actions before you can administer the Attendant Conference feature:

- The system activates the Attendant Conference feature when you set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Conference

Screen name	Purpose	Fields
Feature-Related System-Parameters	Set up the Attendant Conference feature.	● Public Network Trunks on Conference Call ● Conference Parties with Public Network Trunks ● Conference Parties without Public Network Trunks

Setting up Attendant Conference

To set up Attendant Conference:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System-Parameters** screen.
2. Click **Next** until you see the **Public Network Trunks on Conference Call** field ([Figure 25: Feature-Related System-Parameters screen](#) on page 183).

Figure 25: Feature-Related System-Parameters screen

change system-parameters features Page 6 of 14

FEATURE-RELATED SYSTEM PARAMETERS

Public Network Trunks on Conference Call: 5	Auto Start? n
Conference Parties with Public Network Trunks: 6	Auto Hold? n
Conference Parties without Public Network Trunks: 6	Attendant Tone? y
Night Service Disconnect Timer (seconds): 180	Bridging Tone? n
Short Interdigit Timer (seconds): 3	Conference Tone? n
Unanswered DID Call Timer (seconds):	Intrusion Tone? n
Line Intercept Tone Timer (seconds): 30	Special Dial Tone? n
Long Hold Recall Timer (seconds): 0	Mode Code Interface? y
Reset Shift Timer (seconds): 0	
Station Call Transfer Recall Timer (seconds): 0	
DID Busy Treatment: tone	
Invalid Number Dialed Intercept Treatment: tone	
Allow AAR/ARS Access from DID/DIOD? y	
Allow ANI Restriction on AAR/ARS? n	
Use Trunk COR for Outgoing Trunk Disconnect? n	
7405ND Numeric Terminal Display? y	7434ND? n

DISTINCTIVE AUDIBLE ALERTING

Internal: 1	External: 2	Priority: 3
Attendant originated Calls: external		

DTMF Tone Feedback Signal to VRU - Connection: Disconnection:

3. In the **Public Network Trunks on Conference Call** field, type a number between 0 and 5. This number indicates the maximum number of public network trunks that are allowed on an attendant conference call.

In this example, we set the number to 5. If you set this field to 0, the **Conference Parties with Public Network Trunks** field does not appear.

4. In the **Conference Parties with Public Network Trunks** field, type a number between 3 and 6. This number indicates the maximum number of parties that are allowed on a conference call that involves a public network subscriber.

In this example, we set the number to 6.

5. In the **Conference Parties without Public Network Trunks** field, type a number between 3 and 6. This number indicates the maximum number of parties that are allowed on a conference call that involves no public network trunks.

In this example, we set the number to 6.

6. Press **Enter** to save your changes.

Reports for Attendant Conference

The following reports provide information about the Attendant Conference feature:

- None

Considerations for Attendant Conference

This section provides information about how the Attendant Conference feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Conference under all conditions. The following considerations apply to Attendant Conference:

- Use this feature whenever an attendant must talk with more than one party at the same time, or establish a conference call for parties who are outside the system.
- The attendant can set up only one conference call at a time. The attendant can hold a conference call on the console, or release the conference call.
- The attendant cannot handle other calls while the attendant sets up a conference call.
- No matter who establishes the call, once the attendant is one of the conferees, only the attendant can add another party to the call.

Interactions for Attendant Conference

This section provides information about how the Attendant Conference feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Conference in any feature configuration.

- Bridged Call Appearance
A user can press the Bridged Appearance button on the telephone and join a conference call only if no more than five parties are on the call.
- Call Vectoring
A vector directory number (VDN) can be included as a party in a conference call only after vector processing terminates for that call. Vector processing terminates, for example, after a successful route-to command.

- Trunk-to-Trunk Transfer

If Trunk-to-Trunk Transfer is disabled on the **Feature-Related System-Parameters** screen, and the attendant releases from a conference call that involves only trunk conferees, the system disconnects the trunks.

When a user of a BRI, digital, or hybrid multifunction telephone dials enough digits to route a call that might otherwise be routed differently if the user dials additional digits, the telephone does not recognize the Conference or the Transfer buttons. For the telephone to recognize the Conference or the Transfer buttons, the user must either delay dialing for 3-seconds, or dial the pound key (#) at the end of the dialed string. This action tells the system to route the call based on the digits that were already dialed, and not wait for additional digits. The system then completes the call.

Attendant conferencing might not operate properly if the central office (CO) does not provide answer supervision. In this case, the **Answer Supervision Timeout** and **Outgoing End of Dial** fields are set to the same nonzero number, and the **Receive Answer Supervision** field is set to **n**.

If the CO provides answer supervision, you can set the **Answer Supervision Timeout** field to **0**, and the **Receive Answer Supervision** field to **y**.

Attendant Control of Trunk Group Access

Use the Attendant Control of Trunk Group Access feature to allow the attendant to control outgoing and two-way trunk groups. The attendant usually activates this feature during periods of high use. This is helpful when an attendant wants to prevent telephone users from calling out on a specific trunk group. Some reasons are to reserve a trunk group for incoming calls or for a very important outgoing call.

This feature also prevents telephone users from directly accessing an outgoing trunk group that the attendant has controlled.

Detailed description of Attendant Control of Trunk Group Access

This section provides a detailed description of the Attendant Control of Trunk Group Access feature.

When an administered threshold for a trunk group is reached, a warning lamp for that trunk group lights on the attendant console. The attendant can then access control of that trunk group. To gain direct access to an outgoing trunk group, the attendant presses the button that is assigned to that trunk group.

When the Attendant Control of Trunk Group Access feature is activated:

- Internal callers who use a trunk access code to dial out are connected to the attendant
- The attendant can prioritize outgoing calls for the remaining trunks

The system processes Automatic Alternate Routing (AAR) and Automatic Route Selection (ARS) route pattern calls without the need for attendant control.

Each attendant console has 12 designated Trunk Hundreds Select buttons. These buttons can be administered for the Attendant Control of Trunk Group Access feature. You can also administer each console with up to 12 feature buttons for Trunk Hundreds Select buttons, which gives you up to 24 buttons to use for this feature.

Each Trunk Hundreds Select button has a busy lamp. The busy lamp lights when the telephones of all members of the trunk group are busy.

Note:

If you administer one of the two-lamp feature buttons on a basic console as a Trunk Hundreds Select button, use the bottom lamp as the busy lamp.

Attendant Control of Trunk Group Access

The Trunk Hundreds Select buttons have the following two additional lamps for Attendant Control of Trunk Group Access:

- Warn (warning) lamp

The warning lamp lights when the administered number of trunks are busy in the associated trunk group. You administer the **Busy Threshold** field on the associated **Trunk Group** screen to determine when to light this warning lamp.

- Cont (control) lamp

The control lamp lights when the attendant activates the Attendant Control of Trunk Group Access feature for the associated trunk group. You assign the **act-tr-grp** and **deact-tr-g** buttons on the **Attendant Console** screen to allow the attendant to activate and deactivate the trunk group access.

Administering Attendant Control of Trunk Group Access

The following steps are part of the administration process for the Attendant Control of Trunk Group Access feature:

- [Setting the trunk group threshold](#)
- [Assigning Attendant Control of Trunk Group Access buttons](#)

This section describes:

- Any prerequisites for administering the Attendant Control of Trunk Group Access feature
- The screens that you use to administer the Attendant Control of Trunk Group Access feature
- Complete administration procedures for the Attendant Control of Trunk Group Access feature

Prerequisites for administering Attendant Control of Trunk Group Access

You must complete the following actions before you can administer the Attendant Control of Trunk Group Access feature:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Control of Trunk Group Access

Screen name	Purpose	Fields
Trunk Group	Determine the threshold for when to light the warning lamp.	Busy Threshold
Attendant Console	Assign buttons to allow the attendant to activate and deactivate trunk group access.	Any unassigned buttons in the Feature Button Assignments area.

Setting the trunk group threshold

To set the trunk group threshold:

1. Type **change trunk-group *n***, where *n* is the number of the trunk group. Press **Enter**.

The system displays the **Trunk Group** screen ([Figure 26: Trunk Group screen](#) on page 190).

Figure 26: Trunk Group screen

change trunk-group 4
Page 1 of x

TRUNK GROUP

Group Number: 4	Group Type: _____	CDR Reports: _
Group Name: _____	COR: _	TN: _ TAC: _
Direction: _____	Outgoing Display? _	Trunk Signaling Type: _
Dial Access? _	Busy Threshold: _	Night Service: _
Queue Length: _		Incoming Destination: _
Comm Type: _____	Auth Code? _	
	Trunk Flash? _	
BCC: _	ITC? _____	

TRUNK PARAMETERS

Trunk Type (in/out): _____	Incoming Rotary Timeout(sec): _
Outgoing Dial Type: _____	Incoming Dial Type: _____
	Disconnect Timing(msec): _____
Digit Treatment: _____	Digits: _____
	Sig Bit Inversion: none
Analog Loss Group: _____	Digital Loss Group: _____
Incoming Dial Tone? _	
Incoming Calling Number - Delete: _	Insert: _____ Format: _____
Bit Rate: _____	Synchronization: _____ Duplex: _____
Disconnect Supervision - In? _ Out? _	
Answer Supervision Timeout: _____	Receive Answer Supervision? _

2. In the **Busy Threshold** field, type the number of trunks that must be busy to light the warning lamp on the attendant console. The range is from 1 to 255.

For example, a trunk group contains 30 trunks. If you want to alert the attendant when 25 or more trunks are in use, type **25**.

3. Press **Enter** to save your changes.

Assigning Attendant Control of Trunk Group Access buttons

To assign Attendant Control of Trunk Group Access buttons:

1. Type **change attendant *n***, where *n* is the number of the attendant console. Press **Enter**.

The system displays the **Attendant Console** screen.

2. Click **Next** until you see the **Feature Button Assignments** area ([Figure 27: Attendant Console screen](#) on page 191).

Figure 27: Attendant Console screen

change attendant 1
Page 3 of 4

ATTENDANT CONSOLE

FEATURE BUTTON ASSIGNMENTS			
1:	split_____		13: _____
2:	_____		14: _____
3:	act-tr-grp		15: _____
4:	deact-tr-g		16: _____
5:	_____		17: _____
6:	hold _____ *		18: _____
7:	_____		19: forced-rel
8:	aux-work	RC: Grp:	20: _____
9:	_____		21: _____
10:	_____		22: _____
11:	_____		23: night-serv *
12:	_____		24: pos-busy__ *

3. In the **Feature Button Assignments** area, assign **act-tr-grp** and **deact-tr-g** to two available buttons.

In this example, we assign **act-tr-grp** to button **3**, and **deact-tr-g** to button **4**.

4. Press **Enter** to save your changes.

Reports for Attendant Control of Trunk Group Access

The following reports provide information about the Attendant Control of Trunk Group Access feature:

- None

Considerations for Attendant Control of Trunk Group Access

This section provides information about how the Attendant Control of Trunk Group Access feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Control of Trunk Group Access under all conditions. The following considerations apply to Attendant Control of Trunk Group Access:

- None

Interactions for Attendant Control of Trunk Group Access

This section provides information about how the Attendant Control of Trunk Group Access feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Control of Trunk Group Access in any feature configuration.

- Authorization Codes

Authorization codes do not collect when a trunk group has an incoming destination set to the attendant.

- Automatic Route Selection (ARS) and Automatic Alternate Routing (AAR)

Activating Attendant Control of Trunk Group Access removes the controlled trunk groups from the ARS and the AAR patterns. Deactivating the feature reinserts the groups into the patterns. The system does not route ARS calls to the attendant.

- QSIG

QSIG trunks do not support Attendant Control of Trunk Group Access.

- Uniform Dial Plan (UDP)

Activating Attendant Control of Trunk Group Access removes the controlled trunk groups from preferences. Deactivating the feature allows the UDP to access the trunk groups.

Attendant Direct Extension Selection

Use the Attendant Direct Extension Selection (DXS) feature to allow an attendant to track the idle or busy status of an extension. This feature also allows an attendant to place or extend calls to extensions without the need to dial the extension.

The Attendant DXS feature is sometimes referred to as the Attendant Direct Extension Selection with Busy Lamp Field feature.

Detailed description of Attendant Direct Extension Selection

This section provides a detailed description of the Attendant Direct Extension Selection (DXS) feature.

With Attendant DXS, you can use either Standard or Enhanced DXS Tracking:

- **Standard DXS Tracking**

If your attendant console has one or more Hundreds Select buttons, the attendant can press both a Hundreds Select button and a DXS button to access an extension.

- **Enhanced DXS Tracking**

Use Enhanced DXS Tracking if your attendant console:

- Does not use Hundreds Select buttons
- Uses Hundreds Select buttons, but you have one or more hundreds groups that are not administered by a Hundreds Select button

To access an extension, the attendant can:

- Press a Group Select button
- Dial the first 2 or 3 digits of the extension
- Press the DXS button to access an extension

When the system tracks a group of extensions, the attendant can press the DXS button to place or extend subsequent calls to extensions in that group without the need to reselect the group. Whether the attendant uses a Hundreds Select button or the Group Select button, both capabilities eliminate the need to dial extensions.

Extensions might be telephones, hunt-group extensions, off-switch extensions such as uniform dial plan (UDP) extensions, or other extensions.

Whichever method you use to access and track DXS extensions, you can use a Group Display feature button to view the group of extensions that are currently being tracked. This button on the console indicates the range of extensions that the selector console is tracking.

Note:

An associated DXS lamp for a vector directory number (VDN) is always dark. The attendant can use the DXS button to place a call to a VDN.

Attendant DXS supports the following capabilities:

- [Standard DXS Tracking](#)
- [Enhanced DXS Tracking](#)

Standard DXS Tracking

The basic selector console has 8 Hundreds Select buttons, and 100 DXS buttons. The enhanced selector console has 20 Hundreds Select buttons, and 100 DXS buttons. You can assign 12 additional Hundreds Select buttons to feature buttons on the attendant console.

The total number of Hundreds Select buttons for each attendant, including both attendant console feature buttons and selector console buttons, cannot exceed 20.

Enhanced DXS Tracking

Enhanced DXS Tracking is helpful if you have more than 100 telephones, but use a console that does not have Hundreds Select buttons administered. Enhanced DXS Tracking is also helpful if you have more telephones than Hundreds Select buttons, and thus have hundreds groups that are administered with Hundreds Select buttons.

To use Enhanced DXS, assign a Group Select button on the **Attendant Console** screen. The attendant uses this button to track and extend calls to telephones that do not have associated Hundreds Select buttons. You can not use Enhanced DXS Tracking if your extensions have fewer than 3 digits.

Group Display button

You can administer a Group Display button on the **Attendant Console** screen to help the attendant track extension status. When the attendant presses this button, the system displays the range of extensions that are currently tracked by the selector console. Administer the Group Display button for either the feature area or the display area of the console.

If the attendant presses this button, the system identifies the digits that are associated with a Hundreds Select button. If no Hundreds Select button is lit, the system identifies the digits that were last entered with the Group Select button. The system continues to track the selected group of extensions until the attendant selects a new group of extensions.

Administering Attendant Direct Extension Selection

This section describes the prerequisites and the screens for the Attendant Direct Extension Selection (DXS) feature.

Prerequisites for administering Attendant Direct Extension Selection

You must complete the following actions before you can administer the Attendant Direct Extension Selection (DXS) feature:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Direct Extension Selection

Screen name	Purpose	Fields
Attendant Console	Assign a DXS button.	Any available button field in the Hundreds Select Button Assignments area

Reports for Attendant Direct Extension Selection

The following reports provide information about the Attendant Direct Extension Selection feature:

- None

Considerations for Attendant Direct Extension Selection

This section provides information about how the Attendant Direct Extension Selection (DXS) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Direct Extension Selection (DXS) under all conditions. The following considerations apply to Attendant Direct Extension Selection (DXS):

- With this feature, the attendant can place calls to:
 - 800 extensions with the basic selector console
 - 2,000 extensions with the enhanced selector console
 - Up to 99,999 extensions with the Group Select feature button (extension numbers from 100 to 99,999)

If the attendant is tracking a hundreds group with either a Hundreds Select button or the Group Select feature button, the attendant presses the DXS button to access an extension.

- This feature provides the attendant with a visual indication of the idle or busy status of the extensions that are assigned to the selected hundreds group. You can simultaneously monitor up to 100 extensions for idle or busy status.
- Enhanced DXS Tracking does not support extensions with fewer than 3 digits.
- Extension tracking is possible only for the system on which the attendant resides.

Interactions for Attendant Direct Extension Selection

This section provides information about how the Attendant Direct Extension Selection (DXS) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Direct Extension Selection (DXS) in any feature configuration.

- **Attendant Display**

When the attendant uses the Attendant Direct Extension Selection with Busy Lamp Field, the alphanumeric display identifies the call through the Attendant Display.

- **Call Coverage**

If Send All Calls is activated, or if the Call Coverage redirection criteria are met, the system redirects an extended call to the coverage path.

- **Centralized Attendant Service (CAS)**

When the attendant uses a DXS button to make a CAS call, the attendant hears ringback tone after a few seconds.

Attendant Direct Trunk Group Selection

Use the Attendant Direct Trunk Group Selection feature to allow the attendant direct access to an idle outgoing trunk. With this feature, the attendant gets direct access to an idle outgoing trunk when the attendant presses the button that is assigned to the trunk group. This feature eliminates the need for the attendant to memorize, or look up, and dial the trunk access codes (TACs) that are associated with frequently used trunk groups.

Detailed description of Attendant Direct Trunk Group Selection

This section provides a detailed description of the Attendant Direct Trunk Group Selection feature.

You can use up to 12 designated Trunk Hundreds Select buttons on each console. You can also administer up to 12 of the feature buttons as additional Trunk Hundreds Select buttons, for a total of 24 Trunk Hundreds Select buttons per console. Each button allows the attendant direct access to an outgoing select trunk group.

While an attendant talks on a call, the attendant can be split away that call and place a new call to the outgoing trunk that is specified by the trunk group select button. The attendant can then press Release to connect the split-away parties to the dial tone on the trunk. Or the attendant can dial the destination, and press Release to connect the split-away party to the called party.

All Trunk Hundreds Select buttons, including any that are administered on the feature buttons, have a Busy lamp. This lamp lights when all trunks in the associated trunk group are busy. If you administer one of the two-lamp feature buttons on a basic console as a Trunk Hundreds Select button, use the bottom lamp as the Busy lamp. Six of the designated buttons on a basic console, or all 12 designated buttons on an enhanced console also have a Warning lamp and a Control lamp. The Warning lamp lights when a preset number of trunks in the associated trunk group are busy. The Cont lamp lights when the attendant activates Attendant Control of Trunk Group Access for the associated trunk group.

You can assign Loudspeaker Paging zones instead of trunk groups to Trunk Hundreds Select buttons. The Busy lamp then indicates the idle or the busy status of the associated Loudspeaker Paging zone.

Administering Attendant Direct Trunk Group Selection

This section describes the prerequisites and the screens for the Attendant Direct Trunk Group Selection feature.

Prerequisites for administering Attendant Direct Trunk Group Selection

You must complete the following actions before you can administer the Attendant Direct Trunk Group Selection feature:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Direct Extension Selection

Screen name	Purpose	Fields
Attendant Console	Assign trunk access codes (TACs) for local and remote systems.	Any available button field in the Direct Trunk Group Select Button Assignments (Trunk Access Codes) area

Reports for Attendant Direct Trunk Group Selection

The following reports provide information about the Attendant Direct Trunk Group Selection feature:

- None

Considerations for Attendant Direct Trunk Group Selection

This section provides information about how the Attendant Direct Trunk Group Selection feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Direct Trunk Group Selection under all conditions. The following considerations apply to Attendant Direct Trunk Group Selection:

- Attendant Direct Trunk Group Selection eliminates the need for the attendant to memorize, or look up, and dial a trunk access code (TAC) that is associated with frequently used trunk groups. A label that is associated with each Trunk Hundreds Select button identifies the destination or use of the button. For example, buttons might be labeled Chicago, FX, or WATS. The attendant presses the button to select an idle trunk in the desired group.

Interactions for Attendant Direct Trunk Group Selection

This section provides information about how the Attendant Direct Trunk Group Selection feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Direct Trunk Group Selection in any feature configuration.

- Attendant Control of Trunk Group Access

If Attendant Control of Trunk Group Access is provided, the Attendant Direct Trunk Group Selection feature must also be provided.

- QSIG

Attendant Direct Trunk Group Selection does not apply to QSIG trunks.

Attendant Intrusion

Use the Attendant Intrusion feature to allow an attendant to intrude on an existing call. The Attendant Intrusion feature is also called Call Offer.

Detailed description of Attendant Intrusion

This section provides a detailed description of the Attendant Intrusion feature.

The attendant uses the Attendant Intrusion feature to announce a new call or a message to a user who is already on a call.

When the attendant releases the call of the user, the source party either waits at the analog telephone of the user, or holds on an available line appearance on a digital telephone.

Note:

Only one call can be waiting at a time. If a call is already waiting on the telephone of the intruded party, the source party, once split from the attendant, cannot also wait.

Administering Attendant Intrusion

The following steps are part of the administration process for the Attendant Intrusion feature:

- [Assigning an intrusion button](#)

This section describes:

- Any prerequisites for administering the Attendant Intrusion feature
- The screens that you use to administer the Attendant Intrusion feature
- Complete administration procedures for the Attendant Intrusion feature

Prerequisites for administering Attendant Intrusion

You must complete the following actions before you can administer the Attendant Intrusion feature:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Intrusion

Screen name	Purpose	Fields
Attendant Console	Assign an intrusion button.	Any unassigned button in the Feature Button Assignments area.

Assigning an intrusion button

To assign an **intrusion** button:

1. Type **change attendant *n***, where *n* is the number of the attendant console. Press **Enter**.
The system displays the **Attendant Console** screen.
2. Click **Next** until you see the **Feature Button Assignments** area ([Figure 28: Attendant Console screen](#) on page 203).

Figure 28: Attendant Console screen

change attendant 1
Page 3 of 4

ATTENDANT CONSOLE

FEATURE BUTTON ASSIGNMENTS			
1:	split_____		13: _____
2:	dont-split		14: _____
3:	act-tr-grp		15: _____
4:	deact-tr-g		16: _____
5:	intrusion		17: _____
6:	hold _____ *		18: _____
7:	_____		19: forced-rel
8:	aux-work	RC: Grp:	20: _____
9:	_____		21: _____
10:	_____		22: _____
11:	_____		23: night-serv *
12:	_____		24: pos-busy__ *

3. In the **Feature Button Assignments** area, assign **intrusion** to an available button.
In this example, we assign **intrusion** to button 5.
4. Press **Enter** to save your changes.

Reports for Attendant Intrusion

The following reports provide information about the Attendant Intrusion feature:

- None

Considerations for Attendant Intrusion

This section provides information about how the Attendant Intrusion feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Intrusion under all conditions. The following considerations apply to Attendant Intrusion:

- None

Interactions for Attendant Intrusion

This section provides information about how the Attendant Intrusion feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Intrusion in any feature configuration.

- Intrusion is denied in when a:
 - Telephone is on a conference call with the administered maximum number of conferees
 - Call is established with Data Privacy activated
 - Call is established with Data Restriction activated
 - Telephone is a forward-to point of another telephone
 - Telephone is busy talking to another attendant
- If a call is already waiting for an intruded party, the second caller, who is split from the attendant, cannot use Call Waiting to wait for the intruded party. The attendant display shows "wait" or "busy". If an intrusion is possible, the attendant display shows "1 wait" or "1 busy".
- In Italy only, the system provides Attendant Intrusion on remote telephones through TGU/TGE trunks.

Attendant Lockout - Privacy

Use the Attendant Lockout - Privacy feature to prevent an attendant, who drops from a multiparty conference call, from reentering the call. The attendant can be recalled only by a telephone user who is on the multiparty call.

You administer this feature on a system-wide basis. The Attendant Lockout - Privacy feature is either activated or deactivated.

Detailed description of Attendant Lockout - Privacy

This section provides a detailed description of the Attendant Lockout - Privacy feature.

The Attendant Lockout - Privacy feature provides privacy for parties on a multiparty call. The parties can hold a private conversation without interruption by the attendant. The multiparty call must be held on the attendant console.

Administering Attendant Lockout - Privacy

The following steps are part of the administration process for the Attendant Lockout - Privacy feature:

- [Activating or deactivating the Attendant Lockout - Privacy feature](#)

This section describes:

- Any prerequisites for administering the Attendant Lockout - Privacy feature
- The screens that you use to administer the Attendant Lockout - Privacy feature
- Complete administration procedures for the Attendant Lockout - Privacy feature

Prerequisites for administering Attendant Lockout - Privacy

You must complete the following actions before you can administer the Attendant Lockout - Privacy feature:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Lockout - Privacy

Screen name	Purpose	Fields
Console Parameters	Activate or deactivate the Attendant Lockout - Privacy feature.	Attendant Lockout

Activating or deactivating the Attendant Lockout - Privacy feature

To activate or deactivate the Attendant Lockout - Privacy feature:

1. Type **change console-parameters**. Press **Enter**.

The system displays the **Console Parameters** screen ([Figure 29: Console Parameters screen](#) on page 206).

Figure 29: Console Parameters screen

change console-parameters

Page 1 of 3

CONSOLE PARAMETERS

Attendant Group Name: 27 character name OPERATOR

COS: 0COR: 0

Calls in Queue Warning: 5Attendant Lockout? y

Ext Alert Port (TAAS):

CAS: none

SAC Notification? nNight Service Act. Ext.:

IAS (Branch)? nIAS Tie Trunk Group No.:

IAS Att. Access Code:Alternate FRL Station:

Backup Alerting? nDID-LDN Only to LDN Night Ext? n

TIMING

Time Reminder on Hold (sec): 10Return Call Timeout (sec): 10

Time in Queue Warning (sec):

INCOMING CALL REMINDERS

No Answer Timeout (sec): 20Alerting (sec): 40

Secondary Alert on Held Reminder Calls? y

ABBREVIATED DIALING

List1: group 1List2:

List3:

COMMON SHARED EXTENSIONS

Starting Extension:

Count:

2. In the **Attendant Lockout** field, perform one of the following actions:

- Type **y** to activate this feature.
- Type **n** to deactivate this feature.

3. Press **Enter** to save your changes.

For more information, see the *Administrator's Guide for Avaya Communication Manager*.

Reports for Attendant Lockout - Privacy

The following reports provide information about the Attendant Lockout - Privacy feature:

- None

Considerations for Attendant Lockout - Privacy

This section provides information about how the Attendant Lockout - Privacy feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Lockout - Privacy under all conditions. The following considerations apply to Attendant Lockout - Privacy:

- None

Interactions for Attendant Lockout - Privacy

This section provides information about how the Attendant Lockout - Privacy feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Lockout - Privacy in any feature configuration.

- **Attendant Recall**

If Attendant Lockout - Privacy is activated, use Attendant Recall if you must recall the attendant.

- **Individual Attendant Access**

Attendant Lockout - Privacy applies only to attendant group calls. This feature does not affect individual attendant calls.

- **Trunk-to-Trunk Transfer**

Attendant Lockout - Privacy does not function when a call that uses Trunk-to-Trunk Transfer is held on the console.

Attendant Override of Diversion Features

Use the Attendant Override of Diversion Features feature to allow the attendant to bypass a call-diverting feature that a user activates. Such features include Send All Calls, Call Coverage, and Call Forwarding. An attendant can use this feature, in combination with Attendant Intrusion, to place an emergency call or an urgent call to a user.

Detailed description of Attendant Override of Diversion Features

This section provides a detailed description of the Attendant Override of Diversion Features feature.

With the Attendant Override of Diversion Features, the attendant can bypass a call-diverting feature that a user activates. Such features include Send All Calls, Call Coverage, and Call Forwarding.

Administering Attendant Override of Diversion Features

This section contains prerequisites and the screens for administering the Attendant Override of Diversion Features feature.

Prerequisites for administering Attendant Override of Diversion Features

You must complete the following actions before you can administer the Attendant Override of Diversion Features feature:

- Set up an attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Override of Diversion Features

Screen name	Purpose	Fields
Attendant Console	Administer the Attendant Override button.	Any available button field in the Feature Button Assignments area

Reports for Attendant Override of Diversion Features

The following reports provide information about the Attendant Override of Diversion Features feature:

- None

Considerations for Attendant Override of Diversion Features

This section provides information about how the Attendant Override of Diversion Features feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Override of Diversion Features under all conditions. The following considerations apply to Attendant Override of Diversion Features:

- None

Interactions for Attendant Override of Diversion Features

This section provides information about how the Attendant Override of Diversion Features feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Override of Diversion Features in any feature configuration.

- None

Attendant Priority Queue

Use the Attendant Priority Queue feature to place incoming calls to an attendant, that cannot be immediately answered, into an ordered queue. With this feature, you can define 13 different categories of incoming attendant calls. Emergency calls always have the highest priority.

Detailed description of Attendant Priority Queue

This section provides a detailed description of the Attendant Priority Queue feature.

When an attendant cannot immediately answer calls, the system can place incoming calls into categories, or into a call type within a category.

With Attendant Priority Queue, attendants can answer calls by call category, such as trunk type. Attendant Priority Queue places incoming calls in a queue:

- According to the priority levels that you assign for each type of call
- In order of time stamp within each level

The calling party hears ringback until an attendant answers the call.

Attendant Priority Queue supports the following capabilities:

- [Priority by Call Category](#)
- [Priority by Call Type](#)

Priority by Call Category

Assign an Attendant Priority Queue level to each of 13 incoming attendant call categories. Each category has a default level. You can reset the priority level for any category.

Important:

Do not change the priority level for Emergency Access calls. Emergency Access calls must remain priority 1.

The attendant call categories are:

- Emergency Access. Calls from users who dial the emergency access code. The default is the highest priority level. This category must remain priority 1.

Attendant Priority Queue

- Assistance Call. Calls from users who:
 - Dial the attendant group access code
 - Have the Manual Originating Line Service feature activated
- CO Call. Incoming central office (CO), foreign exchange (FX), or Wide Area Telecommunications Service (WATS) trunk calls to an attendant group. This category does not include trunk calls that are returned to the attendant group after a timeout or a deferred attendant recall.
- DID to Attendant. Incoming direct inward dial (DID) trunk calls to an attendant group.
- Tie Call. Incoming Tie trunk calls, including dial-repeating and direct types.
- Redirected DID Call. DID or Automatic Call Distribution (ACD) calls that time out, and are rerouted to the attendant group. The timeout can be caused by:
 - Ring/no-answer
 - Busy condition
 - Number Unobtainable
- Redirected Call. Calls that are assigned to one attendant, but redirected to the attendant group because the attendant is now busy.
- Return Call. Calls that are returned to the attendant after the calls time out. If the attendant is now busy, calls are redirected to the attendant group.
- Serial Call. Calls from the Attendant Serial Call feature. Calls fit this category when an outside trunk call, that the attendant designates as a serial call, is extended to and completed at a telephone, and then the user goes on-hook. If the attendant who extends the call is busy, the system redirects the call to the attendant group.
- Individual Attendant Access. Calls from users, incoming trunks, or a system feature, to the Individual Attendant Access (IAA) extension of a specific attendant. If the attendant is busy, the call remains in a queue until the attendant is available.
- Interpositional. Calls from one attendant to the Individual Attendant Access (IAA) extension of another attendant.
- VIP Wakeup Reminder Call. Call from the Hospitality feature that send a wake-up reminder to the attendant to call the room.
- Miscellaneous Calls. All other calls.

You can assign the same priority level to more than one category. Assigning all categories the same priority level creates a first-in first-out queue.

When at least one call appears in the Attendant Priority Queue, the Calls Waiting lamp lights steadily on all active attendant consoles. If the number of calls in the queue reaches the calls-waiting threshold for the attendant group, the Queue Warning lamp lights steadily on all active attendant consoles.

Priority by Call Type

You can further define the priority that you assign to calls in the Attendant Priority Queue by call type. Then, within each call type, you can prioritize calls by time.

The call types, in descending order of priority, are:

- Type 1 calls are outgoing public-network calls that receive answer supervision when the Answer Supervision Timer of the trunk group expires, even if the trunk is still ringing. Type 1 calls are also incoming calls that the attendant answers.
- Type 2 calls are incoming external public-network calls before the calls receive answer supervision, or before the Answer Supervision Timer of the trunk group expires.
- Type 3 calls are all other calls, which include internal calls, conference calls, and tie-trunk calls of any type.

Note:

External public-network calls have priority over all other calls, including conference calls. Answered public-network calls have priority over calls that are not yet answered.

Administering Attendant Priority Queue

The following steps are part of the administration process for the Attendant Priority Queue feature:

- [Setting category priorities](#)
- [Setting the number of calls in the queue](#)
- [Assigning a Call Type button](#)
- [Translating the Call Type button into a user-defined language](#)

This section describes:

- Any prerequisites for administering the Attendant Priority Queue feature
- The screens that you use to administer the Attendant Priority Queue feature
- Complete administration procedures for the Attendant Priority Queue feature

Prerequisites for administering Attendant Priority Queue

You must complete the following actions before you can administer the Attendant Priority Queue feature:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Priority Queue

Screen name	Purpose	Fields
Console Parameters	Assign priorities to queue categories.	All fields in the Queue Priorities area
Feature-Related System Parameters	Set the number of calls in the queue.	Reserved Slots for Attendant Priority Queue
Attendant Console	Assign a Call Type button.	Any unassigned button in the Feature Button Assignments area
Language Translations	Translate the Call Type button into a user-defined language.	Call Type

Setting category priorities

To set the category priorities:

1. Type **change console-parameters**. Press **Enter**.
The system displays the **Console Parameters** screen.
2. Click **Next** until you see the **Queue Priorities** area ([Figure 30: Console Parameters screen](#) on page 215).

Figure 30: Console Parameters screen

change console-parameters
Page 3 of 4

CONSOLE PARAMETERS

QUEUE PRIORITIES
 Emergency Access:1_
 Assistance Call:2_
 CO Call:3_
 DID to Attendant:4_
 Tie Call:5_
 Redirected DID Call:6_
 Redirected Call:7_
 Return Call:8_
 Serial Call:9_
 Individual Attendant Access:10
 Interpositional:11
 VIP Wakeup Reminder Call:12
 Miscellaneous Call:13

Call-Type Ordering Within Priority Levels? y

3. Type a number from 1 to 13 next to each category.

This number indicates the priority of the category. The number 1 indicates the highest priority. The number 13 indicates the lowest priority.

4. In the **Call-Type Ordering Within Priority Levels** field, perform one of the following actions:
 - If you want to order calls by call type within each category, type **y**.
 - If you do not want to order calls by call type within each category, type **n**.
5. Press **Enter** to save your changes.

Setting the number of calls in the queue

To set the number of calls in the queue:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen
2. Click **Next** until you see the **Reserved Slots for Attendant Priority Queue** field ([Figure 31: Feature-Related System Parameters screen](#) on page 216).

Figure 31: Feature-Related System Parameters screen

change system-parameters features
Page 4 of 14

FEATURE-RELATED SYSTEM PARAMETERS

Reserved Slots for Attendant Priority Queue: 5_

Emergency Access Redirection Extension: _____

Number of Emergency Calls Allowed in Attendant Queue: 5_

Deluxe Paging and Call Park Timeout to Originator? n

Controlled Outward Restriction Intercept Treatment: tone _____

Controlled Termination Restriction (Do Not Disturb): tone _____

Controlled Station to Station Restriction: tone _____

Time Before Off-Hook Alert: 10__

Call Pickup Alerting? n

Temporary Bridged Appearance on Call Pickup? y

Call Pickup on Intercom Calls? y

Directed Call Pickup? n

Extended Group Call Pickup? n

AUTHORIZATION CODE PARAMETERS

Authorization Code Enabled? y

Authorization Code Length: 7

Authorization Code Cancellation Symbol? #

Attendant Time Out Flag? n

Display Authorization Code? y

Controlled Toll Restriction Replaces: none

3. In the **Reserved Slots for Attendant Priority Queue** field, type a number between 2 and 75. This number indicates how many nonemergency calls can go into the priority queue. The default is 5.
4. In the **Number of Emergency Calls Allowed in Attendant Queue** field, type a number between 0 and 75. This number indicates how many emergency calls can go into the priority queue. The default is 5.
5. Press **Enter** to save your changes.

Assigning a Call Type button

You can assign a Call Type button on the attendant console. When you press this button, the system displays the call type of the active call. For more information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Translating the Call Type button into a user-defined language

If you use a user-defined language to display messages on the attendant console, you can translate the Call Type button.

To translate the Call Type button into a user-defined language:

1. Type **change display-messages miscellaneous-features**. Press **Enter**.

The system displays the **Language Translations** screen.

2. Click **Next** until you see the **English: Call Type** field ([Figure 32: Language Translations screen](#) on page 217).

Figure 32: Language Translations screen

change display-messages miscellaneous-features	Page 5 of 6
LANGUAGE TRANSLATIONS	
42. English: Add Skill: Enter number, then # sign	
Translation: *****	
43. English: Remove Skill: Enter number, then # sign	
Translation: *****	
44. English: Enter Skill Level, then # sign	
Translation: *****	
45. English: Enter Agent LoginID	
Translation: *****	
46. English: Call Type	
Translation: *****	
47. English: Call Charge	
Translation: *****	

-
3. In the **English: Call Type** field, translate the button label into the user-defined language.
 4. Press **Enter** to save your changes.

Reports for Attendant Priority Queue

The following reports provide information about the Attendant Priority Queue feature:

- None

Considerations for Attendant Priority Queue

This section provides information about how the Attendant Priority Queue feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Priority Queue under all conditions. The following considerations apply to Attendant Priority Queue:

- An incoming call that defaults to an attendant and is then redirected to the attendant group, does not change the associated Attendant Priority Queue level. The reason code that the system displays on the answering attendant console remains the same as the reason code that the system displays on the original attendant console.

Interactions for Attendant Priority Queue

This section provides information about how the Attendant Priority Queue feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Priority Queue in any feature configuration.

- **Multiparty Calls**

The system always treats multiparty calls as Type 3 calls. If a multiparty call becomes a single-party call while in the queue, the multiparty call remains a Type 3 call.

- **Night Service-Hunt Group**

When you use Night Service-Hunt Groups, retrieve calls from the hunt groups instead of from the Attendant Priority Queue. Since call-type prioritization does not apply to hunt groups, do not retrieve calls in order of call type, unless you designate the Attendant Priority Queue as the termination.

- **Off-Premises Station**

The system always identifies calls from off-premises telephones as Type 3 calls.

Attendant Recall

Use the Attendant Recall feature to allow a user to recall the attendant while the user is on a call.

- Single-line users press the recall button or flash the switchhook to recall the attendant.
- Multi-appearance users press the conference or transfer button to recall the attendant and remain on the connection when either button is used.

Detailed description of Attendant Recall

This section provides a detailed description of the Attendant Recall feature.

With the Attendant Recall feature, users can call the attendant for assistance while the users are currently on a call. Users can activate the Attendant Recall feature only when the users are on a:

- Two-party call
- Conference call that is held at the attendant console

Administering Attendant Recall

The following steps are part of the administration process for the Attendant Recall feature:

- The system activates the Attendant Recall feature when you set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

This section describes:

- Any prerequisites for administering the Attendant Recall feature
- The screens that you use to administer the Attendant Recall feature
- Complete administration procedures for the Attendant Recall feature

Prerequisites for administering Attendant Recall

You must complete the following actions before you can administer the Attendant Recall feature:

- None

Screens for administering Attendant Recall

Screen name	Purpose	Fields
Attendant Console	Set up an attendant console.	All

End-user procedures for Attendant Recall

End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Attendant Recall:

To recall the attendant:

- Single-line users press the recall button or flash the switchhook.
- Multiappearance users press the conference button or the transfer button.

Reports for Attendant Recall

The following reports provide information about the Attendant Recall feature:

- None

Considerations for Attendant Recall

This section provides information about how the Attendant Recall feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Recall under all conditions. The following considerations apply to Attendant Recall:

- None

Interactions for Attendant Recall

This section provides information about how the Attendant Recall feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Recall in any feature configuration.

- Individual Attendant Access

If a user is holding a hunt-group call to an individual attendant, the user who is active on the call cannot recall the attendant. However, the user can transfer calls, and make conference calls.

Attendant Serial Calling

Use the Attendant Serial Calling feature to allow the attendant to transfer trunk calls that the system routes to the attendant when the called user hangs up. The attendant can then transfer the call to another user who is on the same server.

Detailed description of Attendant Serial Calling

This section provides a detailed description of the Attendant Serial Calling feature.

You can administer the system to route calls to the attendant when the called user hangs up, but the caller does not. The attendant can then use Attendant Serial Calling to transfer the call to another user, at the request of the caller. The attendant can transfer calls only to those users on the same server.

This feature helps the attendant to use the trunks efficiently. If few trunks are available, and direct inward dialing (DID) is unavailable, a caller might make several attempts to complete a call before the caller is successful. When a caller makes a successful call to the attendant, the user can use the same line into the server for multiple telephone calls.

The attendant display shows the attendant that an incoming call is a serial call.

Administering Attendant Serial Calling

This section contains prerequisites and the screens for administering the Attendant Serial Calling feature.

Prerequisites for administering Attendant Serial Calling

You must complete the following actions before you can administer the Attendant Serial Calling feature:

- Set up an attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Serial Calling

Screen name	Purpose	Fields
Attendant Console	Administer the serial-cal button.	Any available button field in the Feature Button Assignments area

Reports for Attendant Serial Calling

The following reports provide information about the Attendant Serial Calling feature:

- None

Considerations for Attendant Serial Calling

This section provides information about how the Attendant Serial Calling feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Serial Calling under all conditions. The following considerations apply to Attendant Serial Calling:

- None

Interactions for Attendant Serial Calling

This section provides information about how the Attendant Serial Calling feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Serial Calling in any feature configuration.

- None

Attendant Split Swap

Use the Attendant Split Swap feature to allow an attendant to alternate between an active call and a split call. This feature is useful when the attendant must transfer a call, but first must talk independently with each party before completing the transfer.

Detailed description of Attendant Split Swap

This section provides a detailed description of the Attendant Split Swap feature.

With the Attendant Split Swap feature, an attendant can alternate between an active call and a split call. To activate this feature, the attendant presses a button on the attendant console.

Administering Attendant Split Swap

The following steps are part of the administration process for the Attendant Split Swap feature:

- [Assigning a split-swap button](#)

This section describes:

- Any prerequisites for administering the Attendant Split Swap feature
- The screens that you use to administer the Attendant Split Swap feature
- Complete administration procedures for the Attendant Split Swap feature

Prerequisites for administering Attendant Split Swap

You must complete the following actions before you can administer the Attendant Split Swap feature:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Split Swap

Screen name	Purpose	Fields
Attendant Console	Assign a split-swap button.	Any unassigned button in the Feature Button Assignments area.

Assigning a split-swap button

To assign a **split-swap** button:

1. Type **change attendant *n***, where *n* is the number of the attendant console. Press **Enter**.

The system displays the **Attendant Console** screen.

2. Click **Next** until you see the **Feature Button Assignments** area ([Figure 33: Attendant Console screen](#) on page 226).

Figure 33: Attendant Console screen

change attendant 1

ATTENDANT CONSOLE

Page 3 of 4

FEATURE BUTTON ASSIGNMENTS

1: split_____

2: dont-split

3: act-tr-grp

4: deact-tr-g

5: _____

6: hold _____ *

7: _____

8: aux-work RC: Grp:

9: _____

10: _____

11: _____

12: _____

13: split-swap

14: _____

15: _____

16: _____

17: _____

18: _____

19: forced-rel

20: _____

21: _____

22: _____

23: night-serv *

24: pos-busy__ *

3. In the **Feature Button Assignments** area, assign **split-swap** to an available button.
In this example, we assign **split-swap** to button 13.
4. Press **Enter** to save your changes.

Reports for Attendant Split Swap

The following reports provide information about the Attendant Split Swap feature:

- None

Considerations for Attendant Split Swap

This section provides information about how the Attendant Split Swap feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Split Swap under all conditions. The following considerations apply to Attendant Split Swap:

- None

Interactions for Attendant Split Swap

This section provides information about how the Attendant Split Swap feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Split Swap in any feature configuration.

- None

Attendant Timers

Use the Attendant Timers feature to automatically alert the attendant after an administered time interval that calls remain waiting or on hold. The attendant can then reconnect with the caller, and decide whether to terminate the call, or allow the caller to continue waiting.

Detailed description of Attendant Timers

This section provides a detailed description of the Attendant Timers feature.

Attendant Timers automatically alert the attendant after an administered time interval for the following types of calls:

- Extended calls that are waiting to be answered or waiting to be connected to a busy single-line telephone
- One-party calls that are on hold at the console
- Transferred calls that are unanswered after a transfer

The Attendant Timers feature informs the attendant that a call requires additional attention. After the attendant reconnects to the call, the user can either choose to try another extension number, hang up, or continue to wait.

Communication Manager supports a variety of administrable attendant timers. Attendant timers include:

- Unanswered DID Call Timer. Specifies how long a direct inward dialing (DID) call can go unanswered before the system routes the call to the administered DID, TIE, or ISDN intercept treatment.
- Attendant Return Call Timer. Unanswered calls that the attendant extends return to the same attendant, if the attendant is available. If the same attendant is unavailable, unanswered calls return to the attendant group queue.

The Attendant Return Call Timer is not set for calls that are extended from one attendant to another attendant. The system redirects a transferred call that times out to an attendant after the interval that is administered for the Attendant Return Call timer.

- Attendant Timed Reminder of Held Call Timer. Specifies how long a call is held. When the timer expires, the held call alerts the attendant. The message "**hc**" appears on the attendant display. You can administer either a high-pitched ring or a primary alert.

- **Attendant No-Answer Timer.** Specifies how long a call that terminates at an attendant console can ring with primary alerting. When the timer expires, the call rings with a secondary, higher-pitch ring. The ringing pattern of a disabled Attendant No Answer Timer does not change over from the primary pattern to the secondary pattern. If the call remains unanswered during this interval, the system routes the call to the attendant group and console where the call was placed in a Position Busy state. This timer does not apply to calls that are placed to the extension of the attendant, or to calls that the attendant originates.
- **Attendant Alerting Interval (Timed Reminder).** Specifies how long a call that terminates at an attendant console can ring with secondary alerting. When the timer expires, the attendant console is placed into position busy mode, and the system forwards the call to the attendant group. If the console where the alerting interval is reached is the last active day console, the system goes into Night Service, if Night Service is enabled. This timer does not apply to calls that are placed to the extension of the attendant, or to calls that the attendant originates.

You can disable the alerting interval. In this case, a call continues to ring at the extension of the original attendant until the caller hangs up, or another feature disconnects the call. If the call reaches the timeout limit for unanswered DID calls during Night Service, for example, the Night Service feature disconnects the call.

- **Line Intercept Tone Timer.** Specifies how long line intercept can be. For example, LITT:10 seconds means that line intercept stops after 10 seconds.

Administering Attendant Timers

The following steps are part of the administration process for the Attendant Timers feature:

- [Setting up Attendant Timers](#)

This section describes:

- Any prerequisites for administering the Attendant Timers feature
- The screens that you use to administer the Attendant Timers feature
- Complete administration procedures for the Attendant Timers feature

Prerequisites for administering Attendant Timers

You must complete the following actions before you can administer the Attendant Timers feature:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Timers

Screen name	Purpose	Fields
Console Parameters	Set up the timers for the attendant.	All fields in both the Timing and the Incoming Call Reminders areas

Setting up Attendant Timers

To set up Attendant Timers:

1. Type **change console-parameters**. Press **Enter**.
The system displays the **Console Parameters** screen.
2. Click **Next** until you see the **Timing** area ([Figure 34: Console Parameters screen](#) on page 231).

Figure 34: Console Parameters screen

change console-parameters

Page 2 of 4

CONSOLE PARAMETERS

TIMING

Time Reminder on Hold (sec): 10

Return Call Timeout (sec): 10

Time in Queue Warning (sec):

INCOMING CALL REMINDERS

No Answer Timeout (sec): 20

Alerting (sec): 40

Secondary Alert on Held Reminder Calls? y

ABBREVIATED DIALING

List1: group 1

List2:

List3:

SAC Notification? n

COMMON SHARED EXTENSIONS

Starting Extension:

Count:

3. In the **Timing** area, complete the following fields:
 - In the **Time Reminder on Hold (sec)** field, type the number of seconds before a split call returns to the console. Valid entries are a number from 10 to 1024, or blank. A split call can be a call that the attendant extended to a user and is ringing at the user telephone, or otherwise split away from the console.

Allow 5 seconds for each ring at all points in a coverage path to ensure that the entire path is completed before the call returns to the console.

Attendant Timers

- In the **Return Call Timeout (sec)** field, type the number of seconds that a call remains on hold at the console before the system alerts the attendant. In a Centralized Attendant Service (CAS) arrangement, administer the main console and the branch consoles with the same value. Valid entries are a number from 10 to 1024, or blank.
 - In the **Time in Queue Warning (sec)** field, type the number of seconds that a call can remain in the attendant queue before the system alerts the attendant. Valid entries are a number from 9 to 999.
4. In the **Incoming Call Reminders** area, complete the following fields:
- In the **No Answer Timeout (sec)** field, type the number of seconds that a call to the attendant can remain unanswered without invoking a more insistent-sounding tone. Valid entries are a number from 10 to 1024, or blank.

Allow 5 seconds for each ring at all points in a coverage path to ensure that the entire path is completed before the call returns to the console.
 - In the **Alerting (sec)** field, type the number of seconds after which the system disconnects a held call or an unanswered call from an attendant loop. The system routes the disconnected call either to another attendant or to Night Service. Valid entries are a number from 10 to 1024, or blank.
 - In the **Secondary Alert on Held Reminder Calls?** field, perform one of the following actions:
 - If you want to start attendant alerting for Held Reminder Calls with secondary alerting, type **y**
 - If you want to have Held Reminder Calls alert the attendant in the same way as normal calls, type **n**. Normal calls start with primary alerting, and then change to secondary alerting when the No Answer Timeout expires.
5. Press **Enter** to save your changes.

Reports for Attendant Timers

The following reports provide information about the Attendant Timers feature:

- None

Considerations for Attendant Timers

This section provides information about how the Attendant Timers feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Timers under all conditions. The following considerations apply to Attendant Timers:

- None

Interactions for Attendant Timers

This section provides information about how the Attendant Timers feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Timers in any feature configuration.

- Call Coverage

If a telephone user transfers a call to an on-premises telephone, and the call remains unanswered at the expiration of the Timed Reminder Interval, the system redirects the call to an attendant. Redirection occurs even if the call redirects through Call Coverage or Call Forwarding from the transferred-to telephone.

The system redirects an attendant-extended call to coverage instead of returning the call to an attendant if the coverage criteria is met before the Timed Reminder Interval expires. However, the system returns unanswered calls to an attendant at the expiration of the interval.

For any call that alerts an attendant as a coverage call, that is, for any unanswered station-to-station call with the "attd" (attendant) in the **Coverage Path** screen of the called telephone, the secondary alerting tone does not sound.

- Centralized Attendant Service

If an attendant at the main location transfers a call from a branch location to an extension at the main location, the timed reminder does not apply, and the call does not return to the attendant if the call is unanswered.

Attendant Trunk Identification

Use the Attendant Trunk Identification feature to enable the attendant, or a user with a display, to identify a faulty trunk

Detailed description of Attendant Trunk Identification

This section provides a detailed description of the Attendant Trunk Identification feature.

With Attendant Trunk Identification, the attendant, or a user with a display, can identify a faulty trunk. When the attendant or user presses the trk-id button, the system displays the Trunk Access Code (TAC) and trunk member number of a call. The trunk can then be removed from service.

Administering Attendant Trunk Identification

This section contains the prerequisites and screens for administering the Attendant Trunk Identification feature.

Prerequisites for administering Attendant Trunk Identification

You must complete the following actions before you can administer the Attendant Trunk Identification feature:

- Set up an attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Attendant Trunk Identification

Screen name	Purpose	Fields
Attendant Console	Administer the trk-id button for the Attendant Trunk Identification feature.	Any available button field in the Feature Button Assignments area
Station	Administer the trk-id button for the Attendant Trunk Identification feature.	Any available button field in the Feature Button Assignments area

Reports for Attendant Trunk Identification

The following reports provide information about the Attendant Trunk Identification feature:

- None

Considerations for Attendant Trunk Identification

This section provides information about how the Attendant Trunk Identification feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Trunk Identification under all conditions. The following considerations apply to Attendant Trunk Identification:

- None

Interactions for Attendant Trunk Identification

This section provides information about how the Attendant Trunk Identification feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Trunk Identification in any feature configuration.

- None

Attendant Vectoring

Use the Attendant Vectoring feature to provide attendants with a flexible way to manage incoming calls. For example, without Attendant Vectoring, calls that the system redirects from the attendant console to a night telephone can ring only at that telephone. These calls do not follow a coverage path. With Attendant Vectoring, Night Service calls follow the coverage path of the night telephone. The coverage path can go to another telephone, and eventually to a voice mail system. The caller can then leave a message that can be retrieved at any time.

Detailed description of Attendant Vectoring

This section provides a detailed description of the Attendant Vectoring feature.

With the Attendant Vectoring feature, you can establish an attendant vector directory number (VDN), and send attendant group calls through vector processing. This feature is useful when you want flexibility with how the system routes calls when the system is in Night Service mode.

Attendant Vectoring takes precedence over all local attendant codes that you administer. If Attendant Vectoring is enabled, the system uses call vectors instead of the normal attendant call routing to process attendant-seeking, or dial 0, calls.

For more information about vectors and VDNs, see the "Meet-Me Conference" feature. See also the *Avaya MultiVantage™ Call Center Software Call Vectoring and Expert Agent Selection (EAS) Guide*.

Administering Attendant Vectoring

The following steps are part of the administration process for the Attendant Vectoring feature:

- [Creating a VDN extension for Attendant Vectoring](#)
- [Assigning the VDN extension for Attendant Vectoring to a console](#)
- [Assigning the VDN extension for Attendant Vectoring to a tenant](#)

This section describes:

- Any prerequisites for administering the Attendant Vectoring feature
- The screens that you use to administer the Attendant Vectoring feature
- Complete administration procedures for the Attendant Vectoring feature

Prerequisites for administering Attendant Vectoring

You must complete the following actions before you can administer the Attendant Vectoring feature:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.
- On the **Optional Features** screen, verify the values in the following fields. Your license file sets the values in these fields. You cannot manually change these values. If you have any questions, contact your Avaya representative.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

1. Click **Next** until you see the **Attendant Vectoring** field. Ensure that the **Attendant Vectoring** field is set to **y**.
2. You cannot use Attendant Vectoring with the Centralized Attendant Service (CAS) feature. Therefore, the **Attendant Vectoring** field cannot be set to **y** if either the **CAS Branch** field or the **CAS Main** field on the **Optional Features** screen is set to **y**.
3. Click **Next** until you see the **Tenant Partitioning** field. Ensure that the **Tenant Partitioning** field is set to **n**.
4. Click **Next** until you see the **Vectoring (Basic)** field and the **Vectoring (Prompting)** field. Ensure that both these fields are set to **y**.

On the **Call Vector** screen, verify that the **Attendant Vectoring** field is set to **y**. To view the **Call Vector** screen, type **change vector n**, where **n** is the number of a vector. Press **Enter**.

1. This field appears on the **Call Vector** screen only if, on the **Optional Features** screen, the **Attendant Vectoring** field is set to **y**. This field does not appear for S8700 IP-Connect configurations.
2. The **Attendant Vectoring** field on the **Call Vector** screen defaults to **y** when, on the **Optional Features** screen, the **Vectoring (Basic)** field and the **Vectoring (Prompting)** field are set to **y**. You cannot change this setting.
3. The **Attendant Vectoring** field on the **Call Vector** screen defaults to **n** when, on the **Optional Features** screen, the **Vectoring (Basic)** field and the **Vectoring (Prompting)** field are set to **n**. You cannot change this setting.
4. You cannot use Attendant Vectoring with the Meet-me Conference feature. Therefore, the **Attendant Vectoring** field and the **Meet-me Conference** field cannot both be set to **y** at the same time.

Screens for administering Attendant Vectoring

Screen name	Purpose	Fields
Optional Features	Ensure that the Attendant Vectoring feature is activated.	Attendant Vectoring
	Ensure that fields are correctly set so that you can: • Verify the Attendant Vectoring feature on the Call Vector screen • Administer the Attendant Vectoring feature on the Console Parameters screen. See the "Prerequisites" section for the correct settings.	• Tenant Partitioning • Vectoring (Basic) • Vectoring (Prompting)
Call Vector	Ensure that the Attendant Vectoring field is set to y .	Attendant Vectoring
Vector Directory Number	Create an Attendant Vectoring VDN extension.	Attendant Vectoring
Console Parameters	Assign the Attendant Vectoring VDN extension to a console.	Attendant Vectoring VDN
Tenant	Assign the Attendant Vectoring VDN extension to a tenant.	Attendant Vectoring VDN

Creating a VDN extension for Attendant Vectoring

Use the **Vector Directory Number** screen to define vector directory numbers (VDNs) for the Call Vectoring feature. A VDN is an extension that gives you access to a call vector. Each VDN is mapped to one call vector.

VDNs are not assigned to physical equipment. You gain access to a VDN through direct dial central office (CO) trunks that are mapped to the VDN, direct inward dial (DID) trunks, and listed directory number (LDN) calls. The VDN can be a night destination for LDN.

To create a VDN extension for Attendant Vectoring:

1. Type **change vdn *n***, where *n* is the VDN extension. Press **Enter**.

The system displays the **Vector Directory Number** screen ([Figure 35: Vector Directory Number screen](#) on page 240).

Figure 35: Vector Directory Number screen

change vdn 5000
Page 1 of 1

VECTOR DIRECTORY NUMBER

Extension: 5000

Name:

Vector Number: 234

Attendant Vectoring: y

Meet-me Conferencing? n

Allow VDN Override? n

COR: 59

TN: 1

Measured: none

Acceptable Service Level (sec):

VDN of Origin Annc. Extension: 301

1st Skill:

2nd Skill:

3rd Skill:

2. In the **Attendant Vectoring** field, perform one of the following actions:

- If you want this VDN to be an attendant vector, type **y**.
- If you do not want this VDN to be an attendant vector, type **n**.

You cannot use Attendant Vectoring with the Meet-me Conference feature. Therefore, the **Attendant Vectoring** field and the **Meet-Me Conferencing** field cannot both be set to **y** at the same time.

3. Press **Enter** to save your changes.

Assigning the VDN extension for Attendant Vectoring to a console

The **Attendant Vectoring VDN** field appears on the **Console Parameters** screen only if, on the **Optional Features** screen, the:

- **Attendant Vectoring** field is set to **y**
- **Tenant Partitioning** field is set to **n**

To assign the VDN extension for Attendant Vectoring to a console:

1. Type **change console-parameters n**, where **n** is the assigned number of the attendant console. Press **Enter**.

The system displays the **Console Parameters** screen ([Figure 36: Console Parameters screen](#) on page 241).

Figure 36: Console Parameters screen

change console-parameters		Page 1 of 4
CONSOLE PARAMETERS		
Attendant Group Name: OPERATOR		
COS: 0	COR: 0	
Calls in Queue Warning: 5	Attendant Lockout? y	
Ext Alert Port (TAAS):		
CAS: none		
IAS (Branch)? n	Night Service Act. Ext.:	
IAS Att. Access Code:	IAS Tie Trunk Group No.:	
Backup Alerting? n	Alternate FRL Station:	
Attendant Vectoring VDN: 5000	DID-LDN Only to LDN Night Ext? n	

2. In the **Attendant Vectoring VDN** field, type the VDN extension that you have created for Attendant Vectoring.
3. Press **Enter** to save your changes.

Assigning the VDN extension for Attendant Vectoring to a tenant

Use the **Tenant** screen to define tenants that access the system. If your server uses more than one tenant, see the "Tenant Partitioning" feature for more information.

To assign the VDN extension for Attendant Vectoring to a tenant:

1. Type **change tenant *n***, where *n* is the assigned number of the tenant. Press **Enter**.

The system displays the **Tenant** screen ([Figure 37: Tenant screen](#) on page 242).

Figure 37: Tenant screen

```
change tenant 18

                                Tenant 18

    Tenant Description: _____

    Attendant Group: 1

    Ext Alert Port (TAAS): _____ Ext Alert (TAAS) Extension: _____

    Night Destination: _____

    Music Source: 1

    Attendant Vectoring VDN: 5000

    Emergency Number: _____
```

-
2. In the **Attendant Vectoring VDN** field, type the VDN extension that you created for Attendant Vectoring.
 3. Press **Enter** to save your changes.

Reports for Attendant Vectoring

The following reports provide information about the Attendant Vectoring feature:

- None

Considerations for Attendant Vectoring

This section provides information about how the Attendant Vectoring feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Attendant Vectoring under all conditions. The following considerations apply to Attendant Vectoring:

- Teletypewriter device (TTY) for the hearing impaired

Unlike fax machines and modems, a TTY has no handshake tone and no carrier tone. A TTY is silent when not transmitting. Systems cannot automatically identify TTY callers.

However, the absence of these special tones also means that voice and TTY tones can be intermixed in prerecorded announcements. The ability to provide a hybrid voice-and-TTY announcement, when combined with the Attendant Vectoring capability, can permit a single telephone number to accommodate both voice and TTY callers.

Interactions for Attendant Vectoring

This section provides information about how the Attendant Vectoring feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Attendant Vectoring in any feature configuration.

- Centralized Attendant Service (CAS)

You cannot use Attendant Vectoring with the Centralized Attendant Service (CAS) feature. Therefore, the **Attendant Vectoring** field cannot be set to **y** if either the **CAS Branch** field or the **CAS Main** field on the **Optional Features** screen is set to **y**.

- Meet-me Conference

You cannot use Attendant Vectoring with the Meet-me Conference feature. Therefore, the **Attendant Vectoring** field and the **Meet-me Conference** field cannot both be set to **y** at the same time.

Audible Message Waiting

Use the Audible Message Waiting feature to alert a user that a message is waiting. The user hears a stutter dial tone when the user goes off hook.

The Audible Message Waiting feature is particularly useful for visually impaired people who cannot see a message waiting light.

Detailed description of Audible Message Waiting

This section provides a detailed description of the Audible Message Waiting feature.

Use the Audible Message Waiting feature to alert a user that a message is waiting. When the user goes off hook, the user hears a stutter tone just before the usual dial tone begins.

Users can access waiting messages from:

- The system memory, where a user can use a display or a voice synthesizer
- A Property Management System (PMS)
- An Avaya Intuity AUDIX voice message system

You must ensure that your users know how to retrieve their messages.

You usually assign Audible Message Waiting on telephones without message waiting lights, such as analog telephones.

If the system loses synchronization between telephones and message-status data, use the Clear Message Waiting Indicators to turn off the message waiting indicators.

Audible Message Waiting requires a separate software right-to-use fee.

Audible Message Waiting might not be applicable in countries that restrict the characteristics of dial tones that the system provides to users.

Administering Audible Message Waiting

The following steps are part of the administration process for the Message Waiting feature:

- [Administering Audible Message Waiting for a user](#)

This section describes:

- Any prerequisites for administering the Message Waiting feature
- The screens that you use to administer the Message Waiting feature
- Complete administration procedures for the Message Waiting feature

Prerequisites for administering Audible Message Waiting

You must complete the following actions before you can administer the Audible Message Waiting feature:

- View the **Optional Features** screen, and ensure that the **Audible Message Waiting** field is set to **y**. If the **Audible Message Waiting** field is set to **n**, your system is not enabled for the Audible Message Waiting feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Screens for administering Audible Message Waiting

Screen name	Purpose	Fields
Optional Features	Enable Audible Message Waiting for your system.	Audible Message Waiting
Station	Administer Audible Message Waiting for a user.	Audible Message Waiting

Administering Audible Message Waiting for a user

To activate Audible Message Waiting for a user:

1. Type **change station *n***, where *n* is the extension of the user for whom you want to activate Audible Message Waiting. Press **Enter**.

The system displays the **Station** screen ([Figure 38: Station screen](#) on page 247).

Figure 38: Station screen

FEATURE OPTIONS		STATION	
LWC Reception: spe		Auto Select Any Idle Appearance? n	
LWC Activation? y		Coverage Msg Retrieval? y	
LWC Log External Calls? n		Auto Answer: none	
CDR Privacy? n		Data Restriction? n	
Redirect Notification? y		Idle Appearance Preference? n	
Per Button Ring Control? n		Restrict Last Appearance? y	
Bridged Call Alerting? n			
Active Station Ringing: single			
H.320 Conversion? n		Per Station CPN - Send Calling Number?	
Service Link Mode: as-needed			
Multimedia Mode: enhanced		Audible Message Waiting? y	
MWI Served User Type:		Display Client Redirection? n	
AUDIX Name:		Select Last Used Appearance? n	
		Coverage After Forwarding? y	
		Multimedia Early Answer? n	
		Direct IP-IP Audio Connections? y	
		IP Audio Hairpinning? y	
Emergency Location Ext: 30019			

2. In the **Audible Message Waiting** field, perform one of the following actions:

- If you want the user to hear the stutter dial tone if a message is waiting when the user goes off hook, type **y**.
- If you do not want the user to hear the stutter dial tone if a message is waiting when the user goes off hook, type **n**.

The system displays the **Audible Message Waiting** field only if the **Audible Message Waiting** field on the **Optional Features** screen is set to **y**.

Note that the **Audible Message Waiting** field does not control the Message Waiting lamp.

Reports for Audible Message Waiting

The following reports provide information about the Audible Message Waiting feature:

- None

Considerations for Audible Message Waiting

This section provides information about how the Audible Message Waiting feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Audible Message Waiting under all conditions. The following considerations apply to Audible Message Waiting:

- You must tell the user where to call to retrieve messages if the messages are not stored in the system memory for users to access by way of a display or a voice synthesizer.

Interactions for Audible Message Waiting

This section provides information about how the Audible Message Waiting feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Audible Message Waiting in any feature configuration.

- China Special Dial Tone. The Audible Message Waiting feature interacts with the Special Dial Tone feature. This interaction is for customers in China only. This feature plays a special dial tone whenever an analog telephone would normally receive dial tone, but the user needs to know about a feature or condition that is active at the telephone. Examples of such features or conditions include features that can be activated and deactivated by using a FAC from the telephone, and cause some rerouting of calls to that telephone.

AUDIX One-Step Recording

Use the AUDIX One-Step Recording feature to record telephone conversations by pressing a single button. The AUDIX One-Step Recording feature uses Avaya INTUITY AUDIX to record a telephone conversation. A user needs to press only one feature button on the telephone to activate this feature. AUDIX One-Step Recording then stores the recorded conversation as a message in the voice mailbox of the user. The system allows AUDIX One-Step Recording only after a call is answered.

Note:

Some countries, states, and localities have laws that determine if and under what circumstances you can record telephone conversations. Before you administer the AUDIX One-Step Recording feature, you must understand and comply with these laws.

Detailed description of AUDIX One-Step Recording

This section provides a detailed description of the AUDIX One-Step Recording feature.

The AUDIX One-Step Recording feature is available with Avaya Communication Manager release 1.3 (V11) or later.

- Communication Manager release 1.3 supports AUDIX One-Step Recording only when the INTUITY AUDIX system is local.
- Communication Manager release 2.0 and later supports AUDIX One-Step Recording with a local INTUITY AUDIX system or with a remote INTUITY AUDIX system. To use a remote INTUITY AUDIX system, the person recording the conversation must have Communication Manager release 2.0 or later.

Feature button

The AUDIX One-Step Recording feature uses an administered feature button, **audix-rec**. The administrator uses the **Station** screen to assign this button for each telephone. When you assign the feature button, the system requires you to provide the extension for the INTUITY AUDIX hunt group of the user. Users cannot access AUDIX One-Step Recording on any telephone that does not have an administrable feature button, or on an attendant console.

Language options

Five languages are available for the feature button labels for AUDIX One-Step Recording:

- English
- Italian
- French
- Spanish
- A user-defined language

The feature button labels for AUDIX One-Step Recording are available in English, with predefined Italian, French, and Spanish translations. The administrator cannot change the text of the English, the Italian, the French, or the Spanish feature button labels.

The administrator can translate the feature button labels into a user-defined language. This translation can be any other language that the customer chooses, such as German. The administrator can use only one user-defined language throughout the system.

Periodic alerting tone

While INTUITY AUDIX records the conversation, all parties on the call might hear a periodic alerting tone. This alerting tone reminds all parties on the call that INTUITY AUDIX is recording the conversation. The tone that plays is a zip tone.

You choose the time interval to play the periodic alerting tone. If you set the time interval of the periodic alerting tone to zero, the parties hear no alerting tone.

Ready indication tone

When INTUITY AUDIX starts recording the conversation, the system plays a ready indication tone. The tone that plays is a zip tone.

The administrator can set the ready indication tone to play to:

- All the parties on the call.
- The initiator only.

The "initiator" is the user who activates the AUDIX One-Step Recording feature.

- None of the parties on the call.

Recording delay timer

When the user presses the **audix-rec** feature button, INTUITY AUDIX answers. After INTUITY AUDIX answers, the system uses the recording delay timer to wait for INTUITY AUDIX to get ready to interpret digits. The system then sends digit 1 to tell INTUITY AUDIX to start recording.

The recording delay timer is preset to 500 milliseconds. This delay is sufficient for most recorded conversations. If you have to change this setting, see the section titled "Assigning AUDIX One-Step Recording Parameters".

Administering AUDIX One-Step Recording

The following steps are part of the administration process for the AUDIX One-Step Recording feature:

- [Assigning AUDIX One-Step Recording Parameters](#)
- [Translating telephone feature buttons and labels](#)
- [Assigning the feature button to a telephone](#)
- [Changing the characteristics of the zip tone](#)

This section describes:

- Any prerequisites for administering the AUDIX One-Step Recording feature
- The screens that you use to administer the AUDIX One-Step Recording feature
- Complete administration procedures for the AUDIX One-Step Recording feature

Prerequisites for administering AUDIX One-Step Recording

You must complete the following actions before you can administer the AUDIX One-Step Recording feature:

- On the **Optional Features** screen, ensure that the **G3 Version** field is set to **V11** or later. If this field is not set to **V11** or later, your system is not enabled for the AUDIX One-Step Recording feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Screens for administering AUDIX One-Step Recording

Screen name	Purpose	Fields
Optional Features	Ensure that you have Communication Manager version 1.3 (V11) or later.	G3 Version
Feature-Related System Parameters	Set the time interval, in milliseconds, for the recording delay timer.	Recording Delay Timer (msec)
	Assign who on the call can hear the ready indication tone.	Apply Ready Indication Tone To Which Parties In The Call
	Set the time interval, in seconds, for the periodic alerting tone.	Interval For Applying Periodic Alerting Tone (seconds)
Language Translations	If needed, change the translation of the audix-rec feature button to a user-defined language.	Audix Recording
	If needed, change the translation of the Audix Record button label to a user-defined language.	Audix Record
Station	Assign the audix-rec feature button, and associate the hunt group extension of the user.	Button Assignments

Assigning AUDIX One-Step Recording Parameters

To assign the recording delay timer, the ready indication tone, and the periodic alerting tone:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen.
2. Click **Next** until you see the **AUDIX One-step Recording** area ([Figure 39: Feature-Related System Parameters screen](#) on page 253).

Figure 39: Feature-Related System Parameters screen

change system-parameters features	Page 6 of 12
FEATURE-RELATED SYSTEM PARAMETERS	
CONFERENCE/TRANSFER	
Abort Transfer? n	No Dial Tone Conferencing? n
Transfer Upon Hang-Up? n	Select Line Appearance Conferencing? n
Abort Conference Upon Hang-Up? n	Unhold? n
No Hold Conference Timeout: 60	
ANALOG BUSY AUTO CALLBACK	
Without Flash? n	
AUDIX ONE-STEP RECORDING	
Recording Delay Timer (msec): 500	
Apply Ready Indication Tone To Which Parties In The Call? all	
Interval For Applying Periodic Alerting Tone (seconds): 15	

3. If you need to change the time between when AUDIX answers and when AUDIX starts recording, change the value in the **Recording Delay Timer (msec)** field. The time is measured in milliseconds in increments of 100. The default setting is 500 milliseconds.
After AUDIX starts recording, Communication Manager must filter out the AUDIX tone. The user must wait longer than the Recording Delay Timer setting before the user notices that recording has started.
4. In the **Apply Ready Indication Tone To Which Parties In The Call** field, type one of the following values. These values indicate who hears the ready indication tone:
 - If you want all parties on the call to hear the ready indication tone, leave the default set to **all**. The screen displays the **Interval For Applying Periodic Alerting Tone (seconds)** field.
 - If you want only the initiator to hear the ready indication tone, right-click the field and select **initiator**. The screen does not display the **Interval For Applying Periodic Alerting Tone (seconds)** field.
 - If you want no one on the call to hear the ready indication tone, right-click the field and select **none**. The screen does not display the **Interval For Applying Periodic Alerting Tone (seconds)** field.
5. In the **Interval For Applying Periodic Alerting Tone (seconds)** field, type a value between **0** and **60** seconds. This value indicates how often all parties on the call hear the periodic alerting tone.
The default value is **15** seconds. If you set the value to **0**, no one on the call hears the periodic alerting tone.
6. Press **Enter** to save your changes.

Translating telephone feature buttons and labels

To translate telephone feature buttons and labels for AUDIX One-Step Recording to a user-defined language, you must complete the following procedures:


- [Translating the AUDIX One-Step Recording text that appears on a telephone display to a user-defined language](#)
- [Translating the AUDIX One-Step Recording button label to a user-defined language](#)

Translating the AUDIX One-Step Recording text that appears on a telephone display to a user-defined language

To translate the text that appears on your telephone display, when this feature is recording, to a user-defined language:

1. Type **change display-messages view-buttons**. Press **Enter**.
The system displays the **Language Translations** screen.
2. Click **Next** until you see the **Audix Recording** field ([Figure 40: Language Translations screen](#) on page 254).

 Figure 40: Language Translations screen

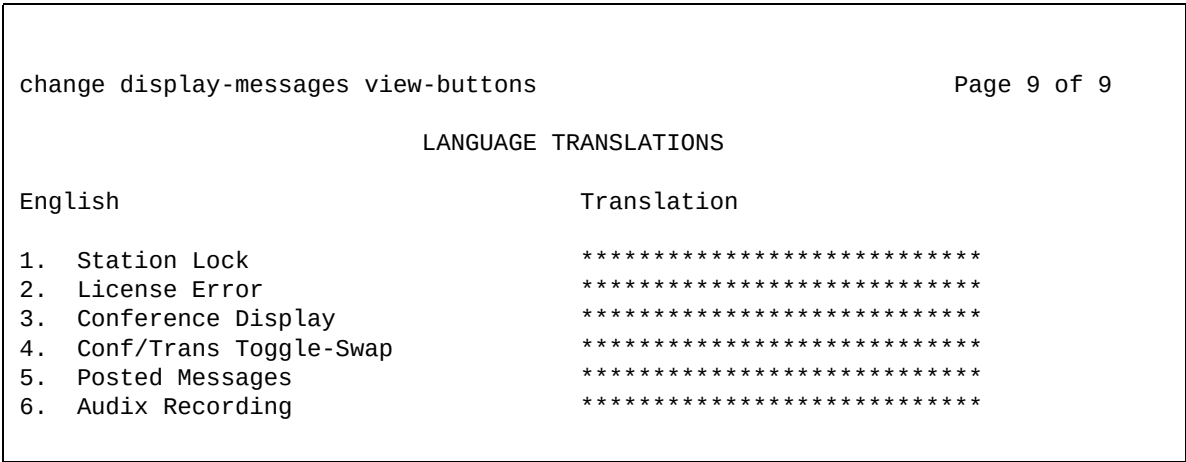

3. In the **Translation** field, type a translated name for **Audix Recording** into the user-defined language.

Note that the language translations for the English, the Italian, the French, and the Spanish feature display are predefined. You cannot change the text for these translations.

4. Press **Enter** to save your changes.

Translating the AUDIX One-Step Recording button label to a user-defined language

The 2420 DCP telephone and the 4620 IP telephone have digital button labels instead of paper labels. If you need to translate the AUDIX One-Step Recording button labels into a user-defined language for these telephones, follow this procedure.

To translate the AUDIX One-Step Recording button label for the 2420 DCP telephone and the 4620 IP telephone to a user-defined language:

1. Type **change display-messages button-labels**. Press **Enter**.

The system displays the **Language Translations** screen.

2. Click **Next** until you see the **Audix Record** field ([Figure 41: Language Translations screen](#) on page 255).

Figure 41: Language Translations screen

change display-messages button-labels
Page 9 of 9

LANGUAGE TRANSLATIONS

English	Translation
1. Alternate FRL	1. *****
2. ANI Request	2. *****
3. Assist	3. *****
4. ASVN Halt	4. *****
5. AttQueueCall	5. *****
6. AttQueueTime	6. *****
7. Audix Record	7. *****
8. Auto Callback	8. *****
9. Auto Chk Halt	9. *****
10. AutoIC	10. *****
11. Auto In	11. *****
12. AutoWakeAlarm	12. *****
13. Auto Wakeup	13. *****
14. AuxWork	14. *****
15. Busy	15. *****

3. In the **Translation** field, type a translated name for the **Audix Record** button label into the user-defined language.

Note that the language translations for the English, the Italian, the French, and the Spanish feature buttons are predefined. You cannot change the text for these translations.

4. Press **Enter** to save your changes.

Assigning the feature button to a telephone

To assign the **audix-rec** feature button to an individual telephone:

- 1. Type **change station *n***, where *n* is the extension of the telephone. Press **Enter**.

The system displays the **Station** screen.

- 2. Click **Next** until you see the **Button Assignments** area ([Figure 42: Station screen](#) on page 256).

Figure 42: Station screen

change station 9876

Page 3 of 3

STATION

SITE DATA

Room:

Jack:

Cable:

Floor:

Building:

Headset? n

Speaker? n

Mounting: d

Cord Length: 0

Set Color:

ABBREVIATED DIALING

List1:

List2:

List3:

BUTTON ASSIGNMENTS

1. call-appr

2. call-appr

3. call-appr

4. audix-rec Ext: 9800

5.

6.

7.

8.

9.

10.

- 3. Right-click a button field that is not assigned to see a list of button names. Select **audix-rec** from the list.

The screen displays an **Ext** field.

- 4. In the **Ext** field, type the AUDIX hunt group extension of the user.
- 5. Press **Enter** to save your changes.

Changing the characteristics of the zip tone

When the AUDIX One-Step Recording feature is recording a conversation, the tone that a user hears is a zip tone. By default, a zip tone plays at a frequency of 480 Hz for 500 milliseconds, followed by silence.

If you need to change the characteristics of the zip tone, the screen that you use depends on what version of Communication Manager you have.

To change the characteristics of the zip tone if you have Communication Manager release 2.0 (V12) or later:

1. Type **change tone-generation**. Press **Enter**.

The system displays the **Tone Generation** screen.

2. Click **Next** until you see either:

- An existing **Tone Generation Customized Tones** screen for the zip tone
If a screen already exists for the zip tone, the word **zip** appears in the **Tone Name** field.
- A blank **Tone Generation Customized Tones** screen ([Figure 43: Tone Generation Customized Tones screen](#) on page 257).

Figure 43: Tone Generation Customized Tones screen

change tone-generation
Page 4 of 21

TONE GENERATION CUSTOMIZED TONES

Tone Name	Cadence Step	Tone (Frequency/Level)
	1:	
	2:	
	3:	
	4:	
	5:	
	6:	
	7:	
	8:	
	9:	
	10:	
	11:	
	12:	
	13:	
	14:	
	15:	

If a screen already exists for the zip tone, skip the next step and go to Step 4.

AUDIX One-Step Recording

3. Right-click the **Tone Name** field to see a list of options. Select **zip** from the list.
4. Right-click the **Cadence Step 1** field to see a list of options. Select a tone frequency and level combination from the list.

The screen displays a **Duration (msec)** field.

5. In the **Duration (msec)** field, type the number of milliseconds for which you want the zip tone to play.

6. Right-click the **Cadence Step 2** field to see a list of options. Select **silence** from the list.

The screen displays a **Duration (msec)** field.

7. In the **Duration (msec)** field, type the number of milliseconds for which you want the zip tone to remain silent after the system plays the tone.

8. Press **Enter** to save your changes.

To change the characteristics of the zip tone if you have Communication Manager, release 1.3 (V11) or earlier:

1. Type **change system-parameters country-options**. Press **Enter**.

The system displays the **System Parameters Country-Options** screen.

2. Click **Next** until you see either:

- An existing **System Parameters Country-Options** screen for the zip tone
If a screen already exists for the zip tone, the word **zip** appears in the **Tone Name** field.
- A blank **System Parameters Country-Options** screen ([Figure 44: System Parameters Country-Options screen](#) on page 259).

Figure 44: System Parameters Country-Options screen

change system-parameters country-options Page 7 of 24

SYSTEM PARAMETERS COUNTRY-OPTIONS

Tone Name	Cadence Step	Tone (Frequency/Level)
	1:	
	2:	
	3:	
	4:	
	5:	
	6:	
	7:	
	8:	
	9:	
	10:	
	11:	
	12:	
	13:	
	14:	
	15:	

If a screen already exists for the zip tone, skip the next step and go to Step 4.

3. Right-click the **Tone Name** field to see a list of options. Select **zip** from the list.
4. Right-click the **Cadence Step 1** field to see a list of options. Select a tone frequency and level combination from the list.

The screen displays a **Duration (msec)** field.

5. In the **Duration (msec)** field, type the number of milliseconds for which you want the zip tone to play.
6. Right-click the **Cadence Step 2** field to see a list of options. Select **silence** from the list.

The screen displays a **Duration (msec)** field.

7. In the **Duration (msec)** field, type the number of milliseconds for which you want the zip tone to remain silent after the system plays the tone.
8. Press **Enter** to save your changes.

End-user procedures for AUDIX One-Step Recording

End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for the AUDIX One-Step Recording feature.

Recording a conversation

The user who wants to record the conversation is called the "initiator."

Note:

This procedure assumes that the initiator understands and complies with any country, state, and local laws concerning if you can record telephone conversations.

1. A user announces to the other parties on the call that he or she wants to record the conversation.
2. This user gets permission from the parties, and presses the **audix-rec** button to record the conversation.

When the initiator presses the **audix-rec** button, the LED for the **audix-rec** button flashes. After a few seconds, the telephone displays of all internal users on the call change to **Conference**. The number of parties on the call increases by one. The LED on the telephone of the initiator stays on, and no longer flashes. This light indicates that INTUITY AUDIX is ready to record.

INTUITY AUDIX starts to record the conversation. The system plays the ready indication tone to indicate that recording is started. Only the initiator hears any INTUITY AUDIX announcements.

3. To stop the recording at any time, the initiator can press the **audix-rec** button again. The LED on the telephone of the initiator goes out. The number of parties on the call decreases by one. The call remains active. The initiator can press the **audix-rec** button to start and stop recording the same conversation any number of times. Each time creates a separate recorded message.

If the initiator hangs up while AUDIX is recording the conversation, the recording ends. If the call is originally a two-party call and the other party hangs up, the recording ends. If the call is originally a multiple-party conference call and someone other than the initiator hangs up, the recording continues.

When the recording ends, the system saves the recorded conversation in the voice mailbox of the initiator as a new voice mail message.

Reports for AUDIX One-Step Recording

The following reports provide information about the AUDIX One-Step Recording feature:

- None

Considerations for AUDIX One-Step Recording

This section provides information about how the AUDIX One-Step Recording feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of AUDIX One-Step Recording under all conditions. The following considerations apply to the AUDIX One-Step Recording feature:

- Capacity constraints and feature limitations

AUDIX One-Step Recording has the following capacity constraints and feature limitations:

- Only one simultaneous AUDIX recording is allowed for each call.
- The **audix-rec** feature button works as a toggle button. When the button is active, the button is associated with only one call. A user cannot use the **audix-rec** feature button on two calls simultaneously.
- Attendant consoles do not have an **audix-rec** feature button. Attendants cannot use the AUDIX One-Step Recording feature.
- Service observers who are actively involved in service observing cannot use the AUDIX One-Step Recording feature.

- Denial scenarios

The AUDIX One-Step Recording feature is denied, and the feature button flutters, if a user presses the **audix-rec** button when:

- No call is active on the telephone
- The user is still dialing digits
- The connection to AUDIX is not operating
- All AUDIX ports are busy
- The number of parties on the call reaches the administered maximum
- Another party on the call is already recording the conversation with AUDIX One-Step Recording
- The user starts the recording from a bridged call appearance
- Service observers are actively involved in service observing
- The incoming or outgoing call is ringing and is not answered

- Security

Some countries, states, and localities have laws that determine if and under what circumstances you can record telephone conversations. Before you administer the AUDIX One-Step Recording feature, you must understand and comply with these laws.

- Serviceability

This feature depends on AUDIX to function. The administrator is responsible for properly administering AUDIX. AUDIX must work for the telephone user before the administrator applies this feature to the telephone. Specifically, the administrator needs to set the appropriate **Mailbox Size** and **Voice Mail Message Maximum Length** on AUDIX for the user.

The **audix-rec** button requires the extension of the AUDIX hunt group of the user. The administrator must type the correct extension on the **Station** screen.

Interactions for AUDIX One-Step Recording

This section provides information about how the AUDIX One-Step Recording feature interacts with other features in your system. Use this information to ensure that you receive the maximum benefits of AUDIX One-Step Recording in any feature configuration. The following interactions apply to the AUDIX One-Step Recording feature:

- Bridged Call Appearance

- A user cannot activate or deactivate the **audix-rec** feature button from a bridged call appearance.
- If the administrator sets the ready indication tone to play to all parties, parties on bridged call appearances hear the tone. If the administrator sets the ready indication tone to play to the initiator only, parties on bridged call appearances do not hear the tone.

- Call Park

When AUDIX One-Step Recording is active on a call, the system does not allow the user to park the call. If the user attempts to park the call, the call appearance LED flutters.

When a call is parked, the system does not allow the user to activate AUDIX One-Step Recording. If the user attempts to activate AUDIX One-Step Recording, the feature button LED flutters.

- Conference

When the recording request is in process, the LED is flashing. If anyone attempts to conference in another party, AUDIX One-Step Recording stops. The LED goes out.

When the recording starts, the LED is on but not flashing. Any party on the call can conference in another party. The recording continues.

If AUDIX One-Step Recording is in progress on two separate calls, the system does not allow the user to conference the two calls together.

- Coverage Answer Group

An answer group contains up to eight members who act as a coverage point for another user. For example, if several attendants are responsible to answer redirected calls from a department, assign all attendants to an answer group. The administrator assigns a group number to the answer group. That group number appears in the coverage path of that department. All telephones in an answer group ring simultaneously. Any member of the group can answer the call.

When a member of a Coverage Answer Group answers a call, any of the parties on the call can press the **audix-rec** button to record the conversation. The system stores the recorded message in the voice mailbox of the party who answers the call.

- Drop Last

After AUDIX starts to record, the initiator becomes the control party. If the initiator presses the **Drop** button, AUDIX One-Step Recording stops and the LED goes out. If other parties on the call press the **Drop** button, the system denies the request.

- Group Paging that uses a speakerphone

With Group Paging, users can make an announcement over a group of digital speakerphones. Neither the group members who receive a page, nor the originator of the page, can use AUDIX One-Step Recording to record the conversation. If anyone on the call presses the **audix-rec** button, the system ignores the request. The LED flutters.

- Hunt Group

If a member of a hunt group answers a call, the parties on the call can use AUDIX One-Step Recording to record the conversation. The system stores the recorded message in the voice mailbox of the party who answers the call.

- Hunt Group queueing

Users cannot activate AUDIX One-Step Recording when the following conditions apply.

- The queue is enabled for the AUDIX hunt group
- All the AUDIX ports are busy

- Meet-me Conference

Parties on a Meet-me Conference can use AUDIX One-Step Recording. Conference parties can selectively use the Display and Drop feature to drop the AUDIX One-Step Recording hunt group extension from the call. The LED goes out.

AUDIX One-Step Recording

- Mode Code interface

Voice mail connections through the Mode Code interface rely on digits that are sent over analog ports. The AUDIX One-Step Recording feature does not work with a Mode Code connection.

- Terminating Extension Group (TEG)

Neither group members who receive TEG calls, nor the originators of TEG calls, can use AUDIX One-Step Recording to record the conversation. If anyone on the call presses the **audix-rec** button, the system denies the request. The LED flutters.

- Transfer

When the recording request is in process, the LED is flashing. If anyone attempts to transfer the call to another party, AUDIX One-Step Recording stops. The LED goes out.

When the recording starts, the LED is on but not flashing. Any party on the call can transfer the call to another party.

- If the initiator transfers the call, recording automatically stops after the transfer.
- If another party on the call transfers the call, recording continues.

If AUDIX One-Step Recording is in progress on two separate calls, the system does not allow a user to transfer one call to the other.

- Vector Directory Number (VDN)

When a call is answered through a VDN, any of the parties on the call can press the **audix-rec** button to record the conversation.

- Whisper Page

With Whisper Page, no parties on the call can use AUDIX One-Step Recording to record the conversation. If anyone on the call presses the **audix-rec** button, the system denies the request. The LED flutters.

Troubleshooting AUDIX One-Step Recording

This section lists the known or common problems that users might experience with the AUDIX One-Step Recording feature.

Problem	Possible cause	Action
The user does not have the audix-rec button on the telephone.	The audix-rec button is not assigned to the telephone of the user.	Use the change station <i>n</i> command, where <i>n</i> is the extension of the telephone, to add the audix-rec button.
	The telephone of the user does not support buttons that can be administered.	This user cannot access the AUDIX One-Step Recording feature.
The user hears a beep every few seconds during recording.	The alerting tone interval is set too low.	Set the alerting tone interval to a number that is between 15 and 60.

AUDIX One-Step Recording

Problem	Possible cause	Action
Nothing happens when the user presses the audix-rec button. The button light flutters.	The user was not on an active call.	Inform the user that the audix-rec button only works if the user is on an active call.
	The connection to AUDIX is not operating.	Ensure that AUDIX is operating correctly. If not, the user must wait for the system to reestablish the connection.
	The LAN connection between the AUDIX server and the Communication Manager server is not operating.	Ensure that AUDIX is operating correctly. If not, the user must wait for the system to reestablish the connection.
	All the AUDIX ports are busy.	The user must wait for an AUDIX port to be released.
	Another person on the call is already using the AUDIX One-Step Recording feature to record the conversation.	The user cannot record the conversation if someone else on the call is already using this feature.
	The user attempted to start the AUDIX One-Step Recording feature from a bridged call appearance.	The user cannot record the conversation from a bridged call appearance.
	Remote AUDIX is configured for Communication Manager release 1.3.	● Move the voice mail service of the user to a local AUDIX, or ● Upgrade the user to Communication Manager release 2.0 or later.
The user does not hear a beep during recording.	The ready indication tone is set to play to only the initiator, or to no one.	Set the ready indication tone to all .
	The alerting tone interval is set to zero.	Set the alerting tone interval to a number between 15 and 60.
	The zip tone is set to silence instead of to a frequency and duration.	Reset the characteristics of the zip tone.
After the green LED is steady and the recording starts, the user hears an AUDIX announcement.	If configured with Intuity® AUDIX, ARIA TUI might be turned on. The Recording Delay Timer is not set high enough.	Set the Recording Delay Timer to a higher number.

Authorization Codes

Use the Authorization Codes feature to control the calling privileges of system users. Authorization codes extend control of calling privileges and enhance security for remote access callers. To maintain system security, Avaya recommends that you use authorization codes.

You can use authorization codes to:

- Override a facilities restriction level (FRL) that is assigned to an originating station or trunk
- Restrict individual incoming tie trunks and remote access trunks from accessing outgoing trunks
- Track Call Detail Recording (CDR) calls for cost allocation
- Provide additional security control

Detailed description of Authorization Codes

When you dial an authorization code, the Facilities Restriction Level (FRL) that is assigned to the extension, the attendant console, the incoming trunk group, or the remote access trunk group that is in use for the call is replaced by the FRL assigned to the authorization code. The FRL that is assigned to the authorization code functions in the same way as the original FRL. However, the new FRL that is assigned to the authorization code might represent greater or lesser calling privileges than the original FRL. Access to any given facility depends on the restrictions that are associated with the FRL of the authorization code.

The following example shows how authorization codes work with FRLs.

A supervisor is at a desk of an employee. The supervisor wants to make a call that is usually not allowed by the FRL that is assigned to the extension of that employee. The supervisor, however, can still make the call if the supervisor dials an authorization code that is assigned an FRL. The FRL must be an FRL for the type of call that is allowed.

Length of authorization codes

For security reasons, authorization codes must consist of 4 to 13 digits. The number of digits in the codes must be a fixed length for a particular server that is running Avaya Communication Manager.

Once established, the number of digits (4 to 13) in the authorization code remains fixed unless all codes are removed and reentered. All authorization codes that are used in the system must be the same length.

Using authorization codes

You can administer incoming trunk groups within a system to always require an authorization code. The system applies recall dial tone to a call when the user must dial an authorization code. If the user dials a correct authorization code within 10 seconds (interdigit timeout), the system completes the call as dialed. If the user does not dial an authorization code, or dials an incorrect authorization code, the system routes the call to an attendant. The system can also route the call to an intercept tone based on how the system was administered.

Usually, Direct Inward Dialing (DID) trunks do not require authorization codes. However, you can administer DID trunks to require an authorization code, but you must do this carefully. Different types of calls can terminate at different endpoints, and requiring an authorization code can be confuse the user.

You can also administer a Cancellation of Authorization Code Request (CACR) digit. The CACR digit cancels the 10-second interval between dialing. When the user dials the CACR digit, the system immediately routes the call according to system administration. Incoming trunk calls receive intercept tone or go to the attendant. Other calls receive intercept tone unless the user's FRL is high enough to route the call. A CACR digit from an off-premises extension over DID and Tie trunks use DID and Tie trunk intercept treatment. Internal calls receive intercept tone.

You must not program passwords or authorization codes onto auto dial buttons. Because display telephones display the programmed buttons, the potential exists for an unauthorized person to use the autodial buttons. If you must program passwords or authorization codes onto auto dial buttons, use the ~s (suppress) character to prevent displaying the codes.

AAR and ARS calls

Each authorization code is assigned a Class of Restriction (COR) that contains an associated FRL. Within a system, the FRL that is assigned to the point at which the call originates determines the access privileges that are associated with the call. When an AAR or an ARS call is dialed, the system allows or denies the call, based on the FRL of the originating station. You use COR to restrict internal or non-AAR or an ARS calls.

You can assign authorization codes to individual users to specify the level of calling privileges. Such codes work regardless of the originating facility. Once an authorization code is required and dialed on an AAR or an ARS call, the FRL assigned to the authorization code replaces the originating FRL. This new FRL controls and defines the privileges of the user.

An AAR call or an ARS call that a system user originates, or routes over an incoming tie trunk can require a dialed authorization code to continue routing.

When you administer authorization codes, ensure that the user does not have to dial the authorization code more than once. For example, if a user makes an AAR call or an ARS call, and the FRL of the user is not high enough to access any of the trunks in the routing pattern, the system prompts the user for an authorization code. If the FRL that is assigned to the authorization code is high enough to access the next trunk group in the routing pattern, the user is not prompted to dial the code again. If the system routes the call through another system, the user might be required to dial an authorization code again. This type of situation can be avoided through careful administration.

An authorization code might be required on some, but not all, trunk groups. In such cases, the system prompts for an authorization code when the originating FRL is not high enough to access the next available trunk group in the routing pattern.

Administering Authorization Codes

The following steps are part of the administration process for the Authorization Codes feature:

- [Setting up Authorization Codes](#)
- [Creating Authorization Codes with a specific Class of Restriction \(COR\)](#)

This section describes:

- Any prerequisites for administering the Authorization Codes feature
- The screens that you use to administer the Authorization Codes feature
- Complete administration procedures for the Authorization Codes feature

Prerequisites for administering Authorization Codes

You must complete the following actions before you can administer authorization codes:

- On the **Optional Features** screen, ensure that the **Authorization Codes** field is set to **y**. If the **Authorization Code** field is set to **n**, your system is not enabled for the Authorization Codes feature. Contact your Avaya representative for assistance.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Screens for administering Authorization Codes

Screen name	Purpose	Fields
Optional Features	Ensure that the Authorization Codes feature is enabled on the system.	Authorization Code
Feature-Related System Parameters	Enable the Authorization Codes feature, and set up other fields to administer the feature.	● Authorization Code Enabled ● Authorization Code Length ● Display Authorization Code
Authorization Codes - COR Mapping	Create an Authorization Code that has a specific COR.	● AC ● COR

Setting up Authorization Codes

To set up authorization codes:

1. Type **change system-parameters features**. Press **Enter**.

The system displays the **Feature-Related System Parameters** screen ([Figure 45: Feature-Related System Parameters screen](#) on page 271).

Figure 45: Feature-Related System Parameters screen

change system-parameters features Page 3 of 8

FEATURE-RELATED SYSTEM PARAMETERS

Reserved Slots for Attendant Priority Queue: 5_
 Time Before Off-Hook Alert: 10__
 Emergency Access Redirection Extension: ____
 Number of Emergency Calls Allowed in Attendant Queue: ____
 Call Pickup Alerting? n
 Temporary Bridged Appearance on Call Pickup? y
 Call Pickup on Intercom Calls? y
 Directed Call Pickup? n
 Deluxe Paging and Call Park Timeout to Originator? n
 Controlled Outward Toll Restriction Intercept Treatment: tone ____
 Controlled Termination Restriction (Do Not Disturb): tone ____
 Controlled Station to Station Restriction: tone ____

AUTHORIZATION CODE PARAMETERS

Authorization Code Enabled? y
 Authorization Code Length: 7
 Authorization Code Cancellation Symbol? #
 Attendant Time Out Flag? n
 Display Authorization Code? _

 Controlled Toll Restriction Replaces: station-station
 Controlled Toll Restriction Intercept Treatment: extension 3000

2. In the **Authorization Code Enabled** field, type **y** to enable the Authorization Codes feature on a system-wide basis.
3. In the **Authorization Code Length** field, type the number of digits that you want for the authorization code.

This field defines the length of the Authorization Codes your users need to enter. To maximize the security of your system, Avaya recommends you make each authorization code the maximum length that the system allows. In the example shown, the authorization code has 7 digits. Avaya recommends that authorization codes must have at least 4 digits, but no more than 13.

4. In the **Authorization Code Cancellation Symbol** field, leave the default of the pound sign (#).

Users must dial this symbol to cancel the 10-second wait period during which your user can enter an authorization code.

5. In the **Attendant Time Out Flag** field, leave the default of **n**.

When you set this field to **n**, the system does not route a call to the attendant if a user does not dial an authorization code within 10 seconds, or a user dials an invalid authorization code.

6. In the **Display Authorization Code** field, type **n**.

When you set this field to set to **n**, the authorization code does not display on the phone sets thus maximizing security.

7. Press **Enter** to save your changes.

8. Type **change authorization-code *n***, where *n* is the authorization code. Press **Enter**.

The system displays the **Authorization Code - COR Mapping** screen ([Figure 46: Authorization Code - COR Mapping screen](#) on page 272).

Figure 46: Authorization Code - COR Mapping screen

[illegible]

9. In the **AC** field, type the authorization code that your users must dial.

The number of digits in the code that you type must be the same as the number you assigned in the **Feature-Related System Parameters** screen in Step 3. In this example, the authorization code is **4285193**.

10. In the **COR** field, type a COR number from 0 through 95.

In this example, the COR number is **1**.

11. Press **Enter** to save your changes.

Reports for Authorization Codes

The following reports provide information about the Authorization Codes feature:

- None

Considerations for Authorization Codes

This section provides information about how the Authorization Codes feature behaves in certain circumstances. Use this information to ensure that you receive maximum benefits of the Authorization Codes feature under all conditions:

- From remote locations users usually access authorization from touch-tone telephones. However, users can also do so from rotary telephones at specified authorization-code-forced locations that follow appropriate trunk administration practices. Rotary station users access attendants using Listed Directory Numbers (LDN) or Remote Access Numbers (RAN), and can experience a 10-second timeout.
- The use of Authorization Codes does not limit other call-control methods, such as Toll Restriction, Miscellaneous Trunk Restriction, and Outward Restriction.
- For security reasons, do not assign authorization codes in sequential order. Assign random number barrier codes and authorization codes to users. Random codes prevent hackers from deciphering the sequential codes.
- If timeout to attendant does not occur or a Cancellation of Authorization Code Request (CACR) digit codes are dialed instead of authorization codes, the system assumes that invalid authorization codes were dialed and the caller hears intercept tones.
- Authorization codes can have an impact calling privileges. Authorization codes can:
 - Change the FRL of an outgoing call when the FRL is not high enough to access preferred that AAR/ARS assigns. An FRL is assigned to a COR that is associated with user authorization codes. No additional COR data is assigned.
 - Overrides COR for remote access calls that are assigned to barrier codes, when required. If an authorization code is required for remote access calls, the user is assigned the COR of the dialed authorization code, with all connected data, such as the FRL. This COR overrides the COR that is assigned to any required barrier code.
- Incoming trunk calls that require authorization codes do not change user privileges.

Interactions for Authorization Codes

This section provides information about how the Authorization Codes feature interacts with other features on the system. Use this information to ensure that you receive maximum benefits of the Authorization Codes feature in any feature configuration:

- **AAR/ARS Partitioning**

Class of Restriction (COR) assigns partitioned group numbers and authorization codes can change CORs. Therefore, authorization codes can change Partitioned Group Numbers on incoming remote access calls. For originating calls, the COR of the user determines Partitioned Group Numbers.

- **Cancellation of Authorization Code Request**

If	Then
CACR =1	● Authorization = 1
Network = DEFG1, DEFG3 or DEF ECSR5	● CACR can be #
Network - S85s, DIM switch	● CACR = 1 (default)

- **COR and Facilities Restriction Level (FRL)**

Authorization codes used for AAR or ARS calls override the associated FRL.

Associated Classes of Restriction determine remote-access user privileges.

- **Forced Entry of Account Codes and Call Detail Recording**

For 94A LSU and 3B2 CDRU 18-word records, authorization codes are output if administered account-code lengths are fewer than six digits. For 59-character records, authorization codes are never recorded. Note that 94A LSU and 3B2 CDRU are no longer supported.

Authorization codes are recorded after destination addresses are dialed. Invalidly dialed authorization codes are recorded, and CDR printouts can be used to determine patterns.

Automated Attendant

Use the Automated Attendant feature to allow callers to dial an extension without the need for an attendant to connect the call.

Detailed description of Automated Attendant

This section provides a detailed description of the Automated Attendant feature.

A caller dials any extension on the system. The Automated Attendant feature uses vectors to route the call to that extension. This feature reduces the need for live attendants, which can help to reduce costs.

The Automated Attendant feature works together with the Attendant Vectoring feature. For more information, see the "Attendant Vectoring" feature. For more information about vectors and vector directory numbers (VDNs), see the "Meet-Me Conference" feature.

The *Avaya MultiVantage™ Call Center Software Call Vectoring and Expert Agent Selection (EAS) Guide* contains a detailed description of Automated Attendant, and how to use the Automated Attendant feature. The guide also gives a sample vector that you can use for Automated Attendant.

Administering Automated Attendant

The following steps are part of the administration process for the Automated Attendant feature:

- [Setting the prompting timeout](#)
- [Administering a vector directory number](#)
- [Administering announcements](#)
- [Controlling hunt groups by vector](#)
- [Administering call vectors](#)
- [Assigning a caller information button on a multiappearance telephone](#)
- [Assigning a caller information button on an attendant console](#)

This section describes:

- Any prerequisites for administering the Automated Attendant feature
- The screens that you use to administer the Automated Attendant feature
- Complete administration procedures for the Automated Attendant feature

Prerequisites for administering Automated Attendant

You must complete the following actions before you can administer the Automated Attendant feature:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.
- On the **Optional Features** screen, ensure that the **Vectoring (Prompting)** field is set to **y**. If the **Vectoring (Prompting)** field is set to **n**, your system is not set up for the Automated Attendant feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Screens for administering Automated Attendant

Screen name	Purpose	Fields
Optional Feature	Ensure that the Automated Attendant feature is activated.	Vectoring (Prompting)
Feature-Related System Parameters	Set the prompting timeout period.	Prompting Timeout
Vector Directory Number	Assign a VDN to an extension.	All
Announcements/ Audio Sources	Complete all fields for each extension that provides an Automated Attendant announcement.	All
Hunt Group	Indicate that the system controls hunt groups with vectors.	Vector
Call Vector	Complete a Call Vector screen for each Automated Attendant vector.	All

Screen name	Purpose	Fields
Station	Assign a callr-info display button for multiappearance telephones.	Any blank field in either the Button Assignments area or the Feature Button Assignments area
Attendant Console	Assign a callr-info display button for attendant consoles.	Any blank field in the Feature Button Assignments area

Setting the prompting timeout

To set the prompting timeout:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen.
2. Click **Next** until you see the **Vectoring** area ([Figure 48: Feature-Related System Parameters screen](#) on page 279).

Figure 48: Feature-Related System Parameters screen

change system-parameters features
Page 7 of 8

CALL CENTER SYSTEM PARAMETERS

EAS

Expert Agent Selection (EAS) Enabled? n

Minimum Agent-LoginID Password Length: _____

Direct Agent Announcement Extension: _____ Delay: ____

Message Waiting Lamp Indicates Status For: station

VECTURING

Converse First Data Delay: 0

Converse Signaling Tone (msec): 100

Prompting Timeout (secs): 10

Interflow-qpos EWT Threshold: 2

Second Data Delay: 2

Pause (msec): 70_

SERVICE OBSERVING

Service Observing Warning Tone? n

ASAI

Call Classification After Answer Supervision? n

Send UCID to ASAI? n

3. In the **Prompting Timeout (sec)** field, type the number of seconds before the **collect digits** command times out for callers who use rotary dialing. This value must be a number from 4 to 10. The default is 10.

The **Prompting Timeout (sec)** field appears only if the **Vectoring (Prompting)** field on the **Optional Features** screen is set to **y**.

4. Press **Enter** to save your changes.

Administering a vector directory number

To administer a vector directory number (VDN), see the *Avaya MultiVantage™ Call Center Software Call Vectoring and Expert Agent Selection (EAS) Guide*.

See also the "Attendant Vectoring" feature.

Administering announcements

To administer announcements for the Automated Attendant, see the "Announcements" feature.

Controlling hunt groups by vector

To control hunt groups by vector:

1. Type **change hunt-group *n***, where *n* is the number of the hunt group that you want to control by vector. Press **Enter**.

The system displays the **Hunt Group** screen ([Figure 49: Hunt Group screen](#) on page 281).

Figure 49: Hunt Group screen

change hunt-group 12345		Page 1 of 3
HUNT GROUP		
Group Number: ____		ACD? n
Group Name: _____		Queue? y
Group Extension: ____		Vector? y
Group Type: ____		
TN: ____		
COR: ____		MM Early Answer?
Security Code: ____		
ISDN Caller Disp: ____		
Queue Length: ____		
Calls Warning Threshold: ____	Port: x	Extension: ____
Time Warning Threshold: ____	Port: x	Extension: ____

2. In the **Vector** field, type **y** to indicate that this hunt group is vector controlled.

You can change the **Vector** field to **y** only if the **Vectoring (Basic)** field on the **Optional Features** screen is set to **y**. For more information on setting up hunt groups, see the "Hunt Group" feature.

3. Press **Enter** to save your changes.

Administering call vectors

To administer call vectors for each Automated Attendant vector, see the "Call Vector" feature.

Assigning a caller information button on a multiappearance telephone

You can administer any multiappearance display telephone to have a caller information (**callr-info**) button. This button displays digits that were collected for the last **collect digits** command.

To assign a **callr-info** button on a multiappearance telephone:

1. Type **change station n**, where **n** is the extension of the telephone that you want to change. Press **Enter**.

The system displays the **Station** screen.

2. Click **Next** until you see the **Button Assignments** area ([Figure 50: Station screen](#) on page 282).

If all the buttons are assigned in this area, click **Next** until you see The **Feature Button Assignments** area.

Figure 50: Station screen

change station 60006
Page 3 of 5

STATION

SITE DATA

Room: _____

Jack: _____

Cable: _____

Floor: _____

Building: _____

Headset? n

Speaker? n

Mounting: d

Cord Length: 0_

Set Color: _____

ABBREVIATED DIALING

List1: _____ List2: _____ List3: _____

BUTTON ASSIGNMENTS

1: call-appr	4: cpn-blk
2: call-appr	5: cpn-unblk
3: call-appr	6: callr-info

3. In the **Button Assignments** area or in the **Feature Button Assignments** area, assign **callr-info** to an available button.

In this example, we assign **callr-info** to button 6 in the **Button Assignments** area.

4. Press **Enter** to save your changes.

Assigning a caller information button on an attendant console

You can administer an attendant console to have a caller information (**callr-info**) button. This button displays digits that were collected for the last **collect digits** command.

To assign a **callr-info** button on an attendant console:

1. Type **change attendant n**, where **n** is the number of the attendant console to which you want to assign a **callr-info** button. Press **Enter**.

The system displays the **Attendant Console** screen.

2. Click **Next** until you see the **Feature Button Assignments** area ([Figure 51: Attendant Console screen](#) on page 283).

Figure 51: Attendant Console screen

change attendant 1

ATTENDANT CONSOLE

Page 3 of 4

FEATURE BUTTON ASSIGNMENTS

1: split_____

2: dont-split

3: act-tr-grp

4: deact-tr-g

5: _____

6: hold _____ *

7: _____

8: aux-work

9: _____

10: _____

11: _____

12: _____

RC:

Grp:

13: callr-info

14: _____

15: _____

16: _____

17: _____

18: _____

19: forced-rel

20: _____

21: _____

22: _____

23: night-serv *

24: pos-busy__ *

3. In the **Feature Button Assignments** area, assign **callr-info** to an available button.
- In this example, we assign **callr-info** to button 13.
4. Press **Enter** to save your changes.

Reports for Automated Attendant

The following reports provide information about the Automated Attendant feature:

- None

Considerations for Automated Attendant

This section provides information about how the Automated Attendant feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Automated Attendant under all conditions. The following considerations apply to Automated Attendant:

- Automated Attendant competes with several features for ports on the call classifier - detector circuit pack or an equivalent circuit pack.

Interactions for Automated Attendant

This section provides information about how the Automated Attendant feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Automated Attendant in any feature configuration.

- Avaya INTUITY AUDIX

Automated Attendant gives the caller the option to leave a message or wait in a queue for an attendant.

- Authorization Codes

The system does not prompt for an authorization code, and the **route-to** command fails if:

- Authorization codes are enabled
- A **route-to** command in a prompting vector accesses either Automatic Alternate Routing (AAR) or Automatic Route Selection (ARS)
- The Facility Restriction Level (FRL) of the vector directory number (VDN) does not have the permission to use the chosen routing preference

- CallVisor Adjunct-Switch Application Interface (ASAI)

The Call Vectoring feature can collect ASAI-provided digits through the **collect vector** command as dial-ahead digits. The system passes CINFO to CallVisor ASAI.

- Hold

If a call is put on hold during the processing of a collect command, the command restarts at the announcement prompt when the call is taken off hold. All dialed-ahead digits are lost. Similarly, if a call to a vector is put on hold, vector processing is suspended when a collect command is encountered. When the call becomes active, the collect command resumes.

- Inbound Call Management (ICM)

You can use Automated Attendant to collect information that an adjunct might later use to handle a call.

- Transfer

If a call to a VDN is transferred during a collect command, the collect command restarts when the transfer is complete. All dialed-ahead digits are lost. Similarly, if a call to a vector is transferred, vector processing is suspended when a collect command is encountered. When the transfer is complete, the collect command resumes. Attendant-extended calls suspend vector processing in the same way as transferred calls.

Automatic Callback

Use the Automatic Callback (ACB) feature to allow internal users who place a call to a busy or an unanswered internal telephone to be called back when the called telephone becomes available. When a user activates Automatic Callback, the system monitors the called telephone. When the called telephone becomes available to receive a call, the system automatically originates the Automatic Callback call. The originating party receives priority ringing. The calling party then lifts the handset, and the called party receives the same ringing that the system provided on the original call.

When you place a call from an analog telephone, and the line is busy, an announcement prompts you to either:

- Enter the digit 1 to activate Automatic Callback.
- Enter the digit 2 to route the call to a hunt group extension.

Detailed description of Automatic Callback

With the Automatic Callback feature, when a caller places a call to a busy or an unanswered internal telephone, the system calls the caller back when the called telephone becomes available. Upon hearing a busy signal, a user activates Automatic Callback, and hangs up. The system monitors the called telephone. When the called telephone becomes available to receive a call, the system automatically originates the Automatic Callback call. The originating party receives priority ringing. The calling party then lifts the handset, and the called party receives the same ringing that the system provided on the original call.

To activate this feature, the user of a single-line telephone presses the Recall button, or flashes the switchhook. The user then dials the Automatic Callback feature access code (FAC). A single-line user can activate Automatic Callback for only one call at a time.

The number of call for which a user of a multiappearance telephone can activate Automatic Callback depends on the number of Automatic Callback buttons that you assign to the telephone. After the user places a call to a telephone that is busy or unanswered, the user presses an idle Automatic Callback button, and hangs up.

If the original caller answers an Automatic Callback call, and for some reason the called extension cannot accept the Automatic Callback call, the caller hears a confirmation tone and then silence. The call is still queued.

Automatic Callback

Users cannot activate Automatic Callback for calls to:

- A telephone that is assigned Termination Restriction
- An extension toward which Automatic Callback is already activated
- A data terminal or a data module
- An attendant console group
- A Terminating Extension Group (TEG)
- An extension for a hunt group, a split, or a skill
- The login ID of an EAS agent
- A Vector Directory Number (**VDN**) extension

Automatic Callback supports the following capabilities:

- [Ringback Queing](#)
- [Analog Busy Automatic Callback Without Flash](#)

Ringback Queing

You can administer your system to call users back if users try to place an outgoing call over a trunk group when all trunks are busy. Ringback Queuing places outgoing calls in an ordered queue (first-in, first-out) when all trunks are busy. The system automatically places the callback call to the telephone when a trunk becomes available, and the user hears a distinctive three-burst signal, which indicates an Automatic Callback call from the system. When the user answers the callback call, the original call automatically continues. Redialing is not required. Ringback queing is also called Automatic Callback for busy trunks.

If a user with a multiappearance telephone has an idle Automatic Callback button and tries to access an all-trunks-busy trunk group, the call queues automatically. The lamp that is associated with the Automatic Callback button lights, and the user hears a confirmation tone.

Ringback Queuing is automatic for a single-line telephone. After dialing is complete, the user hears a confirmation tone if the queue is available. No action is required. The system queues as many calls as are allowed, based on the value in the **Queue Length** field on the **Trunk Group** screen. The system checks the busy or idle status of the trunk group only once. If all trunks are busy, the call queues, even if a trunk has become available by the time that the caller finishes dialing. In this case, a caller might be called back immediately after the caller receives a confirmation tone and hangs up.

You can specify queuing for any outgoing-only trunk group that is not part of a distributed communications system (DCS), or for the outward direction of a non-DCS two-way trunk group.

Analog Busy Automatic Callback Without Flash

With Analog Busy Automatic Callback without Flash, callers who place a call from an analog station to a station that is busy and has no coverage path or forwarding, hear an announcement and are presented with options. Depending on the selection that the caller makes, the call is queued to Automatic Callback, routed to an extension, or dropped. No switchhook flash is required for Analog Busy Automatic Callback.

Administering Automatic Callback

The following steps are part of the administration process for the Automatic Callback feature:

- [Assigning a FAC for Automatic Callback](#)
- [Setting the no-answer timeout interval](#)
- [Assigning a feature button for Automatic Callback](#)
- [Setting the queue length for Ringback Queing](#)

This section describes:

- Any prerequisites for administering the Automatic Callback feature
- The screens that you use to administer the Automatic Callback feature
- Complete administration procedures for the Automatic Callback feature

Prerequisites for administering Automatic Callback

You must complete the following actions before you can administer the Automatic Callback feature:

- None

Screens for administering Automatic Callback

Screen name	Purpose	Fields
Feature Access Code (FAC)	Assign a feature access code (FAC) with which to activate or deactivate Automatic Callback.	Automatic Callback Activation/ Deactivation
Feature-Related System Parameters	Set the number of times that the callback call rings at the calling station before the system cancels the callback call.	Automatic Callback-No Answer Timeout Interval
Station (multiappearance)	Assign a feature button for the Automatic Callback feature.	Buttons/Feature Button Assignments - auto-cback
Trunk Group	Set the queue length for Ringback Queuing.	Queue Length

Assigning a FAC for Automatic Callback

To assign a Feature Access Code (FAC) for Automatic Callback:

1. Type **change feature-access codes**. Press **Enter**.

The system displays the **Feature Access Codes (FAC)** screen ([Figure 52: Feature Access Code \(FAC\) screen](#) on page 289).

Figure 52: Feature Access Code (FAC) screen

change feature-access-codes
Page 1 of 7

FEATURE ACCESS CODE (FAC)

Abbreviated Dialing List1 Access Code: _____	
Abbreviated Dialing List2 Access Code: _____	
Abbreviated Dialing List3 Access Code: _____	
Abbreviated Dial - Prgm Group List Access Code: _____	
Announcement Access Code: _____	
Answer Back Access Code: _____	
Attendant Access Code: _____	
Auto Alternate Routing (AAR) Access Code: _____	
Auto Route Selection (ARS) Access Code1: _____	Access Code 2: _____
Automatic Callback Activation: _____	Deactivation: _____
Call Forwarding Activation Busy/DA: _____ All: _____	Deactivation: _____
Call Park Access Code: _____	
Call Pickup Access Code: _____	
CAS Remote Hold/Answer Hold-Unhold Access Code: _____	
CDR Account Code Access Code: _____	
Change COR Access Code: _____	
Change Coverage Access Code: _____	
Data Origination Access Code: _____	
Data Privacy Access Code: _____	
Directed Call Pickup Access Code: _____	

2. In the **Automatic Callback Activation** field, type the digits of the access code that you want to use to activate the Automatic Callback feature.
3. In the **Deactivation** field, type the digits of the access code that you want to use to deactivate the Automatic Callback feature.
4. Press **Enter** to save your changes.

Setting the no-answer timeout interval

You can administer the number of times that the callback call rings at the calling station before the callback call is canceled.

To set the no-answer timeout interval:

1. Type **change system-parameters features**. Press **Enter**.

The system displays the **Feature-Related System Parameters** screen
([Figure 53: Feature-Related System Parameters screen](#) on page 290).

Figure 53: Feature-Related System Parameters screen

change system-parameters features	page 1
FEATURE-RELATED SYSTEM PARAMETERS	
Self Station Display Enabled? n	
Trunk-to-Trunk Transfer? none	
Automatic Callback - No Answer Timeout Interval (rings): 4_	
Call Park Timeout Interval (minutes): 10	
Off-Premises Tone Detect Timeout Interval (seconds): 20_	
AAR/ARS Dial Tone Required? y	
Music/Tone On Hold: music Port: _____	
Music (or Silence) On Transferred Trunk Calls: all	
DID/Tie/ISDN/SIP Intercept Treatment: attd	
Internal Auto-Answer of AttD-Extended/Transferred Calls? y	
Automatic Circuit Assurance (ACA) Enabled? y	
ACA Referral Calls: local	
ACA Referral Destination: _____	
ACA Short Holding Time Originating Extension: _____	
ACA Long Holding Time Originating Extension: _____	
Abbreviated Dial Programming by Assigned Lists:	
Auto Abbreviated/Delayed Transition Interval(rings):	
Protocol for Caller ID Analog Terminals: Bellcore	
Display Calling Number for Room to Room Caller ID Calls?	

2. In the **Automatic Callback - No Answer Timeout Interval (rings)** field, enter the number of times that you want a callback call to ring at the calling station before the callback call is canceled. In this example the number of rings is set to 4.
3. Press **Enter** to save your changes.

Assigning a feature button for Automatic Callback

To assign one or more feature buttons for Automatic Callback:

- 1. Type **change station *n***, where *n* is the extension of the station for which you want to assign a feature button. If you are adding a new station, type **add station next**.

The system displays the **Station** screen ([Figure 54: Station screen](#) on page 291).

Figure 54: Station screen

add station 1014

Page 3 of X

STATION

SITE DATA

Room: _____

Jack: _____

Cable: _____

Floor: _____

Building: _____

Headset? n

Speaker? n

Mounting: d

Cord Length: 0_

Set Color: _____

ABBREVIATED DIALING

List1: _____

List2: _____

List3: _____

BUTTON ASSIGNMENTS

1: call-appr

2: call-appr

3: call-appr

4: auto-cback

5:

6:

7:

8:

- 2. In the **Button Assignments** area, type **auto-cback** in a blank field.
- 3. Repeat Step 2 for as many buttons as you want to assign for Automatic Callback.
- 4. Press **Enter** to save your changes.

Setting the queue length for Ringback Queing

To set the queue length for Ringback Queing:

1. Type **change trunk-group *n***, where *n* is the number of an existing trunk group for which you want to set the queue length. If you are adding a new trunk group, type **add trunk-group next**.

The system displays the **Trunk Group** screen ([Figure 55: Trunk Group screen](#) on page 292).

Figure 55: Trunk Group screen

add trunk-group next
Page 1 of x

TRUNK GROUP

Group Number: ____	Group Type: tie____	CDR Reports: _
Group Name: _____	COR: ____	TN: ____ TAC: ____
Direction: _____	Outgoing Display? _	Trunk Signaling Type: ____
Dial Access? _	Busy Threshold: ____	Night Service: ____
Queue Length: ____		Incoming Destination: ____
Comm Type: _____	Auth Code? _	
	Trunk Flash? _	
BCC: _	ITC? ____	

TRUNK PARAMETERS

Trunk Type (in/out): _____	Incoming Rotary Timeout(sec): ____
Outgoing Dial Type: _____	Incoming Dial Type: ____
	Disconnect Timing(msec): ____
Digit Treatment: _____	Digits: ____
Analog Loss Group: ____	Sig Bit Inversion: none
Incoming Dial Tone? _	Digital Loss Group: ____
Incoming Calling Number - Delete: ____	Insert: ____ Format: ____
Bit Rate: ____	Synchronization: ____ Duplex: ____
Disconnect Supervision - In? _ Out? _	
Answer Supervision Timeout: ____	Receive Answer Supervision? _

2. In the **Queue Length** field, type the number of outgoing calls that you want to be held waiting when all trunks are busy.
3. Press **Enter** to save your changes.

Reports for Automatic Callback

The following reports provide information about the Automatic Callback feature:

- None

Considerations for Automatic Callback

This section provides information about how the Automatic Callback feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Automatic Callback under all conditions. The following considerations apply to Automatic Callback:

- The system cancels an Automatic Callback request if the:
 - Called party is unavailable within 30 minutes.
 - Calling party does not answer the callback call within the administered interval. This interval consists of two to nine ringing cycles, and is set in the **Automatic Callback-No Answer Timeout Interval** field on the **Feature-Related System Parameters** screen.
 - Calling party decides not to wait, and presses the same Automatic Callback button a second time on a multiappearance telephone, or dials the Automatic Callback cancellation code on a single-line telephone.
- Automatic Callback is administered for individual telephones by Class of Service (COS), and cannot be assigned to attendants. Multiappearance telephones must have an Automatic Callback button to activate the feature.
- Automatic Callback works differently, depending on whether the called party is busy or does not answer the call. For a busy call, Automatic Callback occurs as soon as the called party hangs up. For an unanswered call, the telephone must be used for another call, and then hung up before Automatic Callback occurs.

Note:

If the user who originates an Automatic Callback originator has all line appearances occupied when the Automatic Callback call comes in, the user hears priority ringing once, and the Automatic Callback lamp blinks. However, if the user presses the Automatic Callback button to answer the Automatic Callback call, the system drops one of the other calls.

- Queuing can reduce the number of trunks that are required.
- On a multiappearance telephone, one callback call can be associated with each Automatic Callback button that is assigned to the terminal.
- On a single-line telephone, only one Automatic Callback call can wait at a time.

- Queue requests are canceled when:
 - A trunk is unavailable within 30 minutes.
 - The user does not answer the callback call within the administered interval.
 - The telephone is busy when the callback call is attempted.
 - The user dials the Ringback Queuing cancellation code, or presses the Automatic Callback button that is associated with the queued call.
- Incoming tie-trunk calls cannot queue on an outgoing trunk group. The system does not know the calling number, and cannot originate the callback call.
- The system checks the busy or idle status of the trunk group only once. If all trunks are busy, the call queues, even if a trunk becomes available by the time that the caller finishes dialing. In this case, a caller might be called back immediately after the caller receives a confirmation tone and hangs up.
- A trunk might appear to be available, yet outgoing calls are queued. The trunk is not free, because the trunk is reserved for a previous Automatic Callback request.

Interactions for Automatic Callback

This section provides information about how the Automatic Callback feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Automatic Callback in any feature configuration.

- Attendant Call Waiting and Call Waiting Termination

If a user activates Automatic Callback to or from a single-line telephone, Call Waiting Termination is denied.
- Attendant Intrusion

Attendant Intrusion does not work if a user has activated Automatic Callback.
- Automatic Route Selection (ARS)

If a user with a multiappearance telephone that has an Automatic Callback button makes an ARS call, and all trunks are busy, the system activates Ringback Queuing automatically.
- Bridged Call Appearance

Users cannot activate Automatic Callback from a bridged call appearance. If a user activates Automatic Callback from a primary extension number, the return-call notification rings at all bridged call appearances.
- Busy Verification

If a user has activated Automatic Callback on a telephone, you cannot perform Busy Verification of that telephone.

- Call Coverage

The system does not redirect Automatic Callback calls to coverage.

- Call Forwarding

If a user has activated Call Forwarding on a telephone, the calling party cannot activate Automatic Callback. However, if Automatic Callback was activated before the called telephone user activated Call Forwarding, the system redirects the callback call attempt toward the forwarded-to party.

- Call Pickup

A group member cannot answer a callback call for another group member.

- Class of Restriction (COR)

Telephones with origination restriction cannot activate Automatic Callback.

- Conference and Transfer

A user of a single-line telephone cannot activate conference or transfer if Automatic Callback is activated.

- Distributed Communication System (DCS)

Automatic Callback operates over a DCS network in the same way that Automatic Callback operates on a local server.

- Expert Agent Selection (EAS)

Users cannot activate Automatic Callback to the login ID of an EAS agent. Users can activate Automatic Callback to the telephone where the agent is logged in.

- Hold

A user of a single-line telephone cannot receive Automatic Callback calls if the user has placed a call on hold.

- Hot Line Service

Telephones that are administered for Hot Line Service cannot activate Automatic Callback.

- Intercom - Automatic and Dial

Intercom calls are not eligible for Automatic Callback.

- Internal Automatic Answer (IAA)

IAA does not automatically answer Automatic Callback calls.

- Manual Originating Line Service

Telephones with Manual Originating Line Service cannot activate Automatic Callback.

- Remote Access

Callback calls cannot be made to Remote Access users, because the system does not know the calling number.

Automatic Callback

- Ringback Queuing

Users can press an Automatic Callback button to activate Ringback Queuing.

- Telephone Display

When the system generates an Automatic Callback call, the display of the originating telephone displays *Automatic Callback*, or the equivalent translated phrase for Administrable Language Displays.

Automatic Circuit Assurance

Use the Automatic Circuit Assurance (ACA) feature to identify possible trunk malfunctions. When you enable ACA, the system measures the holding time of each trunk call. If the measurements show calls with either extremely long or extremely short holding times, Avaya Communication Manager places a referral call to an attendant or a telephone.

Detailed description of Automatic Circuit Assurance

This section provides a detailed description of the Automatic Circuit Assurance feature (ACA).

The system records the holding time from when a trunk is accessed to when the trunk is released. You set short and long holding-time limits for each trunk group. The system then compares the recorded holding times against these limits.

You enable ACA for the entire system, and administer thresholds for individual trunk groups. You can measure all trunks, or only certain trunks.

Communication Manager deals with long-holding and short-holding calls differently. For every call that is shorter than the administered short holding time, the system increases the short-holding counter by one. For calls over the same trunk that are within the normal range, the system decreases the short holding counter by one. Thus, trunks that handle a normal variety of call lengths are not singled out as faulty. If the counter reaches the administered short holding limit, the system places a referral call.

If one long call exceeds the long holding time, the system makes a referral call.

You cannot measure personal central office (CO) lines, out-of-service trunks, or trunks that are undergoing maintenance testing.

The referral call

An ACA call includes a display message or a voice-synthesized message that states:

- That this call is an ACA call
- The access code, the trunk group number, and the trunk group member number
- The type of referral, either short holding time or long holding time

If the referral call is answered, the system displays this information until the call is released. If the call is unanswered within 3 minutes, the system ends the call. The system places the call again after one hour, and continues to place the call hourly until someone answers.

The attendant or the telephone user who receives the referral call can press the **aca-halt** button to stop further calls. The **aca-halt** button is a toggle button, and turns off the ACA feature until the user presses the button again.

The audit trail

When the system makes a referral call, the system also adds a record to an audit trail. Audit trail records are available on the ACA Measurements Report. Each record contains the:

- Time and the date of referral
- Trunk group number, the trunk access code, and the trunk group member
- Type of referral, either short holding time or long holding time

Administering Automatic Circuit Assurance

This section describes the screens required to administer the Automatic Circuit Assurance feature.

Screens for administering Automatic Circuit Assurance

Screen name	Purpose	Fields
Feature-Related System Parameters	Enable the ACA feature.	• Automatic Circuit Assurance Enabled • ACA Referral Calls • ACA Referral Destination • ACA Short Holding Time Originating Extension • ACA Long Holding Time Originating Extension
Trunk Features	Set assignments and thresholds.	• ACA Assignment • Short Holding Threshold • Long Holding Time (hours) • Short Holding Time (seconds)

Screen name	Purpose	Fields
Attendant Console	Set the aca-halt feature button.	Any available button in the Feature Button area
Station	Set the aca-halt feature button.	Any available button in the Feature Button area

Reports for Automatic Circuit Assurance

The following reports provide information about the Automatic Circuit Assurance (ACA) feature:

- The ACA Measurements Report shows the audit trail for ACA calls.

For detailed information on these reports and the associated commands, , or see *Reports for Avaya Communication Manager*.

Considerations for Automatic Circuit Assurance

This section provides information about how the Automatic Circuit Assurance (ACA) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Automatic Circuit Assurance under all conditions. The following considerations apply to Automatic Circuit Assurance:

- None

Interactions for Automatic Circuit Assurance

This section provides information about how the Automatic Circuit Assurance feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Automatic Circuit Assurance in any feature configuration.

- Administrable Language Displays

You cannot administer languages for ACA messages.

- AUDIX

Do not set the referral-call extension to a telephone that covers to an AUDIX voice messaging system. You can overload AUDIX with the volume of calls, because ACA calls remain active for up to three minutes.

- Busy Verification

Once you identify a potentially defective trunk, you can use Busy Verification to check that trunk.

- Centralized Attendant Services (CAS)

When CAS is activated, the referral-call destination must be on the local switch. The system interprets a referral destination of 0 as the local attendant, if a local attendant exists. The CAS attendant cannot activate or deactivate ACA referral calls at a branch location.

- Distributed Communications System (DCS)

Referral calls can be placed across a DCS network. The primary switch is administered to receive ACA referred calls from remote nodes for all switches within the network. You must administer the **ACA Remote PBX Identification** field on the **Feature-Related System Parameters** screen with the PBX ID of the node that is designated as primary.

If ACA referral calls are sent off the switch that generates the referral, the display and voicing information that indicates the failed trunk is lost, even if the referral call is made over a DCS network.

- Night Service

The system does not place referral calls to the attendant if the system is in Night Service mode.

- Visually Impaired Attendant Service (VIAS)

If the attendant presses the Display Status button and an ACA call has not been answered, the words "Automatic Circuit Assurance" are voiced.

If a visually-impaired attendant presses the Display Status button and the ACA call has been answered, the words Automatic Circuit Assurance and the extension that is assigned to the ACA call are voiced.

If the switch contains a voice-synthesis board, ACA referral calls are also accompanied by an audible message that identifies the type of ACA infraction encountered. The message is "Automatic circuit assurance <long> or <short> holding time threshold has been exceeded for trunk group <#> member number <#>."

- Voice Message Retrieval

If you use Voice Message Retrieval, you can assign a nondisplay telephone as a referral destination.

- Wideband Switching

ACA treats wideband-trunk calls as a single-trunk call, and therefore triggers a single referral call. The call information shows the lowest B-channel trunk member that is associated with the wideband channel.

Automatic Number Identification

Use the Automatic Number Identification (ANI) feature to display telephone number of the calling party on your display telephone. The system uses ANI to interpret calling party information that is signaled over multifrequency (MF) or Session Initiation Protocol (SIP) trunks.

Detailed description of Automatic Number Identification

This section provides a detailed description of the Automatic Number Identification (ANI) feature.

ANI displays calling party information on your display telephone that is signaled over MF or SIP trunks.

- For a description about calling party information that is signaled over ISDN or H.323 trunks to your display telephone, see the "Caller ID" feature.
- For a description about calling party information that is signaled over Centralized Automatic Message Accounting (CAMA) trunks to your local emergency rapid response organization, see the "E911" feature.

Incoming Automatic Number Identification

Use inband signaling for information, such as the address digits for the called party, that is delivered over the same trunk circuit that is used for the voice or data connection. Use out-of-band or ISDN signaling when signaling information passes through a different signaling path than the path that is used for the voice or data connection.

For example, when a call is made from 555-3800 to your display telephone at extension 81120, and the **Incoming Tone (DTMF) ANI** field is set to ***ANI*DNIS*** on the **Trunk Group** screen, your trunk group receives *5553800*81120*. If the same field is set to **ANI*DNIS***, your trunk group receives 5553800*81120*. In both cases, *call from 555-3800* appears on your telephone display.

If you do not use inband ANI, the incoming trunk group name appears on your telephone display.

Outgoing Automatic Number Identification

Outgoing ANI applies to outgoing Russian MF ANI, R2-MFC ANI, China #1 MF ANI, and Spain Multi Frequency España (MFE) ANI trunks only.

Use Outgoing ANI to specify the type of ANI to send on outgoing calls. You can define MF ANI (the calling party number, sent through multifrequency signaling trunks) prefixes by COR. This allows a system to send different ANIs to different central offices (COs).

For a tandem call that uses different types of incoming and outgoing trunks, the server uses:

- The COR-assigned call type of the incoming trunk for Russian or R2-MFC outgoing trunks
- Automatic Route Selection (ARS) call types for MFE outgoing trunks

Administering Automatic Number Identification

The following steps are part of the administration process for the Automatic Number Identification (ANI) feature:

- [Setting up ANI on a multifrequency trunk](#)
- [Displaying incoming ANI calling party information](#)
- [Setting up outgoing ANI](#)
- [Setting up an ANI request button](#)

This section describes:

- Any prerequisites for administering the Automatic Number Identification (ANI) feature
- The screens that you use to administer the Automatic Number Identification (ANI) feature
- Complete administration procedures for the Automatic Number Identification (ANI) feature

Prerequisites for Automatic Number Identification

You must complete the following actions before you can administer the Automatic Number Identification (ANI) feature:

- None

Screens for administering Automatic Number Identification

Screen name	Purpose	Fields
Multifrequency-Signaling-Related Parameters	Set up ANI on an MF trunk.	● Incoming Dial Type ● Incoming Tone (DTMF) ANI
Trunk Group	Set up incoming ANI so that the system displays the calling party information from either an MF or a SIP trunk.	● Incoming Dial Type ● Incoming Tone (DTMF) ANI
● AAR Digit Analysis Table ● ARS Digit Analysis Table ● AAR Digit Conversion Table ● ARE Digit Conversion Table	Set up outgoing ANI for Russian MF ANI, R2-MFC ANI, China #1 MF ANI, and Spain Multi Frequency España (MFE) ANI trunks.	● ANI Reqd ● ANI Req
Station	Assign an ani-request button to the telephone of a user.	Any available button field in the Button Assignments area.

Setting up ANI on a multifrequency trunk

An ANI request button on the telephone of a user allows the user to display the telephone number of the calling party during the voice state of the call. The trunk must support this functionality.

To set up ANI for multifrequency signaling:

1. Type **change multifrequency-signaling *n***, where *n* is a number between 1 and 8. Press **Enter**.

The system displays the **Multifrequency-Signaling-Related Parameters** screen ([Figure 56: Multifrequency-Signaling-Related Parameters screen](#) on page 306).

Note:

The number of pages and the fields on the screen that the system displays is based on the value in the **Outgoing Call Type** field.

- If the value in the **Outgoing Call Type** field is **group-ii-mfc**, the system displays four pages. The system also displays the **ANI Prefix**, **Default ANI**, **Next ANI Digit Incoming**, and **Next ANI Digit Outgoing** fields.

- If the value in the **Outgoing Call Type** field is **mfe**, the system displays two pages. The system also displays the **ANI Prefix**, and **Default ANI** fields.
- If the value in the **Outgoing Call Type** field is **none**, the system displays three pages. The system also displays the **Next ANI Digit Incoming** field.

Figure 56: Multifrequency-Signaling-Related Parameters screen

change multifrequency-signaling 1		Page 1 of X
MULTIFREQUENCY-SIGNALING-RELATED SYSTEM PARAMETERS 1		
Incoming Call Type:	ANI Prefix:	
Outgoing Call Type:	Default ANI:	
Maintenance Call Type:	NEXT ANI DIGIT	
	Incoming:	
Maximum Resend Requests:	Outgoing:	
Received Signal Gain (dB):		
Transmitted Signal Gain (dB):		
Request Incoming ANI (non-AAR/ARS)?		
Outgoing Forward Signal Present Timer (sec):		
Outgoing Forward Signal Absent Timer (sec):		
MF Signaling Intercept Treatment - Incoming? _ Outgoing: _____		
Collect All Digits Before Seizure?		
Overlap Sending on Link-to-Link Tandem Calls?		
Private Group II Permissions and Public Interworking?		
Convert First Digit End-of-ANI To: _		
Use COR for All Group II Responses? _		
Group II Called Party Category:		
Use COR for Calling Party Category?		

For a thorough description of the **Multifrequency-Signaling-Related Parameters** screen and the values for the fields see the *Administrator's Guide for Avaya Communication Manager*.

2. When you are finished, press **Enter** to save your changes.

Displaying incoming ANI calling party information

A display telephone might display either the telephone number and name of the calling party, or the incoming trunk group name. You set the ANI field on the Trunk Group screen.

To display ANI calling party information on a trunk:

1. Type **change trunk group *n***, where *n* is the number of the trunk that you want to change. Press **Enter**.

The system displays the **Trunk Group** screen ([Figure 57: Trunk Group screen](#) on page 307). In this example, change trunk group 10.

Figure 57: Trunk Group screen

change trunk group 10
Page 1 of 20

Trunk Group

Group Number: 10_	Group Type: tie_____	CDR Reports: r
Group Name: Node1 to Node3	COR: 10	TN: ____ TAC: *10
Direction: two-way	Outgoing Display? n	Trunk Signaling Type: ____
Dial Access? n	Busy Threshold: 99_	Night Service: ____
Queue Length: ____	Incoming Destination: 2000_	
Comm Type: voice	Auth Code? n	
	Trunk Flash? n	
BCC: _	ITC? ____	

TRUNK PARAMETERS

Trunk Type (in/out): auto/auto-incorrect	Incoming Rotary Timeout(sec): 5
Outgoing Dial Type: _____	Incoming Dial Type: tone
	Disconnect Timing(msec): 500
Digit Treatment: _____	Digits: ____
	Sig Bit Inversion: none
Incoming Dial Tone? y	

Disconnect Supervision - In? y Out? n
Receive Answer Supervision? y

Answer Supervision Timeout: 0__

2. In the **Incoming Dial Type** field, type **tone**.
3. Click **Next** to display page 2 of the **Trunk Group** screen ([Figure 58: Trunk Group screen](#) on page 308).

Figure 58: Trunk Group screen

change trunk group 10
Page 2 of 20

TRUNK FEATURES

ACA Assignment? n	Measured: none	
	Internal Alert? n	Maintenance Tests? y
	Data Restriction? n	
	Glare Handling: none	
Used for DCS? n		
Suppress # Outpulsing? n		
Seize When Maintenance Busy: neither-end		

Incoming Tone (DTMF) ANI: *ANI*DNIS	Per Call CPN Blocking Code:
Connected to CO? n	Per Call CPN Unblocking Code:
	Ds1 Echo Cancellation? n

DSN Term? n

4. In the **Incoming Tone (DTMF) ANI** field, type ***ANI*DNIS**.

Note:

The **Incoming Tone (DTMF) ANI** field only appears if the **Incoming Dial Type** field on the previous page is set to **tone**.

5. Press **Enter** to save your changes.

Setting up outgoing ANI

Prerequisites

You must complete the following actions before you can set up ANI for outgoingl calls:

1. View the **Feature-Related System Parameters** screen.
 To view the **Feature-Related System Parameters** screen, type **change system-parameters features**. Press **Enter**.
2. Click **Next** until you see the **Allow ANI Restriction on AAR/ARS** field.
3. Ensure that the **Allow ANI Restriction on AAR/ARS** field is set to **y**.
4. Press **Enter** to save your changes.

To set up ANI for outgoing calls:

1. Type **change aar analysis**. Press **Enter**.

The system displays the **AAR Digit Analysis Table** screen ([Figure 59: AAR Digit Analysis Table screen](#) on page 309).

Note:

The system uses AAR routing information to route calls within your company over your own private network. The software converts the number that the user dials. The software then analyzes the number, and routes the call as a private-network call.

Figure 59: AAR Digit Analysis Table screen

change aar analysis						Page 1 of X
AAR DIGIT ANALYSIS TABLE						Percent Full: ____
Dialed String	Total Min	Max	Route Pattern	Call Type	Node Num	ANI Reqd
_____	___	___	_____	_____	_____	n
_____	___	___	_____	_____	_____	n
_____	___	___	_____	_____	_____	n
_____	___	___	_____	_____	_____	n
_____	___	___	_____	_____	_____	n
_____	___	___	_____	_____	_____	n
_____	___	___	_____	_____	_____	n
_____	___	___	_____	_____	_____	n
_____	___	___	_____	_____	_____	n
_____	___	___	_____	_____	_____	n

2. For each appropriate dialed string on your plan, set the **ANI Reqd** field as follows:

ANI Reqd

The following are the valid entries and usage for the **ANI Reqd** field:

1. Press **Enter** to save your changes.
If necessary, repeat steps 1 through 3 for the **ARS Digit Analysis Table** screen.
2. To view the **ARS Digit Analysis Table** screen, type **change ars analysis**. Press **Enter**.

Note:

The system uses ARS routing information to route calls that go outside your company over public networks. The system also uses ARS routing information to route calls to remote company locations if you do not have a private network. The software converts the number that the user dials. The software then analyzes the number, and routes the call as a public-network call.

If necessary, repeat steps 1 through 3 for the **AAR Digit Conversion Table** screen, and the **ARS Digit Conversion Table** screen.

3. To view the **AAR Digit Conversion Table** screen, type **change aar digit-conversion**. To view the **ARS Digit Conversion Table** screen, type **change ars digit-conversion**. Press **Enter**.

Valid entries	Usage
y/n	Enter y if ANI is required on incoming R2-MFC or Russian MF ANI calls. This field applies only if the Request Incoming ANI (non-AAR/ARS) field on the Multifrequency-Signaling-Related System Parameters screen is n .
r	This value is allowed only if the Allow ANI Restriction on AAR/ARS field on the Feature Related System Parameters screen is y . The system uses this value to drop a call on a Russian Shuttle trunk or Russian Rotary trunk if the ANI request fails. Other types of trunks treat r as y .

Setting up an ANI request button

An ANI request button on the telephone of a user allows the user to display the telephone number of the calling party during the voice state of the call. The trunk must support this functionality.

To set up an ANI request button on the telephone of a user:

1. Type **change station n**, where **n** is the extension that you want to change. Press **Enter**.
The system displays the **Station** screen.
2. Click **Next** until you see the **Button Assignments** area ([Figure 60: Station screen](#) on page 311).

Figure 60: Station screen

change station 10
Page 3 of 4

STATION

SITE DATA

Room:	Headset? n
Jack:	Speaker? n
Cable:	Mounting: d
Floor:	Cord Length: 0
Building:	Set Color:

ABBREVIATED DIALING

List1:	List2:	List3:

BUTTON ASSIGNMENTS

1: call-appr	5:
2: call-appr	6:
3: call-appr	7:
4: ani-request	8:

3. In an available button field, type **ani-request**.
4. Press **Enter** to save your changes.
5. Notify the user of the button assignment.

Reports for Automatic Number Identification

The following reports provide information about the Automatic Number Identification (ANI) feature:

- None

Considerations for Automatic Number Identification

This section provides information about how the Automatic Number Identification (ANI) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of ANI under all conditions. The following considerations apply to ANI:

- None

Interactions for Automatic Number Identification

This section provides information about how the Automatic Number Identification (ANI) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of ANI in any feature configuration.

- Attendant Console

If an attendant extends a call, the attendant's Class of Restriction (COR) is used to select the ANI prefix.

- Authorization Codes

The authorization code COR is used to select the ANI prefix. The extension's ANI is used if an extension originates the call. The ANI for the server is used if the originating endpoint is an incoming MF or SIP trunk.

- Bridged Call Appearance

A call from a bridged call appearance uses the ANI of the primary extension.

- Call Vectoring

The ANI of the originating party is used, not the ANI of the call vector, when a call vectoring route-to command routes a call over an outgoing trunk.

- Distributed Communications System (DCS)

In a DCS, the ANI that is sent to the CO is determined by the **ANI for PBX** field, but the category sent to the CO is determined by the **Category for MF ANI** field on the **Class of Restriction** screen for the incoming DCS trunk or by the type of call.

- Expert Agent Selection (EAS)

The EAS agent's login extension and COR is used to determine the ANI prefix.

- Hunt Groups and Automatic Call Distribution (ACD) Splits

The phone's extension and the COR is used to determine the ANI prefix for a hunt group or ACD split.

- Multimedia Call Handling (MMCH)

For call origination, multimedia complexes use the COR assigned to their phones.

- Remote Access

A remote access barrier code COR is not used for ANI. The extension's ANI is used if an extension originates the call. The ANI for the server is used if the originating endpoint is an incoming trunk.

- Separation of Bearer and Signaling

The Separation of Bearer and Signaling feature can provide ANI while the media stream is going over a type of trunk that cannot provide ANI.

Bridged Call Appearance

Use the Bridged Call Appearance feature to give single-line and multiappearance telephones an appearance of another telephone number. With Bridged Call Appearance, the user can originate, answer, and bridge onto calls to or from the telephone number of another user.

The Bridged Call Appearance feature supports the following capabilities:

- Single-line telephone

A single-line telephone can be the primary telephone, meaning that it can have a bridged appearance on another telephone. Or, it can have a bridged appearance of either another single-line telephone or a multiappearance telephone.

- Multiappearance telephone

A multiappearance telephone can be the primary telephone, meaning that it can have a bridged appearance on another telephone. A multiappearance telephone can have a bridged appearance of a single-line telephone or one or more appearances of a multiappearance telephone. A multiappearance telephone can also have bridged appearances of multiple telephone numbers.

Detailed description of Bridged Call Appearance

A telephone's primary number is the extension assigned when the telephone is administered. The primary number appears in the Extension field on page 1 of the Station screen. On a multiappearance telephone, multiple appearances of this primary number can exist.

A Bridged Call Appearance is an appearance of a primary number on a different telephone. In most ways the bridged call appearance acts like the primary number appearance. For example, when a telephone number is called, you can answer that number at the primary telephone and at all bridged appearances of that number. When a call is received, the primary telephone and all bridged appearances alert visually, with audible ringing as an administrable option. Likewise, a call that is placed from a bridged call appearance carries the display information and the Class of Restriction (COR) of the primary number.

You can use a bridged call appearance like a primary call appearance for most features. For example, Conference, Transfer, Hold, Drop, and Priority Calling from a bridged appearance, just as from a primary call appearance.

Sample uses

The following list describes some situations in which you might want to use bridged call appearances:

- A secretary making or answering calls on an executive's primary extension
These calls can be placed on hold for later retrieval by the executive, or the executive can bridge onto the call. In all cases, the executive handles the call as if he or she had placed or answered the call. It is never necessary to transfer the call to the executive.
- For visitor telephones
An executive can have another telephone in their office for use by visitors. It might be desirable that the visitor can bridge onto a call that is active on the executive's primary extension. A bridged call appearance makes this possible.
- In service environments
It might be necessary that several people be able to handle calls to a particular extension. For example, several users might be required to answer calls to a hot line number in addition to their normal functions. Each user might also be required to bridge onto existing hot line calls. A bridged call appearance provides this capability.
- For a user who frequently uses telephones that are in different locations
A user might not spend all of their working hours in the same place. For this type of user, it is convenient to have their extension bridged at several different telephones.

Administrable buttons and lamps for multiappearance telephones

You can administer the message lamp and some feature buttons to apply to the primary telephone rather than the number of the telephone they reside on.

- You can administer the message lamp to light on the bridged user's telephone when messages are waiting for the primary telephone.
- You can administer the call forwarding all calls and call forwarding busy/don't answer buttons to activate Call Forwarding for any extension that is on the telephone, even if this extension is a bridged appearance. In addition, you can administer the lamp associated with the call forwarding button to track the call forwarding status of any extension. Thus, a bridged user can activate or deactivate Call Forwarding from the telephone with the bridged call appearance for all primary and bridged appearances of the extension. The bridged appearance telephone shows the call forwarding status of the specified extension.
- You can administer the send all calls button to activate Send All Calls for any administered extension. The lamp associated with Send All Calls tracks the status of the administered extension. Thus, a bridged user can activate Send All Calls for the primary extension user.

Administering Bridged Call Appearance

The following steps are part of the administration process for the Bridged Call Appearance feature:

- [Creating a bridged call appearance on a single-line telephone](#)
- [Creating a bridged call appearance on a multiappearance telephone](#)

This section describes:

- Any prerequisites for administering the Bridged Call Appearance feature
- The screens that you use to administer the Bridged Call Appearance feature
- Complete administration procedures for the Bridged Call Appearance feature

Prerequisites for administering Bridged Call Appearance

You must complete the following actions before you can administer the Bridged Call Appearance feature:

- If Data Privacy for data or voice calls is administered, you can prohibit bridging onto voice or data calls with Data Privacy. To prohibit bridging onto Data Privacy calls, enter **y** in the **Prohibit Bridging Onto Calls with Data Privacy** field on the **Feature-Related System Parameters** screen.

To view the **Feature-Related System Parameters** screen, type **display system-parameters features**. Press **Enter**.

- For each coverage path that includes a telephone with bridged appearances you must administer whether you want a call to skip a coverage point if that telephone has already alerted as a bridged appearance. Enter **n** to skip the coverage point in the **Terminate to Coverage Pts. with Bridged Appearance?** field on the **Coverage Path** screen. Enter **y** to alert both a bridged call and a redirected call.

To view the **Coverage Path** screen, type **change coverage path n**, where **n** is the number of the coverage path you want to change. Press **Enter**.

Screens for administering Bridged Call Appearance

Screen name	Purpose	Fields
Feature-Related System Parameters	Ensure data privacy.	Prohibit Bridging Onto Calls with Data Privacy
Coverage Path	Skip a coverage point.	Terminate to Coverage Pts. with Bridged Appearance
Station	Create a bridged call appearance on a single-line telephone	• Bridged Call Alerting • Line Appearance • Btn • Ext
	Create a bridged call appearance on a multiappearance telephone	• Per Button Ring Control • Bridged Call Alerting • Auto Select Any Idle Appearance • Button Assignments • Btn • Ext • Ring

Creating a bridged call appearance on a single-line telephone

To create a bridged call appearance on a single-line telephone:

1. Type **change station n**, where **n** is the extension of the single-line telephone on which you want to create the bridged call appearance. Press **Enter**.

The system displays the **Station** screen for a single-line telephone.

2. Click **Next** until you see the **Bridged Call Alerting** field ([Figure 61: Station screen \(single-line\)](#) on page 317).

Figure 61: Station screen (single-line)

STATION	
SITE DATA	
Room: _____	Headset? n
Jack: _____	Speaker? n
Cable: _____	Mounting? d
Floor: _____	Cord Length: 0
Building: _____	Set Color: _____
ABBREVIATED DIALING	
List1: _____	List2: _____ List3: _____
HOT LINE DESTINATION	
Abbreviated Dialing List Number (From above 1, 2 or 3):	
Dial Code:	
Line Appearance: brdg-appr	Btn: Ext:

3. Perform one of the following actions:
 - If you want the bridged appearance to ring when a call arrives, enter **y**.
 - If you want the call to flash at the bridged appearance, but not ring, enter **n**.
4. Move to the **Line Appearance** field, enter a brdg-appr to create a bridged appearance of a single-line telephone or brdg-appr to create a bridged appearance of a multiappearance telephone.
5. Press **Enter**.
The system displays the **Btn** and **Ext** fields.
6. In the **Btn** field, enter the button number from the primary telephone that you want to use for the bridged call appearance.
7. In the **Ext** field, enter the extension of the primary telephone.
8. Press **Enter** to save your changes.

Creating a bridged call appearance on a multiappearance telephone

To create a bridged call appearance on a multiappearance telephone:

1. Type **change station n**, where **n** is the extension of the multiappearance telephone on which you want to create the bridged call appearance. Press **Enter**.

The system displays the **Station** screen for a multiappearance telephone.

- Click **Next** until you see the **Per Button Ring Control?** field ([Figure 62: Station screen \(multiappearance telephone\)](#) on page 318).

Figure 62: Station screen (multiappearance telephone)

FEATURE OPTIONS		STATION	
LWC Reception? _____		Auto Select Any Idle Appearance? _	
LWC Activation? _		Coverage Msg Retrieval? _	
CDR Privacy? _		Auto Answer? _	
Redirect Notification? _		Data Restriction? _	
Per Button Ring Control? _		Idle Appearance Preference? _	
Bridged Call Alerting? _			
Active Station Ringing: _____		Restrict Last Appearance? _	
		Data Module? _	
XID? _	Fixed TEI? _	TEI: _	
MIM Support? _	Endpt Init? _	SPID: _____	MIM Mtce/Mgt? _
AUDIX Name: _____			
Messaging Server Name: _____		Audible Message Waiting? _	
		Disp Client Redir? _	
		Select Last Used Appearance? _	

- Perform one of the following actions:
 - To assign ringing separately to each bridged appearance, type **y**.
 - To assign all bridged appearances to either ring or not ring as determined by the **Bridged Call Alerting** field, leave the default set to **n**.
- In the **Bridged Call Alerting?** field., perform one of the following actions:
 - If you want the bridged appearance to ring when a call arrives at the primary telephone, enter **y**.
 - Leave the default set to **n** if you want the call to flash at the bridged appearance, but not ring.
- In the **Auto Select Any Idle Appearance?** field, perform one of the following actions:
 - Enter **y** to allow automatic selection of an alternate idle appearance for transferred or conferenced calls when another appearance of the bridged number is unavailable.
 - Leave the default set to **n** to prevent this automatic selection.
- Move to the **Button Assignments** field. Next to any available button number, perform the following actions:
 - Enter **abrdg-appr** to create a bridged appearance of a single-line telephone.
 - Enter **brdg-appr** to create a bridged appearance of a multiappearance telephone.

7. Press **Enter**.

The system displays the **Btn** and **Ext** fields. If **Per Button Ring Control** is set to **y**, the system also displays the **Ring** field ([Figure 63: Station screen \(multiappearance set\)](#) on page 319).

Figure 63: Station screen (multiappearance set)

STATION			
SITE DATA			
Room:	_____	Headset?	n
Jack:	_____	Speaker?	n
Cable:	_____	Mounting:	d
Floor:	_____	Cord Length:	0
Building:	_____	Set Color:	_____
ABBREVIATED DIALING			
List1:	_____	List2:	_____
		List3:	_____
BUTTON ASSIGNMENTS			
1: brdg-appr	Btn:	Ext:	Ring:
2: brdg-appr	Btn:	Ext:	Ring:

-
8. In the **Btn** field, enter the button number from the primary phone that you want to use for the bridged call appearance.
 9. Enter the extension of the primary telephone.
 10. In the **Ring** field, perform one of the following actions:
 - To assign the bridged appearance to ring when a call arrives at the primary telephone, enter **y**.
 - To assign the bridged appearance to not ring, leave the default set to **n**.
 11. Press **Enter** to save your changes.

Reports for Bridged Call Appearance

The following reports provide information about the Bridged Call Appearance feature:

- None

Considerations for Bridged Call Appearance

This section provides information about how the Bridged Call Appearance feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Bridged Call Appearance feature under all conditions.

The following considerations apply to single-line telephones:

- A bridging user cannot have more than one bridged appearance for a particular primary telephone. However, a multiappearance bridging user can have bridged appearances of more than one single-line telephone on their telephone (a multiappearance bridging user, by use of different buttons, can bridge onto several different primary telephones).
- If the primary single-line telephone is correctly administered, but not in service, calls can still be placed by the bridging users, and received on the bridged appearances of the telephone.
- If more than one user goes off-hook on a bridged appearance at the same time, only the user who was the first to go off-hook can dial.
- The Privacy-Manual Exclusion feature can be activated by the bridging user only, while active on a call, to prevent accidental bridging of an active call.
- If a call terminates at a telephone on an extension other than the primary extension (for example, terminating extension group (TEG), UCD group, call coverage answer group, or DDC group extension), a bridged call appearance is not maintained. Therefore, the primary telephone should not be made a member of such a group.
- If two parties are bridged together on an active call with a third party, and if the conference tone feature is enabled, conference tone is heard.

The following considerations apply to multiappearance telephones:

- On multiappearance telephones, a bridged call appearance can be assigned to any 2-lamp button. It does not require the use of a regular call appearance. The number of bridged call appearances allowed at each telephone is limited only by the number of 2-lamp buttons available on the telephone.
- Up to six parties can be off-hook and involved in a conversation on a bridged appearance of an extension.
- A bridging telephone might have a bridged call appearance corresponding to each call appearance of the primary extension at the bridged telephone. For example, if a primary telephone has three call appearances, a bridging telephone should have three bridged call appearances of that primary extension. This allows users to refer to the individual call appearances when talking about a specific call.
- Bridged call appearances may result in the reduction of available feature buttons, thereby reducing a user's capabilities. You can use a Call Coverage module or expansion module to provide additional bridged call appearances.

- If a call terminates at a telephone on an extension other than the primary extension, a bridged call appearance is not maintained. Examples of such termination points can be TEG, UCD group, call coverage answer group, or DDC group extensions. Therefore, the primary telephone should not be made a member of such a group.
- You can administer conference tone, which, when enabled, is heard when two parties are bridged together on an active call with a third party.
- You can administer a telephone with zero call appearances of its primary extension. In this way, a telephone can be administered to have only bridged appearances.

Interactions for Bridged Call Appearance

This section provides information about how the Bridged Call Appearance feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Bridged Call Appearance in any feature configuration.

- **Abbreviated Dialing**

A user, accessing Abbreviated Dialing while on a bridged call appearance, accesses their own Abbreviated Dialing lists. The user does not access the Abbreviated Dialing lists of the primary extension associated with the bridged call appearance.

A user cannot use an abbreviated dialing feature access code (FAC) after using a priority calling FAC.

- **Adjunct Switch Applications Interface (ASAI)**

If you are using ASAI, do not administer more than 16 bridged appearances.

- **Attendant display and telephone display**

A call from the primary extension or from a bridged call appearance of the primary extension is displayed as a call from the primary extension. That is, the call is displayed as coming from the primary extension regardless of which appearance placed the call.

On multiappearance telephones, the display at the primary telephone shows the same information for a bridged call appearance as the information for a nonbridged call. For calls to the primary extension, the display at a zero call appearance bridging telephone shows a call from the originator to the primary with no "redirection reason" character.

- **Automatic Call Distribution (ACD)**

Bridged appearances cannot be accessed using non-ACD hunt groups (although administrable).

Bridged Call Appearance

- Automatic Callback

Automatic Callback calls cannot originate from a bridged call appearance. However, when Automatic Callback is activated from the primary telephone. The callback call rings at all bridged appearances of the extension and at the primary telephone. This ring is set with priority call distinctive ringing signal. It displays at all telephones and shows that it is a callback call.

- Busy Indicator (multiappearance telephones only)

A user presses a Busy Indicator button to call the extension associated with the Busy Indicator button. When a user presses a Busy Indicator button on a zero primary call appearance telephone, the system uses the first available bridged call appearance to place the call.

- Call Coverage

- Single-line telephones

When a single-line telephone is administered as a bridged call appearance, the telephone user cannot invoke Send All Calls for the extension of their telephone. The user does not have a send all calls button, and the call appearance is associated with another extension. When the user dials a FAC, Send All Calls is activated for the extension associated with the call appearance.

- Multiappearance telephones

Coverage criteria for bridged call appearances is based entirely on the criteria of the primary extension associated with bridged appearance. A call to the primary extension that requires call coverage treatment follows the coverage path of the primary extension. Such a call does not follow the path of any of the bridged appearances. Bridged call appearances do not receive redirection notification.

A user with bridged call appearances can activate or deactivate Send All Calls for a primary telephone from the bridged appearance.

The primary telephone should not be a member of a call coverage group. This is because calls to the primary telephone as a member of the group are not bridged.

You can administer the system so a call can appear at a telephone as both a bridged call and a redirected call. In this way, if the bridged user is the first coverage point, the call redirects to that telephone when the coverage criteria are satisfied.

If the primary telephone is a single-line telephone with a bridged call appearance on a multiappearance telephone, an incoming call to the single-line telephone that goes to coverage terminates at a primary call appearance on the bridging user's telephone as a coverage call. If the bridging user is a zero primary call appearance telephone, the call cannot redirect to the bridging user. This is because there are no primary call appearances. Therefore, the call redirects to the next available coverage point.

- Call Detail Recording (CDR)

If a bridging user originates or answers a call on a bridged appearance, the extension of the bridge is recorded as the calling/called telephone. A conference or transfer by a bridging user also appears like it was performed by the telephone user.

On multiappearance telephones, when a call originated from a bridged call appearance on a telephone administered for zero primary call appearance is recorded by CDR, the extension associated with the appearance is recorded as the calling party. A conference or transfer by a bridged call appearance on a zero primary call appearances telephone also appears as performed by the extension associated with the appearance.

- Call Forwarding All Calls, Call Forward Busy/Don't Answer

Call Forwarding can be activated or canceled for the primary extension from any bridged call appearance of that number. When activated, calls to the primary extension do not terminate at the bridged call appearances, but go to the designated forwarding destination. Bridged call appearances do not receive redirection notification of the call to the primary extension when it is forwarded unless Ringing - Abbreviated and Delayed is administered.

- Call Park

When a call is parked from a bridged call appearance, it is parked on the primary extension.

- Call Pickup

- Single-line telephones

Calls to the primary telephone, alerting at bridged appearances of the primary telephone, can be picked up by member's of the bridging user's call pickup group. This pickup causes all bridged appearances of the call to be dropped.

Calls ringing at a primary telephone can be picked up by members of the primary telephone's call pickup group. However, if the primary telephone and the bridging user's telephone are not in the same call pickup group, the bridging user cannot pick up calls to other members of the primary telephone's call pickup group.

Originating on a bridged appearance and dialing the call pickup FAC is interpreted as an attempt to pick up a call from the primary telephone's call pickup group.

A bridging user can use Call Pickup to pick up a call that is alerting at a bridged appearance. This can be done instead of selecting the bridged appearance button. This pickup causes the call at the primary telephone and all bridged appearances of the call to be dropped.

If the bridging user has appearances of numerous single-line (primary) telephones (for example, sales, service, and warehouse), and it is not desired that the calls be answered by anyone other than the primary telephone user or the bridging users, the bridging users should not be assigned to a pick up group.

Bridged Call Appearance

- Multiappearance telephones

If a telephone receives ringing on a bridged call appearance, the incoming call can be picked up by members of that telephone's call pickup group. This pickup causes all bridged call appearances to be dropped. Calls ringing at a primary telephone can be picked up by members of the telephone's call pickup group. However, if the primary telephone and the bridging user's primary telephone are not in the same call pickup group, the bridging user cannot pick up calls to other members of the primary telephone's call pickup group.

Originating on a bridged appearance and dialing the call pickup FAC is interpreted as an attempt to pick up a call from the primary telephone's call pickup group.

A bridging user can use Call Pickup to pick up a call that is alerting at a bridged appearance, instead of selecting the bridged appearance button. This pickup causes the call to terminate on the bridging user's primary extension button. Calls on the primary telephone and all bridged appearances are dropped.

If the bridging user has appearances of numerous telephones (for example, sales, service, and warehouse), and it is not desired that the calls be answered by anyone other than the telephone user or the bridging users, the bridging users should not be assigned to a pick up group.

A telephone with zero primary call appearances can be assigned to a call pickup group.

- Call Waiting Termination (single-line telephones only)

Call Waiting Termination applies only to an active call on the primary telephone that has no one else bridged on. If one or more bridging users are active on a call, call waiting calls are denied even if the primary user is also off-hook on the call. A bridging user can bridge onto a call with the primary user if there is also a call waiting.

- Class of Restriction (multiappearance telephone users only)

The COR assigned to a telephone's primary extension also applies to calls originated from a bridged call appearance.

- Conference - Attendant, Conference

- Single-line telephones

A bridged call cannot be conferenced if more than one user is active on that call. This is because the bridging user has no access to the call after the primary telephone user places the call on soft hold, and the primary telephone user has no access to the bridging user's call appearance used for conference/transfer attempts.

You can place a call on hold using normal single-line conference procedures when the primary telephone user is active on a call, and no other bridging user is active on the call. Any attempt by a bridging user to bridge onto the call during a successful conference attempt is denied.

A single bridging user can conference the call using the normal multiappearance telephone conference procedures. Any attempt by the single-line primary telephone user to bridge onto the call during a successful conference attempt is ignored. Any attempt by other bridging users is denied (standard denial response is returned to the bridged appearance).

If a conference is not allowed because of the preceding limitations, the user can accomplish a transfer by asking an internal nonbridged party in the connection to create the conference. The user can also ask the remaining bridging users and primary user to disconnect so that the conference can be completed. At completion of the conference, the parties that left the call can reenter the call if control of the conference remains with the primary telephone. If conference control does not remain with the primary telephone, the bridging user must conference the primary telephone and the bridging user back into the call as required.

If the bridging user has no other available bridged appearances of the primary extension (other than the one he or she is currently on), the bridging user, after pressing the conference/transfer button, must select a call appearance to be used for the conference, before dialing the number.

- Multiappearance telephones

Conferences can be set up on bridged appearances using the usual conference operations. Either a primary extension button or a bridged appearance button can be used to make the calls for adding to the conference.

You can administer the system to automatically select the first idle appearance if there is no idle appearance with an extension matching the extension that is conferencing the call.

When the user presses the conference button (the second time) to connect the parties together, the newly formed conference call appears on the primary or bridged appearance to which the user was connected at the time of that last conference button depression. The other appearance is disassociated from the conference call. Therefore, if the original call is on a bridged appearance, and the conference is formed on a primary appearance at that same telephone, the bridged extension becomes disassociated from the conference call. In this case, the primary user can no longer bridge onto the conference.

This disassociation of the conference from the bridged extension can be avoided by setting up the conference in the opposite order. To do this, the user:

- a. Presses the hold button to hold the original call on the bridged appearance
- b. Selects a call appearance and calls the party to be added
- c. Presses the conference or transfer button
- d. Selects the held bridged appearance
- e. Presses the conference button (again)

When this procedure is used, the conference is formed on the bridged appearance so that the primary user can still bridge onto the conference call.

Bridged Call Appearance

If the primary user and the bridged user are both on the call when one user transfers the call, the user performing the transfer becomes the controlling user for the participation of both users on the conference. To disassociate the appearance from the call, the controlling user must be the latter of the two users to hang up from the call. If the controlling user hangs up first, the appearance goes on soft hold when the noncontrolling party hangs up. In this case, one of two things must occur to disassociate the appearance from the call: all other parties on the call hang up, or the controlling user rejoins the call and hangs up again.

The display shows the number of other active parties in a call, including active bridged appearances.

- Consult (multiappearance telephones only)

Bridged call appearances of the primary extension do not ring on a consult call to the primary extension.

- Coverage Answer Group

- Single-line telephones

Calls to the primary telephone as a member of a Coverage Answer Group are not bridged.

If the primary telephone is made a member of a coverage group, coverage criteria is based entirely on the criteria of the primary telephone. This means that a call to the primary telephone that requires call coverage treatment follows the path of the primary telephone and not the path of any of the telephones with bridged appearances of the primary telephones.

- Multiappearance telephones

Bridged call appearances of a primary extension do not ring when there is a Coverage Answer Group (CAG) call to the primary extension. Bridged call appearances cannot bridge onto the call.

- Data Privacy, Data Restriction

When Data Privacy is activated or Data Restriction is assigned to a telephone involved in a bridged call and the primary telephone and/or bridging user attempts to bridge onto the call, Data Privacy and Data Restriction are automatically overridden (or deactivated in the case of Data Privacy).

- Emergency calls

- If a user dials an emergency call from a bridged appearance, the Calling Party Number that is sent to the public safety answering point for US E911 location is the bridged extension, not the extension of the physical phone from which the call is made. If the physical phone is located far from the phone to which it is bridged, the emergency response team may not be able to locate the caller. It is preferable to place E911 calls from a primary call appearance, rather than a bridged appearance.

- Hold - Automatic

- Single-line telephones

A call cannot be put on hold if more than one user is active on that call.

The primary telephone user, when no other bridges are active on the call, can put the call on hold, using normal single-line hold procedures. If the primary telephone user successfully soft holds the call, the status lamp at all of the bridged appearances shows the hold indication; and then the call can be put on hard hold by dialing the hard hold FAC. The hard held call is no longer accessible to the bridging users until it is taken off hold by the primary telephone user. After the call is put on hard hold, any new call to the primary telephone is tracked by the bridged appearances.

A bridging user can place an active call on hold (if the primary telephone or any other bridges are not active on the call) by using normal multiappearance hold procedures. Any attempt to enter the held call returns it to the status of an active call that can then be accessed using bridging procedures.

- Multiappearance telephones

Any user (primary or bridged appearance) can place an active call on hold. If only one user is active on a call and places that call on hold, the indicator lamp at both the primary's appearance button and the bridged appearance button show that the call is on hold. If more than one user is bridged onto the active call, and one of the users activates Hold, the activator receives "hold" indication for the call and status lamp of all other bridged users remains active.

- Hotline Service (single-line telephones)

If a single-line telephone is administered for Hotline Service, bridged appearances of that telephone's extension also place a hot line call automatically when a user goes off-hook on that bridged appearance.

- Hunt Group (DDC or UCD)

Bridged call appearances cannot be used in conjunction with DDC or UCD hunt groups.

Although you can assign a bridged extension to a hunt group, Avaya does not recommend such assignment because DDC/UCD calls do not terminate at any bridged appearances of that extension on other telephones.

- Intercom (multiappearance telephones only)

Bridged appearances of a primary extension are not rung for intercom calls. Furthermore, if a telephone has no primary call appearances it can never be rung for an intercom call. Therefore, if someone is screening all calls for the primary telephone, and is indicating who is calling via intercom, the primary telephone must have a call appearance on which to receive and send intercom calls.

- Internal Automatic Answer (IAA)

Calls terminating to a bridged appearance of an IAA-eligible telephone are not eligible for IAA.

Bridged Call Appearance

- Last Number Dialed (LND)

Activation of the LND feature causes the last number dialed from the activating telephone to be redialed, regardless of the extension used (primary or bridged call appearance).

- Leave Word Calling (LWC)

A LWC message left by a user on a bridged call appearance leaves a message for the called party to call the primary extension assigned to the bridged call appearance.

When a user calls a primary extension, and activates LWC, the message is left for the primary extension, even if the call was answered at a bridged call appearance.

LWC messages left by the primary user can be canceled by a bridged appearance user.

- Personal Central Office Line

- Single-line telephones

A single-line primary telephone cannot be a member of a Personal Central Office Line (PCOL) group.

- Multiappearance telephones

If a user is active on his or her primary extension on a PCOL call, bridged call appearances of that extension cannot be used to bridge onto the call. The call can only be bridged onto the call if another telephone is a member of the same PCOL group and has a PCOL button.

- Personal Status Access (PSA)

PSA allows a user to execute a dissociate request from a bridged appearance. However, when a user executes a dissociate command at telephone B, the user dissociates from telephone B. This is the case, even if the user is on a bridged appearance that belongs to telephone A.

- Priority Calling

The primary telephone user or the bridging user can make a priority call. If a priority call is made to an idle telephone, the primary telephone and all bridging users are alerted by priority alerting.

- Privacy-Manual Exclusion

Activation of exclusion by any user (primary or bridged appearance) before placing a call, prevents any other user from bridging onto the call. Activation of exclusion by any user active on a call, while the primary user and/or any other bridging users are active on the call, drops all other users from the call (including the primary user), leaving only the activator and the calling/called party on the call.

- Redirection Notification (multiappearance telephones only)

Redirection Notification is not provided at bridged appearances unless Ringing - Abbreviated and Delayed is administered to give notification.

- Ringback Queuing

Ringback Queuing is not provided on calls originated from a bridged call appearance. However, after the primary user of the bridged extension has activated Ringback Queueing, the resulting callback call alerts at bridged appearances as well as at the primary user's telephone. The call can be answered from the primary user's telephone or from any bridged appearance.

- Ringer Cutoff (multiappearance telephones only)

Ringer Cutoff prevents any nonpriority (or nonintercom) incoming call from ringing at that telephone. This is independent of whether the call is to the telephone's primary extension or to any of the bridged appearances' extensions.

- Service Observing

The primary telephone user or bridging user can bridge onto a service observed call at any time. If the telephone is being service observed and an incoming call is answered by the bridging user, the call is not observed unless the telephone user bridges onto the call. Conversely, if the bridging user is being service observed and an incoming call is answered by the telephone user, the call is not observed unless the bridging user bridges onto the call.

If the bridging user activates Service Observing using a bridged appearance, Service Observing is activated for the bridging user.

- Terminating Extension Group (TEG)

TEG calls to the primary extension do not ring at the associated bridged appearances. TEG calls cannot be answered or bridged onto from a bridged appearance. The primary telephone should not be assigned to a TEG.

- Terminal Translation Initialization (TTI)

If a user is on a bridged appearance, the user cannot use TTI to separate from the telephone.

- Transfer

- Single-line telephones

A call cannot be transferred by a single-line telephone if more than one user is active on that call.

The primary telephone user, when no other bridges are active on the call, can transfer the call using normal single-line transfer procedures. Any attempt by a bridging user to bridge onto this call during a successful transfer attempt is denied.

A single-line bridging user, alone on a bridged call, can transfer the call, using normal transfer procedures. Any attempt by the primary telephone user to bridge onto this call during a successful transfer attempt is ignored; and any attempt to bridge on by a bridging user is denied.

If the bridging user has no other available bridged appearances of the primary extension (other than the one he or she is currently on), the bridging user, after pressing the conference/transfer button, must select a call appearance to be used for the transfer, before dialing the number.

Bridged Call Appearance

- Multiappearance telephones

If the bridging user has at least one available bridged appearance of the primary extension (other than the one he or she is currently on), the system automatically selects a bridged call appearance for the transfer when the conference/transfer button is pressed.

You can administer the system to automatically select the first idle appearance if there is no idle appearance with an extension matching the extension that is transferring the call.

If the primary user and the bridged user are both on the call when one user transfers the call, the user performing the transfer becomes the controlling user for the participation of both users on the conference. The controlling user is immediately dropped from the call. When the noncontrolling user hangs up, the appearance goes on soft hold. In this case, one of two things must occur to disassociate the appearance from the call: all other parties on the call hang up, or the controlling user rejoins the call and hangs up again.

- Videophone 2500 (single-line telephones)

A user may not use a single-line bridge to a Videophone 2500 principal that is on a video call.

- Voice Message Retrieval

A voice message to the primary extension can be retrieved on a bridged appearance by the bridged appearance user. If a security code is required to retrieve the message, the bridging user must use the security code of the primary telephone.

- Voice Paging

The use of Voice Paging automatically invokes exclusion. Therefore, interactions for this feature are the same as for Privacy-Manual Exclusion.

Bulletin Board

Use the Bulletin Board feature to post information and retrieve messages from other users on the server. Avaya personnel can also leave high-priority messages on the bulletin board. The system displays the high-priority messages as the first 10 lines on the bulletin board.

Detailed description of Bulletin Board

This section provides a detailed description of the Bulletin Board feature.

Use the Bulletin Board feature to post information and retrieve messages from other users on the server. Anyone with an init or an inad login can add or change messages on the bulletin board. Avaya personnel can also leave high-priority messages on the bulletin board. The system displays the high-priority messages as the first 10 lines on the bulletin board.

When you log in to the system, the system alerts you to any messages that are on the bulletin board, and gives you the date of the last message.

If an Avaya employee enters a high-priority message while you are logged in, you receive the notification the next time that you enter a command. This high-priority message disappears after you enter a command. The system displays the high-priority message again each time that you log in, until you remove the message.

The bulletin board provides three pages of message space. You can write on any available line other than the high-priority lines.

You must maintain the bulletin board. If your bulletin board exceeds 80% capacity, the system displays the capacity that remains when you log in. If the bulletin board is full, the new messages overwrite the old messages.

Administering Bulletin Board

The following steps are part of the administration process for the Bulletin Board feature:

- [Setting user permissions](#)
- [Changing bulletin board information](#)

Bulletin Board

This section describes:

- Any prerequisites for administering the Bulletin Board feature
- The screens that you use to administer the Bulletin Board feature
- Complete administration procedures for the Bulletin Board feature

Prerequisites for administering Bulletin Board

You must complete the following actions before someone can change bulletin board information:

- None

Screens for administering Bulletin Board

Screen Name	Purpose	Fields
Command Permission Categories	Give permission to users to type nonpriority information on the Bulletin Board screen.	• Display Admin and Maint Data • Administer Features
Bulletin Board	Add or change priority, or nonpriority, information in the system.	All

Setting user permissions

To give a user permission to type nonpriority information on the **Bulletin Board** screen:

1. Type **change permissions login ID**, where **login ID** identifies the user who is to use the Bulletin Board feature. Press **Enter**.

The system displays the **Command Permission Categories** screen ([Figure 64: Command Permission Categories screen](#) on page 333).

Figure 64: Command Permission Categories screen

Page 1 of 3

COMMAND PERMISSION CATEGORIES

Login Name: Sup3ru

COMMON COMMANDS	
Display Admin. and Maint. Data? y	
System Measurements: y	
ADMINISTRATION COMMANDS	
Administer Stations? y	Administer Features? y
Administer Trunks? y	Administer Permissions? y
Additional Restrictions? n	
MAINTENANCE COMMANDS	
Maintain Stations? n	Maintain Switch Circuit Packs? n
Maintain Trunks? n	Maintain Process Circuit Packs? n
Maintain Systems? n	Maintain Enhanced DS1? n

2. In the **Display Admin. and Maint. Data?** field, perform one of the following actions:

- Type **y** if you want the user to:
 - Type nonpriority messages on the bulletin board
 - Use the display, list, monitor, status commands
 - Change his or her password
 - Schedule reports

3. In the **Administer Features** field, perform one of the following actions:

- Type **y** if you want the user to:
 - Type nonpriority messages on the bulletin board
 - Administer the feature-related parameters, such as coverage paths, class of service, class of restriction, system parameters, authorization codes, and security

4. Press **Enter** to save your changes.

Changing bulletin board information

To change bulletin board information:

1. Type **change bulletin-board**. Press **Enter**.

The system displays the **Bulletin Board** screen ([Figure 65: Bulletin Board screen](#) on page 334).

Figure 65: Bulletin Board screen

change bulletin-board	Page 1 of 3
Message (* indicates high-priority)	Date
*Avaya is in the process of	03/02/2004
*investigating your trunk lockup problem.	03/02/2004
*The Bulletin Board will be updated as	03/02/2004
*we find information.	03/02/2004
* We have identified the problem.	03/02/2004
*The trunk you added does not provide	03/02/2004
*disconnect supervision. However, the	03/02/2004
*trunk group was administered as such.	03/02/2004
*Please call Pat J. for details.	03/02/2004
We recently added a new trunk group (14)	03/02/2004
and have had many of the members getting	03/02/2004
locked up.	03/02/2004
We see the error - thanks for checking.	03/02/2004

The **date** field is a display-only field that contains the date that someone added or changed the line of information.

2. Type the bulletin board information.

Those who have an init or an inads login, including Avaya personnel, can type high-priority information in Line 1 through Line 10. High-Priority messages have an asterisk (*) at the beginning of the line. When someone with an init or an inads login types the high-priority information, the system displays the high-priority message the next time that you log into the system.

Those with an init or an inads login can type any of the following characters, number, and symbols:

Table 1: Bulletin board entries

Character, number, or symbol	Symbol Name
A through Z	
a through z	
Blank	
0 through 9	
!	Exclamation mark
1 of 3	

Table 1: Bulletin board entries (continued)

Character, number, or symbol	Symbol Name
@	At sign
#	Pound sign
\$	Dollar sign
%	Percent sign
^	Circumflex
&	Ampersand
*	Asterisk
_	Underscore
+	Plus sign
-	Minus sign or dash
=	Equal sign
[	Left bracket
]	Right bracket
{	Left brace
}	Right brace
	Bar or pipe
\	Back slash
'	left single-quotation mark
'	right single-quotation mark or apostrophe
~	Tilde
;	Semi-colon
:	Colon
,	Comma
2 of 3	

Table 1: Bulletin board entries (continued)

Character, number, or symbol	Symbol Name
"	Right double-quotation mark
<	Left angle-bracket
>	Right angle-bracket
.	Period
/	Forward slash
?	Question mark
3 of 3	

3. Type the bulletin board information.

Those with permission, as defined on the **Command Permission Categories** screen, can type message information in:

- Line 11 through Line 19 of Page 1
- Line 1 through Line 20 of Page 2
- Line 1 through Line 20 of Page 3

Type any of the characters, numbers, or symbols shown in [Table 1: Bulletin board entries](#) on page 334. Press **Enter** to save your changes.

Reports for Bulletin Board

The following reports provide information about the Bulletin Board feature:

- None

Considerations for Bulletin Board

This section provides information about how the Bulletin Board feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Bulletin Board under all conditions. The following considerations apply to Bulletin Board:

- Only users with an init or an inads login can add or edit high-priority messages.
- Only one user can change a message at a time.
- The bulletin board does not lose information during a system reset at level 1 or level 2. If you save translations, you can restore the information if a system reset occurs at levels 3, 4, or 5.

Interactions for Bulletin Board

This section provides information about how the Bulletin Board feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of the Bulletin Board feature in any feature configuration.

- None

Busy Indicator

Use the Busy Indicator feature to provide multiappearance telephone users and attendants with a visual indicator of the busy or the idle status of one of the following system resources:

- An extension number
- A trunk group
- A terminating extension group (TEG)
- A hunt group, either direct department calling (DDC) or uniform call distribution (UCD)
- Any loudspeaker paging zone, including all zones

Detailed description of Busy Indicator

This section provides a detailed description of the Busy Indicator feature.

You can assign extension numbers, trunk group access codes, and Loudspeaker Paging access codes to a Busy Indicator button.

The Busy Indicator button provides the attendant or the user with direct access to the extension number, the trunk group, or the paging zone.

The Facility Busy lamp indication for a Vector Directory Number (VDN) does not light when the VDN is being used. You can use the associated button to place a call to a VDN.

Busy Indicator supports the following capabilities:

- [Busy Tone Disconnect](#)

Busy Tone Disconnect

In some regions of the world, the central office (CO) sends a busy tone for the disconnect message. With Busy Tone Disconnect (BTD), the switch disconnects analog loop-start CO trunks when the CO sends a busy tone.

A call that originates from or terminates to a telephone that uses a BTD-enabled trunk has a Call Classifier port connected to the trunk. The Call Classifier port connects after the call is answered and stays connected on the trunk until the station hangs up, or a BTD signal is received from the CO. If only one BTD trunk is on a call when the BTD signal is received, the call is dropped. If the call is a conference call, only the trunk is dropped. The rest of the parties stay connected.

Reports for Busy Indicator

The following reports provide information about the Busy Indicator feature:

- None

Considerations for Busy Indicator

This section provides information about how the Busy Indicator feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Busy Indicator under all conditions. The following considerations apply to Busy Indicator:

- None

Interactions for Busy Indicator

This section provides information about how the Busy Indicator feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Busy Indicator in any feature configuration.

- Answer Supervision

If Answer Supervision is enabled, set the Answer Supervision timeout field to 0 (zero).

Busy Verification

Use the Busy Verification feature (Verify button) to allow attendants and specific multiappearance telephone users to make test calls to trunks, telephones, and hunt DDC and UCD groups. Attendants and multiappearance telephone users can distinguish between a telephone that is truly busy and one that only appears busy because of some trouble condition. Users can also use this feature to quickly identify faulty trunks.

Detailed description of Busy Verification

This section provides a detailed description of the Busy Verification feature.

An attendant or multiappearance telephone user can activate Busy Verify by pressing the Verify button. If they want to verify a telephone or hunt group, they enter an extension number. If they want to verify a trunk, they dial a trunk-access code, followed by the 2- or 3-digit number of the trunk-group member to be verified. If the trunk-group member number is less than 10, the system requires a leading zero (01 or 001 rather than 1).

Note:

For DEFINITY SI or DEFINITY CSI, the member number is a 2-digit number; for DEFINITY R, the member number is a 3-digit number.

After an attendant or multiappearance telephone user has activated Busy Verification, the system checks the validity of the extension or trunk-access code and member number. If the number is not a telephone extension, DDC/UCD group-extension, ACD split number, or trunk access code with a valid member number, the system denies Verify and returns intercept tone.

When you use Verify to check a valid extension (one that is in the dial plan and assigned to a telephone), the system initiates a priority call to that extension. [Table 2: Verification of a telephone](#) on page 342 describes the process.

Table 2: Verification of a telephone

Telephone Status	System Response	Result
Idle	- Generates priority ringing at the telephone. - Processes the call as a normal telephone-originated or attendant-originated call	- Verification is complete. - Anyone can place a call to the telephone.
Active on a call and has an idle call appearance	- Generates priority ringing at the first idle appearance. - Processes the call as a normal attendant-originated call.	- Verification is complete. - Anyone can place a call to the telephone extension.
Active on a call and has no idle call appearances or has only one line appearance	- Bridges the attendant onto the call. - Generates a warning tone to all active parties and repeats the tone every 15 seconds while the attendant remains bridged onto the call.	- Verification is complete. - The attendant can determine if the telephone is actually in use.
Out of service	Generates reorder tone.	Verification is denied.

When you use Verify to check a valid ACD split, UCD group, or DDC group, the system initiates a priority call to that group. (Valid in this case means the split or group is translated and at least one member is logged in.) [Table 3: Verification of an ACD Split, UCD Group, or DDC Group](#) on page 342 describes the process.

Table 3: Verification of an ACD Split, UCD Group, or DDC Group

Split or Group Member Status	System Response	Result
Available for an incoming call	- Generates priority ringing at the member's telephone. - Processes the call as a normal attendant-originated call.	- Verification is complete. - Anyone can place a call to the member's telephone.
All activated Make Busy	Generates reorder tone.	Verification is denied.
Not available for incoming calls	- The system does not queue the call even if a queue is available. - Generates reorder tone.	Verification is denied.

When you use Verify to check a valid trunk, the system checks the status of that trunk. (Valid in this case means the trunk is translated with members and is not in an out-of-service state.)

[Table 4: Verification of a Trunk](#) on page 343 describes the process.

Table 4: Verification of a Trunk

Trunk Status	System Response	Result
The trunk is idle and incoming.	• The system generates confirmation tone.	• Verification is complete. • Anyone can use the trunk.
The trunk is idle and outgoing.	• The system generates dial tone.	• Verification is complete. • Anyone can use the trunk.
The trunk is busy with an active call.	• The system bridges the Verify originator onto the call. • The system generates a warning tone to all active parties and repeats the tone every 15 seconds while the Verify originator remains bridged onto the call.	• Verification is complete. • The trunk is in use.
The trunk is out of service.	• The system generates reorder tone.	• Verification is denied.

Administering Busy Verification

The following steps are part of the administration process for the Busy Verification feature:

- [Using Busy Verification](#)

This section describes:

- Any prerequisites for administering the Busy Verification feature
- The screens that you use to administer the Busy Verification feature
- Complete administration procedures for the Busy Verification feature

Prerequisites for administering Busy Verification

You must complete the following actions before you can administer the Busy Verification feature:

- View the **Trunk Group** screen, ensure that the **Dial Access** field is **y**. If this field is not set to **y**, contact your Avaya representative before you continue with this procedure.

Screens for administering Busy Verification

Screen name	Purpose	Fields
Station	Set up busy verify extension.	Feature Button Assignments

Using Busy Verification

To use Busy Verification:

1. Type **change station *n***, where *n* is the station to be assigned the busy verify button. Press **Enter**.

For this example, enter extension **1014**.

The system displays the **Station** screen ([Figure 66: Station screen](#) on page 344).

Figure 66: Station screen

Page 3 of X

STATION

SITE DATA

Room: _____

Jack: _____

Cable: _____

Floor: _____

Building: _____

Headset? n

Speaker? n

Mounting: d

Cord Length: 0_

Set Color: _____

ABBREVIATED DIALING

List1: _____

List2: _____

List3: _____

BUTTON ASSIGNMENTS

1: call-appr

2: call-appr

3: call-appr

4: verify__

5: _____

2. In the **Feature Button Assignments** field, type **verify**.
3. Press **Enter** to save your changes.
4. To activate the feature, press the **Verify** button on the phone and then enter the Trunk Access Code and member number to be monitored.

Reports for Busy Verification

The following reports provide information about the Busy Verification feature:

- None

Considerations for Busy Verification

This section provides information about how the Busy Verification feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Busy Verification under all conditions. The following considerations apply to Busy Verification:

- A busy verification cannot be made to an analog extension that is waiting to be answered at another extension. A call must be answered before it can be verified.
- If your country requires a tone other than 440 Hz, use the Intrusion feature rather than Verify to verify telephones.
- The system does not provide bridging when you verify UCD and DDC groups or RLTS.
- You cannot make outgoing test calls on DID trunks.
- You can verify an extension that is administered without hardware (X-ported). In this case, the system generates reorder tone.

Interactions for Busy Verification

This section provides information about how the Busy Verification feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Busy Verification in any feature configuration.

- Automatic Callback

Once the called party in an Automatic Callback call hangs up, neither extension can be busy-verified until both the calling and called parties are connected or the callback attempt is canceled (by the activating party or by time-out of the callback interval).

- Call Coverage

Since the busy-verification call to an extension is originated as a priority call, the call does not go to coverage.

Busy Verification

- Call Forwarding

Busy verification made to an extension with call forwarding activated, does not busy verify the forwarded-to extension. Only the called extension is busy verified.

- Call Waiting Termination

You cannot verify an extension that called an active telephone and is receiving call-waiting ringback tone unless the extension has an idle call appearance.

- Conference

The system denies busy verification of any extension involved in a conference call of more than five people. However, the system does allow a busy verification of any extension involved in a conference call of 5 or fewer parties. The system also denies busy verification of a trunk on a 6-party call.

- Data Privacy

Busy verification is denied if it would cause a bridging attempt on a telephone that has activated Data Privacy.

- Data Restriction

The system denies Verify if Data Restriction is active on a call, and a busy verification bridging attempt is made on that call.

- Hold

Busy verification of a multiappearance telephone is denied if all call appearances have calls on hold.

- Individual Attendant Access

An attendant cannot make a busy verification of another individual attendant console or of the attendant group.

- Loudspeaker Paging Access

The system denies busy verification if the telephone or trunk to be verified is connected to paging equipment.

- Transfer

Once the originator of busy verification has bridged onto a call, any attempt to transfer the call is denied until the originator drops from the call.

- Telephone Origination Restriction

A telephone that is origination restricted can be assigned a Busy Verify button. However, the button cannot be used.

- Telephone Termination Restriction

The system denies busy verification of telephones that are termination restricted.

Call Charge Information

Use the Call Charge Information feature to determine the approximate charge for calls that are made on outgoing trunks.

Detailed description of Call Charge Information

This section provides a detailed description of the Call Charge Information feature.

Avaya Communication Manager provides two ways to know the approximate charge for calls made on outgoing trunks.

Call Charge Information supports the following capabilities:

- [Advice of Charge](#)
- [Periodic Pulse Metering](#)
- [Charge Display](#)

Advice of Charge

For ISDN trunks, Advice of Charge (AOC) collects charge information from the public network for each outgoing call. Charge advice is a number that represents the cost of a call. The system records the charge information as either a charging unit or a currency unit.

Periodic Pulse Metering

For non-ISDN trunks, Periodic Pulse Metering (PPM) accumulates pulses that are transmitted from the public network at periodic intervals during an outgoing trunk call. At the end of the call, the number of pulses collected is the basis on which charges are determined.

Call-charge information helps you to account for the cost of outgoing calls before you receive the call charges from your network provider. The ability to account for the cost of outgoing calls before you receive the call charges from your network provider is especially important in countries where telephone bills are not itemized.

Call Charge Information

You can also use the information about the cost of outgoing calls to give the cost of telephone calls to employees. The cost information of outgoing telephone calls can help users to better manage their use of company telecommunications facilities. Note, however, that you cannot necessarily use the call charge information that the Call Charge Information feature provides to reconcile telephone bills with your network provider.

You must request either AOC service or PPM service from your network provider. In some areas, your selection is limited. Note that the public network does not offer AOC service and PPM service in some countries, including the US. In some countries, AOC information is received automatically for each call. In other countries, the system must request AOC information for each call. Your Avaya representative can help you determine the type of service that you need.

In some countries, the public network sends call-charge information only at the end of a call. In other countries, the public network sends information both at the end of the call and while the call is in progress. PPM is available over the following trunk types:

- Central office (CO)
- Direct inward and outward dialing (DIOD)
- Foreign exchange (FX)
- Personal Central Office Line (PCOL)
- Wide Area Telecommunications Service (WATS)

Charge Display

With Communication Manager, you can view call charge information on a telephone display, or on a Call Detail Recording (CDR) report.

Charge Display at a user telephone

You can allow users to view call charges on telephone displays. From a display, a user can see the cost of an outgoing call, both while the call is in progress and at the end of the call. If you want users to control when the display of the call charge information, you can assign a display button that the user can press to see the current call charges. You can also administer the system so that the system displays call charges automatically whenever a user places an outgoing call.

Charge Display on a CDR report

You can administer the system to display call charges on CDR reports. For more information, see the "Call Detail Recording" feature.

Either the **ISDN C C** field or the **PPM** field in the CDR record contains the last cumulative charge received from the network. If Call Splitting or Attendant Call Recording is enabled, and a call is transferred for the first time, the **ISDN Call Charge** field contains the cumulative charge that was most recently received from the network.

For all subsequent transfers, the **ISDN Call Charge** field contains the difference between the cumulative charge that was most recently received and the value that was generated in the previous CDR record for the same call.

A zero appears in the **Call Charge** field when:

- No AOC information is received
- A value of zero is the last charge information that was received
- The outgoing trunk group is not administered for AOC or PPM

Administering Call Charge Information

The following steps are part of the administration process for the Call Charge Information feature:

- [Administering the charge display](#)
- [Administering AOC for ISDN trunks](#)
- [Administering PPM for non-ISDN trunks](#)
- [Administering PPM for DS1 circuit packs](#)

This section describes:

- Any prerequisites for administering the Call Charge Information feature
- The screens that you use to administer the Call Charge Information feature
- Complete administration procedures for the Call Charge Information feature

Prerequisites for administering Call Charge Information

You must complete the following actions before you can administer the Call Charge Information feature:

- [Defining CDR to support Call Charge Information](#)
- [Specifying the frequency of the call charge displays](#)
- [Translating the text "Call Charge"](#)
- [Assigning a COR for charge displays](#)

Defining CDR to support Call Charge Information

To define Call Detail Recording (CDR) to support Call Charge Information:

1. Type **change system-parameters cdr**. Press **Enter**.

The system displays the **CDR System Parameters** screen ([Figure 67: CDR System Parameters screen](#) on page 350).

Figure 67: CDR System Parameters screen

change system-parameters cdr

Page 1 of 2

CDR SYSTEM PARAMETERS

Node Number (Local PBX ID): 18

CDR Date Format: month/day

Primary Output Format: customized

Primary Output Endpoint: CDR1

Secondary Output Format:

Use ISDN Layouts? n

Use Enhanced Formats? n

Condition Code 'T' For Redirected Calls? n

Modified Circuit ID Display? n

Remove # From Called Number? y

Record Outgoing Calls Only? n

Intra-switch CDR? y

Suppress CDR for Ineffective Call Attempts? y

Outg Trk Call Splitting? y

Disconnect Information in Place of FRL? n

Outg Attd Call Record? y

Interworking Feat-flag? y

Force Entry of Acct Code for Calls Marked on Toll Analysis Form? n

Calls to Hunt Group - Record: member-ext

Record Called Vector Directory Number Instead of Group or Member? n

Record Agent ID on Incoming? n

Record Agent ID on Outgoing? y

Inc Trk Call Splitting? y

Inc Attd Call Record? n

Record Non-Call-Assoc TSC? n

Call Record Handling Option: warning

Record Call-Assoc TSC? n

Digits to Record for Outgoing Calls: outpulsed

Privacy - Digits to Hide: 0

CDR Account Code Length: 4

2. Administer the **CDR System Parameters** screen. For more information, see the "Call Detail Recording" feature.

Specifying the frequency of the call charge displays

To specify the frequency of the charge display:

1. Type **change system-parameters features**. Press **Enter**.

The system displays the **Feature-Related System Parameters** screen
([Figure 68: Feature-Related System Parameters](#) on page 351).

Figure 68: Feature-Related System Parameters

display system-parameters features	Page 9 of 14
FEATURE-RELATED SYSTEM PARAMETERS	
Pull Transfer: n	Update Transferred Ring Pattern? n
Outpulse Without Tone? y	Wait Answer Supervision Timer? n
Misoperation Alerting? n	Repetitive Call Waiting Tone? n
Allow Conference via Flash? y	
Vector Disconnect Timer (min):	Network Feedback During Tone Detection? y
	ystem Updates Time On Station Displays? y
Intercept Treatment On Failed Trunk Transfers? n	
Station Tone Forward Disconnect: silence	
Level Of Tone Detection: precise	
Charge Display Update Frequency (seconds): 30	
Date Format on 607/2420/4600/6400 Terminals: mm/dd/yy	
Onhook Dialing on 607/2420/4600/6400/8400 Terminals? n	
ITALIAN DCS PROTOCOL	
Italian Protocol Enabled? n	

2. In the **Charge Display Update Frequency (seconds)** field, type the number of seconds between the charge update information displays that a user sees.

The valid entries are **10** through **60**, and blank.

Note that frequent display updates can have an impact on the performance of the system. If the duration of a call is less than the value in the **Charge Display Update Frequency (seconds)** field, the display does not automatically show the charge information.

If you want a user to see the charge information, you must assign a **disp-chrg** feature button on the **Station** screen for a user.

3. Press **Enter** to save your changes.

Translating the text "Call Charge"

To translate the text for "Call Charge:"

1. Type **change display-messages miscellaneous-features**. Press **Enter**.

The system displays the **Language Translations** screen ([Figure 69: Language Translations screen](#) on page 352).

Figure 69: Language Translations screen

change display-messages miscellaneous-features	Page 5 of 8
LANGUAGE TRANSLATIONS	
42. English: Add Skill: Enter number, then # sign	
Translation: *****	
43. English: Remove Skill: Enter number, then # sign	
Translation: *****	
44. English: Enter Skill Level, then # sign	
Translation: *****	
45. English: Enter Agent LoginID	
Translation: *****	
46. English: Call Type	
Translation: *****	
47. English: Call Charge	
Translation: *****	

-
2. Click **Next** until you see the translation number **47**.
 3. In the **Translation** field, type the translation for "Call Charge" if you need a translation for the text.
 4. Press **Enter** to save your changes.

Assigning a COR for charge displays

To assign a Class of Restriction (COR) for automatic charge display:

1. Type **change cor *n***, where *n* is the number of the COR to which you want to assign an automatic charge display. Press **Enter**.

The system displays the **Class of Restriction** screen ([Figure 70: Class of Restriction screen](#) on page 353).

Figure 70: Class of Restriction screen

display cor 1	Page 1 of 4
CLASS OF RESTRICTION	
COR Number: 1	
COR Description:	
FRL: 7	APLT? y
Can Be Service Observed? n	Calling Party Restriction: none
Can Be A Service Observer? n	Called Party Restriction: none
Time of Day Chart: 2	Forced Entry of Account Codes? n
Priority Queuing? n	Direct Agent Calling? n
Restriction Override: none	Facility Access Trunk Test? n
Restricted Call List? y	Can Change Coverage? n
Access to MCT? y	Fully Restricted Service? n
Group II Category For MFC: 7	Add/Remove Agent Skills? n
Send ANI for MFE? n	Automatic Charge Display? y
MF ANI Prefix:	PASTE (Display PBX Data on Phone)? n
Hear System Music on Hold? y	Can Be Picked Up By Directed Call Pickup? n
	Can Use Directed Call Pickup? n
	Group Controlled Restriction: inactive

2. In the **Automatic Charge Display** field, perform one of the following actions:
 - If you want the user to automatically see the call charges during a call and at the end of a call, type **y**.
 - If you want the user to press the disp-chrg feature button to see the call charges. To see the call charges, the user must press the disp-chrg feature button before the system drops the call, type **n**.
3. Press **Enter** to save your changes.

Screens for administering Call Charge Information

Screen name	Purpose	Fields
Attendant Console	Assign a feature button for the attendant to display charges.	Feature Button Assignments area • disp-chgs
CDR System Parameters	Define Call Detail Recording (CDR) for the system.	All
Class of Restriction	Specify a Class of Restriction (COR) that allows the users to have charges displayed automatically.	Automatic Charge Display
DS1 Circuit Pack	Specify the values and the increments for Periodic Pulse Metering (PPM).	• Received Digital Metering Pulse Maximum • Received Digital Metering Pulse Minimum • Received Digital Metering Pulse value
Feature-Related System Parameters	Specify the frequency of the system displays for charge information.	Charge Display Update Frequency
Language Translations	Specify a translation of the "Call Charge" text display.	Call Charge
Station	Assign a feature button for the user to display charges.	Feature Button • disp-chrg
	Assign a COR for an automatic display of call charges.	COR
Trunk Group (all types)	Specify charge information that controls Call Charge Information processes and displays.	• Charge Conversion • Charge Type • Currency Symbol • Decimal Point

Screen name	Purpose	Fields
Trunk Group • central office (CO) • Direct inward and outward dialing (DIOD) • foreign exchange (FX) • Personal Central Office Line (PCOL) • Wide Area Telecommunications Service (WATS)	Administer PPM for a non-ISDN network.	• CDR Reports • Direction • Frequency • Outgoing Glare Guard (msec) • PPM
Trunk Group-ISDN-PRI	Administer Advice of Charge (AOC) for an ISDN network.	• Charge Advice • Service Type • Supplementary Service Protocol • CDR Reports

Administering the charge display

To administer the charge display, you must complete the following procedures:

- [Administering a trunk group for call charge displays](#)
- [Assigning a call charge display button for a user](#)
- [Assigning a call charge display feature button for an attendant](#)

Administering a trunk group for call charge displays

To administer a trunk group for call charge displays:

1. Type **change trunk-group *n***, where *n* is the number of the trunk group for which you want to administer call charge display information. Press **Enter**.

The system displays the **Trunk Group** screen.

2. Click **Next** until you see the **Charge Conversion** field ([Figure 71: Trunk Group screen](#) on page 356).

Figure 71: Trunk Group screen

PERSONAL CO LINE GROUP		
Group Number: ____	Group Type: _____	CDR Reports: _
Group Name: _____		TAC: ____
Security Code: ____	Coverage Path: ____	Data Restriction? _
	Outgoing Display? _	
TRUNK PARAMETERS		
Trunk Type: _____	Trunk Direction: _____	
Trunk Port: _____	Disconnect Timing(msec): ____	
Trunk Name: _____	Trunk Termination: _____	
Outgoing Dial Type: _____	Analog Loss Group: ____	
Prefix-1? _	Digital Loss Group: ____	
Disconnect Supervision - In? _	Call Still Held? _	
Answer Supervision Timeout: ____	Receive Answer Supervision? _	
Trunk Gain: ____	Country: ____	
Charge Conversion: _____	DS1 Echo Cancellation: _	
Decimal Point: _____		
Currency Symbol: ____		
Charge Type: _____		

3. In the **Charge Conversion** field, type the charge unit for the currency that you use.

Valid entries are **1** to **64,500**.

The software multiplies the number of charge units by the value of the **Charge Conversion** field, and displays the result as a currency. If the **Charge Conversion** field is blank, the software displays the number of charge units, but does not convert the charge units to a currency.

- The system displays the **Charge Conversion** field for central office (CO), direct inward and outward dialing (DIOD), foreign exchange (FX), and Wide Area Telecommunications Service (WATS) trunk groups when the **Direction** field on the **Trunk Group** screen is set to **outgoing** or **two-way**.
- The system displays the **Charge Conversion** field for ISDN trunk groups when the **Charge Advice** field on the **Trunk Group** screen is not set to **none**.

4. In the **Charge Type** field, type the words or the characters that you want the system to display after the system displays the call charge amount.

You can leave the field blank, or you can type one to seven characters. The system counts a leading space, or an embedded space, as a character.

- The system displays the **Charge Type** field for CO, DIOD, FX, and WATS trunk groups when the **Direction** field on the **Trunk Group** screen is set to **outgoing** or **two-way**.
- The system displays the **Charge Type** field for ISDN trunk groups when the **Charge Advice** field on the **Trunk Group** screen is not set to **none**.

5. In the **Currency Symbol** field, type the symbol that you want the system to display before the system displays the call charge amount.

You can leave the field blank or you can type one to seven characters. The system counts a leading space, or an embedded space, as a character.

- The system displays the **Currency Symbol** field for CO, DIOD, FX, and WATS trunk groups when the **Direction** field on the **Trunk Group** screen is set to **outgoing** or **two-way**.
- The system displays the **Currency Symbol** field for ISDN trunk groups when the **Charge Advice** field on the **Trunk Group** screen is not set to **none**.

6. In the **Decimal Point** field, type the representation of a decimal point that is appropriate for your currency.

You can type **comma**, **period**, or **none**.

If you type **comma** or **period**, the system divides the call charge amount by 100.

- The system displays the **Decimal Point** field for CO, DIOD, FX, and WATS trunk groups when the **Direction** field on the **Trunk Group** screen is set to **outgoing** or **two-way**.
- The system displays the **Decimal Point** field for ISDN trunk groups when the **Charge Advice** field on the **Trunk Group** screen is not **none**.

7. Press **Enter** to save your changes.

Assigning a call charge display button for a user

To assign a call charge display button for a user:

1. Type **change station *n***, where *n* is the extension of the user to whom you want to assign a call charge display feature button. Press **Enter**.

The system displays the **Station** screen ([Figure 72: Station screen](#) on page 358).

Figure 72: Station screen

change station 1014		Page 1 of X
STATION		
Extension: 1014	Lock Messages? n	BCC: 0
Type:	Security Code:	TN: 1
Port:	Coverage Path 1:	COR: 1
Name:	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Personalized Ringing Pattern: 3	
Data Module? n	Message Lamp Ext: 1014	
Speakerphone: 2-way	Mute button enabled? y	
Display Language? English	Expansion Module?	
Model:		
Survivable GK Node Name:	Media Complex Ext:	
	IP Softphone? y	
	Remote Office Phone? y	

2. In the **COR** field, type the number of the COR that supports the automatic display of call charges.
3. Click **Next** until you see the **Button Assignments** area ([Figure 73: Station screen](#) on page 359).

Figure 73: Station screen

change station 1014		Page 3 of 4
STATION		
SITE DATA		
Room:		Headset? n
Jack:		Speaker? n
Cable:		Mounting: d
Floor:		Cord Length: 0
Building:		Set Color:
ABBREVIATED DIALING		
List1:	List2:	List3:
BUTTON ASSIGNMENTS		
1: call-appr	7: disp-chrg	
2: call-appr	8:	
3: call-appr	9:	
4:	10:	
5:	11:	
6: headset	12: release	

4. In the **Button Assignments** area, type **disp-chrg** next to the feature button number that you want the user to use to display a call charge amount.
5. Press **Enter** to save your changes.

Assigning a call charge display feature button for an attendant

To assign a call charge display feature button for an attendant:

1. Type **change attendant *n***, where *n* is the number of the attendant console to which you want to assign a charge display feature button.
The system displays the **Attendant Console** screen.
2. Click **Next** until you see the **Feature Button Assignments** area ([Figure 74: Attendant Console screen](#) on page 360).

Figure 74: Attendant Console screen

change attendant 1		ATTENDANT CONSOLE		Page 3 of 4
FEATURE BUTTON ASSIGNMENTS				
1: split_____			13: disp-chrg_	
2: _____			14: _____	
3: _____			15: _____	
4: _____			16: _____	
5: _____			17: _____	
6: hold _____ *			18: _____	
7: _____			19: forced-rel	
8: aux-work	RC:	Grp:	20: _____	
9: _____			21: _____	
10: _____			22: _____	
11: _____			23: night-serv *	
12: _____			24: pos-busy__ *	

3. In the **Feature Button Assignments** area, type **disp-chrg** next to the feature button number that you want the attendant to use to display a call charge amount.
4. Press **Enter** to save your changes.

Administering AOC for ISDN trunks

To administer Advice of Charge (AOC) for an ISDN trunk:

1. Type **add trunk-group next**. Press **Enter**.

The system displays the **Trunk Group** screen ([Figure 75: ISDN Trunk Group screen](#) on page 361).

Figure 75: ISDN Trunk Group screen

add trunk-group next
Page 1 of x

TRUNK GROUP

Group Number: 456	Group Type: isdn	CDR Reports: y
Group Name: OUTSIDE_CALL_____	COR: 1_	TN: 1_ TAC: _____
Direction: two-way_	Outgoing Display? n	Carrier Medium: PRI/BRI
Dial Access? n	Busy Threshold: 99_	Night Service: _____
Queue Length: 0__		
Service Type: _____	Auth Code? n	TestCall ITC: rest
Usage Alloc: _____	Far End Test Line No: _____	
TestCall BCC: 4	TestCall Service: _____	
TRUNK PARAMETERS		
Codeset to Send Display: 6	Codeset to Send TCM, Lookahead: 6	
Max Message Size to Send: 260	Charge Advice: none_____	
Supplementary Service Protocol: a	Digit Handling(in/out): overlap/overlap	
Digit Treatment: insertion	Digits: 1234	
Trunk Hunt: cyclical	QSIG Value-Added? n	
	Digital Loss Group: _____	
Incoming Calling Number - Delete: _____	Insert: _____	Format: _____
Bit Rate: 1200_	Synchronization: async	Duplex: full
Disconnect Supervision - In? y Out? n		
Answer Supervision Timeout: 0__		

2. In the **Charge Advice** field, perform one of the following actions:

- If your public network sends AOC automatically, type **automatic**.
- If the system must request charge information for each call, and you want to receive only the final call charge, type **end-on-request**.
- If the system must request charge information for each call, and you want the system to display call charges both during the call and at the end of the call, type **during-on-request**.

You can change this field from the default value of none, only if the **CDR Reports** field is set to **y**.

3. In the **Service Type** field, type **public-ntwrk**.

4. In the **Supplementary Service Protocol** field, type the supplementary service protocol that this trunk uses. [Table 5: Supplementary service protocols](#) on page 362 shows the valid entries for this field. You can type only one entry.

Table 5: Supplementary service protocols

Valid entries	Usage
a	National
b	ISO/ETSI QSIG Private Network. Also used for the separation of bearer and signaling (SBS) signaling trunks.
c	ETSI public network.
d	European Computer Manufacturer's Association (ECMA) QSIG private network. Supports only Name Identification and Additional Network Feature Transit Counter (ANF-TC).
e	Distributed Communications System (DCS) with Rerouting Do not use this option if the Service Type field is set to dmi-mos or sddn. Set the Used for DCS field to y .
f	ISDN Feature Plus Public network feature plus signaling.
g	American National Standards Institute (ANSI). Available only if the ISDN-PRI field or the ISDN-BRI field on the Optional Features screen is set to y .

5. In the **CDR Reports** field, type the entry that provides the CDR information that you want for your system. [Table 6: CDR report entries](#) on page 363 shows the valid entries for this field.

Table 6: CDR report entries

Valid entries	Usage
y	All outgoing calls on this trunk group generate call detail records. If the Record Outgoing Calls Only field on the CDR System Parameters screen is set to n , incoming calls on this trunk group also generate call detail records.
n	Calls over this trunk group do not generate call detail records.
r	The system generates call detail records for both incoming and outgoing calls. The system also generates the following ringing interval call detail records: - Abandoned calls. The system creates a record with condition code <i>H</i>. Condition code <i>H</i> indicates the time until the call was abandoned. - Answered calls. The system creates a record with condition code <i>G</i>. Condition code <i>G</i> indicates the interval between when the call starts to ring and the user answers the call. - Calls to busy stations. The system creates a record with condition code <i>I</i>. Condition code <i>I</i> indicates a recorded call interval of zero.

6. Press **Enter** to save your changes.

Administering PPM for non-ISDN trunks

To administer Periodic Pulse Metering (PPM) for non-ISDN trunks:

- 1. Type **change trunk-group *n***, where *n* is the number of the trunk-group for which you want to administer PPM. Press **Enter**.

The system displays the **Trunk Group** screen ([Figure 71: Trunk Group screen](#) on page 356) and ([Figure 76: Trunk Group screen](#) on page 364).

Figure 76: Trunk Group screen

change trunk-group 456

Page 1 of x

TRUNK GROUP

Group Number: 456

Group Name: OUTSIDE_CALL

Direction: two-way

Dial Access? n

Queue Length: 0

Service Type:

Usage Alloc:

TestCall BCC: 4

TRUNK PARAMETERS

Codeset to Send Display: 6

Max Message Size to Send: 260

Supplementary Service Protocol: a

Digit Treatment: insertion

Trunk Hunt: cyclical

Incoming Calling Number - Delete:

Bit Rate: 1200

Disconnect Supervision - In? y

Answer Supervision Timeout: 0

Group Type: isdn

COR: 1

Outgoing Display? n

Busy Threshold: 99

Auth Code? n

Far End Test Line No:

TestCall Service:

Codeset to Send TCM,Lookahead: 6

Charge Advice: none

Digit Handling(in/out):overlap/overlap

QSIG Value-Added? n

Insert:

Synchronization: async

Out? n

CDR Reports: y

TN: 1

Carrier Medium: PRI/BRI

Night Service:

TestCall ITC: rest

Digits: 1234

Digital Loss Group:

Format:

Duplex: full

- 2. In the **CDR Reports** field, type the entry that specifies the circumstances under which you want the system to generate CDR report information. [Table 7: CDR report entries](#) on page 365 shows the valid entries for this field.

Table 7: CDR report entries

Valid entries	Usage
y	All outgoing calls on this trunk group generate call detail records. If the Record Outgoing Calls Only field on the CDR System Parameters screen is set to n , incoming calls on this trunk group also generate call detail records.
n	Calls over this trunk group do not generate call detail records.
r	The system generates call detail records for both incoming and outgoing calls. The system also generates the following ringing interval call detail records: - Abandoned calls. The system creates a record with condition code <i>H</i>. Condition code <i>H</i> indicates the time until the call was abandoned. - Answered calls. The system creates a record with condition code of <i>G</i>. Condition code <i>G</i> indicates the interval between when the call starting to ring and the user answers the call. - Calls to busy stations. The system creates a record with condition code <i>I</i>. Condition code <i>I</i> indicates a recorded call interval of zero.

3. In the **Direction** field, perform one of the following actions:

- If you want this trunk to be used for incoming traffic, type **incoming**.
- If you want this trunk to be used for outgoing traffic, type **outgoing**.
- If you want this trunk to be used to network call redirection, type **two-way**.

The system displays this field for all trunk groups except direct inward dialing (DID) and customer-premises equipment (CPE).

4. In the **Glare** field, type the minimum acceptable interval, in milliseconds, between the time that the server sends an outgoing seizure request and when the server receives a seizure acknowledgment. If the interval in which the server receives an acknowledgment is less than the interval that you specify in this field, glare is assumed. Valid entries are the numbers **40** to **100**, in increments of 10.

Only TN2140 ports receive this timer.

You can administer this field only if the **Trunk Type** field is set to **cont**, and the **Direction** field is set to **two-way** or **outgoing**.

- In the **Frequency** field, type the PPM pulse frequency that the public network requires. [Table 8: PPM pulse frequencies](#) on page 366 shows the valid entries for this field.

The system displays this field only if the **Direction** field is set to **outgoing** or **two-way**, and the **PPM** field is set to **y**.

Table 8: PPM pulse frequencies

Valid entries	Usage
12k	The TN465B, or later, circuit pack and the TN2184 circuit pack can detect only 12k and 16 kHz PPM . If you type 12k in the Frequency field, the circuit pack is set to detect 12 kHz.
16k	The TN465B, or later, circuit pack and the TN2184 circuit pack can detect only 12k and 16kHz PPM . If you type 16k in the Frequency field, the circuit pack is set to detect 16kHz.
50	The TN465B, or later, circuit pack and the TN2184 circuit pack can detect only 12k and 16kHz PPM . If you type 50 in the Frequency field, the circuit pack is set to detect 16kHz.
50/12k	The TN465B, or later, circuit pack and the TN2184 circuit pack can detect only 12k and 16kHz PPM . If you type 50/12k in the Frequency field, the circuit pack is set to detect 12kHz.
50/16k	The TN465B, or later, circuit pack and the TN2184 circuit pack can detect only 12k and 16kHz PPM . If you set the Frequency field to 50/16k , the circuit pack is set to detect 16kHz.

- In the **PPM** field, type **y**.
- Press **Enter** to save your changes.

Administering PPM for DS1 circuit packs

To administer PPM for DS1 circuit packs:

- Type **change ds1 n**, where **n** is the number of the DS1 circuit pack for which you want to administer PPM. Press **Enter**.

The system displays the **DS1 Circuit Pack** screen ([Figure 77: DS1 Circuit Pack screen](#) on page 367).

Figure 77: DS1 Circuit Pack screen

DS1 CIRCUIT PACK	
Location: _____	Name: _____
Bit Rate: _____	Line Coding: _____
Signaling Mode: _____	
Interconnect: _____	Country Protocol: _____
Interface Companding: _____	
Idle Code: _____	
Received Digital Metering Pulse Minimum (ms):	
Received Digital Metering Pulse Maximum (ms):	
Received Digital Metering Pulse Value:	
Slip Detection: _____	Near-end CSU Type: _____
Block Progress Indicator? n	

2. In the **Received Digital Metering Pulse Maximum (ms)** field, type the number that your network service provider recommends. Valid entries are **20** to **1000**, in increments of 10. The number that you type in this field must be greater than the number that you type in the **Received Digital Metering Pulse Minimum (ms)** field.

The system displays this field only when the **Signaling Mode** field is set to **cas**, the **Interconnect** field is set to **co** or **pbx**, and the **Country Protocol** field is set to a protocol that uses PPM as defined in [Table 9: Country protocol codes for incoming digital PPM signaling](#) on page 368.

3. In the **Received Digital Metering Pulse Minimum (ms)** field, type the number the number that your network service provider recommends. Valid entries are **20** to **1000**, in increments of 10. The number that you type in this field must be less than the number that you type in the **Received Digital Metering Pulse Maximum (ms)** field.

The system displays this field only when the **Signaling Mode** field is set to **cas**, the **Interconnect** field is set to **co** or **pbx**, and the **Country Protocol** field is set to a protocol that uses PPM as defined in [Table 9: Country protocol codes for incoming digital PPM signaling](#) on page 368.

4. In the **Received Digital Metering Pulse Value** field, type the number that your network service provider recommends. Valid entries are **1** and **2**.

The system displays this field when the **Signaling Mode** field is set to **cas**, the **Country Protocol** field is set to **21**, and the **Interconnect** field is set to **co** or **pbx**.

Table 9: Country protocol codes for incoming digital PPM signaling

Code	Country	PPM Min. (ms)	PPM Max. (ms)	PPM value
0	null	NA	NA	NA
1	US	NA	NA	NA
2	Australia	80	180	0
3	Japan	NA	NA	NA
4	Italy	120	150	1
5	Netherlands	90	160	0
6	Singapore	NA	NA	NA
7	Mexico	20	180	1
8	Belgium	20	180	1
9	Saudi Arabia	NA	NA	NA
10	UK	NA	NA	NA
11	Spain	20	220	0
12	France	NA	NA	NA
13	Germany	NA	NA	NA
14	Czech Republic	20	420	1
15	Russia CIS	NA	NA	NA
16	Argentina	10	180	1
17	Greece	100	180	1
18	China	NA	NA	NA
19	Hong Kong	NA	NA	NA
20	Thailand	20	180	1
1 of 2				

Table 9: Country protocol codes for incoming digital PPM signaling (continued)

Code	Country	PPM Min. (ms)	PPM Max. (ms)	PPM value
21	Macedonia Croatia	120 20	180 80	1 1
22	Poland	100	150	0
23	Brazil	NA	NA	NA
24	Nordic	NA	NA	NA
25	South Africa	160	240	0, 1
				2 of 2

5. Press **Enter** to save your changes.

End-user procedures for Call Charge Information

End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Call Charge Information:

Displaying call charge information

To display call charge information:

1. Press the disp-chrg button before the call drops.

If you press the:

- Elapsed-timer button, the elapsed-timer information can overwrite part of the call charge information.
- Local-directory-number button, the call charge information overwrites the directory number information.
- Exit or Normal button, the directory number information no longer overwrites the local directory number information.

Reports for Call Charge Information

The following reports provide information about the Call Charge Information feature:

- None

Considerations for Call Charge Information

This section provides information about how the Call Charge Information feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Call Charge Information under all conditions. The following considerations apply to Call Charge Information:

- Performance impact

Call Charge Information can have an impact on system performance in several ways. The information that comes in over ISDN trunks takes up bandwidth, and reduces the maximum amount of traffic that the ISDN D-channel can handle. This is especially true in countries such as Germany and France, where the network sends charging information updates as often as every 3 to 10 seconds for each active international call.

The number of telephones that display charge information and the frequency of updates also affect performance. Usually, the update frequency matches the average rate at which call charge updates are received from the public network.



CAUTION:

When users update displays too frequently, unnecessary system performance degradation can occur. If performance slows to an unacceptable rate, you can lengthen the amount of time between updates.

Interactions for Call Charge Information

This section provides information about how the Call Charge Information feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Call Charge Information in any feature configuration.

- **Attendant Features**

Attendant consoles cannot have an automatic charge display. If you want the attendant to see call charges, you must assign a disp-chrg button to the attendant console. If the attendant transfers an outgoing call, the display returns to normal mode. If the transfer is not completed, or the call remains at the attendant console, the attendant must press the disp-chrg button again to view call charges.

- **Automatic Incoming Call Display**

If a user has charges displayed for an existing call, and a second call rings on another line appearance, the display returns to normal mode for a short time to show the identity of the caller. The user must press the disp-chrg again to view call charges. Or if automatic charge display is enabled, the user must wait for the Charge Display Update Frequency interval to expire.

- **Bridged Appearance**

If a user uses a bridged call appearance to place a call, the system displays the call charges on the telephone from which the call is made. If Automatic Charge Display is part of the Class of Restriction (COR) for that telephone, the system displays the charges automatically. The system displays the actual charge for the call on the Call Detail Recording (CDR) report as if the call was made from the principal extension, and not from the bridged appearance.

- **Call Coverage or Call Forwarding**

Call charges for a call to an extension that the system redirects over a public-network trunk, are charged to the called extension, not the calling extension. However, if the call is placed from an internal telephone that has charge display capability, the caller sees the charges for the redirected call.

- **Call Park**

When a user parks a call, the display mode returns to normal. If a user retrieves a parked, outgoing call from another display telephone, the display on that set shows the current call charges if the user presses the disp-chrg button. The display also shows the charges if the Class of Restriction (COR) of the user allows Automatic Charge Display. If call splitting is enabled, the display shows the charges that accumulated since the user unparked the call.

Call Charge Information

- Call Transfer

Advice of Charge (AOC) administration for the outgoing trunk group controls whether AOC information is requested or recorded for the call, when the system routes a transferred call over a public-network ISDN-PRI trunk group. If two or more outgoing trunks are connected through trunk-to-trunk transfer, the software can receive AOC information from the network for each outgoing trunk that is involved in the call.

- Call Detail Recording (CDR) Adjuncts

The software does not tandem AOC information through a private network to other switches. The CDR adjunct that records AOC information must receive its input from software that is directly connected to the public network.

- CDR Call Splitting

- The system generates a separate call record, whenever the system transfers a call, if you administered CDR Call Splitting for outgoing trunks.
- Attendant Call Recording, which is a form of Call Splitting, generates a CDR record when an attendant drops from a call.
- Incoming Trunk Call Splitting has no effect on charge information.
- If you rely on Call Splitting or Attendant Call Recording, request call charge information during the call. However, if you use AOC, a request for call charge information during a call increases message activity on the signaling channel, and reduces Busy Hour Call Capacity.
- In some countries, or with specific protocols, AOC information is unavailable during a call. If AOC information is unavailable during a call, you can use the Elapsed Time in the CDR records to allocate the charges among the call participants.
- You must use CDR Call Splitting if you want the charge display to restart at zero when a call is transferred.

- Centralized Attendant Services

In any configuration where a branch system has no direct connection to the public network, the private network does not pass call-charge information to these branches.

- Conference

If a user adds a third party to a call that is in charge-display mode, the display returns to normal. The system does not display call charges when more than two parties are on the call.

- Distributed Communications System (DCS)

In any configuration where a branch system has no direct connection to the public network, the private network does not pass call-charge information to these branches.

- Electronic Tandem Network (ETN)

In any configuration where a branch system has no direct connection to the public network, the private network does not pass call-charge information to these branches.

- Hold

If a user places a call on hold, the display returns to normal mode. The user must press the disp-chrg button again to view call charges. If the automatic charge display is enabled, the user must wait for the system to refresh the display.

- Last Number Dialed

When a user is active on a call, a user can view the last number that the user dialed. To view the last number that was dialed, the user presses the stored-numb button, and then presses the last-numb button. To view call charges again, the user must press the disp-chrg button, or the Normal button if Automatic Charge Display is part of the COR of the user.

- QSIG

In any configuration where a branch system has no direct connection to the public network, the private network does not pass call charge information to these branches.

- System resets

If you perform a warm reset while calls are active with charge display, the charge display stops operating. To resume call charge updates, users must press the Normal button.

Call Coverage

Use the Call Coverage feature to automatically reroute incoming calls to alternate telephone numbers.

Detailed description of Call Coverage

This section provides a detailed description of the Call Coverage feature.

Use Call Coverage to:

- Reroute incoming calls to alternate telephone numbers when the called party is unavailable to answer calls
- Establish the order in which calls are redirected to alternate destinations
- Establish up to six alternate destinations for an incoming call
- Establish redirection criteria that govern when the system redirects a call
- Establish multiple coverage paths that the system can select from based on redirection criteria
- Redirect calls based on the time of day
- Redirect calls to a local telephone number or to a telephone number in the public network
- Allow users to change their lead coverage path from both on-site and off-site locations

When a call meets the redirection criteria for a called telephone number, the system attempts to route the call sequentially to one of the points in a coverage path. Users can have a maximum of six points in the coverage path. If no coverage points are available, the call might revert to the original called number. If any point in the path is available, the call either rings at the individual telephone, an available member of a coverage group, or queues to the coverage group. Once a call is ringing or queued at any point in a coverage path, the call neither reverts to the original number, nor to the previous coverage point.

A call continues to ring at a coverage point for the interval that is administered for Coverage Subsequent Redirection. At the end of this interval, the system attempts to route the call to any points that remain in the coverage path. If no other point is available to accept the call, the call remains queued, or continues to ring at the current coverage point.

What is a Call Coverage Path?

A call coverage path is a list of one to six alternate answering positions. The system sequentially accesses the coverage points when the called party or the called group is unavailable to answer the call.

When a call meets the redirection criteria for a called telephone number, the system attempts to route the call sequentially to one of the points in a coverage path. Users can have a maximum of six points in the coverage path. If no coverage points are available, the call might revert to the original called number.

You can assign a coverage path to any of the following entities:

- An automatic call distribution (ACD) split
- An agent login ID
- A personal central office line (PCOL) group
- A Terminating Extension Group (TEG)
- A hunt group
- A telephone that can be either on site or off site

You define the coverage paths and establish the redirection criteria. You can include any of the following entities as points in a coverage path:

- A telephone number
- A voice messaging system
- An announcement
- An attendant group
- A uniform call distribution (UCD) hunt group
- A direct department calling (DDC) hunt group
- An ACD hunt group
- A coverage answer group (CAG)
- A vector directory number (VDN)

Multiple coverage paths

The system can select from multiple coverage paths that you define for a single destination. However, the system uses only one coverage path per call. The system first considers *Coverage Path 1*, the lead coverage path, when the system directs a call to coverage.

When the system redirects a call to coverage, the system checks the lead coverage path to determine whether the coverage redirection criteria of the path match the call status. If the criteria match, the system uses the lead coverage path. If the redirection criteria of the lead coverage path does not match, the system moves in sequence from point to point in the coverage path to find a coverage path with redirection criteria that matches the call status. If the system does not find a match, the call remains at the called extension. Once the system selects a coverage path, that path is used throughout the duration of the call.

Call Coverage supports the following capabilities:

- **Call Coverage**

The system reroutes incoming calls to alternate telephone numbers when the called party is unavailable to answer calls.

- **Call Coverage Off Network**

You can administer and use an external number in a coverage path. The system can monitor the call to determine whether the external number is busy or does not answer. If necessary, the system can redirect a call to coverage points that follow the external number.

- **Call Coverage Time of Day**

You can administer the redirection of calls to different lead coverage paths based on the day of the week and the time of day.

- **Call Coverage Changeable Coverage Paths**

Users can use a feature access code (FAC) to modify coverage points.

- **Consult**

Users can answer a coverage call, and then communicate with the called user without the caller hearing the conversation.

- **Extended User Administration of Redirected Calls**

Users can change their lead coverage path from both on-site and off-site locations.

Time-of-Day Coverage

Use the Time-of-Day Coverage capability to redirect calls to different lead coverage paths at different times of the day, and on different days of the week.

For example, a user might want incoming calls to go to coverage based on the following schedule:

- To a co-worker at the office during normal business hours
- To an off-network destination, such as home, in the early evening
- To a voice messaging, such as AUDIX, at all other times

Call Coverage

To provide the user with the requested coverage, you administer the information in [Table 10: Example of a Time-of-Day coverage table](#) on page 378.

Table 10: Example of a Time-of-Day coverage table

Day of the week	Time 1 directed to	Time 2 directed to	Time 3 directed to	Time 4 directed to
Monday	00:00 CovPath3 (AUDIX)	08:00 CovPath1 (Office)	17:30 CovPath2 (Home)	20:00 CovPath3 (AUDIX)
Tuesday	00:00 CovPath3 (AUDIX)	08:00 CovPath3 (Office)	17:30 CovPath3 (Home)	20:00 CovPath3 (AUDIX)
Wednesday	00:00 CovPath3 (AUDIX)	08:00 CovPath1 (Office)	17:30 CovPath2 (Home)	20:00 CovPath3 (AUDIX)
Thursday	00:00 CovPath3 (AUDIX)	08:00 CovPath3 (Office)	17:30 CovPath3 (Home)	20:00 CovPath3 (AUDIX)
Friday	00:00 CovPath3 (AUDIX)	08:00 CovPath1 (Office)	17:30 CovPath2 (Home)	20:00 CovPath3 (AUDIX)
Saturday	00:00 CovPath3 (AUDIX)			
Sunday	00:00 CovPath3 (AUDIX)			

The Time-of-Day Coverage table represents time in 24-hour format. Activation times are ascending from the earliest to the latest. The activation times cover the entire day. If you do not assign a lead coverage path to a specific time interval, no coverage exists from that time until the next activation time.

When a call arrives at an extension, the system determines the lead coverage path that is in effect at that time. The system uses the information to redirect the call. If you change call coverage for a user while the user has a call in progress, your changes do not affect the call in progress.

Off-network Call Coverage

You can use standard remote coverage to an external number to send a call to an external telephone. However, the system does not monitor the call once the call leaves your system. Therefore, if the call is busy or not answered at the external number, the call cannot be directed back to the system.

The Coverage of Calls Redirected Off Net (CCRON) capability, however, allows you to use an external number in a coverage path. The system monitors the call to determine whether the external number is busy or unanswered. If necessary, the system can redirect a call to coverage points that follow the external number. Any coverage point can be an off-network destination.

This capability allows a call to follow a coverage path that:

1. Starts at the called extension
2. Redirects to the home telephone, and if unanswered at home
3. Returns to the voice mail box of the called extension

Note that the call does not return to the system if the external number is the last point in the coverage path, except when no trunks are available to route the call. In that case, the system attempts to again terminate the call at the original called extension.

When the system redirects an incoming trunk call off the network, a timer is set. The timer prevents the system from redirecting other incoming trunk calls from redirecting off the network until the timer either expires or is cancelled. The timer prevents calls that were redirected off the network from being routed back to the original telephone number from the off-network destination. Calls that are routed back to the original telephone number in this situation effectively create a loop that seizes trunks until trunks are no longer available.

The system provides the means to perform call classification on an off-network coverage call to determine the disposition of the call. If the off-network call is carried completely over ISDN facilities to the final destination, ISDN trunk signaling is used to monitor the call. If ISDN trunk signaling is not used to monitor the call, a call classifier port is used to cancel the call.

When the system tries to use a call classifier port to classify an off-network coverage call, the system introduces an unavoidable cut-through delay while the call classifier port attempts to identify an answered call. Neither the originating party nor the answering party hears each other during the 1-second or less delay. A call classifier is attached to all off-network coverage calls, that are made over analog facilities or over ISDN facilities, if the call is interworked to non-ISDN facilities on the public network.

When you enable CCRON:

- The system monitors off-network calls and returns the calls to the system if the calls are not answered within the administered time interval. Calls also return to the system if the system detects a call progress tone, such as busy or reorder.
- A simulated bridge appearance (SBA) is put on the called extension, and the green lamp flashes. A user can answer the call at the called extension at any time.

Call Coverage

- When the system uses a call classifier port to classify the call, the system plays local ringback tone to the caller while the system is classifying the off-network call. The system uses the local ringback tone so that the user does not hear what is happening on the public network. As a result, the calling party might not hear the first few syllables that the answering party speaks.
- If any party on the call is on hold when the system routes the call off the network, the call classifier is removed from the call. The call behaves as if CCRON is not enabled.
- While an off-network call is undergoing call classification, any party that is not already on the call cannot bridge onto the call. Also, the originating party cannot release the call, conference anyone else onto the call, or transfer the call to a new party. Once the call is answered at an off-network destination, or the call is returned to the system for further call processing, these restrictions are removed.
- If the last point in a coverage path is an off-network destination and no trunks are available to route the call, the system attempts to again terminate the call to the called extension.
- The system has no control over any redirection of the call that might take place at an off-network destination. However, further coverage treatment is provided if the off-network redirection interval expires before the call is answered at an off-network destination.

Call Coverage changeable coverage paths

With the changeable coverage path capability, users can use a feature access code (FAC) to modify coverage paths.

Extended User Administration of Redirected Calls

The Extended User Administration of Redirected Calls capability allows users to change the lead coverage path or the call forwarding destination from any on-site or off-site location. This capability is also known as remote access. For more information, see the Remote Access feature.

Call coverage criteria

Coverage criteria determine the conditions when the system redirects a call from the called extension to the first position in the coverage path. The Call Coverage feature provides the following coverage criteria:

- **Active**

Redirects calls to coverage immediately when the called extension is active on at least one call appearance. For a telephone with only one appearance or a single-line extension, assign the Busy criterion instead of the Active criterion.

- **Busy**

Redirects calls to coverage when all available call appearances at the called extension are in use.

The system redirects an incoming call, other than a priority call, to coverage only when all call appearances are in use.

A TEG is considered busy if any telephone in the group is active on a call.

Each telephone in a UCD group or a DDC group must be active on at least one call appearance for the system to redirect a call to coverage. If any telephone in the group is idle, the system directs the call to the idle telephone. If no telephone is available, the call can queue, if queuing is provided. If queuing is not provided, the system routes the call to coverage. If the queue is full or all agents are in an AuxWork mode, the system routes the call to coverage. Queued calls remain in the queue for the specified interval.

A call does not cover to a hunt group if no agents are logged in, or if all agents are in AuxWork mode.

- **Don't Answer**

Redirects calls to coverage if the calls are unanswered during a specified interval. A call rings for the specified number of seconds, and then the system redirects the call to coverage.

- **Cover All Calls**

Redirects all incoming calls to coverage. This criterion has precedence over any other previously assigned criterion.

- **Send All Calls/Go to Cover**

Allows users to activate Send All Calls or Go to Cover as overriding coverage criteria. You must assign this redirection criteria before a user can activate Send All Calls or Go to Cover.

- **No Coverage**

Occurs when no coverage criteria are assigned. The system redirects calls to coverage only when the call extension activates Send All Calls, or the caller activate Go to Cover.

Call Coverage

You can combine Active/Don't Answer and Busy/Don't Answer coverage criteria. Other combinations are either not possible or not useful.

You assign redirection criteria separately for internal and external calls. You can link coverage paths so that you can assign Busy/Don't Answer for internal calls, and Active for external calls. Similarly, you can assign Busy/Don't Answer for external calls, and No Coverage for internal calls. When you assign No Coverage for internal calls, internal calls remain directed to the called telephone or the called group.

All calls that are extended by the attendant are treated as external.

VDN in a call coverage path (VICP)

If you assign a vector directory number (VDN) extension as the last point in a call coverage path, you apply call vectoring functionality to the coverage point. The programmable vector that is associated with the VDN provides flexibility in call handling.

You can program a vector that is assigned to the VDN in the coverage path to queue a redirected call to a messaging split for call answer operation, and to allow the caller to leave a message at the called extension. The same VDN can also be used to retrieve messages. You can also vary the vector program by split status or time-of-day to provide different types of coverage.

When a redirected call covers to a VDN, the simulated bridged appearance of the called extension is removed when vector processing starts.

When covered calls or direct calls are connected to AUDIX or to a messaging split through call vectoring, both the original reason for redirection and the called extension must be passed to the adjunct over the Switch Communication Interface (SCI) link.

Use of a VDN as a coverage point provides integration to Centralized Messaging. That is, the distributed communication system (DCS) message that is sent to the remote switch with AUDIX includes the original reason for redirection and the called extension.

Coverage answer groups

You can create coverage answer groups that allow two to eight telephones to ring simultaneously when calls are redirected to the group. Anyone in the answer group can answer the incoming call.

Announcement in a coverage path

In general, do not assign an announcement as a point in a coverage path. When the system redirects a call to an announcement, the system plays the announcement and then drops the call. The system drops the call even if there are additional points in the coverage path.

You might want to use an announcement as the last point in a coverage path. The announcement could inform the caller that there is no one to answer the call and advise the caller to call back at another time. Keep in mind that the system drops the call once the system plays the announcement.

Hunt group in a coverage path

You can assign call coverage for a hunt group. If a hunt group queue is full, a call waits for a specified interval,. The system then directs the call to the coverage path. The call coverage point can be another hunt group. A call does not cover to a hunt group if no agents are logged in, or if all agents are in AuxWork mode.

Subsequent redirection interval

The subsequent redirection interval controls the number of times that a call rings at a coverage point before the call moves to the next coverage point. The number of rings that the interval control depends on the type of coverage point. For example, the number of rings is different at a local coverage point and a remote coverage point.

Notifying users when the calls are redirected

You can administer a setting that notifies users when the users have a capability active that might redirect the calls. For example, if send all calls or call forwarding is active for a user, you can administer a setting to play a special dial tone when the user goes off hook.

Caller response interval

The system uses a single, short tone, called a "redirect" tone, to inform an internal calling party (including incoming trunk calls from DCS and QSIG-VALU trunk groups) that the system is redirecting a call to coverage. The redirect tone is followed by an optional period of silence, called the Caller Response Interval. This interval allows the calling party time to decide whether to:

- Hang up
- Activate Priority Calling (this overrides coverage and re-rings the called party with a special ringing tone)
- Activate Leave Word Calling (LWC)

Call Coverage

- Activate Automatic Callback
- Activate Go to Cover (this cancels the remaining Caller Response Interval and rings the first available coverage point)

Note that each of the above features except Go To Cover is available both locally on a single server, as well as over DCS and QSIG-VALU. The ability for the calling party to hear the redirect tone does not require the optional feature "DCS Call Coverage"; it is part of basic DCS.

Administer the redirect tone on page 2 of the **Tone Generation** screen (**change tone-generation**) by selecting **redirect** in the **Tone Name** field.

Note:

If the majority of the calls on your system go directly to voice mail without first covering to another party, and if features such as Leave Word Calling, Automatic Callback, Go To Cover, and Priority Calling are rarely used, it is advisable to reduce the length of this interval from its default value of 4 seconds, since this timer increases the delay before the voice mail system answers the call.

Consult

When a user answers a coverage call, the user can communicate with the called user without the caller hearing the conversation. This is called *private consultation*. To consult privately with the called user, the covering user presses the Transfer button, and then the Consult button. When the covering user presses the Transfer button, and then the Consult button, the system places the caller on hold. The system then establishes a connection between the called user and the covering user.

The covering user can create a conference call between the called user, the covering user, and the caller.

The covering user can transfer the call back to the called user.

The system maintains a Consult call at a Temporary Bridged Appearance, if a Temporary Bridged Appearance is available. If a Temporary Bridged Appearance is unavailable, the system uses any idle call appearance for the Consult call. If an idle call appearance is unavailable, the system denies the Consult call.

Features that override Call Coverage

Some features override Call Coverage criteria. The system checks the criteria of the overriding features before the system checks the coverage criteria. The following features override Call Coverage:

- **Call Forwarding All Calls**

Call Forwarding All Calls temporarily overrides the redirection criteria if Send All Calls is not active. The system attempts to complete the call at the forwarded-to extension before the system redirects the call to coverage. If the redirection criteria of the called extension are met at the forwarded-to extension, the system redirects the call to the coverage path of the called extension.

- **Go to Cover**

Users can use Go to Cover to send a call directly to coverage, when the users call an internal extension. The internal calling party activates Go to Cover, and can assign Go to Cover to a telephone.

- **Send All Calls**

Users can use Send All Calls to temporarily direct all incoming calls to coverage, regardless of the coverage criteria that are assigned to their extension. The feature also allows users to temporarily remove their telephones from the coverage path of another user.

A user cannot activate Send All Calls, if Send All Calls is not included in the coverage criteria of the extension.

Send All Calls does not affect TEG calls.

- **Send Term**

Send Term is the TEG equivalent of Send All Calls. Since a TEG cannot be in a coverage path, Send Term applies only to a TEG that is called directly.

Conditions that override Call Coverage

Call Coverage redirects calls from the called extension or the called group to alternate answering positions when certain criteria are met. Sometimes calls are sent back to the called extensions or the alternate destination, even though the redirection or overriding criteria are met.

The following list contains the conditions that cause the system to override Call Coverage.

- If no answering positions are available in the coverage path, the call rings at the called telephone, if possible. If the call cannot ring at the called telephone, the calling party receives busy tone. The calling party receives busy tone, even if the Cover All Calls redirection criterion or the Send All Calls overriding criterion is active.

Call Coverage

- If the system redirects a call to a coverage point that is unavailable, the call goes to the next coverage point. The call goes to the next coverage point, regardless of the type of coverage that is administered in the coverage point that is unavailable.
- When UCD and DDC group members are unavailable to answer calls to the group, the calls go to a queue, if queuing is available. The call remains in the queue for the call response interval before the system routes the call according to the coverage path. If no points on the path are available, the call remains in the queue. When neither group queuing nor a coverage point is available, the caller receives a tone or ringback, depending on the type of trunk that carries the call.

If the redirection criterion is Active or Cover All Calls, a called extension can receive a redirection notification signal when the system routes the call to coverage. The redirection notification signal is a short burst of ringing. You can administer the redirection notification signal option for any extensions in your system.

Redirected calls maintain an appearance on the called telephone, if possible. The call appearance status lamp flashes to indicate an incoming call before the system attempts to redirect the call. When the system redirects the call, the status lamp continues to flash. If the system redirects the call to AUDIX, the lamp goes out. If the call appearance is flashing, a user presses the call appearance button to answer the call. If a covering user answers the call, the called user can bridge onto the call. If a covering user answers the call, the status lamp on the telephone of the called user lights steadily.

- Telephone users use Directed Call Pickup to answer calls that ring at another telephone or calls that alert at a coverage point. A call alerts when a call causes a call appearance on the telephone to flash. Directed Call Pickup allows a user to answer an alerting call from any telephone on the system.
- The system routes the following types of calls to the telephone of the called user until the user activates Go to Cover:
 - Priority calls
 - Dial Intercom calls
 - Automatic Intercom calls

The system gives these calls precedence over the redirection criteria, and seizes the call appearance that is usually reserved for outgoing calls, if no other call appearances are available.

Administering Call Coverage

The following steps are part of the administration process for the Call Coverage feature:

- [Creating a coverage path](#)
- [Assigning a coverage path to a user](#)
- [Assigning a Consult button for a user](#)
- [Defining coverage redirected off-network calls](#)
- [Assigning the telephone numbers for the off-network coverage points](#)
- [Administering the coverage path for redirected off-network calls](#)
- [Assigning time-of-day coverage](#)
- [Creating a coverage answer group](#)
- [Assigning Internal Alerting](#)

This section describes:

- Any prerequisites for administering the Call Coverage feature
- The screens that are required to administer the Call Coverage feature
- Complete administration procedures the Call Coverage feature

Prerequisites for administering Call Coverage

You must complete the following actions before you can administer the Call Coverage feature:

- Ensure that feature access codes (FACs) for activating and deactivating Send All are available on your system, if you want users to use an FAC for these capabilities.

To ensure that FACs for activating and deactivating Send All are available on your system:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Codes (FAC)** screen.

2. Click **Next** until you see the **Send All Calls Activation** field ([Figure 78: Feature Access Code \(FAC\) screen](#) on page 388).

Figure 78: Feature Access Code (FAC) screen

change feature-access-codes
Page 3 of 7

FEATURE ACCESS CODE (FAC)

Priority Calling Access Code:

Program Access Code:

Refresh Terminal Parameters Access Code:

Remote Send All Calls Activation:

Self Station Display Access Code:

Send All Calls Activation:

Station Firmware Download Access Code:

Station Lock Activation:

Station Security Code Change Access Code:

Station User Admin of FBI Assign:

Station User Button Ring Control Access Code:

Telephone Activation: #*

Terminal Dial-up Test Access Code:

Terminal Translation Initialization Merge Code:

Transfer to Voice Mail Access Code:

Trunk Answer Any Station Access Code:

User Control Restrict Activation:

Voice Coverage Message Retrieval Access Code:

Voice Principal Message Retrieval Access Code: *80

Deactivation:

Deactivation:

Deactivation:

Remove:

Separation Code:

Deactivation:

3. Type an FAC in the **Send All Calls Activation** field.
 4. Type an FAC in the **Send All Calls Deactivation** field.
- For more information, see the "Feature Access Code" feature.
5. Press **Enter** to save your changes.

Screens for administering Call Coverage

Screen Name	Purpose	Fields
Call Coverage Answer Group	Establish answer groups.	All
Coverage Path	Establish points in the coverage path.	All
Feature Access Code	Assign feature access codes (FACs) to activate or deactivate coverage-related actions.	● Send All Calls Activation ● Send All Calls Deactivation

Screen Name	Purpose	Fields
Hunt Groups	Establish groups of users who answer calls for each other.	All
Remote Call Coverage Table	Assign the telephone numbers of remote coverage points.	All
Station	Define coverage information and button assignments for the called user.	● Coverage Path 1 ● Coverage Path 2 ● Redirect Notification ● Button Assignments for goto-cover and send-calls
	Define button assignments for the user to whom the system redirects the call.	Button assignments for do not disturb (dn-dst), go to cover (goto-cover), and send all calls (send-calls)
	Define the goto-cover coverage point.	Button Assignment for goto-cover
System-Parameters Call Coverage/Call Forwarding	Enable the Call Coverage Off-Net capability.	Coverage of Calls Redirected Off-Net Enabled
Optional Features	Verify that the CCRON capability is allowed in your system.	Cvg of Calls Redirected Off-Net
Terminating Extension Group	Define the group of users who can answer a call that simultaneously alerts at the telephones of the group members.	All
Time of Day Coverage Table	Assign coverage throughout the day and week.	All
Trunk Group: ● APLT ● ISDN-PRI ● Tie	Specify the internal ringing and call coverage used for incoming trunk calls.	Internal Alert?

Creating a coverage path

Prerequisites

You must complete the following actions before you can create a coverage path:

- Verify that the settings on the **System-Parameters Call Coverage/Call Forwarding** screen contain the values that you want for your system. For basic Call Coverage, Avaya recommends that you not change the default settings. However, if you decide to change the default settings, read the field definitions and the field descriptions carefully before you make changes.

To view this screen, type **display system-parameters call coverage/call forwarding**. Press **Enter**.

For a complete description of the **System-Parameters Call Coverage/Call Forwarding** screen, see the *Administrator's Guide for Avaya Communication Manager*.

To create a coverage path:

1. Type **add coverage path next**. Press **Enter**.

The system displays the **Coverage Path** screen ([Figure 79: Coverage path screen](#) on page 390), that shows the next undefined coverage path. The **Coverage Path Number** field is a display-only field. The total number of coverage paths cannot exceed 600.

Figure 79: Coverage path screen

COVERAGE PATH

Coverage Path Number: 14

Next Path Number:

Hunt after Coverage? n

Linkage

COVERAGE CRITERIA

Station/Group Status	Inside Call	Outside Call	
Active?	n	n	
Busy?	y	y	
Don't Answer?	y	y	Number of Rings: 2
All?	n	n	
DND/SAC/Goto Cover?	y	y	

COVERAGE POINTS

Terminate to Coverage Pts. with Bridged Appearances? n

Point1: 4101

Rng: 3

Point2:

Point3:

Point4:

Point5:

Point6:

2. To see the extensions or the groups that use a specific coverage path, type **display coverage sender group n**, where **n** is the coverage path number. For example, you might want to see which extensions use a coverage path before you make changes to the coverage path.
3. In the **Hunt After Coverage?** field, type **y** if you want the system to attempt station hunting from the last coverage point, when the coverage point is a busy station. If you do not want the system to attempt station hunting from the last coverage point when the coverage point is a busy station, leave the default set to **n**.
4. In the **Next Path Number** field, perform one of the following actions:
 - Type a coverage path number in the field if you want the system to redirect if the coverage criteria of the current path does not match the call status. If the coverage criteria of the next path matches the call status, the system uses the coverage criteria to redirect the call, and no other path is searched.
 - If you do not want the system to redirect the call, leave the field blank.

Linkage is a display-only field that shows one or two assigned coverage paths that are linked to the number in the **Next Path Number** field.

5. Find the **Coverage Criteria** area. Note that there is a column for inside calls and a column for outside calls. You can accept the defaults for both columns or only one column. Likewise, you can change the defaults for both columns or only one column. Perform any of the following actions:
 - In the **Active?** fields, perform one of the following actions:
 - Accept the default **n**, if you *do not* want the call to go to coverage if only one call appearance is busy.
 - If you want the call to go to coverage if only one call appearance is busy, type **y**.
 - In the **Busy?** fields, perform one of the following actions:
 - Accept the default **y**, if you want the call to go to coverage if the extension is busy.
 - If you *do not* want the call to go to coverage if the extension is busy, type **n**.
 - In the **Don't Answer?** fields, perform one of the following actions:
 - Accept the default **y**, if you want the call to go to coverage if the number of rings exceeds the number specified in the **Number of Rings** field.
 - If you *do not* want the call to go to coverage if the number of rings exceeds the number specified in the **Number of Rings** field, type **n**.
 - In the **Number of Rings** field, type a number from **1** to **99**. This number indicates the number of times a call rings at a telephone before the system redirects the call to the first coverage point. The default is **2**.

Call Coverage

- In the **All?** fields, perform one of the following actions:
 - Accept the default **y**, if you want the users with this path to answer their own calls.
 - If you *do not* want the users with this path to answer their own calls, type **n**. If you type **n**, the users can never answer their own calls. These user calls always immediately go to coverage.
 - In the **DND/SAC/Goto Cover?** fields, perform one of the following actions:
 - Accept the default **y**, if you want users to activate Send All Calls, temporarily direct all incoming calls to coverage (regardless of the assigned Call Coverage redirection criteria), and to temporarily remove their telephone from the coverage path.
 - If you *do not* want users to activate Send All Calls, temporarily direct all incoming calls to coverage (regardless of the assigned Call Coverage redirection criteria), and to temporarily remove their telephone from the coverage path, type **n**.
 - In the **Terminate to Coverage Pts. with Bridged Appearance?** field, perform one of the following actions:
 - Accept the default **n**, if you want a call to skip the coverage point if the call has already alerted as a bridged call.
 - Type **y** to allow a call to alert as a bridged call and a redirected call.
6. In the **Point** fields, type the extensions, the hunt group number, or the coverage answer group numbers that you want for coverage points. When you type a number and move to the next **Point** field, the system displays the **Rng** field.
- In the **Ring** field, perform one of the following actions:
 - If you want to use the number of rings entered in the **Number of Rings** field, leave the **Rng** field blank.
 - If you *do not* want to use the number of rings entered in the **Number of Rings** field, type the number of rings for this coverage point.

Note:

To enter an extension that is assigned as a vector directory number (**VDN**) as the last point in the coverage path, you must make an administration change. For more information, see *Avaya Communication Manager Contact Center Call Vectoring and Expert Agent Selection (EAS) Guide*.

7. Press **Enter** to save your changes.

Assigning a coverage path to a user

Prerequisites

You must complete the following actions before you can assign a coverage path:

- Administer the coverage path. For the procedure, see [Creating a coverage path](#) on page 390.

To assign a coverage path to a user:

1. Type **change station *n***, where *n* is the extension to which you want to assign a coverage path. Press **Enter**.

The system displays the **Station** screen for the extension that you requested.

2. Click **Next** until you see the **Coverage Path 1** field ([Figure 80: Station screen](#) on page 393).

Figure 80: Station screen

STATION		
Extension: 30019	Lock Messages? n	BCC: 0
Type: 4612	Security Code: *	TN: 1
Port: S04007	Coverage Path 1:	COR: 1
Name: station 30019	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 19	Personalized Ringing Pattern: 1	
	Message Lamp Ext: 30019	
Speakerphone: 2-way	Mute Button Enabled? y	
Display Language: english		
	Media Complex Ext:	
	IP SoftPhone? n	

3. In the **Coverage Path 1** field, type a coverage path number of a previously administered Call Coverage path screen.
4. Perform one of the following actions:
 - In the **Coverage Path 2** field, type a coverage path number of a previously administered Call Coverage path screen, if you want the extension to have an alternative coverage path.
 - If you *do not* want a second coverage path, leave the **Coverage Path 2** field blank.

5. Press **Enter** to save your changes.
6. Click **Next** until you find the **Redirect Notification?** field ([Figure 81: Station screen](#) on page 394).

Figure 81: Station screen

FEATURE OPTIONS	STATION
LWC Reception: spe	Auto Select Any Idle Appearance? n
LWC Activation? y	Coverage Msg Retrieval? y
LWC Log External Calls? n	Auto Answer: none
CDR Privacy? n	Data Restriction? n
Redirect Notification? y	Idle Appearance Preference? n
Per Button Ring Control? n	Restrict Last Appearance? y
Bridged Call Alerting? n	
Active Station Ringing: single	
H.320 Conversion? n	Per Station CPN - Send Calling Number?
Service Link Mode: as-needed	
Multimedia Mode: enhanced	Audible Message Waiting? n
MWI Served User Type:	Display Client Redirection? n
AUDIX Name:	Select Last Used Appearance? n
	Coverage After Forwarding? y
	Multimedia Early Answer? n
	Direct IP-IP Audio Connections? y
Emergency Location Ext: 30019	IP Audio Hairpinning? y

7. In the **Redirect Notification?** field, perform one of the following actions:
 - Accept the default **y** if you want a half ring at the telephone when the system redirects a call to coverage.
 - If you do not want the half ring, type **n**.
8. Press **Enter** to save your changes.
9. Click **Next** until you find the **Button Assignments** area ([Figure 82: Station screen](#) on page 395).

If you want the user to have buttons on the telephone for do not disturb, go to cover, or send all calls, use the **Button Assignments** area to assign the buttons. Note that you can use assign any, all, or none of the buttons, but you can make only one assignment per button.

Figure 82: Station screen

STATION		
SITE DATA		
Room:		Headset? n
Jack:		Speaker? n
Cable:		Mounting: d
Floor:		Cord Length: 0
Building:		Set Color:
ABBREVIATED DIALING		
List1:	List2:	List3:
BUTTON ASSIGNMENTS		
1: call-appr	7:	
2: call-appr	8:	
3: call-appr	9:	
4:	10:dn-dst	
5:	11:goto-cover	
6:	12:send-calls	Ext:

10. Move to the button that you want to use, and perform any of the following actions:

- If you want to assign a do-not-disturb button, type **dn-dst** after a button number.
- If you want to assign a go-to-over button, type **goto-cover** after a button number.
- If you want to assign a send-all-calls button, type **send-calls** after a button number. When you click **Next** or press **Tab** or **Enter**, the system displays the **Ext** field. If you want to send calls to the extension you specified when you typed the **change station** command, leave the **Ext** field blank. If you want to send calls to another extension, type the extension number to which the system redirects calls when the user presses the send-calls button.

11. Press **Enter** to save your changes.

Assigning a Consult button for a user

To assign a Consult button for a user:

1. Type **change station n**, where **n** is the extension of the user to whom you want to assign the Consult capability. Press **Enter**.

The system displays the **Station** screen for the extension that you requested.

2. Click **Next** until you see the **Button Assignments** area ([Figure 82: Station screen](#) on page 395).
3. In the **Button Assignments** area, type **consult** next to the button that you want the user to use for Consult.
4. Press **Enter** to save your changes.

Defining coverage redirected off-network calls

To define coverage for calls that the system redirects to external, off- network calls, you must complete the following procedures.

- Assigning the telephone number for the external coverage point
- Administering the coverage path for calls redirected to external numbers

Prerequisites

You must complete the following actions before you define coverage for calls that the system redirect off the network:

- On the **Optional Features** screen, verify that the **Cvg of Calls Redirected Off-Net** field is set to **y**. To view this screen, type **display system-parameters customer-options**. Press **Enter**.

If the **Cvg of Calls Redirected Off-Net** field is set to **n**, your system is not enabled for the Call Coverage Off Network capability. Contact your Avaya representative for assistance before continuing with this procedure.

Assigning the telephone numbers for the off-network coverage points

To assign the telephone numbers for the off-network coverage points:

1. Type **change coverage remote *n***, where *n* is the number of the Remote Call Coverage table that you want to change. Valid numbers are between 1 and 10. Press **Enter**.

The system displays the **Remote Call Coverage Table** ([Figure 83: Remote Call Coverage Table screen](#) on page 397).

Figure 83: Remote Call Coverage Table screen

REMOTE CALL COVERAGE TABLE		
01: 93035381000_____	16: _____	31: _____
02: _____	17: _____	32: _____
03: _____	18: _____	33: _____
04: _____	19: _____	34: _____
05: _____	20: _____	35: _____
06: _____	21: _____	36: _____
07: _____	22: _____	37: _____
08: _____	23: _____	38: _____
09: _____	24: _____	39: _____
10: _____	25: _____	40: _____
11: _____	26: _____	41: _____
12: _____	27: _____	42: _____
13: _____	28: _____	43: _____
14: _____	29: _____	44: _____
15: _____	30: _____	45: _____

2. Type the telephone number (maximum of 16 digits) of the remote coverage point in one of the remote call coverage table fields.

Note:

If you need a digit to get outside your network, add the digit before the external number. In this example, the system requires a **9** to place outside calls.

The sequentially numbered fields in which you assign telephone numbers are called *remote code numbers*. You need this number to complete the procedure for defining coverage for calls redirected to external numbers. In this example the remote code number is **r1**. The letter **r** indicates remote, and **1** refers to the number 01 where you typed the telephone number on the screen. If you type a telephone number at number 15 on the screen, the remote code number for that entry is **r15**.

3. Press **Enter** to save your changes.

Administering the coverage path for redirected off-network calls

To administer the coverage path for redirected off-network calls:

1. Type **change coverage path *n***, where *n* is the number that is assigned to the coverage path that you want to administer for off-network coverage. Press **Enter**.

The system displays the **Coverage Path** screen ([Figure 84: Coverage Path screen](#) on page 398).

Figure 84: Coverage Path screen

COVERAGE PATH

Coverage Path Number: 1

Next Path Number: Hunt after Coverage? n
Linkage

COVERAGE CRITERIA

Station/Group Status	Inside Call	Outside Call	
Active?	n	n	
Busy?	y	y	
Don't Answer?	y	y	Number of Rings: 2
All?	n	n	
DND/SAC/Goto Cover?	y	y	

COVERAGE POINTS

Terminate to Coverage Pts. with Bridged Appearances? n

Point1: 4101 Rng: 3 Point2: r1 Rng: Point3: h77 Rng:
Point4: Point5: Point6:

Note:

To enter an extension that is assigned as a vector directory number (VDN) as the last point in the coverage path, you must make an administration change. For more information, see the *Avaya Communication Manager Contact Center Call Vectoring and Expert Agent Selection (EAS) Guide*.

2. In the **Coverage Points** area, type the remote code number. The **Point** field that you select determines where the number is used in the coverage path. In this example:
 - **r1** is coverage point 2.
 - A call first covers to extension 4101.
 - If extension 4101 is unavailable or busy, the system redirects the call to the off-network number that is assigned to remote code number **r1** in the Remote Call Coverage table.

When you move to the next **Point** field, the system displays the **Rng** field. If you want to use the number of rings displayed in the **Number of Rings** field on this screen, leave the **Rng** field blank.

If you *do not* want to use the number of rings displayed in the **Number of Rings** field on this screen, type the number of rings for this coverage point.

3. Press **Enter** to save your changes.

Assigning time-of-day coverage

To assign time-of-day coverage for a user, you must complete the following procedures:

- Setting up a time-of-day coverage plan
- Assigning a time-of-day coverage plan to a the extension of the user

Prerequisites

You must complete the following actions before you can define a time-of-day coverage path:

- Administering the coverage path
- Setting up a time-of-day coverage plan

To administer the coverage path, see [Creating a coverage path](#) on page 390.

To set up a time-of-day coverage plan:

1. Type **add coverage time-of-day next**. Press **Enter**.

The system displays the next **Time of Day Coverage Table** screen ([Figure 85: Time of Day Coverage Table](#) on page 399). If this is the first Time of Day Coverage plan in your system, the table number is 1. This is the table number that you assign to a user extension.

Figure 85: Time of Day Coverage Table

TIME OF DAY COVERAGE TABLE: 1										
	Act Time	Cvg Path	Act Time	Cvg Path	Act Time	Cvg Path	Act Time	Cvg Path	Act Time	Cvg Path
Sun	0:00	3	:		:		:		:	
Mon	0:00	3	08:00	1	17:30	2	20:00	3	:	
Tue	0:00	3	08:00	1	17:30	2	20:00	3	:	
Wed	0:00	3	08:00	1	17:30	2	20:00	3	:	
Thu	0:00	3	08:00	1	17:30	2	20:00	3	:	
Fri	0:00	3	08:00	1	17:30	2	20:00	3	:	
Sat	0:00	3	08:00	1	17:30	2	20:00	3	:	

Call Coverage

2. To define your coverage plan, type the time period and the path number for each day of the week that you want to cover.

Enter the time in a 24-hour format, from the earliest to the latest. For this example, assume that coverage path 1 goes to the co-worker, coverage path 2 goes to the home, and coverage path 3 goes to voice mail. In this example, the user has the following coverage:

- During the work day from 08:00 to 05:29, the system uses coverage path 1 to route calls to a co-worker.
- In the evening from 05:30 to 19:59, the system uses coverage path 2 to route calls to home.
- At night from 20:00 to 7:59 the following morning, the system uses coverage path 3 to route calls to voice mail.

Define the path for the time period from 00:01 to 23:59 that you want coverage to operate. If you do not assign a coverage path to a specific time interval, no coverage exists from that time until the next coverage path activation time.

3. Press **Enter** to save your changes.

To assign the time-of-day coverage to a user.

1. Type **change station *n***, where *n* is the user telephone extension number. Press **Enter**.

The system displays the **Station** screen ([Figure 86: Station screen](#) on page 400).

Figure 86: Station screen

STATION		
Extension: 2054	Lock Messages? n	BCC: 0
Type: 7406D	Security Code: 4196__	TN: 1
Port: _____	Coverage Path 1: t1	COR: 1
Name: _____	Coverage Path 2: ____	COS: 1
	Hunt-to-Station: _____	
STATION OPTIONS		
Data Module? n	Personalized Ringing Pattern: 1	
Display Module? n	Message Lamp Ext: _____	
	MM Complex Data Ext: _____	

2. In the **Coverage Path 1** field, type **t** plus the number of the Time of Day Coverage Table. In this example, the coverage path is **t1**. The system redirects calls to this extension as defined in the Time of Day Coverage Table number 1.
3. Press **Enter** to save your changes.

Creating a coverage answer group

To add a coverage answer group:

1. Type **add coverage answer-group next**. Press **Enter**.

The system displays the next **Coverage Answer Group** screen ([Figure 87: Coverage Answer Group](#) on page 401).

Figure 87: Coverage Answer Group

COVERAGE ANSWER GROUP			
Group Number: ____			
Group Name: COVERAGE_GROUP_			
GROUP MEMBER ASSIGNMENTS			
Ext	Name (first 26 characters)	Ext	Name (first 26 characters)
1: _____	_____	5: _____	_____
2: _____	_____	6: _____	_____
3: _____	_____	7: _____	_____
4: _____	_____	8: _____	_____

2. In the **Group Name** field, type a name to identify the coverage group. The default name is **Coverage Group**.
3. In the **Ext** column, type the extension of each group member that you want to include in this group. You can type only one extension in each **Ext** field.
4. Press **Enter** to save your new group list.

Note:

The system automatically completes the **Name** field when you press **Enter**.

Assigning Internal Alerting

To assign internal alerting for APLT, ISDN-PRI, or Tie trunks:

1. Type **change trunk-group *n***, where *n* is the number of the trunk-group for which you want to administer Remote Access.

The system displays the **Trunk Group** screen.

2. Click **Next** until you see the **Internal Alert?** field ([Figure 88: Trunk Group screen](#) on page 402).

Figure 88: Trunk Group screen

change trunk-group 1
Page 2 of x

TRUNK FEATURES

ACA Assignment? n	Measured: none__	Wideband Support? n
Long Holding Time(hours: _	Internal Alert? y	Maintenance Tests? y
Short Holding Time (sec): _	Data Restriction? n	NCA-TSC Trunk Member: 7
Short Holding Threshold: __	Send Name: n	Send Calling Number: n
Used for DCS? n	Hop Dgt: _	Send Connected Number: n
Suppress # Outpulsing? n	Numbering Format: ____	DCS Signaling: ____
Outgoing Channel ID Encoding: ____		
Charge Conversion: 1__	UUI IE Treatment: shared	
Decimal Point: none__	Maximum Size of UUI IE Contents: 128	
Currency Symbol: ____		
Charge Type: units__	Send Called/Busy/Connected Number: n	
	Modify Tandem Calling Number?: n	
Send UCID? n	BSR Reply-best DISC Cause Value: 31	
Send Codeset 6/7 LAI IE? y		
Path Replacement with Retention? n		
Path Replacement Method: better-route		
SBS? y		

3. In the **Internal Alert?** field, perform one of the following actions:
 - If you want internal ringing and coverage for your system, type **y**.
 - If you do not want internal ringing and coverage for your system, type **n**.
4. Type **Enter** to save your changes.

Reports for Call Coverage

The following reports provide information about the Call Coverage feature:

- The Coverage Path Measurement report shows coverage activity about the coverage paths.
- The Principal Coverage Measurement report shows coverage activity about the called extensions.
- The Call Detail Recording (CDR) report shows the outgoing trunk calls.

For detailed information on these reports and the associated commands, , or see *Reports for Avaya Communication Manager*.

Considerations for Call Coverage

This section provides information about how the Call Coverage feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Call Coverage under all circumstances.

- Tie-trunk calls

Incoming tie-trunk calls can be administered as either internal calls or external calls, and are redirected to Call Coverage accordingly.

Interactions for Call Coverage

This section provides information about how the Call Coverage feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Call Coverage in any feature configuration.

- Agent Call Handling

Do not assign Cover All Calls to agents who have the Automatic Answer option enabled. Any Automatic Call Distribution (ACD) or any non-ACD call to an extension on which Automatic Answer is enabled, and for which the coverage redirection criteria is administered as Cover All Calls, does not go to coverage. Instead, the call goes to the called extension. Cover All Calls redirection criteria do not affect incoming calls when a user is in the Auto-Answer mode.

- Answer Detection

Coverage of Calls Redirected Off-Net (CCRON) competes with Answer Detection for call classifier ports.

- Automatic Callback and Ringback Queuing

The system does not redirect callback calls to coverage. The caller can activate Automatic Callback when the user hears a ringing, redirection notification signal or a busy signal.

- Automatic Intercom, Dial Intercom, and Priority Calling

The system does not redirect calls that use these features to coverage, unless the caller presses the Go to Cover button.

Call Coverage

- Bridged Call Appearance

Coverage criteria for bridged call appearances are based entirely on the criteria of the primary extension that is associated with the bridged call appearance.

If a telephone user activates Send All Calls on the primary extension, incoming calls still ring bridged call appearances of that extension, as long as a simulated bridged appearance of the call is maintained at the primary extension.

While an off-network call is undergoing call classification, the system blocks a user from bridging onto the call.

- Call Detail Recording (CDR)

When the Coverage of Calls Redirected Off-Net field (CCRON) is enabled, the system generates a CDR record only after the call is answered off the network. The dialed number in the record is the off-network number to which the call covers. The calling number is the station that is covered to the off-network destination.

- Call Forwarding

Call Forwarding temporarily overrides the redirection criteria. When the redirection criteria are met at the forwarded-to extension, the system redirects the call to the coverage path of the forwarding extension.

The system allows calls that are forwarded off the network to be tracked for busy or no-answer conditions, and to return for further call-coverage processing under those conditions. However, if the called extension does not have a coverage path, the system does not track the call and the call is left at the off-network destination, regardless of whether the call is answered or busy.

If both Send All Calls and Call Forwarding are active, the system immediately redirects most calls to that extension to coverage. However, the system forwards priority calls to the designated forwarding destination.

If Cover All Calls is part of the coverage redirection criteria, and if Call Forwarding is active at an extension, the system immediately directs most calls to that extension to coverage. However, the system forwards priority calls to the designated forwarding destination.

Activation of Send All Calls at the forwarded-to extension does not affect calls that are forwarded to that extension.

- Call Pickup

Any call that the system directs to a covering user who is a member of a call pickup group can be answered by other members of the group.

- Call Prompting

Coverage of Calls Redirected Off-Net (CCRON) competes with the Call Prompting feature for call classifier ports.

- CallVisor ASAI

Coverage of Calls Redirected Off-Net (CCRON) competes with CallVisor for call classifier ports.

- Centralized Attendant Service (CAS)

If an incoming CAS call is directed to a hunt group, the call is not redirected to the coverage path of the hunt group.

- Class of Restriction (COR) and Controlled Restrictions

Users who might usually be restricted from receiving calls can receive calls that the system directs to them from the Call Coverage feature.

- Conference

The system blocks users from conferencing another party onto a call that was routed off the network while the call is undergoing call classification. If any party on the call is on hold, the system routes the call off the network, but the system does not attempt to classify the call. The system routes the call off the network, even when the Coverage of Calls Redirected Off-Net field (CCRON) is enabled.

A call that covers to a vector directory number (VDN) cannot be added to a conference while the call is in vector processing.

- Direct Department Calling (DDC), Uniform Call Distribution (UCD), and Automatic Call Distribution (ACD)

If a user with an Auxiliary Work button activates or deactivates Send All Calls, the Auxiliary Work function that is associated with the DDC feature or the UCD feature is activated or deactivated simultaneously.

If a user has no Auxiliary Work button, activating or deactivating Send All Calls makes the user unavailable or available, respectively, for **DDC and UCD** calls, but Auxiliary Work is not activated or deactivated. The user can use a feature access code (FAC) to activate or deactivate Auxiliary Work mode.

Activating or deactivating the Auxiliary Work function does not activate or deactivate Send All Calls.

- Direct Outward Dialing (DOD)

Coverage of Calls Redirected Off-Net (CCRON) competes with DOD for call classifier ports when DOD uses MFC signaling. The Call Classifier - Detector port provides the MFC tones. Non-MFC DOD calls do not need the Call Classifier - Detector port for this purpose, because Non-MFC DOD calls do not need MFC tones.

- Global Call Classification

To classify tones in countries that do not use the USA tone plan, time cadences and frequencies must be administered so that time cadences and frequencies can be downloaded to the call classification circuit packs. You need a Call Classifier-Detector or Tone Clock with Call Classifier-Tone Detector circuit pack.

Call Coverage

- Hold

If a covering user puts a call on hold, and the called user picks up on the call, the coverage appearance might be dropped, depending on administration.

If any party is on hold when the system routes a coverage call off the network, that call does not undergo call classification. In this case, the call does not undergo call classification, even when the Coverage of Calls Redirected Off-Net (CCRON) field is enabled on your system.

- Internal Automatic Answer (IAA)

If call coverage redirection criteria redirects an internal call to another telephone, that call is eligible for IAA at that telephone.

IAA does not apply to calls to the original called extension when the:

- User at the called extension has Do Not Disturb, Send All Calls, or Cover All Calls active
- Calling user selects Go To Cover before the user places the call

Calls that are directed to a Coverage Answering Group cannot use IAA.

- ISDN End-to-End Calls

When ISDN facilities carry an off-network coverage call end-to-end, call classification is accomplished through the ISDN protocol, rather than by a call classifier port.

- Leave Word Calling (LWC)

Call Coverage can be used with or without LWC. However, the two features complement each other. When a covering user activates LWC during a coverage call, a message is left for the called user to call the covering user. When a covering user activates Coverage Callback during a coverage call, a message is left for the called user to call the internal caller.

- Tenant Partitioning

The Tenant Partitioning feature might not block coverage calls across tenant partitions.

Troubleshooting Call Coverage

This section lists the known or common problems that users might experience with the Call Forwarding feature:

Problem	Possible cause	Action
The system redirects some unanswered calls to the Attendant console, instead of the coverage path.	A call that is transferred internally, and not answered within the interval that is specified in the Return Call Timeout of the Console Parameters screen, redirects to the attendant console.	Verify that the called extension has a coverage path by typing the status station command. If the active coverage option field on the Station screen has a coverage path, increase the number of seconds in the Return Call Timeout interval on the Console Parameters screen. Increase the interval so that it exceeds the total time that a call rings on the called extension and all points in the coverage path of the called extension.
The system does not redirect to the correct destination in the coverage path of the called extension.	The called extension is forwarded to another destination.	Type the status station command to determine if either Call Forwarding or Send All Calls is active at the called extension. If the CF Destination Ext field contains a forwarded-to extension, cancel Call Forwarding for the called extension. If the SAC Activated? field is set to yes , cancel Send All Calls for the called extension.
	The coverage path that you assigned to the called extension is incorrect.	Type the display station command to verify that you assigned the correct coverage path to the called extension. Change the coverage path if the coverage path is not the coverage path that you want for the called extension.

Call Coverage

Problem	Possible cause	Action
The system does not redirect to the coverage path of the called extension.	The points in the coverage path are unavailable.	Run the status station command to determine if either Call Forwarding or Send All Calls is active at the called extension. If the CF Destination Ext field contains a forwarded-to extension, cancel Call Forwarding for the called extension. If the SAC Activated? field is set to yes, cancel Send All Calls for the called extension. If the coverage path of the called extension contains a hunt group, ensure that the length of the queue is sufficient to contain all the calls that the system redirects to the hunt group.

Call Detail Recording

Use the Call Detail Recording (CDR) feature to record information on incoming, outgoing, and tandem calls for each trunk group that you administer for CDR, including auxiliary trunks. The system records information on each trunk-group call and each station-to-station call.

Detailed description of Call Detail Recording

Use the Call Detail Recording (CDR) feature to record information on incoming, outgoing, and tandem calls for each trunk group that you administer for CDR, including auxiliary trunks. The system records information on each trunk-group call and each station-to-station call.

You can also request that CDR record information on:

- Temporary signaling connections (TSCs) that involve trunks
- Calls that use loudspeaker paging
- Calls to which account code dialing or a feature access code (FAC) apply
- Ineffective call attempts

If you request that the system record information in ineffective call attempts, you greatly increase the number of calls that the system records. However, the request to record ineffective call attempts can also help you to increase security, because the system records call attempts that are blocked because of insufficient calling privileges.

Information on ineffective call attempts can also show you that your users cannot make calls because all the trunks on your system are busy.

- The audio service link calls that the switch uses for IP softphones that are set up as telecommuter IP softphones.

An IP softphone can use one audio service link to make many short calls. The system shows these many short calls as one long call on the CDR reports.

Some call accounting systems do not support all the information that CDR offers. See your Avaya representative for information on how CDR operates on your system.

Monitoring call detail records

You can monitor call detail records daily for unusual calling patterns, long calls, international calls, calls that are outside the normal business hours, and other indications of toll fraud. Call accounting systems are available that automatically monitor CDR output for fraudulent calling patterns.

Answer Detection

Avaya Communication Manager provides three methods to determine whether the called party answers a call:

- [Call classification](#)
- [Network answer supervision](#)
- [Answer supervision by timeout](#)

Call classification

A call-classifier circuit pack detects tones and voice-frequency signals on the line to determine whether a call is answered. This method is fairly accurate. The calls that are answered are usually classified correctly. But the following exceptions exist:

- Miscellaneous tones, such as confirmation tones, might be classified as answers.
- Loud background noise might activate answer detection, and cause the a call to be classified as answered, even if the call is not connected.
- Some calls that are answered might be incorrectly classified as fast busy signals.
- Call classifier circuit packs do not recognize Special Information Tones (SIT) as answers.

The system generates a call record for any call that is classified as answered, whether the classification is correct or not. If Call Classification incorrectly classifies a call as answered, and the call is subsequently answered, the call duration that CDR reports includes both the time between the incorrect classification and the actual answer, and the remaining duration of the call.

Network answer supervision

The central office (CO) sends a signal to the originating switch when the far end answers a call. If a call travels over a private network before the call reaches the CO, the signal is transmitted back over the private network to the originating switch. This method is extremely accurate, but network answer supervision is unavailable over most loop-start trunks. For example, network answer supervision is not available over CO, foreign exchange (FX), and Wide Area Telecommunications Service (WATS) trunks in the US.

Answer supervision by timeout

If the caller is off-hook when the answer timer expires, the system assumes that the outgoing call is answered. Answer supervision by timeout is the least accurate method to detect that a call is answered. Calls that are shorter than the timer duration do not generate call records. Calls that ring for a long time produce call records, even if the calls are unanswered.

Network answer supervision overrides answer supervision by timeout.

Call Detail Recording (CDR) supports the following capabilities:

- [Account Code Dialing](#)
- [Forced Entry of Account Codes](#)
- [Call Splitting](#)
- [Intraswitch CDR](#)
- [CDR Privacy](#)

Account Code Dialing

Use the Account Code Dialing capability to associate a call with an account number. A user enters a FAC for Account Code Dialing before a user dials a telephone number. You can specify that the use of the FAC is mandatory or optional for the user. When a user dials a telephone number and the FAC, the system records the:

- Telephone number
- Account code
- Trunk Access Code (TAC), or the Automatic Route Selection (ARS) access code

The system does not record the FAC for Account Code Dialing.

Forced Entry of Account Codes

If you require that users enter an account code FAC, you have several options. You can require that:

- All users enter an account code for all calls
- All users enter an account code for calls that are made on a specific trunk.
- All users enter an account code for calls that are made to a specific telephone number
- A specific user enters an account for all calls that are made by that user

Call Detail Recording

If you use the Forced Entry of Account Codes (FEAC) capability, the system rejects any call that a user makes without an account code FAC, if the call requires an account code. When the system rejects the call, the user hears intercept tone.

Avaya recommends that you use the FEAC capability to make your system more secure.

Note:

The system does not verify account codes. The system only verifies that the user enters the number of digits that you specify. If you want the system to verify account codes, you need to use the Authorization Codes feature. For more information, see the "Authorization Codes" feature.

The following types of calls never require an account code:

- Calls that an attendant makes
- Calls that an attendant makes to determine if a trunk is busy
- Calls that a user makes to determine if a trunk is busy
- Distributed Communications System (DCS) calls, unless the Class of Restriction (COR) of the trunk requires an account code
- Personal Central Office Line (PCOL) calls
- Remote access calls that do not have barrier codes
- Trunk-to-trunk calls

Call Splitting

You use the Call Splitting capability to record information about the following calls that:

- Are part of a conference
- Transferred
- Involve an attendant

The system records a separate CDR record for each participant on any of these types of calls.

You can request call splitting information for both incoming and outgoing trunks. You can also request call splitting information for an attendant call on an incoming trunk, and for an attendant call on an outgoing trunk

Incoming trunk call splitting

If you request incoming trunk call splitting (ITCS) information for a call, the system creates a CDR record when a user uses the Conference feature or the Transfer feature. The CDR record includes the:

- Duration of the user participation
- Incoming TAC
- Number that the caller dialed
- Condition code

When a user drops a call, or successfully transfers a call, the system records the action of the user. The duration of a transferred call starts when the transferring party presses the transfer button for the second time.

When a user uses the Conference feature for an incoming trunk call, the system creates a CDR record when the user adds a participant to the conference call. The CDR record of these calls shows the duration of the call for each user who participated. The CDR records of a conference call contain duration information that overlaps.

The system creates an incoming trunk call record when:

- You requested ITCS for your system.
- A user adds another user to a conference call. or a user transfers another user
- The user who is added to the conference call, or who is transferred, is on a local extension that has the Intraswitch CDR option activated.

The system does not create an Intraswitch CDR record.

Examples

ITCS and a conference call - The following example shows the interaction between the participants of a conference call and the system, when ITCS is active, and all participants are on the same server:

- Caller A, at extension 123, makes an incoming trunk call to participant B, at extension 565-7890.
- Caller A and participant B talk for 2 minutes.
- Participant B adds participant C, at extension 5-4321, to the conference call.
- Participant B adds participant D, at extension 5-9876, to the conference call.
- Caller A, participant B, participant C, and participant D talk for an additional 8 minutes.
- Participant B drops the call.
- The system creates a CDR record for call segment A-B.
- Caller A, participant C, and participant D talk for an additional 5 minutes.

- Caller A, participant C, and participant D drop the call.
- The system creates two additional CDR records, one for call segment A-C and one for call segment A to D. Note that each CDR record shows the incoming trunk ID as the calling number, 123.

[Table 11: ITCS conference call on the same server](#) on page 414 shows the CDR information that changes when ITCS is active during a conference call. The call durations are approximate.

Table 11: ITCS conference call on the same server

Call segment	Call duration	Condition code	Access code used	Calling number	Dialed number
A-B	0:10:0	C	-	123	5657890
A-C	0:13:0	C	-	123	54321
A-D	0:13:0	C	-	123	59876

ITCS and a call transfer on the same server - The following example shows the interaction between the participants of a transfer call and the system when ITCS is active, and all participants are on the same server:

- Caller A, at extension 123, calls participant B, at extension 565-7890.
- Caller A and participant B talk for 1 minute.
- Participant B transfers the call to participant C, at extension 5-4321.
- The system creates a CDR record for call segment A-B.
- Caller A and participant B talk for an additional 5 minutes.
- Caller A and participant B drop the call.
- The system creates a CDR record for call segment A-C.

[Table 12: ITCS transfer on the same server](#) on page 414 shows the CDR information this scenario. The call durations are approximate.

Table 12: ITCS transfer on the same server

Call segment	Call duration	Condition code	Access code used	Calling number	Dialed number
A-B	0:01:0	9	-	123	5657890
A-C	0:05:0	9	-	123	54321

ITCS and a call transfer to the public network - The following example shows the interaction between the participants of a transfer call and the system when ITCS is active, and all the participants are *not* on the same server:

- Caller A, at extension 123 on server, calls participant B, at extension 565-7890.
Both caller A and participant B are on the same server.
- Caller A and participant B talk for 1 minute.
- Participant B transfers the call to participant C, at telephone number 566-5555.
Participant C is on the public network.
- Participant B and participant C talk for an additional 4 minutes.
- Participant B and participant C drop the call.
- The system creates two CDR records, one for call segment A-B, and one for call segment A-C.

[Table 13: ITCS transfer to an outgoing trunk](#) on page 415 shows the CDR information that changes when ITCS is active during a call transfer. The call durations are approximate. Note that the duration of the original incoming trunk call, call segment A to B, includes the duration of the conversation between caller A and participant B, and the duration of the conversation between participant B and participant C.

Table 13: ITCS transfer to an outgoing trunk

Call segment	Call duration	Condition code	Access code used	Calling number	Dialed number
A-B	0:05:0	9	-	123	5657890
A-C	0:04:0	9	345	123	5665555

Outgoing trunk call splitting

If you request outgoing trunk call splitting (OTCS), the system creates CDR records of transferred outgoing calls in the same manner as for ITCS. See [Table 12: ITCS transfer on the same server](#) on page 414 and [Table 13: ITCS transfer to an outgoing trunk](#) on page 415 for a description of the CDR information on transfer calls when ITCS is active.

If a user requests OTCS and originates a conference call, the call duration for that user starts when the user originates the call. The call duration for that user ends when the user drops the call. When that user drops the call, the system creates a second CDR record for the users who remain on the conference call.

Examples

OTCS and a conference call on the public network - The following example shows the interaction between the participants of a transfer call and the system, when OTCS is active, and all the participants are *not* on the same server:

- Caller A, at extension 123 on server, calls participant B, at telephone number 777-7890.
Participant B is on the public network.
- Caller A and participant B talk for 5 minutes
- Caller A adds participant C to the conference call.
- Participant B transfers the call to participant C, at telephone number 777-5678.
Participant C is on the public network.
- Caller A, participant B, and participant C talk for an additional 5 minutes.
- Caller A, participant B, and participant C drop the call.
- The system creates two CDR records, one for call segment A-B, and one for call segment A-C.

[Table 14: OTCS conference call](#) on page 416 shows the CDR information that changes when OTCS is active during a conference call. The call durations are approximate.

Table 14: OTCS conference call

Call segment	Call duration	Condition code	Access code used	Calling number	Dialed number
A-B	0:10:0	C	345	57890	7771234
A-C	0:05:0	C	345	57890	7775678

OTCS and a call transfer to a public network - The following example shows the interaction between the participants of a transfer call and the system, when OTCS is active, and all the participants are *not* on the same server:

- Caller A, at extension 51234 on server, calls participant B, at telephone number 777-7890.
Participant B is on the public network.
- Caller A and participant B talk for 5 minutes.
- Caller A transfers the call participant C, at extension 54444.
Caller A and participant C are on the same server.
- The system creates two CDR records, one for call segment A-B, and one for call segment C-B.

[Table 15: OTCS call transfer](#) on page 417 shows the CDR information that changes when OTCS is active during a call transfer. The call durations are approximate.

Table 15: OTCS call transfer

Call segment	Call duration	Condition code	Access code used	Calling number	Dialed number
A-B	0:01:0	A	345	51234	5659999
C-B	0:05:0	A	345	54444	5659999

ITCS, OTCS, and attendant call recording

If you request either ITCS or OTCS, you have the option for the system to generate a CDR record of the attendant portion for calls that are transferred.

If you request either ITCS or OTCS, the system always creates a separate CDR record of the attendant portion of a conference call.

Examples

An example of an attendant incoming trunk call transfer - The following example shows the interaction between the participants of a transfer call and the system, when either ITCS or OTCS is active:

- Caller A, at TAC 123, calls the attendant, and asks the attendant to transfer the call to participant B, at extension 5-888

Caller A is on the public network.

The attendant and participant B are on the same server.

- Caller A and the attendant talk for 1 minute.
- Caller A and participant B, talk for 5 minutes.
- The system creates two CDR records, one for call segment A-Attd, and one for call segment A-B.

[Table 16: Attendant transfer of an incoming trunk call](#) on page 418 shows the CDR information that changes when ITCS or OTCS is active when an attendant transfers an incoming public-network call.

Table 16: Attendant transfer of an incoming trunk call

Call Segment	Call Duration	Condition code	Access code used	Calling number	Dialed number
A-Attd	0:01:0	9	-	123	Attd
A-B	0:05:0	9	-	123	58888

An example of an attendant call transfer on a public network trunk - The following example shows the interaction between the participants of a transfer call and the system, when either ITCS or OTCS is active, and an attendant transfers a call to the public network:

- The attendant dials participant A at extension 5-9999.
- The attendant and participant A talk for 1 minute.
- The attendant transfers the call to participant B at telephone number 444-5678.
- The participant B and participant B, talk for 5 minutes.
- The system creates two CDR records, one for call segment A-Attd, and one for call segment A-B.

[Table 17: Attendant call transfer on a public network trunk](#) on page 418 shows the CDR information that changes when ITCS or OTCS is active when an attendant transfers a call to an outgoing public network trunk.

Table 17: Attendant call transfer on a public network trunk

Call segment	Call duration	Condition code	Access code used	Calling number	Dialed number
Attd-B	0:01:0	A	345	Attd	4445678
A-B	0:05:0	A	345	59999	4445678

Intraswitch CDR

The system uses the Intraswitch CDR capability to create CDR records for calls to and from users on the same local server. Before the system can create an intraswitch CDR record, you must assign the Intraswitch CDR capability for one of the extensions.

If you enable ITCS for your system, and you assign the Intraswitch CDR capability for an extension, the system-wide ITCS overrides the Intraswitch CDR for the extension. When the system-wide ITCS overrides the Intraswitch CDR for the extension, the system generates trunk call records for an incoming trunk call to the extension. The system does not generate Intraswitch CDR records for an incoming trunk call to the extension.

The records that the system creates for the Intraswitch CDR capability are similar to the records that the system creates for other CDR records. However, some of the information differs. For example, the system does not provide TACs or circuit IDs for intraswitch calls, because that information is unnecessary.

Some calls might appear to be intraswitch CDR calls, but are actually trunk calls. For example, the system creates a trunk CDR record for an internal call to an extension that is forwarded to an outgoing trunk, even if you assigned the Intraswitch CDR capability for either station.

You can assign the Intraswitch CDR capability to:

- A Terminating Extension Group (TEG)
- A station
- A data module
- A Vector Directory Number (VDN)
- A Primary Rate Interface (PRI)
- An endpoint
- An access endpoint
- A hunt group

The number that appears in the Dialed Number field depends on whether you administered the CDR System Parameters to record hunt group/member or VDN information. You *cannot* assign the Intraswitch CDR capability to an attendant console or a CallVisor Adjunct-Switch Application Interface (ASAI) station.

Note that the system generates a CDR record for a call only if the user is the caller or the recipient of the call, and has the Intraswitch CDR capability active for the extension of the user. For example, if the user participates in the call as the result of Call Pickup or Call Forwarding, the system does not create a CDR record.

CDR Privacy

Use the CDR Privacy capability to maintain the privacy of the caller. The system replaces some of the digits that the user dials with blanks. The system records the call information, including the account number that the user enters. But the CDR information does not show the telephone number that the user dials.

You can assign the CDR Privacy capability individually to each of your users. You decide the number of digits that the system replaces with blanks. The system then uses this information for all calls of the users to whom you assign the CDR Privacy capability.

The CDR Privacy capability does not apply under the following conditions:

- Some countries require that the system replace a specific number of the digits that the user dials with blanks. If a country requires that the system replace a specific number of the digits that the user dials with blanks, the requirement applies to all calls.
- When an adjunct-originated call is made on behalf of a hunt group, and the **Calls to Hunt Group - Record** field on the **CDR System Parameter** screen is set to **group-ext**, CDR Privacy does not apply. However, CDR Privacy does apply if the **Hunt Group - Record** field is set to member extension.
- When an adjunct-originated call is made on behalf of a hunt group and the **Calls to Hunt Group - Record** field on the **CDR System Parameter** screen is set to **member-ext**, then CDR Privacy applies.
- Some report processors do not support the CDR Privacy capability.

CDR output

If your system uses two CDR output formats, one format is administered as the primary format; the other is administered as the secondary format. The secondary format is usually used for a local storage format call detail recording utility (CDRU) to provide CDR data to the Network Control Operations Support Center (NCOSS) to assess network performance or help to find network problems.

The primary and secondary CDR output device ports are independent of each other. Each port works even if the link to the other port is not operating. If a link to a CDR output device port is not operating for more than 1 minute, the system might lose some data. However, the system stores the most recent CDR records for the primary CDR output device, even when some records are lost. The system stores the most recent 500 CDR records for Release 5vs/si/csi and later, and the most recent 1,900 CDR records for Release 5r and later. When the system restores the link, the system sends the CDR records to the CDR output device on a first-in, first-out basis.

You can administer the system to do one of the following when the CDR buffer is full:

- Block calls and generates reorder tone
- Overwrite old CDR records with new CDR records
- Route calls to an attendant as non-CDR calls

CDR record formats

The system sends two types of records to the CDR output device, a date record and a call detail record.

Date record format

CDR sends date information to the CDR device once a day at midnight, or when someone connects the device to the system. The record that the system generates at this time is a noncall record, and contains only the information that is shown in one of the date record formats.

Three date record formats exist:

- CDRU
- Printer
- TELESEER

The records that the system sends to the TELESEER and the printer contain the date only. The records to the CDRU contain time. See the following tables for date record formats:

- [Table 18: Date record format to LSU, LSU-expand, unformatted, and customized](#) on page 422
- [Table 19: Date record format for printer and expanded](#) on page 422
- [Table 20: Date record format for TELESEER 59 character, int-proc, int-direct, and int-ISDN](#) on page 423

Table 18: Date record format to LSU, LSU-expand, unformatted, and customized

Position	Description
1-2	Hour (leading 0 added if needed)
3	Colon (.)
4-5	Minute (leading 0 added if needed)
6	Blank
7-8	Month (leading 0 added if needed)
9	Slash (/)
10-11	Day (leading 0 added if needed)
12	Carriage return
13	Line feed
14-16	Null

Table 19: Date record format for printer and expanded

Position	Data field description
1-2	Month (leading 0 added if needed)
3	Space
4-5	Day (leading 0 added if needed)
6	Carriage return
7	Line feed
8-10	Null

Table 20: Date record format for TELESEER 59 character, int-proc, int-direct, and int-ISDN

Position	Data field description
1-2	Month (leading 0 added if needed)
3-4	Day
5	Carriage return
6	Line feed
7-9	Null

Customized CDR call record formats

You can use the customized record formats to define the call records for your system. You can determine the data elements that you want, and the position of the data elements in the record. However, the device that you use to interpret the CDR data must be programmed to accept the data formats that you choose. Consult your Avaya representative before you use a customized record format.

Standard CDR call record formats

See the following tables for a description of the standard call record formats:

- [Table 21: CDR data format - TELESEER](#) on page 424
- [Table 22: CDR data format - ISDN TELESEER](#) on page 425
- [Table 23: CDR data format - enhanced TELESEER](#) on page 426
- [Table 24: CDR data format - 59 character](#) on page 427
- [Table 25: CDR data format - printer](#) on page 428
- [Table 26: CDR data format - ISDN printer](#) on page 430
- [Table 27: CDR data format - enhanced printer](#) on page 432
- [Table 28: CDR data format - LSU-expand](#) on page 434
- [Table 29: CDR data format - LSU](#) on page 436
- [Table 30: CDR data format - ISDN LSU](#) on page 437
- [Table 31: CDR data format - enhanced LSU](#) on page 438
- [Table 32: CDR data format - expanded](#) on page 438
- [Table 33: CDR data format - enhanced expanded](#) on page 441
- [Table 34: CDR data format - unformatted](#) on page 444

- [Table 35: CDR data format - enhanced unformatted](#) on page 446
- [Table 36: CDR data format - int process](#) on page 448
- [Table 37: CDR data format - int-direct](#) on page 449
- [Table 38: CDR data format - int-ISDN](#) on page 451

Table 21: CDR data format - TELESEER

Position	Description
1-3	Space
4-5	Time of day-hours
6-7	Time of day-minutes
8	Duration-hours
9-10	Duration-minutes
11	Duration-tenths of minutes
12	Condition code
13-15	Access code dialed
16-18	Access code used
19-33	Dialed number
34-38	Calling number
39-53	Account code
54	facilities restriction level (FRL)
55	inter-exchange carrier (IXC)
56-58	Incoming circuit ID
59-61	Outgoing circuit ID
62	Feature flag
63-69	Authorization code
70-76	Space
77	Carriage return
78	Line feed
79-81	Null

Table 22: CDR data format - ISDN TELESEER

Position	Description
1-3	Space
4-5	Time of day-hours
6-7	Time of day-minutes
8	Duration-hours
9-10	Duration-minutes
11	Duration-tenths of minutes
12	Condition code
13-15	IXC
16-18	Access code used
19-33	Dialed number
34-38	Calling number
39-53	Account code
54	INS (units)
55	FRL
56-58	Incoming circuit ID
59-61	Outgoing circuit ID
62	Feature flag
63-69	Authorization code
70-71	INS (hundreds, tens)
72-76	Space
77	Line feed
78-80	Null

Table 23: CDR data format - enhanced TELESEER

Position	Description
1-3	Space
4-5	Time of day-hours
6-7	Time of day-minutes
8	Duration-hours
9-10	Duration-minutes
11	Duration-tenths of minutes
12	Condition code
13-16	IXC code
17-19	Access code used
20-34	Dialed number
35-39	Calling number
40-54	Account code
55	ISDN NSV (units)
56	FRL
57-59	Incoming circuit ID
60-62	Outgoing circuit ID
63	Feature flag
64-70	Authorization code
71-72	ISDN NSV (hundreds, tens)
73-76	Space
77	Carriage return
78	Line feed
79-81	Null

Table 24: CDR data format - 59 character

Position	Description
1-2	Time of day-hours
3-4	Time of day-minutes
5	Duration-hours
6-7	Duration-minutes
8	Duration-tenths of minutes
9	Condition code
10-12	Access code dialed
13-15	Access code used
16-30	Dialed number
31-35	Calling number
36-50	Account code
51	FRL
52	IXC
53-55	Incoming circuit ID
56-58	Outgoing circuit ID
59	Carriage return
60	Line feed
61-63	Null

Table 25: CDR data format - printer

Position	Description
1-2	Time of day-hours
3-4	Time of day-minutes
5	Space
6	Duration-hours
7-8	Duration-minutes
9	Duration-tenths of minutes
10	Space
11	Condition code
12	Space
13-15	Access code dialed
16	Space
17-19	Access code used
20	Space
21-35	Dialed number
36	Space
37-41	Calling number
42	Space
43-57	Account code
58	Space
59-65	Authorization code
66-69	Space
70	FRL
71	Space
72	IXC
73	Space
1 of 2	

Table 25: CDR data format - printer (continued)

Position	Description
74-76	Incoming circuit ID
77	Space
78-80	Outgoing circuit ID
81	Space
82	Feature flag
83	Carriage return
84	Line feed
2 of 2	

Table 26: CDR data format - ISDN printer

Position	Description
1-2	Time of day-hours
3-4	Time of day-minutes
5	Space
6	Duration-hours
7-8	Duration-minutes
9	Duration-tenths of minutes
10	Space
11	Condition code
12	Space
13-15	IXC
16	Space
17-19	Access code used
20	Space
21-35	Dialed number
36	Space
37-41	Calling number
42	Space
43-57	Account code
58	Space
59-65	Authorization code
66	Space
67-68	INS (hundreds, tens)
69	Space
70	INS (units)
71	Space
1 of 2	

Table 26: CDR data format - ISDN printer (continued)

Position	Description
72	FRL
73	Space
74-76	Incoming circuit ID
77	Space
78-80	Outgoing circuit ID
81	Space
82	Feature flag
83	Carriage return
84	Line feed
2 of 2	

Table 27: CDR data format - enhanced printer

Position	Description
1-2	Time of day-hours
3-4	Time of day-minutes
5	Space
6	Duration-hours
7-8	Duration-minutes
9	Duration-tenths of minutes
10	Space
11	Condition code
12	Space
13-16	IXC code
17	Space
18-21	Access code used
22	Space
23-37	Dialed number
38	Space
39-43	Calling number
44	Space
45-59	Account code
60	Space
61-67	Authorization code
68	Space
69-71	ISDN NSV
72	Space
73	FRL
74	Space
1 of 2	

Table 27: CDR data format - enhanced printer (continued)

Position	Description
75-77	Incoming circuit ID
78	Space
79-81	Outgoing circuit ID
82	Space
83	Feature flag
84	Carriage return
85	Line feed
2 of 2	

Table 28: CDR data format - LSU-expand

Position	Description
1-2	Time of day-hours
3-4	Time of day-minutes
5	Space
6	Duration-hours
7-8	Duration-minutes
9	Duration-tenths of minutes
10	Space
11	Condition code
12	Space
13-15	Access code dialed
16-18	Access code used
19	Space
20-34	Dialed number
35	Space
36-39	Calling number
40	Space
41-45	Account code
46	Space
47-53	Authorization code
54-57	Space
58	FRL
59	Space
60	Calling number (1st digit)
61	Space
62-63	Incoming circuit ID (tens, units)
1 of 2	

Table 28: CDR data format - LSU-expand (continued)

Position	Description
64	Space
65	Feature flag
66	Space
67-68	Outgoing circuit ID (tens, units)
69	Space
70	Outgoing circuit ID (hundreds)
71	Space
72	Incoming circuit ID (hundreds)
73	IXC
74	Carriage return
75	Line feed
76-78	Null
2 of 2	

Table 29: CDR data format - LSU

Position	Description
1	Duration-hours
2-3	Duration-minutes
4	Duration-tenths of minutes
5	Condition code
6-8	Access code dialed
9-11	Access code used
12-26	Dialed number
27-30	Calling number (digits 2-5 for a 5-digit dial plan)
31-35	Account code (first 5 digits)
36-42	Authorization code or digits 6-12 of the account code
43-44	Space or digits 13-14 of account code
45	FRL or digit 15 of the account code
46	Calling number (1st digit)
47-48	Incoming circuit ID (tens, units)
49	Feature flag
50-52	Outgoing circuit ID (tens, units, hundreds)
53	Incoming circuit ID (hundreds)
54	IXC
55	Carriage return
56	Line feed
57-59	Null

Table 30: CDR data format - ISDN LSU

Position	Description
1	Duration-hours
2-3	Duration-minutes
4	Duration-tenths of minutes
5	Condition code
6-8	IXC
9-11	Access code used
12-26	Dialed number
27-30	Calling number (digits 2-5 for a 5-digit dial plan)
31-35	Account code (digits 1-5)
36-42	Authorization code or digits 6-12 of the account code
43-44	INS or digits 13-14 of account code
45	INS (3rd digit), FRL, or digit 15 of the account code
46	Calling number (1st digit of a 5-digit calling number)
47-48	Incoming circuit ID (tens, units)
49	Feature flag
50-52	Outgoing circuit ID (tens, units, hundreds)
53	Incoming circuit ID (hundreds)
54	FRL
55	Carriage return
56	Line feed
57-59	Null

Table 31: CDR data format - enhanced LSU

Position	Description
1	Duration-hours
2-3	Duration-minutes
4	Duration-tenths of minutes
5	Condition code
6-9	IXC code
10-12	Access code used
13-27	Dialed number
28-31	Calling number
32-35	Account code (digits 1-4)
36-42	Authorization code or digits 6-12 of the account code
43-45	ISDN NSV
46	1st digit of a 5-digit calling number
47-48	Incoming circuit ID (tens, units)
49	Feature flag
50-52	Outgoing circuit ID (tens, units, hundreds)
53	Incoming circuit ID (hundreds)
54	FRL
55	Carriage return
56	Line feed
57-59	Null

Table 32: CDR data format - expanded

Position	Description
1-2, 3-4	Time of day-hours, -minutes
5	Space
1 of 3	

Table 32: CDR data format - expanded (continued)

Position	Description
6, 7-8, 9	Duration-hours, minutes, tenths of minute
10	Space
11	Condition code
12	Space
13-16	Access code dialed
17	Space
18-21	Access code used
22	Space
23-37	Dialed number
38	Space
39-48	Calling number
49	Space
50-64	Account code
65	Space
66-72	Authorization code
73-76	Space
77	FRL
78	Space
79-81	Incoming circuit ID
82	Space
83-85	Outgoing circuit ID
86	Space
87	Feature flag
88	Space
89-90	Attendant console
91	Space
2 of 3	

Table 32: CDR data format - expanded (continued)

Position	Description
92-95	Incoming trunk access code
96	Space
97-98	Node number
99	Space
100-102	INS
103	Space
104-106	IXC
107	Space
108	Bearer capability class (BCC)
109	Space
110	Message-Associated User-to-User Signaling (MA-UUI)
111	Space
112	Resource flag
113	Space
114-117	Packet count
118	Space
119	temporary-signaling connection (TSC) flag
120	Space
121-129	Reserved
130	Space
131	Carriage return
132	Line feed
133-135	Null
3 of 3	

Table 33: CDR data format - enhanced expanded

Position	Description
1-2	Time of day-hours
3-4	Time of day-minutes
5	Space
6	Duration-hours
7-8	Duration-minutes
9	Duration-tenths of minutes
10	Space
11	Condition code
12	Space
13-16	Access code dialed
17	Space
18-21	Access code used
22	Space
23-37	Dialed number
38	Space
39-48	Calling number
49	Space
50-64	Account code
65	Space
66-72	Authorization code
73	Space
74-75	Time in queue
76	Space
77	FRL
78	Space
1 of 3	

Table 33: CDR data format - enhanced expanded (continued)

Position	Description
79-81	Incoming circuit ID
82	Space
83-85	Outgoing circuit ID
86	Space
87	Feature flag
88	Space
89-90	Attendant console
91	Space
92-95	Incoming TAC
96	Space
97-98	Node number
99	Space
100-102	ISDN NSV
103	Space
104-107	IXC code
108	Space
109	BCC
110	Space
111	MA-UUI
112	Space
113	Resource flag
114	Space
115-118	Packet count
119	Space
120	TSC flag
121	Space
2 of 3	

Table 33: CDR data format - enhanced expanded (continued)

Position	Description
122-123	Bandwidth
124	Space
125-130	ISDN CC (digits 1-6)
131-135	ISDN CC (digits 7-11) / periodic pulse metering (PPM) count (1-5)
136-146	Reserved for future use
147	Carriage return
148	Line feed
149-151	Null
3 of 3	

Table 34: CDR data format - unformatted

Position	Description
1-2	Time of day-hours
3-4	Time of day-minutes
5	Duration-hours
6-7	Duration-minutes
8	Duration-tenths of minutes
9	Condition code
10-13	Access code dialed
14-17	Access code used
18-32	Dialed number
33-42	Calling number
43-57	Account code
58-64	Authorization code
65-66	Space
67	FRL
68-70	Incoming circuit ID (hundreds, tens, units)
71-73	Outgoing circuit ID (hundreds, tens, units)
74	Feature flag
75-76	Attendant console
77-80	Incoming TAC
81-82	Node number
83-85	INS
86-88	IXC
89	BCC
90	MA-UUI
91	Resource flag
1 of 2	

Table 34: CDR data format - unformatted (continued)

Position	Description
92-95	Packet count
96	TSC flag
97-100	Reserved
101	Carriage return
102	Line feed
103-105	Null
2 of 2	

Table 35: CDR data format - enhanced unformatted

Position	Description
1-2	Time of day-hours
3-4	Time of day-minutes
5	Duration-hours
6-7	Duration-minutes
8	Duration-tenths of minutes
9	Condition code
10-13	Access code dialed
14-17	Access code used
18-32	Dialed number
33-42	Calling number
43-57	Account code
58-64	Authorization code
65-66	Time in queue
67	FRL
68-70	Incoming circuit ID
71-73	Outgoing circuit ID
74	Feature flag
75-76	Attendant console number
77-80	Incoming TAC
81-82	Node number
83-87	ISDN NSV
88-89	IXC code
90	BCC
91	MA-UUI
92	Resource flag
1 of 2	

Table 35: CDR data format - enhanced unformatted (continued)

Position	Description
93-96	Packet count
97	TSC flag
98-99	Bandwidth
100-105	ISDN CC (digits 1-6)
106-110	ISDN CC (digits 7-11)/PPM count (1-5)
111-114	Reserved for future use
115	Carriage return
116	Line feed
117-119	Null
2 of 2	

Table 36: CDR data format - int process

Position	Description
1-2	Format code
3-4	Time of day-hours
5-6	Time of day-minutes
7	Duration-hours
8-9	Duration-minutes
10	Duration-tenths of minutes
11	Space
12	Condition code
13	Space
14-16	Access code dialed
17-19	Access code used
20	Space
21-38	Dialed number (digits 1-18)
39-43	Calling number (digits 1-5)
44	Space
45-59	Account code (digits 1-15)
60	Space
61	IXC
62	FRL
63-65	Space
66-67	Incoming circuit ID (digits 1-2)
68-70	Space
71-72	Outgoing circuit ID (digits 1-2)
73	Space
74-78	PPM count (digits 1-5)
1 of 2	

Table 36: CDR data format - int process (continued)

Position	Description
79	Carriage return
80	Line feed
81-83	Null
2 of 2	

Table 37: CDR data format - int-direct

Position	Description
1-2	Day of month
3-4	Month
5-6	Year
7	Space
8-9	Time of day-hours
10-11	Time of day-minutes
12	Space
13	Duration-hours
14-15	Duration-minutes
16	Duration-tenths of minutes
17	Space
18	Condition code
19	Space
20-22	Access code dialed
23-25	Access code used
26	Space
27-44	Dialed number used
45	Space
46-50	Calling number
1 of 2	

Table 37: CDR data format - int-direct (continued)

Position	Description
51	Space
52-66	Account code
67	Space
68-72	PPM count
73	Space
74-75	Incoming circuit ID
76	Space
77-78	Outgoing circuit ID
79	Carriage return
80	Line feed
2 of 2	

Table 38: CDR data format - int-ISDN

Position	Description
1-2	Time of day-hours
3-4	Time of day-minutes
5	Space
6	Duration-hours
7-8	Duration-minutes
9	Duration-tenths of minutes
10	Space
11	Condition code
12	Space
13-16	Access code dialed
17	Space
18-21	Access code used
22	Space
23-37	Dialed number
38	Space
39-48	Calling number
49	Space
50-64	Account code
65	Space
66-72	Authorization code
73	Space
74	Line feed
75	Space
76	FRL
77	Space
1 of 3	

Table 38: CDR data format - int-ISDN (continued)

Position	Description
78	Incoming circuit ID (hundreds)
79	Incoming circuit ID (tens)
80	Incoming circuit ID (units)
81	Space
82-84	Outgoing circuit ID
85	Space
86	Feature flag
87	Space
88-89	Attendant console (1st digit)
90	Space
91-94	Incoming trunk access code
95	Space
96-97	Node number
98	Space
99-101	INS
102	Space
103-106	IXC
107	Space
108	BCC
109	Space
110	MA-UUI
111	Space
112	Resource flag
113	Space
114-119	Reserved
120-124	PPM or reserved
2 of 3	

Table 38: CDR data format - int-ISDN (continued)

Position	Description
125-131	Space
132	Carriage return
133	Line feed
134-136	Null
3 of 3	

Call detail record field descriptions

The following information describes the CDR data that the system collects for each call, and the length of each field. The information is right adjusted in the CDR record field, unless otherwise indicated. The customized field name appears, if the field names for customized records differ from the names of standardized records.

- Access Code Dialed

Customized field name: **code-dial**

Length: 3 or 4 digit

This field contains the access code that the user dials to place an outgoing call. The access can be the automatic route selection (ARS) access code, an automatic alternate routing (AAR) access code, or the access code of a specific trunk group. This field is also used to record the X.25 Feature Access Code of an outgoing X.25-addressed call.

- Access Code Used

Custom field name: **code-used**

Length: 3 or 4 digits

This field is used only for outgoing calls when the system uses a trunk group that differs from the access code that the user dials. This field is not used when a user dials a TAC. For example, your system might use an FAC for ARS. This field contains the access code of the trunk group that the system uses to route the call. When the access code that the user dials, and the access code that the systems uses are the same, this field is blank.

If you use ISDN or enhanced formats with TELESEER, LSU, or printer record types, this field contains the access code of the trunk group, even if the user dials the same access code.

Call Detail Recording

- Account Code

Custom field name: **acct-code**

Length: 1 to 15 digits

This field is either blank, or contains a number to associate call information with projects or account numbers. For some formats, a long account code overwrites spaces on the record that are assigned to other fields.

- Attendant Console

Custom field name: **attd-console**

Length: 2 digits

If an attendant participates in a call, this field contains the number of the attendant console.

- Authorization Code

Custom field name: **auth-code**

Length: 4 to 13 digits

This field contains the authorization code that the user used to make the call. The system truncates an authorization code to 7 digits for formats other than customized formats.

Note that the authorization code for the non-ISDN format and the ISDN local storage init (LSU) format has fewer than 6 digits. The authorization code for the Enhanced LSU format has 5 digits. The system does not record the authorization on the 59-character record.

- Bandwidth

Length: 2 digits

This field contains the bandwidth of the wide band calls to support H0, H11, H12, and N x 64 kbps data rates. For Enhanced Expanded, Enhanced Unformatted, and customized record formats, this value in this field is the number of DSOs of 64-kbps channels that comprise a call.

- Bearer Capability Class

Custom field name: **bcc**

Length: 1 digit

This field contains the bearer capability class (BCC) for ISDN calls. The BCC identifies the type of ISDN call and distinguishes voice calls from different types of data. Any one of the following BCCs can appear in this field.

0 - Voice grade data and voice

1 - Mode 1, 56 kbps synchronous data

2 - Mode 2, less than 19.2 kbps synchronous or asynchronous data

3 - Mode 3, 64 kbps data for Link Access Procedure data (LAPD) protocol

4 - Mode 0, 64 kbps data clear

w - Wideband

For Intraswitch CDR records, the system provides information in the BCC field for wideband calls only.

- Calling Number

Custom field name: **calling-num**

Number of digits, standard: 1 to 10

Number of digits, custom: 1 to 15

For outgoing or inraswitch calls, this field contains the extension of the originating telephone user. For incoming and tandem calls, this field contains the TAC in standard formats. The fifth digit is the first digit of a 5-digit dialing plan.

For formats in which the Calling Number field has 7 digits, the field contains the TAC of the incoming call.

For Unformatted records or Expanded records, this field contains the number of the calling party. If the number of the calling party is unavailable, this field is blank for both the Unformatted and the Expanded record formats.

For an outgoing, or an originating, NCA-TSC CDR record, this field contains the local extension of the noncall-associated/temporary-signaling connection (NCA-TSC) endpoint. This field is blank for terminating, tandem, or unsuccessful NCA-TSC CDR records.

- Calling Number/Incoming TAC

Custom field name: **clg-num/in-tac**

You can use this field on a customized record to display the calling number, if the calling number is available.

If the calling party number is unavailable, this field contains the incoming TAC.

For outgoing calls, this field contains the calling extension.

Call Detail Recording

- Carriage Return

Custom field name: **return**

The **ASCII** carriage return character, followed by a line feed, indicates the end of a call record.

- Condition Code

Length: 1 character

The condition code indicates the type of call that this record describes. For example, condition code C identifies a conference call, and condition code 7 identifies an ARS call.

[Table 39: Condition codes](#) on page 457 shows the condition codes for most record formats. The condition codes for the 59-character format differ from the condition codes of the other record types. The codes that apply to 59-character records appear in parentheses in the table.

Table 39: Condition codes

Condition codes	Description
0	Identifies an intraswitch call, which is a call that originates and terminates on the switch
1 (A)	Identifies an attendant-handled call or an attendant-assisted call, except conference calls
4 (D)	Identifies an extremely long call or a call with an extremely high message count TSC. An extremely long call is a call that lasts for 10 or more hours. An extremely high message count TSC is 9999 or more messages. When a call exceeds 10 hours, the system creates a call record with this condition code and a duration of 9 hours, 59 minutes, and 1-9 tenths of a minute. The system creates a similar call record with this condition code after each succeeding 10-hour period. When the call terminates, the system creates a final call record with a different condition code that identifies the type of call.
6 (E)	Identifies calls that the system does not record because system resources are unavailable. The CDR record includes the time and the duration of the outage. The system generates this condition code for: ● Calls that the system routes to the attendant ● Calls that require the CDR feature to overwrite records ● ISDN calls that are not completed at the far end, if the Q.931 message includes the reason that the call was not completed. The system does not generate the condition code for ISDN calls that receive inband tones.
1 of 3	
7 (G)	Identifies calls that use the AAR or ARS feature.
8 (H)	Identifies calls that are served on a delayed basis by the Ringback Queuing feature.
9 (I)	Identifies: ● An incoming call ● A tandem call ● An incoming NCA-TSC call ● A tandem NCA-TSC call
A	Identifies an outgoing call.
B	Identifies an adjunct-placed outgoing call.

Table 39: Condition codes (continued)

Condition codes	Description
C (L)	Identifies a conference call. For trunk CDR, the system creates a separate call record, with this condition code, for each incoming or outgoing trunk that is used during the conference call. If you disable ITCS and OTCS, the system records the extension of the originator of the conference call. The system does not record any other extension. If you disable ITCS, and you administer the originator of the conference call to use Intraswitch CDR, the system generates a call with this condition code whenever the originator of the conference dials a nontrunk conference participant. If ITCS is active, and you do <i>not</i> administer the originator of the conference call to use Intraswitch CDR, the system generates a call with this condition code whenever the originator of the conference dials an intraswitch conference participant.
E (N)	Identifies a call that the system does not complete because the following facilities to complete the call are unavailable: ● Outgoing calls - The trunks are busy, and no queue exists. - The trunks are busy, and the queue is full. ● Incoming calls - The extension is busy. - The extension is unassigned. This condition code also identifies an ISDN Call By Call Service Selection call that is unsuccessful because of an administered trunk usage allocation plan. Incoming trunk calls to a busy telephone do not generate a CDR record.
F	Identifies a call that the system does not complete because of one of the following conditions: ● The originator of the calls has insufficient calling privileges. ● An NSF mismatch occurs for an ISDN call. ● An authorization mismatch occurs for a data call.
G	Identifies a call that the system terminates to a ringing station.
H	Notes that the system abandoned a ring call.
I	Identifies a call that the system terminates to a busy station.
J	Identifies an incoming trunk call that is a new connection that uses Additional Network Feature-Path Replacement (ANF-PR) or DCS with Rerouting. For more information on QSIG and ANF-PR, see the <i>Administrator's Guide for Avaya Communication Manager</i> .
2 of 3	

Table 39: Condition codes (continued)

Condition codes	Description
K	Identifies an outgoing trunk call that is a new connection that uses ANF-PR or DCS with Rerouting. For more information on QSIG and ANF-PR, see the Administrator's Guide for Avaya Communication Manager.
M	Identifies an outgoing trunk calls that the system disconnects because the call exceeds the time allowed.
T	Identifies CDR records for calls that meet the following conditions: • The Condition Code 'T' for Redirected Calls? field on the CDR System Parameters screen is set to y. • The incoming trunk group is direct inward dialing (DID). • The system automatically redirects an incoming call off of the server.
3 of 3	

If the **Trunk-group CDR Reports** field is set to **ring**, CDR records the ring time to answer or abandon for incoming calls that the trunk group originates. CDR also indicates if the incoming destination is busy. This record is separate from the normal call duration record that is printed for an answered call. This information is indicated by the condition code.

When a trunk group originates an incoming call with this option set that is terminated to an internal destination, the call is tracked from the time that ringing feedback is given to the originator. If the call is answered, a CDR record is printed with condition code G, and the duration reflects the time between the start of ringing and when the call is answered. If the call is abandoned before being answered, the system prints a record with condition code H, and the duration reflects the time between the start of ringing and the time that the call was abandoned. If the destination is busy, a CDR record is printed with condition code I and a duration of 0.

- Condition code overrides

If two condition codes apply to the same call, one code overrides the other. The following matrix, [Table 40: Condition code override matrix](#) on page 460, defines the overrides.

To use this table, locate one of the condition codes that you want to compare in the row of condition codes at the top of the table. Then locate the other condition code that you want to compare in the column of condition code at the far left of the table. Then locate the intersection of these two condition codes. The condition code at the intersection of the two condition codes, is the condition code that the system uses. For example, assume that the system can assign condition 7 and condition code A to the same call. The system uses condition code 7 for the call.

If the intersection of the two condition codes contains a dash, the two conditions never occur for the same call.

Table 40: Condition code override matrix

Condition codes																
	0	1	4	6	7	8	9	A	B	C	E	F	J	K	M	T
0	-	0	4	6	0	-	-	-	B	C	-	-	-	-	-	-
1	0	-	4	6	1	-	9	1	B	C	E	-	J	K	-	-
4	4	4	-	6	4	4	4	4	4	4	-	-	J	K	-	-
6	6	6	6	-	6	6	6	6	6	6	6	6	6	6	-	-
7	0	1	4	6	-	7	9	7	B	C	E	F	J	K	-	-
8	-	-	4	6	7	-	-	8	B	C	E	-	-	K	-	-
9	-	9	4	6	9	-	-	-	-	C	E	F	-	-	-	-
A	-	1	4	6	7	8	-	-	B	C	E	F	-	-	-	-
B	B	B	4	6	B	B	-	B	-	B	E	F	-	K	-	-
C	C	C	4	6	C	C	C	C	B	-	-	-	J	K	M	-
E	-	E	-	6	E	E	E	E	E	-	-	-	E	E	-	-
F	-	-	-	6	F	-	F	F	F	-	-	-	F	F	-	-
J	-	J	J	6	J	-	-	-	-	J	E	F	-	-	-	-
K	-	K	K	6	K	K	-	-	-	K	E	F	-	-	-	-
M	-	-	-	-	-	-	-	-	-	M	-	-	-	-	-	-
T	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

- Country From

Custom field name: **country-from**

Number of digits: 3

The **country-from** field is a country number, used with the Multinational Locations feature, for currency conversion. The field length is 3, the same as the length of the **Country code for CDR** field on the **Location Parameters** screen. The **country-from** field indicates the administered CDR country code of the PBX interface of the calling party.

- Country To

Custom field name: **country-to**

Number of digits: 3

The **country-to** field is a country number, used with the Multinational Locations feature, for currency conversion. The field length is 3, the same as the length of the **Country code for CDR** field on the **Location Parameters** screen. The **country-to** field indicates the administered CDR country code of the PBX interface of the called party.

Note:

If the Multinational Locations feature is turned off in the license file, the key words **country-from** and **country-to** are invalid.

- Date

You can include the date in customized CDR records only. The format of the date is based on the value of the **CDR Date Format** field on the **CDR System Parameters** screen.

- Dialed Number

Custom field name: **dialed-num**

Length: 23 digits

For an outgoing call, this field contains the number that the system user dials. For an incoming call, this field contains the extension of the system user that is called. If a Dialed Number Identification System (DNIS) exists, the field contains the implied extension for an incoming call. If the originator of the call dials more than eighteen digits, the system truncates the number or the extension to 18 digits. The system truncates the least significant digits, starting at the right. For example, if the originator of the call dials the number 11111111111111111852, the system truncates the digits 852.

- CDR Privacy

If CDR Privacy is active for the calling number, and this CDR record is for an outgoing call, the system modifies and records the number that the user dials according to the following procedure:

- The system truncates the numbers that the user dials to 18 digits
- The system replaces some of digits with blanks to ensure the privacy of the call.

- NCA-TSC or tandem NCA-TSC outgoing calls

For outgoing NCA-TSC or tandem NCA-TSC calls, this field contains the digits that the user dials, and that the system uses to establish a route to the server.

The field contains the local extension that is used as the NCA-TSC endpoint when the extension is for a terminating NCA-TSC. For an unsuccessful NCA-TSC outgoing call, this field is blank.

The field can contain a pound sign (#) or the letter E for either ARS calls or TAC calls when:

- A user dials a pound sign (#) at the end of a string of digits
- An outgoing call exceeds the interdigit-timeout interval that is in the ARS Analysis table
- A user dials a TAC for a Look Ahead Interflow (LAI). For example, a successful LAI to <TAC> 1001, where 1001 is the remote VDN extension, yields 1001E or 1001# in the Dialed Number field. The vector processing software uses the pound sign (#) or E to indicate the end of the string of digits that the user dials.

You administer the **CDR System Parameter** screen so the pound sign (#) or the letter E need not be the last digit of the CDR record.

- **Duration**

Custom field name: **duration** or **sec-dur**

Length: 4 digits

This field contains the duration of the call, which the system records in hours (0 to 9), minutes (00 to 59), and tenths of minutes (0 to 9). The system rounds the duration of the call down in 6-second increments. For example, the system records the duration of a 5-second call as a duration of zero. If this field contains the value 9999, the call was in progress when a time change was made in the switch.

You can use the customized record format to report the duration of the call in hours, minutes, and seconds.

- **Feature Flag**

Custom field name: **feat-flag**

Length: 1 digit

The feature flag indicates whether a call received network answer supervision, and whether the call was interworked in the network. The duration of the call starts when the system receives the network answer.

You can administer the **Feature flag** field on the **CDR System Parameters** screen to reflect whether the network reported an outgoing ISDN call as interworked.

- The number 0 in this field indicates either a voice call without network answer supervision or a call for which NCA-TSC is not established.
- The number 1 in this field indicates a data call without network answer supervision.
- The number 2 in this field indicates a voice call with network answer supervision, but interworked.
- The number 3 in this field indicates a data call with network answer supervision, but interworked.
- The number 4 in this field indicates a voice call with network answer supervision.
- The number 5 in this field indicates a data call with network answer supervision.

The time of the answer and the duration of the call are accurate if the feature flag indicates that the call received network answer supervision.

The time of the answer and the duration of the call might not be accurate, if the call does not receive network answer supervision, or the call receives answer supervision but is interworked with non-ISDN trunks.

Calls are considered data calls if the calls use a conversion resource, such as a modem, and the calls either originate or terminate on a data module.

- **Format Code**

Length: 2 digits

This field contains two values:

- 00 indicates no PPM.
- 03 indicates a PPM count in the digits record.

- **FRL**

Length: 1 digit

Facilities restriction levels (FRLs) are numbered 0 through 7, are associated with the AAR and the ARS features, and define calling privileges. If the call is an:

- Outgoing call, and an authorization code is not used to make the call, this field contains the FRL of the originating user FRL.
- Outgoing call, and an authorization code is used to make the call, this field contains the FRL that is associated with the authorization code that the user dials.
- Incoming or a tandem call, this field contains the FRL that is assigned to the incoming trunk group.
- Incoming tandem tie trunk call, this field contains either the FRL that is assigned to the tandem tie trunk or the TCM sent with the tandem tie trunk call. If an FRL was used to complete the call, the field contains the FRL. If a TCM was used to complete the call, the field contains the TCM. With ISDN calls, this field always contains the TCM, if the TCM was received.

You can administer CDR so that this field contains disconnect information instead of the FRL. If you administer CDR so this field contains disconnect information for trunk CDR, the system records the information shown in [Table 41: Disconnect information for trunk CDR](#) on page 464.

Table 41: Disconnect information for trunk CDR

Data	Meaning
0	The system cannot determine which participant on the call dropped the call first.
1	The switch participant dropped the call first.
2	CO participant dropped the call first.
3	Maintenance seized the trunk

For intraswitch CDR, the field contains the information that is shown in [Table 42: Intra-switch CDR call disconnect information](#) on page 464 instead of the FRL.

Table 42: Intra-switch CDR call disconnect information

Data	Meaning
0	The system cannot determine which participant on the call dropped the call first.
1	The calling participant dropped the call first.
2	The dialed participant dropped the call first.

- Incoming Circuit Identification

Custom field name: **in-crt-id**

Length: 3 digits

This field contains the member number of a trunk within a trunk group that is used for an incoming call. For outgoing calls, this field is blank. Tandem calls contain both incoming and outgoing circuit ID numbers.

The format of this field varies from record to record. For printer, TELESEER, and 59-character formats, the numbers are inverted on the record. For example, the circuit ID 123 appears as 231 (tens, units, hundreds). If you want to change the order to hundreds, tens, units format, for example, 123, use the **Modified Circuit ID Display** field on the **CDR System Parameters** screen.

- Incoming TAC

Custom field name: **in-trk-code**

Length: 4 digits

This field contains the access code of the incoming trunk group.

- INS

Length: 3 digits

This field specifies the ISDN Network Service (INS) that is requested for a call. This field applies only to ISDN calls. Each network specific facility has a corresponding INS value, shown in [Table 43: Network-specific facility to INS mapping](#) on page 465.

This field also appears as ISDN NSV (network service value).

Table 43: Network-specific facility to INS mapping

Network specific facility	INS value
OUTWATS Band 0	33
OUTWATS Band 1-255	34-288
Network Operator	324
Pre subscribed Common Carrier Operator	325
Software Defined Network (SDN)	352
MEGACOM 800	353
MEGACOM	354
INWATS	355
Maximum Banded WATS	356
ACCUNET Digital Service	357
AT&T Long Distance Service	358
International 800	359
Multiquest	367

- ISDN CC

The call charge that the ISDN advice of charge function supplies.

- ISDN NSV

See INS.

- IXC Code

The length for non-ISDN formats: 1 digit hexadecimal

Interexchange Carrier (IXC) codes, 1-F hexadecimal, indicate the carrier used on the call. This information is sent to the CDR output device in ASCII code as a hexadecimal representation, for example, ASCII F equals 15 that is.

Users must dial an IXC access number to access a specific common carrier for a call. In the US, this number is in the form 10XXX, 950 - 1XXX, or any 8 to 11 digit number. The IXC access numbers that are applicable at a given location are associated with an IXC code on the **Inter-Exchange Carrier Codes** screen.

When ARS is used, and a route pattern inserts one of the administered IXC codes, the report contains the associated IXC code. If no IXC access number is used, or the carrier is selected at the central office (CO), the report contains a zero.

Length for ISDN formats: 3 or 4 digits

With an ISDN record format, this 3-digit or 4-digit field identifies the actual IXC used on an ISDN call. This information is determined from the route pattern administration. For AAR and ARS calls, the 3-digit IXC value is administered in the route pattern for all ISDN calls. If a user dials an IXC code with a 10XXX format as administered on the **Inter-Exchange Carrier Codes** screen, the CDR record contains only the last 3 digits (4 digits or Enhanced). If a user dials a 7-digit IXC code, this field contains a zero.

- Line Feed

Length: 1 character

The ASCII line feed character comes after a carriage return to terminate CDR records.

- Location From

Custom field name: **location-from**

Number of digits: 3

The **location-from** field is a location number, used with the Multinational Locations feature, for record sorting. The field length is 3, the same as the length of the **location** field on the cabinet, media gateway, remote office, and ip-network region screens. The **location-from** field indicates the location code of the PBX interface of the calling party.

- Location To

Custom field name: **location-to**

Number of digits: 3

The **location-to** field is a location number, used with the Multinational Locations feature, for record sorting. The field length is 3, the same as the length of the **location** field on the cabinet, media gateway, remote office, and ip-network region screens. The **location-to** field indicates the location code of the PBX interface of the called party.

Note:

If the Multinational Locations feature is turned off in the license file, the key words **location-from** and **location-to** are invalid.

- MA-UUI

Length: 1 digit

Message Associated User-to-User Signaling shows the number of ISDN messages that contain user data that are sent on an outgoing call. This field contains a number from 0 to 9.

- Node Number

Custom field name: **node-num**

Length: 2 digits

This field identifies the DCS node number of a switch within a DCS arrangement. This number is the local ID, which is the same as the node number on the **Dial Plan** screen.

- Null

Length: 1 character

The Null character, usually in triplets, is used to terminate and divide CDR Records, when a receiving adjunct needs a record divider or terminator.

- Outgoing Circuit Identification

Custom field name: **out-crt-id**

Length: 3 digits

For outgoing calls, this field contains the member number of the trunk within a trunk group that is used on the call. This field is blank for incoming calls. Tandem calls include both incoming and outgoing circuit ID numbers. For outgoing and tandem NCA-TSCs, this field contains the signaling group that is used to carry the NCA-TSC.

The format of this field varies from record to record. For printer, TELESEER and 59-character formats, and the ISDN and Enhanced forms of those records, the numbers are inverted on the record. For example, the circuit ID 123 appears as 231 (tens, units, hundreds). If you want to change the order to hundreds, tens, units format, for example, 123, use the **Modified Circuit ID Display** field on the **CDR System Parameters** screen.

- Packet Count

Custom field name: **tsc_ct**

Length: 4 digits

For ISDN TSCs, this field contains the number of ISDN-PRI USER INFO messages that are sent, received, or, for tandem TSCs, passed through the switch.

- PPM

Periodic Pulse Metering (PPM) contains the pulse counts that are transmitted over the trunk line from the serving CO. The pulse counts are used to determine call charges.

Call Detail Recording

- Resource Flag

Custom field name: **res-flag**

Length: 1 digit

This field indicates whether the call was circuit switched or packet switched, whether a conversion resource was used, or if the call involved a multimedia application server interface (MASI) terminal or MASI trunk.

- 0 indicates circuit switched, no conversion device used
- 1 indicates packet switched, no conversion device used
- 2 indicates circuit switched, conversion device used
- 3 indicates packet switched, conversion device used
- 8 indicates a MASI call

- Sec-dur

For customized records only, you can use this field to set the duration field to record seconds instead of tenths of minutes.

- Space

Length: 0 to 40 characters

The ASCII space character separates other CDR fields or fills unused record locations.

- TSC-Count

Custom field name: **tsc_ct**

This field is the customized name for Packet Count. See Packet Count for more information.

- TSC Flag

Custom field name: **tsc_flag**

Length: 1 digit

This field describes call records that pertain to temporary signaling connections. When the value of this field is not equal to zero, this field indicates the status of the TSC.

[Table 44: Encoding for the TSC flag](#) on page 468 shows the TSC flag encoding.

Table 44: Encoding for the TSC flag

Code	Description
0	Circuit-switched call without TSC requests
1-3	Reserved
1 of 2	

Table 44: Encoding for the TSC flag (continued)

Code	Description
4	Call Associated TSC requested and accepted in response to SETUP, no congestion control (applicable to originating node). Call Associated TSC received and accepted by SETUP, no congestion control (applicable to terminating node).
5	Call Associated TSC received and accepted by SETUP, congestion control (applicable to terminating node).
6	Call Associated TSC requested, accepted after SETUP, no congestion control (applicable to originating node). Call Associated TSC received and accepted after SETUP, no congestion control (applicable to terminating node).
7	Call Associated TSC received and accepted after SETUP, congestion control (applicable to terminating node).
8	Call Associated TSC requested, rejected (rejection came from outside the local switch).
9	Call Associated TSC requested, rejected (rejection came from the local switch, that is, lack of resource).
A	Non-call-associated (NCA) TSC received, accepted, no congestion control (applicable to terminating node). NCA TSC received, accepted, no congestion control (applicable to terminating node).
B	NCA TSC requested, accepted, congestion control (applicable to originating node). NCA TSC received, accepted, congestion control (applicable to terminating node).
C	NCA TSC requested, rejected (rejection came from outside the local switch).
D	Non Call Associated TSC requested, rejected (rejection came from the local switch, that is, lack of resource).
E	Reserved for future use.
F	Reserved for future use.
2 of 2	

- Time

This field contains the time that the call ended, or if Call Splitting is active, the time that a user dropped from a multiparty call.

Call Detail Recording

- Timezone From

Custom field name: **timezone-from**

Number of digits: 5

The **timezone-from** field is a time zone offset number, used with the Multinational Locations feature, for call time. The field length is 5, the same as the length of the **timezone offset** field on the cabinet, media gateway, remote office, and ip-network region screens. The **timezone-from** field indicates the timezone offset of the PBX interface of the calling party.

- Timezone To

Custom field name: **timezone-to**

Number of digits: 5

The **timezone-to** field is a time zone offset number, used with the Multinational Locations feature, for call time. The field length is 5, the same as the length of the **location** field on the **Locations** screen. The **timezone-to** field indicates the timezone offset of the PBX interface of the called party.

Note:

If the Multinational Locations feature is turned off in the license file, the key words **timezone-from** and **timezone-to** are invalid.

- VDN

Custom field name: **vdn**

Length: 5 digits

This field is available on customized records only. The call record contains the VDN extension number. If VDN Return Destination is active, this field contains the first VDN that the caller accessed.

Administering Call Detail Recording

The following steps are part of the administration process for the Call Detail Recording feature:

- [Assigning Forced Entry of Account Codes](#)
- [Assigning privacy digits for a user](#)
- [Administering the CDR system parameters](#)
- [Administering CDR for a trunk group](#)
- [Administering CDR for a data module](#)
- [Identifying the Inter Exchange Carrier](#)
- [Administering CDR for the paging ports](#)
- [Administering the Intra-Switch CDR](#)

This section describes:

- Any prerequisites for administering the Call Detail Recording feature
- The screens that you use to administer the Call Detail Recording feature
- Complete administration procedures for the Call Detail Recording feature

Prerequisites for administering Call Detail Recording

You must complete the following actions before you can administer the Call Detail Recording (CDR) feature:

To ensure that the CDR account code is available on your system:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Codes (FAC)** screen ([Figure 89: Feature Access Code \(FAC\) screen](#) on page 471).

Figure 89: Feature Access Code (FAC) screen

FEATURE ACCESS CODE (FAC)		
Abbreviated Dialing List1 Access Code: *00		
Abbreviated Dialing List2 Access Code: *01		
Abbreviated Dialing List3 Access Code: *02		
Abbreviated Dial - Prgm Group List Access Code: *03		
Announcement Access Code: *04		
Answer Back Access Code: *05		
Auto Alternate Routing (AAR) Access Code: 8		
Auto Route Selection (ARS) - Access Code 1: *9	Access Code 2: 9	
Automatic Callback Activation: *06	Deactivation: #06	
Call Forwarding Activation Busy/DA: *07 All: *08	Deactivation: #09	
Call Park Access Code: *10		
Call Pickup Access Code: *11		
CAS Remote Hold/Answer Hold-Unhold Access Code: *50		
CDR Account Code Access Code: *12		
Change COR Access Code:		
Change Coverage Access Code: *13		
Contact Closure Open Code:	Close Code:	
Contact Closure Pulse Code:		

2. In the **CDR Account Code Access Code** field, type the code that you want a user to enter before the user enters a CDR account code number.

For more information, see the "Feature Access Code" feature.

3. Press **Enter** to save your changes.

To ensure that call classification is enabled for your system:

1. View the **Optional Features** screen, and ensure that the **Answer Supervision by Call Classifier** field is set to **y**. If the **Answer Supervision by Call Classifier** field is set to **n**, your system is not enabled for call classification. Contact your Avaya representative if you want to use call classification.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Screens for administering Call Detail Recording

Screen name	Purpose	Fields
CDR System Parameters	Define CDR for the system	All
Class of Restriction	Add Forced Entry of Account Codes (FEACs) to a Class of Restriction (COR).	Forced Entry of Account Codes
Data Module	Define a data module that uses CDR.	All
Feature Access Code (FAC)	Assign the FAC that a user enters before the user enters an account code for CDR.	CDR Account Code Access Code
Inter-exchange Carrier Codes	Identify the interexchange carrier (IXC) in the CDR record.	All
Intraswitch CDR	Provide information so that CDR records intraserver calls.	All
Loudspeaker Paging and Code Calling Access	Specify CDR record collecting for the paging ports.	CDR
Optional Features	Enable FEAC.	Forced Entry of Account Codes
Station	Assign a COR for FEAC to a user.	COR
Trunk Groups	Assign CDR reports and timers to a trunk group.	• CDR Reports • Answer Supervision Timeout • Disconnect Supervision
	Assign a COR for FEAC to a trunk group.	COR

Assigning Forced Entry of Account Codes

Prerequisites

You must complete the following actions before you can assign FEAC for all calls:

1. View the **Optional Features** screen, and ensure that the **Forced Entry of Account Codes** field is set to **y**. If the **Forced Entry of Account Codes** field is set to **n**, your system is not enabled for FEAC for all calls. Contact your Avaya representative if you want to use FEAC for all calls.

To view the **Optional Features** screen, type **display System-Parameters Customer-Options**. Press **Enter**.

Assigning FEAC for all calls

To assign FEAC for all calls:

1. Type **change system-parameters cdr**. Press **Enter**.

The system displays the **CDR System Parameters** screen ([Figure 90: CDR System Parameters](#) on page 473).

Figure 90: CDR System Parameters

change system-parameters cdr		Page 1 of 2
CDR SYSTEM PARAMETERS		
Node Number (Local PBX ID): 18	CDR Date Format: month/day	
Primary Output Format: customized	Primary Output Endpoint: CDR1	
Secondary Output Format:		
Use ISDN Layouts? n		
Use Enhanced Formats? n	Condition Code 'T' For Redirected Calls? n	
Modified Circuit ID Display? n	Remove # From Called Number? y	
Record Outgoing Calls Only? n	Intra-switch CDR? y	
Suppress CDR for Ineffective Call Attempts? y	Outg Trk Call Splitting? y	
Disconnect Information in Place of FRL? n	Outg Attd Call Record? y	
	Interworking Feat-flag? y	
Force Entry of Acct Code for Calls Marked on Toll Analysis Form? n	Calls to Hunt Group - Record: member-ext	
Record Called Vector Directory Number Instead of Group or Member? n		
Record Agent ID on Incoming? n	Record Agent ID on Outgoing? y	
Inc Trk Call Splitting? y	Inc Attd Call Record? n	
Record Non-Call-Assoc TSC? n	Call Record Handling Option: warning	
Record Call-Assoc TSC? n	Digits to Record for Outgoing Calls: outpulsed	
Privacy - Digits to Hide: 0	CDR Account Code Length: 4	

2. In the **Force Entry of Acct Code for Calls Marked on Toll Analysis Form?** field, perform one of the following actions:
- If you want the system to require that a user enter an account code for all calls, type **y**.
 - If you do not want the system to require that a user enter an account code for all calls, type **n**.

Note:
The information in the **Force Entry of Acct Code for Calls Marked on Toll Analysis Form?** field does not override other call restrictions that the user might have.

Assigning FEAC to a COR

To assign FEAC to a COR:

1. Type **change cor *n***, where *n* is the number of the COR to which you want to assign FEAC. Press **Enter**.

The system displays the **Class of Restriction** screen ([Figure 91: Class of Restriction screen](#) on page 474).

Figure 91: Class of Restriction screen

change cor 1

Page 1 of 4

CLASS OF RESTRICTION

COR Number: 1

COR Description:

FRL: 7

Can Be Service Observed? y

Can Be A Service Observer? y

Partitioned Group Number: 1

Priority Queuing? n

Restriction Override: none

Restricted Call List? n

Access to MCT? y

Group II Category For MFC: 7

Send ANI for MFE? n

MF ANI Prefix:

Hear System Music on Hold? y

APLT? y

Calling Party Restriction: none

Called Party Restriction: none

Forced Entry of Account Codes? y

Direct Agent Calling? y

Facility Access Trunk Test? n

Can Change Coverage? n

Fully Restricted Service? n

Hear VDN of Origin Annc.? y

Add/Remove Agent Skills? y

Automatic Charge Display? n

PASTE (Display PBX Data on Phone)? y

Can Be Picked Up By Directed Call Pickup? n

Can Use Directed Call Pickup? n

Group Controlled Restriction: inactive

2. In the **Forced Entry of Account Codes** field, perform one of the following actions:
 - If you want all users to enter an account code for calls that require an account code, type **y**.
 - If you do not want all users to enter an account code for calls that require an account code, type **n**.
3. Press **Enter** to save your changes.

Assigning FEAC to a user

To assign FEAC to a user:

1. Type **change station *n***, where *n* is the number of the user extension to which you want to assign FEAC. Press **Enter**.

The system displays the **Station** screen ([Figure 92: Station screen](#) on page 475).

Figure 92: Station screen

change station 1014		Page 1 of X
STATION		
Extension: 1014	Lock Messages? n	BCC: 0
Type:	Security Code:	TN: 1
Port:	Coverage Path 1:	COR: 1
Name:	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Personalized Ringing Pattern: 3	
Data Module? n	Message Lamp Ext: 1014	
Speakerphone: 2-way	Mute button enabled? y	
Display Language? English	Expansion Module?	
Model:		
Survivable GK Node Name:	Media Complex Ext:	
	IP Softphone? y	
	Remote Office Phone? y	

2. In the **COR** field, type the number of the COR that requires the user to enter an account code.
3. Press **Enter** to save your changes.
4. Type **change trunk-group *n***, where *n* is the number of the trunk group to which you want to assign FEAC. Press **Enter**.

The system displays the **Trunk Group** screen ([Figure 93: Trunk Group screen](#) on page 476).

Figure 93: Trunk Group screen

change trunk-group 1
Page 1 of 22

TRUNK GROUP

Group Number: 1	Group Type: isdn	CDR Reports: y
Group Name: GERT tg1 tf Lulu tg21 PRI	COR: 1	TN: 1 TAC: 354
Direction: two-way	Outgoing Display? y	Carrier Medium: PRI/BRI
Dial Access? y	Busy Threshold: 255	Night Service:
Queue Length: 0		
Service Type: tie	Auth Code? n	TestCall ITC: rest
	Far End Test Line No:	
TestCall BCC: 4		
TRUNK PARAMETERS		
Codeset to Send Display: 6	Codeset to Send National IEs: 6	
Max Message Size to Send: 260	Charge Advice: none	
Supplementary Service Protocol: a	Digit Handling (in/out): enbloc/enbloc	
Trunk Hunt: cyclical	QSIG Value-Added? n	
	Digital Loss Group: 13	
Calling Number - Delete:	Insert:	Numbering Format: pub-unk
Bit Rate: 1200	Synchronization: async	Duplex: full
Disconnect Supervision - In? y	Out? n	
Answer Supervision Timeout: 0		

5. In the **COR** field, type the number of the COR that requires a user to enter an account code for calls that use this trunk group.
6. Press **Enter** to save your changes.

Assigning privacy digits for a user

Prerequisites

You must complete the following actions before you can assign privacy digits for a user:

Assign the system-wide privacy digits

1. Type **change system-parameters cdr**. Press **Enter**.

The system displays the **CDR System Parameters** screen ([Figure 94: CDR System Parameters screen](#) on page 477).

Figure 94: CDR System Parameters screen

change system-parameters cdr		Page 1 of 2
CDR SYSTEM PARAMETERS		
Node Number (Local PBX ID): 18	CDR Date Format: month/day	
Primary Output Format: customized	Primary Output Endpoint: CDR1	
Secondary Output Format:		
Use ISDN Layouts? n		
Use Enhanced Formats? n	Condition Code 'T' For Redirected Calls? n	
Modified Circuit ID Display? n	Remove # From Called Number? y	
Record Outgoing Calls Only? n	Intra-switch CDR? y	
Suppress CDR for Ineffective Call Attempts? y	Outg Trk Call Splitting? y	
Disconnect Information in Place of FRL? n	Outg Attd Call Record? y	
	Interworking Feat-flag? y	
Force Entry of Acct Code for Calls Marked on Toll Analysis Form? n		
	Calls to Hunt Group - Record: member-ext	
Record Called Vector Directory Number Instead of Group or Member? n		
Record Agent ID on Incoming? n	Record Agent ID on Outgoing? y	
Inc Trk Call Splitting? y	Inc Attd Call Record? n	
Record Non-Call-Assoc TSC? n	Call Record Handling Option: warning	
Record Call-Assoc TSC? n	Digits to Record for Outgoing Calls: outpulsed	
Privacy - Digits to Hide: 0	CDR Account Code Length: 4	

2. In the **Privacy - Digits to Hide** field, type the number of user-dialed digits that the system replaces with blanks when the system generates a CDR record of the call.
3. Press **Enter** to save your changes.

Assigning CDR privacy to a user:

1. Type **change station n**, where **n** is the number of the user extension to which you want to assign CDR privacy. Press **Enter**.

The system displays the **Station** screen ([Figure 95: Station screen](#) on page 478).

Figure 95: Station screen

change station 75001		Page 2 of X
STATION		
FEATURE OPTIONS		
LWC Reception? spe	Auto Select Any Idle Appearance? n	
LWC Activation? y	Coverage Msg Retrieval? y	
LWC Log External Calls? n	Auto Answer: none	
CDR Privacy? n	Data Restriction? n	
Redirect Notification? y	Idle Appearance Preference? n	
Per Button Ring Control? n	Restrict Last Appearance? y	
Bridged Call Alerting? n		
Active Station Ringing: single		
H.320 Conversion? n	Per Station CPN - Send Calling Number? _	
Service Link Mode: as-needed		
Multimedia Mode: basic		
MWI Served User Type: _____	Display Client Redirection? n	
Automatic Moves:	Select Last Used Appearance? n	
AUDIX Name:	Coverage After Forwarding? _	
Recall Rotary Digit? n	Multimedia Early Answer? n	
Remote Softphone Emergency Calls: as-on-local Direct IP-IP Audio Connections? n		
Emergency Location Ext: 75001 IP Audio Hairpinning? n		

2. Click **Next** until you see the **CDR Privacy?** field.
3. In the **CDR Privacy?** field, perform one of the following actions:
 - If you want the system to replace some of the digits that the user dials, when the system generates a CDR record of the call, type **y**.
 - If you do not want the system to replace some of the digits that the user dials, when the system generates a CDR record of the call, type **n**.
4. Press **Enter** to save your changes.

Administering the CDR system parameters

To administer the CDR system parameters for your system:

1. Type **change system-parameters cdr**. Press **Enter**.

The system displays the **CDR System Parameters** screen ([Figure 96: CDR System Parameters screen](#) on page 479).

Figure 96: CDR System Parameters screen

change system-parameters cdr		Page 1 of 2
CDR SYSTEM PARAMETERS		
Node Number (Local PBX ID): 18	CDR Date Format: month/day	
Primary Output Format: customized	Primary Output Endpoint: CDR1	
Secondary Output Format:		
Use ISDN Layouts? n		
Use Enhanced Formats? n	Condition Code 'T' For Redirected Calls? n	
Modified Circuit ID Display? n	Remove # From Called Number? y	
Record Outgoing Calls Only? n	Intra-switch CDR? y	
Suppress CDR for Ineffective Call Attempts? y	Outg Trk Call Splitting? y	
Disconnect Information in Place of FRL? n	Outg Attd Call Record? y	
	Interworking Feat-flag? y	
Force Entry of Acct Code for Calls Marked on Toll Analysis Form? y		
	Calls to Hunt Group - Record: member-ext	
Record Called Vector Directory Number Instead of Group or Member? n		
Record Agent ID on Incoming? n	Record Agent ID on Outgoing? y	
Inc Trk Call Splitting? y	Inc Attd Call Record? n	
Record Non-Call-Assoc TSC? n	Call Record Handling Option: warning	
Record Call-Assoc TSC? n	Digits to Record for Outgoing Calls: outpulsed	
Privacy - Digits to Hide: 0	CDR Account Code Length: 4	

2. In the **Inc Trk Call Splitting?** field, perform one of the following actions:

- If you want an incoming trunk call, that is conferenced or transferred to a local extension that is optioned for Intraswitch CDR, to produce an incoming trunk call record, type **y**.

If you set the **Inc Trk Call Splitting?** field to **y**, you must set the **Record Outgoing Calls Only** field to **n**.

- If you do not want an incoming trunk call, that is conferenced or transferred to a local extension that is optioned for Intraswitch CDR, to produce an incoming trunk call record, type **n**.

3. In the **Record Outgoing Calls Only** field, perform one of the following actions:

- If you only want the system to record outgoing calls, type **y**.
- If you want the system to record both incoming and outgoing calls, type **n**.

4. In the **Call Record Handling Option** field, perform one of the following actions:

- Type **reorder** if you want the system block calls generate reorder tone when the buffer is full. If you choose this option, no one can make or receive calls if the system cannot generate CDR records for the calls.
- Type **warning** if you want the system stop recording call when the buffer is full. If the buffer is full, and you choose this option, the system generates a minor alarm.

Warning is the system default for this field. Note that if you change the default, the system might redirect the ACD calls and the vector calls the system records for CDR.

- Type **attendant** if you want the system to route all the calls to the attendant as non-CDR calls.

Note that if you change the system default of **warning**, ACD calls and vector calls that are measured by CDR might be redirected. Also note that the system displays the **Call Record Handling Option** field only for DEFINITY R. The system uses the information in this field to control call routing when:

- New calls come in.
- The CDR link is not operating.
- The buffer is full.

5. In the **Calls to Hunt Group-Record** field, perform one of the following actions:

- If you want the system to record the extension of the telephone or data terminal where the call terminates, type **member-ext**.
- If you want the system to record the extension that the user dials, type **group-ext**.

6. In the **CDR Account Code Length** field, type the number of digits that you want the system to record when a user enters an account code. For some record formats, the system overwrites the information in other fields if the account code is too long.

7. In the **CDR Date Format** field, perform one of the following actions:

- If you want to use the month and day date format for the date stamp that starts each new day of call records, type **month/day**.
- If you want to use the day and month date format for the date stamp that starts each new day of call records, type **day/month**.

8. In the **Condition Code 'T' for Redirected Calls** field, perform one of the following actions:

- If you want the system to record condition code *T* for both CDR records of the call that the system automatically redirects off the server that runs Communication Manager, type **y**.
- If you want the system to record the condition codes that are usually associated with the **Record Outdoing Call Only** field for calls that the system automatically redirects off the server that runs Communication Manager, type **n**.

9. In the **Digits to Record for Outgoing Calls** field, perform one of the following actions:
- To record the digits that a user dials, type **dialed**.
 - To record the digits that the software actually sends out over the trunk, type **outpulsed**. This information includes any additions or deletions that take place during routing.
10. In the **Disconnect Information in Place of FRL** field, perform one of the following actions:
- If you want the system to replace the **Facility Restriction Level (FRL)** field with the call disconnect information, type **y** . You can use the call disconnect information to isolate problems between the DEFINITY R and the telephone network.
 - If you want the system to record the facilities restriction level (FRL) of the call, type **n**.
11. In the **EIA Device Bit Rate** field, type the baud of the CDR device that is connected to the Electronic Industries Association (EIA) port. The valid bauds for this field are:
- 300
 - 1200
 - 2400
 - 4800
 - 9600

Note that the system displays this field only if either the **Primary Output Format** field or the **Secondary Output Format** field is set to **eia**, and then only for a DEFINITY SI.

12. In the **Inc Attd Call Record** field, perform one of the following actions:
- If you want the system to generate separate records of the attendant portions of incoming calls that the attendant transfers or conferences, type **y**.
 - If you do not want the system to generate separate records of the attendant portions of incoming calls that the attendant transfers or conferences, type **n**.

Note that the system displays this field only when the **Inc Trk Call Splitting** field is set to **y**.

13. In the **Inc Trk Call Splitting** field, perform one of the following actions:
- If you want the system to create separate records for each portion of an incoming call that is transferred or conferenced, type **y**.
 - If you do not want the system to create separate records for each portion of an incoming call that is transferred or conferenced, type **n** .

Note that the system only displays this field when the **Record Outgoing Calls Only** field on the **System Parameters CDR** screen is set to **n**.

14. In the **Interworking Feat-flag** field, perform one of the following actions:

- If you want the system to record, in the **Feature Flag** field of a CDR record, that a call is an interworked outgoing ISDN call, type **y**.

An interworked call is a call that passes through more than one ISDN node.

- If you want the system to record, in the **Feature Flag** field of a CDR record, that there is no answer supervision for interworked calls, type **n**.

15. In the **Intra-Switch CDR** field, perform one of the following actions:

- If you want the system to record calls within the server. If you type **y**, you must administer the **Intraswitch CDR** screen to specify the extensions that you want the system to monitor, type **y**.
- If you do not want the system to record calls within the server, type **n**.

16. In the **Modified Circuit ID Display** field, perform one of the following actions:

- If you want the system to display the circuit ID in the actual format of 100's, 10's units, for example, if you want the system to display circuit ID 123 as 123, type **y**. Verify that the output device of your system can accept this format.
- To display the circuit ID in its default format (10's, units, 100's). For example, the system displays circuit ID 123 appears as 231, type **n**.

The information in the **Modified Circuit ID Display** field pertains to the following CDR output formats:

- Printer
- TELESEER
- 59-character

The **Node Number (Local PBX ID)** field is a display-only field that is set to the distributed communications system (DCS) switch node number in a network of switches.

17. In the **Outg Attd Call Record** field, perform one of the following actions:

- If you want the system to generate separate records of the attendant portions of outgoing calls that the attendant transfers or conferences, type **y**.
- If you do not want the system to generate separate records of the attendant portions of outgoing calls that the attendant transfers or conferences, type **n**.

Note that the system displays this field only when the **Outg Trk Call Splitting** field is set to **y**.

18. In the **Outg Trk Call Splitting** field, perform one of the following actions:

- If you want the system to create separate records for each portion of an outgoing call that is transferred or conferenced, type **y**.
- If you do not want the system to create separate records for each portion of an outgoing call that is transferred or conferenced, type **n**.

19. In the **Primary Output Endpoint** field, perform one of the following actions:

- If the system uses the EIA port to connect the CDR device, type **eia**. This option is not valid for DEFINITY R systems.
- Type the extension of the data module that links the primary output device to the server.
- If the CDR device connects over a TCP/IP link, and the TCP/IP link is defined as CDR1 on the **IP Services** screen, type **CDR1**.
- If the CDR device connects over a TCP/IP link, and the TCP/IP link is defined as CDR2 on the **IP Services** screen, type **CDR2**.

20. In the **Primary Output Format** field, perform one of the following actions:

- Type **customized** if you do not want to use the standard CDR record formats. If you use a customized record format, your system must have call accounting software that is also customized to receive the customized records. Talk with your call accounting vendor before you select this option.
- Type **printer** if you want the system to send the CDR record formats to a printer instead of to a record collection system or to a call accounting system.
- Type the standard record format that you want to use on your system. The valid standard record formats are:
 - 59-char
 - expanded
 - lsu
 - lsu-expand
 - int-direct
 - int-isdn
 - int-process
 - TELESEER
 - unformatted

The standard record format that you choose must be compatible with the call accounting software on your system. To ensure that the standard record format that you choose is compatible with your call accounting system, talk with your vendor or see the call accounting system documentation.

21. In the **Privacy - Digits to Hide** field, type the number of dialed number digits that you want the system to hide for an extension with the **CDR Privacy** field on the **Station** record that is set to **y**. The valid entries for the **Privacy - Digits to Hide** field are **0** through **7**.

The system hides the dialed digits from right to left. If you type **4** in the **Privacy - Digits to Hide** field, and the user dials 5551234, the system records the dialed number as 555.

22. In the **Record Agent ID on Incoming** field, perform one of the following actions:

- If you want the system to record the login ID of the EAS agent in the **Dialed Number** field of the CDR record, type **y**.
- If you want the system to record the physical extension in the **Dialed Number** field of the CDR record, type **n**.

The system displays the **Record Agent ID on Incoming** field only if the **Expert Agent Selection (EAS)** field on the **Optional Features** screen is set to **y**.

You cannot use both the **Called VDN** field and the **Agent Login ID Instead of Group or Member** field. Only one of these fields can be set to **y**.

23. In the **Record Agent ID on Outgoing** field, perform one of the following actions:

- If you want the system to record the login ID of the EAS agent in the **Dialed Number** field of the CDR record, type **y**.
- If you want the system to record the physical extension in the **Dialed Number** field of the CDR record, type **n**.

The system displays the **Record Agent ID on Outgoing** field only if the **Expert Agent Selection (EAS)** field on the **Optional Features** screen is set to **y**.

24. In the **Record Call-Assoc TSC** field, perform one of the following actions:

- If you want the system to generate records for call-associated temporary signaling connections, type **y**.

Consider the capacity of your call collection device before you decide to generate records for call-associated noncall-associated/temporary-signaling connection (TSCs).

- If you do not want the system to generate records for call-associated TSCs, type **n**.

25. In the **Record Called Vector Directory Number Instead of Group or Member** field, perform one of the following actions:

- If you want the system to record the Vector Directory Number (VDN) in the **Dialed Number** field of the CDR record for calls that the system routes to a hunt group because of a vector, type **y**. If the system routes a call through more than one VDN, the system records the first VDN in the **Dialed Number** field of the CDR record.
- If you want the system to record the group number or the member number in the **Dialed Number** field of the CDR record for calls that the system routes to a hunt group because of a vector, type **n**.

You cannot use both the **Called VDN** field and the **Agent Login ID Instead of Group or Member** field. Only one of these fields can be set to **y**.

26. In the **Record Non-Call-Assoc TSC** field, perform one of the following actions:

- If you want the system to create records for noncall-associated temporary signaling connections, type **y**.

Consider the capacity of your call collection device before you decide to generate records for call-associated TSCs.

- If you do not want the system to generate records for noncall-associated TSCs, type **n**.

A TSC is a virtual connection that is established within an ISDN D-channel. For more information, see the DEFINITY® Communications System Generic 2.2 and Generic 3 V2 DS1/CEPT1/ISDN PRI Reference.

27. In the **Record Outgoing Calls Only** field, perform one of the following actions:

- If you want the system to record only outgoing calls type **y**.
- If you want the system to record incoming and outgoing calls, type **n**.

28. In the **Remove # From Called Number** field, perform one of the following actions:

- If you want the system remove the pound sign (#) or the letter E from the **Dialed Number** field of the call detail record, type **y**.

Verify that your output device can accept this format.

- If you want the system to record the trailing pound sign (#) or the letter E in the **Dialed Number** field whenever interdigit time out occurs or users dial the pound sign # to indicate the end of a dialed string, type **n**.

29. In the **Secondary Output Endpoint** field, perform one of the following actions:

- If the system uses the EIA port to connect the CDR device, type **eia**. This option is not valid for DEFINITY R systems.
- Type the extension of the data module that links the primary output device to the server.
- If the CDR device connects over a TCP/IP link, and the TCP/IP link is defined as CDR1 on the **IP Services** screen, type **CDR1**.

The system displays the **Secondary Output Endpoint** field when the you administer the **Secondary Output Format** field.

30. In the **Secondary Output Format** field, type the formats that you want your system to use for a secondary output device. The valid formats for a secondary out device are:

- customized
- int-direct
- int-process
- lsu
- unformatted



CAUTION:

Ensure that only qualified service personnel administer a secondary output device. This option can cause loss of data when the buffer contains large amounts of data.

31. In the **Suppress CDR for Ineffective Call Attempts** field, perform one of the following actions:

- if you want the system to ignore ineffective call attempts, type **y**. Perform this action if you have limited storage space for CDR records and the CDR records often overrun the buffer.
- If you want the system to record ineffective call attempts, type **n**.

Ineffective call attempt information shows you how often your users cannot place outgoing calls, or if numerous incoming calls are not completed. You can also use the information to document attempts to contact a client when you use ISDN trunks.

Your system requires more space for records if the system records ineffective call attempts than if the system does not record ineffective call attempts. Ineffective call attempts are calls that the system blocks because:

- The user does not have sufficient calling privileges.
- All the outgoing trunks are busy.
- Incoming or outgoing trunks are unavailable because of trunk usage allocation for ISDN Call-by-Call Service Selection trunks.
- Incoming calls have an network-specific facility (NSF) mismatch.
- A cause value is provided for ISDN calls that are not complete at the far end.

The system record the ineffective call attempt as condition code E.

32. In the **Use Enhanced Formats** field, perform one of the following actions:

- If you want to use the enhanced version of the specified primary output format in you system, type **y**. You cannot use enhanced formats and ISDN formats at the same time.
- If you do not want to use the enhanced version of the specified primary output format, type **n**.

The enhanced formats provide additional information about the time a call is in a queue and about ISDN call charges. The **Use Enhanced Formats** field pertains to following output formats:

- Expanded
- TELESEER
- Lsu
- Printer
- Unformatted

33. In the Use **ISDN Layouts** field, perform one of the following actions:

- To use the ISDN version of the specified primary output format, type **y**. You cannot use ISDN formats and enhanced formats at the same time.
- If you do not want to use the ISDN version of the specified primary output format, type **y**.

The ISDN formats provide more accurate information about the IXC and the ISDN network services that are used for a call. The **Use ISDN Layouts** field pertains to the following output formats:

- Lsu
- Printer
- Any format with an ISDN layout, such as TELESEER

34. Click **Next** to see the second page of the **CDR System Parameters** screen ([Figure 97: CDR System Parameters screen](#) on page 487).

Note:

The system displays this second **CDR System Parameters** screen only if the **Primary Record Format** field is set to **customized**.

Figure 97: CDR System Parameters screen

change system-parameters cdr			Page 2 of 2		
CDR SYSTEM PARAMETERS					
Data Item - Length		Data Item - Length		Data Item - Length	
1: date	- 6	17: clg-num/in-tac	- 10	33:	-
2: space	- 1	18: space	- 1	34:	-
3: time	- 4	19: bandwidth	- 2	35:	-
4: space	- 1	20: space	- 1	36:	-
5: sec-dur	- 5	21: in-crt-id	- 3	37:	-
6: space	- 1	22: space	- 1	38:	-
7: cond-code	- 1	23: out-crt-id	- 3	39:	-
8: space	- 1	24: space	- 1	40:	-
9: feat-flag	- 1	25: return	- 1	41:	-
10: space	- 1	26: line-feed	- 1	42:	-
11: code-dial	- 4	27:	-	43:	-
12: space	- 1	28:	-	44:	-
13: code-used	- 4	29:	-	45:	-
14: space	- 1	30:	-	46:	-
15: dialed-num	- 10	31:	-	47:	-
16: space	- 1	32:	-	48:	-
Record length = 67					

35. In the **Data Item** field, type the data items in the order that you want the items to appear in the customized CDR record.

You must include at least three fields on this **CDR System Parameters** screen if you want to have a customized CDR record. The first field can be any field that you choose from [Table 45: Valid data item entries](#) on page 488. The last two fields items in a record must be **line-feed** and **return**, in that order.

Table 45: Valid data item entries

Data item	Length	Data item	Length
acct-code	15	ins	3
attd-console	2	isdn-cc	11
auth-code	7	ixc-code	4
bandwidth	2	ma-uui	1
bcc	1	node-num	2
calling-num	15	null	1
clg-pty-cat	2	out-crt-id	3
clg-num/ in-tac	10	ppm	5
code-dial	4	res-flag	1
code-used	4	return	1
cond-code	1	sec-dur	5
date	6	space	1
dialed-num	23	time	4
duration	4	tsc_ct	4
feat-flag	1	tsc_flag	1
fri	1	vdn	1
in-crt-id	3		
in-trk-code	4		
line-feed	1		

36. In the **Length** field, type the maximum length of each data item, if the length of the data item differs from the default length.

You must type **6** for the length of any date field to ensure proper output.

In some cases, the system enforces a default field length.

The **Record Length** field is a display-only field that contains the sum of all the numbers that you type in all the of the Length fields. If you change a Length field, the system automatically changes the number in the **Record Length** field.

37. Press **Enter** to save your changes.

Administering CDR for a trunk group

To administer CDR for a trunk group:

1. Type **change trunk-group *n***, where *n* is the number of the trunk group for which you want to administer CDR. Press **Enter**.

The system displays the **Trunk Group** screen ([Figure 98: Trunk Group screen](#) on page 489).

Figure 98: Trunk Group screen

change trunk-group 1		Page 1 of 22
TRUNK GROUP		
Group Number: 1	Group Type: isdn	CDR Reports: y
Group Name: GERT tg1 tf Lulu tg21 PRI	COR: 1	TN: 1 TAC: 354
Direction: two-way	Outgoing Display? y	Carrier Medium: PRI/BRI
Dial Access? y	Busy Threshold: 255	Night Service:
Queue Length: 0		
Service Type: tie	Auth Code? n	TestCall ITC: rest
	Far End Test Line No:	
TestCall BCC: 4		
TRUNK PARAMETERS		
Codeset to Send Display: 6	Codeset to Send National IEs: 6	
Max Message Size to Send: 260	Charge Advice: none	
Supplementary Service Protocol: a	Digit Handling (in/out): enbloc/enbloc	
Trunk Hunt: cyclical	QSIG Value-Added? n	
	Digital Loss Group: 13	
Calling Number - Delete:	Insert:	Numbering Format: pub-unk
Bit Rate: 1200	Synchronization: async	Duplex: full
Disconnect Supervision - In? y Out? n		
Answer Supervision Timeout: 0		

2. In the **Answer Supervision Timeout** field, perform one of the following actions:

- If the **Receive Answer Supervision** field is set to **n**, type the number of seconds that you want the system to wait, before the system acts as if answer supervision was received from the far end.

The system uses the timing information for outgoing and two-way trunks. For a cut-through operation, the system starts tracking the time after the system sends each outgoing digit. The system stops tracking the time after the far end sends answer supervision. If the timer expires, the system acts as if answer supervision was received. With a senderized operation, the system starts tracking the time after the system sends the last collected digit.

- If the **Receive Answer Supervision** field is set to **y**, type **0**.

Note that the **Answer Supervision Timeout** field does not override answer supervision sent from the network or from **DS1** port circuit timers. To control answer supervision that is sent by **DS1** firmware, you must set the **Outgoing End of Dial (sec)** field on the Administrable Timers page of the **Trunk Group** screen.

3. In the **CDR Reports** field, perform one of the following actions:

- If you want the system to generate records for all the outgoing calls on this trunk group, type **y**.

If the **Record Outgoing Calls Only** field on the **CDR System Parameters** screen is **n**, incoming calls on this trunk group also generate call detail records.

- If you do not want calls that use this trunk group to generate CDR records, type **n**.
- If you want the system to generate both incoming and outgoing CDR records, type **r** for a ring interval,. The system also generates the ring interval CDR records that [Table 46: CDR ring interval records](#) on page 490 shows.

Table 46: CDR ring interval records

Type	Description
Abandoned calls	The system creates a record with condition code H. Condition code H indicates the interval from the start of ringing until the call is abandoned.
Answered calls	The system creates a record with condition code G. Condition code G indicates the interval from the start of ringing until the call is answered.
Calls to busy stations	The system creates a record with condition code I. condition code I indicates a recorded interval of 0.

For ISDN trunk groups, the **Charge Advice** field affects the CDR information. For central office (CO), direct inward and outward dialing (DIOD), foreign exchange (FX), and wide area telecommunications service (WATS) trunk groups, the **Analog PPM** field affects the CDR information.

4. In the **Disconnect Supervision-In** field, perform one of the following actions:

- Type **y** if you want:

- Trunk-to-trunk transfers that involve this trunk group

If you want trunk-to-trunk transfer in your system, you must also set the **Transfer** field on the **Feature-Related System Parameters** screen to **y**.

- To make the far end server or switch responsible for releasing the trunk, when the far end server sends a release signal as the calling party releases an incoming call.
- To enhance Network Call Redirection

- Type **n** if:

- You do not want trunk-to-trunk transfers that involve this trunk group.
- The far end server does not provide a release signal.
- The hardware in your system cannot recognize a release signal.
- You prefer to use timers for disconnect supervision on incoming calls.

The system displays the **Disconnect Supervision-In** field if the **Direction** field is set to **incoming** or **two-way**.

If the **Direction** field is set to **outgoing**, the system sets the **Disconnect Supervision-In** field to **n**.

The value in the **Disconnect Supervision-In** field determines whether the system receives disconnect supervision for incoming calls over this trunk group.



CAUTION:

The system does not allow trunk-to-trunk transfers unless at least one party on the call can provide disconnect supervision. If you administer the **Disconnect Supervision-In** field incorrectly, you can cause trunks to become unusable until the problem is detected and the trunks are reset.

For example, if a user connects two trunks through the use of the Conference feature or the Transfer feature, and a far end media server on the resulting connection does not provide disconnect supervision, the trunks are not released. The trunks are not released because the system cannot detect the end of the call.

Usually, the COs in the United States provide disconnect supervision for incoming calls, but do not provide disconnect supervision for outgoing calls. Public networks in most other countries do not provide disconnect supervision for incoming calls or outgoing calls. Talk with your network services provider to determine if the public networks in your area provide disconnect supervision.

5. Press **Enter** to save your changes.

Administering CDR for a data module

To administer CDR for a data module:

- 1. Type **change data-module *n***, where *n* is the number of the data module for which you want to administer CDR. Press **Enter**.

The system displays the **Data Module** screen ([Figure 99: Data Module screen](#) on page 492 and [Figure 100: Data Module screen](#) on page 492).

Figure 99: Data Module screen

change data-module 30

DATA MODULE

Page 1 of 2

Data Extension: 30

Name: 27

BCC:

Type: data-line__

COS: 1

Port: _____

COR: 1

ITC: restricted__

TN: 1

Connected to: dte

ABBREVIATED DIALING

List1:

SPECIAL DIALING OPTION:

ASSIGNED MEMBER (Station with a data extension button for this data module)

Ext

Name

1: 1002

27 character

station name

Figure 100: Data Module screen

change data-module 30

DATA MODULE

Page 2 of 2

CAPABILITIES

KYBD Dialing? y

Configuration? n

Busy Out? n

SPEEDS

Low? y

1200? y

4800? y

19200? y

300? y

2400? y

9600? y

Autoadjust? n

OPTIONS

Permit Mismatch? n

Dial Echoing? y

Disconnect Sequence: two-breaks

Answer Text? y

Parity: even

Connected Indication? y

The system displays the **Ext** and **Name** display-only fields in the **Abbreviated Dialing** area. The fields contain the extension number and the name of the users who have associated data extension buttons, and who share this data module.

2. In the **BCC** field, perform one of the following actions:

- Type a **1** if the speed is 56 kbps.
- Type a **2, 3, or 4** if the speed is 64 kbps.

The system compares the speed setting that you assign here with the speed setting in an associated routing pattern. The system compares the two speed settings when calls that attempt to use the data module are not completed.

The system displays the **BCC** field appears if the **ISDN-PRI** field or the **ISDN-PRI Trunks** field on the **Optional Features** screen is set to **y**.

3. The **Capabilities** area contains three fields.

- In the **Configuration** field, perform one of the following actions:
 - If you want to view and change options from originating or receiving DTEs, such as non intelligent terminals, type **y**.
 - If you do not want view and change options from intelligent devices such as computers, type **n**.

The system displays the **Configuration** field only when the **KYBD Dialing** field on the **Data Module** screen is set to **y**.

- In the **KYBD Dialing** field, perform one of the following actions:
 - If you want the users to dial calls from a keyboard, and to allow the data module endpoint to transmit and receive text during call origination or call termination, type **y**.
If you type **y**, you must also type **n** in the **Low** field in the **Speeds** area of the **Data Module** screen.
 - If you do not want the users to dial calls from a keyboard, type **n**.
If you type **n**, the data module endpoint cannot transmit and receive text during call origination and call termination.
If you type **n**, data calls can be answered, but text feedback is not provided.
- In the **Busy Out** field, perform one of the following actions:
 - If you want the system to place the data line circuit (DLC) port in a busyout state so calls do not terminate at the data terminal equipment (DTE) when the DTE control lead to the DLC drops, type **y**. Use this option for DTEs that are members of a hunt group.
 - If you want the system to keep the DLC port out of a busyout state when the DTE control lead to the DLC drops, type **n**.

4. The **Circuit Switched Data Attributes** area contains information that is used with 7500 data modules and World Class BRI data modules.

Note that the fields in the **Circuit Switched Data Attributes** area contain default information. The default information is for modem pooling conversion resource insertion when the endpoint does not support the data query capability or the administered connections. The information in the fields has no significance for data modules that provide data query, such as Avaya-supported ISDN-BRI data modules. Use the system default settings for Avaya ISDN-BRI data modules or World Class ISDN-BRI data modules.

- In the **Default Duplex** field, perform one of the following actions:
 - Type **full** to allow simultaneous, two-way transmission.,which is duplex mode.
 - Type **half** to allow only one transmission direction at a time, which is half-duplex mode.
- In the **Default Mode** field, perform one of the following actions:
 - Type **sync** for synchronous data mode.
 - Type **async** for asynchronous data mode.
- In the **Default Speed** field, type the data rate. The valid entries are:
 - 1200
 - 2400
 - 4800
 - 9600
 - 19200
 - 56000 when the **Default Mode** field is set to **sync**
 - 64000 when the **Default Mode** field is set to **sync**

5. The system displays the **Connected To** field, when the **Type** field contains either **dpm** or **data-line**.

In the **Connected To** field, perform one of the following actions:

- If the Asynchronous Data Unit (ADU) is connected to a data terminal equipment (DTE), type **dte**.
- If the ADU is connected to an information systems network, type **isn**.

6. In the **COR** field, type the number of the Class of Restriction (COR) for this data module. Valid entries are **0** through **95**.
7. In the **COS** field, type the number of the Class of Service (COS) for this data module. Valid entries are **1** through **15**.

8. The **Data Module Capabilities** area contains three fields with information for the 7500 data modules and the World Class BRI (WCBRI) data modules.

- The **Default Data Applications** field identifies the mode that the system uses to originate calls when the calling parameters do not specify the mode. The system also uses the mode to terminate trunk calls that do not have administered connections, or for which the bearer capability is unspecified. For more information, see the "Uniform Dial Plan" feature.

In the **Default Data Applications** field, perform one of the following actions:

- Type **M0** to specify mode 0. Use this option for a WCBRI endpoint that the system uses as an administered connection.
- Type **M1** to specify mode 1.
- Type **M2_A** to specify mode 2 asynchronous.
- Type **M2_S** to specify mode 2 synchronous.
- Type **M3/2** to specify mode 3/2 adaptable.
- In the **Default ITC** field, perform one of the following actions:
 - Type **restricted** for a WCBRI endpoint that is an administered connection.
 - Type **unrestricted** for a WCBRI endpoint that is not an administered connection.
- The display-only **MM Complex Voice Ext** field contains the number of the associated telephone in the multimedia complex. The system displays the **MM Complex Voice Ext** field only when the **Multimedia** field is set to **y**.

The field is blank until you type the data module extension in the **MM Complex Data Ext** field on the **Station** screen. When you type the data module extension in the **MM Complex Data Ext** field on the **Station** screen, the system associates the numbers in the **MM Complex Data Ext** and the **MM Complex Voice Ext** fields as two parts of a one-number complex. The one-number complex is the extension of the telephone.

The system displays the data module extension in the display-only **Data Extension** field.

9. In the **ITC** field, perform one of the following actions:

- If the data module can send bits at speeds less than or equal to 56 kbps, type **restricted**. If you type **restricted** in the **ITC** field, the system uses a trunk group for which the **COMM Type** field on the **Trunk Group** screen is set to **rbavd** or **avd** to complete a call from this data module endpoint.

A restricted transmission facility enforces ones density digital transmission. Ones density digital transmission is a sequence of eight digital zeroes that the firmware on the DS1 port board converts to a sequence of seven zeroes and a digital 1.

- If the data module can send bits at a speed up to, and including, 64 kbps, type **unrestricted**. If you type **unrestricted** in the **ITC** field, the system uses a trunk group for which the **COMM Type** field on the **Trunk Group** screen is set to **avd** to complete a call from this data module endpoint. The value **avd** in the **Comm Type** field indicates that the trunk group provides both restricted and unrestricted transmission facilities.

An unrestricted transmission facility does not enforce ones density digital transmission. The DS1 port board firmware does not convert the digital information.

The system does not display the **ITC** field for voice-only stations or BRI stations. The **ITC** field applies only when the **Comm Type** field on the **Trunk Group** screen, that the system uses for an outbound call, is set to **avd** or **rbavd**. The **ITC** field specifies the type of transmission facilities that an ISDN call uses when a call originates from this data module endpoint.

10. In the **List1** field in the **Abbreviated Dialing** area, perform one of the following actions:

- Leave the field blank if you do not want the data module to have an abbreviated dialing list.
- If you want the data module to have an enhanced abbreviated dialing list, type **e**.
- If you want the data module to have a group list, type **g**.

If you type **g**, the system displays a field to the right of the **List1** field. You must type a group list number in this field.

- If you want the data module to have a personal list, type **p**.

If you type a **p**, the system displays a field to the right of the **List1** field. You must type a personal list number in this field.

- If you want the data module to have a system abbreviated dialing list, type **s**.

11. In the **Name** field, perform one of the following actions:

- Type the name of the user who is associated with the data module.
- Leave the field blank.

12. The **Options** area contains six fields.

- In the **Answer Text** field, perform one of the following actions:
 - If you want the system to allow text feedback to the DTE when a user answers a call or the system disconnects a call, type **y**. The text feedback includes both DLC-generated text and system-generated text.
 - If you want the system to disable text feedback to the DTE when a user answers a call or the system disconnects a call, and when the DTE that answers a call is a computer or an intelligent device, type **n**. The system still generates the text, but the DLC does not allow the text to be delivered to the DTE.

The **Answer Text** field applies to the following call messages:

- Incoming
- Answered
- Disconnected
- Disconnected other end

The system displays the **Answer Text** field only if the **KBDY Dialing** field on the **Data Module** screen is set to **y**.

- In the **Connected Indication** field, perform one of the following actions:
 - If you want the system to generate a "connected" message to the DTE when the system establishes a connection, type **y**.
 - If you do not want the system to generate a "connected" message to the DTE when the system establishes a connection, type **n**.

The system displays the **Connected Indication** field only if the **KBDY Dialing** field on the **Data Module** screen is set to **y**. If the **Connected Indication** field is set to **n**, DLC provides the connection indication when the DLC activates the EIA 232C control lead.

- In the **Dial Echoing** field, perform one of the following actions:
 - If you want the system to echo characters back to the DTE, type **y**.
 - If you do not want the system to echo characters back to the DTE and when an intelligent device provides keyboard dialing, type **n**.

The system displays the **Dial Echoing** field only if the **KBDY Dialing** field on the **Data Module** screen is set to **y**.

- In the **Disconnect Sequence** field, perform one of the following actions:
 - Type **long-break** if you want a break that is greater than 2 seconds.
 - Type **two-breaks** if you want a break that is less than 1 second.

The system displays the **Disconnect Sequence** field only if the **KBDY Dialing** field on the **Data Module** screen is set to **y**.

- In the **Parity** field, type one of the following types of parity:
 - even
 - odd
 - mark
 - space

The system displays the **Parity** field only if the **KBDY Dialing** field on the **Data Module** screen is set to **y**. The DLC generates the parities when the DLC sends call setup text to the DTE. The DLC does not check the parity when the DLC receives dial characters. Select the parity that matches the DTE that connects to the data module.

- In the **Permit Mismatch** field, perform one of the following actions:
 - If you want the DLC to operate at the highest selected speed, which is a higher rate than that of the far end data module, type **y**.
 - If you do not want DLC to operate at the highest selected speed, type **n**.

The **Permit Mismatch** field contains information that allows an EIA interface to operate at a rate that differs from the rate that is agreed upon during the data module handshake. The rate that is agreed upon during the data module handshake is always the highest compatible rate among the speeds that each data module reports.

The information in the **Permit Mismatch** field eliminates the need to change the DTE or DLC speed whenever someone, or something, places a call to or from endpoints that operate at a different speed.

When the **Permit Mismatch** field is set to **y**, the DLC reports the highest optional speed and all the lower speeds, or the previously selected autoadjust speed, during the handshake process.

13. In the **Port** field, type the appropriate values from [Table 47: Port field values](#) on page 498.

Table 47: Port field values

Characters	Description	Value
1-2	cabinet number	01 through 44 (For DEFINITY R configurations) 01 through 03 (For DEFINITY SI configurations) 01 through 64 (For S8700 IP-Connect)
3	carrier	A through E
4-5	slot number	0 through 20
6-7	circuit number	01 through 04 (x.25 circuit pack) 01 through 31 (DEFINITY SI, S8700 IP-Connect (tdm, pdm) configurations) 01 through 16 (ppp for S8700 IP-Connect) 01 through 08 (system-port for S8700 IP-Connect) 17/33 (Ethernet on S8700 IP-Connect)
x	Administration without Hardware	If the Secondary data module? field, contains an n , you can type x in the Port field. A Port field set to x indicates that no hardware is associated with the port assignment.

14. The **Speeds** area contains information about the operating speeds of the data module.

- In the **Low** field, perform one of the following actions:
 - If you want the data line circuit to operate at a speed of 0 to 1800 bps, type **y**.
 - If the **KYBD Dialing** field on the **Data Module** screen is set to **y**, type **n**.
- In the **300**, **1200**, **2400**, **4800**, **9600**, and **19200** fields, perform one of the following actions:
 - If you want the DLC to operate at the speed, type **y**.

You can choose any of the speeds for the DLC. The DLC matches the speed for the duration of the call.

If you select multiple speeds, you must also set the **Autoadjust** field to **n** and select at least three speeds. The speed of the DTE must be the highest speed that you select. The DTE must have the highest speed because the system delivers feedback to the DTE at the highest selected speed.

- If you do not want the DLC to operate at the speed, type **n**.

In the **Autoadjust** field, perform one of the following actions:

- If you want the DLC port to automatically adjust to the operating speed and the parity of the DTE to which the DLC port connects, type **y**.
- If you do not want the DLC port to automatically adjust to the operating speed and the parity of the DTE to which the DLC port connects, type **n**.

The system displays the **Autoadjust** field when the **KYBD Dialing** field on the **Data Module** screen is set to **y**. The **Autoadjust** field applies only to calls that a user originates from a keyboard.

15. In the **Special Dialing Option** field, perform one of the following actions:

- Leave the field blank if you do not want the data module to have special dialing
- If you want the data module to have hot-line dialing, type **hot-line**.

If you type **hot-line**, the system displays the **Abbreviated Dialing Dial Code (from above list)**: field. Type the abbreviated dial code in the **Abbreviated Dialing Dial Code (from above list)**: field. Valid entries are **0** through **999**.

- If you want the data module to have default dialing, type **default**.

If you type **default**, the system displays the **Abbreviated Dialing Dial Code (from above list)**: field. Type the abbreviated dial code in the **Abbreviated Dialing Dial Code (from above list)**: field. Valid entries are **0** through **999**.

16. In the **TN** field, type the tenant partition number of the data module. Valid entries are **1** through **100**.

17. In the **Type** field, perform one of the following actions:

- Type **7500** to assign a 7500 data module.

The 7500 data module supports:

- Automatic TEI
- B-channel, maintenance and management messaging
- **Service Profile Identifier (SPID)** initialization capabilities.

BRI voice endpoints, **BRI** data endpoints, or both **BRI** voice and **BRI** data endpoints are assigned to either the **ISDN-BRI** - 4-wire S/T-NT Interface circuit pack **or** the **ISDN-BRI** - 2-wire U circuit pack. Each circuit pack supports up to 12 ports.

BRI provides a multipoint capability. Therefore, you can administer more than one **ISDN** endpoint, either a voice endpoint or a data endpoint, on one port.

For **BRI**, multipoint administration allows for telephones that have **SPID** initialization capabilities. Multipoint administration is allowed only if no endpoint that is administered on the same port is a fixed tie endpoint, and no station on the same port has B-channel data capability. The system restricts multipoint administration to two endpoints per port.

- Type **data-line** to assign a data line data module.

Use the **Data Line Data Module (DLDM)** screen to assign ports on the Data Line (**DLC**) circuit pack that allow **EIA 232C** devices to connect to the system. The **DLC**, with a companion **ADU**, provides a less expensive data interface to the system than other asynchronous DCP data modules.

The **DLC** supports asynchronous transmissions at speeds of low, and of 300, 1200, 2400, 4800, 9600, and 19200 bps over two-pair, full-duplex lines. These lines can have different lengths, depending on the transmission speed and the wire gauge.

The **DLC** has eight ports. The connection from the port to the **EIA** device is direct, which means that no multiplexing is involved. A single port of the **DLC** is equivalent in functionality to a data module and a digital line port. The **DLC** appears as a data module to the **DTE**, and as a digital line port to the server that runs Communication Manager.

The **DLC** connects the following **EIA 232C** equipment to the system:

- Printers
- Non intelligent data terminals
- Intelligent terminals and personal computers (**PCs**)
- Host computers
- Information Systems Network (**ISN**), **RS-232C** local area networks (**LANs**), or other data switches

- To assigns a DCE interface for processor/trunk data modules, type **pdm** .

Use the **Processor/Trunk Data Module** screen to assign Modular Processor Data Modules (MPDMs) and Modular Trunk Data Modules (MTDMs). Use one screen to assign MPDMs (700D), 7400B, 7400D or 8400B Data Module. Use another screen for MTDMs (700B, 700C, 700E, 7400A). You must complete one screen for each MPDM, 7400B, 7400D, 8400B or MTDM.

The MPDM, 7400B, or 8400B Data Module provides a Data Communications Equipment (DCE) interface. Use the interface for a connection to equipment such as a data terminal, call detail recording (CDR) output device, on-premises administration terminal, Message Server, Property Management System (PMS), AUDIX, and host computers. The MPDM, 7400B, or 8400B Data Module also provides a Digital Communications Protocol (DCP) interface to the digital switch. Note that DCE is the equipment on the network side of a communications link that provides all the functions that are required to make the binary serial data from the source or transmitter compatible with the communications channel.

The MTDM provides an EIA DTE interface for connection to off-premises private line trunk facilities, or a switched telecommunications network and a DCP interface for connection to the digital switch. Note that DTE is the equipment that comprises the endpoints in a connection over a data circuit. For example, in a connection between a data terminal and a host computer, the terminal, the host, and their associated modems or data modules make up the DTE. The MTDM or the 7400A Data Module can also serve as part of a conversion resource for combined modem pooling.

18. Press **Enter** to save your changes.

Identifying the Inter Exchange Carrier

To identify the Inter Exchange Carrier (IXC) in the CDR record:

1. Type **change ixc-codes**. Press **Enter**.

The system displays the **Inter-Exchange Carrier Codes** screens

([Figure 101: Inter-Exchange Carrier Codes screen](#) on page 501) and

([Figure 102: Inter-Exchange Carrier Codes screen](#) on page 501).

Figure 101: Inter-Exchange Carrier Codes screen

change ixc-codes
Page 1 of 2

INTER-EXCHANGE CARRIER CODES

IXC Codes Assignments (Enter up to 15)

CDR IXC Code	IXC Access Number	IXC Name	CDR IXC Code	IXC Access Number	IXC Name
1:	_____	_____	9:	_____	_____
2:	_____	_____	10:	_____	_____
3:	_____	_____	11:	_____	_____
4:	_____	_____	12:	_____	_____
5:	_____	_____	13:	_____	_____
6:	_____	_____	14:	_____	_____
7:	_____	_____	15:	_____	_____
8:	_____	_____			

Figure 102: Inter-Exchange Carrier Codes screen

change ixc-codes
Page 2 of 2

	IXC Prefix	IXC Code Format
1.	_____	_____
2.	_____	_____
3.	_____	_____
4.	_____	_____
5.	_____	_____

2. In the **IXC Access Number** field, type the digits that the user dials, or that AAR/ARS inserts, into the outpulsed digit string so the system can access the IXC. The system does not allow duplicate access numbers in the **Inter-Exchange Carrier Codes** screen.

The system accepts a string of 2 to 11 numbers or the asterisk character (*) in the **IXC Access Number** field.

Call Detail Recording

3. In the **IXC Name** field, type a description of the IXC. The system accepts a 1 to 15 character string in the **IXC Name** field. You can also leave this field blank.
4. In the **IXC Code Format** field, type the format for the IXC code. The valid entries for this field are a:
 - 1 to 4 digit code
 - Asterisk (*)
 - Lower-case x
 - Upper-case X
 - String of 4 lower-case x's (xxxx) to indicate line one
 - String of 3 lower-case x's (xxx) to indicate line two
5. In the **IXC Prefix** field, type the prefix for the IXC code. The valid entries for this field are a:
 - Prefix of 1 to 3 digits
 - Asterisk (*)
 - 101 to indicate line one
 - 10 to indicate line two
6. In the **CDR Account Code Access Code** field, type the access code that a user enters before the user enters a CDR account code.
7. Press **Enter** to save your changes.

Administering CDR for the paging ports

To administer CDR for the paging ports:

- 1. Type **change loudspeaker paging**. Press **Enter**.

The system displays the **Loudspeaker Paging** screen ([Figure 103: Loudspeaker Paging screen](#) on page 503).

Figure 103: Loudspeaker Paging screen

change paging loudspeaker

LOUDSPEAKER PAGING

CDR? _
Voice Paging Timeout (sec): _
Code Calling Playing Cycles: _

PAGING PORT ASSIGNMENTS

Zone	Port	Voice Paging			Code Calling			Location:
		TAC	COR	TN	TAC	COR	TN	
1:	_____	_____	_____	_____	_____	_____	_____	_____
2:	_____	_____	_____	_____	_____	_____	_____	_____
3:	_____	_____	_____	_____	_____	_____	_____	_____
4:	_____	_____	_____	_____	_____	_____	_____	_____
5:	_____	_____	_____	_____	_____	_____	_____	_____
6:	_____	_____	_____	_____	_____	_____	_____	_____
7:	_____	_____	_____	_____	_____	_____	_____	_____
8:	_____	_____	_____	_____	_____	_____	_____	_____
9:	_____	_____	_____	_____	_____	_____	_____	_____
ALL:	_____	_____	_____	_____	_____	_____	_____	_____

- 2. In the CDR field, perform one of the following actions:
 - If you want the system to record CDR information on the paging ports, type **y**.
 - If you do not want the system to record CDR information on the paging ports, type **n**.
- 3. Press **Enter** to save your changes.

Administering the Intra-Switch CDR

To administer Intra-Switch CDR:

- 1. Type **change intra-switch-cdr**. Press **Enter**.

The system displays the Intra-Switch CDR screen ([Figure 104: Intra-Switch CDR screen](#) on page 504).

Figure 104: Intra-Switch CDR screen

change intra-switch-cdr						Page	1 of 2
INTRA-SWITCH CDR							
Assigned Members:		8	of 5000	administered			
1:	70103	19:	37:	55:	73:	91:	
2:	70105	20:	38:	56:	74:	92:	
3:	70112	21:	39:	57:	75:	93:	
4:	70115	22:	40:	58:	76:	94:	
5:	70120	23:	41:	59:	77:	95:	
6:	70122	24:	42:	60:	78:	96:	
7:	70124	25:	43:	61:	79:	97:	
8:	70126	26:	44:	62:	80:	98:	
9:		27:	45:	63:	81:	99:	
10:		28:	46:	64:	82:	100:	
11:		29:	47:	65:	83:	101:	
12:		30:	48:	66:	84:	102:	
13:		31:	49:	67:	85:	103:	
14:		32:	50:	68:	86:	104:	
15:		33:	51:	69:	87:	105:	
16:		34:	52:	70:	88:	106:	
17:		35:	53:	71:	89:	107:	
18:		36:	54:	72:	90:	108:	

- 2. In the **Assigned Members** field, type the local extensions that you want to track with I\ intraswitch CDR. The number of extensions that you can track can vary.
- 3. Press **Enter** to save your changes.

End-user procedures for Call Detail Recording

End-users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Call Detail Recording:

- Associating an account code with a call

To associate an account code with a call:

1. Dial the CDR account code access code that you assigned.
2. Dial an account code.
3. Dial a trunk access code (TAC) or an access code.
4. Dial the telephone number.

Reports for Call Detail Recording

The following reports provide information about the Call Detail Recording feature:

- None

Considerations for Call Detail Recording

This section provides information about how the Call Detail Recording (CDR) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Call Detail Recording under all conditions. The following considerations apply to Call Detail Recording:

- Date and Time

If you do not administer the time of day in your system, the software does not generate CDR records.

If a call is in progress while you change the time of day information, the system does not record the duration of the call in the CDR record. Instead, the system records the numeric sequence 9999 in the CDR record. This sequence indicates that the call was in progress when you changed the time of day information.

- Dial plan

If the dial plan in your system supports 6-digit or 7-digit extensions, only the formats that already support calling numbers that are longer than 7 digits support 6-digit or 7-digit extensions. Such numbers include expanded, unformatted, customized, and international ISDN calling numbers.

All other calling number formats send only 5 digits. If the calling number is a 6-digit or a 7-digit extension, the system sends only the last 5 digits.

The following information applies to the port that the secondary CDR output device uses:

- The data that go to the secondary port must be the same as the data that go to the primary port. You can use the following record types for the secondary output:
 - LSU
 - Int-Direct
 - Int-Process
 - Unformatted
- If the system cannot send records to the primary CDR output device, the system discontinues sending records to the secondary port for 2 minutes. The secondary port must operate at the highest possible speed to prevent the loss of information.
- If the output buffer is full, the system busies out the secondary port for 2 minutes. This action makes system resources available to send data to the primary CDR port before the data is lost. The system continues to busy out the secondary port for 2-minute intervals until fewer than 400 records, or 1800 records for Release 5r and later, remain in the buffer.

Interactions for Call Detail Recording

This section provides information about how the Call Detail Recording (CDR) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Call Detail Recording in any feature configuration.

- Abbreviated Dialing

When a user uses either Abbreviated Dialing or a Facility Busy Indicator button to place a call, all the outpulsed digits appear on the record.

- Answer Detection

CDR starts recording call duration at the time that the circuit pack detects the answer.

Answer Detection provides more accurate call records where tone detection is possible, and Network Answer Supervision is not received.

- Attendant Console

If an attendant-assisted call uses an outgoing trunk, the system records the primary extension of the user who requests the attendant service as the calling number in the CDR record. The system records the primary extension of the user, even if the attendant dialed an outside number.

Condition code 1 indicates an attendant assisted the call.

If the attendant allows through dialing, the system records the primary extension of the user who dialed the number as the calling party. Condition code 1 indicates that an attendant extended a trunk access code (TAC). Condition code 7 indicates that an attendant extended a feature access code (FAC).

If Incoming or Outgoing Attendant Call Record is enabled, the system produces a separate record for the attendant portion of incoming or outgoing calls that the attendant transfers.

With attendant-assisted calls that require an account code, enter the account code before the TAC.

If the attendant redirects an incoming call to an extension, the attendant can dial an account code before the attendant dials the extension number.

There are no intraswitch-optioned attendant calls. However, the system generates intraswitch records for an intraswitch-optioned extension call to an the attendant or for a call from the attendant to an intraswitch-optioned extension. In the case of an attendant-assisted call that involves an intraswitch extension, the system records the extension of the user who called the attendant as the dialing number. The system records the extension to which the attendant extended the call as the dialed number. In this case, the record has condition code 0.

- Avaya Intuity AUDIX

The following example describes CDR for remote Intuity AUDIX over a distributed communications system (DCS). If station A on node 1 forwards calls to Intuity AUDIX on node 2, each switch produces a call record. The record from node 1 contains A as the dialed number. The record from node 2 contains Intuity AUDIX as the dialed number.

If the calling number is on a different switch within the DCS network, or the call comes in over ISDN, the system records the:

- The actual calling number in the **Calling Number** field
- The TAC of the trunk that brings the call into the local switch in the **Incoming Trunk Access Code** field of 24-word records

If the system uses an outgoing trunk when a user forwards, transfers, or conferences an incoming call, the system generates two separate CDR records. The system generates a record for incoming usage, and a record for outgoing trunk usage. The system records AUDIX as the calling number in the outgoing trunk usage record

If Incoming Trunk Call Splitting is enabled, and Transfer out of AUDIX is used, CDR generates two records. The first record contains AUDIX, the second record contains the transferred-to party.

Call Detail Recording

- Authorization Codes

The system records authorization codes in CDR records as follows:

- The account codes do not exceed 5 digits in length for non-ISDN formats and ISDN LSU formats
- The account codes do not exceed 4 digits in length for enhanced LSU formats

The system does not record authorization codes in the 59-character CDR International Processing and International Direct records.

- Automatic Selection of Direct Inward Dialing (DID) Numbers

If the system records an incoming call, the system records the DID extension number, not the room extension number.

- Automatic Alternate Routing (AAR) and Automatic Route Selection (ARS)

For ARS calls, the system records that the:

- ARS call was made
- Calling extension number
- Facilities restriction level (FRL) of the calling extension
- Called number
- TAC of the trunk group that is used for the ARS call
- Time of call completion
- Call duration
- Interexchange carrier (IXC) code, if any

The system does not generate a CDR record if CDR is suppressed for the trunk group that ARS uses. If CDR is not suppressed, the system generates condition code 7. The system records the following information:

- The ARS access code in the **Access Coded Dialed** field
- The TAC for the trunk group that the call used in the **Access Code Used** field.

If an AAR call is placed to a busy trunk group, and CDR is suppressed for that trunk group, the user hears the reorder tone, and the CDR record shows an ineffective call attempt.

If an ARS call is an attendant-assisted call, the CDR record shows the call with condition code 7 instead of condition code of 1. Condition code 7 indicates an ARS call. Condition code 1 indicates an attendant-assisted call. The system generates these condition codes, because CDR is not notified until after the trunk is seized and, in this case, the trunk is not seized until the user dials the number.

With the Forced Entry of Account Codes (FEAC) capability, the system does not use the class of service (COR) of the trunk group to determine if the user must enter an account code, if the system uses ARS to access the trunk.

- Automatic Callback

When the Automatic Callback feature is used for an intraswitch call, the system does not generate a CDR record for the first call attempt, nor for the ringback. However, if intraswitch is enabled for either the calling user or the called user, the system generates a CDR record of the call, if the called user answers and completes the call.

- Automatic Circuit Assurance (ACA)

ACA calls generate intraswitch CDR records if CDR monitors the terminating extension. The originating extension for ACA calls cannot be administered for intraswitch monitoring.

- Automatic Wakeup

The system does not generate CDR intraswitch records for wake-up calls.

- Bridged Call Appearance

The system does not record CDR information about the user who bridges onto a call. Instead, the system records the number that a user dialed in the **Dialed Number** field of the CDR record. The system records the duration of the call when the last party drops off the call.

If the user originates a call over a bridged appearance, the call record contains the calling number of the bridged appearance extension, and not the extension number of the original, calling station.

- Busy Verification of Terminals and Trunks

Attendants and users do not need to enter an account code to make a busy verification.

- Call-by-Call Service Selection

When the system successfully makes a call on a Call-by-Call Service Selection trunk, the system translates the network-specific facility that the system uses for the call into an ISDN network service (INS) number. The system records the INS number in the **INS** field of the CDR record.

If the system is unsuccessful in making a call on a Call-by-Call Service Selection trunk because of an administered trunk usage allocation plan, the system records the INS number in the **INS** field of the CDR Record with condition code *E*.

- CallVisor Adjunct-Switch Application Interface (ASAI)

Call classification competes with CallVisor ASAI switch-classified calls for ports on the call classifier circuit pack. Answer Detection sends a report of a connect event to ASAI.

- Call Coverage

If the system does not route a call to an off-network coverage point, the system records the extension number that the calling user dials as the dialed number when a user answers an incoming call or an intraswitch call at a covering extension.

If the system routes a call to an off-network coverage point, the system records the number at the off-network location as the dialed number. The system records the extension that has the off-network location in its coverage path as the calling number.

Call Detail Recording

- Call Forwarding All Calls

If the system does not forward a call to an off-network location, the system records the number that the user dials as the dialed number.

If the system forwards a call to an off-network location, the system records the number of the off-network location as the dialed number. The system records the extension from which the call was forwarded as the calling number.

The system generates one CDR record for a forwarded intraswitch call. The dialed number in the record is the extension that the calling user dialed.

The system generates two CDR records for a trunk call to a station that the system forwards to another trunk. The first record shows an incoming trunk call to the station. The second record shows an outgoing trunk call from the station.

With the FEAC capability, the system cannot forward to a destination at which a user must enter an account code.

- Call Park

When a user parks an incoming call or an intraswitch call, the system records the extension of the user as the dialed number in the CDR record. The system records the entire time that the incoming trunk is busy as the duration of the incoming call. The system records the time that the call started until the call ends as the call duration for an intraswitch call.

- Call Pickup

The system records the number that the user dials as the dialed number when a member of a pickup group answers an incoming call or an intraswitch call.

- Call Prompting

Call classification competes with Call Prompting for ports on the call classifier circuit pack.

- Call Vectoring

You can administer CDR so the system records the vector directory number (VDN) extension instead of the extension of the Hunt Group or of the member. If you administer CDR so the system records the VDN extension, you override the Calls to Hunt Group - Record option of CDR for incoming call vectoring calls.

Outgoing vector calls generate ordinary outgoing CDR records. The system records the originating extension as the calling number.

The system records the duration of the call from the time that answer supervision is returned for incoming calls to a VDN.

- If the vector returns answer supervision, and the call does not go to another extension, the system records the VDN extension as the called number in the CDR record. The vector can return answer supervision with an announcement, collect, disconnect, or wait with music command.
- If the call terminates to a hunt group, the system records the VDN, the hunt group extension, or the agent extension as the called number in the CDR record.

- If the call terminates to a trunk, CDR generates an:
 - Incoming record with the incoming TAC as the dialed number.
 - Outgoing record with the incoming TAC as the calling number and the digits that are dialed through the vector step as the dialed number.

If you administer member extension for CDR, the system records an incoming call to the station if the system successfully routes a call to the station with the **route-to** command.

The system does not generate ineffective call attempt records for unsuccessful Call Vectoring **route-to** commands.

If a vector interacts with an extension or a group that has Call Forwarding All Calls active, normal Call Forwarding and CDR interactions apply.

Some calls look like intraswitch calls. Such calls include, for example, a call for a station that is administered for intraswitch CDR to a VDN, which becomes an outgoing call on an outgoing trunk. The system does not generate intraswitch CDR records for calls that look like intraswitch calls, but that are not intraswitch calls. The system generates a record with condition code A, which indicates outgoing.

- Call Waiting Termination

The system starts the call duration timer when a user answers an incoming call.

- Centralized Attendant Services (CAS)

The system records the extension of the user who originates a call as the originator of a call, if a CAS attendant extends the call to the user, and CDR is not assigned to the RLT trunk group.

The system records the RLT trunk as the originator of a call, if a CAS attendant extends the call to the user and CDR is assigned to the release-link trunk (RLT) trunk group.

The system does not generate a CDR record, if a CAS attendant answers a call but does not extend the call to a user.

- CO Trunks

The system records all incoming and outgoing calls on a central office (**CO**) trunk group, if CDR is assigned to the trunk group, and CDR is administered to record incoming calls.

- Conference

The system records a conference call for CDR, if either of the following conditions is met:

- The call uses at least one trunk that is eligible for CDR, and has two or more parties
- The call has at least one party that is optioned for intraswitch CDR.

The system records condition code C for each conference call CDR record.

The system generates a separate conference call CDR record for each outgoing trunk and each incoming trunk that serves the conference call. If you enable either, the system also generates a separate record for each internal party on the call.

Call Detail Recording

For the outgoing portion of a conference call that involve multiple extensions, the system records the extension of the user who requests the outside dial tone to include another participant, as the calling party.

The system records the entire time that an incoming trunk or an outgoing trunk is used for a conference call, as the duration of the call.

The system generates a separate CDR record for each trunk that is used in a trunk-to-trunk transfer. If incoming trunk call splitting (ITCS) is active, the incoming trunk record shows the duration of the entire call.

The system starts a new CDR record whenever the originator of a conference call dials a nontrunk participant, if the conference call is optioned for intraswitch CDR. For example, station 1 is optioned for intraswitch CDR and calls station 2. Station 1 includes station 3 in the conference call. Station 1 drops from the call. Station 2 or station 3 drops from the call. The system generates two CDR records with condition code C. The system generates one record from station 1 to station 2, and another record from station 1 to station 3.

The system generates one record with condition code C for each dialed intraswitch conference participant, if any of the conference participants are optioned for intraswitch CDR. The system generates a record with condition code C, even if the originator of the conference is not optioned for intraswitch CDR. For example, station calls station 2, which is optioned for intraswitch CDR. Station 1 includes station 3 into the conference call. Station 1 drops from the call. Station 2 or station 3 drops from the call. The system generates one CDR record with condition code C from station 1 to station 2.

The system generates intraswitch conference call CDR records when both the calling party and the called party call drop from the call. The system records the call duration from the time that the called party answers the call until both the calling party and the called party drop from the call.

If an attendant originates a conference, the system generates CDR records only for the dialed numbers that correspond to any intraswitch optioned extensions.

- Distributed Communications System DCS

The system does not pass station information throughout the DCS network for CDR records.

- Direct Inward Dial (DID) trunks

If you administer the system to record incoming CDR information, and if you administer CDR for the trunk group, the system records all incoming calls on the DID trunk group.

- Emergency Access to the Attendant

The system does not generate intraswitch CDR records for Emergency Access calls.

- Expert Agent Selection (EAS)

You can assign a logical extension to an agent who can then use the logical extension to log in to a telephone. You can administer CDR so that the system records the logical extension of the agent as the called number. The system records the logical extension as the called number instead of the extension of the hunt-group or the hunt group member.

- Foreign Exchange (FX) Trunks

If you want the system to generate CDR records for calls to FX trunks, you must administer your system to generate those records. You must also administer each trunk group so the system generates a CDR record for the trunk group.

- Hotline Service

The system generates a CDR record of the stored number that is used on an outgoing or intraswitch Hotline call as if someone manually dialed the number.

- Hunt Groups

You can administer CDR so the system records either the extension of the hunt group or the extension of the individual hunt group member as the called number.

- Intercept Treatment

If the system routes an outgoing call or a tandem call to intercept treatment, the system records the number that the user dialed as the dialed number. The system also records condition code *F*.

- Inter-PBX Attendant Calls

[Table 48: Inter-PBS CDR information](#) on page 513 shows the information that the system records if a user calls an Inter-PBX attendant, and the call uses a trunk group that has CDR assigned.

Table 48: Inter-PBS CDR information

CDR data field	Value
Condition Code	A
Access Code Dialed	Blank
Access Code Used	The TAC of the trunk that the call used
Dialed Digits	The Inter-PBX attendant access code

- ISDN

The system sends an indication to the CDR device when the system receives a true answer supervision.

The system creates a CDR record each time that the system networks an ISDN call. In this case, the answer supervision information that the system records might not be accurate. If you use unformatted or expanded record formats, the station identification number (SID) or the automatic number identification (ANI) appears in the CDR record, if the SID or ANI is sent.

- Last Number Dialed

The system stores the CDR access code and the account code that the user dials as part of the Last Number Dialed. However, some digits might be lost, because of the limit on the number of digits that can be stored for the Last Number Dialed feature.

- Manual Originating Line Service

If an attendant establishes an outgoing call for a user, and designates the call as a Manual Originating Line call, the system generates an attendant-assisted outgoing call CDR record. The system records the extension of the user who originated the call as the calling number, and applies condition code 1.

- Multiple Listed Directory Numbers (LDNs)

If the system records incoming call information, the system records the extension number or the TAC to which the attendant completes the call, as the called number of LDN calls.

If the system records incoming call information, the system records the attendant extension as the dialed number, if the call terminates at the attendant console.

You cannot administer LDNs for intraswitch CDR. However, the system generates an intraswitch CDR record for a call from an intraswitch-optioned extension to an LDN.

- Night Service

The system records the extension number that is assigned to the attendants as the dialed number for night service calls.

- Off-Premises Station

The system generates a CDR record for a call to an off-premises station when the:

- Call involves an outgoing or an incoming trunk call.
- Off-premises station is optioned for intraswitch CDR.
- Other terminal that is involved in the call is optioned for intraswitch CDR.

- Personal Central Office Line (PCOL) trunks

If the system records incoming calls, the system records the primary extension of the user who answers the call as the called number for incoming PCOL call.

The system records an outgoing PCOL call as a call from the originating extension number through the trunk group that is associated with the PCOL.

The system records the dialed number in the **Dialed Number** field for an outgoing PCOL call. The system does not record the TAC in the **Dialed Number** field for an outgoing PCOL call.

- Planned Interchange

When any planned interchange occurs, the system might record calls that end within 10 to 20 seconds after the interchange as calls that have an invalid duration. A call with an invalid duration is a call with a duration of 9:59:9, and a condition code other than 4. These call records are invalid. Deviations in the clocks between the two processors, and the short duration of the calls, cause the invalid duration.

- Private Network Access

The system records Private Network Access calls, if CDR is assigned for incoming or outgoing tie trunks.

- Remote Access

The system records remote access calls if Remote Access is provided on a per-trunk-group basis, and you administered CDR for those trunks. The trunk group access code in the call record is the only indication that the record is for a remote access call.

- Ringback Queuing

The system records condition code 8 for an outgoing call that is in a trunk queue before the call is complete. The system does not record the time that the call is in the queue.

The system does not generate a CDR record if a call waits in a trunk queue, and the call is not successfully completed. The call is not completed successfully if the time that the call waits in the queue exceeds the wait limit for the queue, or if the calling party does not answer the callback.

- Security Violation Notification (SVN)

The system generates a CDR record for a SVN call if the terminating extension is monitored. You cannot administer the originating extension for intraswitch monitoring.

- Service Observing

The system does not generate CDR records for Service Observing calls.

- Tandem Tie-Trunk Switching

The calling party on an incoming trunk can dial the CDR account code. The system records the TAC for the incoming trunk group in the **Calling Number** field in the CDR record. The system records the number that the user dials as the number dialed.

- Temporary Bridged Appearance

A CDR record is unaffected if a second user, or subsequent user, bridges a call.

- Temporary Signaling Connections (TSCs)

If you administer CDR to use ISDN layouts, the system records call-associated TSCs and TSC requests in the call record. If you administer CDR to record noncall-associated/temporary-signaling connection (NCA TSCs) and TSC requests, the system generates separate CDR records for each type of TCS. The system records the TCS data in the **TSC Flag** field and **Packet Count** field.

- Tie-Trunk Access

Tie-trunk calls are recorded if CDR is administered to record the trunk group, and to record incoming calls.

- Transfer

If a user originates a call on an outgoing trunk and then transfers the call to another extension, the system records the originating extension as the calling party.

If a user receives a call on an incoming trunk and then transfers the call to another extension, the system records the extension that originally received the call as the dialed number.

If a user receives an intraswitch call and then transfers the call to another extension, the system records the extension that originally received the call as the dialed number.

The system generates two CDR records if all the following conditions are met:

- Call splitting is active.
- A user receives or originates a trunk call.
- The user transfers the call to another extension

The system generates intraswitch CDR records for each call to or from an intraswitch optioned extension. For example, station A, which is intraswitch optioned, calls station B. Station A then transfers the call to station C. When either station B or station C drops, the system generates two CDR records with a condition code 0. The system generates a CDR record for a call from station A to station B, and a second record for the call from station A to station C.

The system generates intraswitch CDR transfer records when both the calling party and the called party drop from the call. The system records the call duration from the time that the called party answers the call until both the calling party and the called party drop the call.

The system generates an incoming trunk call CDR record if ITCS is enabled, and a user transfers the call to a local extension that is optioned for Intraswitch CDR. The system does not generate an intraswitch record.

When a user transfers a call to another extension, a user cannot dial an account code, unless the user has console permissions.

When a user transfers a call to a trunk, the user can dial an account code before the user dials the ARS or the TAC.

- Trunk-to-Trunk Transfer

With CDR, the system processes a trunk-to-trunk transfer connection as a conference call. The system generates a separate CDR record for each trunk in the connection.

You can administer CDR so that the system records unanswered trunk calls. You can administer each trunk group so the system records unanswered calls if the calls remain unanswered for an interval that you specify.

If Incoming Trunk Call Splitting is active, the system generates a CDR record for a trunk-to-trunk transfer. The system generates a record of the incoming call, and a record of the outgoing call. The system records the duration of the outgoing call from the time that the user transfers the call until both parties drop the call. The system records the duration of the incoming call from the time that the user answers the call until both parties drop the call.

- Uniform Dial Plan (UDP)

[Table 49: Uniform dial plan CDR information](#) on page 517 shows the information that the system records if a user uses a UDP extension to call another user, and the trunk group that the call uses has CDR assigned.

Table 49: Uniform dial plan CDR information

CDR data field	Value
Condition Code	7
Access Code Dialed	Blank
Access Code Used	The TAC of the trunk that the call used
Dialed Digits	The UDP extension

- VDN Return Destination

The system does not generate a CDR record for an incoming call until the originator drops from the call. The system creates a CDR record when all the following conditions are met:

- A call goes to the return-destination VDN.
- The originator has not dropped.
- Vector processing, that is the return destination VDN, routes the call to an outgoing trunk.

The system does not create a CDR record if vector processing routes a call from the return-destination VDN to an internal call. The system records only the first VDN that the caller accesses, regardless of the number of other extensions that are involved in the call.

If the system routes an incoming VDN call to a station, the system includes the station in the CDR record. If the system routes an incoming VDN call to an outgoing trunk, the system includes the VDN in the CDR record.

Call Forwarding

Use the Call Forwarding feature to redirect calls to an:

- Internal extension
- Off-network number
- Attendant group

Detailed description of Call Forwarding

This section provides a detailed description of the Call Forwarding feature.

Call Forwarding supports the following capabilities:

- [Call Forwarding All Calls](#)
- [Call Forward Busy/Don't Answer](#)
- [Call Forwarding Off-Net](#)
- [Call Forwarding Override](#)

Call Forwarding All Calls

Users use the Call Forwarding All Calls capability to redirect any incoming calls to another destination. You can restrict access to the Call Forwarding All Calls capability to specific users.

A user cannot have both the Call Forwarding All Calls capability and the Call Forward Busy/Don't Answer capability active at the same time.

The system forwards a call only once. For example, assume that extension A designates extension B as its forwarded-to destination, and that extension B designates extension C as its forwarded-to destination. When someone calls extension A, the system first attempts to ring the call at extension A. If the system is unable to ring the call at extension A, the system attempts to ring the call at extension B. If the system is unable to ring the call at extension B, the system redirects the call to the coverage path of extension A, if a coverage path is available at extension A, and if the coverage criteria of extension A are satisfied when applied at extension B. The system does not forward the call to extension C under any circumstances.

The system can forward an unlimited number of calls simultaneously.

Call Forwarding and FAC

Users use a feature access code (FAC) or a Call Forward-All feature button to activate or deactivate Call Forwarding All Calls for their own telephone. Virtual extension users cannot activate or deactivate Call Forwarding All Calls. Users can activate or deactivate the Call Forwarding All Calls feature for the following entities:

- Another extension
- A virtual extension
- An Automatic Call Distribution (ACD) split

Call Forwarding and attendants

The attendant cannot have a Call Forwarding button.

The system does not forward calls to attendants. However the system does forward calls to an attendant group.

Only the attendant, or a telephone user with console permission, can activate the Call Forwarding All Calls capability for the following entities:

- A terminating extension group (TEG)
- A direct department calling (DDC) hunt group
- A uniform call distribution (UCD) hunt group
- Data modules

Attendants and users cannot activate or deactivate the Call Forwarding All Calls capability for a vector-controlled split under any circumstances.

Call Forward Busy/Don't Answer

Users use the Call Forward Busy/Don't Answer capability to redirect incoming calls to another destination when the user:

- Is busy on a call
If the user is busy on a call, the system immediately forwards the call. The system does not cause the telephone to ring before the system forwards the call to another destination.
- Does not answer the call within the allowed time interval
If the user does not answer the call, the telephone rings for the allowed time interval. At the end of the interval, the system forwards the call to another destination.

You can restrict access to the Call Forward Busy/Don't Answer capability to specific users.

A user cannot have both the Call Forward Busy/Don't Answer capability and the Call Forwarding All Calls capability active at the same time.

Users activate or deactivate the Call Forward Busy/Don't Answer capability with an FAC or a Call Forward Busy/Don't Answer feature button. Attendants or users that have console permission can also activate or deactivate the feature for another extension with an FAC. Virtual extension users cannot activate or deactivate Call Forwarding Busy/Don't Answer.

Call Forward Busy/Don't Answer cannot be activated for calls to hunt groups, data extensions, a TEG, or an Expert Agent Selection (EAS) agent.

Call Forwarding Off-Net

Users use the Call Forwarding Off-Net capability to forward calls to an off-network destination. However, you can restrict access to the Call Forwarding Off-Net capability to specific users.

If the Coverage of Calls Redirected Off-Net (CCRON) capability is enabled, and the called user has a coverage path, the system monitors a call for call progress tones. If no one answers the call at the off-network destination, or if the destination is busy, the system returns the call to the internal extension. For more information on the Call Coverage feature, see the *Administrator's Guide for Avaya Communication Manager*.

The system can bring the call back for call-coverage processing if the coverage criteria of the principal are satisfied at the forwarded-to destination.

If the CCRON capability is enabled, but the called user does not have a coverage path, the system does not monitor a call for call progress tones. The system leaves the call at the off-network destination.

When the system redirects an incoming trunk call off the network, the system sets a timer. The timer prevents the system from redirecting the incoming trunk calls off the network until the timer either expires or is canceled. The timer prevents calls that are redirected off the network from being routed back to the original telephone number from the off-network destination. Calls that are routed back to the original telephone number in this situation effectively create a loop that seizes trunks until trunks are no longer available.

Call Forwarding Override

Users use the Call Forwarding Override capability to call a user, or transfer a call to a user, who has the Call Forwarding feature active. Only the user who answers the forwarded call can use the Call Forwarding Override capability to transfer the call back to the called extension. For example, user A designates user B as the destination for forwarded calls. User B answers a call forwarded from the extension of user A, and uses the Call Forwarding Override capability to transfer the call back to user A.

If you enable the Call Forwarding Override capability on your system, the capability is available for all users.

Call Forwarding

Users cannot use the Call Forwarding Override capability to override a call when the system forwards a call:

- To an off-network destination
- From a data user
- From a hunt group

Notifying users when their calls are redirected

You can administer a setting to notify users that they have a capability active that might redirect their calls. For example, if call forwarding is active for a user, you can administer a setting to play a special dial tone when the user goes off hook.

Coverage for unanswered forwarded calls

You can specify that unanswered forwarded calls have call coverage treatment. The system sends an unanswered forwarded call to coverage if you:

- Enable coverage for unanswered forwarded calls for your system
- Enable call forwarding capabilities for the user
- Assign a call coverage path for the user

Security

Users who do not have permission to make calls to an off-network destination cannot use the Call Forwarding feature to forward calls to an off-network destination.

Administering Call Forwarding

The following steps are part of the administration process for the Call Forwarding feature:

- [Viewing user extensions that have the Call Forwarding capabilities active](#)
- [Assigning the Call Forwarding All Calls capability to a user](#)
- [Removing the Call Forwarding All Calls capability for a user](#)
- [Assigning the Call Forward Busy/Don't Answer capability to a user](#)

- [Removing the Call Forward Busy/Don't Answer capability for a user](#)
- [Assigning the Call Forwarding Off-Net capability to a user](#)
- [Removing the Call Forwarding Off-Net capability for a user](#)
- [Enabling the Call Forwarding Override capability for your system](#)
- [Disabling the Call Forwarding Override capability for your system](#)

This section describes:

- Any prerequisites for administering the Call Forwarding feature
- The screens that you use to administer the Call Forwarding feature
- Complete administration for the Call Forwarding feature

Prerequisites for administering the Call Forwarding feature

You must complete the following actions before you can administer the Call Forwarding feature:

- Ensure that a class of service (COS) that enables your users to use the Call Forwarding feature exists on your system.

The Call Forwarding feature requires a COS that allows:

- Call Fwd-All Calls
- Call Forwarding Busy/DA
- Restrict Call Fwd-Off Net

For information on COS administration, see the Class of Service feature.

- Ensure that feature access codes (FACs) for Call Forwarding and Call Forward Busy/Don't Answer are available on your system, if you want users to use an FAC for either of the capabilities.

The Call Forwarding feature requires the following FACs.

- Call Forwarding Activation All
- Call Forwarding Activation Busy/DA

For more information on FAC administration, see the Feature Access Code feature.

- Enable call coverage for unanswered forwarded calls, if you want the capability on your system.

To enable call coverage for unanswered forwarded calls:

1. Type **change system-parameters coverage-forwarding**. Press **Enter**.

The system displays the **System Parameters Call Coverage/Call Forwarding** screen ([Figure 105: System Parameters Call Coverage/Call Forwarding screen](#) on page 524).

Figure 105: System Parameters Call Coverage/Call Forwarding screen

SYSTEM PARAMETERS CALL COVERAGE / CALL FORWARDING

CALL COVERAGE/FORWARDING PARAMETERS

Local Cvg Subsequent Redirection/CFWD No Ans Interval (rings): 2
 Off-Net Cvg Subsequent Redirection/CFWD No Ans Interval (rings): 2
 Coverage - Caller Response Interval (seconds): 4
 Threshold for Blocking Off-Net Redirection of Incoming Trunk Calls: 1

COVERAGE

Keep Held SBA at Coverage Point? y
 External Coverage Treatment for Transferred Incoming Trunk Calls? n
 Immediate Redirection on Receipt of PROGRESS Inband Information? n
 Maintain SBA At Principal? y

Station Hunt Before Coverage? n

FORWARDING

Call Forward Override? y
 Coverage After Forwarding? y

2. Perform one of the following actions:

- If the **Coverage After Forwarding** field is set to **y**, press **Cancel**.
- If the **Coverage After Forwarding** field is set to **n**:
 - Type **y** in the field.
 - Press **Enter** to save your change.

Screens for administering Call Forwarding

Screen Name	Purpose	Fields
Class of Service	Enable Call Forwarding capabilities for users.	● Call Fwd-All Calls ● Call Forwarding Busy/DA ● Restrict Call Fwd-Off Net
Feature Access Code (FAC)	Assign a FAC for the Call Forwarding capabilities.	● Call Forwarding Activation All ● Call Forwarding Activation Busy/DA

Screen Name	Purpose	Fields
Station	Assign a Class of Service (COS) that has the Call Forwarding capabilities enabled.	COS
System-Parameters Coverage/ Forwarding	Enable the Call Forwarding Override capability.	• Call Forward Override • Coverage After Forwarding
System-Parameters Customer-Options	Ensure that the system can forward calls to an off-network destination.	Restrict Call Forward Off Net

Viewing user extensions that have the Call Forwarding capabilities active

To view all the user extensions that have the Call Forwarding capabilities active:

1. Type **list call-forwarding**. Press **Enter**.

This system lists the extensions, with the forwarded destination, that have an active call forwarding capability.

Note:

If you have a V1, V2, or V3 system, the **list call-forwarding** command is unavailable. However, you can use the **display station** command to view the call forwarding capabilities that are active for a single user extension.

Assigning the Call Forwarding All Calls capability to a user

To assign the Call Forwarding All Calls capability to a user:

1. Type **change station n**, where **n** is the telephone extension number of the user. Press **Enter**.

The system displays the **Station** screen ([Figure 106: Station screen](#) on page 526).

Figure 106: Station screen

STATION		
Extension: 2054	Lock Messages? n	BCC: 0
Type: 7406D	Security Code: 4196__	TN: 1
Port: _____	Coverage Path 1: t1__	COR: 1
Name: _____	Coverage Path 2: ____	COS: 1
	Hunt-to-Station: _____	
STATION OPTIONS		
Data Module? n	Personalized Ringing Pattern: 1	
Display Module? n	Message Lamp Ext: _____	
	MM Complex Data Ext: _____	

2. In the **COS** field, type the number of a COS that has the Call Forwarding All Calls capability enabled.
3. Press **Enter** to save your change.

Removing the Call Forwarding All Calls capability for a user

To remove the Call Forwarding All Calls capability from a user:

1. Type **change station n**, where **n** is the user extension. Press **Enter**.
The system displays the **Station** screen ([Figure 106: Station screen](#) on page 526).
2. In the **COS** field, type the number of a COS that does not have the Call Forwarding All Calls capability enabled.
3. Press **Enter** to save your change.

Assigning the Call Forward Busy/Don't Answer capability to a user

Prerequisites

You must complete the following actions before you can assign a COS that has the Call Forward Busy/Don't Answer capability enabled:

- Assign the Call Forward Busy/Don't Answer ring interval for calls that the system forwards to an internal extension.

To assign the Call Forward Busy/Don't Answer ring interval for calls that the system forwards to an internal extension.

1. Type **change system-parameters coverage-forwarding**. Press **Enter**.

The system displays the **System Parameters Call Coverage/Call Forwarding** screen ([Figure 107: System Parameters Call Coverage/Call Forwarding screen](#) on page 527).

Figure 107: System Parameters Call Coverage/Call Forwarding screen

```

SYSTEM PARAMETERS CALL COVERAGE / CALL FORWARDING

CALL COVERAGE/FORWARDING PARAMETERS

Local Cvg Subsequent Redirection/CFWD No Ans Interval (rings): 2
Off-Net Cvg Subsequent Redirection/CFWD No Ans Interval (rings): 2
Coverage - Caller Response Interval (seconds): 4
Threshold for Blocking Off-Net Redirection of Incoming Trunk Calls: 1

COVERAGE
Keep Held SBA at Coverage Point? y
External Coverage Treatment for Transferred Incoming Trunk Calls? n
Immediate Redirection on Receipt of PROGRESS Inband Information? n
Maintain SBA At Principal? y
QSIG VALU Coverage Overrides QSIG Diversion with Rerouting? n
Station Hunt Before Coverage? y

FORWARDING
Call Forward Override? y
Coverage After Forwarding? y

```

2. In the **Local Cvg Subsequent Redirection/CFWD No Ans Interval (rings)** field, type the number of times that a telephone rings before the system forwards the call. The system uses this interval when the Call Forward Busy/Don't Answer capability is active for a user.
3. Press **Enter** to save your change.

To assign the Call Forward Busy/Don't Answer capability to a user:

1. Type **change station *n***, where *n* is the user telephone extension number. Press **Enter**.
The system displays the **Station** screen ([Figure 106: Station screen](#) on page 526).
2. In the **COS** field, type the number of a COS that has the Call Forward Busy/Don't Answer capability enabled.
3. Press **Enter** to save your change.

Removing the Call Forward Busy/Don't Answer capability for a user

To remove the Call Forward Busy/Don't Answer capability for a user:

1. Type **change station *n***, where *n* is the user extension. Press **Enter**.
The system displays the **Station** screen ([Figure 106: Station screen](#) on page 526).
2. In the **COS** field, type the number of a COS that does not have the Call Forward Busy/Don't Answer capability enabled.
3. Press **Enter** to save your change.

Assigning the Call Forwarding Off-Net capability to a user

Prerequisites

You must complete the following actions before you can assign a COS that has the Call Forwarding Off-Net capability enabled:

- Ensure that the Call Forwarding Off-Net capability is enabled on **Optional Features** screen.
- Ensure that the Call Forwarding Off-Net capability is enabled on the **System-Parameters Call Coverage/Call Forwarding** screen.
- Assign a ring interval for the Call Forward Busy/Don't Answer capability for calls that the system forwards to an off-network destination.

To ensure that the Call Forwarding Off-Net capability is enabled on the **Optional Features** screen:

- On the **Optional Features** screen, verify that the **Restrict Call Forward Off Net** field is set to **y**. To view the screen, type **display system-parameters customer-options**. Press **Enter**. If the **Restrict Call Forward Off Net** field is set to **n**, your system is not enabled for the Call Forwarding Off-Net capability. Contact your Avaya representative for before you continue with this procedure.

For a complete description of the System-Parameters Customer-Options screen, see the *Administrator's Guide for Avaya Communication Manager* for more information.

To ensure that Call Forwarding Off-Net capability is enabled on the **System-Parameters Call Coverage/Call Forwarding** screen:

1. Type **change system-parameters coverage-forwarding**. Press **Enter**.

The system displays the **System Parameters Call Coverage/Call Forwarding** screens ([Figure 108: System Parameters Call Coverage/Call Forwarding screen](#) on page 529).

Figure 108: System Parameters Call Coverage/Call Forwarding screen

```

SYSTEM PARAMETERS CALL COVERAGE / CALL FORWARDING

COVERAGE OF CALLS REDIRECTED OFF-NET (CCRON)

Coverage Of Calls Redirected Off-Net Enabled? y
Activate Answer Detection (Preserves SBA) On Final CCRON Cvg Point? y
Ignore Network Answer Supervision? n
Disable call classifier for CCRON over ISDN trunks? n
Disable call classifier for CCRON over SIP trunks? n

```

2. Click **next** until you see the **Coverage Of Calls Redirected Off-Net Enabled** field.

- If the **Coverage Of Calls Redirected Off-Net Enabled** field is set to **y**, Press **Cancel**.
- If the **Coverage Of Calls Redirected Off-Net Enabled** field is set to **n**:
 - Type **y** in the field.
 - Press **Enter** to save your change.

To Assign a ring interval for the Call Forward Busy/Don't Answer capability:

1. Type **change system-parameters coverage-forwarding**. Press **Enter**.

The system displays the **System Parameters Call Coverage/Call Forwarding** screen ([Figure 109: System Parameters Call Coverage/Call Forwarding screen](#) on page 529).

Figure 109: System Parameters Call Coverage/Call Forwarding screen

```

SYSTEM PARAMETERS CALL COVERAGE / CALL FORWARDING

CALL COVERAGE/FORWARDING PARAMETERS

Local Cvg Subsequent Redirection/CFWD No Ans Interval (rings): 2
Off-Net Cvg Subsequent Redirection/CFWD No Ans Interval (rings): 2
Coverage - Caller Response Interval (seconds): 4
Threshold for Blocking Off-Net Redirection of Incoming Trunk Calls: 1

COVERAGE

Keep Held SBA at Coverage Point? y
External Coverage Treatment for Transferred Incoming Trunk Calls? n
Immediate Redirection on Receipt of PROGRESS Inband Information? n
Maintain SBA At Principal? y
QSIG VALU Coverage Overrides QSIG Diversion with Rerouting? n
Station Hunt Before Coverage? y

FORWARDING

Call Forward Override? y
Coverage After Forwarding? y

```

Call Forwarding

2. In the **Off-Net Cvg Subsequent Redirection/CFWD No Ans Interval (rings)** field, type the number of times that a telephone rings before the system forwards the call. The system uses this interval when the Call Forward Busy/Don't Answer capability is active for a user, and the forwarded-to number is an off-network destination.
3. Press **Enter** to save your change.

To assign the Call Forwarding Off Net capability to a user:

1. Type **change station *n***, where *n* is the user telephone extension number. Press **Enter**.
The system displays the **Station** screen ([Figure 106: Station screen](#) on page 526).
2. In the **COS** field, type the number of a COS that has the Call Forwarding Off-Net capability enabled.
3. Press **Enter** to save your change.

Removing the Call Forwarding Off-Net capability for a user

To remove the Call Forwarding Off Net capability for a user:

1. Type **change station *n***, where *n* is the user extension. Press **Enter**.
The system displays the **Station** screen ([Figure 106: Station screen](#) on page 526).
2. In the **COS** field, type the number of a COS that does not have the Call Forwarding Off-Net capability enabled.
3. Press **Enter** to save your change.

Enabling the Call Forwarding Override capability for your system

To enable the Call Forwarding Override capability for your system:

1. Type **change system-parameters coverage-forwarding**. Press **Enter**.
The system displays the **System Parameters Call Coverage/Call Forwarding** screen ([Figure 110: System Parameters Call Coverage/Call Forwarding screen](#) on page 531).

Figure 110: System Parameters Call Coverage/Call Forwarding screen

```

SYSTEM PARAMETERS CALL COVERAGE / CALL FORWARDING

CALL COVERAGE/FORWARDING PARAMETERS

Local Cvg Subsequent Redirection/CFWD No Ans Interval (rings): 2
Off-Net Cvg Subsequent Redirection/CFWD No Ans Interval (rings): 2
Coverage - Caller Response Interval (seconds): 4
Threshold for Blocking Off-Net Redirection of Incoming Trunk Calls: 1

COVERAGE
Keep Held SBA at Coverage Point? y
External Coverage Treatment for Transferred Incoming Trunk Calls? n
Immediate Redirection on Receipt of PROGRESS Inband Information? n
Maintain SBA At Principal? y
Station Hunt Before Coverage? n

FORWARDING
Call Forward Override? y
Coverage After Forwarding? y

```

2. If the **Call Forward Override** field is set to **y**, press **Cancel**.
3. If the **Call Forward Override** field is set to **n**:
 - Type **y** in the field.
 - Press **Enter** to save your change.

Disabling the Call Forwarding Override capability for your system

To disable the Call Forwarding Override capability for your system:

1. Type **change system-parameters coverage-forwarding**. Press **Enter**.
The system displays the **System Parameters Call Coverage/Call Forwarding** screen ([Figure 110: System Parameters Call Coverage/Call Forwarding screen](#) on page 531).
2. If the **Call Forward Override** field is set to **n**, press **Cancel**.
3. If the **Call Forward Override** field is set to **y**:
 - Type **n** in the field.
 - Press **Enter** to save your change.

End-user procedures for Call Forwarding

End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Call Forwarding:

- [Changing the Call Forwarding All Calls destination from an internal telephone](#)
- [Changing the Call Forward Busy/Don't Answer destination from an internal telephone](#)
- [Changing the forwarding destination when a user is at an off-network location](#)
- [Changing the Call Forward Busy/Don't Answer destination when a user is at an off-network location](#)

Changing the Call Forwarding All Calls destination from an internal telephone

To change their call forwarding all calls destination:

1. Go off hook.
2. Dial the feature access code (FAC) for Call Forwarding Activation All or press the Call Forwarding Activation All feature button.
3. Listen for a dial tone.
4. Dial the extension number of the destination.
5. Hang up the telephone after you hear the three-beep tone.

Changing the Call Forward Busy/Don't Answer destination from an internal telephone

To change their call forwarding destination:

1. Go off hook.
2. Dial the FAC for Call Forward Busy/Don't Answer or press the Call Forwarding/Busy Don't Answer feature button.
3. Listen for a dial tone.
4. Dial the extension number of the destination.
5. Hang up the telephone after you hear the three-beep tone.

Changing the forwarding destination when a user is at an off-network location

To change their call forwarding destination:

1. Go off hook.
2. Dial the telecommuting extension number.
3. Dial the FAC for Extended Call Forward Activate All feature or press their Call Forwarding Activation All feature button.
4. Listen for a dial tone.
5. Dial the extension number and press the pound key (#) key.
6. Dial the security code and press the pound (#) key.
7. Listen for a dial tone.
8. Dial the extension of the destination.

Use no more than 18 digits when you enter your off-network call forwarding destination telephone number. You must include the FAC for the Trunk Access Code (TAC) or Automatic Alternate Routing (AAR) or Automatic Route Selection (ARS) among the 18 digits. Do not include the pound key (#) that you use to terminate a forwarded-to number among the 18 digits. For more information on the AAR and ARS features, see the *Administrator's Guide for Avaya Communication Manager*.

9. Hang up the telephone after you hear the three-beep tone that the system generates to confirm the change

Changing the Call Forward Busy/Don't Answer destination when a user is at an off-network location

To change the call forwarding destination:

1. Go off hook.
2. Dial the telecommuting extension number.
3. Dial the FAC for Extended Call Forward Activate Busy/Don't Answer or press the Call Forward Activate Busy/Don't Answer feature button.
4. Listen for a dial tone.
5. Dial the extension number and press the pound key (#).
6. Dials the security code and press the pound key (#).
7. Listen for a dial tone.

8. Dial the extension of the destination

Use no more than 18 digits when you enter your off-network call forwarding destination telephone number. You must include the FAC for the Trunk Access Code (TAC) or Automatic Alternate Routing (AAR) or Automatic Route Selection (ARS) among the 18 digits. Do not include the pound key (#) that you use to terminate a forwarded-to number among the 18 digits. For more information on the AAR and ARS features, see the *Administrator's Guide for Avaya Communication Manager*.

9. Hang up the telephone after they hear the three-beep tone that the system generates to confirm the change

Reports for Call Forwarding

The following reports provide information about the Call Forwarding feature:

- None

Considerations

This section provides information about how the Call Forwarding feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Call Forwarding under all conditions.

- Call classifiers and tone plans for off-network calls

If you send calls off the network and use the Call Classifier-Detector or the Tone-Clock (with Call Classifier-Tone Detector) circuit pack (the international version) for call classification and do not use the American tone plan, use the **System-Parameters Country-Options** screen to define specific country tones.

If you use the Call Classifier-Detector or the Tone-Clock (with Call Classifier-Tone Detector) circuit pack (the international version) and do not use the **System-Parameters Country-Options** screen, your system downloads the American tone plan regardless of your geographical location.

- Save translation command

If you use the **save translation** command, the software saves the user call forwarding information, including destination information, to tape.

Interactions

- Answer Detection

The Answer Detection feature shares call-classifier resources with the Coverage of Calls Redirected Off-Net (CCRON) capability.

- Attendant Override of Diversion

If an attendant uses the Call Forwarding Override to call a user who has the Call Forwarding feature active, the system sends the call to the user telephone. The system does not forward the call to the forwarded-to destination.

- Automatic Callback and Ringback Queuing

A user cannot activate Automatic Callback if the Call Forwarding feature is active at the called extension. If the user activates Automatic Callback before the Call Forwarding feature is active at the called extension, the system redirects the callback call attempt to the forwarded destination.

- Bridging

The system does not terminate calls to a bridged call appearance when the Call Forward Busy/Don't Answer capability is active at the user extension.

Users cannot bridge onto an off-network call during the time the system is classifying the call.

- Call Coverage

If the principal's (forwarding extension) redirection criteria are met at the designated (forwarded-to) destination, the forwarded call redirects to the principal's coverage path; the designated destination gets a temporary bridged appearance (except when it is off net), which remains active after the call is answered so that the designated extension can bridge onto the call if desired. The temporary bridge appearance remains until the caller hangs up.

When the Cover All Calls capability is active, and either the Call Forwarding All Calls capability or the Call Forwarding Off-Net capabilities is active, the system:

- Forwards incoming priority call
- Redirects all nonpriority calls according to the user coverage path
- Does not redirect non-priority calls off of the network

- Call Detail Recording (CDR)

When the system forwards a call off the network:

- The CDR records the forwarded-from number.
- The system generates a CDR record only after the call is answered at the off-network destination.

If the forced entry of account codes is required, the system does not forward calls to an off-network destination.

Call Forwarding

- Call Park

When a user activates Call Forwarding, and then activates Call Park, the system parks the call at the user extension. The system does not forward the call.

When the system forwards a call, and the forwarded-to extension user parks the call, the system usually parks the call at the forwarded-to extension. The system does not usually park the call at the called extension.

- Call Pickup/Directed Call Pickup

If you enable a Temporary Bridged Appearance for the Call Pickup capability, the system maintains a temporary bridged appearance when the forwarded-from user and the forwarded-to user are members of the same call pickup group.

- Call Prompting

The Call Prompting feature shares call-classifier resources with the Coverage of Calls Redirected Off-Net capability.

- Call Visor Adjunct Switch Application Interface (ASAI)

The Call Visor ASAI feature shares call-classifier resources with the Coverage of Calls Redirected Off-Net (CCRON) capability.

- Conference

Users cannot use the Conference feature to add another user to an off-network call while the system classifies the call.

The system does not classify a call when the system routes a call to an off-network destination if any of the conference participants is on hold while the conference is initiated. The system does not classify the call even if the Coverage of Calls Redirected Off Net capability is active.

- Expert Agent Selection (EAS)

Agents who are logged in at an extension, and who have EAS enabled, cannot activate or deactivate Call Forwarding. If the agent logs out of the extension, the agent can activate or deactivate Call Forwarding for the extension. If the agent logs out of the extension and the agent activates Call Forwarding for the extension, the system forwards calls that are made to the extension.

- Hold

The system does not classify a call when the system routes a forwarded call to an off-network destination if any party on the call is on hold. The system does not classify the call even if the Coverage of Calls Redirected Off Net capability is active.

- Intercom-Automatic

When a user presses an Intercom-Automatic button, and Call Forwarding is active at the user extension that is associated with that button, the system forwards the Intercom-Automatic feature along with the call. However, if the system forwards the call to an off-network destination, the system does not also forward the Intercom-Automatic feature.

- Interflow

The system uses the Call Forwarding All Calls capability and the Interflow feature to redirect Automatic Call Distribution (ACD) calls to an ACD split on another system.

- Intraflow

The system uses the Call Forwarding feature to route ACD calls from a split to another destination on the same switch.

- Leave Word Calling (LWC)

LWC cannot be activated toward a telephone that has Call Forwarding activated. If LWC was activated before the user of the called phone activated Call Forwarding, the callback call attempt is redirected to the forwarded-to party.

- Multifrequency Compelled (MFC) Signaling

MFC Signaling shares call classification resources with the Coverage of Calls Redirected Off-Net capability.

- Personal Central Office Line (PCOL)

The system does not forward PCOL calls.

- QSIG

If a call is forwarded over an ISDN-PRI trunk that is administered with supplementary service protocol "b" (QSIG), then additional call information might be displayed.

- Send All Calls

If both Send All Calls and Call Forwarding All Calls are active at an extension, the system:

- Redirects calls to coverage immediately, if the system can do so
- Forwards other calls, such as Priority Calls

If a user has both Send All Calls and Call Forwarding All Calls activate, calls to that extension that can immediately be redirected to coverage are redirected. However, other calls, such as Priority Calls, are forwarded to the designated extension.

Activation of Send All Calls at the forwarded-to extension does not affect calls that are forwarded to that extension.

- Temporary Bridged Appearance

The system maintains a temporary bridged appearance for calls that are ringing on the network. If the caller hangs up, or someone answers the call, the system drops the temporary bridged appearance.

The system does not maintain a temporary bridged appearance when the system forwards calls to an off-network destination.

Call Forwarding

- Traffic Reports Removed

Use the list measurement tone-receiver traffic report to obtain information on port usage for the Traffic Reports Removed feature.

- Transfer

Users cannot transfer a call that the system routes to an off-network destination while the system classifies the call.

Call Park

Use the Call Park feature to retrieve a call that is on hold, from any other telephone within the system. For example, a user can answer a call at one extension, put the call on hold, and then retrieve the call at another extension. Or the user can answer a call at any telephone after an attendant or another user pages the user.

Detailed description of Call Park

This section provides a detailed description of the Call Park feature.

You can set a system-wide expiration interval for parked calls. If no one answers the call before the interval expires, the system redirects the call.

The system redirects a parked call to the attendant if the **Deluxe Paging and Call Park Timeout to Originator** field on the **Feature-Related System Parameters** screens is set to **n**. The system redirects a parked call to the user who parked the call if the **Deluxe Paging and Call Park Timeout to Originator** field on the **Feature-Related System Parameters** screens is set to **y**.

If you do not administer an attendant or a night service extension, and if you did not administer the Night Service-Trunk Answer from Any Station capability, the system ignores the expiration interval, and the call remains parked.

If two parties are connected on a parked call, a third party can create a three-way conference, if the third party answers the call before the interval expires.

The attendant console group can have common shared extensions that the attendant console group uses exclusively for the Call Park feature. The system does not assign the common shared extensions to a telephone. The system stores the common shared extensions in the system translations, and parks calls at the extensions.

The common shared extensions are particularly useful when an attendant pages a user at the request of another user. The attendant parks the calling user on a common shared extension, and announces the extension. The status lamp that is associated with the extension indicates "call parked" or "no call parked," instead of an active status or an idle status.

Administering Call Park

The following steps are part of the administration process for the Call Park feature:

- [Assigning a call park button to a multiple-call appearance telephone](#)

This section describes:

- Any prerequisites for administering the Call Park feature
- The screens that you use to administer the Call Park feature
- Complete administration procedures for the Call Park feature

Prerequisites for administering the Call Park feature

You must complete the following actions before you can administer the Call Park feature:

- Ensure that feature access codes (FACs) for Call Park are available on your system.
- Administer the **Feature-Related System Parameters** screens to specify:
 - The minutes that the system leaves a call parked at any extension on your system.
 - That the system routes calls that exceed the call park timeout limit back to the originator of the call.
- Define the common shared extensions on your system.

To ensure that a FAC for Call Park is available on your system:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Codes (FAC)** screen ([Figure 111: Feature Access Code screen](#) on page 541).

Figure 111: Feature Access Code screen

change feature-access-codes	Page 1 of 8
FEATURE ACCESS CODE (FAC)	
Abbreviated Dialing List1 Access Code: *00	
Abbreviated Dialing List2 Access Code: *01	
Abbreviated Dialing List3 Access Code: *02	
Abbreviated Dial - Prgm Group List Access Code: *03	
Announcement Access Code: *04	
Answer Back Access Code: *05	
Auto Alternate Routing (AAR) Access Code: 8	
Auto Route Selection (ARS) - Access Code 1: *9	Access Code 2: 9
Automatic Callback Activation: *06	Deactivation: #06
Call Forwarding Activation Busy/DA: *07 All: *08	Deactivation: #09
Call Park Access Code: *10	
Call Pickup Access Code: *11	
CAS Remote Hold/Answer Hold-Unhold Access Code: *50	
CDR Account Code Access Code: *12	
Change COR Access Code:	
Change Coverage Access Code: *13	
Contact Closure Open Code:	Close Code:
Contact Closure Pulse Code:	

2. Perform one of the following actions:

- If the **Answer Back Access Code** field and the **Call Park Access Code** field each contain an FAC, your system already has the FACs that are necessary for the Call Pickup Feature. Press **Cancel**.
- If either the **Answer Back Access Code** field or the **Call Park Access Code** field do not contain a FAC, type a FAC in the field. Press **Enter** to save your changes.

For more information on the Feature Access Code feature, including how to change or deactivate an FAC, see the *Administrator's Guide for Avaya Communication Manager*.

To administer the **Feature-Related System Parameters** screen for the Call Park feature:

1. Type **change system-parameters features**. Press **Enter**.

The system displays the **Feature-Related System Parameters** screen
([Figure 112: Feature-Related System Parameters screen](#) on page 542).

Figure 112: Feature-Related System Parameters screen

change system-parameters features	Page 1 of 13
FEATURE-RELATED SYSTEM PARAMETERS	
Self Station Display Enabled? y	
Trunk-to-Trunk Transfer: all	
Automatic Callback - No Answer Timeout Interval (rings): 3	
Call Park Timeout Interval (minutes): 3	
Off-Premises Tone Detect Timeout Interval (seconds): 20	
AAR/ARS Dial Tone Required? y	
Music (or Silence) on Transferred Trunk Calls? no	
DID/Tie/ISDN/SIP Intercept Treatment: attd	
Internal Auto-Answer of Attnd-Extended/Transferred Calls: transferred	
Automatic Circuit Assurance (ACA) Enabled? n	
Abbreviated Dial Programming by Assigned Lists? n	
Auto Abbreviated/Delayed Transition Interval (rings): 2	
Protocol for Caller ID Analog Terminals: Bellcore	
Display Calling Number for Room to Room Caller ID Calls? n	

-
2. In the **Call Park Timeout Interval (minutes)** field, type the number of minutes that you want the system to park a call at an extension.
 3. Click **Next** until you see the **Deluxe Paging and Call Park Timeout to Originator** field
([Figure 113: Feature-Related System Parameters screen](#) on page 543).

Figure 113: Feature-Related System Parameters screen

```

change system-parameters features                                     Page 3 of 13
      FEATURE-RELATED SYSTEM PARAMETERS
        Reserved Slots for Attendant Priority Queue: 5
          Time before Off-hook Alert: 10
        Emergency Access Redirection Extension:
        Number of Emergency Calls Allowed in Attendant Queue: 5
          Call Pickup Alerting? n
        Temporary Bridged Appearance on Call Pickup? y
          Call Pickup on Intercom Calls? y
            Directed Call Pickup? n
            Extended Group Call Pickup: none
        Deluxe Paging and Call Park Timeout to Originator? n
        Controlled Outward Restriction Intercept Treatment: tone
        Controlled Termination Restriction (Do Not Disturb): tone
        Controlled Station to Station Restriction: tone
AUTHORIZATION CODE PARAMETERS      Authorization Codes Enabled? y
          Authorization Code Length: 7
          Authorization Code Cancellation Symbol: #
            Attendant Time Out Flag? n
            Display Authorization Code? y
        Controlled Toll Restriction Replaces: none

```

4. In the **Deluxe Paging and Call Park Timeout to Originator?** field, perform one of the following actions:
 - If you want the system to route a parked call, that exceeds the number of minutes that you specified in the **Call Park Timeout Interval (minutes)** field, to the attendant, type **n**. The system provides **n** as the default entry for this field.
 - If you want the system to route a parked call, that exceeds the number of minutes that you specified in the **Call Park Timeout Interval (minutes)** field, to the originator of the call, type **y**.
5. Press **Enter** to save your changes.

To define the common shared extensions on your system:

1. Type **change console-parameters**. Press **Enter**.

The system displays the **Console Parameters** screen ([Figure 114: Console Parameters screen](#) on page 544).

Figure 114: Console Parameters screen

change console-parameters

Page 2 of 5

CONSOLE PARAMETERS

TIMING

Time Reminder on Hold (sec): 30

Return Call Timeout (sec): 30

Time in Queue Warning (sec):

INCOMING CALL REMINDERS

No Answer Timeout (sec):

Alerting (sec):

Secondary Alert on Held Reminder Calls? y

ABBREVIATED DIALING

List1:

List2:

List3:

SAC Notification? n

COMMON SHARED EXTENSIONS

Starting Extension:

Count:

2. Click **next** until you see the **Common Shared Extensions** area.
3. In the **Starting Extension** field, type an extension at which you want the attendant to park a call.
4. In the **Count** field, type the number of extensions that you want the attendants to have available to park calls. The system uses the information in the **Starting Extension** field and the **Count** field to determine which extensions are available for attendants to park a call. For example, if you type **4300** in the **Starting Extension** field and you type **3** in the **Count** field, the system provides the three consecutive extensions 4300, 4301, and 4302 to park calls.
5. Press **Enter** to save your changes.

Screens for administering Call Park

Screen name	Purpose	Fields
Console-Parameters	Specify the extensions where an attendant can park a call.	• Starting Extension • Count
Feature Access Code (FAC)	Define the system-wide FACs to use to park a call, and to answer a parked call.	• Answer Back Access Code • Call Park Access Code
Feature-Related System Parameters	Specify the number of minutes that the system parks a call on your system.	• Call Park Timeout Interval
	Specify that the system return a call that exceeds the timeout to the originator of the call.	• Deluxe Paging and Call Park Timeout to Originator
Station	Assign a call park button to a user with a multiple-call appearance telephone.	Button Assignments

Assigning a call park button to a multiple-call appearance telephone

To assign a call park button to a user of a multiple-call appearance telephone:

1. Type **change station *n*** where *n* is the telephone number of the extension to which you want to assign a call park button. Press **Enter**.

The system displays the **Station** screen for the extension that you requested.

2. Click **Next** until you see the **Button Assignments** area ([Figure 115: Station screen](#) on page 546).

Figure 115: Station screen

change station 20001		Page 3 of 4
STATION		
SITE DATA		
Room:		Headset? n
Jack:		Speaker? n
Cable:		Mounting: d
Floor:		Cord Length: 0
Building:		Set Color:
ABBREVIATED DIALING		
List1:	List2:	List3:
BUTTON ASSIGNMENTS		
1: call-appr	5:	
2: call-appr	6:	
3: call-appr	7:	
4: call-park	8:	

3. Type **call-park** next to the number of the button that you want the user to use to park a call.
4. Press **Enter** to save your changes.

End-user procedures for Call Park

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Call Park:

- [Using Call Park from a single-line telephone](#)
- [Using Call Park from a multiple-call appearance telephone](#)
- [Using Call Park from an attendant console](#)
- [Retrieving a parked call](#)

Using Call Park from a single-line telephone

To use the Call Park feature from a single-line telephone:

1. Flash the switch hook.
2. Dial the feature access code (FAC) for Call Park.
3. Hang up.

Using Call Park from a multiple-call appearance telephone

To use the Call Park feature from a multiple-call appearance telephone:

1. Press the transfer button or the conference button.
2. Dial the FAC for Call Park.
3. Press the transfer button or the conference button.

Using Call Park from an attendant console

To use the Call Park feature from an attendant console:

1. Press the start button.
2. Dial the FAC for Call Park.
3. Dial the extension where the attendant wants to park the call.
4. Press the release button.

An attendant can also use the Direct Extension Selection with Busy Lamp Field capability with the Call Park feature. For more information on the Direct Extension Selection with Busy Lamp feature, see the *Administrator's Guide for Avaya Communication Manager*.

Retrieving a parked call

To use the Call Park feature to retrieve a call, perform one of the following actions:

1. Press the same call park button that was used to park the call.
2. Dial the FAC to retrieve parked calls.

Reports for Call Park

The following reports provide information about the Call Park feature:

- None

Considerations for Call Park

This section provides information about how the Call Park feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Call Park under all conditions. The following considerations apply to Call Park:

- A User can park only one call at an extension at one time, even if the extension has multiple call appearances. A user can park a conference calls that has two to five participates. A user cannot park a conference call that has six participants. The sixth position must remain open so someone can retrieve the call.
- Neither a user nor an attendant can park a call on a group extension. If a group member parks a call, the system parks the call at the extension of the group member. Group members can belong to the following groups:
 - A coverage answer group
 - A uniform call distribution (UCD) hunt group
 - A direct department calling (DDC) hunt group
 - A terminating extension group (TEG)
- If all appearances on a parked telephone are busy and no attendant or night-service extensions are configured when the call park timeout expires, the system:
 - Drops the call if a coverage path does not exist.
 - Does not drop the call if a coverage path exists.

Interactions for Call Park

This section provides information about how the Call Park feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Call Park in any feature configuration.

- Abbreviated Dialing

A user presses the Abbreviated Dialing button to park calls, or retrieve calls that are parked.

- Attendant Console

Assign the common shared extensions to the optional Attendant Selector Console in the 00 through 09 block of numbers, on the bottom row, in any hundreds group so that the attendant can easily identify the extensions. The lamp that is associated with the number indicates "call parked" or "no call parked," rather than a busy status or an idle status. For more information on the Attendant features, see the *Administrator's Guide for Avaya Communication Manager*.

- Automatic Wakeup

Neither a user nor an attendant can park Automatic Wakeup calls.

- Bridged Call Appearance

If a user, that is active on a bridged call appearance, activates Call Park, the system parks the call on the primary extension associated with the bridged call appearance.

- Call Vectoring

- Neither a user nor an attendant can park a call on a vector directory number (VDN) extension.
- Neither a user nor an attendant can park a call that is undergoing vector processing.

- Code Calling Access

The system automatically parks a user or an attendant on the extension of the party that is paged when the user or attendant:

- Is using the Paging feature.
- Dials the Code Calling Access feature access code (FAC)
- Dials the extension of the party that is paged

- Conference

Both users and attendants can park Conference calls.

- Data Privacy and Data Restriction

The system automatically deactivates the Data Privacy feature and the Data Restriction feature when a user or attendant parks a call.

Call Park

- Drop

If a user receives an external call, and the user pushes the **drop** button after the user parks the call, the call is no longer parked.

If a user receives an internal call, and the user pushes the **drop** button after the user parks the call, the call remains parked. The system drops the call only when the user who parks the call hangs up.

- Loudspeaker Paging Access

Neither a user nor an attendant can park calls to paging zones.

- Music-on-Hold

If a parked call involves only one party, the user that is parked hears music-on-hold. The parking user also hears music after the user parks the call and the system generates a confirmation tone.

- Remote Access

A Remote Access caller cannot park a call. However, the Code Calling Access feature, an answering attendant, or a telephone user can park an incoming Remote Access call.

- Tenant Partitioning

If an attendant parks a call on a common shared extension, and tenant partitioning is *not* active, the system routes the call to the attendant group when the call exceeds the call park timeout.

If an attendant parks a call on a shared extension, and tenant partitioning is active, the system routes the call to the attendant who parked the call when the call exceeds the park timeout interval.

The system functions as described in the preceding circumstances regardless of whether the **Deluxe Paging and Call Park Timeout to Originator** field of the **Feature-Related System-Parameters** screen is set to **y** or **n**.

- Transfer

If the **Transfer Upon Hang-up** field on the **Feature Related System-Parameters** screen is set to **y**, a user does not need to press the **Transfer** button a second time to park a call.

Call Pickup

Use the Call Pickup feature to allow users to answer calls for one another. The feature requires that the users be members of the same pickup group. With the related Directed Call Pickup capability, users can answer calls for one another, even though the users are not members of the same call pickup group.

Detailed Description

This section provides a detailed description of the Call Pickup feature.

Users use Call Pickup to answer calls for one another. The users must be in the same call pickup group. A call pickup group is comprised of users that you assign to a group with a unique identifying number. A user can be a member of only one call pickup group. However, call pickup groups can also be combined into extended call pickup groups.

Call ringing and status lamp flashing

The members of a call pickup group know that another group member is receiving a call in two ways:

- The group members can hear the other telephone ring.
- The status lamps of all the group members flash.

If a call pickup group relies on ringing to know when another group member receives a call, the group members should be located close enough that they can hear the ringing of the other telephones.

When a group member uses Call Pickup to answer a ringing call, the telephone of the called member stops ringing.

When the group members see their status lamps flashing, and use Call Pickup to answer the call, the:

- Status lamp of the answering group member lights, but does not flash, for the duration of the call.
- Telephone of the called group member stops ringing.
- Status lamp and the call appearance on the telephone of the called group member continue to flash for the duration of the call.
- Status lamps of the other group members go out.

Call Pickup

Note that call pickup alerting causes only a status lamp that is not already lit to flash. For example, when a group member receives a call, the status lamps of those group members who are not talking on a call that was answered with Call Pickup do not flash. These lamps do not flash because these lamps are already steadily lit while the members are talking on the call.

The system uses an algorithm to select the call when multiple calls ring or alert in a call pickup group. The system searches the extensions of the call pickup group until the system finds an extension with a call that is eligible to be answered with Call Pickup. The system selects this call to be answered. The next time that a group member answers a call with Call Pickup, the system bypasses the extension that was answered most recently, and starts the search at the next extension.

For example, if a group member attempts to use Call Pickup when two calls are ringing at extension A, and one call is ringing at extension B, the system selects the calls in the following order:

1. One of the calls to extension A
2. The call to extension B
3. The remaining call to extension A

The system also determines which call that a group member answers when multiple calls ring or alert at the same telephone. The system selects the call with the lowest call appearance, which is usually the call appearance that is nearest to the top of the telephone. For example, when calls ring or alert at the second and the third call appearances, the system selects the call on the second call appearance for the user to answer.

Call Pickup supports the following capabilities:

- [Directed Call Pickup](#)
- [Extended Group Pickup](#)

Directed Call Pickup

With the Directed Call Pickup capability, users can answer the calls of any other user on the system. The system does not require that the users be members of the same call pickup group before users can answer calls for one another.

Extended Group Pickup

With the Extended Group Pickup capability, you can combine:

- Pickup groups into extended pickup groups. This capability is called *simple* extended group pickup.
- Extended pickup groups into other extended pickup groups. This is called *flexible* extended group pickup.

Users cannot use a call pickup button with the Extended Group Pickup capability.

Administering Call Pickup

The following steps are part of the administration process for the Call Pickup feature:

- Administering a call pickup button
 - [Assigning a call pickup button to a user telephone](#)
 - [Changing a call pickup button on a user telephone](#)
 - [Removing a call pickup button from a user telephone](#)
- Administering a call pickup group
 - [Assigning a user to a call pickup group](#)
 - [Removing a user from a call pickup group](#)
- Administering the Directed Call Pickup capability
 - [Assigning the Directed Call Pickup capability to a user](#)
 - [Removing the Directed Call Pickup capability from a user](#)
- Administering an extended call pickup group for a call pickup group
 - [Assigning a pickup group to an extended pickup group](#)
 - [Removing a pickup group from an extended pickup group](#)
- Administering an extended call pickup group for an extended call pickup group
 - [Assigning extended pickup groups to another extended pickup group](#)
 - [Removing an extended pickup group from an extended pickup group](#)

Screens for administering Call Pickup

Screen Name	Purpose	Fields
Class of Restriction	Create a Class of Restriction (COR) for a user to use the Directed Call Pickup capability.	• Can Be Picked Up By Directed Call Pickup? • Can Use Directed Call Pickup?
Extended Pickup Group	Combine pickup groups into extended pickup groups.	Pickup Group Number
	Combine extended pickup groups into another extended pickup group.	Pickup Group Number
Feature-Related System Parameters	Enable the Directed Call Pickup capability.	Directed Call Pickup
	Enable the Extended Group Pickup capability.	Extended Group Call Pickup
Pickup Group	Assign a user to a pickup group.	• Group Name • Extension
Station	Assign the call pickup button to a user extension.	Button Assignments
	Assign a COR to a user extension.	COR

Assigning a call pickup button to a user telephone

Prerequisites

You must complete the following actions before you assign a call pickup button to a user telephone:

- Ensure that the access code (FAC) for the Call Pickup Access feature is available on your system.

To ensure that the Call Pickup Access feature access code (FAC) is available on your system:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen.

2. Click **Next** until you see the **Call Pickup Access Code** field ([Figure 116: Feature Access Code screen](#) on page 555).

Figure 116: Feature Access Code screen

FEATURE ACCESS CODE (FAC)		
Abbreviated Dialing List1 Access Code: *00		
Abbreviated Dialing List2 Access Code: *01		
Abbreviated Dialing List3 Access Code: *02		
Abbreviated Dial - Prgm Group List Access Code: *03		
Announcement Access Code: *04		
Answer Back Access Code: *05		
Auto Alternate Routing (AAR) Access Code: 8		
Auto Route Selection (ARS) - Access Code 1: *9	Access Code 2: 9	
Automatic Callback Activation: *06	Deactivation: #06	
Call Forwarding Activation Busy/DA: *07 All: *08	Deactivation: #09	
Call Park Access Code: *10		
Call Pickup Access Code: *11		
CAS Remote Hold/Answer Hold-Unhold Access Code: *50		
CDR Account Code Access Code: *12		
Change COR Access Code:		
Change Coverage Access Code: *13		
Contact Closure Open Code:	Close Code:	
Contact Closure Pulse Code:		

3. In the **Call Pickup Access Code** field, perform one of the following actions:

- If this field contains a FAC, press **Cancel**.
- If this field does not contain a FAC:
 - Type a FAC in the field.
 - Press **Enter** to save your change.

For more information on the Feature Access Code feature, see the *Administrator's Guide for Avaya Communication Manager*.

To assign a call pickup button to a user telephone:

1. Type **change station *n***, where *n* is the telephone number of the extension to which you want to assign a call pickup button. Press **Enter**.

The system displays the **Station** screen that you requested.

2. Click **Next** until you see the **Button Assignments** area ([Figure 117: Station screen](#) on page 556).

Figure 117: Station screen

STATION	
SITE DATA	
Room:	Headset? n
Jack:	Speaker? n
Cable:	Mounting: d
Floor:	Cord Length: 0
Building:	Set Color:
ABBREVIATED DIALING	
List1:	List2: List3:
BUTTON ASSIGNMENTS	
1: call-appr	7:
2: call-appr	8:
3: call-appr	9:call-pkup
4:	10:dn-dst
5:	11:goto-cover
6:	12:send-calls Ext:

3. Move to the button number that you want to use for call pickup. You can use any of the available buttons.
4. Type **call-pkup** after the button number.
5. Press **Enter** to save your changes.

Changing a call pickup button on a user telephone

To change a call pickup button on a user telephone:

1. Type **change station n**, where **n** is the telephone number of the extension for which you want to change a call pickup button. Press **Enter**.
The system displays the **Station** screen that you requested.
2. Click **Next** until you see the **Button Assignments** area ([Figure 117: Station screen](#) on page 556).
3. Move to the existing **call-pkup** button.
4. Press **Clear**.
5. Move to the button number that you want to use for call pickup.
6. Type **call-pkup** after the button number.
7. Press **Enter** to save your changes.

Removing a call pickup button from a user telephone

To remove a call pickup button from a user telephone:

1. Type **change station *n***, where *n* is the telephone number of the extension for which you want to change a call pickup button. Press **Enter**.

The system displays the **Station** screen that you requested.

2. Click **Next** until you see the **Button Assignments** area ([Figure 117: Station screen](#) on page 556).
3. Move to the existing **call-pkup** button.
4. Press **Clear**.
5. Press **Enter** to save your changes.

Assigning a user to a call pickup group

To assign a user to a call pickup group, perform one of the following procedures:

If the pickup group to which you want to assign the user does not exist:

1. Type **add pickup-group next**. Press **Enter**.

The system assigns a number to the call pickup group and displays a **Pickup Group** screen ([Figure 118: Pickup Group screen](#) on page 558).

Figure 118: Pickup Group screen

PICKUP GROUP

Group Number: 1
Group Name:

GROUP MEMBER ASSIGNMENTS

Ext	Name (first 26 characters)	Ext	Name (first 26 characters)
1:		14:	
2:		15:	
3:		16:	
4:		17:	
5:		18:	
6:		19:	
7:		20:	
8:		21:	
9:		22:	
10:		23:	
11:		24:	
12:		25:	
13:			

2. Type the extension of each group member. You can add a maximum of 50 extensions.
3. Press **Enter** to save your changes.

The system automatically completes the **Name** fields when you press **Enter**.

If the pickup group to which you want to assign the user exists:

1. Type **change pickup-group *n***, where *n* is the number of the pickup group to which you want to assign the user. Press **Enter**.

The system displays the **Pickup Group** screen ([Figure 119: Pickup Group screen](#) on page 559).

Figure 119: Pickup Group screen

PICKUP GROUP			
Group Number: 1			
Group Name:			
GROUP MEMBER ASSIGNMENTS			
Ext	Name (first 26 characters)	Ext	Name (first 26 characters)
1: 31101	1b1801 x31101 cabinet num	14:	
2: 32101	2b0501 x32101 cabinet num	15:	
3:		16:	
4: 34101	4a1001 x34101 cabinet num	17:	
5:		18:	
6:		19:	
7:		20:	
8:		21:	
9:		22:	
10:		23:	
11:		24:	
12:		25:	
13:			

2. Type the extension of the user to whom you want to assign to the pickup group.
3. Press **Enter** to save your changes.

The system automatically completes the **Name** fields when you press **Enter**.

Removing a user from a call pickup group

To remove a user from a call pickup group:

1. Type **change pickup-group *n***, where *n* is the number of the pickup group from which you want to remove the user. Press **Enter**.

The system displays the **Pickup Group** screen ([Figure 119: Pickup Group screen](#) on page 559).

2. Move to the extension that you want to remove.
3. Press **Clear**.
4. Press **Enter** to save your changes.

Assigning the Directed Call Pickup capability to a user

Prerequisites

You must complete the following actions before you can assign the Directed Call Pickup capability to a user:

- Ensure that the Directed Call Pickup capability is available on your system.
- Ensure that a Class of Restriction (COR) exists for a user to use the Directed Call Pickup capability.

To ensure that the Directed Call Pickup capability is available on your system:

1. Type **change system-parameters features**. Press **Enter**.

The system displays the **Feature-Related System Parameters** screen.

2. Click **Next** until you see the **Directed Call Pickup** field ([Figure 120: Feature-Related System Parameters screen](#) on page 560).

Figure 120: Feature-Related System Parameters screen

FEATURE-RELATED SYSTEM PARAMETERS

Reserved Slots for Attendant Priority Queue: 5

Time before Off-hook Alert: 10

Emergency Access Redirection Extension:

Number of Emergency Calls Allowed in Attendant Queue: 5

Call Pickup Alerting? n

Temporary Bridged Appearance on Call Pickup? y

Call Pickup on Intercom Calls? y

Directed Call Pickup? y

Extended Group Call Pickup: none

Deluxe Paging and Call Park Timeout to Originator? n

Controlled Outward Restriction Intercept Treatment: tone

Controlled Termination Restriction (Do Not Disturb): tone

Controlled Station to Station Restriction: tone

AUTHORIZATION CODE PARAMETERS

Authorization Codes Enabled? y

Authorization Code Length: 7

Authorization Code Cancellation Symbol: #

Attendant Time Out Flag? n

Display Authorization Code? y

Controlled Toll Restriction Replaces: none

3. In the **Directed Call Pickup** field, perform one of the following actions:

- If the **Directed Call Pickup** field is set to **y**, press **Cancel**.
- If the **Directed Call Pickup** field is set to **n**:
 - Type **y** in the field.
 - Press **Enter** to save your changes.

To ensure that a COR exists for a user to use the Directed Call Pickup capability:

1. Type **change cor n**, where **n** is the number of the COR that you want to verify. Press **Enter**.

The system displays the **Class of Restriction** screen that you requested.

2. Click **Next** until you see the **Can Be Picked Up By Directed Call Pickup?** field ([Figure 121: Class of Restriction screen](#) on page 561).

Figure 121: Class of Restriction screen

CLASS OF RESTRICTION	
COR Number: 1	
COR Description:	
FRL: 7	APLT? y
Can Be Service Observed? y	Calling Party Restriction: none
Can Be A Service Observer? y	Called Party Restriction: none
Time of Day Chart: 1	Forced Entry of Account Codes? n
Priority Queuing? n	Direct Agent Calling? n
Restriction Override: all	Facility Access Trunk Test? n
Restricted Call List? n	Can Change Coverage? n
Access to MCT? y	Fully Restricted Service? n
Group II Category For MFC: 7	Hear VDN of Origin Annc.? n
Send ANI for MFE? n	Add/Remove Agent Skills? y
MF ANI Prefix:	Automatic Charge Display? n
Hear System Music on Hold? y	PASTE (Display PBX Data on Phone)? y
	Can Be Picked Up By Directed Call Pickup? y
	Can Use Directed Call Pickup? y
	Group Controlled Restriction: inactive

3. In the **Can Use Directed Call Pickup** field, type **y**.

4. Press **Enter** to save your changes.

For more information on the Class of Restriction (COR) feature, see the "Class of Restriction" feature.

Call Pickup

To assign Directed Call Pickup permission to a user, you must complete the following procedure:

1. Type **change station *n***, where *n* is the telephone number of the user to whom you want to assign Directed Call Pickup permission. Press **Enter**.

The system displays the **Station** screen for the extension that you requested ([Figure 122: Station screen](#) on page 562).

Figure 122: Station screen

STATION		
Extension: 30019	Lock Messages? n	BCC: 0
Type: 4612	Security Code: *	TN: 1
Port: S04007	Coverage Path 1:	COR: 1
Name: station 30019	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 19	Personalized Ringing Pattern: 1	
	Message Lamp Ext: 30019	
Speakerphone: 2-way	Mute Button Enabled? y	
Display Language: english		
	Media Complex Ext:	
	IP SoftPhone? n	

2. In the **COR** field, type the number of a COR that has Directed Call Pickup permissions.
3. Press **Enter** to save your changes.

Removing the Directed Call Pickup capability from a user

To remove the Directed Call Pickup capability from a user:

1. Type **change station *n***, where *n* is the telephone number of the extension from which you want to remove a COR that supports the Directed Call Pickup capability. Press **Enter**.

The system displays the **Station** screen for the extension that you requested ([Figure 122: Station screen](#) on page 562).

2. In the **COR** field, type the number of a COR that does not have Directed Call Pickup permissions.
3. Press **Enter** to save your changes.

Assigning a pickup group to an extended pickup group

Prerequisites

You must complete the following actions in the order listed before you assign a pickup group to an extended pickup group:

- Ensure that the Extended Group Pickup capability is available on your system.
- Ensure that the feature access code (FAC) for Extended Group Call Pickup is available on your system.

To ensure that the Extended Group Pickup capability is available on your system:

1. Type **change system-parameters features**. Press **Enter**.

The system displays the **Feature-Related System Parameters** screen.

2. Click **Next** until you see the **Extended Group Call Pickup** field
([Figure 123: Feature-Related System Parameters screen](#) on page 563).

Figure 123: Feature-Related System Parameters screen

FEATURE-RELATED SYSTEM PARAMETERS	
Reserved Slots for Attendant Priority Queue:	5
Time before Off-hook Alert:	10
Emergency Access Redirection Extension:	
Number of Emergency Calls Allowed in Attendant Queue:	5
Call Pickup Alerting?	n
Temporary Bridged Appearance on Call Pickup?	y
Call Pickup on Intercom Calls?	y
Directed Call Pickup?	y
Extended Group Call Pickup:	simple
Deluxe Paging and Call Park Timeout to Originator?	n
Controlled Outward Restriction Intercept Treatment:	tone
Controlled Termination Restriction (Do Not Disturb):	tone
Controlled Station to Station Restriction:	tone
AUTHORIZATION CODE PARAMETERS	
Authorization Codes Enabled?	y
Authorization Code Length:	7
Authorization Code Cancellation Symbol:	#
Attendant Time Out Flag?	n
Display Authorization Code?	y
Controlled Toll Restriction Replaces:	none

3. Perform one of the following actions:

- If the **Extended Group Call Pickup** field contains the word **simple**, press **Cancel**.
- If the **Extended Group Call Pickup** field does *not* contain the word **simple**:
 - Type **simple** in the field.
 - Press **Enter** to save your changes.

To ensure that the FAC for Extended Group Call Pickup is available on your system:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen.

2. Click **Next** until you see the **Extended Group Call Pickup Access Code** field ([Figure 124: Feature Access Code \(FAC\) screen](#) on page 564).

Figure 124: Feature Access Code (FAC) screen

FEATURE ACCESS CODE (FAC)	
Data Origination Access Code: *17	
Data Privacy Access Code: *18	
Directed Call Pickup Access Code: *19	
Emergency Access to Attendant Access Code: *20	
Enhanced EC500 Activation:	Deactivation:
Extended Call Fwd Activate Busy D/A *21 All: *22	Deactivation: #22
Extended Group Call Pickup Access Code: *39	
Facility Test Calls Access Code: *24	
Flash Access Code: *25	
Group Control Restrict Activation: *26	Deactivation: #26
Hunt Group Busy Activation: *27	Deactivation: #27
ISDN Access Code:	
Last Number Dialed Access Code: *29	
Leave Word Calling Message Retrieval Lock: *30	
Leave Word Calling Message Retrieval Unlock: *31	
Leave Word Calling Send A Message: *32	
Leave Word Calling Cancel A Message: *33	
Malicious Call Trace Activation:	Deactivation:
Meet-me Conference Access Code Change:	

3. Perform one of the following actions:

- If the **Extended Group Call Pickup Access Code** field contains a FAC, press **Cancel**.
- If the **Extended Group Call Pickup Access Code** field does not contain a FAC:
 - Type a FAC in the field.
 - Press **Enter** to save your changes.

For more information on the Feature Access Code (FAC) feature, see the *Administrator's Guide for Avaya Communication Manager*.

To assign pickup groups to an extended pickup group:

1. Type **change extended-pickup-group *n***, where *n* is the number of the extended pickup group to which you want to assign the pickup group. Press **Enter**.

The system displays an **Extended Pickup Group** screen ([Figure 125: Extended Pickup Group screen](#) on page 565).

Figure 125: Extended Pickup Group screen

EXTENDED PICKUP GROUP			
Extended Group Number: 1			
Pickup Number	Pickup Group Number	Pickup Number	Pickup Group Number
0:	1	13:	
1:	12	14:	
2:	15	15:	
3:		16:	
4:		17:	
5:		18:	
6:		19:	
7:		20:	
8:		21:	
9:		22:	
10:		23:	
11:		24:	
12:			

2. Type the numbers of the extended pickup groups that you want to assign to this extended pickup group.
3. Press **Enter** to save your changes.

Removing a pickup group from an extended pickup group

To remove a pickup group from an extended pickup group:

1. Type **change extended-pickup-group *n***, where *n* is the number of the extended pickup group from which you want to remove the pickup group. Press **Enter**.

The system displays the **Extended Pickup Group** screen ([Figure 125: Extended Pickup Group screen](#) on page 565).

2. Move to the extended pickup group number that you want to remove from the pickup group.
3. Press **Clear**.
4. Press **Enter** to save your changes.

Assigning extended pickup groups to another extended pickup group

Prerequisites

You must complete the following actions in the order listed before you assign extended pickup groups to another extended pickup group:

- Ensure that the Extended Group Pickup capability is available on your system.
- Ensure that the FAC for Extended Group Call Pickup is available on your system.

To ensure that the Extended Group Pickup capability is available on your system:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen.
2. Click **Next** until you see the **Extended Group Call Pickup** field
([Figure 126: Feature-Related System Parameters screen](#) on page 566).

Figure 126: Feature-Related System Parameters screen

```
FEATURE-RELATED SYSTEM PARAMETERS

Reserved Slots for Attendant Priority Queue: 5
Time before Off-hook Alert: 10
Emergency Access Redirection Extension:
Number of Emergency Calls Allowed in Attendant Queue: 5
Call Pickup Alerting? n
Temporary Bridged Appearance on Call Pickup? y
Call Pickup on Intercom Calls? y
Directed Call Pickup? y
Extended Group Call Pickup: flexible
Deluxe Paging and Call Park Timeout to Originator? n
Controlled Outward Restriction Intercept Treatment: tone
Controlled Termination Restriction (Do Not Disturb): tone
Controlled Station to Station Restriction: tone
AUTHORIZATION CODE PARAMETERS      Authorization Codes Enabled? y
Authorization Code Length: 7
Authorization Code Cancellation Symbol: #
Attendant Time Out Flag? n
Display Authorization Code? y
Controlled Toll Restriction Replaces: none
```

3. Perform one of the following actions:

- If the **Extended Group Call Pickup** field contains the word **flexible**, press **Cancel**.
- If the **Extended Group Call Pickup** field does not contain the word **flexible**:
 - Type **flexible** in the field.
 - Press **Enter** to save your changes.

To ensure that the FAC for Extended Group Call Pickup is available on your system:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen.

2. Click **Next** until you see the **Extended Group Call Pickup Access Code** field ([Figure 127: Feature Access Code screen](#) on page 567).

Figure 127: Feature Access Code screen

FEATURE ACCESS CODE (FAC)	
Data Origination Access Code: *17	
Data Privacy Access Code: *18	
Directed Call Pickup Access Code: *19	
Emergency Access to Attendant Access Code: *20	
Enhanced EC500 Activation:	Deactivation:
Extended Call Fwd Activate Busy D/A *21 All: *22	Deactivation: #22
Extended Group Call Pickup Access Code: *39	
Facility Test Calls Access Code: *24	
Flash Access Code: *25	
Group Control Restrict Activation: *26	Deactivation: #26
Hunt Group Busy Activation: *27	Deactivation: #27
ISDN Access Code:	
Last Number Dialed Access Code: *29	
Leave Word Calling Message Retrieval Lock: *30	
Leave Word Calling Message Retrieval Unlock: *31	
Leave Word Calling Send A Message: *32	
Leave Word Calling Cancel A Message: *33	
Malicious Call Trace Activation:	Deactivation:
Meet-me Conference Access Code Change:	

3. Perform one of the following actions:

- If the **Extended Group Call Pickup Access Code** field contains a FAC, press **Cancel**.
- If the **Extended Group Call Pickup Access Code** field does *not* contain a FAC:
 - Type a FAC in the field.
 - Press **Enter** to save your changes.

For more information on the Feature Access Code (FAC) feature see the *Administrator's Guide for Avaya Communication Manager*.

Call Pickup

To assign an extended pickup group to another extended pickup group:

1. Type **change extended-pickup-group *n***, where *n* is the number of the extended pickup group to which you want to assign another extended pickup group. Press **Enter**.

The system displays an **Extended Pickup Group** screen ([Figure 128: Extended Pickup Group screen](#) on page 568).

Figure 128: Extended Pickup Group screen

EXTENDED PICKUP GROUP			
Extended Group Number: 1			
Pickup Number	Pickup Group Number	Pickup Number	Pickup Group Number
0:	1	13:	
1:	12	14:	
2:	15	15:	
3:		16:	
4:		17:	
5:		18:	
6:		19:	
7:		20:	
8:		21:	
9:		22:	
10:		23:	
11:		24:	
12:			

2. Type the extended pickup group number that you want to add to this extended pickup group.
3. Press **Enter** to save your changes.

Removing an extended pickup group from an extended pickup group

To remove an extended pickup group from an extended pickup group:

1. Type **change extended-pickup-group *n***, where *n* is the extended pickup group from which you want to remove an extended pickup group. Press **Enter**.

The system displays the **Extended Pickup Group** screen ([Figure 128: Extended Pickup Group screen](#) on page 568).

2. Move to the number of the extended pickup group from which you want to remove the extended pickup group.

3. Press **Clear**.
4. Press **Enter** to save your changes.

End-user procedures for Call Pickup

End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Call Pickup:

- Using Call Pickup to answer a call of another user
- Using Extended Group Pickup to answer a call of another user

To use Call Pickup to answer a call of another user:

1. Go off hook.
2. Perform one of the following actions:
 - Press the call pickup button.
 - Dial the FAC for the Call Pickup feature.

To use Extended Group Pickup to answer a call of another user:

1. Dial the FAC for Extended Group Pickup.
2. Dial the unique number of the extended pickup group.

Each extended pickup group, whether comprised of pickup groups or other extended pickup groups, has a unique identifying number.

Reports for Call Pickup

The following reports provide information about the Call Pickup feature:

- None

Considerations for Call Pickup

This section provides information about how the Call Pickup feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Call Pickup under all conditions.

- Exclusion is not supported for call pickup calls.
- A member of a call pickup group who makes a call to another group member cannot use Call Pickup to answer the call.

Interactions for Call Pickup

This section provides information about how the Call Pickup feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Call Pickup in any feature configuration.

- Abbreviated Dialing

A user can use a single Abbreviated Dial button to store either:

- Both the feature access code (FAC) for Directed Call Pickup and a telephone number
- Only the FAC for Directed Call Pickup

- Attendant

An attendant can use the Directed Call Pickup capability to answer calls. However, other users cannot use the Directed Call Pickup capability to answer a call that alerts at an attendant console.

- Automatic Callback and Ringback Queuing

Neither the call pickup group members nor the Directed Call Pickup users can answer a Callback calls

- Bridged Call Appearance

- If call pickup alerting is active, and a bridged call appearance rings on the telephone of a member of a call pickup group, other group members cannot answer the call.
- If the call pickup alerting capability is not active, and a bridged call appearance rings at the telephone of a member of a call pickup group, other group members can answer the call.
- If the temporary bridged appearance capability on the Call Pickup feature is enabled, a Temporary Bridged Appearance is maintained at the called telephone. The called party can then bridge onto the call after another call pickup group member answers the call.

- You cannot use the Directed Call Pickup capability to answer a call that alerts at a bridged call appearance.
- Call Coverage

If a user has a call-coverage temporary bridged appearance, the user can use Directed Call Pickup to answer a redirected call that alerts at the telephone of another covering user.
- Call Detail Recording (CDR)

CDR records the extension number that the caller dials.
- Call Forwarding

If the Temporary Bridged Appearance capability on the Call Pickup feature is enabled, the system maintains a temporary bridged appearance if the forwarded-to extension belongs to the same call pickup group as the forwarded-from extension. If the Temporary Bridged Appearance capability on the Call Pickup feature is not enabled, the system does not maintain a temporary bridged appearance.
- Call Pickup Alerting

When a pickup group member uses the Directed Call Pickup capability to answer a ringing call of another group member, and the call is the only call that is ringing for any member of the pickup group, the call pickup alerting lamp goes out.
- Call Waiting

A user cannot use the Call Pickup capability to answer a Call Waiting call.
- Conference

If call pickup alerting is enabled, and a user uses the Conference feature after the user answers the call, the call pickup status lamp goes out. If additional calls come into the pickup group, the status lamp of the user flashes.
- Consult

If the Temporary Bridged Appearance capability is not enabled for the Call Pickup feature, the system presents a Consult call from the covering user as an idle call appearance.
- Expert Agent Selection (EAS)

EAS agents use the Directed Call Pickup capability to:

 - Have other agents answer their calls
 - Answer the calls of other agents

The Class of Restriction (COR) of the agent overrides the COR of the extension where the agent is logged in.

If an agent is logged in to a telephone extension, and if the Directed Call Pickup capability is active for both the agent and the extension, the user can use either the agent Login ID or the telephone extension to answer the call with Directed Call Pickup.

Call Waiting Termination

Use the Call Waiting Termination feature to automatically notify a user with a single-line telephone who is active on a call, that a second call is waiting.

Detailed description of Call Waiting Termination

This section provides a detailed description of the Call Waiting Termination feature.

Users with a single-line telephone can place a call on hold to answer a waiting call. After a user answers the call that is waiting, the user can return to the call that is held, or the user can toggle back and forth between the two calls. A user with a single-line telephone can connect to only one call at a time.

Call Waiting tones

When a call is waiting for a user, the user hears:

- One quick burst of tone when a call from another user is waiting
- Two quick bursts of tone when an outside call, or a call that is handled by an attendant, is waiting
- Three quick bursts of tone when a priority call is waiting

Note that the system does not support special ring tones over direct inward dialing (DID) facilities.

A priority call can wait for the telephone to become idle even if Call Waiting Termination is not activated. However, if an attendant handles the call, the user hears a busy tone, unless the Attendant Call Waiting Indication field on the **Station** screen is set to **y**.

You assign Call Waiting Termination on a per-telephone basis. For a virtual extension, you assign Call Waiting Termination on the physical telephone.

Administering Call Waiting Termination

The following steps are part of the administration process for the Call Waiting Termination feature:

- [Assigning Call Waiting Termination](#)

This section describes:

- Any prerequisites for administering the Call Waiting Termination feature
- The screens that you use to administer the Call Waiting Termination feature
- Complete administration procedures for the Call Waiting Termination feature

Prerequisites for administering Call Waiting Termination

You must complete the following actions before you can administer the Call Waiting Termination feature:

- Administer the Feature-Related System Parameters screen to support the Call Waiting Termination feature on your system.

To administer the **Feature-Related System Parameters** screen to support the Call Waiting Termination feature on your system:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen.
2. Click **Next** until you see the **Repetitive Call Waiting Tone** field
([Figure 129: Feature-Related System Parameters screen](#) on page 575).

Figure 129: Feature-Related System Parameters screen

change system-parameters features	Page 10 of 14
FEATURE-RELATED SYSTEM PARAMETERS	
Pull Transfer: y	Update Transferred Ring Pattern? n
Outpulse Without Tone? y	Wait Answer Supervision Timer? n
Misoperation Alerting? n	Repetitive Call Waiting Tone? y
Allow Conference via Flash? y	Repetitive Call Waiting Interval (sec): 4
Vector Disconnect Timer (min):	Network Feedback During Tone Detection? y
Hear Zip Tone Following VOA? y	System Updates Time On Station Displays? y
Intercept Treatment On Failed Trunk Transfers? n	
Station Tone Forward Disconnect: silence	
Level Of Tone Detection: precise	
Charge Display Update Frequency (seconds): 30	
Date Format on 607/2420/4600/6400 Terminals: mm/dd/yy	
Onhook Dialing on 607/2420/4600/6400/8400 Terminals? y	
ITALIAN DCS PROTOCOL	
Italian Protocol Enabled? n	

3. In the **Repetitive Call Waiting Tone** field, perform one of the following actions:

- If you want the users and the attendants to hear a repetitive call waiting tone when the users and attendants use the Call Waiting Termination feature, type **y**.
- If you do not want the users and the attendants to hear a repetitive call waiting tone when the users and the attendants use the Call Waiting Termination feature, type **n**.

4. In the **Repetitive Call Waiting Interval (sec)** field, type the number of seconds between the repetitive call waiting tones.

5. Press **Enter** to save your changes.

Screens for administering Call Waiting Termination

Screen name	Purpose	Fields
Feature-Related System Parameters	Specify that a user or an attendant hears a repetitive tone when a call is waiting.	Repetitive Call Waiting Tone?
	Specify the number of seconds between each repetitive call waiting tone.	Repetitive Call Waiting Interval (sec)

Screen name	Purpose	Fields
Station	Enable the Call Waiting Termination feature for a user.	Call Waiting Indication
	Enable the Call Waiting Termination feature for an attendant.	Att. Call Waiting Indication

Assigning Call Waiting Termination

To assign the Call Waiting Termination feature to a user or an attendant:

1. Type **change station *n***, where *n* is the extension to which you want to assign the Call Waiting Termination feature. Press **Enter**.

The system displays the **Station** screen for the extension that you requested.

2. Click **Next** until you see the **Call Waiting Indication** field ([Figure 130: Station screen](#) on page 576).

Figure 130: Station screen

change station 20001
Page 2 of 3

STATION

FEATURE OPTIONS

LWC Reception: spe

LWC Activation? y

LWC Log External Calls? n

CDR Privacy? n

Redirect Notification? y

Per Button Ring Control? n

Bridged Call Alerting? n

Switchhook Flash? y

Ignore Rotary Digits? n

H.320 Conversion? n

Service Link Mode: as-needed

Multimedia Mode: basic

MWI Served User Type:

AUDIX Name:

Emergency Location Ext: 103

Precedence Call Waiting? y

Coverage Msg Retrieval? y

Auto Answer: none

Data Restriction? n

Call Waiting Indication? y

Att. Call Waiting Indication? y

Distinctive Audible Alert? y

Adjunct Supervision? y

Per Station CPN - Send Calling Number?

Coverage After Forwarding? s

Direct IP-IP Audio Connections? y

IP Audio Hairpinning? y

3. In the **Call Waiting Indication** field, perform one of the following actions:

- If you want to activate Call Waiting Termination for the user, type **y**.

If you set the **Call Waiting Indication** field to **y**, calls that a user or an attendant originate, and calls that originate from the outside, wait at the single-line telephone if the telephone is busy. The system sends a distinctive call-waiting tone to the user.

The system denies the Call Waiting Termination feature to a user if any of the following conditions are true:

- **Data Restriction** field on the **Station** screen is set to **y**
- **Switchhook Flash** field on the **Station** screen is set to **n**
- Class of Service that you assign to the user activates the Data Privacy feature for the user

- If you want to deactivate Call Waiting Termination for the user, type **n**.

4. In the **Att. Call Waiting Indication** field, perform one of the following actions:

- Type **y** to activate Attendant Call Waiting Termination for the user.

If you set the **Att. Call Waiting Indication** field to **y**, calls that an attendant originates, or that an attendant extends, wait at the single-line telephone if the telephone is busy. The system sends a distinctive call-waiting tone to the user.

The system denies the Call Waiting Termination feature to a user if any of the following conditions are true:

- **Data Restriction** field on the **Station** screen is set to **y**.
- **Switchhook Flash** field on the **Station** screen is set to **n**.
- Class of Service (COS) that you assign to the user activates the Data Privacy feature for the user.

- Type **n** to deactivate Call Waiting Termination for the user.

5. Press **Enter** to save your changes.

Reports for Call Waiting Termination

The following reports provide information about the Call Waiting Termination feature:

- None

Considerations for Call Waiting Termination

This section provides information about how the Call Waiting Termination feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Call Waiting Termination under all conditions. The following considerations apply to Call Waiting Termination:

- Call Waiting is available only for users who have single-line telephones. Calls to multiple-appearance telephones do not wait, because the system routes these calls to an idle call appearance.
- An analog telephone user must place the active call on soft hold, and dial the Answer Hold-Unhold feature access code, to answer the waiting call.
- If you activate Call Waiting for a user of an analog single-line telephone, and the user starts a conference call, the system denies the Call Waiting feature to the user while the user is on the conference call.

Interactions for Call Waiting Termination

This section provides information about how the Call Waiting Termination feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Call Waiting Termination in any feature configuration.

- The system denies the use of the Call Waiting Termination feature when any of the following conditions or features are active at a single-line telephone:
 - Another Call Waiting call
 - Automatic Callback (to or from the telephone)
 - Data Privacy
 - Data Restriction

- Call Pickup and Directed Call Pickup

A member of a call pickup group cannot use the Call Pickup feature or the Directed Call Pickup capability to pick up a Call Waiting call.

Call-by-Call Service Selection

Use the Call-by-Call (CBC) Service Selection feature to allow a single ISDN trunk group to carry calls to several services. Call-by-Call Service Selection eliminates the need to dedicate each trunk group to a specific service. With Call-by-Call Service Selection, you can set up various voice and data services and features for a particular call.

Call-by-Call Service Selection provides the following benefits:

- Cost reduction. Since many services share the same trunks, this feature can reduce the total number of trunks that you must use.
- Improved service. Features and services are less likely to be blocked.
- Simplified networking. This feature simplifies network engineering. Instead of a per-service basis, you can analyze trunking needs based on total traffic.
- Tracking. Call-by-Call Service Selection calls are measurable.

Detailed description of Call-by-Call Service Selection

This section provides a detailed description of the Call-by-Call (CBC) Service Selection feature.


Call-by-Call Service Selection uses the same route patterns and route preferences as Automatic Alternate Routing (AAR), Automatic Route Selection (ARS), and Generalized Route Selection (GRS). The system uses information that is assigned in the AAR, ARS, GRS route patterns to determine what service or facility to use on an outgoing Call-by-Call Service Selection call.

You can administer a variety of services to use a single trunk group. The system distributes traffic over all available trunks for increased efficiency. Then you can assign services that are used on incoming and outgoing Call-by-Call Service Selection calls.

Using Country Protocol 1, you can integrate services such as MEGACOM, ACCUNET, and INWATS onto a single ISDN trunk group, with flexible assignment of trunks to each service. Calls such as an incoming 800 service call that requires through-switching as an outgoing WATS call can be routed over the same facility.

[Figure 131: Call-by-Call Service Selection example](#) on page 580 shows an example of Call-by-Call Service Selection.

 Figure 131: Call-by-Call Service Selection example

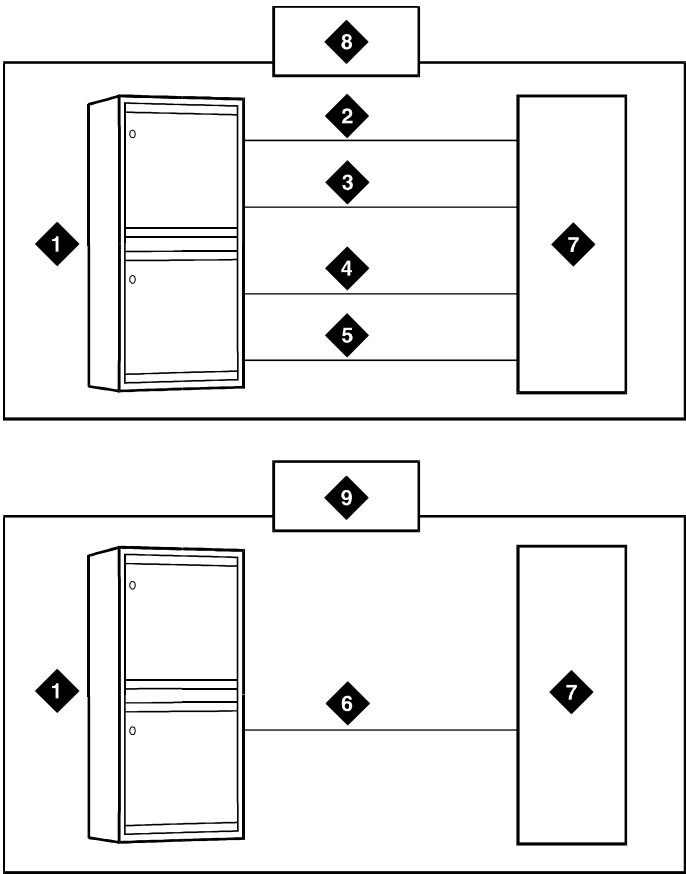

r773197 C.JL 060396

Figure notes:

1. Avaya Media Server	5. OUTWATS trunk group
2. MEGACOM trunk group	6. Call-by-Call Service Selection trunk group
3. MEGACOM 800 trunk group	7. Public switched network
4. Software-defined network (SDN) trunk group	8. Without Call-by-Call Service Selection
	9. With Call-by-Call Service Selection

ISDN messages and information elements for usage allocation

Call-by-Call Service Selection allows the system to specify service types on a call-by-call basis. To specify service types, you assign incoming calls to an ISDN Call-By-Call trunk group based on the number of the called party.

You can also specify service types in a SETUP message. This message indicates that the originating system intends to use the specified service or facility to initiate a call. The SETUP message can contain units called *Information Elements* (IE) that specify call-related information. Call-by-Call Service Selection uses the following IEs:

- Network-Specific Facility (NSF). Indicates which facilities or services are used to complete the call. NSF is usually not used outside the US and Canada.

The system also checks all incoming ISDN trunk calls for the presence of an NSF IE. If an NSF IE is present, the system ensures that the requested service is compatible with the trunk administration before the system accepts the call.

For an outgoing CBC trunk group, the system uses the service or the feature that is specified on the selected route pattern for the call to construct the NSF IE.

If an associated NSF does not exist for the specified service or feature, the system does not send an NSF IE. For example, SETUP messages for incoming and outgoing calls that are classified only by a called-party number do not contain an NSF IE.

- Transit Network Selection. Indicates which interexchange carrier (IXC) the system uses on an inter-LATA call.

If a call requires both the service or the feature and the IXC to be specified, the system sends the IXC information in the NSF IE, instead of in the Transit Network Selection IE.

Usage Allocation Plans

You can assign Usage Allocation Plans (UAPs) to provide more control over a Call-by-Call Service Selection trunk group. You can allocate a minimum and a maximum number of channels for incoming and outgoing called numbers, privileged users, and voice and data calls.

With a UAP, you can set the:

- Maximum number of trunks that each service can use at any given time. The sum for all services can exceed the total number of trunk group members. For example, for a 15-member trunk group, you can administer a maximum of seven MEGACOM service calls, six MEGACOM 800 service calls, and eight software-defined network (SDN) calls. This ensures that a specific service does not dominate all trunk group members, yet allows for fluctuations in demand.
- Minimum number of trunks that must always be available for each service. The sum for all services cannot exceed the total number of trunk group members. For example, for a 10-member trunk group that provides access to MEGACOM service, MEGACOM 800 service, and SDN service, the minimum number of trunks to use for each of these services cannot add up to more than 10.

Call-by-Call Service Selection

When these UAP limits are exceeded, the system rejects the call, even if a trunk is available. On outgoing calls, the calling party hears a reorder tone, unless other routing preferences are available.

You can assign either a *fixed* or a *scheduled* UAP for each Call-by-Call Service Selection trunk group.

- With a fixed UAP, one plan applies at all times.
- With a scheduled UAP, you can administer different plans to apply at different times of the day and on different days of the week. You can assign as many as six activation times and associated plans for each day of the week.

You can administer a simple fixed UAP, or a flexible UAP with many scheduling options. You can even start out with no UAP, and then build the UAP as needed.

Incoming call-handling treatment

Call-by-Call Service Selection provides special incoming call-handling treatment for ISDN and SIP trunk groups. The system handles an incoming call on an ISDN or SIP trunk according to a treatment table that you administer for the trunk group. Depending on the platform that you use, the table allows for a different number of combinations of call treatments.

The system selects the treatment for an incoming call based on the first three columns of the **Incoming Call-Handling Treatment (ICHT)** screen. When the attributes of an incoming call match these specifications, the system treats the call according to the corresponding entries in the next four columns of the table. If an incoming call matches more than one set of specifications, the most restrictive case applies. The following table lists the possible cases from most restrictive to least restrictive.

	Service or feature	Called len	Called number
Most restrictive	Specified	Specified	x leading digits specified
	Specified	Specified	y leading digits specified, where $y < x$
	Specified	Specified	Not specified
	Specified	Not specified	Not specified
	"Other"	Specified	x leading digits specified
	"Other"	Specified	y leading digits specified, where $y < x$
	"Other"	Specified	Not specified
Least restrictive	"Other"	Not specified	Not specified

Call Detail Recording

On successful call attempts that use ISDN CBC trunk groups, Call Detail Recording (CDR) records the NSF that the NSF IEs of the call specify. CDR refers to this information as the ISDN Network Service (INS). The value that is passed to CDR is the 3-digit equivalent of the NSF IE. The system also records NSF information for Facility Type 2 calls that use ISDN Call-by-Call trunk groups, if the NSF is available in the incoming SETUP message.

If an outgoing Call-by-Call Service Selection call uses an interexchange carrier other than the presubscribed common carrier, CDR records the 3-digit or the 4-digit Interexchange Carrier (IXC) Code . CDR might not record the IXC properly if the dialed-code format differs from the US IXC code formats.

When a Call-by-Call Service Selection call is rejected because of a UAP, CDR records the cause as an ineffective call attempt. The NSF recording also occurs for the user-defined Facility Type 2. However, the NSF recording occurs only if the NSF is available in the incoming SETUP message.

Administering Call-by-Call Service Selection

You administer Call-by-Call Service Selection on a per-trunk-group basis.

The following steps are part of the administration process for the Call-by-Call Service Selection feature:

- [Setting up a trunk group for CBC](#)
- [Administering incoming call handling treatment](#)
- [Administering route patterns for the CBC trunk group](#)
- [Administering network facilities](#)

This section describes:

- Any prerequisites for administering the Call-by-Call Service Selection feature
- The screens that you use to administer the Call-by-Call Service Selection feature
- Complete administration procedures for the Call-by-Call Service Selection feature

Prerequisites for administering Call-by-Call Service Selection

You must complete the following actions before you can administer the Call-by-Call Service Selection feature:

- View the **Optional Features** screen, and ensure that the following fields are set to **y**:
 - **ISDN**
 - **ISDN-BRI Trunks**
 - **Usage Allocation Enhancements**

If any of these fields is set to **n**, your system might not be enabled for the Call-by-Call Service Selection feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Screens for administering Call-by-Call Service Selection

Screen name	Purpose	Fields
Optional Features	Ensure that the proper license fields are set to y .	● ISDN-PRI ● ISDN-BRI Trunks ● Usage Allocation Enhancements
ISDN Trunk Group	Indicate the service for which this trunk group is dedicated.	● Service Type ● Usage Alloc ● All fields on the CBC Trunk Group Usage Allocation page ● All fields on the CBC Trunk Group Usage Allocation Plan Assignment Schedule page
Incoming Call Handling Treatment	Specify call handling for ISDN and SIP trunk groups.	● All fields on the Incoming Call Handling Treatment (ICHT) Table screen

Screen name	Purpose	Fields
Route Pattern	Administer the route patterns to use with this trunk group.	● IXC ● Service/Feature ● Band
Network-Facilities	Administer network facilities for Call-by-call Service Selection.	All

Setting up a trunk group for CBC

To set up a trunk group for Call-by-Call Service Selection:

1. Type **change trunk-group *n***, where *n* is the ISDN trunk group that you want to designate for Call-by-Call Service Selection. If you want to add a new trunk group, type **add trunk-group *x***, where *x* is the next unused trunk group number.

The system displays the **ISDN Trunk Group** screen ([Figure 132: ISDN Trunk Group screen](#) on page 585).

Figure 132: ISDN Trunk Group screen

add trunk-group next
Page 1 of x

TRUNK GROUP

Group Number: xxx Group Type: isdn CDR Reports: y
Group Name: OUTSIDE_CALL _____ COR: 1_ TN: 1_ TAC: _____
Direction: two-way_ Outgoing Display? n Carrier Medium: PRI/BRI
Dial Access? n Busy Threshold: 99_ Night Service: _____
Queue Length: 0_
Service Type: _____ Auth Code? n TestCall ITC: rest
Usage Alloc: _____ Far End Test Line No: _____
TestCall BCC: 4 TestCall Service: _____

TRUNK PARAMETERS

Codeset to Send Display: 6 Codeset to Send TCM, Lookahead: 6
Max Message Size to Send: 260 Charge Advice: none _____
Supplementary Service Protocol: a Digit Handling(in/out): overlap/overlap
Digit Treatment: insertion Digits: 1234
Trunk Hunt: cyclical QSIG Value-Added? n
Digital Loss Group: _____
Incoming Calling Number - Delete: _____ Insert: _____ Format: _____
Bit Rate: 1200_ Synchronization: async Duplex: full
Disconnect Supervision - In? y Out? n
Answer Supervision Timeout: 0_

2. In the **Group Type** field, type **isdn**. The system displays additional ISDN-specific fields.
3. In the **Service Type** field, type **cbc** for Call-by-call Service Selection.

4. In the **Usage Allocation** field, type **y** to allocate the service that the trunk group provides.
5. Click **Next** until the system displays the **CBC Trunk Group Usage Allocation** page of the **Trunk Group** screen ([Figure 133: CBC Trunk Group Usage Allocation screen](#) on page 586).

Figure 133: CBC Trunk Group Usage Allocation screen

[illegible]

6. In the **Service/Feature** field under the **Usage Allocation Plan 1** column, type the name of the service for which you want to allocate CBC trunk service. You can administer up to three (UAPs) for each trunk.
7. In the **Min # Chan** and **Max # Chan** fields, type a minimum number and a maximum number of channels for incoming and outgoing called numbers, privileged users, and voice and data calls.
8. Repeat Steps 8 and 9 for each service for which you want to allocate CBC trunk service.
9. Click **Next** until you see the **CBC Trunk Group Usage Allocation Plan Assignment Schedule** page of the **Trunk Group** screen ([Figure 134: CBC Trunk Group Usage Allocation Plan Assignment Schedule screen](#) on page 587).

Figure 134: CBC Trunk Group Usage Allocation Plan Assignment Schedule screen

add trunk-group next
Page y of x

CBC SERVICE TRUNK GROUP ALLOCATION PLAN ASSIGNMENT SCHEDULE

Usage Method:

Fixed? y
Scheduled? n
Allocation Plan Number: 1

Usage Allocation Plan Activation Schedule:

	Act Time	Plan #	Act Time	Plan #	Act Time	Plan #	Act Time	Plan #	Act Time	Plan #	Act Time	Plan #
Sun	__:	__	__:	__	__:	__	__:	__	__:	__	__:	__
Mon	__:	__	__:	__	__:	__	__:	__	__:	__	__:	__
Tue	__:	__	__:	__	__:	__	__:	__	__:	__	__:	__
Wed	__:	__	__:	__	__:	__	__:	__	__:	__	__:	__
Thu	__:	__	__:	__	__:	__	__:	__	__:	__	__:	__
Fri	__:	__	__:	__	__:	__	__:	__	__:	__	__:	__
Sat	__:	__	__:	__	__:	__	__:	__	__:	__	__:	__

10. In the **Fixed** field, perform one of the following actions:

- If you want a specific UAP to be activated at all times for this trunk group, type **y**. If you type **y**, the **Allocation Plan Number** field appears.
- If you do not want a fixed UAP to be activated at all times for this trunk group, type **n**.

11. In the **Allocation Plan Number** field, type the number of the UAP that you want to be activated at all times for this trunk group.

12. In the **Scheduled** field, type **y** if you want to administer a schedule that can change up to six times a day for each day of the week.

13. For each day of the week, use the **Act Time** and the **Plan #** fields to type the activation time, and the type of UAP to use at different times of the day.

14. Press **Enter** to save your changes.

Administering incoming call handling treatment

To administer incoming call handling treatment for a CBC trunk group:

1. Type **change inc-call-handling-trmt**. The system displays the **Incoming Call Handling Treatment** screen ([Figure 135: Incoming Call Handling Treatment screen](#) on page 588).

Figure 135: Incoming Call Handling Treatment screen

[illegible]

2. Complete the fields on the **Incoming Call Handling Treatment** screen for each Call-by-Call Service Selection service.

Note:

For SIP trunk groups, the **Per Call CPN/BN** and **Night Serv** fields do not appear on the **Incoming Call Handling Treatment** screen. For more information on the **Incoming Call Handling Treatment** screen, see the Screen Reference section of the *Administrator Guide for Avaya Communication Manager*.

Administering route patterns for the CBC trunk group

To administer route patterns for a CBC trunk group:

1. Type **change route-pattern *n***, where *n* is the number of the route pattern that you want to administer.

The system displays the **Route Pattern** screen ([Figure 136: Route Pattern screen](#) on page 589).

Figure 136: Route Pattern screen

change route-pattern 1
Page 1 of X

Pattern Number: 1_

Grp.	FRL	NPA	Pfx	Hop	Toll	No. Del	Inserted QSIG IXC	DCS/ Intw
No.			Mrk	Lmt	List	Dgts	Digits	
1:	___	-	___	-	___	___	_____	n user
2:	___	-	___	-	___	___	_____	n user
3:	___	-	___	-	___	___	_____	n user
4:	___	-	___	-	___	___	_____	n user
5:	___	-	___	-	___	___	_____	n user
6:	___	-	___	-	___	___	_____	n user

BCC	VALUE	TSC	CA-TSC	ITC	BCIE	Service/Feature	BAND	No. Dgts	Numbering Format	LAR
0	1 2 3 4 W		Request					Subaddress		
1:	y y y y y n	y	none	___	both	ept outwats-bnd	___	___	___	none
2:	y y y y y n	y			rest	_____		___	___	next
3:	y y y y y n	y			rest	_____		___	___	rehu
4:	y y y y y n	y			rest	_____		___	___	none
5:	y y y y y n	y			rest	_____		___	___	none
6:	y y y y y n	y			rest	_____		___	___	none

2. In the **IXC** (Interexchange Carrier) field, identify the carrier, such as AT&T, that the system uses for calls that are routed over an IXC, and for Call Detail Recording (CDR). This field can also be left blank.
3. In the **Service/Feature** fields, type the name of the service that is associated with this route pattern.
4. If the value in the **Service/Feature** field is **outwats-bnd**, use the **Band** field to enter a number that represents the OUTWATS band number (US only).
5. Press **Enter** to save your changes.

Note:

For more information on the **Route Pattern** screen, see the Screen Reference section of the *Administrator's Guide for Avaya Communication Manager*.

Administering network facilities

The **Network Facilities** screen supports the Call-by-Call Service Selection feature for ISDN trunks. Only Avaya personnel can administer these predefined services and features. If the **Usage Allocation Enhancement** field on the **Optional Features** screen is set to **y**, you can administer the **Additional Services/Features** fields.

To administer network facilities:

1. Type **change isdn network-facilities**. Press **Enter**.

The system displays the **Network Facilities** screen ([Figure 137: Network Facilities screen](#) on page 590).

Figure 137: Network Facilities screen

change isdn network-facilities				Page 1 of X			
NETWORK-FACILITIES							
		Facility				Facility	
Name	Type	Coding		Name	Type	Coding	
sub-operator	0	00110		mega800	1	00010	
operator	0	00101		megacom	1	00011	
outwats-bnd	1	00001		inwats	1	00100	
sdn	1	00001		wats-max-bnd	1	00101	
accunet	1	00110		lds	1	00111	
i800	1	01000		multiquest	1	10000	
_____	-	_____		_____	-	_____	
_____	-	_____		_____	-	_____	
_____	-	_____		_____	-	_____	
_____	-	_____		_____	-	_____	
_____	-	_____		_____	-	_____	
_____	-	_____		_____	-	_____	
_____	-	_____		_____	-	_____	
_____	-	_____		_____	-	_____	
_____	-	_____		_____	-	_____	
_____	-	_____		_____	-	_____	
_____	-	_____		_____	-	_____	
_____	-	_____		_____	-	_____	
_____	-	_____		_____	-	_____	

2. In the **Name** field, type up to 15 alphanumeric characters to specify the name of the indicated service or feature.
3. In the **Facility Type** field, perform one of the following actions:
 - If the associated entry is a feature, type **0**.
 - If the associated entry is a service, type **1**.
 - If the associated entry is of type **incoming**, type **2**.
 - If the associated entry is of type **outgoing**, type **3**.

Note:

You can administer types 2 and 3 if the **Usage Allocation Enhancements** field on the **Optional Features** screen is set to **y**.

If the **Facility Type** field is set to either **0** or **1**, the **Facility Coding** field displays five binary values. These values specify the ISDN encoding value of the associated service or feature.

4. Press **Enter** to save your changes.

Reports for Call-by-Call Service Selection

The following reports provide information about the Call-by-Call Service Selection feature:

- None

Considerations for Call-by-Call Service Selection

This section provides information about how the Call-by-Call Service Selection feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Call-by-Call Service Selection under all conditions. The following considerations apply to Call-by-Call Service Selection:

- None

Interactions for Call-by-Call Service Selection

This section provides information about how the Call-by-Call Service Selection feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Call-by-Call Service Selection in any feature configuration.

- **Call Detail Recording (CDR)**

On successful call attempts that use ISDN Call-By-Call trunk groups, CDR records the Network-Specific Facility (NSF) that is specified by the NSF IE of the call. CDR refers to this information as the ISDN Network Service (INS). The value that is passed to CDR is the 3-digit equivalent of the NSF IE. NSF information for Facility Type 2 calls, which is used with ISDN Call-by-Call trunk groups, is also recorded if the NSF is available in the incoming SETUP message.

If an outgoing Call-by-Call Service Selection call uses an interexchange carrier (IXC) other than the presubscribed common carrier, CDR records the 3-digit or the 4-digit IXC code . CDR might not record the IXC code properly if the dialed-code format differs from the IXC formats that are used in the US.

When a Call-by-Call Service Selection call is rejected because of a Usage Allocation Plan (UAP), CDR records the cause as an ineffective call attempt. The NSF recording also occurs for the user-defined Facility Type 2 call. However, the NSF recording occurs only if the NSF is available in the incoming SETUP message.

- **Generalized Route Selection (GRS)**

Call-by-Call Service Selection uses the same routing tables and routing preferences that GRS uses.

- **Multiquest Flexible Billing**

Do not use a service or a facility with the Facility Type set to 2 or 3. NSF processing is not performed for Facility Type 2. An NSF is not included in the outgoing SETUP message for Facility Type 3.

- **Time-of-Day Routing**

Any Time-of-Day Routing administration that affects routing preference also affects Call-by-Call Service Selection. Use Time-of-Day Routing to vary the IXC, based on the time of day and the day of week.

- **Traffic Measurements**

The system provides traffic measurements for each service that is administered for an ISDN Call-by-Call Service Selection trunk group.

Caller ID

Use the Caller ID feature to interpret calling party information that is signaled over ISDN or H.323 trunks, and displaying the calling party number on your display telephone. Caller ID is also known as Incoming Call Line Identification (ICLID).

Detailed description of Caller ID

This section provides a detailed description of the Caller ID feature.

The Caller ID feature displays calling party information on your display telephone that is signaled over ISDN or H.323 trunks.

- For a description about calling party information that is signaled over multifrequency (MF) or Session Initiation Protocol (SIP) trunks to your display telephone, see the "Automatic Number Identification" feature.
- For a description about calling party information that is signaled over Centralized Automatic Message Accounting (CAMA) trunks to your local emergency rapid response organization, see the "E911" feature.

Avaya Communication Manager stores and displays up to 15 characters of caller ID information, which the central office (CO) sends on incoming calls. If the information is longer than 15 characters, the software truncates the information to 15 characters. If the caller ID information is not received, the system displays the trunk group name and the trunk access code (TAC).

In the US, the CO sends both calling party name and calling party number, if this information is available. In Japan, the CO sends only the calling party number. This information is sent on a CO loop-start trunk in the US. In Japan, this information is sent on either a CO loop-start trunk, a Direct Inward Dialing (DID) trunk, or a Direct Inward and Outward Dialing (DIOD) trunk.

Caller ID supports the following capabilities:

- [Caller ID on analog trunks](#)
- [Caller ID on digital trunks](#)

Caller ID on analog trunks

Caller ID on analog trunks is also known as Bellcore Calling Name ID. This capability allows the system to accept calling name information from a local exchange carrier (LEC) network that supports the Bellcore calling name specification. The system can also send calling name information in the correct format if Bellcore calling name ID is properly administered. The following caller ID protocols are supported:

- Bellcore (default). US protocol (Bellcore transmission protocol with 212 modem protocol)
- V23-Bell. Bahrain protocol (Bellcore transmission protocol with V.23 modem protocol)

Caller ID on digital trunks

In the US, a CO can send the calling party name and the calling party number over digital trunks for display on digital telephones. The display of the calling party name and the calling party number works with all Communication Manager Digital Communications Protocol (DCP) and Basic Rate Interface (BRI) digital telephones that have either a 40-character or a 32-character alphanumeric display.

Administering Caller ID

The following steps are part of the administration process for the Caller ID feature:

- [Displaying Caller ID information](#)

This section describes:

- Any prerequisites for administering the Caller ID feature
- The screens that you use to administer the Caller ID feature
- Complete administration procedures for the Caller ID feature

Prerequisites for administering Caller ID

You must complete the following actions before you can administer the Caller ID feature:

- View the **Optional Features** screen, and ensure that the **G3 Version** field is set to **V6** or later, and that the **Analog Trunk Incoming Call ID** field is set to **y**. If the **G3 Version** field is not set to **V6** or later, or if the **Analog Trunk Incoming Call ID** field is set to **n**, your software is not enabled for the Caller ID feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Screens for administering Caller ID

Screen name	Purpose	Fields
Optional Features	Ensure that the Analog Trunk Incoming Call ID field is set to y .	Analog Trunk Incoming Call ID
Trunk Group	Set this field to 120 for Caller ID.	Incoming seizure (msec)
	Set up the trunk group to receive caller ID information.	Receive Analog Incoming Call ID
	Set to incoming or two-way .	Direction

Displaying Caller ID information

To set up a trunk group to receive calling party information and display the calling party name and the calling party number on the telephone display of the called party:

1. Type **change trunk group n**, where **n** is the number of the trunk group for which you want to set up Caller ID. If you want to set up a new trunk group, type **add trunk group next**.

The system displays the **Trunk Group** screen ([Figure 138: Trunk Group screen](#) on page 596).

Figure 138: Trunk Group screen

change trunk-group 5
Page 1 of x

TRUNK GROUP

Group Number: ____	Group Type: co ____	CDR Reports: _
Group Name: _____	COR: _	TN: ____ TAC: ____
Direction: _____	Outgoing Display? _	Trunk Signaling Type: ____
Dial Access? _	Busy Threshold: ____	Night Service: ____
Queue Length: ____	Incoming Destination: ____	
Comm Type: ____	Auth Code? _	
	Trunk Flash? _	
BCC: _	ITC? ____	

TRUNK PARAMETERS

Trunk Type (in/out): _____	Incoming Rotary Timeout(sec): ____
Outgoing Dial Type: _____	Incoming Dial Type: ____
	Disconnect Timing(msec): ____
Digit Treatment: _____	Digits: ____
	Sig Bit Inversion: none
Analog Loss Group: ____	Digital Loss Group: ____
Incoming Dial Tone? _	
Incoming Calling Number - Delete: ____	Insert: ____ Format: ____
Bit Rate: ____	Synchronization: ____ Duplex: ____
Disconnect Supervision - In? _ Out? _	
Answer Supervision Timeout: ____	Receive Answer Supervision? _

2. In the **Group Type** field, type **co**, **did**, or **diod**.
3. In the **Direction** field, type **incoming** or **two-way**.

Note:

When the **Group Type** is **diod**, the **Direction** field defaults to **two-way**. When the **Group Type** is **did**, the **Direction** field is hidden, because all calls are incoming.

4. Click **Next** until you see the **Trunk Group** screen **Trunk Features** page.
[\(Figure 139: Trunk Group Trunk Features screen on page 596\).](#)

Figure 139: Trunk Group Trunk Features screen

change trunk-group 5
Page 2 of x

TRUNK GROUP

TRUNK FEATURES

ACA Assignment? n	Measured: none	Maintenance Tests? y
	Data Restriction? n	
Suppress # Outpulsing? n	Receive Analog Incoming Call ID: Bellcore	
Incoming Tone (DTMF) ANI: no		

5. In the **Receive Analog Incoming Call ID** field, type **Bellcore** for the US, or **NTT** for Japan.
6. Click **Next** until the system displays the **Trunk Group** screen, **Administrable Timers** page. ([Figure 140: Trunk Group Administrable Timers screen](#) on page 597).

Figure 140: Trunk Group Administrable Timers screen

change trunk-group 5	Page 3 of x
TRUNK GROUP	
ADMINISTRABLE TIMERS	
Incoming Disconnect(msec): 500	
Incoming Dial Guard(msec): 70	
	Incoming Seizure(msec): 120
Flash Length(msec): 540	Incoming Incomplete Dial Alarm (sec): 255
END TO END SIGNALING	
Tone (msec): 350	Pause (msec): 150

7. In the **Incoming Seizure (msec)** field, type **120**.
8. Press **Enter** to save your changes.

Reports for Caller ID

The following reports provide information about the Caller ID feature:

- None

Considerations for Caller ID

This section provides information about how the Caller ID feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Caller ID under all conditions. The following considerations apply to Caller ID:

- If you use Incoming Caller ID on analog trunks that are connected to a Direct Inward and Outward Dialing (DIOD) central office (CO) trunk circuit pack, do not put these trunks in an outgoing Automatic Alternate Routing (AAR) or an Automatic Route Selection (ARS) route pattern. The loop-start trunks that the DIOD CO trunk circuit pack supports do not provide answer supervision. Thus the potential for toll fraud exists.

Interactions for Caller ID

This section provides information about how the Caller ID feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Caller ID in any feature configuration.

- **Attendant Display Features**

A call that is redirected to either the attendant or the attendant queue causes the display on the station of the attendant to match that of the station display of the connected party.

- **Automatic Display of Incoming Call Identification**

If a new call comes in while the station user is off-hook and connected to a call, the display automatically shows the new incoming call identity for 30 seconds. After 30 seconds, the display returns to the identity of the original call. If the system redirects the call after a few rings, the display returns to the identity of the original call. If the system shows a new incoming call, and then that call drops, the display returns to the identity of the original call.

- **Bridged Call**

The system shows incoming call identity on both the primary station and the bridged station.

- **Call Forwarding**

- Forwarded-From Station Display

The system does not show any information on the station of the called principal.

- Forwarded-To Station Display

The system shows the identity of the calling party and the called party, and the reason (R) code. If the forwarded-to station is on a different switch, the system does not forward the called party information.

- **Call Pickup**

- Called Party Station Display

Shows the identity of the calling party.

- Answering Party Station Display

If Call Pick-Up answers a Caller ID call, the system shows the identities of both the calling party and the called party.

- Call Coverage

- Called Party Display

The display of the called party shows the identity of the calling party until the coverage party answers the call. If the coverage party answers the call, the station display of the called party goes blank. If the called party temporarily bridges in after the coverage party answers the call, the displays of the coverage party and the called party change to indicate a conference call.

- Coverage User Station Display

The station display of the coverage user shows the same display as the station display of the connected party.

- Call Vector Routing

When a Caller ID call coming from analog trunks transfers to a Vector Directory Number (VDN), the incoming calling number is directed to that VDN so call vector routing can be based on the caller ID information.

The Automatic Number Identification (ANI) that is received for the incoming call, by way of inband signaling or ISDN, is forwarded with a route-to step over a trunk that supports inband or ISDN ANI delivery.

- Distributed Communications System (DCS)

If Communication Manager has both DCS and Integrated Services Digital Network (ISDN) displays, the system shows the caller ID information in DCS formats.

- Hold

When Hold is activated, the display becomes blank. The party who activates the Hold then reads the identity of the newly connected party. The display of the held station remains unchanged. When the party deactivates the Hold, the system refreshes the display to indicate the current state of the call.

- Malicious Call Trace (MCT)

When MCT is activated for a particular call, the system displays incoming calling numbers to controller stations.

- Tandem Operations

The system passes the calling party name and the calling party number to the terminating server over ISDN trunks with DCS Plus (+).

- Transfer

When the system transfers an Caller ID call, the display of the transferred-from station becomes blank. The display of the transferred-to station shows the identity of the transferred-from party if the transfer is not yet complete. Once the transfer is complete, the transferred-to station shows the identity of the calling party.

Centralized Attendant Service

Use the Centralized Attendant Service (CAS) feature to allow attendants within a private network to serve all branch locations from a central or a main location. Each branch in a centralized attendant service has its own listed directory number (LDN) or other type of access from the public network. With this feature, the system routes incoming calls to a branch, and calls that users make directly to the attendants, to the centralized attendant. CAS uses release link trunks (RLT) to direct calls.

Detailed description of Centralized Attendant Service

This section provides a detailed description of the Centralized Attendant Service (CAS) feature.

With Centralized Attendant Service (CAS), you can provide attendant services in a private network from a central location.

The CAS main system operates independently of the individual CAS branch systems. The operation for CAS main system traffic is identical to the operation of a stand-alone system.

Each branch in a CAS network connects to the main office through RLTs. These trunks provide paths to:

- Send incoming attendant-seeking trunk calls at the branch to the main location for processing and extend the calls back to the branch. Both parts of a call use the same trunk.
- Return timed-out waiting and held calls from the branch to the main location.
- Route calls from the branch to the main location.

Two queues are associated with CAS calls. One queue is at the main office, and the other queue is at the branch. If idle RLTs are available from the branch to the main location, RLTs are seized. CAS calls are then queued at the main location, along with other attendant-seeking calls. If all RLTs are in use, CAS calls to the attendant are queued at the branch in an RLT queue. The length of the queue can vary from 1 to 100 calls. You set the length of the queue when you administer the RLT group.

Backup service provides for all CAS calls to be sent to a backup extension in the branch if:

- All RLTs maintenance-busy
- All RLTs are out of service
- The attendant presses a Backup button that is not lit

Centralized Attendant Service

To activate this feature and to provide notification that backup service is in effect, assign the backup extension to a Backup button and an associated status lamp.

- The status lamp remains lit as long as backup service is in effect.
- To deactivate the CAS feature, the attendant presses the Backup button while the status lamp is lit. The system does not send calls to the backup extension unless all RLTs are maintenance-busy, or out of service.

The attendant can put a CAS call from a branch on Remote Hold. The branch holds the call, and drops the RLT. After a timeout, which is the same as the timed reminder for an attendant-held call, the branch automatically attempts to route the call back to the attendant. The returning call can queue for the RLT. Attendants can use Remote Hold when the attendant must put a call on hold to prevent the unnecessary use of RLTs.

Centralized Attendant Service (CAS) supports the following capabilities:

- [Branch-generated call identification tones](#)

Branch-generated call identification tones

The branch in a CAS network generates call identification tones, and transmits the tones to the CAS attendant through RLTs. These tones indicate the type of call from the branch, or the status of a call extended to or held at the branch. The attendant hears these tones in the console handset before the attendant is connected to the caller.

The following identification tones might vary by country.

- Incoming trunk calls: 480 Hz (100 ms), 440 Hz (100 ms), 480 Hz (100 ms) in sequence. The attendant hears this tone immediately after the attendant lifts the handset.
- Calls from a branch telephone to the main attendant, or calls that are transferred by a branch telephone to the main attendant 440 Hz (100 ms), silence (100 ms), 440 Hz (100 ms) in sequence. The attendant hears this tone immediately after the attendant lifts the handset.
- Calls that the system extends to an idle telephone, or recall on Does Not Answer: The attendant hears ringback tone (300 ms), and then connection to the normal ringing cycle.
- Calls that the system extends to a busy telephone, automatically waiting, or recall on Attendant Call Waiting: 440 Hz (100 ms).
- Calls that the system extends to a busy telephone, waiting denied, or not provided: A busy tone.
- Remote Hold or Remote Hold recall: A series of four to six cycles of 440 Hz (50 ms), and then silence (50 ms).
- Recall on Does Not Answer: A burst of ringback tones (300 ms), and then connection to normal ringback at any point in the cycle.

- Recall from a call that is on Remote Hold: A series of four to six cycles of 440 Hz (50 ms), and then silence (50 ms).
- Recall from a call that is waiting at a single line telephone: A burst of 440 Hz (100 ms).

The centralized attendant at the main location has access, through RLTs, to all outgoing trunk facilities at the branches in a CAS network. To extend an incoming LDN call to an outgoing trunk at a branch, an attendant can dial the access code, and then allow the caller to dial the rest of the number. The attendant can also dial the complete outgoing number.

Calls that are extended to busy single-line telephones at the branch wait automatically. If a call is in queue, the user hears a busy signal. When Station Hunting and Send All Calls is administered, the system routes the call along the administered path. If any extended call is waiting, and is unanswered within an administered interval, the branch system returns the call to the attendant. Call Waiting does not apply to multiappearance telephones. If no appearances are available, busy tone is sent to the attendant, who tells the caller that the line is busy.

The system also routes calls from telephones at the branch to an attendant over RLTs that are seized by the branch system. To reach the attendant, a branch caller dials the attendant-group access code. This access code is administrable. The default is 0. The conversation between the branch caller and the attendant ties up the seized RLT, but calls of this type are usually short.

Administering Centralized Attendant Service

This section contains prerequisites and the screens for administering the Centralized Attendant Service (CAS) feature.

Prerequisites for administering Centralized Attendant Service

You must complete the following actions before you can administer the Centralized Attendant Service (CAS) feature:

- Set up the attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.
- On the **Optional Features** screen, ensure that the **Async. Transfer Mode (ATM) PNC** field is set to **y**. If this field is set to **n**, contact your Avaya representative before you continue with these procedures.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Screens for administering Centralized Attendant Service

Screen name	Purpose	Fields
Optional Features	Enable port network connectivity (PNC).	Async. Transfer Mode (ATM) PNC
Attendant Console	Assign feature buttons.	Any available button field in the Feature Button Assignments area.
Console-Parameters	Set up parameters for CAS.	● CAS ● RLT Trunk Group Number ● Timed Reminder on Hold ● Return Call Timeout (sec)
Station	On a multiappearance telephone, assign feature buttons.	Any available button field in the Feature Button Assignments area.
Trunk Group	Set up a release link trunk (RLT) group.	All
Feature Access Code (FAC)	Set up a feature access code (FAC) for CAS Remote Hold.	CAS Remote Hold/Answer Hold-Unhold Access Code

Reports for Centralized Attendant Service

The following reports provide information about the Centralized Attendant Service (CAS) feature:

- None

Considerations for Centralized Attendant Service

This section provides information about how the Centralized Attendant Service (CAS) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Centralized Attendant Service (CAS) under all conditions. The following considerations apply to Centralized Attendant Service (CAS):

- In a CAS network, systems can function either as branches or as the main location. A branch can connect to only one main location.
- CAS reduces the number of attendants that are required at a branch. For example, a chain of department stores can have a centralized attendant at the main store to handle calls for all of the branch stores.

- A branch can have an attendant. Access to the branch attendant must be by way of an individual attendant extension. Incoming trunk calls in a CAS network can bypass branch attendants. The centralized attendant can route these incoming trunk calls back to the branch attendant.
- Branch calls terminate on the CAS main system based day-destination or night-service destination of the incoming RLT trunk group. An attendant console might not always answer or extend incoming CAS calls.

If someone other than an attendant answers a CAS call, that person can either press the Flash button on a multiappearance telephone, or flash the switch hook on a single-line telephone, to extend the call back to the branch. The branch reaction to flash signals and the branch application of tones is the same whether an attendant, or someone other than an attendant, answers or extends the call.

- If an extended call returns unanswered to the main attendant, the called party at the branch does not drop. The called party at the branch continues to be alerted until the caller releases. This process allows the attendant to talk to the caller, and then extend the call again, if the caller wants, without redialing the number.
- If an extended CAS call recall times out and goes to coverage, but is unanswered, the branch leaves the extended-to party ringing. The system drops coverage.
- When an analog telephone call goes to coverage, the telephone drops from the call. This process is the exception to the branch leaving the extended-to party ringing. If the main attendant extends a call to an analog telephone, and that call goes to coverage and later returns to the main attendant, the call is treated as an incoming LDN call. If the user requests, the attendant must reextend the call.
- On an incoming CAS call to the main attendant, the system displays the **Name** field from the **Trunk Group** screen for that RLT to the attendant. Therefore, you must administer the **Name** field on the **Trunk Group** screen to provide meaningful branch identification information.
- The Music-on-Hold feature at a branch applies to two stages of LDN calls: during call extension, and when the call is on Remote Hold.

Interactions for Centralized Attendant Service

This section provides information about how the Centralized Attendant Service (CAS) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Centralized Attendant Service (CAS) in any feature configuration.

- Abbreviated Dialing

The main attendant can use an Abbreviated Dialing button to extend CAS calls after the attendant obtains branch dial tone.

Centralized Attendant Service

- Attendant Auto-Manual Splitting

The Split lamp and button do not function on CAS calls to the main location that are extended through RLTs. Attendant conference does not function on CAS calls.

- Attendant Control of Trunk Group Access

If a branch attendant has control of an outgoing RLT trunk group, the system routes new attendant-seeking calls to the branch attendant.

- Attendant Override of Diversion

Use Attendant Override of Diversion with CAS.

- Attendant Serial Calling

Attendant Serial Calling does not work for CAS calls.

- Automatic Alternate Routing (AAR) and Automatic Route Selection (ARS)

You can use AAR and ARS to route CAS calls.

- Automatic Circuit Assurance (ACA)

When CAS is activated, the **ACA Referral Calls** field on the **Feature-Related System Parameters** screen must be set to **local**. The system interprets a referral destination of 0 as the local attendant, if a local attendant exists. The CAS attendant cannot activate or deactivate ACA referral calls at a branch location.

- Busy-Indicator Buttons

Busy indicators can identify incoming calls over an RLT. You can also use Busy indicators to dial after the attendant starts to extend a call.

- Call Coverage

Use Call Coverage to redirect calls to a centralized attendant. Do not redirect calls to a CAS backup extension for backup service through Send All Calls to the coverage path of the backup extension.

- Call Detail Recording (CDR)

If the CAS main RLT has the CDR option selected, the system generates CDR records for incoming CAS calls.

- Call Forwarding

Do not forward calls to a CAS extension.

- Call Park

If a CAS attendant parks a call and the call returns to the attendant after the Call Park expiration interval, the attendant hears incoming trunk-call notification.

- Class of Restriction (COR)

Since COR information is not passed over RLTs, fully restricted service allows all CAS calls. Therefore, CAS allows the system to complete a public network call to a fully restricted telephone.

- Distributed Communications System (DCS) operation

If an RLT trunk group is administered as a DCS trunk, the DCS message displays instead of the name of the incoming RLT trunk group on an incoming CAS call to the attendant. When the attendant answers the call, the attendant hears call identification tones. These tones indicate that the call is a CAS call. The attendant must use a Trunk-Name button to obtain the name of the RLT trunk group.

- DXS and DTGS Buttons

DXS and DTGS buttons at the main attendant console can be used with CAS. With the DXS button, the attendant hears ringback tone after a delay of a few seconds.

- Emergency Access to the Attendant

For CAS Branch Emergency Access calls that generate by a feature access code, the system routes Off-Hook Alert to the branch attendant group. If there is no attendant in the branch, the system routes the call to the administered Emergency Access Redirection Extension of the branch. When the branch system is in CAS Backup Service, the system routes the calls to the backup telephone. The call is treated as a normal call.

- Hunt Groups

If the system directs an incoming CAS call to a hunt group, the system does not redirect the call to the coverage path of the hunt group. Depending on the circumstances, the attendant can get a busy tone or ringing.

- Last Number Dialed (LND)

An attendant cannot extend calls with the LND feature.

- Leave Word Calling (LWC)

If a message is left for a branch user, and the attendant at the CAS system tries to retrieve the message, permission is denied.

- Night Service, Night Console Service

When the attendant places the CAS main location in Night Service, CAS calls terminate at the CAS main night-service destination. When an attendant places a branch location in Night Service, the system routes the CAS calls to the branch night console, to the LDN night telephone, or to the TAAS telephone.

- Night Service, Trunk Answer from Any Station (TAAS)

In a multisystem DCS environment with CAS, transferring incoming trunk calls through Night Service Extension or TAAS varies. Such a transfer depends on the:

- Home system of the transferred-to telephone
- Home system of the connected trunk
- Type of night-service function that is chosen. The type of night-service function can be Night Service Extension, TAAS, or both Night Service Extension and TAAS.

- Extending a CAS call by a nonattendant

CAS branch calls terminate at the CAS main location, based on the day-destination or the night-service destination of the incoming RLT trunk group. You can also answer a CAS call with the TAAS feature.

Usually, a nonattendant presses the Flash button to extend a CAS call. However, if the nonattendant does not have a Flash button, a nonattendant can extend the call in one of the following ways:

- Multiappearance telephone users can press the Conference or Transfer button, and then dial the extension. To complete the call, the user drops the call. To drop the extended-to party, the user presses the Conference or Transfer button again.
- Single line telephone users can flash the switch hook, and then dial the extension. To complete the call, the user drops the call. To drop the extended-to party, the user flashes the switch hook again.

- Holding a CAS call by a nonattendant

A nonattendant with a multiappearance telephone can press the Hold button to hold a CAS call.

- Releasing a CAS call by a nonattendant

A nonattendant can drop the RLT by going on-hook, and then use the Disconnect or Drop button. A nonattendant can also drop the RLT by selecting another call appearance.

- Nonattendant. Display Trunk Name

If a nonattendant with a display telephone presses the Trunk Name button while the nonattendant is active on a trunk call, the system displays the value in the **Name** field from the **Trunk Group** screen.

- Security Violation Notification (SVN)

CAS attendants cannot receive referral calls from branch locations.

- Timed Reminder

You can set the timer value for recalling held calls at the attendant console on the **Console** screen.

If an attendant at the CAS main location transfers a call from a branch to an extension at the main location, the timed reminder does not apply. The call does not return to the attendant if unanswered. If a branch call is unanswered, the branch timed reminder times out, and the system routes the call to a new RLT trunk, and back to a CAS main attendant.

- Trunk-Name button

Use the Trunk-Name button when you make an outgoing call over a trunk that is administered to have no outgoing display.

Class of Restriction

Use the Class of Restriction (COR) feature to:

- Define different levels of call origination and termination privileges
- Apply administration settings to all objects that share the same COR number
- Identify what CORs can be service observed, and what CORs can be a service observer

Detailed description of Class of Restriction

This section provides a detailed description of the Class of Restriction feature.

You can use CORs to restrict communication between point A and point B. For example, a user tries to establish a communication path between point A and point B. The system checks whether the CORs have permission to communicate with one another. If the CORs have permission, the system completes the call. If the CORs do not have permission, the system does not complete the call. You control the level of restriction that the COR provides.

CORs also have other applications. You can apply administration settings to a COR, and then assign that COR to objects or facilities in the system. This use of CORs makes it easier to administer functions across a wide range of objects. CORs are assigned to a variety of objects, such as:

- Telephones
- Trunks
- Agent login IDs
- Data modules

Finally, you can set up CORs that are service observing and service observed. You can assign a COR to be a service observer. Then you identify what other CORs that the user can observe. You can also set up a COR to be serviced observed.

To set up a COR, you select a COR number, from 0 to 95. You then assign a name for the COR that clearly reflects either the purpose or the members of the COR. You then use the Class of Restriction screens to select what restrictions, if any, apply to the COR. After you set up a COR, you assign the COR number to objects on your system.

Class of Restriction

Many objects can share the same COR number. You must administer a COR for the following objects:

- Agent login IDs
- Access endpoints
- Announcements and audio sources
- Attendant consoles
- Authorization codes
- Console parameters
- Hunt groups
- Loudspeaker paging
- Data modules
- Remote access (each barrier code has a COR)
- Telephones
- Terminating Extension Groups (TEGs)
- Trunk groups
- Vector Directory Numbers (VDNs)

Strategy for assigning CORs

When you administer your system, the best strategy is to assign CORs to similar groups or objects. For example, you might create a unique COR for each type of user or facility, such as:

- Call center agents
- Account executives
- Supervisors
- Administrative assistants
- Paging zones
- Data modules

You might also want to create a unique COR for each type of restriction.

You can assign the same COR to more than one object. Objects with the same COR might be similar objects, such as two telephones, or different objects, such as a telephone and a trunk group.

To enhance your system security, you can:

- Assign a separate COR to incoming trunk groups and outgoing trunk groups, and then restrict calls between the two groups.
- Set appropriate calling party restrictions and Facility Restriction Levels (FRLs) to limit the calling permissions as much as possible.

Types of restrictions

Calling party restrictions

Calling party restrictions define the privileges for telephones that make outbound calls. If you do not need to restrict telephones that make outbound calls, assign a COR with the **Calling Party Restriction** field set to **none**.

You can use calling party restrictions for:

- Unrestricted telephones
- Trunk groups
- Terminating Extension Groups (TEGs)
- Uniform Call Distribution (UCD) groups
- Direct Department Calling (DDC) groups
- Data modules
- Attendant groups
- Individual attendant extensions

All-Toll restrictions and TAC-Toll restrictions

Toll restrictions prevent users from placing public-network calls to certain toll-call numbers. You assign toll restrictions to outgoing trunk groups on the **Trunk Group** screen. You disable Trunk Access Code (TAC)-toll restrictions for specific outgoing trunk groups on the **Trunk Group** screen.

Origination restrictions

You can use origination restrictions to prohibit users from originating calls. These users can still receive calls.

Outward restrictions

You can use outward restrictions to prevent users from placing calls to the public network. These users can still place calls to other telephone users, to the attendant, and over tie trunks. If necessary, an attendant or an unrestricted telephone user can extend a call to an outside number for an outward-restricted telephone user.

Calls that come into a trunk are denied if the:

- **Calling Party Restriction** field on the **Class of Restriction** screen is set to **outward**
- Calls use the Automatic Alternate Routing (AAR) or the Automatic Route Selection (ARS) feature

Called party restrictions

Called party restrictions define the privileges for telephones that receive inbound calls. If you do not need to restrict telephones that receive inbound calls, assign a COR with the **Called Party Restriction** field set to **none**.

You can use called party restrictions for:

- Unrestricted telephones
- Trunk groups
- Terminating Extension Groups (TEGs)
- Uniform Call Distribution (UCD) groups
- Direct Department Calling (DDC) groups
- Data modules
- Attendant groups
- Individual attendant extensions

Even if the system redirects a call from one telephone to another, the system checks for called party restrictions only at the called telephone. For example, if a called telephone with no restrictions activates the Call Forwarding feature to a restricted telephone, the system still completes the call.

Inward restrictions

You can use inward restrictions to allow users to receive only internal calls. With inward restrictions, users at assigned telephones cannot receive:

- Public network calls
- Attendant originated calls
- Attendant extended calls

The system checks only the COR of the originally called telephone, unless you administer a three-way COR on conference calls and transfer calls. The system routes denied calls to:

- Intercept tone
- A recorded announcement
- The attendant, for Direct Inward Dialing (DID) calls

Manual terminating line restrictions

You can use manual terminating line restrictions to allow users to receive calls only from an attendant, or calls that an attendant extends. The system can redirect calls to a telephone with manual terminating line restrictions. The system checks only the COR of the originally called telephone.

The system routes the following calls to the attendant:

- Local central office (CO) calls
- Foreign exchange (FX) calls

The system redirects Direct Inward Dialing (DID) calls to:

- Intercept tone
- A recorded announcement
- The attendant

Public restrictions

Public restrictions prohibit users from receiving public network calls. The system routes denied calls to:

- Intercept tone
- A recorded announcement
- The attendant

Public restrictions still allow users to receive internal calls from other telephones, or calls that are extended from the attendant.

Termination restrictions

You can use termination restrictions to prohibit users from receiving any calls. These users can still originate calls. The system routes DID or Advanced Private-Line Termination calls to a recorded announcement or to the attendant.

Fully restricted service

With fully restricted service, users cannot make or receive public network calls. Users who have fully restricted service cannot use authorization codes to deactivate this feature.

COR-to-COR restrictions

You can restrict calls from one COR to another COR. You can use COR-to-COR calling restrictions to prohibit user access to specific telephones or specific trunk groups, such as CO trunk groups. Any or all trunk groups can be in a trunk-restriction COR. The system routes restricted calls to intercept tone.

Administering Class of Restriction

The following steps are part of the administration process for the Class of Restriction (COR) feature:

- [Displaying administered CORs](#)
- [Setting up a COR](#)
- [Allowing users to change their own COR](#)

This section describes:

- Any prerequisites for administering the Class of Restriction feature
- The screens that you use to administer the Class of Restriction feature
- Complete administration procedures for the Class of Restriction feature

Prerequisites for administering Class of Restriction

You must complete the following actions before you can administer the Class of Restriction feature:

- None

Screens for administering Class of Restriction

Screen name	Purpose	Fields
Class of Restriction Information	List what CORs are administered on your system.	All
Class of Restriction	• Apply administration settings to all objects that share the same COR number. • Restrict the types of calls that a user can make and receive. • Identify what CORs can be service observed, or be a service observer.	All

Screen name	Purpose	Fields
Optional Features	Ensure that users can change their own COR without assistance from an administrator.	Change COR by FAC
Feature Access Code (FAC)	Assign a feature access code (FAC) so that the user can change their own COR without assistance from an administrator.	Change COR Access Code
Feature-Related System Parameters	Assign a password that is required before a user can change their own COR.	Password to Change COR by FAC

Displaying administered CORs

To list what CORs are administered on your system:

1. Type **list cor**. Press **Enter**.

The system displays the **Class of Restriction Information** screen ([Figure 141: Class of Restriction Information screen](#) on page 615).

Figure 141: Class of Restriction Information screen

list cor	CLASS OF RESTRICTION INFORMATION	Page 1 of 7
	COR	COR Description
	0	
	1	
	2	
	3	
	4	
	5	
	6	
	7	
	8	
	9	
	10	Supervisor observer
	11	
	12	
	13	
	14	

Class of Restriction

- 2. Click **Next** continually to see all the CORs.
- 3. After you review this information, press **Cancel**.

Setting up a COR

To set up a COR:

- 1. Type **change cor *n***, where *n* is the number of a specific COR. Press **Enter**.

The system displays the **Class of Restriction** screen ([Figure 142: Class of Restriction screen, page 1](#) on page 616).

Figure 142: Class of Restriction screen, page 1

change cor 10

Page 1 of 4

CLASS OF RESTRICTION

COR Number: 10

COR Description: Supervisor observer

FRL: 0

Can Be Service Observed? n

Can Be A Service Observer? y

Time of Day Chart: 1

Priority Queuing? n

Restriction Override: none

Restricted Call List? n

APLT? y

Calling Party Restriction: none

Called Party Restriction: none

Forced Entry of Account Codes? n

Direct Agent Calling? y

Facility Access Trunk Test? n

Can Change Coverage? n

Access to MCT? y

Group II Category For MFC: 7

Send ANI for MFE? n

MF ANI Prefix: _____

Hear System Music on Hold? y

Fully Restricted Service? n

Hear VDN of Origin Annc.? n

Add/Remove Agent Skills? y

Automatic Charge Display? n

PASTE (Display PBX Data on telephone)? n

Can Be Picked Up By Directed Call Pickup? n

Can Use Directed Call Pickup? n

Group Controlled Restriction: inactive

- 2. In the **COR Description** field, type a name for this COR. Assign a name for the COR that clearly reflects either the purpose or the members of the COR.
- 3. Complete all the applicable fields on page 1 of this screen. Specifically, you must:
 - Right-click the **Calling Party Restriction** field to see a list of options. Select an appropriate item from the list.
 - Right-click the **Called Party Restriction** field to see a list of options. Select an appropriate item from the list.
- 4. Press **Enter** to save your changes.

5. Click **Next** to see the next screen ([Figure 143: Class of Restriction screen, page 2](#) on page 617).

Figure 143: Class of Restriction screen, page 2

change cor 10	Page 2 of 4
CLASS OF RESTRICTION	
MF Incoming Call Trace: n	
Brazil Collect Call Blocking? n	
Block Transfer Display? n	
Block Exchanged Conference/Transfer Display? n	
Remote Logout of Agent? n	
Station Lock COR: 9	
Outgoing Trunk Disconnect Timer (minutes):	

6. Complete all the applicable fields on page 2 of this screen.
7. Press **Enter** to save your changes.
8. Click **Next** to see the next screen ([Figure 144: Class of Restriction screen, page 3](#) on page 617).

The numbers represent the 96 available CORs, from 0 to 95. All fields default to **y**.

Figure 144: Class of Restriction screen, page 3

change cor 10	Page 3 of 4						
CLASS OF RESTRICTION							
CALLING PERMISSION (Enter "y" to grant permission to call specified COR)							
0? y	12? y	24? y	36? y	48? y	60? y	72? y	84? y
1? y	13? y	25? y	37? y	49? y	61? y	73? y	85? y
2? y	14? y	26? y	38? y	50? y	62? y	74? y	86? y
3? y	15? y	27? y	39? y	51? y	63? y	75? y	87? y
4? y	16? y	28? y	40? y	52? y	64? y	76? y	88? y
5? y	17? y	29? y	41? y	53? y	65? y	77? y	89? y
6? y	18? y	30? y	42? y	54? y	66? y	78? y	90? y
7? y	19? y	31? y	43? n	55? y	67? y	79? y	91? y
8? y	20? y	32? y	44? y	56? y	68? y	80? y	92? y
9? y	21? y	33? y	45? y	57? y	69? y	81? y	93? y
10? y	22? y	34? y	46? y	58? y	70? y	82? y	94? y
11? y	23? y	35? y	47? y	59? y	71? y	83? y	95? y

Class of Restriction

9. To restrict a user who is assigned this COR from calling someone in another COR, change the Calling Permission of the COR number to **n**.

In this example, a user who is assigned COR 10 cannot call a user who is assigned COR 43.

10. Press **Enter** to save your changes.

11. Click **Next** to see the last screen ([Figure 145: Class of Restriction screen, page 4](#) on page 618).

The numbers represent the 96 available CORs, from 0 to 95. All fields default to **y**. Complete this screen only if you set the **Can Be A Service Observer** field on page 1 to **y**. If the **Can Be A Service Observer** field is set to **n**, you can skip this screen.

If a specified COR is set to **y**, but the **Can Be Service Observed** field on page 1 of that COR is set to **n**, that COR cannot be service observed.

Figure 145: Class of Restriction screen, page 4

change cor 10 Page 4 of 4

CLASS OF RESTRICTION

SERVICE OBSERVING PERMISSIONS
(Enter "y" to grant permission to service observe the specified COR)

0? y	12? y	24? y	36? y	48? y	60? y	72? y	84? y
1? y	13? y	25? y	37? y	49? y	61? y	73? y	85? y
2? y	14? y	26? y	38? y	50? y	62? y	74? y	86? y
3? y	15? y	27? y	39? y	51? y	63? y	75? y	87? y
4? y	16? y	28? y	40? y	52? y	64? y	76? y	88? y
5? y	17? y	29? y	41? y	53? y	65? y	77? y	89? y
6? y	18? y	30? y	42? y	54? y	66? y	78? y	90? y
7? y	19? n	31? y	43? y	55? y	67? y	79? y	91? y
8? y	20? y	32? y	44? y	56? y	68? y	80? y	92? y
9? y	21? y	33? y	45? y	57? y	69? y	81? y	93? y
10? y	22? y	34? y	46? y	58? y	70? y	82? y	94? y
11? y	23? y	35? y	47? y	59? y	71? y	83? y	95? y

12. To indicate what COR cannot be service observed, change the value of the COR number to **n**.

In this example, a user who is assigned COR 10 cannot service observe a user who is assigned COR 19.

13. Press **Enter** to save your changes.

Allowing users to change their own COR

You can allow users to change their own COR from the telephone through a feature access code (FAC). Users can change from the existing COR to any other COR. To restrict this feature, you can also require that users enter a password before the users can change their own COR.

Note:

Administrators can also allow users to change only between two predetermined CORs. For more information, see the "Station Lock" feature.

To allow users to change their own COR to any other COR, you must complete the following procedures:

- [Assigning a FAC](#)
- [Assigning a password](#)

Prerequisites

You must complete the following actions before you can allow users to change their own COR:

- On the **Optional Features** screen, ensure that the **Change COR by FAC** field is set to **y**. If this field is not set to **y**, users cannot change their own COR. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Assigning a FAC

To assign a Feature Access Code (FAC):

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen ([Figure 146: Feature Access Code \(FAC\) screen](#) on page 620).

Figure 146: Feature Access Code (FAC) screen

change feature-access-codes
Page 1 of 8

FEATURE ACCESS CODE (FAC)

Abbreviated Dialing List1 Access Code: _____	
Abbreviated Dialing List2 Access Code: _____	
Abbreviated Dialing List3 Access Code: _____	
Abbreviated Dial - Prgm Group List Access Code: _____	
Announcement Access Code: _____	
Answer Back Access Code: _____	
Attendant Access Code: _____	
Auto Alternate Routing (AAR) Access Code: _____	
Auto Route Selection (ARS) - Access Code 1: _____	Access Code 2: _____
Automatic Callback Activation: _____	Deactivation: _____
Call Forwarding Activation Busy/DA: _____ All: _____	Deactivation: _____
Call Park Access Code: _____	
Call Pickup Access Code: _____	
CAS Remote Hold/Answer Hold-Unhold Access Code: _____	
CDR Account Code Access Code: _____	
Change COR Access Code: *55	
Change Coverage Access Code: _____	
Contact Closure Open Code: _____	Close Code: _____
Contact Closure Pulse Code: _____	

2. In the **Change COR Access Code** field, type a FAC that conforms to your dial plan.
3. Press **Enter** to save your changes.
4. Ensure that you notify all users of the assigned FAC.

Assigning a password

To assign a password:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen.
2. Click **Next** until you see the **Password to Change COR by FAC** field
([Figure 147: Feature-Related System Parameters screen](#) on page 621).

Figure 147: Feature-Related System Parameters screen

change system-parameters features	Page 10 of 10
FEATURE-RELATED SYSTEM PARAMETERS	
AUTOMATIC EXCLUSION PARAMETERS	
Automatic Exclusion by COS? y	
Automatic Exclusion Coverage/Hold? y	
Automatic Exclusion with Whisper Page? y	
Password to Change COR by FAC: 12344321	

-
3. In the **Password to Change COR by FAC** field, type a password.

This field determines if Communication Manager requires the user to enter a password when the user tries to change the COR, and what that password is.

4. Press **Enter** to save your changes.
5. Ensure that you notify all users of the assigned password.

End-user procedures for Class of Restriction

End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for the Class of Restriction feature:

To temporarily change your COR from your telephone through a feature access code (FAC):

1. Dial the Change COR Access Code FAC.
2. Dial the password to change your COR.
3. Change your COR.

Reports for Class of Restriction

The following reports provide information about the Class of Restriction feature:

- None

Considerations for Class of Restriction

This section provides information about how the Class of Restriction feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Class of Restriction under all conditions.

The following considerations apply to the Class of Restriction feature:

- None

Interactions for Class of Restriction

This section provides information about how the Class of Restriction feature interacts with other features in your system. Use this information to ensure that you receive the maximum benefits of the Class of Restriction in any feature configuration.

- Automatic Alternate Routing (AAR) or Automatic Route Selection (ARS)

Termination and miscellaneous restrictions do not apply to AAR or ARS calls. AAR or ARS access to a trunk group overrides miscellaneous trunk restrictions.

- AAR or ARS Partitioning

Use a COR to assign partition group numbers.

- Abbreviated Dialing

The system does not check direct calls that are made from group lists. These lists are inaccessible to a user whose telephone is fully restricted. However, once a user makes a call from the Abbreviated Dialing group list, the system checks all subsequent transfer and conference attempts.

- Abbreviated Dialing Privileged Group Number List

A telephone user with authorization to access an Abbreviated Dialing Privileged Group Number List can place calls to any number on that list. The system does not check COR assignments.

- Bridged Call Appearance

A COR that is assigned to a telephone also applies to calls that originate from a bridged call appearance of that telephone.

- Call Coverage

Users who are restricted from calls can still receive calls that Call Coverage directs to these users. When a call goes to coverage, the system uses the restrictions of the called party, not of the covering party. When a call is redirected to coverage, the system does not check the COR of the covering party. If the COR of the covering party is fully restricted, the system cannot complete the call.

- Call Forwarding All Calls

If a COR restricts a call between the forwarding extension and the forwarded-to extensions, Call Forwarding is denied. The system always checks when Call Forwarding is activated, but not when the system forwards a call.

- Call Vectoring

When the system directs a call to a vector directory number (VDN), the system compares the COR of the caller and the VDN. This comparison determines if the caller can access the associated call vector.

- Centralized Attendant Service (CAS)

Since COR information is not passed over release link trunks (RLT), fully restricted service allows all CAS calls. Therefore, CAS allows a public network call to be completed to a fully restricted telephone.

- Class of Restriction Display to the Attendant

The attendant can display the COR for each telephone.

- Class of Service (COS)

In some cases, the COS of a user can override a COR. For more information, see the **Trk-to-Trk Restriction Override** field in the "Class of Service" feature description.

- Controlled Restriction

Restrictions that you assign through Controlled Restriction override any COR restrictions.

- Distributed Communications System (DCS)

Fully restricted service allows all DCS calls. DCS can allow a public network call to be completed to a fully restricted telephone.

- Emergency Access to Attendant

A COR does not restrict Emergency Access to Attendant calls.

- Fully Restricted Service

Do not assign fully restricted service to a telephone that has these features or conditions:

- Abbreviated Dialing
- Bridged Call Appearance
- Attendant telephones
- Night Service telephones
- Telephones that are Call Coverage or Send All Calls points
- Telephones that are Call Forward destinations
- Telephones that are Call Pickup points

Class of Restriction

- Hunt Groups

The system checks the COR that is assigned to a hunt group on calls that are redirected by the Direct Department Calling (DDC) or Uniform Call Distribution (UCD) of the hunt group. If the COR of the hunt group does not have fully restricted service, extensions in the hunt group can receive calls from the public network.

- Night Service and Night Station Trunk Answer From Any Station

Both the Night Service feature and the Night Station Trunk Answer From Any Station feature override:

- Inward restrictions
- Manual terminating line restrictions
- Public restrictions

- Personal Central Office Line (PCOL)

Do not assign fully restricted service to users who have a personal central office line. If you do, you are paying for a CO line that no one can use.

- Power Failure Transfer

All authorization features are bypassed when the system is in emergency transfer mode.

- Privileged System Number List

A telephone user with authorization to access a Privileged System Number List can place calls to any number on that list. The system does not check COR assignments.

- Remote Access

If the user enters a barrier code during connection to remote access, the system uses the COR that is associated with that code for authorization checks. If remote access does not require a barrier code, the system uses the COR of the default barrier code. Remote access can require an authorization code instead of, or in addition to, the barrier code. If the system requires an authorization code, the COR of the authorization code overrides the COR of the barrier code.

- Tie trunk access

The system can complete incoming dial-repeating tie trunk calls directly to an inward-restricted telephone or a public-restricted telephone. An attendant cannot extend incoming dial-repeating tie trunk calls to an inward-restricted telephone.

- Transfer

When you administer a three-way conference, a user cannot transfer incoming trunk calls to an inward-restricted telephone. Transferred calls are subject to three-way COR Checking restrictions.

A user can transfer incoming trunk calls from an unrestricted telephone to an inward-restricted telephone or a public-restricted telephone. However, you must override the three-way conference COR.

Class of Service

Use the Class of Service (COS) feature to allow or deny user access to some system features.

Detailed description of Class of Service

This section provides a detailed description of the Class of Service (COS) feature.

Use the COS feature to allow or deny user access to some system features, such as:

- Automatic Callback
- Call Forwarding
- Data Privacy
- Trunk-to-Trunk Transfer Override
- QSIG Call Offer Originations
- Contact Closure Activation
- Console Permission

Use the Class of Restriction (COR) feature, instead of COS, to define the restrictions that apply when a user places or receives a call. For more information, see the "Class of Restriction" feature.

COS does not apply to trunk groups, except for the Remote Access feature. For more information, see the "Remote Access" feature.

Administering Class of Service

The following steps are part of the administration process for the Class of Service feature (COS):

- [Defining COS for your system](#)
- [Assigning a COS](#)

This section describes:

- Any prerequisites for administering the Class of Service feature
- The screens that you use to administer the Class of Service feature
- Complete administration procedures for the Class of Service feature

Prerequisites for administering Class of Service

You must complete the following actions before you can administer the Class of Service feature:

- None

Screens for administering Class of Service

Screen name	Purpose	Fields
Attendant Console	Assign Class of Service (COS) for the attendant.	COS
Class of Service	Define COS for your system.	All
Console-Parameters	Assign COS for all the attendant consoles.	COS
Data Modules	Assign COS for a data module.	COS
Remote Access	Assign the COS associated with the barrier code of the Remote Access extension.	COS
Station	Assign COS for a user.	COS

Defining COS for your system

To define COS for your system:

1. Type **change cos**. Press **Enter**.

The system displays the **Class of Service** screen ([Figure 148: Class of Service screen](#) on page 627).

Figure 148: Class of Service screen

change cos	CLASS OF SERVICE															Page 1 of 1	
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
Auto Callback	n	y	y	n	y	n	y	n	y	n	y	n	y	n	y	n	
Call Fwd-All Calls	n	y	n	y	y	n	n	y	y	n	n	y	y	n	n	y	
Data Privacy	n	y	n	n	n	y	y	y	y	n	n	n	n	y	y	y	
Priority Calling	n	y	n	n	n	n	n	n	n	y	y	y	y	y	y	y	
Console Permissions	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Off-hook Alert	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Client Room	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Restrict Call Fwd-Off Net	n	y	y	y	y	y	y	y	y	y	y	y	y	y	y	y	
Call Forward Busy/DA	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Personal Station Access (PSA)	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Extended Forwarding All	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Extended Forwarding B/DA	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Trk-to-Trk Restriction Override	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
QSIG Call Offer Originations	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Automatic Exclusion	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	

2. Perform one of the following actions for any, or all, of the COSs, which are numbered zero through 15:
 - If you want to activate the feature for the COS, type **y**.
 - If you do not want to activate the feature for the COS, type **n**.
3. Press **Enter** to save your changes.

Descriptions of the COS features

The system displays some features only if the associated feature is set to **y** on the **Feature-Related System Parameters** screen. The information on the **Class of Service** screen that you display can differ from the information shown in the [Figure 148: Class of Service screen](#).

- **Automatic Callback**

Allows a user to request Automatic Callback. For more information, see the "Automatic Callback" feature.

- **Automatic Exclusion**

Allows a user to automatically activate Privacy Exclusion when the user goes off hook at a telephone that has an assigned Exclusion button.

If you set this field to **n**, the user can use manual exclusion when the user presses the Exclusion button, either before the user dials a call or during a call.

The system displays this field when the **Automatic Exclusion by COS** field on the **Feature-Related System Parameters** screen is set to **y**.

- **Call Forwarding All Calls**

Allows a user to forward all calls to any extension. For more information, see the "Call Forwarding" feature.

- **Call Forwarding Busy/DA**

Allows the system to forward calls when the user is active on a call, or does not answer a call. For more information, see the "Call Forwarding" feature.

- **Client Room**

Allows users to access the Check-In, Check-Out, Room Change/Swap, and Maid status functions. In addition, Client Room is required at consoles or telephones that are to receive message-waiting notification.

You can administer a COS for Client Room only when you have Hospitality Services and a Property Management System (PMS) interface. See the *GuestWorks® and DEFINITY® Systems Technician Handbook for Hospitality Installations* for more information.

- **Console Permissions**

Console Permissions allows a user who has a multiappearance telephone, to control the same features that the attendant controls. You might assign this permission to front-desk personnel in a hotel or a motel, or to a call center supervisor. With console permission, a user can:

- Activate Automatic Wakeup for another extension
- Activate and deactivate controlled restrictions for another extension, or group of extensions
- Activate and deactivate Do Not Disturb for another extension, or group of extensions
- Activate Call Forwarding for another extension
- Add and remove agent skills
- Record integrated announcements

- **Data Privacy**

Allows a user to enter a feature access code (FAC) to protect a data call from interruption by any of the system override or ringing features. For more information, see the "Privacy" feature.

- **Extended Forwarding All**

Allows a user to use Call Forwarding All Calls from an off-site telephone.

You can change a COS to **y**, only if the **Extended Cvg/Fwd Admin** field on the **System Parameters Customer-Options** screen is set to **y**. For more information, see the "Extended User Administration of Redirected Calls" feature.

- **Extended Forwarding B/DA**

Allows a user to activate Call Forwarding from an off-site telephone.

You can change a COS to **y** only if the **Extended Cvg/Fwd Admin** field on the **System Parameters Customer-Options** screen is set to **y**. For more information, see the "Extended User Administration of Redirected Calls" feature.

- **Off-Hook Alert**

You can change a COS to **y**, only if either the **Hospitality (Basic)** field or the **Emergency Access to Attendant** field on the **System-Parameters Customer-Options** screen is set to **y**. For more information, see the "Emergency Access to Attendant" feature.

- **Personal Station Access (PSA)**

Allows a user to use a FAC to associate a telephone to the extension that is assigned to the user.

You must set this field to **n** for virtual telephones.

You can change this field to **y**, only if the **Personal Station Access (PSA)** field on the **Optional Features** screen is set to **y**. For more information, see the "Personal Station Access" feature.

- **Priority Calling**

Allows a user to dial a FAC to originate a priority call. For more information, see the "Priority Calling" feature.

- **QSIG Call Offer Originations**

Allows a user to invoke QSIG Call Offer services. For more information, see *Administration for Network Connectivity for Avaya Communication Manager*.

- **Restrict Call Fwd-Off Net**

If you set this field to **y**, a user cannot forward calls to the public network.

For security reasons, type **y** in the **Restrict Call Fwd-Off Net** field for all COS, except those that you use for special circumstances. For more information, see the "Call Forwarding" feature.

- **Trk-to-Trk Restriction Override**



SECURITY ALERT:

You increase the risk of toll fraud if you allow users to perform trunk-to-trunk transfers.

Allows a user to override any system COR-to-COR calling party restrictions that would otherwise prohibit the trunk-to-trunk transfer operation for a user with this COS. For more information, see the "Transfer" feature.

Assigning a COS

To assign a COS:

1. Change the **COS** field on any of the following screens:
 - **Attendant Console**
 - **Console-Parameters**
 - **Data Modules**
 - **Remote Access**
 - **Station**
2. Press **Enter** to save your changes.

Reports for Class of Service

The following reports provide information about the Class of Service feature:

- None

Considerations for Class of Service

This section provides information about how the Class of Service feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Class of Service under all conditions. The following considerations apply to Class of Service:

- **Hunt Groups**

Many Hunt Groups have a COS of 1. Ensure that you do not cause unintended restrictions for Hunt Groups when you administer COS 1.

Interactions for Class of Service

This section provides information about how the Class of Service feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Class of Service in any feature configuration.

- Class of Service (COS) controls use of the following features and capabilities:
 - Automatic Callback
 - Automatic Exclusion
 - Call Forwarding
 - Call Forward Busy/Don't Answer
 - Client room
 - Console permission
 - Data Privacy
 - Extended Forwarding All
 - Extended Forwarding Busy/Don't Answer
 - Off-hook alert
 - Personal Station Access
 - Priority Calling
 - QSIG Call Offer Originations
 - Restrict Call Forwarding Off-Net
 - Trunk-to-Trunk Transfer Restriction Override

Conference

Use the Conference feature, with the associated Conf button, to create a conference without the assistance of an attendant.

Detailed description of Conference

This section provides a detailed description of the Conference feature.

Use the Conference feature, with the associated **conf** button, to create a conference without the assistance of an attendant.

A user with a multiple appearance telephone with a **conf** button can create a conference with as many as six participants.

A user with a single-line telephone can create a conference with as many as three participants. Each of these three participants can then add another participant. Thus, a user who has a single-line telephone can create a conference call with as many as six participants.

Conference and DCP, hybrid, IP, wireless, and ISDN-BRI telephones

A user with a Digital Communications Protocol (DCP), hybrid, IP, wireless, or ISDN-BRI telephones can use the Conference feature for a call on hold when:

- Only one call is on hold
- No call appearances are active
- An available call appearance exists for the conference call

If more than one call is on hold, the user must make a call active to start a conference. If the user presses the **conf** button when two or more calls are on hold, the system ignores the conference request from the user.

If the user has an active call, and also has calls on hold, the system includes the active call in the conference when the user presses the **conf** button.

Meet-me Conference

The Meet-me Conference feature allows users to set up a dial-in conference of up to six parties. The Meet-me Conference feature uses Call Vectoring to process the setup of the conference call. For more information, see the "Meet Me Conference" feature.

The Conference feature supports the following capabilities:

- [Conference/Transfer Toggle/Swap](#)
- [No Dial Tone Conferencing](#)
- [No Hold Conference](#)
- [Select Line Appearance Conferencing](#)
- [Selective Conference Party Display, Drop, and Mute](#)

Conference/Transfer Toggle/Swap

A user who sets up a conference call can use the Conference/Transfer Toggle/Swap capability to talk back and forth between two users before the user connects all the participants to the conference call. The display also toggles between the two parties. The Conference/Transfer Toggle/Swap capability is unavailable on attendant consoles.

The user uses an administered feature button, **toggle-swap**, for the Conference/Transfer Toggle/Swap capability

No Dial Tone Conferencing

This capability eliminates the dial tone that the user usually hears while the user adds the participants to the conference call. A user uses the No Dial Tone Conferencing capability to add existing calls to a conference call. The user does not need to select a line appearance if there is someone on hold, or if the system is alerting a line appearance.

For example, a user places a call on hold, and talks to another party. When the user presses the **conf** button and then presses the button of the call on hold, the party on hold joins the conference without hearing a dial tone.

No Hold Conference

When a user who is active on a call creates a conference call, the user can use the No Hold Conference capability to add another participant to a conference call, while the user continues a conversation with the participant on the call that is currently active. When the user calls the new participant, the new participant automatically joins the conference when the new participant answers the call.

For example, a user presses the administered **no-hold-conf** feature button and then dials an extension. The party that answers the call automatically joins the conference.

If the called user does not answer the call within the time that you specify in the **No Hold Conference Timeout** field on the **Feature-Related System Parameters** screen, the system deactivates the No Hold Conference capability for the call.

Users with multiline digital telephones can use the No Hold Conference capability.

Select Line Appearance Conferencing

If a user is at a call on line B, and another line is on hold or an incoming call alerts at line A, the user can press the **conf** button to bridge the calls together. If the user uses the select line appearance capability, the user can press a line appearance button to complete a conference instead of pressing the **conf** button a second time.

Selective Conference Party Display, Drop, and Mute

A user who has a digital telephone with a display, or an attendant with an attendant console, can use the Selective Conference Party Display, Drop, and Mute capability to identify the participants on a call.

The conference prompts that the system displays are based on the user Class of Restriction (COR). The display prompts are based on the user COR, independent of the select line appearance conferencing and the No Dial Tone Conferencing capability. The display messages vary depending on the activation of the various Conference capabilities. The user COR controls the display of any additional information.

A user presses the administered **conf-dsp** feature button to scroll through the telephone numbers and names of the participants on the call. The telephone numbers of the participants are always available, although the names of the participants are sometimes unavailable. When the system displays the telephone number of a participant, the user can either press the administered **fe-mute** feature button to place the participant on mute, or the user can press the **drop** button to drop the participant from the call.

The ability to place a call participant on mute is useful when that participant has a noisy trunk line because of a cell phone, music-on-hold, or background noise. The Selective Conference Party Mute capability applies only to trunk lines, and a user can mute only one trunk line on a conference call.

Administering Conference

The following steps are part of the administration process for the Conference feature:

- [Assigning the toggle-mute feature button](#)
- [Assigning feature buttons](#)

This section describes:

- Any prerequisites for administering the Conference feature
- The screens that you use to administer the Conference feature
- Complete administration procedures for the Conference feature

Prerequisites for administering the Conference feature

You must complete the following actions before you can administer the Conference feature:

Administer the **Feature-Related System Parameters** screen to support the Conference feature on your system.

To administer the **Feature-Related System Parameters** screen:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen
2. Click **Next** until you see the **Public Network Trunks on Conference Call** field ([Figure 149: Feature-Related System Parameters screen](#) on page 637).

Figure 149: Feature-Related System Parameters screen

change system-parameters features		Page 5 of 13
FEATURE-RELATED SYSTEM PARAMETERS		
Public Network Trunks on Conference Call: 5	Auto Start? n	
Conference Parties with Public Network Trunks: 6	Auto Hold? y	
Conference Parties without Public Network Trunks: 6	Attendant Tone? y	
Night Service Disconnect Timer (seconds): 180	Bridging Tone? n	
Short Interdigit Timer (seconds): 3	Conference Tone? y	
Unanswered DID Call Timer (seconds):	Intrusion Tone? n	
Line Intercept Tone Timer (seconds): 30	Special Dial Tone? n	
Long Hold Recall Timer (seconds): 0	Mode Code Interface? n	
Reset Shift Timer (seconds): 0		
Station Call Transfer Recall Timer (seconds): 0		
DID Busy Treatment: tone		
Invalid Number Dialed Intercept Treatment: tone		
Allow AAR/ARS Access from DID/DIOD? n		
Allow ANI Restriction on AAR/ARS? n		
Use Trunk COR for Outgoing Trunk Disconnect? n		
7405ND Numeric Terminal Display? y	7434ND? n	
DISTINCTIVE AUDIBLE ALERTING		
Internal: 1	External: 2	Priority: 3
Attendant Originated Calls: external		

3. In the **Public Network Trunks on Conference Call** field, type the maximum number of participants with public network trunks that you want to participate in a conference call. The valid entries for this field are **0** through **5**.

Type **0** if you do not want any public network trunks to participant in a conference call. If you type **0** in this field, the **Conference Parties with Public Network Trunks** field does not appear on the **Feature-Related System Parameters** screen.

4. In the **Conference Parties without Public Network Trunks** field, type the maximum number of participants without public network trunks that you want to participate in a conference call. The valid entries for this field are **3** through **5**.
5. In the **Conference Tone** field, perform one of the following actions:
 - If you want the participants in a conference call to hear the conference tone if there are three or more participants on a conference call, type **y**.
 - If you do not want conference participants to hear the conference tone if there are three or more participants on a conference call, type **n**.
6. Click **Next** until you see the **No Dial Tone Conferencing** field ([Figure 150: Feature-Related System Parameters screen](#)).

Figure 150: Feature-Related System Parameters screen

change system-parameters features	Page 6 of 13
FEATURE-RELATED SYSTEM PARAMETERS	
CONFERENCE/TRANSFER	
Abort Transfer? n	No Dial Tone Conferencing? n
Transfer Upon Hang-Up? n	Select Line Appearance Conferencing? n
Abort Conference Upon Hang-Up? n	Unhold? n
No Hold Conference Timeout: 60	
ANALOG BUSY AUTO CALLBACK	
Without Flash? n	
AUDIX ONE-STEP RECORDING	
Recording Delay Timer (msec): 500	
Apply Ready Indication Tone To Which Parties In The Call? all	
Interval For Applying Periodic Alerting Tone (seconds): 15	

7. In the **No Dial Tone Conferencing** field, take one of the following actions:
 - If you want a user who is on hold to hear dial tone while the conference owner adds another conference participant, type **n**.
 - If you do not want a user who is on hold to hear dial tone while the conference owner adds another conference participant, type **y**.
8. In the **Select Line Appearance Conferencing** field, take one of the following actions
 - Type **y** to activate select line appearance conferencing.
 - Type **n** to deactivate select line appearance conferencing.
9. In the **Abort Conference on Hang-up** field, perform one of the following actions:
 - If you want the user to stop a conference call if the user hangs up the telephone before the conference call is complete, type **y**.
 - If you do not want the user to stop a conference call when the user hangs up the telephone before the conference call is complete, type **n**.
10. In the **No Hold Conference Timeout** field, type the number of seconds that you want the system to wait while a user uses the No Hold Conference capability to add a participant to a conference call. Note that you must set the **Answer Supervision** field on the **Trunk Group** screen to fewer seconds than the seconds in the **No Hold Conference Timeout** field.
11. Press **Enter** to save your changes.

Screens for administering Conference

Screen name	Purpose	Fields
Attendant Console	Assign conf-dsp , fe-mute , and toggle-swap feature buttons to an attendant console.	Any available button field in the Feature Button Assignments area
Feature-Related System Parameters	Allow users of DCP, hybrid, IP, wireless, or ISDN-BRI telephones to "abort the conference operation when they hang up."	Abort Conference Upon Hang-Up
	Specify that the system generate a conference tone.	Conference Tone
	Specify the maximum number of participants in a conference call when any of the participants uses a public network trunk.	Conference Parties With Public Network Trunks
	Specify the maximum number of participants on a conference call when none of the participants uses a public network trunk.	Conference Parties Without Public Network Trunks
	Specify the number of seconds before the system deactivates the No Hold Conference capability for a call.	No Hold Conference Timeout
	Specify that a user who is on hold hears dial tone while the conference owner adds another conference participant.	No Dial Tone Conferencing
	Specify that the user can use the line appearance rather than the Conf button to include a call in a conference.	Select Line Appearance Conferencing
Station	Assign conf-dsp , fe-mute , no-hold-conf , and toggle-swap feature buttons to a user telephone.	Any available button field in the Button Assignments area

Assigning the toggle-mute feature button

To assign the **toggle-mute** feature button to a user telephone:

1. Type **change station *n***, where *n* is the extension to which you want to assign the Conference/Transfer Toggle/Swap capability. Press **Enter**.

The system displays the **Station** screen for the extension that you requested.

2. Click **Next** until you see the **Button Assignments** area ([Figure 151: Station screen](#) on page 640).

Figure 151: Station screen

change station 20001		Page 3 of 4
STATION		
SITE DATA		
Room:		Headset? n
Jack:		Speaker? n
Cable:		Mounting: d
Floor:		Cord Length: 0
Building:		Set Color:
ABBREVIATED DIALING		
List1:	List2:	List3:
BUTTON ASSIGNMENTS		
1: call-appr	5: toggle-swap	
2: call-appr	6:	
3: call-appr	7:	
4:	8:	

-
3. In the **Button Assignments** area, type **toggle-swap** next to the button that you want the user to use for the Conference/Transfer Toggle/Swap capability.
 4. Press **Enter** to save your changes.

Assigning feature buttons

Prerequisites

You must complete the following actions before you can assign the **conf-dsp**, **fe-mute**, and **no-hold-conf** feature buttons:

- On the **Optional Features** screen, verify that the **Enhanced Conferencing?** field is set to **y**, if you want to use the Selective Conference Party Display, Drop, and Mute capability and the No Hold Conference capability on your system. If the **Enhanced Conferencing?** field is set to **n**, your system is not enabled for the Selective Conference Party Display, Drop, and Mute capability. Contact your Avaya representative for assistance before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

- Assign a COR for the Selective Conference Party Display, Drop, and Mute capability.

To Assign a COR for the Selective Conference Party Display, Drop, and Mute capability:

- Type **change COR n**, where **n** is the number of the COR to which you want to assign the Selective Conference Party Display, Drop, and Mute capability. Press **Enter**.

The system displays the **Class of Restriction** screen.

- Click **Next** until you see the **Block Enhanced Conference/Transfer Displays?** field ([Figure 152: Class of Restriction screen](#) on page 641).

Figure 152: Class of Restriction screen

change cor 10	Page 2 of 4
CLASS OF RESTRICTION	
MF Incoming Call Trace? n	
Brazil Collect Call Blocking? n	
Block Transfer Display? n	
Block Enhanced Conference/Transfer Displays? y	
Remote Logout of Agent? n	
Station Lock COR: 10	
Outgoing Trunk Disconnect Timer (minutes):	

3. In the **Block Enhanced Conference/Transfer Displays?** field, perform one of the following actions:
 - If you want the system to block all the enhanced conference/transfer display messages except "Transfer Completed" for a user or an attendant, type **y**.
 - If you do not want the system to block all the enhanced conference/transfer display messages except "Transfer Completed" for a user or an attendant, type **n**.

To assign the **conf-dsp**, **fe-mute**, and **no-hold-conf** feature buttons, you must complete the following procedures:

- Assign the **conf-dsp**, **fe-mute**, and **no-hold-conf** feature buttons to a user.
- Assign the **conf-dsp** and **fe-mute** feature buttons to an attendant.

Assigning feature buttons to a user

To assign the **conf-dsp**, **fe-mute**, and **no-hold-conf** feature buttons to a user telephone:

1. Type **change station n**, where **n** is the telephone number of the extension to which you want to assign the following capabilities:
 - Conference Display
 - Selective Conference Party Display, Drop, and Mute
 - No-Hold Conference

Press **Enter**.

The system displays the **Station** screen for the extension that you requested.

2. Click **Next** until you see the **Button Assignments** area ([Figure 153: Station screen](#) on page 643).

Figure 153: Station screen

change station 20001		Page 3 of 4
STATION		
SITE DATA		
Room:		Headset? n
Jack:		Speaker? n
Cable:		Mounting: d
Floor:		Cord Length: 0
Building:		Set Color:
ABBREVIATED DIALING		
List1:	List2:	List3:
BUTTON ASSIGNMENTS		
1: call-appr	5:toggle-swap	
2: call-appr	6:conf-dsp	
3: call-appr	7:fe-mute	
4:	8:no-hold-conf	


3. In the **Button Assignments** area, perform the following actions:
 - Type **conf-dsp** next to the button that you want the user to use for the Conference Display capability.
 - Type **fe-mute** next to the button that you want the user to use for the Selective Conference Party Display, Drop, and Mute capability.
 - Type **no-hold-conf** next to the button that you want the user to use for the No-Hold Conference capability.
4. Press **Enter** to save your changes.

Assigning feature buttons to an attendant

To assign the **conf-dsp** and **fe-mute** feature buttons to an attendant console:

1. Type **change attendant *n***, where *n* is the number of the attendant console to which you want to assign the Conference Display capability, and the Selective Conference Party Display, Drop, and Mute capability. Press **Enter**.
The system displays the **Attendant Console** screen for the attendant that you requested.
2. Click **Next** until you see the **Feature Button Assignments** area ([Figure 154: Attendant Console screen](#) on page 644).

 Figure 154: Attendant Console screen

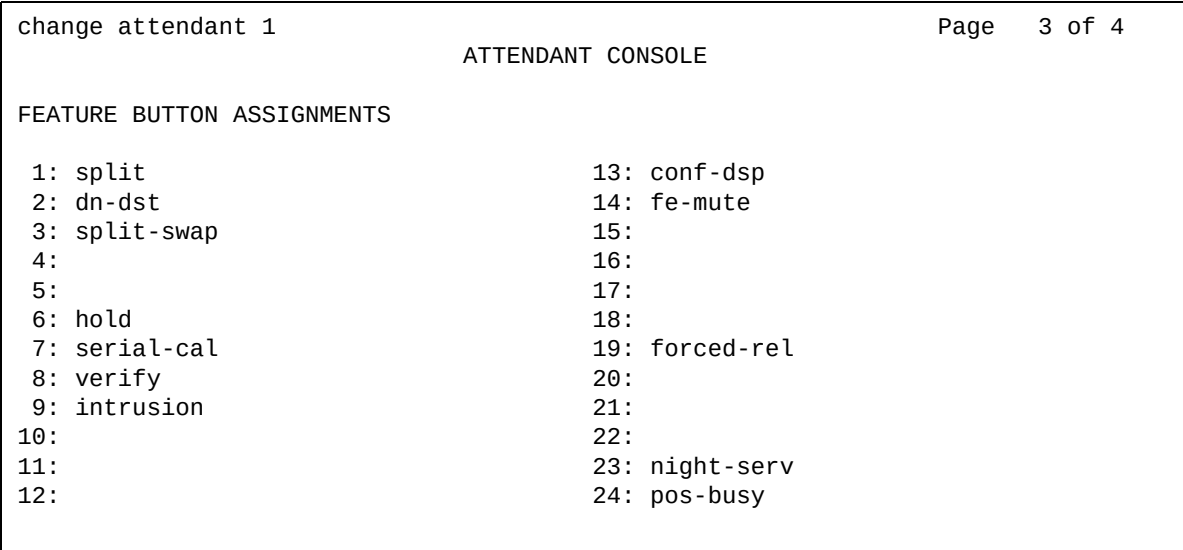

3. In the **Feature Button Assignments** area, perform the following actions:
 - Type **conf-dsp** next to the button that you want the attendant to use for the Conference Display capability.
 - Type **fe-mute** next to the button that you want the attendant to use for the Selective Conference Party Display, Drop, and Mute capability.
4. Press **Enter** to save your changes.

End-user procedures for Conference

End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Conference:

- [Displaying the participants on a conference call](#)

Displaying the participants on a conference call

Users of a digital telephone and attendants at an attendant console can use the Selective Conference Party Display, Drop, and Mute capability to display information about the participants on a call. When the system displays the information about a participant on a call, a user can drop a participant from the conference call or place a participant on mute.

To display the participants on a conference call:

1. Press the conference display feature button to place the station or the console in the conference display mode.
2. Press the conference display feature button repeatedly to scroll through the telephone numbers and names of each participant on the call. The telephone number of a participant is always available. The name of a participant might be unavailable.
3. To drop the participant that the system displays, press the Drop button.

This action is useful during a conference call when a user tries to add a participant that does not answer and the call goes to voice mail.

4. To place the participant that the system displays on mute, press the fe-mute button.

The remaining participants on the conference call cannot hear the participant who is on mute. A user or attendant can use the fe-mute button to place only one participant on mute, and that participant must be on a trunk call.

This ability to place a conference participant on hold is useful during conference calls when a participant puts the conference call on hold and the system plays music-on-hold to the remaining participants on the conference call.

CAUTION:

If a user quickly scrolls through the display information repeatedly, the system might take the telephone out of service. If the system takes the telephone out of service, the system resets the telephone, and drops the user from the call.

Reports for Conference

The following reports provide information about the Conference feature:

- None

Considerations for Conference

This section provides information about how the Conference feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Conference under all conditions. The following considerations apply to Conference:

- Trunk-to-Trunk Connections

If you do not allow trunk-to-trunk connections on your system, the system drops all conference participants when:

- A user hangs up.
- All the other participant connect to the conference through trunk lines.

- Loss Plan on Conference Calls

The end-to-end total loss for multiparty conference calls that is administered on the **Location Parameters** screen is not always applied to a specific call. The loss applied to a three-party conference call, for example, is calculated by adding the fixed pairwise loss for each pair of ports to the value for two-party loss shown on the **Location Parameters** screen. If this total is less than the end-to-end total loss value configured for a three-party conference, calculate the difference, and divide the difference by 2. Add 1 to this figure, and the result is the amount of loss applied to the call.

Interactions for Conference

This section provides information about how the Conference feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Conference in any feature configuration.

- Bridged Call Appearance

A user can use a bridged call appearance to make a conference call.

A bridged appearance can bridge onto a conference call if that action does not cause the number of participants on the conference call to exceed six participants.

- Call Vectoring

A call to a Vector Directory Number (VDN) can be included as a party in a conference call only after vector processing terminates for that call, for example, after a successful route-to command.

- Call Waiting

When a user on an analog single-line telephone activates the Call Wait feature, and the user creates a conference call, the Call Wait feature does not function while the user is on the conference call.

- Class of Restriction (COR)

If the **Restriction Override** field on the **Class of Restriction** screen is set to **all**, the system compares the COR of the participant who controls the conference call with the COR of a new conference participant. The system compares the COR of the participant who controls the conference call with the COR of a new conference participant before the system adds the participant to the conference call. The system does not compare the COR of the new participant with the CORs of the other conference participants.

If the COR of the user who controls the conference call allows the override of inward call restrictions, the system compares the COR of the user who controls the conference call with the COR of a new conference participant. The system compares the COR of the user who controls the conference call with the COR of a new conference participant before the system adds the new participant to the conference call. The system does not compare the COR of the new participant with the CORs of the other conference participants.

- Emergency Access to an Attendant

A user cannot make an Emergency-Access-to-an-Attendant call a participant in conference call.

- Trunk-to-Trunk Transfer

The system does not recognize the Conference button or the Transfer button when a user dials enough digits for the system to route a call, and the system can route the call differently if the user dials more digits. The user must be a user of a multifunction telephone, for example a BRI telephone, a digital telephone, or a hybrid telephone.

If the user wants the system to route the call based on the digits that the user has already dialed, the user must not dial any digits for three seconds, or the user must dial a pound sign (#). The system then recognizes the Conference button or the Transfer button and completes the call.

- VDN in a Coverage Path

Calls in an established conference do not cover to a vector directory number (VDN).

Once a call covers to a VDN, a conference cannot be established until the call is delivered to an extension and vector processing ends.

Co-resident DEFINITY LAN Gateway

Use the Co-resident DEFINITY LAN Gateway (DLG) feature to provide the functionality of the Adjunct/Switch Application Interface (ASAI), with the use of an Ethernet transport instead of the traditional Basic Rate Interface (BRI) transport.

Detailed description of Co-resident DEFINITY LAN Gateway

This section provides a detailed description of the Co-resident DEFINITY LAN Gateway (DLG) feature.

Co-resident DEFINITY LAN Gateway is a software application that is part of Avaya MultiVantage™ Communications Applications on the server that is running Avaya Communication Manager. In the S8300 Media Server with a G700 Media Gateway, Ethernet connectivity is provided through the processor.

The DEFINITY LAN Gateway software enables communications between TCP/IP clients and Avaya Communication Manager call processing. The DLG application software:

- Routes internetwork messages from one protocol to another, for example, ISDN to TCP/IP
- Bridges all Adjunct/Switch Application Interface (ASAI) message traffic by way of a TCP/IP tunnel protocol

In previous configurations, a DEFINITY LAN gateway (DLG) was connected externally on a separate TN801 MAPD circuit pack. The DLG application is now packaged internally, where the application co-resides with the Communication Manager software. The internally packaged DLG is referred to as the Co-resident DLG. Co-resident DLG is supported on all Communication Manager platforms 2.1 or later. However, it is not supported with the S8700 with G700 configuration.

Co-resident DLG provides the functionality of the Adjunct/Switch Application Interface (ASAI), with the use of an Ethernet transport instead of a Basic Rate Interface (BRI) transport.

How Co-resident DLG works

1. DLG listens for client connections over a well-known TCP port (5678) at a specified IP address.
2. The client connects to TCP port 5678 at the IP address to receive the services of the DLG.
3. The client exchanges TCP Tunnel Protocol messages with the DLG to request a connection to a specific Computer Telephony Integration (CTI) link.

4. DLG authenticates the client based on the administration of the client and then establishes or refuses the connection.
5. Once the connection is established, the actual ASAI layer 3 messages are passed transparently through the DLG. Each TCP connection to the DLG has a one-to-one correspondence with a CTI link.

Administering Co-resident DEFINITY LAN Gateway

This section describes:

- Any prerequisites for administering the Co-resident DEFINITY LAN Gateway feature
- The screens that you use to administer the Co-resident DEFINITY LAN Gateway feature

Prerequisites for administering Co-resident DEFINITY LAN Gateway

You must complete the following actions before you can administer the Co-resident DEFINITY LAN Gateway feature:

With the TN799 C-LAN circuit pack as the Ethernet Interface

- View the **Optional Features** screen. Ensure that the **ASAI Link Core Capabilities** field, the **Computer Telephony Adjunct Links** field, or both fields are set to **y**, and that the **Co-Res DEFINITY LAN Gateway** field is set to **y**. If these fields are set to **n**, your system is not enabled for the Co-resident DEFINITY LAN Gateway feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

- View the **IP Node Names** screen. Ensure that a node name is associated with the C-LAN. If a node name is not associated with the C-LAN, add a node name.

To view the **IP Node Names** screen, type **display node-names ip**. To add a node name, type **change node-names ip**. Press **Enter**.

- View the **IP Interfaces** screen. Ensure that a C-LAN is administered, and the Ethernet port for the C-LAN is enabled. If a C-LAN is not listed, add a C-LAN.

To view the **IP Interfaces** screen, type **display ip-interfaces**. To add a C-LAN, type **add ip-interface next**. Press **Enter**.

- View the **Data Modules** screen. Ensure that the Ethernet port on the C-LAN is administered. If an Ethernet port on the C-LAN is administered, the **Service Type** field is set to **Ethernet**, and the **Port** field is set to port **17** on the TN799. If the Ethernet port is not listed, add an Ethernet port.

To view the **Data Modules** screen, type **list data-modules**. To add an Ethernet port, type **add data-module next**. Press **Enter**.

With the TN2314 circuit pack as the Ethernet Interface

- View the **Optional Features** screen, and ensure that the **ASAI Link Core Capabilities** field, the **Computer Telephony Adjunct Links** field, or both fields, are set to **y**. Click **Next** until you see the **Processor Ethernet** field. Ensure that the **Processor Ethernet** field is set to **y**. If these fields are set to **n**, your system is not enabled for the Co-resident DEFINITY LAN Gateway feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

- View the **IP Interfaces** screen, and ensure that the processor (PROCR) is administered and the Ethernet port for the processor is enabled. If the processor is administered, and the Ethernet port is enabled, **PROCR** appears in the **Type** field and the previously administered node name appears in the **Node Name** field. If the PROCR is not listed, add a processor.

To view the **IP Interfaces** screen, type **display ip-interfaces**. To add a processor, type **add ip-interface next**. Press **Enter**.

Screens for administering Co-resident DEFINITY LAN Gateway

Screen name	Purpose	Fields
Optional Features	Ensure that the proper license fields are set to y .	● ASAI Link Core Capabilities (if required) ● Computer Telephony Adjunct Links (if required) ● Co-Res DEFINITY LAN Gateway ● Processor Ethernet
IP Node Names	Ensure that a node name is associated with the C-LAN.	● Name

Screen name	Purpose	Fields
IP Interfaces	Ensure that the C-LAN is administered, and the Ethernet port for the C-LAN is enabled. If the C-LAN is administered and the Ethernet port is enabled, the Type field is set to C-LAN , and the previously administered node name appears in the Node Name / Local Node field.	• Type • Node Name/Local Node
Data Modules	Ensure that the Ethernet port on the C-LAN is administered. If the Ethernet port on the C-LAN is administered, the Service Type field is set to Ethernet , and the Port field is set to port 17 on the TN799.	• Service Type • Port
CTI Link	Add a CTI link.	All
IP Services	Set the IP service type to DLG .	Service Type
Administer DLG	When the Service Type field is set to DLG , this page is added to the IP Services screen.	All

Note:

For more information on DLG administration for the S8300 Media Server, see the Avaya CallVisor® ASAI Technical Reference.

Reports for Co-resident DEFINITY LAN Gateway

The following reports provide information about the Co-resident DEFINITY LAN Gateway feature:

- None

Considerations for Co-resident DEFINITY LAN Gateway

This section provides information about how the Co-resident DEFINITY LAN Gateway feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Co-resident DEFINITY LAN Gateway under all conditions. The following considerations apply to Co-resident DEFINITY LAN Gateway:

- The Co-Resident DLG feature that is available in all configurations of Communication Manager software release 2.0 and 2.1 has a problem that could potentially bring the CTI link down by triggering a link restart. The Communication Manager software error logs point to a lack of response to TCP Heartbeats from the adjunct side. However, the reason for the link restart is that a Communication Manager internal process stops processing messages from the adjunct. The messages not processed include the response to TCP Heartbeat. While this condition is experienced, messages from Communication Manager to the adjunct (e.g., event reports) continue to flow.

To avoid this problem, if your system is running Communication Manager release 2.0 or 2.1, you must upgrade to Communication Manager release 2.1.1, load 414 or later, or get patch release 7381. Contact your Avaya representative for details.

Interactions for Co-resident DEFINITY LAN Gateway

This section provides information about how the Co-resident DEFINITY LAN Gateway feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Co-resident DEFINITY LAN Gateway in any feature configuration.

- None

Data Call Setup

Use the Data Call Setup feature to set up a data call by any of following methods:

- Data-terminal or keyboard dialing
- Telephone dialing
- Hayes AT command dialing
- Permanent-switched connections
- Administered connections
- Automatic-calling unit interface (MPD and HSC)
- Hotline dialing

Detailed description of Data Call Setup

This section provides a detailed description of the Data Call Setup feature.

In addition to data-terminal and telephone dialing, the system accepts calls from other devices. For example, you can use a modular-processor data module (MPDM) that is equipped with an automatic-calling unit (ACU) interface module to dial from a host computer.

In addition to the numbers, the pound key (#), and the asterisk key (*) on a telephone.

[Table 50: Special characters](#) on page 655 shows the special characters that a user can dial.

Table 50: Special characters

Character	Short description	Long description
SPACE or minus (-)	and	A space or a minus (-) improves legibility. The server ignores these characters during dialing.
plus (+)	wait	A plus (+) interrupts or suspends dialing until the user receives dial tone.
comma (,)	pause	A comma (,) inserts a 1.5-second delay.
1 of 2		

Table 50: Special characters (continued)

Character	Short description	Long description
percent (%)	mark	Use a percent (%) to indicate that the digits are for end-to-end signaling when you use a touchtone trunk. Use a percent (%) with a rotary trunk. The percent (%) is not required when you use a touchtone trunk.
UNDERLINE or BACKSPACE	-	Use an underline or a backspace to correct characters that you typed on the same line.
at (@)	-	Use an "at" sign (@) to delete the entire line and start again with a new DIAL prompt.
2 of 2		

Each line of information that a user dials can contain 42 characters. Note that the system counts the plus (+) and the percent (%) as two characters each.

You administer the asynchronous data module (ADM) as one endpoint of a connection. The server establishes the connection at the scheduled time, and maintains the connection for the specified duration. After the call is accepted, the data set enters into continuous mode for the specified duration. If the server reboots during the connection, or if the connection drops, the server starts the connection again.

The system handles all ISDN basic rate interface (BRI) bearer data-call requests that are presently defined. If the server does not support a capability, the system returns a proper cause value to the terminal.

The system sends a cause code, also called a reason code, to BRI terminals to identify the reason that the system clears a call. The BRI data module converts some cause values to text messages for the system to display. In a passive-bus multipoint configuration, the system supports two BRI endpoints per port, and thus doubles the capacity of the BRI circuit pack. When you change the configuration of a BRI endpoint from point-to-point configuration to a multipoint configuration, the original endpoint does not need to reinitialize. In a multipoint configuration, you can administer only endpoints that support service profile identifier (SPID) initialization.

[Table 51: Call progress messages](#) on page 657 shows the call progress messages and the call progress descriptions for digital communication protocol (DCP) and ISDN-BRI modules that the system provides.

Table 51: Call progress messages

Message Code	Module Type	Message Description
DIAL:	DCP	This message is the equivalent of a dial tone. Type the desired number or the Feature Access Code (FAC), and then Press Enter .
CMD	BRI	This message is the equivalent of a dial tone. Type the desired number or the FAC, and then Press Enter .
RINGING	DCP, BRI	This message is the equivalent of a ringing tone. The called terminal is ringing.
BUSY	DCP, BRI	This message is the equivalent of a busy tone. The called number is busy or out of service.
ANSWERED	DCP, BRI	The call is answered.
ANSWERED-NOT DATA	DCP	The call is answered, and the system does not detect a modem answer tone.
TRY AGAIN	DCP, BRI	This message is the equivalent of a reorder tone. The system facilities are unavailable.
DENIED	DCP, BRI	This message is the equivalent of an intercept tone. The system cannot place the call as dialed.
ABANDONED	DCP, BRI	The calling user abandoned the call.
NO TONE	DCP, BRI	The system does not detect a tone.
CHECK OPTIONS	DCP, BRI	The data-module options are incompatible.
XX IN QUEUE	DCP, BRI	XX represents the position of the call that is in the queue.
PROCESSING	DCP, BRI	The call is out of the queue. The facility is available.
TIMEOUT	DCP, BRI	The call exceeds the time that is allowed. The system terminates the call.
FORWARDED	DCP, BRI	This message is the equivalent of a redirection-notification signal. The called terminal activates Call Forwarding and receives a call, and the system then forwards the call.
1 of 2		

Table 51: Call progress messages (continued)

Message Code	Module Type	Message Description
INCOMING CALL	DCP, BRI	This message is the equivalent of ringing.
INVALID ADDRESS	DCP	The user entered a name that is not defined in the Alphanumeric Dialing feature.
WRONG ADDRESS	BRI	The user entered a name that is not defined in the Alphanumeric Dialing feature.
PLEASE ANS-	DCP, BRI	The originating telephone user used the One-Button Transfer to Data capability to transfer the call to a data module.
TRANSFER	DCP	Data Call Return-to-Voice is occurring.
CONFIRMED	DCP, BRI	This message is the equivalent of the confirmation tone. The system either accepts the feature request of the user, or the system sends the call to a local coverage point.
OTHER END	DCP, BRI	The endpoint terminates the call.
DISCONNECTED	DCP, BRI	The system disconnects the call.
WAIT	DCP, BRI	The normal process continues.
WAIT, XX IN QUEUE	DCP	The call is in a local hunt-group queue.
2 of 2		

The following data functions are unavailable on ISDN-BRI telephones:

- One-Button Transfer to Data
- Return-to-voice
- Data call preindication
- Voice-call transfer to data
- Data-call transfer to voice

Administering Data Call Setup

The following steps are part of the administration process for the Data Call Setup feature:

- [Defining a data module](#)
- [Specifying the port location](#)
- [Assigning the data extension feature button](#)

This section describes:

- Any prerequisites for administering the Data Call Setup feature
- The screens that you use to administer the Data Call Setup feature
- Complete administration procedures for the Data Call Setup feature

Prerequisites

You must complete the following actions before you can administer the Data Call Setup feature:

- Ensure that the feature access code (FAC) for data origination is available on your system.

To ensure that the FAC for data origination is available on your system:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Codes (FAC)** screen.

2. Click **Next** until you see the **Data Origination Access Code** field ([Figure 155: Feature Access Code \(FAC\) screen](#) on page 660).

Figure 155: Feature Access Code (FAC) screen

change feature-access-codes	FEATURE ACCESS CODE (FAC)	Page 2 of 7
Data Origination Access Code:		
Data Privacy Access Code:		
Directed Call Pickup Access Code:		
Emergency Access to Attendant Access Code:		
Enhanced EC500 Activation: *45	Deactivation: *46	
Extended Call Fwd Activate Busy D/A All:	Deactivation:	
Extended Group Call Pickup Access Code:		
Facility Test Calls Access Code:		
Flash Access Code:		
Group Control Restrict Activation:	Deactivation:	
Hunt Group Busy Activation:	Deactivation:	
ISDN Access Code:		
Last Number Dialed Access Code: *03		
Leave Word Calling Message Retrieval Lock: *33		
Leave Word Calling Message Retrieval Unlock: *34		
Leave Word Calling Send A Message: *35		
Leave Word Calling Cancel A Message: *37		
Malicious Call Trace Activation:	Deactivation:	
Meet-me Conference Access Code Change:		

3. In the **Data Origination Access Code** field, type the FAC for data origination access.
4. Press **Enter** to save your changes.

Screens for administering Data Call Setup

Table 52: Screens for data-terminal dialing

Screen name	Purpose	Fields
Data Module • PDM/TDM • 7500 • Data Line	Define the data module.	• All • All • All
Modem Pool Group	Specify the port that is associated with the conversion resource on the integrated modem pool circuit pack.	Circuit Pack Assignments

Table 53: Screens for telephone dialing

Screen name	Purpose	Fields
Feature Access Codes	Assign the Feature Access Code (FAC) for data origination.	Data Origination Access Code
Station	Assign the data-ext (Ext:) feature button for data extension.	Any unassigned button field in the area
Data Module • PDM/TDM • Data Line	Define the data module.	• All • All
Modem Pool Group	Specify the port that is associated with the conversion resource on the integrated modem pool circuit pack.	Circuit Pack Assignments

Defining a data module

To define a data module:

1. Type **add data-module next**. Press **Enter**.

The system displays the **Data Module** screen.

- For PDM/TDM data modules, [Figure 156: Data Module screen - pdm data module](#) on page 662.
- For 7500 data modules, [Figure 157: Data Module screen - 7500 data module](#) on page 662 and [Figure 158: Data Module screen - 7500 data module](#) on page 663.

- For Data Line data modules, [Figure 159: Data Module screen - data-line data module](#) on page 663 and [Figure 160: Data Module screen - data-line data module](#) on page 664.

Figure 156: Data Module screen - pdm data module

add data-module next		Page 1 of 1	
DATA MODULE			
Data Extension: 502	Name:	BCC: 2	
Type: pdm	COS: 1	Remote Loop-Around Test? n	
Port:	COR: 1	Secondary data module? n	
ITC: restricted	TN: 1	Connected To: dte	
ABBREVIATED DIALING			
List1:			
SPECIAL DIALING OPTION:			
ASSIGNED MEMBER (Station with a data extension button for this data module)			
Ext	Name (first 26 characters)		
1:			

Figure 157: Data Module screen - 7500 data module

add data-module next		Page 1 of 2	
DATA MODULE			
Data Extension: 502	Name:		
Type: 7500	COS: 1		
Port:	COR: 1	Multimedia? n	
	TN: 1		
ABBREVIATED DIALING			
List1: group 1			
SPECIAL DIALING OPTION:			
CIRCUIT SWITCHED DATA ATTRIBUTES			
Default Duplex: full	Default Mode: async	Default Speed: 1200	
DATA MODULE CAPABILITIES			
Default ITC: restricted	Default Data Application: M2_A		

Figure 158: Data Module screen - 7500 data module

add data-module next	DATA MODULE	Page 2 of 2
BRI LINK/MAINTENANCE PARAMETERS		
XID? y	Fixed TEI? n	
MIM Support? y	Endpt Init? y	SPID: 502 MIM Mtce/Mgt? y

Figure 159: Data Module screen - data-line data module

add data-module next	DATA MODULE	Page 1 of 2
Data Extension: 502	Name:	BCC: 2
Type: data-line	COS: 1	
Port:	COR: 1	
ITC: restricted	TN: 1	Connected To: dte
ABBREVIATED DIALING		
List1: personal 1		
SPECIAL DIALING OPTION:		
ASSIGNED MEMBER (Station with a data extension button for this data module)		
Ext	Name (first 26 characters)	
1:		

Figure 160: Data Module screen - data-line data module

add data-module next		Page 2 of 2	
DATA MODULE			
CAPABILITIES			
	KYBD Dialing? y	Configuration? n	
	Busy Out? n		
SPEEDS			
Low? y	1200? y	4800? y	19200? y
300? y	2400? y	9600? y	Autoadjust? n
OPTIONS			
	Permit Mismatch? n	Dial Echoing? y	
	Disconnect Sequence: two-breaks	Answer Text? y	
	Parity: even	Connected Indication? y	

The system shows two display-only fields in the **Abbreviated Dialing** area. These display only-fields are **Ext** and **Name**. The fields contain the extension number and the name of the users who have associated data extension buttons, and who share this data module.

2. In the **BCC** field, perform one of the following actions:

- If the speed is 56 kbps, type **1**.
- If the speed is 64 kbps, type either **2**, **3**, or **4**.

The system compares the speed setting that you assign here with the speed setting in an associated routing pattern. The system compares the two speed settings when calls that attempt to use the data module fail to complete.

The system displays the **BCC** field if the **ISDN-PRI** field or the **ISDN-PRI Trunks** field on the **Optional Features** screen is set to **y**.

3. The **Capabilities** area contains three fields.

- In the **Busy Out** field, perform one of the following actions:
 - To place the data line circuit (DLC) port in a busy-out state so that calls do not terminate at the data terminal equipment when the DTE control lead to the DLC drops, type **y**. Use this option for DTEs that are members of a hunt group.
 - To keep the DCL port out of a busy-out state when the DTE control lead to the DLC drops, type **n**.
- The system displays the **Configuration** field only when the **KYBD Dialing** field is set to **y**.
 - If you want to view and change options from originating or receiving DTEs, such as non intelligent terminals, type **y**.
 - If you do not want view and change options from intelligent devices such as computers, type **n**.

- In the **KYBD Dialing** field, perform one of the following actions:
 - If you want the users to dial calls from a keyboard, and to allow the data module endpoint to transmit and receive text during call origination or call termination, type **y**.
If you type **y**, you must also type **n** in the **Low** field in the **Speeds** area of the **Data Module** screen.
 - If you do not want the users to dial calls from a keyboard, type an **n**. If you type **n**, the data module endpoint cannot transmit and receive text during call origination and call termination. If you type an **n**, data calls can be answered, but there is no text feedback.

4. The **Circuit Switched Data Attributes** area contains information that is used with 7500 data modules and World Class BRI data modules.

Note that the fields in the **Circuit Switched Data Attributes** area contain default information. The default information is for modem pooling conversion resource insertion when the endpoint does not support the data query capability, and for when the endpoint does not support the administered connections. The information in the fields has no significance for data modules that provide data query, such as Avaya-supported ISDN-BRI data modules. Use the system default settings that the system provides for Avaya ISDN-BRI data modules or World Class ISDN-BRI data modules.

- In the **Default Duplex** field, perform one of the following actions:
 - To allow simultaneous, two-way transmission, type **full**.
This is duplex mode.
 - To allow only one transmission direction at a time, type **half**.
This is half duplex mode.
- In the **Default Mode** field, perform one of the following actions:
 - For synchronous data mode, type **sync**.
 - For asynchronous data mode, type **async**.
- In the **Default Speed** field, type the data rate. The valid entries are:
 - **1200**
 - **2400**
 - **4800**
 - **9600**
 - **19200**
 - **56000** when the **Default Mode** field is set to **sync**
 - **64000** when the **Default Mode** field is set to **sync**

5. The system displays the **Connected To** field, when the **Type** field contains either **dpm** or **data-line**.

In the **Connected To** field, perform one of the following actions:

- If the Asynchronous Data Unit (ADU) is connected to DTE, type **dte**.
 - If the ADU is connected to an information systems network, type **dte**.
6. In the **COR** field, type the number of the class of restriction for this data module. Valid entries are **0** through **95**.
 7. In the **COS** field, type the number of the class of service for this data module. Valid entries are **1** through **15**.
 8. The **Data Module Capabilities** area contains three fields with information for the 7500 data modules and the World Class BRI (WCBRI) data modules.
 - The **Default Data Applications** field identifies the mode that the system uses to originate calls when the calling parameters do not specify the mode. The system also uses the mode to terminate trunk calls that do not have administered connections or for which the bearer capability is unspecified. See the "Uniform Dial Plan feature" for more information.
 - In the **Default Data Applications** field, perform one of the following actions:
 - Type **M0** to specify mode 0. Use this option for a WCBRI endpoint that the system uses as an administered connection.
 - Type **M1** to specify mode 1.
 - Type **M2_A** to specify mode 2 asynchronous.
 - Type **M2_S** to specify mode 2 synchronous.
 - Type **M3/2** to specify mode 3/2 adaptable.
 - In the **Default ITC** field, perform one of the following actions:
 - Type **restricted** for a WCBRI endpoint that is an administered connection.
 - Type **unrestricted** for a WCBRI endpoint that is not an administered connection.
 - The display-only **MM Complex Voice Ext** field contains the number of the associated telephone in the multimedia complex. The system displays the **MM Complex Voice Ext** field only when the **Multimedia** field is set to **y**.

The field is blank until you type the data module extension in the **MM Complex Data Ext** field on the **Station** screen. When you type the data module extension in the **MM Complex Data Ext** field on the **Station** screen, the system associates the numbers in the **MM Complex Data Ext** and the **MM complex Voice Ext** fields as two parts of a one-number complex. The one-number complex is the extension of the telephone.

The system displays the data module extension in the display-only **Data Extension** field.

9. The system does not display the **ITC** field for voice-only stations or for BRI stations. The **ITC** field applies only when the **Comm Type** field on the **Trunk Group** screen, that the system uses for an outbound call, contains **avd** or **rbavd**. The **ITC** field specifies the type of transmission facilities that an ISDN call uses when a call originates from this data module endpoint.

In the **ITC** field, perform one of the following actions:

- If the data module can send bits at speeds less than or equal to 56 kbps, type **restricted**. If you type **restricted** in the **ITC** field, the system uses a trunk group for which the **COMM Type** field on the **Trunk Group** screen is set to **rbavd** or to **avd** to complete a call from this data module endpoint.

A restricted transmission facility enforces ones density digital transmission. Ones density digital transmission is a sequence of eight digital zeroes that the firmware on the DS1 port board converts to a sequence of seven zeroes and a digital 1.

- If the data module can send bits at a speed no greater than 64 kbps, type **restricted**. If you type **unrestricted** in the **ITC** field, the system uses a trunk group for which the **COMM Type** field on the **Trunk Group** screen is set to **avd** to complete a call from this data module endpoint. The value **avd** in the **Comm Type** field indicates that the trunk group provides both restricted and unrestricted transmission facilities.

An unrestricted transmission facility does not enforce ones density digital transmission. The DS1 port board firmware does not convert the digital information.

10. In the **List1** field in the **ABBREVIATED DIALING** area, perform one of the following actions:

- If you do not want the data module to have an abbreviated dialing list, leave the field blank.
- If you want the data module to have an enhanced abbreviated dialing list, type **e**.
- If you want the data module to have a group list, type **g**. If you type **g**, the system displays a field to the right of the **List1** field. If you type **g** in the **List1** field, you must also type a group list number in the field that the system displays.
- If you want the data module to have a personal list, type **p**. If you type **p**, the system displays a field to the right of the **List1** field. If you type **p** in the **List1** field, you must type a personal list number in the field that the system displays.
- If you want the data module to have a system abbreviated dialing list, type **s**.

11. In the **Name** field, perform one of the following actions:

- Type the name of the user who is associated with the data module.
- Leave the field blank.

12. The **OPTIONS** area contains six fields.

- The system displays the **Answer Text** field only if the **KBDY Dialing** field is set to **y**.

The **Answer Text** field applies to the following call messages:

- Incoming
- Answered
- Disconnected
- Disconnected other end

In the **Answer Text** field, perform one of the following actions:

- To allow text feedback to the DTE when a user answers a call or the system disconnects a call, type **y**. The text feedback includes both DLC-generated text and system-generated text.
 - To disable text feedback to the DTE when a user answers a call or the system disconnects a call, and when the DTE that answers a call is a computer or an intelligent device, type **n**. The system still generates the text, but the DLC does not allow the text to be delivered to the DTE.
- The system displays the **Connected Indication** field only if the **KBDY Dialing** field is set to **y**. If the **Connected Indication** field is set to **n**, DLC provides the connection indication when the DLC activates the Electronics Industries Association (EIA) 232C control lead.

In the **Connected Indication** field, perform one of the following actions:

- If you want the system to generate a "connected" message to the DTE when the system establishes a connection, type **y**.
 - If you do not want the system to generate a "connected" message to the DTE when the system establishes a connection, type **n**.
- The system displays the **Dial Echoing** field only if the **KBDY Dialing** field is set to **y**.
- In the **Dial Echoing** field, perform one of the following actions:
- If you want the system to echo characters back to the DTE, type **y**.
 - If you do not want the system to echo characters back to the DTE and when an intelligent device provides keyboard dialing, type **n**.

- The system displays the **Disconnect Sequence** field only if the **KBDY Dialing** field is set to **y**.

In the **Disconnect Sequence** field, perform one of the following actions:

- If you want a break that is greater than 2 seconds, type **long-break**.
- If you want a break that is less than 1 second, type **two-breaks**.

- The system displays the **Parity** field only if the **KBDY Dialing** field is set to **y**. The DLC generates the parities when the DLC sends call setup text to the DTE. The DLC does not check the parity when the DLC receives dial characters. Select the parity that matches the DTE that connects to the data module.

In the **Parity** field, type one of the following types of parity:

- **even**
- **odd**
- **mark**
- **space**
- The **Permit Mismatch** field contains information that allows an EIA interface to operate at a rate that differs from the rate that is agreed upon during the data module handshake. The rate that is agreed upon during the data module handshake is always the highest compatible rate among the speeds that each data module reports.

The information in the **Permit Mismatch** field eliminates the need to change the DTE or DLC speed whenever someone, or something, places a call to or from endpoints that operate at a different speed.

When the **Permit Mismatch** field is set to **y**, the DLC reports the highest optional speed and all the lower speeds, or the previously selected autoadjust speed, during the handshake process.

- If you want the DLC to operate at the highest selected speed, which is a higher rate than the far-end data module, type **y**.
- If you do not want DLC to operate at the highest selected speed, type **n**.

13. In the **Port** field, type the appropriate values from [Table 54: Port field values](#) on page 669.

Table 54: Port field values

Characters	Description	Value
1-2	Cabinet Number	01 through 44 (For DEFINITY R configurations) 01 through 03 (For DEFINITY SI configurations) 01 through 64 (For S8700 IP-Connect)
3	Carrier	A through E
4-5	Slot Number	0 through 20
<i>1 of 2</i>		

Table 54: Port field values (continued)

Characters	Description	Value
6-7	Circuit Number	01 through 04 (x.25 circuit pack) 01 through 31 (DEFINITY SI, S8700 IP-Connect (tdm, pdm) configurations) 01 through 16 (ppp for S8700 IP-Connect) 01 through 08 (system-port for S8700 IP-Connect) 17/33 (ethernet on S8700 IP-Connect)
x	Administration without Hardware	If the Secondary data module? field, contains an n , you can type x in the Port field. A Port field set to x indicates that no hardware is associated with the port assignment.
2 of 2		

14. The **SPEEDS** area contains information about the operating speeds of the data module.

- In the **Low** field, perform one of the following actions:
 - If you want the data line circuit to operate at a speed of 0 to 1800 bps, type **y**.
 - If the **KYBD Dialing** field in the **CAPABILITIES** area is set to **y**, type **n**.
- In the **300**, **1200**, **2400**, **4800**, **9600**, and **19200** fields, perform one of the following actions:
 - If you want the DLC to operate at the speed, type **y**.
 You can choose any of the speeds for the DLC. The DLC matches the speed for the duration of the call.
 If you select multiple speeds, you must also set the **Autoadjust** field to **n** and select at least three speeds. The speed of the DTE must be the highest speed that you select. The DTE must have the highest speed because the system delivers feedback to the DTE at the highest selected speed.
 - If you do not want the DLC to operate at the speed, type **n**.
- The system displays the **Autoadjust** field when the **KYBD Dialing** field in the **CAPABILITIES** area is set to **y**. The **Autoadjust** field applies only to calls that a user originates from a keyboard.
 In the **Autoadjust** field, perform one of the following actions:
 - If you want the DLC port to automatically adjust to the operating speed and the parity of the DTE to which the DLC port connects, type **y**.
 - If you do not want the DLC port to automatically adjust to the operating speed and the parity of the DTE to which the DLC port connects, type **n**.

15. In the **Special Dialing Option** field, perform one of the following actions:

- If you do not want the data module to have special dialing, leave the field blank.
- If you want the data module to have hot-line dialing, type **hot-line**. If you type **hot-line**, the system displays the **Abbreviated Dialing Dial Code (from above list):** field. Type the **abbreviated dial code** in the **Abbreviated Dialing Dial Code (from above list):** field. Valid entries are **0** through **999**.
- If you want the data module to have default dialing, type **default**. If you type **default**, the system displays the **Abbreviated Dialing Dial Code (from above list):** field. Type the **abbreviated dial code** in the **Abbreviated Dialing Dial Code (from above list):** field. Valid entries are **0** through **999**.

16. In the **TN** field, type the tenant partition number of the data module. Valid entries are **1** through **100**.

17. In the **Type** field, perform one of the following actions:

- To assign a 7500 data module, type **7500**.

The 7500 data module supports:

- Automatic TEI
- B-channel, maintenance and management messaging
- **Service Profile Identifier (SPID)** initialization capabilities.

BRI voice endpoints, BRI data endpoint, or both BRI voice and BRI data endpoints are assigned to either the **ISDN-BRI** - 4-wire S/T-NT Interface circuit pack **or** the **ISDN-BRI** - 2-wire U circuit pack. Each circuit pack can support up to 12 ports.

You can administer more than one ISDN endpoint, either a voice endpoint or a data endpoint, on one port. You can administer more than one ISDN endpoint, because BRI provides a multipoint capability.

For **BRI**, multipoint administration allows for telephones that have **SPID** initialization capabilities. Multipoint administration is allowed only if no endpoint that is administered on the same port is a fixed tie endpoint, and no station on the same port has B-channel data capability. The system restricts multipoint administration to two endpoints per port.

- To assign a data line data module, type **data-line**.

Use the **Data Line Data Module (DLDM)** screen to assign ports on the Data Line (**DLC**) circuit pack that allow **EIA 232C** devices to connect to the system. The **DLC**, with a companion **ADU**, provides a less expensive data interface to the system than other asynchronous DCP data modules.

The **DLC** supports asynchronous transmissions at speeds of Low and 300, 1200, 2400, 4800, 9600, and 19200 bps over 2-pair (full-duplex) lines. These lines can have different lengths, depending on the transmission speed and the wire gauge.

Data Call Setup

The **DLC** has eight ports. The connection from the port to the **EIA** device is direct, which means that no multiplexing is involved. A single port of the **DLC** is equivalent in functionality to a data module and a digital line port. The **DLC** appears as a data module to the **DTE**, and as a digital line port to the server that runs Avaya Communication Manager.

The **DLC** connects the following **EIA** 232C equipment to the system:

- Printers
 - Non intelligent data terminals
 - Intelligent terminals, personal computers (**PCs**)
 - Host computers
 - Information Systems Network (**ISN**), **RS-232C** local area networks (**LANs**), or other data switches
- To assigns a DCE interface for processor data modules or trunk data modules, type **pdm**.

Use these screens assign Modular Processor Data Modules (MPDMs) and Modular Trunk Data Modules (MTDMs). Use one screen to assign MPDMs (700D), 7400B, 7400D or 8400B Data Module. Use another screen for MTDMs (700B, 700C, 700E, 7400A). You must complete one screen for each MPDM, 7400B, 7400D, 8400B or MTDM.

The MPDM, 7400B, or 8400B Data Module provides a Data Communications Equipment (DCE) interface. Use the interface for a connection to equipment such as a data terminal, call detail recording (CDR) output device, on-premises administration terminal, Message Server, Property Management System (PMS), AUDIX, and host computers. The MPDM, 7400B, or 8400B Data Module also provides a Digital Communications Protocol (DCP) interface to the digital switch.

Note that DCE is the equipment on the network side of a communications link that provides all the functions that are required to make the binary serial data from the source or transmitter compatible with the communications channel.

The MTDM provides an EIA DTE interface for connection to off-premises private line trunk facilities, or a switched telecommunications network and a DCP interface for connection to the digital switch. Note that DTE is the equipment that comprises the endpoints in a connection over a data circuit. For example, in a connection between a data terminal and a host computer, the terminal, the host, and their associated modems or data modules make up the DTE. The MTDM or the 7400A Data Module can also serve as part of a conversion resource for combined modem pooling.

18. Press **Enter** to save your changes.

Specifying the port location

To specify the port location:

1. Type **change modem-pool num *n***, where *n* is the modem pool that you want to change. Press **Enter**.

The system displays the **Modem Pool Group** screen ([Figure 161: Modem Pool Group screen](#) on page 673).

Figure 161: Modem Pool Group screen

change modem pool group		Page 1 of 1
MODEM POOL GROUP		
Group Number: 1		Group Type: integrated
Receiver Responds to Remote Loop? n		Hold Time (min): 5
Send Space Disconnect? y		Receive Space Disconnect? y
CF-CB Common? y		Loss of Carrier Disconnect? y
Speed: LOW/300/1200	Duplex: full	Synchronization: a/sync
CIRCUIT PACK ASSIGNMENTS		
Circuit Pack Location	Circuit Pack Location	
1: ____	9: ____	
2: ____	10: ____	
3: ____	11: ____	
4: ____	12: ____	
5: ____	13: ____	
6: ____	14: ____	
7: ____	15: ____	
8: ____	16: ____	

2. In the **Circuit Pack Location** field, type the 7-character port number that is associated with the conversion resource on the integrated modem pool circuit pack.

Information in the **Circuit Pack Location** field is optional for integrated conversion resources only.

3. Press **Enter** to save your changes.

Assigning the data extension feature button

To assign the data extension feature button:

1. Type **change station *n***, where *n* is the telephone number of the user that you want to change. Press **Enter**.

The system displays the **Station** screen.

2. Click **Next** until you see the **Button Assignments** area ([Figure 162: Station screen](#) on page 674).

Figure 162: Station screen

change station 32023		Page 3 of 3
STATION		
SITE DATA		
Room:	Headset? n	
Jack:	Speaker? n	
Cable:	Mounting: d	
Floor:	Cord Length: 0	
Building:	Set Color:	
ABBREVIATED DIALING		
List1:	List2:	List3:
BUTTON ASSIGNMENTS		
1: call-appr	4: data-ext	Ext: 22000
2: call-appr	5:	
3: call-appr	6:	

3. Type **data-ext** after any available button number.

When you type **data-ext** in a field, the system displays an **Ext:** field.

4. Type the extension of the data module in the **Ext:** field.
5. Press **Enter** to save your changes.

End-user procedures for Data Call Setup

End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Data Call Setup:

- [Setting up and disconnecting data calls from a DCP data terminal](#)
- [Setting up data calls from a DCP telephone](#)
- [Setting up and disconnecting data calls from an ISDN-BRI data terminal](#)
- [Setting up data calls from an ISDN-BRI telephone](#)

Setting up and disconnecting data calls from a DCP data terminal

To set up and disconnect data calls from a Digital Communications Protocol (DCP) data terminal.

1. At the Dial: prompt, type the data number.

The system displays the RINGING message.

If the call is in a queue, the system displays the WAIT, XX IN QUEUE message. The system displays the position of the call in the queue, represented by XX, as the system moves the call through the queue.

2. Press **Break** to originate or disconnect a call.
3. If the terminal does not generate a 2-second continuous break signal, press the **originate/disconnect** button on the data module.
4. At the DIAL: prompt, type the digits.

Setting up data calls from a DCP telephone

When a data terminal is unavailable, you can originate and control data calls from a DCP telephone. Use any unrestricted telephone to set up the call, and then transfer the call to a data module endpoint.

Use a button on a multiappearance telephone data-extensions to make the data call. Assign any administrable feature button as a data-extension button. The data-extension button provides one-touch access to a data module.

Use any of the following options, either alone or in combination, to make a data call from a voice terminal.

- One-Button Transfer to Data

Press the **data-extension** button after the endpoint answers, to transfer a call to the associated data module.

- Return-to-Voice

Press the **data-extension** button that is associated with a busy data module to change a connection from a data connection to a voice connection. If you hang up, the system disconnects the call. If the system returns the data call to the telephone, the system either continues the call in voice mode, or the system transfers the data call to another endpoint.

- Data Call Preindication

Press the data-extension button to reserve the associated data module before you dial a data endpoint. The system reserves the data module for the call and reserves a conversion resource for the call, if the call needs a conversion resource.

Use the Data Call Preindication option before you use one-button transfer to data, for data calls that use toll-network facilities. Data Call Preindication is in effect until you press the associated **data-extension** button again for a one-button transfer. There is no timeout.

Setting up and disconnecting data calls from an ISDN-BRI data terminal

To set up and disconnect data calls from an ISDN-BRI data terminal:

1. Press **Enter** a few times until the system displays the **CMD:** prompt.
2. If the system does not display the **CMD:** prompt:
 - a. Press **Break**, **A**, and **T** at the same time.
 - b. Press **Enter**.
 - c. Type three plus signs (+++).

The system displays the CMD: prompt.
 - d. Type **end**.
 - e. Press **Enter**.

Setting up data calls from an ISDN-BRI telephone

To set up a data call from an ISDN-BRI telephone:

1. Press the data button on the telephone.
2. Type the number on the dial pad.
3. Press the data button again.

The following data functions are unavailable on ISDN-BRI voice terminals:

- One-button transfer to data
- Return-to-voice
- Data call preindication
- Voice call transfer to data, and data call transfer to voice

Reports for Data Call Setup

The following reports provide information about the Data Call Setup feature:

- None

Considerations for Data Call Setup

This section provides information about how the Data Call Setup feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Data Call Setup under all conditions. The following considerations apply to Data Call Setup:

- ISDN basic rate interface (BRI) has a voice-to-data restriction. A telephone cannot call a data terminal, and a data terminal cannot call a telephone
- BRI telephones cannot have data-extension buttons. Digital Communications protocol (DCP) sets have data-extension buttons. However, DCP sets cannot have data-extension buttons for BRI.
- When a telephone user uses a modem to place a data call, the user dials the data-origination access code that is assigned in the system before the user dials the endpoint.
- The system does not limit the number of assigned data-extension buttons per telephone. Assign telephone buttons that access the data module.
- Telephone dialing is unavailable in ISDN-BRI applications because ISDN-BRI terminals supports neither voice-call transfer to data, nor data-call transfer to voice.

Interactions for Data Call Setup

This section provides information about how the Data Call Setup feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Data Call Setup in any feature configuration.

- Abbreviated Dialing

You can use only 22 of the 24 digits in an abbreviated-dialing number when you dial at a keyboard. The remaining two digits must contain the wait indicator for tone detection.

- Alphanumerical Dialing

When a data-terminal user uses the Alphanumeric Dialing feature to place a call, the user enters an alphanumeric name.

- Call Coverage

You cannot assign a coverage path to a hunt group that consists of data endpoints.

- Call Detail Recording (CDR)

CDR records the use of modem pools on trunk calls.

- Call Forwarding All Calls

The system uses the Call Forwarding All Calls capability to redirect data calls to a user-designated extension. The attendant or a forwarding party dials a feature access code (FAC) to activate the Call Forwarding All Calls capability.

A user can use data-terminal dialing to activate Call Forwarding All Calls for calls to a data module. If the forwarded-to endpoint is an analog endpoint, and the caller is a digital endpoint, the system activates modem pooling automatically.

- Data Hotline

Data Hotline is a security feature. The server terminates calls to a preadministered hotline. The system discards any address string and routes the call as if the users entered the hotline-destination address. This Data Hotline feature does not affect incoming calls. You cannot use the Data Hotline feature and the Default Dialing feature at the same time.

- Default Dialing

If the Default Dialing feature is active, a data-terminal user can Press **Enter** to call a preadministered destination. The data-terminal user enters a complete address to call other destinations.

- Digit Dialing

The system provides basic digit dialing through an asynchronous data module (ADM) or a 7500B data module. The user can enter digits from 0 to 9, an asterisk (*), and a pound sign (#) from a 7500 series telephone keypad or from an Electronics Industries Association (EIA) terminal interface.

- Internal Automatic Answer

Data calls are not eligible for Internal Automatic Answer.

- Modem Pooling

Modem Pooling is available on data calls. The system automatically inserts a modem if the data call needs a modem. You can use the Data Call Preindication option or the Data Origination option to indicate the need for a modem.

- Uniform Call Distribution (UCD)

UCD provides a group of data modules, or analog modems, for answering calls to a connected facility. A computer port is an example of a connected facility.

- World-Class Tone Detection

The system supports multiline data-terminal dialing, if you set the **tone-detection options** field on the **Feature-Related System-Parameters** screen to **precise**.

The message that Data Call Setup sends to users depends on the tone-detection option that you administer.

Default Dialing

Use the Default Dialing feature to provide data-terminal users who often dial the same number a very simple method to dial that number. Normal data-terminal dialing and the alphanumeric dialing features are unaffected.

Detailed description of Default Dialing

This section provides a detailed description of the Default Dialing feature.

Data terminal users use the computer keyboard to dial. With Default Dialing, a data-terminal user can place a data call to a preadministered destination by doing either of the following:

- Press **Enter** at the DIAL: prompt (for data terminals using DCP data modules).

The data-terminal user with a DCP data module can place calls to other destinations by entering the complete address after the DIAL: prompt (normal data terminal dialing or alphanumeric dialing).

- Type **d** and press **Enter** at the CMD: prompt. For data terminals that use ISDN-BRI data modules.

To place calls to other destinations, the user calls types **d**, a space, the complete address, and press **Enter** after the CMD: prompt.

Note:

DU-type hunt groups that connect the system to a terminal server on a host computer have hunt-group extensions set to no keyboard dialing.

Administering Default Dialing

This section describes the screens that you use to administer the Default Dialing feature.

Screens for administering Default Dialing

Screen name	Purpose	Fields
Data Module	Set the default dialing options.	● Special Dialing Option ● Abbreviated Dialing List ● AD Dial Code

Reports for Default Dialing

The following reports provide information about the Default Dialing feature:

- None

Considerations for Default Dialing

This section provides information about how the Default Dialing feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Default Dialing under all conditions. The following considerations apply to Default Dialing:

- None

Interactions for Default Dialing

This section provides information about how the Default Dialing feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Default Dialing in any feature configuration.

- None

Demand Print

Use the Demand Print feature to print undelivered messages.

Detailed description of Demand Print

This section provides a detailed description of the Demand Print feature.

With Demand Print, a user can dial a Feature Access Code (FAC) or press a button to print undelivered messages.

Administering Demand Print

This section describes the screens that you use to administer the Demand Print feature.

Screens for administering Demand Print

Screen name	Purpose	Fields
Feature Access Code (FAC)	Specify the FAC for Demand Print.	Print Messages Access Codes
Station (multiappearance)	Assign a print-msgs feature button for a user.	Any available field in the Feature Button Assignments area
	Assign a station security code (SCC) for a user.	Security Code

Reports for Demand Print

The following reports provide information about the Demand Print feature:

- None

Considerations for Demand Print

This section provides information about how the Demand Print feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Demand Print under all conditions. The following considerations apply to Demand Print:

- None

Interactions for Demand Print

This section provides information about how the Demand Print feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Demand Print in any feature configuration.

- None

Dial Access to Attendant

Use the Dial Access to Attendant feature to dial an attendant access code and reach an attendant.

Detailed description of Dial Access to Attendant

With the Dial Access to Attendant feature, telephone users in your system can use an attendant access code to reach an attendant. Attendants can then extend the call to a trunk, or to another telephone.

Administering Dial Access to Attendant

The following steps are part of the administration process for the Dial Access to Attendant feature:

- [Changing the attendant access code](#)

This section describes:

- Any prerequisites for administering the Dial Access to Attendant feature
- The screens that you use to administer the Dial Access to Attendant feature
- Complete administration procedures for the Dial Access to Attendant feature

Prerequisites for administering Dial Access to Attendant

You must complete the following actions before you can administer the Dial Access to Attendant feature:

- None

Screens for administering Dial Access to Attendant

Screen name	Purpose	Fields
Dial Plan Analysis Table	Change the attendant access code from the default setting of 0 .	● Dialed String ● Total Length

Changing the attendant access code

You can administer the length of the attendant access code. The attendant access code can be a 1-digit or 2-digit number. The default attendant access code is **0**.

Note:

If you have multiple locations, you can also change the attendant access code from the **Locations** screen. For more information, see the "Multi-Location Dial Plan" feature.

To change the attendant access code:

1. Type **change dialplan analysis**. Press **Enter**.

The system displays the **Dial Plan Analysis Table** screen ([Figure 163: Dial Plan Analysis Table screen](#) on page 687).

Figure 163: Dial Plan Analysis Table screen

change dialplan analysis			DIAL PLAN ANALYSIS TABLE			Page 1 of 12		
						Percent Full: 7		
Dialed String	Total Length	Call Type	Dialed String	Total Length	Call Type	Dialed String	Total Length	Call Type
00	2	attd						
1	3	dac						
2	4	ext						
3	4	ext						
3	1	aar						
4	1	ars						
4	5	ext						
5	5	ext						
5	7	ext						
6	5	ext						
7210	7	ext						
8	7	ext						
9	1	fac						
*	3	fac						
#	3	fac						

2. To assign a digit other than **0**, find **attd** in the **Call Type** column. In that row:

- Change the number in the **Dialed String** column to a unique 1-digit or a 2-digit number.
- If you changed the number in the **Dialed String** column to a 2-digit number, change the number in the **Total Length** column to **2**.

3. Press **Enter** to save your changes.

Starting with Communication Manager release 2.0, you can also enter a **fac** or **dac** entry on the **Dial Plan Analysis Table** screen to administer the attendant access code. You then enter the actual access code on the **Feature Access Codes** screen. You can administer location-specific attendant access codes on the **Locations** screen.

For more information, see the "Dial Plan" feature and the "Feature Access Code" feature.

Reports for Dial Access to Attendant

The following reports provide information about the Dial Access to Attendant feature:

- None

Considerations for Dial Access to Attendant

This section provides information about how the Dial Access to Attendant feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Dial Access to Attendant under all conditions. The following considerations apply to Dial Access to Attendant:

- None

Interactions for Dial Access to Attendant

This section provides information about how the Dial Access to Attendant feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Dial Access to Attendant in any feature configuration.

- Class of Restriction

If the Class of Restriction (COR) of a telephone restricts a user from originating calls, the user cannot call the attendant.

- Conference

If a telephone user dials the attendant access code, the attendant cannot add that user to an existing conference call.

Dial Plan

Use the Dial Plan feature to interpret the digits that a user dials. The system needs this information to properly route the call. The Dial Plan feature supports intraserver dialing for extensions that are colocated with the server, and for extensions that are spread across several locations.

Detailed Description of Dial Plan

Use the Dial Plan feature to provide the information that the software uses to interpret the digits that a user dials. The software needs this information to properly route the call. The Dial Plan feature supports intraserver dialing for extensions that are colocated with the server, and for extensions that are spread across several locations.

If you need a dial plan that supports interserver dialing, see the "Uniform Dial Plan" feature.

Dial plan information

The system supports several types of calls. You must define dial plan information for each type of call.

- Attendant
- Automatic alternate routing (AAR)
- Automatic Route Selection (ARS)
- Dial access codes (DACs), which includes feature access codes (FACs) and trunk access codes (TACs)
- Extensions
- FACs only
- Prefixed extensions

You must also define dial plan information for all calls, regardless of the type of call. You also can define information that controls the appearance of 6-digit and 7-digit extensions that the system displays for users and attendants.

If the users on your server are at several physical locations, you need to define additional dial plan information about the locations.

Multilocation dial plan

When a customer migrates from a multiple independent node network to a single distributed server whose gateways are distributed across a data network, it might appear that some dial plan functions are unavailable. For example, the multilocation dial plan preserves dial plan uniqueness for extensions and attendants that were provided in a multiple independent node network, but appear to be unavailable when customers migrate to a single distributed server.

Location prefix

The system adds the prefix assigned to the location of the user to the digits that the user dials. The server then analyzes the combined string and routes the call. The system uses several sources for the location information. The system uses the:

- Location number to which the non-IP telephones and trunks are attached for Non-IP telephones and trunks
- Information that you define for IP telephones
- Signaling group that is associated with the IP trunk or information that you define for IP trunks

Location prefix example

For example, in a department store with many locations, each location might have had its own switch with a multiple independent node network. The department store might use the same extension across all the stores for the same department. For example, the department store might always use 4567 for the luggage department. If the department store migrates to a single distributed server, a user can no longer dial 4567 to reach the luggage department in the store. The user must now dial the complete extension to connect to the luggage department, for example 123-4567.

With the multilocation dial plan the user can continue to dial 4567. The user can continue to dial 4567 because the software adds the location prefix to the digits that the user dials. The server analyzes the combined digits and routes the calls based on the dial plan that you define.

Other options for the dial plan

The **Dial Plan Parameters** screen works with the **Dial Plan Analysis Table** to define your system's dial plan.

It also controls the appearance of 6- and 7-digit extensions on station displays. 6- and 7-digit extensions may be hard to read as a block. Avaya Communication Manager allows you to select a single system-wide format for all 6-digit extensions and a format for all 7-digit extensions.

Figure 164: Dial Plan Parameters screen

change dialplan parameters	Page 1 of 1
DIAL PLAN PARAMETERS	
Local Node Number: 2	
ETA Node Number:	
ETA Routing Pattern:	
UDP Extension Search Order: local-extensions-first	
6-Digit Extension Display Format: xx.xx.xx	
7-Digit Extension Display Format: xxx-xxxx	
AAR/ARS Internal Call Prefix:	
AAR/ARS Internal Call Total Length:	

6-Digit Extension Display Format

The 6-digit extension display format determines how the system punctuates 6-digit extensions.

Valid entries	Usage
xx.xx.xx	This field can contain all 'x' characters (no punctuation) or you can use a combination of 6 'x' characters and 0-2 hyphens (-), spaces, or periods (.) to depict how 6-digit extensions will display. There must be 6 'x' characters and no more than 2 punctuation marks. You must specify a format or accept the default. You cannot leave this field blank.

7-Digit Extension Display Format

The 7-digit extension display format determines how the system punctuates 7-digit extensions.

Valid entries	Usage
xxx-xxxx	This field can contain all 'x' characters (no punctuation) or you can use a combination of 7 'x' characters and 0-1 hyphen (-), space, or period (.) to depict how 7-digit extensions will display. There must be 7 'x' characters and no more than 1 punctuation mark. You must specify a format or accept the default. You cannot leave this field blank.

AAR/ARS Internal Call Prefix

The digits entered in this field are concatenated with the calling or called extension. Appears only if, on the **System-Parameters Customer-Options** screen, the **ARS/AAR Dialing Without FAC** field is **y**. (Contact your Avaya representative to discuss the ARS/AAR Dialing Without FAC feature before enabling it.)

Valid entries	Usage
0-9 up to 8 digits, or blank	Enter a string from 1 to 8 digits long (not including * or #).

AAR/ARS Internal Call Total Length

The total length of the internal call digit string. Appears only if, on the **System-Parameters Customer-Options** screen, the **ARS/AAR Dialing Without FAC** field is **y**. (Contact your Avaya representative to discuss the ARS/AAR Dialing Without FAC feature before enabling it.)

Valid entries	Usage
6-10 or blank	Enter the total length of the internal call digit string, which includes the Internal Call Prefix and the calling or called extension.

Note:

If either the **AAR/ARS Internal Call Prefix** or the **AAR/ARS Internal Call Total Length** field is non-blank and valid, the other must also be non-blank and valid. In addition, the longest extension length on the **Dial Plan Analysis** screen, plus the length of the **ARS/AAR Internal Call Prefix**, must equal or be greater than, the **ARS/AAR Internal Call Total Length** value.

ETA Node Number

Enter the number of the destination server for Extended Trunk Access (ETA) calls. ETA calls are unrecognized numbers you can send to another switch for analysis and routing. Such numbers can be Facility Access Codes, Trunk Access Codes, or extensions that are not in the UDP table.

Valid entries	Usage
1 - 999 or blank	Enter the number of a destination server.

ETA Routing Pattern

Enter the number of the routing pattern to reach the destination server.

Valid entries	Usage
1 - 640 or blank	Avaya DEFINITY Server R, CSI, or SI.
1-999 or blank	Avaya S8300 Media Server, S8700 or S8710 IP-Connect, S8700 or S8710 Multi-Connect.

Local Node Number

Enter a number to identify a specific node in a server network. This entry must match the DCS switch node number and the CDR node number if they are specified.

Valid entries	Usage
1-63	Enter the number of a specific node in a network.
blank	The field may be left blank if automatic restoration, DCS, and CDR are not used.

UDP Extension Search Order

Appears if, on the **System-Parameters Customer-Options** screen, the **Uniform Dialing Plan** field is **y**. Specifies the first table to search to match a dialed extension. If the dialed extension is not found in the specified place, it then is searched for in the "other" place.

Valid entries	Usage
local-extensions-first	Searches the local server first to match a dialed extension; if not found, then uses the UDP tables to route the call.
udp-table-first	Searches the UDP tables for an off-switch conversion; if not found, then searches the local server for the dialed extension.

This section describes the following topics:

- [Dial Plan Analysis Table](#)
- [Dial Plan Parameters](#)
- [Multi-Location Dial Plan](#)

All feature access codes (FACs), extensions, and trunk access codes (TACs) that you assign must be consistent with the dial plan.

Dial Plan Analysis Table

The **Dial Plan Analysis Table** is the guide that the software uses to translate the digits dialed by users. This screen enables you to determine the beginning digits and total length for each type of call that Avaya Communication Manager needs to interpret.

[Figure 165: Dial Plan Analysis Table screen](#) on page 694 shows an example of a simple dial plan.

Figure 165: Dial Plan Analysis Table screen

change dialplan analysis			DIAL PLAN ANALYSIS TABLE			Page 1 of 1		
Dialed String	Total Length	Call Type	Dialed String	Total Length	Call Type	Percent Full: 9		
0	1	attd	—	—	—	—	—	—
1	3	dac	—	—	—	—	—	—
3	5	ext	—	—	—	—	—	—
4	6	ext	—	—	—	—	—	—
5	7	ext	—	—	—	—	—	—
*	3	fac	—	—	—	—	—	—
#	3	fac	—	—	—	—	—	—
—	—	—	—	—	—	—	—	—
—	—	—	—	—	—	—	—	—
—	—	—	—	—	—	—	—	—
—	—	—	—	—	—	—	—	—

Use the **Dial Plan Analysis Table** screen to define the dial plan for your system.

- **Call Type** - Indicates what the system does when a user dials the digit or digits indicated in the **Dialed String** column. The **Dial Plan Analysis Table** screen contains the following call types:

- Attendant (attd) - Defines how users call an attendant. Attendant access numbers can be any number from 0 to 9 and contain 1 or 2 digits.

In the example figure, the system calls an attendant when users dial **0**.

- Dial access code (dac) - Allows you to use trunk access codes (TAC) and feature access codes (FAC) in the same range. For example, you could define the group 100 -199, which would allow both FAC and TAC in that range. Dial access codes can start with any number from 1 to 9, * and #, and contain up to 4 digits.

In the example figure, dial access codes begin with the number **1** and are 3 digits long.

Note:

The **Dial Plan Analysis Table** screen does not allow you to enter a range specifically for trunk access codes. However, the **Trunk Group** screen still allows you to assign a TAC to a trunk group. The TAC you enter on the **Trunk Group** screen must match the format you have administered for a DAC on the **Dial Plan Analysis Table** screen.

- Extensions (ext) - Defines extension ranges that can be used on your system.

In the example figure, extensions must be in the ranges 30000-39999, 40000-49999, and 50000-59999.

- Feature access codes (fac) - FAC can be any number from 1 to 9 and contain up to 4 digits. You can use * or #, but only as a first digit.

In the example figure, feature access codes can begin with * or #, and are 3-digits long.

- **Total Length** - Indicates how long the dialed string will be for each type of call.

In the example figure, the dial plan shows that when users dial a 5-digit number that starts with **3**, they are dialing an extension.

Dial Plan Parameters

The **Dial Plan Parameters** screen works with the **Dial Plan Analysis Table** to fully define the dial plan of your system. The **Dial Plan Parameters** screen allows you to set system-wide parameters for your dial plan. The **Dial Plan Parameters** screen also controls the appearance of 6-digit and 7-digit extensions on station displays. You can select a system-wide format to display all 6-digit extensions, and a format to display all 7-digit extensions.

The following figure shows a simple **Dial Plan Parameters** screen ([Figure 166: Dial Plan Parameters screen](#) on page 695).

Figure 166: Dial Plan Parameters screen

change dialplan parameters	Page 1 of 1
DIAL PLAN PARAMETERS	
Local Node Number: 2	
ETA Node Number:	
ETA Routing Pattern:	
UDP Extension Search Order: local-extensions-first	
6-Digit Extension Display Format: xx.xx.xx	
7-Digit Extension Display Format: xxx-xxxx	
AAR/ARS Internal Call Prefix:	
AAR/ARS Internal Call Total Length:	

For more information on fields in the **Dial Plan Parameters** screen, see the *Administrator's Guide for Avaya Communication Manager*.

Multi-Location Dial Plan

When a customer migrates from a multiple independent node network to a single distributed server whose gateways are distributed across a data network, it may initially appear as if some dial plan functions are no longer available.

The multi-location dial plan feature preserves dial plan uniqueness for extensions and attendants that were provided in a multiple independent node network, but appear to be unavailable when customers migrate to a single distributed server. This feature is available beginning with Communication Manager, Release 2.0.

For example, in a department store with many locations, each location might have had its own switch with a multiple independent node network. The same extension could be used to represent a unique department in all stores (extension 4567 might be the luggage department). If the customer migrates to a single distributed server, a user could no longer dial 4567 to get the luggage department in their store. The user would have to dial the complete extension to connect to the proper department.

Instead of having to dial a complete extension, the multi-location dial plan feature allows a user to dial a shorter version of the extension. For example, a customer can continue to dial 4567 instead of having to dial 123-4567.

Communication Manager takes the location prefix and adds those digits to the front of the dialed number. The switch then analyzes the entire dialed string and routes the call based on the administration on the Dial Plan Parameters form.

Other options for Dial Plan

You can establish a dial plan so that users only need to dial one digit to reach another extension. You can also establish a dial plan that allows users to dial, for example, three digits to reach one extension, and four digits to reach another. This is particularly useful in the hospitality industry, where you want users to be able to simply dial a room number to reach another guest.

Administering Dial Plan

The following steps are part of the administration process for the Dial Plan feature:

- [Defining your dial plan](#)
- [Adding extension ranges](#)
- [Defining a multilocation dial plan](#)

This section describes:

- Any prerequisites for administering the Dial Plan feature
- The screens that you use to administer the Dial Plan feature
- Complete administration procedures for the Dial Plan feature

Prerequisites for administering Dial Plan

You must complete the following actions before you can administer the Dial Plan feature:

- None

Screens for administering Dial Plan

Screen name	Purpose	Fields
Dial Plan Analysis Table	Specify the dial plan information for each type of call.	All
Dial Plan Parameters	Specify system-wide parameters for your dial plan.	All
Locations	If you have multiple locations, provide the information about the locations.	• ARS FAC • ARS Prefix 1 Required for 10-Digit NANP Calls? • Attd FAC • Loc Number • Loc. Parm. • Name • NPA • Prefix
Optional Features	If you have multiple locations, ensure that your system is enabled to support them.	Multiple Locations

Defining your dial plan

To display your dial plan:

- 1. Type **change dialplan analysis**. Press **Enter**.

The system displays the **Dial Plan Analysis Table** screen ([Figure 167: Dial Plan Analysis Table screen](#) on page 698).

Figure 167: Dial Plan Analysis Table screen

change dialplan analysis			DIAL PLAN ANALYSIS TABLE						Page 1 of 12	
			Percent Full: 1							
Dialed String	Total Length	Call Type	Dialed String	Total Length	Call Type	Dialed String	Total Length	Call Type		
0	1	attd	—	—	—	—	—	—		
1	3	dac	—	—	—	—	—	—		
3	5	ext	—	—	—	—	—	—		
4	6	ext	—	—	—	—	—	—		
5	7	ext	—	—	—	—	—	—		
*	3	fac	—	—	—	—	—	—		
#	3	fac	—	—	—	—	—	—		
7_	3	dac_	—	—	—	—	—	—		
3_	4	ext_	—	—	—	—	—	—		
2_	2	fac_	—	—	—	—	—	—		
—	—	—	—	—	—	—	—	—		
—	—	—	—	—	—	—	—	—		
—	—	—	—	—	—	—	—	—		
—	—	—	—	—	—	—	—	—		
—	—	—	—	—	—	—	—	—		

- 2. Move the cursor to an empty row.

3. In the **Dialed String** field, type the initial digits that a user might dial.

The dialed string contains the digits that Communication Manager analyzes to determine how to process the call. This field allows you to enter up to four digits, so you can allocate blocks of 1000 numbers even when using a 7-digit dial plan.

Valid entries	Usage
0-9, * and #	Enter any combination of 1 to 4 digits. the following restrictions apply: • The digits * and # may only be used as first digits, and only for the Call Types fac and dac. • For Call Type attd, if the Total Length is 2, the Dialed String must be 2 digits long. • Two Dial Plan entries can use the same Dialed String only if the Dialed String is 1 digit long. Longer Dialed Strings must all be unique. • A new entry cannot be administered if it causes an existing extension, feature access code, or trunk access code to become inaccessible.

4. In the **Total Length** field, type the total number of digits that a user might dial for this dialed string.

Valid entries	Usage
1-2 for attd 1-4 for dac 1-4 for fac 1-7 for ext 2-6 for pext	Enter the number of digits for this call type. The allowed length varies by call type. This must be greater than or equal to the number of digits in the Dialed String.

5. In the **Call Type** field, type the name of the call type for this dialed string.

Valid entries	Usage
aar	Automatic Alternate Routing. The system uses this call type to route calls within your company over your own private network. In order to use this code in your dial plan, the ARS/AAR Dialing without FAC feature must be enabled on the System Parameters Customer Options screen. (Contact your Avaya representative to discuss the ARS/AAR Dialing Without FAC feature before enabling it.) When dialing digits of Call Type aar, as soon as the dialed digits have reached the administered length, the digits are treated as if an AAR feature access code (FAC) was dialed. Control is transferred and the digits are routed according to the AAR Analysis and Digit Conversion forms. In the example shown on the Dial Plan Analysis Table on page 694, extensions of 3xxx cannot be dialed directly. Whenever a user dials the first digit of 3, the system immediately interprets the dialed string as an AAR string and transfers control to AAR. Extensions of 3xxx can only be accessed using AAR Digit Conversion. That is, you must dial a longer AAR number from which AAR Digit Conversion deletes leading digits to form a number of the form 3xxx.
ars	Automatic Route Selection. The system uses this call type to route calls that go outside your company over public networks. ARS is also used to route calls to remote company locations if you do not have a private network. In order to use this code in your dial plan, the ARS/AAR Dialing without FAC feature must be enabled on the System Parameters Customer Options screen. (Contact your Avaya representative to discuss the ARS/AAR Dialing Without FAC feature before enabling it.) When dialing digits of Call Type ars, as soon as the dialed digits have reached the administered length, the digits are treated as if an ARS feature access code (FAC) was dialed. Control is transferred and the digits are routed according to the ARS Analysis and Digit Conversion forms. In the example shown on the Dial Plan Analysis Table on page 694, extensions of 4xxxx cannot be dialed directly. Whenever a user dials the first digit of 4, the system immediately interprets the dialed string as an ARS string and transfers control to ARS. Extensions of 4xxxx can only be accessed using ARS Digit Conversion. That is, you must dial a longer ARS number from which ARS Digit Conversion deletes leading digits to form a number of the form 4xxxx.
attd	Attendant. The system uses this call type to define how users call an attendant. Attendant access numbers can start with any number from 0 - 9 and contain 1 or 2 digits. If a telephone's COR restricts the user from originating calls, this user cannot access the attendant using this code. Beginning with the November 2003 release of Communication Manager (2.0), you can also administer the attendant access code by entering an appropriate fac or dac entry on the Dial Plan Analysis screen, and then entering the actual access code on the Feature Access Codes screen. Location-specific attendant access codes can be administered on the Locations screen.

Valid entries	Usage
dac	Dial Access Code. The system uses this call type to allow you to use both trunk access codes (TAC) and feature access codes (FAC) in the same range. Dial access codes can start with any number from 0-9, * or # and can contain up to 4 digits. If an extension entry and a DAC entry have the same Dialed String, the extension entry can be longer than the DAC entry only if all of the trunk groups covered by that DAC entry have Dial Access on the Trunk Group screen set to "no." You can use the DAC to activate or deactivate a Communication Manager feature or to seize a trunk from a trunk group, or both. In the first case, the DAC functions as a FAC, in the second as a TAC. For example, you can define the group 300-399 for dial access codes, and allow both FAC and TAC in that range. You can use 4-digit DACs for ordinary trunk access, but they do not work for attendant control of trunk groups, trunk-ID buttons, or DCS, and only the last 3 digits of the codes can be recorded in CDR records. See also the description below for fac.
ext	Primary extension. The system uses this call type to define extension ranges that can be used on your system. Extension can have a first digit of 0 through 9 and can be 1 - 7 digits in length. Extension cannot have the same first digit as a 1-digit ARS or AAR feature access code (FAC). When a dial plan has mixed station numbering, extensions of various lengths (all with the same first digit) are mapped on the Dial Plan Analysis table. The system then employs an inter-digit time-out to ensure that all dialed digits are collected.
fac	Feature access code. The system uses this call type to define feature access codes only. A FAC can be any number from 1-9 and contain up to 4 digits. You can also use * or #, but only as a first digit. Avaya recommends that a FAC have the longest total length for a given dialed string when using mixed numbering. Otherwise, problems may occur when, for example, 3-digit FACs and 4-digit extensions begin with the same first digit and the FAC is an abbreviated dialing list access code. However, if the entry in the dial plan that defines the FAC is used to define the AAR or ARS access code, then it <i>must</i> have the longest total length in the dial plan.
pext	Prefixed extension. The system uses this call type to define prefixed extensions. A prefixed extension is made up of a prefix (first digit) that can be a 0-9 (* and # not allowed), and an extension number of up to 5 digits in length. The maximum length of a prefix and extension combination is 6 digits. You cannot administer a dial access code with the same first digit as a prefixed extension. The purpose of the prefix is to identify the call type as an extension. After digit collection, the prefix digit is removed from the string of dialed digits. The remaining digits (extension number) are then processed. A prefixed extension allows the use of extensions numbers with any dialed string (the extension length must be specified on the table). The "prefixed extension" cannot have the same dialed string as the ARS or AAR facility access code (FAC).

Note:

The **Percent Full** field displays the percentage (0 to 100) of the system's memory resources that have been allocated for the dial plan that are currently being used.

6. Press **Enter** to save your changes.

Adding extension ranges

Before you assign a telephone to an extension, the extension must belong to a range that is defined in the dial plan. In this example, you are adding a new set of extensions that start with 3, and are 4 digits long (3000-3999).

To add this set of extensions to the dial plan:

1. Type **change dialplan analysis**. Press **Enter**.

The system displays the **Dial Plan Analysis Table** screen [Figure 167: Dial Plan Analysis Table screen](#) on page 698.

2. Move the cursor to an empty row.
3. In the **Dialed String** column, type **3**. Press **Tab** to move to the next field.
4. In the **Total Length** column, type **4**. Press **Tab** to move to the next field.
5. In the **Call Type** column, type **ext**.
6. Press **Enter** to save your changes.

Defining a multilocation dial plan

Prerequisites

- On the **Optional Features** screen, ensure that the **Multiple Locations** field is set to **y**. If this field is not set to **y**, you cannot administer the Multi-Location Dial Plan feature. Contact your Avaya representative for assistance.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Reports for Dial Plan

The following reports provide information about the Dial Plan feature.

- None

Considerations for Dial Plan

This section provides information about how the Dial Plan feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Dial Plan feature under all conditions:

- You cannot assign prefixed extensions longer than five digits (including prefix) to intercom lists.
- A TAC and an extension can share a first digit only if the extension is shorter than the TAC.
- Although extensions with the same first digit can have different lengths, data-channel extensions must have the maximum number of digits to avoid timeout problems for data calls that Communication Manager automatically sets up, for example, the **CDR** link.
- An extension and a FAC can share the same first digit only if the extension is longer as long as they are not used for **AAR/ARS** faxes. These extensions work only within Communication Manager; they do not work as remote **UDP** extensions.
- When you design your dial plan or add new information to your dial plan, be careful if you assign the same first digit to more than one FAC. Your system may need to distinguish between FACs with the same first digit by using the **Short Interdigit Timer** field on the **Feature Related System Parameters** screen.

Interactions for Dial Plan

This section provides information about how the Dial Plan feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of the Dial Plan feature in any feature configuration.

- **Attendant Display and Telephone (Voice Terminal) Display**

Prefixed extensions display without the prefix. The return call button causes the prefix to dial, even though it does not display.

- **Integrated Services Digital Network-Basic Rate Interface (ISDN-BRI)**

When an ISDN-BRI station dials sufficient digits to route a call, but the call could route differently if additional digits were dialed, the station does not recognize the Conference or Transfer buttons. The user must delay dialing for 3 seconds or dial # to indicate that the call can be routed based on the digits already dialed. The Conference or Transfer buttons then are recognized and Communication Manager completes the operation.

- **Multifrequency (MF) Signaling**

Flexible numbering is supported in countries using R2-MFC trunk signaling without Group II tones. Different-length extensions can exist as long as the extensions have different first digits.

- **Property Management System (PMS)**

PMS products accept only extensions of 5 digits or shorter. Therefore, a customer using PMS cannot use 6/7-digit extensions.

- **Uniform Dial Plan**

The following limitations apply to a **DCS** environment:

- Extensions that differ in length from the **UDP** do not distribute to other media servers or switches.
- You can use only a single length in your UDP.

- **Single-Digit Dialing**

- A prefixed extension is still made up of a prefix and an extension of up to five digits.
- Mixed station numbering extensions can have 1 - 7 digits.

The following are the interactions for Multi-location Dial Plan.

- **Attendant**

This feature provides a way to administer multiple attendant codes. This does not provide a way to administer multiple attendant groups. Only one attendant group is allowed per switch, unless you have attendant partitioning. This feature does provide a way to support multiple local centralized answering points. The LCAPs do not utilize attendant groups to support this.

- Attendant Vectoring

If attendant vectoring is enabled, it will take precedence over any local attendant codes administered. This is how attendant vectoring currently works. Attendant seeking or "dial 0" calls (local attendant codes, attendant code on the dial plan screen or attendant access code on the **Feature Access Code (FAC)** screen) are processed using call vectors and not using the normal attendant console call routing.

- Automatic Circuit Assurance

The field **ACA Referral Destination** on page 1 of the **System Features Parameters** screen requires either the **attd** administration on the **Dial Plan Analysis Table** screen, or administration of the attendant access code on the **Feature Access Code (FAC)** screen. This field requires that an attendant group exists.

- Automatic Wakeup

If a station has automatic wakeup requests pending when the **change extension-station** command is run, the wakeup requests are canceled.

- Call Forwarding

Any call forwarding information stored with an extension is lost when using the **change extension-station** command. If the station that is changed with the **change extension-station** command is a forwarded-to station, the extension using that forwarded-to extension must be manually updated. If not, calls are not forward correctly.

- Call Park

This feature does not support common shared extensions on the console parameter to park calls. Since common shared extensions are not assigned to physical stations, the range of common shared extensions should be able to be shared in all locations.

- Crisis Alert

The **Originating Extension** on the **Crisis Alert System Parameters** screen is not updated by the **change extension-station** command. It must be manually updated if the originating extension field was changed.

- Leave Word Calling (LWC)

The field **Stations with System-wide Retrieval Permission for the Leave Word Calling Parameters** on page 2 of the **System Features Parameters** screen require either the **attd** administration on The **Dial Plan Analysis Table** screen, or administration of the **Attendant Access Code** on the **Feature Access Code (FAC)** screen. This field requires that an attendant group exists.

- LSP

If the **change extension-station** command is run on the controller, but the translations are not also saved to the Local Spare Processor (LSP), the two system translations might not be synchronized.

- Night Service

Location-based Night Service is not supported. A customer may want to restrict attendant-seeking calls to attendants who are local to the calling party. The reason is the local attendant would most likely speak the same language as the caller. Those customers would want an attendant to be able to put one location only into Night Service, without putting the entire switch into Night Service.

One way to accomplish this is to use hunt groups as attendant queues. Each hunt group can be put into Night Service separately, and have its own Night Service destination. In addition, the Night Service destination can be administered by tenant, by trunk group, and by trunk group number.

- Station Hunting

Changing a station extension with the **change extension-station** command maintains the station hunting chain.

- Survivable Remote EPN/WAN Spare Processor

If an administrator runs the **change extension-station** command in a configuration where a survivable remote processor exists, and the command is not run on the survivable processor, when the remote processor takes control, the extensions that were changed on the server will not exist on the survivable remote.

- Uniform dial plan (UDP)

If an administrator runs the **change extension-station** command, extensions that were typed into the **UDP** screen are not updated. The change to the UDP table is handled by external system management tools that Avaya supports, but it is not changed by this command.

Distinctive Ringing

Use the Distinctive Ringing feature to distinguish between incoming call types based on the ringing pattern of the call.

Detailed description of Distinctive Ringing

This section provides a detailed description of the Distinctive Ringing feature.

For multiappearance telephones, you can administer the system-wide distinctive-ringing cycles. You cannot administer system-wide distinctive-ringing cycles for single-line analog telephones. For single-line analog telephones, you must administer the ringing cycle for the user on a **Station** screen. For more information, see the "Personalized Ringing" feature.

Most installations use a one-burst ring for internal calls, a two-burst ring for external calls, and a three-burst ring for priority calls.

The system controls the ringing cycles for the following types of calls. You can administer ringing for:

- Automatic and Dial Intercom calls
- Manual Signaling calls
- Redirect Notification calls

If the user of an internal telephone transfers an external call, the call usually rings as an internal call. You can administer the system so that the transferred call rings as an external call.

Administering Distinctive Ringing

The following steps are part of the administration process for the Distinctive Ringing feature:

- [Defining Distinctive Ringing](#)

This section describes:

- Any prerequisites for administering the Distinctive Ringing feature
- The screens that you use to administer the Distinctive Ringing feature
- Complete administration procedures for the Distinctive Ringing feature

Prerequisites for administering Distinctive Ringing

You must complete the following actions before you can administer the Distinctive Ringing feature:

- None

Screens for administering Distinctive Ringing

Screen name	Purpose	Fields
Feature-Related System Parameters	Assign the number of rings for a priority call.	Distinctive Audible Alerting - internal, external
	Change the ringing pattern for an internal call to the ringing pattern of an external call, when a user or an attendant transfers the internal call.	Update Transferred Ring Pattern?

Defining Distinctive Ringing

To define Distinctive Ringing:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen.
2. Click **Next** until you see the **Distinctive Audible Alerting** area
([Figure 168: Feature-Related System Parameters screen](#) on page 709).

Figure 168: Feature-Related System Parameters screen

display system-parameters features		Page 5 of 14
FEATURE-RELATED SYSTEM PARAMETERS		
Public Network Trunks on Conference Call: 5	Auto Start? n	
Conference Parties with Public Network Trunks: 6	Auto Hold? y	
Conference Parties without Public Network Trunks: 6	Attendant Tone? y	
Night Service Disconnect Timer (seconds): 180	Bridging Tone? n	
Short Interdigit Timer (seconds): 3	Conference Tone? n	
Unanswered DID Call Timer (seconds):	Intrusion Tone? n	
Line Intercept Tone Timer (seconds): 30	Special Dial Tone? n	
Long Hold Recall Timer (seconds): 0	Mode Code Interface? y	
Reset Shift Timer (seconds): 0		
Station Call Transfer Recall Timer (seconds): 0		
DID Busy Treatment: tone		
Invalid Number Dialed Intercept Treatment: tone		
Allow AAR/ARS Access from DID/DIOD? n		
Allow ANI Restriction on AAR/ARS? n		
Use Trunk COR for Outgoing Trunk Disconnect? n		
7405ND Numeric Terminal Display? n	7434ND? y	
DISTINCTIVE AUDIBLE ALERTING		
Internal: 1	External: 2	Priority: 3
Attendant Originated Calls: external		
DTMF Tone Feedback Signal to VRU - Connection:	Disconnection:	

3. In the **Distinctive Audible Alerting** area, perform the following actions:

- Type **internal** next to the number of rings that you want the system to use for an internal call.
- Type **external** next to the number of rings that you want the system to use for an external call.

4. Click **Next** until you see the **Update Transferred Ring Pattern?** field
([Figure 169: Feature-Related System Parameters screen](#) on page 710).

Figure 169: Feature-Related System Parameters screen

change system-parameters features
page 9

FEATURE-RELATED SYSTEM PARAMETERS

Pull Transfer: n	Update Transferred Ring Pattern? n
Outpulse Without Tone? y	Wait Answer Supervision Timer? n
Misoperation Alerting? n	Repetitive Call Waiting Tone? y
Allow Conference via Flash? y	Repetitive Call Waiting Interval (sec): _
Vector Disconnect Timer (min): _	Network Feedback During Tone Detection? y
Hear Zip Tone Following VOA? y	System Updates Time On Station Displays? n
Intercept Treatment On Failed Trunk Transfers? n	
Station Tone Forward Disconnect: silence	
Level Of Tone Detection: precise	
Charge Display Update Frequency (seconds): 30	
Date Format on 607/2420/4600/6400 Terminals: mm/dd/yy	
On-hook Dialing on 607/2420/4600/6400/8400 Terminals? n	

ITALIAN DCS PROTOCOL

Italian Protocol Enabled? y	
Apply Intercept Locally? _	Enforce PNT-to-PNT Restrictions? _

5. In the **Update Transferred Ring Pattern?** field, perform one of the following actions:

- If you want the system to change the ringing pattern for an internal call to the ringing pattern of an external call, when a user or an attendant transfers the call, type **y**.

If most of your calls go through an attendant, you might want to set this field to **y** so that your users can identify an external call.

- If you do not want the system to change the ringing pattern for an internal call to the ringing pattern of an external call, when a user or an attendant transfers the call, type **n**.

6. Press **Enter** to save your changes.

Reports for Distinctive Ringing

The following reports provide information about the Distinctive Ringing feature:

- None

Considerations for Distinctive Ringing

This section provides information about how the Distinctive Ringing feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Distinctive Ringing under all conditions. The following considerations apply to Distinctive Ringing:

- If Distinctive Ringing is disabled, the system generates a one-burst repetitive tone for all incoming calls. The one-burst repetitive tone is useful for equipment that is interfaced by analog lines, especially if you use an off-premises telephone. A single distinctive ring cycle is used for each new incoming call to an off-hook telephone or headset. The system alerts a Callmaster® terminal with a single ring cycle whenever either the headset or the handset is plugged into the headset jack.

Interactions for Distinctive Ringing

This section provides information about how the Distinctive Ringing feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Distinctive Ringing in any feature configuration.

- Personalized Ringing

The called party hears the user-selected ringing pattern for the distinctive ring cycles.

Enhanced 911

Use the Enhanced 911 (E911) feature to quickly access your local public safety agency. The public safety agency can dispatch the appropriate response team in cases of a:

- Fire
- Accident
- Crime
- Medical emergency

Detailed description of Enhanced 911

This section provides a detailed description of the Enhanced 911 (E911) feature.

A caller who needs emergency assistance dials one of the following Universal Emergency Numbers (UENs):

- 911 in the United States
- 000 in Australia
- 112 in the European community

The system routes the call through a local central office (CO), through an emergency tandem office, to the appropriate public safety answer point (PSAP). The PSAP answers the call.

A tandem office can route the call to a PSAP in surrounding areas. In the United States, a tandem office can route the call to nearby area codes. If the PSAP that receives the call is not the correct PSAP to handle the emergency, the PSAP transfers the call to the correct PSAP. Transfers can only occur between geographically adjacent or nearby PSAPs.

Each PSAP usually covers one city, or one rural county or community. At the PSAP, emergency operators determine the nature of the emergency, and contact the appropriate response agency. In the United States, a PSAP is usually responsible for an area that covers several independent police and fire departments.

With E911, the system sends the call and the Calling Party Number (CPN) over Centralized Automatic Message Accounting (CAMA) trunks. The system can also send the call and the CPN through the calling number information element (IE) over Integrated Services Digital Network (ISDN) trunks.

To learn how CAMA and ISDN trunks translate an extension to the PSAP, see the *Administrator's Guide for Avaya Communication Manager*.

The public emergency system maintains a database that stores location and background information to help public safety agencies respond quickly with the appropriate assistance. The PSAP uses the CPN or the Caller Emergency Service Identification (CESID) number to look up the street address of the caller. The PSAP uses an Automatic Location Information (ALI) database. The ALI database is usually owned and managed by local exchange carriers (LEC). Instead of a LEC, customers can also contract with a third party to update the ALI database for them.

The E911 feature does not provide PSAP with the location of the person who placed the emergency call if the call came from a telephone that is on:

- A system that is not equipped with CAMA or ISDN trunks
- An adjunct computer system that is associated with CAMA or ISDN trunks

Instead, the E911 system identifies only the location of the trunk termination.

To solve this problem, you can report the emergency location extension as the CPN. After someone moves a telephone, you can manually correlate the CPN with the new telephone location. You can also purchase an adjunct that performs this correlation and update for you. You do not have to update the ALI database for the public switched telephone network (PSTN) after each telephone move.

The E911 feature transmits the extension of a direct inward dialing (DID) telephone that is associated with the calling party. The E911 feature transmits either:

- CESID over CAMA trunks
- CPN over ISDN trunks

The calling party might be at or near a telephone on a remote port network. The calling party might also be at a remote location that is served by an off-premises telephone.



Important:

If you use the digit **9** on the **Dialplan Analysis Table** screen as the ARS access code, also administer the dial string **11** as either an **emer** or **alrt** number. That way, when a user dials **911**, the digit **9** provides an outside line, and the digits **11** indicate an emergency or crisis alert call.

For Avaya IP Softphone, if the **Remote Softphone Emergency Calls** field on the **Station** screen is set to **as-on-local**, the system processes information based on certain criteria. For more information on what the system does when the **Remote Softphone Emergency Calls** field is set to **as-on-local**, see the *Administrator's Guide for Avaya Communication Manager*.

Enhanced 911 supports the following capabilities:

- [Configurations with media gateways in different locations](#)
- [Location Specific Routing](#)
- [E911 for wired IP telephones](#)
- [Crisis Alert](#)

Configurations with media gateways in different locations

Media gateways in different locations might have a different PSAP than the PSAP of the main server. You must ensure that the system correctly routes emergency calls that are made from telephones that are registered to each gateway to the correct PSAP.

To ensure that a media gateway in a separate location can route emergency calls properly, the system requires a CO trunk, a CAMA trunk, or a Primary Rate Interface (PRI) trunk from the gateway to the LEC. You must administer each media gateway that is in a different PSAP jurisdiction than the main server in a separate location. This separate administration ensures that the system can route emergency calls from that location. If a media gateway is in the same PSAP jurisdiction as the main server, you do not need to administer the media gateway in a separate location.

Location Specific Routing

In a configuration with one location, the system routes all outgoing calls to the PSTN according to the Automatic Route Selection (ARS) table for location 1. If media gateways are in different locations, you must administer Location Specific Routing for each location.

If a media gateway is in a separate location from the main server, you can administer the media gateway in locations for Linux and Avaya DEFINITY servers. For mor information, see the *Capacities Table*.

The command for Location Specific Routing is **change ars analysis location X 0**, where **X** is the chosen location (2 to 64 or 2 to 44), and **0** is the first placeholder in the analysis table. Once the system displays the table, enter the routing information:

- Chosen dialed string (for example, 911)
- Minimum and maximum number of digits
- Route pattern
- Call type

You must also set up the required route pattern information. When you complete this administration, the system routes emergency calls from the location over a CO trunk, a CAMA trunk, or a PRI trunk to the LEC.

1. If a media gateway is connected to the LEC over a CO trunk, the extension of the CO trunk identifies the gateway service address. The service address is the physical location that the PSAP sees. Calls from any telephone that is registered to the gateway display the CO trunk extension to the PSAP. The PSAP then sends the emergency response to the service address.

Use the CO trunk to send and receive emergency calls only. You must verify with the LEC that the extension of the CO trunk is in the PSAP database so that all emergency help is sent to the correct location.

2. If a media gateway is connected to the LEC over a PRI trunk, the system sends an extension to the PSAP based upon how Communication Manager is administered. You must verify with the LEC that all the extensions are in the PSAP database. For more information, see the *Administrator's Guide for Avaya Communication Manager*.
3. If you use DID numbers from the main server to administer the extensions at the gateway, the numbers that are used at the media gateway must be moved to the CO where the 911 calls terminate. If the numbers are not moved, emergency help is sent to the main server location and not to the media gateway location.

If the main server and the media gateway are in different LEC jurisdictions:

- If you use a CO trunk from the gateway to the central office, follow the procedure as previously described in Step [1](#). Ensure that the correct extension is in the PSAP database for the CO trunk. All calls that are made from the gateway use this extension. Also ensure that the correct street address is in the PSAP database for the CO trunk. All calls that are made from the gateway use this street address.
- If you use a PRI trunk, you can purchase a block of DID extensions from the LEC for your gateway telephones. You can shorten the gateway extensions for private calls within your system. For example, you can shorten extension 765-4321 to 4321.

When the system calls the PSTN, you must use the complete extension so that the number is recognized at the PSAP. For example, the system must send extension 765-4321 to the PSAP. The PSAP does not recognize extension 4321. Some PSAPs require a 10-digit number.

These two scenarios apply to each media gateway that is in a separate location. You must repeat each applicable procedure for each media gateway that is connected to a server with a unique PSAP. You must also repeat this procedure for each media gateway that is in its own location.

You can use the same Location Specific Routing tables and trunks for:

- Media gateways that are in the same location as the main system
- Multiple media gateways that are in the same location

Contact your Avaya representative if you have questions about these procedures or scenarios.

E911 for wired IP telephones

Important:

When someone dials an emergency number from an Avaya IP telephone, the emergency call reaches the local emergency service in the PSAP only when the telephone system has local trunks. If someone dials an emergency number from a remote location that does not have local trunks, an Avaya IP telephone cannot dial to and connect with local emergency services.

To avoid possible delays in getting emergency aid, *do not use an Avaya IP telephone to dial emergency numbers from a remote location*. Avaya is not responsible or liable for any damages that might result from misplaced emergency calls that someone makes from an Avaya IP telephone.

Your use of Communication Manager indicates that you have read this advisory. You further agree to use an alternative telephone to dial all emergency calls from remote locations. Contact your Avaya representative if you have questions about emergency calls from an IP telephone.

When someone dials an emergency number from a wired IP telephone, the system assigns an Emergency Location Information Number (ELIN) through an IP subnetwork. The system then sends the ELIN over either CAMA or ISDN PRI trunks to the emergency services network. To use this capability, you must have subnetworks that correspond to geographical areas.

The E911 for wired IP telephones capability works with two types of IP protocols:

- H.323
- SIP

If someone dials an emergency number from a wired IP telephone, the system at the PSAP uses the CPN to look up the physical location of the caller. However, the CPN might not always correspond to the physical location of the caller, because users with:

- H.323 IP telephones can move the telephones without notifying the system administrator
- SIP IP telephones can use the same extension simultaneously at several different telephones

Without the E911 for wired IP telephones capability, the emergency response personnel might go to the wrong physical location. With the E911 for wired IP telephones capability, the system properly identifies the location of the caller. The emergency response personnel can go to the correct physical location, even if an emergency call comes from a bridged call appearance.

When someone uses an IP telephone to dial an emergency number, the software compares the following two values for that IP telephone:

- The **Emergency Location Extension** field on the **IP Address Mapping** screen
- The **Emergency Location Ext** field on the **Station** screen
 - If the two values are the same, the telephone most likely did not move. If the telephone did move, the telephone moved within the same subnetwork.
 - If the two values are different, and if the **Emergency Location Extension** on the **IP Address Mapping** screen is not blank, the telephone moved from one subnetwork to another.
 - If the **Emergency Location Extension** on the **IP Address Mapping** screen is blank, the administrator expects the caller to be located outside the LAN. This situation is true for a softphone.

Whenever you add an extension as an **Emergency Location Extension** to the **IP Address Mapping** screen, check all **Station** screens for telephones in that IP address range.

- If the telephone is a DID number, ensure that the **Emergency Location Extension** is the same on both the **Station** screen and the **IP Address Mapping** screen.
- If the telephone is not a DID number, ensure that the **Emergency Location Extension** on the **Station** screen is different from the **Emergency Location Extension** on the **IP Address Mapping** screen.

Emergency Extension Forwarding

If an emergency call is dropped, the public safety personnel immediately attempt to call back. If the ELIN that was sent is not equivalent to the extension number of the caller, the return call rings at a different telephone. To overcome this situation, you can, for an administered period of time, automatically forward all calls to the telephone that placed the emergency call.

Use the **Emergency Extension Forwarding (min)** field on the **Feature-Related System Parameters** screen to set the Emergency Extension Forwarding timer for all incoming trunk calls if an emergency call is dropped.

This Emergency Extension Forwarding applies only if the **Emergency Location Extension** is an extension on the same system as the extension from which 911 was dialed. Customers who have several systems in a campus should assign several emergency location extensions.

Call Forwarding of dropped emergency calls

In this scenario, an IP telephone and a nearby media gateway that provides a connection to the PSTN are both registered to a primary server. The media gateway is backed up by an LSP, and the IP telephone has some LSPs in its alternate gatekeeper list. The IP telephone dials 911, and then the LAN crashes and partially recovers.

If both the IP telephone and the media gateway can reregister to the primary server, no problem exists. Also, if both the IP telephone and the media gateway are forced to register with the same LSP, no problem exists.

However, if the IP telephone or the media gateway re-registers to an LSP and the other re-registers to the primary server, or if the IP telephone and the media gateway re-register to different LSPs, a minor problem exists.

When the emergency response personnel call back, the server that the media gateway is registered with determines that the IP telephone is unregistered. The server cannot forward the return call to the IP telephone. Instead, the server attempts to forward the call to a telephone that is equivalent to the sent ELIN.

Even with automatic Emergency Return Call Forwarding, select the **Emergency Location Extension** that is administered in the **ip-network-map** screen as follows:

- On media gateways that have incoming PSTN trunks
- On the same media gateway as the telephones that the media gateway covers, assuming that the media gateway has incoming PSTN trunks

Crisis Alert

The Crisis Alert capability notifies the attendant, up to 10 other designated users, or a digital pager when someone dials an emergency number. Designated users might include:

- Security guards
- Receptionists
- Secretaries
- Front office personnel
- Human resources personnel

If a person dials an emergency number, the attendant or other designated users might want to know who made the call so that they can direct the emergency personnel to the right place.

When a user dials an emergency number, the system sends both an audible alert and a visual alert to the attendant console and the telephone of the designated user.

- The audible alert is a siren alarm.
- The visual alert is a flashing **crss-alert** button. The system also displays the name and the extension of the caller.

If a user, John Doe at extension 3041, dialed an emergency number, the following information appears on the display of attendant consoles and digital telephones that have a **crss-alert** button:

EM=JOHN DOE 3041 EM

Cancelling an alert

To cancel the alert, you can administer the system so that only one notified user must acknowledge the alert, or all notified users must acknowledge the alert.

To cancel an emergency alert, an attendant must press the **crss-alert** button on the attendant console three times:

- The first press turns off the siren alarm.
- The second press stops the **crss-alert** lamp from flashing.
- The third press clears the display.

Digital telephone users must press the **crss-alert** button on the telephone to cancel the emergency alert.

- If only one user must acknowledge the alarm, the siren alarm stops at all telephones.
- If all administered users must acknowledge the alarm, the alarm continues at each telephone until the user of that telephone presses the **crss-alert** button. Once all administered users acknowledge the alarm, the siren alarm stops.
- The name and the extension of the person who dialed the emergency number remains on the telephone display. To completely cancel an alert and clear the display, each administered user must press the **normal** button.

If someone makes an emergency call while another crisis alert is still active, the second emergency call is placed in a queue. If you administer the system so that:

- All users must acknowledge the alert, all users must acknowledge all emergency calls. The calls might not appear in the queue in the order that the calls were made.
- Only one user must acknowledge the alert, the first alert remains active at the telephone from where the alert was acknowledged. Any subsequent calls are queued to the next available telephone, in the order that the calls were made.

Once you administer the Crisis Alert capability, the system continues to record each emergency call. The system also sends a record to the system printer, if a system printer is available. If a system printer is not available, you can type **list emergency** to view the **Emergency Access Calls** report.

Administering Enhanced 911

In this example, you administer your system to notify the attendant, plus the security guard at three entrances. All three guards and the attendant must acknowledge the alarm to stop the alarm.

The following steps are part of the administration process for the Enhanced 911 feature:

- [Setting up Crisis Alert to an attendant or a display telephone](#)
- [Setting up Crisis Alert to notify a digital pager](#)
- [Setting up emergency extension forwarding](#)
- [Setting up CAMA numbering](#)

This section describes:

- Any prerequisites for administering the Enhanced 911 feature
- The screens that you use to administer the Enhanced 911 feature
- Complete administration procedures for the Enhanced 911 feature

Prerequisites for administering Enhanced 911

You must complete the following actions before you can administer the Enhanced 911 feature:

- Set up calling party restrictions on the **Class of Restriction** screen. For information on how to set up a Class of Restriction (COR), see the "Class of Restriction" feature.
- Set up ARS access codes on the **Feature Access Code (FAC)** screen. For information on how to set up a FAC, see the "Feature Access Code" feature.
- Set up all telephone route patterns on the **Route Pattern** screen. For information on how to set up a route pattern, see the "Uniform Dial Plan" feature.

Screens for administering Enhanced 911

Screen name	Purpose	Fields
ARS Digit Analysis Table	Set up an emergency number that users dial to access emergency services.	All
Attendant Console	Notify the attendant when someone dials the emergency number.	Any available button field in the Feature Button Assignments area.
CAMA Numbering - E911 Format	Format CAMA trunks for dialing.	All
Class of Restriction	Ensure that calling party restrictions are set up on your system.	Calling Party Restriction

Screen name	Purpose	Fields
Crisis Alert System Parameters	Force all users who have a crss-alert button on the telephone to acknowledge a crisis alert.	Every User Responds
	Administer the Crisis Alert capability to send an alert to a digital pager.	All fields in the Alert Pager area
Feature Access Code (FAC)	Ensure that FACs for ARS access codes are set up on your system.	● ARS Access Code 1 ● ARS Access Code 2
Feature-Related System Parameters	Set the timer to forward all incoming trunk calls in an emergency.	Emergency Extension Forwarding (min)
Optional Features	Ensure that your system is set up to handle Automatic Route Selection (ARS) routing and digit analysis.	ARS
Route Pattern	Ensure that you have set up route patterns on your system.	All
Station	Notify another user when someone dials the emergency number.	Any available button field in the Button Assignments area.
	Determine when to use the extension as E911 CPN.	● Remote Softphone Emergency Calls ● Emergency Location Ext ● Always Use

Setting up Crisis Alert to an attendant or a display telephone

To activate the Crisis Alert feature, you must complete the following procedures:

- [Setting up the emergency number](#)
- [Setting up the attendant console to receive emergency notification](#)
- [Setting up digital telephones to receive emergency notification](#)
- [Setting which users must acknowledge the emergency alert](#)

Setting up the emergency number

Prerequisites

You must complete the following actions before you can set up the emergency number:

- On the **Optional Features** screen, ensure that the **ARS** field is set to **y**. If this field is set to **n**, your system is not set up for the Enhanced 911 feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

To set up the emergency number:

- Type **change ars analysis n**, where **n** is the number of the ARS table that you want to change. Press **Enter**.

The system displays the **ARS Digit Analysis Table** screen ([Figure 170: ARS Digit Analysis Table screen](#) on page 723).

Figure 170: ARS Digit Analysis Table screen

change ars analysis 5
Page 1 of 2

ARS DIGIT ANALYSIS TABLE
 Location: all Percent Full: 6

Dialed String	Total Min Max	Route Pattern	Call Type	Node Num	ANI Reqd
911	3 3	1	alrt	__	n
11 _____	2_ 2_	1__	alrt	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n
_____	__ __	__	__	__	n

- In the **Dialed String** field, type the number that users dial to reach emergency services. In this example, type **911**.

3. In the **Total Min** and **Total Max** fields, type the number of digits that you typed in the **Dialed String** field.

In this example, type **3**. The user must dial all 3 digits in the **Dialed String** field for the system to treat the call as an emergency call.

4. In the **Route Pattern** field, type the number of the route pattern for local calls.

In this example, type **1**.

5. In the **Call Type** field, type **emer** or **alrt**.

- **emer** identifies the number in the **Dialed String** field as an emergency call.
- **alrt** ensures that the number in the **Dialed String** field activates emergency alert notification.

6. Press **Enter** to save your changes.

Setting up the attendant console to receive emergency notification

When Crisis Alerting is active at the attendant console, the console is in position-busy mode. No other incoming calls interfere with the emergency call, but the console can still originate calls. The attendant must press the **position-busy** button to unbusy the console. The attendant must then press the **crss-alert** button to deactivate the audible and the visual alerts.

To set up the attendant console to receive emergency notification:

1. Type **change attendant *n***, where *n* is the number of the attendant console. Press **Enter**.
The system displays the **Attendant Console** screen.
2. Click **Next** until you see the **Feature Button Assignments** area ([Figure 171: Attendant Console screen](#) on page 725).

Figure 171: Attendant Console screen

change attendant 1	Page 3 of 4
ATTENDANT CONSOLE	
FEATURE BUTTON ASSIGNMENTS	
1: split	13:
2: dont-split	14:
3:	15: whisp-act
4:	16:
5:	17:
6: hold	18:
7:	19: forced-rel
8:	20:
9:	21: crss-alert
10:	22:
11:	23: night-serv
12:	24: pos-busy

3. In the **Feature Button Assignments** area, assign **crss-alert** to a button.

In this example, we assign **crss-alert** to button 21.

4. Press **Enter** to save your changes.

Setting up digital telephones to receive emergency notification

Prerequisites

You must complete the following actions before you can set up digital telephones to receive emergency notification:

- On the **Station** screen for each telephone that you want to receive emergency notification:
 - Ensure that the extension is a digital display telephone.
 - In the **Type** field, ensure that the telephone is not a virtual extension.

To view the **Station** screen, type **change station n**, where **n** is the extension. Press **Enter**.

- You must also have one of the following circuit packs: Call Classifier or Tone-Clock with Call Classification and Tone Detection. A Call Classifier pack is needed only if the outgoing trunk to the pager does not provide answer supervision.

To set up the digital telephone of each security guard to receive emergency notification:

1. Type **change station *n***, where *n* is the extension of the security guard. Press **Enter**.
The system displays the **Station** screen.
2. Click **Next** until you see the **Button Assignments** area ([Figure 172: Station screen](#) on page 726).

Figure 172: Station screen

change station 32023		Page 3 of 3	
STATION			
SITE DATA			
Room:		Headset?	n
Jack:		Speaker?	n
Cable:		Mounting:	d
Floor:		Cord Length:	0
Building:		Set Color:	
ABBREVIATED DIALING			
List1:	List2:	List3:	
BUTTON ASSIGNMENTS			
1: call-appr	4: data-ext	Ext: 22000	
2: call-appr	5: crss-alert		
3: call-appr	6:		

3. In the **Button Assignments** area, assign **crss-alert** to an available button.
In this example, we assign **crss-alert** to button 5. You cannot assign this button to a softkey.
4. Press **Enter** to save your changes.
5. Repeat this process for the telephone of each security guard.

Setting which users must acknowledge the emergency alert

To force all security guards and the attendant to acknowledge and cancel an alert:

1. Type **change system-parameters crisis-alert**. Press **Enter**.
The system displays the **Crisis Alert System Parameters** screen ([Figure 173: Crisis Alert System Parameters screen](#) on page 727).

Figure 173: Crisis Alert System Parameters screen

change system-parameters crisis-alert	Page 1 of 1
CRISIS ALERT SYSTEM PARAMETERS	
ALERT STATION	
Every User Responds?	y
ALERT PAGER	
Alert Pager?	n

2. In the **Every User Responds** field, type **y**.

If you set the **Every User Responds** field to **n**, any one of the designated users can cancel an alert.

3. Press **Enter** to save your changes.

Setting up Crisis Alert to notify a digital pager

You also have the option to have the Crisis Alert capability notify a digital pager. When someone dials an emergency number, the system sends the extension and the location of the caller to the administered pager.

This feature sends a message containing the extension number to the administered pager. You can also administer a main number so that the pager displays the location from where the emergency call originated.

To receive a crisis alert message, you must administer at least one attendant console or one digital telephone with a **crss-alert** button.

The crisis alert call to a digital pager uses two to four trunks. The system uses:

- One trunk for the actual call
- One to three trunks to notify one to three pagers, depending on how many pagers you administer.

Prerequisites

You must complete the following actions before a user can receive notification to a digital pager in an emergency:

- In the **ARS Digit Analysis Table** screen, you must have emergency numbers in the **Call Type** column set to **alrt**. For more information, see [Setting up the emergency number](#) on page 723.

- You must administer a **crss-alert** button on at least one of the following telephones:
 - Attendant console. For more information, see [Setting up the attendant console to receive emergency notification](#) on page 724.
 - Digital telephone. For more information, see [Setting up digital telephones to receive emergency notification](#) on page 725.
- You must also have at least one digital numeric pager, and one of the following circuit packs:
 - Call Classifier
 - Tone-Clock with Call Classification and Tone Detection

To set up Crisis Alert to notify a digital pager:

1. Type **change system-parameters crisis-alert**. Press **Enter**.

The system displays the **Crisis Alert System Parameters** screen ([Figure 174: Crisis Alert System Parameters screen](#) on page 728).

Figure 174: Crisis Alert System Parameters screen

change system-parameters crisis-alert
Page 1 of 1

CRISIS ALERT SYSTEM PARAMETERS

ALERT STATION
 Every User Responds? y

ALERT PAGER
 Alert Pager? y
 Originating Extension: 7768
 Crisis Alert Code: 911
 Retries: 5
 Retry Interval (sec): 15
 Main Number: 3035550800

Pager Number	Pin Number
1: 3035559001	1: pp77614567890
2:	2:
3:	3:

DTMF Duration - Tone (msec): 100 Pause (msec): 100

2. In the **Alert Pager** field, type **y**.

The system displays additional Crisis Alert administration fields.

3. In the **Originating Extension** field, type a valid unused extension to send the Crisis Alert message.

In this example, that extension is **7768**.

4. In the **Crisis Alert Code** field, type the number that a user dials to call for emergency assistance.
In this example, that number is **911**.
5. In the **Retries** field, type the number of additional times that you want the system to try to send the alert message in case of an unsuccessful first attempt.
In this example, that number is **5**.
6. In the **Retry Interval (sec)** field, type the number of seconds between retries.
In this example, that number is **15**.
7. In the **Main Number** field, type the number that you want the system to display at the end of the pager message.
In this example, that number is **3035550800**.
8. In the **Pager Number** field, type the telephone number for the pager.
In this example, that number is **3035559001**.
9. In the **Pin Number** field, type the personal identification number (PIN), if required, for the pager. Insert pause digits (**pp**) as needed to pause for announcements from the pager service to complete before sending the PIN.
In this example, that number is **pp77614567890**.
10. In the **DTMF Duration - Tone (msec)** field, type the the number of milliseconds that the dual-tone multifrequency (DTMF) tone plays for each digit.
In this example, that number is **100**.
11. In the **Pause (msec)** field, type the number of milliseconds between DTMF tones for each digit.
In this example, that number is **100**.
12. Press **Enter** to save your changes.

Setting up emergency extension forwarding

If an emergency call gets disconnected, the public safety person immediately attempts to call the caller back. If the ELIN that the PSAP receives is not equivalent to the extension of the caller, the return call might ring at a different telephone. To solve this problem, you can automatically forward all incoming trunk calls, for an administered period of time, to the telephone that placed the emergency call.

Note:

You must administer time limits on the system first. If time limits are not administered, the system will not forward all incoming trunk calls because the system cannot determine what incoming trunk call is from the PSAP.

To set up emergency extension forwarding:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen.
2. Click **Next** until you see the **Emergency Extension Forwarding (min)** field
([Figure 175: Feature-Related System Parameters screen](#) on page 730).

Figure 175: Feature-Related System Parameters screen

change system-parameters features
Page 5 of 14

FEATURE-RELATED SYSTEM PARAMETERS

SYSTEM PARAMETER PRINTERS
System Printer Endpoint: Lines Per Page: 60

Emergency Extension Forwarding (min): 10

SYSTEM-WIDE PARAMETERS
Switch Name: Norbert

MALICIOUS CALL TRACE PARAMETERS
Apply MCT Warning Tone? y MCT Voice Recorder Trunk Group:
Delay Sending RElease (seconds)? 0

SEND ALL CALLS OPTIONS
Send All Calls applies to: station Auto Inspect on Send All Calls? n

UNIVERSAL CALL ID
Create Universal Call ID (UCID)? n UCID Network Node ID:

3. In the **Emergency Extension Forwarding (min)** field, type the number of minutes for which you want the system to forward all incoming trunk calls to the emergency extension. In this example, the number is **10**.

The timer starts once an emergency call gets disconnected. This timer applies only if the Emergency Location Extension is an extension on the same system as the extension from which 911 was dialed. Customers with several systems in a location must assign multiple Emergency Location Extensions.

4. Press **Enter** to save your changes.

Setting up CAMA numbering

Use the **CAMA Numbering - E911 Format** screen to administer Centralized Automatic Message Accounting (CAMA) trunks. Also use this screen to provide Caller Emergency Service Identification (CESID) information to your local emergency system through the local tandem office.

This screen provides the CESID format by extension or number blocks. This flexibility allows for multiple CESID formats to be sent over multiple CAMA trunk groups, and mixed telephone numbering plans. This flexibility also allows some limited conversion from non-DID to DID numbers that the Private Switch/Automatic Location Interface (PS/ALI) database usually requires.

The **System CESID Default** field defines the CESID for all extensions that are not defined in the **Ext Code** fields. The first page of this screen contains the default CESID, plus extension fields for CESID entries. Each remaining page contains additional extension fields for CESID entries.

Note:

The following procedure assumes that a CAMA trunk group is already set up. For information on how to set up trunk groups, see the *Administrator's Guide for Avaya Communication Manager*.

To set up CAMA numbering:

1. Type **change cama-numbering**. Press **Enter**.

The system displays the **CAMA Numbering - E911 Format** screen ([Figure 176: CAMA Numbering - E911 Format screen](#) on page 732).

Figure 176: CAMA Numbering - E911 Format screen

change cama-numbering

CAMA NUMBERING - E911 FORMAT

Page 1 of 15

System CESID Default: _____

Ext Len	Ext Code	CESID	Total Length	Ext Len	Ext Code	CESID	Total Length
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___
-	_____	_____	___	-	_____	_____	___

2. In the **System CESID Default** field, type the CESID that the system sends over the CAMA trunk if you do not define the **Ext Code** fields.

Type a number that consists of 1 to 16 digits. The default value is blank.

3. In the **Ext Len** field, type the number of digits in the extension.

Type a number from 1 to 5. The default value is blank.

4. In the **Ext Code** field, type the leading digits or all of the digits in the extension for the specified CESID.

If the value in the **Ext Len** field is greater than the number of digits in the **Ext Code** field, the system interprets the **Ext Code** as a block of digits. For example, if the value in the **Ext Len** field is 4 and the value in the **Ext Code** field is 11, the CESID serves extensions 1100 through 1199. The **Ext Code** [11] is for a DID block. **Ext Code** [126] might point a non-DID block to a nearby DID extension 5241666.

Enter a number that consists of 1 to 5 digits. The default value is blank.

5. In the **CESID** field, type the number that identifies the calling terminal within an emergency service system. This field can represent a prefix to an extension, or the entire CESID.

Enter a number that consists of 1 to 16 digits. The default value is blank.

6. In the **Total Length** field, type the total number of digits to send.

Enter a number that consists of 1 to 16 digits. The default value is blank.

7. Press **Enter** to save your changes.

Reports for Enhanced 911

The following reports provide information about the Enhanced 911 feature:

- The **Emergency Access Calls** report shows the following information for each emergency call:
 - Extension
 - Event
 - Type of call
 - Time

For detailed information on this report and the associated commands, see *Reports for Avaya Communication Manager*.

Considerations for Enhanced 911

This section provides information about how the Enhanced 911 feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Enhanced 911 under all conditions.

The following considerations apply to Enhanced 911:

- The Enhanced E911 feature only applies to emergency calls that go over CAMA and ISDN trunks.
- You must provide several call appearances on the last telephone in both the coverage path and the telephone hunting path of the Emergency Location Extension.
- Do not include voice mail, automated attendant, or announcement extensions for Emergency Location Extensions.

The following two consideration scenarios apply to a local spare processor (LSP), and to backup S8700 servers. These considerations apply if the spare processor is an asynchronous transfer mode wide area network (ATM WAN), or is on a survivable remote expansion port network (EPN).

- Sending the correct ELIN to the PSAP

Once each day, the LSP copies administration translations from its primary server. The system never copies translations from the LSP to the primary server. IP telephones can stay under the control of an LSP for 6 days, 10 days, or indefinitely. The length of time depends on what version of software the customer is running.

If someone notifies you that an IP extension moved, update the ALI database with the physical location of the IP extension. Also change the **Emergency Location Extension** field on the **IP Address Mapping** screen to match the new subnetwork of the IP extension. You can also purchase an adjunct that performs this correlation and update for you.

If the telephone registers with the LSP before the system copies the translations from the main server, the **Emergency Location Extension** field is still set to the old value. If the user dials 911, emergency response personnel might go to a different location for the caller instead of to the exact location.

Never update translations directly on the LSP.

The following considerations apply to the Crisis Alert capability:

- The Automatic Number Identification (ANI) that the system sends to the CO might not be the same extension as the telephone that the person used to dial the emergency. If the call is disconnected and the public service person call back, the public service person calls the ANI. The public service person might not reach the caller.

If a telephone has a **crss-alert** button assigned, the return call is answered by someone who was notified of the extension that made the emergency call. That person can then forward the return call from the public service person to the extension from which the emergency call was placed.

- Only one **crss-alert** button can appear on an attendant console or a digital telephone.
- Attendant consoles or digital telephones without a **crss-alert** button do not receive emergency notification.

Interactions for Enhanced 911

This section provides information about how the Enhanced E911 feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of E911 in any feature configuration.

- Bridged Call Appearances

Emergency 911 calls from a bridged extension report the number of the principle telephone.

- Class of Restriction (COR), Tenant Partitioning, and Facilities Restriction Level (FRL)

COR, Tenant Partitioning, and FRL restrictions apply to CAMA trunks and 911 calls.

- Expert Agent Selection (EAS)

When an EAS agent dials 911, the number is the number of the physical telephone, and not of the logical agent.

- Network Address Translation (NAT) devices

If a telephone operates behind a NAT device, the ELIN is based upon the translated IP address of the telephone, and not the native IP address. If you use a NAT device, the NAT device must preserve IP subnetworks. To require a change in IP address, the E911 for wired IP telephones capability expects a move from one geographic area to another.

For example, a customer has two subnetworks, 1.1.1.* and 2.2.2.*, that are mapped to two different ELINs in the **ip-network-map** screen. Both of these subnetworks operate behind a NAT device. If the NAT device maps both subnetworks of 1.1.1.* and 2.2.2.* into addresses in the range 3.3.3.*, Communication Manager can not detect if someone moves a telephone from 1.1.1.* to 2.2.2.*.

- Non-ARS calls

The E911 feature uses Automatic Route Selection (ARS) digit analysis to classify an outgoing call as an emergency or crisis alert call. If a user does not use ARS to dial an emergency call without using ARS, the E911 feature does not apply. Examples of calls that do not use ARS are:

- Calls that use a trunk access code
- personal CO line button calls
- facility test calls
- AAR access code calls, if AAR digit analysis does not overflow to ARS

The following interactions apply to the Crisis Alert capability:

- Centralized Attendant Service (CAS)

If CAS is enabled, the emergency alert still goes to the local attendant.

- Multiple Locations

A crisis alert call to a digital pager is treated by the system as if the call is from Location 1. This means that the pager number digits are analyzed using the Location 1 dial plan and the Location 1 ARS Analysis Table. Note that the system does not use the location of the station that dialed the emergency call.

- Outgoing Trunk Queuing

If a user attempts to make an emergency call when all trunks are busy, the call does not generate an alert. If the Outgoing Trunk Queuing feature is enabled for a trunk group, the call is placed in a queue, but does not generate an alert.

- Tenant Partitioning

If Tenant Partitioning is active, attendants receive emergency notification from only those callers who are within the tenant partition. If no attendant is assigned to a partition from which an emergency call originates, the system still sends a record of the call to the system printer, and to the **Emergency Access Calls** report.

- Terminal Self-Administration

Users who can administer their own telephones cannot disable a **crss-alert** button.

Emergency Calls from Unnamed IP Endpoints

Use the Emergency Calls from Unnamed IP Endpoints feature to register an IP telephone without an extension number. The Emergency Calls from Unnamed IP Endpoints feature places the IP telephone into Terminal Translation Initialization (TTI) service. Users can dial a feature access code (FAC) to either associate an extension number with a telephone, or to dissociate an extension number from a telephone.

A person can use an IP telephone that is in TTI service to make emergency calls if Communication Manager is appropriately administered.

Note:

Check with your Avaya sales representative or your Avaya Authorized Business Partner for availability of this feature.

Detailed description of Emergency Calls from Unnamed IP Endpoints

This section provides a detailed description of the Emergency Calls from Unnamed IP Endpoints feature.

Without the Emergency Calls from Unnamed IP Endpoints feature, if a user of an IP telephone registers the extension to another telephone or softphone, the IP telephone changes to an unregistered state. The IP telephone cannot reregister until the user releases the extension number from the other telephone or softphone. A user cannot use an IP telephone that is in an unregistered state to make emergency calls.

However, if a user has a DCP telephone and registers the extension to another telephone or softphone, the DCP telephone goes into a dissociated state. In this state, a user can still use the DCP telephone to make emergency calls if Communication Manager is appropriately administered.

The Emergency Calls from Unnamed IP Endpoints feature makes IP telephones work like DCP telephones when users make emergency calls from telephones that do not have extension numbers.

When an IP telephone is plugged in, power cycled, or after a user logs off, the system displays a prompt on the telephone display. The prompt asks the user for an extension number and a password. If a user does not dial at least one digit within 60 seconds from when the prompt first appears, the system registers the telephone into TTI service.

Emergency Calls from Unnamed IP Endpoints

If a user wants to make an unnamed IP telephone reregister with an extension, the user must either:

- Press the Login prompt on the telephone softkey, and then enter an extension and a password
- Use the feature access code (FAC) for the Personal Station Access (PSA) Associate feature

A user can dial the FAC for the PSA Associate feature from an IP telephone that is in TTI service only if one of the following conditions is true:

- the **Receive Unencrypted from IP Endpoints** field on the **Security-Related System Parameters** screen is set to **y**
- The telephone encrypts signaling

If a user dials the FAC for the PSA Disassociate feature, the system immediately places the IP telephone into TTI service.

The Emergency Calls from Unnamed IP Endpoints feature does not work with the following IP telephones:

- Non-AVAYA H.323 IP telephones
- IP Softphone release 5 or earlier
- IP telephones with 2.1 firmware or earlier
- IP telephones with 2.5 firmware

The Emergency Calls from Unnamed IP Endpoints feature supports the following capabilities:

- If a person makes a call from an IP telephone that is in TTI service, the called party sees the IP port of the calling party and the words “TTI port” on their display telephone. For example, a called party might see **S00001 TTI port** on their display telephone. This display allows the called party to identify the source of the call.
- If the Malicious Call Trace (MCT) feature traces an IP telephone that is in TTI service, the IP port appears on the display of the MCT controller. The administrator can use the **display port n** command to convert the port into an IP address. The administrator can then learn the original extension of the IP telephone, and where the telephone is located.

These two capabilities are especially helpful to trace calls.

The system can register an IP telephone to TTI service only if that IP telephone has an IP address that is administered on the **IP Address Mapping** screen. To view the **IP Address Mapping** screen, type the **display ip-address-map** command.

Changed screens

The following screens were changed for the Emergency Calls from Unnamed IP Endpoints feature:

- [Feature-Related System Parameters screen](#)
- [Port Information screen](#)
- [System Capacity screen](#)

Feature-Related System Parameters screen

On the **Feature-Related System Parameters** screen, the **COR for PSA Dissociated Sets** field is renamed **Default COR for Dissociated Sets**. The **CPN, ANI for PSA Dissociated Sets** field is renamed **CPN, ANI for Dissociated Sets**. The function of these two fields did not change.

To view the **Feature-Related System Parameters** screen:

1. Type **display system-parameters features** and press **Enter**.

The system displays the **Feature-Related System Parameters** screen.

2. Press **Next** until you see the **Default COR for Dissociated Sets** and **CPN, ANI for Dissociated Sets** fields ([Figure 177: Feature-Related System Parameters screen](#) on page 739).

Figure 177: Feature-Related System Parameters screen

```
display system-parameters features                                     Page 3 of 14

                                FEATURE-RELATED SYSTEM PARAMETERS

TTI/PSA PARAMETERS

    WARNING! SEE USER DOCUMENTATION BEFORE CHANGING TTI STATE
    Terminal Translation Initialization (TTI) Enabled? y
    TTI State: voice          TTI Security Code: 123456
    Record CTA/PSA/TTI Transactions in History Log? n
    Enhanced PSA Location/Display Information Enabled? n
    Default COR for Dissociated Sets: 94
    CPN, ANI for Dissociated Sets: 1234567
    Customer Telephone Activation(CTA) Enabled? n
```

Port Information screen

The system displays the IP address of an IP telephone that is in TTI service in the **Identification** field on the **Port Information** screen.

To view the **Port Information** screen:

1. Type **display port *n***, where *n* is the port address. Press **Enter**.

The system displays the **Port Information** screen ([Figure 178: Port Information screen](#) on page 740).

Figure 178: Port Information screen

display port s00001	PORT INFORMATION
	Port: S00001
	Equipment Type: TTI port
	Identification: 172.22.22.122

System Capacity screen

A new field, **IP Stations in TTI State**, is added to the **System Capacity** screen.

To view the **System Capacity** screen:

1. Type **display capacity** and press **Enter**.

The system displays the **System Capacity** screen.

2. Press **Next** until you see the **IP Stations in TTI State** field ([Figure 179: System Capacity screen](#) on page 740).

Figure 179: System Capacity screen

display capacity				Page 10 of 12
SYSTEM CAPACITY				
CONCURRENT REGISTRATION COUNTS				
	Currently Registered	Available	System Limit	
	-----	-----	-----	
IP Stations:	1009	4091	5100	
IP Stations in TTI State:	0	-	-	
IP Attendant Consoles:	0	1	1	
Remote Office Stations:	3	997	1000	

Changed commands

The following commands were changed for the Emergency Calls from Unnamed IP Endpoints feature:

- [reset ip-stations command](#)

reset ip-stations command

reset ip-stations

The **reset ip-stations** command has a new option, **tti**. The complete command is now:

reset ip-stations [ip-phones | all | tti] [network-region(1-250) | all-regions].

The system administrator can use the **reset ip-stations tti** command to unregister IP telephones that are in TTI service without unregistering other IP telephones.

Administering Emergency Calls from Unnamed IP Endpoints

The following steps are part of the administration process for the Emergency Calls from Unnamed IP Endpoints feature:

- None

This section describes:

- Any prerequisites for administering the Emergency Calls from Unnamed IP Endpoints feature
- The screens that you use to administer the Emergency Calls from Unnamed IP Endpoints feature
- Complete administration procedures for the Emergency Calls from Unnamed IP Endpoints feature

Prerequisites for administering Emergency Calls from Unnamed IP Endpoints

- On the **Optional Features** screen, ensure that the **G3 Version** field is set to **V13** or later. **V13** is the version for Communication Manager release 3.0. If this field is not set to **V13** or later, your system is not enabled for the Feature Description and Implementation feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

- The Emergency Calls from Unnamed IP Endpoints feature requires that the TTI for voice terminals option be turned on. Your license file sets this field. If the TTI for voice terminals option is turned off for your system, IP telephones that are in the TTI state are unregistered.

To verify if the TTI for voice terminals option is turned on:

1. Type **display system-parameters features**. Press **Enter**.

The system displays the **Feature-Related System Parameters** screen.

2. Press **Next** until you see the **TTI/PSA Parameters** section ([Figure 180: Feature-Related System Parameters screen](#) on page 742).

Figure 180: Feature-Related System Parameters screen

display system-parameters features	Page 3 of 14
FEATURE-RELATED SYSTEM PARAMETERS	
TTI/PSA PARAMETERS	
WARNING! SEE USER DOCUMENTATION BEFORE CHANGING TTI STATE	
Terminal Translation Initialization (TTI) Enabled? y	
TTI State: voice TTI Security Code: 123456	
Record CTA/PSA/TTI Transactions in History Log? N	
Enhanced PSA Location/Display Information Enabled? n	
Default COR for Dissociated Sets: 94	
CPN, ANI for Dissociated Sets: 1234567	
Customer Telephone Activation(CTA) Enabled? n	

3. Ensure that the **Terminal Translation Initialization (TTI) Enabled?** field is set to **y**.
4. Ensure that the **TTI State** field is set to **voice**.
5. Press **Enter**.

**Important:**

Administrators or technicians might often turn off TTI during software upgrades. Remember that you must turn TTI back on when the upgrade is complete.

**SECURITY ALERT:**

You might choose to leave TTI turned off for security reasons. If you want to use the Feature Description and Implementation feature but not use TTI, set the **TTI FAC** field on the **Feature Access Code (FAC)** screen to blank.

Screens for administering Emergency Calls from Unnamed IP Endpoints

Screen name	Purpose	Fields
Feature-Related System Parameters	Ensure that the Emergency Calls from Unnamed IP Endpoints feature is enabled on your system.	● Terminal Translation Initialization (TTI) Enabled? ● TTI State
Port Information	Identify the IP address of an IP telephone that is in TTI service.	Identification
System Capacity	Define the system limit of IP telephones in TTI status.	IP Stations in TTI State

Reports for Emergency Calls from Unnamed IP Endpoints

The following reports provide information about the Emergency Calls from Unnamed IP Endpoints capability:

- **Call Detail Recording (CDR)**
If an IP telephone that is in TTI service makes an outgoing call, CDR records contain the port as the calling party. An example of a port is S00001.
- **History Log**
If the **Record IP Registrations in History Log?** field on the **System-Parameters Features** screen is set to **y**, the system records registrations to TTI service and unregistrations from TTI service in the History Log. The History Log displays the:
 - IP address for registrations and unregistrations
 - Telephone extension for Personal Station Access (PSA) associations and PSA disassociationsThe same information is available from the [Tracelog](#) file. The **Qualifier** column shows the IP address. The system also records state changes to and from TTI service from **LoginInfoUpdate** messages, end user PSA, or similar actions.
- The **List Usage Report** lists IP telephones that are in TTI service ([Figure 181: List Usage Report screen](#) on page 744). To see the **List Usage Report** report, type the **list usage ip-address n**, where **n** is the IP address of the telephone.

Figure 181: List Usage Report screen

list usage ip-address 135.9.159.130		
LIST USAGE REPORT		
Used By		
TTI Station	Port Number S00074	Station IP Addr

-
- **Tracelog**
Registrations to, and unregistrations from, TTI service get an entry in the tracelog file, if the Linux Registries has turned on each system for the appropriate platforms. Extensions that move from one telephone to another also get an entry in the tracelog file.
 - The **TTI Service IP Stations** report lists IP telephones that are in TTI service ([Figure 182: TTI Service IP Stations screen](#) on page 745). To see the **TTI Service IP Stations** report, type the **list tti-ip-stations** command.

Figure 182: TTI Service IP Stations screen

list tti-ip-stations						Page 1
TTI SERVICE IP STATIONS						
Station	Product	Prod	Net	Gatekeeper		
IP Address	ID	Rel	Rgn	IP Address	Port	
135.9.159.130	IP_Phone	2.200	1	135.9.159.128	S00074	

Field descriptions

All fields are display only. The system sorts the information on the screen by the **Station IP Address** field.

For more information on these reports and the associated commands, see *Reports for Avaya Communication Manager*.

Considerations for Emergency Calls from Unnamed IP Endpoints

This section provides information about how the Emergency Calls from Unnamed IP Endpoints feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Emergency Calls from Unnamed IP Endpoints under all conditions.

- None

Interactions for Emergency Calls from Unnamed IP Endpoints

This section provides information about how the Emergency Calls from Unnamed IP Endpoints feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Emergency Calls from Unnamed IP Endpoints in any feature configuration.

- E911 layer 2 adjunct

If you use the Cielo E-911 Manager from RedSky Technologies, Inc., contact RedSky for information about how that product interacts with this feature. The Web site for RedSky Technologies, Inc. is <http://www.redskytech.com>.

- E911 restricted telephones

You might have telephones from which you do not want users to make or receive external calls. You can put such telephones into TTI service. However, a better method is to give the telephone an extension number, and then use a Class of Restriction (COR) to restrict the permissions.

For example, if someone dialed 911 from such a telephone and the call accidentally dropped, the public safety officer will call back to the calling party number that the public safety office received during the 911 call. If the telephone that dialed 911 has an extension number, the telephone receives the return call. If the telephone that dialed 911 was in TTI service, the return call rings someone else who might not know about the emergency.

- Selective Conference Party

With the Selective Conference Party feature, a member of a conference call can view the number and the name of the other parties on the call. The member can also drop or mute the other parties. A telephone that is in TTI service cannot use the Selective Conference Party feature because the feature requires the use of a button. However, a telephone that is in TTI service can be displayed, dropped, or muted.

Expanded Meet-me Conferencing

Use the Expanded Meet-me Conferencing (EMMC) feature to set up multi-party conferences consisting of more than six parties. The Expanded Meet-me Conferencing feature supports up to 300 parties.

Detailed description of Expanded Meet-me Conferencing

This section provides a detailed description of the Expanded Meet-me Conferencing feature.

The Expanded Meet-me Conferencing feature is an enhancement to the Avaya Communication Manager six-party Meet-me Conference feature. The Expanded Meet-me Conferencing feature supports up to 300 parties.

The Expanded Meet-me Conferencing feature is supported on all Linux platforms of Avaya Communication Manager (S8700, S8500, S8500B, S8300) running Avaya Communication Manager release 3.0 software or higher.

Note:

For more information on Expanded Meet-me Conferencing, see the *EMMC Installation and Troubleshooting Guide, 04-300527, Issue 1, April 2005*. You can also find additional information in *SIP Support in Avaya Communication Manager 3.0, 555-245-206, Issue 3, May 2005*.

Highlights of Expanded Meet-me Conferencing

The following are some of the highlights of the Expanded Meet-me Conferencing feature:

- The Expanded Meet-me Conferencing feature is available on your system if your system is licensed for the feature. The license file variable for your system defines the maximum number of Expanded Meet-me Conferencing ports. The maximum allowed for a system is 300 ports. This variable is set in increments of 50 ports. The number of ports that your system has is determined by the license file for your system.
- Avaya Communication Manager uses a SIP trunk interface to connect to the Avaya EMMC Media Server. The Avaya EMMC Media Server is a separate server, and SIP trunking provides the interface between Communication Manager and the Avaya EMMC Media Server.

Expanded Meet-me Conferencing

- For Avaya Communication Manager Release 3.0, the EMMC Media Server is a S8500B. The EMMC Media Server runs the Red Hat Linux 8.0 operating system, and has a software-based conferencing solution.
- You must check the new field **Maximum Number of Meet-me Conference Ports** on the **System-Parameter Customer-Options** screen. If this field has a non-zero value, your system is enabled for the Expanded Meet-me Conferencing feature.
- The Expanded Meet-me Conferencing feature also allows you to administer the maximum number of parties allowed on each conference. This could be a system wide limit, and cannot exceed the number of ports your system is licensed for.
- The Expanded Meet-me Conferencing feature is available to all endpoints and trunk calls using Avaya Communication Manager.
- The Expanded Meet-me Conferencing feature is applicable only to meet-me conferences where the conferees dial into a conference VDN. This feature does not apply to ad-hoc conferences using the Conference button on your telephone.
- The Expanded Meet-me Conferencing feature provides all the regular capabilities of the six-party Meet-me Conference feature. This includes selective display, entry and exit tones, passwords, conference display updates, far-end mute and drop capabilities.
- To support the maximum of 300 Expanded Meet-me Conferencing ports, Avaya Communication Manager must use a minimum of two trunk groups and two signaling groups. Each trunk group on Avaya Communication Manager supports 255 trunk members.
- The Expanded Meet-me Conferencing feature supports G.711MuLaw, and you may need to administer a dedicated Network Region and codec set for the EMMC Media Server.

Expanded Meet-me Conferencing vectors and VDNs

The Expanded Meet-me Conferencing feature does not require any new vector steps. It uses the same vectors as the six-party Meet-me conference.

The following are the options for meet-me vectors:

- Meet-me idle - Use this vector step to view membership status information, that is, if a caller is idle or active. This vector replaces the six-party Meet-me Conference method of checking membership status using call records.
- Meet-me-access - This vector step is the same as the six-party Meet-me Conference.
- Meet-me-full - Use this vector step to determine how many active members are on a conference against the maximum number allowed for your system. If a party tries to join the conference after the system-wide limit has been exceeded, the system sends denial feedback to the member.
- Route-to-meetme - Use this vector step to route the call based on whether the conference is a six-party Meet-me Conference or an Expanded Meet-me Conference.

- Route-to Number - Use this field to create an unique conference ID to route the call to a SIP trunk, and to the Avaya EMMC Media Server. If this vector step fails, processing continues to the next step and the system logs a report.
- Announcement - This vector step is the same as the six-party Meet-me Conference.

For the Meet-me full vector step, the recommended announcement is "All ports on this meet-me conference are in use."

If the Route-to vector step fails because all licensed ports are already in use, the recommended announcement is "Your call cannot be routed at this time. Please try again later."

Expanded Meet-me Conferencing display updates

The Expanded Meet-me Conferencing feature provides real-time display updates for up to 30 conferees. Display updates for up to 30 is expected to meet the needs of most business conferences.

If Expanded Meet-me Conferencing size exceeds 30 parties, all other parties that join the conference see a fixed display that shows "CONFERENCE >30" in the **nnn** field of the end-user telephone. The display message can also be ">30 party conference in progress."

Users can select the **conf-dsp** button to get details regarding number of parties on the conference, and scroll through the list of parties.

- If a user presses the **conf-dsp** button once, the user can view the conference count with the text **<nnn>-party conference** field.
- If a user presses the **conf-dsp** button again, the system provides updated information as other parties join the conference.
- Pressing the **conf-dsp** button again enables the user to scroll through the list of parties on a conference.

Note:

This applies to ad-hoc, six-party Meet-me Conferences and Expanded Meet-me Conferencing.

Note:

The **conf-dsp** button is located on the **Station** screen in the Button Assignments area. You can select this button from the drop down list.

Language translations are available for system displays. You can also administer this in a user-defined language by using the **display-messages-transfer-conference** command in the **Language Translations** screen.

Status screens for Expanded Meet-me Conferencing

You can view Expanded Meet-me Conferencing system capacities by typing the **display capacity** command. The system displays the **System Capacity** screen. The two fields **Meet-Me Conference VDNs per System** and **Maximum Number of Expanded Meet-me Conference Ports** show the used, available, and system wide port limits for your system.

You can also view the **Conference Bridge Ports** field on the **General Status** screen to view the number of parties on each call and the system wide limit.

Administering Expanded Meet-me Conferencing

The following steps are part of the administration process for the Expanded Meet-me Conferencing feature:

- [Setting the maximum number of parties for each conference](#)
- [Changing or creating a VDN for Expanded Meet-me Conferencing](#)
- [Setting language translations](#)

This section describes:

- Any prerequisites for administering the Expanded Meet-me Conferencing feature
- The screens that you use to administer the Expanded Meet-me Conferencing feature
- Complete administration procedures for the Expanded Meet-me Conferencing feature

Prerequisites for administering Expanded Meet-me Conferencing

You must complete the following actions before you can administer the Expanded Meet-me Conferencing feature:

- On the **Optional Features** screen, ensure that the **G3 Version** field is set to **V13** or later. If the **G3 Version** field is not set to **V13** or later, your system is not enabled for the Expanded Meet-me Conferencing feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

- On the **Optional Features** screen, click **Next** until you see the **Enhanced Conferencing** field. Ensure that this field is set to **y**. If the **Enhanced Conferencing** field is set to **n**, your system is not enabled for the Expanded Meet-me Conferencing feature. Contact your Avaya representative before you continue with this procedure.

- On the **Optional Features** screen, a numeric value must appear on the **Maximum Number of Expanded Meet-me Conference Ports** field. The maximum value for this field is 300, and it corresponds to the number of Expanded Meet-me Conferencing ports that your system has. This number can be less than 300, and is determined by the license file for your system.
- On the **Optional Features** screen, the following fields must also be set to **y** :
 - **Maximum Administered SIP Trunks**
 - **Maximum TN2501 VAL Boards**
 - **Maximum G250/G350/G700 VAL Sources**
 - **ISDN-PRI**
 - **IP Trunks**
 - **Vectoring (Basic)**
 - **Vectoring (Prompting)**
 - **Vectoring (G3V4 Enhanced)**

Screens for administering Expanded Meet-me Conferencing

Screen name	Purpose	Fields
Optional Features	Ensure that you have Communication Manager version 3.0 (V13) or higher.	● G3 Version
	Ensure that your system supports Expanded Meet-me Conferencing.	● Enhanced Conferencing

Screen name	Purpose	Fields
Optional Features	Shows the maximum number of Expanded Meet-me Conferencing ports for the system. Also shows the other fields that must be set for the EMMC feature.	● Maximum Number of Expanded Meet-me Conference ports ● Maximum Administered SIP Trunks ● Maximum TN2501 VAL Boards ● Maximum G250/G350/G700 VAL Sources ● ISDN-PRI ● IP Trunks ● Vectoring (Basic) ● Vectoring (Prompting) ● Vectoring (G3V4 Enhanced)
Feature-Related System Parameters	Sets the maximum number of parties allowed to join each conference.	● Maximum Number per Expanded Meet-me Conf ● Trunk-to-Trunk Transfer
Vector Directory Number	Changing or creating a VDN for Expanded Meet-me Conferencing	● Meet-me Conferencing ● Conference type ● Route-to Number
Language Translations	Setting language translations	● ^ party conference

Setting the maximum number of parties for each conference

To set the maximum number of parties allowed for each Expanded Meet-me Conference:

1. Type **change system-parameters features**.

The system displays the **Feature-Related System Parameters** screen ([Figure 183: Feature-Related System Parameters Screen](#) on page 753).

Figure 183: Feature-Related System Parameters Screen

change system-parameters features	Page 7 of 14
FEATURE-RELATED SYSTEM PARAMETERS	
CONFERENCE/TRANSFER	
Abort Transfer? n	No Dial Tone Conferencing? y
Transfer Upon Hang-Up? y	Select Line Appearance Conferencing? y
Abort Conference Upon Hang-Up? n	Unhold? y
No Hold Conference Timeout: 60	Maximum Ports per Expanded Meet-me Conf: nnn
ANALOG BUSY AUTO CALLBACK	
Without Flash? n	
AUDIX ONE-STEP RECORDING	
Recording Delay Timer (msec): 500	
Apply Ready Indication Tone To Which Parties In The Call? all	
Interval For Applying Periodic Alerting Tone (seconds): 15	

2. In the **Maximum Number per Expanded Meet-me Conf** field, type a value between 3 to 300. This sets the maximum number of parties allowed for each conference on your system.
3. Press **Enter** to save your changes.

Note:

The range allowed for this field is between 3 to 300. But 7 and above is recommended as this allows the use of six-party Meet-me Conference, or Expanded Meet-me Conferencing for larger conferences.

Changing or creating a VDN for Expanded Meet-me Conferencing

To change or create a VDN for Expanded Meet-me Conferencing:

1. Type **change vdn xxxxx**, where **xxxxx** is the vector directory extension number.

The system displays the Vector Directory Number screen ([Figure 184: Vector Directory Number screen](#) on page 754).

Figure 184: Vector Directory Number screen

change vdn 50300	Page 1 of 3
VECTOR DIRECTORY NUMBER	
Extension: 50300	
Name: EMMC VDN	
Vector Number: 10	
Meet-me Conferencing? y	
COR: 1	
TN: 1	

2. If the **Meet-me Conferencing** field is set to **y** on the first page of this screen, go to the next page of the Vector Directory Number screen.

The system displays the **Vector Directory Number** screen ([Figure 185: Vector Directory Number screen](#) on page 754).

Figure 185: Vector Directory Number screen

change vdn 50300	Page 2 of 3
VECTOR DIRECTORY NUMBER	
MEET-ME CONFERENCE PARAMETERS:	
Conference Access Code: 123456	
Conference Controller:	
Conference Type: expanded	
Route-to Number: 850280	

3. In the **Conference Type** field, you can enter the conference type to be a **6-party** or **Expanded**. The default for this field is **6-party**.
4. In the **Route-to Number** field, enter the administered unique UDP extension for the VDN.
5. Press **Enter** to save your changes.

Note:

The Route-to Number can have a maximum of 16 digits, and must be unique across all Expanded Meet-me Conference VDNs.

Setting language translations

If Language translations are enabled for your system, users can view Expanded Meet-me Conferencing displays in a user-defined language:

1. Type **change display-messages transfer-conference**.

The system displays the **Language Translations** screen.

Figure 186: Language Translations screen



```
LANGUAGE TRANSLATIONS
19. English: Mute
Translation: ****
20. English: ^-party conference:
Translation: *****
```

2. In the **^- party conference** field, enter the number of parties on the conference at the time of display, and at the first push of the **conf-dsp** button.
3. The translation display appears on the second line.

End-user procedures for Expanded Meet-me Conferencing

End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Expanded Meet-me Conferencing:

- **Conf-dsp button** - The conf-display button shows real-time updates about an Expanded Meet-me Conference. For more information, see [Expanded Meet-me Conferencing display updates](#) on page 749.
- **Fe-mute** - Far end mute allows the user to selectively mute a party on an Expanded Meet-me Conference. If the conf-dsp button is administered, the user sees a fe-mute button on the display information and can use the far end mute capability.
- **Selective drop** - If the conf-dsp button is administered, a user can use the Drop button on the telephone or station to drop a party from a call. If you are an attendant, you can press the "forced-rel" button. This is an important capability in situations where a conference gets interrupted by a conferee putting the call on hold, or if the Music on Hold feature is active.

Reports for Expanded Meet-me Conferencing

The following reports provide information about the Expanded Meet-me Conferencing feature:

- None

Considerations for Expanded Meet-me Conferencing

This section provides information about how the Expanded Meet-me Conferencing feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Expanded Meet-me Conferencing feature under all conditions. The following considerations apply to Expanded Meet-me Conferencing:

- None

Interactions for Expanded Meet-me Conferencing

This section provides information about how the Expanded Meet-me Conferencing feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Expanded Meet-me Conferencing in any feature configuration.

- Bridged Call Appearance - When callers on a Bridged Call Appearance dial into an Expanded Meet-me Conference, both sets of callers become a single party on the Expanded Meet-me Conference.

Extended User Administration of Redirected Calls

Use Extended User Administration of Redirected Calls to change your lead-coverage path or your call forwarding extension from any on-site or off-site telephone.

Detailed description of Extended User Administration of Redirected Calls

With Extended User Administration of Redirected Calls, a user can change the lead coverage path or the call forwarding extension from any on-site or off-site telephone.

The Extended User Administration of Redirected Calls feature does not change the Call Coverage, Call Forwarding All Calls, or Call Forwarding Busy/Don't Answer features. Extended User Administration of Redirected Calls merely allows a user to select between one of two previously administered coverage paths, or to change the forwarding extension from any telephone.

A user must enter both a feature access code (FAC) and a station security code (SCC) to use Extended User Administration of Redirected Calls from an:

- On-site telephone that is not assigned to the user
- Off-site telephone



SECURITY ALERT:

The system logs invalid extensions and invalid SCCs as security violations. If you enable Security Violation Notification (SVN), the system displays the following information on the **Monitor Security-Violations Station Security Codes** screen or report:

- The extension or the incoming trunk from which the user dialed the command sequence
- The FAC
- The command string that the user dialed

For more information, see the "Security Violation Notification" feature.

Disabling the telecommuting access extension

If you want to quickly disable Extended User Administration of Redirected Calls for all users, change the **Telecommuting Access Extension** field on the **Telecommuting Access** screen to blank.

Extended User Administration of Redirected Calls and DCS

If your users operate in a Distributed Communication System (DCS) environment, you must assign a different telecommuting access extension to each server. You must tell your users which extension to use for telecommuting access.

A user can use Extended User Administration of Redirected Calls from any of the DCS nodes. A user must dial the telecommuting access extension of the node on which the user telephone is defined, before the user can use any of the extended FACs.

Extended User Administration of Redirected Calls and Class of Service (COS)

[Table 55: COS and Extended User Administration of Redirected Calls and Call Forwarding](#) on page 758 shows the relationship between Class of Service (COS) and the ability to forward calls from the telephone that is assigned to a user without a security code, or from any on-site or off-site telephone with a security code.

Table 55: COS and Extended User Administration of Redirected Calls and Call Forwarding

If the COS of the user is set as follows:				The user can:	
Call Fwd All COS	Call Fwd B/DA COS	Extended Call Fwd Activate All COS	Extended Call Fwd Activate Busy D/A COS	Forward calls from the user telephone without a security code	Forward calls from the user telephone or from another telephone with a security code
Yes	Yes	Yes	Yes	Yes	Yes
No	No	Yes	Yes	No	Yes
Yes	Yes	No	No	Yes	No

Extended User Administration of Redirected Calls and COR

The user Class of Restriction (COR) controls the use of the change coverage option of Extended User Administration of Redirected Calls. If the **Can Change Coverage** field on the **Class of Restriction** screen is set to **y**, the user can use the FAC for Change Coverage Feature Access Code to change the coverage option.

Extended User Administration of Redirected Calls from an off-site telephone

To use Extended User Administration of Redirected Calls from an off-site telephone, a user must first access the telecommuting access extension. If the user makes the request through Direct Inward Dialing (DID), the user must precede the extension with the correct public network prefix. If the user makes the request through a trunk group that is dedicated to remote access, the user must dial the public network number for the trunk group.

The system provides dial tone after the user accesses the telecommuting access extension. After the dial tone, the user can enter only one of the four following FACs that are associated with Extended User Administration of Redirected Calls:

- Extended Call Fwd All Activate
- Extended Call Fwd Busy D/A Activate
- Extended Call Fwd Deactivation
- Change Coverage

Administering Extended User Administration of Redirected Calls

The following steps are part of the administration process for the Extended User Administration of Redirected Calls feature requires the following hardware:

- [Assigning a station security code to a user](#)

This section describes:

- Any prerequisites for administering the Extended User Administration of Redirected Calls feature
- The screens that you use to administer the Extended User Administration of Redirected Calls feature
- Complete administration procedures for the Extended User Administration of Redirected Calls feature

Prerequisites for administering Extended User Administration of Redirected Calls

You must complete the following actions before you can administer the Extended User Administration of Redirected Calls feature:

- Ensure that the feature is enabled for your system.
- Assign a telecommuting access extension for your system.
- Assign the following extended feature access codes (FACs) for your system.
 - Extended Call FWD Activates Busy D/A
 - Extended Call Fwd Activate All
 - Extended Call Fwd Deactivation
 - Change Coverage
- Assign the Class of Service (COS) for extended forwarding.
- Assign a Class of Restriction (COR) that allows a user to change coverage from an on-site or an off-site telephone.
- View the **Optional Features** screen, and ensure that the **Cvg Of Calls Redirected Off-Net** field is set to **y**. If the **Cvg Of Calls Redirected Off-net** field is set to **n**, your system is not enabled for the Extended User Administration of Redirected Calls feature. Contact your Avaya representative before you continue with this procedure.


To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

To assign a telecommuting access extension for your system:

1. Type **add telecommuting-access**. Press **Enter**.

The system displays the **Telecommuting Access** screen ([Figure 187: Telecommuting Access screen](#) on page 760).

 Figure 187: Telecommuting Access screen

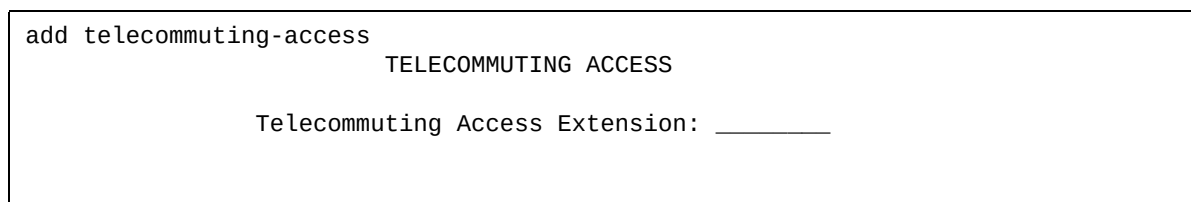

```
add telecommuting-access
                        TELECOMMUTING ACCESS

                        Telecommuting Access Extension: _____
```

2. In the **Telecommuting Access Extension** field, type an extension that conforms to your system dial plan. This extension can consist of 1 to 7 digits.
3. Press **Enter** to save your changes.

To assign the extended FACs for your system:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Codes (FAC)** screen ([Figure 188: Feature Access Code \(FAC\) screen](#) on page 761).

Figure 188: Feature Access Code (FAC) screen

change feature-access-codes
Page 1 of 7

FEATURE ACCESS CODE (FAC)

Abbreviated Dialing List1 Access Code: ____	
Abbreviated Dialing List2 Access Code: ____	
Abbreviated Dialing List3 Access Code: ____	
Abbreviated Dial - Prgm Group List Access Code: ____	
Announcement Access Code: ____	
Answer Back Access Code: ____	
Attendant Access Code: ____	
Auto Alternate Routing (AAR) Access Code: ____	
Auto Route Selection (ARS) Access Code1: ____	Access Code 2: ____
Automatic Callback Activation: ____	Deactivation: ____
Call Forwarding Activation Busy/DA: ____ All: ____	Deactivation: ____
Call Park Access Code: ____	
Call Pickup Access Code: ____	
CAS Remote Hold/Answer Hold-Unhold Access Code: ____	
CDR Account Code Access Code: ____	
Change COR Access Code: ____	
Change Coverage Access Code: ____	
Data Origination Access Code: ____	
Data Privacy Access Code: ____	
Directed Call Pickup Access Code: ____	

2. In the **Change Coverage Access Code** field, type the FAC to change a coverage path from an on-site or an off-site telephone.
3. Click **Next** until you see the **Extended Call Fwd Activate Busy D/A All** field ([Figure 189: Feature Access Code \(FAC\) screen](#) on page 762).

Figure 189: Feature Access Code (FAC) screen

display feature-access-codes	Page 2 of 7
FEATURE ACCESS CODE (FAC)	
Data Origination Access Code:	
Data Privacy Access Code:	
Directed Call Pickup Access Code:	
Emergency Access to Attendant Access Code:	
Enhanced EC500 Activation: *45	Deactivation: *46
Extended Call Fwd Activate Busy D/A All:	Deactivation:
Extended Group Call Pickup Access Code:	
Facility Test Calls Access Code:	
Flash Access Code:	
Group Control Restrict Activation:	Deactivation:
Hunt Group Busy Activation:	Deactivation:
ISDN Access Code:	
Last Number Dialed Access Code: *03	
Leave Word Calling Message Retrieval Lock: *33	
Leave Word Calling Message Retrieval Unlock: *34	
Leave Word Calling Send A Message: *35	
Leave Word Calling Cancel A Message: *37	
Malicious Call Trace Activation:	Deactivation:
Meet-me Conference Access Code Change:	

4. In the **Extended Call Fwd Activate Busy D/A All** field, type the FAC to activate Call Forwarding from an on-site or an off-site telephone.
5. In the **Call Fwd Activate Busy D/A All Deactivation** field, type the FAC to deactivate Call Forwarding from an on-site or an off-site telephone.
6. Press **Enter** to save your changes.

Note:

The system displays the FACs only if the **Cvg Of Calls Redirected Off-Net** field on the **Optional Features** screen is set to **y**.

To assign a Class of Service (COS) for extended forwarding:

1. Type **change cos**. Press **Enter**.

The system displays the **Class of Service** screen ([Figure 190: Class of Service screen](#) on page 763).

Figure 190: Class of Service screen

change cos	CLASS OF SERVICE															Page 1 of 1	
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
Auto Callback	n	y	y	n	y	n	y	n	y	n	y	n	y	n	y	n	
Call Fwd-All Calls	n	y	n	y	y	n	n	y	y	n	n	y	y	n	n	y	
Data Privacy	n	y	n	n	n	y	y	y	y	n	n	n	n	y	y	y	
Priority Calling	n	y	n	n	n	n	n	n	n	y	y	y	y	y	y	y	
Console Permissions	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Off-hook Alert	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Client Room	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Restrict Call Fwd-Off Net	n	y	y	y	y	y	y	y	y	y	y	y	y	y	y	y	
Call Forward Busy/DA	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Personal Station Access (PSA)	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Extended Forwarding All	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Extended Forwarding B/DA	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Trk-to-Trk Restriction Override	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
QSIG Call Offer Originations	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	
Automatic Exclusion	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	n	

2. In the **Extended Forwarding All** field, type **y** in the column of each COS that allows a user to use extended Call Forwarding.
3. In the **Extended Forwarding B/DA** field, type **y** in the column of the COSs that allow a user to use extended Call Forwarding Busy/Don't Answer.
4. Press **Enter** to save your changes.

To assign a COR to change coverage from an on-site or an off-site telephone:

1. Type **change cor *n***, where *n* is the number of the COR to which you want to assign a COR to change coverage from an on-site or an off-site telephone. Press **Enter**.

The system displays the **Class of Restriction** screen ([Figure 191: Class of Restriction screen](#) on page 764).

Figure 191: Class of Restriction screen

change cor 1		Page 1 of 4
CLASS OF RESTRICTION		
COR Number: 1		
COR Description:		
FRL: 7	APLT? y	
Can Be Service Observed? y	Calling Party Restriction: none	
Can Be A Service Observer? y	Called Party Restriction: none	
Partitioned Group Number: 1	Forced Entry of Account Codes? y	
Priority Queuing? n	Direct Agent Calling? y	
Restriction Override: none	Facility Access Trunk Test? n	
Restricted Call List? n	Can Change Coverage? y	
Access to MCT? y	Fully Restricted Service? n	
Group II Category For MFC: 7	Hear VDN of Origin Annc.? y	
Send ANI for MFE? n	Add/Remove Agent Skills? y	
MF ANI Prefix:	Automatic Charge Display? n	
Hear System Music on Hold? y	PASTE (Display PBX Data on Phone)? y	
	Can Be Picked Up By Directed Call Pickup? n	
	Can Use Directed Call Pickup? n	
	Group Controlled Restriction: inactive	

2. In the **Can Change Coverage?** field, perform one of the following actions:
 - If you want users to change coverage from an on-site or an off-site telephone, type **y**.
 - If you do not want users to change coverage from an on-site or an off-site telephone, type **n**.
3. Press **Enter** to save your changes.

Screens for administering Extended User Administration of Redirected Calls

Screen name	Purpose	Fields
Feature Access Code (FAC)	Specify the FAC for extended administration of Call Forward Busy/Don't Answer and Call Forward All Calls.	● Extended Call Fwd Activate Busy D/A All ● Extended Call Fwd Activate Busy D/A All Deactivation
	Specify the FAC for extended administration of the lead-coverage path.	Change Coverage
Class of Restriction	Administer a COR that allows the use of extended administration of the lead-coverage path.	Can Change Coverage
Class of Service	Administer a Class of Service (COS) that allows the use of extended administration of Call Forward Busy/Don't Answer and Call Forward All Calls.	● Extended Forwarding All ● Extended Forwarding B/DA
Optional Features	Enable Extended User Administration of Redirected Calls.	Cvg Of Calls Redirected Off-Net
Station	Specify a station security code (SSC) for a user.	● Security Code ● Coverage Path 1 ● Coverage Path 2
Telecommuting Access	Define a telecommuting access extension for the system.	Telecommuting Access Extension

Assigning a station security code to a user

To assign a station security code (SSC) to a user:

1. Type **change station n**, where **n** is the number of the user extension to which you want to assign an SSC. Press **Enter**.

The system displays the **Station** screen, ([Figure 192: Station screen](#) on page 766).

Figure 192: Station screen

change station 1014		Page 1 of 3
STATION		
Extension: 1014	Lock Messages? n	BCC: 0
Type:	Security Code:	TN: 1
Port:	Coverage Path 1:	COR: 1
Name:	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Personalized Ringing Pattern: 3	
Data Module? n	Message Lamp Ext: 1014	
Speakerphone: 2-way	Mute button enabled? y	
Display Language? English	Expansion Module?	
Model:		
Survivable GK Node Name:	Media Complex Ext:	
	IP Softphone? y	
	Remote Office Phone? y	

2. In the **Security Code** field, type the SSC.

The **Minimum Security Code Length** field on the **Feature-Related System Parameters** screen determines the length of the SSC.

The user must have a Coverage Path 1 and a Coverage Path 2. For more information, see the "Call Coverage" feature.

3. Press **Enter** to save your changes.

End-user procedures for Extended User Administration of Redirected Calls

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Extended User Administration of Redirected Calls:

- [Changing Call Coverage or activating Call Forwarding from an on-site telephone that is not assigned to the user](#)
- [Deactivating Call Forwarding from an on-site telephone that is not assigned to the user](#)

Changing Call Coverage or activating Call Forwarding from an on-site telephone that is not assigned to the user

To change Call Coverage or to activate Call Forwarding from an on-site telephone that is not assigned to the user:

1. Perform one of the following actions:

- If you want to change the Call Coverage path, dial the Feature Access Code (FAC) for Change Coverage.
- If you want to change Call Forward Busy Don't Answer, dial the FAC for Extended Call Fwd Activates Busy D/A All.

The system generates a dial tone to prompt you for the extension.

2. Perform one of the following actions:

- If the telephone has only bridged appearances, dial the telephone extension and then a pound sign (#).
- If you want the system must use the extension of the currently active bridged appearance, dial the pound sign (#).

3. Dial the station security code (SSC) for the extension, and then a pound sign (#)

The system generates a dial tone to prompt you for the forwarded-to extension

4. Dial the forwarded-to extension

The system generates a confirmation tone to indicate that the forwarded-to extension is valid.

5. Perform one of the following actions:

If the change request is for the first coverage option, dial 1.

If the change request is for the second coverage option, dial 2.

The system generates a confirmation tone to indicate that the coverage is changed.

Deactivating Call Forwarding from an on-site telephone that is not assigned to the user

To deactivate Call Forwarding from an on-site telephone:

1. Dial the Extended Call Fwd Activates Busy D/A All Deactivation FAC

The system generates a dial tone to prompt for the extension.

2. Perform one of the following actions:

- If the telephone has only bridged appearances, dial the telephone extension and then a pound sign (#).
- If you want the system must use the extension of the currently active bridged appearance, dial the pound sign (#).

If you are at a BRI telephone with a display, the system displays all the information that you enter, until you complete the command sequence to change Call Coverage or to activate Call Forwarding.

If you are at a telephone with a display, but the telephone is not a BRI telephone, the pound sign (#) is the last character that the system displays, until you complete the command sequence to change Call Coverage or to activate Call Forwarding.

3. Dial the SSC for the extension, and then a pound sign (#).

The system generates a dial tone to prompt for the forwarded-to extension

Reports for Extended User Administration of Redirected Calls

The following reports provide information about the Extended User Administration of Redirected Calls feature:

- None

Considerations for Extended User Administration of Redirected Calls

This section provides information about how the Extended User Administration of Redirected Calls feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Extended User Administration of Redirected Calls under all conditions. The following considerations apply to Extended User Administration of Redirected Calls:

- None

Interactions for Extended User Administration of Redirected Calls

This section provides information about how the Extended User Administration of Redirected Calls feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Extended User Administration of Redirected Calls in any feature configuration.

- Bridged Appearance

When a user presses the pound key (#) from a bridged appearance immediately after the user dials any of the Feature Access Codes (FACs) for Extended User Administration of Redirected Calls, the system allows the user can administer the extension of the currently active bridged extension. After the user enters the initial pound key (#), the user must dial the station security code (SCC) of the currently active bridged extension to complete the command sequence.

If the station has bridged appearances only, the user must dial a station extension after the FAC to complete the command sequence.

- Call Coverage

Users can use the Extended User Administration of Redirected Calls feature to change the lead coverage path.

The system denies an attempt to activate Send All Calls, if the coverage criteria of the currently active coverage path does not allow Send All Calls.

If a user activates Send All Calls, and then changes the coverage path to a path that does not allow Send All Calls, the Send All Calls button remains lit. If the user changes the coverage path back to a path that allows Send All Calls, Send All Calls is automatically available to the user.

Extended User Administration of Redirected Calls

- Call Forwarding

When Call Forwarding is active, the status lamps for the active features for that extension are lit. When Call Forwarding is deactivated, the status lamps for both Call Forward All Calls and Call Forward Busy/Don't Answer buttons for that extension are not lit.

The system does not support forwarding to an off-network location.

- Distributed Communications System (DCS)

You must assign a different telecommuting access extension for each server. Users can use Extended User Administration of Redirected Calls from any of the DCS nodes. The user must dial the extension of the node on which the telephone of the user is defined before the user dials the FAC.

- Security Violation Notification (SVN)

If you enable SVN, the system tracks and reports Extended User Administration of Redirected Calls security violations for SSCs.

- Tenant Partitioning

The system denies the request if the tenant number of the extension that a user dials is not accessible by the tenant number from which the user dials an FAC for Extended User Administration of Redirected Calls.

If a user dials an FAC from an on-site telephone, the tenant number of the telephone from which the user dials the FAC must have access to the tenant number of the extension that the user dials. If the user dials the FAC from an off-site telephone, the tenant number of the incoming trunk must have access to the tenant number of the extension that the user dials.

Facility and Non-Facility Associated Signaling

Use Facility Associated Signaling (FAS) to allow an ISDN-PRI T1/E1 interface D-channel to carry signaling information for all the bearer (B) channels on its associated spans.

Use Non-Facility Associated Signaling (NFAS) to allow an ISDN-PRI T1/E1 interface D-channel to carry signaling information for as many as 300 bearer (B) channels on its associated spans.

Detailed description of Facility and Non-Facility Associated Signaling

This section provides a detailed description of the Facility and Non-Facility Associated Signaling feature.

Facility Associated Signaling (FAS) allows an ISDN-PRI T1/E1 interface D-channel to carry signaling information for all the bearer (B) channels on its associated spans.

Non-Facility Associated Signaling (NFAS) allows an ISDN-PRI T1/E1 interface D-channel to carry signaling information for up to 300 bearer (B) channels on its associated spans. In other words, a single D-channel can carry signaling information for numerous B-channels that are located on different DS1 circuit packs.

Note:

NFAS is valid for T1/E1 Country Protocol 1 only. Digital T1 service is also sometimes called DS1 to distinguish the service from analog T1 service.

ISDN-BRI trunks do not support NFAS. For more information, see the "ISDN" feature.

D-channel backup with NFAS

With NFAS, you can administer a backup D-channel to improve reliability. The system switches to the backup D-channel, if a signaling link failure occurs on the primary D-channel span.

You administer one D-channel as the primary D-channel, and another D-channel as the secondary D-channel. These assignments ensure that both D-channels are in the same state at the same time, and that neither channel can be used to carry B-channel traffic at any time. The primary D-channel has precedence over the secondary D-channel.

When D-channel backup is activated, the system preserves all calls that are answered. However, some call-related information can be lost. Calls that are not answered when D-channels are switched, can also lose call-related information.

[Figure 193: ISDN-PRI configuration](#) on page 772 shows a possible configuration that involves three **ISDN-PRI**s between a DEFINITY Server and another DEFINITY Server or the public network.

Figure 193: ISDN-PRI configuration

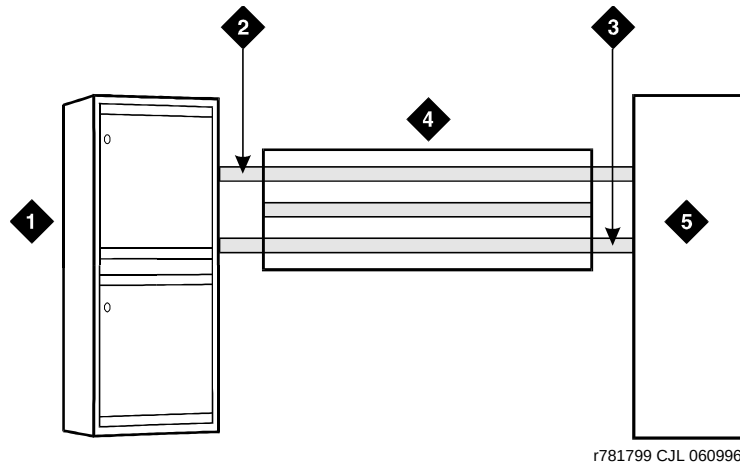 


Figure notes:

1. Avaya Media Server	4. ISDN-PRI controlled by D-channel
2. Secondary D-channel	5. Network far-end DEFINITY server
3. Primary D-channel	

With T1 (24-channel) interfaces, two of the ISDN-PRIs contain a D-channel and 23 B-channels. The other ISDN-PRI contains 24 B-channels. One of the D-channels is the primary D-channel, and the other is the secondary D-channel. Together, this pair of D-channels signals for all 70 (23+24+23) B-channels in the three Primary Rate Interfaces.

Since the D-channels carry signaling for more than one ISDN-PRI facility, D-channel backup requires the use of NFAS. At any given time, one of the two D-channels is carrying Layer 3 signaling messages, while the other D-channel is active at layer 2, but in standby mode only. Any layer 3 messages received over the standby D-channel are ignored. Since only one of the D-channels can be active at a time, load sharing between the two D-channels is not possible. The two D-channels can provide signaling for only a predefined set of B-channels and cannot dynamically back up other D-channels on other interfaces.

D-channel backup activation

- D-channel Failure

If the signaling link fails on the active D-channel, D1, or the hardware that carries the D1 channel fails, the system sends a message over the standby D-channel, D2. D2 then becomes the active D-channel and carries all subsequent signaling messages. When the signaling link or the hardware on D1 recovers from the failure, D1 becomes the standby D-channel.

- System Technician

If a system technician sends a command to a switch over a D-channel, the system tears down the signaling link on D1. Then, the system sends a message on D2 to request that D2 become the active D-channel. D2 then becomes the active D-channel, and the switchover is complete.

Administering Facility and Non-Facility Associated Signaling

The following steps are part of the administration process for the Facility and Non-Facility Associated Signaling feature:

- [Reviewing the guidelines for FAS and NFAS](#)
- [Implementing FAS and NFAS](#)

This section describes:

- Any prerequisites for administering the Facility and Non-Facility Associated Signaling feature
- The screens that you use to administer the Facility and Non-Facility Associated Signaling feature
- Administration procedures for the Facility and Non-Facility Associated Signaling feature

Prerequisites for administering Facility and Non-Facility Associated Signaling

You must complete the following actions before you can administer the Facility and Non-Facility Associated Signaling feature:

- None

Screens for administering Facility and Non-Facility Associated Signaling

Screen name	Purpose	Fields
DS1 Circuit Pack	Define the signaling mode.	Signaling Mode
Interface Links	Create an association between the D-channel on a DS1 circuit pack and the port on the TN765 Processor interface that is used for this link.	All
Processor Channel	Assign processor channels to the link that is administered on the Interface Links screen.	All
Signaling Group	Define the signaling group.	All
Trunk Group	Add trunk ports to the trunk group, and to the signaling group.	● Port ● Sig Grp

Reviewing the guidelines for FAS and NFAS

To review the guidelines for Facility Associated Signaling (FAS) and Non-Facility Associated Signalling (NFAS):

1. Decide which T1/E1 facilities use FAS.
2. Decide which of the remaining T1/E1 facilities carry D-channel signaling information on the sixteenth (E1) or the twenty-fourth (T1) channel. For those channels that have a D-channel backup, D-channel pairs must be allocated.
3. Define Signaling Groups. A Signaling Group is a group of B-channels for which a given D-channel, or D-channel pair, carries the signaling information. Each Signaling Group must be designated as either a FAS or an NFAS Signaling Group.
 - A FAS Signaling Group must contain all the ISDN B-channels on the T1/E1 interface that are associated with the D-channel of the group. An FAS signaling group cannot contain B-channels from any other DS1 circuit pack. For 24-channel DS1 boards, some of the DS1 ports can use in-band, robbed-bit, signaling and be members in a tie trunk group instead of an ISDN trunk group. These tie trunks cannot be members of a Signaling Group.
 - No restriction exists on which T1/E1 ports can belong to an NFAS Signaling Group. Normally, an NFAS Signaling Group consists of one or two D-channels, and several complete T1/E1 interfaces.

- If a Signaling Group contains only a subset of the B-channels of a T1/E1 interface (ports 1 to 12, for example), the group is considered to be an NFAS Signaling Group, not an FAS Signaling Group. The remaining B-channels on the T1/E1 interface are then assigned as members of another NFAS Signaling Group.
4. You must assign an Interface ID to each T1/E1 facility in an NFAS Signaling Group. For example, if the B-channels in a Signaling Group span three T1/E1 facilities, you must assign a unique Interface ID to each of the three facilities. This designation is required to uniquely identify the same B-channel (port) number on each of the T1/E1 facilities in the Signaling Group. Therefore, this interface must be agreed upon by both sides of the interface, and administered before initialization.
 5. Primary and secondary D-channel backup must be agreed by both sides of the interface, and administered before initialization. If the IDs do not match, the signaling group comes up, but calls fail.

Implementing FAS and NFAS

To implement FAS and NFAS, you must administer the following screens, in the order listed:

1. Administer the **DS1 Circuit Pack** screen.
2. Administer the **Interface Link** screen and associated screens.

You can administer the **Interface Link** screen and associated screens any time after you administer the **DS1 Circuit Pack** screens, with the following restrictions:

- You cannot assign a D-channel on a **Signaling Group** screen, unless the associated link is disabled.
- You cannot assign a trunk member until you administer the associated Signaling Group.

3. Administer the **ISDN-PRI Trunk Group**, **Signaling Group**, and **Trunk Group** screens.

The screens in this administration section show the DS1 interface configuration for NFAS.

Administering the DS1 Circuit Pack screen

To administer the **DS1 Circuit Pack** screen:

1. You must specify the **Signaling Mode** field for each DS1 circuit pack.

In this example, the **Signaling Mode** field set to **isdn-ext**. In this mode, either inband robbed-bit signaling, or a D-channel on another DS1 circuit pack. is used to signal all trunks on this circuit pack.

Figure 194: DS1 Circuit Pack screen

DS1 CIRCUIT PACK	
Location: 1B17	Name: _____
Bit Rate: 2.048	Line Coding: hdb3
Signaling Mode: isdn-ext	
Interface Companding: 5law	
Idle Code: 11111111	
MAINTENANCE PARAMETERS	
Slip Detection? n	Remote Loop-Around Test? n

Administering the Interface Links and Processor Channels screens

To administer the **Interface Links** and **Processor Channels** screens:

1. Complete Steps a and b to administer the **Interface Links** and **Processor Channels** screens for the **ISDN-PRI** interface on DEFINITY SI configurations, if the D-channel is switched through the TN765 Processor Interface (PI) circuit pack:
 - a. Use the **Interface Links** screen to create an association between the D-channel on a **DSI** circuit pack, and the port on a TN765 Processor Interface circuit pack that is used for this link.
 - b. Use the **Processor Channels** screen to assign processor channels to the link that you administered on the Interface Links screen.

Administering the ISDN-PRI Trunk Group, Signaling Group, and Trunk Group Members screens

To administer the ISDN-PRI Trunk Group, Signaling Group, and Trunk Group Members screens:

1. Note the following details shown in the **Signaling Group** screen ([Figure 195: Signaling Group screen \(Group 1\) - D-channel backup, three DS1 interfaces](#) on page 777, [Figure 196: Signaling Group screen \(Group 2\) - no D-channel backup, two DS1 interfaces](#) on page 777, and [Figure 197: Signaling Group screen \(Group 3\) - FAS](#) on page 777):
 - Signaling Group 1 B-channels on **DS1** boards B0 and B1 are signaled by D-channel pair B1524 (see the **Primary D-Channel** field) and B1624 (see the **Secondary D-Channel** field).
 - Signaling Group 2 B-channels on board B1 are signaled by D-channel B1824.
 - Board B0 has no D-channel. The B-channels on board B0 can be signaled by either D-channel pair B1524/B1624 (Signaling Group 1) or D-channel B1824 (Signaling Group 2).

- The **DS1** interface on board B19 (Signaling Group 3) is a Facility Associated Signaling situation. Note that the system does not display the **Secondary D-channel** and **Trunk Board/Interface ID** fields when the **Associated Signaling** field is set to **y**.

Figure 195: Signaling Group screen (Group 1) - D-channel backup, three DS1 interfaces

SIGNALING GROUP			
Group Number : 1		Associated Signaling? n	Max number of NCA TSC: 0
		Primary D-Channel: 1B1524	Max number of CA TSC: 0
		Secondary D-Channel: 1B1624	Trunk Group for NCA TSC: __
Trunk Group for Channel Selection: ____			
Trunk Brd	Interface ID	Trunk Brd	Interface ID
1: 1B15	0	11: ____	__
2: 1B16	1	12: ____	__
3: 1B17	2	13: ____	__
4: ____	__	14: ____	__
5: ____	__	15: ____	__

Figure 196: Signaling Group screen (Group 2) - no D-channel backup, two DS1 interfaces

SIGNALING GROUP			
Group Number : 2		Associated Signaling? n	Max number of NCA TSC: 0
		Primary D-Channel: 1B1824	Max number of CA TSC: 0
		Secondary D-Channel: ____	Trunk Group for NCA TSC: __
Trunk Group for Channel Selection: ____			
Trunk Brd	Interface ID	Trunk Brd	Interface ID
1: 1B17	0	11: ____	__
2: 1B18	1	12: ____	__
3: ____	__	13: ____	__
4: ____	__	14: ____	__
5: ____	__	15: ____	__

Figure 197: Signaling Group screen (Group 3) - FAS

SIGNALING GROUP			
Group Number : 3		Associated Signaling? y	Max number of NCA TSC: 0
		Primary D-Channel: 1B1924	Max number of CA TSC: 0
			Trunk Group for NCA TSC: __
Trunk Group for Channel Selection: ____			

2. In the **Sig Grp** column on the **Signaling Group** Screen ([Figure 198: ISDN-PRI Trunk Group screen - Trunk Members with Required Signaling Group](#) on page 778) perform the following actions:
 - If a **DS1** interface appears in one, and only one, Signaling Group, leave the **Sig Grp** field blank. The system automatically populates the field with the correct Signaling Group.
 - If a **DS1** circuit pack appears in more than one Signaling Group, type the Signaling Group numbers in the appropriate fields.
3. Press **Enter** to save your changes.

Figure 198: ISDN-PRI Trunk Group screen - Trunk Members with Required Signaling Group

Page Y of X

TRUNK GROUP

Administered Members (min/max): xxx/yyy
Total Administered Members: xxx

GROUP MEMBER ASSIGNMENTS

Port	Code	Sfx	Name	Night	Sig Grp
1: 1B1501					—
2: 1B1523					—
3: 1B1601					—
4: 1B1623					—
5: 1B1701					1
6: 1B1709					1
7: 1B1716					2
8: 1B1724					2
9: 1B1801					—
10: 1B1823					—
11: 1B1901					—
12: 1B1923					—
13:					—
14:					—
15:					—

Reports for Facility and Non-Facility Associated Signaling

The following reports provide information about the Facility and Non-Facility Associated Signaling feature:

- None

Considerations for Facility and Non-Facility Associated Signaling

This section provides information about how the Facility and Non-Facility Associated Signaling feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Facility and Non-Facility Associated Signaling under all conditions. The following considerations apply to Facility and Non-Facility Associated Signaling:

- None

Interactions for Facility and Non-Facility Associated Signaling

This section provides information about how the Facility and Non-Facility Associated Signaling feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Facility and Non-Facility Associated Signaling in any feature configuration.

- None

Facility Restriction Levels

Use the Facility Restriction Levels (FRL) feature to restrict some types of calls to specific users. For example, you can use FRL to allow some users to place international calls, but allow other users to place only local calls.

Facility Restriction Levels supports the following capabilities:

- Alternate Facility Restriction Levels (AFRL)

Use AFRL to assign a second set of FRLs within a route pattern or to lines and trunks. For example, you can use an AFRL to disable the ability to place long distance calls when the office is closed.

- Traveling Class Mark (TCM)

TCM allows the system to pass the FRL of a caller from one server to another server. The server that receives the FRL uses the FRL to determine the calling privileges that are assigned to the user.

Detailed description of Facility Restriction Levels

This section provides a detailed description of the Facility Restriction Levels (FRL) feature.

The FRL controls the privileges of the call originator. The system compares the FRL of the call originator with the FRL of the call termination point. The system allows the call to continue if the FRL of the call originator is equal to or greater than the FRL of the:

- Trunk group that is the terminating point of a call that is not an automatic alternate routing (AAR) or an automatic route selection (ARS) call
- Route pattern that is assigned to the trunk that is the terminating point of an AAR or an ARS call

AAR and ARS calls

Originators of AAR and ARS calls

An originator of an AAR or an ARS call can be:

- An attendant
- A telephone user

Facility Restriction Levels

- A remote access user
- A data terminal with a keyboard
- An incoming tie trunk group from a subtending location
- An incoming intertandem tie-trunk group, at a server or a switch
- An incoming access tie trunk group that links a remote main server or a switch to a tandem server or a switch

When the system determines the FRL of the call originator, the system uses the FRL that is assigned to the COR of:

- A telephone user
- All incoming tie trunk groups
- An attendant group for attendant-extended calls
- The individual attendant, if Individual Attendant Access is assigned
- The data module that is associated with a data terminal
- The barrier code that a user dials for a remote access call

If the remote access call does not require a barrier code, no FRL exists.

Call termination points for AAR and ARS calls

A termination point for an AAR or an ARS call can be:

- A tie trunk
 - A tie trunk termination point for an AAR and ARS call can include a common-control switching arrangement (CCSA) access trunk and an enhanced private switched communications services (EPSCS) access trunk.
 - A tie trunk termination point for an AAR and ARS call does not include a release-line trunk (RLT).
- A Wide Area Telecommunications Services (WATS) trunk
- A central office (CO) trunk
- A foreign exchange (FX) trunk
- An integrated services digital network-primary rate interface (ISDN-PRI) trunk

Each of these outgoing trunk groups has a COR that contains an FRL. However, for AAR and ARS calls, the system uses the FRL that you assigned to the route pattern of the trunk group.

AFRL

Use the Alternate Facility Restriction Levels (AFRL) capability to define a second set of facility restriction levels within a route pattern, or for lines or trunks. Attendants and system administrators can activate the AFRLs and change user access to lines and trunks. For example, you can use AFRL to disable the ability to place a long distance call when the office is closed.

AFRL alters the route patterns for originating telephones, originating trunks, and dialed authorization codes. If AFRL is active:

- Traveling Class Mark (TCM) is set to a new FRL value
- The TCM information that the system records in the Call Detail Recording (CDR) records is the value of the AFRL, not the original TCM.

**CAUTION:**

AFRL has an impact on both AAR and ARS call routing because AFRL can change routing preferences. The use of AFRL on tandem and tie-trunk applications can affect entire networks. The system can block calls that are part of a cross-country private network that need to be routed further.

Alt-frl feature button

You can assign an alt-frl button to any attendant console and to any user telephone. The attendant or the user presses the alt-frl button to activate and deactivate the AFRL. The use of the alt-frl button can affect the status of other buttons.

When AFRL is active, the user might notice a change in calling privileges. Consider notifying users of the changes in calling privileges, and prepare your telecommunications department to respond to user inquiries.

Authorization codes

Authorization codes prevent unauthorized access to some system facilities. When a user dials an authorization code, the system checks the code. If the code is invalid, the system generates the intercept tone. If the code is valid, the system uses the COR and the FRL that is associated with the authorization code for further call processing. However, if AFRL is activated, the system uses the AFRL for further call processing.

If the system uses an intertandem tie trunk group for a call, the system output a TCM as the last digit of the number. If the FRL of the intertandem tie-trunk is equal to or greater than the terminating FRL, the system proceeds with call processing. If the FRL of the originator is less than the FRL of the termination point, the system compares the TCM with the FRL of the tie trunk. If the TCM is greater than or equal to the FRL of the tie trunk, the system proceeds with call processing.

Administering Facility Restriction Levels

This section describes the screens that you use for administering the Facility Restriction Levels (FRL) feature.

Screens for administering Facility Restriction Levels

Screen name	Purpose	Fields
AAR Digit Analysis Table	Associate a dialed string with a route pattern, and thus to an FRL.	Route Pattern
ARS Digit Analysis Table	Associate a dialed string with a route pattern, and thus to an FRL.	Route Pattern
Attendant Console	Assign an alt-frl button for the attendant so that the attendant can activate the AFRL capability.	Any available button field in the Feature Button Assignments area
	Assign a COR for the attendant to associate an FRL with the attendant.	COR
Class of Restriction	Assign an FRL to the Class of Restriction (COR).	FRL
Console Parameters	Assign a COR for the attendant group to associate an FRL with the attendant group.	COR
Data Module	Assign a COR for the data module to associate an FRL with the data module.	COR
Remote Access	Assign a COR to the barrier code to associate an FRL with the barrier code.	COR
Route Pattern	Assign an FRL to the trunk group.	FRL
Station	Assign an alt-frl button for a user so that the user can activate the AFRL capability.	Any available button field in the Button Assignments area
	Assign a COR for the user to associate an FRL with the user.	COR

Screen name	Purpose	Fields
Trunk Group	Require that a user enter an authorization code, if the user wants to tandem a call through an Automatic Alternate Routing (AAR) or an Automatic Route Selection (ARS) route pattern.	Auth Code
	Assign a COR for the trunk group to associate an FRL with the trunk group.	COR

End-user procedures for Facility Restriction Levels

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Facility Restriction Levels (FRL):

- Using the Alternate Facility Restriction Levels (AFRL) capability

To use the AFRL capability:

- To activate AFRL, press the alt-frl button.
- To deactivate AFRL, press the alt-frl button.

Reports for Facility Restriction Levels

The following reports provide information about the Facility Restriction Levels feature:

- None

Considerations for Facility Restriction Levels

This section provides information about how the Facility Restriction Levels (FRL) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Facility Restriction Levels under all conditions. The following considerations apply to Facility Restriction Levels:

- Trunk groups

- Use the **Route Pattern** screen to assign the FRL to a trunk group.
- You can use the same trunk group in more than one route pattern.
- The same trunk group can have a different FRL in a different pattern.
- You can assign the same FRL to more than one trunk group.

- General access

Be consistent in FRL assignments. Always use FRL 0 or FRL 1 for a trunk group that everyone can access.

- Route patterns

If you use a range of 0 through 5 in one route pattern, use the same range in another pattern, if all users can access the first-choice route.

Assign a Class of Restriction (COR) with an FRL of 0 to a group of users to restrict the users to local calls. Use any other number for the FRL on your first-choice route pattern.

- Remote access barrier codes

You assign FRLs for remote access users through the remote-access barrier codes. The simplest way to assign these FRLs is to duplicate the on-premises FRLs, and then relate the appropriate barrier code to users who use remote access. For more information, see the "Remote Access" feature.

Interactions for Facility Restriction Levels

This section provides information about how the Facility Restriction Levels feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Facility Restriction Levels in any feature configuration.

- Call Detail Recording (CDR)

If your system uses a 15-digit CDR account, the system overwrites the **FRL** field in the **CDR** record with the account code.

Facility Test Calls

Use the Facility Test Calls feature to make test calls to access specific trunks, dual-tone multifrequency (DTMF) receivers, time slots, and system tones.

Detailed description of Facility Test Calls

This section provides a detailed description of the Facility Test Calls feature.

With the Facility Test Calls feature, you can make test calls to access specific trunks, dual-tone multifrequency (DTMF) receivers, time slots, and system tones.

You can make test calls from any telephone to test specific trunks. Avaya maintenance personnel can make test calls from remote locations.

The system supports four types of facility test calls.

- Trunk test for specific tie trunks or central office (CO) trunks.
You cannot test direct inward dialing (DID) trunks with this feature. Your Class of Restriction (COR) must allow you to use the Facility Access Trunk Test function.
- DTMF receiver test for DTMD receivers that are located on a tone detector or a call classifier/tone detection circuit pack.
- Time slot test for a specific time slot on the time division multiplex (TDM) buses, or the out-of-service time slots.
- System tone test for a specific system tone.

For more information, see the *Avaya Maintenance Procedures* manual.

You can create a feature access code (FAC) for administrators and users to access the Facility Test Calls feature. You can also assign a feature button for a user to access the feature from the user telephone.

Security

 SECURITY ALERT:

Proper administration of Facility Test Calls minimizes the ability of unauthorized persons to gain access to your system. However, you are responsible to properly implement the feature, evaluate and administer the various restriction levels, protect access codes, and distribute the codes only to individuals who are aware of the sensitive nature of the access information. Instruct each authorized user to properly use access codes.

In rare instances, unauthorized individuals use Facility Test Calls to connect to the public network. Applicable tariffs require that the customer pay all network charges for such calls. Avaya Inc. cannot be responsible for charges incurred by such calls, and will not make any allowance or give any credit for charges that result from unauthorized access.

To help secure the Facility Test Calls feature from unauthorized use:

- Remove the access code when the access code is not in use.
- Change the access code from the default value that is set when you receive your system.
- Secure records of the access code.
- Use COR to restrict the number of users who can use the access code.

You can set Logoff Notification to notify you when you log off the system that the Facility Test Calls feature is still enabled. This notification can alert you that an unauthorized activation of the feature has occurred.

Administering Facility Test Calls

This section describes the screens that you use for administering the Facility Test Calls feature.

Screens for administering Facility Test Calls

Screen name	Purpose	Fields
Class of Restriction	Assign an FRL to the Class of Restriction (COR).	FRL

Screen name	Purpose	Fields
Feature Access Code (FAC)	Specify a feature access code (FAC) for Facility Test Calls	Facility Test Calls Access Code
Station (multiappearance)	Assign a trk-ac-alm facility test lamp alarm button for a user.	Any available button field in the Button Assignments area

Reports for Facility Test Calls

The following reports provide information about the Facility Test Calls feature:

- None

Considerations for Facility Test Calls

This section provides information about how the Facility Test Calls feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Facility Test Calls under all conditions. The following considerations apply to Facility Restriction Levels:

- You must use a digital telephone that resides on the local server to make test calls.

Interactions for Facility Test Calls

This section provides information about how the Facility Test Calls feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Facility Test Calls in any feature configuration.

- Service Observing

You cannot use Facility Test Calls for Service Observing.

Feature Access Codes

Use Feature Access Codes (FAC) to provide users with quick access to certain features of the telephone system. When you assign a FAC to a feature, users do not have to program a button on the telephone to use this feature. Instead, users just dial the FAC.

Detailed description of Feature Access Codes

This section provides a detailed description of Feature Access Codes.

Feature Access Codes can contain from one to four characters. These characters can be all digits, or a combination of digits and either an asterisk (*) or a pound sign (#). If you use an asterisk (*) or a pound sign (#), these characters must appear in the first position of the FAC. Before you define a FAC that includes an asterisk or a pound sign, consider that users with analog rotary dial telephones cannot dial these codes.

The asterisk (*) and pound sign (#) are often used in pairs. Use one character plus digits to activate a feature, and the other character plus the same digits to deactivate that feature. For example, say that you use the asterisk (*) and then the digits 2 and 9 to activate the Posted Messages feature. You might then use the pound sign and the same digits 2 and 9 to deactivate the Posted Messages feature.

FACs are divided into four types:

- Access FACs
An access FAC gives a user access to a feature.
- Activate or deactivate FACs
An activate and a deactivate pair of FACs allows a user to activate or deactivate a specific feature.
- Send or Cancel FACs
A send and a cancel pair of FACs allows a user to send or cancel a message.
- Lock or unlock FACs
A lock and an unlock pair of FACs allows a user to lock or unlock the message retrieval capability of a telephone.

Many features already have default FACs assigned. You can use these default FACs, or you can change the default FACs to codes that make more sense to you.

Each FAC must conform to your dial plan, and each FAC must be unique. If you try to define a FAC that is already assigned to another feature, the system warns you of the duplicate FAC. You cannot continue until you change one of the FACs.

Administering Feature Access Codes

The following steps are part of the administration process for the Feature Access Codes feature:

- [Assigning Feature Access Codes](#)
- [Changing or deleting Feature Access Codes](#)

This section describes:

- Any prerequisites for administering Feature Access Codes
- The screens that you use to administer Feature Access Codes
- Complete administration procedures for Feature Access Codes

Prerequisites for administering Feature Access Codes

You must complete the following actions before you can administer Feature Access Codes:

- Ensure that Feature Access Codes are set up in your dial plan. You must have a FAC or Deactivation Access Code (DAC) entry on the dial plan screen for the digit range that you intend to use for your Feature Access Codes. For a description of how to set up your dial plan, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Feature Access Codes

Screen name	Purpose	Fields
Feature Access Code (FAC)	Assign FACs to specified telephone features.	All

Assigning Feature Access Codes

To assign a FAC for a specific feature:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen ([Figure 199: Feature Access Code \(FAC\) screen](#) on page 793).

Figure 199: Feature Access Code (FAC) screen

change feature-access-codes
Page 1 of 8

FEATURE ACCESS CODE (FAC)

Abbreviated Dialing List1 Access Code: ____	
Abbreviated Dialing List2 Access Code: ____	
Abbreviated Dialing List3 Access Code: ____	
Abbreviated Dial - Prgm Group List Access Code: ____	
Announcement Access Code: ____	
Answer Back Access Code: ____	
Attendant Access Code: ____	
Auto Alternate Routing (AAR) Access Code: ____	
Auto Route Selection (ARS) - Access Code 1: ____	Access Code 2: ____
Automatic Callback Activation: ____	Deactivation: ____
Call Forwarding Activation Busy/DA: ____ All: ____	Deactivation: ____
Call Park Access Code: ____	
Call Pickup Access Code: ____	
CAS Remote Hold/Answer Hold-Unhold Access Code: ____	
CDR Account Code Access Code: ____	
Change COR Access Code: ____	
Change Coverage Access Code: ____	
Contact Closure Open Code: ____	Close Code: ____
Contact Closure Pulse Code: ____	

2. In the field next to the specific feature to which you want to assign the FAC, type a FAC that conforms to your dial plan. You might have to scroll through several pages of the **Feature Access Code (FAC)** screen to find the telephone feature that you want.

Some features require more than one FAC. Type a FAC in each required field. For example, type a separate FAC in the **Call Forwarding Activation Busy/DA** field, the **All** field, and the **Deactivation** field.

3. Press **Enter** to save your changes.
4. Ensure that you notify all users about the assigned FACs.

Changing or deleting Feature Access Codes

To change or delete a FAC for a specific feature:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen ([Figure 200: Feature Access Code \(FAC\) screen](#) on page 794).

Figure 200: Feature Access Code (FAC) screen

change feature-access-codes

Page 1 of 8

FEATURE ACCESS CODE (FAC)

Abbreviated Dialing List1 Access Code: ____

Abbreviated Dialing List2 Access Code: ____

Abbreviated Dialing List3 Access Code: ____

Abbreviated Dial - Prgm Group List Access Code: ____

Announcement Access Code: ____

Answer Back Access Code: ____

Attendant Access Code: ____

Auto Alternate Routing (AAR) Access Code: ____

Auto Route Selection (ARS) - Access Code 1: ____

Automatic Callback Activation: ____

Call Forwarding Activation Busy/DA: ____ All: ____

Call Park Access Code: ____

Call Pickup Access Code: ____

CAS Remote Hold/Answer Hold-Unhold Access Code: ____

CDR Account Code Access Code: ____

Change COR Access Code: ____

Change Coverage Access Code: ____

Contact Closure Open Code: ____

Contact Closure Pulse Code: ____

Access Code 2: ____

Deactivation: ____

Deactivation: ____

Close Code: ____

2. In the field next to the feature that you want to change, type a new FAC that conforms to your dial plan over the existing FAC. You might have to scroll through several pages of the **Feature Access Code (FAC)** screen to find the telephone feature that you want.

Some features require more than one FAC. Type a FAC in each required field. For example, type a separate FAC in the **Call Forwarding Activation Busy/DA** field, the **All** field, and the **Deactivation** field.

3. To remove a FAC, delete the existing FAC and leave the field blank.
4. Press **Enter** to save your changes.
5. Ensure that you notify all users about the changed FACs.

Reports for Feature Access Codes

The following reports provide information about Feature Access Codes:

- None

Considerations for Feature Access Codes

This section provides information about how Feature Access Codes behave in certain circumstances. Use this information to ensure that you receive the maximum benefits of Feature Access Codes under all conditions. The following considerations apply to Feature Access Codes:

- None

Interactions for Feature Access Codes

This section provides information about how the Feature Access Codes feature interacts with other features in your system. Use this information to ensure that you receive the maximum benefits of Feature Access Codes in any feature configuration. The following interactions apply to Feature Access Codes:

- None

Troubleshooting Feature Access Codes

This section lists the known or common problems that users might experience with Feature Access Codes:

Problem	Possible cause	Action
The user experiences delays when the user attempts to use a FAC.	You might have a FAC and an extension with the same digits on your dial plan.	Check your dial plan to see if you have a FAC and an extension with the same digits. For more information, see the <i>Administrator's Guide for Avaya Communication Manager</i> .

Group Paging

Use the Group Paging feature to make an announcement over a group of digital speakerphones.

- You can create up to 32 paging groups on one media server.
- Each group can consist of up to 32 extensions.
- You can assign the same extension to different groups.

Detailed Description of Group Paging

With the Group Paging feature, you can create a page group, and assign extensions as members of the group. You assign an identifying extension to each page group, which users dial to page the group. When a user dials the extension of the paging group, Avaya Communication Manager activates the speakers on all the telephones in the group. Speakerphone paging is one-way communication: Group members hear the person place the page, but cannot respond directly.

Restrictions

Pages are not always heard on every telephone in a group. An extension does not transmit a group page if the extension has an active or a ringing call, or if the extension is off-hook. Listeners can drop a page if the listeners disconnect. Pages cannot be heard when the Send All Calls or Do Not Disturb features are activated.

When a group member does not hear the announcement for any of these reasons, the caller is not notified. Therefore, the originator of an important page might want to check with the group members to ensure that all members heard the page.

Controlling access to paging groups

Each paging group is assigned a class of restriction (COR). Thus you can provide or deny access to different classes of users by setting calling permissions appropriately. Note that you can administer CORs so that remote callers can make speakerphone pages. If you do not want to allow remote users to page, you can use the **Class of Restriction** screen to set calling permissions for vector directory numbers (VDNs) and trunk groups so that neither can initiate pages. For more information on CORs, see the "*Class of Restriction*" feature.

Administering Group Paging

The following steps are part of the administration process for the Group Paging feature:

- [Creating a paging group](#)
- [Changing a paging group](#)
- [Viewing all paging groups](#)

This section describes:

- Any prerequisites for administering the Group Paging feature
- The screens that are required to administer the Group Paging feature
- Complete administration procedures for the Group Paging feature

Prerequisites for administering Group Paging

You must complete the following actions before you can administer the Group Paging feature:

- None

Screens for administering Group Paging

Screen Name	Purpose	Fields
Group Paging Using Speakerphones	Create or change a paging group, and add or delete group members.	All
Speakerphone Page Groups	View a list of all existing paging groups.	All

Creating a paging group

To create a new paging group:

1. Type **add group-page *n***, where *n* is a number between **1** and **32**, or type **add group-page next** for the next available group number. Press **Enter**.

The system displays the **Group Paging Using Speakerphone** screen ([Figure 201: Group Paging Using Speakerphone screen](#) on page 799).

Figure 201: Group Paging Using Speakerphone screen

GROUP PAGING USING SPEAKERPHONE			
Group Number: 1		Group Extension: 3210	
Group Name: Sales staff		COR: 5	
GROUP MEMBER ASSIGNMENTS			
Ext	Name	Ext	Name
1: 2009	B. Smith	17:	
2: 2010	R. Munoz	18:	
3: 2011	Y. Lu	19:	
4: 2012	A. Sullivan	20:	
5:		21:	
6:		22:	
7:		23:	
8:		24:	
9:		25:	
10:		26:	
11:		27:	
12:		28:	
13:		29:	
14:		30:	
15:		31:	
16:		32:	

2. In the **Group Extension** field, type the extension that users dial to page the members of this group. In this example, the Group Extension is **3210**.
3. In the **Group Name** field, type the name that you want to assign to this paging group. This name appears on the telephone display of a caller when paging the group. In this example, the Group name is **Sales staff**.
4. In the **COR** field, type the Class of Restriction (COR) that you want to assign to this group. In this example, any user who wants to page this group must have permission to call COR 5.
5. In the **Ext** field in row 1, type the extension of the first member of the paging group. In this example, the extension is **2009**.
6. Type the remaining extensions of the other members of this group. When you save your changes, the software automatically completes the **Name** fields with the names that are associated with the extensions on the **Station** screen.
7. Press **Enter** to save your changes.
Paging is now active on the system.

Changing a paging group

You can add or delete members of a paging group, or modify the other attributes of the group, such as the group name, group extension, or COR.

To change a paging group:

1. Type **change group-page *n***, where *n* is the number of the paging group that you want to change. Press **Enter**.

The system displays the **Group Paging Using Speakerphone** screen ([Figure 201: Group Paging Using Speakerphone screen](#) on page 799).

2. In the **Ext** field, type the extension of a member that you want to add, or delete the extension of a member that you want to remove from the group.
3. Make any changes to the **Group Name**, **Group Extension**, or **COR** fields.
4. Press **Enter** to save your changes.

Viewing all paging groups

To view a list of existing paging groups:

1. Type **list group-page**. Press **Enter**.

The system displays the **Speakerphone Page Groups** screen ([Figure 202: Speakerphone Page Groups screen](#) on page 800).

Figure 202: Speakerphone Page Groups screen

list group-page				
SPEAKERPHONE PAGE GROUPS				
Group Number	Group Extension	Group Name	COR	No. of MEMBERS
11:	696147	AUTO H-grp-page1	15	6
12:	696148	AUTO H-grp-page1	15	2
13:	696149	Test Group 1	1	4
14:	694056	Test Group 2	1	2

Reports for Group Paging

The following reports provide information about the Group Paging feature:

- None

Considerations for Group Paging

This section provides information about how the Group Paging feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Group Paging feature under all conditions.

- None

Interactions for Group Paging

This section provides information about how the Group Paging feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of the Group Paging feature in any feature configuration.

- Attendant Intrusion

Attendants cannot intrude on group pages. If the attendant tries to intrude on the originator of the page, the intrusion attempt succeeds. However, all group page members can hear both the paging originator and the attendant.

- Auto Exclusion and Manual Exclusion

Bridged appearances are not allowed on the page. Therefore, the Auto Exclusion and the Manual Exclusion features are disabled. Auto Exclusion is not activated because there are no bridged appearances to alert when the page terminates.

- Auto Hold

Auto Hold does not put a group page on hold. The page is dropped, and the incoming call is answered.

- Automatic Callback

Automatic Callback is disabled when a user calls an active page group.

Group Paging

- Bridging

Bridging is disabled on this feature. A bridged appearance of a group member does not receive any indication of a call when the page arrives. The bridged appearance cannot bridge onto the page.
- Call Coverage

Pages do not follow the coverage paths of the group members. A page group cannot be a coverage point.
- Call Park

Group members who receive a page cannot park the call.
- Call Pickup and Direct Call Pickup

Other extensions cannot pick up a group page.
- Call Forwarding

Group pages cannot be forwarded.
- Conference

Neither group members who receive a page, nor the originator of the page, can conference the page to other extensions.
- Distributed Communications System (DCS)

Page groups cannot be administered across DCS servers or switches. DCS is not supported.
- Do Not Disturb

If a member of a page group activates Do Not Disturb, that member does not receive pages.
- Go to Cover

The Go to Cover feature is ignored because group pages do not follow coverage.
- Hold

The originator of a group page can put the page on hold, but group members cannot.
- Leave Word Calling

Leave Word Calling (LWC) is disabled. A page group cannot receive messages.
- Manual Signaling

The Manual Signaling feature cannot be assigned to a page group.
- Send All Calls (SAC)

If a member of a page group activates SAC, that member does not receive pages.
- Service Observing

Group page members and page originators cannot be observed while active on a page.

- Transfer
Group members cannot transfer a page.
- Trunks
Trunks cannot be added to a page group.
- Vectoring
Paging groups cannot be explicitly added to a vector path.

Troubleshooting Group Paging

This section lists the known or common problems that users might experience with the Group Paging feature.

Problem	Possible cause	Action
A user gets a busy signal when the user tries to page.	All telephones in the group are busy or off-hook.	Wait a few minutes and try again.
	Send All Calls or Do Not Disturb is activated for all telephones in the group.	Group members must deactivate these features to hear a page.
Some group members do not hear a page.	Send All Calls or Do Not Disturb is activated for the telephones of these group members.	Group members must deactivate these features in order to hear a page.

Hold

Use the Hold feature to temporarily disconnect from a call, use the telephone for another call, and then return to the original call.

Hold supports the following capabilities:

- Automatic Hold

When an attendant or a multifunction telephone user selects a second call, the system automatically puts the active call on hold, and makes the second call active.

Detailed description of Hold

This section provides a detailed description of the Hold feature.

Multiappearance telephone users can use a Hold button to activate Hold. With Automatic Hold, a user can also press a second call appearance to put an active call on hold. The system holds the call at the call appearance that is used for the call. Multiappearance telephone users can hold a call on each call appearance.

Single-line telephone users can use two types of Hold, Soft Hold and Hard Hold.

Soft hold

Use Soft Hold to conference or transfer a call that includes the held call. With Soft Hold, the user can put a call on hold, consult with another party, activate or deactivate a feature, and then return to the soft-held call.

Hard hold

Use Hard Hold to perform operations that do not include the held call. The user can put a call on hold and call another party. The user can then answer a waiting call, transfer or conference the waiting call, or activate or deactivate features.

Automatic Hold

With Automatic Hold, attendants and multifunction telephone can alternate easily between two or more calls. For example, when an attendant or a multifunction telephone user selects a second call, the system automatically puts the active call on hold, and makes the second call active. Automatic Hold is a system-wide capability. If you do not enable Automatic Hold for your system, the system drops the current active call when an attendant or a user selects a second call. A call that is placed in Automatic Hold is in Hard Hold.

To put an active call on hold, without pressing the Hold button, the user presses a second call-appearance button. The second call appearance becomes active. A user can place more than one call on hold. However, the user must keep one call appearance available for other calls.

The controlling telephone can have only one auto-held call on soft hold at a time. A soft hold is the state of a line after the user presses a conference button or a transfer button, but before either process is complete. The controlling telephone is guaranteed the ability to reenter any auto-held call later, unless the auto-held parties disconnect, or the auto-held tone exceeds the auto-held tone time limit.

Administering Hold

The following steps are part of the administration process for the Hold feature:

- [Enabling Automatic Hold](#)
- [Assigning a FAC for CAS remote hold and answer](#)

This section describes:

- Any prerequisites for administering the Hold feature
- The screens that you use to administer the Hold feature
- Complete administration procedures for the Hold feature

Prerequisites for administering Hold

You must complete the following actions before you can administer the Hold feature:

- None

Screens for administering Hold

Screen name	Purpose	Fields
Feature Access Code (FAC)	Define the feature access code (FAC) for centralized attendant services (CAS) attendant remote hold and answer.	CAS Remote Hold/ Answer Hold-Unhold
Feature-Related System Parameters	Enable the Automatic Hold capability for your system.	Auto Hold

Enabling Automatic Hold

To enable Automatic Hold for your system:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen.
2. Click **Next** until you see the **Auto Hold** field ([Figure 203: Feature-Related System Parameters screen](#) on page 808).

Figure 203: Feature-Related System Parameters screen

change system-parameters features page 5

FEATURE-RELATED SYSTEM PARAMETERS

Public Network Trunks on Conference Call: 5	Auto Start? n
Conference Parties with Public Network Trunks: 6	Auto Hold? y
Conference Parties without Public Network Trunks: 6	Attendant Tone? y
Night Service Disconnect Timer (seconds): 180	Bridging Tone? n
Short Interdigit Timer (seconds): 3	Conference Tone? n
Unanswered DID Call Timer (seconds): ____	Intrusion Tone? n
Line Intercept Tone Timer (seconds): 30	Special Dial Tone? n
Long Hold Recall Timer (seconds):	Mode Code Interface? n
Reset Shift Timer (seconds): 0	
Station Call Transfer Recall Timer (seconds): 0	
DID Busy Treatment: tone	
Invalid Number Dialed Intercept Treatment: Announcement ____	
Allow AAR/ARS Access from DID/DIOD? _	
Allow ANI Restriction on AAR/ARS? _	
Use Trunk COR for Outgoing Trunk Disconnect? _	
7405ND Numeric Terminal Display? n	7434ND? n

DISTINCTIVE AUDIBLE ALERTING

Internal: 1	External: 2	Priority: 3
Attendant Originated Calls:		
DTMF Tone Feedback Signal to VRU - Connection: _	Disconnection: _	

3. In the **Auto Hold** field, perform one of the following actions:

- If you want the Automatic Hold capability available to all users on your system, type **y**.
- If you do not want the Automatic Hold capability available to any users on your system, type **n**.

4. Press **Enter** to save your changes.

Assigning a FAC for CAS remote hold and answer

To assign a Feature Access Code (FAC) for Centralized Attendant Service (CAS) remote hold and answer for your system:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen, ([Figure 204: Feature Access Code \(FAC\) screen](#) on page 809).

Figure 204: Feature Access Code (FAC) screen

change feature-access-codes
Page 1 of 7

FEATURE ACCESS CODE (FAC)

Abbreviated Dialing List1 Access Code: ____
Abbreviated Dialing List2 Access Code: ____
Abbreviated Dialing List3 Access Code: ____
Abbreviated Dial - Prgm Group List Access Code: ____
Announcement Access Code: ____
Answer Back Access Code: ____
Attendant Access Code: ____
Auto Alternate Routing (AAR) Access Code: ____
Auto Route Selection (ARS) Access Code1: ____ Access Code 2: ____
Automatic Callback Activation: ____ Deactivation: ____
Call Forwarding Activation Busy/DA: ____ All: ____ Deactivation: ____
Call Park Access Code: ____
Call Pickup Access Code: ____
CAS Remote Hold/Answer Hold-Unhold Access Code: ____
CDR Account Code Access Code: ____
Change COR Access Code: ____
Change Coverage Access Code: ____

Data Origination Access Code: ____
Data Privacy Access Code: ____
Directed Call Pickup Access Code: ____

2. In the **CAS Remote Hold/Answer Hold-Unhold Access Code** field, type the FAC that a CAS attendant can use to:
 - Place calls on hold
 - Answer calls that are held at a remote server that is running Avaya Communication Manager.
3. Press **Enter** to save your changes.

Reports for Hold

The following reports provide information about the Hold feature:

- None

Considerations for Hold

This section provides information about how the Hold feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Hold under all conditions. The following considerations apply to Hold:

- To drop a call that is dialed from a single-line telephone within the first 10 seconds after you complete dialing the call, flash the switch hook.
- A single-line telephone user cannot hold a call that involves an attendant. A multiappearance telephone user can hold a call that involves an attendant, unless the user attempts to conference or transfer the call.
- When only Automatic Hold is involved, and the attendant on an active loop presses a second loop, the system places the active call on Hard Hold.
- The Held Call Timed Reminder does not apply to conference calls, and is not started when a conference is placed on hold.
- Automatic Hold operates in conjunction with the START key or the Automatic Start feature of an attendant console. The START key and the Automatic Start operation have precedence over Automatic Hold, and place an active loop call on soft hold.

Interactions for Hold

This section provides information about how the Hold feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Hold in any feature configuration.

- Automatic Callback

A single-line telephone user cannot receive an Automatic Callback call while a call is on hold.

- Bridged Call Appearance

Any user, who is active on a bridged call, can place the call on hold. If no other users with a bridged call appearance of the same extension are connected to the call, the status lamp at the Bridged Appearance button indicates that the call is on hold. If the primary extension or another bridged appearance is connected to the call, the status lamp at all bridged appearances indicates an active status for the call.

- Centralized Attendant Service (CAS)

Automatic Hold does not affect the operation of **CAS**.

- Distributed Communications System (DCS)

Automatic Hold does not affect the operation of DCS, and is administered separately for each node in a **DCS** network.

- Leave Word Calling (LWC)

A multiappearance telephone user who is on hold can activate **LWC** toward the holding user.

A single-line telephone user cannot activate **LWC** toward another user while a call is on Soft Hold.

- Music-on-Hold

Only one party on hold can hear music.

- Personal Central Office Line (PCOL)

When a user, who is active on a **PCOL** call, puts the call on Hold, the lamp flutters or winks. The status lamp that is associated with the **PCOL** button lamp does not track the busy or idle status of the **PCOL**.

- Priority Calling

Users can receive priority ringing and have a call on soft hold.

Hold

Hot Line Service

Use the Hot Line Service feature to assign a specific destination to which the user of a single-line telephone automatically connects to a destination when the user goes off-hook.

Detailed description of Hot Line Service

This section provides a detailed description of the Hot Line Service feature.

With the Hot Line Service, the user of a single-line telephone can automatically connect to a preassigned destination when the user goes off-hook. You can assign the following numbers as a Hot Line Service destination:

- An attendant
- An extension
- A feature access code (FAC)
- A public telephone number
- A private telephone number

The Hot Line Service destination number must be stored in an Abbreviated Dialing list. When the user goes off-hook, the system automatically routes the call to the stored number, and completes the call as if the user dialed the call.

If an attendant number is the Hot Line Service destination number, the system automatically routes the telephone user to the attendant.

If the appropriate FAC is stored with the number in the Abbreviated Dialing list, the system uses automatic alternate routing (AAR), automatic route selection (ARS), Data Privacy, or Priority Calling.

If the Public Network Access code or the Private Network Access code is the number stored in the Abbreviated Dialing list, the system connects the user to the outside number.

A Direct Department Calling (DDC), a Uniform Call Distribution (UCD), a Terminating Extension Group (TEG) extension, or any individual extension within such a group, can be a Hot Line Service destination.

Hot Line Service does not change the way that a user receives calls. Calls to a user with Hot Line Service are controlled by the Class of Restriction (COR) that you assign to the user extension. Hot Line Service does not affect the recipient of the call.

Administering Hot Line Service

This section describes the screens that you use to administer the Hot Line Service feature

Screens for administering Hot Line Service

Screen name	Purpose	Fields
Abbreviated Dialing List ● System List ● Group List ● Personal List	Store the number that you want the system to use when the user enters the dial code.	Dial Code
Data Modules ● Data Line Module ● MPD/MTDM ● Netcon Data Module ● Processor Interface Data Module ● System Port Data Module ● Packet Gateway (PGATE) ● Netcon Data Module	Specify Hot Line Service information for the data module.	● Special Dialing Option ● Hot Line Destination
Station - single-line	Specify Hot Line Service information for the user.	● Hot Line Destination - Abbreviated Dialing List Number ● Hot Line Destination - Dial Code ● Special Dialing Code

Reports for Hot Line Service

The following reports provide information about the Hot Line Service feature:

- None

Considerations for Hot Line Service

This section provides information about how the Hot Line Service feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Hot Line Service under all conditions. The following considerations apply to Hot Line Service:

- Specify the attendant as the Hot Line Service destination when you want the attendant to screen call originations.
- You can assign Hot Line Service to any number of telephones, with the same or different destinations. The number of users who can use Hot Line Service is limited by the number of entries that you can store in the Abbreviated Dialing lists.
- A Hot Line Service user can activate any feature, but only if the FAC is stored in the Abbreviated Dialing List.

Interactions for Hot Line Service

This section provides information about how the Hot Line Service feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Hot Line Service in any feature configuration.

- Night Service
When Night Service is active, the system redirects the Hot Line Service call.
- Bridged Call Appearance - Single-Line Voice Terminal
A bridged call appearance of a telephone that is administered for Hot Line Service, also places a hot line call automatically when a user goes off-hook on that bridged appearance.
- Loudspeaker Paging Access
You can use Loudspeaker Paging Access with Hot Line Service to provide automatic access to paging equipment.
- Ringback Queuing
If a Hot Line Service call accesses a trunk group with Ringback Queuing, the call can queue, unless the telephone is Termination Restricted by the Class of Service (**COR**). Queuing, when applicable, is automatic on single-line telephones.

Hunt Groups

Use the Hunt Groups feature to set up a group of extensions that can handle multiple calls to a single telephone number. You can choose the call distribution method to route calls. For each call to the number, the system hunts for an available extension in the hunt group, and connects the call to that extension.

A hunt group is especially useful when you expect a high number of calls to a particular telephone number. A hunt group might consist of people who are trained to handle calls on specific topics. For example, the group might be a:

- Benefits department within your company
- Service department for products that you sell
- Travel reservations service
- Pool of attendants

A hunt group might also consist of a group of shared telecommunications facilities. For example, the group might be a:

- Modem pool
- Group of data-line circuit ports
- Group of data modules

Detailed description of Hunt Groups

This section provides a detailed description of the Hunt Groups feature.

The Hunt Groups feature supports the following capabilities:

- [Announcements for hunt groups](#)
- [Call Coverage for hunt groups](#)
- [Call Distribution methods for hunt group types](#)
- [Hunt group extension unavailability](#)
- [Queues for hunt groups](#)
- [TTY hunt groups](#)

Announcements for hunt groups

When an extension is not immediately available, the system plays a recorded announcement to the caller. You can record and assign one delay announcement to each hunt group queue. An announcement can be shared among hunt groups. Usually, a hunt group announcement asks the caller to wait, and says that the call will be answered in the order in which the call was received.

A call that connects to a delay announcement remains in a queue while the system plays the announcement. If the call is not answered by the time that the announcement completes, the caller hears music, if music is administered. If music is not administered, the caller hears silence. When the call starts ringing at the telephone of a hunt group member, the caller hears ringing.

Delay announcement intervals for hunt groups

You can define a delay announcement interval for each hunt group. This interval of 0 to 99 seconds specifies how long a call remains in the queue before the system connects the call to a recorded announcement. When a call enters the queue, the interval starts. If Call Coverage is administered, the Don't Answer interval of 1 to 99 ringing cycles also starts when the call enters the queue. After these intervals start, one of the following processes also starts:

- If the Don't Answer interval expires before the delay announcement interval expires, the system redirects the call to coverage.
- If no coverage point is available, the call remains in the queue. The system connects the call to the delay announcement when the delay announcement interval expires.
- If the delay announcement interval expires before the Don't Answer interval, the system connects the call to a delay announcement. If the announcement is already in use, the system resets the delay announcement interval.

This process continues as above until the call is answered, goes to coverage, connects to an announcement, or ends because the caller hangs up.

If you set the delay announcement interval to 0 seconds, the system automatically connects a call to the announcement. This announcement is called a *forced first announcement*. In this case, the system does not connect the call to a hunt group member until after the announcement. The caller does not hear music.

If the system uses call coverage to redirect a call to another hunt group, the caller does not hear the forced first announcement of either hunt group. However, the caller might hear the first or the second announcement of the covering hunt group.

Analog, aux-trunk, or integrated delay announcements for hunt groups

Delay announcements can be analog, aux-trunk, or digitally integrated. For an analog or aux-trunk announcement, a caller who enters the queue hears the associated announcement the next time that the system plays the announcement. A caller who enters the queue after the announcement starts does not hear the announcement until the announcement starts again. For an integrated announcement, multiple callers can be connected to the same announcement at different times, depending on the available ports.

Example

Assume that a hunt group has the following parameters:

- The queue length is 10 calls.
- The queue warning level is 5 calls.
- The recorded announcement delay is 20 seconds.

All hunt group members are busy. A call enters the queue as the fifth call, which causes the queue warning-level lamp to light. Hunt group members see the lamp, and try to quickly complete their current calls. Meanwhile, the call waits in the queue for 20 seconds, and the system plays the recorded announcement. When a hunt group member becomes available, the first call in the queue connects to that group member. The queue warning-level lamp turns off when the number of calls in the queue falls to four.

Call Coverage for hunt groups

You can set up call coverage for a hunt group. Then if a hunt group queue is full, the system sends new calls to the coverage point.

You can specify one of the following methods to determine how the system distributes calls to members of the hunt group:

- Direct Department Dialing (DDD)
- Uniform Call Distribution (UCD)
- Circular
- Automatic Call Distribution (ACD)
- Expert Agent Selection (EAS)

If a call goes into a hunt group queue, the call stays in the queue for the Don't Answer interval. The system then redirects the call to the coverage point. A call coverage point can be another hunt group.

For more information on setting up call coverage, see the *Administrator's Guide for Avaya Communication Manager*.

Call Distribution methods for hunt group types

The system can use different types of station hunting methods to distribute calls to hunt groups. You specify the call distribution method in the **Group Type** field on the **Hunt Group** screen. The available values for the **Group Type** field depend on how your system is configured.

You have more call distribution options if your company acquires Automatic Call Distribution (ACD) or Expert Agent Selection (EAS). These options are available if the **ACD** and **Expert Agent Selection (EAS)** fields on the **Optional Features** screen are enabled. ACD and EAS distribute calls according to the workloads and the skill levels of the agents in each hunt group. You can use this type of call distribution to track call handling and monitor the efficiency of agents. When you assign ACD to a hunt group, the group is called a *split*. When you assign EAS to a hunt group, the group is called a *skill*.

For more information on EAS, see the *Avaya Communication Manager Call Vectoring and Expert Agent Selection* Guide. For more information on ACD and multiple call handling, see the *Avaya Communication Manager Contact Center Guide to ACD Contact Centers*.

The following table lists the different hunt group types and how each type handles incoming calls.

Group type	Hunting method	Extra software needed
circ (Circular)	The system routes calls in a "round-robin" order. The order in which participating extensions are administered is the order in which calls are directed. The system tracks the last extension in the hunt group to which a call was connected. The next call to the hunt group is directed to the next extension on the list, regardless of idle time.	None
ddc (Direct Department Calling)	Direct Department Calling (DDC) is also known as "hot seat" distribution. The system starts with the first extension in the hunt group, and hunts for an available extension. If the first extension is busy, the system checks the second extension. If the second extension is busy, the system checks the third extension, and so on. When an extension is available, the system rings that extension to connect the call. This type of hunting provides the most equitable distribution of calls. Also, this type of hunting is required for a modem pool, data-line circuit ports, and data modules. When the group is administered as a skill, DDC is unavailable.	None

Group type	Hunting method	Extra software needed
ead-loa (Expert Agent Distribution - Least Occupied Agent)	The system hunts for the available agent who has the highest skill level, and the lowest percentage of work time since the agent logged in.	EAS and Business Advocate
ead-mia (Expert Agent Distribution - Most Idle Agent)	The system hunts for the available agent who has the highest skill level, and the longest idle time since the last call.	EAS
pad (Percent Allocation Distribution)	The system selects from a group of available agents based on a comparison of work time in the skill, and the target allocation for the skill.	
slm (Service Level Maximizer)	The system compares the current skill level for each administered skill to a user-defined call service level target. The system selects only those agents whose other skills have the least need for the service of the agent at the current time.	
ucd-loa (Uniform Call Distribution - Least Occupied Agent)	The system hunts for the agent with the lowest percentage of work time since the agent logged in.	ACD, EAS, and Avaya Business Advocate
ucd-mia (Uniform Call Distribution - Most Idle Agent)	The system hunts for the agent who has been idle the longest since the last call.	None

Hunt group extension unavailability

An extension in a hunt group is unavailable to receive calls if the hunt group member is already handling another call. The extension is unavailable even if the call is not a hunt group call, and even if the telephone is a multi-appearance telephone.

An extension also becomes unavailable if the member presses one of the following buttons:

- Hunt Group Busy, or if the member enters the feature access code (FAC) for Hunt Group Busy Activate.
- Send All Calls
- Call Forwarding All Calls

Hunt Group Busy option

A hunt group member can dial the Hunt Group Busy code and then the hunt group number to make the extension of the member unavailable for calls. The extension remains unavailable until the group member dials the Hunt Group Busy deactivation code.

If the last available member of a hunt group tries to activate the Hunt Group Busy option, the following events occur:

- New calls to the hunt group receive a busy tone or go to coverage.
- The system continues to route calls that are already in the queue to the last available extension.
- When the queue is empty, the system activates Hunt Group Busy. At the last available extension, if a status lamp is associated with the **Aux Work** button, the lamp flashes until the queue is empty. When no more calls remain in the queue, Hunt Group Busy activates and if a status lamp is provided, the lamp lights steadily, but does not flash.

If an agent is an ACD split and a hunt group member, the agent in the split usually has an **AUX-work** button that also activates/deactivates Hunt Group Busy. If an agent is the last available member and pushes **AUX-work**, the lamp on the button flashes until the queue is empty. The flashing light means that the agent is still available. When the queue is empty, the lamp lights but does not flash, and Hunt Group Busy takes effect.

Using Send All Calls with hunt groups

If a station activates Send All Calls with the **Send All Calls** button, hunt group calls go in the queue, if a queue is administered. If a queue is not administered, callers get a busy treatment if Send All Calls is activated for all the agents.

If an extension is an agent in an ACD split and a hunt group member, the split agent usually has an **AUX-work** button that also activates and deactivates Hunt Group Busy. If an agent presses the **Send All Calls** button, the agent becomes unavailable for hunt group calls. The agent becomes available for hunt group calls again when the agent presses the **Send All Calls** button again.

Using Call Forwarding All Calls with hunt groups

With Call Forwarding All Calls active, an extension within a hunt group is unavailable for hunt group calls. If a forced first announcement is administered for the hunt group, callers hear the forced first announcement before the system forwards the call.

Queues for hunt groups

You can set up a queue for a hunt group. When all extensions in the group are busy, calls wait in the queue for the next available extension. You set the length of the queue to determine how many calls can wait in the queue.

If all hunt group members are unavailable or the queue is full, the system treats the call in one of the following ways:

- If the call is internal or is carried on a DID (Direct Inward Dialing), DS1 (Digital Signal Level 1), or tie trunk, the caller hears a busy tone.
- If the call is on a central office (CO) trunk, the caller hears ringing, but gets no answer.
- If the hunt group has call coverage, the system sends the call to a coverage point.

You can set up a queue warning level and an associated queue warning indicator lamp. When the queue reaches this level, the lamp lights and remains lit until the queue drops below this level. You can have one lamp for each hunt group queue. Install the lamp so that all members of the hunt group can see the lamp.

TTY hunt groups

Several laws require that "reasonable accommodation" be provided for people with disabilities. For this reason, your company might offer support for callers who use teletypewriters (TTYs).

To accommodate TTY callers, you can create a hunt group that includes agents who are equipped with a TTY. Many TTYs can connect directly to the telephone network by means of analog RJ-11 jacks. However, Avaya recommends that agents be equipped with TTYs that include an acoustic coupler that can accommodate a standard telephone handset. One reason for this recommendation is that a large proportion of TTY users are hearing impaired, but speak clearly. These people often prefer to receive calls on the TTY, and then speak in response. The call center agent must alternate between listening on the telephone and typing on the TTY. This process is easier with an acoustically coupled configuration.

Although TTY-emulation software packages are available for personal computers, few of these software packages can mix voice and TTY on the same call.

For a TTY hunt group, you can record TTY announcements and use announcements for the hunt group queue. To record announcements for TTY, follow the same procedure that you use for voice recordings from your telephone. However, instead of speaking into your telephone to record, type the announcement with the TTY.

As an alternative to creating a TTY hunt group, you can use vectors to process TTY calls. With vectors, you can allow TTY callers and voice callers to use the same telephone number. In this case, you can also record a single announcement that contains both TTY signaling and a voice recording.

Administering Hunt Groups

The following steps are part of the administration process for the Hunt Groups feature:

- [Setting up hunt groups](#)
- [Changing hunt groups](#)
- [Setting up queues for hunt groups](#)
- [Adding hunt group announcements](#)
- [Setting up night service for hunt groups](#)

This section describes:

- Any prerequisites for administering the Hunt Groups feature
- The screens that are used to administer the Hunt Groups feature
- Complete administration procedures for the Hunt Groups feature

Prerequisites for administering Hunt Groups

You must complete the following actions before you can administer the Hunt Groups feature:

- None

Screens for administering Hunt Groups

Screen Name	Purpose	Fields
Announcements/ Audio Sources	Record announcements for hunt groups.	As needed
Class of Service	Change the Class of Service (COS) from the default of 1.	As needed
Coverage Paths	Set up coverage paths for hunt groups.	• Ext • Type • COR • TN • Name • Others as needed
Hunt Group	Add or change hunt groups.	As needed

Screen Name	Purpose	Fields
Call Center Optional Features	To use these call distribution methods for hunt groups, ensure that ACD and Expert Agent Selection (EAS) are set to y .	● ACD ● Expert Agent Selection (EAS)
Trunk Groups	Set up night service for hunt groups.	Night Service Incoming Destination

Setting up hunt groups

To set up a hunt group, you need the following information:

- The telephone number for the hunt group
- The number of people answering calls
- The call distribution method for the hunt group

To set up a hunt group:

1. Type **add hunt-group next**. Press **Enter**.

The system displays the **Hunt Group** screen ([Figure 205: Hunt Group screen](#) on page 826). The **Group Number** field is automatically filled in with the next available hunt group number. In the following example, the group number is **4**.

Figure 205: Hunt Group screen

Page 1 of X

HUNT GROUP

Group Number: 4__	ACD?
Group Name: _____	Vector? _____
Group Type: _____	Coverage Path: _____
TN: _____	Night Service Destination: _____
COR: _____	MM Early Answer? _____
Security Code: _____	
ISDN Caller Disp: _____	
Measured: _____	Supervisor: Extension: _____
Controlling Adjunct: _____	
Multiple Call Handling: _____	
Objective: _____	
Queue Length: _____	
Calls Warning Threshold: _____	Calls Warning Port: _____
Time Warning Threshold: _____	Time Warning Port: _____
Redirect on No Answer (rings): _ Redirect to VDN: _ Forced Entry of Stroke Counts or Call Work Codes? _	

2. In the **Group Name** field, type the name of the group.
3. In the **Group Extension** field, type the hunt group extension.
4. In the **Group Type** field, type the code for the call distribution method that you choose.
5. Press **Enter** to save your changes.

The COS (Class of Service) default for all hunt groups is **1**. Therefore, any changes to COS 1 on the **Class of Service** screen changes the COS for all hunt groups. A **COS** field does not appear on the **Hunt Group** screen.

6. Click **Next** until you see the **Group Member Assignments** page of the **Hunt Group** screen ([Figure 206: Hunt Group screen for group member assignments](#) on page 827).

Figure 206: Hunt Group screen for group member assignments

HUNT GROUP			
Group Number: 4		Group Extension: 3001	Group Type: ucd
Member Range Allowed: 1 - 999		Administered Members (min/max): 1 /9	
		Total Administered Members: 9	
GROUP MEMBER ASSIGNMENTS			
Ext	Name (24 characters)	Ext	Name (24 characters)
1 :		14 :	
2 :		15 :	
3 :		16 :	
4 :		17 :	
5 :		18 :	
6 :		19 :	
7 :		20 :	
8 :		21 :	
9 :		22 :	
10 :		23 :	
11 :		24 :	
12 :		25 :	
13 :		26 :	
More Members Exist			

7. In the **Ext** field, type the extensions of the agents that you want in the hunt group.

8. Press **Enter** to save your changes.

For more information about the other fields on the **Hunt Group** screen , see the *Administrator's Guide for Avaya Communication Manager*.

Changing hunt groups

To change a hunt group:

1. Type **change hunt -group *n***, where *n* is the number of the hunt group. Press **Enter**.

The system displays the **Hunt Group** screen ([Figure 205: Hunt Group screen](#) on page 826).

2. Change the necessary fields.
3. Press **Enter** to save your changes.

Setting up queues for hunt groups

You can configure Avaya Communication Manager to place hunt group calls that cannot be answered immediately in a queue.

You can administer the number of calls that can wait in the queue. You can also administer the system to provide a warning when the number of calls in the queue exceeds a certain value, and when a call waits in the queue longer than a specified number of seconds.

To set up a hunt group queue:

1. Type **change hunt-group *n***, where *n* is the number of the hunt group to change. Press **Enter**.

The system displays the **Hunt Group** screen ([Figure 205: Hunt Group screen](#) on page 826).

2. In the **Queue** field, type **y**.
3. In the **Queue Length** field, type the maximum number of calls that you want to wait in the queue.
4. In the **Calls Waiting Threshold** field, type the number of calls that can be in the queue before the queue status lamps flash.
5. In the **Time Warning Threshold** field, type the number of seconds for a call to wait in the queue before the queue status lamps flash.
6. Press **Enter** to save your changes.

Adding hunt group announcements

You can add recorded announcements to a hunt group queue. Use announcements to encourage callers to stay on the line, or to provide callers with information. You can define how long a call remains in the queue before the caller hears an announcement.

You assign the recorded announcements to an extension. You can type **display announcements** to find the extensions of recorded announcements that are already assigned to extensions. You can use the same announcement for more than one hunt group.

For more information on recording announcements, see the "Announcements" feature description.

To add an announcement to a hunt group queue:

1. Type **change hunt-group *n***, where *n* is the number of the hunt group to which you want to add the announcement. Press **Enter**.

The system displays the **Hunt Group** screen ([Figure 207: Hunt Group screen](#) on page 829).

Figure 207: Hunt Group screen

HUNT GROUP	
Message Center:	_____
AUDIX Extension:	_____
Message Center AUDIX Name:	_____
Primary?	__
Calling Party Number to INTUITY AUDIX?	__
LWC Reception:	_____
AUDIX Name:	_____
Messaging Server Name:	_____
First Announcement Extension:	_____ Delay (sec): _____
Second Announcement Extension:	_____ Delay (sec): _____ Recurring? __

2. In the **First Announcement Extension** field, type the extension of the announcement that you want callers to hear.
3. In the **First Announcement Delay (sec)** field, type the number of seconds that you want the caller to wait before the caller hears the first announcement. If you set the delay announcement interval to **0**, callers automatically hear the announcement immediately. This is called a forced first announcement.
4. Press **Enter** to save your changes.

Setting up night service for hunt groups

You can administer hunt group night service if you want to direct hunt group calls to a night service destination. The destination you administer can be:

- An extension
- A recorded announcement extension
- A vector directory number (VDN)
- Another hunt group extension
- An attendant

To administer night service for a hunt group:

1. Type **change hunt-group n**, where **n** is the number of the hunt group for which you want to administer night service. Press **Enter**.

The system displays the **Hunt Group** screen ([Figure 208: Hunt Group screen](#) on page 830).

Figure 208: Hunt Group screen

HUNT GROUP		
Group Number: 3		ACD? n
Group Name: Accounting		Queue? y
Group Extension: 2011		Vector? n
Group Type: ucd-mia		Coverage Path: 1
TN: 1	Night Service Destination: 1234	
COR: 1	MM Early Answer? n	
Security Code: ____		
ISDN Caller Disp: ____		
Queue Length: 4		
Calls Warning Threshold: ____	Port: x	Extension: ____
Time Warning Threshold: ____	Port: x	Extension: ____

2. In the **Night Service Destination** field, type the night service extension to which the system routes calls.
3. Press **Enter** to save your changes.
4. Program a night service button so that members of the hunt group can activate and deactivate night service. For more information on how to program feature buttons, see the Screen Reference section of the *Administrator's Guide for Avaya Communication Manager*.

Reports for Hunt Groups

The following reports provide information about the Hunt Groups feature:

- None

Considerations for Hunt Groups

This section provides information about how the Hunt Groups feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Hunt Groups feature under all conditions.

- **Members assigned to multiple hunt groups**

An extension can be a member of more than one hunt group. However, a telephone, even a multiappearance telephone, can receive only one hunt group call at a time. On a multiappearance telephone, all appearances must be idle to receive a hunt group call.

You can assign a Coverage Incoming Call Indicator (ICI) button to a multiappearance telephone or an attendant console. When a member receives a call for the hunt group that is associated with the ICI button, the status lamp lights.

- **Automatic Call Distribution (ACD) agents as hunt group members**

Do not include agents in an ACD split in non-ACD hunt groups if the agents also receive ACD split calls. The system distributes all ACD calls to agents in a split before the system distributes hunt group calls.

When you change an ACD split to a non-ACD hunt group, each agent in the split must dial the Hunt Group Busy deactivation code to receive calls for that hunt group. If the agent has an AUX-work button, the status lamp lights when you make the change. The agent can then press the button to become available for hunt group calls.

- **Hunt group for communications devices**

Members of a hunt group that is used for shared data communications must be of the same type. Thus, you can put data modules or analog modems in a hunt group, but not both. Option settings must be the same for all group members.

A caller can still use the Data Extension button to access the associated data module, even if the module is in a hunt group. Individual data modules or modems can originate and receive calls.

- **Access restrictions**

You can use Class of Restrictions (COR) to restrict an extension from receiving calls other than those calls to the hunt group to which the extension is assigned. You can also restrict extensions on Communication Manager from calling the extension of the hunt group.

- **System limits**

The size of your system determines how many hunt groups you can set up, and how many extensions you can assign to each group.

- Trunk signaling

A hunt group always has its own extension. Therefore, a caller with a telephone on Communication Manager can dial that extension to call the hunt group. If a trunk group can pass digits from the central office (CO) to Communication Manager, for example, over a DS1 trunk group, a caller can also dial a 7-digit number. The 7-digit number consists of a specified prefix and the extension of the hunt group.

If a trunk group cannot pass digits from the CO to Communication Manager, the system can connect incoming calls to a hunt group only if the trunk group has the hunt group extension as the primary destination. This requirement includes trunk groups for incoming listed directory number (LDN) calls, international exchange calls, 800 service calls, and automatic tie-trunk calls.

Interactions for Hunt Groups

This section provides information about how the Hunt Groups feature interacts with other features in the system. Use this information to ensure that you receive the maximum benefits of the Hunt Groups feature in any feature configuration.

- Attendant Call Waiting

Attendant Call Waiting does not work for calls that the attendant sends to a hunt group. Attendant Call Waiting does work for calls to individual hunt group members.

- Attendant Return Call

Attendant Return Call does not work for calls that the attendant sends to a hunt group.

- Automatic Callback

Automatic Callback does not work on calls to a hunt group.

- Automatic Call Distribution (ACD)

ACD does not work with circular station hunting.

- Call Detail Recording (CDR)

For each call, the system can record the associated hunt group extension or the member extension that answers.

- Internal Automatic Answer (IAA)

Internal calls to a hunt group member are eligible for Internal Automatic Answer (IAA).

- Leave Word Calling (LWC)

A hunt group can receive and store LWC messages. The following entities can retrieve LWC messages:

- One member of the hunt group
- A covering user of the group
- A system-wide message retriever

The message retriever must have a telephone display, and proper authorization. If the message retriever is a member of the hunt group, you can assign a remote Automatic Message Waiting lamp to the retriever. The lamp indicates when the hunt group has an LWC message.

- Night Service

When the Night Service destination for a hunt group is another hunt group, callers hear the forced announcement of the first hunt group, if a forced first announcement is administered. The system then redirects the call to the night service hunt group.

- Priority Calling

The system treats a priority call to a hunt group the same as a nonpriority call, except that the extension receives a distinctive three-burst ring.

- Queuing

Queuing does not work with circular station hunting.

- Terminating Extension Group (TEG)

A TEG cannot be a member of a hunt group.

- Vectoring

Call vectoring does not work with circular station hunting.

Individual Attendant Access

Use the Individual Attendant Access feature to allow users to call a specific attendant console. If you have more than one attendant console, you can assign an extension to each console. Users can then dial the assigned extension to call an attendant directly.

Detailed description of Individual Attendant Access

This section provides a detailed description of the Individual Attendant Access feature.

With individual attendant extensions, you can also allow attendants to use features that an attendant group cannot use. For example, you can assign individual attendant extensions to hunt groups.

Administering Individual Attendant Access

The following steps are part of the administration process for the Individual Attendant Access feature:

- [Assigning an extension to an attendant console](#)

This section describes:

- Any prerequisites for administering the Individual Attendant Access feature
- The screens that you use to administer the Individual Attendant Access feature
- Complete administration procedures for the Individual Attendant Access feature

Prerequisites for administering Individual Attendant Access

You must complete the following actions before you can administer the Individual Attendant Access feature:

- Set up an attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Individual Attendant Access

Screen name	Purpose	Fields
Attendant Console	Assign an extension to an attendant console.	Extension

Assigning an extension to an attendant console

To assign an extension to an attendant console:

1. Type **add attendant *n***, where *n* is a number between 1 and 28 that you want to assign to the attendant console. Press **Enter**.

The system displays the **Attendant Console** screen ([Figure 209: Attendant Console screen](#) on page 836).

Figure 209: Attendant Console screen

add attendant console
Page 1 of 4

ATTENDANT CONSOLE 2

Type:
Extension:
Console Type:
Port:

Name: operator
Group: 1
TN: 1
COR: 1
COS: 1

Auto Answer: none
Data Module? n
Disp Client Redir? n
Display Language: english

DIRECT TRUNK GROUP SELECT BUTTON ASSIGNMENTS (Trunk Access Codes)

Local Remote

Local Remote

Local Remote

1:
2:
3:
4:

5:
6:
7:
8:

9:
10:
11:
12:

HUNDREDS SELECT BUTTON ASSIGNMENTS

1:
2:
3:
4:

5:
6:
7:
8:

9:
10:
11:
12:

13:
14:
15:
16:

17:
18:
19:
20:

2. In the **Extension** field, type a valid extension that conforms to your dial plan.
3. Press **Enter** to save your changes.

Reports for Attendant Individual Attendant Access

The following reports provide information about the Individual Attendant Access feature:

- None

Considerations for Individual Attendant Access

This section provides information about how the Individual Attendant Access feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Individual Attendant Access under all conditions. The following considerations apply to Individual Attendant Access:

- None

Interactions for Individual Attendant Access

This section provides information about how the Individual Attendant Access feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Individual Attendant Access in any feature configuration.

- None

Intercom

Use the Intercom feature to administer a button that calls a predefined extension when the button is pressed. You can also use Intercom feature to allow one user to call another user in a predefined group just by pressing a couple of buttons.

Detailed description of Intercom

This section provides a detailed description of the Intercom feature.

To control which telephones can make intercom calls to each other, you put the telephones in groups called "intercom groups." Once you add a set of telephones to the group, users can make intercom calls by administering one or both of the following feature buttons on their telephones:

- Automatic Intercom

Users use this button to call one predefined telephone in the same intercom group. You specify the destination extension for this button.

- Dial Intercom

Users in an intercom group use this button to call anyone else in the same group. The user lifts the handset, presses the Dial Intercom button, and then dials a 1digit or a 2 digit code for the extension.

Telephones with both of these capabilities can belong to the same intercom group.

Intercom groups

- You can create up to 32 intercom groups on one server that runs Avaya Communication Manager.
- Each group can contain up to 32 extensions in it.
- You can assign the same extension to different groups.
- Intercom calls are possible only between extensions in the same group.
- Any group member with a feature button for Dial Intercom can make an intercom call to any other member in the group.

Telephones

- You can assign any type of telephone to an intercom group. However, only multiappearance telephones can make and receive intercom calls. Single-line telephones can only receive intercom calls. Multiappearance telephones must have at least one open or available call appearance to receive intercom calls.
- An intercom call makes a unique alerting sound. If the telephone has an intercom button with a status lamp, the lamp also flashes.
- An automatic intercom connection between two telephones, even if the Class of Restriction (COR) does not allow other calls between them.

Administering Intercom

The following steps are part of the administration process for the Intercom feature:

This section describes the screens that you use to administer the Intercom feature.

Screens for administering Intercom

Screen name	Purpose	Fields
Intercom Group	Create groups for intercom.	● DC ● Ext ● Group Number

Reports for Intercom

The following reports provide information about the Intercom feature:

- None

Considerations for Intercom

This section provides information about how the Intercom feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Intercom under all conditions. The following considerations apply to Intercom:

- None

Interactions for Intercom

This section provides information about how the Intercom feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Intercom in any feature configuration.

- Bridged Appearances

Bridged appearances cannot receive Intercom calls.

- Call Coverage

Intercom calls do not follow a coverage path, unless the caller activates Go To Cover.

- Call Forwarding

Intercom calls cannot be forwarded to a destination that is off the network.

- Call Pickup and Directed Call Pickup

Intercom calls are not included in the call pickup alerting count.

- Data Privacy and Data Restriction

Extensions with either of these features active cannot originate Intercom calls.

Internal Automatic Answer

Use the Internal Automatic Answer (IAA) feature to provide a convenient, hands-free way to answer internal calls to users who have multifunction stations with a speakerphone or a headphone.

Detailed description of Internal Automatic Answer

This section provides a detailed description of the Internal Automatic Answer (IAA) feature.

A user can answer an eligible call automatically if the user activates IAA at the answering telephone, and the telephone can accept an incoming call. A telephone cannot accept an incoming call if the telephone is off-hook, in the process of dialing digits, or has a call on hold.

You assign a single programmable feature button to telephones. When the user presses the IAA feature button, the button lamp lights, and the system activates IAA. When the user presses the same button again, the system deactivates IAA, and turns off the status lamp. Pressing the feature button has no effect on a an active call or a ringing call. The IAA button can be toggled on or off at any time, regardless of the state of the telephone. Using the speakerphone to place calls does not affect the state of IAA.

When IAA answers a call, the calling telephone receives a tone. The called telephone answered automatically by a telephone with IAA. The called telephone receives a tone in the form of a ring ping. The called phone then goes off-hook to automatically answer an IAA-eligible call. The system turns on the answering telephone's speaker and the microphone of the called phone.

If a user has IAA active and is currently busy on a call, or in the process of dialing digits, subsequent incoming calls are treated as if IAA were not activated.

The following internal calls are eligible for IAA:

- Station-to-station voice calls, with both telephones on the same server. These calls include redirected intraswitch calls. To use IAA for these calls, you must set the **Internal Auto-Answer of Attd-Extended/Transferred Calls** field on the **Feature-Related System Parameters** screen to **transferred** or **both**.
- Internal call from another node in a Distributed Communications System (DCS) configuration. These calls are from an internal, non attendant telephone on that node and includes redirected inter-DCS calls. To use IAA for these calls, you must set the **Internal Auto-Answer of Attd-Extended/Transferred Calls** field on the **Feature-Related System Parameters** screen to **transferred** or **both**.
- Attendant-extended external calls. You must set the **Internal Auto-Answer of Attd-Extended/Transferred Calls** field on the **Feature-Related System Parameters** screen to **attd-extended** or **both**.

The following calls are ineligible for IAA:

- Calls from public-network trunks, including Private Central Office Line (PCOL)
- Calls from non-DCS tie trunks
- Automatic Callback calls
- Automatic Circuit Assurance calls
- Data calls
- Attendant-extended external calls if you set the **Internal Auto-Answer for Attd Extended/Transferred Calls** field on the **Feature-Related System Parameters** screen to **transferred** or **none**.
- Calls that the system redirects because of an overflow of Emergency Access to the Attendant calls in the queue.
- Calls when you set the **Active Station Ringing** field of the receiving telephone on the **Feature-Related System Parameters** screen to **continuous**.

Administering Internal Automatic Answer

This section describes the screens that you use to administer the Internal Automatic Answer (IAA) feature.

Screens for administering Internal Automatic Answer

Screen name	Purpose	Fields
Feature-Related System Parameters	Set up IAA at a system level.	Internal Auto-Answer of Attd-Extended/Transferred Calls

Reports for Internal Automatic Answer

The following reports provide information about the Internal Automatic Answer (IAA) feature:

- None

Considerations for Internal Automatic Answer

This section provides information about how the Internal Automatic Answer (IAA) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Internal Automatic Answer under all conditions. The following considerations apply to Internal Automatic Answer:

- Users must always deactivate IAA when the users leave the work area. If users do not deactivate IAA, the unattended station might unintentionally answer incoming calls, instead of sending all the calls.
- A 602A terminal is off-hook when the headset or the speakerphone is connected. Therefore, IAA answers a call if all other call appearances are idle.

Interactions for Internal Automatic Answer

This section provides information about how the Internal Automatic Answer (IAA) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Internal Automatic Answer in any feature configuration.

- Attendant Console
IAA is unavailable with Attendant Console.
- Automatic Answer
You cannot administer both IAA and Automatic Answer simultaneously on the same telephone.
- Automatic Call Distribution (ACD)
Calls that are directed to an ACD split are eligible for IAA.
- Automatic Callback
Callback calls by way of Automatic Callback are not answered automatically by IAA.
- Automatic Circuit Assurance (ACA)
Calls that are generated by ACA are ineligible for IAA.
- Bridged Call Appearance - Multiappearance Telephone
Calls that terminate on a bridged call appearance are ineligible for IAA at the bridged station, even if the bridged station has IAA active. However, IAA can be used by the principal station to answer the call.

Internal Automatic Answer

- Bridged Call Appearance - Single-Line Telephone

Calls that terminate to a bridged call appearance are ineligible for IAA at the bridged station, even if the bridged station has IAA active.

- Call Coverage

If an internal call is redirected to another telephone by Call Coverage redirection criteria, that call is eligible for IAA at the redirected telephone.

IAA does not apply to calls to the original called extension when:

- The called telephone has Send All Calls active.
- The calling telephone selects Go to Cover before placing the call

Calls that are directed to a coverage answering group are ineligible for IAA.

Note:

If you set the coverage path for a telephone to All Calls, and that telephone activates IAA, the first coverage point hears a ring. Then the principal station automatically answers, and the coverage-simulated bridge is dropped. The coverage station rings, but is unable to answer the call, because the coverage-simulated bridge was dropped.

- Call Forwarding

Calls to a telephone with IAA and Call Forwarding active are forwarded, and are unanswered by the station dialed.

Note:

If the forwarded-to telephone is internal and has IAA active, the forwarded-to telephone automatically answers the redirected call.

- Call Park

If you are using Deluxe Paging and Call Park times out, the call returns to the originating telephone that parked the call, and is eligible for IAA.

- Call Pickup

IAA can answer internal calls to a telephone in a Call Pickup group. If the called extension in a Call Pickup group has IAA-active, the call is automatically answered. A telephone with IAA active is not able to automatically answer calls to other telephones in its Call Pickup group.

- Conference

IAA can answer internal conference calls. If more than one party has joins a conference call through automatic answer, the parties remain connected until the parties disconnect, or the controlling party drops the call.

- Data Call Setup

Data calls are not eligible for IAA.

- Direct Department Calling (DDC) and Uniform Call Distribution (UCD)

Internal calls to a member of a DDC or a member of a UCD group member are eligible for IAA.

- Distributed Communications System (DCS)

If a call is from an internal telephone on another server or switch in a DCS configuration, that call is considered internal and is eligible for automatic answer.

- Do Not Disturb

Do Not Disturb preempts IAA at the called telephone.

- Go to Cover

IAA does not apply to calls to the original called extension when the calling telephone selects Go to Cover before placing a call.

- ISDN-BRI

IAA is unavailable with ISDN-BRI telephones.

- Loudspeaker Paging - Deluxe Paging

If Call Park times out when you are using Deluxe Paging, the call returns to the originating telephone that parked the call. Such calls are eligible for IAA.

- Ringback Queuing

Automatic calls that are generated by Ringback Queuing are ineligible for IAA.

- Send All Calls

IAA does not apply to calls to extensions with Send All Calls is active.

- Terminating Extension Group (TEG)

Calls to a TEG extension are ineligible for IAA. However, calls to an individual extension are eligible.

Inter-PBX Attendant Service

Use the Inter-PBX Attendant Service (IAS) feature to allow attendants who support multiple locations, to work at a single location.

Detailed description of Inter-PBX Attendant Service

This section provides a detailed description of the Inter-PBX Attendant Service (IAS) feature. With IAS, attendants can work at one location while the attendants support users at other locations. The system routes any incoming trunk calls that are to a user location, and any attendant-seeking calls, over tie trunks to the attendant location.

Administering Inter-PBX Attendant Service

This section contains prerequisites and the screens for administering the Inter-PBX Attendant Service (IAS) feature. The following steps are part of the administration process for the Inter-PBX Attendant Service feature:

- [Enabling Inter-PBX Attendant Service](#)

This section describes:

- Any prerequisites for administering the Inter-PBX Attendant Service
- The screens that you use to administer the Inter-PBX Attendant Service
- Complete administration procedures for the Inter-PBX Attendant Service

Prerequisites for administering Inter-PBX Attendant Service

You must complete the following actions before you can administer the Inter-PBX Attendant Service feature:

- Set up an attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.
- View the **Optional Features** screen, and ensure that the **Centralized Attendant** field is set to **n**. If the **Centralized Attendant** field is set to **y**, your system is not enabled for the Inter-PBX Attendant Service feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Screens for administering Inter-PBX Attendant Service

Screen name	Purpose	Fields
Console Parameters	Enable IAS.	● IAS Att. Access Code ● IAS (Branch)? ● IAS Tie Trunk Group No.

Enabling Inter-PBX Attendant Service

To enable Inter-PBX Attendant Service:

1. Type **change console-parameters**. Press **Enter**.

The system displays the **Console Parameters** screen ([Figure 210: Console Parameters](#) on page 851).

Figure 210: Console Parameters

change console-parameters	Page 1 of 4
CONSOLE PARAMETERS	
Attendant Group Name: OPERATOR	
COS: 0	COR: 0
Calls in Queue Warning: 5	Attendant Lockout? y
Ext Alert Port (TAAS):	
CAS: none	
IAS (Branch)? y	Night Service Act. Ext.:
IAS Att. Access Code:	IAS Tie Trunk Group No.:
Backup Alerting? n	Alternate FRL Station:
Attendant Vectoring VDN:	DID-LDN Only to LDN Night Ext? n

- In the **IAS Att. Access Code** field, type the extension of the attendant group at the main server that runs Avaya Communication Manager.

Note:

You must type **y** in this field if the **IAS (Branch)?** field is set to **y**.

The system displays the **IAS Att. Access Code** field only if the **Centralized Attendant** field on the **Optional Features** screen is set to **n**.

- In the **IAS (Branch)?** field, type **y**.

The system displays this field only if the **Centralized Attendant** field on the **Optional Features** screen is set to **n**.

- In the **IAS Tie Trunk Group No.** field, type the number of the tie trunk group to the main IAS location. Valid entries for the DEFINITY R, CSE, and SI are **1** through **666**. Valid entries for the S8300 Media Server, S8700 IP-Connect, and S8700 Multi-Connect are **1** through **2000**.

Note:

You must complete this field if the **IAS (Branch)?** field is set to **y**.

The system displays this field only if the **Centralized Attendant** field on the **Optional Features** screen is set to **n**.

- Press **Enter** to save your changes.

Reports for Inter-PBX Attendant Service

The following reports provide information about the Inter-PBX Attendant Service (IAS) feature:

- None

Considerations for Inter-PBX Attendant Service

This section provides information about how the Inter-PBX Attendant Service (IAS) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Inter-PBX Attendant Service under all conditions. The following considerations apply to Inter-PBX Attendant Service:

- None

Interactions for Inter-PBX Attendant Service

This section provides information about how the Inter-PBX Attendant Service (IAS) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Inter-PBX Attendant Service in any feature configuration.

- Centralized Attendant Service

IAS does not work with Centralized Attendant Service

ISDN Service

Use the Integrated Services Digital Network (ISDN) Service feature to provide a message-oriented signaling method that allows information to be sent along with a call. The ISDN Service feature also gives you access to a variety of public and private network services and facilities.

The ISDN standard consists of Layers 1, 2, and 3 of the Open System Interconnect (OSI) model. Avaya Communication Manager can be connected to an ISDN by way of the standard frame formats: Basic Rate Interface (BRI) and the Primary Rate Interface (PRI).

Detailed description of ISDN Service

This section provides a detailed description of the Integrated Services Digital Network (ISDN) Service feature.

The ISDN Service feature provides end-to-end digital connections and uses a high-speed interface that provides service-independent access to switched services. Through internationally accepted standard interfaces, an ISDN provides circuit or packet-switched connections within a network, and can link to other ISDN-supported interfaces to provide national and international digital connections.

Note:

This feature description does not contain procedures for working with ISDN trunk groups. Due to the complexity of ISDN technology and the potential consequences of errors, ask your Avaya representative to help you in planning, installing, and administering ISDN trunks.

ISDN supports the following features:

- Call-by-Call Service Selection (CBC)
- Distributed Communications System (DCS). (Only ISDN-PRI supports DCS+ and DCS with Rerouting)
- Electronic Tandem Networks (ETN)
- Facility Associated Signaling (FAS) and Non-Facility Associated Signaling (NFAS), but only with ISDN-PRI.
- Generalized Route Selection (GRS)
- Call Identification Display - Calling Party Number (CPN) and Billing Number (BN)
- Administered Connections and Access Endpoints
- Interworking, or the mixture of ISDN and non-ISDN trunks and stations

- Wideband Switching (H0, H11, H12, and NxDS0, but only with ISDN-PRI.
- QSIG Multivendor Connectivity
- Lookahead Interflow
- Lookahead Routing
- Usage Allocation

Transmission rate and protocols

In ISDN-PRI, the transmission standard for Layer 1 (the physical layer) is either DS1 T1 or E1. The DS1 T1 (used in North America and Japan) is a digital-transmission standard that carries traffic at the rate of 1.544 Mbps, and the E1 (used in Europe) carries traffic at a rate of 2.048 Mbps. The "D" (data) channel multiplexes signaling messages for the "B" (bearer) channels carrying voice or data. In a T1, when a D-channel is present, it occupies Channel 24. In an E1, when a D-channel is present, it occupies channel 16.

Avaya Communication Manager offers several administrable protocols, each of which provides a different set of ISDN services. The following combination of services, including but not limited to Basic Call, Basic Supplementary Services, Supplementary Services with Rerouting, Display, and QSIG Networking are supported on the ISDN-PRI interface. Available services outside the United States vary from country to country.

With ISDN, Communication Manager interfaces with a wide range of other products including servers, network switches, and host computers. These products include earlier releases of servers running Communication Manager, public network switches (for example, AT&T 4ESS, Lucent 5ESS, and Northern Telecom DMS250), and other products adhering to the ISDN signaling protocol.

[Figure 211: ISDN network configuration](#) on page 855 shows an example of how ISDN is used in private and public-network configurations. For example, ISDN can be used to connect a switch to a public-switched network, to other switches, and to computers.

Figure 211: ISDN network configuration

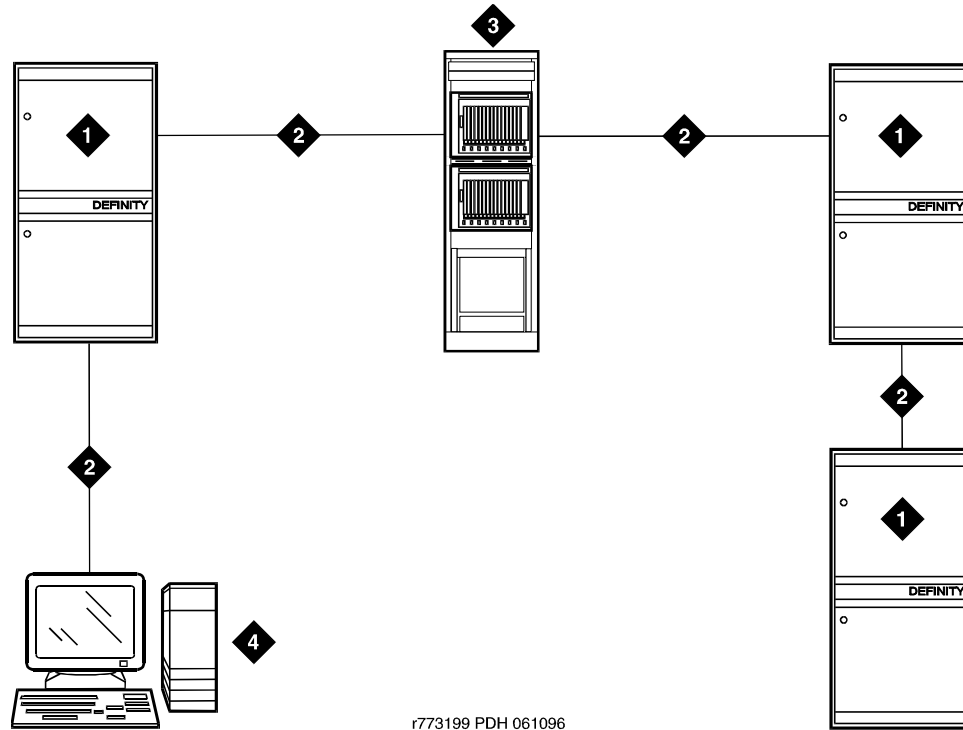 


Figure notes:

1. Avaya Media Server	3. Public switched network
2. ISDN trunk	4. Host computer

AT&T Switched Network protocol

Communication Manager supports the AT&T Switched Network Protocol described in the TR41449 (for 4ESS to common carrier) and TR41459 (for 5ESS to CO) ISDN protocol standards as defined by AT&T. This protocol is used when the DS1 circuit pack is administered for Country Code 1, Protocol Version a. The AT&T Switched Network provides you with the following services.

Access to AT&T Switched Network Services

ISDN provides access to AT&T Switched Network Services. The definition of the **Service Type** field on the **ISDN Trunk Group** screen includes a table that outlines these switched-network services. An ISDN trunk group may be dedicated to a particular feature. Alternately, an ISDN call-by-call trunk group may provide access to several features.

Call Identification Display

ISDN Call Identification Display provides a transparent name and number display for all display-equipped telephones within an ISDN network. The feature is transparent in that the same information can be provided at all ISDN facilities. Telephones using this feature should be digital telephones with a 40-character alphanumeric display. The Merlin hybrid sets with 32-character displays (7315H and 7317H) also support this feature.

ISDN Call Identification Display is provided in addition to the normal Telephone Display and Attendant Display features when the network supports end-to-end ISDN connectivity. When both ISDN and DCS display information are received, either the DCS or ISDN call identification information can be displayed. If only ISDN display information is received, information displays in ISDN format.


The display fields that may be used for ISDN are **Name**, **Number**, **Miscellaneous Call Identification**, and **Reason for Call Redirection**. The display information varies, depending on the type of call, how the call is handled (for example, whether it is redirected or not), and the information is available on the call.

CPN/BN to Host Call Identification

The CPN/BN to Host Call Identification enables CPN and BN information to be passed from Communication Manager to the ISDN Gateway, so that the ISDN Gateway can forward the information to a host for data-screen delivery to agents in an ACD split.

By delivering call-identification information such as CPN/BN and additional Communication Manager information such as the answering-agent's extension to an adjunct network (ISDN Gateway), the adjunct automatically delivers data screens to agents for new calls and call transfers.

[Figure 212: CPN- and BN-to-host configuration](#) on page 857 shows a simplified diagram of a CPN- and BN-to-host arrangement. The ISDN Gateway is a UNIX or MS-DOS computer connected to Communication Manager on one side and to a host computer on the other side. The media server connection is over a synchronous interface with BX.25 protocol.

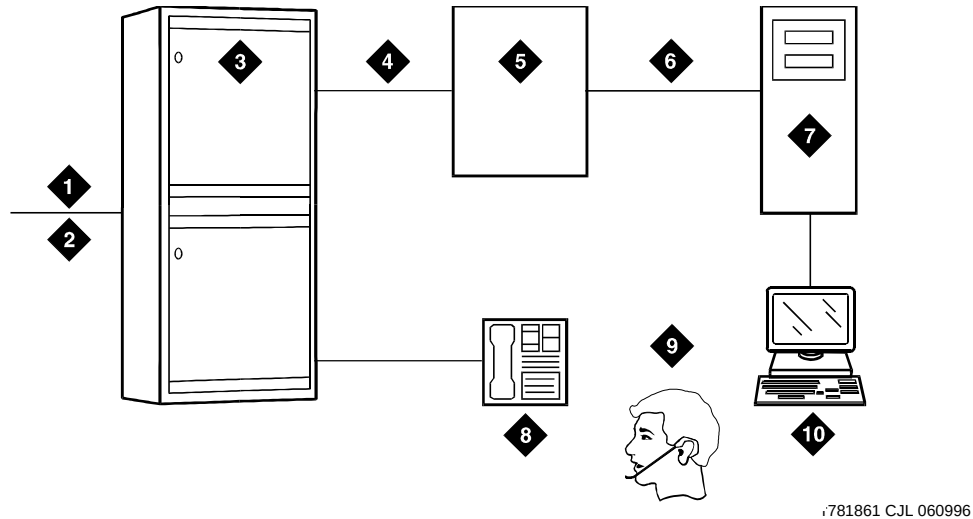 Figure 212: CPN- and BN-to-host configuration**Figure notes:**

1. ISDN trunk	6. Existing interface
2. SID/ANI	7. Host computer
3. Avaya Media Server	8. Telephone
4. BX.25	9. ACD agent position
5. ISDN Gateway	10. Data terminal

Private network services

In addition to providing access to switched-public networks, ISDN provides private-network services by connecting Avaya Communication Manager in an ETN, DCS, or QSIG Network. This gives you more efficient private networks that support new integrated voice and data services. ETN, DCS, and QSIG networking services are provided as follows.

ETN services

Avaya Media Servers that function as tandem nodes in an ETN can be interconnected using DS1 trunking facilities with ISDN. All signaling between the tandem switches is done with ISDN D-channel and normal ISDN protocol. The ISDN can also be used to connect ETN tandem and main servers or switches. In this case, the main server or switch collects all of the address digits from local users as well as users at other satellite and tributary switches, and originates a call over ISDN to the tandem server or switch.

Automatic Alternate Routing (AAR) and Automatic Route Selection (ARS) are used with ISDN and DS1 trunking facilities to access ETN facilities. AAR and ARS are used to collect the dialing information for the call that is originated from the main server or switch.

DCS services

ISDN-PRI facilities can be used in a DCS arrangement whenever tie trunks are used to connect the DCS nodes. Most DCS features are not affected by ISDN-PRI. However, there is a minor impact on a few of the DCS features, as far as the functions that the local and remote media servers or switches perform.

QSIG services

QSIG networking provides compliance to the International Organization for Standardization (ISO) ISDN private-networking specifications. The QSIG Networking platform is supported over the ISDN Basic Call setup protocol. Avaya Communication Manager supports QSIG Supplementary Services.

Wideband Switching (ISDN-PRI only)

Wideband Switching provides support for services that require large bandwidth, such as high-speed video conferencing. Wideband also supports multiple channel calls end-to-end. These services have traditionally been handled by dedicated facilities. With Wideband Switching, dedicated facilities are no longer a requirement for these large bandwidth services.

Call-by-Call Service Selection

Call-by-Call Service Selection allows the same ISDN trunk group to carry calls to a variety of services or facilities. Embodied in this feature is the ability to allocate usage. It provides significant flexibility for creating user-defined incoming and outgoing services and is used on any ISDN trunk group.

Access to Software Defined Data Network

With ISDN, the SDDN service may be accessed. SDDN provides virtual private-line connectivity by way of the switched public network. The services provided by SDDN include voice, data, and video applications. SDDN services complement the ISDN voice services.

Access to Switched Digital International

Switched Digital International (SDI) provides 64 kbps of unrestricted connectivity to international locations by way of the AT&T Switched Network. It is also the backbone for the AT&T International ISDN network. SDI complements the ACCUNET digital service already available to United States locations. This service can be accessed using Call-by-Call Service Selection. SDI provides economical high-speed data transfer to international locations.

National ISDN-2 services

Avaya Communication Manager supports National ISDN-2 (NI-2), which offers many of the same services as the AT&T Switched Network protocol. The NI-2 protocol is used when the DS1 circuit pack is administered for Country Code 1, Protocol Version b.

NI-2 provides users with the following services:

- Calling Line Identification
- Non-Facility Associated Signaling (ISDN-PRI only)
- D-Channel Backup, but with ISDN-PRI only
- Wideband Switching, but with ISDN-PRI only
- Call-by-Call Service Selection

Calling Line Identification

Calling Line Identification for NI-2 is essentially CPN identification, as previously described.

Non-Facility Associated Signaling (ISDN-PRI only)

Non-Facility Associated Signaling (NFAS) allows an ISDN-PRI T1 or E1 Interface D-channel (signaling channel) to convey signaling information for B-channels (voice and data) on ISDN-PRI T1 or E1 facilities other than the facility that contains the D-channel.

D-Channel Backup (ISDN-PRI only)

D-Channel Backup is provided to improve reliability in the event of a signaling-link failure.

Wideband Switching (ISDN-PRI only)

Wideband Switching for NI-2 is essentially the same as that of the AT&T Switched Network ISDN-PRI protocol.

Call-by-Call Service Selection

Call-by-Call Service Selection for NI-2 is essentially the same as that for the AT&T Switched Network ISDN-PRI protocol.

ISDN interworking

ISDN interworking allows calls to use a combination of both ISDN and non-ISDN trunking and station facilities. A non-ISDN trunking facility is any trunk facility supported by the system that does not use the ITU-T recommended Q.931 message set for signaling. Non-ISDN trunking facilities include facilities such as analog trunks, AVD DS1 trunks, and DS1 trunks with bit-oriented signaling (robbed-bit or common channel).

Communication Manager supports the conversion of ISDN signaling to non-ISDN in-band signaling and the conversion of non-ISDN in-band signaling to ISDN signaling for interworking purposes.

A mixture of ISDN and non-ISDN signaling is required in order to provide end-to-end signaling when using different types of trunk or station facilities on a call. [Figure 213: ISDN and non-ISDN interworking](#) on page 860 shows an example of interworking.

Figure 213: ISDN and non-ISDN interworking

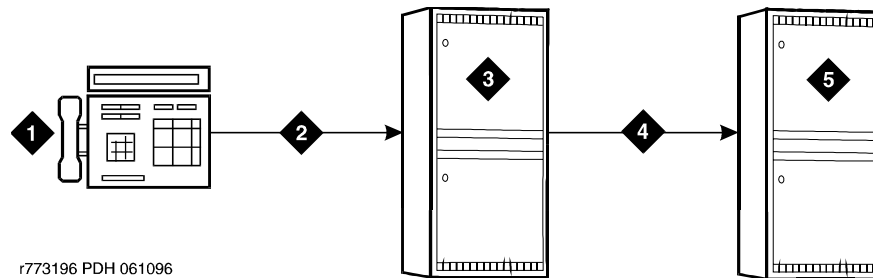 


Figure notes:

1. Call from network to system B	4. Non-ISDN trunk
2. ISDN trunk	5. System B
3. System A	

In this example, a call for someone at Switch B comes into Switch A. Interworking allows the ISDN signaling of the call to be converted at Switch A to non-ISDN in-band signaling before the call forwards to Switch B. Even though the call comes into Switch A on an ISDN trunk, Switch A can send the call to Switch B over a non-ISDN trunk by converting the signaling information.

The system provides accurate CDR billing information on calls that are not interworked. Accuracy of CDR billing information on interworked calls is equivalent to the accuracy provided by the public network.

Communication Manager supports sending a non-ISDN trunk name as the connected name. Therefore, a non-ISDN trunk name can be sent as the connected name even when a call starts out as an ISDN call but is interworked over non-ISDN trunks.

Call Identification Display

Two types of identification numbers are provided with ISDN and may be used in the various types of displays used with ISDN. The two types of identification numbers are as follows:

- **Calling Party Number (CPN):** A 0-15 digit DDD number associated with a specific station. When a system user makes a call that uses ISDN, that user's CPN is provided by the system for ISDN. ISDN public-unknown numbering or ISDN private numbering screens are administered to create a 0-15 digit CPN from a local station number.
- **Billing Number (BN):** The calling party's billing number, which is provided to an inter-exchange network by way of Equal Access or CAMA. This number is stored at either a local or network switch. If a customer is connected directly to the AT&T Switched Network, the BN is the customer's billing number stored in that network. If the CPN is not provided on an incoming ISDN call, the network uses the BN for the station identification number.

The following types of display information are provided with ISDN:

- **Calling party's number**

The calling party's number appears on the called party's display. This number is provided only if the outgoing ISDN trunk group is administered to send the CPN, and if ISDN public-unknown numbering or ISDN private numbering screens are administered to create a CPN. On calls incoming to a system, the network may provide either the CPN or BN as the calling party's number. Extensions and 12-digit international numbers display without dashes. Dashes are only used for 7-digit and 10-digit numbers when North American Area Code is enabled on the Dial Plan screen.
- **Calling party's name**

The calling party's name appears on the called party's display. On calls generated from a DEFINITY server, the caller's name is provided if the ISDN trunk group is administered to send the name to the network. On calls incoming to a DEFINITY server, the (public or private) network may provide the caller's name. If the caller's name is not available, the called party's display shows "CALL FROM" instead, followed by the calling party's number (if available).
- **Connected party's number**

The connected party's number appears on the caller's display. On calls generated from a DEFINITY server, callers' displays may show the digits dialed as the call is made. If the (public or private) ISDN network provides the connected party's number, the calling party's display is updated to show the connected party's number. The format of the connected party's number is the same as that of the calling party's number described previously on calls incoming to a DEFINITY server. The 0-15 digit number of the party who answers the call is provided to the ISDN network only if the incoming ISDN trunk group is administered to send connected number to the network and ISDN public-unknown numbering or ISDN private numbering screens are administered to create a CPN.

Note:

The connected party may be the party actually called, in the event the call is transferred before the connected party answers the call.

- Connected party's name

The connected party's name appears on the calling party's display. On calls generated from a DEFINITY server, the (public or private) ISDN network may provide the connected party's name to the Avaya Communication Manager, when the call is answered. If the connected party's name is not available, the calling party's display shows ANSWERED BY, followed by the connected party's number (if available).

On calls incoming to a DEFINITY server, the connected party's name is provided if the incoming ISDN trunk group is administered to send the name to the network.

Depending on how the media servers or switches that are involved in a call are configured, parties may see none, some, or all the information described above.

Displays for redirected calls

Features such as Call Coverage, Call Forwarding All Calls, Bridged Call Appearance, or Call Pickup redirect calls from the called party's extension to some other destination. Once the redirected call has been connected at its new destination, the displays for the calling, called, and connected parties are as follows:

- Calling party display

a= CONNECTED NAME CONNECTED NUM MISCID

- Called party display

This is the display of the party the caller originally dialed. If this party bridges onto the redirected call after it has been answered, they see:

a= CONFERENCE 2

In this situation, the connected party's display (see below) shows the same information. The calling party's display is also updated if the calling and called parties are on the same server running Communication Manager.

- Connected party display

The connected party is the party who answers the redirected call.

a= CALLING ID to CALLED ID R

The R indicates the reason for redirection. The CALLING ID and the CALLED ID may be the name or the number, depending on the information received from the far end.

Displays for conference calls

Both terminal and attendant conference calls are identified as calls with "n" number of conferees. This display information generates locally and does not change the display shown by another server. If the conference call eventually drops back to a two-party call, the original display information is restored. However, when two DCS and/or ISDN calls (or any possible combination of each) are conferenced and revert to a two-party call, the trunk group of the remaining call displays.

Displays for calls to hunt groups

On ISDN calls to a hunt group extension, the caller's display identifies either the name of the hunt group or the name of the group member who answers the call, depending on hunt group administration.

Displays for calls to Terminating Extension Groups (TEG)

On ISDN calls to a Terminating Extension Group (TEG), the caller's display identifies either the group or the group member who answers the call, depending on administration.

Caller Information Forwarding

With CINFO you can use a vector *collect digits* step to retrieve caller entered digits (ced) and customer database-provided digits (cdpd) supplied by the network in an incoming call's ISDN SET UP message. ISDN is required if the CINFO comes from the network.

Facility Restriction Level (FRL) and Traveling Class Mark (TCM)

The TCM used to pass on the originating facility's FRL is sent by ISDN facilities in the SETUP message only if the trunk services type is tandem.

Information Indicator Digits (II-digits)

With II-digits you can make vector-routing decisions based on the type of the originating line. II-digits are provided for an incoming call by ISDN-PRI. It is a generally available ISDN AT&T Network service.

Malicious Call Trace (MCT)

ISDN calling number identification is sent when MCT notification is activated on an ISDN trunk.

Multiple Subscriber Number (MSN) - Limited

The ISDN standard MSN feature lets you assign multiple extensions to a single BRI endpoint. A side effect of supporting the NT interface is the MSN feature works with BRI endpoints allowing the Channel ID IE to be encoded as "preferred." The endpoint must be administered as the far end of an NT-side ISDN-BRI trunk group. Also, you must use the Uniform Dial Plan (UDP) feature to assign the desired extensions to the "node" at the far end of the trunk group.

Overlap Sending

You can administer overlap sending on AAR and ARS calls routed over ISDN trunk groups. This allows you to send and receive digits one digit at a time instead of enbloc. (With enbloc, digits are not sent until the entire group of digits is received).

Interworking between TGU/TGE trunks and ISDN (Italy)

This modifies ISDN messaging operations in systems that use TGE/TGU trunks to network satellite servers or switches. Messaging from Communication Manager provides appropriate ringback or busy tone to the calling party.

Administering ISDN Service

This section describes the screens that you use to administer the ISDN Service feature.

Screens for administering ISDN Service

Screen name	Purpose	Fields
Access Endpoint	Administer ISDN Service.	● Access Endpoints ● Wideband Access Endpoint
Trunk Groups	Administer incoming calls and trunk groups usage and allocation.	All
ISDN Numbering - Private	Administer private numbering plans.	All
ISDN Numbering - Public/ Unknown	Administer ISDN call identification displays.	All

Reports for ISDN Service

The following reports provide information about the ISDN Service feature:

- None

Considerations for ISDN Service

This section provides information about how the ISDN Service feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of ISDN Service under all conditions. The following considerations apply to ISDN Service:

- None

Interactions for ISDN Service

This section provides information about how the ISDN Service feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of ISDN Service in any feature configuration.

- Australia Malicious Call Trace (MCT)

Avaya Communication Manager with a BRI connection to the Australian public network can notify the network if a user in a private network invokes the MCT feature. This service works on Australian national connections.

- Direct Inward Dialing (DID)

Some public network operators may not offer full DID service on BRI trunks, but instead may offer the BRI equivalent, which typically is called MSN. This is the case if the public network treats the BRI as an endpoint interface rather than a trunk group interface. In such a case, the network only routes up to 10 public numbers to a particular pair of BRI trunks. The network may not let calls overflow from one BRI trunk to another.

- D-Channel Backup

D-Channel Backup is not supported on BRI connections.

- Distributed Communications System

If both DCS and ISDN features are provided over the same facility with a DEFINITY server, DCS displays generally override ISDN displays. However, with Avaya Communication Manager, the ISDN connected name and number can override the DCS called name and number if the **Display Connected Name/Number for ISDN DCS Calls** field is **y** on the **Feature-Related System Parameters** screen.

BRI trunks support DCS if using a BX.25 link to transport the DCS messages. DCS+, also known as DCS Over ISDN D-Channel, according to the AT&T protocol, is not supported on BRI trunks.

- Facility Test Calls

Neither BRI or PRI trunks support Facility Test Calls.

- France VN4 Protocol

The France national VN4 protocol is supported on BRI trunks as ETSI.

- Generalized Route Selection

BRI trunks are capable of carrying 56Kbps or 64Kbps data calls. The link coding that restricts certain PRI trunks to 56Kbps only does not apply to BRI trunks.

- German 1TR6 Protocol

The German national 1TR6 protocol is not supported over BRI trunks.

- Message Sequence Tracer

ISDN-BRI trunks support Message Sequence Tracer. However, certain filtering capabilities available for PRI trunks are not available. Specifically, it is not possible to filter BRI trunk messages based on incoming/outgoing calling/called number.

- Network Access - Public (LEC/AT&T/Other Carriers)

Public-network access using BRI trunks is available but only in those countries that support point-to-point BRI connections. In the U.S., BRI access is offered only by the Local Exchange Carriers and not by Interexchange Carriers such as AT&T.

- Network Access - Private Premises Based

Full support for private-network connections using BRI trunks is available.

- Non-Facility Associated Signaling

Non-Facility Associated Signaling is not supported on BRI connections.

- Temporary Signaling Connections

Avaya Communication Manager does not support Temporary Signaling Connections according to the AT&T protocol on BRI trunk interfaces. Only the QSIG NCA TSC protocol is supported on these interfaces

- Wideband Switching (NxDS0)

Avaya Communication Manager does not support wideband switching on BRI connections.

Last Number Dialed

Use the Last Number Dialed feature to automatically redial the last telephone number that was dialed from the telephone, or from a bridged appearance of the telephone.

Detailed description of Last Number Dialed

This section provides a detailed description of the Last Number Dialed feature.

With the Last Number Dialed feature, users can to automatically redial the last telephone number that was dialed from the telephone, or from a bridged appearance of the telephone.

The system saves the first 24 digits of the last telephone number that was dialed. The system saves the digits for calls that the user places with either manual dialing or Abbreviated Dialing. When a user presses the Last Number Dialed button, or dials the feature access code (FAC) for Last Number Dialed, the system places the call again.

Administering Last Number Dialed

This section provides the screens that you need to administer the Last Number Dialed feature:

Screens for administering Last Number Dialed

Screen name	Purpose	Fields
Attendant Console	Assign the last-numb feature button to an attendant console.	Any available button field in the Feature Button Assignments area
Feature Access Code (FAC)	Assign a FAC for Last Number Dialed.	Last Number Dialed Access Code
Station - multiappearance	Assign the last-numb feature button for a user.	Any available button field in the Button Assignments area

Reports for Last Number Dialed

The following reports provide information about the Last Number Dialed feature:

- None

Considerations for Last Number Dialed

This section provides information about how the Last Number Dialed feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Last Number Dialed under all conditions. The following considerations apply to Last Number Dialed:

- When the user presses the last number dialed button, the system output pulses any special characters that are stored in the Abbreviated Dialing button that was used to place the previous call. Such characters include Pause, Wait, Mark, and Suppress.
- Any delays that a user might encounter when the user dials the call manually, are not repeated when the user uses the Last Number Dialed feature.
- The system does not save Last Number Dialed information to disk, tape, or flash card. The system never saves manually dialed end-to-end, signaling digits.
- A user can enter a partial number, hang up, and use Last Number Dialed, and manually enter the remaining digits. If the user calls from a display telephone, the system does not display the digits that the user enters manually. However, the system completes the call.

Interactions for Last Number Dialed

This section provides information about how the Last Number Dialed feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Last Number Dialed in any feature configuration.

- Abbreviated Dialing

If the previously called number is in an Abbreviated Dialing privileged list, and the Class of Restriction (COR) of the user prevents the user from dialing the number, the system uses Intercept Treatment when the user presses Last Number Dialed. To redial the number, the user must again use the Abbreviated Dialing privileged list.

- Automatic Callback

Users can use Automatic Callback after the users use Last Number Dialed on a call to an internal telephone.

- **Bridged Call Appearance**

Last Number Dialed causes the last number that was dialed from a telephone, or a bridged appearance of the telephone, to be redialed.

- **Centralized Attendant Service (CAS)**

If a CAS attendant attempts to extend a call with Last Number Dialed, the system does not complete the call.

Last Number Dialed

Leave Word Calling

Use the Leave Word Calling (LWC) feature to allow internal system users to leave a short pre-programmed message for other internal users. When the message is stored, the Automatic Message Waiting lamp lights on the called telephone. Users can retrieve LWC messages on a telephone display, Voice Messaging Retrieval, or the AUDIX system. Messages can be retrieved in English, French, Italian, Spanish, or a user-defined language.

Detailed description of Leave Word Calling

This section provides a detailed description of the Leave Word Calling (LWC) feature.

LWC electronically stores a standard message. For example:

CARTER, ANN 2/7 10:45a 2 CALL 3124

This message means that Ann Carter called two times, the last time on the morning of February 7 at 10:45 a.m. She wants a return call to extension 3124.

When the system receives identical messages, the system updates only the date and the time, and number of messages. If nine or more identical messages accumulate, the count remains at nine, and the system updates only the date and time.

Messages can be stored by calling users, called users, and covering users as follows:

A caller who leaves a LWC message can cancel that message, if the message was not already retrieved. To cancel the message, the calling user lifts the handset, presses LWC Cancel or dials the access code, and then dials the extension of the called party.

The system can indicate that one telephone received a LWC message on a second telephone. The system lights a remote Automatic Message Waiting lamp at the remote telephone and the Automatic Message Waiting lamp lights at the called voice terminal. The Remote Automatic Message Waiting lamp is a status lamp associated with a button assigned for this purpose. Thus, the lamp on an assistant's telephone can light when an executive receives a LWC message. If the executive calls to retrieve messages, the assistant knows at a glance if any messages were left.

Users without Voice Terminal Display can have their messages retrieved by a system-wide message retriever or by covering users in their Call Coverage path. They can also use Voice Message Retrieval.

The system restricts unauthorized users from displaying, canceling, or deleting messages. The Lock capability restricts a voice terminal and the Unlock function releases the restriction. To activate Lock, the users dial a system-wide access code. They cancel Lock by first dialing a system-wide access code and then an Unlock security code unique to the voice terminal. These functions apply only to the voice terminal where the function is active. You can assign a status lamp to show the lock status of the voice terminal.

Voice synthesis

Avaya solutions can also provide voice synthesis for LWC, depending on which voice-synthesis circuit pack is installed. This voice synthesis can be either in English or Italian.

Users without telephone display can have their messages retrieved by a system-wide message retriever or by covering users in their Call Coverage path. They can also use Voice Message Retrieval.

With the Leave Word Calling Log External Calls capability, the system can monitor when an external call is not answered. The server keeps a record of as many as 15 calls, provided that the caller identification is available, and the message lamp on the telephone lights. The displays on the telephone shows the names and numbers of unsuccessful callers.

Administering Leave Word Calling

The following steps are part of the administration process for Leave Word Calling:

- None

End-user procedures for Leave Word Calling

Calling user

1. Press the **LWC** button or dial the LWC access code.
2. Dial the desired number.
3. Before the call is answered, if you are a multiappearance voice-terminal user, press **LWC**. If you are a single-line voice-terminal user, press **Recall** and dial the access code.
4. After the call is answered, press **LWC** or **Recall** and dial the access code.

Called user

1. The user answers the call.
2. The called user presses LWC to leave a message for the calling user to return the call.
3. A called user can store an LWC message by dialing the LWC access code only if the called user has an analog voice terminal.

Covering user

A covering user can be through Call Coverage, Call Pickup, or Call Forwarding All Calls.

1. The covering user answers the call.
2. The covering user presses Coverage Callback to store a message for the called user that tells them to return a call the calling user.
3. After answering the call, the covering user presses **LWC** to leave a call-me message for the originally called user.

In addition, a user that was placed on hold can activate LWC and leave a message for the holding user to place a return call.

Considerations for Leave Word Calling

This section provides information about how the Leave Word Calling (LWC) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Leave Word Calling feature under all conditions. The following considerations apply to the Leave Word Calling feature:

- You can administer up to 10 telephones, or nine telephones and the attendant console group as system-wide message retrievers.
- If the stored-message level reaches 95% of capacity, the status lamps that are associated with all Coverage Message Retrieval buttons in the system flash. These lamps continue to flash until the stored-message level falls below 85%. Authorized retrievers can selectively delete messages to gain storage space. The system does not automatically purge old messages.
- LWC messages cannot be stored, canceled, or retrieved for Vector Directory Number extensions.

Interactions for Leave Word Calling

This section provides information about how the Leave Word Calling (LWC) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Leave Word Calling in any feature configuration.

- AUDIX Interface

LWC Cancel cannot be used to cancel an AUDIX message.

Leave Word Calling

- Bridged Call Appearance

A LWC message that is left by a user on a bridged call appearance leaves a message for the called party to call the primary extension for the bridged call appearance. When a user calls a primary extension and activates LWC, the message is left for the primary extension, even if the call was answered at a bridged call appearance.

- Call Coverage

You can use LWC with or without Call Coverage. However, the two features complement each other. LWC provides the Coverage Callback option. Also, a caller can activate LWC for the called party even if the call was answered by a covering user.

- Centralized Attendant Service (CAS)

LWC Message Retrieval does not work with CAS.

- Conference

A member of a conference call cannot activate LWC because the user cannot be uniquely identified. After LWC is activated for a party on a conference or transfer, the origination of the conference or the transfer cannot press Conference/Transfer a second time to return to the original call. The originator must select the call appearance button to return to the previously held call.

- Distributed Communications System (DCS)

LWC works with DCS, but only for 4- digit and 5-digit extension dial plans. LWC works with QSIG for all dial plans of 3- through 7-digits.

- Expert Agent Selection (EAS)

When an EAS agent is logged into a telephone, the agent can only retrieve LWC messages that are left for the login ID of the agent. To retrieve LWC messages that are left for that telephone, the agent must log out.

When an EAS agent is logged into a telephone, the Message lamp of the telephone defaults to tracking the status of LWC messages waiting for the telephone. However, you can assign the Message lamp to track the status of LWC messages waiting for the login ID of the agent.

- Message Waiting Indicator (MWI)

As QSIG does not specify a standard way to light the MWI lamp upon receipt of an LWC message, Avaya's implementation requires systems running Avaya Communication Manager in order to work properly.

- Vector Directory Number (VDN)

LWC messages cannot be stored, cancelled, or retrieved through VDN extensions.

Line Lockout

Use the Line Lockout feature to remove a user with a single-line telephone from service when the user does not hang up after the user receives dial tone or intercept tone.

Detailed description of Line Lockout

This section provides a detailed description of the Line Lockout feature.

Lockout occurs when:

- A user does not hang up after the other party on a call disconnects.
 - The user receives the dial tone for 10 seconds, and then receives the intercept tone for the interval that you administer.
 - You can administer the system to play a special howler tone before the system takes the telephone out of service.
 - If the handset remains off-hook, the system takes the telephone out of service.
- A user pauses for 10 seconds between digits when the user dials numbers.
 - The user receives intercept tone for 30 seconds.
 - If the handset remains off-hook, the system takes the telephone out of service.

The telephone remains out of service until the user hangs up.

Administering Line Lockout

This section describes the screens that you use to administer Line Lockout.

Screens for administering Line Lockout

Screen name	Purpose	Fields
Feature-Related System Parameters	Specify the number of seconds that the system waits before the system removes the telephone of the user from service, after the system generates the warning tone.	Line Intercept Tone Timer
	Specify the tone that the system generates for the last user on a call, until the user hangs up or the system generates the tone for 45 seconds.	Station Tone Forward Disconnect
	Specify the number of seconds that the system allows a telephone with an Off-Hook Class of Service (COS) to remain off-hook before the system sends an emergency call to the attendant.	Time Before Off-hook Alert
System Parameters Country-Options	Enable the system to disconnect calls that are unanswered	Disconnect on No Answer by Call Type
	Enable the system to generate howler tone for users, before the system removes the telephone of the user from service.	Howler Tone After Busy

Reports for Line Lockout

The following reports provide information about the Line Lockout feature:

- None

Considerations for Line Lockout

This section provides information about how the Line Lockout feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Line Lockout under all conditions. The following considerations apply to Line Lockout:

- The out-of-service condition that Line Lockout provides does not tie up switching facilities.
- Line Lockout does not apply to multiappearance telephones.

Interactions for Line Lockout

This section provides information about how the Line Lockout feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Line Lockout in any feature configuration.

- None

Listed Directory Number

Use the Listed Directory Numbers (LDN) feature to allow outside callers to access your attendant group.

Listed Directory Number supports the following capabilities:

- Attendant group access through incoming Direct Inward Dialing (DID) trunks
- Attendant group access through incoming central office (CO) and foreign exchange (FX) trunks

Detailed description of Listed Directory Number

This section provides a detailed description of the Listed Directory Number (LDN) feature.

The system routes both incoming Direct Inward Dialing (DID) calls and incoming foreign exchange (FX) and central office (CO) calls to an attendant group, based on how you administer the trunks.

Incoming DID trunk calls to the attendant group

incoming DID calls only to an extension. The LDN feature allows you to assign one or more extensions to an attendant group. The system uses the LDN extension, or extensions, to route DID calls to an attendant group.

Incoming FX and CO trunk calls to the attendant group

Incoming FX and CO trunks calls can terminate at an attendant group. You can also administer your system to terminate an incoming FX or CO trunk to an:

- Attendant group

If you decide to terminate the call at an attendant group, the system processes the call as an LDN call.

- Extension

The extension can be a vector directory number (VDN), an Automatic Call Distribution (ACD) split, a Direct Department Calling (DDC) group, a Uniform Call Distribution (UCD) group, a remote access extension, or any system extension.

Administering Listed Directory Number

The following steps are part of the administration process for the Listed Directory Number (LDN) feature:

- [Assigning listed directory numbers](#)
- [Assigning an incoming destination to a trunk](#)

This section describes:

- Any prerequisites for administering the Listed Directory Number feature
- The screens that you use to administer the Listed Directory Number feature
- Complete administration procedures for the Listed Directory Number feature

Prerequisites for administering Listed Directory Number

You must complete the following actions before you can administer the Listed Directory Number feature:

- None

Screens for administering Listed Directory Number

Screen name	Purpose	Fields
Listed Directory Numbers	Assign listed directory numbers and an optional, night-service destination.	All
Trunk Group	Assign an incoming destination to a trunk.	Incoming Destination

Assigning listed directory numbers

To assign a listed directory number:

1. Type **change listed-directory-number**. Press **Enter**.

The system displays the **Listed Directory Numbers** screen ([Figure 214: Listed Directory Numbers screen](#) on page 881).

Figure 214: Listed Directory Numbers screen

change listed-directory-number				Page 1 of 2
LISTED DIRECTORY NUMBERS				
Night Destination:				
	Ext	Name	TN	
1:			1	
2:			1	
3:			1	
4:			1	
5:			1	
6:			1	
7:			1	
8:			1	

2. In the **Night Destination** field, type a night destination extension that consists of 1 to 8 digits. The extension must be comprised of the numbers **0** through **9**. The night destination extension receives the calls to the extensions that you type in the **Ext** field, when the Night Service feature is active.

For DEFINITY® CSI, SI, and S8700 IP-Connect, you can type a night service extension, a recorded announcement extension, a Vector Directory Number (VDN), an individual attendant extension, or a hunt group extension.

3. In the **Ext** field, type the number of the extension that you want to use for the LDN feature. The extension number can consist of 1 to 9 digits.
4. In the **Name** field, type the name that you use to identify the listed directory number. The name can consist of 1 to 27 alphanumeric characters.
5. In the **TN** field, type the Tenant Partition number.
6. Repeat Steps 3 through 5 for each extension to which you want to assign a listed directory number.
7. Press **Enter** to save your changes.

Assigning an incoming destination to a trunk

To assign an incoming destination to a trunk:

1. Type **change trunk-group *n***, where *n* is the number of the trunk group to which you want to assign an incoming destination.

The system displays the **Trunk Group** screen ([Figure 215: Trunk Group screen](#) on page 882).

Figure 215: Trunk Group screen

add trunk-group next
Page 1 of x

TRUNK GROUP

Group Number: ____	Group Type: tie____	CDR Reports: _
Group Name: _____	COR: ____	TN: ____ TAC: ____
Direction: _____	Outgoing Display? _	Trunk Signaling Type: ____
Dial Access? _	Busy Threshold: ____	Night Service: _____
Queue Length: ____		Incoming Destination: ____
Comm Type: _____	Auth Code? _	
	Trunk Flash? _	
BCC: _	ITC? ____	

TRUNK PARAMETERS

Trunk Type (in/out): _____	Incoming Rotary Timeout(sec): ____
Outgoing Dial Type: _____	Incoming Dial Type: _____
	Disconnect Timing(msec): ____
Digit Treatment: _____	Digits: ____
	Sig Bit Inversion: none
Analog Loss Group: ____	Digital Loss Group: ____
Incoming Dial Tone? _	
Incoming Calling Number - Delete: ____	Insert: ____ Format: ____
Bit Rate: ____	Synchronization: ____ Duplex: ____
Disconnect Supervision - In? _ Out? _	
Answer Supervision Timeout: ____	Receive Answer Supervision? _

2. In the **Incoming Destination** field, perform one of the following actions:

- If the **Trunk Type** field on the **Trunk Group** screen is not set to **auto**, leave the field blank.
- Type the extension for the incoming calls.

You can type any extension. However, the extension is usually for a VDN, a voice response unit, or a voice messaging system. The Night Service feature overrides the extension that you type in the **Incoming Destination** field.

 CAUTION:

When you assign a Multi-Location Dial Plan shortened extension in a field that is designed for announcement extensions, certain administration end validations that are usually performed on announcement extensions are not performed, and resultant warnings or submittal denials do not occur. The shortened extensions also do not appear in any display or list that shows announcement extensions. Ensure that you administer the correct type of announcement for the application when you assign shortened extensions.

- If you want the system to route the calls to the attendant, type **attd**.

The system records the calls as LDN calls on the call detail recording records.

The system displays the **Incoming Destination** field, when the **Direction** field on the **Trunk Group** screen is set to **incoming** or **two-way**.

Use the **Incoming Destination** field to set the destination for all incoming calls on trunk groups such as central office (CO), foreign exchange (FX), and Wide Area Telecommunications Service (WATS), that must terminate at a single destination. The destination that you type in the **Incoming Destination** field is also the default night service destination, unless you enter a different destination in the **Night Service** field.

3. Press **Enter** to save your changes.

Reports for Listed Directory Number

The following reports provide information about the Listed Directory Number feature:

- None

Considerations for Listed Directory Number

This section provides information about how the Listed Directory Number (LDN) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Listed Directory Number under all conditions. The following considerations apply to Listed Directory Number:

- The number of listed directory numbers that you can assign depends on the configuration of your system.

Interactions for Listed Directory Number

This section provides information about how the Listed Directory Number (LDN) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Listed Directory Number in any feature configuration.

- Night Service

If you activate the Night Service capability, and a night console is not assigned or is not operational, the system routes:

- Incoming Direct Inward Dialing (DID) LDN calls route to a designated DID LDN night extension. If no DID LDN night extension is designated, the system routes DID LDN calls to the attendant
- Incoming central office (CO) or foreign exchange (FX) trunk calls to the night destination that is specified for the trunk group. If no night destination is specified for the trunk group, the system routes the calls to the normal incoming destination for that trunk group.
- Internal calls and coverage calls to the attendant to the DID LDN night extension during night service.

Locally Sourced Announcements and Music

Use the Locally Sourced Announcements and Music feature to access announcement and music audio sources from a local port network or media gateway.

Locally sourced audio can help with:

- Improve the quality of audio
- Reduce resource usage, such as VoIP resources
- Provide a backup mechanism for announcement and music sources

Detailed description of Locally Sourced Announcements and Music

This section provides a detailed description of the Locally Sourced Announcements and Music feature. This feature is available with Avaya Communication Manager Release 3.0.

The Locally Sourced Announcement and Music feature differs from the Announcement feature and the Music-on-Hold feature. The Announcement and Music-on-Hold features are single-sourced audio while the Locally Sourced feature is group-sourced audio. Locally Sourced Announcement and Music is based on groups of audio sources. Audio sources are assigned either to an audio group or a music-on-hold group.

Audio groups are made up of multiple sources of the same announcement or music. These audio sources can be located on any or all of the Voice Announcement with LAN (VAL) TN2501AP boards or on virtual VALs (vVAL) in a media gateway. The VAL or vVAL boards are assigned to an audio group. The audio group is then assigned to an announcement or audio extension as a group sourced location.

Announcement or music recordings are saved as wav file types. Each recording must be saved manually onto the VAL or vVAL boards the same way as single-sourced announcements using an FTP program or VAL Manager. Each recording has the same file name within an audio group. The audio group can contain announcements and music.

A music-on-hold group is a collection of externally connected and continuously playing music sources. An example of a music-on-hold source is a radio station connected to a media gateway using an analog station port. Multiple music-on-hold sources can be used in the same system.

As with the Music-on-Hold feature, only one music source is defined for a system or for a tenant partition. However, you can define a music source as a group of music-on-hold sources. Therefore, both non-tenant and tenant systems can use the group concept to distribute music-on-hold sources throughout a system.

Locally Sourced Announcements and Music

When an incoming call requires an announcement or music-on-hold, the audio source that is closest to the incoming call trunk plays. An algorithm selects the most local source of audio to play for a call.

The most local source means that it is local to the trunk or user in the same Media Gateway or in the same group of Port Network Gateways, in the same network region, in the interconnected network region, or is interconnected through an Inter-Gateway Alternate Routing (IGAR). An announcement file extension can be administered for queuing. Under queuing, if the audio source selected to play has no available playback ports, the request to play that audio is held in queue until a port on the source is available. If the queuing option is not administered for the audio file, the search for a local source continues as above.

Accessing audio locally minimizes audio distortion because the audio is located within or close to the same port network or gateway as the caller. Therefore, the Locally Sourced feature improves the quality of announcements and music-on-hold. This feature also reduces resource usage, such as VoIP resources, because the nearest available audio source of an announcement or music is played. Locally Sourced Announcements and Music also provides a backup for audio sources because multiple copies of the audio files are stored in multiple locations.

You can use an announcement or audio source extension with an assigned audio group anywhere that a single sourced announcement or audio source extension can be used. See the Announcements feature or the Music-on-Hold feature for information on single sourced audio.

Note:

For more information on Inter-Gateway Alternate Routing (IGAR), see *Administration for Network Connectivity for Avaya Communication Manager*, 555-233-504, Issue 10, April 2005.

Administering Locally Sourced Announcements and Music

The following steps are part of the administration process for the Locally Sourced Announcements and Music feature:

- [Adding an audio group](#)
- [Listing all audio groups](#)
- [Changing audio group extensions](#)
- [Listing audio group extensions](#)
- [Adding a music-on-hold group](#)
- [Listing music-on-hold groups](#)
- [Changing music-on-hold source type](#)

- [Adding music sources to a tenant partition](#)
- [Displaying VAL board or vVAL group descriptions](#)
- [Displaying system capacities](#)

This section describes:

- The prerequisites for administering the Locally Sourced Announcements and Music feature
- The screens that you use to administer the Locally Sourced Announcements and Music feature
- Complete administration procedures for the Locally Sourced Announcements and Music feature

Prerequisites for administering Locally Sourced Announcements and Music

You must complete the following actions before you can administer the Locally Sourced Announcements and Music feature:

- None

Screens for administering Locally Sourced Announcements and Music

Screen name	Purpose	Fields
Audio Groups	List audio group features and announcement extensions.	All
Audio Group	Add, change, or delete audio source locations in an audio group.	All
Announcements/Audio Sources	Display and change individual announcements and music-on-hold extensions. Determine properties of audio sources.	All
MOH Group	Add, change, display, delete music-on-hold groups.	All

Screen name	Purpose	Fields
Music-on-Hold Groups	List all of the music-on-hold groups in the system.	All
Feature-Related System Parameters	Change music-on-hold group source type.	Music/Tone On Hold Type
Tenant	Display the music source for a tenant partition.	Music Source
Music Sources	Add, change, display, delete music sources.	All
Announcement Group Board Usage	Display group identification.	All
System Capacity	Display available extension source combinations capacity.	Extension-Source Combinations

Adding an audio group

To add an audio group:

1. Type **add audio-group *number*** where *number* is the group number. Press **Enter**.

The system displays the **Audio Group** screen ([Audio Group screen](#) on page 888).

Figure 216: Audio Group screen

add audio-group 1

Page 1 of 4

AUDIO GROUP 1

Group Name: Relaxation Music__

AUDIO SOURCE LOCATION

1: ____01A09	16: _____	31: _____	46: _____	61: _____
2: ____019v9	17: _____	32: _____	47: _____	62: _____
3: _____	18: _____	33: _____	48: _____	63: _____
4: _____	19: _____	34: _____	49: _____	64: _____
5: _____	20: _____	35: _____	50: _____	65: _____
6: _____	21: _____	36: _____	51: _____	66: _____
7: _____	22: _____	37: _____	52: _____	67: _____
8: _____	23: _____	38: _____	53: _____	68: _____
9: _____	24: _____	39: _____	54: _____	69: _____
10: _____	25: _____	40: _____	55: _____	70: _____

2. In the **Group Name** field, type an identifier name for the group.

3. In the **Audio Source Location** fields, type in the VAL boards or vVAL location designators for each audio source in the audio group.
4. Press **Enter** to save your changes.

Listing all audio groups

To list all audio groups in a system:

1. Type **list audio-group**. Press **Enter**.

The system displays the **Audio Groups** screen ([Audio Groups screen](#) on page 889).

Figure 217: Audio Groups screen

list audio-group		
AUDIO GROUPS		
Group	Name	Number of Sources
1	Relaxation Music	2
12	Forgive the wait	20
23	Best deals for today	30
At End of Member List		

2. View your settings and exit the screen.

Changing audio group extensions

To change audio group extensions for announcements and music:

1. Type **change announcements**. Press **Enter**.

The system displays the **Announcements/Audio Sources** screen ([Announcements/Audio Sources screen](#) on page 890).

Figure 218: Announcements/Audio Sources screen

change announcements										Page 1
ANNOUNCEMENTS/AUDIO SOURCES										
Ext.	Type	COR	TN	Name	Q	QLen	Pro	Rate	Group/ Port	
1: 55526	integrated	1	1	business-hours	y	N/A	n	64	01B18	
2: 55525	integ-mus	1	1	Music4Queue	b	N/A	n	64	G1	
3: 33627	integrated	1	1	PresWelcome	y	N/A	n	64	G2	
4: _____	_____	1	1	_____	n					
5: _____	_____	1	1	_____	n					

2. In the **Ext** field, type the extension number.
3. In the **Type** field, type the group description represented by the following group types:
 - integ-rep (integrated repeating)
 - integ-mus (recorded music)
 - integrated (integrated announcement)
4. In the **Name** field, type a name for this announcement.

Note:

If you use the TN2501AP or the G250, G350 or G700 Media Gateway vVAL, you must type a name in the **Name** field. This name becomes the name for the announcement file.

5. In the **Q** field, perform one of the following actions:
 - If you want calls to wait to hear an announcement if all the ports on the announcement circuit pack are busy, type **y**. If the announcement is assigned to an audio group, the closest announcement group is selected and the announcement is played.
 - If you do not want calls to wait to hear an announcement if all the ports on the announcement circuit pack are busy, type **n**. If you type **n** in this field, and if all ports on the nearest VAL/vVAL board are busy, the next closest announcement source in the group is selected. If all ports are busy, the caller does not hear the announcement.

Note that the **Q** field is automatically set to **b** for the integ-mus announcement type to provide a continuous repeating barge-in operation for music on delay or music on hold.
6. The system displays **N/A** in the **QLen** (queue length) field. You cannot change this field for integrated announcements. The length of the queue for integrated announcements is preset.

7. In the **Pro** (protected) field, perform one of the following actions:

- If you want to allow users with console permissions to change the recording, type **n**. However, the recording cannot be changed via FTP or VAL Manager.
- If you do not want to allow users with console permissions to change the recording, type **y**. If you type **y** in this field, the recording is protected and cannot be changed. The recording cannot be changed via FTP or VAL Manager either.

Note:

The **Pro** field appears only if the **Type** field is integrated.

8. In the **Group/Port** field, type the group number in one of the following ways:

- **Gnn** where *nn* represents a one or two-digit group number.
- The location of the TN2501AP or the TN750 announcement circuit pack. In this example, the location is **01B18**.
- **gggv9** for media gateway vVAL, where **ggg** is the gateway number of the media gateway (up to 250).

9. Repeat steps 2 through 8 with the correct information for each audio group you want to save.

10. Press **Enter** to save your changes.

Listing audio group extensions

To list all of the announcement extensions that refer to a specific audio group:

1. Type **list usage audio-group *number*** where *number* is the audio group number. Press **Enter**.

The system displays the **Announcements/Audio Sources** screen ([Announcements/Audio Sources screen](#) on page 891).

Figure 219: Announcements/Audio Sources screen

list usage audio-group 3										Page 1
ANNOUNCEMENTS\AUDIO SOURCES										
Ann.										Group/
No.	Ext.	Type	COR	TN	Name	Q	Qlen	Pr	Rt	Port
2	45525__	integrated	1_	1_	PresidentzWelcome	_____	-	_____	_____	G3
3	55599__	integrated	1_	1_	PresidentzWelcome	_____	-	_____	_____	G3
4	75000__	integrated	1_	1_	PresidentzWelcome	_____	-	_____	_____	G3
5	36000__	integrated	1_	1_	PresidentzWelcome	_____	-	_____	_____	G3

2. View your settings and exit the screen.

Adding a music-on-hold group

To add a music-on-hold group:

1. Type **add moh-analog-group** *number* where *number* is the music-on-hold group number. Press **Enter**.

The system displays the **MOH Group** screen ([MOH Group screen](#) on page 892).

Figure 220: MOH Group screen

add moh-analog-group 1

Page 1 of 4

MOH GROUP 1

Group Name: Relaxation Music__

MOH SOURCE LOCATION

1: __01A0905	16: _____	31: _____	46: _____	61: _____
2: __019v401	17: _____	32: _____	47: _____	62: _____
3: _____	18: _____	33: _____	48: _____	63: _____
4: _____	19: _____	34: _____	49: _____	64: _____
5: _____	20: _____	35: _____	50: _____	65: _____
6: _____	21: _____	36: _____	51: _____	66: _____
7: _____	22: _____	37: _____	52: _____	67: _____
8: _____	23: _____	38: _____	53: _____	68: _____
9: _____	24: _____	39: _____	54: _____	69: _____
10: _____	25: _____	40: _____	55: _____	70: _____
11: _____	26: _____	41: _____	56: _____	71: _____
12: _____	27: _____	42: _____	57: _____	72: _____
13: _____	28: _____	43: _____	58: _____	73: _____
14: _____	29: _____	44: _____	59: _____	74: _____

2. In the **Group Name** field, type in an identifier name for the music-on-hold group.
3. In the **MOH Source Location** numbered fields, type in the music-on-hold VAL or vVAL source locations.
4. Press **Enter** to save your changes.

Listing music-on-hold groups

To list all of the music-on-hold groups in a system:

1. Type **list moh-analog-group**. Press **Enter**.

The system displays the **Music-on-Hold Groups** screen ([Music-on-Hold Groups screen](#) on page 893).

Figure 221: Music-on-Hold Groups screen

list moh-analog-group			Page 1
MUSIC-ON-HOLD GROUPS			
Group	Name	Number of Sources	
8	Elevator Music	5	
10	Latin Renditions	20	
11	Polka music	30	
At End of Member List			

2. View your settings and exit the screen.

Changing music-on-hold source type

To change the source type for music-on-hold:

1. Type **change system-parameters features**. Press **Enter**.

The system displays the **Features-Related System Parameters** screen ([Feature-Related System Parameters screen](#) on page 894).

2. In the **Music/Tone on Hold** field, type **music**.

The **Type** field appears.

If the **Tenant Partitioning** field on the **Optional Features** screen is set to **y**, you cannot administer the **Music/Tone on Hold** field. If the **Tenant Partitioning** field on the **Optional Features** screen set to **y**, you must use the Music Sources screen ([Music Sources screen](#) on page 895) to assign music to a port.

3. Type one of the following values:

- Type **ext** and the corresponding extension number of the integ-mus announcement/ audio source.
- Type **group** and the corresponding music-on-hold analog group number.
- Type **port** and the corresponding location of the music-on-hold analog/aux-trunk source.

4. Press **Enter** to save your changes.

Figure 222: Feature-Related System Parameters screen

change system-parameters features
page 1

FEATURE-RELATED SYSTEM PARAMETERS

Self Station Display Enabled? n

Trunk-to-Trunk Transfer? none

Automatic Callback - No Answer Timeout Interval (rings): 4_

Call Park Timeout Interval (minutes): 10

Off-Premises Tone Detect Timeout Interval (seconds): 20_

AAR/ARS Dial Tone Required? y

Music/Tone On Hold: music__ Type: Group 1_

Music (or Silence) On Transferred Trunk Calls: all

DID/Tie/ISDN/SIP Intercept Treatment: attd

Internal Auto-Answer of Attd-Extended/Transferred Calls? y

Automatic Circuit Assurance (ACA) Enabled? y

ACA Referral Calls: local

ACA Referral Destination: _____

ACA Short Holding Time Originating Extension: _____

ACA Long Holding Time Originating Extension: _____

Abbreviated Dial Programming by Assigned Lists:

Auto Abbreviated/Delayed Transition Interval(rings):

Protocol for Caller ID Analog Terminals: Bellcore

Display Calling Number for Room to Room Caller ID Calls?

Adding music sources to a tenant partition

To add music sources to a tenant partition when tenant partitioning is activated:

1. Type **change tenant *number*** where ***number*** is the partition number.

The system displays the **Tenant** screen ([Tenant screen](#) on page 894).

Figure 223: Tenant screen

change tenant 1
TENANT 1

Tenant description: _____

Attendant group: 1

Ext Alert Port (TAAS): _____ Ext Alert (TAAS) Extension: ____

Night Destination: _____

Music Source: 1

Attendant Vectoring VDN:

Emergency Number:

2. Type **change music-sources**. Press **Enter**.

The system displays the **Music Sources** screen ([Music Sources screen](#) on page 895).

Figure 224: Music Sources screen

change music-sources				
MUSIC SOURCES				
Source No.	Type	Source		Description
1	music	Type: port	01A0904	Country
2	tone			Tone-on-Hold
3	music	Type: group	49	Classical
4	none			
5	none			
6	music	Type: ext	20030	Rock

3. In the **Type** field, valid options are **music** and **tone**.
4. In the **Source** field, valid options for the music type are:
 - **ext** - audio source extension for a single or group audio source
 - **group** - a music-on-hold analog group number
 - **port** - an analog or auxiliary trunk source location
5. After a **Source** type is entered, an entry line appears to the right. Type an identifier for the audio source. The identifier is one of the following:
 - audio group extension number,
 - music-on-hold group number, or
 - port location.
6. Type a **Description** for each music source.
7. Repeat steps 3 to 6 to add up to 100 music sources.
8. Press **Enter** to save your changes.

Displaying VAL board or vVAL group descriptions

To identify the group descriptions of specified VAL or vVAL boards:

1. Type **list usage integ-annc-board location** where **board location** is the 5-character location identification number. Press **Enter**.

The system displays the **Announcement Group Board Usage** screen ([Announcement Group Board Usage screen](#) on page 896).

Figure 225: Announcement Group Board Usage screen

list usage integ-annc-board 01B18					Page 1
ANNOUNCEMENT GROUP BOARD USAGE					
USED BY					
Announcement	Announcement	2087	Extension	3005	
Audio Group	Group	4	Member	28	
Audio Group	Group	23	Member	101	

Displaying system capacities

The number of audio groups, audio sources per group, audio files per source and extension-source combinations are limited. Extension-source combinations are the total of the single-sourced announcement extensions and the group-sourced announcement sources that are assigned in an audio group to each extension. See the Avaya Communication Manager System Capacities Table (555-245-601) for system capacity limits.

To check the used and available capacities within a system:

1. Type **display capacity**. Press **Enter**.

The system displays the **System Capacity** screen ([System Capacity screen](#) on page 897).

Figure 226: System Capacity screen

display capacity

Page 6 of 12

SYSTEM CAPACITY

	Used	Available	System Limit
RECORDED ANNOUNCEMENTS/MUSIC/AUDIO SOURCES			
Analog Queue Slots:	0	1000	1000
Extension-Source Combinations:	0	3000	3000
TN2501 VAL Boards:	1	0	1
Media Gateway vVAL Sources:	0	0	0
TN2602 VoIP Channels:	0	0	0

Reports for Locally Sourced Announcements and Music

The following reports provide information about the Locally Sourced Announcements and Music feature:

None.

Considerations for Locally Sourced Announcements and Music

None.

Interactions for Locally Sourced Announcements and Music

This section provides information about how the Locally Sourced Announcements and Music feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Locally Sourced Announcements and Music in any feature configuration.

- Automatic Server Failover Feature

The operation of local audio and music-on-hold sources might not work as intended in cases where the primary server migrates to a backup server. This interruption occurs because the audio sources might not be available from the backup server due to physical fragmentation of the network. However, the best available local audio source is still chosen by the backup server.

- Multi-Location Dial Plan (MLDP)

Under the Locally Sourced Announcements and Music feature, an audio source is selected based on where the source is located with respect to the user's location. However, under the MLDP feature, the audio source to be used is predefined and based only on the location of the call's ingress point. Also unlike the locally sourced music-on-hold, the MLDP feature does not support music files.

Loss Plans

Use the Loss Plans feature to determine the amount of loss (quieter) or gain (louder) applied on calls. Usually, your system uses a predefined loss plan that is based on the administered country code. In some circumstances, you can change the loss plan on a per-trunk or a per-telephone basis.

Detailed description of Loss Plans

This section provides a detailed description of the Loss Plans feature.



CAUTION:

The values in the loss plan can significantly affect the quality of service that your users experience. Therefore, in order to change the loss plan you must thoroughly understand loss plans and your particular configuration. Avaya recommends that you seek technical assistance from Avaya before making any modifications to the loss plan.

Use the **2 Party Loss Plan** page of the **Location Parameters** screen to set the decibel gain or loss levels, between two parties on a call. Each row on this screen is considered a different loss group. You can assign a loss group to a particular phone or trunk by administering a value for the **Loss Group** fields on the **Station** and **Trunk Generation** screens. This allows you to use different loss plans for different types of phones or different trunk groups.

The **Tone Loss Plans** page of the **Location Parameters** screen allows you to set the tone gain or loss levels (in dB) on a conference call, as well as the total gain or loss in a conference based on the number of parties.

Note:

The end-to-end total loss for multi-party conference calls that is administered on the **Location Parameters** screen is not always applied to a specific call. The loss applied to, for example, a 3-party conference call is calculated by adding the fixed pairwise loss for each pair of ports to the value for 2-party loss shown on the **Location Parameters** screen. If this total is *less* than the end-to-end total loss value configured for a 3-party conference, calculate the difference, and divide the difference by 2. Add 1 to this figure, and the result is the amount of loss applied to the call.

IP endpoints connected using hairpinning or direct IP-IP are not under the control of the administrable loss plan.

Administering Loss Plans

The following steps are part of the administration process for the Loss Plans feature:

This section describes:

- Any prerequisites for administering the Loss Plans feature
- The screens that you use to administer the Loss Plans feature
- Complete administration procedures for the Loss Plans feature

Prerequisites for administering Loss Plans

You must complete the following actions before you can administer the Loss Plans feature:

- Ensure that the **Digital Loss Plan Modification** field on the **Optional Features** screen is set to **y** this screen. If the field is not set to **y**, your system is not enabled for the Loss Plans feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

- Ensure that the **Customize** field on the **Location Parameters** screen is set to **y**.

To view the **Location Parameters** screen, type **display location-parameters**. Press **Enter**.

Screens for administering Loss Plans

Screen name	Purpose	Fields
Optional Features	Shows whether or not the Loss Plans feature is enabled on your system.	Digital Loss Plan Modification
Location Parameters	Customize the Loss Plans feature.	Customize

Reports for Loss Plans

The following reports provide information about the Loss Plans feature:

- None

Considerations for Loss Plans

This section provides information about how the Loss Plans feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Loss Plans under all conditions. The following considerations apply to Loss Plans:

- None

Interactions for Loss Plans

This section provides information about how the Loss Plans feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Loss Plans in any feature configuration.

- None

Loudspeaker Paging

Use the Loudspeaker Paging feature to connect Avaya Communication Manager to loudspeaker systems and allow users to page from user telephones.

Detailed description of Loudspeaker Paging

This section provides a detailed description of the Loudspeaker Paging feature.

You can administer up to nine separate zones, or sets of loudspeakers on Avaya Communication Manager. Thus you can make an announcement to one group or location without disturbing people who do not need to hear the announcement. Auxiliary trunks connect the speakers in each zone to ports on an auxiliary trunk circuit pack.

Types of Paging

Communication Manager offers two types of loudspeaker paging. You can use each separately, and you can also use both together.

- Voice paging

With voice paging, users can make announcements over a loudspeaker system from their phones. You can integrate voice paging and Call Park by enabling Deluxe Paging.

- Chime paging

If frequent voice pages are undesirable, you can assign a unique series of chimes, or a chime code to each extension. The chime code assigned to that extension plays over the speakers when that extension is paged.

Chime paging is sometimes called Code Calling Access.

Deluxe paging

With standard voice paging, users page by dialing the Trunk Access Code assigned to the zone they want to page. If users have an active call, the users must manually put the call on hold or park the call before they dial the TAC.

When you enable deluxe paging, users can automatically park an active call when they use the voice paging feature.

Users with multiappearance telephones

The following description applies only to systems with deluxe paging. To page and park an active call simultaneously, users with a multiappearance phone press **Transfer**, dial the trunk access code + an extension number where the call will be parked, make the announcement, and press **Transfer** again. The paged party dials the answer back feature access code + the extension number and is connected directly to the parked call. If the paging user presses **Conference** instead of **Transfer**, they are conferenced with the parked caller and both are connected in a three-way conference with the paged user when that user responds. This is called Meet-Me Conferencing.

If the paging user does not want to park the active call, Deluxe Paging also allows "Meet-Me Paging." Paging users can put an active call on hold and make their page, announcing their own extension. When the paged party calls, the paging user can conference the call on hold or transfer it to the paged party.

Users with single-line phones

This description only applies to systems with deluxe paging. To page and park an active call simultaneously, users with a single-line phone press **Recall** or flash the switch hook, dial the trunk access code + an extension where the call will be parked, and press **Recall** again. The paging user is conferenced with the parked caller and both parties are connected in a three-way conference with the paged user when he or she responds. In other words, Meet-Me conferencing is standard operation for users with single-line phones. The paged party dials the answer back feature access code + the extension number and is connected directly to the parked call.

If the paging user does not press **Recall** until the loudspeaker paging time-out interval expires, the user hears a confirmation tone, and the active call is automatically parked on their extension. When the paged party answers the call. The paged party is connected to the paging party. The paging party can then transfer the call to the calling party.

Chime paging

To page a user, dial the TAC for a zone, and then chime the extension of the person that they want to page. The system matches the extension dialed to its assigned code, and plays the code over the loudspeakers. If users have an active call when they start to page, the call is automatically parked on the extension dialed in the page. Paged parties may retrieve the parked call normally.

Auxiliary paging systems

Communication Manager requires a separate port for each paging zone, and supports a maximum of nine zones. If you have more than nine zones or do not want to allot that many ports for paging, Avaya can provide auxiliary paging systems. These systems can support many zones from 1 port. They can also provide additional capabilities such as two-way communication through the loudspeaker system. In this case, the person paged can speak directly to the pager over the loudspeaker.

Restrictions on loudspeaker paging

These restrictions apply to both voice, deluxe voice, and chime paging:

- A paging call cannot be placed on hold, included in a conference call, or transferred. Also, ringback queuing does not work with loudspeaker paging calls either.
- Users with any of the following restrictions cannot page:
 - Controlled restriction
 - Manual originating line service
 - Origination restriction
 - Miscellaneous trunk restriction
- A user with a single-line telephone does not hear a call-waiting tone if the user gets a call while paging.
- Listed Directory Number (LDN) and Direct Inward Dialing (DID) calls cannot access the paging system. However, attendants can park incoming calls and page.
- Remote users (such as remote access users and tie-trunk users) who are paging cannot use # to park calls on their own extensions.

Administering Loudspeaker Paging

The following steps are part of the administration process for the Loudspeaker Paging feature:

- [Setting up Voice Paging over loudspeakers](#)
- [Setting up Chime Paging over Loudspeakers](#)
- [Assigning a chime page code to an individual extension](#)

This section describes:

- Any prerequisites for administering the Loudspeaker Paging feature
- The screens that you use to administer the Loudspeaker Paging feature
- Complete administration procedures for the Loudspeaker Paging feature

Prerequisites for administering Loudspeaker Paging

You must complete the following actions before you can administer the Loudspeaker Paging feature:

- The server that runs Communication Manager must have one or more auxiliary trunk circuit packs with enough available ports to support the number of paging zones that you define. Each paging zone requires one port.

For information on specific circuit packs, see the *Hardware Guide for Avaya™ Communication Manager*.

- To set up deluxe paging, view the **Feature-Related System Parameters** screen. Ensure that the **Deluxe Paging and Call Park Timeout to Originator** field is set to **y**.

To view the **Feature-Related System Parameters** screen, type **change system-parameters features**. Press **Enter**.

Screens for administering Loudspeaker Paging

Screen name	Purpose	Fields
Feature-Related System Parameters	Set up deluxe paging.	Deluxe Paging and Call Park Timeout to Originator
Loudspeaker Paging	Set up voice paging over loudspeakers.	● Voice Paging Timeout ● Port ● Voice Paging - COR ● Voice Paging - TAC ● Location
	Set up chime paging over loudspeakers	● Code Calling Playing Cycles ● Port ● Voice Paging - TAC ● Voice Paging - COR ● Location ● Code Calling - TAC
Code Calling Ids	Set up chime paging over loudspeakers	● Ext ● Id

Setting up Voice Paging over loudspeakers

To set up voice paging over loudspeakers:

1. Type **change paging loudspeaker**. Press **Enter**.

The system displays the **Loudspeaker Paging** screen ([Figure 227: Loudspeaker Paging screen](#) on page 908).

In this example, you set up voice paging for an office with five zones. You allow users to page all five zones at once, and you assign a Class of Restriction (COR) of 1 to all zones.

Figure 227: Loudspeaker Paging screen

LOUDSPEAKER PAGING

CDR? y

Voice Paging Timeout (sec): 30

Code Calling Playing Cycles:

PAGING PORT ASSIGNMENTS								
Zone	Port	Voice Paging			Code Calling			Location:
		TAC	COR	TN	TAC	COR	TN	
1:	01C0501	301	1	1			1	Reception area
2:	01C0502	302	1	1			1	Shipping & receiving
3:	01C0503	303	1	1			1	Staff offices
4:	01C0504	304	1	1			1	Management suite
5:	01C0601	305	1	1			1	Breakroom
6:				1			1	
7:				1			1	
8:				1			1	
9:				1			1	
ALL:		310	1	1			1	

- In the **Voice Paging Timeout** field, type the maximum number of seconds that a page can last.

In this example, the paging party is disconnected after **30** seconds.

- In the **Port** field for Zone 1, type the port number that is assigned to the auxiliary trunk circuit pack to this zone.

In this example, the port number is **01C0501**.

- In the **Voice Paging - TAC** field, type the value the for Trunk Access Code (TAC) that users dial to page this zone.

In this example, the value is **301**.

- In the **Voice Paging - COR** field, type the class of restriction (COR) for this zone. You can assign different CORs to different zones.

In this example, the COR is **1**.

- In the **Location** field on the Zone 1 row, type a descriptive name for the zone. Use this name to help you remember the corresponding physical location.

In this example, the zone name is **Reception area**.

- Repeat steps 4 through 6 for each zone.

8. In the **ALL** row of the **Voice Paging- TAC** field in, type **310** and **1** in the **Voice Paging - COR** field.

When you complete this row, you allow users to page all zones at once. You do not have to assign a port to this row.

9. Press **Enter** to save your changes.

You can integrate loudspeaker voice paging and call parking. This is called "deluxe paging." You enable deluxe paging by entering **y** in the **Deluxe Paging and Call Park Timeout to Originator** field on the **Feature-Related System Parameters** screen. To allow paged users the full benefit of deluxe paging, you should also enter a code in the **Answer Back Access Code** field on the **Feature Access Code (FAC)** screen if you have not done so already. Paged users dial the FAC, plus an extension to retrieve calls parked by deluxe paging.

Setting up Chime Paging over Loudspeakers

To set up chime paging:

1. Type **change paging loudspeaker** . Press **Enter**.

The system displays the **Loudspeaker Paging** screen ([Figure 228: Loudspeaker Paging screen](#) on page 910).

In this example, you set up chime paging for a clothing store with three zones. You allow users to page all three zones at once, and you assign a Class of Restriction (COR) of **1** to all zones.

Figure 228: Loudspeaker Paging screen

LOUDSPEAKER PAGING

CDR? y

Voice Paging Timeout (sec):

Code Calling Playing Cycles: 2

PAGING PORT ASSIGNMENTS

Zone	Port	Voice Paging			Code Calling			Location:
		TAC	COR	TN	TAC	COR	TN	
1:	01A0301			1	80	1	1	Men's Department
2:	01A0302			1	81	1	1	Women's Department
3:	01A0303			1	82	1	1	Children's
4:				1			1	
5:				1			1	
6:				1			1	
7:				1			1	
8:				1			1	
9:				1			1	
ALL:				1	89	1	1	

2. In the **Code Calling Playing Cycles** field, type the number of times that a chime code plays when someone places a page.

In this example, the number of times is **2**.

3. In the **Port** field for Zone 1, type the port number of the auxiliary trunk circuit pack that is assigned to this zone.

In this example, the port number is **01A0301**.

4. In the **Code Calling - TAC** field, type the Trunk Access Code (TAC) users dial to page this zone. You cannot assign the same trunk access code to more than one zone.

In this example, the trunk access code is **80**.

5. In the **Code Calling - COR** field, type the COR number that is assigned to this zone. You can assign different classes of restriction to different zones

In this example, the COR is **1**.

6. In the Zone 1 row of the **Location** field, type a descriptive name for the zone. Use this name to help you remember the corresponding physical location.

In this example, the location is **Men's Department**.

7. Repeat steps 4 through 6 for zones 2 and 3.

8. In the **ALL** row of the **Code Calling - TAC** field, type **89** and **1** in the **Code Calling - COR** field.

When you complete this row, you allow users to page all zones at once. You do not have to assign a port to this row.

9. Press **Enter** to save your changes.

Assigning a chime page code to an individual extension

To assign chime codes to an individual extension:

1. Type **change paging code-calling-ids** and press **Enter**.

The system displays the **Code Calling IDs** screen ([Figure 229: Code Calling IDs screen](#) on page 911).

Figure 229: Code Calling IDs screen

ID ASSIGNMENTS		CODE CALLING IDS							
Id	Ext	Id	Ext	Id	Ext	Id	Ext	Id	Ext
111:	2130	141:	_____	221:	_____	251:	_____	331:	_____
112:	2131	142:	_____	222:	_____	252:	_____	332:	_____
113:	2149	143:	_____	223:	_____	253:	_____	333:	_____
114:	2150	144:	_____	224:	_____	254:	_____	334:	_____
115:	2152	145:	_____	225:	_____	255:	_____	335:	_____
121:	2153	151:	_____	231:	_____	311:	_____	341:	_____
122:	2160	152:	_____	232:	_____	312:	_____	342:	_____
123:	2167	153:	_____	233:	_____	313:	_____	343:	_____
124:	_____	154:	_____	234:	_____	314:	_____	344:	_____
125:	_____	155:	_____	235:	_____	315:	_____	345:	_____
131:	_____	211:	_____	241:	_____	321:	_____	351:	_____
132:	_____	212:	_____	242:	_____	322:	_____	352:	_____
133:	_____	213:	_____	243:	_____	323:	_____	353:	_____
134:	_____	214:	_____	244:	_____	324:	_____	354:	_____
135:	_____	215:	_____	245:	_____	325:	_____	355:	_____

2. In the **Ext** field, type the first extension for Id **111**.

In this example, the first extension is **2130**. Each code Id defines a unique series of chimes.

3. To assign chime codes to the remaining extensions type an extension number on the line following each code Id.

You can assign a different chime code to as many as 125 extensions.

4. Press **Enter** to save your changes.

Reports for Loudspeaker Paging

The following reports provide information about the Loudspeaker Paging feature:

- None

Considerations for Loudspeaker Paging

This section provides information about how the Loudspeaker Paging feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Loudspeaker Paging under all conditions. The following considerations apply to Loudspeaker Paging:

- None

Interactions for Loudspeaker Paging

This section provides information about how the Loudspeaker Paging feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Loudspeaker Paging in any feature configuration.

- Bridged Call Appearance

If a parked call includes a shared terminating extension group, a shared Personal Central Office Line (PCOL), or a redirected call with a temporary bridged appearance, the maximum number of off-hook parties on the call is five, instead of six. The sixth position is reserved for the answer-back call.

- Call Coverage

If a coverage call is parked by deluxe paging, the temporary bridged appearance at the principal extension is maintained as long as the covering user remains off-hook or places the call on hold.

- Call Park

If a call is parked by deluxe paging and the time-out interval expires, the call usually returns to the paging user. However, with remote access and tie trunk access, the call returns to the attendant. If unanswered, the call follows the coverage path of the paging user.

- Call Pickup

If you use call pickup or directed call pickup to answer a call and then park it by deluxe paging, a temporary bridged appearance at the principal extension is maintained if you remain off-hook or place the call on hold.

- Conference -Attendant and Terminal

Paging calls cannot be conferenced.

- Data Call Setup

If the Data button has been pressed for modem pooling, access to paging is denied.

- Data Privacy

If a call has Data Privacy activated and you park it by deluxe paging, Data Privacy for that call is automatically deactivated.

- Hunt Groups

If a hunt-group member parks a call using deluxe paging, the call is parked on the member's own extension, not the hunt-group extension. You cannot park calls on a group extension by dialing the extension as a call-park destination.

- Night Service

If a night-station user parks a Night Service call with deluxe paging, the call is parked on the night station's primary extension.

- Personal Central Office Line (PCOL)

If a PCOL call is parked by deluxe paging, the temporary bridged appearance of the call is maintained at the PCOL extension until the call is disconnected.

- Terminating Extension Group (TEG)

If a TEG member parks a call using deluxe paging, the call is parked on the member's extension, not the group extension. You cannot park calls on a group extension by dialing the extension as a call-park destination.

- Transfer

Paging calls can't be transferred.

Chime paging

The following interactions are specifically for chime paging:

- Abbreviated Dialing

Don't use special characters in abbreviated dialing lists used with chime paging.

- Conference - Attendant

A call cannot be conference while the attendant is accessing paging equipment. The attendant can, however, release the call after paging the called party.

Loudspeaker Paging

- Conference - Terminal

A call cannot be conferenced while the user is accessing paging equipment.

- PagePac Paging Systems

If you use chime code paging with a PagePac system, you can only page one zone at a time. PagePac systems expect a 2-digit code to access a particular zone. The system, however, immediately plays the chime code once a connection is established.

- Transfer

A call cannot be transferred while the attendant is accessing paging equipment.

Troubleshooting Loudspeaker Paging

This section lists the known or common problems that users might experience with the Loudspeaker Paging feature.

Problem	Possible cause	Action
Users cannot page.	The attendant has control of the trunk group.	Deactivate attendant control.
Calls to an extension are heard over the loudspeakers.	The extension might have been forwarded to a trunk access code used for paging.	Deactivate call forwarding or change the extension to which calls are forwarded.

Malicious Call Trace

Use the Malicious Call Trace (MCT) feature to track malicious calls. Both users and attendants can track malicious calls, and display information that identifies the source of the call. The user or attendant can share the information with personnel on a tandemed server. The personnel on the tandemed server can continue to trace the call. MCT also supports a voice recorder that records the malicious call.

Detailed description of Malicious Call Trace

This section provides a detailed description of the Malicious Call Trace (MCT) feature.

MCT has three distinct phases:

- [Activation](#)
- [Control](#)
- [Deactivation](#)

Activation

A user or an attendant can use either a feature button (mct-act) or a Feature Access Code (FAC) to activate MCT. Either the recipient of the call, or another user or attendant, can activate MCT.

Control

When a user or an attendant activates MCT, the system notifies potential MCT controllers. A potential MCT controller is a user or an attendant who is assigned a feature button (mct-contr) that can control MCT. To notify the potential MCT controllers, the system:

- Generates an alerting tone.
The alerting tone is not a call and does not affect any queues at the telephone.
- Flashes the lamp that is associated with the mct-contr button.

The first user or attendant who presses an mct-contr button becomes the MCT controller for the call, and the system stops alerting other potential MCT controllers.

Malicious Call Trace

MCT begins to trace an incoming call when the controller dials the 3-digit equipment location of the incoming trunk.

While the system generates an alerting tone, the display of the controller shows the message **Malicious Call Trace Request**. While this message is on the display, the display shows no information on incoming calls. When the MCT controller presses the mct-contr button again, the system displays information that identifies the called party. As the controller continues to push the button, the system displays the remaining MCT information.

Some of the information that the system displays depends upon the origin of the call:

- If the call originates inside the system, or on the same node within a Distributed Communications System (DCS) network, the software displays the calling number.
- If the call originates outside the system and an Integrated Services Digital Network (ISDN) calling number identification is available on the incoming trunk, the software displays the calling number.
- For all other calls, the software displays the location of the incoming trunk-equipment. In this case, the user must call the connecting server to obtain more information about the malicious call.

For all calls, the software displays the called number, the activating number, whether the call is active, and identification of any other parties who are on the call.

Deactivation

The MCT controller dials the FAC for MCT deactivation to deactivate MCT. Deactivation frees any blocked resources that were involved in the trace. When all parties hang up, the system disconnects the MCT voice recorder.

MCT voice recorder

The MCT voice recorder can be any standard audio cassette player that the Avaya Auxiliary Trunk board can control.

To record a call, manually place the MCT voice recorder in Record MCT mode, and then activate MTC. The activated feature uses the control signal interface of the auxiliary trunk that is connected to the MCT voice recorder to apply power to the recorder.

Note that the system temporarily removes any Bridging, Conference, or Intrusion tones during the time that the MCT voice recorder is connected.

Administering Malicious Call Trace

The following steps are part of the administration process for the Malicious Call Trace feature:

- [Assigning an MCT feature button for an attendant](#)
- [Assigning an MCT feature button for a user](#)
- [Administering MCT for ISDN notification](#)

This section describes:

- Any prerequisites for administering the Malicious Call Trace feature
- The screens that you use to administer the Malicious Call Trace feature
- Complete administration procedures for the Malicious Call Trace feature

Prerequisites for administering Malicious Call Trace

You must complete the following actions before you can administer the Malicious Call Trace feature:

- View the **Optional Features** screen, and ensure that the **Malicious Call Trace?** field is set to **y**. If the **Malicious Call Trace?** field is set to **n**, your system is not enabled for the MCT feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

- Ensure that a Class of Restriction (COR) that enables your users to use the MCT feature exists on your system. The MCT feature requires a COR with the **Access to MCT?** field set to **y**.

For information about COR administration, see the "Class of Restriction" feature description.

- Ensure that Feature Access Codes (FACs) to activate and deactivate the MCT feature exist on your system. The MCT feature requires the following FACs:

- **Malicious Call Trace Activation**
- **Malicious Call Trace Deactivation**

For information about FAC administration, see the "Feature Access Code (FAC)" feature description.

Screens for administering Malicious Call Trace

Screen name	Purpose	Fields
Attendant Console	Assign feature buttons for MCT activation and control.	● mct-act ● mct-contr
Class of Restriction	Define a Class of Restriction (COR) that allows MCT.	● Access to MCT?
FAC	Specify the feature access codes (FACs) for MCT activation and deactivation.	● Malicious Call Trace Activation ● Malicious Call Trace Deactivation
Malicious Call Trace Control Extensions	Specify the extensions that can use the mct-contr feature button.	All
ISDN-BRI Trunk Circuit Pack	Administer ISDN MCT notification for an ISDN trunk group.	● Cntry/Peer Protocol ● Interface
DS1 Circuit Pack	Administer ISDN MCT notification for an DS1circuit pack.	● Country Protocol ● Protocol Version ● Peer Protocol
Optional Features	Enable MCT.	Malicious Call Trace?
Station	Assign an Mct-act and an Mct-contrl feature button for a user.	Any available button field in the Button Assignments area
Feature-Related System Parameters	Specify that an MCT controller hears a tone when the MCT voice recorder is active.	Apply MCT Warning Tone?
	Assign the trunk group for MCT voice recorders.	MCT Voice Recorder Trunk Group
	Specify the wait time or a release message.	Delay Sending Release (seconds)

Defining Malicious Call Trace on your system

To ensure that an MCT is defined on the **Feature-Related System Parameters** screen.

1. Type **change system-parameters features**. Press **Enter**.

The system displays the **Feature-Related System Parameters** screen.

2. Click **Next** until you see the **Apply MCT Warning Tone?** field
([Figure 230: Feature-Related System Parameters screen](#) on page 919).

Figure 230: Feature-Related System Parameters screen

change system-parameters features	page 5
FEATURE-RELATED SYSTEM PARAMETERS	
SYSTEM PRINTER PARAMETERS	
System Printer Endpoint: ____	Lines Per Page: 60
EIA Device Bit Rate: 9600	
Emergency Extension Forwarding (min): 10	
SYSTEM-WIDE PARAMETERS	
Switch Name: _____	
MALICIOUS CALL TRACE PARAMETERS	
Apply MCT Warning Tone? n	MCT Voice Recorder Trunk Group: ____
Delay Sending Release (seconds)?	
SEND ALL CALLS OPTIONS	
Send All Calls Applies to: station	
Auto Inspect on Send All Calls? n	
UNIVERSAL CALL ID	
Create Universal Call ID (UCID)? n	UCID Network Node ID: ____

3. In the **Apply MCT Warning Tone?** field, perform one of the following actions:
- If you want the system to generate a tone at the telephone that controls MCT when the MCT voice recorder is active, type **y**.
 - If you do not want the system to generate a tone at the telephone that controls MCT when the MCT voice recorder is active, type **n**.
4. In the **MCT Voice Recorder Trunk Group** field, type the trunk group for MCT voice recorders.
- For DEFINITY R, CSI, and S1, valid entries are a number from **1** to **666**.
 - For the S8700 or the S8710 IP-Connect servers, valid entries are a number from **1** to **2000**.

5. In the **Delay Sending Release (seconds)** field, type the number of seconds that the server waits to send an ISDN release message, after the server receives an ISDN disconnect message.

- Valid entries are 0, 10, 20, or 30.

The system displays this field only if the **Malicious Call Trace?** field on the **Optional Features** screen is set to **y**.

6. Press **Enter** to save your changes.

Next, you need to ensure that you define the extensions on your system that can use a feature button to control MCT.

To ensure that the extensions on your system that can use a feature button to control MCT:

1. Type **change mct-group-extensions**. Press **Enter**.

The system displays the **Malicious Call Trace control extensions** screen ([Figure 231: Malicious Call Trace Control Extensions screen](#) on page 920).

Figure 231: Malicious Call Trace Control Extensions screen

change mct-group-extensions

Page 1 of 1

Extensions Administered to have an MCT-Control Button:

1: _____	19: _____	37: _____	55: _____	73: _____	91: _____
2: _____	20: _____	38: _____	56: _____	74: _____	92: _____
3: _____	21: _____	39: _____	57: _____	75: _____	93: _____
4: _____	22: _____	40: _____	58: _____	76: _____	94: _____
5: _____	23: _____	41: _____	59: _____	77: _____	95: _____
6: _____	24: _____	42: _____	60: _____	78: _____	96: _____
7: _____	25: _____	43: _____	61: _____	79: _____	97: _____
8: _____	26: _____	44: _____	62: _____	80: _____	98: _____
9: _____	27: _____	45: _____	63: _____	81: _____	99: _____
10: _____	28: _____	46: _____	64: _____	82: _____	100: _____
11: _____	29: _____	47: _____	65: _____	83: _____	
12: _____	30: _____	48: _____	66: _____	84: _____	
13: _____	31: _____	49: _____	67: _____	85: _____	
14: _____	32: _____	50: _____	68: _____	86: _____	
15: _____	33: _____	51: _____	69: _____	87: _____	
16: _____	34: _____	52: _____	70: _____	88: _____	
17: _____	35: _____	53: _____	71: _____	89: _____	
18: _____	36: _____	54: _____	72: _____	90: _____	

2. In any numbered field, type the extension of a user or an attendant console that you want to have an **mct-contr feature** button.

For every extension and attendant console that you administer, you must assign an **mct-act** and an **mct-contr** feature button. You assign these buttons for the attendant on the **Attendant Console** screen, and for the user on the **Station** screen.

3. Press **Enter** to save your changes.

Assigning an MCT feature button for an attendant

To assign an MCT feature button for an attendant:

1. Type **change attendant *n***, where *n* is the number of the attendant to which you want to assign an MCT feature button. Press **Enter**.

The system displays the **Attendant Console** screen.

2. Click **Next** until you see the **Feature Button Assignments** area ([Figure 232: Attendant Console screen](#) on page 921).

Figure 232: Attendant Console screen

change attendant 1
Page 3 of 4

ATTENDANT CONSOLE

FEATURE BUTTON ASSIGNMENTS

1: split_____

2: mct-act____

3: mct-contr_

4: _____

5: _____

6: hold _____ *

7: _____

8: aux-work RC: Grp:

9: _____

10: _____

11: _____

12: _____

13: _____

14: _____

15: _____

16: _____

17: _____

18: _____

19: forced-rel

20: _____

21: _____

22: _____

23: night-serv *

24: pos-busy__ *

3. Type **mct-act** next to the button number that you want the attendant to use to activate MCT.
4. Type **mct-contr** next to the button number that you want the attendant to use to establish control of the malicious call, and to display information about the call.
5. Press **Enter** to save your changes.

Assigning an MCT feature button for a user

To assign an MCT feature button for a user:

1. Type **change station *n***, where *n* is the number of the station to which you want to assign an MCT feature button. Press **Enter**.

The system displays the **Station** screen.

2. Click **Next** until you see the **Button Assignments** area ([Figure 233: Station screen](#) on page 922).

Figure 233: Station screen

change station 20001

STATION

Page 3 of 4

SITE DATA

Room:

Headset? n

Jack:

Speaker? n

Cable:

Mounting: d

Floor:

Cord Length: 0

Building:

Set Color:

ABBREVIATED DIALING

List1:

List2:

List3:

BUTTON ASSIGNMENTS

1: call-appr

5: mct-contr

2: call-appr

6:

3: call-appr

7:

4: mct-act

8:

3. Type **mct-act** next to the button number that you want the user to use to activate MCT.
4. Type **mct-contr** next to the button number that you want the user to use to establish control of the malicious call, and display information about the call.
5. Press **Enter** to save your changes.

Administering MCT for ISDN notification

To administer MCT for ISDN notification:

1. Type **add ds1 n**, where **n** is the number of the DS1 circuit pack that you want to add. Press **Enter**.

The system displays the **DS1 Circuit Pack** screen ([Figure 234: DS1 Circuit Pack screen](#) on page 923).

Figure 234: DS1 Circuit Pack screen

add ds1 xxxxxx
Page 1 of 2

DS1 CIRCUIT PACK

Location: _____	Name: _____
Bit Rate: _____	Line Coding: _____
Line Compensation: _	Framing Mode: _____
Signaling Mode: _____	D-Channel: _____
Connect: _____	Interface: _____
Interconnect: _____	Peer Protocol: _____
TN-C7 Long Timers? _	Country Protocol: _____
	Protocol Version: _____
Interface Companding: _____	CRC? _
Idle Code: _____	
	DCP/Analog Bearer Capability: _____
	T303 Timer(sec): _____
MMI Cabling Board: _____ MMI Interface: ESM	
MAINTENANCE PARAMETERS	
Slip Detection? _	Near-end CSU Type: _____

2. In the **Country Protocol** field, perform one of the following actions:

- If the DS1 is connected to a public network in Australia, type **2**.
- If the DS1 is connected to a private network of servers that run Avaya Communication Manager, type **1**.

3. In the **Peer Protocol** field, type **q-sig**, if the DS1 is connected to a private network of servers that run Avaya Communication Manager.

The system displays the **Peer Protocol** field when the:

- **Signaling Mode** field is set to **isdn-pri**
- **Connect** field is set to **pbx**
- **Interface** field is set to either **peer-master** or **peer-slave**

4. To administer other fields on the DS1 Circuit Pack screen, see the *Administrator's Guide for Avaya Communication Manager*.

5. Press **Enter** to save your changes.

6. Type **change bri-trunk-board**. Press **Enter**.

The system displays the **ISDN-BRI Trunk Circuit Pack** screen ([Figure 235: ISDN-BRI Trunk Circuit Pack screen](#) on page 924).

Figure 235: ISDN-BRI Trunk Circuit Pack screen

change bri-trunk-board
Page 1 of 1

ISDN-BRI TRUNK CIRCUIT PACK

Location: 01A09
Name: _____

Interface Companding: a-law_ DCP/Analog Bearer Capability: 3.1kHz

T3 Timer Length (sec): 15_

Port	Interface	Side	Cntry/Peer Protocol	TEI	Time Fill	Invert Bits?	Synch Source?	Layer 1 Stable?	Detect Slips?
1:	user_____		12_	0_	flags	n	n	n	n
2:	network_____		etsi	0_	ones_	y	y	y	y
3:	user_____		2_	auto	flags	y	n	y	n
4:	peer-slave_	b	QSIG	0_	flags	n	y	y	n
5:	peer-master	a	QSIG	auto	ones_	n	n	n	n
6:	_____		_____	0_	ones_	n	n	y	n
7:	_____		_____	0_	ones_	n	n	y	n
8:	_____		_____	0_	ones_	n	n	y	n

7. In the **Cntry/Peer Protocol** field, type **2** if the ISDN-BRI circuit pack is connected to a public network in Australia.
8. In the **Interface** field, type either **peer-master** or **peer-slave**, if the ISDN-BRI circuit pack is connected to a private network of servers that run Avaya Communication Manager.
9. To administer other fields on the **ISDN-BRI Trunk Circuit Pack** screen, see the *Administrator's Guide for Avaya Communication Manager*.
10. Press **Enter** to save your changes.

End-User Procedures for Malicious Call Trace

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Manual Signaling:

- [Activating MCT with a feature button when you receive a malicious call](#)
- [Activating MCT with a FAC when you are active on a call](#)
- [Activating MCT with a FAC when you are not active on a call](#)
- [Requesting that an MCT controller on a tandemed server continue the trace](#)

- [Displaying MCT information](#)
- [Deactivating MCT](#)

Activating MCT with a feature button when you receive a malicious call

To activate MCT with a feature button when you receive a malicious call:

- Press the **mct-act** feature button.

Activating MCT with a FAC when you are active on a call

To activate MCT with a feature access code (FAC) when you are active on a call:

1. Place the call on hold, transfer, or conference.
2. Get a second call appearance.
3. Dial the FAC to activate MCT.
4. When you hear the dial tone, perform one of the following actions:
 - Dial your extension.
 - Press the pound key (#).

If you press the pound key (#), the system traces the call at your extension.
5. Wait 10 seconds to hear the confirmation tone that the system generates.

Activating MCT with a FAC when you are not active on a call

To activate MCT with a FAC when you are not active on a call:

1. Dial the FAC to activate MCT.
2. Perform one of the following actions:
 - Dial the extension number that received the malicious call.
 - Dial a trunk access code (TAC) and the subsequent member number.

Requesting that an MCT controller on a tandemed server continue the trace

To request that a controller on a tandemed server continue the trace:

1. Contact the controller on the tandemed server.
2. Provide the trunk port ID that you want the controller on the tandemed server to trace
3. The controller on the tandemed server:
 - a. Activates MCT
 - b. Presses the star key (*)
 - c. Dials the trunk port ID

Dial letters A through E of the port ID as the numbers 1 through 5. For example, to dial the the trunk port ID 01C0401 press **0130401**.

Displaying MCT information

To display MCT information on a telephone that has a display panel:

1. Press the **mct-contrl** button.
2. Continue to press the button to display all the information that is available about the malicious call.

Deactivating MCT

To deactivate MCT:

- The MCT controller dials the FAC that deactivates MCT.

The system generates confirmation tone, extinguishes all lamps that are related to the MCT call, and disconnects the MCT voice recorder, if a voice recorded was used on the call.

Reports for Malicious Call Trace

The following reports provide information about the Malicious Call Trace (MCT) feature:

- The MCT History report provides information about an MCT incident. This information includes the date and time, the controller and the recorder, and the parties who were involved on the call.

For detailed information on these reports and the associated commands, , or see *Reports for Avaya Communication Manager*.

Considerations for Malicious Call Trace

This section provides information about how the Malicious Call Trace (MCT) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of MCT under all conditions. The following considerations apply to MCT

- If the originator of the call hangs up, the system discontinues MCT. However, if the recipient of the call hangs up, the system does not discontinue MCT.
- Except for Emergency Access to the Attendant, features that usually display information do not display information on the telephone of the MCT controller, when MCT is activated. Except for the display of information, these features function normally until MCT is deactivated.
- Do not use a feature access code (FAC) to activate MCT because this requires too much time.
- Visually Impaired Attendant Service (VIAS) provides spoken display information for MCT activation, but not for MCT control.
- MCT information on an active malicious call is lost if a server fails while MCT is activated.
- When you request help from a controller on a tandemed server, consider the following possibilities:
 - The malicious caller might hear a warning tone as a result of the intrusion.
 - You can lose continuity on the trace if the person who activates MCT on the tandemed server is not the MCT controller.
- If a malicious call comes in on a non-ISDN trunk, the controller must have the telephone number for the connecting server and a cross-reference of system-trunk port numbers. The controller might also need the DS1 channel number.

Interactions for Malicious Call Trace

This section provides information about how the Malicious Call Trace (MCT) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Malicious Call Trace in any feature configuration.

- **Bridged Call Appearance**

The system records the primary extension as the MCT recipient when MCT is activated at a bridged call appearance, or for a bridged call appearance.

- **Conference**

A user can use conferencing to place a malicious caller on hold. The user can start a conference, dial the feature access code (FAC) that activates MCT, and then stop conferencing and return to the call appearance of the malicious caller.

MCT can be activated for a member of a conference. The MCT activation is unaffected by the number of parties on the conference.

- **Centralized Attendant Service (CAS)**

The activation, control, and deactivation of MCT for a call must occur on the same server.

- **Distributed Communications System (DCS)**

If a telephone in a DCS network is involved in a malicious call, the system records and displays the extension with the MCT information. MCT notification passes over ISDN-PRI DCS trunks, but the activation, control, and deactivation of MCT must be performed by telephones that are on the same DCS node.

- **Emergency Access to the Attendant**

Usually, during MCT-Control, no other feature can access the display of the controlling telephone. However, MCT gives up control of the display until an Emergency Access call is completed.

- **Make-Busy/Position-Busy/Send All Calls**

The software attempts to activate Make-Busy or Position-Busy for telephones or consoles that activate MCT-Control. If a user has a Send All Calls (SAC) button administered but not active for the primary extension on the phone, SAC activates when the user activates MCT-Control. When the user deactivates MCT, SAC remains active until the user deactivates SAC.

- **Music-On-Hold**

If an agent places a malicious call that is being recorded on hold, and the call goes to music-on-hold, the music-on-hold port and the MCT voice recorder port can lock. In this case, the MCT voice recorder continues to record the music-on-hold and is unavailable to record subsequent malicious calls. You must busy out or release the MCT voice recorder port to drop the connection.

- Priority Calling

The system denies a priority call to an MCT recipient.

- QSIG Global Networking

MCT notification passes over tandem, tie, access, and DMI-BOS ISDN QSIG trunk groups. QSIG supplementary services name and number ID provide the name and the telephone number of a malicious caller.

- Transfer

If a user transfers a malicious call, the MCT information that the system displays on the telephone of the MCT controller identifies the party that is transferred as the MCT recipient.

- Trunk Access Code (TAC)

To activate MCT for a TAC, a user must have an mct-contr feature button administered. The user hears a dial tone and enters the trunk-member number for the trunk group that the TAC identified. The user then becomes the MCT controller for a call that involves the identified trunk member. This TAC operation is useful when users must trace a call that tandemed through their server or switch to terminate on another server or switch.

- Trunk Groups

If a personal central office line (PCOL) is involved in a malicious call trace, the software might hold up the trunk until the MCT deactivates.

Manual Message Waiting

Use the Manual Message Waiting feature to cause the Manual Message Waiting button lamp at another user telephone to light.

Detailed description of Manual Message Waiting

This section provides a detailed description of the Manual Message Waiting feature.

A user presses the designated button to light the Manual Message Waiting button lamp at the telephone of another user telephone. Both the telephones must be multiappearance telephones. To turn the lamp off, either telephone user can press the Manual Message Waiting button.

You can administer Manual Message Waiting for pairs of telephones only. These telephones might be used by two people who share the same job function and often take calls for one another. The Manual Message Waiting feature is also useful in situations where one person usually answers calls for a second person, such as an administrative assistant might do for a manager. The administrative assistant can press a Manual Message Waiting button to signal the manager that a call must be answered. The manager can answer the call or press a Manual Message Waiting button to indicate that the administrative assistant should handle the call

Administering Manual Message Waiting

The following steps are part of the administration process for the Manual Message Waiting feature:

- [Assigning the Manual Message Waiting feature button](#)

This section describes:

- Any prerequisites for administering the Message Waiting feature
- The screens that you use to administer the Message Waiting feature
- Complete administration procedures for the Message Waiting feature

Prerequisites for administering Manual Message Waiting

You must complete the following actions before you can administer the Message Waiting feature:

- None

Screens for administering Manual Message Waiting

Screen name	Purpose	Fields
Station (multiappearance)	Assign the man-msg-wt feature button for a user.	Any available button field in the Button Assignments area

Assigning the Manual Message Waiting feature button

To assign a Manual Message Waiting feature button for a user:

1. Type **change station n**, where **n** is the extension of the user to whom you want to assign a Manual Message Waiting feature button. Press **Enter**.

The system displays the **Station** screen for the extension that you requested.

2. Click **Next** until you see the **Button Assignments** area ([Figure 236: Station screen](#) on page 933).

Figure 236: Station screen

STATION		
SITE DATA		
Room:		Headset? n
Jack:		Speaker? n
Cable:		Mounting: d
Floor:		Cord Length: 0
Building:		Set Color:
ABBREVIATED DIALING		
List1:	List2:	List3:
BUTTON ASSIGNMENTS		
1: call-appr	7:	
2: call-appr	8:	
3: call-appr	9:man-msg-wt	
4:	10:dn-dst	
5:	11:goto-cover	
6:	12:send-calls Ext:	

3. In the **Button Assignments** area, type **man-msg-wt** next to the button that you want the user to use for Manual Message Waiting.
4. Press **Enter** to save your changes.

Reports for Manual Message Waiting

The following reports provide information about the Manual Message Waiting feature:

- None

Considerations for Manual Message Waiting

This section provides information about how the Message Waiting feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Manual Message Waiting under all conditions. The following considerations apply to Manual Message Waiting:

- None

Interactions for Manual Message Waiting

This section provides information about how the Message Waiting feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Message Waiting in any feature configuration.

- None

Manual Signaling

Use the Manual Signaling feature to signal another user.

Detailed description of Manual Signaling

This section provides a detailed description of the Manual Signaling feature.

With the manual signaling feature, one user can signal another user. When a user presses the manual signaling button, the other user hears a 2-second ring. The status lamp of the user who presses the button lights for two seconds.

If the telephone of the intended recipient of the signal is already alerting, the system:

- Does not generate the 2-second ring
- Causes the manual signaling button lamp of the user who presses the button to flicker briefly

Administering Manual Signaling

The following steps are part of the administration process for the Manual Signaling feature:

- [Assigning a manual signaling button for a multiple-call appearance telephone user](#)

This section describes:

- Any prerequisites for administering the Manual Signaling feature
- The screens that you use to administer the Manual Signaling feature
- Complete administration for the Manual Signaling feature

Screens for administering Manual Signaling

Screen name	Purpose	Fields
Station (multiappearance)	Assign a signal button to the telephone of a user, and specify the extension that rings when the user presses the button.	Any available button field in the Button Assignments area

Assigning a manual signaling button for a multiple-call appearance telephone user

To assign a manual signaling button for a multiple-call appearance telephone user:

1. Type **change station *n*** where *n* is the telephone number of the extension to which you want to assign a manual signaling button. Press **Enter**.
The system displays the **Station** screen for the extension that you requested.
2. Click **Next** until you see the **Button Assignments** area ([Figure 237: Station screen](#) on page 936).

Figure 237: Station screen

change station 32006

Page 3 of 4

STATION

SITE DATA

Room:Headset? n

Jack:Speaker? n

Cable:Mounting: d

Floor:Cord Length: 0

Building:Set Color:

ABBREVIATED DIALING

List1: personal 1List2:List3:

BUTTON ASSIGNMENTS

1: call-appr5: signalExt:

2: call-appr6:

3: call-appr7:

4:8:

3. Type **signal** next to the number of the button that you want the user to use for manual signaling.

When you type **signal** next to the button number, the system displays an **Ext:** field.

4. Type the extension of the recipient of the signal in the **Ext:** field.
5. Press **Enter** to save your changes.

End-user procedures for Manual Signaling

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Manual Signaling:

To use manual signaling:

- Press the manual **signal** button.

Reports for Manual Signaling

The following reports provide information about the Manual Signaling feature:

- None

Considerations for Manual Signaling

This section provides information about how the Manual Signaling feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Manual Signaling under all conditions. The following considerations apply to Manual Signaling:

- None

Interactions for Manual Signaling

This section provides information about how the Manual Signaling feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Manual Signaling in any feature configuration.

- Data Modules

If you administer a manual signaling button for a data module, the system denies any attempt to activate the button.

- Vector Directory Number (VDN)

A manual signaling button cannot point to a VDN.

Meet-me Conference

Use the Meet-me Conference feature to set up a dial-in conference of up to six parties. The Meet-me Conference feature uses Call Vectoring to process the setup of the conference call.

Detailed description of Meet-me Conference

This section provides a detailed description of the Meet-me Conference feature.

With the Meet-me Conference feature, a station user can host a dial-in conference of up to six parties. You can set up the Meet-me Conference extension to require an access code. If you administer an access code, all parties must correctly enter the access code to join the conference. If the extension is one of your Direct Inward Dialing (DID) numbers, any internal or remote access users, or external parties, can dial the Meet-me Conference extension.

When a caller dials into a Meet-me Conference, the system plays an announcement. The announcement tells the caller to enter an access code, if an access code is required. If the caller enters the correct access code, the caller is added to the conference. If no other parties are on the conference, an announcement tells the caller that he is the first caller to join the conference. If other parties are already on the call, an announcement tells the caller that he is joining a conference that is already in progress. All parties who are already on the conference and the newly added party hear an entry tone. When a party drops out of the conference, the remaining parties hear an exit tone.

Administering Meet-me Conference

The following steps are part of the administration process for the Meet-me Conference feature:

- [Creating or changing a Meet-me Conference vector](#)
- [Creating a Meet-me Conference VDN](#)

This section describes:

- Any prerequisites for administering the Meet-me Conference feature
- The screens that are required to administer the Meet-me Conference feature
- Complete administration procedures for the Meet-me Conference feature

Prerequisites for administering Meet-me Conference

You must complete the following actions before you can administer the Meet-me Conference feature:

- On the **Optional Features** screen, ensure that the **G3 Version** field is set to **V11** or later. If the **G3 Version** field is not set to **V11** or later, your system is not enabled for the Meet-me Conference feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

- On the **Optional Features** screen, click **Next** until you see the **Enhanced Conferencing** field. Ensure that this field is set to **y**. If the **Enhanced Conferencing** field is set to **n**, your system is not enabled for the Meet-me Conference feature. Contact your Avaya representative before you continue with this procedure.

Screens for administering Meet-me Conference

Screen Name	Purpose	Fields
Optional Features	Ensure that you have Communication Manager version 1.3 (V11) or greater.	G3 Version
	Ensure that Enhanced Conferencing is enabled.	Enhanced Conferencing
Call Vector	Create a Meet-me Conference vector.	All
Vector Directory Number	Set up a VDN for Meet-me Conference.	● Extension ● Name ● Vector Number ● Meet-me Conferencing ● Conference Access Code ● Conference Controller
Meet-me Vector Directory Number	View a list of existing Meet-me Conference VDNs.	All

Creating or changing a Meet-me Conference vector

To create or change a vector for a Meet-me Conference:

1. Type **change vector *n***, where *n* is the number of the vector that you want to create or change. Vector numbers must be between 1 and 256. Press **Enter**.

The system displays the **Call Vector** screen ([Figure 238: Call Vector screen](#) on page 941).

Figure 238: Call Vector screen

change vector 129		Page 1 of 3	
		CALL VECTOR	
Number: 129		Name: _____	
Multimedia? n	Attendant Vectoring? n	Meet-me Conf? y	Lock? n
Basic? y	EAS? n G3V4 Enhanced? y	ANI/II-Digits? y	ASAI Routing? n
Prompting? y	LAI? n G3V4 Adv Route? y	CINF0? y BSR? n	Holidays? n
01 _____			
02 _____			
03 _____			
04 _____			
05 _____			
06 _____			
07 _____			
08 _____			
09 _____			
10 _____			
11 _____			

2. In the **Meet-me Conf** field, type **y** to designate the vector as a Meet-me Conference vector.
3. Use the numbered fields to create or change a Meet-me Conference vector, as shown in the examples in [Figure 238: Call Vector screen](#) on page 941 and [Figure 239: Call Vector screen](#) on page 942. See [Options for creating vector steps](#) on page 943 and [How the vector processes a call](#) on page 944 for more information on how to create a vector.

Figure 239: Call Vector screen

change vector 90
Page 1 of 3

CALL VECTOR

Number: 90		Name: Enh Conf Vec	
	Attendant Vectoring? n	Meet-me Conf? y	Lock? y
Basic? y	EAS? n G3V4 Enhanced? n	ANI/II-Digits? n	ASAI Routing? n
Prompting? y	LAI? n G3V4 Adv Routs? n	CINFO? n BSR? n	Holidays? n

01 collect	6 digits after announcement 12340
02 goto	step 6 if digits = meet-me-access
03 collect	6 digits after announcement 12341
04 goto	step 6 if digits = meet-me-access
05 disconnect	after announcement 12342
06 goto	step 11 if meet-me-idle
07 goto	step 14 if meet-me-full
08 announcement	12343
09 route-to	meetme
10 stop	
11 announcement	12344

Figure 240: Call Vector screen

change vector 90
Page 2 of 3

CALL VECTOR

Number: 90		Name: Enh Conf Vec	
	Attendant Vectoring? n	Meet-me Conf? y	Lock? y
Basic? y	EAS? n G3V4 Enhanced? n	ANI/II-Digits? n	ASAI Routing? n
Prompting? y	LAI? n G3V4 Adv Routs? n	CINFO? n BSR? n	Holidays? n

12 route-to	meetme
13 stop	
14 disconnect	after announcement 12345
15 stop	
16	
17	
18	
19	
20	
21	
22	

4. Press **Enter** to submit the vector.

Note:

If a vector allows a new party to join a conference immediately, and the party is an H.323 IP trunk user, the caller might not have a talk path with the other parties in the conference. To prevent this situation, include a short delay in the vector at a point before a new party joins the Meet-me Conference. This delay can be a step to collect digits, a 1-second delay, or an announcement. Since Meet-me vectors are always configured with announcements and digit collections, this situation is rarely an issue.

Options for creating vector steps

- **collect**

When the **Meet-me Conf** field is enabled, the **collect** vector step collects the next six digits. The vector step then uses those digits as the access code for a Meet-me Conference call. See vector steps 1 and 3 in the example in [Figure 239: Call Vector screen](#) on page 942.

- **goto**

The **goto** vector step has three conditions:

- meet-me-idle

The meet-me-idle condition routes the first caller who accesses a Meet-me Conference to the conference call. An announcement step that tells the caller that he is the first party to join the conference can be played. See vector steps 6 and 11 in the example in [Figure 239: Call Vector screen](#) on page 942.

- meet-me-full

The meet-me-full condition is used when the Meet-me Conference already has the maximum of six parties on the call. See vector steps 7 and 14 in the example in [Figure 240: Call Vector screen](#) on page 942.

- meet-me access

The meet-me access condition ensures that the access code is valid. If the access code that the caller dials is the same as the access code that is administered for the VDN, vector processing continues. See vector steps 2 and 4 in the example in [Figure 239: Call Vector screen](#) on page 942.

- **route-to**

The **route-to** vector step has one condition:

- meetme

This condition adds the caller to the Meet-me Conference call, and all parties on the call hear an entry tone. The meetme condition is valid when the caller enters the correct access code, and the number of parties who are on the call already is less than six. See vector steps 9 and 12 in the example in [Figure 240: Call Vector screen](#).

If the **route-to meetme** step fails, vector processing stops, and the caller hears a busy tone.

How the vector processes a call

This section describes what occurs when a caller dials the Meet-me Conference telephone number that is managed by the vector in [Figure 239: Call Vector screen](#) on page 942 and [Figure 240: Call Vector screen](#) on page 942.

The caller hears announcement 12340. Announcement 12340 says, "Welcome to the Meet-me Conferencing service. Enter your conference access code." The caller dials the access code 937821. The **collect** vector step 1 collects the access code digits. If the access code is valid, the vector processing continues with vector step 6.

If the access code is invalid, vector step 3 plays announcement 12341. Announcement 12341 says, "The access code you entered is invalid. Please enter the access code again."

If the caller dials the wrong access code again, vector step 5 plays announcement 12342. Announcement 12342 says, "This access code is invalid. Please contact the conference call coordinator to make sure you have the correct conference telephone number and access code. Goodbye." The caller is disconnected.

Vector step 6 is only valid for the first caller into the Meet-me Conference. The meet-me-idle condition routes the first caller to announcement 12344, according to vector step 11. The announcement says, "You are the first party to join the call." The system then routes the caller to the Meet-me Conference call by vector step 12, and vector processing stops.

Vector step 7 is used when the Meet-me Conference maximum of six parties are already on the call. The meet-me-full condition disconnects the caller after announcement 12345 plays, according to vector step 14. Announcement 12345 says, "This Meet-me Conference is filled to capacity. Please contact the conference call coordinator for assistance. Goodbye."

If a caller dials the correct access code, is not the first caller, and the conference is not full, processing continues with vector step 8. Announcement 12343 plays. The announcement says, "Your conference call is already in progress." The system then routes the caller to the Meet-me Conference call by vector step 9, and vector processing stops.

When a caller enters the conference, all parties on the call hear an entry tone. When a party drops out of the conference, the remaining parties hear an exit tone.

Creating a Meet-me Conference VDN

To create a Meet-me Conference vector directory number (VDN):

1. Type **add vdn next**, or **add vdn n**, where **n** is the extension that you want to use for the VDN. Note that if the VDN extension is one of your Direct Inward Dialing (DID) numbers, external users can access the conference VDN. If the VDN extension is not part of the DID block, only internal callers on the network, or remote access callers, can access the conference. Press **Enter**.

The system displays the **Vector Directory Number** screen ([Figure 241: Vector Directory Number screen](#) on page 945).

Figure 241: Vector Directory Number screen

VECTOR DIRECTORY NUMBER
Extension: 36090
Name: Meet-me Conference VDN
Vector Number: 90
Meet-me Conferencing? y
COR: 1
TN: 1

-
2. In the **Extension** field, type the extension for the VDN. Or, if you typed the extension in Step 1 as part of the **add vdn** command, the system automatically displays the extension in the **Extension** field.
 3. (Optional) In the **Name** field, type a name of up to 27 characters to identify this VDN.
 4. In the **Vector Number** field, type the number for this vector. Or, if you typed **add vdn next** in Step 1, the system automatically displays the next available vector number in the **Vector Number** field.
 5. In the **Meet-me Conferencing** field, type **y**.
 6. Click **Next** until you see the **Meet-me Conference Parameters** page of the **Vector Directory Number** screen ([Figure 242: Meet-me Conference Parameters screen](#) on page 945).

Figure 242: Meet-me Conference Parameters screen

VECTOR DIRECTORY NUMBER
MEET-ME CONFERENCE PARAMETERS:
Conference Access Code: 937821
Conference Controller: 80214

-
7. In the **Conference Access Code** field, assign a 6-digit access code for the Meet-me Conference. Avaya recommends that you always assign an access code for a Meet-me Conference. However, if you do not want to assign an access code, leave the **Conference Access Code** field blank. Once you assign an access code, the system displays an asterisk (*) in this field for subsequent change, display, or remove operations by all users except the init superuser login. An administrator who uses the init login sees the actual access code instead of an asterisk.

8. In the **Conference Controller** field, type the extension of the person who is responsible to control or change the Meet-me Conference access code. If you type an extension, a user at that extension can use a Feature Access Code (FAC) to change the access code. If you leave the **Conference Controller** field blank, any station user to whom console permissions are assigned can change the access code. Remote access users can also use a FAC to change a Meet-me Conference access code.
9. Press **Enter** to submit the VDN.

To view a list of existing Meet-me Conference VDNs:

- Type **list meet-me-vdn**. Press **Enter**.

The system displays the **Meet-me Vector Directory Number** screen ([Figure 243: Meet-me Vector Directory Number screen](#) on page 946).

An asterisk (*) in the **Access Code** field indicates that an access code is assigned for that Meet-me VDN. If the **Access Code** field is blank, no access code is assigned. An administrator who uses the *init* login sees the actual access code instead of an asterisk.

Figure 243: Meet-me Vector Directory Number screen

list meet-me-vdn

MEET-ME VECTOR DIRECTORY NUMBER						
Name	Access			Vec Control		
	Ext	Code	COR	TN	Num	Ext
Secure Meet-me Conference	4000	*	1	1	1	
Nonsecure Meet-me Conference	4006		1	1	2	84590

End-user procedures for Meet-me Conference

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures:

- [Accessing a Meet-me Conference as an attendee](#)
- [Changing a Meet-me Conference access code](#)
- [Using Selective Conference Party Display, Drop, and Mute](#)

Accessing a Meet-me Conference as an attendee

To access a Meet-me Conference as an attendee:

1. Dial the Meet-me Conference telephone number. If an access code is required, a recorded announcement tells you to enter the access code.
2. Enter the Meet-me Conference access code.

The system verifies the access code, and connects you to the Meet-me Conference. You hear an entry tone when you join the conference.

If the maximum of six parties are already connected to the Meet-me Conference, a recorded announcement tells you that the Meet-me Conference is full.

Changing a Meet-me Conference access code

Both local and remote access telephone users can change access codes. However, an access code must first be administered through system administration before a telephone user can change a code. Access codes must be removed through system administration.

To change a Meet-me Conference access code:

1. Dial the Feature Access Code (FAC) for Meet-me Conference.
2. When you hear dial tone, dial the Meet-me Conference VDN, and then press the pound key (#).
3. Dial the current access code, and then press the pound key (#).
4. When you hear dial tone, dial the new access code, and then press the pound key (#).
5. Dial the new access code again, and then press the pound key (#).
6. When you hear the confirmation tone, hang up the telephone.

If any errors occur during this operation, you hear intercept tone, and the access code is not changed. You must start over.

Using Selective Conference Party Display, Drop, and Mute

You can use this feature from a digital display station or from an attendant console. In this example, stations A, C, and D are on a conference call. Caller B is on the conference call that uses an outside trunk or a cellular telephone.

1. Station A presses the Conference Display button.

The LED for the Conference Display button lights. The station displays the name and the number for station C, if this information is available.

Meet-me Conference

2. Station A can press the Conference Display button repeatedly to cycle through all parties who are on the call.
3. When the name and the number for station C is displayed on station A, station A presses the Drop button, or the Forced Release button on the attendant console.
Station C is dropped from the conference call. Callers A, B, and D remain on the conference call. The display for station A now shows one of the other parties on the call.
4. Caller B from an outside trunk puts the conference call on hold. This action adds music-on-hold to the conference call.
5. Station A presses the Conference Display button until the station displays the name and the number for Caller B.
6. Station A presses the Far-End Mute button.

Note:

You can activate Far-end Mute only for trunks, and not for telephones.

Caller B is put into "listen-only" mode, and the music-on-hold is removed from the conference call. The Station A display indicates that the outside trunk call (Caller B) is muted.

7. Caller B selects the conference call appearance to return to the conference call. To exit "listen-only" mode, the outside trunk caller presses the pound key (#).

Caller B is again active on the conference call.

8. Station A presses the Exit button, or the Normal button on the attendant console.

Station A returns to normal mode. Conference 3 is displayed on station A. If station A is inactive for 60 seconds, Station A returns automatically to normal mode.

If the Selective Conference Party Mute feature is activated without the knowledge of the muted party, that party might think that a problem exists with the connection when no one responds on the conference call. Users must be instructed about this new feature, and how to return to the call if the users are muted. If the muted party does not know how to return to the call, another user on the conference call can use the Far-End Mute button to unmute the party.

Rotary telephone users who are muted by way of the Selective Conference Party Mute feature cannot add themselves back into the conference call. Another user on the conference call must use the Far-End Mute button to unmute the party.

Reports for Meet-me Conference

The following reports provide information about the Meet-me Conference feature:

- None.

Considerations for Meet-me Conference

This section provides information about how the Meet-me Conference feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Meet-me Conference feature under all conditions.

- **Attendant Intrusion**

An attendant can intrude on a station that is part of a Meet-me Conference, as long as the conference does not already include the maximum number of parties.

- **Bridged Appearances**

Bridged appearance users can be added to a Meet-me Conference, and count against the total number of conference parties. As bridged appearance users join a Meet-me Conference, the users are not prompted to provide an access code. Bridged appearance users also receive no announcements, nor are entry or exit tones applied when the users are added to or dropped from the call. Avaya assumes that this scenario would only take place with the knowledge of the user of the appearance that originally dialed into the Meet-me Conference. That user can use the Exclusion feature to prohibit the bridged user from being a part of the Meet-me Conference call.

- **Busy Verification**

If the system maximum of stations in a conference call is five or less, a station or an attendant can verify another station that is part of a Meet-me Conference. If the system maximum of stations in a conference call is six, a station or an attendant can verify another station that is part of a Meet-me Conference, as long as the conference does not already include the maximum number of parties.

- **Call Vectoring**

If a Meet-me Conference VDN is administered to use a vector that has no steps, the call attempt is dropped, and a vector event is generated.

- **Capacity issues**

A Meet-me Conference call can have a maximum of six parties on the call. Additional parties cannot join a Meet-me Conference once the maximum of six parties is reached.

- **Changing vector types**

To change a Meet-me Conference vector to a non Meet-me Conference vector, you must first remove all vector steps. To change a non-Meet-me Conference vector to a Meet-me Conference vector, you must first remove all vector steps.

- **Class of Service (COS)**

A user must have a COS that includes console permissions to change a Meet-me Conference access code from his own telephone.

Meet-me Conference

- Conference

Parties in a Meet-me Conference call can use the Conference feature to add other parties up to the system conference limit. When the parties are added to the call, the "entry" tone is not given. Two or more Meet-me Conference calls cannot be conferenced together.

- Conference Tone

The purpose of the conference tone feature is to ensure that no one can be added to a call without the knowledge of the other parties. The Meet-me Conference already has entry and exit tones for all parties who enter the conference through vector processing. If one of the parties conferences in another user through the station Conference feature, the other parties are not aware of the additional party because no entry tone is played. In this scenario, the conference tone should be played if required as part of the system parameters administration.

- Conference/Transfer Toggle/Swap feature limitations

The Conference/Transfer Toggle/Swap feature is unavailable on analog stations and the attendant console. The attendant console can use the Split Swap feature to perform a similar operation.

The station user who presses the Toggle Swap button must be in the talk state with one of the parties. If the button is pressed during ringback, the system ignores the button push.

Telephone users must not use the Selective Conference Party Display feature to scroll too rapidly through the displays. The station hyperactivity feature takes the station out of service if the user repeatedly scrolls through the displays at high enough rates. This action causes the system to reset, and drop the user from the call.

- Disabling Enhanced Conferencing

To disable the Enhanced Conferencing option on the **System Parameters-Customer Options** screen, you must first remove all Meet-me Conference VDNs and vectors.

- Drop

No controlling party exists in a Meet-me Conference. Therefore, if a caller who is on the conference call presses the Drop button, the system ignores the button push, and the last party who joined the conference call is not dropped from the call.

- Far-end Mute

Only one trunk on a Meet-me Conference bridge can be far-end muted at any given time.

- Removing stations

You cannot remove a station that is administered as a controlling station for a Meet-me Conference VDN unless you first remove the assignment on the VDN.

- Security issues

The Meet-me Conference feature can present a potential security problem. If you assign Meet-me Conference VDNs without access codes, a hacker can gain control of Meet-me Conference facilities and keep others from conducting legitimate business. A hacker can also potentially access the system, and use the system to make unauthorized calls. Avaya recommends that you administer access codes, and change the codes regularly to reduce the risk of unauthorized access to the system. If a user tries to change the access code of a Meet-me Conference and is unsuccessful, or uses an invalid access code, the system records an event to the Event Log.

- Service Observing

Service Observing by way of the VDN is not allowed for Meet-me Conference VDNs.

- Transfer

When a user transfers a call to a Meet-me Conference, the transfer can be completed during vector processing only when a single party is on soft hold and waiting to be transferred. If two or more parties are on soft hold and waiting to be transferred, the transfer can only be completed after the party who initiates the transfer is connected to the Meet-me Conference.

- Vectoring options

Attendant Vectoring and Meet-me Conference cannot both be enabled at the same time. If Enhanced Conferencing is enabled, but no other vectoring customer options are enabled, only Meet-me Conference vectors can be assigned. A non Meet-me Conference vector cannot be assigned to a Meet-me Conference VDN. A Meet-me Conference vector cannot be assigned to a non-Meet-me Conference VDN. No restrictions exist with regard to vector "chaining" between Meet-me Conference vectors and non Meet-me Conference vectors. When a call interflows from one type of vector processing to another, the call is removed from any queue, if applicable. The call is treated as a new call to vectoring, instead of a continuation of vectoring.

Interactions for Meet-me Conference

This section provides information about how the Meet-me Conference feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of the Meet-me Conference feature in any feature configuration.

- Bridged Appearances

If a station user who is active on a bridged appearance makes a conference or transfer, the user receives the enhanced displays based on the Class of Restriction (COR) of station of the user, and not the station with the primary extension.

- Call Detail Recording (CDR)

As parties join a Meet-me Conference, a call record is created, if a record is required by system administration. If a record is required, the called party is the Meet-me Conference VDN number. The duration is the length of time that the party is included in the call. An individual record for each party is generated when the party drops from the call.

One option for recording all calls to Meet-me Conference VDNs is to activate the Intraswitch CDR feature, and populate all system Meet-me Conference VDN numbers. If you use the Intraswitch CDR feature with the Meet-me Conference VDNs, set the condition code to **C** for all call records. If the Intraswitch CDR feature is inactive for Meet-me Conference VDNs, the creation and the content of call records depends on the trunk group translations for external callers to the Meet-me Conference. Internal callers to the Meet-me Conference do not generate any records if the Intraswitch CDR feature is inactive for either the Meet-me Conference VDN or the calling extension.

- Consult

If the covering party is talking to the principal after the covering party presses the Consult button, the covering party can use the Toggle Swap button to toggle back and forth between the caller and the principal.

- Direct Inward Dialing (DID)

If a Meet-me Conference VDN is one of your block of DID numbers, external users can access the conference VDN. If the VDN extension is not part of the DID block, only internal callers on the network or remote access callers can access the conference VDN.

- Pull Transfer

If station A is talking to station B and station B begins a transfer to station C, only station C can use the Pull Transfer feature to grab the call. Furthermore, if station B uses the Toggle Swap feature to return to station A and station C is now in a soft hold state, station C cannot use the Pull Transfer feature until station B toggles back and has station C in the talk state.

Troubleshooting Meet-me Conference

This section lists the known or common problems that users might experience with the Meet-me Conference feature.

Problem	Possible cause	Action
The conference call drops abruptly for no apparent reason.	The Vector Disconnect Timer field on the System Parameters - Features screen is set to a value that is shorter than the duration of the Meet-me Conference session.	Increase the value in the Vector Disconnect Timer field.
The sound volume is too low.	The affected conference participants connect through international trunks in which central office (CO) loss plans are set for too much loss.	On the Location Parameters screen, adjust the values in the End-to-End total loss (db) in a n-party conference field.

Modem Pooling

Use the Modem Pooling feature to enable switched connections between digital-data endpoints (data modules) and analog-data endpoints by way of pools of acoustic-coupled modems. The analog-data endpoint is either a trunk or a line circuit.

Detailed description of Modem Pooling

This section provides a detailed description of the Modem Pooling feature.

Data transmission between a digital-data endpoint and an analog-data endpoint requires conversion through a modem. Conversion is required because the DCP format that the data module uses is not compatible with the modulated signals of an analog modem. A modem translates DCP format into modulated signals and vice versa.

The Modem Pooling feature provides for the use of pools of integrated-conversion modems and combined-conversion modems.

Integrated-conversion modem pools have functionality that is integrated on the Pooled Modem circuit pack, providing two modems. Each one emulates a time-division multiplexing (TDM) cabled to a 212 modem. Integrated are modem pools not available in countries that use A-law companding.

Combined-conversion modem pools are TDMs that are cabled to any TDM-compatible modem. Combined-conversion modem pools can be used with all systems.

When the system needs a modem, the system queries the digital-data module that is associated with the call to determine if the options are compatible with the options that are supported by the modem pools. If the options are incompatible, the originating user receives intercept treatment. If the options are compatible, the system obtains a modem from the appropriate pool. If a modem is unavailable, the user receives reorder treatment.

The system can detect the need for a modem. Data calls from an analog-data endpoint require that the user indicate the need for a modem, because the system considers such calls to be voice calls. Users indicate this need by dialing the data-origination access code before the users dial the digital-data endpoint.

The system provides a Hold Time parameter. This parameter specifies the maximum time that any modem can be held but not used, while a data call is in queue.

The integrated-conversion modems support the following options:

- Receiver responds to remote loop
- Loss of carrier disconnect
- Send space disconnect

Modem Pooling

- Receive space disconnect
- CF-CB common
- Speed, duplex, and synch (administered)

Combined-conversion modems support the following:

- IBM bisynchronous protocols that are usually used in 3270 and 2780/3780 applications. Both require 2400 or 4800 bps, half-duplex, synchronous transmission.
- Interactive IBM-TSO applications that use 1200 bps, half-duplex, asynchronous transmissions
- DATAPHONE II switched-network modems that support asynchronous and synchronous communications, and autobaud at 300, 1200, or 2400 bps
- Avaya Communication Manager operating at up to 19.2 kbps
- Different pools with different data-transmission characteristics

Administering Modem Pooling

The following steps are part of the administration process for the Modem Pooling feature:

This section describes:

- The screens that you use to administer the Modem Pooling feature

Screens for administering Modem Pooling

Screen name	Purpose	Fields
Modem Pool Group	Define modem pool groups.	All
Feature Access Code (FAC)	Set data origination access.	Data Origination Access Code
Data Module	Define specific data modules.	All

Reports for Modem Pooling

The following reports provide information about the Modem Pooling feature:

- None

Considerations for Modem Pooling

This section provides information about how the Modem Pooling feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Modem Pooling under all conditions. The following considerations apply to Modem Pooling:

- On data calls between a data module and an analog-data endpoint, Return-to-Voice releases the modem and returns the modem to the pool. The phone user connects to the analog-data endpoint.
- For traffic purposes, the system accumulates data on modem-pooling calls separately from voice calls. Measurements on the pools also accumulate.
- When a telephone user places a data call to a digital-data endpoint, does not transfer the call to another digital-data endpoint, and uses a modem or an acoustically-coupled modem, the user dials the data-origination access code before the user dials the distant endpoint.
- Modem Pooling is not restricted. Queuing for modems is not provided, although calls queued on a hunt group retain reserved modems.
- Avoid the use of modems from different vendors within a combined pool. Modems from different vendors might have different transmission characteristics.
- When you administer data-transmission characteristics (such as speed, duplex, and synchronization mode), they must be identical to the TDM and the optional modem selections made by the customer.
- Each data call that uses Modem Pooling uses four time slots, instead of two. As a result, heavy usage of Modem Pooling can affect TDM bus-blocking characteristics.
- Tandem servers or switches do not insert a pooled modem. The originating server or switch inserts a pooled modem.

Interactions for Modem Pooling

This section provides information about how the Modem Pooling feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Modem Pooling in any feature configuration.

- Call Detail Recording (CDR)

Data call CDR records the use of modem pools on trunk calls.

- Data Call Setup

Data calls to or from a TDM cannot use Modem Pooling.

- Data Privacy and Data Restriction

The insertion of a modem pool does not turn off Data Privacy or Data Restriction.

- Data-Only Off-Premises Extensions

Calls to or from a Data-Only Off-Premises Extension cannot use Modem Pooling, when this type of digital-data endpoint uses a TDM.

- Digital-multiplexed Interface (DMI) Trunks

If you place a data call from a local analog-data endpoint to a DMI trunk, you must dial the data-origination access code to obtain a modem. Data calls on DMI trunks to local analog-data endpoints automatically obtain modems.

- DS1 Tie Trunk Service

Connect modems are used for Modem Pooling to AVD DS1 tie trunks by Data Terminal Dialing or by dialing the feature access code (FAC) for data origination.

Multifrequency Signaling

Use the Multifrequency (MF) signaling feature to perform signaling used between media servers and the Central Office (CO). It is similar to dual-tone multifrequency (DTMF) signaling in that tones convey the dialed number.

With MF signaling, the signal is usually a combination of two frequencies from a group of 5 or 6 frequencies (2/5 or 2/6). The origination and destination servers or switches exchange tones that have specific meanings according to the MF protocol.

Detailed description of Multifrequency Signaling

This section provides a detailed description of the Multifrequency Signaling feature.

Avaya Communication Manager supports two frequency groups:

- R2-multifrequency compelled signaling (R2-MFC) frequency
- R1 frequency (for Spain and Russia)

R2-MFC is a version of MFC recommended by the International Telecommunication Union (ITU). It provides signaling between a CO and a media server over analog or digital CO, Direct Inward Dialing (DID), or Direct Inward and Outward Dialing (DIOD) trunks. It also provides signaling between any 2 servers running Communication Manager.

Communication Manager provides MF signaling that complies with ITU regulations and national regulations for specific countries. It provides these types of MF signaling: MFE MF Shuttle, and multifrequency compelled (R2-MFC). These protocols signal the called number, the calling party's number (ANI), and information about the type of call or type of caller (category).

Communication Manager allows prefix digits for ANI sent on outgoing calls to be defined per server, or per the originator's class of restriction.

If a call is a tandem call and the incoming and outgoing trunk use different protocols, Communication Manager makes no attempt to convert between the various protocol's meanings for category. Instead,

- the server uses the incoming trunk's COR assigned category if the outgoing trunk is Russian or R2-MFC, and
- the server uses ARS call types if the outgoing trunk is MFE.

The server running Communication Manager provides the incoming ANI to all features on Communication Manager that need to identify the calling party.

MFE

MFE, for Country code 11 (Spain), uses R1 frequency and compelled signaling. It is available on CO and DID trunk groups. There are four types of MFE signaling:

- Public 2/5
- Public 2/6
- Ibercom 2/5
- Ibercom 2/6

MF Shuttle

MF shuttle signaling, for country code 15 (Russia), uses R1 frequency and noncompelled signaling. With MF shuttle signaling, it is possible to change to decadic rotary pulse in the middle of address signal exchange. MF shuttle signaling is available on CO, DID, and DIOD trunk groups.

Also, ANI transmission, for Country code 15, uses a gapless R1 MF signal and is completed within 800ms. This is available on an outgoing CO trunk group.

R2-MFC

R2 multifrequency compelled (R2-MFC) signaling allows each country to define the meanings of the R2 frequency combinations.

Guidelines for administering Multifrequency Signaling

To administer MF signaling, you must first identify the origination and destination server or media servers. The one making the call is the origination server. The one answering the call is the destination server.

- The origination server/media server creates forward signals, classified as group I and group II signals.
- The destination server/media server creates backward signals, classified as group A and group B signals.

Group I and group A signals comprise the basic signaling for the dialed number. More elaborate signaling requires Group II and group B signals. Signal meanings and timer values can be administered.

The following sequence shows a typical interaction between the origination server (forward group I and group II signals) and destination server (backward group A and group B signals).

Forward		Backward
Group I	digit -->	
	<-- A.1	Group A
	digit -->	
	<-- A.1	
	digit -->	
	<-- A.1	
	digit -->	
	<-- A.1	
	digit -->	
	<-- A.3	End of dial
Group II	II.2 -->	
	<-- B.x	Group B

Second, you assign the correlation between signal codes and their meanings.

1. Assign a code to each message. The code consists of a group category, like group II or A, and a number.
 - For example, you might assign code A.1 to the message "next-digit."
2. Assign a signal to each identifying code.
 - In every country, the frequencies (levels might differ by country) assigned to the identifying codes are the same. However, the messages assigned to the identifying codes can be different.

For example, in Switzerland the B.6 code and its associated signal convey the *free* message, while in Thailand, *free* is conveyed by the B.1 code and its associated signal. But in both Switzerland and Thailand, the frequency associated with the B.1 code is the same.

As another example, you might assign the signal "busy" to the B.1 code.

To receive Russian incoming ANI:

- On the **DID or DIOD Trunk Group** screen, set the **Country** field to **15** and the **Protocol Type** field to **inloc**.
- On the **AAR and ARS Digit Analysis Table** screen, set the **ANI Req** field to **y**, or on the **AAR and ARS Digit Conversion Table** screen, set the **ANI Req** field to **y**.

Administering Multifrequency Signaling

The following steps are part of the administration process for the Multifrequency Signaling feature:

- None

Screens for administering Multifrequency Signaling

Screen name	Purpose	Fields
Multifrequency-Signaling Related Parameters	Sets the system parameters for multifrequency signaling	All
AAR and ARS Digit Conversion Table	Sets automatic number identification	ANI Req'd
AAR and ARS Digit Analysis Table	Sets automatic number identification	ANI Req'd

Reports for Multifrequency Signaling

The following reports provide information about the Multifrequency Signaling feature:

- None

Considerations for Multifrequency Signaling

This section provides information about how the Multifrequency Signaling feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Multifrequency Signaling under all conditions. The following considerations apply to Multifrequency Signaling.

The following considerations apply to R2-MFC only:

- Both non-group II signaling and group II signaling are supported on incoming MF signaling calls. The group II signaling protocol has an extra signal that provides caller-category information. Only group II signaling is supported on outgoing MF signaling calls.

- MF signaling also can be used in tandem trunk groups. After address signals are collected from an incoming group II MF signaling call, the call can route to a group II MF signaling trunk.
- Both incoming and outgoing MF signaling calls support ANI displays, ANI information and the CDR records the information.
- When Avaya Communication Manager uses an open numbering plan, the end-of-dial signal must be defined in the incoming Group I signal administration. After sending all address digits, the CO sends the end-of-dial signal to Communication Manager.
- If Avaya Communication Manager makes an outgoing call to the CO that uses an open numbering plan, the CO must send the signal A.1 to Communication Manager after sending the last address digit to the CO. Then, the CO should time out and send a pulsed signal A.3 to Communication Manager requesting the Group II signal.
- Avaya Communication Manager offers the option to record the Calling Party Category in the CDR. For incoming external calls, this comes from the Group II signal. For internal calls and station-originated external calls, this comes from the COR of the originating station. For tandem calls, this value comes from the Group II signal, determined by the COR of the originating trunk group. The CDR device is capable of receiving this information.
- You can assign Calling Party Category and Called Party Category on a trunk-by-trunk basis.
- You can record an announcement to play when outgoing R2-MFC trunk calls do not complete. This applies when Communication Manager receives either group A or B signals from the called Central Office or other media server or switch.

Interactions for Multifrequency Signaling

This section provides information about how the Multifrequency Signaling feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Multifrequency Signaling in any feature configuration.

- **ASAI**
ANI collected from incoming R2-MFC signaling can be used with ASAI.
- **Abbreviated Dialing**
Although calls dialed automatically from an abbreviated dialing privileged list complete without COR checking, ANI prefix and ANI truncation still apply.

Multifrequency Signaling

- Attendant Console

If the attendant assists or extends a call for a station using Straightforward Outward Completion and Through Dialing, and if the attendant has not yet released the call when the request for ANI comes in from the far end, the attendant's COR is used to select the ANI for the call. If the attendant has already released the call when the request for ANI comes in from the far end, the attendant's COR is used to select the ANI for the call.

- Authorization Codes

The COR of the authorization code as administered on the authorization-code screen is not used for ANI prefix determination, even if the originating endpoint enters an authorization code before call processing for an outgoing call seizes an outgoing trunk. If the originating endpoint is an extension, the extension's ANI is used. If the originating endpoint is an incoming trunk, the ANI for PBX is used.

- Bridging

The ANI of a telephone's primary extension also applies to calls originated from a bridged call appearance of that extension on another terminal. ANI prefix and ANI truncation applies to the primary extension number of bridged call appearances.

- Call Detail Recording (CDR)

CDR records ANI collected from incoming MF signaling.

For India MFC, on incoming calls, ANI digits may be appended with zeroes if the actual ANI digits are less than the administered ANI-length; in those cases, the zero-digits appear on CDR.

- Call Redirection

A call is redirected if any of the following are active: Call Forwarding, Call Coverage, Send All Calls, or Night Service.

- Call Vectoring

Call Vectoring can now use ANI collected from incoming MFC signaling.

The ANI of a call vector is not used when a call vectoring route-to command routes a call over an outgoing trunk. Instead, the ANI of the originating party is sent.

- **DID** No Answer Timer

DID No Answer Timer is applied to MF signaling **DID** calls.

- Distributed Communications System (DCS)

In a DCS arrangement, the ANI sent to the CO is determined by the **ANI for PBX on PBX_B**, but the category sent to the CO is determined by the **Category for MF ANI** field on the **Class of Restriction** screen for the incoming DCS trunk or by the type of call.

- Expert Agent Select (EAS)

For ANI, the EAS agent's login extension number and COR overrides the extension number and COR of the physical terminal where the agent is logged in. ANI prefix and ANI truncation apply to logged in EAS agents.

- Hunt Groups and Automatic Call Distribution (ACD) Splits

For ANI, a physical terminal's extension number and COR overrides the extension number and COR of the hunt group or ACD split that is a member of or logged into. ANI prefix and ANI truncation apply to terminals that are members of hunt groups or logged into ACD splits.

- Intercept treatment

For **DID MF** signaling calls that are denied, you can administer whether the corresponding B.x signal or intercept tone should be sent to the **CO**. The default is to send the administered **DID/TIE/ISDN** Intercept Treatment. If the option to send the B.x signal is set, then:

- For Group II calls, the B.x signal for the intercept is sent to the **CO**.
- For non-Group II calls, if the **CO** dials an invalid number, the trunk is locked (regardless of this option). If the **CO** dials a number that is valid but not assigned, intercept tone is sent to the **CO**.

- Multimedia Call Handling (MMCH)

For call origination, multimedia complexes use the COR assigned to their telephones. ANI prefix and ANI truncation will apply to the telephones assigned to multimedia complexes.

- Off-Net Call Coverage or Call Forwarding

If the originating endpoint is an extension, the extension's ANI is used. If the originating endpoint is an incoming trunk that can supply ANI, the ANI received from the incoming trunk is used. If the originating endpoint is neither of the above, the ANI for PBX is used.

- Personal Station Access (PSA)

For ANI, the PSA extension number and COR overrides the extension number and COR of the physical terminal where the PSA extension number is associated. ANI prefix and ANI truncation will apply to associated PSA extension numbers.

- Remote Access

The COR of a remote access barrier code is not used for ANI prefix determination when the originating end point dials a remote access extension and then places a call. If the originating endpoint is an extension, the extension's ANI is used. If the originating endpoint is an incoming trunk, the ANI for PBX is used.

- Station Set Displays

When no ANI is possible, if station sets are equipped with display option, they do not display the ANI digits. Instead, the trunk group name displays. When ANI is possible, ANI displays on the station set.

Note:

For India Only. If ANI digits are padded with "zero," then zeroes also are displayed along with ANI digits.

Multifrequency Signaling

- Tandem / Offnet Calls

If ANI digits are received on incoming MFC calls, the ANI digits are sent to outgoing tandem/off-net calls.

Note:

For Russia Only. The ANI is requested on incoming trunks only when all the address digits have been collected. When the incoming trunk on a tandem call is a Russian incoming local trunk administered to collect ANI, the server collects all ANI digits before seizing the outgoing tandem trunk. This happens even if ARS is administered with a "min" value low enough that it would be possible to determine an outgoing route through digit analysis.

Note:

For India Only. On an outgoing tandem-call, the default operation is to send the ANI-Not-Available forward signal if ANI is not available from the incoming trunk. However, in order to support this operation, leave the **ANI for PBX** field blank, and define the ANI-Not-Available signal.

Multi-Location Dial Plan

Use the Multi-Location Dial Plan feature to preserve dial plan uniqueness for extensions and attendants when you migrate to a single S8700 distributed network. Without this feature, dial plan uniqueness is not preserved when you migrate from multiple QSIG or distributed communication system (DCS) networks.

Migrating to a single distributed network reduces the number of systems a customer must maintain. With a single network, you administer one system and one dial plan. However, with a single distributed network, some features no longer work transparently across multiple locations as before the migration.

For example, in multiple QSIG or DCS networks, each location of a department store might have its own system. Therefore, the same telephone extension might represent a unique department in all stores. Extension 4321 might be the luggage department in all stores. Store employees at any location can dial 4321 and get the luggage department in the store.

If this customer migrates to a single distributed network, store employees can no longer dial 4321 to reach the local luggage department. The system cannot correctly analyze the digits and route the call to the correct store. Store employees now have to dial a complete telephone extension to reach the luggage department in the store.

This problem is solved with the Multi-Location Dial Plan feature. With the Multi-Location Dial Plan feature, Communication Manager adds the location prefix digits to the front of the dialed number. The software then analyzes the entire dialed string and routes the call based on the administration on the **Dial Plan Parameters** screen.

With the Multi-Location Dial Plan feature, a user can dial a shorted version of an extension instead of having to dial a complete extension. For example, the store employee can continue to dial 4321 instead of having to dial 765-4321 to reach the luggage department.

Without the Multi-Location Dial Plan feature in a single distributed network, a call that is routed to an attendant might not terminate at the local attendant. For example, if a school district migrates to a single distributed network, dialing the attendant access code may not route the call to the local school attendant. With the Multi-Location Dial Plan feature, the system routes the call to the correct attendant.

The Multi-Location Dial Plan feature provides dial plan capabilities that are similar to those of QSIG networks or DCS networks. These capabilities include:

- Extension uniqueness
- Announcements for each location
- Local attendant access
- Local Automatic Route Selection (ARS) code administration

On Linux platforms only, the Multi-Location Dial Plan feature also enhances the dial plan and the **Uniform Dial Plan Table** screen so that users can:

- Dial a shortened version of a telephone extension, and reach the same destination as before the migration
- Dial and reach a centralized local answering point
- Dial a local attendant feature access code (FAC) or ARS FAC, and access the same feature as before the migration

On Linux platforms only, you can also play administered announcements in a language that is based on location.

Detailed description of Multi-Location Dial Plan

This section provides a detailed description of the Multi-Location Dial Plan feature.

With the Multi-Location Dial Plan feature, users in a single distributed network can dial a local extension to reach a number in their area. Before this can happen, the administrator must first retranslate their dial plan and extensions. This feature inserts leading digits from the calling number to the called number for intralocation dialing.

This feature also provides a local centralized answering point for attendants. Finally, with this feature, you can administer multiple feature access codes for ARS and for attendants.

Location prefix

A new value is available in the **Insert Digits** field on the **Uniform Dial Plan Table** screen. This new value takes the location prefix of the caller from the **Locations** screen. The software adds the location prefix to the front of the called number. The software then analyzes the entire dialed string, and routes the call based on the administration on the **Dial Plan Parameters** screen.

- Non-IP telephones and trunks inherit the location number of the cabinet, the remote office, or the media gateway to which they are connected.
- IP telephones and trunks obtain their location number indirectly.
 - On the **Network Region** screen, you administer a location number that applies to all telephones in that IP region. If a location field is left blank on the **Network Region** screen, an IP telephone obtains its location from the location of the cabinet that contains the CLAN board.
 - IP trunks obtain the location from the location of their associated signaling group.

Either direct administration, which is only possible for remote office signaling groups, or the ways described for IP telephones, determines the location.

If the location prefix is not administered correctly, the software does not route calls correctly. A location prefix is not administered correctly if:

- You administer the prefix with incorrect digits
- The entry on the **Uniform Dial Plan Table** screen does not match the length of the location prefix

Feature Access Codes

- The software uses the **Auto Route Selection (ARS) - Access Code** fields on the **Feature Access Code (FAC)** screen when no value exists in the **ARS FAC** field on the **Locations** screen. If a value exists in the **ARS FAC** field on the **Locations** screen, the software uses that location **ARS FAC**. The **Auto Route Selection (ARS) - Access Code** fields on the **Feature Access Code (FAC)** screen are ignored.

If you use the **ARS FAC** field on the **Locations** screen, you lose the ability to administer two ARS codes on the **Feature Access Code (FAC)** screen.

The location **ARS FAC** is accessible only for calling numbers at locations that are administered with that **ARS FAC**. The software denies any attempt to use an **ARS FAC** at a location for which the FAC is not valid.

- The **Attendant Access Code** field on the **Feature Access Code (FAC)** screen has the same characteristics as the **attdd** call type on the **Dial Plan Analysis Table** screen.

You can administer only one attendant code. You can administer the attendant code either on the **Dial Plan Analysis Table** screen, or on the **Feature Access Code (FAC)** screen. You cannot administer the attendant code on both screens.

If you want to:

- Administer an attendant access code for different locations, use the **Attendant Access Code** field on the **Feature Access Code (FAC)** screen.
- Use one attendant code for all locations, administer the code as **attdd** in the **Call Type** field on the **Dial Plan Analysis Table** screen.

You cannot reuse the value that you use for the **attdd** call type for any FACs. Nor can you reuse the value for the **ARS FAC** or **Attdd FAC** on the **Locations** screen.

Attdd FAC, the attendant code on the **Locations** screen, is accessible only for calling numbers at locations that are administered with that attendant access code. The software denies any attempt to use an attendant code at a location for which the code is not valid.

- Only one attendant or ARS access code is valid for a location. The global ARS access code and the attendant access code, and the dialed string for the attendant call type, are valid for a location only if:
 - A local ARS access code does not exist, or
 - An attendant access code does not exist

Announcements

With multiple QSIG or DCS networks, multiple switches can handle announcements in multiple languages. Without the Multi-Location Dial Plan feature in a single distributed network, the software cannot play announcements in multiple languages.

With the Multi-Location Dial Plan feature, announcement extensions are stored as digit strings. The software routes these digit strings through Uniform Dial Plan (UDP) processing. This processing is similar to dialing a telephone extension. When the software dials a shortened extension for an announcement, the software prepends the location prefix onto the extension. With both the location prefix and the extension, the software can play the announcement to the caller in the proper language.

Invalid announcements

The software provides intercept treatment if the following announcements are invalid:

- DID/Tie/Intercept
- Controlled Outward Restriction Intercept Treatment
- Controlled Termination Restriction (Do Not Disturb)
- Controlled Station to Station Restriction
- Controlled Toll Restriction Intercept Treatment
- Invalid Number Dialed Intercept Treatment

The software skips and does not play the following announcements if the announcements are invalid:

- Analog Busy Auto Callback
- Direct Agent Announcement Extension
- Hospitality

The treatment for an announcement that is invalid during vector processing is the same as if the announcement did not exist. Call processing continues and does not wait. Any previous feedback that precedes the announcement continues.

- An announcement step continues at the next step.
- A wait step that references an announcement continues after any specified wait treatment expires.
- A disconnect step disconnects immediately.
- A collect step continues at the next step.

If the VDN of Origin Announcement (VOA) does not exist, vector processing bypasses the VOA, and delivers the call to the agent.

Maintenance

When you migrate to a single distributed network, you must re-administer your dial plan if you want to maintain extension uniqueness. You can administer the UDP so that users can dial a local extension at an individual location the same as before the migration.

If you administer local ARS FACs on the **Locations** screen, you lose the ability to administer two ARS codes. The ability to administer two ARS codes is currently provided only on the **Feature Access Code (FAC)** screen.

Administering Multi-Location Dial Plan

The following steps are part of the administration process for the Multi-Location Dial Plan feature:

- [Changing extensions](#)
- [Prepending numbers to the dialed string](#)
- [Setting up announcements](#)
- [Setting up a local centralized answering point](#)
- [Setting up multiple feature access codes for attendants](#)
- [Setting up multiple feature access codes for ARS](#)

This section describes:

- Any prerequisites for administering the Multi-Location Dial Plan feature
- The screens that you use to administer the Multi-Location Dial Plan feature
- Complete administration procedures for the Multi-Location Dial Plan feature

Prerequisites for administering Multi-Location Dial Plan

You must complete the following actions before you can administer the Multi-Location Dial Plan feature:

- On the **Optional Features** screen, ensure that the **Multiple Locations** field is set to **y**. If this field is set to **n**, your system is not enabled for the Multi-Location Dial Plan feature. Contact your Avaya representative for assistance.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

- On the **Daylight Savings Rules** screen, ensure that rules for daylight savings time are administered.

To view the **Daylight Savings Rules** screen, type **change daylight-savings-rules**. Press **Enter**.

For a complete description of the many **Optional Features** screens, and the **Daylight Savings Rules** screen, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Multi-Location Dial Plan

Screen name	Purpose	Fields
Optional Features	Ensure that the multiple locations feature is enabled.	Multiple Locations
Daylight Savings Rules	Ensure that rules for daylight savings time are administered.	All
Locations	● Set up a FAC to access ARS for a location. ● Set up a FAC to access an attendant for a location. ● Include the prefix for the specific location.	● ARS FAC ● Attd FAC ● Prefix
Change Station Extension	Change multiple extensions in the software from one extension to another simultaneously.	All
Uniform Dial Plan Table	Set up your dial plan.	All

Changing extensions

You can change multiple extensions in the software from one extension to another, simultaneously.

To change multiple extensions simultaneously:

1. Type **change extension-station *n***, where ***n*** is the extension number that you want to change. Press **Enter**.

The system displays the **Change Station Extension** screen ([Figure 244: Change Station Extension screen](#) on page 973).

**CAUTION:**

The **Change Station Extension** screen does not change the emergency location extension that is administered within the system. You cannot use this screen to change an extension that is administered as an emergency location extension on either the **Station** screen or the **IP Address Mapping** screen.

Figure 244: Change Station Extension screen

change extension-station xxxxxxxx		Page 1 of 1
CHANGE STATION EXTENSION		
Station Name: xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx		Port: xxxxxx
FROM EXTENSION		TO EXTENSION
-----		-----
Station: xxx-xxxx		xxx-xxxx
Message Lamp: xxx-xxxx		xxx-xxxx
Emergency Location Ext.: xxx-xxxx		xxx-xxxx
IP Parameter Emergency Location: xxx-xxxx		See IP-Network Map Form

2. In the **TO EXTENSION** fields:

- Type a new extension that you want the current extension changed to.
- Type a new extension for the message lamp extension.
- Type a new extension for the **emergency location ext.** field.
- In the **IP Parameter Emergency Location** field, the system displays the words **See IP-Network Map Form**.

You can change the **IP Parameter Emergency Location** field only on the **IP Address Mapping** screen. Use the **change ip-network-map** command.

3. Press **Enter** to save your changes.**Function**

When you complete and submit the **Change Station Extension** screen, all administration that was associated with the previous extension is now associated with the new extensions. This administration includes any references used in a vector, in coverage, and elsewhere in the system. Once you change an extension, the software removes all references to the previous extension.

If you change an extension that is also administered on an adjunct, you must also change the extension on the adjunct. Examples of adjuncts include voice mail and an Adjunct-Switch Application Interface (ASAI) link.

Exceptions

- The **change extension-station n** command does not change the administration that is associated with call forwarding digits and abbreviated dialing buttons on the current extension.
- To change a forwarded extension that is administered as a button, do not use the **change extension-station n** command. The extension for the call forwarded button is stored as digits rather than as a UID. Avaya recommends that you use the **list usage** command before you change any extensions.
- The **change extension-station n** command does not update the **ISDN BRI SPID** field for BRI telephones. To update this field, you must make manual changes on both the switch and the telephone.

Audits

- If you try to change an extension that is administered on the same switch as an **emergency location extension** on the **Station** screen or on the **IP Address Mapping** screen, the system displays the following warning message:

Extension exists as Emergency Location. Continue?

Click **yes** to process the change. Click **no** to stop the process.

- The **change extension-station n** command is be denied under the following conditions:
 - If the extension being changed is active on a call
 - If the administrator is accessing the extension
- If you attempt to change an extension that is administered on the same system as a **media complex extension** on the **Station** screen, the extension cannot be changed to a 6-digit or 7-digit number. The **media complex extension** field on the **Station** screen does not support 6-digit or 7-digit numbers.

For example, extension 50002 is an H.323 telephone extension. Extension 50002 is administered on extension 51234 as the media complex. You cannot use the **change extension-station n** command to change extension 50002 to 7050002 because the software does not support a 7-digit media complex number. You can, however, use the command to change 50002 to 52222, because 52222 is a 5-digit extension.

Prepending numbers to the dialed string

The software allows a new value in the **Insert Digits** field in the **Uniform Dial Plan Table** screen. The value is **Lx**. In the value **Lx**, x indicates a number from 1 to 5. The number x must match the number of digits in the **Prefix** field on the **Locations** screen. For example, if the **Prefix** field on the **Locations** screen contains three digits, assign the value **L3**.

When you use the value **Lx** in the **Uniform Dial Plan Table** screen, the software takes the value in the **Prefix** field from the **Locations** screen, and prepends the number of digits to the dialed string.

To prepend numbers to the dialed string:

1. Type **uniform-dialplan n**, where **n** is the number of the dial plan. Press **Enter**.

The system displays the **Uniform Dial Plan Table** screen ([Figure 245: Uniform Dial Plan Table screen](#) on page 975).

Figure 245: Uniform Dial Plan Table screen

change uniform-dialplan 3

Page 1 of 2

UNIFORM DIAL PLAN TABLE

Percent Full: 0

Matching			Insert			Node	Matching			Insert			Node
Pattern	Len	Del	Digits	Net	Conv	Num	Pattern	Len	Del	Digits	Net	Conv	Num
3	3	0	L3	ext	y							n	
5	5	1	005	aar	y							n	
538	7	0		aar	y							n	
6	5	1	006	aar	y							n	
852	7	0		aar	y							n	
					n							n	
					n							n	
					n							n	
					n							n	
					n							n	
					n							n	
					n							n	
					n							n	
					n							n	
					n							n	
					n							n	

2. In the **Insert Digits** field, type **L** and a number from 1 to 5. The number that you type must equal the number of digits in the **Prefix** field on the **Locations** screen. This number is the number of digits that the software prepends to the dialed telephone number.

For more information on the **Uniform Dial Plan Table** screen, see the *Administrator's Guide for Avaya Communication Manager*.

3. Press **Enter** to save your changes.

Setting up announcements

In addition to the shortened extensions, you must also administer announcements. If your organization has multiple locations with announcements in multiple languages, you must administer the announcement for each location, even if many of the announcements are identical.

For example, if your organization has 100 locations, announcements in 90 locations are in English. In the remaining 10 locations, announcements are in non-English languages. You must administer announcements in all 100 locations, even if 90 of the locations use the same English announcements.

For some announcements, such as the **DID/Tie/Intercept** announcement, you can administer only a single announcement. This restriction can create a problem in a single distributed network. For example, an S8700 Media Server might support multiple countries, and therefore require that announcements play in the language of the country. This example poses a problem because you can only administer a single announcement.

To accommodate several announcements that share a single administered field, use the Multi-Location Dial Plan feature. With the Multi-Location Dial Plan feature, the announcement that plays is based upon the calling number, and the **Location Prefix** field on the **Locations** screen.

For example, 4567 is the extension administered in the **DID/Tie/ISDN Intercept Announcement** field on the **System Features** screen. You can record multiple announcements for extension xxx-4567:

- 420-4567 in English
- 813-4567 in German
- 964-4567 in French
- 371-4567 in Spanish
- 628-4567 in a user-defined language

You must administer all announcements - 420-4567 in English, 813-4567 in German, 964-4567 in French, 371-4567 in Spanish, and 628-4567 in the user-defined language. When a person calls and is about to hear announcement 4567, the system inserts the prefix digits based on the location of the caller. The system then plays announcement 4567 in the proper language.

Setting up a local centralized answering point

With the Multi-Location Dial Plan feature, you can use vector routing or hunt groups to set up a local centralized answering point (LCAP). The LCAP gives users access to a local attendant.

With vector routing, you can administer a VDN with extension "0" with a vector "route-to" step for a shorter extension. You then administer the **Uniform Dialing Plan** screen with an entry for the shorter extension in the vector step. The purpose is to prepend digits from the calling party number. The system routes the call to the extension that you designate as the LCAP.

You can also use a hunt group to set up an LCAP. You administer the **Uniform Dialing Plan** screen so that the shorter extension for the hunt group prepends digits for the calling party number. One of the members of a local hunt group can be designated as the LCAP.

Note that if you use an LCAP, you cannot also use local access codes. LCAPs and multiple feature access codes for the attendant are mutually exclusive.

Setting up multiple feature access codes for attendants

Without the Multi-Location Dial Plan feature, you can administer only one attendant feature access code (FAC) on the **Dial Plan Analysis Table** screen. With this feature, you can administer multiple attendant FACs. The Multi-Location Dial Plan feature adds the administration of the attendant dial access code to the **Feature Access Code (FAC)** screen. The **call type** is **attd**. This change allows different locations to share the value that is used for the attendant access.

For example, you might enter the access code **9** for ARS on the **Feature Access Code (FAC)** screen. You might then enter the attendant access code on a **Locations** screen as **8**. When a user dials **8** from that location, the software routes the call to an attendant.

Only one attendant group can exist in the software at a time.

Setting up multiple feature access codes for ARS

Without the Multi-Location Dial Plan feature, you can administer only two attendant FACs on the **Feature Access Code (FAC)** screen. With this feature, you can administer multiple ARS FACs. You can either use the global ARS codes, or provide ARS codes for a location.

For example, you might enter the access code **9** for ARS on the **Feature Access Code (FAC)** screen. You might then enter the ARS access code on a **Locations** screen as **1**. When a user dials **1** from that location, the system routes the call with ARS. A user at that location cannot dial **9** to reach ARS.

Reports for Multi-Location Dial Plan

The following reports provide information about the Multi-Location Dial Plan feature:

- None

Considerations for Multi-Location Dial Plan

This section provides information about how the Multi-Location Dial Plan feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the Multi-Location Dial Plan under all conditions. The following considerations apply to the Multi-Location Dial Plan feature:

- None

Interactions for Multi-Location Dial Plan

This section provides information about how the Multi-Location Dial Plan feature interacts with other features in your system. Use this information to ensure that you receive the maximum benefits of the Multi-Location Dial Plan in any feature configuration.

- Attendant

This feature allows you to administer multiple attendant codes. This feature does not allow you to administer multiple attendant groups. Only one attendant group is allowed, unless you have Attendant Partitioning. This feature provides a way to support multiple local centralized answering points (LCAPs). The LCAPs do not use attendant groups.

- Attendant Vectoring

Attendant Vectoring, if enabled, takes precedence over any local attendant codes that are administered. The software uses call vectors to process calls to an attendant. Such calls are:

- Local attendant codes
- The attendant code on the **Dial Plan Analysis Table** screen
- The attendant access code on the **Feature Access Code (FAC)** screen

- Automatic Circuit Assurance (ACA)

The **ACA Referral Destination** field on the **System Features Parameters** screen requires that an attendant group exists. This field also requires either:

- The **attd** administration on the **Dial Plan Analysis Table** screen, or
- Administration of the **attendant access code** on the **Feature Access Code (FAC)** screen

- Automatic Wakeup

If a telephone has Automatic Wakeup requests pending when you run the **change extension-station** command, the system cancels the wakeup requests.

- Call Forwarding

Any call forwarding information that is stored with an extension is lost when you use the **change extension-station** command. If the telephone that you change with the **change extension-station** command is a forwarded-to telephone, you must manually update the extension that uses the forwarded-to extension. If you do not manually update the extension, the system does not forward calls correctly.

- Call Park

This feature does not support common shared extensions to park calls. Since common shared extensions are not assigned to physical telephones, the range of common shared extensions can be shared in all locations.

- Crisis Alert

The **change extension-station** command does not update the **Originating Extension** field on the **Crisis Alert System Parameters** screen. You must manually update the **Originating Extension** field if you change the **originating extension** field.

- Leave Word Calling (LWC)

The **Stations with System-wide Retrieval Permission for the Leave Word Calling Parameters** field on the **System Features Parameters** screen requires that an attendant group exists. This field also requires either:

- The **attd** administration on The **Dial Plan Analysis Table** screen, or
- Administration of the **Attendant Access Code** on the **Feature Access Code (FAC)** screen

- Local Spare Processor (LSP)

If you run the **change extension-station** command on the controller, but do not also save the translations to the LSP, the two system translations might not be synchronized.

Use either of these following commands to save the translations to the LSP:

- The **save trans lsp** command locally saves the translations, and performs a filesync operation to all registered LSPs.
- The **save trans lsp n** command, where **n** is the IP address of a specific LSP, locally saves the translations, and performs a filesync operation to the specified LSP.

- Night Service

This feature does not support location-based Night Service. Therefore, you might want to restrict calls to attendants who are local to the calling party. The attendant most likely speaks the same language as the caller. At night, instead of putting the entire system into Night Service, you might want an attendant to put only one location into Night Service.

To accomplish this, you can use hunt groups as attendant queues. Each hunt group can be put into Night Service separately, and have its own Night Service destination. You can also administer the Night Service destination by tenant, trunk group, and trunk group number.

- Security Violations Notification

The referral destination fields on the **Security-Related System Parameters** screen requires that an attendant group exists. This field also requires either:

- The **attd** administration on the **Dial Plan Analysis Table** screen, or
- Administration of the **attendant access code** on the **Feature Access Code (FAC)** screen

The referral destination fields are:

- **SVN Login Violation Notification Enabled**
- **SVN Remote Access Violation Notification Enabled**
- **SVN Authorization Code Violation Notification Enabled**
- **SVN Station Security Code Violation Enabled**

- Station Hunting

Changing a telephone extension with the **change extension-station** command maintains the hunting chain.

- Survivable Remote EPN/WAN Spare Processor

If you run the **change extension-station** command in a configuration where a survivable remote processor exists, you must also run the command on the survivable processor. If you do not, the extensions that you changed on the server do not exist on the survivable remote when the remote processor takes control.

- Uniform dial plan (UDP)

The **change extension-station** command does not update extensions that are in the **Uniform Dial Plan Table** screen. Avaya supports external system management tools that handles changes to the UDP table.

Multiple Level Precedence and Preemption

Use the Multiple Level Precedence and Preemption (MLPP) feature to allow users to request priority processing of calls during critical situations.



CAUTION:

MLPP is currently designed to meet only Generic Switching Center Requirements (GSCR) for connection to a Defense Switched Network (DSN) by federal, state, or local government agencies. MLPP is not currently designed for use in commercial enterprise environments. Activation of this feature in any other type of network environment can result in unexpected or unwanted feature operations.

Detailed description of Multiple Level Precedence and Preemption

This section provides a detailed description of the Multiple Level Precedence and Preemption feature.

The Multiple Level Precedence and Preemption feature is available with Avaya Communication Manager release 2.0 (V12) or later.

While the media servers and media gateways that are referenced in this document support MLPP, the Joint Interoperability Test Command (JITC) has certified only the following servers:

- DEFINITY Server CSI
- DEFINITY Server SI
- Avaya S8700 Media Server supporting an MCC1 or an SCC1 Media Gateway

Multiple Level Precedence and Preemption supports the following capabilities:

- [Precedence Calling](#)
- [Announcements for Precedence Calling](#)
- [Precedence Call Waiting](#)
- [Precedence Routing](#)
- [Dual Homing](#)
- [End Office Access Line Hunting](#)
- [Preemption](#)

- [Line Load Control](#)
- [Worldwide Numbering and Dialing Plan](#)

Precedence Calling

Precedence Calling allows users, on a call-by-call basis, to select a level of priority for each call. The need of the user and the importance of the call is the basis for the priority. The call can receive a priority routing whether the call is local or international.

Precedence levels

Users can access five levels of precedence:

- Flash Override, which is the highest precedence level
- Flash
- Immediate
- Priority
- Routine, which is the default and the lowest precedence level

If a user does not specify a precedence level, the system treats dialed calls as Routine level precedence calls.

The administrator assigns a maximum precedence level to each telephone user. The more important or higher in rank of the user, the higher the precedence level. Users cannot originate calls at precedence levels that are higher than the maximum administered level. Non-MLPP calls are treated as Routine level precedence calls.

For example, General Davis has a maximum precedence level of Flash assigned to his telephone. Without intervention, everyday calls are treated at the Routine level. One day, a crisis occurs at a military installation, and the general must make an emergency call to his field commanders over the Defense Switched Network (DSN). General Davis can use the Precedence Calling feature to raise the level of his call to Priority, Immediate, or Flash. When he places this call, the communication server gives the call priority handling, and the call is sent over the DSN access line.

Format for dialed digits

The following table shows the format for Precedence Calling dialed digits:

Access digits		Address digits		
FAC	Precedence digit	Area code	Office code	Extension
A	P	[NXX]	NXX	XXXX

Where:

A is the Feature Access Code (FAC) for Precedence Calling

P is any digit from 0 to 4 (digits from 5 to 9 can also be used)

X is any digit from 0 to 9

N is any digit from 2 to 9

Brackets [] indicate optional digits

Access digits

The access digits are comprised of the FAC for the Precedence Calling feature, plus a Precedence Level digit. The single-digit code used for the Precedence Level digit is administered as shown on [Assigning Precedence Calling system parameters](#) on page 1003.

The default Precedence Level digits are:

Digit	Precedence Level
0	Flash Override
1	Flash
2	Immediate
3	Priority
4	Routine

Address digits

The address digits are the 7-digit or the 10-digit telephone number.

Precedence calls above the Routine level use special precedence ringback tones for the calling party, and a special ringing pattern for the called party. The TN2182B or the TN2182C Tone Clock circuit pack generates the Precedence calling tones on the following media gateways and servers:

Media gateways	Supported by
● G650 Media Gateway ● SCC1 Media Gateway ● CMC1 Media Gateway ● MCC1 Media Gateway	● DEFINITY Server ● S8500 Media Server ● S8700 Media Server

On a G350 or a G700 Media Gateway supported by an S8300, an S8500, or an S8700 Media Server, the media gateway processor generates precedence calling tones. The S8100 Media Server processor also generates tones.

- The ringback tone is a 1.65-second burst of mixed 440-Hz and 480-Hz tone, and then 0.35 seconds of silence. This tone repeats until the call is answered, the caller hangs up, or the Precedence Call Timeout occurs. For more information, see [Assigning Precedence Calling system parameters](#) on page 1003.
- The ringing pattern for precedence calls is the same three-burst ring that is used with Priority Calling.

Precedence Calling diversion scenarios

When a precedence call to a telephone goes unanswered, the system attempts to connect the caller to a backup point as follows:

1. The call is diverted to the attendant console.
2. If the console is in Night Service or no console is administered, the call is diverted to a night telephone.
3. If no console or night telephone is administered, the call can be diverted to a user-defined telephone. This user-defined telephone is called the Remote Attendant Route String.

The Attendant Diversion Timing controls how long that this type of call rings before the system routes the call to the Remote Attendant Route String. The Remote Attendant Route String is any valid telephone number on the network, and is usually a backup answering position for the remote attendant console. The Remote Attendant Route String does not raise the precedence level of the call.

4. If the Remote Attendant Route String is undefined and there is no attendant console or night telephone is administered, the call rings until the call is answered or abandoned.

These Precedence Calling diversion scenarios have variations for DSN calls, non-DSN calls, and local calls:

DSN Calls - If an outgoing precedence call over a DSN trunk is unanswered after an administrable period of time, the system routes the call to the:

- Attendant console or night telephone on the remote communication server
- Remote Attendant Route String

The administrable period of time is the Precedence Call Timeout on the remote communication server.

Non-DSN Calls - If an outgoing precedence call over a non-DSN trunk is not answered after an administrable period of time, the system routes the call to:

- A local attendant console or night telephone on the local communication server
- The Remote Attendant Route String

The administrable period of time is the Attendant Diversion Timing on the local communication server.

Local calls - If a local, intraswitch precedence call is unanswered after an administrable period of time, the system routes the call to:

- A local attendant console
- A night telephone
- The Remote Attendant Route String

Note:

For a precedence call that diverts to a night telephone or to a Remote Attendant Route String, the number must be administered in the Precedence Routing digit-conversion tables. For more information, see [Assigning digit conversion](#) on page 1019 and [Assigning Precedence Calling system parameters](#) on page 1003.

The administrable period of time is the Precedence Call Timeout on the remote communication server.

When calls are redirected, a Call Purpose Indicator is displayed on the attendant console and on display telephone sets to indicate the precedence level of the call. The following indicators are provided:

- FO - Flash Override
- FL - Flash
- IM - Immediate
- PR - Priority

Routine precedence calls do not have a Call Purpose Indicator.

Multiple Level Precedence and Preemption

When callers attempt to use a precedence level that is higher than the authorized level, the caller hears the "Unauthorized precedence level attempted" recording. If an announcement is not assigned, the caller hears intercept tone.

The following table shows how precedence calls are processed depending on the precedence level and the administered maximum precedence level of the caller:

Maximum precedence level of the user	Precedence level of the call	Call treatment
Flash Override	Flash Override	Call completes normally
Flash Override	Flash	Call completes normally
Flash Override	Immediate	Call completes normally
Flash Override	Priority	Call completes normally
Flash Override	Routine	Call completes normally
Flash	Flash Override	Recorded announcement or intercept tone
Flash	Flash	Call completes normally
Flash	Immediate	Call completes normally
Flash	Priority	Call completes normally
Flash	Routine	Call completes normally
Immediate	Flash Override	Recorded announcement or intercept tone
Immediate	Flash	Recorded announcement or intercept tone
Immediate	Immediate	Call completes normally
Immediate	Priority	Call completes normally
Immediate	Routine	Call completes normally
Priority	Flash Override	Recorded announcement or intercept tone
Priority	Flash	Recorded announcement or intercept tone
Priority	Immediate	Recorded announcement or intercept tone
Priority	Priority	Call completes normally
Priority	Routine	Call completes normally
Routine	Flash Override	Recorded announcement or intercept tone
Routine	Flash	Recorded announcement or intercept tone
Routine	Immediate	Recorded announcement or intercept tone
Routine	Priority	Recorded announcement or intercept tone
Routine	Routine	Call completes normally

How service domains influence preemption and precedence

You define MLPP service domains at two levels:

- On the **Class of Restriction** screen, where you then assign the COR to a telephone of a user
- On the **Multiple Level Precedence & Preemption Parameters** screen, which applies to all resources on the server

The system uses the service domain to determine whether the system applies the preemption or precedence level of the caller to potentially preempt a routine call or another call of lower precedence. If an existing call has a different service domain than the service domain of the call that attempts a preemption, preemption is not allowed, regardless of the preemption levels of the two calls.

The two levels of service domain influence preemption and precedence capabilities in different ways, depending on which of the following resources the server recognizes as carrying the call:

- Intraswitch routing to another telephone on the same server
- Incoming ISDN-PRI trunks for a call that originates from another server on the network
- Incoming non-ISDN-PRI trunks for a call that originates from another server on the network


Station-to-station calls on the same server

If a user makes an MLPP call to another user whose telephone resides on the same server, and if the called telephone is busy with an existing call, the server uses the following process to determine whether to grant precedence to the new call:

1. The server assigns the existing call to the service domain that is defined in the Class of Restriction (COR) of the caller.
2. The server checks the COR of the new caller to define the service domain of the new call.
3. The server matches the service domain of the new call with the service domain of the existing call.
4. If the service domains match, the server matches the precedence level of the existing call with the precedence level of the new call. If the new call has a higher level, the new call preempts the existing call.

If the service domains do not match, then the server gives the new call an announcement that says the MLPP call cannot be completed. [Figure 246: Station-to-station calls on the same server](#) on page 988 shows this process.

 Figure 246: Station-to-station calls on the same server

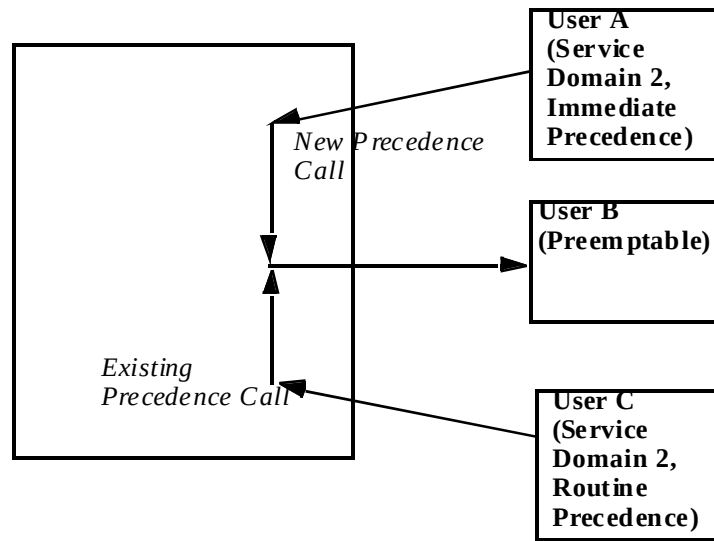

In [Figure 246](#), the server uses the service domains and the precedence levels to treat calls as follows:

1. User C makes a routine call to user B and is still connected. The server checks the service domain of the COR of user C, and assigns service domain 2 to the call.
2. User A makes an immediate precedence call to user B. The server checks the service domain of the COR of user A, and assigns service domain 2 to the call.
3. The server matches the service domain of user C with the service domain of user A.
4. Because the calls are in the same service domain, and because user A used a higher precedence level than user C, the server allows user A to preempt the call of user C.

Precedence calls to destinations over ISDN-PRI trunks

If:


- A user makes an MLPP call to another user whose telephone resides on a different MLPP server, and
- The call arrives at the server of the called user over an ISDN-PRI trunk, and
- The called telephone is busy with an existing call,

The destination MLPP server uses the following process to determine whether to grant precedence to the new call:

1. The server assigns the existing call to the service domain that is defined either in the COR of the caller, or by the system service domain.
2. The server checks the COR of the new caller to define the service domain of the new call.
3. The server matches the service domain of the new call with the service domain of the existing call.
4. If the service domains match, the server matches the precedence level of the existing call with the precedence level of the new call. If the new call has a higher level, the new call preempts the existing call.

If the service domains do not match, the server gives the new call an announcement that says that the MLPP call cannot be completed. [Precedence calls to destinations over ISDN-PRI trunks](#) on page 989 shows this process.

 Figure 247: Precedence calls to destinations over ISDN-PRI trunks

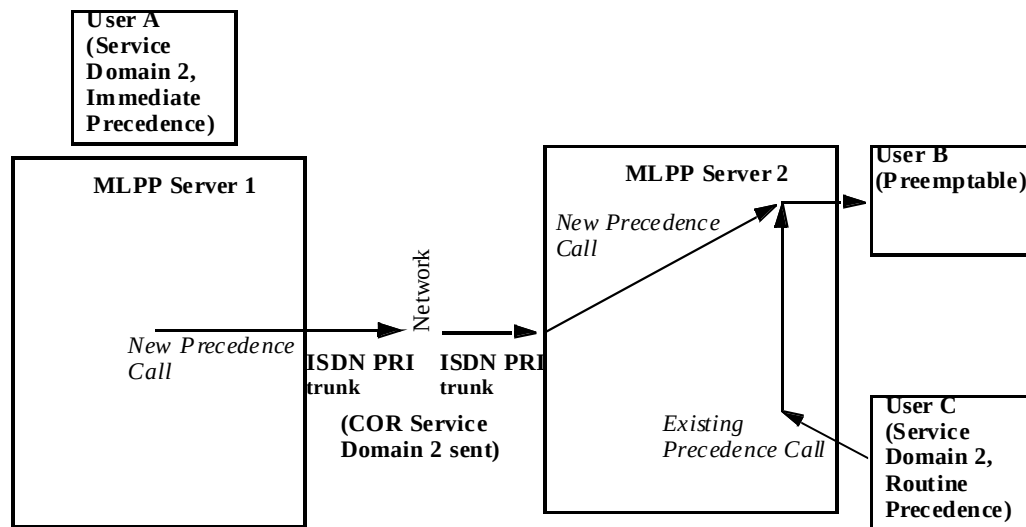

Multiple Level Precedence and Preemption

In [Figure 247](#), the destination server, MLPP Server 2, uses the service domains and precedence levels to treat calls as follows:

1. User C makes a routine call to user B and is still connected. The server checks the service domain of the COR of user C, and assigns service domain 2 to the call.
2. User A, who is on MLPP Server 1, makes a precedence call to user B. Server 2 checks the service domain on the incoming ISDN call and finds service domain 2, which is defined in the COR of user A on Server 1. Server 2 assigns service domain 2 to the call.
3. The server matches the service domain of user C with the service domain of user A.
4. Because the calls are in the same service domain, and because user A used a higher precedence level than user C, the server allows user A to preempt user C.

Precedence calls to destinations over non-ISDN-PRI trunks


If:

- A user makes an MLPP call to another user whose telephone resides on a different MLPP server, and
- The call arrives at the server of the called user over a non-ISDN-PRI trunk, and
- The called telephone is busy with an existing call,

The destination server uses the following process to determine whether to grant precedence to the new call:

1. The server assigns the existing call to the service domain that is defined either in the COR of the caller, or by its own system service domain.
2. The server checks its own system service domain to define the service domain of the new call.
3. The server matches the service domain of the new call with the service domain of the existing call.
4. If the service domains match, the server matches the precedence level of the existing call with the precedence level of the new call. If the new call has a higher level, the new call preempts the existing call.

If the service domains do not match, then the server gives the new call an announcement that says that the MLPP call cannot be completed. [Precedence calls to destinations over non-ISDN-PRI trunks](#) on page 991 shows this process.

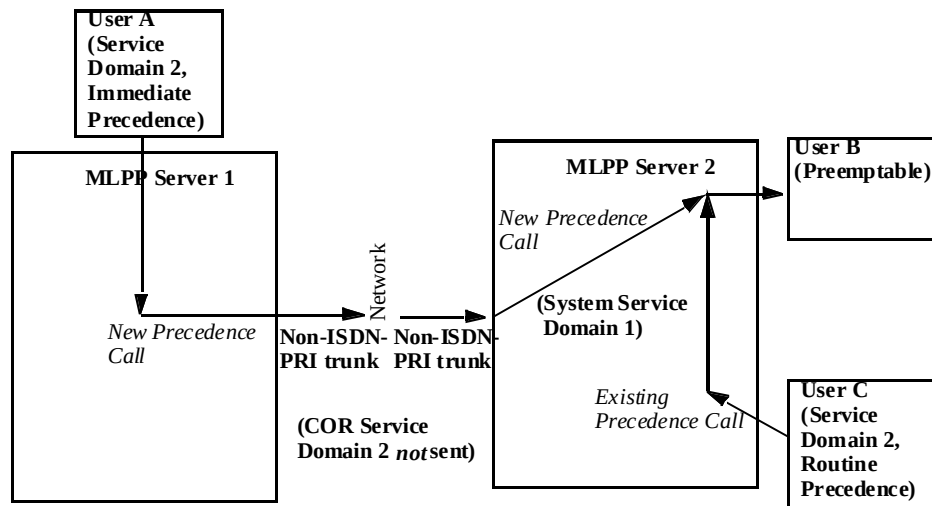 Figure 248: Precedence calls to destinations over non-ISDN-PRI trunks

In [Figure 248](#), the system uses the service domains and precedence levels to treat calls as follows:

1. User C makes a routine call to user B and is still connected. The server checks the service domain of the COR of user C, and assigns service domain 2 to the call.
2. User A, who is on MLPP Server 1, makes a precedence call to user B. Because the call from user A arrives at MLPP Server 2 on a non-ISDN-PRI trunk, Server 2 does not receive the service domain identifier of user A. Server 2 assigns the system service domain 1 to the call.
3. The server matches the service domain of user C with the service domain of user A.
4. Because the calls of users A and C are *not* in the same service domain, calls from user A receive an announcement that says that the MLPP call cannot be completed.

Announcements for Precedence Calling

In certain situations, precedence calls are blocked because of unavailable resources or improper use. The MLPP feature requires special announcements, for calls higher than Routine precedence, to notify users when Precedence Calling is denied, or when service is unavailable.

The announcements that MLPP uses include:

- Blocked precedence call

This announcement plays when the system attempts to preempt an existing call with a call that has a precedence level higher than Routine precedence that is also equal to or lower than the precedence level of the current call. If an announcement extension is not assigned, the caller hears reorder tone (fast busy).

Multiple Level Precedence and Preemption

- Unauthorized precedence level attempted

This announcement plays when a caller attempts to place a precedence call with a precedence level that is higher than the level that is authorized by the COR of the caller. If an announcement extension is unassigned, the caller hears intercept tone.

- Service-interruption-prevented call completion

This announcement plays when a service interruption prevents a precedence call from being completed. If an announcement extension is not assigned, the caller hears reorder tone.

- Busy, not equipped for Preemption or Precedence Call Waiting

This announcement plays when a precedence call is placed to a busy line, and the line does not have Precedence Call Waiting or cannot be preempted. If an announcement extension is not assigned, the caller hears reorder tone.

- Vacant code

This announcement plays when a precedence call is placed to an unassigned extension. If an announcement extension is not assigned, the caller hears reorder tone.

If a caller is using Routine precedence and the call cannot be completed for any of these reasons, the caller hears busy tone.

Precedence Call Waiting

After the system routes a precedence call, the called party might already be busy on another call. Precedence Call Waiting allows the caller to "camp on" to the line of the called party, and wait for the called party to answer the call. The caller hears a special ringback tone, and the called party hears a call waiting tone. Depending on the type of telephone, the called party:

- Can put the current call on hold and answer the incoming call, or
- Must hang up on the current call to answer the incoming call

Precedence Routing

When precedence calls are destined for other switches in a network, the Precedence Routing feature routes the calls. The Precedence Routing feature routes calls based on the:

- Destination number
- Precedence level
- Time of day

These routing criteria are administrable and can be changed as required. Two related features are Dual Homing and End Office Access Line Hunting.

Dual Homing

Dual Homing allows a user to dial a telephone number and have the system route the call to its destination over alternate facilities if the initial route is unavailable. This operation is transparent to the user, and no special dialing is required.

Dual Homing uses the Precedence Routing feature to provide alternate routing to nodes on a DSN. If a call fails to complete over the first trunk access line, the call is rerouted over a different trunk access line. This process can continue for any number of alternate routes.

If the call fails to complete by the time the call gets to the last trunk access line, the system routes the call to either:

- Busy tone, or
- The "Blocked precedence call" recorded announcement (see [Announcements for Precedence Calling](#) on page 991).

For example, a user dials a DSN number, such as 345-8854. Using Precedence Routing, you administer the system to route all calls that begin with the digits "345":

1. First over trunk group 20
2. Then over trunk group 21
3. Finally over trunk group 22

If all trunks in trunk group 20 are busy, the system next checks for idle trunks in trunk group 21, and finally in trunk group 22. If all trunks in all three trunk groups are busy, the system routes the call to fast busy tone or to a recorded announcement.

For a more detailed description of the available routing options, see [Precedence Routing](#) on page 992.

End Office Access Line Hunting

The End Office Access Line Hunting feature automatically hunts for an idle trunk over end office access lines. This feature hunts for an idle trunk based on the precedence level of the call. The search occurs over either a preemptable trunk group or a nonpreemptable trunk group.

For calls that are higher than Routine precedence, the system hunts for an idle trunk in a preemptable trunk group. The following steps describe the hunting algorithm:

1. If the system finds an idle trunk, the system provides precedence ringing.
2. If the system does not find an idle trunk, the system reexamines a preemptable trunk group on a preemptive search. The system preempts an active call that is of the lowest available precedence level.
3. The system hunts for an idle trunk in a nonpreemptable trunk group. If the system finds an idle trunk, the system provides precedence ringing.

4. If the system cannot find a trunk, the call is routed to the "Blocked precedence call" recorded announcement (see [Announcements for Precedence Calling](#) on page 991). If announcements are not recorded or administered, the caller hears reorder tone.

For calls that are Routine precedence, the system hunts for an idle trunk in a nonpreemptable trunk group and attempts to connect the call. If the system does not find an available trunk, the caller hears busy tone. For more information about preemptable and nonpreemptable trunks, see [Preemption](#) on page 994.

Preemption

Preemption works with Precedence Routing to further extend the call routing capabilities of MLPP. Preemption actually disconnects an existing, lower-priority call to complete a more important precedence call. Even non-MLPP calls are treated as Routine level precedence calls, and can be preempted.

When preemption occurs, the callers on the existing call hear a tone that indicates that the system is about to preempt the call. The callers have 3 seconds to end the call before the system automatically disconnects the call. After the system disconnects the call, the system places the new call over the preempted facility.

Line Load Control

Line Load Control (LLC) is a feature that restricts a predefined set of telephone users from originating calls during a crisis or an emergency. LLC systematically reduces the number of telephones that can originate calls during high-traffic periods. This situation is sometimes called a "lockdown." When the lockdown situation passes, the LLC restriction levels can be reduced or removed completely.

Users are assigned to a Line Load Control level based on the relative importance of the position of the user within the organization. When an emergency occurs, the administrator manually activates the LLC feature to restrict calls by users with positions that are of lower importance. When the emergency is over, the administrator manually disables the LLC feature.

For example, if a security emergency occurs, telephone users who are responsible for managing the crisis are unrestricted from originating calls. Other telephone users, for example, users in the accounting department, are restricted. When the crisis is over, the administrator returns the system to normal operation.

The LLC feature can be controlled at four levels. These levels determine what telephones, based on the Class of Restriction (COR), are restricted from originating calls. This feature does not restrict incoming calls, or calls that originate from an attendant console or a night telephone.

The four levels are as follows:

Level	Definition
0	The LLC feature is inactive, that is, no restrictions exist. This is the default setting.
2	Restrict telephones with a COR that is assigned to LLC levels 2, 3, and 4.
3	Restrict telephones with a COR that is assigned to LLC levels 3 and 4.
4	Restrict telephones with a COR that is assigned to LLC level 4.

System level 1 is not a valid value. The LLC feature cannot restrict telephones with a COR that is assigned to LLC level 1 from originating calls.

When LLC is activated, the system restricts all telephones with a COR at that LLC level and below from originating any calls. If a restricted telephone is already active on a call when the restriction is activated, the call is not interrupted or disconnected. The telephone becomes restricted only after the user hangs up from the active call.

When the need for LLC has passed, the administrator can change the LLC to a less-restrictive level, or completely deactivate the feature.

The following table shows how the LLC feature can be used.

Extension	COR	LLC Level
5300	11	0
5350	12	2
2540	13	3
3300	14	4
2635	14	4

For this example, the LLC is at Level 0, and extension 2635 is active on a call.

1. Because of high telephone traffic, the system administrator changes the LLC to level 3.

Extensions 2635, 2540, and 3300 cannot originate calls because the assigned COR LLC level for these extensions is equal to or less than the system LLC level.

The active call on extension 2635 is not disturbed. As soon as extension 2635 hangs up, that extension cannot originate calls.

Extensions 5300 and 5350 can originate calls because the assigned COR LLC level of these extensions is higher than the system LLC level.

Multiple Level Precedence and Preemption

2. Call traffic is still too high, so the system administrator changes the LLC to level 2.

Now extension 5350, in addition to extensions 2635, 2540, and 3300, cannot originate new calls. Extension 5300 can still originate new calls.

3. Call traffic subsides. The system administrator changes the LLC back to level 0.

All extensions can now originate calls.

Worldwide Numbering and Dialing Plan

The Worldwide Numbering and Dialing Plan (WNDP) feature is compatible with the standard numbering system that the Defense Communications Agency (DCA) established. WNDP is a dialing system that is used in a Defense Switched Network (DSN). WNDP is similar to [Precedence Calling](#), but the pattern of digits that users dial is different.

The following table shows the format of the dialed digits:

Access digits		Address digits		
FAC	Route code	Area code	Office code	Extension
A	[[1]X]	[NXX]	NXX	XXXX

Where:

A is the 2-digit WNDP FAC for the precedence level

1 is a Route Code setup digit.

X is any digit from 0 to 9

N is any digit from 2 to 9

Brackets [] indicate optional digits

Feature Access Code

The Feature Access Code (FAC) is the set of two-digit WNDP FACs. Each precedence level uses a unique FAC.

- Flash Override - **90**
- Flash - **91**
- Immediate - **92**
- Priority - **93**
- Routine - **94**

Route Code

After dialing the FAC, the user has the option to dial a Route Code. The Route Code is a 2-digit DSN code that consists of a Route Code Setup digit and the Route Code digit. The Route Code informs the communication server of special routing or termination requirements. The Route Code is limited to the DSN. The Route Code determines whether a call uses data-grade or voice-grade trunking. The Route Code also indicates whether the dialed number is a Federal Telephone System (FTS) or a Continental US (CONUS) commercial number.

If you do not require special call features, and you want to use the default value **0**, you do not have to use the Route Code. If you want to use a value other than the default value **0**, you must use the Route Code.

- The first digit of the Route Code is the Route Code Setup digit. The Route Code Setup digit is the number **1**. The Route Code Setup digit indicates that the next digit gives instructions to the network for specialized routing. If a Route Code is dialed, the Route Code Setup digit is deleted, and the second digit is saved.
- The second digit of the Route Code is the Route Code digit. Valid entries are:
 - 0** - Voice call (the default value)
 - 1** - Circuit switched data call
 - 2** - Satellite avoidance call
 - 3** - (reserved)
 - 4** - (reserved)
 - 5** - Hotline voice-grade call
 - 6** - Hotline data-grade call
 - 7** - (reserved)
 - 8** - (reserved)
 - 9** - (reserved)

The Route Code digit becomes part of the dialed number, and can be used for route selection by the Precedence Routing translations. Precedence Routing allows digit strings to be modified before outpulsing. This capability modifies the Route Code as needed by the terminating trunk group. If a Route Code digit is not dialed, the system inserts the default Route Code Digit of **0** as defined on the **Multiple Level Precedence & Preemption Parameters** screen. The default Route Digit routes the calls over the voice network, not the data network.

Address Digits

The Address Digits are the 7-digit or the 10-digit DSN number.

Multiple Level Precedence and Preemption

The following table shows the format of the outpulsed digits:

Precedence digit	Route code	Address digits		
		Area code	Office code	Extension
P	[[1]X]	[NXX]	NXX	XXXX

Use the Precedence Routing functionality to administer the digit outpulsing. For more information, see [Precedence Routing](#) on page 992. Precedence Routing allows flexible routing of dialed numbers, and the ability to modify the digits outpulsed digits as needed. For example, you can administer Precedence Routing to outpulse no Route Digit, only the Route Digit, or the number **1** and the Route Digit. The digits sent to Precedence Routing are of the form:

PRXXX...

Where:

P is the Precedence Digit

R is the Route Code (if WNDP is active)

XXX... are the Address Digits

If a particular route requires the Route Code of the form **1X**, you can use the digit modification translations for the route to insert the number **1**. If the route does not require the Route Digit, the digit modification can be translated to delete the Route Digit. The digit modification translations insert a Default Route Digit if the Default Route Digit is not dialed.

Administering Multiple Level Precedence and Preemption

The following steps are part of the administration process for the Multiple Level Precedence and Preemption feature:

Precedence Calling

- [Assigning an MLPP Feature Access Code](#)
- [Assigning Precedence Calling system parameters](#)
- [Assigning a maximum precedence level](#)
- [Assigning trunks](#)
- [Assigning a hot line number](#)
- [Assigning attendant queue priorities](#)

Announcements for Precedence Calling

- [Adding extensions](#)
- [Assigning announcement types](#)
- [Recording announcements](#)
- [Deleting announcements](#)
- [Saving announcements](#)

Precedence Call Waiting

- [Enabling Precedence Call Waiting for a telephone](#)
- [Setting the Precedence Call timeout](#)
- [Assigning Feature Access Codes](#)

Precedence Routing

- [Assigning digit analysis](#)
- [Assigning route patterns](#)

Dual Homing

- see [Precedence Routing](#)

End Office Access Line Hunting

- see [Precedence Routing](#)

Preemption

- [Assigning Preemption to a COR](#)
- [Assigning trunks for Preemption](#)
- [Setting the Precedence Call timeout](#)

Line Load Control

- [Assigning the LLC level for the system](#)
- [Assigning the LLC to a COR](#)

Worldwide Numbering and Dialing Plan (WNDP)

- [Assigning WNDP system parameters](#)
- [Assigning WNDP Feature Access Codes](#)
- [Assigning a hot line number](#)
- [Assigning attendant queue priorities](#)

Multiple Level Precedence and Preemption

This section describes:

- Any prerequisites for administering the Multiple Level Precedence and Preemption feature
- The screens that you use to administer the Multiple Level Precedence and Preemption feature
- Complete administration procedures for the Multiple Level Precedence and Preemption feature

Prerequisites for administering Multiple Level Precedence and Preemption

You must complete the following actions before you can administer the Multiple Level Precedence and Preemption feature:

- On the **Optional Features** screen, ensure that the **G3 Version** field is set to **V12** (Communication Manager release 2.0) or later. If this field is not set to **V12** or later, your system is not enabled for the Multiple Level Precedence and Preemption feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

- Click **Next** until you see the **Multiple Level Precedence and Preemption** field. Ensure that the **Multiple Level Precedence and Preemption** field is set to **y**. If the **Multiple Level Precedence and Preemption** field is set to **n**, contact your Avaya representative before you continue with this procedure.

Screens for administering Multiple Level Precedence and Preemption

Screen name	Purpose	Fields
Optional Features	Ensure that you have Communication Manager version 2.0 (V12) or later.	G3 Version
	Ensure that the MLPP feature is on.	Multiple Level Precedence & Preemption

Screen name	Purpose	Fields
Feature Access Code (FAC)	Set up FACs for users to activate the MLPP features.	● Precedence Calling Access Code ● All the fields in the W NDP Precedence Access Codes area
	Set up a FAC for users to answer a Precedence Call Waiting call from a single-line analog telephone.	CAS Remote Hold/ Answer Hold-Unhold Access Code
Multiple Level Precedence & Preemption Parameters	Set up the system parameters for MLPP.	All
Class of Restriction	● Apply administration settings to all objects that share the same COR number. ● Restrict the types of calls that a user can make and receive.	● Maximum Precedence Level ● Preemptable ● MLPP Service Domain ● Lineload Control
Trunk Features	Assign a trunk group as a DSN termination telephone.	DSN Term
	For DS1 and analog TIE trunks only, indicate if the system sends or receives the precedence level as digits (rotary pulses) or as dual-tone multifrequency (DTMF) signals (touchtones).	● Precedence Incoming ● Precedence Outgoing
Station	Activate or deactivate Precedence Call Waiting for a telephone.	Precedence Call Waiting
	Assign a telephone as a hot line telephone for a precedence call or a W NDP call.	All the fields in the Hot Line Destination area
Abbreviated Dialing List	Set up the dialing list and specific dialed string to be used with a hot line telephone.	All
Console Parameters	Assign attendant queue priorities.	All the fields in the Queue Priorities area

Screen name	Purpose	Fields
Announcements/Audio Sources	Assign extensions for Precedence Calling announcements.	All
Precedence Routing Digit Analysis Table	Administer how the system analyzes Precedence Routing digits.	All
Pattern Number	Administer how the system handles route patterns for outgoing Precedence calls.	All
Precedence Routing Digit Conversion Table	Administer how the system takes digits of incoming calls, and converts the digits to local telephone numbers.	All

Precedence Calling

Assigning an MLPP Feature Access Code

To assign a Feature Access Code (FAC):

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen.

2. Click **Next** until you see the **MLPP Features** area ([Figure 249: Feature Access Code \(FAC\) screen](#) on page 1002).

Figure 249: Feature Access Code (FAC) screen

change feature-access-codes	FEATURE ACCESS CODE (FAC)	Page 6 of 6
	MLPP Features	
	Precedence Calling Access Code: 8	
	W NDP PRECEDENCE ACCESS CODES:	
	Flash Override Access Code: 90	
	Flash Access Code: 91	
	Immediate Access Code: 92	
	Priority Access Code: 93	
	Routine Access Code: 94	

3. In the **Precedence Calling Access Code** field, type a FAC that conforms to your dial plan.
4. Press **Enter** to save your changes.
5. Ensure that you notify all users about the assigned FAC.

Assigning Precedence Calling system parameters

To assign the Precedence Calling system parameters:

1. Type **change system-parameters mlpp**. Press **Enter**.

The system displays the **Multiple Level Precedence & Preemption Parameters** screen ([Figure 250: Multiple Level Precedence & Preemption Parameters screen](#) on page 1003).

Figure 250: Multiple Level Precedence & Preemption Parameters screen

change system-parameters mlpp	Page 1 of 1
MULTIPLE LEVEL PRECEDENCE & PREEMPTION PARAMETERS	
ANNOUNCEMENTS	
Blocked Precedence Level: 6801	Service Interruption: 6803
Unauthorized Precedence Level: 6802	Busy, Not Equipped: 6804
Vacant Code: 6805	
PRECEDENCE CALLING-DIALED DIGIT ASSIGNMENT	
Flash Override: 0 Flash: 1 Immediate: 2 Priority: 3 Routine: 4	
Attendant Diversion Timing (sec): 60	
Remote Attendant Route String:	
Worldwide Numbering Dial Plan Active? y	Default Route Digit: 0
Precedence Call Timeout (sec): 30	
Line Load Control Restriction Level: 0	
WNDP Emergency 911 Route String:	
Default Service Domain: 1	
ISDN Precedence Call Timeout (sec): 30	

2. In the **Precedence Calling-Dialed Digit Assignment** fields, make any necessary changes.



CAUTION:

Avaya recommends that you do not change the default Precedence Calling dialed digits unless you are coordinating this change with other companion networks in your system. If the Precedence Calling digits do not match across networks, the system does not properly process the calls. Each of the Precedence Calling digits must be different. You cannot use the same digit for two different precedence levels.

- **Flash Override.** 0 to 9 or blank (the default is 0)
- **Flash.** 0 to 9 or blank (the default is 1)

- **Immediate.** 0 to 9 or blank (the default is 2)
- **Priority.** 0 to 9 or blank (the default is 3)
- **Routine.** 0 to 9 or blank (the default is 4)
- **Attendant Diversion Timing.** 10 to 99 seconds or blank (the default is blank)
- **Remote Attendant Route String.** 1 to 24 numeric digits or blank (the default is blank). When you administer this string, use address digits only. Do not use FACs. For more information, see [Precedence Calling diversion scenarios](#) on page 984.
- **Precedence Call Timeout.** 10 to 60 seconds (the default is 30)
- **Default Service Domain.** 0 to 16777215. This number defines the system service domain, and must be unique within a switching network. The system uses the system service domain to determine eligibility for precedence calling when interswitch precedence calls over non-ISDN trunks occur.

3. Press **Enter** to save your changes.

Assigning a maximum precedence level

Maximum precedence levels are assigned to Classes of Restriction (COR).

To assign a maximum precedence level to a COR:

1. Type **change cor n**, where *n* is the number of a specific COR. Press **Enter**.
The system displays the **Class of Restriction** screen.
2. Click **Next** until you see the **Maximum Precedence Level** and **MLPP Service Domain** fields ([Figure 251: Class of Restriction screen](#) on page 1004).

Figure 251: Class of Restriction screen

change cor 1

Page2 of 4

CLASS OF RESTRICTION

MF Incoming Call Trace? n

Brazil Collect Call Blocking? n

Block Transfer Display? n

Block Enhanced Conference/Transfer Displays? y

Remote Logout of Agent? y

Station Lock COR: 1

Outgoing Disconnect Trunk Timer (Minutes):

Line Load Control: 3

Maximum Precedence Level: ro

Preemptable? y

MLPP Service Domain: 1

3. In the **Maximum Precedence Level** field, type one of the following values:

- fo (Flash Override)
- fl (Flash)
- im (Immediate)
- pr (Priority)
- ro (Routine, the default value)

4. In the **MLPP Service Domain** field, type a number from 0 to **16777215**.

This number defines the service domain for users and trunks to which this particular COR is assigned. The system uses the service domain to create a group of MLPP users or facilities, within which precedence calls can be made.

5. Press **Enter** to save your changes.

Assigning trunks

To assign trunks:

1. Type **add trunk-group *n***, where *n* is the number of a trunk group. Press **Enter**.

The system displays the **Trunk Features** screen.

2. Click **Next** until you see the **DSN Term** field ([Figure 252: Trunk Features screen](#) on page 1005).

Figure 252: Trunk Features screen

add trunk-group 10		Page 2 of X	
TRUNK FEATURES			
ACA Assignment? n	Measured: none		
	Internal Alert? n	Maintenance Tests? y	
	Data Restriction? n		
	Glare Handling: none		
Used for DCS? n			
Suppress # Outpulsing? n			
Seize When Maintenance Busy: neither-end			
Incoming Tone (DTMF) ANI: no	Per Call CPN Blocking Code:		
Connected to CO? n	Per Call CPN Unblocking Code:		
US NI Delayed Calling Name Update? y			
DSN Term? y	Precedence Incoming? dtmf(a-d)	Precedence Outgoing? dtmf(a-d)	

Multiple Level Precedence and Preemption

3. Use the **DSN Term** field to identify the trunk group as a DSN termination telephone. The default is **n**.

- The system displays the **Precedence Incoming** and **Precedence Outgoing** fields, if:
 - You type **y** in the **DSN Term** field, and
 - The value in the **Group Type** field on page 1 of this screen is **tie**.

These two fields define whether the precedence level for dual-tone multifrequency (DTMF) or tone trunks is received or sent as digits (rotary pulses) or as DTMF signals (touchtones).

- The system does not display the **Precedence Incoming** and **Precedence Outgoing** fields, if:
 - You enter **n** in the **DSN Term** field, or
 - You enter **y** in the **DSN Term** field, and the value in the **Group Type** field on page 1 of this screen is **isdn**, or
 - You enter **y** in the **DSN Term** field, and the value in the **Group Type** field on page 1 of this screen is **tie**, and the value in both the **Outgoing Dial Type** and **Incoming Dial Type** fields on page 1 of this screen is **mf2/6**.

4. Press **Enter** to save your changes.

Assigning a hot line number

A hot line is an extension that the system automatically dials when you pick up the receiver. On a single-line telephone, assign a hot line destination. Use a system, a group, or a personal list that is administered to the hot line destination.

The hot line number must include the:

- Precedence Calling FAC
- Precedence Level digit (see [Precedence Calling](#) on page 982)
- Destination telephone number

For example, when the system dials 807208451111, the system processes the call as a Flash Override precedence voice call to extension **720-845-1111**.

- **8** is the Precedence Calling FAC
- **0** is the Precedence Level digit for Flash Override
- **720-845-1111** is the destination telephone number

The following procedure explains how to administer number 807208451111 as a hot line destination number. To administer a hot line destination number, you must first set up a group list that contains the hot line destination number. Then you must set up the hot line destination number that references the group list.

To set up a group list:

1. Type **add abbreviated-dialing group next**. Press **Enter**.

The system displays the **Abbreviated Dialing List** screen ([Figure 253: Abbreviated Dialing List screen](#) on page 1007).

Figure 253: Abbreviated Dialing List screen

add abbreviated-dialing group next

Page 1 of 1

Abbreviated Dialing List

Group List: 1

Size (multiple of 5): 5

Group Name: _____

Program Ext: _____ Privileged? n

DIAL CODE

01: 807208451111

02: _____

03: _____

04: _____

05: _____

2. Write down the Group List number that the system assigns to this Abbreviated Dialing List.

You use this Group List number when you set up the hot line destination number.

3. In the **Dial Code** field, type the dial code that is associated with the hot line destination number. In this example, that number is **807208451111**.
4. Press **Enter** to save your changes.

In the next procedure, you use the Group List number that you set up in this procedure.

To set up the hot line destination number:

1. Type **add station 807208451111**. Press **Enter**.

The system displays the **Station** screen ([Figure 254: Station screen](#) on page 1008).

Figure 254: Station screen

add station 807208451111		Page 1 of 4
STATION		
Extension: 807208451111	Lock Messages? n	BCC: 0
Type: 2500	Security Code:	TN: 1
Port:	Coverage Path 1:	COR: 1
Name:	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Personalized Ringing Pattern: 1	
Data Module? n	Message Lamp Ext: 23	
Speakerphone: 2-way	Mute Button Enabled? y	
Display Language: english		
	Media Complex Ext:	
	IP Softphone? n	
	Remote Office Phone? n	

2. In the **Type** field, type the model of analog telephone, such as **2500**.
3. Type information in the other fields that the system requires to add this new extension.
4. Click **Next** until you see the **Hot Line Destination** area ([Figure 255: Station screen](#) on page 1008).

Figure 255: Station screen

add station 807208451111		Page 3 of 4
STATION		
SITE DATA		
Room:	Headset? n	
Jack:	Speaker? n	
Cable:	Mounting: d	
Floor:	Cord Length: 0	
Building:	Set Color:	
ABBREVIATED DIALING		
List1: 1	List2:	List3:
HOT LINE DESTINATION		
Abbreviated Dialing List Number (From above 1, 2, or 3): 1		Dial Code:
Line Appearance: call-appr		

5. In the **Abbreviated Dialing List Number (From above 1, 2, or 3)** field, type the Group List number that contains your hot line destination number.

This is the Group List number that you wrote down from the previous procedure.

6. Press **Enter** to save your changes.

Assigning attendant queue priorities

To assign attendant queue priorities:

1. Type **change console-parameters**. Press **Enter**.
The system displays the **Console Parameters** screen.
2. Click **Next** until you see the **MLPP Precedence Call** area ([Figure 256: Console Parameters screen](#) on page 1009).

Figure 256: Console Parameters screen

change console-parameters	Page 4 of 5
CONSOLE PARAMETERS	
QUEUE PRIORITIES	
MLPP Precedence Call	
Flash Override: 2	
Flash: 3	
Immediate: 4	
Priority: 5	

3. Use the **MLPP Precedence Call** area to assign attendant queue priorities for precedence calls and nonprecedence calls. This process determines how the system queues calls to the attendant console. Depending on the priority that you want for processing calls, you can change the system defaults. The defaults are:
 - **Flash Override: 2**
 - **Flash: 3**
 - **Immediate: 4**
 - **Priority: 5**



Important:

By default, emergency access calls receive a higher priority processing than MLPP Precedence Calls. You can change the order of priority, but be careful when designating emergency calls to an equal or lower priority. Call types with equal priority enter the queue on a first-in, first-out basis.

Routine precedence calls are treated as normal calls and use the same queue priorities as nonemergency and nonMLPP calls.

4. Press **Enter** to save your changes.

Announcements for Precedence Calling

This feature uses the standard recorded announcements feature in Communication Manager. For more information about administering recorded announcements, see the "Announcements" feature description.

Adding extensions

To assign extensions for Precedence Calling announcements:

1. Type **change announcements**. Press **Enter**.

The system displays the **Announcements/Audio Sources** screen
([Figure 257: Announcements/Audio Sources screen](#) on page 1010).

Figure 257: Announcements/Audio Sources screen

change announcements					Page 1 of 16						
ANNOUNCEMENTS/AUDIO SOURCES											
Ext.	Type	COR	TN	Name	Q	QLen	Pr	Rt	Port		
1: 6801	integrated	1	1	Call blocked announcement	n	N/A	n	16	01A14		
2: 6802	integrated	1	1	Unauthorized level annnc	n	N/A	n	16	01A14		
3: 6803	integrated	1	1	Service interrupt annnc	n	N/A	n	16	01A14		
4: 6804	integrated	1	1	Busy, not equipped annnc	n	N/A	n	16	01A14		
5: 6805	integrated	1	1	Vacant code announcement	n	N/A	n	16	01A14		
6:		1	1		n						
7:		1	1		n						
8:		1	1		n						
9:		1	1		n						
10:		1	1		n						
11:		1	1		n						
12:		1	1		n						
13:		1	1		n						
14:		1	1		n						
15:		1	1		n						
16:		1	1		n						

2. Assign extensions for the different MLPP recorded announcements. The extensions that you use for recorded announcements must already be administered in your dial plan. The extensions cannot be used for any other purpose, such as individual telephones or directory numbers.

3. Press **Enter** to save your changes.

In the next procedure, you use the announcement that you set up in this procedure.

Assigning announcement types

After you add the announcement extensions, you must designate the extensions to use for each of the announcement types. This administration is unique to the Announcements for Precedence Calling feature.

To assign announcement types:

1. Type **change system-paramters mlpp**. Press **Enter**.

The system displays the **Multiple Level Precedence & Preemption Parameters** screen ([Figure 250: Multiple Level Precedence & Preemption Parameters screen](#) on page 1003).

2. Match the extensions that you set on the **Announcements/Audio Sources** screen (see [Figure 257: Announcements/Audio Sources screen](#) on page 1010) with the five announcements.
3. Click **Enter** to save your changes.

Recording announcements

Once you designate the extensions to use for recorded announcements, use the following procedures to record and test the announcements. You must record the announcements from the attendant console or from a telephone that has console permissions.

To record each announcement:

1. Go off-hook and dial the FAC for the Announcement feature.
2. Dial the extension of the announcement that you want to record.

If an announcement session is already in progress, or if a save or a restore command is in progress, you hear reorder tone. Try again later.

3. Press **1** and record the announcement after the tone.

Note:

If the announcement already exists and is marked as "protected" in the **Announcements** screen, you hear intercept tone.

The following wording is suggested for each of the five announcements:

- Blocked precedence call: "Equal or higher precedence calls prevented completion of your call. Please hang up and try again later."
- Unauthorized precedence level attempted: "The precedence level that you requested is not authorized for your line. Please use an authorized precedence level, or ask your operator for assistance."
- Service interruption prevented call completion: "A service interruption prevented the completion of your call. Please wait 30 seconds and try again. In case of emergency, call your operator."

Multiple Level Precedence and Preemption

- Busy, not equipped for Preemption or Precedence Call Waiting: "The number that you dialed is busy and not equipped for Preemption or Precedence Call Waiting."
 - Vacant code announcement: "Your call cannot be completed as dialed. Please consult your directory and call again, or ask your operator for assistance."
4. Hang up when you finish recording each message.

Note:

The system records the sound of the receiver returning to the telephone cradle. To hang up gently, either press **Drop**, or quietly press the switchhook with your finger.

5. Wait for 15 seconds, and then dial the extension of the announcement that you just recorded. Listen to the recording.
- If you need to record the message again, repeat this procedure.
 - If the message is satisfactory, hang up and repeat this procedure to record the other announcements.

Deleting announcements

To delete a recorded announcement:

1. Go off-hook and dial the FAC for the Announcement feature.
2. Dial the extension of the announcement that you want to delete.
3. Press **3**.

The system deletes the announcement.

4. Hang up.
5. Type **change announcements** to delete the announcement extension. For more information, see [Adding extensions](#) on page 1010.

Saving announcements

If your system uses the TN750 or the TN750B circuit packs, you must manually save the announcements that you record on those circuit packs. If you do not manually save the announcements, all announcements that were recorded since the last save are lost if the:

- System loses power, or
- TN750 or the TN750B circuit packs are removed from the system

For the procedure to save announcements, see the "Announcements" feature description.

If your system uses only the TN750C circuit pack, you do not need to save the announcements. The TN750C has on-board memory for all announcements.

The announcements on a TN2501AP circuit pack, and virtual VAL announcements on the S8300 Media Server, are not saved through system administration. You can back up the announcement to a personal computer. For procedures to back up the announcements, see the "Announcements" feature description.

Precedence Call Waiting

Enabling Precedence Call Waiting for a telephone

Enable or disable the Precedence Call Waiting feature for each telephone on your system. The default assignment for each telephone is **y** (enabled).

To enable or disable Precedence Call Waiting for a telephone:

1. Type **change station *n***, where *n* is the telephone extension that you want to enable or disable. Press **Enter**.

The system displays the **Station** screen.

2. Click **Next** until you see the **Precedence Call Waiting** field ([Figure 258: Station screen](#) on page 1013).

Figure 258: Station screen

change station 9876543		Page 2 of 4
STATION		
FEATURE OPTIONS		
LWC Reception: spe	Auto Select Any Idle Appearance? n	
LWC Activation? y	Coverage Msg Retrieval? y	
LWC Log External Calls? n	Auto Answer: none	
CDR Privacy? n	Data Restriction? n	
Redirect Notification? y	Idle Appearance Preference? n	
Per Button Ring Control? n	Restrict Last Appearance? y	
Bridged Call Alerting? n		
Active Station Ringing? single		
H.320 Conversoin? n	Per Station CPN - Send Calling Number? n	
Service Link Mode: as-needed		
Multimedia Mode: basic	Audible Message Waiting? y	
MWI Served User Type:	Display Client Redirection? n	
AUDIX Name:	Select last Used Appearance? n	
	Coverage After Forwarding? s	
Automatic Moves: no		
Emergency Location Ext: 23	Direct IP-IP Audio Connections? y	
Precedence Call Waiting? y	IP Audio Hairpinning? y	

Multiple Level Precedence and Preemption

3. In the **Precedence Call Waiting** field, perform one of the following actions:
 - Type **y** to enable the Precedence Call Waiting feature.
 - Type **n** to disable the Precedence Call Waiting feature.
4. Press **Enter** to save your changes.

Setting the Precedence Call timeout

To set the Precedence Call Waiting timeout:

1. Type **change system-paramters mlpp**. Press **Enter**.

The system displays the **Multiple Level Precedence & Preemption Parameters** screen ([Figure 250: Multiple Level Precedence & Preemption Parameters screen](#) on page 1003).

2. In the **Precedence Call Timeout (sec)** field, set the number of seconds before a precedence call is timed out.

The valid values are 10 to 60 seconds, with a default of 30 seconds.

3. In the **ISDN Precedence Call Timeout (sec)** field, set the number of seconds before an ISDN precedence call is timed out.

The valid values are 10 to 60 seconds, with a default of 30 seconds.

4. Press **Enter** to save your changes.

Assigning Feature Access Codes

For users of single-line analog telephones, you must assign a Feature Access Code (FAC) to answer a Precedence Call Waiting call.

To assign a FAC:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen ([Figure 259: Feature Access Code \(FAC\) screen](#) on page 1015).

Figure 259: Feature Access Code (FAC) screen

change feature-access-codes		Page 1 of 8
FEATURE ACCESS CODE (FAC)		
Abbreviated Dialing List1 Access Code: #01		
Abbreviated Dialing List2 Access Code: #02		
Abbreviated Dialing List3 Access Code: #03		
Abbreviated Dial - Prgm Group List Access Code: #04		
Announcement Access Code: #05		
Answer Back Access Code: #14		
Attendant Access Code:		
Auto Alternate Routing (AAR) Access Code: 8		
Auto Route Selection (ARS) - Access Code 1: *9		Access Code 2: *33
Automatic Callback Activation: #55		Deactivation: *55
Call Forwarding Activation: #44		Deactivation: *44
Call Park Access Code: #76		
Call Pickup Access Code: #33		
CAS Remote Hold/Answer Hold-Unhold Access Code: #57		
CDR Account Code Access Code:		
Change COR Access Code:		
Change Coverage Access Code:		
Contact Closure	Open Code:	Close Code:
Contact Closure	Pulse Code:	

2. In the **CAS Remote Hold/Answer Hold-Unhold Access Code** field, assign a FAC that matches your dial plan.
3. Press **Enter** to save your changes.
4. Ensure that you notify all users about the assigned FAC.

Precedence Routing

This section contains procedures for administering Precedence Routing when the local and the remote DSN nodes are both Avaya communication servers. Contact your Avaya representative for assistance with:

- Trunk administration when you connect local DS1 trunks to a DSN node that uses an Avaya communication server
- Administration procedures when you connect local DS1 trunks to a DSN node that uses a Nortel switch
- Administration procedures when you connect local DS1 trunks to a DSN node that uses a Siemens switch

Assigning digit analysis

Digit analysis determines what routes are used for outgoing calls based on the digits dialed.

To assign digit analysis:

1. Type **change precedence-routing analysis *n***, where *n* is the digit or digits being analyzed. Press **Enter**.

The system displays the **Precedence Routing Digit Analysis Table** screen
([Figure 260: Precedence Routing Digit Analysis Table screen](#) on page 1016).

Figure 260: Precedence Routing Digit Analysis Table screen

change precedence-routing analysis 10				Page 1 of 2	
PRECEDENCE ROUTING DIGIT ANALYSIS TABLE					Percent Full: 22
Dialed String	Total		Route Pattern	Preempt Method	
	Min	Max			
002383	9	9	36	group	
002385	9	9	35	group	
002388	9	9	86	group	
003032383	12	12	36	group	
003032388	12	12	86	group	
003033383	12	12	34	group	
003033388	12	12	84	group	
003034383	12	12	32	group	
003034388	12	12	82	group	
003035383	12	12	30	group	
003035388	12	12	80	group	
003383	9	9	34	group	
003385	9	9	33	group	
003388	9	9	84	group	
004383	9	9	32	group	

Except for the **Preempt Method** field, the digit analysis administration is the same as Automatic Route Selection (ARS) and Automatic Alternate Routing (AAR) digit analysis.

2. Format the **Dialed String** field for routing DSN numbers:
 - For non-WNDP dialing, enter the precedence digit and the address digits. The precedence digit is usually a number from 0 to 4.
 - For WNDP dialing, enter the precedence digit, the route code, and the address digits. The precedence digit is usually a number from 0 to 4.

An **x** in the digit string is a wildcard that matches any single digit.

The **Preempt Method** field has two possible values, **group** and **route**. The default preemption is **group**.

With group preemption:

- a. The system checks the first trunk group in the route pattern to determine if any trunks are idle. If the system finds an idle trunk, the system connects the call.
- b. If no trunks are idle, the system checks the same trunk group to determine if any trunks are preemptable. If the system finds a preemptable trunk, the system preempts the current call and connects the new call.
- c. If no trunks are idle or preemptable, the system checks the next trunk group to determine if any trunks are idle. If the system finds an idle trunk, the system connects the call.
- d. If no trunks are idle, the system checks the same trunk group to determine if any trunks are preemptable. If the system finds a preemptable trunk, the system preempts the current call and connects the new call.
- e. If the system does not find an idle trunk or a preemptable trunk within the Precedence Call Timeout interval, the caller hears either the Blocked Precedence recorded announcement or reorder tone. For more information, see [Announcements for Precedence Calling](#) on page 991. Calls with Routine precedence cannot preempt any other calls. If a call with Routine precedence does not find an idle trunk, the caller receives busy tone.

For example, trunk groups 1, 2, and 3 are set up as follows:

- Trunk group 1 has two trunk members active with Flash and Flash Override precedence calls.
- Trunk group 2 has two trunk members active with Immediate and Priority precedence calls.
- Trunk group 3 has two trunk members, both of which are idle.

A user makes a new call with the Flash precedence level. The system processes the call as follows:

1. The system checks trunk group 1, and does not find an idle trunk. The system then checks trunk group 1, and does not find a preemptable active call.
2. The system checks trunk group 2, and does not find an idle trunk. The system then checks trunk group 2, and finds two preemptable active calls. The system preempts the first trunk member that the system finds with a lower precedence level. In this example, the new Flash call preempts the active Immediate precedence call.
3. The system never checks trunk group 3, even though trunk group 3 has idle trunks.

With route preemption:

1. The system checks each trunk group in the route pattern to determine if any trunks are idle. If the system finds an idle trunk, the call is connected.
2. If the system does not find an idle trunk, the system checks each trunk group in the route pattern to determine if any trunks are preemptable. If the system finds a preemptable trunk, the system preempts the current call and connects the new call.

Multiple Level Precedence and Preemption

3. If the system does not find an idle trunk or a preemptable trunk within the Precedence Call Timeout interval, the caller hears either the Blocked Precedence recorded announcement or reorder tone. For more information, see [Announcements for Precedence Calling](#) on page 991. Calls with Routine precedence cannot preempt any other calls. If a call with Routine precedence does not find an idle trunk, the caller receives busy tone.

For example, trunk groups 1, 2, and 3 are set up as follows:

- Trunk group 1 has two trunk members active with Flash and Flash Override precedence calls.
- Trunk group 2 has two trunk members active with Immediate and Priority precedence calls.
- Trunk group 3 has two trunk members, both of which are idle.

A user makes a new call with the Flash precedence level. The system processes the call as follows:

1. The system checks trunk group 1, and does not find an idle trunk.
2. The system checks trunk group 2, and does not find an idle trunk.
3. The system checks trunk group 1, and finds an idle trunk. The system completes the new Flash call using the first idle trunk.
4. Press **Enter** to save your changes.

Assigning route patterns

The system uses these routing patterns for outgoing calls.

To assign route patterns:

1. Type **change route-pattern *n***, where *n* is a route pattern from the **Precedence Routing Digit Analysis Table** screen. Press **Enter**.

The system displays the **Pattern Number** screen ([Figure 261: Pattern Number screen](#) on page 1019).

Figure 261: Pattern Number screen

change route-pattern 36										Page 1 of 1		
Pattern Number: 36												
Grp. No.	FRL	NPA	Pfx Mrk	Hop Lmt	Toll List	No. Del	Inserted Digits	DCS/IXC QSIG Intw				
1:	15	0					1	n	user			
2:	12	1					1	n	user			
3:	7	0					1	n	user			
4:	22	0					1	n	user			
5:								n	user			
6:								n	user			
BCC		VALUE		TSC	CA-TSC	ITC	BCIE	Service/Feature	BAND	No. Dgts	Numbering Format	LAR
0 1 2 3 4 W					Request							
Subaddress												
1:	y	y	y	y	y	n	n	rest				none
2:	y	y	y	y	y	n	n	rest				none
3:	y	y	y	y	y	n	n	rest				none
4:	y	y	y	y	y	n	n	rest				none
5:	y	y	y	y	y	n	n	rest				none
6:	y	y	y	y	y	n	n	rest				none

- For DSN trunks that have the **Precedence Mode Outgoing** field set for DTMF, you must delete one digit. If you do not delete one digit, the system sends the precedence level digit twice.
- Press **Enter** to save your changes.

Assigning digit conversion

Digit conversion takes digits that were dialed on incoming calls, and converts the digits to local telephone numbers. These local numbers usually are extensions.

To assign the Precedence Routing digit conversion:

- Type **change precedence-routing digit-conversion**. Press **Enter**.

The system displays the **Precedence Routing Digit Conversion Table** screen ([Figure 262: Precedence Routing Digit Conversion Table screen](#) on page 1020).

Figure 262: Precedence Routing Digit Conversion Table screen

change precedence-routing digit-conversion 0						Page	1 of	2
PRECEDENCE ROUTING DIGIT CONVERSION TABLE						Percent Full: 11		
Matching Pattern	Min	Max	Del	Replacement String	Net	Conv		
x2386	8	8	4		ext	n		
x3032386	11	11	7		ext	n		
x3033386	11	11	7		ext	n		
x3034386	11	11	7		ext	n		
x3035386	11	11	7		ext	n		
x3386	8	8	4		ext	n		
x4386	8	8	4		ext	n		
x5386	8	8	4		ext	n		
x6	5	5	1		ext	n		
xx2386	9	9	5		ext	n		
xx3032386	12	12	8		ext	n		
xx3033386	12	12	8		ext	n		
xx3034386	12	12	8		ext	n		
xx3035386	12	12	8		ext	n		

2. Format the **Matching Pattern** field for routing DSN numbers:

- For non-WNDP dialing, enter the precedence digit and the address digits. The precedence digit is usually a number from 0 to 4.
- For WNDP dialing, enter the precedence digit, the route code, and the address digits. The precedence digit is usually a number from 0 to 4.

An **x** in the digit string is a wildcard that matches any single digit.

3. In the **Net** fields, type **ext** or **pre**.

- **ext** stands for extension, and uses ARS tables or AAR tables to route the call.
- **pre** stands for precedence routing, and uses the Precedence Analysis Tables to route the call.

4. Press **Enter** to save your changes.

Dual Homing

You administer Dual Homing when you administer the Precedence Routing feature. For more information, see [Precedence Routing](#) on page 1015.

End Office Access Line Hunting

You administer End Office Access Line Hunting when you administer the Precedence Routing feature. For more information, see [Precedence Routing](#) on page 1015.

Preemption

Assigning Preemption to a COR

To assign Preemption to a COR:

1. Type **change cor *n***, where *n* is the number of a specific COR. Press **Enter**.

The system displays the **Class of Restriction** screen.

Click **Next** until you see the **Preemptable** field ([Figure 263: Class of Restriction screen](#) on page 1021).

Figure 263: Class of Restriction screen

change cor 36	Page 2 of 4
CLASS OF RESTRICTION	
MF Incoming Call Trace? n	
Brazil Collect Call Blocking? n	
Block Transfer Display? n	
Block Enhanced Conference/Transfer Display? n	
Remote Logout of Agent? n	
Station Lock COR:	
Outgoing Trunk Disconnect Timer (minutes):	
Line Load Control:1	
Maximum Precedence Level: ro	Preemptable? y
MLPP Service Domain?	

2. In the **Preemptable** field, define whether extensions or trunks that you assign to this COR can be preempted. The default value is **y**.
3. Press **Enter** to save your changes.

Assigning trunks for Preemption

For the Preemption feature, enabling a trunk as a DSN termination telephone guarantees that the trunk can accept the Preemption signaling over the DSN. To assign trunks, see [Assigning trunks](#) on page 1005.

Setting the Precedence Call timeout

See [Assigning Precedence Calling system parameters](#) on page 1003.

Line Load Control

Line Load Control (LLC) is assigned on a system-wide basis and on a COR basis.

Assigning the LLC level for the system

1. Type **change system-parameters m1pp**. Press **Enter**.

The system displays the **Multiple Level Precedence & Preemption Parameters** screen ([Figure 250: Multiple Level Precedence & Preemption Parameters screen](#) on page 1003).

2. Set the LLC level for the system. In the **Line Load Control Restriction Level** field, type one of the following options:
 - 0 - The LLC feature is not active. There are no restrictions. This is the default value.
 - 2 - Restrict extensions with a COR that is assigned to LLC level 2, 3, or 4.
 - 3 - Restrict extensions with a COR that is assigned to LLC level 3 or 4.
 - 4 - Restrict extensions with a COR that is assigned to LLC level 4.
3. Press **Enter** to save your changes.

Assigning the LLC to a COR

1. Type **change cor n**, where *n* is the number of a specific COR. Press **Enter**.

The system displays the **Class of Restriction** screen.

2. Click **Next** until you see the **Line Load Control** field ([Figure 251: Class of Restriction screen](#) on page 1004).
3. Set the LLC level for each COR. In the **Line Load Control** field, type one of the following options:
 - 1 - LLC Level 1. The COR cannot be restricted by LLC. This is the default value.
 - 2 - LLC Level 2

- 3 - LLC Level 3
 - 4 - LLC Level 4
4. Press **Enter** to save your changes.

Worldwide Numbering and Dialing Plan

Assigning WNDP system parameters

To assign WNDP system parameters:

1. Type **change system-parameters mlpp**. Press **Enter**.

The system displays the **Multiple Level Precedence & Preemption Parameters** screen ([Figure 250: Multiple Level Precedence & Preemption Parameters screen](#) on page 1003).

2. Administer the following fields:

- **Worldwide Numbering Dial Plan Active.** Type either y or n . The default is n.
- **Default Route Digit.** The system displays this field when the **Worldwide Numbering Dial Plan Active** field is enabled. You must enter a valid digit in this field. Valid entries are:

0 - Voice call (the default value)

1 - Circuit switched data call

2 - Satellite avoidance call

3 - (reserved)

4 - (reserved)

5 - Hotline voice grade call

6 - Hotline data grade call

7 - (reserved)

8 - (reserved)

9 - (reserved)

- **WNDP Emergency 911 Route String.** 1 to 24 numeric digits or blank. The default is blank. For more information, see [Interactions for Multiple Level Precedence and Preemption](#) on page 1028.

Valid entries for this field can be a trunk access code (TAC), the AAR or the ARS access code, a WNDP access code, or an extension. The extension might be, for example, the firehouse at a base that handles emergency calls. If you use a WNDP access code, use the access code for the lowest precedence calling level in the system.

3. Press **Enter** to save your changes.

Assigning WNDP Feature Access Codes

Administer the WNDP precedence FACs only when you use WNDP dialing. Do not administer the WNDP precedence FACs when you use precedence dialing.

To assign a FAC:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen.

2. Click **Next** until you see the **WNDP Precedence Access Codes** area ([Figure 249: Feature Access Code \(FAC\) screen](#) on page 1002).

Note:

You must also define a value in the **Precedence Calling Access Code** field, even when you use WNDP dialing. Use the Precedence Calling FAC when you administer Precedence Routing trunks. For more information, see [Assigning an MLPP Feature Access Code](#) on page 1002.

3. In the **WNDP Precedence Access Codes** area, type a 2-digit FAC that conforms to your dial plan in each field. Each FAC must begin with the number **9**.
4. Press **Enter** to save your changes.
5. Ensure that you notify all users about the assigned FACs.

Assigning a hot line number

A hot line is an extension that the system automatically dials when you pick up the receiver. On a single-line telephone, assign a hot line destination. Use a system, a group, or a personal list that is administered to the hot line destination.

The hot line number must include:

- The WNDP Dialing 2-digit FAC for the precedence level that you want.
- As an option, you can also include the number **1** as the Route Code setup digit. For more information, see [Worldwide Numbering and Dialing Plan](#) on page 996. If you do not use a Route Code setup digit, the system uses the default digit **0**.

If you use the Route Code setup digit **1**, you must use a routing digit. The next number in the sequence is the routing digit. For example, **5** is a hot line voice call, and **6** is a hot line data call. For more information, see [Worldwide Numbering and Dialing Plan](#) on page 1023.

- The destination telephone number.

For example, when the system dials 90157208451111, the system processes the call as a Flash Override WNDP voice call to extension **720-845-1111**.

- **90** is the two-digit WNDP dialing FAC indicating Flash Override.
- **1** is the optional Route Code setup digit.

- **5** is the routing digit that indicates a voice hot line call.
- **720-845-1111** is the destination telephone number.

The following procedure explains how to administer number 90157208451111 as a hot line destination number. To administer a hot line destination number, you must first set up a group list that contains the hot line destination number. Then you must set up the hot line destination number that references the group list.

To set up a group list:

1. Type **add abbreviated-dialing group next**. Press **Enter**.

The system displays the **Abbreviated Dialing List** screen ([Figure 253: Abbreviated Dialing List screen](#) on page 1007).

2. Write down the Group List number that the system assigns to this Abbreviated Dialing List.

You use this Group List number when you set up the hot line destination number.

3. In the **Dial Code** field, type the dial code that is associated with the hot line destination number. In this example, that number is 90157208451111.

4. Press **Enter** to save your changes.

In the next procedure, you use the Group List number that you set up in this procedure.

To set up the hot line destination number:

1. Type **add station 90157208451111**. Press **Enter**.

The system displays the **Station** screen ([Figure 254: Station screen](#) on page 1008).

2. In the **Type** field, type the model of analog telephone, such as **2500**.

3. Type information in the other fields that the system requires to add this new extension.

4. Click **Next** until you see the **Hot Line Destination** area ([Figure 255: Station screen](#) on page 1008).

5. In the **Abbreviated Dialing List Number (From above 1, 2, or 3)** field, type the Group List number that contains your hot line destination number.

This is the Group List number that you wrote down from the previous procedure.

6. Press **Enter** to save your changes.

Assigning attendant queue priorities

See [Assigning attendant queue priorities](#) on page 1009.

Reports for Multiple Level Precedence and Preemption

The following reports provide information about the Multiple Level Precedence and Preemption feature:

- None

Considerations for Multiple Level Precedence and Preemption

This section provides information about how the Multiple Level Precedence and Preemption feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Multiple Level Precedence and Preemption under all conditions. The following considerations apply to Multiple Level Precedence and Preemption:

Precedence Calling

Except for a G350 or a G700 Media Gateway that is supported by an S8300, an S8500, or an S8700 Media Server, a tone clock circuit pack is required for this feature. On the DEFINITY server, all tone clocks must be TN2182B or later, except when you use MF 2/6 trunks. MF 2/6 trunks require the TN2182C, vintage 2, circuit pack or later.

Announcements for Precedence Calling

When you use the announcement capabilities on a G650, an SCC1, or a MCC1 Media Gateway, use the TN2501AP or the TN750 circuit packs to record announcements on the following servers:

- DEFINITY server
- S8100 Media Server
- S8500 Media Server
- S8700 Media Server

You can also use existing analog announcement equipment with the MLPP features.

If you have multiple integrated announcement circuit packs, only one of those circuit packs can be a TN750 or a TN750B. Any additional circuit packs must be a TN2501AP or a TN750C.

Precedence Call Waiting

Except for an S8300 Media Server, a tone clock circuit pack is required for this feature. On a DEFINITY server and an IP600 IP Server, all tone clocks must be TN2182B or later, except when using MF 2/6 trunks. MF 2/6 trunks require the TN2182C, vintage 2, circuit pack or later.

You can assign Precedence Call Waiting to all models of telephones, including IP hardphones and softphones.

Precedence Routing

The routing that you administer with Precedence Routing uses the same capacity tables as the ARS feature. These tables include patterns and analysis tables. You can view the real-time capacity usage with the **change precedence-routing analysis** command. The **Percent Full** field displays how much of the available capacity is used for routing information.

H.323 IP trunks do not support data calls that use any type of modem or data module. Do not administer H.323 IP trunks for users who make data calls over trunk facilities. H.323 IP trunks can be used for voice calls.

Preemption

A tone clock circuit pack is required for this feature. All tone clocks must be TN2182B or later, except when using MF 2/6 trunks. MF 2/6 trunks require the TN2182C, vintage 2, circuit pack or later.

The call progress tones for Preemption consist of a fixed tone and a pattern. You cannot change the call progress tones by typing the **change system-parameters country-options** command.

Line Load Control

When a system reload occurs, the LLC system-level settings revert to the default factory setting. The default factory setting is LLC level **0**, which indicates no restrictions. Normal telecommunications service is restored after a system reload.

The LLC COR settings, however, are saved in translations. The settings do not revert to the factory defaults if the settings were saved in translations.

Worldwide Numbering and Dialing Plan

The Route Control Digit of the Worldwide Numbering and Dialing Plan (WNDP) feature is not available as part of the MLPP feature set.

The Route Control Digit of WNDP is not the same as the Route Code digit.

Users must dial any destination telephone number that starts with the number **1**, such as extension 1500, as follows: **1**, the Route Code digit, then the destination number. For example, dial 1x1500, where x is the Route Code digit.

H.323 IP trunks do not support data calls. Do not administer H.323 IP trunks for users that make data calls over trunk facilities. H.323 IP trunks can be used for voice calls.

Interactions for Multiple Level Precedence and Preemption

This section provides information about how the Multiple Level Precedence and Preemption feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Multiple Level Precedence and Preemption in any feature configuration.

Precedence Calling

- Attendant Vectoring

Attendant Vectoring uses the Call Vectoring feature to provide flexible routing of attendant-seeking calls. When the system accesses an attendant VDN, the call can be answered by the attendant, routed to an announcement, or routed to the voice mailbox of the assigned night station. This process reduces the chance of precedence calls remaining in the attendant queue, specifically where the attendant has not answered all calls in the queue, and the console is placed in night mode. Attendant Vectoring can be purchased as a stand-alone feature. Contact your Avaya representative for more information.

For more information about Attendant Vectoring, see *DEFINITY ECS Call Vectoring/EAS Guide*, 555-230-521.

- Call Coverage

Calls above Routine precedence do not follow administered coverage paths. The calls ring until the Timeout for Precedence Calls expires, and the call goes to a console or a night telephone. If the called party is on an active call and Preemption is enabled, the call is preempted.

- **Call Detail Recording (CDR)**

No separate CDR field is supplied for the precedence level of a call. No separate CDR field creates an incompatibility between current call accounting software and the new call record format. With the current call record format, you can examine the call record for the Precedence Calling FAC to determine the precedence level of a call. If the call is a precedence call, the first digit of the number that was dialed indicates the precedence level of the call. If WNDP is active, you need to examine only the FAC because the precedence level is implied from the FAC. The CDR feature does not record the precedence level for a station-to-station call.

CDR can be administered to record either the dialed digits or the outpulsed digits. In the case of Precedence Routing, the outpulsed digits can appear dramatically different from the dialed digits. When you view CDR records, remember that the precedence level digit might not be recorded.

- **Conference**

When two calls are merged during a conference, the precedence level of a call is set to the highest active precedence level.

- **Hunting**

When you administer a hunt group with preemption, set the **Maximum Preemption Level** field and the **Preemptable** field in the **Class of Restriction** screen. The hunt group **Group Type** must use **circular** or **ucd-mia queuing**, and the **ACD**, the **Queue**, and the **Vector** fields must be set to **n**.

- **Night Service**

When the attendant console goes into Night Service, users can answer precedence calls from a night telephone, a night or a day/night console, or the Trunk Answer Any Station (TAAS) feature. If calls are in the queue when the attendant console goes into Night Service, those queued calls are diverted to a night or a day/night console or TAAS, based on the attendant queue priorities. For more information, see "Assigning attendant queue priorities" in the "Administering" section.

- **Preemption**

When a precedence call attempts to preempt an existing call, call progress tones, or the "blocked precedence call" announcement, indicates why the system did not complete the call.

The following table shows how the system processes precedence calls based on the precedence level of the call and the precedence level of the preempted trunk.

Multiple Level Precedence and Preemption

Precedence level of the call	Precedence level of the DSN trunk call that is being preempted	Call treatment
Flash Override	Flash Override	Recorded announcement or busy tone
Flash	Flash Override	Recorded announcement or busy tone
Immediate	Flash Override	Recorded announcement or busy tone
Priority	Flash Override	Recorded announcement or busy tone
Routine	Flash Override	Busy tone
Flash Override	Flash	Call completes normally
Flash	Flash	Recorded announcement or busy tone
Immediate	Flash	Recorded announcement or busy tone
Priority	Flash	Recorded announcement or busy tone
Routine	Flash	Busy tone
Flash Override	Immediate	Call completes normally
Flash	Immediate	Call completes normally
Immediate	Immediate	Recorded announcement or busy tone
Priority	Immediate	Recorded announcement or busy tone
Routine	Immediate	Busy tone
Flash Override	Priority	Call completes normally
Flash	Priority	Call completes normally
Immediate	Priority	Call completes normally
Priority	Priority	Recorded announcement or busy tone
Routine	Priority	Busy tone
Flash Override	Routine	Call completes normally
Flash	Routine	Call completes normally
Immediate	Routine	Call completes normally
Priority	Routine	Call completes normally
Routine	Routine	Busy tone

- **Restrict Last Appearance**

If the Restrict Last Appearance telephone option is enabled, and only one idle call appearance is available on the telephone when a precedence call is made to that telephone, callers who use Routine precedence hear busy tone. Callers who use any other precedence level connect to the restricted last call appearance.

If the Restrict Last Appearance telephone option is not enabled, and only one idle call appearance is available on the telephone when a precedence call is made to that telephone, callers using any precedence level connect to the last call appearance.

- **Send All Calls**

Calls above Routine precedence do not follow administered coverage paths. Calls ring until the Timeout for Precedence Calls expires, and then calls go to an attendant console or a night telephone.

- **Transfer**

When two calls are merged during a transfer, the precedence level of a call is set to the highest active precedence level.

- **Worldwide Numbering and Dialing Plan (WNDP)**

When WNDP is enabled, users must dial a FAC for the precedence level that the users want to use. Users cannot use the Precedence Calling FAC. In addition, the Route Code function and the implied precedence level are provided.

When WNDP is disabled, users must dial the Precedence Calling FAC, and then the precedence level, a number between **0** and **4**. The WNDP FACs can be administered, but cannot be used.

Precedence Call Waiting

- **Attendant Console**

Precedence Call Waiting calls from attendant consoles or telephones with console permissions are not allowed. Calls from an attendant console cannot camp onto a call with Precedence Call Waiting. The attendant console user hears a recorded announcement.

- **Automatic Callback**

If the Automatic Callback feature is activated and Precedence Call Waiting is attempted, the caller hears a recorded announcement.

- **Call Forwarding**

An extension can have Precedence Call Waiting and Call Forwarding active at the same time. If the user is active on a call and another call comes in, the called party hears the Precedence Call Waiting tone. The call is forwarded after the timeout. Any other calls that arrive during the timeout period go immediately to the forwarded telephone.

Multiple Level Precedence and Preemption

- Call Pickup

If a member of a pickup group who is active on a call receives Precedence Call Waiting, other members of the pickup group cannot pick up the call.

- Call Waiting

- For a Routine Precedence Call, a user who is on an active call hears the standard Call Waiting tone.
- Precedence Call Waiting is denied if the called party already has one call currently waiting in queue.

- Data Privacy

Precedence Call Waiting cannot be applied to a line with Data Privacy.

- Data Restriction

Precedence Call Waiting cannot be applied to a line with Data Restriction.

- Line Load Control (LLC)

If the LLC feature restricts a telephone, that user must hang up to answer a Precedence Call Waiting call.

- Preemption

Regardless of how you administer Precedence Call Waiting, calls with a higher level of precedence always preempt calls with a lower level of precedence.

- Tenant Service Partitioning

Timeout redirection does not occur. Tenant Service Partitioning calls continue to ring at the called extension.

Precedence Routing

- General

Precedence Routing allows calls with a precedence higher than Routine to terminate to:

- tRunks
- Telephones
- Attendant consoles
- Hunt groups
- Recorded announcements

Precedence Routing calls cannot terminate at Vector Directory Numbers (VDNs) or Terminating Extension Groups (TEGs).

- Call Detail Recording (CDR)

No separate CDR field is supplied for the precedence level of a call. No separate CDR field creates an incompatibility between current call accounting software and the new call record format. With the current call record format, you can examine the call record for the Precedence Calling FAC to determine the precedence level of a call. If the call is a precedence call, the first digit of the number that was dialed indicates the precedence level of the call. If WNDP is active, you need to examine only the FAC because the precedence level is implied from the FAC. The CDR feature does not record the precedence level for a station-to-station call.

CDR can be administered to record either the dialed digits or the outpulsed digits. In the case of Precedence Routing, the outpulsed digits can appear dramatically different from the dialed digits. When you view CDR records, remember that the precedence level digit might not be recorded.

- Shortcut Dialing

When you use the Shortcut Dialing feature over DSN trunks, the system uses the Precedence Routing analysis tables to administer the incoming Shortcut Dialing digit analysis. The system does not use the ARS analysis tables.

- Traveling Class Marks TCM)

Precedence Routing passes all TCM information over DSN and non-DSN trunks.

Preemption

- General

Calls can be preempted that terminate at:

- Trunks
- Telephones
- Attendant consoles
- Nonqueued hunt groups
- Vector Directory Numbers (VDNs)

Since Precedence Routing does not allow precedence calls to terminate at queued hunt groups or Terminating Extension Groups (TEGs), other calls to these facilities cannot be preempted.

- Adjunct Switch Applications Interface (ASAI)

ASAI is notified if a call is preempted and disconnected from the current call.

- AUDIX system

The AUDIX system is notified if a call is preempted and disconnected from the current call.

Multiple Level Precedence and Preemption

- Call Detail Recording (CDR)

CDR has two records for a preempted call. CDR has a record of the original call, and a record of the new call after the preemption.

- Call Management System (CMS)

CMS is notified if a call is preempted and disconnected from the current call.

- Call Coverage

A call that the system redirects to a coverage point cannot be preempted.

- Call Pickup

A call that uses Call Pickup cannot be preempted.

- Code Calling Access

A call that uses Code Calling Access cannot be preempted.

- Avaya Interactive Voice Response (IVR) system

The system notifies the IVR system if the system preempts and disconnects a call from the current call.

- Group Paging

A call that is part of a group page cannot be preempted.

- Loudspeaker Paging

A call that uses Loudspeaker Paging cannot be preempted.

- Malicious Call Trace

A call that uses Malicious Call Trace cannot be preempted.

- Modem Pooling

A call that uses a modem pool cannot be preempted.

- Personal central office line (PCOL)

A call that uses PCOL cannot be preempted.

- Precedence Calling

When a precedence call attempts to preempt an existing call, call progress tones or the "blocked precedence call" announcement indicates why the system did not complete the call.

The following table shows how precedence calls are processed, depending on the precedence level of the call and the precedence level of the preempted trunk.

Precedence level of the call	Precedence level of the DSN trunk call that is being preempted	Call treatment
Flash Override	Flash Override	Recorded announcement or busy tone
Flash	Flash Override	Recorded announcement or busy tone
Immediate	Flash Override	Recorded announcement or busy tone
Priority	Flash Override	Recorded announcement or busy tone
Routine	Flash Override	Busy tone
Flash Override	Flash	Call completes normally
Flash	Flash	Recorded announcement or busy tone
Immediate	Flash	Recorded announcement or busy tone
Priority	Flash	Recorded announcement or busy tone
Routine	Flash	Busy tone
Flash Override	Immediate	Call completes normally
Flash	Immediate	Call completes normally
Immediate	Immediate	Recorded announcement or busy tone
Priority	Immediate	Recorded announcement or busy tone
Routine	Immediate	Busy tone
Flash Override	Priority	Call completes normally
Flash	Priority	Call completes normally
Immediate	Priority	Call completes normally
Priority	Priority	Recorded announcement or busy tone
Routine	Priority	Busy tone
Flash Override	Routine	Call completes normally
Flash	Routine	Call completes normally
Immediate	Routine	Call completes normally
Priority	Routine	Call completes normally
Routine	Routine	Busy tone

Multiple Level Precedence and Preemption

- Precedence Call Waiting

Regardless of how you administer Precedence Call Waiting, calls with a higher level of precedence always preempt calls with a lower level of precedence.

- Radio Paging

You cannot preempt a call that uses Radio Paging.

- Recorded Announcements

You cannot preempt a call that is connected to a recorded announcement.

- Secondary Extension

You cannot preempt a call that uses a secondary extension.

- Transient calls

You cannot preempt calls, either ringing or on hold, that are in a transient mode.

Line Load Control

- General

Since the Line Load Control (LLC) feature restricts telephones from originating calls, features that require dial tone or a new call appearance for activation are unavailable when LLC is restricting the telephone. Some of those features include:

- Call Forwarding
- Call Pickup
- Conference
- Transfer

You can still activate features that use buttons, where dial tone is not required. Some of those features include:

- Send All Calls
- Inspect
- Integrated Directory

- Bridged Call Appearance

The LLC feature restricts originating new calls from all call appearances on a telephone, including bridged appearances. A telephone that is restricted by the LLC feature, and that has a bridged appearance of an extension whose telephone is *not* restricted, can bridge onto an active call, but cannot originate a new call through that bridged extension.

A telephone that is *not* restricted by the LLC feature, and that has a bridged appearance of an extension whose telephone *is* restricted, can originate a new call through that bridged extension.

- Call Park

A user on a call becomes restricted by the LLC feature. The user can park the call, but cannot retrieve the call until the LLC restriction is removed. Another user that is not currently restricted by the LLC feature can retrieve the call.

- Call Waiting

A user whose telephone is restricted by the LLC feature must hang up to answer a Call Waiting call. The LLC feature does not restrict incoming calls.

- Hold

Telephones that are restricted by the LLC feature, and that are on an active call, can place a call on hold and later retrieve the call that is on hold.

- Precedence Call Waiting

A user whose telephone is restricted by the LLC feature must hang up to answer a Precedence Call Waiting call.

Worldwide Numbering and Dialing Plan (WNDP)

- Emergency 911 Calling

If WNDP dialing is administered to use the digits "91" as a FAC, this FAC conflicts with dialing 911 to reach an emergency service agency. If a user dials 911 with WNDP enabled, the call does not go through to the emergency service agency because the system is waiting for more digits after dialing 91.

To work around this interaction, you can take all or any the following actions:

- Instruct users to first dial the ARS FAC and then dial 911. For example, if the ARS FAC is 8, a user can dial **8911**. This option works for any emergency number, such as 999 in the United Kingdom.
- Instruct users to dial the assigned WNDP FAC followed by 911. For example, if one of the WNDP FACs is 92, a user can dial **92911**. This option works for any emergency number, such as 999 in the United Kingdom.
- Administer a WNDP Emergency 911 Route String. This route string is outpulsed when a user dials either 911 and waits for the interdigit timeout, or dials 911 and then presses the pound key (#). This dialing option works only when the WNDP Flash FAC is 91.

If the telephone that you use for an emergency call does not have adequate calling permissions, the emergency call does not go through. This situation can happen in the following conditions:

- The Facility Restriction Level (FRL) of the telephone is not high enough.
- The precedence calling level of the telephone is not high enough.
- The telephone is not allowed to use a higher precedence level for the call.

Multiple Level Precedence and Preemption

- No trunk facilities are available, and the precedence level of the call is not high enough to preempt another call.
- The hop limit is exceeded when call is routed over tandem trunks.

- Hunting

When you administer a hunt group with preemption, set the **Maximum Preemption Level** field and the **Preemptable** field in the **Class of Restriction** screen. The hunt group **Group Type** must use **circular** or **ucd-mia queuing**, and the **ACD**, the **Queue**, and the **Vector** fields must be set to **n**.

- Precedence Calling

When WNDP is enabled, users must dial a FAC for the precedence level that the users want to use. Users cannot use the Precedence Calling FAC. In addition, the Route Code function and the implied precedence level are provided.

When WNDP is disabled, users must dial the Precedence Calling FAC, and then the precedence level, a number between **0** and **4**. The WNDP FACs can be administered, but cannot be used.

Music-on-Hold

Use the Music-on-Hold feature to automatically provide music, silence, or tone to a caller who:

- Is on hold
- Is transferred
- Is parked
- Waits in a queue

Detailed description of Music-on-Hold

This section provides a detailed description of the Music-on-Hold feature.

Use the Music-on-Hold feature to automatically provide music, silence, or tone to a caller.

[Table 56: Music, silence, and tone options](#) on page 1039 shows the audio options that you can provide to a user.

Table 56: Music, silence, and tone options

Caller status	Music	Silence	Tone
On hold	Yes	No	Yes
On a trunk call that is being transferred	Yes	Yes	No
Parked	Yes	No	Yes
Waits in a queue	Yes	No	Yes

Note:

If you use equipment that rebroadcasts music or other copyrighted materials, you might be required to obtain a copyright license from, or pay fees to, a third party such as the American Society of Composers, Artists, and Producers (ASCAP), or Broadcast Music Incorporated (BMI).

Administering Music-on-Hold

The following steps are part of the administration process for the Music-on-Hold feature:

- [Assigning music tones, music ports, and music for transferred trunks](#)
- [Defining a Class of Restriction for Music-on-Hold](#)
- [Connecting a music source to the server](#)
- [Assigning a source of music to a port](#)

This section describes:

- Any prerequisites for administering the Music-on-Hold feature
- The screens that you use to administer the Music-on-Hold feature
- Complete administration procedures for the Music-on-Hold feature

Prerequisites for administering Music-on-Hold

You must complete the following actions before you can administer the Music-on-Hold feature:

- None

Screens for administering Music-on-Hold

Screen name	Purpose	Fields
Feature-Related System Parameters	Assign music tones, music ports, and music for transferred trunks.	• Music/Tone On Hold • Music Port • Music (or Silence) on Transferred Trunk Calls
Music Sources	Assign a music source to a port.	All
CPE Trunk Group	Connect a music source to the server.	All
Class of Restriction	Define a Class of Restriction (COR) for Music-on-Hold.	Hear System Music on Hold

Assigning music tones, music ports, and music for transferred trunks

To assign music tones, music ports, and music for transferred trunks:

1. Type **change system-parameters features**. Press **Enter**.

The system displays the **Feature-Related System Parameters** screen ([Figure 264: Feature-Related System Parameters screen](#) on page 1041).

Figure 264: Feature-Related System Parameters screen

change system-parameters features	page 1
FEATURE-RELATED SYSTEM PARAMETERS	
Self Station Display Enabled?	n
Trunk-to-Trunk Transfer?	none
Automatic Callback - No Answer Timeout Interval (rings):	4_
Call Park Timeout Interval (minutes):	10
Off-Premises Tone Detect Timeout Interval (seconds):	20_
AAR/ARS Dial Tone Required?	y
Music/Tone On Hold: music__ Type:	Group 1_
Music (or Silence) On Transferred Trunk Calls:	all
DID/Tie/ISDN/SIP Intercept Treatment:	attd
Internal Auto-Answer of Attd-Extended/Transferred Calls?	y
Automatic Circuit Assurance (ACA) Enabled?	y
ACA Referral Calls:	local
ACA Referral Destination:	_____
ACA Short Holding Time Originating Extension:	_____
ACA Long Holding Time Originating Extension:	_____
Abbreviated Dial Programming by Assigned Lists:	
Auto Abbreviated/Delayed Transition Interval(rings):	
Protocol for Caller ID Analog Terminals:	Bellcore
Display Calling Number for Room to Room Caller ID Calls?	

2. In the **Music/Tone on Hold** field, perform one of the following actions:

- If you want a caller who is on hold to hear music, type **music**.
- If you want a caller who is on hold to hear a tone, type **tone**.
- If you want a caller who is on hold to hear neither music nor a tone, type **none**.

If the **Tenant Partitioning** field on the **Optional Features** screen is set to **y**, you cannot administer the **Music/Tone on Hold** field. If the **Tenant Partitioning** field on the **Optional Features** screen set to **y**, you must use the Music Sources screen to assign music to a port.

When you enter **music**, the **Type** field appears. Type one of the following values:

- Type **ext** and the corresponding extension number of the music-on-hold.

Music-on-Hold

- Type **group** and the corresponding music-on-hold group number.
- Type **port** and the corresponding port location of the music-on-hold. [Table 57: Port field values](#) on page 1042 shows how to construct a port number. You must specify a port on a TN763 Auxiliary Trunk circuit pack, or any supported analog line circuit pack.

For more information on music-on-hold groups see Locally Sourced Announcements and Music.

Table 57: Port field values

Characters	Description	Value
1-2	Cabinet number	01 through 44 (For DEFINITY R configurations) 01 through 03 (For DEFINITY SI configurations) 01 through 64 (For S8700 IP-Connect)
3	Carrier	A through E
4-5	Slot number	0 through 20
6-7	Circuit number	01 through 04 (x.25 circuit pack) 01 through 31 (DEFINITY SI, S8700 IP-Connect (tdm, pdm) configurations) 01 through 16 (ppp for S8700 IP-Connect) 01 through 08 (system-port for S8700 IP-Connect) 17/33 (ethernet on S8700 IP-Connect)
x	Administration without Hardware	If the Secondary data module? field, is set to n , you can type x in the Port field. A Port field set to x indicates that no hardware is associated with the port assignment.

3. In the **Music (or Silence) On Transferred Trunk Calls** field, perform one of the following actions:
 - If you want all transferred trunk calls to receive music until the call is answered, type **all**.
 - If you want a caller on the trunk call to hear music while the caller waits to be transferred, or ringback tone as soon as the transfer is complete, type **no**.

The caller on the trunk call hears neither music nor a tone if Music-on-Hold is not administered.

 - If you want a trunk call that transfers to a station, and then waits at the station, to hear music, if music is administered, type **call-wait**.

All other transferred trunk calls receive the ringback tone.
4. Press **Enter** to save your changes.

Defining a Class of Restriction for Music-on-Hold

To define a Class of Restriction for Music-on-Hold:

1. Type **change cor n**, where n is the Class of Restriction (COR) to which you want to add Music-on-Hold. Press **Enter**.

The system displays the **Class of Restriction** screen ([Figure 265: Class of Restriction](#) on page 1043).

Figure 265: Class of Restriction

change cor 1		Page 1 of 4	
CLASS OF RESTRICTION			
COR Number: 1			
COR Description:			
FRL: 7		APLT? y	
Can Be Service Observed? n	Calling Party Restriction: none		
Can Be A Service Observer? n	Called Party Restriction: none		
Time of Day Chart: 2	Forced Entry of Account Codes? n		
Priority Queuing? n	Direct Agent Calling? n		
Restriction Override: none	Facility Access Trunk Test? n		
Restricted Call List? y	Can Change Coverage? n		
Access to MCT? y		Fully Restricted Service? n	
Group II Category For MFC: 7	Add/Remove Agent Skills? n		
Send ANI for MFE? n	Automatic Charge Display? n		
MF ANI Prefix:	PASTE (Display PBX Data on Phone)? n		
Hear System Music on Hold? y	Can Be Picked Up By Directed Call Pickup? n		
	Can Use Directed Call Pickup? n		
	Group Controlled Restriction: inactive		

2. In the Hear System Music on Hold field, perform one of the following actions:
 - If you want Music-on-Hold to be activate at a telephone, type **y**.
 - If you do not want Music-on-Hold to be activate at a telephone, type **n**.
3. Press **Enter** to save your changes.

Connecting a music source to the server

To connect a music source to the server:

- 1. Type **add trunk-group next**. Press **Enter**.

You use the customer-premises equipment (CPE) trunks to connect a music source to the server.

For more information on how to administer trunk groups, see the *Administrator's Guide for Avaya Communication Manager*.

Assigning a source of music to a port

To assign the sources of music to a port:

- 1. Type **change music-sources**. Press **Enter**.

The system displays the **Music Sources** screen ([Figure 266: Music Sources screen](#) on page 1044).

Figure 266: Music Sources screen

change music-sources			Page 1 of X	
Music Sources				
Source	Type	Source	Description	
1	music	Type: port 01A1003	Easy listening	
2	tone		Tone-on-Hold	
3	music	Type: group 49	Rock	
4	none			
5	none			
6	none			
7	music	Type: extenstion 20003	Oldies	
8	none			
9	none			
10	none			
11	music	Type: group 50	Classical	
12	none			
13	none			
14	none			
15	none			

2. In the **Type** field, perform one of the following actions:

- If you want the user to hear music, type **music**.
- If you want the user to hear the tone-on-hold tone, type **tone**.

You can specify **tone** for only one music source on the **Music Sources** screen.

- If you want the user to hear neither music nor a tone, type **none**.

3. In the **Source** field, type the auxiliary trunk address, the analog port address, the group address, or the extension address of the music source. You cannot enter duplicate addresses in the **Source** field.

The system displays the **Source** field only if you typed **music** in the **Type** field.

[Table 57: Port field values](#) on page 1042 shows you how to construct a port number.

4. In the **Description** field, type a maximum of 20 characters that describe the source of the music.

The system displays the **Description** field, only if you typed **music** or **tone** in the **Type** field.

5. Press **Enter** to save your changes.

Reports for Music-on-Hold

The following reports provide information about the Music-on-Hold feature:

- None

Considerations for Music-on-Hold

This section provides information about how the Music-on-Hold feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Music-on-Hold under all conditions. The following considerations apply to Music-on-Hold:

- If the **Tenant Partitioning** field on the **Optional Features** screen is set to **y**, you cannot administer the **Music/Tone on Hold** field on the **Feature-Related System Parameters** screen. If the **Tenant Partitioning** field on the **Optional Features** screen set to **y**, you must use the Music Sources screen to assign music to a port.
- Any number of calls can simultaneously connect to music.
- The system does not provide music to callers, in a multicaller connection, who are in a queue, on hold, or parked.

Interactions for Music-on-Hold

This section provides information about how the Music-on-Hold feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Music-on-Hold in any feature configuration.

- Automatic Call Distribution (ACD)

If you administer Music-on-Hold to provide music, the system provides the music after the ACD split delayed announcement.

- Data Privacy and Data Restriction

If a user or an attendant places a call that has either Data Privacy or Data Restriction activated on hold, the system withholds Music-on-Hold. The system withholds Music-on-Hold to prevent transmission of a musical tone that a connected data service might falsely interpret as a data transmission.

- Hunting

If you administer Music-on-Hold to provide music, the system provides the music after the Direct Departmental Calling (DDC) group or the uniform call distribution (UCD) group delayed announcement.

Night Service

Use the Night Service feature to direct incoming calls to other answering points at night.

Detailed description of Night Service

This section provides a detailed description of the Night Service feature.

Avaya Communication Manager provides the following Night Service capabilities:

- [Hunt Group Night Service](#)
- [Night Console Service](#)
- [Night Station Service](#)
- [Trunk Answer from Any Station](#)
- [Trunk Group Night Service](#)

Hunt Group Night Service

With Hunt Group Night Service, an attendant or a split supervisor can assign a hunt group or a split to Night Service mode. All calls for the hunt group then are redirected to the hunt group's designated Night Service Extension (NSE). When a user activates Hunt Group Night Service, the associated button lamp lights.

Night Console Service

Night Console Service directs all calls for primary and daytime attendant consoles to a night console. When a user activates Night Console Service, the Night Service button for each attendant lights, and all attendant-seeking calls (and calls that are waiting) in the queue, are directed to the night console.

To activate and deactivate this feature, the attendant usually presses the **Night** button on the principal attendant console or a designated console.

Night Station Service

Night Station Service directs incoming calls for the attendant to designated extensions. To activate Night Station Service, attendants press the **Night** button on the principle console, if there is not an active night console. If the night station is busy, calls including emergency attendant calls, receive busy tone. Calls do not queue for the attendant.

When Night Station Service is active, the system routes the incoming calls to the attendant as follows:

- **Direct Inward Dialing (DID)** Listed Directory Number (**LDN**) calls are routed to a designated **DID-LDN** night extension.
- Internal calls route to the **DID-LDN** night extension, unless you administer the system so only **DID-LDN** calls can route to the **LDN** night extension.
- Non-DID calls are routed to the night destination that you specify for the trunk group or for the individual trunk. If you do not specify a night destination, the calls route to the **DID-LDN** night extension.

You can assign a unique extension as the night destination for each incoming central-office, foreign-exchange, or 800-Service trunk group. Both the extension assigned as a trunk group's night destination and the **DID-LDN** night extension can be phones or answering groups (such as **DDC** group, **UCD** group, or terminating extension group (**TEG**)).

Trunk Answer from Any Station

With Trunk Answer from Any Station (TAAS), telephone users can answer all incoming calls to the attendant when the attendant is not on duty, and when other telephones are not designated to answer the calls. The incoming call activates a gong, a bell, or a chime and a telephone user dials an access code to answer the call.

Users can activate TAAS if each of the following conditions is met:

- The attendant pressed the **Night** button on the primary console or a user (if Communication Manager has no attendant administered) pressed the Night Service button on the designated Night Service phone.
- A night console is not assigned or is not operational.
- Night Station Service is not active.

Trunk Group Night Service

With Trunk Group Night Service, an attendant or a designated Night Service telephone user can assign one or all trunk groups to Night Service mode. When a user activates Night Service, trunk groups that are assigned a Trunk Group Night Service termination change to Individual Trunk Night Service mode. The system redirects the calls that come into the trunk group to the group's designated **NSE**. Incoming calls on trunk groups that are not assigned to Trunk Group Night Service are queued in the attendant queue. If the call remains unanswered during the Night Service Disconnect Timer interval, the incoming trunk disconnects.

A user can also assign all the trunk groups to the Night Service mode at the same time. Then all the trunk groups are in the System Night Service mode. The system redirects any incoming calls made on the trunk groups to their designated **NSE for the trunk group**. To assign all the trunk groups to System Night Service, the user presses the System Night Service button on the principal attendant console or the Night Service button on a designated phone. You can assign a Night Service button to only one telephone.

To activate Trunk Group Night Service, you press the individual Trunk Night Service buttons on the attendant console or on a telephone. You can assign Trunk Night Service buttons on more than one telephone.

Hardware requirements for Night Service

The Night Service feature requires the following hardware:

- None

Administering Night Service

The following steps are part of the administration process for the Night Service feature:

- [Setting up night station service to voice mail](#)
- [Setting up Night Console Service](#)
- [Setting up Night Station Service](#)
- [Setting up Trunk Answer from Any Station](#)
- [Setting up external alerting](#)
- [Setting up external alerting Night Service](#)

Night Service

- [Setting up Night Service for trunk groups](#)
- [Setting up Night Service for hunt groups](#)

This section describes:

- Any prerequisites for administering the Night Service feature
- The screens that you use to administer the Night Service feature
- Complete administration procedures for the Night Service feature

Screens for administering Night Service

Screen name	Purpose	Fields
Hunt Group	Set Night Station Service to voice mail.	Group Number
Listed Directory Number		Night Destination
Console Parameters		DID-LDN Only to LDN Night Ext
Attendant Console	Set up Night Console Service.	Console Type
Listed Directory Numbers	Set up Night Station Service.	Night Destination
Console Parameters		DID-LDN Only to LDN Night Ext
Feature Access Codes	Set up Trunk Answer from Any Station (TAAS)	Trunk Answer Any Station Access Code
Console Parameters	Set up external alerting.	EXT Alert Port (TAAS)
Listed Directory Numbers	Set up external alerting night service.	Night Destination
Console Parameters		• EXT Alert Port (TAAS) • DID-LDN to Night Ext.
Trunk Group	Set up Trunk Group Night Service.	Night Service
Hunt Group	Set up Night Service for hunt groups.	Night Service Destination

Setting up night station service to voice mail

To set up a night station service to voice mail:

1. Type **add hunt-group next**. Press **Enter**.

The system displays the **Hunt Group** screen ([Figure 267: Hunt Group screen](#) on page 1051).

The **Group Number** field fills in automatically with the next hunt group number.

Figure 267: Hunt Group screen

HUNT GROUP		Page 1 of X
Group Name: ldn nights		
Group Number: 5	Group Extension: 51002__	Group Type:
MM Early Answer? _	Skill? _	ACD?
Queue? _	Vector? _	AAS?
Security Code: ____		COR:
ISDN Caller Disp: _____		TN: _
Measured: _____	Supervisor: Extension: _____	
Controlling Adjunct: _____		
Multiple Call Handling: _____		
Objective: _____		
Queue Length: ____		
Calls Warning Threshold: ____	Calls Warning Port: ____	
Time Warning Threshold: ____	Time Warning Port: ____	
Redirect on No Answer (rings): _ Redirect to VDN: _		
Forced Entry of Stroke Counts or Call Work Codes? _		

2. In the **Group Name** field, type the name of the group.

This example uses **ldn nights** in the **Group Name** field. There can be no members in this hunt group.

3. Press **Enter** to save your changes.

Note:

If you are using tenant partitioning, the command for the next step is **change tenant n**. If you are using tenant partitioning, the **Night Destination** field does not appear on the **Listed Directory Numbers** screen. Instead, the **Night Destination** field is on the **Tenant** screen.

4. Type **change listed-directory-numbers**. Press **Enter**.

The system displays the **Listed Directory Numbers** screen ([Figure 268: Listed Directory Numbers screen](#) on page 1052).

Figure 268: Listed Directory Numbers screen

Page 1 of 2

LISTED DIRECTORY NUMBERS

Night Destination: 51002

Ext	Name	TN
1: 51001	Attendant	1
2:		1
3:		1
4:		1
5:		1
6:		1
7:		1
8:		1
9:		1
10:		1

5. In the **Night Destination** field, add the night destination on the listed directory phone.

This example uses **51002**.

6. Press **Enter** to save your changes.

7. Type **change console-parameters**. Press **Enter**.

The system displays the **Console Parameters** screen ([Figure 269: Console Parameters screen](#) on page 1052).

Figure 269: Console Parameters screen

CONSOLE PARAMETERS

Attendant Group Name: 27 character name OPERATOR
COS: 1 COR: 1
Calls in Queue Warning: 5 Attendant Lockout? y
Ext Alert Port (TAAS):
CAS: none
SAC Notification? n Night Service Act. Ext.: 1234
IAS (Branch)? n IAS Tie Trunk Group No.:
IAS Att. Access Code: Alternate FRL Station:
Backup Alerting? n DID-LDN Only to LDN Night Ext? n

8. In the **DID-LDN Only to LDN Night Ext** field, type **n**.

9. Press **Enter** to save your changes.

10. From a phone with console permissions, dial the call forwarding feature access code, then the hunt group's extension, followed by the main number of AUDIX.

In this example, dial 51002.

Note:

You should receive a confirmation tone that consists of three beeps. This step is very important because calls to the LDN night service extension do not follow coverage.

11. In your voice mail, build the automated attendant with the extension of the Listed Directory Number (LDN), not the hunt group.

The originally dialed number was the LDN, which is the number Communication Manager passes to the voice mail application. In the case of the INTUITY and newer embedded AUDIX voice mail systems, you can use the Auto Attendant routing table to send the calls to a common automated attendant mailbox.

Setting up Night Console Service

To set up night console service:

1. Type **change attendant *n***, where *n* is the number of the attendant console. Press **Enter**.

The system displays the **Attendant Console** screen ([Figure 270: Attendant Console screen](#) on page 1054).

Figure 270: Attendant Console screen

```

ATTENDANT CONSOLE 2

Type: console      Name: 27 character attd cons name
Extension: 1000    Group: 1      Auto Answer: none
Console Type: principal  TN: 1    Data Module? n
Port: 01C1106     COR: 1      Disp Client Redir? n
                  COS: 1      Display Language: english

DIRECT TRUNK GROUP SELECT BUTTON ASSIGNMENTS (Trunk Access Codes)
  Local Remote      Local Remote      Local Remote
1: 9                5:                9:
2: 82               6:                10:
3:                 7:                11:
4:                 8:                12:

HUNDREDS SELECT BUTTON ASSIGNMENTS
1:      5:      9:      13:      17:
2:      6:      10:     14:     18:
3:      7:      11:     15:     19:
4:      8:      12:     16:     20:

```

2. In the **Console Type** field, type **principal**.

The system can include only one night-only or one day/night console, unless you administer Tenant Partitioning. Night Service is activated from the principal console, or from the one station set per system that has a **nite-serv** button.

3. Press **Enter** to save your changes.

Setting up Night Station Service

To set up night station service:

1. Type **change listed-directory-numbers**. Press **Enter**.

The system displays the **Listed Directory Numbers** screen ([Figure 271: Listed Directory Numbers screen](#) on page 1055).

Figure 271: Listed Directory Numbers screen

LISTED DIRECTORY NUMBERS			
Night Destination: 1234			
	Ext	Name	TN
1:	8100	attendant 8100	
2:			
3:			
4:			
5:			
6:			
7:			
8:			
9:			
10:			

2. Type the extension number in the **Night Destination** field. In this example, the extension number is **1234**.

The destination can be an extension, a recorded announcement extension, a vector directory number, or a hunt group extension.

3. Press **Enter** to save your changes.

4. Type **change console-parameters**. Press **Enter**.

The system displays the **Console Parameters** screen ([Figure 272: Console Parameters screen](#) on page 1055).

Figure 272: Console Parameters screen

CONSOLE PARAMETERS	
Attendant Group Name: 27 character name	OPERATOR
COS: 1	COR: 1
Calls in Queue Warning: 5	Attendant Lockout? y
Ext Alert Port (TAAS):	
CAS: none	
SAC Notification? n	Night Service Act. Ext.: 1234
IAS (Branch)? n	IAS Tie Trunk Group No.:
IAS Att. Access Code:	Alternate FRL Station:
Backup Alerting? n	DID-LDN Only to LDN Night Ext? n
Attendant Vectoring VDN:	

5. In the **DID-LDN Only to LDN Night Extension** field, type **n**.

6. Press **Enter** to save your changes.

After you set up night station service, you must have the attendant use the night console button to activate and deactivate night service.

Setting up Trunk Answer from Any Station

To set the FAC for TAAS:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen.

2. Click **Next** until you see the **Trunk Answer Any Station Access Code** field ([Figure 273: Feature Access Code \(FAC\) screen](#) on page 1056).

Figure 273: Feature Access Code (FAC) screen

change feature-access-codes

FEATURE ACCESS CODE (FAC)

Page 3 of x

Priority Calling Access Code:

Program Access Code:

Refresh Terminal Parameters Access Code:

Remote Send All Calls Activation:

Self Station Display Access Code:

Send All Calls Activation:

Station Firmware Download Access Code:

Station Lock Activation:

Station Security Code Change Access Code:

Station User Admin of FBI Assign:

Station User Button Ring Control Access Code:

Telephone Activation: #*

Terminal Dial-up Test Access Code:

Terminal Translation Initialization Merge Code:

Transfer to Voice Mail Access Code:

Trunk Answer Any Station Access Code: 71

User Control Restrict Activation:

Voice Coverage Message Retrieval Access Code:

Voice Principal Message Retrieval Access Code: *80

Deactivation:

Deactivation:

Deactivation:

Remove:

Separation Code:

Deactivation:

3. In the **Trunk Answer Any Station Access Code** field, type the access code. In this example, the access code is **71**.
4. Press **Enter** to save your changes.

Setting up external alerting

Once you set the FAC, you must determine where the external alerting device is connected to the server that is running Communication Manager (this example uses port 01A0702).

To set up external alerting:

1. Type **change console-parameters**. Press **Enter**.

The system displays the **Console Parameters** screen ([Figure 274: Console Parameters screen](#)).

Figure 274: Console Parameters screen

change console-parameters		Page 1 of x
CONSOLE PARAMETERS		
Attendant Group Name: OPERATOR		
COS: 0		COR: 0
Calls in Queue Warning: 5		Attendant Lockout? y
Ext Alert Port (TAAS): 01A0702		
CAS: none		
IAS (Branch)? n		Night Service Act. Ext.:
IAS Att. Access Code:		IAS Tie Trunk Group No.:
Backup Alerting? n		Alternate FRL Station:
Attendant Vectoring VDN:		DID-LDN Only to LDN Night Ext? n

2. In the **EXT Alert Port (TAAS)** field, type the port address that is assigned to the external alerting device. In this example, the number is **01A0702**.
3. Press **Enter** to save your changes.

Setting up external alerting Night Service

To send Listed Directory Number (LDN) calls to the attendant during the day and to the desk of a security guard at night:

1. Type **change listed-directory-numbers**. Press **Enter**.

The system displays the **Listed Directory Numbers** screen ([Figure 275: Listed Directory Numbers screen](#) on page 1058).

Figure 275: Listed Directory Numbers screen

LISTED DIRECTORY NUMBERS		
Night Destination: 3000		
Ext	Name	TN
1: 2000	Attendant	1
2:		1
3:		1
4:		1
5:		1
6:		1
7:		1
8:		1
9:		1
10:		1

- In the **Night Destination** field, verify that this field is blank.
- Press **Enter** to save your changes.
- Type **change console-parameters**. Press **Enter**.

The system displays the **Console Parameters** screen ([Figure 276: Console Parameters screen](#) on page 1058).

Figure 276: Console Parameters screen

CONSOLE PARAMETERS		
Attendant Group Name: Operator		
COS: 0	COR: 0	
Calls in Queue Warning: 5	Attendant Lockout? y	
Ext Alert Port (TAAS): 01A0702		
CAS: none		
SAC Notification? n	Night Service Act. Ext.:	
IAS (Branch)? n	IAS Tie Trunk Group No.:	
IAS Att. Access Code:	Alternate FRL Station:	
Backup Alerting? n	DID-LDN Only to LDN Night Ext? n	
Attendant Vectoring VDN:		

- In the **EXT Alert Port (TAAS)** field, type the port address that is assigned to the external alerting device. In this example, the number is **01A0702**.
- Press **Enter** to save your changes.

The system is in Night Service.

- Any calls to extension 2000 now go to extension 3000, the desk of the security guard.
- Any "0" seeking calls go to extension 3000 (the guard's desk).

To send LDN calls to the attendant during the day and to the TAAS bell at night:

1. Type **change console-parameters**. Press **Enter**.

The system displays the **Console Parameters** screen ([Figure 277: Console Parameters screen](#) on page 1059).

Figure 277: Console Parameters screen

CONSOLE PARAMETERS	
Attendant Group Name: Operator	
COS: 0	COR: 0
Calls in Queue Warning: 5	Attendant Lockout? y
Ext Alert Port (TAAS): 01A0702	
CAS: none	
SAC Notification? n	Night Service Act. Ext.:
IAS (Branch)? n	IAS Tie Trunk Group No.:
IAS Att. Access Code:	Alternate FRL Station:
Backup Alerting? n	DID-LDN Only to LDN Night Ext? y
Attendant Vectoring VDN:	

2. In the **DID-LDN Only to Night Ext.** field, type **y**.

This allows only LDN calls to go to the Listed Directory Night Service Number Extension.

3. In the **Ext Alert Port (TAAS)** field, type the port address that is assigned to the external alerting device. In this example, the number is **01A070**.
4. Press **Enter** to save your changes.

The system is in night service. Any Dialed Number Identification Service (DNIS) extension 2000 and any 0-seeking calls now go to the TAAS bell.

Setting up Night Service for trunk groups

To set up Night Service for trunk groups:

1. Type **change trunk-group *n***, where ***n*** is the number of a trunk group. Press **Enter**.

In this example, you direct night calls for trunk group **2** to extension **1245**. The system displays the **Trunk Group** screen ([Figure 278: Trunk Group screen](#) on page 1060).

Figure 278: Trunk Group screen

TRUNK GROUP		
Group Number: 2	Group Type: co	CDR Reports: y
Group Name: outside calls	COR: 1_ TN: 1__	TAC: ____
Direction: two-way_	Outgoing Display? n	
Dial Access? n	Busy Threshold: 99	Night Service: 1245
Queue Length: 0	Country: 1_	Incoming Destination: ____
Comm Type: voice	Auth Code? n	Digit Absorption List: _
Prefix-1? y	Trunk Flash? n	Toll Restricted? y
BCC: _		
TRUNK PARAMETERS		
Trunk Type: loop-start		
Outgoing Dial Type: tone		Cut-Through? n
Trunk Termination: rc		Disconnect Timing(msec): 500_
Auto Guard? n	Call Still Held? n	Sig Bit Inversion: none
Analog Loss Group: ____		Digital Loss Group: ____
Bit Rate: 1200	Trunk Gain: high	
Disconnect Supervision - In? y	Synchronization: ____	Duplex: ____
Out? n		
Answer Supervision Timeout: 10		Receive Answer Supervision? n

2. In the **Night Service** field, type the extension number that you want the calls to go to. In this example, the extension number is **1245**.

The destination can be a station extension, a recorded announcement extension, a vector directory number (VDN), a hunt group extension, a terminating extension group (TEG), or **attd** if you want to direct the call to the attendant.

3. Press **Enter** to save your changes.

Setting up Night Service for hunt groups

To set up Night Service for a hunt group:

1. Type **change hunt -group n**, where **n** is the number of a hunt group. Press **Enter**.

The system displays the **Hunt Group** screen ([Figure 279: Hunt Group screen](#) on page 1061).

Figure 279: Hunt Group screen

HUNT GROUP		
Group Number: 3		ACD? n
Group Name: Accounting		Queue? y
Group Extension: 2011		Vector? n
Group Type: ucd-mia		Coverage Path: 1
TN: 1	Night Service Destination: 1234	
COR: 1	MM Early Answer? n	
Security Code: ____		
ISDN Caller Disp: ____		
Queue Length: 4		
Calls Warning Threshold: ____	Port: x	Extension: ____
Time Warning Threshold: ____	Port: x	Extension: ____

2. In the **Night Service Destination** field, type the extension number. In this example, the extension number is **1234**.

The destination can be an extension, a recorded announcement extension, a VDN, a hunt group extension, **attd** if you want to direct calls to the attendant.

Calls to hunt group 3 follow the coverage path that is assigned to extension 1234.

3. Press **Enter** to save your changes.

Reports for Night Service

The following reports provide information about the Night Service feature:

- None

Considerations for Night Service

This section provides information about how the Night Service feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Night Service under all conditions. The following considerations apply to Night Service:

Considerations for Hunt Group Night Service

- Both Hunt Group Night Service and Trunk Group Night Service can be active at the same time. An incoming trunk call is redirected to the trunk group's designated NSE. If this NSE is a hunt group or split that is in Hunt Group Night Service mode, the call is redirected to the Hunt Group NSE.
- Calls in progress (such as talking, on hold, or waiting in queue) on the hunt group or split are not affected when the hunt group or split is put in Hunt Group Night Service mode.
- When a hunt-group queue becomes empty, all idle members are placed in a busy condition.
- If Night Service is activated for a hunt group or split and a power failure occurs, the hunt group or split automatically returns to the Night Service mode.

Considerations for Night Console Service

- The night console must be identical to and have the same features as the primary console. A daytime console can double as the night console.
- Night Console Service calls to the attendant group are still handled by an attendant, even though the primary and daytime attendant consoles are out of service.
- Only one night console is allowed in the system. The night console can be activated only when the primary and daytime consoles have been deactivated.
- If Night Console Service is active and a power failure occurs, the system automatically returns to Night Console Service mode when it is powered up.

Considerations for Night Station Service

- When Night Station Service is active but you have not established Night Station extensions, a user can activate TAAS.
- You can assign a **Night-Serv** button to either an attendant extension or a phone extension. An individual trunk group or hunt group can be put into night service by either an attendant extension or a phone extension with the necessary button. When a user presses this button to activate Night Station Service, all calls to that particular trunk group or hunt group are routed to the Night Service extension assigned to that group.
- If a trunk without disconnect supervision goes to Night Service, the system drops the trunk after a period of time to avoid locking up the trunk. The call is not routed to the DID-LDN night extension.

Considerations for TAAS

- If Night Service is active and a power failure occurs, the system, when brought back up, automatically returns to Night Service mode.

Considerations for Trunk Group Night Service

- All incoming calls on Night Service trunk groups go to the trunk group's NSE unless the trunk group member has its own Trunk Group Member Night Destination, in which case the calls are redirected to that destination instead of the trunk group's NSE.
- Calls already in progress on a trunk group (such as talking, on hold, or waiting in queue), are not affected when the individual Trunk Group Night Service or System Night Service is activated.
- Trunk Group Night Service and System Night Service work independently of one another.
 - When a user activates System Night Service, any trunks that are controlled by individual Trunk Group Night Service buttons remain in day service. Trunk groups that are not currently assigned to Trunk Group Night Service are assigned to System Night Service.
 - Trunks with individual Trunk Group Night Service can be removed from Night Service even though the rest of the system remains in Night Service.
 - When a user deactivates System Night Service, any trunks that have individual Trunk Group Night Service still active remain in night service.
 - Trunks with individual Trunk Group Night Service can be placed into Night Service even though the rest of the system remains in day service.
- If a trunk is added to a trunk group while that trunk group is in Trunk Group Night Service, the trunk is brought up in night service.
- Individual Trunk Group Night Service does not apply to DID trunk groups.
- If Night Service is activated for a trunk group, and a power failure occurs, the trunk group automatically returns to the Night Service mode.
- If for some reason, a phone with a trunk-ns button remains out of service after a system reboot and later comes back in service, the **trunk-ns** lamp shows the trunk status within 10 seconds of coming back in service. For example, a telephone with a trunk-ns button might be unplugged when the system is rebooted. If the phone is plugged back in later, the trunk status is shown on the trunk-ns button within 10 seconds.

Interactions for Night Service

This section provides information about how the Night Service feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Night Service in any feature configuration.

Interactions for Hunt Group Night Service

- Automatic Call Distribution (ACD)

When Hunt Group Night Service is active for a split and the night-service destination is a hunt group, the caller hears the first forced announcement for the original split. The system then redirects the call to the Night Service destination hunt group. When an agent in the Night Service hunt group becomes available, the call goes to that agent. If all agents in the hunt group are busy, the caller hears the following: forced or delayed first announcement, ringback, music-on-hold or silence, and a second announcement.

- Call Coverage

Coverage takes precedence over Night Service. When Hunt Group Night Service is active, the NSE's normal coverage criteria and path apply. If the coverage path destination is AUDIX, AUDIX answers with the mail of the original hunt group. If the NSE is a hunt group or split of any type, the hunt group or split's call coverage criteria and coverage path apply. The coverage criteria and path can be different from that assigned to the phones that are members of that hunt group or split.

If a coverage point is a hunt group or split in Night Service, the system considers the point to be unavailable and does not forward the call to the coverage point's NSE.

- Call Forwarding All Calls

If a hunt group or split is in Hunt Group Night Service mode and the hunt group or split's NSE has Call Forwarding - All Calls active, the system forwards night-service calls terminating to that NSE to its designated call-forward extension.

If the forwarded-to destination is a hunt group or split in Night Service mode, the system terminates the call at the forwarding extension.

Interactions for Night Console Service

- Trunk Group Night Service

Activation of Night Console Service for the attendant consoles also puts trunk groups into night service, except those trunk groups for which you administered a Trunk Group Night Service button.

Interactions for Night Station Service

- Call Coverage

Calls routed to the night extension using Night Station Service follow the coverage path of the night extension under all coverage criteria except Send All Calls.

If a night extension has a coverage path in which Cover All Calls is administered, all attendant-seeking calls redirect to coverage. Changes to the protocol for handling DID-LDN calls (that is, forwarding attendant-seeking calls on or off premise from the night extension) do not work.

- Call Forwarding All Calls

Calls redirected to the attendant via Call Forwarding All Calls do not route to the DID-LDN extension.

- Inward Restriction

Inward-restricted phones can be administered for Night Station Service. Night Service features override Inward Restriction.

- Night Console Service

Do not provide Night Console Service with this Night Station Service.

- Remote Access

A Remote Access extension can be specified as the Night Station extension on an incoming, non-DID, trunk group.

- Tenant Partitioning

Each tenant may have a designated night-service station. The system directs calls to an attendant group in night service to the night-service station of the appropriate tenant (when a night attendant is not available). When someone places an attendant group into night service, all trunk groups and hunt groups that belong to tenants served by that attendant group go into night service. In this case, the system routes incoming calls to the night-service destination of the appropriate tenant.

Each tenant can have its own LDN night destination, TAAS port, or night attendant.

- Timed Reminder

Timed Reminder calls returning to a console that has been placed in Night Service and has an assigned DID-LDN night extension are not redirected to the DID-LDN night extension. Rather, they are dropped.

- Trunk Answer from Any Station

TAAS and Night Station Service can both be assigned within the same system, but cannot be assigned to the same trunk group.

Interactions for TAAS

- **Call Coverage**
If Night Station Service is active, calls that are redirected to the attendant via Call Coverage can be answered by way of TAAS.
- **Call Forwarding All Calls**
If Night Station Service is active, calls that are redirected to the attendant via Call Forwarding All Calls can be answered by way of TAAS.
- **Inward Restriction**
Inward-restricted phones can activate TAAS for incoming trunk calls. Night Service features override Inward Restriction.
- **Night Console Service**
Do not provide a Night Console Service with TAAS.
- **Night Station Service**
TAAS and Night Station Service can both be assigned within the same system, but cannot be assigned to the same trunk group. Activating Night Station Service also activates Night Service - Trunk Group for any trunk group without an individual trunk-group Night Service button.
- **Tenant Partitioning**
Each tenant can have its own LDN night destination, TAAS port, or night attendant.

Interactions for Trunk Group Night Service

- **Call Forwarding All Calls**
If the individual Trunk Group Night Service mode and the trunk group's NSE have Call Forwarding All Calls activated, the night service calls that terminate to that NSE are forwarded to the designated extension.
- **Forced First Announcements**
An interaction occurs with System Night Service and Forced First Announcement. For example, if hunt group A has a forced first announcement, assign the incoming CO trunk to terminate at hunt group A. Assign the incoming trunk's night-service destination to be another hunt group (hunt group B). Assign a Night Service button to the attendant.

With night service active on the attendant, the incoming CO call routes to the night-service destination hunt group B and does not play the Forced First Announcement of the incoming destination's hunt group A.

- **Listed Directory Number**

In System Night Service mode, all incoming LDN calls (except those using DID trunks) which have activated night service are redirected to their corresponding trunk group's NSE. Incoming LDN calls using DID trunks are directed to the Night Console Service, Night Station Service, or Trunk Answer From Any Station, respectively, whichever applies first. Non-LDN DID trunk calls terminate at the dialed extension.

Off-Premises Station

Use the Off-Premises Station feature to connect a telephone that is in a different building than the server that runs Avaya Communication Manager to your system.

Detailed description of Off-Premises Station

This section provides a detailed description of the Off-Premises Station feature.

With the Off-Premises Station feature, you can connect a telephone that is located in a different building than the server that runs Avaya Communication Manager to your system.

If you use central office (CO) trunk circuits, the telephone must be:

- Analog
- FCC registered, if the telephone is in the United States
- Registered by the appropriate governmental agency, if the telephone is located outside the United States

You can use digital communications protocol (DCP) sets as off-premises telephones if you add IP Softphone or IP Office. You can set up IP stations as off-premise stations if you use point-to-point protocol (PPP) connections. DS1 trunk service provides a digital interface for off-premises stations.

A trunk-data module connects off-premises private-line trunk facilities and Avaya Communication Manager. The trunk-data module converts between the RS-232C and the DCP, and can connect to Direct Distance Dialing (DDD) modems as the DCP member of a modem pool.

Off-Premises Station requires cross-connecting capabilities, and one port on an analog line or a DS1 tie trunk circuit pack for each interface that you want to provide. Not all analog lines can support an off-premises station. For more information, see the user guide for the appropriate telephone.

The maximum loop distance for off-premises stations is 20,000 feet (6093.34 meters) if you do not use repeaters. For information about the cable distance, see the user guide for the appropriate telephone.

Note that the system does not support the use of a message waiting indicator lamp (MWI) on an off-premises station.

Administering Off-Premises Station

The following steps are part of the administration process for the Off-Premises Station feature:

- [Activating Off-Premises Station for a user](#)

This section describes:

- Any prerequisites for administering the Off-Premises Station feature
- The screens that you use to administer the Off-Premises Station feature
- Complete administration procedures for the Off-Premises Station feature

Prerequisites for administering Off-Premises Station

You must complete the following actions before you can administer the Off-Premises Station feature:

- None

Screens for administering Off-Premises Station

Screen name	Purpose	Fields
Station (analog)	Activate an off-premises station for a user.	● Off Premise Station ● R Balance Network

Activating Off-Premises Station for a user

To activate Off-Premises Station for a user:

1. Type **change station *n***, where *n* is the extension of the user for whom you want to activate an off-premises station. Press **Enter**.

The system displays the **Station** screen for the extension that you requested ([Figure 280: Station screen](#) on page 1071).

Figure 280: Station screen

```

change station 105 Page 1 of 3

                                STATION

Extension: 106                  Lock Messages? n          BCC: 0
    Type: 2500                  Security Code:            TN: 1
    Port:                       Coverage Path 1:          COR: 1
    Name:                       Coverage Path 2:          COS: 1
                                Hunt-to Station:          Tests? y

STATION OPTIONS
    Loss Group: 1                Message Waiting Indicator: none
    Off Premises Station? n

                                Remote Office Phone? n

```

2. In the **Off-Premises Station** field, perform the following actions:
 - If the telephone associated with this **Station** screen is not located in the same building as the server, type **y**.
If you type **y**, you must administer the **R Balance Network** field on the **Station** screen.
 - If the telephone associated with this **Station** screen is located in the same building as the server, type **n**.
3. In the **R Balance Network** field, perform one of the following actions.
 - Type **y** to select the R Balance Capacitor network. Type **y** in all other cases, except for the following cases:
 - Type **n**:
 - To select the standard resistor capacitor network
 - When the station port circuit is connected to the terminal equipment. Terminal equipment includes, for example, SLC carriers or impedance compensators. These are optioned for 600-ohm input impedance and the distance between the server and the equipment is less than 3,000 feet (914.4 meters).

You must complete the **R Balance Network** field if the **Off-Premises Station** field on the **Station** screen is set to **y**

Reports for Off-Premises Station

The following reports provide information about the Off-Premises Station feature:

- None

Considerations for Off-Premises Station

This section provides information about how the Off-Premises Station feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Off-Premises Station under all conditions. The following considerations apply to Off-Premises Station:

- None

Interactions for Off-Premises Station

This section provides information about how the Off-Premises Station feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Off-Premises Station in any feature configuration.

- Distinctive Ringing

The Distinctive Ringing feature might function improperly at an off-premises telephone because of the distance of the telephone from the server. However, the Distinctive Ringing feature can be disabled when you set the **Off-Premises Station** field on the **Station** screen to **y**. If the Distinctive Ringing feature is not used with an off-premises station, the telephone receives one-burst ringing for all calls.

Personal Station Access

Use the Personal Station Access (PSA) feature to allow a user to associate the preferences and permissions of the user telephone with another telephone of the same type.

Detailed description of Personal Station Access

This section provides a detailed description of the Personal Station Access (PSA) feature.

With the PSA feature, users can associate the preferences and the permissions of the user telephone with another telephone of the same type.

Telecommuting

With PSA, different users can use the same group of telephones at different times. For example, several telecommuting users can use the same office on different days of the week. The users use PSA to associate with the office telephone. When a user associates the telephone, the telephone is assigned to that user. For example, the user can originate and receive calls.

At home, a telecommuting user can also use PSA to install a digital communications protocol (DCP) telephone and a DEFINITY Extender. The user can then call into the system, and use PSA to associate the home telephone with the extension that is assigned to the user at the office. When someone calls the user extension, the call rings at the home of the user.

When a user no longer wants to use PSA, the user disassociates from the telephone.

PSA requires a user to enter a security code, from either an on-site or an off-site telephone.

Invalid attempts to use PSA

Invalid attempts to use PSA generate referral calls. If the Security Violation Notification (SVN) feature is enabled, the SVN software logs the invalid attempt. If a user hangs up, or presses the release button, the system does not log the action as an invalid attempt.

Preferences and permissions

The preferences and the permissions that are assigned to the user extension, and that are retained with PSA include:

- The definition of terminal buttons
- Abbreviated dial lists
- Class of Service (COS) permissions
- Class of Restriction (COR) permissions

Extensions that do not have a COS, such as expert agent selection (EAS) agents or hunt groups, cannot use PSA.

Button mapping

PSA functions only on analog, hybrid, and digital communications protocol (DCP) telephones. Many types of DCP telephones exist, with different types and numbers of buttons. If you attempt to associate a DCP telephone or a hybrid telephone with a telephone that has incompatible buttons, button mapping is unpredictable. Telephones and ports on different media servers or switches cannot be associated through PSA. Telephones on different switches, or nodes, within Distributed Communications Systems (DCS) cannot be associated through PSA. The system does not limit the number of stations that can use PSA. However, heavy use of the associate and dissociate functions can have a temporary impact on system performance.

Unanswered calls

When a call goes to coverage from a PSA-disassociated extension, the software sends a message to the coverage point to indicate that the call was unanswered. If the coverage point is a display telephone, the system displays the letter *a* which means "don't answer." If the coverage point is a voice messaging system, the voice messaging system receives an indication from the software that the call was unanswered, and the voice messaging system processes the call as unanswered.

Dissociated telephones

When a user requests to associate a telephone with PSA, any other telephone that uses the extension is automatically dissociated. Users can place emergency calls from a dissociated telephone, if a COR is assigned to dissociated telephones on the **Feature-Related System Parameters** screen.

PSA allows a dissociate request from a bridged appearance. However, the system dissociates the telephone from which the user issues the PSA command, even if the user is on a bridged appearance of another telephone.

The dissociate function within PSA allows a user to restrict the features that are available at a telephone. When a user uses PSA to dissociate a telephone, the telephone can only be used to:

- Call an attendant
- Accept a terminal translation initialization (TTI) or a PSA request

To enable users to make other types of calls from dissociated sets, you must establish a COR for the telephones.

Security



SECURITY ALERT:

Once an extension is associated with a telephone, users of that telephone have the capabilities that are associated with the extension. You must issue a dissociate command from the telephone to ensure that unauthorized users cannot use the telephone. Dissociate the telephones if you use PSA and DCP extenders to permit remote DCP access.

Administering Personal Station Access

The following steps are part of the administration process for the Personal Station Access feature:

- Viewing the user extensions that have the Call Forwarding capabilities active

This section describes:

- Any prerequisites for administering the Personal Station Access feature
- The screens that you use to administer the Personal Station Access feature
- Complete administration for the Personal Station Access feature

Prerequisites for administering Personal Station Access

You must complete the following actions before you can administer the Personal Station Access feature:

- Enable the Personal Station Access feature on your system.
- Create a class of service (COS) that enables your users to use the capabilities associated with the Personal Station Access feature.
- Ensure that feature access codes (FACs) for Call Forwarding and Call Forward Busy/Don't Answer are available on your system, if you want users to use an FAC for either of the capabilities.

To create a COS that enables your users to use the Personal Station Access feature:

You can create many classes of service. These classes of service enable many features and capabilities, including those for the Personal Station Access feature. You can create a COS that enables none, some, or all of the capabilities associated with the Personal Station Access feature. However, you can assign only one COS to each user. For more information on COS, see the *Administrator's Guide for Avaya Communication Manager*.

To ensure that an FAC for PSA is available on your system:

1. Type **change feature-access-codes**. Press **Enter**.
The system displays the **Feature Access Codes (FAC)** screen.
2. Click **Next** until you see the **Personal Station Access (PSA) Associate Code** field ([Figure 281: Feature Access Code \(FAC\) screen](#) on page 1077).

Figure 281: Feature Access Code (FAC) screen

change feature-access-codes	Page 2 of 7
FEATURE ACCESS CODE (FAC)	
Emergency Access to Attendant Access Code:	
Enhanced EC500 Activation:	Deactivation:
Extended Call Fwd Activate Busy D/A_ All:	Deactivation:
Extended Group Call Pickup Access Code:	
Facility Test Calls Access Code:	
Flash Access Code:	
Group Control Restrict Activation:	Deactivation:
Hunt Group Busy Activation:	Deactivation:
ISDN Access Code:	
Last Number Dialed Access Code:	
Leave Word Calling Message Retrieval Lock:	
Leave Word Calling Message Retrieval Unlock:	
Leave Word Calling Send A Message: #66	
Leave Word Calling Cancel A Message: *66	
Malicious Call Trace Activation:	Deactivation:
Meet-me Conference Access Code Change:	
PASTE (Display PBX data on Phone) Access Code:	
Personal Station Access (PSA) Associate Code:	Dissociate Code:
Per Call CPN Blocking Code Access Code:	
Per Call CPN Unblocking Code Access Code:	
Posted Messages:	

3. In the **Personal Station Access (PSA) Associate Code** field, type an FAC that allows a user to associate a telephone.
4. In the **Personal Station Access (PSA) Dissociate Code** field, type an FAC that allows a user to dissociate a telephone.

To type an FAC in the **Personal Station Access (PSA) Dissociate Code** field, the **Personal Station Access (PSA)** field in the **System Parameters Customer-Options** screen must be set to **y**.

5. Press **Enter** to save your changes.

Screens for administering Personal Station Access

Screen name	Purpose	Fields
Class of Service	Assign PSA to a Class of Service (COS).	Personal Station Access
Feature Access Code (FAC)	Define a feature access code (FAC) to associate and dissociate telephones.	Personal Station Access (PSA) Associate Code and Dissociate Code
Feature-Related System Parameters	Specify the Class of Restriction (COR) to apply to calls made from dissociated telephones.	COR for PSA Dissociated Sets
	Specify the calling party number or automatic number identification (ANI) for calls that are made from dissociated telephones.	CPN, ANI for PSA Dissociated Sets
	Specify that the system record PSA transactions in the history log.	Record CTA/PSA/TTI Transactions in History Log?
Station	Define the station security code (SSC) for the extension.	Security Code

End-user procedures for Personal Station Access

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Personal Station Access (PSA):

- Using the PSA associate command
- Interrupting the PSA command sequence
- Using the PSA dissociate command

Using the PSA associate command

To use the PSA associate command, perform the actions shown in [Table 58: PSA associate commands](#) on page 1079.

Table 58: PSA associate commands

Step	User action	System response	Result
1	Dial the feature access code (FAC) for PSA associate.	Dial tone	The request is successful.
		Intercept tone	• The request is unsuccessful, because the request was not made at an analog, a hybrid, or a DCP telephone. • The request is unsuccessful because the telephone is associated with or assigned to a station that does not have PSA permission in its COS.
2	Dial an extension, and then press the pound key (#).	No response	If the user is at a telephone with a display, this pound sign (#) is the last character that the system displays until the PSA sequence is complete.
1 of 2			

Table 58: PSA associate commands (continued)

Step	User action	System response	Result
3	Dial the Station Security Code (SSC) for the user extension, and then press the pound key (#).	Confirmation tone	The command sequence is successfully complete. The system queues the request.
		Intercept tone immediately after the confirmation tone.	The request is unsuccessful, because: ● Terminal translation initialization (TTI) is not enabled for voice. ● Either the dialed extension, or the originating extension, has an add, a change, or a remove action in progress. ● You dialed more than 15 digits before you pressed the pound key (#). Issue the PSA request again.
		Intercept tone	The request is unsuccessful because: ● The extension and the SSC are incompatible. - The extension is invalid. - The SSC is invalid for the extension. - Both the extension and the SCC are invalid. The Security Violation Notification (SVN) feature logs this unsuccessful use of PSA as an invalid attempt. ● The Class of Service (COS) of the extension does not allow PSA. ● An extension in one tenant partition cannot be associated with a telephone in another tenant partition.
		Reorder tone	The request is unsuccessful because: ● The extension that was entered is in use. ● An agent is logged in at the dialed extension. ● The system load is too heavy to allow the request to occur. The user can try again later.
2 of 2			

Interrupting the PSA associate command sequence

If you enter incorrect information after you enter the FAC, you can interrupt the command sequence and begin again. To interrupt the command sequence:

1. Press the star key (*) at any time before you press the pound key (#) for the second time.

The system generates dial tone

2. Dial the extension, but do not dial the FAC again.

SVN does not record the interrupted command sequence as an invalid attempt.

Using the PSA dissociate command

To use the PSA dissociate command,:

- Enter the FAC for PSA dissociate.

The system responds with:

- Confirmation tone if the:
 - System successfully dissociates the telephone
 - Telephone was not previously associated
- Intercept tone, if the COS of the telephone extension does not allow the use of PSA.

Reports for Personal Station Access

The following reports provide information about the Personal Station Access feature:

- None

Considerations for Personal Station Access

This section provides information about how the Personal Station Access (PSA) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Personal Station Access under all conditions. The following considerations apply to Personal Station Access:

- None

Interactions for Personal Station Access

This section provides information about how the Personal Station Access (PSA) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Personal Station Access in any feature configuration.

- Adjunct/Switch Application Interface (ASAI)

You cannot use PSA on an ASAI link, because ASAI uses a Basic Rate Interface (BRI) port. Do not assign a Class of Service (COS) that allows PSA to an ASAI link.

- Bridged Appearance

When you issue a PSA dissociate request for the principal telephone, the bridged appearances of the telephone remain active. The bridged appearances remain active if the telephones on which the bridged appearances appear have not been dissociated.

When a call is made to the principal extension, any of the bridged appearances can alert. If the call cannot alert at a bridged appearance of the principal extension, the system routes the call to the coverage path of the principal extension.

PSA allows a dissociate request from a bridged appearance. However, the system dissociates the telephone at which the user issues the PSA command, even if the user is on a bridged appearance of another telephone.

- Call Management

A PSA dissociate request automatically logs out an Automatic Call Distribution (ACD) agent.

- Coverage

PSA does not change coverage path operations. If a station is dissociated, the system routes calls to coverage, unless the calls are forwarded.

- Property Management System (PMS)

Do not assign a COS that allows PSA to an extension that is assigned to a room, instead of to a user.

- Save Translations

PSA commands cannot be run successfully during a save translations operation. When a reset 3 or greater (reset 4, reset 5, and so on) occurs on the system, all associations revert to the state as of the last save translations operation.

- Security Violation Notification (SVN)

If SVN is active, SVN tracks and reports PSA security violations.

- **Tenant Partitioning**

If a telephone is already associated, a user who attempts a PSA associate request at that telephone must specify an extension that is in the same partition as the extension that is already associated with the telephone.

However, any user in any partition can issue a PSA dissociate request at the telephone, if the COS of the telephone extension allows PSA. After the user successfully dissociates the extension, the user can issue a PSA associate request for an extension in any tenant partition.

Personalized Ringing

Use the Personalized Ringing feature to hear one of eight ringing patterns for incoming calls. You assign the ringing pattern to each user on your system. The different ringing patterns help users who work in the same area to distinguish their calls from the calls of other users.

Detailed description of Personalized Ringing

This section provides a detailed description of the Personalized Ringing feature.

You can administer Personalized Ringing for each telephone. Either you, or the end user, can administer Personalized Ringing for some programmable telephones.

Ringling patterns

The eight administrable ringing patterns are different combinations of three tones. The eight tone combinations are (in Hertz):

- 750, 750, 750 (standard ringing)
- 1060, 1060, 1060
- 530, 530, 530
- 530, 1060, 1060
- 1060, 1060, 530
- 1060, 530, 530
- 1060, 530, 1060
- 530, 1060, 530

Power failures

The user-specified ringing pattern for some digital telephones is lost when the power fails. The system retains the user-specified ringing pattern for ISDN-BRI telephones when the power fails.

Administering Personalized Ringing

The following steps are part of the administration process for the Personalized Ringing feature:

- [Assigning Personalized Ringing to a user telephone](#)

This section describes:

- Any prerequisites for administering the Personalized Ringing feature
- The screens that you use to administer the Personalized Ringing feature
- Complete administration procedures for the Personalized Ringing feature

Prerequisites for administering Personalized Ringing

You must complete the following actions before you can administer the Personalized Ringing feature:

- None

Screens for administering Personalized Ringing

Screen name	Purpose	Fields
Station	Assign Personalized Ringing to a user telephone.	Personalized Ringing Pattern

Assigning Personalized Ringing to a user telephone

To assign Personalized Ringing to a user telephone:

1. Type **change station n**, where **n** is the user telephone to which you want to assign Personalized Ringing. Press **Enter**.

The system displays the **Station** screen ([Figure 282: Station screen](#) on page 1087).

Figure 282: Station screen

change station 1014		Page 1 of X
STATION		
Extension: 1014	Lock Messages? n	BCC: 0
Type:	Security Code:	TN: 1
Port:	Coverage Path 1:	COR: 1
Name:	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Personalized Ringing Pattern: 3	
Data Module? n	Message Lamp Ext: 1014	
Speakerphone: 2-way	Mute button enabled? y	
Display Language? English	Expansion Module?	
Model:		
Survivable GK Node Name:	Media Complex Ext:	
	IP Softphone? y	
	Remote Office Phone? y	

2. In the **Personalized Ringing Pattern** field, type one of the valid entries shown in [Table 59: Personalized ringing patterns](#) on page 1087.

Use the following key to the Usage column:

- L - 530 Hz
- M - 750 Hz
- H - 1060 Hz

For virtual stations, the **Personalized Ringing Pattern** field dictates the ringing pattern on the mapped-to physical telephone.

Table 59: Personalized ringing patterns

Valid entries	Usage
1	MMM (standard ringing)
2	HHH
3	LLL
4	LHH
5	HHL
6	HLL
1 of 2	

Table 59: Personalized ringing patterns (continued)

Valid entries	Usage
7	HLH
8	LHL
2 of 2	

3. Press **Enter** to save your changes.

Reports for Personalized Ringing

The following reports provide information about the Personalized Ringing feature:

- None

Considerations for Personalized Ringing

This section provides information about how the Personalized Ringing feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Personalized Ringing under all conditions. The following considerations apply to Personalized Ringing:

- None

Interactions for Personalized Ringing

This section provides information about how the Personalized Ringing feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Personalized Ringing in any feature configuration.

- Distinctive Ringing

With Distinctive Ringing, you can administer the relationship between the number of ring bursts and the call type. The Personal Ringing Pattern that you select is the same ringing pattern that is used in the Distinctive Ringing cycles.

Posted Messages

Use the Posted Messages feature to provide callers with a displayed message on the telephone that states why the user is unavailable to take a call.

Detailed description of Posted Messages

This section provides a detailed description of the Posted Messages feature.

The Posted Messages feature is available with Avaya Communication Manager release 1.3 (V11) or later.

A user activates the Posted Messages feature to post a message to his or her telephone. When a person calls that user, the telephone display of the caller shows the posted message for 4 seconds. During those 4 seconds, no incoming alert can appear on the telephone of the caller. After 4 seconds, the telephone display of the caller reverts back to the normal called number and called name.

To use the Posted Messages feature, the telephone of the caller must be able to display messages. Only internal callers can post or view a posted message. Callers from outside your system cannot view a posted message.

Language options

Five languages are available for the Posted Messages feature:

- English
- Italian
- French
- Spanish
- A user-defined language

The 15 fixed messages and the feature button labels are available in English, with predefined Italian, French, and Spanish translations. The administrator cannot change the text of the English, the Italian, the French, or the Spanish fixed messages or feature button labels.

The administrator can translate the fixed messages and feature button labels into a user-defined language. This translation can be any other language that the customer chooses, such as German. The administrator can use only one user-defined language throughout the system.

Posted Messages

You can administer the 15 custom messages in English, Italian, French, Spanish, and the user-defined language. The number of available messages equals the number of fixed messages (15), plus the number of custom messages that you administer for each language.

Language translation is automatically achieved between telephones and between systems. For example, telephone A uses English and telephone B uses Italian. User A posts the message "In Meeting." User B calls user A and sees the message "In Riunione" in Italian. If the custom messages are properly administered, the same is true for custom messages.

Messages

User can choose from up to 30 different messages. Of these 30 messages, 15 are *fixed* messages, and 15 are *custom* messages. Each message has a corresponding message number.

While a user selects a Posted Message, his or her telephone is said to be in *selection display mode*. Once the user posts a message, his or her telephone is said to be in *message posting mode*. The message appears on the telephone display of the user. The display of the selected message on the telephone is a visual reminder to the user. The display also indicates the availability of the user to people who might walk into the office.

Telephones that are in message posting mode use a special dial tone when the telephone goes off hook. This special dial tone provides audio feedback to the user. On telephones without a display, this special dial tone is the only indication that the telephone is in message posting mode.

The telephone of the user displays the selected message until:

- The user or someone else deactivates the posted message on the telephone of the user.
- The system resets. If the system resets, the posted message no longer appears on the telephone of the user.

Fixed messages

The numbers for the fixed messages are predefined. You cannot change the numbers or the messages. The following table shows the 15 fixed messages.

Number	Message
01	In Meeting
02	Out To Lunch
03	Away From Desk
04	Do Not Disturb
05	Out All Day

Number	Message
06	On Vacation
07	Gone For The Day
08	Out Sick
09	On Business Trip
10	With Client
11	Working From Home
12	On Leave
13	Back In 5 Minutes
14	Back In 30 Minutes
15	Back In 1 Hour

Note that the Do Not Disturb posted message is independent of the Do Not Disturb feature. Activating or deactivating the Do Not Disturb posted message has no impact on the Do Not Disturb feature.

Custom messages

If you choose to add custom messages, you must start with number 16 and continue in numeric order. Custom messages are specific to each local system. Custom messages in any language cannot exceed 28 characters.

QSIG support

If your system supports QSIG functionality, you can use QSIG to send fixed messages and custom messages to users on other systems. QSIG is a global signaling and control standard for use in private corporate ISDN networks.

The 15 fixed messages are automatically routed to other systems through QSIG. If you want to send custom messages to users on other systems through QSIG, you must:

- Activate QSIG support
- Create the same custom messages on all systems.

If you do not administer custom messages on the system of the caller, a message does not appear on the telephone display of the caller.

Posted Messages

Custom messages must be consistent for all systems and for all translations. The reason is that Posted Messages sends the message number, not the message, to the caller. The system of the caller converts the Posted Messages number into a message.

For example, custom message number 16 on system A is "On Conference Call" and custom message number 16 on system B is "Talking to Boss." If a user on system A posts custom message #16, "On Conference Call" appears on the telephone display of the user. If someone on system B calls the user on system A, Posted Messages sends message number 16 to the caller. The system of the caller converts number 16 into a message. "Talking to Boss" appears on the telephone display of the caller.

Inconsistent administration on custom messages can display unintended results. The system might not display the intended message.

Administering Posted Messages

The following steps are part of the administration process for the Posted Messages feature:

- [Defining a Feature Access Code](#)
- [Requiring a security code](#)
- [Activating QSIG to send custom messages](#)
- [Translating Posted Messages](#)
- [Translating telephone feature buttons and labels](#)

This section describes:

- Any prerequisites for administering the Posted Messages feature
- The screens that you use to administer the Posted Messages feature
- Complete administration procedures for the Posted Messages feature

Prerequisites for administering Posted Messages

You must complete the following actions before you can administer the Posted Messages feature:

- On the **Optional Features** screen, ensure that the **G3 Version** field is set to **V11** or later. If this field is not set to **V11** or later, your system is not enabled for the Posted Messages feature. Contact your Avaya representative before you continue with this feature.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

- Click **Next** until you see the **ISDN-BRI Trunks** and the **ISDN-PRI** fields. Ensure that at least one of these fields are set to **y**, depending on what type of trunk you use. These fields indicate that your system can support QSIG to send and receive Posted Messages. Your license file sets the values in the **ISDN-BRI Trunks** and **ISDN-PRI** fields. You cannot manually change these values. If both fields are set to **n**, contact your Avaya representative.
- Click **Next** until you see the **Posted Messages** field. Ensure that the **Posted Messages** field is set to **y**. Your license file sets the value in the **Posted Messages** field. You cannot manually change this value. If the **Posted Messages** field on the **Optional Features** screen is set to **n**, contact your Avaya representative.
- Click **Next** until you see the **QSIG Optional Features** screen. Ensure that the following fields are set to **y**:
 - **Basic Call Setup**
 - **Basic Supplementary Services**
 - **Value-Added (VALU)**

These fields indicate whether your system can support QSIG to send and receive Posted Messages. Your license file sets the values in these fields. You cannot manually change these values. If any of these fields are set to **n**, contact your Avaya representative before you continue with this procedure.

Screens for administering Posted Messages

Screen name	Purpose	Fields
Optional Features	Ensure that you have Communication Manager version 1.3 (V11) or later.	G3 Version
	Ensure that your system supports QSIG functionality.	● ISDN-BRI Trunks ● ISDN-PRI
	Ensure that the Posted Messages feature is on.	Posted Messages
QSIG Optional Features	Ensure that your system supports QSIG functionality.	● Basic Call Setup ● Basic Supplementary Services ● Value-Added (VALU)
Feature Access Code (FAC)	Set up a FAC for users to activate and deactivate the Posted Messages feature.	● Posted Messages Activation ● Deactivation

Posted Messages

Screen name	Purpose	Fields
Feature-Related System Parameters	Activate QSIG to send custom messages to people on other systems.	Send Custom Messages Through QSIG
	Indicate if users who use a FAC must enter a security code. To activate or deactivate Posted Messages.	Require Security Code
Station	Set up a security code for the telephone of a user.	Security Code
System Posted Messages	Review the 15 fixed messages and, if needed, translate the messages to a user-defined language.	All
Custom Posted Messages	Create or edit up to 15 custom messages in English, Italian, French, Spanish, or a user-defined language.	All
Language Translations	If needed, change the translation of the Posted Messages feature display to a user-defined language.	Posted Messages
	If needed, change the translation of the Posted Messages softkey label to a user-defined language.	PoMsg
	If needed, change the translation of the Posted Messages button label on the 2420 telephone or the 4620 telephone to a user-defined language.	Posted MSGs

Defining a Feature Access Code

To define the two Feature Access Codes (FACs) to activate and deactivate the Posted Messages feature:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen.

2. Click **Next** until you see the **Posted Messages Activation** field ([Figure 283: Feature Access Code \(FAC\) screen](#)).

Figure 283: Feature Access Code (FAC) screen

change feature-access-codes		Page 3 of 8
FEATURE ACCESS CODE (FAC)		
PASTE (Display PBX data on Phone) Access Code:		
Personal Station Access (PSA) Associate Code:	Dissociate Code:	
Per Call CPN Blocking Code Access Code:		
Per Call CPN Unblocking Code Access Code:		
Posted Messages Activation: *29	Deactivation: #29	
Priority Calling Access Code:		
Program Access Code:		
Refresh Terminal Parameters Access Code:		
Remote Send All Calls Activation:	Deactivation:	
Self Station Display Activation:		
Send All Calls Activation:	Deactivation:	
Station Firmware Download Access Code:		
Station Lock Activation:	Deactivation:	
Station Security Code Change Access Code:		
Station User Admin of FBI Assign:	Remove:	
Station User Button Ring Control Access Code:		
Terminal Dial-Up Test Access Code:		

3. In the **Posted Messages Activation** field, type a FAC to activate Posted Messages.
4. In the **Deactivation** field, type a FAC to deactivate Posted Messages.
5. Press **Enter** to save your changes.

Requiring a security code

An administrator can require a security code when users use a FAC to activate or deactivate Posted Messages. The requirement for the security code applies to all users. This procedure is optional.

To require users to enter a security code when the users use a FAC to activate or deactivate Posted Messages, complete the following procedures:

- [Setting up a security code for the telephone of a user](#)
- [Activating the Posted Messages security code](#)

Setting up a security code for the telephone of a user

To set up a security code for the telephone of a user:

1. Type **change station *n***, where *n* is the telephone extension of the user. Press **Enter**.

The system displays the **Station** screen ([Figure 284: Station screen](#) on page 1096).

Figure 284: Station screen

change station 1234567

Page 1 of 3

STATION

Extension: 1234567

Type: 4606

Port: S00014

Name: MG IP phone 4606

Lock Messages? n

Security Code: 86562563

Coverage Path 1:

Coverage Path 2:

Hunt-to Station:

BCC: 0

TN: 1

COR: 1

COS: 1

STATION OPTIONS

Loss Group: 19

Speakerphone: 2-way

Display Language: english

Personalized Ringing Pattern: 1

Message Lamp Ext: 1234567

Mute Button Enabled: y

2. In the **Security Code** field, type a security code for this telephone.

The security code can be up to eight digits.

3. Press **Enter** to save your changes.
4. Be sure to share this security code with the user.

Activating the Posted Messages security code

To activate the Posted Messages security code:

1. Type **change system-parameters features**. Press **Enter**.

The system displays the **Feature-Related System Parameters** screen.

2. Click **Next** until you see the **Posted Message** area ([Figure 285: Feature-Related System Parameters screen](#)).

Figure 285: Feature-Related System Parameters screen

change system-parameters features
Page 6 of 12

FEATURE-RELATED SYSTEM PARAMETERS

CONFERENCE/TRANSFER

Abort Transfer? n

Transfer Upon Hang-Up? n

Abort Conference Upon Hang-Up? n

No Hold Conference Timeout: 60

No Dial Tone Conferencing? n

Select Line Appearance Conferencing? n

Unhold? n

ANALOG BUSY AUTO CALLBACK

Without Flash? n

AUDIX ONE-STEP RECORDING

Recording Delay Timer (msec): 500

Apply Ready Indication Tone To Which Parties In The Call? all

Interval For Applying Periodic Alerting Tone (seconds): 15

POSTED MESSAGE

Require Security Code? y

3. Change the **Require Security Code** field to **y**.

This field appears only if the **Posted Messages** field on the **Optional Features** screen is set to **y**.

4. Press **Enter** to save your changes.

Activating QSIG to send custom messages

To activate QSIG to send custom messages to users on other systems:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen.
2. Click **Next** until you see the **ISDN Parameters** area ([Figure 286: Feature-Related System Parameters screen](#) on page 1098).

Figure 286: Feature-Related System Parameters screen

change system-parameters features	Page7 of 12
FEATURE-RELATED SYSTEM PARAMETERS	
ISDN PARAMETERS	
Send Non-ISDN Trunk Group Name as Connected Name? n	
Display Connected Name/Number for ISDN DCS Calls? n	
Send ISDN Trunk Group Name on Tandem Calls? n	
Send Custom Messages Through QSIG? y	
QSIG TSC Extension: 6999	
MWI - Number of Digits Per Voice Mail Subscriber: 4	
National CPN Prefix:	
International CPN Prefix:	
Pass Prefixed CPN to ASAI? n	
Unknown Numbers Considered Internal for AUDIX? n	
USNI Calling Name for Outgoing Calls? n	
Path Replacement with Measurements? y	
QSIG Path Replacement Extension:	
Path Replace While in Queue/Vectoring? n	

3. Change the **Send Custom Messages Through QSIG** field to **y**.
4. Press **Enter** to save your changes.

Translating Posted Messages

Translating any fixed or custom message to a user-defined language is optional.

To translate Posted Messages, complete the following procedures:

- [Translating fixed messages to a user-defined language](#)
- [Creating custom messages](#)

Translating fixed messages to a user-defined language

Fixed messages are available in English, Italian, French, and Spanish. If you want to translate fixed messages into another language, called a user-defined language, complete the following procedure.

To translate fixed messages to a user-defined language:

1. Type **change display-messages posted-message**. Press **Enter**.

The system displays the **System Posted Messages** screen ([Figure 287: System Posted Messages screen](#) on page 1099).

Figure 287: System Posted Messages screen

change display-messages posted-message

Page 1 of 6

SYSTEM POSTED MESSAGES
USER DEFINED LANGUAGE TRANSLATIONS

Message Number	English	Message Number	Translation
1.	In Meeting	1.	*****
2.	Out to Lunch	2.	*****
3.	Away from Desk	3.	*****
4.	Do Not Disturb	4.	*****
5.	Out All Day	5.	*****
6.	On Vacation	6.	*****
7.	Gone for the Day	7.	*****
8.	Out Sick	8.	*****
9.	On Business Trip	9.	*****
10.	With Client	10.	*****
11.	Working from Home	11.	*****
12.	On Leave	12.	*****
13.	Back in 5 Minutes	13.	*****
14.	Back in 30 Minutes	14.	*****
15.	Back in 1 Hour	15.	*****

2. In the **Translation** fields, type a translation of all fixed messages into the user-defined language.

Note that the text for the English, the Italian, the French, and the Spanish fixed messages are predefined. You cannot change the text of these translations.

3. Press **Enter** to save your changes.

Creating custom messages

To create custom messages:

1. Type **change display-messages posted-message**. Press **Enter**.

The system displays the **System Posted Messages** screen.

2. Click **Next**.

The system displays the **Custom Posted Messages** screen for English translations ([Figure 288: Custom Posted Messages screen](#) on page 1101).

The system displays the five **Custom Posted Messages** screens in the following order:

- English translations
- Italian translations
- French translations
- Spanish translations
- User-defined language translations

In this example, we describe how to create custom messages in English. Use the same instructions to create custom messages in Italian, in French, in Spanish, or in the user-defined language. Ensure that you view the correct screen for the language that you want to use.

If you first administer custom messages in English, the text of the English custom messages automatically appears on the:

- Italian translations screen
- French translations screen
- Spanish translations screen
- user-defined language translations screen

Figure 288: Custom Posted Messages screen

change display-messages posted-message
Page 2 of 6

CUSTOM POSTED MESSAGES

ENGLISH TRANSLATIONS

Message Number	Translation
16.	*****
17.	*****
18.	*****
19.	*****
20.	*****
21.	*****
22.	*****
23.	*****
24.	*****
25.	*****
26.	*****
27.	*****
28.	*****
29.	*****
30.	*****

3. In the **Translation** fields, start with message 16 and type the message in the proper language that you want to create.
4. Continue in numeric order until you create all the custom messages that you want. The maximum number of custom messages is 15.
5. Press **Enter** to save your changes.

Translating telephone feature buttons and labels

This procedure is optional.

To translate telephone feature buttons and labels for Posted Messages to a user-defined language, complete the following procedures:

- [Translating the Posted Messages feature display to a user-defined language](#)
- [Translating the Posted Messages softkey button label to a user-defined language](#)
- [Translating the Posted Messages button label to a user-defined language](#)

Translating the Posted Messages feature display to a user-defined language

To translate the text that appears on the telephone display, when this feature is active, to a user-defined language:

1. Type **change display-messages view-buttons**. Press **Enter**.
The system displays the **Language Translations** screen.
2. Click **Next** until you see the **Posted Messages** field ([Figure 289: Language Translations screen](#) on page 1102).

Figure 289: Language Translations screen

change display-messages view-buttons Page 9 of 9

LANGUAGE TRANSLATIONS

English	Translation
1. Station Lock	*****
2. License Error	*****
3. Conference Display	*****
4. Conf/Trans Toggle-Swap	*****
5. Posted Messages	*****

3. In the **Translation** fields, type a translated name for **Posted Messages** into the user-defined language.

Note that the language translations for the English, the Italian, the French, and the Spanish feature display are predefined. You cannot change the text of these translations.
4. Press **Enter** to save your changes.

Translating the Posted Messages softkey button label to a user-defined language

To translate the Posted Messages softkey button label to a user-defined language:

1. Type **change display-messages softkey-labels**. Press **Enter**.
The system displays the **Language Translations** screen ([Figure 290: Language Translations screen](#) on page 1103).

Figure 290: Language Translations screen

change display-messages softkey-labels				Page 9 of 9	
LANGUAGE TRANSLATIONS					
English	Translation	English	Translation	English	Translation
1. Acct	1. *****	17. Drop	17. *****	33. SAC	33. *****
2. AD	2. *****	18. Excl	18. *****	34. SFunc	34. *****
3. AdBsy	3. *****	19. GrpPg	19. *****	35. Spres	35. *****
4. Admin	4. *****	20. HFAns	20. *****	36. Stats	36. *****
5. AutCB	5. *****	21. IAuto	21. *****	37. Stop	37. *****
6. BtnVu	6. *****	22. IDial	22. *****	38. Swap	38. *****
7. CFrwd	7. *****	23. Inspt	23. *****	39. Timer	39. *****
8. CnfDs	8. *****	24. Last	24. *****	40. TmDay	40. *****
9. CnLWC	9. *****	25. LWC	25. *****	41. View	41. *****
10. Cnslt	10. *****	26. Mark	26. *****	42. Wait	42. *****
11. Count	11. *****	27. Pause	27. *****	43. WspAn	43. *****
12. CPark	12. *****	28. PCall	28. *****	44. WspPg	44. *****
13. CPkUp	13. *****	29. PoMsg	29. *****		
14. CTime	14. *****	30. Prog	30. *****		
15. Dir	15. *****	31. RmBsy	31. *****		
16. DPKUp	16. *****	32. RngOf	32. *****		

2. Locate the **PoMsg** field.
3. In the **Translation** fields, type a translated name for the **PoMsg** softkey button label in the user-defined language. You are limited to five spaces for this translation.

Note that the language translations for the English, the Italian, the French, and the Spanish softkey button labels are predefined. You cannot change the text of these translations.
4. Press **Enter** to save your changes.

Translating the Posted Messages button label to a user-defined language

The 2420 DCP telephone and the 4620 IP telephone have digital button labels instead of paper labels. If you need to translate the Posted Messages button labels into a user-defined language for these telephones, follow this procedure.

To translate the Posted Messages button label for the 2420 DCP telephone and the 4620 IP telephone to a user-defined language:

1. Type **change display-messages button-labels**. Press **Enter**.
The system displays the **Language Translations** screen.
2. Click **Next** until you see the **Posted MSGs** field ([Figure 291: Language Translations screen](#) on page 1104).

Figure 291: Language Translations screen

change display-messages button-labels

Page 9 of 9

LANGUAGE TRANSLATIONS

English	Translation
1. NoAnsAlrt	1. *****
2. OffBoardAlarm	2. *****
3. PMS Failure	3. *****
4. PMS Ptr Alarm	4. *****
5. Posted MSGs	5. *****
6. Priority Call	6. *****
7. QueueCall	7. *****
8. QueueTime	8. *****
9. Release	9. *****
10. RemBusyInd	10. *****
11. ResetAlert	11. *****
12. Ringer Off	12. *****
13. Ring Stat	13. *****
14. RSVN Halt	14. *****
15. SD	15. **
16. SendAllCalls	16. *****

3. In the **Translation** field, type a translated name for the **Posted MSGs** button label into the user-defined language.

Note that the language translations for the English, the Italian, the French, and the Spanish button labels are predefined. You cannot change the text of these translations.

4. Press **Enter** to save your changes.

End-user procedures for Posted Messages

End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Posted Messages:

To activate and deactivate the Posted Messages feature, users can either:

- Dial a feature access code (FAC)
- Press a feature button on the telephone

Users can dial the FAC from:

- Their own telephone
- Another telephone on the same system
- A remote access trunk

A user can dial the Posted Messages FAC from another telephone on the same system, and have the message post on their own telephone. Users must press the feature button on their own telephone to activate or deactivate the Posted Messages feature.

To use a FAC to post a message, users might also have to dial the security code for their telephone. The administrator sets up the system to either require or not require a security code. Ask your administrator if you must dial a security code, and what might be the security code for your telephone.

You cannot use the Posted Messages feature from an attendant console. However, you can the Posted Messages FACs to activate or deactivate this feature for other telephones from an attendant console.

Activating the Posted Messages feature

To activate the Posted Messages feature, the user can complete the following procedures:

- [Using a Feature Access Code](#)
- [Using the Posted Messages feature button](#)

Using a Feature Access Code

To use a Feature Access Code (FAC) to post a message:

1. Dial the FAC for Posted Messages activation.

You hear dial tone.

2. Identify your extension:

- If you dial from your own telephone, press the pound key (#).
- If you dial from another internal telephone or a remote access trunk, dial your telephone extension. Then press the pound key (#).

3. Identify the security code for your telephone:

- If you do not have to dial a security code, press the pound key (#).
- If you have to dial a security code, dial the security code for your telephone. Then press the pound key (#).

If an error occurs, you hear intercept tone. Press the star key (*) to clear the extension and security code. Repeat from Step 2. If you do not hear intercept tone, continue with Step 4.

Posted Messages

4. Dial the 2 digit number of the message that you want to post. Press the pound key (#).

You hear confirmation tone. The system posts the message to the telephone display after 1 second as long as the:

- Telephone does not receive an incoming call
- User does not press any other button on the telephone

Examples

You want to post a message to your telephone. For the following examples:

- The activation FAC is ***29**.
- Your telephone extension is **1234567**.
- The security code for your telephone, if needed, is **86562563**.
- The message that you want to post to your telephone is message **02**, Out To Lunch.

From	Dial
Your own telephone that requires a security code	*29#86562563#02#
Your own telephone that does not require a security code	*29##02#
Another telephone that requires a security code,	*291234567#86562563#02#
Another telephone that does not require a security code,	*291234567##02#

Using the Posted Messages feature button

To use the feature button on your telephone to post a message:

1. Press the Posted Messages feature button.

You can use this method to post a message only to your own telephone.

2. Use of the following methods to select the message that you want to post:

- Press the Posted Messages feature button to scroll through the available messages. Whenever you press the feature button, the next message appears. To select the message that you want to post, press the pound key (#).

- Dial the 2 digit number of the message that you want to post. Press the pound key (#).

You hear confirmation tone. The system posts the message to the telephone display after 1 second as long as the:

- Telephone does not receive an incoming call
- User does not press any other button on the telephone

Deactivating the Posted Messages feature

To deactivate the Posted Messages feature, the user can complete the either of following procedures:

- [Using a feature access code \(FAC\)](#)
- [Using the Posted Messages feature button](#)

Using a feature access code (FAC)

To use a feature access code (FAC) to cancel the Posted Message feature:

1. Dial the FAC for Posted Messages deactivation.
2. Identify your extension:
 - If you dial from your own telephone, just press the pound key (#).
 - If you dial from another internal telephone or a remote access trunk, dial your telephone extension. Then press the pound key (#).
3. Identify the security code for your telephone as follows:
 - If you do not have to dial a security code, press the pound key (#).
 - If you do have to dial a security code, dial the security code for your telephone. Then press the pound key (#).

If an error occurs, you hear intercept tone. Press the star key (*) to clear the extension and security code. Repeat from Step 2.

If there is no error, you hear confirmation tone. The telephone returns to the normal mode. The system clears the selected message.

Examples

You want to remove the posted message from your telephone. For the following examples:

- The deactivation FAC is **#29**.
- Your telephone extension is **1234567**.
- The security code for your telephone, if needed, is **86562563**.

From	Dial
Your own telephone that requires a security code	#29#86562563#
Your own telephone that does not require a security code	#29##

Posted Messages

From	Dial
Another telephone that requires a security code,	#291234567#86562563#
Another telephone that does not require a security code,	#291234567##

Using the Posted Messages feature button

To use the feature button on your telephone to cancel the Posted Message feature:

1. Press the Posted Messages feature button on your telephone.

You can use this method to cancel a posted message only on your own telephone.

You hear confirmation tone. The telephone returns to the normal mode. The system clears the selected message.

Reports for Posted Messages

The following reports provide information about the Posted Messages feature:

- None

Considerations for Posted Messages

This section provides information about how the Posted Messages feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Posted Messages under all conditions.

- Performance impact

Heavy use of the selection display mode might adversely affect system performance. Hardware buffers can overflow when you overuse telephone displays. Telephone hyperactivity checks are usually sufficient to control overuse of the display mode.

- Security

When a user activates the Posted Messages feature from a remote access trunk, the user must log in as a remote user. When you log in as a remote user, you prevent unauthorized users from activating or deactivating this feature for telephones.

- Serviceability

In the selection display mode, the telephone might go out of service if the user scrolls through the displays too quickly. Scrolling through the displays too quickly causes the telephone to be reset. Active calls are dropped. When a 2420, a 4620 or a 4630 telephone is out of service, the system clears the call log.

- Time out

If no activity occurs within 60 seconds of the last action, the telephone automatically exits from the selection display mode. The following events occur:

- The LED for the feature button goes out. Or on telephones with feature icons, the feature icon changes to the off state.
- The displayed message is cleared.
- The display of any active call is restored.

When the telephone is in the selection display mode, the timer is reset if a user presses:

- The feature button
- The **Next** button
- Any digit key

- Silent ringing

While a telephone is in the message posting mode, the user hears a burst of ringing, and then the telephone rings silently. Silent ringing removes the ringing disturbance while the user can still answer the incoming call.

Interactions for Posted Messages

This section provides information about how the Posted Messages feature interacts with other features in your system. Use this information to ensure that you receive the maximum benefits of Posted Messages in any feature configuration.

- Display mode interactions

The system cancels the selection display mode if one of the following telephone display modes is activated.

- Normal

The normal mode displays call related information for the active call appearance. Depending on the type of call, this information can include the name and the number of the calling party or the called party.

The elapsed time function can be invoked anytime that the display is in Normal mode. The elapsed time feature displays elapsed time in hours, minutes, and seconds.

Posted Messages

- Inspect

The inspect mode displays call related information for an incoming call when the user is active on a different call appearance. You must reset the mode manually for each call.

- Stored number

The stored number mode displays one of the following numbers:

- The last number that the user dialed
- The number that is stored in an abbreviated dialing button
- A number that is stored in an abbreviated dialing list
- A number that is assigned to a button that is administered by the Facility Busy Indication feature

- Date and time

The date and time mode displays the current date and the time of day.

- Integrated directory

The integrated directory mode turns off the touchtone signals. The integrated directory mode then allows a user to use the touchtone buttons to enter the name of a system user. After the user enters a name, the display shows the name and the extension.

Integrated directory mode can also use the Call-Disp button. The Call-Disp button automatically returns the call that the currently displayed message requested, or by the currently displayed name and extension.

- Message retrieval

The message retrieval mode retrieves messages for telephone users. If no messages are stored, the display shows NO MESSAGES. A user can retrieve messages even if the user is active on a call.

Message retrieval mode can use three additional buttons:

- The Next Message button retrieves the next message. When the telephone is in retrieval mode, the telephone displays END OF FILE, PUSH NEXT TO REPEAT.
- The Delete button deletes the message that is currently displayed.
- The Call-Disp button automatically returns the call that the currently displayed message requested, or by the currently displayed name and extension.

- Coverage message retrieval

The coverage message retrieval mode retrieves messages for users who have telephones without a display. You must administer retrieval permission for a user to retrieve messages from another user.

The user does not have to lift the handset to retrieve messages. The user can retrieve messages even if the user is active on a call. Coverage message retrieval mode can use three additional buttons:

- The Next Message button retrieves the next message. When the telephone is in retrieval mode, the telephone displays END OF FILE, PUSH NEXT TO REPEAT.
- The Delete button deletes the message that is currently displayed.
- The Call-Disp button automatically returns the call that the currently displayed message requested, or by the currently displayed name and extension.
- Diverted Calls

If a user diverts a call to a telephone that is in message posting mode, the calling party does not receive the posted message. For example,

 - User A posts a message.
 - User B calls user C.
 - The system diverts the call through the Call Coverage or Call Forwarding feature to user A.
 - User B does not receive the posted message from user A.
- Group Extensions, Hunt Groups, Terminating Extension Groups (TEG), intercom groups

The Posted Messages feature does not apply to calls generated from dialing a group extension. The group member remains available to receive calls, and the calling party does not see the posted message.

The Posted Messages feature only applies when dialing the group member's own extension.
- No Hold Conference

No Hold Conference allows a user to automatically conference another party while continuing the conversation on the existing call. The new party is automatically added to the existing call upon answer.

If the No Hold Conference feature is in process, the user cannot use the Posted Messages feature. If the telephone is in selection display mode, the user cannot use the No Hold Conference feature.
- Personal Station Access/Terminal Translation Initialization (PSA/TTI)

After PSA/TTI dissociation, the extension of the telephone becomes an X-port extension. If the Posted Messages feature was previously activated for the extension, the Posted Messages feature is deactivated.

The permanent display for the Posted Messages feature has precedence over the permanent displays for the PSA enhancements feature:

 - if the Posted Messages feature and the Personal Station Access feature are both active
 - when the telephone is PSA-associated

Posted Messages

- Transfer

Under normal conditions, a posted message only appears to a calling party. A posted message does not appear to other parties to whom the call might later be transferred.

A posted message appears to the telephones of all transferees if both these conditions apply:

- if a user activates a posted message while the telephone is ringing
- after the transfer operation is completed

Priority Calling

Use the Priority Calling feature to provide a special type of call alerting between internal telephone users, including the attendant. The called party hears a distinctive ringing when the calling party uses Priority Calling.

Detailed description of Priority Calling

This section provides a detailed description of the Priority Calling feature.

You enable Priority Calling for your system. The Class of Service (COS) that you assign to each user determines whether a user can use Priority Calling.

The following types of calls are always priority calls:

- Call coverage consult
- Automatic callback
- Ringback queuing
- Attendant intrusion
- Security violation notification (SVN)

The system assigns a three-burst ringing-pattern as the default for a Priority Calling call.

The system generates the call waiting ringback tone that a single-line telephone user hears, even if the user is active on a call.

In contrast, the system does not generate the call waiting ringback tone for a multiappearance telephone if no call appearances are idle. Instead, a caller with a multiappearance telephone hears busy tone. The system generates the call waiting ringback tone if the telephone has an idle call appearance, including the call appearance that is reserved for call origination.

Administering Priority Calling

The following steps are part of the administration process for the Priority Calling feature:

- [Assigning a priority feature button to an attendant console](#)
- [Assigning a priority feature button to a telephone](#)

This section describes:

- Any prerequisites for administering the Priority Calling feature
- The screens that you use to administer the Priority Calling feature
- Complete administration procedures for the Priority Calling feature

Prerequisites for administering Priority Calling

You must complete the following actions before you can administer the Priority Calling feature:

- Administer the Feature-Related System Parameters screen to support the Priority Calling feature on your system.
- Create a Class of Service (COS) that allows your users to use Priority Calling.
- Ensure that a feature access code (FAC) for Priority Calling is available on your system.

To administer the **Feature-Related System Parameters** screen to support the Priority Calling feature on your system:

1. Type **change system-parameters features**. Press **Enter**.
The system displays the **Feature-Related System Parameters** screen.
2. Click **Next** until you see the **Distinctive Audible Alerting** area
([Figure 292: Feature-Related System Parameters screen](#) on page 1115).

Figure 292: Feature-Related System Parameters screen

display system-parameters features		Page 5 of 14
FEATURE-RELATED SYSTEM PARAMETERS		
Public Network Trunks on Conference Call: 5	Auto Start? n	
Conference Parties with Public Network Trunks: 6	Auto Hold? y	
Conference Parties without Public Network Trunks: 6	Attendant Tone? y	
Night Service Disconnect Timer (seconds): 180	Bridging Tone? n	
Short Interdigit Timer (seconds): 3	Conference Tone? n	
Unanswered DID Call Timer (seconds):	Intrusion Tone? n	
Line Intercept Tone Timer (seconds): 30	Special Dial Tone? n	
Long Hold Recall Timer (seconds): 0	Mode Code Interface? y	
Reset Shift Timer (seconds): 0		
Station Call Transfer Recall Timer (seconds): 0		
DID Busy Treatment: tone		
Invalid Number Dialed Intercept Treatment: tone		
Allow AAR/ARS Access from DID/DIOD? n		
Allow ANI Restriction on AAR/ARS? n		
Use Trunk COR for Outgoing Trunk Disconnect? n		
7405ND Numeric Terminal Display? n	7434ND? y	
DISTINCTIVE AUDIBLE ALERTING		
Internal: 1	External: 2	Priority: 3
Attendant Originated Calls: external		
DTMF Tone Feedback Signal to VRU - Connection:	Disconnection:	

3. In the **Priority** field in the **Distinctive Audible Alerting** area, type **priority** next to the number of rings that you want the system to use for a priority call.

For virtual stations, the number of rings applies to the mapped-to physical telephone.

4. Press **Enter** to save your changes.

To create a Class of Service (COS) that allows your users to use the Priority Calling feature:

For more information about how to create a COS, see the "Class of Service" feature.

To ensure that a FAC for Priority Calling is available on your system:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Codes (FAC)** screen.

2. Click **Next** until you see the **Priority Calling Access Code** field ([Feature Access Code \(FAC\) screen](#) on page 1116).

Figure 293: Feature Access Code (FAC) screen

change feature-access-codes

FEATURE ACCESS CODE (FAC)

Page 3 of 7

PASTE (Display PBX data on Phone) Access Code:

Personal Station Access (PSA) Associate Code: *98

Per Call CPN Blocking Code Access Code:

Per Call CPN Unblocking Code Access Code:

Posted Messages Activation:

Priority Calling Access Code: *76

Program Access Code:

Refresh Terminal Parameters Access Code:

Remote Send All Calls Activation:

Self Station Display Activation: *26

Send All Calls Activation:

Station Firmware Download Access Code: *36

Station Lock Activation:

Station Security Code Change Access Code: *47

Station User Admin of FBI Assign:

Station User Button Ring Control Access Code:

Terminal Dial-Up Test Access Code:

Dissociate Code: *99

Deactivation:

Deactivation:

Deactivation:

Deactivation:

Remove:

3. Type the FAC that you want to use for Priority Calling. In this example, the FAC is *76.

4. Press **Enter** to save your changes.

For more information, see the "Feature Access Code" feature.

Screens for administering Priority Calling

Screen name	Purpose	Fields
Attendant Console	Assign a priority feature button to an attendant console.	Any available button field in the Feature Button Assignments area
Class of Service	Define a COS that allows Priority Calling.	Priority Calling
Feature Access Code (FAC)	Define a FAC for Priority Calling.	Priority Calling Access Code

Screen name	Purpose	Fields
Feature-Related System Parameters	Assign the number of rings for a priority call.	Distinctive Audible Alerting - Priority
Station (multiappearance)	Assign a priority feature button for Priority Calling to a multiappearance telephone.	Any available button field in the Button Assignments area

Assigning a priority feature button to an attendant console

To assign a priority feature button to an attendant console:

1. Type **change attendant *n***, where *n* is the number of the attendant console to which you want to assign a priority feature button. Press **Enter**.

The system displays the **Attendant Console** screen.

2. Click **Next** until you see the **Feature Button Assignments** area ([Figure 294: Attendant Console screen](#) on page 1117).

Figure 294: Attendant Console screen

change attendant 1	ATTENDANT CONSOLE	Page 3 of 4
FEATURE BUTTON ASSIGNMENTS		
1: split	13:	
2:	14:	
3:	15:	
4:	16:	
5:	17:	
6: hold	18:	
7:	19: forced-rel	
8:	20:	
9:	21:	
10:	22:	
11:	23: night-serv	
12: priority	24: pos-busy	

3. Type **priority** next to the feature button that you want the attendant to use for Priority Calling.
4. Press **Enter** to save your changes.

Assigning a priority feature button to a telephone

To assign a priority feature button to a telephone:

1. Type **change station *n***, where *n* is the extension of a multiappearance telephone to which you want to assign a priority feature button. Press **Enter**.

The system displays the **Station** screen.

2. Click **Next** until you see the **BUTTON ASSIGNMENTS** area ([Figure 295: Station screen](#) on page 1118).

Figure 295: Station screen

STATION		
SITE DATA		
Room:		Headset? n
Jack:		Speaker? n
Cable:		Mounting: d
Floor:		Cord Length: 0
Building:		Set Color:
ABBREVIATED DIALING		
List1:	List2:	List3:
BUTTON ASSIGNMENTS		
1: call-appr	7:	
2: call-appr	8:	
3: call-appr	9:	
4: priority	10:dn-dst	
5:	11:goto-cover	
6:	12:send-calls Ext:	

-
3. Type **priority** next to the button assignment that you want the user to use for Priority Calling.
 4. Press **Enter** to save your changes.

End-user procedures for Priority Calling

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. A user can activate Priority Calling before or after the user places a call. This section includes the following end-user procedures for Priority Calling:

To activate Priority Calling before you place a call:

1. Dial the for priority calling feature access code (FAC) and an extension.
2. Press a priority feature button and dial an extension.

To activate Priority Calling after the call starts to ring at the destination:

1. Press the priority feature button.

Reports for Priority Calling

The following reports provide information about the Priority Calling feature:

- None

Considerations for Priority Calling

This section provides information about how the Priority Calling feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Priority Calling under all conditions. The following considerations apply to Priority Calling:

- None

Interactions for Priority Calling

This section provides information about how the Priority Calling feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Priority Calling in any feature configuration.

- **Abbreviated Dialing**

To place a priority call to an extension on an abbreviated dial list, the user must use a button to which both the feature access code (FAC) for Priority Calling and Abbreviated Dialing are assigned.

- **Call Coverage**

The system redirects a call to coverage if the user activates Go to Cover for the call. When the call goes to coverage, the call remains a priority call. The covering user hears the priority call ringing pattern.

- **Call Forwarding All Calls**

The system forwards priority calls, except callback calls. When the system forwards a call, the call remains a priority call.

- **Call Vectoring**

The system generates intercept tone when someone attempts to activate Priority Calling toward a vector directory number (VDN).

- **Call Waiting**

A priority call waits on an active single-line telephone, even if Call Waiting is not assigned to the telephone. The user with an active, single-line telephone who receives the call, hears the distinctive priority Call Waiting tone.

- **Consult**

A Consult call acts as a priority call and waits at a single-line telephone, even if the telephone does not have Call Waiting Indication assigned.

- **Distributed Communications System (DCS)**

With a DCS tandem call to a single-line telephone, the called party does not receive priority ringing, if the caller presses the priority button to activate Priority Calling.

- **Last Number Dialed**

A user must use the Last Number Dialed button to place a priority call to the last number dialed. The Last Number Dialed FAC is not valid after a user activates Priority Calling.

You can administer single-line telephones, for example, 2500-series telephones, so that the system does not provide distinctive ringing. If you administer single-line telephones in this way, the system provides one-burst ringing for priority calls.

Privacy

Use the Privacy feature to protect your call from interruptions.

Privacy supports the following capabilities:

- Data Privacy for voice or data calls
Prevents voice or data calls from being disturbed by any overriding or ringing features
- Data Restriction for voice or data calls
Prevents voice or data calls from being disturbed by an overriding or ringing, features or system-generated tones.
- Privacy-Automatic Exclusion
Automatically prevents other multiappearance users from bridging onto a call
- Manual Exclusion
Prevents other multiappearance users from bridging onto a call when the recipient of the call presses the exclusion button

Detailed description of Privacy

This section provides a detailed description of the Privacy feature.

Data Privacy

The Data Privacy capability prevents analog data calls from being disturbed by any overriding or ringing features. You administer Data Privacy for each user.

Data Restriction

The Data Restriction capability prevents voice or data calls from being disturbed by any overriding or ringing feature or by system-generated tones. You can administer Data Restriction for either a user or a trunk group. When you administer Data Restriction for a voice telephone, data terminal, or a trunk group, the capability is active for all calls to or from those facilities.

Privacy - Automatic Exclusion

Privacy - Automatic Exclusion allows a user of a multiappearance telephone to keep others with appearances of the same extension from bridging onto an existing call. Automatic exclusion is available as soon as a user answers a call. To turn off automatic exclusion, the user presses the exclusion button.

Privacy - Manual Exclusion

Privacy - Manual Exclusion allows a user of a multiappearance telephone to keep others with appearances of the same extension from bridging onto an existing call. To use manual exclusion, the user presses the exclusion button, either before the user places the call, or when the user is active on the call. If the user presses the exclusion button while others are bridged onto the call, the system drops the other users. To turn off manual exclusion, the user presses the exclusion button.

Administering Privacy

The following steps are part of the administration process for the Privacy feature:

- [Administering Privacy for a user](#)
- [Activating Data Restriction for a trunk group](#)

This section describes:

- Any prerequisites for administering the Privacy feature
- The screens that you use to administer the Privacy feature
- Complete administration procedures for the Privacy feature

Prerequisites for administering Privacy

You must complete the following actions before you can administer the Privacy feature:

- Ensure that the Automatic Exclusion field on the **Feature-Related System Parameters** screen is set to y.

To view the **Feature-Related System Parameters** screen, type **change system-parameters features**. Press **Enter**.

- Ensure that the **Data Privacy Access Code** field on the **Feature Access Codes (FAC)** screen is set to **y**.

To view the **Feature Access Codes (FAC)** screen, type **change feature-access-codes**. Press **Enter**.

- Ensure that the **Data Privacy** and the **Automatic Exclusion** fields on the **Class of Service** screen are set to **y**.

To view the **Class of Service** screen, type **change cos**. Press **Enter**.

Screens for administering Privacy

Screen name	Purpose	Fields
Feature Access Code (FAC)	Set the access code for Data Privacy.	Data Privacy Access Code
Feature-Related System Parameters	Activate Privacy-Automatic Exclusion.	Automatic Exclusion by COS.
Class of Service	Enable data privacy for a Class of Service (COS).	Data Privacy
Station	Administer COS.	COS
	Administer an exclusion feature button.	Any available button field in the Button Assignments area
	Activate Data Restriction.	Data Restriction?
Trunk Group - all	Activate Data Restriction.	Data Restriction?

Administering Privacy for a user

To administer Privacy for a user:

1. Type **change station *n***, where *n* is the extension of the user for whom you want to administer Privacy. Press **Enter**.

The system displays the **Station** screen ([Figure 296: Station screen](#) on page 1124).

Figure 296: Station screen

change station		Page 1 of X
STATION		
Extension: 1014	Lock Messages? n	BCC: 0
Type:	Security Code:	TN: 1
Port:	Coverage Path 1:	COR: 1
Name:	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Personalized Ringing Pattern: 3	
Data Module? n	Message Lamp Ext: 1014	
Speakerphone: 2-way	Mute button enabled? y	
Display Language? English	Expansion Module?	
Model:		
Survivable GK Node Name:	Media Complex Ext:	
	IP Softphone? y	
	Remote Office Phone? y	

2. In the **COS** field, type the number of the COS that supports Data Privacy.
3. Click **Next** until you see the **Data Restriction?** field ([Figure 297: Station screen](#) on page 1125).

Figure 297: Station screen

change station		STATION		Page 2 of X
FEATURE OPTIONS				
LWC Reception?	spe	Auto Select Any Idle Appearance?	n	
LWC Activation?	y	Coverage Msg Retrieval?	y	
LWC Log External Calls?	n	Auto Answer:	none	
CDR Privacy?	n	Data Restriction?	n	
Redirect Notification?	y	Idle Appearance Preference?	n	
Per Button Ring Control?	n			
Bridged Call Alerting?	n	Restrict Last Appearance?	y	
Active Station Ringing:	single			
H.320 Conversion?	n	Per Station CPN - Send Calling Number?	_	
Service Link Mode:	as-needed			
Multimedia Mode:	basic			
MWI Served User Type:	_____	Display Client Redirection?	n	
Automatic Moves:		Select Last Used Appearance?	n	
AUDIX Name:		Coverage After Forwarding?	_	
Recall Rotary Digit?	n	Multimedia Early Answer?	n	
Remote Softphone Emergency Calls:	as-on-local	Direct IP-IP Audio Connections?	n	
Emergency Location Ext:	75001	IP Audio Hairpinning?	n	

4. In the **Data Restriction?** field, type **y**.

If the **Auto Answer** field is set to **all** or **acd**, you must not set the **Data Restriction?** field to **y**.

5. Click **Next** until you see the **Button Assignments** area ([Figure 298: Station screen](#) on page 1126).

Figure 298: Station screen

change station		Page 3 of 4
STATION		
SITE DATA		
Room:		Headset? n
Jack:		Speaker? n
Cable:		Mounting: d
Floor:		Cord Length: 0
Building:		Set Color:
ABBREVIATED DIALING		
List1:	List2:	List3:
BUTTON ASSIGNMENTS		
1: call-appr	7:disp-chrg	
2: call-appr	8:	
3: call-appr	9:	
4:	10:	
5:	11:exclusion	
6: headset	12:release	

6. In the **Button Assignments** area, type **exclusion** next to the feature button number that you want the user to use activate privacy-manual exclusion, and to deactivate both privacy-manual exclusion and privacy-automatic exclusion.
7. Press **Enter** to save your changes.

Activating Data Restriction for a trunk group

To activate Data Restriction for a trunk group:

1. Type **change trunk-group *n***, where *n* is the number of the trunk group for which you want to activate Data Restriction.

The system displays the **Trunk-Group** screen ([Figure 299: Trunk Group screen](#) on page 1127.

Figure 299: Trunk Group screen

add trunk-group next
Page 2 of x

TRUNK FEATURES

ACA Assignment? _	Measured: ____	Wideband Support? _
Long Holding Time(hours): _		Maintenance Tests? _
Short Holding Time(sec): _	Data Restriction? _	NCA-TSC Trunk Member: _
Short Holding Threshold: ____	Send Name: _	Send Calling Number: _
Used for DCS? _		

Suppress # Outpulsing? _ Numbering Format: ____
 Outgoing Channel ID Encoding: ____ UUI IE Treatment: ____

Maximum Size of UUI IE Contents: ____

Replace Restricted Numbers? _

Replace Unavailable Numbers? _

Send Connected Number: _

Send UUI IE? _
 Send UCID? _

BRS Reply-best DISC Cause Value: ____
 Ds1 Echo Cancellation? _

US NI Delayed Calling Name Update? _

Network (Japan) Needs Connect Before Disconnect? _

Time (sec) to Drop Call on No Answer: _
 Outgoing ANI: _
 R2 MFC Signaling: _

2. In the **Data Restriction?** field, type **y**.



CAUTION:

Do not change any other fields on this page of the **Trunk Group** screen without assistance from Avaya or your network service provider.

3. Press **Enter** to save your changes.

End-user procedures for Privacy

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Privacy:

- Using Privacy

To use privacy

1. Dial the Feature Access Code (FAC) for Data Privacy at the beginning of the call to activate Data Privacy.
2. Press the **exclusion** button before or during a call to activate Privacy-Manual Exclusion.
3. Press the **exclusion** button to deactivate Privacy-Manual Exclusion or Privacy-Automatic Exclusion.

Reports for Privacy

The following reports provide information about the Privacy feature:

- None

Considerations for Privacy

This section provides information about how the Privacy feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Data Privacy under all conditions. The following considerations apply to Privacy:

- Data Privacy applies to both voice and data calls. You can activate Data Privacy on Remote Access calls, but not on other incoming trunk calls. Data Privacy is canceled if a user transfers a call, is added to a conference call, is bridged onto a call, or disconnects from a call. You can activate Data Privacy on calls that originate from attendant consoles.
- For virtual extensions, assign the Data Privacy Class of Service to the mapped-to physical extension.
- Do not administer Data Restrictions for an attendant console.

Interactions for Privacy

This section provides information about how the Privacy feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Privacy in any feature configuration.

- **Attendant Call Waiting and Call Waiting Termination**

If Data Privacy is active, Call Waiting is denied.

- **Bridged Call Appearance - Single-Line Telephone**

If you activate Data Privacy or assign Data Restriction to a station that is involved in a bridged call and the primary terminal or bridging user attempts to bridge onto the call, this action overrides Data Privacy and Data Restriction.

When Privacy-Manual Exclusion is active, the system does not allow other users to bridge onto the active call.

- **Busy Verification**

Busy Verification cannot be active when Data Privacy is active.

- **Call Coverage**

When the principal user bridges onto a call that has gone to coverage, and the call is answered at the coverage point, the system does not drop the principal user from the call when Privacy-Manual Exclusion is activated.

- **Call Pickup**

The system does not drop the called party from the call in the following example:

- A call is made to user A.
- User B uses Call Pickup to answer the call.
- User A bridges onto the call by going off-hook on its call appearance.
- User B activates Privacy-Manual Exclusion.

- **Intercom - Automatic and Dial**

An extension with Data Privacy or Data Restriction active cannot originate an intercom call. The user receives an intercept tone.

- **Music-on-Hold Access**

If a user places a call with Data Privacy on hold, the user must withhold Music-on-Hold. This action prevents the transmission of tones that a connected data service might falsely interpret as a data transmission.

Privacy

- Priority Calls

If a user activates Data Privacy, Priority Calls are denied on analog telephones. However, Priority Calls appear on the next available line appearance on multiappearance telephones.

- Whisper Paging

If you administer Data Restriction for a telephone, a data terminal, or a trunk group, the system denies Whisper Paging.

Public Network Call Priority

Use the Public Network Call Priority feature to provide call retention, forced disconnect, intrusion, mode-of-release control, and re-ring to servers on public networks.

Detailed description of Public Network Call Priority

This section provides a detailed description of the Public Network Call Priority feature.

Use the Public Network Call Priority feature to provide call retention, forced disconnect, intrusion, mode-of-release control, and re-ring to servers on public networks. Different countries refer to these functions by different names. Not all functions are available in all countries.

China

Forced disconnect

With forced disconnect, a network operator can disconnect a called party from a local call, and connect the called party to an incoming toll call. Parties who are on the local call hear a warning tone before the network operator disconnects the call. Forced disconnect is allowed only for callers on local single-station calls. The system does not allow forced disconnect for the following type of calls:

- Conference
- Transferred
- Forwarded
- To group users
- Tandem

Mode-of-release control

Mode-of-release control inhibits release of a trunk circuit when a caller goes on-hook, based on call type and direction. Instead of releasing the trunk circuit, the system keeps the circuit active, and reconnects the call if the caller goes off-hook again. Mode-of-release control applies to the following types of incoming or outgoing calls:

- Toll
- Local
- Service

Public Network Call Priority provides three types of mode-of-release control.

- Calling-party control

When calling-party control is active, the trunk is not released until the caller goes on-hook. For example, if the:

- Caller goes on-hook, the trunk is released immediately. The called party receives busy tone.
- Called party goes on-hook, the trunk is not released until the caller goes on-hook, or the re-answer timer for outgoing calls expires. The called party can reanswer the call, and talk to the calling party.

Re-ring occurs for incoming calls to the system with calling-party control. When the called party goes on-hook, the trunk is not released, and the central office (CO) operator can re-ring the called party and reconnect the call.

- Re-answer timer is activated and expired, the trunk is released on outgoing calls with calling-party control.

- Called-party control

When called-party control is active, the trunk is not released until the called party goes on-hook.

- If the called party goes on-hook, the trunk is released immediately, and the caller receives busy tone.
- If the caller goes on-hook, the trunk is not released until the called party goes on-hook. The caller can go off-hook again to reconnect. No timer is involved with called-party control

- First-party control

When first-party control is active, the trunk is released immediately regardless of whether the caller or the called party goes on-hook first. The party that is still connected receives busy tone. The default or normal mode-of-release control for the system is first-party control.

Russia

Intrusion

Intrusion allows a network operator to break into a local call and announce an incoming toll call. Intrusion is allowed on local single-line and multiline telephone calls. The system does not allow intrusion for the following types of calls:

- Conference
- On hold
- Toll

Re-ring

Re-ring occurs when a call is interrupted by an operator-assisted incoming call, and the call is kept on hold so that the call can be reconnected to a telephone. When the called party goes on-hook, the network toll operator can re-ring the called party, and reconnect the call.

Spain

Call retention

When a caller makes an emergency call and then hangs up, the call is put on hold. The system does not disconnect the call. When the caller goes back off-hook, the system reconnects the telephone to the emergency call. Call retention works on both analog and digital telephones.

Re-ring

Re-ring occurs when a call is interrupted by an operator-assisted incoming call, and the call is kept on hold so that the call can be reconnected to a telephone. When the called party goes on-hook, the network toll operator can re-ring the called party, and reconnect the call.

Administering Public Network Call Priority

This section describes the screens that you use to administer the Public Network Call Priority feature.

Screens for administering Public Network Call Priority

Screens for China

Screen name	Purpose	Fields
Multifrequency-Signaling-Related System-Parameters	Specify the type of tone that is received from a Chinese central office (CO).	Incoming Forward Signal Types for group I and group II
	Specify the type of tone that is sent to a Chinese CO.	Incoming Backward signal Types for group A and group B
Trunk Group	Specify country code 18 for China.	Country
	Specify the outgoing dial type of mf for China.	Outgoing Dial Type
	Specify the incoming dial type of mf for China	Incoming Dial Type

Screens for Russia

Screen name	Purpose	Fields
Trunk Group (DID)	Specify country code 15 for Russia.	Country
	Specify the protocol type Intol for Russia.	Protocol Type
Trunk Group (DIOD)	Specify country code 15 for Russia.	Country
	Specify the protocol type Intol for Russia.	Protocol Typeee

Screens for Spain

Screen name	Purpose	Fields
Trunk Group	Specify country code 11 for Spain.	Country

Reports for Public Network Call Priority

The following reports provide information about the Public Network Call Priority feature:

- None

Considerations for Public Network Call Priority

This section provides information about how the Public Network Call Priority feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Public Network Call Priority under all conditions. The following considerations apply to Public Network Call Priority:

- None

Interactions for Public Network Call Priority

This section provides information about how the Public Network Call Priority feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Public Network Call Priority in any feature configuration.

China

Forced disconnect

- Conference

If the network toll call terminates at a telephone that is involved in a conference, the network does not send the forced disconnect signal.
- Call Forwarding

The system forwards the forced disconnect signal for calls that are forwarded on-premises, on the network, or off the network.
- Group Users

The network does not send the forced disconnect signal, if a network toll call terminates to a group user.
- Nonstation Users

The network does not send the forced disconnect signal, if a network toll call terminates to a nonstation user. Nonstation users include personal attendant, data module., announcement and voice synthesis users.
- Tandem Trunks

The system does not tandem a forced disconnect signal.
- Transfer

The network does not send the forced disconnect signal, if a network toll call is transferred.

Mode-of-release control

- Conference

A call that is involved in a conference is changed to first-party control as the mode-of-release control.
- Forward

A call that is forwarded on-premises, on the network, or off the network is changed to first-party control as the mode-of-release control.
- Group users, including hunt, trunk, terminating extension group (TEG), Intuity AUDIX, Vector Directory Number (VDN)

Calls that terminate to group users are changed to first-party control as the mode-of-release control.

- Nonstation users includes personal attendant, data-module, announcement, and users of voice synthesis.

Calls that terminate to nonstation users are changed to first-party control as the mode-of-release control.

- Tandem Trunks

The system terminates tandem calls, but the mode-of-release control is changed to first-party control.

- Transfer

A transferred call is changed to first-party control as the mode-of-release control.

Re-ring

- Conference

A call that is involved in a conference is changed to first-party control as its mode-of-release control. first-party control calls do not re-ring.

- Call Forwarding

The system does not forward re-ring signals for calls forwarded on-premises, on the network, or off the network.

- Group users - hunt, trunk, TEG, AUDIX, and VDN

The system ignores Re-ring signals that are sent to group users.

- Nonstation user - personal attendant, data-module, announcement, voice synthesis

The system ignores Re-ring signals that are sent to nonstation users.

- Tandem trunks

The system does not tandem re-ring signals.

- Transfer

A transferred call is changed to first-party control as its mode-of-release control. First-party control calls do not re-ring.

Russia

- Announcements

The system does not allow intrusion and re-ring for an announcement port.

- Abbreviated Ringing and Delayed Ringing

Abbreviated Ringing and Delayed Ringing characteristics that you assign do not apply to re-ring. Re-ring has its own priority ringing.

Public Network Call Priority

- Administered Connections
Intrusion and re-ring do not apply to Administered Connections.
- Attendant Console
Intrusion and re-ring do not apply to attendant consoles, or to any call that involves an attendant console.
- Attendant Serial Call
The system ignores Intrusion and re-ring for an attendant serial call.
- Automatic Callback
Re-ring takes precedence over automatic callback on busy or no-answer calls.
- Busy Verification and Attendant Intrusion
While Intrusion or re-ring occurs, Busy Verification and Attendant Intrusion are denied. While Busy Verification or Attendant Intrusion occurs, Intrusion and re-ring are denied.
- Call Coverage
Re-ring overrides Call Coverage. However, if a station is busy and a coverage destination is free, an incoming toll call rings at the coverage destination instead of intruding on the busy call.
- Call Forwarding
Intrusion can be used with Call Forwarding. If a station is busy, an incoming toll call is forwarded instead of intruding on the busy call. Re-ring overrides all administered redirection.
- Call Waiting
If Call Waiting is active, calls are not intruded upon. Call Waiting takes precedence.
- Conference
The system does not allow intrusion for a call that is involved in a conference.
- Data Calls
The system does not allow intrusion for telephones that have Data Privacy, Data Restriction, or Data Protection active.
- Distinctive Ringing
Ringing characteristics that you assign do not apply to re-ring. Re-ring has its own priority ringing.
- Do Not Disturb
You cannot use intrusion and Do Not Disturb at the same time.
- Emergency Access to the Attendant
The system does not allow intrusion for an emergency call.

- **Hunt Group and Automatic Call Distribution**

If a hunt group queue is not busy, the system places incoming toll calls in the queue. Busy calls are not intruded upon.

- **Intercom - Automatic and Dial**

The system does not allow intrusion on any Intercom calls.

- **Malicious Call Trace (MCT)**

The system does not allow intrusion on a station that has MCT active.

- **Personal Station Access (PSA)**

The system does not allow Intrusion when PSA is in use.

- **Pull Transfer**

The system does not allow Intrusion when Pull Transfer is in use.

- **Class of Restriction (COR)**

The system does not allow Intrusion, regardless of the COR.

- **Ringback Queuing**

Intrusion is allowed with Ringback Queuing.

- **Station Hunting**

The system allows Intrusion when Station Hunting is used.

- **Tandem Trunks**

The system does not allow Intrusion over trunk groups used as tandem trunks.

Recorded Telephone Dictation Access

Use the Recorded Telephone Dictation Access feature to access dictation equipment.

Detailed description of Recorded Telephone Dictation Access

This section provides a detailed description of the Recorded Telephone Dictation Access feature.

Use the Recorded Telephone Dictation Access feature to access dictation equipment. Users can access the feature from any on-site or off-site telephone, and can use incoming tie trunks to access the feature.

A user enters a feature access code (FAC) or an extension to access the feature. A user can enter commands by key or by voice to control the start and stop functions. A user can enter commands by key to control other functions, such as initial activation.

Recorded Telephone Dictation Access cannot be used with Automatic Route Selection (ARS) or Conference.

For more information, see the following features:

- "Audible Message Waiting"
- "Announcements"
- "Voice Message Retrieval"

Administering Recorded Telephone Dictation Access

The following steps are part of the administration process for the Recorded Telephone Dictation Access feature:

- [Assigning manual signaling button to a multiple-call appearance telephone user](#)

This section describes:

- Any prerequisites for administering the Recorded Telephone Dictation Access feature
- The screens that you use to administer the Recorded Telephone Dictation Access feature
- Complete administration for the Recorded Telephone Dictation Access feature

Screens for administering Recorded Telephone Dictation Access

Screen name	Purpose	Fields
Station	Assign a signal button to a user telephone, and specify the extension that rings when the user presses the button.	Any available button field in the Button Assignments area

Assigning manual signaling button to a multiple-call appearance telephone user

To assign a manual signaling button to a multiple-call appearance telephone user:

1. Type **change station *n*** where ***n*** is the extension to which you want to assign a signaling button. Press **Enter**.

The system displays the **Station** screen for the extension that you requested.

2. Click **next** until you see the **Button Assignments** area ([Figure 300: Station screen](#) on page 1142).

Figure 300: Station screen

change station 32006		Page 3 of 4
STATION		
SITE DATA		
Room:	Headset? n	
Jack:	Speaker? n	
Cable:	Mounting: d	
Floor:	Cord Length: 0	
Building:	Set Color:	
ABBREVIATED DIALING		
List1: personal 1	List2:	List3:
BUTTON ASSIGNMENTS		
1: call-appr	5: signal	Ext:
2: call-appr	6:	
3: call-appr	7:	
4:	8:	

3. Type **signal** next to the number of the button that you want the user to use for manual signaling.

When you type **signal** next to the button number the system displays an **Ext:** field.

4. Type the extension of the recipient of the signal in the **Ext:** field.
5. Press **Enter** to save your changes.

Reports for Recorded Telephone Dictation Access

The following reports provide information about the Recorded Telephone Dictation Access feature:

- None

Considerations for Recorded Telephone Dictation Access

This section provides information about how the Recorded Telephone Dictation Access feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Recorded Telephone Dictation Access under all conditions. The following considerations apply to Recorded Telephone Dictation Access:

- None

Interactions for Recorded Telephone Dictation Access

This section provides information about how the Recorded Telephone Dictation Access feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of the Recorded Telephone Dictation Access feature.

- Automatic Route Selection (ARS)

You cannot use ARS to access Recorded Telephone Dictation Access.

- Conference

You cannot use Conference and Recorded Telephone Dictation Access at the same time.

Remote Access

Use the Remote Access feature to access and use the system from the public network.

Detailed description of Remote Access

This section provides a detailed description of the Remote Access feature.

SECURITY ALERT:

Avaya has designed the Remote Access feature incorporated in this product, when properly administered by the customer, to enable the customer to minimize the ability of unauthorized people to gain access to the network. It is the responsibility of the customer to take the appropriate steps to properly implement the features, evaluate and administer the various restriction levels, protect access codes, and distribute the access codes only to people whom you advise of the sensitive nature of the access information. Instruct each authorized user to use access codes properly.

In rare instances, unauthorized individuals use the Remote Access feature to make connections to a telecommunications network. In such an event, applicable tariffs require that the customer pay all network charges for traffic. Avaya cannot be responsible for such charges, and does not make any allowance or give any credit for charges that result from unauthorized access.

The Remote Access caller must access your system from the public network and use a touch tone telephone or equivalent equipment. When a user uses Remote Access, the system does not have access to the calling number, because the calling number is outside the system. Thus, some features and capabilities, such as Ringback Queuing and Automatic Callback, cannot be used on a Remote Access call. Also, the user cannot use any feature that requires recall dial tone, such as, the Hold and Transfer features, from the remote location.

Remote Access provides users with access to the system and system features from the public network. Users can use Remote Access to make business calls from home or use the Recorded Telephone Dictation Access to dictate a letter. An authorized user can also access system features from any on-site extension.

With Remote Access, you can dial into the system over direct inward dialing (DID), central office (CO), foreign exchange (FX), or 800 service trunks. When a call comes in on a trunk group that is dedicated to Remote Access, the system routes the call to the Remote Access extension that you assigned. If DID is provided, and the Remote Access extension is within the range of numbers that can be accessed by DID, the system uses DID for Remote Access.

Remote Access

You can administer your system so that a user must enter a barrier code, an authorization code, or both to use Remote Access.

Use barrier codes to secure and define calling privileges through the Class of Restriction (COR) that you administer to users and trunk groups. You can administer as many as 10 barrier codes. Each barrier code has a different COR and Class of Service (COS). Barrier codes can be from 4 to 7 digits, but all barrier codes that you define must be the same length.

Night Service

You can administer your system to provide attendant-assisted calling during the day, and then Remote Access when the system is in Night Service.

Security

To ensure system security, you can permanently disable the Remote Access feature if you do not intend to use the feature. If you permanently disable Remote Access, you must contact your Avaya representative to activate this feature again.



CAUTION:

Your attempt to disable the Remote Access feature is lost if the server that runs Avaya Communication Manager is rebooted without saving translations. Therefore, you must run a "save translation" command after you permanently disable the Remote Access feature.

The system provides several ways to secure your system when you use the Remote Access feature:

- The **status remote-access** command
- Barrier codes
- Authorization codes
- Alternate Facility Restrictions Levels (AFRLs)
- COR
- Logoff Notification

Status remote-access

You can check the status of the Remote Access feature and the barrier codes. The **status remote-access** command displays information that can help you determine when and why the system denied remote access to a user, or why the system blocked a barrier code.

When you type the **status remote-access** command, the system displays the:

- Remote Access status:
 - Not administered
 - Enabled
 - Disabled
 - Disabled following detection of a security violation
- Date and time that Remote Access was last modified
- Barrier code information:
 - The date that the code was administered, reactivated, or modified
 - The expiration date
 - The number of calls that can be placed with the code
 - The number of calls that were placed with the code
 - Active or expired status
 - The date and the reason that a code expired

For a detailed description of the **status remote-access** command and display, see the *BCS Products Security Handbook*.

Barrier codes

Remote Access has inherent risks, such as large-scale unauthorized long distance use of your telecommunications facilities. To increase the security of your system, use a 7-digit barrier code, and administer expiration dates and access limits for each of the 10 barrier codes that are available to you. If your system has more than 10 Remote Access users, the users must share barrier codes. A barrier code automatically expires if the expiration date or the number of accesses exceeds the limits that you set. You can administer the system to limit:

- The length of time that an access code remains valid
- The number of times that an access code can be used
- Both the length of time that an access code remains valid and the number of times that an access code can be used

When you no longer need a barrier code, remove the code from the system.

If you administer barrier codes, a special answer-back tone causes a calling modem to leave dial mode. Sometimes a modem dialer is used to gain access with Remote Access. When a dialer of a modem is used to gain access with Remote Access, the special answer-back tone cancels echo suppressors on the network. The cancellation of echo suppressors in the network prevents dual-tone multifrequency (DTMF) tones from breaking dial tone from Communication Manager.

Remote Access

Use the **status remote-access** command to view the status of a Remote Access barrier code.

Call Detail Recording (CDR) does not track the use of barrier codes.

Authorization codes

You can administer authorization codes to manage access to your system. You can then use Call Detail Recording to track the use of authorization codes. Use the following guidelines to manage the use of authorization codes.

- Assign authorization codes that:
 - Are random, nonconsecutive, and unpredictable
 - Are the maximum code length that the system allows
 - Are unique to each person who uses an authorization code
 - Have the minimum level of calling permissions that a user requires
- Change codes frequently, at least quarterly.
- Delete codes when the codes are no longer needed.
- Delete codes when a user leaves the company, or changes job assignments.
- Use CDR reports to monitor and analyze the use of the codes.

Alternate Facility Restriction Levels (AFRLs)

Consider the use of AFRLs instead of Facility Restriction Levels (FRLs) after normal business hours to restrict where calls can be made over your facilities. Do not restrict callers from summoning emergency services after normal business hours.

Class of Restriction

The COR of an authorization code supersedes the COR of a barrier code.

- Time of Day Routing is controlled by the time-of-day entries in the COR or by the partition.
- Toll Restriction and Analysis is controlled by COR.
- Trunk Access Code (TAC) interacts with toll restriction. You can translate Communication Manager so that users can use ARS to make toll calls, without the need for a TAC.

For additional steps to secure your system, and to obtain security information on a regular basis, see the *Avaya Toll Fraud and Security Handbook*.

Logoff Notification

Use Logoff Notification when you enable Remote Access for your system, but your users are not actively using Remote Access. Logoff Notification notifies you when you log off the system that Remote Access is enabled.

Logoff Notification alerts you to an unauthorized activation of the Remote Access feature. Logoff Notification is administered by login ID.

Administering Remote Access

The following steps are part of the administration process for the Remote Access feature:

- [Administering the Remote Access screen](#)
- [Assigning authorization codes](#)
- [Administering Remote Access for Night Service](#)

This section describes:

- Any prerequisites for administering the Remote Access feature
- The screens that you use to administer the Remote Access feature
- Complete administration procedures for the Remote Access feature

Prerequisites for administering Remote Access

You must complete the following actions before you can administer the Remote Access feature:

- None

Screens for administering Remote Access

Screen name	Purpose	Fields
Authorization Code - COR Mapping	Assign pairs of authorization codes and Classes of Restriction (CORs).	• AC • COR
Feature-Related System Parameters	Assign the length of the authorization codes.	Authorization Code Length

Remote Access

Screen name	Purpose	Fields
Optional Features	Enable authorization codes.	Authorization Codes?
Remote Access	Enable Remote Access.	All
	Disable Remote Access	Permanently Disable?
Trunk Groups • CO • DID • FX • ISDN-BRI • ISDN-PRI • WATS	Assign Remote Access for Night Service.	• Incoming Destination • Night Services

Administering the Remote Access screen

To administer Remote Access, you must complete the following procedures:

- [Enabling Remote Access](#)
- [Disabling Remote Access](#)

Enabling Remote Access

To Enable Remote Access:

1. Type **change remote-access**. Press **Enter**.

The system displays the **Remote Access** screen ([Figure 301: Remote Access screen](#) on page 1151).

Figure 301: Remote Access screen

change remote-access

REMOTE ACCESS

Remote Access Extension: _____ Barrier Code Length: _____
 Authorization Code Required? y Remote Access Dial Tone: n

Barrier Code	COR	TN	COS	Expiration Date	No. of Calls	Calls Used
1: _____	1_	1_	1_	__/__/__	_____	_____
2: _____	1_	1_	1_	__/__/__	_____	_____
3: _____	1_	1_	1_	__/__/__	_____	_____
4: _____	1_	1_	1_	__/__/__	_____	_____
5: _____	1_	1_	1_	__/__/__	_____	_____
6: _____	1_	1_	1_	__/__/__	_____	_____
7: _____	1_	1_	1_	__/__/__	_____	_____
8: _____	1_	1_	1_	__/__/__	_____	_____
9: _____	1_	1_	1_	__/__/__	_____	_____
10: _____	1_	1_	1_	__/__/__	_____	_____

Permanently Disable? __ Disable Following A Security Violation? y
 (NOTE: You must logoff to effect permanent disabling of Remote Access)

2. In the **Authorization Code Required** field, perform one of the following actions:

- If you want a user to enter an authorization code to use Remote Access, type **y**.
- If you do not want a user to enter an authorization code when the user uses Remote Access, type **n**.

The **Calls Used** field is a display-only field that shows the number of calls that are placed with the corresponding barrier code. The system increments this field whenever a barrier code is successfully used to access the Remote Access feature.

3. In the **Barrier Code** field, perform one of the following actions:

- Type a barrier code.

The number that you type in the **Barrier Code Length** field determines the number of digits that you type in this field.

- If the **Barrier Code Length** field is blank, you must type **none** in the first **Barrier Code** field.

You can assign 10 barrier codes to your system. You cannot assign duplicate barrier codes.

4. In the **Barrier Code Length** field, type the length of the barrier codes that you want to use in your system. Valid entries are the numbers **4** through **7**. You can also leave this field blank.
5. In the **COR** field, type the COR number that is associated with the barrier code. The barrier code defines the call restriction features.

6. In the **COS** field, type the COS number that is associated with the barrier code. The barrier code defines access permissions for Call Processing features. Valid entries are the numbers **0** to **15**.
7. In the **Disable Following a Security Violation** field, perform one of the following actions:
 - If you want the system to disable the Remote Access feature when the system detects a remote access security violation, type **y**.
 - If you do not want the system to disable the Remote Access feature when the system detects a remote access security violation, type **n**.

The system displays the **Disable Following a Security Violation** field when the **SVN Authorization Code Violation Notification Enabled** field on the **Security-Related System Parameters** screen is set to **y**.

8. In the **Expiration Date** field, type the date that you want the barrier code to expire. You must type a date that is greater than the current date. You can also leave the field blank.

If you assign an expiration date, the system displays a warning message on the **System Copyright** screen 7 days before the expiration date of the barrier code. If you want to extend the expiration date, change the date in this field.
9. In the **No. of Calls** field, type the number of times that users can use the barrier code for Remote Access. Valid entries are the numbers **1** to **9999**.
10. In the **Permanently Disable?** field, type **n**.
11. In the **Remote Access Dial Tone** field, perform one of the following actions:
 - If you want the system to provide a Remote Access dial tone prompt, type **y**.
 - If you do not want the system to provide a Remote Access dial tone prompt, type **n**.

 SECURITY ALERT:

To maintain system security, Avaya recommends that you set this field to **n**.

The system displays this field only when the **Authorization Code Required** field is set to **y**.

12. In the **Remote Access Extension** field, perform one of the following actions:
 - If no barrier codes exist, leave the field blank.
 - If barrier codes exist, type the Remote Access extension.
The remote access extension is used like a DID extension. Only one DID extension can be assigned as the Remote Access extension. Calls to the Remote Access extension are treated the same as calls on the remote access trunk.
13. In the **TN** field, type the Tenant Partition number. Valid entries are the numbers **1** to **100**.
14. Press **Enter** to save your changes.

Disabling Remote Access

To disable Remote Access:

1. Type **change remote-access**. Press **Enter**.

The system displays the **Remote Access** screen ([Figure 301: Remote Access screen](#) on page 1151).

2. In the **Permanently Disable?** field, type **n**.
3. Press **Enter** to save your changes.

Assigning authorization codes

Prerequisites

You must complete the following actions before you can assign authorization codes:

- Ensure that authorization codes are enabled on the **Optional Features** screen.
- Administer the authorization code parameters on the **Feature-Related System Parameters** screen.

To ensure that authorization codes are enabled on the **Optional Features** screen:

- On the **Optional Features** screen, ensure that the **Authorization Codes?** field is set to **y**. If the **Authorization Codes?** field is set to **n**, your system is not enabled for authorization codes. Contact your Avaya representative before you continue with this procedure

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

To administer the authorization code parameters on the **Feature-Related System Parameters** screen:

1. Type **change system-parameters features**. Press **Enter**.

The system displays the **Feature-Related System Parameters** screen ([Figure 302: Feature-Related System Parameters screen](#) on page 1154).

Figure 302: Feature-Related System Parameters screen

```

change system-parameters features                                     page 3
      FEATURE-RELATED SYSTEM PARAMETERS
      Reserved Slots for Attendant Priority Queue: 5_
      Time Before Off-Hook Alert: 10__
      Emergency Access Redirection Extension: _____
      Number of Emergency Calls Allowed in Attendant Queue: __
      Call Pickup Alerting? n
      Temporary Bridged Appearance on Call Pickup? y
      Call Pickup on Intercom Calls? y
      Directed Call Pickup? n
      Extended Group Call Pickup: flexible
      Deluxe Paging and Call Park Timeout to Originator? n
      Controlled Outward Restriction Intercept Treatment: tone
      Controlled Termination Restriction (Do Not Disturb): tone
      Controlled Station to Station Restriction: tone
AUTHORIZATION CODE PARAMETERS      Authorization Code Enabled? y
      Authorization Code Length: 7
      Authorization Code Cancellation Symbol? #
      Attendant Time Out Flag? n
      Display Authorization Code? _
      Controlled Toll Restriction Replaces: station-station
      Controlled Toll Restriction Intercept Treatment: extension      3000

```

2. In the **Authorization Codes Enabled?** field, perform one of the following actions:

- If you want the users to use authorization codes, type **y**.
- If you do not want the users to use authorization codes, type **n**.

You can administer this field only if the **Authorization Codes?** field on the **Optional Features** screen is set to **y**.

 SECURITY ALERT:

To maintain system security, Avaya recommends that you set the **Authorization Codes Enabled?** field to **y**.

3. In the **Authorization Code Length** field, type the length of the authorization codes. Authorization codes must be between 4 and 13 digits long.

The system displays this field only if the **Authorization Codes Enabled?** field is set to **y**.

 SECURITY ALERT:

To maintain system security, Avaya recommends that you use the maximum length for the authorization code.

4. In the **Authorization Code Cancellation Symbol** field, perform one of the following actions:

- If both the main server and the tandem server are the same type of server, type a pound sign (#).
- If an Avaya System 85 or a DIMENSION is involved, type the number **1**.

A user dials the authorization code cancellation symbol to cancel the 10-second wait period, during which the user can enter an authorization code

The system displays this field only when the **Authorization Codes Enabled?** field is set to **y**.

5. In the **Attendant Time Out Flag** field, perform one of the following actions:

- If you want the system to route a call to the attendant if a user does not dial an authorization code within the 10-second wait period, or if a user dials an invalid authorization code, type **y**.
- If you do not want the system to generate an intercept tone if a user does not dial an authorization code within the 10-second wait period, or if a user dials an invalid authorization code, type **n**.

The system displays this field only when the **Authorization Codes Enabled?** field is set to **y**.

6. In the **Display Authorization Code?** field, perform one of the following actions:

- If you want the system to display the authorization code as the user dials the authorization code, type **y**.
- If you do not want the system to display the authorization code as the user dials the authorization code, type **n**.

This field applies only to digital communication protocol (DCP) telephones. The field does not apply to ISDN-BRI or hybrid sets.



SECURITY ALERT:

To enhance the security of your system, Avaya recommends that you set the **Display Authorization Code?** field to **n**.

7. Press **Enter** to save your changes.

To assign authorization codes:

1. Type **change authorization-code**. Press **Enter**.

The system displays the Authorization Code - COR Mapping screen ([Figure 303: Authorization Code - COR Mapping screen](#) on page 1156).

Figure 303: Authorization Code - COR Mapping screen

[illegible]

The **Number of Codes Administered** field is a display-only field. This field contains the number of authorization codes that you administered on the **Authorization Code - COR Mapping** screen. The system limits the number of authorization codes that you can administer. To determine the number of authorization codes that you can administer, type **display capacity**.

2. In the **AC** field, type the length of the authorization codes. Authorization codes must be between 4 and 13 digits long.

The number of digits that you type in this field must be the number of digits that you assigned to the **Authorization Code Length** field on the **Feature-Related System Parameters** screen.

3. In the **COR** field, type the Class of Restriction (COR) that the system uses when a user enters the associated authorization code.
4. Press **Enter** to save your changes.

Administering Remote Access for Night Service

To administer Remote Access for Night Service:

1. Type **change trunk-group *n***, where *n* is the number of the trunk group for which you want to administer Remote Access for Night Service. Press **Enter**.

The system displays the **Trunk Group** screen ([Figure 304: Trunk Group screen](#) on page 1157).

Figure 304: Trunk Group screen

change trunk-group 3		Page 1 of x	
TRUNK GROUP			
Group Number: ____	Group Type: tie____	CDR Reports: _	
Group Name: _____	COR: ____	TN: ____	TAC: ____
Direction: incoming	Outgoing Display? _	Trunk Signaling Type: ____	
Dial Access? _	Busy Threshold: ____	Night Service: ____	
Queue Length: ____	Incoming Destination: ____		
Comm Type: _____	Auth Code? _		
	Trunk Flash? _		
BCC: _	ITC? ____		
TRUNK PARAMETERS			
Trunk Type (in/out): _____	Incoming Rotary Timeout(sec): ____		
Outgoing Dial Type: _____	Incoming Dial Type: _____		
	Disconnect Timing(msec): ____		
Digit Treatment: _____	Digits: ____		
	Sig Bit Inversion: none		
Analog Loss Group: ____	Digital Loss Group: ____		
Incoming Dial Tone? _			
Incoming Calling Number - Delete: ____	Insert: ____	Format: ____	
Bit Rate: ____	Synchronization: ____	Duplex: ____	
Disconnect Supervision - In? _	Out? _		
Answer Supervision Timeout: ____	Receive Answer Supervision? _		

2. In the **Incoming Destination** field, type **attd**.

The system displays the **Incoming Destination** field, when the **Direction** field is set to **incoming** or **two-way**.

3. In the **Night Service** field, type the Remote Access extension.
4. Press **Enter** to save your changes.

End-user procedures for Remote Access

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Remote Access:

- Accessing the attendant

To access the attendant:

1. Enter the Remote Access extension.
2. Enter the barrier code.
3. Enter the attendant access code.

Reports for Remote Access

The following reports provide information about the Remote Access feature:

- None.

Considerations for Remote Access

This section provides information about how the Remote Access feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Remote Access under all conditions. The following considerations apply to Remote Access:

- After the baud of a digital-terminal data module (DTDM) is changed from 9600 to 1200, the DTDM cannot be accessed by Remote Access until an internal call is made to the DTDM.

Interactions for Remote Access

This section provides information about how the Remote Access feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Remote Access in any feature configuration.

- **Authorization Codes**

When a Remote Access caller dials the assigned Remote Access extension and connects to the system, the system can request the caller to dial an authorization code in addition to a barrier code. Dial tone between the barrier code and authorization code is optional. Calling privileges that are associated with the Class of Restriction (COR) that is assigned to the authorization code supersede the calling privileges that are assigned to the barrier code.

- **Call Detail Recording (CDR)**

CDR tracks the use of authorization codes. CDR does not track the use of barrier codes.

- **Class of Restriction (COR)**

COR restrictions do not block access to the Remote Access feature.

- **Night Service**

You can specify the Remote Access extension as the Night Service extension on incoming, non-direct inward dialing (DID) trunk groups.

Restriction - Controlled

Use the Restriction - Controlled feature to allow a user with console permission to:

- Activate and deactivate specific restrictions for an individual user or an attendant
- Activate and deactivate specific restrictions for all users or attendants who have a specific Class of Restriction (COR)

Detailed description of Restriction - Controlled

This section provides a detailed description of the Restriction - Controlled feature.

With Restriction - Controlled, a user with console permissions can:

- Activate and deactivate specific restrictions for an individual user or an attendant
- Activate and deactivate specific restrictions for all users or attendants who have a specific Class of Restriction (COR)

Use Restriction - Controlled to administer the following restrictions:

- Outward

The user cannot place calls to the public network.

- Total

The user cannot place or receive calls, with the following exceptions:

- Calls to a remote-access extension
- Terminating-trunk transmission tests
- Emergency Access to Attendant calls

- Termination

The user cannot receive any calls. The system:

- Routes incoming calls to the attendant
- Redirects calls to the Call Coverage path
- Uses Restriction - Controlled intercept treatment

- Station-to-Station

The user cannot place or receive station-to-station calls.

Administering Restriction - Controlled

This section describes the screens that you use to administer the Restriction - Controlled feature.

Screens for administering Restriction - Controlled

Screen name	Purpose	Fields
Feature Access Code (FAC)	Specify the feature access codes (FACs) for Restriction - Controlled.	• User Control Restrict Activation and Deactivation • Group Control Restrict Activation and Deactivation
Feature-Related System Parameters	Specify the type of intercept treatment that the system uses for Restriction - Controlled.	• Controlled Outward Restriction Intercept Treatment • Controlled Termination Restriction (Do Not Disturb) • Controlled Station-to-Station Restriction

End-user procedures for Restriction - Controlled

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Restriction - Controlled:

- [Activating Restriction - Controlled](#)

Activating Restriction - Controlled

To activate Restriction - Controlled:

1. Dial the feature access code (FAC) that allows you to apply Restriction - Controlled to an extension or an attendant group.
2. Dial the number for the type of restriction that you want:
 - **1** for outward
 - **2** for total
 - **3** for termination
 - **4** for station-to-station
3. Perform one of the following actions:
 - If you want to apply Restriction Controlled to an individual extension, dial the extension.
 - If you want to apply Restriction Controlled to all users and attendant who are assigned a certain Class of Restriction (COR), dial the number of the class of restriction (COR).

Reports for Restriction - Controlled

The following reports provide information about the Restriction - Controlled feature:

- None

Considerations for Restriction - Controlled

This section provides information about how the Restriction - Controlled feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Restriction - Controlled under all conditions. The following considerations apply to Restriction - Controlled:

- All telephones with the same COR are affected by a group restriction. When a call is placed, the system checks both the individual and the group restrictions.

Interactions for Restriction - Controlled

This section provides information about how the Restriction - Controlled feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Restriction - Controlled in any feature configuration.

- Call Coverage

The system does not check controlled restrictions for covering users.

- Call Forwarding

The system checks the controlled restrictions for the forwarded-to extension, when Call Forwarding All Calls is active.

- Class of Restriction (COR)

The system checks the COR when a call is authorized.

- Priority Call

If a user activates priority calling before the user dials another extension, the calling user receives intercept tone. The user receives the intercept tone whether you set **Controlled Station to Station Restriction** field on the **Feature-Related System Parameters** form to **y** or **n**.

- Uniform Call Distribution (UCD)

The system does not apply Restriction - Controlled to calls that are dialed through the Uniform Dial Plan (UDP).

Ringling - Abbreviated and Delayed

Use the Ringling - Abbreviated and Delayed feature to assign one of four ring types to each call appearance on a telephone. The ring type that you assign to a call appearance is automatically assigned to each of the bridged call appearances of each call appearance.

Detailed description of Ringling - Abbreviated and Delayed

This section provides a detailed description of the Ringling - Abbreviated and Delayed feature.

The Ringling - Abbreviated and Delayed feature has two categories of ringling:

- Ringling that alerts consistently and does not change:
 - Ringling, in which the lamp flashes and audible ringling occurs
 - Silent ringling, in which the lamp flashes and audible ringling does not occur
- Ringling that transitions from one ringling state to another:
 - Abbreviated ringling, in which ringling continues for the number of cycles that you specify with the automatic abbreviated transition interval or the delayed transition interval, and then changes to silent alerting
 - Delayed ringling, in which visual alerting continues for the number of cycles that you specify with the automatic abbreviated transition interval or the delayed transition interval, and then changes to ringling

When you administer the **Station** screen of a user, you can assign an abbreviated dial button of that user to another user. The user of the **Station** screen that you administer must have a telephone with call appearances that have either abbreviated or delayed ringling. When a call alerts at one of those call appearances, the user presses the button. When the user presses the button, the system forces an immediate transition from ringling to silence, or from silence to ringling.

The Ringling - Abbreviated and Delayed feature is most useful in bridging situations in which some users want to:

- Have a call audibly alert as soon as the call arrives
- Be audibly notified if the call is unanswered within a specified number of rings
- Stop the audible alerting if the call is unanswered by the called party, and the user cannot answer the call

Ringing - Abbreviated and Delayed

You specify the types of ringing on the **Station** screen of each user in your system. You can assign one of the following ring types to each telephone line button.

- **Abbreviated Ring**
A call rings the telephone until the automatic or the manual automatic abbreviated transition or the delayed transition occurs. After the transition, the call silently alerts at the telephone.
- **Delayed Ring**
A call silently alerts the telephone until the automatic or the manual abbreviated transition or the delayed transition occurs. After the transition, the call rings at the telephone.
- **No Ring**
A call silently alerts the telephone and does not transition.
- **Ring**
A call rings at the telephone and does not transition.

When a user presses the abbreviated-ring button on the telephone, the system performs an abbreviated transition or a delayed transition for all calls at the extension. Calls to other extensions that alert at the telephone are unaffected.

Administering Ringing - Abbreviated and Delayed

The following steps are part of the administration process for the Ringing - Abbreviated and Delayed feature:

- [Assigning ring control to a user](#)
- [Assigning an abbreviated ringing button to a user](#)

This section describes:

- Any prerequisites for administering the Ringing - Abbreviated and Delayed feature
- The screens that you use to administer the Ringing - Abbreviated and Delayed feature
- Complete administration procedures for the Ringing - Abbreviated and Delayed feature

Prerequisites for administering Ringing - Abbreviated and Delayed

You must complete the following actions before you can administer the Ringing - Abbreviated and Delayed feature:

- Assign the number of rings before a transition

To assign the number of rings before a transition:

1. Type **change system-parameters features**. Press **Enter**.

The system displays the [Figure 305: Feature-Related System Parameters](#) on page 1167).

Figure 305: Feature-Related System Parameters

change system-parameters features	page 1
FEATURE-RELATED SYSTEM PARAMETERS	
Self Station Display Enabled?	n
Trunk-to-Trunk Transfer?	none
Automatic Callback - No Answer Timeout Interval (rings):	4_
Call Park Timeout Interval (minutes):	10
Off-Premises Tone Detect Timeout Interval (seconds):	20_
AAR/ARS Dial Tone Required?	y
Music/Tone On Hold:	music
Port:	_____
Music (or Silence) On Transferred Trunk Calls:	all
DID/Tie/ISDN/SIP Intercept Treatment:	attd
Internal Auto-Answer of Attd-Extended/Transferred Calls?	y
Automatic Circuit Assurance (ACA) Enabled?	y
ACA Referral Calls:	local
ACA Referral Destination:	_____
ACA Short Holding Time Originating Extension:	_____
ACA Long Holding Time Originating Extension:	_____
Abbreviated Dial Programming by Assigned Lists:	
Auto Abbreviated/Delayed Transition Interval(rings):	
Protocol for Caller ID Analog Terminals:	Bellcore
Display Calling Number for Room to Room Caller ID Calls?	

2. In the **Auto Abbreviated/Delayed Transition Interval (rings)** field, type the number of rings before the system performs an automatic abbreviated transition or delayed transition for a call. You can type a number from **1** to **16**.
3. Press **Enter** to save your changes.

Screens for administering Ringing - Abbreviated and Delayed

Screen name	Purpose	Fields
Feature-Related System Parameters	Assign the number of rings before the system performs an automatic abbreviated transition or a delayed transition for a call.	Auto Abbreviated/Delayed Transition Interval (rings)

Screen name	Purpose	Fields
Station	Allow a user to select ringing for call appearances.	Per Button Ring Control
	Assign an abrv-ring button to a user.	Any available button field in the Feature Buttons area

Assigning ring control to a user

To assign ring control to a user:

1. Type **change station *n***, where *n* is the number of the extension to which you want to assign ring control for a user. Press **Enter**.

The system displays the **Station** screen.

2. Click **Next** until you see the **Per Button Ring Control** field ([Figure 306: Station screen](#) on page 1168).

Figure 306: Station screen

change station 75001
Page 2 of 4

STATION

FEATURE OPTIONS

LWC Reception? spe	Auto Select Any Idle Appearance? n
LWC Activation? y	Coverage Msg Retrieval? y
LWC Log External Calls? n	Auto Answer: none
CDR Privacy? n	Data Restriction? n
Redirect Notification? y	Idle Appearance Preference? n
Per Button Ring Control? n	Restrict Last Appearance? y
Bridged Call Alerting? n	
Active Station Ringing: single	
H.320 Conversion? n	Per Station CPN - Send Calling Number? _
Service Link Mode: as-needed	
Multimedia Mode: basic	
MWI Served User Type: _____	Display Client Redirection? n
Automatic Moves:	Select Last Used Appearance? n
AUDIX Name:	Coverage After Forwarding? _
Recall Rotary Digit? n	Multimedia Early Answer? n

Remote Softphone Emergency Calls: as-on-local Direct IP-IP Audio Connections? n

Emergency Location Ext: 75001 IP Audio Hairpinning? n

3. In the **Per Button Ring Control** field, perform one of the following actions:

- Type **y** if you:
 - Want users to select ringing individually for each call appearance, bridged call appearance, or analog bridged call appearance on the telephone, and
 - Want to enable the automatic abbreviated and delayed ring transition for each call appearance on the telephone, and
 - Do not want the system to automatically move the line selection to a silently alerting call, unless that call was audibly ringing earlier
- Type **n** if you want:
 - Calls on call-appr buttons to always ring the telephone, and
 - The value in the **Bridged Call Alerting** field of the **Station** screen to control whether calls ring on the brdg-appr or the abrdg-appr buttons, and
 - The system to move the line selection to a silently alerting call, if no call is audibly ringing the telephone

4. Press **Enter** to save your changes.

Assigning an abbreviated ringing button to a user

To assign an abbreviated and delayed feature button to a user:

1. Type **change station n**, where **n** is the number of the extension to which you want to assign an abbreviated and delayed feature button for a user. Press **Enter**.

The system displays the **Station** screen.

2. Click **Next** until you see the **Button Assignments** area ([Figure 307: Station screen](#) on page 1170).

Figure 307: Station screen

change station 32009		Page 3 of 4
STATION		
SITE DATA		
Room:		Headset? n
Jack:		Speaker? n
Cable:		Mounting: d
Floor:		Cord Length: 0
Building:		Set Color:
ABBREVIATED DIALING		
List1:	List2:	List3:
BUTTON ASSIGNMENTS		
1: call-appr	7:	
2: call-appr	8:	
3: call-appr	9:	
4: abrv-ring Ext:	10:	
5:	11:	
6: headset	12: release	

3. Type **abrv-ring** next to the button that you want the user to use to cause a call that rings to transition from ringing to silence, or silence to ringing.

When you type **abrv-ring** next to the button, the system displays an **Ext:** field.

4. (Optional) In the **Ext:** field, type the extension of the other user to whom you want to assign the abbreviated ringing button.
5. Press **Enter** to save your changes.

Reports for Ringing - Abbreviated and Delayed

The following reports provide information about the Ringing - Abbreviated and Delayed feature:

- None

Considerations for Ringing - Abbreviated and Delayed

This section provides information about how the Ringing - Abbreviated and Delayed feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Ringing - Abbreviated and Delayed under all conditions. The following considerations apply to Ringing - Abbreviated and Delayed:

- You cannot assign Ringing - Abbreviated and Delayed to an attendant console.
- You can assign the Ringing - Abbreviated and Delayed feature to analog telephones. However, because analog telephones cannot visually alert, a user can unexpectedly answer an incoming call, when the user intends to originate a call.

Interactions for Ringing - Abbreviated and Delayed

This section provides information about how the Ringing - Abbreviated and Delayed feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Ringing - Abbreviated and Delayed in any feature configuration.

- **Call Coverage**

If the number-of-rings interval for coverage is shorter than the automatic transition interval, the system redirects the call to coverage before the system audibly alerts a call appearance that has delayed ringing. However, the system continues to increment the timer for the automatic transition interval, in case no coverage point is available, and the call continues to alert at the telephone.

When a call is immediately redirected to coverage, the Ringing - Abbreviated and Delayed ringing has no effect on the system processes.

- **Call Forwarding - Busy/Don't Answer**

When the system forwards a call because no one answers the call in the specified interval, the call stops alerting at the telephone. The Ringing - Abbreviated and Delayed feature does not affect the manner in which the system processes the call. However, the system continues to increment the timer for the automatic transition interval, in case forwarding fails, and the call continues to alert at the telephone.

If the interval for call forward don't answer is shorter than the interval for automatic transition, the system redirects the call to the forwarded-to extension before the call rings at a telephone that has a ring type of delayed ringing.

- **Call Vectoring - Expert Agent Selection - Logical Agents**

Calls that the system routes to a logical agent use the translations for the Ringing - Abbreviated and Delayed feature of the telephone that the agent uses.

Ringling - Abbreviated and Delayed

- Data Extension Calls

Data Extension calls are unaffected by the ring values. The calls continue to be directed according to the way that you administered bridged call alerting.

- Hospitality Features - Do Not Disturb

The Do Not Disturb feature takes precedence over the Ringling - Abbreviated and Delayed feature in blocking ringing to the telephone.

- Integrated Services Digital Network (ISDN) - World Class Basic Rate Interface (BRI)

Several of the protocol variations that the World Class BRI feature supports do not allow the messaging that is required for control of a telephone ringer by the Ringling - Abbreviated and Delayed feature. If the protocol variations do not permit the required messaging for the telephone ringer, the system rings the call at the telephone, and does not transition the ring.

- Multiappearance Preselection and Preference

If the **Per Button Ring Control** field on the **Station** screen is set to **n**, the system automatically selects any call that alerts at a telephone. The call can alert in a manner other than ringing.

If the **Per Button Ring Control** field on the **Station** screen is set to **y**, the system automatically selects any call that rings at a telephone.

- Off-Premises Station (OPS) and Off-Premises Extension (OPX) lines

You must use a ring type of **ring** for OPS and OPX lines.

- Personal Central Office Line (PCOL) calls

Ring values do not affect the processing of PCOL calls. PCOL calls continue to be directed according to the way that you administer bridged call alerting.

- Redirection Notification

If you enable Redirection Notification, telephones receive redirection notification only if the alerting button, or the first call appearance, has an assigned ring value of **ring** or **abrvg-ring**.

- Terminating Extension Group (TEG) calls

Ring values do not affect the processing of TEG calls. TEG calls continue to be directed according to the way that you administer bridged call alerting.

- Voice mail systems

Voice mail systems might look for ringing that is applied to a port to trigger call answer. Ring-type translations that are inappropriately set for ports that serve a voice mail system, can result in undesirable operation of the adjunct.

Security Violation Notification

Use the Security Violation Notification (SVN) feature to notify a designated referral point about a possible security violation. A designated referral point can be an attendant console, a display-equipped telephone, or a telephone without a display for SVN referral calls with announcements.

The system monitors and reports on the following types of security violations:

- Login violations
- Remote access barrier code violations
- Authorization code violations
- Station security code violations

Avaya Communication Manager provides the option to log a major alarm if a security violation occurs involves an Avaya services login ID. Avaya is responsible for retiring the alarm.

Detailed description of Security Violation Notification

This section provides a detailed description of the Security Violation Notification (SVN) feature:

- Security violation thresholds and notification
- Sequence of events
- Reporting
- SVN - halt buttons
- SVN Referral Call With Announcement
- Dealing with Security Violations

To effectively monitor the security of your system, you must know how often both valid and invalid attempts at system entry are normally made. A significant increase in such attempts can mean the system is being compromised.

Note:

Avaya recommends that you print and clear the security violation measurement reports at least once a month. In a busy system, you must print security-violation measurement reports often.

Security violation thresholds and notification

For example, you might determine that during a 40 hour week, the normal condition is for users to submit about 1,000 valid barrier codes and 150 invalid barrier codes. That is, about 3.75 invalid barrier codes submitted per hour.

With this information, you might decide to declare that a security violation occurs during any hour in which eight invalid barrier codes are submitted. If you know that during an 8-hour period, about 30 invalid codes are submitted, you might set the threshold to count a security violation when 40 invalid codes are submitted within eight hours.

You can administer SVN to place a referral call to the location of your choice whenever the established thresholds are reached. All SVN referral calls are priority calls.

Invalid attempts accumulate at different rates for login, authorization-code, remote-access, and station-security code depending on feature usage and the number of users on a server. For this reason, you administer thresholds separately for each type of violation.

Sequence of events

The following sequence of events occurs when an SVN is enabled and a detects a security violation:

1. The number of invalid attempts that are permitted in a specified time interval is exceeded.
2. An SVN referral call (with announcements, if assigned) is placed to a designated point, and SVN provides an audit trail that contains information about each attempt to access server that is running Communication Manager.
3. SVN disables a login ID or remote access following the security violation.
4. The login ID or remote access remains disabled until someone with an authorized login ID, with the correct permissions reenables it.

Reporting

The system reports information about security violations in the following ways:

- In real time. You can use the **monitor security-violations** command to monitor security violations as they may be occurring. Enter this command, and then the type of security violation you want to monitor (logins, remote-access, authorization-codes, or station-security-codes).

- On an immediate basis. When a security violation occurs, the system sends a priority call to a designated referral point (attendant console or phone). Thus, there is some chance of apprehending the violator during the attempted violation.

Upon notification, you can request the Security Violations Status Reports, which show details of the last 16 security violations of each type. The Barrier Code and Authorization Code reports, also include the calling party number from which the attempt was made, where available.

- On a historical basis. The number of security violations of each type and other security measurements, are collected and displayed in the Security Violations Summary and Detail reports. These reports show summary information since the counters were reset by the **clear measurements security-violations** command or since system initialization. These reports do not show all aspects of the individual security violations.

SVN - halt buttons

You can administer buttons for the notification extension to stop notification calls. However, this might pose a security risk. Do not use these buttons if you do not really need them.

To find out what svn - halt buttons exist in the system, type **display svn-button-location**. Press **Enter**.

SVN Referral Call with Announcement

The SVN Referral Call with Announcement option can provide a recorded message with the referral call identifying the type of violation. You can use Call Forwarding, Call Coverage, or Call Vector Time-of-Day Routing to route to an extension or a number off the media server or switch. SVN referral calls with announcements terminate to a point that is either on or off the switch.

Use of other means to route SVN referral calls to alternate destinations are not supported at this time. An attempt to use an alternate method to route SVN referral calls might result in a failure to receive the call or to hear the announcement.

Dealing with Security Violations

When a security violation occurs, you can disable the login ID or the remote access privileges of the user who commits the violation.

Disabling a login ID

To disable a login for one of your users:

1. Log in to Communication Manager with a login ID that has the correct permissions.
2. Type **disable login *n***, where *n* is the login ID of the user. Press **Enter**.

Enabling a login ID

To enable a login ID:

1. Log in to Communication Manager with a login ID that has the correct permissions.
2. Type **enable login *n***, where *n* is the login ID of the user. Press **Enter**.

Enabling remote access

To enable remote access:

1. Log in to Communication Manager with a login ID that has the correct permissions.
2. Type **enable remote-access**. Press **Enter**.

Disabling remote access

To disable remote access:

1. Log in to Communication Manager with a login ID that has the correct permissions.
2. Type **disable remote-access**. Press **Enter**.

Administering Security Violation Notification

The following steps are part of the administration process for the Security Violation Notification (SVN) feature:

- [Setting up Security Violation Notification](#)

This section describes:

- Any prerequisites for administering the Security Violation Notification (SVN) feature
- The screens that you use to administer the Security Violation Notification (SVN) feature
- Complete administration procedures for the Security Violation Notification (SVN) feature

Prerequisites for administering Security Violation Notification

- None

Screens for administering Security Violation Notification

Screen name	Purpose	Fields
Login Administration	Set up security violation notification.	Disable Following A Security Violation
Security-Related-System Parameters	Set up security violation notification.	• SVN Login Violation Notification • Originating Extension • Referral Destination • Login Threshold • Time Interval
Remote Access	Set up security violation notification.	Disable Following A Security Violation
Station	Set up security button assignments.	Any available button field in the Button Assignments area

Setting up Security Violation Notification

To set up Security Violations Notification:

1. Type **change system-parameters security**. Press **Enter**.

The system displays the **Security-Related System Parameters** screen ([Figure 308: Security Related System Parameters screen](#) on page 1178).

Figure 308: Security Related System Parameters screen

change system-parameters security
Page 1 of 2

SECURITY-RELATED SYSTEM PARAMETERS

SECURITY VIOLATION NOTIFICATION PARAMETERS

SVN Login Violation Notification Enabled? y

Originating Extension: 3040_ Referral Destination: attd_

Login Threshold: 3_ Time Interval: 0:03

Announcement Extension: _____

SVN Remote Access Violation Notification Enabled? y

Originating Extension: 2719_ Referral Destination: 2720_

Barrier Code Threshold: 3 Time Interval: 0:03

Announcement Extension: _____

SVN Authorization Code Violation Notification Enabled? y

Originating Extension: 3030_ Referral Destination: 3031_

Authorization Code Threshold: 3 Time Interval: 0:03

Announcement Extension: _____

2. In the **SVN Login Violation Notification Enabled** field, type **y**.

This action sets Security Violation Notification login violation notification.

Note:

If you are not using Security Violation Notification for logins, type **n** in the **SVN Login Violation Notification Enabled** field and go to Step [11](#).

3. In the **Originating Extension** field, type **3040**.

This becomes the phone extension for the purpose of originating and identifying SVN referral calls for login security violations.

4. In the **Referral Destination** field, type **attd** to send all calls to the attendant.

This is the extension of the telephone that receives the referral call when a security violation occurs.

5. In the **Login Threshold** field, type **3**.

This is the minimum number of login attempts that are permitted before a referral call is made. More than 3 attempts causes a security violation notification.

6. In the **Time Interval** field, type **0:03**.

This the time interval in which the threshold, or number of violations, must occur.

7. Press **Enter** to save your changes.

8. (Optional) Type **change login nnnn**, where **nnnn** is your login ID.

The system displays the **Login Administration** screen ([Login Administration screen](#) on page 1179).

Figure 309: Login Administration screen

add login
Page 1 of 2

LOGIN ADMINISTRATION

Password of Login Making Change:

LOGIN BEING ADMINISTERED

Login's Name:xxxxxxx
 Login Type:
 Service Level:

Disable Following a Security Violation?
Access to INADS Port? _

LOGIN'S PASSWORD INFORMATION

Login's Password:
 Reenter Login's Password:
 Password Aging Cycle Length (Days):

LOGOFF NOTIFICATION

Facility Test Call Notification?
 Remote Access Notification?

Acknowledgment Required?
 Acknowledgment Required?

ACCESS SECURITY GATEWAY PARAMETERS

Access Security Gateway?

9. (Optional) In the **Disable Following A Security Violation** field, type **y**.

This disables a login following detection of a login security violation for the login you are administering.

10. Press **Enter** to save your changes.

Note:

If you are not using Remote Access, go to Step [14](#).

11. (Optional) Type **change remote-access**. Press **Enter**.

The system displays the **Remote Access** screen ([Figure 310: Remote Access screen](#) on page 1180).

Figure 310: Remote Access screen

REMOTE ACCESS

Remote Access Extension_____Barrier Code Length_____

Authorization Code Required? yRemote Access Dial Tone: n

Barrier Code	COR	TN	COS	Expiration Date	No. of Calls	Calls Used
1:_____	1_	1_	1_	__/_/___	_____	_____
2:_____	1_	1_	1_	__/_/___	_____	_____
3:_____	1_	1_	1_	__/_/___	_____	_____
4:_____	1_	1_	1_	__/_/___	_____	_____
5:_____	1_	1_	1_	__/_/___	_____	_____
6:_____	1_	1_	1_	__/_/___	_____	_____
7:_____	1_	1_	1_	__/_/___	_____	_____
8:_____	1_	1_	1_	__/_/___	_____	_____
9:_____	1_	1_	1_	__/_/___	_____	_____
10:_____	1_	1_	1_	__/_/___	_____	_____

Permanently Disable? __ Disable Following A Security Violation? y

(NOTE: You must logoff to effect permanent disabling of Remote Access)

12. (Optional) In the **Disable Following A Security Violation** field, type **y**.
This disables remote access following detection of a remote access security violation.
13. (Optional) Press **Enter** to save your changes.
14. Type **change station n**, where **n** is the station that you want to assign to the notification halt button. Press **Enter**.
The system displays the **Station** screen.
15. Click **Next** until you see the **Button Assignments** area ([Figure 311: Station screen](#) on page 1181).

Figure 311: Station screen

STATION		Page 3 of 4
SITE DATA		
Room: _____		Headset? n
Jack: _____		Speaker? n
Cable: _____		Mounting: d
Floor: _____		Cord Length: 0_
Building: _____		Set Color: _____
ABBREVIATED DIALING		
List1: _____	List2: _____	List3: _____
BUTTON ASSIGNMENTS		
1: asvn-halt	4: _____	
2: _____	5: _____	
3: _____		

16. In the **Button Assignments** area, type one of the following values:

- **asvn-halt** - The Authorization Code Security Violation Notification call is activated when an authorization code security violation is detected. This applies only if you are using authorization codes.
- **lsvn-halt** - The Login Security Violation Notification call is activated a referral call when a login security violation is detected.
- **rsvn-halt** - The Remote Access Barrier Code Security Violation Notification call is activated as a call referral. This applies only if you are using Remote Access barrier codes.
- **ssvn-halt** - The Station Code Security Violation Notification call is activated when a station code security violation is detected. This applies only if you are using station codes.

Note:

Any of the above four security violations causes the system to place a notification call to the designated telephone. The call continues to ring until answered. To stop notification of any further violations, press the button associated with the type of violation.

17. Press **Enter** to save your changes.

Reports for Security Violation Notification

The following reports provide information about the Security Violation Notification feature:

- The Security Violations Status Report shows details of the last sixteen violations of each type. The Barrier Code and Authorization Code reports also include the calling party number from which the attempt was made, if that number is available.

For detailed information on these reports and the associated commands, , or see *Reports for Avaya Communication Manager*.

Considerations for Security Violation Notification

This section provides information about how the Security Violation Notification feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Security Violation Notification under all conditions. The following considerations apply to Security Violation Notification:

- You may administer only one referral destination per system for each type of violation.
- Use caution when you administer bridged appearances for stations that are used as SVN referral destinations. SVN referral calls terminating to bridged appearances *must* be accompanied by an announcement message or *must* route to bridge appearances equipped with a display module. SVN referral calls that do not have an announcement and terminate to a bridged appearance that does not have a display to provide an indication of the nature of the call.
- An authorization code violation with remote access generates two SVNs. One displays "authorization code violation" and the second SVN displays "barrier code violation," even though the correct barrier code was input. These two displays help you determine that the violation took place in the context of a remote access attempt, and not an attempt to place an outgoing call to an ARS trunk.

Interactions for Security Violation Notification

This section provides information about how the Security Violation Notification feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Security Violation Notification in any feature configuration.

- Call Coverage, Call Forwarding, and Call Pickup

These features are supported for SVN only if you use recorded announcements.

- Centralized Attendant Services (CAS)

CAS attendants cannot receive SNV referral calls from branch locations.

- Distributed Communications System (DCS)

SVN does not support referral calls across a DCS network.

Separation of Bearer and Signaling

Use the Separation of Bearer and Signaling feature to reduce the costs of private leased lines.

Detailed description of Separation of Bearer and Signaling

This section provides a detailed description of the Separation of Bearer and Signaling (SBS) feature.

SBS provides a low-cost, virtual private network over IP trunks with the high voice quality that is expected of the public switched telephone network (PSTN). Thus with SBS, you save on the costs of private leased lines.

With SBS distributed communication system plus (DCS+) customers can replace an expensive virtual private network (VPN) service if the customer needs Dial Plan Expansion (DPE) functionality. DCS does not work with 6-digit or 7-digit dial plans. Although QSIG works with 6-digit or 7-digit dial plans, QSIG does not work over VPNs. Customers can get enhanced signaling without private leased lines.

SBS also provides a transport mechanism for application data, and other enhanced functionality in locations where ISDN trunking is unavailable or expensive.

The SBS feature supports:

- QSIG private network signaling over a low-cost, IP-based network
- Voice calls (bearer traffic) over the PSTN
- Correct association between QSIG feature signaling information and each voice call.

You must always use Automatic Alternate Routing (AAR), Automatic Route Selection (ARS), or Uniform Dial Plan (UDP) to originate an SBS call. You cannot use a Trunk Access Code (TAC) or a Dial Access Code to originate an SBS call.

Administering Separation of Bearer and Signaling

This section describes the screens that you use to administer the Separation of Bearer and Signaling (SBS) feature.

Screens for administering Separation of Bearer and Signaling

Screen name	Purpose	Fields
Feature-Related System Parameters	Specify a valid country code for the SBS signaling trunk groups.	Local Country Code
	Specify the access code that the private switched telephone network (PSTN) requires to route calls out of the country.	International Access Code
ISDN Numbering - Public/Unknown	Specify information for ISDN processing.	All
Signaling Group	Enable SBS for a signaling group.	SBS
Station	Specify the SBS extension.	SBS Extension
Trunk Group	Enable SBS for a trunk group.	SBS

Reports for Separation of Bearer and Signaling

The following reports provide information about the Separation of Bearer and Signaling feature:

- None

Considerations for Separation of Bearer and Signaling

This section provides information about how the Separation of Bearer and Signaling (SBS) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Separation of Bearer and Signaling under all conditions. The following considerations apply to Separation of Bearer and Signaling:

- Call Detail Recording (CDR)

CDR functionality records the calling and the called number information, and the start and end times of each measured call. You administer this CDR functionality on a trunk-group basis within Communication Manager. At the end of a call, the information is made available to an adjunct server for functions such as costing, reports, and traffic analysis.

In the case of an SBS call, the data that is gathered and made available to the adjunct server does not change. However, since each trunk group that is involved in an SBS call can be administered to generate CDR reports, the system can generate two CDR records for each SBS call. The system generates one record for the SBS signaling call, and one record for the SBS bearer call. No way currently exists to link the separate SBS signaling and bearer CDR records.

Since the signaling and bearer CDR records cannot be linked, it might be preferable to measure only the bearer calls. The service provider is more likely to bill for the bearer calls. However, note that the SBS bearer call is always answered by the SBS extension, even though the actual called party does not answer the SBS call. Also note that the parties on the SBS bearer call are not the actual originating and terminating parties. The parties on the SBS bearer calls are "dummy" users, who are internal to Communication Manager for the sole purpose of originating and terminating the bearer call.

- Call Management System (CMS) and Basic Call Management System (BCMS)

You can administer the following entities to be measured for CMS or BCMS:

- A trunk group
- A Vector Directory Number (VDN)
- A hunt group

An SBS call can generate two separate CMS or BCMS records. The system can generate one record for the SBS signaling call, and one record for the SBS bearer call.

CMS and BCMS measure the SBS bearer call only if the bearer trunk group is administered to be measured. CMS and BCMS measure only the trunk bearer seize events and idle events.

The SBS signaling call is measured if the SBS signaling group is administered to be measured, or an endpoint on the SBS call is a measured object, such as an agent in a hunt group that is administered to be measured. The events that are measured on the SBS signaling call include not only the trunk signaling seize events and idled events, but also any endpoint events, such as agent hold.

The SBS signaling and bearer calls generate separate CMS or BCMS records with different Universal Call IDs (UCIDs). No way currently exists to link these separate records.

Interactions for Separation of Bearer and Signaling

This section provides information about how the Separation of Bearer and Signaling (SBS) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Separation of Bearer and Signaling in any feature configuration.

Overview

SBS provides a new type of trunk call that is called a separated trunk call. Many types of trunks can be used to carry the bearer portion of the separated call. Thus, SBS affects many Communication Manager features. Almost any feature that can interact with a trunk call can interact with SBS.

This section describes features that might interact with SBS calls. Other features might also interact with SBS in a minor way.

You must understand the way that SBS calls are configured internally to be able to understand why certain features can work with SBS calls, and others cannot. This general understanding also helps to accurately predict whether a feature that is not included in this section can successfully work with an SBS call.

Two important facts about the internal configuration of an SBS call are:

- SBS bearer and SBS signaling calls are tracked internally as separate calls for the life of the SBS call. Separate call records are created internally for each call to:
 - Allow the SBS bearer call to be carried over almost any type of trunk
 - Use the standard call establishment and tear-down code for that trunk type

The system cannot use the standard code if the bearer trunk is somehow "buried" as a nonstandard party in a "merged" signaling and bearer call record.

- The endpoint users are parties on the SBS Signaling call, and not on the SBS bearer call. In other words, the SBS signaling call controls call. Since endpoint user activity drives QSIG signaling only if a QSIG trunk is a party on the call, the SBS Signaling call must control the call. A QSIG trunk is guaranteed only if the endpoint user is associated with the SBS trunk, and not if the endpoint user is associated with the bearer trunk.

Understanding potential interactions

With these two facts about the internal configuration of an SBS call, the following general observations about feature interactions with SBS calls can be made:

- Most features work with SBS

A significant number of the features that can interact with an SBS call work as those features do with any other QSIG trunk call.

- Delay applies to all SBS calls

For features that do work with SBS calls, the standard SBS delay applies. However, some of the following feature interaction descriptions do not specifically mention SBS delay.

- Call status

Any query or report that is related to an endpoint user on an SBS call indicates the call ID of the SBS signaling call, and the trunk ID of the signaling, not the bearer, trunk. For example, a **status station** command that is issued against a telephone on an SBS call shows the telephone that is connected to an SBS trunk.

- Feature signaling interworks to and from SBS signaling calls

Any feature information that is interworked from a non-SBS leg of a call to an SBS leg of a call is transported on the SBS signaling call, and not on the SBS bearer call. Likewise, any feature information that is interworked from an SBS leg of a call to a non-SBS leg of a call is taken from the SBS signaling call, and not from the SBS bearer call.

- Two records per SBS call

Any feature that reports or records status for a call can create two different reports or records for a single SBS call. The feature can create one report or record for the signaling trunk, and a second report or record for the bearer trunk. For example, with Call Detail Recording (CDR), the result depends on whether both trunks groups are administered to produce call detail records.

- Bearer trunk signaling features

Features that require signaling over a non-QSIG type of trunk do not work with SBS calls. The endpoint users are not parties on the SBS bearer call, and so user activity cannot drive any feature signaling on the bearer call. Similarly, any feature signaling that is received on the bearer call cannot drive any notification or displays to the endpoint user. For example, public or private network-specific (non-QSIG) Malicious Call Trace (MCT) network notification and Advice of Charge (AOC) display functionality do not work with SBS calls.

- Bearer trunk user features

Features that are related to the SBS bearer call that require activation or acknowledgement from an endpoint user do not work with SBS calls. Such features do not work with SBS calls, because the endpoint user is not a party on the bearer call. For example, queuing of the SBS bearer call does not work because the real originating party is not on the bearer call.

Separation of Bearer and Signaling

- Early-answer features

Features that require early answer, for example, to pass tones, do not work with SBS calls. Such features do not work with SBS calls because when the signaling call is answered, the bearer call is not started. When the bearer call is first answered, the call is for the SBS extension at the terminating node. For example, authorization code collection on incoming calls and direct calls to remote access does not work with SBS calls.

- Network features that send tones when the bearer call answers do not work

Network features that send tones when the bearer calls do not work with SBS. When the bearer call is answered, the call is for the SBS extension. The final telephone user is not on the call to hear the tones. For example, the user does not hear the dual-tone multifrequency (DTMF) notification when a network call is eligible to be transferred, such as with Take-back and Transfer.

General system features

- Media processor resources are not used by the SBS trunks, which carry only SBS signaling calls. SBS bearer calls require media processor resources if IP trunks are used. You can encounter degradation of voice quality if you use IP trunks for bearer calls.
- Shuffling and hairpinning work with SBS bearer calls if you use P trunks. The SBS bearer call originates with the same "shufflable endpoint" characteristics as the originator.
- The system obtains the contents of the Incoming Call Identification (ICI) display for an SBS call from the SBS signaling call, and not the bearer call.
- The system uses the Class of Restriction (COR) of the SBS call originator to set up the SBS bearer call.
- The system routes the SBS signaling and bearer calls separately. Use caution when you administer Toll Restriction, Toll Analysis, and Toll/Code restriction so that you do not block calls that should be allowed.
- The Class of Service (COS) Trunk-to-Trunk Transfer permission affects the transfer of SBS trunk calls in the same way as for non-SBS trunk calls.
- SBS calls follow the Station Hunting of the originally called party.
- When Tenant Partitioning is active in an enterprise, existing Tenant Partitioning rules apply to endpoints, SBS extensions, SBS trunk groups, and the bearer trunk groups that are involved in any SBS call.
- SBS works with Dial Plan Expansion of 6-digit or 7-digit extensions.
- Standard Malicious Call Trace (MCT) on an incoming SBS call records the bearer trunk call.

Attendant

Attendant features that do not work with SBS

- Attendant Control of Trunk Group Access does not work with an SBS Trunk Group.
- Centralized Attendant Service (CAS) does not work over SBS trunks, since CAS requires release link trunks (RLT). However, you can use CAS to direct an incoming SBS call to a centralized attendant over an RLT. Likewise, a centralized attendant can extend a call over an RLT, that the system then routes to an SBS trunk.

Attendant features that work with SBS

- Attendant Direct Extension Selection (DXS) can be used to originate an SBS call that uses Uniform Dial Plan (UDP).
- Attendant Intrusion can be used to intrude on an SBS call.
- Attendant Recall works with an SBS call
- Attendant Return Call and Serial Calling work with an incoming SBS call.
- Attendant transfer is applicable to an SBS call.
- An incoming SBS call can be parked, and is subject to Call Park Time-out to the Attendant.
- An SBS call can be a party in an attendant conference.
- An SBS call can be directed to an individual attendant access number.
- Inter-PBX attendant service works with SBS trunks.
- Incoming SBS calls follow attendant Night Service.
- Incoming SBS calls hear Recorded Announcements in the attendant queue.
- You can use Trunk Answer Any Station (TAAS) to answer an incoming SBS call.
- The Trunk Identification by Attendant feature identifies the SBS trunk group member.
- An SBS call can be held with Two-Party Hold on Console.
- Attendant Vectoring can receive and redirect attendant-directed calls over SBS trunks.

Adjunct Switch Applications Interface (ASAI)

- When you use Call Classification after Answer, do not use SBS to route calls. Do not use SBS because the Call Classifier must be on the bearer trunk, and the SBS-invoked DTMF signaling that is sent on the bearer trunk causes interferences.
- ASAI Phantom call, such as DEFINITY Anywhere, can originate or receive an SBS call.
- ASAI Selective Listening works on an SBS trunk party on a call.
- ASAI Send DTMF works on a connected SBS call.
- ASAI Single Step Conference can add another station onto a call with an SBS call.
- ASAI Provided Dial-Ahead Digits work when the incoming call is an SBS call.
- Any ASAI user data, Universal Call ID, or both that are currently transported or interworked over QSIG trunks, are sent on the SBS signaling call.
- When an SBS call is received and subsequently tandemed over an SBS trunk, any II Digits that are received in the SETUP message to the incoming SBS Signaling call are tandemed with the SBS signaling call.
- The information that is provided in response to an ASAI Value Query indicates whether an SBS trunk or an associated bearer trunk is idle or busy. The response is reported based on the UID in the query message, and whether the response was for the signaling or the bearer trunk.
- For ASAI Event Reports, Communication Manager reports the Call ID and the Trunk ID of the SBS trunk. ASAI should provide the Trunk ID of the associated bearer trunk to the ASAI Event Reports and Adjunct Route message.

Intuity AUDIX and Octel voice mail adjuncts

- Centralized voice mail with Interswitch Mode Codes does not interwork with SBS trunks. For that application, the tie trunks between the servers that run Communication Manager cannot use the QSIG protocol. While those trunks might be used for SBS bearer calls, it is unlikely that when this methodology is implemented, SBS is also implemented.
- Leave Word Calling with Message Wait Indicator over QSIG (QSIG LWC MSI) uses SBS to support Digital Line Emulation integration for centralized voice mail.
- SBS supports Intuity centralized Intuity AUDIX from a served user switch.
- Where an Octel Serenade is connected to Communication Manager with QSIG, the server that runs Communication Manager is the SBS terminating node that interworks to the Serenade, since the Serenade does not support SBS.

Call Center

Automatic Call Distribution (ACD)

- Look Ahead Interflow (LAI) might not function correctly on an SBS call, because of the SBS call setup delay. If the SBS delays are a problem, you might use Non Call Associated (NCA) Temporary Signaling Connection (TSC) instead of LAI to poll by Best Service Routing (BSR).
- If Outbound Calling is done from a Call Center, and the call uses SBS to call another Communication Manager system, the call is affected by the normal SBS call setup delays. Outbound Calling over SBS trunks must not use Call Classification, since there will be interference from the DTMF signaling that is invoked by SBS and sent to identify the correct bearer call at the terminating end.
- Dialed Number Information Service (DNIS) and Original Dial Number Delivery service from a service provider can deliver an SBS bearer call to an SBS extension in an SBS terminating node.
- When an incoming ACD call arrives by way of an SBS trunk, transfers by an agent to another agent or to an application work properly.
- An incoming SBS call can hear any announcements that are associated with the Call Center.
- The Agent Assist functionality works when the incoming call arrives over SBS.
- Displays at the agent terminals function correctly when the incoming call arrives over SBS. This includes Vector Collected digits.
- Multiple Call Handling works when arriving calls are incoming SBS calls.
- An incoming SBS call that receives Redirect on No Answer (RONA) works correctly.
- SBS calls that receive intraflow, interflow, or hunt group night service treatment are routed in the same way as a non-SBS call.
- Any ISDN call data, R2MFC call data, or both ISDN and R2MFC data that is currently interworked to or from a QSIG trunk is sent on (retrieved from) the SBS signaling call at the SBS interworking node. Such call data includes calling party number, II Digits, CINFO digits, and so on.
- Call Center data that is currently transported on QSIG trunks is sent on the SBS signaling call.
- When an ACD call is transferred to an agent via an SBS trunk connection on another system that runs Communication Manager, all associated call information that is currently transported on a QSIG trunk is sent on the SBS signaling call.
- All types of Service Observing functions work on SBS calls in the same way as for non-SBS calls.

Best Service Routing

- Polling by Best Service Routing (BSR) can use SBS signaling facilities if the NCA-TSC version of BSR Polling is used, and adequate resources are available. The non-NCA-TSC version of BSR Polling might not work because of the SBS call setup delays.
- BSR interflow over SBS trunks, including incoming call data forwarding and Enhanced Information Forwarding, are supported.

Vectors

- Routing on Automatic Number Identification (ANI) by a vector can use SBS to route an outgoing call. For an incoming SBS call, the Routing on ANI functionality uses the ANI from the SBS signaling call.
- Correct routing over SBS trunks works when a vector step exists for routing on ANI or II digits, or a route-to number step, and interflow is invoked.
- Post-Connect in-band DTMF signaling for Call Prompting collect steps and Auto Attendant functionality both work.
- When CINFO Digit Routing occurs, and the call is routed over an SBS trunk, the information is tandemed with the call.
- Vector Routing Tables can use SBS trunks to route calls.
- Incoming SBS calls still provide VDN of Origin announcements (VOA) and displays to the agent who answers the call.
- VDN Return Destination works with SBS calls.

Networking Related Interactions

Networking features or capabilities that do not work

- Authorization codes cannot be collected on an incoming SBS signaling call or on an SBS bearer call. Such codes might be required through administration of the incoming trunk group or because of insufficient Facilities Restriction Level (FRL) on a tandem call. Authorization codes cannot be collected on incoming SBS signaling calls because the SBS bearer call is not established at the time that the system usually prompts for and signals an authorization code. Also, authorization codes cannot be collected on incoming SBS bearer calls because the originating endpoint user is not a party on the SBS bearer call.
- When the bearer call is transported through Message Oriented Signaling trunks ISDN, information in the SBS bearer call D-channel is not displayed to the end users. The information is not displayed because the signaling in the SBS signaling call overwrites the information.

- User information that is in the SBS bearer leg of the call is ignored.
- Australian Malicious Call Trace (MCT) cannot be invoked on an SBS call because:
 - End-user activity drives feature signaling only on the SBS signaling call, and not on the SBS bearer call
 - An SBS trunk does not support the Australia public network protocol

The normal MCT feature within Communication Manager records the call as usual.

- ETSI MCT cannot be invoked on an SBS call because:
 - End-user activity drives feature signaling only on the SBS signaling call, and not on the SBS bearer call
 - An SBS trunk does not support ETSI protocol

The normal MCT feature within Communication Manager records the call as usual.

- Calling Line ID Prefix information is ignored when the information is transported in conjunction with an associated bearer trunk.
- Advice of Charge (AOC) information that is received on an SBS bearer call is not displayed to the end user. However, AOC information is conveyed to the CDR port for the SBS bearer call record. Only SBS trunk information affects end-user displays.
- ETSI Network Call Deflection (NCD) does not work with an SBS call. For SBS, the signaling that controls the call is in the SBS signaling call on the QSIG interface. NCD, however, requires an ETSI interface that is available only on SBS bearer calls.
- ETSI Network Call Transfer (NCT) does not work with an SBS call. For SBS, the signaling that controls the call is in the SBS Signaling call on a QSIG interface. NCT, however, requires an ETSI interface that is available only on the SBS bearer call.
- Direct SBS calling into Remote Access does not work. Barrier Codes cannot be collected for SBS calls to Remote Access because the SBS bearer call has not yet been established when such tones are prompted for or expected. However, an SBS call can invoke Remote Access by means of a vector collect or a route-to command.
- SBS does not support Wideband Switching (NxDSO).
- Russian Incoming ANI with a button does *not* display the ANI that is received in the SBS bearer call. The system displays to the end user only the ANI that is received on the SBS signaling call.
- Trunk Flash to get recall dial tone from a central office (CO) does not work. End-user activity drives signaling on the SBS signaling call only, and not on the SBS bearer call. QSIG Call Transfer functionality can be used instead.
- R2 MultiFrequency Compelled (MFC) Intercept treatment must drop the SBS bearer and SBS signaling calls, and does so by applying the appropriate treatment to the call originator based on what is received on the R2 MFC bearer call.

Networking features or capabilities that work

- When authorization codes are required to access the SBS trunk, authorization codes can be collected. The reason is that authorization codes are collected locally before the outgoing trunk is seized.
- Calling Party Number (CPN) restriction can be administered for and signaled on both the SBS signaling and SBS bearer calls. However, end-user displays, including any restrictions, are populated from information that is carried in the SBS signaling call, and not from information in the SBS bearer call.
- At an SBS Interworking node, DCS and DCS+ signaling on the non-SBS portion of the call is interworked to and from the SBS signaling call, to the extent that DCS-QSIG interworking currently applies.
- A DCS trunk can be used as the bearer trunk on an SBS call. However, any DCS signaling information that is received on the Bearer call is overridden by the QSIG signaling information that is received on the SBS signaling call.
- User information that is received on an SBS signaling call by an SBS tandem node, or received on a non-SBS trunk by an SBS interworking node, is sent on the SBS signaling call, per current tandeming or interworking procedures on QSIG trunks.
- Temporary Signaling Connection (TSC) messages can be sent over an SBS trunk.
- Look Ahead Routing can be used with both SBS signaling and SBS bearer calls, if such calls start on ISDN trunks.
- In regions where Feature Plus (F+) is offered, SBS calls can use the pseudo-DID functionality of F+ to avoid the need to obtain direct inward dialing (DID) or DDI numbers from a service provider. You must administer SBS extensions at the SBS terminating node, but these numbers do not need to correspond with real DID or DDI numbers. CPN prefix administration at the SBS terminating node must map the SBS extension to a number that is a national complete number, except that the SBS extension portion is not recognized by the PSTN. ARS at the SBS originating node must route this number to a route pattern preference that supports F+. The "No. Dgts SubAddress" administration for this preference must indicate the length of the SBS extension at the SBS terminating node. This number is the number of digits that are extracted from right to left, and sent in the Calling Party Subaddress Information Element. Administration for this preference must also delete the SBS extension digits, and insert the Listed Directory Number (LDN) extension of the SBS terminating node in its place. The SBS bearer call is routed to the LDN at the SBS terminating node. F+ functionality at the SBS terminating node then routes the call to the SBS extension that is passed in the Subaddress IE, instead of to the attendant. Multiple route patterns are needed at the SBS originating node, if the SBS terminating node uses SBS extensions of various lengths.

SBS extensions that are used with F+ cannot be longer than 5 digits, because F+ is not included in Dial Plan Expansion.
- QSIG MSI messages are sent in the SBS Signaling link. The system ignores any messages that are in the SBS bearer call.

- QSIG Call Completion works with SBS calls.

Both the original call and the "call-back call" incur separate SBS delays if the call uses SBS trunks.

- QSIG Call Transfer works with SBS calls.

Both the original call and the second call to the transferred-to party incur separate SBS delays if the call uses SBS trunks.

- QSIG Diversion, forward switch and reroute, works with SBS calls.

Both the original call and the second call, to the forwarded-to party, incur separate SBS delays if the call uses SBS trunks.

- QSIG Path Replacement works with SBS calls.

The entire SBS call, both the SBS signaling call and the associated SBS bearer call, are replaced. All separate calls, the original call, the call to the transferred-to party, and then the path replacement call, incur separate SBS delays if the calls use SBS trunks.

- QSIG Enhanced Path Replacement works with SBS calls. Multiple SBS delays apply.

- Non-Avaya QSIG MSI are tandemed to and from any non-SBS QSIG portion of an SBS call (at the SBS interworking node) and on the SBS signaling call (at an SBS tandem node) per existing QSIG transit operation.

- QSIG MWI works with SBS calls.

- QSIG Temporary Signaling Connections (TSCs), known as Call Independent Signaling Connections (CISCs) in QSIG literature, are supported. Non Call Associated Temporary Signaling Connections (NCA TSCs) are signaling-only connections that transport feature information. While NCA TSCs can be initiated as a result of some activity on a bearer call, NCA TSCs are independent of bearer calls. NCA TSCs are set up as nonbearer calls, and use a call reference value (CRV) that is different than any CRV that is in use on any other existing bearer or signaling call on that interface.

Communication Manager supports two different NCA TSC protocols. Use the signaling group **Supplementary Service Protocol** field on the **Signaling Group** screen to administer these protocols. The **Supplementary Service Protocol** field is set to **a** for AT&T NCA TSCs, and to **b** for QSIG NCA TSCs (CISCs).

For full QSIG functionality, you must set the **Supplementary Service Protocol** field on both the **Trunk Group** screen and the **Signaling Group** screen to **b** (QSIG). You must set this field to **b**, because some QSIG features, such as QSIG Call Completion and QSIG Message Waiting Indication, use QSIG feature signaling on both the bearer call and on an NCA TSC to work properly.

- QSIG Centralized Attendant Service with MSI works with SBS calls.

- QSIG transit capabilities are supported with SBS calls through tandeming of QSIG signaling to and from any non-SBS QSIG portion of an SBS call (at the SBS interworking node), and on the SBS signaling call (at an SBS tandem node), per existing QSIG transit operation.

Separation of Bearer and Signaling

- QSIG VALU signaling works with SBS calls. You might need to increase the timer that is used to return QSIG VALU Call Coverage calls back when the calls are unanswered, so that SBS delays do not cause such calls to be returned prematurely. Use the **Local Cvg Subsequent Redirection/CFWD No An Interval (rings)** field on the **System Parameters Call Coverage/Call Forwarding** screen to administer the timer.
- QSIG Called/Busy Name ID is supported in the SBS signaling call.
- QSIG Calling/Connected Name/Number ID is supported in the SBS signaling call.
- QSIG Call Offer is supported in the same way as over normal QSIG trunks.
- Automatic Alternate Routing (AAR), Automatic Route Selection (ARS), or both AAR and ARS can be used to route the SBS signaling call. SBS bearer calls are routed by ARS only, but also can be directed to AAR from ARS.
- SBS calls to an analog station endpoint display the SBS signaling information if the endpoint is served by a TN793 or TN2793 port.
- The Russian Transit/Power Industry Tie Trunk is expected to work as an associated bearer trunk.
- The X-Station Mobility feature works for incoming or outgoing calls that are routed with SBS.
- Leave Word Calling (LWC) for Unanswered External Calls with Automatic Number Identification (ANI) is supported with the information in the SBS signaling call that is stored for the called party.
- ISDN Feature Plus calls are supported, as the SBS bearer call, with the SBS signaling call information that is used for endpoint displays.
- ISDN Calling Party Number Presentation options are supported by SBS in the SBS signaling call.
- QSIG/DCS Partial Reroute works is the same way as it does currently, with the SBS signaling call as the QSIG part of the call.
- DS1 With Echo Cancellation is supported for the SBS bearer call.

Service Observing

Use the Service Observing feature to allow designated users to listen to another user call.

Detailed description of Service Observing

This section provides a detailed description of the Service Observing feature.

This section describes service observing in environments without Automatic Call Distribution (ACD) or call vectoring. To use service observing in ACD or call vectoring environments, see *Avaya Communication Manager Contact Center Guide to ACD Contact Centers*.

With Service Observing, designated users, who are usually supervisors, can listen to other user calls. The user that observes the calls of another user is called an *observer*. Use the Service Observing feature to train agents, or to monitor the quality of service in call centers and other environments where employees serve customers over the telephone.



WARNING:

Listening to the call of another user can be subject to federal, state, or local laws, rules, or regulations. You might need to obtain the consent of one or both of the parties on the call. Ensure that you know, and comply with, all applicable laws, rules, and regulations when you use this feature.

An observer can monitor calls to any of the following entities:

- An extension
- A vector directory number (VDN), on systems with call vectoring
- A logical agent ID, on systems with Expert Agent Selection (EAS)

Observers can monitor calls in listen-only mode or listen-and-talk mode. In listen-and-talk mode, an observer can hear and speak with all parties on a call. The user that is monitored does not know that an observer listens to the call, unless you administer Avaya Communication Manager to provide a monitoring tone.

When an observer is off site, the observers can use remote access to monitor calls. In systems with call vectoring, a vector can control access to Service Observing.

If an observer uses a telephone that has a service observe button, the button:

- Blinks while the observer waits for an eligible call
- Lights steadily while the observer observes a call

Service Observing

The system does not reserve a call appearance while the observer is in the wait state, if:

- The observer uses a feature access code (FAC) to activate Service Observing
- No service observe button is administered for the telephone

An idle call appearance must be available for an observer to go to the observing state when an eligible call arrives.

Listen and talk modes

When an observer uses the feature button for Service Observing, the observer can toggle between listen-and-talk mode and listen-only mode. However, when an observer activates Service Observing with an FAC, the observer must choose the listen-only mode or the listen-and-talk mode at the start of the session. If the user wants to change modes after the session starts, the observer must end the session, and then choose the other mode when the observer starts a new session. The FACs for Service Observing are the

- Service Observing Listen Only Access Code
- Service Observing Listen/Talk Access Code

Note that the system also requires a FAC for remote Service Observing.

An observer can observe an agent who is not active on a call. The observer is in wait state until the agent receives a call, and then the observer is bridged onto the call.

Restrictions

Two observers cannot monitor the same extension, or the same call, simultaneously. The system generates the busy signal for the second observer who attempts to use Service Observing for a call.

If two users are being observed independently, and one of the users calls the other user, the observer of the calling extension observes the call. The observer of the called extension goes into wait state until the call is over.

Telephone displays

The system displays the same information for both the user and the local observer. The system adds the text "so," for Service Observing, to the display of the observer.

Trunk calls

When a user places a trunk call, Service Observing starts when the user finishes dialing the call. For calls on central office (CO) trunks, the system considers dialing to be complete when the answer supervision is returned, or when the answer supervision timeout occurs.

The system denies any attempt to use Service Observing over trunks that do not have disconnect supervision.

Warning and conference tones

You can administer a tone that notifies the parties on a call that the call is observed. You can administer the tone as a warning tone or a conference tone.

If you administer the tone as a:

- Warning tone, the system generates a unique 2-second, 440-Hz tone before an observer connects to the call. While the call is observed, the system repeats a shorter version of this tone every 12 seconds.
- Conference tone, the system generates the conference tone before an observer connects to the call. The system does not repeat the conference tone during the call.

Administering Service Observing

This section describes the screens that you use to administer the Service Observing feature

Screens for administering Service Observing

Screen name	Purpose	Fields
Class of Restriction	Set up the Class of Restriction (COR) to support Service Observing.	• Can Be Service Observed • Can Be Service Observer • Service Observing COR Table
Feature Access Code (FAC)	Specify the FACs for Service Observing.	• Service Observing Listen Only Access Code • Service Observing Listen/Talk Access Code
Feature-Related System Parameters	Enable Expert Agent Selection (EAS) for the system.	Expert Agent Selection (EAS) Enabled?
	Enable a conference tone for observed users.	Service Observing Conference Tone?
	Enable a warning tone for observed users.	Service Observing Warning Tone
Station (multiappearance)	Assign the serv-obsrv button for Service Observing.	Any available button field in the Button Assignment area
Optional Features	Enable Service Observing for: • Basic or logical agent ID observing • Remote access • Vector Directory Numbers (VDNs) • Vector-initiated observing	• Service Observing (Basic) • Service Observing (Basic) and Service Observing (Remote/ By FAC) • Service Observing (Basic) and the Service Observing (VDNs) • Vectoring (Prompting)

End-user procedures for Service Observing

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Service Observing:

- Activating Service Observing
- Deactivating Service Observing

To activate Service Observing:

1. Press the **serv-obsrv** button or dial a feature access code (FAC).
2. Dial the extension that you want to observe.

When you use the **serv-obsrv** button to activate Service Observing, you start in listen-only mode. Press the **serv-obsrv** button to toggle between listen-only mode and listen/talk mode.

To deactivate Service Observing:

- Hang up, select another call appearance, or press the disconnect or release button.

Reports for Service Observing

The following reports provide information about the Service Observing feature:

- None

Considerations for Service Observing

This section provides information about how the Service Observing feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Service Observing under all conditions. The following considerations apply to Service Observing:

- None

Interactions for Service Observing

This section provides information about how the Service Observing feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Service Observing in any feature configuration.

- Attendants

An attendant can be observed, but cannot be an observer.

- Bridged Appearances

You can observe calls on primary extensions only, not on bridged appearances. For example, if you are observing extension 3082 and this telephone also has a bridged appearance for extension 3282. You cannot observe calls to extension 3282.

- Busy-Verification

You cannot observe an extension that is being busy-verified. You cannot busy-verify an extension that is being observed.

- Call Coverage and Call Pickup

An observer cannot observe a call that is answered by a covering agent or a member of a pickup group, unless the called agent bridges onto the call.

- Call Park

An observer cannot park the observed call.

- Call Waiting

Incoming calls do not wait on a single-line telephone that is being observed.

- Conference

An observer cannot initiate a conference call while the observer is also observing a call.

If an observed user starts a conference, or enters a conference call that has fewer than six parties, the system places the observer in the wait state until the system connects the call. Then the observer can observe the conference. The system counts the observer as one of the conference call participants. The observer can observe all of the conference participants, regardless of the Class of Restriction (COR). In addition, the system bridges the observer onto any calls that a conference participant places or receives while the conference is active. When the user leaves the conference, the observer also leaves and returns to observing the original call.

- Data Privacy

An observer cannot observe an extension:

- On which Data Privacy is active
- While the extension is on a conference call with another extension for which Data Privacy is active

- Data Restriction

An observer cannot observe an extension

- On which Data Restriction is active.
- While the extension is on a conference call with another extension for which Data Restriction is active

- Integrated Directory

Observers do not hear a user dial an integrated directory number.

- Distributed Communications System (DCS)

To observe user extensions that are on another node, such as a DCS station extension, the observer must set up remote-access service observing.

The system does not transmit service observing displays across DCS networks.

- Hold

An observer cannot place a call on hold while the observer is also observing a call.

If a user who is being observed places a call on hold, the observer enters the wait state.

- IP Solutions

If an observer observes an IP to IP direct call, the users on the call might hear a break-in conversation of about 200 milliseconds.

- Leave Word Calling (LWC)

Parties on an observed call cannot use LWC.

- Music-on-Hold

If an observer is in listen-talk mode, neither the caller nor the observer hears music-on-hold. If an observer is in listen-only mode, the caller hears music-on-hold, but the observer does not.

- Privacy - Manual Exclusion

Observing towards a station with Exclusion active is denied, or if Exclusion is activated by a station while being observed, all bridged parties including the observer are dropped. If the **Service Observing with Exclusion** field on the **Feature-Related System Parameters** screen is **y**, then Service Observing of a station with Exclusion active, either by Class Of Service or by manual activation of Exclusion, is allowed.

- Transfer

An observer cannot initiate a transfer while the observer is also observing a call.

If a user transfers a call, the observer is placed in the wait state. The observer is bridged onto the call when the transfer is complete.

Station Hunting

Use the Station Hunting feature to find an extension that is available to answer a call when the called extension is busy. The system checks for an idle extension in the station-hunting chain of the called extension before the system routes the call to the coverage path of the called extension.

The Station Hunting feature supports the following capabilities:

- Station Hunting Before Coverage

If the system finds an idle extension in the station-hunting chain of the called extension, the system leaves the call at the idle extension.

- Station Hunting After Coverage

If the system does not find an idle extension in the station-hunting chain of the called extension, the system routes the call to the coverage path of the last extension in the station-hunting chain.

Detailed description of Station Hunting

This section provides a detailed description of the Station Hunting feature.

To use Station Hunting, you create a station-hunting chain. This chain governs the order in which the system routes the calls when the system encounters a busy station. Each station in the chain links to only one subsequent station in the station-hunting chain. However, a station can be the receiving link from any number of station-hunting chains.

When the system starts to check the station-hunting chain, the system updates the display of the calling party with an **h**. The system also updates the display of the called party with an **h**.

You can administer an unlimited number of extensions in a station-hunting chain.

[Table 60: Routing calls through a Station Hunting chain](#) on page 1208 shows how the system routes a call through the station-hunting chain.

Table 60: Routing calls through a Station Hunting chain

Condition	Response
The extension is idle.	• The caller hears ringing. • The system does not continue to route the call through the station-hunting chain.
The extension is busy.	The system routes the call to the next extension in the station-hunting chain.
The hunt-to-station field on the Station screen of the extension is blank.	• The caller hears busy tone. • The system does not continue to route the call through the station-hunting chain.
The system encounters a station in the station-hunting chain for the second time.	• The caller hears busy tone. • The system does not continue to route the call through the station-hunting chain.
The system checks 30 extensions in the station-hunting chain, and does not find an idle extension.	• The caller hears busy tone. • The system does not continue to route the call through the station-hunting chain.

Station Hunting and Call Coverage

You can administer the system to perform station hunting before the system sends calls to coverage, or after the system sends calls to coverage.

If you administer the system to use Station Hunting before the system uses Call Coverage, the system checks for a hunt-to station at the called extension. If the system finds a hunt-to station at the called extension, the system routes the call down the station-hunting chain. If the system does not find an idle extension in the station-hunting chain, the system routes the call to coverage.

Removing a station from a Station Hunting chain

When you remove a station from a station-hunting chain, the system attempts to maintain the chain. Consider the following examples:

- Station 1 links to station 2, and station 2 links to station 3. If you remove station 2, the system links station 1 to station 3.
- Station 1 links to station 2. Station 2 does not link to another extension. If you remove station 2, station 1 no longer links to another extension.

Duplicating a station in a Station Hunt chain

When you duplicate a station, the system does not copy the extension that is in the **hunt-to station** field on the **Station** screen to the station that you duplicate.

Administering Station Hunting

The following steps are part of the administration process for the Station Hunting feature:

- [Assigning station hunting after coverage](#)
- [Assigning a hunt-to station to an extension](#)
- [Administering Station Hunting before Coverage](#)

This section describes:

- Any prerequisites for administering the Station Hunting feature
- The screens that you use to administer the Station Hunting feature
- Complete administration procedures for the Station Hunting feature

Prerequisites for administering Station Hunting

You must complete the following actions before you can administer the Station Hunting feature:

- None

Screens for administering Station Hunting

Screen name	Purpose	Fields
Coverage Path	Activate the Hunt after Coverage capability for a coverage path.	Hunt After Coverage
Station	Assign a hunt-to station to an extension.	Hunt-to Station
System-Parameters Call Coverage/Call Forwarding	Enable the Station Hunting before Coverage capability for your system.	Station Hunt Before Coverage

Assigning station hunting after coverage

To assign the Station Hunting after Coverage capability to a coverage path:

1. Type **change coverage-path *n***, where *n* is the number of the coverage path to which you want to assign the Station Hunting after Coverage capability. Press **Enter**.

The system displays the **Call Coverage** screen ([Figure 312: Coverage Path screen](#) on page 1211).

Figure 312: Coverage Path screen

change coverage path 2
Page 1 of 1

COVERAGE PATH

Coverage Path Number: 2
Hunt After Coverage: y

Next Path Number: ____
Linkage: ____ ____

COVERAGE CRITERIA

Station/Group Status	Inside Call	Outside Call
Active?	n	n
Busy?	y	y
Don't Answer?	y	y Number of Rings:2
All?	n	n
DND/SAC/Goto Cover?	y	y

COVERAGE POINTS

Terminate to Coverage Pts. with Bridged Appearance? n

Point1: _____
Point2: _____
Point3: _____

Point4: _____
Point5: _____
Point6: _____

2. In the **Hunt After Coverage** field, perform one of the following actions:

- If you want the system to check the station-hunting chain of the last extension in the coverage path, if the system does not find an idle station in the coverage path, type **y**.
- If you want the system to leave the call at the last available point in the coverage path, type **n**.

3. Press **Enter** to save your changes.

Assigning a hunt-to station to an extension

To assign a hunt-to station to an extension:

1. Type **change station *n***, where *n* is the number of the extension to which you want to assign a hunt-to station. Press **Enter**.

The system displays the **Station** screen ([Figure 313: Station screen](#) on page 1212).

Figure 313: Station screen

change station 1014		Page 1 of 4
STATION		
Extension: 1014	Lock Messages? n	BCC: 0
Type:	Security Code:	TN: 1
Port:	Coverage Path 1:	COR: 1
Name:	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Personalized Ringing Pattern: 3	
Data Module? n	Message Lamp Ext: 1014	
Speakerphone: 2-way	Mute button enabled? y	
Display Language? English	Expansion Module?	
Model:		
	Media Complex Ext:	
	IP Softphone? y	
	Remote Office Phone? y	

-
2. In the **Hunt-to Station** field, perform one of the following actions:
 - Type the extension that you want the system to check for an idle status, if the extension is busy.
 - If you do not want the system to check further for an idle extension, if the extension that you specified in Step 1 is busy, leave the field blank.
 3. Press **Enter** to save your changes.

Administering Station Hunting before Coverage

To administer the Station Hunting before Coverage capability for your system:

1. Type **change system-parameters coverage-forwarding**. Press **Enter**.

The system displays the **System-Parameters Coverage-Forwarding** screen
([Figure 314: System Parameters-Call Coverage/Call Forwarding screen](#) on page 1213).

Figure 314: System Parameters-Call Coverage/Call Forwarding screen

change system-parameters coverage-forwarding	page 1
SYSTEM PARAMETERS -- CALL COVERAGE / CALL FORWARDING	
CALL COVERAGE/FORWARDING PARAMETERS	
Local Cvg Subsequent Redirection/CFWD No Ans Interval (rings):	_
Off-Net Cvg Subsequent Redirection/CFWD No Ans Interval (rings):	_
Coverage - Caller Response Interval (seconds):	_
Threshold for Blocking Off-Net Redirection of Incoming Trunks Calls:	1
COVERAGE	
Keep Held SBA at Coverage Point?	_
External Coverage Treatment for Transferred Incoming Trunk Calls?	_
Immediate Redirection on Receipt of PROGRESS Inband Information?	_
Maintain SBA At Principal?	_
QSIG VALU Coverage Overrides QSIG Diversion with Rerouting?	_
Station Hunt Before Coverage?	n
FORWARDING	
Call Forward Override?	_
Coverage After Forwarding?	_

2. In the **Station Hunt Before Coverage?** field, perform one of the following actions:
 - To enable the Station Hunting Before Coverage capability for your system, type **y**.
 - To disable the Station Hunting Before Coverage capability for your system, type **n**.
3. Press **Enter** to save your changes.

Reports for Station Hunting

The following reports provide information about the Station Hunting feature:

- The List Usage report shows all the extensions that use an extension as the hunt-to-station.

For detailed information on these reports and the associated commands, , or see *Reports for Avaya Communication Manager*.

Considerations for Station Hunting

This section provides information about how the Station Hunting feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Station Hunting under all conditions. The following considerations apply to Station Hunting:

- None

Interactions for Station Hunting

This section provides information about how the Station Hunting feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Station Hunting in any feature configuration.

Remember that the system checks the station-hunting chain only for idle and available extensions.

- Adjunct Switch Applications Interface (ASAI)

The system checks the station-hunting chain when ASAI routes a call to an extension with a hunt-to station.

- Automatic Call Distribution (ACD)

An agent extension can be part of a station-hunting chain. The system checks the station-hunting chain of the agent only when the caller places the call directly to the agent extension. The system does not check a station-hunting chain for calls that the system routes through hunt groups to an ACD agent.

The system does not check a station-hunting chain for calls that are made to an extension for a logical agent.

- Automatic Callback

The system does not check the station-hunting chain of the called extension when the call is a callback-return call.

- Bridged Appearance

The system checks the station-hunting chain of an extension if the principal station does not have a call appearance at which the call can terminate. The system checks the chain, even though the extension has available bridged appearances on other stations.

- Busy Verification

The system does not check a station-hunting chain for busy-verify calls.

- Call Coverage

Call Coverage has precedence over Station Hunting.

The system uses Station Hunting for the last coverage point of the last station in the station-hunting chain under the following conditions:

- The **Hunt After Coverage** field, on the **Call Coverage** screen is set to **y**.
- The last coverage point is unavailable because the coverage point is busy, or no one answers the call.
- The last coverage point is a station that has an assigned hunt-to station.
- No one in the coverage path answers the call.

Coverage Don't Answer covers the call after the system checks the station-hunting chain, if the call can terminate at the coverage point, but no one answers the call.

If Station Hunting before Coverage is enabled on your system, the system checks the station-hunting chain of the called extension, before the system routes the call to the coverage path of the called extension.

The system routes the call to the coverage path of the called extension unless the called extension is associated with an XDID telephone. If the called extension is associated with an XDID telephone, the system routes the call to the coverage path of the non-XDID extension in the hunt-to field of the XDID station.

- Call Detail Recording (CDR)

CDR records the called extension, and not the extension of the user who answers the call.

- Call Forwarding

Call Forwarding has precedence over Station Hunting.

If an idle station has Call Forwarding active, the system forwards the call. If a busy station has Call Forwarding active, the system forwards the call. If the forwarded-to station is busy, the call follows the station-hunting chain of the forwarded-to extension.

- Call Park

The system does not check a station-hunting chain for callpark-return calls.

Station Hunting

- Call Pickup

Station Hunting does not change the operation or the characteristics of Call Pickup.

- Call Vectoring

You cannot type a vector directory number (VDN) as a hunt-to station.

If the system encounters **with covey** in a **route-to** command, the system routes a call to a busy station to the station-hunting chain of the station. The system does not route the call to the coverage path of the station. For more information, see the *Avaya Communication Manager Contact Center Call Vectoring and Expert Agent Selection (EAS) Guide*.

- Call Waiting and Attendant Call Waiting

Station Hunting has precedence over Call Waiting.

If a called extension has Call Waiting active, and the extension is already busy on a call, the system checks the station-hunting chain. If the system cannot terminate the call to a station in the station-hunting chain, the call waits at the called extension.

- Class of Restriction (COR)

The system checks the COR of the called extension. The system does not check the COR of the stations in a station-hunting chain.

- Distributed Communications System (DCS)

Station Hunting is not a DCS feature. All stations in a station-hunting chain must be on the same server that runs Avaya Communication Manager.

- Do Not Disturb

If Do Not Disturb is active at a station, the system does not check a station-hunting chain for a call to the station.

- Extension Number Portability (ENP)

You cannot assign a remote ENP extension as a hunt-to station.

- Hunting and Hunting Group

You cannot assign a direct departmental calling (DDC) or uniform call distribution (UCD) extension as a hunt-to station.

- Intercom Call

The system denies Station Hunting for intercom calls to a busy extension.

- Leave Word Calling (LWC)

If a caller starts LWC, the LWC message is left at the called extension even if the system uses Station Hunting in an attempt to complete the call.

- Multimedia

Calls to multimedia endpoints must convert to voice before the system checks a station-hunting chain for the call.

- Night Service

The system denies Station Hunting when a night service call is made to a busy night-console extension.
- Outgoing Trunk Queueing (OTQ)

The system does not attempt Station Hunting for an OTQ callback-return call.
- Personal Central Office Line (PCOL)

The system does not attempt Station Hunting for a PCOL call.
- Personal Station Access (PSA)

The system considers a station with PSA dissociated as busy and bypasses the station in the station-hunting chain.
- Priority Call

The system denies Station Hunting for priority calls.
- Restriction

The system applies proper intercept treatment to a restricted, called extension. Note that *the system does not check restrictions on hunt-to stations*.
- Send All Calls

Send All Calls coverage takes precedence over Station Hunting.
- Tenant Partitioning

The system applies normal tenant restrictions to a call to the called extension. Note, however, that *the system does not check tenant restrictions on hunt-to stations*.
- Terminal Translation Initialization (TTI)

The system considers a station with TTI separation as busy and bypasses the station in the station-hunting chain.
- Terminating Extension Group (TEG)

You cannot assign a TEG as a hunt-to station.
- Uniform Dial Plan (UDP)

You cannot assign a remote UDP extension as a hunt-to station.
- X-port extension

You can assign a hunt-to station to a station that is administered with **x** in the **Port** field of the **Station** screen. The system bypasses a hunt-to station that is administered with an **x** in the **Port** field of the **Station** screen.

Station Lock

Use the Station Lock feature to lock a telephone to prevent others from placing outgoing calls from the telephone.

Detailed description of Station Lock

This section provides a detailed description of the Station Lock feature.

With the Station Lock feature, users can lock the telephone to prevent others from placing outgoing calls from the telephone.

A user with an analog telephone uses a feature access code (FAC) to lock the telephone. A user with a digital telephone can use a feature access code (FAC) or a feature button to lock the telephone. Station Lock:

- Blocks unauthorized outgoing calls
- Allows outgoing emergency calls
- Allows incoming calls

The feature button lights when the user presses the button to activate Station Lock. Then, when a user attempts to place an outgoing call, the system generates a special dial tone to indicate that the Station Lock feature is active.

If a digital telephone has a feature button for Station Lock, but uses a FAC to activate the feature, the LED lights. The system does not generate the special tone.

If a digital telephone does not have a feature button for Station Lock, and uses a FAC to activate the feature, the system generates the special tone.

Avaya recommends that a user of a digital telephone use a Station Lock button, instead of a FAC, to activate Station Lock.

Any user who knows the system-wide FAC for Station Lock, and the Station Security Code (SSC) of a specific telephone, can lock or unlock the telephone.

A user can also lock or unlock a telephone from a remote location.

The attendant console can lock or unlock other telephones. The attendant console cannot be locked.

Administering Station Lock

This section provides the screens that you need to administer the Station Lock feature.

Screens for administering Station Lock

Screen name	Purpose	Fields
COR	Administer a Class of Service (COR) that allows the user to activate Station Lock with a feature access code (FAC).	Station Lock COR
Feature Access Code (FAC)	Assign a FAC for Station Lock.	Station Lock Activation
Station	Assign the user a COR that allows the user to activate Station Lock with an FAC.	COR
	Assign a sta-lock feature button for a user.	Any available button field in the Button Assignments area
	Assign a Station Security Code (SSC) for a user.	Security Code

End-user procedures for Station Lock

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Station Lock:

- [Activating or deactivating Station Lock from a remote telephone](#)

Activating or deactivating Station Lock from a remote telephone

To activate or deactivate Station Lock from a remote telephone:

1. Dial a valid barrier code.

The system generates a dial tone.

2. Dial the feature access code (FAC) for Station Lock.
3. Dial the extension number.
4. Dial the Station Security Code (SSC).

Reports for Station Lock

The following reports provide information about the Station Lock feature:

- None

Considerations for Station Lock

This section provides information about how the Station Lock feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Station Lock under all conditions. The following considerations apply to Station Lock:

- None

Interactions for Station Lock

This section provides information about how the Station Lock feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Station Lock in any feature configuration.

- **Attendant Console**

You cannot lock an attendant console, but you can lock a digital station that has console permissions.

You can dial the feature access code (FAC) for Station Lock from the attendant console to remotely activate or deactivate Station Lock for another telephone.

- **Personal Station Access (PSA)**

You can use Station Lock to lock a PSA telephone, if the telephone has an extension. When a telephone is dissociated, you cannot activate Station Lock from the telephone.

Station Security Code

Use the Station Security Code (SSC) to deny other users access to the functions that are associated with the station. Each station user can change their own SSC if they know the station's current settings.

Detailed description of Station Security Code

This section provides a detailed description of the Station Security Code (SCC) feature.

Use the Station Security Code (SSC) to deny other users access to the functions that are associated with the station. Each station user can change their own SSC if they know the station's current settings.

SCC enhances system security. To use SCC, you must provide each user with an individual SSC. You must also create a system-wide feature access code (FAC) that users use to change the individual SSC. A user cannot change a blank SSC.

Administering Station Security Code

The following steps are part of the administration process for the Station Security Code feature:

- [Creating a station security code](#)

This section describes:

- The screens that you use to administer the Station Security Code feature
- Complete administration procedures for the Station Security Code feature

Screens for administering Station Security Code

Screen name	Purpose	Fields
Feature Access Code (FAC)	Set the access code for the feature.	Station Security Code Change Access Code
Security-Related System Parameters	Set the minimum length of the code.	Minimum Station Security Code Length
Station	Set the code for the station extension.	Security Code

Creating a station security code

To create a station security code:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen.

2. Type **#5** in the **Station Security Code Change Access Code** field.

This action sets the access codes for this feature. The system displays the Command prompt.

3. Press **Enter** to save your changes.

4. Type **change system-parameters security**. Press **Enter**.

The system displays the **Security-Related System Parameters** screen.

5. In the **Minimum Station Security Code Length** field, type **7**.

This action determines the minimum required length of the Station Security Codes that you enter on the **Station** screen. Longer codes are more secure. If you use station security codes for external access to telecommuting features, Avaya recommends that you use a minimum length of 7 digits.

6. Press **Enter** to save your changes.

7. Type **change station n**, where **n** is the extension that you configured for telecommuting. Press **Enter**.

The system displays the **Station** screen ([Figure 315: Station screen](#) on page 1225).

Figure 315: Station screen

change station 1014		Page 1 of 4
STATION		
Extension: 1014	Lock Messages? n	BCC: 0
Type:	Security Code: 7654321	TN: 1
Port:	Coverage Path 1:	COR: 1
Name:	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Personalized Ringing Pattern: 3	
Data Module? n	Message Lamp Ext: 1014	
Speakerphone: 2-way	Mute button enabled? y	
Display Language? English	Expansion Module?	
Model:		
	Media Complex Ext:	
	IP Softphone? y	
	Remote Office Phone? y	

8. Type a number in the **Security Code** field that is equal in length to the number of digits that you entered in the **Security-Related System Parameters** screen in Step 5.

In this example, the security code is **7654321** in the **Security Code** field. This number is equal to the minimum number of digits that you entered in the **Security-Related System Parameters** screen.

9. Press **Enter** to save your changes.

Reports for Station Security Code

The following reports provide information about the Station Security Code feature:

- None

Considerations for Station Security Code

This section provides information about how the Station Security Code feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Station Security Code under all conditions. The following considerations apply to Station Security Code:

- None

Interactions for Station Security Code

This section provides information about how the Station Security Code feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Station Security Code in any feature configuration.

Users may need a station security code to use the following system features and capabilities:

- Demand printing
- Extended User Administration of Redirected Calls
- Leave Word Calling (LWC)
- Personal Station Access (PSA)
- Voice Message Retrieval
- Station Lock
- Terminal Self-Administration
- User Change Coverage

Supporting TTY Callers

Use the Supporting TTY Callers feature to enable callers to use a teletypewriter device (TTY) to listen to announcements that play TTY recordings. You can also use this feature to set up hunt groups for TTY callers, and to create vectors that process both TTY callers and voice callers.

TTY is also known as TDD (Telecommunications Device for the Deaf).

Detailed description of Supporting TTY Callers

This section provides a detailed description of the Supporting TTY Callers feature.

Reliable transmission of TTY information complies with the requirements and guidelines that are outlined in United States accessibility-related laws. Those laws include:

- Titles II, III, and IV of the Americans with Disabilities Act (ADA) of 1990.
- Sections 251 and 255 of the Telecommunications Act of 1996.
- Section 508 of the Workforce Investment Act of 1998.

Communication Manager TTY support is currently restricted to TTY devices that use either the:

- US English standard TTY protocol, specified by ANSI/TIA/EIA 825 as: "A 45.45 Baud FSK modem."
- UK English standard TTY protocol, Baudot 50.

Important characteristics of the standards are:

- TTYs are silent when not transmitting. Unlike fax machines and computer modems, TTYs have no "handshake" procedure at the start of a call, nor do they have a carrier tone during the call. This approach has the advantage of permitting TTY tones, DTMF, and voice to be intermixed on the same call.
- The ability to intermix voice and typed TTY data on the same call. The most common usage is by people who are hard of hearing, but who can speak clearly. These people often prefer to receive text on a TTY device, and then speak in response. This process is referred to as Voice Carry Over (VCO).
- Operation is "half duplex." TTY users must take turns transmitting and typically cannot interrupt each other. If two people try to type at the same time, two TTY devices might show no text at all or show text that is unrecognizable. Also, no automatic mechanism exists to let TTY users know when a character that the user correctly typed was received incorrectly.

- Each TTY character consists of a sequence of seven individual tones. The first tone is always a "start tone" at 1800 Hz. This tone is followed by a series of five tones, at either 1400 or 1800 Hz, which specify the character. The final tone in the sequence is always a "stop tone" at 1400 Hz. The stop tone is a border that separates this character from the next.

The following types of systems support TTY communication:

- Analog telephones and trunks
- Digital telephones and trunks
- VoIP gateways
- Messaging systems
- Automated attendant systems
- Interactive Voice Response (IVR) systems
- Wireless systems in which a TTY-compatible coder is used

Setting up announcements for TTY callers

TTY devices typically resemble a laptop computer. TTY devices have a one line-or a two-line alphanumeric display, instead of the computer screen.

You record announcements for TTY callers in the same way as you record voice announcements. However, instead of recording from the handset of your telephone, you record from a TTY device. The device is attached to your telephone. You use an acoustic coupler into which you place the telephone handset or by plugging the TTY device directly into the back, if it is a digital phone. After calling the announcement extension, and pressing 1 to record. To use the device, you type the announcement using the TTY device.

If you use an acoustic coupler to connect your telephone for recording, you can record TTY and voice into a single announcement. In this case, when you press **1** to record, you can type the TTY message, then immediately pick up the handset to record the voice message. For this type of recording, digital phones also offer the option to press **#** to complete the recording, which eliminates any extraneous noise at the end of the recording. Unfortunately, using this method for combined TTY and voice recordings is likely to create extraneous noise in the middle of your announcements.

As an alternative to recording with your telephone, you can create .WAV files on other recording applications and you can then copy and save the .WAV files to your announcement board.

Setting up hunt groups for TTY callers

In a call center, TTY callers can be accommodated by a hunt group that includes TTY-equipped agents. Although many TTYs can connect directly with the telephone network by way of analog RJ-11 jacks, Avaya recommends that agents be equipped with TTYs that include an acoustic coupler that can accommodate a standard telephone handset. One reason for this recommendation is that a large proportion of TTY users are hearing impaired, but can speak clearly. These individuals often prefer to receive calls on a TTY and then speak in response. This requires the call center agent to alternate between listening on the telephone and then typing on the TTY. An acoustically coupled configuration makes this process considerably easier.

Although TTY-emulation software packages are available for personal computers, most of these packages do not have the ability to intermix voice and TTY on the same call.

For a TTY hunt group, you can record TTY announcements and use them for the hunt group queue. To record announcements for TTY, follow the same steps as with voice recordings from your telephone. However, instead of speaking into your phone to record, you type the announcement with the TTY device.

For an alternative to creating a TTY hunt group, you can use vectors to process TTY calls. With vectors, you can allow TTY callers and voice callers to use the same phone number. In this case, you can also record a single announcement that contains both TTY signaling and a voice recording.

Handling TTY calls with vectors

Unlike fax machines and computer modems, a Tele-typewriter device (TTY) has no handshake tone and no carrier tone. A TTY is silent when not transmitting. This is why systems cannot identify TTY callers automatically. However, the absence of these special tones also means that voice and TTY tones can be intermixed in prerecorded announcements. The ability to provide a hybrid voice-and-TTY announcement, when combined with the automated attendant vectoring capability, can permit a single phone number to accommodate both voice and TTY callers.

The following sample shows a vector that allows TTY callers to access a TTY agent. It begins with a step that plays a TTY announcement combined with a voice announcement. The announcement tells the TTY caller to dial a digit that will direct them to a TTY support person. The vector then processes the digit entered to connect the TTY caller to the TTY split (or hunt group).

In the following example, split 47 (hunt group 47) has already been established and consists of TTY-enabled agents.

Supporting TTY Callers

If a TTY caller calls the number that connects to vector 33, the following actions occur:

1. After a short burst of ringing, a quick burst of TTY tones is sent to the caller to tell the caller to hold, HD. Then a voice announcement is played for callers using a normal telephone connection. The announcement tells them to stay on the line. Finally, another burst of TTY tones is sent to the TTY caller which displays on the caller's TTY device as, "Dial 1."

The TTY caller does not hear the voice announcement, but because the step collects digits, the steps allows the caller to dial a 1 from a touchtone telephone.

Note:

For voice callers, the burst of TTY tones lasts about one second and sounds like a bird chirping.

2. In vector step 3, since the TTY caller entered 1 in vector step 2, the TTY caller is sent to vector step 8. At this point, the caller is put in queue for a TTY-enabled agent in split 47.

Note:

The voice caller is sent to vector step 3 also, but a voice caller does not go to vector step 8 because the caller did not enter 1 at vector step 2. Instead, voice callers continue on to vector step 4, where they connect to split 48.

3. While the TTY caller waits in queue, the caller hears silence from vector step 9, and then the announcement in vector step 10, and is then looped back to wait with silence by vector step 11.

Administering Supporting TTY Callers

This section describes the screens that you use to administer the Supporting TTY Callers feature.

Screens for administering Supporting TTY Callers

- None

Reports for Supporting TTY Callers

The following reports provide information about the Supporting TTY Callers feature:

- None

Considerations for Supporting TTY Callers

This section provides information about how the Supporting TTY Callers feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Supporting TTY Callers under all conditions. The following considerations apply to Supporting TTY Callers:

- None

Interactions for Supporting TTY Callers

This section provides information about how the Supporting TTY Callers feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Supporting TTY Callers in any feature configuration.

- None

Telephone Display

Use the Telephone Display feature to provide users of multiappearance telephone with current call and message information. The information that appears depends on the type of display that the user selects with the buttons on the telephone.

Users can use the features of the telephone to retrieve stored information, such as messages and directory information. You can select English, French, Italian, Spanish, user-defined, or Unicode languages to display the messages or the information.

Detailed description of Telephone Display

This section provides a detailed description of the Telephone Display feature.

Users can use the features of the telephone to retrieve stored information, such as messages and directory information. You can select English, French, Italian, Spanish, user-defined, or Unicode languages to display the messages or the information.

With [Enhanced telephone display](#), you can choose the types of characters that appear on the telephone display of the user. You can administer the software to display Roman (European) characters, or Cyrillic (Russian), Katakana (Japanese), or Ukrainian characters. The type of telephones that your company uses determine the character sets that you can display.

Telephone Display supports the following capabilities:

- [Button display modes](#)
- [Call-related information display](#)
- [Message retrieval](#)
- [Feature information displays](#)
- [Unicode "Native Name" support](#)
- [Enhanced telephone display](#)

Button display modes

You can assign several display modes to telephone buttons. To access these modes, users press the assigned button on the telephone. All the buttons are administrable.

Button mode	Function
Normal	Displays call-related information for the active call appearance. This information includes call appearance, and the name and the number of the calling party or the called party, depending on the type of call. Can also displays elapsed time when the display is in normal mode. The system shows the elapsed time in hours, minutes, and seconds. Timing starts and stops when the button is pressed.
Inspect	Displays call-related information for an incoming call when the user is active on a different call appearance. Users must reset the mode manually for each call.
Stored Number	Displays one of the following numbers: ● The last number that the user dialed (Last Number Dialed) ● The number that is stored in an Abbreviated Dialing button that is administered to the telephone ● A number that is stored in an Abbreviated Dialing list ● A number that is assigned to a button that is administered by Facility Busy Indication
Date and Time	The current date and time of day.
Integrated Directory	Turns off the touchtone signals and allows the user to use the touchtone buttons to enter the name of a system user. After the user enters a name, the display shows the name and the extension. Integrated Directory can use one additional related button: ● Call-Disp automatically returns the call that is requested by the currently displayed message or the currently displayed name and extension.

Button mode	Function
Message Retrieval	Retrieves messages for telephone users. If no messages are stored, the display shows NO MESSAGES. Users can retrieve messages even if the retriever is active on a call. Message Retrieval can use 3 additional related buttons: ● Next Message retrieves the next message, or displays End of File, Push Next To Repeat when in Retrieval mode. ● Call-Disp automatically returns the call that is requested by the currently displayed message or the currently displayed name and extension. ● Delete deletes the currently displayed message.
Coverage Message Retrieval Mode	Retrieves messages for users of the telephone users who do not have a display module. You must administer retrieval permission for a user to retrieve messages of other users. The user does not need to lift the handset to retrieve messages. The user can retrieve messages even if the retriever is active on a call. Coverage Message Retrieval can use three additional related buttons: ● Next Message retrieves the next message, or displays End of File, Push Next To Repeat when in Retrieval mode. ● Call-Disp automatically returns the call that is requested by the currently displayed message or the currently displayed name and extension. ● Delete deletes the currently displayed message.

Call-related information display

The software provides the following call-related information:

- Call appearance identification

A lowercase letter is used to designate call appearance buttons on the display. The display shows **a=** for an incoming call on the first button, **b=** for an incoming call on the second button, and so on.

The system might omit the call-appearance information so that the Call Log find capability in the **PC/PBX** Connection software works properly.

Telephone Display

- Calling party identification

When a call is from inside the system, the display shows the name of the caller or a unique identification that is administered for the telephone being used, and the extension of the calling party. When the call is from outside the system, the display shows the trunk group name (such as **CHICAGO**) and the Trunk Access Code (TAC) that is assigned to the trunk group used for the call. If a user is active on a call and receives another call, the display automatically shows the identification of the second caller for a few seconds. The system then automatically restores the display to show the information that is associated with the active call appearance.

For example:

outgoing trunk call



b=87843541

 
8 is the TAC, and 784-3541 is the number that was dialed
then



b=OUTSIDE CALL

8

or



b=WATS

101

Note:

Because of space limitations, some name displays are shortened to 15 characters. These displays include displays for transferred or covered calls, non-DCS, ISDN-PRI calls, VDN service observing displays, LWC messages, or the queue status of an agent.

- Called party identification

On calls to a system user, the digits appear on the display as the digits are dialed. After dialing is complete, the name and the extension of the called party appears. If no name is accessed, the dialed digits remain on the display.

On outgoing calls, the digits appear on the display as the digits are dialed. After dialing is complete, the display shows the name and the TAC that is assigned to the trunk group being called. Optionally on a trunk-group basis, the display can show only the dialed digits, not the trunk group name and the TAC.

For example:

Dialed digits

a=3602

then:

a=TOM BROWN

3062

or, if no name is available:

a=EXT 3602

3062

- Call purpose

Call purpose identifies the reason for an incoming call or a redirected call. The system does not identify a call purpose for a normal incoming call. The following identifiers sometimes appear on the display:

Display	Meaning
b - (Busy)	The called user is active on a call, and has a temporary bridged appearance of the call.
c - (Cover All)	The called user has Cover All assigned.
callback	The call is an Automatic Callback call from the system.
d - (Coverage on Don't Answer)	The call was redirected because the called telephone unanswered. This message also indicates that the called user has a temporary bridged appearance of the call.
f - (Call Forwarding)	Another user has forwarded calls to this telephone.
h - (Station hunt)	The called user is active on a call, and station hunt was used to route the call.
ICOM	The call is an Intercom call.
p - (Pickup)	The user answered the call of a Call Pickup group member.
park	The user parked a call.
priority	The call has priority status.
s - (Send All Calls)	The called user is temporarily sending all calls to coverage and the call was redirected to this telephone.

Message retrieval

You can designate certain telephones and attendant groups for system-wide message retrieval. Users of these telephones or consoles can retrieve Leave Word Calling (LWC) and call coverage messages for other telephone users. These other users can include Direct Department Calling (DDC) groups, Uniform Call Distribution (UCD) groups, and Terminating Extension Groups (TEGs). Users of these telephones or consoles can also retrieve external call logs. You can assign system-wide retrieving telephones or consoles. Use the **Feature-Related System Parameters** screen to make these assignments.

Messages for a telephone user can be retrieved at selected telephones, or any attendant console. However, the retriever must be on the call coverage path of the user, and permission to retrieve messages must be assigned for the telephone of the user.

Feature information displays

Telephone displays provide information about the activity on individual telephones and consoles, including confirmation that a certain feature is being used. You administer the language to use for messages on the **Station** screen for each telephone.

Unicode "Native Name" support

Communication Manager supports Unicode for the "Name" associated with Vector Directory Numbers (VDNs), trunk groups, hunt groups, and stations. The **Unicode Name** (also referred to as *Native Name* and *Name 2*) fields are hidden fields that are associated with the name fields you administer on the respective screens for each. These fields can only be administered using Avaya Site Administration (ASA) or MultiSite Administrator (MSA).

- The Unicode VDN Name is associated with the name administered in the **Name** field on the **Vector Directory** screen. You must use MSA.
- The Unicode Trunk Group Name is associated with the name administered in the **Group Name** field on the **Trunk Group** screen. You must use MSA.
- The Unicode Hunt Group Name is associated with the name administered in the **Group Name** field on the **Hunt Group** screen. You must use MSA.
- The Unicode Station Name is associated with the name administered in the **Name** field on the **Station** screen. You must use ASA or MSA.

Enhanced telephone display

With enhanced telephone display, you can choose the types of characters that appear on your telephone displays. You can choose standard Roman characters, or Cyrillic, Katakana, or Ukrainian characters. Your Avaya representative sets the character type on the **System Parameters Country-Options** screen. The character set that you can display also depends on the telephones that your company uses.

You can choose one of the following character sets for messages on your display telephones:

- Cyrillic contains the characters that are required to display the Russian language. All Russian characters appear in uppercase letters.
- Katakana contains the characters that are required to display the Japanese language, and as some European characters and other symbols. All Japanese characters appear in uppercase letters.
- Roman contains two character sets:
 - US English contains the Roman alphabet, and the numerals and the special characters that are standard on the US English keyboard. US English characters appear in uppercase and lowercase letters.
 - European contains characters for many European languages. All European characters appear in uppercase letters.
- Ukrainian contains the characters that are required to display the Ukrainian language. All Ukrainian characters appear in uppercase letters.

The type of telephones that your company uses must support the characters that you want to display. Each character set requires specific firmware in the telephone. Ensure that you use telephones with the same firmware type across your entire system. If you do not use telephones with the same firmware type across your entire system, the displays do not appear as expected. Your Avaya representative can ensure that you have the correct telephone types for the characters that you want to display.

This section shows the English, the French, Italian, and Spanish message for each feature. When time is displayed, the English language uses the abbreviations AM and PM. All other languages use 24-hour time.

Table 61: Telephone features

English	French	Italian	Spanish
AUTO WAKEUP - Ext: xxxxx Time: --:-- xM	REVEIL AUTO. - POSTE: xxxxx HEURE: --:--	SERVIZIO SVEGLIA - Tel: xxxxx Ora: --:--	DESPERT AUTOMA - EXT: xxxxx HORA: --:--
INVALID EXTENSION - TRY AGAIN	NUMERO DE POSTE EST ERRONE - REESSAYER	NUMERO ERRATO - RIPETERE	EXTENSION NO VALIDO - INTENTE DE NUEVO
WAKEUP ENTRY DENIED - INTERVAL FULL	DEM. REVEIL REFUSEE - INTERVALLE PLEIN	SVEGLIA NON ATTIVATA - ORARIO OCCUP	ENTRADA DENEGADA - INTERVALO COMPLETO
WAKEUP ENTRY DENIED - NO PERMISSION	DEM. REVEIL REFUSEE - SANS AUTORISATION	SVEGLIA NON ATTIVATA - NON PERMESSO	ENTRADA DENEGADA - SIN PERMISO
WAKEUP ENTRY DENIED - SYSTEM FULL	DEM. REVEIL REFUSEE - ENCOMBREMENT	SVEGLIA NON ATTIVATA - CONGESTIONE	ENTRADA DENEGADA - SISTEMA COMPLETO
WAKEUP ENTRY DENIED - TOO SOON	DEM. REVEIL REFUSEE - TROP TOT	SVEGLIA NON ATTIVATA - TROPPO PRESTO	ENTRADA DENEGADA - MUY PRONTO
WAKEUP REQUEST CANCELED	DEMANDE DE REVEIL EST ANNULEE	RICHIESTA SVEGLIA CANENTRYATA	SOLICITUD DE DESPERTADOR CANCELADA
WAKEUP REQUEST CONFIRMED	DEMANDE DE REVEIL EST CONFIRMEE	RICHIESTA SVEGLIA CONFERMATA	SOLICITUD DE DESPERTADOR CONFIRMADA
WAKEUP CALL	APPEL DE REVEIL	SERV. SVEGLIA	DESPIERTE

Table 62: ASAI displays

English	French	Italian	Spanish
YOU HAVE ADJUNCT MESSAGES	MESSAGES SUPPLEMENTAIRES	MESSAGGI AGGIUNTIVI	TIENE MENSAJES ADICIONALES

Table 63: Busy verification of terminals and trunks

English	French	Italian	Spanish
ALL MADE BUSY	TOUS OCC.	TUTTI OCCUPATI	TODAS OCUPADAS
BRIDGED	EN DERIVATION	OCCUPATO	PUENTEADA
DENIED	INTERDIT	NON PERMESSO	DENEGADO
INVALID	ERRONE	NON VALIDO	NO VALIDO
NO MEMBER	AUCUN MEMBRE	NESSUN ELEMENTO	NINGUN MIEMBRO
OUT OF SERVICE	HORS SERVICE	FUORI SERVIZIO	FUERA SERVICIO
RESTRICTED	RESTREINT	RISTRETTO	RESTRINGIDO
TERMINATED	TERMINE	TERMINATO	TERMINADO
TRUNK SEIZED	CIRCUIT SAISI	GIUNZIONE IMP.	ENLACE OCUPADO
VERIFIED	VERIFIE	VERIFICATO	VERIFICADO

Call Appearance

For each language, the active call appearance appears as:

"a =" (English)

Call-appearance buttons are shown on the display by a lower-case letter (a through z for the first 26 call appearances), followed by "=". Lowercase letters A through Z, followed by "=" are used for additional call appearances.

Table 64: Call Detail Recording

English	French	Italian	Spanish
CDR OVERLOAD	SURCHARGE EDA	SVRACCARICO DAC	SOBRECARGA DAT

Table 65: Call progress feedback displays

English	French	Italian	Spanish
busy (Extension Busy, Intrusion Not Allowed, Call Waiting Not Allowed)	OCCUPE (Occupe)	occ (Occupato)	OCUPADA (Ocupada)
busy(I) (Extension Busy, Intrusion Allowed, Call Waiting Not Allowed)	OCC.(E) (Entree ligne occupe)	occ(I) (Occupato- Intrusione)	OCUP(I) (Ocupada- intrusion)
ringing (Extension Ringing)	SONNE (Libre)	libero (Libero)	LIBRE (Libero)
wait (Extension Busy, Intrusion Not Allowed, Call Waiting Allowed)	ATTENTE (Attente)	auat (Autoattesa)	ESPERA (Espera)
(I) wait (Extension Busy, Intrusion Allowed, Call Waiting Allowed)	(E) ATTENTE (Entree ligne attente)	(I) auat (Intrusione- Autoattesa)	(I) ESPERA (Intrusion, en espera)

Table 66: Class of Restriction (COR) displays

Restriction	English	French	Italian	Spanish
Toll	TOLL	INT.	TASS	TARF
Full	FULL	COM.	DISB	LLEN
No Restrictions	NONE	AUC.	ABIL	NING
Origination	ORIG	DEP.	ORIG	ORIG
Outward	OTWD	SOR.	USCN	SALI

Use the following screens to translate time messages, if appropriate.

Figure 316: Date/Time Mode and Formats - English

<DATE/TIME>	<TIME><DATE>
<TIME>	<HR>:<MIN><M>
<HR>	1-12 (hour of day, no leading zeroes)
<MIN>	00-59 (minute of hour)
<M>	"am" or "pm"
<DATE>	<DOW><MONTH><DOM>, <YEAR>
<DOW>	Day of week, upper case, unabbreviated
<MONTH>	Month of year, upper case, unabbreviated
<DOM>	1-31 (day of month, no leading zeroes)
<YEAR>	Year in 4 digits
	Blank

Figure 317: Date/Time Mode and formats - French, Italian, Spanish, and User-Defined

<DATE/TIME>	<TIME><DATE>
<TIME>	<HR>:<MIN>
<HR>	0-23 (hour of day, no leading zeroes)
<MIN>	00-59 (minute of hour)
<DATE>	<DOW><DOM><MONTH>, <YEAR>
<DOW>	Day of week, upper case, unabbreviated
<DOM>	1-31 (day of month, no leading zeroes)
<MONTH>	Month of year, upper case, unabbreviated
<YEAR>	Year in 4 digits
	Blank

Table 67: Days of the week format

English	French	Italian	Spanish
SUNDAY	DIMANCHE	DOMENICA	DOMINGO
MONDAY	LUNDI	LUNEDI	LUNES
TUESDAY	MARDI	MARTEDI	MARTES
WEDNESDAY	MERCREDI	MERCOLEDI	MIERCOLES
THURSDAY	JEUDI	GIOVEDI	JUEVES
FRIDAY	VENDREDI	VENERDI	VIERNES
SATURDAY	SAMEDI	SABATO	SABADO

Table 68: Date and Time mode - time not available

English	French	Italian	Spanish
SORRY, TIME UNAVAILABLE NOW	HEURE ET DATE INDISPONIBLES	ORA E DATA TEMPON DISPONIBILI	HORA Y FECHA NO DISPONIBLES AHORA

Table 69: Months of the year format

English	French	Italian	Spanish
JANUARY	JANVIER	GENNAIO	ENERO
FEBRUARY	FEVRIER	FEBBRAIO	FEBRERO
MARCH	MARS	MARZO	MARZO
APRIL	AVRIL	APRILE	ABRIL
MAY	MAI	MAGGIO	MAYO
JUNE	JUIN	GIUGNO	JUNIO
JULY	JUILLET	LUGLIO	JULIO
AUGUST	AOUT	AGOSTO	AGOSTO
SEPTEMBER	SEPTEMBRE	SETTEMBRE	SEPTIEMBRE
OCTOBER	OCTOBRE	OTTOBRE	OCTUBRE
NOVEMBER	NOVEMBRE	NOVEMBRE	NOVIEMBRE
DECEMBER	DECEMBRE	DICEMBRE	DICIEMBRE

Table 70: Do Not Disturb (Hotel/Motel feature)

English	French	Italian	Spanish
DO NOT DIST - Group: xx Time: --:-- xM	NE PAS DERANGER GROUPE: xx HEURE: --:--	NON DISTURBARE - Grp: xx Ora: --:--	NO MOLESTAR - GRUPO: xx HORA: --:--
DO NOT DIST - Ext: xxxxx Time: --:-- xM	NE PAS DERANGER POSTE:xxxxx HEURE: --:--	NON DISTURBARE - Tel: xxxxx Ora: --:--	NO MOLESTAR - EXT: xxxxx HORA: --:--

1 of 2

Table 70: Do Not Disturb (Hotel/Motel feature) (continued)

English	French	Italian	Spanish
DO NOT DIST ENTRY DENIED - INTERVAL FULL	DEMANDE EST REFUSEE - INTERVALLE PLEIN	SERVIZIO NON ATTIVATO - ORARIO OCCUP	ENTRADA DENEGADA - INTERVALO COMPLETO
DO NOT DIST ENTRY DENIED - NO PERMISSION	DEMANDE EST REFUSEE - SANS AUTORISATION	SERVIZIO NON ATTIVATO - NON PERMESSO	ENTRADA DENEGADA - SIN PERMISO
DO NOT DIST ENTRY DENIED - SYSTEM FULL	DEMANDE EST REFUSEE - ENCOMBREMENT	SERVIZIO NON ATTIVATO - CONGESTIONE	ENTRADA DENEGADA - SISTEMA COMPLETO
DO NOT DIST ENTRY DENIED - TOO SOON	DEMANDE EST REFUSEE - TROP TOT	SERVIZIO NON ATTIVATO - TROPPO PRESTO	ENTRADA DENEGADA - MUY PRONTO
INVALID GROUP - TRY AGAIN	GROUPE ERRONE - REESSAYER	GRUPPO NON VALIDO - RIPETERE	GRUPO NO VALIDO - INTENTE DE NUEVO
THANK YOU - DO NOT DIST ENTRY CONFIRMED	MERCI - DEMANDE EST CONFIRMEE	NON DISTURBARE - RICHIESTA CONFERMATA	NO MOLESTAR - ENTRADA CONFIRMADA
THANK YOU - DO NOT DIST REQUEST CANCELED	MERCI - DEMANDE EST ANNULEE	NON DISTURBARE - RICHIESTA CANENTRYATA	MUCHAS GRACIAS - SOLICITUD CANCELADA
2 of 2			

Enhanced Abbreviated Dialing - user defined

Figure 318: Language Translations screen

display display-messages ad-programming		Page 1 of 1
Language Translations		
English		
1. Press button to program.	1.	*****
2. Change number?	2.	*****
3. Yes=1 No=2	3.	*****
4. Enter number:	4.	*****
5. Press # to save.	5.	*****
6. Number saved.	6.	*****
7. Change label?	7.	*****
8. Enter label:	8.	*****
9. Press * to advance; # to save.	9.	*****
10. Press * to reenter; # to save.	10.	*****
11. Label saved.	11.	*****

Table 71: Field separator

English	French	Italian	Spanish
<calling party> "to" <called party>	<calling party> "a" <called party>	<calling party> "a" <called party>	<calling party> "a" <called party>

English	French	Italian	Spanish
DIRECTORY - PLEASE ENTER NAME	ANNUAIRE - ENTRER LE NOM	ELENCO UTENTI - INTRODURRE NOME	GUIA TELEFONICA - INTRODUCZA NOMBRE
DIRECTORY UNAVAILABLE - TRY LATER	ANNUAIRE INDISPONIBLE - REESSAYER	ELENCO UTENTI TEMP. NON DISPONIBILE	GUIA TEL INDISPONIBLE - INTENTE DESPUES
NO MATCH - TRY AGAIN	INTROUVABLE - REESSAYER	NESSUNA CORRISPONDENZA - RIPETERE	NO CORRESPONDE - INTENTE DE NUEVO

Table 72: ISDN

English	French	Italian	Spanish
ANSWERED BY	REPONDU PAR	RISPOSTA DA	RESPONDIDO POR
CALL FROM	APPEL DE	CHIAMATA DA	LLAMADA DE
INTL	INTL	INTL	INTL

Leave Word Calling

Figure 319: Leave Word Calling Formats - English

```

<CALLER_ID><b><DATE><b><TIME><M><b><C><b>CALL<EXT_N0>

  <CALLER_ID>    The calling identifier, up to 15 characters
  <DATE>          <MONTH>/<DOM>
  <MONTH>         1-12 (month of year, no leading zeroes)
  <DOM>           1-31 (day of month, no leading zeroes)
  <TIME>          <HR>:<MIN>
  <HR>            1-12 (hour of day, no leading zeroes)
  <MIN>           00-59 (minute of hour)
  <M>             "a" or "p"
  <C>             Number of calls received, 1 digit *
  <EXT_N0>        Calling extension number, up to 7 digits
  <b>             blank

```

Figure 320: Leave Word Calling Formats - French, Italian, Spanish, and User-Defined

```

<CALLER_ID><b><DATE><b><TIME><b><C><b>APPL<b><EXT_N0>

  <CALLER_ID>    The calling identifier, up to 15 characters
  <DATE>          <DOM>/<MONTH>
  <DOM>           1-31 (day of month, no leading zeroes)
  <MONTH>         1-12 (month of year, no leading zeroes)
  <TIME>          <HR>:<MIN>
  <HR>            0-23 (hour of day, no leading zeroes)
  <MIN>           00-59 (minute of hour)
  <C>             Number of calls received, 1 digit *
  <EXT_N0>        Calling extension number, up to 5 digits

```

Table 73: Leave Word Calling messages

English	French	Italian	Spanish
CANNOT BE DELETED - CALL MESSAGE CENTER	NE PEUT ETRE SUPP./ APPELER RECEP. MESS.	NON CANENTRYATO. CHIAMARE CENTRO MESSAGGI	NO ELIMINADO-LLAMA CENTRO DE MENSAJES
DELETED	SUPPRIME	MESSAGGIO CANENTRYATO	ELIMINADO
END OF MESSAGES (NEXT TO REPEAT)	FIN DES MESSAGES (SUIVANT POUR REPETER)	FINE MESSAGGI. <successivo> PER RIPETERE	FIN DE MENSAJES (SIGUIENTE PARA REPETIR)
GET DIAL TONE, PUSH Cover Msg Retrieval	TONALITE D'ENVOI - <LECT. MESS. COUV.>	<rec mess copert> DOPO IL TONO DI CENTR	OBTENGA TONO OPRIMA <RECUP MNSJE COBERT>
IN PROGRESS	EN COURS	ATTENDERE...	EN CURSO
MESSAGE RETRIEVAL DENIED	LECTURE DE MESSAGES INTERDITE	LETTURA MESSAGGIO NON PERMESSA	RECUPERACION DE MENSAJES DENEGADA
MESSAGE RETRIEVAL LOCKED	LECTURE DE MESSAGES BLOQUEE	LETTURA MESSAGGIO BLOCCATA	RECUPERACION DE MENSAJES BLOQUEADA
MESSAGES FOR	MESSAGES POUR	MESSAGGI PER	MENSAJES PARA
MESSAGES UNAVAILABLE - TRY LATER	MESSAGES INDISPONIBLES - REESSAYER	MESSAGGI TEMPORANEAMENTE NON DISPONIBILI	MENSAJES NO DISPONIBLES, INTENTE DESPUES
Message Center (AUDIX) CALL	APPEL DE LA RECEPTION DE MESS. (AUDIX)	Chiamata dal Centro Messaggi (AUDIX)	LLAMADA DEL CENTRO DE MENSAJES (AUDIX)
NO MESSAGES	PAS DE MESSAGES	NESSUN MESSAGGIO	NINGUN MENSAJE
WHOSE MESSAGES? (DIAL EXTENSION NUMBER)	MESSAGES DE QUEL NO.? (ENTRER NO. POSTE)	LETTURA MESSAGGI. INTRODURRE NUMERO TEL.	MENSAJES DE QUIEN? (MARCAR EXTENSION)

Table 74: Malicious Call Trace

English	French	Italian	Spanish
MALICIOUS CALL TRACE REQUEST	DEPISTAGE D'APPELS MALVEILLANTS	RICHIESTA RINTRACCIO CHIAMATE MALEVOLE	RASTREO DE LLAMADA MALINTENCIONADA
MCT activated by: for:	DAM ACTIVE par: pour:	RCM attivato da: per:	RLM activada por: para:
original call redirected from:	redirection appel initial de: (EXTENSION)	chiamata iniziale rinviata da:	llamada orig. transferida de:
party: (EXTENSION)	demandeur: (EXTENSION)	utente: (INTERNO)	usuario: (EXTENSION)
party: (ISDN SID/CNI)	demandeur: (NIP/INA ISDN)	utente: (NIC/INC ISDN)	usuario: (ISDN NIE/INU)
party: (PORT ID)	demandeur: (REF. PORT ISDN)	utente: (ID DELLA PORTA ISDN)	usuario: (ID DEL PUERTO ISDN)
party: (ISDN PORT ID)	demandeur: (REF. PORT)	utente: (ID DELLA PORTA)	usuario: (ID DEL PUERTO)
END OF TRACE INFORMATION	FIN DES INFO DE DEPISTAGE	INFORMAZIONI FINALI SUL RINTRACCIO	FIN DE INFORMACION DE RASTREO
voice recorder port:	port enregistreur vocal:	porta del registratore:	puerto de grabado de voz:

Table 75: Caller information

English	French	Italian	Spanish
Info:	INFO.:	Info:	INFORM:

Table 76: Emergency access to attendant

English	French	Italian	Spanish
a=xxxxxxxxxxxxxx Ext xxxxx xx in EMRG Q	a=xxxxxxxxxxxxxx POSTE xxxxx xx FIL URG	a=xxxxxxxxxxxxxx Der xxxxx xx in C EMRG	a=xxxxxxxxxxxxxx EXT xxxxx xx EN C EMRG

Table 77: Queue status

English	French	Italian	Spanish
HUNT GROUP <x> NOT ADMINISTERED	GROUPE DE DIST. <x> NON ADMINISTRE	GRUPPO <x> NON AMMINISTRATO	GRUPO BUSQUEDA <x> NO ADMINISTRADO

Table 78: Queue status indication

English	French	Italian	Spanish
<15 chrs> Q-time xx:xx calls xx	<15 chrs> TEMPS-F xx:xx APPELS xx	<15 chrs> T-coda xx:xx chiam xx	<15 chrs> HORA-C xx:xx LLAMADAS xx

Table 79: Miscellaneous call identifier

English	French	Italian	Spanish
sa (ACD Supervisor Assistance)	AS (Assistance surveillant)	as (Assistenza Supervisoree)	AS (Ayuda de supervisor)
ac (Attd Assistance Call)	AA (Appel assistance)	ao (Assistenza Operatore)	AO (Ayuda de operadora)
tc (Attd Control Of A Trunk Group)	CF (Commande faisceau)	fc (Fascio Controllato)	CE (Control enlaces)
an (Attd No Answer)	TR (Telephoniste sans reponse)	on (Operatore Non Risponde)	ON (Operadora no responde)
pc (Attd Personal Call)	AP (Appel personnel)	cp (Chiamata Personale)	LP (Llamada personal)
rc (Attd Recall Call)	RA (Rappel)	rc (Richiamata)	RL (Rellamada)
rt (Attd Return Call)	RE (Retour)	rt (Ritornata)	RT (Retorno)
sc (Attd Serial Call)	AS (Appel en serie)	ic (Inoltro a Catena)	LS (Llamada en serie)
co (Controlled Outward Restriction)	RD (Restriction de depart)	cu (Controllata Uscente)	RS (Restriccion saliente)
1 of 4			

Table 79: Miscellaneous call identifier (continued)

English	French	Italian	Spanish
cs (Controlled Station to Station Restriction)	RP (Restriction vers postes)	cd (Controllata Derivati)	CS (Control estacion)
ct (Controlled Termination Restriction)	AR (Restriction d'arrivee)	ct (Controllata Terminante)	RE (Restriccion entrante)
db (DID Find Busy Station With CO Tones)	OP (Occupation du poste)	po (Passante Occupata)	EO (Estacion ocupada)
da (DID Recall Go To Attd)	RT (Rappel telephoniste)	pr (Richiamata su Passante)	RD (Rellamada directa)
qf (Emerg. Queue Full Redirection)	FP (File d'urgence pleine deviation)	de (Deviata Emergenza)	DE (Desvio de emergencia)
hc (Held Call Timed Reminder)	AG (Indicatif d'appel en garde)	at (Avviso Chiamata in tenuta)	LR (Recordatorio de llamada retenida)
ic (Intercept)	IN (Interception)	in (Intercettata)	IN (Intercepcion)
ip (Interposition Call)	AI (Appel interposition)	ip (Interposizione)	EP (Entre posiciones)
ld (LDN Calls on DID Trunks)	SD (Selection directe)	pd (Diretta Passante)	LD (Larga distancia)
so (Service Observing)	ES (ecoute du service)	is (Inclusione Supervisore)	SS (Supervision del servicio)
na (Unanswered or Incomplete DID Call)	SR (Sans reponse)	pn (Passante Non Risposta)	SR (Sin respuesta)
ACB (Automatic Callback)	R. AUTO. (Rappel automatique)	PRN (Prenotazione Automatica)	RA (Rellamada automatica)
callback (Callback Call)	RAPPEL (Rappel)	prenotaz (Prenotazione)	RELLAM (Rellamada)
park (Call Park)	G. I. (garde par) indicatif	parch. (Parcheggiata)	ESTAC (Estacionamiento de llamada)

2 of 4

Table 79: Miscellaneous call identifier (continued)

English	French	Italian	Spanish
control (Control)	CONTROLE (Controle)	cntr.op. (Controllo Operatore)	CONTROL (Control)
ICOM (Intercom Call)	INTERCOM (Intercommunication)	ICOM (Intercom)	INTERF (Llamda interfono)
OTQ (Outgoing Trunk Queuing)	FFD (File faisceaux de depart)	RFO (Richiamata su Fascio Occupato)	EES (Espera de enlace de salida)
priority (Priority Call)	PRIORITE (Appel prioritaire)	priorita (Priorita')	PRIORIT (Llamada prioritaria)
recall (Recall Call)	APP.RAP. (Appel rappel)	richiam (Richiamata)	REPET (Rellamada)
return (Return Call)	RETOUR (Retour)	ritorno (Chiamata Ritornata)	RETORNO (Llamada de retorno)
ARS (Automatic Route Selection)	SAA (Selection de l'acheminement automatique)	SAI (Selez. Autom. Instradam.)	SAR (Seleccion automatica de rutas)
forward (Call Forwarding)	RENVOI (Renvoi)	deviata (Deviata)	REENVIO (Reenvio de llamada)
cover (Cover)	SUPPL. (Suppleance)	copert. (Copertura)	COBER (Cobertura)
DND (Do Not Disturb)	NPD (Ne pas deranger)	nd (Non Disturbare)	NM (No molestar)
p (Call Pickup)	P (Prise)	a (Assente)	C (Captura de llamada)
c (Cover All Calls)	s (Suppleance)	c (Copertura)	c (Cobertura de toda llamada)
n (Night Sta. Serv., Incoming No Answer)	N (Service nuit, entrant pas reponse)	n (Serv. Notte, Esterna Non Risposta)	N (Servicion noct. ext. no responde)
B (All Calls Busy)	O (Tous occupes)	O (Tutte Occupate)	O (Todas ocupadas)
f (Call Forwarding)	R (Renvoi)	d (Deviata)	R (Reenvio de llamada)

3 of 4

Table 79: Miscellaneous call identifier (continued)

English	French	Italian	Spanish
b (Cover Busy)	o (Suppleance occupee)	o (Copertura per Occupato)	o (Cobertura ocupada)
d (Cover Don't Answer)	n (Suppleance pas de reponse)	n (Copertura per Non Risposta)	n (Cobertura sin respuesta)
s (Send All Calls)	E (Envoi tous appels)	r (Rinvio)	E (Envio de toda llamada)
4 of 4			

Table 80: User identifiers

English	French	Italian	Spanish	Identifier
OPERATOR	TELEPHONISTE	OPERATORE	OPERADORA	Attendant
CONFERENCE	CONFERENCE	CONFERENZA	CONFERENCIA	Conference Call
EXT	POSTE	DER	EXTENSION	Extension
PAGING	PAGING	PAGING	PAGING	Paging (cannot be translated)
OUTSIDE CALL	APPEL EXT.	ESTERNA	LLAMADA EXT.	Trunk Group
UNKNOWN NAME	INTROUVABLE	NOME SCONOSC.	DESCONOCIDO	Unknown

Table 81: Property Management System interface

English	French	Italian	Spanish
CHECK IN - Ext:	ENREGISTREMENT - POSTE:	CHECK IN - Tel:	REGISTRARSE - EXTENSION:
CHECK IN: ROOM ALREADY OCCUPIED	ENREGISTREMENT: CHAMBRE OCCUPEE	CHECK IN: CAMERA OCCUPATA	REGISTRARSE: HABITACION OCUPADA
CHECK IN COMPLETE	ENREGISTREMENT EFFECTUE	CHECK IN COMPLETATO	REGISTRO TERMINADO
CHECK IN FAILED	ECHEC D'ENREGISTREMENT	CHECK IN ERRATO	REGISTRARSE: FALLIDO
CHECK OUT - Ext:	DEPART - POSTE:	CHECK OUT - Tel:	PAGAR LA CUENTA - EXTENSION:
CHECK OUT COMPLETE: MESSAGE LAMP OFF	DEPART: PAS DE MESSAGES	CHECK OUT COMPLETATO: NESSUN MESSAGGIO	PAGO TERMINADO: NINGUN MENSAJE
CHECK OUT COMPLETE: MESSAGE LAMP ON	DEPART: MESSAGES	CHECK OUT COMPLETATO: MESSAGGI IN ATTESA	PAGO DE CUENTA TERMINADO: MENSAJES
CHECK OUT FAILED	ECHEC PROCEDURE DE DEPART	CHECK OUT ERRATO	PAGAR LA CUENTA: FALLIDO
CHECK OUT: ROOM ALREADY VACANT	DEPART - CHAMBRE INOCCUPEE	CHECK OUT: CAMERA NON OCCUPATA	PAGAR LA CUENTA: HABITACION VACANTE
MESSAGE LAMP OFF	PAS DE MESSAGES	NESSUN MESSAGGIO IN ATTESA	LUZ DE MENSAJE APAGADA
MESSAGE LAMP ON	MESSAGES	MESSAGGI IN ATTESA	LUZ DE MENSAJE ENCENDIDA
MESSAGE NOTIFICATION FAILED	ECHEC D'AVIS MESSAGES	NOTIFICA MESSAGGI ERRATA	AVISO DE MENSAJE FALLIDO
MESSAGE NOTIFICATION OFF - Ext: xxxxx	AVIS DE MESSAGES DESACTIVE - POSTE:xxxxx	NOTIFICA MESSAGGI DISABIL. - Tel: xxxxx	AVISO DE MENSAJE APAGADO - EXT: xxxxx
MESSAGE NOTIFICATION ON - Ext: xxxxx	AVIS DE MESSAGES ACTIVE - POSTE:xxxxx	NOTIFICA MESSAGGI ABILITATA - Tel: xxxxx	AVISO DE MENSAJE ENCENDIDO - EXT: xxxxx

Table 82: Security Violation Notification

English	French	Italian	Spanish
Barrier Code Violation	VIOLATION DU CODE D'ENTREE	VIOLAZIONE DI CODICI DE TAGLIO	VIOLACION CONDIGO LIMITE
Login Violation	VIOLATION DE L'ACCES A L'ADMINISTRATION	IOLAZIONE DI INIZIO DI REGISTRAZIONE	VIOLACION CLAVE ACCESO
Station Security Code Violation	VIOLATION DE CODE D'ACCESS DE SECURITE	VIOLAZIONE DI CODICE DE SICUREZZA UTENTE	VIOLACION DE SEGURIDAD DE LA ESTACION
Authorization Code Violation	VIOLATION DEU CODE ACCES	VIOLAZION DEL CODICE D'AUTORIZZAZIONE	VIOLACION DE CODIGO DE AUTORIZACION

Table 83: Stored number

English	French	Italian	Spanish
NO NUMBER STORED	AUCUN NUMERO EN MEMOIRE	NESSUN NUMERO IN MEMORIA	NINGUN NUMERO ALMACENADO

Table 84: Special codes

English	French	Italian	Spanish
m (Mark)	M (Marquer)	m (Marcato)	M (Marca)
p (Pause)	P (Pause)	p (Pausa)	P (Pausa)
s (Suppress)	S (Supprimer)	s (Soppresso)	S (Suprimir)
w (Wait)	A (Attendre)	a (Attesa)	E (Espera)
W (Indefinite Wait)	a (Attendre)	A (Attesa)	e (Espera)

Station Hunting

Table 85: Calling party display

English	French	Italian	Spanish
HUNT	Routage	Ricerca	Busqueda

Table 86: Hunt-to station display

English	French	Italian	Spanish
h	r	r	b

In the following displays, x and y denote the Route Plan Number (RPN 1-8), yyy is a 3-letter abbreviation for the day of the week, and zz:zz is the activation time (24-hour time). Also below is the table that lists the 3-letter abbreviations for the day of the week.

Table 87: Time-of-Day routing messages

English	French	Italian	Spanish
ENTER ACTIVATION ROUTE PLAN, DAY & TIME	ENTRER PLAN D'ACTIVATION, JOUR ET HEURE	INTRODURRE PIANO DA ATTIV., GIORNO E ORA	INTRODUZCA PLAN ACT DE RUTAS, DIA Y HORA
ENTER DEACTIVATION DAY AND TIME	ENTRER JOUR ET HEURE DE DESACTIVATION	INTRODURRE GIORNO E ORA DI DISATTIVAZ	INTRODUZCA DIA Y HORA DE DESACTIVACION
OLD ROUTE PLAN: x ENTER NEW PLAN:	ACHEMINEMENT ANT.: x ENTRER NOUVEAU:	INSTRADAMENTO PREC: x INTROD IL NUOVO:	PLAN RUTAS ANT: x INTRODUZCA EL NUEVO:
OLD ROUTE PLAN: x NEW PLAN: y	ACHEMINEMENT ANT.: x NOUVEAU PLAN: y	INSTRADAMENTO PREC: x NUOVO PIANO: y	PLAN RUTAS ANT: x NUEVO PLAN: y
ROUTE PLAN: x FOR yyy ACT-TIME: zz:zz	ACHEM.: x POUR yyy ACT-HEURE: zz:zz	INSTRADAMENTO: x PER yyy ATTIV ORE:zz:zz	PLAN RUTAS: x PARA yyy HORA-ACT: zz:zz
ROUTE PLAN: x FOR yyy DEACT-TIME: zz:zz	ACHEM.: x POUR yyy DESACT-HEURE: zz:zz	INSTRADAM.: x PER yyy DISATTIV ORE:zz:zz	PLAN RUTAS: x PARA yyy HORA-DESACT:zz:zz

To enter the day of the week, the user dials 1 for Sunday, 2 for Monday, and so on.

Table 88: Time-of-Day routing days of the week

English	French	Italian	Spanish
MON	LUN	LUN	LUN
TUE	MAR	MAR	MAR
WED	MER	MER	MIE
THU	JEU	GIO	JUE
FRI	VEN	VEN	VIE
SAT	SAM	SAB	SAB
SUN	DIM	DOM	DOM

English	French	Italian	Spanish
TRANSFER COMPLETED	TRANSFERT EFFECTU	TRASFERIMENTO COMPLETATO	TRANSFERENCIA REALIZADA

Mapping enhanced display characters

Use the following tables to map US English characters to Russian, Japanese, European, or Ukrainian characters. Characters appear on the display terminal in the order in which you enter them. If you want the display to read right to left, enter the characters in reverse order on the screen.

US English to Russian characters

US English to Russian characters

Russian	US English	Russian	US English
space	space	Й	Q
Ф	A	К	R
И	B	Ы	S
С	C	Е	T
В	D	Г	U
У	E	М	V
А	F	Ц	W
П	G	Ч	X
Р	H	Н	Y
Ш	I	Я	Z
О	J	Х	[
Л	K	Ъ	]
Д	L	Ж	;
Ь	M	Э	\
Т	N	Ъ	,
Щ	O	Ю	.
З	P		

US English to Japanese characters

Japanese	US English	Japanese	US English
space	space	コ	:
。	!	サ	;
「	“	シ	<
」	#	ヌ	=
.	\$	セ	>
＊	%	ソ	?
ヲ	&	タ	@
ア	‘	チ	A
イ	(	ツ	B
ハ	)	テ	C
エ	*	ト	D
+	+	ナ	E
+	,	ニ	F
エ	-	フ	G
サ	.	ヘ	H
マ	/	ノ	I
ー	0	ハ	J
ア	1	ヒ	K
イ	2	フ	L
ウ	3	ヘ	M
エ	4	キ	N
オ	5	マ	O
カ	6	ミ	P
キ	7	ム	Q

Telephone Display

Japanese	US English	Japanese	US English
ㇿ	8	ㇾ	R
ㇿ	9	ㇼ	S
ㇿ	[	ㇽ	T
ㇿ	\	ㇾ	U
ㇿ	]	ㇼ	V
	^	ㇽ	W
ㇿ	—	ㇾ	X
		ㇼ	Y
		ㇽ	Z

For Japanese, the letter z and the left brace { and the pipe (|) characters map to Kanji characters as follows:

- The letter z. Symbol for 1,000
- The left brace {. Symbol for 10,000
- The pipe (|). Symbol for Yen

US English to European characters

Some of the characters in the following map appear in only uppercase or lowercase, such as , Ê, ø, and others.

European	US English	European	US English
í	space	ø	=
ï	!	æ	>
ã	“	Ó	?
á	#	î	@
à	\$	å	A
ú	%	þ	B
ù	&	â	C
é	‘	û	D
è	(	ü	E
ç	)	ê	F
†	*	ë	G
Ď	+	ę	H
ý	,	Ç	I
ž	-	ř	J
ö	.	Đ	K
ò	/	ÿ	L
í	0	ñ	M
ï	1	Æ	N
Ä	2	ö	O
Á	3	Î	P
À	4	Å	Q
Ú	5	Ă	R

European	US English	European	US English
Ù	6	Â	S
É	7	Û	T
È	8	Ü	U
Č	9	Ê	V
Ł	:	Ë	W
đ	;	Ɛ	X
Ÿ	<	ś	Y
Ř	Z	â	r
˙	[	Ǻ	s
Ŷ	\	û	t
Ŋ	]	ü	u
Ñ	^	ě	v
ō	_	Ě	w
ì	'	ğ	x
ä	a	Ş	y
β	b	ř	z
û	d	þ	{
Ü	e	ž	
ě	f	ň	}
ë	g		
ğ	h		
š	i		
Ŧ	j		
č	k		
ž	l		
ň	m		
ñ	n		
ö	o		
í	p		
Ā	q		

US English to Ukrainian characters

Ukrainian	US English	Ukrainian	US English
space	space	й	Q
Ф	A	К	R
И	B	;	S
С	C	Е	T
В	D	г	U
у	E	М	V
А	F	Ц	W
П	G	ч	X
Р	H	Н	Y
Ш	I	Я	Z
О	J	Х	[
Л	K	І	]
д	L	Ж	;
б	M	Є	\
Т	N	Б	,
Щ	O	ю	.
З	P		

Administering Telephone Display

This section describes the screens that you use to administer the Telephone Display feature.

Screens for administering Telephone Display

Screen name	Purpose	Fields
Date/Time Mode and Formats - English	Set up the appearance of the date and time displays.	All
Date/Time Mode and Formats - French, Italian, Spanish, User-Defined, and Unicode	Set up the appearance of the date and time displays.	All
Language Translations	Enter translations in a user-defined language.	All
Leave Word Calling Format - English	Set up the appearance of the Leave Word Calling displays.	All
Leave Word Calling Format - French, Italian, Spanish, User-Defined, and Unicode	Set up the appearance of the Leave Word Calling displays.	All

Reports for Telephone Display

The following reports provide information about the Telephone Display feature:

- None

Considerations for Telephone Display

This section provides information about how the Telephone Display feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Telephone Display under all conditions. The following considerations apply to Telephone Display:

- None

Interactions for Telephone Display

This section provides information about how the Telephone Display feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Telephone Display in any feature configuration.

The following interactions apply to all capabilities:

- Distributed Communications System (DCS)

Trunk group and attendant information that is associated with a DCS call can be translated. If the displays are not associated with a DCS call, the name that appears is the name of the trunk group that is administered on the **Trunk Group** screen.

- Single-Digit Dialing and Mixed-Station Numbering

If the system dial plan uses prefixed extensions, the prefix is not displayed when the extension is displayed. Users can use the Return Call button to dial prefixed extensions, because the system dials the prefix, even though the prefix is not displayed.

The following interactions pertain to the Enhanced Telephone Display capability:

- Adjunct Switch Application Interface (ASAI) and related adjuncts

Information that Communication Manager sends to any adjunct is the literal value of the field, not the enhanced characters. The display appears as a string of random characters. For example, "2<@^."

- INTUITY AUDIX Voice Power and Audix Voice Power Lodging

Not supported.

- Data Call Setup

Not supported.

- Distributed Communications Systems (DCS)

All switch nodes in a DCS network must have the same software load installed on each server or media server, must have the enhanced characters enabled, and must have telephones with the same firmware type.

- ECMA and QSIG Networking

Information must be sent between the servers that run Communication Manager.

- Leave Word Calling - Adjunct

Not supported.

- Message Retrieval - Print Messages (Demand Print)

Not supported.

- Monitor 1 and OneVision

Monitor 1 and OneVision receive ASCII characters.

Telephone Display

- OSSI

OSSI displays the literal value of the display field, and not the enhanced characters.

- Passageway Direct Connect

Not supported.

- VUStats

You must use telephones that support enhanced characters. If telephones do not use enhanced characters, the software might clear the display, or show the information on the display incorrectly.

Temporary Bridged Appearance

Use the Temporary Bridged Appearance feature to allow multiappearance telephone users in a Terminating Extension Group (TEG) or a Personal Central Office Line (PCOL) group to bridge onto an existing group call. If the Call Pickup feature is used to answer the call, the originally called party can bridge onto the call. This feature also allows a called party to bridge onto a call that redirects to coverage before the called party can answer the call.

Detailed description of Temporary Bridged Appearance

This section provides a detailed description of the Temporary Bridged Appearance feature.

An incoming call to a Terminating Extension Group (TEG) or Private Central Office Line (PCOL) group is not a call to an individual. However, one particular member of the group can be the most qualified person to handle the given call. If this individual does not answer the call originally, this individual can bridge onto the call. The answering party does not have to transfer the call.

A call to an individual can be answered by a member of a call pickup group. While the call is still connected, the called party can bridge onto the call, and the answering party hangs up.

Call Coverage provides redirection of calls to alternate answering positions or covering users. A temporary bridged appearance is maintained at the called telephone.

The called party can answer the call at any time, even if the call is already answered by a covering user. If the called party does not bridge onto the call, the covering user can use the Consult function of Call Coverage to determine if the called party wants to accept the call. The Consult function uses the temporary bridged appearance that is maintained on the call. When the consult call is finished, the temporary bridged appearance is removed.

Stations that usually have a temporary bridged appearance with their coverage point do not have a temporary bridged appearance if the coverage point is INTUITY AUDIX.

Administering Temporary Bridged Appearance

This section describes the screens that you use to administer the Temporary Bridged Appearance feature.

Screens for administering Temporary Bridged Appearance

Screen name	Purpose	Fields
Feature-Related System Parameters	Enable the Temporary Bridged Appearance feature.	Temporary Bridged Appearance on Call Pickup

Reports for Temporary Bridged Appearance

The following reports provide information about the Temporary Bridged Appearance feature:

- None

Considerations for Temporary Bridged Appearance

This section provides information about how the Temporary Bridged Appearance feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Temporary Bridged Appearance under all conditions. The following considerations apply to Temporary Bridged Appearance:

- Temporary Bridged Appearance allows a party to bridge onto a call. The answering party does not have to transfer the call, which is convenient and saves time.
- Temporary Bridged Appearance does not provide the capability to originate calls, or the capability to answer the calls of another party. The Bridged Call Appearance feature provides these capabilities.
- If two parties are bridged together on an active call with a third party, and if the Conference Tone feature is enabled, conference tone is heard.
- The Bridged Call Appearance feature enhances Temporary Bridged Appearance by allowing:
 - More than one call to an extension to be bridged.
 - Calls to be originated from bridged appearances.

Interactions for Temporary Bridged Appearance

This section provides information about how the Temporary Bridged Appearance feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Temporary Bridged Appearance in any feature configuration.

- Call Coverage

Calls that are redirected to Call Coverage maintain a temporary bridged appearance on the called telephone if a call appearance is available to handle the call. The called party can bridge onto the call at any time. The system can be administered to allow a temporary bridged appearance of the call to either remain at, or be removed from, the covering telephone after the principal bridges onto the call. If two parties are bridged together on an active call with a third party, all three parties hear the bridging tone.

- Consult

Consult calls use the temporary bridged appearance that is maintained on the call. At the conclusion of a consult call, the bridged appearance is no longer maintained. If the principal chooses not to talk with the calling party, the principal cannot bridge onto the call later.

- Conference and Transfer

If a call has, or had a temporary bridged appearance and the call is then conferenced or transferred, and is redirected to coverage again, a temporary bridged appearance is not maintained at the conferenced-to or the transferred-to extension.

- Privacy - Manual Exclusion

When Privacy - Manual Exclusion is activated, other users are prevented from bridging onto a call. A user who attempts to bridge onto a call when this feature is active is dropped.

Tenant Partitioning

Use the Tenant Partitioning feature to provide telecommunications services to multiple independent groups of users through a single server that runs Avaya Communication Manager. The Tenant Partitioning feature usually provides these services from a single provider to multiple tenants of an office complex. Each tenant appears to have a dedicated Communication Manager, even though the tenants share the same Communication Manager. You can also use this feature to provide group services, such as departmental attendants, on a single-customer server that runs Communication Manager.

Detailed description of Tenant Partitioning

This section provides a detailed description of the Tenant Partitioning feature.

The Tenant Partitioning feature is not available with Offer B.

The Tenant Partitioning feature provides the following services to tenants:

- Telephone equipment
- Building wiring
- Public network access and private network access
- Attendant services

You can also use the Tenant Partitioning feature to assign a separate music source to each tenant partition that plays when a user or an attendant places a caller on hold.

Note:

If you use equipment that rebroadcasts music or other copyrighted materials, you might be required to obtain a copyright license from, or pay fees to, a third party. A Magic-on-Hold system does not require such a license. You can purchase a Magic-on-Hold system from Avaya, or from an Avaya business partner.

Proper administration can protect tenant resources, including trunking facilities, and all other Communication Manager endpoints from unauthorized access by other tenants.

For the Tenant Partitioning feature to function properly in your system, you must ensure that:

- All tenants can call and be called by tenant 1. This is the system default. If you change this default, some call types fail. For example, dial 0 fails, as do security violation calls and automatic circuit assurance calls.
- All stations in a call-pickup group are under control of the same tenant.

- All stations with bridged appearances are under control of the same tenant.
- Stations in different departments, for the purposes of attendant services, can call each other.

You must assign a tenant partition number to each entity, such as an endpoint or a virtual endpoint, to which you assign a Class of Restriction (COR). You do not assign a tenant partition number to an authorization code or to fixed-assignment virtual endpoints.

You must specify an attendant group for each tenant that you define, even if the attendant group does not have an assigned console. You must also assign an attendant console to a tenant partition, and you must assign a group number to the attendant console.

Partitioning tenants

The system has a default of one universal tenant for the system. This tenant is in partition 1, and is usually the service provider. Another system default is that the tenant in partition 1 has access to all facilities in the system, and that all other tenants can access the tenant in partition 1. The tenant in partition one is usually referred to as tenant 1.

The service provider creates additional partitions that are based on tenant requirements. When you create tenant partitions, remember that:

- You can assign each Communication Manager endpoint to only one tenant partition. And, you must pass each endpoint to a partition. For example, you must assign each telephone, attendant console, trunk, and virtual endpoint. Virtual endpoints include listed directory numbers and virtual directory number (VDN) to a tenant partition.
- Most tenant partitions are separate units. By default, the system does not allow tenants, except tenant 1, to access telephones or trunk facilities that belong to other tenants. However, you can change this system default. You can give explicit permission for a tenant to access another tenant. For example, you can allow tenant 6 to call only tenant 9 and tenant 16.

Note:

If a tenant has permission to call another tenant, the tenant has access to all the endpoints that belong to the other tenant. For example, if tenant 6 has permission to call tenant 9, tenant 6 can also use any trunk facilities in tenant partition 9.

- The system can use tenant partitioning restrictions to block calls between two users in the system. However, either user can use the Direct Inward Dialing (DID) extension of the other user to call over the public network.
- If tenants want to share some, but not all, facilities, you must group the shared facilities into a separate partition. For example, if two tenants share a trunk, but do not have direct system access to call each other, put the trunk in its own partition. Both tenants can then access the trunk.

You must also consider the constraints and the requirements of access control, attendant services, music sources on hold, and network route selection when you establish or assign partitions.

Access control

Tenant-to-tenant access restrictions limit some features, such as Call Coverage. For example, the coverage of tenant 2 includes a telephone from tenant 3 in its coverage path. If tenant 4 has permission to call tenant 2, but does not have permission to call tenant 3, a call from tenant 4 to tenant 2 skips the tenant 3 coverage point.

You might also want to set up tenants with special access privileges. For example, you might give a restaurant in an office complex permission to receive calls from any other tenant. You might also want tenants to have permission to call, or be called by, building security, or those who administer and troubleshoot Communication Manager.

You can also assign all central office (CO) trunks to one tenant partition. All other tenants can then access the CO trunks.

Attendant services

With Tenant Partitioning, you can administer personalized attendant services for each tenant.

The system provides one principal attendant, and either one night attendant or one day and night attendant, for each attendant group. You assign each tenant an attendant group for service. Each attendant group has a separate queue. Queue warning lamps remain dark when Tenant Partitioning is active. However, when someone presses a queue-status button, the system displays the status of the attendant-group queue. The total number of calls queued for all tenants cannot exceed the system limit.

Attendant groups can serve more than one tenant, if the two tenants have permission to access each others facilities. For example, can use the facilities of one tenant to extend a call to another tenant, if the tenant has permission to access the facilities of the other tenant.

Each tenant can have a designated night-service station. When a night attendant is unavailable, the system directs calls to an attendant group that is in night service, to the night-service station of the appropriate tenant. When someone places an attendant group into night service, all trunk groups and hunt groups that belong to tenants that the attendant group serves, go into night service. In this case, the system routes incoming calls to the night-service destination of the appropriate tenant. Each tenant can have exclusive access to the following entities:

- Listed directory number (LDN) night destination
- Trunk answer on any station (TAAS) port
- Night attendant

An attendant can specify that access to a trunk group is under attendant control, if the trunk group is assigned to a tenant served by that attendant group. The system directs any valid user attempt to access the trunk group to the attendant group that serves the tenant.

Network route selection

You can place trunk groups that belong to different tenants in the same route pattern. Calls that the system routes to that pattern select the first trunk group in the pattern that has caller access permission.

Tenant Partitioning examples

The following example describes how you might administer Tenant Partitioning in an office complex.

You assign tenant partition 1, the universal tenant, as the service provider. All other tenants can call, and be called by, the service provider.

You assign tenant partitions 2 through 15 to individual businesses in the complex. You maintain the system-default restrictions for these tenants. These restrictions specify that tenants cannot access the telephones, the trunk facilities, or the other Communication Manager endpoints that belong to other tenants.

You assign tenant partition 16 to the restaurant in the building complex. You give all tenants permission to call the restaurant. However, to prevent access to trunks and other facilities that belong to other tenants, you do not allow the restaurant to call the other tenants.

You assign tenant partition 17 to all the CO trunk groups. You give all tenants permission to call tenant 17.

You assign tenant partition 18 to a trunk group that tenants 3 and 7 want to share. You give tenants 3 and 7 access to this partition, and you deny all other tenants access to partition 18. To prevent toll fraud, you do not allow tenant 18 to place calls to tenant 18.

All tenants can use the same Automatic Route Selection (ARS) route pattern. In this example, the trunk for tenant partition 18, the private trunk that tenants 3 and 7 share, is first in the route pattern. Tenant partition 17 is second in the route pattern. The system routes calls that tenants 3 and 7 make to partition 18 and then, as a second option, to partition 17. The system routes all other tenants directly to partition 17, because you deny all other tenants access to partition 18.

Assign the facilities that the tenants do not share to the tenant partition that the facilities serve. These facilities can include trunk groups, VDNs, telephones, attendant consoles, and other endpoints.

[Table 89: Calling permissions for the partitions](#) on page 1275 summarizes the calling permissions for the different tenant partitions. Yes indicates that the partitions have permission to call, and be called by, each other. No indicates that partitions cannot call, or be called by, each other.

Table 89: Calling permissions for the partitions

Calling tenant partition number	Called tenant partition number					
	1	2, 4 through 6, and 8 through 15	3, 7	16	17	18
1	Yes	Yes	Yes	Yes	Yes	Yes
2, 4-6, 8-15	Yes	Each partition can call itself, but cannot call the other partitions.	No	Yes	Yes	No
3, 7	Yes	No	Each partition can call itself, but cannot call the other partitions.	Yes	Yes	Yes
16	Yes	No	No	Yes	Yes	No
17	Yes	Yes	Yes	Yes	Yes	No
18	Yes	No	Yes	No	No	No

Multiple Music-on-Hold

Tenant Partitioning allows you to assign a separate music source to each tenant partition. A caller hears the music when a user places a call on hold. The tenant number that you assign to the called extension usually determines the music source that the user hears. This capability allows you to customize the music, or the messages, for the business needs of each tenant partition.

If the COR of the user extension that places the call on hold allows music-on-hold, a caller on hold hears the music source that is assigned to the partition at which the call initially terminates. For example, if the system first routes a call to an INTUITY automated attendant, and then routes the call to the appropriate tenant partition, the caller who is on hold hears the music source of the INTUITY automated attendant. The caller who is on hold does not hear the music source of the tenant partition to which the system routes the call. Likewise, if a caller in tenant partition 2 makes an out-going call that uses the trunk groups of tenant 3, the caller hears the music source that is assigned to tenant 3. If the COR of the called extension does not allow music on hold, the caller hears nothing.

The maximum number of allowed music sources is the same as the maximum number of allowed tenant partitions. More than one tenant partition can use each music source.

[Table 90: Types of music-on-hold](#) on page 1276 shows which music-on-hold types that you can assign to each tenant partition.

Table 90: Types of music-on-hold

Type	System response for a call who is on hold
none	Silence
tone	System-wide administered tone
music	This is the type of music that is associated with the administered port. The number of allowed music sources equals the number of allowed tenant partitions. Each partition can have its own music source.

Administering Tenant Partitioning

The following steps are part of the administration process for the Tenant Partitioning feature:

- [Defining a tenant partition](#)
- [Assigning a tenant partition number to an access telephone](#)
- [Assigning a tenant partition number to an agent login ID](#)
- [Assigning a tenant partition number to an announcement](#)
- [Assigning a tenant partition number to an attendant](#)
- [Assigning a tenant partition number to a data module](#)
- [Assigning a tenant partition number to a hunt group](#)
- [Assigning a tenant partition number to a loudspeaker paging zone](#)
- [Assigning a tenant partition number to the remote access extension](#)
- [Assigning a tenant partition number to a user extension](#)
- [Assigning a tenant partition number to a terminating extension group](#)
- [Assigning a tenant partition number to a trunk group](#)
- [Assigning a tenant partition number to a vector directory number](#)
- [Assigning the sources of music for the tenant partitions](#)

This section describes:

- Any prerequisites for administering the Tenant Partitioning feature
- The screens that you use to administer the Tenant Partitioning feature
- Complete administration procedures for the Tenant Partitioning feature

Prerequisites for administering Tenant Partitioning

You must complete the following actions before you can administer the Tenant Partitioning feature:

- Ensure that the **Tenant Partitioning?** field on the **Optional Features** screen is set to **y**. If the **Tenant Partitioning?** field is set to **n**, your system is not enabled for the Tenant Partitioning feature. Contact your Avaya representative for assistance before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Screens for administering Tenant Partitioning

Screen name	Purpose	Fields
Access Endpoint	Assign a tenant partition number to an access endpoint.	TN
Agent LoginID	Assign a tenant partition number to an agent login ID.	TN
Announcements/Audio Sources	Assign a tenant partition number to an announcement that is assigned to an extension.	TN
Attendant Console	Assign the group number and the tenant partition number to an attendant.	• Group • TN
Data Module	Assign a tenant partition number to a data module.	TN
Feature-Related System Parameters	Enable the Tenant Partitioning feature for your system.	Tenant Partitioning?
Hunt Group	Assign a tenant partition number to a hunt group.	TN
Loudspeaker Paging	Assign a tenant partition number to each loudspeaker paging zone.	TN
Music Sources	Assign the sources of the music for the system.	All
Remote Access	Assign a tenant partition number to the remote access extension.	TN

Screen name	Purpose	Fields
Station	Assign a tenant partition number to a user extension.	TN
Tenant	Define a tenant to the system.	All
Terminating Extension Group	Assign a tenant partition number to a Terminating Extension Group (TEG).	TN
Trunk Groups	Assign a tenant partition number to a trunk group.	TN
Vector Directory Number	Assign a tenant partition number to a vector directory number (VDN).	TN

Defining a tenant partition

To assign a music source to a tenant partition:

1. Type **change tenant *n***, where *n* is the tenant that you want to change. Press **Enter**.

The system displays the **Tenant** screens ([Figure 321: Tenant screen](#) on page 1278).

Figure 321: Tenant screen

```

change tenant 18
                                Tenant 18

      Tenant Description: _____

      Attendant Group: 1

Ext Alert Port (TAAS): _____ Ext Alert (TAAS) Extension: ____*

      Night Destination: _____

      Music Source: 1
  
```

The **Tenant** field is a display-only field. This field contains the tenant number that you typed on the command line.

2. In the **Tenant Description** field, type a description of the tenant. You can type 40 characters. You can leave the field blank, but a description helps you identify the tenant when you change other information about the tenant.

3. In the **Attendant Group** field, type the number of the attendant group for the tenant partition. The system assigns the number 1 as the default for the **Attendant Group** field.

The default for the system is that all attendant groups exist. However, the attendant group is empty if you do not assign consoles to the attendant group.

4. In the **Ext Alert Port (TAAS)** field, perform one of the following actions:

- If trunk answer from any station (TASS) alert port information does not exist, type an x.
- If TASS alert port information exists, enter the 7-character port number.

The circuit pack must be installed and defined to the system before you can refer to the circuit pack in the **Ext Alert Port (TAAS)** field. The port type and the object type must be consistent. You can assign the port to only one tenant. Use the information in [Port information for the Ext Alert Port \(TAAS\) field](#) on page 1279 to construct the 7 character port number.

Table 91: Port information for the Ext Alert Port (TAAS) field

Characters	Meaning	Value
1-2	Cabinet Number	01 through 03
3	Carrier	A through E
4-5	Slot Number	00 through 20
6-7	Circuit Number	01 through 31

5. In the **Night Destination** field, type the night service station extension, if you want night service for the tenant. Type an extension that already exists in the system.

6. In the **Ext Alert (TAAS) Extension** field, type an extension that already exists in the system.

Note that, the system displays the **Ext Alert (TAAS) Extension** field if you type an x in the **Ext Alert Port (TAAS)** field.

7. In the **Music** field, type the source of the music or the tone for the tenant partition.

8. Press **Enter** to save your changes.

9. Click **Next** until you see the **Calling Permission** area ([Figure 322: Tenant screen](#) on page 1280).

Note that the **Tenant** field is a display only field. This field contains the tenant number that you entered on the command line.

Figure 322: Tenant screen

Tenant 18

CALLING PERMISSION (Enter y to grant permission to call specified Tenant)

1? y	11? n	21? n	31? n	41? n	51? n	61? n	71? n	81? n	91? n
2? n	12? n	22? n	32? n	42? n	52? n	62? n	72? n	82? n	92? n
3? n	13? n	23? n	33? n	43? n	53? n	63? n	73? n	83? n	93? n
4? n	14? n	24? n	34? n	44? n	54? n	64? n	74? n	84? n	94? n
5? n	15? n	25? n	35? n	45? n	55? n	65? n	75? n	85? n	95? n
6? n	16? n	26? n	36? n	46? n	56? n	66? n	76? n	86? n	96? n
7? n	17? n	27? n	37? n	47? n	57? n	67? n	77? n	87? n	97? n
8? n	18? y	28? n	38? n	48? n	58? n	68? n	78? n	88? n	98? n
9? n	19? n	29? n	39? n	49? n	59? n	69? n	79? n	89? n	99? n
10? n	20? n	30? n	40? n	50? n	60? n	70? n	80? n	90? n	100? n

10. In the numbered fields, perform one of the following actions:

- To enable calling permission between the tenant that you entered in the command line and any other tenant in the system, type **y**.
- To disable calling permission between the tenant that you entered in the command line and any other tenant in the system, type **n**.

The system default for the calling permissions are to:

- Allow the tenant to call itself
- Allow the tenant to call tenant 1
- Turn off all other calling permissions between tenants

Assigning a tenant partition number to an access telephone

To assign a tenant partition number to an access telephone:

1. Type **change access-endpoint** *n*, where *n* is the extension of the access telephone. Press **Enter**.

The system displays the **Access Endpoint** screen ([Figure 323: Access Endpoint screen](#) on page 1281).

Figure 323: Access Endpoint screen

change access-endpoint 30001		Page 1 of 1
ACCESS ENDPOINT		
Extension: 30001	(Starting) Port:_____	
Communication Type: voice-grade-data	Name:_____	
COR: 1	COS: 1	
TN: 1	ITC: restricted	

-
2. In the **TN** field, type the tenant partition number for the access endpoint. The valid entries for this field are **1** to **100**.
 3. Press **Enter** to save your changes.

Assigning a tenant partition number to an agent login ID

To assign a tenant partition number to an announcement:

1. Type **change agent loginid *n***, where *n* is the number of the agent login ID that you want to change. Press **Enter**.

The system displays the **Agent LoginID** screen ([Figure 324: Agent LoginID screen](#) on page 1282).

Figure 324: Agent LoginID screen

change agent-loginID 100		Page 1 of 2
AGENT LOGINID		
Login ID: 100	AAS? n	
Name:	AUDIX? n	
TN: 1	LWC Reception: spe	
COR: 1	LWC Log External Calls? n	
Coverage Path:	AUDIX Name for Messaging:	
Security Code:	LoginID for ISDN Display? n	
	Password:	
	Password (enter again):	
	Auto Answer: station	
WARNING: Agent must log in again before skill changes take effect		

2. In the **TN** field, type the tenant partition number for the agent login ID. The system assigns the number 1 as the default for a tenant partition number.
3. Press **Enter** to save your changes.

Assigning a tenant partition number to an announcement

To assign a tenant partition number to an announcement:

1. Type **change announcements**. Press **Enter**.

The system displays the **Announcements/Audio Sources** screen

([Figure 325: Announcements/Audio Sources screen](#) on page 1283).

Figure 325: Announcements/Audio Sources screen

Page 1 of X

ANNOUNCEMENTS/AUDIO SOURCES										
	Ext.	Type	COR	TN	Name	Q	QLen	Pro	Rate	Port
1:	1701	analog	1	1	busy	y	1000	N/A	N/A	1B0404
2:	1702	analog	1	1	out of service		N/A	N/A	N/A	1B1701
3:	1703	integrated	1	1	please dial	n	N/A	n	32	1B18
4:	1704	aux-trunk	1	1	call-back	y	20	N/A	N/A	2C0902
5:			1	1		n				
6:			1	1		n				
7:			1	1		n				
8:			1	1		n				
9:			1	1		n				
10:			1	1		n				
11:			1	1		n				
12:			1	1		n				
13:			1	1		n				
14:			1	1		n				
15:			1	1		n				
16:			1	1		n				

2. In the **TN** field, type the tenant partition number for the extension. The system assigns the number 1 as the default for a tenant partition number.
3. Press **Enter** to save your changes.

Assigning a tenant partition number to an attendant

To assign the tenant partition number to an attendant:

1. Type **change attendant *n***, where *n* is the number of the attendant that you want to change.

The system displays the Attendant Console screen, [Figure 326: Attendant Console screen](#) on page 1284.

Figure 326: Attendant Console screen

change attendant 1Page 1 of 4

ATTENDANT CONSOLE 1

Type: console
Extension: 70199
Console Type: principal
Port: 64B0824

Name: Gertrude Attendant 64B0824
Group: 1
TN: 1
COR: 1
COS: 1

Auto Answer: none
Data Module? n
Disp Client Redir? n
Display Language: english
H.320 Conversion? n

DIRECT TRUNK GROUP SELECT BUTTON ASSIGNMENTS (Trunk Access Codes)

Local Remote

Local Remote

Local Remote

1:
2:
3:
4:

5:
6:
7:
8:

9:
10:
11:
12:

HUNDREDS SELECT BUTTON ASSIGNMENTS

1:
2:
3:
4:

5:
6:
7:
8:

9:
10:
11:
12:

13:
14:
15:
16:

17:
18:
19:
20:

2. In the **Group** field, type the group number for the Attendant. The valid entries for this field are **1 to 28**.
3. In the **TN** field, type the tenant partition number for the Attendant. The valid entries for this field are **1 to 100**.
4. Press **Enter** to save your changes.

Assigning a tenant partition number to a data module

To assign a tenant partition number to a data module:

1. Type **change data-module *n***, where *n* is the extension of the data module. Press **Enter**.

The system displays the **Data Module** screen ([Figure 327: Data Module screen](#) on page 1285).

Figure 327: Data Module screen

change data-module 30		Page 1 of 2
DATA MODULE		
Data Extension: 30	Name: 27	BCC:
Type: data-line__	COS: 1	
Port: _____	COR: 1	
ITC: restricted__	TN: 1	Connected to: dte
ABBREVIATED DIALING		
List1:		
SPECIAL DIALING OPTION:		
ASSIGNED MEMBER (Station with a data extension button for this data module)		
Ext	Name	
1: 1002	27 character	station name

2. In the **TN** field, type the tenant partition number for the data module. The valid entries for this field are **1** to **100**.
3. Press **Enter** to save your changes.

Assigning a tenant partition number to a hunt group

To assign a tenant partition number to a hunt group:

1. Type **change hunt-group *n***, where *n* is the hunt group number to which you want to assign a partition number. Press **Enter**.

The system displays the **Hunt Group** screen ([Figure 328: Hunt Group screen](#) on page 1286).

Figure 328: Hunt Group screen

change hunt-group 4		HUNT GROUP		Page 1 of X
Group Number: 4__			ACD?	
Group Name: _____			Queue? y	
Group Extension: _____			Vector?	
Group Type: _____			Coverage Path: _____	
TN: _____		Night Service Destination: _____		
COR: _____		MM Early Answer?		
Security Code: _____				
ISDN Caller Disp: _____				
Queue Length: _____				
Calls Warning Threshold: _____	Port: x	Extension: _____		
Time Warning Threshold: _____	Port: x	Extension: _____		

2. In the **TN** field, type the tenant partition number for the hunt group.
3. Press **Enter** to save your changes.

Assigning a tenant partition number to a loudspeaker paging zone

To assign a tenant partition number to a loudspeaker paging zone:

1. Type **change paging loudspeaker**. Press **Enter**.

The system displays the **Loudspeaker Paging** screen ([Figure 329: Loudspeaker Paging screen](#) on page 1287).

Figure 329: Loudspeaker Paging screen

change paging loudspeaker
Page 1 of 1

LOUDSPEAKER PAGING

CDR? y
 Voice Paging Timeout (sec):
 Code Calling Playing Cycles:

PAGING PORT ASSIGNMENTS

Zone	Port	Voice Paging TAC COR TN	Code Calling TAC COR TN	Location:
1:			1	27 character LOUDSPK PAGING
2:			1	PAGING
3:			1	PAGING
4:			1	PAGING
5:			1	PAGING
6:			1	PAGING
7:			1	PAGING
8:			1	PAGING
9:			1	PAGING
ALL:			1	

2. In the **TN** field, type the tenant partition number for the loudspeaker paging zone.
3. Press **Enter** to save your changes.

Assigning a tenant partition number to the remote access extension

To assign a tenant partition number to the remote access extension:

- 1. Type **change remote-access**. Press **Enter**.

The system displays the **Remote Access** screen ([Figure 330: Remote Access screen](#) on page 1288).

Figure 330: Remote Access screen

change remote-access

REMOTE ACCESS

Remote Access Extension_____

Barrier Code Length_____

Authorization Code Required? y

Barrier CodeCORTN COSExpiration DateNo. of CallsRemote Access Dial Tone: nCalls Used

1:_____1_1_1_ __/__/__ _____

2:_____1_1_1_ __/__/__ _____

3:_____1_1_1_ __/__/__ _____

4:_____1_1_1_ __/__/__ _____

5:_____1_1_1_ __/__/__ _____

6:_____1_1_1_ __/__/__ _____

7:_____1_1_1_ __/__/__ _____

8:_____1_1_1_ __/__/__ _____

9:_____1_1_1_ __/__/__ _____

10:_____1_1_1_ __/__/__ _____

Permanently Disable? __ Disable Following A Security Violation? y

(NOTE: You must logoff to effect permanent disabling of Remote Access)

- 2. In the **TN** field, type the tenant partition number for the remote access extension. The system assigns the number 1 as the default tenant partition number.
- 3. Press **Enter** to save your changes.

Assigning a tenant partition number to a user extension

To assign a tenant partition number to a user extension:

1. Type **change station *n***, where *n* is the extension to which you want to assign a tenant partition number. Press **Enter**.

The system displays the **Station** screen ([Figure 331: Station screen](#) on page 1289).

Figure 331: Station screen

change station 30019		STATION	
Extension: 30019	Lock Messages? n	BCC: 0	
Type: 4612	Security Code: *	TN: 1	
Port: S04007	Coverage Path 1:	COR: 1	
Name: station 30019	Coverage Path 2:	COS: 1	
	Hunt-to Station:		
STATION OPTIONS			
Loss Group: 19	Personalized Ringing Pattern: 1		
	Message Lamp Ext: 30019		
Speakerphone: 2-way	Mute Button Enabled? y		
Display Language: english			
	Media Complex Ext:		
	IP SoftPhone? n		

-
2. In the **TN** field, type the tenant partition number for the user extension.
 3. Press **Enter** to save your changes.

Assigning a tenant partition number to a terminating extension group

To assign a tenant partition number to a Terminating Extension Group (TEG):

- 1. Type **change term-ext-group *n***, where *n* is the terminating extension group number to which you want to assign a tenant partition number. Press **Enter**.

The system displays the **Terminating Extension Group** screen ([Figure 332: Terminating Extension Group screen](#) on page 1290).

Figure 332: Terminating Extension Group screen

change term-ext-group

Page 1 of 1

TERMINATING EXTENSION GROUP

Group Number: 1

Group Extension:

Group Name: 27 character

Coverage Path:

Security Code:

COR: 1

TN: 1

ISDN Caller Disp:

LWC Reception: none

AUDIX Name:

Messaging Server Name:

GROUP MEMBER ASSIGNMENTS

Ext	Name	Ext	Name
1: 51001	27 character name sta 51001	3:	
2:		4: 51002	27 character name sta 51002

- 2. In the **TN** field, type the tenant partition number for the TEG. The system assigns the number 1 as the default for a tenant partition number.
- 3. Press **Enter** to save your changes.

Assigning a tenant partition number to a trunk group

To assign a tenant partition number to a trunk group:

1. Type **change trunk-group *n***, where *n* is the trunk group number to which you want to assign a tenant partition number. Press **Enter**.

The system displays the **Trunk Group** screen ([Figure 333: Trunk Group screen](#) on page 1291).

Figure 333: Trunk Group screen

change trunk-group 3		Page 1 of 22
TRUNK GROUP		
Group Number: 3	Group Type: isdn	CDR Reports: y
Group Name: GERT tg3 tf Lulu tg26 PRI	COR: 2	TN: 1 TAC: 1003
Direction: two-way	Outgoing Display? y	Carrier Medium: PRI/BRI
Dial Access? y	Busy Threshold: 255	Night Service:
Queue Length: 0		
Service Type: tie	Auth Code? n	TestCall ITC: rest
	Far End Test Line No:	
TestCall BCC: 4		
TRUNK PARAMETERS		
Codeset to Send Display: 6	Codeset to Send National IEs: 6	
Max Message Size to Send: 260	Charge Advice: none	
Supplementary Service Protocol: a	Digit Handling (in/out): enbloc/enbloc	
Trunk Hunt: cyclical	QSIG Value-Added? n	
	Digital Loss Group: 13	
Incoming Calling Number - Delete:	Insert:	Format:
Bit Rate: 1200	Synchronization: async	Duplex: full
Disconnect Supervision - In? y Out? n		
Answer Supervision Timeout: 0		

2. In the **TN** field, type the tenant partition number for the trunk group.
3. Press **Enter** to save your changes.

Assigning a tenant partition number to a vector directory number

To assign a tenant partition number to a vector directory number (VDN):

1. Type **change vdn *n***, where *n* is the VDN to which you want to assign a tenant partition number. Press **Enter**.

The system displays the **Vector Directory Number** screen ([Figure 334: Vector Directory Number screen](#) on page 1292).

Figure 334: Vector Directory Number screen

change vdn 5000	VECTOR DIRECTORY NUMBER	Page 1 of 1
Extension: 5000 Name: Vector Number: 234 Attendant Vectoring: n Meet-me Conferencing? n Allow VDN Override? n COR: 59 TN: 1 Measured: none Acceptable Service Level (sec): VDN of Origin Annc. Extension: 301 1st Skill: 2nd Skill: 3rd Skill:		

2. In the **TN** field, type the tenant partition number for the VDN.
3. Press **Enter** to save your changes.

Assigning the sources of music for the tenant partitions

To assign the sources of music for the tenant partitions:

1. Type **change music-sources**. Press **Enter**.

The system displays the **Music Sources** screen ([Figure 335: Music Sources screen](#) on page 1293).

Figure 335: Music Sources screen

change music-sources				Page 1 of X
Music Sources				
Source	Type	Port	Description	
1	music	01A1003	Easy listening	
2	tone		Tone-on-Hold	
3	music	01A1004	Rock	
4	none			
5	none			
6	none			
7	music	12B1301	Oldies	
8	none			
9	none			
10	none			
11	music	04C2003	Classical	
12	none			
13	none			
14	none			
15	none			

The **Source** field is a display-only field.

Note that if the **Tenant Partitioning?** field on the **Optional Features** screen is set to **y**:

- The **Music/Tone on Hold** field on the **Feature-Related System Parameters** screen disappears.
- The value in the **Music/Tone on Hold** field on the **Feature-Related System Parameters** screen appears in the first **Source** field on the **Music Sources** screen.
- If the value in the **Music/Tone on Hold** field on the **Feature-Related System Parameters** screen contained **music**, the port address also appears on the **Music Sources** screen.

Note that when you change the **Tenant Partitioning?** field on the **Optional Features** screen from **y** to **n**:

- The **Music/Tone on Hold** field reappears on the **Feature-Related System Parameters** screen.
 - The system displays the value from the **Music Sources** screen, in the **Music/Tone on Hold** field on the **Feature-Related System Parameters** screen.
2. In the **Type** field, perform one of the following actions:
- If you want the users to hear music, type **music**.
 - If you want the users to hear the tone-on-hold tone, type **tone**.
You can specify **tone** for only one music source.
 - If you want the users to hear nothing, type **none**.

3. In the **Port** field, type the auxiliary trunk address or the analog port address of the music source. You cannot enter duplicate addresses in the **Port** field.

The system displays the **Port** field only if you typed **music** in the **Type** field.

4. In the **Description** field, type a maximum of 20 characters that describe the source of the music.

The system displays the **Description** field, only if you typed **music** or **tone** in the **Type** field.

5. Press **Enter** to save your changes.

Reports for Tenant Partitioning

The following reports provide information about the Tenant Partitioning feature:

- None

Considerations for Tenant Partitioning

This section provides information about how the Tenant Partitioning feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Tenant Partitioning under all conditions. The following considerations apply to Tenant Partitioning:

- None

Interactions for Tenant Partitioning

This section provides information about how the Tenant Partitioning feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Tenant Partitioning in any feature configuration.

Tenant-partition identification is not passed between servers. A network of servers that run Communication Manager does not enforce Tenant Partitioning restrictions without special administration. For example, Tenant Partitioning on a network of servers that run Communication Manager does not enforce tenant-specific tie trunks.

Administration of the following features requires special care to avoid unintended access between tenants.

- Bridging
- Call Pickup
- Call Vectoring
- Controlled Restriction
- Facility Busy Indication
- Facility Test Calls
- Integrated Directory
- Inter-PBX Attendant Calls
- Main/Satellite/Tributary
- Malicious Call Trace
- Personal central office (CO) line
- Private Networking - automatic alternate routing (AAR)
- Service Observing
- Uniform Dial Plan

Specific information about how the Tenant Partitioning feature interacts with other features follows.

- Automatic Alternate Routing (AAR) and Automatic Route Selection (ARS)

The Tenant Partitioning feature is not the same as the Time-of-Day Plan Numbers or the Partition Groups in AAR and ARS.

However, if you use the Tenant Partitioning feature, you can use the Time-of-Day Plan Numbers and the Partition Groups in AAR and ARS.

- Attendant and Attendant Group features

The Tenant Partitioning feature creates multiple attendant groups. Attendant operations such as direct-station or direct trunk group select (DTGS) are subject to tenant-to-tenant restrictions, both at selection time and at split time.

All the calls that an attendant within an attendant group places on hold hear the music source from the attendant group.

- Attendant Control of Trunk Group Access

An attendant group controls access to the trunk groups of the tenants that the attendant group serves. An attendant does not control access to any other trunk groups.

Tenant Partitioning

- AUDIX and embedded AUDIX

The system applies the same tenant-to-tenant restrictions to AUDIX voice and data ports that the system applies to any other endpoints.

AUDIX can restrict one group of subscribers from sending voice mail to another tenant partition group.

Those who control the tenant partitions can:

- Create 10 different communities within each AUDIX
- Allow voice message access across the community boundaries
- Deny voice message access across the community boundaries

- Authorization Codes

Authorization codes are associated with class of restriction (COR). If you want to assign a unique set of authorization codes to a tenant, you create a unique set of CORs. You only assign the CORs to objects that are within the partition that the tenant uses.

- Automatic Wakeup

Those who control a tenant partition assign a music source to the partition. The system uses this music source as the wakeup music for users in the partition.

- Bridged Call Appearance

Assign all stations with bridged call appearances to the same tenant.

- Call Coverage

The tenant-to-tenant access restrictions apply to coverage paths. The system does not allow a call to cover to a tenant if the tenant-to-tenant access restrictions do not allow the user to call the tenant.

When you specify an attendant in a coverage path, the system accesses the attendant group of the called tenant. The system does not access the attendant group of the calling tenant.

When the system uses the Call Coverage feature for a call, and a user answers the call and then places the call on hold, the system plays the music-on-hold music that is assigned to the original called party.

- Call Detail Recording (CDR)

CDR does not report the tenant partition number of the extension or the trunk group that the system uses. You must infer the tenant partition number from the extension or the trunk-group number.

- Call Pickup

Assign all stations in a call-pickup group to the same tenant. The system supports Call Pickup only if the caller and the called party can both call the pickup user. The caller and the called party do not need to be in the same pickup group.

- Call Vectoring and Vector Directory Number (VDN)

When the system routes a call to a new destination as a result of a vector step, the caller hears the music that is assigned to the last active VDN.

While a call is in vector processing, the system uses the tenant number that is assigned to the active VDN, as determined by VDN Override, to select the music source for callers on hold. Note the following exception. If you use a **wait-time <time> hearing <extension> then <treatment 2>** command where the **<extension>** is a music source, that music source plays instead of the music source that is associated with the active VDN.

The COR that is assigned to the VDN must allow music-on-hold.

- Call Management System (CMS)

You can administer CMS to provide CMS reports to each tenant. You can restrict each CMS login to control, on a permission basis, only those entities that are assigned to a particular tenant. Outputs to separate printers allow any tenant to print their own CMS reports. The tenant-partitioning provider must administer CMS to provide this separation of tenant permissions.

- Dial Access to Attendant

When a tenant dials an attendant, the tenant accesses the attendant group to which the tenant is assigned.

- Emergency Access to the Attendant

When a tenant dials the emergency access, the tenant accesses the attendant group to which the tenant is assigned.

- Expert Agent Selection (EAS)

The COR that you assign to the logical agent ID in the EAS system determines whether callers that are on hold hear music. The COR that you assign to the physical extension does not control whether callers that are on hold hear music.

- Hunt groups

The tenant number that you assign to the hunt group extension determines the music source that the callers to the hunt group hear while the callers are in queue or on hold.

- Intercept Treatment

When access to the attendant is designated as intercept treatment, the caller accesses the attendant group to which the caller is assigned.

- Malicious Call Trace (MCT)

The system assigns MCT extensions to tenant partition 1 as the default for the system. If MCT is enabled, any user who has permission to call tenant partition 1 can use MCT.

- Multiple Listed Directory Numbers (LDNs)

Assign a tenant partition to each LDN.

Tenant Partitioning

- Multiple Audio and Music Sources for Vector Delay

When you specify the audio source by a **wait-time <time> hearing <treatment>** vector step, the audio source that is assigned to the tenant number of the active VDN is the audio source that plays.

If you use a **wait-time <time> hearing <extension> then <treatment 2>** command where the **<extension>** is an audio source, that audio source plays instead of the audio source that is associated with the active VDN. For information on administering multiple audio sources, see the *Avaya Communication Manager Contact Center Call Vectoring and Expert Agent Selection (EAS) Guide*.

- Music-on-Hold Access

You can assign a unique source for music to each tenant.

- Night Service

Each tenant can have a listed directory number (LDN) night destination, a trunk answer on any any station (TAAS) port, or a night attendant that only the tenant uses.

- PC Interfaces

You must assign each PC interface to a tenant partition.

- PC/PBX Connections

You must assign each PC/PBX Connection to a tenant partition.

- PC/ISDN

You must assign each PC/ISDN to a tenant partition.

- Remote Access

You must assign each remote access barrier code to a tenant.

- Traffic Studies

Traffic studies do not report the tenant partition number of the extension or the trunk group. You must infer the tenant partition number from the extension or trunk-group number.

- Uniform Dial Plan (UDP)

If a UDP is in place between servers, the system does not pass tenant partition identification between the servers. The system does not enforce tenant-partition restrictions between the servers unless you provide special administration.

Tenant Partitioning restrictions do not override COR restrictions. COR restrictions are independent of tenant partitions.

Terminal Translation Initialization

Use the Terminal Translation Initialization (TTI) feature to merge an X-port extension to a valid port, or to separate an extension from a port.

Detailed description of Terminal Translation Initialization

This section provides a detailed description of the Terminal Translation Initialization (TTI) feature.

Use TTI to:

- Merge an X-port extension to a valid port. To merge an X-port extension to a valid port, enter the system-wide TTI security code, and then the extension from a telephone that is connected to the valid port.
- Separate an extension from the port to which the extension is assigned. To separate the extension from the port, enter the required numbers. When you enter the required numbers, the extension is administered as an X port.

When TTI is enabled for voice, all voice ports, except Basic Rate Interface (BRI) ports, become TTI ports, or ports from which a TTI merge sequence can occur.

You usually use TTI to move telephones. However, you can also use TTI to connect and move attendants and data modules.

Attendant consoles

You must assign an extension to the attendant console, if you want the attendant to use TTI.

TTI port translations are the same for both digital telephones and attendant consoles. To merge a digital TTI voice port and an attendant console, you must:

1. Administer the attendant console as an X port.
2. Plug a digital telephone into the jack that is assigned to the attendant console.
3. Enter the TTI merge digit sequence at the digital telephone.
4. Unplug the digital telephone.
5. Plug the attendant console into the jack.

You can separate an attendant console from its port only through administration. A TTI separate request from an attendant console gives the user intercept treatment.

Data modules

The system provides status information during the TTI merge, and the separate operations on a telephone that is connected to a data module. If the **TTI State** field on the **Feature-Related System Parameters** screen is set to **data**, the system displays the status information. If the **TTI State** field on the **Feature-Related System Parameters** field is set to **voice**, the system generates tones to indicate status.

For a standalone data module, you enter the TTI merge and separate digit sequence on one line at a DIAL prompt:

- DIAL: *<TTI feature access code><TTI security code><extension>*

The system does not generate separate prompts for the TTI security code and the extension.

Voice and data telephones

The system process a telephone with a data terminal (DTDM) as a telephone in the TTI merge and separation sequence operations. The DTDM is merged with and separated from its hardware translation at the same time that the telephone is merged or separated. You can start the TTI merge and separate sequence only through the telephone. You cannot start the sequences for DTDMs through the data port.

ISDN-BRI telephones

You use the same TTI separation sequence for Automatic-TEI SPID-initializing BRI telephones that you use for other telephones. However, the merge sequence is different.

Separation sequence

1. Feature access code (FAC)
2. Security code
3. Extension

Merge sequence

1. Connect the telephone to any port to get power.
2. Program the service profile identifier (SPID) to the extension with which the telephone is to be merged.
3. Unplug the telephone.

You must unplug the telephone, even if the telephone is connected to the intended port.

4. Connect the telephone to the intended port.

The intended port must indicate Equipment Type: TTI Port.

5. Listen for the dial tone.

- If you hear dial tone, the merge is complete.
- If you do not hear dial tone, the SPID of the telephone is an unavailable extension.

You can dial the TTI merge sequence for BRI telephones only if a user separates a BRI extension from its telephone, and then wants to reassociate the telephone to the same extension. Note that you cannot use the system access terminal (SAT) to put an **x** in the **Port** field of a BRI **Station** record that is still connected to the server that runs Avaya Communication Manager. You must use the TTI separation sequence from the telephone.

Analog queue warning ports and external alert ports

You can administer the analog queue warning port that is used for hunt groups, and the external alert port, with an **x** in the **Port** field. You can use TTI to merge these extensions to an analog port. You must perform the merge at an analog set, and then unplug the analog set from the port. You cannot use TTI to separate these extensions from their port location. A TTI separate request from one of these ports gives you intercept treatment.

Security



SECURITY ALERT:

If you do not manage TTI carefully, unauthorized use of this feature can cause you security problems. For example, someone who knows the TTI security code can disrupt normal business functions by separating telephones or data terminals. You can help protect against unauthorized use of TTI by frequently changing the TTI security code. To further enhance system security, remove the feature access code (FAC) from the system when the FAC is not needed. Consult the *Avaya Products Security Handbook* for additional information to secure your system, and to find out about regularly obtaining updated security information.

Administering Terminal Translation Initialization

This section describes the screens that you use to administer the Terminal Translation Initialization feature.

Screens for administering Terminal Translation Initialization

Screen name	Purpose	Fields
Attendant Console	Define an attendant console.	All
Data Module	Define a data module.	All
Feature Access Codes (FAC)	Create FACs for the TTI merge and separate operations.	• Terminal Translation Initialization Merge Code • Terminal Translation Initialization Separation Code
Feature-Related System Parameters	Enable TTI for the system.	• TTI Enabled • TTI State • TTI Security Code
Station	Define a station.	All

Reports for Terminal Translation Initialization

The following reports provide information about the Terminal Translation Initialization feature:

- None

Considerations for Terminal Translation Initialization

This section provides information about how the Terminal Translation Initialization feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Terminal Translation Initialization under all conditions. The following considerations apply to Terminal Translation Initialization:

- None

Interactions for Terminal Translation Initialization

This section provides information about how the Terminal Translation Initialization feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Terminal Translation Initialization in any feature configuration.

- **Attendant**

You can separate an attendant if the attendant is in Position Available Mode. However, you cannot separate an attendant if any calls are in the queue, held, or active for the attendant.

- **Attendant Night Service**

You cannot separate the night service station, when the station is in night service.

- **Attendant Release Loop Operation**

If the attendant separates before the attendant-timed reminder-interval expires, the system reclassifies all calls that are held with the release loop operation by the attendant as attendant group calls.

- **Automatic Callback**

If you use TTI to separate either telephone that is part of Automatic Callback, the system breaks the automatic callback sequence.

- **Call Coverage**

Send All Calls and Goto Coverage remain active, while the telephone has no associated hardware.

You can separate a telephone that is the receiver of Send All Calls or Goto Coverage. The system processes calls to the telephone as if the telephone is busy.

- **Call Coverage Answer Group**

If an extension that was an X port rejoins a call coverage answer group as a result of a TTI merge, the system excludes the extension from all transactions that are already active in the call coverage answer group.

- **Call Forwarding**

You can separate a telephone while Call Forwarding is active. If a destination extension for call forwarding separates, Call Forwarding to that extension remains active. The system processes calls to the telephone as if the telephone is busy.

- **Call Pickup**

If a line appearance is available, a member of a call pickup group can separate at any time. If a call is attempting to terminate, and a member of a group associates, that member does not join the group for the call that is currently in progress. The member can participate in all subsequent calls to the call pickup group.

Terminal Translation Initialization

- Expert Agent Selection (EAS)

Station user records cannot be shared between **TTI** ports and Expert Agent Selection (EAS) login ID extensions. For example, if you administer 2,000 **EAS** login IDs, the maximum number of **TTI** ports that the system can provide is reduced by 2,000.

- Hunt Group Uniform Call Distribution (UCD) and Direct Department Calling (DDC)

The system excludes telephones that are previously X-ported as a result of a **TTI separation request** from all transactions that are already active in the hunt group when the telephone is merged.

- Site Data

If TTI is enabled, the system displays a warning message after you administer the **Site Data** fields.

If TTI is enabled, and you change the **Port** field on the **Station** screen from **x** to a port number, and change the **Room**, **Jack**, or **Cable** fields in the **Site Data** section of the **Station** screen, the system displays a warning message when you tab off the fields.

- Terminating Extension Group (TEG)

If any member of a TEG that was previously an X port as a result of TTI is merged, the member is excluded from all transactions that are already active in the TEG when the member is merged. The member can join all subsequent calls to the group.

Terminating Extension Group

Use the Terminating Extension Group (TEG) feature to allow an incoming call to ring as many as four telephones at one time. Any user in the group can answer the call.

Detailed description of Terminating Extension Group

This section provides a detailed description of the Terminating Extension Group (TEG) feature.

You can administer any telephone as a TEG member. However, only a multiappearance telephone can be assigned a **TEG** button with a merged-status lamp. With the **TEG** button, the user can select a TEG call appearance to answer or bridge onto an existing call, but not to originate the call.

When a TEG members answers an incoming call, a temporary bridged appearance is maintained at the multiappearance telephones in the group. However, this appearance is not visible. Any TEG member can press the TEG button to bridge onto the call.

Administering Terminating Extension Group

This section describes the screens that you use to administer the Terminating Extension Group (TEG) feature

Screens for administering Terminating Extension Group

Screen name	Purpose	Fields
Terminating Extension Group	Define the groups for the TEG feature.	● Coverage Path ● Group Name ● Group Extension ● COR ● TN ● ISDN Call Display ● Ext

Reports for Terminating Extension Group

The following reports provide information about the Terminating Extension Group feature:

- None

Considerations for Terminating Extension Group

This section provides information about how the Terminating Extension Group (TEG) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Terminating Extension Group under all conditions. The following considerations apply to Terminating Extension Group:

- A telephone user can be a member of more than one TEG, but can have only one **TEG** button for each group.
- A TEG can handle only one TEG call at a time. Additional calls do not reach the TEG. If a coverage path is assigned to the TEG, the system routes the additional calls accordingly.

Interactions for Terminating Extension Group

This section provides information about how the Terminating Extension Group (TEG) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Terminating Extension Group in any feature configuration.

- Automatic Callback

This feature cannot be active for a TEG.

- Bridged Call Appearance

Calls to a TEG cannot be bridged, except by way of a Temporary Bridged Appearance.

- Call Coverage

A TEG can have a Call Coverage path assigned, but cannot be a point in a Call Coverage path.

A **Send Term** button for the TEG can be assigned to group members who have multiappearance telephones. When a user presses Send Term, the system redirects calls to the TEG redirect to coverage. The merged status lamp lights on all telephones with a Send Term button. Any member with a Send Term button can press the button to deactivate Send Term. Incoming calls are directed to the group.

- Call Park

A TEG call cannot be parked on the group extension. However, group members who answer a call can park a TEG call on their own extensions.

- Direct Department Calling (DDC) and Uniform Call Distribution (UCD)

A TEG cannot be a member of a DDC or a UCD group.

- Internal Automatic Answer

TEG calls are not eligible for Internal Automatic Answer. However, calls that are placed to an individual extension are eligible.

- Leave Word Calling (LWC)

Leave Word Calling messages can be stored for a TEG. Any member of the group, covering user of the group, or system-wide message retriever can retrieve the stored messages. Phone Display and proper authorization can be assigned to the message retriever. Also, a remote Automatic Message Waiting lamp can be assigned to a group member to provide a visual indication that a message has been stored for the group. One indicator is allowed per TEG.

- Privacy - Manual Exclusion

Privacy - Manual Exclusion can be assigned to any of the telephones in a TEG to prohibit bridging by other group members. A TEG member who attempts to bridge onto a call with Privacy - Manual Exclusion active is dropped.

- Temporary Bridged Appearance

At multiappearance telephones in the TEG, a temporary bridged appearance is maintained after a call is answered. Thus, other members of the group can bridge onto the call.

Transfer

Use the Transfer feature to allow telephone users to transfer trunk calls or internal calls to other telephones or trunks without attendant assistance.

Detailed description of Transfer

This section provides a detailed description of the Transfer feature.

Transfer supports the following capabilities:

- [Pull Transfer](#)
- [Abort Transfer](#)
- [Transfer Recall](#)
- [Transfer Upon Hangup](#)
- [Trunk-to-Trunk Transfer](#)
- [Outgoing Trunk to Outgoing Trunk Transfer](#)
- [Emergency Transfer](#)

Pull Transfer

Use Pull Transfer to allow either the transferring party or the transferred-to party to press the Transfer button to complete the transfer operation.

When attendants control calls, called parties cannot use Pull Transfer. Attendants who are called parties cannot use Pull Transfer. When attendants have parties on hold, the parties are transferred with the standard transfer process.

To use Pull Transfer, calling parties and called parties must be on the same server, or called parties must be reached by way of Italian TGU/TGE tie trunks.

Called parties who use analog telephones flash the switch hook, or press the flash key or recall button to transfer calls. Called parties who use digital telephones press the transfer key to complete transfers.

Abort Transfer

Use Abort Transfer to stop the transfer operation whenever a user presses a non-idle call appearance button in the middle of the transfer operation, or when the user hangs up. If both the **Abort Transfer** and **Transfer Upon Hang-Up** fields are set to **y** and you press the **transfer** button, and then dial the complete transfer-to number, hanging up the telephone transfers the call. You must select another non-idle call appearance to abort the transfer. If the **Transfer Upon Hang-Up** field is **y**, hanging up completes the transfer. Requires DCP, Hybrid, IP, ISDN-BRI or wireless telephones

Transfer Recall

Use Transfer Recall to return the unanswered transfer call back to the person who transferred the call. Transfer Recall uses a priority alerting signal. The display on the telephone also shows "rt," which indicates a returned call from a failed transfer operation.

Transfer Upon Hangup

Use Transfer Upon Hangup to hang up to transfer the call without the need to press the Transfer button a second time. You press the Transfer button, dial the number to which the call is being transferred, and then hang up. Transfer Upon Hangup is an optional capability at the system level. You can still press the transfer button a second time to transfer the call.

Trunk-to-Trunk Transfer

With Trunk-to-Trunk Transfer, an attendant or a user can connect an incoming trunk call to an outgoing trunk.



SECURITY ALERT:

Trunk-to-Trunk Transfer poses a significant security risk. Use this capability with caution.

The system provides three levels of administration for this Trunk-to-Trunk Transfer:

- Systemwide
- COR to COR
- COS

To administer Trunk-to-Trunk Transfer systemwide, complete the **Feature-Related System Parameters** screen. To restrict Trunk-to-Trunk Transfer on a trunk-group basis, assign COR-to-COR calling-party restrictions on the **Class of Restriction** screen. To allow individual users to control Trunk-to-Trunk Transfers, assign capabilities on the **Class of Service** screen.

Outgoing Trunk to Outgoing Trunk Transfer

With Outgoing Trunk to Outgoing Trunk Transfer (OTTOTT), a controlling party such as a station user or an attendant, initiates two or more outgoing trunk calls, and then connects the trunks. This operation removes the controlling party from the connection and conferences the outgoing trunks. The controlling party can also establish a conference call with the outgoing trunks, drop out of the conference, and leave only the outgoing trunks on the conference.

Note:

This capability is an optional enhancement to Trunk-to-Trunk Transfer and requires careful administration and use. The Distributed Communications System (DCS) Trunk Turnaround may be an acceptable and safer alternative to this feature.

With OTTOTT, you can establish calls in which the only parties involved are external to Avaya Communication Manager and are on outgoing trunks. This type of call can result in locked-up trunks, such as trunks that cannot be disconnected except by busying-out and releasing the affected trunk circuit. To clear the lockup, a service technician must reset the trunk board, or busy-out and release the affected trunk.

Emergency Transfer

Emergency Transfer provides service to and from the central office (CO) to the local telephone company during a power failure, or when service is impaired. Emergency Transfer is also called Power Failure Transfer.

With Emergency Transfer, users of the 500 type or 2500-type analog telephones can access the local CO and answer incoming calls during a power failure. Each server cabinet supports Emergency Transfer panels by way of the AUX connectors on the rear panel. The transfer is initiated when:

- A transfer panel or the associated cabinet loses power
- Someone manually activates the Emergency Transfer switch on the associated maintenance circuit pack
- The software determines that service for that cabinet is severely impaired

You cannot activate any other system features during a complete system power failure.

Transfer

Emergency Transfer panels are available in multiples of five telephones. These telephones can either be pulse-dialing or touchtone telephones. You must use pulse dialing if the CO accepts only dial pulses. Each telephone can be connected to a separate CO.

When the system is not in Emergency Transfer mode, you can use the transfer telephones as regular telephones.

Administering Transfer

This section describes the screens that you use to administer the Transfer feature.

Screens for administering Transfer

Screen name	Purpose	Fields
Feature-Related System Parameters	Define Transfer options	

Reports for Transfer

The following reports provide information about the Transfer feature:

- None

Considerations for Transfer

This section provides information about how the Transfer feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Transfer under all conditions. The following considerations apply to Transfer:

- You can administer transferred trunk calls to receive either music or silence if the first part of the transfer places the call on hold.
- Multiappearance telephones must have an idle appearance to transfer a call.

- Single-line telephone users momentarily flash the switch hook or press the Recall button, dial the desired extension, and hang up. Multiappearance telephone users press the Transfer button, dial the desired extension, and press the Transfer button again.
- If, on the **Feature-Related System Parameters** screen, the **Transfer Upon Hang-up** field is set to **y**, users can transfer a call by press the Transfer button, dial the desired extension, and then hang up. Users can hang up while the desired extension is ringing or after the party has picked up. The user also can still press the Transfer button a second time to complete the transfer process.
- If, on the **Feature-Related System Parameters** screen, the **Abort Transfer** field is set to **y**, users press the Transfer button, dial the desired extension, and then hang up or select any non-idle call appearance. The user must press the Transfer button again to complete the process (see Note). If the user selects an idle call appearance, the transfer is still active.

Note:

If both the **Abort Transfer** and **Transfer Upon Hang-Up** fields are **y** and you press the Transfer button and then dial the complete transfer-to number, hanging up the telephone transfers the call.

- Users of Digital Communications Protocol (DCP), hybrid, and wireless telephones can transfer a call that is on hold without removing the call from hold. If only one call is on hold, no active call appearances exist, and call appearance is available for the transfer, the user can transfer the call simply by pressing the Transfer button. Communication Manager assumes that the transfer is for the call on hold, and the transfer feature works as usual.

If more than one call is on hold, the user must make a call active in order to transfer it. If the user presses the Transfer button with two or more calls on hold, Communication Manager ignores the transfer attempt since it will not know which call the user wants to transfer. If there are calls on hold and an active call, pressing the Transfer button will start the transfer process for the active call.

- Communication Manager can be administered to display a confirmation message to users upon successful call transfers. The confirmation message is visible to users with DCP, Hybrid, wireless (except for 9601), or Integrated Services Digital Network-Basic Rate Interface (ISDN-BRI) display telephones. These telephones, except for the hybrids, can display the confirmation message in English, Spanish, French, Italian, or a language that you define. Hybrid telephones can display the message in English only.
- You can administer the system to return a transferred call to the originator if the transferred-to party does not answer within a set time limit. To do this, enter a value in the **Station Call Transfer Recall Timer** field on the **Feature-Related System Parameters** screen.

The following consideration is for Outgoing Trunk to Outgoing Trunk Transfer (OTTOTT):

- OTTOTT is not intended for use in DCS networks, since DCS Trunk Turnaround provides comparable capabilities much more safely. However, use of OTTOTT with DCS is not prohibited, and might be useful when one or more of the trunks goes off the DCS network.

The following considerations are for Trunk to Trunk Transfer:

- Trunk-to-Trunk Transfer is particularly useful when a caller outside the system calls a user or attendant and requests a transfer to another outside number. For example, a worker, away on business, can call in and have the call transferred elsewhere.
- Transferred trunk calls can be administered to receive either music or silence.
- Some CO trunks do not signal the PBX when the CO user disconnects from a call. The system ensures that incoming CO trunks without Disconnect Supervision are not transferred to outgoing trunks or to other incoming CO trunks without Disconnect Supervision.
- An attendant-assisted call connecting an outgoing trunk or incoming trunk without Disconnect Supervision to an outgoing trunk must be held on the console. The system does not allow the attendant to release the call. The attendant can, however, use the Forced Release button and disconnect all parties associated with the call.
- If a user has connected two outgoing trunks or an outgoing call and an incoming call without Disconnect Supervision, the user must remain on the call. Otherwise, the call is dropped. An incoming trunk with Disconnect Supervision can be connected to an outgoing trunk without the user remaining on the call. An incoming trunk can also be connected to another incoming trunk without the user remaining on the call if one of the incoming trunks has Disconnect Supervision.

Interactions for Transfer

This section provides information about how the Transfer feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Transfer in any feature configuration.

- **Analog Station Recall Operation and Feature Activation**
When called parties initiate either analog-telephone recall or feature activation, callers are not put on hold for transfer. Instead, callers are transferred by way of Pull Transfer.
- **Basic Rate Interface (BRI) telephones**
Callers who use BRI Stations reach desired parties through the intermediate step of calling a party who calls a final destination. Intermediate parties activate pull transfer to complete transfers. Final called parties go off hook as if a new transfer were originated.
- **Call Detail Recording (CDR)**
The software checks to ensure that calls are correctly recorded with CDR when Pull Transfer is completed.

- Digital Station Transfer Operation

When called parties initiate transfer operations, callers are not put on hold for transfer; they are transferred by way of Pull Transfer.

- Non-BRI telephones:

Callers who use the non-BRI telephones reach desired parties through an intermediate step of calling a party who calls a final destination. Each called party activates pull transfer.

The following interactions are for Outgoing Trunk to Outgoing Trunk Transfer (OTTOTT):

- DCS Trunk Turnaround

OTTOTT increases the set of cases in which DCS Trunk Turnaround can be accepted. However, use of OTTOTT in combination with a DCS network is strongly discouraged. The following algorithm describes the DCS Trunk Turnaround request process.

- If any party on the call receives a local-dial, busy, intercept, or reorder tone, deny turnaround. If any remaining party is an answered station or attendant, accept turnaround.
- If any remaining party is on an incoming trunk, accept turnaround. For the purposes of this check, an outgoing DCS trunk that has been turned around an odd number of times by way of a DCS trunk turnaround is considered an incoming trunk with disconnect supervision. Similarly, an incoming DCS trunk that has been turned around an odd number of times is considered an outgoing trunk.
- If any remaining party is an outgoing trunk administered for OTTOTT that has received answer supervision, accept turnaround.
- If any remaining party is an outgoing DCS trunk, forward the turnaround request.
- If any remaining party is not a DCS trunk, deny turnaround.

- Incoming Disconnect Supervision

Outside of the US, incoming disconnect supervision is a switching capability that restricts transfers or conferences for certain incoming trunks. In the U.S., all incoming trunks are assumed to provide disconnect supervision. In some countries, this assumption is not valid. Therefore, you must administer whether or not an incoming trunk provides disconnect supervision for each trunk group.

- Personal Central Office Lines (PCOLs)

Transfer of PCOLs is not subject to the normal restrictions that are applied to transfer of other trunks. These transfers are allowed since the PCOL appearance remains on one or more stations as a feature button. System users must be aware that the DROP button cannot be used to disconnect the transferred-to party from the call. Therefore, if an outgoing PCOL is transferred to an outgoing trunk and neither of the trunks can supply a disconnect signal, the two trunks lock up.

- QSIG Global Networking

If either call is over an ISDN-PRI trunk that is administered with Supplementary Service Protocol b (QSIG), the system might display additional call information.

Transfer

- Release-Link Trunks (RLT)

RLTs are used by CAS. An outgoing RLT at a remote branch is used to access an attendant at the main. The attendant at the main can transfer the incoming caller to a station or a trunk at the branch. The RLT is typically used only for a short period of time and is usually idled after the transfer is established.

A station at a branch can transfer an outgoing trunk to the attendant at the main. This transfer could be viewed as an OTTOTT (the attendant is accessed by way of an outgoing RLT). Since administering outgoing disconnect supervision for RLT trunks provides no additional capability, this administration is not provided for RLT trunks.

- Restriction

Restrictions on the transferring party can block a transfer or a drop operation even when Outgoing Disconnect Supervision is provided.

- Trunk-to-Trunk Transfer

If this feature-related system parameter is set to Restricted, all trunk-to-trunk transfers or release, or drop operations for public trunks (CO, CPE, CAS, DID, DIOD, FX, and WATS) have calls terminated or receive denial. If the parameter is set to None, all trunk-to-trunk transfers (except CAS and DCS) have calls terminated or receive denial.

Hence, you use All to enable OTTOTT operation for these types of trunks. The number of public-network trunks allowed on a conference call is administrable. This number defaults to 1, so if OTTOTT is being used to connect two or more public network trunks, you must increase this limit on the **Feature-Related System Parameters** screen.

- Trunks (CO, FX, and WATS)

You cannot have two CO, FX, or WATS trunks in a OTTOTT connection, even if the **Disconnect Supervision - Out** field is set to y.

The following interactions are for Trunk to Trunk Transfer:

- Attendant Lockout

Attendant Lockout does not function on Trunk-to-Trunk Transfer.

- Call Vectoring

Station control of Trunk-to-Trunk Transfer does not affect routing of incoming trunks to a vector directory number (VDN) that ultimately routes to a destination off-net.

A route to a number off-switch does *not* require you to enable trunk-to-trunk transfer.

- Tenant Partitioning

Station control of Trunk-to-Trunk Transfer is prohibited between trunks in different tenant partitions if those partitions are restricted.

The following interaction is for Emergency Transfer:

- Night Service

If a power failure occurs when the system is in night service, the system automatically returns to night service when power is restored.

Trunk Flash

Use the Trunk Flash feature to allow a user of a multifunction telephone or an attendant console to access far-end customized services or central office (CO) customized services.

Detailed description of Trunk Flash

This section provides a detailed description of the Trunk Flash feature.

With Trunk Flash, a user of a multifunction telephone or an attendant console can gain access to far-end customized services or central office (CO) customized services. To use Flash Trunk, the user presses the flash button or dials the feature access code (FAC) for Trunk Flash.

CO customized services are electronic features, such as conference and transfer, that are accessed by a sequence of flash signal and dial signals from a Communication Manager telephone on an active trunk call. The Trunk Flash feature can help to reduce the number of trunk lines that are connected to the server that runs Communication Manager by performing:

- Trunk-to-trunk call transfers at the far-end or the CO, which eliminates the use of a second trunk line for the duration of the call, and frees the original trunk line for the duration of the call.
- A conference call with a second outside call party, which eliminates the need for a second trunk line for the duration of the call.

Note:

Some analog dual-tone multifrequency (DTMF) telephone sets that are used in Italy and the United Kingdom have a Flash button. When a user presses that Flash button, the button generates a rotary digit 1. When an analog telephone that is administered as a DTMF telephone, for example, as a 2500 or a 71nn-type telephone, transmits a rotary digit 1, the system processes the signal as a recall signal from the telephone set to Communication Manager.

A centralized attendant service (CAS) attendant who is connected to a release line trunk (RLT), the Flash button controls certain CAS features at the branch. For a user of a multifunction telephone or non-CAS attendant connected to a CO, foreign exchange (FX), or a Wide Area Communications Service (WATS) trunk, the flash controls certain features, such as add-on, at the connected CO.

Trunk Flash is not available on Personal Central Office Line (PCOL) groups.

The system supports the Trunk Flash signal for incoming, outgoing, or two-way call directions on selected two-wire analog or digital DS1 trunks, or tie trunks on DS1.

If the trunk group is a DS1 trunk in Italy, the Trunk Flash feature applies only to outgoing calls.

Trunk Flash

If the trunk is not directly connected to the far-end or the CO that provides the customized services, use of the Trunk Flash signal can cause the far end or the CO to disconnect the call.

The system does not record Call Detail Recording (CDR) information for calls that a user makes with the Trunk Flash feature.

Administering Trunk Flash

This section describes the screens that you use to administer the Trunk Flash feature.

Screens for administering Trunk Flash

Screen name	Purpose	Fields
Feature Access Code (FAC)	Assign a FAC for Trunk Flash.	Flash Access Code
Trunk Group	Enable Trunk Flash for the trunk group.	Trunk Flash

End-user procedures for Trunk Flash

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Trunk Flash:

- Using Trunk Flash

To use Trunk Flash, perform one of the following actions:

- Press the Flash button.
- Dial the FAC for Trunk flash.

Reports for Trunk Flash

The following reports provide information about the Trunk Flash feature:

- None

Considerations for Trunk Flash

This section provides information about how the Trunk Flash feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Trunk Flash under all conditions. The following considerations apply to Trunk Flash:

 CAUTION:

The Trunk Flash feature allows the telephone user to receive central office (CO) dial tone. A user can place a call that is not monitored by Communication Manager, and is not subject to restrictions such as toll, facilities restriction level (FRL), and class of restriction (COR). Use caution when you enable this feature.

- A Trunk Flash button can be assigned on CAS attendant consoles, non-CAS attendant consoles, and multifunction telephones. For CAS attendants, use of this button is limited to certain CAS features by way of RLT trunks. For multifunction and non-CAS attendant consoles, this button is used for the Trunk Flash feature.
- FAC activation of the trunk flash feature is allowed.
- System features, such as internal conference call, transfer, and call par, can be combined with custom services. The custom services are CO-based features that are activated/controlled by sending a flash signal over the trunk to the CO. However, mixing Communication Manager features with custom services causes complications for the user when the user tracks a call. Communication Manager cannot give the local telephone user status information on the custom services.
- The Trunk Flash feature can only be accessed if the call has only one trunk. The trunk must be an outgoing trunk and the **Trunk Flash** field on the **Trunk Group** screen must be set to **y**. The Trunk Flash feature is disabled when the call involves more than one trunk, even if all the trunks have Trunk Flash enabled.
- The system allows five users to participate in a conference call with the trunk line party. However, to access the Trunk Flash feature, at least one of the user telephones must have a Flash button.

Trunk Flash

- With a call that involves more than one user, one of the users can press the Flash button, and another user can dial the telephone number. The user that dials the telephone number is not required to have a telephone with a Flash button.

If the far-end or the central office (CO) does not support custom services, the far-end or the CO can ignore the call or drop the call. If the far-end or the CO ignores or drops the call, the user might hear a clicking sound or the user might hear silence.

Interactions for Trunk Flash

This section provides information about how the Trunk Flash feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Trunk Flash in any feature configuration.

- None

Uniform Dial Plan

Use the Uniform Dial Plan (UDP) feature to share a common dial plan among a group of servers. The UDP applies both interserver dialing and intraserver dialing. The UDP provides the following types of dial plans:

- 3-digit
- 4-digit
- 5-digit
- 6-digit
- 7-digit
- A combination of any of these dial plans

UDP provides extension-to-extension dialing between two or more private-switching systems.

You can use UDP with the following entities:

- Main servers
- Tributary servers
- Satellite servers
- Electronic Tandem Networks (ETN)
- Distributed Communication Systems (DCS)

Note:

You must use a 4-digit dial plan or a 5-digit dial plan for DCS.

Detailed description of Uniform Dial Plan

This section provides a detailed description the Uniform Dial Plan (UDP) capability.

The software uses the UDP to route a call off the local server. The user dials an extension that consists of 3 to 7 digits. The software converts the extension that the user dials into a private-network number or a public-network number.

To convert the extension, the software substitutes digits at the front of the extension that the user dials. The software supports the following types of extension conversions:

- Automatic Alternate Routing (AAR)

The system uses AAR routing information to route calls within your company over your own private network.

The software converts the number that the user dials. The software then analyzes the number, and routes the call as a private-network call.

Automatic Route Selection (ARS)

The system uses ARS routing information to route calls that go outside your company over public networks. The system also uses ARS routing information to route calls to remote company locations if you do not have a private network.

The software converts the number that the user dials. The software then analyzes the number, and routes the call as a public-network call.

- Extension number portability (ENP)

If you want calls on your system to use ENP conversion, you must specify a node number. The software uses the node number to determine the routing pattern for the call. If the user dials an extension that consists of 4 to 6 digits, the software chooses an ENP code that is based on the first 1 or 2 digits of the extension. The software does not use the ENP code for routing. Therefore the ENP code is independent of location.

- Extension (EXT)

The system uses EXT conversion to analyze the extension that the user dials.

Unlike AAR conversion or ARS conversion, the system might not change the extension that the user dials, before the system routes the call. If no UDP entry for a particular extension or for a range of extensions exists, the system considers the extensions to be local extensions.

You specify a UDP for individual extensions or groups of extensions that have the same leading digits. For example, if you use a 5-digit UDP, and choose a matching pattern of "123," all 5-digit extensions that begin with "123" have the same UDP conversion scheme. If you use a 5-digit UDP, and want the software to use the UDP for only one extension, you must create a matching pattern that is the same as the extension. For example, if you choose a 5-digit UDP for extension 12345, you must specify 12345 as the matching pattern.

Each user extension can be assigned to one of the following six treatments:

- UDP Code

- Conversion to AAR with a given location code
- Further conversion is suppressed

- AAR Code

- Conversion to AAR with a given location code
- Further conversion is suppressed

- ENP Code
 - Conversion to a private-network number
 - Route to the given node number routing
- Temp OOS
 - Temporarily out of service
 - Give reorder
- Local
 - Local range of extensions
- Blank

This treatment is similar to local, but the system bypasses the when you perform an **add station** command.

When a user dials an extension that is on a server that is included in a UDP, the software firsts determines if the extension is assigned to a local station on the server. If the extension is assigned to a local station on the server, the software routes the call to the station. The software does not convert the extension numbers.

When a user dials an extension that is not on the server, the software compares the extension with the matching patterns. If the software finds a match between the extension and the matching patterns, the software converts the extension into a private network number. The software then routes the call as specified by the conversion.

When a user dials an extension, and the extension matches more than one matching pattern, the software selects the pattern that has the most matching digits. The software compares the extension and the matching pattern starting with the first digits that the user dials through to the last digits. See [Table 92: Matching pattern selections](#) on page 1323, for examples of matching patterns.

If the extension does not match a matching pattern, and Extended Trunk Access (ETA) is enabled on the system, the software uses ETA to route the call. If the extension does not match a matching pattern, and ETA is not enabled on the system, the user receives intercept treatment.

Table 92: Matching pattern selections

Extension dialed	Matching patterns available	Matching pattern selected
123	123 and 1234	123
12345	123 and 1234	1234
12355	123 and 1234	123

Uniform Dial Plan example

The section contains an example of UDP administration, and the processing of several calls that use UDP.

To administer UDP, you must assign each UDP code:


- To a private network location code (RNX) or node number. The RNX is equivalent to the office code of a central office (CO) in a public network. This RNX determines how the system routes a UDP call.
- As either local or remote to Avaya Communication Manager.

The same 5-digit extension is used to call a station, regardless of where in the electron tandem network (ETN) that call originates. This example includes three media servers or switches ([Table 93: RNX and UDP codes](#) on page 1324). Each media server and switch has a list of RNX and UDP codes.

Table 93: RNX and UDP codes

Media server or switch	RNX code	UDP code
A	224	41
C	223	51
C	223	52
B	222	60
B	222	61

See [Figure 336: UDP Example](#) on page 1325 for an example of a UDP scenario.

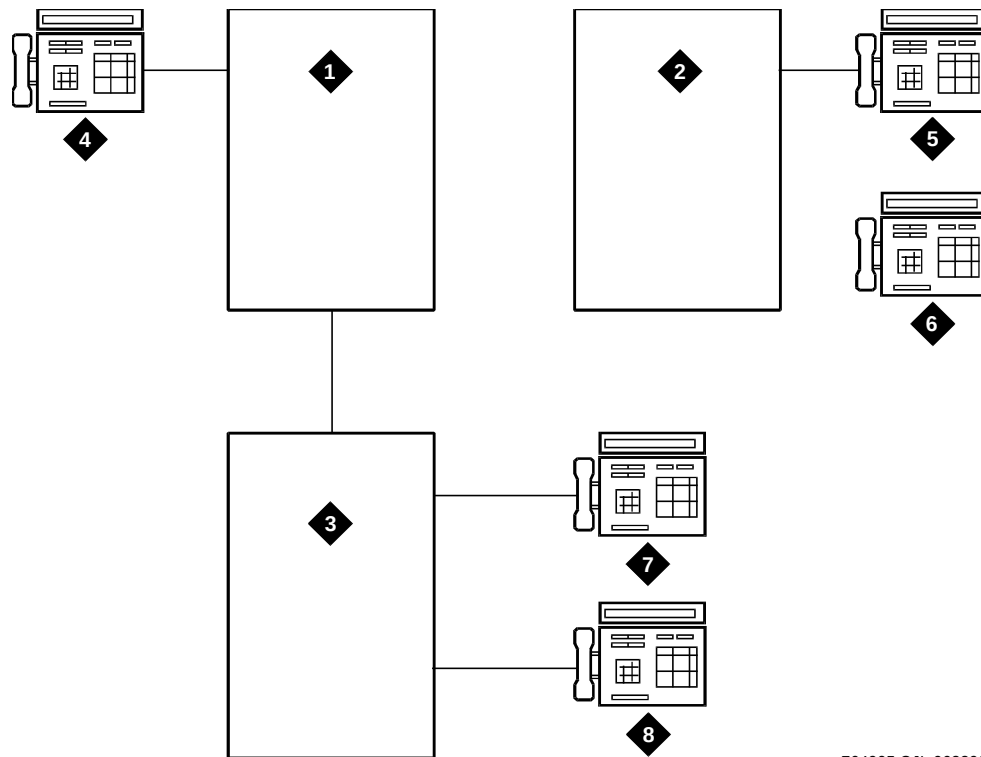 Figure 336: UDP Example

r764905 C.JL 062296

Figure notes:

1. System A. The dial plan for the extensions is 41. The RNX is 224. 2. System B. The dial plan for the extensions is 60 and 61. The RNX is 222. 3. System C. The dial plan for the extensions is 51 and 52. The RNX is 223.	4. Extension 41000 5. Extension 61234 6. Extension 60123 7. Extension 51234 8. Extension 5200

A user at extension 41000 who wants to call extension 61234, has one of the following options:

- Dial 61234
- Dial the AAR access code, and then dial 222-1234

If the user dials 61234, the system:

- Recognizes 61 as a remote UDP
- Determines that the associated RNX is 222
- Uses AAR to route the call to 222-1234

Uniform Dial Plan

If the user dials the AAR access code and 222-1234, the system:

- Finds the route pattern for RNX 222
- Routes the call to the server that is associated with that RNX

When the software uses UDP to route a call to another server or system, the route pattern provides the correct digit deletion and insertion instructions. The receiving system then gets numbers in the format that the receiving system expects.

You can configure the software several different ways.

- If AAR is available on the receiving media server or switch:
 - Subnetwork trunking can be used to insert the feature access code (FAC) for AAR on the server or switch where the call originates
 - Digit insertion can be used to insert the FAC for AAR on the receiving server

The receiving server uses AAR digit conversion to delete 3 digits and add the digit 6, thus converting the number 222 with 7 digits to an extension.

- If AAR is unavailable on the receiving media server or switch, subnetwork trunking must be used on the originating server or switch to delete the 222 and insert the digit 6 at the start of the extension number. This conversion ensures that the receiving server can continue to route the call correctly.

If the user at extension 51234 on media server C dials extension 61234, the call must first go through media server A before the call goes to media server B. When the user dials 61234:

- The software recognizes 61 as a UDP code.
- The software determines that the associated RNX is 222, and uses the AAR feature to route the call.
- The FAC for AAR plus the digits 222-1234 are outputted to media server A.
- Media server A then recognizes the RNX 222 as a remote server or switch, and routes the call to media server B and extension 61234.

This same type of call routing occurs when an extension at media server B calls an extension at media server C.

If extension 61234 on media server B calls extension 60123, the software recognizes 60 as a local UDP code, and the system routes the call directly to extension 60123.

Administering Uniform Dial Plan

The following steps are part of the administration process for the Uniform Dial Plan (UDP) capability:

- [Administering the Uniform Dial Plan table](#) on page 1330
- [Administering the Node Number Routing Table](#) on page 1332
- [Administering the AAR Digit Conversion Table](#) on page 1333
- [Administering the ARS Digit Conversion Table](#) on page 1335
- [Administering the AAR Digit Analysis Table](#) on page 1337
- [Administering the ARS Digit Analysis Table](#) on page 1340
- [Administering the extension number portability numbering plan](#) on page 1344

This section describes:

- Any prerequisites for administering the Uniform Dial Plan capability
- The screens that you use to administer the Uniform Dial Plan capability
- Complete administration procedures for the Uniform Dial Plan capability

Prerequisites for administering Uniform Dial Plan

You must complete the following actions before you can administer the Uniform Dial Plan (UDP) feature:

- Ensure that the Uniform Dial Plan feature is enabled on your system.
- Ensure that a feature access code (FAC) for Automatic Alternate Routing (AAR) and a FAC for Automatic Route Selection (ARS) are available on your system.

To ensure that the Uniform Dial Plan feature is enabled on your system:

- On the **Optional Features** screen, ensure that the **Uniform Dialing Plan** field is set to **y**. If the **Uniform Dialing Plan** field is set to **n**, your system is not enabled for the Uniform Dial Plan feature. Contact your Avaya representative for assistance before continuing with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

To ensure that FACs for AAR and ARS are available on your system:

1. Type **change feature-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen ([Figure 337: Feature Access Code \(FAC\) screen](#) on page 1328).

Figure 337: Feature Access Code (FAC) screen

FEATURE ACCESS CODE (FAC)		
Abbreviated Dialing List1 Access Code: *00		
Abbreviated Dialing List2 Access Code: *01		
Abbreviated Dialing List3 Access Code: *02		
Abbreviated Dial - Prgm Group List Access Code: *03		
Announcement Access Code: *04		
Answer Back Access Code: *05		
Auto Alternate Routing (AAR) Access Code: 8		
Auto Route Selection (ARS) - Access Code 1: *9	Access Code 2: 9	
Automatic Callback Activation: *06	Deactivation: #06	
Call Forwarding Activation Busy/DA: *07 All: *08	Deactivation: #09	
Call Park Access Code: *10		
Call Pickup Access Code: *11		
CAS Remote Hold/Answer Hold-Unhold Access Code: *50		
CDR Account Code Access Code: *12		
Change COR Access Code:		
Change Coverage Access Code: *13		
Contact Closure Open Code:	Close Code:	
Contact Closure Pulse Code:		

2. In the **Auto Alternate Routing (AAR) Access Code** field and the **Auto Route Selection (ARS)** field, perform one of the following actions:
 - If the **Auto Alternate Routing (AAR) Access Code** field and the **Auto Route Selection (ARS)** field each contain a FAC, press **Cancel**.
 - If the **Auto Alternate Routing (AAR) Access Code** field or the **Auto Route Selection (ARS)** field do not contain a FAC, type a FAC in the field. Press **Enter** to save your changes.

For more information on Feature Access Codes, including information on how to change or deactivate a FAC, see the "Feature Access Code" feature description.

Screens for administering Uniform Dial Plan

Screen name	Purpose	Fields
Uniform Dial Plan Table	Define the type of conversion, the matching pattern, and the insertion digits.	All
AAR Digit Analysis Table	Define automatic alternate routing (AAR) digit analysis.	All
ARS Digit Analysis Table	Define automatic route selection (ARS) digit analysis.	All
AAR Digit Conversion Table	Define AAR digit conversion.	All
ARS Digit Conversion Table	Define ARS digit conversion.	All
Extension Number Portability (ENP) Numbering Plan	Define ENP codes.	All
Number Node Routing	Associate a route pattern with each node in the ENP subnetwork.	Route Pat
Route Pattern	Define the route pattern.	All
Optional Features	Ensure that the Uniform Dial Plan feature is enabled on your system.	Uniform Dialing Plan

Administering the Uniform Dial Plan table

To administer the Uniform Dial Plan Table for your system:

1. Type **change uniform-dial plan *n***, where ***n*** is the number of the dial plan that you want to administer. Press **Enter**.

The system displays the **Uniform Dial Plan Table** screen ([Figure 338: Uniform Dial Plan Table screen](#) on page 1330).

Figure 338: Uniform Dial Plan Table screen

[illegible]

2. In the **Matching Pattern** field, type the number that you want the software to match to the number that a user dials. Valid values are the digits 0 through 9. You can type a maximum of 7 digits.
3. In the **Len** field, type the number of digits of the user-dialed number, that the software analyzes when the software compares the user-dialed number with the numbers in the matching pattern field. Valid values are the digits 3 through 7.
4. In the **Del** field, type the number of digits that the software deletes before the software routes a call. Valid values are the digits 0 through 3. The number that you type must be less than, or equal to, the number that you type in the **Len** field.
5. In the **Insert Digits** field, type the digits that the software uses to replace the digits that the software deletes from the user-dialed number. If you want the software to delete the digits instead of to replace the digits, leave the **Insert Digits** field blank. Valid values are the digits 0 through 9. You can type a maximum of 4 digits.

6. In the **Net** field, type the server or the system network that the software uses to analyze the number that the software converts. Perform one of the following actions:

- If you want the software to route the converted digit-string as an extension, type **ext**.
- If you want the software to route the converted digit-string as its converted AAR address, type **aar**.
- If you want the software to route the converted digit-string as its converted ARS address, type **ars**.
- If you want the software to route the converted digit-string as its ENP node number, type **enp**.

If you type **enp**, you must:

- Type the extension number portability (ENP) node number in the **Node Number** field.
- Leave the **Insert Digits** field blank. Type **n** in the **Conv** field.

7. In the **Node Num** field, type the ENP node number. Valid values are the digits 1 through 999.

8. In the **Conv** field, perform one of the following actions:

- If you want additional digit conversion, type **y**.
- If you do not want additional digit conversion, type **n**.

Note:

The **Percent Full** field displays the percent of the allocated uniform dial plan data resources that are currently used. You cannot change this field.

9. Press **Enter** to save your changes.

Administering the Node Number Routing Table

To administer node number routing for your system:

1. Type **change node-number routing *n***, where *n* is the number of the node. Press **Enter**.

The system displays the **Node Number Routing** screen ([Figure 339: Node Number Routing screen](#) on page 1332).

Figure 339: Node Number Routing screen

NODE NUMBER ROUTING						
Partitioned Group Number: 1						
Route Pat	Route Pat	Route Pat	Route Pat	Route Pat	Route Pat	Route Pat
	15:	30:	45:	60:	75:	90:
1:	16:	31:	46:	61:	76:	91:
2:	17:	32:	47:	62:	77:	92:
3:	18:	33:	48:	63:	78:	93:
4:	19:	34:	49:	64:	79:	94:
5:	20:	35:	50:	65:	80:	95:
6:	21:	36:	51:	66:	81:	96:
7:	22:	37:	52:	67:	82:	97:
8:	23:	38:	53:	68:	83:	98:
9:	24:	39:	54:	69:	84:	99:
10:	25:	40:	55:	70:	85:	
11:	26:	41:	56:	71:	86:	
12:	27:	42:	57:	72:	87:	
13:	28:	43:	58:	73:	88:	
14:	29:	44:	59:	74:	89:	

2. In the **Route Pat** field, type the number of the routing pattern that you want to use.
3. Press **Enter** to save your changes.

Administering the AAR Digit Conversion Table

To administer the AAR Digit Conversion Table for your system:

1. Type **change aar digit-conversion *n***, where ***n*** is the number of the AAR Digit Conversion Table. Press **Enter**.

The system displays the **AAR Digit Conversion Table** screen ([Figure 340: AAR Digit Conversion Table screen](#) on page 1333).

Note:

The system sorts the screen information by matching pattern. The software displays numbers first, followed by characters in alphabetical order.

Figure 340: AAR Digit Conversion Table screen

[illegible]

2. In the **Matching Pattern** column, type the number that you want the system to match to the numbers that the user dials. If you require a prefix digit of 1 for 10-digit DDD, start the matching pattern with a 1. Valid values are the digits **0** through **9**.

You can type a maximum of 18 digits. You can also type an asterisk (*), a lower case x, or an upper case X as wildcard characters.

3. In the **Min** column, type the minimum number of user-dialed digits that the system uses to compare with the matching pattern in the **Matching Pattern** column. Valid values are any number from **1** up to the number that you typed in the **Max** column.

4. In the **Max** column, type the maximum number of user-dialed digits that the system uses to compare with the matching pattern in the **Matching Pattern** column. Valid values are from the number that you typed in the **Min** column to **28**.
5. In the **Del** column, type the number of digits that you want the system to delete from the beginning of the dialed string. Valid values are the digits **0** up to the number that you typed in the **Min** column.
6. In the **Net** column, type the initials of the call-processing server network that the system uses to analyze the converted number.
7. In the **Conv** column, perform one of the following actions:
 - If you want additional digit conversion, type **y**.
 - If you do not want additional digit conversion, type **n**.
8. Use the **ANI Req** column only if the **Request Incoming ANI (non-AAR/ARS)** field is set to **n** on the **Mutifrequency-Signaling-Related System Parameters** screen.

If the **Request Incoming ANI (non-AAR/ARS)** field is set to **n** on the **Mutifrequency-Signaling-Related System Parameters** screen, perform one of the following actions in the **ANI Req** field:

- If you require ANI on incoming R2-MFC or Russian MF ANI calls, type **y**.
- If you do *not* require ANI on incoming R2-MFC or Russian MF ANI calls, type **n**.
- If the **Allow ANI Restriction on AAR/ARS** field is set to **y** on the **Feature-Related System Parameters** screen, type **r**. When you set the **ANI Req** field to **r**, the system drops a call on a Russian shuttle trunk or a Russian rotary trunk if the ANI request fails. For calls on other types of trunks, the system processes an **r** entry in the **ANI Req** field as a **y**.

The **Percent Full** column displays the percent of the allocated system memory that is used by AAR and ARS. You cannot change this field.

9. Press **Enter** to save your changes.

Administering the ARS Digit Conversion Table

To administer the ARS Digit Conversion Table for your system:

1. Type **change ars digit-conversion *n***, where ***n*** is the number of the ARS Digit Conversion Table. Press **Enter**.

The system displays the **ARS Digit Conversion Table** screen ([Figure 341: ARS Digit Conversion Table screen](#) on page 1335).

Figure 341: ARS Digit Conversion Table screen

[illegible]

2. In the **Matching Pattern** column, type the number that you want the system to match to the numbers that the user dials. If you require a prefix digit of 1 for 10-digit DDD, start the matching pattern with a 1. Valid values are the digits **0** through **9**.

You can type a maximum of 18 digits. You can also type an asterisk (*), a lower case x, or an upper case X as wildcard characters.

3. In the **Min** column, type the minimum number of user-dialed digits that the system uses to compare with the matching pattern in the **Matching Pattern** column. Valid values are any number from **1** up to the number that you typed in the **Max** column.
4. In the **Max** column, type the maximum number of user-dialed digits that the system uses to compare with the matching pattern in the **Matching Pattern** column. Valid values are from the number that you typed in the **Min** column to **28**.

5. In the **Del** column, type the number of digits that you want the system to delete from the beginning of the dialed string. Valid values are the digits **0** up to the number that you typed in the **Min** column.
6. In the **Net** column, type the initials of the call-processing server network that the system uses to analyze the converted number.
7. In the **Conv** column, perform one of the following actions:
 - If you want additional digit conversion, type **y**.
 - If you do not want additional digit conversion, type **n**.
8. Use the **ANI Req** column only if the **Request Incoming ANI (non-AAR/ARS)** field is set to **n** on the **Mutifrequency-Signaling-Related System Parameters** screen.

If the **Request Incoming ANI (non-AAR/ARS)** field is set to **n** on the **Mutifrequency-Signaling-Related System Parameters** screen, perform one of the following actions in the **ANI Req** field:

- If you require ANI on incoming R2-MFC or Russian MF ANI calls, type **y**.
- If you do not require ANI on incoming R2-MFC or Russian MF ANI calls, type **n**.
- If the **Allow ANI Restriction on AAR/ARS** field is set to **y** on the **Feature-Related System Parameters** screen, type **r**. When you set the **ANI Req** field to **r**, the system drops a call on a Russian shuttle trunk or a Russian rotary trunk if the ANI request fails. For calls on other types of trunks, the system processes an **r** entry in the **ANI Req** field as a **y**.

The **Percent Full** column displays the percent of the allocated system memory that is used by AAR and ARS. You cannot change this field.

9. Press **Enter** to save your changes.

Administering the AAR Digit Analysis Table

To administer the AAR Digit Analysis Table for your system:

1. Type **change aar analysis n**, where **n** is the number of the AAR Digit Analysis Table. Press **Enter**.

The system displays the **AAR Digit Analysis Table** screen ([Figure 342: AAR Digit Analysis Table screen](#) on page 1337).

Figure 342: AAR Digit Analysis Table screen

AAR DIGIT ANALYSIS TABLE						
						Percent Full: 2
Dialed String	Total Min	Total Max	Route Pattern	Call Type	Node Num	ANI Req'd
111	7	7	111	aar	13	n
2	7	7	999	aar		n
200	7	7	200	aar		n
201	7	7	201	aar		n
202	7	7	202	aar		n
203	7	7	203	aar		n
204	7	7	204	aar		n
205	7	7	205	aar		n
220	6	8	220	aar		n
222	7	7	222	aar		n
230	7	7	30	aar		n
241	7	7	3	aar		n
242	7	7	42	aar		n
244	7	7	4	aar		n
245	7	7	45	aar		n

2. In the **Dialed String** column, type the numbers that the system compares to the number that the user dials. Valid values are the digits **0** through **9**.

You can type a maximum of 18 digits. You can also type an asterisk (*), a lower case **x**, or an upper case **X** as wildcard characters.

The system uses the dialed string that most closely matches the number that the user dials. For example, if a user dials 297-1234, and the AAR Digit Analysis Table contains two dialed strings of 297-1 and 297-123, the system uses the dialed string 297-123 as the match.

When the system compares a user-dialed number with an entry in the **Dialed String** column that is an exact match and an entry in the **Dialed String** column with one or more wildcard characters, the system chooses the exact match. For example, if a user dials 424, and the AAR Digit Analysis Table contains two dialed strings of 424 and X24, the system uses the dialed string 424 as the match.

3. In the **Min** column, type the minimum number of user-dialed digits that the system uses to compare with the matching pattern in the **Matching Pattern** column. Valid values are any number from **1** up to the number that you typed in the **Max** column.
4. In the **Max** column, type the maximum number of user-dialed digits that the system uses to compare with the matching pattern in the **Matching Pattern** column. Valid values are from the number that you typed in the **Min** column to **28**.
5. In the **Route Pattern** column, type the route information that you want the server to use for the dialed string. Perform one of the following actions:
 - To specify the route index number that you established on the **Partition Routing Table** screen, type a value from **p1** to **p2000**.
 - To specify the route pattern that the system uses to route the call, type a number from **1** to **640**.
 - To specify the route pattern that the system uses to route the call, type a number from **1** to **999**. Use this number range only for the S8300 Media Server.
 - If RHNPA translations are required for the corresponding dialed string, type a value from **r1** to **r32** to specify the remote home numbering plan.
 - To designate node number routing, type **node**.
 - To block the call, type **deny**.
6. In the **Call Type** column, type the call type that is associated with each dialed string. The call types indicate the numbering requirements on different trunk networks. Perform one of the following actions:
 - For regular AAR calls, type **aar**.
 - If the Route Index contains public network ISDN trunks that require the international type of number encodings, type **intl**.
 - If the Route Index contains public network ISDN trunks that require an unknown type of number encodings, type **pubu**.
 - To specify the ISDN Private Number Plan (PNP) number formats, type **lev0**, **lev1**, or **lev2**.

For more information on ISDN Numbering-Private, see the *Administrator's Guide for Avaya Communication Manager*.

[Table 94: ISDN protocols](#) on page 1339 describes the ISDN protocols.

Table 94: ISDN protocols

Call type	Numbering plan identifier	Type of numbering
aar	E.164(1)	national(2)
intl	E.164(1)	international(1)
pubu	E.164(1)	unknown(0)
lev0	PNP(9)	local(4)
lev1	PNP(9)	Regional Level 1(2)
lev3	PNP(9)	Regional Level 2(1)

7. In the **Node Number** column, type the number of the destination node in a private network if you use node number routing or Distributed Communication System (DCS).
8. Use the **ANI Req** column only if the **Request Incoming ANI (non-AAR/ARS)** field is set to **n** on the **Mutifrequency-Signaling-Related System Parameters** screen.

If the **Request Incoming ANI (non-AAR/ARS)** field is set to **n** on the **Mutifrequency-Signaling-Related System Parameters** screen, perform one of the following actions in the **ANI Req** field:

- If you require ANI on incoming R2-MFC or Russian MF ANI calls, type **y**.
- If you do not require ANI on incoming R2-MFC or Russian MF ANI calls, type **n**.
- If the **Allow ANI Restriction on AAR/ARS** field is set to **y** on the **Feature-Related System Parameters** screen, type **r**. When you set the **ANI Req** field to **r**, the system drops a call on a Russian shuttle trunk or a Russian rotary trunk if the ANI request fails. For calls on other types of trunks, the system processes an **r** entry in the **ANI Req** field as a **y**.

The **Percent Full** column displays the percent of the allocated system memory that is used by AAR and ARS. You cannot change this field.

9. Press **Enter** to save your changes.

Administering the ARS Digit Analysis Table

To administer the ARS Digit Analysis Table for your system:

1. Type **change ars analysis n**, where **n** is the number of the ARS Analysis Table. Press **Enter**.

The system displays the **ARS Digit Analysis Table** screen ([Figure 343: ARS Digit Analysis Table screen](#) on page 1340).

Figure 343: ARS Digit Analysis Table screen

ARS DIGIT ANALYSIS TABLE						
Location: all					Percent Full:	2
Dialed String	Total Min	Total Max	Route Pattern	Call Type	Node Num	ANI Req'd
101xxxx0	8	8	deny	op		n
101xxxx0	18	18	deny	op		n
101xxxx01	16	24	deny	iop		n
101xxxx011	17	25	deny	intl		n
101xxxx1	18	18	deny	fnpa		n
10xxx0	6	6	deny	op		n
10xxx0	16	16	deny	op		n
10xxx01	14	22	deny	iop		n
10xxx011	15	23	deny	intl		n
10xxx1	16	16	deny	fnpa		n
11	2	2	10	svcl		n
120	11	11	deny	fnpa		n
1200	11	11	deny	fnpa		n
121	11	11	deny	fnpa		n
122	11	11	deny	fnpa		n

The **location** field is a display-only field.

- If the **ARS** field and the **Multiple Locations** field on the **Optional Features** screen are set to **y**, the **location** field is set to a number between **1** and **64**. The numbers 1 through 64 in the **location** field define the location of the server that uses this ARS Digit Analysis Table.
- If the **ARS** field on the **Optional Features** screen is set to **y**, but the **Multiple Locations** field on the **Optional Features** screen is set to **n**, the **location** field is set to **all**. A value of **all** in the **location** field indicates that this ARS Digit Analysis Table is the default for all port network locations.

2. In the **Dialed String** column, type the numbers that the system compares to the number that the user dials. Valid values are the digits **0** through **9**.

You can type a maximum of 18 digits. You can also type an asterisk (*), a lower case **x**, or an upper case **X** as wildcard characters.

The system uses the dialed string that most closely matches the number that the user dials. For example, if a user dials 297-1234, and the AAR Digit Analysis Table contains two dialed strings of 297-1 and 297-123, the system uses the dialed string 297-123 as the match.

When the system compares a user-dialed number with an entry in the **Dialed String** column that is an exact match and an entry in the **Dialed String** column with one or more wildcard characters, the system chooses the exact match. For example, if a user dials 424, and the AAR Digit Analysis Table contains two dialed strings of 424 and X24, the system uses the dialed string 424 as the match.

3. In the **Min** column, type the minimum number of user-dialed digits that the system uses to compare with the matching pattern in the **Matching Pattern** column. Valid values are any number from **1** up to the number that you typed in the **Max** column.
4. In the **Max** column, type the maximum number of user-dialed digits that the system uses to compare with the matching pattern in the **Matching Pattern** column. Valid values are from the number that you typed in the **Min** column to **28**.
5. In the **Route Pattern** column, type the route information that you want the server to use for the dialed string. Perform one of the following actions:
 - To specify the route index number that you established on the **Partition Routing Table** screen, type a value from **p1** to **p2000**.
 - To specify the route pattern that the system uses to route the call, type a number from **1** to **640**.
 - To specify the route pattern that the system uses to route the call, type a number from **1** to **999**. Use this number range only for the S8300 Media Server.
 - If RHNPA translations are required for the corresponding dialed string, type a value from **r1** to **r32** to specify the remote home numbering plan.
 - To designate node number routing, type **node**.
 - To block the call, type **deny**.
6. In the **Call Type** column, type the call type that is associated with each dialed string. The call types indicate the numbering requirements on different trunk networks. Perform one of the following actions:
 - To alert attendant consoles or other digital telephones when a user places an emergency call, type **alrt**.
This call type is a normal China number 1 call type.
 - To designate an emergency call, type **emer**.
This call type is a normal China number 1 call type.

Uniform Dial Plan

- To designate a 10-digit North American Numbering Plan (NANP) call, type **fnpa**. NANP calls consist of 11 digits and a prefix digit of 1.
This call type is an attendant China number 1 call type.
 - To designate a 7-digit NANP call, type **hnpa**.
This call type is a normal China number 1 call type.
 - To designate a public-network international number, type **intl**.
This call type is a toll-auto China number 1 call type.
 - To designate an international operator, type **lop**.
This call type is an attendant China number 1 call type.
 - To designate a non-NANP call, type **natl**.
This call type is a normal China number 1 call type.
 - To designate a national private call, type **npvt**.
This call type is a normal China number 1 call type.
 - To designate a national service call, type **nsvc**.
This call type is a normal China number 1 call type.
 - To designate an operator call, type **op**.
This call type is an attendant China number 1 call type.
 - To designate a public-network number (E.164) unknown call, type **pubu**.
This call type is a normal China number 1 call type.
 - To designate a national(2) call, type **svcl**.
This call type is a toll-auto China number 1 call type.
 - To designate a national(2) call, type **svct**.
This call type is a normal China number 1 call type.
 - To designate a service call, first part control, type **svft**.
This call type is a local China number 1.
 - To designate a service call, first part control, type **svfl**.
This call type is a toll China number 1 call type.
7. In the **Node Number** column, type the number of the destination node in a private network if you use node number routing or DCS.

8. Use the **ANI Req** column only if the **Request Incoming ANI (non-AAR/ARS)** field is set to **n** on the **Mutifrequency-Signaling-Related System Parameters** screen.

If the **Request Incoming ANI (non-AAR/ARS)** field is set to **n** on the **Mutifrequency-Signaling-Related System Parameters** screen, perform one of the following actions in the **ANI Req** field:

- If you require ANI on incoming R2-MFC or Russian MF ANI calls, type **y**.
- If you do not require ANI on incoming R2-MFC or Russian MF ANI calls, type **n**.
- If the **Allow ANI Restriction on AAR/ARS** field is set to **y** on the **Feature-Related System Parameters** screen, type **r**. When you set the **ANI Req** field to **r**, the system drops a call on a Russian shuttle trunk or a Russian rotary trunk if the ANI request fails. For calls on other types of trunks, the system processes an **r** entry in the **ANI Req** field as a **y**.

The **Percent Full** column displays the percent of the allocated system memory that is used by AAR and ARS. You cannot change this field.

9. Press **Enter** to save your changes.

Administering the extension number portability numbering plan

To administer the extension number portability numbering plan for your system:

1. Type **change enp-number-plan**. Press **Enter**.

The system displays the **Extension Number Portability Numbering Plan** screen ([Figure 344: Extension Number Portability Numbering Plan screen](#) on page 1344).

Figure 344: Extension Number Portability Numbering Plan screen

EXTENSION NUMBER PORTABILITY NUMBERING PLAN									
ENP Code	ENP Code	ENP Code	ENP Code	ENP Code	ENP Code	ENP Code	ENP Code	ENP Code	ENP Code
0x:	1x:	2x:	3x:	4x:	5x:	6x:	7x:	8x:	9x:
00:	10:	20:	30:	40:	50:	60:	70:	80:	90:
01:	11:	21:	31:	41:	51:	61:	71:	81:	91:
02:	12:	22:	32:	42:	52:	62:	72:	82:	92:
03:	13:	23:	33:	43:	53:	63:	73:	83:	93:
04:	14:	24:	34:	44:	54:	64:	74:	84:	94:
05:	15:	25:	35:	45:	55:	65:	75:	85:	95:
06:	16:	26:	36:	46:	56:	66:	76:	86:	96:
07:	17:	27:	37:	47:	57:	67:	77:	87:	97:
08:	18:	28:	38:	48:	58:	68:	78:	88:	98:
09:	19:	29:	39:	49:	59:	69:	79:	89:	99:

For more information on the **Extension Number Portability Numbering Plan** screen, see the *Administrator's Guide for Network Connectivity for Avaya MultiVantage Software*.

Reports for Uniform Dial Plan

The following reports provide information about the Uniform Dial Plan capability:

- The Uniform Dial Plan report shows the details of the Dial Plan.

For detailed information on these reports and the associated commands, or see *Reports for Avaya Communication Manager*.

Considerations for Uniform Dial Plan

This section provides information about how the Uniform Dial Plan (UDP) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Uniform Dial Plan under all conditions.

- In North American network environments, the system routes extensions that start with 0 to an attendant. Avaya recommends that you use a digit other than 0 as the leading digit when you assign extensions.
- When you call an extension that is on another server, you might experience slight delay before you hear call-progress tones. This delay is caused by the trunk signaling that is necessary to complete the call to the remote media server or to the switch.
- When you select the option that causes the software to look at the UDP table first, the system routes calls that might otherwise terminate at a local extension, over the network. If you do not want the system to route calls over the network, you must remove the extensions from the UDP table. Once you remove the extensions from the UDP table, users can dial the local extension.
- If Automatic Alternate Routing (AAR) is active, the software sends facility restriction levels (FRLs) and Traveling Class Marks (TCMs) with the private network number. UDP Code and AAR Code conversions use the FRL that is assigned to the caller. Extension number portability (ENP) Node conversion always raises the FRL to the maximum of seven.

If an FRL is insufficient to access the facility, the system denies access. The system does not prompt for an authorization code, even if authorization codes are enabled and administered in your system.

- If AAR is not active, do not equip your system to use tandem-tie trunks to transport UDP numbers. You should not use tandem-tie trunks to transport UDP numbers, because the termination server does not recognize the TCM.

Avaya recommends that you never use tandem-tie trunks to transport UDP numbers. When you use tandem-tie trunks to transport UDP numbers, the receiving media server or the system does not recognize the TCM and the hop count that follow the extension.

Interactions for Uniform Dial Plan

This section provides information about how the Uniform Dial Plan (UDP) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Uniform Dial Plan in any feature configuration.

- Automatic Alternate Routing (AAR)

AAR routes UDP calls. The AAR subset is included with the UDP. If AAR and UDP are both enabled on your system, the 7-digit AAR number provides the same routing as the UDP.

- Dial Plan

- Extension numbers on a server do not need to be part of a UDP. When extension numbers are not part of a UDP, the server software uses a non-UDP to handle calls that are associated with those extensions.
- When you administer the Dial Plan and designate a group of extensions as UDP nonlocal, you can specify either that the software search for local extensions first, or search for local extensions last.

- Direct Inward Dialing (DID) trunk group

DID calls to a UDP extension number might require the DID trunk group to insert the necessary digits to create the full extension number. For example, if the DID trunk provides 4 digits, but a 5-digit UDP is in place, the DID trunk group must insert the appropriate leading digit.

- Distributed Communications System (DCS)

UDP is required when DCS is provided. The necessary UDP software is provided with the DCS software.

- Extension Number Portability (ENP)

If you administer a user extension to use ENP node routing, ENP routes the call to the correct server.

If you enable both AAR and UDP, the 7-digit AAR number provides the same routing as UDP. The 7-digit AAR number uses ENP to route the call.

Visually Impaired Attendant Service

Use the Visually Impaired Attendant Service (VIAS) feature to provide voice feedback to a visually impaired attendant. Each voice phrase is a sequence of one or more single-voiced messages.

Detailed description of Visually Impaired Attendant Service

This section provides a detailed description of the Visually Impaired Attendant Service (VIAS) feature.

VIAS defines six buttons for the visually impaired attendant:

- Visually impaired service activation and deactivation

This button activates or deactivates VIAS. When you press the button, the system reenables all ringers that are disabled, such as the recall and incoming call ringers.

- Console status

When you press this button, the system provides voice feedback of the status of the:

- Console, for example, busy, available, or night service
- Attendant queue
- System alarms

- Display status

When you press this button, the system provides voice feedback of the information that is on the console display. VIAS is unavailable for some displays, such as Class of Restriction (COR), restriction information, personal names, and the purpose of some calls.

- Last operation

When you press this button, the system provides voice feedback of the last operation that was performed at the console.

- Last voice message

When you press this button, the system provides voice feedback of the most recent message at the console.

- Direct trunk group selection status

When you press this button, the system provides voice feedback of the status of an attendant-monitored trunk group.

A visually impaired attendant can use the Inspect mode to locate each button, to determine the feature that is assigned to the button.

Administering Visually Impaired Attendant Service

This section contains prerequisites and the screens that you use to administer the Visually Impaired Attendant Service (VIAS) feature.

Prerequisites for administering Visually Impaired Attendant Service

You must complete the following actions before you can administer the Visually Impaired Attendant Service (VIAS) feature:

- Set up an attendant console. For information on how to set up an attendant console, see the *Administrator's Guide for Avaya Communication Manager*.

Screens for administering Visually Impaired Attendant Service

Screen name	Purpose	Fields
Attendant Console	Administer the Visually Impaired Attendant Service (VIAS) buttons: ● vis ● con-stat ● display ● dtgs-stat ● last-mess ● last-op	Any available button field in the Feature Button Assignments area

Reports for Visually Impaired Attendant Service

The following reports provide information about the Visually Impaired Attendant Service (VIAS) feature:

- None

Considerations for Visually Impaired Attendant Service

This section provides information about how the Visually Impaired Attendant Service (VIAS) feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Visually Impaired Attendant Service (VIAS) under all conditions. The following considerations apply to Visually Impaired Attendant Service (VIAS):

- None

Interactions for Visually Impaired Attendant Service

This section provides information about how the Visually Impaired Attendant Service (VIAS) feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Visually Impaired Attendant Service (VIAS) in any feature configuration.

- Audible Message Waiting

The system generates a stutter tone before the dial tone, when a message waits at an extension. A visually impaired attendant can use the stutter tone, instead of a message light, to detect a message that waits at an extension.

- Auto Start and Don't Split

If you activate or deactivate VIAS while Auto Start and Don't Split is active, the system deactivates Auto Start and Don't Split.

- Automatic Circuit Assurance (ACA)

When the attendant presses the display button, the system provides the following voice messages:

- "Automatic Circuit Assurance," if an ACA call is unanswered
- "Automatic Circuit Assurance," and the extension that is assigned to the ACA call, if the call is answered

Visually Impaired Attendant Service

- Malicious Call Trace (MCT)

The system provides voice feedback of the displays that are related to MCT activation, but not of the displays that are related to MCT control.

Voice Message Retrieval

Use the Voice Message Retrieval feature to allow attendants, telephone users, and remote access users to retrieve Leave Word Calling (LWC) messages and Call Coverage messages.

Detailed description of Voice Message Retrieval

This section provides a detailed description of the Voice Message Retrieval feature.

Voice Message Retrieval is used only for the retrieval of messages. When a telephone is in Voice Message Retrieval mode, you cannot use the telephone to make calls or access other features. You can use Voice Message Retrieval to retrieve your own messages, or messages for another user. However, a different user's messages for another user can only be retrieved at a telephone or an attendant console that is in the coverage path. This is done by an administered system-wide message retriever, or by a remote-access user when the extension and the associated security code are known. The number of simultaneous Voice Message Retrieval users that are possible depends on the number of speech-synthesizer circuit packs in the system.

You can designate certain telephones and attendants for system-wide message retrieval. These telephones are the same as that you use for Display Message Retrieval, and have the same privileges. Voice Message Retrieval cannot be accessed from rotary telephones.

You can restrict unauthorized users from retrieving messages. Use the Lock function to restrict a telephone and the Unlock function to release the restriction. To activate Lock, users dial a system-wide access code. To cancel Lock, users dial a system-wide access code, and then an Unlock security code that is unique to the telephone. These functions only apply to the telephone where the function is active. The system-wide access codes and security code that you use for the Lock and Unlock functions are the same as those use for LWC message retrieval by display. You can assign a status lamp to show the Lock status of the telephone.

Administering Voice Message Retrieval

This section describes the screens that you use to administer the Voice Message Retrieval feature.

Screens for administering Voice Message Retrieval

Screen name	Purpose	Fields
Feature Access Code (FAC)	Set up Voice Message Retrieval.	● LWC Message Retrieval Lock ● LWC Message Retrieval Unlock ● Voice Coverage Message Retrieval Access Code ● Voice Principal Message Retrieval Access Code
Feature Related System Parameters	Administer Voice Message Retrieval.	● Stations With System-Wide Retrieval Permission Message ● Waiting Lamp Indicates Status
Station	Set up Voice Message Retrieval.	Security Code

Reports for Voice Message Retrieval

The following reports provide information about the Voice Message Retrieval feature:

- None

Considerations for Voice Message Retrieval

This section provides information about how the Voice Message Retrieval feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Voice Message Retrieval under all conditions. The following considerations apply to Voice Message Retrieval:

- None

Interactions for Voice Message Retrieval

This section provides information about how the Voice Message Retrieval feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Voice Message Retrieval in any feature configuration.

- **AUDIX Interface**

Retrieval of Leave Word Calling (LWC) messages by way of Voice Message Retrieval is separate and distinct from retrieval of messages by way of INTUITY AUDIX. You cannot use Voice Mail Retrieval to access LWC messages on INTUITY AUDIX. However, the user who calls Voice Message Retrieval is informed of any new messages for the principal on AUDIX:

- The Voice Message Retrieval voices that there are INTUITY AUDIX messages.
- The Display Message Retrieval displays "Message Center AUDIX Call."

If your system has a voice-synthesizer circuit pack and LWC Activation is active, users can retrieve messages: LWC messages with Voice Message Retrieval and all other messages with INTUITY AUDIX.

If you do not have a TN725B speech-synthesizer board, nondisplay telephone users cannot retrieve LWC messages that are sent by way of the **LWC** button on a telephone.

- **Bridged Call Appearance**

Voice Message Retrieval on a Bridged Call Appearance functions the same as if the feature were activated by the primary extension that is associated with the bridged call appearance.

- **Leave Word Calling (LWC)**

Voice Message Retrieval enhances LWC by allowing any authorized touchtone telephone user to retrieve messages.

Whisper Paging

Use the Whisper Paging feature to allow one user to interrupt or "barge in" on the call of another user and make an announcement. The paging user dials a feature access code (FAC) or presses a feature button, and then dials the extension of the other user.

Detailed description of Whisper Paging

This section provides a detailed description of the Whisper Paging feature.

With the Whisper Paging feature, the page is unique because only the person on the paged extension can hear the page. Other parties on the call cannot hear the page, and the person who makes the page cannot hear anyone on the call. If the paged user has a display telephone, the paged user can see who makes the whisper page.

For example, users A and B are on a call. User C has an urgent message for user A and makes a whisper page. All three users hear the tone that signals the page, but only user A hears the page itself. User who make the page cannot hear users A or B.

Call redirection overrides

If a paged user is not on an active call, a whisper page is converted to a priority call that overrides any of the following call redirection features:

- Call Forward All Calls
- Call Forward Busy
- Call Forward Don't Answer
- Send All Calls
- Go To Cover
- Call Coverage

For example, if Call Forward All Calls is activated on a telephone on which no active calls exist, a whisper page to that telephone rings as a priority call.

Group answering environments

Whisper Paging does not work with extensions that are assigned to a group answering environment. You cannot place a whisper page to the main extension that is assigned to a hunt group, a split, a skill, or a terminating extension group (TEG). You cannot place a whisper page to any extension that is a member of one of these groups.

Network restrictions

Whisper Paging does not work across networks, such as Distributed Communication System (DCS) networks or electronic tandem networks. Both the paging user and the paged user must be on the same server that runs Avaya Communication Manager.

Speakerphones

When a call is on the speaker, an incoming whisper page is also heard over the speaker too. When the group listening feature on a 6400-series telephone is active, an incoming whisper page is heard on both the handset and the speaker.

Administering Whisper Paging

The following steps are part of the administration process for the Whisper Paging feature:

This section describes:

- Any prerequisites for administering the Whisper Paging feature
- The screens that you use to administer the Whisper Paging feature

Prerequisites for administering Whisper Paging

You must complete the following actions before you can administer the Whisper Paging feature:

- None

Screens for administering Whisper Paging

Screen name	Purpose	Fields
Station	Activate Whisper Paging buttons.	● Whisper Page Activation ● Answerback ● Whisper Page Off
Feature Access Code (FAC)	Activate a FAC to Whisper Page.	Whisper Page Activation Access Code

Making a whisper page

- To assign a feature access code, enter a code in the **Whisper Page Activation Access Code** field on the **Feature Access Code** screen.
- To give users a feature button for making a whisper page, use the **Station** screen and administer a **Whisper Page Activation** button on users' phones.

Allowing users to answer whisper pages quickly

To give users a feature button for answering a whisper page, use the **Station** screen and administer an **Answerback** button on users' phones.

Note:

You cannot administer an **Answerback** button on an attendant console.
Attendants can make whisper pages but cannot receive them.

Normally, before a paged user can answer a whisper page, he or she must complete the active call or put it on hold. However, you can give users the ability to put an active call on hold and speak directly to the person making a whisper page simply by pushing a feature button. Once the **Answerback** button is pressed, the user can treat both the paging call and the original call as separate calls and all call-related features (conference, transfer, etc.) operate normally.

Allowing users to block whisper pages

To give users a feature button to block incoming whisper pages, use the **Station** screen and administer a **Whisper Page Off** button on users' phones.

Administer this function on a feature button with a lamp so that users can tell whether or not blocking is active. Users can activate blocking even when they are on a call.

Note:

You cannot administer a **Whisper Page Off** button on a soft key.

The Do Not Disturb and Privacy - Attendant Lockout features can also block incoming whisper pages.

End-user procedures for Whisper Paging

End users must perform specific procedures to use certain features. End users can activate or deactivate certain system features and capabilities. End users can also modify or customize some aspects of the administration of certain features and capabilities. This section includes the following end-user procedures for Whisper Paging:

- To make a whisper page, users dial a FAC or press a feature button, then dial the extension of the user they are trying to reach.

Reports for Whisper Paging

The following reports provide information about the Whisper Paging feature:

- None

Considerations for Whisper Paging

This section provides information about how the Whisper Paging feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Whisper Paging under all conditions. The following considerations apply to Whisper Paging:

- None

Interactions for Whisper Paging

This section provides information about how the Whisper Paging feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Whisper Paging in any feature configuration.

- **Attendant**

Attendants cannot intrude on a whisper page. If an attendant is using intrusion to talk to a user, that user cannot receive a whisper page.

An attendant can use auto-manual splitting to start a whisper page. However, the attendant cannot use Release, Hold, or Split after the page is made.

- **Bridged Call Appearances**

Whisper pages are designed to reach a specific user associated with a specific extension.

- When an extension and one or more of its bridged appearances are in use, parties on the bridged appearances hear the tone that signals an incoming whisper page but only the user on the principle extension hears the announcement. Only the display on the principle extension shows the whisper page message.
- When all appearances are idle or only a bridged appearance is in use, a whisper page rings the principal extension with priority ringing.
- If a user makes a whisper page on a call appearance that is a member of a bridge group, then no other users in the bridge group can connect to the call while the whisper page intrusion is active.

- **Busy Verification**

You can't make a whisper page to an extension while it's being busy-verified. You cannot busy-verify an extension while it's making or receiving a whisper page.

- **Calling Restrictions - Origination**

Telephones with this restriction cannot make whisper pages.

- **Calling Restrictions - Termination**

Telephones with this restriction cannot receive whisper pages.

- **Class of Restriction (COR)**

A station user must have a COR that allows for station-to-station calling in order to perform Whisper Paging to a member outside of their own COR. Calling and called party restrictions also determine which extensions can make and receive whisper pages.

- **Conference**

Everyone on a conference call hears the tone that signals an incoming whisper page. But only the owner of the paged extension hears the page, and only the display on that phone shows the whisper page message.

Whisper Paging

If a conference call already has the maximum number of parties and trunks allowed, you cannot make a whisper page to any of the participants. Parties cannot be added to a conference call if an active whisper page is on the call.

- Data Privacy - Permanent or Temporary

Any station that has Data Privacy activated cannot make a whisper page.

- Data Restriction

A whisper page to a station is denied when Data Restriction is enabled on a station or trunk.

- Expert Agent Selection

You cannot make a whisper page by dialing an agent's Logical Agent ID. Pages must be made to a physical extension.

- Go to Cover

If you make a whisper page and then press your Go To Cover button while the page is in progress, the Go To Cover button does not work. The opposite is true as well. If you activate Go to Cover and then press the whisper page activation button, you will not be able to make a whisper page.

- Last Number Dialed

When you make a whisper page, the page is tracked as the last number dialed.

- QSIG

This feature does not operate in a QSIG environment.

- Remote Access

You cannot make a whisper page by remote access. Both the paging party and the paged party must be on the same media server or the attempt is denied.

- Tenant Partitioning

Whisper paging is permitted across tenant partitions if the assigned classes of restriction allow for intercom calling between members of different partitions. This feature is especially useful to attendants who serve multiple partitions.

Note:

System administrators must ensure that this feature is managed appropriately in systems with tenant partitioning. Some tenants might not want other tenants to interrupt their calls.

- Transfer

A call cannot be transferred during an active whisper page.

- Vector Directory Number (VDN)

You cannot make a whisper page to a VDN. Pages must be made to a physical extension.

Wideband Switching

Use the Wideband Switching feature to dedicate two or more ISDN-PRI B-channels or digital signal level 0 (DS0) endpoints for applications that require large bandwidth. Wideband Switching provides high-speed end-to-end connectivity between endpoints where dedicated facilities are not economic or appropriate. ISDN-BRI trunks do not support wideband switching.

Detailed description of Wideband Switching

This section provides a detailed description of the Wideband Switching feature.

ISDN-PRI and the emulation of ISDN-PRI by Asynchronous Transfer Mode-Circuit Emulation Service (ATM-CES) divides trunks into information channels and signaling channels for standard narrowband communication.

Certain applications, like video conferencing, require greater bandwidth. For standard narrowband communication, ISDN-PRI divides:

- T1 trunks into 23 information channels, and 1 signaling channel
- E1 trunks into 30 information channels, 1 signaling channel, and 1 framing channel

You can combine several narrowband channels into one wideband channel to accommodate the extra bandwidth requirement. Avaya Communication Manager serves as a gateway to many types of high-bandwidth traffic. In addition, DS1 converters are also used for wideband switching at remote locations.

Wideband Switching is also supported by the Expansion Interface (EI) circuit pack and the DS1 Converter circuit pack for Center Stage Switching or directly connected port networks and the ATM-EI circuit pack for Asynchronous Transfer Mode connected port networks. ATM-CES supports wideband switching only for access, tie, and tandem trunks, not for line-side connections.

Wideband Switching supports:

- High-speed video conferencing
- Wide area network (WAN) disaster recovery
- Scheduled batch processing, such as nightly file transfers
- Local area network (LAN) interconnections and imaging
- Other high-bandwidth applications that involve high-speed data transmission, video transmission, and so on.

Channel allocation

[Table 95: Wideband Switching channel types](#) on page 1362 provides information on Wideband Switching channel types.

Table 95: Wideband Switching channel types


Channel type	Number of channels	Data rate (kbps)
H0	6	384
H11	24	1536
H12	30	1920
NXDS0 (T1)	2 to 24	128 to 1536
NXDS0 (E1)	2 to 31	128 to 1984

Perform wideband line-side channel allocation with one of three allocation algorithms:

- Fixed allocation. Provides contiguous-channel aggregation. The starting channel is constrained to a predetermined starting point. Fixed allocation is used for H0, H11, and H12 calls only.
- Flexible allocation. Allows a wideband call to occupy noncontiguous positions within a single T1 or E1 facility.
- Floating allocation. Enforces contiguous-channel aggregation. The starting channel is not constrained to a predetermined starting point.

Typical uses

A typical video application uses an ISDN-PRI interface to DS0 1 through 6 of the line-side facility. [Figure 345: Typical video broadband application](#) on page 1363 shows an example.

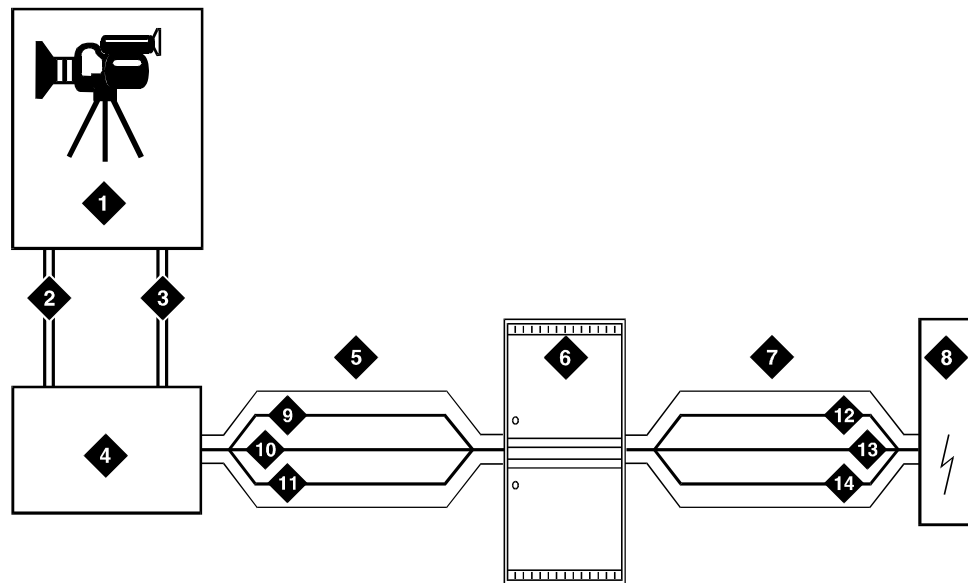 Figure 345: Typical video broadband application

wdbndex CJL 061996

Figure notes:

1. Video application	8. Network
2. Port 1	9. DS0 24 D-channel
3. Port 2	10. DS0 23 unused
4. ISDN terminal adaptor	11. DS0 1-6 wideband
5. Line-side ISDN-PRI	12. DS0 24 D-channel
6. Avaya Media Server	13. DS0 7-23 narrow bands
7. ISDN or ATM-CES trunk	14. DS0 1-6 wideband

Endpoint applications with signaling

An endpoint application is the origination point or the destination point of a wideband call. Endpoint applications can be any number of data applications, based on the needs of the customer.

ISDN-PRI terminal adapters

For Wideband Switching with non-ISDN-PRI equipment, you can use an ISDN-PRI terminal adapter. ISDN-PRI terminal adapters translate standard ISDN signaling into a form that can be used by the endpoint application, and vice versa. The terminal adapter also must adhere to the PRI-endpoint boundaries as administered on Communication Manager when handling both incoming applications to the endpoint and outgoing calls.

The terminal adapter passes calls to and receives calls from the line-side ISDN-SETUP messages. These messages indicate the data rate and the specific B-channels (DS0) to be used. The terminal adapter communicates all other call status information by way of standard ISDN messages. For more information, see *DEFINITY Line-Side ISDN Primary Rate Interface Technical Reference*.

Line-side T1 or E1 ISDN-PRI facilities

A line-side T1 or E1 ISDN-PRI facility is comprised of a group of DS0s. In this context, these DS0s are also called channels. T1 facilities have 23 B-channels and a single D-channel. E1 facilities have 30 B-channels, 1 D-channel, and a framing channel. Data flows bidirectionally across the facility between the server that is running Communication Manager and the ISDN-PRI terminal adapter.

PRI endpoints

A PRI-endpoint (PE) is a combination of DS0 B-channels on a line-side ISDN-PRI facility to which an extension is assigned.

A PE can support calls of lower bandwidth. In other words, a PE that has a width of six DS0 channels can handle a call of one channel of 64 Kbps, up to and including six channels totaling 384 Kbps. Also, a PE can support calls on nonadjacent channels. For example, an endpoint application that is connected to a PE that is defined as using B-channels 1 through 6 of an ISDN-PRI facility could use B-channels 1, 3, and 5 successfully to originate a call.

If the PE is administered to use flexible channel allocation, the algorithm for offering a call to the PE starts from the first DS0 that is administered to the PE. Since only one active call is permitted on a PE, contiguous B-channels are always selected unless one or more B-channels are not in service.

A PE remains in service unless all the B-channels are out of service. In other words, if B-channel 1 is out of service and the PE is five B-channels wide, the PE can still handle a wideband call of up to four B-channels wide. A PE can only be active on a single call at any given time. That is, the PE is considered to be idle, active or busy, or out of service.

One facility can support multiple separate and distinct PEs within a single facility. Non-overlapping contiguous sets of B-channel DS0s are associated with each PE.

Universal digital signal level 1 board

The universal digital signal level 1 (UDS1) board is the interface for line-side and network facilities that carries wideband calls.

Nonsignaling endpoint applications

Wideband Switching can also support configurations that use nonsignaling, non-ISDN-PRI line-side T1 or E1 facilities. The endpoint applications are the same as those that are defined for configurations with signaling.

Data service unit/channel service unit

The device service unit (DSU)/channel service unit (CSU) passes the call to the endpoint application. Unlike terminal adapters, the DSU/CSU does not have signaling capability.

Note:

No DSU/CSU is needed if the endpoint application has a fractional T1 interface.

Line-side T1 or E1 facility

This facility, like the ISDN-PRI facility, is composed of a group of DS0s. This group includes 23 DS0s for a T1 facility, and 30 DS0s for an E1 facility. Line-side facilities are controlled solely from the server. Through the access-endpoint command, a specific DS0 or group of DS0s is assigned an extension. This individual DS0 or group, along with the extension, is known as a wideband access endpoint (WAE).

Wideband access endpoint

WAEs have no signaling interface to the media server. These endpoints simply transmit and receive wideband data when the connection is active.

Note:

Communication Manager can determine if the connection is active. An active connection does not necessarily mean that data is actually coming across the connection.

A WAE is treated as a single endpoint and can support only one call.

- If all DS0s that comprise a wideband access endpoint are in service, the wideband access endpoint is considered to be in service.
- If all DS0s are not in service, the wideband access endpoint is considered out of service.
- If an in-service wideband access endpoint has no active calls on its DS0s, the endpoint is considered to be idle.
- If the endpoint has active calls on its DS0s, the endpoint is considered busy.

Multiple WAEs are separate and distinct within the facility, and endpoint applications must be administered to send and receive the correct data rate over the correct DS0s. An incoming call at the incorrect data rate is blocked.

Guidelines and examples

This section examines Wideband Switching and the components of Wideband Switching in relation to the following specific usage scenarios:

- [High-speed video conferencing](#)
- [Data backup connection](#)
- [Scheduled batch processing](#)
- [Primary data connectivity](#)
- [Networking](#)

High-speed video conferencing

The following table lists some key customer data rates.

Channel type	Number of channels	Data rate (Kbps)
H0	6	384
H11	24	1536
H12	30	1920
NXDS0 (T1)	2-24	128-1536
NXDS0 (E1)	2-31	128-1984

Data backup connection

Using Wideband Switching for data transmission backup provides customers with alternate transmission paths for critical data in the event of primary transmission path failure.

Scheduled batch processing

Scheduled batch processing applications are used for periodic database updates, such as retail inventory, or distributions, such as airline fare schedules. These updates are primarily done after business hours and are often referred to as *nightly file transfers*. Wideband meets the high bandwidth requirements at low cost for scheduled batch processing. Wideband also allows the dedicated-access bandwidth for busy-hour switching traffic to be used for these applications after business hours. Thus, no additional bandwidth costs are incurred.

The non-ISDN backup data connection is also appropriate for scheduled batch processing applications. Administered Connections are used to schedule daily or weekly sessions that originate from this application.

Primary data connectivity

Permanent data connections are well suited for Communication Manager when ISDN-PRI endpoints are used. Permanent data connections, such as interconnections between local area networks (LANs), are always active during business hours. The ISDN end-to-end monitoring and the ability of the endpoint to react to failures provide for critical availability of data. With ISDN, endpoints can detect network failures and initiate backup connections through the server. ISDN endpoints can also establish additional calls when extra bandwidth is needed.

Any failures that Communication Manager does not automatically restore are signaled to the endpoint application. The endpoint application can initiate backup data connections over the same PRI endpoint. Communication Manager routes the backup data connections over alternate facilities if necessary.

Networking

All wideband networking is over ISDN-PRI facilities, and the emulation of ISDN-PRI facilities by ATM-CES. Wideband networking may also connect to a variety of networks, other services of domestic interexchange carriers, private line, RBOC services, and services in other countries.

ISDN-PRI trunk groups and channel allocation

Only ISDN-PRI trunks, and the emulation of ISDN-PRI trunks by ATM-CES, support wideband calls to the network. The bandwidth requirements of wideband calls necessitate modification of the algorithms by which trunks look for clear channels.

The following sections describe the search methods, and the relationship of those methods to the available wideband data services.

Facility lists

A wideband call that accesses the network must reside on a single ISDN-PRI facility. Trunks within a trunk group must be organized based on the facility on which the trunks reside. Trunk organization is accomplished by compiling a facility list at the time that trunks are administered to a trunk group.

If a trunk is added to a trunk group from a facility that is not already on the list of that trunk group, that facility is added to the list in an order that is based on the signaling group number and interface identifier of the facility. In other words, the facility list is compiled in an ascending order that is based first on signaling group number, and second on the interface identifier assigned to the facility within the signaling group.

For example, if three facilities with signaling group/interface identifier combinations of 1/1, 1/2, and 2/1 are associated with a trunk group, a call that is offered to that trunk group searches those facilities in the order that the facilities are shown.

Note:

Since trunks within a given facility can span several trunk groups, a single facility can be associated with several different trunk groups.

With this facility list concept, the algorithms can search for trunks by facility to satisfy the band, the algorithm searches the next facility in the trunk group for the required bandwidth if:

- one facility does not have enough available bandwidth to support a given call
- the facility is not used for a given call due to constraints

Note:

The following section describes these constraints.

In addition to searching for channels based on facilities and required bandwidth, port network (PN) preferential trunk routing is also employed. This PN routing applies within each algorithm at a higher priority than the constraints that are put on the algorithm by the parameters listed later in this section. All facilities that reside on the same PN as the originating endpoint are searched to satisfy the bandwidth of a given call, prior to searching any facilities on another PN.

Direction of trunk hunting within facilities

With an ISDN facility, the algorithms have the ability to select trunks from low B-channel to high B-channel, or from high B-channel to low B-channel. This trunk selection process is an option for each ISDN trunk group. The process infers the direction of search within all ISDN facilities, or portions of those facilities, that are administered within that trunk group. This option is necessary so that the selection of trunks are not prone to as much glare as the selection process otherwise would be if trunks were chosen in the same direction by both user and network sides of the ISDN interface. For more information, see [Glare prevention and resolution](#) on page 1371.

In earlier releases of Communication Manager, the order in which trunks were selected, whether through linear or circular hunting, would always be with respect to the order in which trunks were administered within the trunk group. Now, with the support of wideband services, all trunks within an ISDN trunk group that is optioned for wideband are ordered based on this new "direction of trunk hunt with facilities" parameter. This process occurs without regard to the order in which trunks are administered within the trunk group. If an ISDN trunk group is not optioned for wideband, a cyclical trunk hunt that is based on the administration of trunks within the trunk group is still available.

H11 channels

When a trunk group is administered to support H11, the algorithm to satisfy a call that requires 1,536 Kbps of bandwidth uses a fixed allocation scheme. That is, the algorithm uses the following facility-specific channel definitions to search for an available facility:

- T1. H11 can be carried on a facility only without a D-channel being signaled in a nonfacility-associated signaling (NFAS) arrangement. The system uses B-channels 1 through 24.

- E1. Although the 1,536-Kbps bandwidth could be satisfied using a number of fixed starting points, such as 1, 2, 3, and so on, the only fixed starting point that is supported is 1. Hence, B-channels 1 through 15 and 17 through 25 are always used to carry an H11 call on an E1 facility.

If the algorithm cannot find an available facility within the trunk group that meets these constraints, the call is blocked from using this trunk group. In this case, the call might be routed to a different trunk group preference through Generalized Route Selection (GRS). In this case, based on the wideband options that are administered on that trunk group, the call is subject to another hunt algorithm. That is, the call is subject to either the same H11 algorithm, or perhaps an N x DS0 algorithm as described in a later section.

This same hunt algorithm, when offered any other call other than a 1,920-Kbps call, attempts to preserve idle facilities by selecting one or more trunks in a partially contaminated facility, if such a facility exists. If the bandwidth that this call requires cannot be satisfied by any partially contaminated facility, the call is placed on one or more available trunks within an idle facility, thus contaminating the facility. Again, facilities are selected through the facility list of the trunk group and with PN preference. One or more trunks within a facility are selected based on the direction of channel search that is administered.

Note:

On a T1 facility, a D-channel is not considered to be a busy trunk, and results in a facility with a D-channel always being partially contaminated. On an E1 facility, however, a D-channel is not considered to be a busy trunk because H11 and H12 calls might still be placed on that facility. An E1 facility with a D-channel and idle B-channels is considered to be an idle facility.

H12 channels

Since H12 is 1,920 Kbps, which is comprised of 30 B-channels, a 1,920-Kbps call can be carried only on an E1 facility. As with H11, the hunt algorithm uses a fixed allocation scheme with channel 1 being the fixed starting point. Hence, an H12 call is always carried on B-channels 1 through 15 and 17 through 31 on an E1 facility, as the following table shows. When the system is offered any other call other than a 1,536-Kbps call, the algorithm behaves as it does when H11 is optioned.

		DS0s that comprise each channel	
Facility	ISDN interface	H11	H12
T1	23B + D	-	-
T1	24B (NFAS)	1-24	-
E1	30B + D	1 through 15, 17 through 25	1 through 15, 17 through 31
E1	31B (NFAS)	1 through 15, 17 through 25	1 through 15, 17 through 31

H0 channels

When a trunk group is administered to support H0, the algorithm to satisfy a call that requires 384 Kbps of bandwidth also uses a fixed allocation scheme. Unlike the H11 fixed scheme that only supports a single fixed starting point, the H0 fixed scheme supports four T1 or five E1 fixed starting points.

The H0 algorithm searches for an available quadrant within a facility based on the direction of trunk or hunt that is administered. If the algorithm cannot find an available quadrant within any facility that is allocated to this trunk group, the call is blocked from using this trunk group. Based on GRS administration, the system might route the call to a different trunk group preference. Such a call is subject to another algorithm based on the wideband options that are administered.

This same trunk or hunt algorithm, when offered any narrowband or N x DS0 call, attempts to preserve idle quadrants by choosing one or more trunks in a partially contaminated quadrant, if such a quadrant exists. If a partially contaminated quadrant capable of carrying the call does not exist, the call is placed on one or more available trunks within an idle quadrant, thus contaminating the quadrant. Facilities are selected through the facility list of the trunk group and with PN preference, and one or more trunks within a facility are selected based on the direction that is administered.

Note:

A D-channel is considered to be a busy trunk and results in the top most quadrant of a T1 facility, B-channels 19 to 24, always being partially contaminated. This is not true for NFAS.

If this H0 optioned trunk group is also administered to support H11, H12, or N x DS0, this algorithm also attempts to preserve idle facilities. In other words, when offered a narrowband, H0 or N x DS0 call, the algorithm searches partially contaminated facilities before the algorithm searches idle facilities.

N x DS0 channels

For the N x DS0 multirate service, a trunk group parameter determines whether the system uses a floating or a flexible trunk allocation scheme. The letter N in this channel service is a variable.

The algorithm to satisfy an N x DS0 call is either floating or flexible.

- **Floating.** In a floating scheme, the system places an N x DS0 call on a contiguous group of B-channels that are large enough to satisfy the requested bandwidth without putting any constraint on the starting channel. There is no fixed starting point trunk.
- **Flexible.** In a flexible scheme, the system places an N x DS0 call on any set of B-channels as long as the requested bandwidth is satisfied. There is no constraint, such as contiguity of B-channels or fixed starting points. As with all wideband calls, all the B-channels that comprise the wideband call must reside on the same ISDN facility.

Regardless of the allocation scheme that the system employs, the N x DS0 algorithm, like the H11 and H12 algorithms, attempts to preserve idle facilities when offered B, H0, and N x DS0 calls. For large values of N, N x DS0 calls have a better chance of being satisfied by a given trunk group. However, if one of these calls cannot be satisfied by a partially contaminated facility and an idle facility exists, the system selects a trunk on that idle facility, thus contaminating that facility.

Note the following additional factors regarding specific values of N and the N x DS0 service:

- N = 1. This value is considered to be a narrowband call and is treated as any other voice or narrowband data, B-channel call.
- N = 6. If a trunk group is optioned for both H0 and N x DS0 service, a 384-Kbps call that is offered to that trunk group is treated as an H0 call. The H0 constraints apply. If the H0 constraints cannot be met, the call is blocked.
- N = 24. If a trunk group is optioned for both H11 and N x DS0 service, a 384-Kbps call that is offered to that trunk group is treated as an H0 call. The H0 constraints apply. If the H0 constraints cannot be met, the call is blocked.
- N = 24. If a trunk group is optioned for both H11 and N x DS0 service, a 1,536-Kbps call that is offered to that trunk group is treated as an H11 call. The H11 trunk allocation constraints apply.
- N = 30. If a trunk group is optioned for both H12 and N x DS0 service, a 1,920-Kbps call that is offered to that trunk group is treated as an H12 call. The H12 trunk allocation constraints apply.

Glare prevention and resolution

Glare occurs when both sides of an ISDN interface select the same B-channel for call initiation. For example, a user side of an interface selects the B-channel for an outgoing call and, before Communication Manager receives and processes the SETUP message, the user side interface selects the same B-channel for call origination. Since wideband calls use more channels, the chances of glare are greater. Glare conditions can be limited with proper channel administration, but glare conditions can never be eliminated. The system might still drop some calls.

Some glare situations might not be resolvable. In one case, the network and the user side might simultaneously or nearly simultaneously send SETUP messages. Another glare scenario can occur in the brief window after the SETUP message is sent, but before the first response is received from Communication Manager at the other side of the interface. If an incoming SETUP message arrives during this window, the incoming SETUP message is allowed to proceed. The system drops the outgoing call. Communication Manager does not negotiate channels for wideband calls.

[Table 96: Glare resolution](#) on page 1372 describes some glare situations and their resolution.

Table 96: Glare resolution

Outgoing call type	Incoming call type	Switch-supporting user protocol	Switch-supporting network protocol
B-channel	B-channel	No negotiation. • The incoming call from the network wins. • The outgoing call to the network is retried on another trunk.	Negotiation is attempted. • The incoming call from the user is dropped if the negotiation is unsuccessful. • The outgoing call to the user stays up.
One or more B-channels	Wide	No negotiation. • The incoming call from the network is dropped. • The outgoing calls to the network stay up, but likely are dropped by the network because channels are in use. A possibility exists that some media servers or systems might negotiate these calls.	No negotiation. • The incoming call from the user is dropped. • The outgoing calls to the user stay up, and possibly stay up if the other side lets the network call win.
Wide	One or more B-channels	No negotiation. • The incoming call from the network wins. • The outgoing call to the network is retried on another trunk.	Negotiation is attempted. • The incoming call from the user is dropped if the negotiation is unsuccessful. • The outgoing call to the user stays up.
1 of 2			

Table 96: Glare resolution (continued)

Outgoing call type	Incoming call type	Switch-supporting user protocol	Switch-supporting network protocol
Wide	Wide	No negotiation. • The incoming call from the network is dropped. • The outgoing calls to the network stay up, but likely are dropped by the network because channels are in use.	No negotiation. • The incoming call from the user is dropped. • The outgoing call to the user stays up and might not be dropped by the other end. If the other end is not Communication Manager, the other end might let the network call win.

2 of 2

To reduce glare probability, you must administer the network so that both sides of the interface select channels from the opposite ends of the facilities. For example, on a 23B+D trunk group, you can administer the user side to select B-channels starting at channel 23, while you can administer the network side to start selecting at channel 1. Using this same example, if channel 22 is active and channel 23 is idle, the user side can select channel 23 for re-use. This option is known as *linear trunk hunt*, and is the hunt option used by Communication Manager for wideband.

Blocking prevention

Blocking occurs when an insufficient number of B-channels are available to make a call. Narrowband calls require only one channel, so blocking is less likely than with wideband calls that require multiple B-channels. Blocking also occurs for wideband calls when bandwidth is not available in the appropriate format, such as fixed, floating, or flexible.

To reduce blocking, Communication Manager selects trunks for both wideband calls and narrowband calls to maximize the availability of idle fixed channels for H0, H11, and H12 calls, and idle floating channels for N x DS0 calls that require a contiguous bandwidth. The strategy for preserving idle channels depends on the channel type. The chances for blocking are reduced if you use a flexible algorithm, assuming that the algorithm is supported on the other end.

The following table describes the blocking strategy for the different channel types.

Channel type	Blocking minimization strategy
H0	Preserve idle quadrants
H11	Preserve idle facilities
H12	Preserve idle facilities
Flexible N x DS0	Preserve idle facilities
Floating N x DS0	Preserve idle facilities as first priority

Administering Wideband Switching

The following steps are part of the administration process for the Wideband Switching feature:

This section describes:

- The screens that you use to administer the Wideband Switching feature

Screens for administering Wideband Switching

Screen name	Purpose	Fields
Access Endpoint	Administer Wideband Switching.	All
System Parameters-Customer Options	Administer Wideband Switching.	Wideband Switching
PRI Endpoint	Administer Wideband Switching.	All
ISDN Trunk Group	Administer Wideband Switching.	All
Route Pattern	Administer Wideband Switching.	All
Fiber Link Administration	Administer Wideband Switching.	All

Reports for Wideband Switching

The following reports provide information about the Wideband Switching feature:

- None

Considerations for Wideband Switching

This section provides information about how the Wideband Switching feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of Wideband Switching under all conditions. The following considerations apply to Wideband Switching:

- If the user side is provisioned to start at the high side, such as DS0 23, DS0 22 is idle, and DS0 23 is active, reselect DS0 22 for the next call. This is known as linear trunk hunting. Only the direction of hunt is administrable.

Interactions for Wideband Switching

This section provides information about how the Wideband Switching feature interacts with other features on the system. Use this information to ensure that you receive the maximum benefits of Wideband Switching in any feature configuration.

- Administered Connections

Administered Connections provides call initiation for wideband access endpoints (WAEs). All Administered Connections that originate from WAEs use the entire bandwidth that is administered for WAE. The destination of an Administered Connection can be a PRI endpoint.

- Automatic Circuit Assurance (ACA)

ACA treats wideband calls as single-trunk calls so that a single ACA-referral call is made if an ACA-referral call is required. The call is on the lowest B-channel that is associated with the wideband call.

- Call Coverage

A WAE cannot be administered as a coverage point in a call-coverage path.

Wideband Switching

- Call Detail Recording (CDR)

When CDR is active for the trunk group, all wideband calls generate CDR records. The CDR feature flag indicates a data call, and CDR records contain bandwidth and Bearer Capability Class (BCC).

- Call Forwarding

You must block Call Forwarding through Class of Service (COS).

- Call Management System (CMS) and Basic Call Management System (BCMS)

Wideband calls can be carried over trunks that are measured by CMS and BCMS. Wideband endpoints are not measured by CMS and BCMS.

- Call Vectoring

PRI endpoints use a vector directory number (VDN) to dial. For example, PRI endpoint 1001 dials VDN 500. VDN 500 points to Vector 1. Vector 1 can point to other PRI endpoints such as route-to 1002, or route-to 1003, or busy.

Certain applications use Call Vectoring. When an incoming wideband call hunts for an available wideband endpoint, the call can point to a VDN, that sends the call to the first available PRI endpoint.

- Class of Restriction (COR)

COR identifies caller and called-party privileges for PRI endpoints. Administer the COR so that account codes are not required. Forced entry of account codes (FEAC) is turned off for wideband endpoints.

- Class of Service (COS)

COS determines the class of features that a wideband endpoint can activate.

- Facility Associated Signaling (FAS) and Non-Facility Associated Signaling (NFAS)

FAS and NFAS with or without D-Channel Backup requires administration by way of signaling groups for trunk-side wideband interfaces.

- Facility Busy Indication

You can administer a busy-indicator button for a wideband-endpoint extension, but the button does not accurately track endpoint status.

- Facility Test Calls

Use Facility Test Calls to perform loop-back testing of the wideband call facility.

- Generalized Route Selection (GRS)

GRS supports wideband BCC to identify wideband calls. GRS searches a route pattern for a preference that has wideband BCC. Route preferences that support wideband BCC also support other BCCs to allow different call types to share the same trunk group.

- CO Trunk (TTC - Japan) Circuit Pack

The CO Trunk (TTC - Japan) circuit pack cannot perform wideband switching. No member of the circuit pack should be a member of a wideband group.

World Class Routing

Use the World Class Routing feature to direct outgoing calls. The World Class Routing feature has two capabilities, Automatic Alternate Routing (AAR) and Automatic Route Selection (ARS).

- Automatic Alternate Routing (AAR) routes calls within your company over your own private network.

The system converts the number that the user dials. The system then analyzes the number, and routes the call as a private-network call.

- Automatic Route Selection (ARS) routes calls that go outside your company over public networks. ARS also routes calls to remote company locations if you do not have a private network.

The system converts the number that the user dials. The system then analyzes the number, and routes the call as a public-network call.

Automatic routing starts when a user dials a feature access code (FAC) and then the number that the user wants to call. The system analyzes the dialed digits, selects the route for the call, and deletes and inserts digits, if necessary. The system then routes the call over the trunks that you specify in your routing tables. AAR and ARS can access the same trunk groups, and share the same route patterns and other routing information. ARS calls can be converted to AAR calls, and AAR calls can be converted to ARS calls.

The FAC for AAR is usually the digit 8. The FAC for ARS is usually the digit 9 in the US and 0 outside the US. When your Avaya technician or business partner sets up AAR on your server that is running Avaya Communication Manager, he or she usually assigns the FAC for AAR. You can administer your own FAC for ARS. With Communication Manager 2.0, you can also use ARS without a FAC.

Detailed description of World Class Routing

This section provides a detailed description of the World Class Routing feature:

- [Overview of automatic routing](#)
- [Understanding ARS analysis](#)
- [Examples of digit conversion](#)
- [ARS dialing without a FAC](#)
- [AAR and ARS partitioning](#)

Overview of automatic routing

The following figure ([Figure 346: Automatic Routing Overview](#) on page 1378) shows an overview of automatic routing:

Figure 346: Automatic Routing Overview

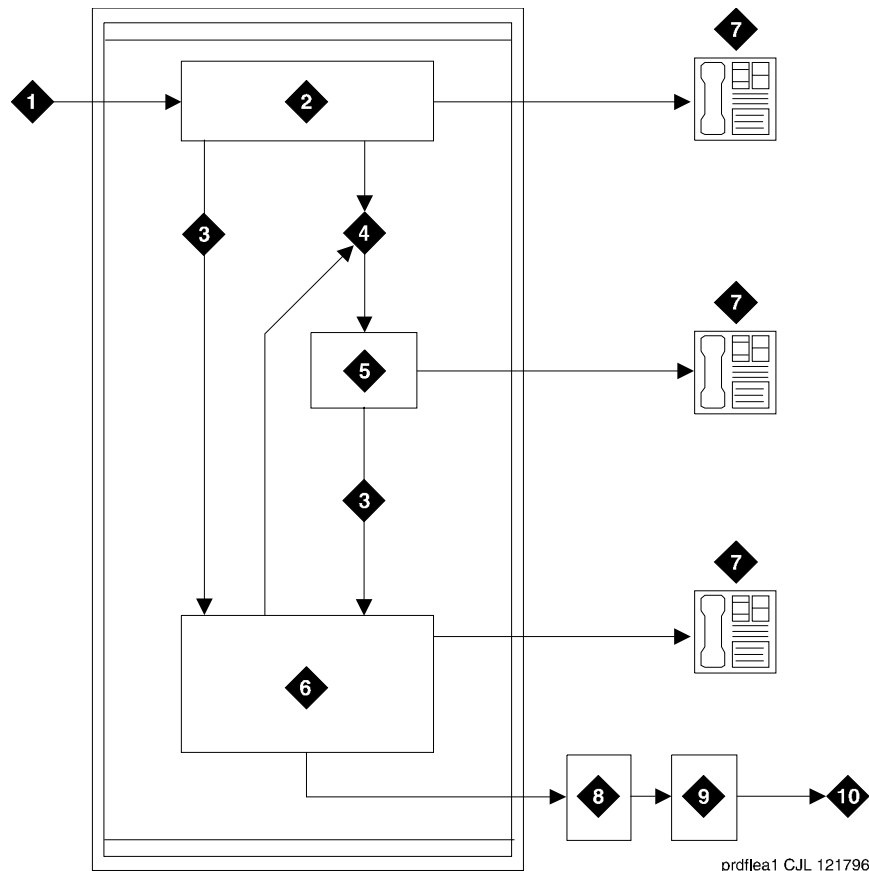 


Figure notes:

1. Receive input from a telephone, a public network trunk, or a private network trunk. 2. Analyze the digits to determine the address type from the Dial Plan Analysis Table. 3. Direct the call to Automatic Alternate Routing (AAR) or Automatic Route Selection (ARS). 4. Direct the call to the Uniform Dial Plan (UDP).	5. Use the UDP to determine the route. 6. Delete and insert digits based on the ARS Digit Analysis Table. 7. Terminate the call at the telephone. 8. Analyze the digits based on information from the ARS Digit Analysis Table. Determine the route pattern. 9. Select an outgoing trunk group and delete and insert digits. 10. Send the call to a public network trunk or a private network trunk.

Understanding ARS analysis

With ARS, the system checks the digits in the called number against an ARS Digit Analysis Table to determine how to handle the dialed digits. The system also uses Class of Restriction (COR) and Facility Restriction Level (FRL) to determine the calling privileges.

- Dialed string. Lists the first digits in the dialed string. When a user makes an outgoing call, the system analyzes the digits, and looks for a match in the table. The system then uses the information in the matching row to determine how to route the call.

For example, if a caller places a call to 1-303-233-1000, the system matches the dialed digits with the digits in the first column of the table. In this example, the dialed string matches the digit 1. Then the system matches the length of the entire dialed string (11 digits) to the minimum (Min) and the maximum (Max) length columns. In this example, the 11-digit call that started with 1 follows route pattern 30 as an fnpa call.

The first dialed digit for an external call is often an access code. If the digit 9 is defined as the ARS access code, the system drops this digit and uses the ARS Analysis Table to analyze the remaining digits.

- Route Pattern. Indicates the route that handles the calls that match the dial string.
- Call Type. Describes what kind of call is made with this dial string. Call Type helps the system determine how to handle the dialed string.
- Node Num. States the number of the destination node in a private network, if you use node number routing or Distributed Communication System (DCS). Valid values are 1 to 999, or blank.

For more information, see the *Administrator's Guide for Avaya Communication Manager*.

Examples of digit conversion

The system uses the AAR or ARS Digit Analysis Table to change a dialed number for more efficient routing. Digits can be inserted or deleted from the dialed number. For instance, you can tell the system to delete a 1 and an area code on calls to one of your locations, and avoid long distance charges by routing the call over your private network.

The ARS digit conversion examples in this section use the following values:

- ARS feature access code = 9
- AAR feature access code = 8
- Private Network Office Code (also known as Home RNX) = 222
- Also, in these examples, Prefix 1 is required on all long-distance Direct Department Dialing (DDD) calls, and dashes (-) are for readability only.

The system maps the dialed digits to the pattern that most closely matches the dialed number. For example, if the dialed string is 957-1234 and the table contains the matching patterns 957-1 and 957-123, the match is on pattern 957-123.

ARS dialing without a FAC

The following table ([Table 97: ARS digit conversion examples](#) on page 1380) shows examples of how ARS converts dialed digits.

Table 97: ARS digit conversion examples

Operation	Actual digits dialed	Matching pattern	Replacement string	Modified address	Notes
DDD call to an Electronic Tandem Network (ETN)	9-1-303-538-1345	1-303-538	362	362-1345	The system routes the call through AAR for RNX 362.
Long distance call to a specified carrier	9-10222+DDD	10222	(blank)	(blank)	The system routes the call as dialed with DDD over the private network.
Terminating a local DDD call to an internal telephone	9-1-201-957-5567 or 9-957-5567	1-201-957-5 or 957-5	222-5	222-5567	The system routes the call to RNX 222, ext. 5567.
Unauthorized call to intercept treatment	9-1-212-976-1616	1-XXX-976	The pound key (#)	(blank)	The pound key (#) means the end of dialing. ARS ignores the digits that are dialed after 976. The user gets intercept treatment.
International call to an attendant	9-011-91-672530	011-91	222-0111#	222-0111	The system routes the call to the local server (RNX 222), and then to an attendant (222-0111).
					1 of 2

Table 97: ARS digit conversion examples (continued)

Operation	Actual digits dialed	Matching pattern	Replacement string	Modified address	Notes
International call to an announcement (This method can also be used to block unauthorized IDDD calls.)	9-011-91-672530	011-91	222-1234#	222-1234	The system routes the call to the local server (RNX 222), and then to an announcement extension (222-1234).
International call from certain European countries that need dial tone detection	0-00-XXXXXXX	00	+00+	00+XXXX	The first 0 indicates ARS, the second pair of 0s indicates an international call. The plus signs (+) tell the system to wait for dial tone detection.
					2 of 2

This feature allows users to place calls without the need to first dial a Feature Access Code (FAC), such as the number 9, to access an outside line. The system recognizes the call as an ARS or an AAR call, and accordingly uses the ARS or the AAR digit analysis and digit conversion tables to route the call. This enhancement was added to the Communication Manager 2.0 release.

This feature provides for the following additional calling options:

- **Public-network dialing.** This feature eliminates the need to enter a FAC to gain access to a public network facility or trunk. The typical application is apartments or assisted living complexes that want to provide the sense that users can directly dial the public network.
- **UDP networks.** Many customers have large networks with 5-digit UDPs that have that have "run out of numbers." This feature allows a customer to extend the network dial plan. The DCS feature transparency is available only with 4-digit and 5-digit dialing plans.
- **QSIG networks.** The QSIG implementation does not require a 4-digit or a 5-digit UDP like DCS. An expanded private-network dial plan makes it easier to integrate the system into existing customer enterprise networks that are made up of non-Communication Manager systems. An expanded dial plan also facilitates those customers who want to convert a large DCS network to QSIG signaling protocol. DCS is not supported for private-network dial plans that are greater than 5-digits.
- **3-Digit UDP.** ARS dialing without a FAC allows 3-digit UDP. However, DCS does not work in a dial scheme of less than 4 digits. For feature transparency, QSIG must be used for signaling.

Avaya recommends that you use ARS or AAR Dialing without a FAC only when users dial outside central office (CO) trunks. If you use this feature to expand dial plan lengths beyond 7-digits for internal extensions across a private QSIG or DCS network, some feature interactions might occur. Such interactions can include changes in the information that is shown

on display telephones, telephony features, and call center features. ARS and AAR Dialing without a FAC is not tested against all possible feature interactions in an intraswitch networked environment. Avaya does not recommend ARS and AAR Dialing without a FAC for this use.

Extensions

A dialable extension is an extension that is can be dialed without going through ARS or AAR routing.

A nondialable extension is an extension that can only be dialed using ARS or AAR routing. You cannot dial a nondialable extension as it is administered. You must dial a nondialable extension with a prefix as a longer number than the administered extension.

An internal extension is the normal extension of 3 to 5 digits as administered on a telephone.

Use the following general rules to determine how nondialable extensions interact with a particular feature:

- When a user dials an extension directly from a telephone, or the system dials an extension when a feature is invoked, the ARS or AAR Dialing without a FAC feature must be used.
- When a feature, such as Coverage Paths or Security Violation Notification (SVN), is being administered on behalf of a telephone user, the internal extension must be dialed through the administration tool.

AAR and ARS partitioning

You can use AAR and ARS partitioning to change the call routing plan for up to eight different user groups on a single server that is running Communication Manager. You assign a Partition Group Number (PGN) to each user group and identify different call routing treatment for each PGN.

For example, you can partition hotel employees and guests into separate groups and route the calls differently. When a guest makes a long distance call, the guest's PGN and digit analysis tables route the call to a telephone billing system that allocates long distance charges. The system routes a similar call placed by an employee over a DDD trunk.

Partition user groups are used only with AAR, ARS, and UDP. You can assign AAR and ARS partitioning to telephones, attendant consoles, remote-access users, data endpoints, and incoming trunks.

Use partitioning for:

- Groups that have different routing because of special billing needs
- Groups that have dedicated use of a particular network facility
- Groups in different businesses that are serviced by a single system
- Data users who require special facility types on outgoing calls

You can assign a route pattern to just one partitioned user group, or you can assign a route pattern to all partitioned user groups.

Administering World Class Routing

The following steps are part of the administration process for World Class Routing:

- [Using COR and FRL to manage calling privileges](#)
- [Assigning a FAC for ARS](#)
- [Setting up a location ARS FAC](#)
- [Displaying ARS analysis information](#)
- [Administering the route pattern](#)
- [Defining call types](#)
 - [Defining operator-assisted calls](#)
 - [Defining interexchange carrier calls](#)
- [Using restricted area codes and prefixes](#)
- [Using wildcards](#)
- [Defining local information calls](#)
- [Modifying call routing](#)
 - [Adding a new area code](#)
 - [Adding a new prefix](#)
 - [Using ARS to restrict outgoing calls](#)
- [Defining ARS partitions](#)
 - [Setting up partition groups](#)
 - [Assigning a telephone to a partition group](#)
- [Setting up Time of Day Routing](#)

This section describes:

- Any prerequisites for administering the ARS feature
- The screens that you use to administer the ARS feature
- Complete administration procedures for the ARS feature

Prerequisites for administering World Class Routing

You must complete the following actions before you can administer the World Class Routing feature:

- None

Screens for administering World Class Routing

Screen name	Purpose	Fields
Station	Change the calling privileges of a telephone.	COR
Locations	Create a location ARS feature access code (FAC).	ARS Prefix 1 Required For 10-Digit NANP Calls?
AAR and ARS Digit Analysis Table	Define call types and interexchange carrier calls.	Dialed String
ARS Digit Analysis Table	Use wild cards.	• Dialed String • Total Min and Total Max • Route Pattern • Call Type
ARS Digit Analysis Table	Define local information calls.	• Dialed String • Total Min and Total Max • Route Pattern • Call Type
• ARS Chosen Report • ARS Digit Analysis Table	Add a new area code or a prefix.	• Total Min and Total Max • Route Pattern • Call Type • Node Num
ARS Digit Analysis Table	Restrict outgoing calls.	• Dialed String • Total Min and Total Max • Route Pattern • Call Type
• ARS Chosen Report • Partition Routing Table	Set up partition groups.	• Route Pattern • PGN

Screen name	Purpose	Fields
● Class of Restriction Information ● Authorization Code-COR Mapping	Assign a telephone to a partition group.	● COR description ● Partition Group Number
Time of Day Routing Plan	Set up time of day routing.	● All ● PGN

Using COR and FRL to manage calling privileges

Each time that you set up a telephone, you use the **Station** screen to assign a Class of Restriction (COR). You can create different CORs for different groups of users. For example, you might want executives in your company to have different calling privileges than receptionists.

When you set up a COR, you specify a facility restriction level (FRL) on the **Class of Restriction** screen. The FRL determines the calling privileges of the user. FRLs are ranked from 0 to 7, where 7 has the highest level of privileges.

You also assign an FRL to each route pattern preference on the **Route Pattern** screen. When a user makes a call, the system checks the COR of the user. The call is allowed if the FRL of the caller is higher than or equal to the FRL of the route pattern preference.

Suppose that you are setting up a telephone for a new executive. The current translations assign COR 1, with outward restrictions and an FRL of 0, which is the lowest permission level available. You want to assign a COR with the highest level of permissions, FRL 7.

To change the COR of a telephone:

1. Type **change station *n***, where *n* is the extension. Press **Enter**.

The system displays the **Station** screen ([Figure 347: Station screen](#) on page 1386).

Figure 347: Station screen

change station 1014		Page 1 of X
STATION		
Extension: 1014	Lock Messages? n	BCC: 0
Type:	Security Code:	TN: 1
Port:	Coverage Path 1:	COR: 7
Name:	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Personalized Ringing Pattern: 3	
Data Module? n	Message Lamp Ext: 1014	
Speakerphone: 2-way	Mute button enabled? y	
Display Language? English	Expansion Module?	
Model:		
	Media Complex Ext:	
	IP Softphone? y	
	Remote Office Phone? n	

2. In the **COR** field, type the number of the new COR. In this example, the number of the new COR is **7**.

3. Press **Enter** to save your changes.

To change the FRL of a COR:

1. Type **change cor *n***, where *n* is the COR that you want to change. In this example, type **change cor 7**. Press **Enter**.

The system displays the **Class of Restriction** screen ([Figure 348: Class of Restriction screen](#) on page 1387) for COR 7.

Figure 348: Class of Restriction screen

change cor 7 Page 1 of 4

CLASS OF RESTRICTION

COR Number: 7

COR Description: supervisor

FRL: 7

Can Be Service Observed? n

Can Be A Service Observer? y

Time of Day Chart: 1

Priority Queuing? n

Restriction Override: none

Restricted Call List? n

Unrestricted Call List? _ _ _ _ _

Access to MCT? y

Group II Category For MFC: 7

Send ANI for MFE? n_

MF ANI Prefix: _____

Hear System Music on Hold? y

APLT? y

Calling Party Restriction: none

Called Party Restriction: none

Forced Entry of Account Codes? n

Direct Agent Calling? y

Facility Access Trunk Test? n

Can Change Coverage? n

Fully Restricted Service? n

Hear VDN of Origin Annc.? n

Add/Remove Agent Skills? y

Automatic Charge Display? n

PASTE (Display PBX Data on telephone)? n

Can Be Picked Up By Directed Call Pickup? n

Can Use Directed Call Pickup? n

Group Controlled Restriction: inactive

2. In the **FRL** field, type the number of the new FRL. In this example, the number of the new FRL is **7**.
3. Press **Enter** to save your changes.

In this example, all users who are assigned COR 7 now have the highest level of calling permissions, FRL 7.

Assigning a FAC for ARS

To access the public network from an extension in your internal system, a FAC for ARS must be set up on your system. In the US, the number 9 is usually the ARS FAC to use to make an outgoing call.

To assign a FAC for ARS:

1. Type **change dialplan analysis**. Press **Enter**.

The system displays the **Dial Plan Analysis Table** screen ([Figure 349: Dial Plan Analysis Table screen](#) on page 1388).

Figure 349: Dial Plan Analysis Table screen

display dialplan analysis

Page 1 of 12

DIAL PLAN ANALYSIS TABLE

Percent Full: 7

Dialed String	Total Length	Call Type	Dialed String	Total Length	Call Type	Dialed String	Total Length	Call Type
00	2	attd	_____	-	_____	_____	-	_____
1	3	dac	_____	-	_____	_____	-	_____
2	4	ext	_____	-	_____	_____	-	_____
3	4	ext	_____	-	_____	_____	-	_____
3	1	aar	_____	-	_____	_____	-	_____
4	1	ars	_____	-	_____	_____	-	_____
4	5	ext	_____	-	_____	_____	-	_____
5	5	ext	_____	-	_____	_____	-	_____
5	7	ext	_____	-	_____	_____	-	_____
6	5	ext	_____	-	_____	_____	-	_____
7210	7	ext	_____	-	_____	_____	-	_____
8	7	ext	_____	-	_____	_____	-	_____
9	1	fac	_____	-	_____	_____	-	_____
*	3	fac	_____	-	_____	_____	-	_____
#	3	fac	_____	-	_____	_____	-	_____

2. In an empty row, type the number in the Dialed String column that you want to use as the FAC for ARS. In this example, the number for the FAC for ARS is **9**.
3. In the Total Length column, type **1**. This number indicates that the total number of digits for the FAC for ARS is 1 digit, the number **9**.
4. In the Call Type column, type **fac**.
5. Press **Enter** to save your changes.
6. Type **change features-access-codes**. Press **Enter**.

The system displays the **Feature Access Code (FAC)** screen ([Figure 350: Feature Access Code \(FAC\) screen](#) on page 1389).

Figure 350: Feature Access Code (FAC) screen

change feature-access-codes
Page 1 of 7

FEATURE ACCESS CODE (FAC)

Abbreviated Dialing List1 Access Code: _____	
Abbreviated Dialing List2 Access Code: _____	
Abbreviated Dialing List3 Access Code: _____	
Abbreviated Dial - Prgm Group List Access Code: _____	
Announcement Access Code: _____	
Answer Back Access Code: _____	
Attendant Access Code: _____	
Auto Alternate Routing (AAR) Access Code: _____	
Auto Route Selection (ARS) Access Code 1: 9	Access Code 2: _____
Automatic Callback Activation: _____	Deactivation: _____
Call Forwarding Activation Busy/DA: _____ All: _____	Deactivation: _____
Call Park Access Code: _____	
Call Pickup Access Code: _____	
CAS Remote Hold/Answer Hold-Unhold Access Code: _____	
CDR Account Code Access Code: _____	
Change COR Access Code: _____	
Change Coverage Access Code: _____	
Data Origination Access Code: _____	
Data Privacy Access Code: _____	
Directed Call Pickup Access Code: _____	

7. In the **Auto Route Selection (ARS) Access Code 1** field, type the number that you set up in Step 2. In this example, type the number **9**.
8. Press **Enter** to save your changes.

Setting up a location ARS FAC

Prerequisites

You must complete the following actions before you can set up a location ARS FAC:

- On the **Optional Features** screen, ensure that the **Multiple Locations** field is set to **y**. If this field is set to **y**, you can administer up to 250 locations depending on the configuration of the server that is running Communication Manager. If the **Multiple Locations** field is set to **n**, information for Location No. 1 applies to all your locations.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

To set up a location ARS FAC:

1. Type **change locations**. Press **Enter**.

The system displays the **Locations** screen ([Figure 351: Locations screen](#) on page 1390).

Figure 351: Locations screen

change locations
Page 1 of X

LOCATIONS

ARS Prefix 1 Required For 10-Digit NANP Calls? y

Loc. No	Name	Timezone Offset	Rule	NPA	ARS FAC	Attd FAC	Pre-fix	Proxy Sel Rte pat
1	Main	00:00	0					
xxx		:						
xxx		:						
xxx		:						
xxx		:						
xxx		:						
xxx		:						
xxx		:						
xxx		:						
xxx		:						
xxx		:						

2. In the **ARS Prefix 1 Required For 10-Digit NANP Calls?** field, type **y**.
3. Press **Enter** to save your changes.

Note:

The system uses the ARS access code on the **Feature Access Code (FAC)** screen when a location ARS does not exist. If a location ARS FAC exists, the ARS access code on the **Feature Access Code (FAC)** screen is denied from that location. If you use a local ARS code, the ability to administer two ARS codes on the **Feature Access Code (FAC)** screen is lost.

Displaying ARS analysis information

The ARS Digit Analysis Table controls how the system routes calls.

To display an ARS Digit Analysis Table:

1. Type **display ars analysis *n***, where *n* is the first number or numbers of the dialed string that you want to review. In this example, the number is 1. Press **Enter**.

The system displays the **ARS Digit Analysis Table** screen for dialed strings that begin with the number 1 ([Figure 352: ARS Digit Analysis Table screen](#) on page 1391).

Note that the system displays only as many dialed strings as can fit on one screen at a time.

Figure 352: ARS Digit Analysis Table screen

display ars analysis 1							Page 1 of X
ARS DIGIT ANALYSIS TABLE							
Location: all							Percent Full: 3
Dialed String	Total Min	Total Max	Route Pattern	Call Type	Node Num	ANI Req'd	
101xxxx0	8	8	deny	op	—	n	
101xxxx0	18	18	deny	op	—	n	
101xxxx01	16	24	deny	iop	—	n	
101xxxx011	17	25	deny	intl	—	n	
101xxxx1	18	18	deny	fnpa	—	n	
1010xxx	14	18	5	ixc	—	n	
10xxx0	6	6	deny	op	—	n	
10xxx0	16	16	deny	op	—	n	
10xxx01	14	22	deny	iop	—	n	
10xxx011	15	23	deny	intl	—	n	
10xxx1	16	16	deny	fnpa	—	n	
11	2	2	734	alrt	—	n	
120	11	11	4	fnpa	—	n	
1200	11	11	deny	fnpa	—	n	
121	11	11	deny	fnpa	—	n	
122	11	11	deny	fnpa	—	n	

2. After you review this information, press **Cancel**.

To see all the dialed strings that are defined for your system and run an ARS Digit Analysis report:

1. Type **list ars analysis**. Press **Enter**.

The system displays an **ARS Digit Analysis Report** screen for all dialed strings ([Figure 353: ARS Digit Analysis Report screen](#) on page 1392). You might want to print this report for your records.

Figure 353: ARS Digit Analysis Report screen

list ars analysis						Page 1 of X
ARS DIGIT ANALYSIS REPORT						
Location: all						
Dialed String	Total Min	Total Max	Route Pattern	Call Type	Node Num	
0	1	1	deny	op	___	
0	8	8	deny	op	___	
0	11	11	deny	op	___	
00	2	2	deny	op	___	
01	17	17	deny	op	___	
001	10	18	deny	op	___	
101xxxx0	8	8	deny	op	___	
101xxxx0	18	18	deny	op	___	
101xxxx01	16	24	deny	iop	___	
101xxxx011	17	25	deny	intl	___	
101xxxx1	18	18	deny	fnpa	___	
10xxx0	6	6	deny	op	___	

2. After you review this information, press **Cancel**.

Administering the route pattern

The **Route Pattern** screen defines the route patterns that the server uses. Each route pattern contains a list of trunk groups that can be used to route the call. The maximum number of route patterns and trunk groups allowed depends on the configuration and the memory that is available on the system.

Use this screen to insert or delete digits so that the system routes AAR or ARS calls over different trunk groups. You can convert an AAR number into an international number, and insert an area code in an AAR number to convert an on-network number to a public network number. Also, when a call directly accesses a local central office (CO), if the long-distance carrier provided by your CO is unavailable, the system can insert the dial access code for an alternative carrier into the digit string.

To administer the route pattern for your system:

1. Type **change route-pattern *n***, where *n* is the number of the route pattern. Press **Enter**.

The system displays the **Route Pattern** screen ([Figure 354: Route Pattern screen](#) on page 1393).

Figure 354: Route Pattern screen

Pattern Number: 1 Pattern Name:														
Secure SIP? n														
Grp	FRL	NPA	Pfx	Hop	Toll	No.	Inserted							
No			Mrk	Lmt	List	Del	Dgts							
1:	1	0	303			0	9							
2:														
3:														
4:														
5:														
6:														

BCC	VALUE	TSC	CA-TSC	ITC	BCIE	Service/Feature	BAND	No.	Numbering	LAR
0	1	2	3	4	W	Request		Dgts	Format	
1:	y	y	y	y	y	n	n	rest		none
2:	y	y	y	y	y	n	n	rest		none
3:	y	y	y	y	y	n	n	rest		none
4:	y	y	y	y	y	n	n	rest		none
5:	y	y	y	y	y	n	n	rest		none
6:	y	y	y	y	y	n	n	rest		none

**Important:**

The next step is for US customers only.

- In the **Band** field, type a number that represents the OUTWATS band number.

WATS is a voice-grade service that provides both voice and low-speed data transmission calls to defined areas, or bands, for a flat rate charge.

The system displays the **Band** field when the **Services/Features** field is set to **outwats-bnd**, and when either the **ISDN-PRI** or **ISDN-BRI Trunks** field is set to **y** on the **Optional Features** screen. The **Band** field is required by Call-by-Call Service Selection.

- In the **BCC Value** (Bearer Capability Class) area, type the following information in the corresponding columns. The columns are labeled **0**, **1**, **2**, **3**, **4**, and **W**.
 - In the **0** column, perform one of the following actions:
 - If the BCC is appropriate for the associated route pattern, type **y**.
 - If the BCC is not appropriate for the associated route pattern, type **n**.
 - In the **1** column, perform one of the following actions:
 - If the BCC is appropriate for the associated route pattern, type **y**.
 - If the BCC is not appropriate for the associated route pattern, type **n**.

- In the **2** column, perform one of the following actions:
 - If the BCC is appropriate for the associated route pattern, type **y**.
 - If the BCC is not appropriate for the associated route pattern, type **n**.
- In the **3** column, perform one of the following actions:
 - If the BCC is appropriate for the associated route pattern, type **y**.
 - If the BCC is not appropriate for the associated route pattern, type **n**.
- In the **4** column, perform one of the following actions:
 - If the BCC is appropriate for the associated route pattern, type **y**.
 - If the BCC is not appropriate for the associated route pattern, type **n**.
- In the **W** column, perform one of the following actions:
 - If the BCC is appropriate for the associated route pattern, type **y**.
 - If the BCC is not appropriate for the associated route pattern, type **n**.

Information in the **BCC Value** area identifies the type of call that is appropriate for this trunk group, such as voice calls and different types of data calls. The system displays the **BCC Value** field when either the **ISDN-PRI** field or the **ISDN-BRI Trunks** field is set to **y** on the **Optional Features** screen.

See [Table 98: Entries for the BCC Value area](#) on page 1394 for a description of BCC Values.

Table 98: Entries for the BCC Value area

Entry	Description
0	voice-grade data and voice
1	56-kbps data (mode 1)
2	64-kbps data (mode 2)
3	64-kbps data (mode 3)
4	64-kbps data (mode 0)
W	128-kbps to 1984-kbps data (wideband)

4. In the **BCIE** field, type the value that determines the creation of the ITC codepoint in the setup message. The **BCIE** field applies to ISDN trunks.
- Type **ept** for endpoint.
 - Type **unr** for unrestricted.

The system displays the **BCIE** field when the **ITC** field is set to **both**.

5. In the **CA-TSC** field, type the information for ISDN B-channel connections.

See [Table 99: Entries for the CA-TSC field](#) on page 1395 for a description of the entries for the **CA-TSC** field.

Table 99: Entries for the CA-TSC field

Entry	Description
as-needed	The CA-TSC is set up only when needed. This setting causes a slight delay. Avaya recommends this entry for most situations.
at-setup	The CA-TSC is automatically set up for every B-channel call whether or not it is needed.
none	No CA-TSC is set up. This setting permits tandeming of NCA-TSC setup requests.

6. In the **DCS/QSIG Intw**, field perform one of the following actions:

- To enable CS/QSIG Voice Mail Interworking, type **y**.
- To disable CS/QSIG Voice Mail Interworking, type **n**.

The system displays the **DCS/QSIG Intw** field when the **Interworking with DCS** field is set to **y** on the **Optional Features** screen.

7. In the **FRL** field, type the Facility Restriction Level (FRL) that is associated with the preference.

Valid values are the digits **0** through **7**.

0 is the least restrictive FRL, and 7 is the most restrictive FRL. To access the associated trunk-group, the FRL of the calling party must be greater than, or equal to, the FRL that you typed on this screen.



SECURITY ALERT:

For system security reasons, Avaya recommends that you use the most restrictive FRL possible.

8. In the **Grp No** field, type the trunk group number that is associated with the preference.

- Valid values are the digits **1** through **666** for DEFINITY R, CSI, and SI.
- Valid values are the digits **1** through **2000** for the S8300 Media Server, the S8700 IP-Connect, and the S8700 Multi-Connect.

9. In the **Hop Lmt** field, type the number of hops for each preference. A *hop* occurs when a call tandems through a media server or a system to another destination. You limit the number of hops to prevent circular hunting, which ties up trunk facilities without completing a call. The software blocks the number of hops that are equal to or greater than the number that you enter in the **Hop Lmt** field.

See [Table 100: Entries for the Hop Lmt field](#) on page 1396 for the **Hop Lmt** field entries.

Table 100: Entries for the Hop Lmt field

Entry	Description
blank	Indicates that the system does not apply a limit to the number of hops for this preference.
1 to 9	Limits the number of hops if you use the Tandem Hop capability. Valid values are the digits 1 to 9 .
1 to 32	Limits the number of hops if you use the Transit capability. Valid values are the digits 1 to 32 .

10. In the **Inserted Digits** field, type the digits that the software inserts for routing.

Valid values are the digits **0** through **9**. You can type a maximum of 36 digits.

The software can send a maximum of 52 digits. This number includes the digits that you enter in the **Inserted Digits** field, plus the digits that the user dials. The software counts each special symbol as 2 digits.

See [Table 101: Entries for the Inserted Digits field](#) on page 1396 for the **Inserted Digits** field entries.

Table 101: Entries for the Inserted Digits field

Entry	Description
asterisk (*)	When an asterisk (*) is in the route pattern and the outgoing trunk is signaling type mf , the MFC tone for the "end-of-digits" is sent out to the central office (CO) in place of the asterisk (*).
pound sign (#)	When the pound sign (#) is in the route pattern and the outgoing trunk is signaling type mf , the MFC tone for the "end-of-digits" is sent out to the central office (CO) in place of the pound sign (#).
comma (,)	A comma (,) uses 2 places. A comma (,) creates a 1.5-second pause between the digits that are sent. Do not use a comma (,) as the first character in the string unless it is absolutely necessary. Misuse can result in some calls, such as Abbreviated Dialing or Last Number Dialed calls, not completing.
plus sign (+)	The plus sign (+) waits for dial tone up to the Off Premises Tone Detection Timer . The system then sends either digits or intercept tone, based on value in the Out Pulse Without Tone field on the Feature-Related System Parameters screen.
percent sign (%)	The percent sign (%) starts End-to-End Signaling.
exclamation point (!)	An exclamation point (!) waits for dial tone without timeout, and then sends dual-tone multifrequency (DTMF) digits.
1 of 2	

Table 101: Entries for the Inserted Digits field (continued)

Entry	Description
ampersand (&)	An ampersand (&) waits for Automatic Number Identification (ANI). An ampersand (&) is used for Russian pulse trunks.
p	The associated trunk group must be of type "sip." Type the single digit p for fully qualified E.164 numbers. The system translates the p to a plus sign (+). The system then places the plus sign (+) at the front of the digit string.
2 of 2	

11. In the **ITC** field, type the Information Transfer Capability (ITC) to identify the type of data transmission or traffic that this routing preference can carry. The ITC applies only to data calls BCC 1 through 4.

If the **W** column of the **BCC** field is set to **y**, the **ITC** field must be set to either **unre** or **both**.

See [Table 102: Entries for the ITC field](#) on page 1397 for **ITC** field entries.

Table 102: Entries for the ITC field

Entry	Description
both	Calls from restricted and unrestricted endpoints can access the route pattern.
rest	Calls from restricted endpoints can access the route pattern.
unre	Calls from unrestricted endpoints can access the route pattern.

12. In the **IXC** field, type the Inter-Exchange Carrier (IXC). The system uses this information for calls that the system routes through an IXC, and for the Call Detail Recording (CDR) feature.

The system displays the **IXC** field when the **ISDN-PRI** field or **ISDN-BRI Trunks** field is set to **y** on the **Optional Features** screen.

See [Table 103: Entries for the IXC field](#) on page 1397 for IXC field entries.

Table 103: Entries for the IXC field

Entry	Description
Valid carrier code	Identifies the carrier for IXC calls.
user	Identifies a presubscribed carrier. Used when an IXC is not specified.
none	The IXC field must be none for non-ISDN trunk groups and for Bellcore NI-2 Operator Service Access. If you need to send an IXC code for a non-ISDN trunk group, type the IXC code in the Inserted Digits field.

13. In the **LAR** field, type the routing-preference for Look Ahead Routing (LAR).

See [Table 104: Entries for the LAR field](#) on page 1398 for LAR field entries.

Table 104: Entries for the LAR field

Entry	Description
next	Go to the next routing preference and attempt the call again.
rehu	Rehunt within the current routing-preference for another trunk to attempt the call again.
none	LAR is not enabled for the preference.

14. In the **No. Del. Digits** field, type the total number of digits that you want the system to delete before the system sends the number out on the trunk.

Valid values are the digits **0** through **28**. You can also set the field to blank. To set the field to blank, press **Clear**.

The software uses this information to modify the dialed number so that the system routes an AAR or ARS call over different trunk groups that terminate in media servers or systems with different dial plans. The software uses this information for the calls that use the following routing methods:

- To or through a remote media server or switch
- Over tie trunks to a private network server or switch
- Over CO trunks to the serving CO

15. In the **No. Dgts Subaddress** field, type the number of dialed digits to send in the calling party subaddress information element (IE).

You can change the **No. Dgts Subaddress** field if the **ISDN Feature Plus** field is set to **y** on the **Optional Features** screen.

Valid values are the digits **1** through **5**. You can also set the field to blank. To set the field to blank, press **Clear**.

The software uses this information to route a call to a number where the media server deletes the dialed number and inserts the listed directory number (LDN). The LDN is then sent to the destination address, and the dialed extension is sent in the calling party subaddress IE. At the receiving end, the call terminates to the user who is indicated by the subaddress number instead of to the attendant.

16. In the **NPA** field, type the 3-digit Numbering Plan Area (NPA) for the terminating endpoint of the trunk group. The NPA is also known as the area code.

Valid values are the digits **0** through **9**. You can also set the field to blank. To set the field to blank, press **Clear**.

For WATS trunks, the terminating NPA is the same as the home NPA unless the local exchange carrier (LEC) requires 10 digits for local NPA calls.

Call your local telephone company to verify the NPA, if you need help.

You do not need to enter an NPA for AAR.

17. In the **Numbering Format** field, type the information that specifies the format of the routing number that the system uses for the ISDN trunk groups for this preference.

Note:

To access the Bellcore NI-2 Operator Service Access, you must type **unk-unk** in the **Inserted Digits** field.

The system displays the **Inserted Digits** field when the **ISDN-PRI or ISDN-BRI Trunks** field is set to **y** on the **Optional Features** screen.

See [Table 105: Entries for the Numbering Format field](#) on page 1399 for **Numbering Format** field entries.

Table 105: Entries for the Numbering Format field

Entry	Numbering Plan Identifier	Type of Numbering
blank	E.164(1)	1-MAX
natl-pub	E.164(1)	national(2)
intl-pub	E.164(1)	international(1)
locl-pub	E.164(1)	local/subscriber(4)
pub-unk	E.164(1)	unknown(0)
lev0-pvt	Private Numbering Plan - PNP(9)	local(4)
levl0-pvt (use this entry to allow Network Call Redirection / Transfer)	-	-
lev1-pvt	Private Numbering Plan - PNP(9)	Regional Level 1(2)
lev2-pvt	Private Numbering Plan - PNP(9)	Regional Level 2(1)
unk-unk	unknown(0)	unknown(0)

The **Pattern Number** field is a display-only field that displays the route pattern number. The route pattern number is from **1** to **640**.

18. In the **Prefix Mark** field, type the prefix mark information for ARS.

Valid values are the digits **0** through **4**. You can also set the field to blank. To set the field to blank, press **Clear**.

This entry is not required for AAR.

Prefix marks set the requirements for sending a prefix digit 1 to indicate a long distance call. Prefix marks apply to 7-digit Direct Distance Dialing (DDD) or 10-digit DDD public network calls. A prefix digit 1 is sent only when the **call type** field is a foreign number plan area (FNPA) or a home numbering plan area (HNPA) in the **ARS Digit Analysis Table** screen.

For a WATS trunk, the prefix mark is the same as the local CO trunk.

See [Table 106: Entries for the Prefix Mark field](#) on page 1400 for **Prefix Mark** field entries.

Table 106: Entries for the Prefix Mark field

Entry	Description
0	● Suppress a user-dialed prefix digit 1 for 10-digit FNPA calls. ● Leave a user-dialed prefix digit 1 for 7-digit HNPA calls. ● Leave a prefix digit 1 on 10-digit calls that are not FNPA or HNPA calls. Do not use Prefix Mark 0 in those areas where all long distance calls must be dialed as 1 plus 10 digits. Check with your local network provider.
1	Send a 1 on all 10-digit calls, but not on 7-digit calls. Use Prefix Mark 1 for HNPA calls that require a 1 to indicate long distance calls.
2	Send a 1 on all 10-digit and 7-digit long distance calls. Prefix Mark 2 uses a Toll Table to define long distance codes.
3	Send a 1 on all long distance calls, and keep or insert the NPA so that all long distance calls are 10-digit calls. The system inserts the NPA when a user dials a prefix digit 1 plus 7 digits. Prefix Mark 3 uses a Toll Table to define long distance codes.
4	Always suppress a user-dialed Prefix digit 1. Use Prefix Mark 4, for example, when the system routes ISDN calls to a media server or a system that rejects calls with a prefix digit 1.
blank	For TIE trunks, leave this field blank.

19. In the **Service/Feature** field, type the IE in a call in this route pattern.

Valid values are from 1 to 15 characters.

The **Service/Feature** field is required by Call-by-Call Service Selection, and Network Call Redirection and Transfer.

The system displays the **Service/Feature** field when the **ISDN-PRI** field or the **ISDN-BRI Trunks** field is set to **y** on the **Optional Features** screen.

See [Table 107: Entries for the Service/Feature field](#) on page 1401 for **Service/Feature** field entries.

Table 107: Entries for the Service/Feature field

Entry	Description
accunet	-
i800	-
inwats	-
lds	-
mega800	-
megacom	-
multiquest	-
operator	-
oper-lds	Operator and lds
oper-meg	Operator and megacom
oper-sdn	Operator and sdn
outwats-bnd	-
sdn	Enter to allow Network Call Redirection/Transfer.
sub-operator	-
sub-op-lds	Suboperator and lds
sub-op-meg	Suboperator and megacom
sub-op-sdn	Suboperator and sdn
wats-max-bnd	-

20. In the **Toll List** field, type the number of the ARS Toll Table that is associated with the terminating NPA of the trunk group. You must complete this field if the **Prefix Mark** is set to **2** or **3**.

Valid values are the digits **1** through **32**. You can also set the field to blank. To set the field to blank, press **Clear**.

This entry is not required for AAR.

21. In the **TSC** field, perform one of the following actions:

- Type **y** if you want:
 - To allow Call-Associated TSCs, and to allow incoming Non-Call-Associated TSC requests to be tandemed out for each preference
 - Feature transparency on DCS+ calls and to use QSIG Call Completion
- Type **n** if you do not want:
 - To allow Call-Associated TSCs, and to allow incoming Non-Call-Associated TSC requests to be tandemed out for each preference
 - Feature transparency on DCS+ calls and to use QSIG Call Completion

Defining call types

To define call types, you must complete the following procedures:

- [Defining operator-assisted calls](#)
- [Defining interexchange carrier calls](#)

Defining operator-assisted calls

To define operator-assisted calls, the user first dials 9 to access ARS, then a 0, and the rest of the number.

To see how the system handles a call to an operator:

1. Type **display ars analysis 0**. Press **Enter**.

The system displays an **ARS Digit Analysis Table** screen for dialed strings that begin with the number 0 ([Figure 355: ARS Digit Analysis Table screen](#)). The table in this example shows six translations for calls that begin with the number 0.

Figure 355: ARS Digit Analysis Table screen

display ars analysis 1							Page 1 of X
ARS DIGIT ANALYSIS TABLE							
Location: all							Percent Full: 3
Dialed String	Total		Route	Call	Node	ANI	
	Min	Max	Pattern	Type	Num	Reqd	
0	1	1	deny	op	—	n	
0	8	8	deny	op	—	n	
0	11	11	deny	op	—	n	
00	2	2	deny	op	—	n	
01	17	17	deny	op	—	n	
001	10	18	deny	op	—	n	

2. After you review this information, press **Cancel**.

Use the **ARS Digit Analysis Table** screen that is shown in [Figure 355: ARS Digit Analysis Table screen](#) on page 1403 to follow the routing, in this example, for an operator-assisted call to New Jersey.

1. A user dials **9 0 908 956 1234**.
2. The system:
 - a. Ignores the ARS FAC, which is **9** in this example
 - b. Reviews the **ARS Digit Analysis Table** for **0**
 - c. Determines that the user dialed more than 1 digit
 - d. Determines that the user dialed 11 digits
 - e. Rules out the dialed strings for 00, 01, and 011
3. The system then routes the call as an operator-assisted call.

Defining interexchange carrier calls

Interexchange carrier (IXC) numbers directly access your long distance carrier lines. IXC numbers begin with 1010. After 1010, IXC numbers include 3 digits, plus the number, including 0, 00, or 1 plus 10 digits. These numbers are set up on your default translations.

Remember that the user first dials 9 in this example to access ARS, and then dials the rest of the number.

To route an ARS call to an IXC:

1. Type **display ars analysis *n***, where *n* is the first number or numbers of the dialed string that you want to review. In this example, the number is 1. Press **Enter**.

The system displays the **ARS Digit Analysis Table** screen for numbers that begin with the number 1 ([Figure 352: ARS Digit Analysis Table screen](#) on page 1391).

If you use an **x** in the **Dialed String** field, the system recognizes the **x** as a wildcard. The **x** represents any digit from 0 to 9. If you dial 1010, the next 3 digits always match the **x** wildcard in the dialed string.

2. After you review this information, press **Cancel**.

Use the **ARS Digit Analysis Table** shown in [Figure 352: ARS Digit Analysis Table screen](#) on page 1391 to follow the routing, in this example, for an IXC call to AT&T. 1010288 is the carrier access code for AT&T.

1. A user dials **9 1010288**, plus a public network number.
2. The system:
 - a. Ignores the ARS FAC, which is **9** in this example
 - b. Reviews the **ARS Digit Analysis Table** for **1010**
 - c. Analyzes the number.
3. The system then matches **288** with **xxx**, and sends the call over route pattern 5.

Using restricted area codes and prefixes

Certain area code numbers are set aside in the North American Numbering Plan. For example, these numbers are 200, 300, 400, 500, 600, 700, 800, 877, 888, and 900. You must specifically deny calls made to area codes 200 through 900, except 800, 877, and 888.

If you do not want to incur charges, you can also deny access to the 976 prefix. The 976 prefix is set aside in each area code for pay-per-call services. You can block 976 or any other prefix in all Numbering Plan Areas (NPAs) with a single entry in the digit analysis table.

You can set the 200 area code apart from other area codes 201 through 209. We use the digit analysis table 120 because it defines long distance calls that begin with 1 and all area codes from 200 through 209.

To deny long distance calls to a restricted area code:

1. Type **change ars analysis *n***, where *n* is the first number or numbers of the dialed string that you want to review. In this example, the number is 120. Press **Enter**.

The system displays the **ARS Digit Analysis Table** screen for calls that begin with the numbers 120 ([Figure 356: ARS Digit Analysis Table screen](#) on page 1405). The table in the example shows two definitions for calls that begin with the numbers 120.

Figure 356: ARS Digit Analysis Table screen

change ars analysis 120

Page 1 of X

ARS DIGIT ANALYSIS TABLE

Location: all

Percent Full: 6

	Dialed String	Total Min Max		Route Pattern	Call Type	Node Num	ANI Reqd
120		11	11	4	fnpa	___	n
1200		11	11	deny	fnpa	___	n

2. After you review this information, press **Cancel**.

Use the **ARS Digit Analysis Table** shown in [Figure 356: ARS Digit Analysis Table screen](#) on page 1405 for the next two examples.

Follow the routing for the long distance call, in this example, that begins with 120, where the call is permitted. The 120 translation handles all dialed strings from 1201 through 1209.

1. A user dials **9 120**, plus 8 digits, the first of which is not 0.
2. The system:
 - a. Ignores the ARS FAC, which is **9** in this example
 - b. Reviews the **ARS Digit Analysis Table** for the numbers **120**
 - c. Analyzes the number
 - d. Determines that the call is long distance
 - e. Sends the call over Route Pattern 4.

Now follow the routing for the call, in this example, that begins with the restricted area code 200:

1. A user dials **9 1200**, plus 7 digits.
2. The system:
 - a. Ignores the ARS FAC, which is **9** in this example
 - b. Reviews the **ARS Digit Analysis Table** for the numbers **1200**
 - c. Analyzes the number
 - d. Determines that the Call Type is **deny**. The call does not go through.

Using wildcards

You can use wildcards to help control calls to certain numbers. When you use the wildcard **x** in the **Dialed String** field, the system recognizes **x** as any digit from 0 to 9.

For this example, use wildcards to restrict users from making calls to a 555 information operator where you might incur charges. The wildcards in this example represent any area code that the user might dial.

To use wildcards to prevent callers from placing calls to a restricted number:

1. Type **change ars analysis n**, where **n** is the first number or numbers of the dialed string that you want to review. In this example, the number is 1. Press **Enter**.

The system displays the **ARS Digit Analysis Table** screen for dialed strings that begin with the number 1 ([Figure 352: ARS Digit Analysis Table screen](#) on page 1391).

2. Click **Next** if necessary until you see a blank field.
3. In the Dialed String column, type **1xxx555**.

In this example, the:

- **1** indicates a long distance call
- **xxx** indicates any three numbers, or area code, from 000 to 999
- **555** indicates the extension prefix that you want to restrict

4. In the Total Min and the Total Max columns, type **11**.

In this example, the number **11** in both columns indicates that total length of the dialed number must be 11 digits.

5. In the Route Pattern column, type **deny**.
6. In the Call Type column, type **fnhp**.
7. Press **Enter** to save your changes.

Defining local information calls

You might want users to access local information. In this example, allow users to dial extension 411 to access local information.

To allow local information calls:

1. Type **change ars analysis n**, where **n** is the first number or numbers of the dialed string that you want to review. In this example, the number is 4. Press **Enter**.

The system displays the **ARS Digit Analysis Table** screen for dialed strings that begin with the number 4 ([Figure 357: ARS Digit Analysis Table screen](#) on page 1407).

Figure 357: ARS Digit Analysis Table screen

change ars analysis 4
Page 1 of X

ARS DIGIT ANALYSIS TABLE
 Location: all Percent Full: 6

Dialed String	Total Min Max	Route Pattern	Call Type	Node Num	ANI Reqd
411	3 3	1	svcl	—	n
5	7 7	2	hnpa	—	n
6	7 7	2	hnpa	—	n
7	7 7	2	hnpa	—	n
911	3 3	1	svcl	—	n

2. Click **Next** if necessary until you see a blank field.
3. In the Dialed String column, type the string of numbers that you want to change.
In this example, type **411**.
4. In the Total Min and the Total Max columns, type the minimum number of digits, and the maximum number of digits, that you want the system to analyze.
In this example, the number **3** in both columns indicates that total length of the dialed number must be 3 digits.
5. In the Route Pattern column, type a routing pattern number.
In this example, type the number **1**.
6. In the Call Type column, type **svcl**.
The call type **svcl** indicates a service call.
7. Press **Enter** to save your changes.

Modifying call routing

To modify call routing, you must complete the following procedures:

- [Adding a new area code](#)
- [Using ARS to restrict outgoing calls](#)

If your system uses ARS Digit Analysis to analyze dialed strings and select the best route for a call, you must change the digit analysis table to modify call routing. For example, you need to update this table to add new area codes, or to restrict users from calling specific areas or countries.

Adding a new area code

Sometimes, area codes within a region might change. In this example, area code 415 has split into two area codes, 415 and 650. Add a new nonlocal area code, 650, to have the same values as the existing nonlocal area code on your system, 415.

To add a nonlocal area code:

1. Type **list ars route-chosen**, the number **1**, the existing area code, and any 7-digit telephone number. For this example, type **list ars route-chosen 14152223333**. Press **Enter**.

The system displays the **ARS Route Chosen Report** screen ([Figure 358: ARS Route Chosen Report screen](#)) for number 14152223333.

Figure 358: ARS Route Chosen Report screen

list ars route-chosen 14152223333						Page 1 of X
ARS ROUTE CHOSEN REPORT						
Location: 1			Partitioned Group Number: 1			
Dialed	Total		Route	Call	Node	Location
String	Min	Max	Pattern	Type	Number	
141	11	11	30	fnpa		all

2. Remember the **Total Min**, **Total Max**, **Route Pattern**, and **Call Type** values on this screen. In this example, the **Total Min** is **11**, the **Total Max** is **11**, the **Route Pattern** is **30**, and the **Call Type** is **fnpa**.
3. After you review this information, press **Cancel**.

In this example, add a new area code 650 that has the same values as area code 415.

1. Type **change ars analysis n**, where **n** is the first number or numbers of the dialed string that you want to review. In this example, the number is 1650. Press **Enter**.

The system displays the **ARS Digit Analysis Table** screen for dialed strings that begin with the numbers 1650 ([Figure 359: ARS Digit Analysis Table screen](#) on page 1409).

Figure 359: ARS Digit Analysis Table screen

change ars analysis 1650						Page 1 of X
ARS DIGIT ANALYSIS TABLE						
Location: all						Percent Full: 6
Dialed String	Total		Route	Call	Node	ANI
	Min	Max	Pattern	Type	Num	Reqd
1	11	11	30	fnpa	—	n
1650	11	11	30	fnpa	—	n
167	11	11	30	fnpa	—	n
1800	11	11	30	fnpa	—	n
2	7	7	2	hnpa	—	n
3	7	7	2	hnpa	—	n
4	7	7	2	hnpa	—	n
5	7	7	2	hnpa	—	n
7	7	7	2	hnpa	—	n
8	7	7	2	hnpa	—	n
911	3	3	1	emer	—	n
976	11	11	deny	hnpa	—	n

- Click **Next** if necessary until you see a blank field.

If the dialed string is already defined in your system, the cursor appears in the appropriate Dialed String column where you can make changes.

- In the Dialed String column, type **1650**.
- In the Total Min and the Total Max columns, type the minimum and maximum values from Step 2.

For this example, the minimum and maximum values are **11**.

- In the Route Pattern column, type the route pattern from Step 2.

For this example, the route pattern is **30**.

- In the Call Type column, type the call type from Step 2.

For this example, the route pattern is **fnpa**.

- In the Node Num column, type the node number from Step 2

For this example, the node number is left blank.

- Press **Enter** to save your changes.

Adding a new prefix

To add a new prefix, follow the same procedure as you use to add a new area code. The one exception is to use a shorter dial string (such as **2223333**, where **222** is the old prefix,) and a dial type of **hnpa**.

If you do not need to use the number 1 for area code calls, omit the **1** in Step 1, Step 4, and Step 6 in the previous procedure. Also, type **10** instead of **11** in the **Total Min** and the **Total Max** fields in Step 7.

To see if the new area code or prefix number is set up as a toll call, type **display toll n**, where **n** is the prefix that you want to review. Some users might not be allowed to dial toll call numbers.

Using ARS to restrict outgoing calls

With ARS, you can block outgoing calls to specific dialed strings. For example, you can restrict users from making international calls to countries where you do not do business. In the US, you can restrict access to 900 and 976 pay-per-call numbers.

In this example, Colombia is used as the country to restrict. The country code for Colombia is 57.

To prevent callers from placing calls to countries that you want to restrict:

1. Type **change ars analysis 011n**, where **011** is the international access code and **n** is the country code of the restricted country. In this example, type **change ars analysis 01157**. Press **Enter**.

The system displays the **ARS Digit Analysis Table** screen ([Figure 360: ARS Digit Analysis Table screen](#) on page 1410).

Figure 360: ARS Digit Analysis Table screen

change ars analysis 01157							Page 1 of X
ARS DIGIT ANALYSIS TABLE							
Location: all							Percent Full: 6
Dialed String	Total Min	Total Max	Route Pattern	Call Type	Node Num	ANI Req'd	
1	11	11	30	fnpa	___	n	
1650	11	11	30	fnpa	___	n	
167	11	11	30	fnpa	___	n	
1800	11	11	30	fnpa	___	n	
2	7	7	2	hnpa	___	n	
3	7	7	2	hnpa	___	n	
4	7	7	2	hnpa	___	n	
5	7	7	2	hnpa	___	n	
7	7	7	2	hnpa	___	n	
8	7	7	2	hnpa	___	n	
911	3	3	1	emer	___	n	
976	11	11	deny	hnpa	___	n	
01157	10	23	deny	intl	___	n	

2. Click **Next** if necessary until you see a blank field.

If the dialed string is already defined in your system, the cursor appears in the appropriate Dialed String column. Skip to Step 5 to deny calls to this dialed string.

3. In the Dialed String column, type **011xx**, where **xx** is the country code of the restricted country.

In this example, type **01157**.

4. In the Total Min and the Total Max columns, type the minimum number of digits, and the maximum number of digits, that you want the system to analyze.

In this example, type **10** in the Total Min column, and **23** in the Total Min column. The system uses this digit analysis entry if the dialed number:

- Begins with **01157**
- Contains at least 10 digits
- Contains no more than 23 digits

5. In the Route Pattern column, type an appropriate route pattern.

In this example, type **deny** to prevent users to complete calls to this dialed string.

6. In the Call Type column, type the category of calls that this dialed string represents.

In this example, type **intl** to indicate this dialed string represents an international call.

7. Press **Enter** to save your changes.

Defining ARS partitions

You can use ARS partitioning to provide different call routing for a group of users, or for specific telephones.

If you used partitioning on a prior release of Communication Manager and you want to continue to use partitioning, read this section carefully. In release 2.0 of Communication Manager, partition groups are defined on the **Partition Route Table**. Partition groups are no longer defined on the **Digit Analysis Table**.

Prerequisites

You must complete the following actions before you can define ARS partitions:

- On the **Optional Features** screen:
 - Ensure that the **Tenant Partitioning** field is set to **y**. If this field is not set to **y**, contact your Avaya representative before you continue with this procedure.
 - Ensure that the **Time of Day Routing** field is set to **n**. If this field is not set to **n**, contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

Setting up partition groups

In this example, your company allows your employees to make local, long distance, and emergency calls. However, you have a telephone in the lobby for visitors. You want to allow visitors to make only local, toll-free, and emergency calls from this telephone.

To restrict the telephone in the lobby, modify the routing for a partition group to enable only specific calls, such as US-based toll-free 1-800 calls. Then assign this partition group to the telephone. In this example, the partition group for the telephone in the lobby is partition group 2.

To enable toll-free 1-800 calls for partition group 2:

- 1. Type **list ars route-chosen 1800n**, where *n* is any 7-digit telephone number to create an example of the dialed string. Press **Enter**.

In this example, type **18002221000**.

The system displays the **ARS Route Chosen Report** screen for partition group 1 ([Figure 361: ARS Route Chosen Report screen](#) on page 1412).

Figure 361: ARS Route Chosen Report screen

list ars route-chosen 18002221000							Page 1 of X
ARS ROUTE CHOSEN REPORT							
Location: 1				Partitioned Group Number: 1			
Dialed String		Total Min Max		Route Pattern	Call Type	Node Number	Location
1800		11 11		p1	fnpa	_____	all

- 2. Note the route pattern for the selected dialed string. In this example, the route pattern for 1800 is **p1**. **p1** indicates that the system uses the **Partition Routing Table** to determine what route pattern to use for each partition.
- If a number appears in the Route Pattern column without the letter **p**, all partitions use the same route pattern. You need to use the **Partition Routing Table** only if you want to use different route patterns for different partition groups.
- 3. After you review this information, press **Cancel**.
- 4. Type **change partition-route-table index n**, where *n* is the route index number. In this example, type **change partition-route-table index 1**. Press **Enter**.

The system displays the **Partition Routing Table** screens ([Figure 362: Partition Routing Table screen](#) on page 1413). In this example, partition group 1 (the PGN 1 column) can make 1-800 calls, and these calls use route pattern 30.

Figure 362: Partition Routing Table screen

change partition-route-table index 1
Page 1 of X

Partition Routing Table								
Routing Patterns								
Route Index	PGN 1	PGN 2	PGN 3	PGN 4	PGN 5	PGN 6	PGN 7	PGN 8
-----	-----	-----	-----	-----	-----	-----	-----	-----
1	30	30	_____	_____	_____	_____	_____	_____
2	_____	_____	_____	_____	_____	_____	_____	_____
3	_____	_____	_____	_____	_____	_____	_____	_____
4	_____	_____	_____	_____	_____	_____	_____	_____
5	_____	_____	_____	_____	_____	_____	_____	_____
6	_____	_____	_____	_____	_____	_____	_____	_____
7	_____	_____	_____	_____	_____	_____	_____	_____
8	_____	_____	_____	_____	_____	_____	_____	_____
9	_____	_____	_____	_____	_____	_____	_____	_____
10	_____	_____	_____	_____	_____	_____	_____	_____
11	_____	_____	_____	_____	_____	_____	_____	_____
12	_____	_____	_____	_____	_____	_____	_____	_____
13	_____	_____	_____	_____	_____	_____	_____	_____
14	_____	_____	_____	_____	_____	_____	_____	_____
15	_____	_____	_____	_____	_____	_____	_____	_____

5. In the PGN 2 column that corresponds to Route Index 1, type the same number as in the PGN 1 column. In this example, type **30**.

This entry tells the system to use route pattern 30 for partition group 2, and allow partition group 2 members to make calls to 1-800 numbers.

6. Press **Enter** to save your changes.

Assigning a telephone to a partition group

Assigning a telephone extension to a partition group is a two-step process. First, assign the partition group to a COR. Then assign that COR to the extension.

To assign a Class of Restriction (COR) to partition group 2:

1. Type **list cor**. Press **Enter**.

The system displays the **Class of Restriction Information** screen ([Figure 363: Class of Restriction Information screen](#) on page 1414).

Figure 363: Class of Restriction Information screen

list cor		Page 1 of 7
	CLASS OF RESTRICTION INFORMATION	
	COR	COR Description
	0	
	1	
	2	
	3	
	4	
	5	
	6	
	7	
	8	
	9	
	10	Supervisor observer
	11	
	12	
	13	
	14	

2. Choose a COR that has not been used.
In this example, use COR number **3**.
3. After you review this information, press **Cancel**.
4. Type **change cor x**, where **x** is the COR number that you just chose. In this example, type **change cor 3**. Press **Enter**.

The system displays the **Class of Restriction** screen ([Figure 364: Class of Restriction screen](#) on page 1415).

Figure 364: Class of Restriction screen

change cor 3	Page 1 of 4
CLASS OF RESTRICTION	
COR Number: 3	
COR Description: lobby	
FRL: 0	APLT? y
Can Be Service Observed? n	Calling Party Restriction: none
Can Be A Service Observer? y	Called Party Restriction: none
Partitioned Group Number: 2	Forced Entry of Account Codes? n
Priority Queuing? n	Direct Agent Calling? y
Restriction Override: none	Facility Access Trunk Test? n
Restricted Call List? n	Can Change Coverage? n
Access to MCT? y	Fully Restricted Service? n
Group II Category For MFC: 7	Hear VDN of Origin Annc.? n
Send ANI for MFE? n	Add/Remove Agent Skills? y
MF ANI Prefix: _____	Automatic Charge Display? n
Hear System Music on Hold? y	PASTE (Display PBX Data on telephone)? n
	Can Be Picked Up By Directed Call Pickup? n
	Can Use Directed Call Pickup? n
	Group Controlled Restriction: inactive

5. In the **COR Description** field, type a name for this COR.

In this example, the COR name is **lobby**, named for the telephone in the lobby.

6. In the **Partitioned Group Number** field, type the number of the partition group.

In this example, the partition group number is **2**.

7. Press **Enter** to save your changes.

To assign the COR to a telephone extension:

1. Type **change station n**, where **n** is the extension. Press **Enter**.

The system displays the **Station** screen ([Figure 347: Station screen](#) on page 1386).

2. In the **COR** field, type the number of the COR.

In this example, the COR number is **3**.

3. Press **Enter** to save your changes.

Setting up Time of Day Routing

You can use Time of Day Routing to redirect calls to coverage paths according to the time of the day and the day of the week. You must define the coverage paths that you want to use before you define the time of day coverage plan. You can route calls based on the least expensive route according to the time of day and the day of the week that the call is made. You can also deny outgoing long distance calls after business hours to help prevent toll fraud.

Time of Day Routing applies to all AAR or ARS outgoing calls and trunks that the system uses for call forwarding to external numbers.

Prerequisites

You must complete the following actions before you can set up Time of Day Routing:

AAR or ARS must be administered on the system before you can use Time of Day Routing.

- On the **Optional Features** screen:
 - For AAR, ensure that either the **Private Networking** field or the **Uniform Dialing Plan** field is set to **y**. If neither field is set to **y**, contact your Avaya representative before you continue with this procedure.
 - For ARS, ensure that the **ARS** field is set to **y**, and the **Time of Day Routing** field is set to **y**. If both these fields are not set to **y**, your system is not enabled for the Time of Day Routing feature. Contact your Avaya representative before you continue with this procedure.

To view the **Optional Features** screen, type **display system-parameters customer-options**. Press **Enter**.

To display your Time of Day Routing plan:

1. Type **display time-of-day n**, where **n** is the number of the routing plan. In this example, type **display time-of-day 1** to look at your Time of Day Routing plan 1. Press **Enter**.

The system displays the **Time of Day Routing Plan 1** screen ([Figure 365: Time of Day Routing Plan 1 screen](#) on page 1417).

Figure 365: Time of Day Routing Plan 1 screen

display time-of-day 1

Page 1 of 1

TIME OF DAY ROUTING PLAN 1

	Act	PGN	Act	PGN	Act	PGN	Act	PGN	Act	PGN	Act
	Time	#	Time	#	Time	#	Time	#	Time	#	Time
Sun	00:01	1	__:__	—	__:__	—	__:__	—	__:__	—	__:__
Mon	00:01	1	08:__00	2	12:__00	1	13:__00	2	17:__00	1	__:__
Tue	00:01	1	08:__00	2	12:__00	1	13:__00	2	17:__00	1	__:__
Wed	00:01	1	08:__00	2	12:__00	1	13:__00	2	17:__00	1	__:__
Thu	00:01	1	08:__00	2	12:__00	1	13:__00	2	17:__00	1	__:__
Fri	00:01	1	08:__00	2	12:__00	1	13:__00	2	17:__00	1	__:__
Sat	00:01	1	__:__	—	__:__	—	__:__	—	__:__	—	__:__

Note the routing plan that is currently in effect. In this example, this plan is for employees who can make only local calls.

In this example, two partition group numbers (PGN) control Time-of-Day routing:

- PGN 1 begins 1 minute after midnight (00:01) every work day of the week until 8:00 a.m.
- PGN 2 begins at 8:00 a.m. every work day of the week until 12:00 p.m.
- PGN 1 begins at 12:00 p.m. every work day of the week until 1:00 p.m. (13:00).
- PGN 2 begins at 1:00 p.m. (13:00) every work day of the week until 5:00 p.m. (17:00).
- PGN 2 begins at 5:00 p.m. (17:00) every work day of the week until 12:00 a.m.
- PGN 1 is also used all day Saturday and Sunday.

2. After you review this information, press **Cancel**.

To create a new Time-of-Day routing plan for long-distance calls for executives in your company:

1. Type **change time-of-day *n***, where *n* is the number of the routing plan. In this example, type **change time-of-day 2** to create a Time of Day Routing plan 2. Press **Enter**.

The system displays the **Time of Day Routing Plan 2** screen ([Figure 366: Time of Day Routing Plan screen](#) on page 1418).

Figure 366: Time of Day Routing Plan screen

change time-of-day 2

TIME OF DAY ROUTING PLAN ____

Page 1 of 1

	Act Time	PGN #	Act Time	PGN #	Act Time	PGN #	Act Time	PGN #	Act Time	PGN #	Act Time	PGN #
Sun	00:00	1	__:__	-	__:__	-	__:__	-	__:__	-	__:__	-
Mon	00:00	1	__:__	-	__:__	-	__:__	-	__:__	-	__:__	-
Tue	00:00	1	__:__	-	__:__	-	__:__	-	__:__	-	__:__	-
Wed	00:00	1	__:__	-	__:__	-	__:__	-	__:__	-	__:__	-
Thu	00:00	1	__:__	-	__:__	-	__:__	-	__:__	-	__:__	-
Fri	00:00	1	__:__	-	__:__	-	__:__	-	__:__	-	__:__	-
Sat	00:00	1	__:__	-	__:__	-	__:__	-	__:__	-	__:__	-

2. In the first PGN # column, type **1** in each field as shown on the **Time of Day Routing Plan 1** screen.

In this example, PGN 1 is the partition group that the system uses for after hours and the lunch hour.

3. In the remaining PGN # columns, type **3** in all fields.

In our example, PGN 3 is the partition group that the system uses to route long distance calls during business hours.

4. Press **Enter** to save your changes.

Now assign your new Time of Day Routing Plan 2 to the COR that is assigned to your executives.

In this example, the following conditions are true:

- Jim is the user at extension 1234.
- Extension 1234 is assigned a COR of 2.
- COR 2 is assigned a Time of Day Plan Number of 1.
- The Time-of-Day Routing Plan 1 is administered as shown in [Figure 365: Time of Day Routing Plan 1 screen](#) on page 1417.

When Jim comes into work on Monday morning at 8:30 and dials the ARS access code followed by the number of the person he is calling, the system checks the Time of Day Plan number assigned to the COR for Jim.

Because Jim has been assigned COR 2 with Time of Day Plan Number 1, the system uses Time of Day Routing Plan 1 to route the call.

According to the Time of Day Routing Plan 1, the system routes calls that are made between 8:00 a.m. and 11:59 a.m. according to the route pattern that is set up in the PGN 1 column.

If Jim makes a call between 12:00 p.m. and 1:00 p.m. on Monday, the Time of Day Routing Plan 1 is used again. However, this time the call is routed according to PGN 2.

Reports for World Class Routing

The following reports provide information about the World Class Routing feature:

- None

Considerations for World Class Routing

This section provides information about how the World Class Routing feature behaves in certain circumstances. Use this information to ensure that you receive the maximum benefits of the World Class Routing feature under all conditions:

- None

Interactions for World Class Routing

This section provides information about how the World Class Routing feature interact with other features on the system. Use this information to ensure that you receive the maximum benefits World Class Routing in any feature configuration:

- Bridged Call Appearance

If a Bridged Call Appearance is used for an Automatic Alternate Routing (AAR) or an Automatic Route Selection (ARS) call, the system uses the partition group number (PGN) of the bridged extension instead of the PGN of the caller.

- Call Forwarding

The system uses the PGN of the COR of the forwarding party to select the table to look up the route pattern.

- Distributed Communications System (DCS)

When the system routes a call over DCS, the far-end switch uses the PGN of the incoming trunk to route the call.

- Remote Access

When a remote-access user dials a barrier code or an authorization code plus an ARS feature access code (FAC), the COR of the barrier code or authorization code determines the PGN.

World Class Routing

- **Straightforward Outward Completion and Through Dialing**

If the attendant assists or extends a call and dials an ARS FAC, the COR of the attendant determines the PGN if the individual extension is assigned. If the individual extension is unassigned, the COR that is set on the console parameter determines the PGN.

- **ARS/AAR Dialing Without FAC interactions**

The following features require entries in the **ARS/AAR Internal Call Prefix** and **Total Length** fields on the **Dial Plan Parameters** screen, if you intend to dial a "shortcut" ARS/AAR number after the applicable FAC or button push:

- Add/remove skill
- Attendant activation of call forwarding
- Call forwarding activation
- CDR reports
- Changeable COR via FAC
- Coverage Message Retrieval
- EC500 feature activation
- Extended call forwarding
- Leave Word Calling activation/cancellation
- Station Security Code
- TTI
- User/Group Controlled Restriction
- Whisper Paging

Index

Symbols

#	695, 791
*	695, 791, 1105, 1107

Numerical

2420 DCP telephone	255, 1103
4620 IP telephone	255, 1103

A

AAR, see Automatic Alternate Routing (AAR)	
Abbreviated Dialing (AD)	65
administering	67
adding lists	68
assigning telephones for group lists	69
prerequisites	67
commands	
add abbreviated-dialing group	68
change station	69
display system-parameters customer-options	67
considerations	71
description	66
enhanced lists	67
group lists	66
personal lists	66
system lists	66
end-user procedures	70
interactions	71
screens	68
Abbreviated Dialing List	68
Optional Features	67
Station	69
troubleshooting	72
ACA, see Automatic Circuit Assurance (ACA)	
ACB, see Automatic Callback (ACB)	
Access Security Gateway (ASG)	75
administering	75
disabling	78
modifying for lost key	79
monitoring History Log	80
prerequisites	76
restarting	79
setting up	77

Access Security Gateway (ASG), (continued)

commands	
change login	77, 78, 79
change system-parameters customer-options	76
change system-parameters security	78
list asg-history	80
remove login	79
description	75
interactions	82
screens	76
Access Security Gateway Session History	80
Login Administration	77
Optional Features	76
Security-Related System Parameters	78
AD, see Abbreviated Dialing (AD)	
Administered Connections	83
administering	86
setting up	87
commands	
change administered-connection	85
display status-administered connection	85
set time	90
description	83
interactions	89
screens	87
Access Endpoint	87
Administered Connection	87
Attendant Console	87
Class of Restriction	87
Class of Service	87
Data Modules	87
Dial Plan Record	87
DS1 Circuit Pack	87
Station	87
Trunk Group	87
Administrable Language Displays	91
administering	92
entering translations for user-defined language	94
prerequisites	92
setting display language	93
Unicode display	95
commands	
change attendant	93, 94, 96
change display-messages	95
description	91
screens	93
Attendant Console	94
System Parameters Country-Options	92
troubleshooting	97

Index

Administration Change Notification	99	Announcements, administering, (continued)	
administering	99	managing VAL announcements using FTP	143
initiating	100	prerequisites	139
commands		recording announcements	134
notify history	100	recording VAL announcements	138
description	99	restoring announcements	136
screens	100	saving announcements	136
Administration Changes	100	setting up continuous-play announcements	138
Administration Without Hardware (AWOH).	103	using SAT to delete all VAL announcements	142
administering	104	using SAT to delete individual VAL announcements	142
assigning for hunt-group queue	105	barging-in on announcements	126
assigning to attendant console	107	commands	
assigning to data module	108	add data-module	132
assigning to telephone	107	busyout board board-location	142
commands		change announcements . 133 , 137 , 138 , 146 , 147	
change attendant	107	copy announcements	136
change data-module	108	delete filename.wav	146
change hunt-group	105	disable filesystem board board-location	148
change station	107	enable filesystem board	144
description	103	erase announcements	138
association and disassociation	104	erase announcements board board-location	143
disassociated telephones	104	ftp val-ip-address	145
duplicate telephones	103	get filename.wav	148
Personal Station Access (PSA)	104	list directory board	142 , 143
phantom extensions	104	list integrated-annc-boards	131 , 143
physical characteristics of telephone	103	put filename.wav	147 , 148
Terminal Translation Initialization (TTI)	104	remove file board board-location	142
user activated features	103	restore announcements	136
interactions	110	save announcements	136
screens	105	considerations	150
Attendant Console	108	description	123
Data Module	109	announcement sources for G700 Media Gateway	127
Hunt Group	106	compression rates	128
Station	107	integrated announcements	125
AFRL, see Facility Restriction Levels, Alternate Facility Restriction Levels (AFRL)		interactions	150
Alphanumeric Dialing	119	Interactive Voice Response (IVR)	141
administering	119	local announcements on G700 Media Gateway	125
considerations	120	reports	149
description	119	screens	130
screens	120	Announcements/Audio Sources	133
ANI, see Automatic Number Identification (ANI)		Data Modules	132
Announcements	123	Integrated Announcements	132
administering	129	troubleshooting	151
adding announcement data modules	132	VAL Manager	125
adding announcement extensions	133	Virtual Voice Announcements over LAN (Virtual VAL)	125
converting announcement files to VAL format	140	Voice Announcements over LAN (VAL)	124
converting for Interactive Voice Response (IVR)	141	Answer Detection, see Call Detail Recording (CDR)	
copying announcements	136	ARS, see Automatic Route Selection (ARS)	
deleting and erasing announcements	137	ASG, see Access Security Gateway (ASG)	
deleting VAL announcements	142	Attendant Auto Start and Don't Split	153
displaying all announcements	131	administering	154
file format requirements	139	assigning Don't Split button	155
		prerequisites	154

Attendant Auto Start and Don't Split, (continued)	
commands	
change attendant	155
considerations	156
description	153
interactions	156
screens	154
Attendant Console	155
Attendant Auto-Manual Splitting	157
administering	157
description	157
screens	158
Attendant Console	158
Attendant Backup	159
administering	160
assigning console permissions to backup	
telephones.	164
configuring your system	162
defining Class of Service console permissions.	163
prerequisites	161
setting up telephones	162
commands	
change console-parameters	162
change cos	163
change station.	164
considerations	167
description	159
end-user procedures	166
interactions.	168
screens	161
Class of Service	161 , 164
Console Parameters	162 , 163
Feature Access Code (FAC)	161
Station	165
Attendant Call Waiting	169
administering	170
modifying timed intervals.	173
prerequisites	170
setting up single-line telephones	171 , 172
commands	
change console-parameters	173
change station.	171
change system-parameters features	172
considerations	174
description	169
interactions.	175
screens	170
Feature-Related System Parameters	172
Station	171
Attendant Calling of Inward Restricted Stations	177
administering	177
prerequisites	178
setting up Class of Restriction override	178
description	177
screens	178
Class of Restriction	178
Attendant Conference.	181
administering	181
prerequisites	181
setting up	182
commands	
change system-parameters features.	182
considerations	184
description	181
interactions	184
screens	182
Feature-Related System-Parameters	183
Attendant Control of Trunk Group Access	187
administering	188
assigning access buttons	190
prerequisites	188
setting trunk group threshold	189
commands	
change attendant.	190
change trunk-group	189
description	187
interactions	192
screens	189
Attendant Console	191
Trunk Group	190
Attendant Direct Extension Selection (DXS)	193
administering	195
prerequisites	195
considerations	196
description	193
Enhanced DXS Tracking	194
Group Display button	194
Standard DXS Tracking.	194
interactions	196
screens	195
Attendant Console	195
Attendant Direct Trunk Group Selection	197
administering	198
prerequisites	198
considerations	199
description	197
interactions	199
screens	198
Attendant Console	198
Attendant Intrusion	201
administering	201
assigning an intrusion button	202
prerequisites	202
commands	
change attendant.	202
description	201
interactions	204
screens	202
Attendant Console	203

Index

Attendant Lockout - Privacy.	205	Attendant Split Swap, (continued)	
administering	205	description	225
activating or deactivating	206	screens	226
prerequisites	205	Attendant Console	226
commands		Attendant Timers	229
change console-parameters	206	administering	230
description	205	prerequisites	230
interactions.	208	setting up	231
screens	206	commands	
Console Parameters	206	change console-parameters	231
Attendant Override of Diversion Features	209	description	229
administering	209	interactions	233
prerequisites	209	screens	231
description	209	Console Parameters	231
screens	210	Attendant Trunk Identification	235
Attendant Console	210	administering	235
Attendant Priority Queue	211	prerequisites	235
administering	213	description	235
assigning Call Type button	216	screens	236
prerequisites	214	Attendant Console	236
setting category priorities.	214	Station	236
setting number of calls in queue	215	Attendant Vectoring.	237
commands		administering	237
change console-parameters	214	assigning VDN extension to console.	240
change display-messages		assigning VDN extension to tenant	241
miscellaneous-features	217	creating VDN extension.	239
change system-parameters features	215	prerequisites	238
considerations	218	commands	
description	211	change console-parameters	240
interactions.	218	change tenant	241
priority by call category	211	change vdn	239
priority by call type	213	change vector	238
screens	214	display system-parameters customer-options	238
Console Parameters	215	considerations	243
Feature-Related System Parameters	216	description	237
Language Translations.	217	interactions	243
Attendant Recall	219	screens	239
administering	219	Call Vector.	238
description	219	Console Parameters	241
end-user procedures	220	Optional Features	238
interactions.	221	Tenant	242
screens	220	Vector Directory Number	240
Attendant Console	220	Audible Message Waiting	245
Attendant Serial Calling	223	administering	246
administering	223	for user	247
prerequisites	223	prerequisites	246
description	223	commands	
screens	224	change station	247
Attendant Console	224	display system-parameters customer-options	246
Attendant Split Swap	225	considerations	248
administering	225	description	245
assigning split-swap button.	226	screens	246
prerequisites	225	Optional Features	246
commands		Station	247
change attendant	226		

AUDIX One-Step Recording	249	Authorization Codes, (continued)	
administering	251	Remote Access Numbers (RAN)	274
assigning feature button to telephone	256	screens	270
assigning parameters	252	Authorization Code - COR Mapping	272 , 273
changing characteristics of zip tone	257	Feature-Related System Parameters	271
prerequisites	251	Optional Features	269
translating button label to user-defined language	255	Automated Attendant	277
translating feature display to user-defined language	254	administering	277
commands		announcements	280
change display-messages button-labels	255	assigning caller information button on attendant consoles	282
change display-messages view-buttons	254	assigning caller information button on multiappearance telephones	281
change station	256	call vectors	281
change system-parameters country-options	258	controlling hunt groups by vector	280
change system-parameters features	252	prerequisites	278
change tone-generation	257	setting the prompting timeout	279
display system-parameters customer-options	251 , 742	vector directory number (VDN)	280
considerations	261	commands	
description	249	change attendant	282
feature button	249	change hunt-group	280
language options	250	change station	281
periodic alerting tone	250	change system-parameters features	279
ready indication tone	250	display system-parameters customer-options	278
recording delay timer	251	considerations	283
end-user procedures	260	description	277
recording conversation	260	interactions	284
hunt group extension number	249	screens	278
initiator	250 , 253 , 260	Announcements/Audio Sources	278
interactions	262	Attendant Console	283
screens	252	Feature-Related System Parameters	279
Feature-Related System Parameters	253	Hunt Group	281
Language Translations	254 , 255	Optional Features	278
Optional Features	251 , 742	Station	282
Station	256	Vector Directory Number	278
System Parameters Country-Options	259	Automatic Alternate Routing (AAR)	1322 , 1377
Tone Generation Customized Tones	257	Automatic Callback (ACB)	285
troubleshooting	265	administering	287
zip tone	250 , 257	assigning Feature Access Code (FAC)	288
Authorization Codes	267	assigning feature button	291
administering	269	setting no-answer timeout interval	290
creating with specific COR	273	setting queue length for Ringback Queing	292
prerequisites	269	commands	
setting up	270	add station	291
commands		add trunk-group	292
change authorization-code	272 , 273	change feature-access-codes	288
change system-parameters features	270	change station	291
display system-parameters customer-options	269	change system-parameters features	290
considerations	274	change trunk-group	292
description	267	considerations	293
AAR and ARS calls	268	description	285
length of codes	267	Analog Busy Automatic Callback Without Flash	287
using codes	268	Ringback Queing	286
interactions	275	interactions	294
Listed Directory Numbers (LDN)	274		

Index

Automatic Callback (ACB), (continued)

screens	288
Feature Access Code (FAC)	289
Feature-Related System Parameters	290
Station	291
Trunk Group	292
Automatic Circuit Assurance (ACA)	297
administering	298
description	297
audit trail	298
referral calls	297
interactions	300
reports	299
screens	298
Attendant Console	299
Feature-Related System Parameters	298
Station	299
Trunk Features	298

Automatic Exclusion, see Privacy

Automatic Number Identification (ANI)	303
administering	304
display incoming ANI calling party information	306
set up ANI on multifrequency trunk	305
set up ANI request button	310
set up outgoing ANI	308
commands	
change aar analysis	309
change aar digit-conversion	310
change ars analysis	309
change ars digit-conversion	310
change multifrequency-signaling	305
change system-parameters features	308
change trunk group	307
description	303
Incoming Automatic Number Identification	303
Outgoing Automatic Number Identification	304
interactions	312
screens	305
AAR Digit Analysis Table	309
AAR Digit Conversion Table	310
ARS Digit Analysis Table	309
ARS Digit Conversion Table	310
Feature-Related System Parameters	308
Multifrequency-Signaling-Related Parameters	305 , 306
Station	311
Trunk Group	307 , 308

Automatic Route Selection (ARS) [1322](#), [1377](#)

Avaya support Web site [63](#)

AWOH, see Administration Without Hardware (AWOH)

B

Bridged Call Appearance	313
administering	315
assigning ringing to each appearance	318
creating on multiappearance telephone	317
creating on single-line telephone	316
prerequisites	315
commands	
change coverage path	315
change station	316 , 317
display system-parameters features	315
considerations	320
description	313
multiappearance telephone	313
sample uses	314
single-line telephone	313
interactions	321
screens	316
Coverage Path	315
Feature-Related System Parameters	315
Station	317 - 319
Bulletin Board	331
administering	331
changing bulletin board information	333
setting user permissions	332
commands	
change bulletin-board	333
change permissions	332
considerations	337
description	331
capacity	331
high priority messages	331
screens	
Bulletin Board	334
Command Permission Categories	333
Busy Indicator	339
description	339
Busy Tone Disconnect	339
interactions	340
Busy Verification	341
administering	343
prerequisites	343
using Busy Verification	344
commands	
change station	344
considerations	345
description	341
interactions	345
screens	344
Station	344

C

Call Charge Information	347	Call Coverage, administering, (continued)	
administering	349	defining calls redirected off-network	396
administering PPM for non-ISDN trunks	364	defining coverage redirected off-network calls	396
AOC for ISDN trunks	361	prerequisites	387 , 390 , 393 , 396 , 399
assigning call charge display button for attendant	359	commands	
assigning call charge display button for user	357	add coverage answer-group	401
assigning COR	353	add coverage path	390
charge display	355	add coverage time-of-day	399
Country protocol codes	368	change coverage path	398
defining CDR	350	change coverage remote	397
frequency of call charge displays	351	change feature-access-codes	387
PPM for DS1 circuit packs	366	change station	393 , 396 , 400
prerequisites	350	change trunk-group	401
translating call charge text	352	display coverage sender group	391
commands		display system-parameters call coverage/call forwarding	390
add trunk-group	361	display system-parameters customer-options	396
change attendant	359	considerations	403
change cor	353	Coverage Subsequent Redirection interval	375
change display-messages		description	375
miscellaneous-features	352	announcement in coverage path	382
change station	357	answer groups	382
change system-parameters cdr	350	caller response interval	383
change system-parameters features	351	changeable coverage paths	380
change trunk-group	355 , 364	conditions that override	385
considerations	370	Consult	384
description	347	coverage criteria	381
Advice of Charge (AOC)	347	coverage path	376
charge displays	348	Extended User Administration of Redirected Calls	380
Periodic Pulse Metering (PPM)	347	features that override	385
end-user procedures	369	hunt group in coverage path	383
interactions	371	ISDN calls redirected off-net	379
screens	354	multiple coverage paths	376
Attendant Console	360	notifying users upon redirection	383
CDR System Parameters	350	off-network coverage	379
Class of Restriction	353	redirection	380
DS1 Circuit Pack	367	subsequent redirection interval	383
Feature-Related System Parameters	351	Time-of-Day Coverage	377
ISDN Trunk Group	361 , 364	VDN in Coverage Path (VICP)	382
Language Translations	352	Directed Call Pickup	386
Station	358 , 359	interactions	403
Trunk Group	356	remote code numbers	397
viewing	349	reports	402
Call Coverage	375	screens	388
administering	387	Coverage Answer Group	401
assigning coverage paths	393 , 396	Coverage Path	390 , 398
assigning internal alerting	401	Feature Access Code (FAC)	388
assigning telephone numbers for off-network coverage	397	Optional Features	396
assigning time-of-day coverage	399	Station	393 , 400
coverage path for redirected off-network calls	398	System-Parameters Call Coverage/Call Forwarding	390
creating coverage answer groups	401	Time of Day Coverage Table	399
creating coverage paths	390	Trunk Group	402
		Switch Communication Interface (SCI) link	382
		troubleshooting	407

Index

Call Detail Recording (CDR)	409
administering	470
assigning FEAC	473
for all calls	473
to COR	474
to users	475
assigning privacy digits for user	477
for data module	492
for paging ports	503
for trunk group.	489
identifying Inter-Exchange Carrier	501
intra-switch CDR	504
port field values	498
prerequisites	471 , 473 , 477
system parameters	479
commands	
change cor	474
change data-module	492
change feature-access-codes	471
change intra-switch-cdr	504
change ixc-codes	501
change loudspeaker paging	503
change station.	475 , 477
change system-parameters cdr	473 , 477 , 479
change trunk-group	475 , 489
display system-parameters customer-options.	472 , 473
considerations	505
data record formats	
59 character.	427
enhanced expanded	441
enhanced LSU	438
enhanced printer	432
enhanced TELESEER	426
enhanced unformatted	446
expanded	438
int process	448
int-direct	449
int-ISDN	451
ISDN LSU.	437
ISDN printer.	430
ISDN-TELESEER	425
LSU	436
LSU, LSU-expand, unformatted, and customized	422
LSU-expand.	434
printer	428
printer and expanded	422
TELESEER	424
TELESEER 59 character, int-proc, int-direct, and int-ISDN.	423
unformatted	444

Call Detail Recording (CDR), (continued)	
description	409
Account Code Dialing	411
Answer Detection	410
Answer Supervision by Timeout.	411
attendant call transfer on public network trunk	418
attendant transfer of incoming trunk call	418
call classification	410
call splitting	412
CDR output	420
CDR Privacy.	420
CDR record formats	421
customized call record formats	423
date record formats.	421
field descriptions	453
Forced Entry of Account Codes (FEAC)	411
incoming trunk call splitting (ITCS)	413
intraswitch CDR	419
ITCS conference call on same server	414
ITCS transfer on same server	414
ITCS transfer to outgoing trunk	415
ITCS, OTCS, and attendant call recording	417
monitor call detail records.	410
Network Answer Supervision	410
OTCS call transfer	417
OTCS conference call	416
outgoing trunk call splitting (OTCS)	415
standard call record formats	423
end-user procedures	505
examples	413 , 416 , 417
attendant call transfer on public network trunk	418
attendant incoming trunk call transfer	417
ITCS and call transfer on same server	414
ITCS and call transfer to public network	415
ITCS and conference call	413
OTCS and call transfer to public network	416
OTCS and conference call on public network.	416
interactions	506
screens	472
CDR System Parameters	473 , 477 , 479 , 487
Class of Restriction.	474
Data Module	492
Feature Access Code (FAC)	471
Inter-Exchange Carrier Codes.	501
Intra-Switch CDR.	504
Loudspeaker Paging	503
Optional Features	472 , 473
Station	475 , 478
Trunk Group	476 , 489

Call Forwarding	519
administering	522
assigning All Calls	525
assigning Busy/Don't Answer	526
assigning Off-Net	528
disabling Override	531
enabling Override	530
prerequisites	523 , 526 , 528
removing Busy/Don't Answer	528
removing Off-Net	530
viewing active users	525
commands	
change station.	525-528 , 530
change system-parameters	
coverage-forwarding	523 , 527-529 , 530 , 531
display station	525
display system-parameters customer-options	528
list call-forwarding	525
save translation	534
considerations	534
Coverage of Calls Redirected Off-Net (CCRON)	521
description	519
attendants	520
Busy/Don't Answer	520
Call Forwarding All Calls	519
Call Forwarding Off-Net	521
Call Forwarding Override	521
coverage for unanswered forwarded calls	522
Feature Access Code (FAC)	520
security	522
user notification	522
end-user procedures	532
interactions.	535
off-network timer	521
screens	524
Optional Features	528
Station	526
System Parameters Call Coverage/Call Forwarding	524 , 527 , 529-531
V1, V2, or V3 system	525
Call Offer, see Attendant Intrusion	
Call Park	539
administering	540
assigning call park button to multiple-call appearance telephone	545
prerequisites	540
commands	
change console-parameters	544
change feature-access-codes	540
change station.	545
change system-parameters features	542
considerations	548
description	539
end-user procedures	546
interactions.	549

Call Park, (continued)	
screens	545
Console-Parameters	544
Feature Access Code (FAC)	541
Feature-Related System Parameters	542 , 543
Station	546
Call Pickup.	551
administering	553
assigning call pickup button	554
assigning Directed Call Pickup	560
assigning extended pickup group to another extended pickup group	566
assigning pickup group to extended pickup group	563
assigning user to pickup group	557
changing call pickup button	556
prerequisites	554 , 560 , 563 , 566
removing Directed Call Pickup	562
removing extended pickup group from another extended pickup group	568
removing pickup group from extended pickup group	565
removing user from pickup group	559
call appearance selection	552
call distribution algorithms	552
commands	
add pickup-group.	557
change cor.	561
change extended-pickup-group	565 , 568
change feature-access-codes	554 , 564 , 567
change pickup-group	558 , 559
change station	555 , 556 , 557 , 562
change system-parameters features.	560 , 563 , 566
considerations	570
description	551
call ringing	551
Directed Call Pickup	552
Extended Group Pickup	553
status lamp	551
end-user procedures	569
interactions	570
screens	554
Class of Restriction.	561
Extended Pickup Group	565 , 568
Feature Access Code (FAC)	555 , 564 , 567
Feature-Related System Parameters	560 , 563 , 566
Pickup Group	558 , 559
Station	556 , 562
Call Waiting Termination	573
administering	574
assigning call waiting termination	576
prerequisites	574
commands	
change station	576
change system-parameters features.	574
considerations	578

Index

Call Waiting Termination, (continued)	
description	573
Call Waiting tones	573
interactions	578
screens	575
Feature-Related System Parameters	575
Station	576
Call Waiting, see Call Waiting Termination	
Call-by-Call Service Selection	579
administering	583
administering network facilities	590
prerequisites	584
setting up a trunk group for CBC	585
Call Detail Recording	583
commands	
add trunk-group	585
change isdn network-facilities	590
change route-pattern	589
change trunk-group	585
display system-parameters customer-options	584
description	579
incoming call-handling treatment	582
interactions	592
ISDN messages and information elements for usage allocation	581
screens	584
CBC Trunk Group Usage Allocation	586
CBC Trunk Group Usage Allocation Plan Assignment Schedule	587
Incoming Call Handling Treatment	588
ISDN Trunk Group	585
Network Facilities	590
Optional Features	584
Route Pattern	589
Usage Allocation Plans	581
Caller ID	593
administering	594
displaying Caller ID information	595
prerequisites	595
commands	
add trunk group	595
change trunk group	595
display system-parameters customer-options	595
considerations	597
description	593
on analog trunks	594
on digital trunks	594
interactions	598
screens	595
Trunk Group	596
Trunk Group Administrable Timers	597
Trunk Group Trunk Features	596
CAS, see Centralized Attendant Service (CAS)	
CDR, see Call Detail Recording (CDR)	
Centralized Attendant Service (CAS)	601
administering	603
prerequisites	603
commands	
display system-parameters customer-options	603
considerations	604
description	601
interactions	605
listed directory number (LDN)	601
release link trunks (RLT)	601
screens	604
Optional Features	603
Class of Restriction (COR)	609
administering	614
allowing users to change	619
displaying administered CORs	615
prerequisites	619
setting up	616
commands	
change cor	616
change feature-access-codes	619
change system-parameters features	620
display system-parameters customer-options	619
list cor	615
description	609
called party restrictions	612
calling party restrictions	611
COR-to-COR restrictions	613
fully restricted service	613
strategy for assigning	610
end-user procedures	621
Facility Restriction Level (FRL)	610
interactions	622
screens	614
Class of Restriction	611 , 616 - 618
Class of Restriction Information	615
Feature Access Code (FAC)	620
Feature-Related System Parameters	621
Optional Features	619
Trunk Group	611
Class of Service (COS)	625
administering	625
assigning a COS	630
defining COS for your system	626
descriptions of the COS features	627
commands	
change cos	626
considerations	630
description	625
interactions	631
screens	626
Class of Service	627
Code Calling Access, see Loudspeaker Paging, chime paging	
commands, see commands <i>under individual feature names</i>	

Conference	633
administering	636
assigning feature buttons	641
assigning feature buttons to attendant	643
assigning feature buttons to user	642
assigning toggle-mute feature button	640
prerequisites	636 , 641
commands	
change attendant	643
change station.	640 , 642
change system-parameters features	636
display system-parameters customer-options	641
considerations	646
description	633
No Dial Tone Conferencing.	634
No Hold Conference	634
Selective Conference Party Display, Drop, and Mute	635
Transfer Toggle/Swap	634
end-user procedures	644
displaying participants on call	645
interactions.	646
number of participants on a call	633
screens	639
Attendant Console	644
Class of Restriction	641
Feature-Related System Parameters	637 , 638
Optional Features	641
Station	640 , 643
considerations, <i>see</i> considerations <i>under individual feature names</i> ; <i>see also</i> interactions <i>under individual feature names</i>	
COR, <i>see</i> Class of Restriction (COR)	
Co-Resident DEFINITY LAN Gateway (DLG)	649
administering	650
prerequisites	650
commands	
add data-module	651
add ip-interface	650 , 651
change node-names ip.	650
display ip-interfaces	650 , 651
display node-names ip	650
display system-parameters customer-options.	650 , 651
list data-modules	651
description	649
screens	651
COS, <i>see</i> Class of Service (COS)	
Crisis Alert, <i>see</i> Enhanced 911 (E911)	

D

Data Call Setup	655
administering	659
assigning data extension feature button	673
defining data module	661
prerequisites	659
specifying port location	673
commands	
add data-module	661
change feature-access-codes	659
change modem-pool	673
change station	673
considerations	677
description	655
call progress messages.	657
cause code	656
reason code	656
special characters	655
end-user procedures	674
interactions	678
screens.	661
Data Module	662
Feature Access Code (FAC)	660
Modem Pool Group.	673
Station	674
Data Privacy, <i>see</i> Privacy	
Data Restriction, <i>see</i> Privacy	
Default Dialing	681
administering	681
description	681
screens.	682
Demand Print	683
administering	683
description	683
screens.	683
Dial Access to Attendant	685
administering	685
changing attendant access code	686
commands	
change dialplan analysis	686
description	685
interactions	688
screens.	686
Dial Plan Analysis Table	687
Dial Plan	689
administering	696
adding extension ranges	702
displaying your dial plan	696 , 698
commands	
change dialplan analysis	698 , 702
display system-parameters customer-options	702
considerations	703

Index

Dial Plan, (continued)	
description	689
Dial Plan Analysis Table	694
Dial Plan Parameters	695
Multi-Location Dial Plan	696
other options	696
interactions.	704
screens	697
Dial Plan Analysis Table	694 , 698
Dial Plan Parameters	695
Feature Related System Parameters	703
Optional Features	702
Trunk Group	695
Distinctive Ringing	707
administering	707
defining	708
commands	
change system-parameters features	708
considerations	711
description	707
Personalized Ringing	707
interactions.	711
screens	708
Feature-Related System Parameters	709 , 710
DLG, see Co-Resident DEFINITY LAN Gateway (DLG)	
Dual Homing, see Multiple Level Precedence and Preemption (MLPP)	
DXS, see Attendant Direct Extension Selection (DXS)	

E

E911, see Enhanced 911	
Emergency Calls from Unnamed IP Endpoints	737
administering	741
prerequisites	742
description	737
interactions.	746
reports	744
screens	743
End Office Access Line Hunting, see Multiple Level Precedence and Preemption (MLPP)	
endpoints, see telephones	
end-user procedures, see end-user procedures <i>under individual feature names</i>	
Enhanced 911 (E911)	713
administering	720
prerequisites	721 , 723 , 725 , 727
setting up CAMA numbering	731
setting up Crisis Alert to attendant or display telephone	722
setting up Crisis Alert to notify digital pager	727
setting up emergency extension forwarding	729
Automatic Location Information (ALI) database	714
Automatic Number Identification (ANI)	734
Avaya IP Softphone.	714

Enhanced 911 (E911), (continued)	
Caller Emergency Service Identification (CESID) number	714
Calling Party Number (CPN)	713
Centralized Automatic Message Accounting (CAMA) trunks.	713
commands	
change ars analysis location	715
change attendant.	724
change cama-numbering	731
change station	723 , 725 , 726
change system-parameters crisis-alert.	726 , 728
change system-parameters features.	730
display system-parameters customer-options	723
list emergency	720
considerations	733
Crisis Alert	719
description	713
Location Specific Routing	715
media gateways in different locations	715
Emergency Location Information Number (ELIN)	717
Integrated Services Digital Network (ISDN) trunks	713
interactions	734
public safety answering point (PSAP).	713
reports	733
screens	721
ARS Digit Analysis Table	723
Attendant Console	725 , 726
CAMA Numbering - E911 Format	732
Class of Restriction.	721
Crisis Alert System Parameters	727 , 728
Feature Access Code (FAC)	721
Feature-Related System Parameters	730
Optional Features	723
Route Pattern	721
Station	714 , 725
Universal Emergency Number (UEN).	713
wired IP telephones	717
ETA, see Uniform Dial Plan (UDP), Extended Trunk Access (ETA)	
Expanded Meet-me Conferencing	747
administering	750
prerequisites	750
description	747
end-user procedures	755
interactions	756
screens.	751
Extended User Administration of Redirected Calls	757
administering	
assigning a station security code to a user	765
prerequisites.	760
commands	
add telecommuting-access	760
change feature-access-codes	761
change station	765
display system-parameters customer-options	760

Extended User Administration of Redirected Calls, (continued)	
description	757
COR	759
COS	758
DCS	758
disabling the telecommuting access extension.	758
off-site locations	759
end-user procedures	766
interactions	769
screens	765
Class of Restriction	764
Class of Service	763
Feature Access Code (FAC)	762
Station	766
Telecommuting Access	760

F

FAC, see Feature Access Codes (FAC)	
Facility and Non-Facility Associated Signaling	771
administering	773
implementing FAS and NFAS	775
reviewing guidelines for coordinating FAS and NFAS	774
description	771
D-Channel backup activation	773
D-Channel backup with NFAS	771
screens	774
DS1 Circuit Pack	776
Interface Links	774
ISDN-PRI Trunk Group	778
Processor Channel	774
Signaling Group	777
Facility Restriction Levels	781
administering	784
considerations	786
description	781
AAR and ARS calls	781
Alternate Facility Restriction Levels (AFRL)	783
alt-frl feature button	783
authorization codes	783
end-user procedures	785
interactions	786
screens	784
toll fraud prevention	783
Traveling Class Marks (TCM)	781
Facility Test Calls	787
administering	788
considerations	789
description	787
interactions	789
screens	788
Fax, Modem, Clear Channel over IP	59
FEAC, see Call Detail Recording (CDR), Forced Entry of Account Codes (FEAC)	

Feature Access Codes (FAC)	791
administering	792
assigning	793
changing or deleting	794
prerequisites	792
analog rotary dial telephones	791
commands	
change feature-access-codes	793 , 794
description	791
* and #	791
access codes	791
activate and deactivate codes	791
lock and unlock codes	791
send and cancel codes	791
screens	792
Feature Access Code (FAC)	793 , 794
troubleshooting	796
FRL, see Facility Restriction Levels	

G

Group Paging	797
administering	798
changing paging group	800
creating paging group	798
viewing all paging groups	800
commands	
add group-page	798
change group-page	800
list group-page	800
description	797
interactions	801
screens	798
Group Paging Using Speakerphone	799
Speakerphone Page Groups	800
troubleshooting	803

H

H.248 Gateways	59
H0 channels, see Wideband Switching, H0 channels	
H11 channels, see Wideband Switching, H11 channels	
H12 channels, see Wideband Switching, H12 channels	
Hold	805
administering	806
assigning FAC for CAS remote hold and answer	808
enabling Automatic Hold	807
prerequisites	806
commands	
change feature-access-codes	808
change system-parameters features	807
considerations	810

Index

- Hold, (continued)
 - description [805](#)
 - Automatic Hold [806](#)
 - Hard Hold [805](#)
 - multiappearance telephones [805](#)
 - single-line telephones [805](#)
 - Soft Hold [805](#)
 - interactions. [810](#)
 - screens [807](#)
 - Feature Access Code (FAC) [809](#)
 - Feature-Related System Parameters [808](#)
 - Hot Line Service [813](#)
 - administering [814](#)
 - considerations [815](#)
 - description [813](#)
 - interactions. [815](#)
 - screens [814](#)
 - Hunt Groups. [817](#)
 - administering [824](#)
 - adding announcements [828](#)
 - changing [827](#)
 - setting up groups [825](#)
 - setting up night service [829](#)
 - setting up queues [828](#)
 - commands
 - add hunt-group [825](#)
 - change hunt-group [827-829](#)
 - display announcements [828](#)
 - considerations [831](#)
 - description [817](#)
 - announcements [818](#)
 - call coverage [819](#)
 - call distribution methods [820](#)
 - Call Forwarding All Calls [822](#)
 - delay announcement intervals [818](#)
 - extension unavailability [821](#)
 - Hunt Group Busy option [822](#)
 - queues [823](#)
 - Send All Calls [822](#)
 - TTY [823](#)
 - forced first announcement. [829](#)
 - interactions. [832](#)
 - screens [824](#)
 - Hunt Group [826, 829, 830](#)
 - Hunt Group (for group member assignments) [827](#)
- Incoming Call Line Identification (ICLID), see Caller ID
- Individual Attendant Access [835](#)
 - administering [835](#)
 - assigning extension to attendant console [836](#)
 - prerequisites [835](#)
 - commands
 - add attendant [836](#)
 - description [835](#)
 - screens [836](#)
 - Attendant Console [836](#)
 - interactions, see interactions *under individual feature names*; see also considerations *under individual feature names*
- Intercom [839](#)
 - administering [840](#)
 - description [839](#)
 - groups. [839](#)
 - telephones. [840](#)
 - interactions [841](#)
 - screens. [840](#)
- Internal Automatic Answer (IAA) [843](#)
 - administering [844](#)
 - considerations [845](#)
 - description [843](#)
 - interactions [845](#)
 - screens [844](#)
- Inter-PBX Attendant Service (IAS) [849](#)
 - administering [849](#)
 - enabling Inter-PBX Attendant Service [850](#)
 - prerequisites [850](#)
 - commands
 - change console-parameters [850](#)
 - display system-parameters customer-options [850](#)
 - description [849](#)
 - interactions [852](#)
 - screens. [850](#)
 - Console Parameters [851](#)
 - Optional Features [850](#)
- ISDN Service. [853](#)
 - administering [864](#)
 - description [853](#)
 - ISDN interworking [860](#)
 - national ISDN-2 services [859](#)
 - private network services [857](#)
 - transmission rate and protocols [854](#)
 - interactions [865](#)
 - screens. [864](#)
- ITCS, see Call Detail Recording (CDR), incoming trunk call splitting (ITCS)
- IVR, see Announcements, Interactive Voice Response (IVR)
- IXC, see World Class Routing, interexchange carrier (IXC)
-
- I
- IAA, see Internal Automatic Answer (IAA)
 - IAS, see Inter-PBX Attendant Service (IAS)
 - ICLID, see Caller ID
 - IGAR (Inter-Gateway Alternate Routing). [59](#)

L

Last Number Dialed	867
administering	867
considerations	868
description	867
interactions.	868
screens	867
Attendant Console	867
Feature Access Code (FAC)	867
Station	867
LDN, see Listed Directory Number (LDN)	
Leave Word Calling (LWC)	871
considerations	873
description	871
voice synthesis	872
end-user procedures	872
interactions.	873
Line Load Control (LLC), see Multiple Level Precedence and Preemption (MLPP)	
Line Lockout.	875
administering	875
considerations	877
description	875
screens	876
linear trunk hunt, see Wideband Switching, linear trunk hunt	
Listed Directory Number (LDN)	879
administering	880
assigning incoming destination to trunk	882
assigning listed directory numbers	881
commands	
change listed-directory-number	881
change trunk-group	882
considerations	883
description	879
routing incoming DID trunk calls to attendant groups.	879
routing incoming FX and CO trunk calls to attendant groups	879
interactions.	884
screens	880
Listed Directory Numbers	881
Trunk Group	882
Locally Sourced Announcements and Music	885
administering	886
considerations	897
description	885
interactions.	898
reports	897
screens	887
locally sourced announcements and music	
administering	
prerequisites	887

Loss Plans	899
administering	900
prerequisites	900
commands	
display location-parameters	900
display system-parameters customer-options	900
description	899
screens	900
Location Parameters	900
Optional Features	900
Loudspeaker Paging	903
administering	906
prerequisites	906
setting up chime paging over loudspeakers	909
setting up voice paging over loudspeakers	907
commands	
change paging code-calling-ids	911
change paging loudspeaker.	907 , 909
change system-parameters features.	906
description	903
chime paging	904
deluxe paging	903
restrictions	905
interactions	912
screens	907
Code Calling IDs	911
Feature-Related System Parameters	906
Loudspeaker Paging	908 , 910
troubleshooting	914

M

Magic-on-Hold system, see Tenant Partitioning	
Malicious Call Trace (MCT)	915
administering	
assigning feature buttons for attendant	921
assigning feature buttons for user	921
defining on system	918
prerequisites	917
commands	
add ds1	922
change attendant.	921
change bri-trunk-board	923
change mct-group-extensions	920
change station	921
change system-parameters features.	918
display system-parameters customer-options	917
considerations	927
description	915
activating	915
controlling	915
deactivating	916
using voice recorder	916
end-user procedures	924
interactions	928

Index

Malicious Call Trace (MCT), (continued)	
reports	927
screens	918
Attendant Console	921
DS1 Circuit Pack	923
Feature-Related System Parameters	919 , 920
ISDN-BRI Trunk Circuit Pack	924
Optional Features	917
Station	922
Manual Exclusion, see Privacy	
Manual Message Waiting	931
administering	931
assigning feature button	932
commands	
change station.	932
description	931
screens	932
Station	933
Manual Originating Line Service, see Hot Line Service	
Manual Signaling	935
administering	935
assigning manual signaling button for multiple-call appearance telephone	936
commands	
change station.	936
description	935
end-user procedures	937
interactions.	938
screens	936
Station	936
Meet-me Conference.	939
administering	939
accessing as attendee	947
changing access code	947
creating or changing vector.	941
creating vector directory number (VDN)	944
options for creating vector steps	943
prerequisites	940
using Selective Conference Party Display, Drop, and Mute	947
commands	
add vdn.	944
change vector	941
display system-parameters customer-options.	750 , 940
list meet-me vdn.	946
considerations	949
description	939
end-user procedures	946
interactions.	952
screens	940
Call Vector	941 , 942
Meet-me Vector Directory Number	946
Optional Features	750 , 940
Vector Directory Number.	945
troubleshooting	953
MLPP, see Multiple Level Precedence and Preemption (MLPP)	
Modem Pooling.	955
administering	956
considerations	957
description	955
interactions	958
screens.	956
Data Module	956
Feature Access Code (FAC)	956
Modem Pool Group.	956
Multifrequency Signaling	959
considerations	962
description	959
guidelines	960
MF Shuttle	960
MFE.	960
R2 multifrequency compelled (MFC) signaling	960
interactions	963
screens.	962
Multi-Location Dial Plan	967
administering	971
changing extensions	972
prepending numbers	974
prerequisites.	971
setting up announcements	976
setting up local centralized answering point (LCAP).	977
setting up multiple FACs – ARS	977
setting up multiple FACs for attendants	977
commands	
change daylight-savings-rules.	972
display system-parameters customer-options	971
description	968
announcements	970
feature access codes (FACs)	969
location prefix	968
maintenance.	971
distributed communication system (DCS)	967
interactions	978
local centralized answering point (LCAP)	977
screens.	972
Change Station Extension	973
Daylight Savings Rules	972
Optional Features	971
Uniform Dial Plan Table	975
Multiple Level Precedence and Preemption (MLPP).	981
administering	998
adding extensions	1010
announcements for Precedence Calling	1010
assigning announcement types	1011
assigning attendant queue priorities	1009 , 1025
assigning digit analysis	1016
assigning digit conversion.	1019
assigning feature access codes	1014
assigning hot line number.	1006 , 1024

Multiple Level Precedence and Preemption (MLPP), administering, (continued)	
assigning LLC level to COR	1022
assigning LLC level to system	1022
assigning maximum precedence levels	1004
assigning MLPP feature access code	1002
assigning Precedence Calling system parameters	1003
assigning Preemption to COR	1021
assigning route patterns	1018
assigning trunks	1005 , 1022
assigning WNDP feature access codes	1024
assigning WNDP system parameters	1023
deleting announcements	1012
Dual Homing	1020
enabling Precedence Call Waiting	1013
End Office Access Line Hunting	1021
Line Load Control (LLC)	1022
Precedence Call Waiting	1013
Precedence Calling	1002
Precedence Routing	1015
Preemption	1021
prerequisites	1000
recording announcements	1011
saving announcements	1012
setting Precedence Call timeout	1014 , 1022
Worldwide Numbering and Dialing Plan (WNDP)	1023
Attendant Diversion Timing	984 , 985
Call Purpose Indicators	985
commands	
add abbreviated-dialing group	1007 , 1025
add station	1007 , 1025
add trunk-group	1005
change announcements	1010 , 1012
change console-parameters	1009
change cor	1004 , 1021 , 1022
change feature-access-codes	1002 , 1014 , 1024
change precedence-routing analysis	1016
change precedence-routing digit-conversion	1019
change route-pattern	1018
change station	1013
change system-parameters mlpp	1003 , 1011 , 1014 , 1022 , 1023
display system-parameters customer-options	1000
considerations	1026
Default Route Digit	997
Defense Switched Network (DSN)	981
description	981
announcements for Precedence Calling	991
Dual Homing	993
End Office Access Line Hunting	993
Line Load Control (LLC)	994
Precedence Call Waiting	992
Precedence Calling	982
Precedence Routing	992

Multiple Level Precedence and Preemption (MLPP), description, (continued)	
Preemption	994
Worldwide Numbering and Dialing Plan (WNDP)	996
Generic Switching Center Requirements (GSCR)	981
interactions	1028
Joint Interoperability Test Command (JITC)	981
Line Load Control (LLC)	1022
lockdown	994
Precedence Call Timeout	985
Precedence calling tones	984
Remote Attendant Route String	984
Route Control Digit	1028
screens	1000
Abbreviated Dialing List.	1007 , 1025
Announcements/Audio Sources	1010
Class of Restriction.	1004 , 1021 , 1022
Console Parameters	1009
Feature Access Code (FAC)	1002 , 1014 , 1024
Multiple Level Precedence & Preemption Parameters.	1003 , 1011 , 1014 , 1022 , 1023
Optional Features	1000
Pattern Number	1018
Precedence Routing Digit Analysis Table	1016
Precedence Routing Digit Conversion Table	1019
Station	1007 , 1013 , 1025
Trunk Features.	1005
WNDP Emergency 911 Route String	1037
Multiple Music-on-Hold, see Tenant Partitioning	
Music-on-Hold	1039
administering	1040
assigning music source port	1044
assigning music tones, music ports, and music for transferred trunks	1041
connecting music source to server	1044
defining COR	1043
American Society of Composers, Artists, and Producers (ASCAP)	1039
Broadcast Music Incorporated (BMI)	1039
commands	
add trunk-group	1044
change cor.	1043
change music-sources	1044
change system-parameters features.	1041
considerations	1045
description	1039
copyrighted material	1039
options for music, silence, and tone	1039
interactions	1046
screens	1040
Class of Restriction.	1043
Feature-Related System Parameters	894 , 1041
Music Sources	1044

Index

N

- N x DS0 channels, see Wideband Switching, N x DS0 channels
- Night Service [1047](#)
 - administering [1049](#)
 - setting up external alerting [1057](#)
 - setting up external alerting Night Service . . . [1057](#)
 - setting up night console service [1053](#)
 - setting up Night Service for hunt groups. . . [1060](#)
 - setting up Night Service for trunk groups . . [1059](#)
 - setting up night station service [1054](#)
 - setting up night station service to voice mail. [1051](#)
 - setting up trunk answer from any station . . [1056](#)
 - commands
 - add hunt group [1051](#)
 - change attendant [1053](#)
 - change console-parameters [1052](#), [1055](#), [1057](#), [1058](#), [1059](#)
 - change feature-access-codes [1056](#)
 - change hunt-group [1060](#)
 - change listed-directory-numbers [1051](#), [1054](#), [1057](#)
 - change tenant. [1051](#)
 - change trunk-group [1059](#)
 - considerations [1061](#)
 - description [1047](#)
 - Hunt Group Night Service [1047](#)
 - Night Console Service [1047](#)
 - Night Station Service [1048](#)
 - Trunk Answer from Any Station (TAAS) . . . [1048](#)
 - Trunk Group Night Service [1049](#)
 - interactions. [1064](#)
 - screens [1050](#)
 - Attendant Console. [1054](#)
 - Console Parameters [1052](#), [1055](#), [1057](#), [1058](#), [1059](#)
 - Feature Access Code (FAC) [1056](#)
 - Hunt Group [1051](#), [1061](#)
 - Listed Directory Numbers [1052](#), [1055](#), [1058](#)
 - Trunk Group [1060](#)
- nightly file transfers, see Wideband Switching, scheduled batch processing

O

- Off-Premises Station [1069](#)
 - administering [1070](#)
 - activating for a user [1070](#)
 - commands
 - change station. [1070](#)
 - description [1069](#)
 - interactions. [1072](#)
 - screens [1070](#)
 - Station [1071](#)
- OTCS, see Call Detail Recording (CDR), outgoing trunk call splitting (OTCS)

OTTOTT, see Transfer, outgoing trunk to outgoing trunk transfer (OTTOTT)

P

- paging, see Group Paging
- PE, see Wideband Switching, PRI endpoints (PE)
- Personal Station Access (PSA) [1073](#)
 - administering [1075](#)
 - prerequisites. [1076](#)
 - commands
 - change feature-access-codes [1076](#)
 - description [1073](#)
 - button mapping [1074](#)
 - dissociated telephones [1074](#)
 - invalid attempts using [1073](#)
 - preferences and permissions [1074](#)
 - security [1075](#)
 - telecommuting [1073](#)
 - unanswered calls. [1074](#)
 - end-user procedures [1078](#)
 - interactions [1082](#)
 - screens. [1078](#)
 - Feature Access Code (FAC) [1077](#)
- Personalized Ringing [1085](#)
 - administering [1086](#)
 - assigning to user telephone. [1086](#)
 - commands
 - change station [1086](#)
 - description [1085](#)
 - power failures [1085](#)
 - ringing patterns [1085](#)
 - interactions [1088](#)
 - screens. [1086](#)
 - Station [1087](#)
- Posted Messages [1089](#)
 - * [1105](#), [1107](#)
 - administering [1092](#)
 - activating the Posted Messages security code [1096](#)
 - creating custom messages [1100](#)
 - defining feature access code (FAC) [1094](#)
 - prerequisites. [1092](#)
 - sending custom messages through QSIG . . [1097](#)
 - setting up a telephone security code. [1096](#)
 - translating button label to user-defined language [1103](#)
 - translating feature button to user-defined language [1102](#)
 - translating softkey button label to user-defined language [1102](#)
 - translating system messages to user-defined language [1099](#)
 - translating telephone feature buttons and labels [1101](#)
 - attendant consoles [1105](#)

Posted Messages, (continued)

commands	
change display-messages button-labels . . .	1103
change display-messages posted-messages	1099 , 1100
change display-messages softkey-labels . . .	1102
change display-messages view-buttons . . .	1102
change feature-access-codes	1094 , 1097
change station.	1096
change system-parameters features	1096
display system-parameters customer-options	1092
considerations	1108
description	1089
custom messages	1091
fixed messages	1090
language options	1089
QSIG support	1091
end-user procedures	1104
interactions.	1109
message posting mode	1090 , 1109 , 1111
screens	1093
Custom Posted Messages	1101
Feature Access Code (FAC)	1095
Feature-Related System Parameters	1097 , 1098
Language Translations.	1102 - 1104
Optional Features	1092
Station	1096
System Posted Messages	1099
security code	1095 , 1105
selection display mode	1090 , 1108 , 1109 , 1111
special dial tone	1090
PPM, see Call Charge Information, description, Periodic Pulse Metering (PPM)	
Precedence Call Waiting, see Multiple Level Precedence and Preemption (MLPP)	
Precedence Calling, see Multiple Level Precedence and Preemption (MLPP)	
Precedence Routing, see Multiple Level Precedence and Preemption (MLPP)	
Preemption, see Multiple Level Precedence and Preemption (MLPP)	
Priority Calling	1113
administering	1113
assigning priority feature button to attendant console	1117
assigning priority feature button to telephone	1118
Class of Service	1115
Feature Access Code	1115
prerequisites	1114
commands	
change attendant	1117
change feature-access-codes	1115
change station.	1118
change system-parameters features	1114
description	1113
end-user procedures	1119

Priority Calling, (continued)

interactions	1120
screens	1116
Attendant Console	1117
Feature Access Code (FAC)	1116
Feature-Related System Parameters	1115
Station	1118
Privacy	1121
administering	1122
activating Data Restriction for trunk group . .	1127
for user	1124
prerequisites	1122
commands	
change cos	1123
change feature-access-codes	1123
change station	1124
change system-parameters features.	1122
change trunk-group	1127
considerations	1128
description	1121
Automatic Exclusion	1122
Data Privacy	1121
Data Restriction	1121
Manual Exclusion	1122
end-user procedures	1128
interactions	1129
screens	1123
Class of Service	1123
Feature Access Codes (FAC)	1123
Feature-Related System Parameters	1122
Station	1124 , 1125 , 1126
Trunk Group	1127
PSA, see Personal Station Access (PSA)	
Public Network Call Priority	1131
administering	1133
description	1131
China	1131
Russia.	1133
Spain	1133
interactions	1135
China	1136
Russia.	1137
screens	1134

Q

QSIG

Call Forwarding	537
definition	1091
Multi-Location Dial Plan	967
Posted Messages	1091 - 1098
World Class Routing.	1381

R

Recorded Telephone Dictation Access	1141
administering	1141
assigning call park button to multiple-call appearance telephone	1142
commands	
change station.	1142
description	1141
interactions.	1143
screens	1142
Station	1142
Remote Access	1145
administering	1149
assigning authorization codes	1153
disabling Remote Access	1153
enabling Remote Access.	1150
prerequisites	1153
Remote Access for trunk group.	1157
Remote Access screen	1150
commands	
change authorization-codes	1156
change remote-access.	1150 , 1153
change system-parameters features	1153
change trunk-group	1157
display capacity	1156
display system-parameters customer-options	1153
status remote-access	1146 , 1148
considerations	1158
description	1145
alternate facility restriction levels (AFRL)	1148
authorization codes	1148
barrier codes	1147
COR	1148
logoff notification	1149
Night Service	1146
security	1146
end-user procedures	1158
interactions.	1159
screens	1149
Authorization Code - COR Mapping.	1156
Feature-Related System Parameters	1154
Optional Features	1153
Remote Access	1151
Security-Related System Parameters	1152
System Copyright	1152
Trunk Group	1157
reports, see reports <i>under individual feature names</i>	
Restriction - Controlled	1161
administering	1162
considerations	1163
description	1161
end-user procedures	1162
interactions.	1164
screens	1162

Ringing - Abbreviated and Delayed	1165
administering	1166
assigning abbreviated ringing button to user	1169
assigning ring control to user	1168
prerequisites	1166
commands	
change station	1168 , 1169
change system-parameters features.	1167
considerations	1171
description	1165
ringing types	1166
interactions	1171
screens	1167
Feature-Related System Parameters	1167
Station	1168 , 1170
RNX, see Uniform Dial Plan (UDP), network location code (RNX)	
RTL, see Centralized Attendant Service (CAS), release link trunks (RLT)	

S

screens, see screens <i>under individual feature names</i>	
Security Violation Notification (SVN)	1173
administering	1176
prerequisites	1177
setting up	1177
commands	
change remote-access	1179
change station	1180
change system-parameters security	1177
clear measurements security-violations	1175
disable login	1176
disable remote-access	1176
display svn-button-location	1175
enable login	1176
enable remote-access	1176
monitor security-violations	1174
considerations	1182
description	1173
dealing with security violations	1175
disable login IDs	1176
disabling remote access	1176
enabling login ID	1176
enabling remote access	1176
event sequence	1174
reporting.	1174
security violation thresholds and notification	1174
SVN - halt buttons	1175
SVN referral call with announcement	1175
interactions	1183
reports	1182

Security Violation Notification (SVN), (continued)	
screens	1177
Login Administration	1179
Remote Access	1180
Security Related System Parameters	1178
Station	1181
Separation of Bearer and Signaling	1185
administering	1185
considerations	1186
description	1185
interactions.	1188
screens	1186
Service Observing	1199
administering	1202
description	1199
listen and talk modes	1200
restrictions	1200
telephone displays.	1200
trunk calls	1201
warning and conference tones	1201
end-user procedures	1203
interactions.	1204
screens	1202
speed dialing, see Abbreviated Dialing (AD)	
Station Hunting	1207
administering	1209
assigning hunt-to station to extension	1212
assigning Station Hunting after Coverage	1210
enabling before Coverage	1213
commands	
change coverage-path	1210
change station.	1212
change system-parameters	
coverage-forwarding	1213
description	1207
duplicating station	1209
removing station.	1209
routing calls through Station Hunting chain	1208
Station Hunting and Call Coverage	1208
interactions.	1214
reports	1214
screens	1210
Coverage Path	1211
Station	1212
System Parameters Call Coverage/Call	
Forwarding	1213
Station Lock	1219
administering	1220
description	1219
end-user procedures	1220
interactions.	1222
screens	1220
COR	1220
Feature Access Code (FAC)	1220
Station	1220
Station Security Code.	1223
administering	1223
creating station security code	1224
commands	
change feature-access-codes	1224
change station	1224
change system-parameters security	1224
description	1223
interactions	1226
screens.	1224
Feature Access Codes (FAC)	1224
Security-Related System Parameters	1224
Station	1225
stations, see telephones	
Supporting TTY Callers	1227
administering	1230
description	1227
handling TTY calls with vectors	1229
setting up announcements for TTY callers	1228
setting up hunt groups for TTY callers	1229
SVN, see Security Violation Notification (SVN)	
T	
TAAS, see Night Service, Trunk Answer from Any Station (TAAS)	
TCM, see Facility Restriction Levels, Traveling Class Marks (TCM)	
TEG, see Terminating Extension Group (TEG)	
Telephone Display	1233
administering	1263
description	1233
button display modes	1234
call-related information display	1235
enhanced telephone display	1239
feature information displays	1238
mapping enhanced display characters	1257
message retrieval	1238
Unicode "Native Name" support	1238
interactions	1265
screens.	1264
Date/Time Mode and Formats - English	1243
Date/Time Mode and Formats - French,	
Italian, Spanish, and User-Defined	1243
Language Translations	1246
Leave Word Calling Formats - English	1247
Leave Word Calling Formats - French,	
Italian, Spanish, and User-Defined	1247
telephones, use of term	59
Temporary Bridged Appearance	1267
administering	1267
considerations	1268
description	1267
interactions	1269
screens.	1268

Index

Tenant Partitioning	1271	Tenant Partitioning, screens, (continued)	
administering	1276	Station	1289
assigning sources of music for tenant partitions	1292	Tenant	1278 , 1280
assigning tenant partition number to		Terminating Extension Group	1290
access telephone.	1281	Trunk Group	1291
agent login ID	1282	Vector Directory Number	1292
announcement	1283	Terminal Translation Initialization (TTI).	1299
attendant	1284	administering	1301
data module	1285	description	1299
hunt group	1286	analog queue warning ports and external alert ports	1301
loudspeaker paging zone	1287	attendant consoles	1299
remote access extension	1288	data modules	1300
terminating extension group.	1290	ISDN-BRI telephones.	1300
trunk group	1291	security	1301
user extension	1289	voice and data telephones	1300
vector directory number.	1292	interactions	1303
defining tenant partition	1278	screens.	1302
prerequisites	1277	Attendant Console	1302
commands		Data Module	1302
change access-endpoint	1281	Feature Access Codes (FAC).	1302
change agent loginid.	1282	Feature-Related System Parameters	1302
change announcements	1283	Station	1302
change attendant	1284	Terminating Extension Group (TEG).	1305
change data-module	1285	administering	1305
change hunt-group	1286	considerations	1306
change music-sources	1292	description	1305
change paging loudspeaker	1287	interactions	1306
change remote-access.	1288	screens.	1305
change station.	1289	Terminating Extension Group	1305
change tenant.	1278	Time-of-Day Routing, see Call Coverage	
change term-ext-group.	1290	Transfer	1309
change trunk-group	1291	administering	1312
change vdn	1292	considerations	1312
display system-parameters customer-options	1277	description	1309
description	1271	abort transfer	1310
access control.	1273	emergency transfer.	1311
attendant services	1273	outgoing trunk to outgoing trunk transfer (OTTOTT)	1311
examples	1274	pull transfer	1309
Magic-on-Hold system	1271	transfer recall	1310
Multiple Music-on-Hold.	1275	transfer upon hangup.	1310
network route selection	1274	trunk-to-trunk transfer	1310
Offer B	1271	interactions	1314
partitioning tenants	1272	screens.	1312
interactions.	1294	troubleshooting	
screens	1277	Abbreviated Dialing (AD).	72
Access Endpoint	1281	Administrable Language Displays	97
Agent LoginID.	1282	Announcements.	151
Announcements/Audio Sources	1283	AUDIX One-Step Recording	265
Attendant Console	1284	Call Coverage.	407
Data Module	1285	Feature Access Codes (FAC)	796
Hunt Group	1286	Group Paging	803
Loudspeaker Paging.	1287	Loudspeaker Paging.	914
Music Sources	1293	Meet-me Conference	953
Optional Features	1277		
Remote Access	1288		

Trunk Flash	1317
administering	1318
considerations	1319
description	1317
end-user procedures	1318
screens	1318
TTI, see Terminal Translation Initialization (TTI)	

U

UDP, see Uniform Dial Plan (UDP)	
Uniform Dial Plan (UDP)	1321
administering	1327
BCC Value field entries	1394
CA-TSC field entries	1395
Hop Lmt field entries	1396
Inserted Digits field entries	1396
ISDN protocols	1339
ITC field entries	1397
IXC field entries	1397
LAR field entries	1398
Numbering Format field entries	1399
Prefix Mark field entries	1400
prerequisites	1327
Service Feature field entries	1401
setting up AAR Digit Analysis Table	1337
setting up AAR Digit Conversion Table	1333
setting up ARS Digit Analysis Table	1340
setting up ARS Digit Conversion Table	1335
setting up extension number portability numbering plan	1344
setting up node number routing	1332
setting up Uniform Dial Plan Table	1330
commands	
add station	1323
change aar analysis	1337
change aar digit-conversion	1333
change ars analysis	1340
change ars digit-conversion	1335
change enp-number-plan	1344
change feature-access-codes	1328
change node-number routing	1332
change route-pattern	1392
change uniform-dial plan	1330
display system-parameters customer-options	1327
considerations	1345
description	1321
AAR code extension treatment	1322
administration and processing example	1324
Automatic Alternate Routing (AAR)	1322
Automatic Route Selection (ARS)	1322
code extension treatment	1322
ENP code extension treatment	1323
extension	1322
extension conversion	1322

Uniform Dial Plan (UDP), description, (continued)	
Extension Number Portability (ENP)	1322
local extension treatment	1323
matching pattern selections	1323
RNx and UDP codes	1324
temporary out of service extension treatment	1323
Extended Trunk Access (ETA)	1323
interactions	1346
network location code (RNx)	1324
reports	1344
screens	1329
AAR Digit Analysis Table	1337
AAR Digit Conversion Table	1333
ARS Digit Analysis Table	1340
ARS Digit Conversion Table	1335
Extension Number Portability Numbering Plan	1344
Node Number Routing	1332
Optional Features	1327
Route Pattern	1393
Uniform Dial Plan Table	1330

V

V VAL, see Announcements, Virtual Voice Announcements over LAN (Virtual VAL)	
VAL, see Announcements, Voice Announcements over LAN (VAL)	
VIAS, see Visually Impaired Attendant Service (VIAS)	
Virtual VAL, see Announcements, Virtual Voice Announcements over LAN (Virtual VAL)	
Visually Impaired Attendant Service (VIAS)	1347
administering	1348
prerequisites	1348
description	1347
interactions	1349
screens	1348
Voice Message Retrieval	1351
administering	1351
description	1351
interactions	1353
screens	1352
voice terminals, see telephones	

W

WAE, see Wideband Switching, wideband access endpoint (WAE)	
Whisper Paging	1355
administering	1356
prerequisites	1356
description	1355
call redirection overrides	1355
group answering environment	1356
network restrictions	1356
speakerphones	1356

Index

Whisper Paging, (continued)	
end-user procedures	1358
interactions.	1359
screens	1357
Wideband Switching	1361
administering.	1374
considerations	1375
description	1361
blocking prevention	1373
channel allocation	1362
data backup connection	1366
data service unit/channel service unit	1365
direction of trunk hunting within facilities.	1368
endpoint applications with signaling.	1363
facility lists	1367
glare prevention and resolution	1371
guidelines and examples.	1366
H0 channels.	1370
H11 channels	1368
H12 channels	1369
high-speed video conferencing	1366
ISDN-PRI terminal adapters	1363
ISDN-PRI trunk groups and channel allocation	1367
linear trunk hunt	1373
line-side T1 or E1 facility	1365
line-side T1 or E1 ISDN-PRI facilities	1364
N x DS0 channels	1370
networking	1367
nightly file transfers	1366
nonsignaling endpoint applications	1365
PRI endpoints (PE)	1364
primary data connectivity.	1367
scheduled batch processing	1366
universal digital signal level 1 board.	1364
uses for.	1362
wideband access endpoint (WAE)	1365
interactions.	1375
port network (PN) preferential trunk routing.	1368
screens	1374
World Class Routing	1377
administering.	1383
adding new area code	1408
adding new prefix	1409
assigning FAC for ARS	1388
assigning telephone to partition group.	1414
defining interexchange carrier calls	1403
defining local information calls	1406
defining operator-assisted calls.	1402
displaying ARS analysis information	1391
prerequisites	1389 , 1411 , 1416
setting up location ARS FAC	1389
setting up partition groups	1412
setting up route pattern	1392
setting up Time of Day Routing	1416
using ARS to restrict outgoing calls	1410
World Class Routing, administering, (continued)	
using COR and FRL to manage calling	
privileges.	1385
using restricted area code prefixes	1404
using wildcards	1406
commands	
change ars analysis	1404 , 1406 , 1408 , 1410
change cor.	1386 , 1414
change dialplan analysis	1388
change features-access-codes	1388
change locations	1390
change partition-route-table.	1412
change station	1385 , 1415
change time-of-day.	1417
display ars analysis.	1391 , 1402 , 1404
display system-parameters	
customer-options	1389 , 1412 , 1416
display time-of-day	1416
display toll	1410
list ars analysis.	1391
list ars route-chosen	1408 , 1412
list cor.	1414
description	1377
ARS analysis	1379
ARS dialing without FAC	1380
Automatic Alternate Routing (AAR)	1377
Automatic Route Selection (ARS)	1377
digit conversion	1379
overview.	1378
partitioning.	1382
extensions	1382
dialable extensions.	1382
internal extensions	1382
nondialable extensions	1382
interactions	1419
interexchange carrier (IXC)	1403
screens.	1384
ARS Digit Analysis Report	1392
ARS Digit Analysis Table 1391 , 1403 , 1405 , 1407 ,	1409 , 1410
ARS Route Chosen Report	1408 , 1412
Class of Restriction.	1387 , 1415
Class of Restriction Information	1414
Dial Plan Analysis Table	1388
Feature Access Code (FAC)	1389
Locations	1390
Optional Features	1389 , 1411 , 1416
Partition Routing Table	1413
Station	1386 , 1415
Time of Day Routing Plan.	1417 , 1418
wildcards	1404 , 1406
Worldwide Numbering and Dialing Plan (WNDP), see	
Multiple Level Precedence and Preemption (MLPP)	