



# **SIP Support in Avaya Communication Manager**

Running on the  
Avaya S8300, S8400, S8500 series, and  
S8700 series Media Server

555-245-206  
Issue 6.1  
March 2007

© 2007 Avaya Inc.  
All rights reserved.

#### **Notice**

While reasonable efforts were made to ensure that the information in this document was complete and accurate at the time of printing, Avaya Inc. can assume no liability for any errors. Changes and corrections to the information in this document may be incorporated in future releases.

**For full legal page information, please see the complete document, Avaya Legal Page for Software Documentation, Document number 03-600758.**

**To locate this document on the web site, simply go to <http://www.avaya.com/support> and search for the document number in the search box.**

#### **Documentation disclaimer**

Avaya Inc. is not responsible for any modifications, additions, or deletions to the original published version of this documentation unless such modifications, additions, or deletions were performed by Avaya. Customer and/or End User agree to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation to the extent made by the Customer or End User.

#### **Link disclaimer**

Avaya Inc. is not responsible for the contents or reliability of any linked Web sites referenced elsewhere within this documentation, and Avaya does not necessarily endorse the products, services, or information described or offered within them. We cannot guarantee that these links will work all of the time and we have no control over the availability of the linked pages.

#### **Warranty**

Avaya Inc. provides a limited warranty on this product. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product, while under warranty, is available through the following Web site:

<http://www.avaya.com/support>

#### **Copyright**

Except where expressly stated otherwise, the Product is protected by copyright and other laws respecting proprietary rights. Unauthorized reproduction, transfer, and or use can be a criminal, as well as a civil, offense under the applicable law.

#### **Avaya support**

Avaya provides a telephone number for you to use to report problems or to ask questions about your product. The support telephone number is 1-800-242-2121 in the United States. For additional support telephone numbers, see the Avaya Web site:

<http://www.avaya.com/support>

# Contents

<b>About this Document</b> . . . . .	<b>9</b>
Audience . . . . .	9
Document set . . . . .	10
Equipment . . . . .	10
Organization . . . . .	10
Conventions . . . . .	11
Safety labels and security alert labels . . . . .	12
Trademarks. . . . .	12
Related resources . . . . .	13
Technical assistance . . . . .	15
Within the U.S. . . . .	15
International . . . . .	15
Downloading this book from the Web . . . . .	15
Downloading this book . . . . .	16
Sending us comments. . . . .	16
<b>Chapter 1: Overview of Changes</b> . . . . .	<b>17</b>
New and changed SIP features . . . . .	17
<b>Chapter 2: SIP Support in Avaya Communication Manager</b> . . . . .	<b>19</b>
Introduction to SIP . . . . .	19
What is SIP? . . . . .	19
How does SIP integrate into your system? . . . . .	20
SIP-related support . . . . .	21
Trunking . . . . .	21
Stations . . . . .	22
CDR . . . . .	22
Access control . . . . .	22
Requirements for SIP . . . . .	23
Software . . . . .	23
Hardware . . . . .	23
Firmware . . . . .	24
SIP trunk engineering notes . . . . .	24
TLS links for failover . . . . .	25
Related systems . . . . .	26

<b>Chapter 3: Administering Communication Manager for SIP Enablement Services</b> . . . . .	<b>27</b>
Administering Communication Manager for SIP . . . . .	27
Prepare Communication Manager . . . . .	28
Administer SIP trunks . . . . .	31
Administer call routing . . . . .	33
Administer SCCAN . . . . .	35
Redirect calls off net. . . . .	36
<b>Chapter 4: Communication Manager screen details for SIP</b> . . . . .	<b>37</b>
Best Practices . . . . .	37
SIP administrative screens . . . . .	37
ARS Digit Analysis Table screen . . . . .	39
ANI Reqd . . . . .	39
Call Type (for AAR only) . . . . .	40
Call Type (for ARS only) . . . . .	41
Dialed String . . . . .	41
Location (for the ARS Digit Analysis Table) . . . . .	42
Max . . . . .	42
Min . . . . .	43
Node Num . . . . .	43
Percent Full . . . . .	43
Route Pattern . . . . .	43
Configuration Set screen . . . . .	44
Barge-In Tone . . . . .	44
Calling Number Style . . . . .	45
Calling Number Verification . . . . .	45
CDR for Calls to EC500 Destination . . . . .	45
CDR for Origination . . . . .	46
Cellular Voice Mail Detection . . . . .	46
Configuration Set Description . . . . .	47
Fast Connect on Origination . . . . .	47
Identity When Bridging . . . . .	47
Post Connect Dialing Options . . . . .	48
Feature Access Codes screen page 1 . . . . .	49
Auto Alternate Routing (AAR) Access Code . . . . .	49
Auto Route Selection (ARS) Access Code1 . . . . .	49
IP Network Map screen . . . . .	50
Region . . . . .	51
Emergency Location Extension . . . . .	51

IP Network Region screen . . . . .	52
Region . . . . .	52
Authoritative Domain . . . . .	52
Intra-region IP-IP Direct Audio . . . . .	53
Inter-region IP-IP Direct Audio . . . . .	54
Use Default Server Parameters . . . . .	55
Server IP Address . . . . .	55
Server Port . . . . .	55
IP Node Names screen . . . . .	56
Name . . . . .	56
IP Address . . . . .	57
Locations screen . . . . .	58
Proxy Selection Route Pattern . . . . .	58
Numbering—Public/Unknown screen . . . . .	59
Example 1 . . . . .	60
Example 2 . . . . .	60
CPN Prefix . . . . .	61
Ext Code . . . . .	62
Ext Len . . . . .	62
Total CPN Len . . . . .	63
Trk Grp(s) . . . . .	63
Off-PBX Station Mapping screen page 1 . . . . .	64
Command parameters . . . . .	64
Station Extension . . . . .	65
Application . . . . .	65
Dial Prefix . . . . .	66
Phone Number . . . . .	66
Trunk Selection . . . . .	66
Configuration Set . . . . .	67
Off-PBX Station Mapping screen page 2 . . . . .	68
Station Extension . . . . .	68
Call Limit . . . . .	68
Mapping Mode . . . . .	69
Calls Allowed . . . . .	69
Bridged Calls . . . . .	70
Route Pattern screen . . . . .	71
SCCAN . . . . .	72
Secure SIP . . . . .	72
SCCAN-Related System Parameters screen . . . . .	73
MM (WSM) Route Pattern . . . . .	73

## Contents

Signaling Group Page 1 screen . . . . .	74
Group Number . . . . .	74
Group Type . . . . .	74
Transport Method . . . . .	75
Near-end Node Name . . . . .	75
Far-end Node Name . . . . .	75
Near-end Listen Port . . . . .	76
Far-end Listen Port . . . . .	76
Far-end Network Region . . . . .	76
Far-end Domain . . . . .	77
Bypass If IP Threshold Exceeded . . . . .	77
DTMF over IP . . . . .	77
Session Establishment Timer . . . . .	78
Direct IP-IP Audio Connections . . . . .	78
IP Audio Hairpinning . . . . .	78
Station screen, page 1 . . . . .	79
Type . . . . .	79
System Capacity screen . . . . .	80
SIP Trunks . . . . .	80
System-Parameters screens . . . . .	81
System Parameters Features screen, page 1 . . . . .	81
DID/Tie/ISDN/SIP Intercept Treatment . . . . .	82
System Parameters Call Coverage/Call Forwarding screen, page 2 . . . . .	83
Disable call classifier for CCROn over SIP trunks . . . . .	83
System-Parameters Customer-Options screen, page 1 . . . . .	84
Maximum Off-PBX Telephones - EC500 . . . . .	84
Maximum Off-PBX Telephones - OPS . . . . .	84
Maximum Off-PBX Telephones - SCCAN . . . . .	85
Used . . . . .	85
System Parameters Customer Options screen, page 2 . . . . .	86
Maximum Administered SIP Trunks . . . . .	86
System Parameters Customer Options screen, page 4 . . . . .	87
ISDN PRI . . . . .	87
Enhanced EC500 . . . . .	87
IP Trunks . . . . .	88
System Parameters Customer Options screen, page 5 . . . . .	89
Private Networking . . . . .	89
Trunk Group screens . . . . .	90
Trunk Group screen, Page 1 . . . . .	90
Group Number . . . . .	90
Group Type . . . . .	91

CDR Reports . . . . .	91
Group Name . . . . .	92
COR . . . . .	92
TN . . . . .	93
TAC . . . . .	93
Direction . . . . .	94
Outgoing Display . . . . .	94
Dial Access . . . . .	94
Busy Threshold . . . . .	95
Night Service . . . . .	95
Queue Length . . . . .	96
Service Type . . . . .	96
Auth Code . . . . .	97
Signaling Group . . . . .	97
Number of Members . . . . .	97
Trunk Group screen, Page 2 . . . . .	98
UNICODE Name . . . . .	98
SCCAN . . . . .	99
Redirect on OPTIM failure . . . . .	99
Digital Loss Group . . . . .	99
Preferred Minimum Session Refresh Interval (sec) . . . . .	100
Trunk Group screen, Page 3 . . . . .	101
ACA Assignment . . . . .	101
Measured . . . . .	102
Maintenance Tests . . . . .	102
Numbering Format . . . . .	103
Prepend '+' to Calling Number?. . . . .	103
Replace Unavailable Numbers . . . . .	103
Trunk Group screen, page 4 . . . . .	104
Mark Users as Phone . . . . .	104
SIP device as an OPS extension . . . . .	105
<b>Appendix A: Requirement specifications . . . . .</b>	<b>107</b>
Call processing software . . . . .	107
RFC 3325 compliance . . . . .	107
Compliance with RFC 3325 . . . . .	107
FNU requirements . . . . .	107
Call Forwarding All Calls FNU . . . . .	108
Call Forward Busy - No Answer FNU . . . . .	109
Directed Call Pickup FNU . . . . .	111

**Contents**

Extended Call Pickup FNU . . . . .	112
Calling Party Number Block FNU . . . . .	112
Calling Party Number Unblock FNU . . . . .	113
Dial Intercom FNU . . . . .	114
Drop FNU . . . . .	114
Exclusion FNU . . . . .	115
Off-PBX Call FNU . . . . .	115
Last Number Dialed FNU . . . . .	116
Malicious Call Trace FNU . . . . .	116
AUDIX One-Step Recording FNU . . . . .	117
Priority Call FNU . . . . .	117
Send All Calls FNU. . . . .	118
Send All Calls of the endpoint's own (1111) extension FNU structure. . . . .	118
Send All Calls of another endpoint's (2222) extension FNU structure. . . . .	119
Transfer to Voice Mail FNU . . . . .	119
Whisper Page Activation . . . . .	120
<b>Appendix B: Terminal requirements and features. . . . .</b>	<b>121</b>
Terminals . . . . .	121
Avaya CM OPTIM requirements for R3.1.x. . . . .	121
<b>Glossary . . . . .</b>	<b>123</b>
<b>Index . . . . .</b>	<b>133</b>

# About this Document

This document, *SIP Support in Avaya Communication Manager*, conveys the following information:

- Explains how to administer Avaya Communication Manager to run SES 3.1.2
- Is a revision of the 3.0.x document of the same name
- Includes corrections and newly developed information

See Avaya Communication Manager documentation for non-SIP issues.

This document is available online and in paper format. For your convenience, consider using the embedded cross-references to locate information in addition to the table of contents and the index. Online readers may also use the search facility of the browser.

---

## Audience

This document is for field technicians, remote service personnel, and user-assigned administrative personnel, as a reference to configure and administer Avaya media servers running Communication Manager with SIP. We recommend having three to five years experience, and experience with working on media servers and Communication Manager.

This document assumes that the engineer has a working knowledge of telecommunication fundamentals and PBX maintenance practices. This document also assumes that the system was initially installed and tested properly and brought into service with every fault cleared. Adjuncts and other devices external to the switch are covered by their own service documentation.

If you do not have these experiences and qualifications, please make arrangements for a mentor.

## Document set

Although this book is published separately, it is part of a set. Use this document as an adjunct to the following references:

- *Installing and Administering SIP Enablement Services*, 03-600768
- *Avaya Communication Manager Administrator Guide*, 03-300509
- *Administration for Network Connectivity for Avaya Communication Manager*, 555-233-504

---

## Equipment

The contents of this document discuss the equipment used as media servers running Avaya Communication Manager:

- Avaya S8300
- Avaya S8400
- Avaya S8500 series: S8500 and S8500B
- Avaya S8700 series: S8700, S8710, S8720

---

## Organization

- [About this Document](#) —What you are reading now gives general information on a SIP implementation, how to use this document, and others.
- [Chapter 1: Overview of Changes](#) —This section has high-level information about SIP at a general level that you can read quickly.
- [Chapter 2: SIP Support in Avaya Communication Manager](#)—This introduction discusses SIP-related support in general, requirements for SIP, and other related systems.
- [Chapter 3: Administering Communication Manager for SIP Enablement Services](#)—Use this section to perform the steps needed to administer Avaya Communication Manager to enable SIP messaging.
- [Chapter 4: Communication Manager screen details for SIP](#)—Turn here for detailed descriptions of the screens and fields.

- [Appendix A: Requirement specifications](#)—This appendix discusses the compliance requirements for this product and the feature name URIs (FNUs) and how they are implemented in this product.
- [Appendix B: Terminal requirements and features](#)—This appendix describes the features and feature interactions for terminals or endpoints.
- [Glossary](#)—The glossary provides explanations of abbreviations, acronyms, and terms.
- [Index](#)

---

## Conventions

Table 1: Explanation of typography

To represent...	This typeface and syntax are shown as...	For example...
commands	<ul style="list-style-type: none"> <li>● Bold for <b>commands</b></li> <li>● Bold italic for <i>variables</i></li> <li>● Square brackets [ ] around optional parameters</li> <li>● “ ” between exclusive choices</li> </ul>	<b>refresh ip-route [all   location]</b>
screen input and output	<ul style="list-style-type: none"> <li>● Bold for <b>input</b></li> <li>● Constant width for output (screens and messages)</li> </ul>	Set the Save Translation field to <b>daily</b> . The message <code>Command successfully completed</code> should appear .
Web interface	<ul style="list-style-type: none"> <li>● Bold for <b>menu selections, tabs, buttons, and field names</b></li> <li>● Right arrow &gt; to separate a sequence of menu selections</li> </ul>	Select <b>Alarms and Notification</b> , the appropriate alarm, and then select <b>Clear</b> . Select <b>Diagnostics &gt; View System Logs</b> , then select <b>Watchdog Logs</b> .
Keys	Special font for <b>keyboard keys</b> and SAT screen <b>clickable buttons</b>	Press <b>Tab</b> . Select <b>Next Page</b> .

## About this Document

Other conventions used in this book:

- Physical dimensions are in English units [Foot Pound Second (FPS)], followed by metric units [Centimeter Gram Second (CGS)] in parentheses.

Wire-gauge measurements are in AWG, followed by the diameter in millimeters in parentheses.

- Circuit-pack codes (such as TN790B or TN2182B) are shown with the minimum acceptable alphabetic suffix (like the “B” in the code TN2182B).

Generally, an alphabetic suffix higher than that shown is also acceptable. However, not every vintage of either the minimum suffix or a higher suffix code is acceptable. The *Hardware Guide for Avaya Communication Manager*, doc ID 555-245-207, contains current information on circuit pack codes and functionality.

---

## Safety labels and security alert labels

Observe all caution, warning, and danger statements to help prevent loss of service, equipment damage, personal injury, and security problems. This book uses the following safety labels and security alert labels:

 **CAUTION:**

A caution statement denotes a situation that can result in harm to software, loss of data, or an interruption in service.

 **WARNING:**

A warning statement indicates a situation that can result in harm to hardware or equipment.

 **DANGER:**

A danger statement alerts you to a situation that can result in harm to personnel.

 **SECURITY ALERT:**

A security alert points to a situation that can increase the potential for unauthorized use of a telecommunications system.

---

## Trademarks

All trademarks identified by the ® or ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners.

---

## Related resources

[Table 2: Additional document resources](#), lists additional documentation that is available for you, some of which is referred to within this document.

**Table 2: Additional document resources,**

Document	Doc ID
<i>4600 Series IP Telephone R2.2 Document Library</i>	16-300091
<i>4600 Series IP Telephone R2.2 Installation Guide</i>	555-233-128
<i>4600 Series IP Telephone R2.2 LAN Administrator's Guide</i>	555-233-507
<i>4602/4602SW SIP Telephone Quick Reference</i>	16-300471
<i>4602/4602SW SIP Telephone User's Guide</i>	16-300470
<i>4610SW SIP Telephone Quick Reference</i>	16-300473
<i>4610SW SIP Telephone User's Guide</i>	16-300472
<i>4620/4621SW SIP Telephone Quick Reference</i>	16-300475
<i>4620/4621SW SIP Telephone User's Guide</i>	16-300474
<i>Administration for Network Connectivity for Avaya Communication Manager</i>	555-233-504
<i>Administrator Guide for Avaya Communication Manager</i>	03-300509
<i>Avaya Communication Manager Capacities Table</i>	555-245-601
<i>Avaya Extension to Cellular and OPS Installation and Administration Guide</i>	210-100-500
<i>Avaya Extension to Cellular User's Guide</i>	210-100-700
<i>Avaya Toll Fraud and Security Handbook</i>	555-025-600
<i>Installing and Administering SIP Enablement Services</i>	03-600768
<i>Feature Description and Implementation for Avaya Communication Manager</i>	555-245-205
<i>Hardware Guide for Avaya Communication Manager</i>	555-245-207
<i>Installation and Upgrades for the Avaya G700 Media Gateway and Avaya S8300 Media Server</i>	555-234-100
<i>Installing and Configuring the Avaya S8400 Media Server Release</i>	03-300678
<i>Installing and Configuring the Avaya S8500 Media Server</i>	03-300143
<b>1 of 2</b>	

**Table 2: Additional document resources, (continued)**

<b>Document</b>	<b>Doc ID</b>
<i>Job Aid: Upgrading Firmware on the BIOS — Avaya S8500 Media Server,</i>	03-300411
<i>Job Aids for Field Replacements for the Avaya S8500 Media Server</i>	03-300529
<i>Maintenance Alarms Reference</i>	03-300190
<i>Maintenance Commands Reference</i>	03-300191
<i>Maintenance Procedures</i>	03-300192
online help for Avaya IP Softphone Release 5.x	---
online help for Avaya SIP SoftPhone Release 2.x	---
Quick Start for Hardware Installation Avaya S8400 Media Server in an Avaya G650 Media Gateway	03-300705
<i>Quick Start for Hardware Installation: Avaya S8500 Media Server</i>	555-245-701
<i>Quick Start for Hardware Installation: Avaya S8700 Series Media Server,</i>	555-245-703
Quick Start for Hardware Migration Avaya S8400 Media Server in an Avaya CMC1 or G600 Media Gateway	03-300706
<i>RSA Users Guide</i>	555-245-702
<i>SAMP Users Guide</i>	03-300322
<i>SIP Implementation Guide</i>	16-300140
<i>SIP Personal Information Manager Users Guide</i>	03-300441
<i>SIP Softphone: Administration &amp; System Programming —Avaya SIP Softphone Overview</i>	Aug 2005 Aug 2005
<i>SIP Support for Avaya Communication Manager</i>	555-245-206
<i>The Avaya Server Availability Management Processor (SAMP) User Guide</i>	03-300322
<b>2 of 2</b>	

---

## Technical assistance

Avaya provides the following resources for technical assistance.

- [Within the U.S.](#)
- [International](#)

---

### Within the U.S.

For help with:

- Feature administration and system applications, call the Technical Consultants System Support group at 1-800-225-7585
- Maintenance and repair, call the Avaya Remote Technical Services at 1-800-242-2121
- Toll fraud, call Avaya Technical Services Organization at 1-800-643-2353

---

### International

For all international resources, contact your local Avaya authorized dealer for additional help.

---

## Downloading this book from the Web

You can download the latest version of this book from the Avaya Web site. You must have access to the Internet, and a copy of Acrobat Reader must be installed on your personal computer.

Avaya makes every effort to ensure that the information in this book is complete and accurate. However, information can change after we publish this book. Therefore, the Avaya Web site might also contain new product information and updates to the information in this book. You can also download these updates from the Avaya web site.

## Downloading this book

To download the latest version of this book:

1. Access the Avaya web site at <http://support.avaya.com>.

2. At the top center of the page, select **Product Documentation**.

The system displays the **Welcome to Product Documentation** page.

3. In the upper-left corner type the 8- or 9-digit book number in the Search Support field, and then select **Go**.

The system displays the **Product Documentation Search Results** page.

4. Scroll down to find the latest issue number, and then select the book title to the right of the latest issue number.

5. On the next page, scroll down and select one of the following options:

- **PDF Format** to download the book in regular PDF format
- **ZIP Format** to download the book in zipped PDF format

---

## Sending us comments

Avaya welcomes your comments about this book.

This document was created in PDF format with commenting enabled. Use Adobe Acrobat v7.0, make your comments and corrections in the PDF file, and send them to us.

To reach us by:

- Mail, send your comments to:

Avaya Inc.  
Product Documentation Group  
Room B3-H13  
1300 W. 120 Ave.  
Westminster, CO 80234 USA

- E-mail, send your comments to:

*document@avaya.com*

- Fax, send your comments to:

1-303-538-1741

Mention the name and number of this book, *SIP Support in Avaya Communication Manager*, (555-245-206, Issue 6.1).

# Chapter 1: Overview of Changes

---

## New and changed SIP features

This section provides links to the new and changed Session Initiated Protocol (SIP) features that affect Communication Manager.

- Avaya S8400, S8710 and 8720 servers are included in the discussions, augmenting the information of the S8300, S8500, S8500B, and S8700 servers.
- The information on screen details is reordered and includes new screens.
- On Communication Manager, the default for IP Audio Hairpinning was changed from **y** to **n**. SIP administrators should leave IP Audio hairpinning at the new default.
- Updated administration steps provide for a new ordering of the steps and include new screens. See [Administering Communication Manager for SIP Enablement Services](#) on page 27.
- The hardware and firmware table [Firmware](#) on page 24 is updated.
- A new discussion on [TLS links for failover](#) on page 25 is available.
- In this version of SIP, 5000 trunk members are supported.
- There is a new field, [Preferred Minimum Session Refresh Interval \(sec\)](#) on page 100, on the Trunk Group screen, Page 2.
- [Trunk Group screen, page 4](#) on page 104 presents a new screen to administer the field **Mark Users as phone**.
- Further refinements were made to the presentation of the [Numbering—Public/Unknown screen](#) on page 59.
- [Example 2](#) on page 60 of the display of [Numbering—Public/Unknown screen](#) on page 59 has been improved.
- The [Trunk Group screen, page 4](#) on page 104 is new.
- A new procedure for setting a SIP endpoint as an OPS extension is presented in [SIP device as an OPS extension](#) on page 105.
- On the [IP Network Region screen](#) on page 52:
  - The field Home domain is changed to **Authoritative Domain**.
  - The field **Intraregion IP IP Direct Audio** has a new definition.
  - The field **Interregion IP IP Direct Audio** has a new definition.
  - The field **Server IP address** has a new definition.
  - The field **Server port** has a new definition.

## Overview of Changes

- New material for the field [Secure SIP](#) on page 72 is provided.
- The [System Capacity screen](#) on page 80 screen has an improved discussion on how to count trunks.
- FNUs for Call Forwarding are added to [Requirement specifications](#) on page 107.

# Chapter 2: SIP Support in Avaya Communication Manager

This chapter describes the support for SIP (Session Initiated Protocol) that is incorporated into Avaya Communication Manager release 3.1.x, running an Avaya S8300, S8400, S8500 series, or S8700 series media server.

This section contains these major topics:

- [Introduction to SIP](#) on page 19
- [SIP-related support](#) on page 21
- [Requirements for SIP](#) on page 23
- [SIP administrative screens](#) on page 37
- [SIP device as an OPS extension](#) on page 105

---

## Introduction to SIP

This section introduces SIP for Avaya Communication Manager Release 3.1.x and is divided into two sections:

- [What is SIP?](#) on page 19
- [How does SIP integrate into your system?](#) on page 20

---

## What is SIP?

SIP is an endpoint-oriented signalling standard that is defined by the [Internet Engineering Task Force \(IETF\)](#). SIP is a text-based protocol based on elements of Hypertext Transfer Protocol (HTTP) and Simple Mail Transfer Protocol (SMTP). SIP supports several types of communication sessions that include voice, video, or instant text messaging.

As implemented by Avaya in Communication Manager, SIP trunking functionality is available on the Linux-based S8300, S8400, S8500 series, and S8700 series media servers.

SIP uses an [OATS](#) call flow model, in addition to others, and a URI-based feature access extension (Uniform Resource Indicator).

Because SIP-enabled endpoints are managed by Communication Manager, many features can be extended to these endpoints.

## SIP Support in Avaya Communication Manager

The media servers function in three ways:

- As [Plain Old Telephone Service \(POTS\)](#) gateways
- As support for name and number delivery between and among the various non-SIP endpoints that Communication Manager supports. These endpoints can be, for example, analog, Digital Communications Protocol (DCP), or [H.323](#) stations, and analog, digital or Internet Protocol (IP) trunks.
- As support for new SIP-enabled endpoints, such as the Avaya 4620 SIP telephone.

In addition to its calling capabilities, the SIP-enabled release of IP SoftPhone R5 and later, and SIP Softphone R2 and later, includes Instant Messaging (IM) client software, and provides full support for the existing H.323 standard for call control.

---

## How does SIP integrate into your system?

The support for SIP that is built into Avaya Communication Manager is designed to help SIP supplement your present system:

- SIP offloads registrations to SES servers and this improves registration and recovery time of system outages.
- SIP is built around published standards. These standards include both IETF Requests for comments (RFCs) and Internet-Drafts. The standards that the Avaya SIP solution implements include, but are not limited to, these standards:
  - RFC 3261 (SIP)
  - RFC 3265 (SIP Event Notification)
  - RFC 3515 (SIP REFER Method)
  - RFC 3842 (SIP Message Summary and Message Waiting Indication Event Package)
  - RFC 2327 (Session Description Protocol)
  - RFC 3264 (SDP Offer/Answer Model)
  - RFC 2617 (HTTP Digest Authentication)
  - RFC 3325, "*Network Asserted Identity*" is complied with on the SES proxy servers
  - RFC 3891, "*The SIP 'Replaces' Header*"
  - RFC 4028, "*Session Timers in the SIP*"
- SIP integrates with traditional circuit-switched interfaces and IP-switched interfaces. With this integration, the telecommunication system can evolve easily from a circuit-switched telephony infrastructures to next-generation IP infrastructures, including SIP.
- SIP positions customers to leverage, as needed, the increasing number and power of SIP-enabled applications, such as instant messaging and presence.

**Note:**

Building SIP support into Communication Manager adds another element to the modular family of Avaya components, which seamlessly delivers a business's voice and messaging capabilities over an IP network. Avaya continues enhancing the value it provides to customers in a standards-based, IP communications infrastructure.

Avaya uses a modular and extensible system architecture to implement SIP support. This architecture has a unique benefit for Avaya customers: the set of features SIP supports is augmented by those features that Communication Manager supports. Any media server that runs a SIP-enabled release of Communication Manager becomes, in effect, a telephony feature server. The Communication Manager media server is accessible from any SIP endpoint and provides access transparently to many telephony features that published SIP standards currently do not address.

---

## SIP-related support

The following sections describe additions made to support SIP in release 3.1.x Communication Manager running on the S8300, S8400, S8500 series, and S8700 series media servers:

- [Trunking](#) on page 21
- [Stations](#) on page 22
- [CDR](#) on page 22
- [Access control](#) on page 22

---

## Trunking

With support for SIP trunks, an enterprise can connect media servers to a SIP-enabled proxy server, specifically, an Avaya [SIP Enablement Services](#) which can then extend to a third-party SIP service provider. The trunk support in Communication Manager complies with SIP standards, specifically IETF RFC 3261, and so interoperates with any SIP-enabled endpoint/station that also complies with the standard.

In complex configurations with Avaya S8700 series media servers, the signaling-group properties in Communication Manager must be administered to match in certain ways. For more information see [SIP trunk engineering notes](#) on page 24.

### Stations

Support for SIP stations that use SIP trunks allows any fully compliant SIP telephone to interoperate with Avaya telephones. This means that any SIP telephone, from Avaya or a third party, that complies with the appropriate RFC or Internet-Draft standards can:

- Dial and be dialed as an extension in the enterprise dial plan.
- Put calls on hold and participate in transfers and conference calls.

SIP stations that are administered in Communication Manager as [off-PBX station \(OPS\)](#) stations support most Extended Access features, such as call park, call pick-up, and priority calls. To activate these features, use station buttons set up to dial special extensions, that is, Feature Name Extensions.

For more details, see *Avaya Extension to Cellular User's Guide*, Issue 6, doc ID 210-100-700, and the *Avaya Extension to Cellular and OPS Installation and Administration Guide*, Issue 7, doc ID 210-100-500.

---

### CDR

Avaya provides support for complete call detail records (CDR) for all SIP calls based on the URIs of the calls.

---

### Access control

Avaya provides support for full access control to external trunks from any telephone. Both SIP trunks and SIP endpoints require network access to an Avaya [SIP Enablement Services](#). Note that some other means of access control, such as a firewall, is usually required to control network access from outside the enterprise, that is, to the SES system and through it, to SIP trunks or SIP endpoints inside the enterprise.

---

## Requirements for SIP

The minimum requirements for SIP added to a Communication Manager installation are described in these sections:

- [Software](#) on page 23
- [Hardware](#) on page 23
- [Firmware](#) on page 24
- [SIP trunk engineering notes](#) on page 24
- [Related systems](#) on page 26

---

### Software

Support for SIP can be enabled in Communication Manager release R3.1.x running on any Linux-based media server. The appropriate Avaya remote feature activation (RFA) licensing files are also required.

---

### Hardware

The SIP-enabled release of Communication Manager runs on the following Avaya media servers:

- S8300
- S8400
- S8500 series: S8500 and S8500B
- S8700 series: S8700, S8710, and S8720

**Note:**

Any of these media servers may also control one or more Avaya media gateways.

All processor ethernet interfaces on S8400 or S8500 hardware, controlled LAN (CLAN) or processor CLAN (procr) IP interfaces must be configured correctly. For more information, see these documents:

*Administration for Network Connectivity for Avaya Communication Manager*, doc ID 555-233-504

## SIP Support in Avaya Communication Manager

For more information see the *SIP Enablement Services Installation and Administration Guide*, doc ID 555-245-705, Avaya's SIP proxy, endpoint registration and instant messaging server. This product connects to one or several Avaya Communication Manager media servers, and provides SIP-enabled applications such as enterprise instant messaging (IM) that uses the client in Avaya IP SoftPhone R5 or later, or the Avaya SIP SoftPhone R2 or later.

---

## Firmware

Note that SIP standards dictate that dual-tone multi frequency (DTMF) tones be supported within the RTP (Real Time Protocol) data stream. Interoperability with certain third-party, SIP-enabled devices may depend on this. This requirement further demands that the newest releases of Avaya's voice over IP (VoIP) engine be installed throughout your system to support RTP-payload.

For example, any TN2302AP circuit packs that are present in your system must have the most recent firmware version to support DTMF tones within the RTP data stream. [Table 3](#) shows what circuit pack you need for various versions of firmware and hardware.

**Table 3: TN2302AP hardware and firmware combinations**

	Media Processor	G700/G350/G250 Media Gateway VoIP
Minimum for SIP	V72	V22 or greater
Highly recommended	V93	V93

---

## SIP trunk engineering notes

The SIP signaling group administered on Communication Manager defines the characteristics of a signaling connection.

The total number of calls that can be carried over a single signaling connection is limited by the bandwidth available. There is no true physical trunk when using SIP. Because of this, there is no physical limit on how many calls or trunk members you can set up with a particular signaling connection.

However, using the signaling group and trunk group administrative screens in Communication Manager is also useful for SIP. Doing so extends several Communication Manager features to SIP. Communication Manager normally limits signaling groups to 255 trunk members, limiting each signaling group to 255 calls. For SIP groups, Avaya has removed the restriction that each combination of far-end and near-end IP address/port must be unique for each signaling group. For SIP groups, multiple signaling groups can use the same signaling connections.

More than one signaling group may be administered to share a signaling connection with exactly the same properties of:

- far-end node-name (fe-nn)
- far-end port (fe-pt)
- near-end node-name (ne-nn)
- near-end port (ne-pt).

This kind of administration supports more than 255 calls on the same SIP-based signaling connection, where a signaling connection is defined as <near-end node-name, near-end port, far-end node-name, far-end port>.

For an incoming call, Communication Manager 3.1.x compares the caller's domain, as specified in the header of the SIP INVITE message, with the far-end domains specified for the administered SIP signaling groups. If there is a signaling group with a matching far-end domain, that signaling group and its associated trunking resources will be used to handle the incoming SIP call. If there is not a match, then a signaling group with a blank entry for far-end domain will be used. Avaya recommends that at least one SIP signaling group per signaling connection be administered with a blank domain. This blank domain terminates calls from any far-end domains not specifically assigned to other groups. Otherwise, if no matching or blank groups exist, then any SIP signaling group that has trunks available may be used.

All signaling groups that have identical node names/ports, as well as the SIP trunks groups using each of these signaling groups, should be administered with identical properties. That is, fields on this screen should match the analogous fields on the administrative screens. Of course, different SIP signaling connections will differ with respect to their near-end and/or far-end node names/port numbers, and they *should* have their SIP trunk's signaling groups administered accordingly. It is not appropriate to administer them identically.

In Communication Manager, the number of simultaneous SIP signaling connections is limited to 16. You may administer more than 16, but the run-time limit of simultaneous signaling connections is 16. Remember that a signaling connection is *not* the same as a signaling group, and that more than one SIP signaling group can and should share the same signaling connection.

---

## TLS links for failover

There are 16 available TLS links in SES 3.1.x and Communication Manager 3.1.x. For each SIP signaling group administered, when active, it will utilize 1 link on each system (near-end and far-end). In duplexed home server configurations, reserve some TLS links to support failover.

If your configuration is a duplexed SES home server, and some fault occurs that causes a failover to the standby home server, the newly active home server sets up TLS link to the media server running Communication Manager. It might take 15 minutes to bring down the TLS link to the previously active SES Home).

TLS link utilization is real-time. SES and Communication Manager set up TLS links for SIP when they send the very first SIP request, such as INVITE, or SUBSCRIBE/NOTIFY. The link remains active as long as there is SIP message traffic.

Note that the limit of 16 TLS links is a restriction of the Communications Manager.

For example, if you have 10 SIP trunk groups, you have the possibility of a maximum of 10 TLS links in use at one time.

You can have multiple CLANs associated with an SES. With multiple CLANs, you can administer them for load sharing purposes. The Avaya SIP solution does not support alternate CLANs to handle CLAN failure scenarios.

From the SES administrator's perspective, each SIP endpoint is administered so that it uses one of the available CLANs. If there is an SES home with 3,000 users, and you administer two CLANs to support that SES home, administer 1,500 SIP endpoints to use CLAN #1 and the other 1,500 to use CLAN #2. If CLAN#1 goes down, then those 1,500 SIP endpoints would not be able to make calls. Currently there is no mechanism to administer an alternate CLAN on the SES administration screens.

---

## Related systems

See the *SIP Enablement Services Installation and Administration* document, Issue 2, doc ID 555-245-705, for details on the SIP proxy server.

See the following documentation for details on setting up and using for your Avaya 4600 series SIP telephone as a station for SIP voice calling:

- *4600 series SIP Telephone User's Guide*, doc ID 16-300035
- *4600 series SIP Telephone Administrator's Guide*, doc ID 16-300037
- *4600 series SIP Telephone Quick Setup Guide*, doc ID 16-300158
- *4600 Series IP Telephone R2.2 LAN Administrator's Guide*, doc ID 555-233-507
- *4600 Series IP Telephone R2.2 Installation Guide*, doc ID 555-233-128
- *4602/4602SW SIP Telephone R2.2 User's Guide*, doc ID 16-300470
- *4602/4602SW SIP Telephone Quick Reference*, doc ID 16-3004715
- *4610SW SIP Telephone R2.2 User's Guide*, doc ID 16-300472
- *4610SW SIP Telephone Quick Reference*, doc ID 16-300473
- *4620SW/4621SW SIP Telephone R2.2 User's Guide*, doc ID 16-300474
- *4620SW/4621SW SIP Telephone Quick Reference*, doc ID 16-300475
- *4600 Series IP Telephone Documentation Library*, doc ID 16-300091

For an overview of the different components and the associated tasks that support Avaya's SIP solution, see the *SIP Implementation Guide*, doc ID 16-300140.

# Chapter 3: Administering Communication Manager for SIP Enablement Services

This chapter describes the screens to visit and the fields to change so that your SES and Communication Manager system can run SIP trunks to the SES.

For detailed information and rationale about these steps, look at these sections:

- [SIP administrative screens](#) on page 37
- [SIP device as an OPS extension](#) on page 105

---

## Administering Communication Manager for SIP

This section describes how to administer and configure SIP on a Communication Manager system so that Communication Manager can support SIP endpoints. You administer and configure the system with Communication Manager screens, some of which are specific to SIP.

Most likely, you have been directed to this point from the section in the SES installation procedures, from the section, *Administering Communication Manager and endpoints*. All installation work discussed prior to this point should be correctly completed.

Communication Manager must be functioning properly before you begin SIP administration. If your Communication Manager installation uses the Enhanced Meet Me conferencing feature, install that feature before beginning the following administration steps.

To administer SIP trunks in Communication Manager 3.1.x, complete the steps here. As you work through each step, you will find links to examples of screens if you need them.

You can administer SIP endpoints on Communication Manager using SCCAN, OPS, or both. OPS gives you advanced SIP telephony. SCCAN enables dual mode, that is, wireless and GSM, phones using SIP.

- [Prepare Communication Manager](#) on page 28
- [Administer SIP trunks](#) on page 31
- [Administer call routing](#) on page 33
- [Administer SCCAN](#) on page 35
- [Redirect calls off net](#) on page 36

## Prepare Communication Manager

Do these steps first.

1. Verify that your system supports and is correctly configured for IP connectivity.

See *Administration for Network Connectivity for Avaya Communication Manager*, doc ID 555-233-504.

2. Go to the **System Capacity** screen.

[Figure 14: System Capacity screen](#) on page 80.

Check the values for the field **SIP Trunks (included in "Trunk ports")**.

If no values are displayed here, it means that your SIP has not been licensed properly. You cannot proceed. Correct SIP licensing problems and begin here after that.

3. Go to the **System-Parameters Customer-Options screen page 4**.

[Figure 19: System Parameters Customer Options screen, page 4](#) on page 87.

Check the following values:

- a. Set the field **ISDN PRI** to **y**.
- b. Verify that the **IP Trunks** field is set to **y**.
- c. Set Enhanced **EC500** to **y**.

You must log off and log back in to effect changes to System Parameters Customer-Options screens.

4. Go to the **System Parameters Customer-Options screen page 2**.

[Figure 18: System Parameters Customer Options screen, page 2](#) on page 86

Verify that the **Maximum Administered SIP Trunks** field has a value within these ranges:

- 0 through 400 for S8300 servers
- 0 through 500 for S8400 servers
- 0 through 800 for S8500 servers
- 0 through 5000 for S8700/S8710/S8720 servers

You must log off and log back in to effect changes to System Parameters Customer-Options screens.

5. Go to the **System Parameters Customer Options screen, page 1**

[Figure 17: System Parameters Customer Options screen, page 1](#) on page 84.

Use the three fields at the bottom:

- **Maximum Off-PBX Telephones - EC500, for cell phones**
- **Maximum Off-PBX Telephones - OPS, for advanced SIP telephony phones**
- **Maximum Off-PBX Telephones - SCCAN, for wireless and cellular phones**

In each, enter the number of stations you want to set up for each type of Off-PBX phone.

You must log off and log back in to effect changes to System Parameters Customer-Options screens.

6. Go to the **IP Node Names screen**.

[Figure 5: IP Node Names screen](#) on page 56.

Check all fields there.

7. Go to the **IP Address Mapping** screen.

[Figure 3: IP Network Map screen](#) on page 50.

Enter the IP address and host name for the administered SES server on your network in the corresponding fields.

8. Go to the **IP Network Region screen** to assign an IP network region for the SIP trunk.

[Figure 4: IP Network Region screen](#) on page 52.

- a. In the **Authoritative Domain** field, enter the SIP domain name for which this network region applies. This same SIP domain name is used in the SES interface.
- b. Set the field **Intra-region IP-IP Direct Audio** to y.
- c. Set the field **Inter-region IP-IP Direct Audio** to y
- d. Set the field **Server IP Address** to the IP address of the RTCP Monitor server.
- e. Set the field **Server Port** to the RTCP Monitor server.

9. Go to the **Signaling Group screen page 1**.

[Figure 12: Signaling Group screen, Page 1](#) on page 74.

- a. Type **sip** in the **Group Type** field. The system displays a screen for SIP groups.
- b. Verify that the **Transport Method** field contains the default value of **tls**.
- c. In the **Near-end Node Name** field, enter the name of the IP interface at the near (local) end of the SIP trunk signaling group.

For the S8300, S8400, or S8500 media server, the value of this entry is typically **procr**.

For an S8700 series media server, the entry is the **node name** for the selected CLAN or procr interface.

## Administering Communication Manager for SIP Enablement Services

- d. In the **Far-end Node Name** field, enter the name of the node you administered as the SIP proxy server in Step 6.
- e. In the **Near-End Listen Port** field, type the recommended TLS port value of **5061**.
- f. In the **Far-end Listen Port** field, type the recommended TLS port value of **5061**.
- g. For the **Far-end Network Region** field, if you want the SIP proxy server you administered in Step 6 to use the codec set and/or parameters specified for an IP network region to be different from that of the LAN IP interface, then enter the SIP proxy's region.
- h. In the field **DTMF over IP**, make sure the value is **rtp-payload**.
- i. The recommended value for the field **SIP Session Establishment Timer** is 3 minutes.

---

## Administer SIP trunks

Use these steps to set up SIP trunks on Communication Manager.

1. Go to the **System Parameters Features screen page 1**.

[System Parameters Feature screen Page 1 on page 82](#),

Set the **DID/Tie/ISDN/SIP Intercept Treatment** field to **attd**.

Verify that the **Trunk-to-Trunk Transfer** field is set to **restricted**.

2. Go to the **Trunk Group screen page 1**.

[Figure 21: Trunk Group screen, page 1](#) on page 90:

- a. Type **sip** in the **Group Type** field. The screen displays fields pertinent for SIP groups. An entry of **sip** also affects the fields presented on other administrative screens discussed later.
- b. Depending on your need for call detail recording, type **y** for yes or **n** for no in the **CDR Reports** field. Note that very large numbers of CDR reports may be generated by SIP calling.
- c. Type the number of the SIP signaling group you previously administered in the **Signaling Group** field.
- d. Enter a value of 0 through 255 for the number of SIP trunks belonging to this group in the **Number of Members** field.

Group Member Assignments are automatically completed and populated on the [Trunk Group screens on page 90](#), and on any subsequent pages necessary, based on the values that you entered on the **Trunk Group screens**. Group members cannot be administered individually. All members of each administered group share the same characteristics.

**Note:**

The total number of all SIP trunks specified for all groups must be less than or equal to the value in the **Maximum Administered SIP Trunks** field on the **System-Parameters Customer Options** screen. For more information see [Figure 14: System Capacity screen](#) on page 80.

- e. Repeat the preceding Steps a. through d. for each SIP trunk group you want to assign, up to your media server's trunk-number limit.
3. Go to the [Trunk Group screen, Page 2](#) on page 98.

Set the field **Group type** to **sip**.

Administer the other fields on this screen as necessary for your system.

4. Go to the **Trunk Group screen page 3**.

[Trunk Group screen, page 3](#) on page 101.

Verify that the value in the **Numbering Format** field is what you want, Public, Private, unk-pvt, or Unknown.

Administer the other fields on this screen as necessary for your system.

5. Go to the **Trunk Group screen page 4**.

[Trunk Group screen, page 4](#) on page 104.

Set the field **Mark User as Phone** to **y** for a particular trunk *only* if a device or network connected to that SIP trunk requires the **User as Phone** parameter. Set to **y** if a public network trunks through a SIP service provider.

6. Go to the **Numbering - Public/Unknown Numbering screen** and assign public unknown numbering data.

[Figure 7: Numbering - Public/Unknown Numbering screen, page 1](#) on page 61.

7. Go to the **Station screen page 1**.

[Figure 13: Station screen page 1](#) on page 79.

Set Type to 46xx. If using 46xx as the Type, you will have minor alarms for these stations. You may ignore these alarms.

If you set the Type to DCP, there are some undesirable interactions with the TTI as well as other features.

8. Go to the **Configuration Set screen page 1**.

[Figure 2: Configuration Set screen](#) on page 44.

Assign SIP telephone based on phone type.

Change the field **Configuration Set Description** to SIP phone.

9. Go to the **Off-pbx Station Mapping screen page 1**.

[Figure 8: Off-pbx station mapping screen page 1](#) on page 64.

Adding station mapping data for SIP endpoints.

10. Go to the **Off-pbx Station Mapping screen page 2**.

[Figure 9: Off-pbx station mapping screen page 2](#) on page 68.

Adding station mapping data for SIP endpoints.

---

## Administer call routing

Before you can make SIP calls from endpoints connected to Communication Manager, administer call routing properly in Communication Manager.

1. Go to **Feature Access Code** screen.

[Feature Access Codes screen page 1](#) on page 49.

You may set either the ARS Access code fields, or the AAR Access code field or both. To enable these fields, make sure that on the **System Parameters Customer Options** screen page 5, the **Private Networking** field is set to **y**. See [Figure 20](#) on page 89.

2. Go to the **ARS Digit Analysis Table** screen.

[Figure 1: ARS Digit Analysis Table screen](#) on page 39,

Administer this screen to make sure that dialed strings of digits will be interpreted correctly and the resulting calls routed appropriately using the SIP trunks that you administered in Step 2 through Step 5 in the section [Administer SIP trunks](#) on page 31.

**Note:**

You may not access a SIP trunk with a dialed TAC.

3. Go to the **Route Pattern** screen.

[Figure 10: Route Pattern screen on page 71](#).

Verify that the **Secure SIP** field is set to the default value of **n** for routing through a public network.

You can set **secure sip** to **y** only if you have a secure connection between the public SIP network and the SES home server you are routing to.

Choose a route pattern. Fill in the correct trunk, FRL, and number of digits to insert and delete.

This task can be performed using either AAR or ARS. The most frequent case would be for ARS.

4. Go the **Numbering-Public/Unknown Numbering** screen.

[Figure 7: Numbering - Public/Unknown Numbering screen, page 1](#) on page 61.

Make an entry here for the trunk you are using in your route pattern.

5. Go to the **Locations** screen.

[Figure 6: Locations screen on page 58](#)

, type the appropriate **Proxy Selection Route Pattern** in the field corresponding to each location employing a SIP proxy server.

6. Go to the **IP Network Map** screen.

[Figure 3: IP Network Map screen on page 50.](#)

Use the **IP Network Map** screen to allow the system to identify the location of a caller who dials a 911 emergency call from a SIP endpoint. For more information on this topic, see the *Screen Reference* chapter in the *Avaya Communication Manager Administrator Guide*, 03-300509.

- a. Use the **ip-network map** command to go to the **IP Address Mapping** screen and map emergency calls.
- b. Go to the [IP Network Map screen on page 50](#) using the `ip-network-map` command.

SIP endpoint users have the capability of moving from place to place. They can be unregistered at one location and moved to another when they log in to a SIP phone.

To ensure that SIP phones send the correct emergency number, enter the range (From IP Address, To IP Address) of your SIP phones in the IP Address Mapping screen.

- c. In the **Emergency Location Extension** field, enter the extension number you want your SIP telephones to send to the public Safety Answering Point, for example, `911@company.com`.

This extension number will be prepended by your entry in the Public Numbering table for the trunk you are using. If you have several locations, make multiple entries in the IP Addressing Map screen. Each entry will need an emergency location extension.

---

## Administer SCCAN

Perform this administration if you will be using the SES feature Adjunct Systems, or if you have a need for Seamless Converged Communications Across Networks (SCCAN) routing for specific wireless and cellular phones.

Go to the **SCCAN-Related System Parameters** screen.

[Figure 11: SCCAN-Related System Parameters screen](#) on page 73.

If your system uses the Adjunct Systems feature, set the field **MM(WSM) Route Pattern:** according to the SAT values for your system.

The discussions of SCCAN are found in the materials for EC500. See the EC500 installation and administration guide, doc ID 210-100-500, Comcode 700211204. Also see <http://www.avaya.com/gcm/master-usa/en-us/corporate/alliances/alliance/companies/motorolaproximv30.htm&Filter=Name:SCCAN%20Forum>.

## Redirect calls off net

You may want to do additional administration to direct the coverage of calls redirected off-network (CCRON).

Communication Manger monitors the progress of calls from inception to conclusion. If calls go off net, Communication Manger will never recognize the call as completed. Because of the virtual nature of SIP trunks, set this to n to enable call classification over interworked trunks.

Go to the **System Parameters—Call Coverage/Call Forwarding screen**.

[Figure 16: System Parameters—Call Coverage/Call Forwarding screen](#) on page 83.

Set the field **Disable Call Classifier for CCRON over SIP trunks** to **y** or **n**, depending on your system.

For SIP, this field is usually set to n.

# Chapter 4: Communication Manager screen details for SIP

This section contains properly populated screens that you might need to check as you administer Communication Manager for SIP trunking.

---

## Best Practices

- When you add a SIP station in Communication Manager, use DCP set types that can be X-ported. This prevents excessive alarming caused by using 46xx set types.  
  
If you use 46xx station types, you will have minor alarm for these stations. You may ignore these alarms.  
  
If you use DCP station types, there are some undesirable interactions with the TTI as well as other features. Some trunk types do not allow TTI'ed X-ported stations to call over them (like SBS trunks).
- When you add the SIP station in Communication Manager, DO NOT use 4602 or 2402 set types. Even the 4602 SIP telephone needs at least three call appearances to deal with conference and transfer operations.
- Similarly, on the **change off-pbx-telephone station-mapping x** form, on page 2, the **Call Limit** should be at least **3**, but also should match what the telephone has if the telephone has more than 3 call appearances (default is **2**).

---

## SIP administrative screens

These Communication Manager screens contain details about how to administer them to support SIP trunking:

- [ARS Digit Analysis Table screen](#) on page 39
- [Configuration Set screen](#) on page 44
- [Feature Access Codes screen page 1](#) on page 49
- [IP Network Map screen](#) on page 50
- [IP Network Region screen](#) on page 52
- [IP Node Names screen](#) on page 56
- [Locations screen](#) on page 58

## Communication Manager screen details for SIP

- [Numbering—Public/Unknown screen](#) on page 59
- [Off-PBX Station Mapping screen page 1](#) on page 64
- [Off-PBX Station Mapping screen page 2](#) on page 68
- [Route Pattern screen](#) on page 71
- [SCCAN-Related System Parameters screen](#) on page 73
- [Signaling Group Page 1 screen](#) on page 74
- [Station screen, page 1](#) on page 79
- [System Capacity screen](#) on page 80
- [System-Parameters screens](#) on page 81
- [SIP device as an OPS extension](#) on page 105
- [Trunk Group screens](#) on page 90

These screens deal with SIP administration. Every effort, when possible, has been made to put correct field values in the screen examples. Look at them carefully.

Only SIP-related screens are described in this document. In all instances of screens and table descriptions, see the *Administration for Network Connectivity for Avaya Communication Manager* and the *Avaya Communication Manager Administrator Guide*, 03-300509, for more details about all Avaya Communication Manager screens and fields, including the SIP-related ones presented here.

Other screens that may or may not require your attention are found on [SIP device as an OPS extension](#) on page 105. The features and configuration of your SES SIP network determines what you administer on these screens. See [SIP device as an OPS extension](#) on page 105.

## ARS Digit Analysis Table screen

Avaya Communication Manager compares dialed numbers with the dialed strings in this table and determines the route pattern for the number.

If you alter data in this table, resynchronize data as described in the document *Installing and Administering SES*, the section titled Data Synchronization between Communication Manager and PPM.

**Figure 1: ARS Digit Analysis Table screen**

change ars analysis						Page 1 of X
ARS DIGIT ANALYSIS TABLE						
Location: _____						Percent Full: _____
Dialed String	Total Min Max	Route Pattern	Call Type	Node Num	ANI Reqd	
_____	___ ___	_____	_____	_____	n	
_____	___ ___	_____	_____	_____	n	
_____	___ ___	_____	_____	_____	n	
_____	___ ___	_____	_____	_____	n	
_____	___ ___	_____	_____	_____	n	
_____	___ ___	_____	_____	_____	n	
_____	___ ___	_____	_____	_____	n	
_____	___ ___	_____	_____	_____	n	

## ANI Reqd

Valid entries	Usage
y/n	Enter <b>y</b> if ANI is required on incoming R2-MFC or Russian MF ANI calls. This field applies only if the <b>Request Incoming ANI (non-AAR/ARS)</b> field on the <b>Multifrequency-Signaling-Related System Parameters</b> screen is <b>n</b> .
r	Allowed only if the <b>Allow ANI Restriction on AAR/ARS</b> field on the <b>Feature Related System Parameters</b> screen is <b>y</b> . Use to drop a call on a Russian Shuttle trunk or Russian Rotary trunk if the ANI request fails. Other types of trunks treat <b>r</b> as <b>y</b> .

## Call Type (for AAR only)

In this field in [Figure 1](#), enter the call type associated with each dialed string. Call types indicate numbering requirements on different trunk networks. ISDN Protocols are listed in the table below.

Valid entries	Usage
<b>aar</b>	Regular AAR calls.
<b>intl</b>	The Route Index contains public network ISDN trunks that require international type of number encodings.
<b>pubu</b>	The Route Index contains public network ISDN trunks that require international type of number encodings.
<b>lev0 to lev2</b>	Specify ISDN Private Numbering Plan (PNP) number formats.

### ISDN Protocol

Call Type	Numbering Plan Identifier	Type of Numbering
<b>aar</b>	E.164(1)	national(2)
<b>intl</b>	E.164(1)	international(1)
<b>pubu</b>	E.164(1)	unknown(0)
<b>lev0</b>	PNP(9)	local(4)
<b>lev1</b>	PNP(9)	Regional Level 1 (2)
<b>lev2</b>	PNP(9)	Regional Level 2 (1)

## Call Type (for ARS only)

Valid entries	Usage	Usage in China #1
<b>alrt</b>	Alerts attendant consoles or other digital telephones when an emergency call is placed	normal
<b>emer</b>	emergency call	normal
<b>fnpa</b>	10-digit North American Numbering Plan (NANP) call (11 digits with Prefix Digit "1")	attendant
<b>hnpa</b>	7-digit NANP call	normal
<b>intl</b>	public-network international number	toll-auto
<b>iop</b>	international operator	attendant
<b>locl</b>	public-network local number	normal
<b>lpvt</b>	local private	normal
<b>natl</b>	non-NANP	normal
<b>npvt</b>	national private	normal
<b>nsvc</b>	national service	normal
<b>op</b>	operator	attendant
<b>pubu</b>	public-network number (E.164)-unknown	normal
<b>svcl</b>	national(2)	toll-auto
<b>svct</b>	national(2)	normal
<b>svft</b>	service call, first party control	local
<b>svfl</b>	service call, first party control	toll

## Dialed String

In [Figure 1](#), user-dialed numbers are matched to the dialed string entry that most closely matches the dialed number. For example, if a user dials 297-1234 and the AAR or ARS Digit Analysis Table has dialed string entries of 297-1 and 297-123, the match is on the 297-123 entry.

## Communication Manager screen details for SIP

An exact match is made on a user-dialed number and dialed string entries with wildcard characters and an equal number of digits. For example, if a user dials 424, and there is a 424 entry and an X24 entry, the match is on the 424 entry.

Valid entries	Usage
0 to 9	Enter up to 18 digits that the call-processing server analyzes.
*,x,X	Wildcard characters

## Location (for the ARS Digit Analysis Table)

This is a display-only field on the ARS Digit Analysis Table screen shown in [Figure 1](#).

Valid entries	Usage
1 to 64	Defines the location of the server running Avaya Communication Manager that uses this ARS Digit Analysis Table. On the System-Parameters Customer-Options screen, the ARS field and the Multiple Locations field must be set to y for values other than all to appear.
all	Indicates that this ARS Digit Analysis Table is the default for all port network (cabinet) locations. Appears only if the Multiple Locations field is n on the System-Parameters Customer-Options screen.

## Max

In [Figure 1](#) this is the Total Max field.

Valid entries	Usage
Between <b>Min</b> and <b>28</b>	Enter the maximum number of user-dialed digits the system collects to match to the dialed string.

## Min

In [Figure 1](#) this is the Total Min field.

Valid entries	Usage
1 to Max	Enter the minimum number of user-dialed digits the system collects to match to the dialed string.

## Node Num

In [Figure 1](#), enter the number of the node.

Valid entries	Usage
1 to 999 or blank	Enter the number of the destination node in a private network if you are using node number routing or FCS. If you complete this field, leave the <b>Route Index</b> field blank.

## Percent Full

This field in [Figure 1](#) displays the percentage (0 to 100) of the system's memory resources that have been used by AAR/ARS. If the figure is close to 100%, you can free up memory resources.

## Route Pattern

In this field in [Figure 1](#), enter the route number you want the server running Avaya Communication Manager to use for this dialed string.

Valid entries	Usage
p1 to p2000	Specifies the route index number established on the Partition Routing Table.
1 to 640	Specifies the route patterns used route the call.
1 to 999	Specifies the route pattern used to rout the call. For S8300 media server only.
r1 to r32	Specifies the remote home numbering plan area table. Complete this field if RHNPA translations are required for the corresponding dialed string.
node	Designates node number routing.
deny	Block the call.

---

## Configuration Set screen

This screen defines a number of call treatment options for EC500 cell telephone calls. The EC500 allows the use of up to 10 Configuration Sets, which are already defined in the system using default values.

For SIP, set the field **Configuration Set Description** to SIP Phone. Fill out the other fields to meet the needs of your SIP endpoints.

---

**Figure 2: Configuration Set screen**

```
change off-pbx-telephone configuration-set 1                               Page 1 of 1

                                CONFIGURATION SET: 1

    Configuration Set Description: _____
        Calling Number Style: network
        CDR for Origination: phone-number
CDR for Calls to EC500 Destination? y
    Fast Connect on Origination? n
    Post Connect Dialing Options: dtmf
    Cellular Voice Mail Detection: none
        Barge-in Tone? n
    Calling Number Verification? y
        Identity when Bridging: principal
```

---

## Barge-In Tone

The barge-in tone adds security to Extension to Cellular. If a user is on an active Extension to Cellular call and another person joins the call from the Extension to Cellular enabled office phone, all parties on the call hear the barge-in tone. Default is **n**.

## Calling Number Style

Determines the format of the caller ID for calls from a local Avaya Communication Manager extension to an Extension to Cellular telephone.

Valid entries	Usage
<b>network</b>	Provides a display of only 10-digit numbers. For internal calls, the ISDN numbering tables are used to create the calling number and DCS calls use the ISDN calling number if provided. The externally provided calling number is used when available for externally originated calls.
<b>pbx</b>	Provides a display of less than 10-digits. Extensions sent as the calling number for all internally- and DCS network-originated calls.

## Calling Number Verification

You can restrict what types of calls can be made to an Extension to Cellular cell phones. Accepted calling numbers can be either "network provided" or "user provided, verified, and passed". An incoming call will not be allowed to reach the cell phone if both of the following are true:

- The Calling Number Verification field is set to y
- and
- The incoming call is not "network provided" or "user provided, verified, and passed".

The default value of y has no effect on normal usage of the Extension to cellular feature. You might change the field to n if the switch is part of a private network.

## CDR for Calls to EC500 Destination

Determines whether a call detail record is generated for any call to the cell phone.



### Important:

CDR reporting for Extension to Cellular calls relies on the CDR Reports field on the Trunk Group screen. If, on the Trunk Group screen, the CDR Reports field is n, no CDR is generated, even if this field is set to y.

Valid entries	Usage
y	Treats calls to the XMOBILE station as trunk calls and generates a CDR.
n	Treats calls to the XMOBILE station as internal calls and does not generate a CDR.

## CDR for Origination

You can generate CDR records for a call that originates from an Extension to Cellular cell phone. To generate this CDR, you must enable the Incoming Trunk CDR. The CDR report does not include dialed Feature Name Extensions (FNEs). The entries for this field determine the CDR report format.

Valid entries	Usage
phone-number	The calling party on the CDR report is the 10-digit cell phone number. This is the default.
extension	The calling party on the CDR report is the internal office phone extension associated with the Extension to Cellular cell phone
none	The system does not generate an originating CDR report.

## Cellular Voice Mail Detection

Cellular Voice Mail Detection prevents cellular voice mail from answering an Extension to Cellular call. When you enable Cellular Voice Mail Detection, the call server detects when the cell phone is not the entity that answers the call and brings the call back to the server. Communication Manager treats the call as a normal call to the office phone and the call goes to corporate voice mail. You can also set a timer for cellular voice mail detection that sets a time before Cellular Voice Mail Detection investigates a call.

Valid fields	Usage
none	Default is <b>none</b>
timed	Amount of time from 1-9 seconds (default = 4 sec)
message	Detect carrier voice mail

## Configuration Set Description

Describes the purpose of the configuration set.

Valid entries	Usage
Up to 20 alphanumeric characters or blank	For example, EC500 handsets. For SIP, enter <b>SIP Phone</b> .

## Fast Connect on Origination

Determines whether some additional processing occurs on the server running Avaya Communication Manager prior to connecting a call.

Enter y to send CONNECT messages.

## Identity When Bridging

This field determines whether the telephone display shows the literal identity of the bridged appearance or the virtual identity.

Valid entries	Usage
station	Shows the callers assigned identification.
principal	Shows the location from where the caller is bridging in.

For example:

- x is principal
- y has a bridge of x

If Identity is set to station, when y calls from the bridge of x, y is displayed on the phone.

if Identity is set to principal, when y calls from the bridge of x, x is displayed.

## Post Connect Dialing Options

Determines whether additional capabilities, beyond standard ISDN dialing, are available for those incoming ISDN trunk calls that are mapped into XMOBILE stations. These options come into effect after the call has entered the active state (Communication Manager has sent a CONNECT message back to the network).

Valid entries	Usage
<b>dtmf</b>	Expect digits from either in-band or out-of-band, but not simultaneously. The server allocates a DTMF receiver whenever it needs to collect digits. This option normally would be used for Extension to Cellular XMOBILE station calls.
<b>out-of-band</b>	Expect all digits to be delivered by out-of-band signaling only. The server running Avaya Communication Manager collects digits that it needs from the out-of-band channel (no touch-tone receiver). In addition, any digits received when the server is not collecting digits are converted to DTMF and broadcast to all parties on the call. This option is in force for DECT XMOBILE station calls.
<b>both</b>	Expect all subsequent digits to be delivered by simultaneous in-band and out-of-band signaling. Out-of-band signaling consists of digits embedded in ISDN INFO messages while the in-band signaling consists of DTMF in the voice path. The server running Communication Manager collects all digits that it needs from the out-of-band channel. No touch tone receive is allocated in order to prevent collecting double digits. End-to-end signaling occurs transparently to the server via in-band transmission of DTMF. This option is in force for PHS XMOBILE station calls.

## Feature Access Codes screen page 1

This screen assigns feature access codes (FACs) that, when dialed, activate or cancel the system features. Each field on this screen has the same valid values, which must conform to feature access codes or dial access codes as defined by your dial plan.

The SIP-related field is in bold.

change feature-access-codes	Page 1 of x
FEATURE ACCESS CODE (FAC)	
Abbreviated Dialing List1 Access Code:	_____
Abbreviated Dialing List2 Access Code:	_____
Abbreviated Dialing List3 Access Code:	_____
Abbreviated Dial - rgm Group List Access Code:	_____
Announcement Access Code:	_____
Answer Back Access Code:	_____
Attendant Access Code:	_____
<b>Auto Alternate Routing (AAR) Access Code:</b>	_____
<b>Auto Route Selection (ARS) Access Code1:</b>	_____ Access Code 2: _____
Automatic Callback Activation:	_____ Deactivation: _____
Call Forwarding Activation Busy/DA: _____ All: _____	Deactivation: _____
Call Park Access Code:	_____
Call Pickup Access Code:	_____
CAS Remote Hold/Answer Hold-Unhold Access Code:	_____
CDR Account Code Access Code:	_____
Change COR Access Code:	_____
Change Coverage Access Code:	_____
Contact Closure Open Code:	_____ Close Code: _____
Contact Closure Pulse Code:	_____

### Auto Alternate Routing (AAR) Access Code

Used to access AAR.

### Auto Route Selection (ARS) Access Code1

Used to access ARS. You can have one ARS access code for local and one for long distance, and route accordingly.

## IP Network Map screen

The **IP Address Mapping** screen in [Figure 3](#) shows the SIP-related information in bold.

Administering this screen is not required if you do not use Emergency Contacts as part of your SES system.

If you alter data in this table, resynchronize data as described in the document *Installing and Administering SES*, the section titled Data Synchronization between Communication Manager and PPM.

**Figure 3: IP Network Map screen**

change ip-network-map						Page 1 of x
IP ADDRESS MAPPING						
From IP Address	(To IP Address)	Subnet or Mask)	<b>Region</b>	VLAN	<b>Emergency Location Extension</b>	
__1.__2.__3.__0	__1.__2.__3.255	24	<b>__1__</b>	__3	_____	
__1.__2.__4.__4	__1.__2.__4.__4	32	<b>__2__</b>	__0	_____	
__1.__2.__4.__5	__1.__2.__4.__5	__	<b>__3__</b>	__0	_____	
__1.__2.__4.__6	__1.__2.__4.__9	__	<b>__4__</b>	__4	_____	

**Note:**

In Communication Manager, use this screen to allocate resources for both H.323 and SIP endpoints.

The IP Address Mapping screen for 911 calls allows the administrator to have a range of IP addresses in a location. You can then assign a 911 number that will be sent to the Public Safety Answering Point (PSAP) if any of the phones within that range of 911 IP addresses makes an emergency call.

You can also have another range of addresses for another location with an assigned 911 number.

If a user in one location moves to the second location, and makes an emergency call, the user's endpoint sends the correct CPN to the PSAP. Without using the ip-network-map, each SIP station sends out its own number if it makes an emergency call.

This step is important in distributed Communication Manager environments in which network bandwidth may be consumed unnecessarily for calls among SIP and other endpoints.

## Region

This field in [Figure 3](#) identifies the network region for the IP address range. Make sure the Region value you set here reflects the Authoritative Region on screen [IP Network Region screen](#) on page 52.

If this screen does not correlate with the IP Network Region screen correctly, calls will not be processed successfully. Communication Manager may not assume its authoritative role for the call and routes back out to the proxy. The proxy then redirects back to Communication Manager. In the **Locations** form shown on page 58, the **proxy sel. rte. pat.** field causes the call to route out to the proxy. But if this were not configured, the call would be rejected with a 403 Screening Failure.

For SIP, the setting for Region must be the same as the Region field in the [IP Network Region screen](#) on page 52.

Valid entries	Usage
1 to 250	The network region number for this interface.  This field must contain a non-blank value if the <b>From IP Address</b> field on the same row contains a non-blank value.

## Emergency Location Extension

This field in [Figure 3](#) allows the system to properly identify the location of a caller who dials a 911 emergency call from this station. An entry in this field must be of an extension type included in the dial plan, but does not have to be an extension on the local system. It can be a UDP extension. The entry defaults to blank. A blank entry typically would be used for an IP softphone dialing in through PPP from somewhere outside your network.

If you populate the IP Address Mapping screen with emergency numbers, the feature functions as follows:

- If the Emergency Location Extension field in the Station screen is the same as the Emergency Location Extension field in the IP Address Mapping screen, the feature sends the extension to the Public Safety Answering Point (PSAP).
- If the Emergency Location Extension field in the Station screen is different from the Emergency Location Extension field in the IP Address Mapping screen, the feature sends the extension in the IP Address Mapping screen to the Public Safety Answering Point (PSAP).

Valid entries	Usage
0 to 9 (up to 7 digits)	Enter the emergency location extension for this station. Default is blank.

### Note:

On the ARS Digit Analysis Table screen, you must administer 911 to be call type emer or alrt in order for the E911 Emergency feature to work properly.

---

## IP Network Region screen

The SIP-related fields are in bold in [Figure 4](#):

---

**Figure 4: IP Network Region screen**

```
change ip-network-region 1                                     Page 1 of 19
                                                                IP NETWORK REGION
Region: 1
Location: 1
Name:
Authoritative Domain:
Intra-region IP-IP Direct Audio: y
Inter-region IP-IP Direct Audio: y
IP Audio Hairpinning? y
MEDIA PARAMETERS
Codec Set: 1
UDP Port Min: 2048
UDP Port Max: 3028
RTCP Reporting Enabled? y
RTCP MONITOR SERVER PARAMETERS
Use Default Server Parameters? n
Server IP Address: . . .
Server Port: 5005
DIFFSERV/TOS PARAMETERS
Call Control PHB Value:
Audio PHB Value:
Video PHB Value:
RTCP Report Period(secs): 5
802.1P/Q PARAMETERS
Call Control 802.1p Priority: 7
Audio 802.1p Priority: 6
AUDIO RESOURCE RESERVATION PARAMETERS
H.323 IP ENDPOINTS
H.323 Link Bounce Recovery? y
Idle Traffice Interval (sec): 20
Keep-Alive Interval (sec): 6
Keep-Alive Count: 5
RSVP Enabled? y
RSVP Refresh Rate(secs): 15
Retry upon RSVP Failure Enabled? y
RSVP Profile: guaranteed-service
RSVP unreserved (BBE) PHB Value: 40
```

---

## Region

You can change the properties of each region administered in the [IP Network Map screen](#) on **page 50** using this screen.

## Authoritative Domain

The **Authoritative Domain** field in [Figure 4](#) must be set to the same value as the SIP domain administered, the home domain, or a third-party proxy for the signaling group associated with this network region.

This field designates the name or IP address of the domain for which this network region is responsible or authoritative.

Valid entries	Usage
Up to 20 characters or blank.	Enter the name or IP address of the domain for which this network region is responsible. Note that this will appear in the From header of any SIP messages.

A valid entry in this field is required for SIP endpoints on Communication Manager to call the public network.

Note that the value for this Authoritative Domain field must match the content of the Domain field on the Edit screen in SES, which is set with the Master Administration web interface in the SES system.

In a single-server configuration, a home authoritative server combined on an Edge server, exactly one authoritative domain is set, for example, *company.com*.

In a duplex configuration, each home is subject to the domain to which it is connected. Each Edge can have a separate domain, and a single CM can support multiple domains.

Subdomains are not supported. You may not use domain structures such as *eastcompany.com* or *westcompany.com*.

## Intra-region IP-IP Direct Audio

Set this field in [Figure 4](#) to **n** to prevent direct audio connections between IP endpoints within a network region. Usually a SIP installation sets this to **y**.

Valid entries	Usage
<b>y/n</b>	Enter <b>y</b> to save on bandwidth resources and improve sound quality of voice over IP transmissions. An <b>n</b> entry might be used if, for example, the IP phones within the region are behind two or more fire walls.

## Communication Manager screen details for SIP

Valid entries	Usage
<b>native(NAT)</b>	Enter <b>native(NAT)</b> if the IP address from which audio is to be received for direct IP-to-IP connections within the region is that of the telephone/softphone itself (without being translated by NAT). IP phones must be configured behind a NAT device <i>before</i> this entry is enabled.
<b>translated(NAT)</b>	Enter <b>translated(NAT)</b> if the IP address from which audio is to be received for direct IP-to-IP connections within the region is to be the one with which a NAT device replaces the native address. IP phones must be configured behind a NAT device before this entry is enabled.

## Inter-region IP-IP Direct Audio

This field in [Figure 4](#) allows direct audio connections between IP endpoints within a network region.

For SIP, set this to **n**. In SIP, band width is virtual. See [SIP trunk engineering notes](#) on page 24.

Valid entries	Usage
<b>y/n</b>	Enter <b>y</b> to save on bandwidth resources and improve sound quality of voice over IP transmissions. An <b>n</b> entry might be used if, for example, the IP telephones within the region are behind two or more fire walls.
<b>native(NAT)</b>	Enter <b>native(NAT)</b> if the IP address from which audio is to be received for direct IP-to-IP connections within the region is that of the telephone/softphone itself (without being translated by NAT). IP phones must be configured behind a NAT device before this entry is enabled.
<b>trnslated(NAT)</b>	Enter <b>translated(NAT)</b> if the IP address from which audio is to be received for direct IP-to-IP connections within the region is to be the one with which a NAT device replaces the native address. IP phones must be configured behind a NAT device before this entry is enabled.

## Use Default Server Parameters

Set this field in [Figure 4](#) to **n** so that the screen displays the fields **Server IP address** and **Server Port**.

### Server IP Address

The system displays this field, as shown in [Figure 4](#), only when the **Use Default Server Parameters** field is set to **n** and the **RTCP Enabled** field is set to **y**.

For SIP, set this field to the IP address of the RTCP Monitor server.

Valid entries	Usage
<b>0</b> to <b>255</b> in a series of four octets.	Enter the IP address for the RTCP Monitor server

### Server Port

The system displays this field, as shown in [Figure 4](#), only when the **Use Default Server Parameters** field is set to **n** and the **RTCP Enabled** field is set to **y**.

Valid entries	Usage
<b>1</b> to <b>65535</b>	Enter the port number for the RTCP Monitor server.

## IP Node Names screen

Enter the friendly names and the IP addresses for SES home servers and CLAN or procr on this screen.

**Figure 5: IP Node Names screen**

```
change node-names ip Page 1 of X
```

IP NODE NAMES			
Name	IP Address	Name	IP Address
1. _____	____.____.____.____	17. _____	____.____.____.____
2. _____	____.____.____.____	18. _____	____.____.____.____
3. _____	____.____.____.____	19. _____	____.____.____.____
4. _____	____.____.____.____	20. _____	____.____.____.____
5. _____	____.____.____.____	21. _____	____.____.____.____
6. _____	____.____.____.____	22. _____	____.____.____.____
7. _____	____.____.____.____	23. _____	____.____.____.____
8. _____	____.____.____.____	24. _____	____.____.____.____
9. _____	____.____.____.____	25. _____	____.____.____.____
10. _____	____.____.____.____	26. _____	____.____.____.____
11. _____	____.____.____.____	27. _____	____.____.____.____
12. _____	____.____.____.____	28. _____	____.____.____.____
13. _____	____.____.____.____	29. _____	____.____.____.____
14. _____	____.____.____.____	30. _____	____.____.____.____
15. _____	____.____.____.____	31. _____	____.____.____.____
16. _____	____.____.____.____	32. _____	____.____.____.____

**Note:**

If you are using an SES system for SIP, enter the IP address for the SIP Proxy Server, a home or home/edge, for your network in the corresponding fields.

### Name

The **Name** column in [Figure 5](#) identifies the name of an adjunct or server, or switch node.

Valid entries	Usage
1 to 15 alphanumeric characters	Used as a label for the associated IP address. The node names must be unique for each server and switch.

## IP Address

The **IP Address** column in [Figure 5](#) identifies for the node named in the previous field by its dotted octet address.

Valid entries	Usage
32-bit address (4 decimal numbers, each in the range 0 to 255)	A unique IP address is assigned to each port on any IP device that is used for a connection. See the <i>Administration for Network Connectivity for Avaya Communication Manager</i> , doc ID 555-233-504 for more information.

## Locations screen

This screen allows for each location to point to the route pattern that is routing to its outbound SIP proxy server. This correlation is required by features and services such as Transfer and URI Dialing. You may use any route pattern for any SIP trunk.

The SIP-related fields are in bold.

**Figure 6: Locations screen**

change locations		LOCATIONS							Page	1 of	1
ARS Prefix 1 Required For 10-Digit NANP Calls? y											
Loc. No	Name	Timezone Offset	Rule	NPA	ARS FAC	Attd FAC	Loc. Parms.	Pre-fix	<b>Proxy Rte.</b>	<b>Sel. Pat.</b>	
1.	Main	+ 00:00	1	312							
2.	Denver-01	- 01:00	1	303							
3.	Lincroft-01	+ 01:00	1	953							
xxx		- __:__	__	__							
xxx		- __:__	__	__							

## Proxy Selection Route Pattern

The Proxy Selection Route Pattern field identifies the routing pattern that leads to the proxy server. This is the route pattern assigned on the **Route Pattern** screen.

Valid entries	Usage
1 to 999 or blank	Type the number of the routing pattern to be used to get to the proxy server.

---

## Numbering—Public/Unknown screen

This screen is used for ARS public trunks as well as SIP trunks.

In Communication Manager 3.1.x, the Public-Unknown Numbering screens support 9,999 entries.

The ANI table, which this screen uses, is increased from 240 to 9,999 entries. This increase is for S8500 and S8700/S8710 media servers only. The other media servers keep the maximum of 240 entries.

The **public-unknown-numbering forms** use a window of 2 pages. The first page is filled in starting at the key (Ext Len) specified on the command line. The second page is blank. The secondary key is Ext Code.

New command: `list public-unknown-numbering`. This command has one argument, **Ext Len**, and two options, **Ext digits** and **count**, both of which are optional.

- **Ext Len** determines how many digits to display. If you specify **0** as the **Ext Len**, attendant information displays.
- **Ext digits** lets you specify a starting point for the extension digits you want to see. Only assigned extensions are available to view.
- **count** lets you specify how many lines of output to display.

### Examples

```
display public-unknown-numbering 0
```

shows the attendant entry first, followed by the subsequent entries.

```
display public-unknown-numbering 4
```

shows the first entry with Ext Len = 4 followed by subsequent entries.

```
display public-unknown-numbering 5 ext-digits 10010
```

shows the first entry of **Ext Code** 10010 followed by the subsequent entries.

```
display public-unknown-numbering 5 ext-digits 10020
```

Extension 10020 has not been assigned. The screen shows the next entry following 10020 and all subsequent entries.

## Example 1

Below is an example and explanation of the output of common public-unknown-numbering commands.

The command `list public-unknown-numbering` operates as follows:

- `list public-unknown-numbering start 4`—displays the first entry starting with Ext Len of 4 followed by subsequent entries.
- `list public-unknown-numbering start 4 count 50`—displays the first 50 entries starting with Ext Len 4.
- `list public-unknown-numbering`—displays all entries.

The command `change/display public-unknown-numbering` operates as follows:

- `change/display public-unknown-numbering 0`—the screen displays the attendant entry first, followed by the subsequent entries.
- `change/display public-unknown-numbering 4`—the screen displays the first Ext Code of length 4 followed by the subsequent entries.
- `change/display public-unknown-numbering 5 ext-digits 10010`—the screen displays the first entry of Ext Code 10010 followed by the subsequent entries
- `change/display public-unknown-numbering 5 ext-digits 10020`—If 10020 has not been assigned, the screen displays the next entry following 10020 and subsequent entries.

## Example 2

This section explains the improved display of public-unknown-numbering records when used with the `Ext-Len` argument, for example:

```
change public 5
```

The display starts with the first record found that matches the entered Extension Length, that is, 5. Then the system displays subsequent records.

So, for the `change public 5` command, the display might be as shown in [Figure 7](#). Again, the display starts with the first entry with **Ext Len = 5** and shows subsequent entries no matter what the **Ext Len** is assigned to be

**Figure 7: Numbering - Public/Unknown Numbering screen, page 1**

change public-unknown-numbering 5										Page 1 of 2
NUMBERING - PUBLIC/UNKNOWN FORMAT										
				Total						Total
Ext	Ext	Trk	CPN	CPN	Ext	Ext	Trk	CPN	CPN	CPN
Len	Code	Grp(s)	Prefix	Len	Len	Code	Grp(s)	Prefix	Len	Len
5	5		30353	10						
5	70		30353	10						
4	200		303538	10						
5	510		30353	10						
4	2100		303538	10						
5	5000		30353	10						
5	5200		30353	10						
6	6000		3035	10						

## CPN Prefix

This field in [Figure 7](#) is for the called party number.

Valid entries	Usage
1 to 15 digits	<p>Only digits are allowed in the CPN Prefix column. Leading spaces, or spaces in between the digits, are not allowed.</p> <ul style="list-style-type: none"> <li>• If the length of the CPN Prefix matches the Total CPN Length, the extension number is not used to formulate the CPN number.</li> <li>• If the number of digits in the CPN Prefix plus the extension length exceeds the administered Total CPN Length, excess leading digits of the extension are deleted when formulating the CPN number.</li> <li>• If the number of CPN Prefix digits plus the extension length is less than the Total CPN Length, the entry is not allowed.</li> <li>• If the Total CPN Length is 0, no calling party number information is provided to the called party and no connected party number information is provided to the calling party.</li> </ul>
blank	<p>If this field is blank, the extension is sent unchanged. This is useful in countries where the public network is able to insert the appropriate CPN Prefix to form an external DID number.</p>

## Ext Code

This field in [Figure 7](#) is for the extension code.

Valid entries	Usage
0 to 9 or blank	The Ext Code can be up to 7-digits long depending on the Ext Len field entry. The entry cannot be greater than the Ext Len field entry. For example, in the case of a 4-digit Ext Len field entry, an Ext Code of 12 is the equivalent of all extensions of the screen 12xx, excluding any explicitly listed longer codes. If a code of 123 is also listed, the 12 code is equivalent of all extensions of the screen 12xx except extensions of the screen 123x. The coding precludes having to list all the applicable 12xx extensions.
attd	For attendant.

## Ext Len

In [Figure 7](#), this field specifies the number of digits the extension can have. On page 1, this field displays the extension length entered as a qualifier on the command line (`change public-unknown-numbering n`).

Valid entries	Usage
0 to 7 or blank	Corresponds to the extension lengths allowed by the dial plan.

## Total CPN Len

Use this field in [Figure 7](#) to specify the number of digits to send.

Valid entries	Usage
0 to 15 or blank	Enter the total number of digits to send.

## Trk Grp(s)

Communication Manager generates the station's identification number if there is an entry in the **Ext Code** field, and this field is administered with the trunk group number carrying the call. See [Figure 7](#).

Valid entries	Usage
1 to 7 digits	Enter the valid administered ISDN trunk-group number or a range of group numbers. For example, if trunk groups 10 through 24 use the same CPN Prefix, enter 10 to 24.
blank	The identification numbers are not dependent on which trunk group the call is carried.

## Off-PBX Station Mapping screen page 1

Use the Stations with Off-PBX Telephone Integration screen to map an office phone to a cell phone through the Extension to Cellular feature. The office phone can be a standard office number or an administration without hardware (AWOH) station. For more information on Extension to Cellular, see *Feature Description and Implementation for Avaya Communication Manager*, 555-245-205.

This screen relates to the [System-Parameters Customer-Options screen, page 1](#) on page 84.

**Figure 8: Off-pbx station mapping screen page 1**

```

change off-pbx-telephone station-mapping 67001           Page 1 of 2

                STATIONS WITH OFF-PBX TELEPHONE INTEGRATION

Station   Application   Dial   Phone Number   Trunk   Configuration
Extension 67001      OPS    221 - 67001    Selection aar          Set      1
    
```

## Command parameters

Action	Object	Qualifier
add	off-pbx-telephone station-mapping	
change	off-pbx-telephone station-mapping	<station extension>
display	off-pbx-telephone station-mapping	<station extension>
list	off-pbx-telephone station-mapping	<variable>

The `add off-pbx-telephone station-mapping` command displays the blank Stations with Off-PBX Integration screens. You can add up to sixteen associations between an office telephone and an external telephone.

The `change off-pbx-telephone station-mapping <station extension>` command displays the Stations with Off-PBX Integration screens. You can change the associations between office telephones and external telephones. The first line on the screen contains the information for the station extension that you entered as the command variable. You can also add additional associations in this screen.

The `display off-pbx-telephone station-mapping <station extension>` command displays the **Stations with Off-PBX Integration** screens. The `<station extension>` variable is optional. These screens list up to sixteen entries, starting with the station extension you entered as the command variable. If this extension is not administered for an off-PBX, the display starts with the next administered off-PBX extension in numerical order.

The `list off-pbx-telephone station-mapping <variable>` command information about the association between an office phone and an off-PBX phone. The command variable specifies the office phone number or numbers of interest. The `<variable>` can be:

- A complete phone number
- A partial phone number followed by an asterisk, which is a “wildcard” character
- Blank

## Station Extension

The Station Extension field shown in [Figure 8](#) is an administered extension in your dial plan. This number is the extension of the office telephone.

Valid entries	Usage
A valid number in your dial plan	Type an extension number of the office phone up to eight digits. Default is blank.

## Application

This field in [Figure 8](#) indicates the type of off-PBX application that is associated with the office phone. You can assign more than one application to an office phone.

Valid entries	Usage
blank	Default is blank.
EC500	Cell phone with Extension to Cellular
OPS	SIP-enabled phone
CSP	Cell phone with Extension to Cellular provided by the cellular service provider
SCCAN	Wireless SIP phone and cell phone

## Dial Prefix

The system prepends the Dial Prefix to the off-PBX phone number before dialing the off-PBX phone. The system deletes the dial prefix when a user enters their cell phone number using the Self Administration Feature (SAFE) access code. You must set the routing tables properly so that the dial prefix "1" is not necessary for correct routing. See [Figure 8](#).

Valid entries	Usage
blank 0 through 9, *, #	Type up to four digits, including "*" or "#". If included, "*" or "#" must be in the first digit position. Enter a "1" if the phone number is long-distance. Enter "011" if the phone number is international. Default is blank.

## Phone Number

Enter the phone number of the off-PBX phone. See [Figure 8](#).

Valid entries	Usage
0 through 9	Type up to fifteen digits. Enter the complete 10-digit number. Default is blank.

## Trunk Selection

Defines which trunk group you will use for outgoing calls. See [Figure 8](#).

Valid entries
ars
aar
trunk group number

## Configuration Set

Use the **Configuration Set** field in [Figure 8](#) to administer the Configuration Set number. This number contains the desired call treatment options for the station. Ninety-nine Configuration Sets exist.

The SCCAN application requires two different configuration sets selected for each station.

- The first set is the value for the WLAN followed by a slash.
- The second is the value for the cellular network.

Valid entries	Usage
1 through 99 blank	Type the number of the Configuration set or sets. Default is blank

---

## Off-PBX Station Mapping screen page 2

Finish the administration steps to map an office phone to an off-PBX phone on the second page of the **Stations with Off-PBX Telephone Integration** screen. The information you entered in the first page appears as read-only information on the second page.

---

**Figure 9: Off-pbx station mapping screen page 2**

add off-pbx-telephone station-mapping 67001					Page 2 of 2
STATIONS WITH OFF-PBX TELEPHONE INTEGRATION					
Station Extension	Call Limit	Mapping Mode	Calls Allowed	Bridged Calls	
67001	10	both	all	none	

---

### Station Extension

The Station Extension field is an administered extension in your dial plan. This number is the extension of the office phone. See [Figure 9](#).

Valid entries	Usage
a valid number in your dial plan	Type an extension number of the office phone up to eight digits. Default is blank.

### Call Limit

See See [Figure 9](#).

Valid entries	Usage
blank 1 through 10	Set the maximum number of calls that can be active simultaneously. Default is 2.

## Mapping Mode

Enter the mode of operation for the Extension to Cellular cell phone. Use these modes to control the degree of integration between the cell phone and the office phone. The modes are valid for calls only. For each office phone, you can only assign one cell phone as the origination mode. You cannot assign a cell phone as either the origination or both mode more than once. See [Figure 9](#).

Valid entries	Usage
<b>both</b>	<p>Default is <b>both</b> when the Phone Number field was previously administered for another extension with a Mapping Mode of termination or none. Default = termination when the Phone Number field was previously administered with a Mapping Mode of origination or both.</p> <p>In the both mode, users can originate and receive calls from the office phone with the cell phone.</p>
<b>termination</b>	<p>In termination mode, users can only use their cell phone to receive calls from the associated office phone. Users cannot use the cell phone to originate calls from the associated office phone. Calls originating from the cell phone independent of the office phone are independent of Extension to Cellular and behave exactly as before enabling Extension to Cellular.</p>
<b>origination</b>	<p>In origination mode, users can only originate cell phone calls from the associated office phone. Users cannot use the cell phone to receive calls from the associated office phone.</p>
<b>none</b>	<p>In the none mode, users cannot originate or receive calls from the office phone with the cell phone.</p>

## Calls Allowed

Identifies the call filter type for a station. The Calls Allowed values filter the type of calls to the office phone that a user can receive on a cell phone. See [Figure 9](#).

Valid entries	Usage
<b>all</b>	<p>Default is <b>all</b>.</p> <p>The cell phone receives both internal and external calls.</p>
<b>internal</b>	<p>The cell phone receives only internal calls.</p>
<b>external</b>	<p>The cell phone receives only external calls.</p>
<b>none</b>	<p>The cell phone does not receive any calls made to the associated office phone.</p>

## Bridged Calls

Use the Bridged Calls field to determine if bridged call appearances extend to the cell phone. The valid entry definitions are the same as the Mapping Mode field entries. See [Figure 9](#).

If your SIP uses OPS and not SCCAN, set this field to none.

Valid entries	Usage
<b>both</b>	Default is <b>both</b> .
<b>termination</b>	
<b>origination</b>	
<b>none</b>	For OPS, which SIP often is, you must use <b>none</b> . This enables bridged appearances on OPS phones to work correctly.

## Route Pattern screen

The **Route Pattern** screen defines the route patterns used by Communication Manager. Each route pattern contains a list of trunk groups that can be used to route the call. The maximum number of route patterns and trunk groups depends on the configuration and memory available in your system.

AAR analysis and ARS analysis determine which trunks calls use. You can convert an AAR number into an international number, and insert an area code in an AAR number to convert an on-network number to a public network number. Also, when a call directly accesses a local central office (CO), if the long-distance carrier provided by your CO is not available, then Communication Manager can insert the dial access code for an alternative carrier into the digit string.

The SIP-related fields are in bold on the screen shown in [Figure 10](#). Administering this screen is not required to make SIP work properly.

**Figure 10: Route Pattern screen**

change route-pattern 1													Page 1 of 2				
													Pattern Number: 1_				
SCCAN y/n													Secure SIP? n				
Grp. No.	FRL	NPA	Pfx	Hop	Toll	Del	Inserted			DCS/	IXC						
No.			Mrk	Lmt	List	Dgts	Digits			QSIG							
										Intw							
1:	---	-	---	-	---	---	-----			n	user						
2:	---	-	---	-	---	---	-----			n	user						
3:	---	-	---	-	---	---	-----			n	user						
4:	---	-	---	-	---	---	-----			n	user						
5:	---	-	---	-	---	---	-----			n	user						
6:	---	-	---	-	---	---	-----			n	user						
BCC VALUE TSC CA-TSC ITC BCIE Service/Feature BAND No. Numbering LAR																	
0 1 2 3 4 W Request													Dgts				
													Subaddress				
1:	y	y	y	y	y	n	y	none	---	both	ept	outwats-bnd	---	-	---	---	none
2:	y	y	y	y	y	n	y			rest		---	---	-	---	---	next
3:	y	y	y	y	y	n	y			rest		---	---	-	---	---	rehu
4:	y	y	y	y	y	n	y			rest		---	---	-	---	---	none
5:	y	y	y	y	y	n	y			rest		---	---	-	---	---	none
6:	y	y	y	y	y	n	y			rest		---	---	-	---	---	none

## SCCAN

When the **SCCAN** field in [Figure 10](#) is set to **y**, the non-SCCAN-associated fields are hidden. When set to **n**, the system displays all fields.

## Secure SIP

You will need to evaluate the setting of the **Secure SIP?** field in [Figure 10](#) when the end-to-end solution supports the SIPS protocol.

The only instance for a **y** in this field is when the source provider *requires* a secure SIP protocol. In most instances, leave this field set to **n**.

Valid entries	Usage
<b>y/n</b>	Specify whether the SIP: or SIPS: prefix will be used, if the call is routed to a SIP trunk preference.  If SIP trunks are not specified as SIP: or SIPS: , the call will be routed over whatever trunk is specified. Therefore, to ensure a SIP TLS connection when such a route-pattern is invoked, only SIP trunks should be specified.  Default is <b>n</b> .

To administer the Secure SIP field, choose the behavior you want from the following table.

Original Request-URI	Secure SIP?	Final Request-URI
SIP	Y	SIPS
SIPS	N	SIPS
SIP	N	SIP
SIPS	Y	SIPS
NA—non-sip trunk or endpoint	Y	SIPS
NA—non-sip trunk or endpoint	N	SIP

---

## SCCAN-Related System Parameters screen

Visit this screen if your system uses the Adjunct Systems feature in SES.

---

**Figure 11: SCCAN-Related System Parameters screen**

```
change system-parameters sccan
                SCCAN - RELATED SYSTEM PARAMETERS

                MM (WSM) Route Pattern: _____
                    H1 Handover: _____
                    H2 Handover: _____
                    Announcement: _____
                Special Digit Conversion? _____
```

---

### MM (WSM) Route Pattern

In this field in [Figure 11](#), enter a route pattern value that is SCCAN-enabled. These values are not allowed in this field for SIP use:

- Partition route pattern indexes
- RHNPA indexes
- deny
- nodes

Valid entries	Usage
blank	Default value. If this field is left blank, the feature is turned off. To enable this feature, you must enter an acceptable value.
digits	Right-click on the field on the SAT screen to see valid entries for your system.

---

## Signaling Group Page 1 screen

The system displays the Signaling Group screen shown in [Figure 12](#) when **sip** is the Group Type field on this page.

Check and administer all fields on this screen. SIP-specific fields are in bold.

---

**Figure 12: Signaling Group screen, Page 1**

```
add signaling group 1 Page 1 of 6

                                SIGNALING GROUP

Group Number   1                 Group Type: sip
                                Transport Method: tls

Near-end Node Name:                Far-end Node Name:
Near-end Listen Port: 5061          Far-end Listen Port:  5601 
                                Far-end Network Region:  
Far-end Domain:  

                                Bypass If IP Threshold Exceeded? n

DTMF over IP: rtp-payload          Direct IP-IP Audio Connections? y
Session Establishment Timer (min): 180  IP Audio Hairpinning? y
```

---

### Group Number

This is a display-only field showing the signaling group, as shown in [Figure 12](#).

### Group Type

This field describes the type of protocol to be used with the signaling group. Select **SIP** in this field and the screen changes to show only SIP-applicable fields, as shown in [Figure 12](#).

Valid entries	Usage
<b>sip</b>	Use for SIP on the Avaya S8300, S8500, S8700/S8710 IP-Connect, or S8700/S8710 Multi-Connect media servers only.

## Transport Method

The screen in [Figure 12](#) displays this field *only* when the value of the entry in the **Group Type** field is **sip**. Make sure that the default **tls** is selected in this field. No other value is supported.

Valid entries	Usage
<b>tls</b>	Default (secure) transport method is TLS. This is the only method supported.

## Near-end Node Name

The screen shown in [Figure 12](#) displays this field when the value of the entry in the **Group Type** field is either **h.323** or **sip**. Type the node name for the CLANS/procr/PE IP interface in this media server.

Additionally, the node name must be administered on the **IP Node Names** screen and the **IP Interfaces** screen.

Valid entries	Usage
Name of an administered IP node	Uniquely identifies the near-end node.

## Far-end Node Name

The screen displays this field when the value of the entry in the **Group Type** field is either **h.323** or **sip**. Type the node name for the SIP proxy server used for trunks assigned to this signaling group. The node name must be administered on the **IP Node Names** screen. See [Figure 12](#).

Valid entries	Usage
Name of an administered IP node.	Describes the far-end node.

### Tip:

If either the node name or port differs for each SIP signaling group, you have different SIP signaling connections, and you should administer a maximum of 10 using TLS. If you administer more than 10 TLS signaling connections, and they are all in use at the same time, the results may be unpredictable. Note that if the node names and ports match, you may administer as many identical SIP signaling groups using TLS as desired.

## Near-end Listen Port

The screen displays this field when the **Group Type** field is either **h.323** or **sip**. The **Near-end Listen Port** field defaults to 5061 for SIP over TLS. See [Figure 12](#).

For SIP, set this to 5061.

Valid entries	Usage
1719, 1720, or 5000 through 5999	Type an unused port number. The recommended port for SIP over TLS is 5061.

## Far-end Listen Port

The screen displays this field when the **Group Type** field is either **h.323** or **sip**. See [Figure 12](#).

For SIP, set this to 5061.

Valid entries	Usage
1 through 65535	Type the same number as entered in the <b>Near-end Listen Port</b> field, that is, port entry 5061 for SIP over TLS.

## Far-end Network Region

The screen displays this field when the **Group Type** field is either **h.323** or **sip**. This field shows the number of the network region that is assigned to the far-end of the trunk group. See [Figure 12](#).

Valid entries	Usage
1-250 or blank	Type the network region number that is assigned to the far end of the trunk group. The region number is used to obtain the codec set used for negotiation of trunk bearer capability. Leave blank to select the region of the near-end node by default.

## Far-end Domain

The screen displays this field only when the value of the entry in the **Group Type** field is **sip**. See [Figure 12](#).

Valid entries	Usage
Maximum of 40-character string, or blank	Enter the fully qualified domain name or IP address for the destination proxy server. For example, to route SIP calls within your enterprise, enter the domain assigned to your proxy server. For external SIP calling, the domain name could be that of your SIP service provider. If blank, the far-end IP address is used.

## Bypass If IP Threshold Exceeded

The screen displays this field when the **Group Type** field is either **h.323** or **sip**. See [Figure 12](#).

Valid entries	Usage
y/n	Type <b>y</b> to automatically remove from service the trunks assigned to this signaling group when IP transport performance falls below limits. These limits are set on the <b>Maintenance-Related System Parameters</b> screen.

## DTMF over IP

The screen displays this field when the value of the entry in the **Group Type** field is either **h.323** or **sip**. See [Figure 12](#).

For SIP, this must be set at the default value of **rtp-payload**.

Valid entries	Usage
<b>rtp-payload</b>	SIP trunks require <b>rtp-payload</b> .

## Session Establishment Timer

This field determines how long the system waits before tearing down a ring no answer call. The default is 120 minutes. See [Figure 12](#).

For SIP, the recommendation is to set this to 3 minutes.

Valid entries	Usage
3 through 120	The time in minutes Communication Manager waits before tearing down a ring no answer call.

## Direct IP-IP Audio Connections

The screen displays this field when the value of the entry in the **Group Type** field is either **h.323** or **sip**. For SIP trunk groups, this is the value that allows direct audio connections between SIP endpoints. See [Figure 12](#).

For SIP, leave this at the default of y. This value must match the setting for the **IP Audio Hairpinning** field.

Valid entries	Usage
y/n	Type <b>y</b> to save bandwidth resources and improve sound quality of VoIP transmissions for H.323 or SIP trunk groups.

## IP Audio Hairpinning

The screen displays this field when the Group Type field is either h.323 or sip. The IP Audio Hairpinning field entry allows the option for H.323 and SIP-enabled endpoints to be connected through the IP circuit pack in the media server or switch, without going through the time division multiplexing (TDM) bus. See [Figure 12](#).

For SIP, leave this at the default of y. This value must match the setting for the **Direct IP-IP Audio Connections** field.

Valid entries	Usage
y/n	Type <b>y</b> to enable hairpinning for H.323 or SIP trunk groups. Default is <b>y</b> .

---

## Station screen, page 1

This screen is not SIP-specific, it must be administered for all installations and so is part of SIP administration. Please check the fields in bold.

---

**Figure 13: Station screen page 1**

change station 1014		Page 1 of X
STATION		
Extension: 1014	Lock Messages? n	BCC: 0
<b>Type: 46xx</b>	Security Code:	TN: 1
Port:	Coverage Path 1:	COR: 1
Name:	Coverage Path 2:	COS: 1
	Hunt-to Station:	
STATION OPTIONS		
Loss Group: 2	Personalized Ringing Pattern: 3	
Data Module? n	Message Lamp Ext: 1014	
Speakerphone:	2-way Mute button enabled? y	
Display Language?	English Authentication Required?	
Model:	Expansion Module?	
Survivable GK Node Name:	Media Complex Ext:	
Survivable COR:	IP Softphone? y	
Survivable Trunk Dest?	Remote Office Phone? y	
	IP Video Softphone?	
	IP Video?	

---

## Type

Set the type of station to **DCP** for 6424 endpoints or **IP** for 4600 series endpoints.

If using 46xx as the Type, you will have minor alarm for these stations. You may ignore these alarms.

If you set the Type to DCP, there are some undesirable interactions with the TTI as well as other features.

## System Capacity screen

The SIP-related fields are in bold on this screen, as shown in [Figure 14](#):

**Figure 14: System Capacity screen**

display capacity		Page 7 of 12		
SYSTEM CAPACITY				
	Used	Available	System Limit	
	---	---	---	
TRUNKS				
DS1 Circuit Packs:	10	390	400	
DS1 With Echo Cancellation:	0	400	400	
ICHT For ISDN Trunks:	0	576	576	
ISDN CBC Service Selection Trunks:	1	199	200	
Trunk Groups:	34	1966	2000	
Trunk Ports:	608	7392	8000	
H.323 Trunks (included in 'Trunk ports'):	604	3396	4000	
Remote Office Trunks (included in 'Trunk ports'):	0	4000	4000	
SBS Trunks (included in 'Trunk ports'):	0	1000	1000	
<b>SIP Trunks (included in 'Trunk ports'):</b>	764	4236	5000	

Note that system trunking capacity varies, based on the media server. See the document *Capacities Table* for more information. The capacities table document is for Avaya use only and not available to customers. Customers should consult their Avaya representative.

## SIP Trunks

This field shows the number of administered, in use, and available SIP trunks.

---

## System-Parameters screens

This section describes each page of the various System Parameters screens. Valid data entry for each screen follows the screen example.

- [System Parameters Features screen, page 1](#) on page 81
- [System Parameters Call Coverage/Call Forwarding screen, page 2](#) on page 83
- [System-Parameters Customer-Options screen, page 1](#) on page 84
- [System Parameters Customer Options screen, page 2](#) on page 86
- [System Parameters Customer Options screen, page 4](#) on page 87
- [System Parameters Customer Options screen, page 5](#) on page 89

---

## System Parameters Features screen, page 1

The Feature-Related System Parameters screen in [Figure 15](#) shows the SIP-related information in bold.

Administer other fields as necessary for your system.

Figure 15: System Parameters Feature screen Page 1

```

change system-parameters features                                     page 1
      1-FEATURE-RELATED SYSTEM PARAMETERS
      Self Station Display Enabled? n
      Trunk-to-Trunk Transfer? restricted
Automatic Callback - No Answer Timeout Interval (rings): 4_
      Call Park Timeout Interval (minutes): 10
      Off-Premises Tone Detect Timeout Interval (seconds): 20_
      AAR/ARS Dial Tone Required? y

      Music/Tone On Hold: music      Port: _____
      Music (or Silence) On Transferred Trunk Calls: all
      DID/Tie/ISDN/SIP Intercept Treatment: attd
Internal Auto-Answer of Attd-Extended/Transferred Calls? y
      Automatic Circuit Assurance (ACA) Enabled? n
      ACA Referral Calls: local
      ACA Referral Destination: _____
      ACA Short Holding Time Originating Extension: _____
      ACA Long Holding Time Originating Extension: _____

      Abbreviated Dial Programming by Assigned Lists:
      Auto Abbreviated/Delayed Transition Interval(rings):
      Protocol for Caller ID Analog Terminals: Bellcore
      Display Calling Number for Room to Room Caller ID Calls?
    
```

## DID/Tie/ISDN/SIP Intercept Treatment

There is only one field in [Figure 15](#) that must be administered for SIP. Set this field to **attd**.

Valid entries	Usage
Extension of a recorded announcement	Toll charges do not apply to DID and private network calls routed to an announcement. <b>NOTE:</b> If entering a Multi-Location Dial Plan shortened extension, note the following: When entering a Multi-Location Dial Plan shortened extension in a field designed for announcement extensions, certain administration end validations that are normally performed on announcement extensions are not done, and resultant warnings or submittal denials do not occur. The shortened extensions also do not appear in any display or list that shows announcement extensions. Extra care should be taken to administer the correct type of announcement for the application when assigning shortened extensions.
<b>attd</b>	For system security, Avaya recommends entering <b>attd</b> in this field. This routes intercept calls to the attendant and, if the attendant receives several of these, indicates a problem.

## System Parameters Call Coverage/Call Forwarding screen, page 2

The SIP-related fields are in bold on [Figure 16](#).

**Figure 16: System Parameters—Call Coverage/Call Forwarding screen**

```
change system-parameters coverage-forwarding                                page 2

      SYSTEM PARAMETERS -- CALL COVERAGE / CALL FORWARDING

COVERAGE OF CALLS REDIRECTED OFF-NET (CCRON)
      Coverage Of Calls Redirected Off-Net Enabled? y
  Activate Answer Detection (Preserves SBA) On Final CCRON Cvg Point? y
      Ignore Network Answer Supervision? y
  Disable call classifier for CCRON over ISDN trunks? n
  Disable call classifier for CCRON over SIP trunks? n
```

For more details on the other fields on this screen, see the *Avaya Communication Manager Administrator Guide*, 03-300509.

### Disable call classifier for CCRON over SIP trunks

This field [Figure 16](#) directs Communication Manager to dispense with the call classifier on interworked calls and rely on the SIP trunk signalling messages. For SIP, set this field to **n**.

Valid entries	Usage
<b>y</b>	Use <b>y</b> to disable the call classifier for CCRON calls over interworked trunk facilities.
<b>n</b>	Use <b>n</b> to enable the call classifier for CCRON calls over interworked trunk facilities.

---

## System-Parameters Customer-Options screen, page 1

Administer or check all fields on the screen shown in [Figure 17](#): to meet the needs of your system.

---

**Figure 17: System Parameters Customer Options screen, page 1**

```
display system-parameters customer-options                                page 1 of 10
                                OPTIONAL FEATURES
                                Used
G3 Version: V12
Location: 1                      RFA System ID (SID): 1
Platform: 2                      RFA Module ID (MID): 1

                                Used
Platform Maximum Ports: 44000 597
Maximum Stations: 36000 552
Maximum XMOBILE Stations: 1000 0
Maximum Off-PBX Telephones - EC500: 0 0
Maximum Off-PBX Telephones - OPS: 600 545
Maximum Off-PBX Telephones - SCCAN: 0 0

(NOTE: You must logoff & login to effect the permission changes.)
```

---

The Avaya license file controls the fields on this screen. The web-based RFA process generates these license files for customers.

The customer views this screen to see how many and what type of off-PBX phones the license supports. Normally, this screen is read only.

However, an administrator with init login privileges can type in values that represent a portion of the licensed values.

Depending on your login privileges, you can view or edit the fields shown.

### Maximum Off-PBX Telephones - EC500

Licensing obtained for this feature applies to EC500 and CSP phones. See [Figure 17](#).

### Maximum Off-PBX Telephones - OPS

Licensing for this feature applies to OPS phones, which are SIP phones supporting advanced SIP telephony. See [Figure 17](#).

## Maximum Off-PBX Telephones - SCCAN

Licensing for this feature applies to SCCAN phones, which are dual mode SIP-based phones that use wifi and GSM. See [Figure 17](#).

### Used

This column in [Figure 17](#) shows the actual current usage as compared to the system maximum for each field. The Used column is always display only, and indicates the number of the applications that are administered on the [Off-PBX Station Mapping screen page 1](#) on page 64.

---

## System Parameters Customer Options screen, page 2

Figure 18: System Parameters Customer Options screen, page 2

```
display system-parameters customer-options                                page 2 of 10
                                OPTIONAL FEATURES
IP PORT CAPACITIES
                                USED
                                Maximum Administrered H.323 Trunks: 200 20
                                Maximum Concurrently Registered IP Stations: 50 0
                                Maximum Administered Remote Office Trunks: 0 0
Maximum Concurrently Registered Remote Office Stations: 0 0
                                Maximum Concurrently Registered IP eCons: 0 0
                                Maximum Video Capable H.323 Stations: 0 0
                                Maximum Video Capable IP Softphones: 0 0
                                Maximum Administered SIP Trunks: 500 25
                                Maximum Number of DS1 Boards with Echo Cancellation: 0 0
                                Maximum TN2501 VAL Boards: 10 0
                                Maximum G250/G350/G700 CAL Sources: 10 0
                                Maximum TN2602 VoIP Channels: 10000 96
                                Maximum Number of Expanded Meet-me Conference Ports: 0 0

(NOTE: You must logoff & login to effect the permission changes.)
```

---

### Maximum Administered SIP Trunks

This field in [Figure 18](#) limits the number of SIP trunks administered.

---

## System Parameters Customer Options screen, page 4

The SIP-related fields on this screen are in bold.

---

**Figure 19: System Parameters Customer Options screen, page 4**

```

display system-parameters customer-options                               Page 4 of 10
                                OPTIONAL FEATURES
Emergency Access to Attendant? y                                       IP Stations? y
  Enable 'dadmin' Login? y                                           Internet Protocol (IP) PNC? y
  Enhanced Conferencing? y                                           ISDN Feature Plus? y
    Enhanced EC500? y                                               ISDN Network Call Redirection? y
Enterprise Survivable Server? n
  Enterprise Wide Licensing? y                                       ISDN-BRI Trunks? y
    ESS Administration? n
      Extended Cvg/Fwd Admin? y                                       ISDN PRI? y
External Device Alarm Admin? y                                       Local Survivable Processor? y
  y                                                                    Malicious Call Trace? y
  External Device Alarm Admin? y                                       Media Encryption Over IP? y
  Mode Code for Centralized Voice Mail? y
Five Port Networks Max per MCC? y
  Flexible Billing? y                                                 Multifrequency Signaling? y
Forced Entry of Account Codes? y   Multimedia Appl.Server Interface (MASI)? y
  Global Call Classification? y                                       Multimedia Call Handling (Basic)? y
  Hospitality (Basic)? y                                               Multimedia Call Handling (Enhanced)? y
Hospitality (G3V3 Enhancements)? y
  IP Trunks? y
  IP Attendant Consoles? y

(NOTE: You must logoff & login to effect the permission changes.)

```

---

### ISDN PRI

Provides Integrated Services Digital Network (ISDN-PRI) software for either a switching-hardware platform migration only or a switching-hardware platform migration in combination with a software release upgrade. Also provides signaling support for H.323 signaling. Set to **y** for SIP. See [Figure 19](#) above.

### Enhanced EC500

As shown in [Figure 19](#), set this to **y**. This setting provides mobile call services including "Anytime Anywhere" accessibility with One Number availability and Origination mapping.

## IP Trunks

Controls permission to administer H.323 trunks. Must be **y** for IP trunks. See [Figure 19](#).

---

## System Parameters Customer Options screen, page 5

The SIP-related fields on this screen are in bold.

---

**Figure 20: System Parameters Customer Options screen, page 5**

```

display system-parameters customer-options                                page 5 of x
                                OPTIONAL FEATURES

                                Multinational Locations?                Station and Trunk MSP? n
Multiple Level Precedence and Preemption?                            Station as Virtual Extension? n
                                Multiple Locations?
                                System Management Data Transfer? n

                                Personal Station Access (PSA)? y
                                Posted Messages? n                        Tenant Partitioning? n
                                PNC Duplication? n                        Terminal Trans. Init. (TTI)? y
                                Port Network Support? y                    Time of Day Routing? y
                                Processor and System MSP? n                Uniform Dialing Plan? y
                                Private Networking? y                    Usage Allocation Enhancements? y
                                Processor Ethernet? y                      TN2501 VAL Maximum Capacity? y

                                Remote Office? n                          Wideband Switching? y
Restrict Call Forward Off Net? y                                    Wireless? n
                                Secondary Data Module? y

```

---

### Private Networking

Upgrades PNA or ETN software RTU purchased with earlier systems. Set this to y if you want to enable AAR access codes or ARS access codes 1 and 2 on the Feature Access Codes screen.

---

## Trunk Group screens

This section describes each page of the Trunk Group screens. Valid data entry for each screen follows the screen example.

- [Trunk Group screen, Page 1](#) on page 90
- [Trunk Group screen, Page 2](#) on page 98
- [Trunk Group screen, Page 3](#) on page 101

---

## Trunk Group screen, Page 1

The system displays the **Trunk Group** screen shown in [Figure 21](#), when **sip** is the **Group Type** on page 1.

Check or administer all the values on this screen. SIP-specific fields are in bold.

---

**Figure 21: Trunk Group screen, page 1**

```
change trunk-group 7                                     Page 1 of 20

                                TRUNK GROUP

Group Number: 7                Group Type: sip                CDR Reports: y
Group Name: to sip-proxy1      COR: 1                TN: 1                TAC: 999
Direction: two-way            Outgoing Display? y
Dial Access? n                Busy Threshold: 255            Night Service:
Queue Length: 0
Service Type: tie                Auth Code? n

                                Signaling Group: 1

                                Number of Members: 10
```

---

### Group Number

In the [Trunk Group screen, page 1](#), this field contains the group number assigned to this group when the trunk group was added.

## Group Type

In the [Trunk Group screen, page 1](#), type **sip** to specify the trunk group as SIP.

### Tip:

Busy-out the trunk group before you change the group type. Release the trunk group after you make the change. For more information about busying out and releasing trunk groups, see your system's maintenance documentation.

Valid entries	Usage
<b>sip</b>	Use SIP trunks to connect a media server running Communication Manager to a SIP proxy home server.

## CDR Reports

In the [Trunk Group screen, page 1](#), set this field according to the kind of call detail records (CDR) you want to generate.

Valid entries	Usage
<b>y</b>	All outgoing calls on this trunk group generate call detail records. To generate CDRs on incoming trunks, type <b>n</b> in the <b>Record Outgoing Calls Only</b> field on the <b>CDR System Parameters</b> screen.
<b>n</b>	Calls over this trunk group will not generate call detail records.
<b>r (ring-intvl)</b>	Generate CDR records for both incoming and outgoing calls. In addition, the following ringing interval CDR records are generated: <ul style="list-style-type: none"> <li>● Abandoned calls: The system creates a record with a condition code of <b>H</b>, indicating the time until the call was abandoned.</li> <li>● Answered calls: The system creates a record with a condition code of <b>G</b>, indicating the interval from start of ring to answer.</li> <li>● Calls to busy stations: The system creates a record with a condition code of <b>I</b> indicating a recorded interval of 0.</li> </ul>

## Group Name

On [Trunk Group screen, page 1](#), set this field to uniquely identify a trunk group.

Valid entries	Usage
1 to 27 characters	Enter a unique name that provides information about the trunk group. Do not use the default entry or the group type (DID, WATS) here.  For example, you might use names that identify the vendor and function of the trunk group: USWest Local, Sprint Toll, Level(3) SIP.

## COR

In [Trunk Group screen, page 1](#), the setting for this field depends on your system.

Decisions regarding the use of Class of Restriction (COR) and Facility Restriction Levels (FRLs) should be made with an understanding of their implications for allowing or denying calls when AAR/ARS/WCR route patterns are accessed. See Chapter 5 of the *Avaya Toll Fraud and Security Handbook*, doc ID 555-025-600, for details on using COR and FRLs.

Valid entries	Usage
0 to 95	Enter a class of restriction (COR). Classes of restriction control access to trunk groups, including trunk-to-trunk transfers.

 **Tip:**

Remember that facility restriction levels are assigned to *classes* of restriction. Even if two trunk groups have classes of restriction that allow a connection, different facility restriction levels may prevent operations such as off-net call forwarding or outgoing calls by remote access users.

## TN

On [Trunk Group screen, page 1](#), set this field to assign a trunk to a partition.

In the Customer Options screen, if Tenant Partitioning is set to **n**, this field is present on the Trunk Screen but does not function. Go the Customer Options screen if you suspect incorrect operation.

Valid entries	Usage
1 to 100	Type a tenant partition number to assign this trunk group to the partition. Enter the digit 1 in this field to assign the trunk to the universal group which can be called by any other TN group.

### Tip:

Double-check your entry. If you accidentally type an unassigned tenant partition number, the system accepts the entry but no calls go to the trunk group.

## TAC

Type the trunk access code (TAC) for each trunk group. Assign a different TAC to each trunk group. CDR reports use the TAC to identify each trunk group. Each trunk must have a different TAC. This field is on [Trunk Group screen, page 1](#).

Valid entries	Usage
1- to 4-digit number	Type any number that fits the format for trunk access codes or dial access codes defined in your dial plan. NOTE: Although this field is required, trunk groups of type SIP cannot be dialed by using TAC. The TAC you type here only identifies them on CDR reports.
asterisk (*) and pound sign (#)	* and # may be used as the first character in a TAC.

## Direction

On [Trunk Group screen, page 1](#), enter the direction of the traffic on this trunk group. The entry in this field affects which timers appear on the Administrable Timers page. The system displays this field for all trunk groups except DID and CPE.

Valid entries	Usage
incoming	
outgoing	
two-way	Enter <b>two-way</b> for Network Call Redirection.

## Outgoing Display

In [Trunk Group screen, page 1](#), this field allows display telephones to show the name and number of the trunk group used for an outgoing call before the call is connected. This information may be useful to you when you are trying to diagnose trunking problems.

Valid entries	Usage
y	Displays the trunk group name and number.
n	Displays the digits the caller dials.

## Dial Access

In [Trunk Group screen, page 1](#), this field controls whether users can route outgoing calls through an outgoing or two-way trunk group by dialing its trunk access code. Allowing dial access does not interfere with the operation of AAR/ARS. Dial access to SIP trunks is not allowed.

Valid entries	Usage
n	The entry <b>n</b> is used for SIP trunks, no others. Prevents users from accessing the trunk group by dialing its access code. Attendants can still select this trunk group with a Trunk Group Select button. This is the default entry.

## Busy Threshold

In [Trunk Group screen, page 1](#), this field specifies the threshold limit for the number of trunks that could be simultaneously active. Once the threshold is reached, any additional calls that *would* result in accessing that trunk group get redirected to the attendant. The attendant takes control of that trunk group and the access to the trunk members.

Use this field if you want attendants to control access to outgoing and two-way trunk groups during periods of high use. When the threshold is reached and the warning lamp for that trunk group lights, the attendant can activate trunk group control: internal callers who dial out using a trunk access code will be connected to the attendant, and the attendant can prioritize outgoing calls for the last remaining trunks. Calls handled by AAR and ARS route patterns go out normally.

Valid entries	Usage
0 to 255	Type the number of trunks that must be busy in order to light the warning lamp on the Attendant Console. For example, if there are 30 trunks in the group and you want to alert the attendant whenever 25 or more are in use, type <b>25</b> .

The S8700/S8710 supports a maximum of 30000 busy hour call completions (BHCC).

The S8300 remains at a maximum of 3600 BHCC.

## Night Service

In [Trunk Group screen, page 1](#), this field sets the destination for incoming calls when Night Service is in operation. If a **Night** field on the **Group Member Assignments** page is administered with a different destination, that entry overrides the group destination for that trunk. CPE, DID, and DIOD trunk groups do not support night service.

### Tip:

Whenever possible, use a night service destination on your switch to prevent incorrect behavior of some features, even on a DCS network.

Valid entries	Usage
blank	Leave this field blank if the <b>Trunk Type (in/out)</b> field is not <b>auto</b> .
An extension number (can be a VDN)	Type the extension of your night service destination.
<b>attd</b>	Calls go to the attendant and are recorded as Listed Directory Number (LDN) calls on call detail records.

## Queue Length

In [Trunk Group screen, page 1](#), outgoing calls can wait in a queue, in the order in which they were made, when all trunks in a trunk group are busy. If you type **0** in this field, callers receive a busy signal when no trunks are available. If you type a higher number, a caller hears a confirmation tone when no trunk is available for the outgoing call. The caller can then hang up and wait. When a trunk becomes available, Communication Manager calls the extension that placed the original call. The caller hears three short, quick rings. The caller does not need to do anything but pick up the handset and wait. Communication Manager remembers the number the caller dialed and automatically completes the call.

The screen displays this field when the **Direction** field on the screen is set to **outgoing** or **two-way**.

Valid entries	Usage
<b>0</b>	Type <b>0</b> for DCS trunks.
<b>1 through 100</b>	Type the number of outgoing calls that you want to be held waiting when all trunks are busy.

## Service Type

In [Trunk Group screen, page 1](#), the **Service Type** field indicates the service to which this trunk group is dedicated. A listing of predefined entries is shown below. In addition to the Services/Features listed in this table, any user-defined Facility Type of **0** (feature) or **1** (service) on the **Network Facilities** screen is allowed. For SIP trunks, only **public-ntwrk** and **tie** are valid.

Valid entries	Usage
<b>public-ntwrk</b>	Public network calls. It is the equivalent of CO (outgoing), DID, or DIOD trunk groups. If <b>Service Type</b> is <b>public-ntwrk</b> and the trunk is not a SIP trunk, then <b>Dial Access</b> can be set to <b>y</b> .
<b>tie</b>	Tie trunks. General purpose. This setting is used for systems inside the Avaya network, not for customers.

## Auth Code

In [Trunk Group screen, page 1](#), this field affects the level of security for incoming and outgoing calls on the Communication Manager server. The system displays this field if the **Direction** field is **incoming** or **two-way**. The **Auth Code** field can only be **y** if the **Authorization Codes** field is **y** on the [System Parameters Feature screen Page 1](#) on page 82.

Valid entries	Usage
y or n	Type <b>y</b> to require callers to enter an authorization code in order to tandem a call through an AAR or ARS route pattern. The code will be required even if the facility restriction level of the incoming trunk group is normally sufficient to send the call out over the route pattern.

## Signaling Group

In [Trunk Group screen, page 1](#), the screen displays this field only when the value of the entry in the **Group Type** field is **sip**.

The value here must be set as in the previous signaling group screen, in this example, 1.

Valid entries	Usage
1 through 650	Type the number of the SIP signaling group associated with this trunk group on the <a href="#">Signaling Group Page 1 screen</a> on page 74, <b>Group Number</b> field.

This field restricts calling, and requires a code for users below the FRL level for incoming and outgoing calls.

## Number of Members

In [Trunk Group screen, page 1](#), the value here must be less than or equal to the maximum administered number for SIP trunks on the System Parameters Custom Options screen. The screen displays this field only when the value of the entry in the **Group Type** field is **sip**.

Valid entries	Usage
1 through 255	Type the number of SIP trunks that are members of the trunk group. All members of a SIP trunk group will have the same characteristics. NOTE: Member pages for SIP trunk groups are completed automatically based on this entry and are not individually administrable.

---

## Trunk Group screen, Page 2

Figure 22: Trunk Group screen, page 2

```
change trunk-group 7                                     Page 2 of 20

                                     TRUNK GROUP

TRUNK PARAMETERS

UNICODE Name? y

                                     Redirect on OPTIM failure: 5000
SCCAN? n                                               Digital Loss Group: 18
Preferred Minimum Session Refresh Interval (sec): 120
```

---

### UNICODE Name

This in [Trunk Group screen, page 2](#) field determines which table of names to use to display the name, the legacy or the UTF-8 character table.

Valid entries	Usage
y or n	Type <b>n</b> to use the table with legacy names. Type <b>y</b> to use the table with UTF-8 format if your system might contain Asian language names.
	Note that fifteen UTF-8 characters can take up to 45 bytes. Also, legacy names support Roman, Cyrillic, Ukrainian, and Katakana characters.

## SCCAN

The system displays this field in [Trunk Group screen, page 2](#) when the **Group Type** field is **sip** and **Enhanced EC500** on the **System Parameters - Customer Options** screen is set to **y**.

When the **SCCAN** field is set to **y**, the non-SCCAN-associated fields are hidden.

When set to **n**, the system displays all fields.

Valid entries	Usage
<b>y</b>	Type <b>y</b> to indicate that this trunk group supports incoming SCCAN calls.
<b>n</b>	Type <b>n</b> to indicate that the trunk does not support incoming SCAAN calls.

## Redirect on OPTIM failure

In [Trunk Group screen, page 2](#), this field is a timer that determines how long to wait for OPTIM to intercede before the call is redirected. Redirect on OPTIM failure is sometimes known as ROOF.

Valid entries	Usage
<b>250 to 32000 milliseconds</b>	See EC500 documents for the SIP-related uses of OPTIM, that is, OPS.

## Digital Loss Group

In [Trunk Group screen, page 2](#), this field determines which administered 2-party row in the loss plan applies to this trunk group if the call is carried over a digital signaling port in the trunk group.

Valid entries	Usage
<b>1 to 19</b>	Shows the index into the loss plan and tone plan.

## Preferred Minimum Session Refresh Interval (sec)

In [Trunk Group screen, page 2](#), the system displays this field when the **SCCAN?** field is set to **n**.

This field sets the session refresh timer value of a SIP session for non SCCAN application. The timer starts when a SIP session is established. Avaya Communication Manager then sends a session refresh request as a Re-INVITE or UPDATE after every timer interval. In this way, an ongoing session is maintained.

For SIP, set this to 1800.

Valid entries	Usage
90 to 1800	<p>Default 120 seconds. Recommendation for SIP is 1800 seconds.</p> <p>The interval for the session refresh requests is determined through a negotiation mechanism.</p> <p>If a session refresh request is not received before the interval passes, the session terminates. Both endpoints send a BYE, and call state aware proxies can remove any state for the call.</p>

---

## Trunk Group screen, Page 3

The system displays this screen of the Trunk Group screen, the **Trunk Features** screen, shown in [Figure 23](#) when **sip** is the **Group Type** on Trunk Group screen page 1.

Check or administer all of the values on this screen for SIP.

---

**Figure 23: Trunk Group screen, page 3**

```

change trunk-group 7                                     Page 3 of 20

                                TRUNK FEATURES

    ACA Assignment? n                                Measured: none

                                                Maintenance Tests? y

                                Numbering Format: public

                                                Prepend '+' to Calling Number? n

                                                Replace Unavailable Numbers? n
  
```

---

## ACA Assignment

In [Trunk Group screen, page 3](#), this field may have a y or n entry.

Valid entries	Usage
y/n	Type <b>y</b> if you want Automatic Circuit Assurance ( <b>ACA</b> ) measurements to be taken for this trunk group. If you set this field to <b>y</b> , complete the <b>Service Type</b> field. The default entry for SIP is <b>n</b> .

## Measured

In [Trunk Group screen, page 3](#), this field determines if the system will transmit data for this trunk group to the Call Management System (CMS).

You cannot use **internal** and **both** unless either the BCMS (Basic Call Management System) or the **Service Type** field is **y** on the **System-Parameters Customer-Options** screen. If the **ATM** field is set to **y** on the **System-Parameters Customer-Options** screen, this field accepts only **internal** or **none** as values. If this field contains a value other than **internal** or **none** when **ATM** is **y**, the screen displays **none** for the field value.

Valid entries	Usage
<b>internal</b>	Type <b>internal</b> if the data can be sent to the BCMS, the VuStats data display, or both.
<b>external</b>	Type <b>external</b> to send the data to the CMS.
<b>both</b>	Type <b>both</b> to collect data internally and to send it to the Communication Manager.
<b>none</b>	Type <b>none</b> if trunk group measurement reports are not required. NOTE: This is the default for SIP trunk groups.

## Maintenance Tests

In [Trunk Group screen, page 3](#), the screen displays this field only when the value of the **Group Type** field is **aplt**, **isdn**, **sip**, or **tie**.

Valid entries	Usage
<b>y/n</b>	Type <b>y</b> (the default) to run maintenance tests hourly on this trunk group. One or more trunk members must be administered as SIP for this entry to be saved.

## Numbering Format

In [Trunk Group screen, page 3](#), the **Numbering Format** field specifies the encoding of Numbering Plan Indicator for identification purposes in the Calling Number, the Connected Number IEs or both, and in the QSIG Party Number. Valid entries are **public**, **unknown**, **private**, and **unk-pvt**.

Valid entries	Usage
<b>Public</b>	Indicates that the number plan according to CCITT Recommendation E.164 is used and that the <b>Type of Number</b> is <b>national</b> .  This is the default entry for SIP trunks.
<b>Unknown</b>	Indicates that the <b>Numbering Plan Indicator</b> is <b>unknown</b> and that the <b>Type of Number</b> is <b>unknown</b> .
<b>Private</b>	Indicates the <b>Numbering Plan Indicator</b> is <b>PNP</b> and the <b>Type of Number</b> is determined from the <b>Private-Numbering</b> screen.
<b>unk-pvt</b>	Also determines the <b>Type of Number</b> from the <b>Private-Numbering</b> screen, but the <b>Numbering Plan Indicator</b> is <b>unknown</b> .

## Prepend '+' to Calling Number?

In the [Trunk Group screen, page 3](#), set this field to y if you want to add a plus sign (+) to the beginning of a number to accommodate international calls.

## Replace Unavailable Numbers

The system displays this field in the [Trunk Group screen, page 3](#) only when the Group Type field is **isdn** or **sip**. This field dictates whether to replace unavailable numbers with administrable strings for incoming and outgoing calls assigned to the specified trunk group. Administrable strings are located in the [System Parameters Features screen, page 1](#) screen.

This field applies to BRI/PRI and SIP trunks.

Valid entries	Usage
<b>y/n</b>	Type <b>y</b> to replace the display of an unavailable number with a phrase, for example, <b>Private Caller</b> . The system replaces unavailable numbers regardless of the service type of the trunk. The default for SIP trunks is <b>n</b> .

---


## Trunk Group screen, page 4

When the Group Type is **sip**, the system displays the Protocol Variations screen. The system displays this screen for SIP trunks only.

For SIP, set this field to **y** for a particular trunk *only* if a device or network connected to that SIP trunk requires the **user as phone** parameter. Consider the situation of a public network trunking connection to an outside or third party. Set this to **y** for a customer taking the trunk out to a third party.

---

**Figure 24: Protocol Variations screen**

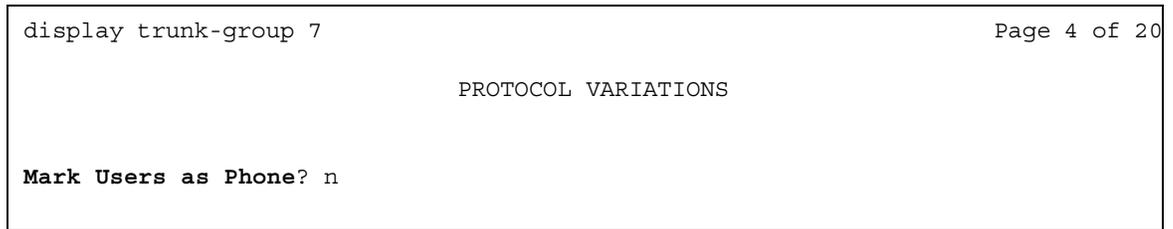

---

## Mark Users as Phone

Valid entries	Usage
n	Default.
y	URIs in call control signaling messages originated at the gateway are encoded with the "user=phone" parameter. No subscription messages are encoded with the "user=phone" parameter even when the field is set to y.

---

## SIP device as an OPS extension

If a 46xx SIP telephone is configured as an OPS extension, then the number of call appearances must be configured in all of these following areas:

1. In `46xxsettings.txt` file or in DHCP scope option: **PHNUMOFSA** must be set to the number of call appearances.
2. Station screen page 2: set **restrict last appearance = n** (default = y)
3. Station screen, page 3: You must add additional button assignments as 'call appearances' to match the value of PHNUMOFSA
4. Off-station pbx mapping screen, page 2: the **call limit** must equal the number of call appearances set in **PHNUMOFSA**.



# Appendix A: Requirement specifications

This appendix explains how SES R3.1.x rules are applied.

---

## Call processing software

Call processing software is explained in sections covering domains and routing:

- [RFC 3325 compliance](#)

---

## RFC 3325 compliance

The material in this book is based on regulatory compliance of RFC 3325 compliance.

## Compliance with RFC 3325

The SES proxy complies with RFC 3325, *Network Asserted Identity*.

While RFC 3325 provides for a privacy header, this header does not provide complete anonymity to the user. The privacy header only requires that the p-asserted-identity header be removed from the request.

---

## FNU requirements

The following sections describe how Feature Name URI (FNU) requirements are implemented.

In the column heading, PPM denotes Personal Profile Manager.

- [Call Forwarding All Calls FNU](#) on page 108
- [Call Forward Busy - No Answer FNU](#) on page 109
- [Directed Call Pickup FNU](#) on page 111
- [Extended Call Pickup FNU](#) on page 112
- [Calling Party Number Block FNU](#) on page 112
- [Calling Party Number Unblock FNU](#) on page 113
- [Dial Intercom FNU](#) on page 114

## Requirement specifications

- [Drop FNU](#) on page 114
- [Exclusion FNU](#) on page 115
- [Off-PBX Call FNU](#) on page 115
- [Last Number Dialed FNU](#) on page 116
- [Malicious Call Trace FNU](#) on page 116
- [AUDIX One-Step Recording FNU](#) on page 117
- [Priority Call FNU](#) on page 117
- [Send All Calls FNU](#) on page 118
- [Transfer to Voice Mail FNU](#) on page 119
- [Whisper Page Activation](#) on page 120

---

## Call Forwarding All Calls FNU

This FNU Activates or deactivates Call Forwarding All Calls.

**Case 1**—FNU structure where Call Forwarding All Calls, of the endpoint's own (1111) extension:

```
INVITE sip:1111@example.com;avaya-cm-fnu=call-forwarding-all;avaya-cmdestination=4444444;avaya-cm-action=on SIP/2.0
```

```
INVITE sip:1111@example.com;avaya-cm-fnu=call-forwarding-all;avaya-cm-action=on SIP/2.0
```

```
INVITE sip:1111@example.com;avaya-cm-fnu=call-forwarding-all;avaya-cm-action=offSIP/2.0
```

Name	Values	Req/Opt	PPM
avaya-cm-action	on or off	Req	No
avaya-cm-destination	Any number within the Communication Manager dial plan, to which this endpoint is being forwarded.	Opt	No

Authorization: This example shows the use of this FNU on the endpoint's own extension. It must be authorized by the extension's class of service. See the next case for how to apply this feature to another extension.

Communication Manager button: call-fwd Ext: (left blank)

Feature package: Yes

SDP required: Only if avaya-cm-action=on and avaya-cm-destination not specified. (if SDP required, line appearance must be requested – otherwise line appearance request will be ignored)

**Case 2**—FNU structure where Call Forwarding All Calls, of another endpoint's (2222) extension.

```
INVITE
sip:2222@example.com;avaya-cm-fnu=call-forwarding-all;avaya-cmdestination=4444444;avaya-cm-action=on SIP/2.0
```

```
INVITE
sip:2222@example.com;avaya-cm-fnu=call-forwarding-all;avaya-cm-action=on SIP/2.0
```

```
INVITE
sip:2222@example.com;avaya-cm-fnu=call-forwarding-all;avaya-cm-action=off SIP/2.0
```

Name	Values	Req/Opt	PPM
avaya-cm-destination	Any number within the Communication Manager dial plan, to which this endpoint is being forwarded	Opt	No
avaya-cm-action	on or off	Req	No

Authorization: An endpoint can use this FNU on another extension only if the endpoint has a "call-fwd Ext: 2222" button administered on Communication Manager. Activates or deactivates Call Forwarding All Calls, on the extension specified in the user part of the Request-URI.

Communication Manager button: call-fwd Ext: 2222

Feature package: Yes

SDP required: Only if avaya-cm-action=on and avaya-cm-destination not specified. (if SDP required, line appearance must be requested – otherwise line appearance request will be ignored)

---

## Call Forward Busy - No Answer FNU

Call Forward Busy/Don't Answer activates and deactivates call forwarding for calls when the extension is busy or the user does not answer.

**Case 1**—FNU structure where Call Forwarding All Calls of the endpoint's own (1111) extension:

```
INVITE
sip:1111@example.com;avaya-cm-fnu=call-forwarding-busy-no-answer;avayacm-destination=4444444;avaya-cm-action=on SIP/2.0
```

## Requirement specifications

INVITE

```
sip:1111@example.com;avaya-cm-fnu=call-forwarding-busy-no-answer;avayacm-action=on SIP/2.0
```

INVITE

```
sip:1111@example.com;avaya-cm-fnu=call-forwarding-busy-no-answer;avayacm-action=off SIP/2.0
```

Name	Values	Req/Opt	PPM
avaya-cm-action	on or off	Req	No
avaya-cm-destination	Any number within the Communication Manager dial plan, to which this endpoint is being forwarded.	Opt	No

**Authorization:** This example shows the use of this FNU on the endpoint's own extension. It must be authorized by the extension's class of service. See the next case for how to apply this feature to another extension.

**Communication Manager button:** cfwd-busyda Ext: (left blank)

**Feature package:** Yes

**SDP required:** Only if avaya-cm-action=on and avaya-cm-destination not specified. (if SDP required, line appearance must be requested, otherwise line appearance request will be ignored)

**Case 2—FNU structure where Call Forwarding All Calls of another endpoint's (2222) extension:**

INVITE

```
sip:2222@example.com;avaya-cm-fnu=call-forwarding-busy-no-answer;avaya-cm-destination=4444444;avaya-cm-action=on SIP/2.0
```

INVITE

```
sip:2222@example.com;avaya-cm-fnu=call-forwarding-busy-no-answer;avaya-cm-action=on SIP/2.0
```

```
INVITE
sip:2222@example.com;avaya-cm-fnu=call-forwarding-busy-no-answer;avaya
cm- action=off SIP/2.0
```

Name	Values	Req/Opt	PPM
avaya-cm-action	on or off	Req	No
avaya-cm-destination	Any number within the Communication Manager dial plan, to which this endpoint is being forwarded.	Opt	No

Authorization: An endpoint can use this FNU on another extension only if the endpoint has a “cfwd-bsyda Ext: 2222” button administered on Communication Manager.

Description: Call Forward Busy/Don't Answer activates and deactivates call forwarding for calls when the extension is busy or the user does not answer, on the extension specified in the user part of the Request-URI.

CM button: cfwd-bsyda Ext: 2222

Feature package: Yes

SDP required: Only if avaya-cm-action=on and avaya-cm-destination not specified. (if SDP required, line appearance must be requested, otherwise line appearance request will be ignored).

---

## Directed Call Pickup FNU

Directed Call Pickup allows the user to answer a call ringing at another extension without having to be a member of a pickup group.

Directed Call Pickup FNU Structure:

```
INVITE sip:1111@example.com;avaya-cm-fnu=call-pickup-directed;avaya-cmextension=3333
SIP/2.0
```

```
INVITE sip:1111@example.com;avaya-cm-fnu=call-pickup-directed SIP/2.0
```

Parameters:

Name	Values	Req/Opt	PPM
avaya-cm-extension	The Communication Manager extension where the call is alerting.	Opt	No

---

## Requirement specifications

Authorization: The endpoints need not be members of a group, but directed call pickup must be authorized by the class of restriction for both endpoints.

Communication Manager button: dir-pkup

Feature package: No

SDP required: Yes

---

## Extended Call Pickup FNU

Extended Group Call Pickup allows a user to answer calls directed to another call pickup group.

Extended Group Call Pickup FNU structure:

```
INVITE sip:1111@example.com;avaya-cm-fnu=call-pickup-extended;avaya-cm-pickupnumber=3
SIP/2.0
```

```
INVITE sip:1111@example.com;avaya-cm-fnu=call-pickup-extended SIP/2.0
```

Parameters:

Name	Values	Req/Opt	PPM
avaya-cm-pickup-number	The pickup number from 1 to 24.	Opt	No

Authorization: The endpoint must be a member of a pickup group, and that pickup group must be a member of an extended pickup group, which must also include the group of the endpoint whose telephone is being picked up.

Communication Manager button: None. Accessed on the Communication Manager only via an FAC.

Feature package: No

SDP required: Yes

---

## Calling Party Number Block FNU

Calling Party Number Block blocks the sending of the calling party number for one call.

Calling Party Number Block FNU structure:

```
INVITE
sip:1111@example.com;avaya-cm-fnu=calling-party-block;avaya-cmdestination=44444444 SIP/2.0
```

```
INVITE sip:1111@example.com;avaya-cm-fnu=calling-party-block SIP/2.0
```

Parameters:

Name	Values	Req/Opt	PPM
avaya-cm-destination	Any number within the Communication Manager dial plan to which this call is being directed.	Opt	No

Authorization: None

Communication Manager button: cpn-blk

Feature package: No

SDP required: Yes

---

## Calling Party Number Unblock FNU

Calling Party Number Unblock deactivates calling party number (CPN) blocking and allows the CPN to be sent for a single call.

Calling Party Number Unblock FNU structure:

INVITE

sip:1111@example.com;avaya-cm-fnu=calling-party-unblock;avaya-cmdestination=

4444444 SIP/2.0

INVITE sip:1111@example.com;avaya-cm-fnu=calling-party-unblock SIP/2.0

Parameters:

Name	Values	Req/Opt	PPM
avaya-cm-destination	Any number within the Communication Manager dial plan to which this call is being directed	Opt	No

Authorization: None

Communication Manager button: cpn-unblk

Feature package: No

SDP required: Yes

## Dial Intercom FNU

Dial Intercom places a call to the station associated with the button. The called user receives a unique alerting indication. The endpoint extension and destination extension must be in the same intercom group. This feature is exactly like Automatic Intercom except for the way that the dial code is specified. PPM can provide the dial code for Automatic Intercom, but not for Dial Intercom.

Dial Intercom FNU structure:

```
INVITE sip:1111@example.com;avaya-cm-fnu=dial-intercom;avaya-cm-group=9;avayacm-dial-code=12 SIP/2.0
```

```
INVITE sip:1111@example.com;avaya-cm-fnu=dial-intercom;avaya-cm-group=9 SIP/2.0
```

Parameters:

Name	Values	Req/Opt	PPM
avaya-cm-group	Any number within the Communication Manager dial Intercom group number from 1 to 32.	Req	Yes
avaya-cm-dial-code	1- or 2-digit number	Opt	No

Authorization: An endpoint can use this FNU for a intercom group that matches an administered Communication Manager button for this extension.

Communication Manager button: dial-icom Grp: 9

Feature package: No

SDP required: Yes

---

## Drop FNU

Drop FNU allows users to drop calls. Users can drop calls from automatic hold or drop the last party they added to a conference call.

Drop FNU structure:

```
INVITE sip:1111@example.com;avaya-cm-fnu=drop SIP/2.0
```

Parameters: None

Authorization: None

Communication Manager button: drop

Feature package: No

SDP required: No

---

## Exclusion FNU

Exclusion allows multi-appearance telephone users to keep other users with appearances of the same extension from bridging onto an existing call. If the user activates the Exclusion button while other users are already bridged onto the call, the other users are dropped.

There are two ways to activate Exclusion.

- Manual Exclusion—when the user presses the exclusion button (either during dialing or during the call)
- Automatic Exclusion—as soon during a call, the user presses the exclusion button

Exclusion FNU structure:

```
INVITE sip:1111@example.com;avaya-cm-fnu=exclusion
      ;avaya-cm-action=on SIP/2.0
INVITE sip:1111@example.com;avaya-cm-fnu=exclusion
      ;avaya-cm-action=off SIP/2.0
```

Parameters:

Name	Values	Req/Opt	PPM
avaya-cm-action	on or off	Opt	No

Authorization: This request always applies to the endpoint's own extension. Automatic exclusion must be authorized by the extension's class of service.

Description:

Communication Manager button: exclusion

Feature package: No

SDP required: No

---

## Off-PBX Call FNU

This FNU provides the capability to enable and disable the extending of an EC500 call.

Off-PBX Call FNU structure:

```
INVITE sip:1111@example.com;avaya-cm-fnu=off-pbx;avaya-cm-action=on SIP/2.0
INVITE sip:1111@example.com;avaya-cm-fnu=off-pbx;avaya-cm-action=off SIP/2.0
```

## Requirement specifications

Parameters:

Name	Values	Req/Opt	PPM
avaya-cm-action	on or off	Req	No

Authorization: This request always applies to the endpoint's own extension.

Communication Manager button: ec500

Feature package: Yes

SDP required: No

---

## Last Number Dialed FNU

Last Number Dialed (redial) originates a call to the number last dialed by the station.

Last Number Dialed FNU structure:

```
INVITE sip:1111@example.com;avaya-cm-fnu=last-number-dialed SIP/2.0
```

Parameters: None

Authorization: None

Communication Manager button: last-numb

Feature package: No

SDP required: Yes

---

## Malicious Call Trace FNU

Malicious Call Trace Activation sends a message to the MCT control extensions stating that the user wants to trace a malicious call. MCT activation also starts recording the call, if the system has a MCT voice recorder.

Malicious Call Trace FNU structure:

```
INVITE sip:1111@example.com;avaya-cm-fnu=mct SIP/2.0
```

```
INVITE sip:1111@example.com;avaya-cm-fnu=mct-cancel SIP/2.0
```

Parameters: None

Authorization: Must be authorized by the endpoint's class of restriction

Communication Manager button: mct-act (to activate). Only an FAC to cancel.

Feature package: No

SDP required: No

---

## AUDIX One-Step Recording FNU

This feature allows a station user to start and end the recording of an in-progress conversation using the AUDIX system recording facility. Note that `avaya-cm-extension` is optional when `avaya-cm-action` is "off" (because a station can only have one of these buttons).

### AUDIX One-Step Recording

```
INVITE sip:1111@example.com; avaya-cm-fnu=one-touch-recording;
avaya-cmextension=3333;avaya-cm-action=on SIP/2.0
```

```
INVITE sip:1111@example.com;avaya-cm-fnu=one-touch-recording;avaya-cmaction=off SIP/
2.0
```

### Parameters:

Name	Values	Req/Opt	PPM
<code>avaya-cm-action</code>	on or off	Req	No
<code>avaya-cm-extension</code>	The Communication Manager extension of an AUDIX hunt group	Req	Yes

**Authorization:** An endpoint can use this FNU on another extension only if the endpoint has a Communication Manager button `audix-rec` with a matching extension.

**Communication Manager button:** `audix-rec` Ext: 3333

**Feature package:** No

**SDP required:** No

---

## Priority Call FNU

Priority Calling allows a user to place priority calls or change an existing call to a priority call.

### Priority Call FNU structure:

```
INVITE sip:1111@example.com;avaya-cm-fnu=priority-call;avaya-cm-destination=4444444
SIP/2.0
```

```
INVITE sip:1111@example.com;avaya-cm-fnu=priority-call SIP/2.0
```

## Requirement specifications

Parameters:

Name	Values	Req/Opt	PPM
avaya-cm-destination	Any number within the Communication Manager dial plan, to which this call is being directed	Opt	No

Authorization: None

Communication Manager button: priority

Feature package: No

SDP required: Yes

---

## Send All Calls FNU

Send All Calls allows users to temporarily direct all incoming calls to coverage regardless of the assigned call-coverage redirection criteria.

## Send All Calls of the endpoint's own (1111) extension FNU structure

```
INVITE sip:1111@example.com;avaya-cm-fnu=sac;avaya-cm-action=on SIP/2.0
```

```
INVITE sip:1111@example.com;avaya-cm-fnu=sac;avaya-cm-action=off SIP/2.0
```

Parameters:

Name	Values	Req/Opt	PPM
avaya-cm-action	on or off	Req	No

Authorization: This example shows the use of this FNU on the endpoint's own extension. No authorization is required. See the next case for how to apply this feature to another extension.

Communication Manager button: send-calls Ext: (left blank)

Feature package: Yes

SDP required: No

## Send All Calls of another endpoint's (2222) extension FNU structure

INVITE sip:2222@example.com;avaya-cm-fnu=sac;avaya-cm-action=on SIP/2.0

INVITE sip:2222@example.com;avaya-cm-fnu=sac;avaya-cm-action=off SIP/2.0

Parameters:

Name	Values	Req/Opt	PPM
avaya-cm-action	on or off	Req	No

Authorization: An endpoint can use this FNU on another extension only if the endpoint has a "send-calls Ext: 2222" button administered on Communication Manager.

Description: Applied to another extension.

Communication Manager button: send-calls Ext: 2222

Feature package: Yes

SDP required: No

---

## Transfer to Voice Mail FNU

Transfer to Voice Mail FNU allows coverage to transfer the caller to the original call recipient's AUDIX mail where the caller can leave a message.

Transfer to Voice Mail FNU structure:

INVITE sip:1111@example.com;avaya-cm-fnu=transfer-to-voicemail SIP/2.0

Parameters: None

Authorization: None

Communication Manager button: None. Accessed on the Communication Manager only by an FAC.

Feature package: No

SDP required: No

---

## Whisper Page Activation

Whisper Page Activation allows a user to make and receive whisper pages. A whisper page is an announcement sent to another extension that is active on a call where only the person on the extension hears the announcement. Other parties on the call cannot hear the announcement.

Whisper Page Activation FNU structure:

```
INVITE sip:1111@example.com;avaya-cm-fnu=whisper-page;avaya-cm-extension=3333 SIP/2.0
```

```
INVITE sip:1111@example.com;avaya-cm-fnu=whisper-page SIP/2.0
```

Parameters:

Name	Values	Req/Opt	PPM
avaya-cm-extension	The Communication Manager extension to which you want to whisper	Req	No

Authorization: The user must have a class of restriction (COR) that allows intra-switch calling to use whisper paging, and the extension to which you are whispering must not have blocked whispers.

Communication Manager button: whisp-act

Feature package: No

SDP required: Yes

# Appendix B: Terminal requirements and features

This appendix has two major sections that discuss Communication Manager's terminal requirements, features, and feature interactions with respect to SIP.

- [Terminals](#)

---

## Terminals

---

### Avaya CM OPTIM requirements for R3.1.x

#### Outgoing From header

OPTIM formats the outgoing **From: URI** field in the call that leaves the switch from a non-SIP telephone to a SIP telephone. The From header is as follows:

Display parameter followed administered digits at authoritative URI. The digits depend on the configuration set option calling number style. There are two choices: **network** and **PBX**. **PBX** is the station extension. **Network** is the network station modified by either the public or the private number table. The domain is taken from the Network Regions screen. If this is not administered the default is `anonymous.unknown.domain`. For an incoming ISDN call terminating to an OPTIM OPS station, the display information comes from the display IE and the handle is from the calling number. The domain is as above.



# Glossary

## A

<b>access code</b>	A dial code of 1 to 3 digits that activates a feature, cancels a feature, or accesses an outgoing <a href="#">trunk</a> .
<b>Access Security Gateway (ASG)</b>	A software module that secures Avaya Global Services log in accounts on many Avaya servers. Each login attempt on these accounts is met with a one-time challenge string that must be answered with the correct one-time response.
<b>American National Standards Institute (ANSI)</b>	A professional technical association that supports standards for transmission, protocol, and high-level languages, and that represents the U.S. in the <a href="#">International Organization for Standards</a> . ANSI standards are for voluntary use in the U.S.
<b>Avaya Communication Manager</b>	An open, scalable, highly reliable, and secure telephony application. Communication Manager provides user functionality and system management functionality, intelligent call routing, application integration and extensibility, and enterprise communications networking.

## B

<b>bearer channel (B-channel)</b>	A 64-kbps channel or a 56-kbps channel that carries a variety of <a href="#">digital</a> information streams. A B-channel carries voice at 64 kbps, data at up to 64 kbps, <a href="#">WebLM</a> voice encoded at 64 kbps, and voice at less than 64 kbps, alone or combined. See also <a href="#">data channel (D-channel)</a> .
<b>bus</b>	A multiconductor electrical path that transfers information over a common connection from any of several sources to any of several destinations. See <i>also</i> <a href="#">packet bus</a> ; <a href="#">time-division multiplex (TDM) bus</a> .

## C

<b>Call Detail Recording (CDR)</b>	A file that uses software and hardware to record call data. CDR was formerly called Station Message Detail Recording (SMDR). See <i>also</i> <a href="#">Call Detail Recording utility (CDRU)</a> .
<b>Call Detail Recording utility (CDRU)</b>	Software that collects, stores, filters, and provides output of call detail records. See <i>also</i> <a href="#">Call Detail Recording (CDR)</a> .
<b>carrier</b>	An enclosed shelf that contains vertical slots that hold <a href="#">circuit packs</a> .
<b>CCRON</b>	Coverage of calls redirected off-network.
<b>central office (CO)</b>	Telephone switching equipment that provides local telephone service and access to toll facilities for long distance calling.

<b>channel</b>	
<b>channel</b>	(1) A <a href="#">circuit</a> -switched call. (2) A communications path that transmits voice and data. (3) In <a href="#">WebLM</a> transmission, all the contiguous <a href="#">time slots</a> or noncontiguous time slots that are necessary to support a call. For example, an H0-channel uses six 64-kbps time slots. (4) A digital signal-0 (DS0) on a T1 facility or an E1 facility that is not specifically associated with a logical circuit-switched call. See <i>also</i> <a href="#">data channel (D-channel)</a> .
<b>circuit</b>	(1) An arrangement of electrical elements through which electric current flows. (2) A <a href="#">channel</a> or a transmission path between two or more points.
<b>circuit pack</b>	A circuit card on which electrical <a href="#">circuits</a> are printed, and integrated circuit (IC) chips and electrical components are installed. A circuit pack is installed in a <a href="#">SSH carrier</a> . One example is the TN2302.
<b>Class of Restriction (COR)</b>	A feature that allows up to 96 classes of call-origination restrictions and call-termination restrictions for telephones, telephone groups, <a href="#">data modules</a> , and <a href="#">trunk groups</a> . See <i>also</i> <a href="#">Class of Service (COS)</a> .
<b>Class of Service (COS)</b>	A feature that uses a number to specify whether telephone users can activate the Automatic Callback (ACB), Call Forwarding All Calls, Data Privacy, or Priority Calling features. See <i>also</i> <a href="#">Class of Restriction (COR)</a> .
<b>CCITT</b>	Comit�te Consultatif International Telephonique et Telegraphique. See <a href="#">International Telecommunications Union (ITU)</a> .
<b>communications system</b>	A software-controlled processor complex that interprets dial pulses, tones, and keyboard characters, and makes the proper connections within the system and externally. The communications system consists of a <a href="#">digital</a> computer, software, storage devices, and <a href="#">carriers</a> , with special hardware to perform the connections. A communications system provides communications services for the telephones on customer premises and the <a href="#">data terminals</a> on customer premises, including access to <a href="#">public networks</a> and <a href="#">Point-to-Point Protocol (PPP)s</a> . See <i>also</i> <a href="#">SSH</a> .
<b>Controlled Local Area Network (CLAN) circuit pack</b>	A <a href="#">circuit pack</a> (TN799B) in an Avaya DEFINITY port network (PN) that provides <a href="#">TCP/IP</a> connectivity to adjuncts over Ethernet or <a href="#">Point-to-Point Protocol (PPP)</a> . The CLAN circuit pack serves as the network interface for a DEFINITY server. The CLAN terminates IP ( <a href="#">TCP</a> and <a href="#">UDP</a> ), and relays those sockets and connections up to the Avaya DEFINITY server.
<b>Converged Communications Server (CCS)</b>	Avaya's proxy server for <a href="#">The Seamless Converged Communications Across Networks (SCCAN) solution offers voice and data access from a single SCCAN handset integrated with a deskset phone across the corporate Wireless Local Area Network (WLAN) and public Global System for Mobile communication (GSM) and cellular networks.</a> , initially supporting instant messaging.
<b>CPN</b>	Called-party number
<b>CPN/BN</b>	Calling-party number/billing number
<b>CSP</b>	Cellular Service Provider.

**customer-premises equipment (CPE)** Equipment that is connected to the telephone [network](#), and that resides on a customer site. CPE can include telephones, modems, fax machines, video conferencing devices, switches, and so on.

## D

**data channel (D-channel)** A 16-kbps channel or a 64-kbps channel that carries signaling information or data on an [Integrated Services Digital Network Basic Rate Interface \(ISDN-BRI\)](#) or [Integrated Services Digital Network Primary Rate Interface \(ISDN-PRI\)](#). See also [bearer channel \(B-channel\)](#).

**data communications equipment (DCE)** Equipment on the [network](#) side of a communications link that makes the binary serial data from the source or the transmitter compatible with the communications [channel](#). DCE is usually a modem, a [data module](#), or a [packet assembly/disassembly \(PAD\)](#).

**data module** An interconnection device between a Basic Rate Interface (BRI) or a [Digital Communications Protocol \(DCP\)](#) interface of the [SSH](#), and the [data terminal equipment \(DTE\)](#) or [data channel \(D-channel\)](#).

**data terminal** An input/output (I/O) device that has either switched access or direct access to a [host computer](#) or to a processor interface.

**data terminal equipment (DTE)** Equipment that comprises the endpoints in a connection over a data [circuit](#). In a connection between a [data terminal](#) and a host, the terminal, the host, and the associated modems or [data modules](#) comprise the DTE.

**digital** The representation of information by discrete steps. Compare with *analog*.

**Digital Communications Protocol (DCP)** A proprietary [protocol](#) that transmits both digitized voice and digitized data over the same communications link. A DCP link consists of two 64-kbps information (I) [channels](#), and one 8-kbps signaling (S) channel. The DCP protocol supports two information-bearing channels, and thus two telephones or [data modules](#). The I1 channel is the DCP channel that is assigned on the first page of the 8411 Station screen. The I2 channel is the DCP channel that is assigned on the analog adjunct page of the 8411 Station screen, or on the data module page.

**dual-tone multifrequency (DTMF)** The touchtone signals used for in-band telephone signaling.

**Dynamic Host Configuration Protocol (DHCP)** An IETF [protocol](#) (RFCs 951, 1534, 1542, 2131, and 2132) that assigns IP addresses dynamically from a pool of addresses instead of statically.

## E

**extension** A number from 1 digit to 5 digits that routes calls through a [communications system](#). With a Uniform Dial Plan ([UDP](#)) or a main-satellite dialing plan, extensions also route calls through a [Point-to-Point Protocol \(PPP\)](#).

## FNU

## F

**FNU** Feature Name URI

**FTP** File transfer protocol.

**feature** A specifically defined function or service that the system provides

## H

**H.323** An [International Telecommunications Union \(ITU\)](#) standard for switched multimedia communication between a [LAN](#)-based multimedia endpoint and a gatekeeper. See also [The Seamless Converged Communications Across Networks \(SCCAN\) solution offers voice and data access from a single SCCAN handset integrated with a deskset phone across the corporate Wireless Local Area Network \(WLAN\) and public Global System for Mobile communication \(GSM\) and cellular networks.](#)

**host computer** A computer that is connected to a [network](#), and that processes data from data-entry devices.

## I

**IE** See [information element \(IE\)](#).

**IEEE** See [Institute of Electrical and Electronics Engineers \(IEEE\)](#).

**IETF** See [Internet Engineering Task Force \(IETF\)](#).

**IM** Instant Messaging. The instant-messaging client software required for the [Avaya Communication Manager](#) release 2.0 or later is a version of the Avaya IP Softphone R5 and later, and the SIP Softphone R2 and later.

**information element (IE)** The name for the data fields within an [Integrated Services Digital Network \(ISDN\)](#) Layer 3 message.

**IP interface** A CLAN, ethernet processor interface, or procr that lets the server connect using internet protocol.

**Institute of Electrical and Electronics Engineers (IEEE)** An organization that produces standards for [local area network \(LAN\)](#) equipment.

**Integrated Services Digital Network (ISDN)** A [public network](#) or a [Point-to-Point Protocol \(PPP\)](#) that provides end-to-end [digital](#) communications for all services to which users have access. An ISDN uses a limited set of standard multipurpose user-network interfaces that are defined by the [CCITT](#). Through internationally accepted standard interfaces, an ISDN provides digital [circuit](#) switching communications or [packet switching](#) communications within the network. An ISDN provides links to other ISDNs to provide national digital communications and international digital communications. See also [Integrated Services Digital Network Basic Rate Interface \(ISDN-BRI\)](#); [Integrated Services Digital Network Primary Rate Interface \(ISDN-PRI\)](#).

<b>Integrated Services Digital Network Basic Rate Interface (ISDN-BRI)</b>	The interface between a communications system and terminal that includes two 64-kbps <a href="#">bearer channel (B-channel)s</a> for transmitting voice or data, and one 16-kbps <a href="#">data channel (D-channel)</a> for transmitting associated B-channel call control and out-of-band signaling information. ISDN-BRI also includes 48 kbps for transmitting framing and D-channel contention information, for a total interface speed of 192 kbps. ISDN-BRI serves ISDN terminals and <a href="#">digital terminals</a> that are fitted with ISDN terminal adapters. See also <a href="#">Integrated Services Digital Network Primary Rate Interface (ISDN-PRI)</a> .
<b>Integrated Services Digital Network Primary Rate Interface (ISDN-PRI)</b>	The interface between multiple communications systems that in North America includes 24 64-kbps channels that correspond to the North American digital signal-level 1 (DS1) standard rate of 1.544 Mbps. The most common arrangement of channels in ISDN-PRI is 23 64-kbps <a href="#">bearer channel (B-channel)s</a> for transmitting voice and data, and one 64-kbps <a href="#">data channel (D-channel)</a> for transmitting associated B-channel call control and out-of-band signaling information. With nonfacility-associated signaling (NFAS), ISDN-PRI can include 24 B-channels and no D-channel. See also <a href="#">Integrated Services Digital Network (ISDN)</a> ; <a href="#">Integrated Services Digital Network Basic Rate Interface (ISDN-BRI)</a> .
<b>International Organization for Standards</b>	A worldwide federation of standards bodies who issue International Standards for technological, scientific, intellectual, and economic activity. The federation is called <i>ISO</i> , and the US representative to the federation is the <a href="#">American National Standards Institute (ANSI)</a> .
<b>International Telecommunications Union (ITU)</b>	An international organization that sets universal standards for data communications, including <a href="#">Integrated Services Digital Network (ISDN)</a> . ITU was formerly known as International Telegraph and Telephone Consultative Committee ( <a href="#">CCITT</a> ).
<b>International Telegraph and Telephone Consultative Committee</b>	See <a href="#">International Telecommunications Union (ITU)</a> .
<b>Internet Engineering Task Force (IETF)</b>	One of two technical working bodies of the Internet Activities Board. The IETF develops new <a href="#">Transmission Control Protocol (TCP)/Internet Protocol (IP)</a> (for example, <a href="#">TCP/IP</a> ) standards for the Internet.
<b>Internet Protocol (IP)</b>	A connectionless <a href="#">protocol</a> that operates at Layer 3 of the <a href="#">Open Systems Interconnect (OSI)</a> model. IP protocol is used for Internet addressing and routing <a href="#">packets</a> over multiple <a href="#">narrowbands</a> to a final destination. IP protocol works in conjunction with <a href="#">Transmission Control Protocol (TCP)</a> , and is usually identified as <a href="#">TCP/IP</a> .

## local area network (LAN)

### L

**local area network (LAN)** A networking arrangement that is designed for a limited geographical area. Generally, a LAN is limited in range to a maximum of 6.2 miles, and provides high-speed carrier service with low error rates. Common configurations include daisy chain, star (including [circuit-switched](#)), ring, and bus.

### M

**MAC address (or MAC name)** A 48-bit number, uniquely identifying and programmed into each network interface card or device.

**media server interface** A CLAN card in a media server.

**MWI** messaging waiting indication.

### N

**NAME1** Legacy name, Latin characters, usually displayable, for example Eurofont and Kanafont encoding.

**NAME2** UTF-8 encoding. Used for multibyte character sets such as Chinese ideograms Hiragana, Katakana, and Hangul

**narrowband** A [circuit-switched](#) call at a data rate of 64 kbps or less. All switch calls that are not [WebLM](#) are considered to be narrowband. Compare with [wide band](#).

**network** A series of points, [nodes](#), or stations that are connected by communications [channels](#).

**network region** Network Region is a flexible administrative concept. A network region is an attribute associated with Communication Manager resources. It is used for among other things resource allocation and security.

For example, when an H.323, or SIP, endpoint requires a Gateway Resource to set up a talk path with a non-IP endpoint like a DCP telephone, Communication Manager checks the network region parameter to attempt to get that gateway resource from the same Network Region, that is, as near to the endpoint as possible, to minimize trunk usage and delay.

**node** A switching point or a control point for a [network](#). Nodes are either tandem or terminal. Tandem nodes receive signals, and pass the signals on. Terminal nodes originate a transmission path, or terminate a transmission path.

**nonce** Random value sent in a communications protocol exchange, often used to detect replay attacks.

This specifically refers to the use of random information inserted in a challenge for SIP digest authentication. The algorithms are essentially the same as for HTTP, and are described in RFC2617.

**O****OATS**

Origination and terminating signaling. Formerly known as origination-based call flow or W call flow. In a call flow diagram, describes the direction, initiation, and termination of signaling

**off-PBX station (OPS)**

A telephone that [Avaya Communication Manager](#) does not control, such as a cellular telephone or the home telephone of a user. The features of Communication Manager can be extended to an OPS through switch administration by associating the extension of the office telephone with the off-site telephone. Note: [The Seamless Converged Communications Across Networks \(SCCAN\) solution offers voice and data access from a single SCCAN handset integrated with a deskset phone across the corporate Wireless Local Area Network \(WLAN\) and public Global System for Mobile communication \(GSM\) and cellular networks.](#) endpoints are administered on Communication Manager as OPS.

**OPS**

Outboard Proxy SIP.

**Open Systems Interconnect (OSI)**

A system of seven independent communication [protocols](#) defined by the [International Organization for Standards](#) or ISO. Each of the seven layers enhances the communications services of the layer below, and shields the layer above from the implementation details of the lower layer. In theory, this structure can be used to build [communications systems](#) from independently developed layers.

**origination-based call flow**

See [OATS](#).

**O/S**

Operating System.

**P****packet**

A group of bits that is used in [packet switching](#) and that is transmitted as a discrete unit. A packet includes a message element and a control [information element \(IE\)](#). The message element is the data. The control IE is the header. In each packet, the message element and the control IE are arranged in a specified format.

**packet assembly/disassembly (PAD)**

The process of packetizing control data and user data from a transmitting device before the data is forwarded through the packet network. The receiving device disassembles the [packets](#), removes the control data, and then reassembles the packets, thus reconstituting the user data in its original form.

**packet bus**

A [bus](#) with a wide bandwidth that transmits [packets](#).

**packet switching**

A data-transmission technique that segments and routes user information in discrete data envelopes that are called [packets](#). Control information for routing, sequencing, and error checking is appended to each packet. With packet switching, a [channel](#) is occupied only during the transmission of a packet. On completion of the transmission, the channel is made available for the transfer of other packets.

## PBX

**PBX** private branch exchange. See [SSH](#).

**Plain Old Telephone Service (POTS)** Basic voice communications with standard, single-line phones accessing the [public switched telephone network \(PSTN\)](#).

**PPM** Personal Profile Manager (PPM) is a centralized repository of personalized data, such as contact lists or access control lists. PPM provides a Web Services interface that allows a client, such as a SIP telephone or SIP Softphone, to download a particular user's profile, thus allowing the user the mobility to move around to different devices but maintain access to the user's unique information.

As an example, a user might log in one day at a telephone at a service desk, and then the next from a Softphone while working from home. In each case, the user's personal profile would appear at each of those devices.

**Point-to-Point Protocol (PPP)** A standard (largely replacing SLIP) allowing a computer to use [TCP/IP](#) with a regular telephone line.

**port** A data-transmission access point or voice-transmission access point on a device that is used for communicating with other devices.

**private network** A [network](#) exclusively for the telecommunications needs of a particular customer.

**processor ethernet** A logical connection between the server itself and a network interface card. The way this connection is administered in Communication Manager determines what type of traffic the NIC allows.

**procr** See [processor ethernet](#).

**protocol** A set of conventions or rules that governs the format and the timing of message exchanges. A protocol controls error correction and the movement of data.

**proxy trust domain** Includes those SIP servers and gateways, but not endpoints with identities administered on the SES.

**public network** A [network](#) to which all customers have open access for local calling and long distance calling.

**public switched telephone network (PSTN)** The public worldwide voice telephone [network](#).

## R

**RAS** Remote Access Server (or in Microsoft Windows operating systems, Remote Access Service).

**Real Time Transfer Protocol (RTP)** An [Internet Engineering Task Force \(IETF\) protocol](#) (RFC 1889) that addresses the problems that occur when video and other exchanges with real-time properties are delivered over a [local area network \(LAN\)](#) that is designed for data. RTP gives higher priority to video and other real-time interactive exchanges than to connectionless data.

<b>RFA</b>	Remote Feature Activation is a web-based application which is used to obtain Avaya authentication and licensing files.
<b>RFC</b>	Request for Comments designates Internet Engineering Task Force (IETF) standards that are drafts.
<b>RNIS</b>	Remote Network Implementation Services is a contract installation services group within Avaya Inc.
<b>RPM</b>	RedHat Package Manager
<b>RSA</b>	Remote Supervisor Adapter
<b>RTC</b>	Real Time Communication
<b>RTCP</b>	Real Time Control Protocol
<b>S</b>	
<b>S8400</b>	A hardware platform for use as a media server that is a single module. The S8400 uses a flash drive, and the SAMP functionality is on the board. No separate chassis is required.
<b>S8500</b>	A hardware platform from the IBM x305 series. This machine uses an RSA for a remote maintenance board.
<b>S8500B</b>	A hardware platform from the IBM x306 series. This machine uses a SAMP for a remote maintenance board.
<b>SCCAN</b>	The Seamless Converged Communications Across Networks (SCCAN) solution offers voice and data access from a single SCCAN handset integrated with a deskset phone across the corporate Wireless Local Area Network (WLAN) and public Global System for Mobile communication (GSM) and cellular networks.
<b>Session Initiated Protocol (SIP)</b>	A signaling <a href="#">protocol</a> for Internet conferencing, telephony, presence, events notification, and instant messaging. SIP initiates call setup, routing, authentication, and other feature messages to endpoints within an IP domain. See also <a href="#">H.323</a> ; <a href="#">Voice over IP (VoIP)</a> .
<b>SIP Enablement Services</b>	SES. SIP Enablement Services is the new name for Converged Communication Server.
<b>SSH</b>	Secure SHell is a protocol for secure remote login and other secure network services over an insecure network. It provides for server authentication, and data integrity with perfect port-forwarding secrecy.
<b>SSL</b>	Secure Socket Layer.
<b>subscriber</b>	A <a href="#">The Seamless Converged Communications Across Networks (SCCAN) solution offers voice and data access from a single SCCAN handset integrated with a deskset phone across the corporate Wireless Local Area Network (WLAN) and public Global System for Mobile communication (GSM) and cellular networks.</a> subscriber is one of the following: a <a href="#">SIP Enablement Services</a> host or other SIP <a href="#">node</a> , a SIP user (per Contact), or a Media Server (running <a href="#">Avaya Communication Manager</a> 2.0 or later).
<b>switch</b>	Any kind of telephone switching system. See also <a href="#">communications system</a> .

## TAC

## T

**TAC** trunk-access code

**TCP** See [Transmission Control Protocol \(TCP\)](#).

**TCP/IP** See [Internet Protocol \(IP\)](#). See also [Transmission Control Protocol \(TCP\)](#).

**tie trunk** A telecommunications [channel](#) that directly connects two private switching systems.

**time-division multiplex (TDM) bus** A [bus](#) that is time-shared regularly by pre allocating short [time slots](#) to each transmitter. In a [SSH](#), all [Plain Old Telephone Service \(POTS\) circuits](#) are connected to the [time-division multiplex \(TDM\) bus](#), and any port can send a signal to any other port. See also [time-division multiplexing \(TDM\)](#).

**time-division multiplexing (TDM)** A form of multiplexing that divides a transmission [channel](#) into successive [time slots](#). See also [time-division multiplex \(TDM\) bus](#).

**time slot** In the [SSH](#), a time slot refers to either a digital signal level-0 (DS0) on a T1 facility or an E1 facility, or a 64-kbps unit on the [time-division multiplex \(TDM\) bus](#) or fiber connection between [port](#) networks (PNs) that is structured as 8 bits every 125 microseconds.

**Transmission Control Protocol (TCP)** A connection-oriented transport-layer [protocol](#), IETF STD 7. RFC 793, that governs the exchange of sequential data. Whereas the [Internet Protocol \(IP\)](#) deals only with [packets](#), TCP enables two hosts to establish a connection and exchange streams of data. TCP guarantees delivery of data, and also guarantees that packets are delivered in the same order in which the packets are sent.

**Transport Layer Security (TLS)** An IETF standard (RFC 2246) to supersede Netscapes' Secure Socket Layer (SSL) and provide host-to-host data connections with encryption and certification at the transport layer.

**trunk** A dedicated communications [channel](#) between two [communications systems](#) or [central office \(CO\)s](#).

**trunk access code (TAC)** A dial access code used to access a specific trunk.

**trunk group** Telecommunications [channels](#) that are assigned as a group for certain functions, and that can be used interchangeably between two [communications systems](#) or [central office \(CO\)s](#).

## W

**W call flow** See [OATS](#).

# Index

## A

administering	
AAR/ARS routing . . . . .	<a href="#">33</a>
Feature-Related System Parameters screen . . . . .	<a href="#">81</a>
IP Network Region screen . . . . .	<a href="#">52</a>
Locations screen . . . . .	<a href="#">58</a>
Signaling Group screen . . . . .	<a href="#">29, 74</a>
SIP . . . . .	<a href="#">27</a>
SIP trunks . . . . .	<a href="#">27</a>
System Capacity screen . . . . .	<a href="#">80</a>
System-Parameters Call Coverage/Call Forwarding screen . . . . .	<a href="#">83</a>
System-Parameters Customer-Options screen . . . . .	<a href="#">28, 84</a>
Trunk Group screen . . . . .	<a href="#">31, 90, 101</a>
Trunk Group screen page 2 . . . . .	<a href="#">101</a>
Trunk Group screens . . . . .	<a href="#">90</a>
administration	
call routing . . . . .	<a href="#">33</a>
detailed screens . . . . .	<a href="#">37</a>
enable SIP on Communication Manager . . . . .	<a href="#">28</a>
set SIP device as OPTIM extension . . . . .	<a href="#">105</a>
SIP trunks . . . . .	<a href="#">31</a>
administrative screens . . . . .	<a href="#">37</a>
ANI table . . . . .	<a href="#">59</a>
ARS Digit Analysis Table	
ANI Req'd field . . . . .	<a href="#">39</a>
Call Type (for AAR only) field . . . . .	<a href="#">40</a>
Call Type (for ARS only) field . . . . .	<a href="#">41</a>
Dialed String field . . . . .	<a href="#">41</a>
Location . . . . .	<a href="#">42</a>
Max field . . . . .	<a href="#">42</a>
Min field . . . . .	<a href="#">43</a>
Node Number field . . . . .	<a href="#">43</a>
Percent Full field . . . . .	<a href="#">43</a>
Route Pattern field . . . . .	<a href="#">43</a>
assistance . . . . .	<a href="#">15</a>
audience statement . . . . .	<a href="#">9</a>
Audix One-Step recording FNU . . . . .	<a href="#">117</a>
Avaya CM OPTIM terminals . . . . .	<a href="#">121</a>

## C

call appearances . . . . .	<a href="#">105</a>
call capacity . . . . .	<a href="#">80</a>
call coverage . . . . .	<a href="#">83</a>
Call Forward Busy FNU . . . . .	<a href="#">109</a>
Call Forward FNU . . . . .	<a href="#">108</a>

call forwarding . . . . .	<a href="#">83</a>
call processing	
SES . . . . .	<a href="#">107</a>
call routing . . . . .	<a href="#">33</a>
calling party block FNU . . . . .	<a href="#">112</a>
calling party number unblock FNU . . . . .	<a href="#">113</a>
capacity . . . . .	<a href="#">59, 80</a>
changes	
overview . . . . .	<a href="#">17</a>
changes to this book . . . . .	<a href="#">17</a>
commands	
for Off-PBX Station Mapping screen . . . . .	<a href="#">64</a>
comments, how to submit . . . . .	<a href="#">16</a>
compliance requirements . . . . .	<a href="#">11</a>
Configuration Set screen	
Configuration Set Description field . . . . .	<a href="#">47</a>
connected party name . . . . .	<a href="#">94</a>

## D

Dial Intercom FNU . . . . .	<a href="#">114</a>
DID/Tie/ISDN/SIP Intercept Treatment field	
Feature-Related System Parameters screen . . . . .	<a href="#">82</a>
Directed Call Pickup FNU . . . . .	<a href="#">111</a>
distinctive alerting . . . . .	<a href="#">114</a>
document conventions . . . . .	<a href="#">11</a>
documentation	
related . . . . .	<a href="#">10, 13</a>
domain	
authoritative . . . . .	<a href="#">29, 52</a>
blank . . . . .	<a href="#">25</a>
far-end . . . . .	<a href="#">25, 77</a>
network region . . . . .	<a href="#">29</a>
Drop FNU . . . . .	<a href="#">114</a>

## E

equipment . . . . .	<a href="#">10</a>
Exclusion FNU . . . . .	<a href="#">115</a>

## F

far-end domain . . . . .	<a href="#">25</a>
Feature Access Codes screen page 1	
Auto Route Selection (ARS) Access Code1 field . . . . .	<a href="#">49</a>
feature interactions . . . . .	<a href="#">11</a>
Feature-Related System Parameters screen . . . . .	<a href="#">81</a>
Trunk-to-Trunk Transfer field . . . . .	<a href="#">81, 82</a>

## Index

features	
failover . . . . .	<a href="#">25</a>
meet me conferencing . . . . .	<a href="#">27</a>
fields	
ACA Assignment . . . . .	<a href="#">101</a>
ANI Req'd . . . . .	<a href="#">39</a>
Application . . . . .	<a href="#">65</a>
Auth Code . . . . .	<a href="#">97</a>
Authoritative Domain . . . . .	<a href="#">52</a>
Auto Route Selection (ARS) Access Code1 . . . . .	<a href="#">49</a>
Bridged calls . . . . .	<a href="#">70</a>
Busy Threshold . . . . .	<a href="#">95</a>
Bypass If IP Threshold Exceeded . . . . .	<a href="#">77</a>
Call Limit . . . . .	<a href="#">68</a>
Call Type (for AAR only) . . . . .	<a href="#">40</a>
Call Type (for ARS only) . . . . .	<a href="#">41</a>
Calls Allowed . . . . .	<a href="#">69</a>
CDR Reports . . . . .	<a href="#">91</a>
Configuration Set . . . . .	<a href="#">67</a>
Configuration Set Description . . . . .	<a href="#">47</a>
COR . . . . .	<a href="#">92</a>
CPN Prefix . . . . .	<a href="#">61</a>
Dial Access . . . . .	<a href="#">94</a>
Dial Prefix . . . . .	<a href="#">66</a>
Dialed String . . . . .	<a href="#">41</a>
DID/Tie/ISDN/SIP Intercept Treatment . . . . .	<a href="#">82</a>
Digital Loss Group . . . . .	<a href="#">99</a>
Direct IP-IP Audio Connections . . . . .	<a href="#">78</a>
Direction . . . . .	<a href="#">94</a>
Disable call classifier for CCRON over SIP trunks . . . . .	<a href="#">83</a>
DTMF over IP . . . . .	<a href="#">77</a>
Enhanced EC500 . . . . .	<a href="#">87</a>
Ext Code . . . . .	<a href="#">62</a>
Ext Len . . . . .	<a href="#">62</a>
Far-end Domain . . . . .	<a href="#">77</a>
Far-end Network Region . . . . .	<a href="#">76</a>
Far-end Node Name . . . . .	<a href="#">75</a>
Group Name	
Trunk Group screen page 1 . . . . .	<a href="#">92</a>
Group Number	
Signaling Group screen p 1 . . . . .	<a href="#">74</a>
Trunk Group screen page 1 . . . . .	<a href="#">90</a>
Group Type	
Signaling Group screen page 1 . . . . .	<a href="#">74</a>
Trunk Group screen page 1 . . . . .	<a href="#">91</a>
Home Domain . . . . .	<a href="#">52</a>
Inter-region IP-IP Direct Audio . . . . .	<a href="#">54</a>
Intra-region IP-IP Direct Audio . . . . .	<a href="#">53</a>
IP Address . . . . .	<a href="#">57</a>
IP Audio Hairpinning . . . . .	<a href="#">78</a>
Location (for the ARS Digit Analysis Table) . . . . .	<a href="#">42</a>
Maintenance Tests . . . . .	<a href="#">102</a>
Mapping Mode . . . . .	<a href="#">69</a>
Mark Users as Phone . . . . .	<a href="#">104</a>
Max . . . . .	<a href="#">42</a>
fields, (continued)	
Maximum Administered SIP Trunks . . . . .	<a href="#">86</a>
Maximum Off-PBX Telephones - EC500 . . . . .	<a href="#">84</a>
Maximum Off-PBX Telephones - OPS . . . . .	<a href="#">84</a>
Maximum Off-PBX Telephones - SCCAN . . . . .	<a href="#">85</a>
Measured . . . . .	<a href="#">102</a>
Min . . . . .	<a href="#">43</a>
MM (WSM) Route Pattern . . . . .	<a href="#">73</a>
Name . . . . .	<a href="#">56</a>
Near-end Listen Port . . . . .	<a href="#">76</a>
Near-end Node Name . . . . .	<a href="#">75</a>
Night Service . . . . .	<a href="#">95</a>
Node Number . . . . .	<a href="#">43</a>
Number of Members . . . . .	<a href="#">97</a>
Numbering Format . . . . .	<a href="#">103</a>
Outgoing Display . . . . .	<a href="#">94</a>
Percent Full . . . . .	<a href="#">43</a>
Phone Number . . . . .	<a href="#">66</a>
Preferred Minimum Session Refresh Interval . . . . .	<a href="#">100</a>
Proxy Selection Route Pattern . . . . .	<a href="#">58</a>
Queue Length . . . . .	<a href="#">96</a>
Redirect on OPTIM failure . . . . .	<a href="#">99</a>
Region	
IP Address Mapping screen . . . . .	<a href="#">51</a>
Network Region screen . . . . .	<a href="#">52</a>
Replace Unavailable Numbers . . . . .	<a href="#">103</a>
Route Pattern . . . . .	<a href="#">43</a>
SCCAN	
Route Pattern screen . . . . .	<a href="#">72</a>
Trunk Group screen page 2 . . . . .	<a href="#">99</a>
Secure SIP	
Route Pattern screen . . . . .	<a href="#">72</a>
Server IP Address . . . . .	<a href="#">55</a>
Server Port . . . . .	<a href="#">55</a>
Service Type . . . . .	<a href="#">96</a>
Session Establishment Timer . . . . .	<a href="#">78</a>
Signaling Group . . . . .	<a href="#">97</a>
SIP Trunks . . . . .	<a href="#">80</a>
Station Extension . . . . .	<a href="#">65, 68</a>
TAC . . . . .	<a href="#">93</a>
TN . . . . .	<a href="#">93</a>
Total CPN Len . . . . .	<a href="#">63</a>
Transport Method . . . . .	<a href="#">75</a>
TrkGrp(s) . . . . .	<a href="#">63</a>
Trunk Selection . . . . .	<a href="#">66</a>
Type . . . . .	<a href="#">79</a>
Unicode Name . . . . .	<a href="#">98</a>
Used . . . . .	<a href="#">85</a>
firmware requirements . . . . .	<a href="#">24</a>
FNU	
AUDIX One-Step recording . . . . .	<a href="#">117</a>
call forward . . . . .	<a href="#">108</a>
call forward busy . . . . .	<a href="#">109</a>
calling party number block . . . . .	<a href="#">112</a>
calling party number unblock . . . . .	<a href="#">113</a>

FNU, (continued)	
dial intercom . . . . .	<a href="#">114</a>
directed call pickup . . . . .	<a href="#">111</a>
drop . . . . .	<a href="#">114</a>
exclusion . . . . .	<a href="#">115</a>
extended call pickup FNU . . . . .	<a href="#">112</a>
Last number dialed . . . . .	<a href="#">116</a>
Malicious call trace . . . . .	<a href="#">116</a>
off-PBX . . . . .	<a href="#">115</a>
priority call . . . . .	<a href="#">117</a>
send all calls . . . . .	<a href="#">118</a>
transfer to voice mail . . . . .	<a href="#">119</a>
whisper page activation . . . . .	<a href="#">120</a>
FNU requirements . . . . .	<a href="#">107</a>
FNUs . . . . .	<a href="#">11</a> , <a href="#">107</a>
FRC 3325 compliance . . . . .	<a href="#">107</a>

---

## H

hardware requirements . . . . .	<a href="#">23</a>
---------------------------------	--------------------

---

## I

intercept treatment . . . . .	<a href="#">82</a>
intercom . . . . .	<a href="#">114</a>
international calls . . . . .	<a href="#">103</a>
introduction . . . . .	<a href="#">19</a>
IP Address Mapping screen	
Region field . . . . .	<a href="#">51</a>
IP Network Region screen	
Authoritative Domain field . . . . .	<a href="#">52</a>
Home Domain field . . . . .	<a href="#">52</a>
IP Node Names screen	
Administering . . . . .	<a href="#">29</a>
IP Address field . . . . .	<a href="#">57</a>
Name field . . . . .	<a href="#">56</a>
ISDN protocol	
ARS Digit Analysis Table . . . . .	<a href="#">40</a>

---

## L

last number dialed FNU . . . . .	<a href="#">116</a>
Locations screen . . . . .	<a href="#">58</a>
Proxy Selection Route Pattern . . . . .	<a href="#">58</a>
Proxy Selection Route Pattern field . . . . .	<a href="#">58</a>

---

## M

malicious call trace FNU . . . . .	<a href="#">116</a>
Meet Me conferencing feature . . . . .	<a href="#">27</a>

---

## N

Network Region screen	
Authoritative Domain field . . . . .	<a href="#">52</a>
Inter-region IP-IP Direct Audio . . . . .	<a href="#">54</a>
Intra-region IP-IP Direct Audio . . . . .	<a href="#">53</a>
Region field . . . . .	<a href="#">52</a>
Server IP Address . . . . .	<a href="#">55</a>
Server Port field . . . . .	<a href="#">55</a>
new . . . . .	<a href="#">17</a>
list public-unknown-numbering command . . . . .	<a href="#">59</a>
Mark Users as Phone field . . . . .	<a href="#">104</a>
name for Converged Communication Server . . . . .	<a href="#">131</a>
Preferred Minimum Session Refresh Interval . . . . .	<a href="#">100</a>
Prepend + to Calling Number field . . . . .	<a href="#">103</a>
new material . . . . .	<a href="#">17</a>
Numbering-Public/Unknown Numbering screen . . . . .	<a href="#">59</a>
Numbering-Public/Unknown Numbering screen	
CPN Prefix field . . . . .	<a href="#">61</a>
Ext Code field . . . . .	<a href="#">62</a>
Ext Len field . . . . .	<a href="#">62</a>
Total CPN Len field . . . . .	<a href="#">63</a>
Trk Grp(s) field . . . . .	<a href="#">63</a>

---

## O

off-PBX FNU . . . . .	<a href="#">115</a>
Off-PBX Station Mapping screen page 1	
Application field . . . . .	<a href="#">65</a>
Configuration Set field . . . . .	<a href="#">67</a>
Dial Prefix field . . . . .	<a href="#">66</a>
Phone Number field . . . . .	<a href="#">66</a>
Station Extension field . . . . .	<a href="#">65</a>
Trunk Selection field . . . . .	<a href="#">66</a>
Off-PBX Station Mapping screen page 2	
Bridged Calls field . . . . .	<a href="#">70</a>
Call Limit field . . . . .	<a href="#">68</a>
Calls Allowed field . . . . .	<a href="#">69</a>
Mapping Mode field . . . . .	<a href="#">69</a>
Station Extension field . . . . .	<a href="#">68</a>
OPS extensions . . . . .	<a href="#">105</a>
OPTIM extensions . . . . .	<a href="#">105</a>
and SIP . . . . .	<a href="#">105</a>
origination-based call flow . . . . .	<a href="#">19</a>
outgoing queue . . . . .	<a href="#">96</a>

---

## P

p-a-i . . . . .	<a href="#">107</a>
p-asserted-identity . . . . .	<a href="#">107</a>
Pickup	
directed FNU . . . . .	<a href="#">111</a>
expanded FNU . . . . .	<a href="#">112</a>

## Index

priority call FNU . . . . . [117](#)  
Proxy Selection Route Pattern field  
    Locations screen . . . . . [58](#)  
purpose statement . . . . . [9](#)

## Q

queue  
    outgoing . . . . . [96](#)

## R

redirection  
    coverage of calls off-net . . . . . [83](#)  
    OPTIM failure . . . . . [99](#)  
related documents . . . . . [10](#), [13](#)  
requirement specifications . . . . . [107](#)  
    FNU requirements . . . . . [107](#)  
    SES call processing software . . . . . [107](#)  
requirements  
    firmware . . . . . [24](#)  
    terminal . . . . . [121](#)  
requirements for SIP . . . . . [23](#)  
    engineering . . . . . [24](#)  
    firmware . . . . . [24](#)  
    hardware . . . . . [23](#)  
    related systems . . . . . [26](#)  
    software  
        software requirements . . . . . [23](#)  
ROOF . . . . . [99](#)  
Route Pattern screen . . . . . [71](#)  
Route Pattern screen page 2  
    SCCAN field . . . . . [72](#)  
    Secure SIP field . . . . . [72](#)

## S

SAC . . . . . [118](#), [119](#)  
SCCAN-Related System Parameters screen . . . . . [73](#)  
SCCAN-Related System Parameters screen page 2  
    MM (WSM) Route Pattern field . . . . . [73](#)  
screens  
    ARS Digit Analysis Table . . . . . [33](#), [39](#)  
    Configuration Set . . . . . [32](#), [44](#)  
    Feature Access Code . . . . . [33](#), [49](#)  
    Feature Related System Parameters . . . . . [81](#)  
    Feature-Related System Parameters . . . . . [81](#)  
    IP Address Mapping . . . . . [29](#), [34](#), [50](#)  
    IP Network Region . . . . . [29](#), [52](#)  
    IP Node Names . . . . . [29](#), [56](#)  
    Locations . . . . . [33](#), [58](#)  
    Numbering Public/Unknown Numbering . . . . . [32](#)  
    Numbering-Public/Unknown Numbering . . . . . [59](#)  
    Off PBX Station Mapping page 2 . . . . . [32](#)

screens, (continued)  
    Off-PBX Station Mapping page 1 . . . . . [64](#)  
    Off-PBX Station Mapping page 2 . . . . . [68](#)  
    Route Pattern . . . . . [33](#), [71](#)  
    SCCAN-Related System Parameters . . . . . [35](#), [73](#)  
    Signaling Group . . . . . [29](#), [74](#)  
    Station . . . . . [79](#)  
    System Capacity . . . . . [28](#), [80](#)  
    System Parameters . . . . . [81](#)  
    System Parameters Customer Options page 1 . . . . . [29](#)  
    System Parameters Customer Options  
        page 2 . . . . . [28](#), [86](#)  
    System Parameters Customer Options  
        page 4 . . . . . [28](#), [87](#), [89](#)  
    System Parameters Features page 1 . . . . . [31](#)  
    System Parameters-Call Coverage/Call  
        Forwarding . . . . . [36](#), [83](#)  
    System-Parameters Customer-Options . . . . . [84](#)  
    System-Parameters Customer-Options screen  
        page 1 . . . . . [84](#)  
    Trunk Group . . . . . [90](#)  
    Trunk Group page 1 . . . . . [31](#), [90](#)  
    Trunk Group page 2 . . . . . [31](#), [98](#), [101](#)  
    Trunk Group page 3 . . . . . [32](#)  
    Trunk Group page 4 . . . . . [32](#), [104](#)  
security  
    firewall . . . . . [22](#)  
Send All Calls . . . . . [119](#)  
send all calls FNU . . . . . [118](#)  
SES call processing . . . . . [107](#)  
    FRC 3325 compliance . . . . . [107](#)  
Session Initiated Protocol  
    description . . . . . [19](#)  
    glossary definition . . . . . [131](#)  
Signaling Group screen . . . . . [74](#)  
    Bypass If IP Threshold Exceeded field . . . . . [77](#)  
    Far-end Domain field . . . . . [77](#)  
    Far-end Listen Port field . . . . . [76](#)  
    Far-end Network Region field . . . . . [76](#)  
    Far-end Node Name field . . . . . [75](#)  
    Group Number field . . . . . [74](#)  
    Group Type field . . . . . [74](#)  
    illustration . . . . . [74](#)  
    IP Audio Hairpinning field . . . . . [78](#)  
    Near-end Listen Port field . . . . . [76](#)  
    Transport Method field . . . . . [75](#)  
Signaling Group screen page 1  
    Bypass If IP Threshold Exceeded field . . . . . [77](#)  
    Direct IP-IP Audio Connections field . . . . . [78](#)  
    DTMF over IP field . . . . . [77](#)  
    Far-end Domain field . . . . . [77](#)  
    Far-end Network Region field . . . . . [76](#)  
    Far-end Node Name field . . . . . [75](#)  
    Group Number field . . . . . [74](#)  
    Group Type field . . . . . [74](#)  
    IP Audio Hairpinning field . . . . . [78](#)

Signaling Group screen page 1, (continued)	
Near-end Listen Port field . . . . .	<a href="#">76</a>
Near-end Node Name field . . . . .	<a href="#">75</a>
Session Establishment Timer field . . . . .	<a href="#">78</a>
Transport Method field . . . . .	<a href="#">75</a>
SIP	
administration . . . . .	<a href="#">27</a>
administrative screens . . . . .	<a href="#">37</a>
definition . . . . .	<a href="#">19</a>
engineering notes, trunks . . . . .	<a href="#">24</a>
integrate with Communication Manager . . . . .	<a href="#">20</a>
intercept treatment . . . . .	<a href="#">82</a>
requirements . . . . .	<a href="#">23</a>
station screen . . . . .	<a href="#">79</a>
stations . . . . .	<a href="#">22, 26</a>
SIP as OPTIM extension . . . . .	<a href="#">105</a>
SIP trunking . . . . .	<a href="#">21</a>
SIP trunks	
additions to support . . . . .	<a href="#">21</a>
administering . . . . .	<a href="#">27, 31</a>
SIP-related support	
access control . . . . .	<a href="#">22</a>
additions to Avaya Communication Manager . . . . .	<a href="#">21</a>
CDR . . . . .	<a href="#">22</a>
stations . . . . .	<a href="#">22</a>
trunking . . . . .	<a href="#">21</a>
SSystem-Parameters Customer-Options screen page 1	
Maximum Off-PBX Telephones - OPS field . . . . .	<a href="#">84</a>
Station screen . . . . .	<a href="#">79</a>
Station screen page 1	
Type field . . . . .	<a href="#">79</a>
stations . . . . .	<a href="#">22, 26</a>
subdomain . . . . .	<a href="#">53</a>
support . . . . .	<a href="#">15</a>
System Capacity screen . . . . .	<a href="#">80</a>
SIP Trunks field . . . . .	<a href="#">80</a>
System Parameters Call Coverage / Call Forwarding screen . . . . .	<a href="#">83</a>
System Parameters Customer Options page 4	
Enhanced EC500 field . . . . .	<a href="#">87</a>
System Parameters Customer Options screen . . . . .	<a href="#">84</a>
System Parameters screen page 1	
DID/Tie/ISDN/SIP Intercept Treatment field. . . . .	<a href="#">82</a>
System Parameters screen page 2	
Disable call classifier for CCRON over SIP trunks field . . . . .	<a href="#">83</a>
System Parameters-Call Coverage/Call Forwarding screen . . . . .	<a href="#">83</a>
System-Parameters Customer-Options screen page 1	<a href="#">84</a>
Maximum Off-PBX Telephones - EC500 field . . . . .	<a href="#">84</a>
Maximum Off-PBX Telephones - SCCAN field . . . . .	<a href="#">85</a>
Used field . . . . .	<a href="#">85</a>
System-Parameters Customer-Options screen page 2	
Maximum Administered SIP Trunks field . . . . .	<a href="#">86</a>

---

**T**

technical assistance . . . . .	<a href="#">15</a>
terminal requirements . . . . .	<a href="#">121</a>
terminals	
Avaya CM OPTIM . . . . .	<a href="#">121</a>
TLS . . . . .	<a href="#">25</a>
TLS links	
for failover . . . . .	<a href="#">25</a>
transfer to voice mail FNU. . . . .	<a href="#">119</a>
troubleshooting	
403 Screening failure . . . . .	<a href="#">51</a>
call routing . . . . .	<a href="#">51</a>
Trunk Group screen	
ACA Assignment field . . . . .	<a href="#">101</a>
Auth Code field . . . . .	<a href="#">97</a>
Busy Threshold field . . . . .	<a href="#">95</a>
CDR Reports field . . . . .	<a href="#">91</a>
COR field . . . . .	<a href="#">92</a>
Dial Access field. . . . .	<a href="#">94</a>
Digital Loss Group field . . . . .	<a href="#">98, 99</a>
Direction field . . . . .	<a href="#">93</a>
Group Name field . . . . .	<a href="#">92</a>
Group Number field . . . . .	<a href="#">90</a>
Group Type field . . . . .	<a href="#">91</a>
Maintenance Tests field . . . . .	<a href="#">102</a>
Measured field . . . . .	<a href="#">102</a>
Night Service field . . . . .	<a href="#">95</a>
Number of Members field . . . . .	<a href="#">97</a>
Numbering Format field . . . . .	<a href="#">103</a>
Outgoing Display field . . . . .	<a href="#">94</a>
page 1 illustration . . . . .	<a href="#">90</a>
page 2 illustration . . . . .	<a href="#">101</a>
Queue Length field . . . . .	<a href="#">96</a>
Replace Unavailable Numbers field. . . . .	<a href="#">103</a>
Service Type field . . . . .	<a href="#">96</a>
Signaling Group field . . . . .	<a href="#">97</a>
TAC field . . . . .	<a href="#">93</a>
TN field . . . . .	<a href="#">93</a>
Trunk Hunt field . . . . .	<a href="#">98, 99</a>
Trunk Group screen page 1	<a href="#">90</a>
Auth Code field . . . . .	<a href="#">97</a>
Busy Threshold field. . . . .	<a href="#">95</a>
CDR Reports field . . . . .	<a href="#">91</a>
COR field . . . . .	<a href="#">92</a>
Dial Access field. . . . .	<a href="#">94</a>
Direction field . . . . .	<a href="#">94</a>
Group Name field . . . . .	<a href="#">92</a>
Group Number field . . . . .	<a href="#">90</a>
Group Type field . . . . .	<a href="#">91</a>
Night Service field . . . . .	<a href="#">95</a>
Number of Members field . . . . .	<a href="#">97</a>
Outgoing Display field . . . . .	<a href="#">94</a>
Queue Length field . . . . .	<a href="#">96</a>

## Index

Trunk Group screen page 1, (continued)	
Service Type field . . . . .	<a href="#">96</a>
Signaling Group field . . . . .	<a href="#">97</a>
TAC field . . . . .	<a href="#">93</a>
TN field . . . . .	<a href="#">93</a>
Trunk Group screen page 2. . . . .	<a href="#">101</a>
Digital Loss Group field . . . . .	<a href="#">99</a>
Preferred Minimum Session Refresh Interval field. . . . .	<a href="#">100</a>
Redirect on OPTIM failure field . . . . .	<a href="#">99</a>
SCCAN field . . . . .	<a href="#">99</a>
Unicode Name field . . . . .	<a href="#">98</a>
Trunk Group screen page 3	
ACA Assignment field . . . . .	<a href="#">101</a>
Maintenance Tests field . . . . .	<a href="#">102</a>
Measured field . . . . .	<a href="#">102</a>
Numbering Format field . . . . .	<a href="#">103</a>
Replace Unavailable Numbers field . . . . .	<a href="#">103</a>
Trunk Group screen page 4	
Mark Users as Phone field . . . . .	<a href="#">104</a>
Trunk Group screens. . . . .	<a href="#">90</a>
trunk groups	
displaying capacities . . . . .	<a href="#">80</a>

---

## U

Unicode . . . . .	<a href="#">98</a>
-------------------	--------------------

---

## W

W call flow . . . . .	<a href="#">19</a>
whisper page activation . . . . .	<a href="#">120</a>