



Quick Start
for Hardware Installation
Avaya S8500 Server

555-245-701
Issue 6
August 2007
700436819

Process and Specifications

1 Verifying the Equipment

2 Installing the Hardware

3 Connecting the Cables

4 Configuring the UPS and the Ethernet Switch

5 Connecting the Laptop

6 Connecting to Port Networks

7 Troubleshooting

Hardware Specifications

Equipment	Weight		Dimensions		
	English (lb)	Metric (kg)	English (in)	Metric (cm)	Us
S8500 Server	28	13	1.75 x 17 x 22	4.5 x 43 x 56	1
UPS	>34	>15	3.5 x 17 x 19	9 x 43 x 48	2
Ethernet switch					
C363T	11	5	1.75 x 17 x 14.5	4.5 x 43 x 37	1
C364T	11	5	1.75 x 17 x 14.5	4.5 x 43x 37	1


Legend



Avaya technician
or business partner



Customer

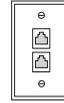

Telephone jack



Straight-through
CAT5 cable



Crossover
CAT5 cable



Nonswitched
electrical outlet




Sequence
step




Product
documentation



Services
laptop

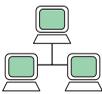

Customer
network

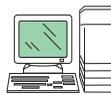

System
administration



Filled-out Electronic
Pre-Installation
Worksheet (EPW)



Caution!
Do not pinch
fingers



Antistatic wrist
ground strap
required



Warning!
Use 2 people
to lift equipment

1 Verifying the Equipment




Product documentation



Compact flash reader and flashcard (1)




Modem (1)

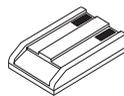

Services laptop (1)



(4-68)

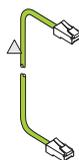


IPSI control network CAT5 cables

(1)




Laptop to server CAT5 cable

(1)

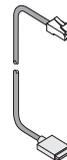


USB modem cable


Flat-head screwdriver

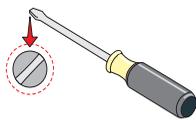


Cross-point screwdriver

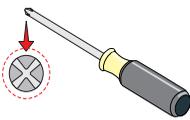

IPSI adapter (1-64)

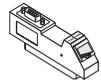

SNMP module and cable

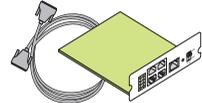


S8500 Server and rail assembly (1)



Screws




UPS (1)

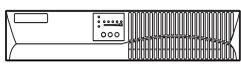

85cqssep1 LAO 070607




(1)

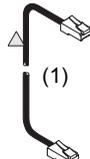

IPSI control network CAT5 cable


Customer network

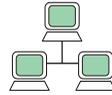

Screws




System administration and filled-out EPW

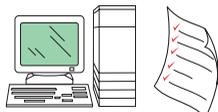

Ethernet switch (1 or more)





19 in. (48 cm) data rack (1-65)

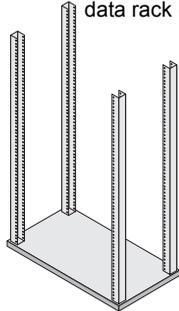



2a Installing the Hardware: SNMP Module*

*If Avaya-supplied

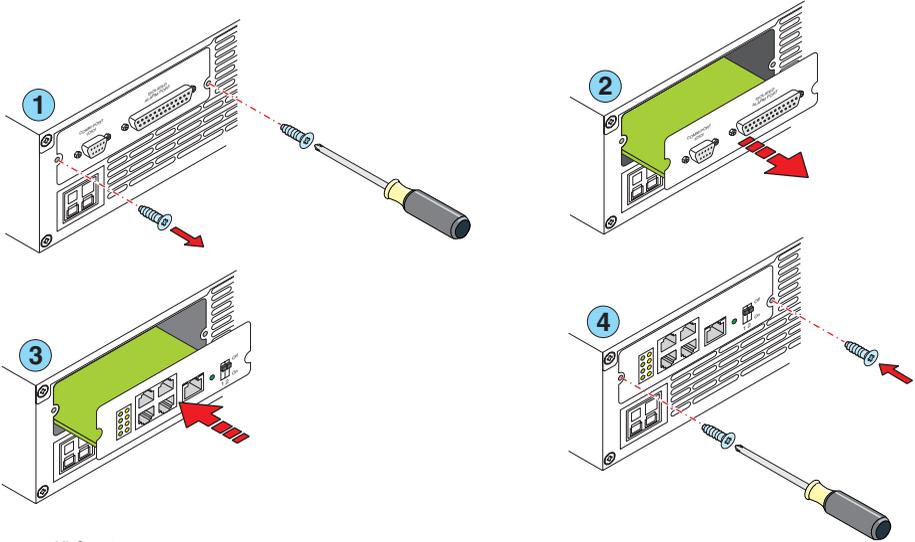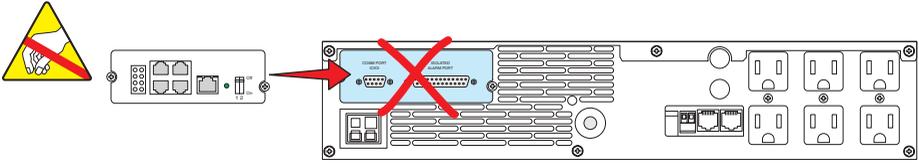

85qs2a KLC 021405

2b Installing the Hardware: Mounting Brackets

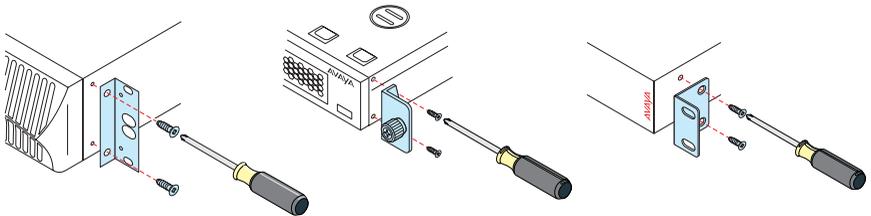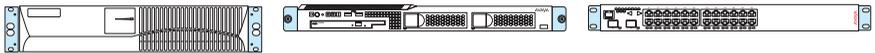


(Avaya C363T and C364T only)

85cqsc2b LAO 032106


2C Installing the Hardware: DIMMs*

*For products requiring additional memory

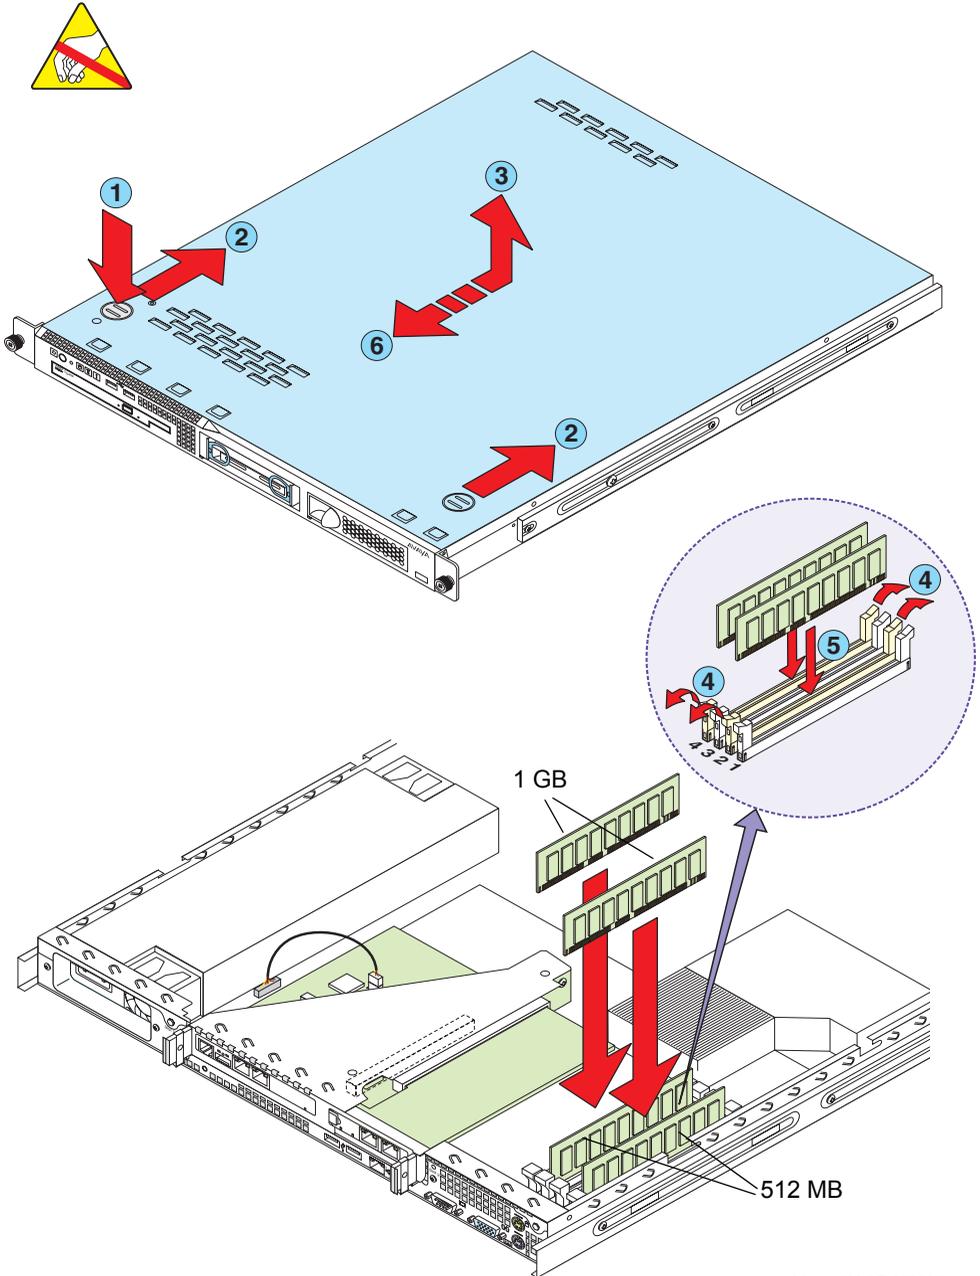

85cqc2j LAO 072007

2d Installing the Hardware: Rail Installation

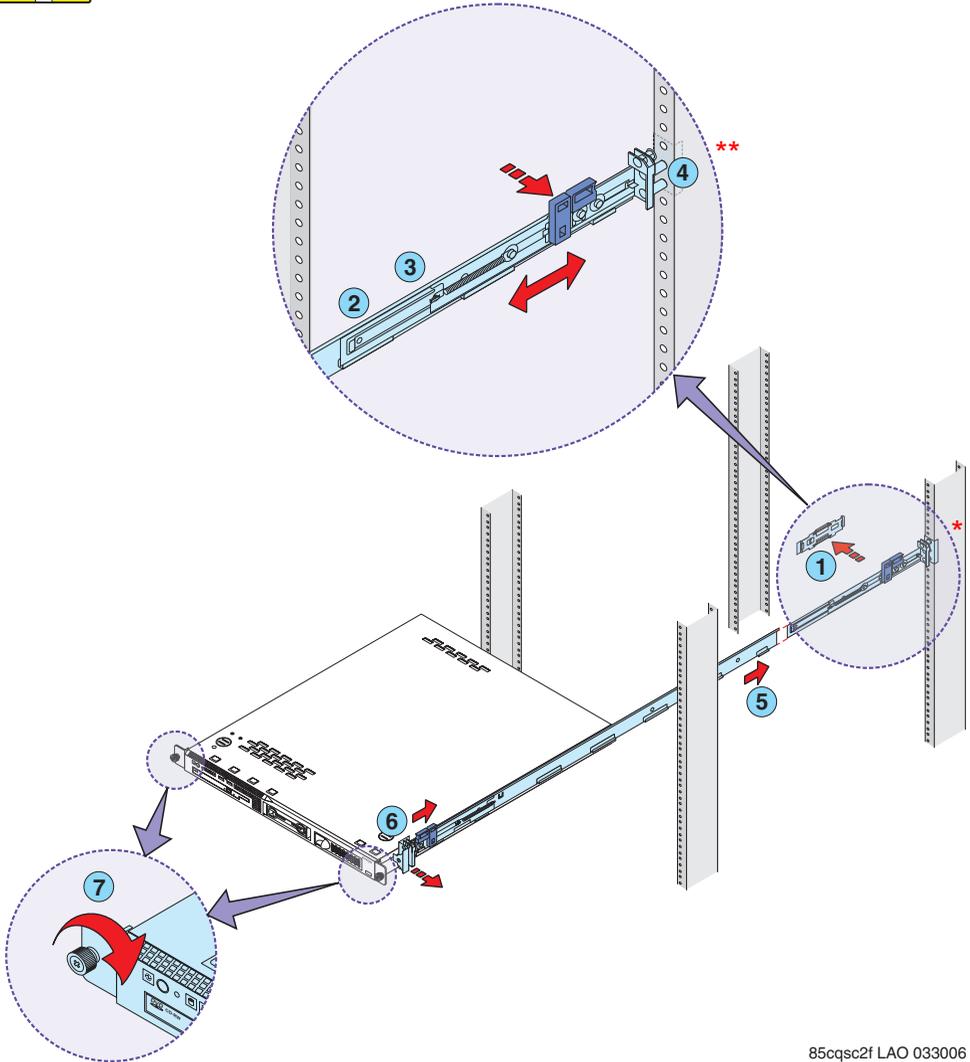


85cqc2f LAO 033006

*Rail holes must be M6 (6 mm) or larger.


**Make sure that the pins are fully extended through the mounting flange.

2e Installing the Hardware: Rack Installation

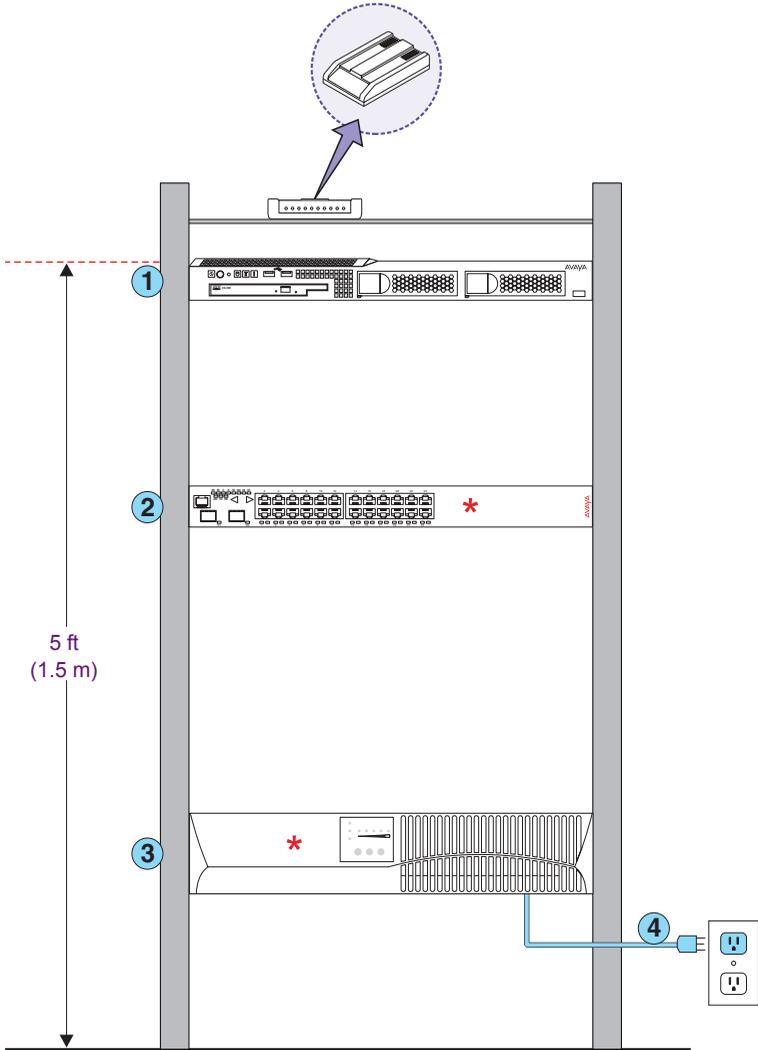

85cqc2h LAO 033006

3 Connecting the Cables

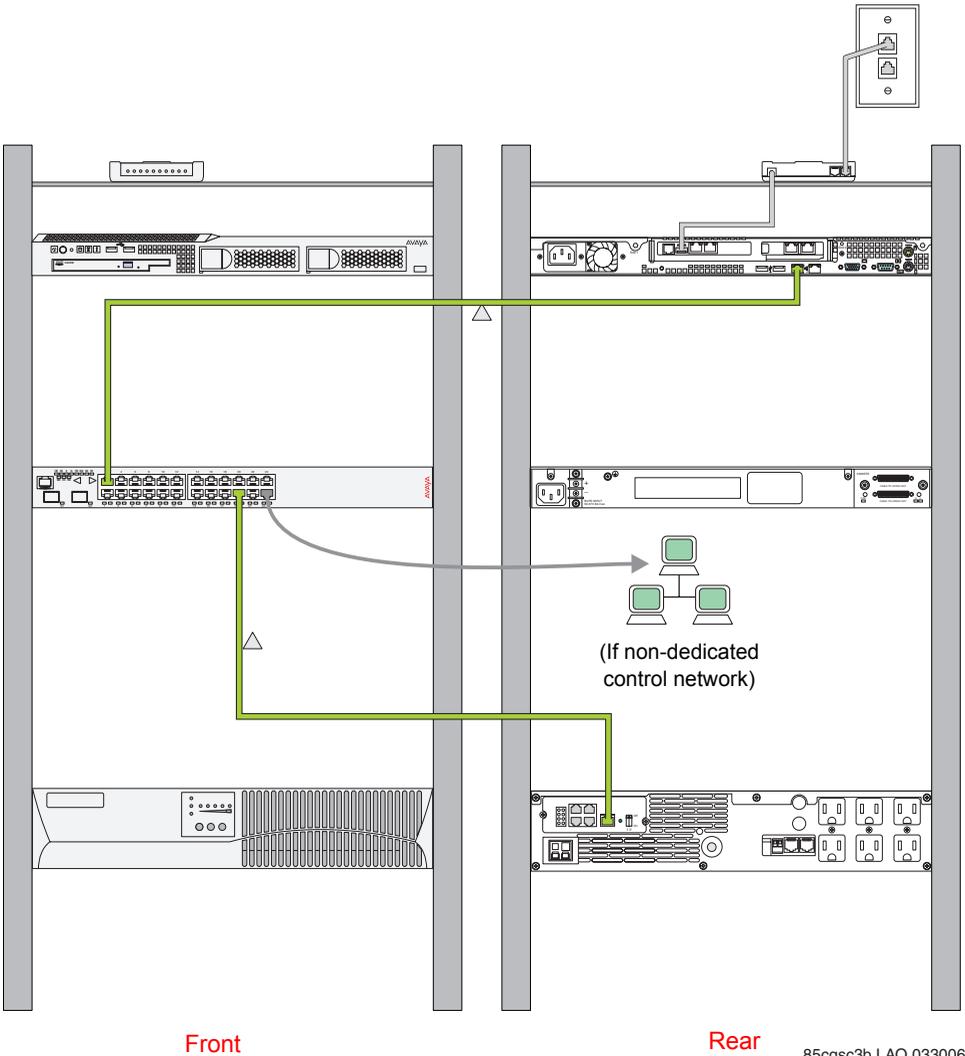


85cqsc3b LAO 033006

Note:

Connect the modem to the USB port on the SAMP.

4a Configuring the UPS*


*If Avaya-supplied

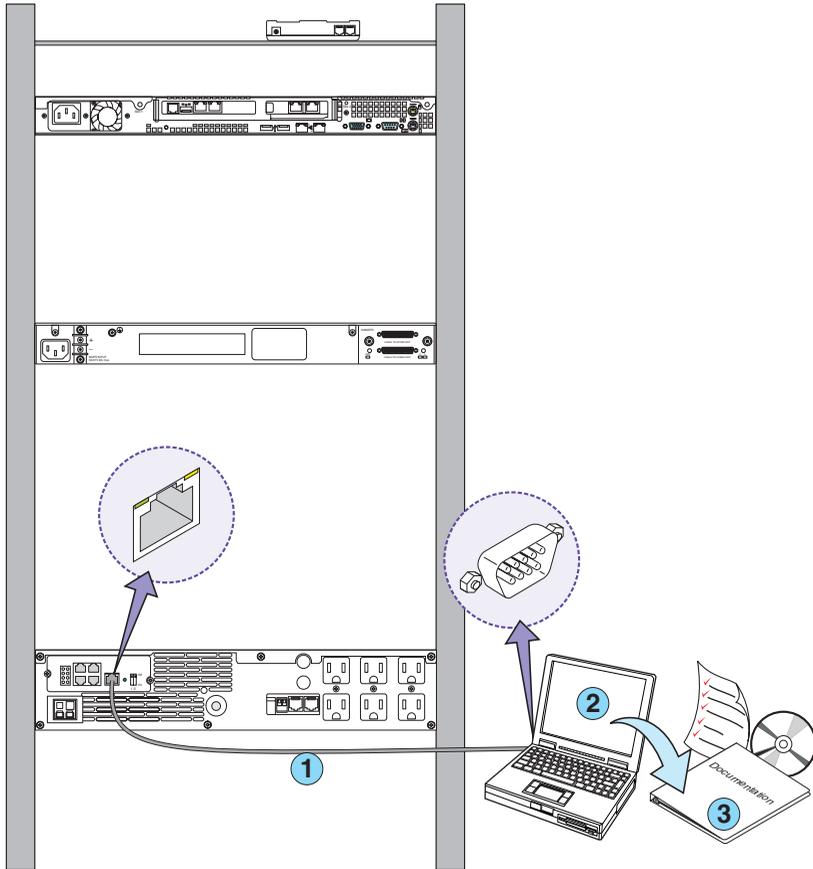

85cqc4a LAO 033006


4b Configuring the Ethernet Switch*

*If Avaya-supplied

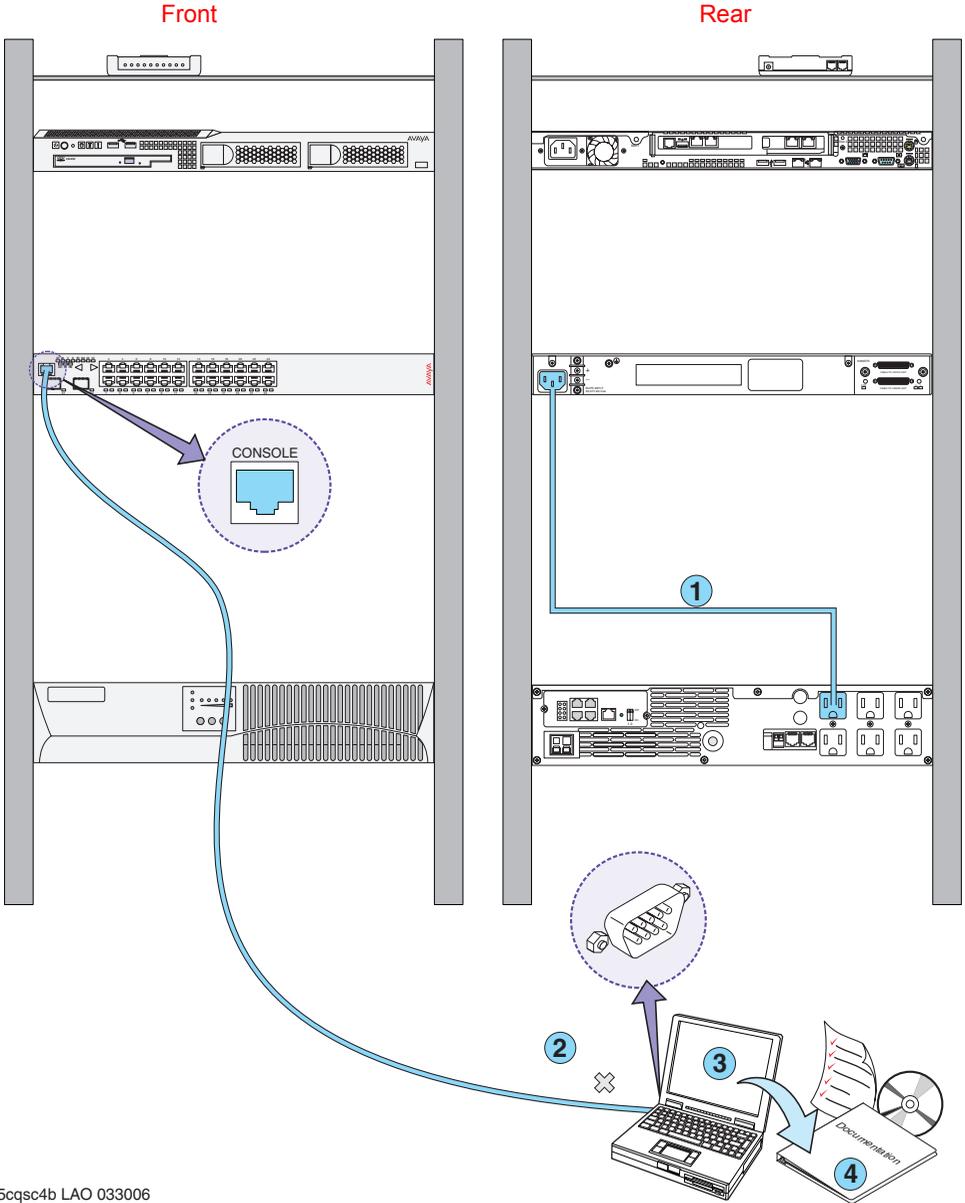

85cqsc4b LAO 033006

5 Connecting the Laptop

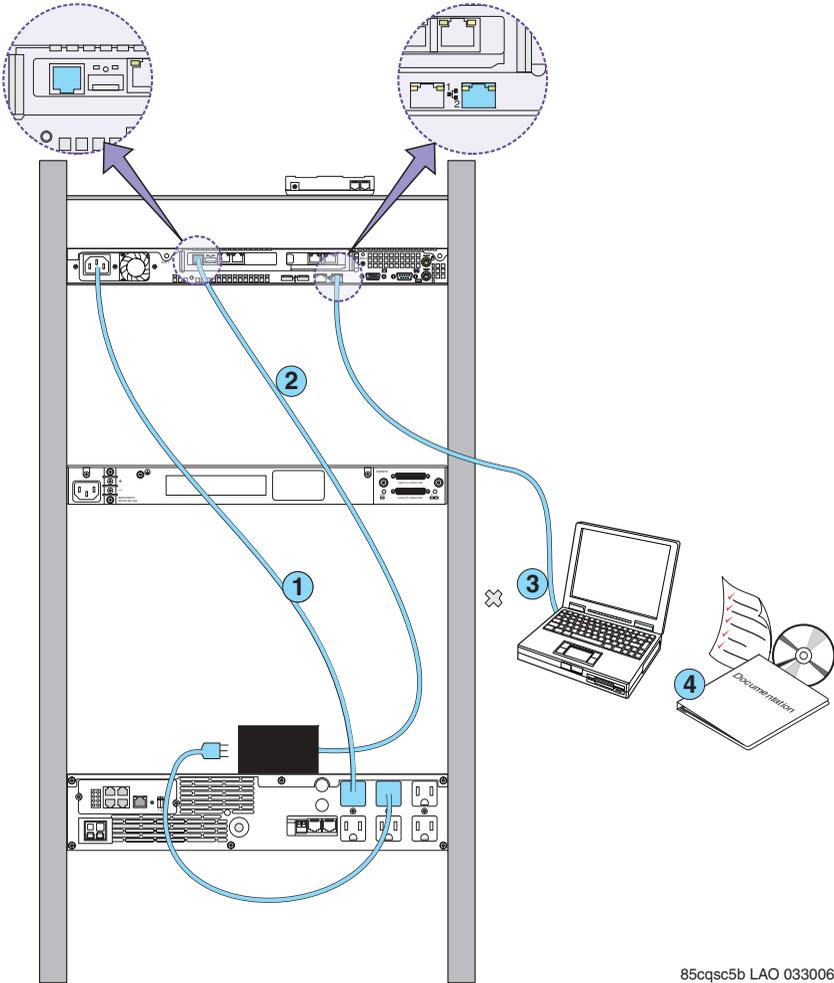


85cqc5b LAO 033006

Important!

Stop here if the server is not being connected to a port network.

6 Connecting to Port Networks

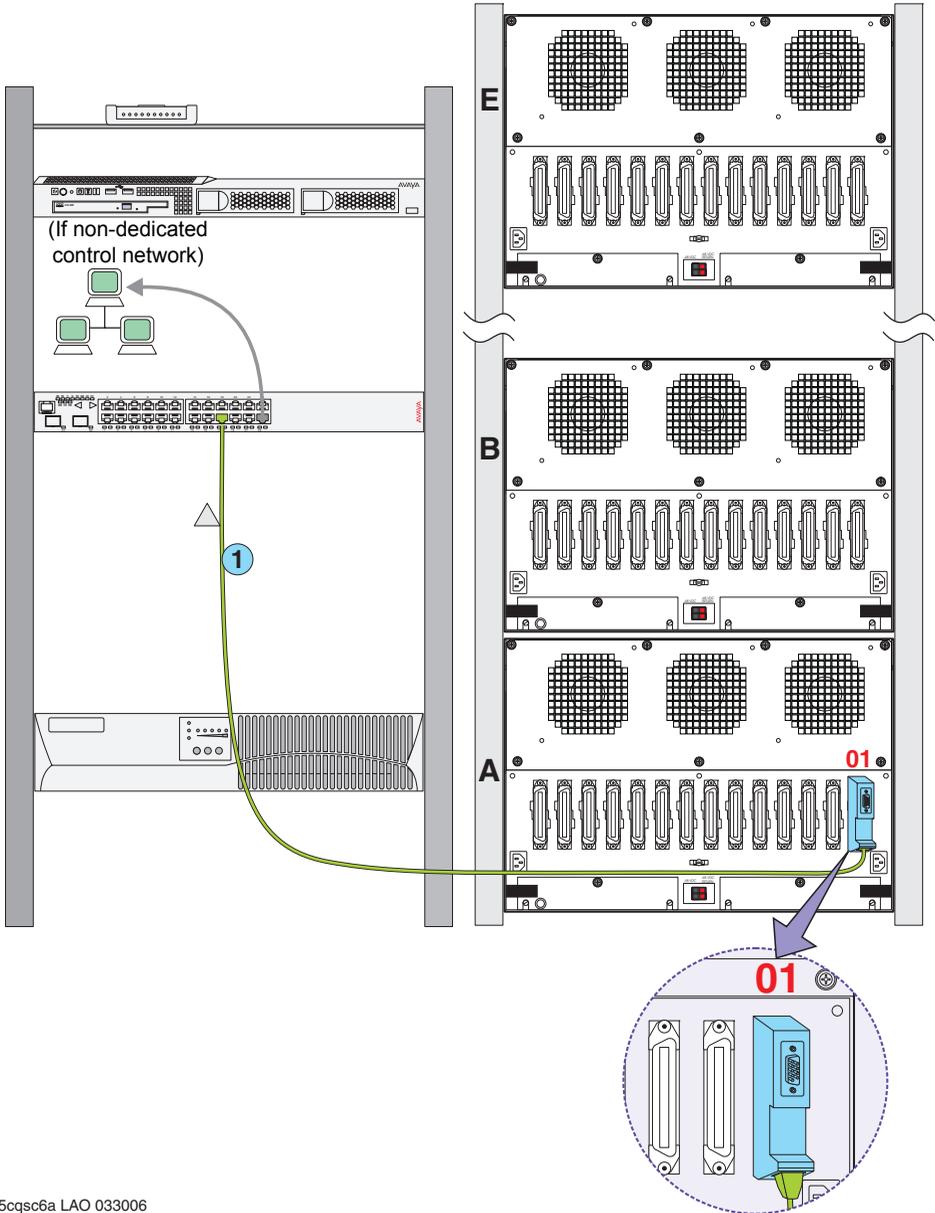

85cqsc6a LAO 033006

7 Troubleshooting

Problem:**Solution:**

● Avaya equipment is missing	● Contact the project manager
● Customer equipment is missing	● Contact the project manager
● Customer network information is missing	● Contact the project manager
● No power to the UPS	● Is the UPS plugged into the outlet? ● Does the outlet have power?
● The alarm LEDs on the UPS are flashing	● Refer to the UPS user's guide
● No power to the Avaya-supplied Ethernet switch	● Is the switch plugged into the UPS? ● Does the UPS have power?
● Alarm LEDs on the Avaya-supplied Ethernet switch are flashing	● Refer to the Avaya-supplied Ethernet switch user's guide
● No power to the server	● Is the server plugged into the UPS? ● Does the UPS have power? ● Push the power button on the server to start
● No V on the IPSI LCD	● Check the connection to the network

