



Avaya Communication Manager
Call Center
Call Vectoring and Expert Agent Selection
(EAS) Guide

Release 2.0
555-245-783
Issue 1.0
November 2003

© 2003, Avaya Inc.
All Rights Reserved

Notice

Every effort was made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

Preventing Toll Fraud

"Toll fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or working on your company's behalf). Be aware that there may be a risk of toll fraud associated with your system and that, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya Fraud Intervention

If you *suspect that you are being victimized* by toll fraud and you need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1 800 643 2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Web site:

<http://www.avaya.com>

Select **Support**, then select **Escalation Lists US and International**. This Web site includes telephone numbers for escalation within the United States. For escalation telephone numbers outside the United States, click on **Global Escalation List**.

Providing Telecommunications Security

Telecommunications security (of voice, data, and/or video communications) is the prevention of any type of intrusion to (that is, either unauthorized or malicious access to or use of) your company's telecommunications equipment by some party.

Your company's "telecommunications equipment" includes both this Avaya product and any other voice/data/video equipment that could be accessed via this Avaya product (that is, "networked equipment").

An "outside party" is anyone who is not a corporate employee, agent, subcontractor, or working on your company's behalf. Whereas, a "malicious party" is anyone (including someone who may be otherwise authorized) who accesses your telecommunications equipment with either malicious or mischievous intent.

Such intrusions may be either to/through synchronous (time-multiplexed and/or circuit-based) or asynchronous (character-, message-, or packet-based) equipment or interfaces for reasons of:

- Utilization (of capabilities special to the accessed equipment)
- Theft (such as, of intellectual property, financial assets, or toll-facility access)
- Eavesdropping (privacy invasions to humans)
- Mischief (troubling, but apparently innocuous, tampering)
- Harm (such as harmful tampering, data loss or alteration, regardless of motive or intent)

Be aware that there may be a risk of unauthorized intrusions associated with your system and/or its networked equipment. Also realize that, if such an intrusion should occur, it could result in a variety of losses to your company (including but not limited to, human/data privacy, intellectual property, material assets, financial resources, labor costs, and/or legal costs).

Your Responsibility for Your Company's Telecommunications Security

The final responsibility for securing both this system and its networked equipment rests with you - an Avaya customer's system administrator, your telecommunications peers, and your managers. Base the fulfillment of your responsibility on acquired knowledge and resources from a variety of sources including but not limited to:

- Installation documents
- System administration documents
- Security documents
- Hardware-/software-based security tools
- Shared information between you and your peers
- Telecommunications security experts

To prevent intrusions to your telecommunications equipment, you and your peers should carefully program and configure:

- your Avaya-provided telecommunications systems and their interfaces
- your Avaya-provided software applications, as well as their underlying hardware/software platforms and interfaces
- any other equipment networked to your Avaya products.

Trademarks

Alcatel is a trademark of Compagnie Financiere Alcatel, Paris, France. AUDIX, BCMSVu, Callmaster, and DEFINITY are registered trademarks of Avaya, Inc.

GTX is a trademark of the Global TeleExchange.

MCI is a registered trademark of MCI.

Avaya and MultiVantage are trademarks of Avaya, Inc.

Ordering Information

Call: Avaya Publications Center
Voice +1 800 457 1235
Fax +1 800 457 1764
International Voice +1 410 568 3680
International Fax+1 410 891 0207

Write: Globalware Solutions
200 Ward Hill Avenue
Haverhill, MA 01835 USA
Attention: Avaya Account Manager

Web: <http://www.avaya.com>

E-mail: totalware@gwsmail.com

Order: Document No. 555-245-783, Issue 1.0
November 2003

Avaya Support

Avaya provides a telephone number for you to use to report problems or to ask questions about your contact center. The support telephone number is 1-800-242-2121 in the United States. For additional support telephone numbers, see the Avaya Web site:

<http://www.avaya.com>

Select **Support**, then select **Escalation Lists US and International**. This Web site includes telephone numbers for escalation within the United States. For escalation telephone numbers outside the United States, click on **Global Escalation List**.

Acknowledgment

This document was written by the CRM Information Development group.

Avaya™ Communication Manager
Contact Center
Call Vectoring and Expert Agent Selection Guide

Contents

Preface	15
Intended audience and use of the guide	18
Reasons for reissue	18
Related documents	19
How to get help	20
Call Vectoring overview	21
What is Call Vectoring?	21
Call Vectoring options	24
Benefits of Call Vectoring	27
Creating and editing call vectors	31
Methods for entering a vector online	31
Call Vector form — basic screen administration	31
Inserting a vector step	34
Deleting a vector step	35
Creating and constructing a vector	36
Step 1: Queuing a call to the main split	36
Step 2: Providing feedback and delay announcement	37
Step 3: Repeating delay announcement and feedback	39
Step 4: Queuing a call to a backup split	40
Step 5: Checking the queue capacity	41
Step 6: Checking for nonbusiness hours	42
Call Vectoring fundamentals	45
Call management	45
Vector processing	51
Vector Directory Number	51
Programming capabilities	61
Call Vectoring applications	65
QSIG CAS example	89
Dial by Name	99
Vectors exercises	102

Basic Call Vectoring	109
Command set	110
General considerations for Basic Call Vectoring	111
Treatment commands	112
announcement command	112
wait-time command	114
busy command	117
disconnect command	118
converse-on split command	118
Routing commands	122
queue-to split and check split commands	122
messaging split command	125
route-to number command	126
Branching/Programming commands	129
goto step and goto vector commands	129
stop command	132
Variables in Vectors	133
VIV overview	134
Variable definition parameters	134
Implementing vector variables	135
VIV job aid	137
Variable syntax	138
VIV requirements	139
Understanding local and global variables	139
About local variables	140
About global variables	140
Vector variable types	141
asaiui variables	141
collect variable	142
dow variables	143
doy variables	143
tod variables	144
value variables	144
vdn variables	145
VIV interactions and considerations	147
VIV administration	148
Example Variables for Vectors form	148
Required variable administration entries	149
Optional FAC administration for value variables	150
VIV vector examples	151
Example application using an asaiui variable	151
Example application using a collect variable	152
Example application using time and day variables	154

Example application using a value variable	158
Example applications using vdn variables	160
Troubleshooting vector variables	161
Advanced Vector Routing - EWT and ASA	163
Advanced Vector Routing command set	164
When to use wait time predictions	165
Expected Wait Time (EWT)	166
How EWT is calculated	166
EWT for a split	167
EWT for a call	168
Passing EWT to a VRU	168
Notifying callers of wait time without a VRU	169
Using EWT to route to the best split	171
Factors that affect EWT values	172
Troubleshooting EWT	173
Rolling Average Speed of Answer (ASA)	173
Rolling ASA versus interval ASA	173
When to use rolling ASA	174
Rolling ASA split calculation	174
Rolling ASA VDN Calculation	175
Combining VDN and ASA routing	176
VDN Calls	177
How VDN Call counts are calculated	177
Using the counted-calls conditional	178
ANI /II-digits routing and Caller Information Forwarding (CINFO)	179
Command sets	180
ANI routing	181
ANI basics	181
ANI routing example	182
Using ANI with vector routing tables	183
II-digits routing	184
II-digits basics	184
II-digits codes	186
II-digits routing example	190
Caller Information Forwarding	191
CINFO basics	191
CINFO vector example	193
CINFO interactions	194

Contents

Information Forwarding	197
Data handled by Information Forwarding	197
Information Forwarding benefits	198
Network requirements	199
Information Forwarding support for BSR and LAI	200
Forwarding collected digits with interflowed call	200
Forwarding accumulated in-VDN time	201
Transport by way of globally-supported methods	201
LAI backward compatibility issues	202
ASAI shared UUI IE data conversion	203
Determining user information needs	203
Bytes length ranges for UUI user data	204
Example	205
Information Forwarding troubleshooting	206
Adjunct (ASAI) Routing	207
Considerations for implementing adjunct routing	208
Receiving and implementing an ASAI call route	210
Data sent with an ASAI call route request	211
Special vector processing considerations associated with adjunct routing	213
Adjunct routing-initiated path-replacement	218
Phantom calls	220
Single-step conference	222
Multiple outstanding route requests	222
Call Prompting	225
Command set	226
Touch-tone collection requirements	227
Call Prompting digit entry — collect digits command	228
Removing incorrect digit strings	228
Entering variable-length digit strings	228
Entering dial-ahead digits	229
Functions and examples	230
Treating digits as a destination	230
Using digits to collect branching information	232
Using digits to select options	234
Displaying digits on the agent's set	235
Passing digits to an adjunct	236
Creating Service Observing vectors	237
Dial-ahead digits — collect digits command	239
ASAI-requested digit collection	243
ASAI-provided dial-ahead digits — collect digits command	244
Considerations	245

Look-Ahead Interflow (LAI)	247
LAI prerequisites	248
Example of a two-switch configuration	249
Command set	249
How traditional LAI works	251
Example of traditional LAI	252
Receiving switch operation	253
How enhanced LAI works	255
The simple way to achieve FIFO	255
Detailed information about the interflow-qpos conditional	255
When does a call not interflow?	257
How the minimum EWT is set	258
Example of single-queue multi-site operation	258
Example of maintaining FIFO processing with LAI	259
Single-queue FIFO considerations	260
Example of LAI in a tandem switch configuration	261
Sending switch operation	261
Tandem switch operation	261
Far-end switch operation	262
LAI-initiated path-replacement for calls in vector processing	263
Example vector	263
DNIS and VDN override in an LAI environment	264
DNIS information displayed to answering agent	264
Originator's display	265
LAI with network ADR	266
Multi-site applications for Enhanced LAI	267
LAI considerations	267
Troubleshooting for LAI	269
Best Service Routing (BSR)	271
Benefits of Best Service Routing	272
Server and network requirements for BSR	275
Server requirements	275
Network requirements	276
Special BSR terminology	277
Single-site BSR	279
Command set – single site BSR	279
How BSR determines the best resource	281
Example of basic single-site BSR	283
User adjustments in single-site BSR	287
Example of single-site BSR with adjustments	288
Planning and administering single-site BSR	292
Planning	292
Administration	292
Troubleshooting for single-site BSR	294

Contents

Multi-site BSR	295
Multi-site BSR command set	295
Multi-site BSR applications	297
Example of multi-site BSR	300
BSR available agent strategies	306
More on status poll and interflow vectors	306
User adjustments in multi-site BSR	306
Example of multi-site BSR with limited trunking	308
Example of multi-site BSR with slow networks	313
Example for handling excessive wait times	316
Planning and administering multi-Site BSR	317
Selecting or administering application plans	317
Administering the BSR Application Plan	318
Local treatment for remotely queued IP and ISDN calls	321
Overview of local treatment operations	322
Local treatment system requirements	323
Local treatment administration	324
Example vectors for the local treatment feature	325
Special BSR local treatment considerations	328
Troubleshooting for multi-site BSR	329
Tips for writing BSR vectors	330
BSR-initiated path-replacement for calls in vector processing	331
Example vector	331
Holiday Vectoring	333
Command set	333
Branching/programming commands	333
Overview	335
Administering Holiday Vectoring	336
Enabling Holiday Vectoring	336
Setting up a Holiday Table	336
Changing vector processing for holidays	339
Holiday Vectoring considerations	341
Network Call Redirection	343
Network Call Redirection options supported by PSTNs	344
Network Call Transfer type options	344
Network Call Deflection (NCD)	346
AT&T In-band Transfer and Connect	347
NCR considerations	353
Limitations on call redirection	353
Trunking considerations	354
NCR feature interactions	355

NCR implementation methods	357
NCR activation using call vectoring methods	357
NCR activation using ASAI third-party merge/call transfer operations	361
NCR activation using station call transfer or conference operations	362
CTI call transfer	363
NCR activation using ASAI adjunct route operations	363
NCR administration	364
Reserving trunk group B-channels for NCR redirection operations	366
NCR and Information Forwarding	370
UII data included in Information Forwarding	370
UII data forwarding	370
PSTN terms used for UII transport service	371
NCR troubleshooting	372
Attendant Vectoring	375
Command set	376
Treatment commands	377
Routing commands	378
Branching/programming commands	381
Overview	383
Vector form	383
Console Parameters form	384
TN assignments	385
Restrictions	386
Attendant queue	386
Hunt group queue	386
Redirecting calls to attendant VDNs	386
Night service	387
Attendant VDNs	387
Attendant Vectoring and attendant VDNs	389
Intercept attendant group calls	389
Allow override	390
Interflow between vectors	390
Music source	391
Attendant Vectoring and multiple queueing	391
Restrict queueing to only one type of queue	391
Allow multiple priority queueing within hunt queues	391
Allow multiple hunt group queueing	392
Considerations	392
Meet-me Conference	393
Command set	394
Information collection commands	395
Treatment commands	395
Routing commands	396
Branching/programming commands	396

Contents

Administering Meet-me Conference	398
Activating the Meet-me Conference feature	398
Creating a Meet-me Conference VDN	399
Creating a Meet-me Conference vector	400
Interactions	401
Security issues	402
Capacity issues	402
Meet-me Conference call processing scenario	403
Troubleshooting	405
Conference call drops	405
Sound volume is too low	406
Expert Agent Selection	407
What is Expert Agent Selection (EAS)?	407
EAS benefits	408
Skill-based call distribution	409
Greatest need call distribution	409
Percent allocation call distribution	409
ACD queuing and vector commands	409
EAS considerations	410
Expert Agent Selection (EAS) terminology	411
EAS-PHD — 20 skills/16 skill levels	412
Switch administration for the EAS feature	413
EAS administration forms	413
Other forms that support EAS Agent LoginID	414
Identifying caller needs	419
DNIS/ISDN called party	420
Call Prompting/VRU Digits/CINFO digits	420
Host database lookup	421
Direct Agent calling	421
Functions and examples	424
Administering skills	424
Preference Handling Distribution	431
Logical Agent capability	431
Delivering the call to the skill queue	432
Routing the call to an agent	436
EAS feature interactions	443
EAS adjunct interactions	448
ASAI interactions with EAS	448
AUDIX	450
CMS	450
Speech-processing adjuncts	451
Upgrading to the EAS environment	452

Service Level Maximizer (SLM)	453
SLM operations	454
SLM agent selection method	454
SLM target service levels and agent opportunity costs	455
SLM benefits	457
Auto reserve agents	457
Agent selection rules in mixed skill environments	458
Maximum Agent Occupancy (MAO)	459
SLM requirements	461
SLM administration	462
SLM reporting	463
Evaluating target service level compliance	464
Evaluating auto reserve rates	465
Evaluating MAO	465
SLM feature interactions	465
Appendix A: Call Vectoring commands	467
About Communication Manager contact center packages	468
Communication Manager options required to enable vector commands	468
Command description/reference	472
Command job aid	473
Command directory	481
Adjunct routing command	483
Announcement command	490
Busy command	492
Check command	494
Collect Digits command	498
Consider command	503
Converse-on command	507
Disconnect command	516
goto step and goto vector commands	518
Messaging command	525
Queue-to command	528
Reply-best	532
Route-to command	534
Stop command	542
Wait-time command	543
Appendix B: Vector management and monitoring	547
Implementation requirements for the Call Vectoring features	547
Enabling the Vector Disconnect Timer	552
Upgrading to a Call Vectoring environment	552

Contents

Changing and testing a vector	553
Identifying Links to a Vector	554
Finding All Occurrences of a Digit String	555
Appendix C: Considerations for the vectoring features	557
Displaying VDN names for vector-initiated Direct Agent calls	558
Transferring calls to VDNs	566
VDN Return Destination	567
User scenario — remote access with host provided security	568
User scenario — saving in trunk facilities between contact centers	569
Appendix D: Troubleshooting vectors	571
Criteria for success/failure of call vectoring commands	572
Unexpected feature operations	577
Unexpected command operations	578
Converse command debugging	586
Tracking unexpected events	589
Display events criteria	589
Display events report	590
Vector events	592
Clearing events	604
Appendix E: Advanced multi-site routing	605
Application architecture in multi-site BSR	605
User adjustments	606
Status polling in BSR	608
Efficient polling patterns in large networks	611
Considerations for low volume splits/skills	615
Minimizing variations in wait time	616
Appendix F: Advanced information forwarding	619
Appendix G: Functional differences for DEFINITY G2 and DEFINITY ECS	
Call Vectoring and EAS	625
Introduction	625
Differences in command function	625
queue-to split and check split	626
goto step and goto vector	627
route-to number	628
announcement	629
wait-time	630
busy	630
General Call Vectoring Functional Differences	631
Differences in defining/interpreting split flows	633
EAS differences	634

Appendix H: Call Vectoring/EAS and BCMS/CMS interactions	635
CMS/BCMS tracking in a Call Vectoring environment	636
Defining and interpreting call flows	636
Using CMS and BCMS reports to evaluate Call Vectoring activity	645
CMS reports	645
BCMS reports	646
Using CMS in an EAS environment	647
Tracking entities	647
Appendix I: Operation details for the route-to command	651
Appendix J: Call flow and specifications for converse – VRI calls	657
Converse call placement	658
Data passing	660
VRU data collection	664
Script execution	665
Data return	666
Script completion	669
Switch data collection	670
Appendix K: Security issues	671
Remote access	671
Front-ending remote access	671
Replacing remote access	672
EAS	673
Limiting outside access using VDN COR restrictions	674
Vector initiated service observing	675
Voice response integration	676
Attendant Vectoring	677
Remote logout of agent	678
Appendix L: Setting up a contact center	679
Call Vectoring/non-EAS option	680
Non-EAS Worksheet #1: Contact center objectives	684
Non-EAS Worksheet #2: Current split operation	685
Non-EAS Worksheet #3: Customer needs	687
Non-EAS Worksheet #4: Vector design	688
EAS Worksheet #1: Contact center objectives	690
EAS Worksheet #2: Current split operation	691
EAS Worksheet #3: Customer needs	692
EAS Worksheet #4: Individual Agent Skills	693
EAS Worksheet #5: Agent Skills	694
EAS Worksheet #6: VDN Skill Preferences	695
EAS Worksheet #7: Vector Design	696

Contents

Appendix M: Converting a contact center to EAS. 699

Appendix N: Feature Availability 707

Appendix O: Improving performance 709

 Looping examples 710

 Audible feedback 710

 Look-Ahead interflow 711

 Check 712

 Other examples 714

 After business hours 714

 Look-ahead interflows. 715

Glossary 717

Index 725

Preface

This guide discusses Call Vectoring and Expert Agent Selection (EAS) features of Avaya Communication Manager Contact Center.

The following table gives a brief description of each chapter and appendix in this book.

Title/Page	Contents
Call Vectoring overview on page 21	High-level description of vectoring and EAS. Includes exercises and reading that is prerequisite to attending Instructor-led course(s).
Creating and editing call vectors on page 31	Brief tutorial and examples on how to create vectors using the SAT terminal interface.
Call Vectoring fundamentals on page 45	Additional depth of information regarding Call Vectoring and how the feature works.
Call Vectoring applications on page 65	Examples of how Call Vectoring can be implemented on-site.
Basic Call Vectoring on page 109	Detailed information on the Basic Call Vectoring option, including commands specific to the option.
Advanced Vector Routing - EWT and ASA on page 163	Detailed information on the Advanced Vectoring Routing option, including commands specific to the option.
ANI /II-digits routing and Caller Information Forwarding (CINFO) on page 179	Detailed information on vectoring use of ANI/Information Indicator-Digits and CINFO, including commands specific to these options.
Information Forwarding on page 197	Detailed information on the use of the Information Forwarding option, including commands specific to the option.
Adjunct (ASAI) Routing on page 207	Detailed information on Call Vectoring use of ASAI routing capabilities.
Call Prompting on page 225	Detailed information on the use and implementation of the Call Prompting option, including commands specific to the option.
Look-Ahead Interflow (LAI) on page 247	Detailed information on Call Vectoring use of LAI, including special considerations and troubleshooting.

Title/Page	Contents
Best Service Routing (BSR) on page 271	Detailed information on implementing BSR, including examples, troubleshooting, and BSR vector-writing tips.
Network Call Redirection on page 343	Detailed information on implementing NCR, including interactions with other contact center features.
Attendant Vectoring on page 375	Detailed information on the use of Attendant Vectoring option, including commands specific to the option. Note that Attendant Vectoring is used in non-contact center environments.
Holiday Vectoring on page 333	Detailed information on the use of the Holiday Vectoring option, including commands specific to the option.
Meet-me Conference on page 393	Detailed information about the commands used to create a Meet-me Conference vector, including an example Meet-me Conference VDN and vector.
Expert Agent Selection on page 407	Detailed information on the EAS feature, including interactions with other features and examples of implementation.
Appendix A: Call Vectoring commands on page 467	Complete, detailed list and definition of each vectoring command, including a Job Aid.
Appendix B: Vector management and monitoring on page 547	Additional information on implementing and upgrading to Call Vectoring.
Appendix C: Considerations for the vectoring features on page 557	Additional considerations for Basic Call Vectoring, Call Prompting, Adjunct Routing, and VDNs.
Appendix D: Troubleshooting vectors on page 571	Error messages.
Appendix E: Advanced multi-site routing on page 605	Detailed information on BSR and advanced routing to multiple sites.
Appendix F: Advanced information forwarding on page 619	Detailed information about ISDN (BRI or PRI) trunk group setting interactions with Information Forwarding, UCID, and Multi-Site Routing
Appendix G: Functional differences for DEFINITY G2 and DEFINITY ECS Call Vectoring and EAS on page 625	Differences between the DEFINITY G2 and DEFINITY ECS Call Vectoring.
Appendix H: Call Vectoring/EAS and BCMS/CMS interactions on page 635	Information regarding how CMS and BCMS report on vectoring.

Title/Page	Contents
Appendix I: Operation details for the route-to command on page 651	Detailed information on use of the route-to command.
Appendix J: Call flow and specifications for converse – VRI calls on page 657	Detailed information on vectoring and VRI calls.
Appendix K: Security issues on page 671	Issues to be aware of regarding the security of your site in relation to the use of Call Vectoring.
Appendix L: Setting up a contact center on page 679	Worksheets to assist in the initial set up of a contact center.
Appendix M: Converting a contact center to EAS on page 699	Worksheets to assist in the implementation of EAS in a contact center.
Appendix N: Feature Availability on page 707	Information about the Communication Manager options required to enable various vector commands.
Appendix O: Improving performance on page 709	Tips on improving the performance of vectors.

Intended audience and use of the guide

The guide is intended primarily for personnel who use Call Vectoring and/or EAS. You should use this guide as an information source for implementing Call Vectoring and/or EAS. A knowledge of Automatic Call Distribution (ACD) is assumed.

The level of your expertise in Call Vectoring and/or EAS should determine how you use the guide. Users who are unfamiliar with Call Vectoring should read [Call Vectoring overview](#) on page 21, then study [Creating and editing call vectors](#) on page 31. Users who will be using EAS should read [Call Vectoring overview](#) on page 21 and [Expert Agent Selection](#) on page 407. Finally, advanced users of Call Vectoring and/or EAS may only find it necessary to periodically reference a specific appendix (such as [Call Vectoring commands](#) on page 467, which contains a set of Call Vectoring/EAS command “manual pages”) to get the information needed.

Users who want to set up a contact center (EAS and non-EAS) should read [Appendix L: Setting up a contact center](#) on page 679, and users who want to convert a contact center to EAS should read [Appendix M: Converting a contact center to EAS](#) on page 699.

Reasons for reissue

This document is being reissued for the following reasons:

- To be determined.
- Since system capacities change often, the capacity tables have been removed from this document. To determine the maximum values you can use in Call Vectoring commands, see *Avaya MultiVantage Definity Capacities Table*, 555-233-605. To access the document online, go to:

<http://avayadocs.com>

Related documents

The following documents may include information related to the ACD feature.

Administration documents

The primary audience for these documents consists of switch administrators who work for external customers and for Avaya's dealers. The satisfaction and needs of our external customers is the primary focus for the documentation.

- *Administrator Guide for Avaya Communication Manager*, 555-233-506 – Provides complete step-by-step procedures for administering the switch, plus feature descriptions and reference information for SAT screens and commands.
- *Avaya MultiVantage Little Instruction Book for Basic Administration*, 555-233-756 – Provides step-by-step procedures for performing basic switch administration tasks. Includes managing phones, managing features, and routing outgoing calls.
- *Avaya Communication Manager Little Instruction Book for Advanced Administration*, 555-233-757 – Provides step-by-step procedures for adding trunks, adding hunt groups, writing vectors and recording announcements.
- *Avaya Communication Manager Little Instruction Book for Basic Diagnostics*, 555-233-758 – Provides step-by-step procedures for baselining your system, solving common problems, reading alarms and errors, using features to troubleshoot your system, and contacting Avaya.
- *Overview for Avaya Communication Manager*, 555-233-767 – Provides a brief description of Communication Manager features. This book does not provide a general overview of the communication server or basic telephony.
- *Reports for Avaya Communication Manager*, 555-233-505 – Provides detailed descriptions of the measurement, status, security, and recent change history reports available in the system and is intended for administrators who validate traffic reports and evaluate system performance. Includes corrective actions for potential problems.
- *Hardware Guide for Avaya Communication Manager*, 555-233-200 – Provides hardware descriptions, system parameters, lists of hardware required to use features, system configurations, and environmental requirements.

Contact center documents

These documents are issued for Avaya contact center applications:

- *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784 – Provides feature descriptions and some implementation guidance for contact center features.

- *Avaya CMS Switch Connections and Administration*, 585-215-876 – Contains switch-to-CMS hardware connection diagrams and procedures to administer the switch-to-CMS link on the switch. It does not contain the administration of the CMS.
- *Avaya MultiVantage Call Center Software Basic Call Management System (BCMS) Operations*, 555-230-706 – Provides information on the use of the BCMS feature for ACD reporting.
- *Avaya MultiVantage Call Center – Call Vectoring Guide for BCS and Guestworks*, 555-233-518 – Provides information on how to write, use, and troubleshoot vectors on Category B products.

How to get help

For those times when you need additional help, the following help services are available. You may need to purchase an extended service agreement to use some of these help services. See your Avaya representative for more information.

- Avaya Centers of Excellence
 - Asia/Pacific
+65-872-8686
 - Western Europe/Middle East/South Africa
+441-252-391-889
 - Central/Eastern Europe
+361-270-5160
 - Central/Latin America/Caribbean
+1-303-538-4666
 - North America
1-800-248-1111
- Avaya switch helpline
1-800-225-7585
- Avaya Toll Fraud Intervention
1-800-643-2353
- Avaya National Customer Care Center Support Line
1-800-242-2121

■ ■ ■ ■ ■ ■

Call Vectoring overview

Call Vectoring overview provides the following information provides basic terminology and concepts associated with Call Vectoring and summarizes its benefits.

Call Vectoring overview includes the following topics:

- [What is Call Vectoring?](#) on page 21
- [Call Vectoring options](#) on page 24
- [Benefits of Call Vectoring](#) on page 27

What is Call Vectoring?

Call Vectoring is the process of defining vector programs that determine how a specific call should be routed and what call treatment that call is to be given.

Note:


Sample vectors are provided throughout this manual to illustrate vectoring features and capabilities. Because they are simplified to clearly demonstrate specific features, they are not complete and should not be used without modification at your facility.

Call Vectoring provides a highly flexible approach for managing incoming call traffic to the switch. Using vectors, which are a series of user-defined commands, you can direct or route internal and network calls as desired in your contact center and determine how these calls are processed. The processing of calls is known as call treatment. Calls can be directed to on-network or off-network destinations, to ACD agents, or to various other treatments. Call Vectoring also can be used with CallVisor ASAI.

Limitations of traditional ACD call processing

The traditional ACD approach is limited in the way it handles queued calls (that is, all calls within a specific queue receive identical announcements, intraflow parameters, and so forth). The following figure shows a simplified illustration of traditional ACD call processing.

Traditional ACD call processing

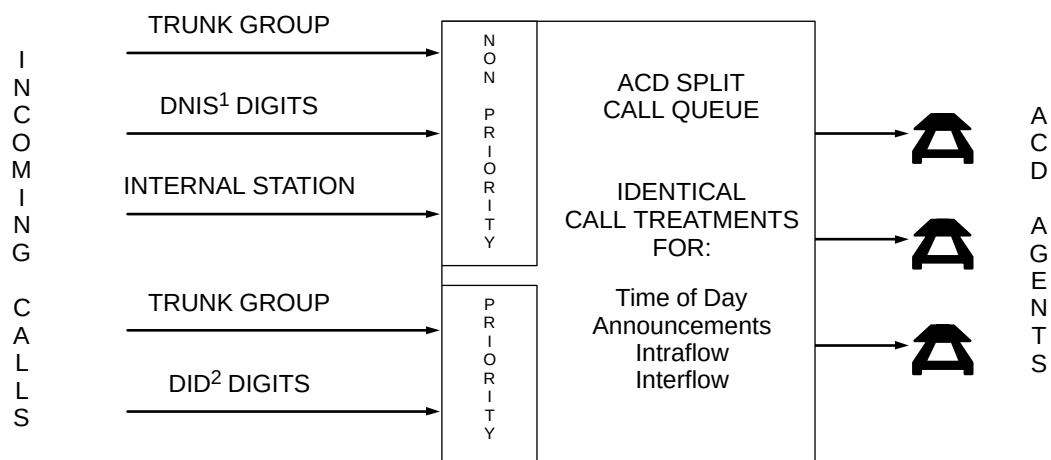


1. Dialed Number Identification Service
2. Direct Inward Dialing

Call Vectoring, on the other hand, permits each call to be treated uniquely according to a number of factors, including the number the caller dials, the number the caller calls from, the number of calls in queue, and the time of day and/or day of the week. This even applies to all calls that are ultimately handled by the same agent group.

Call Vectoring is comprised of three basic components:

- Vector Directory Numbers
- Vectors
- Vector commands

Working together, these components direct incoming calls and ASAI event reports and requests to the desired answering destinations. They also specify how each call is processed. Call Vectoring may be set up as shown in the following figure.

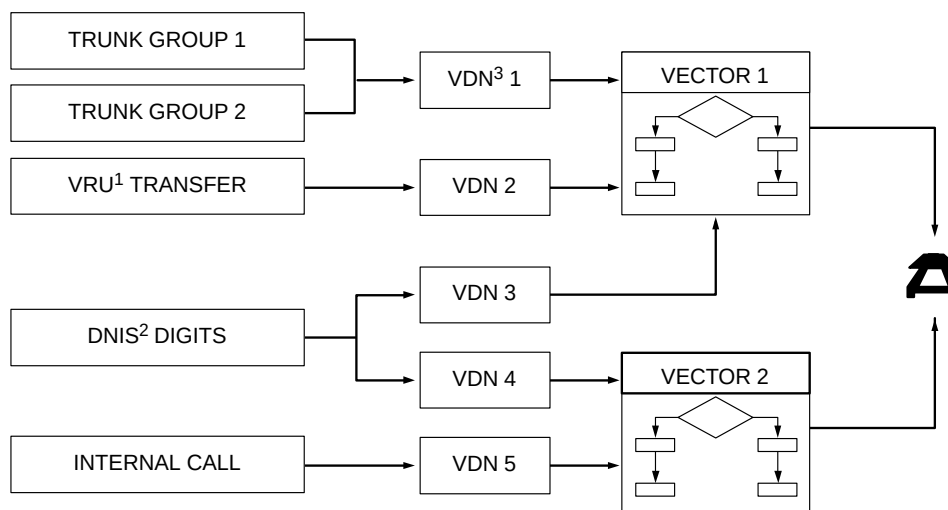Use of Call Vectoring for incoming calls

1. Voice Response Unit
2. Dialed Number Identification Service
3. Vector Directory Number

When a call arrives at a switch for which Call Vectoring is enabled, the call is first directed to a Vector Directory Number (VDN). A VDN is an internal telephone number that, in turn, directs the call to a specific vector. The VDN represents the call type or category, for example: billing, customer service, and so on. Thus, it defines the service that is desired by the caller. Multiple VDNs can point to the same or to different vectors, depending on whether the relevant calls are to receive the same or different treatment.

The vector is a set of commands that define the processing of a call. For example, a call can be queued and then routed to another destination.

The following screen shows an example of a vector.

```

1. goto step 3 if calls-queued in split 9 pri l < 20
2. busy
3. queue-to split 9 pri l
4. wait-time 12 seconds hearing ringback
5. announcement 2921
6. wait-time 998 seconds hearing music

```

A vector can contain up to 32 command steps. Multiple vectors can be linked together to extend processing capabilities or to process calls to the same or different answering destinations. Any number of calls can use the same multiple vectors and process steps independently.

Understanding your goals and planning your system before you begin writing vectors is crucial. A planning guide is provided in [Appendix L: Setting up a contact center](#) on page 679.

Call Vectoring options

Call Vectoring provides the following options:

- Basic Call Vectoring provides you with the ability to write vector steps that program the type of processing applied to a call by arranging a set of vector commands in the desired sequence. Depending on the command, you can do the following:
 - Place the call in queue until an agent is available to answer the call.
 - Provide a recorded information or delay announcement to the caller.
 - Allow the caller to leave a recorded message.
 - Access a Voice Response Unit (VRU) to start a script.See [Basic Call Vectoring](#) on page 109 for more information.
- G3V4 Enhanced provides for the following:
 - Specification of a priority level with the oldest-call-wait conditional.
 - Use of enhanced comparators (<>, >=, and <=).
 - Use of wildcards in digit strings for matching collected digits and ANI or II-digits.
 - Use of Vector Routing Tables.
 - Multiple Audio/Music Sources for use with the **wait - time** command.
 - Use of the **interflow-qpos** conditional with the **goto** and **route-to** commands to achieve FIFO or FIFO-like call processing
- Advanced Vector Routing allows you to route calls based on three additional conditions:
 - Rolling Average Speed of Answer for a split, skill, or VDN.
 - Expected Wait Time for a split/skill or for a call.
 - The number of calls that are active in a specified VDN.See [Advanced Vector Routing - EWT and ASA](#) on page 163 for more information.
- ANI/II Digits Routing allows you to route calls based on either:
 - The caller identity (ANI).
 - The type of line where the call was originated (II-digits).See [ANI /II-digits routing and Caller Information Forwarding \(CINFO\)](#) on page 179 for more information.

- Call Information Forwarding (CINFO) allows you to collect caller-entered digits (ced) and customer-database-provided digits (cdpd) from the network. These digits can then be used in the same way as digits that are collected with Call Prompting.

See [ANI /II-digits routing and Caller Information Forwarding \(CINFO\)](#) on page 179 for more information.

- Enhanced Information Forwarding allows you to forward the following information with each call. This information includes ANI, II-Digits, CINFO, ASAI-provided user information, Look-Ahead Interflow (LAI) information (such as VDN name), Universal Call ID (UCID), Best Service Routing data, Collected Digits, and elapsed in-VDN time.

See [Information Forwarding](#) on page 197 for more information.

- Call Prompting allows you to collect digits and give some call control to the caller. Specifically, this feature allows callers with touchtone or rotary telephones to enter digits that are subsequently processed by the vector. Among other tasks, Call Prompting allows the caller to do the following:
 - Select one or more options from a menu to access recorded information or be routed to the correct split or agent.
 - Enter an extension to which a call can be routed.
 - Provide the contact center with data, such as a credit card number that the center can use to process the call. This data also can be displayed on the telephone of the agent who answers the call.

See the [Call Prompting](#) on page 225 for more information.

- Look-Ahead Interflow allows the contact center to intelligently offload some or all calls to another ACD switch. When this feature is enabled, a call arriving at a vector that is unable to handle the call due to preset limits can interflow to a switch in a remote location whenever that switch is able to receive the call. By using this feature, you can establish a “load balancing” of calls among multiple locations primarily for lower-traffic, reduced-agent staffing periods. By using a certain conditional in a vectoring command, you can reduce processing and achieve First-In First-Out (FIFO) call distribution across the contact center sites.

See [Look-Ahead Interflow \(LAI\)](#) on page 247 for more information.

- Best Service Routing (BSR) allows the switch to compare specified splits or skills, determine which will provide the best service to a call, and deliver the call to that resource. If no agents are currently available in that split or skill, the call is queued. BSR is available in single-site and multi-site versions. Single-site BSR compares splits or skills on the switch where it resides to find the best resource to service a call. Multi-site BSR, which is activated via the Look-Ahead Interflow feature, extends this capability across a network of switches. Multi-site BSR compares local splits or skills, remote splits or skills, or both, and routing calls to the resource that provides the best service. BSR monitors the status of the specified resources and adjusts call processing appropriately to respond to changing conditions and operate more efficiently.

See [Best Service Routing \(BSR\)](#) on page 271 for more information.

- **Network Call Redirection (NCR)** provides you with the ability to re-route calls on the public network.

See [Network Call Redirection](#) on page 343 for more information.

- **Adjunct Routing** provides you with a means of evaluating calls before the calls are processed and implementing complex contact center applications. Specifically, this feature allows a switch to request instructions from an associated adjunct, which is a processor that performs one or more tasks for another processor (the switch, in this case). The adjunct makes a routing decision according to agent availability and/or the caller information sent by the switch, and returns the routing response to the switch. By using this feature, the contact center ensures that each call is delivered to the appropriate destination.

See [Adjunct \(ASAI\) Routing](#) on page 207 for more information.

- **Attendant Vectoring** provides you with a means to route calls using call vectoring in an environment other than a traditional contact center.

See [Attendant Vectoring](#) on page 375 for more information.

- **Holiday Vectoring** provides you with a means to apply special call processing on days such as holidays or days when you are having special promotions.

See [Holiday Vectoring](#) on page 333 for more information.

- **Meet-me Conference** provides you with a means to create dial-up, six-party conference calls using the features of Call Vectoring.

See [Meet-me Conference](#) on page 393 for more information.

Benefits of Call Vectoring

Call Vectoring enables calls to be processed at a faster rate within an intelligent, real-time system, thereby providing appreciable cost saving to the user. The following table summarizes the benefits of Call Vectoring.

Call Vectoring benefits

Call Vectoring Benefits	Examples
Call Treatment	
Implement special treatment based on the time of day, the day of the week, and for holidays (for example, routing calls to a different vector when one location is on holiday).	Example application - customer service center on page 67 Conditional branching example on page 131 Example application - distributed contact centers on page 74
Automatically change treatment according to either how long the call has been waiting or in response to changing traffic or staffing conditions.	Example application - automated attendant on page 68 Example application - mutual fund company on page 70 Example application - distributed contact centers on page 74 Example application - help desk on page 75 Call interflow example on page 127 Using Call Prompting to route by collected digits on page 231 Using Call Prompting to branch by collected digits on page 232 Using LAI with route-to commands to outflow calls on page 253
Provide appropriate caller feedback during waiting (for example, music or announcements during heavy calling periods).	Delay announcement on page 113 Forced announcement example on page 114 Information announcement example on page 114 Call delay with audible feedback on page 114 Multiple music sources on hold on page 116 Call delay with continuous audible feedback on page 116
Provide multiple and/or recurring informational or delay announcements that are selected according to the time of day/day of the week, call volume, or staffing conditions.	Example application - customer service center on page 67 Leaving recorded messages (VDN as the coverage point option) on page 124 Call interflow example on page 127 Using LAI with route-to commands to outflow calls on page 253
Provide 24 hour/day, 7 day/week automated information announcements.	Information announcement example on page 114 Call delay with audible feedback on page 114

Call Vectoring benefits (continued)

Call Vectoring Benefits	Examples
Remove selected calls (by providing busy or disconnect).	Busy command example on page 117 Call disconnect example on page 118 Leaving recorded message on page 125 Unconditional branching example on page 130
Set up and test, in advance, special call treatments for events such as sales, advertising campaigns, holidays, snow days, and so on.	Information announcement example on page 114 Setting up a Holiday Table on page 337 Holiday Vectoring example 1 on page 340 Holiday Vectoring example 2 on page 340
Provide the caller with a menu of choices.	Example application - mutual fund company on page 70 Example application - help desk on page 75 Using Call Prompting to route by collected digits on page 231 Using Call Prompting to pass digits to an adjunct on page 236 Using dial-ahead digits to bypass announcements, example 1 on page 240
Queue calls to up to three splits simultaneously, consequently improving the average speed of answer and agent productivity.	Example application - customer service center on page 67 Example application - distributed contact centers on page 74 Multiple split queuing example on page 123
Implement routing to local or distant destinations.	Example application - customer service center on page 67 Example application - mutual fund company on page 70 Example application - distributed contact centers on page 74 Example application - help desk on page 75 Call interflow example on page 127 Using Call Prompting to route by collected digits on page 231 Using Call Prompting to branch by collected digits on page 232 Using LAI with route-to commands to outflow calls on page 253
Connect callers to a voice-mail or messaging system either automatically or per caller request.	Example application - mutual fund company on page 70 Leaving recorded messages (VDN as the coverage point option) on page 124 Leaving recorded message on page 125
Call Routing	
Reduce call transfers by accurately routing callers to the desired destination.	Example application - mutual fund company on page 70 Using Call Prompting to route by collected digits on page 231 Using Call Prompting to branch by collected digits on page 232
Provide up to four ACD queuing priority levels and the ability to change the queuing priority dynamically, thereby, providing faster service for selected callers.	Example application - customer service center on page 67 Example application - mutual fund company on page 70 Example application - distributed contact centers on page 74

Call Vectoring benefits (continued)

Call Vectoring Benefits	Examples
Reduce agent and/or attendant staffing requirements by: (1) automating some tasks; (2) reducing caller hold time; (3) having agents in one split service multiple call types.	Example application - mutual fund company on page 70 Information announcement example on page 114 Call delay with audible feedback on page 114 Using Call Prompting to route by collected digits on page 231 Using dial-ahead digits to bypass announcements, example 1 on page 240 Using dial-ahead digits to bypass announcements, example 2 on page 241
Information Collection	
Provide customized and/or personalized call treatment via information collection and messaging.	Example application - automated attendant on page 68 Example application - mutual fund company on page 70 Example application - help desk on page 75 Using Call Prompting to route by collected digits on page 231 Using Call Prompting to select options on page 234 Using dial-ahead digits to bypass announcements, example 1 on page 240
Collect information for use by an adjunct or by agent display.	Example application - help desk on page 75 Using Call Prompting to pass digits to an adjunct on page 236
Collect caller-entered or customer database-provided CINFO digits from the network.	CINFO vector example on page 193



Creating and editing call vectors

This chapter gives you a practical start writing vectors. In this chapter you will learn the basic information that you need to write a representative vector and enter it online.

Methods for entering a vector online

A vector can be entered online using basic screen administration on the system administration terminal by any of the following three methods:

- Basic screen administration on the system administration terminal
- Avaya Call Management System (CMS)
- Avaya Visual Vectors

The following section discusses the basic screen administration method for entering a vector online at the switch system administration terminal. For instructions on creating a vector using the CMS interface, see *Avaya CMS Administration*, 585-215-515. For instructions on creating a vector with Visual Vectors, see *Avaya Visual Vectors User Guide*, 585-210-709.

Call Vector form — basic screen administration

A vector is entered online using basic screen administration by completing the Call Vector form. An example the first page of this form is shown in the following screen example.

Call Vector form (Page 1 of 3)

change vector 20		Page 1 of 3	
Number: 20		CALL VECTOR	
Name: _____			
Multimedia? n	Attendant Vectoring? n	Meet-me Conf? n	Lock? y
Basic? y	EAS? n	G3V4 Enhanced? n	ANI/II-Digits? n
Prompting? n	LAI? n	G3V4 Adv Route? n	CINF0? n
		BSR? y	Holidays? y
01 _____			
02 _____			
03 _____			
04 _____			
05 _____			
06 _____			
07 _____			
08 _____			
09 _____			
10 _____			
11 _____			

The following procedure summarizes how you can enter a vector online via basic screen administration.

1. Access the Call Vector Form by executing the change vector **x** command, where **x** is the number of the vector that you want to access. Use the change vector command either to change an existing vector or to create a new vector.

If you are not certain of the number or name of a vector, enter the list vector command to view a complete list of all vectors that are administered for your system.

2. Assign a name to the vector by completing the blank next to the Name field. The vector name can contain up to 27 alphanumeric characters.

Note:

The vector number, which appears next to the Number : field, is automatically assigned by the system.

3. In the Multimedia? field, indicate whether the vector should receive early answer treatment for multimedia calls. Valid values are y or n.

Note:

This only applies if Multimedia Call Handling is enabled.

- If you expect this vector to receive multimedia calls, set this field to y. The call is considered to be answered at the start of vector processing, and billing for the call starts at that time.
- If you do not expect the vector to receive multimedia calls, set this field to n.

4. In the Attendant Vectoring field enter a y if the vector will be used as an attendant vector. Attendant Vectoring can be used only when enabled on the Customer Options form.

5. In the Meet -me Conf field enter a y if the vector will be used for the Meet-me Conference feature. Meet-me Conference can be used only when enabled on the Customer Options form.

Note:

Both Attendant Vectoring and Meet-me Conference cannot be enabled for a vector at the same time.

6. In the Lock field, indicate whether you will allow this vector to be displayed on and edited from a client application such as Visual Vectors.
- If you enter y, the vector is locked and can only be displayed and modified in the switch administration software.
 - If you enter n, the vector is not communicated to client software such as Visual Vectors or CMS and may not be displayed and modified from these programs.
 - If Attendant Vectoring is enabled, the Lock field defaults to y and cannot be changed.

Note:

Always lock vectors that contain secure information, for example, access codes.

7. Look at the next fields and determine where a y (yes) appears. These fields indicate the Call Vectoring features and corresponding commands you can use. If an n (no) appears in one of these fields, you cannot use the corresponding feature.

Note:

The Call Vectoring features are optioned from the Customer Options form.

Basic	You can use the Basic Call Vectoring commands. See Basic Call Vectoring on page 109 for details on using these commands.
EAS	Expert Agent Selection is enabled. See Expert Agent Selection on page 407 for information on how the EAS feature works.
G3V4 Enhanced	You can use the G3V4 Enhanced Vector Routing commands and features. See Appendix N: Feature Availability on page 707 for an explanation of which features are included with G3V4 Enhanced Vector Routing.
ANI/II-Digits	You can use the ANI and II-Digits Vector Routing commands. See ANI/II-digits routing and Caller Information Forwarding (CINFO) on page 179 for details on using these commands. ANI/II-Digits Routing requires G3V4 Enhanced Vector Routing.
ASAI Routing	You can use the Adjunct Routing command. See Adjunct (ASAI) Routing on page 207 for details on using this command.

Prompting	You can use the Call Prompting commands. See Call Prompting on page 225 for details on using these commands.
LAI	Look-Ahead Interflow is enabled. See Look-Ahead Interflow (LAI) on page 247 information on how LAI works.
G3V4 Adv Route	You can use the G3V4 Advanced Vector Routing commands. See Advanced Vector Routing - EWT and ASA on page 163 for details on using these commands.
CINFO	You can collect ced and cdpd digits with the collect digits step. See ANI /II-digits routing and Caller Information Forwarding (CINFO) on page 179 for information on collecting these digits.
BSR	Best Service Routing (BSR) is enabled, and you can use the BSR commands. The available commands vary depending on whether you are using single-site or multi-site BSR. See Best Service Routing (BSR) on page 271 for information on the application of BSR.
Holidays	You can create tables to use for special days, such as holidays and promotional days. See Holiday Vectoring on page 333 for information on how to create holiday tables and define holiday vectors.

8. Enter a maximum of 32 vector commands in the blanks next to the step numbers. See [Appendix A: Call Vectoring commands](#) on page 467 for a complete description of all Call Vectoring commands.

Note:

You need not type every letter of each command that you enter. If you type just the first few letters of a command and press Enter or the Tab key, the system spells out the entire command.

9. Save the vector in the system by pressing Enter.

Note:

After editing a vector, verify that the vector will work as intended. This is particularly important if you deleted a step that was the target of a **go-to** step.

Inserting a vector step

To insert a vector step:

1. After entering the **change vector** command, press **F6** (Edit).

2. At the command line, type **i** followed by a space and the number of the step that you want to add and press Enter. For example, to insert a new vector step 3, type **i 3** and press Enter. You cannot add a range of vector steps.
3. Type the new vector step.

When a new vector step is inserted, the system automatically renumbers all succeeding steps and renumbers **goto** step references as necessary. Under certain conditions, attempts to renumber **goto** step references will result in an ambiguous renumbering situation. In this case, the step reference is replaced by an asterisk (*). You will receive a warning indicating that you must resolve the ambiguous references and your cursor automatically moves to the first reference that needs to be resolved. You cannot save a vector with unresolved goto references.

You cannot insert a new vector step if 32 steps are already entered in the vector. However, you can extend the vector program to another vector by using the **goto vector unconditionally** command at step 32.

Deleting a vector step

To delete a vector step:

1. After entering the change vector command, press **F6** (Edit)
2. At the command line, type **d** followed by a space and the number of the step you want to delete and press Enter. You can delete a range of vector steps. For example, to delete steps 2 through 5, type **d 2-5** and press Enter.

When a vector step is deleted, the system automatically renumbers all succeeding steps and renumbers **go-to** step references as necessary. Under certain conditions, attempts to renumber **go-to** step references will result in an ambiguous renumbering situation. In this case, the step reference is replaced by an asterisk (*).

For example, if a vector step that is the target of a goto step is deleted, the goto references are replaced by asterisks (*). For example, if you delete step 7 when you have a **goto step 7 if** vector step, the 7 is replaced by *.

You receive a warning indicating that you must resolve ambiguous references and your cursor automatically moves to the first reference that needs to be resolved. You cannot save a vector with unresolved goto references.

Creating and constructing a vector

Creating and constructing a vector provides a logical approach for vector construction. This method uses a starting vector that consists of one step and then builds on this vector to produce a new vector that provides additional functions. As each step is presented, you are introduced to one or more new vector commands or approaches to vector processing. While it is not practical to present all such commands and approaches, those presented in this tutorial should give you a good idea of how to use Call Vectoring.

Step 1: Queuing a call to the main split

If a call cannot be immediately answered by an agent or operator, the call is usually queued until an agent becomes available. A call can be connected to an available agent or queued via the vector shown in the following example. In this example, calls are queued to Split 5.

Queuing call to main split.

Page 1 of 1

CALL VECTOR

Number: 27	Name: base	Multimedia? n	Lock? n
Multimedia? n	Attendant Vectoring? n	Meet-me Conf? n	Lock? y
Basic? y	EAS? n	G3V4 Enhanced? n	ANI/II-Digits? n
Prompting? n	LAI? n	G3V4 Adv Route? n	CINFO? n
		BSR? y	ASAI Routing? n
			Holidays? y

01 queue-to split 5 pri l

02 _____

03 _____

04 _____

05 _____

06 _____

07 _____

08 _____

09 _____

10 _____

11 _____

Agent Availability

If an agent is available, the **queue-to split** command automatically sends the call to the agent without queuing the call. However, if no agent is available, the command queues the call to the main split of agents. Once the call is sent to the main split queue, the call remains there until it is answered by an agent or some other treatment is provided.

Call Priority levels

Each call queued to a split occupies one queue slot in that split. Calls are queued sequentially as they arrive according to the assignment of the priority level. In our vector, note that the priority level low is assigned to the call. The priority level establishes the order of selection for each call that is queued. A call can be assigned one of four priority levels: top, high, medium, or low.

Within a given split (the main split, in our vector), calls are delivered to the agent sequentially as they arrive to the split queue and according to the priority level assigned. Accordingly, calls that are assigned a top priority (if any) are delivered to an agent first, calls that are assigned a high priority are delivered second, and so forth.

Step 2: Providing feedback and delay announcement

A call remains queued until an agent becomes available to answer the call. In the meantime, it is likely that the caller wants to hear some feedback assuring him or her that the call is being processed.

The vector shown in the following example provides one feedback solution. In this example, Announcement 2771 could contain this message: "We're sorry. All of our operators are busy at the moment. Please hold."

Providing feedback and delay announcement

CALL VECTOR				Page 1 of 3	
Number: 27	Name: base	Multimedia? n	Lock? n		
Multimedia? n	Attendant Vectoring? n	Meet-me Conf? n	Lock? y		
Basic? y	EAS? n	G3V4 Enhanced? n	ANI/II-Digits? n	ASAI Routing? n	
Prompting? n	LAI? n	G3V4 Adv Route? n	CINFO? n	BSR? y	Holidays? y
01 queue-to split 5 pri l					
02 wait-time 10 seconds hearing ringback					
03 announcement 2771					
04 _____					
05 _____					
06 _____					
07 _____					
08 _____					
09 _____					
10 _____					
11 _____					

Using the wait-time command

The **wait-time** command in step 2 provides a maximum 8-hour delay before the next vector step is processed. The time parameter can be assigned as follows:

- 0-999 secs

Creating and editing call vectors

- 0-480 mins
- 0-8 hrs

In the example vector, the specified wait time is 10 seconds.

In addition to the delay period, the **wait-time** command provides the caller with feedback. In our vector, **ringback** is provided. Other types of feedback that can be provided with the **wait-time** command are: silence, system music, or an alternate music or other audio source. For more information see, [wait-time command](#) on page 114.

The **wait-time** command in the example vector provides the caller with a maximum of 10 seconds of ringback. If an agent answers the call before the **wait-time** command runs its course, the command is terminated, the delay period is ended and the accompanying feedback is stopped. In the current example, if the call is delivered to an agent after 4 seconds the caller does not hear the remaining 6 seconds of ringback.

If the call is not answered by the time the **wait-time** command is completed, vector processing continues.

The **announcement** command consists of a recorded message, and it is often used to encourage the caller to stay on the telephone or to provide information to the caller. If a call is delivered to an agent during the **announcement** command, the announcement is interrupted.

Multiple callers can be connected to an announcement at any time. See “Managing Announcements” in *Administrator Guide for Avaya Communication Manager*, 555-233-506, for more information about announcements.

Step 4: Queuing a call to a backup split

To this point, the vector example involves a call queued to one split. However, Call Vectoring allows a call to be queued to a maximum of three splits simultaneously, which improves can improve overall call response times. Multiple split queuing is especially useful during periods of heavy call traffic.

The vector shown in the following example allows a call to be queued to two splits.

Queuing call to backup split

CALL VECTOR				Page 1 of 1	
Number: 27	Name: base	Multimedia? n	Lock? n		
Multimedia? n	Attendant Vectoring? n	Meet-me Conf? n	Lock? y		
Basic? y	EAS? n	G3V4 Enhanced? n	ANI/II-Digits? n	ASAI Routing? n	
Prompting? n	LAI? n	G3V4 Adv Route? n	CINFO? n	BSR? y	Holidays? y
01 queue-to split 5 pri l					
02 wait-time 10 seconds hearing ringback					
03 announcement 2771					
04 wait-time 10 seconds hearing music					
05 check split 7 pri m if calls-queued < 5					
06 wait-time 60 seconds hearing music					
07 announcement 2881					
08 goto step 5 if unconditionally					
09 _____					
10 _____					
11 _____					

The **queue-to split** command in step 1 queues the call to the main split. But if the call is not answered by the time the **wait-time** command in step 4 is complete, the **check split** command in step 5 attempts to queue the call to backup Split 7 at a medium priority. The condition expressed in the command (**if calls-queued < 5**) determines whether or not the call is to be queued to the backup split. Specifically, if the number of calls currently queued to Split 7 at a medium or higher priority is less than 5, the call is queued to the split.

Conditions used with the check split command

The **calls-queued** condition is one of several conditions that can be included in the **check split** command. The other conditions are **unconditionally**, **average speed of answer (rolling-asa)**, **available agents**, **staffed agents**, **expected wait time** and **oldest call waiting**. As is true for the **queue-to split** command, the **check split** command can queue a call at one of four priorities: **low**, **medium**, **high**, or **top**.

Elevating call priority

Note that if the call is queued to Split 7, the call priority is elevated from low to medium priority instead of a low priority, which is assigned if the call is queued by the **queue-to split** command in step 1. It is a good practice to raise the priority level in subsequent queuing steps to accommodate callers who have been holding the line for a period of time.

Step 5: Checking the queue capacity

A limited number of queue slots can be assigned to each split. Therefore, it is a good practice to check the main split queue for the number of calls that are already queued before allowing another call to queue to the split.

The number of slots assigned to each split is defined in the queue length field on the hunt group screen. A call that attempts to queue to a split with no available queue slots cannot be queued to that split and, accordingly, the **queue-to split** command fails. Vector processing would then continue with the next vector step. The following vector example includes provisions for checking queue capacity.

Checking queue capacity

CALL VECTOR				Page 1 of 1	
Number: 27	Name: base	Multimedia? n	Lock? n		
Multimedia? n	Attendant Vectoring? n	Meet-me Conf? n	Lock? y		
Basic? y	EAS? n	G3V4 Enhanced? n	ANI/II-Digits? n	ASAI Routing? n	
Prompting? n	LAI? n	G3V4 Adv Route? n	CINFO? n	BSR? y	Holidays? y
01 goto step 10 if calls-queued in split 5 pri l > 20					
02 queue-to split 5 pri l					
03 wait-time 10 seconds hearing ringback					
04 announcement 2771					
05 wait-time 10 seconds hearing music					
06 check split 7 pri m if calls-queued < 5					
07 wait-time 60 seconds hearing music					
08 announcement 2881					
09 goto step 6 if unconditionally					
10 busy					
11 _____					

A check of split 5 is implemented by the **goto step** command in step 1. In the example shown above, assume that 21 queue slots are assigned to split 5. Accordingly, the **goto step** command tests whether the split contains more than 20 calls via the condition **if calls-queued in split 5 pri l > 20**. If this test is successful, control is passed to the **busy** command, shown in vector step 10. The **busy** command gives the caller a busy signal and eventually causes the call to drop.

Alternately, if 20 or less medium priority calls are already queued to the main split when step 1 executes, the **queue-to split** command in step 2 queues the call, and vector processing continues at step 3.

Redirecting calls to a backup split

Instead of providing the caller with a busy tone if the **queue-to split** step cannot queue the call, the call can be queued to a backup split. To queue the call to another split, change the step parameter for the **goto step** command from 10 to 6 (so that the command reads **goto step 6**). In this case, control is passed from step 1 to the **check split** step (step 6). Because this queuing step is included within a continuous loop of steps (steps 6 through 9), continuous attempts to queue the call are now made.

Step 6: Checking for nonbusiness hours

If a caller calls during nonbusiness hours, you can still provide the caller with some information for calling back during working hours by playing the appropriate recorded message. This strategy is illustrated in the following Call Vector example. This vector would be used for a company that was open 7 days a week, from 8:00 a.m. to 5:00 p.m.

Checking for nonbusiness hours

CALL VECTOR				Page 1 of 2	
Number: 27	Name: base	Multimedia? n	Lock? n		
Multimedia? n	Attendant Vectoring? n	Meet-me Conf? n	Lock? y		
Basic? y	EAS? n	G3V4 Enhanced? n	ANI/II-Digits? n	ASAI Routing? n	
Prompting? n	LAI? n	G3V4 Adv Route? n	CINFO? n	BSR? y	Holidays? y
01 goto step 12 if time of day is all 17:00 to all 8:00					
02 goto step 11 if calls queued in split 5 pri l > 10					
03 queue-to split 5 pri l					
04 wait-time 10 seconds hearing ringback					
05 announcement 2771					
06 wait-time 10 seconds hearing music					
07 check split 7 pri m if calls-queued < 5					
08 wait-time 60 seconds hearing music					
09 announcement 2881					
10 goto step 6 if unconditionally					
11 busy					
12 disconnect after announcement 3222					

The **goto step** command in step 1 checks if the call arrives during nonbusiness hours. Specifically, if the call arrives between 5:00 p.m. and 8:00 a.m. on any day of the week, the command passes control to step 12.

The **disconnect** command in step 12 includes and provides an announcement that first gives the caller the appropriate information and then advises him or her to call back at the appropriate time. The command then disconnects the caller.

If the call does not arrive during the specified nonbusiness hours, control is passed to step 2 and vector processing continues. On step 2, split 5 is checked for calls waiting at all priority levels.

Note:

As an alternative to disconnecting callers who place a call during nonbusiness hours, you can allow callers to leave a message by including the **messaging split** command within the vector. See [Basic Call Vectoring](#) on page 109 for more details.



Call Vectoring fundamentals

The manner in which a call is processed depends how the switch is implemented and how the Call Vectoring software is implemented on the switch. The success of the call processing relies on:

- The resources that are available to process a call (for example: agents, splits, software, hardware). This is called call management.
- How the call is processed using vector processing, including VDN usage, vector control flow, and intelligent use of the vector programming capabilities.

This chapter describes these fundamental components of Call Vectoring.

Call management

When a call is placed to a switch enabled with Call Vectoring, the call is directed to an appropriate vector by means of a Vector Directory Number (VDN). A VDN is a “soft” extension number that is not assigned to an equipment location. A VDN maps to a single vector, but one or more VDNs can map to the same vector.

Once the call goes to a vector, call routing and treatment are determined by the commands in the vector. Processing starts at the first step and proceeds through the vector. Empty steps are passed over, and the vector process stops after the last step is reached.

However, one vector can direct the call to another vector or VDN, which in turn can direct the call to yet another vector, and so forth, up to a maximum of 1000 vector steps per call. When a call enters vector processing, a loop counter keeps track of the number of vector steps executed. If the loop counter exceeds 1000, a **stop** command is executed. However, when the **interflow-qpos** conditional is used, the execution limit is automatically increased to 3000 steps. This is because this conditional is designed to make rapid LAI loops practical.

The following sections discuss how calls are routed and queued by way of Call Vectoring. Subsequent sections discuss agent states, priority levels, caller feedback, and caller control.

Call flow

Calls enter a vector and execute steps sequentially beginning with step 1, unless there is a **goto** step. Most steps take microseconds to execute. The exception is steps with **announcement**, **wait-time**, and **collect digits** commands. A 0.2-second wait occurs after every seven executed steps unless an explicit wait has occurred. Note that **wait-time** with 0 seconds is not an explicit wait.

Call Vectoring uses several call flow methods to redirect and queue calls. These methods involve the use of the Call Vectoring commands, which are described later in this chapter. The methods for queuing and redirecting calls follow:

- Multiple split queuing allows a call to queue to up to three splits.
- Intraflow allows calls that are unanswered at a split within a predefined time to be redirected to one or more other splits on the same switch. If redirection depends on a condition to be tested, the process is referred to as conditional intraflow.
- Interflow allows calls that are directed to a vector to be redirected to an external or nonlocal split destination. This destination is represented by a number that is programmed in the relevant vector. Calls can be routed to an attendant or attendant queue, a local extension, a remote extension (Uniform Dialing Plan (UDP)), an external number, or a VDN.
- Look-Ahead Interflow (LAI) can be implemented for contact centers with multiple ACD locations that are connected by way of ISDN PRI. This method allows a call to interflow only if a remote location is better equipped to handle the call. LAI can occur only when the proper conditions at the receiving switch are met.
- Best Service Routing (BSR) allows the switch to compare specified splits or skills, identify the split or skill that will provide the best service to a call, and deliver the call to that resource. If no agents are currently available in that split or skill, the call is queued. BSR is available in single-site and multi-site versions. Single-site BSR compares splits or skills on the switch where it resides to find the best resource to service a call. Multi-site BSR extends this capability across a network of switches, comparing local splits or skills, remote splits or skills, or both, and routing calls to the resource that will provide the best service.
- Adjunct Routing allows the switch to request a routing destination from an adjunct processor by way of ASAI. When this feature is enabled, the switch sends the ASAI adjunct a message that contains information about the calling party. The adjunct uses this information to determine, from its databases, the best place for the switch to send the call. The adjunct then passes this routing information back to the switch.

Caller control

Call Vectoring allows for the temporary transfer of call management control to the caller by several methods:

Caller-Selected Routing - This method prompts the caller to input information in the form of dialed digits from a touchtone telephone or from an internal rotary telephone that is located on the same switch. The capability is available if Call Prompting is enabled. A recorded announcement is usually used for prompting purposes. Once the caller inputs the digits, the call is routed to the correct department or destination. This procedure can significantly reduce the number of transferred calls and thus better satisfy the caller's needs.

In addition, if Call Prompting and Call Vectoring (CINFO) are enabled, the vector can collect caller-entered digits that are passed from the network by way of an ISDN message. These digits can be used to enhance caller control in the same way as digits that are collected directly by the switch.

Messaging - The caller can leave a voice message in the event that the call cannot be or has not yet been answered. When messaging is enabled, control is eventually passed to the AUDIX split.

Call queuing to splits

Basic Call Vectoring can queue calls to up to three splits simultaneously at any one of four priority levels. This process is called multiple split queuing. The first split to which a call is queued is called the main split, and the second and third split are designated as backup splits. Multiple split queuing enables more efficient utilization of agents, and thus provides better service to callers.

When an agent becomes available in any split to which the call is queued, the following events occur:

- The call is connected to the agent.
- The call is removed from any other queues. Announcements, music, ringback, or other audio source are terminated.
- Vector processing is terminated.

For more information about multiple split queuing, see [Multiple split queuing](#) on page 123.

Split queue priority levels

If Call Vectoring is not enabled, queued calls are tracked at one of two priority levels: Medium or High. If a call is queued using Call Vectoring, the call can be assigned one of four priority levels: Top, High, Medium, or Low. Within each priority level, calls are processed sequentially as they arrive.

Note:

A direct agent call is always given the highest priority, and is usually delivered before a call that is directed to a split. The exception is when skill-level Call Handling Preference is optioned and the skill that is administered to receive direct agent calls is not administered as the agent's highest skill level. A direct agent call is an ACD call that is directed to a specific ACD agent rather than to any available ACD agent in the split. For more information, see [Direct agent calling](#) on page 421.

Note:

If a call is already queued to one or more splits that are currently intended to serve as backup splits, the call could be requeued at the new priority level that is indicated in the command step. For more information on requeuing, see [Call Vectoring commands](#) on page 467.

Agent work mode

Call Vectoring can make call management decisions according to real-time agent work modes:

- Staffed-agents considers agents logged in to an ACD split.
- Available-agents considers agents logged in and ready to receive an ACD call.

These work mode states can appear as conditions within the **check split** and **goto** Call Vectoring commands, so that the commands can be made to check the number of staffed or available agents.

If a hunt group is not monitored, agents in the hunt group do not have log-in, log-out, or work modes. In such cases, staffed-agents is synonymous with administered, and available-agents is the number of agents who are ready to receive a hunt group call.

For ACD calls, agent states are further defined by the relevant work mode. The following list describes these modes:

- After-Call-Work Mode – The agent is unavailable to receive any ACD calls for any split. This mode can be used when the agent is doing ACD call-related work and can be implemented on a timed basis. This is known as Timed ACW. The system automatically places the agent into ACW after the agent completes a call that was received while in the manual-in work mode. In addition, the system can be administered through the Vector Directory Number or Hunt Group forms to automatically place agents into ACW for an administered period of time following the completion of each ACD call that is received while in the auto-in work mode.
- Auto-In Work Mode – The agent is available to receive calls and allows the agent to receive a new ACD call immediately after disconnecting from the previous call. When Multiple Call Handling is enabled, an agent in Auto-In Work Mode can elect to receive ACD calls by placing the active call on hold.

- Auxiliary-Work Mode – The agent is unavailable to receive any ACD calls for the specified split. This mode can be used when an agent is performing activities that are not associated with the ACD, such as going on a break.
- Manual-In Work Mode – The agent is available to receive calls. After the agent disconnects from an ACD call, they are automatically puts into the After Call Work Mode.

Note:

When Multiple Call Handling is enabled, an agent in Manual-In Work Mode can receive additional ACD calls by placing an active call on hold. For more information about agent work modes and Multiple Call Handling, see *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784.

Calling party feedback

The initial feedback a caller hears as the call is being processed by a vector depends on the origin classification of the call, which can be one of the following:

- Internal call from another switch user.
- Non-CO incoming call over a DID or tie trunk over which incoming digits are received.
- CO incoming call over a CO or automatic type tie trunk over which no digits are received.

For an internal or a non-CO call, the caller hears silence until one of the following vector steps is reached:

- For **wait** commands with system music, ringback, or an alternate music or audio source, the caller hears system music, ringing, or the music or audio associated with an administered port.
- For any **announcement** command, the caller hears the specified announcement command is processed.
- For a **busy** command, the caller hears a busy signal.
- When the call rings a station, the caller hears ringback.

For a CO call, the caller hears CO ringback until one of the following vector steps is reached:

- Announcement (Caller hears the announcement.)
- Wait with system music or alternate audio/music source (Caller hears system music, or the music or audio associated with an administered port.)
- Call answered (Caller hears the agent or voice response answering the call.).

For a CO call that has answer supervision already supplied by way of the processing of an **announcement** or the issuing of a **wait-time** command, the caller may hear any of the following:

Call Vectoring fundamentals

- Announcement when any **announcement** command is processed.
- Ringback, silence, system music, or an alternate audio or music source when a **wait-time** command is processed.
- Busy when a **busy** command is processed.
- Ringback when the call rings at a station.

Examples of how subsequent caller feedback is provided in a vector are provided in [Basic Call Vectoring](#) on page 109.

Dialed number identification service (DNIS)

In the traditional ACD arrangement, each agent in a given split is trained to answer calls that are relevant to one specific purpose. However, a contact center may wish to utilize agents trained to address multiple types of calls. This arrangement can allow resources to be used in a more efficient manner, with fewer agents overall and less administrative intervention by the ACD manager. For example, where 5 agents might be needed in each of three smaller splits (15 agents total) to handle 3 types of calls, only 11 or 12 agents might be needed in the combined split.

A network service known as Dialed Number Identification Service (DNIS) is available to exploit multi-skill agent capabilities. DNIS enables a unique multidigit number based on the dialed number associated with the call. The unique number may be sent to an agent, sent to a host computer with ASAI applications, used to provide different treatments for the call, and so forth.

The DNIS number is a function of the telephone number dialed by the caller. Each DNIS number in your telephone system can be programmed to route to an ACD split that is comprised of agents who are proficient in handling several types of calls.

Call Vectoring takes the DNIS number from the network and interprets this number as a VDN. When the call is delivered to the agent terminal, the unique name that is assigned to the particular VDN is displayed on the agent's terminal. This allows the agent to know the specific purpose of the call. As a result, the agent can answer with the appropriate greeting and be immediately prepared to service the customer.

Vector processing

If Call Vectoring is in effect, telephone calls are processed by one or more programmed sequences of commands called vectors.

Vector processing includes the following topics:

- Vector Directory Number (VDN)
- Vector control flow
- Programming capabilities.

Vector Directory Number

Within Call Vectoring, calls access the appropriate vector(s) by way of a Vector Directory Number (VDN). A VDN is a “soft” extension number that is not assigned to an equipment location. In effect, the digits dialed by a caller or sent to the switch from an external network are translated within the system as a VDN.

The VDN points to the vector, and it defines the service desired by the caller. The VDN also serves as the application number. It allows for specific call-handling and agent-handling statistical reporting within both the Basic Call Management System (BCMS) and the Avaya Call Management System (CMS) for each application that is handled by the contact center.

VDNs are assigned to different vectors for different services or applications that require specific treatments. Any number of VDNs can point to the same vector. As a result, the same sequence of treatments can be given to calls that reach the system from different numbers or from different locations.

Implementation notes

The following list describes special situations due to the type of communication server implementation that cause differences in the available fields on the VDN form.

- Data for the Orig Annc column appears only when VDN of Origin Announcement is enabled on the System-Parameters Customer-Options form.
- To list all VDNs using the same BSR Application Plan, enter the list VDN BSR xxx command (where xxx is the number of the BSR Application Plan used by one or more VDNs).

VDNs can be preassigned to incoming trunk groups, or they can be sent in digit form to the switch by a public or private network. The digits that are sent to the switch can come from the serving Central Office (CO) or toll office by way of the Direct Inward Dialing (DID) feature or DNIS. The digits can also come from another location by way of dial-repeating tie trunks, or they can be dialed by an internal caller. For a non-ISDN call, the last four

Call Vectoring fundamentals

digits of the number are sent to the system. For an ISDN call, the entire 10-digit number is sent to the system.

The last few digits of the destination passed to the switch/ACD on a DID or DNIS or on a dial tie-trunk call comprise the VDN. Automatic trunks do not pass destination address digits. Instead, each such trunk always routes to a specific incoming destination that is programmed for the corresponding automatic trunk group. The destination can be an attendant queue, an extension, a hunt group number, or a VDN.

The VDN has several properties. These properties are administered on the Vector Directory Number form. The following screens show all possible fields available for a VDN. However, some fields display only when certain features are enabled.

change vdn xxxxx	page 1 of 2
VECTOR DIRECTORY NUMBER	
Extension: 2001	
Name: vdn 2001	
Vector Number: 1	
Attendant Vectoring? n	
Meet-me Conference? n	
Allow VDN Override? n	
COR: 1	
TN: 1	
Measured: internal	
Acceptable Service Level (sec): 20	
VDN of Origin Annc. Extension:	
1st Skill:	
2nd Skill:	
3rd Skill:	

change vdn xxxxx	page 2 of 2
VECTOR DIRECTORY NUMBER	
Audix Name:	
Messaging Server Name:	
Return Destination:	
VDN Timed ACW Interval:	
BSR Application:	
BSR Available Agent Strategy: 1st-found	
Conference Access Code:	
Conference Controller:	
Display VDN for Route-To DAC?	
VDN Override for ISDN Trunk ASAI Messages?	

The following list describes every field that is available on the VDN form and gives you information on the values that can be entered in the field.

Extension - The extension number used to identify the VDN.

Name - ●An alphanumeric name that identifies the VDN. This is an optional field that need not contain any data. The name may be truncated on agents' displays depending on the application. When information is forwarded with an interflowed call, only the first 15 characters are sent. The default is blank.

Vector Number - An identification number that determines which vector is activated when a call comes into a VDN. Several VDNs may send calls to the same vector. The maximum Vector Number capacity varies by switch. For more information, see the Avaya switch capacity documents, which can be accessed online at:

<http://www.avaya.com/support/docsplus>

Attendant Vectoring - A y indicates that this is an Attendant Vectoring VDN. For more information, see [Attendant Vectoring](#) on page 375. This field defaults to y if Attendant Vectoring is the only Call Vectoring feature enabled on the customer options form. When removing a VDN, the switch verifies that this VDN is not being used on either the Console Parameters form or the Tenant Partitioning forms.

Meet-me Conference - A y indicates that this is a Meet-me Conference VDN. For more information, see [Meet-me Conference](#) on page 393.

Allow VDN Override - Valid entries are y and n (default). If a call is processed through multiple VDNs, this entry may affect the VDN name and various options assigned to the VDN. If it is set to n, the name of this VDN appears on the agent display and the AUDIX mail for the VDN is accessed. If any subsequent VDNs are used to process this call, their names do not appear on the terminating display and the AUDIX mail for the original VDN is accessed. If the field is set to y, the name of the VDN that appears on the terminating display depends on the administration and chaining of the subsequent VDNs and the AUDIX mail for the last VDN that is accessed. The default is n.

COR - A 1-digit to 2-digit number that specifies the class of restriction (COR) to be assigned the VDN. The default value is 1. The field cannot be blank and must have an entry in the range from 0 to 95.

TN - Enter the Tenant Partition number. The default value is 1.

Measured - Used to collect measurement data for this VDN. Valid entries for Category A are **internal**, **external**, **both**, or **none**. External data collection is done by CMS, and internal data collection is done by BCMS. The default is none.

Note:

The BCMS feature must be enabled on the System-Parameters Customer-Options form for the Measured field to be set to **internal** or **both**. In addition, the appropriate CMS release must be administered on the Feature-Related System Parameters form if the field is being changed to **external** or **both**.

Acceptable Service Level (sec) - Only displayed when the BCMS/VuStats Service Level option is enabled on the System-Parameters Customer-Options form and the Measured field is **internal** or **both**. Enter the number of seconds within which calls to this VDN should be answered. This will allow BCMS to print out a percentage of calls that were answered within the specified time. Valid entries are 0 to 9999 seconds. The default is blank.

VDN of Origin Annc. Extension - This field is displayed only if VDN of Origin Announcements is enabled on the System-Parameters Customer-Options form. Enter the extension number of the VDN of Origin announcement. The default is blank.

1st/2nd/3rd Skill - Only displayed when Expert Agent Selection is enabled on the System-Parameters Customer-Options form. Enter the desired Skill numbers in each field or leave the field blank. Valid entries are 1 to 999. The default is blank.

AUDIX Name - Only displayed for “r” model systems. If this VDN is associated with the AUDIX vector, enter the name of the AUDIX machine as it appears in the Adjunct Names form.

Messaging Server Name - Not used in this release.

Return Destination - The VDN extension number to which an incoming trunk call will be routed if it returns to vector processing after the agent drops the call. Valid entries are the VDN extension or blank. The default is blank.

VDN Timed ACW Interval - When a value is entered in this field, an agent in auto-in work mode who receives a call from this VDN is automatically placed into After Call Work (ACW) when the call drops. Enter the number of seconds that the agent should remain in ACW following the call. When the administered time is over, the agent automatically becomes available. This field has priority over the Timed ACW Interval field on the Hunt Group form.

BSR Application - This field is displayed only if Look-Ahead Interflow (LAI) and Vectoring (Best Service Routing) are enabled on the System Parameters Customer-Options form. To use multi-site Best Service Routing with this VDN, enter a 1- to 3-digit number to specify an application plan for the VDN.

BSR Available Agent Strategy - This field is displayed only if Vectoring (Best Service Routing) is enabled on the System Parameters Customer-Options form. The available agent strategy determines how Best Service Routing identifies the best split or skill to service a call in an agent surplus situation. To use Best Service Routing with this VDN, enter an agent selection strategy in this field. Acceptable entries are 1st-found, UCD-LOA, UCD-MIA, EAD-LOA, and EAD-MIA.

Conference Access Code - A 6-digit Meet-me Conference access code or blank. Once a conference access code is assigned, an asterisk displays in this field for subsequent change display or remove operations by all users except the “init” superuser login. This field is displayed only when the VDN is a Meet-me Conference VDN.

Conference Controller - A valid extension number or blank. If an extension number is entered, a user at that extension can change the access code for the Meet-me Conference VDN using a feature access code. If this field is blank, only a station user that is assigned with console permissions can change the access code for the Meet-me Conference VDN using a feature access code. In addition, remote access users can change a Meet-me Conference access code using the feature access code. This field is displayed only when the VDN is a Meet-me Conference VDN.

Display VDN for Route-To DAC? - This option is designed to address situations where one of the following conditions is in effect:

- Either an **route-to number** or **route-to digits** vector command routes an EAS ACD agent call, with the coverage option set to **y**
- An adjunct routing step routes an EAS ACD agent call, with the coverage option set to **y**.
- The option facilitates the work of agents who respond to direct agent calls that originate from different Vector Directory Numbers (VDNs). When Display VDN for Route-to DAC is enabled, the name of the originating VDN is displayed at the agent station so that the agent can address the call in a more appropriate and efficient manner. For more information, see "Displaying VDN names for direct agent calls," in [Displaying VDN names for vector-initiated Direct Agent calls](#) on page 558.

VDN Override for ISDN Trunk ASAI Messages - This feature is used when a CTI application has set up an ASAI VDN or station event-notification association and the application requires the "Called Number" ASAI message information to be the "active" VDN extension associated with the incoming call rather than the Called Number digits contained in the ISDN **SETUP** message for the incoming call.

This capability is useful for a CTI application that is monitoring a call where the "active" VDN extension is changed by the following vector scenario:

1. An incoming ISDN-PRI call is routed to a VDN whose vector prompts the caller to enter one or more digits.
2. The call is then routed to a subsequent VDN by a route-to number or route-to digits vector step.

The ASAI messages whose Called Number information is affected by this feature are:

- "Call Offered" ASAI event message
- "Alerting" ASAI event message
- "Queued" ASAI event message
- "Connect" ASAI event message
- "Adjunct Route-Request" ASAI message

The VDN Override for ISDN Trunk ASAI Messages? field is displayed on page 2 of the Vector Directory Number form only when the following conditions are set by the Communication Manager license file:

Call Vectoring fundamentals

- The G3 Version field on the System-Parameters Customer Options form is set to V10 (or later).
- The ASAI Link Core Capabilities option in the System-Parameters Custom-Options screen is set to y.

Note:

The VDN Override for ISDN Trunk ASAI Messages? field can be set to y only if the Allow VDN Override? on page 1 of the Vector Directory Number form is also set to y.



Important:

The VDN Override for ISDN Trunk ASAI Messages feature is activated for an incoming ISDN/PRI call when the call is routed to a VDN that has the VDN Override for ISDN Trunk ASAI Messages? field on page 2 of the VDN form set to y. When this feature is activated for a call, it remains in effect for the call regardless of the VDN Override for ISDN Trunk ASAI Messages? field setting for any subsequent VDNs to which the call is routed.

Called Number information for the ASAI messages described above is affected by the VDN Override for ISDN Trunk ASAI Messages? setting as follows:

- If the VDN Override for ISDN Trunk ASAI Messages feature is activated for an incoming ISDN/PRI call, the Called Number information is the “active” VDN extension associated with the call, where the VDN Override feature applies to this extension.
- If the VDN Override for ISDN Trunk ASAI Messages feature is activated for an incoming ISDN/PRI call, the Called Number information is taken from the Called Number digits sent with the incoming ISDN **SETUP** message for the call, where the VDN override feature does not apply for this digit information.

Feature interactions for the VDN Override for ISDN Trunk ASAI Messages feature are as follows:

- If an incoming ISDN/PRI call has the VDN Override for ISDN Trunk ASAI Messages feature activated, this feature is not preserved when the call is answered by an ACD agent or station user and the call is subsequently transferred to, or conferenced with, another agent or station by the Communications Manager station call-transfer or station call-conference features.
- If an incoming Central Office (CO) call is routed to a VDN that has VDN Override for ISDN Trunk ASAI Messages? activated, it has no effect on the Called Number information for the ASAI messages described above (where the Called Number is the “active” VDN extension associated with the call).

VDN Override

VDN Override allows information about a *subsequent* VDN to which a call is routed to be used instead of the information about the *original* VDN. This information includes:

- The name of the subsequent VDN
- Skill VDN (used for vector commands where a skill group can be specified)
- VDN of Origin Announcement
- Tenant number
- VDN Timed ACW Interval
- VDN Return Destination with the condition that once the call leaves vector processing for the first time, the Return Destination never changes. For more information, see [Appendix C: Considerations for the vectoring features](#) on page 557.
- BSR Application
- BSR Available Agent Strategy

Note:

Throughout this document the “active” VDN is the active called VDN as modified by VDN Override rules. The “latest” VDN is the most recent VDN to which the call was routed.

VDN Override can be used in conjunction with a vector that prompts the caller for a particular service. For example, a call is placed to an automobile dealer. Like most such dealers, this one consists of several departments, including “Sales” and “Parts.” Assume that the caller wants to talk to someone in “Sales.” In this case, the call comes into the “Main” vector (whose VDN name is “Main”) and is eventually routed to the “Sales” vector (whose VDN name is “Sales”). If VDN Override is assigned to the “Main” VDN, the “Sales” VDN name appears on the agent’s telephone display when the call is finally connected to the agent.

Note:

When the Variables in Vectors feature is enabled, VDN override settings may affect the VDN extension number value that is assigned to a vdn variable type. For more information, see [vdn variables](#) on page 145.

The following table shows how the “active” VDN extension is controlled when a call is routed through a series of VDNs by **route-to number** vector steps. The “active” VDN extension is determined by the setting of the Allow VDN Override? field for the previous VDN to which the call was routed according to the following rules:

- If the previous VDN has the Allow VDN Override? field set to y, then the “active” VDN extension is overridden with the extension of the *current* VDN.
- If the previous VDN has the Allow VDN Override? field set to n, then the current “active” VDN extension remains the same as for the *previous* VDN.

Example: VDN Override control of “active” VDN extension for all calls routed to multiple VDNs by vector processing.

Setting specified for Allow VDN Override feature								
VDN 1	y	n	n	n	y	y	y	n
VDN 2	y	y	n	n	n	n	y	y
VDN 3	y	y	y	n	y	n	n	n
Active VDN extension displayed at agent console								
VDN 2	2	1	1	1	2	2	2	1
VDN 3	3	3	1	1	2	2	3	3

Note:

With Expert Agent Selection (EAS) enabled for the system, if the Allow VDN Override? field is set to y for the original VDN, the VDN Skills (defined on page 1 of the Vector Directory Number form) of the new VDN are used for vector commands where the skill group can be administered as "1st", "2nd", or "3rd". If the Allow VDN Override? field is set to n on the original VDN, the VDN Skills of the original VDN are used for such vector commands.

For Best Service Routing (BSR), if the Allow VDN Override? field is set to y for the original VDN, the settings for the BSR Application and Available Agent Strategy fields (defined on page 2 of the Vector Directory Number form) of the new VDN are used for BSR-related vector processing. If the Allow VDN Override? field is set to n for the original VDN, the settings for the BSR Application and Available Agent Strategy field settings of the original VDN are used for BSR-related vector processing.

VDN in a coverage path

A VDN can be assigned as the last point in a coverage path. Whenever a VDN is assigned as such, a call goes to coverage and can then be processed by Call Vectoring or Call Prompting if either is enabled. Accordingly, the Call Coverage treatment for the call is extended. Coverage can be sent to an external location or the type of coverage can be controlled by the caller.

VDN in a coverage path is used for a number of applications, including:

- Sending Direct Agent calls or personal calls to an agent in the EAS environment.
- Routing coverage calls off-premises using the **route-to** command.
- Serving as a coverage point for specific call operations. For example, sending calls to a secretary during the day and to AUDIX at night.

For more information, see [Option with the VDN as the coverage point](#) on page 124. For information about interactions, see *Administrator Guide for Avaya Communication Manager*, 555-233-506.

Redirect on No Answer to a VDN

The Redirection on No Answer (RONA) feature redirects a ringing ACD call after an administered number of rings. It prevents a call from ringing indefinitely at a terminal when an agent does not answer. When a call is redirected, the system puts the agent into AUX work so that the agent is no longer available to receive ACD calls. In the case of Auto-Available Splits, the system logs the agent out when a call is redirected.

A VDN can be administered as the destination of a RONA processed call. A call that is not answered can be redirected to a VDN to receive special treatment. Enter the number of the destination VDN for a RONA call in the Redirect to VDN field on the Hunt Group form. All calls that are redirected by RONA from that split are sent to the same administered VDN.

If no destination VDN is administered, but the number of rings for redirection is entered, the call redirects back to the split/skill.

Direct Agent calls that are not answered follow the agent's coverage path. If no coverage path is administered, calls are redirected to the VDN that is administered as the agent's first primary skill.

For more information, see the Redirection on No Answer section in *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784.

Service Observing VDNs

The Service Observing feature provides the option of being able to observe VDNs. With this option an observer selects a specific VDN and bridges onto calls (one call at a time) that have just started vector processing for that VDN. The observer hears all tones, announcements, music, and speech that the caller and the agent hear and say, including Call Prompting and caller dialing. Also, the observer hears VDN of Origin Announcements. Once the system makes an observing connection to a call in vector processing, it maintains the connection throughout the life of the call until the call is disconnected or until the observer hangs up. This is true even if the call is routed or transferred externally.

For more information about Service Observing VDNs, see the Service Observing section in *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784.

Vector control flow

The vector process starts at the first step in the vector and then proceeds sequentially through the vector unless a **goto** command is encountered. Any steps that are left blank are skipped, and the process automatically stops after the last step in the vector.

Call Vectoring fundamentals

The Call Vectoring “programming language” provides three types of “control flow that pass vector-processing control from one vector step to another. The types of control flow are described in the following list:

- Sequential flow passes vector-processing control from the current vector step to the following step. Most vector commands allow for a sequential flow through the vector.

Note:

Any vector command that fails automatically passes control to the following step.

- Unconditional branching unconditionally passes control from the current vector step to either a preceding or succeeding vector step or to another vector. For example, **goto step 6 if unconditionally**.
- Conditional branching conditionally passes control from the current vector step to either a preceding and/or succeeding vector step or to a different vector. This type of branching is based on the testing of threshold conditions. For example, **goto vector 29 if staffed-agents in split 6 < 1**.

Note:

Call Vectoring has an execution limit of 1000 steps. Once a call enters vector processing, a “loop counter” keeps track of the number of vector steps executed. If the loop counter exceeds 1000, a **stop** command is executed. However, when the **interflow-qpos** conditional is used, the execution limit is automatically increased to 3000 steps. This is because this conditional is designed to make rapid LAI loops practical.

Note:

An implicit wait of 0.2 seconds is provided after every seven vector steps if vector processing is not suspended during any one of these steps. For more information, see [Wait-time command](#) on page 543.

Termination versus stopping

When vector processing is terminated, the call leaves the vector. Vector termination can result from a number of events, such as when a call is:

- Ringing at an agent’s station
- Abandoned by the calling party
- Subject to a forced disconnect or a forced busy
- Successfully routed to an extension or to an off-premises number

The termination of vector processing differs from stopping, which is caused by the **stop** command or by the execution of the final step in the vector. Termination differs from stopping in the following ways:

- If a call is queued, termination removes the call from the queue.

- A **stop** command prevents the processing of new vector steps but leaves the call in queue and the calling party continues to receive feedback, such as ringback.
- If vector processing stops and the call is not queued, the call is dropped.

Programming capabilities

Call Vectoring commands perform various call-related functions, which include:

Providing call treatments

Audible feedback, including silence, ringback, system music, or an alternate audio or music source, or a busy tone can be provided to the caller. The caller can be provided with a recorded announcement to indicate that an agent is unavailable to answer the call or to provide other information or instructions. An Audix session can also be initiated.

Vector processing can be delayed for a specific number of seconds before the next vector step is executed. The call can also be disconnected, if necessary.

- Routing calls. Calls that are not immediately answered by an agent can be queued to one or more splits. A caller can also leave a recorded message if he or she chooses to do so. Finally, a call can be routed to a number programmed in the vector or to digits that are collected from the caller.
- Branching/programming. Branches can be made from one vector step to another such step or to another vector. This can be done unconditionally as well as conditionally. Conditional branching is done according to a number of conditions, for example, number of available agents in a split, number of calls in a split queue, the number of the phone the call is made from, and so forth. Finally, vector processing can be stopped when necessary.
- Collecting and acting on information. Optionally, touchtone digits can be collected and serve as the basis for further vector processing. For example, the caller can enter certain touchtone digits to reach a specific agent.
- Executing **VRU** scripts. Voice scripts on a VRU can be executed for the caller. Voice scripts provide the caller with information or instructions. The caller can often make an appropriate response to a voice script, for example, by entering touchtone digits.

Command summary

This section lists and describes the commands used by the Call Vectoring features. The list is meant to help familiarize the reader with these commands. The commands are also described in further detail in [Call Vectoring commands](#) on page 467.

Call Vectoring fundamentals

- Adjunct Routing is available only when the CallVisor ASAI capabilities and Basic Call Vectoring are enabled on the switch. The command causes a message to be sent to an ASAI adjunct requesting routing instructions.
- Announcement provides the caller with a recorded announcement.
- Busy gives the caller a busy signal and causes termination of vector processing.
- Check conditionally checks the status of a split or skill for possible termination of the call to that resource. The command either connects to an agent in the split/skill or puts the call into its queue at the specified queuing priority level if the condition specified as part of the command is met. A call can be queued to up to three different splits/skills simultaneously.
- Collect Digits collects up to 16 digits that are either entered by the caller during vector processing, sent by the network, or received from an adjunct. An optional announcement can be played first when the digits are being collected directly from the caller.
- Consider Location obtains the Expected Wait Time (EWT) and agent data needed to identify the best remote location in multi-site Best Service Routing applications. One **consider** step must be written for each location that you want to check.
- Consider Split/Skill obtains the EWT and agent data needed to identify the best local split or skill in single-site Best Service Routing vectors. One **consider** step must be written for each split/skill that you want to check.
- Converse-on Split integrates Voice Response Units (VRUs) with the switch. Specifically, the command allows voice response scripts to be executed while the call remains in queue, and it allows the passing of data between the switch and the VRU.
- Disconnect ends treatment of a call and removes the call from the switch. The command also allows the optional assignment of an announcement that will play immediately before the disconnect.
- Goto Step is a branching step that allows conditional or unconditional movement to a preceding or succeeding step in the vector. Conditional branching is determined by a number of factors. For example: the number of calls that are queued in the split, the number of staffed agents who are in the split, if the call arrives at a time of day that is in a holiday table, and so on.
- Goto Vector is a branching step that allows conditional or unconditional movement to another vector. Conditional branching is determined by a number of factors. For example: the number of calls that are queued in the split, the number of staffed agents who are in the split, if the call arrives at a time of day that is in a holiday table, and so on.
- Messaging Split allows the caller to leave a message for a specified extension or the VDN extension.
- Queue-to unconditionally queues a call to a split or skill and assigns a queuing priority level to the call in case no agents are available. A call that is sent with this command either connects to an agent in the split or skill or enters its queue.

- Queue-to attnd-group queues a call to a specified attendant group and is available only for attendant vectors. A call that is sent with this command either connects to an available agent within the group or enters the queue if no agent is available.
- Queue-to attendant queues a call to a specific attendant and is available only for attendant vectors. The call only queues to the agent if the agent is a member of the TN associated with the call.
- Queue-to-hunt group queues a call to up to three hunt groups. A call that is sent with this command connects to an agent in the hunt group or enters the hunt group queue.
- Reply-best returns data to another switch in response to a status poll. **Reply-best** is only used in status poll vectors in multi-site Best Service Routing applications.
- Route-to Digits routes the call to the destination that is specified by a set of digits that are collected from the caller or VRU by the previous **collect digits** step. For more information, see [Appendix I: Operation details for the route-to command](#) on page 651.
- Route-to Number routes the call to the destination specified by the administered digit string. Form more information, see [Appendix I: Operation details for the route-to command](#) on page 651.
- Stop terminates the processing of any subsequent vector steps.
- Wait-Time is used to specify whether the caller hears ringback, system music, silence, or an alternate audio or music source while the call is waiting in queue. The command also delays the processing of the next vector step by the specified delay time that is included in the command's syntax.

Condition testing within the commands

As was mentioned in the previous section, a number of the Call Vectoring commands are implemented according to a tested condition that comprises part of the command. In other words. If the condition that is expressed in the command is true, then the command action is executed. If the condition that is expressed in the command is false, then the command action is not implemented, and the next vector step is processed.

For more information about the syntax of each condition, see [Appendix A: Call Vectoring commands](#) on page 467.

The following list provides a set of conditions that might comprise the conditional portion of a Call Vectoring command:

Note:

The available set of conditions is dependent upon the optional features that are enabled. For more information, see [Appendix N: Feature Availability](#) on page 707.

- The number of staffed agents in a split
- The number of available agents in a split
- The number of calls queued at a given priority to a split

Call Vectoring fundamentals

- The amount of time that the oldest call has been waiting in a split
- Whether or not a call receives special holiday processing
- The Average Speed of Answer for a split or a VDN
- The Expected Wait Time for a split or for a call that has entered vector processing
- A reduction in Expected Wait Time if a call is queued to a backup resource
- The number of calls in a queue that are eligible for interflow processing using **interflow q-pos**.
- The number of active calls that have been routed by a VDN
- The caller identity (ANI)
- The type of originating line (II-digits)
- The digits entered by the caller, sent in an ISDN message from the network (CINFO), or received from an ASAI or VRU adjunct
- The time-of-day and day of the week that the call is placed. The syntax for this condition can be illustrated as follows: **mon 8:01 to fri 17:00** means anytime between 8:01 a.m. Monday through 5:00 p.m. Friday, and **all 17:00 to all 8:00** means between 5:00 p.m. and 8:00 a.m. on any day of the week.

Depending on the condition, specific comparison operators and a threshold might be in effect. Examples of comparison operators are < (less than), > (greater than), = (equal to), <= (less than or equal to), >= (greater than or equal to), <> (not equal to), and "in" or "not-in". A threshold is a range of accepted numerical entries.

The chapters on the Call Vectoring features illustrate condition checking in more detail.

■ ■ ■ ■ ■ ■ Call Vectoring applications

This chapter provides example applications of the Call Vectoring feature.

List of example applications

Example applications and the primary feature that is illustrated are listed in the following table.

Example	Features used
Customer service center example on page 67	Basic Call Vectoring
Automated attendant example on page 68	Call Prompting
Data in/voice answer and data/message collection example on page 69	Call Prompting, Basic Call Vectoring
Distributed contact centers example on page 73	Look-Ahead Interflow, Basic Call Vectoring
Help desk example on page 75	Adjunct Routing, Call Prompting, Basic Call Vectoring
Insurance agency/service agency example on page 76	Basic Call Vectoring, Call Prompting, Rolling ASA, EWT, VDN Calls, and ANI Routing
Warranty service (with EAS) example on page 80	Basic Call Vectoring, EAS
Resort reservation service (with EAS) example on page 83	Basic Call Vectoring, Adjunct Routing, Call Prompting, EAS
Local attendant group access code on page 88	Attendant Vectoring
Incoming trunk calls to attendant group on page 88	Attendant Vectoring

Call Vectoring applications

Example	Features used
Incoming LDN calls on page 89	Attendant Vectoring
QSIG CAS example on page 89	Attendant Vectoring
Night station service example on page 91	Attendant Vectoring
Holiday Vectoring example on page 92	Holiday Vectoring
Network Call Redirection example on page 93	BSR multi-site, NCR
BSR using EWT and agent adjustments example on page 95	BSR multi-site
Dial by Name on page 99	Basic Call Vectoring, Call Prompting

Customer service center example

The example scenario involves a customer service center that is open weekdays from 8 a.m. until 5 p.m. The center provides two separate telephone numbers. One number is for regular customers, while the other number is for priority customers. The following vector examples show how calls to the customer service center are handled.

Example application - customer service center

```
VDN (extension=1021  name='Customer Serv'  vector=21)
Vector 21:
  1. goto vector 29 if time-of-day is all 17:00 to all 08:00
  2. goto vector 29 if time-of-day is fri 17:00 to mon 08:00
  3. goto step 10 if calls-queued in split 1 pri l > 10
  4. queue-to split 1 pri m
  5. wait-time 10 seconds hearing ringback
  6. announcement 3521
  7. wait-time 50 seconds hearing music
  8. announcement 3522
  9. goto step 7 if unconditionally
  10. busy

VDN (extension=1022  name='Priority Cust'  vector=22)
Vector 22:
  1. goto vector 29 if time-of-day is all 17:00 to all 08:00
  2. goto vector 29 if time-of-day is fri 17:00 to mon 08:00
  3. goto step 12 if calls-queued in split 1 pri h > 10
  4. queue-to split 1 pri h
  5. announcement 3521
  6. wait-time 10 seconds hearing music
  7. check split 2 pri h if oldest-call-wait < 20
  8. check split 3 pri h if oldest-call-wait < 20
  9. announcement 3522
  10. wait-time 60 seconds hearing music
  11. goto step 7 if unconditionally
  12. route-to number 0 with cov n if unconditionally

No VDN
Vector 29:
  1. announcement extension 3529
  2. wait-time 10 seconds hearing silence
  3. disconnect after announcement 3529
```

When a priority customer places a call to the correct number, vector 22 is accessed. The first two steps of this vector determine if the call arrives during nonbusiness hours. If the call arrives between 5:00 p.m. and 8:00 a.m. on any given day, step 1 routes the call to Vector 29. Step 2 does the same if the call arrives during the weekend, that is, between 5:00 p.m. Friday and 8:00 a.m. Monday. If vector 29 is accessed, the caller is given the appropriate announcement twice (steps 1 and 3) and is then disconnected (step 3).

If the call is placed during business hours, step 3 of vector 22 determines if the number of high-priority calls that are queued in the main split exceeds 10. If more than 10 calls are in

Call Vectoring applications

the queue, control is sent to step 12, which routes the call to the attendant. If less than 10 calls are in the queue, the call is queued to the main split (step 4). If the call is not answered immediately, an appropriate announcement is provided (step 5), followed by a wait period (step 6).

If the call is not answered after the wait time specified in step 6, steps 7 and 8 attempt to queue the call to a backup split (splits 2 and 3, respectively). The call is queued to either split if the oldest call in the split has been waiting fewer than 20 seconds.

Even if the call is queued to one of the backup splits, the call is passed to steps 9 through 11, which implement an announcement-wait cycle that continues until either an agent answers the call, or the caller abandons the call.

A call that is placed by a nonpriority customer is processed by vector 21. Vector 21 provides a treatment similar to that provided by vector 22, with the following exceptions:

- Backup splits are not queried for nonpriority calls
- Priority calls are assigned a higher priority in the queue
- Priority calls route to an operator when too many calls are queued, but nonpriority calls route to a busy signal.

Automated attendant example

This example scenario shows the use of Automated Attendant, which is one of the applications that can be supported by the Call Prompting feature. Automated Attendant allows the caller to enter the extension of the party that the caller wants to reach. Depending on the parameters established, the user can enter up to 16 digits from a touchtone telephone.

Automated Attendant is usually used by contact centers that do not have DID trunks and whose callers know the extension of the people they are calling. Because it reduces the need for “live attendants,” Automated Attendant reduces contact center costs.

The following example shows an example of a vector that implements Automated Attendant.

Example application - automated attendant

```
1. wait-time 0 seconds hearing ringback
2. collect 5 digits after announcement 30001
   (''You have reached Ridel Publications in Greenbrook.
   Please dial a 5-digit extension or wait for the
   attendant.'')
3. route-to digits with coverage y
4. route-to number 0 with cov n if unconditionally
5. stop
```

Step 1 of this vector contains the **wait-time** command, which is placed before the **collect digits** command in step 2 to provide the caller with ringback in the event that

a TTR is not immediately available. A TTR must be connected in order for the **collect digits** command to take effect. Once a TTR is connected, the caller is prompted to enter the destination extension of the party he or she wants to reach (step 2). The **collect digits** command in step 2 collects the digits. Thereafter, the **route-to digits** command in step 3 attempts to route the call to the destination.

If the **route-to digits** command fails because the caller fails to enter any digits, or because the digits entered do not comprise a valid extension, then the **route-to number** command in step 4 routes the call to the attendant. However, as long as the destination is a valid extension, the **route-to digits** command succeeds, coverage applies, and vector processing terminates. Note that even if the destination is busy, vector processing terminates because coverage call processing takes effect.

Data in/voice answer and data/message collection example

This example involves a mutual fund company that is open 24 hours a day, 7 days a week. All incoming calls are directed to a single VDN extension that maps to a main vector. The main vector presents a menu of options to the calling party, and the vector also uses Call Prompting to determine the desired service. Three services are offered:

- New accounts enables the customer to open a new account.
- Account inquiries enables the customer to make inquiries concerning his or her account.
- Net asset values enables the customer to hear information concerning the net asset values of the company's funds.

If the caller selects "account inquiries," he or she is prompted to input his or her account number before being answered by an agent. The agent can use the CALLR-INFO button to display this number.

Note:

If the agent has a two-line display telephone, the account number is automatically displayed on the second line. Some supported display telephones include 6416, 6424, 8410, 8434 and CallMaster set.

This example uses three other applications that can be supported by the Call Prompting feature:

- Data In/Voice Answer (DIVA) allows a caller to receive information on a topic that he selects at the prompt. The caller selects the desired topic by entering the appropriate digits.
- Data Collection provides a method of collecting digits from a caller. The requested digits comprise an official number of some sort. For example, a Social Security Number, and they help the system process the call more efficiently.
- Message Collection allows the caller to leave a recorded message instead of waiting for the call to be answered.

The four vectors shown below illustrate how the mutual fund company handles telephone calls. Typically, the vector should be programmed to check if queue slots are available.

Example application - mutual fund company

```
VDN (extension=1030 name="ABC Inv" vector=10 display override="y")  
Vector 10
```

1. wait-time 0 secs hearing ringback
2. collect 1 digits after announcement 3531
(''Thank you for calling ABC Investments. If
you wish to open a new account, please dial 1. If
you wish to make an account inquiry, please dial 2.
If you wish to know the current net asset values of
our funds, please dial 3.'')
3. route-to number 1031 with cov y if digit = 1
4. route-to number 1032 with cov y if digit = 2
5. route-to number 1033 with cov y if digit = 3
6. route-to number 0 with cov n if unconditionally
7. disconnect after announcement none

```
VDN (extension=1031 name="New Account" vector=11)  
Vector 11
```

1. goto step 5 if calls-queued in split 1 > 19
2. queue-to split 1 pri t
3. announcement 3535
4. wait-time 10 secs hearing music
5. collect 1 digits after announcement 4020
(''We're sorry. All of our operators are busy at
the moment. If you'd like to leave your name and
telephone number so that we can get back to you,
dial 1.'')
6. goto step 10 if digit = 1
7. announcement 3537
8. wait time 50 secs hearing music
9. goto step 6 if unconditionally
10. messaging split 5 for extension 4000
11. announcement 3538 ("We're sorry, we cannot take
your message at this time. You may continue to hold, or
you can call back later.'')
12. goto step 4 if unconditionally

DIVA and data/message collection vector examples (continued)

```
VDN (extension=1032 name="Account Inq" vector=12)
Vector 12:
  1. wait-time 0 secs hearing ringback
  2. collect 6 digits after announcement 3533
    ("Please enter your 6-digit account number.")
  3. goto step 7 if calls-queued in split 1 > 19
  4. queue-to split 1 pri m
  5. announcement 3535
  6. wait-time 60 secs hearing music
  7. collect 1 digits after announcement 4020
    ("We're sorry. All of our operators are busy at
    the moment. If you'd like to leave your name and
    telephone number so that we can get back to you,
    dial 1.")
  8. goto step 12 if digit = 1
  9. announcement 3537
 10. wait time 50 secs hearing music
 11. goto step 8 if unconditionally
 12. messaging split 5 for extension 4000
 13. announcement 3538 ("We're sorry, we cannot take
    your message at this time. You may continue to hold, or
    you can call back later.")
 14. goto step 4 if unconditionally

VDN (extension=1033 Name="Net Asset Val" Vector=13)
Vector 13:
  1. disconnect after announcement 3534
    (''The net asset values of our funds at the close
    of the market on Wednesday, May 15 were as follows:
    ABC Growth.....33.21.....up 33 cents; ABC
    High Yield.....11.48.....down 3 cents.'')
```

When the call is placed, vector processing begins in vector 10, which is the main vector. Step 1 of the vector contains the **wait-time** command, which is placed before the **collect digits** command in step 2 to provide the caller with feedback in the event that a tone detector is not immediately available. Once a tone detector is connected, the **collect digits** command provides an announcement that requests the caller to enter 1, 2, or 3, depending upon the service desired. If the caller enters a digit other than 1, 2, or 3 mentioned, or if the caller fails to enter any digits within 10 seconds, then the command fails and the call is routed to the attendant (step 6). If the caller enters 1, 2, or 3 within 10 seconds, then the call is routed to the vector specified in the appropriate **route-to number** command, which appears in steps 3, 4, and 5.

For instance, assume that, when prompted, the caller enters 3 because he or she wants to learn about the net asset values of the company's funds. In such a case, the **route-to number** commands in step 3 and in step 4 fail, because in each case, the digit that is tested for in the condition portion of the command is not 3. However, the **route-to number** command in step 5 succeeds because the digit that is tested for matches the one

entered by the caller. Accordingly, the call is routed to VDN extension 1033, and vector processing continues in vector 13.

The **announcement** command in step 1 of vector 13 provides the caller with the information on net asset values and then disconnects the call.

The process just described, whereby the caller receives information as a result of making a request at the prompt, is an example of the Data In/Voice Answer (DIVA) application.

Returning to the main vector, suppose that another caller wants to make an inquiry into his or her account, and the caller enters 2 when prompted. In such a case, step 3 fails, but step 4 succeeds. Accordingly, the call is routed to VDN extension 1032, and vector processing continues in vector 12.

The **collect digits** command in step 2 of vector 12 first requests the caller to enter his or her 6-digit account number. The command then collects the digits that are entered by the caller. Whether or not the caller correctly enters the digits, the **queue-to split** command in step 4 queues the call. If an agent does not immediately answer the call, the standard announcement is provided in step 5 and, if necessary, a delay is provided in step 6. The announcement in step 7 provides the caller with the option of leaving a message instead of having his or her call wait in queue. The caller is instructed to enter 1 if he or she wants to leave a recorded message. If the caller does not enter 1, the **goto step** command in step 8 fails, and an announcement-wait cycle is implemented by steps 9, 10, and 11 until the call is answered or abandoned. If the caller does enter 1 within 10 seconds, step 8 passes control to step 12. The **messaging split** command in step 12 attempts to connect the caller to an AUDIX or Message Center split so that the caller can leave a message. If the connection is made, the caller first hears ringback and can then leave a message. If the connection is not made, the step is unsuccessful, and step 13 provides an announcement that indicates that a connection could not be made. Thereafter, the **goto step** command in step 14 sends call control back to step 6, which leads the caller back into the steps to leave a message.

The process that was just described, whereby the caller, when prompted, enters digits that comprise an official number (an account number, in this case), is an example of the Data Collection application. If the agent has a CALLR-INFO button or a two-line display, the agent can see the digits that are entered by the caller. As a result, the agent need not request the account number from the caller.

Finally, suppose that a third caller wants to open an account and that he or she enters 1 when prompted in the main vector. In this case, step 3 of the main vector is successful. Accordingly, the call is routed to VDN extension 1031, and vector processing continues in vector 11.

In step 2 of vector 11, the call is queued to the main split. Thereafter, if necessary, step 3 provides the appropriate announcement, and step 4 provides a delay period. The announcement in step 5 provides the caller with the option of leaving a recorded message instead of having his or her call wait in queue. This is an example of the Message Collection application. The caller is instructed to enter 1 if he or she wants to leave a recorded message. If the caller does not enter 1, the **goto step** command in step 6 fails, and an announcement-wait cycle is implemented by steps 7, 8, and 9 until the call is answered or abandoned. If the caller does enter 1 within 10 seconds, step 6 passes

control to step 10. The **messaging split** command in step 10 attempts to connect the caller to an AUDIX or Message Center split so that the caller can leave a message. If the connection is made, the caller first hears ringback and can then leave a message. If the connection is not made, the step is unsuccessful, and step 11 provides an announcement that indicates that a connection could not be made. Thereafter, the **goto step** command in step 12 sends call control back to step 4, which leads the caller back into the steps to leave a message.

Distributed contact centers example

This example involves two customer contact centers located in New York and Denver. Calls to the New York contact center are queued to up to two splits. If calls remain unanswered for a period of time, a Look-Ahead Interflow (LAI) call attempt is made to the Denver contact center. If there are 10 or fewer queued calls in Denver, the LAI call attempt is accepted and serviced there. Otherwise, the call is denied and remains in queue in New York until an agent becomes available. The two vectors shown below illustrate the process.

Note:

For other examples of LAI, see [Look-Ahead Interflow \(LAI\)](#) on page 247. To learn how to integrate distributed contact centers using multi-site Best Service Routing, see [Best Service Routing \(BSR\)](#) on page 271.

Example application - distributed contact centers

```
SENDING SWITCH:
VDN (extension=1080 name='New York Office' vector=80)
Vector 80:
  1. goto step 11 if calls-queued in split 1 pri m > 5
  2. queue-to split 1 pri m
  3. announcement 3580 ('All of our agents
    are busy. Please hold and you will be answered
    by the first available agent.')
  4. wait-time 6 seconds hearing music
  5. route-to number 913035661081 with cov n if unconditionally
  6. check split 2 pri m if calls-queued < 5
  7. wait-time 6 seconds hearing music
  8. announcement 3581 ('All of our agents
    are still busy. Please hold and you will be
    serviced by the first available agent.')
  9. wait-time 60 seconds hearing music
  10. goto step 5 if unconditionally
  11. busy
RECEIVING SWITCH:
VDN (extension=1081 Name='Denver Inflow' Vector=81)
Vector 81:
  1. goto step 7 if calls-queued in split 3 pri l > 10
  2. wait-time 0 seconds hearing music
  3. queue-to split 3 pri h
  4. announcement 3582 ('We apologize
    for the delay. Please hold and you will be
    serviced by the first available agent.')
  5. wait-time 60 seconds hearing music
  6. goto step 5 if unconditionally
  7. disconnect after announcement none
```

In this example, vector 80 is on the sending switch from a contact center in New York, while vector 81 is on the receiving switch at a contact center in Denver.

In the sending switch, the call is queued to split 1 at a medium priority (step 2) if the condition in step 1 is met. If the condition is not met, the call is routed to busy in step 11.

If the call is queued but not immediately answered, an announcement (step 3) and music (step 4) are provided. If the call is still not answered at this point, step 5 places a LAI call attempt to the receiving switch, on which vector 81 resides.

Step 1 in the receiving switch determines whether the call can be serviced in Denver. If the number of calls queued at any priority in split 3 is greater than 10, vector 81 cannot service the call. In such a case, control is passed to step 7, which rejects the Look-Ahead Interflow call attempt. However, if the test in step 1 succeeds, the call is queued by the receiving switch in split 3 at a high priority (step 3) and the LAI call attempt is accepted. Accordingly, the call is removed from the main split queue in New York, and control is passed to the Denver switch, where vector processing continues at step 4.

If the receiving switch does not accept the LAI call attempt, control is passed to step 6 of the sending vector. This step then queues the call to split 2 at a medium priority, provided

that there are fewer than five calls queued in that split. Thereafter, the customary announcement-wait sequence is implemented (steps 7, 8, and 9). Finally, if necessary, step 10 sends control back to step 5, which makes another LAI attempt, and the cycle is repeated.

Note:

To avoid confusing the caller, the treatment provided at the receiving switch should be consistent with the treatment that is provided at the sending switch. In the distributed contact centers example, note that the caller hears music (and never ringback or silence) at the sending switch. Accordingly, music should be (and, in our example, is) featured at the receiving switch.

Help desk example

This example involves a help desk at a computer firm. The help desk is configured into three groups. One group handles hardware problems, the second group handles software problems, and the third group handles general problems. For this application, the information that is provided in the ASAI Route request, that is, calling party number, called number, collected digits, is used to route the call to the most appropriate agent. Such an agent might be the one who last serviced the caller, or it might be the next available agent for the specific caller. Also, based on switch traffic conditions and the caller-entered digit, the call can be diverted to other destinations, such as other ACD splits, announcements, or switches.

The following vector shows the help desk application.

Example application - help desk

```
1. collect 1 digits after announcement 4704
   (''Welcome to the TidyBits Computer Corporation help desk.
   If you have a question about hardware, please dial 1.
   If you have a question about software, please dial 2.
   If you have a general question, please dial 3.'')
2. adjunct routing link 2400
3. wait-time 4 seconds hearing ringback
4. route-to number 3710 with cov y if digit = 1
5. route-to number 3720 with cov y if digit = 2
6. route-to number 3730 with cov y if digit = 3
7. route-to number 0 with cov n if unconditionally
8. stop
```

In step 1 of this vector, the caller is instructed to enter 1, 2, or 3, depending upon the service (hardware, software, general) that he or she desires. Thereafter, the **adjunct routing** command in step 2 instructs the switch to send a Route request to the adjunct processor, which is connected to extension 2400. The Route request contains the called party number, the calling party number, and the digit that is collected in step 1, along with the other pertinent information for adjunct routing (see [Adjunct \(ASAI\) Routing](#) on

page 207). If 1, 2, or 3 is not entered, and if the adjunct does not return a route, the call is eventually routed to the attendant (step 7).

If the **adjunct routing** command in step 2 succeeds, the adjunct uses the information included in the Route request to select the appropriate route for the call. Let's assume the caller enters 1 and the **adjunct routing** command succeeds. In such a case, if the caller is judged to be a "prime" hardware customer, the call might be routed to one of a handful of specific agents who are assigned to handle such customers. On the other hand, if the caller is judged to be a "casual" hardware customer, the call might be routed to a larger group of ACD agents before it is queued, or to an appropriate announcement.

Finally, assume that the caller enters 1 and that the **adjunct routing** command fails. In such a case, the call is routed by the **route-to number** command in step 4, probably to a vector that queues the call or provides an appropriate announcement.

Insurance agency/service agency example

This example involves an insurance company contact center. It handles calls from independent field agents, policy holders with claims, policy holders needing customer service, and several general service agency type 800 number client accounts. Each different type of call has its own 800 number that routes the calls to associated VDNs.

The following list describes the contact center requirements.

- The independent field agents require fast service. They call the company to find out the latest rates for specific clients, to set up policies, to make adjustments, and so on. Often their clients are waiting as they call. Therefore the insurance company wants to maintain an Average Speed of Answer (rolling-ASA) of 30 seconds or less for field agent calls. These are the most important calls and are given high priority in queues.
- The calls to claims must be separated by area code. The claims agents receive different training based on the area of the country for the claim. A particular group of agents can be given training for more than one area code. Therefore, area codes do not need to be tested individually and can be grouped in vector routing tables.
- The insurance company wants to give customer service callers an announcement indicating how long that they can expect to wait for service.
- The insurance agency is also selling spare contact center capacity to client accounts. The account contracts are provided on the basis that only so many calls to a particular account are accepted at any given time.

In this example, rolling ASA Routing is used to maintain the rolling ASA objective of 30 seconds or less for field agent calls. ANI Routing is used to partition calls based on area code and route the calls to the appropriate claims agents. EWT Routing is used to notify customer service callers of their expected wait time if it is longer than 60 seconds. VDN Calls Routing is used to regulate the number of calls to service agency clients.

The following table shows the VDNs and vectors that are associated with each type of call.

VDN table for insurance agency or service agency example

Type of service	VDN number	Vector number
Field Agents	1001	1
Claims	1002	2
Customer Service	1003	3
Client 1	1004	4
Client 2	1005	5

Note:

To more clearly demonstrate the features described in this example, the sample vectors do not include tests for unstaffed or full queues, out-of-hours operation and so forth.

An example of a vector that could be used to maintain a rolling ASA of 30 seconds for field agent calls is shown in the following figure.

Field agent vector example

Step 1 queues the call to the main split. If the main split is currently answering calls within the target time of 30 seconds, step 2 bypasses all of the backup splits and goes directly to the announcement in step 6. The assumption is that the call will be handled by split 10 within the time constraints. However, if the call is not answered by the time that vector processing reaches step 8, the backup splits are checked.

If the rolling ASA for the main split is greater than 30 seconds, steps 3, 4, and 5 check backup splits. The call is queued to any of these splits that have a rolling ASA of 30 seconds or less. If the call still is not answered by the time vector processing reaches step 8, then the backup splits are checked again.

Call Vectoring applications

The following vector example could be used to route claims calls by area code.

Claims vector example

```
VDN 1002 -- Claims Calls

1. goto step 10 if ani = none
2. goto vector 21 if ani = 201+
3. goto vector 22 if ani = 212+
4. goto vector 23 if ani in table 1
5. goto vector 24 if ani in table 2
6. goto vector 25 if ani in table 3
7. goto vector 26 if ani in table 4
8. goto vector 27 if ani in table 5
9. goto vector 30 if unconditionally
10. wait-time 0 seconds hearing ringback
11. collect 3 digits after announcement 10001
    ("Please dial your area code")
12. goto vector 30 if digits = none
13. goto vector 21 if digits = 201+
14. goto vector 22 if digits = 212+
15. goto vector 23 if digits in table 1
16. goto vector 24 if digits in table 2
17. goto vector 25 if digits in table 3
18. goto vector 26 if digits in table 4
19. goto vector 27 if digits in table 5
20. goto vector 30 if unconditionally
```

Each vector routing table referenced in the example shown above contains a list of area codes with the "+" wildcard. Each list of area codes is handled by a specific group of agents. Vectors 21 through 27 queue calls to the appropriate group of agents. Vector 30 provides a live agent to screen calls that have area codes that are not listed in any table or vector step. It also provides access to an agent when ANI is not available and the caller did not enter an area code when prompted.

The following vector example notifies customer service callers of their expected wait time unless they will not have long to wait.

Customer service vector example

VDN 1003 -- Customer Service Calls

1. goto step 10 if expected-wait for split 32 pri l > 600
2. queue-to split 32 pri l
3. wait-time 20 seconds hearing ringback
4. goto step 8 if expected-wait for call > 40
5. announcement 1100
6. wait-time 40 seconds hearing music
7. goto step 5 if unconditionally
8. converse-on split 80 pri l passing wait and none
9. goto step 5 if unconditionally
10. disconnect after announcement 1400

In step 1, callers who would wait more than 10 minutes are routed to a “call back later announcement.” Step 4 routes callers to a VRU to be given the expected wait time announcement while they hold their place in the queue.

The following vector examples can be used to regulate the number of calls to service agency clients. In this example, Client 1 has contracted for 100 simultaneous calls while client 2 has contracted for only 50 simultaneous calls.

Service Agency Clients Vectors examples

VDN 1004-- Client 1 Calls

1. goto step 3 if counted-calls to vdn 1004 <= 100
2. busy
3. queue-to split 60 pri l
4. wait-time 20 seconds hearing ringback
5. announcement 12000
6. wait-time 60 seconds hearing music
7. goto step 5 unconditionally

VDN 1005 -- Client 2 Calls

1. goto step 3 if counted-calls to vdn 1005 <= 50
2. busy
3. queue-to split 60 pri l
4. wait-time 20 seconds hearing ringback
5. announcement 12000
6. wait-time 60 seconds hearing music
7. goto step 5 unconditionally

In both of the example vectors shown above, the first step routes calls to queue if the number of contracted calls is not exceeded. Otherwise callers receive a busy signal.

Warranty service (with EAS) example

This example involves a major appliance company that offers one year warranties and extended warranties on its major appliances, such as dishwashers, refrigerators, washers, and dryers. The warranties are printed in English and Spanish to accommodate customers who speak and understand these languages. Naturally, callers need to speak with someone who is familiar with the appliances they have bought and who speaks the appropriate language. Accordingly, 800 numbers are provided for calling both English-speaking agents and Spanish-speaking agents. Bilingual agents with Spanish-speaking skills are hired so that they can back up the groups of English-speaking agents. Agents are trained first on all appliance models of a certain type and then on all appliance models for a room, such as the kitchen, the laundry room, and so forth.

The skills shown in the following table are required for the warranty service contact center:

Skill table for a warranty service contact center

Appliance type	English skill number	Spanish skill number
Kitchen appliances	10	20
Dishwashers	11	21
Refrigerators	12	22
Laundry appliances	30	40
Washers	31	41
Dryers	32	42
Supervisors		100

The VDN Skill Preferences are set up as shown in the following table.

VDN skill table for the warranty service contact center

VDN skill preference	Appliance	VDN	First	Second	Third
English	Dishwasher	1100	11	10	20
	Refrigerator	1101	12	10	20
	Washer	1102	31	30	40
	Dryer	1103	32	30	40
Spanish	Dishwasher	1200	21	20	--
	Refrigerator	1201	22	20	--
	Washer	1203	41	40	--
	Dryer	1204	42	40	--

The agent skills are set up as shown in the following table.

Agent skills for the warranty service contact center

Agent	Skill level 1		Skill level 2	
Kim	42	40	41	30
Michelle	100	--	--	--
Beth	31	--	--	--
Mike	32	--	30	--

Once skills are assigned to VDNs and to agents, calls are directed to the appropriate vector.

The goal of the warranty service contact center is to answer 80% of the incoming calls within 20 seconds. Accordingly, if a call that is directed to a vector is not answered by the time the announcement finishes, a second group of agents is viewed, thus enlarging the agent pool. If the call is not answered within the following 10 seconds, a third group of agents is viewed.


Since the contact center has only a few bilingual agents, the center's management wants to reserve these agents for Spanish-speaking callers. This can be done by giving Spanish-speaking callers a higher priority in the vector or by assigning a higher skill level to Spanish skills. Also, if a Spanish-speaking caller waits more than 30 seconds for service, a supervisor of the Spanish-speaking skills takes the calls.

Call Vectoring applications

[Warranty service contact center \(part 1\)](#) and [Warranty service contact center \(part 2\)](#) show the setup for the warranty service call service. Specifically, the figures show the vectors and call flows for callers with a broken washer or dryer who need service. Separate vectors are used to provide an announcement in Spanish and in English (see step 2). The same two vectors can be used for callers who need service for broken dishwashers and refrigerators.

The following figure shows how the call comes into the network and is then directed to the appropriate VDN, which in turn points to the appropriate vector. For each VDN, the corresponding VDN skills are indicated.

Warranty service contact center (part 1)

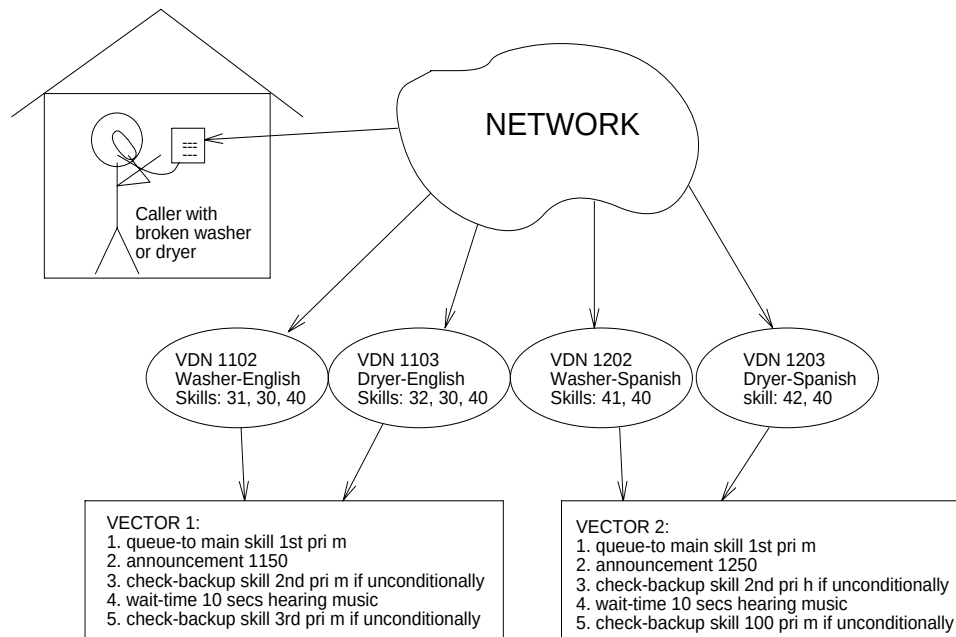


The next figure shows how the vector-processed call is directed to the appropriate call queue. The figure also shows how the call is directed to the appropriate agent or agents. The agent skills are indicated below each agent's name. Dashed lines indicate backup or secondary skills.

Note:

Only a small sample of agents is shown in the example figure.

Warranty service contact center (part 2)

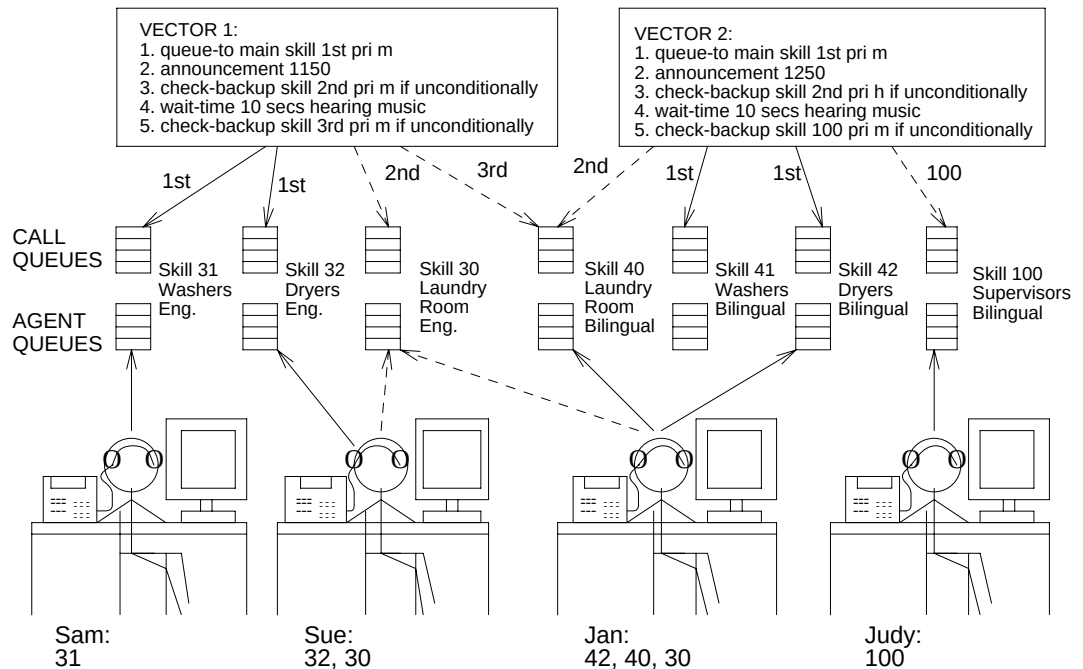

Assume that a Spanish-speaking caller has a broken dryer and decides to call the warranty service contact center. The caller dials the appropriate number. The call then enters the switch and is directed to VDN 1203, which points to Vector 2. As illustrated earlier, VDN skill preferences 42 (dryers) and 40 (laundry appliances) are administered as the 1st and 2nd skill preferences, respectively, for VDN 1203.

Once vector processing starts, the **queue-to skill** command in step 1 of Vector 2 queues the call to the skill group corresponding to the first VDN skill (42-Dryers Bilingual). If an agent with skill 42 (Jan, for example) is available, this agent answers the call. If such an agent is not available, the appropriate delay announcement in step 2 is played. Next, the **check skill** command in step 3 attempts to queue the call to the skill group corresponding to the 2nd VDN skill (40-Laundry Appliances Bilingual). If an agent with skill 40 is available (Jan, for example), that particular agent answers the call. Otherwise, a wait period is provided in step 4, and the **check skill** command in step 5 checks the "specific" skill (100-Supervisors Bilingual) for available agents.

Resort reservation service (with EAS) example

This example involves a resort company that places a variety of advertisements in magazines for information on a particular resort or state. Callers respond to these advertisements dial one of several numbers provided in the advertisement. A contact center makes the reservations for the resort company. To satisfy the request of many callers to the service, an effort is made to have callers connected to an agent who has visited the resort they are interested in visiting. Also, the resort company has determined that it is easier to sell additional sightseeing packages if the agent has a regional accent.

Placing the reservation

To respond to an advertisement, the caller can dial a number that directly routes him or her to a VDN for that state’s resorts. As an alternative, the caller can dial the general number for the resort chain and be serviced using the Call Prompting feature. The following sections discuss these methods.

Specific number dialing


The contact center is set up in such a way that a VDN with an accompanying set of VDN Skill Preferences is assigned to each state that has a resort. For example, the following table shows how Skill Preferences are assigned to Texas VDN 3222.

VDN 3222 skill preferences assignments for the resort reservation service

Texas VDN 3222 skill preferences		
Skill preference	Skill number	Agent skill
1st:	30	Agent who has a Texas accent and has visited resorts in Texas
2nd:	31	Agent who has visited resorts in Texas
3rd:	130	Any agent who can take a reservation

The following figure shows how a call to VDN 3222 can be processed by Call Vectoring.

Process involving specific number dialing

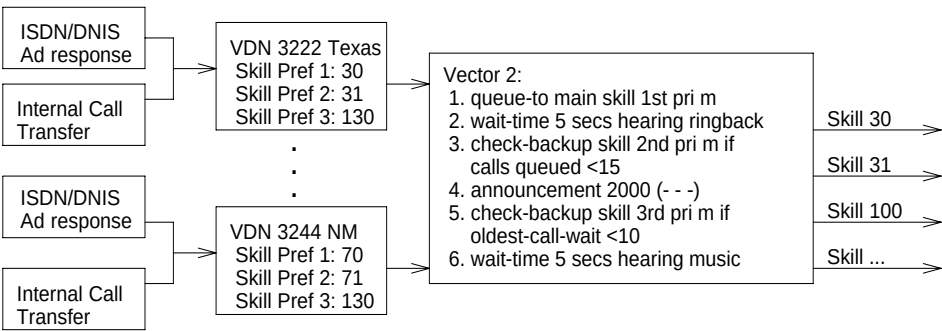

For this process, a single VDN for each state is assigned to Vector 2. Accordingly, the figure shown above shows the VDN and the associated VDN skills for two states, Texas and New Mexico.

Assume that a caller wants information on resorts in Texas and dials the appropriate number, for example, 615-3222. In this case, the call enters the switch and is directed to VDN 3222, which points to Vector 2.


Once vector processing starts, the **queue-to skill** command in step 1 queues the call to the skill group that corresponds to the 1st VDN skill (30-Agent with a Texas accent who has visited resorts in Texas). If an agent with skill 30 is available, this agent answers the call. If such an agent is not available, the **check skill** command in step 3 attempts to queue the call according to the stated conditions (if calls-queued < 15) to the skill group that corresponds to the 2nd VDN skill (31-Agent who has visited resorts in Texas). If step 3 fails, the **check skill** command in step 5 attempts to queue the call based on the stated conditions (if the oldest-call waiting < 10) to the skill group that corresponds to the 3rd VDN skill (100-Any agent who can take a reservation).

General number dialing

This option allows the caller to dial the general number provided, for example, 615-3111. The caller is then serviced in part using the Call Prompting feature.

The following figure shows how a call to VDN 3111 can be processed using Call Vectoring.

Figure 0-1: Process involving general number dialing

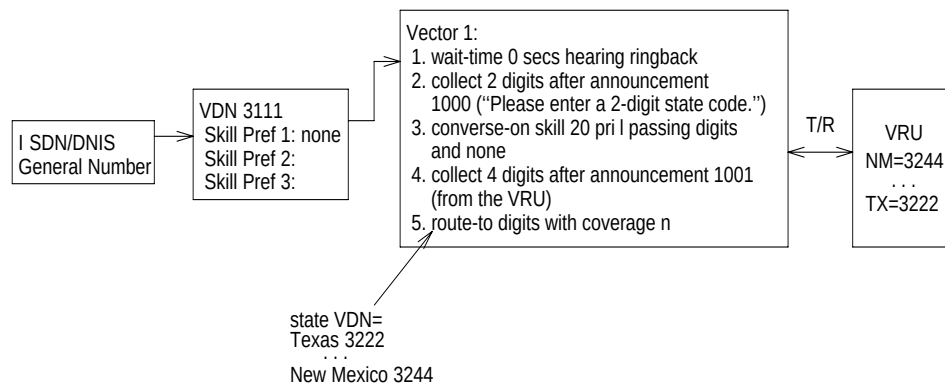

After the number is dialed, the call is directed to VDN 3111, which points to Vector 1. Note there are no skill preferences assigned to VDN 3111. Also, VDN 3111 is the only VDN that is administered to point to Vector 1. Therefore, this VDN is used for calls from all states.

The **collect digits** command in step 2 of the previous vector first requests the caller to enter the appropriate 2-digit state code and then collects the digits. Assume that the caller enters the correct code for Texas, which is "05." In this case, the **converse-on skill** command in step 3 delivers the call to the converse skill if there is a queue for the skill and the queue is not full, or if a VRU port is available.

For more information about the **converse-on** command, see [Basic Call Vectoring](#) on page 109.


When the VRU port responds, the step then outputs the state code "05" to the VRU using the **passing digits** parameter that is included in the command. Once the VRU receives this state code, the VRU in turn outputs the Texas VDN (3222) to the switch. Thereafter, the **collect digits** command in step 4 collects the digits that comprise this VDN. Finally, the **route-to digits** command in step 5 routes the call to Texas VDN

3222, which points to Vector 2. This process is discussed in the [General number dialing](#) section.

Call-back provisions

After a caller makes a reservation for a resort site, the caller is given a call-back number. Such a number is helpful if the caller needs more information or wants to check on some arrangement that was previously made. The following figure shows one approach for enabling call-back provisions.

Example 8: Call-back provisions

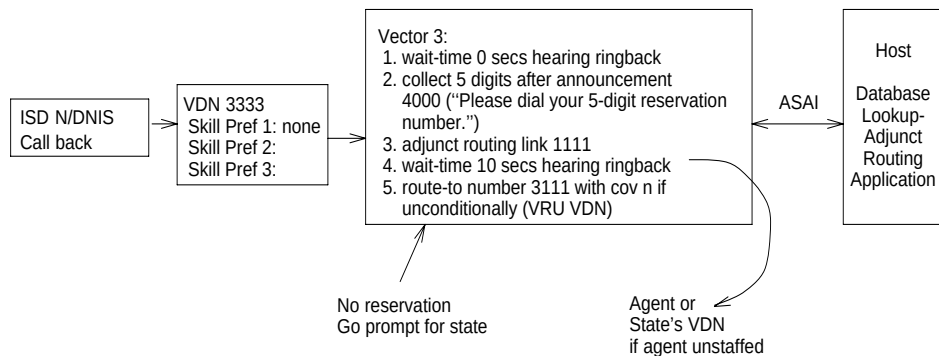

After the number is dialed, the call is directed to VDN 3333, which points to Vector 3. Note that there are no skill Preferences assigned to VDN 3333. Also, VDN 3333 is the only VDN that is administered to point to Vector 3. Therefore, this VDN is used for calls from all states.

The **collect digits** command in step 2 of the previous vector first requests the caller to enter his or her 5-digit reservation number and then collects the digits. Once the digits are collected, the **adjunct routing** command (if successful) in step 3 causes the switch to send the collected digits (along with other information) to the host in the ASAI adjunct routing request. The host then uses these digits to perform a database lookup for the agent who made the reservation and the resort that corresponds to the reservation. If the agent is currently logged in, the call is automatically routed to the agent. Once this happens, information on the relevant reservation is displayed at the agent's data terminal, thus providing quicker and more personal service. If the agent is not logged in, the call is routed to step 5, where the **route to** command unconditionally routes the call to the VRU VDN 3111. This process is discussed in the [General number dialing](#) section.

Attendant routing example

The following example show how the Attendant Vectoring commands can be used to route calls in an attendant environment. For the attendant vectors, consider the following vectors and vector administration.

Note:

For the following vector examples, tenant partitioning is turned on:

Attendant Vectoring vectors

VDN 1999 vector 1	VDN 2999 vector 2	VDN 3999 vector 3
1. wait-time 0 secs hearing ringback 2. goto step 6 if time-of-day is all 12:00 to 13:00 3. queue-to attdd-group 4. goto step 7 if queue-fail 5. wait 999 secs hearing music 6. busy 7. route-to number 4000 with cov y if unconditionally 8. route-to number 93035381000 with cov y if unconditionally	1. wait-time 0 secs hearing ringback 2. queue-to attdd-group 3. goto step 6 if queue-fail 4. announcement 9000 5. wait 999 seconds hearing music 6. disconnect after announcement 9001 7. queue-to hunt-group 1 8. goto step10 if queue-fail 9.wait 999 secs hearing ringback 10. busy 11. route-to number 93035381000 with cov y if unconditionally	1. wait-time 0 secs hearing ringback 2. goto step 7 if time-of-day is all 12:00 to 13:00 3. queue-to attdd-group 4. goto step 7 if queue-fail 5. announcement 9000 6. wait 15 seconds hearing music 7. goto step 4 if unconditionally 8. queue-to attendant 6000 9. goto step 10 if queue-fail 10. wait 999 secs hearing ringback 11. route-to number 93035381000 with cov y if unconditionally

Vector administration

- All stations are assigned TN 1 which is associated with attendant group 1, VDN 1999, and music source 1.
- All trunk groups are assigned TN 2 which is associated with attendant group 1, VDN 2999, and music source 2.

Call Vectoring applications

- All VDNs are assigned TN 3 which is associated with attendant group 2, VDN 3999, and music source 3.
- Extension 4000 is assigned to a hunt group 1.
- Extension 6000 is assigned to an attendant console for direct access.

Local attendant group access code

When a station dials the attendant access code, the call is redirected to vector 1. If it is lunch time, the call is sent to a hunt group and vector processing terminates. If it is not lunch time, the call is sent to attendant group 1. If an attendant is available, the call is terminated to the attendant and vector processing terminates. Otherwise, the call is queued to the attendant group and the caller hears music from the music source that is assigned to TN 1 until an attendant answers the call. If the call cannot be queued, it is routed to a remote location with coverage, and vector processing terminates. If the call is unanswered after 999 seconds in the attendant queue, the caller hears a busy signal and vector processing terminates.

Note:

The **route-to** command leaves vector processing as soon as the call is successfully routed. So, in the example above, if it is lunch time the call will route to the hunt group and all hunt group processing will then apply. If the group is assigned a queue, the call is queued. If the group is not assigned a queue and the coverage criteria is met, the call follows the hunt group's coverage path. If the hunt group is in night service, the call goes to the hunt group's night service destination. If the route-to command indicates coverage n, the hunt group's coverage path is not followed and vector step 7 applies.

Incoming trunk calls to attendant group

When a call is received on a trunk that has the attendant group assigned as the incoming destination or when the call is addressed to the attendant group, the call is redirected to vector 2. The call is then sent to attendant group 1. If an attendant is available, the call is terminated to the attendant and vector processing terminates. Otherwise, the call is queued to the attendant group and the caller hears the announcement followed by music from the music source that is assigned to TN 2. If the call is unanswered after 999 seconds in the attendant queue, the caller is dropped after hearing an announcement and vector processing terminates. If queueing to the attendant fails, the call is queued to hunt group 1. If a member is available to take the call, the call is terminated to the member and vector processing terminates. If a member is not available and the call can be queued, the call is queued and the caller hears ringback until a member answers. If the call is unanswered after 999 seconds in the hunt group queue, the caller hears busy and vector processing terminates. If the call cannot be queued, the call is routed to the remote location and vector processing terminates.

Note:

The main difference from the example shown in [Local attendant group access code](#) on page 88 is queueing the call to the hunt group rather than routing the call there. In this example, the call will not follow the hunt group's coverage path or night service destination.

Incoming LDN calls

When a call is received for an LDN, the call is redirected to vector 3. If it is lunch time, the call is sent to attendant 6000. If the attendant is available, the call is answered and vector processing terminates. If the attendant is not available, the call is placed into queue and the caller hears ringback until the attendant answers the call. If the call is unanswered after 999 seconds in the attendant's queue, the call is sent to the remote location and vector processing terminates. If the call cannot be placed in attendant 6000's queue, the call is routed to a remote location and vector processing terminates. If it is not lunch time, the call is sent to attendant group 2. If an attendant is available, the call is terminated to the attendant and vector processing terminates. Otherwise, the call is queued to the attendant group and the caller hears an announcement followed by music from the music source assigned to TN 3 every 15 seconds. If the call cannot be queued, it is sent to attendant 6000.

Note:

Vector 3 attempts to queue the call to attendant 6000. A **route-to** command could also be used, but care should be taken since an attendant cannot be assigned a coverage path.

QSIG CAS example

This example shows how you can use Attendant Vectoring with CAS.

CAS branch

Suppose the contact center always wants to play an announcement at a QSIG CAS branch before routing the call to the QSIG CAS main. In this case, assume that an attendant VDN needs to be administered in the QSIG CAS Number field at the branch instead of the number to the QSIG CAS main attendant access code, which is 303-538-0 with an AAR access code of 9 in this example. The following vector plays an announcement and then routes the call to the QSIG CAS main.

Administration for vector 1 of the attendant VDN is shown in the following Call Vector example.

QSIG CAS vector main

change vector 1	Page 1 of 3
CALL VECTOR	
Number: 1 Name: Night station service vector 4	
Multimedia? n	Attendant Vectoring? y Lock? y
Basic? n	EAS? n G3V4 Enhanced? n ANI/II-Digits? n ASAI Routing? n
Prompting? y	LAI? n G3V4 Adv Route? n CINFO? n BSR? n Holidays? n
01 announcement 9000	
02 route-to number	93035380 with cov y if unconditionally
03	
04	
05	
06	
07	
08	
09	
10	
11	

CAS main

Calls from a QSIG branch are sent to the QSIG CAS main with the main attendant access code as the destination address. Therefore, these calls automatically become attendant group calls. The VDN to which these calls are redirected depends on the TN of the incoming trunk.

Night station service example

This example shows how you can use the Attendant Vectoring features for night service.

Night station service vectors 4 and 5

change vector 4	Page 1 of 3
CALL VECTOR	
Number: 4 Name: Night station service vector 4	
Multimedia? n Attendant Vectoring? y Lock? y	
Basic? n EAS? n G3V4 Enhanced? n ANI/II-Digits? n ASAI Routing? n	
Prompting? y LAI? n G3V4 Adv Route? n CINFO? n BSR? n Holidays? n	
01 route-to	number 9303538100 with cov y if unconditionally
02	
03	
04	
05	
06	
07	
08	
09	
10	
11	

change vector 5	Page 1 of 3
CALL VECTOR	
Number: 5 Name: Night station service vector 4	
Multimedia? n Attendant Vectoring? y Lock? y	
Basic? n EAS? n G3V4 Enhanced? n ANI/II-Digits? n ASAI Routing? n	
Prompting? y LAI? n G3V4 Adv Route? n CINFO? n BSR? n Holidays? n	
01 route-to	number 6000 with cov n if unconditionally
02 route-to	number 93035381000 with cov y if unconditionally
03	
04	
05	
06	
07	
08	
09	
10	
11	

Administration for vector 4 and vector 5 of VDN 4999 is as follows.

- Trunk group 1 is assigned TN 2 which is associated with attendant group 1, and night destination 4999.

Call Vectoring applications

- Trunk group 2 is assigned TN 1 which is associated with attendant group 2, and night destination 5999.
- Extension 6000 is assigned to a station.
- System night service is on.

When a non-DID call comes in on trunk group 1, the call is redirected to VDN 4999 which routes it to a remote location.

When a non-DID call comes in on trunk group 2, the call is redirected to VDN 5999 which routes it to station 6000. If station 6000 is unavailable, the call does not cover on station 6000's coverage path. Vector processing continues and routes the call to a remote location.

Note:

When station night service is active, calls are processed according to the administered night destination for the trunk group, not the night destination for the associated TN. In other words, these are not attendant group calls. If the night destination is assigned as attd or left unassigned, the calls become attendant group calls and are processed according to the partitions night destination.

Holiday Vectoring example

This example is a vector that is directing calls to special processing because of a holiday or special event. Holiday Vectoring is an enhancement that simplifies vector writing for holidays. It is designed for customers who need to reroute or provide special handling for date-related calls on a regular basis.

In this example, a commercial bank that is headquartered in Germany has branches in Europe. The bank recently established a U.S. presence by opening branches in the New York City metropolitan area. The bank's credit card division operates two 100-agent contact centers in Ireland and Germany and one 50-agent contact center in the U.S.

All agents in the European centers are bilingual and assigned to splits that handle calls from both English and German customers. The same is true for the agents in the New York contact center. Because the New York contact center is open 24 hours a day, it often takes calls that are routed from the Irish and German contact centers after those centers close at 6:00 p.m. local time.

Due to the large number of bank holidays per year in Europe (up to 30 days), the Holiday Vectoring feature can be used to create vectors that distribute calls automatically on holidays. The contact center administrator recommended this feature to the systems administrator to save the cost of time spent on writing vectors for date-related processing, and to save business that would be lost to abandoned calls if vectors are not readministered for holidays.

The following figure indicates that, beginning on December 24 and continuing through 6:00 am on January 2, incoming calls to the contact center in Germany will be processed as Christmas holiday calls.

Note:

Because date ranges must be within the same calendar year, New Year's Day had to be entered as a separate item.

Setting up a holiday table

change holiday-table 1								page 1 of 1	
HOLIDAY TABLE									
Number: 1				Name: Bank Holidays					
START				END					
Month	Day	Hour	Min	Month	Day	Hour	Min	Description	
12	24			12	31			Christmas	
01	01	00	00	01	02	06	00	New Year's Day	

After submitting the Holiday Tables form, the next step is to modify the vector processing for these holidays. On the Call Vector form, enter the new goto conditional for the holidays.

Modifying a vector to route according to a holiday table

change vector 3								Page 1 of 3	
CALL VECTOR									
Number: 3				Name: In Ireland					
Multimedia? n		Attendant Vectoring? n		Lock? y					
Basic? y		EAS? n		G3V4 Enhanced? n		ANI/II-Digits? n		ASAI Routing? n	
Prompting? y		LAI? n		G3V4 Adv Route? n		CINFO? n		BSR? n Holidays? y	
01 goto				vector 2 if holiday		in		table 1	
02 route-to				number 123456789		with cov n if unconditionally			

The setup for the vector routes the call to the United States contact center. For example, if someone in Europe calls the bank before 6:00 a.m. on January 2, the call is routed to the United States contact center. If someone in Europe calls after 6:00 a.m. on January 2, the call is routed to the German contact center.

Network Call Redirection example

This example shows the primary, status poll, and interflow vectors that redirect calls on the public network using the NCR feature.

Note:

This example assumes knowledge of multi-site BSR applications. For information about BSR, see [Best Service Routing \(BSR\)](#) on page 271 For information about NCR, see [Network Call Redirection](#) on page 343.

The e-Commerce company used in this example has three contact centers. In an effort to reduce costs, the company has implemented Network Call Redirection (NCR) to redirect

Call Vectoring applications

calls on the public network and reduce the trunking costs between the three switches. BSR is also implemented on the switches in order to increase the efficiency of agent utilization.

The e-Commerce company receives calls from a public network. Trunks used to deliver calls from the public network have been assigned Network Call Transfer (NCT) capabilities. NCT occurs after the incoming call is initially answered. With NCT, the switch is required to set up the second leg of the call and then wait for the second site to acknowledge before requesting the public network to transfer the first leg of the call to the second leg, and before the public network drops the trunks to the switch. The benefit is that the switch retains control over the call and can redirect the call using the trunk-to-trunk method should the NCT invocation fail.

After the second leg of the call is initiated and acknowledged by the public switch, the public network joins the original ISDN caller to the redirected-to endpoint and then drops both the original ISDN call and the second leg of the call at the redirecting switch.

To activate the NCR feature for each site, the switch Administrator ensures that the Net Redir field on the BSR Application Table form is set to y for the location entry.

The e-Commerce company has set up IP trunking to emulate ISDN PRI and will use this capability to poll remote sites for possible NCR. For information on setting up IP trunking to emulate ISDN PRI, see the *Administration for Network Connectivity for Avaya Communication Manager*, 555-233-504.

The following sections give examples of how the vectors must be set up at each site to use the public network via NCR (as opposed to IP trunking) to route a call from one site to another. For information about administering BSR polling over IP, see “Administering BSR IP polling without B-Channel” in the “Best Service Routing” chapter of *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784.

Primary Vector

A call arrives at eCommerce location 1 and is processed by the primary vector. This vector begins the BSR process by considering the specified resources. The following Call Vector example shows the primary vector for incoming call processing at eCommerce location 1.

Primary vector

1.	wait time 0 secs hearing ringback
2.	consider split1 pri m adjust-by 0
3.	consider location 2 adjust-by 30
4.	consider location 3 adjust by 10
5.	queue-to-best

For this example, assume that location 2 returned the lowest EWT, so the call will be routed to that site.

Status poll vector

To collect information from the remote switch, the command **consider location 2 adjust-by 30** in the primary vector places a status poll using IP trunking to the status

poll vector on the switch at location 2. The following example provides an example status poll vector on the remote switch.

Status poll vector

1.	consider split2 pri m	adjust-by 0
2.	consider split 11pri m	adjust-by 0
3.	reply-best	

The status poll only obtains information and returns it to the origin switch; the call is not connected to the status poll VDN. Once the remote switch has returned the necessary information, the **consider** series in the primary vector at location 1 can continue at the next vector step.

Interflow Vector

Once the switch has selected the site to which the call should be routed (location 2), the call is sent to the public network. The public network switch then sets up the second leg of the call and passes the codeset 0 UUI information in the SETUP message if this is supported. Next, the Avaya switch tells the public switch to transfer the call over the public network. The Avaya switch knows to do this because Net Redir for location 1, location 2, and location 3 was set to y on the BSR Application Form.

For incoming 800 number calls from MCI DMS-250 network switches, the vector reached by the second leg call placed by the switch must immediately be answered (and send an ISDN CONNect message). This can be accomplished with a **wait 0 secs hearing music** or an **announcement** step as the first step in the receiving interflow vector. The following example shows an example interflow vector for eCommerce location 2.

BSR example of interflow vector on remote switch

1.	announcement83345	
2.	consider split2 pri m	adjust-by 0
3.	consider split 11pri m	adjust-by 0
4.	queue-to best	

The public network then merges the second leg of the call to the second site and drops the trunk to the Avaya switch.

BSR using EWT and agent adjustments example

In this example, a catalog company has three contact centers, two in the United States and one in France. BSR is implemented across the sites. The catalog company uses the UCD-MIA call distribution method at each site and uses the UCD-MIA available agent strategy for the VDN that is active for the call. The catalog company will use the **adjust-by** option in the **consider** vector step to select the best agent at any site to receive a call.

Call Vectoring applications

The catalog company uses the **adjust-by** command to consider delivery of calls based on adjusted idle times for the agents, so that a remote site is not selected when agent idle time differences are not significant.

To activate the BSR Available Agent Adjustment option, the administrator sets the “BSR Available Agent Adjustments” field on the Feature-Related System Parameters form to y.

To use the option, the switch Administrator changes the **adjust-by** value in the **consider** vector steps to include a percentage adjustment appropriate for each contact center. In this example, adjust-by values are defined as 0 for the first contact center, 20% for the second contact center, and 20% for the third contact center. If there is an agent surplus at two or more of the contact centers, then the adjustment will apply. The adjustment makes sites more or less desirable, based on decreasing the idle time of available agents by the percentage assigned for the site.

Note:

If the actual agent idle time is 100 or more seconds, then the idle time is decreased by the assigned percentage. If the actual agent idle time is less than 100 seconds, then the idle time is decreased by the adjustment in seconds.

The following table summarizes how the above adjustment can affect the idle times for each site.

Idle time adjustment calculations

	Agent idle time	Adjust by xx%	Calculation	Adjusted idle time
incoming split 1 at location 1	40	0 ¹	0	40
location 2	50	20	50 - 20 secs	30
location 3	100	20	100 - 20 secs (20% of 100)	80

1. Since the adjust-by value in this consider step is set to zero, no adjustment is made.

Primary Vector

An incoming call arrives at location 1 and is processed by the primary vector. This vector begins the BSR process by considering the specified resources. An example primary vector for incoming call processing at location 1 is shown in the following example.

Primary vector with adjustments

1. wait time 0 secs hearing ringback
2. consider split1 pri m adjust-by 0
3. consider location 2 adjust-by 20
4. consider location 3 adjust-by 20
5. queue-to-best

In this example, the **consider** commands in steps 2, 3, and 4 collect information to compare local split 1 with location 2 and location 3. In each case, an available agent is found and an agent idle time returned. The **adjust-by** in steps 3 and 4 adjusts the value of the agent idle time as shown in table [Idle time adjustment calculations](#) on page 96. Step 5 queues the call to the best location found.

Status poll vector

To collect information from the remote switch, the command **consider location 2 adjust-by 20** in the primary vector places an ISDN call (a status poll) to the status poll vector on the switch at location 2. The example status poll vector is shown below.

Status poll vector

1.	consider split2 pri m	adjust-by 0
2.	consider split 11pri m	adjust-by 0
3.	reply-best	

The status poll only obtains information and returns it to the origin switch; the call is not connected to the status poll VDN.

This vector compares splits 2 and 11, identifies the better of the two, and sends this information back to switch 1 with the **reply-best** command. Notice that the **adjust-by** command could be used on the remote switch to adjust the EWT or agent idle time that is returned by either of the splits. When adjustments are applied at both the origin and remote switches, the two adjustments are added at the origin switch.

The **consider** command is ISDN-neutral and does not return answer supervision. The status poll call is dropped when the **reply-best** step executes, but the ISDN DISCONNECT message returned to switch 1 contains the information from the best split considered at location 2. Once the remote switch has returned the necessary information, the consider series in the primary vector on switch 1 can continue at the next vector step.

Interflow Vector

Based on the values derived in table [Idle time adjustment calculations](#) on page 96, at each site, location 2 is the best site based on the adjusted agent idle time. The **queue-to best** command in the primary vector interflows the call to the interflow vector at location 2. The example interflow vector is shown below.

Interflow vector on remote switch

1.	consider split2 pri m	adjust-by 0
2.	consider split 11pri m	adjust-by 0
3.	queue-to best	

The interflow vector reconsiders the status of both splits to get the most current information and queues or delivers the call to the best split. Notice that the **consider** sequences in the interflow vector and the status poll vector are identical except for the last step.

Call Vectoring applications

When the call is interflowed, it is removed from any queues at the origin switch and any audible feedback at the origin switch is terminated.

Dial by Name

The Dial by Name feature allows you to “dial” someone by entering the person’s name from your touch-tone keypad. This feature is accessible by using the Call Vectoring feature and the integrated announcement circuit pack to create an “auto-attendant” procedure in which one of the options allows callers to enter a person’s name instead of the person’s extension number. The system processes the name characters received, and, when a match is found, the number is dialed automatically.

Note:

The Dial by Name feature must be enabled to create a vector for this purpose.

A typical scenario includes the following call processing features:

- When a call comes in to the system (usually to a Listed Directory Number), a vector routes the call to an announcement that says, “Hello. You have reached A1 Hotel. Please press 0 for the operator; press 1 for the front desk; press 2 if you know the guest’s extension; press 3 if you know the guest’s name; press 4 if you want to choose from a list of extensions; or press 5 if you wish to hear these options again.”
- When the caller selects 3, the caller is then instructed to enter the person’s name.
- As soon as a single match is found, the call is placed to that person.

You can assign several vectors that define how calls will be handled as users select the different prompts. The following example shows an “auto-attendant” procedure that can be used to access the Dial by Name feature. Step numbers 1-20 contain the basic auto-attendant steps, and steps 21-32 contain the Dial by Name steps.

Example Dial by Name vector

change vector 2	Page 1 of 3
CALL VECTOR	
Number: 2 Name: Dial by Name Attendant Vectoring? y Lock? n Basic? y EAS? n G3V4 Enhanced? n ANI/II-Digits? n ASAI Routing? n Prompting? y LAI? n G3V4 Adv Route? n CINFO? n BSR? n Holidays? y	
01 wait-time 2 secs hearing ringback 02 collect 1 digits after announcement 381 03 04 route-to number 0 with cov n if digit = 0 05 route-to number 105 with cov n if digit = 1 06 goto step 12 if digits = 2 07 goto step 21 if digits = 3 08 goto step 19 if digits = 4 09 goto step 16 if digits = 5 10 route-to number 0 with cov n if unconditionally 11	
change vector 2 Page 2 of 3 CALL VECTOR	
12 collect 3 digits after announcement 382 13 route-to digits with coverage y 14 route-to number 0 with cov n if unconditionally 15 16 goto step 2 if unconditionally 17 18 19 collect 3 digits after announcement 383 20 goto step 13 if unconditionally 21 collect 4 digits after announcement 661 22 route-to name1 with coverage y	
change vector 2 Page 3 of 3 CALL VECTOR	
23 goto step 30 if nomatch 24 collect 11 digits after announcement 662 25 route-to name2 with coverage y 26 goto step 30 if nomatch 27 collect 2 digits after announcement 663 28 route-to name3 with coverage y 29 goto step 30 if nomatch 30 collect 1 digits after announcement 660 31 goto step 21 if digits = 1 32 route-to number 0 with cov n if unconditionally	

This example includes the following call processing features and functionalities:

1. When someone calls the system, the caller receives ringback for 2 seconds.
2. Announcement 381 plays. This announcement asks the caller to do one of the following:
 - Press 0 if the caller wants the operator; if the caller presses 0 or waits for the timeout, the call is routed to the operator.
 - Press 1 if the caller wants the front desk; if the caller presses 1, the call is routed to extension 105, which is the front desk.
 - Press 2 if the caller knows the person's extension; if the caller presses 2, the call is routed to announcement 382, which instructs the caller to dial the person's extension.
 - Press 3 if the caller knows the person's name; if the caller presses 3, the following sub-procedure occurs:
 - i. Announcement 661 plays requesting that the caller enter the first four characters of the person's last name.
 - If there is a single match, the call is redirected.
 - If there are multiple matches, continue with ii.
 - If there is no match, go to iv.
 - ii. Announcement 662 plays requesting that the caller enter the rest of the person's last name, followed by the # key.
 - If there is a single match, the call is redirected.
 - If there are multiple matches, continue with iii.
 - If there is no match, go to iv.
 - iii. Announcement 663 plays requesting that the caller enter the first two characters of the person's first name.
 - If there is a single match, the call is redirected.
 - If there is no match, continue with iv.
 - iv. Since there are still no matches, announcement 660 plays telling the caller that he or she can press 1 to try again, or press 0 to get an operator.
 - Press 4 if the caller knows the department (such as housekeeping) that he or she wishes to access; if the caller presses 4, the call is routed to announcement 383, which gives the caller a list of several departments that the caller can dial directly.
 - Press 5 to start over again; if the caller presses 5, the caller hears announcement 381, which repeats all of the options.
 - If the caller dials anything else, the call is routed to the operator.

Vectors exercises

This section presents several typical business scenarios that involve telephone use. One or more vectors are provided that show how to handle each of these scenarios.

The vectors presented here are intended to be “suggested solutions.” Individual contact centers must consider their own unique requirements and budget in selecting and writing vectors.

Emergency and routine service

Write a vector that does the following:

- Delivers the following message to handle emergency calls: “We are aware of the power outage in the northeastern part of the city. Crews have been dispatched. If you are calling for other reasons, please hold for an operator.”
- Enables the caller to speak with an agent, if an agent is available, concerning a nonemergency matter.

Suggested solution 1

Call Vectoring option

```
1. wait-time 0 seconds hearing ringback
2. announcement 4100 ("We are aware of the
   power outage in the northeastern part of the city. Crews have
   been dispatched. If you are calling for other reasons, please
   hold for an operator.")
3. wait-time 2 seconds hearing ringback
4. goto step 10 if calls-queued in split 1 pri l > 20
5. queue-to split 1 pri l
6. wait-time 6 seconds hearing music
7. announcement 4200 ("We're sorry. All of
   our operators are busy. Please hold.")
8. wait-time 10 seconds hearing music
9. goto step 7 if unconditionally
10. disconnect after announcement 4200 ("We're sorry.
    All of our operators are busy at the moment. Please call back at
    your convenience.")
```

In step 2 of the example vector shown above, the **announcement** command provides the caller with the appropriate emergency information, and it invites the caller to hold if he or she wants to speak with an operator on another matter. If the caller holds, the caller hears several seconds of ringback provided by the **wait-time** command in step 3. Thereafter, the **goto step** command in step 4 checks whether there are more than 20 calls queued in split 1. If so, a branch is made to step 10, where the **disconnect after**

announcement command first informs the caller that the call cannot be serviced at this time and then drops the call.

On the other hand, if 20 or fewer calls are queued to split 1, the call is queued to the split by the **queue-to split** command in step 5. Thereafter, unless the call is answered, feedback in the form of music is provided by step 6 and an announcement urging the caller to hold is provided by step 7. After another wait with music period (if necessary) that is provided by step 8, the **goto step** command in step 9 branches back to the aforementioned "please hold" announcement in step 7. The resulting "announcement-wait" loop (steps 7 through 9) is then repeated until either an agent answers the call or the caller hangs up.

Suggested solution 2

Note:

This example uses the Call Prompting feature. For more information about Call Prompting, see [Call Prompting](#) on page 225.

Call Vectoring and Call Prompting option

```
VDN (extension=1030  name="Hub"  vector=30)
Vector 30:
  1. wait-time 0 seconds hearing ringback
  2. collect 1 digits after announcement 3000
    ("We are aware of the power outage in the northeastern
    part of the city. Crews have been dispatched. If
    you are calling for other reasons, please press 1.
    Otherwise, please hang up now.")
  3. route-to number 1031 with cov y if digit = 1
  4. announcement 3100 ("Entry not understood. Please
    try again.")
  5. goto step 2 if unconditionally

VDN (extension=1031  name="Service"  vector=31)
Vector 31:
  1. announcement 4000 ("Please hold. We will
    try to connect you to an operator.")
  2. wait-time 2 seconds hearing ringback
  3. goto step 9 if calls-queued in split 1 pri l > 20
  4. queue-to split 1 pri l
  5. wait-time 6 seconds hearing music
  6. announcement 4200 ("We're sorry. All of
    our operators are busy. Please hold.")
  7. wait-time 10 seconds hearing music
  8. goto step 6 if unconditionally
  9. disconnect after announcement 4200 ("We're
    sorry. All of our operators are busy at the moment.
    Please call back at your convenience.")
```

Suggested Solution 2 involves both Call Vectoring and Call Prompting. Also, it involves two vectors instead of just one vector, and it assumes the that caller is calling from a touchtone telephone. The announcement portion of the **collect digits after announcement**

Call Vectoring applications

command in step 2 of Vector 30 first provides the caller with the appropriate emergency information. It then invites the caller to press “1” if the caller is calling for some other reason. If this is not the case, it finally suggests that the caller hang up.

Assume that the caller wants to hold the line but enters the incorrect touchtone digit (2, for example). In such a case, the **route-to number** command in step 3 attempts to route the call to VDN extension 1031 according to the entered digit. However, because a number other than 1 was entered, the call is not routed to the VDN extension. Instead, control is passed to step 4, where the **announcement** command first informs the caller of the input error and then invites the caller to try again. Thereafter, the **goto step** command in step 5 unconditionally sends control back to step 2, where the **collect digits** command ultimately collects the digit that was entered by the caller. The digit-input loop (steps 2 through 5) continues for as long as the caller enters an incorrect digit.

If the caller correctly enters digit 1 as requested by the **collect digits** command in step 2, the **route-to number** command in step 3 sends control to the vector whose VDN extension is 1031, (Vector 31).

Late Caller Treatment

The contact center is staffed by union agents who work under a contract that stipulates that agents are free to leave promptly at 5:00 p.m. However, you are concerned about the callers who will call shortly before 5:00 p.m. on any given day and find themselves waiting in queue the at the top of the hour.

Write a vector that warns late callers that their call may not be serviced. Remember that business hours are from 8:00 a.m. to 5:00 p.m., Monday through Friday.

Suggested solution:

Late caller treatment

```

1. goto step 15 if time-of-day is all 1700 to all 0800
2. goto step 15 if time-of-day is fri 1700 to mon 0800
3. goto step 16 if calls-queued in split 1 pri l > 20
4. queue-to split 1 pri l
5. goto step 10 if time-of-day is all 1645 to all 1700
6. wait-time 20 seconds hearing ringback
7. announcement 100 ("We're sorry, all of our
   agents are busy...Please hold...")
8. wait-time 998 seconds hearing music
9. stop
10. announcement 200 ("It is almost closing time.
   We will try to service you before we close for the day.
   However, if we are unable to do so, please call back
   at your convenience between 8:00 A.M. and 5:00 P.M.,
   Monday through Friday.")
11. wait-time 30 seconds hearing music
12. goto step 14 if time-of-day all 1700 to all 1710
13. goto step 11 if unconditionally
14. disconnect after announcement 300 ("We're sorry, our office is now closed.
   Please call back at your convenience between 8:00 A.M. and 5:00 P.M.,
   Monday through Friday.")
15. disconnect after announcement 400 ("We're sorry, our office is closed.
   Please call back at your convenience between 8:00 A.M. and 5:00 P.M.,
   Monday through Friday.")
16. disconnect after announcement 500 ("We're sorry, we cannot service your
   call at this time. Please call back at your convenience between
   8:00 A.M. and 5:00 P.M., Monday through Friday.")

```

In the example vector shown above, specific treatment is provided for calls that come into the switch after working hours, during the weekend, or as the working day comes to a close.

The **goto step** command in step 1 checks whether the call is placed during nonworking hours during the week. If the call is received at this time, a branch is made to step 15, where the **disconnect after announcement** command first informs the caller that the office is closed and then drops the call. If the call is not received at the time specified in step 1, control is passed to step 2, where another **goto step** command checks whether the call is received during weekend hours. If the call is received during weekend hours, a branch is made to step 15. If the call is not being placed at this time, control is passed to step 3.

The **goto step** command in step 3 checks for the number of calls in split 1. If more than 20 calls are queued to split 1, control is passed to step 16, where the **disconnect after announcement** command first informs the caller that the call cannot be serviced at this time and then disconnects the call. If 20 or fewer calls are queued to split 1, control is passed to step 4, where the **queue-to split** command queues the call to split 1.

Control is then passed to step 5, where the **goto step** command checks whether the current time is any time between 4:45 p.m. and 5:00 p.m. inclusive (very close to, if not, closing time). If the current time does not fall within this clock range, the **wait-time** command in step 6 provides the caller with 20 seconds of ringback. Thereafter, the

Call Vectoring applications

announcement command in step 7 plays the appropriate hold message, and the **wait** command in step 8 provides the caller with 998 seconds of music. Finally, the **stop** command in step 9 halts vector processing, and the call remains in queue until either the agent answers the call or the caller hangs up.

If the current time is 4:45 p.m. to 5:00 p.m. step 5 executes a branch to step 10, where the appropriate late caller announcement is provided to the caller. Thereafter, the **wait-time** command in step 11 provides the caller with 30 seconds of music. Control is then passed to step 12, where the **goto step** command checks whether the time is currently any time between 5:00 p.m. and 5:10 p.m., inclusive. If so, control is passed to step 14, where the **disconnect after announcement** command first informs the caller that the office is now closed and then invites the caller to call back at the appropriate time before finally disconnecting the call.

If the time is currently not between 5:00 p.m. and 5:10 p.m., inclusive, control is passed to step 13, where the **goto step** command branches back to the **wait-time** command in step 11. The resulting loop consisting of steps 11 through 13 is repeated for as long as the time is between 5:00 p.m. and 5:10 p.m., inclusive, or until the caller hangs up. Once step 12 is executed at least a second after 5:10 P.M., control is passed to step 14 as described previously.

Messaging option

Write a vector that:

- Does the following if the oldest call waiting is in queue for longer than 75 seconds:
 - Sends the call to AUDIX (if possible)
 - Delivers to the caller the following personalized AUDIX message: "All of our MegaSports agents are busy...Please leave your name and telephone number."
- Plays 30 seconds of ringback for the caller
- After the ringback, plays an announcement for the caller that is followed by music

Suggested solution

Messaging option

```

1. goto step 8 if oldest-call-wait in split 50 pri l > 74
2. goto step 8 if calls-queued in split 50 pri l > 20
3. queue-to split 50 pri l
4. wait-time 30 seconds hearing ringback
5. announcement 1000 ("All of our MegaSports
   agents are busy...Please wait...")
6. wait-time 998 seconds hearing music
7. stop
8. announcement 2000 ("We're sorry, all of our
   MegaSports agents are busy. If you'd like to leave a
   message, please do so after the tone. Otherwise, please
   call back between 8:00 A.M. and 5:00 P.M, Monday through
   Friday. Thank you.")
9. messaging split 20 for extension 4000
10. disconnect after announcement 2050 ("We're sorry, we are unable
    to take your message at this time. Please call back
    between 8:00 A.M. and 5:00 P.M., Monday through Friday.
    Thank you.")

```

The **goto step** command in step 1 of the example shown above checks whether the oldest call waiting in split 50 has been waiting for 75 seconds or more. If so, control is passed to step 8, where the **announcement** command first informs the caller that all of the agents are busy and then invites the caller to either call back at the appropriate time or leave a recorded message for the agent. If the caller chooses to leave a message, the **messaging split** command in step 9 is executed. Upon execution of the **messaging split** command, an attempt is made to connect the caller to AUDIX so that he or she can leave a recorded message. If the split queue is full, or if the AUDIX link is out of service, termination to AUDIX is unsuccessful, and vector processing continues at the next vector step. This step, as is the case here, usually contains an announcement that provides the caller with the appropriate apology and subsequent directives. If the caller is successfully connected to AUDIX, vector processing terminates, and a message can be left for the specified mailbox (4000, in this case).

In step 1, if the oldest call waiting in split 50 has been waiting for fewer than 75 seconds, control is passed to step 2, where another **goto step** command checks for the number of calls in split 50. If more than 20 calls are queued to split 50, control is passed to step 8. Thereafter, the procedure for the messaging option that is provided in the previous paragraph is implemented. If there are 20 or fewer calls waiting in split 50, control is passed to step 3, where the **queue-to split** command queues the call to the split.



Basic Call Vectoring

The vector commands that are available to you as part of the Basic Call Vectoring feature set are the simplest and most common commands that are used to program call vectors.

This section includes the following topics:

- [Command set](#) on page 110
- [General considerations for Basic Call Vectoring](#) on page 111
- [Treatment commands](#) on page 112
- [Routing commands](#) on page 122
- [Branching/Programming commands](#) on page 129
- [General considerations for Basic Call Vectoring](#) on page 111

Command set

The following table summarizes the commands used for Basic Call Vectoring.

Treatment steps	Command
Play an announcement.	announcement
Delay with audible feedback of silence, ringback, system music, or alternate audio or music source.	wait-time
Play a busy tone and stop vector processing.	busy
Disconnect the call.	disconnect
Execute a Voice Response Unit (VRU) script.	converse-on split
Routing steps	
Queue the call to an ACD split.	queue-to split
Queue the call to a backup ACD split.	check split
Leave a message.	messaging split
Route the call to a number that is programmed in the vector or to a Service Observing Feature Access Code.	route-to number
Send a message to an adjunct that requests routing instructions for the call.	adjunct routing
Branching/programming steps	
Go to a vector step.	goto step
Go to another vector.	goto vector
Stop vector processing.	stop

General considerations for Basic Call Vectoring

You should understand the following items when you use Basic Call Vectoring:

- For ease-of-use purposes, each specific vector function or operation should be included in a separate vector and linked via one or more **goto vector** commands.
- To keep down service costs, vector commands should be designed so that answer supervision is delayed as long as possible.
- Always provide callers with initial feedback, such as ringback.
- Direct agent calls deserve careful attention because they can affect call queuing. Queue slots occupied by direct agent calls are not always counted in Avaya CMS and BCMS reports. For example, a direct agent call is never counted toward the total of queued calls within a split, and the **calls-queued** test condition has no effect on this type of call. For more information, see [Appendix H: Call Vectoring/EAS and BCMS/CMS interactions](#) on page 635.

Treatment commands

Call treatment is the type of feedback the caller receives if the caller is not immediately connected to an agent. Basic Call Vectoring includes the following call treatment commands:

- [announcement command](#) on page 112
- [wait-time command](#) on page 114
- [busy command](#) on page 117
- [disconnect command](#) on page 118
- [converse-on split command](#) on page 118

announcement command

The **announcement** command connects calls to a recorded announcement.

This section includes the following topics:

- [General considerations for announcements](#) on page 112
- [Delay announcements](#) on page 113
- [Forced announcements](#) on page 113
- [Information announcements](#) on page 114

General considerations for announcements

You should understand the following considerations before you use the **announcement** command:

- After an announcement is provided, the audible feedback (such as music) should be re-attached.
- Depending on the type of announcement equipment and how the equipment is administered, callers may be required to listen to an entire announcement or they may be able to interrupt an announcement as it is playing. When a call is connected to an announcement, any previous treatment is discontinued.
- When an announcements must start from the beginning, the caller may have to wait in an announcement queue if the announcement is not ready to play. Callers hear the previously established call treatment (if any) until the announcement starts. If the announcement queue is full, vector processing retries the **announcement** command indefinitely.

**Important:**

If an integrated announcement board is in use and the requested announcement is not administered or recorded, vector processing skips the **announcement** command and continues with the next vector command.

- If the call is in a split/skill queue, the call remains in queue while the announcement plays. If the call is still in queue after the announcement ends, the caller hears silence until another **announcement** command, a **wait hearing ringback** command, or a **wait hearing music** command is processed. If the call connects to a station while the announcement is playing, the announcement stops and the caller hears ringback.
- When the announcement completes and is disconnected, the caller hears silence until either a vector step with alternate treatment is processed or the call reaches an agent's station.

Delay announcements

The follow example shows a vector step that uses a delay announcement:

Delay announcement

```
announcement 2556 (''All our agents are busy.
Please hold.'')
```

If the caller remains on hold, a supplementary delay announcement similar to the following example can be used.

Follow-up delay announcement

```
announcement 2557 (''Thanks for holding. All
our agents are still busy. Please hold.'')
```

Tip:

A delay announcement is usually coupled with a delay step that is provided by the **wait-time** command. For more information about the **wait-time** command, see [wait-time command](#) on page 114.

Forced announcements

When heavy call traffic is expected due to a major event, such as a widespread service problem that is currently being addressed, a contact center may provide a forced announcement. Forced announcements are typically followed by a **disconnect** command.

The following example shows a forced announcement that can be inserted into a vector to address such situations.

Forced announcement example

```
disconnect after announcement 1050 (''We are aware of the current  
situation and are working to rectify the problem. If your call is  
not urgent, please call back later.'')
```

Information announcements

In some cases, callers can be provided with an information announcement that fully addresses their needs without further interaction. An example information announcement is shown below.

Information announcement example

```
disconnect after announcement 2918 (''Today has been declared a snow  
day. Please report for work tomorrow at 8 A.M.'')
```

wait-time command

The **wait-time** command enables you to create a vector that delays the call with audible feedback. In presenting an example of a delay announcement earlier in this chapter, we mentioned that this type of announcement is usually coupled with a delay step. A delay step is provided by the **wait-time** command, which allows the caller to remain on hold for at least the amount of time that is indicated in the command.

This section includes the following topics:

- [Call delay with audible feedback](#) on page 114
- [Multiple audio or music sources on delay](#) on page 115
- [Call delay with continuous audible feedback](#) on page 116
- [Multiple music sources on hold](#) on page 116

Call delay with audible feedback

The following example shows an announcement that includes the **wait-time** command in a delay step with audible feedback.

```
announcement 2556 (''All of our agents are busy.  
Please hold.'')  
wait-time 20 seconds hearing music
```

In the example shown above, the caller waits at least 20 seconds for the call to be answered by an agent. During this wait period, the caller is provided with system music, which is one type of feedback that is available with the **wait-time** command.

If the delay step is the final effective step in the vector, the audible feedback continues beyond the specified duration. In a vector, a final effective step is defined as the last vector step, or a vector step that is followed by a **stop** step.

Audible feedback continues until:

- The call is either answered or abandoned, or, when the call is not queued when vector processing stops, the call is dropped.
- While a call is queued to any split that is routed to by a **converse-on split** command, and data is being passed to a Voice Response Unit (VRU).
- During the wait period before the connection of an announcement and/or a Touch-Tone Receiver (TTR). For more information about TTRs, which are used with the Call Prompting feature, see [Call Prompting](#) on page 225.

Multiple audio or music sources on delay

You can specify an alternative audio or music source for a vector **wait-time** step. This alternative source can be any extension number that is administered on the Announcements/Audio Sources form. For instructions for entering an audio or music source on this form, see *Administrator Guide for Avaya Communication Manager*, 555-233-506.

With the Multiple Audio/Music Sources feature, you can tailor the **wait-time** feedback to the interests, tastes, or requirements of the audience. You can provide specific types of music or music with overlays of advertising that relate to the service provided by the splits or skills that the vector serves. Or, additional advertising messages can be heard by the callers as they wait for an available agent.

An example of an announcement that includes an alternative audio or music source in the **wait-time** step is shown below.

Call delay with multiple audio/music source feedback

```
announcement 2556 (''All of our agents are busy.
Please hold.'')
wait-time 20 seconds hearing 55558 then music
```

When the **wait-time** step is processed, the caller is connected to extension 55558 for 20 seconds. At the end of 20 seconds, the next vector step is executed. The *then* option in the **wait-time** step specifies one of the following:

- What the caller hears if the caller cannot be connected to the specified source.
- When the call is waiting in queue, what the caller hears if the call is not answered in 20 seconds.

Basic Call Vectoring

In the example shown above, if the call is not answered in 20 seconds, the caller hears system music until a subsequent **announcement**, **busy**, **collect**, **converse-on**, **disconnect** or **wait-time** step is encountered.

You can specify **music** (system music), **ringback**, **silence**, or **continue** for the **then** option. When continue is specified, the caller continues to hear the alternative audio or music source until it is replaced by a subsequent vector step regardless of the time specified in the **wait-time** step.

Call delay with continuous audible feedback

You can use alternate audio or music sources in vector loops to provide continuous audible feedback as shown in the following example vector steps.

```
1. ...
2. ...
3. ...
4. wait-time 30 secs hearing 55558 then continue
5. route-to number 913034532212 with cov n
6. goto step 4 if unconditionally
```

In the example shown above, a look-ahead call attempt is placed every 30 seconds on behalf of the caller. If extension 55558 is a long, barge-in, repeating announcement, the caller hears announcement 55558 all the way to the end without the announcement being restarted each time vector processing returns to step 4.

Multiple music sources on hold

You can use the tenant partitioning tenant number (TN) to associate different music sources for each TN.

Note:

For more information, about tenant partitioning, see *Administrator Guide for Avaya Communication Manager*, 555-233-506.

You should understand the following considerations about how TN works with multiple music sources on hold:

- Without EAS, the COR setting of the station or extension that puts the call on hold determines whether music-on-hold is applied.
- With EAS, the COR setting of the logical agent ID is used to determine whether music-on-hold is applied.
- The TN assigned to the destination extension number is associated with a music source number on the Tenant form.
- The physical location (port) of the music source is assigned on the Music Sources form.
- The TN is assigned to the active VDN on the Vector Directory Number form.

- During vectoring, a **wait hearing music** command attaches the vector delay music source that is defined by the TN for the active VDN.
- Alternately, you can also use the Multiple Music Sources for Vector Delay feature to specify music sources. A **wait hearing extension then...** command applies the vector delay source. In this case, the music source is defined by the extension specified on the **Announcements** or **Audio Sources** form, rather than the TN assigned to the VDN .
- The TN administered for extensions on the **Announcement or Audio Sources** form applies only to direct calls to the announcement extension. For these calls, the announcement or music source assigned to the TN is what the caller hears.
- During vector processing, if the **converse** vector command connects the call to an agent when the call remains under vector control and the agent puts the call on hold, the active VDN applies music-on-hold.
- When a vector routes a call to another destination by a **queue**, **check**, **route-to**, or **messaging split** command, the switch uses the TN of the last active VDN to determine the music source for music-on-hold.
- In ACD systems without vectoring and where music-on-hold applies, the TN assigned to the called hunt group extension determines which music source callers hear while in queue or on hold.

busy command

A busy tone and subsequent termination of vector processing are produced using the **busy** command. An exception to this occurs on CO trunks where answer supervision has not been sent. Callers on such trunks do not hear the busy tone from the switch. Instead, these callers continue to hear ringback from the CO. The **busy** command eventually times out and drops the call after 45 seconds. With ISDN PRI, busy tone can be provided from the network switch.

You might want to force a busy tone to process a call that arrives at a time when there are a large number of calls queued in the main split, or when the contact center is out of service or closed.

An example vector that demonstrates the **busy** command is shown below.

Busy command example

```
1. goto step 6 if calls-queued in split 1 pri h > 30
2. queue-to split 1 pri h
3. announcement 4000
4. wait-time 2 seconds hearing music
5. stop
6. busy
```

In the example vector shown above, the **goto step** command in step 1 sends call control to **busy** in step 6 if the conditions in the former command are met. Specifically, if the number of calls that are queued at a high priority is greater than 30, the **busy** command is accessed.

disconnect command

The **disconnect** command forcibly disconnects a call with an optional announcement. Any previously established call treatment ends when the **disconnect** command is executed, and the call is removed from vector processing and from the switch.

If the call is connected to a station while the announcement is playing, the announcement stops and the caller hears ringback. Also, because vector processing stops when the call connects to a station, the disconnect portion of the command is not processed.

When the **disconnect** command includes an announcement, the switch sends answer supervision (if it was not already sent) just before the announcement plays.

When the **disconnect** command does not include an announcement, the switch sends answer supervision before it disconnects a call.

Note:

Answer supervision is not sent for ISDN trunks.

An example of the **disconnect** command is shown below.

Call disconnect example

```
disconnect after announcement 2918 (''Today has  
been declared a snow day. Please report for work tomorrow  
at 8 P.M.'')
```

In this example, the caller is provided with sufficient information to meet their needs, so that no further interaction is required.

converse-on split command

Voice Response Integration (VRI) allows integration of Call Vectoring with the capabilities of voice response units (VRUs), particularly the Avaya Interactive Response (IR) system.

This section includes the following topics:

- [VRI capabilities](#) on page 119
- [VRI benefits](#) on page 119
- [Other VRI considerations](#) on page 120

- [Using converse-on to outpulse caller information to VRUs](#) on page 120

VRI capabilities

VRI can do the following:

- Execute a VRU script while retaining control of the call in vector processing.

Note:

If an agent becomes available to service the call, the line to the VRU is immediately dropped, and the calling party is connected to the available agent.

- Execute a VRU script while the call retains its position in the queue.
- Group VRU ports for multiple applications.
- Use a VRU as a flexible external announcement device.
- Pass data between the switch and a VRU.
- Tandem VRU data through the switch to an ASAI host.

The capabilities listed above are provided by the **converse-on split** command, which is an enhancement to the Basic Call Vectoring customer option. The **converse-on split** step integrates a VRU with the communication server.

VRI benefits

Use of VRUs with vector processing provides the following advantages:

- Access to local and host databases
- Validation of caller information
- Text to speech capabilities
- Speech recognition
- Increased recorded announcement capacity
- Audiotex applications
- Interactive Voice Response (IVR) applications
- Transaction processing applications

VRI allows users to make more productive use of queuing time. For example, while the call is waiting in queue, the caller can listen to product information by using an audiotex application or by completing an interactive voice response transaction. In some cases, it may even be possible to resolve the caller's questions while the call is in queue. This can help reduce the queuing time for all other callers during peak intervals.

When Advanced Vector Routing is enabled, the expected wait time for a call can be passed to the VRU, and conveyed to the caller. For more information, see [Expected Wait Time \(EWT\)](#) on page 166.

Other VRI considerations

You should also understand the following considerations when you implement VRI:

- If callers need to hear an entire voice response script before speaking to an agent, the call should not be queued until after a **converse-on** step is executed.
- Audible feedback should be provided prior to a **converse-on step** whenever a large number of digits need to be outpulsed to the VRU.

Using converse-on to outpulse caller information to VRUs

You can use the **converse-on** command to outpulse the following types of information to a VRU:

- VDN extensions
- Calling party extensions
- Collected caller digits (if Call Prompting is enabled)
- Expected Wait Time (if Advanced Vector Routing is enabled)
- Call queue positions
- A string of a maximum of six digits or asterisks, or a pound sign (#)

The following example shows a vector in which the **converse-on** command is used to outpulse VDN extensions to the VRU in a way that allows a single vector to be used by multiple VDNs.

```
VDN (extension=1040  name='car loans'  vector=40)
VDN (extension=1041  name='equity loans' vector=40)
Vector 40
  1. goto step 10 if calls-queued in split 1 pri h > 30
  2. queue-to split 1 pri h
  3. announcement 4000
  4. goto step 7 if calls-queued in split 1 pri h < 5
  5. wait-time 0 seconds hearing music
  6. converse-on split 11 pri h passing vdn and none
  7. wait-time 20 seconds hearing music
  8. announcement 4001
  9. goto step 7 if unconditionally
 10. busy
```

In the example shown above, a vector can be used to respond to calls that originate from VDNs that serve customer needs ("car loans" and "equity loans").

If vector processing proceeds to Step 6, the **converse-on split** command delivers the call to the converse split.

Note:

If an agent on the switch becomes available to service the call, the line to the VRU is immediately dropped, and the calling party is connected to the available agent.

As shown in Step 6, when the VRU port responds, vector processing output pulses the VDN associated with the call to the VRU by way of the **passing vdn** parameter. Based on the VDN number, the VRU executes the appropriate voice response script for the caller.

Before connecting to a VRU, you may wish to include a vector step to test whether sufficient time is available for a voice response script to be executed. In the example shown above, Step 4 includes a **calls-queued** condition that is used for this purpose.

It is also important to provide a feedback step prior to the converse-on step in case there is a delay in reaching an available converse split port. In the example shown above, Step 5 provides music for this purpose.

For more information about the call flow for converse-VRI calls, see [Appendix J: Call flow and specifications for converse – VRI calls](#) on page 657.

Routing commands

Basic Call Vectoring includes routing commands that enable you to various destinations and treatments.

This section includes the following topics:

- [queue-to split and check split commands](#) on page 122
- [messaging split command](#) on page 125

queue-to split and check split commands

Two commands are used to queue calls to splits:

queue-to split - This command queues a call unconditionally. The command sends a call to a split and assigns a queuing priority level to the call in case all agents are busy.

check split - This command conditionally checks the status of a split for possible termination of the call to that split. The command either connects the call to an agent in the split or puts the call into the split's queue at the specified priority level if the condition specified as part of the command is met.

This section includes the following topics:

- [General considerations](#) on page 122
- [Multiple split queuing](#) on page 123
- [Option with the VDN as the coverage point](#) on page 124

General considerations

You should understand the following considerations when you use the **queue-to split** or **check split** commands:

- Make split queues large enough to allow all incoming calls to be queued. If a queue is too small, a **queue-to split** or a **check split** command might fail to queue a call due to a lack of available queue slots and the call will be dropped.
- Include a vector step that tests a split queue before queuing occurs and an alternate step that provides fallback treatment if the queue is full.
- When calls are and/or to backup splits, they also remain in queue for any previous splits to which they may have been directed. When a split answers a call that is queued in multiple splits, the call is removed from all the other split queues.

- The **check split**, **queue-to split**, and **converse-on** commands can access only those splits that are vector-controlled. A split is considered to be vector-controlled if **yes** is entered in the Vector field of the Hunt Group form.
- When the EAS feature is enabled, *Multiple Split Queuing* is referred to as *Multiple Skill Queuing*.

Multiple split queuing

The term *multiple split queuing* refers to the queuing of a call to more than one split at the same time. Incoming calls can be queued to a maximum of three ACD splits.

The following example vector shows this process.

Multiple split queuing example

```
1. goto step 4 if calls-queued in split 1 pri l >= 10
2. queue-to split 1 pri t
3. wait-time 12 seconds hearing ringback
4. check split 2 pri m if calls-queued < 5
5. check split 3 pri m if calls-queued < 5
6. announcement 3001
7. wait-time 50 secs hearing music
8. goto step 4 if unconditionally
```

In the example vector shown above, Step 1 test whether the main split queue (which has 10 queue slots) is full, and branches to one of the following. A low priority is specified in so that calls in queue at all priority levels are counted.

Note:

To avoid completing vector processing without queuing the call to a split, it is always good practice to check a split's queue before queuing to that split. If the queue is full, alternate treatment such as queuing to an alternate split should be provided.

If the main split queue is full, a **goto step** command skips the main split and goes directly to Step 4 to check backup splits. Otherwise, vector processing goes to Step 2.

In Step 2, a **queue-to split** command queues calls to split 1 at a top priority. Once the call is queued, vector processing continues with Step 3.

Step 3 uses a **wait-time** command to specify a 12-second delay. If the call is not answered within this time interval, vector processing continues with Step 4.

Step 4 contains a **check split** command that tests whether there are less than five calls queued to split 2.

- If the test outcome is true, the command attempts to connect the call to an agent in the split. If such a connection cannot be made, the command puts the call into the split's queue at the specified priority level, and vector processing continues with Step 5.
- If the test outcome is false, the vector processing continues with Step 5.

Basic Call Vectoring

Step 5 contains another **check split** command that repeats the same process described for Step 4, with the exception that the attempt to queue is now applied to split 3.

At this point in the vector process, if all previous attempts to direct the call to an available split do not succeed, Steps 6, 7 and 8 are used to provide caller feedback and loop the call back to Step 4 for additional attempts to connect to a split.

Option with the VDN as the coverage point

A Vector Directory Number (VDN) can be used as the last point in a coverage path. This capability allows the call to first go to coverage and then to be processed by Call Vectoring and/or Call Prompting. The capability also allows you to assign AUDIX to a vector-controlled hunt group and to therefore enable access to these servers using a **queue-to split** or **check split** command. The result of all this is that call handling flexibility is enhanced.

The following example shows a vector, for which the VDN serves as a final coverage point, that allows the caller to leave a recorded message.

Leaving recorded messages (VDN as the coverage point option)

```
VDN 1 (used in a coverage path)
Vector 1
  1. goto step 7 if time-of-day is mon 8:01 to fri 17:00
  2. goto step 13 if staffed-agents in split 10 < 1
  3. queue-to split 10 pri 1 (AUDIX split)
  4. wait-time 20 seconds hearing ringback
  5. announcement 1000 (''Please wait for voice
    mail to take your message.'')
  6. goto step 4 if unconditionally
  7. goto step 2 if staffed-agents in split 20 < 1
  8. queue-to split 20 pri 1 (audix split)
  9. wait-time 12 seconds hearing ringback
 10. announcement 1005 (''Please wait for an attendant
    to take your message.'')
 11. wait-time 50 seconds hearing music
 12. goto step 10 if unconditionally
 13. disconnect after announcement 1008 (''We cannot
    take a message at this time. Please call back tomorrow.'')
```

In Steps 3 and 8 of the vector example shown above, the caller is given the option of leaving a recorded message, but the **queue-to split** command instead of the **messaging split** command is used in each case. Thus, the call is actually queued to the AUDIX split.

However, a **messaging split** command does not queue the call to the split. Instead, if it is successful, it connects the caller to the split so the caller can leave a message for the specified extension. However, termination to the split may turn out to be unsuccessful due to a factor that cannot be checked by vector processing. For example, the AUDIX link might not be functioning, or all AUDIX ports might be out of service.

As a result of the queuing process, a wait-announcement loop can be included after each **queue-to split** step, and the appropriate loop can then be executed until the call is actually terminated to either an AUDIX voice port or to an available message service agent. In this vector, steps 4 through 6 comprise the first wait-announcement loop, and steps 10 through 12 comprise the second such loop.

messaging split command

The following example shows how the **messaging split** command allows callers to leave messages when agents are not available.

Leaving recorded message

```

1. goto step 8 if time-of-day is all 16:30 to all 7:30
2. goto step 10 if calls-queued in split 47 pri l >= 20
3. queue-to split 47 pri m
4. wait-time 12 secs hearing ringback
5. announcement 4001
6. wait-time 60 secs hearing music
7. goto step 5 if unconditionally
8. announcement 4111('We're sorry, our office
   is closed. If you'd like to leave a message, please
   do so after the tone. Otherwise, please call back
   weekdays between 7:30 A.M. and 4:30 P.M. Thank you.')
9. goto step 11 if unconditionally
10.announcement 4222 ("We're sorry, all of our agents are busy, please leave
   a message after the tone and we will return your call.")
11. messaging split 18 for extension 2000
12. disconnect after announcement 4333 ('We're sorry, we are
   unable to take your message at this time. Please call back at your
   convenience weekdays between 7:30 A.M. and 4:30 P.M. Thank you.')
13. busy

```

In Step 1 of the example vector shown above, the **goto step** command tests whether the current time of day is outside of defined business hours. If the test outcome is true, vector processing branches to Step 8.

Step 8 provides an announcement that offers callers the option to leave a recorded message, and vector processing continues with Step 9, which proceeds unconditionally to Step 11.

If the caller has not abandoned the call, the **messaging split** command in step 11 is executed. In this example, split 18 is an AUDIX split.

Note:

If initial vector processing went to Step 2, but split 47 cannot take the call, vector processing branches to Step 10, which also leads to the **messaging split** command in Step 11. In this example, extension 2000 specifies the audix mailbox for split 47.

If the **messaging split** command in Step 11 attempts to connect the caller to AUDIX but split queue is full or the AUDIX link is not in operation, termination to AUDIX is unsuccessful and vector processing continues with Step 12, which provides an announcement for callers to try again during regular business hours.

route-to number command

The **route-to number** command is used to route calls to a vector-programmed number.

About interflow routing

Calls can be routed to a programmed number using a process that is known as *interflow*.

Interflow allows calls directed to a split can be redirected to an internal or an external destination. For Basic Call Vectoring, this destination is represented by a number programmed in the vector. The number must be provided in the **route-to number** command and is associated with one of the following destination types:

- Attendant or attendant queue
- Local extension
- Remote (UDP) extension
- External number
- VDN

This section includes the following topics:

-

General considerations

You should understand the following considerations before you use interflow routing:

- Calls should not interflow back and forth between vectors on remote servers and local servers. This process could cause a single call to use up all available trunks.
- When the **route-to number** command is used to chain multiple vectors together to enhance processing capabilities, the following events occur:
 1. Vector processing begins at the first step in the vector assigned to the routed-to VDN.
 2. The call is removed from any queues to which it was previously assigned.
 3. Any previously assigned wait treatment is disabled.
 4. Processing then continues in the receiving vector at Step 1.

Call interflow example

```

VDN (extension=1000  name='Billing Service'  vector=55)
Vector 55:
  1. announcement 3001
  2. goto step 8 if oldest call-wait in split 1 pri l > 120
  3. goto step 8 if calls-queued in split 1 pri l > 10
  4. queue-to split 1 pri t
  5. wait-time 50 seconds hearing music
  6. announcement 3002
  7. goto step 5 if unconditionally
  8. route-to number 2020 with cov n if unconditionally

VDN (extension=2020 name='Message Service'  vector=100)
Vector 100:
  1. announcement 3900 ('We're sorry, all our
    agents are busy. Please leave a message. Thank you.')
  2. messaging split 18 for extension 3000
  3. disconnect after announcement 2505 ('We cannot
    take a message at this time. Please call back tomorrow.')

```

In the example shown above, Vector 55 provides a series of initial vector steps that test the queue status for split 1. Depending on the outcome of those tests, the call is connected to split 1 or vector processing branches to step 8.

In Step 8 a **route-to number** command specifies extension number 2020, which is associated with VDN 100. When the **route-to number** command is executed, vector processing in Vector 55 is terminated, and vector processing continues with Step 1 in Vector 100.

When control is passed to the second vector, Step 1 provides the caller with an appropriate announcement, and then Step 2 executes a **messaging split** command that attempts to queue the call to the message service split or else terminate the call to either a message service agent or AUDIX voice port. If either of these attempts succeeds, the caller can leave a message. If none of the attempts succeed, the command fails, and vector processing continues at the next vector step.

Tip:

It is good practice to provide an announcement to explain to the caller that the messaging connection could not be made.

Service Observing routing

When the Service Observing feature is enabled, route-to number commands can be used to allow call monitoring from a local station or other remote location. The following example shows a vector that connects a call to a Service Observing feature access code (FAC).



Important:

The following example does not provide security checks and should be used only in situations where security is not a concern.

Vector for Service Observing FAC

```
1. wait-time 0 secs hearing ringback
2. route-to number #12 with cov n if unconditionally (Listen-only FAC)
3. busy
```

In the example shown above, the caller is connected to a listen-only Service Observing FAC. Once connected, the person who is service observing must dial the extension number that is to be observed. To observe in a listen/talk mode, the observer would dial a different VDN.

For more information about the Service Observing feature, see:

- *Administrator Guide for Avaya Communication Manager*, 555-233-506
- *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784

Branching/Programming commands

Basic Call Vectoring provides programming methods that can be used within a vector either to create branching patterns in call processing flows, or stop vector processing.

Branching/programming commands include:

- [goto step and goto vector commands](#) on page 129
- [stop command](#) on page 132

goto step and goto vector commands

The **goto step** and **goto vector** commands can be used to create unconditional branching or conditional branching steps or to connect multiple VDNs.

This section includes the following topics:

- [General considerations](#) on page 129
- [Unconditional branching](#) on page 129
- [Conditional branching](#) on page 130

General considerations

When a **goto** command is used in a vector step to connect to a different VDN, the following events occur:

1. Vector processing continues at the first step in the branched-to vector.
2. Call (if queued) remains in queue.
3. Wait treatment (if any) is continued.
4. Processing then continues in the receiving vector at Step 1.

Unconditional branching

Unconditional branching passes control from the current vector step to a preceding vector step, a subsequent vector step, or to another vector. Unconditional branching is implemented when a **goto step** or **goto vector** command is associated with an **unconditionally** parameter.

Basic Call Vectoring

The following example shows a vector that uses an unconditional branching step:

Unconditional branching example

```
1. goto step 8 if calls-queued in split 3 pri m > 10
2. queue-to split 3 pri m
3. wait-time 12 seconds hearing ringback
4. announcement 3001
5. wait-time 30 seconds hearing music
6. announcement 3002
7. goto step 5 if unconditionally
8. busy
```

In the example shown above, the unconditional branch statement in Step 7 establishes a loop between Steps 5 through 7. Vector processing within the loop terminates when:

- an agent answers the call
- the system recognizes that the caller abandoned the call

Conditional branching

Conditional branching passes control from the current vector step to a preceding vector step, a subsequent vector step, or to another vector. Conditional branching is enabled by a **goto step** or **goto vector** command when a conditional statement is associated with the command.

The list of condition statements that can be assigned, which depends on the features enabled in your Communication Manager installation, is summarized in the following table:

Condition statement ¹	Basic Call Vectoring	Advanced Vector Routing ²	ANI and II-Digits Routing ³
available-agents	x	x	x
staffed-agents	x	x	x
calls-queued	x	x	x
oldest call-waiting	x	x	x
time-of-day	x	x	x
rolling-asa		x	
counted-calls		x	
expected-wait			
ani			x
II-digits			x

1. For information about the comparators that can be used with these condition statements, see [goto step and goto vector commands](#) on page 518.
2. For more information about this feature, see [Advanced Vector Routing - EWT and ASA](#) on page 163.
3. For more information about this feature, see [ANI /II-digits routing and Caller Information Forwarding \(CINFO\)](#) on page 179.

The following vector example includes several **goto** steps that use conditional branching:

Conditional branching example

```

1. goto vector 100 if time-of-day is all 17:00 to all 8:00
2. goto vector 200 if time-of-day is fri 17:00 to mon 8:00
3. goto step 8 if calls-queued in split 1 pri l > 5
4. queue-to split 1 pri l
5. announcement 4000
6. wait-time 60 seconds hearing ringback
7. goto step 5 if unconditionally
8. busy

```

In the example shown above, conditional branch test statements are used in Steps 1 through 3. If the call is placed during non business hours, the **goto vector** command in

Step 1 routes the call to vector 100, but if the call is placed during business hours, control is passed to step 2.

In Step 2, the **goto vector** command tests whether the call is placed during the weekend. If the test outcome is true, the call is routed to vector 200. Otherwise, control is passed to Step 3.

In Step 3, a **goto step** command tests for the number of calls that are queued to the main split. If the number of calls is greater than five, control is passed to **busy** in step 8. If the number of calls is five or less, vector processing continues at Step 4, which queues the call to split 1. Finally, Steps, 5 through 7 specify an announcement-wait cycle until an agent answers the call or the call is abandoned.

stop command

A vector stops processing when:

- A vector step includes a **stop** command
- The last step vector step is processed
- 1000 vector steps have been processed
- In vectors that use the **interflow-qpos** LAI conditional, 3000 vector steps have been processed. For more information, see [How enhanced LAI works](#) on page 255.

The **stop** command halts the processing of any subsequent vector steps. After the **stop** command is processed, any calls that are already queued remain queued, and any wait treatment is continued. Wait treatments include silence, ringback, system music, or alternate audio or music source.

Note:

If a call is not queued when vector processing stops, the call is dropped and tracked as an “abandon” by both Avaya CMS and BCMS.

The following example shows a vector that uses a **stop** command:

Stopping vector processing

```
1. goto step 6 if calls-queued in split 21 pri m > 10
2. queue-to split 21 pri m
3. announcement 4000
4. wait-time 30 seconds hearing ringback
5. stop
6. busy
```

In the example shown above, if the **stop** command is reached, the caller remains in queue at split 21 and continues to hear ringback. Further vector processing is stopped and vector processing does not continue to Step 6. Therefore, callers connected to split 21 do not hear a busy signal.

■ ■ ■ ■ ■ ■

Variables in Vectors

Variables in Vectors (VIV) is a Call Vectoring feature introduced in Avaya Communication Manager 2.0. The VIV feature allows you to create variables that can be used in **goto** commands as conditionals, thresholds, or both to:

- Improve the general efficiency of vector administration.
- Provide increased manager and application control over call treatments.
- Allow you to create more flexible vectors that better serve the needs of your customer and contact center operations.

The vector variables are defined in a central variable administration table. Values assigned to some types of variables can also be quickly changed by means of special vectors, VDNs or FACs (Feature Access Codes) that you administer specifically for that purpose.

Different types of variables are available to meet different types of call processing needs. Depending on the variable type, variables can use either call-specific data or fixed values that are identical for all calls. In either case, an administered variable can be reused in many vectors.

This section includes the following topics:

- [VIV overview](#) on page 134
- [VIV requirements](#) on page 139
- [Understanding local and global variables](#) on page 139
- [Vector variable types](#) on page 141
- [VIV interactions and considerations](#) on page 147
- [VIV administration](#) on page 148
- [VIV vector examples](#) on page 151
- [Troubleshooting vector variables](#) on page 161

VIV overview

The VIV feature provides user-defined parameters that you can use as either conditionals or thresholds in certain vector commands to test for a wide variety of call-related states and conditions.

This section includes the following topics:

- [Variable definition parameters](#) on page 134
- [Implementing vector variables](#) on page 135
- [VIV job aid](#) on page 137
- [Variable syntax](#) on page 138

Variable definition parameters

Variables in Vectors enhance Call Vectoring to allow letters (between A to Z) to be used as either conditionals or thresholds or both in **goto** test commands. These letters are variables that can be defined by the customer for customizing vector programming.

You administer vector variables in a centralized administration table in which the variables are given alphabetical designations that can range from A to Z. Each variable (letter) can have only one definition. Once defined, the letter has the same type and assignment characteristics for every vector in which it is used. Depending on the variable type, you specify some or all of the following parameters when you create a new vector variable:

Variable type - VIV provides a number of different variable types that you use for different purposes. The kinds of information that are associated with a variable can be directly call-related, such as the active vdn for the call, asaii user information data, or the time of day at which the call is received.

Other types of variables allow you to assign your own user-defined values and use them as signals to impose high-level control over call processing operations. For example, you can use a single-digit value variable to test for operational states that are specific to your contact center operations. For more information about the different types of variables, see [Vector variable types](#) on page 141.

Scope - The scope of a variable indicates how variable values are assigned and used in vectors in which the variable appears. Variable scopes can be either *local* or *global*. Depending on the variable type, the scope is global only, local only, or either local or global. Local variables use data associated with a call and only apply within the vector. Global variables are system wide and apply to all vectors in which they are used. For more information, see [Understanding local and global variables](#) on page 139.

Length - Some variables require you to specify a string length that is applied when a value is assigned to the variable. In most cases, the string length actually represents a maximum bound, since most variables can use a value that has a shorter string length than that which is specified.

Start position - If you create a variable that requires a Length specification, you also need to specify a Start position that specifies the beginning digit position of the digit string to be assigned to the variable. This along with the Length specification allows assigning only a portion of the data available to the variable.

Assignment - If you use a variable that has a user-defined value, you provide the value in the **Assignment** field of the variables administration table.

Variable Access Code (VAC) - When you define a *value* variable, you have the ability to set up a Feature Access Code (FAC) that is associated with the variable so that you can dial into the FAC and set or reset the variable assignment. For more information about this capability, see [value variables](#) on page 144.

Implementing vector variables

Administering variables and implementing them in your vectors is a relatively simple process:

Define the variable application - Determine how you intend to use the new variable and identify its defining characteristics. Use that information to identify a variable type that meets your needs. For more a quick overview of variable types and purposes, see [VIV job aid](#) on page 137 and for more detailed descriptions, see [Vector variable types](#) on page 141.

Administer the variable - From the system administration terminal enter a **change variables** command to bring up the Variable for Vectors administration table. Look in the table and select any unused letter between A – Z. This letter is used to represent the variable in vector steps. In the table row for the letter that you have selected, enter the following information in the specified fields:

1. **Description** - A short description of your variable.
2. **Type** - The variable type.
3. The **scope** (local or global), **length** of the digit string, digit **start** position and **assignment**.

Note:

Depending on the variable type that your choose, some of these fields may be predefined or not applicable.

4. **VAC** - (optional, value variables only). If you administer a value variable type and want to be able to use a dial procedure (within the local switch only) to change the variable assignment using a Feature Access Code (FAC), do the following:
 - a. Use the system administration terminal to go to page 6 of the change feature-access-codes form and do the following.
 - i. Select an unused FAC and note the Vector Variable feature access code number (VVx) that is associated with the FAC. Possible VVX values range from VV1 to VV9.
 - ii. In the Code : field, provide the digits that you want to dial when you access the FAC.
 - b. Go back to the Variables for Vectors administration table and enter the VVx number in the VAC column for the value variable that you are administering.

For more detailed information, see [VIV administration](#) on page 148.

Program vectors - Program one or more vectors with the selected variable using **goto** steps. You must conform to the vector syntax rules specified in [Variable syntax](#) on page 138.

Change variable assignments - Some variables, such as the asaiuu and tod variable types, do not require value reassignments after the variables are implemented in vectors, since values for the variable are always provided by individual callers or the communication server.

However, other variable types allow you to change the variable assignment as necessary, even as calls are being processed. For example, if you use a collect variable in a vector step, a caller changes the value assigned for the variable when they are prompted by an announcement and enter new digits.

Note:

When collect variables are provided specifically for supervisor/manager use, the collect variable usually has a global scope, and the variable is applied in a special vector intended for the supervisor/manager. For more information about this strategy, see [Example application using a collect variable](#) on page 152.

For descriptions of a few basic ways that you can apply variables in your call vectors, see [VIV vector examples](#) on page 151.

VIV job aid

The following table summarizes basic functions and characteristics of the different VIV variable types.

Variable type	Function/Application	Other defining characteristics
asaiuu	Holds up to 16 digits that are obtained from the 96-digit ASAI user data associated with a call. This variable allows call-specific processing based on information included in the ASAI user information for a call, which also includes ASAI data that has been modified by a CTI adjunct.	Scope is Local , only. You must define a string length (1 to 16 digits) and a start position (1 to 96).
collect	Holds up to 16 digits that can be used to control call processing for any user-defined purposes.	Scope is Global or Local . You must define a string length (1 to 16) and start position (1 to 16). The following methods can be used to specify assignments for <code>collect</code> variables: ● If the scope for a <code>collect</code> variable is set to <i>local</i>, the variable is included in a <code>collect...for <variable></code> vector step and the required digits are caller-provided. ● If the scope is global, the digits are either caller-provided (usually by a manager or supervisor) in a <code>collect...for <variable></code> vector step, or by entry of digits in the assignment field
tod	Holds the current time of day, which is obtained from the switch system clock (0000 – 2359). This variable can be used to control call processing for any user-defined purpose.	Scope is Global , only. No additional definition is required.
dow	Current day of week from the switch system clock (1 – 7 where 1 = Sunday). This variable can be used in vectors to control call processing for any user-defined purpose.	Scope is Global , only. No additional definition is required.
doy	Current day of year from the switch system clock (1 – 365 or 1 – 366 in leap year). This variable can be used to control call processing for any user-defined purpose.	Scope is Global , only. No additional definition is required.
value	Holds a single numerical digit (0 to 9) that can be used to control call processing for any user-defined purpose. Digit assignments are done either by specifying an assignment in the <code>Variables for Vectors</code> table or by dialing a FAC set up that for that purpose.	Scope is Global , only. You can optionally pre-specify an assignment value (1 to 9). If you want to be able to change variable assignments by dialing a FAC, you must specify a value in the VAC column. The VAC is a three-digit value that uses the format <code>VVx</code> , where <code>x</code> is a single digit (1 - 9). The <code>VVx</code> value is obtained from one of the FAC entries listed on page 6 of the Feature Access Code administration screen.
vdn	Holds the VDN extension number for the call, which provides the basis for selective call processing.	Scope is Local , only. You must specify either <i>active</i> (which may be affected by VDN override settings) or <i>latest</i> as the variable assignment.

Variable syntax

The following syntax rules apply to variables used with **goto** vector commands:

```
goto step/vector x if <A-Z> <comparator> <threshold>  
goto step/vector x if <conditional> <comparator> <A-Z>  
goto step/vector x if <A-Z> <comparator> <A-Z>  
goto step/vector x if <A_Z> [in table, not-in table] <1-10 or 1-100>1
```

where,

A-Z is an administered variable represented by a value from A to Z

conditional can be any existing conditional (ani, digits, staffed agents.....)

comparator can be any comparison operator (>, <, =, <>, >=, <=)

threshold can be a string up to 16 digits, and can include wildcards, or either keyword "none", (matches empty string) or # (matches single digit)

1. The value that is currently assigned to a variable can be used as a table entry. However, the actual variable entities, which are represented as alphabetical designations that range from A to Z, cannot be used as table entries.

A vector step that uses variable parameters could display command syntax like the following example, which tests the current number of counted calls for the active vdn to user-defined variable **G**:

```
goto step 4 if counted-calls to vdn active <=G
```

You can also use the "none" parameter to set up a vector step that is controlled by the simple presence or absence of an administered variable, irrespective of the variable value, as shown in the following example:

```
goto step 5 if N=none
```

Depending on the type of variable that you use, the specifications that you provide for it, and the way in which you use it in a vector, the number of potential applications for vector variables is extremely large.

VIV requirements

VIV works on all platforms and operating systems that are supported by Avaya Communication Manager 2.0 and later. VIV also has the following licensing and system requirements:

- The MultiVantage G3 Version field system-parameters customer-options form must have the following settings:
 - The Call Center Release: field must be set to 12.0 or later.
 - The Vectoring (Variable)? field must be set to y.

Understanding local and global variables

Variable conditionals can be either *local* or *global* in terms of the scope of their functionality in vectors. Depending on the variable type, the scope is global only, local only, or either local or global.

Local scope - When a variable has a local scope, its value is assigned on the basis of call-specific information and applies only in the vector that is currently processing the call.

For example, *asaiuui* variables always have a local scope. If variable "B" is administered as an ASAI variable and included in a vector step, variable B assumes the unique ASAI user data value for each new call that is processed by that vector.

Global scope - Global variables have system-wide values that apply to all vectors in which they are used. For example, the value specified for a *tod* (time of day) variable is provided by the system clock. Though this value changes each minute, the value provided at any given moment is identical in all vectors in which the variable appears.

For other variables that can have a global scope, such as *collect* or *value* variables, the value for the variable is user-defined by a call center supervisor or administrator. In this case, the user-defined value applies to all vectors in which the global variable may appear. The ability to administer vector variables with user-defined values that can be applied in a system-wide manner gives contact center supervisors the ability to control call center resources and operations in a manner that is more precise and flexible than would otherwise be possible.

This section includes the following topics:

- [About local variables](#) on page 140
- [About global variables](#) on page 140

About local variables

You should understand the following items about local variables:

- When a variable is administered with a local scope, the value assigned to the variable is provided from information that is specific to that call. This value can be provided by:
 - Digits collected from the caller
 - The call VDN
 - ASAI data

Note:

ASAI data for a call can be modified by a CTI adjunct when a route-to adjunct command is used. For more information, see [asaiuui variables](#) on page 141.

- When a value for a local variable is assigned to a call, that value remains with the call through all subsequent vector steps until the call is terminated or modified by another vector command or CTI adjunct. This rule applies to vector steps that include **goto** commands and to vector steps in chained vectors that may be included in the call processing sequence.

About global variables

You should understand the following items about global variables:

- Some types of global variables require you to assign values to them. The value that you assign applies to all vector steps in which the variable is applied, and when you change the value, the change is instantly propagated to all vector steps in which that variable is applied. This rule applies to all global variable types that allows input in the Assignment field in the Variables for Vectors administration form. For more information, see [Required variable administration entries](#) on page 149.

Note:

Some variable types allow you to use a FAC or VDN to change the specified value. When you use either of those methods to change a variable value, the Assignment field in the Variables for Vectors administration form is immediately updated to reflect the new variable value.

- Other types of global variables use dynamic values for which you cannot assign specific values. This rule applies to any global variable type that does not allow input in the Assignment field of the Variables for Vectors administration form, such as the time of day and day of week variable types. For more information, see [Required variable administration entries](#) on page 149.

Vector variable types

VIV provides different types of variables to meet various needs of contact center operations.

Note:

As a call is processed through a vector or chain of vectors, the number of different variable types that can be applied is limited only by the type and number of variables that you have administered.

The different variable vector types are described in the following sections:

- [asaiuui variables](#) on page 141
- [collect variable](#) on page 142
- [dow variables](#) on page 143
- [doy variables](#) on page 143
- [tod variables](#) on page 144
- [value variables](#) on page 144
- [vdn variables](#) on page 145

asaiuui variables

Description: - The asaiuui variable is assigned a unique value for each incoming call based on ASAI user information. Once a value is assigned, it can be modified or changed by an adjunct after an adjunct-route vector step. A common use for an asaiuui variable in a vector step is to test the assigned value against a threshold value. The following example shows a vector step that compares an administered asaiuui variable **D** to a four digit segment of the ASAI user information string that should receive special call treatment if the first digit in the sequence is 3 and the last digit is 5:

goto step 5 if D = 3??5

where **D** is an administered asaiuui variable and the threshold value that **D** is tested against is a four digit string that begins with a **3** and ends with a **5**.

For an vector example that shows how the asaiuui variable can be used, see [VIV vector examples](#) on page 151.

Scope - The scope of asaiuui variables is local, only.

Additional information - You should also understand the following items about the asaiuui variable:

- ASAI user information data assigned to an `asaiuuu` variable can be shortened by specifying a start position in the variable administration table. A start position must be specified.
- A length value must be administered for the `asaiuuu` variable. Valid length values range from 1 to 16 digits, but if the digit length that extends from the specified start position to the end of the digit string is less than the specified length, the lesser number of digits is assigned. If the digit length that extends from the specified start position to the end of the digit string is greater than the specified length, than any digits that extend the specified length are not included in the assigned value.

collect variable

Description: - The `collect` variable is used with the **collect** command. When VIV is active on the server system, the **collect** command includes a **for** parameter that precedes the `collect` variable to which any collected data is assigned. The basic syntax is shown in the following example vector step:

collect 2 digits for V

where **V** is a vector variable of type `collect`, as defined in the variable administration table.

Note:

Use of variables with `collect` commands is not required. The default entry that follows the **for** parameter is **none**.

A `collect` variable can also be used as a threshold value in a conditional test, as shown in the following example vector step:

goto step 4 if counted-calls to vdn active <=V

For a complete description of the `collect` variable syntax used with the **collect** command, see [Collect Digits command](#) on page 498. For vector examples that show how the `collect` variable can be used, see [VIV vector examples](#) on page 151.

Scope - The scope of `collect` variables can be either local or global. The following rules apply:

- If the scope is local, the assigned value is null until a value is provided by the call (or an adjunct) with a **collect digits/ced/cpd for [A to Z]** vector step. The assigned value is retained through all further call processing steps, including any chained vectors and route-to VDN commands, until the call is terminated or a new value is reassigned by subsequent **collect digits/ced/cpd for [A to Z]** vector steps.
- If the scope is global, the assigned value is retained as a system-wide variable value until it is reassigned, either by changes made to the Variable for Vectors form, or by a **collect digits/ced/cpd for [A to Z]** vector step designed for that

purpose. For more information about how to set up a VDN and vector to facilitate changes in global collect variable values, see [Example application using a collect variable](#) on page 152 and [Example application using time and day variables](#) on page 154.

Additional information - You should also understand the following items about the collect variable:

- When collected data is assigned to a collect variable, the value can be truncated by specifying a start position other than the first digit in the collected data string. A start position must be specified.
- A length value must be administered. Valid length values range from 1 to 16 digits, but if the digit length from the specified start position to the end of the digit string is less than the administered length value, the lesser number of digits is assigned. If the digit length that extends from the specified start position to the end of the digit string is greater than the specified length, then any digits that extend the specified length are not included in the assigned value.

dow variables

Description: - The dow variable provides the current day of the week. The assigned value can range from 1 to 7, where 1 equals Sunday, 2 equals Monday, and so forth. The values assigned to this variable are obtained from the system clock on the communication server. For information about setting and maintaining the system clock, see the "Implementing the Time of DayClock Synchronization feature" section in: *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784.

Scope - The scope for the dow variable is global, only.

doy variables

Description: - The doy variable provides the current day of the year. The assigned value can range from 1 to 366. The 366 value is provided for leap years. The values assigned to this variable are obtained from the system clock on the communication server. For information about setting and maintaining the system clock, see the "Implementing the Time of DayClock Synchronization feature" section in: *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784.



Important:

You should also understand the following items about leap years and doy variables:

- Leap years include an extra day (February 29). Therefore, any vectors that are initially set up in non-leap years and include `doy` variables with assigned values greater than 59 (February 28) must be shifted forward one day when a leap year begins. Alternately, when such `doy` variables are included in vectors that are initially set up in leap years, they must be shifted back one day when a non-leap year begins.
- If a value of 366 is assigned to a `doy` variable, and the current year is not a leap year, any **goto** step in which the variable is used will fail.

Scope - The scope for the `doy` variable is global, only.

tod variables

Description - The `tod` variable provides the current time of day based on 24-hour time. The assigned value, which can range from 0000 to 2359, is obtained from the communication server clock. The values assigned to this variable are obtained from the system clock on the communication server. For information about setting and maintaining the system clock, see the "Implementing the Time of DayClock Synchronization feature" section in: *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784.

Scope - The scope for the `tod` variable is global, only.

value variables

Description - The `value` variable type gives you the ability to quickly change vector applications from one operational mode to another. To implement value variables, you need to do the following:

- Administer a `value` variable in the variable administration table. For more information, see [VIV administration](#) on page 148.
- You can administer a Feature Access Code and associate it with a Variable Access Code (VAC) if you want to use a dial code procedure to change a `variable` value assignment. VAC designations VV1 through VV9 are provided for this purpose on the FAC form. For more information about how to set up a FAC to use with a `value` variable, see [Optional FAC administration for value variables](#) on page 150.
- If you associate an administered `value` variable with a FAC, you can dial the FAC and enter a single digit (0 to 9) to change the variable assignment. Otherwise, if the variable is not associated with a FAC, you must change the variable assignment in the Variables for Vector administration form.

Example - The following example shows how you would use value variable **A** as a conditional in a vector step:

```
goto vector 34 if A = 2
```

where **A** is an administered value variable, and the value that **A** is tested against is an arbitrary, single-digit number that you use to represent an operational mode or condition to which you want to be able to respond as needed in your call applications. For more information, see [Example application using a value variable](#) on page 158.

Scope - The scope of value variables is global, only.

Additional information - You should also understand the following items about the value variable:

- Association of a value variable with a FAC allows you to use the phone to access a FAC and change the assigned variable value quickly and easily. If you do not create a FAC to use with a value variable, the only way to change the assigned variable value is to change the assignment field in the Variables for Vectors form.
- If you set up a FAC to change a value variable assignment, a station user must use a physical phone that has the required console permissions.
- To reset the assigned value for a value variable to null, access the FAC associated with variable and enter * instead of a digit.

vdn variables

Description: - The vdn variable applies call-specific vdn information in a way that allows you to create vectors that are more versatile and reusable. When a vdn variable is used in a **goto** step, the extension number value that is assigned to the variable is based on either the active or latest vdn associated with the call. The number of digits assigned to a VDN variable depend on the dial plan used for the system.

The latest value represents the VDN extension number associated with the vector that is currently in control of the call process, and the active value represents the extension number of the current VDN, as it is defined by VDN override settings.

You specify whether the active or latest value should be applied to vdn variables when you administer the variable. For more information, see [VIV administration](#) on page 148.

Example - The following example shows a **goto** vector step that uses administered vdn variable **G** to execute a branching step when VDN extension **4561** is identified:

```
goto step 5 if G=4561
```


Scope - The scope for the vdn variable is local, only.

Additional information - When a vdn variable is administered to use the *active* VDN of the current call as its value assignment, VDN override settings can affect the VDN extension number that is actually assigned to the variable.

When the Allow VDN Override? field is set to y on the Vector Directory Number administration form for a VDN, the extension number for the *subsequent* VDN to which a call is routed is applied to the call instead of the extension number for the current (latest) VDN. Therefore, the following rules apply for the value assigned to a vdn variable when it is used in a vector:

- If the VDN override setting for the previous VDN is not set to allow overrides, and a vdn variable in the vector associated with the next VDN in the call process flow is set to *active*, then the number for the previous VDN is assigned to the variable. An example of this case is represented in the following figure by the call flow from VDN A to VDN B.
- If the VDN override setting for the previous VDN is set to allow overrides, and a vdn variable used in the vector associated with the next VDN in the call process flow is set to *active*, then the current VDN number is assigned to the variable. An example of this case is represented in the following figure by the call flow from VDN A to VDN C.
- When the vdn variable is set to use the *latest* VDN number, the VDN override setting for the previous VDN has no effect on the value that is assigned to the variable. This case is represented in both of the call flows shown in the following figure.

Interactions between vdn variable assignments and VDN override settings:

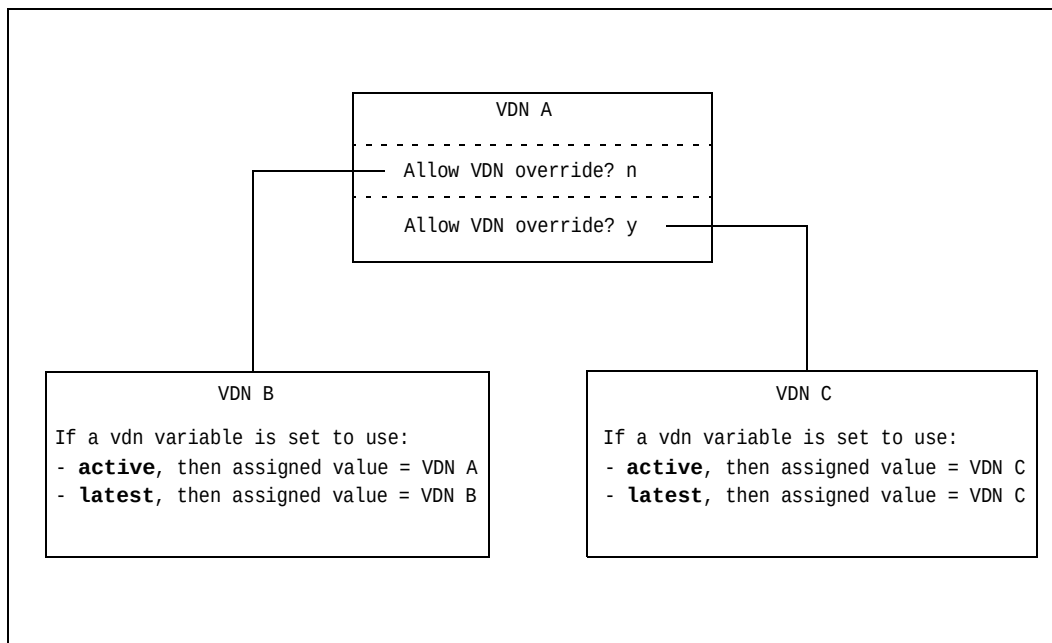

For more information about VDN Override settings, see [VDN Override](#) on page 56.

VIV interactions and considerations

Avaya CMS interactions - Vector administration supports the vector variable command syntax on Avaya CMS Release 12 or later. However, the definition of each variable can only be administered through Avaya Communication Manager by use of the Variables for Vectors administration table.

Also, if the CMS release is earlier than Release 12, an attempt to administer a vector that includes one or more vector variables generates an error message.

Variable failure conditions - When the variable conditional that is tested is not defined in the variable administration table, a **goto** test fails, a call does not branch, and processing falls through to the next vector step.

VIV administration

This section lists the administration forms and settings that are required to administer the VIV feature.

Note:
For most of the variable types, administration is done solely in the variables administration table. However, a FAC administration step is also required if you want to use a FAC to change assignments for value variables.

This section includes the following topics:

- [Example Variables for Vectors form](#) on page 148
- [Required variable administration entries](#) on page 149
- [Optional FAC administration for value variables](#) on page 150

Example Variables for Vectors form

You use the following form to administer vector variables. For a description of the entries required for each variable type, see [Required variable administration entries](#) on page 149.

change variables Page 1 of x

Variables for Vectors							
Var	Description	Type	Scope	Length	Start	Assignment	VAC
A			-	—	—		—
B			-	—	—		—
C			-	—	—		—
D			-	—	—		—
E			-	—	—		—
F			-	—	—		—
G			-	—	—		—
H			-	—	—		—
I			-	—	—		—
J			-	—	—		—
K			-	—	—		—
L			-	—	—		—
M			-	—	—		—
N			-	—	—		—
O			-	—	—		—

Required variable administration entries

The following table summarizes the information required in the various fields of the Variables for Vectors administration form for the different types of variables.

Variable type	Scope	Length	Start	Assignment	VAC (Variable Access Code)
asaiuuu	Local only (L)	1 to 16 digits (required)	start position from 1 to 96 (required)	Not applicable	Not applicable
collect	Local or Global (L or G, required)	1 to 16 digits (required)	start position from 1 to 16 (required)	Local - not applicable Global - 1 to 16 digits	Not applicable
dow	Global only (G)	Not applicable	Not applicable	Not applicable	Not applicable
doy	Global only (G)	Not applicable	Not applicable	Not applicable	Not applicable
tod	Global only (G)	Not applicable	Not applicable	Not applicable	Not applicable
value	Global only (G)	1	Not applicable	1 digit (0 to 9, optional) ¹	VVx (optional) ²
vdn	Local only (L)	Not applicable	Not applicable	active or latest	Not applicable

1. If you do not assign a value in this field, a null value is specified. However, if you administer a FAC to set the variable assignment, any value that you assign by dial code procedure is subsequently displayed in this field. For more information, see [Optional FAC administration for value variables](#) on page 150.
2. You must enter a VAC value if you want to be able to use a FAC to change the variable assignment. The format for the VAC value is VVx, where x is a single digit that ranges from 0 to 9. The VVx value that you list in this field, must be obtained from the FAC administration form after you set up the FAC. In the FAC form, the VVx value is displayed on the same line as the FAC code, as described in [Optional FAC administration for value variables](#) on page 150. If you do not specify a VVx value when you administer the variable, you receive an intercept tone when you attempt to dial the FAC.

Optional FAC administration for value variables

This section describes the administration steps that you need to do if you use value variables in your vectors and want to be able to use a FAC to change the variable assignments.

Use the following form to administer a FAC that you can use to change value variable assignments.

change feature-access-codes	Page x of x
FEATURE ACCESS CODE (FAC)	
Call Vectoring/Call Prompting Features	
Converse Data Return Code: ____	
Vector Variable 1 (VV1) Code: ____	
Vector Variable 2 (VV2) Code: ____	
Vector Variable 3 (VV3) Code: ____	
Vector Variable 4 (VV4) Code: ____	
Vector Variable 5 (VV5) Code: ____	
Vector Variable 6 (VV6) Code: ____	
Vector Variable 7 (VV7) Code: ____	
Vector Variable 8 (VV8) Code: ____	
Vector Variable 9 (VV9) Code: ____	

To administer a FAC that you can use to change variable values:

1. On the Call Vector/Call Prompting Features page of the Feature Access Codes form, enter a FAC code in the field next to one of the Vector Access Code (VAC) entries. The FAC code must be a 1 to 4 digit string, but either a # or * character can be substituted for a numeral at the first digit position.
2. Note the VVx value associated with the new FAC code. Possible VAC entries range from VV1 to VV9. You must enter this value in the VAC field on the Variables for Vectors form when you administer the value variable that you want to associate with the FAC. For more information, see [Required variable administration entries](#) on page 149.

VIV vector examples

This section provides some simple examples that show how vector variables can be used to help improve call processing operations.

This section includes the following topics:

- [Example application using an asaiuui variable](#) on page 151
- [Example application using a collect variable](#) on page 152
- [Example application using time and day variables](#) on page 154
- [Example application using a value variable](#) on page 158
- [Example applications using vdn variables](#) on page 160

Example application using an asaiuui variable

The following vector example shows how an `asaiuui` variable can be used to provide selective customer treatment based on call-specific information.

In this example, a business wants to identify platinum member customers and provide them with special call treatment by queuing them at a higher level of priority. In this scenario, ANI data and other digits dialed by the caller are used by a CTI adjunct application to retrieve a five-digit customer account number. Account codes for platinum members are indicated by a 3 at the first digit position and a 5 at the last position in the five-digit string.

The adjunct includes the five-digit account number with other ASAI data beginning at digit position 4 in the 32-digit ASAI string.

Based on the account number constraints described above, the specifications that you would provide in the `for Variables for Vectors` form for the `asaiuui` variable are shown in the following table:

Variable	Description	Type	Scope	Length	Start	Assignment	VAC
P	Caller account code	asaiuui	L	5	4		

Variables in Vectors

The following example shows how the administered `asaiuu` variable can be applied in a vector to implement the intended call treatment:

```
1. goto step 4 if P = 3???5
2. queue-to split 201 pri l
3. goto step 5 if unconditionally
4. queue-to split 201 pri m
5. announcement 3010
6. wait-time 30 secs hearing music
```

In the vector example shown above, step 2 uses the `asaiuu` variable as a conditional value to test whether the account code for a call belongs to a platinum member (**P = 3???5**). If the caller is a platinum member, the call branches to step 4, where it is placed in queue at a medium priority level. Otherwise, call control passes to step 2, which places the call in queue at a low priority level.

Example application using a collect variable

You can use a `collect` variable to set a threshold value that controls how contact center resources are allocated to different activities. In the following example, a contact center wants to be able to adjust the amount of resources that are dedicated to a promotional sales give-away campaign so that extra resources are shifted to more profitable sales campaigns during peak call volume hours.

Note:

For a different application of a `collect` variable in a vector application, see [Example application using time and day variables](#) on page 154.

In this example, a `collect` variable is used as a threshold to specify the number of calls allowed for the give-away campaign, which is initially set to a value of 50.

The `collect` variable is applied as a threshold conditional in a **counted-calls** vector step in such a way that it can be quickly changed when reallocation of agent resources is necessary.

The specifications that you would provide in the `for Variables for Vectors` form for the `collect` variable used in this example are shown in the following table:

Variable	Description	Type	Scope	Length	Start	Assignment	VAC
G	Allowed calls for Give-away campaign	collect	G	2	1	50	

After collect variable **G** is administered, you can create a vector that uses the variable as a conditional threshold. A **counted-calls** step that tests the variable conditional is shown in the following example vector.

```
1. wait-time 0 secs hearing ringback
2. goto step 4 if counted-calls to vdn active <=G
3. busy
4. queue-to skill 30 pri (priority) 1 (low)
5. wait-time 10 secs (seconds) hearing ringback
6. announcement 1002 ["all agents busy, your call is important, etc."]
7. wait-time 60 secs (seconds) hearing music
8. goto step 6 unconditionally
```

A second vector is administered so that the contact center manager can quickly change the assignment for variable **G**. As shown in the following example, step 4 uses a **collect digits** command to allow an authorized user to change the number of calls allowed for the give-away campaign.

```
1. wait-time 0 secs hearing ringback
2. collect 4 digits after announcement 10010 for none ["enter your
   security code"]
3. goto step 7 if digits <> 1234
4. collect 2 digits after announcement 10011 for G ["enter the number of
   allowed active calls"]
5. announcement 10012 ["change accepted"]
6. disconnect after announcement none
7. disconnect after announcement 10013 ["incorrect security code"]
```

Example application using time and day variables

The VIV feature provides time and day variables that you can use to enhance vector functionality and efficiency in many different ways. The following example shows how:

- You can use time of day (tod) and day of week (dow) variables to create flexible vectors that evaluate factors such as hours and days of week so an appropriate call treatment is delivered to customers.
- You can use global collect variables to define contact center start and close times for different days of the week. The collect variables provide threshold values that are tested against tod and dow values to determine appropriate call treatments.
- You can set up special VDNs that give you the ability to reassign variable values for opening and closing time whenever necessary, such as when a change in daylight savings time occurs. The new variable values are instantly propagated to any number of vectors in which they are used.

Details for the example scenario and the steps required to implement the solution are provided in the following sections:

- [Scenario details](#) on page 154
- [Administering the variables](#) on page 155
- [Creating a vector to use the time and day variables](#) on page 156
- [Creating a vector to reassign contact center hours of operation](#) on page 157

Scenario details

The example contact center has the following daily hours of operation, which must be specified in 24-hour clock time:

Day of week	Opening time	Closing time
Monday to Thursday	0700	2300
Friday	0700	2100
Saturday and Sunday	0700	1600

Administering the variables

The specifications that you would provide in the for Variables for Vectors form for the variables used in this example are shown in the following table:

Variable	Description	Type	Scope	Length	Start	Assignment	VAC
Time of day/day of week variables							
T	current time of day	tod	G			Obtains the current time of day from the system clock in 0000 - 2359 format.	
D	current day of the week	dow	G			Obtains the current day of week in 1- 7 format (1=Sunday).	
Start time/Close time variables							
O	opening time, all days of week	collect	G	4	1	0700	
L¹	closing time, Monday through Thursday	collect	G	4	1	2300	
F	closing time, Friday	collect	G	4	1	2100	
W	closing time, Saturday and Sunday	collect	G	4	1	1600	

1. In the current example, the Monday through Thursday closing time defines an upper bound on the latest possible closing time for any day of the week. Therefore, variable designation **L** is used to signify "Latest possible closing time."

Creating a vector to use the time and day variables

The following vector example shows how the `tod` and `dow` variables can be tested against contact center business hours so that call processing is controlled in an appropriate manner.

```

1. goto step 30 if T < 0      [if tod is earlier than 0700 hours, go to out of hours
                             treatment]
2. goto step 8 if T < W      [if tod is earlier than 1600 (earliest possible closing
                             time), working hours apply. Continue with step 8]
3. goto step 30 if D = 1     [if dow is Sunday, go to out of hours treatment]
4. goto step 30 if D = 7     [if dow is Saturday, go to out of hours treatment]
5. goto step 8 if T < F      [if tod is earlier than 2100 (Friday close time), working
                             hours apply.]
6. goto step 30 if D = 6     [if tod is later than 2100 (as determined by preceding
                             step), and dow is Friday, go to out of hours treatment]
7. goto step 30 if T > L     [if tod is later than 2300, go to out of hours treatment]
8. goto step 31 if holiday in table 8 [based on outcome of all preceding steps, working
                                     hours apply unless today is a holiday]
9. announcement 16549        ["please wait for the next available agent"]
10. consider skill 80 pri m adjust by 0
11. consider location 16      adjust by 10
12. queue-to best
13. goto step 30 if staffed agents in skill 80 = 0
14. wait-time 2 secs hearing silence
....
....
30. announcement 18465        ["please call again during regular business hours"]
31. closed for holiday treatment

```

In the preceding vector example, the `tod`, `dow` and global `collect` variables control the flow of the call process by testing call time and day values against a series of time windows that represent possible ranges of operational hours for the contact center.

Steps 1 and 2 determine whether the time is within the minimum window of operational hours common to all work days, which is currently defined as 0700 to 1600 hours.

Step 1 tests whether the time is earlier than the 0700 opening time that is common to every day of the week (**T < 0**). If the time is earlier than 0700, vector processing branches to out of hours treatment at step 30. Otherwise, control passes to step 2.

Step 2 tests whether the time is earlier than the earliest possible closing time for any day of the week, which is 1600 on weekend days (**T < W**). If so, the call time is within the range of work hours that are common to all days of the week, and processing branches to step 8, which checks for a holiday before processing goes through the series of **consider** and **queue-to best** steps that are included in steps 9 through 12. Otherwise, vector processing goes to step 3 for further assessment.

Steps 3 and 4 then test whether the current day is Saturday (**dow = 7**) or Sunday (**dow = 1**). When either case is true, call control passes to the out of hours treatment provided at step 30. Otherwise, call control passes to step 5 for further assessment.

Step 5 tests whether the time is earlier than the Friday closing time ($T < F$). If so, the current time is within the normal range of operating hours for Monday through Friday and call processing branches to steps 8 through 12 for in-hours treatment. Otherwise, call vectoring goes to step 6 for further assessment.

Step 6 tests whether the day is Friday (**dow** = 6). If so, processing goes to out of hours treatment at step 30. Otherwise, call vectoring continues at step 7.

Step 7 completes the assessment of possible time windows by testing whether the tod is later than the latest possible closing time of 2300 hours on Monday through Thursday ($T < L$). If so, the call is directed the out of hours treatment provided at step 30. Otherwise, the time falls within normal work hours for Monday through Thursday and processing goes to steps 8 through 12 for in-hours treatment.

Creating a vector to reassign contact center hours of operation

As described in [Creating a vector to use the time and day variables](#) on page 156, tod and dow variables can be tested against collect variables that specify contact center opening and closing times for different days of the week. Because global collect variables are used to specify these hours of operation, you can create a simple vector that allows the hours of operation to be changed very quickly and which is instantaneously propagated to multiple vectors.

The following example shows a vector that allows the contact center opening time, which is specified by variable **O** in the current example, to be quickly changed by dialing a VDN dedicated for that purpose.

Note:

You would need to create other vectors like this one for each of the global collect variables that you use to set contact center opening and closing times.

VDN 1

```
1. wait-time 0 secs hearing ringback
2. collect 5 digits after announcement 17000 for none ["please enter security code]
3. goto step 6 if digits <> 12345
4. collect 4 digits after announcement 17001 for 0 ["please enter daily opening time"]
5. disconnect after announcement 17006 ["change is accepted"]
6. disconnect after announcement 17010 ["invalid security code"]
```

Example application using a value variable

The value variable always has a global scope and is designed to work with FACs so that the variable assignments can be quickly changed. One of the potential uses for value variables is to allow multiple call applications to be quickly switched from one operational mode to another. Such a rapid switchover capability can be useful for businesses whose operations may be impacted by unpredictable events. For example, a public utility might desire a switchover capacity to respond to widespread power outages associated with severe weather events.

To set up a value variable to use in multiple vectors to meet such a special switchover need, you could administer both a value variable and an associated FAC, as described in the following sections:

- [Administering a FAC code to use with a value variable](#) on page 158
- [Administering the value variable](#) on page 159
- [Using the value variable in multiple vectors](#) on page 159

Administering a FAC code to use with a value variable

For this example, the FAC code is accessed when you dial *23. The following administration form shows how to enable the FAC.

Note:
When you administer the FAC for the variable, note the VVx number associated with the new FAC. The VVx value must be provided in the VAC field on the Variables for Vectors form, as described in [Administering the value variable](#) on page 159.

change feature-access-codes

Page x of x

FEATURE ACCESS CODE (FAC)

Call Vectoring/Call Prompting Features

Converse Data Return Code: _____

Vector Variable 1 (VV1) Code: ***23**

Vector Variable 2 (VV2) Code: _____

Vector Variable 3 (VV3) Code: _____

Vector Variable 4 (VV4) Code: _____

Vector Variable 5 (VV5) Code: _____

Vector Variable 6 (VV6) Code: _____

Vector Variable 7 (VV7) Code: _____

Vector Variable 8 (VV8) Code: _____

Vector Variable 9 (VV9) Code: _____

Administering the value variable

After you set up a FAC to use with the value variable, you need to administer the Variables for Vectors form to set up the value variable associated with the FAC.

Variable	Description	Type	Scope	Length	Start	Assignment	VAC
S	Switchover for blizzard	value	G	1		1	VV1

In the variable administration specifications shown above, verify that the VAC code has the same value that appears with the code number on the FAC administration form. If a VAC entry is not provided, you receive an intercept tone when you dial the FAC.

Using the value variable in multiple vectors

After you complete the required administration for the value variable and its associated FAC, you can use it to redirect calls from vectors used for normal operational treatments to special treatment vectors that address the switchover conditions.

The following vector step can be used in multiple vectors to implement the change in operational mode:

```
1. goto vector 123 if S = 2
```

In this example, the default value for the switchover variable is administered with a value assignment of 1, to denote normal operational modes. When a switchover due to blizzard conditions is required, the contact center administrator dials *23 to access the FAC and enters the digit 2 to indicate that switchover conditions are now in effect.

Example applications using vdn variables

The vdn variable type can be used to reduce the number of vectors required to provide differential treatment to DNIS VDNs. The following examples show different ways to use vdn variables to create a single vector that can be used by multiple VDNs, even as you maintain the ability to provide differential call treatment based on VDN identity.

The following table shows the specifications that you would provide in the Variables for Vectors form for the vdn variables that are used in the vector examples in this section.

Variable	Description	Type	Scope	Length	Start	Assignment	VAC
Y	VDN for DNIS testing	vdn	L			active	

The first example shows how the administered vdn variable can be used in a single vector to provide multiple announcement treatments based on call identity. Vector processing proceeds through a series of paired **goto** and **announcement** steps that attempt to match the call VDN with an appropriate announcement.

```

1. goto step 3 if Y <> 1001
2. announcement 2001
3. goto step 5 if Y <> 1002
4. announcement 2002
5. goto step 7 if Y <> 1003
6. announcement 2003
7. goto step 9 if Y <> 1004
8. announcement 2004
9. queue-to skill 50

```

In step 1, the call-specific value for the vdn variable is compared to one of several possible administered VDN values (**Y <> 1001**). If the vdn variable value matches the specified VDN value, an announcement treatment specific to that VDN is provided in step 2. Otherwise, vector processing branches from step 1 to the next test/announcement pair and proceeds until the caller receives an appropriate announcement treatment.

The next example shows another way that the vdn variable can be applied in a vector to implement selective call treatment. In this example, the vdn variable assigned to the call is tested against a VDN to distinguish local and non-local callers.

```
1. wait 0 secs hearing ringback
2. goto step 4 if Y = 4561          [VDN for 800 number callers]
3. announcement 2700              ["our store is located at 1300 West 120th Avenue"]
4. queue-to skill 30 pri l
5. wait-time 5 secs hearing ringback
6. announcement 1002              ["all agents are serving other customers, please wait.."]
7. wait-time 60 secs hearing music
8. goto-step 6 unconditionally
```

As shown above, step 2 tests whether the value assigned to the vdn variable is equal to the VDN associated with 800-number callers (**Y = 4561**). If so, call control branches to step 4. Otherwise, call control passes to step 3, which provides an announcement intended specifically for local callers.

Troubleshooting vector variables

This section includes information which may assist you to troubleshoot Variables in Vectors implementations.

Useful commands - You can use the following commands to help analyze vector variable operations:

- **list trace vector/vdn xx** - When you use a list trace command to analyze vector operations, the current values assigned to the variables used in vector steps are displayed in the report.
- **list usage variables [x]** - This command provides a list of all vectors that use variables and specifies which administered variable is used in each vector. You can optionally filter the list if you include a specific (A-Z) administered variable.

Variable-related vector events - The following vector events are associated with vector operations:

- Event type 37: "collect" digits for variable error
- Event type 38: variable not defined
- Event type 213: No digits in variable

For more information, see [Vector events](#) on page 592.

■ ■ ■ ■ ■ ■ Advanced Vector Routing - EWT and ASA

Several Advanced Vector Routing features can be used to enhance conditional routing capabilities of Basic Call Vectoring in order to achieve additional efficiencies in contact center operations. These features include:

Rolling Average Speed of Answer (ASA) - Rolling ASA Routing allows routing decisions to be based on the current average time for a call to be answered in a split or VDN, so that vectors route calls to the VDN or split where it is likely to be answered most quickly.

Expected Wait Time (EWT) - EWT routing allows you to make routing decisions based on the wait time in queue for a call or split. The EWT can also be passed to a VRU so that a caller can be notified of his or her expected time in queue.

VDN Calls - VDN Calls routing helps you to make routing decisions that are based on the number of incoming trunk calls that are currently active in a VDN. With the VDN Calls conditional, a vector can be used to limit the number of simultaneous calls that are made to a particular VDN. For example, if a service agency is contracted to handle 100 simultaneous calls for a client, calls in excess of that number can be routed to a **busy** step.

This section includes the following topics:

- [Advanced Vector Routing command set](#) on page 164
- [When to use wait time predictions](#) on page 165
- [Expected Wait Time \(EWT\)](#) on page 166
- [Rolling Average Speed of Answer \(ASA\)](#) on page 173
- [VDN Calls](#) on page 177

Advanced Vector Routing command set

The commands used in Advanced Vector Routing are listed in the following table.

Command category	Action taken	Command
Routing		
	Queue the call to a backup ACD split.	check split
Branching/programming		
	Go to a vector step. Go to another vector.	goto step goto vector

When to use wait time predictions

A number of factors can affect the accuracy of wait time predictions. Wait time predictions are best suited for medium-volume or high-volume call scenarios. The potential accuracy of a wait time predictor increases as the rate of removal from queue increases.

Under all conditions, EWT is the most accurate wait time predictor, but EWT is most accurate when the rate of removal from queue at a given split priority level is at least one call every 30 seconds. For more information, see [Expected Wait Time \(EWT\)](#) on page 166.

Predictions can be made for a split with multiple priority levels as long as the majority of calls are delivered to lower priority levels. If the majority of calls are queued at the higher-priority levels, any predictions made for the lower-priority levels may not be accurate.

The following circumstances can limit the accuracy of the wait time predictions.

System restart or new split administration - The EWT algorithm uses a combination of historical and real-time information to make predictions. When no historical information exists, such as when a new split is added or a reset system 3 or 4 is completed, there is the potential for inaccuracies.

To prevent inaccurate predictions when there is no historical information, administer the Expected Call Handling Time field on the Hunt Group form. The value in this field is then used in place of the missing historical data.

If the value of this field does not accurately reflect the call handling times of the split, EWT predictions may be inaccurate until some call history is generated. The algorithm normally requires about 30 queued calls to be answered from a split priority level before it reaches its maximum accuracy.

You can change the value in the Expected Call Handling Time field by executing a change hunt group command. Changing the value does not disrupt EWT predictions by overwriting EWT history. The value is stored and used the next time a reset system 3 or 4 is executed.

Low call volume applications - Split priority levels where the rate of removal from the queue is very low can only be predicted with limited accuracy.

Sites with frequent staffing changes - Although EWT immediately adjusts for all types of staffing changes, since predictions may have already been made for calls that are waiting in queue, those past predictions were based on staffing information which is now out of date. Therefore, the EWT in scenarios where large staffing changes are continually happening can only be predicted with limited accuracy.

Staffed agents who rarely answer calls to a split - The EWT algorithm takes account of agents in multiple splits in its calculation. However, suppose there are many agents who are assigned to a split but spend most of their time answering calls in their other splits. If a

large number of these agents are moved to or from the split, the EWT for this split may be temporarily inaccurate until it adjusts to those changes.

Applications with widely varying call handling times - If the majority of calls to a split are handled within a narrow range of times, the accuracy of any predictor will be much greater than that for a split where call handling times are widely different.

Expected Wait Time (EWT)

EWT routing allows you to make routing decisions based on the time that a caller can expect to wait in queue.

This section includes the following topics:

- [How EWT is calculated](#) on page 166
- [EWT for a split](#) on page 167
- [EWT for a call](#) on page 168
- [Passing EWT to a VRU](#) on page 168
- [Notifying callers of wait time without a VRU](#) on page 169
- [Using EWT to route to the best split](#) on page 171
- [Factors that affect EWT values](#) on page 172
- [Troubleshooting EWT](#) on page 173

How EWT is calculated

Depending on how the EWT condition is used in a vector step, the predicted wait time calculation is derived by the following rules:

- If the call is currently queued to a split, the EWT is based on the actual current position of the call in the queue at a particular priority level and the rate of service of calls from the queue at that priority level.
- If the call is not yet queued to a split, the EWT is based on the assumption that the call is placed at the end of the queue and then considers the factors listed above.

EWT also adjusts for many other factors such as multiple split queuing, call handling times, and the impact of direct agent calls on the wait time of other calls to the split. The algorithm adjusts EWT immediately for changes in staffing, such as agents logging in or taking breaks in AUX work mode.

The EWT can also be passed to a VRU so that a caller can be notified of his or her expected time in queue. The **expected-wait** condition can be used with either the **goto** or **check** commands.

Call vectoring offers several conditionals that can be used to estimate predicted wait time on a queue, including EWT, rolling ASA and Oldest Call Waiting (OCW), but EWT uses the most accurate method of prediction. EWT considers more real-time and historical information, such as priority level, position in queue, and number of working agents.

EWT is responsive to changing contact center conditions. For example, EWT adjusts instantly to any staffing changes in the split, or if agents moves in or out of auxiliary work mode, the wait time predictions immediately adjust.

EWT does not include the time in a call vector before the call enters a queue. It also does not include the time that the call rings at a telephone after it is removed from the queue.

For more information about the use and accuracy of wait time predictors, see [When to use wait time predictions](#) on page 165.

EWT for a split

The EWT for a split is the time that an incoming call is expected to remain in queue if it is queued to the split at the specified priority level. It is generally used to determine if a call should be queued to the split.

The following vector example shows how to use EWT to determine if a call should be queued to a split.

```
1. goto step 3 if expected-wait for split 1 pri l < 600
2. busy
3. queue-to split 1 pri l
4. announcement 3001
5. wait-time 998 secs hearing music
```

In the example shown above, the following wait time conditions are possible:

- If there are agents available, EWT is zero.
- EWT is infinite if:
 - There are no logged-in agents.
 - All logged-in agents are in AUX work mode.
 - The split queue is full.
 - There is no split queue and all agents are busy.
 - The split queue is locked. This occurs when the last working agent in a non-vector-controlled split attempts to go into AUX work mode.

EWT for a call

EWT for a call is the remaining time that a caller can expect to wait before his or her call is serviced from the queue. If the call is queued to multiple splits, the remaining queue time for each of the splits is calculated, and the shortest calculation is used as the EWT.

For a call to have an expected wait time it must be queued to at least one split. If it is not queued, or if it is queued to splits that are not staffed, the EWT value is infinite.

The following vector example vector shows how EWT is used to determine call treatment.

```
1. queue-to split 1 pri m
2. check split 2 pri m if expected-wait < 30
3. goto step 5 if expected-wait for call < 9999
4. busy
5. announcement 3001
6. wait-time 998 secs hearing music
```

Passing EWT to a VRU

The EWT for a call can be passed to a VRU to inform callers about their expected time in queue. EWT is passed to the VRU with the **converse-on** command as “wait” data. The value that is outputted to the VRU is the expected wait time of the call in seconds. The VRU can then convert the seconds to a spoken message. The expected wait is calculated after the VRU port answers the call, so queuing to a converse split does not adversely impact the EWT value that is passed to the VRU.

No zero padding is added to the wait time that is passed to the VRU. If the EWT for the call is 128 seconds, the digits 1, 2, and 8 are outputted. If the EWT is 5 seconds, the digit 5 is outputted.

The wait time that is passed to the VRU is the most accurate prediction possible. On average, 50% of the time the actual wait time will be shorter and 50% of the time it will be longer. Avaya recommends that VRU applications be configured to make an upward adjustment of the prediction so that the majority of callers receive a predicted wait time that is either equal to, or greater than, the actual wait time.

The VRU can also announce EWT at set intervals while the call is in queue, but this strategy should be used with caution. Circumstances such as a reduction in the number of agents or a sudden influx of higher priority calls could cause the caller’s EWT to increase from one announcement to the next.

If the call is not queued, or if it is queued only to splits that are unstaffed or splits where all agents are in AUX work mode, the end-of-string character “#” is the only data item that is outputted to the VRU.

The following vector example illustrates routing based on the predicted split wait time and passing wait data to the VRU. Wait time is given to the caller only if the caller is expected to wait a total of more than 60 seconds in queue. Callers who would wait more than 10 minutes are told to call back later.

```
1. goto step 3 if expected-wait for split 32 pri 1 < 600
2. disconnect after announcement 13976
3. queue-to split 32 pri 1
4. wait-time 20 secs hearing ringback
5. goto step 7 if expected-wait for call < 40
6. converse-on split 80 pri 1 passing wait and none
7. announcement 11000
8. wait-time 60 secs hearing music
9. goto step 7 if unconditionally
```

Calls that have predicted wait times greater than 10 minutes fail step 1 and are disconnected after an announcement. If the expected wait time is less than 10 minutes step 1 routes the call to step 3 where it is queued to split 32 and waits 20 seconds hearing ringback. After 20 seconds if the expected wait time for the call is less than 40 seconds, step 5 routes the call to an announcement followed by a wait with music. If the expected wait time for the call is equal to or greater than 40 seconds, step 6 informs the caller of the amount of time that he or she can expect to wait before the call is answered.

Notifying callers of wait time without a VRU

You can use EWT to notify callers of their expected wait time without a VRU. This can be done using recorded announcements and by associating each recorded announcement with a “time band”, as shown in the following example.

```
VECTOR 101
1. queue-to split 3 pri h
2. goto step 4 if expected-wait for call <= 600
3. busy
4. wait-time 12 seconds hearing ringback
5. announcement 3001 ("Thank you for calling ABC Inc. All agents
   are busy, please wait and we will get to your call as soon as
   possible")
6. goto vector 202 if unconditionally

-----

VECTOR 202
1. goto step 13 if expected-wait for call > 280
2. goto step 11 if expected-wait for call > 165
3. goto step 9 if expected-wait for call > 110
4. goto step 7 if expected-wait for call > 55
5. announcement 3501 ("Thank you for waiting.
   Your call should be answered within the next minute")
6. goto step 14 if unconditionally
7. announcement 3502 ("Thank you for waiting. Your call should be
   answered within approximately one to two minutes")
8. goto step 14 if unconditionally
9. announcement 3503 ("Thank you for waiting. Your call should be
   answered within approximately two to three minutes")
10. goto step 14 if unconditionally
11. announcement 3504 ("Thank you for waiting. Your call should be
   answered within approximately three to five minutes")
12. goto step 14 if unconditionally
13. announcement 3505 ("We apologize for the delay. Due to heavy
   call volume, you may have to wait longer than five minutes
   to speak to a representative. If possible, we suggest that you
   call between the hours of 8am and 10am for the fastest service")
14. wait-time 120 secs hearing music
15. goto step 1 if unconditionally
```

In step 1 of the example shown above, the call is queued to split 3 at high priority. If the call fails to get a queue slot in split 3, if split 3 has no working agents, or if the wait time in split 3 at high priority exceeds 10 minutes, step 2 fails and the caller receives a busy signal. If step 2 succeeds, the caller hears ringback and an announcement and is then sent to vector 202.

Steps 1 through 4 of vector 202 determine tests to determine a predicted time band interval for the remaining queuing time for the call. One of five recorded announcements is then played to provide the caller with an expected wait time.

You may want to program your vectors so that few callers experience wait times that exceed the wait time of the announcement. In the example shown above, the EWT thresholds are set lower than the times that are quoted in the recorded announcements.

Using EWT to route to the best split

You may want to use EWT to change the normal queuing strategy for multiple splits to ensure that calls are answered in the shortest possible time. However, this strategy uses additional system resources and can make it more difficult to read and analyze split reports. Alternately, you can use EWT to identify the best for each call and avoid multiple split queuing.

The following vector example shows a scenario that includes a main split (1) and a backup split (2). In this example, the preference is for an agent from the main split service the call, but a 30-second maximum wait time is a competing preference.

The strategy in this vector is to use the backup split only if the backup split can answer the call within 30 seconds and the main split cannot.

```
1. goto step 5 if expected-wait for split 1 pri m <= 30
2. goto step 5 if expected-wait for split 2 pri m > 30
3. check split 2 pri m if unconditionally
4. goto step 6 if unconditionally
5. queue-to split 1 pri m
6. wait-time 12 secs hearing ringback
7. announcement 3501
8. converse-on split 18 pri m passing wait and none
9. wait-time 120 secs hearing music
10. goto step 8 if unconditionally
```

In the example shown above, step 1 branches to step 5 (queue to the main split) if the main split can answer the call within 30 seconds. If the main split cannot answer the call within 30 seconds, step 2 checks to see if the backup split can answer the call within 30 seconds. If the test fails, the call branches to step 5 and is queued to the main split. If possible, the call is queued to the backup split in step 3. At this point, the call is queued either to the main split or to the backup split, but not to both.

Steps 6 through 10 provide audible feedback to the caller while the call is in the queue. Note that in step 8, which is executed every 2 minutes, a VRU is used to provide the caller with his or her remaining wait time.

Factors that affect EWT values

Various factors can either increase or decrease the EWT value returned to the communication server.

This section includes the following topics:

- [Factors that increase EWT for a split priority level](#) on page 172
- [Factors that decrease EWT for a split priority level](#) on page 172

Factors that increase EWT for a split priority level

The most common causes for an increase in EWT for a split priority level are:

- The number of calls that are in queue increases
- Agents log out
- Agents go on break or are otherwise in the AUX work mode
- Agents are moved to another split
- Agents with multiple splits answer an increasing number of calls in other splits

Other conditions that may also cause EWT for a split priority level to increase include:

- The average talk time increases
- The number of calls at a higher priority increases
- The number of Direct Agent calls increases
- The number of RONA calls increases
- The number of abandoned calls decreases
- The number of calls that are queued in this split but answered in another decreases.

Factors that decrease EWT for a split priority level

The most common causes for a decrease in EWT for a split priority level are:

- The number of calls in queue decreases
- Agents log in (and start answering calls)
- Agents return from break or otherwise are no longer in the AUX work mode
- Agents are moved from another split
- Agents with multiple splits answer fewer calls in other splits

The following conditions may also cause a decrease in EWT for a split priority level:

- The average talk time decreases

- The number of calls at higher priority decreases
- The number of Direct Agent calls decreases
- The number of RONA calls decreases
- The number of abandoned calls increases
- The number of calls queued in this split but answered in another increases

Troubleshooting EWT

To verify that your EWT is operating as intended, use the **list trace ewt** command to observe processing events of all calls. For more information, see [Appendix D: Troubleshooting vectors](#) on page 571.

Note:

The **list trace ewt** command is blocked when the Tenant Partitioning feature is enabled.

Rolling Average Speed of Answer (ASA)

Rolling ASA Routing helps you to make routing decisions that are based on the current average time that it takes for a call to be answered in a split or VDN. In this way, a vector can route a call to the VDN or split where it is likely to be answered most quickly.

This section includes the following topics:

- [Rolling ASA versus interval ASA](#) on page 173
- [Rolling ASA split calculation](#) on page 174
- [Rolling ASA VDN Calculation](#) on page 175
- [When to use rolling ASA](#) on page 174
- [Combining VDN and ASA routing](#) on page 176

Rolling ASA versus interval ASA

The ASA calculation used for vector routing is called *rolling* ASA to differentiate it from the *interval* ASA that is recorded in Basic Call Management System (BCMS) and Avaya Call Management System (CMS) reports.

Rolling ASA is a running calculation that does not take into account the 15-minute, half-hour, or hour reporting intervals. It does not reflect interval boundaries.

The interval ASA used for BCMS and CMS reports is calculated on reporting interval boundaries and clears to zero at the start of each reporting interval.

The rolling ASA for a split or VDN is calculated based on the speed of answer for all calls recorded since system start-up, and is recalculated every time a call is answered. During each calculation, the speed of answer for the current call is given a weighted value that is greater than previous calls. Approximately 95% of the value of rolling ASA is obtained from the previous ten calls.

Note:

Calls that are not answered, such as calls that receive a forced busy, are not considered in the rolling ASA calculation.

The rolling ASA is calculated for an entire split or VDN. The calculation does not consider the priority levels of answered calls.

When to use rolling ASA

Rolling ASA is best used to test whether vector processing should queue the call to additional splits/skills when the main split/skill does not currently meet the targeted threshold.

Rolling ASA conditionals should *not* be used to prevent calls from queuing to the main split/skill or being answered in the principal VDN. If no calls are being answered in the main split/skill or VDN, the value of rolling ASA does not change. This could result in all future calls being locked out of the main split/skill or VDN unless there are other call vectors in the system that are directing calls to them.



Important:

To implement a call flow that tests whether or not to queue a call to a main split/skill, use the EWT feature.

Rolling ASA split calculation

The rolling ASA for a split is the average call answer time, as specified by the time interval that starts when call processing attempts termination to a split, and ends when the call is answered in that split. The measured interval includes both time in queue and ringing time at the agent station.

If the call is answered in another split or the call is abandoned by the caller, rolling ASA is not recorded for the call. If a call flows into a split from another split, the time queued and

ring time for the previous split are not included. If a call is queued in multiple splits, only the rolling ASA for the split in which the call is answered is measured.

Rolling ASA VDN Calculation

The rolling ASA for a VDN is the average call answer time, as specified by the time interval that starts when call processing is initiated within the VDN until it is answered. The measured interval includes:

- Time elapsed in vector processing, including time in announcements.
- If the call is answered by an agent, time in queue and time ringing at the agent station.

Note:

If a call flows between VDNs, only the time elapsed in the answering VDN is used in the calculation.

Specifying VDNs

Rolling ASA follows the rules used for other Advanced Vector Routing conditionals to specify a VDN in a **goto** step:

- A VDN number.
- The value designated as *latest*. The latest VDN is the VDN currently processing the call. The latest VDN is not affected by VDN override settings.
- The value *active*. The active VDN is the VDN of record, which is the called VDN as modified by override rules. For example, if a call routes from a VDN with override set to **yes** then the new VDN is the active VDN. If a call routes from a VDN with override set to **no**, the previous VDN is the active VDN.

Combining VDN and ASA routing

The following vector example combines VDN and split ASA routing.

```
1. queue-to split 10 pri h
2. goto step 6 if rolling-asa for split 10 <= 30
3. check split 11 pri h if rolling-asa <= 30
4. check split 12 pri h if rolling-asa <= 30
5. check split 13 pri h if rolling-asa <= 30
6. announcement 10000
7. wait-time 40 secs hearing music
8. goto step 3 if unconditionally
```

Step 1 queues the call to the main split. If the main split is currently answering calls within the target time of 30 seconds, step 2 bypasses all of the backup splits and goes directly to the announcement in step 6. The assumption is that the call will be handled by split 10 within the time constraints. However, if the call is not answered by the time that vector processing reaches step 8, the backup splits are checked.

If the rolling ASA for the main split is greater than 30 seconds, steps 3, 4, and 5 check the backup splits. The call is queued to any of these splits that have a rolling ASA of 30 seconds or less. If the call still is not answered by the time that vector processing reaches step 8, the backup splits are checked again.

VDN Calls

VDN Calls routing allows you use the counted-calls conditional to make routing decisions on the number of incoming trunk calls that are currently active in a VDN.

This section includes the following topics:

- [How VDN Call counts are calculated](#) on page 177
- [Using the counted-calls conditional](#) on page 178

How VDN Call counts are calculated

The counted-calls conditional allows a vector to limit the number of simultaneous calls directed to a particular VDN. For example, if a service agency is contracted to handle 100 simultaneous calls for a client, calls in excess of that number can be routed to a **busy** step.

VDN Call counts follows the rules used for other Advanced Vector Routing conditionals to specify the VDN in a **goto** step:

- A VDN number.
- The value designated as *latest*. The latest VDN is the VDN currently processing the call. The latest VDN is not affected by VDN override settings.
- The value *active*. The active VDN is the VDN of record, which is the called VDN as modified by override rules. For example, if a call routes from a VDN with override set to **yes** then the new VDN is the active VDN. If a call routes from a VDN with override set to **no**, the previous VDN is the active VDN.

When Advanced Vector Routing is enabled, a count of active incoming trunk calls is kept for each VDN. The VDN counter increments each time that an incoming call is placed to the VDN and decremented each time that an incoming call is released. A call is considered active in a VDN from the time the call routes to the VDN until all parties on the call are dropped and the call is released.

Note:

The call is counted for the originally called VDN only. When a call is routed to another VDN, the call counter for the subsequent VDN does not increment, nor does the call counter for the original VDN decrement.

The VDN Call count includes the following types of calls:

- Incoming trunk calls routed directly to the VDN.
- Incoming trunk night service calls in which the VDN is the night service destination.
- Calls that cover or forward to the VDN if it is the first VDN routed to and the call is an incoming trunk call.

- Already counted calls that are conferenced with counted or not counted calls from the same VDN.

The VDN call count does not include:

- Internal calls to the VDN.
- Calls that are transferred to the VDN.
- Calls that are redirected to their VDN return destination.
- Conferenced calls that were previously counted on different VDNs.

Using the counted-calls conditional

The following vector example shows how the **counted-calls** conditional can be used to route calls.

Using VDN call counting to route calls

```
1. goto step 3 if counted-calls to vdn 1234 <= 100
2. busy
3. queue-to split 60 pri 1
4. wait-time 20 seconds hearing ringback
5. announcement 27000
6. wait-time 60 seconds hearing music
7. goto step 5 unconditionally
```

If more than 100 calls are active in VDN 1234, the caller hears a busy signal and vector processing is terminated. If 100 or fewer calls are active, the call queues to split 60.

■ ■ ■ ■ ■ ■

ANI /II-digits routing and Caller Information Forwarding (CINFO)

The ANI (Automatic Number Identification) and II-digits (Information Indicator Digits) Call Vectoring features help you to make vector routing decisions based on caller identity and the of originating line. Caller Information Forwarding (CINFO) makes it possible for you to collect caller entered digits (ced) and customer database provided digits (cdpd) for a call from the network.

When ANI and II-digits are provided with an incoming call to a VDN, they are sent to Avaya Call Management System (CMS) when vector processing starts. ANI, II, and CINFO digits are forwarded with interflowed calls. ANI and II-digits are also passed over ASAI in event reports.

This section includes the following topics:

- [Command sets](#) on page 180
- [ANI routing](#) on page 181
- [II-digits routing](#) on page 184
- [Caller Information Forwarding](#) on page 191

Command sets

The following table lists the commands that are used by ANI, II-digits, and CINFO digits.

Command category	Action taken	Command
Branching / Programming		
	Go to a vector step (ANI, II-digits). Go to a vector step that is based on ced or cdpd (CINFO digits).	goto step
	Go to another vector (ANI, II-digits). Go to another vector based on ced or cdpd. (CINFO digits).	goto vector
Information Collection		
	Pass ANI to a Voice Response Unit. Pass ced and cdpd to a Voice Response Unit (CINFO).	converse-on
	Collect ced and cdpd from a network ISDN SETUP message.	collect digits
Routing		
	Route the call to a number that is programmed in the vector, based on ced or cdpd.	route-to number
	Route the call to digits supplied by the network.	route-to digits
	Request routing information from an ASAI adjunct that is based on ced or cdpd.	adjunct-routing

ANI routing

ANI provides information about the caller identity that can be used to improve call routing decisions. For example, calls from a specified customer can receive unique routing, local calls can be routed differently from long distance calls, or calls from different geographical areas can receive different routing. ANI also can be compared against entries in a Vector Routing Table.

This section includes the following topics:

- [ANI basics](#) on page 181
- [ANI routing example](#) on page 182
- [Using ANI with vector routing tables](#) on page 183

ANI basics

Calling Party Number (CPN) and Billing Number - ANI is based on the Calling Party Number (CPN). It is not always identical to the Billing Number. For example, if the call is placed by a user from a switch, the CPN can be either the switch-based billing number or the station identification number.

String length - The ANI routing digit string can contain up to 16 digits. This supports international applications. However, ANI information in North America contains only 10 digits.

Call types that use ANI - The following call types have ANI values associated with them:

- Incoming ISDN-PRI calls that send ANI
- Incoming R2MFC signaling calls that send ANI
- DCS calls
- Internal calls

Note:

If ANI is not provided by the network for an incoming call, ANI is not available for vector processing on that call.

Use of wildcards - The ANI value that is specified for a goto step can include the "+" and/or the "?" wildcards. The "+" represents a group of zero or more digits and can be used only as the first or last character of the string. The "?" represents a single digit. Any number of the wildcard can be used at any position in the digit string.

Use with vector routing tables - ANI data can be tested against ANI numbers provided in vector routing tables. For more information, see [Using ANI with vector routing tables](#) on page 183.

EAS agent calls - When an EAS agent makes a call to a VDN, the agent's login ID is used as the ANI instead of the number of the physical terminal.

Internal transfer to VDN - When a call is transferred internally to a VDN, the following outcomes can occur:

- If the transfer is completed before the call reaches the ANI conditional, the ANI value of the originator of the call is used.
- If the transfer is completed after the call reaches the ANI conditional, the ANI value of the terminal that executes the transfer is used.

Tip:

To ensure that the originator's ANI is preserved during a transfer, add a filler step (such as wait with silence) to the beginning of the vector. In this way, a transfer can be completed before the ANI conditional is encountered.

ANI routing example

The following vector example shows several applications of ANI Routing.

```
1. wait-time 4 secs hearing silence
2. goto step 13 if ani = none
3. goto step 12 if ani = 3035367326
4. goto vector 74920 if ani <= 9999999
5. goto vector 43902 if ani = 212+
6. goto vector 43902 if ani = 202+
7. wait-time 0 seconds hearing ringback
8. queue-to split 16 pri m
9. wait-time 120 seconds hearing 32567 then continue
10. announcement 32456
11. goto step 9 if unconditionally
12. route-to number 34527 with cov y if unconditionally
13. route-to number 0 with cov n if unconditionally
14. busy
```

In step 2, calls that do not have ANI associated with them are routed to an operator. Step 3 routes calls from a specific telephone to a specified extension. Step 4 routes local calls, which are calls with 7 or fewer digits, to a different vector. Steps 5 and 6 route calls from area codes 212 and 202 to a different vector. Calls that are not rerouted by the previous steps are then queued.

Using ANI with vector routing tables

You can test ANI against entries in a Vector Routing Table. Vector Routing Tables contain lists of numbers that can be used to test a **goto...if ani** command. ANI can be tested to see if it is either in or not-in the specified table. Entries in the tables can also use the "+" and "?" wildcards.

The example Vector Routing Table shown below includes various area codes for the state of California.

VECTOR ROUTING TABLE		
Number: 6	Name: California	Sort? n
1: 714+	17: _____	
2: 805+	18: _____	
3: 619+	19: _____	
4: 707+	20: _____	
5: 209+	21: _____	
6: 310+	22: _____	
7: 213+	23: _____	
8: 408+	24: _____	
9: 510+	25: _____	
10: 818+	26: _____	
11: 909+	27: _____	
12: 916+	28: _____	
13: 415+	29: _____	

The following vector example shows how calls can be routed based on information provided in the Vector Routing Table shown above.

```

1. announcement 45673
2. goto step 9 if ani = none
3. goto vector 8 if ani in table 6
4. queue-to split 5 pri l
5. wait-time 10 seconds hearing ringback
6. announcement 2771
7. wait-time 10 seconds hearing music
8. goto step 6 if unconditionally
9. route-to number 0 with cov y if unconditionally

```

In the example vector shown above, if no ANI is available for the call, it is routed to an operator. If the first three numbers match an area code from table 6, the call is routed to vector 8. All other calls are queued.

II-digits routing

II-digits provide information about the originating line for a call. This information can be used for a variety of purposes, such as:

- Help detect fraudulent orders for catalog sales, travel reservations, money transfers, traveler's checks, and so forth
- Assign priority or special treatment to calls that are placed from pay telephones, cellular telephones, motel telephones, and so forth. For example, special priority could be given by an automobile emergency road service to calls that are placed from pay telephones
- Detect calls placed from pay telephones when it is the intention of the caller to avoid being tracked by collection agencies or dispatching services
- Convey the type of originating line on the agent display by routing different type calls to different VDNs

This section includes the following topics:

- [II-digits basics](#) on page 184
- [II-digits codes](#) on page 186
- [II-digits routing example](#) on page 190

II-digits basics

String description - II-digits is a 2-digit string that is provided for an incoming call by ISDN PRI. II-digits delivery is a widely available ISDN PRI AT&T Network service. This service is bundled with ANI delivery and tariffed under the MEGACOM 800[®] and MultiQuest 800[®] INFO-2 features to provide information about call origination. R2-MFC Call Category digits, when available, are treated as II-digits for routing.

Leading zeros are significant. For example, the II-digits value "02" that is associated with a call will not match the digit string "2" in a vector step.

Use with a vector routing table - As is true for ANI routing and collected-digit routing, II-routing digits can be compared against entries in a Vector Routing Table.

Use of wildcards - The II-digits string used in a vector step or a vector routing table can contain either the "+" or "?" wildcard.

VDN Return Destination preservation - When a call is returned to vector processing as a result of the VDN Return Destination feature, the II-digits are preserved.

Call types associated with II-digits - The following calls have II-digits values associated with them:

- Incoming ISDN PRI calls that include II-digits
- Incoming ISDN PRI Tie Trunk DCS or non-DCS calls that include II-digits

Note:

Since tandeming of II-digits is only supported if the trunk facilities used are ISDN PRI, traditional DCS does not support II-digits transport but DCS Plus (DCS over PRI) does.

Internal transfer to a VDN - When a call with II-digits is transferred internally to a VDN, the following outcomes can occur:

- If the transfer is completed before the call reaches the II-digits conditional, the II-digits value of the originator of the call is used.
- If the transfer is completed after the call reaches the II-digits conditional, the II-digits value of the terminal that is executing the transfer is used. Under normal circumstances, there are no II-digits for a terminal that executes a transfer.

Tip:

To ensure that the originator's II-digits is preserved, add a filler step such as **wait with silence** to the beginning of the vector. In this way, a transfer can be completed before the II-digits conditional is encountered.

II-digits codes

The following table lists the current assignments for II-digits.

Note:

II-digit assignments are maintained by the North American Numbering Plan Administration (NANPA). To obtain the most current II digit assignments and descriptions, go to:

http://www.nanpa.com/number_resource_info/ani_ii_assignments.html

II-digits assignments

II-digits	Description
00	Plain Old Telephone Service (POTS) - non-coin service requiring no special treatment
01	Multiparty line (more than 2) - ANI cannot be provided on 4 or 8 party lines. The presence of this "01" code will cause an Operator Number Identification (ONI) function to be performed at the distant location. The ONI feature routes the call to a CAMA operator or to an Operator Services System (OSS) for determination of the calling number.
02	ANI Failure - the originating switching system indicates (by the "02" code), to the receiving office that the calling station has not been identified. If the receiving switching system routes the call to a CAMA or Operator Services System, the calling number may be verbally obtained and manually recorded. If manual operator identification is not available, the receiving switching system (e.g., an interLATA carrier without operator capabilities) may reject the call.
03-05	Unassigned
06	Station Level Rating - The "06" digit pair is used when the customer has subscribed to a class of service in order to be provided with real time billing information. For example, hotel/motels, served by PBXs, receive detailed billing information, including the calling party's room number. When the originating switching system does not receive the detailed billing information, e.g., room number, this "06" code allows the call to be routed to an operator or operator services system to obtain complete billing information. The rating and/or billing information is then provided to the service subscriber. This code is used only when the directory number (DN) is not accompanied by an automatic room/account identification.
07	Special Operator Handling Required - calls generated from stations that require further operator or Operator Services System screening are accompanied by the "07" code. The code is used to route the call to an operator or Operator Services System for further screening and to determine if the station has a denied-originating class of service or special routing/billing procedures. If the call is unauthorized, the calling party will be routed to a standard intercept message.
08-09	Unassigned
10	Not assignable - conflict with 10X test code

II-digits assignments (continued)

II-digits	Description
11	Unassigned
12-19	Not assignable - conflict with international outpulsing code
20	Automatic Identified Outward Dialing (AIOD) - without AIOD, the billing number for a PBX is the same as the PBX Directory Number (DN). With the AIOD feature, the originating line number within the PBX is provided for charging purposes. If the AIOD number is available when ANI is transmitted, code "00" is sent. If not, the PBX DN is sent with ANI code "20". In either case, the AIOD number is included in the AMA record.
21-22	Unassigned
23	Coin or Non-Coin - on calls using database access, e.g., 800, ANI II 23 is used to indicate that the coin/non-coin status of the originating line cannot be positively distinguished for ANI purposes by the SSP. The ANI II pair 23 is substituted for the II pairs which would otherwise indicate that the non-coin status is known, i.e., 00, or when there is ANI failure. ANI II 23 may be substituted for a valid 2-digit ANI pair on 0-800 calls. In all other cases, ANI II 23 should <i>not</i> be substituted for a valid 2-digit ANI II pair which is forward to an SSP from an EAEO. Some of the situations in which the ANI II 23 may be sent: • Calls from non-conforming end offices (CAMA or LAMA types) with combined coin/non-coin trunk groups. • 0-800 Calls • Type 1 Cellular Calls • Calls from PBX Trunks • Calls from Centrex Tie Lines
24	Code 24 identifies a toll free service call that has been translated to a Plain Old Telephone Service (POTS) routable number via the toll free database that originated for any non-pay station. If the received toll free number is not converted to a POTS number, the database returns the received ANI code along with the received toll free number. Thus, Code 24 indicates that this is a toll free service call since that fact can no longer be recognized simply by examining the called address.
25	Code 25 identifies a toll free service call that has been translated to a Plain Old Telephone Service (POTS) routable number via the toll free database that originated from any pay station, including inmate telephone service. Specifically, ANI II digits 27, 29, and 70 will be replaced with Code 25 under the above stated condition.
26	Unassigned
27	Code 27 identifies a line connected to a pay station which uses network provided coin control signaling. II 27 is used to identify this type of pay station line irrespective of whether the pay station is provided by a LEC or a non-LEC. II 27 is transmitted from the originating end office on all calls made from these lines.
28	Unassigned

II-digits assignments (continued)

II-digits	Description
29	Prison/Inmate Service - the ANI II digit pair 29 is used to designate lines within a confinement/detention facility that are intended for inmate/detainee use and require outward call screening and restriction (e.g., 0+ collect only service). A confinement/detention facility may be defined as including, but not limited to, Federal, State and/or Local prisons, juvenile facilities, immigration and naturalization confinement/detention facilities, etc., which are under the administration of Federal, State, City, County, or other Governmental agencies. Prison/Inmate Service lines will be identified by the customer requesting such call screening and restriction. In those cases where private pay stations are located in confinement/detention facilities, and the same call restrictions applicable to Prison/Inmate Service required, the ANI II digit for Prison/Inmate Service will apply if the line is identified for Prison/Inmate Service by the customer.
30-32	Intercept - where the capability is provide to route intercept calls (either directly or after an announcement recycle) to an access tandem with an associated Telco Operator Services System, the following ANI codes should be used: • 30 - Intercept (blank) - for calls to unassigned directory number (DN) • 31 - Intercept (trouble) - for calls to directory numbers (DN) that have been manually placed in trouble-busy state by Telco personnel • 32 - Intercept (regular) - for calls to recently changed or disconnected numbers
33	Unassigned
34	Telco Operator Handled Call - after the Telco Operator Services System has handled a call for an IC, it may change the standard ANI digits to "34", before outpulsing the sequence to the IC, when the Telco performs all call handling functions, e.g., billing. The code tells the IC that the BOC has performed billing on the call and the IC only has to complete the call.
35-39	Unassigned
40-49	Unrestricted Use - locally determined by carrier
50-51	Unassigned
52	Outward Wide Area Telecommunications Service (OUTWATS) - this service allows customers to make calls to a certain zone(s) or band(s) on a direct dialed basis for a flat monthly charge or for a charge based on accumulated usage. OUTWATS lines can dial station-to-station calls directly to points within the selected band(s) or zone(s). The LEC performs a screening function to determine the correct charging and routing for OUTWATS calls based on the customer's class of service and the service area of the call party. When these calls are routed to the interexchange carrier via a combined WATS-POTS trunk group, it is necessary to identify the WATS calls with the ANI code "52".
53-59	Unassigned
60	TRS - ANI II digit pair 60 indicates that the associated call is a TRS call delivered to a transport carrier from a TRS Provider and that the call originated from an unrestricted line (i.e., a line for which there are no billing restrictions). Accordingly, if no request for alternate billing is made, the call will be billed to the calling line.

II-digits assignments (continued)

II-digits	Description
61	Cellular/Wireless PCS (Type 1) - The "61" digit pair is to be forwarded to the interexchange carrier by the local exchange carrier for traffic originating from a cellular/wireless PCS carrier over type 1 trunks. (Note: ANI information accompanying digit pair "61" identifies only the originating cellular/wireless PCS system, not the mobile directory placing the call.
62	Cellular/Wireless PCS (Type 2) - The "62" digit pair is to be forwarded to the interexchange carrier by the cellular/wireless PCS carrier when routing traffic over type 2 trunks through the local exchange carrier access tandem for delivery to the interexchange carrier. (Note: ANI information accompanying digit pair "62" identifies the mobile directory number placing the call but does not necessarily identify the true call point of origin.)
63	Cellular/Wireless PCS (Roaming) - The "63" digit pair is to be forwarded to the interexchange carrier by the cellular/wireless PCS subscriber "roaming" in another cellular/wireless PCS network, over type 2 trunks through the local exchange carrier access tandem for delivery to the interexchange carrier. (Note: Use of "63" signifies that the "called number" is used only for network routing and should not be disclosed to the cellular/wireless PCS subscriber. Also, ANI information accompanying digit pair "63" identifies the mobile directory number forwarding the call but does not necessarily identify the true forwarded-call point of origin.)
64-65	Unassigned
66	TRS - ANI II digit pair 66 indicates that the associated call is a TRS call delivered to a transport carrier from a TRS Provider, and that the call originates from a hotel/motel. The transport carrier can use this indication, along with other information (e.g., whether the call was dialed 1+ or 0+) to determine the appropriate billing arrangement (i.e., bill to room or alternate bill).
67	TRS - ANI II digit pair 67 indicates that the associated call is a TRS call delivered to a transport carrier from a TRS Provider and that the call originated from a restricted line. Accordingly, sent paid calls should not be allowed and additional screening, if available, should be performed to determine the specific restrictions and type of alternate billing permitted.
68-69	Unassigned
70	Code 70 identifies a line connected to a pay station (including both coin and coinless stations) which does not use network provided coin control signaling. II 70 is used to identify this type pay station line irrespective of whether the pay station is provided by a LEC or a non-LEC. II 70 is transmitted from the originating end office on all calls made from these lines.
71-79	Unassigned
80-89	Reserved for Future Expansion "to" 3-digit Code
90-92	Unassigned
93	Access for private virtual network types of service: the ANI code "93" indicates, to the IC, that the originating call is a private virtual network type of service call.

II-digits assignments (continued)

II-digits	Description
94	Unassigned
95	Unassigned - conflict with Test Codes 958 and 959
96-99	Unassigned

II-digits routing example

The following vector example shows branching calls that use II-digits to route to different VDNs.

Note:

In this example, VDN override is set to “yes” on the called VDN. In this way, the VDN name or VDN of Origin Announcement can be used to convey to the agent the type of II-digits that are associated with the call.

```

1. goto step 9 if ii-digits = none
2. goto step 10 if ii-digits = 00
3. goto step 11 if ii-digits = 01
4. goto step 12 if ii-digits = 06
5. goto step 13 if ii-digits = 07
6. goto step 13 if ii-digits = 29
7. goto step 14 if ii-digits = 27
8. goto step 15 if ii-digits = 61
9. route-to number 1232 with cov n if unconditionally
10. route-to number 1246 with cov n if unconditionally
11. route-to number 1267 with cov n if unconditionally
12. route-to number 1298 with cov n if unconditionally
13. route-to number 1255 with cov n if unconditionally
14. route-to number 1298 with cov n if unconditionally
15. route-to number 1254 with cov n if unconditionally

```

In the example shown above, if the call has no II-digits, step 1 branches to step 9, which routes the call to extension 1232. If the call has II-digits, steps 2 through 8 are used to route calls with different II-digits to various extensions.

Caller Information Forwarding

The Caller Information Forwarding (CINFO) feature allows you to associate Caller entered digits (ced) and customer database provided digits (cdpd) with several vector commands to improve call processing.

The network-provided ISDN PRI SETUP message for a call includes ced and cdpd data when both of the following conditions are met:

- The incoming trunk is enabled for ISDN-PRI.
- The network uses AT&T Network Intelligent Call Processing (ICP) service.

This section includes the following topics:

- [CINFO basics](#) on page 191
- [CINFO vector example](#) on page 193
- [CINFO interactions](#) on page 194

CINFO basics

This section includes the following topics:

- [UEC IE storage](#) on page 191
- [Use with collect digits commands](#) on page 192
- [Use of wildcards](#) on page 192
- [String length](#) on page 192
- [Vector commands that use ced and cdpd](#) on page 192
- [Internal transfer to a VDN](#) on page 193
- [Buffer storage considerations](#) on page 193

UEC IE storage

When an ISDN call is received from either the AT&T network or a tandemed PRI call, the communication server stores the Codeset 6 User Entered Code Information Element (UEC IE) when it contains the ced and/or cdpd. If more than one ced UEC IE is received, only the first one is stored or tandemed with the call. If more than one cdpd UEC IE is received, only the first one is stored or tandemed with the call.

Use with **collect digits** commands

When a **collect ced digits** or **collect cdpd digits** step is processed, the system retrieves the ced or cdpd and places them in the collected digits buffer. Any digits that were in the collected digits buffer, such as dial-ahead digits, are erased. If a TTR was connected to the call from a previous **collect digits** step, the TTR is disconnected.

Valid digits are 0 through 9, *, and #. If the ced or cdpd contain invalid digits, the communication server does not store the UEC IE. When the **collect digits** step is reached, the collected digits buffer is still cleared and if a TTR is attached, it is still disconnected. A vector event is generated to indicate that no digits were collected.

If no ced or cdpd are received from the network when a **collect digits** step is processed, the step is not processed. However, the collected digits buffer is still cleared and if a TTR is attached, it is still disconnected.

Use of wildcards

If an asterisk (*) is included in the collected digits, it is treated as a delete character. Only the digits to the right of the asterisk are collected. If a pound sign (#) is included in the collected digits it is treated as a terminating character. Only the pound sign and the digits to the left of it are collected. If a single pound sign is sent, it is placed in the collected digits buffer.

String length

The number of ced or cdpd to collect cannot be specified in the **collect digits** step. Although ced and cdpb can each contain as much as 30 digits, only 16 digits can be collected and stored. If there are more than 16 digits, a vector event is generated.

Vector commands that use ced and cdpd

The following vector steps can access CINFO ced and cdpd in the collected digits buffer:

- **adjunct routing** (digits passed in an event report as collected digits)
- **converse-on...passing digits**
- **goto...if digits...**
- **goto...if digits in table...**
- **route-to digits**
- **route-to number ... if digit...**

Tip:

You can use the CALLR INFO button on the telephone to display ced and cdpd information just like other collected digits.

Internal transfer to a VDN

When a call is transferred internally to a VDN, the following outcomes can occur:

- If the transfer is completed before the call reaches the CINFO conditional, the CINFO value of the originator of the call is used.
- If the transfer is completed after the call reaches the CINFO conditional, the CINFO value of the terminal that executes the transfer is used.

Tip:

To ensure that the originator's CINFO is preserved during a transfer, add a filler step such as wait with silence to the beginning of the vector. In this way, a transfer can be completed before the CINFO conditional is encountered.

Buffer storage considerations

To retrieve both the ced and cdpd for a call, you must use two **collect digits** steps. Because the **collect digits** command for ced or cdpd clears the collected digits buffer, the ced or cdpd that is collected first must be used before the second set is requested.

CINFO vector example

The following vector example involves a scenario in which an incoming call enters a network enabled for the ICP service. The network communication server requests information from the caller (ced) and from the contact center database (cdpd). These digits are conveyed in the call ISDN message to the communication server and then made available to **collect digits** vector steps. ced and cdpd are both used to determine routing for the call.

```

1. wait-time 2 secs hearing silence
2. collect ced digits
3. goto step 7 if digits = 1
4. goto step 11 if digits = 2
5. route-to number 0 with cov n if unconditionally
6. stop
7. collect cdpd digits
8. route-to digits with coverage n
9. route-to number 0 with cov n if unconditionally
10. stop
11. queue-to split 6 pri m
12. wait-time 10 secs hearing ringback
13. announcement 2564
14. wait-time 20 secs hearing music
15. goto step 13 if unconditionally
16. route-to number 0 with cov n if unconditionally

```

In this vector, step 1 provides a wait-time step in case calls will be transferred to this vector. Step 2 collects the ced. Steps 3 and 4 branch the call to a different vector step depending on the ced digit that was received. If no ced were received, or if the digit received was not 1 or 2, step 5 routes the call to the attendant. If the ced digit collected was 1, the call routes to a second collect step where cdpd are collected. The vector then routes the call to the cdpd. If the ced digit collected was 2, the call queues to split 6.

CINFO interactions

This section describes CINFO interactions with other features and applications.

ASAI - ced and cdpd can be passed to an ASAI adjunct as collected digits with the adjunct routing command and other event reports. ASAI will pass a maximum of 16 digits.

If a touch-tone receiver (TTR) is connected to a call as a result of ASAI-Requested Digit Collection, and the call encounters a collect ced or cdpd step, the TTR is disconnected from the call. In addition, any ASAI-requested digits that are stored in the collected digit buffer are discarded and no entered digits event report is sent.

ASAI does not distinguish between CINFO digits and user-entered digits that are collected as a result of a **collect digits** step. When CINFO digits are provided to an ASAI adjunct they are provided in the same manner as any other collected digits from a vector.

The Call Offered to (VDN) Domain Event Report will contain the digits from the most recent **collect ced** or **collect cdpd** vector step.

Best Service Routing (BSR) - BSR digits are included with the call if a multi-site BSR application routes the call to another communication server.

Avaya CMS - The Vectoring (CINFO) customer option is not required for ced or cdpd to be passed to CMS. Any version of the CMS will accept ced or cdpd.

Conference - When a conference is established, CINFO digits are merged into the call record of the conference. However, there is no indication of the party to which the digits were originally associated. For security reasons, the CINFO digits are erased when the first ISDN call drops out of the conference.

Look-Ahead Interflow - CINFO digits are included with the call if Look-Ahead Interflow routes the call to another communication server.

Transfer - If a call is transferred from the communication server, CINFO digits are lost. If a call is transferred to an internal extension, CINFO digits are retained.



Important:

If a call is transferred to a VDN, the CINFO digits should not be collected until the transferring party has had time to complete the transfer. Therefore, when transfers are likely, an appropriate wait-time step should be included before the collect step.



Information Forwarding

The Information Forwarding feature sends information with ISDN calls over public and private networks using ISDN trunks. Private networks that are enabled for Information Forwarding can also be configured for QSIG or non-QSIG protocols. Call data derived from the Information Forwarding feature can be used to enhance call processing, customer service and data collection.

Note:

ATM trunking and IP trunking can be set up to emulate ISDN PRI. For more information, see *Administration for Network Connectivity for Avaya Communication Manager*, 555-233-504, and *ATM Installation, Upgrades and Administration using Avaya Communication Manager*, 555-233-124.

This section includes the following topics:

- [Data handled by Information Forwarding](#) on page 197
- [Information Forwarding benefits](#) on page 198
- [Network requirements](#) on page 199
- [Information Forwarding support for BSR and LAI](#) on page 200
- [ASAI shared UUI IE data conversion](#) on page 203
- [Determining user information needs](#) on page 203
- [Information Forwarding troubleshooting](#) on page 206

Data handled by Information Forwarding

Information Forwarding can send the following incoming call-related information:

- ANI.
- II-Digits.
- CINFO.
- ASAI-provided user information.

Information Forwarding

- Look-Ahead Interflow (LAI) information, such as the in-queue timestamp, VDN name, and network-provided caller information, including priority level and type of interflow.
- Universal Call ID (UCID) - UCID provides a unique identifier for each call that is used to track the call. For more information, see Universal Call ID in *Administrator Guide for Avaya Communication Manager*, 555-233-506.
- Interflowed Collected Digits and in-VDN time data.

For information about administering information transport, see *Administrator Guide for Avaya Communication Manager*, 555-233-506. For detailed information about ISDN trunk group setting interactions with Information Forwarding, UCID, and multi-site routing, see [Appendix E: Advanced multi-site routing](#) on page 605.

Information Forwarding benefits

The following table lists Information Forwarding benefits:

Function	Benefit
Improved agent efficiency and service to call	Forwarding of original caller service requirements and entered prompted digits speeds service to the caller and saves the agent time.
Improved network-wide call tracking	Forwarding of UCID, In-VDN-Time and collected digits allows tracking as a single call and provides a network-wide view for call statistics.
Improved CTI integration	Forwarding of UCID, In-VDN-Time, and collected digits provides screen pop and database access applications across sites.
Forwarding of original call service requirements (VDN Name or DNIS)	Faster and more efficient agent handling, better service to the caller, and improved CTI integration
Transport of UCID	Improved call tracking as a single call and CTI integration
Collected Digits Transport	Better service to the caller because the caller doesn't have to repeat input of information, more information for the agent, better and faster call handling, improved call tracking because the collected digits are included with the call record, and improved CTI integration
Forwarding of In-VDN Time	Improved call tracking as a single call and end-to-end time-before-answer statistics

Function	Benefit
Support of ASAI user Information Forwarding	CTI integration
Globally-supported transport	Use of codeset 0 supports information transport over ISDN PRI/BRI facilities (QSIG or non-QSIG) as well as supporting operation over public networks.

Network requirements

Your network must meet the following requirements to support Information Forwarding:

- Both the private and public networks must support end-to-end transport of codeset 0 user data either as user-to-user information (UUI IE) or QSIG manufacturer specific information (MSI) in the SETUP and DISCONNECT ISDN messages. Private networks can be configured for either non-QSIG transport by way of a codeset 0 UUI IE or QSIG transport by way of MSI packaged in a codeset 0 Facility IE. Public networks do not currently support QSIG, and user data can only be transported by way of the UUI IE when supported by the network. Future public network offerings may support QSIG by way of a Virtual Private Network.
- The communication server must support the ISDN country protocol.



Important:

If testing has not been done to verify operation over the public networks that are involved with the preferred specific configuration, use of private ISDN trunking between the nodes should be assumed until successful testing is complete.

- The network byte limit for the user data portion of user information contents must be large enough to carry the data that is needed for the customer application.

Note:

Some public network providers may require service activation and/or fees for user information transport.

Information Forwarding support for BSR and LAI

When a call is interflowed to another communication server by BSR or Look-Ahead Interflow, the following data types are supported for Information Forwarding:

- Collected Digits - Any digits that are collected for the call are passed with the interflowed call, and automatically collected when the call enters vector processing at the receiving communication server.
- Elapsed in-VDN time - The elapsed time that the call has already spent at the sending communication server is passed with the interflowed call and automatically sent to the Avaya Call Management System (CMS) when the call enters vector processing at the receiving communication server.
- UCID - Universal Call ID.

The following sections describe handling and transport of Information Forwarding data in interflowed calls:

- [Forwarding collected digits with interflowed call](#) on page 200
- [Forwarding accumulated in-VDN time](#) on page 201
- [Transport by way of globally-supported methods](#) on page 201
- [LAI backward compatibility issues](#) on page 202

Forwarding collected digits with interflowed call

The following list describes how forwarded collected digits are handled in interflowed calls:

- The last set of up to 16 collected digits, not including the dial-ahead digits, are forwarded with a call interflowed over ISDN facilities.
- When processing for the call at the remote location reaches the VDN, the forwarded digits are inserted in the collected digits buffer. Therefore, a TTR is not needed. The objective is to immediately provide the collected digits to the CMS in a DIGITS message and to ASAI by way of the VDN event report in the same manner as incoming ANI.
- The collected digits are available for further routing by steps in the assigned and subsequent vectors, and eventual display to the answering agent.
- All interactions with the collected digits are the same as digits that are collected using a collect step. For example, a subsequent collect step will clear the digits.
- If the call is further interflowed or tandemed over ISDN facilities, the collected digits are tandemed with the call. If more digits are collected at the tandem communication server, the latest collected digits are tandemed.

Forwarding accumulated in-VDN time

The following list describes how forwarded in-VDN time data is handles in interflowed calls:

- When a call is interflowed, the in-VDN time in seconds, from 0 to 9999, is included. The in-VDN time is the elapsed time starting from the VDN that was originally called until when the Information Forwarding message is created.
- If the call was interflowed to the local system and in-VDN time was received for the call, the previous in-VDN time is added to the local in-VDN time.
- If the accumulated time exceeds the largest value that can be transported, the maximum value is sent.
- The accumulated in-VDN time that is received on an incoming interflowed call is forwarded to the CMS in the DNEVENT message when the call starts VDN/vector processing at the remote location.
- In-VDN time does not pass to the Basic Call Management System (BCMS) for reporting by BCMS.

Transport by way of globally-supported methods

The following list describes information transport by way of globally-supported methods:

- When a call is LAI or BSR interflowed, the following information is forwarded with the call over public or private ISDN networks using QSIG or non-QSIG protocols:
 - LAI information.
- Other call related information, including calling party number (ANI), calling party name, II-digits and CINFO digits, that is tandemed with the interflowed call in the SETUP message is forwarded in the normal manner.

Note:

The forwarded LAI information is the same as that sent in the LAI IE: VDN name (also called LAI DNIS), put in queue time-stamp, priority level and type of interflow.

- Collected digits.
- in-VDN time data in the ISDN SETUP message.

Note:

II-digits and CINFO are forwarded as codeset 6 IEs which may be a problem in some networks.

- At the remote end, the transported data is separated into its component parts for storage with the call, call vectoring, call processing and display, further interflow or

tandeming, and forwarding to adjuncts. For example, the LAI info is treated as though it was received as an incoming codeset 6 LAI IE including forwarding over ASAI as a code set 6 LAI IE in event reports.

- When a status poll call is placed to the remote location, the communication server only forwards the UCID and caller information that was received from the original call.
- In response to a status poll, the communication server forwards the reply-best status data in the ISDN DISCONNECT message over public or private ISDN PRI/BRI networks. In this case, the DISCONNECT message has a cause value of 31 “Normal–Unspecified” for wider international interoperability.
- The Multi-Site Routing related data is in addition to the associated ASAI user data, which was previously sent in a nonshared UUI IE, and the UCID data.

LAI backward compatibility issues

The following list summarizes LAI backward compatibility issues:

- A trunk group option is provided in the SETUP message for LAI interflowed calls to specify whether to include an LAI IE (codeset 6 or 7) . When this option is set to y (default), an LAI interflow (using the existing or enhanced LAI vector command) will include a codeset 6/7 LAI IE to provide inter-operability in a mixed communication server environment. The option must be set to n if the network does not support codeset 6/7 or this IE is not required.



Important:

Codeset 0 information transport by way of shared UUI is required for BSR polling calls.

- Administer the ISDN Trunk Group option: Send Codeset 6/7 LAI IE. This option is valid even if LAI at the remote site is not active for tandem situations. Use of this option for LAI does not depend on the setting of the Vectoring Best Service Routing customer option.
- If the ISDN trunk group option is set to send the LAI IE, this IE is sent in addition to the Information Forwarding by way of codeset 0 shared UUI transport when a call is LAI interflowed over a trunk in this trunk group. With shared UUI, you can set the LAI data to be excluded in the UUI IE.
- Administer the Shared UUI priorities. This is important when the network byte limit on the user data part of the UUI IE user information contents is not large enough to carry the data that is needed for the customer application. Note that Shared UUI priorities do not apply to QSIG. To determine customer application data sizes, see [Determining user information needs](#) on page 203. For instructions on how to administer Shared UUI, see *Administrator Guide for Avaya Communication Manager*, 555-233-506.

ASAI shared UUI IE data conversion

The outgoing trunk treatment controls whether ASAI data format is shared or non-shared:

- If the outgoing trunk interface is non-shared, ASAI UUI data stored in shared format is converted to non-shared format.
- If the outgoing trunk interface is shared, ASAI UUI data stored in shared format is sent in shared format.

Determining user information needs

The network byte limit on the user data part of the UUI IE user information must be large enough to carry the data that is needed for the customer application.

Note:

The UUI IE uses 3 bytes for the header information and allows from 32 bytes to 128 bytes for the user data portion. For example, if the network specifies that it can transport 32 bytes of user data, the UUI IE length is 35 bytes.

The user information capacity need is determined by adding the space that is required for each data item to be transported based on the following rules.

Minimum and maximum byte lengths - A maximum of 128 bytes of user data is supported by the communication server with UUI. Non-QSIG private networks support the full capacity. Non-QSIG public networks support a minimum of 32 bytes.

Header length - Each shared data item requires 2 bytes for the header plus the data.

Data byte length - The data byte length depends on the configuration of the customer application, except for UCID, In-VDN time, and Other LAI. These applications have a fixed byte length. For more information, see [Bytes length ranges for UUI user data](#) on page 204.

Byte length overruns - If the administered Maximum UUI IE Size is exceeded, the lowest priority items are not included until the remaining data fit. If a specific data item at a higher priority exceeds the administered UUI IE size setting, that item is not sent, leaving room for other lower priority items.

Priority settings - If the data item priority is set to blank in the Shared UUI Feature Priorities page in the Trunk Group administration form, the data item is not sent and no space is allocated for it.

QSIG considerations - QSIG signaling and networks do not have user information size limits. They will support sending MSI for user data items at their maximums. Determination of space allocation and administration of priorities does not need to be done for QSIG networks.

ASAI byte length considerations - If the network supports 128 bytes and 78 bytes or less of ASAI user data is required, you do not need to determine space allocation or administer priorities.

If your ASAI user data is greater than 78 bytes can be up to 96 bytes (98 bytes with the header), the need for other interflow shared data transport must be carefully considered in setting priorities and determining how much ASAI user data to support for the application. If the network supports the full 128 bytes and all interflow data at their maximums is transported (48 bytes), the maximum length for ASAI user data is 80 bytes (78 bytes plus header). If the full 96 bytes of ASAI user data is required (plus 2 bytes for the header), then only 30 bytes is available for other interflow data.

Bytes length ranges for UII user data

The following table specifies minimum and maximum byte lengths used to send user data over contact center networks.

Type of user data	Total user data bytes (with 2-byte header)	Description
ASAI	2 to 98 or 0 (calculated by 1 byte per byte of ASAI user information)	Required for certain CTI applications when the CTI application sends user information and the amount of space is determined by the application. For example, 34 bytes is required if the application sends 32 bytes of data. Sending more than 78 bytes of ASAI data (80 bytes with the header) reduces capacity for other interflow data.
UCID	10 or 0	Used by BSR to track calls across multiple sites. Trunk group setting and/or system feature settings control transport of UCID data, even when the priority is set to "1." When the data item is not included, it does not take up any space.
In-VDN Time	4	Used by BSR to determine time before answer and call tracking across sites. This data type can be eliminated when short waiting times are anticipated. If the priority field is not blank, it is always included.

Type of user data	Total user data bytes (with 2-byte header)	Description
VDN Name	2 to 17 (calculated by 1 byte per character in name) maximum of 15	Used by BSR, but can be eliminated if receiving sites use dedicated VDNs that display equivalent information to the answering agent. An interflowed call that is received without the originating VDN name uses the incoming VDN name. If the priority field is not blank, the 2-byte header is always included.
Collected Digits	4 to 11 or 0 (calculated by 1 byte per 2 digits plus 1) maximum of 16 digits	Requires a whole byte for an odd number of digits. For example, 1 digit requires 2 bytes (1 plus 1), 7 digits need 5 bytes (4 plus 1), and 16 digits need 9 bytes (8 plus 1).
Other LAI Info	6	Required for existing CTI applications that use any of the following obtained from the from the LAI IE: • in-queue time stamp • queue priority • interflow type

Example

Assume that your public network supports only 32 bytes of user information. Your application requires 13 bytes of ASAI user information (15 bytes of user data), UCID (10 bytes of user data), and 8 collected digits (7 bytes of user data - 4 plus 1 plus 2 for the header). It does not require Other LAI Information. Also, call time at the sending communication server is brief because calls are not queued before interflow takes place and tracking as a single call is not required.

By dedicating appropriately named VDNs at the receiving communication server, the public network can support the application. Because the needed data items require the entire 32 bytes of user data, the priority fields for the In-VDN Time, VDN Name, and Other LAI Information must be set to blank.

Information Forwarding troubleshooting

In some circumstances, UUI IE data may not be forwarded, even though you received no error messages while administering the Shared UUI feature, and all software and connections meet the minimum requirements. The following list provides items that can be evaluated to troubleshoot the problem:

Tip:

When a new application is implemented, run the **display events** command on a periodic basis for the appropriate vector. The resulting report notifies you if any UUI IE data could not be sent.

- If DCS is used, ensure that all ISDN trunks between communication server that are used for DCS or remote AUDIX are configured in the D-channel mode.
- For each ISDN trunk that is administered with the Shared UUI option, make sure that the UUI size does not exceed the UUI IE size that the network can support. For more information, see [Determining user information needs](#) on page 203.
- Verify that trunk group options are set correctly for the application and configuration.
- Applications may fail on networks supporting limited UUI transport. Administration determines which application's UUI will be transported in these cases. If a given application is failing, first check the administration to determine if the application in question has the highest priority. This applies to tandem nodes as well as to originating nodes.
- Applications that originate UUI on tandem nodes can request that assigned priorities at the tandem node be applied to the resulting UUI. Therefore, it is possible for a tandem node to erase UUI information that was received from the originator. Passing UUI through a tandem node transparently, as required for UUS Service 1, does not apply to communication server proprietary shared UUI procedures.

■ ■ ■ ■ ■ ■ Adjunct (ASAI) Routing

Adjunct Routing provides a means for an adjunct-switch application interface (ASAI) processor to specify the destination of a call when it encounters an **adjunct routing** vector command during vector processing.

An adjunct is any processor that is connected to a switch that can use the ASAI protocol. The adjunct makes a routing decision according to caller information and/or agent availability, and returns a call route response to the switch.

The switch provides information in an ASAI route request message that the adjunct application uses to access a database and determine a route for the call. In a typical application, the ASAI adjunct might use the dialed number, the Calling Party Number (CPN/BN), or the digits that are collected by way of Call Prompting to access caller information and thereby determine an appropriate call route.

Adjunct Routing can be used in conjunction with the Call Prompting and Look-Ahead Interflow features. When combined with one of those features, the following rules apply:

- When combined with Call Prompting, Adjunct Routing can pass up to 16 digits that are collected from the last relevant **collect digits** vector command.
- When combined with Look-Ahead Interflow (LAI), Adjunct Routing can pass the LAI information element or other contact center-related data (with enhanced Information Forwarding) that was passed from the originating switch in the ISDN message or associated with the call from the local switch.

This chapter includes the following major topics:

- [Considerations for implementing adjunct routing](#) on page 208
- [Receiving and implementing an ASAI call route](#) on page 210
- [Data sent with an ASAI call route request](#) on page 211
- [Special vector processing considerations associated with adjunct routing](#) on page 213
- [Effects of ASAI link/application failure on vector processing](#) on page 213
- [Adjunct routing-initiated path-replacement](#) on page 218
- [Phantom calls](#) on page 220
- [Single-step conference](#) on page 222
- [Multiple outstanding route requests](#) on page 222

Considerations for implementing adjunct routing

You should understand the following considerations before you implement a contact center solution that uses the Adjunct Routing feature:

- An adjunct specified in an **adjunct routing** command can route a call to an internal number, an external number, a split, a VDN, an announcement extension, or a particular agent. An adjunct can also provide priority ringing, priority queuing, and specify that a route-to an agent be done as a direct agent call.
- If your specific application permits you to do so, you can include two or more consecutive **adjunct routing** steps in a vector. This approach provides the following advantages:
 - Redundancy in case of ASAI link/application failure.
 - Simultaneous processing of multiple route requests, which distributes incoming call load more efficiently and results in faster call processing times. For more information, see [Multiple outstanding route requests](#) on page 222.
- Vector processing continues to occur while an ASAI route request is being processed. For this reason, the first step to follow one or more adjunct routing steps should be either an **announcement**, or a **wait time** step that adheres to the following rules:
 - If an **announcement** step follows immediately after an **adjunct routing** step, the announcement should not contain any information that is essential to the caller (such as further instructions), since it will immediately terminate when the switch receives a destination from the ASAI adjunct.
 - If a **wait-time** step follows immediately after an **adjunct routing** step, it should usually specify either **ringback** or **music** (but not **silence**) as the feedback option, so that the caller is less likely to abandon the call.

Important:

If an ASAI link/application specified in the **adjunct routing** step is out of service, the step is skipped. If the next step is not a **wait-time**, **announcement**, or **adjunct routing** step, as much as six minutes may elapse before the switch determines that the adjunct application is out of service.

- The second step after the **adjunct routing** step can, and often should, be implemented as a default treatment in case the host application or ASAI link is down. Speed of execution for the default treatment step (for example, **route-to number 0 if unconditionally**) is controlled by the following factors:
 - If the ASAI link is down, and if the first non-adjunct routing step is either a **wait-time** or an **announcement** treatment, then the treatment step is skipped and the default step that follows the skipped treatment executes immediately.

- If the host application is not down, the default step executes only if the adjunct does not provide a route within the time defined by the first non-adjunct step. For example, if the first non-adjunct step is an announcement, the default step executes only after the time defined by the length of the announcement is exceeded.
- When a vector contains an **adjunct routing** command, and an ASAI link/application failure event occurs, special rules apply to vector processing operations that result. Adjunct Routing vectors should be designed to take these special processing operations into account. For more information, see [Special vector processing considerations associated with adjunct routing](#) on page 213.
- Since vector processing continues to occur while an ASAI call route request is processed at an adjunct, succeeding vector steps can terminate an ASAI call route request if they execute before a call route can be provided by the adjunct. Alternately, the adjunct may reject the call route request, and subsequent vector processing proceeds in a normal manner. For more information, see [Vector steps that terminate an ASAI call route request](#) on page 217.
- The **wait-time hearing i-silent** command is used in cases where it is important to allow the adjunct to decide whether to accept an incoming ISDN-PRI call. When this step is encountered after an **adjunct routing** step, the switch does not return an ISDN PROGRESS message to the originating switch. This is particularly important for Network ISDN features and the Look-Ahead Interflow feature.

Receiving and implementing an ASAI call route

A switch that receives an adjunct-supplied call route performs various checks to validate the call route before it is implemented. When the adjunct-supplied route is validated, the operations that result are similar to those in effect for a **route-to xxxxx with coverage=y** command. The caller hears normal call progress tones and feedback, and if the call routes to an extension with no available call appearances and no coverage path, the caller hears a busy signal.

Any other features that may be in effect at the adjunct-supplied destination, such as Send-All-Calls or Call Forwarding, interact with the routed call.

Also, Look-Ahead Interflow operations are not applied when calls are routed over ISDN trunks. Instead, ASAI-routed calls are directed to their adjunct-supplied destination without waiting for call acceptance.

The processes associated with receiving and implementing an ASAI call route are described in the following sections:

- [Validation requirements for an adjunct-supplied call route](#) on page 210
- [Switch response to validated adjunct-supplied call routes](#) on page 211
- [Switch response to invalid adjunct-supplied call routes](#) on page 211

Validation requirements for an adjunct-supplied call route

When the switch receives adjunct-supplied call route instructions, the switch validates the route according to the following process:

1. The switch verifies that the COR rules specified for the target VDN permit the call to be terminated at the adjunct-supplied destination.
2. The switch validates the following information:
 - Destination number
 - ACD split
 - TAC/AAR/ARS access code
 - Dial plan compatibility
 - Other options specified by the adjunct
3. If the ASAI adjunct specifies the Direct Agent Call (DAC) option, the destination number (agent) must be logged into the adjunct-specified ACD split.
4. If the destination for the call is external, the switch verifies that a trunk is available for the call.

Switch response to validated adjunct-supplied call routes

If the switch validates an adjunct-supplied call route, the following operations occur:

1. Vector processing in the VDN that contains the initiating **adjunct routing** command terminates immediately.
2. The switch signals the ASAI adjunct that the route is accepted.
3. The switch routes the call to the destination specified by the ASAI adjunct.

Switch response to invalid adjunct-supplied call routes

If any of requirements for call route validation listed in [Validation requirements for an adjunct-supplied call route](#) on page 210 are not met, items the following operations occur:

1. The switch discards the route.
2. The switch signals the ASAI adjunct that the route is invalid.
3. Vector processing of any other default treatment steps in the VDN that contains the initiating **adjunct routing** proceeds.

Data sent with an ASAI call route request

When a call encounters an **adjunct routing** command and if the call is not queued to a split, the switch sends an ASAI message that requests a call route over the specified adjunct link. The following list identifies the contents of the message, along with a comment or a brief explanation for each item:

Calling number information - The calling party number or billing number (CPN/BN) that is provided by ISDN-PRI or R2MFC signaling facilities. If the call originates from a local switch extension, this extension is the calling number.

Originating line information (II-digits) - A two-digit code that is provided by ISDN-PRI facilities that indicates the type of originating line.

Called number - The originally called extension if a call is forwarded to a VDN, or the first VDN through which the call was routed if the call was not forwarded to the VDN.

If the "VDN Override for ISDN Trunk ASAI Messages" feature is in effect for an incoming ISDN call, the "active VDN" extension (instead of the Called Number received in the ISDN SETUP message) is sent in the Called Number IE for the "Call Offered", "Alerting", "Queued", "Connect" and "Adjunct Route-Request" ASAI Event Reports. For more information, see [VDN Override for ISDN Trunk ASAI Messages](#) on page 55.

Adjunct (ASAI) Routing

Routing VDN - The last VDN that routed the call to the vector that contains the **adjunct routing** command.

Call identifier - An ASAI identifier that permits the ASAI adjunct to track multiple calls by either Event Notification or 3rd Party Call Control. For more information on ASAI, see *Avaya MultiVantage CallVisor ASAI Technical Reference*, 555-230-221.

Enhanced Information Forwarding (related data) and Look-Ahead Interflow information (if any) - Includes the original VDN display information, the priority level of the call at the originating switch, and the time that the call entered vector processing. For more information, see [Look-Ahead Interflow \(LAI\)](#) on page 247, and [Information Forwarding](#) on page 197.

Digits collected by Call Prompting or Caller Information Forwarding (CINFO) (if any; maximum of 16 digits) - Digits that are collected by the most recent **collect digits** command. For more information, see [Call Prompting](#) on page 225, [ANI /II-digits routing and Caller Information Forwarding \(CINFO\)](#) on page 179, and [Information Forwarding](#) on page 197.

User-to-User Information (UUI) - User-provided data that is associated with the call. If provided by ASAI, this data was provided in a 3rd-Party-Make-Call, Auto-Dial, or Route-Select message. If provided over ISDN, the data was in the SETUP message that delivered the call to this switch. Calls that contain UUI specifically used by ASAI allow ASAI UUI to be propagated to the new call during a manual transfer or conference operation. ASAI UUI is propagated to a new call during its establishment when the agent presses the transfer/conference button the first time. If the call is transferred to a remote switch, the ASAI UUI from the first call is copied into the SETUP message sent for the second call, in which case, the alerting event message sent to an ASAI application contains the ASAI information.

Special vector processing considerations associated with adjunct routing

When you design call vectors that include one or more **adjunct routing** commands, you must be aware of a number of special operational features. These considerations are described in the following sections:

- [Effects of ASAI link/application failure on vector processing](#) on page 213
- [Simultaneous processing of vector steps and ASAI call route requests](#) on page 217

Effects of ASAI link/application failure on vector processing

An ASAI link failure can change the manner in which subsequent **announcement** or **wait-time** treatment steps are processed.

In the following simplified vector example, the step that follows immediately after an **adjunct routing** command is a **wait-time** command. If the adjunct routing step fails at either the ASAI link or adjunct application, the wait-time step is skipped.

The second step after the **adjunct routing** step is often implemented as a default treatment. In the example shown above, the default treatment in step 3 is a route to an attendant. If the switch recognizes that the ASAI link or adjunct application is out of service, this step executes immediately. Otherwise, the step executes only if the application does not respond with a route within 60 seconds (the wait-time assigned in the example).

Simplified example of vector processing in an ASAI link/application failure condition

```
1. adjunct routing link 11 . . . . . (link/application is down)
2. wait-time 60 seconds hearing ringback . . . . . (step is skipped)
3. route-to number 0 with cov n if unconditionally . . (step is executed)
4. disconnect after announcement 2000
```

Vector processing with goto steps in an ASAI link/application failure condition

Processing rules for a vector that includes one or more **adjunct routing** commands and has an ASAI link/application failure condition in effect are summarized as follows:

- An **announcement** or **wait time** treatment is skipped whenever one of the following conditions is true:
 - The treatment step follows immediately after a failed **adjunct routing** command
 - The treatment step is the first non-goto step that follows a **goto** step that succeeds. In this context, a **goto** step is considered to succeed when the specified **goto** condition is true, and the call branches from the **goto** step to the treatment step.

Adjunct (ASAI) Routing

- The treatment step is the first non-goto step that follows a failed **goto** step. In this context, a **goto** step is considered to fail when the specified **goto** condition is true, the call fails to branch, and control proceeds to the treatment because it is the next step listed in the vector sequence.

Note:

The treatment step is skipped even when a failed **goto** step that precedes it is, in turn, preceded by one or more successful **goto** steps.

The rules listed above for vector processing under ASAI link/application failure conditions are further illustrated in the following examples.

Example 1 - Vector processing with goto steps in an ASAI link/application failure condition

```
VDN (extension=1040 name='Ad Route' vector=40)
Vector 40

1. adjunct routing link 10 . . . . . (link/application is down)
2. wait-time 10 seconds hearing ringback . . . . . (step is skipped)
3. adjunct routing link 20 . . . . . (link/application is down)
4. goto step 7 if available-agents in split 20 < 1 . . (step executes and condition is false)
5. wait-time 10 seconds hearing ringback . . . . . (step is skipped)
6. goto vector 50 if unconditionally . . . . . (step executes, go to vector 50)
7. goto step 10 if calls-queued in split 20 pri l > 50
8. announcement 4001
9. goto vector 50 if unconditionally
10. route-to number 6000 with cov n if unconditionally
    VDN (extension=6000 name='Message' vector=60)
```

Based on the scenario presented in the example shown above, the following vector processing events occur:

Step 1 fails - For purposes of this example, assume that the adjunct link or application is out of service. The **adjunct routing** command in step 1 fails.

Step 2 is skipped - Because the **wait-time** command in step 2 immediately follows an **adjunct routing** command whose adjunct link is out of service, the **wait-time** step is skipped.

Step 3 fails - For purposes of this example, step 3 contains another **adjunct routing** command whose adjunct link is assumed to be out of service. The step fails, and control is passed to the **goto step** command in step 4.

Step 4 executes - A **goto** step that immediately follows a failed adjunct routing command is always executed. In this example, the command fails to branch because there is at least one available agent in split 20.

Step 5 is skipped - The **wait-time** step that follows the unsuccessful **goto** step (step 4) is skipped, because in an ASAI link failure condition, the first non-goto step to be processed after the first successful first goto step is always skipped if it is either **announcement** or **wait-time**. Control is passed to the **goto vector** command in step 6.

Step 6 executes - Step 6 routes the call to vector 50 (not shown), which is designed to queue the call and provide standard call treatment.

In the next example, assume that the **goto step** command in step 4 succeeds. In this context, the **goto** step succeeds when the specified condition is true (no agents are available in Split 20), and control is passed to step 7, where another **goto** step determines whether there are more than 50 calls in split 20. If the condition is true, step 7 succeeds and control is sent to step 10, where the **route-to number** command sends the call to vector 60.

The example processing events are described in detail below.

Example 2 - Vector processing with goto steps in an ASAI link/application failure condition

```
VDN (extension=1040  name=''Ad Route''  vector=40)
Vector 40

1. adjunct routing link 10 . . . . . (link/application is down)
2. wait-time 10 seconds hearing ringback . . . . . (step is skipped)
3. adjunct routing link 20 . . . . . (link/application is down)
4. goto step 7 if available-agents in split 20 < 1 . . (step executes and condition is true)
5. wait-time 10 seconds hearing ringback
6. goto vector 50 if unconditionally
7. goto step 10 if calls-queued in split 20 pri l > 50 (step executes and condition is true)
8. announcement 4001
9. goto vector 50 if unconditionally
10. route-to number 6000 with cov n if unconditionally (step executes unconditionally)

VDN (extension=6000  name=''Message''  vector=60)
Vector 60

1. announcement 4000 (''We're sorry. We are still . . (step executes)
   unable to connect you to an agent. If you'd like to
   leave a message, please do so after the tone.
   Otherwise, please call back weekdays between 8:00
   A.M. and 5:00 P.M. Thank you.'')
2. wait-time 6 seconds hearing silence
3. messaging split 18 for extension 1500
4. announcement 4010 (''We're sorry. We were unable to
   connect you to our voice mail. If you'd like to try
   to leave a message again, please do so after the
   tone. Otherwise, please call back weekdays between
   8:00 A.M. and 5:00 P.M. Thank you.'')
5. goto step 2 if unconditionally
```

Based on the scenario presented in the example shown above, the following vector processing events occur:

Step 1 fails - For purposes of this example, the adjunct link or application is out of service. The **adjunct routing** command in step 1 fails.

Step 2 is skipped - Because the **wait-time** command in step 2 immediately follows an **adjunct routing** command whose adjunct link is out of service, the **wait-time** step is skipped.

Step 3 fails - For purposes of this example, step 3 contains another **adjunct routing** command whose adjunct link or application is also out of service. The step fails, and control is passed to the **goto step** command in step 4.

Step 4 executes - A **goto** step that follows a failed adjunct routing command is always executed. In this example, the command succeeds and branches to step 7, because no agents are available in split 20.

Step 7 executes - Again, a **goto** step that follows a failed adjunct routing command is always executed. In this example, the command branches unconditionally to Vector 60

Step 10 executes - In this example, step 10 (**route-to number**) is the first non-goto step immediately preceded by one or more **goto** steps in an ASAI link fail condition. The step executes, because it not an **announcement** or **wait time** command.

Vector 60: Step 1 executes - The first step in this vector is an **announcement** command. In this example, this is the first step in the processing sequence to be either an announcement or wait time step. However, this step is not skipped, since it is not the first non-go to step in the processing sequence. Instead, step 10 in Vector 40 (a **route-to number** step) is the first non-goto step.

Simultaneous processing of vector steps and ASAI call route requests

When the switch sends a route request to an ASAI adjunct, vector processing continues for any vector steps that follow the **adjunct routing** command. Therefore, non-adjunct routing step that follows immediately after an **adjunct routing** step (or multiple adjunct routing steps in uninterrupted succession) can determine:

- The maximum length of time that the switch waits for a call route reply from the ASAI adjunct
- In some cases, whether or not the ASAI call route request is allowed to finish processing

If the next step is not a **wait-time**, **announcement**, or another **adjunct routing** command, as much as six minutes may elapse before the switch determines that the adjunct application is out of service. For this reason, the recommended practice is to design vectors so that the next step to follow an **adjunct routing** command is either a **wait-time**, or **announcement** step.

Vector steps that terminate an ASAI call route request

If an **adjunct routing** step is followed by a **wait-time** or **announcement** treatment, and the treatment completes before an ASAI call route request is returned by the adjunct, call processing continues for any vector steps that may follow the treatment. In this case, certain vector commands will terminate the ASAI call route request when they are executed. Vector commands that terminate an active ASAI call route request include:

- **busy**
- **check split**
- **converse-on split**
- **queue-to split**

- **collect digits**
- **disconnect**
- **messaging split**
- **route-to**

If a valid ASAI call route message is received by the switch before one of the vector commands listed above can execute, the system routes the call to the destination specified by the adjunct route. Otherwise, the ASAI route request is terminated.

Note:

The adjunct can also reject a call request by “negatively acknowledging” the route request that is sent by the switch. When the switch receives a route request rejection message from the adjunct, any **announcement** or **wait-time** step that is being executed is immediately terminated. Call processing then continues with the next vector step.

Adjunct routing-initiated path-replacement

Path replacement for calls in queue and vector processing, using QSIG or DCS with Reroute using ISDN SSE, is available for Avaya switch software R9.5 or later. For calls that are waiting in queue or in vector processing, even if the call is not connected to an answering user, path replacement can be attempted to find a more optimal path for this call. This results in more efficient use of the trunk facilities.

When adjunct routing is used with a call, path-replacement can be initiated when the following criteria are true:

- The inbound call is over an ISDN QSIG trunk or ISDN DCS SSE trunk
- A route-select response is received from the CTI application after the **adjunct route** vector command has been executed
- The routing destination that is contained in the route select ASAI message is to an outbound ISDN QSIG trunk or out bound ISDN DCS SSE trunk

When all three criteria are met, the trunk is then seized and used for the call.

Note:

This ability to track a measured ACD call after path replacement has taken place is available for CMS versions r3v9ah or later.

Example vector for adjunct routing-implemented path replacement

The following Call Vector example shows how a vector for adjunct routing can be written to trigger path-replacement at the terminating switch.

Note:

In order for a path-replacement to be attempted, the incoming and outgoing trunks that are used for the call must be administered with the Supplementary Service Protocol field set to b.

Adjunct routing-initiated path-replacement vector

- | |
|--|
| <ol style="list-style-type: none">1. announcement 59962. adjunct routing link 34543. wait 20 seconds hearing ringback4. announcement 3111 |
|--|

At the terminating (receiving) switch, the vector that is executed by the incoming call must be programmed with an **announcement**, **wait hearing music**, or **wait hearing ringback** vector command. The use of one of these commands is what makes it possible for path-replacement to take place while the call is in vector processing.

Phantom calls

A phantom call is a call that originates from a nonphysical device by way of an ASAI application and may be placed anywhere. In general, phantom calls

- Use less resources
- Are treated like voice calls

How do phantom calls work?

First, an application requests a phantom call by sending an ASAI `third_party_make_call` or `auto_dial` capability message to the switch.

If the specific extension of a station administered without hardware (AWOH) is specified as the originator, the switch places the call from that extension if the extension is available.

It is also possible to specify a hunt group extension with members that are AWOH extensions as the originator.

How are phantom calls used?

Applications use phantom calls when they need to originate a call without using a physical device and thus not use extra resources. For example, applications may need to:

Reserve a queue slot - Many contact centers handle incoming requests as voice, video, data, voice messages, faxes, and e-mail. Agents who work in these contact centers need to handle the mix of requests. However, a single queue needs to manage and distribute the work load for these agents.

For each non-voice request, the application can place a phantom call into the queue. When the phantom call reaches the head of the queue, it is delivered to the agent. The agent is then given the corresponding work item on the desktop, for example, the fax.

Conference control - Multiple parties (both internal and external) can be conferenced into a call. The initial call is placed as a phantom call. When answered, the call is placed on hold by the application and another phantom call is made. The two calls are then conferenced together. This process is repeated until all parties are added to the call.

Help with trunk-to-trunk transfers. - Working with the Single Step Conference feature, applications can use the phantom call feature to help with trunk-to-trunk transfers, that is, transferring a trunk-to-trunk call to another trunk. For information about single step conferences, see the *Avaya MultiVantage CallVisor ASAI Technical Reference*, 555-230-221.

Alerts (wake-up, maintenance, and security) - Applications can use phantom calls to alert users of various conditions such as wake-up, maintenance, or security.

How do phantom calls affect Call Vectoring?

Because phantom calls can be directed anywhere, you must properly configure the application and the switch to ensure that the vector commands that are executed for these calls make sense. For more information, see the *Avaya MultiVantage CallVisor ASA Technical Reference*, 555-230-221.

The switch does not block phantom calls from executing any vector commands because phantom calls follow the same vector processing as regular voice calls. However, it might not make sense to have phantom calls enter certain vector steps such as:

Announcements - Because there is nobody listening to an announcement that is made to a phantom call, there is no sense in playing one.

“collect” steps - In a phantom call, the **collect** step fails because it can not connect a tone receiver to a station AWOH (Administration without hardware); it times out because there is nobody to put in the expected digits.

The **busy** step provides a busy signal to the caller. In a phantom call, the **busy** step disconnects the call because the switch clears a phantom call when the call cannot terminate at a specific local destination.

Phantom call administration

There are no administration forms that are specific to phantom calls, but the following criteria must be met in order for the feature to work:

- Some stations AWOH must be administered.
- If a hunt group is specified as originator, a non-ACD hunt group with AWOH members must also be administered.
- It is recommended that meaningful names are assigned for the stations AWOH that are used by phantom calls if the calling party name will appear on the agent's or Service Observer's display.

Single-step conference

The Single-Step Conference (SSC) feature is available for Avaya switch software R6.3 or later. SSC allows an application to:

- Add a device into an existing call, for example, to play announcements or make voice recordings
- Facilitate application-initiated transfers and conferences

Stations that are AWOH are eligible for single-step conference. The party may be added to a call in listen only mode (no visibility) or with listen and talk capability (visibility).

Single-step conference is only available through an ASAI link. For more information about single-step conference, see the *Avaya MultiVantage CallVisor ASAI Technical Reference*, 555-230-221.

How does SSC work with Call Vectoring?

The call to which an extension is to be single-step conferenced is not allowed to be in vector processing unless the visibility option with the single-step conference request indicates “no visibility.”

To be transferred to a VDN, a conference call must not have more than two parties.

Note:

Invisible (listen-only) Single-step-Conference parties are not counted in the two-party limit for a conference call transfer to a VDN.

Multiple outstanding route requests

This feature allows multiple ASAI route requests for the same call to be simultaneously active. The route requests can be over the same or over different ASAI links.

Route requests are all made from the same vector. They must be specified without intermediate (**wait-time**, **announcement**, **goto**, or **stop**) steps. If the adjunct routing commands are not specified back-to-back, standard adjunct routing functionality applies and previous outstanding route requests are cancelled when an adjunct routing vector step is executed.

The first route select response that is received by the switch is used as the route for the call and all other outstanding route requests for the call are canceled.

With multiple outstanding route requests, multiple adjuncts can process the route call request without waiting for the first route attempt to fail. An application can make use of this

feature to distribute the incoming call load evenly across adjuncts based on the adjunct's current CPU load.

Note:

Each link has a unique extension number, even in a configuration where there might be multiple links to the same adjunct.

Multiple call route request example

The following example shows a typical vector where multiple adjunct route requests to multiple links are active at the same time. The first adjunct to route the call is the active adjunct and it specifies which VDN the call should be routed to at that point.

Sample adjunct routing vector with redundancy

1. wait-time 0 seconds hearing ringback
2. adjunct routing link 1001
3. adjunct routing link 1002
4. adjunct routing link 1003
5. wait-time 6 seconds hearing ringback
6. route-to number 1847 with cov n if unconditionally default routing)

■ ■ ■ ■ ■ ■ Call Prompting

Call Prompting provides flexible call handling that is based on information that is collected from a calling party. This information is in the form of dialed digits that originate from an internal or external touch-tone telephone or from an internal rotary telephone that is on the same switch as the vector. Call Prompting allows for the temporary transfer of call management control to the caller.

With Call Prompting and Vectoring enabled, the switch can collect caller entered digits (ced) and customer database provided digits (cdpd) that are supplied by the network. The system can receive Call Information Forwarding (CINFO) digits in an incoming call's ISDN message when the AT&T Network Intelligent Call Processing (ICP) service is in use. A switch can collect digits and forward those digits to other switches by way of interflow commands. For more information, see [Caller Information Forwarding](#) on page 191.

With Voice Response Integration (VRI), digits can be returned to the switch by a Voice Response Unit (VRU) script that is accessed by a **converse-on split** command. Such digits can also be used for call management.

Call Prompting can be used in various applications so that calls can be handled with more flexibility.

This chapter includes the following topics:

- [Command set](#) on page 226
- [Touch-tone collection requirements](#) on page 227
- [Call Prompting digit entry — collect digits command](#) on page 228
- [Functions and examples](#) on page 230
- [Dial-ahead digits — collect digits command](#) on page 239
- [ASAI-requested digit collection](#) on page 243
- [ASAI-provided dial-ahead digits — collect digits command](#) on page 244
- [Considerations](#) on page 245

Command set

The following table show the commands that are used for Call Prompting.

Call Prompting command set

Command category	Action taken	Command
Information collection	Collect information from the calling party, from the public network in an ISDN SETUP message, from a Voice Response Unit (VRU), or from CallVisor ASAI.	collect digits
Treatment	Play an announcement. Delay with audible feedback of silence, ringback, system music, or an alternate audio/music source.	announcement wait-time
Routing	Leave a message. Route the call to a number that is programmed in the vector. Route the call to digits that are supplied by the calling party.	messaging split route-to number route-to digits
Branching/ programming	Go to a vector step. Go to another vector. Stop vector processing.	goto step goto vector stop

Touch-tone collection requirements

Before the switch can accept the touch-tone digits that are entered by a caller, the switch must be equipped with a “collection resource.” The resource used for collecting and interpreting touch-tone digits is a unit of hardware called a Touch-Tone Receiver (TTR). These TTRs are provided on the call classifier and tone detector circuit packs, one of which is required for Call Prompting.

The number of TTRs that are required is configured according to two sources:

- Customer input to the Avaya Account Team
- Account team input to the configurator tool

For existing systems that are adding a Call Prompting application, the Account Team recommends the appropriate number of TTRs based on two factors:

- Account team input to the configurator tool
- Application review by the Avaya Design Center

The process of collecting CINFO digits does not require TTRs.

Outside callers must have a touch-tone telephone to enter the digits that are requested by the **collect digits** command. For callers who are using rotary dialing, the Call Prompting timeout takes effect, the **collect digits** command times out, and vector processing continues at the next step. As a precaution, always provide a default treatment, such as a **route-to attendant** command or a **queue-to split** command, in the vector script unless the script is created exclusively for users of touch-tone telephones.

Note:

The Call Prompting interdigit timeout can be administered for any number of seconds from 4 to 10. This value is administered on the Feature-Related System Parameters form.

Provisions for users of rotary telephones are illustrated in the vector scripts in this chapter.

Call Prompting digit entry — collect digits command

The touch-tone digits that are entered by a Call Prompting user are collected by the **collect digits** command. This command allows the system to collect up to 24 digits from a touch-tone telephone. Sixteen of these digits may be collected immediately, while any remaining digits are stored as dial-ahead digits, which are explained later in this chapter.

Call Prompting allows some flexibility in entering digits. Specifically, the caller can:

- Remove incorrect digits strings
- Enter variable-length digit strings
- Enter dial-ahead digits.

The following sections explain these processes.

Removing incorrect digit strings

An announcement that requests the caller to enter digits can be included in call treatment. As an option, the announcement can instruct the caller to enter an asterisk (*) if he or she enters incorrect data.

When the caller enters a “*”, the following happens:

1. Digits that were collected for the current **collect digits** command are deleted.

Note:

Also deleted are any dial-ahead digits that are entered and that do not exceed the maximum digit count of 24. (Dial-ahead digits are explained later in this chapter.)

2. Digit collection is restarted.
3. The announcement is not replayed.

Once the caller enters an asterisk, the caller can reenter digits for processing.

Entering variable-length digit strings

The maximum number of digits that are requested from the caller must be specified in the administration of the **collect digits** command. In some cases, the caller might be permitted to enter fewer digits than the maximum specified. In fact, the number of digits that the caller enters can vary for several variations of one **collect digits** command. Each such grouping of digits is called a variable-length digit string.

Call Prompting allows for variable-length digit strings by providing an end-of-dialing indicator in the form of the pound sign (#). The pound sign is used to end any digit string that is entered by the caller, and it does the following:

- Tells the system that the caller has finished entering digits
- Causes the next vector step to be processed immediately.

Whenever the caller is permitted to enter a variable-length digit string, the announcement portion of the **collect digits** command should specify the largest possible number of digits that can be entered. Accordingly, each **collect digits** command should be administered to collect no more than the intended maximum number of digits. The caller can enter a pound sign part of a variable digit string entry either:

- At the end of each variable digit string that is entered. In this case, the pound sign should be included in the count of the number of maximum digits that can be entered.
- At the end of each such string that, not counting the pound sign, contains fewer characters than the maximum number of allowable digits. In this case, the pound sign should not be included in the count of the number of maximum digits that can be entered.

If the caller enters more digits than the maximum number specified, the additional digits are saved as dial-ahead digits for subsequent **collect digits** commands. If the vector or vectors chained to it do not contain another **collect digits** command, the extra digits are discarded.

If the caller enters fewer digits than the maximum number specified and does not complete the entry with the pound sign, a Call Prompting timeout occurs. The timeout terminates the command, and any digits collected prior to the timeout are available for subsequent vector processing.

A common application involving the entering of variable-length digit strings allows the user to dial either the number for the attendant or an extension to reach the desired destination. If the maximum number of digits that can be entered is administered to be 3 and the user wishes to reach the attendant, the user should dial "0#." However, if the user chooses to dial a 3-digit extension, the user should dial, for example, "748" and not "748#." Since the maximum number of digits that can be dialed in this case is three, dialing "748#" would cause "#" to be saved as a dial-ahead digit. On the other hand, if the caller dials "748#," and if the maximum number of digits that can be entered is 4, "#" is not saved as a dial-ahead digit since it is the fourth of four digits that can be entered in this case.

Entering dial-ahead digits

When digit collection for the current **collect digits** command is completed, vector processing continues at the next vector step. However, the switch continues to collect any digits that the caller subsequently dials until the TTR disconnects. See [Collecting Digits on the switch](#) on page 498 for more information. These "dialed-ahead" digits are saved for

processing by subsequent **collect digits** commands. Dial-Ahead Digits are explained fully in [Dial-ahead digits — collect digits command](#).

Functions and examples

Call Prompting uses some of the functions found in Basic Call Vectoring. Call Prompting also provides some additional functions that involve digit processing. These functions include the following:

- Treating digits as a destination
- Using digits to collect branching information (including Vector Routing Tables)
- Using digits to select options
- Displaying digits on the agent's set
- Passing digits to an adjunct
- Creating Service Observing vectors

These functions are illustrated in the following sections.

Treating digits as a destination

Call Prompting allows you to route calls according to the digits that are collected from the caller. Once the digits are collected by the **collect digits** command, the **route-to digits** command attempts to route the call to the destination that the digits represent. The command always routes the call to the destination that is indicated by the digits that are processed by the most recent collect digits command.

The digits can represent any of the following destinations:

- Internal (local) extension, for example, split/hunt group, station, and announcement
- VDN extension
- Attendant
- Remote access extension
- External number, such as a trunk access code (TAC) or an Automatic Alternate Route/Automatic Route Selection (AAR/ARS) feature access code (FAC) followed by a public network number, for example, 7 digit ETN, 10 digit DDD.

The following example shows how a call is routed by digits that are collected from a caller.

Using Call Prompting to route by collected digits

1. `wait-time 0 seconds hearing ringback`
2. `collect 5 digits after announcement 300`
`("You have reached Redux Electric in Glenrock.`
`Please dial a 5-digit extension or wait for the`
`attendant.'')`
3. `route-to digits with coverage y`
4. `route-to number 0 with cov n if unconditionally`
5. `stop`

In this vector, the caller is prompted to enter the destination extension of the party that he or she would like to reach (step 2). The extension in this vector may contain up to 5 digits. The vector collects the digits and then routes to the destination by the **route-to digits** command in step 3.

If the **route-to digits** command fails because the caller fails to enter any digits, or because the extension number entered is invalid, the **route-to number** command in step 4 routes the call to the attendant, which is the default routing option. However, as long as the destination is a valid extension, the **route-to digits** command succeeds, coverage applies, and vector processing terminates. If the destination is busy, vector processing terminates because coverage call processing takes effect.

Note:

Occasionally, all of the system's TTRs might be in use. As a result, when you are collecting digits from a caller, you should avoid starting your main vector with a **collect digits** command, since the caller in this case receives no audible feedback if he or she has to wait for a TTR to become available. Accordingly, it is a good practice to include some treatment, for example, **wait-time 0 seconds hearing ringback**, before the initial **collect digits** step.

In addition, if calls are likely to be transferred to this vector, a wait-time step of sufficient length is recommended before the collect step to allow the transferring party enough time to complete the transfer.

Using digits to collect branching information

Call Prompting allows you to direct a call to another step or vector based on the digits that are entered by the caller. This branching is accomplished with a **goto** step. For example, in the following vector example, digits are used to route calls to different vectors based on an assigned customer number.

Using Call Prompting to branch by collected digits

```
1. wait-time 0 seconds hearing ringback
2. collect 5 digits after announcement 200
   ("Please enter your customer number)
3. goto vector 8 if digits = 10+
4. goto vector 9 if digits = 11+
5. goto vector 10 if digits = 12+
6. route-to number 0 with cov n if unconditionally
7. stop
```

The wildcard "+" indicates that the two digits can be followed by zero or any number of additional digits. Callers with a number that begins with the digits 10 are routed to vector 8, callers with a number that begins with the digits 11 are routed to vector 9, and callers with a number that begins with the digits 12 are routed to vector 10.

Vector Routing Tables

You also can test digits against entries in a Vector Routing Table.

Vector Routing Tables contain lists of numbers that can be used to test a **goto...if digits** command. Digits that are collected with the collect digits step can be tested to see if they are either in or not-in the specified table. Entries in the tables can include either the "+" or "?" wildcard.

- The "+" represents a group of digits and can only be used as the first or last character of the string.
- The "?" represents a single digit. Any number of them can be used at any position in the digit string.

Tables are entered on the Vector Routing Table form. See *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784, for complete instructions for creating Vector Routing Tables.

The following example shows a Vector Routing Table.

Vector Routing Table

VECTOR ROUTING TABLE			
Number: 10	Name: Premier Accts	Sort? n	
1:	5734020	17:	2679038
2:	8910573	18:	1345+
3:	8738494	19:	2345+
4:	4385702	20:	_____
5:	8768995	21:	_____
6:	7867387	22:	_____
7:	7802452	23:	_____
8:	7074589	24:	_____
9:	5674902	25:	_____
10:	8789689	26:	_____
11:	4870985	27:	_____
12:	8093182	28:	_____
13:	7809130	29:	_____
14:	7890301	30:	_____
15:	7893213	31:	_____
16:	8743180	32:	_____

The following Call Vector example could be used to test against the numbers provided in the Vector Routing Table.

Testing for digits in Vector Routing Table

1. wait-time 0 seconds hearing ringback
2. collect 7 digits after announcement 200 ("Please enter your account number")
3. goto vector 8 if digits in table 10
4. queue-to split 5 pri l
5. wait-time 10 seconds hearing ringback
6. announcement 2771
7. wait-time 10 seconds hearing music
8. goto step 6 if unconditionally

If the caller enters an account number that is listed in the Vector Routing Table, the call is routed to vector 8. If the caller enters an account number that matches the wildcard entry (for example 1345987), the call is routed to vector 8.

If the caller enters an account number that is not listed in the Vector Routing Table, or if the caller does not enter an account number, the call is queued to split 5.

Suppose that, instead of containing a list of premier accounts, the Vector Routing Table contains a list of accounts with a poor payment record. The following example shows a vector that only queues calls with account numbers that are not in the table. Calls in the table route to the collection department.

Testing for digits not in Vector Routing Table

```
1. wait-time 0 seconds hearing ringback
2. collect 7 digits after announcement 200
   ("Please enter your account number)
3. goto step 11 if digits = none
4. goto step 6 if digits not-in table 10
5. route-to number 83456 with cov y if unconditionally
   (collections)
6. queue-to split 5 pri 1
7. wait-time 10 seconds hearing ringback
8. announcement 2771
9. wait-time 10 seconds hearing music
10. goto step 8 if unconditionally
11. route-to number 0 with cov n if unconditionally
12. stop
```

If no digits are collected, the call is routed to the operator.

Note:

Entries in Vector Routing Tables also can be tested against the telephone number of the caller Automatic Number Identification (ANI). See [ANI //II-digits routing and Caller Information Forwarding \(CINFO\)](#) on page 179 for more information.

Using digits to select options

Call Prompting makes it possible to provide a menu of options that the caller can use to satisfy his or her information needs. The caller selects the desired option by entering the appropriate requested digit. Once the digit is entered, a conditional branch to the appropriate treatment is made. The treatment is usually provided by the **route-to number** command.

The following example shows how digits are used to select options.

Using Call Prompting to select options

```
1. wait-time 0 seconds hearing ringback
2. collect 1 digits after announcement 3531 (Thank you
   for calling Bug Out Exterminators. If you
   wish to learn about the services we provide, please
   dial 1. If you'd like to set up an appointment for
   one of our representatives to visit your home or
   place of business, please dial 2.)
3. route-to number 4101 with cov y if digit = 1
4. route-to number 4102 with cov y if digit = 2
5. route-to number 0 with cov n if unconditionally
6. disconnect after announcement none
```

In step 2 of this vector, the user is asked to enter either 1 or 2, depending on the service he or she uses. If one of these digits is entered, the appropriate one of the next two steps (3 through 4) routes the call to the relevant extension, that is, either 4101 or 4102. If one of the digits is not entered, the call is routed to the attendant (step 5).

Displaying digits on the agent's set

A CALLR-INFO button can be included at the agents' display stations to help process calls that are serviced by the Call Prompting feature. However, if the agent has a two-line display set, and the display is in normal or inspect mode, the collected digits are automatically displayed on the second line. These digits remain on this line until they are overwritten, even after the call is released by the agent. On the other hand, for other display sets, the agent must press the CALLR-INFO button to display the collected digits.

It may be beneficial to install the CALLR-INFO button if you want to expedite calls by reducing the amount of time agents spend on the telephone. For example, the button could be set up to collect specific information such as a customer account number before the call is answered by the agent, thus eliminating the need for the agent to ask for this information.

The CALLR-INFO button displays information in the following format:

x = Info: 1234567890

where:

- x is a call appearance letter, for example, a, b, c, and so forth
- 1234567890 represents the digits that are collected from the caller

The digits that are entered by the caller are collected by the most recent collect digits command. Any digits that were dialed ahead and not explicitly requested by the most recently executed **collect digits** command are not displayed.

Assume that digits have been collected by Call Prompting. If the agent presses the CALLR-INFO button when the call rings at the agent station or when the station is active on a call appearance, the following events occur:

- The 10-second timer for display interval is set.
- The status lamp (if available) that is associated with the button is lit.
- The display is updated. Specifically, the incoming call identification (calling party ICI) is replaced with the collected digits in the format that was presented earlier in this section. Only those digits that were collected for the last **collect digits** command are displayed.

If all the conditions to use the button (except for the collection of digits) are set, and the agent presses the button, the status lamp (if available) that is associated with the button flashes denial.

Call Prompting

One or more events may occur during a successful execution after the button is pushed. These events include the following:

- The 10-second timer times out.
- The incoming call arrives at any call appearance.
- An active call changes status, for example, another caller is added to the conference.

If any of these events occur, the following takes place:

- The status lamp (if available) that is associated with the button is turned off.
- The display is updated as previously described.

Note:

If the agent needs to display the collected digits again, the CALLR-INFO button can be pressed again to repeat the operation that is described in this section, provided that the agent is active on the call or the call is still ringing. Also, the agent can flip between the collected digits and the ICI by alternately pressing the CALLR-INFO and NORMAL buttons.

Passing digits to an adjunct

Call Prompting allows for the passing of information in the form of collected digits to an adjunct for further processing. Digits are passed to the adjunct by the ASAI Adjunct Routing capability.

An adjunct is any processor that is connected to a switch by the ASAI link. The adjunct makes a routing decision using the **adjunct routing** command according to caller information and/or agent availability, and it returns the routing response to the switch. For example, the adjunct can indicate that the call be routed to a specific ACD agent. This is known as direct agent calling.

A maximum of 16 Call Prompting digits from the last **collect digits** command can be passed to the adjunct by the **adjunct routing** command.

The following example, shows how Call Prompting digits are passed to an adjunct.

Using Call Prompting to pass digits to an adjunct

```
1. wait-time 0 seconds hearing ringback
2. collect 10 digits after announcement 300
   (''Please enter your 10-digit account number.'')
3. adjunct routing link 50000
4. wait-time 10 seconds hearing music
5. route-to number 52000 with cov y if unconditionally
6. stop
```

In step 2 of this vector, the caller is asked to enter a 10-digit account number. Once the account number is entered, the adjunct receives this information from the **adjunct**

routing command in step 3. This command then makes the appropriate routing decision if it is able to do so. If the command succeeds within the specified wait time, the command routes the call to the appropriate destination, and the call leaves vector processing. If the command fails, vector processing continues at the next step.

In addition to the Adjunct Routing capability, collected digits also can be passed by way of ASAI to an adjunct by prompting for the digits in one vector and then routing the call to a VDN that is monitored by an Event Notification (VDN) association. The collected digits (up to 16) are sent to the adjunct in a Call Offered to Domain Event Report. See *Avaya MultiVantage CallVisor ASAI Technical Reference*, 555-230-221, for detailed information.

Note:

Adjunct Routing is fully discussed in [Adjunct \(ASAI\) Routing](#) on page 207.

Creating Service Observing vectors

Service Observing vectors can be constructed to allow users to observe calls from a remote location or local station. When combined with Call Prompting, Service Observing vectors can route calls to:

- A Remote Access extension
- A Service Observing Feature Access Code (FAC) and extension that is entered by the user
- A preprogrammed FAC and extension

Remote access Service Observing vector

The following vector example connects a user to Remote Access. Once connected, the user can dial either a listen-only or listen/talk Service Observing FAC followed by the extension number to be observed. Although it is not required, Call Prompting increases security by providing passcode protection with remote service observing.

Remote access Service Observing vector

```
1. wait-time 0 secs hearing ringback
2. collect 5 digits after announcement 2300
   ("Please enter your 5-digit security code.")
3. goto step 5 if digits = 12345 (security code)
4. disconnect after announcement 2000
5. route-to number 5000 with cov n if unconditionally
6. stop
```

User-entered FAC and extension

The following vector example connects a user directly to the Service Observing FAC and extension based on the digits that are collected by Call Prompting.

Service Observing vector with user-entered FAC and extension

```
1. wait-time 0 secs hearing ringback
2. collect 5 digits after announcement 2300
   (''Please enter your 5-digit security code.'')
3. goto step 5 if digits = 12345 (security code)
4. disconnect after announcement 2000
5. wait-time 0 seconds hearing ringback
6. collect 6 digits after announcement 3245 ("Please
   enter the number 11 for listen-only
   observing or the number 12 for listen/talk observing
   followed by the number of the extension you would
   like to observe")
7. route-to digits with coverage n
8. stop
```

Pre-programmed FAC and extension

The following example shows a vector that connects a user to a pre-programmed FAC and extension using Call Prompting to allow the observer to select the extension that he or she wants to observe. In this example, the observer will be Service Observing a VDN.

Service Observing vector with programmed FAC and extension

```
1. wait-time 0 secs hearing ringback
2. collect 5 digits after announcement 2300
   (''Please enter your 5-digit security code.'')
3. goto step 5 if digits = 12345 (security code)
4. disconnect after announcement 2000
5. wait-time 0 seconds hearing ringback
6. collect 1 digits after announcement 2310 ("Enter 1 to
   observe sales, 2 to observe billing")
7. route-to number 113001 with cov n if digit = 1
   (11 = listen-only observe, 3001 = "Sales" VDN)
8. route-to number 113002 with cov n if digit = 2
   (11 = listen-only observe, 3002 = "Billing" VDN)
9. goto step 6 if unconditionally
```

Dial-ahead digits — collect digits command

Dial-ahead digits provide the caller with a means of bypassing unwanted announcement prompts on the way to acquiring the information or servicing he or she wants. These digits are available for use only by subsequent **collect digits** commands. The digits are never used by other vector commands that operate on digits, for example, **route-to digits**, and **goto...if digits**, until they are collected. These digits are not forwarded with interflowed calls. In addition, these digits are not displayed as part of the CALLR-INFO button operation until they are collected by a **collect digits** command.

Collection of dial-ahead digits continues until one of the following occurs:

- Vector processing stops or is terminated.
- The sum of the digits collected for the current **collect digits** command plus the dial-ahead digits exceeds the switch storage limit of 24. Any additional digits are discarded until additional storage is made available by a subsequent **collect digits** command.

Note:

Any asterisk (*) and pound sign (#) digits that are dialed ahead count toward the 24 digit limit, as do any dial-ahead digits that are entered after the asterisk or pound sign digit.

- The TTR required by the user to collect digits is disconnected. This happens whenever one of the following conditions is true:
 - A successful or unsuccessful **route-to number** step is encountered during vector processing, except where the number routed to is a VDN extension.
 - A successful or unsuccessful **route-to digits** step is encountered during vector processing, except where the number routed to is a VDN extension.
 - A successful or unsuccessful **adjunct routing** step is encountered during vector processing.
 - A successful or unsuccessful **converse-on** step is encountered during vector processing.
 - A Call Prompting timeout occurs, during which time the caller has not dialed any additional digits, asterisks (*) or pound signs (#).
 - Vector processing stops or is terminated.
 - A successful or unsuccessful collect ced/cdpd step is encountered.

Note:

When the TTR is disconnected due to a **route-to number**, **route-to digits**, **converse-on**, **adjunct routing**, or **collect ced/cdpd** step, all dial-ahead digits are discarded. This means that following a failed **route-to**, **converse**, or **adjunct routing** step, a subsequent **collect digits** step always requires the user to enter digits.

Dial-ahead digit vector examples

The vectors shown in the following examples illustrate a situation where a caller can enter dial-ahead digits. In this case, the caller is required to have a touch-tone telephone. An alternative handling sequence should be programmed in case the caller has a rotary telephone or the caller does not dial a touch tone digit before the timeout period.

Step 2 of Vector 30 gives the caller two options, each of which provides different information. The caller is prompted to enter either 1 or 2, depending on what information he or she wants to hear. Once the caller enters a digit, the digit is collected by the **collect digits** command. Thereafter, an attempt is made by the **route-to number** command to route the call to the appropriate vector (step 3 or 4). If the caller enters a digit other than 1 or 2, the appropriate announcement is provided (step 5), and the digit entry cycle is repeated (step 6).

If the caller enters 1, Vector 31 is accessed.

Using dial-ahead digits to bypass announcements, example 1

```
VDN (extension=1030   name='Coastal'   vector=30)
Vector 30:
1.  wait-time 0 seconds hearing ringback
2.  collect 1 digits after announcement 3000
    ('Thank you for calling Coastal League Baseball
     Hotline. You must have a touch-tone telephone to use
     this service. If you wish to hear the scores of
     yesterday's games, please press 1.  If you wish to
     hear today's schedule of games, please press 2.')
3.  route-to number 1031 with cov y if digit = 1
4.  route to number 1032 with cov y if digit = 2
5.  announcement 301 ('Entry not understood.  Please
     try again.')
6.  goto step 2 if unconditionally
```

In step 1 of Vector 31 (below), the caller is given three options that supplement the original option that was provided in Vector 30. The caller is prompted to enter either 3, 4, or 5, depending on what information he or she wants to hear. If the caller enters an incorrect digit, the customary digit correction routine is implemented (steps 5 and 6). Once an appropriate digit is entered, the call is routed, in this example by a **goto step** command (step 2, 3, or 4), to the appropriate announcement (step 7 or step 9).

In step 10 of Vector 31, the caller is prompted with the choice of returning to the main menu provided in Vector 30 or of terminating the call. If the caller selects the former option (by entering 9), the call is routed to Vector 30, and the entire process is repeated.

Using dial-ahead digits to bypass announcements, example 2

```

VDN (extension=1031 name='Scores' vector=31)
Vector 31:
1. collect 1 digits after announcement 4000
   ('If you wish to hear scores of games in both divisions,
   please press 3. If you wish to hear scores for Northern
   Division games only, please press 4. If you wish to hear
   scores for Southern Division games only, please press 5.')
2. goto step 7 if digits = 3
3. goto step 7 if digits = 4
4. goto step 9 if digits = 5
5. announcement 301 ('Entry not understood. Please
   try again.')
6. goto step 1 if unconditionally
7. announcement 4002 (Northern Division scores)
8. goto step 10 if digits = 4
9. announcement 4003 (Southern Division scores)
10. collect 1 digits after announcement 4004
    ('If you wish to return to the main menu, please press 9.
    Otherwise, press 0.)
11. route-to number 1030 with cov n if digit = 9
12. goto step 15 if digit = 0
13. announcement 301 ('Entry not understood. Please try again.')
14. goto step 10 if unconditionally
15. disconnect after announcement none

```

Vector 32 (below) is similar in design to Vector 31. The major difference is the information provided and the requested digit entries.

In this example, the caller has to go through at least two sets of options to get the information that he or she wants. Each option set is introduced by an announcement. However, because of the dial-ahead digit capability, the caller can bypass the announcements if he or she chooses. Thus, the caller could enter 1 and 5 within a matter of seconds to hear yesterday's Southern Division scores.

The caller may enter digits while he or she is being queued for an announcement or while the announcement is playing. If digits are entered during an announcement, the announcement is disconnected. If digits are entered while a call is queued for an announcement, the call is removed from the announcement queue.

Dial-ahead digits, example 2

```
VDN (extension=1032  name=Schedule  vector=32)
Vector 32
1.  collect 1 digits after announcement 5000
    (''If you wish to hear today's schedule of games in
    both divisions, please press 6.  If you wish to
    hear today's schedule of games in the Northern
    Division only, please press 7.  If you wish to hear
    today's schedule of games in the Southern Division
    only, please press 8.'')
2.  goto step 7 if digits = 6
3.  goto step 7 if digits = 7
4.  goto step 9 if digits = 8
5.  announcement 301 (''Entry not understood.  Please
    try again.'')
6.  goto step 1 if unconditionally
7.  announcement 5002 (Northern Division schedule)
8.  goto step 10 if digits = 7
9.  announcement 5003 (Southern Division schedule)
10. collect 1 digits after announcement 4004
    (''If you wish to return to the main menu,
    please press 9.  Otherwise, press 0.)
11. route-to number 1030 with cov n if digit = 9
12. goto step 15 if digits = 0
13. announcement 301 (''Entry not understood.  Please
    try again.'')
14. goto step 10 if unconditionally
15. disconnect after announcement none
```

ASAI-requested digit collection

The ASAI-requested digit collection feature gives an adjunct the ability to request that a DTMF tone detector be connected for the purpose of detecting user-entered digits. The digits that are collected as a result of this feature are passed to ASAI monitoring and/or controlling adjuncts for action. The switch handles these digits as if they were dial-ahead digits. This feature allows the caller to request Sequence Dialing after the call has been routed to the final destination and has resulted in an unanswered call, that is busy, no answer, and so forth.

These digits are not necessarily collected while the call is in vector processing. They are sent to an ASAI adjunct, or they may be used by Call Prompting features, or both.

ASAI Adjunct Routing and Call Prompting features must be enabled on the switch for this feature to work.

ASAI-provided dial-ahead digits — collect digits command

The ASAI-provided digits feature allows an adjunct to include digits in a Route Select capability. These digits are treated as dial-ahead digits for the call. Dial-ahead digits are stored in a dial-ahead digit buffer and can be collected (one at a time or in groups) using the **collect digits** command(s). Although the adjunct may send more than 24 digits in a Route Select, only the first 24 digits (or 24-x, where x is the number of digits that are collected by vector processing prior to executing the **adjunct routing** vector command) are retained as dial-ahead digits. An application can use this capability to specify the digits that the switch should pass to the VRU as part of the **converse-on** vector step.

Note:

The maximum number of dial-ahead digits that can be stored in the buffer is dependent on the number of digits that were already collected for the call by a previous **collect digits** vector command. If x digits were collected by vector processing prior to executing an **adjunct routing** vector command, the x digits collected reduces the maximum number of digits that can be stored as dial-ahead digits as a result of a Route Select. The rest are discarded.

Considerations

You should keep the following considerations in mind when working with Call Prompting:

- To enter the digits requested via a **collect digits** command, outside callers must have a touch-tone telephone. For such callers using rotary dialing, a 10 second inter-digit timeout takes effect, and the **collect digits** command is omitted. As a precaution, a default treatment (for example, **route-to attendant** command, **queue-to split** command) should always be provided in the vector script unless the script is created exclusively for users of touch-tone telephones.
- If a caller does not enter the full number of digits specified in a **collect digits** step, an administered timeout occurs. Thereafter, vector processing continues with subsequent vector steps, and an attempt is made to process the call using the digits that have been collected. If the digits entered do not represent a valid destination, and if Automated Attendant is being implemented via a **route-to digits** command, the **route-to digits** command fails, and vector processing continues at the next step, which should be a default treatment.
- It may be prudent to take steps in case a **route-to attendant** command fails, such as providing a disconnect announcement.
- From time to time, all of the system's touch-tone receivers might be in use. As a result, you should avoid starting your main vector with a **collect digits** command, since the caller on a DID or tie trunk in this case receives no audible feedback if he or she has to wait for a receiver to become available. Accordingly, it is a good practice to include some treatment (for example, a **wait-time 0 seconds hearing ringback** step) before the initial **collect digits** step. The **wait-time** step is not necessary if the collect step is collecting ced or cdpd digits.



Look-Ahead Interflow (LAI)

Look-Ahead Interflow (LAI) enhances Call Vectoring for contact centers with multiple ACD locations. LAI allows these centers to improve call-handling capability and agent productivity by intelligently routing calls among contact centers to achieve an improved ACD load balance. This service is provided by ISDN D-channel messaging over QSIG or non-QSIG private networks, virtual private networks, or public networks. The receiving switch is able to accept or deny interflowed calls sent by the sending switch.

LAI has the following basic attributes:

- Produces First in First Out (FIFO) or near-FIFO call processing
- Includes enhanced information forwarding, that is, codeset 0 user information transport

This chapter includes the following topics:

- [LAI prerequisites](#) on page 248
- [Example of a two-switch configuration](#) on page 249
- [Command set](#) on page 249
- [How traditional LAI works](#) on page 251
- [How enhanced LAI works](#) on page 255
- [LAI-initiated path-replacement for calls in vector processing](#) on page 263
- [DNIS and VDN override in an LAI environment](#) on page 264
- [LAI with network ADR](#) on page 266
- [Multi-site applications for Enhanced LAI](#) on page 267
- [LAI considerations](#) on page 267
- [Troubleshooting for LAI](#) on page 269

LAI prerequisites

The following items are criteria for basic LAI call control operation over a virtual private network or a public switched network:

- The sending and receiving contact center locations must have ISDN (PRI or BRI) trunk facilities.

Note:

ATM trunking and IP trunking can be set up to emulate ISDN PRI. For information on setting this up, see *Administration for Network Connectivity for Avaya Communication Manager*, 555-233-504, and *ATM Installation, Upgrades and Administration using Avaya Communication Manager*, 555-233-124.

- The switch must support the ISDN country protocol.
- LAI has been tested with several major carriers. To find out if these capabilities work with your carrier, check with your account team for the most current information. If testing has not been done to verify operation over the public networks that are involved with the preferred specific configuration, use of private ISDN trunking between the nodes should be assumed until successful testing is complete.
- The ISDN SETUP and DISCONNECT messages are transported between sending and receiving locations, for example, SS7 or equivalent public network connectivity.
- A receiving-end generated DISCONNECT message must transmit back to the sending the switch contact center without changing the cause value.

Conversion of the DISCONNECT message to a progress message (with a Progress Indicator Description set to 1 and a Cause Value other than 127 included) is a valid reject message and compatible with LAI.

- Progress messages that are generated towards the sending end by intervening network switches must have the Progress Indicator Description set to 8 so that the switch does not consider the call accepted or rejected.
- ISDN codeset 0 user information transport supports LAI information forwarding. As an alternative, LAI can use dedicated VDNs at the receiving location to provide an equivalent display of the forwarding application identity and set trunk group options to not send either the codeset 6/7 LAI IE or codeset 0 information transport.

Note:

Best Service Routing (BSR) cannot use these LAI alternatives. BSR must use ISDN codeset 0 user information transport.

Example of a two-switch configuration

Look-Ahead Interflow (LAI) is enabled through the use of call vectors and their associated commands. For a two-switch configuration, these vectors are included in both the sending switch, which processes vector outflow, and the receiving switch, which processes vector inflow.

Command set

LAI enhances call vectoring so that calls interflow only to those remote locations that can accept the calls.

LAI is achieved through a set of vector commands. The following table lists the call-acceptance vector commands that are used in LAI.

Call-acceptance vector commands

Command	Qualification
announcement	Announcement available Queued for announcement Retrying announcement
check split	Call terminates to agent Call queued to split
collect digits	Always (except for ced and cdpd digits, which are neutral)
converse-on split	VRU answers the call Call queued to converse split
disconnect	With announcement and announcement available With announcement and queued for announcement With announcement and retrying announcement
messaging split	Command successful Call queued
queue-to split	Call terminates to agent Call queued to split

Call-acceptance vector commands

Command	Qualification
route-to	Terminates to valid local destination Successfully seizes a non-PRI trunk Results in a LAI call attempt, and the call is accepted by the far-end switch
wait-time	Always (except wait-time hearing i-silent , which is neutral)

If the receiving switch decides it is unable to accept the LAI call, call denial is accomplished by executing one of the vector commands that are listed in the following table.

Note:

It is recommended that you use **busy** instead of **disconnect** to allow for compatibility with similar network services such as Alternate Destination Redirection (ADR).

Call-denial vector commands

Command	Qualification
busy	Always
disconnect	Without announcement With announcement but announcement unavailable
reply-best	Always; used with BSR

The vector commands that are shown in the following table are considered neutral because they do not generate either call acceptance or denial messages.

Neutral vector commands

Command	Qualification
adjunct routing	Always
announcement	Announcement unavailable
check split	Call neither terminates nor queues
collect ced/cdpd digits	Always
consider	Always - used with BSR
converse-on split	Call neither terminates nor queues
goto step	Always

Neutral vector commands (continued)

Command	Qualification
goto vector	Always
messaging split	Command failure
queue-to split	Call neither terminates nor queues
route-to	Unsuccessful termination Trunk not seized LAI call denied by the far-end switch
stop	• Always
wait-time hearing i-silent	• Always Note: This command is used following an adjunct routing command in applications where the adjunct decides whether to accept or reject the Look-Ahead calls.

How traditional LAI works

Traditional LAI is recommended when the preferred call flow performs LAI attempts before queuing the call.

LAI uses the commands that are included within the Basic Call Vectoring and Call Prompting features:

- **route-to number with coverage n** or **route-to digits with coverage n** command on a switch that has LAI enabled and that successfully seizes an ISDN trunk automatically results in a normal LAI call attempt being placed. The call attempt can be rejected or accepted by the remote end.
- **route-to number with coverage y** or **route-to digits with coverage y** command never results in a LAI call attempt. The sending end assumes that the call is always going to be accepted. This command always completes the call. Moreover, the command should not be used when the vector at the receiving location ends up denying the call, since the caller in this case is given a busy signal, or the call is disconnected. Use this command with coverage set to **y** only for those cases when an unconditional interflow is wanted (with LAI active) and the terminating switch is set up to handle this type of call.

Look-Ahead Interflow (LAI)

When a LAI call attempt is made, Call Vectoring at the sending location checks a potential receiving location to determine whether to hold or send the call. While this is done, the call remains in queue at the sending location. As such, the call can still be connected to the sending-location agent if one becomes available before the receiving location accepts the call.

Call Vectoring at the receiving location decides whether to accept the call from the sending location or to instruct the sending location to keep the call. In the latter case, the sending location can then either keep the call, check other locations, or provide some other treatment for the call. Conditions for sending, refusing, or receiving a LAI call attempt can include a combination of any of the following:

- Expected wait time for a split
- Number of staffed or available agents
- Number of calls in queue
- Average speed of answer or the number of calls active in a VDN
- Time of day and day of week
- Any other legitimate conditional

If the call is accepted by the receiving switch, the call is removed from any queues at the sending switch, and call control is passed to the receiving switch. If the call is denied by the receiving switch, vector processing continues at the next step at the sending switch. Until the call is accepted by either switch, the caller continues to hear any tones applied by the sending switch. If the call is denied, the call vector can apply alternate treatment, such as placing another LAI call to an alternate backup switch.

Note:

The LAI operation is completely transparent to the caller. While a LAI call attempt is being made, the caller continues to hear any audible feedback that is provided by the sending switch vector. The caller also maintains his or her position in any split queues until the call is accepted at the receiving switch.

LAI passes Call Prompting digits collected in the sending switch to the receiving switch by codeset 0 user information transport. For more information, see [Information Forwarding](#) on page 197.

Example of traditional LAI

The vectors in the sending switch use the **goto** command to determine whether the call should be sent to the receiving switch. Recall that the **goto** command tests various outflow threshold conditions such as expected wait time. If the expressed condition is met, a branch is made to the appropriate **route-to** command. This command sends the call to the receiving switch, which, as already noted, can accept or deny the call.

The following example shows an outflow vector that might be included in a sending switch.

Using LAI with route-to commands to outflow calls

```

1. wait-time 0 secs hearing ringback
2. goto step 5 if expected-wait for split 3 pri m < 30
3. route-to number 5000 with cov n if unconditionally
4. route-to number 95016781234 with cov n if unconditionally
5. queue-to split 3 pri m
6. announcement 3001
7. wait-time 30 secs hearing music
8. goto step 6 if unconditionally

```

If split 3 has an expected wait time of less than 30 seconds (step 2), step 5 queues the call to the split's queue at a medium priority.

If the expected wait time is 30 seconds or more, LAI attempts are made in steps 3 and 4. If the call is accepted by one of the receiving switches call control passes to the receiving switch.

If the receiving switches deny the call, the call queues to split 3 and announcement 3001 plays. The caller then hears music (interrupted by announcement 3001 every 30 seconds).

Receiving switch operation

When the receiving switch receives the LAI request, the call first routes to a VDN. The VDN then maps the call to the receiving switch's inflow vector, and vector processing begins, starting with inflow checking. Inflow checking is enabled by conditional **goto** commands in the inflow vector. The decision to accept or deny a call can be based on checks such as any of the following:

- Expected Wait Time
- Number of staffed agents
- Number of available agents
- Time-of-day/day of the week
- Number of calls in split's queue
- Average Speed of Answer
- Active VDN Calls
- ANI
- II-Digits
- CINFO ced and/or cdpd digits
- Collected digits forwarded from the sending switch

Look-Ahead Interflow (LAI)

Once inflow checking is complete, acceptance of the LAI call is accomplished by executing any of the vector commands listed in [Call-acceptance vector commands](#) on page 249.

Note:

For each of the commands listed in [Call-acceptance vector commands](#) on page 249, [Neutral vector commands](#) on page 250 and [Call-denial vector commands](#) on page 250, only one of the corresponding qualifications needs to be true for the command to effect the desired result, which is call acceptance, call denial, or no effect on such acceptance or denial.

The following example shows an inflow vector that might be used by a receiving switch.

Using inflow checking for LAI requests

```
1. goto step 6 if expected-wait in split 1 pri h > 30
2. queue-to split 1 pri h
3. announcement 4000
4. wait-time 2 seconds hearing music
5. stop
6. busy
```

Step 1 of this inflow vector checks the inflow thresholds. The **goto step** command in step 1 checks the expected wait time in split 1. If the expected wait time is greater than 30 seconds, a branch is made to the **busy** command in step 6. If executed, the **busy** command denies the call, and the receiving switch returns a call denial message to the sending switch. The sending switch, in turn, drops the LAI call attempt and then continues vector processing at the next vector step.

If the expected wait time in split 1 is less than or equal to 30 seconds, the receiving switch returns a call acceptance message to the sending switch, and call control is passed to the receiving switch. Thereafter, the call is queued to split 1 in the receiving switch (step 2). Once queued, the caller receives the appropriate announcement in step 3 and is then provided with music until the call is answered by an agent or abandoned by the caller (steps 4 and 5). Remember that the **stop** command halts vector processing but does not drop the call.

If the sending switch does not receive a call acceptance or call denial message within 120 seconds after the LAI call request, the LAI attempt is dropped. The sending switch continues vector processing at the next step.

How enhanced LAI works

Enhanced LAI uses the same basic vectoring commands as traditional LAI, but adds the conditional **interflow-qpos**. Enhanced LAI is recommended when the preferred call flow performs LAI attempts after queuing the call.

Using enhanced LAI **interflow-qpos** conditional:

- Produces First in First Out (FIFO) or near FIFO call processing
- Uses less processing during LAI

The simple way to achieve FIFO

You can use the **interflow-qpos** conditional in a **route-to** or **goto** command to achieve FIFO results.

For example, you can use the following **route-to** command with the conditional to achieve FIFO results:

```
route-to number 9581234 with cov n if interflow-qpos=1
```

If you have a lot of remote agents, you may want to set the **route-to** command as follows:

```
route-to number 9581234 with cov n if interflow-qpos<=2
```

Detailed information about the interflow-qpos conditional

You can use this feature without understanding the differences between split queues and eligible queues or between **interflow-qpos** and queue position. There are features that are built into enhanced LAI so that when you write a step such as **route-to number 9581234 with cov n if interflow-qpos=1**, the system operates smoothly under all conditions.

The interflow-qpos conditional

The **interflow-qpos** conditional only applies interflow processes to a dynamic eligible queue and to calls that are queued locally before the **route-to** is attempted.

The eligible queue is that portion of the split/skill queue that:

- Includes only calls that are not expected to be answered locally during the interflow process at that moment relative to the call being processed

Look-Ahead Interflow (LAI)

- Does not include direct agent calls because these calls are excluded from any interflow process.

The following is an example of the **interflow-qpos** conditional used in a **route-to** command:

```
route-to number _____ with cov _ if interflow-qpos CM x
```

where

- **CM** is the comparator. It is one of three symbols: =, <, <=
 - With **if interflow-qpos = x**, the call is interflowed if it is at the **x** position from the top of the eligible queue.
 - With **if interflow-qpos < x**, the call is interflowed if it is among the top **x-1** of the eligible queue.
 - With **if interflow-qpos <= x**, the call is interflowed if it is among the top **x** eligible calls.
- **x** indicates the call's position in the eligible queue. Valid queue positions are 1 through 9. The top queue position is 1. The eligible queue is made up of calls from the first local split/skill that the call has been queued to due to previous steps in the vector.

Note:

Calls that are likely to be serviced locally before an LAI can be completed are not eligible for interflow since they are excluded from the eligible queue. Calls that are likely to be answered are identified based on conditions of the split/skill to which the call is queued and, under certain conditions, an administered minimum EWT threshold value.

The following is an example of the **interflow-qpos** conditional used in a **goto** command:

```
goto step/vector _____ if interflow-qpos CM x
```

where

- **CM** is the comparator. It is one of six symbols: =, <>, <, <=, >, >=
- **x** indicates the call's position in the eligible queue. Valid queue positions are 1 through 9. The top queue position is 1.

Calls that are likely to be serviced locally before an LAI can be completed are not eligible for interflow since they are excluded from the eligible queue.

When does a call not interflow?

A call does not interflow under the following circumstances:

- If the **interflow-qpos** conditional is not met.

As with other conditionals, the **route-to number... if interflow-qpos** step or the **goto step/vector** branch is executed only if the conditional is met, otherwise vector processing goes to the next step.

- If the call is not in a split/skill queue or not in the eligible portion of the queue when the conditional step is executed.

If the call is not in queue when the **route-to number... if interflow-qpos** step is executed, a vector event is logged and vector processing continues at the next step.

If the call is not in queue when a **goto... if interflow-qpos** step is executed, the queue position of the call is considered to be infinite in determination of the conditional.

Note:

A vector event is not logged if the call is in queue, but is not in the eligible portion of the queue.

- Interflow failure or LAI rejection

Interflow failure or LAI rejection will also go to the next step. Route-to operation and feature interactions will be the same as other configurations of the route to number command, for example, **route to number ____ with cov _ if digit CM x**.

The following table outlines what action is taken for different cases of interflow eligibility.

Actions taken for cases of interflow eligibility

Case	Action at route-to step	Action at goto step
The call not eligible for interflow.	The call is never routed.	Treat as if the interflow queue position is infinite.
The call is not in any split queue.	The call is treated as if the interflow queue position is infinite.	Treat as if interflow queue position is infinite.
The call is eligible for interflow.	Act according to the conditional.	Act according to the conditional.

How the minimum EWT is set

The minimum expected wait time (EWT) threshold that is used to help determine which calls are more likely to be answered locally is administered on the Feature-Related System Parameters form. Minimum EWT is used when the local agents, that is, in the first split/skill to which the call is queued, are handling a significant number of the calls. If these agents are not handling a significant number of calls, the call is eligible for LAI even if its EWT is lower than the threshold.

Note:

When enhanced LAI vectors or the look-ahead EWT threshold are administered inappropriately, remote agents may experience phantom calls or a delay between becoming available and receiving an ACD call.

The instructions below assume that you use a SAT terminal or terminal emulator to administer the switch.

To set the minimum EWT threshold:

1. In the command line, type **change system-parameters feature** and press **Enter**.

The system displays the Feature-Related System Parameters form.

2. Find the page of the Feature-Related System Parameters form that has the Interflow-Qpos EWT Threshold field.

If Look-Ahead Interflow is active, the Interflow-Qpos EWT Threshold field can be administrated.

3. In the Interflow-Qpos EWT Threshold field, enter the number of seconds, as a number from 0 to 9, that you want for the EWT threshold. The default of 2 seconds is recommended.

Note:

When the look-ahead EWT threshold field is set too low, remote agents may experience phantom calls.

4. Press **Enter** to save your changes.

Example of single-queue multi-site operation

In this scenario, all new calls for a given customer application are routed by the public network to only one of the switches in the network, where the calls are put in the queue.

Local agents service the calls from the queue in the normal fashion; however, remote agents service calls by means of enhanced look-ahead.

The switch with the call queue does rapid enhanced look-ahead attempts to all other switches in the network that can service this call type, looking for an available agent.

Normally, the look-ahead attempts are placed only on behalf of the call that is at the head of the queue (**interflow-qpos = 1**). However, in scenarios where there are large numbers of agents at a remote switch, it may be necessary to do interflows on behalf of more than one call in order to outflow a sufficient volume of calls to keep all agents busy (**interflow-qpos <= 2**).

Vector to back up split

```
1. announcement 3501
2. wait-time 0 secs hearing music
3. queue-to skill 1 pri m
4. route-to number 93031234567 with cov n if interflow-qpos = 1
5. route-to number 99089876543 with cov n if interflow-qpos = 1
6. wait-time 5 secs hearing music
7. goto step 4 if unconditionally
```

In this example, interflow call attempts are placed on behalf of the call that is at the beginning of the queue every 5 seconds to the two other switches in the network.

If queuing times are very long, 5 minutes, for example, and the call is not near the beginning of the queue, it is wasteful to go through the vector loop from step 4 to step 7 every 5 seconds. For this reason, the [FIFO processing vector](#) on page 259 is more efficient.

Example of maintaining FIFO processing with LAI

One of the advantages of enhanced LAI is the ability to provide FIFO or near-FIFO call processing. The following example shows a vector that is used to achieve such call processing.

FIFO processing vector

```
1. announcement 3501
2. wait-time 0 secs hearing music
3. queue-to skill 1 pri m
4. goto step 7 if interflow-qpos < 9
5. wait-time 30 secs hearing music
6. goto step 5 if interflow-qpos >= 9
7. route-to number 93031234567 with cov n if interflow-qpos = 1
8. route-to number 99089876543 with cov n if interflow-qpos = 1
9. wait-time 5 secs hearing music
10. goto step 7 if unconditionally
```

In this vector:

Look-Ahead Interflow (LAI)

- The rapid look-ahead loop is only entered when the call reaches one of the top 8 positions in queue.
- The number of executed vector steps is reduced dramatically when call waiting times are long.

It is important to write vectors so that calls at the head of the queue have advanced to the rapid look-ahead loop by the time their turn to interflow has been reached. In the vector example shown above, if 8 calls can be serviced from queue in less than 30 seconds (which is the loop time on step 5), there can be a delay in outflowing calls to available agents at the remote sites.

Single-queue FIFO considerations


The following issues need to be taken into consideration for FIFO in a single queue:

- When there are available agents, calls are always delivered to available agents at the queuing switch before available agents at the remote switches.
- When there are calls in the queue and agents serve calls from multiple applications, the agents always service calls from the applications that are queued locally before calls from applications that are queued at another switch.
- Backup VDNs and vectors are recommended in order to provide continuous operation in the event of a failure at a queuing switch.
- EWT predictions cannot be made if the split/skill in which the calls are queued has no working agents.
- EWT predictions may be temporarily inaccurate if there are sudden, major changes in the number of working agents in the split/skill in which the calls are queued.

Example of LAI in a tandem switch configuration

Tandem LAI is implemented by using **route-to** commands that contain external destinations that route over ISDN facilities. This configuration is shown in the following figure.

LAI using a tandem switch

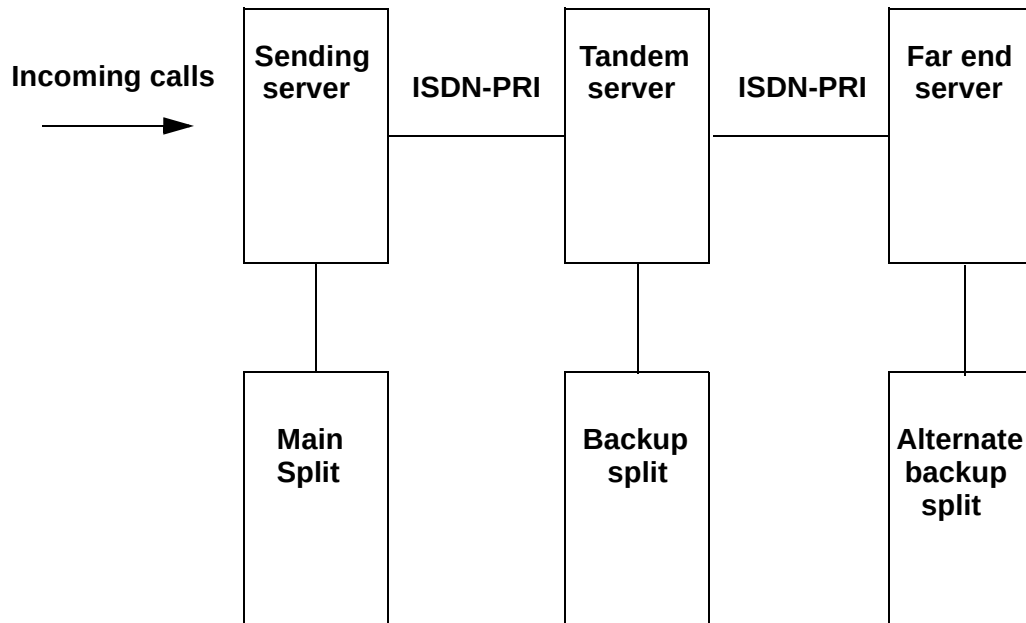

Sending switch operation

The sending switch is unaware that its LAI call is being tandemmed to an alternate switch. The operation of the sending switch in the tandem switch configuration is the same as that in the two-switch configuration.

Tandem switch operation

If the receiving switch executes a **route-to** command that routes the call over an ISDN facility before call acceptance, the **route-to** command is performed on a “look-ahead” basis in the same manner as a sending switch. If the call is accepted at the far-end switch, acceptance is passed to the sending switch, and call control is passed to the far-end

Look-Ahead Interflow (LAI)

switch, along with tandeming of the original calling party information and the original DNIS name. If the call is denied, the next step of the tandem switch vector is executed.

The following example shows a tandem switch vector.

Tandem switch vector example

```
1. goto step 6 if expected-wait in split 30 pri h > 30
2. queue-to split 30 pri h
3. announcement 200
4. wait-time 2 seconds hearing silence
5. stop
6. route-to number 4000 with cov n if unconditionally
7. busy
```

Step 1 of this vector checks the inflow threshold. If the inflow criteria are acceptable, the vector flow drops to step 2, where the **queue-to split** command provides acceptance to the sending switch. Thereafter, steps 3 through 5 provide a typical queuing-wait scheme.

If the inflow criteria are not acceptable, a branch is made to step 6. The **route-to** command in this step checks another switch that is enabled with LAI on a look-ahead basis. If this far-end switch rejects the call, a denial message is relayed back to the tandem switch, which then drops the LAI call attempt. On the other hand, if the far-end switch accepts the call, an acceptance message is relayed all the way back to the sending switch.

No ringback is provided in this tandem switch vector. This is necessary so that an acceptance message is not returned to the sending switch. This operation is appropriate for the caller because the sending switch has already returned an announcement before a LAI attempt is made to the receiving switch.

Be sure that the sending switch is not used as a backup location for the tandem switch or for any of the far-end switches. If the sending switch is administered in this manner, all trunk facilities could be tied up by a single call.

Far-end switch operation

The far-end switch is also unaware that tandeming has taken place. The far-end switch functions in the same manner as the receiving switch within the two-switch configuration.

LAI-initiated path-replacement for calls in vector processing

Path replacement for calls in queue and vector processing can be accomplished using QSIG or DCS with Reroute using ISDN SSE. For calls that are waiting in queue or in vector processing, even if the call is not connected to an answering user, path replacement can be attempted to find a more optimal path for this call. This results in more efficient use of the trunk facilities.

The **route-to** command is used in LAI to initiate a QSIG path replacement for a call. The following scenario can take place:

- At the terminating communication server, if a Path Replacement Propose operation is received for a call that is in queue or vector processing, the switch can immediately initiate path replacement using the Path Replacement Extension if the Path Replace While in Queue/Vectoring field is set to y and the Path Replacement Extension field has a valid entry. These fields are located on the ISDN parameters page of the Feature-Related System Parameters form.

Note:

The Call Management System (CMS) load r3v9ag and earlier cannot track a measured ACD call after path replacement has taken place. CMS load r3v9ah and newer does keep the CMS call record of the measured ACD call intact after path replacement takes place.

Example vector

The following example shows how an LAI vector can be written to trigger path-replacement at the terminating switch.

Note:

In order for a path-replacement to be attempted, the incoming and outgoing trunks that are used for the call must be administered with the Supplementary Service Protocol field set to b.

LAI-initiated path-replacement vector

- | |
|---|
| <ol style="list-style-type: none">1. wait 0 seconds hearing music2. queue-to skill "n" if available-agents < 63. route-to number "ARS number for ISDN trunk" with cov n4. wait 999 seconds hearing ringback |
|---|

At the receiving communication server, the vector that processes the incoming call must use an **announcement**, or **wait hearing music** vector command to enable path-replacement.

DNIS and VDN override in an LAI environment

LAI handles Dialed Number Identification Service (DNIS) and VDN Override in various ways, depending on a number of different characteristics of the call. DNIS, as described in [Call Vectoring fundamentals](#) on page 45, allows any agent with a display-equipped telephone to receive visual displays that specify the name of the called VDN. VDN Override in its basic form allows the name of a subsequently routed to VDN to be displayed to the answering agent instead of the name of the originally called VDN.

The following sections discuss how LAI handles DNIS and VDN Override.

DNIS information displayed to answering agent

For LAI, the DNIS name, which is the called VDN name from the sending switch, is presented on the display for the answering agent on the receiving switch if all of the following are true:

- The LAI option is enabled.
- The call routes to a VDN.
- The DNIS name field is not blank.

The type of DNIS information that is displayed depends upon a number of different scenarios. This information is presented in the following table.

DNIS information displayed for LAI scenarios

Scenario	Information displayed
Tandem LAI call	Look-Ahead Interflow DNIS information from the original LAI call.
No redirection at the sending switch	VDN name according to Override rules at the sending switch (active VDN).

DNIS information displayed for LAI scenarios (continued)

Scenario	Information displayed
Redirection at the sending switch (VDN in coverage path)	Original VDN name, or If multiple VDNs are accessed, the name of the VDN that was last accessed by a route-to command.
Sending switch sends a blank DNIS Name field (that is, a name is not assigned to the sending switch “called” VDN) or the trunk group is administered to not send the LAI name (see Information Forwarding on page 197).	Name associated with the receiving VDN. This name can be changed according to the rules of VDN Override at the receiving switch.

Note:

VDNs that map to vectors that place LAI calls must have their ISDN Calling Party Number (CPN) prefixes administered. If an ISDN CPN prefix is not administered, the assigned VDN name is not sent. Instead, a DNIS of all blank space characters is sent and displayed on the answering agent's terminal.

Originator's display


For internal calls, the originator's display contains the same information as for Basic Call Vectoring, but it is possible that the originator might receive unwanted display updates during LAI call attempts. In this case, LAI calls should go out over trunk groups that have the **Outgoing Display** field set to n. When the display field is set to no, internal callers who call that trunk group see the digits that they dialed on their display.

LAI with network ADR

Call Vectoring and LAI are compatible with and supplement the network services Alternate Destination Redirection (ADR) rerouting feature or equivalent service from other network providers. ADR uses ISDN-PRI connectivity with the switch in the same manner as LAI to allow the receiving system to indicate whether a call is to be accepted or rejected. The same type of vector that is used as a receiving ACD for LAI is used at the ADR-receiving ACD. If the call is accepted, it is connected to the system. If the call is rejected, the network routing number is translated to another number that routes the call to the alternate location within dialing-plan constraints. ADR allows for only one alternate location. LAI can be used at the alternate location to test other locations for less-busy conditions.

The following figure shows the configuration for a multilocation application.

ADR Example

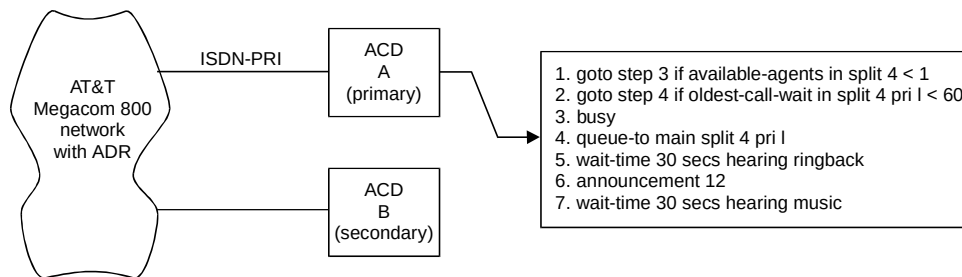

The network requires ISDN-PRI connectivity to primary location A. Connection to secondary location B may or may not be ISDN-PRI. ADR attempts to route the call to location A over the ISDN-PRI link using a routing number that selects a VDN that is assigned to the receiving vector shown.

When the routing attempt is made, Call Vectoring starts processing the vector. The example then proceeds at location A as follows:

1. Step 1 checks for staffing of the ACD split, and branches to step 3 if it is not staffed.
2. If the ACD split is staffed, step 2 checks the oldest call waiting time in the split, and branches to step 4 if it is less than 60 seconds.
3. If the ACD split is unstaffed or if the oldest call waiting time is 60 seconds or more, step 3 rejects the call and returns a busy indication to the network.
4. If the oldest call waiting time is less than 60 seconds, step 4 accepts the call and queues it. ADR then connects the call through to the receiving system.
5. Steps 5 through 7 provide ringback, announcement, and music to the caller.

If the vector at location A rejects the call by sending a busy indication back to the network over the ISDN-PRI link, ADR reroutes the call to location B which must accept the call. If location B is closed or too busy to take the call, location B can use Call Vectoring and LAI

to check other locations. If other locations exist and can take the call, location B can forward the call. If other locations do not exist or cannot take the call, location B can use Call Vectoring to route the call to location A. If location A is not open, location B can use Call Vectoring to provide an announcement or a busy tone to the caller.

Multi-site applications for Enhanced LAI

Enhanced LAI has two principal applications in a multi-site environment.

- It is possible to implement single-queue FIFO operation for any application. However, in many cases, Avaya recommends the use of BSR instead of LAI for maximum efficiency and flexibility. For more information, see [Best Service Routing \(BSR\)](#) on page 271.
- LAI can be used in combination with BSR for those switches in the network with extremely low call volumes.

For more information about using BSR and LAI together, see [Appendix E: Advanced multi-site routing](#) on page 605

LAI considerations

The following are considerations for working with LAI:

- Never interflow to a remote vector that in turn might interflow back to the same local vector. This could cause a single call to use up all available trunks.
- Do not use the **oldest-call-wait** test condition in LAI vectors. OCW corresponds to the very next call to be answered and, as such, this test condition gives no information on the current state of call overload. For example, if OCW = 30 seconds, all we know from this is that the queue was overloaded 30 seconds ago. In place of **oldest-call-wait**, use the EWT conditional. For more information, see [Expected Wait Time \(EWT\)](#) on page 166.
- If an LAI call attempt is accepted by a step that contains a **queue-to, check split**, or **route-to** command, there is a small but finite interval during which the call could be answered by an agent at the sending switch before notification of acceptance is received by the sending switch. In this case, the caller is connected to the agent at the sending switch, while the agent at the receiving switch might receive a phantom call. For this reason, consider using a short **wait-time** or **announcement** step at the receiving switch to allow the call to be accepted and taken out of the queue at the sending switch. If call acceptance is to be based on available agents, use of a **wait-time > 0**

Look-Ahead Interflow (LAI)

seconds or an **announcement** is not recommended. A **wait-time** with 0 seconds of silence might be useful in this case.

Note:

For enhanced LAI operation, there are capabilities built into the feature to eliminate or reduce the occurrence of phantom calls. If phantom calls are a problem in an enhanced LAI operation, the Interflow-Qpos EWT Threshold field has been set too low.

- When an LAI call attempt is made, the TTR (if attached) is disconnected, and any dial-ahead digits are discarded. This implies that a subsequent **collect digits** command would require that the TTR be connected.
- Be sure that the feedback provided by the receiving switch after a successful LAI attempt is consistent with what the caller has already received.
- It is perfectly acceptable for a vector to route a call over an ISDN-PRI facility to a destination that is not a VDN. In this case, the sending switch treats the call as if it were a LAI call. Generic ISDN processing at the receiving switch causes the call to be accepted. The DNIS name is ignored.
- If a LAI call terminates to a VDN on a receiving switch where the LAI option is not enabled, intelligent interflow still results. However, any relevant DNIS information is ignored, and intelligent interflow to far-end switches is not possible.
- The LAI time-out in the sending switch occurs after 2 minutes.
- T-1 equipment might modify the ISDN D-channel that is used for LAI. If multiplexors are introduced into the ISDN-PRI circuit, bit compression and echo cancellation must be turned off for the D-channel.

Troubleshooting for LAI

The following are troubleshooting suggestions when working with LAI:

- If remote agents are experiencing a high volume of phantom calls, the Interflow-Qpos EWT Threshold may be set too low or too high.
- If remote agents are experiencing a delay between becoming available and receiving a call, the following may be the cause:
 - The Interflow-Qpos EWT Threshold may be set too low.
 - An insufficient number of LAI attempts have been made from the sending switch. In this case, change the **interflow-qpos** conditional at the sending switch. For example, change **interflow-qpos=1** to **interflow-qpos <= 2**.
 - An insufficient number of tie trunks are available.
- If remote agents are receiving no calls, the maximum number of vector steps that are executed at the sending switch vector may have been reached before calls reached the head of the queue. In this case, rewrite the vector on the sending switch.

Look-Ahead Interflow (LAI)



Best Service Routing (BSR)

The Best Service Routing (BSR) feature compares specified splits/skills and selects the one that will provide the best service to a call. To respond to changing conditions and operate more efficiently, BSR monitors the status of the specified resources and adjusts call processing appropriately.

BSR can be configured for either single-site or multi-site operation. Single-site BSR compares splits/skills on the communication server where the BSR resides to find the best resource to service a call. Multi-site BSR extends this capability across a network of communication servers, comparing local splits/skills, remote splits/skills, or both, and routing calls to the resource that provides the best service.

This chapter includes the following topics:

- [Benefits of Best Service Routing](#) on page 272
- [Server and network requirements for BSR](#) on page 275
- [Special BSR terminology](#) on page 277
- [Single-site BSR](#) on page 279
- [Troubleshooting for single-site BSR](#) on page 294
- [Multi-site BSR](#) on page 295
- [Planning and administering multi-Site BSR](#) on page 317
- [Local treatment for remotely queued IP and ISDN calls](#) on page 321
- [Troubleshooting for multi-site BSR](#) on page 329
- [Tips for writing BSR vectors](#) on page 330
- [BSR-initiated path-replacement for calls in vector processing](#) on page 331

Benefits of Best Service Routing

Both single-site and multi-site BSR intelligently compare specific resources to find the one that can best service a call. In addition, multi-site BSR makes it possible for you to integrate a network of contact centers for better load balancing and optimal agent utilization. Depending on your specific application, BSR can yield a variety of other benefits as shown in the following table.

Note:

If a contact center network is heavily overloaded and a significant number of calls are being blocked or abandoned, shorter wait times may not result when BSR is used. Rather than reducing wait times, any productivity gains will allow more calls to gain access to the network.

Best Service Routing benefits

You can benefit from...	As a result of...
Increased revenue	● Better agent utilization, thus allowing more calls to be handled with a given staff level. ● Lower abandonment rates – By balancing the load between resources, BSR reduces extremes in wait times across local resources or across an entire network. ● In contact centers with Expert Agent Selection, the ability to deliver calls to the best qualified or highest revenue generating agents.
Lower costs	● Better agent utilization. ● Shorter trunk holding times. ● Reductions of ineffective interflows. ● Operation over ISDN-BRI trunks and public networks.

Best Service Routing benefits (continued)

You can benefit from...	As a result of...
Improved customer satisfaction	● Interflowing calls from centers with a surplus of calls to centers with a surplus of agents. You can achieve uniform service levels across your network. This means that all callers for a given application experience approximately equivalent waiting times. ● Shorter wait times. ● In contact centers with Expert Agent Selection, the ability to deliver calls to the best qualified or highest revenue generating agents. ● Robust information forwarding capabilities. Multi-site BSR can forward original service requirements and any caller-entered digits with each call, and can use both QSIG and non-QSIG information transport methods over private or public networks.
Increased performance and more efficient trunk usage	● Less messaging and processing required per call than in traditional LAI scenarios. ● Eliminates phantom calls to remote agents. ● Intelligent interflows that only route calls to centers with available agents.
BSR's easy configuration	● Simple vector commands. You do not need to learn complex programming languages or design comparison steps. All that you have to do is list the local and remote resources to be considered for calls and instruct the communication server to queue or deliver the call to the best resource on the list.
Improved agent productivity	● Increased efficiency. Improve your service without adding staff, or reduce staff while maintaining your current level of service. Network-wide load balancing means that agents at one location are less likely to sit idle while calls wait in queue at another location. ● No call delivery delays. In contrast to approaches that queue calls at all remote centers simultaneously, with BSR there is no delay in delivering a call when an agent becomes available.

Best Service Routing (BSR)

Best Service Routing benefits (continued)

You can benefit from...	As a result of...
Increased operating flexibility, easier staffing and scheduling	● Larger pool of agents available to take calls in a split/skill. Through its network-wide call distribution and information forwarding, BSR effectively converts distributed locations into a virtual contact center. Thus, staffing problems do not need to be solved on a center-by-center basis. BSR can automatically react to staff shortages at one center by routing more calls to other locations. ● Automatic management of sudden and unexpected increases in call volume. Large increases in call volume for a single split/skill can be distributed across other splits/skills. Spikes in call volume at a single contact center can be distributed across all contact centers, provided that sufficient trunk capacity is available between servers.
Improved service levels	● Lower average speed of answer (ASA).

Server and network requirements for BSR

For single-site BSR applications, your Avaya communication server must meet the requirements that are shown below. The requirements for ISDN trunks and LAI do not apply to single-site BSR applications.

To use multi-site BSR applications, all servers involved and the network connecting them must meet all of the requirements that are described in this section.



CAUTION:

To ensure that your network meets the requirements for BSR support, contact your Account Executive about BSR network certification.

Server requirements

Your Avaya communication server must meet the requirements shown in the following table to support BSR.

Requirements to use Best Service Routing

Form	Page	Field	Must be set to...
System-Parameters Customer-Options	2	ISDN-BRI Trunks ¹	Y
		ISDN-PRI Trunks ^{1 2}	Y
	3	Vectoring (G3V4 Advanced Routing)	Y
		Vectoring (Best Service Routing)	Y
		Lookahead Interflow (LAI) ³	Y
Feature-Related System Parameters	8	Adjunct CMS Release	R3V6 or higher, or left blank

1. Multi-site BSR operates over both BRI and PRI trunks. ISDN connectivity is only necessary if you want to use multi-site BSR, in which case one or both of these fields must be set to "Y."

2. ATM trunking and IP trunking can be set up to emulate ISDN PRI. For information on setting this up, see the *Administration for Network Connectivity for Avaya Communication Manager*, 555-233-504, and *ATM Installation, Upgrades and Administration using Avaya Communication Manager*, 555-233-124.

3. Look-Ahead Interflow is only necessary if you want to use multi-site BSR.

Tip:

If you begin using BSR and then turn it off, you can not set Vectoring (Best Service Routing) to **n** until you remove all BSR commands from vectors. If you are using multi-site BSR with Look-Ahead Interflow and want to turn LAI off, you can not set Lookahead Interflow (LAI) to **n** until you remove all **consider location**, **reply-best**, and **interflow-qpos** commands from vectors.

Network requirements

To support multi-site BSR, networks must meet both the criteria for LAI call control operation over switched networks (see [Look-Ahead Interflow \(LAI\)](#) on page 247) and the following criteria:

- The network must support end-to-end transport of codeset 0 user data, either as a User-to-User Information Element (UUI IE) or by QSIG Manufacturer Specific Information (MSI IE), in the ISDN SETUP and DISCONNECT messages. For more information, see [Determining user information needs](#) in [Information Forwarding](#) on page 197.
- With BSR poll calls, the information is forwarded back in the DISCONNECT message. In this case, the network must support forwarding of UUI in the first call clearing message, while the call is still in the call proceeding state, prior to the active state.
- Private networks can be configured for either QSIG (using MSI packaged in codeset 0 Facility IEs) or non-QSIG (using a codeset 0 UUI IE) transport. Currently, public networks do not support QSIG and user data can only be transported by the UUI IE when supported by the network. Future public network offerings may support QSIG, possibly by Virtual Private Network.
- The switch must support the ISDN country protocol.
- The network byte limit for the user data portion of the user information contents must be large enough to carry the data needed for the customer application.

Note:

Some public network providers may require service activation, fees for user information transport, or both.

BSR, LAI, enhanced information forwarding, and UCID have been tested with several major carriers. To find out if these capabilities work with your carrier, check with your account team for the most current information.

If testing has not been done to verify operation over the public networks that are involved with the preferred specific configuration, use of private ISDN trunking between the nodes should be assumed until successful testing is complete.

Special BSR terminology

Understanding the BSR terms listed below will be helpful as you read through the material in this chapter. The following list contains terms pertaining to both single-site BSR and multi-site BSR.

adjusted EWT - Expected Wait Time plus a user adjustment set by a **consider** command.

agent selection method - The method that the communication server uses to select an agent in a hunt group when more than one agent is available to receive the next call. Possible methods are:

- UCD-MIA
- UCD-LOA
- EAD-MIA
- EAD-LOA

The agent selection method is a property of hunt groups and is set in the Group-Type field on the Hunt Group form.

Note:

To use an EAD available agent strategy, Expert Agent Selection (EAS) must be enabled.

application - A general term for a system in any contact center that handles calls of a particular type. In relation to BSR, any specific implementation of multi-site BSR.

application plan - Used only in multi-site applications, the application plan identifies the remote switches that may be compared in consider series. The plan also specifies the information that is used to contact each switch and to interflow calls to it.

best - Includes the following conditions

- No agents available - When no agents are available in any of the specified splits/skills, the “best” resource is the one with the lowest adjusted EWT.
- Agent available in one resource – When an agent is available in one and only one of the splits/skills that are specified in a consider series, that agent is the “best” and the call is delivered to that agent. If the BSR Available Agent Strategy field is set to 1st - found, BSR ignores all subsequent steps in the consider series. If any other available agent strategy is used, all remaining resources are still considered before the call is delivered.
- Agents available in two or more resources – When agents are available in two or more splits/skills, the “best” agent is the one that best meets the criteria that are specified in the BSR Available Agent Strategy field. For example, if the available agent

Best Service Routing (BSR)

strategy is UCD-MIA, the best agent out of those available will be the agent with the longest idle time.

Best Service Routing (BSR) - A feature that is based on call vectoring and routes ACD calls to the resource that is best able to service each call. BSR can be used on a single switch, or it can be used to integrate resources across a network of switches.

BSR available agent strategy - A field that appears on the VDN form when either version of BSR is enabled. The entry in this field is a property of the VDN and its assigned vector. Possible entries are:

- 1st-found
- UCD-MIA
- UCD-LOA
- EAD-MIA
- EAD-LOA

When the VDN is the active VDN for a call, as determined by VDN Override, this field determines how BSR commands in the vector identify the best split/skill when several have available agents.

consider series - consider commands are typically written in a set of two or more. This set of **consider** commands is called a consider series. A consider series in a status poll vector might have just one consider step.

consider sequence - A consider sequence is a consider series plus a **queue-to best, check-best, or reply-best** step.

Expected Wait Time (EWT) - Expected Wait Time is an estimate of how long a call in the queue will have to wait before it is connected to an agent.

Intelligent polling - An automatic feature of BSR that significantly reduces the number of status polls that are executed. When a remote location cannot be the best resource at a given moment in time, the intelligent polling feature temporarily suppresses polls to that location.

interflow - The process of routing an incoming call to an external switch without answering it at the origin switch.

poll suppression - A component of BSR intelligent polling that eliminates wasteful polling of remote locations which have returned poor adjusted EWTs.

resources - An agent, split, skill, or location

status poll - A call that is placed by a **consider location** vector command to obtain status data from a remote location in a multi-site BSR application.

Single-site BSR

Single-site BSR is a simple, logical extension of call vectoring. Like any other vector, vectors with BSR commands are assigned to one or more VDNs. Using new vector commands and command elements, you tell the communication server to compare, or “consider,” specific splits/skills for each call that is processed in that particular vector. Throughout the comparison, the server can remember which resource is the best based on how you define “best.” BSR vectors can deliver a call to the first available agent found, or they can consider all of the specified resources and deliver the call to the best split/skill. If no agents are available in any split/skill, the call is queued to the split/skill with the shortest adjusted EWT.

Command set – single site BSR

The following table shows the forms, the vectors, and the vector commands and command elements that are used in single-site BSR. The following table shows the vector commands and command elements used in single-site BSR applications.

Vector commands and usage for single-site BSR

Commands and command elements		Use this...
Forms	Vector Directory Number form	To link a VDN to a BSR vector. To set the agent selection strategy that will be used for all calls to that VDN.
	Call Vector form	To confirm that BSR is administered. To write vectors that use BSR commands.

Vector commands and usage for single-site BSR (continued)

Commands and command elements		Use this...
Commands	consider split/skill	To obtain the Expected Wait Time or agent data that is needed to identify the best local resource. One consider step must be written for each split/skill that you want to check. Since the consider command is designed to compare two or more resources, consider commands are typically written in a series of two or more with the sequence terminating in a queue-to best vector step. This set of consider commands and a queue-to best step is called a consider sequence.
	queue-to	With the best keyword to queue calls to the best resource that is identified by the consider sequence.
	check	With the best keyword to queue calls to the best resource that is identified by the consider sequence if the resource meets certain conditions.
Key word	best	Use the best keyword in queue-to , check , and goto commands that refer to the resource that is identified as best by a series of consider steps
Conditional	wait-improved	To prevent calls from being queued to an additional split/skill when the reduction in Expected Wait Time is not enough to be useful. "Wait improved" means that a call's EWT must be improved by a specific amount, specified in seconds, over its current EWT or the communication server does not queue the call to the additional split/skill.
User adjustment	adjust-by	To specify your preferences for the splits/skills that might handle the calls for a particular application, reflecting factors such as agent expertise or reducing calls to a backup split/skill. When a vector considers a local resource you can make the selection of that split/skill less desirable. The higher the setting, the less chance that resource will be selected over another with a lower setting (for example, set to 30 makes that choice 30% less desirable). With EWT returned, the setting increases the returned expected wait time for comparison with other returned EWTs. As a result, this split/skill is less likely to service the call unless its EWT is significantly less than that of any other available split/skill. Optionally, the adjust-by setting applies in the available agent case. If you are using the UCD-MIA or EAD-MIA available agent strategy, the setting decreases the returned agent idle time, making the agent appear less idle (busier). If you are using the UCD-LOA or EAD-LOA available agent strategy, the setting increases the returned agent occupancy, making the agent appear more occupied (busier). In either case with EAD, the MIA or the LOA is used as a tie breaker if more than one site has an agent available with the same highest skill level.

How BSR determines the best resource

BSR determines the best resource to service a call by examining one or all of the following variables:

- The EWT of the resource
- Any user adjustments
- The availability of agents
- The selection strategy for the active VDN.

Note:

The BSR available agent strategy that applies to a given call is the strategy that is assigned to the active VDN for that call, as determined by VDN override.

Call surplus situations

Every BSR application compares a set of predetermined resources (splits/skills) and selects the “best” resource to service the call.

In a call surplus situation when no agents are available, the best resource is the split/skill with the lowest Expected Wait Time (EWT). For purposes of calculating the best resource in a call surplus situation, BSR allows you to adjust the EWT figure for any split/skill. The actual EWT for calls in queue is not changed. Only the figure used in the calculations performed by the BSR feature is changed. You do not have to enter adjustments, but the ability to adjust the EWT for splits/skills allows you to program preferences in vectors. Because of agent expertise, for example, or the availability or cost of tie trunks, you might prefer that some resources do not service a call unless doing so significantly decreases the time in queue for the call.

It is possible for you to make adjustments to agent availability using the **consider** step. For more information, see [Agent selection adjustments](#) on page 283.

Agent surplus situations

In an agent surplus situation when one or more agents are available to take incoming calls, BSR delivers a new call according to the BSR Available Agent Strategy that is specified on the VDN form. The “best” resource is the split/skill that meets the criteria that

Best Service Routing (BSR)

are defined by the strategy that was administered for that VDN. BSR can use any of the five strategies shown in the following table to select an agent when agents are available.

BSR available agent strategies

If BSR Available Agent Strategy is set to...	The call will be delivered to...
1st-found	The first available agent. BSR will not consider any other resources as soon as it finds an available agent.
ucd-mia	The resource with an agent who has been idle for the longest amount of time. BSR compares all of the splits/skills that are specified in the vector before delivering the call.
ead-mia	The resource with an agent who has the highest skill level that is relevant to the call and who has been idle the longest. BSR compares all of the splits/skills that are specified in the vector before delivering the call.
ucd-loa	The resource with the least-occupied agent. BSR compares all of the splits/skills that are specified in the vector before delivering the call.
ead-loa	The resource with an agent who has the highest skill level that is relevant to the call and who is the least occupied. BSR compares all of the splits/skills that are specified in the vector before delivering the call.

For more information on LOA, see *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784, or *Avaya Business Advocate User Guide*, 585-210-711. LOA is available with the Contact Center Elite package.

When agents are available in one or more of the specified resources, BSR does not consider resources (local or remote) that return an EWT (call queue/call surplus situation) in selecting the best place to send the call.

Note:

The BSR Available Agent Strategy that is assigned to a VDN should match the agent selection method that is used in the splits/skills considered by a BSR application.

Agent selection adjustments

An option has been provided to have the BSR adjust-by value apply in the agent surplus (agents available) situation. This adjustment provides the ability to use the **consider** step adjustment value to prioritize (handicap) agent resources when agents are available.

When the adjustment is used, the **consider** step uses the following syntax:

consider split/location adjust-by *x*

The server applies the agent adjustment in the same manner as the calls in queue/call surplus (lowest EWT) situation.

To select an adjustment, think in terms of reducing the importance of a resource/site and in relative percentage — the higher the adjustment, the less desirable it is to pick that agent/site. So, if *x* = 30, then the agent/site is 30% less desirable.

The available agent adjustment applies to the UCD-MIA, UCD-LOA, EAD-MIA, and EAD-LOA call distribution methods. For the most idle agent distribution methods, the adjust-by lowers the idle time value returned by the agent/site. For the least occupied agent distribution methods, the adjust-by raises the returned occupancy level of the agent/site. In either case, with EAD, the MIA or LOA is used as a tie breaker if more than one site has an agent available with the same highest skill level.

The same adjust-by value in the **consider** step applies to both agent surplus and call surplus situations.

Example of basic single-site BSR

This example shows the simplest use of BSR. The central element of all single-site and multi-site BSR is a VDN/vector pair. The vector contains the commands that actually process the call, but the active VDN for the call contains information that is used by some vector steps. For single-site BSR, the active VDN for a call sets the available agent strategy that is used by the vector.

Single-site BSR example VDN Form

```
change vdn xxxxx                                     page 1 of 2
      VECTOR DIRECTORY NUMBER
      Extension: 5000
      Name: Single-site BSR
      Vector Number: 234
      Attendant Vectoring? n
      Meet-me Conference? n
      Allow VDN Override? n
      COR: 59
      TN: 1
      Measured: internal
      Acceptable Service Level (sec): 20
      VDN of Origin Annc. Extension:
      1st Skill:
      2nd Skill:
      3rd Skill:
```

```
change vdn xxxxx                                     page 2 of 2
      VECTOR DIRECTORY NUMBER
      Audix Name:
      Messaging Server Name:
      Return Destination:
      VDN Timed ACW Interval:
      BSR Application:31
      BSR Available Agent Strategy: 1st-found
      Conference Access Code:
      Conference Controller:
      Display VDN for Route-To DAC?
```

In the example Vector Directory Number form shown above, the BSR Available Agent Strategy field is set to 1st-found. If vector 234 uses BSR commands, as soon as a **consider** step locates a resource with an available agent any subsequent **consider** steps are skipped and the call is delivered to that resource. Resources that are specified in any subsequent **consider** commands are not checked. If no split has an available agent, the call is queued to the split with the lowest adjusted EWT.

If the Allow VDN Override? is set to n and a second VDN and vector are used to process this call, the 1st-found strategy specified in VDN 5000 will still be used.

In the preceding example, Vector Directory Number 5000 is associated with vector 234, which is shown below. In this example, vector 234 compares two splits. No adjustment is assigned to either resource, indicating that both splits are equally suited to service calls since neither is preferred to the other. In reality, such a vector would probably have additional steps after step 4, such as **announcement** or **wait-time** commands. These steps are omitted in this example for purposes of clarity.

Single-site BSR example vector

```

1. wait time 0 secs hearing ringback
2. consider split 1 pri l adjust-by 0
3. consider split 2 pri l adjust-by 0
4. queue-to best

```

Notice that the **consider** commands follow each other in unbroken sequence and that the **queue-to best** command immediately follows the last **consider** command. This structure is called a “consider series,” and it is recommended that you typically write such series in uninterrupted order. A few commands, such as the **goto** command, which cause little if any delay in the execution of the **consider** steps, may be used. In general, however, do not put other commands between **consider** steps, or between a **consider** step and a **queue-to best** step. Even if BSR still works in that situation, you might seriously impair the performance of the vector.

Consider commands collect and compare information. When a call is processed in the vector above, the first consider step collects and temporarily saves the following information about split 1:

- The fact that split 1 is a local split
- The queue priority that is specified in the **consider** step
- The user adjustment that is specified in the **consider** step
- The split's
 - Split number
 - Expected Wait Time

If EWT=0, which indicates that one or more agents are available, the step also collects all of the agent information that might be needed by the BSR available agent strategy. This includes:

- Agent Idle Time (AIT)
- Agent Occupancy (AOC)
- The skill level of the agent in the split/skill who will receive the next call

In the example shown above, neither split has an available agent when the consider series executes. If one did, the call would be delivered to that split by the **queue-to best** step. Since there are no available agents in either split, the complete set of saved data now defines the “best” resource—for the moment. The second consider step collects the same data and compares it to the current “best” data. For this example, assume that the EWT for split 1 is 40 seconds and the EWT for split 2 is 20 seconds. When the second **consider** step executes, its data will replace the “best” data from step 1 because its adjusted EWT is lower. The “best” data is essentially a placeholder. When a **queue-to best** step executes, it reads the data that is saved as the “best” at that moment and queues the call to that split. In this case, the best data was collected from split 2, so the call is queued to split 2 at the specified priority.

Questions

What if there are available agents in both splits?

Since the BSR Available Agent Strategy in this example is 1st-found, the consider series will skip any **consider** steps after step 2 and the **queue-to best** step will deliver the call to split 1, which is the first split/skill with an available agent that is found by the vector.

In any BSR vector, the order of the **consider** steps should reflect your preferences for the resources to be considered. Put the step that considers the most preferred split/skill first, the step for your second preference second, and so forth in the consider series.

What if there are several available agents in split 1? Which agent receives the call?

When more than one agent is available in a split, the BSR **consider** command collects agent data only for the agent who will receive the next call to that split. This agent is identified according to the agent selection method that is specified in the Group-Type field on the Hunt Group form.

Note:

For greatest efficiency, the agent selection method used in the splits/skills considered by a BSR vector should match the BSR Available Agent Strategy that is assigned to the active VDN.

User adjustments in single-site BSR

You may have preferences as to which splits/skills should answer certain types of calls. In both single-site BSR and multi-site BSR, the **adjust-by** portion of the **consider** command makes it possible for you to program these preferences into your vectors.

You can assign a value of 0 to 100 in user adjustments. The units of this value are supplied by the server depending on the conditions whenever that **consider** step executes. For example, in the command **consider split 1 pri h adjust-by 20**, the server interprets **adjust-by 20** to mean “add 20% to the EWT, but add at least 20 seconds.”

Note:

If the user adjustment were defined as a number of seconds, BSR would not be efficient when EWT was high. If the user adjustment were defined as a percentage, BSR would not be efficient when EWT was low. Such efficiencies, while always important, become critical in multi-site BSR applications where issues of trunk cost and capacity are involved.

For Expected Wait Times of 1 to 100 seconds, an adjustment of 20 will therefore add 20 seconds. Above 100 seconds, the same adjustment will add 20% to the EWT for the split/skill that is specified in the **consider** step. The following table shows the results of applying a constant adjustment to a range of Expected Wait Times.

User adjustments in BSR

EWT of resource (seconds)	User adjustment	Adjustment applied by the server (seconds)	Adjusted EWT used to select resource
10	20	20	30
60		20	80
120		24	144
300		60	360

Example of single-site BSR with adjustments

The following example shows a more complex implementation of single-site BSR. Four skills in an Expert Agent Selection environment are compared. The Expected Wait Time (EWT) for some skills is adjusted to reflect the administrator's preferences

Single-site BSR example VDN form

change vdn xxxxx

page 1 of 2

VECTOR DIRECTORY NUMBER

```

                Extension: 5001
                Name: Single-site BSR
                Vector Number: 11
    Attendant Vectoring? n
    Meet-me Conference? n
    Allow VDN Override? n
                COR: 59
                TN: 1
                Measured: internal
    Acceptable Service Level (sec): 20
    VDN of Origin Annc. Extension: 501
                1st Skill:
                2nd Skill:
                3rd Skill:
  
```

change vdn xxxxx

page 2 of 2

VECTOR DIRECTORY NUMBER

```

                Audix Name:
    Messaging Server Name:
                Return Destination:
    VDN Timed ACW Interval:
                BSR Application:19
    BSR Available Agent Strategy: EAD-MIA
    Observe on Agenst Answer?:
    Conference Access Code:
    Conference Controller:
    Display VDN for Route-To DAC?
  
```

In the example shown above, the BSR Available Agent Strategy field is set to EAD-MIA. If vector 11 uses BSR commands, calls are not automatically delivered to the

first resource with an available agent that is found. All **consider** steps in vector 11 are executed and one of the following things happens:

If ...	Then...
No skill has an available agent	The call queues to the skill with the lowest adjusted EWT.
Only one skill has an available agent	The call is delivered to that skill.
Two or more skills have available agents	The call is delivered to the skill with the most expert agent.
Two or more skills have available agents with the same skill level	The call is delivered to whichever of these agents has been idle the longest.

Also note that Allow VDN Override? is set to n. If a second VDN and vector are used to process this call, the EAD-MIA strategy that is specified in VDN 5001 is used. If Allow VDN Override? is set to y and vector 11 routes some calls to another VDN, the subsequent VDN's available agent strategy governs the operation of **consider** steps in its vector.

The following example vector 11, which compares four skills.

Single-site BSR example vector

```

1. wait-time 0 secs hearing ringback
2. consider skill 1 pri l adjust-by 0
3. consider skill 2 pri l adjust-by 30
4. consider skill 11 pri l adjust-by 30
5. consider skill 12 pri l adjust-by 30
6. queue-to best
7. wait-time 10 secs hearing ringback
8. announcement 1001
9. wait-time 30 secs hearing music
10. goto step 8 unconditionally

```

For this example, assume that the Expected Wait Times of the four skills are 95, 60, 180, and 50 seconds, respectively. Notice that all **consider** steps except the first adjust the EWT returned by the specified skill. Skill 1 is the preferred skill to handle calls to VDN 5001, so its EWT is not adjusted. Skills 2, 11, and 12 can handle this call type, but they are not preferred. The adjustment of 30 means that, in call surplus situations, these skills will not handle calls to VDN 5001 unless their EWT is at least 30 seconds better than the EWT in skill 1.

Best Service Routing (BSR)

The following table shows the adjustments that would be applied to each skill given its EWT and the user adjustment specified in the **consider** step. The last column shows the adjusted EWT the server will use to select a skill for the call.

User Adjustments

Skill number	User adjustment in the consider step	Actual EWT (seconds)	Adjustment applied by the server (seconds)	Adjusted EWT used in BSR calculations (seconds)
1	0	95	0	95
2	30	60	30	90
11	30	180	54	234
12	30	50	30	80

Since the available agent strategy is not 1st-found, all four **consider** steps are executed each time that the vector processes a call. In this example, there are no available agents in any of the skills. In fact, EWT is high enough in the first three skills for the server to queue the call to skill 12.

When the **queue-to-best** step executes, the data in the best data placeholder is the data from skill 12 and so the call is queued to that skill. From this point on, if the call is not answered during the execution of step 7, a common vector loop regularly repeats an announcement for the caller while he or she waits in the queue.

For DEFINITY software version 9.1 or later, user adjustments also apply to available agent situations (with a strategy other than first found) in a manner that is similar to EWT. For more information, see the “Best Service Routing” section in: *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784.

Questions

What if there is an available agent in one skill? Will user adjustments be applied?

Since the BSR Available Agent Strategy in this example is EAD-MIA, the entire consider series will always be executed to check all of the skills for available agents. If only one skill has available agents, the call is delivered to that skill and user adjustments are not applied.

What if there are available agents in two skills? Which skill gets the call? Will user adjustments be applied?

Since the BSR Available Agent Strategy for VDN 5001 (the active VDN) is EAD-MIA, the call is delivered to the skill with the most expert agent. If there are available

agents in both skills with the same skill level, their user adjusted idle times are compared and the call goes to the skill with the agent who has the longest adjusted idle time.

If a split/skill has more than one available agent, remember that it is the split/skill's agent selection method that determines which agent's data is used in BSR selection of the best resource.

What if no agents are staffed in a skill? Will the server recognize this?

Yes. Under any of the following conditions, the EWT returned from a split/skill is infinite:

- No agents logged in
- No queue slots available
- All agents in AUX work mode

The server logs a vector event and goes to the next vector step without changing the data in the best placeholder. A resource with an infinite EWT is never selected as the best resource.

Can VDN skills be used in consider steps?

Yes. For example, **consider skill 1st [2nd, 3rd] pri m adjust-by 0** will collect data on the 1st [2nd, 3rd] skill, as defined for the active VDN.

Planning and administering single-site BSR

This section presents information that is specific to BSR. Follow existing procedures to add or change other properties of VDNs and vectors that are not discussed in this section.

First, confirm that your server meets the requirements for single-site BSR if you haven't already done so. See [Server and network requirements for BSR](#) for a listing of requirements.

Planning

To work more efficiently, you may want to record goals, VDN extensions, vector numbers, and other information on paper before you begin your administration session. To do this, complete the following:

1. Select the group of callers for which you want to use single-site BSR, and identify the VDNs and vectors that support this group.
2. Define your goals. For example, your goals in using BSR might be faster average speed of answer, or better service by routing calls to the most qualified agents.
Different VDNs or vectors may have different goals.
3. Decide which agent selection strategy that you will assign to each VDN in order to best achieve the goals that are relevant to that VDN.
4. Decide whether you will allow VDN Override for each of the VDNs that are identified.

Administration

Use this procedure to administer single-site BSR, complete the following:

1. To go to the Vector Directory Number form for the first VDN you identified in step 1 of [Planning](#), type **add vdn xxxxx** or **change vdn xxxxx** at the command line prompt and press Enter, where **xxxxx** is a valid VDN extension as defined in the system dial plan.
2. In the Allow VDN Override? field, enter **y** or **n**. If the call is directed to another VDN during vector processing:
 - **y** allows the settings on the subsequent VDN, including its BSR Available Agent Strategy, to replace the settings on this VDN.
 - **n** allows the settings on this VDN, including its BSR Available Agent Strategy, to replace, or override, the settings on the subsequent VDN.

3. In the BSR Available Agent Strategy field, enter the identifier for the agent selection method that you want this VDN to use.

When this VDN is the active VDN for a vector that uses BSR, the available agent strategy determines how calls are directed when one or more of the specified resources have available agents. If there is only one split/skill with available agents, calls are delivered to that resource.

If you enter...	Consider series in vectors will select the resource with...
1st-found	The first available agent. BSR does not consider any other resources as soon as it finds an available agent.
ucd-mia	The agent who has been idle the longest. BSR will compare all of the splits/skills that are specified in the vector before delivering the call.
ead-mia	The agent with the highest skill level who has been idle the longest. BSR compares all of the splits/skills that are specified in the vector before delivering the call.
ucd-loa	The least-occupied agent. BSR compares all of the splits/skills that are specified in the vector before delivering the call.
ead-loa	The agent with the highest skill level who is the least occupied. BSR compares all of the splits/skills that are specified in the vector before delivering the call.

4. Press **Enter** to save your changes.

You are now ready to write or modify the vector that is assigned to this VDN. For tips on using BSR commands in vectors, see [Tips for writing BSR vectors](#) on page 330.

Troubleshooting for single-site BSR

You should regularly execute a **display events** command for the appropriate vectors, especially if you have just implemented a new BSR application. Vector events will identify and indicate the source of common malfunctions and administration errors.

For a list of BSR vector events and definitions, see [Troubleshooting vectors](#) on page 571.

Note:

Only the most recent events are displayed when a **display events** command is executed. For this reason, you should periodically display vector events to help quickly identify problems.

To verify that your BSR vectors are operating as intended, use a **list trace vdn** or **list trace vec** command to observe processing of an individual call. See [Clearing events](#) on page 604 for more information.

Note:

The **list trace vdn** and **list trace vec** commands are blocked if the Tenant Partitioning feature is enabled.

Multi-site BSR

Multi-site BSR extends all of the capabilities of single-site BSR across a network of communication servers. Multi-site BSR compares local splits/skills and remote splits/skills, and route calls to the resource that provides the best service. Multi-site BSR has special features that work to ensure efficient use of processor power and network resources in your BSR applications.

This section includes the following topics:

- [Multi-site BSR command set](#) on page 295
- [Multi-site BSR applications](#) on page 297
- [Example of multi-site BSR](#) on page 300
- [BSR available agent strategies](#) on page 306
- [More on status poll and interflow vectors](#) on page 306
- [User adjustments in multi-site BSR](#) on page 306
- [Example of multi-site BSR with limited trunking](#) on page 308
- [Example of multi-site BSR with slow networks](#) on page 313
- [Example for handling excessive wait times](#) on page 316
- [Selecting or administering application plans](#) on page 317
- [Administering the BSR Application Plan](#) on page 318

Multi-site BSR command set

The following table shows the forms, the vectors, and special vector commands and command elements that you use to administer multi-site BSR applications. The table also briefly describes the purpose of each component.

Vector commands and usage for multi-site BSR

Forms	
Best Service Routing Application Plan form	• To define the group of remote sites that will be polled by a specific application. • To assign a unique name and number to each application. • To assign routing numbers for the status poll and interflow VDNs.

Best Service Routing (BSR)

Vector commands and usage for multi-site BSR (continued)

Vector Directory Number form	● To link a VDN to a BSR application by its application number. ● To link the VDN to a BSR vector. ● To set the agent selection strategy that will be used for all calls to that VDN.
Call Vector form	● To confirm that BSR is administered and to program the vector steps for BSR.
ISDN Trunk forms	● To tell the communication server whether to forward user information by Shared UUI or QSIG MSI.
List Best Service Routing Applications form	● To display a list of all the BSR applications by name and number.
System Capacity	● To monitor the number of BSR application-location pairs that are assigned in your system.
VDNs and Vectors	
Primary VDN (the active VDN for the call at the origin, as determined by VDN override)	● To define the application plan and available agent strategy that are used by the vector that is assigned to this VDN.
Primary vector	● To control call processing at the original server and compare local and remote resources.
Status poll VDN/vector	● To respond to status poll calls from another server. The status poll vector considers a set of local splits/skills and returns data on the best resource to the original server.
Interflow VDN/vector	● To accept BSR calls from another server and queue them to the best of the local resources considered.
Commands	
consider split/skill	● To obtain the Expected Wait Time or agent data that is needed to identify the best local resource. One consider step must be written for each split/skill that you want to check. Since the consider command is designed to compare two or more resources, consider commands are typically written in a series of two or more with the sequence terminating in a queue-to best vector step. This set of consider commands and a queue-to best step is called a consider sequence.
consider location	● To obtain the Expected Wait Time or agent data that is needed to identify the best resource at a remote server. One consider step must be written for each location that you want to check. Routing information is obtained from the BSR Application plan for the active VDN.

Vector commands and usage for multi-site BSR (continued)

reply-best	● To return data to another server in response to a status poll
queue-to	● With the best keyword to queue calls to the best resource that is identified by the consider sequence.
check	● With the best keyword to queue calls to the best resource that is identified by the consider sequence if the resource meets certain conditions.
Key word	
best	● In queue-to, check, and goto commands that refer to the resource identified as best by a series of consider steps
Conditional	
wait-improved	● To prevent calls from being queued to an additional split/skill—local or remote—when the reduction in Expected Wait Time is not enough to be useful. “Wait improved” means that a call’s EWT must be improved by a specific amount, which is a figure that you specify in seconds, over its current EWT or the server will not queue it to the additional split/skill.
User adjustment	
adjust-by	● To control long-distance costs and limit trunk usage, reflecting factors such as availability of the trunks or agent expertise at remote locations. When a vector polls a local or remote resource, you can make the selection of that site less desirable. The higher the setting, the less chance that resource will be selected over another with a lower setting. With EWT returned, the setting increases the returned expected wait time for comparison with other returned EWTs. Optionally, the adjust-by setting applies in the available agent case. If you are using the UCD-MIA or EAD-MIA available agent strategy, the setting decreases the returned agent idle time, making the agent appear less idle (busier). If you are using the UCD-LOA or EAD-LOA available agent strategy, the setting increases the returned agent occupancy, making the agent appear more occupied (busier). In either case with EAD, the MIA or the LOA is used as a tie breaker if more than one site has an agent available with the same highest skill level.

Multi-site BSR applications

You can implement BSR at a single location solely by using the BSR commands in vectors. Using BSR across a network is more complex and requires additional administration.

A series of **consider location** steps in a multi-site BSR vector contacts one or more remote locations. You need to define these locations, tell the server how to contact each one, and set up VDNs and vectors to handle communications between the origin server

Best Service Routing (BSR)

and the remote (or receiving) servers. The BSR application should support some larger application in your contact center that handles calls of a particular type.

Note:

Any combination of split/skill numbers, VDN numbers, and vector numbers can be used to support a single customer application or call type across a network. For clarity and simplicity, Avaya recommends that the BSR Application Plan number and the location numbers for a given application be the same on all servers.

You also need to set up ISDN trunk groups, set the parameters for information forwarding (UUI Transport), and administer numbering plans and AAR/ARS tables.

Multi-site BSR starts with the active VDN for a call, as determined by VDN override. If you want any specific VDN/vector pair to interflow calls using multi-site BSR, you must create a specific application for it. A multi-site application must contain the elements shown in the following table.

Required elements of a multi-site BSR application

A BSR application consists of...	Which serves this purpose...
The Primary VDN	The Primary VDN is the active VDN for a call at the origin server, as defined by VDN override. Therefore, the Primary VDN in a BSR application does not have to be the VDN that originally received the incoming call. The primary VDN links its assigned vector to a BSR application plan and sets the BSR Available Agent Strategy.
The Primary vector that handles the incoming call on the origin server	The Primary vector contacts the specified remote servers, collects information, compares the information, and delivers or queues the call to the resource that is likely to provide the best service.
An application plan	The application plan identifies the remote servers that you can compare and specifies the information that will be used to contact each server and to route calls to it.

Required elements of a multi-site BSR application (*continued*)

A BSR application consists of...	Which serves this purpose...
Two VDN/vector pairs on each remote server: ● Status poll VDN/vector ● Interflow VDN/vector	Status poll VDN/vector The status poll vector compares splits at its location and replies to the origin server with information on the best of these splits. Each remote server in a given application must have a dedicated status poll VDN/vector.
	Interflow VDN/vector When a given remote server is the best available, the origin server interflows the call to this VDN/vector on the remote server. Each remote server in a given application has to have a dedicated interflow VDN/ vector. The steps in this vector deliver or queue the call, as appropriate, to the best resource that is found by the status poll vector.

To create a multi-site BSR application, you start by creating an application plan on the origin server.

Note:

Remember that the terms “local,” “origin,” and “remote” are relative terms. In most networks that use multi-site BSR, every server can interflow calls to other servers and receive interflowed calls from other servers. Therefore, every server in the network may have all the elements described above. For clarity in the following discussions, “local” or “origin” means a server that is considering or might consider whether to interflow a call. “Remote” means any server that is polled or might be polled by this first server.

Application plans

The application plan identifies the remote servers that you can compare and specifies the information that is used to contact each server and to route calls to it.

The plan for each application is identified by the application number and a name. It specifies the remote servers that might be polled by the application and identifies each with a number called the location number. The plan also specifies the numbers for the status poll and interflow VDNs for each remote server. Whatever you would dial to reach these VDNs is what should be entered in these fields: full length numbers as well as AAR, ARS, UDP, or public network numbers will work.

You create application plans on the Best Service Routing Application form. A plan for an application with three remote servers might look like the following example.

Sample multi-site BSR Application Plan

BEST SERVICE ROUTING APPLICATION PLAN						
Number: 15 Name: Customer Service Maximum Suppression Time: 60 Lock? y						
Num	Location Name	Switch Node	Status Poll	VDN	Interflow VDN	Net Redir?
1	New Jersey	320	84015		84115	n
2	Denver	18	913031234015		913031234115	n
4	New York	12345	912121234015		912121234115	n
---	---	---	---	---	---	n
---	---	---	---	---	---	n
---	---	---	---	---	---	n
---	---	---	---	---	---	n
---	---	---	---	---	---	n
---	---	---	---	---	---	n
---	---	---	---	---	---	n
---	---	---	---	---	---	n
---	---	---	---	---	---	n
---	---	---	---	---	---	n
---	---	---	---	---	---	n
---	---	---	---	---	---	n

The maximum number of application plans may vary depending on your Avaya Communication Manager software release and platform. For more information, see *System Capacities Table for Avaya Communication Manager on Avaya Media Servers*, 555-245-601. To access the document online, go to <http://avayadocs.com>, select **Document Search**, and search for document number 555-233-605.

By entering the application number from this plan on a VDN form, you can link a given VDN on your local server to this list of locations. This VDN becomes the primary VDN for the application. For example, if the primary vector contains instructions to consider locations 1 and 2, the server places a status poll call to the status poll VDN at the New Jersey and Denver servers and compares the results. If location 2 is better than either location 1 or any splits that are considered on the originating server, the call will be interflowed to the interflow VDN that is specified in the plan for location 2.

Example of multi-site BSR


To see how the basic elements of multi-site BSR work, consider a simple application in a two-server network. Multi-site BSR compares local and remote splits/skills and queues calls to the resource that provides the best service. Remember that each BSR application has two main parts:

- An application plan. This plan identifies the remote servers that you want to compare.
- A set of three VDN/vector pairs:

- The primary VDN/vector. This vector on the origin server contacts the specified remote servers, collects information, compares the information, and routes the call to the server that is likely to provide the best service.
- The status poll VDN/vector. The status poll vector on the remote server compares resources on that server and replies to the origin server with information on the best of these. Each remote server in a given application must have a dedicated status poll vector.
- The interflow VDN/vector. When a given remote server is the best available, the origin server interflows the call to this vector on the remote server. Each remote server in a given application has to have a dedicated interflow vector.

The general operational scheme for multi-site BSR is shown in the following figure.

BSR example of origin and remote communication servers

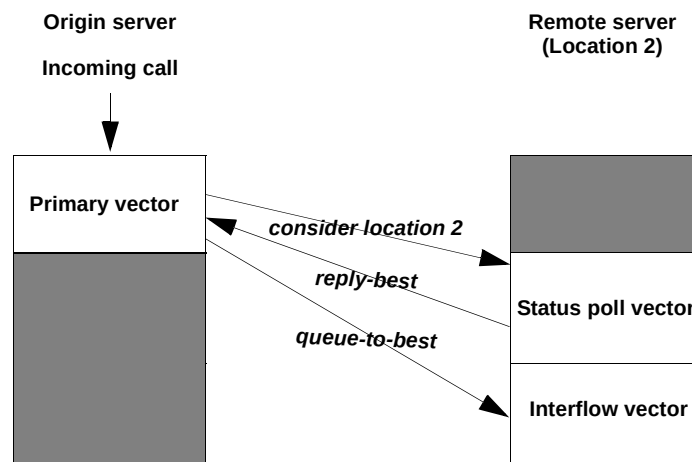

Best Service Routing (BSR)

The following example shows the primary VDN using a multi-site BSR application.

BSR example primary VDN

```
change vdn xxxxx
page 1 of 2
```

VECTOR DIRECTORY NUMBER

```

        Extension: 52222
        Name: Multi-site BSR
        Vector Number: 222
    Attendant Vectoring? n
        Meet-me Conference? n
        Allow VDN Override? n
            COR: 59
            TN: 1
            Measured: internal
    Acceptable Service Level (sec): 20
    VDN of Origin Annc. Extension:
        1st Skill:
        2nd Skill:
        3rd Skill:
```

```
change vdn xxxxx
```

page 2 of 2

VECTOR DIRECTORY NUMBER

```

        Audix Name:
        Messaging Server Name:
        Return Destination:
    VDN Timed ACW Interval:
        BSR Application:15
    BSR Available Agent Strategy: UCD-MIA
    Observe on Agent Answer?:n
    Conference Access Code:
    Conference Controller:
    Display VDN for Route-To DAC?
```

In the example shown above for VDN 52222, the entry in the BSR Application field links this VDN to BSR Application Plan 15. Also note the UCD-MIA entry in the BSR Available Agent Strategy field. If vector 222 uses BSR commands, calls are not automatically delivered to the first resource found with an available agent. All **consider** steps in vector 222 are executed, and one of the following things happens:

If:	Then:
There is no available agent in the local or the remote splits	The call will be queued to the split with the lowest adjusted EWT.
Only one split has an available agent	The call will be delivered to that split.
Two or more splits have available agents	The call will be delivered to the split with the most idle agent.

Also note that `Allow VDN Override?` is set to `n`. If a second VDN and vector are used to process this call, the UCD-MIA strategy and the application plan that are specified in VDN 52222 are used.

Application plan 15 (which is shown in [Sample multi-site BSR Application Plan](#) on page 300) identifies the remote server and provides the digit strings to dial into the VDNs for both the status poll vector and the interflow vector.

Primary Vector

When a call arrives at the origin server, it is processed by the primary vector. This vector begins the BSR process by considering the resources that are specified. The following example shows a primary vector used for that purpose.

BSR example of primary vector on origin communication server

```
1. wait time 0 secs hearing ringback
2. consider split1 pri m      adjust-by 0
3. consider location 2      adjust-by 30
4. queue-to-best
```

In this example, the **consider** commands in steps 2 and 3 collect information to compare local split 1 with one or more splits at location 2. (Location 2 is the Denver server identified on the BSR Application Plan form.) Step 4 queues the call to the best split that is found. As in single-site BSR, the **adjust-by** portion of the **consider** command allows you to set preferences for each resource, whether the resource is a remote location or a split/skill on the origin server. In multi-site BSR, this user adjustment enables you to control the frequency of interflows by adjusting the EWT that is returned by a particular resource on a remote server. In this example, the communication server administrator has chosen to adjust the EWT value for location 2 by 30.

Status poll vector

To collect information from the remote server, the command **consider location 2 adjust-by 30** in the primary vector places an ISDN call, known as a status poll, to the status poll vector on the server at location 2. The following example shows a status poll vector on the remote server used for that purpose.

BSR example of status poll vector on remote communication server.

```
1. consider split2 pri m      adjust-by 0
2. consider split 11pri m     adjust-by 0
3. reply-best
```

The status poll only obtains information and returns it to the origin server; the call is not connected to the status poll VDN.

Best Service Routing (BSR)

This vector compares splits 2 and 11, identifies the better of the two, and sends this information back to server 1 with the **reply-best** command. Notice that the **adjust-by** command could be used on the remote server to adjust the EWT that is returned by either of the splits. When EWT adjustments are applied at both the origin and remote servers, the two adjustments are added at the origin server. See [User adjustments in multi-site BSR](#) on page 306 for more detail on user adjustments in multi-site applications.

The **consider** command is ISDN neutral and does not return answer supervision. The status poll call is dropped when the **reply-best** step executes, but the ISDN DISCONNECT message that is returned to server 1 contains the information from the best split considered at location 2. Once the remote server returns the necessary information, the consider series in the primary vector on server 1 can continue at the next vector step.

CAUTION:

It is recommended that status poll vectors not be used to poll other servers. Status poll vectors should only consider resources on the server where the vector resides. Status poll vectors must always end with a reply-best step. A busy or disconnect should never be used.

Note:

Multi-site BSR includes mechanisms that automatically limit the number of status poll calls that are placed over the network when such calls are unlikely to yield better service for the caller. For a detailed explanation of these mechanisms, see [Appendix E: Advanced multi-site routing](#) on page 605.

Interflow Vector

In this example, assume that no agents are available and that split 11 (location 2) has the lowest adjusted EWT. The **queue-to best** command in the primary vector will interflow the call to the interflow vector at location 2. The following example shows what the interflow vector looks like.

BSR example of interflow vector on remote communication server

1.	consider split2	pri m	adjust-by 0
2.	consider split 11	pri m	adjust-by 0
3.	queue-to best		

The interflow vector reconsiders the status of both splits to get the most current information and queues or delivers the call to the best split. Notice that the consider sequences in the interflow vector and the status poll vector are identical aside from their last step. When a call is interflowed, it is removed from any queues at the origin server and any audible feedback at the origin server is terminated.



CAUTION:

BSR will not operate correctly unless the consider series in the status poll vector and the interflow vector use the same splits/skills with the same queue priorities.

Questions

What happens to the call if the interflow attempt fails?

If the interflow attempt fails, for example, because there are no available trunks, the call is queued to the best local split. The call is not disconnected. The call is not dropped from vector processing on the origin server. For the call to be queued to a local split, however, that split must have been the “best” resource at some previous point in the consider series. In writing primary vectors, always consider local splits/skills before considering remote resources.

I can adjust the EWT returned by a split/skill when no agents are available. When agents are available in two or more splits/skills, can I adjust Agent Idle Time (AIT) that is returned by a resource? Can I adjust the agent skill level returned by a resource?

No. EWT for a resource is the only data that BSR lets you adjust.

BSR available agent strategies

In multi-site BSR applications, the 1st-found available agent strategy results in fewer interflows and thus minimizes the load on trunking between communication servers. The communication server also has less processing to perform for each call in BSR vectors, since it may not need to compare as many resources to identify the best. If processing power and tie trunk capacity are issues in your multi-site applications, you may want to use the 1st-found strategy.

The other strategies typically result in a much greater percentage of calls being interflowed, thus optimizing load balancing across locations. For a strategy that greatly increases agent fairness across the network while limiting the number of trunks used, see [Example of multi-site BSR with limited trunking](#) on page 308.

More on status poll and interflow vectors

The following points are important to consider when you write status poll and interflow vectors.

- Since status poll vectors do not return answer supervision, call charges are not normally incurred for the status poll portion of the call flow.
- When a **consider location** step performs a status poll, it also checks for the availability of a B-channel. If no B-channel is available, the remote resource is never considered the best since the call cannot be redirected to it.
- If only one split/skill on a remote server can service the call type that is handled in a BSR application, you do not need to write a consider series in the interflow vector. You can just queue the call to the appropriate resource.
- If status poll and interflow vectors consider more than one split/skill, the VDNs for these vectors must be administered with the appropriate BSR available agent strategy.

User adjustments in multi-site BSR

User adjustments are especially important in multi-site applications, where unnecessary interflows may be costly and use trunk capacity inefficiently.

User adjustments in multi-site applications function in the same way they do in single-site BSR with one important difference: user adjustments may be applied at the remote servers in an application as well as at the origin server. Since a status poll vector uses **consider** steps to evaluate resources on the server where it resides, the **adjust-by** portion of each **consider** command allows the administrator at each server to set preferences for the splits/skills at that server. In BSR applications, any such adjustment for a split/skill is

considered by the status poll vector in selecting the best resource on its server. The adjustment is then returned to the origin server along with the other data for that resource. When the server receives this adjustment from the remote server, it adds it to any adjustment that was assigned to that location in the **consider location** step. The following example assumes, of course, that no agents become available during the time these vectors are processing the call.

The following example shows a primary vector that considers one remote location, to which it assigns an adjustment of 30.

Vector with consider step for one location

1.	wait time 0 secs hearing ringback	
2.	consider split	prim adjust-by 0
3.	consider location 2	adjust-by 30
4.	queue-to-best	

The following example shows the status poll vector at location 2.

Status poll vector

1.	consider split2 prim	adjust-by 0
2.	consider split 11prim	adjust-by 20
3.	reply-best	

Consider split/skill commands in status poll vectors work just like they do in single-site BSR vectors. The user adjustments are applied to a single split/skill and not to the entire location. In this case, the two splits are assigned different adjustments. Say that split 11, despite having the larger adjustment, returns the lower adjusted EWT for a call. The **reply-best** command in step 3 returns the user adjustment of 20 to the primary vector on the origin server, along with the rest of the data for split 11.

In saving the data that is returned by location 2, the origin server adds the remote adjustment of 20 to the adjustment of 30 that is specified in step 3 of the primary vector. As a result, the call will not interflow to location 2 in this example unless the EWT for location 2 is more than 50 seconds better than the EWT in split 1 on the origin server.

Example of multi-site BSR with limited trunking

Multi-site BSR applications must balance improvements in wait times and agent utilization with the cost of interflows and the availability of inter-server trunking for status polls and interflows. The following example shows an application that is recommended for balancing agent workload across the network while still limiting tie trunk usage.

BSR example of Application Plan

BEST SERVICE ROUTING APPLICATION PLAN							
Number: 10		Name: International		Maximum Suppression Time: 60		Lock? y	
Num	Location Name	Switch Node	Status Poll	VDN	Interflow VDN	Net	Redir?
1	Kansas City	1111	919131234015	919131234115		n	
2	New York	1112	912121234015	912121234115		n	
3	Montreal	1113	915141234015	915141234115		n	
3	London	1114	90114411234015	90114411234115		n	
---	---	---	---	---	---	n	
---	---	---	---	---	---	n	
---	---	---	---	---	---	n	
---	---	---	---	---	---	n	
---	---	---	---	---	---	n	
---	---	---	---	---	---	n	
---	---	---	---	---	---	n	
---	---	---	---	---	---	n	
---	---	---	---	---	---	n	
---	---	---	---	---	---	n	
---	---	---	---	---	---	n	
---	---	---	---	---	---	n	

The following Vector Directory Number example shows the VDN form for VDN 51110, the VDN that is used in this BSR Application Plan example. In the example, the entry in the BSR Application field links this VDN to BSR Application Plan 10. Also note the EAD-MIA entry in the BSR Available Agent Strategy field. If vector 100 uses BSR commands, calls are not automatically delivered to the first resource found with an available agent. In each consider sequence, when the **queue-to best** or **check best** step executes, one of the following things happens:

If ...	Then...
No skill has an available agent	The call is queued to the skill with the lowest adjusted EWT.
Only one skill has an available agent	The call is delivered to that skill.

If ...	Then...
Two or more skills have available agents	The call is delivered to the skill with the most expert agent, which is the agent with the lowest skill level.
Two or more skills have available agents with the same skill level	The call is delivered to the skills that has the most idle agent.

Also note that Allow VDN Override? is set to n. If a second VDN and vector are used to process this call, the, the EAD-MIA strategy and the application plan that is specified for VDN 51110 is still used.

BSR example of primary VDN

```
change vdn xxxxx                                     page 1 of 2
                                VECTOR DIRECTORY NUMBER
                                Extension: 51110
                                Name: Multi-site BSR
                                Vector Number: 100
                                Attendant Vectoring? n
                                Meet-me Conference? n
                                Allow VDN Override? n
                                COR: 59
                                TN: 1
                                Measured: none
                                Acceptable Service Level (sec): 20
                                VDN of Origin Annc. Extension: 1001
                                1st Skill:
                                2nd Skill:
                                3rd Skill:
```


```
change vdn xxxxx                                     page 2 of 2
                                VECTOR DIRECTORY NUMBER
                                Audix Name:
                                Messaging Server Name:
                                Return Destination:
                                VDN Timed ACW Interval:
                                BSR Application:15
                                BSR Available Agent Strategy: UCD-MIA
                                Observe on Agent Answer?:n
                                Conference Access Code:
                                Conference Controller:
                                Display VDN for Route-To DAC?
```

Best Service Routing (BSR)

With four remote servers to be considered, the overall application is represented in the following figure. Application plan 10 on the origin server identifies the remote servers and provides the digit strings to dial into the VDNs for both the status poll vector and the interflow vector on each server.

Each **consider location** command in the primary vector places a status poll call to its specified location. The status poll vector at that location executes a series of **consider skill** commands and returns data on the best resource to the origin server through a **reply-best** command.

BSR example of multi-site application with four servers and limited tie trunk capacity

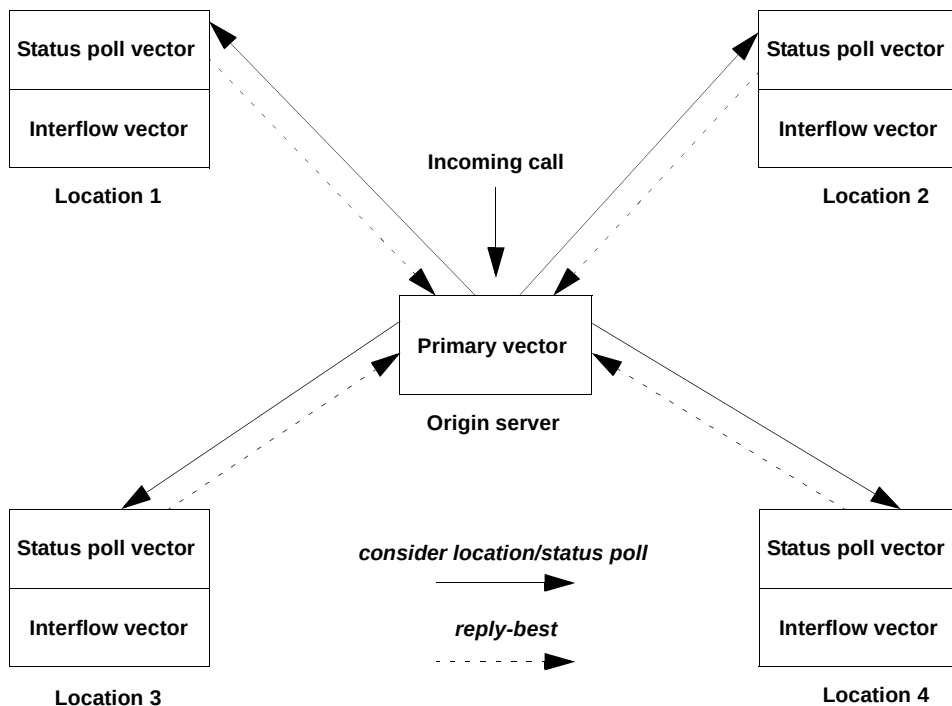

The following example shows the primary vector for this application. The first **consider** series in the primary vector tests two local skills. If either skill has an available agent, step 4 jumps to step 9 and the call is queued locally. No remote locations are polled. If no agents are available in either local skill, though, steps 5 to 8 test 4 remote locations. In general, you should not put other commands between **consider** steps. This use of the **goto** step is one of the few exceptions to that rule.

If the best remote location's adjusted EWT can reduce the call's current adjusted EWT, step 9 interflows the call to that location. In this vector, a local available agent is always favored over a remote available agent. Whichever location services a call, it will always be directed to the most idle, best skilled agent available.

Multi-site BSR example

```

1. wait time 0 secs hearing ringback
2. consider skill 1 pri m          adjust-by 0
3. consider skill 2 pri m          adjust-by 20
4. goto step 9 if expected-wait for skill best = 0
5. consider location 1            adjust-by 30
6. consider location 2            adjust-by 30
7. consider location 3            adjust-by 50
8. consider location 4            adjust-by 50
9. queue-to best
10. announcement 1001
11. wait time 60 secs hearing music
12. goto step 10 if unconditionally

```

In the primary vector, note that user adjustments are entered for local skill 2 as well as for all the remote locations. These indicate the administrator's preferences regarding both local and remote resources. For this example, let's say that neither local resource has an available agent and therefore an EWT greater than 0.

Status poll vector

Each receiving server in a multi-site application must have a status poll vector. To collect information from these locations, each **consider location** command in the primary vector places a status poll to the status poll vector for the appropriate server. The following example shows the status poll vector on the server at location 3.

BSR example of status poll vector at location 3

```

1. consider skill 2          pri m    adjust-by 0
2. consider skill 11         pri m    adjust-by 20
3. consider skill 21         pri m    adjust-by 30
4. reply-best

```

This vector compares skills 2, 11, and 21, identifies the best one, and sends this information back to the origin server through the **reply-best** command. Notice that user adjustments are applied to skills 11 and 21 to adjust the skill's EWT. When EWT adjustments are applied at both the origin and remote servers, the two adjustments are added at the origin server. See [User adjustments in multi-site BSR](#) for more detail on user adjustments in multi-site applications.

In this example, suppose that skill 11 has the best adjusted EWT at location 3. Its data, including a user adjustment of 20, is returned to the origin server by the **reply-best** command.

Best Service Routing (BSR)

Finding the best resource

Once the remote servers have returned the best data for each location, the second consider series in the primary vector can be completed. In this example, let's suppose that no agents are available at any remote location.

The following table shows how user adjustments at the origin and remote servers yield the adjusted EWT for each location.

BSR best resource user adjustments

Location	Actual EWT of remote best (sec.)	User adjustment on origin server	User adjustment on remote server	Adjustment applied by origin server (sec.)	Adjusted EWT used in BSR calculations (sec.)
1	60	30	0	30	90
2	45	30	10	40	85
3	40	50	20	70	110
4	70	50	0	50	120

The second consider series identifies location 2 as the best remote location, with an adjusted EWT of 85, and the **queue-to best** step interflows this call to location 2.

Interflow vector

The interflow vector on a remote server in a multi-site application accepts the interflowed call from the origin server. It also executes the same consider series as the status poll vector to identify the current best resource, in case conditions have changed since the status poll.

The following example shows the interflow vector on a remote server.

BSR example of interflow vector at location 2

1.	consider skill	2	pri m	adjust-by 0
2.	consider skill	11	pri m	adjust-by 20
3.	consider skill	21	pri m	adjust-by 30
4.	queue-to best			

As happens today when a call is interflowed, it is removed from any queues at the origin server and any audible feedback at the origin server is terminated.

**CAUTION:**

BSR will not operate correctly unless the consider series in the status poll vector and the interflow vector use the same splits/skills with the same queue priorities.

Example of multi-site BSR with slow networks

Network response times are not an issue for most users. This example is intended for those users, if any, who experience such a problem. This example uses the same VDN, application plan, and four-server network that is described in the [Example of multi-site BSR with limited trunking](#) on page 308. The vector in that example minimized interflows by using a **goto** step that skips the remote consider series if a local resource has an available agent. This design is especially useful if network response times are slow. Calls are always queued once locally before remote locations are considered.

Furthermore, both status polls and interflows are conditional. The call can wait in the queue for a local resource while BSR looks for a better split/skill at remote locations.

This example also shows the function of the **check best** command and the **wait-improved** conditional.

The following example shows the primary vector for this application, vector 100. The first consider series in the primary vector tests two local splits and queues the call to the best one. If the EWT for the best split is 30 seconds or less, step 5 jumps to the loop in step 11 and the second consider series is not executed. If the EWT for the best split is over 30 seconds, though, steps 6 through 9 test 4 remote locations. If the best remote location can reduce the call's EWT by more than 30 seconds as compared to its EWT in the best local queue, step 10 interflows the call to that location.

CAUTION:

Be certain to queue calls at least once before using the wait-improved conditional in a vector step. If calls are not already queued when the step with the wait-improved conditional executes, The server reads the call's EWT as infinite. This could result in a vector that interflows all calls, even if that is not its intended function.

Multi-site BSR with EWT

```
1. wait time 0 secs hearing ringback
2. consider skill 1 pri m          adjust-by 0
3. consider skill 2 pri m          adjust-by 20
4. queue-to-best
5. goto step 11 if expected-wait for call <= 30
6. consider location 1            adjust-by 30
7. consider location 2            adjust-by 30
8. consider location 3            adjust-by 50
9. consider location 4            adjust-by 50
10. check best if wait-improved > 30
11. announcement 1001
12. wait time 60 secs hearing music
13. goto step 11 if unconditionally
```

A consider series can end with either a **queue-to best** or a **check best** step. The **check best** command lets you set conditions that must be met before a call is queued to the best resource. In this example, step 10 in the primary vector is **check best if wait-improved > 30**. In other words, step 10 interflows the call to the best location found by the consider series only if the EWT for that location is more than 30 seconds better than the call's EWT in the local queue.

You can use up to 3 consider series in one vector. It is possible to write more than 3 consider series in a vector, but there's no benefit in doing so. The server only allows you to queue a call simultaneously to 3 different local resources. Since each consider series ends by queuing a call (assuming no agent is available), using more than 3 series in a vector will not place the calls in additional local queues. If the call interflows to another communication server, it's removed from vector processing and any queues it was in on the origin server.

It is also possible to combine single-site and multi-site consider series, as this example shows. Note that user adjustments are entered for local skill 2 as well as for locations 3 and 4. These indicate the administrator's preferences regarding both local and remote resources. In this example, say that step 2 queues the call to skill 1, which has an EWT of 65 seconds, before the second consider series is executed.

Status poll vector

Each receiving server in a multi-site application must have a status poll vector. To collect information from these locations, each **consider location** command in the primary

vector places a status poll to the status poll vector for the appropriate server. The following example shows the status poll vector on the server at location 3.

BSR example of status poll vector at location 3

1.	consider skill 2	pri m	adjust-by 0
2.	consider skill 11	pri m	adjust-by 20
3.	consider skill 21	pri m	adjust-by 30
4.	reply-best		

This vector compares skills 2, 11, and 21, identifies the best one, and sends this information back to the origin server through the **reply-best** command. Notice that user adjustments are applied to skills 11 and 21 to adjust the skill's EWT. When EWT adjustments are applied at both the origin and remote servers, the two adjustments are added at the origin server. See [User adjustments in multi-site BSR](#) on page 306 for more details on user adjustments in multi-site applications.

Suppose that skill 11 has the best adjusted EWT at location 3. Its data, including a user adjustment of 20, is returned to the origin server by the **reply-best** command.

Remember that the first consider series queued the call to local skill 1. Say that the second consider series identifies location 2 as the best remote resource. The **check** command in step 10 recalculates the call's current, unadjusted EWT in skill 1 and compares it to location 2's unadjusted EWT. If the call's actual (unadjusted) EWT can be improved by more than 30 seconds, the call is interflowed.

Note:

BSR uses adjusted EWT to determine which of the resources in a consider series is the best. Once the best resource is identified, subsequent **expected-wait** and **wait-improved** conditionals use the actual EWT values.

Interflow vector

When a call is interflowed to any of the remote locations, the interflow vector on that server accepts the interflowed call from the origin server. It also executes the same consider series as the status poll vector to identify the current best resource, in case conditions have changed since the status poll. The following example shows such an interflow vector.

BSR example of interflow vector at location 2

1.	consider skill 2	pri m	adjust-by 0
2.	consider skill 11	pri m	adjust-by 20
3.	consider skill 21	pri m	adjust-by 30
4.	reply-best		

CAUTION:

BSR will not operate correctly unless the consider series in the status poll vector and the interflow vector use the same splits/skills with the same queue priorities.

Questions

If the call is queued to a remote resource by step 10 in the primary vector, is the call removed from the local queue that it entered in step 4?

When a call is interflowed, the call is removed from any queues at the origin server and any audible feedback at the origin server is terminated.

The second consider series can compare local and remote resources. If it does, and if step 10 queues the call to another local skill, will the call be removed from the local queue that it entered in step 4?

No. In general, the server can queue a call to as many as 3 local splits/skills simultaneously. BSR does not change this limit.

Example for handling excessive wait times

This short example shows a simple primary vector in a multi-site BSR application. If wait times are sometimes excessive because of high call volumes, step 4 of this vector directs calls to a **disconnect after announcement** step when wait time in the network exceeds 5 minutes. The following example shows a simple primary vector.

Multi-site BSR using disconnect for excessive wait times

```
1. wait 0
2. consider skill 1          pri m          adjust-by 0
3. consider location 2      pri m          adjust-by 30
4. goto step 6 if expected-wait for best ≤ 300
5. disconnect after announcement 3001
6. queue-to best
```

Announcement 3001 might say something like, “We’re sorry. We are currently experiencing heavy call volume and cannot service your call at this time. Please try again later. We are normally least busy between 8 a.m. and 11 a.m. each morning.”

Planning and administering multi-Site BSR

This section presents information that is specific to BSR. Follow existing procedures to add or change other properties of VDNs and vectors not discussed in this section.

To create multi-site applications, follow the process below. List location numbers, Status Poll VDNs, and similar information so they will be available for planning and administration purposes. Define the purpose of the application

To define the purpose of the application:

1. Select the group of callers for which you want to create the application.
2. Define the goal of the application, for example, faster average speed of answer, better service by routing calls to the most qualified agents.
3. Decide which agent selection strategy (on VDNs) will best achieve your goal.
4. Decide whether you will implement BSR in a distributed system or a centralized system.
 - In a distributed system, all communication servers receive incoming calls and query other servers to interflow calls when appropriate.
 - In a centralized system, one server serves as a hub. All incoming calls arrive at this server and are routed from it to the other servers in the network.

Since a distributed system is the more complicated of the two, the rest of this procedure is written in terms of implementing a distributed system. The same steps apply to implementing a centralized system, but only one server will have application plans and primary VDN/vector pairs.

Selecting or administering application plans

To select or administer a BSR application plan:

1. Select the VDNs on each server that serve the group of callers you have identified.
 On each server these are the Primary VDNs for your application. You may, of course, want or need to create new VDNs. In either case, record the extensions of each VDN that will point to a vector with a BSR application.
2. Select the locations that you want to include in each application plan. To uniquely identify each location, assign a number between 1 and 255 and a short name of 15 characters or less.
3. Record the node number of the server at each location.

4. Create Status Poll VDNs on each of the servers in the application plan.

Record the full numbers you will need to route calls to these VDNs. These numbers will be entered on the Best Service Routing Application Plan form when you create the plan.

If you are creating new VDNs on the communication servers that will receive interflowed calls, record these numbers too. You will need them to complete the BSR Application Plan form. Remember: you cannot use the same number for a Status Poll VDN and an Interflow VDN.

Administering the BSR Application Plan

Define the application plan

To create an application plan on each communication server:

1. At the command line prompt, type **add best-service-routing xxx** and press Enter (where **xxx** is a number between 1 and 255 that you want to assign to this BSR application.)

The system displays the Best Service Routing Application Plan form. The number that you typed in the command appears in the **Application Number** field.

2. Assign a name to the plan.

The best names are short and descriptive. This name cannot be longer than 15 characters.

3. Type in the information for the first remote location. Fill in the information for each field as shown below.

Note:

Each row on the form contains all of the information the BSR application needs to identify and communicate with one of the resources in the plan.

Fields on application plan form

Field	Type	Description
Num	Required	Type the number that you assigned to this location in 2.
Location Name	Optional	Type the name that you assigned to this location in 2.
Switch Node	Optional	This field is for user reference only. Leave it blank. If you are using the Universal Call ID feature, you may want to type each communication server node identity in this field. The server node identity is the number that is entered in the UCID Network Node ID field on page 4 of the Feature-Related System Parameters form.

Fields on application plan form (continued)

Field	Type	Description
Status Poll VDN	Required	This is the complete digit string that your communication server will dial for the status poll call. The string can be up to 16 digits long.
Interflow VDN	Required	This is the complete digit string that your communication server dials to interflow a call to this location. The string can be up to 16 digits long.

4. Repeat 3 for each of the locations that you want to include in the application plan.
5. Press Enter to save your changes.

Note:

You must set up trunk groups to other sites. See [Look-Ahead Interflow \(LAI\)](#) on page 247 and [Information Forwarding](#) on page 197 for information on setting up trunk groups.

Link the application plan to a primary VDN and enter an agent selection strategy

To link the application plan to a primary VDN and enter an agent selection strategy:

1. Go to the Vector Directory Number form for the first VDN that you identified in 1.
If this is a new application, create the VDN.
2. In the Allow VDN Override? field, type **y** or **n**. If the call is directed to another VDN during vector processing:
 - **y** allows the settings on the subsequent VDN, including its BSR Available Agent Strategy, to replace the settings on this VDN.
 - **n** allows the settings on this VDN, including its BSR Available Agent Strategy, to replace, or override, the settings on the subsequent VDN.
3. In the BSR Application field, type the application number you assigned to the plan.
4. In the BSR Available Agent Strategy field, type the identifier for the agent selection method you want this application to use:

If you enter...	The application will select the resource with...
1st-found	The lowest Expected Wait Time. If the application finds an available agent before it has compared all the locations in the plan, the application routes the call to that agent without contacting any other locations.
ucd-mia	The agent who has been idle the longest. The application compares all the locations in the plan.
ead-mia	The agent with the highest skill level, which is the lowest skill number, who has been idle the longest.

Best Service Routing (BSR)

If you enter...	The application will select the resource with...
ucd-loa	The least-occupied agent.
ead-loa	The agent with the highest skill level, which is the lowest skill number, who is the least occupied.

5. Press **Enter** to save your changes.

Repeat 1 through 5 on each server that needs an application plan and a Primary VDN/vector pair.

This process covers the administration that is needed for BSR vector commands to function. Now, of course, you need to write or modify the vectors that will control call processing.

Local treatment for remotely queued IP and ISDN calls

In a multi-site BSR configuration, a call that arrives at a local communication server can be rerouted to a remote server located in a different part of the world. To better meet the needs of such multi-site contact centers, Avaya Communication Manager 2.0 or later includes a new **BSR Local Treatment for Calls Queued Remotely Over IP or ISDN Trunks** feature that allows you to provide local audio feedback for IP and ISDN calls while a call waits in queue on a remote server.

This feature provides the following potential benefits for contact center operations:

- For multi-site BSR operations that include sites located in different countries, the new local treatment feature can result in significant bandwidth savings for IP calls.
- Audio quality concerns that occur when music is sent over wide area networks that use low bit-rate codecs are eliminated.
- Announcements and other treatments can be maintained and managed in a central location.

This section includes the following topics:

- [Overview of local treatment operations](#) on page 322
- [Local treatment system requirements](#) on page 323
- [Local treatment administration](#) on page 324
- [Example vectors for the local treatment feature](#) on page 325
- [Special BSR local treatment considerations](#) on page 328

Overview of local treatment operations

This section describes local treatment feature operations that occur when BSR redirects IP or ISDN calls to a remote queue.



Important:

The local treatment operations described in this section assume that the required feature and vector administration steps are implemented on both the local *and* remote communication servers.

For information about feature administrations, see [Local treatment administration](#) on page 324.

For information about required vector design, see [Example vectors for the local treatment feature](#) on page 325.

The following steps describe the basic process for local treatment operations in a multi-site BSR environment:

1. A call arrives at the local communication server and is processed by a VDN that is enabled for BSR local treatment.
2. The local vector includes the **consider**, **queue-to best**, and **wait** hearing announcement steps that are required for BSR local treatment operations.
3. A skill on a remote server is identified as best location and the local server attempts an interflow to the remote server. Vector processing is temporarily suspended on the local server while the interflow attempt is in progress.
4. If the interflow attempt succeeds, the remote server returns an **ISDN_PROGRESS** message with progress indicator of in-band information (8) to indicate that the call is in queue and local treatment operations can proceed.

The remote server must meet the following requirements for the appropriate **ISDN_PROGRESS** message to be sent back to the local server:

- The remote server is administered for BSR local treatment.
 - The call is directed to a VDN that is also enabled for local treatment.
 - The vector associated with the VDN includes only those steps and commands that are required for successful local treatment operations.
5. The local server receives the **ISDN_PROGRESS** message with progress indicator of in-band information (8), vector processing resumes with an appropriate treatment step and the caller receives feedback provided by the local server while they wait in the remote queue.



Important:

To ensure that the local treatment feature operates as designed, use only the vector commands that are recommended for local treatment implementation. Although local treatment operations do not impose restrictions on the types of vector steps that are administered on the local server after call processing resumes, use of inappropriate vector steps can interfere with local treatment operations. For more information, see [Example vectors for the local treatment feature](#) on page 325.

6. When an ACD agent on the remote server accepts the call, an **ISDN_ALERTING** message is sent to the local server. Vector processing is discontinued on both the local and remote servers.

Local treatment system requirements

The BSR Local Treatment for Calls Queued Remotely Over IP or ISDN Trunks feature works on all platforms and operating systems that are supported by Avaya MultiVantage. You must meet the following licensing and system requirements to use the local treatment feature:

- The Avaya Communication Manager release must be 2.0 or later.
- The system license file must be configured to enable the following features:
 - Call Center Release 12.0
 - LAI
 - BSR
 - BSR Local Treatment for IP and ISDN

Local treatment administration

The following tables show the administration forms used to administer the local treatment feature.



Important:

The BSR Local Treatment? field must be set to y on both the local and remote vdns. If the local vdn is set to n and the remote vdn is set to y, the remote communication server returns an **ISDN_PROGRESS** message with a progress indicator of in-band information. The local communication server considers this type of progress message to be invalid unless the local treatment flag is set and all interflow attempts result in dropped calls.

Local treatment administration - verify required features¹

Administration command:	display system-parameters customer options	
Page name:	Call Center Optional Features	
Required field(s):	Call Center Release	12 ²
	Lookahead Interflow (LAI)?	y
	Vectoring (Best Service Routing)?	y
	BSR Local Treatment for IP & ISDN	y

1. Contact your Avaya account representative if this form indicates that any of the required feature selections are not enabled.

2. Call center release 12 or later.

Local treatment administration - enable VDN

Administration command:	change vdn xxx	
Page name:	Vector Directory Number	
Required field(s):	BSR Local Treatment?	y ¹

1. The BSR Local Treatment? field must be set to y on both the local and remote vdns, or else call interflow attempts may result in dropped calls.

Example vectors for the local treatment feature

This section provides vector guidelines and examples that describe how to implement the local treatment feature. Vector administration typically requires polling vectors on both the local and remote communication server and an interflow vector on the remote server. The polling vector on the local server should also be administered to provide an appropriate "local" call treatment.

 Important:

Implementation of the local treatment feature requires use of specific vector steps to generate the correct ISDN messages between the local and remote communication servers. If the treatment, polling and interflow vectors that are administered to implement this feature include vector steps other than those recommended in the following sections, the feature may not work as intended and the associated bandwidth savings may not be realized.

This section includes the following topics:

- [Example polling vectors for the local communication server](#) on page 325
- [Example polling vector for the remote communication server](#) on page 327
- [Example interflow local treatment vector for the remote communication server](#) on page 328

Example polling vectors for the local communication server

The following examples shows two different vector strategies that you can use to implement the local treatment feature on the local server. Vectors created for this purpose are the same as those used in all BSR polling operations, which include a **consider** series followed by a **queue-to best** step.

 Important:

You must be careful to administer your local treatment polling vectors so that calls are not unintentionally dropped. If the **queue-to best** step is followed by vector steps that include any commands other than **announcement**, **wait**, or **goto**, the trunk to the remote queue may be dropped. However, you can also exploit this functionality to allow the local server to "take back" calls that remain in queue on a remote server after a specified time limit is exceeded. For more information, see ["Take back" example](#) on page 326.

After the various skills and locations are polled and the call is placed in queue at the identified best location, the local server continues to maintain control of the call until it is answered by an agent. While the call is in queue, the local server continues to provide additional vector steps to implement the local call treatment.

Best Service Routing (BSR)

At a minimum, the local treatment vector should include **announcement** and **wait-time** steps to provide appropriate feedback to the caller. However, the local treatment vector can be designed to use either a “continuous loop” or “take back” strategy. These alternate local call treatment strategies are described in the following sections.

Continuous loop example - the following example shows a vector that provides a sequence of call treatment steps on the local server that proceed in a continuous loop until an agent answers the call at the remote location.

In the following vector example, step 6 places the call in queue at the identified best location. Step 7 provides an appropriate announcement and step 8 provides 10 seconds of music. Step 9 uses an unconditional **goto** step to loop call processing back to step 6, where the treatment process continues.

```
change vector 40
                                     CALL VECTOR
Number: 40                          Name: Local BSR vector
Attendant Vectoring? n              Meet-me Conf? n              Lock? n
Basic? y    EAS? y    G3V4 Enhanced? y    ANI/II-Digits? y    ASAI Routing? y
Prompting? y    LAI? y    G3V4 Adv Route? y    CINFO? n BSR? y    Holidays? y

01 announcement 3000
02 consider skill 4 pri m adjust-by 0
03 consider skill 6 pri m adjust-by 0
04 consider location 1 adjust-by 10
05 consider location 2 adjust-by 10
06 queue-to best
07 announcement 3001
08 wait-time 10 secs hearing music
09 goto step 7 if unconditionally
```

"Take back" example - The previous example set up the local treatment process as a continuous loop that repeats indefinitely while the call remains in queue at the identified best location. However, you can also design vectors that allow the local server to "take back" a call after it remains in queue for a specified amount of time.

In the following vector example, the **queue-to best** in step 6 is followed by a series of **announcement** and **wait-time** commands provided in steps 7 through 12. If the treatment steps complete and the call still remains in the remote queue, vector processing proceeds to step 13, which uses a **route-to** command that causes the call to the remote server to be dropped. The **route-to** step can be used to provide alternate services for the call.

Note:

When the call to the remote server is dropped, a type 305 vector event is logged.

change vector 40

Page 1 of 3

CALL VECTOR

Number: 40

Name: Local BSR vector

Attendant Vectoring? n

Meet-me Conf? n

Lock? n

Basic? y

EAS? y

G3V4 Enhanced? y

ANI/II-Digits? y

ASAI Routing? y

Prompting? y

LAI? y

G3V4 Adv Route? y

CINFO? n

BSR? y

Holidays? y

01 announcement 3000

02 consider skill 4 pri m adjust-by 0

03 consider skill 6 pri m adjust-by 0

04 consider location 1 adjust-by 10

05 consider location 2 adjust-by 10

06 queue-to best

07 announcement 3001

08 wait-time 10 secs hearing music

09 announcement 3001

10 wait-time 10 secs hearing music

11 announcement 3001

12 wait-time 10 secs hearing music

13 route-to number 54010 if unconditionally

Example polling vector for the remote communication server

The following example shows a call vector that polls skills on the remote server. This vector does not differ from other typical BSR polling vectors.

change vector 31										Page 1 of 3														
CALL VECTOR																								
Number: 31					Name: Remote BSR poll vector																			
					Attendant Vectoring? n					Meet-me Conf? n					Lock? n									
Basic? y					EAS? y					G3V4 Enhanced? y					ANI/II-Digits? y					ASAI Routing? y				
Prompting? y					LAI? y					G3V4 Adv Route? y					CINFO? n BSR? y					Holidays? y				
01 consider					skill					3					pri m adjust-by 0									
02 consider					skill					4					pri m adjust-by 0									
03 reply-best																								

Example interflow local treatment vector for the remote communication server

The following example shows a call vector that is used to interflow the call to the remote server while local treatment is provided for the call.

 Important:

When the BSR Local Treatment feature is enabled, specific ISDN messages must be exchanged between the remote and local communication servers. If additional vector steps are included either before or after the **consider** steps (if used) and **queue-to best** in the interflow vector on the remote server, the following results occur:

- Either an ALERTING or PROGRESS message (with in-band information) is returned from the remote server to the local server.
- In response to the message, trunk bandwidth is immediately allocated and the call is removed from the local queue.
- Local treatment operations cease, trunk bearer resources are allocated for the call sooner than required and cost savings associated with the local treatment feature are not realized.

change vector 32					Page 1 of 3	
CALL VECTOR						
Number: 32		Name: Remote BSR interflow vector				
		Attendant Vectoring? n		Meet-me Conf? n		Lock? n
Basic? y	EAS? y	G3V4	Enhanced? y	ANI/II-Digits? y	ASAI	Routing? y
Prompting? y	LAI? y	G3V4	Adv Route? y	CINFO? n	BSR? y	Holidays? y
01 consider	skill	3	pri m adjust-by 0			
02 consider	skill	4	pri m adjust-by 0			
03 queue-to	best					

Special BSR local treatment considerations

You should also understand the following items that pertain to the BSR local treatment feature:

Trunk group status - Calls that are queued remotely but are receiving local treatment are displayed as 'active' trunk members if the 'status trunk-group' command is performed on the interflowed trunk group. Even though the H.323 (IP) trunk member is 'active', no bandwidth is used because no voice packets are transmitted while local treatment is performed.

Path replacement - Path replacement is not supported for BSR Local Treatment calls. Both ends of the connection must be answered for path replacement to work. When BSR local treatment is enabled, the local VDN has answered, but the remote VDN where the call is queued has not answered. Therefore, path replacement can not occur when a call is queued remotely by local treatment VDNs. For more information about BSR path replacement, see [BSR-initiated path-replacement for calls in vector processing](#) on page 331.

Troubleshooting for multi-site BSR

You should regularly execute a **display events** command for the appropriate vectors, especially if you have just implemented a new BSR application. Vector events will identify and indicate the source of common malfunctions and administration errors.

When tie-trunks or queue slots become exhausted, BSR cannot effectively balance calls across the network. If such problems are revealed frequently by vector events, review the design of the BSR application involved. If tie-trunks are frequently exhausted, the user adjustments on **consider location** steps may be set too low.

For a list of BSR vector events and definitions, see [Tracking unexpected events](#) on page 589.

Note:

Only the most recent events are displayed when a **display events** command is executed. For this reason, you should periodically display vector events to help quickly identify problems.

To verify that your BSR vectors are operating as intended, use a **list trace vdn** or **list trace vec** command to observe processing of an individual call. See [Clearing events](#) on page 604 for more information.

Note:

The **list trace vdn** and **list trace vec** commands are blocked if the Tenant Partitioning feature is enabled.

BSR status poll vectors must always end with a **reply-best** step. A **busy** or **disconnect** command should never be used.

Tips for writing BSR vectors

Before you write your first vector using BSR, you should study the sample vectors that are provided and familiarize yourself with the new commands and command elements. Sample vectors are provided in [Single-site BSR](#) on page 279 and [Multi-site BSR](#) on page 295. The new commands and command elements are explained in [Appendix A: Call Vectoring commands](#) on page 467.

As you write BSR vectors, it is strongly recommended that you follow the guidelines below.

- Arrange your **consider** steps in order of preference.

The **consider** step that tests the main, or preferred, resource should be the first in the series. The second **consider** step should test the resource that is your second preference for handling the given call type, and so on. To avoid unnecessary interflows, put **consider** steps for local resources before steps that consider remote resources. This arrangement also provides a local “best” as a backup in case the interflow fails.

Arranging consider steps in order of preference is recommended for all BSR vectors. It is especially important when the active VDN for the call is using the 1st-found agent strategy since the server delivers the call to the first available agent found, arranging **consider** steps in order of preference ensures that calls are delivered to the best of the available resources and that unnecessary interflows are avoided.

- Do not put any commands between the steps of a consider series that would cause a delay. **Goto** commands are OK.
- Do not put a consider series in vector loops.
- Confirm that calls queue successfully.

This check is recommended for all vectors. Since EWT is infinite for a call that has not queued, a step that checks EWT after a queue attempt is a good confirmation method. After a **queue-to best** step, for example, a command such as **goto step X if expected-wait for call < 9999** should be included.

- Do not use the wait-improved conditional in a vector before you have queued the call at least once.

The **wait-improved** conditional compares the call's EWT in its current queue to the best resource that is found by a consider series. If a call has not been queued and a vector step such as **check best if wait-improved > 30** is executed, the server interprets the call's current EWT as infinite and the **check best** step always routes the call to the best resource. In other words, in this situation the **check best** step functions like an unconditional **goto** or **route-to** command.

BSR-initiated path-replacement for calls in vector processing

Path replacement for calls in queue and vector processing can be accomplished using QSIG or DCS with Reroute using ISDN SSE. For calls that are waiting in queue or in vector processing, even if the call is not connected to an answering user, path replacement can be attempted to find a more optimal path for this call. This results in more efficient use of the trunk facilities.

The **queue-to best** command is used in BSR to initiate a QSIG path replacement for a call. The following scenario can take place:

- At the terminating communication server, if a Path Replacement Propose operation is received for a call that is in queue or vector processing, the server can immediately initiate path replacement using the Path Replacement Extension if the Path Replace While in Queue/Vectoring field is set to y and the Path Replacement Extension field has a valid entry. These fields are located on the ISDN parameters page of the Feature-Related System Parameters form.

Note:

The Call Management System (CMS) load r3v9ag and earlier cannot track a measured ACD call after path replacement has taken place. CMS load r3v9ah and newer does keep the CMS call record of the measured ACD call intact after path replacement takes place.

Example vector

The following example shows how a BSR vector can be written to trigger path-replacement at the terminating communication server.

Note:

In order for a path-replacement to be attempted, the incoming and outgoing trunks that are used for the call must be administered with the Supplementary Service Protocol field set to b.

BSR-initiated path-replacement vector

1.	wait 0	
2.	consider skill 1	
3.	consider skill 5	
4.	consider location 10	adjust-by 10
5.	consider location 24	adjust-by 20
6.	queue-to best	

Best Service Routing (BSR)

At the terminating (receiving) server, the vector that is executed by the incoming call must be programmed with an announcement, or **wait hearing music** vector command. The use of one of these commands is what makes it possible for path-replacement to take place while the call is in vector processing.



Holiday Vectoring

Holiday Vectoring enables a set of commands that can be used to write call vectors for calls to be routed on holidays or any days when special processing is required.

This chapter gives you the information you need to use this vectoring option.

This chapter includes the following major topics:

- [Command set](#) on page 333
- [Overview](#) on page 335
- [Administering Holiday Vectoring](#) on page 336
- [Holiday Vectoring considerations](#) on page 341

Command set

The following table shows the commands that are available for use in Holiday Vectoring.

Holiday Vectoring command set

Command category	Action taken	Command
Branching/programming		
	Go to a vector step	goto step
	Go to a vector	goto vector

Branching/programming commands

Holiday Vectoring allows use of two branching/programming commands, including:

- [goto step command](#) on page 334
- [goto vector command](#) on page 334

Holiday Vectoring

The following sections detail the syntax that can be used for these commands and any information that is specific to their use in Holiday Vectoring.

goto step command

Syntax: goto step <step #> if holiday in table <table #>

This command directs the call to a specific vector step if the conditions of the call match a holiday that is in the specified Holiday Table.

Syntax: goto step <step #> if holiday not-in table <table #>

This command directs the call to a specific vector step if the conditions of the call do not match any of the holidays that are in the specified Holiday Table.

goto vector command

Syntax: goto vector <vector #> if holiday in table <table #>

This command directs the call to a specific vector if the conditions of the call match a holiday that is in the specified Holiday Table.

Syntax: goto vector <vector #> if holiday not-in table <table #>

This command directs the call to a specific vector if the conditions of the call do not match any of the holidays that are in the specified Holiday Table.

Overview

Holiday Vectoring is an enhancement that simplifies vector writing for holidays. It is designed for customers who need to reroute or provide special handling for date-related calls on a regular basis.

This feature provides the user with the capability to administer ten different Holiday Tables, then use those tables to make vectoring decisions. Each table can contain up to 15 dates or date ranges. All of this can be done in advance to ensure seamless call routing over holidays when staffing is reduced or contact centers are closed.

When vector processing encounters a **goto xxx if holiday in table #** step, it determines if the current date and time qualifies as a holiday according to the given table. That information is then used to decide whether the goto condition is true or false, and therefore, whether to **goto** the given step or vector or not. The date and time match is done at the time that the call is in vector processing. It is done just like time-of-day routing. This means that it is checking the system date and time on the PPN, rather than the local port network time on the EPN.

The Holiday Vectoring feature is not limited to holiday use, but can also be applied to any date-related special processing. For example, vectors can be modified or created to perform special processing during a two-week television promotion or a semiannual sale.

This feature was developed in response to customer needs, especially for some customers who may have as many as 30 bank holidays to administer throughout the year. Holiday Vectoring streamlines vectoring tasks and ensures seamless operation over holiday (or special-event) periods.

Without this feature, contact center administrators had to write special vectors for each holiday or other special date-related circumstances, and make sure that these vectors were administered at the appropriate times. In some cases, administrators were required to go to work on holidays just to administer vectors. This feature was developed in response to customer needs, especially for some customers who may have as many as 30 bank holidays to administer throughout the year.

Administering Holiday Vectoring

This section gives you step-by-step instructions on setting up Holiday Tables and writing vectors to include Holiday Vectoring.

Enabling Holiday Vectoring

The Holiday Vectoring customer option can be enabled if either Vectoring (Basic) or Attendant Vectoring is enabled.

On the Customer Options Form, the Vectoring (Holidays) field should be set to y. If the feature is not enabled, contact your Avaya customer support or authorized representative to have the feature enabled.

Setting up a Holiday Table

This section describes how to set up a Holiday Table before adding to a vector.

Holiday Table command syntax

This section describes the syntax of each Holiday Vectoring command.

Syntax: change holiday-table x

This command allows you to change the entries in a Holiday Table.

To create a new Holiday Table, you must use the change command and give the number of a blank table. For example, change holiday-table 9, where table 9 has not been used to define holidays.

Syntax: display holiday-table x

This command allows you to display the entries in a Holiday Table.

Syntax: list holiday-table

This command lists all of the Holiday Tables.

Syntax: list usage holiday-table x

This command lists all vector steps that refer to the selected Holiday Table.

Using the Holiday Table commands

After ensuring that Holiday Vectoring is enabled on the Customer Options form, enter **change holiday-table 1**.

On the Holiday Table Form, which is shown in the following example, enter the holiday information.

Setting up a Holiday Table

change holiday-table 1								page 1 of 1
HOLIDAY TABLE								
Number: 1				Name: Bank Holidays				
START				END				
Month	Day	Hour	Min	Month	Day	Hour	Min	Description
12	24			12	31			Christmas
01	01	00	00	01	01	10	00	New Year's Day

Note:

When using a range of dates, the end date must be greater than the start date. Ranges must be within one calendar year. In the example above, two entries were made, one for each calendar year.

The Holiday Table Form can be used for entering individual holidays or holiday ranges. The following rules apply to entering dates on this form:

- If a day is entered, the corresponding month must be entered.
- If a month is entered, the corresponding day must be entered.
- If an hour is entered, the corresponding minute must be entered.
- If a minute is entered, the corresponding hour must be entered.
- If an hour and minute is entered, the corresponding month and day must be entered.
- If a month and day is entered, the corresponding hour and minute is not required.
- If an end month and day is entered, the corresponding start month and day must be entered.
- If a start month and day is entered, the corresponding end month and day is not required.
- To enter an individual holiday, enter a start month and day, but do not enter an end month and day.
- To enter a holiday range, enter both a start month and day and an end month and day.
- The start month, day, hour, and minute must be less than or equal to the end month, day, hour, minute.

Holiday Vectoring

- The description field is an alpha-numeric field that is used for identification.

After creating a holiday table, use the **display holiday-table** command to view the entries. To list all of the holiday tables, use the **list holiday-table** command, as shown in the following example.

Listing the Holiday Tables

```
list holiday-table
```

HOLIDAY TABLES

Table Number	Name
01	Business Holidays
02	Annual Promotion Dates
03	Summer Special
04	
05	
06	
07	
08	
09	
10	

Changing vector processing for holidays

After administering the holiday tables, add or change vector processing for those holidays.

On the command line, enter **change vector x** (where **x** is the vector number). The Call Vector form contains a display-only field that indicates that Holiday Vectoring is enabled. On the Call Vector form, customers can enter a new goto conditional for the holidays.

When Holiday Vectoring is optioned, a field on the Vector form identifies if the vector on which you are currently working is a Holiday Vectoring vector, as shown in the following example.

Call Vector form

change vector x		CALL VECTOR		page 1 of 3	
Number: xxx		Name: _____			
Multimedia? n	Attendant Vectoring? n	Meet-me Conf? n	Lock? y		
Basic? y	EAS? n	G3V4 Enhanced? n	ANI/II-Digits? n	ASAI Routing? n	
Prompting? y	LAI? n	G3V4 Adv Route? n	CINFO? n	BSR? n	Holidays? y
01	_____				
02	_____				
03	_____				
04	_____				
05	_____				
06	_____				
07	_____				
08	_____				
09	_____				
10	_____				
11	_____				

The Holiday Vectoring field is a display-only field and appears only when Holiday Vectoring is enabled on the Customer Options form. If either Basic Vectoring or Attendant Vectoring are set to y, then the Holiday Vectoring field can be set to y.

The following examples use **goto** commands to route calls for holidays:.

Holiday Vectoring example 1

```
change vector 1                                     Page 1 of 3
                                CALL VECTOR

    Number: 1          Name: In Germany
Multimedia? n      Attendant Vectoring? n      Meet-me Conf? n      Lock? y
    Basic? y      EAS? n      G3V4 Enhanced? n      ANI/II-Digits? n      ASAI Routing? n
    Prompting? y      LAI? n      G3V4 Adv Route? n      CINFO? n      BSR? n      Holidays? y

01 goto          vector 2 if holiday          in      table 1
02 route-to      number 123456789          with cov n if unconditionally
03
04
05
06
07
08
09
10
11
```

Holiday Vectoring example 2

```
change vector 3                                     Page 1 of 3
                                CALL VECTOR

    Number: 3          Name: In Ireland
Multimedia? n      Attendant Vectoring? n      Meet-me Conf? n      Lock? y
    Basic? y      EAS? n      G3V4 Enhanced? n      ANI/II-Digits? n      ASAI Routing? n
    Prompting? y      LAI? n      G3V4 Adv Route? n      CINFO? n      BSR? n      Holidays? y

01 goto          step 2 if holiday          in      table 2
02 route-to      number 45678          with cov n if unconditionally
03 stop
04 announcement 2721
05
06
07
08
09
10
11
```

After you have assigned Holiday Tables to several vectors, you can use the **list usage holiday-table** command, as shown in the following example, to display which vectors and vector steps are using the selected Holiday Table.

List of Holiday Table use in vectors

list usage holiday-table		
LIST USAGE REPORT		
Used By		
Vector	Vector Number 1	Step 1
Vector	Vector Number 3	Step 1

Holiday Vectoring considerations

Consider the following when administering Holiday Vectoring:

- Administration of Holiday Tables is supported only on the communication server and cannot be changed using adjunct vectoring tools.
- Holiday Vectoring is only available when Vectoring (Basic) or Attendant Vectoring is enabled.
- There is no validation that verifies the consistency among the 15 holidays in any table. If the same holiday is entered twice, the system stops checking with the first entry that is found.
- With holidays that are ranges of dates, the ranges could overlap. When a call is in vector processing, the holidays are checked from top to bottom on the table and the check stops if a match is found. Even though there might be multiple entries that would match, the check stops at the first match.
- There is a validation that the day of the month that is entered is valid with the given month. Specifically, if the month is April, June, September, or November, then the date must be a number between 1 and 30. If the month is January, March, May, July, August, October, or December, then the date can be a number between 1 and 31. If the month is February, then a the date can be a number between 1 and 29.

Note:

The year is not checked in holiday vector processing. This allows the same holidays to be used year-to-year when the holiday is on a fixed date. For holidays where the date changes from year-to-year, the holiday tables must be readministered.

- When disabling the Holiday Vectoring feature (changing the value of the Vectoring (Holidays) field from y to n on the Customer Options form), the vectors are checked for any **goto...if holiday** steps. If any of these steps are found, an error message is displayed, and the change is not allowed. The customer must remove those vector steps first before the feature can be disabled.



Network Call Redirection

Network Call Redirection (NCR) provides an ISDN-based call routing method between sites on a public network or a Virtual Private Network (VPN) that can reduce trunking costs. These cost reductions are particularly valuable in enterprises or multi-site contact center environments where ISDN trunk costs are high.

When an incoming ISDN call arrives at an Avaya communication server that has the NCR feature enabled, call redirection is managed by the PSTN instead of the local server. As a result, ISDN trunks that the server would otherwise retain to accomplish the redirection are not required.

The cost reductions associated with reduced trunk use can be significant, particularly when Avaya virtual routing features, such as Best Service Routing (BSR) with Expected Wait Time (EWT), are implemented.

This section includes the following topics:

- [Network Call Redirection options supported by PSTNs](#) on page 344
- [NCR considerations](#) on page 353
- [NCR feature interactions](#) on page 355
- [NCR implementation methods](#) on page 357
- [NCR administration](#) on page 364
- [NCR and Information Forwarding](#) on page 370
- [NCR troubleshooting](#) on page 372

Network Call Redirection options supported by PSTNs

This section describes the various NCR redirection options that are supported by PSTNs, which include the following:

- [Network Call Transfer type options](#) on page 344
- [Network Call Deflection \(NCD\)](#) on page 346
- [AT&T In-band Transfer and Connect](#) on page 347

Note:

All of the NCR protocols described in this section support Information Forwarding via UUI transport to the redirected-to location over the PSTN networks.

Network Call Transfer type options

This section describes the features and operations that are common to various NCT-type redirection protocols. This section includes the following topics:

- [About NCT-type feature operations](#) on page 344
- [Specific NCT-type protocols](#) on page 345

About NCT-type feature operations

The Network Call Transfer (NCT) type redirection operation by a PSTN switch can occur only after the incoming call has been answered and an ISDN **CONNECT** message is returned to the PSTN switch.

The local Avaya communication server sets up the second leg of the call, waits for the second site to be connected, and then requests the PSTN switch to merge the first leg of the call with the second leg. If this request is accepted, the PSTN switch joins the original ISDN caller to the redirected-to endpoint, sends a "PSTN success" **FACILITY** message back to the redirecting server and then drops both legs of the call at the redirecting server.

A key advantage of NCT type protocols is that the redirecting server retains control over the call and can continue to use a trunk-to-trunk connection if the PSTN switch does not accept the request to merge B-channels for both legs of the call. If the PSTN switch returns a "PSTN failure" **FACILITY** message, the originating server maintains a trunk-to-trunk connection for the call. In this case, vector call processing still considers the NCR attempt to be successful, but the following outcomes occur:

- A vector event is logged to indicate that the NCT operation attempted with the PSTN failed.
- If Avaya CMS is used to track incoming calls to an externally measured VDN, the call is not counted as "deflected."

Specific NCT-type protocols

Specific NCT-type protocols include the following:

MCI Network Call Transfer - Network Call Redirection and PSTN switch operations associated with the MCI NCT protocol are consistent with those described in [About NCT-type feature operations](#) on page 344.

MCI Network Call Redirection/Network Call Transfer is compliant with ANSI Explicit Network Call Transfer (ENCT) T1.643 (1995), the MCI Nortel DMS-250 variant of ANSI ECT (1995).

Note:

NCT is offered in the United States by MCI for the Nortel DMS-250 and Alcatel DEX-600 PSTN switches.

Two B-Channel Transfer (TBCT) - Network Call Redirection and PSTN switch operations associated with the TBCT protocol are consistent with those described in [About NCT-type feature operations](#) on page 344.

The Network Call Redirection/Telcordia Two B-Channel Transfer (TBCT) protocol is compliant with the Telcordia Two B-Channel Transfer and ANSI Explicit Call Transfer (1998) standards.

Note:

TBCT is offered in Canada for the AT&T/Canada and Bell/Canada DMS-100 and DMS-500 switches. AT&T will make the TBCT protocol available to Avaya contact center customers in the United States in 2004.

ETSI Explicit Call Transfer - Network Call Redirection and PSTN switch operations associated with the European Telecommunications Standard Institute (ETSI) Explicit Call Transfer (ECT) protocol are consistent with those described in [About NCT-type feature operations](#) on page 344.

The Network Call Redirection/ETSI Explicit Call Transfer protocol is compliant with ETSI standard EN 300 369-1.

Note:

ETSI-ECT is offered in Europe for the France Telecom X.10 and Nordic country Ericsson AXI PSTN switches.

Network Call Deflection (NCD)

The NCD operation by a PSTN switch can occur only if the incoming call to the Avaya communication server is not answered and an ISDN **CONNECT** message is not sent to the PSTN switch from the incoming server.

The Network Call Redirection/Network Call Deflection feature is compliant with ETSI Supplementary Services Network Call Deflection ETS 300 207-1 (partial call rerouting in the public network).



Important:

Some call vectoring commands cause **CONNECT** messages to be sent to the PSTN switch. If call vectoring methods are used to implement NCR and the PSTN switch supports the NCD protocol, call vectors used to invoke NCR must not include any of the following vector commands:

- **wait hearing music**
- **collect x digits**
- **announcement**
- **converse-on split/skill**

When the Avaya server invokes the NCD feature, the PSTN switch sets up the second leg of the call instead of the redirecting Avaya communication server. There are two PSTN options for NCD specified by the ETSI standards: “retain call until alerting/connect” and “clear call upon invocation.” This is commonly referred to as a “partial call reroute.”

When the “clear call on invocation” option is used, a successful NCR/NCD attempt is indicated when the PSTN switch has validated the NCR request and sends a “call reroute return” **DISCONNECT** message to the originating server. In this case, the server loses control of the call after it is transferred to the PSTN redirection endpoint, and no alternate transfer method is possible if the PSTN switch fails to transfer the call to the second location.

The “retain call until alerting/connect” option is not widely available (no known PSTN offers it at this time). With this option, the PSTN switch sets up the second leg of the call, waits until an ALERTING message is received, and then sends a “call reroute return” **FACILITY** message followed by a **DISCONNECT** message to the originating server. In this case, if the second leg of the call fails, the server can redirect the call with a trunk-to-trunk connection so that the call is not lost.

Note:

NCD is offered in Europe on the following switches:

- Siemens EWSD
- Alcatel S12
- Marconi/Plessey (British Telecom System X)
- Ericsson AXE10 (British Telecom System Y)

AT&T In-band Transfer and Connect

This section describes PSTN redirection operations associated with the AT&T In-band Transfer and Connect service. Details of the service are described in AT&T TR 50075.

This section includes the following topics:

- [Overview of AT&T In-Band Transfer and Connect operations with BSR](#) on page 347
- [Administering NCR with AT&T In-band Transfer and Connect](#) on page 349
- [Administering DTMF announcements for AT&T In-band Transfer and Connect](#) on page 350
- [Administering BSR VDNs and vectors for AT&T In-band Transfer and Connect](#) on page 351

Overview of AT&T In-Band Transfer and Connect operations with BSR

AT&T in-band Transfer and Connect operations can be invoked by BSR vector processing, where the BSR interflow endpoint is an announcement extension rather than a remote VDN extension number. When NCR is activated on the system, the UUI information element for the call is returned to the PSTN, which forwards the UUI data associated with the call to the redirected-to endpoint.

In a BSR environment, the phone number that is specified with DTMF (Dial Tone Multi-Frequency) digits in the announcement identifies a VDN that is administered in a BSR application plan. In this case, the VDN listed in the application plan is associated with a vector that includes the required vector steps needed to implement the AT&T In-band Transfer and Connect service.

Note:

The AT&T In-band Transfer and Connect service can be also used to implement NCR without BSR by means of **route-to number** vector steps. For more information, see [Using route-to number vector steps with AT&T In-Band Transfer and Connect](#) on page 360.

Operations and requirements associated with AT&T In-band Transfer and Connect operations can be summarized as follows:

1. A call from the PSTN switch arrives at the local Avaya communication server and is routed to a VDN for subsequent BSR vector processing.
2. The BSR polling vector on the local server receives status information from various skills and locations and identifies a remote contact center site as best location.
3. Call control passes to the interflow VDN for the best location, which is specified in the BSR application plan. For more information, see [Selecting or administering application plans](#) on page 317.



Important:

The Net Redir? field in the BSR application Plan for the remote location must be set to n.

4. The vector associated with the interflow VDN for the best location includes the following:
 - An **announcement** step that specifies an extension for which a special sequence of DTMF digits has been recorded. The recorded DTMF digits return in-band information about the redirected-to endpoint back to the PSTN. The DTMF digits provided in the announcement are entered from a Touch-tone keypad, and use the format:

***T + phone number**

where "T" signifies the "8" digit on the keypad and "phone number" represents the number for a VDN administered on the local communication server.

Note:

The phone equipment required to create the announcement is described in [Administering DTMF announcements for AT&T In-band Transfer and Connect](#) on page 350.

- A **wait-hearing silence** step provides a brief interval to allow sufficient time for the PSTN switch to process the DTMF digits.
 - A **disconnect after announcement none** vector step. This step sends an ISDN **DISCONNECT** message that includes a UUI information element. The UUI element contains all Information Forwarding UUI information for the call to the PSTN.
5. The PSTN switch makes the connection to the specified redirected-to endpoint.

NCR provides Information Forwarding support for the AT&T Transfer and Connect In-band network service ISDN D-channel data forwarding capability. The Information Forwarding feature forwards UUI that is associated with the call to the redirected-to location. When call vectoring and AT&T In-band Transfer and Connect are used to transfer a call, and NCR is enabled for the system, the **disconnect** vector step includes the codeset UUI IE in the ISDN **DISCONNECT** message.

Administering NCR with AT&T In-band Transfer and Connect

The following table lists the NCR administration requirements when the AT&T In-Band Transfer and Connect service is used to invoke NCR.

Note:

For a description of NCR administration requirements when either the NCT-type or NCD protocols are used to invoke NCR, see [NCR administration](#) on page 364.

NCR administration - verify NCR customer option

Administration command:	display system-parameters customer options	
Page name:	Call Center Optional Features	
Required field(s):	ISDN Network Call Redirection	y

NCR administration - BSR Application Plan entries for polling and interflow locations¹

Administration command:	change best-service-routing x	
Page name:	Best Service Routing Application	
Required field(s):	Net Redir?	n

1. Required only if the BSR feature is enabled. For more information, see [Administering BSR VDNs and vectors for AT&T In-band Transfer and Connect](#) on page 351.

NCR administration - trunk group form

Administration command:	change trunk-group x	
Page name:	Trunk Group	
Required field(s):	Group Type:	ISDN
	Supplementary Services Protocol:	a
Page name:	Trunk Features	
Required field(s):	UU IE Treatment:	shared
	Network Call Redirection	none

Network Call Redirection

P

NCR administration - signaling form

Administration command:	change signaling group x	
Page name:	Signaling Group	
Required field(s):	Network Call Transfer:	y

NCR administration - DS1 form

Administration command:	change ds1 [<i>board location</i>] ¹	
Page name:	DS1 Circuit Pack	
Required field(s):	Country Protocol:	1b

1. Board location parameter values are: [cabinet(1-1)];carrier(A-E);slot(0-20) OR [gateway(1-10)];module(V1-V9).

Administering DTMF announcements for AT&T In-band Transfer and Connect

You can create the announcement that provides the DTMF digits required for In-Band Transfer and Connect operations by either of the following methods:

- Using an Avaya Communication Manager analog DTMF station or digital station to activate the record session for a specific announcement. When the record session starts, use the keypad to enter the Touch-tones digits that correspond to the " *T + phone number " that is used to invoke Transfer and Connect operations. For example, if feature invocation requires a *8 key sequence, and the specified endpoint number is 3035552104, then enter: *83035552104.

Note:

If you use any digital phone (such as Callmaster, BRI, ISDN or IP) to record the announcement, a separate keypad must be used. These station keypads do not generate audible DTMF tones during an announcement record session. To achieve the best recording quality with these phones, the external keypad should be electrically connected using local arrangements.

- Using a PC with VAL boards with an internal or external keypad.

Note:

To achieve the best recording quality, the external keypad should be electrically connected using local arrangements.

Administering BSR VDNs and vectors for AT&T In-band Transfer and Connect

When a BSR polling vector identifies a best location for an incoming call, the location must be administered on a BSR Application Plan. The BSR Application Plan must meet the following requirements:

- The plan must include one or more interflow VDNs that are associated with vectors that include the vectors steps necessary for successful invocation of the AT&T In-Band Transfer and Connect feature.
- The Net Redir? field associated with the location must be set to n.

Example implementation - The following example shows how BSR can be used with AT&T In-Band Transfer and Connect to implement call redirection. In the example scenario, *local* rather than *remote* interflow VDN numbers are assigned to the BSR application plan form.

The example application plan is shown below:

BEST SERVICE ROUTING APPLICATION						
Number: 1	Name:	Maximum Suppression Time: 60			Lock? y	
Num	Location Name	Switch Node	Status Poll VDN	Interflow VDN	Net Redir?	
1	Omaha	320	95022011	4004	n	
2	Paris	320	95022111	4005	n	
3	Sydney	320	95032211	4006	n	

The example application plan shown above lists VDN extension numbers that are local to the communication server. Each of the VDNs are associated with vectors that are designed to invoke AT&T In-Band Transfer and Connect operations.

Each of the vectors associated with the interflow VDNs listed in the application plan includes the elements shown in the following example.

1. announcement 1234 [*8 plus VDN extension number for remote site]
2. wait 2 seconds hearing silence
3. disconnect after announcement none

In the vector example shown above, step 1 provides the extension for an announcement that plays the DTMF digits, as described in [Administering DTMF announcements for AT&T In-band Transfer and Connect](#) on page 350.

Step 2 provides a wait step that is included to give the PSTN switch sufficient time to process the in-band information (sent by the announcement in the preceding step) before the call is disconnected at step 3. The **disconnect** command in step 3 also sends an ISDN **DISCONNECT** message that includes the Information Forwarding data for the call in a codeset 0 or 7 UUI IE element. For more information about Information Forwarding, see [NCR and Information Forwarding](#) on page 370.



Important:

The type of Information Forwarding data sent to the PSTN depends on how the `UUI IE Treatment :` field on the `TRUNK FEATURES` page of the Trunk Group form is administered:

- If the `UUI IE Treatment :` field is set to `Service Provider`, the ASAI user data is forwarded to the PSTN.
- If the `UUI IE Treatment :` field is set `Shared`, the full call center data set for the call is forwarded to the PSTN.

NCR considerations

The following sections describes things that you should understand when you implement NCR:

- [Limitations on call redirection](#) on page 353
- [Trunking considerations](#) on page 354

Limitations on call redirection

You should understand the following items that pertain to limitations on the NCR feature:

NCR feature support - PSTN support for NCR varies with geographical location and may be limited or absent in some areas. Consult your Avaya account team to determine availability in your area.

NCD redirection protocol support - At this time, no PSTNs offer the Network Call Deflection “retain call until alerting/connect” operation. Therefore, only the Network Call Deflection “clear call upon invocation” offer is available from PSTNs. Both methods are described in this document. It is advised that you negotiate with your PSTN as the NCR feature will work on either platform. NCR is limited by which PSTN platform is available to you.

Allowable number of redirection per call - There may be limits placed on the number of times a call may be redirected over the public network. These limits are imposed by the public network service provider. For example, in the United States, MCI currently allows only one redirection per call. In the United Kingdom, there is a limit of 20 call deflections per call. In addition, there may be additional charges associated with redirected calls.

User-to-User information forwarding support - Some public network service providers do not support forwarding of User-to-User Information (UUI), including ASAI User data, collected digits, VDN name, the VDN in-time (as reflected by the NETINTIME database items), and the UCID. This means that Information Forwarding will be lost and the second leg of the redirected call will look like an entirely new call to the redirected-to server at the second location.

One of the data items lost is the VDN name, which is rerouted to the originally called service (DNIS) information. The indication that the call has been forwarded can be achieved by using dedicated VDNs for call forwarding, but this strategy loses the benefits of Information Forwarding inherent with NCR and limits use of CTI applications.

Note:

PSTNs typically charge by call or by a monthly rate for the redirect and UUI transport services.

Trunking considerations

The MCI network requires redirected calls to be on the same Direct Access Line (DAL). The Avaya communication server enforces this requirement by only requesting NCT for two calls using the same signaling group. This results in sending the request on the same D-channel used for the first call with associated signaling or on the associated D-channel when active with Non-Facility Associated Signaling (NFAS) D-channel backup configuration. This requirement is also imposed for the ANSI and TBCT forms of NCT.

When NCR is implemented by an NCT-type protocol (MCI NCT, TBCT or ETSI-ECT) by either a BSR **queue-to best** vector step or a **route-to number ~r** vector step, the second leg of the call is placed over an idle trunk in the same trunk group as the incoming call. This strategy, which ensures that invocation of NCT-type protocols is done over the same signaling group, means that a two-way trunk group is required for vector activation.

When the trunk group service type is set to call-by-call, the trunk group cbc Usage Allocation capability can be used to reserve a minimum number of trunk channels for outgoing calls. For more information, see [Reserving trunk group B-channels for NCR redirection operations](#) on page 366.

With station, ACD agent, VRU, or CTI-controlled conference/transfer, if the second leg of the call is set up over an outgoing trunk with the same signaling group as the incoming call, then an NCT-type protocol is invoked when the transfer is initiated. If an outgoing trunk group is assigned to the same signaling group as the incoming trunk group and that outgoing trunk is selected by the outgoing call (using ARS) placed by the user/CTI application for transfer, then a two-way trunk group is not required.

Note:

For incoming 800 number calls, the second leg of the call must be answered (ISDN CONNECT message received) before an NCT-type protocol can be invoked. This applies to the following PSTN switches:

- For NCT, the MCI MCI DMS-250 switches.
- For TBCT, the AT&T/Canada and Bell Canada DMS-100 and DMS 500 switches.
- For ETCI-ECT, the France Telecom X-10 switch and other PSTN switches in Europe.

NCR feature interactions

Network Call Redirection interacts with the following contact center features:

- Station transfer by DCP set Transfer button/hangup or communication server hook flash transfer by hangup
- station transfer by DCP set Conference button, in which the conferencing (middle) party connects the two calls and then hangs up
- Station call transfer/conference — An incoming ISDN call over a trunk with NCT PSTN service is answered at the station or VRU or IVR. The station user/VRU answers the call and initiates a “station call transfer” using the transfer feature button or a communication server hook flash. The DEIFNITY automatically sends the `invoke NCT ISDN FACility` message when the transfer is complete only if NCT is assigned to the incoming trunk group and the call is eligible for NCT. That is, if the second leg of the call has been set up over a trunk with the same signaling group as the incoming call and the second leg call has been answered. If the station user initiates and completes a three-way conference instead, the communication server automatically sends an `invoke NCT ISDN` message when the initiating station user drops from the three-way conference.
- Attendant Vectoring — Attendant Vectoring can use the **route-to number** vector step with the `~r` option to route calls to attendants located at another communication server node. The operation of the NCR feature using the NCD or NCT networks features to accomplish the call redirection is exactly the same as for redirecting ACD calls.
- Advice of Charge — No new capabilities are added for the NCR feature for the Advice of Charge PSTN feature. The Advice of Charge feature should be used with the same trunk facilities used for the NCR feature.
- BCMS — No change is made to BCMS for support of NCR. redirected calls are tracked as completed calls since the PSTN disconnects the incoming facility of the original call when the call is redirected to another site.
- Enhanced Information Forwarding — For the NCR feature, Enhanced Information Forwarding transports User-to-User information (UUI) for the incoming ISDN call to the PSTN endpoint that receives the redirected call. The use of the Enhanced Information Forwarding capability with NCR (the recommended configuration) requires that the incoming call trunk group be assigned as “shared” (i.e., the `UUI IE treatment` field is set to shared). However, if the trunk group is set up as service provider, only the ASAI user information (or user information provided by the incoming ISDN call) will be included in the `UUI IE` sent on a non-shared basis to the redirected-to PSTN endpoint. NCR supports Information Forwarding for AT&T In-band Transfer and Connect service.
- Look-Ahead Interflow — NCR activation using the **route-to number** vector step does not require Look-Ahead Interflow to be active to provide multi-site capabilities, which are required for considering remote locations and access to the BSR Application Plan form.

- Service Observing by VDN — If the Service Observing by VDN feature is used to service observe a VDN, where the NCR feature is used to redirect incoming ISDN calls, the service-observer will hear the same tones, music, and/or announcements heard by the incoming caller before the NCR feature reroutes the call to another PSTN endpoint. When the NCR operation is completed, the service-observer will be dropped as an observer of the incoming call and placed in the service-observing queue associated with the VDN.
- Trunk-to-Trunk Transfer — If the NCR feature is optioned and the ASAI Third-Party make Call/transfer operation is used to redirect an incoming ISDN to a PSTN endpoint, the Trunk-to-Trunk Transfer field on the System-Related Customer Options for must be set to y for the call redirection to succeed. If the **route-to number** or BSR **queue-to-best** vector step uses the NCR feature to redirect an incoming ISDN call to a PSTN endpoint, the Trunk-to-Trunk Transfer customer option does not have to be set to y.
- VDN Return Destination — If the VDN Return Destination feature is administered for the VDN that is associated with a vector that causes the NCR feature to be invoked, the VDN Return Destination feature will be canceled when the call is redirected by NCR.
- CMS database items — The following Avaya CMS database items are affected by NCR:
 - DEFLECTCALLS: In the vector and VDN tables, the DEFLECTCALLS item includes the number of calls that are redirected using NCR through the BSR feature by using the ~r route-to-number or queue-to-best commands. Successful NCR attempts are pegged as DEFLECTCALLS.
 - INTERFLOWCALLS: In the vector and VDN tables, the INTERFLOWCALLS item includes successful BSR interflows using NCR redirections.
 - LOOKATTEMPTS: In the vector and VDN tables, the LOOKATTEMPTS item includes the number of times the Look-Ahead Interflow or BSR interflow was attempted for calls in the vector. Successful Look-Ahead Interflow or BSR attempts are also counted. NCR invoke attempts (NCD or NCT) are also reflected in LOOKFLOWCALLS.
 - LOOKFLOWCALLS: In vector and VDN tables, the LOOKFLOWCALLS item includes the number of INTERFLOWCALLS that were redirected by the Look-Ahead Interflow or BSR features. LOOKFLOWCALLS is a subset of INTERFLOWCALLS and includes LOOKATTEMPTS for the Look-Ahead Interflow or BSR interflows. With BSR interflow via trunk-to-trunk transfer or NCR, every LOOKATTEMPT will also be counted as a LOOKFLOWCALLS unless a failure occurs.

NCR implementation methods

This section describes the different methods that you can use to implement the NCR feature, which include the following:

- [NCR activation using call vectoring methods](#) on page 357
- [NCR activation using ASAI third-party merge/call transfer operations](#) on page 361
- [NCR activation using station call transfer or conference operations](#) on page 362
- [CTI call transfer](#) on page 363
- [NCR activation using ASAI adjunct route operations](#) on page 363

NCR activation using call vectoring methods

This section describes the call vectoring methods that can be used to implement NCR and provides some basic example vectors. This section includes the following topics:

- [Summary of call vectoring-mediated NCR operations](#) on page 358
- [Using BSR queue-to best vector steps to activate NCR](#) on page 359
- [Using route-to number ~r vector steps to activate NCR](#) on page 360
- [Using route-to number vector steps with AT&T In-Band Transfer and Connect](#) on page 360

Summary of call vectoring-mediated NCR operations

The processes by which NCR is implemented by a call vectoring method is summarized in the following steps:

Note:

The following description does not apply when the AT&T In-band Transfer and Connect service is used to invoke NCR. For a description of NCR operations associated with that service, see [AT&T In-band Transfer and Connect](#) on page 347.

1. The PSTN switch sends an incoming ISDN call to the Avaya communication server, where the call enters vector processing.
2. One of the following occurs:
 - If the Avaya communication server trunk group and PSTN switch are configured to use an NCT-type redirection protocol, the server returns an ISDN CONNECT message to the PSTN switch. The CONNECT message may be triggered by any of the following vector commands:
 - **wait hearing music** or extension (announcement)
 - **collect x digits**
 - **announcement**
 - **converse-on split**

Note:

If the Avaya communication server trunk group and PSTN switch are configured to use an NCT-type redirection protocol, a CONNECT message is also returned to the PSTN switch regardless of whether any of the above-listed vector commands are encountered during vector processing.

- If the server trunk group and PSTN switch are configured to use the NCD redirection protocol, a CONNECT message must *not* be sent to the PSTN switch. Therefore, when the NCD protocol is applied, none of the vector commands listed above should be included in call vectors that implement NCR.
3. Call processing proceeds to either a **route-to number ~r** or BSR **queue-to best** vector step. Depending on which type of redirection is administered for the incoming trunk group, either NCT or NCD processes are initiated. In either case, a FACILITY message is sent to the public network over the D-channel associated with the incoming trunk to invoke redirection of the call.

Note:

You should understand the following items that pertain to the phone number and receiving vector for the interflow location:

- For incoming 800 number calls from MCI DMS-250 network switches, the vector reached by the second leg call placed by the redirecting Avaya server must immediately return an ISDN CONNECT message. To meet this

requirement, either a **wait 0 secs hearing music** or **announcement** step can be used as the first step in the interflow receiving vector.

- The administered interflow number must be the public network phone number (without trunk/ARS/AAR access codes) that reaches the redirected-to site. The long distance access (dial 1 in the United States) may also be required depending on PSTN requirements for the trunk group. This number is used differently during the invoke process depending on which redirection service is available from the public network service provider.
4. The PSTN indicates redirection success or failure consistent with the protocol-specific operations described in [Network Call Redirection options supported by PSTNs](#) on page 344. An unsuccessful NCR attempt results in one of the following outcomes:
- If an NCT-type protocol is used, the originating server establishes a trunk-to-trunk connection.
 - If the NCD protocol is used and the Avaya Definity version is earlier than load 37 of Release 10 vector processing continues with the next vector step that follows the **queue-to best** or **route-to number ~r** vector step.
 - If the NCD protocol is used and the Avaya Definity version is load 37 of Release 10 or later, or any Avaya MultiVantage or Communication Manager release the call may be redirected to the best location by means of a trunk-to-trunk connection. However, the ability of the originating server to establish such a trunk-to-trunk connection depends on the specific features of the NCD protocol in use. For more information, see [Network Call Deflection \(NCD\)](#) on page 346.

Using BSR queue-to best vector steps to activate NCR

This method can be used to invoke NCR when the Best Service Routing feature selection of a best location has been administered with the Net Redir? option set to y on the BSR Application Table form (with both BSR and LAI active), and the redirected-to location is designated in a **queue-to-best** vector step.

NCR is especially useful for multi-site contact center operations in which the BSR feature is enabled. In this case, **queue-to-best** vector steps can be used to interflow ISDN calls between communication servers over the PSTN. This method provides the best approach for balancing loads across a multi-site environment and is more cost effective and accurate than pre-delivery routers. For more information about BSR, see [Best Service Routing \(BSR\)](#) on page 271.

Example BSR vector - The following vector example shows the basic vector steps that can be used to activate NCR processes when the BSR feature is enabled together with the appropriate NCR administration requirements.

```
wait 2 seconds hearing ringback
consider skill 1 pri 1 adjust-by 0
consider location 1 adjust-by 20
consider location 2 adjust-by 40
queue-to-best
```

Using route-to number ~r vector steps to activate NCR

This method can be used to invoke NCR when a **route-to-number** vector step that specifies a number that begins with the special **~r** characters is included in a call vector. This method can be used to invoke NCR with or without the LAI option set to y or with Attendant Call Vectoring active.

Example route-to number ~r vectors - The following examples show vectors that include **route-to-number** commands to activate NCR processes, either with or without use of the Attendant vectoring feature.

```
wait 0 seconds hearing ringback
goto step 4 if skill oldest-call < 30 secs
route-to number ~r13035403001
queue-to skill 35 priority m
...
```

```
goto step 6 if time-of-day is all 17:00 to 09:00
wait 0 seconds hearing ringback
queue-to attd-group
wait 999 secs hearing music
stop
route-to number ~r13035551002
```

Using route-to number vector steps with AT&T In-Band Transfer and Connect

When your supports the AT&T In-Band Transfer and Connect service, you can also invoke NCR with **route-to number** vector steps. An example of this method in a BSR-enabled environment is described in [Administering BSR VDNs and vectors for AT&T In-band Transfer and Connect](#) on page 351. However, you can also use **route-to number** vector steps in a similar manner even when the BSR feature is not enabled.

NCR activation using ASAI third-party merge/call transfer operations

NCR is activated by ASAI call processing when the Third-Party Merge/Call Transfer operation is requested by a CTI operation. This occurs in the following manner:

1. This is typically initiated by the CTI user selecting an icon, menu item, or button to transfer an incoming ISDN call to another user on the public network.

Since the incoming ISDN call must be connected to a station user before the Third-Party Merge/Call Transfer operation is requested, NCR can only initiate the call redirection if NCT is optioned on the trunk.

With incoming MCI DMS-250 network switch 800 calls, the far end call must be answered first.

2. If a call arrives at an ASAI monitored VDN and either the NCT or NCD feature is used, then ASAI will send appropriate information in the disconnect event to tell the application that the call has been redirected by NCR.

Other things to know about NCR with ASAI

Using ASAI data for call tracking - ASAI event reporting allows tracking of ISDN ACD calls that were redirected by NCR in a multi-server contact center environment. These calls can be tracked by the UCID assigned to each call, or by the UUI information inserted by the application through either the Third Party Make Call or Adjunct Routing features.

ASAI drop event - Successful NCR call redirection causes an ASAI “drop” event to be sent to the CTI application with a **CV_REDIR** cause value of decimal (30) after the redirection is completed. Only one NCR “drop” event is received for a successful NCR operation when the NCT PSTN feature is used, even though two trunks are dropped by the PSTN.

ASAI third-party merge/call transfer - The CTI application requests a third-party merge/call transfer ASAI operation to transfer the call to the second communication server. This is only used if Network Call Transfer is not available. Once the two calls merge, then ASAI sends a third-party acknowledgement, and when the call is completed, ASAI sends a drop event report, and the third-party call ends.

NCR activation using station call transfer or conference operations

When an incoming ISDN call over a trunk with NCT-type PSTN service is answered at the station or voice response unit (VRU or IVR), the station user or VRU places the call on hold and dials the number for a PSTN endpoint. The station user/VRU then initiates a station call transfer using the Transfer feature button or a switch hook flash.

The switch automatically sends an "invoke NCT" FACILITY message when the transfer is complete if the following conditions are met:

- An NCT-type protocol is administered to the incoming ISDN trunk group.
- The call is eligible for redirection by means of an NCT-type protocol, which requires the second leg of the call to be set up over a trunk with the same signaling group as the incoming call.

If the station user initiates and completes a three-way conference and then drops from the conference, the switch automatically sends an invoke NCT ISDN message.

The following steps provide additional information about NCR activation using station call transfer or conference:

1. An incoming ISDN call (over trunk with NCT PSTN service) is answered at the switch station/VRU line port.
2. A station or ACD agent user initiates station call transfer using feature button or switch-hook flash.
3. VRU (out of vector processing) initiates station call transfer using a switch-hook flash.
4. The switch automatically sends an "invoke NCT" ISDN FACILITY message when the transfer is completed after the second leg is set up.
5. If the station user initiates and completes a three-way conference instead, the switch automatically sends an "invoke NCT" message when the initiating station/VRU user drops from the three-way conference.

The initiator (station/agent user or VRU) dials the second leg connection by using an access code plus the PSTN number after initiating the transfer. The access code must select an idle outgoing trunk in a trunk group with the same signaling group as the incoming call with NCT active. The transfer is completed when the transfer button is pressed or the initiator hangs up.

CTI call transfer

The NCR NCT-type feature is activated automatically for a CTI call transfer under the following conditions:

- The ISDN Network Call Redirection field is set on the System Parameters Customer Options form.
- The incoming PRI call is made over a PRI trunk administered for the NCR feature.
- The PSTN number that a station-user would dial to transfer an incoming ISDN call to another PSTN endpoint must be added to the ARS digit analysis form in such a way that the second leg of the call transfer uses the same trunk group with a trunk that has the same D-channel as the incoming call.

The PSTN service provider should be contacted to verify that the configuration of the PSTN switch used for the Network Call Transfer operation has been properly configured to accept the outgoing digits used by the Avaya server station-user or CTI application to set up the second leg of the call transfer.

NCR activation using ASAI adjunct route operations

NCR can be invoked by a route request sent by an ASAI adjunct application after an **adjunct routing** vector command is encountered during call vector processing. For more information, see the following ASAI documents:

- For information about the Call Options codepoint for NCR Routing, see "Call Options" in Chapter 4, "Information Elements," of the ASAI Protocol Reference, 555-230-221.
- For information about the ASAI Call Route Selection message, see "Call Route Selection" in Chapter 5, "Byte Level Messages," of the ASAI Protocol Reference.
- For information about possible feature interactions, see "NCR Failure and Enhanced Adjunct Routing," in Chapter 12, "Feature Interactions," of the ASAI Technical Reference, 555-230-220.

NCR administration

The following sections list NCR administration requirements. Some of the administration requirements will vary according to the specific method used to implement NCR.



Important:

The following administration requirements do *not* apply if you use the AT&T In-Band Transfer and Connect service to invoke NCR. For the administration requirements that are specific to that service, see [Administering NCR with AT&T In-band Transfer and Connect](#) on page 349.

NCR administration - verify customer options for NCR

Administration command:	display system-parameters customer options	
Page name:	Call Center Optional Features	
Required field(s):	Call Center Release	12 ¹
	ISDN Network Call Redirection	y

1. Call center release 12.0 or later.

NCR administration - BSR form¹

Administration command:	change best-service-routing x	
Page name:	Best Service Routing Application	
Required field(s):	Net Redir?	y

1. Required only if the BSR feature is enabled.

NCR administration - trunk group form

Administration command:	change trunk-group x				
Page name:	Trunk Group				
Required field(s):	Direction:	two-way			
	Service Type:	cbc			
	Usage Alloc:	y			
	Disconnect Supervision In?	y			
	Disconnect Supervision Out?	y			
		(Settings specific to PSTN redirection options)			
		NCT	TBCT	ETSI - ECT	NCD
Required field(s):	Group Type:	ISDN	ISDN	ISDN	ISDN
	Supplementary Services Protocol:	g	a	c	c
Page name:	Trunk Features				
	Network Call Redirection:	y			

NCR administration - signaling form

Administration command:	change signaling group x				
Page name:	Signaling Group				
		Supported PSTN Redirection option			
		NCT	TBCT	ETSI - ECT	NCD
Required field(s):	Group Type:	ISDN			
	Network Call Transfer:	y	y	y	n

NCR administration - DS1 form

Administration command:	change ds1 [<i>board location</i>] ¹				
Page name:	DS1 Circuit Pack				
		Supported PSTN Redirection option			
		NCT	TBCT	ETSI - ECT	NCD
Required field(s):	Country Protocol:	Any, but typically 1a	1b or 1d	etsi	etsi

1. Board location parameter values are: [cabinet(1-1)];carrier(A-E);slot(0-20) OR [gateway(1-10)];module(V1-V9).

Reserving trunk group B-channels for NCR redirection operations

Trunk groups that are used for NCR operations must be administered as Call-By-Call (cbc) trunk types. Since cbc trunk groups can carry both incoming and outgoing call traffic, situations may occur in which transient levels of incoming traffic occupy all available B-channels. When no B-channels are available for outgoing calls, attempts to set up the outgoing leg for a redirected call will fail and the call will be lost.

Important:

When the NCR feature is used, Avaya recommends reservation of a minimum number of trunk members for the outgoing leg of redirected calls. However, the optimum number of trunk members to reserve depends on traffic patterns that are specific to each contact center. A call traffic analysis should be performed to establish this information.

To minimize lost calls due to lack of available trunk resources, you must comply with the following administration requirements:

- The Network Facilities form must include one or more ISDN services or features that can be associated with trunk groups that are used for NCR calls.

Note:

When you administer an ISDN service or feature, you must also administer the Incoming Call Handling Treatment page on the Trunk Group form. For more information, see the ISDN trunk group section, Screen reference chapter in: *Administrator Guide for Avaya Communication Manager*, 555-233-506.

- On the CBC Trunk Group Allocation page of the Trunk Group form, minimum and maximum values must be specified for trunk members allocated to the designated service or feature.

This section includes the following topics:

- [About network facility types](#) on page 367
- [Example trunk allocation for PSTNs that supports NSF codings](#) on page 368
- [Example trunk allocation for PSTNs that do not supports NSF codings](#) on page 369

About network facility types

Before you can specify a minimum number of trunk group members to be allocated for the outgoing legs of NCR calls, you must administer one or more ISDN services or features for this purpose. The Network Facilities form includes two pre-defined features and ten predefined services. These pre-defined entries are associated with either NSF (network specific facilities) Type 0 or Type 1. You can administer additional user-defined services or features on the Network Facilities form. User-defined facilities can be Type 0, 1, 2, or 3. You must obtain support agreements with your PSTN for Type 0 or Type 1 facilities.

Type 2 (incoming) and Type 3 (outgoing) facilities do not use NSF codings or require special support by the PSTN. These network facility types are offered because NSF information is not included with ISDN calls in some regions of the world.



Important:

If your PSTN does not support NSF, you must specify a Type 3 facility when you reserve trunk members for NCR operations, and the Usage Allocation Enhancements Optional Feature must be enabled before you can administer a Type 3 facility.

Example trunk allocation for PSTNs that supports NSF codings

The following example Network Facilities form includes the basic default pre-defined services and features.

change isdn network-facilities			Page 1 of 2		
NETWORK-FACILITIES					
Name	Facility Type	Coding	Name	Facility Type	Coding
sub-operator	0	00110	mega800	1	00010
operator	0	00101	megacom	1	00011
outwats-bnd	1	00001	inwats	1	00100
sdn	1	00001	wats-max-bnd	1	00101
accunet	1	00110	lds	1	00111
i800	1	01000	multiquest	1	10000
_____	-	_____			
_____	-	_____			
_____	-	_____			
_____	-	_____			
_____	-	_____			
_____	-	_____			

Once network facilities are specified, trunk members can be allocated on the basis of specific facilities or features. The following example shows a CBC Trunk Group Allocation form for a CBC trunk group for which at least one B-channel is always available for the outgoing legs of redirected calls when the mega800 service is used. The specific feature or service that you specify in this form depends on the support provided by your PSTN.

change trunk-group 29			CBC TRUNK GROUP ALLOCATION					
Usage Allocation Plan 1			Usage Allocation Plan 2			Usage Allocation Plan 3		
Service/Feature	Min#	Max#	Service/Feature	Min#	Max#	Service/Feature	Min#	Max#
Chan	Chan		Chan	Chan		Chan	Chan	
mega800	1	99						

Example trunk allocation for PSTNs that do not supports NSF codings

The following example Network Facilities forms includes the basic default pre-defined services and features and an additional user-defined, Type 3 (outgoing) feature ("bsr-redirect").

change isdn network-facilities			Page 1 of 2		
NETWORK-FACILITIES					
Name	Facility Type	Coding	Name	Facility Type	Coding
sub-operator	0	00110	mega800	1	00010
operator	0	00101	megacom	1	00011
outwats-bnd	1	00001	inwats	1	00100
sdn	1	00001	wats-max-bnd	1	00101
accunet	1	00110	lds	1	00111
i800	1	01000	multiquest	1	10000
bsr-redirect	3	_____			
_____	-	_____			
_____	-	_____			
_____	-	_____			
_____	-	_____			
_____	-	_____			

After the user-defined feature is administered, you can specify a minimum number of reserved trunk channels to remain available for the outgoing legs of redirected calls when the feature is used.

change trunk-group 42			CBC TRUNK GROUP ALLOCATION					
Usage Allocation Plan 1			Usage Allocation Plan 2			Usage Allocation Plan 3		
Service/Feature	Min#	Max#	Service/Feature	Min#	Max#	Service/Feature	Min#	Max#
bsr-redirect	5	25						

NCR and Information Forwarding

The Avaya Information Forwarding feature is supported with NCR when the PSTN supports ISDN UUI IE transport in conjunction with the specific network redirection protocol used by the switch.

This section includes the following topics:

- [UUI data included in Information Forwarding](#) on page 370
- [UUI data forwarding](#) on page 370
- [PSTN terms used for UUI transport service](#) on page 371

UUI data included in Information Forwarding

Information Forwarding forwards the following contact center-related data (as User-to-User Information) with an ISDN call:

- ASAI user data
- Universal Call ID (UCID)
- Collected digits
- In-VDN time
- VDN name.

UUI data forwarding

When an NCT-type option is used for NCR, the UUI is forwarded by the Avaya communication server in the ISDN **SETUP** message sent with the call to the second site.

When the NCD option is used for NCR, the UUI is included in the ISDN **FACILITY** invoke message sent from the Avaya communication server to the PSTN. The PSTN then forwards the UUI to the second site.

When the AT&T In-Band Transfer and Connect service is used for NCR, the UUI is returned in an ISDN **DISCONNECT** message that includes the data in a codeset 0 or 7 UUI IE element.

PSTN terms used for UUI transport service

For NCT-type options and the NCD option, the PSTN service provider must configure the PRI trunks used with the Avaya NCR feature to transport the UUI data associated with the the Avaya Information Forwarding feature. The various PSTN terms used in different countries for UUI IE transport are listed in the following table:

Country	UUI Transport Term	Providers
Australia	UUS Service 1	Telstra
Canada	UUS Service 1	AT&T/Canada Bell Canada
France	Mini-Message	France Telecom
Germany	(included in basic ISDN package)	Deutsche Telecom
Singapore	Not supported	
UK	Not supported	
USA	N-Quest Type 1 Service MA UUI Type 1 Service	MCI AT&T

NCR troubleshooting

You can use the following methods and resources to analyze NCR problems:

- The ISDN message trace information provided by the Message Sequence Tool (MST) for the ISDN trunk D-channel associated with NCR invocation attempts.
- To see the behavior of a particular VDN or vector, use the `list trace vdn` and `list trace vector` commands to check for NCR errors.
- To check for NCR errors using BSR processing:
 - Enter the **ch MST** switch administration terminal command to set the BSR and vector fields to Y.
 - Use the **enable mst** and the **list mist cont** switch administration terminal commands to see NCR-related MST trace data.
 - If you are logged in at the switch administration terminal (SAT) via the init login, enter **go tcm** followed by the **rdd:dp_mgr Bsr_applloc** command to see the total attempts, internal error, network error, successful redirection, and disconnect peg counts that are associated with BSR call interflows where NCR was invoked. These peg counts are free running and are only reset when the BSR Best Service Routing Application form is accessed using the **ch best SAT** command for a particular BSR application number.
- If NCR vector invocation by call vectoring has failed for previous calls, use the **display events** SAT command to obtain a real-time display of vector events that may be logged for call redirection attempts. The possible NCR vector events are as follows:
 - 68: Adjunct Route via NCT failed
 - 310 NCR: Invoke trunk not ISDN
 - 311 NCR: Bad NCR trunk admin
 - 312 NCR: No NCT PSTN service
 - 313 NCR: No NCT outgoing trk
 - 314 NCR: NCT outgo trk drop
 - 315 NCR: PSTN NCT invoke err
 - 316 NCR: PSTN NCT netwrk err
 - 317 NCR: Used NCT trk-to-trk
 - 318 NCR: No NCD PSTN service
 - 319 NCR: NCD invalid PSTN nmbr
 - 320 NCR: NCD call connect err

- 321 NCR: PSTN NCD invoke err
- 322 NCR: PSTN NCD netwrk err
- 323 NCR: PSTN NCD max redirs
- 324 NCR: PSTN NCD no disc
- 325 NCR: Internal system err

Other things to know about NCR failure scenarios

The following items may be relevant in case of failed NCR operations:

Failure to invoke NCT-type operations: - If an NCT-type operation is invoked and the PSTN switch rejects the NCT-type operation, the call will revert to a trunk-to-trunk transfer. In this case, the call is not lost but further vector processing stops with the failure to invoke the redirection operations.

Failure to invoke Network Call Deflection: - If NCD is invoked and the PSTN switch rejects the call, the call is disconnected from the redirecting communication server and no further vector processing occurs.

■ ■ ■ ■ ■ ■

Attendant Vectoring

The Attendant Vectoring feature enables a set of commands that can be used to write call vectors for calls to be routed in non-contact center environments. When Attendant Vectoring is enabled, all attendant-seeking or “dial 0” calls are processed using the call vectors, not the normal attendant console call routing.

The main reason to use Attendant Vectoring is to allow flexible routing of attendant-seeking calls. If users are instructed to dial an attendant VDN, the call could be answered by an attendant, but it may also be covered to the voice mailbox of a night station. Training users to understand these different call routing options is something you should consider before using Attendant Vectoring.

If you use Attendant Vectoring and night service to route calls to a voice mail system, you can also use the Automatic Message Waiting (AMW) feature to notify after-hours personnel that there are messages in the night service station mailbox by assigning an AMW lamp on one or more backup telephones. When personnel see that there are new messages, they can check those messages after hours and act upon them as needed.

This chapter includes the following sections:

- [Command set](#) on page 376
- [Overview](#) on page 383
- [Attendant Vectoring and attendant VDNs](#) on page 389
- [Attendant Vectoring and multiple queueing](#) on page 391
- [Considerations](#) on page 392

Command set

The following table lists the commands associated with Attendant Vectoring.

Attendant vectoring command set

Command category	Action taken	Command
Treatment		
	Play an announcement.	announcement
	Play a busy tone and stop vector processing.	busy
	Disconnect the call.	disconnect
	Delay with audible feedback of silence, ringback, system music, or alternate audio/music source.	wait-time
Routing		
	Queue the call to an attendant group.	queue-to attd-group
	Queue the call to an attendant extension.	queue-to attendant
	Queue the call to a hunt group.	queue-to hunt-group
	Route the call to a specific extension number.	route-to number
Branching/programming		
	Go to a vector step.	goto step
	Go to another vector.	goto vector
	Stop vector processing.	stop

Treatment commands

Attendant Vectoring allows use of several TREATMENT commands, including:

- [announcement command on page 377](#)
- [busy command on page 377](#)
- [disconnect command on page 377](#)
- [wait-time command](#) on page 377

The following sections detail the syntax that can be used for these commands and any information that is specific to their use in Attendant Vectoring.

announcement command

Syntax: announcement <extension>

The usage for the **announcement** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

busy command

Syntax: busy

The usage for the **busy** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

disconnect command

Syntax: disconnect after announcement <extension>

The usage for the **disconnect** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

wait-time command

Syntax: wait-time <time> secs hearing <silence, ringback, music>

This use of the **wait-time** command was slightly modified for attendant vector usage. The **i-silent** treatment choice was removed because it does not pertain to attendant vectoring. The **wait-time <seconds> secs hearing <extension> then <silence, ringback, music, continue>** command was left unchanged. No other changes or attendant specific considerations apply, so these commands work as they do in Basic Call Vectoring.

Routing commands

Attendant Vectoring allows use of several ROUTING commands, including:

- [queue-to attd-group command on page 378](#)
- [queue-to attendant command on page 379](#)
- [queue-to hunt-group command on page 379](#)
- [route-to number command](#) on page 380

Note:

A **wait-time 0 secs hearing ringback** step should be used to give immediate feedback to the caller. The **queue-to** command does not provide ringback until the call is actually ringing the attendant. The **wait-time** step should be implemented as the first vector step or as the step immediately before the **queue-to** step.

The following sections detail the syntax that can be used for these commands and any information that is specific to their use in Attendant Vectoring.

queue-to attd-group command

Syntax: queue-to attd-group

The **queue-to attd-group** vectoring command is available only for attendant vectors. If an attendant group call is redirected to vector processing that queues the call to the attendant group, the group to which the call gets queued is determined by the TN assignment that is associated with the call. If an attendant in the group is available to take the call, it is terminated to the attendant, not queued, and vector processing terminates.

Attendant group based on tenant number

When attendant group calls are redirected to vector processing and are programmed to queue to the attendant group, the attendant group is the group that is designated for the call's associated tenant number.

If an attendant group call is redirected to vector processing that queues the call to the attendant group, the call is placed in the queue using the priority that is assigned for the call. Attendant queue priorities are assigned on a system-wide basis, not on an individual partition basis.

Attendant group queue

Calls that are queued to the attendant group by way of attendant vector processing are queued with the system-administered priority for the call. If an attempt is made to queue the call and it fails, the vector event for queue failure is logged.

As with other vector queue commands, vector processing continues with the next step following the **queue-to attd-group** command regardless of success or failure. The **goto step if queue-fail** command is provided for handling failure conditions. Otherwise, on success, announcements or other feedback can be applied while the call is in queue. Other than the provision of caller feedback, attendant queue functionality is unchanged. If no commands follow a successful queue step, the call is left in the queue with no feedback. If no commands follow a failed queue step, the call is dropped. Anytime the end of vector processing is reached without the call being placed in queue, it is dropped and an event is logged.

queue-to attendant command

Syntax: queue-to attendant <extension>

The **queue-to attendant** vectoring command is available only for attendant vectors. If an attendant group call is redirected to vector processing that queues the call to an individual attendant, the attendant to whom the call gets queued must be a member of the attendant group that is indicated by the TN assignment associated with the call. If the attendant is available to take the call, the call is terminated to the attendant, not queued, and vector processing terminates.

The success of this command depends on having individual attendant access. These calls are queued based on the priority that is assigned to individual attendant access calls.

Individual attendant queue

Calls that are queued to the individual attendant via attendant vector processing are queued with the system-administered priority for individual attendant access calls. If the indicated attendant is not a member of the associated attendant group, the command is considered failed and vector processing continues with the next vector step. If an attempt is made to queue the call and it fails, a vector event is logged.

As with other vector queue commands, vector processing continues with the next step following the **queue-to attendant** command regardless of success or failure. The **goto step if queue-fail** command is provided for handling failure conditions. Otherwise, on success, announcements or other feedback can be applied while the call is in the queue. If no commands follow a successful queue step, the call is left in the queue with no feedback. If no commands follow a failed queue step, the call is dropped. Anytime the end of vector processing is reached without the call being placed in queue, the call is dropped and an event is logged.

queue-to hunt-group command

Syntax: queue-to hunt-group <#> pri <l (low), m (medium), h (high), t (top)>

This vectoring command is available only for attendant vectors. However, it is the functional equivalent of the split queueing command. As such, a call can be queued to up to three hunt groups. If an attendant group call is redirected to vector processing that

Attendant Vectoring

queues the call to a hunt group, the call is queued with the indicated priority. If a hunt group member is available to take the call, it is terminated to the member, not queued, and vector processing terminates. In order to use a hunt group in vectoring, it must be administered as a vector controlled group. However, it can be any type of hunt group, including UCD, ACD, and so forth.

Hunt group queue

Calls that are queued to a hunt group by way of attendant vector processing are queued with the indicated priority for the call. If an attempt is made to queue the call and it fails, a vector event is logged.

As with other vector queue commands, vector processing continues with the next step following the **queue-to hunt-group** command regardless of success or failure. The **goto step if queue-fail** command is provided for handling failure conditions. Otherwise, on success, announcements or other feedback can be applied while the call is in the queue. Since these hunt groups are required to be vector-controlled, announcements are provided by way of vectoring commands and hunt group-specific forced announcements do not apply. If no commands follow a successful queue step, the call is left in the queue with no feedback and vector processing terminates. If no commands follow a failed queue step, the call is dropped. Anytime the end of vector processing is reached without the call being placed in the queue, it is dropped.

route-to number command

Syntax: route-to <number> with cov <y, n> if <unconditionally>

This command is slightly modified from standard usage when used for attendant vectoring and **unconditionally** is the only available option. Existing choices allow routing with **if unconditionally**, **digit**, **name**, or **interflow-qpos**. Since digit comparison and interflow do not pertain to attendant vectoring, the options are not available. No other changes or attendant specific considerations apply. This command works as it does in standard usage. This command is provided by administration that is defined on the Console Parameters form. Therefore, call processing requirements are not needed.

Syntax: route-to ~r<number>

For incoming calls to the communication server, NCR can be activated using the route-to number vector step, where the number field in the vector step has a ~r in the first digit position. This allows for the route-to number vector step to interflow an incoming attendant call to another communication server over the PSTN since no trunks are tied up at the redirecting switch.

Branching/programming commands

Attendant Vectoring allows use of several branching/ programming commands, including:

- [goto step command on page 381](#)
- [goto vector command on page 382](#)
- [stop command](#) on page 382

The following sections detail the syntax that can be used for these commands and any information that is specific to their use in Attendant Vectoring.

goto step command

Syntax: goto step <step #> if time-of-day is <day><hour>:<minute> to <day><hour>:<minute>

This use of the **goto step** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

Syntax: goto step <step #> if <unconditionally>

This use of the **goto step** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

Syntax: goto step <step #> if queue-fail and goto vector <vector #> if queue-fail

These vectoring conditionals are available only for attendant vectors. Any time an attempt is made to queue a call and it cannot be queued, these commands can be used to direct vector processing. For attendant vectoring, there is no attempt to determine whether a call can be queued before attempting to do so. Therefore, one of these commands can be used to provide alternate processing when calls cannot be queued. Some examples of why calls can fail to queue are as follows, but this is not a complete list of the causes of failure:

- The queue is full
- The attendant group is in night service and there is no night console
- The individual attendant is not a member of the associated attendant group
- There were invalid multiple queue attempts. See [Attendant Vectoring and multiple queueing](#) on page 391 for more information

Failure to queue

The queue failure conditional is set following a queue command that fails to queue the call. It always indicates the result of the most recent queue command. If the failure conditional is set, vector processing is redirected as indicated.

goto vector command

Syntax: goto vector <vector #> if time-of-day is <day><hour>:<minute> to <day><hour>:<minute>

The use of the **goto step** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

Syntax: goto vector <vector #> if unconditionally

The use of the **goto step** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

stop command

The use of the **stop** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

Overview

The Attendant Vectoring capability enables you to use certain vector commands in a non-contact center environment. For example applications of Attendant Vectoring see [Call Vectoring applications](#) on page 65.

Attendant Vectoring is available in nondistributed attendant environments and distributed attendant environments for IAS and QSIG CAS.

Vector form

The following example shows the Call Vector form with the Attendant Vectoring field enabled.

Call Vector form

change vector xxx		CALL VECTOR		page 1 of 3	
Number: xxx		Name: _____			
Multimedia? n	Attendant Vectoring? y	Meet-me Conf? y		Lock? y	
Basic? n	EAS? n G3V4 Enhanced? n	ANI/II-Digits? n		ASAI Routing? n	
Prompting? n	LAI? n G3V4 Adv Route? n	CINFO? n	BSR? n	Holidays? n	
01	_____				
02	_____				
03	_____				
04	_____				
05	_____				
06	_____				
07	_____				
08	_____				
09	_____				
10	_____				
11	_____				

The Attendant Vectoring field appears only when Attendant Vectoring is enabled on the Customer Options form. If either Basic Vectoring or Prompting are set to y, the Attendant Vectoring field defaults to n. If Basic Vectoring, Prompting, and Enhanced Conference are not enabled on the Customer Options form, the Attendant Vectoring field defaults to y, and it cannot be changed to n. When the Attendant Vectoring field on the Call Vector form is set to y, that vector is used as an attendant vector.

To associate VDNs and vectors for attendant vectoring, a field on the VDN and the call vectoring forms indicates attendant vectoring. When attendant vectoring is indicated for VDNs and vectors, all contact center-associated fields (such as Skills and BSR) are not displayed.

Console Parameters form

When Attendant Vectoring is enabled, a field on the Console Parameters form identifies the assigned Attendant Vectoring VDN. The following examples show the Console Parameters forms.

Console Parameters form (Page 1)

change console-parameters	Page 1 of 4
CONSOLE PARAMETERS Attendant Group Name: OPERATOR COS: 1 COR: 1 Calls in Queue Warning: 1 Attendant Lockout? y Ext Alert Port (TAAS): 01A1216 CAS: none IAS (Branch)? n Night Service Act. Ext.: 195 IAS Att. access Code: IAS Tie Trunk Group No.: Backup Alerting? y Alternate FRL Station: DID-LDN Only to LDN Night Ext? n Attendant Vectoring VDN: 2000	

Console Parameters form (Page 2)

change console-parameters	Page 2 of 4
CONSOLE PARAMETERS TIMING Time Reminder on Hold (sec): 30 Return Call Timeout (sec): 30 Time in Queue Warning (sec): 15 INCOMING CALL REMINDERS No Answer Timeout (sec): 10 Alerting (sec): 10 Secondary Alert on Held Reminder Calls? y ABBREVIATED DIALING List1: List2: List3: system COMMON SHARED EXTENSIONS Starting Extension: 670 Count: 3	

Console Parameters form (Page 3)

change console-parameters	Page 3 of 4
CONSOLE PARAMETERS	
QUEUE PRIORITIES	
Emergency Access: 1 Assistance Call: 2 CO Call: 2 DID to Attendant: 2 Tie Call: 2 Redirected DID Call: 2 Redirected Call: 2 Return Call: 2 Serial Call: 2 Individual Attendant Access: 2 Interpositional: 2 VIP Wakeup Reminder Call: 2 Miscellaneous Call: 2	
Call-Type Ordering Within Priority Levels? n	

Console Parameters form (Page 4)

change console-parameters	Page 4 of 4
CONSOLE PARAMETERS	
ASSIGNED MEMBERS (Installed attendant consoles)	
Type	Grp TN
1: principal	1 1
2:	
3:	
4:	
5:	
6:	
7:	
8:	
9:	
10:	
11:	
12:	
13:	
14:	
15:	
16:	

TN assignments

Just as TN assignment determines the attendant group to which calls are terminated, the TN assignment also determines the VDN to which calls are redirected. If a VDN is administered, attendant group calls are redirected to the VDN rather than the attendant group. If a VDN is not assigned, calls terminate to the associated attendant group.

The selected TN for calls that are covered to an attendant group is the called user's TN, not the calling user's TN. When tenant partitioning is not administered, the system can have only one partition and attendant group. All attendant group calls are directed to attendant group 1. The form to administer TN associations is not accessible, so system-

wide console assignments apply. To follow the existing principals of this administration, the attendant vectoring VDN assignment appears on the Console Parameters form when partitioning is turned off. When it is turned on, the field is removed from the console form and the contents are automatically copied to TN 1.

Restrictions

No restrictions apply to attendant and nonattendant vectoring. For example, an attendant VDN can point to a nonattendant vector and vice versa. The same is true for vector commands.

For example, an attendant VDN that points to an attendant vector can have a vector step that routes to another nonattendant VDN. In this case, the call is removed from the queue and treated as though it just entered vector processing rather than as a continuation from one VDN to another. The reverse is also true if a nonattendant VDN is routed to an attendant VDN.

Attendant queue

If attendant vectoring results in putting a call in the attendant queue, it is placed in queue with the priority as administered on the console parameter form. There are no changes made to the attendant priority queue for attendant vectoring. Even when partitioning is turned on and multiple attendant groups exist, all queues have the same priority assignments. Priority queue administration also applies for calls to an individual attendant, by way of the assigned extension.

Hunt group queue

If attendant vectoring results in putting a call in the hunt group queue, it is placed in the queue with the indicated priority. To use this command, the hunt group must be vector controlled.

Redirecting calls to attendant VDNs

Because it is not possible to apply vector commands or specialized administration to specific types of attendant group calls, the following can not be redirected to the attendant VDN:

- Emergency Access. These calls are still sent directly to the attendant group. However, an attendant vectoring VDN can be assigned as the emergency access redirection extension.
- Attendant return calls. These calls are still sent to the original attendant if the original attendant is available or will be placed into the attendant group queue if no attendants are available.
- Serial calls. As with return calls, serial calls are still returned to the original attendant if the original attendant is available and are placed into the attendant queue if no attendants are available.
- VIP Wakeup calls. These reminder calls are still sent directly to the attendant group.
- Call Park time-out. These calls result in a conference (caller, principal, and attendant) and call vectoring does not allow conferenced calls to be vectored.
- Call Transfer time-out. These calls are controlled by the attendant return call timer and are processed as though they are attendant extended calls, in other words, actual attendant return calls.

Night service

There is no additional night service functionality provided for attendant vectoring. Night service routing can be provided using the existing night station service in conjunction with attendant vectoring. All existing night service rules remain in place (for example, night console service supersedes night station service, which supersedes TAAS). Attendant group calls are not redirected to attendant vectoring when the system is in night service unless a night console is available. Otherwise, they continue to be redirected to the applicable night service processing. To achieve attendant vectoring for calls when the system is in night service without a night console, the night station service extensions must be attendant vectoring VDN extensions.

Attendant VDNs

The fact that VDN extensions can be dialed directly or calls can be transferred to VDN extensions is unchanged for attendant VDNs.

Currently, VDN extensions can be assigned to:

Hunt group night destination - An attendant vectoring VDN can be assigned as a hunt group's night destination. Calls to that hunt group when it is in night service are redirected to the VDN and attendant vectoring applies. Hunt group night service does not apply if the hunt group is vector controlled. When vector? on the Hunt Group form is y, the night service destination field is removed from the form. In order for a hunt group to be available in vectoring for the **queue-to hunt-group** command, the hunt group must be

Attendant Vectoring

vector controlled. The hunt group in the **route-to** command could be in night service and the call would then terminate to the indicated night service destination. If the hunt group is accessed via the **queue-to hunt-group** command no night service applies.

LDN and trunk night destination - One or all trunk groups can be placed into night service and an attendant vectoring VDN can be assigned as the group's night service destination. If a night destination is assigned for LDN calls, it overrides (for LDN calls) the trunk group's night destination. Either of these destinations can be an attendant vectoring VDN. However, if tenant partitioning is administered and the trunk group night service destination is the attendant group, the call is redirected to the VDN that is associated with the trunk group's TN. If, instead, the night service destination is explicitly assigned to a particular attendant vectoring VDN, it may or may not be the VDN that would have resulted had the night destination been the attendant group.

Tenant night destination - For tenant partitioning, each partition can be assigned a night destination. When tenant partitioning is turned off, local attendant group calls are sent to the LDN night destination. When partitioning is turned on, local attendant seeking calls are sent to the partition's night destination.

Trunk group incoming destination - The incoming destination can be an attendant vectoring VDN except for RLT trunk groups. As in trunk group night service, an assigned incoming destination to an attendant vector could result in the call being sent to a different VDN than if the destination had been assigned to the attendant group.

Last coverage point in a coverage path - An attendant VDN can be assigned as a coverage point. If an Attendant VDN is assigned as a coverage point, it should be the last point in the coverage path.

Abbreviated dialing lists - Attendant VDNs can be assigned to abbreviated dialing lists.

Emergency access redirection - An attendant VDN can be assigned to emergency access redirection. When the attendant's emergency queue overflows or when the attendant group is in night service, all emergency calls are redirected to this VDN. Careful thought should be given to routing these calls off-switch.

QSIG CAS number for attendant group calls - An attendant VDN can be assigned to this number which determines where attendant group calls at a QSIG Branch are processed. This allows local vectoring at a Branch prior to routing the calls to the Main or elsewhere.

Auxiliary data for the following button assignments - In keeping with existing procedures, attendant VDNs will not be denied as auxiliary button data for:

- Facility busy indication. Visual indication of busy or idle status for the associated extension.

- Manual message waiting indication. Lights a message waiting lamp on the station that is associated with the button.
- Manual signaling. Rings the station that is associated with the button.
- Remote message waiting indicator. Message waiting status lamp automatically lights when a LWC message is stored in the system for the associated extension.

Attendant Vectoring and attendant VDNs

When Attendant Vectoring is administered and if an attendant VDN is assigned, attendant group calls are intercepted and sent through vector processing. The attendant VDN can be assigned on the Console Parameters form if tenant partitioning is turned off or on the Tenant form if partitioning is turned on. If an attendant VDN is assigned, the call is redirected to the VDN for vector processing. If a VDN is not assigned, the call is directed to the attendant group. Attendant group calls can only be redirected to attendant VDNs.

Intercept attendant group calls

When calls are placed to the attendant group or become attendant group calls for the reasons listed below, a check is made for an assigned attendant VDN. If an attendant VDN is assigned and either the system is not in night service or the system is in night service and a night console is available, the call is redirected to the VDN for subsequent vector processing. Otherwise, the call is treated with typical attendant group procedures.

The following occurrences can cause a call to become an attendant group call:

- Listed Directory Number (LDN)
- Attendant group in coverage path
- Attendant control of trunk group access
- Calls forwarded to attendant group
- Controlled Restriction
- Dialed attendant access code
- DID/Tie/ISDN intercept treatment
- DID time-out due to Unanswered DID Call Timer expiration
- DID busy treatment
- Security Violation Notification (SVN)
- Multi frequency signaling with attendant group as terminating destination

Attendant Vectoring

- CDR buffer full with attendant group as Call Record Handling Option
- Trunk incoming destination is attendant group
- Trunk group night service destination is attendant group
- Hunt group night service destination is attendant group
- Automatic Circuit Assurance (ACA) referral
- VDN routes to the attendant access code.

Vector override always applies to attendant VDNs. The `Allow VDN Override?` field will not be available so **yes** is assumed.

Allow override

VDN override always applies to attendant VDNs.

To provide the most flexibility possible, there are no restrictions placed on the vector that is assigned to a VDN. A nonattendant vector can be assigned to an attendant VDN and an attendant vector can be assigned to a nonattendant VDN. Obviously, doing so is not recommended. Assigning an attendant vector to a nonattendant VDN severely restricts processing for basic call vectoring since only limited vectoring commands are available in attendant vectors. Assigning a nonattendant vector to an attendant VDN also severely restricts attendant vectoring since the attendant-specific commands are not available in basic call vectoring. In addition, it removes basic call vectoring information from attendant VDNs. Also, there are no restrictions in vector chaining between attendant and nonattendant vectors (for example, using the **goto vector** or **route-to number** commands).

Interflow between vectors

When calls interflow from one type of vector processing to another, they are removed from the queue (if applicable) and treated as new calls to vectoring, not continuations of vectoring.

Tenant partitioning assignments apply to attendant VDNs the same as they do for nonattendant VDNs. Therefore, care must be taken that a VDN assignment on the partitioning form has a compatible TN number assigned to the VDN. For example, tenant partition 1 can be assigned a VDN which belongs to tenant partition 2 so long as partition 1's permissions allow access to partition 2. However, music source selection is based on the tenant partition where the VDN is assigned rather than the partition to which the VDN belongs.

Music source

When music is to be provided for attendant vectored calls, the source that is assigned to the tenant partition of the attendant seeking call is used rather than the source that is assigned to the partition of the VDN.

Attendant Vectoring and multiple queueing

Calls can exist in only one type of queue, which can be an attendant group, and individual attendant, or a hunt queue, and cannot be moved from one queue to another. For example, if a call is queued to the attendant group and a subsequent command attempts to queue the call to an individual attendant or hunt group, it is considered a failed queue attempt.

Restrict queueing to only one type of queue

Once a call is queued to the attendant group, individual attendant, or hunt group, any attempt to queue the call to another type of queue is considered a failed queue attempt.

Multiple attempts to queue to attendant groups or individual attendants are also considered failed queue attempts. For example, if a call is queued to attendant X and a subsequent command attempts to queue the call to attendant Y, the second queue command fails.

Allow multiple priority queueing within hunt queues

Since hunt group queueing is based on the indicated priority, multiple queue attempts are valid. There is no limitation on the number of attempts to queue to a particular hunt group so long as the command changes the priority at which a call is to be queued. For example, a call can be queued at low priority and subsequently requeued at medium and/or high priority. However, a second attempt to queue a call at the same priority for which it was previously queued is considered a failed queue attempt. Hunt group queueing is the functional equivalent to split queueing. As such, calls can be queued to a maximum of three different hunt groups at the same time.

Once a call is queued to a hunt group, any subsequent attempt to queue with a different priority results in the call being requeued with the new priority. Any subsequent attempt to queue with the same priority at which the call is already queued is considered a failed queue attempt.

Allow multiple hunt group queueing

A call can be queued to a maximum of three different hunt groups. Once this maximum is reached, any subsequent attempt to queue a call to a different hunt group is considered a failed queue attempt.

Considerations

The main consideration with Attendant Vectoring is training users to understand that calls placed to an attendant console may not always be answered by a live operator. If users are instructed to dial an attendant VDN, the call could be answered by an attendant, but it may also be covered to the voice mailbox of a night station. Training users to understand these different call routing options is something you should consider before using Attendant Vectoring.

If you use Attendant Vectoring and night service to route calls to a voice mail system, you can also use the Automatic Message Waiting feature to notify after-hours personnel that there are messages in the night service station mailbox by assigning an AMW lamp on one or more backup telephones. When personnel see that there are new messages, they can check those messages after hours and act upon them as needed.



Meet-me Conference

The Meet-me Conference feature allows you to set up a dial-in conference of up to six parties. The Meet-me Conference feature uses Call Vectoring to process the setup of the conference call.

Meet-me Conference can be optionally assigned to require an access code. If an access code is assigned, and if the vector is programmed to expect an access code, each user dialing in to the conference call must enter the correct access code to be added to the call.

The Meet-me Conference extension can be dialed by any internal or remote access users, and by external parties if the extension number is part of the customer's DID block.

This chapter includes the following sections:

- [Command set](#) on page 394
- [Administering Meet-me Conference](#) on page 398
- [Meet-me Conference call processing scenario](#) on page 403
- [Troubleshooting](#) on page 405

Command set

The following table lists the commands associated with Meet-me Conference.

Meet-me Conference command set

Command category	Action taken	Command
Information collection		
	Collect information from the calling party.	collect digits
Treatment		
	Play an announcement.	announcement
	Play a busy tone and stop vector processing.	busy
	Disconnect the call.	disconnect
	Delay with audible feedback of silence, ringback, system music, or alternate audio or music source.	wait-time
Routing		
	Route to the appropriate meet-me conference and stop vector processing.	route-to
Branching/Programming		
	Go to a vector step.	goto step
	Go to another vector.	goto vector
	Stop vector processing.	stop

Information collection commands

Meet-me Conference uses the following information collection commands:

- [collect command](#) on page 395

The following section details the syntax that can be used for this command and any information that is specific to the Meet-me Conference feature.

collect command

Syntax: collect 6 digits after announcement <extension>

When the Meet-me Conf field is enabled, the **collect** vector step has been modified to collect the next six digits and use those digits as the access code for a Meet-me Conference call. Though not required, the digits can be collected after a recorded announcement.

Treatment commands

Attendant Vectoring allows use of several treatment commands, including:

- [announcement command](#) on page 395
- [busy command](#) on page 395
- [disconnect command](#) on page 396
- [wait-time command](#) on page 396

The following sections detail the syntax that can be used for these commands and any information that is specific to the Meet-me Conference feature.

announcement command

Syntax: announcement <extension>

The usage for the **announcement** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

busy command

Syntax: busy

The usage for the **busy** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

disconnect command

Syntax: disconnect after announcement <extension>

The usage for the **disconnect** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

wait-time command

Syntax: wait-time <time> secs hearing <silence, ringback, music>

The usage for the **wait-time** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

Routing commands

Meet-me Conference uses the following routing command:

- [route-to meetme command](#) on page 396

The following section details the syntax that can be used for this command and any information that is specific to the Meet-me Conference feature.

route-to meetme command

Syntax: route-to meetme

The **route-to** vector step uses the condition **meetme** only for the Meet-me Conference feature. When successful, this condition adds the caller to the Meet-me Conference call and all parties on the call hear an “entry” tone to signify that another caller has joined the conference. This condition is valid when the caller has entered the correct access code and there are not already six parties on the call.

If the **route to meetme** step ever fails, vector processing stops and the caller hears busy tone.

Branching/programming commands

Meet-me Conference uses several branching/ programming commands, including:

- [goto step command](#) on page 397
- [stop command](#) on page 397

The following sections detail the syntax that can be used for these commands and any information that is specific to their use in Attendant Vectoring.

goto step command

Syntax: goto step <step #> if meet-me-idle

Syntax: goto step <step #> if meet-me-full

The **goto step** vector step has two conditions used for the Meet-me Conference feature:

- meet-me-idle
- meet-me-full

The **meet-me-idle** condition routes the first caller accessing a Meet-me Conference to the conference call. An announcement step saying they are the first party to access the call can be given to the caller.

The **meet-me-full** condition is used when the Meet-me Conference already has the maximum of six parties on the call.

Syntax: goto step <step #> if digits = meet-me-access

The **goto step** vector step supports the option, **meet-me access**, for the **digits** condition to verify that the access code is valid. If the access code entered by the caller equals the access code administered for the VDN, vector processing continues.

stop command

The use of the **stop** command is the same as in Basic Call Vectoring. See the Basic Call Vectoring chapter for details on using this command.

Administering Meet-me Conference

This section contains the following information:

- [Activating the Meet-me Conference feature](#) on page 398
- [Creating a Meet-me Conference VDN](#) on page 399
- [Creating a Meet-me Conference vector](#) on page 400
- [Interactions](#) on page 401
- [Security issues](#) on page 402
- [Capacity issues](#) on page 402

Activating the Meet-me Conference feature

Meet-me Conference is available for all switch models that support the R11 call processing software.

To enable the Meet-me Conference feature:

- The G3 Version field of the Customer Options screen must be set to V11 or later.
- The Enhanced Conferencing field of the Customer Options screen must be enabled. This feature has an RTU cost and must be enabled through the License File process.

Creating a Meet-me Conference VDN

To create a Meet-me Conference VDN (using example VDN 36090):

1. Enter:

add vdn 36090

The system displays the VECTOR DIRECTORY NUMBER screen:

add vdn 36090	Page 1 of 2	SPE A
VECTOR DIRECTORY NUMBER		
Extension: 36090		
Name: Meet-me VDN		
Vector Number: 90		
Meet-me Conference? y		
COR: 1		
TN: 1		

2. Enter a name, a vector number, and enter **y** in the Meet-me Conference field.
3. Press **NEXTPAGE** to display page 2.

The system displays page 2 of the VECTOR DIRECTORY NUMBER screen:

add vdn 36090	Page 2 of 2	SPE A
VECTOR DIRECTORY NUMBER		
MEET-ME CONFERENCE PARAMETERS		
Conference Access Code: 937821		
Conference Controller: 80378		

4. Enter a conference access code. If you do not want an access code, leave the field blank. Once an access code is assigned, an asterisk displays in this field for subsequent change, display, or remove operations by all users except the "init" superuser login.



SECURITY ALERT:

You should always assign an access code to a Meet-me Conference VDN.

5. Enter a conference controller extension. If an extension number is entered, a user at that extension can change the access code for the Meet-me Conference VDN using a feature access code. If this field is blank, only a station user that is assigned with console permissions can change the access code for the Meet-me Conference VDN using a feature access code. In addition, remote access users can change a Meet-me Conference access code using the feature access code.
6. Press **ENTER** to submit the VDN.

Creating a Meet-me Conference vector

To create a Meet-me Conference vector (using example vector number 90):

1. Enter:

change vector 90

The system displays the CALL VECTOR screen.

2. Enter **y** in the Meet -me Conf field. This designates the vector as a Meet-me Conference vector.

3. Create a vector as shown in the following example:

change vector 90	Page 1 of 3	SPE A
CALL VECTOR		
Number: 90 Name: Meet-me Vec		
Multimedia? n	Attendant Vectoring? n	Meet-me Conf? y Lock? y
Basic? y	EAS? n G3V4 Enhanced? n	ANI/II-Digits? n ASAI Routing? n
Prompting? y	LAI? n G3V4 Adv Route? n	CINFO? n BSR? n Holidays? n
01 collect 6 digits after announcement 12340		
02 goto step 6 if digits = meet-me-access		
03 collect 6 digits after announcement 12341		
04 goto step 6 if digits = meet-me-access		
05 disconnect after announcement 12342		
06 goto step 11 if meet-me-idle		
07 goto step 14 if meet-me-full		
08 announcement 12343		
09 route-to meetme		
10 stop		
11 announcement 12344		

change vector 90	Page 2 of 3	SPE A
CALL VECTOR		
12 route-to meetme		
13 stop		
14 disconnect after announcement 12345		
15 stop		
16		
17		
18		
19		
20		
21		
22		

4. Press **ENTER** to submit the vector.

Interactions

The following are administration interactions for Meet-me Conference.

General

Both Attendant Vectoring and Meet-me Conference cannot be enabled at the same time.

If Enhanced Conferencing is enabled, but no other vectoring customer options are enabled, only Meet-me Conference vectors can be assigned.

A non Meet-me Conference vector cannot be assigned to a Meet-me Conference VDN and a Meet-me Conference vector cannot be assigned to a non Meet-me Conference VDN.

There will be no restrictions in vector chaining between Meet-me Conference and non Meet-me Conference vectors (for example, using the **goto vector** or **route-to number** commands). When calls interflow from one type of vector processing to another, they will be removed from any queue (if applicable) and treated as new calls to vectoring, not a continuation of vectoring.

Call Detail Recording

As parties join a Meet-me Conference, a call record is created if required by system administration. If a record is required, the called party will be the Meet-me Conference VDN number and the duration will be the length of time that the party was included in the call. There will be an individual record for each party that will be output when the party drops from the call. One option that will record all calls to Meet-me Conference VDNs is to activate the Intra-switch CDR feature and populate all the Meet-me Conference VDN numbers in the system.

If the Intra-switch CDR feature is used with the Meet-me Conference VDNs, the condition code should be set to "C" for all call records as is done with traditional conference calls when Intra-switch CDR is active.

If Intra-switch CDR feature is not active for Meet-me Conference VDNs, the creation and contents of call records will depend on the trunk group translations for external callers to the Meet-me Conference. Internal callers to the Meet-me Conference will not generate any records if the Intra-switch CDR feature is not active for either the Meet-me Conference VDN or the calling extension.

Changing vector types

To change a Meet-me Conference vector to a non Meet-me Conference vector, the administrator must first remove all vector steps. To change a non Meet-me Conference vector to a Meet-me Conference vector, the administrator must first remove all vector steps. If either of these conditions exist, a warning message displays that states "VDNs currently assigned to this vector may not operate as expected." The next time the

Meet-me Conference

administrator tries to submit a change to the Meet-me Conference VDN, they would be forced to assign the VDN to a Meet-me Conference vector.

Direct Inward Dialing (DID)

If the VDN extension is part of the customer's DID block, external users will be able to access the conference VDN. If the VDN extension is not part of the customer's DID block, only internal callers on the customer's network (including DCS or QSIG) or remote access callers can access the conference VDN.

Disabling Enhanced Conferencing

If Meet-me Conference VDNs are assigned when disabling the Enhanced Conferencing option, the change is not allowed and the message "Must first remove all Meet-me Conf VDNs and vectors" is displayed. The administrator must remove those VDNs and vectors before the option can be disabled.

Removing stations

A station that is administered as a controlling station for a Meet-me Conference VDN cannot be removed without first removing the assignment on the VDN. The message "Must first remove as conference controller on VDN form" is displayed.

Security issues

The Meet-me Conference feature is a potential security problem. If Meet-me Conference VDNs are assigned without access codes, hackers could tie up Meet-me Conference facilities, keeping others from conducting legitimate business, and could potentially access the switch and use the switch to make unauthorized calls. Therefore, we should recommend that all Meet-me Conference VDNs have access codes that are known only to administrators and users on a need to know basis. We should also recommend that access codes be changed on a regular basis to reduce the risk of unauthorized access to the switch.

If a user tries to change the access code of a Meet-me Conference and is unsuccessful, or if a user tries to access a Meet-me Conference and uses an invalid access code, a meet-me event is logged. See [Tracking unexpected events](#) on page 589.

Capacity issues

Meet-me Conference calls count towards the maximum number of 3-way and 6-way conference calls.

Users cannot add more parties to a conference call once the system maximum is reached.

For Category A, the number of Meet-me Conference VDNs is a subset of the total number of VDNs allowed in the system.

For Category B, the total number of VDNs and vectors is doubled from the normal limit if both Call Vectoring and Enhanced Conferencing are enabled. However, the maximum number of VDNs and vectors available for contact center applications is unchanged.

Meet-me Conference call processing scenario

Joe Davis has a sales review scheduled with four associates located in different cities. He has reserved Meet-me Conference telephone number 865-253-6090. In switch administration, this number has been assigned to vector 90. See the following screen.

add vdn 36090	Page 1 of 2 SPE A
VECTOR DIRECTORY NUMBER	
Extension: 36090	
Name: Meet-me VDN	
Vector Number: 90	
Meet-me Conference? y	
COR: 1	
TN: 1	

VDN 36090 is administered with an access code of 835944. See the following screen.

add vdn 36090	Page 2 of 2 SPE A
VECTOR DIRECTORY NUMBER	
MEET-ME CONFERENCE PARAMETERS	
Conference Access Code: 835944	
Conference Controller:	

Meet-me Conference

When each associate calls the Meet-me Conference telephone number, the following vector processing occurs:

change vector 90				Page 1 of 3		SPE A	
CALL VECTOR							
Number: 90		Name: Meet-me Vec					
		Attendant Vectoring? n		Meet-me Conf? y		Lock? y	
Basic? y		EAS? n	G3V4 Enhanced? n	ANI/II-Digits? n		ASAI Routing? n	
Prompting? y		LAI? n	G3V4 Adv Route? n	CINFO? n	BSR? n	Holidays? n	
01 collect		6	digits after announcement		12340		
02 goto		step 6	if digits		=	meet-me-access	
03 collect		6	digits after announcement		12341		
04 goto		step 6	if digits		=	meet-me-access	
05 disconnect		after announcement 12342					
06 goto		step 11	if meet-me-idle				
07 goto		step 14	if meet-me-full				
08 announcement		12343					
09 route-to		meetme					
10 stop							
11 announcement		12344					

change vector 90		CALL VECTOR	Page	2 of	3	SPE A
12	route-to	meetme				
13	stop					
14	disconnect	after announcement 12345				
15	stop					
16						
17						
18						
19						
20						
21						
22						

Each caller hears announcement 12340, which says something similar to “Welcome to the Meet-me Conferencing service. Enter your conference access code.” Each caller enters the access code 835944.

The **collect** vector step 1 collects the access code digits. If the access code is valid, the vector processing continues with vector step 6. If the access code is invalid, the vector processing continues with vector step 3, which plays announcement 12341.

Announcement 12341 says something similar to “This access code is invalid. Please enter the access code again.” If the caller enters the wrong access code again, the vector processing continues with vector step 5, which plays announcement 12342.

Announcement 12342 says something similar to “This access code is invalid. Please contact the conference call coordinator to make sure you have the correct conference telephone number and access code. Good-bye.”

Vector step 6 is only valid for the first caller into the Meet-me Conference. The `meet-me-idle` condition routes the first caller to announcement 12344 (vector step 11). The recorded announcement says something similar to “You are the first party to join the call.” The caller is then routed to the Meet-me Conference call by vector step 12 and vector processing stops.

Vector step 7 is used when the Meet-me Conference already has the maximum of six parties on the call. The `meet-me-full` condition disconnects the caller after playing announcement 12345 (vector step 14). The recorded announcement says something similar to “This Meet-me Conference is filled to capacity. Please contact the conference call coordinator for assistance. Good-bye.”

If a caller enters the correct access code, is not the first caller, and the conference call is not full, vector processing continues with vector step 8, which plays announcement 12343. The announcement says something similar to “Your conference call is already in progress.” The caller is then routed to the Meet-me Conference call by vector step 9 and vector processing stops. As each caller enters the conference call, all parties on the call will hear an “entry” tone.

When the conference call is over and callers drop out of the conference call, any remaining parties on the call will hear an “exit” tone.

Troubleshooting

This section describes common problems and possible resolutions for the Meet-Me Conference feature. Topics described in this section include:

- [Conference call drops](#) on page 405
- [Sound volume is too low](#) on page 406

Conference call drops

The conference call drops abruptly for no apparent reason.

Possible reason - The Vector Disconnect Timer on the System-Parameters Features screen is set to a value that does is shorter than the duration of the Meet-Me Conference session.

Solution - Increase the Vector Disconnect Timer value.

Sound volume is too low

Voice volume levels for some conference participants is too low.

Possible reason - The affected conference participants connect through international trunks in which CO loss plans are set for too much loss.

Solution - In the System-Parameters Country Options form, go to Tone & Country Loss Plans (page 3) and change the values specified in the End-to-End total loss (dB) in a n-party conference field.

■ ■ ■ ■ ■ ■

Expert Agent Selection

This section describes EAS, discusses EAS upgrades and provides examples that show how EAS is implemented. This section includes the following topics:

- [What is Expert Agent Selection \(EAS\)?](#) on page 407
- [EAS benefits](#) on page 408
- [EAS considerations](#) on page 410
- [Expert Agent Selection \(EAS\) terminology](#) on page 411
- [EAS-PHD — 20 skills/16 skill levels](#) on page 412
- [Switch administration for the EAS feature](#) on page 413
- [Identifying caller needs](#) on page 419
- [Functions and examples](#) on page 424
- [EAS feature interactions](#) on page 443
- [EAS adjunct interactions](#) on page 448
- [Upgrading to the EAS environment](#) on page 452

What is Expert Agent Selection (EAS)?

Expert Agent Selection (EAS) helps contact center managers to provide the best possible telephone service to callers by matching the needs of the callers with the skills or talents of the agents. Caller needs and agent skills are matched using Call Vectoring. All the Call Vectoring features described in this guide can be used with EAS.

Matching the call to an agent with the appropriate skills reduces transfers and call-holding time. Accordingly, customer satisfaction is increased. Also, since an entire agent group need not be trained at the same time for the same skills, employee satisfaction is increased.

In addition to matching the skills that are required for a call to an agent with one of those skills, EAS provides other capabilities:

- Logical Agent associates hardware (the telephone) with an agent only when the agent is logged in. While the agent is logged in, calls to the Agent Login ID are directed to the agent. See [Logical Agent capability](#) on page 431 for more details.
- Direct Agent Calling allows a user to call a particular agent and have the call treated as an ACD call. See [Direct Agent calling](#) on page 421 for more details.

Most EAS administration can be completed before you activate it, thus minimizing the down time for upgrading to EAS.

EAS requires ACD and Call Vectoring. All of the existing ACD features and Call Vectoring capabilities can be used within EAS applications.

As with Call Vectoring calls, EAS calls are directed to VDNs, which in turn point to vectors. However, unlike Basic Call Vectoring, skills can be assigned in EAS to VDNs, or they can be associated with vector steps to represent caller needs. As for Call Vectoring calls, EAS calls are queued to ACD hunt groups. However, with EAS enabled, ACD hunt groups are called “skill hunt groups” instead of splits.

Skill hunt groups deliver calls to EAS agents. Agent skills are administered on the Agent LoginID form.

Note:

These are the same login IDs that are used by Avaya Call Management System (CMS) and Basic Call Management System (BCMS).

Logical Agent implies that telephones are no longer preassigned to hunt groups. When the agent logs, the telephone becomes associated with all of the skill hunt groups that are assigned to that Agent Login ID.

With EAS optioned and enabled, ACD calls can also be directed to a particular agent, instead of to the skill hunt group, by using the Direct Agent Calling feature. The Direct Agent call is treated like an ACD call, but it waits in queue for a specific agent to become available. Direct Agent calls have a higher priority than skill hunt group calls.

EAS benefits

Because you can match caller needs to an agent who has the appropriate skills to handle the call, your contact center can achieve the following:

- Maximum profitability.
- Greater customer satisfaction because the caller reaches, on the first call, an agent with the necessary skills to handle the call.
- Greater responsiveness to customer needs because you can base call distribution on either skill level or greatest need.

- Improved agent performance and satisfaction because agents handle calls they are most familiar and most comfortable with.
- Improved agent performance because supervisors have the option to have agents handle calls based on either skill level or greatest need. For agents, it offers an opportunity to learn new skills.
- Ability to track the number of calls that are handled by particular skills from the VDN perspective. You can see whether vectors are performing as expected.

Skill-based call distribution

With EAS, call distribution is based on agent skills. Caller needs are determined by the VDN called or by voice prompting.

An agent who has at least one of the skills that a caller requires is selected to handle the call. You assign skills and skill levels to agents to determine which types of calls go to which agents and to determine the order in which agents serve waiting calls.

Greatest need call distribution

With EAS, you have the option of basing call distribution on greatest need instead of skill level. You can distribute the highest-priority, oldest call waiting to an agent with an appropriate skill, even if that skill is not the agent's highest-priority skill.

Percent allocation call distribution

Percent allocation enables you to assign a percentage of an agent's time to each of the agent's assigned skills, to comprise a total of 100% of the agent's staffed time. Percent allocation then selects the call that is the best match for an agent's administered skill percentages.

Percent allocation is available with Avaya Business Advocate. For more information, see *Avaya Business Advocate User Guide*, 585-210-711.

ACD queuing and vector commands

ACD queuing and the vector commands **queue to skill** and **check skill** are used to route a call to an agent with the appropriate skill to handle the call.

EAS considerations

When you implement the EAS feature, be aware of the following considerations:

- With EAS, skill hunt groups replace splits. You cannot administer both skills and splits on the same switch. All ACD hunt groups must be administered as either splits or skills. If EAS is optioned, all ACD hunt groups are skill hunt groups.
- With EAS, all skill hunt groups except for AUDIX hunt groups must be vector controlled.
- With EAS, non-ACD hunt groups are allowed, but they cannot be vector controlled.
- Agent Login IDs are extensions in the dial plan, and they decrease the total number of stations that can be administered.
- With EAS, agents have a different login procedure and a single set of work mode buttons, regardless of the number of skills that are assigned to the agents.
- Skill hunt groups can distribute a call to the most-idle agent (UCD) or to the most-idle agent with the highest skill level for that skill (EAD). In either of these cases, the call can route to the most-idle agent for the specified skill, or to the most-idle agent in all of the skills. Direct Department Call (DDC) distribution is not allowed for skill hunt groups.
- With either UCD or EAD distribution, the system can be administered to deliver calls based either on greatest need or agent skill level. This is the Call Handling Preference that is administered on the Agent LoginID form. When calls are in the queue, greatest need delivers the highest priority oldest call waiting for any of the agent's skills. With skill level administration, the system delivers the highest priority oldest call waiting for the agent's highest level skill with calls in the queue.
- The EAS-PHD customer option adds additional capabilities to the basic EAS capabilities.
 - It increases the number of skills an agent can log in to from 4 to 20
 - It increases the number of agent skill priority levels from 2 to 16

For information on converting a contact center to EAS, see [Converting a contact center to EAS](#) on page 699.

Expert Agent Selection (EAS) terminology

The following terms have special significance in the EAS environment.

EAS terminology

Agent skill	The type of call that a particular agent can handle. With EAS, an agent can be assigned up to four skills each, with a primary (level 1) or secondary (level 2) skill level. With EAS-PHD, an agent can be assigned as many as 20 skills.
Caller needs	The reasons why customers call your contact center. Caller needs are determined by the VDN number that the caller dialed, by Call Prompting, or by Automatic Number Identification (ANI) database lookup. You define caller requirements in the vector in order to route calls to an ACD agent with particular skills to match the needs of the caller. These caller needs, which translate to skills, become active for an ACD call whenever a queue to the main skill or check backup skill vector command is executed and the threshold condition is met.
Skill	A specific caller or business need of your contact center. You define your skills based on the needs of your customers and your contact center. You specify skills by skill numbers, which are assigned to agents and are referenced in vectors to match caller needs with an agent who is skilled to handle those needs. When configuring your contact center for skills, a particular skill number always has the same meaning, whether it is an agent skill, VDN skill, or skill hunt group.
Skill hunt group	Calls are routed to specific skill hunt groups that are usually based on caller needs. Agents are not assigned to a skill group; instead, they are assigned specific skills that become active when they log in.
Skill level	For each agent skill, a skill level may be assigned. With EAS-PHD, skill levels can range from 1 to 16, with 1 being the highest skill level (also known as the highest-priority skill). Without EAS-PHD, skill levels may be defined as primary (level 1) or secondary (level 2), with the primary being the highest-priority skill. When calls are queued for more than one of the agent's skills and the agent's call-handling preference is by skill level, the agent receives the oldest call waiting for the agent's highest level skill. If an agent's call-handling preference is by greatest need, then the agent receives the highest-priority, oldest call waiting for any of that agent's skills, regardless of skill level.
Top agent	An agent in a given skill who has the skill assigned as top skill.

EAS terminology (continued)

Top skill	For EAS-PHD, an agent's first-administered, highest-priority skill. For EAS, an agent's first-administered primary skill (or first-administered secondary skill if the agent has no primary skill assigned). With call-handling preference by skill level, this is the skill for which the agent is most likely to receive a call.
VDN skill preference	Up to three skills can be assigned to a VDN. Calls use VDN skills for routing based on the preferences that you specify in the vector. VDN skill preferences are referred to in the vector as 1st, 2nd, and 3rd.

EAS-PHD — 20 skills/16 skill levels

EAS-PHD is a feature that allows an agent to be assigned to as many as 20 skills. For each skill, one of the 16 skill levels can be assigned, with 1 being the highest skill level and 16 being the lowest skill level.

If calls are waiting for some of the agent's skills and the agent's call-handling preference is by skill level, the agent receives the call that requires the agent's highest-priority skill. For an agent, the first-administered, highest-priority skill is known as the agent's "top skill." The top skill represents the skill for which the agent is most likely to receive a call.

If an agent's call-handling preference is by greatest need, the top skill is not useful, because the agent receives the highest-priority, oldest call waiting that requires any of the agent's skills, regardless of skill level.

Switch administration for the EAS feature

Before activating EAS in your contact center, you need to complete the appropriate forms on your Avaya communication server as described in the following sections.

This section includes the following topics:

- [EAS administration forms](#) on page 413
- [Other forms that support EAS Agent LoginID](#) on page 414

EAS administration forms

The following table lists the forms used to administer EAS. For more information about the forms listed below, see *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784.

EAS administration forms

Form	Use
System-Parameters Customer-Options	The Expert Agent Selection Enabled? field on this form changes to y when EAS is installed. If you purchased EAS-PHD, the Expert Agent Selection-Preference Handling Distribution (EAS-PHD) Enabled? field changes to y.
Dial plan	Use this form to change the dial plan. It is recommended that login IDs start with a unique digit in the dial plan (for example, 5111, 5123, 5432). It is preferable to dedicate a block of numbers for login IDs. If your login IDs do not have the same first digit and the login IDs are four digits long, consider changing to a 5-digit number for login IDs. This may require a modification to the CMS login ID if the current ID is not a valid extension number or cannot be made available in the switch dial plan. Agent login IDs must be different from assigned telephone extensions.
VDN	Use this form to add or change VDNs and to designate skill preferences.
Vector	Use this form to change vectors.
Hunt Group	Use this form to add or change skill hunt groups. The Skill?, ACD? and Vector? fields must be all y or all n. Hunt group types should be either UCD or EAD. You cannot administer agents on this form when EAS is enabled.

EAS administration forms (continued)

Form	Use
Agent Login ID	Use this form to add or change agent login IDs and skill assignments. If you add or change skills on the switch, the agent must log out and then log in again before the changes take effect. You must use the Agent Login ID form to select call-handling preferences for agent login IDs. The Call Handling Preference field must be set to either skill level or greatest need. The default is skill level. You also may enter a direct agent skill number in the Direct Agent Skill field. The skill entered in this field must be one of the agent's administered skills or the field is left blank. If no direct agent skill is administered and the agent receives a direct agent call, the call is delivered to the agent's first-administered, highest-level skill.
Station	Only a single set of work mode buttons is needed with EAS. Use this form to remove additional sets of buttons if you are administering agents in multiple splits.

Other forms that support EAS Agent LoginID

The following table lists switch administration forms that can have an EAS Agent loginID administered on them.

EAS loginID table

Feature	Accepts loginID?
Abbreviated Dialing Buttons	
7103A	Yes
Enhanced	Yes
Group	Yes
Personal	Yes
System	Yes
Agent-LoginID	
Port Extension	No
Announcements	No
Buttons	
abrdg_app	No

EAS loginID table (continued)

Feature	Accepts loginID?
aut-msg-wt	Yes
brdg_app	No
busy-ind	Yes
data_ext	No
man_msg_wt	No
q-calls	No
q-time	No
signal	No

EAS loginID table (continued)

Feature	Accepts loginID?
Call Processing	
Auto-Callback	No
Call Forward from Agent Login ID	No
Call Forward to Agent Login ID	Yes
Call Park	Yes
Hundreds group	No
LWC Retriever gets lagt msgs	Yes
Service observ Agent Login ID	Yes
CDR Parameters	
Primary Extension	No
Secondary Extension	No
Code-Calling	Yes
Communication Link Form	
Communication Link Digits	No
Console Parameters	
CAS-backup ext	No
IAS Att Access Code	No
Coverage Groups	
Answer Group Member	No
Path	Yes
Measured Principals	
Coverage Measurement	No
Feature-Related Parameters	
ACA-referral dest.	No
ACA - long holding	No

EAS loginID table (continued)

Feature	Accepts loginID?
ACA - short holding	No
Controlled out restriction	No
Controlled Terminal	No
Controlled Stn-to-Stn	No
DAA Extension	No
DID/Tie/ISDN announcement	No
Emergency Access Redirection	No
CDR output extension	No
SVN referral destination (announcement)	Yes
System LWC retriever	No
System Printer	No
Hospitality Parameters	
Journal Printer	No
LWC wakeup	No
PMS ext	No
PMS log	No
Routing on Voice Synthesis	No
Hunt Group Form	
Announcement extension	No
ASAI link	No
AUDIX extension	No
Calls Warning extension	No
Member	No
Night Service	No
Supervisor	Yes
Time Warning extension	No

EAS loginID table (continued)

Feature	Accepts loginID?
Intercom Group Member	No
Intra-switch CDR	Yes
Listed Directory Number	
Member	No
Night Destination	Yes
Malicious Call Trace	
MCT Member	No
Permanent Switched Calls	No
Personal CO Line	No
Pickup Group Member	No
Remote Access Extension	No
Term Extension Group Member	No
Trunk Group	
Night Service	Yes
Incoming Destination	Yes
Member Night Service	Yes
Vector Administration	
adjunct extension	No
announcement	No
messaging	Yes
route-to	Yes

Identifying caller needs

Caller needs for a particular call can be identified by any of the following methods:

- Interpreting information that is passed from the network in the form of DNIS digits or ISDN messages.
- Processing Call Prompting digits, digits entered at a Voice Response Unit (VRU), or CINFO digits that are forwarded by the network.
- Using ASAI or a VRU such as Avaya Interactive Response in a host database lookup.

To show how a contact center manager might match caller needs and agent skills (which can be viewed as capabilities needed from the caller's perspective), assume that a contact center receives inbound calls from automobile club members who speak Spanish or English. The callers in this case either need to plan a vacation route or have trouble with their car and are calling for assistance. The following table provides example associations between caller needs and agent capabilities.

Example of caller need-to-agent skill matching

Caller need	Capability needed
Tourist information	Knowledge of the region
To speak Spanish	Bilingual
Emergency assistance	Handle stressful callers
Tow truck	Access to dispatch systems)

The following list looks at the contact center manager's strategy in matching the caller needs to the capabilities of the agent:

- Tourist information/knowledge of the region
Travelers may need information while traveling or regarding a future trip. All assigned agents can provide this information.
- To speak Spanish/bilingual
Separate numbers are published and used as part of Spanish membership information, or Call Prompting is used after a general number is dialed.
- Emergency assistance/handle stressful callers
Separate emergency road service numbers are published and used, or Call Prompting is used after a general number is dialed. For example, a number is provided for towing.

Note that the contact center chose to implement Call Prompting to identify Spanish-speaking callers and callers who require emergency assistance. This allows for quicker and more specialized treatment and therefore better satisfies the caller's needs.

In addition, some customers might prefer to speak to the agent that he or she spoke to on a previous call. To accommodate this request, a contact center manager can implement Direct Inward Dialing (DID) at the contact center. Also, direct agent calling can be used to direct a call to a specific agent.

The following sections explain further how caller needs are identified.

DNIS/ISDN called party

A set of DNIS digits can be interpreted as a VDN. The following table presents four services and their corresponding telephone number including DNIS digits that might be provided to the caller.

Examples of services and corresponding DNIS digits

Service	Telephone number	Corresponding DNIS
Emergency road service (English)	800-765-1111	6001
Emergency road service (Spanish)	800-765-2222	6002
Route planning (English)	800-765-3333	6003
Route planning (Spanish)	800-765-4444	6004
General (Call Prompting)	800-765-5555	6005

Note:

DNIS digits must be extensions that are reflected in the dial plan.

Call Prompting/VRU Digits/CINFO digits

The Call Prompting/VRU/CINFO digits are entered by the caller in response to any recorded question about a caller's needs, or in the case of CINFO ced or cdpd digits, are provided by the contact center host computer. For example, a hotline for a product may request that a product code be entered, or a travel service may request a 2-digit state code to indicate the state to which the caller would like to travel. The following table provides a

prompt that encourages the caller to enter the appropriate Call Prompting digit for the needed service from the automobile club.

Example of a prompt for entering Call Prompting digits

For emergency road service, dial 1.
Para asistencia con su automovil, marque el dos.
For travel route directions, dial 3.
Para informacion sobre rutas, marque el cuatro.”

Host database lookup

A host database lookup uses DNIS and ANI (calling party's number) to determine what skills are required or even the agent desired. For example, the database may show that the caller speaks Spanish and has been working with Agent 1367. To access host information, either ASAI or a VRU in conjunction with a **converse-on skill** step is used.

Direct Agent calling

Direct agent calling allows a call to a specific ACD agent to be treated as an ACD call. Zip-tone answer, ACW, and other ACD features can be used with Direct Agent calls.

If an agent is logged in but is not available, the call queues for that agent. If the agent is not logged in, the call follows the agent's coverage path.

EAS Direct Agent calling is accomplished by dialing the login with the proper class of restriction (COR) settings. Both the caller (that is, trunk, VND, or station) and the agent must have the Direct Agent COR settings.

Customers might call an agent directly using Direct Inward Dialing (DID) if the agent's login ID is a published number, or customers might dial a toll-free number and be prompted for the agent's login ID extension. Vectors can be designed to handle the Call Prompting function.

Direct agent calling

Note:

Direct Agent calling requires CallVisor Adjunct-Switch Application Interface (ASAI) or EAS. Both originating and called party Class of Restrictions (CORs) must be set to allow Direct Agent Dialing.

Direct Agent (DA) Calling is an EAS feature that lets a caller:

- Contact a specific agent instead of a skill hunt group
- Queue for the agent if the agent is on a call
- Use Agent LoginID for callbacks and transfers
- Hear system wide Direct Agent delay announcement while holding
- Follow the agent's coverage path, if the call is not answered immediately.

Advantages of Direct Agent calling

DA calls have two important advantages:

- They reduce the need to transfer callers who want or need to speak with a certain agent, such as the agent spoken to on a previous call.
- They provide more accurate reporting of calls, because CMS counts DA calls as ACD calls. In this way, agents get proper credit for taking them. By comparison, calls transferred to an agent are not counted as ACD calls.

How Direct Agent calling works

Direct Agent calling works as described below:

- Callers can dial the agent's Login ID as part of a DID or from auto attendant as an extension number.
- DA calls have a special ringing sound, regardless of the agent's work state, and the current work mode button on the agent's telephone flashes.
- If the agent is on a call, he or she can use multiple call handling to decide whether to put the call on hold in order to take the DA call.
- If the agent is available, the call is delivered according to the answering and ringing options.
- If the agent is not available, or if multiple call handling is not used, call coverage or RONA routes the call to backup.
- While on DA calls, agents are unavailable for subsequent ACD calls. If the agent logs off by unplugging the headset, he or she can still answer a DA call in the queue by logging back in and becoming available. Agents who have DA calls waiting are not allowed to log off using a FAC. If the agent is in Manual In mode or pushes the After Call Work (ACW) button while on a direct-agent call, the agent goes to ACW mode.

Generally, direct-agent calls are queued and served in first-in, first-out order before other calls, including priority calls. However, if you administer a skill level for Call Handling Preference, direct-agent calls must be assigned the highest priority for them to be delivered before other ACD calls. Otherwise, calls with a higher skill level are distributed before direct-agent calls.

Note that you can use Multiple Call Handling (MCH) to allow agents to answer a direct agent call with another ACD call active.

Direct-agent calls follow the receiving agent's coverage and call forwarding paths, if these features are administered. Once a call goes to coverage or is forwarded, the call is no longer treated as a direct-agent call, and CMS is informed that the call has been forwarded.

Administering Direct Agent calling

To administer Direct Agent calling:

- On the Agent LoginID form, you enter the agent's Direct Agent Skill. It is suggested that you use the Hunt Group form to set up a skill for all DA calls. This skill will:
 - Tell the switch how to handle calls to the skill
 - Show report users how much time each agent has spent on DA calls.

Note:

Any agent who will receive direct agent calls should have at least one non-reserve skill assigned to the agent loginID.

- Add the skill to the agent's administered skills on this form.

Whenever an outside caller dials the agent's extension, the switch looks at the entry in that field to determine the skill for tracking call data.

On page 8 of this Feature-Related System Parameters form, you may specify:

- A Direct Agent Announcement Extension that plays an announcement to Direct Agent callers waiting in queue.
- Amount of delay, in seconds, before the announcement.

You also need to administer a Class of Restriction (COR) for DA calls. COR is covered in the next lesson. [Click here to go to that topic now.](#)

Direct Inward Dialing (DID) is administered on the Trunk Group form.

On the second page of the Hunt Group form, consider administering Multiple Call Handling On-Request for this hunt group. This feature will enable agents to see that the incoming call is a DA call and put their current call on hold to answer the DA call.

If there is no answer after a certain number of rings, you may use RONA to redirect the caller to a VDN that points to a vector. You can set up the vector to provide appropriate routing and treatment for the call.

On page 3 of the Hunt Group form, you administer messaging for the Direct Agent hunt group.

That's all. Next, you need to assign this hunt group to agents who need to receive Direct Agent calls.

Functions and examples

This section explains how EAS is implemented. Skill administration, the delivering of calls to a skill queue, and the routing of calls to an agent is discussed.

Administering skills

A skill is an attribute that is:

- Administered as a skill hunt group
- Administered to VDNs (VDN skill preference)
- Assigned to agents (agent skill)

A skill hunt group is administered for each skill. A skill hunt group is a set of agents trained to meet particular customer needs.

Generally, if the ability “Spanish speaking” is assigned to skill 127, for example, it follows that Agent skill 127 and VDN skill 127 both signify “Spanish speaking.” However, note that the agent skill might be assigned a skill term that is broader than that for the corresponding VDN skill. For example, Agent skill 127 might be labeled “bilingual.” The implication is that agents with skill 127 can handle calls from Spanish callers as well as from callers who speak English.

Skills for an application are shown in the following table, which presents a very abbreviated example of such a skill distribution for an automobile club.

Example of a skill table for an automobile club

Supergroup-99	
Emergency road service-bilingual-22	Route planning-bilingual-44
Emergency road service-English-11	Route planning-English-33

In the table shown above, five skills are defined. Each skill indicates knowledge or an ability on the part of the agent or a need for knowledge on the part of the caller. One or more of these skills can be attributed to the agent according to the agent’s expertise with the corresponding highway services and his or her language-speaking ability. Similarly, one or more of these skills can be considered “needs” on the part of the caller.

The table shown above, is arranged in such a manner that the agents at the top level have the broadest knowledge, that is, these agents can handle emergency road service and route planning calls and can speak Spanish. The top level (skill group) here is called “Supergroup,” and it contains agents who, as a group, can take any type of call regarding the automobile club. Accordingly, this skill group serves as a “backup” skill group. As you

descend through the table, each sublevel corresponds to a group of agents who have more specific skills and can therefore take more specialized calls.

Calls can be distributed to the most-idle agent by using either the Uniform Call Distribution (UCD) option or the Expert Agent Distribution (EAD) option. UCD distributes calls from the skill hunt group to the most-idle agent who has this skill assigned at any priority level. This scenario provides a more even distribution to calls and therefore keeps agents equally busy. EAD distributes calls from the skill hunt group to agents to an available agent who has the highest skill level. Skills that are assigned to an agent at higher skill levels indicate a higher level of expertise or preference by the agent than any lower skill level skills that are assigned to that agent. EAD distribution provides the caller with the best or most expert agent match.

Agents are usually given a preference for higher skill level calls. However, the system can be administered to give agents a preference for the greatest need call. The greatest need call is the highest priority oldest call waiting for any of the agent's skills.

Multiple Call Handling on Request and Forced Multiple Call Handling make it possible for an agent to receive additional ACD calls either after putting a call on hold, or when active on another ACD call. Forced Multiple Call Handling can be used to give priority to an ACD call over an in-progress non-ACD call, or to give priority to a call from one skill over an in-progress call from a different skill. See *Administrator Guide for Avaya Communication Manager*, 555-233-506 for more information.

To administer skills, the relevant Hunt Group form must be completed, as shown in the following example.

Hunt Group Form

HUNT GROUP		
Group Number:	Group Extension:	Group Type:
Group Name:	Skill?	ACD?
Queue?	Vector?	AAS?
Security Code:	Night Service Destination:	COR:
ISDN Caller Disp:	Coverage Path:	TN:
Measured:	Supervisor Extension:	
Priority On Intraflow?	Inflow Threshold (sec):	
Controlling Adjunct:	Adjunct Link Extension:	
Multiple Call Handling?	Acceptable Service Level (sec):	
Objective:		
Queue Length:		
Calls Warning Threshold:	Calls Warning Port:	Extension:
Time Warning Threshold:	Time Warning Port:	Extension:
Timed ACW Interval:		
Redirect on No Answer (rings):	Redirect to VDN:	
Forced Entry of Stroke Counts or Call Work Codes?		

The Skill, ACD, and Vector fields must all contain y. Instructions for completing this form are included in *Administrator Guide for Avaya Communication Manager*, 555-233-506.

VDN skills

EAS enhances the Call Vectoring and Automatic Call Distribution features of the switch by distributing incoming calls based on:

- Specific skills that are assigned to a VDN or used in a vector, and
- Skills that are assigned to an agent

For example, a caller dials a particular number (VDN). The VDN uses a vector to queue the call to an agent with a skill that matches the VDN skill.

You can assign up to three different skills to a VDN in an order that meets your callers' needs. The first skill assigned to a VDN might be the skill that is required to best meet the needs of the customer who called the VDN. The second and third skills assigned to the VDN might represent backup skills that can also meet the callers' needs.

Skills that are administered to a VDN are commonly called VDN skill preferences. VDN skill preferences are labeled 1st, 2nd, and 3rd.

Note:

While skills can be optionally assigned to VDNs, the vector controls when and to what VDN skill the call queues. The application of VDN skills is described later in this chapter.

The following table shows how skill preferences can be assigned to the five VDNs that are used for the automobile club that we discussed earlier. For each VDN, the corresponding call type and the number of the vector to which the VDN points are indicated. See [Example of a skill table for an automobile club](#) on page 424 for a description of each skill.

Example of VDN skill preferences assignments

Call type	Skill Preferences				
	VDN	1st	2nd	3rd	Vector
General number	6005				1
Emergency Road Service (English)	6001	11	22	99	3
Emergency Road Service (Spanish)	6002	22		99	2
Route Planning (English)	6003	33	44	99	3
Route Planning (Spanish)	6004	44	99		2

In the table shown above, note that two VDNs point to Vector 3, two VDNs point to Vector 2, and one VDN points to Vector 1. Note also that a 1st and 3rd VDN skill Preference, but no 2nd VDN skill Preference, are assigned to VDN 2222. This implies that the call to this VDN (if not already answered) will wait longer before queuing to the backup skill

(Supergroup-99, in our example), provided that the vector is designed to execute accordingly.

The following table shows the skill preferences that are assigned for one specific VDN (6003) that is used for the automobile club:


Skill preferences assignments for VDN 6003

Preference	Number	Description
1st:	33	Directed to an agent who is knowledgeable about Route Planning and speaks English
2nd:	44	Directed to an agent who is knowledgeable about Route Planning and is bilingual
3rd:	99	Directed to an agent who can field all calls

In the table shown above, the first VDN skill preference corresponds to a knowledge area that could be considered a subset of the knowledge area that is represented by the second and the third preference. Similarly, the second VDN skill Preference corresponds to a knowledge area that could be considered to be a subset of the knowledge area that is represented by the third preference. Such an approach is commonly used to assign VDN skill preferences. The result of this approach is that the longer a call waits, the larger the pool of agents that the ACD considers for handling the call.

Recall that the vector numbers for each VDN associated with the automobile club are listed in [Example of VDN skill preferences assignments](#) on page 426. VDN 6003 points to Vector 3. As such, the skill requirements that are associated with the VDN are forwarded to the vector. This process is shown in the following figure.

Example of VDN skill implementation

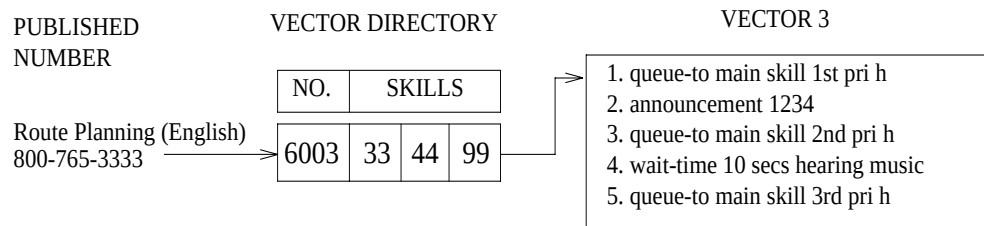

Assume that the English-speaking caller needs information on route planning and dials the appropriate number (800-765-3333). Network 800 features direct the call to 6003 (a VDN), the call enters the switch and is directed to VDN 6003, which points to the appropriate vector. As shown in [Skill preferences assignments for VDN 6003](#) on page 427, VDN skill Preferences 33, 44, and 99 are administered as the 1st, 2nd, and 3rd skill preferences, respectively, for VDN 6003.

Vector processing of this application is described in [Delivering the call to the skill queue](#) on page 432.

Vector Directory Number (VDN) form

The Vector Directory Number (VDN) form shown in the following example is used to administer VDN skills.

Vector Directory Number (VDN) form, page 1

change vdn xxxxx VECTOR DIRECTORY NUMBER	page 1 of 2
Extension: 2001 Name: vdn 2001 Vector Number: 1	
Attendant Vectoring? n Allow VDN Override? n COR: 1 TN: 1 Measured: internal	
Acceptable Service Level (sec): 20 Service Objective (sec):	
VDN of Origin Annc. Extension: 1st Skill: 2nd Skill: 3rd Skill:	

Vector Directory Number (VDN) form, page 2

change vdn xxxxx VECTOR DIRECTORY NUMBER	page 2 of 2
Audix Name: Messaging Server Name: Return Destination: VDN Timed ACW Interval: BSR Application: BSR Available Agent Strategy: 1st-found Observe on Agent Answer?: n	

Note:

Skills can be optionally assigned to VDNs, however, the vector controls when and to what VDN skill the call queues.

Complete instructions for completing the form are included in *Administrator Guide for Avaya Communication Manager*, 555-233-506.

Call Vector form

Completion of the Call Vector form is required for using vectors with EAS. The form contains three pages. However, if the vector contains 11 or fewer instructions, you need to complete only the first page of the form, as shown in the following example.

Call Vector form (Page 1 of 3)

change vector 20
Page 1 of 3

CALL VECTOR

Number: 20

Multimedia? n

Basic? y

Prompting? n

Name: _____

Attendant Vectoring? n

EAS? y

LAI? n

Lock? y

G3V4 Enhanced? n

ANI/II-Digits? n

CINFO? n

BSR? y

Holidays? y

01 _____

02 _____

03 _____

04 _____

05 _____

06 _____

07 _____

08 _____

09 _____

10 _____

11 _____

Note:

Skills can be optionally assigned to VDNs, however, the vector controls when and to what VDN skill the call queues.

Instructions for completing the Call Vector form are provided in *Administrator Guide for Avaya Communication Manager*, 555-233-506, and in [Creating and editing call vectors](#) on page 31.

Agent skills

Agents are trained or hired to accommodate specific caller needs. Agent skills represent and define the ability of the agent to handle calls that require these skills. Agents are assigned skill numbers that are based on such characteristics as training or knowledge, access to systems or information, language ability, and interpersonal traits. Examples of agent skills include the following: speaks Spanish, knows about widget “X,” can handle complaint calls, has access to a database, and so forth.

You can assign up to 20 skills (with EAS-PHD) or 4 skills (without EAS-PHD). Each of these skills can be designated a skill level between 1 and 6 (EAS-PHD) or 1 and 2 (EAS), with 1 being the highest skill level, which is the highest-priority skill.

If an agent has multiple skills, a single skill group can be created for each set of skills. Agent skills are assigned to agents by completing the Agent Login ID form. See the [ACD Login ID dialing](#) for more information.

It is highly recommended that you create a separate skill hunt group for direct agent calls. Direct agent calls are queued to the skill that is administered as the Direct Agent Skill on the Agent LoginID form. If an agent is not able to log in to his or her Direct Agent Skill, Direct Agent calls are queued to the first-administered highest-level skill.

Expert Agent Selection

The following table shows the assignment of agent skills. See [Example of VDN skill preferences assignments](#) on page 426 for a description of the skills.

Example of agent skill assignments

Agent	Skills assigned			
Jan O'Hara	22 (L1)	44 (L2)		
Sam Lopez	99 (L1)			
Sue Carlson	22 (L1)	11 (L1)	44 (L2)	33 (L2)
Mark Davis	44 (L1)			
Amy Brown	44 (L1)	22 (L2)		

Without EAS-PHD a maximum of four agent skills may be assigned to any one agent with one of two preference levels. With EAS-PHD up to 20 skills can be assigned to each agent with one of sixteen preference levels. The skill assignments table shows that four agent skills (22, 11, 44, 33) are assigned to Sue Carlson. These assignments indicate that Sue is bilingual and can service callers who need emergency road service or information on route planning. Only one agent skill (99-Supergroup) is assigned to Sam Lopez. This means that Sam is serving only as a backup.

A L1 or L2 next to the skill number indicates whether the agent skill is assigned as a level 1 or level 2 skill. For example, Jan O'Hara has "Emergency Road Service-Bilingual" as a level one skill and "Route Planning-Bilingual" as a level two skill. This means that whenever Jan O'Hara becomes available for an ACD call, provided that the Call Handling Preference is skill-level, the ACD software first looks for English-speaking callers who are requesting information on "Emergency Road Service" from the agent. Only if there are no callers requesting "Emergency Road Service" does the ACD software look for English-speaking callers who are requesting information on "Route Planning." If the Call Handling Preference is greatest-need, Jan O'Hara receives the highest priority, oldest call waiting for either "Emergency Road Service" or "Route Planning-Bilingual" each time that she becomes available.

For any given application, EAS puts no restrictions on which agent skills can be assigned to an agent.

Note:

Agent skills are administered by completing the Agent Login ID form. This form is shown in [ACD Login ID dialing](#) on page 440. Complete instructions for completing the form are provided in *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784.

Preference Handling Distribution

Preference Handling Distribution enables an agent to take calls based on either skill level or greatest need.

If an agent's call-handling preference is by skill level, the agent receives the call that requires the skill for which the agent's skill level is highest.

If an agent's call-handling preference is by greatest need, the agent receives the highest-priority, oldest call waiting that requires any of the agent's skills.

It is recommended that in any skill, all agents have the same call handling preference. This ensures the most consistent distribution of calls by either greatest need or skill level.

Preference Handling Distribution Examples

The following table is an example of how calls queue with Preference Handling Distribution.

Preference Handling Distribution

Agent is assigned skills and skill levels...	These calls are in queue...
Skill 11; skill level 1	Waiting 15 seconds; priority medium
Skill 21; skill level 8	Waiting 30 seconds; priority low
Skill 31; skill level 16	Waiting 45 seconds; priority medium

Logical Agent capability

With Logical Agent and EAS, calls are routed to agents based on the login ID instead of the extension number that is assigned to the telephone. The agent's login ID must be consistent with the dial plan of the switch. When an agent logs in to an extension, the login ID overrides the extension as far as ACD tracking and characteristics, such as name and class of restriction (COR) are concerned.

When a specific login ID is called, the switch routes the call to the telephone that the agent is currently logged in to. Logical Agent allows agents to be called regardless of the telephone the agent is using. Calls to agent login IDs can be delivered as direct agent calls with the proper COR set for both the originating and the receiving login ID/facility.

Agents are not assigned to skill hunt groups with Logical Agent. Instead, an agent has specific skills that are assigned to his or her login ID. When an agent logs in, the agent is associated with the assigned skill hunt groups and tracking begins for the assigned skills.

Note:

Avaya CMS automatically measures a logical agent who is administered with at least one measured skill when the agent logs in.

Logical Agent uses a single set of work-mode buttons for all skills. This means that an agent is available or in AUX work for all skills at the same time. An agent cannot be available in some skills and in AUX work in others.

The telephone’s button assignments and automatic answer options do not follow the agent because they are associated with the physical extension and not the agent login ID.

Note:


Converting to EAS may require a change to the CMS login ID if the current ID is not a valid extension number or cannot be made available in the switch dial plan. Agent login IDs are assigned names from the Dictionary-Login Identification window by way of Avaya Supervisor. Login IDs must be different from the telephone extensions.

Delivering the call to the skill queue

This example shows how a call is delivered to a skill hunt group queue by vector processing.

The skills that are assigned to a VDN define the requirements in the vector for routing calls to an ACD agent with a particular set of skills. These skills become active for an ACD call whenever a **queue-to skill** command is executed. The skills also become active whenever a **check skill** command is executed and the threshold condition is met. Once a skill is active for an ACD caller, the call cannot be delivered to an available ACD agent unless the agent also has one of the active VDN skills.

Process for delivery of a call to a skill queue

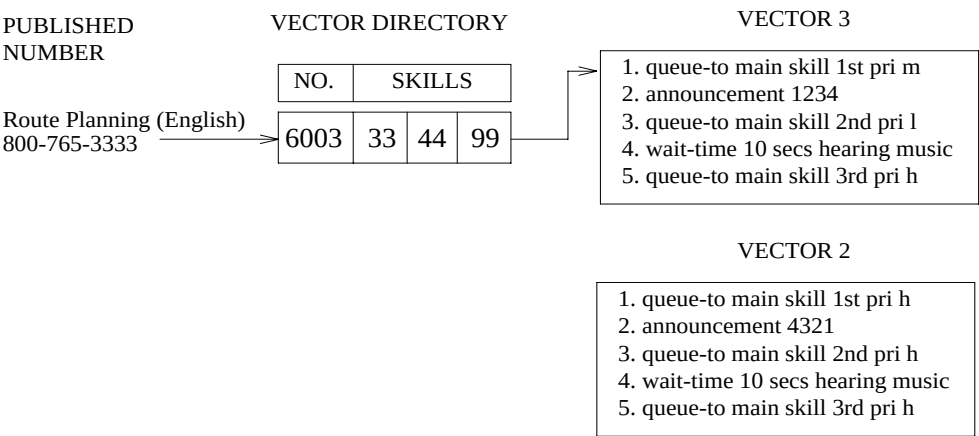

The process shown above assumes that an English-speaking caller needs information on “Route Planning” and dials the appropriate number (800-765-3333). In this case, the call enters the switch and is directed to VDN 6003, which points to Vector 3. Once vector processing starts, the **queue-to skill** command in step 1 queues the call to the skill hunt group that corresponds to the 1st VDN skill (33-Route Planning-English). If an agent with skill 33 is available, this agent answers the call. If such an agent is not available, the call is eventually queued to the skill hunt group that corresponds to the 2nd VDN skill (44-Route Planning-Bilingual) by the **queue-to skill** command in step 3. This time, if an agent with skill 44 is available, this agent answers the call. If the call is still not answered, the call is eventually queued to the skill hunt group that corresponds to the 3rd VDN skill (99-Supergroup) by the **queue-to skill** command in step 5.

In the process shown above, Vector 2 would be executed if a Spanish-speaking caller had called into the switch. Accordingly, the announcement that is provided in Vector 2 is in Spanish, whereas the announcement in Vector 3, which is executed in our example, is in English.

Note also that each of the **queue-to skill** commands in Vector 2 queues the call at a high priority, whereas only one of the **queue-to skill** commands in Vector 3 queues the call at this high a priority level. The strategy presented here is valuable when there is a limited number of bilingual agents because the bilingual such agents will be available more quickly to service callers who speak only Spanish.

VDN skills can also be used in **check skill**, **messaging skill**, and **converse-on skill** commands. Within any of these commands, a specific skill number can be used instead of a VDN skill Preference, provided that the relevant skill hunt group is correctly administered. For example, step 5 might have read **queue-to skill 99 pri h**. This concept is discussed further in [Super agent pool](#) on page 434.

Procedure using Call Prompting

The procedure that is described in the previous section can be enhanced by using Call Prompting. For example, the user can dial a general telephone number whose VDN points to a Call Prompting vector.

Staying with our automobile club example, recall that in [Examples of services and corresponding DNIS digits](#) on page 420, we define “800-765-5555” as the general telephone number for the service. Recall also that in [Example of VDN skill preferences assignments](#) on page 426 we identify 6005 as the VDN for this 800 number. Also, we indicate that VDN 6005 points to Vector 1.

The following vector shows how Vector 1 might appear.

Call Prompting vector for the automobile club

1. wait-time 0 seconds hearing ringback
2. collect 1 digits after announcement 5678
("For emergency road service, dial 1.
Para asistencia con su automovil, marque el dos.
For travel route directions, dial 3.
Para informacion sobre rutas, marque el cuatro.")
3. route-to number 6001 with cov n if digit = 1
(English Emergency Road Service VDN)
4. route-to number 6002 with cov n if digit = 2
(Bilingual Emergency Road Service VDN)
5. route-to number 6003 with cov n if digit = 3
(English Route Planning VDN)
6. route-to number 6004 with cov n if digit = 4
(Bilingual Route Planning VDN)
7. route-to number 6002 with cov n if unconditionally
(Bilingual Emergency Road Service VDN)

Once the caller dials "800-765-5555," the call enters the switch and is directed to VDN 6005, which points to our Call Prompting vector. At this point, vector processing begins. Step 1 provides ringback if the caller has to queue for the announcement in step 2. The **collect digits** command in step 2 first provides an announcement that requests the caller to dial 1, 2, 3, or 4, depending upon the caller need and the caller's language speaking ability. If the caller dials a digit that is other than one of the four specified, each of the **route-to...if digits** commands in steps 3 through 6 fails, and control is passed to the **route-to...if unconditionally** command in step 7, which unconditionally routes the call to VDN 6002. This VDN is assigned the "Bilingual Emergency Road Service" skill and points to Vector 2, which is provided in the previous section.

Now we return to the **collect digits** step and assume that the caller dials 4. In this case, steps 3 through 5 fail because the required digit (1, 2, or 3, respectively) was not dialed. Thereafter, control is passed to step 6, where the **route to...if digit** command finds a digit match and consequently routes the call to VDN 6004. This VDN is assigned the "Bilingual Route Planning" skill and also points to Vector 2, which is provided in the previous section.

Note:

VDN Override applies to the skills that are assigned to the VDN. See [VDN Override](#) on page 56 for more information.

Super agent pool

EAS allows a skill hunt group to function as a super agent pool. A super agent pool is a backup group of one or more agents that is able to handle many if not all types of calls coming into the application. In our automobile club examples, Skill Hunt Group 99 (Supergroup) serves as a super agent pool. Also, you might recall that 99 appears as both a VDN skill and an Agent skill. However, a super agent pool can be assigned a skill hunt group number that is not assigned to a VDN skill. This can and should be done whenever

the application requires four levels within the skill table distribution, as shown in the following table.

^T
Modified skill table for the automobile club

Supergroup-99			
Emergency road service- bilingual-88		Route planning-bilingual-77	
English-66	Spanish-55	English-44	Spanish-33
Bostonian-11	Castilian-13	Bostonian-15	Castilian-17
New Yorker-12	South American-14	New Yorker-16	South American-18

Besides a new skill numbering scheme, our modified skill table has four levels instead of the three levels that are provided in [Example of a skill table for an automobile club](#) on page 424. Except for the skill numbering scheme, the top two levels (Supergroup-99 and Emergency Road Service-Bilingual-88/Route Planning-Bilingual-77) remain unchanged. However, note that the next level is reorganized into segments to indicate the ability to speak English or Spanish. Finally, note that a new level is added to denote particular types of accents or pronunciation in English and Spanish.

The following table shows how some of the skills in [Modified skill table for the automobile club](#) on page 435 are administered to one relevant VDN (VDN 1616).

Skill preferences assignments for VDN 1616

VDN 1616 - Skill preferences		
1st:	16	Knows about Route Planning, speaks English, has New York accent
2nd:	44	Knows about Route Planning, speaks English
3rd:	77	Knows about Route Planning, is bilingual

Now we are ready to consider the following vector to accommodate a super agent pool.

Modified vector to accommodate a super agent pool

```

1. queue-to skill 1st pri m
2. announcement 4555
3. queue-to skill 2nd pri l
4. wait-time 10 seconds hearing music
5. check skill 3rd pri l if calls-queued < 3
6. announcement 4666
7. check skill 99 pri l if available-agents > 0

```

Assume an English-speaking caller needs information on “Route Planning” and want to speak to an agent with a New York accent. In this case, the caller dials the appropriate number (800-765-1616, for example). Accordingly, the call enters the switch and is directed to VDN 1616, which points to the vector in the previous screen. Once vector processing starts, the **queue-to skill** command in step 1 queues the call to the skill group that corresponds to the 1st VDN skill (New Yorker-16). If an agent with skill 16 is available, this agent answers the call. If such an agent is not available, the call is eventually queued to the skill group that corresponds to the 2nd VDN skill (English-44) by the **queue to main skill** command in step 3. This time, if an agent with skill 44 is available, this agent answers the call. If the call is still not answered, the **check skill** command in step 5 attempts to queue the call according to the parameter indicated (if calls-queued < 3) to the skill group that corresponds to the 3rd VDN skill (Route Planning-Bilingual-77). If the call is queued, and if an agent with skill 77 is available, this agent answers the call. If the call is not queued, or if it is queued and an agent with skill 77 is not available, the **check skill** command in step 7 is executed.

Before we discuss the execution of step 7, note that a specific skill hunt group number (99) and not a VDN skill Preference designation (1st, 2nd, or 3rd) is included within the **check skill** command. Since the skill table for the application involves four levels of skills, and since there can be no more than three VDN skills, the specific skill group number (99) for the super agent pool must be included within the queuing command to allow caller access to the pool. Whereas a VDN skill is always represented in a vector by the term 1st, 2nd, or 3rd, a super agent pool is always represented by a whole number according to the parameters of the relevant switch. See [Appendix A: Call Vectoring commands](#) on page 467 for the queueing commands.

Returning to the vector execution, the **check skill** command in step 7 attempts to queue the call according to the parameter that is indicated (if available-agents > 0) to the super agent pool (Supergroup-99). If the call is queued, and if an agent in the super agent pool is available, this agent answers the call.

Note:

If the call has already queued to all three VDN skill hunt group preferences, it does not queue to the specific skill hunt group. This reflects the restriction that a call can only queue to a maximum of three splits or skills. The best approach is to test the splits/skills first to determine where to queue the call. Also, see [Expected Wait Time \(EWT\)](#) on page 166.

Routing the call to an agent

With EAS optioned, an agent becomes associated at login with one or more skill hunt groups. A single set of work mode buttons applies to all the skills that are assigned to a logged-in agent. For example, if the agent selects Aux Work, the agent is in Aux Work for all the skills associated with the agent. Therefore, logged-in agents need only a single set of work-mode buttons for all relevant skill hunt groups.

Calls can be routed to the agent from a skill hunt group by dialing an Agent Login ID or by dialing an agent telephone extension directly. The following sections discuss these procedures.

Delivery from a skill hunt group

An incoming call is matched to an agent who has at least one of the three VDN skills that are required to handle the call. This matching is done by ACD queuing and the **queue-to skill**, **check skill**, **messaging skill**, or **converse-on skill** commands in the vector. If more than one agent is available for a call, the call is delivered according to whether EAD or UCD is administered for the skill hunt group.

For any one login session, an agent can have a maximum of four skills, or a maximum of twenty skills with EAS-PHD. Each agent skill is administered with a skill level.

Remember that when the Call Handling Preference is administered as greatest need, the agent receives the highest priority oldest call waiting for any of the agent's skills. If the Call Handling Preference is skill-level, the ACD software distributes the call that is waiting for the agent's highest skill-level skills whenever the agent becomes available. If no calls are waiting for the highest skills, the queued calls for the next highest skills are distributed to the agent, and so on. The following scenario describes call distribution when the Call Handling Preference is skill level.

Once an agent becomes available, he or she receives a waiting call in the following order:

1. Oldest Direct Agent call waiting for the agent if the Direct Agent Skill is administered at the agent's highest skill level
2. Oldest call waiting at the highest priority for the highest skill-level skill
3. Oldest call waiting at the next highest skill-level skill, and so on.

For example, assume that Jill is the only agent with skills 22 (L1), 13 (L1), 23 (L1) and 47 (L2). Also assume that, while Jill is in AUX work mode, five calls are queued, as shown in The following table, which also shows the skill level and priority level that are associated with each call:

Example of skill call queue sequence

Call	Time in queue	Skill number	Priority level
A	8:00	13	Medium
B	8:01	47	Top
C	8:02	23	Direct Agent
D	8:03	22	Top
E	8:04	22	Medium

Expert Agent Selection

Given this scenario, the next table indicates and explains the order in which Jill handles the five calls.

Example of skill call distribution for a single agent

Call handled	Reason
C	Only Direct Agent call queued at highest level skill.
D	Oldest call waiting at the highest priority for highest skill-level skills (Call B has the same priority level (Top), but it is assigned a lower skill level (47). Also, Call E has the same skill (22), but it has a lower priority level (Medium) and has not been waiting as long as Call D).
A	Oldest call waiting at the highest priority level for highest skill-level skills (Call E also has a primary skill (22) and the same priority level as Call A, but Call A has been waiting four minutes longer than Call E).
E	Only remaining call with the highest skill level (22) (Call B has a lower skill level (47)).
B	Last remaining call, and the only one that has the lower skill level (47).

If no calls are waiting when an agent becomes available, the agent is placed into the agent queue according to the call distribution method that is in effect. For UCD, the agent is placed at the bottom of the most-idle agent queue. For EAD, the agent is placed at the bottom of the agents with the same skill level.

The following table shows a call scenario that is valid for either UCD or EAD.

Example of UCD/EAD call scenario

Time	Event	Skills
9:00	Jill logs in	22(L1), 13(L1), 47(L2)
9:01	Jill available	22(L1), 13(L1), 47(L2)
9:02	Jack logs in	22(L1), 47(L1)
9:03	Jack available	22(L1), 47(L1)
9:04	Call A arrives	47
9:05	Call A drops	47
9:06	Call B arrives	13
9:07	Call B drops	13
9:08	Call C arrives	22

Given the scenario presented above, the following table shows how Calls A, B, and C are distributed by UCD and EAD:

Example of call distribution by UCD and EAD

Time	UCD or EAD?	Result	Reason
9:04	UCD	Jill receives Call A.	Jill is the most idle agent for skill 47.
	EAD	Jack receives Call A.	Jack is the “more expert” agent because he has skill 47 as a level 1 skill whereas Jill has skill 47 as a level 2 skill.
9:06	UCD	Jill receives Call B.	Jill is the only agent who is logged in to skill 13.
	EAD	Jill receives Call B.	Jill is the only agent with skill 13.
9:08	UCD	Jill receives Call C.	Jill is the most idle agent for skill 22. She receives Call C even if she handled Call A.
	EAD	Jill receives Call C.	Both Jill and Jack have skill 22 as a level 1 skill, but Jill has been logged in 2 minutes longer than Jack; that is, she is the most idle agent.

Note:

If the agent is using a DCP telephone (such as a Callmaster), then the password digits are not shown unless an abbreviated dial button is used. BRI telephones show the password digits.

Once the login is accepted, confirmation tone is given. Also, the skills that are assigned are displayed for 5 seconds on the telephone display. If more skills are assigned than can be displayed, a plus sign (+) appears at the end of the display. If a skill is administered but the agent was not logged in to the skill, the skill number is displayed with a star (*). The previous login sequence allows an ACD call to be directed to a specific agent and to have that call tracked and treated as an ACD call.

When an EAS agent logs in to a station with the station administered for audible message waiting, the agent receives an Audible Message Waiting tone only when calls are waiting for the agent login ID extension. When the agent logs out, Audible Message Waiting tone then applies again to messages that are waiting for the physical extension. This field has no impact on whether an agent hears the EAS Login-ID Message Waiting tone during the login process.

The message waiting lamp by default tracks the status of messages that are waiting for the logged-in EAS agent LoginID rather than messages for the physical telephone. The operation of the Message Waiting Lamp can be changed so that it tracks the status of messages that are waiting for the physical telephone where the agent is logged in. For more information, see the Feature-Related System-Parameters form in *Administrator Guide for Avaya Communication Manager*, 555-233-506.

Other agent login capabilities

In addition to skill assignments, the following capabilities are associated with agents' login IDs.

Call routing - A call to the Login ID reaches the agent independent of the telephone that the agent is currently using. In other words, such a call is sent to the telephone at which the agent is currently logged in.

If the proper Class of Restrictions (COR) is set, callers can initiate a Direct Agent call either by dialing the Login ID extension directly or by calling a VDN that points to a vector that contains first a prompt for the Login ID and then a **route-to digits** command. This allows external callbacks by way of Direct Inward Dialing (DID) or an 800 number. Both the receiving agent's Login ID COR and the originator's (caller's) COR must have Direct Agent Calling set to y. The caller's COR is for the following:

- Telephone extension (for internal calls or transfers)
- Trunk group (for DID calls)
- VDN (for prompted calls)

If the call covers or is forwarded, the COR of the originator (or VDN) and the final agent is used. All feature functionality for ACD calls, except Queue Status indications, is available for Direct Agent Calls.

Expert Agent Selection

Internal and external users can originate Direct Agent calls by dialing the agent's login ID. Also, Direct Agent calling can be used to transfer ACD calls from one agent to another agent.

If an agent who is receiving the Direct Agent Call is staffed but unavailable, the call waits in front of the skill calls in the skill that is administered as the agent's Direct Agent Skill until either the call is answered or a coverage timeout occurs. Also, the caller hears an optional direct-agent announcement that is followed by music or silence. There is one Direct Agent announcement per system. The agent, on the other hand, receives a ring-ping, and the current work mode button flashes. If the agent is available, the call is delivered to the agent according to the answering and ringing options. Calls are answered and handled in the same manner as ACD calls. See the Feature-Related System-Parameters form in *Administrator Guide for Avaya Communication Manager*, 555-233-506 for more information.

Login ID name on the telephone display - A call to a logged-in EAS Login ID by default displays the name associated with the Login ID and not the name that is associated with the telephone. This is also true on the receiving party's display for a call that is made from a telephone with an agent logged in. However, the user can display the name of the physical telephone where the EAS agent is logged in. The user must be active on a call with the agent, and must have a telephone with an alphanumeric display and an inspect button. When the inspect button is pressed during a call to or from the EAS agent, the physical telephone name of the agent is displayed.

Coverage path - Call coverage can occur whether or not the agent is logged in. If the agent is not logged in, the busy criteria is met and the call follows the points on the coverage path. If the agent is logged in but fails to answer, the don't answer criteria is met and the call follows the points on the coverage path. A call to the Login ID goes to the coverage path that is assigned to the Login ID rather than to the coverage path that is assigned to the telephone extension.

Agent restrictions - A call to the Login ID or from the agent uses the restrictions that are associated with the agent and not the telephone.

Telephones are fully functional if an agent is not logged in. The restrictions, coverage, and name revert to the telephone administration when the agent logs out.

If a number of users are sharing one telephone (due to job sharing or shifts, for example), a unique Login ID extension is assigned to each user. Therefore, whenever a user is logged out, any calls to that user (login ID) are sent to his or her coverage path. As a result, Login IDs can be used to reach people independent of where they happen to be. Such people include those who use more than one phone because they have more than one office or (in the case of security guards, for example) sit at more than one desk.

Because AAS/AUDIX ports are not mobile, these ports are administered to Agent Login IDs. Whenever the AAS or AUDIX field is set to y, a field that requests the port number is brought up, and the password field disappears.

EAS feature interactions

This section discusses the feature interactions that involve EAS. Unless otherwise specified, the feature interactions for skill hunt groups are the same as for vector-controlled splits.

Abbreviated dialing - Abbreviated dialing can be used to log in or log out EAS agents. Abbreviated dialing lists or buttons can be administered only for stations.

Administration without hardware - Although EAS Login IDs are extensions without hardware, they are not a part of the Administration without Hardware feature.

Agents in multiple splits feature - With EAS, the Agents in Multiple Splits feature is called Agents in Multiple Skills. This feature allows an EAS agent to be logged in to multiple skills.

Agent work modes - With EAS optioned, an agent can be in only a single work mode for all skills at any one time. For example, an agent cannot be in AUX work mode in one skill hunt group and also available in another skill hunt group. Also, if the After Call Work (ACW) mode button is selected, the agent is placed into ACW for the first skill that is administered and logged in to.

Assist - This feature is used for skill hunt groups (that is, there is one supervisor per skill hunt group). A telephone can be administered with one or more Assist buttons for each skill that agents who are using the telephone might have. An Assist button can also be administered with no associated skill. In this case, the supervisor for the skill that the agent is currently active on is called. If the agent is not active on any skill, the supervisor for the agent's first skill is called.

Any assist button that is selected is tracked as an assist for the current call, regardless of any skill that is assigned to the button. The administered association of an Assist button with a particular skill and assigned supervisor is not affected when an EAS agent logs in to that station.

Audible message waiting - If messages are waiting for an EAS agent login-ID extension, an agent hears a special 5-burst EAS Login-ID Message Waiting tone (instead of confirmation tone) after successfully logging in. This does not require Audible Message Waiting to be assigned to the telephone or the system.

If Audible Message Waiting is optioned for the system and assigned to an agent's telephone, and messages are waiting for the agent login ID extension, the agent hears the Audible Message Waiting tone whenever the agent goes off-hook, or selects a line appearance and hears dial tone. Messages that are waiting for the physical extension do not cause an Audible Message Waiting tone when an EAS agent is logged in.

Auto-Available Skills - If a skill hunt group is administered as an Auto-Available Skill (AAS), the EAS Login IDs that are assigned to this skill must also be administered as Auto-Available. When the switch reinitializes, these Login IDs are automatically logged in with the AUTO-IN work mode. If any switch features attempt to change the work mode to anything except AUTO-IN, this attempt is denied. Agents cannot have both Auto-Available and Non-Auto-Available Skills. This feature is not intended for human agents.

Automatic answering with zip tone - This feature can be administered only for a physical extension. The feature is not associated with a LoginID.

BCMS - The BCMS user interface remains the same when EAS is optioned. The only change is that the labeling of the headings is changed from split to skill. When EAS is enabled, BCMS agent reports are based on the Agent Login IDs.

BCMS tracks Direct Agent calls as skill calls. Direct Agent calls affect ACD talk time, ACW time, and Average Speed of Answer. Whenever Direct Agent calls are waiting, BCMS displays an asterisk (*) immediately after the CALLS WAITING column.

Best Service Routing (BSR) - EAS VDN skills (1st, 2nd, 3rd) can be used in **consider split/skill** commands. EAS skills levels are used for the EAD-MIA and EAD-LOA BSR Available Agent Strategies.

Bridging - ACD calls do not alert on bridged appearances. However, bridged users can activate features on behalf of agents. Features that can be activated include log in, log out, change work modes, and assist.

Call coverage - Call coverage can occur whether or not the agent is logged in. If the agent is not logged in, the busy criteria is met and the call follows the points on the coverage path. If the agent is logged in but fails to answer, the don't answer criteria is met and the call follows the points on the coverage path. A call to the Login ID goes to the coverage path that is assigned to the Login ID rather than to the coverage path that is assigned to the telephone extension.

Call Detail Recording (CDR) - For skill calls, the called party field can optionally be the Agent Login ID.

Call forwarding - Since they are vector-controlled, skill hunt groups cannot be call forwarded. EAS agent Login IDs cannot be forwarded, but the physical extension where the EAS agent is logged in can be forwarded. If another station with console permissions tries to forward an EAS Login ID, an intercept tone is given.

Call park - To retrieve a parked call by a Feature Access Code (FAC), the agent dials the Answer-Back FAC and the extension where the call is parked. If the person who is unparking the call dials the Answer-Back FAC and the physical extension of the station where the call is parked, he or she is connected to the parked call.

In some cases, the person who is unparking the call may also be able to dial the Answer-Back FAC and the logical agent extension of the agent who parked the call. This operation is possible if the Class of Restriction (COR) of both the agent parking the call and the telephone or agent who is unparking the call have a COR with the Direct Agent Calling flag set to y. If the telephone that is unparking the call is not a logged-in agent, the telephone must have a COR with Direct Agent Calling set to y. If the station that is unparking the call is a logged in agent, then the COR of the logical agent extension must have Direct Agent Calling set to y.

Call pickup - Skill hunt group extensions and EAS Login ID extensions cannot be members of a Call Pickup group.

Class of Restriction - Skill hunt groups do have a Class of Restriction (COR). The COR is used if the skill hunt group extension is called directly. The COR for an EAS agent Login ID overrides the physical extension's COR of the telephone that an agent logged in to.

Class of Service - EAS agents do not have a COS associated with their Login ID. Instead, the COS is associated with the physical extension. Therefore, the COS of the telephone is not affected when an EAS agent logs in to that telephone.

Dial plan - Agent Login IDs are part of the dial plan, and they reduce the total number of stations.

Direct Agent Calling (DAC) - If a called EAS Agent Login ID and the call originator (extension, trunk, or VDN) both have a COR that allows Direct Agent calls, the call to the Login ID is treated as a Direct Agent call. A call to the telephone extension where an EAS agent is logged in, or a call to an EAS Agent Login ID where either the originator's or the Login ID's COR does not allow Direct Agent calls, is treated as a personal (non-ACD) call.

Telephone displays - When an EAS agent is logged in, the display for originators who call the Login ID shows the Login ID and agent name as they are administered on the Agent Login ID form. Calls that are originated by the agent show the Agent Login ID and agent name at the receiving telephone's display. However, the user can display the name of the physical telephone where the EAS agent is logged in. The user must be active on a call with the agent, and must have a telephone with an alphanumeric display and an inspect button. When the inspect button is pressed during a call to or from the EAS agent, the physical telephone name of the agent is displayed. Calls to the physical extension show the physical extension's number and name on the originator's display.

Leave Word Calling - When an EAS agent is logged into a station, the agent can only retrieve LWC messages left for that agent's login ID. To retrieve LWC messages left for that station, the agent must log out.

When an EAS agent is logged into a station, its Message lamp defaults to tracking the status of LWC messages waiting for the station. However, you can assign the Message lamp to track the status of LWC messages waiting for the agent's login ID.

Look-Ahead Interflow - Skills are not sent to another system when a call interflows using Look-Ahead Interflow (LAI). If skills have the same meaning on both ACDs, a LAI command to a VDN with the same skills assigned can provide a mapping of the skills.

Multiple Split Queuing - When EAS is enabled, the Multiple Split Queuing feature is called Multiple Skill Queuing, which has the same functionality. With Multiple Split/Skill Queuing, a call can queue to a maximum of 3 splits/skills.

OCM/EAS - If EAS is enabled on the switch, the Outbound Call Management (OCM)/Expert Agent Selection (EAS) feature is required for a CallVisor ASAI adjunct application to launch predictive Outbound Call Management (OCM) calls. Predictive Calling is an OCM feature that is often used in applications, such as sales or “cold calling,” where it does not matter which agent is accessed by a caller and for which it is important to keep the agents utilized fully.

While OCM predictive calling is an outbound call management application, the EAS environment provides a number of desirable features for inbound call handling. The OCM/EAS feature allows the customer to enable both types of call handling on the switch. From a technical standpoint, if EAS is enabled, the feature is needed for the following reasons:

- All skill hunt groups are vector controlled. However, to launch a predictive OCM call in a traditional ACD environment, the ACD split cannot be vector-controlled.
- The traditional ACD environment and EAS cannot be enabled on the switch at the same time.

The OCM/EAS feature extends the ASAI features to include launching predictive OCM calls from a VDN extension. Previously, ASAI hosts could launch predictive calls only from ACD split extensions. A limited number of Call Vectoring commands are supported in the VDNs that are used to launch or process OCM predictive calls. These commands are listed in the following section.

Commands for OCM predictive calls

Vectors that are intended for processing predictive calls must be designed in such a manner that the vectors are limited to the supported steps.

The following table lists vector commands available for processing OCM Predictive Calls and provides a brief comment for each command.

Commands for OCM predictive calls

Command	Comment
queue-to skill (single occurrence)	This command queues the call for handling by an agent in the skill pool.
announcement	This command plays an announcement if there are no agents available and if the queue (if any) is full.

Commands for OCM predictive calls

Command	Comment
stop	This command ends vector processing. The command also disconnects any call that is not queued.
adjunct routing	EAS supports adjunct routing to any of the following: skill extension, direct agent call, announcement, or local extension. The command does not involve routing to an external number.
wait-time	NOTE: This command is used with the adjunct routing step to determine how long the switch waits for an adjunct route before continuing with vector processing.

Queue Status Indications - Physical extensions can be administered with Queue Status Indicator buttons and lamps for skill hunt groups that operate in the same manner as split Queue Status Indicators for traditional ACD splits. As long as enough buttons are available, Queue Status Indicators can be administered for all skills that are needed by agents who are using that physical extension. Also, any waiting Direct Agent calls are not reflected in the queue status indicators.

Reason codes - With Reason Codes, an EAS agent can enter a numeric code that identifies his or her reason for entering AUX work mode, or for logging out.

Service Observing - Service Observing is activated in the EAS environment by dialing either the physical extension of the telephone where an EAS agent is logged in, or the EAS agent Login ID.

Remote Service Observing - Remote access to the Service Observing (SO) FACs can be provided by the Remote Access feature or through Service Observing vectors. See [Service Observing routing](#) on page 127 and [Creating Service Observing vectors](#) on page 237 for additional information.

VDN Override - If VDN Override is set to y (yes) on the previous VDN, the VDN skills of the current VDN are used. If VDN Override is set to n (no) on the previous VDN, the VDN skills of the previous VDN are used.

VuStats - VuStats can display information for all 20 agent skills.

Work mode buttons - Only a single set of agent work mode buttons is needed. If multiple buttons are assigned, all lamps for that work mode, for example, manual-in, light whenever any one button is pushed.

EAS adjunct interactions

This section describes adjunct interactions with the EAS feature.

ASAI interactions with EAS

ASAI support for EAS may be organized into the following categories: call control, feature requests, value queries, event notification, and adjunct-controlled skills. This section provides a high-level overview of the behavior of ASAI in the EAS environment.

Call control

Call control capabilities work exactly the same in the EAS environment as in the traditional ACD environment except for the following:

- User-classified third party make calls (calls classified by originator) may originate from an EAS Login ID and terminate to a Login ID. User-classified calls that terminate to a Login ID are given the same Direct Agent treatment that is provided for such calls that are dialed from a station extension.
- Switch-classified third party make calls, which are classified by a call classifier board and delivered (when answered) to the originating hunt group, may originate from or terminate to EAS Login IDs.
- Direct Agent third-party make calls, which are ACD calls that are terminated to a selected member of an ACD skill group, may be requested by including a Direct Agent option, an agent's physical extension and a skill group extension (compatibility mode), or by requesting a user-classified third-party make call with a Login ID destination. The primary differences between the two methods of requesting Direct Agent calls are that the compatibility mode allows the adjunct to specify the skill hunt group to which a given Direct Agent call is queued and that the noncompatibility mode allows the adjunct to direct the call to a Login ID, regardless of which station an agent is logged in to. Direct Agent third-party make calls may not originate from an EAS Login ID.
- Supervisor assist third party make calls, which are supervisor assist calls that are originated by a selected member of an ACD split, may originate from an EAS Login ID, and they may terminate to an EAS Login ID. Unlike dialed Direct Agent calls, supervisor assist calls that are terminated to a Login ID behave as though they have been previously directed to the requested Login ID's physical extension. For example, they do not cover if the requested agent is not logged in and if the originator's display shows the agent's physical extension and not the agent's Login ID.
- Extension (Domain) control may not be requested for an EAS Login ID, but it may be requested on behalf of a Logical Agent's physical extension. Auto-dial calls, which are

calls that are initiated by an extension-controlled station, may be terminated to an EAS Login ID, in which case the call is given Direct Agent treatment.

- Adjunct routing calls, which are vector calls that are routed by an ASAI adjunct by the **adjunct routing** Call Vectoring command, are similar to third party make calls. Such calls may include a Direct Agent option, an ACD agent's physical extension, and a skill extension. If this is true, these calls are given compatibility mode Direct Agent treatment and may be terminated to an EAS Login ID (in which case they behave like dialed Direct Agent calls).
- If EAS is optioned, ASAI launches OCM switch-classified or predictive calls from a VDN extension by the OCM/EAS feature. To launch a predictive call in a traditional ACD environment, an adjunct OCM application sends an ASAI request to the switch with an ACD split number as the originating number. The application also sends flags that identify the call as a switch-classified call. In the traditional ACD environment, the ACD split cannot be vector-controlled.

Feature requests

In the EAS environment, agent login, logout and change work-mode requests are fully supported. Agent login requests must contain an EAS Agent Login ID and optional password (delimited by '#') in the login request's user code IE. Agent logout requests and change work-mode requests may contain the desired agent's physical extension or Login ID. Call Forwarding and Send all Calls feature requests are denied for EAS Login IDs but may be requested for EAS physical extensions where an EAS agent is logged in.

Multiple monitors

Multiple Monitors provides the ability for up to three ASAI applications to monitor the same ACD Split or VDN domain.

This is helpful in environments where OCM is primary and it can also be used to add an OCM application to launch calls at off-peak times without disrupting the primary application in any way. Multiple Monitors can also be used to monitor an ACD split over 2 links in call environments where ASAI link failure recovery is important.

Value queries

Value queries function identically in the EAS and traditional environments, except that the Extension Type/Class Information Query returns a new indication that a requested extension is an EAS Login ID along with an indication of whether the Login ID is currently logged in and where, in other words, at which physical extension.

Event notification

Because all skill hunt groups are vector controlled, event notification may not be requested on the basis of a skill hunt group extension. Event notification may, however, be requested

on the basis of a controlling VDN extension. Generally, all event reports that involve EAS agents contain the agent's physical extension rather than the agent's Login ID.

Adjunct-controlled skills

Agents with adjunct-controlled skills are considered to be adjunct-controlled agents. Adjunct-controlled agents exhibit the same behavior as agents within adjunct-controlled splits in the traditional ACD environment. The following list provides more details:

- Stations are locked for all logged-in adjunct-controlled agents. The only action an agent can take from the station is to go on hook (or unplug the headset) from an auto-answer station, which causes the agent to be logged out.
- Stations are unlocked whenever the controlling adjunct's ASAI link stops functioning. Stations are locked again when the adjunct's link is reestablished.
- The adjunct controls all skill and agent activities such as login, logout, and change work-mode (with the exception of agent logout using the telephone hook).
- Only adjunct-controlled calls can terminate to the extension of an adjunct-controlled agent.
- Only adjunct-controlled calls can terminate to an adjunct-controlled skill hunt group extension.
- Adjunct-controlled EAS Agents can be administered with only one skill. Accordingly, EAS agents may not mix adjunct-controlled and non-adjunct-controlled skills.

AUDIX

Calls to the EAS Agent Login ID can cover to AUDIX. Each agent must enter his or her Agent Login ID when calling AUDIX to obtain messages.

AUDIX agents are assigned to EAS agent extensions. These Login IDs are used for CMS and BCMS tracking if the associated AUDIX skill hunt group is externally measured. The aut-msg-wt button or message waiting light can be used to indicate that the Login ID has a message.

An agent cannot have both AUDIX and non-AUDIX skills.

CMS

The following items apply to Avaya CMS Agent Tables:

- Separate Direct Agent database items starting with "DA_" are tracked.

- Standard reports combine statistics for Direct Agent calls and skill calls. However, reports can be customized to separate these statistical groupings.

The following is true for the CMS Skill Tables:

- Skill queues can be monitored for Direct Agent calls on the “Queue/Agent Summary” report.
- Direct Agent calls are not tracked.
- Agent time while on a Direct Agent call is tracked as “other” time.
- Non-ACD calls while in Direct Agent ACW are tracked.

The following item is true for the CMS VDN/Vector Tables:

- Direct Agent calls and skill calls are combined as ACD calls.

Speech-processing adjuncts

Speech-processing adjuncts that have a line interface to the communication server are able to initiate Direct Agent calls by dialing the Login ID for an agent.

Listing Agents Logged into a Split or Skill - When administering a split or skill, you can use the **list members hunt-group** command to verify that all agents are logged out and to identify any agents who are logged in. You can list all logged in agents for a split or skill, or limit the list to a range of login IDs or physical extensions:

- list members hunt-group <hunt group *nnn*>
- list members hunt-group <loginid *nnnn* to-loginid *nnnn*>
- list members hunt-group <ext *nnnn* to-ext *nnnn*>

For example, to list the agents logged in to skill 37:

1. Type **list members hunt-group 37** and press RETURN.

The List Hunt Group Members report screen appears.

```
list members hunt-group 37

                                HUNT GROUP MEMBERS

Group Number: 37      Group Name: Platinum Card      Group Extension: 3002
Group Type: ucd-mia      ACD? y      Skill? y      Members: 4

  Phys  Phys      Login Login      Agt      Per      Wrk
  Ext  Name      Ext  Name      Prf Lvl All SO DF Tim Occ
1: 1002 1002-Al MacInni 2902 Agent 2902 grt 04      y      10 33
2: 1022 1022-Kelly Chas 2901 Agent 2901 lvl 14      n      15 55
3: 1001 1001-Chris Pron 2904 Agent 2904 pal R2      n      0  0
4: 1021 1021-Maria Esta 2903 Agent 2903 pal 08 30 y 18 45
```

Note:

This screen shows a system using EAS and Avaya Business Advocate. For systems without either of these features, the related columns will be blank.

You can also use this command to list the agents *administered* in non-ACD hunt groups. However, since non-ACD hunt groups don't use agent logins the report will not identify agents who are currently active.

Upgrading to the EAS environment

For information on converting a contact center to EAS, refer to [Appendix M: Converting a contact center to EAS](#) on page 699.



Service Level Maximizer (SLM)

Service Level Maximizer (SLM) is an agent selection strategy that gives you the ability to allocate agent resources in a dynamic manner to better serve your specific call service goals. The SLM feature is available in Avaya Communication Manager 2.0, or later.

This section includes the following topics:

- [SLM operations](#) on page 454
- [SLM requirements](#) on page 461
- [SLM administration](#) on page 462
- [SLM reporting](#) on page 463
- [SLM feature interactions](#) on page 465

SLM operations

This section provides an overview of the SLM feature, and includes the following topics:

- [SLM agent selection method](#) on page 454
- [SLM target service levels and agent opportunity costs](#) on page 455
- [SLM benefits](#) on page 457
- [Auto reserve agents](#) on page 457
- [Agent selection rules in mixed skill environments](#) on page 458
- [Maximum Agent Occupancy \(MAO\)](#) on page 459

SLM agent selection method

Agent selection methods such as LOA and MIA are based on comparisons of the current levels of call activity for available agents. These methods are not able to discern differences between skills in terms of their current call service demands. When such agent-centric selection methods are used, call center managers require detailed knowledge about how call service demands vary from skill to skill so that they can assign agent resources to each skill as needed. Managers must also be alert to staffing exceptions and other transient or recurring conditions that can impact skill resource demands and require reassignment of agents from one skill to another.

To address such issues, the SLM feature provides an alternative agent selection process that is designed to:

- Compare the current service level for each SLM-administered skill to a user-defined call service level target and identify the skills that are most in need of agent resources to meet their target service level.
- Identify available agents and assess their overall opportunity cost, and select only those agents whose other skills have the least need for their service at the current time.

SLM target service levels and agent opportunity costs

The SLM agent selection method is based on user-defined *target service levels* for SLM-administered skills and the concept of *agent opportunity costs*.

Target service level - You define specific target service level goals for each SLM skill based on the following format:

SLM target service level = x percent calls answered in y seconds

For purposes of SLM reporting, estimates of service level compliance for a skill are expressed as the Actual service level Relative to the Target service level (ART). At any point in time, an SLM skill can be below, equal to, or above its specified target service level. For example, if a skill has a target service level of 80% of all calls answered within 20 seconds and the current service level is 75% of all calls to the skill answered within 20 seconds, then the current ART value is -5%. Alternately, if the current service level indicates that 90% of all calls are being answered within 20 seconds, then the current ART value is +10%.

For information about how to administer service target levels for a skill, see [SLM administration](#) on page 462 and for information about evaluation of skill service level data, see [Evaluating target service level compliance](#) on page 464.

Opportunity costs - SLM compares actual call service levels to target service levels for each SLM skill, so that when an incoming call arrives at a skill, service level data can be used as the basis to develop agent *opportunity cost* estimates. The opportunity cost for an agent at a given point in time is represented as a weighted estimate that considers the status of the agents skills relative to the target service levels of each skill.

The process that SLM uses to derive agent opportunity cost estimates can be summarized as follows:

- An incoming call arrives for an SLM skill and agents that are both assigned to that skill and currently available are identified.
- All skills to which the available agents are assigned are also identified. For each of the assigned skills (excluding the skill associated with the incoming call), a current service level estimate is calculated and compared to the target service level.

Note:

The opportunity costs for a single-skill agent is always equal to zero, since they can always be selected for an incoming call in their assigned skill with no impact on the service level status of any other skills.

- Based on the current overall service level for the skills of each available agent, SLM derives a weighted estimate that identifies which of the available agents is currently the least needed for their other assigned skills, where the *need* of a skill is (approximately) defined as the difference between the current service level and the target service level. This agent has the lowest overall opportunity cost.

Service Level Maximizer (SLM)

Because of the way that SLM estimates agent opportunity costs in the agent selection process, available agents whose skills are currently closest to matching their specified target service levels are selected first, while agents whose skills are furthest from matching their specified target service level are selected last. This strategy maximizes the possibility that an agent will be available when a call arrives at a skill whose target service level is at risk.

For example, consider a simplified scenario in which agents "A" and "B," are both assigned to Skill 4 as well as two other skills. When an incoming call arrives at Skill 4 and both agents are available, SLM compares the current service level to the target service level for each of the skills to which the agents are assigned. The agent who currently has the lowest opportunity cost is identified and selected to receive the incoming call in Skill 4.

The following table shows how the agent with the lowest opportunity costs is selected in two different call service level scenarios:

Note:

To simplify this example, the service level states for each skill are represented as ART values. The actual agent selection algorithms used by SLM are complex and do not rely directly on ART data.

Skill Assignments	SLM Skill 1	SLM Skill 2	SLM Skill 3	Skill 4 ¹ (Incoming Call)
Agent A	X	X		X
Agent B		X	X	X
	For Skill 1, if...	For Skill 2, if...	For Skill 3, if...	Then... Agent with lowest opportunity cost for incoming call is:
Scenario 1	ART ² = -5%	ART = +2%	ART = +2%	Agent B
Scenario 2	ART = -1%	ART = +5%	ART = -6%	Agent A

1. SLM agent opportunity cost estimates do not include service level data of the receiving skill for the incoming call.
2. ART = Actual service level relative to Target service level, where the service level is defined as x % calls answered in y seconds. For more information, see [Evaluating target service level compliance](#) on page 464.

SLM benefits

Because SLM is able to differentiate skills in terms of their current call service demands, it provides the following advantages over other agent selection methods:

- Since agent resource needs for each skill are assessed in real-time, you can use SLM to allocate agent resources to those skills that have the greatest call service demand in a dynamic manner, thereby reducing overall call response times.
- Potential problems associated with staffing exceptions, or fluctuating, intra-day call service demands are also reduced.
- SLM is especially useful for call center operations that are bound by contract or other legal obligation to meet specific service level requirements.

Auto reserve agents

SLM also allows you to specify *auto reserve* agents for a skill. When a skill that is administered to use auto reserve agents falls below its target service level, one or more agents (depending on how many you administered) are kept in idle in other skills until the service level for the auto reserve skill equals or exceeds its specified target service level.

This section includes the following topics:

- [Considerations for allocating auto reserve agents](#) on page 457
- [Rules for auto reserve agents](#) on page 458

For information about administration of the auto reserve option, see [SLM administration](#) on page 462. For information about how to use CMS reports to evaluate auto reserve operations, see [Evaluating auto reserve rates](#) on page 465.

Considerations for allocating auto reserve agents

Since auto reserve agents are kept idle in other skills, auto reserve agents should only be used in skills for which achievement of service level targets is considered to be critical. The addition of even a single auto reserve agent to a skill can have a significant impact on the service level that is realized. Therefore, Avaya recommends that you initially set the number of auto reserve agents on the Hunt Group form to 0 or 1, observe the impact on the service level, and if necessary, gradually increase the number of auto reserve agents by increments of one at a time until you have determined that your service level goals are reliably achieved.

Rules for auto reserve agents

For agents that are assigned to any skills that use the auto reserve option, the following rules apply when an agent becomes idle:

- If any of the auto reserve-enabled skills to which an agent is assigned are currently below their specified target service level, the agent is available only in those skills.
- The designation of auto reserve agents is continuously assessed as agents become available. If the maximum number of auto reserve agents is already in place, a single-skill agent who becomes available replaces the multi-skilled agent who has the lowest opportunity cost.
- If all of the auto reserve-enabled skills are currently below their specified target service level, a *multi-skill* agent is put into the auto reserve state if one of the following conditions are met:
 - The maximum number of auto reserve agents for the skill is not yet filled.
 - The maximum number of auto reserve agents for the skill *is* filled, but the opportunity cost for an idle, multi-skilled agent is higher than the opportunity cost of a multi-skilled agent who is currently in the auto reserve state. In this case, the agent with the lowest opportunity cost is released from the auto reserve state.

Agent selection rules in mixed skill environments

SLM skills can be co-resident on the system with skills that use other agent selection methods, such as LOA. However, situations may arise in which a skill is not administered as an SLM skill, but includes agents that are also assigned to one or more SLM skills. In such a mixed skill environment, the following rules apply:

- If a non-SLM administered skill does not include any agents who are also assigned to SLM skills, then agent selection is based on the agent selection method that is administered for that skill.
- If a non-SLM administered skill includes one or more agents who are also assigned to SLM skills, a current service level value of 100% is applied to the non-SLM skill for purposes of SLM service level and agent opportunity cost calculations.



Important:

In a mixed skill environment, the service level for non-SLM hunt groups should be administered so that it reflects the importance of the hunt group to your business. For example, if it is permissible for inbound callers to wait for longer amounts of time, you might set the service level to be 75% (of calls answered) in 180 seconds. In other cases, when an extended wait time is not expected, but target service level compliance is not critical, you might set the service level to be 45% in 15 seconds.

Maximum Agent Occupancy (MAO)

The Least Occupied Agent (LOA) and Most Idle Agent (MIA) methods attempt to maintain equitable agent occupancy rates based on time spent in call service. In contrast, SLM operations are driven solely by the needs of a skill in terms of meeting a specified target service level, and overall occupancy rates for individual agents are not a factor in the agent selection process. Instead, a Maximum Agent Occupancy (MAO) threshold can be used to achieve equitable agent occupancies and avoid "agent burnout" issues.

Note:

MAO can be used even when SLM is not active on the system.

The MAO threshold is a system administered value that is applied across all administered agents and is based on the total percentage of agent time in call service. MAO data is derived from the same calculations that are used to derive LOA.

When an agent who exceeds the specified MAO threshold attempts to become available, they are automatically placed in AUX mode for the reason code administered for this purpose. When the occupancy for such *pending* agents drops below the MAO, they are released from AUX mode and made available.

MAO considerations

You should understand the following items about MAO:

When to use MAO - MAO is designed to provide short work breaks for agents who have high occupancy rates and is recommended only for call centers that use SLM or otherwise have some agents with high occupancy rates. High occupancy agents tend to be those agents with the highest skill level, or single-skill SLM agents.

MAO is not intended for call centers whose agents are administered in a highly similar manner. The MAO threshold should be set to a value that is sufficiently high to avoid situations where large numbers of agents are simultaneously put into Auxiliary work mode.

Agent work mode interactions - If the agent has an aux work button administered for the MAO agent burnout mode, the lamp for that button indicates the mode. If the agent does not have an aux work button associated with the MAO code, an aux work button that has no reason code associated with it is lit. If the agent does not have an aux work button, or all available aux work buttons are already used for other reason codes, then no aux button lamp is lit. When the agent occupancy drops below the system administered maximum, the agent is put back into the available mode.

When an agent who is in the manual-in work mode exceeds the maximum administered occupancy threshold, they are put into after-call work mode after the current call drops. If the agent occupancy is still over threshold when they attempt to go available, the agent is put into the auxiliary work mode for MAO reason. An aux work button lamp is lit if there is

Service Level Maximizer (SLM)

a button associated with the MAO reason, or if another button that does not have a reason code associated with it is available. If the set has no aux work button, or all available aux work buttons are already used for other reason codes, then no lamp is lit. When the agent occupancy drops below the administered maximum, the agent is put back into manual-in mode.

Note:

An agent can override agent burnout state and return to an available mode prior to his occupancy dropping below the administered threshold by pushing the available button (or dialing a FAC) twice.

Manual override of MAO aux mode - If an agent wants to manually override the AUX code and leave the pending available state to make or receive an ACD call, they must do one of the following:

- Press the auto-in/manual-in button twice
- Enter the FAC code twice

Default AUX code for MAO pending state - On the System-parameters feature form, the default value in the Maximum Agent Occupancy AUX Reason Code field is set to 9. If reason code 9 is already being used to track other AUX time activities, agent time spent in the MAO pending state will be combined with time spent in those other activities. For this reason, you should designate an AUX time reason code solely for time spent in the MAO pending state, if it is possible to do so. For information about MAO administration, see [SLM administration](#) on page 462.



Important:

Avaya recommends that you do *not* use reason code 0 to track MAO Aux time.

Audix and VRU skills - If Audix and VRU skills are not administered as auto-available, the ports will enter the pending availability state when they exceed the specified MAO.

SLM requirements

SLM works on all platforms and operating systems that are supported by Avaya MultiVantage. SLM has the following licensing and system requirements:

- The Call Center Elite package must be purchased.
- The Call Center Release field on the system-parameters customer-options form must be set to 12.0 or later.
- To obtain CMS reports that include information related to SLM, you must use CMS version 12.0 or later. For more information about how to use CMS reports to evaluate SLM operations, see [SLM reporting](#) on page 463.
- SLM and Avaya Business Advocate cannot be simultaneously enabled on the system-parameters customer-options form. Therefore, SLM and Advocate can not both be used on the same system.

SLM administration

Administration of the SLM feature is relatively simple. This section lists the administration forms and settings that are required for SLM administration.

SLM administration - verify that SLM feature is enabled¹

Administration command:	display system-parameters customer options	
Page name:	Call Center Optional Features	
Required field(s):	Call Center Release	12 ²
	Business Advocate?	n
	Service Level Maximizer?	y
	Expert Agent Selection?	y

1. Contact your Avaya account representative if this form indicates that any of the required feature selections are not enabled.

2. Call center release 12 or later.

SLM administration - set skill Group Type, Service Level Target and Auto Reserve Agents

Administration command:	change hunt-group	
Page name:	Hunt Group	
Required field(s):	Group Type:	slm
	Service Level Target (% in sec):	_ in _ ¹
	Maximum Auto Reserve Agents:	___ ²

1. Default service level target values are set to 80% in 20 seconds.

2. The default value for this field is set to 0. Valid entries range from 0 to 9.

SLM administration - set Maximum Agent Occupancy for all SLM skills

Administration command:	change system-parameters features	
Page name:	Hunt Group	
Required field(s):	Group Type:	slm
	Maximum Agent Occupancy Percentage:	____ ¹
	Maximum Agent Occupancy Aux Reason Code:	____ ²

1. The default value for this field is set to 100%.

2. Aux reason code 9 is set as the default. A different reason code can be used for this purpose, but Avaya recommends that you do *not* use reason code 0.

SLM reporting

This section provides an overview of new Avaya CMS Supervisor report features that allow you to evaluate various aspects of SLM performance.

For detailed information about:

- CMS database items that are related to SLM or MAO, see *Avaya CMS Database Items and Calculations*, 585-780-702
- ART reports, see the Avaya CMS Supervisor R12 or later online help

This section includes the following topics:

- [Evaluating auto reserve rates](#) on page 465
- [Evaluating target service level compliance](#) on page 464
- [Evaluating MAO](#) on page 465

Evaluating target service level compliance

CMS R12 or later includes database items that you can use in CMS Supervisor R12 to evaluate how well your target service levels are met by SLM operations.

Note:

The service level used by the communication server to route calls is based on a prediction of a call being answered in the target service level. The service level calculated by CMS is the actual service level being achieved.

ART reports - Supervisor provides several types of Actual Relative to Target (ART) reports that compares actual service levels to target service levels and expresses the difference on a percent basis in a graphical format.

Note:

If your service level targets are based on contractual agreements, take care that your assessment of service level performance is based on a time frame (days, weeks, months) that is appropriate for the terms of your contract.

A percent value that exceeds zero means that actual service levels exceed the target, while percent values less than zero mean that the service level is not being achieved. When actual and target service levels correspond closely, the percent difference between the two data sets that are displayed in ART reports will tend to be close to zero, which is an indication that staffing levels are consistent with call service goals.

Service level calculations - Service level calculations can also be used to evaluate service level compliance. In R12 new database items have been added to track the number of calls answered (TARGETACDCALLS), abandoned (TARGETABNS) and outflowed (TARGETOUTFLOWS) within the service level administered on the communication server.

CMS uses the target service level that is administered on the communication server to generate these items. The advantage to using these items is that if the target service level is changed, CMS receives the new service level value and automatically adjusts how these items are computed. These items can be included in custom reports.

Note:

The existing CMS service level calculation can be used only if the acceptable service level on CMS Split/Skill Call Profile matches the Target Service Level administered on the communication server. If the target service level is modified on the communication server, the CMS service level must be manually modified to match that value.

Evaluating auto reserve rates

Avaya CMS Supervisor R12 or later includes a %Skills Available column in historical Agent Summary Reports. The %Skills Available value is 100% when an agent spends no time in the auto reserve state. All values less than 100% indicate agent time spent in the auto reserve state.

Evaluating MAO

Avaya CMS includes database items that you can use to verify that MAO is functioning properly. In CMS Supervisor R12 or later, the historical Agent Summary report includes two fields that can be used to evaluate MAO performance. Depending on how you treat after call work in agent occupancy calculations, inspect one of the following fields:

- % Agent Occup w/ACW
- % Agent Occup w/o ACW

If the agent occupancy percentage is less than or equal to the specified MAO percentage, then this is one possible indication that MAO is functioning properly. You can also review agent Aux time for the reason code that you assign for time spent in the MAO pending state.

Note:

It is possible for an agent to have an occupancy that exceeds the MAO threshold if a recent call caused the agent to exceed the MAO threshold and insufficient time has elapsed for the agent occupancy to adjust.

SLM feature interactions

Before you use SLM, you should understand the feature interactions described below.

Avaya Business Advocate - SLM and Avaya Business Advocate cannot both be enabled on the system-parameters customer-options form.

BCMS Reporting Desktop VuStats - If BCMS Reporting Desktop VuStats is used to display acceptable service level report data, the displayed value is identical to the "seconds" value that is set in the Target Service Level (% in sec) field on the Hunt Group form.

Service Level Maximizer (SLM)

For more information about administration of SLM skills, see [SLM administration](#) on page 462.

Best Service Routing - With BSR, the best resource choice (among the local skills and best skills of the remote sites) is based on the lowest adjusted EWT or assigned available agent strategy rule. This rule does *not* consider service level targets that may be assigned to individual skills. However, when an SLM skill is selected as the best resource, the available agent selection *is* based on the specified service level target for the skill. Therefore, service level objectives are maintained within the local or remote skills but not across sites.

Direct agent calls - For Agents who are assigned to SLM skills and eligible to receive direct agent calls, direct agent calls have priority over ACD calls.

Least Occupied Agent - SLM does not use LOA as an agent selection method.

Non-SLM Skills - Agents that have at least one assigned SLM skill will ignore their administered call handling preference (CHP) and will be treated as if their call handling preference is set to s lm. The non-SLM skills will be treated as if they are always at service level when it comes to agent and call selection. For more information, see [Agent selection rules in mixed skill environments](#) on page 458.

Greatest Need - Greatest Need is not used when SLM is enabled, since call selection is driven by the target call service levels that are administered for each SLM skill.

RONA - Redirected calls are considered in the service level calculations of any SLM skill to which they are sent.

■ ■ ■ ■ ■ ■

Appendix A: Call Vectoring commands

This appendix provides information about the commands used in Call Vectoring, including:

- A table that lists the Communication Manager options that are required to enable various vector commands
- A table that contains a brief description of each command's function and also the appendix page where the command can be referenced
- A job aid tables that graphically illustrate how to use the Call Vectoring commands
- A manual page directory that details the purpose and function of the Call Vectoring commands and also any relevant interactions involving the commands

About Communication Manager contact center packages

Some Call Vectoring commands require various software to be enabled. The features required to enable vector commands are included in the following Avaya Communication Manager Contact Center packages:

- Avaya Contact Center Deluxe
- Avaya Contact Center Elite

Most of the features required to fully enable vector commands are included in the Avaya Contact Center Deluxe package. To use skill options associated with some vector commands, the Avaya Expert Agent Selection (EAS) feature must be enabled. The EAS feature is included in the Avaya Contact Center Elite package. When a vector command requires the EAS feature, the requirement is noted.

In addition, other vector commands require Virtual Routing, which activates Look-Ahead Interflow. Other commands are available with non-contact center right-to-use (RTU) offerings, such as AutoAttendant, which activates Prompting.

Communication Manager options required to enable vector commands

The following table lists the options that are required to enable various vector commands, options, and parameters.

Vector commands / required options summary

Command	Basic	Prompting	Attendant	Other Options Required
adjunct routing	x			ASAI
announcement	x	x		
busy	x			
check best	x			ACD; G3V4 Advanced Routing; Best Service Routing

Vector commands / required options summary (continued)

Command	Basic	Prompting	Attendant	Other Options Required
check split/skill if <condition>	x			ACD
check split/skill if rolling-asa	x			ACD; G3V4 Enhanced; G3V4 Advanced Routing
check split/skill if expected-wait	x			ACD; G3V4 Enhanced; G3V4 Advanced Routing
check best if expected-wait	x			ACD; G3V4 Enhanced; G3V4 Advanced Routing; BSR
check split/skill if oldest-call-wait pri	x			ACD; G3V4 Enhanced
check split/skill/best if wait-improved	x			ACD; G3V4 Advanced Routing; Best Service Routing
collect digits		x		
collect ced/cdpd digits		x		Vectoring (CINFO)
consider location	x			ACD; G3V4 Advanced Routing; Best Service Routing; Look-Ahead Interflow ¹
consider split/skill	x			ACD; G3V4 Advanced Routing; Best Service Routing
converse-on split/skill	x			
converse-on split/skill passing wait	x			ACD; G3V4 Enhanced; G3V4 Advanced Routing
disconnect	x		x	
disconnect after announcement <extension>	x		x	
goto step/vector if unconditionally	x	x		
goto step/vector if <condition> in split/skill	x			ACD
goto step/vector if digits		x		

Vector commands / required options summary (continued)

Command	Basic	Prompting	Attendant	Other Options Required
goto step/vector if time-of-day	x			
goto step/vector if oldest-call-wait pri	x			ACD; G3V4 Enhanced
goto step/vector if rolling-asa	x			ACD; G3V4 Enhanced; G3V4 Advanced Routing
goto step/vector if expected-wait	x			ACD; G3V4 Enhanced; G3V4 Advanced Routing
goto step/vector if expected-wait for best	x			ACD; G3V4 Enhanced; G3V4 Advanced Routing; Best Service Routing
goto step/vector if counted-calls	x			G3V4 Enhanced; G3V4 Advanced Routing
goto step/vector if ani	x			G3V4 Enhanced; G3V4 ANI/II-Digits Routing
goto step/vector if ii-digits	x			G3V4 Enhanced; G3V4 ANI/II-Digits Routing
goto step/vector if wait-improved	x			ACD; G3V4 Advanced Routing; BSR
goto step/vector if interflow-qpos	x			ACD; Look-Ahead Interflow ¹
goto step/vector if queue fail			x	
goto step/vector if holiday in/not-in table	x		x	Holiday Vectoring
messaging split/skill	x	x		
messaging split/skill active/latest²	x	x		
queue-to best	x			ACD; G3V4 Advanced Routing; Best Service Routing
queue-to split/skill	x			ACD
queue-to attd-group				Attendant Vectoring
queue-to attendant				Attendant Vectoring

Vector commands / required options summary (continued)

Command	Basic	Prompting	Attendant	Other Options Required
queue-to hunt group				Attendant Vectoring
reply-best	x			ACD; G3V4 Advanced Routing; Best Service Routing; Look-Ahead Interflow ¹
route-to number	x			
route-to digits with cov y (n)		x		
route-to number if digit		x		
route-to number if unconditionally with cov y (n)²	x	x		
route-to number if digit with cov y (n)²		x		
route-to number if unconditionally	x	x		
route-to number if interflow-qpos	x			ACD, Look-Ahead Interflow ¹
stop	x	x		
wait-time <time>	x	x	x	
wait-time <time> hearing <treatment>	x	x	x	
wait-time <time> hearing <extn> then <treatment2>	x	x	x	

1. Provided with Virtual Routing RTU (right to use).

2. If G3V4 software has not been purchased, these commands require the G3V4 maintenance load.

Command description/reference

The following table provides a brief description of the function of each of the Call Vectoring command. See the listed page number for a complete description of the command.

Command description/reference table

Command	Function
Adjunct routing command on page 483	To request adjunct to route call.
Announcement command on page 490	To connect caller to delay recording.
Busy command on page 492	To connect caller to busy tone.
Check command on page 494	To connect/queue call on a conditional basis.
Collect Digits command on page 498	To prompt caller for digits.
Consider command on page 503	To obtain BSR status data from a local split/skill or a remote location
Converse-on command on page 507	To deliver a call to a converse split/skill and to activate a Voice Response Unit (VRU).
Disconnect command on page 516	To force disconnect of call with optional announcement.
goto step and goto vector commands on page 518	To cause unconditional/conditional branch to another step in the vector.
Messaging command on page 525	To allow caller to leave message for callback.
Queue-to command on page 528	To connect/queue call to the primary split/skill or to the best resource (or, with Attendant Vectoring, attendant, attendant group, or hunt-group) found by a consider series.
Reply-best on page 532	To send BSR status data to the primary vector in a multi-site application
Route-to command on page 534	To connect call to destination entered via collect digits command, or to connect call to internal/external destination.

Command description/reference table (continued)

Command	Function
Stop command on page 542	To stop further vector processing.
Wait-time command on page 543	To initiate feedback to caller (if needed) and delay processing of the next step.

Command job aid

The vector command job aid shown below lists the Call Vectoring commands, together with the various conditions, and parameter options and values that are available for use with each command.

Obtaining switch capacity information

Most vector commands require one or more input values for the command, as well as for various parameters, such as an announcement extension number, a time interval, a maximum queue size, and so forth. When the minimum and maximum ranges for command parameter values are identical for all Avaya switch platforms, the limiting ranges are specified in the job aid. Alternately, when the minimum and maximum ranges for a parameter value are not the same among the among Avaya switch platforms, the upper limit of a value range is indicated by the term "switch max."

To determine the maximum values you can use in Call Vectoring commands, see *System Capacities Table for Avaya Communication Manager on Avaya Media Servers*, 555-245-601. To access the document online, go to:

<http://avayadocs.com>

Call Vectoring commands

Vector command job aid

Command		Parameters / Conditions	
adjunct routing link ____		CTI-link ID 1 to 16	
announcement _____		extension no.	
busy			
check			
best	if _____		
	expected wait	< 1 to 9999 seconds	
	unconditionally		
	wait improved	> 0 to 9999 seconds	
skill _____	pri ____	if _____	
1 to switch max or	low-priority	available-agents	> 0 to 1499 ¹
1st, 2nd, 3rd VDN	medium-priority	calls-queued	< 1 to 999 ¹
skill	high-priority	expected-wait	< 1 to 9999 seconds
(EAS-only)	top-priority	oldest-call-wait	< >1 to 999 seconds
		rolling-asa	< 1 to 999 seconds
		staffed-agents	> 0 to 1499 ¹
		wait-improved	> 0 to 9999 seconds
		unconditionally	
split _____	pri ____	if _____	
1 to switch max	low-priority	available-agents	> 0 to 1499 ¹
	medium-priority	calls-queued	< 1 to 999 ¹
	high-priority	expected-wait	< 1 to 9999 seconds
	top-priority	oldest-call-wait	<=> 1 to 999 seconds
		rolling-asa	< 1 to 999 seconds
		staffed-agents	> 0 to 1499 ¹
		wait-improved	> 0 to 9999 seconds
		unconditionally	
collect ____ digits			
ced or cdpd			
1 to 16 digits	after announcement _____	for _____	
	extension no. or "none"	"none" or A to Z ²	

Vector command job aid (continued)

Command		Parameters / Conditions	
consider ____			
location ____ 1 to 255 (multi-site BSR only) ³	adjust by ____ 0-100 percent		
skill ____ 1 to switch max or 1st, 2nd, 3rd VDN skill (EAS only)	pri ____ low-priority medium-priority high-priority top-priority	adjust by ____ 0- 100 percent	
split ____ 1 to switch max	pri ____ low-priority medium-priority high-priority top-priority	adjust by ____ 0- 100 percent	
converse-on			
skill ____ 1 to switch max 1st, 2nd, 3rd VDN skill (EAS only)	pri ____ low-priority medium-priority high-priority top-priority	passing ____ and ____ 6-digit string, "*" , "#" , "none" ⁴ , "ani", "vdn", "digits", "qpos", "wait"	
split ____ 1 to switch max	pri ____ low-priority medium-priority high-priority top-priority	passing ____ and ____ 6-digit string, "*" , "#" , "none" ⁴ , "ani", "vdn", "digits", "qpos", "wait"	
disconnect	after announcement ____ extension no. or "none"		

Call Vectoring commands

Vector command job aid (continued)

Command	Parameters / Conditions		
goto			
step	_____		
	1-32		
	or		
vector	_____		
	1 to switch max		
if			
ani	_____	_____	
<,>,<=,>=,<>=		1 to 16 characters including digits (0-9), "?" , "+" "none" ⁵	
in, not-in	table	_____	
	1 to 100 ¹		
available-agents			
in skill	_____	_____	_____
1 to switch max, or		>,>=,<>=	0 to 1499 ¹
1st, 2nd, or 3rd for VDN Skill		<,<=	1 to 1500 ¹
			or A to Z ²
in split	_____	_____	_____
1 to switch max		>,>=,<>=	0 to 1499 ¹
		<,<=	1 to 1500 ¹
			or A to Z ²
calls-queued			
in skill	_____	pri	_____
1 to switch max, or		low-priority	>,>=,<>=
1st, 2nd, or 3rd		medium-priority	<,<=
for VDN Skill		high-priority	
(EAS-only)		top-priority	
in split	_____	pri	_____
1 to switch max		low-priority	>,>=,<>=
		medium-priority	<,<=
		high-priority	
		top-priority	
counted-calls	to vdn	_____	_____
	vdn	>,>=,<>=	0 to 998 ¹
	extension,	<,<=	1 to 999 ¹
	"latest" or		or A to Z ²
	"active" ⁶		
digits	_____	_____	
<,>,<=,>=,<>=		1-16 digits, including 0-9,	
		"#", "?" , "+" , A to Z ² , or "none" ⁵	
=		meet-me-access ⁷	
in, not-in	table	_____	1 to 100 ¹

Vector command job aid (continued)

Command	Parameters / Conditions				
goto step (or vector) (continued)					
if (continued)					
expected-wait					
for ____ best, call for ____ split for ____ skill (EAS-only) ____ <,>,<=,>=<,>= ____ 1 to switch max ____ 1 to switch max, 1st, 2nd, 3rd skill for VDN ____ 0-9999 seconds pri ____ low-priority medium-priority high-priority top-priority ____ >,>=<,>= <,<= ____ 0 to 9998 sec 1 to 9999 sec or A-Z² pri ____ low-priority medium-priority high-priority top-priority ____ >,>=<,>= <,<= ____ 0 to 9998 sec 1 to 9999 sec or A-Z²					
holiday ____ in, not-in table ____ 1-10					
ii-digits ____ <,>,<=,>=<,>= ____ in, not-in ____ 2-digit string, "+", "?", A to Z², or "none"⁵ table ____ 1 to 100¹					
interflow-qpos ____ >,>=<,>= <,<= ____ 0-8 1-9 or A-Z²					
meet-me-full⁷ (goto step, only) meet-me-idle⁷ (goto step, only)					
no match ⁸					

Call Vectoring commands

Vector command job aid (continued)

Command	Parameters / Conditions			
goto step (or vector) (continued)				
if (continued)				
oldest-call-wait				
	in skill _____ 1 to _____ switch max, or 1st, 2nd, 3rd, skill for VDN (EAS-only)	pri _____ low-priority medium-priority high-priority top-priority	_____ >, >=, < >, = <, <=	_____ 0 to 998 sec 1 to 999 sec or A to Z ²
	in split _____ 1 to switch max	pri _____ low-priority medium-priority high-priority top-priority	_____ >, >=, < >, = <, <=	_____ 0 to 998 sec 1 to 999 sec or A to Z ²
queue-fail ⁹				
rolling-asa for _____				
	skill (EAS-only)	_____ 1 to switch max, or 1st, 2nd, 3rd skill for vdn	_____ >, >=, < >, = <, <=	_____ 0-998 seconds 1-999 seconds or A to Z ²
	split	_____ 1 to switch max	_____ >, >=, < >, = <, <=	_____ 0-998 seconds 1-999 seconds or A to Z ²
	vdn	_____ vdn extension, "latest" or "active" ⁶	_____ >, >=, < >, = <, <=	_____ 0-998 seconds 1-999 seconds or A to Z ²
staffed-agents				
	in skill _____ 1 to switch max, or 1st, 2nd, 3rd skill for vdn		_____ >, >=, < >, = <, <=	_____ 0 to 1499 ¹ 1 to 1500 ¹ or A to Z ²
	in split _____ 1 to switch max		_____ >, >=, < >, = <, <=	_____ 0 to 1499 ¹ 1 to 1500 ¹ or A to Z ²
time-of-day	is _____	to _____	_____	_____
	mon-sun, "all"		mon-sun, "all"	
	00-23 hour		00-23 hour	
	00-59 minute		00-59 minute	

Vector command job aid (continued)

Command	Parameters / Conditions			
goto step (or vector) (continued)				
if (continued)				
wait-improved for	_____	_____	_____	
	best	>, >=, <>, = <, <=	0 to 9998 seconds 1 to 9999 seconds or A to Z ²	
	skill _____ 1 to switch max, or 1st, 2nd, 3rd skill for vdn (EAS-only)	pri _____ low-priority medium-priority high-priority top-priority	>, >=, <>, = <, <=	0-9998 1-9999 or A to Z ²
	split _____ 1 to switch max	pri _____ low-priority medium-priority high-priority top-priority	>, >=, <>, = <, <=	0-9998 1-9999 or A to Z ²
unconditionally				
messaging				
	skill _____ 1 to switch max, or 1st, 2nd, 3rd skill for vdn (EAS-only)	for extension _____ extension no., "latest" or "active" ⁶		
	split _____ 1-switch max	for extension _____ extension no., "latest" or "active" ⁶		

Call Vectoring commands

Vector command job aid (continued)

Command	Parameters / Conditions			
queue-to				
	attd-group ⁹			
	attendant ⁹ _____ extension no.			
	best			
	hunt-group ⁹ _____ 1 to switch max	pri _____ low-priority medium-priority high-priority top-priority		
	skill _____ 1 to switch max, or 1st, 2ns, 3rd skill for vdn (EAS-only)	pri _____ low-priority medium-priority high-priority top-priority		
	split _____ 1 to switch max	pri _____ low-priority medium-priority high-priority top-priority		
reply-best (multi-site BSR only) ³				
route-to				
	digits	with coverage _____ yes or no	_____ >, >=, <>, = <, <=	_____ 0-8, 1 to 9, #
	meetme ⁷			
	number _____ 0-9, *, #, ~p, ~m, ~s, ~w, ~W, or a leading ~r ¹⁰	with cov _____ yes or no	if _____ digit	
			interflow-qpos unconditionally	_____ <, =, <= 1-9
	name1 ⁸	with coverage _____ yes or no		
	name2 ⁸	with coverage _____ yes or no		
	name3 ⁸	with coverage _____ yes or no		
stop				

Vector command job aid (continued)

Command	Parameters / Conditions		
wait-time			
		hearing	
0-999	secs		music, ringback,
0-480 ¹¹	mins		silence, i-silent
0-8 ¹¹	hrs		
		or	
		audio source ext.	then music, ringback,
			silence, continue ¹²

1. Maximum limit less on some platforms. Use the help key for your switch administration software to determine the applicable limit for your system.
2. This item available with **Variables in Vectors** feature, only.
3. This item available with the Virtual Routing feature, only.
4. If the first "passing" value is entered as **"none"** the second value must also be entered as **"none."**
5. The question mark (?) is a wild card that matches any digit (0-9) at the specified position. The plus sign (+) matches any or no characters at the specified position.
6. **"Active"** refers to the VDN specified by VDN Override settings. **"Latest"** refers to the VDN specified for the current vector.
7. This item available with **meet-me conference** vectors, only.
8. This item available with Dial by Name feature, only.
9. This item available with Attendant Vectoring feature, only.
10. When the specified number is preceded by ~r, Network Call Redirection is attempted.
11. This option is not available for vector administration done through Avaya CMS or Visual Vectors.
12. **Continue** is only a valid treatment with Multiple Audio/Music Sources. It indicates that the caller will continue to hear the alternate audio/music source (using an announcement) until another vector command takes effect.

Command directory

The manual page directory in this section lists and discusses all of the Call Vectoring commands:

- [Adjunct routing command](#) on page 483
- [Announcement command](#) on page 490
- [Busy command](#) on page 492
- [Check command](#) on page 494
- [Collect Digits command](#) on page 498
- [Consider command](#) on page 503

Call Vectoring commands

- [Converse-on command](#) on page 507
- [Disconnect command](#) on page 516
- [goto step and goto vector commands](#) on page 518
- [Queue-to command](#) on page 528
- [Reply-best](#) on page 532
- [Route-to command](#) on page 534
- [Stop command](#) on page 542
- [Wait-time command](#) on page 543

Adjunct routing command

Purpose

The **adjunct routing** command causes a message to be sent to an adjunct requesting routing instructions.

Syntax and valid entries

Command	Parameters / Options
adjunct routing	link ____ CTI-link ID (1-16)

Requirements

ASAI software must be installed.

An ISDN-BRI or MAPD port is required, and the port must be connected to an ASAI host.

Operation

The **adjunct routing** command provides a means for an adjunct ASAI processor to specify the destination of a call. The switch provides information in an ASAI route request message that the ASAI adjunct can use to first access a data base and then determine a route for the call. In a typical application, the ASAI adjunct might use the dialed number, the calling party number (CPN/BN), or the digits collected via Call Prompting or Caller Information Forwarding (CINFO) to access customer information and thereby determine the call route. A maximum of 16 digits collected from the last **collect digits** command can be passed.

An adjunct specified in an **adjunct routing** command can route a call to an internal number, an external number, a split, a VDN, an announcement extension, or a particular agent. An adjunct can also provide priority ringing, priority queuing, and specify that a route to an agent be done as a direct agent call.

When a call encounters an **adjunct routing** command, the switch sends to the specified adjunct an ASAI message requesting a call route. The following list identifies the contents of the message, along with a comment or a brief explanation for each item:

- Calling number information. Calling party number or billing number (CPN/BN) provided by ISDN-PRI or R2MFC signaling facilities. If the call originates from a local switch extension, this extension is the calling number.

Call Vectoring commands

- Originating line information (II-digits). Two-digit code provided by ISDN-PRI facilities indicating the type of originating line being used.
- Called number. Originally called extension (if a call is forwarded to a VDN), or the first VDN through which the call was routed (if the call was not forwarded to the VDN).
- Routing **VDN**. Last VDN that routed the call to the vector that contains the **adjunct routing** command.
- Call identifier. ASAI identifier that permits the ASAI adjunct to track multiple calls via either Event Notification or Third Party Call Control. See *Avaya MultiVantage CallVisor ASAI Technical Reference*, 555-230-221 for more information on ASAI.
- Look-Ahead Interflow (LAI) information (if any). Includes the original VDN display information, the priority level of the call at the originating switch, and the time that the call entered vector processing.
- Digits collected via Call Prompting (if any). Digits are collected by the most recent **collect digits** command. These could be CINFO digits, but if so it will not be indicated by ASAI. See [Call Prompting](#) on page 225 for more information.
- User-to-User Information (if any). ASAI user-provided data associated with the call. If provided by ASAI, this data was provided in a 3rd-Party-Make-Call, Auto-Dial, or Route-Select message. If provided over ISDN, the data was in the SETUP message that delivered the call to this switch.

The **wait-time hearing i-silent** command is used in cases where it is important to allow the adjunct to decide whether to accept an incoming ISDN-PRI call. When this step is encountered after an **adjunct routing** step, the switch does not return an ISDN PROGRESS message to the originating switch. This is particularly important for Network ISDN features and for the LAI feature.

If the call is queued, the **adjunct routing** step is ignored, and vector processing continues at the next vector step.

If the ASAI link specified in the **adjunct routing** step is down, the step is skipped.

An ASAI link failure can change the manner in which subsequent treatment (that is, **announcement** and/or **wait-time**) steps (if any) in the vector are usually processed. In some cases, such processing is influenced by the position that the treatment steps occupy in the vector. In other cases, the positioning of these commands along with their relationship to specific **goto** commands come into play. For example, any **announcement** or **wait-time** step that immediately follows an **adjunct routing** step whose ASAI link is down is skipped.

The second step after the **adjunct routing** step is often implemented as a default treatment (for example, a route-to an attendant). If the ASAI link is down, the default step executes immediately. Otherwise, the step executes only if the application does not respond with a route within the time period specified by the **wait-time** step.

On the other hand, if a **goto** step follows an **adjunct routing** step, the switch executes the **goto** step and then skips various treatment steps according to their position in the vector, and the conditional determination of the **goto** step. Specifically, if the **goto** step

succeeds and the branch is taken, the switch skips any **announcement** or **wait-time** step that is the first non-**goto** step branched to by the **goto** step.

Note:

The first step to which a **goto** step is usually designed to branch (other than another **goto** step) is a nontreatment step. That is, a step containing a command other than a **wait-time** or an **announcement** command).

Alternately, if the **goto** step fails and the branch is not taken, the switch skips any **announcement** or **wait-time** step that immediately follows the **goto** step if the application is down.

Note:

The **goto** step that fails can be at the end of a sequence of **goto** steps that branch to each other.

After the switch sends a route request to the ASAI adjunct, vector processing continues with the vector steps that follow.

The step that follows the **adjunct routing** step, in effect, determines the maximum length of time the switch will wait for the ASAI adjunct to reply with a call route. Accordingly, you should always include either a **wait-time** step or an **announcement** step immediately after an **adjunct routing** step. Moreover, the switch cancels the route request if vector processing encounters a step containing any of the following commands:

- **busy**
- **check split**
- **collect digits**
- **converse-on split**
- **disconnect**
- **messaging split**
- **queue-to split**
- **route-to**

Note:

Multiple adjunct routing steps can follow each other in sequence. Each step activates a separate adjunct route request. Any intervening vector commands (or blank steps) between two adjunct routing commands cancels any previous route-to requests.

If a valid call route is received by the server via a route-select message before one of the vector commands in the previous list is executed, the server routes the call to the destination specified by the adjunct route. Otherwise, the route request is terminated without affecting vector processing.

The adjunct can also decide to not route a call by rejecting (negatively acknowledging) the route request sent by the server, or the link/application can go down. Upon receiving a

Call Vectoring commands

route request rejection, or detection of a link/application failure, the server terminates the **announcement** or **wait-time** step that is being executed for the call and then continues with the next vector step.

When the server receives a call route (route-select to a destination) from the ASAI adjunct, the server first validates the route as follows:

1. The server verifies that the VDN's COR permits the call to be terminated at the adjunct-supplied destination.
2. The server verifies that the adjunct-supplied information (destination number, ACD split, TAC/AAR/ARS access code, etc.) for the route is valid. This includes checking that the destination is compatible with the dial plan, and that the options specified by the adjunct are correct.
3. If the ASAI adjunct specifies the Direct Agent Call (DAC) option, the destination number (agent) must be logged into the adjunct-specified ACD split.
4. If the destination for the call is external, the server verifies the trunk is available for the call.

If any of these conditions are not met, the route validation fails, and the server does the following:

1. Discards the route.
2. Notifies the ASAI adjunct that the route is invalid.
3. Continues with vector processing.

If the route is valid, the server does the following:

1. Terminates vector processing immediately.
2. Notifies the ASAI adjunct that the route is accepted.
3. Routes the call to the destination specified by the ASAI adjunct.

When the call is routed, the caller hears normal call progress tones and feedback. However, if the call is routed to an extension with no available call appearances and no coverage path, the caller hears the busy tone. Any other features that may be in effect at the adjunct-supplied destination (such as Send-All-Calls or Call Forwarding) interact with the routed call.

Note:

The operation described above is similar to that for the **route-to with coverage set to yes** commands.

Answer supervision considerations

The command has no interaction with answer supervision.

If adjunct routing is used with ISDN-PRI, then an **adjunct routing** command followed by a **wait-time hearing silence** signals the originating server that the receiving server has accepted the call (for Lookahead Interflow), even though answer supervision

has not been provided. To prevent this from occurring, use the **wait-time hearing i-silent** option after the **adjunct routing** step.

Feature interactions

For a call coming in directly to a VDN, the command is treated like a **route-to** command that has the **with cov** or **with coverage** parameter set to **y**.

Note:

If the Display VDN for Route-to DAC option is enabled for the VDN, the name of the VDN is displayed at the agent station for a call that is routed through an adjunct. For more information, see [Displaying VDN names for vector-initiated Direct Agent calls](#) on page 558.

For a call that is covered to a VDN, the command is treated like a **route-to with coverage=n** command. A covered call that is routed by an **adjunct routing** command to a destination that has Call Forwarding activated is not further redirected (since the call has already been redirected by coverage).

For LAI or Network ISDN features, the adjunct routing command is considered a neutral vector command in all cases. However, the command is usually followed by an **announcement** or **wait-time** command, each of which is a call acceptance command. The G3V4 **wait-time hearing i-silent** command can be used when a neutral **wait-time** command is required to allow the adjunct to accept or reject the call.

If an **announcement** command follows a failed **adjunct routing** command, the announcement is interrupted. If the **adjunct routing** command succeeds (that is, the server receives a destination from the ASAI adjunct), the announcement terminates immediately.

If an ASAI adjunct has supplied dial-ahead digits for a **collect digits** step, and the vector processes a **collect ced digits** or **collect cdpd digits** step, the ASAI supplied dial-ahead digits are discarded without notification to the adjunct.

If a TTR is connected to a call because an ASAI adjunct has requested digit collection, and the vector processes a **collect ced digits** or **collect cdpd digits** step, the TTR is disconnected from the call.

CMS interactions

Adjunct routing attempts are stored in the ADJATTEMPTS database item and reported as Adjunct Routing Attempts in standard reports. If the call is queued to a split/skill when the **adjunct routing** command is encountered, the step is skipped, and no messages are sent to CMS. Accordingly, Adjunct Routing Attempts is not reported for this call.

When a routing response from the adjunct is successfully executed by the server, this action is tracked in the ADJROUTED and ADJROUTTIME database items and shown as Adjunct Routing Completions in standard reports.

Call Vectoring commands

Additional tracking of the **adjunct routing** command varies based on the destination successfully routed to as follows:

Routed to station or to attendant		
Database item	Report Heading	Notes
OUTFLOWCALLS/ OUTFLOWTIME	Vector Flow Out	
INTIME	Avg Time In Vector	
CONNECTCALLS/ CONNECTTIME	Other Calls Connect	answered calls on R5

Routed to trunk		
Database item	Report heading	Notes
OUTFLOWCALLS/ OUTFLOWTIME	Vector Flow Out VDN Flow Out	
INTERFLOWCALLS/ INTERFLOWTIME	VDN Flow-Interflow	
INTIME	Avg Time In Vector	

Routed to VDN		
Database item	Report heading	Notes
OUTFLOWCALLS/ OUTFLOWTIME	Vector Flow Out VDN Flow Out	
INTIME	Avg Time In Vector	
INFLOWCALLS	Vector Flow In VDN Flow In	new vector new VDN

Routed to split or to hunt group		
Database item	Report heading	Notes
CALLSOFFERRED		new split
LOWCALLS/MEDCALLS		no priority/priority

Split/skill calls are also shown in the standard reports based on the final disposition of the call.

The presence of the command in a vector enables the calls serviced by the vector to be vector-directed. When such a call is answered by an agent, the call is tracked as ACDCALLS/ANSTIME, and it is reported as ACD Calls, Split/skill ACD Calls, and Avg Speed Ans.

A call abandoned after the command routes the call to a station or an attendant is tracked in the VDN tables as ABNCALLS/ABNTIME.

BCMS interactions

If the command advances a call to another position (that is, ASAI routing is successful), the call is tracked as outflow in the VDN Report.

Announcement command

Purpose

Provides the caller with a recorded announcement.

Syntax and valid entries

<code>announcement _____</code> valid extension no.

Requirements

Integrated board, aux trunk or analog (T&R or Lineside DS1) announcement equipment must be installed.

Appropriate announcements need to be administered and recorded. For more information, see “Managing Announcements” in *Administrator Guide for Avaya Communication Manager*, 555-233-506.

Operation

The announcement is played from beginning to end unless an agent becomes available. In such a case, the announcement is interrupted and (if manual answering operation is assigned to the agent, or if calls are delivered to the agent on a manual answering basis) ringback is provided. If the call is queued, the call remains as such while the announcement is played. Any feedback that is provided before an announcement (for example, a wait with music or ringback) continues until the announcement is played.

If the announcement’s queue is full, the call retries the announcement step for an indefinite period of time before any new vector steps are processed.

If an **announcement** command follows a failed **adjunct routing** command, the announcement is interrupted. If the **adjunct routing** command succeeds (that is, the server receives a destination from the ASAI adjunct), the announcement terminates immediately.

The **announcement** command step is skipped, and vector processing continues at the next vector step, whenever any of the following conditions exist:

- Requested announcement is busied out, not available, or not administered.
- Integrated board is not installed.

- External aux trunk or analog equipment is not attached.

For a complete description of the types and operation of announcements see “Managing Announcements” in *Administrator Guide for Avaya Communication Manager*, 555-233-506.

Answer supervision considerations

Unless answer supervision has already been sent, it is sent as soon as the command starts to process the call (even before the announcement starts).

Feature interactions

For LAI, the command may be considered a call acceptance vector command or a neutral vector command.

The command is considered a call acceptance vector command whenever one of the following is true:

- Announcement is available.
- Call is queued for an announcement.
- Announcement is retried.

The command is considered a neutral vector command whenever the announcement is unavailable.

CMS/BCMS interactions

The command is not tracked by CMS or BCMS.

Busy command

Purpose

The **busy** command gives the caller a busy signal and causes termination of vector processing.

Syntax

busy

Requirements

No special requirements.

Operation

The command takes effect on non-CO trunk calls whether or not answer supervision has been sent. However, if the call is on a CO trunk and answer supervision has not been sent, the busy is not passed back by the CO, and the caller continues to hear ringback from the CO. Calls are dropped approximately 45 seconds after the busy tone is applied.

If ISDN-PRI is involved, the application of the busy tone is enabled via D-channel messaging. The network switching office returns the busy tone to the caller. The facility to the server is dropped, thus making it immediately available for another call.

Answer Supervision Considerations

After the 45 second timeout, an unanswered CO trunk call is answered and then dropped. All other unanswered calls after this timeout are dropped without being answered. For an ISDN call that has not yet queued or been answered, no timeout occurs, and answer supervision is not sent. Instead, a message requesting a busy tone is sent to the network and, subsequently, the trunk is released.

Feature interactions

For LAI or BSR, the command is considered a call denial vector command in all cases.

CMS interactions

Busy command	
Database Item	Report Heading
BUSYCALLS/BUSYTIME	Calls Forced Busy Calls Busy/Disc
OTHERCALLS/OTHERTIME	Inbound Other Calls
INTIME	Avg Time In Vector

BUSYTIME, OTHERTIME, and INTIME for splits and vectors are tracked according to when the busy tone starts. BUSYTIME, OTHERTIME and INTIME for VDNs are tracked according to when the trunk idles.

BCMS interactions

A call that is forced busy due to the command is tracked as OTHER in the VDN Report.

Check command

Purpose

Checks the status of a split/skill for possible termination of the call to that split/skill.

Syntax and valid entries

Command	Parameters / Conditions		
check			
best	if _____ expected wait _____ unconditionally wait improved _____	< 1 to 9999 seconds > 0 to 9999 seconds	
skill _____ 1 to switch max or 1st, 2nd, 3rd VDN skill (EAS-only)	pri _____ low-priority medium-priority high-priority top-priority	if _____ available-agents > 0 to 1499 ¹ calls-queued < 1 to 999 ¹ expected-wait < 1 to 9999 seconds oldest-call-wait < 1 to 999 seconds rolling-asa < 1 to 999 seconds staffed-agents > 0 to 1499 ¹ unconditionally wait-improved > 0 to 9999 seconds	
split _____ 1 to switch max	pri _____ low-priority medium-priority high-priority top-priority	if _____ available-agents > 0 to 1499 ¹ calls-queued < 1 to 999 ¹ expected-wait < 1 to 9999 seconds oldest-call-wait <=> 1 to 999 seconds rolling-asa < 1 to 999 seconds staffed-agents > 0 to 1499 ¹ unconditionally wait-improved > 0 to 9999 seconds	

1. Maximum limit less on some platforms. Use the help key for your switch administration software to determine the applicable limit for your system.

Requirements

No special requirements.

Operation

The **check** command checks the status of a split/skill against conditions specified in the command. If the conditions specified in the command are met, the call is terminated to the

split/skill. If the conditions are met but no agents are available, the call is queued to the split/skill and waits for an agent to become available.

Each **check** command may be used with one of the following three keywords: **split**, **skill**, or **best**. The **check split** or **check skill** command requires you to specify the split/skill to be checked. The **check best** command checks the status of the best split/skill identified by the immediately preceding series of **consider** steps, then either terminates or queues the call to that split/skill. You don't have to specify the split/skill in **check best** commands since the switch compares two or more skills and identifies the "best" in the preceding series of **consider** steps.

The command is customized to check for and/or respond to specific conditions. For example, the command can queue/terminate unconditionally. The command can also queue/terminate if any of the following is true:

- Number of available agents is greater than the threshold value.
- Number of staffed agents is greater than the threshold value.
- Number of calls queued for a specified priority level or higher is less than the threshold value.
- Oldest call waiting in queue at the specified priority level or higher has been waiting less than the threshold value, which is expressed in seconds.
- Rolling average speed of answer is less than the threshold value, which is expressed in seconds.
- Expected wait time is less than the threshold value, which is expressed in seconds.
- Expected wait time will be improved by more than the threshold value, which is expressed in seconds, by queuing the call to the split/skill specified. EWT in the specified split/skill is compared to the call's current EWT. (A call's EWT will be infinite if the call is not in a queue.)

A call may be queued to up to three splits/skills simultaneously. A call remains queued either until vector processing terminates (via a successful **disconnect**, **busy**, or **route-to** command, or via an abandoned call), the call is routed to another VDN (by a **route-to number** or **route-to digits** command), or the call reaches an agent. When an agent becomes available in any split/skill to which the call is queued, the following actions take place:

- Call begins ringing the agent.
- Call is removed from any other queues.
- Vector processing terminates.

If the desired backup split/skill is one of the splits/skills to which the call is already queued, the call is requeued at the new priority level, provided that the command conditions are met. The step is skipped, and vector processing continues at the next step if any of the following conditions are true:

- Command conditions are not met.

Call Vectoring commands

- Desired split's (skill's) queue is full.
- Desired split/skill has no queue and also no available agents.
- Desired split/skill is not vector-controlled.
- Call is already queued to this split/skill at the specified priority level.
- Call has been previously queued to three different splits/skills.

Note:

A **route-to** to another VDN can be used to remove the call from the splits it is queued to if necessary. The steps in the routed-to vector then can be used to queue to other splits.

Answer Supervision Considerations

No answer supervision is returned.

Feature interactions

The **check** command can access an AUDIX/Message Center/Server split/skill in cases where a VDN is assigned as a coverage point. To enable this function, the split/skill must be assigned as a vector-controlled hunt group.

For BSR and LAI, the command can be considered either a call acceptance vector command or a neutral vector command. For more on BSR interactions, see [Best Service Routing \(BSR\)](#) on page 271.

The command is considered a call acceptance vector command whenever one of the following is true:

- Call terminates to an agent.
- Call queues to a split/skill.
- BSR interflowed call is accepted at remote interflow vector.

The command is considered a neutral vector command when the call neither terminates nor queues.

No COR checking is carried out when a **check** step places a call to a split/skill.

The **oldest-call-waiting** condition can check only priority level I (low).

CMS interactions

Calls answered via the check command are indicated as answered by backup in CMS.

Calls queued via a **check split/skill** command are tracked as CALLSOFFERRED and LOWCALLS/MEDCALLS/HIGHCALLS/TOPCALLS.

The presence of the command in a vector enables the calls serviced by the vector to be vector-directed. When such a call is answered by an agent, the call is tracked as

ACDCALLS/ANSTIME, and it is reported as ACD Calls, Split/Skill ACD Calls, and Avg Speed Ans. If the call is also queued to other splits/skills, OUTFLOWCALLS/OUTFLOWTIME is tracked in the first split/skill to which the call queues, and Flow Out is reported (unless the split/skill turns out to be the answering split/skill). DEQUECALLS/DEQUETIME is tracked in the second and third splits/skills if these splits/skills are not the answering split/skill, and the call is reported as Dequeued Calls and Dequeued Avg Queue Time. However, if the second or third split/skill is the answering split/skill, INFLOWCALLS is tracked in the split/skill, and the call is reported as Flow In.

Whenever the call is answered in a split/skill accessed by the **check split/skill** command, the BACKUPCALLS data base item is incremented, and the call is reported as Calls Ans in Backup and Calls Handled/Backup. The Calls Ans in Main report item is calculated by using the algorithm ACDCALLS - BACKUPCALLS.

If the call abandons after the command queues the call to a split/skill, ABNCALLS/ABNTIME is tracked for the vector, the VDN, and the first split/skill to which the call is queued. The call is reported as Aban Call and Avg Aban Time. If the call is also queued to other splits/skills, DEQUECALLS/DEQUETIME is tracked in these splits/skills, and the call is reported as Dequeued Calls and Dequeued Avg Queue Time.

BSR status poll calls are not counted as interflows. BSR interflows are now tracked as network interflowed calls (NETCALLS) by the CMS at the receiving switch. The CMS tracks a call's accumulated time-in-VDN as NETINTIME (that is, the NET_TIME value on the CMS at switch C combines the time a call has spent in VDNs at any previous locations, as communicated by ISDN information forwarding. The NETINTIME can be added to the time spent in the local switch to provide reports that include the total time the call has spent in the contact center network (e.g., total ASA).

For more information on CMS database items and reports, see *Avaya CMS Database Items and Calculations*, 585-780-702, and *Avaya Call Management System Supervisor Version 11 Reports*, 585-210-708.

BCMS interactions

The total number of calls to the VDN that are queued via the command and then answered by an agent within a specified time period is tracked as ACD Calls in the VDN Report. The average time that calls spend in a vector before being connected via the command as an ACD call to an agent is tracked as AVG SPEED ANS in the same report.

There is no added tracking for calls interflowed by BSR. BCMS tracks these calls as outflow in the VDN Report.

Collect Digits command

Purpose

The **collect digits** command allows the user to enter up to 16 digits from a touch-tone phone or an internal rotary phone, or allows the vector to retrieve Caller Information Forwarding (CINFO) digits from the network.

Syntax and valid entries

Command	Parameters / Conditions
collect <u> </u> digits 1-16 digits ced or cdpd	after announcement <u> </u> extension no. or "none" for <u> </u> "none" or A-Z ¹

1. This item available with Variables in Vectors feature, only.

Requirements

The Avaya Call Center Deluxe package or Avaya Call Center Elite package must be installed. This command is also available with the Automated Attendant RTU.

At least one TN744 Call Classifier circuit pack or TN2182 Tone Clock circuit pack must be in the system unless the command is used only to collect digits returned by a VRU or sent by the network and never to collect digits from a caller.

The Vectoring (CINFO) feature used to collect ced or cdpd digits from the network ISDN and the AT&T Network Intelligent Call Processing (ICP) service or equivalent.

Operation

The collect command has two modes of operation:

- Collecting digits on the switch
- Collecting CINFO digits

Collecting Digits on the switch - The **collect digits** command allows a caller to enter digits from a touch-tone or an internal rotary phone. An optional announcement may be used to request the caller to enter these digits. The announcement can instruct the user to enter an asterisk (*) if incorrect data is entered. When the caller enters an asterisk, the digits collected for the current **collect digits** command are deleted, digit collection is restarted, and the announcement is not replayed.

Note:

You can set the Reverse Star/Pound Digit For Collect Step? field on the ISDN Parameters page of the Feature-Related System Parameters form to y in order to reverse the normal handling of the asterisk (*) and pound (#) digits by the `collect` vector command. With the Reverse Star/Pound Digit for Collect Step set to y, the asterisk (*) digit is interpreted as a caller end-of-dialing indicator and the pound (#) digit is interpreted to clear all digits that were previously entered for the current collect vector step.

In using this command, the maximum number of digits requested of the caller must be specified in the administration of the command. If the caller can enter fewer digits than the maximum specified, the announcement should instruct the caller to terminate the entry with a pound sign (#) digit as an end-of-dialing indicator. If all the digits strings for all the variations of a specific **collect digits** command are terminated with #, the # must be counted as one of the digits. Therefore, the number of digits collected should include any # that needs to be collected. Otherwise, the terminating # is kept as a dial-ahead digit and is processed by a subsequent **collect digits** command. If fewer digits than the maximum specified are entered, and if the caller does not complete the entry with a pound sign, an interdigit timeout occurs. The timeout terminates the command, and any digits collected prior to the timeout are available for subsequent vector processing.

Generally, processing of the command requires that a TTR be connected. (If the call originates from an internal rotary phone, no TTR is needed.) TTRs accept the touch-tone digits that are entered by Call Prompting users. TTRs are automatically connected as needed by the system.

The connection of the announcement prompt is skipped and the digit collection phase begins whenever one of the following conditions is true:

- Dial-ahead digits exist.
- No announcement is administered for the **collect digits** step.
- Announcement administered for the **collect digits** step does not exist.

Otherwise, an attempt is made to connect the administered announcement. If the announcement to be connected is busy, and if the queue for the announcement is full, or if there is no queue, the calling party continues to hear the current feedback. The system waits five seconds and then tries again to connect the call to the announcement. This process continues until the call is successfully queued or connected to the announcement, or until the calling party disconnects from the call. If the queue for the announcement is not full, the call is queued for the announcement.

If the announcement to be connected is available (either initially or after queuing, or after system retry), any previous feedback is disconnected, and the calling party is connected to the announcement.

While the announcement is playing, or while the call is being queued for an announcement, the caller may enter digits at any time. This causes the announcement to be disconnected or removed from the queue, as appropriate, and the digit collection phase

Call Vectoring commands

to begin. If the caller does not enter any digits during the announcement phases, the digit collection phase begins when the announcement completes.

As soon as the digit collection phase begins, interdigit timing is started, unless the TTR is already in timing mode (that is, the dial-ahead capability is active and the TTR is not disconnected).

Digits are collected either as digits dialed during the **collect digits** command or as dial-ahead digits dialed since a previous **collect digits** command but prior to the current appearance of the command. Digit collection continues for the current command until one of the following conditions exists:

- Number of digits specified is collected.
- Pound sign (#) digit is collected (signifying end of dialing).
- Inter-digit timer expires.

If, during the digit collection phase, a * is encountered within a stream of dialed or dial-ahead digits, all digits that are collected for the current **collect digits** step are discarded. If additional dial-ahead digits occur after the asterisk, these digits continue to be processed. If there are no such digits, and if no TTR is connected, vectoring continues at the next vector step. If a TTR is connected, the caller can start entering digits again. In such a case, the announcement is not replayed, and the interdigit timer is restarted.

Note:

If an asterisk is entered after the requested number of digits are entered, the asterisk has no effect on the previously entered digits. However, in such a case, the asterisk is treated as a dial-ahead digit for the next **collect digits** command.

When digit collection is completed, and if a TTR is connected (for a touch-tone phone), the interdigit timer is restarted to detect a timeout for releasing the TTR. Vector processing then continues at the next vector step. However, the switch continues to collect any subsequent dialed digits (including the pound sign (#) and asterisk (*) digits) to allow for the dial-ahead capability. These additional “dialed ahead” digits are saved for use by subsequent **collect digits** commands, and they provide the caller with a means to bypass subsequent unwanted announcement prompts. A single # digit can be collected and tested by subsequent **route-to...if digits** or **goto...if digits** commands. Alternately, any collected digits (whether collected from callers or CINFO) can be passed to a host via ASAI or forwarded to another site via Information Forwarding. Collection of dial-ahead digits continues until one of the following occurs:

- Vector processing stops or is terminated.
- The sum of the digits collected for the current **collect digits** command and the dial-ahead digits exceeds the switch storage limit of 24. Any additional dialed digits are discarded until storage is freed up by a subsequent **collect digits** command.

Note:

Any asterisk (*) or pound sign (#) digits count towards the 24-digit limit, as do any dial-ahead digits entered after the asterisk or pound sign digit.

- The TTR required by the touch-tone phone user to collect digits is disconnected. This occurs under the following conditions:
 - Successful or unsuccessful **route-to number** step is encountered during vector processing except where the number routed to is a VDN extension.
 - Successful or unsuccessful **route-to digits** step is encountered during vector processing except where the number routed to is a VDN extension.
 - Successful or unsuccessful **adjunct routing** step is encountered during vector processing.
 - Successful or unsuccessful **converse-on** step is encountered during vector processing.
 - 10 second timeout occurs, during which time the caller does not dial any digits, asterisks (*) or pound signs (#).
 - A collect ced/cdpd digits step is processed.

Note:

When the TTR is disconnected due to a **route-to number**, **route-to digits**, **converse-on**, or an **adjunct routing** step, all dial-ahead digits are discarded. This means that, following a failed **route-to**, **converse-on** or **adjunct routing** step, a subsequent **collect digits** step always requires the caller to enter digits.

Note:

Dial-ahead digits are available for use only by subsequent **collect digits** commands. The digits are never used by other vector commands that operate on digits (for example, **route-to digits**, **goto...if digits**, etc.). In addition, these digits are not displayed as part of the CALLR-INFO button operation until they are collected via a **collect digits** command.

Collecting CINFO digits - The collect digits step allows you to collect CINFO Digits from the network. When a **collect ced digits** or **collect cdpd digits** step is processed, the system retrieves the first sixteen ced or cdpd digits from the ISDN User Entered CODE (UEC) Information Element that is associated with the call. It places the digits in the collected digits buffer. Any digits that were in the collected digits buffer when the ced or cdpd digits are collected, are erased. If a TTR was connected to the call from a previous **collect digits** step, it is disconnected.

If the ced or cdpd digits contain invalid digits (not 0-9, *, #) the digits are not placed in the collected digits buffer. However, the collected digits buffer is still cleared and if a TTR is attached it is disconnected.

If no ced or cdpd digits were received from the network, when the **collect ced digits** or **collect cdpd digits** step is reached, the step is skipped. However, the collected digits buffer is still cleared and if a TTR is attached it is disconnected.

Call Vectoring commands

A * in the collected digits is treated as a delete character. Only the digits to the right of the * are collected. A # is treated as a terminating character. Only the # and the digits to the left of the # are collected. If a single # is sent, it is placed in the collected digits buffer.

The number of ced or cdpd digits to collect cannot be specified in the **collect digits** step. If there are 16 or fewer digits, all the digits are collected. If there are more than 16 digits, the first 16 digits are collected and a vector event is generated.

The CINFO ced and cdpd digits can be used with any vector step that uses the digits in the collected digits buffer.

Once ced or cdpd digits are collected, they can be displayed on a two-line display, or using the callr-info button.

Answer supervision considerations

Answer supervision is provided as soon as a TTR is connected and processing of the command starts. The command always provides answer supervision to an incoming trunk if supervision has not been previously provided except that a collect ced/cdpd digits step does not return answer supervision.

Feature interactions

For BSR and LAI, the command is considered a call acceptance vector command except for collect ced/cdpd digits which is neutral.

CMS/BCMS interactions

Collected digits are passed to the CMS when the **collect** step is processed. Digits are not passed to the BCMS.

Consider command

Purpose

The **consider** command defines the resource (split, skill, or location) that is checked as part of a BSR consider series and obtains the data BSR uses to compare resources. After the consider series has been executed, a **queue-to best** or **check best** command can queue the call to the best resource identified.

If the **consider** commands are in a status poll vector, a **reply-best** step returns the data for the best resource found to the primary vector on the origin switch.

Syntax and valid entries

Command	Parameters / Conditions		
consider ____			
	location ____ 1 to 255 (multi-site BSR only) ¹		adjust by ____ 0-100 percent
	skill ____ 1 to switch max or 1st, 2nd, 3rd VDN skill (EAS only)	pri ____ low-priority medium-priority high-priority top-priority	adjust by ____ 0- 100 percent

1. This item available with the Virtual Routing feature, only.

Requirements

For switch requirements, see [Server requirements](#) on page 275.

Operation

In order to deliver a call to the resource that can provide the best service, **consider** commands collect and compare information. Whether you use single-site BSR, multi-site BSR, or both, consider steps work very much the same.

Each **consider** command collects status data from one split/skill. Splits or skills on the same switch are identified by number. Remote locations must be identified by a location number assigned on the BSR Application form. See [Multi-site BSR applications](#) on page 297 for more information.

Consider commands are typically written in a series of two or more steps called a “consider series.” The first step in a consider series collects status data from the resource (a split, skill, or location specified by the user in the command) and saves this data to a buffer. The next **consider** step collects status data on its assigned split/skill and compares the data to that already in the buffer. If the existing data in the buffer indicates the first split/skill can provide better service to the call, the data for the first split/skill remains in the buffer as the “best” data. If the second split/skill can provide better service to the call, its status data replaces the data already in the buffer. Each subsequent step works similarly, collecting data from one resource, comparing it to the “best” data found up to that point, and replacing the best data only if the resource tested by the current step can provide better service to the caller. This series ends when a **queue-to best** or **check-best** step delivers or queues the call, or when a **reply-best** step returns the data for the best resource to a primary vector on the origin switch.

The first consider step in a series shortens the call vectoring 7-step timeout from 1.0 to 0.2 seconds. The timeout is shortened for BSR vectors only (that is, vectors that use **consider** series) in order to reduce real-time delays for call processing and reduce the incidence of race conditions in multi-site BSR applications.

User adjustments

You may have preferences as to which skills should answer certain types of calls. In both single- and multi-site BSR, the **adjust-by** portion of the **consider** command allows you to program these preferences into your vectors.

If a resource does not have an available agent when its **consider** step tests it, the **consider** step collects the Expected Wait Time (EWT) were the call to be queued to that resource. You can adjust this EWT value, for purposes of calculation only, by assigning a value of 0–100 in the user adjustment. The units of this value are supplied by the switch depending on the conditions whenever that **consider** step executes.

For example, in the command **consider split 1 pri h adjust-by 20**, the switch interprets **adjust-by 20** to mean “add 20% to the EWT, but add at least 20 seconds.” For Expected Wait Times of 1–100 seconds, an adjustment of 20 will therefore add 20 seconds. Above 100 seconds, the same adjustment will add 20% to the EWT for the split/skill specified in the **consider** step.



Important:

If the user adjustment are defined as a number of seconds, BSR would not be efficient when EWT is high. If the user adjustment is defined as a percentage, BSR is not efficient when EWT is low. Such efficiencies become critical in multi-site BSR applications, which involve issues of trunk cost and capacity.

Events that clear “best” data

For DEFINITY software version 9.1 or later, user adjustments also apply to available agent situations (with a strategy other than first found) in a manner that is similar to EWT. For

more information, see the “Best Service Routing” section in: *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784.

As the steps in a consider series execute, the status data for the best resource found is kept in a buffer. This “best” data is unaffected by some call processing events and vector commands, while other events and commands initialize (clear) this buffer. The following table shows you what initializes the best data buffer and what doesn’t.

Initialization of BSR “best” data	
Events and vector commands that clear best data	Events and vector commands that do not clear best data
Execution of any queue-to or check command	Converse command
Vector processing terminates: ● reply-best command executes ● agent answers ● successful route-to command ● successful adjunct routing command ● successful messaging split/skill command ● vector disconnect timeout ● disconnect command ● busy command ● vector processing reaches last step without call in queue	Announcement command
	Collect Digits command
	Unsuccessful execution of a messaging split/skill command
	Unsuccessful adjunct routing command
	Goto step/vector with any conditional
	Wait command (with any feedback)
	Unsuccessful route-to command
	Vector processing reaches last step while call is still in queue
	Execution of a consider step (this will either replace the current best data with new data or leave the current data untouched)

Recommendations

It is recommended that you follow the guidelines below when using **consider** commands:.

- Don’t put a consider series in vector loops.
- Don’t put any commands between the steps of a consider sequence that would cause a delay. The **announcement** and **wait** commands, for example, should not be used within a consider sequence. The **goto** commands are OK.

Call Vectoring commands

- Arrange your **consider** steps in order of preference.

The **consider** step that tests the main, or preferred, resource should be the first in the series. The second **consider** step should test the resource that is your second preference for handling the given call type, and so on. To avoid unnecessary interflows, put **consider** steps for local resources before steps that consider remote resources. Arranging **consider** steps in order of preference is recommended for all BSR vectors. It's especially important when the active VDN for the call is using the 1st-found agent strategy: since the switch will deliver the call to the first available agent found, arranging **consider** steps in order of preference will ensure that calls are delivered to the best of the available resources and that unnecessary interflows are avoided.

Answer Supervision Considerations

All forms of the **consider** command are ISDN neutral and do not return answer supervision.

Feature interactions

Splits used in **consider** commands must be vector-controlled.

CMS/BCMS interactions

BCMS does not log LAI attempts. Therefore, it will not log BSR status polls since they are LAI attempts.

Converse-on command

Purpose

The **converse-on split/skill** command delivers a call to a converse split/skill and activates a voice response script that is housed within a Voice Response Unit (VRU).

Syntax and valid entries

Command	Parameters / Conditions		
converse-on			
skill _____ 1 to switch max 1st, 2nd, 3rd VDN skill (EAS only)	pri ____ low-priority medium-priority high-priority top-priority	passing ____ and ____ 6-digit string, "" , "#" , "none" ¹ , "ani", "vdn", "digits", "qpos", "wait"	
split _____ 1 to switch max	pri ____ low-priority medium-priority high-priority top-priority	passing ____ and ____ 6-digit string, "" , "#" , "none" ¹ , "ani", "vdn", "digits", "qpos", "wait"	

1. If the first "passing" value is entered as "none" the second value must also be entered as "none."

Requirements

A converse split must be vector-controlled.

Operation

The **converse-on** command is designed primarily to integrate Voice Response Units (VRUs) with the switch. The command effects data passing between the switch and the VRU, and it enables the caller to hear the appropriate voice response script housed in the VRU.

For details regarding call flows, data passing, collection, and return specifications involving the **converse-on** command, see [Appendix J: Call flow and specifications for converse – VRI calls](#) on page 657.

If the command is successful, it delivers the call to a predetermined split/skill, which is referred to as the converse split/skill. Once the call is answered by the VRU, the command may or may not pass data to the VRU (depending upon the parameters of the command). Regardless of whether or not data is passed, the caller is then connected to the VRU,

which in turn executes the voice response script. If by this time the call has already queued to a nonconverse split/skill, the call retains its position in the nonconverse split/skill queue. If an agent from the nonconverse split/skill becomes available to service the call while the voice response script is being executed, the switch drops the line to the VRU and connects the caller to the available agent. The VRU, in turn, detects the disconnect and terminates the voice response script. Whenever a voice response script is executed, any audible feedback provided by the vector is disconnected, and no further vector steps are executed until the voice response script is executed.

The VRU may or may not eventually return data to the switch. If the voice response script is completed and there is no data to be returned from the VRU to the switch, the VRU drops the line to the switch, and vector processing is reactivated on the switch.

If there is data to be returned to the switch, the Converse data return code is outputted before the data to be passed is outputted. Once all VRU data is received, it is stored in the Call Prompting digits buffer as dial-ahead digits, and vector processing is reactivated. Digits returned by the VRU are not heard by the caller.

Digits returned from the VRU can be:

- Displayed on the answering agent's display set (automatically for 2-line displays, or by using the CALLR-INFO button for 1-line displays)
- Treated as an extension in a **route-to digits** step
- Used for vector conditional branching in a step containing a command with the **if digits** parameter
- Tandemed to an ASAI host

The switch can be set up to pass information in-band to the VRU. In such a case, the **converse-on** command can output up to two groups of digits to the VRU. The digits may serve two major purposes: the digits may notify the VRU of the application to be executed, and they may share call related data, such as ANI (BN) or caller digits collected by the switch. (In many applications, both application selection and data sharing are required.) The touch tone outputting rate is adjustable see [Appendix J: Call flow and specifications for converse – VRI calls](#) on page 657 for details.

Since in many cases the digit strings are of variable length, the switch always appends a pound sign (#) character to the end of each digit string. The **Prompt** and **collect** steps in the voice response script must therefore always be administered to expect # as the end-of-string symbol and to include # in the digit count.

The sending of # prevents excessive delays caused by digit timeouts, and it prevents other problems caused by timeouts. It also ensures that each data field is used to satisfy a single **prompt** and **collect** step.

Any data passed from the switch to a VRU is outputted in-band. The user can administer two time delays on the System Parameter Features form: converse first data delay and converse second data delay fields. These delays may range from 0 to 9 seconds with a default of zero seconds for the converse first data delay and a default of two seconds for the converse second data delay. The delays are needed to give the VRU time to invoke an application and to allocate a touch-tone receiver to receive the passed digits.

Note:

No time delays are invoked when the keyword none is administered.

If <data_1> is not none, the converse first data delay timer starts when the call is answered by the VRU. When the timer expires, the <data_1> digits are outputted in-band to the VRU. The end-of-string character (#) is then outputted.

If <data_2> is not none, the converse second data delay timer starts when the end-of-string character (#) from the first digit string is outputted. When the timer expires, the <data_2> digits are outputted in-band to the VRU. The end-of-string character (#) for the second digit string is then outputted.

The following values may be administered for <data_1> and <data_2> within the **converse-on** command:

- Administered digit string: This string can contain up to six characters consisting of one or more digits (0 through 9) or asterisks (*). The pound sign (#) may not be included in a digit string because it is reserved as the end-of-string character. However, a single # may be administered.
- ani: If the call is an internal call or an incoming DCS call, this data type causes the extension of the calling party to be outputted. If the call is an incoming ISDN-PRI or R2MFC Signaling call with ANI (BN) provided to the switch, the calling party number/billing number (CPN/BN) of the calling party is outputted to the VRU. If there is no ANI (BN) to send, the end-of-string pound sign (#) is the only character outputted. Any other type of incoming call results in # being outputted.
- digits: This data type can be used only if Call Prompting is optioned. To pass CINFO digits, Vectoring (CINFO) must also be enabled. The digits data type causes the most recent set of digits collected in vector processing, either from the caller or from the network, to be outputted. If no digits are available, the end-of-string pound sign (#) is the only character outputted.
- none: This data type causes no characters to be outputted. Also, no end-of-string pound character (#) is outputted, and no time delays are invoked.
- qpos: This data type causes the value of the queue position of a call in a nonconverse split to be outputted. This value is a variable length data item from which between one and three digits can be outputted. If the call is not queued, the end-of-string pound sign (#) is the only character that is outputted. This data may be used by the VRU to inform callers of their position in queue or to decide whether to execute a long or short version of a voice response script.

Note:

The use of this keyword is not recommended with multiple split/skill queuing. Any queue position value that is sent may not be meaningful. If the call is queued to multiple nonconverse splits/skills, the value of the caller's queue position in the first nonconverse split/skill is sent. Priority queuing (priority assigned to the queue vector step) and Dynamic Queue Position, which is available with Avaya Business Advocate, can put subsequent calls into the queue ahead of the waiting call.

Call Vectoring commands

- **vdn**: This data type causes the VDN extension to be outpulsed. In cases where multiple VDNs are accessed, normal VDN override rules determine which VDN extension is outpulsed.
- **wait**: This data type can be used only if the Vectoring (G3V4 Advanced Routing) customer option is enabled. It causes the expected wait time of the call in seconds to be outpulsed. See [Expected Wait Time \(EWT\)](#) on page 166 for a detailed description of expected wait time. If the call is not queued or if it is queued only to splits that are unstaffed or splits where all agents are in AUX work mode, the end-of-string character # is the only character outpulsed. The value outpulsed is a variable number not padded with zeroes. It is a maximum of four digits always followed by #. The range is 0# to 9999# or a single #.
- **#**: This is the only character outpulsed. Outpulsing this character causes the corresponding **prompt** and **collect** command in the voice response script to be skipped.

A pound character (#) is always outpulsed at the end of each digit string. Where # is administered, or where the digits keyword is administered and the last digit collected from the caller is #, only one # is outpulsed. No # is outpulsed when the keyword none is administered.

If **data_1** is administered as none, **data_2** must also be none.

Answer supervision considerations

Answer supervision is returned only once during the life of a call. If a call is answered as a result of a **converse-on** step, answer supervision is sent only if it has not been sent previously. If digits are passed to the VRU, answer supervision is not sent until after the digits are outpulsed.

Feature interactions

Abandon Call Search - If the **converse-on** step places a call to a hunt group, and if the incoming call was placed via a trunk group with Abandon Call Search activated, the system checks that the calling party has not abandoned the call (that is, hung up) before terminating to an agent.

Adjunct Switch Applications Interface (ASAI) - Since vector-controlled splits/skills cannot be ASAI-monitored domains, ASAI cannot be used to supplement the operation of the **converse-on** step.

If a **converse-on** step places a call to an ASAI-monitored domain, ASAI event messages are sent over the ASAI link.

Whenever a **converse-on** step places an ASAI-monitored call, the ALERTing message sent to the ASAI host includes a Cause IE, Coding Standard 3 value 23 (CS3/23). This informs the ASAI host that the call has not been de-queued from any nonconverse splits/skills.

If a **converse-on** step is executed while an adjunct routing request is outstanding, the route request is canceled.

Audio Information Exchange (AUDIX) - If a **converse-on** step calls the AUDIX, the call is treated as a direct call to the AUDIX. The caller hears the “welcome to AUDIX” message and may retrieve his or her messages in the usual manner.

If a call is forwarded to or covers to a VDN and is then delivered to an AUDIX hunt group by a **converse-on** step, the call to the AUDIX is treated as a redirected call, and the caller may leave a message for the principal.

Auto-Available Splits/Skills - A **converse-on** step may place a call to an auto-available split/skill. Except in cases where the converse split/skill is ASAI-controlled, auto-available converse splits/skills are recommended for Voice Response Integration (VRI).

Call Coverage - Call Coverage does not apply because the **converse-on** step may deliver calls only to vector-controlled splits/skills, which do not have coverage paths.

Call Detail Recording - For incoming calls to a VDN, the duration of the call is recorded from the time answer supervision is returned. Answer supervision is returned for a successful **converse-on** step. No ineffective call attempt records are generated for **converse-on** steps that fail. Also, no outgoing calls can be placed by a **converse-on** step.

Call Park - Calls placed by a **converse-on** step may not be parked.

Call Pickup - Calls placed by a **converse-on** step ringing at an agent station may be picked up if that agent is part of a pickup group. Subsequent transfers are denied.

Call Prompting - The Call Prompting customer option must also be enabled to gain full VRI functionality. Without Call Prompting, any data returned by the VRU cannot be collected and processed by the switch.

If the **converse-on** step places a call to a split/skill of live agents, any digits collected previously may be displayed by agents using the callr-info button.

Call Vectoring—Basic - The **converse-on** step is an enhancement to the Basic Call Vectoring customer option. This option must be enabled in order to invoke the VRI feature.

Class of Restriction (COR) - As is the case for the **queue-to split/skill** and **check split/skill** vector steps, no COR checking is carried out when a **converse-on** step places a call to a split/skill.

Conference - Any attempt to conference a call placed by a **converse-on** step is denied.

Call Vectoring commands

Coverage Callback - A call placed by a **converse-on** step does not follow any coverage paths. Therefore, Coverage Callback is not available. Also, if a call reaches a **converse-on** step via a VDN in a coverage path, coverage callback cannot be used.

Direct Department Calling (DDC) - A converse split may be administered as a direct department calling split.

Distributed Communications System (DCS) - If an incoming DCS call is placed to a vector with a **converse-on split/skill x pri y passing ani ...** step, the DCS extension of the calling party is outpulsed.

Priority Levels - A call placed by a **converse-on** step may be queued at one of four priority levels: low, medium, high or top.

Hunt Groups - The **converse-on** step may deliver a call to a vector-controlled hunt group, ACD split/skill, Message Center or an AUDIX hunt group.

Integrated Services Digital Network (ISDN) - The **converse-on** step may be administered to outpulse to the VRU the ANI (calling party number/billing number CPN/BN) of the calling party via use of the ani keyword.

Intercept Treatment - A caller is never given intercept treatment upon execution of a **converse-on** step. Failing to place a converse call successfully results in the failure of the **converse-on** step. Vector processing continues at the next vector step.

Interflow - Since a **converse-on** step can place calls only to hunt groups that are vector-controlled, and since the activation of Call Forwarding for a vector-controlled hunt group is blocked, calls placed by a **converse-on** step to a hunt group cannot interflow.

Intraflow - Since a **converse-on** step can place calls only to hunt groups that are vector-controlled (that is, without coverage paths), intraflow is not possible.

Live Agents - Although not recommended, the switch does not prevent a **converse-on** step from delivering a call to a group of live agents. To the agent, the call looks like any other ACD call. However, certain features, such as call transfer, conference, and supervisor assist are denied.

The answering agent can display any digits collected prior to executing the **converse-on** step by using the callr-info button.

Look-Ahead Interflow (LAI) - If a call placed by a **converse-on** vector step is answered by a VRU, or if such a call queues to a split/skill on the receiving switch while a LAI call attempt is outstanding, the LAI call attempt is accepted.

A **converse-on** step that fails is neutral.

Message Center - The **converse-on** step may deliver calls to message hunt groups. Such calls are treated as direct calls to the message.

If a call is forwarded to a VDN and then delivered to a message split by a **converse-on** step, the call is treated as a redirected call.

Multiple Split/Skill Queuing - A call can be queued to three different splits/skills and then to a converse split/skill as a result of a **converse-on** step.

Music on Hold - During the data return phase of a **converse-on** step, the caller is temporarily placed on hold. Music on hold, if administered, is suppressed.

Non-Vector Controlled Splits/Skills - A **converse-on** step may not place a call to a nonvector-controlled split/skill.

Priority Queuing - The queue priority of a call placed by a **converse-on** step is administrable on the vector step.

Queue Status - All queue status display, queue status indication and queue warning wall lamp feature capabilities also apply to calls queued by the **converse-on** command.

Queuing - Calls handled by the **converse-on** step queue when they are delivered to busy hunt groups. Call Vectoring audible feedback is not disconnected while a converse call is in queue.

If a **converse-on** step is executed while a call is queued to a nonconverse split/skill, the call remains in queue for the nonconverse split/skill.

The queue priority of the call is administrable on the vector step.

Recorded Announcement - VRI may be used to increase the system's recorded announcement capacity by off-loading some recorded announcements to the VRU. Callers can be redirected by the **converse-on** step to a group of VRU ports and use data passing to specify the correct announcement to play.

Redirection on No Answer (RONA) - If a **converse-on** step places a call to a hunt group with a no answer timeout administered, and if the call rings at an agent terminal/port for longer than the administered timeout, the call is redirected, and the agent/port is put into the AUX work state (or logged out if the agent is a member of an auto-available split/skill).

Thereafter, under RONA, the call is requeued to the split/skill unless there is no room in the queue or unless this is an auto-available split/skill whose agents are all logged out. If the call cannot be requeued, the **converse-on** step fails, a vector event is logged, and vector processing is restarted at the next vector step.

Service Observing - Calls placed by a **converse-on** step may be service observed. To prevent the observer from hearing tones being outputted to the VRU, the observer is not

Call Vectoring commands

connected to the call until the data passing phase is complete. If data is returned by the VRU, the observer is put in service observing pending mode, and the calling party is temporarily put on hold while the VRU digits are outputted. Upon completion of the converse session, and once the VRU hangs up the line, the observer remains in service observing pending mode.

It is not recommended that a service observing warning tone be administered since the warning tone may interfere with the interaction between the VRU and the calling party.

System Access Terminal (SAT) - converse-on steps may be administered from the SAT terminal.

System Measurements - System measurements track converse calls to hunt groups and attendant groups.

Timed After Call Work (ACW) - Timed ACW cannot be assigned to auto-available splits (AAS). If a call to a VDN with Timed ACW routes to a converse split, the VDN Timed ACW does not apply.

If Timed ACW is assigned to a non-AAS split that is a converse split, the Timed ACW of the split does apply.

Touch-Tone Dialing - Any touch-tone dialing by the calling party during the digit passing phases of a session involving a **converse-on** step does not result in corruption of data or in the collection of this data in the form of dial-ahead digits by the switch.

Only after the digit passing phase from the switch to the VRU is completed can the calling party enter touch-tone digits in response to a VRU prompt. Only after the VRU to the switch data return phase is completed and an additional **collect digits** vector step is executed can the calling party enter a touch-tone response to a switch prompt.

Transfer - A call placed by a **converse-on** step may not be transferred. The only form of transfer allowed is the data passing operation during the data return phase at the end of a voice response script.

If an illegal attempt to transfer a converse call is made, a vector event is logged, the line to the VRU is dropped, and vector processing is reactivated at the next vector step.

If an illegal transfer is attempted by a live agent with a multifunction set, the transfer is denied and the agent may reconnect to the call.

Transfer out of AUDIX - If a **converse-on** step delivers a call to an AUDIX hunt group, and if the calling party then attempts to transfer out of AUDIX, the transfer fails, and vector processing is reactivated at the next vector step.

Uniform Call Distribution (UCD) - A converse split/skill may be administered as a Uniform Call Distribution split/skill.

VDN as a Coverage Point - If a call covering to a VDN is processed by the **converse-on** command and subsequently reaches a station user (that is, a member of a converse split/skill), and if the converse split/skill agent attempts to activate Consult (coverage), or Coverage Leave Word Calling, any of these coverage attempts is denied because the call is still in vector processing. If the converse split/skill is an AUDIX/Message Center split/skill, the call covered to the VDN is treated like a redirected call to the AUDIX/MCS; the original principal and reason for redirection is used in the same manner as a Call Forwarded call to a VDN.

VDN Override - If a call that accesses multiple VDNs encounters a **converse-on** step passing vdn, normal override rules determine which VDN number is outpulsed to the VRU.

VDN Reports - For call tracking in the CMS and BCMS VDN reports, a **converse-on** step is treated like an **announcement** step. A call is considered “answered” when it is answered by a nonconverse split/skill but never when it is answered by a converse split/skill.

Vector-controlled Splits/Skills - A **converse-on** step may place a call to a split/skill only if that split/skill is administered as a vector-controlled split/skill.

CMS interactions

The CMS tracks calls placed by a **converse-on** step to a CMS-measured split/skill. Since a **converse-on** step allows a call to be “answered” in more than one split/skill, trunk totals no longer match split/skill totals. However, VDN totals and trunk totals will match.

For call tracking in the CMS VDN reports, a **converse-on** step is treated like an **announcement** step. A call is considered answered when it is answered by a nonconverse split/skill but never when it is answered by a converse split/skill.

BCMS interactions

BCMS tracks calls placed by a **converse-on** step to a BCMS-measured split/skill. Since a **converse-on** step allows a call to be “answered” in more than one split/skill, trunk totals no longer match split/skill totals. However, VDN totals and trunk totals will match.

For call tracking in BCMS VDN reports, a **converse-on** step is treated like an **announcement** step. A call is considered answered when it is answered by a nonconverse split/skill but never when it is answered by a converse split/skill.

Disconnect command

Purpose

The **disconnect** command ends treatment of a call and removes the call from the switch. Also allows the optional assignment of an announcement that will play immediately before the disconnect.

**Important:**

You should always warn the caller prior to disconnecting the call.

Syntax and valid entries

Command	Parameters / Options
disconnect	after announcement _____ extension no. or "none"

Requirements

The relevant announcements must be administered and recorded.

Operation

While the command's optional announcement is playing, the call remains in queue and can be connected to an agent. When the announcement completes (or is not specified), the command forces a disconnect, ends the treatment of the call, and removes the call from the switch.

Answer supervision considerations

If the switch has not yet sent answer supervision, the switch does so immediately before disconnecting the call, whether an announcement is specified or not. If an announcement is specified, answer supervision is given before an attempt is made to connect the announcement. The exception is for ISDN calls, where the disconnect can occur without answer supervision being sent when an announcement is not played.

Feature interactions

For LAI, the command can be considered either a call acceptance vector command or a call denial vector command.

The command is considered a call acceptance vector command whenever an announcement is included within the command and one of the following is true:

- Announcement is available.
- Call is queued for an announcement.
- Announcement is retried.

The command is considered a call denial vector command whenever one of the following is true:

- No announcement is included within the command.
- Announcement is included within the command, but the announcement is unavailable.

CMS interactions:

Disconnect command	
Database Item	Report Heading
DISCCALLS/DISCTIME	Calls Forced Disc
	Calls Busy/Disc
OTHERCALLS/OTHERTIME	Inbound Other Calls
INTIME	Avg Time In Vector

DISCTIME, OTHERTIME, and INTIME for splits and vectors are tracked according to when the announcement starts. DISCTIME, OTHERTIME and INTIME for VDNs are tracked according to when the trunk idles.

BCMS interactions

A call that is disconnected via the command is tracked as OTHER in the VDN Report.

goto step and goto vector commands

Purpose

The **goto step** command allows conditional or unconditional movement (branching) to a preceding or subsequent step in the vector.

The **goto vector** command allows conditional or unconditional movement (branching) to another vector. The goto vector step does not remove a call from queues in which it is already placed.

All parameters, options and value limits are identical for the **goto step** and **goto vector** commands.

Syntax and valid entries

Command	Parameters / Conditions		
goto			
step	_____		
	1-32		
	or		
vector	_____		
	1 to switch max		
if			
ani	_____	_____	
	<,>,<=,>=,<>=, A to Z	1-16 characters including digits (0-9), "?", "+", "none" ¹ or A-Z ²	
in, not-in	table	_____	
	1 to 100 ³		
available-agents			
in skill	_____	_____	_____
	1 to switch max, or	>,>=,<>=	0 to 1499 ³
	1st, 2nd, or 3rd for VDN Skill	<,<=	1 to 1500 ³
			or A to Z ²
in split	_____	_____	_____
	1 to switch max	>,>=,<>=	1 to 1500
		<,<=	0 to 1499 ³
			or A to Z ²

Command	Parameters / Conditions			
goto step (or vector) (continued)				
if (continued)				
calls-queued				
in skill ____ 1 to switch max, or 1st, 2nd, or 3rd for VDN Skill (EAS-only)	pri ____ low-priority medium-priority high-priority top-priority	_____ >, >=, <>, = <, <=	_____ 0 to 998 ³ sec 1 to 999 ³ sec or A to Z ²	
in split ____ 1 to switch max	pri ____ low-priority medium-priority high-priority top-priority	_____ >, >=, <>, = <, <=	_____ 0 to 998 ³ sec 1 to 999 ³ sec or A to Z ²	
counted-calls	to vdn ____ vdn extension, "latest" or "active" ⁴	_____ >, >=, <>, = <, <=	_____ 0 to 998 ³ sec 1 to 999 ³ sec or A to Z ²	
digits ____ _____ <, <=, >, >=, <>, = = in, not-in	_____ 1-16 digits, including 0-9, "#", "?", "+", A to Z ² or "none" ¹ meet-me-access ⁵ table ____ 1 to 100 ³			
expected-wait				
for ____ best, call	_____ <, <=	_____ >, >=, <>, =	1-9999 seconds 0-9999 seconds or A-Z ²	
for ____ split	_____ 1-switch max	pri ____ low-priority medium-priority high-priority top-priority	_____ >, >=, <>, = <, <=	_____ 0 to 9998 seconds 1 to 9999 seconds or A to Z ²
for ____ skill (EAS-only)	_____ 1-switch max, 1st, 2nd, 3rd skill for VDN	pri ____ low-priority medium-priority high-priority top-priority	_____ >, >=, <>, = <, <=	_____ 0 to 9998 seconds 1 to 9999 seconds or A to Z ²
holiday ____ in, not-in	table ____ 1-10			
ii-digits	_____ <, <=, >, >=, <>, = in, not-in	_____ 2-digit string, "+", "?", A-Z ² , or "none" ⁵ table ____ 1 to 100 ³		

Call Vectoring commands

Command	Parameters / Conditions			
goto step (or vector) (continued)				
if (continued)				
interflow-qpos	_____ >, >=, <>, = <, <=	_____ 0 to 8 1 to 9 or A-Z ²		
meet-me-full (goto step, only)				
meet-me-idle (goto step, only)				
no match ⁶				
oldest-call-wait				
	in skill _____ 1 to switch max, or 1st, 2nd, 3rd, skill for VDN (EAS-only)	pri _____ low-priority medium-priority high-priority top-priority	_____ >, >=, <>, = <, <=	_____ 0 to 998 sec 1 to 999 sec or A to Z ²
	in split _____ 1 to switch max	pri _____ low-priority medium-priority high-priority top-priority	_____ >, >=, <>, = <, <=	_____ 0 to 998 sec 1 to 999 A to Z ²
queue-fail ⁷				
rolling-asa	for _____ skill (EAS-only)	_____ 1 to switch max, or 1st, 2nd, 3rd skill for vdn	_____ >, >=, <>, = <, <=	_____ 0 to 998 sec 1 to 999 sec or A-Z ²
	split	_____ 1 to switch max	_____ >, >=, <>, = <, <=	_____ 0 to 998 sec 1 to 999 sec or A-Z ²
	vdn	_____ vdn extension, "latest" or "active" ⁴	_____ >, >=, <>, = <, <=	_____ 0 to 998 sec 1 to 999 sec or A-Z ²
staffed-agents				
	in skill _____ 1 to switch max, or 1st, 2nd, 3rd skill for vdn		_____ >, >=, <>, = <, <=	_____ 0 to 1499 ³ sec 1 to 1500 ³ sec or A-Z ²
	in split _____ 1 to switch max		_____ >, >=, <>, = <, <=	_____ 0 to 1499 ³ sec 1 to 1500 ³ sec or A-Z ²

Command	Parameters / Conditions			
goto step (or vector) (continued)				
if (continued)				
time-of-day	is	_____	to	_____
		mon-sun, "all"		mon-sun, "all"
		00-23 hour		00-23 hour
		00-59 minute		00-59 minute
unconditionally				
wait-improved for	_____			
	best	_____		
		<,>,<=,>= <>, =		0 to 9999 seconds or A-Z ²
	skill _____	pri _____		
	1 to switch	low-priority	>,>=,=	0 to 9998
	max, or 1st,	medium-priority	<,<=	1 to 9999
	2nd, 3rd	high-priority		or A-Z ²
	skill for vdn	top-priority		
	(EAS-only)			
	split _____	pri _____		
	1 to switch max	low-priority	>,>=,=	0 to 9998
		medium-priority	<,<=	1 to 9999
		high-priority		or A-Z ²
		top-priority		

1. The question mark (?) is a wild card that matches any digit (0-9) at the specified position. The plus sign (+) matches any or no characters at the specified position.
2. This item available with **Variables in Vectors** feature, only.
3. Maximum limit may be less on some platforms. Use the help key for your switch administration software to determine the applicable limits for your system.
4. "Active" refers to the VDN specified by VDN Override settings. "Latest" refers to the VDN specified for the current vector.
5. This item available with **meet-me conference** vectors, only.
6. This item available with **Dial by Name** feature, only.
7. This item available with **Attendant Vectoring** feature, only.

Requirements

For more information about options required to enable the **goto** commands, see [Communication Manager options required to enable vector commands](#) on page 468.

Operation

If the command syntax includes **unconditionally**, the command always branches. The unconditional form of the command is commonly used for skipping vector commands as well as for looping through vector commands.

Otherwise, branching takes place according to one of the conditions that follow:

- The average speed of answer for the indicated split/skill or VDN meets the constraints defined by the comparator and threshold value.
- The number of available agents in the indicated split/skill meets the constraints defined by the comparator and the threshold value.
- The number of queued calls in the indicated split/skill and at the specified priority level (or higher) meets the constraints defined by the comparator and the threshold value.
- The number of active calls in the indicated VDN meets the constraints defined by the comparator and the threshold value.
- The expected wait time at the specified priority level for the indicated split/skill, or for the call meets the constraints defined by the comparator and the threshold value.
- The oldest call-waiting in the indicated split/skill at the specified priority level (or higher) has been waiting for a period of time within the constraints defined by the comparator and the threshold value, which is expressed in seconds.
- The number of staffed agents in the indicated split/skill meets the constraints defined by the comparator and the threshold value.
- Digits collected via the **collect digits** command match the criteria defined by the comparator for the specified digit string. Or, the digits are found or not found, depending upon the option chosen, in the specified Vector Routing Table. The # digit can be tested against as a single digit.
- The ani digits match the criteria defined by the comparator for the specified digit string. Or, the ani digits are found or not found, depending upon the option chosen, in the specified Vector Routing Table.
- The II-digits match the criteria defined by the comparator for the specified digit string. Or, the II-digits are found or not found, depending upon the option chosen, in the specified Vector Routing Table.
- Time-of-day criteria are met.

Note:

The syntax for this condition can be illustrated by a couple of examples, as follows: **mon 8:01 to fri 17:00** means anytime between 8:01 A.M.

Monday through 5:00 P.M. Friday, and **all 17:00 to all 8:00** means between 5:00 P.M. and 8:00 A.M. on any day of the week.

- The Expected Wait Time (EWT) for the call is decreased by a period of time within the constraints defined by the comparator and the threshold value, which is expressed in seconds. The improvement in EWT is defined by calculating the difference between the call's current EWT and its EWT were it to be queued to the resource specified in the command.
- The call's position in the interflow-eligible portion of the queue meets the condition defined by the comparator and the threshold value (representing queue position counting backward from 1, which is the head of the eligible queue).

- For Attendant Vectoring, there is no way to check ahead of time to see if a call can queue, and there is no way to check if, after the fact, a call queued successfully. The **queue-fail** command allows you to provide additional routing if a call to an attendant vector fails. You can redirect the call to another step or to another vector if the call cannot be queued.

Answer supervision considerations

The call answer is not affected by the command.

Feature interactions

For BSR and LAI, the command is considered a neutral vector command in all cases. When a call experiences Look Ahead interflow, the ANI value is sent along with the call only for ISDN PRI calls. ANI is not sent for internal or DCS calls.

CMS/BCMS interactions

The **goto step** command is not tracked on the CMS or on the BCMS.

The ANI and/or II-digits are passed to the CMS when the call first starts vector processing if the following is true:

- Basic Call Vectoring and/or Call Prompting is optioned
- ANI is available from the network, the call is internal, or is received over DCS
- II-digits is available from the network
- The CMS is R3 (R3V5 for II-digits) or a newer version

ANI and II-digits are not passed to BCMS.

The **goto vector** command is tracked on CMS. The following database items are created.

goto Vector command		
Database Item	Report Heading	Notes
OUTFLOWCALLS/ OUTFLOWTIME GOTOCALLS/ GOTOTIME	Vector Flow Out	
INTIME	Avg Time In Vector	
INFLOWCALLS	Vector Flow In	new vector

Call Vectoring commands

CMS interaction notes for goto vector: - The ANI and/or II-digits is passed to the CMS when the call first starts vector processing if the following is true:

- Basic Call Vectoring and/or Call Prompting is optioned
- ANI is available from the network, the call is internal, or is received over DCS
- II-digits is available from the network

ANI and II-digits are not passed to BCMS.

Messaging command

Purpose

The **messaging split/skill** command allows the caller to leave a message for the specified extension or the active or latest VDN extension (default).

Syntax and valid entries

Command	Parameters / Conditions
messaging	
skill _____ 1 to switch max, or 1st, 2nd, 3rd skill for vdn (EAS-only)	for extension _____ extension no., "latest" or "active" ¹
split _____ 1-switch max	for extension _____ extension no., "latest" or "active" ¹

1. "Active" refers to the VDN specified by VDN Override settings. "Latest" refers to the VDN specified for the current vector.

Requirements

The split/skill involved must be an AUDIX split/skill, a remote AUDIX split or skill (DCS-AUDIX).

Operation

This command causes the caller to be connected to the AUDIX or Message Center split/skill so that the caller may leave a message for the specified extension (call answering service or "mail").

If the split/skill number specified in the command is a valid message service split/skill (such as an AUDIX), and if the extension is either a valid assigned extension or is administered as active or latest the system attempts to terminate the call to the message service split/skill for call answering service.

If the call is queued to the message service split/skill, or if the call terminates to an available message service agent or an AUDIX voice port, the caller is connected to ringback (signifying successful termination), and vector processing terminates. Termination is unsuccessful, and vector processing continues at the next vector step if any one of the following is true:

- Split/skill queue is full.

Call Vectoring commands

- AUDIX link is down.
- All AUDIX voice ports are out of service.
- Message service split/skill is DCS-AUDIX and all DCS trunks are busy.

If call termination is successful, and if the administered extension (or default VDN) is a message service subscriber, the caller can leave a message for the specified extension.

Note:

Agent and/or supervisor stations may be equipped with Automatic Message Wait (AMW) lamps to accommodate the “mail” specified in the **messaging split/skill** command. The lamps can be assigned for VDNs or extensions used to access the messaging split/skill and for which messages are to be left. When messages are left for these VDNs or extensions, the assigned AMW lamps light.

If the extension or VDN is not a subscriber of the message service, the caller receives ringback until he or she disconnects.

Answer supervision considerations

If answer supervision has not already been returned, it is returned when the messaging service port or station is connected to the call (that is, when the call is answered by the port or station).

Feature interactions

The command can use an AUDIX hunt group in its operation.

If the command specifies a specific “mailbox” extension, the original principal for a call covered by a VDN is not passed to the adjunct, and it does not appear in the display to the answering agent. The specified extension appears in the display.

If the command is accessed via a direct call to the VDN, and if the mailbox is administered as active or latest, the corresponding active or latest VDN extension mailbox is sent to the messaging adjunct. Additionally, if the call is sent to a switch Message Service split/skill, the associated VDN name is sent to the messaging adjunct.

If the command specifies active or latest as the mailbox extension, the original principal for a call covered to or forwarded to a VDN is used as the default mailbox for the call instead of the active or latest VDN. Accordingly, the original principal extension and the reason for redirection are passed to the messaging adjunct, and they subsequently appear in the display to the answering agent.

AUDIX does not support mixed length numbering plans.

If the command leaves a message for a VDN or for another messaging service extension, the Automatic Message Waiting Lamp (AMWL) associated with the VDN or extension lights steady.

For LAI, the command can be considered as either a call acceptance vector command or a neutral vector command.

The command is considered a call acceptance vector command whenever one of the following is true:

- Call terminates to an agent or to an AUDIX port.
- Call queues to a messaging split/skill.

The command is considered a neutral vector command whenever the command fails.

CMS interactions

When a queued call successfully goes to the messaging split, OUTFLOWCALLS/OUTFLOWTIME (1st split/skill) and DEQUECALLS/DEQUETIME (2nd/3rd splits [skills]) are tracked in the split/skill tables. These calls are reported as split/skill Flow Out, Dequeued Calls, and Dequeued Avg Queue Time.

Calls that queue via a **messaging split/skill** command are tracked as CALLSOFFERRED and LOWCALLS (no priority) or MEDCALLS (priority). These calls are shown in the standard reports according to the final disposition of the call.

The presence of the command in a vector enables the calls serviced by the vector to be vector-directed. When such a call is answered by an agent, the call is tracked as ACDCALLS/ANSTIME, and it is reported as ACD Calls, Split/Skill ACD Calls, and Avg Speed Ans.

Finally, if the command directs a call to a split/skill, the BACKUPCALLS database item is incremented, and the call is reported as Calls Ans in Backup and Calls Handled/Backup. The Calls Ans in Main report item is calculated by using the algorithm ACDCALLS - BACKUPCALLS.

A call abandoned after the command routes the call to a station or to an attendant is tracked as ABNCALLS/ABNTIME for the messaging split/skill and in the VDN/vector tables.

BCMS interactions

A call advanced to another position via the command is tracked as an outflow in the VDN Report.

Queue-to command

Purpose

The **queue-to** command unconditionally queues a call to a split/skill, attendant group, attendant, or hunt group, and assigns a queuing priority level to the call in case all agents or attendants are busy.

Syntax and valid entries

Command	Parameters / Conditions	
queue-to		
	attd-group ¹	
	attendant ¹ _____ extension no.	
	best	
	hunt-group ¹ _____ 1 to switch max	pri ____ low-priority medium-priority high-priority top-priority
	skill _____ 1 to switch max, or 1st, 2nd, 3rd skill for vdn (EAS-only)	pri ____ low-priority medium-priority high-priority top-priority
	split _____ 1 to switch max	pri ____ low-priority medium-priority high-priority top-priority

1. This item available with Attendant Vectoring feature, only.

Requirements

The split/skill involved must be vector-controlled.

Operation

A call sent with this command either connects to an available agent or attendant in the specified resource or enter the resource's queue. When it enters the queue, feedback is not given to the caller by this command.

Note:

In Attendant Vectoring, a wait-time 0 secs hearing ringback step should be used to give immediate feedback to the caller. The queue-to command does not provide ringback until the call is actually ringing the attendant. The wait-time step should be implemented as the first vector step or as the step immediately before the queue-to step.

If single-site BSR is enabled, **queue-to best** queues or delivers a call to the best local split/skill found by a consider series. If multi-site BSR is enabled, the best resource may be at a remote location; in this case, **queue-to best** interflows the call to the interflow VDN defined for that location on the BSR Application form.

A call may be queued to up to three local split/skill simultaneously. A call remains queued either until vector processing terminates (via a **disconnect**, **busy**, or **route-to** command, or via a dropped or abandoned call) or until the call reaches an agent. When an agent becomes available in any split/skill to which the call is queued, the following actions take place:

- Call begins ringing the agent.
- Call is removed from any other queues.
- Vector processing terminates.

If the entered split/skill is one of the split/skill to which the call is already queued, the call is requeued at the new priority level. If the priority level specified is the same as the priority level at which the call is queued, the call remains in the same position in queue. The step is skipped, and vector processing continues at the next step if any of the following conditions are true:

- Desired split/skill's queue is full.
- Desired split/skill's is not vector-controlled.
- Desired split/skill's has no queue and also no available agents.
- Call has been previously queued to three different split/skills.

Note:

A **route-to** to another VDN can be used to remove the call from the splits it is queued to if necessary. The steps in the routed-to vector then can be used to queue to other splits.

A **queue-to best** command will have the same operation and interactions as the **queue-to split/skill** command when the best resource is a local split/skill. When the best resource is at a remote location, the **queue-to best** command will function as an unconditional **route-to** command (with cov=n) performing LAI.

When a **queue-to best** command executes, it initializes the data for the best resource (the "best" data) the consider series found for this call. If no "best" data has been defined by the consider series, a vector event is logged and processing continues at the next vector step. A consider series might not produce "best" data for any of the following reasons:

Call Vectoring commands

- all resources considered are unstaffed
- no resource considered has an open queue slot
- “best” data has been initialized before execution of the **reply-best** step (because there are no consider steps in the status poll vector or because the vector contains a prior step that initializes “best” data).

For a list of events and vector commands that initialize “best” data produced by consider series, see [Events that clear “best” data](#) on page 504.

If a queue attempt to a local resource fails, a vector event is logged and processing continues at the next vector step. The “best” data is initialized.

If an interflow attempt to a remote resource fails, a vector event is logged and processing continues at the next vector step. If a local split/skill was identified as best at some point in the consider series before the interflow attempt, the call is queued to the local resource. Whether or not the call can be queued locally in this case, the “best” data is initialized and processing continues at the next vector step.

Answer supervision considerations

Answer supervision is returned (if not already returned) when the call is connected to an answering agent.

Feature interactions

The **queue-to** command can access an AUDIX split/skill in cases where a VDN is assigned as a coverage point. To enable this function, the split/skill must be assigned as a vector-controlled hunt group.

For BSR and LAI, the command can be considered either a call acceptance vector command or a neutral vector command.

The command is considered a call acceptance vector command whenever one of the following is true:

- Call terminates to an agent.
- Call queues to a split/skill.
- BSR interflowed call is accepted at remote interflow vector.

The command is considered a neutral vector command when the call neither terminates nor queues.

No COR checking is carried out when a queue-to step places a call to a split/skill.

CMS interactions

Calls queued via a **queue-to split/skill** command are tracked as CALLSOFFERRED and LOWCALLS/MEDCALLS/HIGHCALLS/TOPCALLS.

Split/skill calls are reported in the standard reports according to the final disposition of the call.

The presence of the command in a vector enables the calls that are serviced by the vector to be vector-directed. When such a call is answered by an agent, the call is tracked as ACDCALLS/ANSTIME, and it is reported as ACD Calls, Split/skill ACD Calls, and Avg Speed Ans. If the call is also queued to other splits/skills, OUTFLOWCALLS/OUTFLOWTIME is tracked in the first split/skill to which the call queues, and Flow Out is reported (unless the split/skill turns out to be the answering split/skill). DEQUECALLS/DEQUETIME is tracked in the second and third splits/skills if these splits/skills are not the answering split/skill, and the call is reported as Dequeued Calls and Dequeued Avg Queue Time. However, if the second or third split/skill is the answering split/skill, INFLOWCALLS is tracked in the split/skill, and the call is reported as Flow In.

If the call abandons after the command queues the call to a split/skill, ABNCALLS/ABNTIME is tracked for the vector, the VDN, and the first split/skill to which the call is queued. The call is reported as Aban Call and Avg Aban Time. If the call is also queued to other splits/skills, DEQUECALLS/DEQUETIME is tracked in these splits/skills, and the call is reported as Dequeued Calls and Dequeued Avg Queue Time.

BSR status poll calls are not counted as interflows. BSR interflows are now tracked as network interflowed calls (NETCALLS) by the CMS at the receiving switch. The CMS tracks a call's accumulated time-in-VDN as NETINTIME (that is, the NET_TIME value on the CMS at switch C combines the time a call has spent in VDNs at any previous locations, as communicated by ISDN information forwarding. The NETINTIME can be added to the time spent in the local switch to provide reports that include the total time the call has spent in the contact center network (e.g., total ASA).

For more information on the database items and reports, see *Avaya Avaya CMS Database Items and Calculations*, 585-780-702, and *Avaya Call Management System Supervisor Version 11 Reports*, 585-210-708.

BCMS interactions

The total number of calls to the VDN that are queued via the command and then answered by an agent within a specified time period is tracked as ACD Calls in the VDN Report. The average time that calls spend in a vector before being connected via the command as an ACD call to an agent is tracked as AVG SPEED ANS in the same report.

There is no added tracking for calls interflowed by BSR. BCMS tracks these calls as outflow in the VDN Report.

Reply-best

Purpose

The **reply-best** command is used only in status poll vectors in multi-site BSR applications, where it returns “best” data for its location to the primary vector on the origin switch.

Syntax

reply-best

Note:

This multi-site BSR command is available only when the Virtual Routing feature is enabled.

Requirements

The EAS feature must be enabled to use the **reply-best** command.

Operation

The purpose of the **reply-best** step is to return data for the best resource found by the consider series in a status poll vector to the primary vector in a multi-site BSR application. The status poll vector executes in response to an ISDN call from a **consider** step in the primary vector. Each time the status poll vector executes, the **reply-best** step:

- drops the incoming ISDN call without returning answer supervision
- returns status data to the primary vector via the ISDN DISCONNECT message
- initializes (clears) the “best” data
- terminates processing in the status poll vector

If the incoming call is not an ISDN call, the **reply-best** command will drop the call and log a vector event. No status data will be returned to the origin switch.

If the consider series yields no “best” data, the **reply-best** command will drop the incoming ISDN call without returning answer supervision, terminate vector processing, and return an infinite value for EWT in the DISCONNECT message. A consider series might not produce “best” data for any of the following reasons:

- all resources considered are unstaffed
- no resource considered has an open queue slot

- “best” data has been initialized before execution of the **reply-best** step (because there are no consider steps in the status poll vector or because the vector contains a prior step that initializes “best” data).

For a list of events and vector commands that initialize “best” data produced by consider series, see [Events that clear “best” data](#) on page 504.

Answer supervision considerations

The **reply-best** step does not return answer supervision.

CMS/BCMS interactions

Operation of the **reply-best** command is not reported or tracked by the CMS or by the BCMS.

Route-to command

Purpose

Routes calls either to a destination that is specified by digits collected from the caller or an adjunct (**route-to digits**), or routes calls to the destination specified by the administered digit string (**route-to number**).

Syntax and valid entries

Command	Parameters / Conditions				
route-to					
	digits	with coverage _____ yes or no			
meet-me ¹					
	number _____ 0-9, *, #, ~p, ~m, ~s, ~w, ~W, or a leading ~r ²	with cov _____ yes or no	if _____ digit	_____ =, <, >, <=, >=, <>	_____ 0-9, #
			interflow-qpos	_____ <, =, <=	_____ 1-9
		unconditionally			
	name1 ³	with coverage _____ yes or no			
	name2 ³	with coverage _____ yes or no			
	name3 ³	with coverage _____ yes or no			

- 1. This item available with **meet-me conference** vectors, only.
- 2. When the specified number is preceded by ~r, Network Call Redirection is attempted.
- 3. This item available with Dial by Name feature, only.

Requirements

The **route-to name** command requires the Dial by Name feature to be enabled.

Operation

The **route-to** command attempts to route a call to a set of digits collected from the caller, from an adjunct, or from the network, or to route to the destination specified by the administered digit string.

For the **route-to number ... if digit** command, the call is conditionally routed to a specified destination according to a single digit entered by the caller. If the digit collected in the last **collect digits** command matches the specified comparison in relation to the administered digit, the command attempts to route the call to the specified destination.

The destination for a route-to command can be any of the following:

- Internal extension (for example, split/hunt group, station, etc.)
- VDN extension
- Attendant or Attendant Queue
- Remote extension (UDP/DCS)
- External number, such as a TAC or AAR/ARS FAC followed by a public or private network number (for example, 7-digit ETN, 10-digit DDD, etc.)
- Remote Access Extension.
- Service Observing FAC
- Another Avaya switch (when the **route-to number** command is followed by ~r and a ten digit number, then Network Call Redirection is attempted)
- Remote Logout of Agent FAC

Note:

The VDN's Class of Restriction (COR) is used for calling permissions.

The **route-to digits** command fails if no digits are collected, and vector processing continues at the next vector step.

The **route-to number ... if digit** command fails if more than 1 digit is collected or if the digit comparison fails. Vector processing continues at the next command.

The **route-to number ... if interflow-qpos** command fails if the call is not in the eligible queue established by the **interflow-qpos** condition. Vector processing continues at the next command.

If the **route-to** command is successful, vector processing terminates. Otherwise, vector processing continues at the next vector command.

A **route-to** step in a vector is treated as cov=n for a covered call regardless of the cov setting on the **route-to** command.

If the number expressed in the command is a system extension or an attendant group (and not a VDN), the system considers the step successful if one of the following conditions occurs:

- The endpoint is alerted.

Call Vectoring commands

- The endpoint has Call Forwarding or night service (hunt group) enabled, and the (night service) destination forwarded to is alerted.
- The endpoint has off-premises Call Forwarding (UDP hunt night service) enabled, and a trunk is seized.

The system then provides ringback to the caller, and vector processing terminates. However, if the call cannot complete successfully (for example, no idle appearance is available), vector processing continues at the next vector command.

If the number is a VDN extension, the following events occur:

- Vector processing terminates within the current vector and the call is removed from any queues.
- If the current VDN is administered with override, the new VDN overrides current VDN information.
- Processing of the vector associated with the VDN extension begins.

If the number is an AAR/ARS FAC plus digits, or if it is a remote UDP extension, standard AAR/ARS processing is performed to select the trunk group and outpulse the digits. If a trunk is seized, vector processing terminates, and the calling party hears feedback provided by the far end. Otherwise, the call cannot complete successfully (because no trunks are available, the FRL/COR is restricted, etc.), and vector processing continues at the next vector command.

If the number is a TAC plus digits, and a trunk is seized, vector processing terminates, and the calling party hears feedback provided by the far end. Otherwise, the call cannot complete successfully (because no trunks are available, the COR is restricted, etc.), and vector processing continues at the next vector command.

If the number is any other number (such as an FAC other than an AAR/ARS or Service Observing), the command is unsuccessful, and vector processing continues at the next vector command.

Abbreviated Dialing special characters can also be used in the number field. Each of these characters instructs the system to take a different action when dialing reaches the point where the character is stored. The characters are as follows:

- ~p (pause)
- ~w (wait)
- ~m (mark)
- ~s (suppress)
- ~W (indefinite wait)

Each special character counts as two digits towards the maximum. The maximum number of digits for the command is 16.

The **route-to digits** command can be used to implement an automated attendant function.

Coverage

The optional coverage parameter determines whether coverage should apply during routing. If coverage applies, and if the digits entered are valid, the following occurs:

- Ringback is provided.
- Vector processing terminates.
- Normal termination and coverage are implemented.

Note:

For detailed information about the operation of the route-to command with or without coverage for the different destinations see the table shown in [Switch route-to command operation](#) on page 651.

Answer Supervision Considerations

Generally, answer supervision is provided when the destination answers the call. The exception to this involves incoming trunk calls routed to another non-ISDN-PRI trunk. Such calls provide answer supervision when the outgoing trunk is seized.

Feature interactions

When COR checking is applied to a route-to number or route-to digits step, it is the COR of the latest VDN that is used.

The **route-to** command may specify the AAR or ARS access codes. The COR associated with the latest VDN is used to determine the Partitioned Group Number (PGN) time-of-day routing chart. The PGN determines the choice or route tables used on a particular call.

The command may call the AUDIX extension. If this happens, the call is treated as a direct call to AUDIX, and the calling party may retrieve his or her messages.

If the call covers to a VDN, the command supports a remote AUDIX interface to a local hunt group extension that is assigned as a remote AUDIX hunt group. The remote AUDIX hunt group (which has no members and cannot be vector-controlled) forwards the call to the remote AUDIX destination in the same manner as when the hunt group is assigned as a point in the coverage path. A DCS link down condition for a call that covers to a VDN is treated as a direct call to the AUDIX.

If the command is directed to a station with bridged appearances, the bridged appearance button lamps are updated.

The following destinations always result in a failure, and vector processing continues at the next step:

- Controlled trunk group
- Code calling FAC
- Facility test call

Call Vectoring commands

- TAAS access code
- Priority access code
- Loudspeaker paging access code
- Station Message Detail Recording (SMDR) account code
- Voice message retrieval access code.

If the command is executed and Direct Outward Dialing (DOD) is in effect, the COR of the latest VDN is compared with the COR of the called facility to determine if the call is permitted. If access is not permitted, the command fails and vector processing continues. In the case where a COR requiring the entry of account codes is assigned to a VDN, and the command is executed by the associated vector, the command is unsuccessful, and vector processing continues at the next step.

The individual extension number assigned to an attendant console can be used as the command's argument.

A call processed by the command can wait in the individual attendant queue and is subsequently removed from vector processing.

The command can access both public and private networks.

If the command dials the attendant, and if the system is in night service, the call routes to the DID Listed Directory Number (LDN) night destination.

The command can place AAR/ARS calls that implement subnet trunking, which is the routing of calls over trunk groups that terminate in switches with different dial plans.

Authorization codes are disabled with respect to routing via VDNs. In other words, if authorization codes are enabled, and a **route-to** command in a prompting vector accesses AAR or ARS, and the VDN's FRL does not have the permission to utilize the chosen routing preference, no authorization code is prompted for, and the **route-to** command fails.

If the command routes the call without coverage to a display station, the station displays the following: "a = Originator Name to VDN Name."

If the command calls a station that is a member of a pickup group, the call can be picked up by another pickup group member.

Anytime a **route-to with cov n** command initiates a call over ISDN-PRI facilities and LAI is optioned, the call will be treated on a Look-Ahead basis. However, if the command is used with the **coverage yes** option in effect, unconditional interflow results.

For LAI, the **route-to** command can be considered either a call acceptance vector command or a neutral vector command. The command is considered a call acceptance vector command whenever one of the following is true:

- Command terminates to a valid local destination.
- Command successfully seizes a non-PRI trunk.

- Command execution results in a LAI call attempt, and the call is accepted by the far end switch.

The command is considered a neutral vector command whenever one of the following is true:

- Termination is unsuccessful.
- Trunk is not seized.
- LAI call attempt is denied by the far end switch.

For a call that covers or forwards to a VDN, the **route-to with coverage y** command functions the same way as the **route-to with coverage n** command. For a covered or forwarded call, the coverage option for the command is disabled since such a call should not be further redirected.

A **route-to with cov y** to a station that has call forwarding activated is forwarded.

Service Observing can be initiated with Call Vectoring using the route-to command. See [Service Observing routing](#) on page 127 for detailed instructions.

Note:

[Appendix I: Operation details for the route-to command](#) on page 651 gives a detailed description of the feature interactions for the **route-to** number with and without coverage command.

CMS interactions

Tracking of the **route-to digits** command varies according to the destination successfully routed to, as follows:

Routed to station or to attendant		
Database item	Report heading	Notes
OUTFLOWCALLS/ OUTFLOWTIME	Flow Out Vector Flow Out	1st split
DEQUECALLS/ DEQUETIME	Dequeued Calls Dequeued Avg Queue Time	2nd/3rd splits
INTIME	Avg Time In Vector	
CONNECTCALLS/ CONNECTTIME	Other Calls Connect	answered calls on G3

Call Vectoring commands

Routed to trunk

Database item	Report heading	Notes
OUTFLOWCALLS/ OUTFLOWTIME	Flow Out Vector Flow Out VDN Flow Out	1st split
DEQUECALLS/ DEQUETIME	Dequeued Calls Dequeued Avg Queue Time	2nd/3rd splits

Routed to VDN

Database item	Report heading	Notes
OUTFLOWCALLS/ OUTFLOWTIME	Flow Out Vector Flow Out VDN Flow Out	1st split
DEQUECALLS/ DEQUETIME	Dequeued Calls Dequeued Avg Queue Time	2nd/3rd splits
INTIME	Avg Time In Vector	
INFLOWCALLS	Vector Flow In VDN Flow In	new vector new VDN
INTERFLOWCALLS/ INTERFLOWTIME	VDN Flow-Interflow	
INTIME	Avg Time In Vector	

Routed to Split or Hunt Group

Database item	Report heading	Notes
OUTFLOWCALLS/ OUTFLOWTIME	Flow Out	1st split
DEQUECALLS/ DEQUETIME	Dequeued Calls Dequeued Avg Queue Time	2nd/3rd splits
INTIME	Avg Time In Vector	
CALLSOFFERRED		new split
MEDCALLS/ HIGHCALLS		no priority/priority

Note:

For calls that “route to” a split or a hunt group and later intraflow to a station or to an attendant, OTHERCALLS/OTHERTIME are tracked in the vector and in the VDN tables.

Split calls are also shown in the standard reports according to the final disposition of the call.

Calls that route over an ISDN trunk are LAI calls. When a call attempts to “route to” an ISDN trunk (Look-Ahead Interflow), the LOOKATTEMPTS database item is tracked and reported as Look-Ahead Interflow Attempts. If the call successfully routes, LOOKFLOWCALLS/LOOKFLOWTIME are tracked and reported as Look-Ahead Interflow Completions. Interflow always occurs whenever the **with coverage yes** option is in effect.

The presence of the command in a vector enables the calls that are serviced by the vector to be vector-directed. When such a call is answered by an agent, the call is tracked as ACDCALLS/ANSTIME, and it is reported as ACD Calls, Split/skill ACD Calls, and Avg Speed Ans. If the call is also queued to other splits, OUTFLOWCALLS/OUTFLOWTIME is tracked in the first split/skill to which the call queues, and Flow Out is reported (unless the split/skill turns out to be the answering split). DEQUECALLS/DEQUETIME is tracked in the second and third splits if these splits are not the answering split, and the call is reported as Dequeued Calls and Dequeued Avg Queue Time. However, if the second or third split/skill is the answering split/skill, INFLOWCALLS is tracked in the split, and the call is reported as Flow In.

If the command directs a call to a destination, the BACKUPCALLS data base item is incremented, and the call is reported as Calls Ans in Backup and Calls Handled/Backup. The Calls Ans in Main report item is calculated by using the algorithm ACDCALLS - BACKUPCALLS.

A call abandoned after the command routes the call to a station or an attendant is tracked in the VDN tables as ABNCALLS/ABNTIME.

BSR interflows are now tracked as network interflowed calls (NETCALLS) by the CMS at the receiving switch. The CMS tracks a call's accumulated time-in-VDN as NETINTIME (that is, the NET_TIME value on the CMS at switch C combines the time a call has spent in VDNs at any previous locations, as communicated by ISDN information forwarding. The NETINTIME can be added to the time spent in the local switch to provide reports that include the total time the call has spent in the contact center network (e.g., total ASA).

For more information on the CMS database items and reports, see *Avaya CMS Database Items and Calculations*, 585-780-702, and *Avaya Call Management System Supervisor Version 11 Reports*, 585-210-708.

BCMS interactions

A call advanced to another position via the command is tracked as outflow in the VDN Report. A call answered by an attendant via the command is also tracked as outflow.

There is no added tracking for calls interflowed by BSR. BCMS tracks these calls as outflow in the VDN Report.

Stop command

Purpose

The **stop** command halts the processing of any subsequent vector steps.

Syntax

stop

Requirements

No special requirements.

Operation

After the **stop** command is processed, any calls already queued remain queued, and any wait treatment (for example, silence, ringback, music) is continued. On the other hand, any calls not queued are dropped under the same scenario.

If a TTR is allocated to the call, and if the **stop** command is encountered, the TTR is disconnected. However, current call processing continues (that is, the call is not dropped). The caller continues to hear the feedback that was provided before the **stop** command was encountered.

Note:

An implicit stop is processed following the last administered command in a vector.

Answer supervision considerations

The command has no effect on answer supervision.

Feature interactions

For LAI, the command is considered a neutral vector command in all cases except when a call is dropped, then it is considered a denial.

CMS interactions

When the command or the end of the vector is encountered, vector INTIME is recorded. This is reported as Avg Time in Vector.

VDISCCALLS database item in the VDN tables pegs call that pass all the way through a vector without ever having been queued.

BCMS interactions

None.

Wait-time command

Purpose

The **wait-time** command delays the processing of the next vector step if a specified delay time is included in the command's syntax. Also provides feedback (in the form of silence, ringback, or music) to the caller while the call advances in queue. The Multiple Audio/Music Sources for Vector Delay and Multiple Music Sources on Hold features allow a specified audio or music source to be selected when a call encounters a **wait-time** command. See Basic Call Vectoring for more information.

Syntax and valid entries

Command	Parameters / Conditions	
wait-time _____	hearing _____	
0-999	secs	music, ringback, silence, i-silent
0-480 ¹	mins	
0-8 ¹	hrs	
	or	
	audio source ext. ²	then _____
		music, ringback, silence, continue ³

1. This option is not available for vector administration done through Avaya CMS or Visual Vectors.
2. A valid announcement/music source extension that is defined on the announcement audio sources form. '
3. The **continue** treatment is only valid with Multiple Audio/Music Sources. It indicates that the caller will continue to hear the alternate audio/music source (using and announcement) until another vector command takes effect.

Requirements

Basic Call Vectoring or Call Prompting software must be installed. Also, a music-on-hold port must be provided for the music treatment. Multiple Audio/Music Sources for Vector Delay requires that the Vectoring (G3V4 Enhanced) customer option be enabled.

Operation

The specified feedback is given to the caller, and vector processing waits the specified time before going on to the next step. If the time specified is **0**, feedback is provided without any delay in the processing of the next vector step. The feedback given to the caller continues until any one of the following occurs:

- Subsequent vector step (containing **wait-time** or **announcement**) changes the treatment.
- Vector processing encounters a **disconnect** or **busy** command.
- Call is routed to another location or to a step that includes an announcement (for example, **collect digits**).
- Call is routed to another VDN.
- Call is delivered to a destination (starts ringing at an agent's terminal).
- Switch receives a destination from the ASAI adjunct.
- Vector disconnect timer expires.

Wait times up to 8 hours are allowed for customers who want to use the ASAI Phantom Call feature to track e-mail and fax messages in split queues.

Considerations

When music is indicated as a treatment, it refers to the system music, not an alternate music source.

The tenant number of the active VDN determines the system music the caller hears. You can allow callers to hear a music source other than the one assigned to the active VDN, however, by directly specifying an extension for an audio source with a command such as **wait-time 30 secs hearing 4301 then music**.

The **i-silent** keyword is for use with adjunct routing-ADR/Lookahead Interflow applications. I-silent provides silence for the specified time, but it is neutral to LAI while all other wait treatments (even with 0 secs settings) provide acceptance.

Multiple audio/music sources

The expanded **wait-time _ secs hearing <extension> then <treatment2>** command provides what is known as Multiple Audio/Music Sources wait treatment. The **<extension>** option defines an audio or music source that is assigned on the Announcements/Audio Source administration screen.

The source can be interfaced by way of one of the following:

- Analog/DS1/0 (Line Side T1/E1) station ports
- AUX-Trunks
- An Integrated Announcement board

Any of the announcement/audio source types listed above can be configured to do either of the following:

- Play at the beginning with queuing (with the Queue field set to y, which is always recommended for contact center applications)
- Barge-in operation (Queue field set to "b")

In addition, integrated board announcements can be set to play once ("integrated") or to repeat after each playing continuously (integ-rep). For more information, see "Appendix A: Recorded Announcements", in *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784, and the Announcements/Audio Sources screen reference in *Administrator Guide for Avaya Communication Manager*, 555-233-506.

The **<treatment2>** parameter refers to the treatment that the caller hears after the source specified by **<extension>** finishes playing, or the wait-time period expires. The **<treatment2>** parameter is also provided if the caller can not be connected to the source. Failure to connect to the source can result from conditions such as:

- source not available - extension/source not assigned
- source disconnected
- source busy
- queuing not assigned

If the **<extension>** source is not available when the wait step is reached in the vector one of the following results will occur:

- If **<treatment2>** is set to **continue**, the caller returns to what they were hearing before the wait-time step.
- If **<treatment2>** is set to **music**, **ringback**, or **silence**, vector processing still waits for the specified wait-time while the caller hears **<treatment2>**. When the wait-time period expires, the next step in the vector is executed, regardless of the **<treatment2>** setting. The caller continues to hear **<treatment2>** until a subsequent step changes the treatment. For example, if **<treatment2>** is set to **continue**, and the **<extension>** source (integ-rep or continuous analog/DS1 or AUX-Trunk) is still playing, the caller continues to hear it until a subsequent vector steps changes the treatment.

Note:

If the **<extension>** source stops playing or is disconnected, the caller hears silence.

If the audio/music source specified by the **<extension>** stops (disconnects) before the wait-time period expires or the caller cannot be connected to that source (source not

Call Vectoring commands

available), the caller will hear the source specified by the **then <treatment2>** segment of the vector. In this case, if **<treatment2>** is specified as **continue**, then the caller hears silence.

Answer supervision

If the **music** or **audio source** treatment is included in the command, answer supervision is triggered. If the command is encountered and answer supervision was sent previously, the caller hears the treatment specified in the current command. If, for a CO trunk user, the command with **silence**, **ringback**, or **i-silent** treatment is encountered prior to answer supervision, the caller continues to hear ringback from the CO.

Feature interactions

An implicit wait of 0.2 seconds (with no change in the feedback to the caller) is provided after every seven vector steps if one of these steps does not suspend vector processing. The following steps, if successful, do not suspend vector processing: **queue-to split**, **check split**, **goto step**, **goto vector** and **wait-time 0 seconds**. The following steps, if unsuccessful, also do not suspend vector processing: **check split**, **route-to**, **adjunct routing**, and **messaging split**. The only commands that suspend vector processing are the following: **announcement**, **wait-time > 0**, **collect digits**, and **converse-on split**.

- Music-on-Hold

When the command is implemented with music as the treatment, the system-wide music-on-hold feature must be administered. Otherwise, the caller hears silence. When Tenant Partitioning is in use, the tenant number of the active VDN determines the system music that is heard.

Feedback continues while a subsequent vector step queues for an announcement or for a TTR.

- Look-Ahead Interflow (LAI)

For LAI, the wait-time command is considered a call acceptance vector command in all cases, except i-silent, which is considered a neutral vector command.

CMS/BCMS interactions

The command is not tracked on the CMS or on the BCMS. Vectors with **wait-time** steps are only accessible to CMS if the time unit is administered in **secs**.

■ ■ ■ ■ ■ ■

Appendix B: Vector management and monitoring

To manage your vectors, there are several considerations and tasks of which you need to be aware. This appendix describes these considerations/tasks, including:

- [Implementation requirements for the Call Vectoring features](#) on page 547
- [Enabling the Vector Disconnect Timer](#) on page 552
- [Upgrading to a Call Vectoring environment](#) on page 552
- [Changing and testing a vector](#) on page 553
- [Identifying Links to a Vector](#) on page 554
- [Finding All Occurrences of a Digit String](#) on page 555

Implementation requirements for the Call Vectoring features

The following tables indicate the forms and the hardware required for the following Call Vectoring features:

- [Basic Call Vectoring Requirements](#) on page 548
- [Call Prompting Requirements](#) on page 548
- [G3V4 Enhanced Vectoring Requirements](#) on page 548
- [Advanced Vector routing requirements](#) on page 549
- [Vectoring \(Best Service Routing\) requirements](#) on page 549
- [ANI/II-Digits requirements](#) on page 549
- [CINFO requirements](#) on page 550
- [Look-Ahead Interflow requirements](#) on page 550
- [Adjunct Routing requirements](#) on page 550

Basic Call Vectoring Requirements

Form(s)	Hardware
● Vector Directory Number ● Hunt Group ● Call Vector ● Feature Related System Parameters	Announcement capabilities require either: ● TN750 Integrated Announcement circuit pack(s), or ● External announcement facility (analog announcements). Also, each analog announcement requires a port on an analog line circuit pack or on an auxiliary trunk circuit pack. See the <i>Hardware Guide for Avaya Communication Manager</i>, 555-233-200 for a list of available analog circuit packs.

Note:

The TN750 Integrated Announcement circuit pack provides 16 ports for listening to announcements. The system provides for the installation of multiple TN750C Integrated Announcement circuit packs. See “Managing Announcements” in *Administrator Guide for Avaya Communication Manager*, 555-233-506 for more details.

Call Prompting Requirements

Form(s)	Hardware
● Vector Directory Number ● Hunt Group ● Call Vector	Announcement capabilities require either: ● TN750 Integrated Announcement circuit pack(s), or ● External announcement facility (analog announcements). Also, each analog announcement requires a port on an analog line circuit pack. See <i>Hardware Guide for Avaya Communication Manager</i>, 555-233-200 for a list of available analog circuit packs.

G3V4 Enhanced Vectoring Requirements

Form(s)	Hardware
● Vector Directory Number Form ● Hunt Group Form ● Call Vector Form	Requires no hardware in addition to that required for Basic Call Vectoring.

Advanced Vector routing requirements

Form(s)	Hardware
● Vector Directory Number Form ● Hunt Group Form ● Call Vector Form	Requires no hardware in addition to that required for Basic Call Vectoring.

Vectoring (Best Service Routing) requirements

Form(s)	Hardware
Single-site BSR	
● Vector Directory Number Form ● Call Vector Form	No special hardware required for single-site BSR.
Multi-site BSR	
● Best Service Routing Application Plan form ● Vector Directory Number Form ● Call Vector Form ● ISDN Trunk forms	Multi-site BSR requires no special hardware other than ISDN BRI/PRI connectivity between switches.

ANI/II-Digits requirements

Forms	Hardware
● Vector Directory Number Form ● Hunt Group Form ● Call Vector Form ● Trunk Group Forms ● Vector Routing Tables Forms	Requires no hardware in addition to that required for Basic Call Vectoring.

CINFO requirements

Form(s)	Hardware
● Vector Directory Number Form ● Hunt Group Form ● Call Vector Form ● Trunk Group Forms ● Vector Routing Tables Forms	Requires no hardware in addition to that required for Basic Call Vectoring.

Look-Ahead Interflow requirements

Forms	Hardware
● Trunk Group Form (ISDN-PRI) ● CPN Prefix Table Form	Existing ISDN-PRI hardware can be used for LAI ISDN-PRI connectivity to the receiving switch. Interconnecting facilities must be ISDN-PRI with no interworking (that is, call connections that use both ISDN-PRI and non-ISDN-PRI facilities to complete) for the full capabilities of the feature to be operational. LAI calls that interwork may interflow successfully, but the ability to do so on an intelligent basis will be lost as will the Look-ahead DNIS information. Look-Ahead Interflow calls can connect ISDN-PRI switch-to-switch using private, public, or SDN facilities.

Adjunct Routing requirements

Forms	Hardware
● Hunt Groups ● Class of Restriction (for Direct Agent Calls) ● Call Vector ● Station ● Station (ISDN-BRI-ASAI)	ISDN-BRI Connection A TN556 ISDN-BRI circuit pack and a TN778 packet control must be in place. The latter provides packet bus control. Also, an adjunct/host processor must be in place to receive the request and select the route. A TN2198 two-wire BRI port circuit pack can be used in place of the TN556. In this case, an NT1 is also required. MAPD Connection MAPD hardware is a sandwich of two boards, the TN801 and a Pentium processor, which allows the switch to be connected to Ethernet and TCP/IP networks. The MAPD requires three contiguous slots on the switch: two slots are occupied by the MAPD unit, and the third is reserved for future use. Packet Bus The Packet Bus option (G3r only) must be enabled on the Maintenance-Related System Parameters form before associated ISDN-BRI forms and fields can be administered.

Enabling the Vector Disconnect Timer

Call Vectoring provides a Vector Disconnect Timer, which can be set for any amount of time between 1 and 240 minutes inclusive. The timer is enabled by selecting the timer field in the Feature-Related System-Parameters form. The timer is started when vector processing is started. Once the timer runs out, the call is dropped. The timer is canceled when vector processing terminates.

Enabling the timer allows queued calls that have not been answered within a determined amount of time to be dropped. For more information, see *Avaya Communication Manager Contact Center – Guide to ACD Contact Center*, 555-245-784.

Upgrading to a Call Vectoring environment

If you are already equipped with ACD and want to use Call Vectoring, the ACD environment must be upgraded to a Call Vectoring environment. This involves installing VDNs, vectors and hunt groups for the desired Call Vectoring feature(s).

The set of guidelines that follows is intended to serve as a general procedure for upgrading to a Call Vectoring environment.

1. Verify the vector options on the Customer Option Form.
2. Add the VDNs.
3. Evaluate the number of queue slots assigned to each split. Usually, you want to assign enough queue slots to allow all calls processed by Call Vectoring to be queued. See the considerations for Basic Call Vectoring in [Appendix C: Considerations for the vectoring features](#) on page 557 for more details.
4. Change hunt-groups to be vector-controlled.
5. Administer the vectors and at least one test hunt group.
6. Test all of the vectors to be installed.
7. Change the trunk groups, night destinations, etc., to use the VDNs.

Changing and testing a vector

Vectors currently being used to process calls should not be changed because changes would have an immediate and uncertain effect on the treatment that the calls are receiving. Instead, a new vector should always be written.

In testing the vector, you should not consider the entire vector at once. Rather, you should first figuratively divide the vector into portions, then test each of these portions until the entire vector is tested.

After the new vector is thoroughly tested, the vector should be brought into service by changing the VDN to point to the new vector.

The set of following guidelines is intended to serve as a general procedure for changing and testing vectors.

1. Check that a current version of the translation data is available.
2. Create a new VDN that points to the new vector. This VDN, which is temporary, is necessary to test the new vector.
3. Administer the new vector. Vector commands should be added and tested, one command at a time, starting with the first command. Be sure that each line is correct before proceeding to the next one.
4. Test the new vector with the new VDN. This ensures the new vector will function correctly when the vector is installed.
5. Install the new vector by changing the old VDN's vector assignment so that the VDNs now point to the new vector. Calls that are already being processed by the old vector will continue to be handled by that vector until the vector terminates vector processing.
6. Once all the calls are handled, remove the old vector and the VDN that was used for testing.

Identifying Links to a Vector

One or more VDNs always point to a vector. In addition, some vectors are linked to other vectors by **goto vector** commands or by **route-to** commands that point to a VDN. Before you delete or change a vector, you should identify all the VDNs and vectors that will be affected.

The **list usage vector nnn** command finds all the VDNs and vectors that send calls to vector **nnn**, where **nnn** is the assigned vector number.

For example, let's say you want to delete vector 3. To determine what other elements of your system send calls to vector 3, enter **list usage vector 3** and press **Enter**.

The List Usage Report screen is displayed.

list usage vector 3			Page 1
LIST USAGE REPORT			
Used By	Vector Number	1	Step 3
Vector	VDN Number	58883	
VDN			

VDN 58883 points to vector 3. In addition, step 3 in vector 1 sends calls to vector 3. When you delete vector 3, you'll need to change this vector and VDN so they point to a different vector or delete them too.

Finding All Occurrences of a Digit String

A single extension or an external phone number can be used in several elements in a complex vectoring system. When you modify VDNs or vectors, or when you change the phone numbers used in system elements such as **route-to** commands or Best Service Routing Plans, the switch allows you to find a specific digit string.

1. The **list usage digit-string (1-16 digits)** command finds the specified digit string in vectors, vector routing tables, and Best Service Routing Plans. The digit string can contain the numerals 0–9 and the characters *, #, ~, p, w, W, m, and s.

For example, to find the system elements that route calls to VDN 53338:

2. Type **list usage digit-string 53338** and press **Enter**.

The system displays the List Usage Report screen.

list usage digit-string		Page 1	
53338			
LIST USAGE REPORT			
Used By			
Vector	Vector Number	1	Step 3
Vector	Vector Number	5	Step 8
Vector	Vector Number	18	Step 4
Vector	Vector Number	37	Step 10
Best Service Routing Plan Number		1	Location 1
Best Service Routing Plan Number		2	Location 3
Best Service Routing Plan Number		5	Location 1

Three Best Service Routing Plans and steps in four different vectors route calls to this VDN. If you delete this VDN or assign a different extension, you'll need to update the extension used by these system elements.

■ ■ ■ ■ ■ ■ Appendix C: Considerations for the vectoring features

This appendix provides various considerations you should bear in mind when using the Call Vectoring features. These considerations are intended to help you get the highest degree of productivity from Call Vectoring. For Look-Ahead Interflow considerations, see [Look-Ahead Interflow \(LAI\)](#) on page 247.

Note:

If EAS is optioned, “skill” replaces “split.”

This appendix includes the following topics:

- [Displaying VDN names for vector-initiated Direct Agent calls](#) on page 558
- [Transferring calls to VDNs](#) on page 566
- [VDN Return Destination](#) on page 567

Displaying VDN names for vector-initiated Direct Agent calls

The Display VDN for Route-to DAC feature improves the efficiency of contact center agents who answer vector-initiated Direct Agent calls (DACs) that originate from multiple Vector Directory Numbers (VDNs).

The type of information displayed at the agent station display with a vector-initiated Direct Agent call can be summarized as follows:

- When the Display VDN for Route-to DAC feature is *not* enabled, only the EAS LoginID name for the agent who receives the call is shown.
- When the Display VDN for Route-to DAC feature *is* enabled for such calls, the “active VDN name” associated with the call is shown.

Providing agents with the ability to see the VDN name associated with an incoming call improves agent efficiency and customer satisfaction. For example, if an agent receives incoming trunk calls for different products from three different VDNs, the VDN name displayed by the Display VDN for Route-to DAC feature allows the agent to answer the call as a sales representative of that product. This feature is especially useful when vector-initiated Direct Agent calls route incoming trunk callers to personalized agent providing services for new customers, special product offers, or premier levels of service.

This section contains the following topics:

- [Operations](#) on page 558
- [Prerequisites](#) on page 559
- [Administering the Display VDN for Route-To DAC feature](#) on page 560
- [Creating vectors that use the Display VDN for Route-to DAC feature](#) on page 563
- [Interactions with other Communication Manager features](#) on page 564

Operations

The Display VDN for Route-to DAC feature is designed for call scenarios where a VDN-initiated call is routed to a vector where Direct Agent calls are originated by one of the following methods:

- A **route-to number** vector step with **cov** parameter set to **y**, where the number field is administered with a valid EAS loginID extension.
- A **route-to digits** vector step with **coverage** parameter set to **y**, where a **collect digits** vector step preceding this step is used to allow the caller to enter the digits for an EAS LoginID extension.

- An **adjunct routing** vector step, where a Direct Agent call is originated by the Route Select digit information returned from a CTI application.

The Display VDN for Route-to DAC feature is activated for an incoming trunk call when the call is routed through a VDN that has the Display VDN for DAC Calls? field administered to y. When one of the above-listed vector steps routes such an incoming call as a Direct Agent call to an EAS loginID extension, the active VDN name is shown on the called agent station display instead of the called EAS agent's LoginID name. If this call is routed to another EAS agent in the initially-called EAS agent coverage path, the active VDN name will again be shown on the covered-to agent station display, instead of the initially-called EAS agent LoginID name.

Station display formats

If the Display VDN for Route-to DAC feature is activated for an incoming trunk call routed through a VDN to a vector that initiates a Direct Agent call to an EAS agent, the format of the called agent station display appears as one of the following:

`<Incoming Trunk Name> to <VDN Name>`

`<Incoming caller ANI> to <VDN Name>`

If the Display VDN for Route-To DAC feature is not activated for an incoming trunk call, the called agent station display appears as one of the following:

`<Incoming Trunk Name> to <EAS loginID extension>`

`<Incoming caller ANI> to <EAS loginID extension>`

Note:

If the EAS agent to which the call is routed by vector-initiated Direct Agent Calling is not available, and the called EAS agent has a coverage path to other EAS agents, the Display VDN for Route-to DAC feature preserves the active VDN name and sends it to the agent station display for a covered-to EAS agent. If the call covers to a normal station extension in the called EAS agent coverage path, the Display VDN for Route-to DAC feature does not apply to the covered-to station display, and the EAS LoginID of the called EAS agent is displayed instead.

Prerequisites

To use the Display VDN for Route-to DAC feature for incoming trunk calls routed through a Vector Directory Number to an EAS agent via Direct Agent Calling, the following prerequisites must be satisfied:

Considerations for the vectoring features

- This feature is available for MultiVantage release R11.1 and later and Communication Manager 1.3 versions and later.
- The following administration settings are required:
 - The Expert Agent Selection (EAS) feature must be enabled via the System-parameters customer-options form and the Features-related system parameters form.
 - The VDN used to route an incoming trunk call to a vector that initiates a Direct Agent call must have the “Display VDN for DAC Call?” field set on page 2 of the Vector Directory Number form. Also, the Class of Restriction (COR) administered for this VDN must have the “Direct Agent Calling” field set to “y” on page 1 of the Class of Restriction form.
 - The EAS LoginID to which a vector-initiated Direct Agent call is routed must have an administered COR that has the “Direct Agent Calling” field set to “y” on page 1 of the Class of Restriction form.

For detailed feature administration instructions, see [Administering the Display VDN for Route-To DAC feature](#) on page 560.

Administering the Display VDN for Route-To DAC feature

To activate the Display VDN for Route-to DAC feature, the VDN used to route an incoming trunk call must be administered with the “Display VDN for DAC Calls?” field set to “y” The “active VDN name” station display treatment provided the Display VDN for Route-to DAC feature applies to the initial EAS agent who receives the vector-initiated Direct Agent call, as well as any EAS agents who may be in the coverage path of the EAS agent the call is initially routed to.

To enable the Display VDN for Route-to DAC feature:

1. Log in to the switch administration system.
2. Enter:

display system-parameters customer-options.

3. Go to page 5 of the form, as shown below.

display system-parameters customer-options		Page 5 of 10
CALL CENTER OPTIONAL FEATURES		
Call Center Release: 11.1		
ACD? y	PASTE (Display PBX Data on Phone)? y	
BCMS (Basic)? y	Reason Codes? y	
BCMS/VuStats LoginIDs? y		
BCMS/VuStats Service Level? y	Service Observing (Basic)? y	
Business Advocate? y	Service Observing (Remote/By FAC)? y	
Call Work Codes? y	Service Observing (VDNs)? y	
DTMF Feedback Signals for VRU? y	Timed ACV? y	
Dynamic Advocate? y	Vectoring (Basic)? y	
Expert Agent Selection (EAS)? y	Vectoring (Prompting)? y	
EAS-PHD? y	Vectoring (G3V4 Enhanced)? y	
Forced ACD Calls? y	Vectoring (ANI/II-Digits Routing)? y	
	Vectoring (G3V4 Advanced Routing)? y	
Lookahead Interflow (LAI)? y	Vectoring (CINFO)? y	
Multiple Call Handling (On Request)? y	Vectoring (Best Service Routing)? y	
Multiple Call Handling (Forced)? y	Vectoring (Holidays)? y	
(NOTE: You must logoff & login to effect the permission changes.)		

4. If the Expert Agent Selection? field is set to n, it must be changed to y.



Important:

This form can only be changed by installing a new license file to the communication server. Contact your Avaya or indirect channel account executive for assistance.

5. Enter:

change system-parameters features

Considerations for the vectoring features

6. Go to page 10 of the form, as shown below.

change system-parameters features	Page 10 of 12
FEATURE-RELATED SYSTEM PARAMETERS	
CALL CENTER SYSTEM PARAMETERS	
EAS	
Expert Agent Selection (EAS) Enabled? y	
Minimum Agent-LoginID Password Length:	
Direct Agent Announcement Extension: 47786	Delay: 0
Message Waiting Lamp Indicates Status For: loginID	
VECTORIZING	
Converse First Data Delay: 0	Second Data Delay: 2
Converse Signaling Tone (msec): 100	Pause (msec): 70
Prompting Timeout (secs): 10	
Interflow-qpos EWT Threshold: 0	
Reverse Star/Pound Digit for Collect Step? n	
Available Agent Adjustments for BSR? n	
SERVICE OBSERVING	
Service Observing: Warning Tone? y	or Conference Tone? n
ASAI	
Call Classification After Answer Supervision? y	Send UCID to ASAI? y

7. If the Expert Agent Selection (EAS) Enabled? field is set to n, set the field to y.

8. Enter:

change vdn XXXXX

where **XXXXX** is the VDN number for which the Display VDN for Route-to DAC feature is to be enabled.

9. Go to page 2 of the form as shown below.

change vdn 2004	Page 2 of 2
VECTOR DIRECTORY NUMBER	
AUDIX Name:	
Messaging Server Name:	
Return Destination:	
BSR Application: 1	
BSR Available Agent Strategy: 1st-found	
Delay ISDN CONNECT message? n	
Observe on Agent Answer? n	
Delay ISDN CONNECT Message on Agent Answer? n	
Forward Held-Call CPN? n	
Display VDN for Route-To DAC? y	

10. Set the Display VDN for Route-To DAC? field to y.

Creating vectors that use the Display VDN for Route-to DAC feature

You can administer a vector in several different ways to utilize the Display VDN for Route-to DAC feature.

Note:

For any of the vector examples shown below, if an incoming trunk call is routed through a VDN with the Display VDN for Route-to DAC? field set to y, the Direct Agent call is activated with the VDN Display for Route-to DAC feature.

Using collect digits and route-to digits commands

The following vector example shows how to:

- Use a **collect digits** vector step to prompt a caller to enter digits for a valid EAS agent loginID extension
- Use a **route-to digits** vector step to route the call to an agent as a Direct Agent call:

```
wait-time 0 secs hearing ringback
collect 5 digits after announcement 3001
go to step 5 if digits < > 1????
route-to digits with coverage y
announcement 3002
goto step 2
```

Using route-to number commands

The following simple vector uses the **route-to number** vector step to originate a Direct Agent call to an EAS LoginID extension:

```
wait-time 0 secs hearing ringback
route-to number 85103 with cov y
```

Using adjunct routing commands

You can also originate a Direct Agent call with a vector that includes an **adjunct route** vector step. When an incoming trunk call is routed through a VDN to a vector that includes an **adjunct route** vector step, vector processing treats this step like a **route-to number with cov** set to y vector step.

Considerations for the vectoring features

The following vector uses the adjunct route vector step to originate a Direct Agent call. In this example, the CTI application would be designed to route the call as a Direct Agent call in a Route Select ASAI message.

1. wait 0 secs hearing ringback
2. adjunct route link 3
3. wait 30 secs hearing ringback
4. announcement 3501
5. disconnect

Interactions with other Communication Manager features

Interactions of the Display VDN for Route-to DAC feature with other Communication Manager features include the following:

Call Coverage - When the “Display VDN for Route-to DAC” feature is activated for a call, and a vector-initiated Direct Agent call is made to an EAS agent having a coverage path that has other agents as coverage points, the active VDN name associated with the call is displayed on a covered-to agent’s station display instead of the originally-called EAS agent’s LoginID extension.

Call Forwarding - Display VDN for Route-to DAC has no impact on the Call Forwarding feature.

Station Conference/Transfer - When an EAS agent transfers or conferences a vector-initiated Direct Agent call that has the Display VDN for Route-to DAC feature activated to another agent or station user, the station display of the answering agent or station does not show the active VDN name that was previously displayed for the call. This is consistent with the existing station display treatment for transferred or conferenced calls that have a VDN name shown as the *to* party for a call.

Note:

For Communication Manager 1.3 (load 125 and later), when an EAS agent transfers or conferences a vector-initiated Direct Agent call that has the Display VDN for Route-to DAC feature activated to another agent or station user, the station display of the answering agent or station *does* show the active VDN name that was previously displayed for the call.

VDN Override - Active VDN name station display rules for the VDN Override feature are applied to the Display VDN for Route-to DAC feature. For example, if an incoming trunk call is routed through a VDN where the VDN Override feature is enabled, and the call is routed to a second VDN by a “route-to number” vector step where the **Display VDN for Route-To DAC?** option is set to **y**, the station display for an EAS agent that receives a subsequent vector-initiated Direct Agent call shows the second VDN’s name for the call instead of the called EAS agent’s LoginID extension.

Redirect on No Answer (RONA) - The Display VDN for Route-to DAC feature is activated only for vector-initiated Direct Agent call to an EAS LoginID extension. When the RONA timer expires after the call is not answered, one of the following results occurs:

- If subsequent vector processing again routes the call to an EAS LoginID extension by means of the Direct Agent Calling feature, and the Display VDN for Route-to DAC feature is enabled, the active VDN name is shown on the covered-to agent station display.
- If subsequent vector processing again routes the call to an EAS LoginID extension by means of the Direct Agent Calling feature, and the Display VDN for Route-to DAC feature is not enabled, then the EAS LoginID for the covered-to agent is shown on their station display.

Audix Messaging for EAS Agents - The Display VDN for Route-To DAC feature has no interaction with Audix Messaging for a vector-initiated Direct Agent call that is routed to an EAS agent and subsequently covers to the agent's Audix mailbox.

Adjunct Routing - If a call is routed through a VDN having the **Display VDN for Route-to DAC?** feature set to **y**, and an **adjunct route** vector step is executed that results in a Direct Agent call to an EAS agent, the "active VDN name" is displayed on the routed-to agent's station display instead of the called EAS agent's LoginID.

Transferring calls to VDNs

Care needs to be taken when writing a vector to which callers will be transferred. This is especially true if the vector manipulates or tests data that is delivered with the incoming call, such as ANI, II-digits, or CINFO digits.

To understand why care is needed, it is necessary to understand how a transferred call is treated. There are three main steps in a call transfer.

1. The transferring party hits the transfer button. The caller is put on hold. A second call is created with the transferring party as the originator.
2. The transferring party dials the VDN extension. Vector processing starts. The transferring party, not the caller, hears the initial vector provided feedback, if any.
3. The transferring party hits the transfer button for the second time. The two calls merge. The transferring party is dropped from the call. The caller becomes the originator of the new call. The caller now begins to receive vector provided feedback.

Between transfer steps 2 and 3 there is always a small but finite amount of time during which it is the transferring party who is connected to the vector. Any testing of ANI, II-digits, or CINFO digits during this time window applies to the transferring party and not to the caller. For this reason, it is recommended that vectors not start with an ANI, II-digit, or collect cdpd/ced step. Insert a delay of sufficient length to allow the transferring party to complete the transfer.

A delay is not required before a **collect x digits after announcement** step because a collect announcement is restarted for the caller when the transfer is complete.

VDN Return Destination

The VDN Return Destination feature allows an incoming trunk call to be placed back in vector processing after all parties, except the originator, drop. This feature is activated through switch administration of the VDN form. This feature is included in the Avaya Contact Center Deluxe package and the Avaya Contact Center Elite package.

A field on the VDN form allows the user to enter a VDN extension as a Return Destination. In this section, the VDN which has the Return Destination field administered will be called the “VDN with this feature active.” The Return Destination VDN (the one specified in the new field) will be referred to as the “Return Destination.”

Every incoming trunk call that is processed through a VDN with this feature active will be placed back in vector processing when all parties on the call, except the originator, drop. For this feature, the “originator” is the incoming party that originated the call at the time the call entered the VDN with this feature active.

Note:

Incoming calls on DCS ties do not go to VDN Return Destination.

The VDN that the call will be placed in (when the originator is the only remaining party) is determined by the “Return Destination”. This VDN may be the same or different than the original VDN.

This feature is used to keep the call active and give the caller the opportunity to signal the need for sequence dialing (by entering a “#”). There are two ways this can happen:

1. When the destination drops on its own (after having answered), the call will go to the Return Destination which will have a **collect digits** vector step. This step will try to collect the “#” sign entered by the caller.
2. When the call is not answered, the caller enters the “#” to request sequence calling (this “#” will be collected by the ASAI-Requested Digit Collection feature). This “#” is reported to the adjunct. The adjunct requests the `third_party_drop` (or `third_party_end_call`) for the destination, and at that point the call goes to the Return Destination.

The VDN Return Destination and ASAI-Requested Digit Collection features may be used independently, with the following rules:

1. If there is no ASAI request to collect digits, but a Return Destination is provided: when all parties, except the originator, drop, the switch will route the call with only one party active (the caller) to the Return Destination. At this point, the call enters vector processing for the VDN specified by the Return Destination.

The caller will keep returning to this same return destination indefinitely until either the caller hangs up or a busy or disconnect vector step is executed. Once a call leaves vector processing for the first time, the return destination will never be changed.

2. If a request is made to collect digits but there is no Return Destination provided: the switch will collect the digits and pass them on to the ASAI adjunct. It will be up to the adjunct to take action. However, if the action taken by the adjunct is to drop one party on the call, the switch will drop the other party as well and clear the call (it cannot retain a call with only one party, if there is no Return Destination for further processing).

User scenario — remote access with host provided security

A customer may use the VDN Return Destination feature to provide a more flexible remote access feature together with host-based call security. The remote user/caller does not have to call back into the switch when multiple destinations need to be reached nor does the caller have to enter his/her identification every time a new destination is desired.

This system consists of three VDN/vector pairs. The first VDN uses the vector shown in The following example.

Sample vector for remote access

1. collect 6 digits after announcement 1001 ("Please enter your identification number and password followed by # sign")
2. adjunct routing link 1221
3. wait-time 6 seconds hearing silence
4. disconnect after announcement 1003 ("We are sorry, but we are experiencing technical difficulties at this time, please try again later")

In this scenario, a remote caller calls into the switch by dialing the first VDN. The vector shown above prompts the caller to enter an identification number and a password that will be passed, via the adjunct routing vector command, to the host for validation. The host can keep track of invalid attempts or decide to de-activate or activate certain identification numbers based on customer set criteria. If the host is not available, the call will be disconnected after an announcement (vector step 4 above).

Sample return destination vector with disconnect

1. collect 16 digits after announcement 1002 ("Please enter the telephone number of your destination, followed by # sign")
2. adjunct routing link 1222
3. wait-time 6 seconds hearing silence
4. disconnect after announcement 1003 ("We are sorry, but we are experiencing technical difficulties at this time, please try again later")

If the ID and password are valid, the adjunct specifies a route to the second VDN, which uses the vector shown above. The switch collects digits for the destination that the caller wants to reach (vector step 1 above). The host receives the number entered by the caller (vector step 2 above) and validates the entered number to check if the caller is allowed to

reach the specified destination. If so, the host routes the call to the destination. After the called destination disconnects from a call, the caller can remain on the line to be connected to the Return Destination, which points to the same vector.

Note:

If the ID or password entered at the first VDN is invalid, then the call can be routed to a third VDN. The vector for this VDN (not shown) consists simply of a **disconnect after announcement** step with an appropriate announcement. The invalid call attempt is logged.

The caller, once connected to the Return Destination, can enter a second destination/phone number to connect to. The host performs the same validation on the destination number as in the first destination and routes the call as appropriate (destination entered by caller or alternate destination). Note that the host can also provide reports on all the destinations and times reached by each remote user.

In the Return Destination vector, it is recommended that the first vector command give the caller the opportunity to disconnect from the call rather than immediately routing the call to some destination. If the call was immediately routed and then the caller decided to hang-up, the destination that the call was routed to would ring, alerting the called party, but then no one would be on the line at the other end (this could be confusing to customers, and could be misinterpreted as a problem with the feature). Vector commands such as **wait-time**, **collect after announcement**, and **announcement** can provide the caller with the opportunity to disconnect before the call is routed. As an example, an **announcement** command with the recording "Please hang-up to end your call, or remain on the line if you wish to place another call" instructs the caller to disconnect, before the call is routed.

User scenario — saving in trunk facilities between contact centers

You can also use VDN Return Destination to return a call to a local agent after the call is transferred to a remote destination (call). This eliminates the need for the remote agent to transfer the caller back to a local agent and will save in switch trunk facilities, since each time the call is transferred back to a local agent an additional trunk is being used by the call.

For example, calls can be received at the local call through a VDN that has the return destination administered. These calls are delivered to an agent on the local switch. If the local agent transfers the call to a remote destination (because the caller needed to talk to an agent on the remote switch), the call returns to the Return Destination after the remote switch drops the call. The remote switch agent must inform the caller to remain on the line after they are finished and the remote agent just needs to disconnect from the call (hang up).

Considerations for the vectoring features

The Return Destination for this scenario should include an **announcement** vector command at the beginning to inform the caller to disconnect from the call, if they do not want to be reconnected to an agent on the local switch. A sample Return Destination vector is shown in the following example.

Sample return destination vector with announcement

1. announcement 1004 ("Please remain on the line, if you want to talk a to another representative")
2. queue-to split 101 pri m
3. announcement 1005 ("All our representatives are busy, please wait")
4. wait-time 60 secs hearing silence
5. goto step 3 if unconditionally

■ ■ ■ ■ ■ ■

Appendix D: Troubleshooting vectors

This appendix serves as a troubleshooting guide for Call Vectoring. The sections include the following topics:

- [Criteria for success/failure of call vectoring commands](#) on page 572
- [Unexpected feature operations](#) on page 577
- [Unexpected command operations](#) on page 578
- [Converse command debugging](#) on page 586
- [Tracking unexpected events](#) on page 589
- [Vector events](#) on page 592
- [Clearing events](#) on page 604

Criteria for success/failure of call vectoring commands

The following table summarizes the success and failure criteria for various vector commands. Before you write or evaluate vectors, it is important to understand the information in this table.

Note:

If EAS is enabled, “skill” replaces “split.”

Call vectoring command success/failure criteria	
adjunct routing	
Fails if any of the following are true: • VDN's COR does not permit routing to the adjunct-supplied destination. • TAC/ARS/AAR code is invalid. • Specified agent is not logged into the specified split for a direct agent call. • Local extension is not in the dialplan. • Invalid number was dialed. Otherwise, succeeds.	Stop wait-time or announcement step (if present). Then continue vector processing with the next sequential step. Route the call and provide feedback.
announcement	
Fails if specified announcement is not administered, not recorded, or busied out. Otherwise, succeeds.	Continue vector processing with the next sequential step. Play the announcement, then continue at the next sequential step.
busy	
Always succeeds. (CO without answer supervision trunk callers will not hear the busy tone.)	Exit vector processing, then play the busy tone for 45 seconds before dropping the call. (Unanswered CO trunk calls receive 45 seconds of ringback.)

Call vectoring command success/failure criteria (continued)	
check split	
Fails if any of the following are true: ● Vector conditional is false. ● Split's queue is full. ● Split is not vector-controlled. ● Call is already queued at the specified priority to the specified split. ● Call is already queued to three different splits. Otherwise: Succeeds, and the call is terminated to an agent. Succeeds, and the call is queued or requeued in the specified split at the specified priority.	Continue vector processing with the next sequential step. Exit vector processing, and pass control to call processing. Continue vector processing with the next sequential step.
collect-digits	
Fails if any of the following are true: Call originates from an outside caller who is not using a touch-tone telephone. No TTR is in the system, or the TTR queue is full. Caller enters fewer digits than the maximum specified. Otherwise, succeeds.	Call Prompting timer takes effect, command times out, and vector processing continues at the next vector step. Continue vector processing at the next step. Call Prompting timer takes effect, command is terminated, and any digits collected prior to the timeout are available for subsequent processing. Continue vector processing at the next step.

Call vectoring command success/failure criteria (continued)	
consider locations	
Fails if any of the following are true: - No BSR application administered in active VDN. - Location not administered in BSR application. - Status Poll VDN number not administered in BSR application. - Status Poll VDN number is invalid. - Status Poll fails because all trunks are busy. Otherwise: Succeeds, but takes no action if polling of specified location is suppressed. Succeeds, and place status poll call to the status poll VDN.	Continue vector processing with the next sequential step. Continue vector processing with the next sequential step. Suspend vector processing until status poll response received.
consider split	
Fails if any of the following are true: VDN skill (1st, 2nd, 3rd) is used in consider step but not administered for active VDN. Otherwise: Succeeds, and the status of the local split is evaluated.	Continue vector processing with the next sequential step.
converse-on split	
Fails if any of the following are true: - Converse split queue is full. - Converse split is not vector-controlled. - Auto-available split is in effect, and all agents are logged out by Redirection on No Answer (RONA). Otherwise: Succeeds, call is delivered to the converse split, and (if administered) digits are outputted to the VRU. The caller is connected to the VRU, the voice response script is executed, and (if necessary) digits are outputted to the switch.	Continue vector processing with the next sequential step. Continue vector processing with the next sequential step.

Call vectoring command success/failure criteria (continued)	
disconnect	
Always succeeds.	Play the announcement (if specified). Then drop the call.
goto step and goto vector	
Fails if the step condition is not met. Succeeds if the step condition is met.	Continue vector processing with the next sequential step. goto step - continue vector processing with the destination step goto vector - continue vector processing with the first nonblank step of the destination vector.
messaging split	
Fails if any of the following are true: ● Specified split is not an AUDIX split. ● Specified extension is invalid. ● Messaging split queue is full. ● Messaging split is not vector controlled and has no working agents (none logged in or all in AUX work mode). ● Communications link with the messaging adjunct is inaccessible. Otherwise, succeeds.	Continue vector processing with the next sequential step. Terminate vector processing.
queue-to split	
Fails if any of the following are true: ● Split's queue is full. ● Split is not vector-controlled. ● Call is already queued at the specified priority to the specified split. ● Call is already queued to three different splits. Otherwise: Succeeds, and the call is terminated to an agent. Succeeds, and the call is queued or requeued in the specified split at the specified priority.	Continue vector processing with the next sequential step. Exit vector processing, and pass control to call processing. Continue vector processing with the next sequential step.

Troubleshooting vectors

Call vectoring command success/failure criteria (continued)	
reply-best	
Fails if any of the following are true: ● Incoming call is not ISDN ● Incoming trunk group is not administered for shared UUI or for QSIG Supplementary Service b. Otherwise: Succeeds and returns status data of best resource found in consider series.	Drop the call. Drop the call.
stop	
Always succeeds.	Exit vector processing. Control is passed to normal call processing. Any queuing or treatment in effect remains in effect. Call is dropped if not queued.
wait-time	
Always succeeds.	Connect the specified treatment and pass control to the delay timer. Any feedback is continued until other feedback is provided.

Unexpected feature operations

The following table indicates and explains unexpected operations within Call Vectoring that you may encounter.

Unexpected feature operations	
Customer observations	Causes
General Vector Processing	
Vector stuck	1000 steps executed (3000 with enhanced LAI). No default treatment in the vector.
Audible feedback lasts longer than the delay interval.	Last vector step. Queuing for an announcement. Queuing for a touch-tone receiver for a collect digits step.
Look-Ahead Interflow	
Agent receiving phantom call.	Agents on both switches become available simultaneously. Avoid by including at the beginning of the receiving switch vector a short wait-time or announcement step. Also, use the interflow-qpos conditional (see How enhanced LAI works on page 255).
Remote agent receiving phantom calls when vectoring uses qpos conditional.	Interflow-qpos threshold may be set too low.
No Look-Ahead Interflow attempts accepted.	No trunks. PRI network failure. Insufficient FRL.
All Look-Ahead Interflow attempts accepted.	Look-Ahead Interflow attempts are interworking off of one of the following: Interworking off of the PRI network Receiving vector not designed for conditional acceptance route-to with coverage yes command was used to interflow Look-Ahead Interflow not optioned at the receiving switch.
Look-Ahead DNIS name not displayed or no collected digits received	LAI IE or VDN Name (Shared UII) not forwarding with call. Trunk group settings are not administered to support this data. For more information, see Information Forwarding on page 197.

Unexpected command operations

The following table indicates and explains the unexpected operations the customer may encounter in using the Call Vectoring commands.

Unexpected command operations	
Customer observation	Cause
adjunct routing	
Step skipped (that is, default treatment).	Invalid link extension. No trunks available. COR/FRL restricted. Timeout. (Application did not respond within the time specified in the wait-time command and/or within the time length of the recorded announcement.) Digit string inconsistent with networking translation. ASAI link down. Invalid route destination returned from adjunct.
Busy tone.	Busy local destination has no available coverage points.
Network reorder or intercept.	Digit string supplied by adjunct inconsistent with public network translation. Digit string inconsistent with networking translation.
Intercept or reorder tone heard.	Vector processing succeeded routing off switch, but a problem has occurred before routing to its final destination.
All trunks busy on a quiet system.	Two switches treating each other as backup switch.
Step skipped.	Port Network (PN) link down.

Unexpected command operations (continued)	
Customer observation	Cause
announcement	
Announcement not heard.	Announcement board not present. Announcement not administered. Announcement not recorded. Announcement being rerecorded. All ports busied out. Announcement restore in progress. Link to announcement circuit pack down.
Extra delay before hearing announcement. Vector processing stops. Listening to silence after announcement. Incomplete announcement.	Announcement queue full. All integrated announcement ports busy. Analog announcement busy. Analog announcement does not answer. Announcement is the last step. Agent becomes available. Previous adjunct routing step succeeds.
busy	
Ringback heard instead of busy tone.	Unanswered CO trunk.
check	
Call does not enter queue or terminate to agent.	Step condition not met.

Unexpected command operations (continued)	
Customer observation	Cause
check and queue - to	
Call does not enter queue or terminate to agent.	Queue length specified on the hunt group screen has been exceeded. Invalid split. Split not vector-controlled. Already queued to three different splits. No queue. Queue or check status indicates space when queue is full due to direct agent calls. Best keyword is used but consider series is not defining "best" data.
Call apparently answered in wrong order.	Call being requeued at different priority. Call superseded by higher priority call, including direct agent call.
Call is not routed to remote best location.	No trunk available.
collect digits	
Announcement not heard while waiting for digits, but network billing indicates that the call was answered.	Announcement board not present. Announcement not administered. Announcement not recorded. Announcement being rerecorded. All ports busied out. Announcement restore in progress. Dial ahead digit exists.

Unexpected command operations (continued)	
Customer observation	Cause
collect digits (continued)	
Collect step and announcement skipped.	TTR not in system. Link to PN that has TTR is down. TTR queue full.
Delay before hearing announcement.	All TTR ports busy, but space in queue. Announcement queue full. All integrated announcement ports busy. Analog announcement busy.
Vector stuck.	Analog announcement does not answer.
Dial-ahead digits not recognized.	Dial-ahead digits entered prior to first collection step. Call has been transferred. LAI attempt has been made. TTR has been released. 24 digits have already been provided. Call Prompting timeout since the last digit was entered.
Vector processing halted at collect step; announcement heard again upon return.	Call put on hold, transferred, or conferenced.
Insufficient digits collected; call routed to intercept.	Caller dialed # too soon. Caller dialed * without reentering correct digits. Call Prompting interdigit time-out.
Caller information button denied.	No digits were collected. Display not in Normal mode.
Collect announcement not heard and first collected digit incorrect.	System does not contain all TN748C Vintage 5 (or later) circuit packs.

Unexpected command operations (continued)	
Customer observation	Cause
Incomplete announcement.	Agent becomes available. First digit dialed.
consider	
Local split/skill best (in Primary vector or Status Poll vector)	If split/skill number is correct, split or skill has no agents logged in, no queue slots available, or all agents are in AUX work.
Remote location is never best	No BSR application plan assigned to Primary VDN. Location number not assigned in application plan. Missing routing number for Status Poll VDN. No vector assigned to Status Poll VDN. Step in Status Poll vector is initializing "best" data before reply-best step.
converse-on split¹	
VRU script not executed.	Queue full. No queue. Invalid split. Split not vector-controlled. VRU down.
"Ani" digits not passed.	ANI not available.
"Qpos" digits not passed.	Call not queued to a nonconverse split.
No data returned from VRU.	No TTRs available.
VRU script terminated prematurely.	Agent becomes available. VRU script attempted to transfer the call.
Wait digits not passed	Call not queued or no working agents in splits where call is queued.
disconnect	
Announcement not heard.	Announcement board not present. Announcement not administered. Announcement not recorded. Announcement being rerecorded. All ports busied out. Announcement restore in progress.

Unexpected command operations (continued)	
Customer observation	Cause
disconnect (continued)	
Extra delay.	Announcement queue full. All integrated announcement ports busy. All analog announcements busy.
Vector stuck.	Analog announcement does not answer.
goto step	
Branch is not made to the specified step.	Step condition not met. System time not set.
goto vector	
Branch is not made to the specified vector.	Step condition not met.
Vector stuck.	Goto vector with no steps or with all failed steps.
messaging split	
Vector stuck (with ringback).	Extension unknown to AUDIX.
Step skipped, no message left.	AUDIX link down. DCS link to remote AUDIX down. All DCS trunks busy. Queue for AUDIX voice ports is full.
Vector stuck (with busy).	Remote AUDIX link down.
Messages not found.	Message extension is none (message is left for VDN that accessed the vector).
Delay before AUDIX answers.	All AUDIX ports busy, but space in queue.
Busy tone. Step skipped.	Queue for AUDIX voice ports is full. Split not AUDIX split anymore.

Troubleshooting vectors

Unexpected command operations (continued)	
Customer observation	Cause
reply - best	
Status poll VDN/vector not processing any calls	Incoming call not ISDN. No application plan defined for BSR application. Status Poll VDN routing number missing from or wrong in application plan.
route - to²	
Step skipped (that is, default treatment).	Invalid local extension. No trunks available. COR/FRL restricted. Digit string inconsistent with networking translation. Busy local destination (route to digits without coverage and route to number). No digits collected. Step condition not met.
Network reorder.	Digit string inconsistent with public network translation.
Intercept or reorder tone heard.	Vector processing succeeded routing off switch, but a problem has occurred before routing to its final destination.
All trunks busy on a quiet system.	Two switches treating each other as a backup switch.
stop	
Call dropped.	Call not queued when vector processing stops.

Unexpected command operations (continued)	
Customer observation	Cause
wait-time	
Audible feedback longer than delay interval.	Queuing for an announcement or for a TTR. Stop command executed.
Audible feedback shorter than delay interval.	Agent becomes available. Previous adjunct routing step succeeds.
Music not heard.	No music port administered. Music source disconnected or turned off.
Alternate audio/music source not heard	Announcement board not present. Audio/Music source not administered. Audio/Music source not recorded. Audio/Music source being rerecorded. All ports busied out. Announcement restore in progress.

1. Refer to the [Converse command debugging](#) section later in this appendix for more details on converse-on command debugging
2. Complete operation details for the route to commands are presented in [Appendix I: Operation details for the route-to command](#) on page 651.

Converse command debugging

The following table is intended to help your troubleshooting efforts with the **converse-on** command.

Note:

Refer to [Appendix J: Call flow and specifications for converse – VRI calls](#) on page 657 for details on the call flow for converse-VRI calls.

Converse command debugging

Symptom	Cause	Analysis
Placing a call:		
Converse step skipped.	VRU down (RONA).	Vector event.
	Split queue full	Vector event.
Call stuck in converse.	VRU port doesn't answer, RONA not used.	Check split administration.
	VRU down, RONA leaves call in queue.	Check split status.
Data passing:		
First set of digits not collected.	Converse first delay too short.	Check administration.
	No ANI available.	Vector event.
	No digits collected.	Vector event.
	Call not queued (qpos).	Vector event.
	Expected wait time not available	Vector event.
	VRU timed out awaiting first digit.	VRU error log/trace.
	VRU first digit timeout too short.	Check VRU script.
		Check converse first data delay.
	Faulty hardware.	Diagnostics

Converse command debugging (continued)

Symptom	Cause	Analysis
Second set of digits not collected.	VRU digit count on first prompt in VRU script does not include “#.” Converse second delay too short. No ANI available. No digits collected. Call not queued (qpos). Expected wait time not available because call is not queued or the splits/skills that the call is queued to are not staffed VRU timed out awaiting first digit. VRU error log/trace. VRU first digit timeout too short. Inter-digit timeout too short on first prompt and collect. Faulty hardware.	Check VRU script. Check administration. Vector event. Vector event. Vector event. Vector Event Check VRU script. Check converse second data delay. Check VRU script. Diagnostics.
Digits incomplete.	Converse data delay too short. Faulty hardware.	Check administration. Diagnostics.
Second set of digits is the same as the first digits passed.	VRUs first prompt timed out. Faulty hardware.	Check administration. Diagnostics.

Troubleshooting vectors

Converse command debugging (continued)

Symptom	Cause	Analysis
Data return:		
No digits returned to the switch.	Flash not recognized by switch. Converse data return FAC not administered. VRU does not return FAC. VRU returns incorrect FAC. Digit timeout during FAC. Converse data return FAC overlaps with other entries in the dial plan Faulty hardware.	VRU error log/trace. Check flash timing on VRU. Check administration. VRU script. Transfer attempt vector event. VRU script. Transfer attempt vector event. Transfer attempt event. Check dial plan. Diagnostics.
Not all digits returned to the switch.	Digit timeout after FAC. Overflow of Call Prompting buffer Faulty hardware.	None unless VRU logs being dropped by the switch. Vector Event. Diagnostics.
Collect announcement not heard.	Too many digits returned by VRU. Faulty hardware.	Check VRU script. Diagnostics.

Tracking unexpected events

You can display unexpected events related to Call Vectoring and Meet-me Conference. When you have corrected each problem, then you can clear events from the error log. An event is an error that results from resource exhaustion, from faulty vector programming, or from incorrect user operation rather than from a switch software error. For example, failures involving the **route-to** command are usually due to an invalid extension entered by the user.

By displaying events, you can diagnose and correct each problem, as indicated by its corresponding event number, and eliminate the need for a technician to make on-site visits to do the same.

The following sections explain how you can troubleshoot by tracking unexpected events.

Display events criteria

Use the **display events** command to access the EVENT REPORT screen. Use the fields on this screen to specify the event report criteria.

display events	Page 1 of 1	SPE B
EVENT REPORT		
The following options control which events will be displayed.		
EVENT CATEGORY		
Category: meetme		
REPORT PERIOD		
Interval: a	From: / / :	To: / / :
SEARCH OPTIONS		
Vector Number:		
Event Type:		
Extension: 36090		

The following table describes the fields used with the **display events** command.

Field	Description
Category	Enter denial , meetme , vector , or all to specify the type of event you want to display.
Interval	Select the time period for which you want to display events. Enter h (hour), d (day), w (week), m (month), or a (all).
From/To	Enter the date and time of day when you want to start and end the search.
Vector Number	Enter a specific vector number to report on. When the Category field is set to meetme , this field is ignored.
Event Type	Enter a specific event type to report on. If this field is blank, events for all types are reported.
Extension	Enter a specific extension or VDN to report on. If this field is blank, events for all extensions are reported.

Display events report

After you have entered your report criteria, submit the command by pressing **Enter**. The following screen shows examples of events.

display events						
EVENTS REPORT						
Event Type	Event Description	Event Data 1	Event Data 2	First Occur	Last Occur	Evnt Cnt
90	Wait step music failed	3/1	2A2	02/12/15:42	02/13/09:40	255
112	Converse no prompt digits	3/2	2A2	02/12/15:42	02/13/09:40	255
56	Call not in queue	8/1	28B	02/12/15:43	02/13/09:40	255
220	EWT call not queued	8/2	28B	02/12/15:43	02/13/09:40	255
150	Invalid hunt group	8/3	28B	02/12/15:43	02/13/09:40	255
56	Call not in queue	8/5	28B	02/12/15:43	02/13/09:40	255

The following table describes the information displayed in the event report.

Column	Description
Event Type	Displays a unique number that identifies the type of event that occurred. These are explained in more detail in Vector events on page 592.
Event Description	Displays a brief explanation of the event.
Event Data 1	Displays the following data: • <i><number1>/<number2></i> (for example, 12/5), where <i><number1></i> is the vector number associated with the vector event, and where <i><number2></i> is the step number associated with the vector event. • <i>Split<number></i> (for example, Split 89), where <i><number></i> is the split number associated with the vector event. • For Meet-me Conference events, this is the port ID of the user associated with the event.
Event Data 2	Displays the following data: • Additional data encoded as a hex number (for example, 4C). This number serves as a call identifier. If two or more events with an identical identifier occur at about the same time, it can be concluded that the events were caused by the same call. • For Meet-me Conference events, this is the VDN of the Meet-me Conference used during the event.
First Occur/Last Occur	Displays the date and time the event first occurred and the date and time the event last occurred.
Evnt Cnt	Displays, up to 255, the total number of vector events of this type that have occurred.

Vector events

The following table provides a list of events, the brief description that displays on the screen, and a full explanation of the event.

Summary of events

Event type	Event description	Explanation
1	Call dropped; call not queued at stop step.	Vector processing ended without the call being queued to a split and, as a result, the call cannot be answered. This implies that some default condition was not programmed or that the vector was designed to not always answer the call. Also, call was subsequently dropped.
2	Vector with no steps	The call encountered a vector with no steps administered.
3	1000 step executed	This can occur due to the following: Incorrect vector programming (for example, including a series of goto steps that point to one another) Excessive repetition of a programmed loop during a single call (for example, recurring announcement-wait loop)
4	Administration change	The administration of this step occurred while the step was being executed. The call flow for this call is unpredictable. Vectors should not be changed while calls are active.
5	Call dropped by vector disconnect timer	The call was still in vector processing when the vector disconnect timer expired. The call dropped.
7	vec_act.c (07)	There is a mismatch between Attendant Vectoring and Call Vectoring between the VDN and the vector.
8	vec_act.c (08)	There is a mismatch between Attendant Vectoring and Call Vectoring between the incoming call and the VDN.
9	vec_act.c (09)	There is a mismatch between Attendant Vectoring and Call Vectoring between the incoming call and the vector.
10	Retrying announcement	During an announcement step, a collect digits step that contains an announcement, or a disconnect step, the announcement was not available, and the announcement queue (if specified) was full. The step is retried at regular intervals.

Summary of events (continued)

Event type	Event description	Explanation
11	No announcement available	During an announcement step, a collect digits step that contains an announcement, or a disconnect step, the announcement was not available for one of the following reasons: ● Announcement was not recorded ● Analog announcement was busied out ● Integrated announcement board was not installed ● Integrated announcement ports were busied out ● Integrated announcement was being recorded or restored
20	Call cannot be queued	A queue-to split, messaging split , or check split command failed to queue the call. NOTE: Event types 520, 521, 522 and 541 may be observed for the same call at the same time.
21	Queued to three splits	The call attempted to queue to four splits. Multiple split queuing allows the call to queue to a maximum of three splits simultaneously. If the call queued to one or more splits, and if it should now be dequeued from those splits and then queued elsewhere, one solution is to route the call to a station (which may be administered without hardware). Once this happens, the call is forwarded to the VDN that controls the next stage of the call.
22	vec_q_attd (), vect_q_atg (), vec_q_hunt () (22)	Applies to Attendant Vectoring and indicates that the call is in the attendant queue and another attempt is made to queue the call to an attendant or hunt group, or the call is in the hunt group queue and an attempt is made to queue it to an attendant or too many attempts are made at queueing to the hunt group.
30	No TTR available	A collect digits command failed because: ● TN744 port was not available ● All queue slots were occupied
31	Dial-ahead discarded	Previously entered dial-ahead digits have been discarded via access of a(n) adjunct routing, converse-on, route-to number , or messaging split step.
32	Prompting buffer overflow	The prompting digit buffer already contained the maximum of 24 digits when additional dial-ahead digits were entered by the caller. These additional digits are not stored.
33	ced digits left behind	A collect ced digits step collected digits from a UEC IE, and more than 16 digits were sent from the network.
34	cdpd digits left behind	A collect cdpd digits step collected digits from a UEC IE, and more than 16 digits were sent from the network
35	ced digits not available	A collect ced digits step collected digits from a UEC IE, and no digits were sent from the network, or no digits were present in the UEC IE.

Troubleshooting vectors

Summary of events (continued)

Event type	Event description	Explanation
36	cdpd digits not available	A collect cdpd digits step collected digits from a UEC IE, and no digits were sent from the network, or no digits were present in the UEC IE.
37	"collect" digits for variable error	- Failed to put the local variable value in the local linked list of collect variables for the call. This implies that the system variable limit was reached. - Failed to put the global variable value in the Variables for Vectors table due to messaging issue with the switch. - Unknown or invalid variable type defined in the "collect" vector step.
38	Variable not defined	The variable conditional that is tested is not defined in the Variables for Vectors administration table.
40	Messaging step failed	A messaging step failed because the Messaging Adjunct was not available. NOTE: Event types 540 and 541 may be observed for the same call at the same time.
50	Route -to step failed	A route-to step failed to reach the intended destination. NOTE: Event types 51 and 52 may provide more specific information regarding the reason for the failure. See Appendix I: Operation details for the route-to command on page 651.
51	No digits to route-to	The route-to digits step was unable to route the call because the previous collect digits step failed to collect any digits. This could result from an error in vector programming (for example, a route-to digits step appears without a preceding collect digits step). More often, however, this results because the caller was unable to enter the required digits (that is, the caller was using a rotary telephone), or because the caller was not provided with enough information to do so (as can be the case for auto-attendant applications).
52	No available trunks	A route-to command was unable to reach the specified off-switch destination due to a lack of available trunks.
53	Route-to step failed	The step was unable to seize a trunk because of a hardware problem or glare.
54	LAI retry	Look Ahead Interflow route-to step failed because of glare. The route will be retried once.
55	Double coverage attempt	Coverage option on route-to step was ignored because double coverage is not allowed. This may happen when the call has covered to a VDN.
60	Adjunct route failed	An adjunct route failed for one of reasons indicated in event types 61 through 66.

Summary of events (continued)

Event type	Event description	Explanation
61	Invalid destination	The adjunct routing command returned digits that did not represent a valid destination.
62	Adjunct route cancelled	The adjunct routing step was cancelled because another “routing” step (such as a queue-to split step) was encountered in the vector.
63	Queue before route	The adjunct routing command was skipped because the call had already been queued via a queue-to split or a check split command.
64	Adjunct link error	The adjunct routing command was cancelled for one of the following reasons: ● Link to the adjunct was down ● ASAI protocol violation prevented the call from completing ● Software resources to complete the call were unavailable
65	Agent not logged in	A Direct Agent Call was made to an agent who was not logged into the relevant split. Used for adjunct routing request only.
66	Agent not member of split	A Direct Agent Call was made to an agent who is not a member of the relevant split. Used for adjunct routing request only.
67	Invalid direct agent	A Direct Agent Call was made to an agent extension that is not valid. Used for adjunct routing request only.
68	Adjunct route using NCR failed.	NCR routing failed and a tandem trunk-to-trunk routing could not be done.
70	Busy step for CO trunk	A CO trunk call reached a busy step in a vector without having previously received answer supervision. As a result, the caller continues to hear ringback rather than the busy tone.
80	Time not set	A goto step with a time-of-day conditional was processed, but the switch time was not set.
81	No digits collected	No digits were collected and a comparison was requested against a digit string or in-table. The comparison test was considered false and the next step in the vector was executed.
90	Wait step music failed	A wait-time step with music was accessed, but the music was not connected. Music may not be administered correctly.
91	Wait step ringback failed	A wait-time step with ringback was accessed, but the ringback was not connected.
100	Redirect unanswered call	The call was sent to an agent via a vector, but, due to the Redirection on No Answer (RONA) feature, the call was redirected from the ringing agent.

Troubleshooting vectors

Summary of events (continued)

Event type	Event description	Explanation
101	Redirect of call failed	The call was sent to an agent via a vector, but, due to the Redirection on No Answer (RONA) feature, the call was redirected from the ringing agent. The call could not be redirected.
110	Converse no ANI digits	On a converse-on step with passing type ani , no information was available to populate the field.
111	Converse no qpos digits	On a converse-on step with passing type qpos , no information was available to populate the field.
112	Converse no prompt digits	On a converse-on step with passing type digits , no information was available to populate the field.
113	Converse drop during data	On a converse-on step, the converse agent hung up while data was being passed. This may indicate a port failure.
115	ASAI transfer converse	ASAI attempted a transfer of a call that was active at a converse step. The transfer failed, and vector processing continued at the next vector step.
116	Converse transfer denied	A transfer of a call that was active at a converse-on step was attempted. The transfer either failed or was denied, and vector processing continued at the next vector step.
117	Agent drops converse	While active on a converse-on step, an agent became available in a split associated with a queue-to split or check split step. The call was delivered to the nonconverse agent, and the converse agent was dropped.
125	Data return no digits	On a converse-on step, the converse agent activated data return but did not return any digits.
126	Data return timeout	On a converse-on step, the converse agent activated data return but timed out while waiting to return digits. Vector processing continued at the next vector step.
140	Coverage conference denied	Coverage to a VDN in a coverage path was denied because more than one party was active on the call.
150	Invalid EAS hunt group used in the vector step	Either the skill hunt group was removed or the skill hunt group became a non-ACD hunt group.
151	Skill indirection used improperly	Either no VDN skills are administered or the vector command has skill indirection and EAS is not enabled.
160	No vector steps, ANI sent	ANI was sent to the CMS for a call that reached a VDN that accessed a vector with no steps defined.
161	uui sent to CMS, but there were no steps in the vector.	A call was directed to a VDN associated with a vector that has no steps.
170	ASA - invalid VDN	A check or goto test requested a comparison of ASA for a VDN that had been removed since the vector was programmed. The comparison test was considered false and the next step in the vector was executed.

Summary of events (continued)

Event type	Event description	Explanation
200	ANI not avail - digits	A goto test requested a comparison of ANI against a digit string and ANI was not available for the call. The comparison test was considered false and the next step in the vector was executed.
210	Routing table not assigned	A goto test requested a comparison with a vector routing table that is not assigned or had been removed since the vector was programmed. The comparison test was considered false and the next step in the vector was executed.
211	No entries in routing table	A goto test requested a comparison with a vector routing table that has no entries. This is considered as a non-match.
212	ANI not avail - table	A goto test requested a comparison of ANI against “in-table” and ANI was not available for the call. The comparison test was considered false and the next step in the vector was executed.
213	No digits in variable	“In-table” is administered, but the variable does not contain any digits on which to search.
220	EWT call not queued	A goto test for a call or converse data passing requested EWT for a call not in queue. In this case, the wait time was assumed to be infinite and the comparison was based on EWT > largest possible threshold.
221	EWT not sent to VRU	The EWT “wait” time for the call was not sent to the VRU for a converse-on passing wait vector step because the call was not queued or the splits/skills that the call was queued to were unstaffed.
222	System clock change	The system clock was changed, therefore any calculations involving time (i.e., ASA and EWT) will be inaccurate.
230	II-digits not avail - digits	A goto test requested a comparison of II-digits against a digit string and II-digits were not available for the call. The comparison test was considered false and the next step in the vector was executed.
231	II-digits not avail - table	A goto test requested a comparison if II-digits against in-table and II-digits were not available for the call. The comparison test was considered false and the next step in the vector was executed.
240	No agent strategy found in VDN	The active VDN for the call, as determined by VDN override, did not have a BSR Available Agent Strategy.
251	Call is not incoming ISDN	Occurs when a reply-best command in a status poll vector receives and tries to process a non-ISDN call. Processing in the status poll vector terminated is without a reply being sent.
261	No “best” location found	A queue-to best , check-best , or reply-best command failed because the call vector was unable to calculate a best value or because no local best existed. Vector processing continues at the next step. Vectors in multi-site BSR applications won’t attempt to interflow calls in this situation.

Troubleshooting vectors

Summary of events (continued)

Event type	Event description	Explanation
262	Look-Ahead Interflow attempt failed	Interflow of the call failed: no trunk was available, LAI denial, or some other problem. Vector processing continues at the next step. In BSR applications, polling of this resource is temporarily suppressed.
271	No BSR app num in VDN	A queue-to best , check-best , or consider location command failed because the active VDN for the call as determined by VDN override has no BSR application number assigned. Processing continues with the next vector step. Only occurs in multi-site BSR applications.
272	No BSR application plan administered	A queue-to best , check best , or consider location command failed because the application number assigned to the active VDN does not have an application plan assigned. Processing continues at the next step.
273	Location not on BSR form	A consider command failed because it refers to a location number that is not in the BSR Application form assigned to the active VDN. Vector processing continues at the next step.
274	Status Poll VDN field is blank	A consider command failed because the entry for this location on the BSR Application form does not contain a routing number for the status poll VDN.
275	Interflow VDN field is blank	A queue-to best or check-best command failed because the entry on the BSR Application form for the relevant location does not contain a routing number for the interflow VDN.
276	Agent Status Info Invalid	A consider location command failed because the status poll returned invalid data for an available agent (AIT, skill level, or occupancy is missing or out of range). Vector processing continues at the next step. Polling of this location is temporarily suppressed.
277	BSR Status Info Invalid	A consider location command failed because the status poll returned invalid EWT data. Vector processing continues at the next step. Polling of this location is temporarily suppressed.
278	No BSR Data in Response	A consider location command failed because the status poll did not return data in the DISCONNECT message. Vector processing continues at the next step. Polling of this location is temporarily suppressed.
279	No response from status poll	A consider location command failed because the status poll did not respond within the time allowed or because the status poll could not be performed. Vector processing continues at the next step. Polling of this location is temporarily suppressed.
280	Bad resp from status poll	A consider location command failed because it received an invalid response from the status poll such as an LAI acceptance message (such as ALERT or CONNECT). Vector processing continues at the next step. Polling of this location is temporarily suppressed.

Summary of events (continued)

Event type	Event description	Explanation
281	BSR EWT is infinite	A consider command failed because the EWT for the referenced split or skill is infinite. This may be because all agents are logged out or in AUX work, or because no queue slots are available. Vector processing continues at the next step. Polling of this location is temporarily suppressed.
282	BSR status poll attempt failed	A consider location command failed because the status poll attempt failed. See other events for specific reason. Vector processing continues at the next step. Polling of this location is temporarily suppressed.
283	BSR poll no trunks	A consider location command failed because there were no available trunks. Vector processing continues at the next step. Polling of this location is temporarily suppressed.
284	BSR poll seize fail	A consider location command failed because the status poll was unable to connect to a trunk due to a hardware problem. Vector processing continues at the next step. Polling of this location is temporarily suppressed.
285	BSR poll glare retry	The first status poll attempt for a consider location command was unable to connect to a trunk due to a race condition (the same trunk being seized for the outgoing call had an incoming call from the remote end). This status poll will be attempted once more. A second attempt failure will result in event 282.
287	Invalid status polling destination	An attempt was made to perform BSR polling over ISDN without B-Channel over a tandem trunk configuration that combines QSIG TSCs and AT&T TSCs (this type of interworking is not supported by Avaya's ISDN protocol).
288	BSR Poll: TSC not administered	The trunk group form does not contain a trunk member administered for purposes of TSC.
291	No AITCI storage left	The network does not support the transport of all user data, so some user data was not sent. You can prioritize the user data using the Shared UI Feature Priorities page of the ISDN Trunk Form. For more information, see Information Forwarding on page 197.
292	Data dropped by other app	
293	No room for reply-best information	The network or shared trunk setting does not support the transport of all data for the best resource. This is unlikely under normal circumstances since only 12 bytes of user information are required. Also see event 298.
294	No room for in-VDN time	The network does not support the transport of all user data. You can prioritize the user data using the Shared UI Feature Priorities page of the ISDN Trunk Form. For more information, see Information Forwarding on page 197.
295	No room for collected dgt	
296	No room for VDN Name	
297	No room for Other LAI	
298	Reply-best got bumped	The network or shared trunk setting does not support does not support the transport of all data about the best resource. (No other applications share user data included in a DISCONNECT message.)

Troubleshooting vectors

Summary of events (continued)

Event type	Event description	Explanation
299	In-VDN time got bumped	The network does not support the transport of all user data. You can prioritize the user data using the Shared UUI Feature Priorities page of the ISDN Trunk Form. For more information, see Information Forwarding on page 197.
300	Collected dgts got bumped	
301	VDN Name got bumped	
302	Other LAI got bumped	
303	Block: send reply-best	The transport of the best data for a reply-best command was denied because the trunk group is neither Supplementary Service b or Shared UUI.
304	No enhanced info is sent	During the execution of a queue-to best or check best step, information forwarding transport over this trunk was denied because the trunk group is neither Supplementary Service b nor Shared UUI. This event is not logged for LAI (for example, in execution of a route-to step) in order to permit backward compatibility. For more information, see Unexpected feature operations on page 577 as well as Information Forwarding on page 197 and Appendix E: Advanced multi-site routing on page 605.
305	A BSR local treatment vector pulled a remotely queued call back to the local switch to route it elsewhere	If a queue-to best step is followed by steps that use any commands other than announcement , wait , or go-to , the trunk to the remote queue is dropped. This functionality can be exploited to allow the local server to “take back” calls that are interflowed to a remote location after a specified time limit is exceeded. To implement this strategy, a wait step with a specified time interval is included in the interflow vector on the local server, followed by one or more route-to steps that redirect the call to an alternate contact center locations.
310	NCR: Invoke trunk not ISDN	Check that only ISDN trunks are executing the vector steps where NCR is being invoked.
311	NCR: Bad NCR trunk admin	Check that all Trunk Form and Signaling Group form fields related to the NCR feature are correct.
312	NCR: No NCT PSTN service	Check that the PSTN service provider has activated the NCT feature for the ISDN trunk being used for NCT call redirections.
313	NCR: No NCT outgoing trk	Check that the ISDN trunk group is administered as a two-way trunk group and that the Usage Allocation settings for the trunk have been set up correctly.
314	NCR: NCT outgo trk drop	Shows that the second leg of the NCT call has been dropped due to a trunk hardware problem, or that a vector step has been executed that returned and ISDN DISCONNECT message (such as a busy vector step).
315	NCR: PSTN NCT invoke err	The PSTN switch has not accepted the NCT invocation attempt. Check that the PSTN network switch complies with the NCT standards.

Summary of events (continued)

Event type	Event description	Explanation
316	NCR: PSTN NCT netwrk err	The PSTN switch has accepted the NCT invocation attempt, but has rejected it due to some error condition within the network switch. Check that the Network Call Redir field on the Trunk form is administered correctly. Make a request to the PSTN service provider for troubleshooting assistance.
317	NCR: Used NCT trk-to-trk	NCT has not been successfully invoked, but the incoming call is still active as a switch trunk-to-trunk connection (this is only an informational message).
318	NCR: No NCD PSTN service	Check that the PSTN service provider has activated the NCD feature for the ISDN trunk being used for NCD call redirections.
319	NCR: NCD invalid PSTN nmbr	The PSTN switch has detected that the number used for the NCR invocation that was administered in the <i>route to number</i> vector step or in the BSR Application Table's VDN Interflow Number field is an invalid PSTN number (the correct PSTN number used through switch administration).
320	NCR: NCD call connect err	The vector step has been executed before the vector step invoking NCD that sends an ISDN CONNECT message to the PSTN.
321	NCR: PSTN NCD invoke err	The PSTN has not accepted the NCD invocation attempt. Check that the PSTN network switch complies with the NCD standards. Make a request to the PSTN service provider for troubleshooting assistance.
322	NCR: PSTN NCD netwrk err	The PSTN switch has accepted the NCD invocation attempt, but has rejected it due to some error condition within the network switch. Make a request to the PSTN service provider for troubleshooting assistance.
323	NCR: PSTN NCD max redirs	The PSTN has detected that the call has been redirected by NCD more than the public network "maximum number of call deflections limit" will allow. Modify vector processing to reduce the number of NCD attempts.
324	NCR: PSTN NCD no disc	The PSTN switch has not disconnected the ISDN trunk after performing the NCD or NCT call redirection. Make a request to the PSTN service provider for troubleshooting assistance.
325	NCR: Internal system err	The switch problem with call processing for the NCR invocation attempt. Alternately, for NCT, the first vector step at the redirected-to endpoint is possibly not programmed with a call treatment vector step such as wait hearing ringback , wait hearing music , or announcement . Avoid the use of a vector step such as wait hearing silence or wait hearing i-silence for the first vector step at the redirected switch endpoint.
326	No ETSI ECT linkID	The PSTN switch has returned a FACILITY message to the local communication server that includes the following reject component: <code>LinkIDNotAssignedByNetwork</code> . In this case, the local communication server leaves the calls in a trunk-to-trunk transfer state.

Troubleshooting vectors

Summary of events (continued)

Event type	Event description	Explanation
520	Split queue is full	A queue-to split , check split , or messaging split command was executed, but the call did not queue to the split because the queue (if administered) was full. To prevent this condition, use a goto step...if calls queued in split...>... before each queue-to split or check split step so that an alternative treatment may be provided for these cases.
521	Not vector-controlled	The split accessed by a queue-to split or check split command is not vector-controlled. As a result, the step is skipped.
522	AAS split cannot queue	A queue-to split , check split , or messaging split command was executed on an auto-available split (AAS), but the call did not queue to the split because all the agents were logged out by Redirection on No Answer (RONA).
540	AUDIX link down	AUDIX could not be accessed via a messaging split command, because the AUDIX link was down. As a result, the step is skipped.
541	Not a messaging split	The split administered for the messaging split command is not a messaging split (that is, it does not have a messaging type administered). As a result, the step is skipped.
542	Can't connect idle agent	The call at the head of the queue can't be connected to an idle agent.
550	ASA - No staffed agents	A check or goto test requested a comparison of ASA for a split/skill that has no staffed agents. The comparison was based on ASA > largest possible threshold.
560	EWT no history for split	A goto test requested EWT for a split/skill that has not yet acquired history. The wait time in this case is assumed to be the default value.
561	EWT no split queue	A goto test requested EWT for a split/skill that has no queue. The wait time is assumed to be infinite. The comparison was based on EWT > largest possible threshold.
562	EWT split queue full	A goto test requested EWT for a split/skill whose queue is currently full. The wait time is assumed to be infinite. The comparison was based on EWT > largest possible threshold.
563	EWT split no working agents	A goto test requested EWT for a split/skill that has no agents logged in or all logged in agents are in the AUX work mode. The wait time in this case is assumed to be infinite and the comparison was based on EWT > largest possible threshold.
564	EWT split locked	A goto test requested EWT for a split/skill that is currently locked. The wait time is assumed to be infinite. The comparison was based on EWT > largest possible threshold.
565	EWT call no working agents	A goto test for a call or converse data passing "wait" requested EWT for a call that is queued only to splits/skills that have no agents logged in or that have all logged in agents in AUX work mode. In this case, the wait time was assumed to be infinite and the comparison was based on EWT > largest possible threshold.

Summary of events (continued)

Event type	Event description	Explanation
1760	Conference COR restrict	Check authorization on calling and called parties for non-PCOL calls.
2034	Denial event - BSR polling	A BSR polling over ISDN without B-Channel attempt has resulted in an illegal TSC interaction. Either an AT&T TSC was routed to a QSIG interface, or vice versa. The call is dropped and the denial event is logged.
	Denial event - BSR polling	A BSR polling over ISDN without B-Channel attempt has been denied for one of the following reasons: • the terminated administered TSC endpoint is disabled • The incoming nca-tsc call arrives at the wrong signaling group • The max number of nca-tsc is set to 0.
3201	Meet-Me Access chg TMO	The user changing the access code allowed the call to timeout to intercept treatment. The access code was not changed.
3202	Invld Num Digits MM Acc.	The user changing the access code entered too many digits. The access code was not changed.
3203	MM Extension not valid	The user changing the access code did not enter a valid extension.
3204	MM Access Chg Not a VDN	The user changing the access code entered a non Meet-me Conference VDN extension.
3205	MM Invalid Access Entered	The user changing the access code did not enter the correct access code. The access code was not changed.
3206	MM Access Obj/SAT Busy	An administrator is making changes to the Meet-me Conference VDN, so the user cannot change the access code using a feature access code. Try again later.
3207	Merge Meet-me Conf call	A user tried to access an existing Meet-me Conference call and was denied.
3208	Serv Observ Meet-me VDN	A user tried to service observe a Meet-me Conference call. This is not allowed.
3209	Meet-me Conf call full	A user tried to access a Meet-me Conference call that was already full.
3210	Wrong MM Acc. code dialed	A user trying to access a Meet-me Conference call dialed the wrong access code.
3211	Chg Station no Cons/Perm	The station attempting to change the access code does not have console permissions COS.
3212	VDN not a meetme type	The VDN that was called is not a Meet-me Conference VDN.
3213	MM Invalid Conf Ctrlr Sta	If controlling extension is filled in and the station and controller do not match.
3214	MM Inv Trk not Remote Acc	The trunk used to access the Meet-me Conference is not a remote access trunk.

Troubleshooting vectors

Summary of events (continued)

Event type	Event description	Explanation
3215	MM Invalid Station Type	If controlling extension is blank and the station type is invalid (for example, and attendant console).
3216	Conf/Transfer 2 Meet-me	A user cannot conference or transfer another call into a Meet-me Conference call.
3217	MM Abbrev Dial Invalid	When changing a Meet-me Conference access code, the only entry that can be set up for abbreviated dialing is the feature-access-code (FAC). Any other entry generates the vector event.

Clearing events

When you have finished your review of the event log, you can remove events from the error log. You must be use superuser login ID to clear events.

To clear events from the error log, enter **clear events** at the command prompt and press **ENTER**. This command clears all events from the event buffer space within the error log. It does not delete any other entries in the error log.

■ ■ ■ ■ ■ ■ Appendix E: Advanced multi-site routing

This appendix supplements the Look-Ahead Interflow (LAI) and Best Service Routing (BSR) chapters.

This appendix is intended for users whose contact center networks meet either or both of the following criteria:

- Five or more switches in the network
- Combination of low- and high-volume locations

This appendix includes the following topics:

- [Application architecture in multi-site BSR](#) on page 605
- [User adjustments](#) on page 606
- [Status polling in BSR](#) on page 608
- [Efficient polling patterns in large networks](#) on page 611
- [Considerations for low volume splits/skills](#) on page 615

Application architecture in multi-site BSR

Multi-site applications may be structured in a variety of ways. In general, however, most applications will fit one of two models: distributed or centralized. When each switch in a network may interflow calls to other switches and receive interflows, this is called a distributed system. A centralized system, by contrast, is one in which all calls are initially delivered to a single contact center (the “hub”) and distributed from this site to queues at remote switches. A centralized system requires greater inter-switch trunking, since a greater percentage of calls need to be redirected. However, it may be an appropriate configuration if your organization has a significant investment in VRU and CTI technology at the hub.

Which architecture you choose for an application has direct implications for your choice of user adjustments and polling patterns.

User adjustments

User adjustments in **consider split** and **consider skill** steps may be set at the user's discretion. In distributed multi-site applications, however, adjustments must be carefully considered because of their potential affect on costs and inter-switch trunk capacity. In centralized applications all calls are redirected anyway so it's OK to use adjustments of "0". In distributed applications, though, a user adjustment of "0" for a **consider location** step is almost never practical or efficient.

In distributed applications, the smaller the adjustment the closer the load balance across the network, but the greater the percentage of calls redirected between switches (and thus the greater the demands on inter-switch trunking). Higher adjustments reduce interflows, but at the cost of allowing greater imbalance in the load between switches. It will take some time and effort to find the best combination of user adjustments in any particular network, but [Recommended initial user adjustments](#) on page 606 contains recommended ranges for initial user adjustments under different conditions. Adjustments may vary between different contact center applications so apply these guidelines for each of your applications separately.

Recommended initial user adjustments

Recommended adjustments...	If the following criteria apply...
10–15	- You want to balance wait times across the network as much as possible. - Trunk facilities between switches are plentiful. - Each switch receives more than 1 call every 10–15 seconds (more than 240–360 calls/hour) for this application.
20	- Balancing wait times across the network is important to you. - Adequate trunk facilities are available to support the desired balance. - Each switch receives more than 1 call every 20 seconds (more than 180 calls/hour) for this application.
30 or higher	- Gains in agent efficiency are more important to you than balancing wait times across the network. - Trunk facilities are scarce. - Call interflow is costly. - Each switch receives no more than 1 call every 30 seconds (around 120 calls/hour or lower) for this application.

In your first multi-site application, it is recommended that you begin with a remote adjustment of 30. This can easily be reduced later if inter-switch trunking is under-utilized.

On the other hand, if trunk exhaustion is a common occurrence then user adjustments are probably set too low. Care should be taken not to lower remote user adjustments to such an extent that all trunk resources are regularly exhausted. When trunks are exhausted, no further load balancing can take place and the overall balance may deteriorate.

User adjustments should also be set high enough that calls are not interflowed to gain the equivalent of a fraction of a queue position. The following equation will give you the minimum recommended user adjustment for each remote switch:

$$\frac{\text{AverageCallHandlingTime}}{\text{NumberOfFullTimeEquivalentAgents}} \leq \text{UserAdjustment}$$

Adjustments for remote locations will probably be in the range of 10–30 in most distributed applications.

Is there a reliable relationship between user adjustments and the balance in wait times across a network?

Changing conditions can produce significant variations in such a balance, but on average you can predict the balance in wait times for a given user adjustment.

Let's say a user adjustment of 20 is chosen for all remote resources in a network and all the remote sites are polled. When waiting times are short (< 100 secs), the highest and lowest EWTs for this application on the network should stay within a range of approximately 20 seconds (30–50 seconds, for example). When waiting times are long (> 100 secs), the highest and lowest EWTs for the application should stay within a range of approximately 20% (5 to 6 minutes, for example).

Status polling in BSR

Status polls are the key element in multi-site BSR applications. Status polls provides the communication links between a switch that wants to interflow a call and the switches that might service that call.

The vectors you write in multi-site applications must balance the costs of time and trunk usage with the benefit of better customer service. BSR is designed to help you achieve this balance, incorporating mechanisms to maximize improvements in customer service while minimizing inter-switch communications with its attendant delays and trunk usage. This section explains those mechanisms and the benefits they provide as you write vectors.

How long do status polls take?

One **consider location** step polls one remote location. Does this mean that an optimal multi-site BSR application polls every switch in a network? No.

Let's look at an example of a moderately large network, containing 16 switches. The primary vector on switch #1 could be written as shown in the following vector example. Polling response times are variable. Let's assume that this is a slow response network and that each status poll takes 1 second. The consider series in this vector could add as much as 15 seconds to a call's time in vector processing! In fact, the vector shown below is provided as an example of what NOT to do. The benefits of BSR can be obtained much more efficiently.

Intelligent polling for multi-switch networks

```

1.  wait time 0 secs hearing ringback
2.  consider skill 1 pri m    adjust-by 0
3.  consider skill 2 pri m    adjust-by 20
4.  goto step 20 if expected-wait for best = 0
5.  consider location 1      adjust-by 30
6.  consider location 2      adjust-by 30
7.  consider location 3      adjust-by 30
8.  consider location 4      adjust-by 30
9.  consider location 5      adjust-by 30
10. consider location 6      adjust-by 30
11. consider location 7      adjust-by 30
12. consider location 8      adjust-by 30
13. consider location 9      adjust-by 30
14. consider location 10     adjust-by 30
15. consider location 11     adjust-by 30
16. consider location 12     adjust-by 30
17. consider location 13     adjust-by 30
18. consider location 14     adjust-by 30
19. consider location 15     adjust-by 30
20. queue-to best
21. announcement 1001
22. wait time 60 secs hearing music
23. goto step 21 if unconditionally

```

First, even in very large networks you can obtain nearly all of the possible benefits in agent utilization with very few polling connections. In a network of 16 switches, 99% of the total benefits possible with BSR can be obtained if each switch polls just 4 others. See [How many switches should one switch poll?](#) on page 611 for more information on this topic.

Now our vector looks like the following. Is polling time now cut from 15 seconds to 4 seconds, proportional to the reduction in **consider** steps?

```

1.  wait time 0 secs hearing ringback
2.  consider skill 1 pri m    adjust-by 0
3.  consider skill 2 pri m    adjust-by 0
4.  goto step 9 if expected-wait for call = 0
5.  consider location 5      adjust-by 30
6.  consider location 10     adjust-by 30
7.  consider location 13     adjust-by 30
8.  consider location 15     adjust-by 30
9.  queue-to best
10. announcement 1001
11. wait time 60 secs hearing music
12. goto step 10 if unconditionally

```

In fact, polling time in this vector may be around 0.4 seconds per call because of mechanisms in BSR that constantly react to network conditions and resource usage to minimize the number of status polls. These mechanisms, whose combined operation is called “intelligent polling,” also function to make each status poll as productive as possible.

Intelligent polling

A BSR application will only poll the switches that are likely to provide the best service at any given time. If a remote switch is polled and returns an adjusted EWT greater than that of the current best resource, polling of the remote switch will be suppressed for a period of time proportional to the difference between the two adjusted EWT values. (In other words, polling of a given location is suppressed whenever the adjusted EWT returned by that location is subsequently replaced by a better adjusted EWT from another resource.) The **consider** step for this location will be skipped during this period and vector processing will continue at the next step. When the suppression period is over, the **consider** step will once again poll this location. If the location returns the best adjusted EWT, the next call processed by the vector will also cause this location to be polled. If it is not the best, polling will again be temporarily suppressed, and so on.

If no calls are in queue at the remote location an agent might become available at any moment, and thus BSR will never suppress polling for longer than 5 seconds in such situations. BSR will never suppress polling of any remote location for more than 60 seconds, regardless of the differences between adjusted EWT returned by different switches.

Other conditions can also suppress status polls to a location:

- resource exhaustion (no trunks available, queue full)
- administration errors (badly written vectors, or no application plan)

This feature significantly reduces the average number of status polls placed per call. The greater the call volume, the greater the percentage reduction. Let's take another look at the vector in Screen 2.

Let's assume that the network is operating in a balanced state. EWTs are 30 seconds at all locations, and a call arrives every 3 seconds at each site. Adjusted EWTs are 30 seconds at the origin switch and 60 seconds for each remote switch. After each status poll under these conditions, polling will be suppressed for 30 seconds. Each remote location is polled therefore, by every 10th call. On average, this means that each call polls any one location 0.1 times. Since there are four **consider** steps, each call makes 0.4 polls. Remembering the 1-second polling response time given at the beginning of the example, the average time added to call processing for each call is 0.4 seconds.

The 1st-found available agent strategy, discussed in [Best Service Routing \(BSR\)](#) on page 271, can cut average polling times further. With the 1st-found strategy, BSR will skip all subsequent **consider** steps in a series if a resource with an available agent is found and deliver the call to that resource.

Efficient polling patterns in large networks

Unless you have a small network, you won't benefit by having every switch poll every other switch. This section explains how many remote locations each switch needs to poll, and it provides guidelines for selecting which locations any given switch should poll.

How many switches should one switch poll?

It's not necessary to poll every switch in larger networks. Because of BSR's intelligent polling capabilities, you can obtain 99% of the possible benefits in agent utilization with very few polling connections.

For an example, let's look at a laboratory network of 16 switches that is used for simulations of BSR multi-site applications. As shown in the following table, approximately 99% of the possible benefits were obtained when any one switch polled 4 others.

Effectiveness of status polls in a 16-switch network

Number of remote sites polled by each switch	ASA across the network (seconds)	Approximate percentage of total benefits obtained
0	192.8	0%
1	26.2	89%
2	10.6	95%
3	7.6	98%
4	6.5	99%
15	4.7	100%

For each switch to poll the other 11 switches in the network would only produce an additional 1% gain in ASA and agent utilization—an improvement which would be more than offset by the cost of additional messaging and trunking.

In most situations, you'll obtain the optimal results with your multi-site BSR applications if you follow the polling guidelines shown in the following table.

Recommended number of locations to poll

If there are this many switches in the network...	Each switch should poll...
2–4	all the other switches
5–10	3 other switches
11–20	4 other switches
21–40	5 other switches
41 or more	6 other switches

Which remote switches should each switch poll?

In networks with fewer than 5 switches, each switch can productively poll all the other switches in the network. In larger networks, each switch need not poll every other switch. But which switches should each switch poll? We'll use the term "polling patterns" to describe the relationships between switches in multi-site BSR applications.

Here are two patterns to avoid. They're simple and seem intuitively obvious, but they don't usually yield the best possible results:

- Mutual polling: As much as possible, 2 switches shouldn't poll each other. This is unavoidable in small networks, but in large networks it can and should be minimized.
- Polling chains: For example, if switch A polls B & C, B polls C & D, and so on, this is a polling chain.

You may want to experiment with polling patterns appropriate to your own network and applications (if you're not constrained by the physical structure of your network). The following table provides a template for creating polling patterns for applications of up to 12 switches. In the majority of situations, these patterns will produce results that are close to optimal. To use this table, first assign a number from 1 to x to each switch in your application. Next, find the column that matches the number of switches in your application. As you read down that column, you'll see which switches each particular switch in the application should poll.

Polling patterns for networks of 5–12 switches

This switch ...	Should poll the specific switches shown in the column for your network size							
	5	6	7	8	9	10	11	12

Polling patterns for networks of 5–12 switches (*continued*)

1	2,4,5	2,4,5	2,4,6	2,4,7	2,4,6	2,4,7	2,4,8,10	2,4,8,9
2	3,5,1	3,5,6	3,5,7	3,5,8	3,5,7	3,5,8	3,5,9,11	3,5,9,10
3	4,1,2	4,6,1	4,6,1	4,6,1	4,6,8	4,6,9	4,6,10,1	4,6,10,11
4	5,2,3	5,1,2	5,7,2	5,7,2	5,7,9	5,7,10	5,7,11,2	5,7,11,12
5	1,3,4	6,2,3	6,1,3	6,8,3	6,8,1	6,8,1	6,8,1,3	6,8,12,1
6		1,3,4	7,2,4	7,1,4	7,9,2	7,9,2	7,9,2,4	7,9,1,2
7			1,3,5	8,2,5	8,1,3	8,10,3	8,10,3,5	8,10,2,3
8				1,3,6	9,2,4	9,1,4	9,11,4,6	9,11,3,4
9					1,3,5	10,2,5	10,1,5,7	10,12,4, 5
10						1,3,6	11,2,6,8	11,1,5,6
11							1,3,7,9	12,2,6,7
12								1,3,7,8

In applications of more than 12 switches, the following table provides the formulae you need to figure out the optimal polling pattern.

Polling pattern formula for large networks

Number of switches in application	Switch “i” should poll...
13 or 16	$i + 1, i + 3, i + 7, i + 11$
14 or 19	$i + 1, i + 3, i + 7, i + 9$
15	$i + 1, i + 3, i + 7, i + 10$
17 or 20	$i + 1, i + 3, i + 7, i + 12$
18	$i + 1, i + 3, i + 7, i + 13$
21–23	$i + 1, i + 3, i + 7, i + 15, i + 17$
24	$i + 1, i + 3, i + 7, i + 15, i + 19$
25	$i + 1, i + 3, i + 7, i + 15, i + 20$

Advanced multi-site routing

To use one of these formulae, first assign a number from 1 to x to each switch in your application. Then, in the left-hand column of the table, find the number of switches in your application. The corresponding formula in the right-hand column is the one you should use.

In the formulae, “i” is the number of the switch for which you’re calculating a polling pattern. For example, let’s say you want to calculate the polling patterns in an application with 16 switches. The formula to use is

$i + 1, i + 3, i + 7, i + 11$

as shown in the first row of the table. Here are the actual results of this formulae for the first 5 switches in this 16-switch application. Notice that the numbers “wrap” (start over at 1) after you’ve polled the last switch in the network: switch 5 polls switch 16 as its fourth poll, and then the polling pattern for switch 6 has switch 1 in the fourth position.

Switch number...	Should poll switches...
1	2 ,4, 8, 12
2	3, 5, 9, 13
3	4, 6 ,10, 14
4	5, 7, 11, 15
5	6, 8, 12, 16
6	7, 9, 13, 1
7	8, 10, 14, 2

Considerations for low volume splits/skills

Very small resources (for example, 2–3 agents) have special needs. With BSR, it is easy to obtain a very close balance of wait times across a network of contact centers. However, for very small splits/skills, wait times for each call can vary significantly.

To see why this is, let's take an extreme example of a split with a single agent logged in with one call active and none in queue. Average call handling time is 3 minutes. Now, if a new call arrives in queue, that call could be answered almost immediately—or it might wait for 3 minutes or more. The variation in wait times is perhaps 5–180 seconds.

In general, the fewer agents logged into a split/skill, the greater the variability in wait times because agents become available less often. BSR will naturally favor large resources, steering calls away from smaller resources when there are no available agents or wait times are not the best in the application. This tendency helps reduce the possibility that an individual caller might have a disproportionately long wait at a small resource.

If your network includes very small splits/skills, you have three options:

- If your operation is not badly affected by a small percentage of calls having variable wait times, simply use BSR normally across the network.
- If your principal concern is that a call does not wait in queue while an agent is available elsewhere, use BSR normally but write primary vectors at smaller locations to perform rapid look-ahead attempts to other resources once the call has been queued. (Rapid LAI vector loops use the **interflow-qpos** conditional, which is an enhancement to LAI. For more information on LAI and the **interflow-qpos** conditional, see [Look-Ahead Interflow \(LAI\)](#) on page 247.) For an example of this type of vector, see [Using LAI as a backup](#) on page 616.
- If you want to answer every caller quickly, then the following configuration is recommended. Do not deliver or queue calls directly to the very small resources. Deliver or queue all incoming calls to larger resources, and use BSR to balance the load across these larger locations. Some or all of the larger locations should then perform rapid look-ahead attempts to one or more of the smaller resources. In this way, the members of the very small resource become an extension of the agent pool at one of the larger contact centers. For an example of this design, see [Single-queue FIFO hybrid configuration](#) on page 617.

In any network, avoid having several large resources poll or make look-ahead attempts to a very small resource. Since the status at the very small resource changes infrequently, frequent polls to that resource are wasteful. A very small resource should receive look-ahead attempts or be polled only by other small resources or by one large resource.

Minimizing variations in wait time

When a network contains (or when a contact center application combines) large resources and very small resources, BSR and LAI can be effectively combined. This section presents two sample vectors. The first example shows a primary vector intended for the smaller resources in a network when you want to avoid having a call in queue at one contact center while an agent is available at another. This design will reduce wait time variation as well. The second example illustrates a primary vector for larger locations: this example shows you the best way to minimize wait times across a network

Using LAI as a backup

As noted above, if your principal concern is that a call not wait in queue while an agent is available elsewhere, use BSR at all locations in the network. At smaller locations, write primary vectors that will perform rapid LAI attempts to other (preferably larger) resources once the call has been queued.

```

1. wait time 0 secs hearing ringback
2. consider skill 1st pri m adjust-by 0
3. consider location 12 adjust-by 30
4. consider location 22 adjust-by 30
5. goto step 7 if expected-wait for call < 600
6. disconnect after announcement 3501 "Due to heavy call volume..."
7. queue-to skill best
8. announcement 3500 "Thanks for calling..."
9. goto step 13 if expected-wait for call < 90
10. wait time 45 secs hearing music
11. announcement 3502 "Still busy..."
12. goto step 9 if unconditionally
13. route-to-number 913031234567 with cov n if interflow-qpos = 1
14. wait time 5 secs hearing music
15. goto step 13 if unconditionally

```


Steps 1 to 4 comprise a typical BSR vector. The origin switch considers a local resource and 2 remote resources. Before queuing or routing the call, however, the vector checks the expected wait time for the best resource. If this is 10 minutes or more, the caller receives a 'busy' announcement. Otherwise, the queue-to best step sends the call to the best resource. Two vector loops follow: one 45-second loop with music and a delay announcement, and one 5-second loop that uses LAI. If the call is queued successfully in step 7 the first announcement loop (steps 9-12) executes until the call gets within a certain range of the head of the queue (at which point EWT is less than 90 seconds). At this time, step 9 sends the call to the second loop, where LAI attempts are placed every 5 seconds for the call at the head of the interflow eligible queue (**interflow-qpos=1**). If an agent becomes available at the larger remote resource, any call at the head of the eligible queue at the smaller location is outflowed to the larger resource, normally within a period of 5 seconds.

Single-queue FIFO hybrid configuration

To minimize variations in wait time across a network, the best strategy may be to let only the contact centers with the larger resources receive calls. The following figure shows a network of 3 large and 3 small resources (contact centers with large splits/skills and contact centers with very small splits/skills in the same application).

The large locations use BSR and all poll each other, while each location with a small resource (numbered 1, 2, 3) is treated as a satellite of one of the larger locations and only receives calls interflowed from that location. (Mutual polling is not optimal in larger networks, but it's OK for switches in such a small network to poll each other.) So BSR is used to balance the load between the locations with the larger resources. Then, each large switch executes a rapid LAI vector loop to one small switch to look for available agents. Since calls never queue at the small switches, the problem of highly variable wait times at the small resources is eliminated. This strategy will also give the best balance in wait times across resources.

Hybrid application architecture

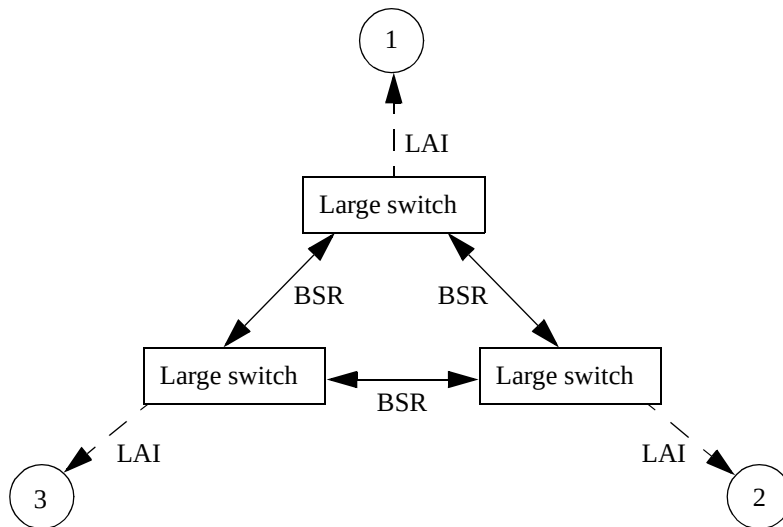

The following vector example shows the primary vector that would be used at the large locations with this strategy. This vector is almost identical to the vector shown in [Using LAI as a backup](#) on page 616 above. The differences are at the application level. In contrast to the previous example:

- Only the locations with the larger resources receive calls.
- The primary vector shown here resides on the larger switches.

Steps 1 to 4 comprise a typical BSR vector. The origin switch considers a local resource and 2 remote resources. Before queuing or routing the call, however, the vector checks the expected wait time for the best resource. If this is 10 minutes or more, the caller receives a 'busy' announcement. Otherwise, the queue-to best step sends the call to the best resource. Two vector loops follow: one 45-second loop with music and a delay announcement, and one 5-second loop that uses LAI. If the call is queued successfully in step 7, the first announcement loop (steps 9-12) executes until the call gets within a certain range of the head of the queue. At this time, step 9 sends the call to the second loop, where LAI attempts are placed every 5 seconds (only for the call at the head of the interflow eligible queue). If an agent becomes available at the smaller resource, any call at the head of the eligible queue at the larger location is outflowed to the smaller resource, normally within a period of 5 seconds.

Vector combining BSR and LAI

```
1. wait time 0 secs hearing ringback
2. consider skill 1st pri m adjust-by 0
3. consider location 120 adjust-by 30
4. consider location 220 adjust-by 30
5. goto step 7 if expected-wait for best < 600
6. disconnect after announcement 3501 "Due to heavy call volume..."
7. queue-to skill best
8. announcement 3500 "Thanks for calling..."
9. goto step 13 if expected-wait for call < 90
10. wait time 45 secs hearing music
11. announcement 3502 "Still busy..."
12. goto step 9 if unconditionally
13. route-to-number 913031234567 with cov n if interflow-qpos = 1
14. wait time 5 secs hearing music
15. goto step 13 if unconditionally
```

Similar vector loops can be added to the interflow vectors at each of the large switches. In other words, each vector that processes calls at the larger locations can use rapid LAI loops to interflow calls to its satellite resource. This system maximizes agent utilization and the distribution of call load while evening out wait times across the network.

■ ■ ■ ■ ■ ■ Appendix F: Advanced information forwarding

This appendix explains ISDN (BRI or PRI) trunk group setting interactions with Information Forwarding, UCID, and Multi-Site Routing.

User information included in the SETUP message for an outgoing call (at the sending switch) or DISCONNECT message sent back for an incoming call (at the receiving switch) is based on the trunk group settings at the sending or receiving sites.

The “shared” user information forwarding supports various data items (UCID, collected digits and In-VDN-Time) in addition to “shared forwarding” of LAI Info (VDN-Name and Other-LAI) and ASAI provided user data. “Shared forwarding” over non-QSIG ISDN trunks packs the data items in a codeset 0 UUI IE (called shared UUI), where each item consists of a two-byte header (application ID and data length). “Shared forwarding” over QSIG trunks transports the data items as Manufacturer Specific Information (MSI) in codeset 0 Facility IEs.

BSR and “shared data forwarding” (UCID and other new data items) requires QSIG or the shared UUI IE Treatment setting with non-QSIG trunk groups on both the sending (outgoing trunks) and receiving (incoming trunks) at the switch. Shared settings are also required on tandem trunk connections through the switch that routes these calls. LAI Info, UCID, collected digits, In-VDN-Time and ASAI provided user data can be forwarded with a call in the SETUP message (LAI or BSR interflowed call, a tandemed call, for UCID with any outgoing call and for ASAI user data any adjunct routed outgoing call). With the DEFINITY R6.3 capabilities, only BSR reply-best data is returned with a BSR poll call and only ASAI user data is returned for a non-poll call in a DISCONNECT message (both types of data will not be included in the same DISCONNECT message). Shared UUI Priority settings do not affect what is put in the DISCONNECT message or data forwarded over QSIG trunks.

The protocol (QSIG or non-QSIG) is set on page 1 of the ISDN trunk group form using the Supplementary Service Protocol field. QSIG type as defined for shared MSI is protocol type b (another protocol type “d”, ECMA QSIG is considered non-QSIG for Information Forwarding). The Send Codeset 6/7 LAI field on page 2 indicates whether or not to include an LAI IE in the SETUP message. The codeset used (6 or 7) is determined by the Codeset to Send TCM, Lookahead field on page 1. The Send UCID field on page 2 indicates whether or not the UCID data item should be included as user information with calls routed over this trunk group. The Send Codeset 6/7 LAI IE field is ignored for BSR polls over the trunk group (an LAI IE will never be included with BSR calls).

Non-QSIG protocol

UI IE Treatment set to service-provider includes any application provided UI in a codeset 0 UI IE on a non-shared basis. That is, the data portion of the UI IE only includes user info in the SETUP or DISCONNECT messages as provided by an application such as ASAI without the shared App-ID and length header fields. User data from only one application can be included in non-shared UI. This setting would be used for non-QSIG trunk groups when service-provider functionality is wanted (for example, where shared forwarding of the new data items is not required or for trunk groups to other vendor switches or network services that need user information from the trunk group in a non-shared UI IE such as provided by ASAI). Incoming calls received with shared user information (shared UI IE) that are routed outgoing over a non-QSIG service-provider trunk group will forward only ASAI provided user data in a non-shared UI IE.

UI IE Treatment set to shared allows all applications to include data items in the UI IE on a shared forwarding basis. The Shared UI Feature Priorities page settings along with the Max. Size of UI Contents field on page 2 and the features configured for the system determines what actually is included in the UI IE. This is the normal setting for non-QSIG trunk groups that route calls to the switch over private or public networks when information forwarding is required and must be used for BSR.

QSIG trunk group

UI IE Treatment set to service-provider forwarded ASAI provided user data in a non-shared codeset 0 UI IE and all other user data in codeset 0 Facility IEs as MSI. In this case the Max. Size of UI Contents field is not relevant and the Shared UI Feature Priorities page does not show nor apply. This setting would only be used for QSIG trunk groups to pre-R6.3 DEFINITY switches for compatibility with existing ASAI applications or when service-provider functionality is wanted (e.g., where shared forwarding of the new data items is not required or for trunk groups to other vendor switches that need user information from the trunk group in a non-shared UI IE such as provided by ASAI). Incoming calls received with shared data (shared UI IE) routed out over a QSIG service-provider trunk group, will separate any ASAI provided user data included in the shared UI IE and forward it in a non-shared UI IE.

UI IE Treatment set to shared will forward all user information including ASAI provided user data in codeset 0 Facility IEs as MSI in the SETUP or DISCONNECT message. The UI IE is never included over a shared QSIG trunk group. In this case, the Max. Size of UI Contents field and the Shared UI Feature Priorities page do not apply. This is the normal setting for QSIG trunk groups to the switch when information forwarding is required and must be used for BSR.

“Send Codeset 6/7 LAI IE” option interactions

The Send Codeset 6/7 LAI IE option is independent of the Supplementary Service Protocol and UI IE Treatment settings to allow additional flexibility. The switch can have a mix of trunk groups set with non-QSIG or QSIG protocol and with

service-provider or shared settings. Calls interflowed over the shared non-QSIG trunk groups will contain the data items to be forwarded with the call in the UUI IE while calls interflowed over the non-QSIG service-provider trunk groups will not (except for ASAI which can always be sent in UUI). Calls interflowed over the QSIG trunk groups will always have MSI user information (except for ASAI whose transport method depends on the UUI Treatment setting).

When a call is LAI interflowed over a non-QSIG service-provider trunk group, the Send Codeset 6/7 LAI IE option being active will result in just the LAI IE being forwarded with the call in a SETUP message. When interflowed over a non-QSIG shared trunk group, setting the Send Codeset 6/7 LAI IE to yes includes a codeset 6/7 LAI IE in the SETUP message in addition to the same LAI information included as shared data in the UUI IE. If necessary and appropriate, the LAI information fields (and others) can be set to "blank" on the Priorities page to exclude these data items from the UUI IE. See [Determining user information needs](#) on page 203 for details. When interflowed over a QSIG service-provider or shared trunk group with Send Codeset 6/7 LAI IE active, the LAI information will be included as both MSI and in the LAI IE. However, in this case there is no mechanism to eliminate the duplication of data if the codeset 6/7 LAI IE is required.

These combinations can be used when calls are LAI interflowed to the switches previous to the switch with existing ASAI applications using ASAI provided UUI that may or may not be using the LAI IE. Note that codeset 6/7 IEs are not defined for QSIG and other vendor switch treatment of calls with a LAI IE is undefined (could be ignored, blocked, or misinterpreted).

When the trunk group is set to non-QSIG and shared or to QSIG (service-provider or shared), it is recommended that the Send Codeset 6/7 LAI IE option should not also be set to y due to the overhead of sending duplicate information. In some cases, this configuration could exceed the SETUP message and/or user information byte count limits for the network and result in the user information being dropped. Also, transport could cost more in networks which charge for user transport by quantity of bytes transported. An administration warning message will be given when this combination is set for the trunk group. In fact this combination is not recommended except in very limited cases where a mix of early and later switches can be reached over the same trunk group (via a public or switched private network) using Look-Ahead Interflow, and where BSR or UCID is not active or being used and the data that needs to be forwarded with the call can be limited to that supported by the network.

The Send Codeset 6/7 LAI IE option must not be set to y with trunk groups (or in switches) where calls will be interflowed over public networks or virtual private networks that do not support codeset 6/7 transport. In these cases, the codeset 6/7 IE will not be

Advanced information forwarding

forwarded or the calls may not be routed by the network (blocked due to protocol errors). This can happen in some international situations, notably over networks in Germany.

Summary of what is included in the SETUP message

UI IE Treatment	Send Codeset 6/7 LAI IE	Supplementary services protocol	
		Non-QSIG (other than b)	QSIG (SS b) ¹
service-provider	n	ASAI provided user info in codeset 0 UI IE	ASAI provided user info in a codeset 0 UI IE and all other user info in codeset 0 MSI
	y	ASAI provided user info in codeset 0 UI IE & a codeset 6/7 LAI IE	ASAI provided user info in codeset 0 UI IE, all other user info in codeset 0 MSI and a codeset 6/7 LAI IE ²
shared	n	All user info in a shared codeset 0 UI IE	All user info in codeset 0 MSI
	y	All user info in a shared codeset 0 UI IE & a codeset 6/7 LAI IE ³	All user info as codeset 0 MSI and a codeset 6/7 LAI IE ³

1. MSI is sent in codeset 0 Facility IEs.

2. With this combination, the LAI information (LAI Name and Other LAI) will be sent both as MSI (in a Facility IE) and in the LAI IE. Note that LAI IE and shared MSI operation with other vendor switches is undefined.

3. With this combination, the LAI information (VDN-Name and Other-LAI) will be sent in both the UI IE and in the LAI IE (setting the UI Priorities for these items to "blank" can eliminate the duplication).

When to use specific trunk group options

Situation	Trunk group option settings		
	UI IE treatment		Send Codeset 6/7 LAI IE
	Non-QSIG	QSIG	
Trunk groups over which information forwarding is not required (for LAI, BSR or UCID transport).	service-provider	service-provider	n
Non-LAI interflow or tandem calls to service providers or other vendor switches that do not recognize shared UII.	service-provider	service-provider	n
LAI to pre-R6.3 switches over networks that block codeset 6/7 IE calls.	service-provider	service-provider	n

When to use specific trunk group options (continued)

LAI to pre-R6.3 switches over networks that allow codeset 6/7 (traditional LAI) with or without ASAI applications that use UUI and/or LAI Info	service-provider	service-provider ¹	y
LAI over public/virtual private network to mixed R6.3 and earlier switches, where the Avaya switches have shared information forwarding. The pre-R6.3 switches may use LAI Info in an ASAI application, but must not use UUI.	shared ²	shared ²	y
LAI over public/virtual private network to mixed R6.3 and earlier switches. The R6.3 and earlier switches may use LAI info or UUI in an ASAI application.	service-provider ³	service-provider ²	y
BSR and/or LAI to all R6.3 or newer switches ⁴	shared	shared	n

1. With this combination, the LAI information will be sent both as MSI (in Facility IEs) and in the LAI IE.

2. With this combination, the LAI information (LAI Name and Other LAI) will be sent in both the UUI IE and in the LAI IE.

3. The LAI IE and ASAI non-shared UUI is supported, but BSR, UCID and other new data items are not.

4. All switches interflowed to must be R6.3 or newer with "shared" incoming and outgoing trunk group settings. Tandeming/interflowing through R6.3 or later switches requires "shared" settings. Switches tandemed through can be older than R6.3 (or other vendor switches that pass codeset 0 UUI or MSI transparently). This is the only combination that supports BSR and new data items information forwarding. In this scenario it is recommended to never set "Send Codeset 6/7 LAI IE" to "y" in order to save SETUP message space and to ensure operation over networks that do not allow codeset 6/7 IEs. This combination is the recommended setup for Multi-Site Routing.

■ ■ ■ ■ ■ ■

Appendix G: Functional differences for DEFINITY G2 and DEFINITY ECS Call Vectoring and EAS

Introduction

This appendix provides the Call Vectoring functional differences between the DEFINITY Generic 2 (G2) switch and the Avaya Communication Manager system. This information should prove helpful to system administrators who administer networks that use both the DEFINITY G2 and Communication Manager.

The appendix is organized into three sections:

- [Differences in command function](#) on page 625
- [General Call Vectoring Functional Differences](#) on page 631
- [Differences in defining/interpreting split flows](#) on page 633
- [EAS differences](#) on page 634

Note:

Call Prompting is not supported on DEFINITY G2.

Differences in command function

The following sections indicate the differences for Call Vectoring commands between the two systems. The commands discussed include the following:

- **queue-to split**
- **check split**
- **goto step**
- **goto vector**
- **route-to number**

- announcement
- wait-time
- busy

queue-to split and check split

The **queue-to split** command queues the call to the specified split and assigns a queuing priority level.

The **check split** command checks the status of a split for possible termination of the call to that split. When termination is not possible, queuing at the specified priority is attempted. Termination and/or queuing is attempted if the split meets certain conditions that are specified as part of the command.

Differences for queuing commands

The call is simultaneously queued to a maximum of three different splits. The indicated split is checked only once, and if the specified condition is met, an attempt to terminate or queue the call is made. Multiple checking of a backup split requires repeating the check split command multiple times and/or unconditional goto step looping. After the call is queued to three splits, subsequent queue commands in the vector for additional splits fail and are skipped (unless these commands specify a different priority).	The call is queued to one split at a time. Successful queue commands that occur after the call is already queued cause the call to be dequeued from the first split and queued to a new split. Each check step executed by vector processing is rechecked in the background every two seconds while the steps that follow are processed. This process continues until the specified conditions are met. The periodic threshold checking of the check split commands is implemented to simulate multiple split queuing.
Calls can be queued to vector-controlled splits via Call Vectoring or to ACD splits/hunt groups directly via hunt group/split extensions when vectoring/prompting is active. Vector-controlled splits can be directly accessed via split extensions or via route-to commands to the extension ACD splits/hunt groups can also be accessed via route-to commands to the extension.	When Call Vectoring is active, calls can be queued to ACD splits only via the queue to main split and check split Call Vectoring commands.
Calls cannot be queued to splits that already hold the number of queued calls defined by the split queue size on the hunt group screen. Therefore, every queuing command should be preceded by a check step to determine if the queue is full. Also, queue limits should be set as high as possible to ensure the call queues.	No split queuing capacity limits are in effect, and the commands are never skipped.
The check split command can test a maximum threshold of 999.	The command can test a maximum threshold of 99 calls.

Differences for queuing commands (continued)

The oldest-call-waiting test condition within the check split command has a range of 1 through 999 seconds in one-second increments. An unconditional check split command is allowed.	The oldest-call-waiting test condition within the check split command has a range of 0 through 999 seconds in one-second increments. The check split command is conditional only.
The rolling-asa , expected-wait , and wait-improved conditions are available with the check split command.	These capabilities are not provided.
The queue-to and check commands can queue a call to the best resource as determined by a series of consider steps.	These capabilities are not provided.

goto step and goto vector

The **goto step** command allows conditional or unconditional movement (branching) to a preceding or subsequent step in the vector.

The **goto vector** command allows conditional or unconditional movement (branching) to another vector.

Differences for goto commands

Communication Manager	DEFINITY G2
The commands can test a maximum threshold of 999.	The commands can test a maximum threshold of 99 calls.
The oldest-call-waiting test condition within the commands contains a range of 1 through 999 seconds and is checked according to a 1-second increment.	The oldest-call-waiting test condition within the commands contains a range of 0 through 999 seconds and is checked according to a 1-second increment.
The rolling-asa , expected-wait , counted-calls , ani , ii-digits , and interflow-qpos conditions are available with the goto commands. Vector routing tables can be checked for the digits , ani and ii-digits conditions.	These capabilities are not provided.
The goto...if expected-wait commands can use the best keyword and wait-improved condition.	These capabilities are not provided.

route-to number

This command routes the call to a specific number.

Differences for route-to number command

Communication Manager	DEFINITY G2
The actual digit string is used as the destination. The string can contain special characters that may be stored in an AD string, including ~p, ~w, ~W, ~m, and ~s (but not * or #). (See the route-to number command in the manual pages of Appendix A: Call Vectoring commands on page 467.) Feature access codes (AAR/ARS) or trunk access codes may be used to route calls externally.	The AD member number is used as the destination. None of the special characters may be used. The special functions are handled by the AAR/ARS pattern routing.
The trunk may be accessed via ARS/AAR, TAC, or UDP.	AAR/ARS is required for non-DCS trunk calls.
Routing to individual attendant extensions is permitted.	The individual attendant extension feature is not available.
Routing to announcement extensions is permitted.	The announcement command is required for all announcement access.
If the command fails, and if the command is the last step in the vector, the command is not retried. If retrying is required, an unconditional goto step can be used to loop back to the route-to step.	If the command is the last step in the vector, a busy destination targeted by the command is retried every two seconds.
The command with the interflow-qpos condition tests the call for interflow eligibility.	This capability is not provided.
Routing to an ACD split extension is allowed even if Call Vectoring is operational.	This capability is not provided.
Routing to a Service Observing FAC is allowed	This capability is not provided.

announcement

This command indicates that the caller should expect to hear an announcement. Although the DEFINITY G2 announcement strategy differs from the Communication Manager announcement strategy, each one assures that, theoretically, the entire announcement is played from the beginning.

Differences for announcement command

Communication Manager	DEFINITY G2
Announcement extensions are used.	Announcement numbers are used.
Provides integrated board internal announcements.	Integrated announcement board is not supported.
The system supports auxiliary trunk-connected external announcement devices.	Supports only auxiliary trunk-connected announcement devices.
The maximum number of calls that can be queued and connected to an announcement is limited by preassigned queue slots. The system allows for multiple integrated announcement boards. See <i>Administrator Guide for Avaya Communication Manager</i> , 555-233-506 for details.	Limited only by the number of time slots available on the module to which the announcement channel is connected. The maximum number of time slots is 256.

wait-time

This command sets a length of time for a call to wait in the queue. The command also specifies one of the following treatments while the call advances in the queue(s):

- Silence
- Ringing
- Music
- I-silent
- Alternate Audio/Music Source)

Differences for wait command

Communication Manager	DEFINITY G2
The system-wide music-on-hold feature must be active for music treatment on the command. An alternate audio/music source can be administered for a wait-time step.	A separate music option is available for Call Vectoring.

busy

This command terminates vector processing and gives the caller a busy signal.

Differences for busy command

Communication Manager	DEFINITY G2
A timeout after 45 seconds is provided.	A 20 second timeout is provided for both CO and non-CO trunks.

General Call Vectoring Functional Differences

The following table provides an overview of general differences for Call Vectoring operations between the DEFINITY G2 and Communication Manager.

General call vectoring functional differences

General ACD	Split queue size is administered on a per split basis with a system-wide maximum of calls. Call queue space for the appropriate maximum number of calls must be distributed on a preassigned basis over all assigned hunt groups and (vector-controlled or nonvector-controlled) ACD splits.	There is no limit to the size of individual split queues.
	An agent may be concurrently logged into three splits at a time.	An agent may be logged into only one split at a time.
	The agent hears the same zip tone signal for calls that are queued to the main split as well as for intraflowed/interflowed calls.	One burst zip tone is provided for calls that are queued to the main split. Two burst zip tones are provided for intraflowed calls (via the check split command), and three burst zip tones are provided for interflowed calls (via Look-Ahead Interflow).
ACD Split Strategy	A split or a hunt group can be accessed by either a call vector or a group extension. This allows for both vector calls and nonvector calls in a single split's queue.	When Call Vectoring is optioned, splits do not have extensions. All access to splits must go through a Call Vector via queue to main split or check split commands.
VDN Access/ Capacity	Non-vector-controlled splits can specify redirection treatment (such as Call Coverage, Call Forwarding, etc.) and announcement treatment.	Only vector-controlled splits are available when Call Vectoring is active.
	COR checking is used for access to a VDN and for routing to a station.	No restriction checking is used to access a VDN. NOTE: Both systems use the Facility Restriction Level (FRL) associated with the VDN for outgoing trunk calls.
	COR checking is used when routing locally from a vector.	No restriction check is implemented for local routing.
	A maximum of 20000 VDNs can be used.	The maximum number of VDNs is limited only by the number of extensions capacity (32K).

General call vectoring functional differences (continued)

Voice Mailbox	messaging split command is used.	Calls are routed to a messaging split via a route to another VDN assigned to a vector with a queue to AUDIX.
Miscellaneous	Changes made to vector administration take effect upon submission. These changes can affect current calls.	A “scratch” pad is used for vector changes. Consequently, only new calls that enter the vector receive the treatment specified in the corrected vector. Vector processing for existing calls is completed in the old vector.
Miscellaneous (continued)	An existing vector can not be copied to another blank vector. (This capability, is available via CMS administration.)	These capabilities are provided by the switch administration.
	Either the VDN or the final destination (but not both) is provided in the CDR record.	Variable format CDR (formerly SMDR) records can be used. Therefore, the VDN and the final destination can both be provided. CDR records allow the VDN to be specified in the calling party field.
	Blank steps are allowed in vectors, and blank vectors (with no steps defined) may exist.	Blank steps or blank vectors are not allowed (CMS also does not support this).
	Trunk groups can be assigned to VDNs only via switch administration.	Trunks groups can be assigned to VDNs via CMS administration.
	Vector processing is limited to a maximum of 1000 step executions for a call (limit increased to 3000 with interflow-qpos in vector). Once this maximum is reached, processing stops. There is an implied wait of 0.2 seconds for every seven executed steps.	Separate 1000 step counters are provided for execution of goto step commands and check split retries. If either counter exceeds 1000, the call is forced disconnected. Only check split retries are counted on internal calls.

Differences in defining/interpreting split flows

Split flows are defined and/or interpreted according to the switch version and the management system involved. The following sections illustrate how split flow interpretation differs between the two systems as interpreted by CMS.

Note:

BCMS is not available on the DEFINITY G2 (with or without vectoring).

CMS standards for interpreting split flows

Flow type	Communication Manager with vectoring	DEFINITY G2 with traditional ACD
Inflow	Calls answered by a split other than a primary split. NOTE: A primary split is the first split to which a call queues.	Calls that intraflow from one split's queue to another split's queue (that is, calls that queue to a split after having been previously queued to another split).
Outflow	Calls that are dequeued from a primary split via a route to or messaging split command, or by being answered by an agent in another split to which the call is also queued.	Calls that are taken out of a split's queue and then sent to another destination.
Dequeue	Calls that are dequeued from any split other than the primary split in a VDN.	Not used.

When a call is not answered (due to an outflow, abandon, busy, or disconnect), the call's disposition is tracked for the primary split. On CMS, the other splits to which the call is queued tracks a dequeue when the call outflows, abandons, is given busy treatment, or is disconnected.

If the primary split in a VDN is unmeasured, a(n) outflow, abandon, busy, or disconnect is not tracked for the call. Also, an answer is not tracked if the call is answered by an agent in the primary split.

EAS differences

This section lists the differences between the systems for EAS.

- The DEFINITY G2.2 does not have logical agent capabilities.
 - Agent extensions are preassigned to default skill groups (groups ending in zero).
 - Agents sharing a telephone must have the same default skill group.
 - The station extension is used to provide a name, COR, and coverage path.
- Communication Manager logical agent provides the following:
 - Any station can be used as an ACD terminal for any skills.
 - Agents can be reached by dialing their login IDs.
 - Name, COR, and coverage path follow the agent to the telephone to which they are currently logged in.
- The DEFINITY G2.2 does not support Direct Agent Calling.
- The DEFINITY G2.2 does not support Call Prompting.
- The DEFINITY G2.2 login procedure is: dial feature access code, dial login ID twice. The Communication Manager login procedure is: dial feature access code, dial login ID, dial optional password.
- The DEFINITY G2.2 restricts agents with multiple skills to skills in the same skill tens group (for example, skill 20-29). Communication Manager allows an agent to be in any combination of skills.
- The DEFINITY G2.2 restricts calls queuing to multiple skills simultaneously to skills in the same skill tens group. This also applies to VDN skills. Communication Manager allows calls to queue to any three skills simultaneously.
- The DEFINITY G2.2 administers agents to a default skill and the agents enter their other skills after logging in. Communication Manager administers all of the agents' skills, and the agents are logged into all of their assigned skills during login. Communication Manager agents can change their skills.
- CMS can only change an agent's default skill on the DEFINITY G2.2 (when the agent is unstaffed). CMS can change all skills for an agent on Communication Manager (change affected the next time the agent logs in).
- The DEFINITY G2.2 does not support skill levels for agents. This also implies that the DEFINITY G2.2 does not support expert agent distribution (EAD). Communication Manager does support skill levels for agents and EAD.
- On the DEFINITY G2.2, when a change is made to a VDN skill preference, only new calls to the VDN will be impacted by the change. On Communication Manager, when a change is made to a VDN preference, existing calls will be impacted as they encounter a vector step that references the VDN skill preference.

■ ■ ■ ■ ■ ■

Appendix H: Call Vectoring/EAS and BCMS/CMS interactions

Call Vectoring and Expert Agent Selection (EAS) interact with a management information system that helps to monitor and report on the activity within Call Vectoring and EAS. In most cases, the management system is either the Call Management System (CMS) or the Basic Call Management System (BCMS).

The CMS, which resides on an adjunct processor, collects and processes ACD information to generate reports. BCMS, which resides on the switch, also collects ACD information and generates a limited number of reports. The CMS reporting and data storage capabilities are much more extensive than those of the BCMS.

BCMS collects and processes ACD information to generate various reports.

This appendix is intended to illustrate how this system interprets these management systems interpret and reports report on activity within Call Vectoring and EAS. Special emphasis is placed on interpreting and reporting on this activity as it occurs within splits during a series of Call Vectoring or EAS events.

Note:

[Appendix A: Call Vectoring commands](#) on page 467 provides a summary of the CMS/BCMS interactions with each Call Vectoring command (where applicable).

CMS/BCMS tracking in a Call Vectoring environment

Tracking is the identifying of call flows and other actions relevant to call handling. There are three classes of call flows: split flows, VDN flows, and vector flows. We are most concerned with tracking in the Call Vectoring environment. The specific types of call flows and actions in this environment that are tracked by the CMS/BCMS include the following:

- Inflows (flow ins)
- Outflows (flow outs)
- Dequeues
- Abandons
- Answers
- Busies
- Disconnects

The split supervisor can use VDN and vector flows to evaluate how effective vector programming is at the site in question. The supervisor can use split flows to determine the manner in which the splits at the site are handling incoming telephone calls.

Defining and interpreting call flows

The manner in which specific call flows are defined and interpreted depends upon the call flow class in question, the management system in effect, and the version of the switch being used. Management systems include CMS and BCMS.

The following sections define and interpret specific call flows according to these parameters.

Answered and abandons

The most important tracking items for most VDNs and vectors are the number of calls answered and the number of calls abandoned. The CMS provides VDN profiles that show when calls are answered and abandoned. Ten service level intervals are administered for these profiles. These intervals can have smaller time intervals around the time most calls are answered and when most calls abandon to get more detailed information.

This data can be used to determine what an acceptable service level is for most callers. The percentage answered within the administered acceptable service level is also shown on the Call Profile reports. For VDNs, the calculation is ACD calls answered and nonACD calls connected within the service level divided by calls offered to the VDN (including calls that inflow to the VDN).

For split/skill statistics, the calculation is ACD calls answered within the service level divided by calls queued to the split/skill (answered calls, abandoned calls, calls that flow out, calls that dequeue). In most cases the VDN percentage will be higher than the split percentage since calls dequeued from a split/skill are counted as answered, abandoned, or outflows for the VDN.

Changes made to a vector or to staffing will typically affect the VDN call profile. Even the wording of an announcement can affect the abandon profile. It is worthwhile to review the VDN's call profile before and after any change to determine if the change had a positive impact.

Busies and disconnects

Busy calls and forced disconnects reported on the CMS indicate how many calls this VDN/vector turned away. If forced disconnect is used out of business hours, this item would indicate how many customers expected you to be operating during a specific time interval. If busies are given when the queues are full or waiting times are long, the number of busies in an interval might suggest a staffing change is needed. If disconnect is used to deny a look-ahead interflow attempt, a large number of denials would indicate a busy time at multiple sites.

VDN inflows and outflows

The following section discusses the specific VDN flows for CMS and BCMS.

CMS and BCMS standards

The following table illustrates how CMS and BCMS interprets specific VDN flows from the switch:

CMS and BCMS standards for interpreting VDN flows		
Flow type	Management system	Interpretation
VDN flow in	CMS	Calls that flow into the VDN via a route-to VDN command or by Redirection on No Answer to a VDN.
	BCMS	(Not tracked.)
VDN flow out	CMS	Calls that successfully flow out of a VDN to another VDN or to an external location via a route-to command.
	BCMS	Same as for CMS.

Vector inflows and outflows

The following section discusses the specific vector flows as recorded by the CMS.

CMS standards

Vector flow in pertains to calls that flow into a vector from another vector via a route to or a goto vector command. Vector flow out pertains to calls that successfully flow out of a vector via a route to or a goto vector command.

Split inflows, outflows, and dequeues

The following sections discuss the various split flow types for CMS and the BCMS.

CMS and BCMS standards

The CMS and the BCMS are grouped together because both of these systems interpret two split flow types identically. These flows include inflow and outflow. The CMS interprets another split flow type, dequeue. The BCMS does not interpret this split flow type because it does not have a dequeue tracking item. This means that in a situation where the CMS tracks a dequeue, BCMS does not because it is unable to do so.

Before we detail how the CMS and the BCMS interpret split flows, we should discuss the term primary split, since this concept plays a significant role in tracking. Primary split is defined as the first split in a VDN to which a call actually queues. Therefore, this split is not necessarily the first split referenced in the vector.

Another split becomes the primary split if either of the following events occurs:

- Call cannot queue to the originally-targeted split because the split has no queue slots available.
- Call leaves the VDN (via a **route-to** VDN command, for example) and is queued to another split as a result.

If the call leaves vector processing and does not queue to another split (as a result of a **route-to extension** command, for example), there is no new primary split.

With this discussion in mind, let's take a look at the following table to see how CMS and BCMS interpret split flows for the switch:

CMS and BCMS standards for interpreting split flows

Flow type	Management system	Interpretation
Inflow	CMS	Calls that ring at an agent in a split other than the primary.
	BCMS	Same as for CMS.
Outflow	CMS	Calls that are dequeued from a primary split via a route-to or messaging split command, or by ringing at or being answered by an agent in another split to which the call is also queued.
	BCMS	Same as for CMS.

CMS and BCMS standards for interpreting split flows (continued)

Flow type	Management system	Interpretation
Dequeue	CMS	Calls that are dequeued from and not answered by any split other than the primary split in a VDN.
	BCMS	Not tracked.

When a call is not answered (due to an outflow, abandon, busy, or disconnect), the call's disposition is tracked for the primary split as long as the call is still queued when the call abandons, outflows, etc. However, if the call abandons or outflows from ringing, the disposition is recorded for the split for which it was ringing. On the CMS, the other splits to which the call is queued track a dequeue when the call outflows, abandons, is given busy treatment, or is disconnected.

If the primary split in a VDN is unmeasured, an outflow, abandon, busy, or disconnect is not tracked for the call. Also, an answer is not tracked if the call is answered by an agent in the primary split.

Examples of split flow tracking

The following sections provide some examples of tracking in CMS and BCMS. Each section first presents a scenario of Call Vectoring events. The scenario is then followed by a table in which the tracking for the various splits involved is recorded. Following each "tracking table," an explanation of the tracking procedure is provided.

The scenarios presented include the following:

- Call answered by a primary split.
- Call answered by a nonprimary split.
- Call abandoned from queue.
- Call answered by a primary split after a route to VDN.
- Call answered by a nonprimary split after a route to VDN.
- Call answered after a route to split.

Note:

Inflows, outflows, and dequeues are not tracked for splits administered by the **converse-on split** command. However, if a call is answered both by a converse split and (subsequently) by a nonconverse split, an "answer" is tracked for each split. However, a call is really considered "answered" only when it is answered by a nonconverse split. Therefore, traffic measurements for converse splits should be used only to measure converse split traffic and not to calculate the total number of calls.

Call answered by a primary split - The following scenario involves a call answered by the primary split. The scenario is as follows:

1. Call comes into a VDN whose vector queues the call to splits 1, 2 and 3.
2. Call is answered in split 1.

The following table shows the tracking table for this scenario:

Tracking for call answered by primary split

	Split tracking		
	1	2	3
CMS	answer	dequeue	dequeue
BCMS	answer		

Comments:

- CMS: Dequeue is tracked in split 2 as well as in split 3 because the call is answered by the primary split (split 1) and is thus dequeued from splits 2 and 3 without being answered in these splits.
- BCMS: No dequeue tracking item is available.

Call Answered by a non-primary split - The following scenario involves a call answered by a nonprimary split. The scenario is as follows:

1. Call comes into a VDN whose vector queues the call to splits 1, 2 and 3.
2. Call is answered in split 2.

The following table shows the tracking table for this scenario:

Tracking for call answered by non-primary split

	Split tracking		
	1	2	3
CMS	outflow	inflow answer	dequeue
BCMS	outflow	inflow answer	

Comments:

- CMS: Outflow is tracked in split 1 because the call is answered by an agent in another split to which the call is queued (that is, split 2). Although the call is obviously removed from split 1 after it is answered in split 2, dequeue is not tracked in split 1 because split 1 is the primary split. Inflow is tracked in split 2 because the call is answered in this split and the split is not the primary split. Dequeue is tracked in split 3 because the call is

removed from the split without being answered there. When the call is removed from split 3, outflow is not tracked in split 3 because this split is not the primary split.

- BCMS: Outflow is tracked in split 1 because the call is answered by an agent in another split to which the call is queued (that is, split 2). Inflow is tracked in split 2 because the call is answered in this split and the split is not the primary split. When the call is removed from split 3, outflow is not tracked in split 3 because this split is not the primary split.

Call Abandoned - The following scenario involves a call abandoned by the caller. The scenario is as follows:

1. Call comes into a VDN whose vector queues the call to splits 1, 2, 2 and 3.
2. Call is abandoned.

The following table shows the tracking table for this scenario:

Tracking for Abandoned Calls

	Split Tracking		
	1	2	3
CMS	abandon	dequeue	dequeue
BCMS	abandon		

Comments:

- CMS: Abandon is tracked in split 1 because this split is the primary split. Dequeue is tracked in splits 2 and 3 because the call is dequeued from these splits without being answered in either split.
- BCMS: Abandon is tracked in split 1 because this split is the primary split. Tracking is not recorded in splits 2 and 3 because no dequeue tracking item is available.

Call answered by a primary split after a route to VDN - The following scenario involves a call answered by the primary split after a **route-to** VDN command is executed. The scenario is as follows:

1. Call comes into a VDN whose vector queues the call to splits 1, 2 and 3.
2. Vector executes a **route-to VDN** step.
3. Call is then queued to splits 4, 5 and 6.
4. Call is answered in split 4.

Call Vectoring/EAS and BCMS/CMS interactions

The following table shows the tracking table for this scenario:

Tracking for call answered by primary split after route to VDN

	Split tracking					
	1	2	3	4	5	6
CMS	outflow	dequeue	dequeue	answer	dequeue	dequeue
BCMS	outflow			answer		

Comments:

Split 1 is the original primary split, because this is the first split to which the call actually queues. However, split 4 becomes the new primary split because:

- Call leaves the original VDN upon execution of the **route-to VDN** step.
- Split 4 is the first split to which the call queues upon execution of this step.
- CMS: Outflow is tracked in split 1 because this split is the original primary split, and the call is dequeued from this split via a **route-to VDN** step. Dequeue is tracked in splits 2, 3, 5, and 6 because the call is dequeued from each of these splits without being answered in any one of them.
- BCMS: Outflow is tracked in split 1 because this split is the original primary split.

Call answered by the non-primary split after a route to VDN - The following scenario involves a call answered by the nonprimary split after a **route-to VDN** command is executed. The scenario is as follows:

1. Call comes into a VDN whose vector queues the call to splits 1, 2 and 3.
2. Vector executes a **route-to VDN** step.
3. Call is then queued to splits 4, 5 and 6.
4. Call is answered in split 5.

The following table shows the tracking table for this scenario:

Tracking for call answered by non-primary split after route to VDN

	Split tracking					
	1	2	3	4	5	6
CMS	outflow	dequeue	dequeue	outflow	inflow answer	dequeue
BCMS	outflow			outflow	inflow answer	

Comments:

- CMS: Outflow is tracked in split 1 because this split is the original primary split, and the call is dequeued from this split via a **route-to VDN** step. Dequeue is tracked in splits 2, 3, and 6 because the call is dequeued from each of these splits without being answered in any one of them. Outflow is tracked in split 4 because this split becomes the new primary split after the **route-to VDN** step is executed and the call is subsequently dequeued from this split by being answered in another split (split 5) to which the call is also queued. Finally, inflow is tracked in split 5 because the call is answered in this split, and the split is not the primary split.
- BCMS: Outflow is tracked in split 1 because this split is the original primary split. Outflow is tracked in split 4 because this split becomes the new primary split after the **route-to VDN** step is executed. Finally, inflow is tracked in split 5 because the call is answered in this split, and the split is not the primary split.

Call answered after a route to split - The following scenario involves a call answered after it is routed to a split via a **route-to digits** or **messaging split** command. The scenario is as follows:

1. Call comes into a VDN whose vector queues the call to splits 1, 2 and 3.
2. Vector executes a **route-to digits** (or **messaging split**) step.
3. Call is queued to split 4 and answered by an agent in split 4.

The following table shows the tracking table for this scenario:

Tracking for call answered after route to split

	Split tracking			
	1	2	3	4
CMS	outflow	dequeue	dequeue	answer
BCMS	outflow			answer

Comments:

- CMS: Outflow is tracked in split 1 because this split is the original primary split, the call is dequeued from this split via a **route-to digits** (or **messaging split**) step, and the call is answered in split 4, which becomes the new primary split. Dequeue is tracked in splits 2 and 3 because the call is dequeued from each of these splits without being answered in any one of them.
- BCMS: Outflow is tracked in split 1 because this split is the original primary split, and the call is answered in split 4, which becomes the new primary split.

Evaluating split performance

By using the information presented to this point, along with the information from various reports (as discussed in the next section), the split supervisor can answer one or more questions concerning split performance and then make adjustments, if necessary. Here are some of the questions the supervisor can answer:

1. How many ACD calls offered to my split were “mine” (that is, were offered to this split as the primary split)?

Note:

Split “ACD calls” include Direct Agent Calls for BCMS, but not for CMS, which tracks Direct Agent Calls separately.

2. How many of “my” ACD calls did “my” split not answer?
3. How many ACD calls that I didn’t answer weren’t “mine?”

The following sections present the answers to these questions from the perspective of the CMS and BCMS.

CMS - The following answers reflect the use of the CMS:

- The number of calls offered to “my” (primary) split that were “mine” can be determined via examination of the CMS Split Summary Report. The algorithm is as follows: $\text{CALLSOFFERRED} - \text{INFLOWCALLS} - \text{DEQUECALLS}$ (that is, the total number of calls offered minus the number of calls not “mine” that I answered minus the number of calls not “mine” that I didn’t answer.)
- The number of “my” calls that “my” split didn’t answer can be determined via examination of the CMS VDN Report. The algorithm is as follows: $\text{ABNCALLS} + \text{BUSYCALLS} + \text{DISCCALLS} + \text{OUTFLOWCALLS}$ (that is, the number of abandoned calls plus the number of busy calls plus the number of disconnected calls plus the number of calls outflowed from “my” split tagged as a primary split).
- The number of calls not “mine” that “my” split didn’t answer is DEQUECALLS, which is indicated in the CMS Split Summary Report.

BCMS - The following answers reflect the use of BCMS:

- The number of calls offered to “my” split that were “mine” can be determined via examination of the BCMS Split Report. The algorithm is as follows: $\text{ACDCALLS} + \text{ABNCALLS} + \text{OUTFLOWCALLS} - \text{INFLOWCALLS}$ (that is, the total number of calls answered plus the total number of calls abandoned from “my” split tagged as a primary split plus the number of calls that outflowed “my” split tagged as a primary split minus the number of calls answered that were not directed to “my” split tagged as a primary split).

Using CMS and BCMS reports to evaluate Call Vectoring activity

There are a number of CMS and BCMS reports that allow you to evaluate Call Vectoring activity. Some of these facets include the call flows present within Call Vectoring as well as the speeds at which calls are answered. The sections that follow identify and discuss the CMS and BCMS reports that indicate this activity.

CMS reports

CMS has real-time, historical, and integrated reports. Most of the CMS historical reports are available in four versions: intra-hour, daily, weekday, and monthly. The following list identifies and describes several CMS reports that summarize Call Vectoring activity. For further details on these and other related reports, see *Avaya Call Management System Supervisor Version 11 Reports*, 585-210-708.

Note:

The reports described in this section are generated in CMS R3 and newer releases of the CMS. Corresponding CMS R2 reports do not provide information that reflects capabilities that are new to the switch (for example, internal/external call tracking).

- Split Summary Report summarizes the call activity for an entire split. Among other information, the report provides the number of calls answered, the total number of flow ins (inflows), flow outs (outflows), dequeues, and abandoned calls.

The report also indicates the average speed of answer (interval ASA) for calls. This refers to the sum of the queue time and ring time for a call within the answering split only. Finally, the report indicates the dequeued average queue time, which is the average time a call waits until it is answered by another split to which the call is also queued.
- VDN Report summarizes VDN activity for specific vectors. Among other information, the report provides calls answered, connected, abandoned, the number of VDN Flow Ins/Outs, calls forced busy, and calls forced disconnect. VDN Flow In pertains to calls that flow into a VDN from another VDN via a **route-to** command. VDN Flow Out pertains to calls that successfully flow out of VDN to another VDN or external location via a **route-to** command.
- Vector Report summarizes vector activities. Among other information, the report provides the number of calls offered, calls answered, calls abandoned, Vector Flow Ins/Outs, calls forced busy, and calls forced disconnect. Vector Flow In pertains to calls that flow into a vector from another vector via a **route-to** or **goto vector** command.

Vector Flow Out pertains to calls that successfully flow out of a vector via a **route-to** or **goto vector** command.

BCMS reports

BCMS has a real-time split report, split historical reports, real-time VDN reports, and VDN historical reports. The following list identifies and describes several BCMS reports that summarize Call Vectoring activity. For more information on these and other related reports, refer to *Avaya MultiVantage Call Center Software Basic Call Management System (BCMS) Operations*, 555-230-706.

BCMS Split Report - Summarizes the call activity for an entire split. The information can be requested either daily or by the administered time period. Among other information, the report provides the total number of flow ins (inflows) and flow outs (outflows), the calls answered and calls abandoned. The report also provides the average speed of answer time for calls handled by the split during the indicated time period.

VDN Summary Report - Summarizes statistical information for all internally-measured VDNs. The information can be requested by the administered time interval or daily. The **list bcms vdn** report gives multiple time periods or days for a single VDN. The **list bcms summary vdn** report gives a one-line summary per vdn (with data from the specified times or days), but can give the data for numerous vdns.

The report also indicates the total number of flow outs, specifically, the number of calls that route to another VDN or to a destination external to the switch. However, calls that encounter a **goto vector** command are not shown as outflows. No further measurements are taken on the calls once the calls have outflowed. If an outflowed call later abandons, this is not indicated in the report.

Among other information, the VDN report provides a total for offered calls, answered calls, abandoned calls, and also one for calls that were either **forced busy** or **forced disconnect**.

VDN Real-Time Report - Provides statistical information including the number of calls currently waiting and the oldest call waiting. The VDN real-time report has the same characteristics as other real-time BCMS reports.

Using CMS in an EAS environment

The same tracking and database items used within a traditional Call Vectoring environment are used within an EAS environment but there are also new items that are specific to EAS. All existing custom reports should work when you are upgrading to EAS.

Tracking entities

The following sections explain how the following entities are tracked in an environment with EAS optioned:

- Agents and their skills
- Direct Agent Calls
- Non-ACD Calls
- VDN Skill Preferences

Agents and their skills

The fields under the “Extn” column in the CMS Real-Time Agent Report show the extension that the agent is logged into. These fields can be used to locate the agent or to service observe the agent.

With EAS optioned, the Skill Status Report replaces the Split Status Report. This report indicates the skills logged into and the skill level of each skill. If too many calls are waiting, or if calls are waiting too long (also shown on the Skill Status report), it is possible that not enough agents have the skill administered at a high enough skill level.

An agent may be denied login to some skills if the maximum agents/skill number is met or if the CMS limit on agent/skill pairs logged in has been reached.

The Login/Logout Historical Report also lists up to 15 of the agent’s skills and the skill levels for each.

Direct Agent calls

Waiting Direct Agent calls are not included in the “Calls waiting” and “Oldest Call Waiting” report fields for skills because such calls are not skill calls. However, Direct Agent Calls are included in these two report fields for VDNs.

The Queue/Agent Summary Real-Time Report lists separately the Direct Agent calls waiting in a skill queue. Direct Agent calls are queued to the skill that is administered as the Direct Agent Skill. To manage the skill’s queue slots effectively, it is recommended that a skill be dedicated for Direct Agent calls.

Call Vectoring/EAS and BCMS/CMS interactions

Since Direct Agent calls are not skill calls, the skill tables do not track Direct Agent calls; however, the tables do monitor skill queue slots. The agent's time is tracked as "OTHER" in the skill tables. In the agent tables, there are separate Direct Agent call items. The standard CMS agent reports add the Direct Agent calls and the skill ACD calls and report these calls as "ACD Calls." The VDN tables track Direct Agent calls as ACD calls.

Non-ACD calls

The first measured skill that an EAS agent is logged into is used by CMS to track non-ACD calls unless the agent has an ACD call on hold. If an ACD call is on hold, outgoing non-ACD calls are counted for the skill of the held ACD call.

VDN skill preferences

VDN skill preference data is collected to provide information on what groups of agents (skills) are handling calls and on how effectively each skill group handles a particular VDN.

Real-time and historical VDN Skill Preference reports can be used to compare the percentage of calls being answered by the 1st, 2nd, and 3rd VDN preferences against an objective. If too few calls are being answered by the 1st skill preference, the vector can be adjusted to allow more time for the 1st skill preference group to answer calls; another alternative is to train or hire more agents with the 1st skill preference.

You can use VDN skill preference data to compare the average talk time and average ACW time for agents in the 1st, 2nd, and 3rd skill groups. If these times vary too much across groups, more training may be needed for the backup groups (that is, the 2nd and 3rd skill groups).

VDN skill preference data is tracked according to the skill preferences (1st, 2nd, 3rd) assigned to the VDN. Whenever a vector step either references a 1st, 2nd, or 3rd skill or specifies a skill number that matches the 1st, 2nd, or 3rd skill administered, the new database items are tracked. For example, if VDN 1000 has Skills 21, 22, and 23 administered as the 1st, 2nd, and 3rd skills, respectively, and if the vector associated with VDN 1000 has a "queue to main skill 22" step, tracking occurs for the 2nd VDN skill preference if the call is answered by an agent in Skill 22. Skill preference tracking also occurs for Skills 21 and 23. This allows users who prefer to specify the actual skill number in the vector to take advantage of the tracking for VDN skill preferences.

EAS administration from CMS

CMS can be used to administer vectors as well as skills for agents and VDNs. The ACD Administration: Change Agent Skills CMS screen is used to display and modify the skills and levels assigned to an agent, as well as the assigned Direct Agent skill and call handling preference.

The ACD Administration: Change VDN Skill Preferences screen is used to request a VDN's skill preferences and to modify the VDN's skills.

The CMS Vector Contents screen is used to create and modify vectors. CMS supports the Call Vectoring commands that queue calls to the 1st, 2nd, or 3rd VDN skill.

■ ■ ■ ■ ■ ■

Appendix I: Operation details for the route-to command

The **route-to** command can be programmed with or without coverage. The following table summarizes the operation of the **route-to** command for each of the destination types and conditions associated with the commands.

Switch route-to command operation

Condition	cov = n Any Step	cov = y Any Step ¹
Invalid Destination²	Goes to next step, else stop	Goes to next step, else stop
VDN Extension³ Vector Assigned Vector Has No Steps	 Goes to new vector Stop ⁴	 Goes to new vector Stop ⁴
Station Extension Idle (all appearances idle) CF-ALL Active or CF-DA Applies Coverage ● DA Applies ● All Applies ● SAC Applies ● None of Above Applies	 Forwards if possible, else next step, else stop ⁴ Rings idle app. Goes to next step, else stop ⁴ Rings idle appearance Rings idle appearance	 Forwards if possible, else coverage, else busy Coverage on DA Coverage Coverage Call delivered and is allowed to cover

Operation details for the route-to command

Switch route-to command operation (continued)

Condition	cov = n Any Step	cov = y Any Step ¹
Station Extension Active (with idle 2-way app) CF-ALL Active Coverage • DA Applies • Ext Act Applies • All Applies • SAC Applies • None of Above Applies	Forwards if possible, else next step, else stop ⁴ Rings idle app (no DA timing) Rings idle appearance Goes to next step, else stop ⁴ Rings idle appearance Rings idle appearance	Forwards if possible, else coverage, else busy Coverage on DA Coverage Coverage Coverage Call delivered and is allowed to cover
Station Extension Busy (no idle 2-way app) Extension in Hunt Grp (also see ACD Hunt Grp) CF-ALL Active or CF-DA Applies Call Waiting to Analog Sta Would Apply Coverage • Ext Act Applies • Ext Bsy Applies • All Applies • SAC Applies • None of Above Applies (or hunt, fwd, or cov destination is unavailable)	Queues if possible, else next step, else stop ⁴ Forwards if possible, else next step, else stop ⁴ Goes to next step, else stop ⁴ Goes to next step, else stop ⁴ Goes to next step, else stop ⁴ Goes to next step, else stop ⁴ Goes to next step, else stop ⁴	Queues if possible, else coverage, else busy Forwards if possible, else coverage, else busy Call waits Coverage Coverage Coverage Coverage Busy tone given
Extension with Incompatible COR	Goes to next step, else stop.	Goes to next step, else stop.

Switch route-to command operation (continued)

Condition	cov = n Any Step	cov = y Any Step ¹
Terminating Extension Group		
All Members Idle	Rings idle appearance	Call delivered and is allowed to cover
A Member Active on TEG	Goes to next step, else stop ⁴	Coverage, else busy
No Idle App on Any Member	Goes to next step, else stop ⁴	Coverage, else busy
Hunt Group Extension		
Idle Agent	Rings idle appearance	Call delivered and is allowed to cover
No Idle Agent		
• Call cannot queue	Goes to next step, else stop ⁴	Busy tone given
• Call can queue	Call is queued	Call is queued
Extension on Another Node (Uniform Dialing Plan - UDP DCS or non-DCS)		
Trunk available	Call delivered	Call delivered
Trunk not available	Goes to next step, else stop ⁴	Queues if possible, else reorder
No DCS Buffer for Routing	Call delivered w/o DCS msg	Call delivered w/o DCS msg
Trunk Access Code (TAC) Destination		
Trk Grp No Dial Access	Goes to next step, else stop ⁴	Routes to local attendant
Trunk Available	Call delivered	Call delivered
Trunk Not Available	Goes to next step, else stop ¹	Queues if possible, else reorder

Operation details for the route-to command

Switch route-to command operation (continued)

Condition	cov = n Any Step	cov = y Any Step ¹
AAR/ARS FAC Dest. (including Subnet Trkng) Trk Grp No Dial Access Trunk Available Other Routes Avail All Routes Busy • No Pattern Queuing • Queuing Assigned	Tries next route Call delivered Call delivered Goes to next step, else stop ⁴ Goes to next step, else stop ⁴	Routes to local attendant Call delivered Tries next route Reorder tone given Queues to pattern
Attendant Queue (dial 0) Idle Atnd No Idle Atnd • Not In Night Svc • In Night Svc - Dest. assigned - Not assigned	Rings idle appearance Call is queued Delivered to night service Call is queued	Call delivered and is allowed to cover Call is queued Delivered to night service Call is queued
Individual Attendant Access Attendant idle Attendant busy	Rings idle appearance Queues if possible else Goes to next step, else stop ⁴	Call delivered and is allowed to cover Queues if possible, else Busy tone given
CAS Attendant With Caller on Branch RLT available All RLTs busy	Rings idle appearance Queues if possible, else next step, else stop ⁴	Call delivered and is allowed to cover Queues if possible, else busy tone

Switch route-to command operation (continued)

Condition	cov = n Any Step	cov = y Any Step ¹
Inter-PBX Atnd Calling Trunk Grp Controlled Trunk Available Trunk Not Available	Routes to local attendant Call delivered Goes to next step, else stop ⁴	Routes to local attendant Call delivered Reorder tone given
Look Ahead Interflow (LAI) (feature active & routes over ISDN-PRI facility)⁵ B-Channel Not Available B-Channel Available and Receiving Switch: • Accepts • Rejects	Goes to next step, else stop ⁴ Interflow succeeds ⁶ Goes to next step, else stop ⁴	Queues if possible, else reorder Call cut-through Call gets busy/disconnect
Receiving Switch w LAI Acting as Tandem Sees from Remote Receiving Switch: • Call Accepted • Call Rejected • if interflow-qpos	Interflow succeeds ⁶ Goes to next step at receiving switch, else sending switch considers call rejected after 2-minute timeout Determines if queued call is eligible for interflow	Call cut-through Call gets busy/disconnect Determines if queued call is eligible for interflow

1. When the **with coverage** option is set to **y**, the call is removed from vector processing when the route-to step is reached, regardless of facility or remote switch availability. The call is taken out of any split queue, and any feedback, such as music or ringback, is removed, even if the destination is not available. If the call is subsequently "rejected" by the receiving switch vector, subsequent call treatment is defined by the "rejection" command (either busy or forced disconnect). The call is treated as though the destination is directly dialed (see footnote 3 for related information). This includes coverage, forwarding, treatments for calls that cannot be completed (busy reorder, and intercept) and displays. The answering station sees only caller name and number, unless the Display VDN for route-to DACS option is enabled (for more information, see [Displaying VDN names for vector-initiated Direct Agent calls](#) on page 558). A call routed via an **adjunct routing** command is treated the same way as a call that is routed via a **route-to with coverage y** command.

Operation details for the route-to command

2. Invalid destinations include the following: empty (for example, zero collected digits) or invalid route-to destination number, unassigned extension number, incomplete number of digits for AAR/ARS pattern, non-AAR/ARS feature access code (FAC), maintenance busy station extension, COR of the VDN that prevents access (for example, origination restricted), FRL of a VDN that is lower than required for the AAR/ARS pattern access, no routes assigned to the AAR/ARS pattern, incompatible calling and destination partitions, ACTGA trunk group destination, or an off-net forwarding destination. If a TAC (trunk access code) destination is involved, and if the TAC is for a CO/FX trunk with a **route-to with coverage n** step, the digits entered must match a valid ARS analysis string. If not, the destination is considered invalid. For other trunk types with a **route-to number** or **route-to digits with coverage n** step, the step succeeds when the trunk is seized (that is, vector processing stops). For a **route-to with coverage y** step, the step succeeds if the TAC is assigned.
3. A call that routes to a VDN via the **route-to number with cov = y unconditionally** command behaves like a directly-dialed call instead of a VDN call. Therefore, the terminating station's display only shows the originating station information and does not show the VDN information (for other types of VDN calls, the terminating station would see the VDN name).
4. The interaction "Stop" means the following: vector processing is stopped, the call remains queued to a split, and the caller continues to hear feedback initiated by a previous step. In the case where the **route-to** command fails and processing stops (due to a busy station or trunk group destination), retry can be implemented in the vector. Retrying is accomplished by including an unconditional **goto** step as the last step to allow for a loop back to the **route-to** command. Use of an intermediate **wait-time** command step with appropriate feedback and delay interval is strongly recommended in order to reduce processor occupancy.
5. With one exception, any **route-to with cov=y** step that routes over ISDN-PRI facilities cancels Look-Ahead Interflow. The exception occurs when a call reaches a vector via coverage to a VDN. Calls that cover to a VDN will not be further forwarded or otherwise redirected. For covered calls, a **route-to** command with coverage set to y functions as though coverage were set to n. Thus, a **route-to with coverage y** will route covered calls via LAI over ISDN facilities if LAI is enabled.
6. On the sending switch, the call is removed from vector processing (that is, the call is taken out of any split queue and any feedback, such as music or ringback, is removed).

■ ■ ■ ■ ■ ■ Appendix J: Call flow and specifications for converse – VRI calls

This appendix details call flow for calls involving a **converse-on** vector step and Voice Response Integration (VRI). This call flow is segmented into the following phases:

- Converse call placement
- Data passing (optional)
- VRU data collection (optional)
- Script execution
- Data return (optional)
- Script completion
- Switch data collection (optional)

Note:

If, during any phase of this call flow, a **converse-on** step is executed while the caller is in the split queue and an agent becomes available to service the caller, the VRU port is dropped, vector processing is terminated, and the calling party is immediately connected to the available agent.

Converse call placement

The first action taken by the **converse-on** step is to deliver the call to the converse split. Ringback tone is not heard by the caller. Any audible feedback supplied by vector processing remains until the VRU answers the call and all digits (if administered) have been outpulsed to the VRU. Vector processing is suspended. Callers remain in any nonconverse split queues, and they retain their position in queue while the converse session is active.

If a Call Prompting TTR is allocated to the call, the TTR is released. Any dial-ahead digits are discarded. However, any digits collected prior to the **converse-on** step are kept.

Calls to busy converse splits are allowed to queue. The priority of the call in queue is administrable within the **converse-on** step. Again, any audible feedback supplied by vector processing continues until the call is answered by the VRU and any data is outpulsed. Calls to busy converse splits have either no queue or a full queue fail. For this scenario, a vector event is logged, and vector processing continues at the next vector step.

Whenever a **converse-on** step places a call to an auto-available split whose agents are all logged out, the call is not queued. Instead, the **converse-on** step fails, a vector event is logged, and vector processing continues at the next vector step.

Note:

Usually, this scenario occurs whenever the Voice Response Unit (VRU) goes down, the ports are members of an Auto-Available Split (AAS) and the Redirection on No Answer (RONA) feature has taken all the ports out of service.

The originator's display is not changed by the terminating or answering of a converse call. Also, whenever a call is delivered to a display station via a **converse-on** step, the station displays the following information: "Originator Name to VDN Name." Conventional Call Vectoring rules for Override are in effect.

Valid destinations for converse calls must be vector-controlled and include the following:

- Hunt groups
- ACD (including Auto-Available) splits
- Agent (including Auto-Available) skill groups
- AUDIX hunt groups

Note:

Even though AUDIX hunt groups are valid destinations for converse calls, they do not need to be vector-controlled.

Undefined and nonvector-controlled hunt group, split or skill numbers are rejected at administration time.

Any attempt to remove a hunt group, split or skill administered within a **converse-on** vector step is denied until the vector has been changed. Also, any attempt to make a hunt group, split, or skill nonvector-controlled is denied if the hunt group, split, or skill is called by a **converse-on** step.

Data passing

This phase is optional and is in effect only if the application calls for the switch to pass information in-band to the VRU.

The **converse-on** step may output up to two groups of digits to the VRU. The digits can serve two major purposes, as follows:

- Notify the VRU of the application to be executed
- Share call-related data, such as ANI, CINFO or caller digits collected by the switch

In many applications both application selection and data sharing are required.

Since in many cases the digit strings are of variable length, the switch always appends a pound sign (#) to the end of each digit string. Prompt and collect steps in the VRU script must therefore always be administered to expect the pound sign (#) as the end-of-string symbol and to include the pound sign in the digit count.

Sending the pound sign (#) prevents excessive delays and other problems caused by digit timeouts.

The complete output sequence is summarized as follows:

1. VRU answers the call
2. Delay for the time administered in the “Converse first data delay” field in the System Parameters-Features form occurs
3. <data_1> is outputted
4. “#” is outputted
5. Delay for the time administered in the Converse second data delay field in the System Parameters-Features form occurs
6. <data_2> is outputted
7. “#” is outputted

Note:

The length of DTMF tones (digits) and the interdigit pause between tones is administrable on the Feature-Related System Parameters form. The optimum timers for Avaya Interactive Response are a 100 msec tone and 70 msec pause (administration default).

Any audible feedback supplied by the switch is disconnected only after the output sequence is completed. Also, any touch-tone dialing by the calling party during the data passing phase does not result in data corruption.

The following values may be administered for <data_1> and <data_2> within the **converse-on** command:

- **Administered digit string:** This string can contain up to six characters consisting of one or more digits (0 through 9) or asterisks (*). The pound sign (#) may not be included in a digit string because it is reserved as the end-of-string character. However, a single “#” may be administered.
- **ani:** If the call is a local call or an incoming DCS call, this data type causes the extension of the calling party to be outpulsed. If the call is an incoming ISDN PRI call with ANI (BN) provided to the switch, the calling party number/billing number (CPN/BN) of the calling party is outpulsed to the voice information system. If there is no ANI (BN) to send, the end-of-string pound sign (#) is the only character outpulsed. Any other type of incoming call results in “#” being outpulsed.
- **vdn:** This data type causes the VDN extension to be outpulsed. In cases where multiple VDNs are accessed, normal VDN override rules determine which VDN extension is outpulsed.
- **digits:** This data type can be used only if Call Prompting is optioned, and it causes the most recent set of digits collected in vector processing to be outpulsed. If no digits are available, the end-of-string pound sign (#) is the only character outpulsed.
- **qpos:** This data type causes the value of the queue position of a call in a nonconverse split to be outpulsed. This value is a variable length data item from which between one and three digits can be outpulsed. If the call is not queued, the end-of-string pound sign (#) is the only character outpulsed.

Note:

The use of this keyword is not recommended with multiple split queuing because any queue position value sent may not be meaningful. However, if the call is queued to multiple nonconverse splits, the value of the caller's queue position in the first nonconverse split is sent.

This data may be used by the voice information system to inform callers of their position in queue or to decide whether to execute a long or short version of a voice response script.

- **wait:** This data type sends the expected wait time for a call in vector processing that is queued to at least one split. It is a value from 0 to 9999 seconds (variable length, that is, not padded with zeros) always followed by a # digit. If the call is not queued, or is queued only to splits with no working agents, only the # is outpulsed.
- **“#”:** This is the only character outpulsed. Outpulsing this character causes the corresponding prompt and collect command in the voice response script to be skipped.
- **“none”:** This data type causes no characters to be outpulsed. Also, no end-of-string pound character (#) is outpulsed, and no time delays are invoked.

The switch always outpulses a pound character (#) at the end of each digit string. Where “#” is administered, or where the “digits” keyword is administered and the last digit collected from the caller is “#,” only one “#” is outpulsed. No “#” is outpulsed when the keyword “none” is administered.

If <data_1> is administered as “none,” <data_2> must also be “none.”

Call flow and specifications for converse – VRI calls

Any data to be passed to the VRU from the switch is outpulsed in-band. Two time delays on the System Parameter-Features form (Converse first data delay and Converse second data delay) are administrable by customers. These delays may range from 0 through 9 seconds, with a default of zero seconds for the converse first data delay and a default of two seconds for the converse second data delay. The delays may be needed to give the VRU time to invoke an application and allocate a touch-tone receiver to receive the passed digits.

If <data_1> is not “none,” the converse first data delay timer starts when the call is answered by the VRU. Once the timer expires, the data_1 digits are outpulsed in-band to the VRU, followed by the end-of-string pound sign (#).

If <data_2> is not “none,” the converse second data delay timer starts when the end-of-string pound sign (#) from the first digit string is outpulsed. Once the timer expires, the data_2 digits are outpulsed in-band to the VRU, followed by the end-of-string pound sign (#).

No time delays are invoked when the keyword “none” is administered.

Note:

The outpulsing of digits is not heard by the caller.

If the VRU hangs up during the data passing phase, the switch will log a vector event, reactivate vector processing at the next vector step, and ensure the VRU port is accessible for future calls.

Once all digits have been passed to the VRU, any audible feedback is disconnected.

Note:

At this point, control has effectively been passed to the VRU.

To ensure the robust operation of the VRU data passing operation, be sure to implement the following recommendations:

- Include the prompt and collect command in the VRU script for each data field passed in the **converse-on** step.
- Administer each prompt and collect command to recognize the “#” character as the end-of-string character.
- Ensure the number of digits expected is one greater than the number of digits passed to allow for the “#” character, which terminates every converse data field.

Also, ensure no announcement is played in these prompt and collect steps.

- Ensure the first digit timeout in the prompt and collect steps is five seconds greater than the corresponding converse data delay. (For example, if the **converse-on** step passes two data fields, and if the converse first data delay is 0 secs and the converse second data delay is 4 secs, the first digit timeouts for the two prompt and collect commands should be at least 5 and 9 seconds, respectively.)
- Ensure the interdigit timeout in the prompt and collect steps is at least five seconds.

- Administer the converse first data delay to give a VRU under a heavy load sufficient time to allocate a DTMF touch-tone receiver after answering the call.
- Administer the converse second data delay to give a VRU under a heavy load sufficient time to complete any tasks between the first and second prompt and collect command. (For example, the VRU can invoke a new application if the first data field passed is used to identify the application script to be executed.)
- In general, for **converse-on** steps pass data to the VRU, ensure the VRU script does not execute any commands between the time the call is answered and the time when the first prompt and collect command is executed.

VRU data collection

When digits are passed from the switch to the VRU, the first VRU script commands executed are answer phone and prompt and collect. No announcement is programmed for the prompt and collect command, and the pound sign (#) is programmed as the end-of-string sign. If two sets of digits (that is, <data_1> and <data_2>) are passed by the switch, there will be two prompt and collect commands on the VRU to receive them.

If the first digit string (<data_1>) passed to the VRU is for application selection, the Avaya Interactive Response Script Builder exec command invokes the appropriate script. If a second digit string (<data_2>) is also used to pass an argument to this selected application, the first command in the executed script is a prompt and collect command with no announcement prompt programmed and with the pound sign (#) programmed as the end-of-string character.

The “Converse second data delay” is used to give the VRU time to invoke the selected application before the <data_2> digit string is outpulsed.

The application developer should ensure the administered converse first data delay and converse second data delay timers allow sufficient time for the VRU to successfully collect all outpulsed digits, even during periods of heavy call volume. Loss of digits from <data_2> is an indication the converse second data delay timer needs to be increased.

Script execution

During script execution, digits input by the calling party in response to prompt and collect commands are collected by the VRU but are not collected by the switch as dial-ahead digits. Also, audible feedback is determined by the VRU.

If an agent from a nonconverse split becomes available to service the call while the VRU script is being executed, the VRU port is dropped from the call, and the caller is immediately connected to the agent. Any digits collected prior to executing the **converse-on** step are still available and may be displayed using the CALLR-INFO button.

The entire call is dropped if the caller abandons during the execution of a **converse-on** step.

Data return

This phase is optional and is in effect only if the application calls for the VRU to return information to the switch before returning control to vector processing.

Digits returned by the VRU are treated as dial-ahead digits. The rules for collecting and processing VRU-returned digits are identical to those for collecting and processing Call Prompting digits (see [Call Prompting](#) on page 225).

VRU data return is done in a manner similar to an analog transfer. Specifically, the VRU does an analog switchhook flash, outpulses DTMF digits, and then hangs up. If converse data is returned, the DTMF digits comprise two parts. The first sequence of digits is the converse data return feature access code administered on the Feature-Access-Codes form. The second sequence of digits is the sequence to be passed by the VRU. These digits are collected later during vector processing.

The Avaya Interactive Response VRU offers a built-in external function called `converse_data`. This function allows applications developers to perform this operation in a convenient and robust fashion.

To ensure the robust operation of the VRU data return operation, be sure to follow these recommendations:

- Set the analog flash timing to 600 msec.
- Ensure DTMF tones last at least 70 msec and interdigit pauses last at least 50 msec. This results in an outpulsing rate up to 8.33 digits per second.
- (Avaya Interactive Response only) Use the `converse_data` external function to return data to the switch.
- Hang up line to switch after outpulsing digits. Assume that switch will wait between 1.2 and 1.5 secs to determine that the hang-up is a disconnect.

For applications involving VRUs other than Avaya Interactive Response VRUs, be sure to follow these recommendations:

- After the flash, ensure the VRU performs dialtone detection (stutter dialtone) for a sufficient period of time to ensure accurate detection (typically 0.6 to 1.0 secs) before outpulsing the converse data return feature access code.
- If no dialtone is received before the timeout, ensure the VRU does two more retries of the analog flash. Also, if no dialtone is detected after two retries, ensure the VRU logs an error.
- Whenever dialtone is detected, ensure the digits of the converse data return feature access code are outpulsed.
- After the converse data return feature access code is outpulsed, the returned digits can be outpulsed without waiting for the second dial tone.
- After the VRU digits are outpulsed, the line to the switch is dropped.

Assuming an outpulse rate of 8 digits per sec (0.125 secs per digit), a 3-digit feature access code and stutter dial tone detection time of 0.6 secs, the maximum of 24 digits passed to switch should take about 6 secs (1.2 secs disconnect plus 8 secs plus 0.125 secs per digit).

The Call Classifiers required by the Call Prompting feature are not required for returning digits in-band from the VRU to the switch. Instead, general purpose TTR boards are used. As long as dial-ahead digits are available, any **collect digits** steps following a **converse-on** step do not require a Call Classifier to be allocated to the call.

If no general purpose TTRs are immediately available, and if the call queues for a TTR, no dial tone is provided. For this scenario, the VRU does not outpulse any digits until a TTR is available and dial tone is provided.

If there are no general purpose TTRs available on the switch, and if there is no space in the TTR queue, the operation fails. Usually, the VRU logs an error and then quits, and vector processing continues at the next vector step. Existing system measurements reports indicate when the system is configured with an insufficient number of TTRs.

The "Converse Data Return Code" can be followed by a maximum of 24 digits. The VRU touch-tones the code and the digits in-band. However, the code and the digits are not heard by the caller. The digits are stored in the switch as Call Prompting dial-ahead digits. If "x" digits are collected by vector processing before the **converse-on** step is executed, the maximum number of digits that can be returned is reduced to "24-x." Any additional digits returned by the VRU are discarded. The data return is completed once the VRU hangs up.

The digit string returned by the VRU can consist of the digits (0 through 9) and pound signs (#). The pound sign (#) is interpreted by the **collect digits** step as an end-of-string character. If the digit string being returned is of variable length, the VRU can terminate the string with a pound sign (#) to avoid the ten second timeout delay that occurs when the digits are collected. If the digit string being returned is "multi-part" (that is, to be collected by multiple **collect digits** steps), and if some of the parts are of variable length, the pound sign (#) can be used to terminate each of the variable length parts.

Note:

An asterisk (*) may be included as part of the converse data return code. However, since the asterisk is interpreted as a "delete" character by the switch, it makes little sense to use it as a returned digit. If it is used as such, all characters returned prior to the asterisk are discarded.

During the data return phase, the caller is temporarily put on hold. Music-on-hold, if administered, is suppressed. Since the caller hears silence during this phase, feedback should be provided to the caller as soon as possible after the **converse-on** step is executed.

Any touch-tone digits dialed by the calling party during the data return phase are discarded. These digits do not cause data corruption, and they are not collected as dial-ahead digits by the switch.

Call flow and specifications for converse – VRI calls

If an interdigit timeout occurs during the data return phase, the switch logs a vector event, keeps the digits already returned, drops the VRU, and reactivates vector processing at the next vector step.

If the timeout occurs before the converse data return code is returned, the operation is the same except that no discarded digits will be available.

Script completion

The VRU script returns control to vector processing on the switch by simply hanging up the line. In cases where no data is returned to the switch, this is done usually by executing the **quit** command. In cases where data is returned, this occurs whenever the VRU hangs up on completion of the VRU data return operation.

The last set of digits collected before the **converse-on split** step is executed is still available and may be displayed by an answering agent on the nonconverse split by using the CALLR-INFO button.

A VRU script can be programmed to continue running after hanging up the voice line. This after-call work is usually very short, and it may involve either a final message to a host or a final update to a local database. For this scenario, the VRU port (channel) is still associated with the running script even though there is no longer a voice connection.

From the switch point of view, the agent (port) is available for the next call. If a call is delivered to this port, the VRU does not answer the call until the previous script has completed. As long as the VRU script's after call work is short in duration, this poses no significant problem for the VRI feature. However, high volume VRI applications with lengthy after call work periods should be avoided, especially if such periods are so lengthy they approach the administered timeout period on the switch for the Redirection on No Answer (RONA) feature. In such a case, RONA might think the VRU ports are faulty and might therefore start to take these ports out of service.

Switch data collection

This phase is in effect only if the VRU returns information to the switch.

Once the VRU script has completed and vector processing is reactivated, the returned digits are collected and processed by vector commands in the usual manner. Since the digits must be collected by a **collect digits** command, data may be returned and processed only if the Call Prompting option is enabled.

The data returned can consist of multiple parts. For example, the VRU could return a stream of seven digits in which a single digit success/fail code is followed by a six-digit account code. For this scenario, the **converse-on** step would be followed by a sequence of vector steps including two **collect digits** steps. The first **collect digits** step would collect one digit and then check the result code; the second **collect digits** step would collect the six-digit account code.

Any touch-tone digits dialed by the calling party during the data collection phase are discarded, do not cause data corruption, and are not collected as dial-ahead digits by the switch.

If VRU data is returned, the calling party is able to touch-tone a response to a switch prompt only after the data collection phase is completed and another **collect digits** step is executed. This is true because each executed **collect digits** step does not allocate a TTR when dial-ahead digits are present. Since VRU-returned digits are treated as dial-ahead digits, a TTR is attached to the call only after all returned digits are collected and another **collect digits** step is encountered. Only at this point can the caller hear an announcement for the **collect digits** command and successfully enter digits.

■ ■ ■ ■ ■ ■ Appendix K: Security issues

Call Vectoring can be integrated into the security of your switch. For example, Call Vectoring and Call Prompting can be used to help prevent unauthorized users from gaining access to the switch via the Remote Access feature. This appendix explains how this is done.

Remote access

Abuse of remote access on the switch is one of the main methods by which unauthorized users obtain telephone services illegally. This section explains how a number of Call Vectoring features can be used to prevent unauthorized use of the remote access feature. No new development is required for any of these services.

Two methods are available, as follows:

- Front-ending remote access (that is, reaching the remote access extension via Call Vectoring).
- Replacing the function of the remote access extension by one or more call vectors.

Front-ending remote access

This method gives authorized external callers a VDN extension to call instead of the remote access extension, which is kept private. The corresponding call vector can then implement a number of security checks before routing callers to the remote access extension. Routing can be done via a **route-to number** or **route-to digits** step.

The following advantages are possible via this method:

- Call Vectoring can introduce a delay before the dial-tone is provided to the caller. Immediate dial-tone is often one criterion searched for by a hacker's programs when the hacker is trying to break into a system.
- A recorded announcement declaring that the use of the switch services by unauthorized callers is illegal and that the call is subject to monitoring and/or recording can be played for the caller.

Security issues

- Call Prompting can be used to prompt for a password. In such a case, the call is routed only if there is a match on the password.
- Use of the remote access extension can be limited to certain times of the day or certain days of the week.
- Real-time and historical reports on the use of the remote access feature can be accessed from CMS or from BCMS.
- Different passwords can be used on different days of the week or at different times during the day.
- Many VDNs that call the remote access extension can be identified. Accordingly, individuals or groups can be given their own VDN with unique passwords, permissions and reports. Any abuse of the system or security leak can then be attributed to an individual or a group.
- The caller can be routed to a VRU using the **converse-on** step where more sophisticated security checking, such as speaker recognition, can take place.
- Anyone failing any of the security checks can be routed to a “security” VDN that routes the caller to security personnel with a display set or to a VRU. Such a call would show “security” and possibly also the attempted password on the display. If the call is passed to a VRU, the VDN, the ANI and/or the prompted digits can be captured. CMS and BCMS reports on this security violation VDN will give information on how often and when security violations occur.

Replacing remote access

For this method, the remote access extension is not used. One or more VDNs are designed to access call vectors that can employ all of the security checks described in the previous section. The same reports and monitoring/recording capabilities described in the previous section can also be used. Instead of routing to the remote access extension, the vector collects digits from the caller and then routes to the given destination if there is a match on the password.

Again, multiple VDNs can be created for individuals or groups with different security checks and different permissions and/or restrictions. Destination numbers provided by callers can be screened by the vectors and denied if the user does not have permission to access that destination. For example, an individual user could be restricted to placing calls to numbers beginning with area codes “303” and “908.”

EAS

With EAS, agent stations can be locked when they are not staffed. This is accomplished by assigning the station a Class of Restriction that does not allow outbound calls or it could be restricted from toll calls.

EAS agents have an optional password of up to nine digits to log in. This password is not displayed on DCP terminals when the agent is entering the password on the dial pad.

Limiting outside access using VDN COR restrictions

Routing calls through the communication server with Call Vectoring can raise some security issues. A VDN has a Class Of Restriction (COR). Calls processed by the vector carry the permissions and restrictions associated with the COR of the VDN.

For example, if a vector in the switch is written to collect digits, and then to route to the digits dialed, the restrictions on what calls can be placed are determined by the COR of the latest VDN. Also, checks can be made on the digits that are dialed, using **goto if digits** vector commands (for example, **goto if digits = 123**) to disallow routing to undesired destinations. The collect digits step can also be limited to collect only the number of digits required (for example, only collecting five digits for internal dialing).

An incoming caller can access Trunk Access Codes, some Feature Access Codes, or most other sets of dialed digits. To deny incoming callers access to outgoing facility paths, the COR of the Vector Directory Number must be configured to disallow outgoing access. This should include the following: lowering the Facility Restriction Level (FRL) in the COR to the lowest acceptable value (FRL=0 provides the most restricted access to network routing preferences), assigning a Calling Party Restriction of "Toll" or "Outward" denying Facility Test Call capability, and blocking access to specific CORs assigned to outgoing Trunk Groups using the Calling Permissions section of the Class Of Restriction screen.

Review the Classes of Restriction assigned to your VDNs. If they are not restricted, consider assigning restrictions on the VDN and/or using **goto** tests on those digits to prevent callers from exiting the system via the vector.

Vector initiated service observing

The following restrictions can be used with vector initiated Service Observing to guard against unauthorized use.

- Call prompting commands can be used in Service Observing vectors to provide passcode protection, and to limit access to observing specific destinations or verified caller entered digits.
- Time of Day/Day of Week checks can be incorporated in Service Observing vectors.
- A vector can be created to be used exclusively for Service Observing.
- For a VDN to be observed as the result of a route-to command, the VDN must have a COR that allows it to be observed.
- The calling permissions of the COR assigned to the Service Observing VDN in conjunction with the “can be observed” settings of the COR assigned to the destination determine what agents, stations, or VDNS can be observed.

Voice response integration

When a converse step is used to access a VRU application that returns data for a collect digits step, the opportunity for toll fraud exists when the VRU application fails to return any data. To avoid this type of toll fraud be certain that one of the following is true:

- If the collected digits are used to route calls internally, be certain that the Class of Restriction (COR) for the Vector Directory Number (VDN) does not allow calls to route externally.
- If it is necessary to use the collected digits to route calls externally, use a password to verify that the collected digits have been passed by the VRU application. In the following vector example the VRU application returns a three-digit password followed by the eight-digit external number. The vector routes calls without the correct password to a different vector and routes calls with the correct password to the collected digits.

Voice Response Integration Security Example

```
converse-on split 10 pri m passing none and none
collect 3 digits after announcement none
goto vector 23 if digits <> 234
collect 8 digits after announcement none
route-to digits with coverage n
```

Attendant Vectoring

Security Violation Notification (SVN) referral calls can be directed to an attendant group. These are priority calls and, as such, cannot terminate to a VDN. However, when these calls are sent to the attendant group, they are treated as ordinary calls - priority does not apply to attendant group processing. So, these will be treated as normal attendant group calls and will be sent through vector processing.

Remote logout of agent

See [Remote access](#) on page 671 for issues associated with accessing the switch from a remote location.

■ ■ ■ ■ ■ ■

Appendix L: Setting up a contact center

Contact center managers need some key indicators to measure ACD performance at their site. Usually, in setting up a contact center, several factors involving call management are considered. The following list identifies and defines the most common of these factors, and it provides a typical question that might be asked. In addition, an insurance company example will be used to discuss the different options in this appendix.

Volume - Number of calls going in or out of the ACD. (How many calls did Split 1 answer?)

Productivity - Call volume per unit of time. (How many calls did Split 1 answer between 8 a.m. and 9 a.m.?)

Utilization - Overall use of the phone center. (What was my agent occupancy?)

Accessibility: - Availability of lines and agents when customers call the ACD (this is an area that the Avaya CMS can probably most clearly define and help improve). (Were lines busy when customers called or did they have to wait too long?)

Quality of Service: - Accuracy of information, a pleasant manner, responsiveness to caller concerns, successful completion of business, and efficient time utilization (not all measured directly by the CMS). (Was the caller given good service?)

This chapter explains how to set up a contact center for customers with Call Vectoring and/or Expert Agent Selection (EAS).

Call Vectoring/non-EAS option

To set up a contact center that has Call Vectoring but not EAS, do the following:

1. Determine your contact center's objectives. Think about how you want your contact center to handle calls and also about what you want your contact center to achieve. See [Non-EAS Worksheet #1: Contact center objectives](#) on page 684.

A company's basic goals are to increase profits and market share and to decrease costs. The purpose of setting up a contact center is to monitor these goals using the CMS/BCMS reports. It is best to have more than one objective. (Some customers set and then live by only one objective.) Contact center objectives must then be created to meet the goals. These objectives must be communicated to the Split Supervisor or to the Administrator managing the contact center.

The following list provides an example set of contact center objectives:

- Establish the following measured entities:
 - Average Speed of Answer = 15 seconds
 - Abandon Rate <= 3%
 - Average Talk Time = 2 1/2 minutes
 - ACD calls per agent = 80 to 90 per day
 - Number of calls in queue = 6
 - Percentage of calls answered within the service level = 95%
 - Agent occupancy > 90%
 - Percentage of trunks busy < 3%
 - Generate revenue through the contact center.
 - Train agents to back up each other.
 - Adequately train agents to provide service that meets customer expectations.
2. Review your existing operation and determine your contact center needs (see [Non-EAS Worksheet #2: Current split operation](#) on page 685 and [Customer/contact center needs guidelines](#) on page 681).
 3. On the switch, assign a unique Hunt Group number and Call Distribution method to each caller need. This number will be your split number (see [Non-EAS Worksheet #3: Customer needs](#) on page 687 and [Customer/contact center needs guidelines](#) on page 681).

4. Assign DNIS (Dialed Number Identification Service) (that is, the number dialed) as a Vector Directory Number (VDN) (see [Customer/contact center needs guidelines](#) on page 681).

As an option, you can assign one VDN for a main number and use Call Prompting to route the call to the proper split.

The following table illustrates the guidelines given up to this point.

Customer/contact center needs guidelines

Need	Split number (hunt group)	Call distribution ¹	VDN
New policy	1	UCD	555-6543
Questions about policy, Rate Quotes, Billing	2	UCD	555-6432
Spanish speaking for policy, service, and claims	3	DDC	555-6321
Claims	4	UCD	555-6210

1. Options include Direct Department Calling (DDC) and Uniform Call Distribution (UCD).

Notice that this contact center has only one split for all Spanish calls. However, resources permitting, you could create a New Policy split, a Service split, and a Claims split, each containing agents who speak Spanish. As an alternative, you could use one main VDN to point to a Call Prompting vector designed to route the calls to the splits.

5. On the switch, assign extensions to the agents' physical terminal locations (see the [Extension/LoginID assignments](#) table, below).
6. In CMS: Dictionary: Login Identifications, assign each agent a unique loginID. Agents are known to the CMS by the login ID. If assigned, reports refer to an agent by name, not by login ID.

The following table illustrates the assignments described in the previous items:

Extension/LoginID assignments

Agent name ¹	Extension	LoginID ¹
Randy Tyler	1231	2000
Cathy Smith	1232	2001
Carla Silva	1238	2002

1. = assigned in the CMS Dictionary

Note:

When you are adding names to extensions on the switch, the agent name should be the same name as the loginID assigned in the CMS.

7. On the switch, assign agent extensions to splits. More than four splits can be assigned to an agent; however, the agent can log into a maximum of four splits. An agent assignment to splits can be changed in the CMS: ACD Administration: Move Extensions Between Splits if the agent is logged off.

The following table illustrates the assignment of agent extensions to splits:

Agent extension/split assignments

Split (hunt group)	Agent extensions
1 - Sales	1231, 1232, 1233, 1234, 1235, 1236, 1237, 1238, 1239
2 - Service	1231, 1232, 1234, 1238, 1239, 1240
3 - Spanish	1238, 1240, 1245
4 - Claims	1238, 1239, 1240, 1241, 1242

8. On the switch or in the CMS: ACD Administration: VDN Assignments, assign a vector to each VDN. A VDN can point to only one vector. However, a vector can have more than one VDN pointing to it.

The following table illustrates VDN/vector assignments.

VDN/vector assignments

VDN	Vector
6543	1 (Sales)
6432	2 (Service)
6321	3 (Spanish)
6210	4 (Claims)

9. On the switch or in the CMS: ACD Administration: Vector Contents, write your vectors. See [Non-EAS Worksheet #4: Vector design](#) on page 688.

Your vectors should match your contact center objectives. To meet these objectives, you must make a number of relevant decisions (for example, you may decide how soon you want to enlarge an agent pool or what kind of treatment the caller should receive). If your VDN and vector reports do not satisfy your contact center objectives, you must consider your alternatives (for example, you may deem it necessary to train

agents or to increase the amount of time elapsed from when a call queues to one split and then to another split).

The following lists indicate the actions produced by two different vectors:

Actions Produced by Vector #1:

a. Tell the caller to select one of the following prompts:

- 1 = Sales
- 2 = Service
- 3 = Spanish
- 4 = Claims
- Nothing or 0 = Service

b. Queue the call.

c. Provide an announcement to the caller.

10. Actions Produced by Vector #2:

a. Queue the call to the correct service at a medium priority.

b. If no agents are available, provide a message and then play music.

c. If the call is not answered within 10 seconds, provide a second message and then play music.

d. If the call is not answered within 7 more seconds, queue the call to the Service split.

e. If the call is not answered within 7 more seconds, queue the call to the Spanish split at a high priority.

Note:

A **check split** command queues the call to up to three splits if the conditions are met. If the conditions are not met, the **check split** command may not get read again (if the vector step in which it appears is not executed again).

11. In the CMS: Dictionary, assign names to the splits, VDNs, and vectors.

12. Once your system is up and operational, you will need to monitor it to ensure you are meeting your contact center objectives. The call management system can be used to monitor many of your objectives. Some objectives will need to be monitored and have adjustments made in real time. For example, if the number of calls waiting, average speed of answer, or percent answered within a service level is not meeting your objectives, you might want to immediately move some agents, direct calls to another vector, or look-ahead interflow some calls. Other items such as agent occupancy and percent all trunks busy may only need to be monitored daily to look for trends.

Non-EAS Worksheet #1: Contact center objectives

[illegible]

Non-EAS Worksheet #2: Current split operation

Split _____		
Primary Backup _____	Secondary Backup _____	Tertiary Backup _____
List your customer/caller needs and your agent knowledge levels for this split.		
1. _____		
2. _____		
3. _____		
4. _____		
5. _____		
6. _____		
Split _____		
Primary Backup _____	Secondary Backup _____	Tertiary Backup _____
List your customer/caller needs and your agent knowledge levels for this split.		
1. _____		
2. _____		
3. _____		
4. _____		

Setting up a contact center

5. _____

6. _____

Non-EAS Worksheet #3: Customer needs

[illegible]

Non-EAS Worksheet #4: Vector design

Vector #	Name:	Description:
Assigned VDNs:		
Assigned Trunk Groups:		
1.		
2.		
3.		
4.		
5.		
6.		
7.		
8.		
9.		
10.		
11.		
12.		
13.		
14.		
15.		
16.		
17.		
18.		
19.		
20.		

21.
22.
23.
24.
25.
26.
27.
28.
29.
30.
31.
32.

EAS Worksheet #1: Contact center objectives

What are my contact center objectives?

EAS Worksheet #2: Current split operation

Split: _____			
Primary backup: _____	Secondary backup: _____	Tertiary backup: _____	
Customer/caller needs and agent skill sets in this split: 1. _____ 2. _____ 3. _____ 4. _____ 5. _____ 6. _____	Is agent expertise available? (y/n) _____ _____ _____ _____ _____ _____	Do you want to separate skill sets with EAS? (y/n) _____ _____ _____ _____ _____ _____	
Split: _____			
Primary backup: _____	Secondary backup: _____	Tertiary backup: _____	
Customer/caller needs and agent skill sets in this split: 1. _____ 2. _____ 3. _____ 4. _____ 5. _____ 6. _____	Is agent expertise available? (y/n) _____ _____ _____ _____ _____ _____	Do you want to separate skill set with EAS? (y/n) _____ _____ _____ _____ _____ _____	

EAS Worksheet #3: Customer needs

Contact center needs	Split name	Split number (hunt group)	Call distribution	VDN

EAS Worksheet #4: Individual Agent Skills

[illegible]

1. Class of restriction

EAS Worksheet #5: Agent Skills

Agent Name	Login ID	1st skill	2nd skill	3rd skill	4th skill	COR ¹

1. Class of restriction

EAS Worksheet #6: VDN Skill Preferences

[illegible]

1. Class of restriction

EAS Worksheet #7: Vector Design

Vector #	Name:	Description:
Assigned VDNs:		
Assigned Trunk Groups :		
1.		
2.		
3.		
4.		
5.		
6		
7.		
8.		
9.		
10.		
11.		
12.		
13.		
14.		
15.		
16.		
17.		
18.		
19.		
20.		

21.
22.
23.
24.
25.
26.
27.
28.
29.
30.
31.
32.

■ ■ ■ ■ ■ ■

Appendix M: Converting a contact center to EAS

The procedures in this Appendix provide guidelines for upgrading a contact center from a non-EAS ACD environment to an EAS ACD environment. The primary activities involved in this conversion are:

- [Step 1: Pre-EAS cutover administration for the system](#) on page 699
- [Step 2: Pre-EAS cutover administration for the CMS on page 704](#)
- [Step 3: Pre-EAS cutover administration for AUDIX](#) on page 704
- [Step 4: Pre-EAS cutover administration for ASAI on page 704](#)
- [Step 5: EAS cutover](#) on page 704

Before the transition to EAS takes place, decisions must be made concerning:

- Which area of the current dial plan is to be used for EAS agent login IDs. EAS agent login IDs cannot conflict with already defined extension numbers (for example, an EAS agent login ID cannot be the same as a station extension number).
- Whether the current incoming call routing through VDNs and vectors will remain the same after the EAS upgrade, or whether new VDNs and/or vectors are required.
- How incoming call traffic is to be handled during EAS cutover.

Once these decisions are made, the pre-EAS cutover administration activities can be started in preparation for the conversion of the contact center to EAS.

Note:

Even though EAS administration changes are being made, non-EAS ACD call handling and agent operations are unaffected. When the cutover to EAS is completed, all non-EAS ACD call handling and agent operations will cease.

Step 1: Pre-EAS cutover administration for the system

Perform the following activities to prepare the DEFINITY for the cutover to EAS:

1. At administration terminal display the System-Parameters Customer-Options form and verify that the ACD, Expert Agent Selection, and Vectoring (Basic) fields are set to y. If you will be using the increased capacities of EAS-PHD, verify that this option is set to y.

Converting a contact center to EAS

2. If you haven't already done so, display the Feature Access Code form and administer the ACD Agent Feature Access Codes (for example, "Login," "Logout," and "Auto-In") as required for agent operations.
3. Using the CDR System Parameters form, administer whether the EAS login ID, or the terminal extension where the EAS agent is logged in, should appear on CDR reports by setting the Agent Login ID - Record field to y or n. This field affects the CDR tracking for incoming calls only; outgoing calls made by a logged-in EAS agent are always recorded by CDR using the agent's login ID.
4. If new VDNs are desired for the EAS environment, using the VDN administration form, administer the VDN Skills and other VDN information for the VDNs used to route calls to EAS agents. If the "1st," "2nd," and/or "3rd" skill options are to be used in the vectors or for Avaya CMS tracking associated with these VDNs, then administer the 1st Skill, 2nd Skill, and 3rd Skill fields as required.
5. If new vectors are desired for the EAS environment, using the Vector administration form, administer the vectors associated with the VDNs added in the previous step. As part of the EAS feature, the "1st," "2nd," or "3rd" skill options may be used in the vector step fields where a skill hunt group is entered (rather than entering an absolute skill hunt group number). Refer to [Expert Agent Selection](#) on page 407 for more information concerning vector programming for the EAS feature.
6. If new skill hunt groups are required, using the Hunt Group administration form, administer the desired skill hunt groups.

Note:

Entering a **y** in the Skills field automatically causes the ACD and Vector fields to be set to y. With EAS optioned, it is not possible to administer members for a skill hunt group.

7. If coverage paths are to be administered for EAS agents, using the Coverage Path administration form, set up the coverage paths to be assigned to EAS agent login IDs.

Note:

There is a difference between coverage treatment for an EAS "Direct Agent" call (where both the calling party and called login ID have the Direct Agent Calling COR option set to y), and an EAS "personal" call (where either the calling party or called login ID does not have the Direct Agent Calling COR option set to y).

Note:

A Direct Agent call is routed to an EAS agent as an ACD-type call, and therefore its coverage behavior is considerably different from the coverage for a normal station call. For example, if an EAS agent is not available for an ACD call when a Direct Agent call is made to that agent, the Direct Agent call is queued to the Direct Agent Skill administered on the Agent Login ID form (after initiating a ring-ping and then fluttering the active work-mode button at the agent's terminal). On the other hand, a personal call to an EAS agent is not an ACD-type call, and its coverage behavior is similar to the coverage treatment for a call to a station extension. For example, a personal call to an EAS agent who is busy on any call appearance will result in the call being sent to an idle call appearance at that agent's terminal.

Depending on the type of coverage criteria desired for Direct Agent and personal calls to EAS login IDs, administer the desired coverage path criteria as follows:

- To provide coverage for a non-ACD "personal" call to an EAS login ID when the agent is logged in and active on any call appearance, set the **Active** coverage criteria to y. The **Active** coverage criteria does not apply for a Direct Agent call to an EAS login ID.
 - To provide coverage for calls to an EAS login ID when the agent is logged out, set the **Busy** coverage criteria to y. Busy coverage will also be applied to a logged-in EAS agent when either of the following conditions occur:
 - A Direct Agent call is made to the EAS agent and there are no available queue slots in the agent's first skill hunt group;
 - A personal call is made to an EAS agent and the agent's station has no idle call appearances.
 - To provide coverage for calls to an EAS login ID when the agent is logged in but does not answer after a certain number of ring cycles, set the **Don't Answer** coverage criteria to y, and enter a number for the desired ring time-out in the **Number of Rings** field.
 - To provide immediate coverage for calls to an EAS login ID whether the agent is logged in or logged out, set the **All** coverage criteria to y.
 - To provide coverage for calls to EAS login IDs when the call is to a logged-in agent who has activated the **Send All Calls** or **Go To Cover** features, set the **DND/SAC/Go to Cover** coverage criteria to y.
8. Up to three coverage paths for different types of call coverage criteria may be linked together by administering the **Next Path Number** field on the **Coverage Path** form. If the criteria for the first coverage path are not met, then the criteria for the second linked coverage path are checked by the system, and so on. This can be used to provide different coverage paths for calls to an EAS login ID when the associated agent is logged in or logged out.

Note:

If a call to a logged-in EAS login ID is a “personal” call and coverage goes into effect, the redirected call maintains a “simulated bridged appearance” at that agent’s terminal. The agent may still answer the call after redirection takes place by going off-hook on this line appearance. However, if a call to a logged-in EAS login ID is a Direct Agent call, the redirected call does not maintain a simulated bridged appearance at the agent’s terminal. The agent may not then answer the call after redirection takes place.

Note:

If the Redirection on No Answer (RONA) feature is enabled for skill hunt groups, set the ring time-out interval for the RONA feature such that it does not conflict with the coverage ring time-out criteria.

9. If coverage paths are administered for EAS login IDs, using the Feature-Related System Parameters form, set the Coverage - Subsequent Redirection No Answer Interval field to the desired ring time-out interval for calls routed to administered coverage points.

Note:

EAS login IDs may be administered as coverage points for a coverage path, and this administered coverage no-answer interval applies to Direct Agent or “personal” calls made to these coverage points as well.

10. Using the COR administration form, set the Direct Agent Calling field to y for any COR to be assigned to a trunk or station user who may initiate a Direct Agent call to an EAS agent, or to be assigned to an EAS login ID that may receive Direct Agent calls.
11. If EAS agent login ID passwords are to be administered, using the Feature-Related System Parameters form, set the Minimum Agent-LoginID Password Length field to the desired number of minimum password digits (0 to 9) which must be specified when agent passwords are administered via the Agent Login ID form. The total number of digits which may be assigned to a password is between the value of the Minimum Agent-Login ID Password Length field and 9 digits. If a password is administered for an agent, this password must be entered in addition to the agent’s login ID to log in.
12. Using the Agent Login ID form, add the desired EAS login IDs to be associated with human agents, AUDIX ports, and/or AAS (Auto-Available Split) VRU ports. For human agents, the following fields are administered:
 - Name
 - COR
 - Coverage Path (optional)
 - Security Code (optional for Demand Print feature)
 - LWC Reception (optional)

- AUDIX Name (for G3r only, if the LWC Reception field is set to audix, or if administered coverage path for the agent has an AUDIX coverage point)
 - Password (optional)
 - Skills - Skill Level (for at least one skill)
13. For AUDIX and AAS VRU port extensions, when these ports are associated with ACD-type hunt groups, these extensions must be associated with skill hunt groups as part of the cutover to EAS. Additionally, for skill hunt groups used for AAS ports, the AAS field must be set to y for these hunt groups before any EAS AAS agents can be administered.

Note:

AUDIX hunt groups do not need to be vector-controlled. This allows for ASAI monitoring of the skill hunt group.

If AUDIX port extensions (such as for the Embedded AUDIX product) are not associated with an ACD hunt group, no administration is required for these ports as part of the cutover to EAS. For the AUDIX and/or AAS ports that are associated with ACD hunt groups, add EAS agent login IDs for these ports, where only the following fields need to be administered:

- Name
 - COR
 - Coverage path (optional)
 - AUDIX (set to y for AUDIX ports)
 - AAS (set to y for AAS VRU ports)
 - Port Extension (set to the AUDIX or AAS port extension administered in the non-EAS environment)
 - Skills - Skill Level (where a single skill is entered for the skill hunt group associated with the AUDIX or AAS station ports)
14. Using the Station Administration form, administer any stations to be used by EAS agents and the desired work-mode buttons for each station (if not already administered).

Note:

If stations are already administered with work-mode buttons associated with splits, it is not necessary to readminister these buttons for EAS. If new work-mode buttons are added to a station, it is not possible to enter data in the Grp field after EAS is enabled except for the AUX work-mode button (which may be administered with a hunt group number if the entered hunt group is a non-ACD hunt group).

Note:

Also, if more than one set of work-mode buttons is administered on a station set, these buttons may be left as is until after the cutover to EAS. After the cutover, it is desirable to remove the extra sets of work-mode buttons since EAS requires only one set of work-mode buttons for agent operations.

Step 2: Pre-EAS cutover administration for the CMS

See *Avaya CMS Administration*, 585-215-515 for the procedures used to configure the CMS for the EAS feature. This document is also helpful in providing overall planning strategies for implementing contact center operations.

Step 3: Pre-EAS cutover administration for AUDIX

If EAS agents' login IDs are administered with coverage paths that route to an AUDIX coverage point, the login IDs for these agents must be administered via the AUDIX console so that the caller will hear the appropriate AUDIX voice responses for calls made to EAS login IDs.

Note:

On the G3r, the AUDIX Name field on the Agent Login ID form must be set to the correct AUDIX name to provide proper AUDIX coverage of calls made to EAS agents, or to leave LWC messages for EAS agents if LWC reception to AUDIX is set up for the agents' login IDs.

Refer to [Step 1: Pre-EAS cutover administration for the system](#) for information on how to administer EAS login IDs for AUDIX port extensions on the DEFINITY.

Step 4: Pre-EAS cutover administration for ASAI

With ASAI-based applications for contact center operations, the cutover to EAS may necessitate an upgrade of the ASAI-related application software on the adjunct. With OCM (Outgoing Call Management), the upgrade to EAS requires that specialized vectors be administered to handle the launching of calls from VDNs (as opposed to the non-EAS environment where OCM calls are launched from splits). For more information on the procedures to convert an ASAI application for EAS, see *Avaya MultiVantage CallVisor ASAI Technical Reference*, 555-230-221.

Step 5: EAS cutover

After all pre-EAS activities have been completed, the EAS feature may be activated. Just prior to the EAS cutover, a tape backup of the current DEFINITY translations should be made for possible recovery purposes in case some difficulty is encountered during cutover. In particular, since the transition to EAS results in the removal of all ACD hunt group members, the pre-EAS tape backup could save a considerable amount of time in restoring non-EAS hunt group translations if the cutover to EAS is not completed.

It is recommended that incoming ACD call traffic be blocked to prevent the queuing of new ACD calls to existing splits during the cutover from the non-EAS to EAS environment. Blocking of new incoming calls can be accomplished by:

- Busying out the appropriate trunk groups
and/or
- Using the Vectoring form and setting the first vector step for actively used incoming call vectors to the “busy” step.

Once this is accomplished, perform these activities:

1. Make sure all EAS agents are logged out of all splits. If CMS or BCMS is operational, the CMS real-time reports for splits or the **mon bcms split** command can be used to identify the terminals where agents may still be logged in.
2. Issue the **busy mis** command at the administration terminal to busy-out the CMS link.
3. Issue the **busy link n** command at the administration terminal to busy-out any AUDIX switch-to-adjunct links.
4. Issue the **busy station x** command at the administration terminal to busy-out any AAS ports.
5. Using the Hunt Group form, convert any ACD splits to skill hunt groups by setting the Skilled field to **y** for these hunt groups.
6. Using the Feature-Related System Parameters form, set the Expert Agent Selection (EAS) Enabled field to **y**, and set the Adjunct CMS Release field.
7. Release the link to the CMS (if installed) by entering the **release mis** command at the administration terminal.
8. Inform the on-site agents that they can log into their terminals using the EAS login procedure and become available to receive ACD calls using the AUTO-IN or MANUAL-IN work-mode operations.
9. Using the Vectoring form, restore any vector steps temporarily changed to “busy” (to block incoming calls) to their previous vector step format.
10. Using the Trunk Group Administration form, if the routing for incoming trunks is to be changed to EAS-related VDNs, administer the Incoming Destination field for any trunk groups to the appropriate VDN extension number.
11. Issue the **release station x** command at the administration terminal to release any AAS ports (where the EAS login ID associated with each AAS port will be automatically logged in).
12. Issue the **release link n** command at the administration terminal to release any adjunct AUDIX links (where the adjunct will cause the associated ports to be logged in).

At this point, the cutover to EAS is complete. It is recommended that a backup of the switch translations be performed as soon as possible after the cutover to preserve the EAS-related administration changes. Also, if agent stations are administered with multiple

Converting a contact center to EAS

sets of work-mode buttons, it is recommended that all but one set of work-mode buttons be removed from these stations. Also, multiple queue lights are required for EAS.

Appendix N: Feature Availability

This appendix lists available vectoring enhancements. For a detailed description of any item see the referenced section of this guide.

Vectoring (G3V4 Enhanced) provides the following additional capabilities:

- The ability to specify a priority level with the oldest-call-wait conditional on the *check* and *goto* commands. For more information about these commands, see [Appendix A: Call Vectoring commands](#) on page 467.
- The use of enhanced comparators (<>, >=, and <=) with the *goto* and *route-to* commands as well as use of “none” as an entry for digits checking, and “active” or “latest” VDN thresholds for indirect VDN references. See these commands in [Appendix A: Call Vectoring commands](#) on page 467.
- The use of the *interflow-qpos* conditional with the *goto* and *route-to* commands to achieve FIFO or FIFO-like call processing. See [Look-Ahead Interflow \(LAI\)](#) on page 247.
- The use of wildcards in digit strings for matching on collected digits and ANI or II-digits. See [Appendix A: Call Vectoring commands](#) on page 467.
- The use of Vector Routing Tables for matching on collected digits and ANI or II-digits. See [Vector Routing Tables](#) on page 232 or [ANI /II-digits routing and Caller Information Forwarding \(CINFO\)](#) on page 179.
- Multiple Audio/Music Sources for use with the *wait-time* command. See, [Rolling Average Speed of Answer \(ASA\)](#) on page 173.

Vectoring (G3V4 Advanced Routing) provides the following additional capabilities (Vectoring [G3V4 Enhanced] must also be enabled):

- Rolling Average Speed of Answer (ASA) Routing. See [Rolling Average Speed of Answer \(ASA\)](#) on page 173.
- Expected Wait Time (EWT) Routing. See [Expected Wait Time \(EWT\)](#) on page 166.
- VDN Calls Routing. See [VDN Calls](#) on page 177.

Vectoring (ANI/II-Digits Routing) provides the following additional capabilities (Vectoring [G3V4 Enhanced] must also be enabled):

- ANI Routing. See [ANI /II-digits routing and Caller Information Forwarding \(CINFO\)](#) on page 179.
- II-Digits Routing. See [II-digits routing](#) on page 184.

Feature Availability

Vectoring (CINFO) provides the following additional capabilities (Call Prompting must also be enabled):

- The ability to collect ced and cdpd from the network. See [Caller Information Forwarding](#) on page 191.

Vectoring (Best Service Routing) automatically compares splits or skills in ACD environments to find the one that can provide the best service to each caller. BSR can operate at a single site, or it can be used with Look-Ahead Interflow to integrate a network of geographically distributed locations into a virtual contact center. See [Best Service Routing \(BSR\)](#) on page 271.

Vectoring (Best Service Routing) without LAI enabled (single-site BSR) provides the following capabilities:

- The use of the *consider split/skill* command.
- The use of the *best* keyword with *queue-to*, *check*, and *goto* commands.
- The *wait-improved* conditional for *check* and *goto* commands. For a call that has already been queued, the *wait-improved* conditional gives you the ability to make any subsequent queuing conditional on the improvement in EWT as compared to the call's EWT in its current queue.

Vectoring (Best Service Routing) with LAI enabled (multi-site BSR) provides the following capabilities:

- The use of the *consider split/skill* and *consider location* commands.
- The use of the *reply-best* command to return data to the sending switch in response to a status poll.
- The use of the *best* keyword with *queue-to*, *check*, and *goto* commands.
- The *wait-improved* conditional for *check* and *goto* commands. For a call that has already been queued, the *wait-improved* conditional gives you the ability to make any subsequent queuing conditional on the improvement in EWT as compared to the call's EWT in its current queue.

Enhanced information forwarding provides the transport of existing call information and new call information such as Universal Call ID and Best Service Routing. See [Information Forwarding](#) on page 197.

Timed ACW provides the ability to assign a timed ACW interval to a VDN. See [Vector Directory Number](#) on page 51.



Appendix O: Improving performance

This appendix provides recommendations on how to write vectors that promote favorable performance practices. Improved performance depends on the following basic principles:

- Minimize the number of vector steps to process a call.
- Avoid vector steps which have a substantial probability of failure, such as:
 - Calls made outside of business hours
 - Queues to groups with less than desirable resources or characteristics.

The most wasteful use of processing resources is frequently caused by inefficient looping. For example, performance could be compromised when a vector loops through steps too often. This is especially true with long queue times.

Some examples with looping are discussed and recommendations are given on how to maximize performance. They are:

- Audible Feedback
- Look-Ahead Interflow
- Check

Examples other than looping are also discussed. They are:

- After Business Hours
- Look-Ahead Interflow

All looping examples in this appendix use only loops within a single vector. It is important to also be aware of looping to other vectors through the use of vector chaining. The same principles can be extrapolated from the looping examples. Creating a flow diagram is often helpful for identifying looping errors.

In addition to the example vectors, tables rating the relative performance costs of specific vector commands are also included.

Note:

Remember to test vectors for performance in addition to call flow.

Looping examples

Audible feedback

Recommendation: Evaluate the length of the wait period between repetitions of an announcement and increase the length, if possible. For optimum performance, add a second announcement after the initial announcement and repeat the second announcement less often.

The first example repeats the “All representative are busy. Please hold.” announcement every 10 seconds as long as the call is in queue.

Example: 10-second announcement interval

```
1. queue-to split 1
2. announcement 2770 ("All representatives are busy. Please hold.")
3. wait-time 10 seconds hearing music
4. goto step 2 if unconditionally
5. stop
```

The next example repeats the announcement only every 60 seconds, thus improving performance.

Example: 60-second announcement interval

```
1. queue-to split 1
2. announcement 2770 ("All representatives are busy. Please hold.")
3. wait-time 60 seconds hearing music
4. goto step 2 if unconditionally
5. stop
```

The next example adds a second announcement, “All representatives are still busy. Please hold.” in addition to the initial announcement and repeats the second announcement less often (every 120 seconds), thus improving performance again.

Example: Follow-up announcement

```
1. queue-to split 1
2. announcement 2770 ("All representatives are busy. Please hold.")
3. wait-time 120 seconds hearing music
4. announcement 2771 ("All representatives are still busy. Please
    continue to hold.")
5. goto step 3 if unconditionally
6. stop
```

The following table compares the relative processing cost of the three examples by looking at the approximate number of vector steps executed while processing the call. Assumption is that the first announcement is 3 seconds long and the second announcement is 4 seconds long.

Approximate number of vector steps executed for the audible feedback examples

Initial conditions	Example: 10-second announcement interval	Example: 60-second announcement interval	Example: Follow-up announcement
An agent is available in split 1	1	1	1
Queueing time of 5 minutes	70	15	9

When a call is queued for 5 minutes, the number of vector steps drops dramatically when the amount of time between announcements is increased, and drops even more when a second announcement is added, and the amount of time between announcements is increased again. When an agent in split 1 is immediately available to answer the call, there is no difference in the number of vector steps for the three examples.

Look-Ahead interflow

Recommendation 1: Use the **interflow-qpos** conditional to achieve FIFO (first in, first out) or near-FIFO call processing. For more information, see [Look-Ahead Interflow \(LAI\)](#) on page 247.

Recommendation 2: If you do not have the **interflow-qpos** conditional, add a wait period between successive look-ahead interflow attempts and make the waiting period as long as feasible.

The following example continuously attempts a look-ahead interflow as long as the call is in queue or until a look-ahead attempt succeeds.

Example: continuous look ahead - no delay

```
1. queue-to split 1 pri l
2. announcement 3000
3. wait-time 20 seconds hearing music
4. route-to number 9303555555 cov n if unconditionally
5. goto step 4 if unconditionally
```

The example shown above adds a delay so that the look-ahead interflow attempt occurs only every 10 seconds.

Improving performance

Example: look ahead with 10 second delay

```
1. queue-to split 1 pri l
2. announcement 3000
3. wait-time 20 seconds hearing music
4. route-to number 93035555555 cov n if unconditionally
5. wait-time 10 seconds hearing music
6. goto step 4 if unconditionally
```

The next example increases performance even more by increasing the delay between look-ahead interflow attempts to 30 seconds.

Example: look ahead with 30 second delay

```
1. queue-to split 1 pri l
2. announcement 3000
3. wait-time 20 seconds hearing music
4. route-to number 93035555555 cov n if unconditionally
5. wait-time 30 seconds hearing music
6. goto step 4 if unconditionally
```

The following table compares the relative processing cost of the three examples by looking at the approximate number of vector steps executed while processing the call. Assumption is that the announcement is 5 seconds long.

Approximate number of vector steps executed for look-ahead interflow examples

Initial conditions	Example: look ahead with no delay	Example: look ahead with 10 second delay	Example: look ahead with 30 second delay
An agent is available in split 1	1	1	1
Queueing time of 5 minutes	up to 1,000	85	30

Check

Recommendation: When using check commands to queue a call to backup splits, ensure that an adequate amount of time has elapsed before checking the backup splits again.

Note:

With the Expected Time Wait Time feature, the style of programming used in this example is not optimal. The best approach is to use the Expected Time Wait feature to locate the most appropriate split for the call and queue it there.

The next example checks backup splits continuously as long as the call is in queue.

Example: Continuous check

```
1. queue-to split 1 pri h
2. announcement 3000
3. wait-time 10 seconds hearing music
4. check split 21 pri m if available-agents > 0
5. check split 22 pri m if available-agents > 0
6. check split 23 pri m if available-agents > 0
7. check split 24 pri m if available-agents > 0
8. check split 25 pri m if available-agents > 0
9. goto step 4 if unconditionally
```

The next example adds a delay of 10 seconds to ensure that some time has elapsed before checking the backup splits again.

Example: Check with 10 second delay

```
1. queue-to split 1 pri h
2. announcement 3000
3. wait-time 30 seconds hearing music
4. check split 21 pri m if available-agents > 0
5. check split 22 pri m if available-agents > 0
6. check split 23 pri m if available-agents > 0
7. check split 24 pri m if available-agents > 0
8. check split 25 pri m if available-agents > 0
9. wait-time 10 seconds hearing music
10. goto step 4 if unconditionally
```

Since the agent availability status may not be likely to change every 10 seconds, it may make sense to increase the wait time to 30 seconds, as shown in the example in The following example.

Example: Check with 30 second delay

```
1. queue-to split 1 pri h
2. announcement 3000
3. wait-time 30 seconds hearing music
4. check split 21 pri m if available-agents > 0
5. check split 22 pri m if available-agents > 0
6. check split 23 pri m if available-agents > 0
7. check split 24 pri m if available-agents > 0
8. check split 25 pri m if available-agents > 0
9. wait-time 30 seconds hearing music
10. goto step 4 if unconditionally
```

Improving performance

The following table compares the relative processing cost of the three examples by looking at the approximate number of vector steps executed while processing the call. Assumption is that the announcement is 5 seconds long.

Approximate number of vector steps executed for check examples

Initial conditions	Example: continuous check	Example: check with 10- second delay	Example: Check with 30-second delay
An agent is available in split 1	1	1	1
Queueing time of 5 minutes	up to 1,000	190	65

When a call is queued for 5 minutes, the number of vector steps drops dramatically when a delay is added before checking the backup splits again, and drops even more when the length of the delay is increased again. When an agent in split 1 is immediately available to answer the call, there is no difference in the number of vector steps for the three examples.

Other examples

After business hours

Recommendation: Test to see if the destination resources are available (such as during business hours) before queuing.

The following example queues calls to a hunt group regardless of the time of the call. When the call is made after business hours, the announcement is repeated until the caller hangs up.

Unconditional queuing to hunt group

```
1. queue-to split 1
2. announcement 5000
   ("All agents are busy. Please hold.")
3. wait-time 120 seconds hearing music
4. announcement 5001
   ("All agents are still busy. Please continue to
   hold.")
5. goto step 3 if unconditionally
```

The next example tests for business hours before queuing the call. If the call is made after business hours, an announcement informs the caller of the business hours and the call is terminated.

Queue to hunt group with time-of-day conditional

```

1. goto step 7 if time-of-day is all 17:00 to all 8:00
2. queue-to split 1
3. announcement 5000
                                     ("All agents are busy. Please hold.")
4. wait-time 120 seconds hearing music
5. announcement 5001
                                     ("All agents are still busy. Please
                                     continue to hold.")
6. goto step 4 if unconditionally
7. disconnect after announcement 5001
                                     ("Business hours are 8:00 AM to 5:00
PM,
                                     Please call back then.")

```

In the first example, unnecessary processing occurs when a call is queued after business hours and the call is terminated only when the caller hangs up. As shown in the second example, it is more economical to test for business hours before queuing a call.

Look-ahead interflows

Recommendation: When using a look-ahead interflow, first test to see if the receiving office is open for business.

The scenario is a sending switch in Los Angeles, with office hours from 8:00 AM to 5:00PM (8:00-17:00) PST and the receiving switch is in New York, with office hours from 8:00 AM to 5:00PM EST (5:00-14:00 PST). There is a three hour difference between the two switches

The following example routes calls to the New York switch. If there are no agents available at the Los Angeles switch, it is possible for calls to be interflowed during hours that the agents in New York are not available, thus doing unnecessary processing.

Unconditional Look-ahead interflow

```

1. queue-to split 1
2. route-to number 9914555555 cov n if unconditionally
3. announcement 2770 ("All agents are busy. Please hold.")
4. wait-time 120 seconds hearing music
5. goto step 3 if unconditionally
6. stop

```

The next example tests first to see if the New York switch is open before requesting a queue to the New York switch, thus avoiding unnecessary processing.

Look-ahead interflow with time-of-day condition

```
1. queue-to split 1
2. goto step 4 if time-of-day is all 14:00 to all 05:00
3. route-to number 9914555555 cov n if unconditionally
4. announcement 2770 ("All agents are busy.
   Please hold.")
5. wait-time 120 seconds hearing music
6. goto step 4 if unconditionally
7. stop
```

The next example can be used if you have Advanced Routing optioned. In this case, the Expected Wait Time feature may be used to determine whether it is worthwhile placing a look-ahead interflow call attempt.

Look-ahead interflow with expected wait time and time-of-day conditions

```
1. queue-to split 1
2. goto step 5 if expected-wait for call < 30
3. goto step 5 if time-of-day is all 14:00 to all 05:00
4. route-to number 9914555555 cov n if unconditionally
5. announcement 2770 ("All agents are busy.
   Please hold.")
6. wait-time 120 seconds hearing music
7. goto step 5 if unconditionally
8. stop
```

In the examples shown above, note that there is no reason to attempt an interflow if the call will be answered quickly at the main switch. Therefore, vector steps that do not facilitate rapid call response are avoided.

Glossary

AAR	See Automatic Alternate Routing (AAR) .
abandoned call	An incoming call in which the caller hangs up before the call is answered.
ACD	See Automatic Call Distribution (ACD) .
ACD agent	See agent .
ACW	See after-call work (ACW) mode .
ACD	See Automatic Call Distribution (ACD) . ACD also refers to a work state in which an agent is on an ACD call.
ACD work mode	See work mode .
active-notification association	A link that is initiated by an adjunct, allowing it to receive event reports for a specific switch entity, such as an outgoing call.
active-notification call	A call for which event reports are sent over an active-notification association (communication channel) to the adjunct. Sometimes referred to as a monitored call.
active notification domain	VDN or ACD split extension for which event notification has been requested.
adjunct	A processor that does one or more tasks for another processor and that is optional in the configuration of the other processor. See also application .
adjunct-controlled split	An ACD split that is administered to be under adjunct control. Agents logged into such splits must do all telephony work, ACD login/ logout, and changes of work mode through the adjunct (except for auto-available adjunct-controlled splits, whose agents may not log in/out or change work mode).
adjunct-monitored call	An adjunct-controlled call, active-notification call, or call that provides event reporting over a domain-control association.
Adjunct-Switch Application Interface (ASAI)	A recommendation for interfacing adjuncts and communications systems, based on the CCITT Q.932 specification for layer 3.
adjusted EWT	Expected Wait Time (EWT) plus a user adjustment set by a consider command.

after-call work (ACW) mode

after-call work (ACW) mode	A mode in which agents are unavailable to receive ACD calls. Agents enter the ACW mode to perform ACD-related activities such as filling out a form after an ACD call.
AG	ASAI Gateway
agent	A person who receives calls directed to a split. A member of an ACD hunt group or ACD split. Also called an ACD agent.
agent report	A report that provides historical traffic information for internally measured agents.
agent selection method	The method the switch uses to select an agent in a hunt group when more than one agent is available to receive the next call: UCD-MIA, UCD-LOA, EAD-MIA, or EAD-LOA
ANI	See Automatic Number Identification (ANI) .
application	An adjunct that requests and receives ASAI services or capabilities. One or more applications can reside on a single adjunct. However, the switch cannot distinguish among several applications residing on the same adjunct and treats the adjunct, and all resident applications, as a single application. The terms application and adjunct are used interchangeably throughout this document. In Best Service Routing, an application is any specific implementation of multi-site Best Service Routing.
application plan	Used only in multi-site BSR applications, the application plan identifies the remote switches that may be compared in consider series. The plan also specifies the information used to contact each switch and to interflow calls to it.
ARS	See Automatic Route Selection (ARS) .
ASAI	See Adjunct-Switch Application Interface (ASAI)
auto-in trunk group	Trunk group for which the CO processes all of the digits for an incoming call. When a CO seizes a trunk from an auto-in trunk group, the switch automatically connects the trunk to the destination — typically an ACD split where, if no agents are available, the call goes into a queue in which callers are answered in the order in which they arrive.
Auto-In Work mode	One of four agent work modes: the mode in which an agent is ready to process another call as soon as the current call is completed.
Automatic Alternate Routing (AAR)	A feature that routes calls to other than the first-choice route when facilities are unavailable.

Automatic Call Distribution (ACD)	A feature that answers calls, and then, depending on administered instructions, delivers messages appropriate for the caller and routes the call to an agent when one becomes available.
Automatic Call Distribution (ACD) split	A method of routing calls of a similar type among agents in a contact center. Also, a group of extensions that are staffed by agents trained to handle a certain type of incoming call.
Automatic Number Identification (ANI)	Representation of the calling number, for display or for further use to access information about the caller. Available with Signaling System 7.
Automatic Route Selection (ARS)	A feature that allows the system to automatically choose the least-cost way to send a toll call.
Aux-Work mode	A work mode in which agents are unavailable to receive ACD calls. Agents enter Aux-Work mode when involved in non-ACD activities such as taking a break, going to lunch, or placing an outgoing call.
available agent strategy	Part of the Best Service Routing feature, the available agent strategy determines how BSR commands in a vector identify the best split or skill when several have available agents. The possible available agent strategies are: UCD-MIA, UCD-LOA, EAD-MIA, and EAD-LOA.
AWT	Average work time
BCMS	Basic Call Management System
best	The split, skill, or location that will provide the best service for a caller as determined by Best Service Routing.
Best Service Routing (BSR)	A DEFINITY feature, based on call vectoring, that routes ACD calls to the split, skill, or contact center best able to service each call. Best Service Routing can be used on a single switch, or it can be used to integrate resources across a network of DEFINITY Enterprise Communication Servers.
BSR	See Best Service Routing (BSR) .
CACR	Cancellation of Authorization Code Request
Call Management System (CMS)	An application, running on an adjunct processor, that collects information from an ACD unit. CMS enables customers to monitor and manage telemarketing centers by generating reports on the status of agents, splits, trunks, trunk groups, vectors, and VDNs, and enables customers to partially administer the ACD feature for a communications system.
call-reference value (CRV)	An identifier present in ISDN messages that associates a related sequence of messages. In ASAI, CRVs distinguish between associations.

call vector

call vector A set of up to 15 vector commands to be performed for an incoming or internal call.

call work code A number, up to 16 digits, entered by ACD agents to record the occurrence of customer-defined events (such as account codes, social security numbers, or phone numbers) on ACD calls.

CAS Centralized Attendant Service or Call Accounting System

cause value A value is returned in response to requests or in event reports when a denial or unexpected condition occurs. ASAI cause values fall into two coding standards: Coding Standard 0 includes any cause values that are part of AT&T and CCITT ISDN specifications; Coding standard 3 includes any other ASAI cause values. This document uses a notation for cause value where the coding standard for the cause is given first, then a slash, then the cause value. Example: CS0/100 is coding standard 0, cause value 100.

Class of Restriction (COR) A feature that allows up to 64 classes of call-origination and call-termination restrictions for telephone, telephone groups, data modules, and trunk groups. See also [Class of Service \(COS\)](#).

Class of Service (COS) A feature that uses a number to specify if voice-terminal users can activate the Automatic Callback, Call Forwarding All Calls, Data Privacy, or Priority Calling features. See also [Class of Restriction \(COR\)](#).

CMS Call Management System

consider series Consider commands are typically written in a set of two or more. This set of consider commands is called a consider series.

consider sequence A consider series plus a **queue-to best**, **check-best**, or **reply-best** step is called a consider sequence.

COR See [Class of Restriction \(COR\)](#).

COS See [Class of Service \(COS\)](#).

coverage answer group A group of up to eight telephones that ring simultaneously when a call is redirected to it by Call Coverage. Any one of the group can answer the call.

coverage call A call that is automatically redirected from the called party's extension to an alternate answering position when certain coverage criteria are met.

coverage path The order in which calls are redirected to alternate answering positions.

coverage point An extension or attendant group, VDN, or ACD split designated as an alternate answering position in a coverage path.

covering user	A person at a coverage point who answers a redirected call.
CWC	See call work code .
DAC	1. Dial access code or Direct Agent Calling
DCS	Distributed Communications System
DDC	Direct Department Calling
direct agent	A feature, accessed only via ASAI, that allows a call to be placed in a split queue but routed only to a specific agent in that split. The call receives normal ACD call treatment (for example, announcements) and is measured as an ACD call while ensuring that a particular agent answers.
distributed communications system (DCS)	A network configuration linking two or more communications systems in such a way that selected features appear to operate as if the network were one system.
DIVA	Data In/Voice Answer
DNIS	Dialed-Number Identification Service
domain	VDNs, ACD splits, and stations. The VDN domain is used for active-notification associations. The ACD-split domain is for active-notification associations and domain-control associations. The station domain is used for the domain-control associations.
domain-controlled split	A split for which Third_Party_Domain_Control request has been accepted. A domain-controlled split provides an event report for logout.
domain-controlled station	A station for which a Third_Party_Domain_Control request has been accepted. A domain-controlled station provides event reports for calls that are ringing, connected, or held at the station.
domain-controlled station on a call	A station that is active on a call, and which provides event reports over one or two domain-control associations.
ETN	Electronic tandem network
EWT	See expected wait time (EWT) .
expected wait time (EWT)	Prediction of how long a call will wait in queue before it is answered.

extension-in

extension-in	Extension-In (ExtIn) is the work state agents go into when they answer (receive) a non-ACD call. If the agent is in Manual-In or Auto-In and receives an extension-in call, it is recorded by CMS as an AUX-In call.
extension-out	The work state that agents go into when they place (originate) a non-ACD call.
external measurements	Those ACD measurements that are made by the External CMS adjunct.
extension	A number by which calls are routed through a communications system or, with a Uniform Dial Plan (UDP) or main-satellite dialing plan, through a private network.
FAC	Feature Access Code
hunt group	A group of extensions that are assigned the Station Hunting feature so that a call to a busy extension reroutes to an idle extension in the group. See also ACD work mode .
ICD	Inbound Call Director
ICDOS	International Customer-Dialed Operator Service
ICHT	Incoming call-handling table
ICI	Incoming call identifier
ICM	Inbound Call Management
interflow	To route an incoming call to an external switch without answering it at the origin switch.
intraflow	The ability for calls to redirect to other splits on the same PBX on a conditional or unconditional basis using call coverage busy, don't answer, or all criteria.
internal measurements	BCMS measurements that are made by the system. ACD measurements that are made external to the system (via External CMS) are referred to as external measurements.
LDN	Listed directory number
Manual-In work mode	One of four agent work modes: the mode in which an agent is ready to process another call manually. See Auto-In Work mode for a contrast.
message center	An answering service that supplies agents to and stores messages for later retrieval.
message center agent	A member of a message-center hunt group who takes and retrieves messages for voice-terminal users.

monitored call	See active-notification call .
OCM	Outbound Call Management
other split	The work state that indicates that an agent is currently active on another split's call, or in ACW for another split.
poll	See status poll .
poll suppression	A component of BSR intelligent polling that eliminates wasteful polling of remote locations which have returned poor adjusted EWTs.
polling, intelligent	An automatic feature of Best Service Routing that significantly reduces the number of status polls executed. When a remote location cannot be the best resource at a given moment in time, the intelligent polling feature temporarily suppresses polls to that location.
redirection criteria	Information administered for the coverage path of each telephone, that determines when an incoming call is redirected to coverage.
Redirection on No Answer	An optional feature that redirects an unanswered ringing ACD call after an administered number of rings. The call is then redirected back to the agent.
report scheduler	Software that is used in conjunction with the system printer to schedule the days of the week and time of day that the desired reports are to be printed.
split	See ACD work mode .
split condition	A condition whereby a caller is temporarily separated from a connection with an attendant. A split condition automatically occurs when the attendant, active on a call, presses the start button.
split number	The split's identity to the switch and BCMS.
split report	A report that provides historical traffic information for internally measured splits.
split (agent) status report	A report that provides real-time status and measurement data for internally measured agents and the split to which they are assigned.
staffed	Indicates that an agent position is logged in. A staffed agent functions in one of four work modes: Auto-In, Manual-In, ACW, or AUX-Work.
status poll	A call placed by a consider location vector command to obtain status data from a remote location in a multi-site BSR application.
stroke counts	A method used by ACD agents to record up to nine customer-defined events per call when CMS is active.

system report

system report	A report that provides historical traffic information for internally measured splits.
system-status report	A report that provides real-time status information for internally measured splits.
to control	An application can invoke Third Party Call Control capabilities using either an adjunct-control or domain-control association.
to monitor	An application can receive event reports on an active-notification, adjunct-control, or domain-control association.
UCD	Uniform call distribution
VDN	See vector directory number (VDN) .
vector directory number (VDN)	An extension that provides access to the Vectoring feature on the switch. Vectoring allows a customer to specify the treatment of incoming calls based on the dialed number.
vector-controlled split	A hunt group or ACD split administered with the vector field enabled. Access to such a split is possible only by dialing a VDN extension.
work mode	One of four states (Auto-In, Manual-In, ACW, AUX-Work) that an ACD agent can be in. Upon logging in, an agent enters AUX-Work mode. To become available to receive ACD calls, the agent enters Auto-In or Manual-In mode. To do work associated with a completed ACD call, an agent enters ACW mode.
work state	An ACD agent may be a member of up to three different splits. Each ACD agent continuously exhibits a work state for every split of which it is a member. Valid work states are Avail, Unstaffed, AUX-Work, ACW, ACD (answering an ACD call), ExtIn, ExtOut, and OtherSpl. An agent's work state for a particular split may change for a variety of reasons (example: when a call is answered or abandoned, or the agent changes work modes). The BCMS feature monitors work states and uses this information to provide BCMS reports.

Index

Symbols

.....	168
# sign	239, 509
dialed ahead digits	239
with digits	500
# symbol	
dial-ahead digits	239
# symbol with digits	500
* symbol	
dial-ahead digits	500
dialed ahead digits	239
with digits	500
* with digits	500

A

Abbreviated dialing lists	388
abbreviated dialing special characters	
route-to	536
ACD agent login ID	
form	440
adapting	
to a long wait.	27
to changing call traffic	27
adjunct routing	
considerations	208
function	207
hardware and software requirements	550
adjunct routing command	26, 62, 483
neutral vector command	250, 487
success/failure criteria	572
syntax	483
troubleshooting.	578
adjust-by	283
administering	
VDN skills	426
advanced vector routing	24
hardware and software requirements	549
overview.	163
after call work (ACW)	
buttons	422
agent login ID	
associated capabilities	441
form	440
agent selection	
adjust-by	283

agents	
available	48
definition	48
direct.	408
logical	408
optimal utilization	247
when available	36
when not available	36
ANI	
call types used in	181
in vector routing tables	181
internal transfer to VDN	181
string length	181
use in EAS agent calls	181
using in vector routing tables	183
vector example	182
wildcards used with	181
ANI/ii-digits	
hardware and software requirements.	550
ANI/ii-digits routing	24
requirements	33
announcement	376
announcement command	62, 376
classifications of	112
differences between G2 and R5	629
neutral vector command.	250, 491
success/failure criteria.	572
syntax	490
troubleshooting	579
announcements	490
answer supervision considerations	
adjunct routing	486
announcement	491
busy	492
check-backup.	496
collect digits	502
converse-on	510
disconnect	506, 516
goto step	506, 523
messaging	526
queue-to	530
route-to	533, 537
stop	542
wait-time	546

application		
example		
adjunct routing	75, 83	
ANI routing	76	
automated attendant	68	
basic call vectoring	67, 69, 73, 75, 76, 80, 83	
call prompting	68, 69, 75, 76, 83	
customer service center	67	
data in/voice answer	69	
data/message collection	69	
distributed call centers	73	
DIVA and data/message collection	69	
expected wait-time	76	
expert agent selection	80, 83	
help desk	75	
insurance agency/service agency	76	
look-ahead interflow	73	
resort reservation service	83	
rolling ASA	76	
VDN calls	76	
warranty service	80	
warranty service call center	82	
ASA		
definition	645	
rolling versus interval	173	
split calculation	174	
VDN calculation	175	
when to use	174	
ASAI		
link failure	484	
ASAI message		
contents of	211	
asterisk (*)	498	
*, use of	498	
AT&T In-Band Transfer and Connect.		
See Network Call Redirection		
Attendant	375, 393	
Attendant Call Waiting		
call waiting tones	423	
Attendant Vectoring		
announcement Command	377, 395	
busy Command	377, 395	
Command Set	333, 376	
disconnect Command	377, 396	
goto step Command	334, 381, 397	
goto vector Command	334, 382	
Hunt Group Queue	386	
Night Service	387	
queue-to att-d-group Command	378	
queue-to att-d-group command	378	
Attendant Vectoring, (continued)		
queue-to attendant Command	379	
queue-to attendant command	379	
queue-to hunt-group	379	
queue-to hunt-group Command	379	
Redirecting Calls to Attendant VDNs	386	
Restrictions	386	
route-to number Command	380, 396	
route-to number command	380	
stop Command	382, 397	
VDNs	387	
wait-time Command	377, 396	
wait-time command	377, 396	
Automatic Call Distribution (ACD)		
call handling preferences	422	
direct agent calling (DAC)	421	
automating tasks	29	
Auxiliary data	388	
Avaya National Customer Care Center Support Line	20	
average speed of answer		
definition	645	

B		
Basic Call Vectoring		
command set	110	
basic call vectoring	24	
considerations	111	
hardware and software requirements	548	
basic components of call vectoring	22	
BCMS	493	
description of	635	
function	635	
interactions with		
adjunct routing	489	
busy	493	
check-backup	497	
converse-on	515	
disconnect	517	
messaging	527	
queue-to	531	
route-to	541	
reports	646	
BCMS Split Report	646	
for security use	672	
VDN Real-Time Report	646	
VDN Summary Report	646	
standards	637	
for interpreting split flows	638	
for interpreting VDN flows	637	

benefits of call vectoring	27
Best Service Routing (BSR)	
benefits	272
call vectoring	
agent surplus situations	281
call surplus situations	281
commands for single-site BSR	279
commands	
check	494
consider	503
goto step	518
queue-to	528
reply-best	532
determining the best resource	281
hardware and software requirements	549
local treatment feature	321
multi-site	
administration procedures	318-320
Application Plan form	299
application plans	299
applications	297
examples	
with 2 switches	300
with 4 switches	308
4 switches, limited trunks	308
forms required	295
planning	317-318
requirements	
for networks	276
for switches	275
single-site	279
administration procedures	292-293
examples	
basic	283
user adjustments	288
forms required	279
planning	292
vectors	
tips for writing	330
blocking new incoming calls	705
branching	62
branching and programming	61
busy	62, 376, 492
difference between G2 and R5	630

busy command	
success/failure criteria	572
syntax	492
troubleshooting	579

C

call center setup	
EAS	
agent skills worksheet	694
current split operation worksheet	691
customer needs worksheet	692
individual agent skill worksheet	693
objectives worksheet	690
VDN skill preferences worksheet	695
key factors	679
non-EAS	
guidelines	681
steps	680
call flow method	46
adjunct routing	46
interflow	46
intraflow	46
look-ahead interflow	46
multiple split queuing	46
call flows	
answered and abandoned calls	636
busies and disconnects	637
classes of	636
converse-VRI calls	657
defining and interpreting	636
split inflows, outflows, and dequeues	638
types that are tracked	636
VDN inflows and outflows	637
vector inflows and outflows	637
call group setup	
guidelines	681
key factors	679
call handling	
optimal	247
call handling preferences	422
call not queued at stop step	592
call prompting	
call set	226
capabilities	25
command categories	226
considerations	245
digit entry	228
entering variable length digit strings	228

call prompting, (continued)		
functions	230	
creating service observing vectors	236	
passing digits to an adjunct	236	
using digits on the agent's set	235	
using digits to collect branching information	232	
using digits to select options	234	
hardware and software requirements	548	
purpose	25, 225	
removing incorrect digits	228	
variable length digit string	228	
with VRI	225	
call treatment		
customizing	29	
personalization	29	
Call Vector Form	383	
call vectoring		
benefits	27	
definition	21	
difference between G2 and R5	631	
features	24	
adjunct routing	26	
advanced vector routing	24	
ANI/ii-digits	24	
basic call vectoring	24	
call prompting	25	
look-ahead interflow	25	
removing incorrect digits	228, 240	
upgrading to	552	
call vectoring command		
neutral vector command	527	
call-back provisions		
diagram of	86	
Caller Information Forwarding		
buffer storage considerations	193	
interactions	194	
internal transfer to VDN	193	
string length	192	
UEC IE storage	191	
used with collect digits command	192	
vector example	193	
wildcards	192	
Caller Information Forwarding (CINFO)		
answer supervision	502	
with collect digits command	498, 501	
caller needs		
example table matching skills and needs	419	
calling		
a direct agent	48	
during non-business hours	42	
calling during non-business hours	42	
CALLR-INFO button		
format of display	235	
CALLR-INFO button format of display	235	
changing vectors	32, 553	
check-backup	62	
check-backup command	40, 494	
example	123	
neutral vector command	250, 496	
syntax	494	
troubleshooting	579, 580	
checking		
availability of split	41	
queue capacity	41	
CMS		
description of	635	
function	635	
interactions		
with adjunct routing	487	
with busy	493	
with check digits	502	
with goto vector	506	
reports		
for security use	672	
Split Summary Report	645	
VDN Report	645	
Vector Report	645	
standards	637	
for interpreting split flows	638	
for interpreting VDN flows	637	
using in expert agent selection environment	647	
collect digits	498	
collect digits command	62, 227	
entering an extension	25	
syntax	498	
troubleshooting	580, 581	
collecting and acting on information	61	
command category		
for call prompting	226	
command table		
for call prompting	226	
comparison operators	64	
connecting to voice mail	28	
consider command	503	
multi-site examples	308, 313	
single-site examples	283, 288	

consider split/location adjust-by x	283
considerations	
adjunct routing	208
basic call vectoring	111
call prompting	245
look-ahead interflow	267
VDN return destination	567
control flow	
type	
conditional branching	60
sequential flow	60
unconditional branching	60
controlling call processing	25
converse VRI calls	
call flow phase	
data passing	660
data return	666
script completion	669
script execution	665
converse-on command	62, 507
function	507
neutral vector command	250
success/failure criteria	574
syntax	503, 507
troubleshooting	582
converse-VRI calls	
call flow phase	
VRU data collection	664
counted-calls	
conditional test when routing calls	178
create a new Holiday table	336
creating	
a new vector	32
service observing vectors	230
creating a new vector	32
customizing call treatment	29, 48

D

defining desired service	51
deleting	
vector step	35
deleting vector step	35
delivery of queued calls	37
dequeued average queue time	
definition	645
dial-ahead digits	
ASAI provided	244

digits	228
ASAI provided dial-ahead digits	244
collect digits	
maximum number	498
collect digits command	
maximum number	483
collected prior to timeout	499
dial-ahead digits with *	500
entering	228
dial-ahead digits	228, 229
variable-length digit strings	228
including # sign	500
maximum number	500
removing	
incorrect digit strings	228
returned by VRU	498
Touch-Tone	499
with # sign	500
with # symbol	500
with *	500
with * symbol	500
direct agent	408
direct agent call	
definition	48
direct agent calling (DAC)	
Automatic Call Distribution (ACD)	421
call handling preferences	422
directing calls to a specific agent	408
disconnect	376
disconnect command	62, 516
success/failure criteria	575
syntax	503, 516
troubleshooting	582, 583
displaying digits on the agent's set	230
DNIS information displayed to answering agent	264
during peak	
heavy traffic	40

E

EAS	
definition	407
Emergency access redirection	388
enabling the vector disconnect timer	552
encouraging caller to remain on-line	38

entering		example vector, (continued)	
a command		multiple split queuing	123
in abbreviated form	34	passing digits to an adjunct	236
a vector	31	receiving switch inflow vector	254
dial-ahead digits	229	remote access service observing vector	237
digits	228	return destination vector	
use of #	229	with announcement	570
variable-length digit strings	228	with remote access	568
vector steps	32	service agency clients application	79
evaluating		service observing vector.	238
calls prior to processing.	26	stopping vector processing	132
effectiveness of vector programming	636	tandem switch vector	262
performance	636	testing	
split performance.	644	for digit	234
event type		for digits in vector routing table	233
adjunct route failed	594	for digits not in vector routing table	234
events	589, 592	treating digits as a destination	231
EWT		unconditional branching	130
factors that affect prediction accuracy	172	using digits to collect branching information.	232
factors that decrease estimate for split priority level	172	using digits to select options	234
factors that increase estimate for split priority level	172	vector for service observing	128
for individual calls	168	example vector routing table	
sending wait time without using VRU	169	for call prompting	233
testing for split	167	example vector step	
Troubleshooting	173	announcement	490
using to route to best split.	171	converse-on	507
zero and infinite values	167	executing VRU scripts	61
example application		Expected Wait Time	
remote access with host provided security	568	factors that affect prediction accuracy	172
saving in trunk facilities between call centers.	569	factors that decrease estimate for split priority level	172
split flow tracking.	639	factors that increase estimate for split priority level	172
VDN override	57	for individual calls	168
warranty service call center	82	passing to a VRU	168
example vector		sending wait time without using VRU	169
accommodate a super agent pool	435	testing for split	167
adjunct routing vector		troubleshooting	173
with redundancy	223	using to route to best split	171
automated attendant application.	68	zero and infinite values	167
call interflow	127	expert agent selection	
claims application	78	adjunct interactions	448
customer service application	79	conversion	
delay with multiple audio/music source feedback	115	administration for	699
dial-ahead digits	241	blocking of new incoming calls	705
distributed call centers application.	74	considerations prior to	699
DIVA and data/message collection application	70, 71	steps	699
emergency and routine service application.	102, 103	steps for cutover.	705
field agent vector application	77	definition	407
help desk application	75	feature interactions	443
late caller application	105	requirements	408
leaving recorded messages	124, 125	requires ACD	408
messaging options application	107		

expert agent selection, (continued)	
requires call vectoring	408
splits	408
tracking	
agents and their skills	647
direct agent calls	647
for VDN skill preferences	648
non-ACD calls	648
upgrading to	699
upgrading to R5	452
using CMS.	647

F

feature interactions	
with adjunct routing.	487
with announcement.	491
with busy	492
with check digits	502
with check-backup	496
with converse-on	510
with disconnect.	517
with goto step	506, 523
with messaging	526
with queue-to	530
with route-to	537
with stop.	542
with wait-time	546
features of call vectoring	24
adjunct routing command	26
advanced vector routing	24
ANI/ii-digits	24
basic call vectoring	24
call prompting	25
look-ahead interflow	25
functions	
of call prompting	230
functions of call prompting	230

G

goto command	
differences between G2 and R5	627
example	130
neutral vector command	250
success/failure criteria	575
troubleshooting.	583
goto step	376
goto step command	62, 333, 376, 518
neutral vector command	523

goto vector.	376
goto vector command	62, 376

H

handling multiple calls	49
holiday	
table	336
vectoring	333
vectors	339
Holiday table	
Create a new	336
Hunt Group night destination	387
Hunt Group Queue	386

I

identifying caller needs	
call prompting/VRU digits	420
direct agent calling	421
DNIS/ISDN called party	420
example prompts	421
host database lookup	421
methods of	419
table of services and DNIS digits.	420
II-digits	
assigned codes	186
call types that include	184
internal transfer to VDN	184
preserved with VDN Return Destination feature	184
string description	184
use in vector routing tables	184
wildcards	184
improving	
performance	709
the average speed of answer	28
Information Forwarding	
ASAI UUI IE shared format conversion	203
bytelengths for UUI user data.	204
general feature description	197
information forwarding	
backward compatibility, LAI	202
benefits	198
collected digits with interflowed call	200
data handled by.	197
determining byte lengths for UUI user data	203
global transport support	201
in-VDN time in interflowed call	201
network requirements	199
support for BSR and LAI.	200
troubleshooting	206

inserting vector steps	34
Interflow	126

L

LAI	
function	247
Last coverage point in a coverage path	388
latest VDN	57
LDN and trunk night destination	388
leaving a message.	24, 43, 125
listing existing vectors	32
load balancing.	25
local treatment	
BSR.	321
logical agent	408
look-ahead interflow	25
achieving FIFO.	255
ADR.	266
alternate destination redirection	266
considerations	267
diagram of tandem switch configuration	261
DNIS and VDN override	264
DNIS information.	264
enhanced	255
function	247
hardware and software requirements	550
interflow eligibility	257
multisite applications	267
route-to command	251
setting the minimum EWT.	258
tandem switch configuration	
far end switch operation	262
sending switch operation	261
tandem switch operation	261
troubleshooting.	269, 577
two switch configuration	
receiving switch operation	253

M

maximizing performance .709, 710, 711, 712, 714, 715	
example vector.	710, 712, 715, 716
Meet-me Conference	
Command Set	394
troubleshooting.	405
messaging	62, 525
ASAI	
contents of	211
example	124
leaving a message	43

messaging command	
example	125
neutral vector command.	251
success/failure criteria.	575
syntax	525
troubleshooting	583
multiple call handling	49

N

naming	
a vector	32
naming a vector	32
National Customer Care Center Support Line	20
NCR. See Network Call Redirection	
Network Call Redirection	
administration	364
B-channels, reserving for redirected-to leg	366
feature	
interactions	355
limitations	353
implementation	
ASAI adjunct routing.	363
call vectoring	357
CTI call transfer	363
station call transfer or conference.	362
Information Forwarding support	370
redirection options	
AT&T In-Band Transfer and Connect	347
ETSI-ECT.	345
MCI.	345
NCD	346
NCT-types	344
TBCT	345
troubleshooting	372
trunking considerations	354
neutral vector command	250
Night Service	387
non-business hours	
call during	42
non-business hours, call during	42
numbering	
of vector steps	35
numbering of vector steps	35

O

observing VDNs	59
off-loading calls	25
option	
VDN override	56

option for VDN override	56
originator's display	265

P

passing digits	
to an adjunct	230
to PBX.	51
passing digits to switch.	51
Path replacement	218, 263, 331
performance	
basic principles for improving	709
effects of ASAI link failure.	213
evaluating	636
effectiveness of vector programming	636
for split	644
improving	710, 711, 712, 714, 715
example vector	710, 712, 715, 716
looping	709
maximizing	709, 711, 712, 714, 715
.	710
processing cost	
comparisons	711, 712, 714
testing vectors	709
personalizing call treatment	29
Phantom call administration	221
placing a call in queue	24
preventing unauthorized users access	671
prioritizing calls	28, 37, 41, 47
process	
involving general number dialing	
diagram of	85
involving specific number dialing	
diagram of	84
processing calls	
faster	27
intelligently.	27
programming call processing	24
prompting a caller	57
properties	52
providing	
an announcement	24
call treatments	61
caller feedback.	27
choices to callers.	28
faster service	28
feedback	37, 38, 39
initial feedback to caller.	49

Q

QSIG CAS.	388
QSIG path replacement.	218, 263, 331
queue-to attnd-group	63, 376
queue-to attendant	376
queue-to command.	62, 528
queue-to hunt-group	376
queue-to main	
neutral vector command.	530
queue-to main command	
neutral vector command.	251, 530
success/failure criteria.	575
syntax	528
troubleshooting	580
queuing calls	
methods for.	46
to split	47
maximum number of.	47

R

receiving feedback about a call	37
Redirect calls to VDNs	386
redirecting calls	
methods for.	46
redirecting calls, methods for	46
reducing	
caller hold time	29
number of needed agents	50
staffing requirements	29
transferred calls.	28, 47
removing incorrect digits strings.	228
reply-best command	532
reporting	
agent handling	51
call handling	51
via Basic Call Management System	51
via BCMS	51
via Call Management System	51
via CMS	51
reports	
BCMS	
BCMS Split Report	646
VDN Real-Time Report	646
VDN Summary Report	646
CMS	
Split Summary Report	645
VDN Report	645
Vector Report	645
requeuing calls.	48

requirements	
software and hardware	
for adjunct routing	550
for advanced vector routing	549
for ANI/ii-digits routing	550
for basic call vectoring	548
for Best Service Routing	549
for call prompting	548
for look-ahead interflow	550
route validation	486
route validation failure	486
route-to	
look-ahead interflow	251
route-to command	534
differences between G2 and R5	628
neutral vector command	251, 538
summary of conditions for destination types	651
syntax	534
troubleshooting	584
route-to digits	63
route-to number	63, 376
route-to requests	
multiple outstanding	222
routing calls	24, 26, 28, 46, 47, 61
based on DNIS	50
example table of call distribution via UCD/EAD	439
example table of UCD/EAD call scenario	438
intelligently	247
to an agent	436
delivery from a skill hunt group	437
to skill queue	
using call prompting	433
using expert agent selection	436
using super agent pool	434
S	
security	
main type of problem	671
method	
front-ending remote access	671
advantages	671
replacing remote access	672
methods for preventing remote access abuse	671
preventing unauthorized users access	671
replacing remote access	672
with EAS	673
with expert agent selection	673
with remote access	671
with service observing	675
with vector initiated service observing	675
Service Level Maximizer	
administration	462
autoreserve agents	457
feature interactions	465
hardware and software requirements	461
maximum agent occupancy	459
reports	463
service observing	59, 127, 237
silence	61
when occurs	49, 50, 63
skill	
definition	424
example table for an auto club	424
table for auto club application	435
table of preferences assignments for VDN 1616	435
skill call	
example table of distribution for a single agent	438
skill call queue sequence	
example table	437
skills	
call handling preferences	422
SLM. See Service Level Maximizer	
split	
backup	
definition	47
main	
definition	47
split flows	
differences among G1/G2/G3	633
staffed agents	
check backup command	48
conditional branching	60
definition of	48
for non-ACD hunt groups	48
goto command	48
number of	62
status lamp	235, 236
CALLR-INFO button	236
NORMAL button	236
steps	
maximum number of	60
stop	376
stop command	63
example	132
neutral vector command	251, 542
success/failure criteria	576
syntax	542
troubleshooting	584

T

tandem switch	
far end operation	261, 262
far end switch operation	261
sending switch operation	261
Tenant night destination	388
testing call treatment.	28
testing vectors.	553
Toll Fraud.	20
tones	
call waiting.	423
tracking	
agents and their skills.	647
calls	636
direct agent calls	647
example	
split flow	639
for abandoned calls	641
for call answered	
after route to split	643
by a primary split	640
by non-primary split	640
after route to VDN	642
for non-ACD calls	648
VDN skill preferences.	648
transfer call management control	
caller-selected routing	46
messaging.	46
treating digits as a destination	230
troubleshooting	
1,000 step executed	592
AAS split cannot queue.	602
adjunct	
link error	595
route cancelled	595
route failed	594
administration change	592
agent	
drops converse	596
not logged in	595
not member of split	595
receiving phantom call	577
all look-ahead interflow attempts accepted	577
all trunks busy on a quiet system	578, 584
alternate audio/music source not heard	585
ANI digits not passed.	582
ANI not avail - digits	597
ANI not avail - table	597
troubleshooting, (continued)	
announcement not heard	579, 582
while waiting for digits	580
ASA - invalid VDN	596
ASA - no staffed agents	602
ASAI transfer converse	596
audible feedback	
lasts longer than the delay interval	577
longer than delay interval	585
shorter than delay interval	585
AUDIX link down	602
branch is not made	
to the specified step	583
to the specified vector	583
busy step for CO trunk	595
busy tone.	583
call apparently answered in wrong order	580
call cannot be queued.	593
call does not enter queue or terminate	
to agent	579, 580
call dropped	584, 592
call dropped by vector disconnect timer.	592
call stuck in converse	586
caller information button denied	581
Can't connect idle agent.	602
collect	
announcement	
not heard	588
not heard and first collected	
digit incorrect.	581
collect step and announcement skipped	581
converse	
drop during data.	596
no ANI digits	596
no prompt digits	596
no qpos digits	596
step skipped	586
transfer denied	596
coverage conference denied.	596
data return	
no digits	596
timeout	596
delay before AUDIX answers	583
delay before hearing announcement	581
dial-ahead digits not recognized	581
dial-ahead discarded	593
digits incomplete	587
double coverage attempt	594

troubleshooting, (continued)				troubleshooting, (continued)	
expected wait-time				retrying announcement	592
call no working agents.	602			ringback heard instead of busy tone	579
call not queued	597			route -to step failed	594
no split queue	602			route-to step failed	594
not sent to VRU.	597			routing table not assigned	597
split locked	602			second set of digits	
split no working agents	602			is the same as the first digits passed	587
split queue full	602			not collected	587
expected wait-time no history for split	602			skill indirection used improperly	596
extra delay.	583			split queue is full	602
before hearing announcement	579			step skipped	578, 583
first set of digits not collected	586			no message left	583
ii-digits not avail - digits	597			that is, default treatment	584
ii-digits not avail - table	597			steps	
incomplete announcement	579, 582			display event report	590
insufficient digits collected				display events form	589
call routed to intercept.	581			system clock change	597
invalid				time not set.	595
destination	595			unexpected	
direct agent.	595			busy tone	578
EAS hunt group used in the vector step	596			intercept or reorder tone heard	578
look-ahead				network reorder or intercept	578
DNIS name not displayed	577			silence after announcement	579
interflow retry	594			step skipped (that is, default treatment)	578
messages not found	583			unexpected intercept or reorder tone heard	584
messaging step failed	594			vector processing halted at collect step,	
music not heard	585			announcement heard again upon return	581
network reorder	584			vector processing stops	579
no announcement available	593			vector stuck	577, 581, 583
no available trunks	594			with busy	583
no data returned from VRU	582			with ringback	583
no digits				vector with no steps	592
collected	595			VRU script	
to route-to	594			not executed	582
no entries in routing table	597			terminated prematurely	582
no look-ahead interflow attempts accepted.	577			wait digits not passed	582
no Touch-Tone Receiver available	593			wait step	
no vector steps, ANI sent	596			music failed	595
not a messaging split	602			ringback failed.	595
not all digits returned to the DEFINITY switch	588			Trunk group incoming destination	388
not vector-controlled	602				
prompting buffer overflow.	593				
qpos digits not passed	582				
queue before route	595				
queued to three splits.	593				
redirect					
of call failed	596				
unanswered call	595				

U

upgrading	
a contact center to expert agent selection	699
to a call vectoring environment.	552
using digits	
to collect branching information	230
to select options	230

UUI	212

V

valid entries	
for converse-on	507
Variables in Vectors	
administration	148
considerations	147
example vectors	151
FAC, using to change variable values	150
failure conditions	147
feature overview	133
hardware and software requirements	139
implementing	135
interactions, with CMS	147
job aid	137
scope, local and global	139
troubleshooting.	161
variable access codes for FAC	136, 150
variable types	141
VDN override interactions.	146
VDN	52
active	57
definition.	23, 45, 51
in coverage path	
application uses	58
latest	57
multiple	23
observing	59
override	
example application.	57
properties	
extension.	52
name	53
vector number	53
return destination	
considerations	567
skills	
administering	426
VDN Calls	
how call counts are calculated	177
VDN Override	
described	56
VDN override	
for ISDN trunk ASAI messages	55

vector	
changing existing	32, 553
creating a new	32
definition	23, 51
disconnect timer	552
entering	31
events	589, 592
example	125
accommodate a super agent pool	435
adjunct routing vector with redundancy	223
automated attendant application	68
call interflow.	127
claims application	78
customer service application	79
delay with multiple audio/music source feedback	115
dial-ahead digits	241
distributed call centers application	74
DIVA and data/message collection application	70, 71
emergency and routine service application	102, 103
field agent vector application	77
help desk application	75
late caller application	105
leaving recorded message	124
leaving recorded messages	124
messaging options application	107
multiple split queueing	123
passing digits to an adjunct	236
receiving switch inflow vector.	254
remote access service observing vector.	237
return destination vector	
with announcement	570
with remote access	568
service agency clients application	79
service observing vector	238
stopping vector processing.	132
tandem switch vector	262
testing	
for digits in vector routing table	233
treating digits as a destination	231
unconditional branching	130
using digits	
to collect branching information	232
to select options.	234
vector for service observing	128
listing existing	32
naming	32
testing	553
variables. See Variables in Vectors	

vector chaining		
using the route-to number command	126	
vector command		
adjunct routing command	62, 483	
advanced vector routing	164, 376	
announcement command	490	
announcements	62	
available with		
call prompting	468	
call vectoring	468	
busy.	62, 492	
call denial		
qualification of commands	250	
call prompting	226	
command table	226	
check-backup	62, 494	
collect digits	62, 498	
comparison operators	64	
condition testing	63	
consider	503	
converse-on	507	
converse-on command	62	
disconnect	62	
disconnect command	516	
function of each	472	
goto step	62	
goto step command	518	
goto vector.	62	
maximum number	34	
messaging	62, 525	
neutral		
qualification of commands	250	
OCM predictive calls	446	
parameters	473	
queue-to.	62	
queue-to command.	528	
reply-best	532	
route-to	534	
route-to digits	63	
route-to number	63	
stop	63	
success/failure criteria	572	
syntax	473	
wait-time.	63, 543	
vector commands	279	
Vector commands for single-site BSR		
Single-site BSR	279	
vector commands that use ced and cdpd	192	
vector directory number		
definition.	45, 51	
properties	52	
Vector Directory Number form.	51	
implementation notes—list	51	
screen—add/change	52, 284, 288, 302, 309	
vector event		
advantages of tracking unexpected	589	
displaying	589	
unique number	591	
with debugging	586	
vector processing		
ASAI link failure.	484	
BCMS Report		
description	645	
BDMS Report		
description	646	
branching	60, 61, 62	
collecting from caller	63	
control flow	51	
types of	60	
failure		
converse-on step	512	
resulting in these destinations	537	
maximum number of steps	60	
programming		
collecting and acting on information.	61	
collecting from caller.	61	
providing treatments	61	
routing calls	61	
programming capabilities		
branching	60	
Split Summary Report		
description	645	
stopping	45, 59, 60, 61, 110, 394	
terminating	125	
termination	62	
termination vs stopping	60	
troubleshooting	577	
VDN Real-Time Report		
description	646	
VDN Report		
description	645	
VDN Summary Report		
description	646	
Vector Report		
description	645	
with coverage.	58, 231	
vector routing table	232, 233	
vector routing tables		
using ANI numbers in	183	

vector step	
conditional branching	60
deleting	35
entering	32
example	
announcement	490
converse-on	507
inserting	34
maximum number	45
numbering	35
sequential flow	60
stopping	60
terminating	60
termination vs stopping	60
unconditional branching	60
vector-controlled split	123, 124
voice response script	119
VRI	
advantage of	119
capabilities.	119
VRU	
activating a voice response script	507
advantages of	119
execution of VRU script.	119
normal override rules	515
offloading recorded announcements to	513
outputting data.	508, 509, 510, 513
passing data between VRU and DEFINITY switch	119
passing EWT to	120
returning data to the switch	508
service observing pending mode	514
storing received data	508
tandemed to ASAI host	119
used as an external announcement	119
using digits returned from	498
VRU digits	
conditional branching	508
displayed via CALLR-INFO button.	508
extension in a route-to command	508
tandemed to an ASAI host	508

W

wait-time.	63, 376, 543
factors that affect prediction accuracy	165
predictions	
circumstances that will limit	165
when to use predictions	165
wait-time command	
differences between G2 and R5	630
example	115
neutral vector command.	251, 546
success/failure criteria.	576
syntax	543
troubleshooting	585
wildcards	232
work mode	
after-call-work mode	48
auto-in work mode	48
auxiliary-work mode.	49
manual-in work mode	49

