



Avaya 3616/3626 Wireless IP Telephone

Installation and Configuration Guide

555-301-107
Issue 3
Part Number 72-9278-02
Revision C
May 2004

© 2004, Avaya Inc.
All Rights Reserved, Printed in U.S.A.

Notice

Every effort was made to ensure that the information in this book was complete and accurate at the time of printing. However, information is subject to change.

Avaya Web Page

The world wide web home page for Avaya is: <http://www.avaya.com>

Preventing Toll Fraud

Toll Fraud is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or working on your company's behalf). Be aware that there is a risk of toll fraud associated with your system and that, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya Fraud Intervention

If you *suspect that you are being victimized* by toll fraud and you need technical assistance or support, call the Technical Service Center's Toll Fraud Intervention Hotline at 1.800.643.2353.

Providing Telecommunications Security

Telecommunications security of voice, data, and/or video communications is the prevention of any type of intrusion to, that is, either unauthorized or malicious access to or use of, your company's telecommunications equipment by some party.

Your company's "telecommunications equipment" includes both this Avaya product and any other voice/data/video equipment that could be accessed via this Avaya product (that is, "networked equipment").

An "outside party" is anyone who is not a corporate employee, agent, subcontractor, or a person working on your company's behalf. Whereas, a "malicious party" is Anyone, including someone who may be otherwise authorized, who accesses your telecommunications equipment with either malicious or mischievous intent.

Such intrusions may be either to/through synchronous (time-multiplexed and/or circuit-based) or asynchronous (character-, message-, or packet-based) equipment or interfaces for reasons of:

- Utilization (of capabilities special to the accessed equipment)
- Theft (such as, of intellectual property, financial assets, or toll-facility access)
- Eavesdropping (privacy invasions to humans)
- Mischief (troubling, but apparently innocuous, tampering)
- Harm (such as harmful tampering, data loss or alteration, regardless of motive or intent)

Be aware that there could be a risk of unauthorized intrusions associated with your system and/or its networked equipment. Also realize that, if such an intrusion should occur, it could result in a variety of losses to your company, including but not limited to, human/data privacy, intellectual property, material assets, financial resources, labor costs, and/or legal costs).

Your Responsibility for Your Company's Telecommunications Security

The final responsibility for securing both this system and its networked equipment rests with you – an Avaya customer's system administrator, your telecommunications peers, and your managers. Base the fulfillment of your responsibility on acquired knowledge and resources from a variety of sources including but not limited to:

- Installation documents
- System administration documents
- Security documents
- Hardware-/software-based security tools
- Shared information between you and your peers
- Telecommunications security experts

To prevent intrusions to your telecommunications equipment, you and your peers should carefully program and configure your:

- Avaya provided telecommunications systems and their interfaces
- Avaya provided software applications, as well as their underlying hardware/ software platforms and interfaces
- Any other equipment networked to your Avaya products

Federal Communications Commission Statement

Part 15: Class A Statement. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, could cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Industry Canada (IC) Interference Information

This digital apparatus does not exceed the Class A limits for radio noise emissions set out in the radio interference regulations of Industry Canada.

Le Présent Appareil Numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le règlement sur le brouillage radioélectrique édicté par le Industrie Canada.

European Union Declaration of Conformity

The "CE" mark affixed to the equipment means that it conforms to the referenced European Union (EU) Directives listed below:

EMC Directive	89/336/EEC
Low-Voltage Directive	73/23/EEC

For more information on standards compliance, contact your local distributor.

Table of Contents

- 1. About This Document 5**
 - Contacting Avaya 5
 - Icons and Conventions 5

- 2. 3616/3626 Wireless IP Telephone Overview..... 6**
 - Quick Start Guide 6
 - System Diagram 8
 - System Components 9

- 3. The 3616/3626 Wireless IP Telephone 11**
 - Specifications 11
 - The Display 12

- 4. Avaya Call Server Configuration..... 14**
 - Configuring a Standalone Station 14
 - Configuring an Associated Station 14

- 5. 3616/26 Wireless IP Telephone Configuration 15**
 - Opening and Using the Admin Menu 15
 - User-defined Preferences 23

- 6. License Management 25**
 - Requirements 25
 - Configuration Process 25

- 7. Avaya Call Server Integration Factors..... 27**

8. Feature Programming	30
Assigning Functions	30
The Function Menu	31
9. Testing a Wireless Telephone	32
10. Certifying the 3616/26 Wireless IP Telephones	33
Site Certification	33
Site Survey Mode	33
Solving Coverage Issues	35
11. Software Maintenance	36
Upgrading Wireless Telephones	36
12. Troubleshooting Wireless Telephone Problems.....	38
Access Point Problems	38
Configuration Problems	38
Wireless Telephone Status Messages	39

1. About This Document

This document explains how to configure and maintain the 3616/3626 Wireless IP Telephone with an Avaya Call Server.

Contacting Avaya

To access software updates, the most current troubleshooting information, and other important information about the 3616/3626 Wireless IP Telephone, go to <http://avaya.com/support>. If you have questions about or problems with the 3616/3626 Wireless IP Telephone that you cannot resolve after reading this document, contact Avaya Technical Support at 1 800 242-2121 (USA only) or your local authorized Avaya dealer.

Icons and Conventions

This manual uses the following icons and conventions.



Caution! Follow these instructions carefully to avoid danger.



Note these instructions carefully.

NORM

This typeface indicates a key, label, or button on Avaya hardware.

2. 3616/3626 Wireless IP Telephone Overview

The 3616/3626 Wireless Telephone is a mobile handset for workplace IP telephone systems. The Wireless Telephone operates over an 802.11b wireless Ethernet LAN providing users a wireless voice over IP (VoIP) extension. By seamlessly integrating with an Avaya Call Server, Wireless Telephone users are provided with high-quality mobile voice communications throughout the workplace. The Wireless Telephone gives users the freedom to roam throughout the workplace while providing all the features and functionality of an IP desk phone.

The 3616/26 Wireless IP Telephone provides a wireless extension to the Avaya Call Server. The Wireless Telephones reside on the wireless LAN with other wireless devices using Direct Sequence Spread Spectrum (DSSS) radio technology. The handset radio transmits and receives packets at up to 11Mb/s.

A Wireless Telephone must be administered on the Avaya Call Server for the specific features and lines to be accessed by the Wireless Telephone. After the handset is registered, it receives its configuration information from the Avaya Call Server.

The 3616/26 Wireless IP Telephone supports Wired Equivalent Privacy (WEP) as defined by the 802.11 specification. Avaya offers the product with both 40-bit and 128-bit encryption. WEP increases the security of the wireless LAN to a level similar to a wired Ethernet LAN.



IP multicast addresses are used by the NetLink i640 Wireless Telephone Push to Talk (PTT) feature. This requires that multicasting be enabled on the subnet used for the NetLink Wireless Telephones, SVP Server, and Telephony Gateways.

Routers are typically configured with filters to prevent multicast traffic from flowing outside of specific domains. The wireless LAN can be placed on a separate VLAN or subnet to reduce the effects of broadcast and multicast traffic from devices in other network segments.

Quick Start Guide

1. A wireless LAN must be properly configured and operational through the use of 802.11b wireless access points (APs).
2. A TFTP Server must be available on the network in order to load the appropriate software into the Wireless Telephones. See Section 6 “License Management” for detailed instructions for loading software on Wireless Telephones.
3. The Avaya Call Server must be connected to your network and completely operational.
4. The Avaya Voice Priority Processor, which controls the QoS on the wireless LAN for the Wireless Telephones, must be on the same subnet as the Wireless Telephones and have the proper versions of software. Visit <http://avaya.com/support> to download the latest Avaya Voice Priority Processor software.
5. Add a station on the Avaya Call Server for each Wireless Telephone. You will administer each Wireless Telephone as an Avaya 4606 IP Telephone.


6. Configure your Wireless Telephone to ensure that it is associated with the Wireless LAN, has the appropriate software and is registered to the Avaya Call Server. See “License Management” for detailed instructions for loading software onto Wireless Telephones.



The Avaya Voice Priority Processor and all access points must be on the same subnet.

System Diagram

The following diagram shows the components residing on a network with the Avaya Call Server, access points (APs), and wireless LAN Ethernet Switched Hub:

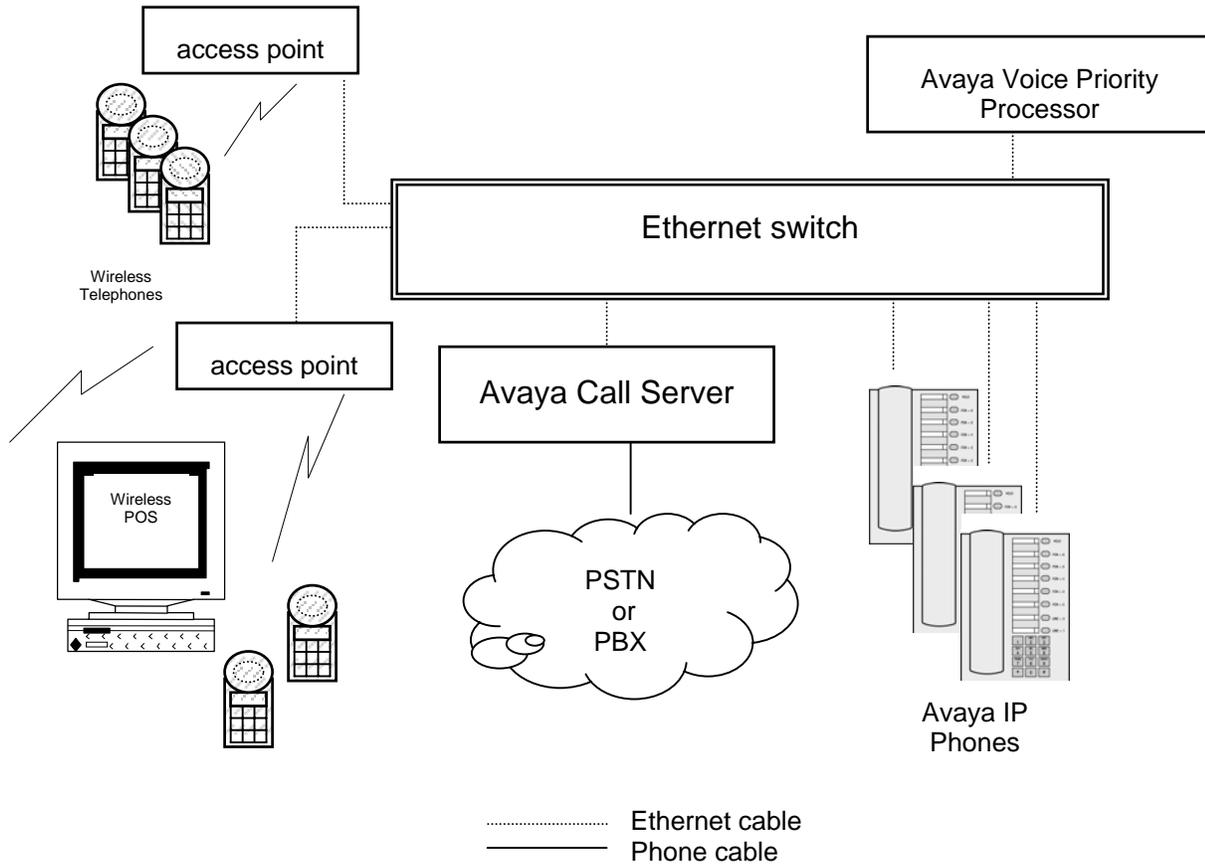

System Components

- **3616 Wireless IP Telephone** – The 3616 Wireless IP Telephone is a lightweight, durable handset specifically designed for mobile workplace use within a facility using the Avaya Call Server and 802.11 APs in a wireless LAN.
- **3626 Wireless IP Telephone** – The 3626 Wireless IP Telephone offers a durable design with push-to-talk functionality.

Wireless Telephone functionality is provided by emulating the Avaya 4606 telephone. The Wireless Telephone supports five predefined feature keys and a mixture of six programmable line and feature keys. Among other features, the Wireless Telephone can receive calls directly, receive transferred calls, transfer calls to other extensions, make conference calls, and make outside and long distance calls (subject to the restrictions applied in your facility.) The Wireless Telephones are to be used on-premises; they are not cellular or satellite phones.

3616/26 Wireless IP Telephones use direct sequence spread spectrum radio technology (DS) to transmit audio packets over wireless LAN APs that support the Avaya Wireless PC card.

Avaya Voice Priority Processor – SpectraLink Voice Priority (SVP) is the Quality of Service (QoS) mechanism that is implemented in the Wireless Telephone and AP to enhance voice quality over the wireless network. SVP gives preference to voice packets over data packets on the wireless medium, increasing the probability that all voice packets are transmitted efficiently and with minimum or no delay. SVP is fully compliant with the IEEE 802.11 and 802.11b standards.

The Avaya Voice Priority Processor is an Ethernet LAN appliance that works with the AP to provide QoS on the wireless LAN. All packets to and from the 3616/26 Wireless IP Telephones pass through the Avaya Voice Priority Processor and are encapsulated for prioritization as they are routed to and from the Avaya Call Server.

SVP is required for QoS because the current IEEE 802.11b wireless LAN standard provides no mechanism for differentiating audio packets from data packets. This standard is undergoing revision to version 802.11e to provide all the functionality of SVP in an industry standard thus ensuring high-quality voice in a mixed client environment. Once 802.11e is ratified, Avaya and its 802.11 technology partners will adopt the new specification.

Avaya Call Server – the call-processing component of the Avaya IP telephony solution.

Access Points – provide the connection between the wired Ethernet LAN and the wireless (802.11) LAN. Access points must be positioned in all areas where Wireless Telephones will be used. The number and placement of access points will affect the coverage area and capacity of the wireless system. Typically, the requirements for use of 3616/26 Wireless IP Telephones are similar to that of wireless data devices.

Ethernet Switch – interconnects multiple network devices, including the Avaya Voice Priority Processor, Avaya Call Server, Avaya IP Phones and the access points. Ethernet switches provide the highest performance networks, which can handle combined voice and data traffic, and are required when using the 3616/26 Wireless IP Telephones.

Although a single Ethernet switch network is recommended, the Wireless Telephones and the Avaya Voice Priority Processor can operate in larger, more complex networks, including networks with multiple Ethernet switches, routers, VLANs and/or multiple subnets. However, in such networks, it is possible for the Quality of Service (QoS) features of the Avaya Voice Priority Processor to be compromised and voice quality may suffer. Any network that consists of more than a single Ethernet switch should be thoroughly tested to ensure any quality issues are detected.

Note that the 3616/26 Wireless IP Telephones cannot “roam” from one subnet to another. If routers and multiple subnets are in use, the Wireless Telephones must only use access points attached to a single subnet, or be powered off and back on to switch to a different subnet.

Avaya IP Phone – The wired-LAN desk sets provided by Avaya for use with the Avaya Call Server.

TFTP Server – Required in the system to distribute software to the Wireless Telephones. May be on a different subnet than the Avaya Call Server, Avaya Voice Priority Processor, access points and/or Wireless IP Telephones.




The Avaya Voice Priority Processor and all access points must be on the same subnet.

3. The 3616/3626 Wireless IP Telephone

Specifications

Radio frequency	2.4000 – 2.4835 GHz
Transmission type	Direct Sequence Spread Spectrum (DSSS)
Transmit data rate	up to 11 Mb/s
Radio QoS	SpectraLink Voice Priority (SVP)
Wireless security	Wired Equivalent Privacy (WEP), 40bit and 128bit
FCC certification	Part 15.247
Management	DHCP, TFTP
Voice encoding	G.711, G.729a/ab
VoIP Protocols	CCMS
Transmit power	100 mW peak, < 10 mW average
Display	2 x 16 character alphanumeric, plus line and status indicators
3616 Dimensions	5.5" x 2.0" x 0.9"
3626 Dimensions	5.9" x 2.2" x 1.0"
3616 Weight	4.2 ounces
3626 Weight	6.0 ounces
Battery capacity	4 hours talk time, 80 hours standby

The Display

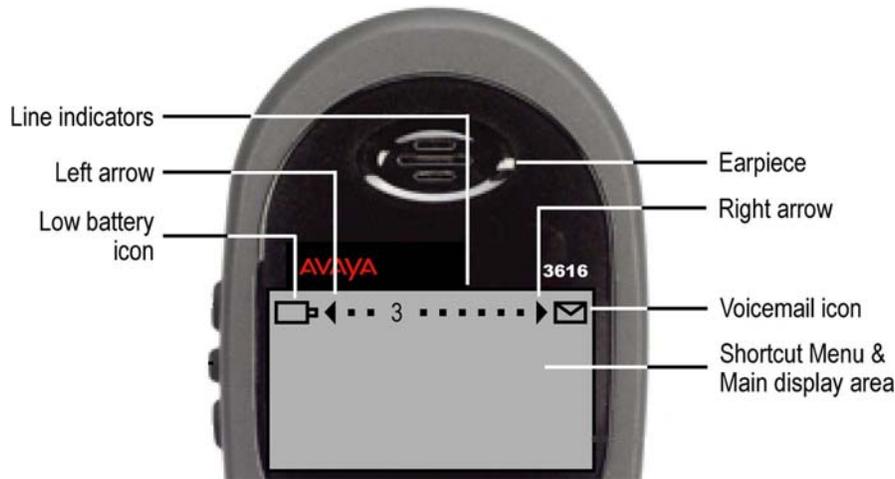

Alphanumeric

The 3616/26 Wireless IP Telephone display has two lines capable of displaying 16 alphanumeric characters each. Display information provided by the Avaya Call Server when the Wireless Telephone is off-hook will be passed directly to the Wireless Telephone display. The Wireless Telephone will emulate the 4606 display handling. Certain characters may be used by the Avaya Call Server that are not implemented in the Wireless Telephone such as definable and special characters.

In the CCMS environment, the softkeys and the MENU key are unavailable. Press the FCN key while off hook to scroll through system features. Press the shortcut key to activate the feature.

Voicemail Icon

The Voicemail icon is activated in a similar fashion as the message indicator of the display set

Ringling and Tones

The ringing types (normal or vibrator) are programmed by the Wireless Telephone user into the Wireless Telephone and are not accessible or changeable by the Avaya Call Server. Whenever possible the audible and vibrating ringer on the Wireless Telephone will follow the cadence provided by the Avaya Call Server.

Audio Features

The Avaya IP Phone Model 4606 speakerphone features will not be made available on the Wireless Telephone.

Line Indicators

The line indicators on the Wireless Telephone will convert to a solid or flashing number to mimic the LEDs next to Line keys on the Avaya 4606. Note, however, that the Wireless Telephone will indicate line numbers based on the order line assignments are received from the Avaya Call Server, regardless of which button the line is assigned to during system administration.

4. Avaya Call Server Configuration

You can configure the 3616/26 Wireless Telephone as a stand-alone station or associate it with a desk station. When the 3616/26 Wireless Telephone is associated with a desk station, the user can make and handle calls from either the 3616/26 Wireless Telephone or the desk station.

Configuring a Standalone Station

To configure a 3616/26 Wireless Telephone as a stand-alone station, you must add a station on the Avaya Call Server for the 3616/26 Wireless Telephone.

To administer a stand-alone station on the Avaya Call Server for a Wireless Telephone:

1. From the Avaya Call Server administration software, add a new station.
2. Set “Type” to “4606.”
3. Complete the remainder of the station form as you would for a desk station.
4. Repeat Steps 1 through 3 for each stand-alone Wireless Telephone.

Configuring an Associated Station

To configure a 3616/26 Wireless Telephone as an associated station, you must add a station on the Avaya Call Server for the 3616/26 Wireless Telephone and then associate that station with a desk station.

To administer an associated station on the Avaya Call Server for a Wireless Telephone:

1. From the Avaya Call Server administration software, add a new station.
2. Set “Type” to “4606.”
3. Set “Security Code” to the same security code used for the extension to which this Wireless Telephone will be associated (that is, the desk station). You can use a different security code, but to make it easier for the user it is recommended that you use the same security code as the desk station.
4. Set “Message Lamp Ext” to the extension of the associated desk station.
5. Set “Bridged Call Alerting” to “y.”
6. Set “Auto Select Any Idle Appearance” to “y.”
7. For Button Assignments, create bridged appearances to the line appearances on the desk station.
8. Add additional feature buttons to unassigned buttons, if desired.
9. Repeat Steps 1 through 8 for each Wireless Telephone.



When making changes to feature buttons, the phone must be power cycled.

5. 3616/26 Wireless IP Telephone Configuration

The Wireless Telephone can be automatically configured for IP address and/or ESSID by enabling DHCP and/or ESSID Learning, respectively.

If any of the Wireless Telephone's default settings need to be changed, the following procedure should be followed.

Opening and Using the Admin Menu

The Admin menu contains configuration options that are stored locally (on each Wireless Telephone). Every Wireless Telephone is independent and if the default settings are not desired, the admin options must be set in each Wireless Telephone requiring different settings.

1. With the Wireless Telephone powered OFF, simultaneously press and hold the **Power On / Start Call** and **Power Off / End Call** keys.
2. After hearing two beeps, release the **Power On / Start Call** key, then release the **Power Off / End Call** key. The first option on the Admin menu displays.



If an admin password has been set, the display will require its entry before opening the Admin menu. If no password is set, the display will proceed directly into the Admin menu.

3. Press the left or right arrow keys (**#** and *****) on the Wireless Telephone to scroll through the menu options.
4. Press **0** (zero) to change the selected option.
5. Press **FCN** to return to the previous menu level.
6. Press **Power Off / End Call** to exit the menus.

An asterisk (*) next to an option indicates that it is selected. The default settings are shown below with an * prior to the option.

The following table lists the Admin menu items. Detailed descriptions of each item appear below the table.

Admin Menu Items	2 nd Level	3 rd Level	4 th Level
IP Address	*Use DHCP		
	Static IP	Phone IP TFTP Server IP OAI Server IP Default Gateway Subnet Mask Call Server IP Call Server Port AVPP IP	
ESS ID	Static Entry		
	*Learn Once		
	Learn Always		
License Management	Set Current		
Restore Defaults			
Site Survey Mode			
Regulatory Domain			
Security	*None		
	WEP	Authentication	Open System Shared Key
		WEP On/Off	
		Key Information	Default Key Key Length Key 1-4
		Rotation Secret	
Cisco FSR	Username Password		
OAI on/off	Enable OAI		
	Disable OAI		
Admin PW			

IP Address

There are two modes in which the Wireless Telephone can operate: DHCP enabled or Static IP. Select the mode for operation from the IP Address menu:

*** Use DHCP:** will use Dynamic Host Configuration Protocol to assign an IP address each time the Wireless Telephone is turned on. If DHCP is enabled, the Wireless Telephone also receives all other IP address configurations from the DHCP server.

Static IP: allows you to manually set a fixed IP address. If selected, the Wireless Telephone will prompt for the IP address of each of the configurable network components. When entering addresses, enter the digits only, including leading zeroes. No periods are required. The left arrow key (*) can be used as a backspace key to re-do an error. The right arrow (#) key can be used to advance to the next 3 digit field (10.0.0.8 can be entered as 10,##,##,8,END).

Regardless of the mode in which the Wireless Telephone is operating, the following components must be configured:

Phone IP – the IP address of the Wireless Telephone. This is automatically assigned if DHCP is used. If using Static IP configuration, you must obtain a unique IP address for each phone from your network administrator.

AVPP IP – the IP address of the Avaya Voice Priority Processor. If using Static IP configuration, this is simply the IP address of the Avaya Voice Priority Processor. Note that the Avaya Voice Priority Processor must be statically configured to have a permanent IP address. If DHCP is being used, the Wireless Telephone will try the following, in order: the DHCP option 151, then a DNS lookup of “SLNKSVP2” if the DHCP options 6 (DNS Server) and 15 (Domain Name) are configured.

The following components may be configured optionally:

TFTP Server IP – the IP address of a TFTP server on your network that holds software images for updating the Wireless Telephones. If this feature is configured (not set to 0.0.0.0 or 255.255.255.255) with either Static IP configuration or using DHCP option 66 (TFTP Server), or the Boot server/next server (siaddr) field, the Wireless Telephone will check for newer software each time it is powered on or comes back into range of your network. This check takes only a second and ensures that all Wireless Telephones in your network are kept up-to-date with the same version of software.

OAI Server IP – the IP address of the NetLink OAI Gateway. If using static IP configuration, this is simply the IP address of the NetLink OAI Gateway. If DHCP is being used, the Wireless Telephone will try the DHCP option 152.

Default Gateway and Subnet Mask – used to identify subnets, when using a complex network which includes routers. Both of these must be configured (not set to 0.0.0.0 or 255.255.255.255) for the Wireless Telephone to contact any network components on a different subnet. They can be set using either Static IP configuration or via DHCP options 3 (Default Gateway) and 1 (Subnet Mask) respectively. Contact your network administrator for the proper settings for your network. Note that the Wireless Telephones cannot “roam” across subnets, since they cannot change their IP address while operational. Ensure that all your access points are attached to the same subnet for proper operation. The Wireless Telephone can change subnets if DHCP is enabled, and the Wireless Telephone is powered off then back on when within range of access points on the new subnet.

Call Server IP – the IP address of the Avaya Call Server. If using Static IP configuration, this is the IP address of the Call Server. If DHCP is being used, the Wireless Telephone will try the following, in order: DHCP Option 43 (Keyword MCIPADD), DHCP Option 176 (Keyword MCIPADD), and if DHCP Option 6 (DNS Server) and Option 15 (Domain Name) are configured, DNS lookup of server names found in the above options, and finally the DNS lookup of “AvayaCallServer.DOMAIN”.

Call Server Port – the IP port address of the Avaya Call Server. This port normally defaults to 1719, and is rarely changed. The port number entered must be coordinated with the administration of the Call Server, otherwise the wireless phone will not be able to register with the Call Server. If DHCP is being used, this can be changed via DHCP Option 43 (Keyword MCPOR) or DHCP Option 176

(Keyword MCPORT).

ESSID

Select the option that will enable the Wireless Telephone to acquire APs with the correct ESSID (Extended Service Set ID, aka SSID) each time it is turned on.

Note about Automatic Learn options: Broadcast ESSID must be enabled in the access points for ESSID learning to function. Refer to the *Configuration Note* for your access point or call your access point vendor for specifics. Overlapping wireless systems complicate the use of ESSID learning as the Wireless Telephone in an overlapping area could receive conflicting signals. If this is the situation at your site, use Static Entry or Learn Once in an area with overlapping ESSIDs.

* **Learn Once:** allows the Wireless Telephone to scan all ESSIDs for a DHCP server and/or TFTP server. Once either is found, the Wireless Telephone retains the ESSID from whichever access point it associates with at that point. When overlapping wireless systems exist, the Learn Once feature allows the Wireless Telephone to use only the ESSID established at first learn at all subsequent power ons. This ESSID is retained by the Wireless Telephone until the ESSID option is reselected.

Learn Always: allows the Wireless Telephone to automatically learn the ESSID at each power on or loss of contact with the wireless LAN (out of range). This may be useful if the Wireless Telephone will be used at more than one site.

Static Entry: If your access points do not accept broadcast ESSID or if there are overlapping wireless systems in use at the site, enter the correct ESSID manually:

1. On the keypad, press the first digit/letter of the ESSID. The digit displays. Press the key again to scroll through the letters associated with that key.

Example: if you press 2 repeatedly, you will see 2, A, B, and C, a, b, and c.

The following table shows keys that you use to enter non-numeric characters or other characters not represented on the keypad.

To Enter	Press
. - _ ! # \$ % & ' () , ; : / \ = @ ~	1
Space	0
Q q	7
Z z	9

When the correct entry displays, press Right Arrow to move on to the next character. Repeat for each digit/letter of the ESSID.

2. Press **END** to save the entry and return to the menu.
Press **FCN** to abort and return to the menu without saving any changes.

License Management

License Management lets you select the VoIP protocol that your site is licensed to download and run. The CCMS Protocol to use for the 3616/26 Wireless Telephones is **009**. Any other protocol will cause the Wireless Telephone to malfunction.

1. Press **0** to view the current selection. The protocol number appears on the display.
2. Press **0** to change the protocol.
3. Press the right arrow to scroll through the options.
4. Press **0** to select the displayed protocol number.

After selecting the correct protocol for your site, you should upgrade the software for the phones. See *Upgrading Wireless Telephones* section for more information.

Restore Defaults

The Restore Defaults option will set all user and administrative parameters to their factory defaults. During configuration, press Right Arrow to skip this mode.

Site Survey Mode

Site Survey Mode is used to check the signal strength from access points. When you select Site Survey Mode, the Wireless Telephone will remain in this mode until it is powered off. During configuration, press Right Arrow to skip this mode. See *Certifying the 3616/26 Wireless IP Telephone* (Section 7) for more information on this mode.

Regulatory Domain

The Regulatory Domain will default to North America on the Wireless Telephone display. FCC requirements dictate that the menu for changing the domain be available by password, which in our case is the **LINE** button. To change the domain, press **LINE** and then enter the digits that represent the site's domain. Note that both digits must be entered.

- 01** - North America
- 02** - Europe (except Spain and France)
- 03** - Japan
- 04** - Spain
- 05** - France

Note: as of this writing, Spain and France are adopting the general European Regulatory rules. Check with your wireless LAN administrator or supplier for which domain to enter in these countries.

Security

NONE disables any 802.11 encryption or security authentication mechanisms.

WEP (Wired Equivalent Privacy) is a wireless encryption protocol that scrambles wireless signals allowing for greater security in the wireless network. If WEP/Encryption is required at this site, you must configure each WT to correspond with the encryption protocol set up in the access points. Select the entries from the options below to enable the WT to acquire the system.



Set each of these options to match exactly the settings in your APs.



Encryption codes display as they are entered. For security reasons, codes will not display when a user returns to the Admin menu, Encryption options.



Note that WEP may be set to “optional” at the AP if there are wireless devices in use that do not have WEP capability. All wireless devices must be upgraded to WEP capability for a fully secured WEP environment.

Authentication

Select either **Open System** or **Shared Key**.

WEP

Select either **WEP Off** or **WEP On**.

Key Information

Press the right arrow key to scroll through the options:

Default Key: Enter the key # specified for use by the Wireless Telephones. This will be 1 through 4.

Key Length: Select either **40-bit** or **128-bit** depending on the key length specified for use at this location.

Key 1-4: Scroll to the key option that corresponds to the **Default Key** that was entered above. Press 0 and enter the encryption key as a sequence of hexadecimal characters. (Use the **2** and **3** keys to access hexadecimal digits A-F, use the right arrow key to advance to the next digit, and the left arrow key to backspace.) For 40-bit keys you will need to enter 10 digits, for 128-bit keys you will need to enter 26 digits. The display will scroll as needed.

Rotation Secret: This is used for proprietary WEP key rotation. Refer to your custom document if this feature is supported in your system.

Cisco FSR (Fast Secure Roaming) is a proprietary security mechanism devised by Cisco Systems to overcome some shortcomings in the 802.11 Standard WEP encryption, without impacting the ability of the WTs to roam from one AP to another with seamless voice. Cisco FSR requires advanced configuration of the Cisco access points in your site. See your Cisco representative for detailed

documentation on configuring your access points and other required security services on your wired network. To configure Cisco FSR in your WT, you must enter a Radius Server username and password into each phone.

Username: Enter a username that matches an entry on your Radius server. Usernames are alphanumeric strings, and can be entered using the same technique as described above for ESSID entry.

Password: Enter the password that corresponds to this Username.

OAI On/Off

The Open Application Interface (OAI) enables third-party computer applications to display alphanumeric messages on the WT display and take input from the WT keypad. Refer to the *Open Application Interface (OAI) Specification (Version 1.2)* documentation for information about administering the OAI Gateway and the services it can provide.

If you have an OAI Gateway installed in your system, OAI may be optionally enabled in each WT. You may select whether the WT should attempt to connect to the OEM OAI Gateway by choosing either the Enable or Disable options in this menu.

If OAI is enabled, and an OAI IP Address is available to the telephone (either via DHCP or Static IP configuration), the telephone will communicate with the OAI Server at power on, and periodically while it is powered on. If you don't have an OEM OAI Gateway installed at your site, you should disable the OAI feature to preserve network bandwidth and battery life.

Admin PW

The Admin PW (password) controls access to the administration functions in the Admin menu. The password must be set in each Wireless Telephone for which controlled access is desired. Wireless Telephones are shipped without any Admin menu password.

1. On the keypad, press **0** to change the password.
2. Enter the password. Press the first digit/letter of the password. The digit displays. Press the key again to scroll through the letters associated with that key.

Example: if you press 2 repeatedly, you will see 2, A, B, and C, a, b, and c.)

The following table shows keys that you use to enter non-numeric characters or other characters not represented on the keypad.

To Enter	Press
. - _ ! # \$ % & ' () , : ; / \ = @ ~	1
Space	0
Q,q	7
Z,z	9

When the correct entry displays, press Right Arrow to move on to the next character. Repeat for each digit/letter of the password.

3. Press **END** to save the entry and return to the menu.
Press **FCN** to abort and return to the menu without saving any changes.



If you press **END** with no entry, the password is erased and the display will not require it before displaying the Admin menu.

Ext.

Each 3616/26 Wireless Telephone must have an extension assigned to it, as well as having the same extension administered in the Avaya Call Server. This extension is used to register the Wireless Telephone with the Avaya Call Server.

1. Press **0** (zero) to enter a new extension.
2. Press **END** when done.
3. Press **FCN** to quit without changes.

Password

Each 3616/26 Wireless Telephone must have a password entered into it that matches the password administered in the Avaya Call Server. This password can be up to 7 digits. If the Call Server has no password, leave this option blank.

1. Press **0** (zero) to enter a new password.
2. Press **END** when done.
3. Press **FCN** to quit without changes.

User-defined Preferences

The following user-defined preferences are also covered in the 3616/26 Wireless IP Telephone user guide. The system administrator can refer to this list for more information about customizing Wireless Telephone settings.

To configure the following options, the Wireless Telephone must acquire the system (no error message may display) and be at the extension display. Press and hold **FCN** briefly to open the user options menu. Use the following keys to display and select options:

- ▶ (Right arrow) displays next menu item.
- ◀ (Left arrow) displays previous menu item.
- 0 (Zero) selects or changes item.
- FCN** returns to previous menu level.
- Power Off/End Call** exits menus

Standby menu item	2 nd Level	3 rd Level
Ring Type	Telephone ring	Normal Ring Vibrator Ring Vib/Norm
	Auxiliary ring 1	Normal Ring Vibrator Ring Vib/Norm
	Auxiliary Ring 2	Normal Ring Vibrator Ring Vib/Norm
High Noise	Normal High Severe	
Current IP Addr		
Call Server IP		
Call Server Port		
Push-to-Talk	Channel	
	Enable/Disable	Enable Disable

Select **Ring Type** then **Telephone Ring** to change the standard ring used for normal operation. From the **Telephone Ring** menu, select either **Normal Ring** (an audible alert), **Vibrator Ring**, or **Vib/Norm Ring** (vibrate for five seconds and then audible alert for subsequent rings).. The **Auxiliary Ring** modes are reserved for future use. Vibrator ring works only if this Wireless Telephone has the optional vibrating ringer. The ring type currently in use displays with an

asterisk (*).

Select **High Noise Mode** from the menu to select an option that describes the noise level in your environment. Selecting the correct option will adjust the Wireless Telephone to account for background noise. Select **Normal**: for most office environments; **High**: for moderate background noise; or **Severe**: for extremely noisy conditions. Use of the non-Normal Noise modes is not recommended unless you are in a loud environment, or you may find it difficult to be heard on your Wireless Telephone.

Current IP Address: displays the IP address currently assigned to the Wireless Telephone. The IP address is not set here, it is merely displayed.

Call Server IP displays the IP address of the Avaya Call Server with which the Wireless Telephone is registered.

Call Server Port: displays the UDP port number used when registering with the Avaya Call Server.

Push-to-talk: (3626 only) displays the menu for the two way radio feature in the 3626 Wireless Telephone. The **Channel** option allows you to select a channel 1-8 to send and receive radio messages. The **Enable/Disable** option allows you to enable or disable the radio feature.

6. License Management

The 3616/26 Wireless IP Telephone system supports a number of different IP protocol integrations. All 3616/26 series Wireless Telephones are shipped from Avaya with a generic software load that allows them to associate to a wireless LAN and download their functional software from a TFTP server. **The Wireless Telephones will not function properly without downloading appropriate software.**

The following details the process to properly configure 3616/26 Wireless IP Telephone and download software via over-the-air file transfer.

Requirements

- A wireless LAN must be properly configured and operational through the use of 802.11b wireless access points.
- The Avaya Call Server must also be connected to your network and completely operational.
- A TFTP Server must be available on the network in order to load the appropriate software into the Wireless Telephones.
- Finally, ensure that the Battery Pack on the Wireless Telephone is fully charged.

Configuration Process

1. Download the latest 3616/26 Wireless IP Telephone – IP software from <http://avaya.com/support>.
2. Load the latest version of the 3616/26 Wireless IP Telephone code and place it on the TFTP Server and ensure the TFTP Server is started. The three files that are needed must be named *slnk_cfg.cfg*, *pd11ccc.bin*, and *phintl24.bin*.
3. If statically assigning IP addresses, ensure that the **IP Address**, **TFTP Server IP**, **Subnet Mask**, and **Default Gateway** information are accurate in the Admin Menu. If using a DHCP Server, ensure that the DHCP option is set.. See “3616/26 Wireless IP Telephone Configuration” section for detailed configuration instructions.
4. Ensure the Wireless Telephone has properly configured **ESSID** and **Reg Domain** Information within the Admin Menu. If you are accepting broadcast **ESSIDs** at your access points, the handset will automatically learn the ESSID information when powering on. See “3616/26 Wireless IP Telephone Configuration” section for detailed configuration instructions.
5. Using the Admin Menu on the Wireless Telephone, ensure the **License Mngt** menu option is set to **009**. This ensures the handset will check for the proper software files each time it powers on. See “3616/26 Wireless IP Telephone Configuration” section for detailed configuration instructions.
6. Power cycle the Wireless Telephone.

7. The code will now download to the handset. The status bar will increment fully across the display for each function that is being performed in the download process. Upon completion of the update process, the handset will re-boot with the new firmware.
8. After code has been downloaded for the first time, the Wireless Telephone will ask for an extension and password. Once these have been entered, the phone will register with the Avaya Call Server.



For future software upgrades, simply update the files that are stored on the TFTP Server. Each time the Wireless Telephone is powered up, it will check with the TFTP Server to ensure it has the proper software version. If a new version of code is downloaded, the currently entered extension and password will be preserved.

7. Avaya Call Server Integration Factors

This section describes the mapping between the emulated Avaya IP Phone Model 4606 and the 3616/26 Wireless IP Telephone.

Voice Messaging Access

Voicemail is accessed on the Wireless Telephone as **FCN** + a character that corresponds to the administered button.

CODECs

The 3616/26 Wireless IP Telephone is compatible with the G.711 and G.729a/ab codecs. There is no setting required on the WT. If the wrong codec is used, there will be no voice path.

DHCP

Dynamic Host Configuration Protocol (DHCP) is a standardized protocol that enables clients to be dynamically assigned with various configuration parameters, such as an IP address, subnet mask, default gateway, and other critical network configuration information. DHCP servers centrally manage such configuration data, and are configured by network administrators with settings that are appropriate for a given network environment. The Wireless Telephone will use the following DHCP options if DHCP use is enabled:

Option	Meaning
1	Subnet Mask
3	Default Gateway
6	DNS Server
15	Domain Name
43	Avaya Specific Options
60	Vendor Class ID
66	TFTP Server
151	Avaya Voice Priority Processor
152	NetLink OAI Gateway
176	Avaya Specific Options
siaddr	Boot server or next server

TFTP

The Wireless Telephone uses TFTP to update its software over the 802.11 wireless LAN.

DNS

Domain Name System (DNS), an industry-standard protocol, locates computers on an IP-based network. IP networks rely on number-based addresses to move information on the network. However, users are better at remembering friendly names than number-based addresses, so, it is necessary to

translate user-friendly names into addresses that the network can recognize. The Wireless Telephone will use DNS to automatically translate names into IP addresses for these components: TFTP Server, Avaya Voice Priority Processor, and Avaya Call Server.

Entering An Extension And Password

Several conditions (new phone, Extension Error, Password Error, and Extension in use) can result in the Wireless Telephone asking the user for a new extension and password. The entry process is described below. When a new extension or password is being entered, the asterisk (*) key can be used to back up and correct an error.

The Wireless Telephone will display:

Ext. =XXX
#=OK New =

At this point, a new extension can be entered, or if the # key is pressed, the Wireless Telephone will retain the current extension.

After a new extension is entered, press # to continue.

The Wireless Telephone will then display:

Password = *****
= OK

A new password can be entered at this time, or if the # key is pressed, the Wireless Telephone will continue with its current password.

After a new password is entered, press # to continue.

Extension Error

If the Call Server (or all Call Servers if there are more than one) does not recognize the extension the phone is trying to register with, the Wireless Telephone will display:

Extension Error

This will last 5 seconds, and then the Wireless Telephone will ask the user to enter a new extension and password.

Password Error

If the Wireless Telephone has an incorrect password, the display will show:

Password Error
to continue

Press # to continue on to enter a new extension and password.

Extension Override

The Avaya Call Server will detect when a Wireless Telephone tries to register with the same extension as any telephone that is already registered to that extension. If this happens, the Wireless IP Phone will display:

Extension in use

to continue

Press **#** to continue.

If the user chooses to continue on with the override information, the Wireless Telephone will register with the override bit set. Any telephone currently registered with the given extension will be unregistered, and any activity on the currently registered telephone will be stopped. If that telephone is in a call, it will be dropped.

If the user does not want to override the existing extension, either enter a different extension and password, or simply power off the Wireless Telephone.



If two Wireless Telephones are assigned to the same extension, the Avaya Call Server will not properly resolve the registration conflict due to the presence of the Avaya Voice Priority Processor. Both Wireless Telephones may fail to operate properly.

Retry / Restart

Some errors will result in the following display, once **#** is pressed to continue:

*** to Retry**

to Restart

Press ***** to immediately retry registering with the Call Server. Press **#** to restart the Wireless Telephone, which will take about 20 seconds.

8. Feature Programming

The 3616/26 Wireless IP Telephone emulates the Avaya 4606. This set supports line appearances and has the following keys:

- Six programmable keys
- Dedicated Mute, Speakerphone, Hold, Transfer, Conference and Redial buttons
- Adjustable speaker volume control
- Adjustable ringer volume control

All telephone functions and messaging features are supported if possible. Functions that require the use of the volume keys are not supported, nor are Speakerphone functions.

Assigning Functions

The first five **FCN** keys are permanently assigned per the table below. Other **FCN** keys can be programmed via the Avaya Call Server. If the Wireless Telephone is associated with a desk station, the button features administered for the desk station are assigned to the remaining **FCN** keys. The keypad mapping for each 3616/26 Wireless IP Telephone is administered through the Avaya Call Server administration software (for example, Avaya MultiVantage Configuration Manager). Programmable keys are accessed by pressing the **LINE** or **FCN** key on the Wireless Telephone, followed by the appropriate digit key. The second column of the table is provided for you to note your actual mappings.

Wireless Telephone Key Sequence	Assigned Function
FCN + 1	Mute
FCN + 2	Last Num Dialed
FCN + 3	Hold
FCN + 4	Transfer
FCN + 5	Conference
FCN + 6	
FCN + 7	
FCN + 8	
FCN + 9	
FCN + 0	
FCN + *	
FCN + #	

Note that assigned lines can be accessed by the key sequence **LINE** + a digit, where the digit is the order in which the line has been received from the Avaya Call Server. This is true regardless of which button is associated with the line.

E.g. If line 1 is assigned to Programmable Key 1, **LINE + 1** will access line 1. If line 2 is then assigned to Programmable Key 4, **LINE + 2** will access line 2.



Changes to feature programming will take effect after the Wireless Telephone is powered off and back on again.



If an Open Application Interface (OAI) is operational, one or more function key sequences will be assigned in the OAI configuration and they will override any function sequence established here.

The Function Menu

The off-hook Function Menu displays the features on the Wireless Telephone that have been programmed into the Call Server for use by the Wireless Telephone.

Display the Function Menu on the 3616/26 Wireless Telephone by pressing **Power On / Start Call** and then press **FCN**. The display will show the first two features:

1= Mute

2= Last Num Dld

Press **FCN** repetitively to step through the Function Menu. Each display shows two features, the first three displays show the five assigned features as above.

The displays for the remaining function key sequences show the features that have been programmed in the Call Server with whatever abbreviations the program uses for those features. These features automatically appear on the Wireless Telephone display when the programming is done and the Wireless Telephone is powered off and back on, there is no separate programming action to set this up.

The Function Menu will show an asterisk in front of any active feature – that is, any feature that is currently activated. If a feature is not activated, there will be a blank space in front of the active feature abbreviation.

For example: If **FCN+6** is programmed to the Send All Calls feature (SAC), when the SAC feature is activated, the display will show **6= * SAC**. When the feature is not active, the Function Menu will display **6= SAC**.

The presence of the asterisk depends on the communication between the Call Server and the Wireless Telephone. If the Call Server does not send an active message to the Wireless Telephone, that particular feature will not display an asterisk when active.

For features that are activated by the Wireless Telephone, such as SAC, the corresponding function key may be pressed at any time in order to activate or deactivate the feature.

For example: Press **Power On / Start Call, FCN 5**, to start a conference call.

9. Testing a Wireless Telephone

Verify proper registration and operation of each Wireless Telephone by performing the following tests on each Wireless Telephone in an active wireless area.

1. Power on the Wireless Telephone by pressing **Power On / Start Call**. You will see a series of messages displayed as the Wireless Telephone acquires the system. The Wireless Telephone should display the user extension. Any error messages should clear.
2. Press the **Power On / Start Call** key. The extension number should be replaced by information from the Avaya Call Server and you should hear dial tone. Place a call and listen to the audio quality. End the call by pressing the **Power Off / End Call** key.
3. Place a call to the Wireless Telephone and verify ring, answer, clear transmit, and clear receive audio.
4. Press the **Power On / Start Call** key.
5. Use the **FCN** key to verify all programmed features on the Wireless Telephone, and press **Power Off / End Call** when finished.
6. Use the **LINE** key to verify the programmed line appearances, and press **Power Off / End Call** when finished.
7. Press the **Power Off / End Call** key. Any line indicators should turn off and the extension number display will return.

10. Certifying the 3616/26 Wireless IP Telephones

Conduct a preliminary Site Survey Mode test according to the directions given below. Note any areas where coverage is conflicting or inadequate. Note any system difficulties and work with your wireless LAN and/or LAN system administrator to determine the cause and possible remedy. See the section *Wireless Telephone Problems* for clues to possible sources of difficulties.

Site Certification

The installer should not leave the site before performing installation verification.

These tests must be performed in typical operating conditions, especially if heavy loads occur. Testing sequence and procedure is different for every installation. Generally, you should organize the test according to area and volume, placing numerous calls to others who can listen while you perform coverage tests. Note any areas with excessive static or clarity problems and report it to an Avaya engineer.

The coverage test will also require you to put the Wireless Telephone in **Site Survey** mode and walk the entire coverage area to verify all access points.

The installation is not complete until these certification steps have been performed. Do not hand out Wireless Telephones at a site that has not been certified.

Site Survey Mode

Test signal strength in the covered area by performing a Site Survey. Put a Wireless Telephone in Site Survey mode (see *Wireless Telephone Configuration* section) and walk the entire coverage area while viewing the display.

The **FCN** key toggles between the three coverage modes described below. The Wireless Telephone will remain in Site Survey mode until it is powered off. When testing is complete, press **Power Off / End Call** to power off the Wireless Telephone.

Numbers racing across the Wireless Telephone display indicate AP information is being obtained. A **Waiting** message indicates the system is not configured properly and the Wireless Telephone cannot find any APs.

Detect dBm coverage

As you walk the perimeter, the two-line display will show the top four access points that the Wireless Telephone can contact in a code as illustrated below.

XXX1	YY	XXX2	YY
XXX3	YY	XXX4	YY
-dBm			

- XXX1 through XXX4 are the last four digits of the access points' MAC address. The primary access point (the access point which had the strongest signal to this Wireless Telephone) displays first, followed by the three access points with the next strongest signals.
- YY is the power level in dBm at which this Wireless Telephone heard the associated access point. Although shown as a positive number, YY represents negative dBm and lower numbers represent stronger signals. For example, a displayed value of 40 indicates 40dBm, and is therefore a stronger signal than a display of 50 (which indicates -50dBm). At least one access point's reading should be stronger than -70 dBm in all areas.

Note any areas that have inadequate dBm readings.

Detect overlap or conflicts

Press **FCN** to toggle to the Site Survey function that shows the channel number of the access points. Use this information to detect overlaps or conflicts in access point signaling.

XXX1	ZZ	XXX2	ZZ
XXX3	ZZ	XXX4	ZZ
Chnl			

- XXX1 through XXX4 are the last four digits of the access points' MAC address.
- ZZ is the channel number that the access point is using.

Note any areas that have access points that are in contention for the same channel.

It is preferable that no overlaps exist anywhere in your facility. If that is not possible, then any location that shares two APs with the same channel should also show at least 2 APs with stronger signals, that do not conflict.

Confirm Supported Data Rates

Press **FCN** to toggle to the Detail function. Use this information to confirm signal strength and supported data rates.

#:	Full MAC	
dB	Ch	1b2b5b11b
Detl		

- #: the number (1-4) of the AP.
- Full MAC: the MAC address of the AP
- dB: the signal strength of the AP
- Ch: the channel of the AP
- 1b2b5b11b is an example of the data rates that may be displayed.

Walk around the site to determine supported data rates, one AP at a time. In any location you may use the right arrow key to display the second best AP, arrow again to the third best, and so on to the fourth best. The left arrow key steps you back to the first best.

Each data rate (1,2,5.5, or 11Mbit/sec) that is supported by the AP is shown. Those rates that are in the Basic Rate set (sometimes referred to as “required” rates) are indicated by a ‘b’ following the rate number. The Supported and Basic data rate(s) should be the same on all APs as is appropriate for your environment.

Solving Coverage Issues

Coverage issues are best resolved by adding and/or relocating APs.

Overlap issues may be resolved by reassigning channels to the APs or by relocating the APs.

11. Software Maintenance

The 3616/26 Wireless IP Telephones use proprietary software programs maintained by Avaya. The software versions that are running on the Wireless Telephones can be displayed during power on by holding down the **Power On / Start Call** button.

Avaya or its authorized dealer will provide information about software updates and how to obtain the software (for example, downloading from a web site).

Upgrading Wireless Telephones

After software updates are obtained from Avaya, they must be transferred to the appropriate location in the LAN to update the code used by the Wireless Telephones.

3616/26 Wireless IP Telephones allow over-the-air transfer of software updates from the designated TFTP server to the Wireless Telephones. The downloader function in the Wireless Telephone checks its software version every time the Wireless Telephone is turned on. If there is any discrepancy the Wireless Telephone immediately begins to download the update.

Normal Download Messages

When the Wireless Telephone is powered on, it displays a series of messages indicating that it is searching for new software, checking the versions, and downloading. The normal message progression is:

Message	Description
Checking Code	Wireless Telephone is contacting the TFTP Server to determine if it has a newer version of software that should be downloaded.
Erasing Memory	Wireless Telephone has determined that a download should occur and is erasing the current software from memory. This message also displays a progress bar. When the progress bar fills the display line the erase operation is complete.
Updating Code	Wireless Telephone is downloading new software into memory. The number icons at the bottom of the display indicate which file number is currently being downloaded. This message also displays a progress bar. When the progress bar fills the display line the update operation is complete on that file.

When the update is complete, the Wireless Telephone displays the extension number, and is ready for use.

Download Failure or Recovery Messages

The following display messages indicate a failure or recovery situation during the download process.

Message	Description
Server Busy	Wireless Telephone is attempting to download from a TFTP Server that is busy downloading other phones and refusing additional downloads. The Wireless Telephone will automatically retry the download every few seconds.
TFTP ERROR(x):yy	a failure has occurred during the TFTP download of one of the files. (x) = The file number which was being downloaded; yy is an error code describing the particular failure. Possible error codes are: 01 = TFTP server did not find the requested file. 02 = Access violation (reported from TFTP server). 07 = TFTP server reported "No such user" error. Check the TFTP server configuration. 81 = File put into memory did not CRC. The Wireless Telephone will attempt to download the file again. FF = Timeout error. TFTP server did not respond within a specified period of time.
Erase Failed	Download process failed to erase the memory in the Wireless Telephone. This operation will retry.
Waiting	Wireless Telephone has attempted some operation several times and failed, and is now waiting for a period of time before attempting that operation again.

12. Troubleshooting Wireless Telephone Problems

Wireless Telephones can exhibit transmission problems in several ways. They can cease functioning properly, display error messages, or display incorrect data. When using and troubleshooting Wireless Telephones, consider the following problem sources to determine the best method of approaching any specific situation.

Access Point Problems

Most, but not all, Wireless Telephone audio problems have to do with access point range, positioning and capacity. Performing a Site Survey as described in the *Setup and Maintenance* document can isolate the AP causing these types of problems. If the Wireless Telephone itself is suspected, conduct a parallel Site Survey with a Wireless Telephone that is known to be properly functioning.

In range/Out of range – service will be disrupted if a user moves outside the area covered by the wireless LAN access points. Service is restored if the user moves back within range. If a call drops because a user moves out of range, the Wireless Telephone will recover the call if the user moves back into range within a few seconds.

Capacity – in areas of heavy use, the call capacity of a particular AP may be filled. If this happens, the user will hear three chirps from the Wireless Telephone. The user can wait until another user terminates a call, or move within range of another AP and try the call again. If a user is on a call and moves into an area where capacity is full, the system attempts to find another AP. Due to range limitations, this may be the same as moving out of range.

Transmission Obstructions – prior to system installation, the best location for APs for optimum transmission coverage was determined. However, small pockets of obstruction may still be present, or obstructions may be introduced into the facility after system installation. This loss of service can be restored by moving out of the obstructed area, or by adding APs.

Configuration Problems

Certain problems are associated with improper configuration of either the Avaya Call Server or the Wireless Telephone. Configuration problems are generally corrected by changing the configuration at the Avaya Call Server or on the Wireless Telephone. See the sections “Avaya Call Server Configuration” and “3616/26 Wireless IP Telephone Configuration” for specific configuration steps. There may also be incorrect programming of the AP. See the *Configuration Note* for the AP in use at the site.

If the Avaya Call Server registration fails, note any error messages on the display including which line icons are active. This information will help with the problem resolution.

Wireless Telephone Status Messages

Wireless Telephone status messages provide information about the 3616/26 Wireless IP Telephone's communication with the AP and host telephone system. The following table summarizes the status messages, in alphabetical order.

Message	Description	Action
3 chirps	Wireless Telephone is not able to communicate with the best AP, probably because that AP has no bandwidth available.	None. This is only a warning, the call will handoff to the best AP once it becomes available.
ASSERTxxx.c Line yyy	The Wireless Telephone has detected a fault from which it cannot recover.	Record the error code so it can be reported. Turn the Wireless Telephone off then on again. If error persists, try registering a different Wireless Telephone to this telephone port. If error still persists, contact Avaya Technical Support and report the error.
Bad Config	Some needed configuration parameter has not been set	Check all required Wireless Telephone configuration parameters for valid settings
Bad ESSID	The Wireless Telephone is configured for "static ESSID" (as opposed to "Learn once" or "Learn always" and no ESS ID has been entered.	Enter an ESSID in the configuration settings or change to one of the "Learn" modes.
(battery icon), Low Battery, and beep	Low battery	In call: the battery icon displays and a soft beep will be heard when the user is on the Wireless Telephone and the battery charge is low. User has 15–30 minutes of battery life left. Not in call: The battery icon displays whenever the Battery Pack charge is low The message Low Battery and Beep indicate a critically low battery charge when user is not on the Wireless Telephone. The Wireless Telephone will not work until the Battery Pack is charged.
Charging ...	The Wireless Telephone is charging in the Desktop Charger	No action needed
Charge Complete	The Wireless Telephone is now fully charged	No action needed

Message	Description	Action
Checking Code	Wireless Telephone is contacting the TFTP Server to determine if it has a newer version of software that should be downloaded.	None, this message should only last for approximately one second. If message remains displayed, power off and contact customer support for a replacement phone.
Checking DHCP IP	The Wireless Telephone is retrieving DHCP information from the DHCP server	None. This is informational only.
CRC Code Error	The software which has been TFTP downloaded has a bad redundancy code check	Try the download again, it is possible the software was corrupted during download. If the error repeats, check that the download image on the TFTP server is not corrupted.
Code Mismatch!	The software loaded into the Wireless Telephone is incorrect for this model phone	Replace the software image on the TFTP server with software that is correct for the phone model.
DHCP Error (1-4)	DHCP Error 1	The Wireless Telephone cannot locate a DHCP server. It will try every 4 seconds until a server is located.
	DHCP Error 2	The Wireless Telephone has not received a response from the server for a request to an IP address. It will retry until a server is found.
	DHCP Error 3	The server refuses to lease the Wireless Telephone an IP address. It will keep trying.
	DHCP Error 4	The server offered the Wireless Telephone a lease that is too short. The minimum lease time is 10 minutes but SpectraLink engineers recommend at least one hour minimum lease time. The Wireless Telephone will stop trying. Reconfigure the server and power cycle the Wireless Telephone.
DHCP Lease Exp	The Wireless Telephone's DHCP lease has expired, and the call (if any) cannot continue.	The Wireless Telephone failed to renew its DHCP lease, either because the DHCP server is not running, or because the configuration has been changed by the administrator. The Wireless Telephone will attempt to negotiate a new lease, which will either work, or change to one of the above DHCP errors (1-4).

Message	Description	Action
DHCP NACK error	A NACK (Negative ACKnowledge) was received from the DHCP server	The DHCP lease currently in use by the Wireless Telephone is no longer valid, which forces the Wireless Telephone to restart. This problem should resolve itself on the restart. If it does not, the problem is in the DHCP server.
DO NOT POWER OFF	The Wireless Telephone is in a critical section of the software update	None. Do not remove the battery or attempt to power off the phone while this is displayed. Doing so may require the phone to be returned to Avaya to be recovered.
Duplicate IP	The Wireless Telephone has detected another device with its same IP address	If using DHCP, check that the DHCP server is properly configured to avoid duplicate addresses. If using Static IP, check that the Wireless Telephone was assigned a unique address
Erase Failed	Download process failed to erase the memory in the Wireless Telephone.	Operation will retry but may eventually report the error "int. error: 0F" Power cycle the phone.
Erasing Memory	Wireless Telephone has determined that a download should occur and is erasing the current software from memory.	None. When the progress bar fills the display line the erase operation is complete.
Extension Error	Displayed for 5 seconds when all of the Call Servers contacted indicate that they do not recognize the current extension as valid.	The user will be asked to enter a valid extension and password
Extension in use	The phone is trying to register with an extension that is already registered on the Call Server.	See Avaya Call Server Integration Factors section.
Incompatible	The switch is rejecting the software version presented by the phone.	If this condition persists, contact the Avaya system administrator.
Initializing ...	The Wireless Telephone is performing power on initialization	None. This is informational only.
Internal Err. # #	The Wireless Telephone has detected a fault from which it cannot recover.	Record the error code so it can be reported. Turn the Wireless Telephone off then on again. If error persists, try registering a different Wireless Telephone to this telephone port. If error still persists, contact Avaya Technical Support and report the error.

Message	Description	Action
Multiple GW Res	More than one SVP Server has responded	Caused by two or more Wireless Telephones sharing the same IP address. Assign unique IP addresses to each Wireless Telephone.
Network Busy	All APs are full or busy	Try call again later.

No Call Server IP or No Call Server (when apparently valid IP, but no response to the GRQ/RRQ process) The No Call Server message may include an error indication	Wireless Telephone not administered on the Avaya Call Server	Wireless Telephone not properly configured. Verify that extension and password in the Wireless Telephone match those administered in the Avaya Call Server.
	The Avaya Call Server is not working	Verify that the Avaya Call Server is operational. If so, follow standard troubleshooting procedures for the Avaya Call Server.
	No LAN connection at the AP or the Avaya Call Server	Verify the Avaya Call Server connection to LAN and all APs.
	Wireless Telephone can't locate the Avaya Call Server	IP address configuration of the Avaya Call Server is wrong or missing.
No Host IP	The Wireless Telephone is configured for "static IP" (as opposed to "use DHCP") and no valid host IP address (the Wireless Telephone's IP address) has been entered.	Enter a valid IP address in the configuration settings or change to "use DHCP".
No IP Address	Invalid IP	Check the IP address of the Wireless Telephone and re-configure if required.
No Net Access	<ul style="list-style-type: none"> Cannot authenticate / associate with AP Incorrect WEP settings 	<p>Verify the AP configuration.</p> <p>Verify that all the WEP settings in the Wireless Telephone match those in the APs.</p>
No Net Found	<p>This indicates any of the following:</p> <ul style="list-style-type: none"> No radio link No ESSID – Autolearn not supported (or) Incorrect ESSID 	<p>Verify that the AP is turned on.</p> <p>Verify the ESSID of the wireless LAN and enter or Autolearn it again if required.</p>

	<ul style="list-style-type: none"> • Out of range 	Try getting closer to an AP. Check to see if other Wireless Telephones are working within the same range of an AP. If so, check the ESSID of this Wireless Telephone.
No Reg Domain	Regulatory Domain not set	Configure the Regulatory Domain of the Wireless Telephone
No SVP IP	The Wireless Telephone is configured for "static IP" (as opposed to "use DHCP") and no valid Avaya Voice Priority Processor address has been entered.	Enter a valid Avaya Voice Priority Processor IP address in the configuration setting or change to "use DHCP."
No SVP Response	The Avaya Voice Priority Processor is not responding to requests from the Wireless Telephone.	This may be caused by bad radio reception or a problem with the Avaya Voice Priority Processor. The Wireless Telephone will keep trying to fix the problem for 20 seconds, and the message may clear by itself. If it does not, the Wireless Telephone will restart. Report this problem to the system administrator if it keeps happening.
No SVP Server	Wireless Telephone can't locate Avaya Voice Priority Processor	IP address configuration of Avaya Voice Priority Processor is wrong or missing.
	Avaya Voice Priority Processor is not working	Check error status screen on Avaya Voice Priority Processor.
	No LAN connection at the Avaya Voice Priority Processor	Verify Avaya Voice Priority Processor connection to LAN.
Not Installed!	A required software component is missing	Check that all required software files are on the TFTP server, if over-the-air downloading is being used. If the error repeats, contact Avaya Technical Support.
Password Error	The phone is not encrypting the challenge string correctly. This indicates that the password set in the phone disagrees with the password administered in the Call Server.	Enter the correct password in the phone. See Avaya Call Server Integration Factors section.
Press End Call	Your call has ended	Press the Power Off / End Call key to return to standby mode.
Restarting...	The Wireless Telephone is in the process of rebooting. There will be a 20 second delay in an attempt to let potential network/system errors clear.	None

Retry / Restart	The Wireless Telephone is waiting for user input prior to retrying the registration process, or restarting after a delay.	See Avaya Call Server Integration Factors section.
Select License	The correct protocol has not been selected from the license set.	Using the administrative menus, select one license from the set to allow the phone to download the appropriate software.
Server Busy	Wireless Telephone is attempting to download from a TFTP Server that is busy downloading other devices and refusing additional downloads.	None, the Wireless Telephone will automatically retry the download every few seconds.
SVP Service Rej.	The Avaya Voice Priority Processor has rejected a request from the Wireless Telephone	The Wireless Telephone will restart and attempt to re-register with the Avaya Voice Priority Processor, which should fix the problem. Report to your administrator if it keeps happening.
System Busy	Avaya Voice Priority Processor is busy or out of resources	All call paths are in use, try call again in a few minutes.
System Error	An internal failure has occurred in the Avaya Call Server.	If this condition persists, contact the Avaya system administrator.
System Locked (with Busy Tone)	Avaya Voice Priority Processor is locked	Try call again later, system has been locked for maintenance
TFTP ERROR(x):yy	A failure has occurred during a TFTP software download. (x) = The file number which was being downloaded; yy is an error code describing the particular failure. Possible error codes are: 01 = TFTP server did not find the requested file. 02 = Access violation (reported from TFTP server). 07 = TFTP server reported "No such user" error. 81 = File put into memory did not CRC. FF = Timeout error. TFTP server did not respond within a specified period of time.	Error code 01, 02 or 07 - check the TFTP server configuration. Error code 81, the Wireless Telephone will attempt to download the file again. For other messages, power off the Wireless Telephone, then turn it on again to retry the download. If the error repeats, note it and contact Avaya Technical Support.
Trying xxx.xxx.xxx.xxx	The phone is attempting to register with the Avaya Call Server at IP xxx.xxx.xxx.xxx	None. This display is a progress indicator, and may not appear long enough to recognize during a normal check-in.
Undefined Error	The system is rejecting the registration of the Wireless Telephone with an unrecognized error code.	If this condition persists, contact the Avaya system administrator.

Updating Code...	Wireless Telephone is downloading new software into memory. The number icons at the bottom of the display indicate which file number is currently being downloaded.	None. When the progress bar fills the display line the update operation is complete on that file.
Updating ...	The Wireless Telephone is internally updating its software images	None. The Wireless Telephone may do this briefly after a download. This is informational only.
Waiting...	Wireless Telephone has attempted some operation several times and failed	None. The Wireless Telephone is waiting for a specified period of time before attempting that operation again.
Wrong Code Type	Internal consistency check failure.	Assure that the license type is set to 9, and that the <i>slnk_cfg.cfg</i> file indicates the proper code is <i>pd11ccc.bin</i> .
Wrong Set Type	The set type administered on the Call Server disagrees with the set type for the Wireless Telephone.	Make sure that set type 4606 is used for the Wireless Telephone.
(No message shown)	There is no voice path.	Verify that the CODEC is G.711.
(No message shown)	Messages are left at the principal station, but the MSG icon is not lit on the Wireless Telephone.	Verify that "Message Lamp Ext" on the station form for the Wireless Telephone is set to the extension of the principal station.

Index

- Access point
 - Coverage, 35
 - Coverage test, 33
 - Overlap, 35
- Access point, description, 9
- Automatic Learn, 18
- Avaya Call Server, configuration, 14
- Capacity, 38
- Channel number, 34
- Checking code, 36
- Coverage test, 33
- Data rates, 34
- Download messages
 - Failure or Recover, 37
 - Normal, 36
- Erasing memory, 36
- High noise option, 24
- OAI On/Off, 21
- Obstructions, 38
- Out of range, 38
- Preferences, user-defined, 23
- Push-to-talk, 24
- Regulatory Domain, 19
- Restore Defaults, 19
- Ring type, 24
- Signal strength, 33
- Site Certification, 33
- Site Survey, 19, 33
- Status messages, 39
- Status messages, 42
- Support, 5
- Switched Hub, description, 10
- Transmission obstructions, 38
- Updating code, 36
- User Preferences, 23
 - Configuration problems, 38, 24
 - Problems with, 38
 - Status messages, 39, 42