

28A AND 28B REPERFORATOR-TRANSMITTER
ADAPTER UNIT
WIRING DIAGRAM

1. GENERAL

- 1.01 This section shows the wiring of the 28A and 28B reperforator-transmitter adapter unit.
- 1.02 This wiring diagram has been reissued to remove wire from FG3 to FW3 in the relay ground circuit, to change the reference of mercury relay in Note 5 to read "303F", and to add Note 6.

